

# INFINITI Function list V10.70

**Notes:**

√	Functions is fully supported and already existed in former software version.
*	Functions is fully supported and newly added in current software version.
#	Functions is partially supported , which means the functions is verified on some vehicle models or systems and it might supports other vehicle models or systems.
	Functions left with blank is not supported.

SYSTEM NAME	ECU Infor	Read Codes	Erase Codes	Live Data	Actuators	Special Function
ENGINE	√	√	√	√	1-266	197-303
ABS	√	√	√	√	227-292	1-21
METER/M&A	#	√	√	√	293-315	
BCM	#	√	√	√	316-428	48-175
AIR BAG	√	√	√	#		328-335
ICC/ADAS	√	√	√	√	429-447	366-369
HVAC	√	√	√	√	448-449	307-326
TRANSMISSION	√	√	√	√	450-489	22-47
MULTI AV	#	√	√	√	490-495	192-196
EHS/PKB	√	√	√	√		
MOTOR CONTROL	√	√	√	√		
EPS/DAST 3	√	√	√	√		187, 188
IPDM E/R		√	√	√	496-530	
AIR PRESSURE MONITOR	√	√	√	√	531-533	
BAC	√	√	√	√		
SUB METER		√	√			
CONVERTIBLE ROOF	√	√	√	√	534-546	
HEAD LAMP LEVELIZER	√	√	√	√	547	327
E-4WD	√	√	√	√	548-552	
LASER/RADAR	√	√	√	√		
INTELLIGENT KEY	√	√	√	√	553-571	349-363

DIU		✓	✓	✓		
AUTO SLIDE DOOR	✓	✓	✓	✓	572	
PRECRASH SEATBELT	✓	✓	✓	✓		365
AUTO DRIVE POSITION	✓	✓	✓	✓	573-583	
ALL MODE AWD/4WD	✓	✓	✓	✓	584-487	341-346
DIFFERENCE LOCK	✓	✓	✓	✓		
4WAS (MAIN)/RAS/HICAS	✓	✓	✓	✓		
SONAR	✓	✓	✓	✓	588-595	179-185
LANE CAMERA	✓	✓	✓	✓	596-601	
ADAPTIVE LIGHT	✓	✓	✓	✓	602-606	
AUTO SLIDE DOOR RIGHT	✓	✓	✓	✓	607	
CAN GATEWAY	✓	✓	✓	✓		
SHIFT	✓	✓	✓	✓		
EV/HEV	✓	✓	✓	✓	608-631	
POP UP HOOD	✓	✓	✓	✓		
AUTO BACK DOOR	✓	✓	✓	✓		370
4WAS (FRONT)	✓	✓	✓	✓		
E-SUS	✓	✓	✓	✓	632-637	189-191
ACCELE PEDAL ACT	✓	✓	✓	✓	638-639	
HV BATTERY	✓	✓	✓	✓	640-641	
TOTAL ILLUM C/U	✓			✓	642-651	371-378
OCCUPANT DETECTION				✓		
SmFOB	✓	✓	✓			
BRAKE	✓	✓	✓	✓	652	
SIDE RADAR LEFT	✓	✓	✓	✓		379
ANC	✓	✓	✓	✓	653	
MULTI DISPLAY		✓	✓	✓	654	
SIDE RADAR RIGHT	✓	✓	✓	✓		364
ADCM	✓	✓	✓	✓		
PTC HEATER	✓	✓	✓	✓	655-656	

CHARGER/PD MODULE	✓	✓	✓	✓	657-661	
TELEMATICS	✓	✓	✓	✓		176-178
HAS	✓	✓	✓	✓		
EMCM	✓	✓	✓	✓		
SVT	✓	✓	✓	✓		
BSW/BUZZER	✓	✓	✓	✓	662-667	
AVM	✓	✓	✓	✓	668-674	336-340
CHASSIS CONTROL	✓	✓	✓	✓	675-696	
DAST 1	✓	✓	✓	✓		
DAST 2	✓	✓	✓	✓		
HIGH BEAM ASSIST	✓	✓	✓	✓		
CIU	✓	✓	✓	✓	697-698	304
MM CONN	✓	✓	✓	✓		
ICC/ADAS 2	✓	✓	✓	✓		
Lane camera 2	✓	✓	✓	✓		
CLUSTER	✓	✓	✓	✓	699-703	
NATS IMMU		✓	✓	✓		
SMART ENTRANCE		✓	✓	✓		
AIR LEVELIZER	✓	✓	✓	✓	704-706	
REARVIEW CAMERA	✓			✓		305, 306
S/BLIND CAMERA	✓			✓		
ACTIVE ENGINE MOUNT	✓	✓	✓	✓		
ACTIVE SUSPENSE SYSTEM	✓	✓	✓	✓		
ASCD		✓	✓	✓		
HANDS FREE MODULE	✓	✓	✓	✓		
DISTANCE CONTROL	✓	✓	✓	✓		
MOTOR ASSIST		✓	✓	✓		186
IVMS	✓	✓	✓	✓		
TCS	✓	✓	✓	✓		
CHA	✓	✓	✓	✓	707-712	

AVSP	✓	✓	✓	✓		
FSCM	✓	✓	✓	✓		
PMAS	✓	✓	✓	✓		
RADIO	✓	✓	✓	✓	713-718	347, 348
Left front door control unit	✓	✓	✓	✓		
Right front door control unit	✓	✓	✓	✓		
Siren control unit	✓	✓	✓	✓		
Alarm siren	✓			✓		
Passenger seat control unit	✓	✓	✓	✓		
Intelligent Battery Sensor	✓					
Upper control panel cont unit	✓					
EC Mirror Compass	✓					
Universal Garage Door Opener	✓					
Light/Rain Sensor Module	✓	✓				
Overhead Control panel unit	✓					
Electronic Ignition Switch cont unit	✓	✓	✓	✓		
Trailer recognition control unit	✓	✓	✓	✓		
Occupant Classification unit	✓	✓				
ICC sensor	✓	✓	✓	✓		
Parking assist	✓	✓	✓	✓		
Steering column cont module	✓	✓	✓			
Steering Wheel Switch Pad	✓			✓		
Forward Collision Warning	✓	✓	✓	✓		
LED H/L control module RH	✓			✓		
LED H/L control module LH	✓			✓		
Side radar RH	✓	✓	✓	✓		
Side radar LH	✓	✓	✓	✓		
Front camera unit	✓	✓	✓	✓		
Powertrain cont module	✓	✓	✓	✓		
H/L control module RH	✓	✓	✓	✓		

H/L control module LH	✓	✓	✓	✓		
-----------------------	---	---	---	---	--	--

*XTOOL*