

Engine control module	Engine system(DafECS-DC3)			√	√	√				
Engine control module	Engine system(DafECS-DC4)			√	√	√				
Engine control module	Engine system(DafECS-DC5)		√	√	√	√			0002-0005	
Engine control module	Engine system(DafECS-DC6)									
Engine control module	Engine system(BOSCH UPEC Euro3)		√	√	√	√			0006-0010	
Engine control module	Engine system(BOSCHUPEC-EMS2)		√	√	√	√			0006-0010	
Brake module	Anti-lock braking system(ABS)	WABCOABS C	√	√	√	√				
Brake module	Anti-lock braking system(ABS)	WABCOABS D	√	√	√	√				
Brake module	Anti-lock braking system(ABS)	WABCOABS E	√	√	√	√				
Brake module	Anti-lock braking system(ABS)	WABCOABS E2	√	√	√	√				
Brake module	Anti-lock braking system(ABS)	WABCOABS E4								
Brake module	Electronic brake system(EBS)	WABCOEBS	√	√	√	√			0011-0012	
Brake module	Electronic brake system(EBS)	WABCOEBS 2 (KWP)	√	√	√	√				
Brake module	Electronic brake system(EBS)	WABCOEBS 2 (CAN)	√	√	√	√				
Brake module	Electronic brake system(EBS)	WABCOEBS 3								
Distance control module	Adjustable speed control(ACC)		√	√	√					
Distance control module	Distance control(AEBS)									
Airbag module	AIRBAG(AIRBAG)		√	√	√	√			0013	
Airbag module	AIRBAG(AIRBAG2)		√	√	√					

Power supply and grounding module	Power supply and grounding(CPS)									
Chassis equipment and design	Body Builder Module(BBM)		√	√	√	√		0001	0016-0017	
Engine-vehicle adjustment module	VIC		√	√	√	√			0033-0047	
Engine-vehicle adjustment module	VIC 2		√	√	√	√			0097-0109	
Engine-vehicle adjustment module	VIC 2 LITE		√	√	√					
Engine-vehicle adjustment module	VIC 3		√	√	√	√				
Engine-vehicle adjustment module	VIC 3 LITE							0002		
Audio/video combination module	Audio/video combination(DAS)									
Instrument panel	DIP4		√						0048-0057	
Instrument panel	DIP5		√							
Tachograph	DTCO Tachograph		√	√	√	√				
Tachograph	MTCO Tachograph		√	√	√	√				
Phone module	Mobile communication unit (DTS)		√	√	√	√				
Phone module	Mobile communication unit (TELEPHONE)		√	√	√	√				
Phone module	Mobile communication unit(TELEPHONE2)									
AdBlue processing module	BOSCHEAS		√	√	√					

Smart air supply control module	Smart Air Supply Control (SAC)		√		√	√					
---------------------------------------	-----------------------------------	--	---	--	---	---	--	--	--	--	--

XTOOL

Actuation Test

No.	Functions Name
AT0001	Turbocharger boost test
AT0002	Air supply valve test
AT0003	Dosing module
AT0004	Fuel system leakage test
AT0005	Cylinder cut out test
AT0006	DAF engine brake
AT0007	Diagn. Light
AT0008	Engine brake valve
AT0009	Glow plug relay
AT0010	Turbo pressure control valve
AT0011	EBS red output
AT0012	EBS yellow output
AT0013	Alarm signal
AT0014	Auxiliary heater fan
AT0015	Relay reverse lights
AT0016	PTO warning
AT0017	PTO 1 Valve
AT0018	Engine running
AT0019	Direction indicators lamps front left
AT0020	Direction indicators lamps front right
AT0021	Direction indicators lamps rear left
AT0022	Direction indicators lamps rear right
AT0023	Direction indicators trailer connector left
AT0024	Direction indicators trailer connector right
AT0025	Hazard warning lamps front left
AT0026	Hazard warning lamps front right
AT0027	Hazard warning lamps rear left
AT0028	Hazard warning lamps rear right
AT0029	Windscreen wiper motor
AT0030	Windscreen washer pump
AT0031	Shift group protection
AT0032	Shift gate protection ECU Reset
AT0033	Engine running

AT0034	Direction indicators lamps front left
AT0035	Direction indicators lamps front right
AT0036	Direction indicators lamps rear left
AT0037	Direction indicators lamps rear right
AT0038	Direction indicators trailer connector left
AT0039	Direction indicators trailer connector right
AT0040	Hazard warning lamps front left
AT0041	Hazard warning lamps front right
AT0042	Hazard warning lamps rear left
AT0043	Hazard warning lamps rear right
AT0044	Windscreen wiper motor
AT0045	Windscreen washer pump
AT0046	Shift group protection
AT0047	Shift gate protection ECU Reset
AT0048	Gauges
AT0049	Gauges illumination
AT0050	Indication lamps
AT0051	LCD color red illumination
AT0052	LCD color yellow illumination
AT0053	LCD color red pattern
AT0054	LCD color yellow pattern
AT0055	Small LCD left
AT0056	Small LCD right
AT0057	Buzzer
AT0058	Front axle valve
AT0059	Rear axle valve
AT0060	Auxiliary stop light
AT0061	Stop light, Trailer
AT0062	Driver's door lamp
AT0063	Fog light, rear
AT0064	Fog lights, Trailer
AT0065	Interior light
AT0066	Left brake lamp
AT0067	Left daytime running lamp
AT0068	Left light lamp
AT0069	Left fog lamp

AT0070	Left main beam
AT0071	Left sign lamp
AT0072	Light switch power supply
AT0073	Passenger door lamp
AT0074	Left rear lamp
AT0075	Rear left turn indicator
AT0076	Right rear lamp
AT0077	Rear right turn indicator
AT0078	Reverse lamp
AT0079	Right brake lamp
AT0080	Right daytime running lamp
AT0081	Right low light
AT0082	Right fog lamp
AT0083	Right main beam
AT0084	Right sign lamp
AT0085	Day / auxiliary light
AT0086	Trailer left turn indicator
AT0087	Trailer right turn indicator
AT0088	Front left turn indicator
AT0089	Accumulator relief valve
AT0090	Accumulator valve
AT0091	Exhaust air valve
AT0092	Oil pressure relief valve
AT0093	Steering control proportional valve
AT0094	Warning lamp
AT0095	Pump test
AT0096	Static shift rail position test
AT0097	Foglight rear lamp
AT0098	inter light lamps
AT0099	Indicators left front
AT0100	Indicators right front
AT0101	Indicators left rear
AT0102	Indicators right rear
AT0103	indicators trailer left
AT0104	indicators trailer right
AT0105	Engine running

AT0106	Gearbox group valve
AT0107	Gearbox gate valve
AT0108	Windscreen wiper motor
AT0109	Windscreen washer pump ECU Reset
AT0110	Level lamp
AT0111	Solenoid valve
AT0112	Proportional valve
AT0113	Supply valve

XTOOL

AdBlue test

No.	Functions Name
PT0001	AdBlue filter leakage test
PT0002	Air circuit test(Dosing module test)
PT0003	Adblue circuit test with injection of AdBlue

XTOOL

Special Functions

No.	Functions Name
SP0001	Programming Number Function name SP0001 Maintenance lamp reset
SP0002	Zero maintenance Number Function name SP0002 Maintenance lamp reset
SP0003	Rear axle control Number Function name SP0003 Zero maintenance light

Calibration

No.	Functions Name
CP0001	Turbocharger boost test Calibration
CP0002	Accelerates from idle until the preset speed in ESC
CP0003	Accelerator pedal
CP0004	Accelerator pedal calibration
CP0005	Brake and drive line closed use to disable ESC
CP0006	Brake use to disable ESC
CP0007	Brake use to enable ESC
CP0008	Engine brake use to disable ESC
CP0009	Engine brake use to enable ESC
CP0010	ESC continuous acceleration ramp (acceleration request)
CP0011	ESC continuous acceleration ramp (deceleration request)
CP0012	ESC maximum speed
CP0013	ESC minimum speed
CP0014	ESC n1 cabin
CP0015	ESC n2 cabin
CP0016	ESC torque reduction
CP0017	ESC VMax
CP0018	Fuel correction factor
CP0019	Transmission neutral off ESC