



Shenzhen Xtooltech Co., Ltd

Scania Function List V7.44

Tips and Instructions:

- * This feature is new.
- ✓ This feature is supported.
- ✗ This feature is not supported.
- ※ This feature is partially supported.

Model	System Name	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Actuation Test	Special Functions
16 needle square	APS (compressed air supply)	✓	✓	✓	✓		
16 needle square	BMS (brake management system)	✓	✓	✓	✓	0001-0006	
16 needle square	CCS (Intelligent climate control system)	✓	✓	✓	✓		
16 needle square	COO (Coordinator)	✓	✓	✓	✓		
16 needle square	COO (Coordinator)	✓	✓	✓	✓		
16 needle square	EMS (engine management system)	✓	✓	✓	✓		
16 needle square	EMS (engine management system)	✓	✓	✓	✓		
16 needle square	EMS (engine management system)	✓	✓	✓	✓		
16 needle square	ICL (instrument cluster)	✓	✓	✓		0007-0014	
16 needle square	SMS (suspension control system)	✓	✓	✓	✓		
16 needle square	VIS (lighting system)	✓	✓	✓	✓		
16 needle square	BCS (bus chassis system)	✓	✓	✓			
16 needle square	TCO (mileage recorder)	✓	✓	✓			
16 needle square	GMS (transmission control system)	✓	✓	✓	✓		
16 needle square	GMS (transmission control system)	✓	✓	✓	✓	0008-0023	
16 needle square	Las (locking and alarm system)	✓	✓	✓	✓		
16 needle Garden	Truck	✓	✓	✓	✓		
16 needle Garden	braking	✓	✓	✓	✓		
16 needle Garden	Coordinator	✓	✓	✓	✓		

16 needle Garden	Bus	√	√	√			
16 needle Garden	braking	√	√	√			
16 needle Garden	Bus 4	√	√	√			
BUS&Coach/O series	ABS	√	√	√	√	0009-0029	
BUS&Coach/O series	Articulation management	√	√	√			
BUS&Coach/O series	Chassis equipment and design	√	√	√			
BUS&Coach/O series	Compressed air reserve system	√	√	√	√		
BUS&Coach/O series	Compressed air reserve system	√	√	√	√		
BUS&Coach/O series	Diesel fuel injection	√	√	√	√		
BUS&Coach/O series	Diesel fuel injection	√	√	√	√		
BUS&Coach/O series	Diesel fuel injection	√	√	√	√		
BUS&Coach/O series	Distance control	√	√	√			
BUS&Coach/O series	Distance control	√	√	√			
BUS&Coach/O series	EBS	√	√	√	√		
BUS&Coach/O series	Engine vehicle adjustment	√	√	√	√		
BUS&Coach/O series	instrument panel	√	√	√	√		
BUS&Coach/O series	instrument panel	√	√	√	√		
BUS&Coach/O series	Network system	√	√	√	√		
BUS&Coach/O series	suspension	√	√	√	√		
BUS&Coach/O series	ECU external light	√	√	√	√		
BUS&Coach/T series	ECU external light	√	√	√	√		
BUS&Coach/T series	Articulation management	√	√	√			
BUS&Coach/T series	Chassis equipment and design	√	√	√			
BUS&Coach/T series	Compressed air reserve system	√	√	√	√		
BUS&Coach/T series	Compressed air reserve system	√	√	√	√		
BUS&Coach/T series	Diesel fuel injection	√	√	√	√		
BUS&Coach/T series	Diesel fuel injection	√	√	√	√		
BUS&Coach/T series	Diesel fuel injection	√	√	√	√		
BUS&Coach/T series	Distance control	√	√	√			
BUS&Coach/T series	Distance control	√	√	√			
BUS&Coach/T series	EBS	√	√	√	√		
BUS&Coach/T series	Engine vehicle adjustment	√	√	√	√		
BUS&Coach/T series	instrument panel	√	√	√	√		
BUS&Coach/T series	instrument panel	√	√	√	√		
BUS&Coach/T series	Network system	√	√	√	√		
BUS&Coach/T series	suspension	√	√	√	√		

BUS&Coach/T series	ECU external light	√	√	√	√		
BUS&Coach/K series	ABS	√	√	√	√		
BUS&Coach/K series	Articulation management	√	√	√			
BUS&Coach/K series	Chassis equipment and design	√	√	√			
BUS&Coach/K series	Compressed air reserve system	√	√	√	√		
BUS&Coach/K series	Compressed air reserve system	√	√	√	√		
BUS&Coach/K series	Diesel fuel injection	√	√	√	√		
BUS&Coach/K series	Diesel fuel injection	√	√	√	√		
BUS&Coach/K series	APS (compressed air supply)	√	√	√	√		
BUS&Coach/K series	Distance control	√	√	√			
BUS&Coach/K series	Distance control	√	√	√			
BUS&Coach/K series	EBS	√	√	√	√		
BUS&Coach/K series	Engine vehicle adjustment	√	√	√	√		
BUS&Coach/K series	instrument panel	√	√	√	√		
BUS&Coach/K series	instrument panel	√	√	√	√		
BUS&Coach/K series	Network system	√	√	√	√		
BUS&Coach/K series	suspension	√	√	√	√		
BUS&Coach/K series	ECU external light	√	√	√	√		
BUS&Coach/F series	ABS	√	√	√	√		
BUS&Coach/F series	Articulation management	√	√	√			
BUS&Coach/F series	Chassis equipment and design	√	√	√			
BUS&Coach/F series	Compressed air reserve system	√	√	√	√		
BUS&Coach/F series	Compressed air reserve system	√	√	√	√		
BUS&Coach/F series	Diesel fuel injection	√	√	√	√		
BUS&Coach/F series	Diesel fuel injection	√	√	√	√		
BUS&Coach/F series	Diesel fuel injection	√	√	√	√		
BUS&Coach/F series	Distance control	√	√	√			
BUS&Coach/F series	Distance control	√	√	√			
BUS&Coach/F series	EBS	√	√	√	√		
BUS&Coach/F series	Engine vehicle adjustment	√	√	√	√		
BUS&Coach/F series	ABS	√	√	√	√		
BUS&Coach/F series	Articulation management	√	√	√	√		
BUS&Coach/F series	Chassis equipment and design	√	√	√	√		
BUS&Coach/F series	Compressed air reserve system	√	√	√	√		
BUS&Coach/F series	Compressed air reserve system	√	√	√	√		
TRUCK/G-series	Diesel fuel injection	√	√	√	√		

TRUCK/G-series	Diesel fuel injection	√	√	√	√		
TRUCK/G-series	Diesel fuel injection	√	√	√			
TRUCK/G-series	Distance control	√	√	√			
TRUCK/G-series	Distance control	√	√	√			
TRUCK/G-series	EBS	√	√	√			
TRUCK/G-series	Engine vehicle adjustment	√	√	√	√		
TRUCK/G-series	instrument panel	√	√	√	√		
TRUCK/G-series	instrument panel	√	√	√			
TRUCK/G-series	Network system	√	√	√	√	0030	
TRUCK/G-series	suspension	√	√	√	√		
TRUCK/G-series	ECU external light	√	√	√	√		
TRUCK/G-series	ECU external light	√	√	√	√	0031-0035	
TRUCK/G-series	Diesel fuel injection	√	√	√	√	0036-0038	
TRUCK/G-series	Distance control	√	√	√	√	0039	
TRUCK/G-series	Distance control	√	√	√	√	0040	
TRUCK/G-series	EBS	√	√	√	√	0041	
TRUCK/G-series	EBS	√	√	√	√		
TRUCK/G-series	EBS	√	√	√	√		
TRUCK/G-series	ECU external light	√	√	√	√	0042-0061	
TRUCK/G-series	Engine vehicle adjustment	√	√	√	√		
TRUCK/G-series	Engine vehicle adjustment	√	√	√	√		
TRUCK/G-series	APS (compressed air supply)	√	√	√			
TRUCK/G-series	instrument panel	√	√	√	√		
TRUCK/G-series	instrument panel	√	√	√	√		
TRUCK/G-series	radio	√	√	√			
TRUCK/G-series	retarder	√	√	√	√		
TRUCK/G-series	suspension	√	√	√	√		
TRUCK/G-series	tachograph	√	√	√			
TRUCK/G-series	tachograph	√	√	√			
TRUCK/G-series	Tire pressure	√	√	√			
TRUCK/G-series	Transmission case	√	√	√			
TRUCK/G-series	Transmission case	√	√	√	√		
TRUCK/G-series	Transmission case	√	√	√	√		
TRUCK/G-series	Transportation information system	√	√	√			
Truck / G-Series Euro 6	Safety air bag	√	√	√	√		
Truck / G-Series Euro 6	Call the police	√	√	√	√		

Truck / G-Series Euro 6	Auxiliary heating	√	√	√			
Truck / G-Series Euro 6	Auxiliary heating	√	√	√			
Truck / G-Series Euro 6	Chassis equipment and design	√	√	√			
Truck / G-Series Euro 6	Comfort system	√	√	√			
Truck / G-Series Euro 6	ABS	√	√	√	√		
Truck / G-Series Euro 6	Articulation management	√	√	√	√		
Truck / G-Series Euro 6	Chassis equipment and design	√	√	√			
Truck / G-Series Euro 6	Compressed air reserve system	√	√	√	√		
Truck / G-Series Euro 6	Compressed air reserve system	√	√	√	√		
Truck / G-Series Euro 6	Diesel fuel injection	√	√	√	√		
Truck / G-Series Euro 6	Diesel fuel injection	√	√	√	√		
Truck / G-Series Euro 6	Diesel fuel injection	√	√	√	√		
Truck / G-Series Euro 6	Distance control	√	√	√	√		
Truck / G-Series Euro 6	Distance control	√	√	√	√		
Truck / G-Series Euro 6	EBS	√	√	√	√		
Truck / G-Series Euro 6	Engine vehicle adjustment	√	√	√	√		
Truck / G-Series Euro 6	instrument panel	√	√	√	√		
Truck / G-Series Euro 6	instrument panel	√	√	√	√		
Truck / G-Series Euro 6	Network system	√	√	√	√	0062-0071	
Truck / G-Series Euro 6	suspension	√	√	√	√		
Truck / G-Series Euro 6	ECU external light	√	√	√	√		
Truck / G-Series Euro 6	ECU external light	√	√	√	√		
Truck / G-Series Euro 6	suspension	√	√	√	√		
Truck / G-Series Euro 6	tachograph	√	√	√			
Truck / G-Series Euro 6	tachograph	√	√	√			
Truck / G-Series Euro 6	Tire pressure	√	√	√			
Truck / G-Series Euro 6	Gearbox n	√	√	√			
Truck / G-Series Euro 6	Gearbox n	√	√	√	√		
Truck / G-Series Euro 6	Transmission case	√	√	√	√		
Truck / G-Series Euro 6	Transportation information system	√	√	√			
Truck / p-series	ABS	√	√	√	√		
Truck / p-series	Lane keeping assistance	√	√	√	√		
Truck / p-series	Air conditioner	√	√	√			
Truck / p-series	Safety air bag	√	√	√			
Truck / p-series	Call the police	√	√	√			
Truck / p-series	Auxiliary heating	√	√	√			

Truck / p-series	Auxiliary heating	√	√	√	√		
Truck / p-series	Chassis equipment and design	√	√	√	√		
Truck / p-series	Comfort system	√	√	√			
Truck / p-series	Compressed air reserve system	√	√	√	√		
Truck / p-series	Compressed air reserve system	√	√	√	√		
Truck / p-series	Diesel fuel injection	√	√	√			
Truck / p-series	Diesel fuel injection	√	√	√	√		
Truck / p-series	APS (compressed air supply)	√	√	√	√		
Truck / p-series	Distance control	√	√	√	√		
Truck / p-series	Distance control	√	√	√	√		
Truck / p-series	EBS	√	√	√	√		
Truck / p-series	EBS	√	√	√	√		
Truck / p-series	EBS	√	√	√	√		
Truck / p-series	ECU external light	√	√	√	√		
Truck / p-series	Engine vehicle adjustment	√	√	√	√		
Truck / p-series	Engine vehicle adjustment	√	√	√	√		
Truck / p-series	Four wheel drive	√	√	√	√		
Truck / p-series	instrument panel	√	√	√	√		
Truck / p-series	instrument panel	√	√	√	√		
Truck / p-series	radio	√	√	√			
Truck / p-series	retarder	√	√	√	√		
Truck / p-series	suspension	√	√	√	√		
Truck / p-series	tachograph	√	√	√			
Truck / p-series	tachograph	√	√	√	√		
Truck / p-series	Tire pressure	√	√	√	√		
Truck / p-series	Transmission case	√	√	√			
Truck / p-series	Transmission case	√	√	√			
Truck / p-series	Transmission case	√	√	√			
Truck / p-series	Transportation information system	√	√	√			
Truck / p-series Euro 6	ABS	√	√	√	√		
Truck / p-series Euro 6	Articulation management	√	√	√	√		
Truck / p-series Euro 6	Chassis equipment and design	√	√	√			
Truck / p-series Euro 6	ABS	√	√	√	√		
Truck / p-series Euro 6	Articulation management	√	√	√	√		
Truck / p-series Euro 6	Chassis equipment and design	√	√	√			
Truck / p-series Euro 6	Compressed air reserve system	√	√	√			

Truck / p-series Euro 6	Compressed air reserve system	√	√	√			
Truck / p-series Euro 6	Diesel fuel injection	√	√	√			
Truck / p-series Euro 6	Diesel fuel injection	√	√	√	√		
Truck / p-series Euro 6	Diesel fuel injection	√	√	√	√		
Truck / p-series Euro 6	Distance control	√	√	√			
Truck / p-series Euro 6	Distance control	√	√	√	√		
Truck / p-series Euro 6	EBS	√	√	√	√		
Truck / p-series Euro 6	Engine vehicle adjustment	√	√	√	√		
Truck / p-series Euro 6	instrument panel	√	√	√	√		
Truck / p-series Euro 6	instrument panel	√	√	√	√		
Truck / p-series Euro 6	Network system	√	√	√	√		
Truck / p-series Euro 6	suspension	√	√	√	√		
Truck / p-series Euro 6	ECU external light	√	√	√	√		
Truck / p-series Euro 6	ECU external light	√	√	√	√		
Truck / p-series Euro 6	EBS	√	√	√	√		
Truck / p-series Euro 6	ECU external light	√	√	√	√		
Truck / p-series Euro 6	Engine vehicle adjustment	√	√	√	√		
Truck / p-series Euro 6	Engine vehicle adjustment	√	√	√	√		
Truck / p-series Euro 6	Four wheel drive	√	√	√			
Truck / p-series Euro 6	instrument panel	√	√	√	√		
Truck / p-series Euro 6	instrument panel	√	√	√	√		
Truck / p-series Euro 6	radio	√	√	√			
Truck / p-series Euro 6	retarder	√	√	√	√		
Truck / p-series Euro 6	suspension	√	√	√	√		
Truck / p-series Euro 6	tachograph	√	√	√			
Truck / p-series Euro 6	tachograph	√	√	√			
Truck / p-series Euro 6	Tire pressure	√	√	√			
Truck / p-series Euro 6	Transmission case	√	√	√			
Truck / p-series Euro 6	Transmission case	√	√	√	√		
Truck / p-series Euro 6	Transmission case	√	√	√	√		
Truck / p-series Euro 6	Transportation information system	√	√	√			
Truck / R-Series	ABS	√	√	√	√		
Truck / R-Series	Lane keeping assistance	√	√	√	√		
Truck / R-Series	Air conditioner	√	√	√	√		
Truck / R-Series	Safety air bag	√	√	√	√		
Truck / R-Series	Call the police	√	√	√	√		

Truck / R-Series	Auxiliary heating	√	√	√	√		
Truck / R-Series	Auxiliary heating	√	√	√	√		
Truck / R-Series	Chassis equipment and design	√	√	√	√		
Truck / R-Series	Comfort system	√	√	√	√		
Truck / R-Series	Compressed air reserve system	√	√	√	√		
Truck / R-Series	Compressed air reserve system	√	√	√	√		
Truck / R-Series	Diesel fuel injection	√	√	√	√		
Truck / R-Series	Diesel fuel injection	√	√	√			
Truck / R-Series	Diesel fuel injection	√	√	√			
Truck / R-Series	Distance control	√	√	√	√		
Truck / R-Series	Distance control	√	√	√			
Truck / R-Series	EBS	√	√	√			
Truck / R-Series	EBS	√	√	√			
Truck / R-Series	EBS	√	√	√	√		
Truck / R-Series	ECU external light	√	√	√	√		
Truck / R-Series	Engine vehicle adjustment	√	√	√	√		
Truck / R-Series	Engine vehicle adjustment	√	√	√	√		
Truck / R-Series	Four wheel drive	√	√	√	√		
Truck / R-Series	instrument panel	√	√	√	√		
Truck / R-Series	instrument panel	√	√	√	√		
Truck / R-Series	radio	√	√	√	√		
Truck / R-Series	retarder	√	√	√	√		
Truck / R-Series	suspension	√	√	√	√		
Truck / R-Series	tachograph	√	√	√	√		
Truck / R-Series	tachograph	√	√	√	√		
Truck / R-Series	APS (compressed air supply)	√	√	√	√		
Truck / R-Series	Transmission case	√	√	√		0072-0077	
Truck / R-Series	Transmission case	√	√	√	√	0078-0088	
Truck / R-Series	Transmission case	√	√	√	√	0089-0096	0001-0003
Truck / R-Series	Transportation information system	√	√	√			
Truck / R-Series Euro 6	ABS	√	√	√	√		
Truck / R-Series Euro 6	Lane keeping assistance	√	√	√	√		
Truck / R-Series Euro 6	Air conditioner	√	√	√			
Truck / R-Series Euro 6	Safety air bag	√	√	√			
Truck / R-Series Euro 6	Call the police	√	√	√			
Truck / R-Series Euro 6	Auxiliary heating	√	√	√			

Truck / R-Series Euro 6	Auxiliary heating	√	√	√	√		
Truck / R-Series Euro 6	Chassis equipment and design	√	√	√	√		
Truck / R-Series Euro 6	Comfort system	√	√	√			
Truck / R-Series Euro 6	Compressed air reserve system	√	√	√	√		
Truck / R-Series Euro 6	Compressed air reserve system	√	√	√	√		
Truck / R-Series Euro 6	Diesel fuel injection	√	√	√	√		
Truck / R-Series Euro 6	Diesel fuel injection	√	√	√	√		
Truck / R-Series Euro 6	Diesel fuel injection	√	√	√	√		
Truck / R-Series Euro 6	Distance control	√	√	√	√		
Truck / R-Series Euro 6	Distance control	√	√	√	√		
Truck / R-Series Euro 6	EBS	√	√	√	√		
Truck / R-Series Euro 6	ABS	√	√	√	√		
Truck / R-Series Euro 6	Articulation management	√	√	√	√		
Truck / R-Series Euro 6	Chassis equipment and design	√	√	√	√		
Truck / R-Series Euro 6	Compressed air reserve system	√	√	√	√		
Truck / R-Series Euro 6	Compressed air reserve system	√	√	√	√		
Truck / R-Series Euro 6	Diesel fuel injection	√	√	√			
Truck / R-Series Euro 6	Diesel fuel injection	√	√	√	√		
Truck / R-Series Euro 6	Diesel fuel injection	√	√	√	√		
Truck / R-Series Euro 6	Distance control	√	√	√			
Truck / R-Series Euro 6	Distance control	√	√	√	√		
Truck / R-Series Euro 6	EBS	√	√	√	√		
Truck / R-Series Euro 6	Engine vehicle adjustment	√	√	√			
Truck / R-Series Euro 6	instrument panel	√	√	√			
Truck / R-Series Euro 6	instrument panel	√	√	√			
Truck / R-Series Euro 6	Network system	√	√	√			
Truck / R-Series Euro 6	suspension	√	√	√	√		
Truck / R-Series Euro 6	ECU external light	√	√	√	√		
Truck / R-Series Euro 6	ECU external light	√	√	√			