



# Shenzhen Xtooltech Co., Ltd

## TOYOTA Function List V5.42

### Tips and Instructions:

- \* This feature is new.
- ✓ This feature is supported.
- ✗ This feature is not supported.
- ※ This feature is partially supported.

manufacture	vehicle / model number		system/electronic control	diagnosis interface	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Actuation Test	Special Functions
<b>TOYOTA</b>	COASTER	Engine	Engine&&Transmission (KWP)	OBD II-16PIN		✓	✓	✓		1. Read Injector code 2. Write Injector code 3. Resting adaptive value
			Engine&&Transmission (ISO)	OBD II-16PIN		✓	✓	✓		
			Engine&&Transmission (CAN)	OBD II-16PIN		✓	✓	✓		1. Read VIN
			N04C	OBD II-16PIN	✓	✓	✓	✓	✓	1. Freeze Frame 2. Intake Air Volume Check 3. VNT Check 4. Fuel leak Check 5. Check Turbocharger 6. EGR Check 7. Read Injector code 8. Write Injector code 9. Cylinder Cutout 10. Manual forced regeneration 11. Read VIN 12. Write VIN

DYNA	Engine	Engine&&Transmission (KWP)	OBD II-16PIN		√	√	√		1. Read Injector code 2. Write Injector code 3. Resting adaptive value
		Engine&&Transmission (ISO)	OBD II-16PIN		√	√	√		
		Engine&&Transmission (CAN)	OBD II-16PIN		√	√	√		1. Read VIN

*XTOOL*