

DACIA Function List V9.50

Notes:								
✓	Functions is fully supported and already existed in former software version.							
*	Functions is fully supported and newly added in current software version.							
#	Functions is partially supported, which means the functions is verified on some vehicle models or systems and it might supports other vehicle models or systems.							
Functions left with blank is not supported.								
Vehicle	System	Computer identification	Read Trouble Code	Freeze Frame	Clear Trouble Code	Read Data Stream	Actuators	Specific Function
Captur/kaptur br/in/ru	Engine System	✓	✓	✓	✓	✓	✓	001, 002, 003, 004, 005, 006, 007, 008, 009, 00A, 00B, 00C, 00D, 00E, 00F, 010, 011
Captur/kaptur br/in/ru	ABS	✓	✓		✓	✓		012, 013, 014, 015, 016, 017, 018
Captur/kaptur br/in/ru	Instrument panel	✓	✓	✓	✓	✓	✓	012, 019, 01A, 00B, 00C, 01B, 01C, 01D
Captur/kaptur br/in/ru	UCH	✓	✓	✓	✓	✓	✓	012, 013, 01E, 01F
Captur/kaptur br/in/ru	Airbag/pretenioners	✓	✓	✓	✓	✓	✓	012, 013, 020, 021
Captur/kaptur br/in/ru	Air conditioning	✓	✓	✓	✓	✓	✓	012, 013, 022
Captur/kaptur br/in/ru	Automatic gearbox	✓	✓	✓	✓	✓	✓	013, 018, 00B, 023, 024, 025
Captur/kaptur br/in/ru	Variable PAS	✓	✓	✓	✓	✓	✓	012, 013, 026, 027, 018, 028
Captur/kaptur br/in/ru	LPC	✓	✓	✓	✓	✓	✓	001, 012, 013, 022, 029, 02A, 02B
Captur/kaptur br/in/ru	Lighting	✓	✓	✓	✓	✓	✓	012, 013, 02C
Captur/kaptur br/in/ru	4 wheels drive	✓	✓	✓	✓	✓	✓	001, 013, 02D, 02E, 02F
Captur/kaptur br/in/ru	Radio	✓	✓	✓	✓	✓	✓	012, 013, 030, 031, 032, 033, 034, 035, 036, 037, 038, 039, 03A, 03B, 01D, 03C, 03D
Captur/kaptur br/in/ru	Telematic ctrl unit	✓	✓		✓	✓	✓	001, 03E, 03F, 040, 002, 003, 041, 004, 005, 006, 007, 008, 042, 009, 043, 044, 045, 046, 00A, 047, 048, 049, 04A, 04B, 00B, 00C, 00D, 00E, 04C, 00F, 04D, 04E, 04F, 050, 010, 011, 051, 052, 053, 054, 055, 056, 057, 058, 059
Captur/kaptur br/in/ru	Multimedia interface	✓	✓		✓	✓	✓	012, 013, 05A, 027, 05B, 05C, 05D, 05E, 05F
Captur/kaptur br/in/ru	HANDS-FREE MODULE	✓	✓	✓	✓	✓	✓	012, 013, 014, 015, 060, 061, 016, 062, 018, 063, 064
Dokker/kangoo	Engine System	✓	✓	✓	✓	✓	✓	012, 019, 01A, 00B, 00C, 01B, 01C, 01D
Dokker/kangoo	ABS	✓	✓	✓	✓	✓	✓	012, 013, 01E, 01F
Dokker/kangoo	Instrument panel	✓	✓		✓	✓	✓	012, 013, 020, 021
Dokker/kangoo	UCH	✓	✓	✓	✓	✓	✓	001, 012, 013, 022, 029, 02A, 02B
Dokker/kangoo	Airbag/pretenioners	✓	✓	✓	✓	✓	✓	012, 013, 02C
Dokker/kangoo	Variable PAS	✓	✓	✓	✓	✓	✓	001, 013, 02D, 02E, 02F
Dokker/kangoo	Radio	✓	✓	✓	✓	✓	✓	012, 013, 030, 031, 032, 033, 034, 035, 036, 037, 038, 039, 03A, 03B, 01D, 03C, 03D
Dokker/kangoo	Telematic ctrl unit	✓	✓		✓	✓	✓	001, 03E, 065, 03F, 066, 067, 068, 069, 040, 012, 002, 003, 041, 004, 005, 006, 007, 008, 009, 030, 013, 044, 045, 046, 00A, 047, 048, 049, 06A, 04A, 04B, 06B, 00B, 06C, 06D, 00C, 00D, 00E, 04C, 00F, 04D, 04E, 04F, 050, 010, 011, 051, 06E, 052, 053, 054, 06F, 070, 071, 072, 073, 074, 075
Dokker/kangoo	Multimedia interface	✓	✓		✓	✓	✓	012, 013, 05A, 027, 05B, 05C, 05D, 076, 05E, 077, 05F
Dokker/kangoo	HANDS-FREE MODULE	✓	✓	✓	✓	✓	✓	012, 019, 01A, 00B, 00C, 01B, 01C, 01D
Duster ph2	Engine System	✓	✓	✓	✓	✓	✓	012, 013, 01E, 01F
Duster ph2	ABS	✓	✓	✓	✓	✓	✓	012, 013, 020, 021
Duster ph2	Instrument panel							012, 013, 026, 027, 018, 028
Duster ph2	UCH	✓	✓	✓	✓	✓	✓	001, 012, 013, 022, 029, 02A, 02B
Duster ph2	Airbag/pretenioners	✓	✓	✓	✓	✓	✓	012, 013, 02C
Duster ph2	Air conditioning	✓	✓	✓	✓	✓	✓	001, 013, 02D, 02E, 02F
Duster ph2	Automatic gearbox	✓	✓	✓	✓	✓	✓	012, 013, 030, 031, 032, 033, 034, 035, 036, 037, 038, 039, 03A, 03B, 01D, 03C, 03D
Duster ph2	Variable PAS	✓	✓	✓	✓	✓	✓	001, 03E, 065, 066, 067, 068, 069, 040, 079, 012, 013, 002, 07A, 003, 07B, 041, 004, 005, 006, 007, 008, 009, 043, 045, 046, 04C, 00F, 052, 07C, 071, 07D
Duster ph2	4 wheels drive	✓	✓	✓	✓	✓	✓	
Duster ph2	Radio	✓	✓	✓	✓	✓	✓	
Duster ph2	Telematic ctrl unit	✓	✓		✓	✓	✓	
Duster ph2	Multimedia interface	✓	✓		✓	✓	✓	
Duster ph2	HANDS-FREE MODULE	✓	✓	✓	✓	✓	✓	
Duster	Engine System	✓	✓	✓	✓	✓	✓	

Duster	ABS	✓	✓	✓	✓	✓	✓	012, 013, 05A, 027, 07E
Duster	UCH	✓	✓		✓	✓	✓	012, 013, 07F, 080
Duster	Airbag/pretenioners	✓	✓	✓	✓	✓	✓	012, 013, 01E, 01F, 081, 082, 083, 084, 085, 086, 087, 088, 089, 08A, 08B, 08C, 08D, 08E, 08F, 090, 091
Duster	Automatic gearbox	✓	✓	✓	✓	✓	✓	012, 013, 05A, 092, 093, 094
Duster	Variable PAS	✓	✓	✓	✓	✓	✓	012, 013, 022
Duster	TRACKER	✓	✓		✓	✓	✓	001, 095
Duster	4 wheels drive	✓	✓	✓	✓	✓	✓	012, 013, 026, 027, 018, 028
Duster	Radio	✓	✓	✓	✓	✓	✓	001, 012, 013, 022, 096, 029, 02A, 097
Lodgy	Engine System	✓	✓	✓	✓	✓	✓	001, 03E, 065, 03F, 066, 067, 068, 069, 040, 012, 002, 003, 041, 004, 005, 006, 007, 008, 042, 009, 043, 044, 045, 046, 04A, 047, 048, 049, 05A, 04A, 04B, 06B, 00B, 06C, 06D, 00C, 00D, 00E, 04C, 00F, 04D, 04E, 04F, 050, 010, 011, 051, 06E, 052, 053, 054, 06F, 070, 055, 056, 057, 058, 059, 071, 072, 073, 074, 075
Lodgy	ABS	✓	✓	✓	✓	✓	✓	012, 013, 05A, 027, 05B, 05C, 05D, 05E, 05F
Lodgy	Instrument panel	✓	✓		✓	✓	✓	012, 013, 014, 015, 060, 061, 016, 062, 018, 063, 064
Lodgy	UCH	✓	✓	✓	✓	✓	✓	012, 019, 01A, 00B, 00C, 01B, 01C, 01D
Lodgy	Airbag/pretenioners	✓	✓	✓	✓	✓	✓	012, 013, 01E, 01F
Lodgy	Automatic gearbox	✓	✓		✓	✓	✓	
Lodgy	Variable PAS	✓	✓	✓	✓	✓	✓	012, 013, 022
Lodgy	Radio	✓	✓	✓	✓	✓	✓	001, 012, 013, 022, 029, 02A, 02B
Lodgy	HANDS-FREE MODULE	✓	✓	✓	✓	✓	✓	012, 013, 030, 031, 032, 033, 034, 035, 036, 037, 038, 039, 03A, 03B, 01D, 03C, 03D
Logan II/sandero II	Engine System	✓	✓	✓	✓	✓	✓	001, 03E, 065, 03F, 066, 067, 068, 069, 040, 012, 002, 003, 041, 004, 005, 006, 007, 008, 098, 009, 030, 043, 044, 045, 046, 00A, 047, 048, 049, 06A, 04A, 04B, 06B, 00B, 06C, 06D, 00C, 00D, 00E, 04C, 00F, 04D, 04E, 04F, 050, 010, 011, 06E, 052, 053, 054, 071, 072, 073, 074, 075, 099, 09A
Logan II/sandero II	ABS	✓	✓	✓	✓	✓	✓	012, 013, 05A, 027, 05B, 05C, 05D, 076, 05E, 077, 05F
Logan II/sandero II	Instrument panel	✓	✓		✓	✓	✓	012, 013, 014, 015, 060, 09B, 061, 016, 062, 018, 063, 064
Logan II/sandero II	UCH	✓	✓	✓	✓	✓	✓	012, 019, 09C, 01A, 00B, 00C, 01B, 01C, 01D
Logan II/sandero II	Airbag/pretenioners	✓	✓	✓	✓	✓	✓	012, 013, 01E, 01F
Logan II/sandero II	Air conditioning	✓	✓	✓	✓	✓	✓	012, 013, 021
Logan II/sandero II	Automatic gearbox	✓	✓	✓	✓	✓	✓	012, 013, 09D, 09E, 09F
Logan II/sandero II	Variable PAS	✓	✓	✓	✓	✓	✓	012, 013, 022
Logan II/sandero II	TRACKER	✓	✓		✓	✓	✓	001, 095
Logan II/sandero II	Radio	✓	✓	✓	✓	✓	✓	001, 012, 013, 022, 029, 02A, 02B
Logan II/sandero II	Telematic ctrl unit	✓	✓		✓	✓	✓	012, 013, 02C
Logan II/sandero II	Multimedia interface	✓	✓		✓	✓	✓	001, 013, 02D, 02E, 02F
Logan II/sandero II	HANDS-FREE MODULE	✓	✓	✓	✓	✓	✓	012, 013, 030, 031, 032, 033, 034, 035, 036, 037, 038, 039, 03A, 03B, 01D, 03C, 03D
Logan	Engine System	✓	✓	✓	✓	✓	✓	001, 03E, 065, 066, 067, 068, 069, 040, 079, 012, 013, 002, 07A, 003, 07B, 041, 004, 005, 006, 007, 008, 009, 043, 045, 046, 04C, 00F, 06E, 052, 07C, 071, 0A0, 0A1, 07D
Logan	ABS	✓	✓	✓	✓	✓	✓	012, 013, 05A, 027
Logan	UCH	✓	✓		✓	✓	✓	012, 013, 07F, 080
Logan	Airbag/pretenioners	✓	✓	✓	✓	✓	✓	012, 013, 01E, 01F, 081, 082, 083, 084, 087, 088, 089, 08A, 08B, 08C, 0A2, 0A3, 08D, 08E, 08F, 0A4, 0A5
Logan	Automatic gearbox	✓	✓	✓	✓	✓	✓	012, 013, 05A, 092, 093, 094
Logan	GAS Injection	✓	✓	✓	✓	✓	✓	012, 013
Logan	Variable PAS	✓	✓	✓	✓	✓	✓	012, 013, 022
Logan	TRACKER	✓	✓		✓	✓	✓	001, 095
Logan	Radio	✓	✓	✓	✓	✓	✓	001, 012, 013, 022, 096, 029, 02A, 097

Sandero	Engine System	✓	✓	✓	✓	✓	✓	001, 03E, 065, 066, 067, 068, 069, 040, 079, 012, 013, 002, 07A, 003, 07B, 041, 004, 005, 006, 007, 008, 009, 043, 045, 046, 04C, 00F, 06E, 052, 07C, 071, 0A0, 0A1, 07D
Sandero	ABS	✓	✓	✓	✓	✓	✓	012, 013, 05A, 027
Sandero	UCH	✓	✓	✓	✓	✓	✓	012, 013, 07F, 080
Sandero	Airbag/pre-tensioners	✓	✓	✓	✓	✓	✓	012, 013, 01E, 01F, 081, 082, 083, 084, 087, 088, 089, 08A, 08B, 08C, 0A2, 0A3, 08D, 08E, 08F, 0A4, 0A5
Sandero	Automatic gearbox	✓	✓	✓	✓	✓	✓	012, 013, 05A, 092, 093, 094
Sandero	GAS Injection	✓	✓	✓	✓	✓	✓	012, 013
Sandero	Variable PAS	✓	✓	✓	✓	✓	✓	012, 013, 022
Sandero	TRACKER	✓	✓	✓	✓	✓	✓	001, 095
Sandero	Radio	✓	✓	✓	✓	✓	✓	001, 012, 013, 022, 096, 029, 02A, 097

001	Fault memory	002	Fuel supply prevention
003	INTERVAL OF OIL CHANGE (OCS) OXIDATION	004	Engine adaptives
005	Programming throttle limits	006	Richness regulation programming
007	FlYWheel target programming	008	Cruise control/speed limiter programming
009	Camshaft sensor programming	00A	Proportional richness sensor programming
00B	Number of starting cycles	00C	High pressure pump counter
00D	Stop and start function	00E	Alternator setpoint voltage
00F	Alcohol level prog.	010	Injector adaptives
011	Waste gate regulation	012	Fault memory
013	Write VIN	014	Distance units
015	Consumption measurement units	016	ADAC display type
017	Language version	018	Computer initialisation
019	Hazard warning lights illumination by ABS	01A	PROGRAMMING THE CODES OF THE FOUR VALVES
01B	Alarm	01C	Second fitting alarm
01D	Remote engine starting	01E	Lock computer
01F	Unlock computer	020	GEOGRAPHICAL ZONE
021	Computer reinitialisation	022	Write date of after sales operation
023	Diagnostic trouble codes reset	024	Resetting internal protection
025	Alternator floating voltage	026	Vehicle type
027	Speedo index	028	Modification of parameters after initialisation
029	Language	02A	Country model
02B	Rear loud speaker	02C	Computer reset
02D	Time format	02E	Temperature display
02F	Hour setting	030	Configuration privee 1
031	Remote Locking Buzzer	032	Configuration Privee 3
033	Programming routine	034	Confirm programming
035	Abandon programming	036	READ CARD SIGNAL
037	Read card 2 signal	038	Configuration privee 2
039	Configuration Privee 4	03A	Testing card presented
03B	HPM programming routine	03C	Column steering lock
03D	Configuration Reservee 1	03E	EGR adaptives
03F	Programmed values	040	WRITE V. I. N.
041	Air path programming	042	Vacuum pump operation request
043	EGR valve programming	044	Adaptives on air intake flap fault
045	Air damper valve programming	046	Rail pressure sensor adaptives
047	Exhaust flap low setting	048	Low pressure EGR valve programming
049	Fuel pump programming	04A	Particle filter pressure difference sensor
04B	Injection pump adaptatives	04C	OIL CHANGE INTERVAL (OCS): DILUTION
04D	Number of starting 1	04E	Number of starting 2
04F	Number of starting 3	050	Number of starting 4
051	Camshaft sensor Number 2 programming	052	Particle filter relative pressure sensor
053	EGR programming	054	Manifold pressure sensor programming
055	Inhibit EVAP strategy	056	Activate EVAP programming
057	Static test	058	Parametrage prive 159
059	Parametrage prive 160	05A	Write date of last after sales operation
05B	Steering wheel angle offset sensor	05C	Transverse acceleration offset sensor
05D	Brake pressure offset sensor	05E	Steering wheel angle sensor
05F	Longitudinal acceleration sensor offset	060	Gearbox type
061	Update odometer	062	Overspeed Alarm
063	Battery charge warning information	064	External temperature
065	Pressure regulation adaptives	066	Cylinder 1 Injector Code
067	Cylinder 2 Injector Code	068	Cylinder 3 Injector Code
069	Cylinder 4 Injector Code	06A	Air flowmeter programming
06B	Starter adaptatives	06C	EGR bypass programming
06D	Catalytic converter	06E	Injection time programming
06F	Injection prohibition	070	Parametrage prive 250
071	Fuel flow regulator	072	Injector adaptives Number 1
073	Injector adaptives Number 2	074	Injector adaptives Number 3
075	Injector adaptives Number 4	076	Reset
077	Acceleration sensor	079	Lock injector control
07A	Programming reinitialisation	07B	Stop fuel supply prevention
07C	Exhaust injector circuit	07D	Parametrage prive 237
07E	Sensor offsets	07F	SDO
080	Flashing buzzer	081	Front thorax side air bag, Driver's side
082	Front thorax side air bag, Passenger's side	083	Passenger's air bag locking mode
084	Driver's seat buckle sensor	085	Passenger's seat buckle sensor
086	Passenger's presence detection sensor	087	Side on which steering wheel fitted
088	Seat belt reminder buzzer	089	Pass airbag deactivation warning light
08A	Driver's front airbag	08B	Passenger's front airbag
08C	Impact information connection	08D	Seat belt light
08E	Driver's front side impact sensor	08F	Passenger's front side impact sensor
090	Driver's front inertia reel	091	Passenger's front inertia reel
092	Note oil wear counter	093	Write transmission oil change date
094	Auto-adaptives	095	SVT configuration
096	Driving type	097	Reset radio
098	Upstream oxygen sensor	099	With SWIRL flap
09A	Oil vapour heater	09B	Cruise CTRL/SPD Limiter
09C	Selective opening of doors	09D	Reset clutch data
09E	Reset clutch data protection	09F	Reset gearbox data
0A0	Idle speed learning	0A1	Torque learning
0A2	Driver's front buckle pretensioner	0A3	Passenger's front buckle pretensioner
0A4	Front left-hand inertia wheel	0A5	Front right-hand inertia wheel