

HUMMER Function list V10.81

Notes:

- ✓ Functions is fully supported and already existed in former software version.
- * Functions is fully supported and newly added in current software version.
- # Functions is partially supported , which means the functions is verified on some vehicle models or systems and it might supports other vehicle models or systems.
- Functions left with blank is not supported.

Year	Make	Model	System	Read Trouble Code	Erase Trouble Code	Version Information	Read DataStream	Action Test	SpecilFunction	Spec Index
2010	Hummer	H2	Transmission control module	✓	✓		✓	✓		
2010	Hummer	H2	Fuel pump control module	✓	✓	✓	✓	✓		
2010	Hummer	H2	Transfer case control module	✓	✓	✓	✓	✓		
2010	Hummer	H2	Engine control module	✓	✓	✓	✓	✓	✓	T001
2010	Hummer	H2	Amplifier (bose)	✓	✓	✓	✓	✓	✓	T010
2010	Hummer	H2	Digital radio receiver	✓	✓	✓	✓	✓		
2010	Hummer	H2	Personal audio link module	✓	✓	✓			✓	T036
2010	Hummer	H2	Radio	✓	✓	✓	✓	✓		
2010	Hummer	H2	Rear HVAC/RSA	✓	✓	✓	✓	✓		
2010	Hummer	H2	Vehicle comm. interface module	✓	✓	✓	✓	✓	✓	T002 T003 T004
2010	Hummer	H2	Remote control door lock receiver	✓	✓	✓	✓	✓	✓	T021 T022
2010	Hummer	H2	Theft deterrent module	✓	✓	✓	✓			
2010	Hummer	H2	Rollover sensor	✓	✓	✓	✓		✓	T049
2010	Hummer	H2	Supplemental inflatable restraint	✓	✓	✓	✓	✓	✓	T005
2010	Hummer	H2	Memory seat module	✓	✓	✓	✓	✓		
2010	Hummer	H2	Rear heated seat module	✓	✓	✓	✓			
2010	Hummer	H2	Instrument panel cluster	✓	✓	✓	✓	✓		
2010	Hummer	H2	Driver door switch	✓	✓	✓	✓	✓		
2010	Hummer	H2	Passenger door switch	✓	✓	✓	✓	✓		
2010	Hummer	H2	HVAC control module	✓	✓	✓	✓	✓	✓	T008 T034
2010	Hummer	H2	Body control module	✓	✓	✓	✓	✓	✓	T005
2010	Hummer	H2	Air suspension control module	✓	✓	✓	✓	✓		
2010	Hummer	H2	Electronic brake control module	✓	✓	✓	✓	✓	✓	T014
2010	Hummer	H3	Transmission control module	✓	✓		✓	✓		
2010	Hummer	H3	Engine control module	✓	✓	✓	✓	✓	✓	T001
2010	Hummer	H3	Fuel pump control module	✓	✓	✓	✓	✓		
2010	Hummer	H3	Transfer case control module	✓	✓	✓	✓	✓	✓	T001
2010	Hummer	H3	Digital radio receiver	✓	✓	✓	✓	✓	✓	T024
2010	Hummer	H3	Personal audio link module	✓	✓	✓			✓	T036
2010	Hummer	H3	Radio	✓	✓	✓	✓	✓	✓	T080 T032
2010	Hummer	H3	Vehicle comm. interface module	✓	✓	✓	✓	✓	✓	T073 T003
2010	Hummer	H3	Generator battery control module	✓	✓	✓	✓	✓		
2010	Hummer	H3	Passenger presence system	✓	✓				✓	T020
2010	Hummer	H3	Supplemental inflatable restraint	✓	✓	✓	✓	✓	✓	T023
2010	Hummer	H3	Body control module	✓	✓	✓	✓	✓	✓	T058 T022
2010	Hummer	H3	Instrument panel cluster	✓	✓	✓	✓	✓		
2010	Hummer	H3	Theft deterrent module	✓	✓	✓	✓	✓	✓	T057
2010	Hummer	H3	Navigation radio	✓	✓	✓	✓	✓	✓	T033
2010	Hummer	H3	Electronic brake control module	✓	✓	✓	✓	✓		
2009	Hummer	H2	Fuel pump control module	✓	✓	✓	✓	✓		

2009	Hummer	H2	Transfer case control module	✓	✓	✓	✓	✓		
2009	Hummer	H2	Transmission control module	✓	✓		✓	✓		
2009	Hummer	H2	Engine control module	✓	✓	✓	✓	✓	✓	T001
2009	Hummer	H2	Remote control door lock receiver	✓	✓	✓	✓	✓	✓	T021 T022
2009	Hummer	H2	Rollover sensor	✓	✓	✓	✓		✓	T049
2009	Hummer	H2	Supplemental inflatable restraint	✓	✓	✓	✓	✓	✓	T005
2009	Hummer	H2	Theft deterrent module	✓	✓	✓	✓			
2009	Hummer	H2	Amplifier (bose)	✓	✓	✓	✓	✓	✓	T010
2009	Hummer	H2	Digital radio receiver	✓	✓	✓	✓	✓		
2009	Hummer	H2	Rear HVAC/RSA	✓	✓	✓	✓	✓		
2009	Hummer	H2	Vehicle comm. interface module	✓	✓	✓	✓	✓	✓	T002 T003 T004
2009	Hummer	H2	Memory seat module	✓	✓	✓	✓	✓		
2009	Hummer	H2	Rear heated seat module	✓	✓	✓	✓			
2009	Hummer	H2	Personal audio link module	✓	✓	✓			✓	T036
2009	Hummer	H2	Radio	✓	✓	✓	✓	✓		
2009	Hummer	H2	Instrument panel cluster	✓	✓	✓	✓	✓		
2009	Hummer	H2	Body control module	✓	✓	✓	✓	✓	✓	T005
2009	Hummer	H2	HVAC control module	✓	✓	✓	✓	✓	✓	T008 T034
2009	Hummer	H2	Driver door switch	✓	✓	✓	✓	✓		
2009	Hummer	H2	Passenger door switch	✓	✓	✓	✓	✓		
2009	Hummer	H2	Electronic brake control module	✓	✓	✓	✓	✓	✓	T014
2009	Hummer	H2	Air suspension control module	✓	✓	✓	✓	✓		
2009	Hummer	H3	Engine control module	✓	✓	✓	✓	✓	✓	T001
2009	Hummer	H3	Fuel pump control module	✓	✓	✓	✓	✓		
2009	Hummer	H3	Transmission control module	✓	✓		✓	✓		
2009	Hummer	H3	Transfer case control module	✓	✓	✓	✓	✓	✓	T001
2009	Hummer	H3	Radio	✓	✓	✓	✓	✓	✓	T080 T032
2009	Hummer	H3	Passenger presence system	✓	✓				✓	T020
2009	Hummer	H3	Supplemental inflatable restraint	✓	✓	✓	✓	✓	✓	T023
2009	Hummer	H3	Theft deterrent module	✓	✓	✓	✓	✓	✓	T057
2009	Hummer	H3	Vehicle comm. interface module	✓	✓	✓	✓	✓	✓	T073 T003
2009	Hummer	H3	Digital radio receiver	✓	✓	✓	✓	✓	✓	T024
2009	Hummer	H3	Body control module	✓	✓	✓	✓	✓	✓	T058 T022
2009	Hummer	H3	Instrument panel cluster	✓	✓	✓	✓	✓		
2009	Hummer	H3	Generator battery control module	✓	✓	✓	✓	✓		
2009	Hummer	H3	Personal audio link module	✓	✓	✓			✓	T036
2009	Hummer	H3	Navigation radio	✓	✓	✓	✓	✓	✓	T033
2009	Hummer	H3	Electronic brake control module	✓	✓	✓	✓	✓	✓	T001
2008	Hummer	H2	Transmission control module	✓	✓		✓	✓		
2008	Hummer	H2	Transfer case control module	✓	✓	✓	✓	✓	✓	T001
2008	Hummer	H2	Engine control module	✓	✓	✓	✓	✓		
2008	Hummer	H2	Fuel pump control module	✓	✓	✓	✓	✓		
2008	Hummer	H2	Rollover sensor	✓	✓	✓	✓		✓	T049
2008	Hummer	H2	Supplemental inflatable restraint	✓	✓	✓	✓	✓	✓	T005
2008	Hummer	H2	Theft deterrent module	✓	✓	✓	✓			
2008	Hummer	H2	Amplifier (bose)	✓	✓	✓	✓	✓		
2008	Hummer	H2	Digital radio receiver	✓	✓	✓	✓			
2008	Hummer	H2	Radio	✓	✓	✓	✓	✓		
2008	Hummer	H2	Instrument panel cluster	✓	✓	✓	✓	✓		
2008	Hummer	H2	Vehicle comm. interface module	✓	✓	✓	✓	✓	✓	T002 T073 T003 T093
2008	Hummer	H2	Memory seat module	✓	✓	✓	✓	✓		

2008	Hummer	H2	Rear heated seat module	✓	✓	✓	✓			
2008	Hummer	H2	Rear HVAC/RSA	✓	✓	✓	✓	✓		
2008	Hummer	H2	Personal audio link module	✓	✓	✓			✓	T036
2008	Hummer	H2	HVAC control module	✓	✓	✓	✓	✓	✓	T008 T034
2008	Hummer	H2	Body control module	✓	✓	✓	✓	✓	✓	T005
2008	Hummer	H2	Remote control door lock receiver	✓	✓	✓	✓	✓	✓	T021 T022
2008	Hummer	H2	Driver door switch	✓	✓	✓	✓	✓		
2008	Hummer	H2	Passenger door switch	✓	✓	✓	✓	✓		
2008	Hummer	H2	Electronic brake control module	✓	✓	✓	✓	✓	✓	T014
2008	Hummer	H2	Air suspension control module	✓	✓	✓	✓	✓		
2008	Hummer	H3	Transmission control module	✓	✓		✓	✓		
2008	Hummer	H3	Transfer case control module	✓	✓	✓	✓	✓		
2008	Hummer	H3	Engine control module	✓	✓	✓	✓	✓	✓	T001
2008	Hummer	H3	Passenger presence system	✓	✓				✓	T020
2008	Hummer	H3	Supplemental inflatable restraint	✓	✓	✓	✓	✓	✓	T023
2008	Hummer	H3	Theft deterrent module	✓	✓	✓	✓	✓	✓	T057
2008	Hummer	H3	Body control module	✓	✓	✓	✓	✓	✓	T058 T022
2008	Hummer	H3	Digital radio receiver	✓	✓	✓	✓		✓	T024
2008	Hummer	H3	Radio	✓	✓	✓	✓	✓	✓	T080 T032
2008	Hummer	H3	Vehicle comm. interface module	✓	✓	✓	✓	✓	✓	T002 T099 T073 T003 T093
2008	Hummer	H3	Instrument panel cluster	✓	✓	✓	✓	✓		
2008	Hummer	H3	Generator battery control module	✓	✓	✓	✓	✓		
2008	Hummer	H3	Personal audio link module	✓	✓	✓	✓	✓	✓	T036
2008	Hummer	H3	Navigation radio	✓	✓	✓	✓	✓	✓	T033
2008	Hummer	H3	Electronic brake control module	✓	✓	✓	✓	✓	✓	T001
2007	Hummer	H2	Powertrain control module				✓	✓		
2007	Hummer	H2	Transfer case control module	✓	✓		✓	✓		
2007	Hummer	H2	Amplifier (bose)	✓	✓	✓	✓	✓		
2007	Hummer	H2	Digital radio receiver	✓	✓	✓	✓		✓	T024
2007	Hummer	H2	Radio	✓	✓	✓	✓			
2007	Hummer	H2	Rear seat audio	✓	✓	✓	✓			
2007	Hummer	H2	Vehicle comm. interface module	✓	✓	✓	✓	✓	✓	T002 T099 T073 T003 T093
2007	Hummer	H2	Instrument panel cluster	✓	✓	✓	✓	✓		
2007	Hummer	H2	Body control module	✓	✓	✓	✓	✓		
2007	Hummer	H2	Driver door module	✓	✓	✓	✓	✓		
2007	Hummer	H2	Driver seat module	✓	✓	✓	✓	✓		
2007	Hummer	H2	HVAC control module	✓	✓	✓	✓	✓		
2007	Hummer	H2	Passenger door module	✓	✓	✓	✓	✓	✓	T022
2007	Hummer	H2	Supplemental inflatable restraint	✓	✓	✓	✓	✓	✓	T147
2007	Hummer	H2	Navigation radio	✓	✓	✓	✓	✓	✓	T033
2007	Hummer	H2	Air suspension	✓	✓	✓	✓	✓		
2007	Hummer	H2	ABS	✓	✓		✓	✓	✓	T149
2007	Hummer	H3	Powertrain control module				✓	✓		
2007	Hummer	H3	Transfer case control module	✓	✓		✓	✓	✓	T146
2007	Hummer	H3	Passenger presence system	✓	✓				✓	T020
2007	Hummer	H3	Supplemental inflatable restraint	✓	✓	✓	✓	✓	✓	T023
2007	Hummer	H3	Radio	✓	✓	✓	✓	✓	✓	T080 T032
2007	Hummer	H3	Digital radio receiver	✓	✓	✓	✓		✓	T024
2007	Hummer	H3	Generator battery control module	✓	✓	✓	✓	✓		

2007	Hummer	H3	Instrument panel cluster	✓	✓	✓	✓	✓		
2007	Hummer	H3	Body control module	✓	✓	✓	✓	✓	✓	T058 T022
2007	Hummer	H3	Vehicle comm. interface module	✓	✓	✓	✓	✓	✓	T002 T099 T073 T003 T093
2007	Hummer	H3	Personal audio link module	✓	✓	✓	✓	✓	✓	T036
2007	Hummer	H3	Navigation radio	✓	✓	✓	✓	✓	✓	T033
2007	Hummer	H3	Electronic brake control module	✓	✓	✓	✓	✓	✓	T146
2006	HUMMER	H2	Powertrain	✓	✓	✓	✓	✓		
2006	HUMMER	H2	Digital radio receiver	✓	✓	✓	✓		✓	T024
2006	HUMMER	H2	Radio	✓	✓	✓	✓			
2006	HUMMER	H2	Rear seat audio	✓	✓	✓	✓			
2006	HUMMER	H2	Driver door module	✓	✓	✓	✓	✓		
2006	HUMMER	H2	Heating and air conditioning	✓	✓	✓	✓	✓		
2006	HUMMER	H2	Passenger door module	✓	✓	✓	✓	✓		
2006	HUMMER	H2	Driver seat module	✓	✓	✓	✓	✓		
2006	HUMMER	H2	Instrument panel cluster	✓	✓	✓	✓	✓		
2006	HUMMER	H2	Body control module	✓	✓	✓	✓	✓		
2006	HUMMER	H2	Supplemental inflatable restraint	✓	✓	✓	✓	✓	✓	T147
2006	HUMMER	H2	Vehicle comm. interface module	✓	✓	✓	✓	✓	✓	T099 T002 T073 T093
2006	HUMMER	H2	Navigation radio	✓	✓	✓	✓	✓	✓	T033
2006	HUMMER	H2	Air suspension	✓	✓	✓	✓	✓		
2006	HUMMER	H2	ABS	✓	✓	✓	✓	✓		
2006	HUMMER	H3	HVAC systems - manual	✓	✓	✓	✓	✓		
2006	HUMMER	H3	Tire pressure monitoring	✓	✓	✓	✓		✓	T022
2006	HUMMER	H3	Driveline/axle	✓	✓	✓	✓	✓		
2006	HUMMER	H3	Antilock brake system	✓	✓	✓	✓	✓		
2006	HUMMER	H3	Park brake	✓	✓	✓	✓	✓		
2006	HUMMER	H3	Engine controls	✓	✓	✓	✓	✓		
2006	HUMMER	H3	Engine cooling	✓	✓	✓	✓	✓		
2006	HUMMER	H3	Engine electrical	✓	✓	✓	✓	✓		
2006	HUMMER	H3	Shift lock control	✓	✓	✓	✓	✓		
2006	HUMMER	H3	Automatic transmission	✓	✓	✓	✓	✓		
2006	HUMMER	H3	Cellular communication	✓	✓	✓	✓	✓	✓	T002 T099 T073 T093
2006	HUMMER	H3	Cruise control	✓	✓	✓	✓	✓		
2006	HUMMER	H3	Doors	✓	✓	✓	✓	✓	✓	T058
2006	HUMMER	H3	Entertainment	✓	✓	✓	✓	✓	✓	T024
2006	HUMMER	H3	Instrument panel	✓	✓	✓	✓	✓	✓	T058
2006	HUMMER	H3	Keyless entry	✓	✓	✓	✓	✓	✓	T058
2006	HUMMER	H3	Lighting systems	✓	✓	✓	✓	✓	✓	T058
2006	HUMMER	H3	Navigation systems	✓	✓	✓	✓	✓	✓	T033
2006	HUMMER	H3	Stationary windows	✓	✓	✓	✓	✓	✓	T058
2006	HUMMER	H3	Theft deterrent	✓	✓	✓	✓	✓	✓	T058
2006	HUMMER	H3	Wipers/washer systems	✓	✓	✓	✓	✓	✓	T058
2006	HUMMER	H3	Seat belts	✓	✓	✓	✓	✓		
2006	HUMMER	H3	SIR	✓	✓	✓	✓	✓	✓	T023
2005	Hummer	H2	Powertrain	✓	✓	✓	✓	✓		
2005	Hummer	H2	Digital radio receiver	✓	✓	✓	✓		✓	T024
2005	Hummer	H2	Radio	✓	✓	✓	✓			
2005	Hummer	H2	Supplemental inflatable restraint	✓	✓	✓	✓		✓	T039 T147
2005	Hummer	H2	Instrument panel cluster	✓	✓	✓	✓	✓		
2005	Hummer	H2	Heating and air conditioning	✓	✓	✓	✓	✓		

2005	Hummer	H2	Passenger door module	✓	✓	✓	✓	✓		
2005	Hummer	H2	Body control module	✓	✓	✓	✓	✓		
2005	Hummer	H2	Driver seat module	✓	✓	✓	✓	✓		
2005	Hummer	H2	Rear seat audio	✓	✓	✓	✓			
2005	Hummer	H2	Driver door module	✓	✓	✓	✓	✓		
2005	Hummer	H2	GPS communication module	✓	✓	✓	✓	✓	✓	T024
2005	Hummer	H2	Navigation radio	✓	✓	✓	✓	✓	✓	T033
2005	Hummer	H2	Air suspension	✓	✓	✓	✓	✓		
2005	Hummer	H2	ABS	✓	✓		✓	✓	✓	T149
2004	Hummer	H2	Powertrain	✓	✓	✓	✓	✓		
2004	Hummer	H2	Onstar	✓	✓	✓	✓	✓	✓	T155 T191
2004	Hummer	H2	Digital radio receiver	✓	✓	✓	✓		✓	T024
2004	Hummer	H2	Body control module	✓	✓	✓	✓	✓		
2004	Hummer	H2	Passenger door module	✓	✓	✓	✓	✓		
2004	Hummer	H2	Driver door module	✓	✓	✓	✓	✓		
2004	Hummer	H2	Driver seat module	✓	✓	✓	✓	✓		
2004	Hummer	H2	Amplifier (bose)	✓	✓	✓	✓	✓		
2004	Hummer	H2	Supplemental inflatable restraint	✓	✓	✓	✓		✓	T039
2004	Hummer	H2	Radio	✓	✓	✓	✓		✓	T032
2004	Hummer	H2	Rear seat audio	✓	✓	✓	✓			
2004	Hummer	H2	Heating and air conditioning	✓	✓	✓	✓	✓		
2004	Hummer	H2	Instrument panel cluster	✓	✓	✓	✓	✓	✓	T155 T191
2004	Hummer	H2	Navigation radio	✓	✓	✓	✓	✓	✓	T033
2004	Hummer	H2	Air suspension	✓	✓	✓	✓	✓		
2004	Hummer	H2	ABS	✓	✓		✓	✓	✓	T149
2003	Hummer	H2	Powertrain	✓	✓	✓	✓	✓		
2003	Hummer	H2	Body control module	✓	✓	✓	✓	✓		
2003	Hummer	H2	Amplifier (bose)	✓	✓	✓	✓	✓		
2003	Hummer	H2	Supplemental inflatable restraint	✓	✓					
2003	Hummer	H2	Onstar	✓	✓	✓	✓	✓	✓	T155 T191
2003	Hummer	H2	Digital radio receiver	✓	✓	✓	✓		✓	T024
2003	Hummer	H2	Instrument panel cluster	✓	✓	✓	✓	✓		
2003	Hummer	H2	ABS	✓	✓	✓	✓	✓		

A000	1-2 Shift Adapt Data
A001	14V Power Module
A002	ABS Motor
A003	AWD Disabled-by-Malfunction Counter Reset
A004	B237D Easy Entry Seat Position Sensor - Driver Learn
A005	B237P Easy Entry Seat Position Sensor - Passenger Learn
A006	H02S Heater Resistance Learned Values Reset
A007	HVAC Actuators Learn
A008	MOST Bus Diagnostic Starting Point
A009	PTO Operation Mode
A00A	WLAN Service Set Identifier (SSID) Reset
A00B	WLAN Password Reset
A00C	Backup Battery Test
A00D	Backup Park Lock Actuator Disarming
A00E	Transmission Range Control Module Range Motor Position Learn
A00F	Transmission Learn Data
A010	Transmission Adaptive Pressure Reset

A011	Transmission Service Fast Learn
A012	Transmission Adaptive Torque Reset
A013	Transmission Adaptive Values Learn
A014	Gear Selector -N- Position Learn
A015	Transmission Solenoid Valves Calibration Preset
A016	Shift Transmission Gear
A017	Transmission Clutch 1 Return Spring Learn
A018	Transmission Clutch 1 Volume Learn
A019	Transmission Clutch 2 Return Spring Learn
A01A	Transmission Clutch 2 Volume Learn
A01B	Transmission Clutch 3 Return Spring Learn
A01C	Transmission Clutch 3 Volume Learn
A01D	Transmission Clutch 4 Return Spring Learn
A01E	Transmission Clutch 4 Volume Learn
A01F	Transmission Clutch 5 Return Spring Learn
A020	Transmission Clutch 5 Volume Learn
A021	Transmission Clutch Learn Status
A022	Transmission Adaptive Pressure Reset
A023	Transmission Learn
A024	Transmission Oil Life Reset
A025	Range Actuator Learn
A026	Manual Door Locks (-AU3)(-AU4) Without Seat Belt Pretensioner (-A70)
A027	Electric Door Locks (AU3) Without Seat Belt Pretensioner (-A70)
A028	Automatic Electric Door Locks (AU4) Without Seat Belt Pretensioner (-A70)
A029	Retained Accessory Power
A02A	DPF/Catalyst 2 Reset
A02B	DPF Service Regeneration
A02C	DPF Pressure Sensor Reset
A02D	DPF Reset
A02E	Lane Departure Warning Indicator
A02F	Distance Sensing Cruise Control Module
A030	Vehicle Health Data Upload
A031	Vehicle Direction Camera Learn
A032	Vehicle Inclination Sensor
A033	VIN Digits 10-17 Right Headlamp High Beam Control Module
A034	VIN Digits 10-17 Left Headlamp High Beam Control Module
A035	Vehicle Model
A036	Content Theft - Exterior Lamp Flash
A037	Content Theft - Horn Chirp / Door Key Cylinder Disarming
A038	Passenger Compartment Heater Coolant Control Solenoid Valve Learn
A039	Passenger Presence Sensor Learn
A03A	Catalyst 1 Reset
A03B	Catalyst Test
A03C	Catalyst Reset
A03D	BARO Sensor Reset
A03E	Manual Door Locks (-AU3)(-AU4) With Seat Belt Pretensioner (A70)
A03F	Electric Door Locks (AU3) With Seat Belt Pretensioner (A70)
A040	Automatic Electric Door Locks (AU4) With Seat Belt Pretensioner (A70)
A041	Code Index
A042	Idle Speed Adjustment
A043	Idle Learn

A044	Idle Air Control Reset
A045	Idle Speed Control Reset
A046	NOx Sensor 1 Reset
A047	NOx Sensor 2 Reset
A048	NOx Catalyst Reductant Loading Reset
A049	NOx Catalyst Reset
A04A	NOx Adsorber Catalyst Data Reset
A04B	NOx Adsorber Catalyst Reset
A04C	Gear Position Sensor Learn
A04D	Gear Selector -N- Position Learn
A04E	Backup Park Lock Actuator Arming
A04F	EV Range Reset
A050	Power Steering Softstops Learn
A051	Power Steering Softstops Reset
A052	Power Steering Pressure Sensor Learn
A053	Read LIN Bus Device ID Information
A054	Learned Values Reset
A055	Engine Oil Type Setup
A056	Engine Oil Life Reset
A057	ECM Reset
A058	Engine Serial Number
A059	Steering Wheel Angle Sensor Centering
A05A	Steering Wheel Angle Sensor Learn
A05B	Steering Wheel Angle Sensor Learn
A05C	Steering Wheel Angle Sensor Centering
A05D	Steering Wheel Angle Sensor Reset
A05E	Flywheel Learn
A05F	Exhaust Flow Control Valve Learn
A060	Exhaust Gas Temperature Sensor Learn
A061	Exhaust Gas Temperature Sensor Reset
A062	EGR Valve Learn
A063	Transfer Case Clutch Identifier
A064	Transfer Case Clutch Overtemperature Counter Reset
A065	Assist Step Motor Learn
A066	Reset PTO Inhibit and Disengage History
A067	Power Steering Softstops Reset
A068	Steering Wheel Angle Sensor Reset
A069	Reset Functions
A06A	Learned Values Reset
A06B	Copy and Restore Tire Pressure Monitoring Information
A06C	High Pressure Fuel Pump Learn
A06D	High Pressure Fuel Correction Reset
A06E	Personalization
A06F	Yaw Rate Sensor Learn
A070	Yaw Rate Sensor Reset
A071	Rear Differential Clutch Service Calibration Setup
A072	Rear Suspension Position Sensor Trim Height
A073	Ambient Air Temperature Calculation Reset
A074	Ambient Air Temperature Instant Update
A075	Reductant Fluid Tank Level Reset
A076	Reductant Injector Reset

A077	Reductant System Data Reset
A078	Reductant System Reset
A079	Restore Factory Settings
A07A	Hybrid/EV Battery Contactor Open Reasons Reset
A07B	Hybrid/EV Battery Pack Charging Adaptive Learn Reset
A07C	Hybrid/EV Battery Pack Coolant Control Solenoid Valve Learn
A07D	Hybrid/EV Battery Pack Capacity Learn
A07E	Hybrid/EV Battery Pack Capacity Reset
A07F	Hybrid/EV Battery Pack Data Reset
A080	Calculated Fuel Economy Setup
A081	HVAC Afterblow Configuration
A082	H02S Learn
A083	H02S Learned Values Reset
A084	H02S Heater Learn
A085	APP Learn
A086	Reset High Voltage Disable Request After Crash Event Detected
A087	Inspection/Maintenance Data
A088	Depressurize System
A089	Copy Injector Flow Identifiers from ECM to Glow Plug Control Module
A08A	Copy Injector Flow Identifiers from Glow Plug Control Module to ECM
A08B	Throttle Body Idle Air Flow Compensation Reset
A08C	Throttle Position Learn
A08D	Throttle Actuator Reset
A08E	Panic Alarm
A08F	Intake Air Flow Valve Learn
A090	Intake System Learned Values Reset
A091	Speedometer Calibration
A092	Liftgate Maximum Open Position Learn
A093	Neutral Position Sensor Learn
A094	A/C Compressor Speed
A095	A/C Indicator
A096	Control Module Reset
A097	Control Module Self-Test
A098	Control Module Self-Test
A099	Clutch Purge
A09A	Excessive Clutch Slip Data Reset
A09B	Clutch Control Module/Rear Drive System Matching Identification Setup
A09C	Clutch Pedal Position Learn
A09D	Clutch Position Learn
A09E	Odometer Setup
A09F	Tire Type/Pressure Selection
AOA0	Tire Pressure Sensors Learn
AOA1	Key Fob 1
AOA2	Key Fob 2
AOA3	Key Fob 3
AOA4	Key Fob 4
AOA5	Key Fob 5
AOA6	Key Fob 6
AOA7	Key Fob 7
AOA8	Key Fob 8
AOA9	Hands-Free Liftgate Sensor Control Module Calibration

A0AA	Module Setup
A0AB	Exhaust Aftertreatment Fuel Injector Reset
A0AC	Configure New Module
A0AD	Injector Flow Rate Programming
A0AE	Yaw Rate Sensor Reset
A0AF	Yaw Rate Sensor Learn
A0B0	Average Fuel Age Reset
A0B1	Enable Deployment Loops
A0B2	Cylinder 1 Injector Flow Identifier
A0B3	Cylinder 1 Fuel Injector Correction Value Reset
A0B4	Cylinder 2 Injector Flow Identifier
A0B5	Cylinder 2 Fuel Injector Correction Value Reset
A0B6	Cylinder 3 Injector Flow Identifier
A0B7	Cylinder 3 Fuel Injector Correction Value Reset
A0B8	Cylinder 4 Injector Flow Identifier
A0B9	Cylinder 4 Fuel Injector Correction Value Reset
A0BA	Cylinder 5 Injector Flow Identifier
A0BB	Cylinder 5 Fuel Injector Correction Value Reset
A0BC	Cylinder 6 Injector Flow Identifier
A0BD	Cylinder 6 Fuel Injector Correction Value Reset
A0BE	Cylinder 7 Injector Flow Identifier
A0BF	Cylinder 7 Fuel Injector Correction Value Reset
A0C0	Cylinder 8 Injector Flow Identifier
A0C1	Cylinder 8 Fuel Injector Correction Value Reset
A0C2	Cylinder Deactivation Exhaust Flow Control Valve Learn
A0C3	Headlamp Leveling Sensor Learn
A0C4	Frontview Camera Learn
A0C5	Frontview Camera Learn
A0C6	Front Suspension Position Sensor Trim Height
A0C7	Erase/Program All Key Fobs
A0C8	Clear Transmission Counters
A0C9	Clear Passenger Window Learned Values
A0CA	Clear Secured High Voltage DTCs
A0CB	Clear Driver Window Learned Values
A0CC	Erase All Key Fobs
A0CD	Clear Disable History Data
A0CE	Clear Right Rear Window Learned Values
A0CF	Clear Active Pull Compensation Learned Limits
A0D0	Clear Left Rear Window Learned Values
A0D1	Crankshaft Position Variation Learn
A0D2	Crankshaft Position Reluctor Ring Learn
A0D3	Cancel Camera Learn
A0D4	Fuel Pump Trim Reset
A0D5	Fuel Composition Reset
A0D6	Fuel Rail Pressure Relief Valve Learned Values Reset
A0D7	Fuel Rail Pressure Sensor Reset
A0D8	Fuel Rail Pressure Sensor or Fuel Rail Learn
A0D9	Fuel Trim Reset
A0DA	Fuel Economy Reset
A0DB	Fuel Filter Life Reset
A0DC	Fuel Injector Correction Value Preset

A0DD	Fuel Injection Small Quantity Data Reset
A0DE	Fuel Injection Small Quantity Learn
A0DF	Fuel Trim Reset
A0E0	Fuel Pressure Regulator Learn
A0E1	Brake Pressure Sensor Calibration
A0E2	Erase Valet Mode Code
A0E3	Manual Door Locks (-AU3) (-AU4)
A0E4	Manual Service Disconnect Fuse Life Reset
A0E5	Park Brake Calibration
A0E6	Data Display
A0E7	Digital Radio Receiver Control Module
A0E8	All Cylinders Fuel Injector Correction Value Reset
A0E9	Tire Pressure Sensor Signal Reset
A0EA	Tire Pressure Selection
A0EB	Add/Replace Key Fobs
A0EC	Stop/Start Capacitor State of Health Reset
A0ED	Turbocharger Learn
A0EE	Turbocharger Learned Values Reset
A0EF	Next Available Slot
A0F0	Display ECM and Glow Plug Control Module Injector Flow Identifiers
A0F1	Info Display/Infotainment Faceplate Reset
A0F2	Battery Sensor Module Learn
A0F3	Battery Sensor Module Learn
A0F4	Energy Storage Capacitor Learn
A0F5	Suspension Position Sensor Trim Height
A0F6	Option Configuration
A0F7	CAN Bus Configuration Learn
A0F8	Transmission Adaptive Values Learn
A0F9	VIN Learn
A0FA	Power Steering Softstops Learn
A0FB	Learn Functions
A0FC	Throttle Position Learn
A0FD	Inlet Solenoid Valves Learn
A0FE	Liftgate Maximum Open Position Learn
A0FF	CO Adjust
A100	Calculated Fuel Economy Setup
A101	Glow Plug Learn
A102	Remote Vehicle Start Disable History Reset
A103	Remote Vehicle Speed Limiting Reset
A104	Long Range Radar Sensor Module Learn
A105	Setup SDM Part Number in BCM
A106	DC Charging Disabled Reset
A107	Brake Pedal Position Sensor Learn
A108	Brake Hydraulics Sensors Learn
A109	MAF Sensor Learn
A10A	Reset History Buffer
A10B	Reset Teen Driver Key PIN
A10C	Reset Event Records
A10D	Reset Manufacturer Enable Counter
A10E	Proactive Alerts
A10F	Parking Assist Sensor Learn

A110	Park Brake Reset
A111	Steering Gear Learned Values Reset
A112	Steering Gear Replacement Procedure
A113	Assembly Plant Mode
A114	Automatic Braking Active Signal
A115	Adaptive Pressure Control Learn
A116	Longitudinal Acceleration Sensor Reset
A117	Assembly Plant Emission and Fuel Economy Test
S001	Brake Pedal Position Sensor Learn
S002	Headlamp Leveling Sensor Learn
S003	Erase/Program All Key Fobs
S004	Next Available Slot
S005	Key Fob 1
S006	Key Fob 2
S007	Key Fob 3
S008	Key Fob 4
S009	Key Fob 5
S010	Key Fob 6
S011	Key Fob 7
S012	Key Fob 8
S013	Battery Sensor Module Learn
S014	Clear Driver Window Learned Values
S015	Clear Passenger Window Learned Values
S016	Clear Left Rear Window Learned Values
S017	Clear Right Rear Window Learned Values
S018	Read LIN Bus Device ID Information
S019	Tire Pressure Sensors Learn
S020	Tire Pressure Sensor Signal Reset
S021	Tire Type/Pressure Selection
S022	CAN Bus Configuration Learn
S023	Transmission Service Fast Learn
S024	Configure New Module
S025	Fuel Trim Reset
S026	Crankshaft Position Variation Learn
S027	H02S Heater Learn
S028	Idle Learn
S029	Engine Oil Life Reset
S030	Remote Vehicle Start Disable History Reset
S031	Adjustable Pedals Softstops Learn
S032	HVAC Actuators Learn
S033	HVAC Afterblow Configuration
S034	Brake Pressure Sensor Calibration
S035	Steering Wheel Angle Sensor Learn
S036	Yaw Rate Sensor Learn
S037	Park Brake Calibration
S038	Suspension Position Sensor Trim Height
S039	Remote Vehicle Speed Limiting Reset
S040	Vehicle Health Data Upload
S041	WLAN Password Reset
S042	WLAN Service Set Identifier (SSID) Reset
S043	Passenger Presence Sensor Learn

S044	Clutch Pedal Position Learn
S045	Neutral Position Sensor Learn
S046	Fuel Pump Trim Reset
S047	Steering Wheel Angle Sensor Centering
S048	Transmission Adaptive Pressure Reset
S049	Liftgate Maximum Open Position Learn
S050	Clear Disable History Data
S051	Frontview Camera Learn
S052	Ambient Air Temperature Instant Update
S053	Setup SDM Part Number in BCM
S054	Erase All Key Fobs
S055	Clutch Control Module/Rear Drive System Matching Identification Setup
S056	Digital Radio Receiver Control Module
S057	Gear Selector -N- Position Learn
S058	Fuel Composition Reset
S059	Stop/Start Capacitor State of Health Reset
S060	AWD Disabled-by-Malfunction Counter Reset
S061	Long Range Radar Sensor Module Learn
S062	Hands-Free Liftgate Sensor Control Module Calibration
S063	Erase Valet Mode Code
S064	Control Module Reset
S065	Info Display/Infotainment Faceplate Reset
S066	Exhaust Flow Control Valve Learn
S067	Cylinder Deactivation Exhaust Flow Control Valve Learn
S068	Distance Sensing Cruise Control Module
S069	Adaptive Pressure Control Learn
S070	Yaw Rate Sensor Reset
S071	Gear Position Sensor Learn
S072	Transfer Case Clutch Identifier
S073	Transfer Case Clutch Overtemperature Counter Reset
S074	Vehicle Model
S075	Power Steering Softstops Learn
S076	Rear Suspension Position Sensor Trim Height
S077	Front Suspension Position Sensor Trim Height
S078	Reset History Buffer
S079	Rear Differential Clutch Service Calibration Setup
S080	Range Actuator Learn
S081	Parking Assist Sensor Learn
S082	Learned Values Reset
S083	Hybrid/EV Battery Pack Coolant Control Solenoid Valve Learn
S084	Hybrid/EV Battery Pack Capacity Learn
S085	Passenger Compartment Heater Coolant Control Solenoid Valve Learn
S086	Fuel Economy Reset
S087	Hybrid/EV Battery Contactor Open Reasons Reset
S088	Hybrid/EV Battery Pack Charging Adaptive Learn Reset
S089	Hybrid/EV Battery Pack Data Reset
S090	Manual Service Disconnect Fuse Life Reset
S091	Average Fuel Age Reset
S092	Electronic Brake Control Module Learn
S093	Steering Wheel Angle Sensor Reset
S094	Fuel Rail Pressure Relief Valve Learned Values Reset

S095	Idle Speed Control Reset
S096	ECM Reset
S097	Speedometer Calibration
S098	Retained Accessory Power
S099	Throttle Position Learn
S100	Automatic Braking Active Signal
S101	Transmission Oil Life Reset
S102	APP Learn
S103	Crankshaft Position Reluctor Ring Learn
S104	DPF Pressure Sensor Learn
S105	EGR Valve Learn
S106	Exhaust Gas Temperature Sensor Learn
S107	Flvwheel Learn
S108	Fuel Rail Pressure Sensor or Fuel Rail Learn
S109	H02S Learn
S110	Intake Air Flow Valve Learn
S111	MAF Sensor Learn
S112	Turbocharger Learn
S113	DPF Reset
S114	Glow Plug Control Module Reset
S115	DPF Service Regeneration
S116	Inspection/Maintenance Data
S117	Calculated Fuel Economy Setup
S118	Injector Flow Rate Programming
S119	Ambient Air Temperature Calculation Reset
S120	Catalyst 1 Reset
S121	DPF/Catalyst 2 Reset
S122	DPF Pressure Sensor Reset
S123	Engine Serial Number
S124	Fuel Filter Life Reset
S125	NOx Catalyst Reset
S126	NOx Catalyst Reductant Loading Reset
S127	NOx Sensor 1 Reset
S128	NOx Sensor 2 Reset
S129	Reductant Fluid Tank Level Reset
S130	Reductant Injector Reset
S131	Reductant System Data Reset
S132	Reductant System Reset
S133	Display ECM and Glow Plug Control Module Injector Flow Identifiers
S134	Cylinder 1 Injector Flow Identifier
S135	Cylinder 2 Injector Flow Identifier
S136	Cylinder 3 Injector Flow Identifier
S137	Cylinder 4 Injector Flow Identifier
S138	Cylinder 5 Injector Flow Identifier
S139	Cylinder 6 Injector Flow Identifier
S140	Cylinder 7 Injector Flow Identifier
S141	Cylinder 8 Injector Flow Identifier
S142	Copy Injector Flow Identifiers from Glow Plug Control Module to ECM
S143	Copy Injector Flow Identifiers from ECM to Glow Plug Control Module
S144	Cylinder 1 Fuel Injector Correction Value Reset
S145	Cylinder 2 Fuel Injector Correction Value Reset

S146	Cylinder 3 Fuel Injector Correction Value Reset
S147	Cylinder 4 Fuel Injector Correction Value Reset
S148	Cylinder 5 Fuel Injector Correction Value Reset
S149	Cylinder 6 Fuel Injector Correction Value Reset
S150	Cylinder 7 Fuel Injector Correction Value Reset
S151	Cylinder 8 Fuel Injector Correction Value Reset
S152	All Cylinders Fuel Injector Correction Value Reset
S153	Fuel Injector Correction Value Preset
S154	Glow Plug Learn
S155	CO Adjust
S156	Clear Secured High Voltage DTCs
S157	On-Board Jump Assist Counter Reset
S158	Reset PTO Inhibit and Disengage History
S159	Restore Factory Settings
S160	DC Charging Disabled Reset
S161	EV Range Reset
S162	Idle Speed Adjustment
S163	Transmission Adaptive Torque Reset
S164	Fuel Rail Pressure Sensor Reset
S165	Power Steering Softstops Reset
S166	Transmission Adaptive Values Learn
S167	Turbocharger Learned Values Reset
S168	Vehicle Direction Camera Learn
S169	Fuel Pressure Regulator Learn
S170	Fuel Pressure Regulator Fast Learn
S171	Intake Manifold Runner Control Valve Learn
S172	High Pressure Fuel Pump Learn
S173	Boost Pressure Sensor Learn
S174	Cylinder 1 Injector
S175	Cylinder 2 Injector
S176	Cylinder 3 Injector
S177	Cylinder 4 Injector
S178	Vehicle Inclination Sensor
S179	Code Index
S180	Fuel Injection Small Quantity Data Reset
S181	Fuel Injection Small Quantity Learn
S182	Catalyst Reset
S183	Exhaust Gas Temperature Sensor Reset
S184	Idle Air Control Reset
S185	Throttle Actuator Reset
S186	Preferred Roaming List Update
S187	Module Setup
S188	Not Linked
S189	Linked
S190	Option Configuration
S191	Audio Code Index
S192	Personalization
S193	Total Fuel Consumed Reset
S194	Automatic Electric Door Locks (AU4) With Seat Belt Pretensioner (A70)
S195	Automatic Electric Door Locks (AU4) Without Seat Belt Pretensioner (-A70)
S196	Electric Door Locks (AU3) With Seat Belt Pretensioner (A70)

S197	Electric Door Locks (AU3) Without Seat Belt Pretensioner (-A70)
S198	Manual Door Locks (-AU3) (-AU4)
S199	Enable Deployment Loops
S200	Clear Transmission Counters
S201	Clutch Position Learn
S202	Clutch Purge
S203	Depressurize System
S204	Transmission Learn
S205	Fuel Injector Learn
S206	Low Speed Target Pressure
S207	High Speed Target Pressure
S208	Minimum Telltale Pressure
S209	Safe Telltale Pressure
S210	Low Speed Threshold
S211	High Speed Threshold
S212	Setup Module DTCs
S213	Reset
T001	Crankshaft pos. variation learn
T002	PRL update
T003	Set language
T004	Stolen vehicle slowdown clear
T005	Setup SDM primary key in BCM
T006	Inclination sensor enable
T007	BPP sensor calibration
T008	Afterblow option
T009	Data recorder
T010	Audiopilot test
T011	Eject
T012	TV region lockout
T013	TV region select
T014	Automated bleed
T015	CO adjust (leaded fuel only)
T016	Change to neutral mode
T017	DPF reset replace ECM
T018	Learn sensor location
T019	Learn sen loc with tire press tool
T020	Re-zero passenger presence system
T021	Copy and paste TPM information
T022	Tire type/pressure selection
T023	Setup SDM part number in BCM
T024	DRR setup
T025	Passenger presence sensor learn
T026	Auto. door unlock
T027	Key fob in veh. warning
T028	Passive door lock
T029	Setup new RCCLR
T030	Column calibration
T031	Setup new HVAC
T032	Radio setup
T033	VIN relearn
T034	HVAC ambient temp. disp.

T035	Power window motor programming
T036	Digital radio receiver
T037	Radio RPO selection
T038	CCM RDS matching ID
T039	Clear manufacturer enable counter
T040	Bump stop
T041	Acceleration sensor reset
T042	BMC prim. piston pos. relearn
T043	EBCM relearn
T044	Steering pos./torque sensor cal.
T045	Preload passenger presence system
T046	Engine serial number
T047	Capture & restore data
T048	Injector flow rate programming
T049	Setup new ROS
T050	PTO options
T051	ECM PTO options
T052	Reset ECM
T053	Reset immobilizer
T054	Reset vehicle build settings
T055	Middle east speed bias (UC2)
T056	Brazil units (CV2)
T057	Module setup
T058	Setup SDM serial number in BCM
T059	Program VIN
T060	Tuner calibration
T061	Navigation option
T062	Transmission type
T063	Disable/enable secure car
T064	Auto. door unlock trigger
T065	Delayed locking
T066	Passive door unlock
T067	Setup SDM part number in IPM
T068	Disable dtc(s)
T069	Bluetooth
T070	System configuration
T071	PSCM calibration procedure
T072	New actuator setup procedure
T073	Program phone number
T074	Hybrid batt. charge hrs.
T075	Hybrid batt. discharge amp hrs.
T076	Erase transponder-keys
T077	Seat belt chime
T078	Learn tire pressure sensors
T079	Engine shutdown
T080	Country code
T081	Chime level
T082	Loud chime volume
T083	Loud amp chime volume
T084	Normal chime volume
T085	Normal amp chime volume

T086	AM pass A stopping
T087	FM pass A stopping
T088	IPC setup
T089	U85
T090	UZ6
T091	Driver info. display option
T092	Calibrate module
T093	VCIM setup
T094	Optional modules
T095	Region code options
T096	New tire/wheel base/booster info.
T097	Setup SDM part number in IPC
T098	Setup SDM serial number in IPC
T099	Acquisition setting
T100	Step 1
T101	Step 2
T102	North america
T103	Middle east
T104	Steering tuning selection
T105	Yaw rate sensor recalibration
T106	BCM copy and flash
T107	Reduction of pressure drive
T108	IPC recalibration
T109	Injector flow rates
T110	Vehicle speed limit
T111	Navigation voice
T112	Setup SDM serial number in DIM
T113	Setup SDM part number in DIM
T114	LONG WAVE
T115	Traffic seek
T116	Vehicle type
T117	Door zone module VIN relearn
T118	Intrusion sensor step 1
T119	Inclination sensor step 1
T120	Alarm siren module step 1
T121	Tap shift
T122	Point of sale
T123	Miscellaneous options 2
T124	Variable effort steering
T125	Right hand drive
T126	Personalization option
T127	Universal theft deterrent
T128	Intrusion sensor step 2
T129	Inclination sensor step 2
T130	Alarm siren module step 2
T131	Twilight sentinel
T132	Front fog lamp type
T133	DRL option
T134	Perimeter lighting
T135	TPM option enable
T136	New VIN

T137	Tire rotation procedure
T138	Afterblow
T139	Recalibration
T140	Accessory wheel size setup
T141	Clear memory and program all fobs
T142	CTD operation
T143	Fob feedback
T144	Theftlock LED
T145	Option configuration
T146	Fuel injector balance
T147	Buckle up reminder
T148	Pre-alarm option
T149	Solenoid test
T150	Cruise control options
T151	Exhaust brake options
T152	Gear down protection options
T153	Oil capacity options
T154	DPM setup
T155	Preferred system setting
T156	ALC trimset
T157	Dimming delay
T158	Export ID
T159	Language
T160	AM distant
T161	AM local
T162	FM distant
T163	FM local
T164	Fob button hold time
T165	Electronic suspension control
T166	Nav. radio theft
T167	Oil life monitor
T168	Axle ratio
T169	Fast learn adapt. process
T170	BCM reprogramming
T171	Setup IPC
T172	Miscellaneous options 1
T173	Automatic/manual HVAC options
T174	Magna steer option
T175	Temperature offset
T176	Load management option
T177	Disable belt tower dtc's
T178	Navigation radio present
T179	Military or standard time
T180	Tire pressure warning
T181	Tire pressure monitor
T182	Performance shift
T183	Key fob personalization
T184	SCLM setup
T185	DTC mask
T186	Accessory inflator
T187	Middle east region mode

T188	Tire rotation/sensor replacement
T189	Setup RFA
T190	Synchronize IPC and SIR
T191	Setup new onstar
T192	Electronic serial number
T193	Update HVAC calcs. in DIM
T194	LH drvr. personalization
T195	RH drvr. personalization
T196	BCM RPO reprogram
T197	Twilight sentinel reprogram
T198	Seed and key relearn
T199	Setup new VTD module
T200	Export option
T201	Valet lockout
T202	Compact disc
T203	Cellular telephone
T204	A/C compressor calibration
T205	Option A
T206	Option B
T207	Option C
T208	Option D
T209	Option E
T210	VIN information
T211	Bass frequency response
T212	Steering angle sensor centering
T213	Heater recalibration
T214	Door lock
T215	Door unlock
T216	Door jamb switch
T217	Brake pedal
T218	Ignition switch
T219	Option no. 0
T220	HVAC recal. download
T221	TV present
T222	Bose display
T223	Isolation valve test
T224	Option no. 1
T225	Fob 1 option 2
T226	Fob 1 option 3
T227	Fob 2 option 1
T228	Fob 2 option 2
T229	Fob 2 option 3
T230	Option no. 2
T231	Service spark retard reset
T232	Odometer reset
T233	Gauge setup
T234	Synchronize TTM and MSM
T235	Synchronize MSM and TTM