

## Shenzhen Xtooltech Co., Ltd

## Dongfeng Fengguang function list V26.23

Description: O: All support by OBD

●: All support by OBD(Need accessories)

×: Not support

△: Partially support by OBD (Need accessories) /:Unnecessary

□: All support (Disassembly)
■: Partially support (Disassembly)
②: Conditional support

Make	Mode1	Year/Type	Кеу Туре	Read PIN	Add Keys	All Keys Lost	Programme Remote	Other Functions
Dongfeng Fengguang		Type 1 (old style)			0	0	/	1. Programming ESCL 2. Programming PEPS 3. Programming ECM 4. Programming complete
Dongfeng Fengguang	370	Type 2 (new)	With Smart	/	0	0		1. Number of keys 2. Programming BCM
Dongfeng Fengguang	370		Without Smart	/	0	0	0	1. Number of keys 2. Programming BCM 3. Reset BCM 4. Programming EMS
Dongfeng Fengguang	370 annual section		With Smart	/	0	0	/	1. Programming ESCL 2. Programming PEPS 3. Programming EMS
Dongfeng Fengguang	370 annual section		Without Smart	/	0	0	0	1. Number of keys 2. Programming BCM 3. Reset BCM 4. Programming EMS
Dongfeng Fengguang	500		With Smart	/	0	0	/	1. Number of keys
Dongfeng Fengguang	500		Without Smart	/	0	0	0	1. Number of keys
Dongfeng Fengguang	560		With Smart	/	0	0	/	1. Number of keys
Dongfeng Fengguang	560		Without Smart	/	0	0	0	1. Number of keys
Dongfeng Fengguang	580	Type 1 (old style)	With Smart	/	0	0	/	1. Programming ESCL 2. Programming PEPS 3. Programming ECM 4. Programming complete
Dongfeng Fengguang	580	Type 2 (new)	With Smart	/	0	0	/	1. Number of keys 2. Programming BCM
Dongfeng Fengguang	580		Without Smart	/	0	0	0	1. Number of keys 2. Programming BCM 3. Reset BCM 4. Programming EMS
Dongfeng Fengguang	580HEV		With Smart	/	0	0	/	1. Detecting key status 2. Number of keys 3. programming ESCL
Dongfeng Fengguang	580PHEV		With Smart	/	0	0	/	1. Detecting key status 2. Number of keys 3. programming ESCL
Dongfeng Fengguang	580PRO		With Smart	/	0	0	/	1. Detecting key status 2. Number of keys 3. programming ESCL
Dongfeng Fengguang	IX5		With Smart	/	0	0	/	1. Number of keys 2. Programming BCM
Dongfeng Fengguang	IX5		Without Smart	/	0	0	0	1. Number of keys 2. Programming BCM 3. Reset BCM 4. Programming EMS
Dongfeng Fengguang	iX5 Power upgrade		With Smart	/	0	0	/	1. Number of keys 2. Programming BCM
Dongfeng Fengguang	IX7		With Smart	/	0	0	/	1. Number of keys 2. Programming BCM
Dongfeng Fengguang	S560		With Smart	/	0	0	/	1. Number of keys 2. Programming BCM
Dongfeng Fengguang	S560		Without Smart	/	0	0	0	1. Number of keys 2. Programming BCM 3. Reset BCM 4. Programming EMS
Dongfeng Fengguang	Ruichi E3		With Smart	/	0	0	/	1. Detecting key status 2. Number of keys 3. programming ESCL