

## Immobiliser Function List

Software Version: 26.68

Automaker	Model/Protocol	System	Function
JAC	S3	Immobiliser(DIAS)	<ol style="list-style-type: none"><li>1. ECU identification</li><li>2. Fault codes</li><li>3. Erase DTC</li><li>4. Live data</li><li>5. Program function<ol style="list-style-type: none"><li>(1) Add a key</li><li>(2) Erase keys</li><li>(3) Program new system</li><li>(4) Replace immobiliser ECU</li><li>(5) Replace engine ECU</li><li>(6) Reset immobiliser</li><li>(7) Reset engine ECU</li><li>(8) Read VIN</li><li>(9) Check key</li><li>(10) Check engine ECU</li><li>(11) Program engine VIN</li><li>(12) Program immobiliser VIN</li><li>(13) Lock immobiliser</li></ol></li><li>6. Actuation test</li></ol>

JAC	S3	Immobiliser(Delphi)	<ol style="list-style-type: none"> <li>1. ECU identification</li> <li>2. Fault codes</li> <li>3. Erase DTC</li> <li>4. Live data</li> <li>5. Set security code             <ol style="list-style-type: none"> <li>(1)Input security code</li> <li>(2)Set security code</li> </ol> </li> <li>6. Program function             <ol style="list-style-type: none"> <li>(1)Program new system</li> <li>(2)Replace immobiliser ECU</li> <li>(3)Replace engine ECU</li> <li>(4)Program keys</li> <li>(5)Program engine VIN</li> <li>(6)Program immobiliser VIN</li> <li>(7)Reset engine ECU</li> <li>(8)Reset immobiliser</li> <li>(9)Erase keys</li> </ol> </li> </ol>
JAC	S5 1.5T	Immobiliser	<ol style="list-style-type: none"> <li>1. Number of keys&gt;</li> <li>2. Add a old key</li> <li>3. Add a new key</li> <li>4. Erase keys</li> <li>5. Reset immobiliser</li> <li>6. Replace immobiliser</li> <li>7. Reset engine ECU</li> <li>8. Replace engine ECU</li> <li>9. Program all new systems</li> </ol>
JAC	S5 2.0T	Immobiliser	<ol style="list-style-type: none"> <li>1.Program ESCL</li> <li>2.Add the new keys</li> <li>3.Add the old keys</li> <li>4.Erase keys</li> <li>5.Program immobiliser</li> <li>6.Program engine ECU</li> <li>7.Reset immobiliser</li> <li>8.Reset engine ECU</li> </ol>

JAC	M3	Immobiliser(Delphi)	<ol style="list-style-type: none"> <li>1. ECU identification</li> <li>2. Fault codes</li> <li>3. Erase DTC</li> <li>4. Live data</li> <li>5. Set security code             <ol style="list-style-type: none"> <li>(1)Input security code</li> <li>(2)Set security code</li> </ol> </li> <li>6. Program function             <ol style="list-style-type: none"> <li>(1)Program new system</li> <li>(2)Replace immobiliser ECU</li> <li>(3)Replace engine ECU</li> <li>(4)Program keys</li> <li>(5)Program engine VIN</li> <li>(6)Program immobiliser VIN</li> <li>(7)Reset engine ECU</li> <li>(8)Reset immobiliser</li> <li>(9)Erase keys</li> </ol> </li> </ol>
JAC	Binyue	Immobiliser(Delphi)	<ol style="list-style-type: none"> <li>1. ECU identification</li> <li>2. Fault codes</li> <li>3. Erase DTC</li> <li>4. Live data</li> </ol>
JAC	Tongyue	Immobiliser(Delphi)	<ol style="list-style-type: none"> <li>1. ECU identification</li> <li>2. Fault codes</li> <li>3. Erase DTC</li> <li>4. Live data</li> <li>5. Set security code             <ol style="list-style-type: none"> <li>(1)Input security code</li> <li>(2)Set security code</li> </ol> </li> <li>6. Program function             <ol style="list-style-type: none"> <li>(1)Program new system</li> <li>(2)Replace immobiliser ECU</li> <li>(3)Replace engine ECU</li> <li>(4)Program keys</li> <li>(5)Program engine VIN</li> <li>(6)Program immobiliser VIN</li> <li>(7)Reset engine ECU</li> <li>(8)Reset immobiliser</li> <li>(9)Erase keys</li> </ol> </li> </ol>

JAC	Tongyue	Immobiliser(DIAS)	<ol style="list-style-type: none"> <li>1. ECU identification</li> <li>2. Fault codes</li> <li>3. Erase DTC</li> <li>4. Live data</li> <li>5. Program function             <ol style="list-style-type: none"> <li>(1) Add a key</li> <li>(2) Erase keys</li> <li>(3) Program new system</li> <li>(4) Replace immobiliser ECU</li> <li>(5) Replace engine ECU</li> <li>(6) Reset immobiliser</li> <li>(7) Reset engine ECU</li> <li>(8) Read VIN</li> <li>(9) Check key</li> <li>(10) Check engine ECU</li> <li>(11) Program engine VIN</li> <li>(12) Program immobiliser VIN</li> <li>(13) Lock immobiliser</li> </ol> </li> <li>6. Actuation test</li> </ol>
JAC	Heyue RS	Immobiliser(Delphi)	<ol style="list-style-type: none"> <li>1. ECU identification</li> <li>2. Fault codes</li> <li>3. Erase DTC</li> <li>4. Live data</li> <li>5. Set security code             <ol style="list-style-type: none"> <li>(1)Input security code</li> <li>(2)Set security code</li> </ol> </li> <li>6. Program function             <ol style="list-style-type: none"> <li>(1)Program new system</li> <li>(2)Replace immobiliser ECU</li> <li>(3)Replace engine ECU</li> <li>(4)Program keys</li> <li>(5)Program engine VIN</li> <li>(6)Program immobiliser VIN</li> <li>(7)Reset engine ECU</li> <li>(8)Reset immobiliser</li> <li>(9)Erase keys</li> </ol> </li> </ol>

JAC	Heyue RS	Immobiliser(DIAS)	<ol style="list-style-type: none"> <li>1. ECU identification</li> <li>2. Fault codes</li> <li>3. Erase DTC</li> <li>4. Live data</li> <li>5. Program function             <ol style="list-style-type: none"> <li>(1) Add a key</li> <li>(2) Erase keys</li> <li>(3) Program new system</li> <li>(4) Replace immobiliser ECU</li> <li>(5) Replace engine ECU</li> <li>(6) Reset immobiliser</li> <li>(7) Reset engine ECU</li> <li>(8) Read VIN</li> <li>(9) Check key</li> <li>(10) Check engine ECU</li> <li>(11) Program engine VIN</li> <li>(12) Program immobiliser VIN</li> <li>(13) Lock immobiliser</li> </ol> </li> <li>6. Actuation test</li> </ol>
JAC	Heyue car	Immobiliser(Delphi)	<ol style="list-style-type: none"> <li>1. ECU identification</li> <li>2. Fault codes</li> <li>3. Erase DTC</li> <li>4. Live data</li> <li>5. Set security code             <ol style="list-style-type: none"> <li>(1)Input security code</li> <li>(2)Set security code</li> </ol> </li> <li>6. Program function             <ol style="list-style-type: none"> <li>(1)Program new system</li> <li>(2)Replace immobiliser ECU</li> <li>(3)Replace engine ECU</li> <li>(4)Program keys</li> <li>(5)Program engine VIN</li> <li>(6)Program immobiliser VIN</li> <li>(7)Reset engine ECU</li> <li>(8)Reset immobiliser</li> <li>(9)Erase keys</li> </ol> </li> </ol>

JAC	Heyue car	Immobiliser(DIAS)	<ol style="list-style-type: none"> <li>1. ECU identification</li> <li>2. Fault codes</li> <li>3. Erase DTC</li> <li>4. Live data</li> <li>5. Program function             <ol style="list-style-type: none"> <li>(1) Add a key</li> <li>(2) Erase keys</li> <li>(3) Program new system</li> <li>(4) Replace immobiliser ECU</li> <li>(5) Replace engine ECU</li> <li>(6) Reset immobiliser</li> <li>(7) Reset engine ECU</li> <li>(8) Read VIN</li> <li>(9) Check key</li> <li>(10) Check engine ECU</li> <li>(11) Program engine VIN</li> <li>(12) Program immobiliser VIN</li> <li>(13) Lock immobiliser</li> </ol> </li> <li>6. Actuation test</li> </ol>
JAC	Yueyue	Immobiliser(Delphi)	<ol style="list-style-type: none"> <li>1. ECU identification</li> <li>2. Fault codes</li> <li>3. Erase DTC</li> <li>4. Live data</li> <li>5. Set security code             <ol style="list-style-type: none"> <li>(1)Input security code</li> <li>(2)Set security code</li> </ol> </li> <li>6. Program function             <ol style="list-style-type: none"> <li>(1)Program new system</li> <li>(2)Replace immobiliser ECU</li> <li>(3)Replace engine ECU</li> <li>(4)Program keys</li> <li>(5)Program engine VIN</li> <li>(6)Program immobiliser VIN</li> <li>(7)Reset engine ECU</li> <li>(8)Reset immobiliser</li> <li>(9)Erase keys</li> </ol> </li> </ol>

JAC	Yueyue	Immobiliser(DIAS)	<ol style="list-style-type: none"> <li>1. ECU identification</li> <li>2. Fault codes</li> <li>3. Erase DTC</li> <li>4. Live data</li> <li>5. Program function             <ol style="list-style-type: none"> <li>(1) Add a key</li> <li>(2) Erase keys</li> <li>(3) Program new system</li> <li>(4) Replace immobiliser ECU</li> <li>(5) Replace engine ECU</li> <li>(6) Reset immobiliser</li> <li>(7) Reset engine ECU</li> <li>(8) Read VIN</li> <li>(9) Check key</li> <li>(10) Check engine ECU</li> <li>(11) Program engine VIN</li> <li>(12) Program immobiliser VIN</li> <li>(13) Lock immobiliser</li> </ol> </li> <li>6. Actuation test</li> </ol>
JAC	Heyue A30 MT	Immobiliser(DIAS)	<ol style="list-style-type: none"> <li>1. ECU identification</li> <li>2. Fault codes</li> <li>3. Erase DTC</li> <li>4. Live data</li> <li>5. Program function             <ol style="list-style-type: none"> <li>(1) Add a key</li> <li>(2) Erase keys</li> <li>(3) Program new system</li> <li>(4) Replace immobiliser ECU</li> <li>(5) Replace engine ECU</li> <li>(6) Reset immobiliser</li> <li>(7) Reset engine ECU</li> <li>(8) Read VIN</li> <li>(9) Check key</li> <li>(10) Check engine ECU</li> <li>(11) Program engine VIN</li> <li>(12) Program immobiliser VIN</li> <li>(13) Lock immobiliser</li> </ol> </li> <li>6. Actuation test</li> </ol>

JAC	Heyue A30 CVT	Immobiliser(DIAS)	<ol style="list-style-type: none"> <li>1. ECU identification</li> <li>2. Fault codes</li> <li>3. Erase DTC</li> <li>4. Live data</li> <li>5. Program function <ol style="list-style-type: none"> <li>(1) Add a key</li> <li>(2) Erase keys</li> <li>(3) Program new system</li> <li>(4) Replace immobiliser ECU</li> <li>(5) Replace engine ECU</li> <li>(6) Reset immobiliser</li> <li>(7) Reset engine ECU</li> <li>(8) Read VIN</li> <li>(9) Check key</li> <li>(10) Check engine ECU</li> <li>(11) Program engine VIN</li> <li>(12) Program immobiliser VIN</li> <li>(13) Lock immobiliser</li> </ol> </li> <li>6. Actuation test</li> </ol>
JAC	Heyue A30 CVT	Smart Key System(PEPS)	<ol style="list-style-type: none"> <li>1. Number of keys</li> <li>2. Escl learn</li> <li>3. Add key</li> <li>4. Replace engine ECU</li> </ol>
JAC	Xingyue	Immobiliser(Delphi)	<ol style="list-style-type: none"> <li>1. ECU identification</li> <li>2. Fault codes</li> <li>3. Erase DTC</li> <li>4. Live data</li> <li>5. Set security code <ol style="list-style-type: none"> <li>(1)Input security code</li> <li>(2)Set security code</li> </ol> </li> <li>6. Program function <ol style="list-style-type: none"> <li>(1)Program new system</li> <li>(2)Replace immobiliser ECU</li> <li>(3)Replace engine ECU</li> <li>(4)Program keys</li> <li>(5)Program engine VIN</li> <li>(6)Program immobiliser VIN</li> <li>(7)Reset engine ECU</li> <li>(8)Reset immobiliser</li> <li>(9)Erase keys</li> </ol> </li> </ol>



JAC	Xingyue	Immobiliser(DIAS)	<ol style="list-style-type: none"> <li>1. ECU identification</li> <li>2. Fault codes</li> <li>3. Erase DTC</li> <li>4. Live data</li> <li>5. Program function <ol style="list-style-type: none"> <li>(1) Add a key</li> <li>(2) Erase keys</li> <li>(3) Program new system</li> <li>(4) Replace immobiliser ECU</li> <li>(5) Replace engine ECU</li> <li>(6) Reset immobiliser</li> <li>(7) Reset engine ECU</li> <li>(8) Read VIN</li> <li>(9) Check key</li> <li>(10) Check engine ECU</li> <li>(11) Program engine VIN</li> <li>(12) Program immobiliser VIN</li> <li>(13) Lock immobiliser</li> </ol> </li> <li>6. Actuation test</li> </ol>
JAC	10 PIN	Remote	Type 1
JAC	10 PIN	Remote	Type 2
JAC	Heyue - 16 PIN	Remote	
JAC	Tongyue - 16 PIN	Remote	
JAC	Binyue - 16 PIN	Remote	
JAC	Xingyue - 16 PIN	Remote	
JAC	Tricyclic - 16 PIN	Remote	
JAC	Ruifeng S3 - 16 PIN	Remote	
JAC	Ruifeng S3 - 16 PIN	Remote	
JAC	Ruifeng S5 - 16 PIN	Remote	
JAC	Ruifeng Hechang - 16 PIN	Remote	
JAC	Heyue A30(CVT) - 16 PIN	Remote	
JAC	Ruifeng M5CVT) - 16 PIN	Remote	