



# Shenzhen Xtooltech Co., Ltd

MAXUS Function List V26.34

| System type      | Include car models | Function menu                        | Password required | Password is readable | Password digits |
|------------------|--------------------|--------------------------------------|-------------------|----------------------|-----------------|
| Remote           | A80                | 1. Read the anti-theft status        | yes               | no                   | 10              |
|                  | V80 -2017          | 2. Read Pin                          |                   |                      |                 |
|                  | FCV80              | 3. Add keys                          |                   |                      |                 |
|                  | EV80 -2017         | 4. Erase keys                        |                   |                      |                 |
|                  | V80 2018-          | 5. Add remeto                        |                   |                      |                 |
|                  | EV80 2018-         | 6. Erase remote                      | yes               | no                   | 10              |
|                  | G10                | 7. Programming BCM                   |                   |                      |                 |
|                  | EG10               | 8. Programming EMS/MCU               |                   |                      |                 |
|                  | D60                | 9. Programming EMS/MCU and BCM       |                   |                      |                 |
|                  | D90                | 1. Live Data                         |                   |                      |                 |
|                  | T60                | 2. Program new system                |                   |                      |                 |
|                  | T70                | 3. Replace BCM                       |                   |                      |                 |
|                  | EG50               | 4. Replace engine ECU                |                   |                      |                 |
|                  | EUNIQ5             | 5. Add keys                          |                   |                      |                 |
|                  | EUNIQ5 PLUG-IN     | 6. Erase keys                        |                   |                      |                 |
|                  | EUNIQ6             | 7. Add remote                        |                   |                      |                 |
|                  | EUNIQ6 PLUG-IN     | 8. Erase remote                      |                   |                      |                 |
|                  | EV90               | 9. Brake pedal learning              |                   |                      |                 |
|                  | EXTENDER           | 1. Read the data stream              | yes               | no                   | 10              |
|                  | G20                | 2. Add keys                          |                   |                      |                 |
|                  | V90                | 3. Clear the key                     |                   |                      |                 |
|                  | EV30               | 4. Increase remote control           |                   |                      |                 |
|                  | EV30 OVERSEAS      | 5. Clear remote control              |                   |                      |                 |
| Smart key system | G10                | 6. Matching engine system            | yes               | no                   | 10              |
|                  | G20                | 7. Matching body system              |                   |                      |                 |
|                  | EG10               | 8. New system matching               |                   |                      |                 |
|                  | V90                | 9. Reset EMS                         |                   |                      |                 |
|                  | D60                | 10. Set the number of remote control | yes               | no                   | 10              |
|                  | D90                | 1. Read the data stream              |                   |                      |                 |
|                  | EG50               | 2. Matching remote control           |                   |                      |                 |
|                  | EUNIQ5             | 3. Clear remote control              |                   |                      |                 |
|                  | EUNIQ5 PLUG-IN     | 4. Set the number of remote control  |                   |                      |                 |
|                  | EUNIQ6             | 1. Live Data                         |                   |                      |                 |
|                  | EUNIQ6 PLUG-IN     | 2. Add keys                          |                   |                      |                 |
|                  | EV90               | 3. Erase key                         |                   |                      |                 |
|                  | EXTENDER           | 4. Read Pin                          |                   |                      |                 |
|                  | T60                | 5. Program IMMO(AT)                  |                   |                      |                 |
|                  | T70                | 5.1. Program PEPS                    |                   |                      |                 |
|                  |                    | 5.2. Program EMS                     |                   |                      |                 |
|                  |                    | 5.3. Reset EMS                       |                   |                      |                 |