

## Immobiliser Function List

**Software Version: 26.78**

Automaker	Model	System	Function
ROEWE	350 (-2012)	Immobiliser	1. Add a key 2. Erase keys
ROEWE	350 (2013-)	Immobiliser	1. Add a key 2. Erase keys 3.Unlock time remaning
ROEWE	360(1.4T)	Immobiliser	1. Add a key 2. Erase keys
ROEWE	360(1.5VCT/1.5T)	Immobiliser	1. Add a key 2. Erase keys
ROEWE	360	smart key system	1.Add smart key 2.Erase smart key
ROEWE	550(-2012)	Immobiliser	1. Add a key 2. Erase keys
ROEWE	550(2013-)	Immobiliser	1. Add a key 2. Erase keys 3.Unlock time remaning
ROEWE	950	Immobiliser	1. All smart keys lost 2. Erase DTC 3. Live data
ROEWE	RX5	With smart	1.Add keys 2.Erase key
ROEWE	RX5	Without smart	1.Add keys 2.Erase key
ROEWE	ERX5	With smart	1.Add keys 2.Erase key
ROEWE	ERX5	Without smart	1.Add keys 2.Erase key
ROEWE	W5(-2012)	Immobiliser	1. Add a key 2. Erase keys
ROEWE	W5(2013-)	Immobiliser	1. Add a key 2. Erase keys 3.Unlock time remaning
ROEWE	I6	With smart	1.Add keys 2.Erase key

ROEWE	360	Remote	1. Add a key 2. Erase keys
ROEWE	750	Remote	1. Program remote 2. Read remote ID 3. Disable remote 4. Enable remote 5. Erase DTC
ROEWE	W5	Remote	1. Program remote

*XTOOL*