

# MINI Function list V10.62

Model Series	Part	Systems	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Actuation Test	Physical HW
<b>Notes:</b>								
√	Functions marked with √ is fully supported and already existed in former software version.							
*	Functions marked with * is fully supported and newly added in current software version.							
#	Functions marked with # is partially supported , which means the functions is verified on some vehicle models or systems and it might supports other vehicle models or systems.							
Functions left with blank is not supported.								
R50/R52/R53	Body	MRS/AB Airbag/ACSM	√	√	√	√		√
R50/R52/R53	Body	AIC Automatic Interval control	√	√	√	√		
R50/R52/R53	Body	BM On-board monitor	√	√	√	√	√	
R50/R52/R53	Body	CDC CD Changer	√	√	√		√	√
R50/R52/R53	Body	CVM/CVM2 Convertible top module	√	√	√	√	√	√
R50/R52/R53	Body	DSP Digital Sound Processor	√	√	√	√		
R50/R52/R53	Body	IHKA Heater/automatic A/C control	√	√	√	√	√	√
R50/R52/R53	Body	KOM Instrument cluster	√	√	√	√	√	
R50/R52/R53	Body	LRA Automatic headlight vertical aim control	√	√	√	√	√	
R50/R52/R53	Body	MFL Multifunction steering wheel I	√	√	√			
R50/R52/R53	Body	MFL Multifunction steering wheel II	√	√	√			
R50/R52/R53	Body	NAJ Navigation computer,Japan	√	√	√	√	√	
R50/R52/R53	Body	NAV Navigation computer,Europe	√	√	√	√		
R50/R52/R53	Body	PDC Park distance control	√	√	√	√	√	√
R50/R52/R53	Body	RAD Radio	√	√	√	√	√	√
R50/R52/R53	Body	RLS Rain/Light Sensor	√	√	√	√		√
R50/R52/R53	Body	SBBF Seat occupancy,passenger	√	√	√			
R50/R52/R53	Body	SHD Sliding/tilting sunroof	√	√	√	√	√	√
R50/R52/R53	Body	ULF Universal charging and hands-free facility	√	√	√	√	√	√
R50/R52/R53	Body	VID Video module	√	√	√			
R50/R52/R53	Body	ZKE Central Body electronics BC1	√	√	√	√	√	
R50/R52/R53	Body	ZKE Central Body electronics BC1(Redesign)	√	√	√	√	√	

R50/R52/R53	Chassis	ABS/ASC/DSC Dynamic Stability Control	√	√	√	√	√	√
R50/R52/R53	Chassis	EHPS Electro-hydraulic steering assistance	√	√	√	√	√	
R50/R52/R53	Chassis	LEW Steering-angle sensor	√	√	√	√		
R50/R52/R53	Chassis	RDC Tyre pressure control	√	√	√	√	√	√
R50/R52/R53	Chassis	RPW tyre-blowout warning system	√	√	√	√		
R50/R52/R53	Drive	DME/DDE(Engine Electronics)	√	√	√	√	√	√
R50/R52/R53	Drive	EGS/AGS(Transmission Control)	√	√	√	√	√	√
R50/R52/R53	Drive	EWS Vehicle immobilizer	√	√	√	√	√	
R55/R56/R57	Body	MRS/AB Airbag/ACSM	√	√	√	√		√
R55/R56/R57	Body	AHM Trailer module	√	√	√	√	√	√
R55/R56/R57	Body	AMPH Hi-Fi amplifier	√	√	√	√	√	√
R55/R56/R57	Body	CA Comfort access system	√	√	√	√		√
R55/R56/R57	Body	CAN communication analysis	√	√				
R55/R56/R57	Body	CCC-A Applications	√	√	√	√	√	√
R55/R56/R57	Body	CCC-ANT Aerial tuner	√	√	√	√	√	√
R55/R56/R57	Body	CCC-ASK Audio system controller	√	√	√	√	√	√
R55/R56/R57	Body	CCC-BO User interface	√	√	√	√	√	√
R55/R56/R57	Body	CCC-GW Gateway	√	√	√	√	√	√
R55/R56/R57	Body	CDC CD Changer	√	√	√		√	√
R55/R56/R57	Body	CID Central information display	√	√	√	√	√	√
R55/R56/R57	Body	CVM/CVM2 Convertible top module	√	√	√	√	√	√
R55/R56/R57	Body	DAB Digital tuner	√	√	√	√	√	√
R55/R56/R57	Body	FRM footwell module	√	√	√	√	√	√
R55/R56/R57	Body	IBOC Digital tuner US	√	√	√	√		√
R55/R56/R57	Body	IHKA Heater/automatic A/C control	√	√	√	√	√	√
R55/R56/R57	Body	IHKS Integrated heating/air-conditioning control	√	√	√	√	√	√
R55/R56/R57	Body	IHS Integrated heating control	√	√	√	√	√	√
R55/R56/R57	Body	INSTR Instrument cluster	√	√	√	√	√	√
R55/R56/R57	Body	JBE Junction-box electronics	√	√	√	√	√	√
R55/R56/R57	Body	JNAV Navigation system,Japan	√	√	√	√	√	√
R55/R56/R57	Body	MJOY MINI joystick	√	√	√	√	√	√
R55/R56/R57	Body	MOST system analysis	√	√	√			
R55/R56/R57	Body	PDC Park distance control	√	√	√	√	√	√
R55/R56/R57	Body	RAD Radio	√	√	√	√	√	√
R55/R56/R57	Body	RAD2-BO User interface	√	√	√	√	√	√
R55/R56/R57	Body	RAD2-GW Gateway	√	√	√	√	√	√

R55/R56/R57	Body	SDARS Satellite tuner	√	√	√	√	√	√
R55/R56/R57	Body	SHD Sliding/tilting sunroof	√	√	√	√	√	√
R55/R56/R57	Body	SZL Switch centre, steering column	√	√	√	√	√	√
R55/R56/R57	Body	ULF-SBX Interface box	√	√	√	√	√	√
R55/R56/R57	Body	ULF-SBX-H Interface box High	√	√	√	√	√	√
R55/R56/R57	Body	VM Video Module	√	√	√	√	√	√
R55/R56/R57	Chassis	ABS/ASC/DSC Dynamic Stability Control	√	√	√	√	√	√
R55/R56/R57	Chassis	EPS Electronic Power Steering	√	√	√	√	√	√
R55/R56/R57	Chassis	RDC Tyre pressure control	√	√	√	√	√	√
R55/R56/R57	Drive	CAS Car Access System	√	√	√	√	√	√
R55/R56/R57	Drive	DME/DDE(Engine Electronics)	√	√	√	√	√	√
R55/R56/R57	Drive	EGS/AGS(Transmission Control)	√	√	√	√	√	√
R58/R59	Body	MRS/AB Airbag/ACSM	√	√	√	√		√
R58/R59	Body	AHM Trailer module	√	√	√	√	√	√
R58/R59	Body	AMPH Hi-Fi amplifier	√	√	√	√	√	√
R58/R59	Body	CA Comfort access system	√	√	√	√		√
R58/R59	Body	CBX-ECALL Combox emergency call	√	√	√	√	√	
R58/R59	Body	CHAMP-BO User interface	√	√	√	√	√	√
R58/R59	Body	CHAMP-GW Gateway	√	√	√	√	√	√
R58/R59	Body	CID Central information display	√	√	√	√	√	√
R58/R59	Body	FRM footwell module	√	√	√	√	√	√
R58/R59	Body	IBOC Digital tuner US	√	√	√	√		√
R58/R59	Body	IHKA Heater/automatic A/C control	√	√	√	√	√	√
R58/R59	Body	INSTR Instrument cluster	√	√	√	√	√	√
R58/R59	Body	JBE Junction-box electronics	√	√	√	√	√	√
R58/R59	Body	MJOY MINI joystick	√	√	√	√	√	√
R58/R59	Body	PDC Park distance control	√	√	√	√	√	√
R58/R59	Body	SHD Sliding/tilting sunroof	√	√	√	√	√	√
R58/R59	Body	SZL Steering column switch centre 2	√	√	√	√	√	√
R58/R59	Body	ULF-SBX Interface box	√	√	√	√	√	√
R58/R59	Body	ULF-SBX-H Interface box High	√	√	√	√	√	√
R58/R59	Chassis	ABS/ASC/DSC Dynamic Stability Control	√	√	√	√	√	√
R58/R59	Chassis	EDC Damper Control	√	√	√	√	√	√
R58/R59	Chassis	EPS Electronic Power Steering	√	√	√	√	√	√
R58/R59	Drive	CAS Car Access System	√	√	√	√	√	√
R58/R59	Drive	DME/DDE(Engine Electronics)	√	√	√	√	√	√

R58/R59	Drive	EGS/AGS(Transmission Control)	√	√	√	√	√	√
R60	Body	MRS/AB Airbag/ACSM	√	√	√	√		√
R60	Body	AHM Trailer module	√	√	√	√	√	√
R60	Body	AMPH Hi-Fi amplifier	√	√	√	√	√	√
R60	Body	CA Comfort access system	√	√	√	√		√
R60	Body	CBX-ECALL Combox emergency call	√	√	√	√	√	
R60	Body	CHAMP-BO User interface	√	√	√	√	√	√
R60	Body	CHAMP-GW Gateway	√	√	√	√	√	√
R60	Body	CID Central information display	√	√	√	√	√	√
R60	Body	FRM footwell module	√	√	√	√	√	√
R60	Body	IBOC Digital tuner US	√	√	√	√		√
R60	Body	IHKA Heater/automatic A/C control	√	√	√	√	√	√
R60	Body	INSTR Instrument cluster	√	√	√	√	√	√
R60	Body	JBE Junction-box electronics	√	√	√	√	√	√
R60	Body	MJOY MINI joystick	√	√	√	√	√	√
R60	Body	PDC Park distance control	√	√	√	√	√	√
R60	Body	SHD Sliding/tilting sunroof	√	√	√	√	√	√
R60	Body	SZL Steering column switch centre 2	√	√	√	√	√	√
R60	Body	ULF-SBX Interface box	√	√	√	√	√	√
R60	Body	ULF-SBX-H Interface box High	√	√	√	√	√	√
R60	Chassis	ABS/ASC/DSC Dynamic Stability Control	√	√	√	√	√	√
R60	Chassis	EDC Damper Control	√	√	√	√	√	√
R60	Chassis	EPS Electronic Power Steering	√	√	√	√	√	√
R60	Drive	CAS Car Access System	√	√	√	√	√	√
R60	Drive	DME/DDE(Engine Electronics)	√	√	√	√	√	√
R60	Drive	EGS/AGS(Transmission Control)	√	√	√	√	√	√
F56	Body	MRS/AB Airbag/ACSM	√	√	√	√		√
F56	Body	AHM Trailer module	√	√	√	√	√	√
F56	Body	AMPH Hi-Fi amplifier	√	√	√	√	√	√
F56	Body	AMPT Top Hi-Fi amplifier	√	√	√	√	√	√
F56	Body	ASD Active Sound Design	√	√	√	√	√	
F56	Body	CBX-ECALL Combox emergency call	√	√	√	√	√	
F56	Body	CIC Car Information Computer	√	√	√	√	√	√
F56	Body	CON Controller	√	√	√	√	√	√
F56	Body	DVDC DVD Changer	√	√	√		√	√
F56	Body	FZD Function centre,roof	√	√	√	√	√	√

F56	Body	HKL Rear-lid lift	√	√	√	√	√	√
F56	Body	IHKA Heater/automatic A/C control	√	√	√	√	√	√
F56	Body	INSTR Instrument cluster	√	√	√	√	√	√
F56	Body	KAFAS Camera-based driver-assistance systems	√	√	√	√	√	
F56	Body	PMA Parking assistant	√	√	√	√	√	
F56	Body	SMFA Seat module,driver	√	√	√	√	√	√
F56	Body	SZL Switch centre, steering column	√	√	√	√	√	√
F56	Body	ZGM Central Gateway Module	√	√	√			√
F56	Body	TRSVc allround-view camera	√	√	√	√	√	
F56	Chassis	ABS/ASC/DSC Dynamic Stability Control	√	√	√	√	√	√
F56	Chassis	AL active steering	√	√	√	√		√
F56	Drive	CAS Car Access System	√	√	√	√	√	√
F56	Drive	DME/DDE(Engine Electronics)	√	√	√	√	√	√
F56	Drive	EGS/AGS(Transmission Control)	√	√	√	√	√	√
F54	Body	MRS/AB Airbag/ACSM	√	√	√	√	√	√
F54	Body	AHM Trailer module	√	√	√	√	√	√
F54	Body	AMPH Hi-Fi amplifier	√	√	√	√	√	√
F54	Body	AMPT Top Hi-Fi amplifier	√	√	√	√	√	√
F54	Body	ASD Active Sound Design	√	√	√	√	√	√
F54	Body	CBX-ECALL Combox emergency call	√	√	√	√	√	√
F54	Body	CIC Car Information Computer	√	√	√	√	√	√
F54	Body	CON Controller	√	√	√	√	√	√
F54	Body	DVDC DVD Changer	√	√	√	√	√	√
F54	Body	FZD Function centre,roof	√	√	√	√	√	√
F54	Body	HKL Rear-lid lift	√	√	√	√	√	√
F54	Body	IHKA Heater/automatic A/C control	√	√	√	√	√	√
F54	Body	INSTR Instrument cluster	√	√	√	√	√	√
F54	Body	KAFAS Camera-based driver-assistance systems	√	√	√	√	√	√
F54	Body	PMA Parking assistant	√	√	√	√	√	√
F54	Body	SMFA Seat module,driver	√	√	√	√	√	√
F54	Body	SZL Switch centre, steering column	√	√	√	√	√	√
F54	Body	ZGM Central Gateway Module	√	√	√	√	√	√
F54	Body	TRSVc allround-view camera	√	√	√	√	√	√
F54	Chassis	ABS/ASC/DSC Dynamic Stability Control	√	√	√	√	√	√
F54	Chassis	AL active steering	√	√	√	√	√	√
F54	Drive	CAS Car Access System	√	√	√	√	√	√

F54	Drive	DME/DDE(Engine Electronics)	√	√	√	√	√	√
F54	Drive	EGS/AGS(Transmission Control)	√	√	√	√	√	√
F55	Body	MRS/AB Airbag/ACSM	√	√	√	√	√	√
F55	Body	AHM Trailer module	√	√	√	√	√	√
F55	Body	AMPH Hi-Fi amplifier	√	√	√	√	√	√
F55	Body	AMPT Top Hi-Fi amplifier	√	√	√	√	√	√
F55	Body	ASD Active Sound Design	√	√	√	√	√	√
F55	Body	CBX-ECALL Combox emergency call	√	√	√	√	√	√
F55	Body	CIC Car Information Computer	√	√	√	√	√	√
F55	Body	CON Controller	√	√	√	√	√	√
F55	Body	DVDC DVD Changer	√	√	√	√	√	√
F55	Body	FZD Function centre,roof	√	√	√	√	√	√
F55	Body	HKL Rear-lid lift	√	√	√	√	√	√
F55	Body	IHKA Heater/automatic A/C control	√	√	√	√	√	√
F55	Body	INSTR Instrument cluster	√	√	√	√	√	√
F55	Body	KAFAS Camera-based driver-assistance systems	√	√	√	√	√	√
F55	Body	PMA Parking assistant	√	√	√	√	√	√
F55	Body	SMFA Seat module,driver	√	√	√	√	√	√
F55	Body	SZL Switch centre, steering column	√	√	√	√	√	√
F55	Body	ZGM Central Gateway Module	√	√	√	√	√	√
F55	Body	TRSVc allround-view camera	√	√	√	√	√	√
F55	Chassis	ABS/ASC/DSC Dynamic Stability Control	√	√	√	√	√	√
F55	Chassis	AL active steering	√	√	√	√	√	√
F55	Drive	CAS Car Access System	√	√	√	√	√	√
F55	Drive	DME/DDE(Engine Electronics)	√	√	√	√	√	√
F55	Drive	EGS/AGS(Transmission Control)	√	√	√	√	√	√
F57	Body	MRS/AB Airbag/ACSM	√	√	√	√	√	√
F57	Body	AHM Trailer module	√	√	√	√	√	√
F57	Body	AMPH Hi-Fi amplifier	√	√	√	√	√	√
F57	Body	AMPT Top Hi-Fi amplifier	√	√	√	√	√	√
F57	Body	ASD Active Sound Design	√	√	√	√	√	√
F57	Body	CBX-ECALL Combox emergency call	√	√	√	√	√	√
F57	Body	CIC Car Information Computer	√	√	√	√	√	√
F57	Body	CON Controller	√	√	√	√	√	√
F57	Body	DVDC DVD Changer	√	√	√	√	√	√
F57	Body	FZD Function centre,roof	√	√	√	√	√	√

F57	Body	HKL Rear-lid lift	√	√	√	√	√	√
F57	Body	IHKA Heater/automatic A/C control	√	√	√	√	√	√
F57	Body	INSTR Instrument cluster	√	√	√	√	√	√
F57	Body	KAFAS Camera-based driver-assistance systems	√	√	√	√	√	√
F57	Body	PMA Parking assistant	√	√	√	√	√	√
F57	Body	SMFA Seat module,driver	√	√	√	√	√	√
F57	Body	SZL Switch centre, steering column	√	√	√	√	√	√
F57	Body	ZGM Central Gateway Module	√	√	√	√	√	√
F57	Body	TRSVc allround-view camera	√	√	√	√	√	√
F57	Chassis	ABS/ASC/DSC Dynamic Stability Control	√	√	√	√	√	√
F57	Chassis	AL active steering	√	√	√	√	√	√
F57	Drive	CAS Car Access System	√	√	√	√	√	√
F57	Drive	DME/DDE(Engine Electronics)	√	√	√	√	√	√
F57	Drive	EGS/AGS(Transmission Control)	√	√	√	√	√	√
F60	Body	MRS/AB Airbag/ACSM	√	√	√	√	√	√
F60	Body	AHM Trailer module	√	√	√	√	√	√
F60	Body	AMPH Hi-Fi amplifier	√	√	√	√	√	√
F60	Body	AMPT Top Hi-Fi amplifier	√	√	√	√	√	√
F60	Body	ASD Active Sound Design	√	√	√	√	√	√
F60	Body	CBX-ECALL Combox emergency call	√	√	√	√	√	√
F60	Body	CIC Car Information Computer	√	√	√	√	√	√
F60	Body	CON Controller	√	√	√	√	√	√
F60	Body	DVDC DVD Changer	√	√	√	√	√	√
F60	Body	FZD Function centre,roof	√	√	√	√	√	√
F60	Body	HKL Rear-lid lift	√	√	√	√	√	√
F60	Body	IHKA Heater/automatic A/C control	√	√	√	√	√	√
F60	Body	INSTR Instrument cluster	√	√	√	√	√	√
F60	Body	KAFAS Camera-based driver-assistance systems	√	√	√	√	√	√
F60	Body	PMA Parking assistant	√	√	√	√	√	√
F60	Body	SMFA Seat module,driver	√	√	√	√	√	√
F60	Body	SZL Switch centre, steering column	√	√	√	√	√	√
F60	Body	ZGM Central Gateway Module	√	√	√	√	√	√
F60	Body	TRSVc allround-view camera	√	√	√	√	√	√
F60	Chassis	ABS/ASC/DSC Dynamic Stability Control	√	√	√	√	√	√
F60	Chassis	AL active steering	√	√	√	√	√	√
F60	Drive	CAS Car Access System	√	√	√	√	√	√

F60	Drive	DME/DDE(Engine Electronics)	√	√	√	√	√	√
F60	Drive	EGS/AGS(Transmission Control)	√	√	√	√	√	√

*XTOOL*



## Service Function List V10.62

Part	Components	Status	Body Type
Body	Add production key		MINI R50/R52/R53
Body	Add tuner profiles		MINI R55/R56/R57
Chassis	Adjustment, steering-angle sensor	√	MINI R55/R56/R57
Chassis	Adjustment, steering-torque sensor		MINI R55/R56/R57
Drive	Balance test	√	MINI R50/R52/R53
Chassis	Bleed routine	√	MINI R55/R56/R57
Chassis	Brake line reversal check	√	MINI R58/R59
Chassis	Calibration of DSC sensor	√	MINI R55/R56/R57
Chassis	Calibration of DSC unit	√	MINI R55/R56/R57
Body	CBS correction,Tester data		MINI R55/R56/R57
Body	CBS correction,vehicle data	√	MINI R55/R56/R57
Drive	Check gear-oil level		MINI R50/R52/R53
Drive	Clear adaptation		MINI R55/R56/R57
Chassis	Connection, brake lines		MINI R50/R52/R53
Chassis	Connection, speed sensor		MINI R50/R52/R53
Drive	Consumption calculation		MINI R50/R52/R53
Body	Control-unit self-test		MINI R50/R52/R53
Body	Create boot file again		MINI R55/R56/R57
Drive	Check transmission oil level	√	MINI R50/R52/R53
Drive	Replacemen/adaptation of CVT gearbox	√	MINI R50/R52/R53
Drive	DDE-EWSIII		MINI R50/R52/R53
Body	Delete transport mode	√	MINI R50/R52/R53
Body	Delete transport mode		MINI R55/R56/R57
Body	Delivery position	√	MINI R55/R56/R57
Body	Disable/enable	√	MINI R55/R56/R57
Body	Disable/enable key		MINI R50/R52/R53
Drive	Disable/enable key	√	MINI R50/R52/R53
Body	DME(DDE)-EWS-III adjustment		MINI R50/R52/R53
Drive	DME(DDE)-EWS-III adjustment		MINI R50/R52/R53
Drive	DME(DDE)-EWS-III adjustment		MINI R50/R52/R53
Body	DVD lock		MINI R55/R56/R57
Body	DVD lock		MINI R50/R52/R53
Body	DWA activations		MINI R50/R52/R53

Drive	DME: Clear adaptations	√	MINI_R58/R59 MINI_R60
Drive	DME: Delete adaptation variable camshaft timing control	√	MINI_R58/R59 MINI_R60
Chassis	DSC bleeding routine	√	MINI_R58/R59
Chassis	DSC sensor adjustment	√	MINI_R58/R59
Drive	Engine internal pressure		MINI_R55/R56/R57
Body	Enter retrofitting		MINI_R50/R52/R53
Body	Evaluate battery charge state	√	MINI_R55/R56/R57
Body	Evaluate closed-circuit current monitoring	√	MINI_R55/R56/R57
Drive	Fuel consumption display adjustment	√	MINI_R58/R59
Drive	Idle speed	√	MINI_R55/R56/R57 MINI_R58/R59 MINI_R60
Drive	Idle speed	√	MINI_R50/R52/R53
Body	Initial operation, A/C compressor	√	MINI_R55/R56/R57
Body	Initialize power window	√	MINI_R55/R56/R57
Body	Initialize rain sensor	√	MINI_R50/R52/R53
Body	Initialize rain/light sensor	√	MINI_R55/R56/R57
Body	Initialize slide/tilt sunroof	√	MINI_R55/R56/R57
Drive	Injector classification		MINI_R50/R52/R53
Body	Key status		MINI_R50/R52/R53
Drive	Key status		MINI_R50/R52/R53
Chassis	Lateral acceleration sensor		MINI_R50/R52/R53
Drive	Learning Valvetronic limit positions	√	MINI_E60
Drive	Learning/writing, zero-gear sensor		MINI_R55/R56/R57
Body	Log mobile phone on		MINI_R55/R56/R57
Body	Log mobile phone on		MINI_R55/R56/R57
Body	Log remote control key on/off		MINI_R50/R52/R53
Drive	MFL and air conditioning		MINI_R50/R52/R53
Chassis	Mix-up check, brake lines	√	MINI_R55/R56/R57
Drive	OBD readiness codes		MINI_R50/R52/R53
Drive	OBD readiness codes		MINI_R55/R56/R57
Body	Personalisation number	√	MINI_R55/R56/R57
Drive	Plausible start times		MINI_R55/R56/R57
Body	Power-down command	√	MINI_R55/R56/R57

Chassis	Pressure sensors		MINI R50/R52/R53
Drive	Read AV accumulator		MINI R55/R56/R57
Body	Read coding data	√	MINI R50/R52/R53
Body	Read coding data	√	MINI R55/R56/R57
Body	Read out data		MINI R55/R56/R57
Body	Register battery change	√	MINI R55/R56/R57
Drive	Replacement/adaptation, CVT transmission		MINI R50/R52/R53
Drive	Reset adaptation values	√	MINI R55/R56/R57
Drive	Reset adaptations	√	MINI R50/R52/R53
Body	Reset CBS Condition Based Service	√	MINI R55/R56/R57
Body	Reset HIP module		MINI R55/R56/R57
Drive	Reset internal ELV fault counter		MINI R55/R56/R57
Body	Reset internal ELV fault counter		MINI R55/R56/R57
Body	Radio control key test	√	MINI R50/R52/R53
Body	Remote key test	√	MINI R50/R52/R53
Body	Save configuration of MOST ring		MINI R55/R56/R57
Body	Set transport mode		MINI R55/R56/R57
Drive	Starting fuel delivery		MINI R50/R52/R53
Chassis	Steering-angle sensor		MINI_R50/R52/R53 MINI R58/R59
Drive	System check MSA		MINI R55/R56/R57
Body	Sleep mode		MINI R50/R52/R53
Chassis	Start-up, EPS unit	√	MINI R60
Chassis	Ventilation		MINI R50/R52/R53
Drive	Valvetronic adaptation limit positions	√	MINI R58/R59
Body	With tester		MINI R50/R52/R53
Body	Without tester		MINI R50/R52/R53