



Shenzhen Xtooltech Co., Ltd

China service reset function list

Software version: 29.01

Automaker	Model	method	Year	Type
BAIC	BJ20	Auto reset	-2018	
BAIC	BJ20	Auto reset	2018	
BAIC	BJ40	Auto reset		
BAIC	BJ40 PLUS	Auto reset		
BAIC	BJ40L	Auto reset	2018	Petrol
BAIC	BJ40L	Auto reset	2018	Diesel
BAIC	BJ40L	Auto reset	2018	CityHunterEdition
BAIC	BJ80C	Auto reset		
BAIC	BJ80J	Auto reset		
BAIC	E-Series	Auto reset		
BAIC	CC(C60F)	Auto reset		
BAIC	D20 (C30D/C31D)	Auto reset		
BAIC	D50 (C50E)	Auto reset		Type1
BAIC	D50 (C50E)	Auto reset		Type2
BAIC	D50 (C50E)	Manual reset	-2018	
BAIC	D50 (C50E)	Manual reset	2018-	
BAIC	New D50	Auto reset		
BAIC	D60 (C60F)	Auto reset		
BAIC	D70 (C70G)	Auto reset		Type1
BAIC	D70 (C70G)	Auto reset		Type 2
BAIC	D80 (C80G)	Auto reset		

BAIC	X25 (C33D)	Auto reset	-2016	
BAIC	X25 (C33D)	Auto reset	2016-2017	
BAIC	X35 (C32B)	Auto reset	-2016	
BAIC	X35 (C32B)	Auto reset	2016	
BAIC	X55 (C51E)	Auto reset		Type1
BAIC	X55 (C51E)	Auto reset		Type2
BAIC	X65 (C61X)	Auto reset		
BAIC	Zhi Dao	Auto reset		
BAIC	WeiWang 307	Auto reset	-2015	
BAIC	WeiWang 308EV	Auto reset		
BAIC	EV150	Auto reset		
BAIC	EV160	Auto reset		
BAIC	EV200	Auto reset		
BAIC	EV300	Auto reset		
BAIC	EX200	Auto reset		
BAIC	EX260	Auto reset		
BAIC	EX360	Auto reset		
BAIC	EX5	Auto reset		
BAIC	EU220	Auto reset		
BAIC	EU260	Auto reset		
BAIC	EU300	Auto reset		
BAIC	EU400	Auto reset		
BAIC	EU5	Auto reset		
BAIC	EH300	Auto reset		
BAIC	ARCFOX	Auto reset		
BAIC	ARCFOX (ADAS)	Auto reset		
BAIC	LITE	Auto reset		Basic
BAIC	LITE	Auto reset		ADASA
BAIC	LITE	Auto reset		300
BAIC	M50F	Auto reset		
BAIC	M60	Auto reset		

BAIC	S50	Auto reset		
BaoJun	RS-5	Manual reset		
ChangAn	CS15	Auto reset		
ChangAn	CS15 EV	Auto reset		
ChangAn	CS35 (2017)	Auto reset		
ChangAn	CS55	Auto reset		
ChangAn	CS75	Auto reset		
ChangAn	NewBenBen	Auto reset		
ChangAn	RAETON (SDEInstrument)	Auto reset		
ChangAn	CS15	Manual reset		
ChangAn	CS35	Manual reset		
ChangAn	CS75	Manual reset		
ChangAn	CS95	Manual reset		
JETOUR	X70S	Auto reset		
JETOUR	X90S	Auto reset		
JETOUR	X95	Auto reset		
JETOUR	X70	Manual reset	2018	
CHERY	A1	Auto reset		ATECH
CHERY	A1	Auto reset		AMTSeries
CHERY	A2	Auto reset		
CHERY	A3	Auto reset		
CHERY	A5/Cowin3	Auto reset		ATECH
CHERY	A16	Auto reset		
CHERY	A19	Auto reset		
CHERY	E3	Auto reset		
CHERY	E5	Auto reset		
CHERY	QQ6/Cowin1	Auto reset		ATECH
CHERY	QQ6/Cowin1	Auto reset		AMTSeries

CHERY	QQME	Auto reset		
CHERY	NewQQ	Auto reset		
CHERY	Eastar/Cowin5	Auto reset		
CHERY	Eastarcross	Auto reset		
CHERY	NewEastar	Auto reset		
CHERY	Fulwin2	Auto reset		Type1
CHERY	Fulwin2	Auto reset		Type2
CHERY	Tiggo3/TiggoFacelift	Auto reset		1.8AMT
CHERY	Tiggo3/TiggoFacelift	Auto reset		1.6VVT
CHERY	Tiggo3X	Auto reset		
CHERY	Tiggo5	Auto reset		
CHERY	Tiggo5X	Auto reset		
CHERY	Tiggo7	Auto reset		
CHERY	Tiggo8	Auto reset		
CHERY	Arrizo3	Auto reset		
CHERY	Arrizo5	Auto reset		
CHERY	Arrizo7	Auto reset		
CHERY	Arrizo7E	Auto reset		
CHERY	Arrizo8	Auto reset		
CHERY	ArrizoM7	Auto reset		
CHERY	ArrizoEX/GX	Auto reset		
CHERY	M1	Auto reset		
CHERY	M2	Auto reset		
CHERY	M3	Auto reset		
CHERY	M5	Auto reset		
CHERY	X1	Auto reset		
CHERY	G2	Auto reset		
CHERY	G3	Auto reset		
CHERY	G6	Auto reset		

CHERY	H3	Auto reset		
CHERY	H5	Auto reset		
CHERY	V5	Auto reset		KWP
CHERY	V5	Auto reset		CAN
CHERY	V8	Auto reset		
CHERY	X5	Auto reset		
CHERY	V2	Auto reset		
CHERY	S22	Auto reset		
CHERY	K60 (KM23)	Auto reset		
CHERY	K601. 5T	Auto reset		
CHERY	K602018	Auto reset		
CHERY	K50S (Q26FL)	Auto reset		
CHERY	QQ3	Auto reset		
CHERY	S18	Auto reset		
CHERY	eQ	Auto reset		
CHERY	eQ1 (S51EV)	Auto reset		
CHERY	S32EV	Auto reset		
CHERY	Arrizo5E	Auto reset		
CHERY	Tiggo3xe	Auto reset		
CHERY	A1	Manual reset		
CHERY	B11	Manual reset		
CHERY	S21-QQ6	Manual reset		
CHERY	S11-QQ3	Manual reset		
CHERY	S16-QQme	Manual reset		
CHERY	S12-A1	Manual reset		
CHERY	T11-Tiggo	Manual reset		Type1
CHERY	T11-Tiggo	Manual reset		Type2
CHERY	A15-Cowin2	Manual reset		
CHERY	A21-A5/Cowin3	Manual reset		

CHERY	M11-A3	Manual reset		
CHERY	M12-A3	Manual reset		
CHERY	A13	Manual reset		
CHERY	J15	Manual reset		
CHERY	S22L	Manual reset		
CHERY	A18	Manual reset		
CHERY	Q26 (K50)	Manual reset		
GREATWALL	C30	Auto reset		
GREATWALL	C50	Auto reset	2012-2013	
GREATWALL	C50	Auto reset		CHB012
GREATWALL	C50	Auto reset		JZ40
GREATWALL	C50	Manual reset		
GREATWALL	FengJun5	Manual reset		
GREATWALL	FengJun7	Auto reset		
GREATWALL	Great	Auto reset		Type1
GREATWALL	Great	Auto reset		Type2
GREATWALL	F5	Auto reset		
GREATWALL	F7	Auto reset		Type1
GREATWALL	F7	Auto reset		Type2
GREATWALL	F7X	Auto reset		
GREATWALL	H1	Auto reset		
GREATWALL	H4	Auto reset		
GREATWALL	H6	Auto reset		
GREATWALL	H6	Manual reset		
GREATWALL	H6COUPE	Auto reset		Type1
GREATWALL	H6COUPE	Auto reset		Type2
GREATWALL	H7	Auto reset		Type1
GREATWALL	H7	Auto reset		Type2
GREATWALL	H8	Auto reset		6AT

GREATWALL	H8	Auto reset		8AT
GREATWALL	H9	Auto reset		6AT
GREATWALL	H9	Auto reset		8AT
GREATWALL	H9	Auto reset	2020	
GREATWALL	M6	Auto reset		
GREATWALL	P8	Auto reset		
GREATWALL	VV5	Auto reset		Type1
GREATWALL	VV5	Auto reset		Type2
GREATWALL	VV6	Auto reset		
GREATWALL	VV7	Auto reset	-2020	
GREATWALL	VV7	Auto reset	2020	GT/PHEV
GREATWALL	C30 (CH041E)	Auto reset		
GREATWALL	C30EV	Auto reset		Type1
GREATWALL	C30EV	Auto reset		Type2
GREATWALL	C30EV	Auto reset		Type3
GREATWALL	IQ	Auto reset		
GREATWALL	R1	Auto reset		
GREATWALL	R2	Auto reset		
GREATWALL	IQ-420	Auto reset		
Geely	BOYUE		-2019	
Geely	BOYUE		2019-	
Geely	BOYUE (PRO)			
Geely	BORUI			
Geely	BORUI (GE)		-2019	
Geely	BORUI (GE)		2019-	
Geely	BinYue (Traditionalpo wer+MHEV)		-2019	
Geely	BinYue (Traditionalpo wer+MHEV)		2019-	

Geely	BinYue (HEV)			
Geely	BinRui		-2019	
Geely	BinRui		2019-	
Geely	Emgrand (EV)			
Geely	Emgrand (GL)			
Geely	Emgrand (GL)		-2019	GL14T/15T
Geely	Emgrand (GL)		2019-	GL14T/15T
Geely	Emgrand (GLPHEV)		-2019	
Geely	Emgrand (GLPHEV)		2019-	
Geely	Emgrand (GS)			
Geely	Emgrand (GS)			GS14T
Geely	Emgrand (GS)		-2019	GS15T
Geely	Emgrand (GS)		2019-	GS15T
Geely	Emgrand (GSe)			
Geely	Emgrand (GSE- batteryversion)			
Geely	Emgrand (EV300)			
Geely	Emgrand (EV450)			
Geely	NewEmgrand (EV450)			
Geely	NewEmgrand (PHEV)			
Geely	VISION (S1)		-2019	
Geely	VISION (S1)		2019-	Type1
Geely	VISION (S1)		2019-	Type2
Geely	VISION (X1)			
Geely	VISION (X3)		-2018	
Geely	VISION (X3)		2019-	
Geely	VISION (X6)			Type1
Geely	VISION (X6)			Type2
Geely	VISION (X6)		2016	

Geely	VISION (X6)		2018	
Geely	VISION (X6)		2020	
Geely	New VISION		-2018	
Geely	New VISION		2019	
Geely	JiaJi (Traditional power-MHEV)		-2019	
Geely	JiaJi (Traditional power-MHEV)		2019-	
Geely	JiaJi (HEV)		-2019	
Geely	JiaJi (HEV)		2019-	
Geely	JiHeA			
Geely	Xingyue (Traditional power-MHEV)			
Geely	Xingyue (HEV)			
Geely	GX7	Auto reset		
Geely	GX9	Auto reset		
Geely	SX7	Auto reset		
Geely	Emgrand (GL)	Manual reset		
Geely	NewVISIONX6	Manual reset		
Geely	EmgrandEC7	Manual reset		
Geely	VISIONX6-16/18	Manual reset		
Geely	GX7/GX9	Manual reset		
ROEWE	350	Auto reset		
ROEWE	360	Auto reset		
ROEWE	360	Auto reset		1.5VCT/1.5T
ROEWE	550	Auto reset		
ROEWE	New550	Auto reset		
ROEWE	New550 HYBRID	Auto reset		
ROEWE	750	Auto reset	-2010	

ROEWE	750	Auto reset	2010-	
ROEWE	New 750	Auto reset		
ROEWE	New750 HYBRID	Auto reset		
ROEWE	950	Auto reset		
ROEWE	E50	Auto reset		
ROEWE	i5	Auto reset		
ROEWE	Ei6(IP34)	Auto reset		Type1
ROEWE	Ei6(IP34)	Auto reset		Type2
ROEWE	i6(IP31)	Auto reset		
ROEWE	RX3	Auto reset		
ROEWE	eRX5	Auto reset		
ROEWE	RX5	Auto reset		
ROEWE	E950	Manual reset		
ROEWE	Other	Manual reset		
MG	CN6	Auto reset		
MG	GS	Auto reset		
MG	GS (EU)	Auto reset		
MG	NewGS	Auto reset		
MG	GT	Auto reset		1. 5L/1. 4T
MG	HS	Auto reset	2019-	
MG	MG3	Auto reset		
MG	MG3EU	Auto reset		
MG	MG3_Zero	Auto reset		
MG	MG3_Zero	Auto reset	2013	
MG	MG5	Auto reset		AP12
MG	MG5	Auto reset		AP13
MG	eMG6	Auto reset		
MG	MG6	Auto reset		
MG	MG6	Auto reset	2013	

MG	MG6	Auto reset	2014	
MG	MG6-EU	Auto reset		
MG	MG6TT	Auto reset		
MG	New MG6	Auto reset		
MG	MG7	Auto reset		Type1
MG	MG7	Auto reset		Type2
MG	MG7-L	Auto reset		
MG	MG7750	Auto reset		
MG	MGTF	Auto reset		
MG	eZS	Auto reset		
MG	ZS (ZS11)	Auto reset		
MG	ZS (ZS12)	Auto reset		
MG		Manual reset		
BARGWARD	BX3	Auto reset		
BARGWARD	BX5	Auto reset		
BARGWARD	BX7	Auto reset		
Brilliance	ZhonghuaV3 (Thirdgeneration)	Auto reset		
Brilliance	ZhonghuaV6	Auto reset		
Brilliance	RenaultGoldCupview	Auto reset		Highconfiguration
Brilliance	RenaultGoldCupview	Auto reset		Lowconfiguration
BYD	E5300	Manual reset		
BYD	G5	Manual reset		
BYD	G6	Manual reset		
BYD	M6	Manual reset		
BYD	S6	Manual reset		
BYD	S7	Manual reset		
BYD	Qin	Manual reset		
BYD	Qin-100	Manual reset		

BYD	Qin-EV300	Manual reset		
BYD	Sirui	Manual reset		
BYD	Song	Manual reset		
BYD	Song-DM	Manual reset		
BYD	Song-(Fuelversion)	Manual reset		
BYD	Song-(2017-Fuelversion)	Manual reset		
BYD	Surui	Manual reset		
BYD	Tang	Manual reset		
BYD	Tang-100	Manual reset		
BYD	Yuan	Manual reset		
ChangHe	Q25	Auto reset		
ChangHe	Q35	Auto reset		
ChangHe	A6	Auto reset	-2019	
ChangHe	A6	Auto reset	2019-	
ChangHe	Q7	Auto reset		Type1
ChangHe	Q7	Auto reset		Type2
ChangFeng	CS9	Manual reset		
ChangFeng	CS10	Manual reset		
DFFS	A30	Manual reset	2014-2016	
DFFS	AX3	Manual reset		Type1
DFFS	AX3	Manual reset		Type2
DFFS	AX4	Manual reset	2017-2018	
DFFS	AX5	Manual reset		
DFFS	AX7	Manual reset	2015-2016	
DFFS	AX7	Manual reset	2017	
DFFS	AX7	Manual reset		A14T
DFFS	AX7	Manual reset		Other
DFFS	AX7	Manual reset		

DFFS	A60	Manual reset		
DFFS	A9	Manual reset	2016	
DFFS	L60	Manual reset	2015	
Soueast	A5	Manual reset		
Soueast	DX3	Manual reset		
Soueast	DX7	Manual reset		
Soueast	V5	Manual reset		
FOTON	Takuru	Auto reset		
FOTON	Sabana (U201)	Auto reset		
Qoros	Qoros3	Auto reset		
Qoros	Qoros5	Auto reset		
HanTeng	A45	Auto reset		
HanTeng	HTX7 (B15G)	Auto reset		
HanTeng	X5	Auto reset		
HanTeng	X5	Auto reset		
HanTeng	X5 (M11G)	Auto reset		
HanTeng	X7	Auto reset		
HanTeng	X7S	Auto reset		
HanTeng	X7PHEV	Auto reset		
HaiMa	M5	Auto reset		VIKEERICM
HaiMa	M8	Auto reset		VIKEERICM
HaiMa	S7	Auto reset		VIKEERICM
HaiMa	V70	Auto reset		VIKEERICM
HaiMa	F7	Auto reset		VIKEERICM
HaiMa	Family	Auto reset		
HaiMa	8S (SG00)	Auto reset		ICM-SG00
HaiMa	S5	Manual reset		
JMC	S350	Auto reset		
JMC	Transit	Manual reset		

JMC	X5	Manual reset		
JMC	X7	Manual reset		Type1
JMC	X7	Manual reset		Type2
JAC	A60	Auto reset		
JAC	M4	Auto reset		Type1
JAC	M4	Auto reset		Type2
JAC	M5	Auto reset		
JAC	S2	Auto reset		
JAC	S3	Auto reset		
JAC	S5	Auto reset		
JAC	Heyue	Auto reset		
JAC	YueYue	Auto reset		
JAC	Other	Auto reset		
JunMa	A40 (S70)	Auto reset		
JunMa	S301 (MEET3)	Auto reset		
JunMa	A40 (S70)	Manual reset		
JunMa	D50 (SEEK5)	Manual reset		
COWIN	C3/C3R	Auto reset		
COWIN	V3 (MC22)	Auto reset		
COWIN	X3 (XC51)	Auto reset		
COWIN	S32EV	Auto reset		
COWIN	E3	Auto reset		
COWIN	X5	Auto reset		
LiFan	X80	Auto reset		
Suzuki	Vitara	Auto reset		
Suzuki	S-cross	Auto reset	2016-	
Suzuki	S-cross	Manual reset		
Suzuki	Xiaotu	Manual reset		
Suzuki	NewAlto	Manual reset	2013-	

Suzuki	SX4	Manual reset	2013-	
Suzuki	Vitra	Manual reset		
Suzuki	VitraXL-7	Manual reset	2007-2009	
Suzuki	GrandVitara	Manual reset	2013	
Suzuki	SPLash	Manual reset	2008-2011	
Suzuki	DF40	Manual reset		
LYNK&CO	01, 02, 03	Auto reset		
LYNK&CO	ALL	Manual reset		
NAVECO	NAVECO	Auto reset		
NAVECO	YueJin	Auto reset		
NAVECO	ChaoYue	Auto reset		
Rover	75	Manual reset	1999-2005	
Rover	75	Manual reset	2002	
MAXUS	D60	Auto reset		
MAXUS	D90	Auto reset		
MAXUS	EG10	Auto reset		
MAXUS	G50	Auto reset		
MAXUS	G10	Auto reset		Type1
MAXUS	G10	Auto reset		Type2
MAXUS	G10	Manual reset		
MAXUS	T60	Auto reset		
MAXUS	V80	Auto reset	2018-	
MAXUS	ALL	Manual reset		
SWM	X7	Manual reset		
FAW	B30	Auto reset		
FAW	B90	Auto reset		
FAW	X40	Auto reset	-2019	Type1
FAW	X40	Auto reset	-2019	Type2
FAW	X40	Auto reset	2019-	Type1

FAW	X40	Auto reset	2019-	Type2
FAW	X80	Auto reset		
FAW	T33	Auto reset		
FAW	T77	Auto reset		
FAW	B50	Manual reset		Type1
FAW	B50	Manual reset		Type2
FAW	NewB50	Manual reset		Type1
FAW	B90	Manual reset		Type1
FAW	B90	Manual reset		Type2
FAW	X80	Manual reset		Type1
FAW	X80	Manual reset		Type2
FAW	X80	Manual reset		Type3
FAW	T77	Manual reset		Type1
FAW	T99	Manual reset	2019	
FAW	X40	Manual reset		Type1
FawHongQI	H5	Auto reset		
FawHongQI	H7	Auto reset		
FawDaihatsu	R7	Auto reset		
FawDaihatsu	R9	Auto reset		
Yema	T70	Auto reset		
Yema	T70S	Auto reset		
Yema	T80	Auto reset		
Yema	SPICA	Auto reset		
ZOTYE	E20	Auto reset		
ZOTYE	G60	Auto reset		
ZOTYE	G60E	Auto reset		
ZOTYE	G60S	Auto reset		
ZOTYE	G70S	Auto reset		
ZOTYE	X5	Auto reset		

ZOTYE	X7	Auto reset		
ZOTYE	E30	Auto reset		
ZOTYE	SR7	Auto reset	-2017	
ZOTYE	SR7	Auto reset	2017-	
ZOTYE	SR9	Auto reset		
ZOTYE	L10	Auto reset		
ZOTYE	T300	Auto reset		
ZOTYE	T500	Auto reset		
ZOTYE	T600	Auto reset		
ZOTYE	T600 COUPE	Auto reset		
ZOTYE	T600	Auto reset		
ZOTYE	New T600	Auto reset	2019	
ZOTYE	T700	Auto reset		
ZOTYE	T800	Auto reset		
ZOTYE	Z100	Auto reset		
ZOTYE	Z200	Auto reset		
ZOTYE	Z300	Auto reset		
ZOTYE	Z360	Auto reset		
ZOTYE	Z500	Auto reset		
ZOTYE	Z560	Auto reset		
ZOTYE	Z700	Auto reset		
ZOTYE	A16	Auto reset		
ZOTYE	B21	Auto reset		
ZOTYE	M300	Auto reset		
ZOTYE	SR7 EV	Auto reset		
ZOTYE	T300 EV	Auto reset		
ZOTYE	Z500 EV	Auto reset		
ZOTYE	T200	Manual reset		
ZOTYE	T300	Manual reset		

ZOTYE	T600	Manual reset		
ZOTYE	SR7	Manual reset		
ZOTYE	SR9	Manual reset		
ZOTYE	Z100	Manual reset		
ZOTYE	Z300	Manual reset		Type1
ZOTYE	Z300	Manual reset		Type2
ZOTYE	Z500	Manual reset		
ZOTYE	X5	Manual reset		
ZOTYE	X7	Manual reset		
ZOTYE	LangLang	Manual reset		
ZhengZhou Nissan	Ruiqi6	Manual reset		
ZhengZhou Nissan	MX5	Manual reset		
ZhengZhou Nissan	MX6	Manual reset		
ZhengZhou Nissan	NV200	Manual reset	2017	
ZXAUTO	Lord	Manual reset		