

RENAULTSAM Function List V9.50

| Notes: | | | | | | | | |
|------------------|--|-------------------------|-------------------|--------------|--------------------|------------------|-----------|---|
| ✓ | Functions is fully supported and already existed in former software version. | | | | | | | |
| * | Functions is fully supported and newly added in current software version. | | | | | | | |
| # | Functions is partially supported, which means the functions is verified on some vehicle models or systems and it might supports other vehicle models or systems. | | | | | | | |
| | Functions left with blank is not supported. | | | | | | | |
| Vehicle | System | Computer identification | Read Trouble Code | Freeze Frame | Clear Trouble Code | Read Data Stream | Actuators | Specific Function |
| Captur/qm3/kabin | Engine System | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 002, 003, 004, 005, 006, 007, 008, 009, 00A, 00B, 00C, 00D, 00E, 00F, 010, 011, 012, 013, 014, 015, 016, 017, 018, 019, 01A, 01B, 01C, 01D, 01E, 01F, 020, 021, 022, 023, 024, 025, 026, 027, 028, 029, 02A, 02B, 02C, 02D, 02E, 02F, 030, 031, 032, 033, 034, 035, 036, 037, 038, 039, 03A, 03B, 03C, 03D |
| Captur/qm3/kabin | ABS | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 03F, 040, 041, 042, 043, 044, 045, 046, 047 |
| Captur/qm3/kabin | Instrument panel | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 048, 049, 04A, 04B, 04C |
| Captur/qm3/kabin | UCH | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 04D, 04E, 021, 024, 04F, 050, 051 |
| Captur/qm3/kabin | Airbag/pretenioners | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 052, 053 |
| Captur/qm3/kabin | Air conditioning | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 054 |
| Captur/qm3/kabin | Automatic gearbox | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 044, 055, 056, 057, 058, 059, 05A, 05B, 05C, 05D, 05E, 05F, 060 |
| Captur/qm3/kabin | Communications unit | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 048, 061, 062, 063 |
| Captur/qm3/kabin | Variable PAS | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E |
| Captur/qm3/kabin | UPC | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 03E, 04C, 021, 064, 065, 066 |
| Captur/qm3/kabin | Lighting | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| Captur/qm3/kabin | Parking prox can | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 067, 068, 069, 06A, 06B |
| Captur/qm3/kabin | Radio | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 00A, 03E, 06C, 061, 063, 06D, 06E |
| Captur/qm3/kabin | Telematic ctrl unit | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 06F |
| Captur/qm3/kabin | Multimedia interface | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 03E, 070, 071, 072 |
| Captur/qm3/kabin | Amplifier | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 073 |
| Captur/qm3/kabin | HANDS-FREE MODULE | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 074, 075, 076, 077, 078, 079, 07A, 07B, 07C, 07D, 07E, 07F, 051, 080, 081 |
| Clio IV | Engine System | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 002, 003, 004, 005, 006, 007, 008, 009, 00A, 00B, 00C, 00D, 00E, 00F, 010, 011, 012, 013, 014, 015, 016, 017, 018, 019, 01A, 01B, 01C, 01D, 01E, 01F, 020, 021, 022, 023, 024, 025, 026, 027, 028, 029, 02A, 02B, 02C, 02D, 02E, 02F, 030, 031, 033, 034, 035, 036, 037, 038, 039, 03A, 03B, 03C, 03D |
| Clio IV | ABS | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 03F, 040, 041, 042, 043, 044, 045, 046, 047 |
| Clio IV | Instrument panel | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 048, 049, 04A, 04B, 04C |
| Clio IV | UCH | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 04D, 04E, 021, 024, 04F, 050, 051 |
| Clio IV | Airbag/pretenioners | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 052, 053 |
| Clio IV | Air conditioning | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 054, 085 |
| Clio IV | Automatic gearbox | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 044, 055, 056, 057, 058, 059, 05A, 05B, 05C, 05D, 05E, 05F, 060 |
| Clio IV | Communications unit | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 048, 061, 062, 063 |
| Clio IV | Variable PAS | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E |
| Clio IV | UPC | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 03E, 04C, 021, 064, 065, 066 |
| Clio IV | Lighting | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| Clio IV | Parking prox can | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 067, 068, 069, 06A, 06B |
| Clio IV | Radio | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 00A, 03E, 06C, 061, 063, 06D, 06E |
| Clio IV | Telematic ctrl unit | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 06F |
| Clio IV | Multimedia interface | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 03E, 070, 071, 072 |
| Clio IV | Amplifier | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 073 |
| Clio IV | HANDS-FREE MODULE | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 074, 075, 076, 077, 078, 079, 07A, 07B, 07C, 07D, 07E, 07F, 051, 080, 081 |
| Koleos II/qm6 | Engine System | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 004, 005, 006, 007, 008, 009, 00A, 00B, 00C, 00D, 00E, 00F, 010, 011, 015, 016, 017, 018, 019, 01A, 01B, 086, 01C, 01D, 01E, 087, 01F, 020, 021, 022, 023, 024, 025, 026, 027, 088, 089 |

| | | | | | | | | |
|--------------------|-----------------------------|---|---|---|---|---|---|---|
| Koleos II/qm6 | ABS | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 03F, 040, 041, 042, 043, 044, 045, 046, 047 |
| Koleos II/qm6 | Instrument panel | ✓ | ✓ | | ✓ | ✓ | ✓ | 00A, 03E, 08A, 048, 049, 04A, 062, 08B, 04C |
| Koleos II/qm6 | UCH | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 009, 00A, 04D, 08C, 08D, 04E, 08E, 075, 04F, 08F, 050, 090, 091, 092 |
| Koleos II/qm6 | Airbag/pretenioners | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 052, 053, 093 |
| Koleos II/qm6 | Front radar | ✓ | ✓ | | ✓ | | | 00A, 03E |
| Koleos II/qm6 | Air conditioning | ✓ | ✓ | | ✓ | ✓ | ✓ | 00A, 03E, 094, 054 |
| Koleos II/qm6 | Automatic gearbox | ✓ | ✓ | ✓ | ✓ | ✓ | | 00A, 03E, 03F, 057, 095 |
| Koleos II/qm6 | Parking brake | ✓ | ✓ | ✓ | ✓ | ✓ | | 00A, 03E, 096, 097 |
| Koleos II/qm6 | Variable PAS | ✓ | ✓ | ✓ | ✓ | ✓ | | 00A, 03E |
| Koleos II/qm6 | UPC | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 03E, 04C, 021, 024, 064, 065, 098, 099 |
| Koleos II/qm6 | Power back door | ✓ | ✓ | | ✓ | ✓ | | 00A, 09A |
| Koleos II/qm6 | 4 wheels drive | ✓ | ✓ | | ✓ | ✓ | | 00A |
| Koleos II/qm6 | Parking prox can | ✓ | ✓ | | ✓ | ✓ | ✓ | 00A, 03E, 067, 068, 069, 06A, 06B |
| Koleos II/qm6 | Driver's seat | ✓ | ✓ | | ✓ | ✓ | ✓ | |
| Koleos II/qm6 | Front camera | ✓ | ✓ | | ✓ | ✓ | | 00A, 09B |
| Koleos II/qm6 | Radio | ✓ | ✓ | | ✓ | ✓ | ✓ | 00A, 03E, 048, 061, 062, 09C, 06F, 09D, 063, 070 |
| Koleos II/qm6 | Telematic ctrl unit | ✓ | ✓ | | ✓ | ✓ | ✓ | 00A, 03E, 06F |
| Koleos II/qm6 | Left-hand door or passenger | ✓ | ✓ | | ✓ | ✓ | ✓ | |
| Koleos II/qm6 | Multimedia interface | ✓ | ✓ | | ✓ | ✓ | ✓ | 00A, 03E, 09E, 06F |
| Koleos II/qm6 | Amplifier | ✓ | ✓ | | ✓ | ✓ | ✓ | 001, 03E, 09F, 0A0 |
| Koleos/qm5 | Engine System | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 004, 03E, 09E, 00B, 00C, 0A1, 027, 0A2, 0A3, 0A4, 0A5, 0A6, 0A7, 0A8 |
| Koleos/qm5 | ABS | ✓ | ✓ | | ✓ | ✓ | ✓ | 00A |
| Koleos/qm5 | Instrument panel | ✓ | ✓ | | ✓ | ✓ | | 00A, 08A, 048, 0A9, 049, 04A, 04B, 0AA, 0AB, 0AC, 08B, 0AD, 0AE, 0AF, 0B0, 0B1, 0B2, 0B3, 0B4 |
| Koleos/qm5 | UCH | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 04D, 0B5, 0B6, 0B7, 0AA, 0B8, 0B8, 0B9, 04F, 0BA, 0BB, 0BC, 0BD, 0BE, 0BF, 0C0, 0C1 |
| Koleos/qm5 | Airbag/pretenioners | ✓ | ✓ | | ✓ | ✓ | | 00A |
| Koleos/qm5 | Automatic gearbox | ✓ | ✓ | | ✓ | ✓ | | 00A, 0C2 |
| Koleos/qm5 | Communications unit | ✓ | ✓ | | ✓ | ✓ | ✓ | 001, 00A, 03E, 0C3, 03F, 048, 09E, 073, 0C4, 0C5 |
| Koleos/qm5 | Parking brake | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 0C6, 0C7, 0C8, 0C9, 0CA, 0CB |
| Koleos/qm5 | Blind spot detection | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 074 |
| Koleos/qm5 | Variable PAS | ✓ | ✓ | ✓ | ✓ | ✓ | | 00A |
| Koleos/qm5 | UPC | ✓ | ✓ | | ✓ | ✓ | ✓ | 001 |
| Koleos/qm5 | Tyres | ✓ | ✓ | | ✓ | ✓ | ✓ | 00A, 03E, 085, 074, 04E |
| Koleos/qm5 | 4 wheels drive | ✓ | ✓ | | ✓ | ✓ | | 00A |
| Koleos/qm5 | Parking prox can | ✓ | ✓ | ✓ | ✓ | ✓ | | 00A, 03E, 03F, 0CC, 067, 068, 0CD, 0CE, 0CF |
| Koleos/qm5 | Auto front lighting | ✓ | ✓ | | ✓ | ✓ | ✓ | 00A, 0D0 |
| Koleos/qm5 | Discharge Lamp | ✓ | ✓ | | ✓ | ✓ | ✓ | 00A, 0D1, 0D2 |
| Koleos/qm5 | Radio | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 00A, 03E, 06C, 048, 0D3, 063, 073, 0D4, 06D, 0D5 |
| Koleos/qm5 | Telematic ctrl unit | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 06E, 0D6 |
| Koleos/qm5 | Multimedia interface | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 03E, 0C3, 0C6, 070, 071, 0D7, 0D8 |
| Koleos/qm5 | Amplifier | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 03E, 06C, 09F, 0D6, 073 |
| Koleos/qm5 | Multimed. connection | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 03F, 073 |
| KoleosII CN/qm6 CN | Engine System | ✓ | ✓ | | ✓ | ✓ | ✓ | 001, 00E, 00F, 021, 025, 026, 088, 089 |
| KoleosII CN/qm6 CN | ABS | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 03F, 040, 041, 042, 043, 044, 045, 046, 047 |
| KoleosII CN/qm6 CN | Instrument panel | ✓ | ✓ | | ✓ | ✓ | ✓ | 00A, 03E, 08A, 048, 049, 04A, 062, 08B, 04C |
| KoleosII CN/qm6 CN | UCH | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 009, 00A, 04D, 08C, 08D, 04E, 08E, 075, 04F, 08F, 050, 090, 091, 092 |
| KoleosII CN/qm6 CN | Airbag/pretenioners | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 052, 053, 093 |
| KoleosII CN/qm6 CN | Front radar | ✓ | ✓ | | ✓ | | | 00A, 03E |
| KoleosII CN/qm6 CN | Air conditioning | ✓ | ✓ | | ✓ | ✓ | ✓ | 00A, 03E, 094, 054 |
| KoleosII CN/qm6 CN | Automatic gearbox | ✓ | ✓ | ✓ | ✓ | ✓ | | 00A, 03E, 03F, 057, 095 |
| KoleosII CN/qm6 CN | Parking brake | ✓ | ✓ | ✓ | ✓ | ✓ | | 00A, 03E, 096, 097 |
| KoleosII CN/qm6 CN | Variable PAS | ✓ | ✓ | ✓ | ✓ | ✓ | | 00A, 03E |
| KoleosII CN/qm6 CN | UPC | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 03E, 04C, 021, 024, 064, 065, 098, 099 |
| KoleosII CN/qm6 CN | Power back door | ✓ | ✓ | | ✓ | ✓ | | 00A, 09A |
| KoleosII CN/qm6 CN | 4 wheels drive | ✓ | ✓ | | ✓ | ✓ | | 00A |
| KoleosII CN/qm6 CN | Parking prox can | ✓ | ✓ | | ✓ | ✓ | ✓ | 00A, 03E, 067, 068, 069, 06A, 06B |
| KoleosII CN/qm6 CN | Driver's seat | ✓ | ✓ | | ✓ | ✓ | ✓ | |
| KoleosII CN/qm6 CN | Front camera | ✓ | ✓ | | ✓ | ✓ | | 00A, 09B |
| KoleosII CN/qm6 CN | Radio | ✓ | ✓ | | ✓ | ✓ | ✓ | 00A, 03E, 048, 061, 062, 09C, 06F, 09D, 063, 070 |
| KoleosII CN/qm6 CN | Telematic ctrl unit | ✓ | ✓ | | ✓ | ✓ | ✓ | 00A, 03E, 06F |
| KoleosII CN/qm6 CN | Left-hand door or passenger | ✓ | ✓ | | ✓ | ✓ | ✓ | |
| KoleosII CN/qm6 CN | Multimedia interface | ✓ | ✓ | | ✓ | ✓ | ✓ | 00A, 03E, 09E, 06F |
| KoleosII CN/qm6 CN | Amplifier | ✓ | ✓ | | ✓ | ✓ | ✓ | 001, 03E, 09F, 0A0 |

| | | | | | | | | |
|------------------------|-----------------------------|---|---|---|---|---|---|--|
| Latitude/sm5 | Engine System | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 002, 003, 004, 009, 09E, 00B, 00C, 0A1, 082, 00D, 00E, 00F, 010, 011, 013, 014, 015, 016, 017, 018, 019, 01C, 01D, 01F, 021, 024, 025, 026, 027, 028, 029, 02A, 02B, 02C, 02D, 02E, 02F, 031, 0D9, 0DA, 0DB, 0A2, 0A3, 0A4, 0A5, 0A6, 0DC, 0DD, 0DE, 0DF, 032, 033, 034, 035, 036 |
| Latitude/sm5 | ABS | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 03F, 040, 041, 042, 043, 045 |
| Latitude/sm5 | Instrument panel | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 048, 0A9, 049, 0CC, 0E0, 04A, 04B, 062, 0AB, 0AC, 08B, 0E1 |
| Latitude/sm5 | UCH | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 080 |
| Latitude/sm5 | Airbag/pretensioners | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 052, 053, 093 |
| Latitude/sm5 | Air conditioning | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 094, 054 |
| Latitude/sm5 | Automatic gearbox | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 03F, 044, 055, 056, 057, 058, 059, 05A, 05B, 05C, 05D, 05E, 05F, 060 |
| Latitude/sm5 | Communications unit | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 00A, 03E, 03F, 048, 061, 063 |
| Latitude/sm5 | Parking brake | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 0C7, 0E2 |
| Latitude/sm5 | Blind spot detection | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E |
| Latitude/sm5 | Variable PAS | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E |
| Latitude/sm5 | UPC | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 03E, 04C, 064, 065, 0E3, 0E4 |
| Latitude/sm5 | Lighting | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 0D1 |
| Latitude/sm5 | Parking prox can | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 067, 068, 0CD, 0CE |
| Latitude/sm5 | Driver's door | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E |
| Latitude/sm5 | Passenger's door | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E |
| Latitude/sm5 | Driver's seat | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 0E5 |
| Latitude/sm5 | Radio | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 00A, 03E, 06C, 061, 0E6, 0E3, 073, 0D4, 0E7, 0E0, 06E |
| Latitude/sm5 | Telematic ctrl unit | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 06F |
| Latitude/sm5 | Left-hand door or passenger | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 054 |
| Latitude/sm5 | Right-hand door or collapsi | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 054 |
| Latitude/sm5 | Multimedia interface | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 03E, 070, 071 |
| Latitude/sm5 | Amplifier | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 03E, 06C, 09F, 0E8 |
| Latitude/sm5 | Multimed. connection | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 03F, 09E |
| Meganeivsedan | Engine System | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 002, 004, 005, 006, 007, 008, 009, 00A, 00B, 00C, 00D, 00E, 00F, 010, 011, 0E9, 012, 014, 015, 016, 017, 018, 019, 01A, 01B, 086, 01C, 01D, 01E, 087, 01F, 020, 021, 022, 023, 024, 025, 026, 027, 029, 02A, 02B, 02C, 02D, 02E, 02F |
| Meganeivsedan | ABS | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 0EA, 040, 041, 042, 043, 044, 045, 0EB, 047, 0EC, 0ED |
| Meganeivsedan | Instrument panel | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 08A, 048, 049, 04A, 062, 08B, 04C |
| Meganeivsedan | UCH | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 009, 00A, 04D, 08C, 08D, 04E, 08E, 075, 04F, 08F, 050, 090, 091, 092 |
| Meganeivsedan | Airbag/pretensioners | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 052, 053, 093 |
| Meganeivsedan | Front radar | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E |
| Meganeivsedan | Air conditioning | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 094, 054 |
| Meganeivsedan | Automatic gearbox | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 03F, 056, 057, 058, 059, 0EE, 05A, 05B, 05C, 05D, 05E, 095 |
| Meganeivsedan | Parking brake | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 096, 097 |
| Meganeivsedan | Variable PAS | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E |
| Meganeivsedan | UPC | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 03E, 04C, 021, 024, 064, 065, 098, 099 |
| Meganeivsedan | Head up display | | | | | | | |
| Meganeivsedan | Parking prox can | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 067, 068, 069, 06A, 06B |
| Meganeivsedan | Driver's seat | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 0F0, 0F1, 0F2 |
| Meganeivsedan | Front camera | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 09B |
| Meganeivsedan | Radio | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 048, 061, 062, 09C, 06F, 09D, 063, 070 |
| Meganeivsedan | Telematic ctrl unit | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 06F |
| Meganeivsedan | Left-hand door or passenger | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 0F0, 0F1, 0F2 |
| Meganeivsedan | Multimedia interface | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 09E, 06F |
| Meganeivsedan | Amplifier | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 03E, 09F, 0A0 |
| New sm3/fluence/megane | Engine System | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 002, 003, 004, 009, 00A, 00B, 00C, 082, 00D, 00E, 00F, 010, 011, 014, 074, 015, 016, 017, 018, 019, 01A, 01B, 086, 01C, 01D, 01E, 087, 01F, 021, 023, 024, 025, 026, 027, 028, 029, 02A, 02B, 02C, 02D, 02E, 031, 0D9, 0DA, 0DB, 0DF, 037, 038, 039, 03A, 03B |
| New sm3/fluence/megane | ABS | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 03F, 040, 041, 042, 043, 047 |

| | | | | | | | | |
|----------------------|-----------------------------|---|---|---|---|---|---|---|
| Sm7-L47 | UPC | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 03E, 04C, 064, 065 |
| Sm7-L47 | Lighting | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 0D1 |
| Sm7-L47 | Parking prox can | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 067, 068, 0CD, 0CE |
| Sm7-L47 | Driver's door | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E |
| Sm7-L47 | Passenger's door | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E |
| Sm7-L47 | Driver's seat | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 0E5 |
| Sm7-L47 | Radio | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 00A, 03E, 06C, 061, 0E6, 063, 073, 0D4, 0E7, 06D, 06E |
| Sm7-L47 | Left-hand door or passenger | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 054 |
| Sm7-L47 | Right-hand door or collapsi | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 054 |
| Sm7-L47 | Multimedia interface | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 03E, 070, 071 |
| Sm7-L47 | Amplifier | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 03E, 06C, 09F, 0E8 |
| Sm7-L47 | Multimed. connection | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 03F, 09E |
| Safrane 2.3/sm7 - 1f | Engine System | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| Safrane 2.3/sm7 - 1f | ABS | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| Safrane 2.3/sm7 - 1f | Instrument panel | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| Safrane 2.3/sm7 - 1f | UCH | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| Safrane 2.3/sm7 - 1f | Airbag/pretenioners | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| Safrane 2.3/sm7 - 1f | Automatic gearbox | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| Safrane 2.3/sm7 - 1f | Variable PAS | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| Safrane 2.3/sm7 - 1f | UPC | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| Safrane 2.3/sm7 - 1f | Discharge Lamp | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| Safrane 2.3/sm7 - 1f | Parking assistance | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| Safrane 2.3/sm7 - 1f | Driver's seat | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| Safrane 2.3/sm7 - 1f | HANDS-FREE ACCESS | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| Talisman/sm6 | Engine System | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 002, 004, 005, 006, 007, 008, 009, 00A, 00B, 00C, 00D, 00E, 00F, 010, 011, 0E9, 012, 015, 016, 017, 018, 019, 01A, 01B, 086, 01C, 01D, 01E, 087, 01F, 020, 021, 022, 023, 024, 025, 026, 027, 029, 02A, 02B, 02C, 088, 089 |
| Talisman/sm6 | ABS | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 0EA, 040, 041, 042, 043, 044, 045, 0EB, 047, 0EC, 0ED |
| Talisman/sm6 | Instrument panel | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 08A, 048, 049, 04A, 062, 08B, 04C |
| Talisman/sm6 | UCH | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 009, 00A, 04D, 08C, 08D, 04E, 08E, 075, 04F, 08F, 050, 090, 091, 092 |
| Talisman/sm6 | Airbag/pretenioners | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 052, 053, 093 |
| Talisman/sm6 | Front radar | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E |
| Talisman/sm6 | Air conditioning | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 094, 054 |
| Talisman/sm6 | Automatic gearbox | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 03F, 056, 057, 058, 059, 0EE, 05A, 05B, 05C, 05D, 05E, 095 |
| Talisman/sm6 | Parking brake | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 096, 097 |
| Talisman/sm6 | Variable PAS | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E |
| Talisman/sm6 | UPC | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 03E, 04C, 021, 024, 064, 065, 098, 099 |
| Talisman/sm6 | Power back door | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 09A |
| Talisman/sm6 | Head up display | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 009, 00A |
| Talisman/sm6 | 4 wheels steering | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 03E, 112, 113, 114 |
| Talisman/sm6 | Parking prox can | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 067, 068, 069, 06A, 06B |
| Talisman/sm6 | Piloted suspension | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E |
| Talisman/sm6 | Driver's seat | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 0F0, 0F1, 0F2 |
| Talisman/sm6 | Front camera | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 09B |
| Talisman/sm6 | Radio | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 048, 061, 062, 09C, 06F, 09D, 063, 070 |
| Talisman/sm6 | Telematic ctrl unit | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 06F |
| Talisman/sm6 | Left-hand door or passenger | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 0F0, 0F1, 0F2 |
| Talisman/sm6 | Multimedia interface | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 09E, 06F |
| Talisman/sm6 | Amplifier | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 001, 03E, 09F, 0A0 |
| X09 | Instrument panel | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 0C3, 03F, 048, 115, 116, 117, 118 |
| X09 | UCH | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 119 |
| X09 | Airbag/pretenioners | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 052, 053, 11A, 093, 11B, 11C, 11D, 11E, 11F, 120 |
| X09 | ADAPTATION UNIT | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 00A, 03E, 06C |
| X09 | BCR | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| X09 | BMS | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |

| | | | |
|-----|--|-----|--|
| 001 | Fault memory | 002 | EGR adaptives |
| 003 | Pressure regulation adaptives | 004 | Programmed values |
| 005 | Cylinder 1 Injector Code | 006 | Cylinder 2 Injector Code |
| 007 | Cylinder 3 Injector Code | 008 | Cylinder 4 Injector Code |
| 009 | WRITE V.I.N. | 00A | Fault memory |
| 00B | Fuel supply prevention | 00C | INTERVAL OF OIL CHANGE (OCS) OXIDATION |
| 00D | Engine adaptives | 00E | Programming throttle limits |
| 00F | Richness regulation programming | 010 | Flvwheel target programming |
| 011 | Cruise control/speed limiter programming | 012 | Upstream oxygen sensor |
| 013 | Vacuum pump operation request | 014 | Camshaft sensor programming |
| 015 | EGR valve programming | 016 | Adaptives on air intake flap fault |
| 017 | Air damper valve programming | 018 | Rail pressure sensor adaptives |
| 019 | Proportional richness sensor programming | 01A | Exhaust flap low setting |
| 01B | Low pressure EGR valve programming | 01C | Fuel pump programming |
| 01D | Air flowmeter programming | 01E | Particle filter pressure difference sensor |
| 01F | Injection pump adaptives | 020 | Starter adaptives |
| 021 | Number of starting cycles | 022 | EGR bypass programming |
| 023 | Catalytic converter | 024 | High pressure pump counter |
| 025 | Stop and start function | 026 | Alternator setpoint voltage |
| 027 | OIL CHANGE INTERVAL (OCS): DILUTION | 028 | Alcohol level prog. |
| 029 | Number of starting 1 | 02A | Number of starting 2 |
| 02B | Number of starting 3 | 02C | Number of starting 4 |
| 02D | Injector adaptives | 02E | Waste gate regulation |
| 02F | Camshaft sensor Number 2 programming | 030 | Injection time programming |
| 031 | Particle filter relative pressure sensor | 032 | Inhibit EVAP strategy |
| 033 | Activate EVAP programming | 034 | Static test |

| | | | |
|-----|--|-----|---|
| 035 | Parametrage prive 159 | 036 | Parametrage prive 160 |
| 037 | Fuel Flow regulator | 038 | Injector adaptives Number 1 |
| 039 | Injector adaptives Number 2 | 03A | Injector adaptives Number 3 |
| 03B | Injector adaptives Number 4 | 03C | With SWIRL flap |
| 03D | Oil vapour heater | 03E | Write VIN |
| 03F | Write date of last after sales operation | 040 | Speedo index |
| 041 | Steering wheel angle offset sensor | 042 | Transverse acceleration offset sensor |
| 043 | Brake pressure offset sensor | 044 | Reset |
| 045 | Steering wheel angle sensor | 046 | Acceleration sensor |
| 047 | Longitudinal acceleration sensor offset | 048 | Distance units |
| 049 | Consumption measurement units | 04A | ADAC display type |
| 04B | Language version | 04C | Computer initialisation |
| 04D | Hazard warning lights illumination by ABS | 04E | PROGRAMMING THE CODES OF THE FOUR VALVES |
| 04F | Alarm | 050 | Second fitting alarm |
| 051 | Remote engine starting | 052 | Lock computer |
| 053 | Unlock computer | 054 | Computer reinitialisation |
| 055 | Reset clutch data | 056 | Programme slip point |
| 057 | Erase auto-adaptive values | 058 | Clutch wear |
| 059 | Programming selection/engaging zones | 05A | Shift drum reference position |
| 05B | Program clutch adjustment | 05C | Programme clutch position |
| 05D | Program clutch 1 adjustment | 05E | Program clutch 2 adjustment |
| 05F | Parametrage prive 2 | 060 | start Control Counter |
| 061 | Language | 062 | Tyre pressure units |
| 063 | Country model | 064 | Diagnostic trouble codes reset |
| 065 | Resetting internal protection | 066 | Alternator floating voltage |
| 067 | BUZZER VOLUME | 068 | Tone adjustment |
| 069 | Front detection | 06A | Rear detection |
| 06B | Side detection | 06C | Write date of after sales operation |
| 06D | Reset radio | 06E | Rear loud speaker |
| 06F | Computer reset | 070 | Time format |
| 071 | Temperature display | 072 | Hour setting |
| 073 | System configuration | 074 | Configuration privee 1 |
| 075 | Remote Locking Buzzer | 076 | Configuration Privee 3 |
| 077 | Programming routine | 078 | Confirm programming |
| 079 | Abandon programming | 07A | READ CARD SIGNAL |
| 07B | Read card 2 signal | 07C | Configuration privee 2 |
| 07D | Configuration Privee 4 | 07E | Testing card presented |
| 07F | HFM programming routine | 080 | Column steering lock |
| 081 | Configuration Reservee 1 | 082 | Air path programming |
| 083 | EGR programming | 084 | Manifold pressure sensor programming |
| 085 | Parametrage prive 1 | 086 | Swirl flap programming |
| 087 | SWIRL flap | 088 | Driver start counter |
| 089 | Idle stop and start counter | 08A | Language configuration |
| 08B | Overspeed Alarm | 08C | Windscreen type |
| 08D | Daytime running lights | 08E | Illuminate hazard lamps upon impact |
| 08F | Scandinavian runnings lights | 090 | Trailer present |
| 091 | Hands-free deadlocking | 092 | Deadlocking with remote control on key |
| 093 | Side on which steering wheel fitted | 094 | GEOGRAPHICAL ZONE |
| 095 | Gearbox vehicle acceleration sensor init. | 096 | Activate maintenance mode |
| 097 | Deactivate maintenance mode | 098 | Control Headlight Motors |
| 099 | Starter wear counter | 09A | Power back door cylinder |
| 09B | Computer calibration | 09C | Temperature units |
| 09D | Touch screen | 09E | Ecu Memory |
| 09F | Amplifier reset | 0A0 | Noise-reducing microphone |
| 0A1 | Stop fuel supply prevention | 0A2 | Vehicle function programming |
| 0A3 | Erase Idle regulation adaptives | 0A4 | Adaptive value-TPS |
| 0A5 | Adaptive value-A/F ratio | 0A6 | Catalytic converter test |
| 0A7 | Idle air volume learning-factory mode | 0A8 | Idle air volume learning-service mode |
| 0A9 | Trajectory control | 0AA | Seat belt reminder buzzer |
| 0AB | Distance before next oil change | 0AC | Tyre pressure monitor function |
| 0AD | Personalised oil change frequency | 0AE | Free shift |
| 0AF | Slope sensor adjustment | 0B0 | Type of parking brake |
| 0B1 | Free shift display | 0B2 | Pointer animation |
| 0B3 | Daytime backlights | 0B4 | Blind spot detection |
| 0B5 | See-me-home lighting | 0B6 | Deadlocking |
| 0B7 | Headlight washers | 0B8 | Hands-free function |
| 0B9 | Rain/light sensor | 0BA | Unlocking mode, doors hands free |
| 0BB | Anti theft alarm trigger S/W | 0BC | One-touch electric windows |
| 0BD | Head lamp battery saver function | 0BE | Passenger's compartment heating resistor |
| 0BF | Raising of elect. window (with Anti PINCH) | 0C0 | DONGLE |
| 0C1 | Indicator light configuration | 0C2 | Reset oil change counter |
| 0C3 | Vehicle type | 0C4 | Gsm connectivity |
| 0C5 | Gsm antenna circuit | 0C6 | Vehicle configuration |
| 0C7 | SAVE CLUTCH PEDAL PROGRAMMING | 0C8 | Shoe lining energy counter |
| 0C9 | Rear brake unit initialisation | 0CA | Rear brake unit repositioning |
| 0CB | BRAKE LINING FRICTION LEARNING | 0CC | Gearbox type |
| 0CD | Front buzzer volume | 0CE | Front tone setting |
| 0CF | Sensor type | 0D0 | Steering angle sensor initialisation |
| 0D1 | System initialisation | 0D2 | EEPROM memory write procedure |
| 0D3 | Driving type | 0D4 | External components |
| 0D5 | CD changer | 0D6 | Computer configuration |
| 0D7 | Radio | 0D8 | Navigation |
| 0D9 | Exhaust injector circuit | 0DA | Pinking sensor programming |
| 0DB | Ignition coil adaptive | 0DC | Self learning value erase-butane ratio modeling |
| 0DD | Self learning value Erase-fuel Pump PWM | 0DE | Fuel pump forced conversion |
| 0DF | Parametrage prive 98 | 0E0 | Cruise CTRL/SPD Limiter |
| 0E1 | Commande Privee 1 | 0E2 | Assisted engagement when stationary |
| 0E3 | Stop/start function configuration | 0E4 | ESM configuration |
| 0E5 | Programming of seat stops | 0E6 | Customer settings and details |
| 0E7 | Emergency call number | 0E8 | Subwoofer |
| 0E9 | Turbocharger programming | 0EA | Steering wheel angle sensor programming |
| 0EB | Trailer stability function | 0EC | Transverse acceleration sensor |
| 0ED | Longitudinal acceleration sensor | 0EE | Write clutch initial closed position |
| 0F0 | Front slide learning | 0F1 | Rear slide learning |
| 0F2 | Lumbar learning | 0F3 | Light sensor sensitivity |
| 0F4 | Configuration Reservee 10 | 0F5 | Steering lock |
| 0F6 | Note oil wear counter | 0F7 | Write transmission oil change date |
| 0F8 | Auto-adaptives | 0F9 | SVT configuration |
| 0FA | ESM inhibition command | 0FB | ESM Activation command |
| 0FC | Computer programming/initialisation | 0FD | BMS |
| 0FE | Instrument panel | 0FF | Charge plug |
| 100 | Start authorisation from BMS | 101 | Traction battery lock |
| 102 | Traction battery interlock | 103 | Module change |
| 104 | Fan assembly | 105 | Driving water pump |
| 106 | VACUUM pump ageing counter | 107 | Charge water pump |
| 108 | Heating | 109 | Start authorisation from BMS safety |
| 10F | Programming reinitialisation | 110 | Idle speed learning |
| 111 | Torque learning | 112 | Fault memory |
| 113 | Inhibition of 4-wheel drive function | 114 | Reinstatement of 4-wheel drive function |
| 115 | Update odometer | 116 | Traction battery range |
| 117 | GEAR positions memorization | 118 | Econometer |
| 119 | Flashing buzzer | 11A | Passenger's air bag locking mode |
| 11B | Pass airbag deactivation warning light | 11C | Driver's front airbag |
| 11D | Passenger's front airbag | 11E | Impact information connection |
| 11F | Front left-hand inertia wheel | 120 | Front right-hand inertia wheel |