



Shenzhen Xtooltech Co., Ltd

BENZ V6.9

Tip and Instructions:

- * This feature is new.
- ✓ This feature is supported.
- This feature is not supported.
- ※ This feature is partially supported.

System	System	System	System	System	System	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Actuation Test	Special Function
Truck	16PIN Socket	Arocs(964)	Select System From Manual	CGW Central gateway		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs(964)	Select System From Manual	MCM Engine management		✓	✓	✓	✓	01. Cylinder break test 02. Fan clutch solenoid valve 03. Exhaust gas recirculation controller 04. Heater coolant solenoid valve 05. Fuel metering valve 06. Fuel shut-off valve	01. Perform mechanical compression ratio detection 02. Dynamic cylinder comparison measurement 03. Detect flow correction for idle running 04. Frequency counter 05. Fuel consumption
Truck	16PIN Socket	Arocs(964)	Select System From Manual	ABS Antilock brake system		✓	✓	✓	✓	1. Anti-lock braking system (ABS) solenoid valve 1). Operate the left front axle anti-lock braking system (ABS) solenoid valve 2). Operate the right front axle anti-lock braking system (ABS) solenoid valve 3). Operate the left rear axle anti-lock braking system (ABS) solenoid valve 4). Operate the right rear axle anti-lock braking system (ABS) solenoid valve 2. Speed sensor 1). Check the left front Axle speed sensor 2). Check right front axle speed sensor 3). Check left rear axle speed sensor 4). Check right rear axle speed sensor	
Truck	16PIN Socket	Arocs(964)	Select System From Manual	ACM Exhaust aftertreatment		✓	✓	✓	✓	1. Urea system 1). Activation of AdBlue heating element 2. Diesel particulate filter 1). Manual regeneration of diesel particulate filter 2). Reason for interruption of last regeneration	
Truck	16PIN Socket	Arocs(964)	Select System From Manual	CDS Central data memory		✓	✓	✓			
Truck	16PIN Socket	Arocs(964)	Select System From Manual	COM Communications interface		✓	✓	✓			
Truck	16PIN Socket	Arocs(964)	Select System From Manual	MS Maintenance system		✓	✓	✓	✓		1. Maintenance function 01). Time-based maintenance 02). Air filter 03). Inspection on front axle 04). General maintenance 05). PTO 1 06). PTO 2 07). PTO 3 08). Diesel particulate filter 09). Brake on front axle 1 10). Brake on front axle 2 11). Brake on rear axle 1 12). Brake on rear axle 2 13). Brake on auxiliary axle
Truck	16PIN Socket	Arocs(964)	Select System From Manual	SRS Supplemental restraint system		✓	✓	✓			
Truck	16PIN Socket	Arocs(964)	Select System From Manual	TP Telematics platform		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs(964)	Select System From Manual	TCM Transmission control module		✓	✓	✓	✓	1. Check the clutch 2. Function check of gear shifting process	
Truck	16PIN Socket	Arocs(964)	Select System From Manual	SSAM Signal acquisition and actuation module		✓	✓	✓	✓	01. Signal horn 02. Roof compressed air horn solenoid valve 03. Lighting 01). Left headlight 02). Right headlight 03). Left turn signal and daytime running lights 04). Right turn signal and daytime running lights 05). Left side turn signal lamp 06). Right side turn signal light 07). Left side marker light 08). Right side marker light 09). Left front profile light 10). Right front profile light 11). Left rear light unit 12). Right rear light unit 13). Interior lighting	
Truck	16PIN Socket	Arocs(964)	Select System From Manual	SCA Signal acquisition and actuation module		✓	✓	✓	✓	1. Signal horn 2. Lighting 1). Left headlight 2). Right headlight 3). Left turn signal light and position light 4). Right turn signal lamp and width indicator 5). Left front profile light + right front profile light 6). Left interior lighting 7). Right interior lighting 8). Instrument lighting	
Truck	16PIN Socket	Arocs(964)	Select System From Manual	RCM Retarder		✓	✓	✓	✓	1. Coating retarder	
Truck	16PIN Socket	Arocs(964)	Select System From Manual	CPC Drive control		✓	✓	✓	✓	1. Coolant pressure regulating solenoid valve	1. Replace the retarder
Truck	16PIN Socket	Arocs(964)	Select System From Manual	PPC Predictive Powertrain Control		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs(964)	Select System From Manual	TCO Tachograph		✓	✓	✓	✓		

Truck	16PIN Socket	Arocs (964)	Select System From Manual	ICUC Instrument cluster		✓	✓	✓	✓	01. Background lighting 02. Pointer 03. Multifunctional display 1). The color 'red' in the multifunction display 2). The color 'blue' in the multifunction display 3). The color 'green' in the multifunction display 4). Test chart 5). Video 04. Indicator light 05. Activation of the speaker	
Truck	16PIN Socket	Arocs (964)	Select System From Manual	TCC Radio		✓	✓	✓	✓	1. Activation of the speaker 2. Display test	
Truck	16PIN Socket	Arocs (964)	Select System From Manual	ASA Auxiliary steering		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (964)	Select System From Manual	APS Electrohydraulic power steering		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (964)	Select System From Manual	BESO Battery isolating switch		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (964)	Select System From Manual	CLCS Level control		✓	✓	✓	✓	01. Ride height rear axle 02. 'left side of rear axle' vehicle level 03. 'Rear axle right' vehicle level 04. Ventilation valve	
Truck	16PIN Socket	Arocs (964)	Select System From Manual	EAPU Electronic Air-Processing Unit		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (964)	Select System From Manual	PSM Parameterizable special module		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (964)	Select System From Manual	SCH Frame signal acquisition and actuation module		✓	✓	✓	✓	01. Left rear light unit 02. Right rear light unit 03. Position light 04. Exterior lights for trailers	
Truck	16PIN Socket	Arocs (964)	Select System From Manual	SAS Steering wheel angle sensor		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (964)	Select System From Manual	TPM Tire pressure monitor		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (964)	Select System From Manual	HVAC Heating, ventilation and air conditioning		✓	✓	✓	✓	01. Activation of the component 'Refrigerant compressor electromagnetic clutch' 02. Activation of the component 'Heating check valve' 03. Activation of the component 'lighting' 04. Actuation of the stepper motor 05. Activation of the component 'Blower Motor' 06. Activation of the component 'circuit pump'	
Truck	16PIN Socket	Arocs (964)	Select System From Manual	IAC Stationary air conditioner		✓	✓	✓	✓	01. Activation of the parking air conditioner solenoid valve 02. Activation of the solenoid valve of the auxiliary air conditioner cooler 03. Activation of auxiliary air conditioner blower motor 04. Activation of the coolant pump	
Truck	16PIN Socket	Arocs (964)	Select System From Manual	ITH Auxiliary heating		✓	✓	✓	✓	1. Component testing 1). Glow plug 2). 'Coolant' circulating pump 3). Fuel metering pump 4). Combustion air blower 5). Start heating mode 2. Fill the fuel line before the test run	1. Record the measurements
Truck	16PIN Socket	Arocs (964)	Select System From Manual	ATA Anti-theft alarm system		✓	✓	✓	✓	1. Delete the alarm information source of the component 'Anti-theft alarm system control unit' 2. Delete the alarm history of the component 'Interior Protection System Sensor'	
Truck	16PIN Socket	Arocs (964)	Select System From Manual	DCMD Door module 'Driver'		✓	✓	✓	✓	01. Driver switch group 02. Electric windows 03. Rearview mirror heating device 04. Rearview mirror glass adjustment 05. Central door lock	
Truck	16PIN Socket	Arocs (964)	Select System From Manual	DCMP Door module 'Front passenger'		✓	✓	✓	✓	01. Front passenger switch group 02. Front passenger door exit light 03. Electric windows 04. Rearview mirror glass adjustment 05. Rearview mirror heating device 06. Central door lock motor	
Truck	16PIN Socket	Arocs (964)	Select System From Manual	EIS Electronic ignition lock		✓	✓	✓	✓	1. Activate the component 'locking electromagnet'	
Truck	16PIN Socket	Arocs (964)	Select System From Manual	MSF Modular switch panel		✓	✓	✓	✓	01. Illumination for component 'Flashing alarm switch' 02. Functional lighting of switches or buttons 03. Illumination of the component 'External Lighting Switch'	
Truck	16PIN Socket	Arocs (964)	Select System From Manual	RDF Radar sensor		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (964)	Select System From Manual	RPS Redundant power supply		✓	✓	✓	✓		1. Buffer battery test
Truck	16PIN Socket	Arocs (964)	Select System From Manual	VRDU Driver assistance system		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (964)	Select System From Manual	MPC Name Bauteil		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	CGW Central gateway		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	MCM Engine management		✓	✓	✓	✓	01. Cylinder break test 02. Fan clutch solenoid valve 03. Exhaust gas recirculation controller 04. Heater coolant solenoid valve 05. Fuel metering valve 06. Fuel shut-off valve	01. Carry out mechanical compression ratio detection 02. Dynamic cylinder comparison measurement 03. Detect flow correction for idle running 04. Frequency counter 05. Fuel consumption

Truck	16PIN Socket	Arocs (963)	Select System From Manual	ABS Antilock brake system		✓	✓	✓	✓	<ul style="list-style-type: none"> 1. Anti-lock braking system (ABS) solenoid valve 1). Operate the left front axle anti-lock braking system (ABS) solenoid valve 2). Operate the right front axle anti-lock braking system (ABS) solenoid valve 3). Operate the left rear axle anti-lock braking system (ABS) solenoid valve 4). Operate the right rear axle anti-lock braking system (ABS) solenoid valve 2. Speed ??sensor 1). Check the left front axle speed sensor 2). Check the right front axle speed sensor 3). Check the left rear axle speed sensor 4). Check the right rear axle speed sensor 	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	ACM Exhaust aftertreatment		✓	✓	✓	✓	<ul style="list-style-type: none"> 1. Urea system 1). Actuation of the AdBlue heating element 2. Diesel Particulate Filter 1). Manual regeneration of diesel particulate filter 2). The reason for the interruption of the last regeneration 	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	CDS Central data memory		✓	✓	✓			
Truck	16PIN Socket	Arocs (963)	Select System From Manual	COM Communications interface		✓	✓	✓			
Truck	16PIN Socket	Arocs (963)	Select System From Manual	MS Maintenance system		✓	✓	✓	✓	<ul style="list-style-type: none"> 1. Maintenance function 01). Time-based maintenance 02). Air filter 03). Inspection on the front axle 04). General maintenance 05). PTO 1 06). PTO 2 07). PTO 3 08). Diesel Particulate Filter 09). Brake on front axle 1 10). Brake on front axle 2 11). Brake on rear axle 1 12). Brake on rear axle 2 13). Brake on auxiliary shaft 	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	SRS Supplemental restraint system		✓	✓	✓			
Truck	16PIN Socket	Arocs (963)	Select System From Manual	TP Telematics platform		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	TCM Transmission control module		✓	✓	✓	✓	<ul style="list-style-type: none"> 1. Check the clutch 2. Function check of gear shifting process 	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	SSAM Signal acquisition and actuation module		✓	✓	✓	✓	<ul style="list-style-type: none"> 01. Signal horn 02. Roof compressed air horn solenoid valve 03. Lighting 01). Left headlight 02). Right headlight 03). Left turn signal and daytime running lights 04). Right turn signal and daytime running lights 05). Left side turn signal lamp 06). Right side turn signal light 07). Left side marker light 08). Right side marker light 09). Left front profile light 10). Right front profile light 11). Left rear light unit 12). Right tail light unit 13). Interior lighting 	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	SCA Signal acquisition and actuation module		✓	✓	✓	✓	<ul style="list-style-type: none"> 1. Signal horn 2. Lighting 1). Left headlight 2). Right headlight 3). Left turn signal light and position light 4). Right turn signal lamp and width indicator 5). Left front profile light + right front profile light 6). Left interior lighting 7). Right side interior lighting 8). Instrument lighting 	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	RCM Retarder		✓	✓	✓	✓	<ul style="list-style-type: none"> 1. Coating retarder 	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	CPC Drive control		✓	✓	✓	✓	<ul style="list-style-type: none"> 1. Coolant pressure regulating solenoid valve 	1. Replace the retarder
Truck	16PIN Socket	Arocs (963)	Select System From Manual	PPC Predictive Powertrain Control		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	TCO Tachograph		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	ICIC Instrument cluster		✓	✓	✓	✓	<ul style="list-style-type: none"> 01. Background lighting 02. Pointer 03. Multifunctional display 1). The color 'red' in the multifunction display 2). The color 'blue' in the multifunction display 3). The color 'green' in the multifunction display 4). Test chart 5). Video 04. Indicator light 05. Activation of the speaker 	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	TCC Radio		✓	✓	✓	✓	<ul style="list-style-type: none"> 1. Activation of the speaker 2. Display test 	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	ASA Auxiliary steering		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	APS Electrohydraulic power steering		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	BESO Battery isolating switch		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	CLCS Level control		✓	✓	✓	✓	<ul style="list-style-type: none"> 01. Ride height rear axle 02. 'Rear axle left' vehicle level 03. 'Rear axle right' vehicle level 04. Ventilation valve 	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	EAPU Electronic Air-Processing Unit		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	PSM Parameterizable special module		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	SCH Frame signal acquisition and actuation module		✓	✓	✓	✓	<ul style="list-style-type: none"> 01. Left rear lighting unit 02. Right tail light unit 03. Position light 04. Exterior lights for trailers 	

Truck	16PIN Socket	Arocs (963)	Select System From Manual	SAS Steering wheel angle sensor		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	TPM Tire pressure monitor		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	HVAC Heating, ventilation and air conditioning		✓	✓	✓	✓	01. Activation of the component 'Refrigerant compressor electromagnetic clutch' 02. Activation of the component 'heated check valve' 03. Activation of component 'lighting' 04. Actuating the stepper motor 05. Activation of the component 'Blower Motor' 06. Activation of the component 'preheat pump'	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	IAC Stationary air conditioner		✓	✓	✓	✓	01. Activation of the parking air conditioner solenoid valve 02. Activation of the solenoid valve of the auxiliary air conditioner cooler 03. Activation of auxiliary air conditioner blower motor 04. Activation of the coolant pump	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	ITH Auxiliary heating		✓	✓	✓	✓	1. Component testing 1). Glow plug 2). 'Coolant' circulating pump 3). Fuel metering pump 4). Combustion air blower 5). Start heating mode 2. Fill the fuel line before the test run	1. Record the measurements
Truck	16PIN Socket	Arocs (963)	Select System From Manual	ATA Anti-theft alarm system		✓	✓	✓	✓	1. Delete the alarm information source of the component 'Anti-theft alarm system control unit' 2. Delete the alarm history of the component 'Interior protection system sensor'	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	DCMD Door module 'Driver'		✓	✓	✓	✓	01. Driver switch group 02. Electric windows 03. Rearview mirror heating device 04. Rearview mirror glass adjustment 05. Central door lock	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	DCMP Door module 'Front passenger'		✓	✓	✓	✓	01. Front passenger switch group 02. Front passenger door exit light 03. Electric windows 04. Rearview mirror glass adjustment 05. Rearview mirror heating device 06. Central door lock motor	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	EIS Electronic ignition lock		✓	✓	✓	✓	1. Activate the component 'locking electromagnet'	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	MSF Modular switch panel		✓	✓	✓	✓	01. Illumination for component 'flashing alarm switch' 02. Functional lighting of switches or buttons 03. Illumination of the component 'External Lighting Switch'	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	RDF Radar sensor		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	RPS Redundant power supply		✓	✓	✓	✓		1. Buffer battery test
Truck	16PIN Socket	Arocs (963)	Select System From Manual	VRDU Driver assistance system		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	MPC Name Bauteil		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	CGW Central gateway		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	MCM Engine management		✓	✓	✓	✓	01. Cylinder break test 02. Fan clutch solenoid valve 03. Exhaust gas recirculation controller 04. Heater coolant solenoid valve 05. Fuel metering valve 06. Fuel shut-off valve	01. Carry out mechanical compression ratio detection 02. Dynamic cylinder comparison measurement 03. Detect flow correction for idle running 04. Frequency counter 05. Fuel consumption
Truck	16PIN Socket	Arocs (963)	Select System From Manual	ABS Antilock brake system		✓	✓	✓	✓	1. Anti-lock braking system (ABS) solenoid valve 1). Operate the left front axle anti-lock braking system (ABS) solenoid valve 2). Operate the right front axle anti-lock braking system (ABS) solenoid valve 3). Operate the left rear axle anti-lock braking system (ABS) solenoid valve 4). Operate the right rear axle anti-lock braking system (ABS) solenoid valve 2. Speed sensor 1). Check the left front axle speed sensor 2). Check the right front axle speed sensor 3). Check the left rear axle speed sensor 4). Check the right rear axle speed sensor	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	ACM Exhaust aftertreatment		✓	✓	✓	✓	1. Urea system 1). Actuation of the AdBlue heating element 2. Diesel Particulate Filter 1). Manual regeneration of diesel particulate filter 2). The reason for the interruption of the last regeneration	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	CDS Central data memory		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	COW Communications interface		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	MS Maintenance system		✓	✓	✓	✓		1. Maintenance function 01). Time-based maintenance 02). Air filter 03). Inspection on the front axle 04). General maintenance 05). PTO 1 06). PTO 2 07). PTO 3 08). Diesel Particulate Filter 09). Brake on front axle 1 10). Brake on front axle 2 11). Brake on rear axle 1 12). Brake on rear axle 2 13). Brake on auxiliary shaft
Truck	16PIN Socket	Arocs (963)	Select System From Manual	SRS Supplemental restraint system		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	TP Telematics platform		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	TCM Transmission control module		✓	✓	✓	✓	1. Check the clutch 2. Function check of gear shifting process	

Truck	16PIN Socket	Arocs (963)	Select System From Manual	SSAM Signal acquisition and actuation module		✓	✓	✓	✓	01. Signal horn 02. Roof compressed air horn solenoid valve 03. Lighting 01). Left headlight 02). Right headlight 03). Left turn signal and daytime running lights 04). Right turn signal and daytime running lights 05). Left side turn signal lamp 06). Right side turn signal light 07). Left side marker light 08). Right side marker light 09). Left front profile light 10). Right front profile light 11). Left rear light unit 12). Right tail light unit 13). Interior lighting	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	SCA Signal acquisition and actuation module		✓	✓	✓	✓	1. Signal horn 2. Lighting 1). Left headlight 2). Right headlight 3). Left turn signal light and position light 4). Right turn signal lamp and width indicator 5). Left front profile light + right front profile light 6). Left interior lighting 7). Right side interior lighting 8). Instrument lighting	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	RCM Retarder		✓	✓	✓	✓	1. Coasting retarder	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	CPC Drive control		✓	✓	✓	✓	1. Coolant pressure regulating solenoid valve	1. Replace the retarder
Truck	16PIN Socket	Arocs (963)	Select System From Manual	PPC Predictive Powertrain Control		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	TCO Tachograph		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	ICUC Instrument cluster		✓	✓	✓	✓	01. Background lighting 02. Pointer 03. Multifunctional display 1). The color 'red' in the multifunction display 2). The color 'blue' in the multifunction display 3). The color 'green' in the multifunction display 4). Test chart 5). Video 04. Indicator light 05. Activation of the speaker	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	TCC Radio		✓	✓	✓	✓	1. Activation of the speaker 2. Display test	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	ASA Auxiliary steering		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	APS Electrohydraulic power steering		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	BES0 Battery isolating switch		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	CLCS Level control		✓	✓	✓	✓	01. Ride height rear axle 02. 'Rear axle left' vehicle level 03. 'Rear axle right' vehicle level 04. Ventilation valve	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	EAPU Electronic Air-Processing Unit		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	PSM Parameterizable special module		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	SCH Frame signal acquisition and actuation module		✓	✓	✓	✓	01. Left rear lighting unit 02. Right tail light unit 03. Position light 04. Exterior lights for trailers	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	SAS Steering wheel angle sensor		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	TPM Tire pressure monitor		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	HVAC Heating, ventilation and air conditioning		✓	✓	✓	✓	01. Activation of the component 'Refrigerant compressor electromagnetic clutch' 02. Activation of the component 'heated check valve' 03. Activation of component 'lighting' 04. Actuating the stepper motor 05. Activation of the component 'Blower Motor' 06. Activation of the component 'preheat pump'	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	IAC Stationary air conditioner		✓	✓	✓	✓	01. Activation of the parking air conditioner solenoid valve 02. Activation of the solenoid valve of the auxiliary air conditioner cooler 03. Activation of auxiliary air conditioner blower motor 04. Activation of the coolant pump	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	ITH Auxiliary heating		✓	✓	✓	✓	1. Component testing 1). Glow plug 2). 'Coolant' circulating pump 3). Fuel metering pump 4). Combustion air blower 5). Start heating mode 2. Fill the fuel line before the test run	1. Record the measurements
Truck	16PIN Socket	Arocs (963)	Select System From Manual	ATA Anti-theft alarm system		✓	✓	✓	✓	1. Delete the alarm information source of the component 'Anti-theft alarm system control unit' 2. Delete the alarm history of the component 'Interior Protection System Sensor'	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	DCMD Door module 'Driver'		✓	✓	✓	✓	01. Driver switch group 02. Electric windows 03. Rearview mirror heating device 04. Rearview mirror glass adjustment 05. Central door lock	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	DCMP Door module 'Front passenger'		✓	✓	✓	✓	01. Front passenger switch group 02. Front passenger door exit light 03. Electric windows 04. Rearview mirror glass adjustment 05. Rearview mirror heating device 06. Central door lock motor	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	EIS Electronic ignition lock		✓	✓	✓	✓	1. Activate the component 'locking electromagnet'	

Truck	16PIN Socket	Arocs (963)	Select System From Manual	MSF Modular switch panel		✓	✓	✓	✓	01. Illumination for component 'flashing alarm switch' 02. Functional lighting of switches or buttons 03. Illumination of the component 'External Lighting Switch'	
Truck	16PIN Socket	Arocs (963)	Select System From Manual	RDF Radar sensor		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	RPS Redundant power supply		✓	✓	✓	✓		1. Buffer battery test
Truck	16PIN Socket	Arocs (963)	Select System From Manual	VRDU Driver assistance system		✓	✓	✓	✓		
Truck	16PIN Socket	Arocs (963)	Select System From Manual	MPC Name Bauteil		✓	✓	✓	✓		
Truck	16PIN Socket	Econic (956)	Select System From Manual	CGW Central gateway		✓	✓	✓	✓		
Truck	16PIN Socket	Econic (956)	Select System From Manual	MCM Engine management			✓	✓	✓	01. Cylinder break test 02. Fan clutch solenoid valve 03. Exhaust gas recirculation controller 04. Heater coolant solenoid valve 05. Fuel metering valve 06. Fuel shut-off valve	01. Carry out mechanical compression ratio detection 02. Dynamic cylinder comparison measurement 03. Detect flow correction for idle running 04. Frequency counter 05. Fuel consumption
Truck	16PIN Socket	Econic (956)	Select System From Manual	ABS Antilock brake system		✓	✓	✓	✓	1. Anti-lock braking system (ABS) solenoid valve 1). Operate the left front axle anti-lock braking system (ABS) solenoid valve 2). Operate the right front axle anti-lock braking system (ABS) solenoid valve 3). Operate the left rear axle anti-lock braking system (ABS) solenoid valve 4). Operate the right rear axle anti-lock braking system (ABS) solenoid valve 2. Speed sensor 1). Check the left front axle speed sensor 2). Check the right front axle speed sensor 3). Check the left rear axle speed sensor 4). Check the right rear axle speed sensor	
Truck	16PIN Socket	Econic (956)	Select System From Manual	ACM Exhaust aftertreatment		✓	✓	✓	✓	1. Urea system 1). Actuation of the AdBlue heating element 2. Diesel Particulate Filter 1). Manual regeneration of diesel particulate filter 2). The reason for the interruption of the last regeneration	
Truck	16PIN Socket	Econic (956)	Select System From Manual	CDS Central data memory		✓	✓	✓	✓		
Truck	16PIN Socket	Econic (956)	Select System From Manual	COM Communications interface		✓	✓	✓	✓		
Truck	16PIN Socket	Econic (956)	Select System From Manual	MS Maintenance system		✓	✓	✓	✓		1. Maintenance function 01). Time-based maintenance 02). Air filter 03). Inspection on the front axle 04). General maintenance 05). PTO 1 06). PTO 2 07). PTO 3 08). Diesel Particulate Filter 09). Brake on front axle 1 10). Brake on front axle 2 11). Brake on rear axle 1 12). Brake on rear axle 2 13). Brake on auxiliary shaft
Truck	16PIN Socket	Econic (956)	Select System From Manual	SRS Supplemental restraint system		✓	✓	✓	✓		
Truck	16PIN Socket	Econic (956)	Select System From Manual	TP Telematics platform		✓	✓	✓	✓		
Truck	16PIN Socket	Econic (956)	Select System From Manual	TCM Transmission control module		✓	✓	✓	✓	1. Check the clutch 2. Function check of gear shifting process	
Truck	16PIN Socket	Econic (956)	Select System From Manual	SSAM Signal acquisition and actuation module		✓	✓	✓	✓	01. Signal horn 02. Roof compressed air horn solenoid valve 03. Lighting 01). Left headlight 02). Right headlight 03). Left turn signal and daytime running lights 04). Right turn signal and daytime running lights 05). Left side turn signal lamp 06). Right side turn signal lamp 07). Left side marker light 08). Right side marker light 09). Left front profile light 10). Right front profile light 11). Left rear light unit 12). Right tail light unit 13). Interior lighting	
Truck	16PIN Socket	Econic (956)	Select System From Manual	SCA Signal acquisition and actuation module		✓	✓	✓	✓	1. Signal horn 2. Lighting 1). Left headlight 2). Right headlight 3). Left turn signal light and position light 4). Right turn signal lamp and width indicator 5). Left front profile light + right front profile light 6). Left interior lighting 7). Right side interior lighting 8). Instrument lighting	
Truck	16PIN Socket	Econic (956)	Select System From Manual	RCM Retarder		✓	✓	✓	✓	1. Coating retarder	
Truck	16PIN Socket	Econic (956)	Select System From Manual	CPC Drive control		✓	✓	✓	✓	1. Coolant pressure regulating solenoid valve	1. Replace the retarder
Truck	16PIN Socket	Econic (956)	Select System From Manual	PPC Predictive Powertrain Control		✓	✓	✓	✓		
Truck	16PIN Socket	Econic (956)	Select System From Manual	TCO Tachograph		✓	✓	✓	✓		
Truck	16PIN Socket	Econic (956)	Select System From Manual	ICUC Instrument cluster		✓	✓	✓	✓	01. Background lighting 02. Pointer 03. Multifunctional display 1). The color 'red' in the multifunction display 2). The color 'blue' in the multifunction display 3). The color 'green' in the multifunction display 4). Test chart 5). Video 04. Indicator light 05. Activation of the speaker	

Truck	16PIN Socket	Econic (956)	Select System From Manual	TCC Radio		✓	✓	✓	✓	1. Activation of the speaker 2. Display test
Truck	16PIN Socket	Econic (956)	Select System From Manual	ASA Auxiliary steering		✓	✓	✓	✓	
Truck	16PIN Socket	Econic (956)	Select System From Manual	APS Electrohydraulic power steering		✓	✓	✓	✓	
Truck	16PIN Socket	Econic (956)	Select System From Manual	RESO Battery isolating switch		✓	✓	✓	✓	
Truck	16PIN Socket	Econic (956)	Select System From Manual	CLCS Level control		✓	✓	✓	✓	01. Ride height rear axle 02. 'Rear axle left' vehicle level 03. 'Rear axle right' vehicle level 04. Ventilation valve
Truck	16PIN Socket	Econic (956)	Select System From Manual	EAPU Electronic Air-Processing Unit		✓	✓	✓	✓	
Truck	16PIN Socket	Econic (956)	Select System From Manual	PSM Parameterizable special module		✓	✓	✓	✓	
Truck	16PIN Socket	Econic (956)	Select System From Manual	SCH Frame signal acquisition and actuation module		✓	✓	✓	✓	01. Left rear lighting unit 02. Right tail light unit 03. Position light 04. Exterior lights for trailers
Truck	16PIN Socket	Econic (956)	Select System From Manual	SAS Steering wheel angle sensor		✓	✓	✓	✓	
Truck	16PIN Socket	Econic (956)	Select System From Manual	TPM Tire pressure monitor		✓	✓	✓	✓	
Truck	16PIN Socket	Econic (956)	Select System From Manual	HVAC Heating, ventilation and air conditioning		✓	✓	✓	✓	01. Activation of the component 'Refrigerant compressor electromagnetic clutch' 02. Activation of the component 'heated check valve' 03. Activation of component 'lighting' 04. Actuating the stepper motor 05. Activation of the component 'Blower Motor' 06. Activation of the component 'preheat pump'
Truck	16PIN Socket	Econic (956)	Select System From Manual	IAC Stationary air conditioner		✓	✓	✓	✓	01. Activation of the parking air conditioner solenoid valve 02. Activation of the solenoid valve of the auxiliary air conditioner cooler 03. Activation of auxiliary air conditioner blower motor 04. Activation of the coolant pump
Truck	16PIN Socket	Econic (956)	Select System From Manual	ITH Auxiliary heating		✓	✓	✓	✓	1. Record the measurements
Truck	16PIN Socket	Econic (956)	Select System From Manual	ATA Anti-theft alarm system		✓	✓	✓	✓	1. Delete the alarm information source of the component 'Anti-theft alarm system control unit' 2. Delete the alarm history of the component 'Interior protection system sensor'
Truck	16PIN Socket	Econic (956)	Select System From Manual	DCMD Door module 'Driver'		✓	✓	✓	✓	01. Driver switch group 02. Electric windows 03. Rearview mirror heating device 04. Rearview mirror glass adjustment 05. Central door lock
Truck	16PIN Socket	Econic (956)	Select System From Manual	DCMP Door module 'Front passenger'		✓	✓	✓	✓	01. Front passenger switch group 02. Front passenger door exit light 03. Electric windows 04. Rearview mirror glass adjustment 05. Rearview mirror heating device 06. Central door lock motor
Truck	16PIN Socket	Econic (956)	Select System From Manual	EIS Electronic ignition lock		✓	✓	✓	✓	1. Activate the component 'locking electromagnet'
Truck	16PIN Socket	Econic (956)	Select System From Manual	MSF Modular switch panel		✓	✓	✓	✓	01. Illumination for component 'flashing alarm switch' 02. Functional lighting of switches or buttons 03. Illumination of the component 'External Lighting Switch'
Truck	16PIN Socket	Econic (956)	Select System From Manual	RDF Radar sensor		✓	✓	✓	✓	
Truck	16PIN Socket	Econic (956)	Select System From Manual	RPS Redundant power supply		✓	✓	✓	✓	1. Buffer battery test
Truck	16PIN Socket	Econic (956)	Select System From Manual	VRDU Driver assistance system		✓	✓	✓	✓	
Truck	16PIN Socket	Econic (956)	Select System From Manual	MPC Name Bauteil		✓	✓	✓	✓	
Truck	16PIN Socket	Actros	Select System From Manual	GM Base module		✓	✓	✓	✓	
Truck	16PIN Socket	Actros	Select System From Manual	MR Engine control		✓	✓	✓	✓	01. Single cylinder broken cylinder 02. Mechanical compression test 03. Check the compression ratio 04. Check idle smoothness control 05. Detect knocking time
Truck	16PIN Socket	Actros	Select System From Manual	FR drive control		✓	✓	✓	✓	
Truck	16PIN Socket	Actros	Select System From Manual	BS Brake control		✓	✓	✓	✓	
Truck	16PIN Socket	Actros	Select System From Manual	EDW Anti-theft alarm		✓	✓	✓	✓	
Truck	16PIN Socket	Actros	Select System From Manual	GS Gear control		✓	✓	✓	✓	
Truck	16PIN Socket	Actros	Select System From Manual	INS Instrument		✓	✓	✓	✓	
Truck	16PIN Socket	Actros	Select System From Manual	MTC Modular tachograph		✓	✓	✓	✓	
Truck	16PIN Socket	Actros	Select System From Manual	PSM Parameterizable Special Module		✓	✓	✓	✓	
Truck	16PIN Socket	Actros	Select System From Manual	WS Maintenance System		✓	✓	✓	✓	1. Execution of services 2. Service Storage
Truck	16PIN Socket	Actros	Select System From Manual	FLA Flame starting system		✓	✓	✓	✓	
Truck	16PIN Socket	Actros	Select System From Manual	RS Retarder control		✓	✓	✓	✓	
Truck	16PIN Socket	Actros	Select System From Manual	SPA Lane Assistant		✓	✓	✓	✓	01. Right speaker 02. Left speaker 03. Indicator SPA 04. Mute the radio
Truck	16PIN Socket	Actros	Select System From Manual	FM front module		✓	✓	✓	✓	
Truck	16PIN Socket	Actros	Select System From Manual	ABA Active Brake Assist		✓	✓	✓	✓	
Truck	16PIN Socket	Actros	Select System From Manual	EHZ electro-hydraulic auxiliary steering		✓	✓	✓	✓	
Truck	16PIN Socket	Actros	Select System From Manual	RDK tire pressure control		✓	✓	✓	✓	

Truck	16PIN Socket	Actros	Select System From Manual	Steering wheel angle sensor		✓	✓	✓	✓		
Truck	16PIN Socket	Actros	Select System From Manual	HM Rear module		✓	✓	✓	✓		
Truck	16PIN Socket	Actros	Select System From Manual	MSF Modular switch panel		✓	✓	✓	✓		
Truck	16PIN Socket	Actros	Select System From Manual	BTS Battery disconnect switch		✓	✓	✓	✓		
Truck	16PIN Socket	Actros	Select System From Manual	DTCO Digital Car tachograph		✓	✓	✓	✓		
Truck	16PIN Socket	Actros	Select System From Manual	KOM Communication Interface		✓	✓	✓	✓		
Truck	16PIN Socket	Actros	Select System From Manual	HPS Hydraulic - pneumatic shift		✓	✓	✓	✓		
Truck	16PIN Socket	Actros	Select System From Manual	WSK Turbine clutch		✓	✓	✓	✓		1. Control unit reset
Truck	16PIN Socket	Actros	Select System From Manual	TMB Front passenger door module		✓	✓	✓	✓		1. Front passenger door window lifter 2. Lock motor for passenger door
Truck	16PIN Socket	Actros	Select System From Manual	TMP Driver's door module		✓	✓	✓	✓		
Truck	16PIN Socket	Actros	Select System From Manual	BNT Navigation phone operating unit		✓	✓	✓	✓		01. Display test 02. Test of background lighting 03. Keyboard test
Truck	16PIN Socket	Actros	Select System From Manual	ZHE Auxiliary heating means		✓	✓	✓	✓		1. Pipeline filling before commissioning
Truck	16PIN Socket	Actros	Select System From Manual	ZDS Central data memory		✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	FR drive control	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	FR drive control	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	MTCO Modular tachograph	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	MTCO Modular tachograph	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	PSM Parameterizable Special Module	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	WS Maintenance System	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	GS Gear control (AGS)	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	BS Brake control	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	EHZ Electro-hydraulic auxiliary steering	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	NR Level control	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	NR Level control	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	ABS anti-lock braking system	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	INS Instrument	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	DTCO Digital Car tachograph	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	HPS Hydraulic - pneumatic shift	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	FFB radio remote control	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	ZV central locking system	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO NMB375.1	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO NMB375.1	Select System From Manual	FR drive control	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO NMB375.1	Select System From Manual	MTCO Modular tachograph	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO NMB375.1	Select System From Manual	PSM Parameterizable Special Module	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO NMB375.1	Select System From Manual	EHZ Electro-hydraulic auxiliary steering	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO NMB375.1	Select System From Manual	ABS anti-lock braking system	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO NMB375.1	Select System From Manual	FFB radio remote control	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO NMB375.1	Select System From Manual	ZV central locking system	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO 9BM558.0	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO 9BM558.0	Select System From Manual	FR drive control	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO 9BM558.0	Select System From Manual	MTCO Modular tachograph	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO 9BM558.0	Select System From Manual	PSM Parameterizable Special Module	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO 9BM558.0	Select System From Manual	WS Maintenance System	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO 9BM558.0	Select System From Manual	ABS anti-lock braking system	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO 9BM558.0	Select System From Manual	FFB radio remote control	✓	✓	✓	✓		
Truck	16PIN Socket	ATEGO	ATEGO 9BM558.0	Select System From Manual	ZV central locking system	✓	✓	✓	✓		
Truck	16PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Truck	16PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	FR drive control	✓	✓	✓	✓		
Truck	16PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	GS Gear control	✓	✓	✓	✓		
Truck	16PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	MTCO Modular tachograph	✓	✓	✓	✓		

Truck	16PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	PSM Parameterizable Special Module	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	WS Maintenance System	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	GS Gear control (AGS)	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	BS Brake control	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	EHZ Electro- hydraulic auxiliary steering	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	Steering wheel angle sensor	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	ABS anti-lock braking system	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	NR Level control	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR NMB375.3	Select System From Manual	MR Engine control	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR NMB375.3	Select System From Manual	FR drive control	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR NMB375.3	Select System From Manual	GS Gear control	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR NMB375.3	Select System From Manual	MTC Modular tachograph	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR NMB375.3	Select System From Manual	PSM Parameterizable Special Module	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR NMB375.3	Select System From Manual	WS Maintenance System	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR NMB375.3	Select System From Manual	BS Brake control	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR NMB375.3	Select System From Manual	EHZ Electro- hydraulic auxiliary steering	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR NMB375.3	Select System From Manual	ABS anti-lock braking system	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR NMB375.3	Select System From Manual	NR Level control	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR NMB375.3	Select System From Manual	Steering wheel angle sensor	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR -C WDB940- 944, NAB374.6	Select System From Manual	MR Engine control	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR -C WDB940- 944, NAB374.6	Select System From Manual	FR drive control	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR -C WDB940- 944, NAB374.6	Select System From Manual	GS Gear control	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR -C WDB940- 944, NAB374.6	Select System From Manual	MTC Modular tachograph	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR -C WDB940- 944, NAB374.6	Select System From Manual	PSM Parameterizable Special Module	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR -C WDB940- 944, NAB374.6	Select System From Manual	WS Maintenance System	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR -C WDB940- 944, NAB374.6	Select System From Manual	BS Brake control	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR -C WDB940- 944, NAB374.6	Select System From Manual	EHZ Electro- hydraulic auxiliary steering	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR -C WDB940- 944, NAB374.6	Select System From Manual	ABS anti-lock braking system	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR -C WDB940- 944, NAB374.6	Select System From Manual	NR Level control	✓	✓	✓	✓	
Truck	16PIN Socket	AXOR	AXOR -C WDB940- 944, NAB374.6	Select System From Manual	Steering wheel angle sensor	✓	✓	✓	✓	
Truck	16PIN Socket	ECONIC	Select System From Manual	GM Base module		✓	✓	✓	✓	
Truck	16PIN Socket	ECONIC	Select System From Manual	MR Engine control		✓	✓	✓	✓	
Truck	16PIN Socket	ECONIC	Select System From Manual	FR drive control		✓	✓	✓	✓	
Truck	16PIN Socket	ECONIC	Select System From Manual	BS Brake control		✓	✓	✓	✓	
Truck	16PIN Socket	ECONIC	Select System From Manual	EDW Anti-theft alarm		✓	✓	✓	✓	
Truck	16PIN Socket	ECONIC	Select System From Manual	GS Gear control		✓	✓	✓	✓	
Truck	16PIN Socket	ECONIC	Select System From Manual	INS Instrument		✓	✓	✓	✓	
Truck	16PIN Socket	ECONIC	Select System From Manual	MTC Modular tachograph		✓	✓	✓	✓	
Truck	16PIN Socket	ECONIC	Select System From Manual	PSM Parameterizable Special Module		✓	✓	✓	✓	
Truck	16PIN Socket	ECONIC	Select System From Manual	WS Maintenance System		✓	✓	✓	✓	
Truck	16PIN Socket	ECONIC	Select System From Manual	FLA Flame starting system		✓	✓	✓	✓	
Truck	16PIN Socket	ECONIC	Select System From Manual	RS Retarder control		✓	✓	✓	✓	
Truck	16PIN Socket	ECONIC	Select System From Manual	SPA Lane Assistant		✓	✓	✓	✓	
Truck	16PIN Socket	ECONIC	Select System From Manual	FM front module		✓	✓	✓	✓	
Truck	16PIN Socket	ECONIC	Select System From Manual	ABA Active Brake Assist		✓	✓	✓	✓	
Truck	16PIN Socket	ECONIC	Select System From Manual	EHZ electro- hydraulic auxiliary steering		✓	✓	✓	✓	
Truck	16PIN Socket	ECONIC	Select System From Manual	RDR tire pressure control		✓	✓	✓	✓	
Truck	16PIN Socket	ECONIC	Select System From Manual	Steering wheel angle sensor		✓	✓	✓	✓	
Truck	16PIN Socket	ECONIC	Select System From Manual	HM Rear module		✓	✓	✓	✓	
Truck	16PIN Socket	ECONIC	Select System From Manual	MSF Modular switch panel		✓	✓	✓	✓	
Truck	14PIN Socket	ACTROS	Select System From Manual	MR Engine control		✓	✓	✓	✓	
Truck	14PIN Socket	ACTROS	Select System From Manual	MTC Modular tachograph		✓	✓	✓	✓	
Truck	14PIN Socket	ACTROS	Select System From Manual	PSM Parameterizable Special Module		✓	✓	✓	✓	

Truck	14PIN Socket	ACTROS	Select System From Manual	FLA Flame starting system		✓	✓	✓	✓		
Truck	14PIN Socket	ACTROS	Select System From Manual	WS Maintenance System		✓	✓	✓	✓		
Truck	14PIN Socket	ACTROS	Select System From Manual	SPA Lane Assistant		✓	✓	✓	✓		
Truck	14PIN Socket	ACTROS	Select System From Manual	AG automatic gear selection (AGE)		✓	✓	✓	✓		
Truck	14PIN Socket	ACTROS	Select System From Manual	GS Gear control		✓	✓	✓	✓		
Truck	14PIN Socket	ACTROS	Select System From Manual	ABS anti-lock braking system		✓	✓	✓	✓		
Truck	14PIN Socket	ACTROS	Select System From Manual	NR level control		✓	✓	✓	✓		
Truck	14PIN Socket	ACTROS	Select System From Manual	TCO Tachograph		✓	✓	✓	✓		
Truck	14PIN Socket	ACTROS	Select System From Manual	EDW Anti-theft alarm		✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	FR drive control	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	MTCO Modular tachograph	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	PSM Parameterizable Special Module	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	WS Maintenance System	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	GS Gear control (AGS)	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	BS Brake control	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	EHZ Electro-hydraulic auxiliary steering	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	NR Level control	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	NR Level control	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO WDB970-976, NAB374, 4	Select System From Manual	ABS anti-lock braking system	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO WDB950.5-954.6	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO WDB950.5-954.6	Select System From Manual	FR drive control	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO WDB950.5-954.6	Select System From Manual	MTCO Modular tachograph	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO WDB950.5-954.6	Select System From Manual	PSM Parameterizable Special Module	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO WDB950.5-954.6	Select System From Manual	WS Maintenance System	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO WDB950.5-954.6	Select System From Manual	GS Gear control (AGS)	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO WDB950.5-954.6	Select System From Manual	BS Brake control	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO WDB950.5-954.6	Select System From Manual	EHZ Electro-hydraulic auxiliary steering	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO WDB950.5-954.6	Select System From Manual	ABS anti-lock braking system	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO NMB375.1	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO NMB375.1	Select System From Manual	FR drive control	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO NMB375.1	Select System From Manual	MTCO Modular tachograph	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO NMB375.1	Select System From Manual	PSM Parameterizable Special Module	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO NMB375.1	Select System From Manual	EHZ Electro-hydraulic auxiliary steering	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO NMB375.1	Select System From Manual	ABS anti-lock braking system	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO 9BMS58.0	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO 9BMS58.0	Select System From Manual	FR drive control	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO 9BMS58.0	Select System From Manual	MTCO Modular tachograph	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO 9BMS58.0	Select System From Manual	PSM Parameterizable Special Module	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO 9BMS58.0	Select System From Manual	WS Maintenance System	✓	✓	✓	✓		
Truck	14PIN Socket	ATEGO	ATEGO 9BMS58.0	Select System From Manual	ABS anti-lock braking system	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	FR drive control	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	GS Gear control	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	MTCO Modular tachograph	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	PSM Parameterizable Special Module	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	WS Maintenance System	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	GS Gear control (AGS)	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	BS Brake control	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	EHZ Electro-hydraulic auxiliary steering	✓	✓	✓	✓		

Truck	14PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	Steering wheel angle sensor	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	ABS anti-lock braking system	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR -R WDB950.5 - 954.6, NAB374.5	Select System From Manual	NR Level control	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR NMB375.3	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR NMB375.3	Select System From Manual	FR drive control	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR NMB375.3	Select System From Manual	GS Gear control	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR NMB375.3	Select System From Manual	MTCO Modular tachograph	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR NMB375.3	Select System From Manual	PSM Parameterizable Special Module	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR NMB375.3	Select System From Manual	WS Maintenance System	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR NMB375.3	Select System From Manual	BS Brake control	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR NMB375.3	Select System From Manual	EHZ Electro- hydraulic auxiliary steering	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR NMB375.3	Select System From Manual	ABS anti-lock braking system	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR NMB375.3	Select System From Manual	NR Level control	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR NMB375.3	Select System From Manual	Steering wheel angle sensor	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR -C WDB940- 944, NAB374.6	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR -C WDB940- 944, NAB374.6	Select System From Manual	FR drive control	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR -C WDB940- 944, NAB374.6	Select System From Manual	GS Gear control	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR -C WDB940- 944, NAB374.6	Select System From Manual	MTCO Modular tachograph	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR -C WDB940- 944, NAB374.6	Select System From Manual	PSM Parameterizable Special Module	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR -C WDB940- 944, NAB374.6	Select System From Manual	WS Maintenance System	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR -C WDB940- 944, NAB374.6	Select System From Manual	BS Brake control	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR -C WDB940- 944, NAB374.6	Select System From Manual	EHZ Electro- hydraulic auxiliary steering	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR -C WDB940- 944, NAB374.6	Select System From Manual	ABS anti-lock braking system	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR -C WDB940- 944, NAB374.6	Select System From Manual	NR Level control	✓	✓	✓	✓		
Truck	14PIN Socket	AXOR	AXOR -C WDB940- 944, NAB374.6	Select System From Manual	Steering wheel angle sensor	✓	✓	✓	✓		
Truck	14PIN Socket	ECONIC	Select System From Manual	GM Base module		✓	✓	✓	✓		
Truck	14PIN Socket	ECONIC	Select System From Manual	MR Engine control		✓	✓	✓	✓		
Truck	14PIN Socket	ECONIC	Select System From Manual	FR drive control		✓	✓	✓	✓		
Truck	14PIN Socket	ECONIC	Select System From Manual	BS Brake control		✓	✓	✓	✓		
Truck	14PIN Socket	ECONIC	Select System From Manual	EDW Anti-theft alarm		✓	✓	✓	✓		
Truck	14PIN Socket	ECONIC	Select System From Manual	GS Gear control		✓	✓	✓	✓		
Truck	14PIN Socket	ECONIC	Select System From Manual	INS Instrument		✓	✓	✓	✓		
Truck	14PIN Socket	ECONIC	Select System From Manual	MTCO Modular tachograph		✓	✓	✓	✓		
Truck	14PIN Socket	ECONIC	Select System From Manual	PSM Parameterizable Special Module		✓	✓	✓	✓		
Truck	14PIN Socket	ECONIC	Select System From Manual	WS Maintenance System		✓	✓	✓	✓		
Truck	14PIN Socket	ECONIC	Select System From Manual	FLA Flame starting system		✓	✓	✓	✓		
Truck	14PIN Socket	ECONIC	Select System From Manual	RS Retarder control		✓	✓	✓	✓		
Truck	14PIN Socket	ECONIC	Select System From Manual	SPA Lane Assistant		✓	✓	✓	✓		
Truck	14PIN Socket	ECONIC	Select System From Manual	FM front module		✓	✓	✓	✓		
Truck	14PIN Socket	ECONIC	Select System From Manual	ABA Active Brake Assist		✓	✓	✓	✓		
Truck	14PIN Socket	ECONIC	Select System From Manual	EHZ electro- hydraulic auxiliary steering		✓	✓	✓	✓		
Truck	14PIN Socket	ECONIC	Select System From Manual	RDK tire pressure control		✓	✓	✓	✓		
Truck	14PIN Socket	ECONIC	Select System From Manual	Steering wheel angle sensor		✓	✓	✓	✓		
Truck	14PIN Socket	ECONIC	Select System From Manual	HM Rear module		✓	✓	✓	✓		
Truck	14PIN Socket	ECONIC	Select System From Manual	MSF Modular switch panel		✓	✓	✓	✓		
Bus	16PIN Socket	TRAVEGO	Select System From Manual	MR Engine control		✓	✓	✓	✓		
Bus	16PIN Socket	TRAVEGO	Select System From Manual	FR drive control		✓	✓	✓	✓		
Bus	16PIN Socket	TRAVEGO	Select System From Manual	GS Gear control(AGS)		✓	✓	✓	✓		
Bus	16PIN Socket	TRAVEGO	Select System From Manual	ABS anti-lock braking system		✓	✓	✓	✓		
Bus	16PIN Socket	TRAVEGO	Select System From Manual	ZTA Central locking system		✓	✓	✓	✓		
Bus	16PIN Socket	TRAVEGO	Select System From Manual	ZHE Auxiliary heater		✓	✓	✓	✓		
Bus	16PIN Socket	TRAVEGO	Select System From Manual	PPS Flexibly programmed control		✓	✓	✓	✓		
Bus	16PIN Socket	TRAVEGO	Select System From Manual	DMUX Display multiplexer		✓	✓	✓	✓		
Bus	16PIN Socket	TRAVEGO	Select System From Manual	BS Brake control		✓	✓	✓	✓		
Bus	16PIN Socket	TRAVEGO	Select System From Manual	RS Retarder control		✓	✓	✓	✓		
Bus	16PIN Socket	TRAVEGO	Select System From Manual	ART Autonomous intelligent cruise control		✓	✓	✓	✓		

Bus	16PIN Socket	TRAVEGO	Select System From Manual	NRI Level control solo bus or front vehicle		✓	✓	✓	✓		
Bus	16PIN Socket	TRAVEGO	Select System From Manual	SPA Lane Assistant		✓	✓	✓	✓		
Bus	16PIN Socket	TRAVEGO	Select System From Manual	ZL Auxiliary steering		✓	✓	✓	✓		
Bus	16PIN Socket	TRAVEGO	Select System From Manual	Steering wheel angle sensor		✓	✓	✓	✓		
Bus	16PIN Socket	TRAVEGO	Select System From Manual	MIS Modular door control system		✓	✓	✓	✓		
Bus	16PIN Socket	TRAVEGO	Select System From Manual	HLK Heating-Ventilation-Cooling		✓	✓	✓	✓		
Bus	16PIN Socket	INTOURO	INTOURO (C632)	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Bus	16PIN Socket	INTOURO	INTOURO (C632)	Select System From Manual	FR drive control	✓	✓	✓	✓		
Bus	16PIN Socket	INTOURO	INTOURO (C632)	Select System From Manual	ABS anti-lock braking system	✓	✓	✓	✓		
Bus	16PIN Socket	INTOURO	INTOURO (C632)	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	16PIN Socket	INTOURO	INTOURO (C632)	Select System From Manual	FPS Flexibly programmed control	✓	✓	✓	✓		
Bus	16PIN Socket	INTOURO	INTOURO (C632)	Select System From Manual	DMUX Display multiplexer	✓	✓	✓	✓		
Bus	16PIN Socket	INTOURO	INTOURO (C632)	Select System From Manual	BS Brake control	✓	✓	✓	✓		
Bus	16PIN Socket	INTOURO	INTOURO (C632)	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	16PIN Socket	INTOURO	INTOURO (C632)	Select System From Manual	NRI Level control solo bus or front vehicle	✓	✓	✓	✓		
Bus	16PIN Socket	INTOURO	INTOURO (C632)	Select System From Manual	Steering wheel angle sensor	✓	✓	✓	✓		
Bus	16PIN Socket	INTOURO	INTOURO (C632)	Select System From Manual	MIS Modular door control system	✓	✓	✓	✓		
Bus	16PIN Socket	INTOURO	INTOURO (C632)	Select System From Manual	HLK Heating-Ventilation-Cooling	✓	✓	✓	✓		
Bus	16PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Bus	16PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	FR drive control	✓	✓	✓	✓		
Bus	16PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	GS Gear control (AGS)	✓	✓	✓	✓		
Bus	16PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	ABS anti-lock braking system	✓	✓	✓	✓		
Bus	16PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	ZVA Central locking system	✓	✓	✓	✓		
Bus	16PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	16PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	FPS Flexibly programmed control	✓	✓	✓	✓		
Bus	16PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	DMUX Display multiplexer	✓	✓	✓	✓		
Bus	16PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	BS Brake control	✓	✓	✓	✓		
Bus	16PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	16PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	NRI Level control solo bus or front vehicle	✓	✓	✓	✓		
Bus	16PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	ZL Auxiliary steering	✓	✓	✓	✓		
Bus	16PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	Steering wheel angle sensor	✓	✓	✓	✓		
Bus	16PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	MIS Modular door control system	✓	✓	✓	✓		
Bus	16PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	HLK Heating-Ventilation-Cooling	✓	✓	✓	✓		
Bus	16PIN Socket	CTIARO	Select System From Manual	MR Engine control		✓	✓	✓	✓		
Bus	16PIN Socket	CTIARO	Select System From Manual	FR drive control		✓	✓	✓	✓		
Bus	16PIN Socket	CTIARO	Select System From Manual	GS Gear control (AGS)		✓	✓	✓	✓		
Bus	16PIN Socket	CTIARO	Select System From Manual	ZHE Auxiliary heater		✓	✓	✓	✓		
Bus	16PIN Socket	CTIARO	Select System From Manual	FPS Flexibly programmed control		✓	✓	✓	✓		
Bus	16PIN Socket	CTIARO	Select System From Manual	DMUX Display multiplexer		✓	✓	✓	✓		
Bus	16PIN Socket	CTIARO	Select System From Manual	BS Brake control		✓	✓	✓	✓		
Bus	16PIN Socket	CTIARO	Select System From Manual	RS Retarder control		✓	✓	✓	✓		
Bus	16PIN Socket	CTIARO	Select System From Manual	NRI Level control solo bus or front vehicle		✓	✓	✓	✓		
Bus	16PIN Socket	CTIARO	Select System From Manual	ZL Auxiliary steering		✓	✓	✓	✓		
Bus	16PIN Socket	CTIARO	Select System From Manual	Steering wheel angle sensor		✓	✓	✓	✓		
Bus	16PIN Socket	CTIARO	Select System From Manual	MIS Modular door control system		✓	✓	✓	✓		
Bus	16PIN Socket	CTIARO	Select System From Manual	HLK Heating-Ventilation-Cooling		✓	✓	✓	✓		
Bus	16PIN Socket	OC500	OC500 LF LFA	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Bus	16PIN Socket	OC500	OC500 LF LFA	Select System From Manual	FR drive control	✓	✓	✓	✓		
Bus	16PIN Socket	OC500	OC500 LF LFA	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	16PIN Socket	OC500	OC500 LF LFA	Select System From Manual	FPS Flexibly programmed control	✓	✓	✓	✓		
Bus	16PIN Socket	OC500	OC500 LF LFA	Select System From Manual	DMUX Display multiplexer	✓	✓	✓	✓		
Bus	16PIN Socket	OC500	OC500 LF LFA	Select System From Manual	BS Brake control	✓	✓	✓	✓		
Bus	16PIN Socket	OC500	OC500 LF LFA	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	16PIN Socket	OC500	OC500 LF LFA	Select System From Manual	NRI Level control solo bus or front vehicle	✓	✓	✓	✓		
Bus	16PIN Socket	OC500	OC500 LF LFA	Select System From Manual	Steering wheel angle sensor	✓	✓	✓	✓		

Bus	16PIN Socket	OC500	OC500 LF LFA	Select System From Manual	MTS Modular door control system	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	FR drive control	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	GS Gear control (AGS)	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	ZVA Central locking system	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	FPS Flexibly programmed control	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	DMUX Display multiplexer	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	BS Brake control	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	ART Autonomous intelligent cruise control	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	NRI Level control solo bus or front vehicle	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	SPA Lane Assistant	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	ZL Auxiliary steering	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	Steering wheel angle sensor	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	MTS Modular door control system	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	HLK Heating-Ventilation-Cooling	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	CLS/ATA central locking system with anti-theft alarm	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	FR drive control	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	GS Gear control (AGS)	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	ZVA Central locking system	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	FPS Flexibly programmed control	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	DMUX Display multiplexer	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	BS Brake control	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	ART Autonomous intelligent cruise control	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	NRI Level control solo bus or front vehicle	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	SPA Lane Assistant	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	ZL Auxiliary steering	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	Steering wheel angle sensor	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	MTS Modular door control system	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	HLK Heating-Ventilation-Cooling	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	ABA Active Brake Assist	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	FR drive control	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	ABS anti-lock braking system	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	GS Gear control (AGS)	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	ZVA Central locking system	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	FPS Flexibly programmed control	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	DMUX Display multiplexer	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	BS Brake control	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	NRI Level control solo bus or front vehicle	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	ZL Auxiliary steering	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	Steering wheel angle sensor	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	MTS Modular door control system	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	HLK Heating-Ventilation-Cooling	✓	✓	✓	✓		

Bus	16PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	ABA Active Brake Assist	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass (NC)	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass (NC)	Select System From Manual	FR drive control	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass (NC)	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass (NC)	Select System From Manual	FPS Flexibly programmed control	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass (NC)	Select System From Manual	DMUX Display multiplexer	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass (NC)	Select System From Manual	BS Brake control	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass (NC)	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass (NC)	Select System From Manual	NRI Level control solo bus or front vehicle	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass (NC)	Select System From Manual	ZL Auxiliary steering	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass (NC)	Select System From Manual	Steering wheel angle sensor	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass (NC)	Select System From Manual	MTS Modular door control system	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 MultiClass (NC)	Select System From Manual	HLK Heating-Ventilation-Cooling	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 TopClass USA	Select System From Manual	ZVA Central locking system	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 TopClass USA	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 TopClass USA	Select System From Manual	FPS Flexibly programmed control	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 TopClass USA	Select System From Manual	DMUX Display multiplexer	✓	✓	✓	✓		
Bus	16PIN Socket	BR400	Setra BR400 TopClass USA	Select System From Manual	MTS Modular door control system	✓	✓	✓	✓		
Bus	16PIN Socket	TOURISMO 0403	TOURISMO (C632)	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Bus	16PIN Socket	TOURISMO 0403	TOURISMO (C632)	Select System From Manual	FR drive control	✓	✓	✓	✓		
Bus	16PIN Socket	TOURISMO 0403	TOURISMO (C632)	Select System From Manual	GS Gear control (AGS)	✓	✓	✓	✓		
Bus	16PIN Socket	TOURISMO 0403	TOURISMO (C632)	Select System From Manual	ABS anti-lock braking system	✓	✓	✓	✓		
Bus	16PIN Socket	TOURISMO 0403	TOURISMO (C632)	Select System From Manual	ZVA Central locking system	✓	✓	✓	✓		
Bus	16PIN Socket	TOURISMO 0403	TOURISMO (C632)	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	16PIN Socket	TOURISMO 0403	TOURISMO (C632)	Select System From Manual	FPS Flexibly programmed control	✓	✓	✓	✓		
Bus	16PIN Socket	TOURISMO 0403	TOURISMO (C632)	Select System From Manual	DMUX Display multiplexer	✓	✓	✓	✓		
Bus	16PIN Socket	TOURISMO 0403	TOURISMO (C632)	Select System From Manual	BS Brake control	✓	✓	✓	✓		
Bus	16PIN Socket	TOURISMO 0403	TOURISMO (C632)	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	16PIN Socket	TOURISMO 0403	TOURISMO (C632)	Select System From Manual	NRI Level control solo bus or front vehicle	✓	✓	✓	✓		
Bus	16PIN Socket	TOURISMO 0403	TOURISMO (C632)	Select System From Manual	Steering wheel angle sensor	✓	✓	✓	✓		
Bus	16PIN Socket	TOURISMO 0403	TOURISMO (C632)	Select System From Manual	MTS Modular door control system	✓	✓	✓	✓		
Bus	16PIN Socket	TOURISMO 0403	TOURISMO (C632)	Select System From Manual	HLK Heating-Ventilation-Cooling	✓	✓	✓	✓		
Bus	16PIN Socket	TOURISMO 0403	TOURISMO (C632)	Select System From Manual	ABA Active Brake Assist	✓	✓	✓	✓		
Bus	16PIN Socket	CONNECTO 0345	Select System From Manual	MR Engine control		✓	✓	✓	✓		
Bus	16PIN Socket	CONNECTO 0345	Select System From Manual	FR drive control		✓	✓	✓	✓		
Bus	16PIN Socket	CONNECTO 0345	Select System From Manual	ZHE Auxiliary heater		✓	✓	✓	✓		
Bus	16PIN Socket	CONNECTO 0345	Select System From Manual	FPS Flexibly programmed control		✓	✓	✓	✓		
Bus	16PIN Socket	CONNECTO 0345	Select System From Manual	DMUX Display multiplexer		✓	✓	✓	✓		
Bus	16PIN Socket	CONNECTO 0345	Select System From Manual	BS Brake control		✓	✓	✓	✓		
Bus	16PIN Socket	CONNECTO 0345	Select System From Manual	NRI Level control solo bus or front vehicle		✓	✓	✓	✓		
Bus	16PIN Socket	CONNECTO 0345	Select System From Manual	ZL Auxiliary steering		✓	✓	✓	✓		
Bus	16PIN Socket	CONNECTO 0345	Select System From Manual	Steering wheel angle sensor		✓	✓	✓	✓		
Bus	16PIN Socket	CONNECTO 0345	Select System From Manual	HLK Heating-Ventilation-Cooling		✓	✓	✓	✓		
Bus	16PIN Socket	CAPACITY	Select System From Manual	MR Engine control		✓	✓	✓	✓		
Bus	16PIN Socket	CAPACITY	Select System From Manual	FR drive control		✓	✓	✓	✓		
Bus	16PIN Socket	CAPACITY	Select System From Manual	ZHE Auxiliary heater		✓	✓	✓	✓		
Bus	16PIN Socket	CAPACITY	Select System From Manual	FPS Flexibly programmed control		✓	✓	✓	✓		
Bus	16PIN Socket	CAPACITY	Select System From Manual	DMUX Display multiplexer		✓	✓	✓	✓		
Bus	16PIN Socket	CAPACITY	Select System From Manual	BS Brake control		✓	✓	✓	✓		
Bus	16PIN Socket	CAPACITY	Select System From Manual	NRI Level control solo bus or front vehicle		✓	✓	✓	✓		
Bus	16PIN Socket	CAPACITY	Select System From Manual	ZL Auxiliary steering		✓	✓	✓	✓		
Bus	16PIN Socket	CAPACITY	Select System From Manual	Steering wheel angle sensor		✓	✓	✓	✓		
Bus	16PIN Socket	CAPACITY	Select System From Manual	MTS Modular door control system		✓	✓	✓	✓		
Bus	16PIN Socket	CAPACITY	Select System From Manual	HLK Heating-Ventilation-Cooling		✓	✓	✓	✓		
Bus	14PIN Socket	TRAVEGO	Select System From Manual	MR Engine control		✓	✓	✓	✓		

Bus	14PIN Socket	TRAVEGO	Select System From Manual	FR drive control		✓	✓	✓	✓		
Bus	14PIN Socket	TRAVEGO	Select System From Manual	GS Gear control (AGS)		✓	✓	✓	✓		
Bus	14PIN Socket	TRAVEGO	Select System From Manual	ABS anti-lock braking system		✓	✓	✓	✓		
Bus	14PIN Socket	TRAVEGO	Select System From Manual	ZVA Central locking system		✓	✓	✓	✓		
Bus	14PIN Socket	TRAVEGO	Select System From Manual	ZHE Auxiliary heater		✓	✓	✓	✓		
Bus	14PIN Socket	TRAVEGO	Select System From Manual	FPS Flexibly programmed control		✓	✓	✓	✓		
Bus	14PIN Socket	TRAVEGO	Select System From Manual	DMUX Display multiplexer		✓	✓	✓	✓		
Bus	14PIN Socket	TRAVEGO	Select System From Manual	BS Brake control		✓	✓	✓	✓		
Bus	14PIN Socket	TRAVEGO	Select System From Manual	RS Retarder control		✓	✓	✓	✓		
Bus	14PIN Socket	TRAVEGO	Select System From Manual	ART Autonomous intelligent cruise control		✓	✓	✓	✓		
Bus	14PIN Socket	TRAVEGO	Select System From Manual	NR1 Level control solo bus or front vehicle		✓	✓	✓	✓		
Bus	14PIN Socket	TRAVEGO	Select System From Manual	SPA Lane Assistant		✓	✓	✓	✓		
Bus	14PIN Socket	TRAVEGO	Select System From Manual	ZL Auxiliary steering		✓	✓	✓	✓		
Bus	14PIN Socket	TRAVEGO	Select System From Manual	Steering wheel angle sensor		✓	✓	✓	✓		
Bus	14PIN Socket	TRAVEGO	Select System From Manual	MTS Modular door control system		✓	✓	✓	✓		
Bus	14PIN Socket	TRAVEGO	Select System From Manual	HLK Heating-Ventilation-Cooling		✓	✓	✓	✓		
Bus	14PIN Socket	INTOURO	0560 INTOURO EuroIII	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Bus	14PIN Socket	INTOURO	0560 INTOURO EuroIII	Select System From Manual	FR drive control	✓	✓	✓	✓		
Bus	14PIN Socket	INTOURO	0560 INTOURO EuroIII	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	14PIN Socket	INTOURO	0560 INTOURO EuroIII	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	14PIN Socket	INTOURO	INTOURO (C632)	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Bus	14PIN Socket	INTOURO	INTOURO (C632)	Select System From Manual	FR drive control	✓	✓	✓	✓		
Bus	14PIN Socket	INTOURO	INTOURO (C632)	Select System From Manual	ABS anti-lock braking system	✓	✓	✓	✓		
Bus	14PIN Socket	INTOURO	INTOURO (C632)	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	14PIN Socket	INTOURO	INTOURO (C632)	Select System From Manual	FPS Flexibly programmed control	✓	✓	✓	✓		
Bus	14PIN Socket	INTOURO	INTOURO (C632)	Select System From Manual	DMUX Display multiplexer	✓	✓	✓	✓		
Bus	14PIN Socket	INTOURO	INTOURO (C632)	Select System From Manual	BS Brake control	✓	✓	✓	✓		
Bus	14PIN Socket	INTOURO	INTOURO (C632)	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	14PIN Socket	INTOURO	INTOURO (C632)	Select System From Manual	MTS Modular door control system	✓	✓	✓	✓		
Bus	14PIN Socket	INTOURO	INTOURO (C632)	Select System From Manual	HLK Heating-Ventilation-Cooling	✓	✓	✓	✓		
Bus	14PIN Socket	INTEGRO	0550 INTEGRO	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Bus	14PIN Socket	INTEGRO	0550 INTEGRO	Select System From Manual	FR drive control	✓	✓	✓	✓		
Bus	14PIN Socket	INTEGRO	0550 INTEGRO	Select System From Manual	GS Gear control (AGS)	✓	✓	✓	✓		
Bus	14PIN Socket	INTEGRO	0550 INTEGRO	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	14PIN Socket	INTEGRO	0550 INTEGRO	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	14PIN Socket	INTEGRO	0550 INTEGRO	Select System From Manual	MTS Modular door control system	✓	✓	✓	✓		
Bus	14PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Bus	14PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	FR drive control	✓	✓	✓	✓		
Bus	14PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	GS Gear control (AGS)	✓	✓	✓	✓		
Bus	14PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	ABS anti-lock braking system	✓	✓	✓	✓		
Bus	14PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	ZVA Central locking system	✓	✓	✓	✓		
Bus	14PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	14PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	FPS Flexibly programmed control	✓	✓	✓	✓		
Bus	14PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	DMUX Display multiplexer	✓	✓	✓	✓		
Bus	14PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	BS Brake control	✓	✓	✓	✓		
Bus	14PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	14PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	NR1 Level control solo bus or front vehicle	✓	✓	✓	✓		
Bus	14PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	MTS Modular door control system	✓	✓	✓	✓		
Bus	14PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	HLK Heating-Ventilation-Cooling	✓	✓	✓	✓		
Bus	14PIN Socket	INTEGRO	INTEGRO (C633)	Select System From Manual	GS Gear control (AGS)	✓	✓	✓	✓		
Bus	14PIN Socket	CTIARO	Select System From Manual	FR drive control		✓	✓	✓	✓		
Bus	14PIN Socket	CTIARO	Select System From Manual	ZHE Auxiliary heater		✓	✓	✓	✓		
Bus	14PIN Socket	CTIARO	Select System From Manual	FPS Flexibly programmed control		✓	✓	✓	✓		
Bus	14PIN Socket	CTIARO	Select System From Manual	DMUX Display multiplexer		✓	✓	✓	✓		
Bus	14PIN Socket	CTIARO	Select System From Manual	BS Brake control		✓	✓	✓	✓		
Bus	14PIN Socket	CTIARO	Select System From Manual	RS Retarder control		✓	✓	✓	✓		
Bus	14PIN Socket	CTIARO	Select System From Manual	NR1 Level control solo bus or front vehicle		✓	✓	✓	✓		
Bus	14PIN Socket	CTIARO	Select System From Manual	ZL Auxiliary steering		✓	✓	✓	✓		

Bus	14PIN Socket	CTIARO	Select System From Manual	Steering wheel angle sensor		✓	✓	✓	✓		
Bus	14PIN Socket	CTIARO	Select System From Manual	MTS Modular door control system		✓	✓	✓	✓		
Bus	14PIN Socket	CTIARO	Select System From Manual	HLK Heating-Ventilation-Cooling		✓	✓	✓	✓		
Bus	14PIN Socket	CITO	Select System From Manual	MR Engine control		✓	✓	✓	✓		
Bus	14PIN Socket	CITO	Select System From Manual	FR drive control		✓	✓	✓	✓		
Bus	14PIN Socket	CITO	Select System From Manual	ZHE Auxiliary heater		✓	✓	✓	✓		
Bus	14PIN Socket	CITO	Select System From Manual	FPS Flexibly programmed control		✓	✓	✓	✓		
Bus	14PIN Socket	CITO	Select System From Manual	BS Brake control		✓	✓	✓	✓		
Bus	14PIN Socket	CITO	Select System From Manual	MTS Modular door control system		✓	✓	✓	✓		
Bus	14PIN Socket	CITO	Select System From Manual	HLK Heating-Ventilation-Cooling		✓	✓	✓	✓		
Bus	14PIN Socket	CITO	Select System From Manual	FE Drive electronics		✓	✓	✓	✓		
Bus	14PIN Socket	OC500	OC500 LF LFA	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Bus	14PIN Socket	OC500	OC500 LF LFA	Select System From Manual	FR drive control	✓	✓	✓	✓		
Bus	14PIN Socket	OC500	OC500 LF LFA	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	14PIN Socket	OC500	OC500 LF LFA	Select System From Manual	FPS Flexibly programmed control	✓	✓	✓	✓		
Bus	14PIN Socket	OC500	OC500 LF LFA	Select System From Manual	DMUX Display multiplexer	✓	✓	✓	✓		
Bus	14PIN Socket	OC500	OC500 LF LFA	Select System From Manual	BS Brake control	✓	✓	✓	✓		
Bus	14PIN Socket	OC500	OC500 LF LFA	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	14PIN Socket	OC500	OC500 LF LFA	Select System From Manual	NR1 Level control solo bus or front vehicle	✓	✓	✓	✓		
Bus	14PIN Socket	OC500	OC500 LF LFA	Select System From Manual	Steering wheel angle sensor	✓	✓	✓	✓		
Bus	14PIN Socket	0345 CONECTO	0345 CONECTO Euro III Solo bus	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Bus	14PIN Socket	0345 CONECTO	0345 CONECTO Euro III Solo bus	Select System From Manual	FR drive control	✓	✓	✓	✓		
Bus	14PIN Socket	0345 CONECTO	0345 CONECTO Euro III Solo bus	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	14PIN Socket	0345 CONECTO	0345 CONECTO Euro III Solo bus	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	14PIN Socket	0345 CONECTO	0345 CONECTO Euro III Solo bus	Select System From Manual	ADM adaptation module	✓	✓	✓	✓		
Bus	14PIN Socket	0345 CONECTO	0345 CONECTO Euro III Articulated bus	Select System From Manual	MR Engine control	✓	✓	✓	✓	1. Cylinder break test	
Bus	14PIN Socket	0345 CONECTO	0345 CONECTO Euro III Articulated bus	Select System From Manual	FR drive control	✓	✓	✓	✓		
Bus	14PIN Socket	0345 CONECTO	0345 CONECTO Euro III Articulated bus	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	14PIN Socket	0345 CONECTO	0345 CONECTO Euro III Articulated bus	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	14PIN Socket	0345 CONECTO	0345 CONECTO Euro III Articulated bus	Select System From Manual	ADM adaptation module	✓	✓	✓	✓		
Bus	14PIN Socket	BR300	Setra BR300 Komibus Euro III	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Bus	14PIN Socket	BR300	Setra BR300 Komibus Euro III	Select System From Manual	FR drive control	✓	✓	✓	✓		
Bus	14PIN Socket	BR300	Setra BR300 Komibus Euro III	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	14PIN Socket	BR300	Setra BR300 Komibus Euro III	Select System From Manual	GS Gear control (AGS)	✓	✓	✓	✓		
Bus	14PIN Socket	BR300	Setra BR300 Komibus Euro III	Select System From Manual	MTS Modular door control system	✓	✓	✓	✓		
Bus	14PIN Socket	BR300	Setra BR300 Komibus Euro III	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	14PIN Socket	BR300	Setra BR300 Komibus Euro III	Select System From Manual	ADM adaptation module	✓	✓	✓	✓		
Bus	14PIN Socket	BR300	Setra BR300 Komibus Euro III	Select System From Manual	KWS Articulation angle control	✓	✓	✓	✓		
Bus	14PIN Socket	BR300	BR 300 Reisebus 3 Euro III	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Bus	14PIN Socket	BR300	BR 300 Reisebus 3 Euro III	Select System From Manual	FR drive control	✓	✓	✓	✓		
Bus	14PIN Socket	BR300	BR 300 Reisebus 3 Euro III	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	14PIN Socket	BR300	BR 300 Reisebus 3 Euro III	Select System From Manual	GS Gear control (AGS)	✓	✓	✓	✓		
Bus	14PIN Socket	BR300	BR 300 Reisebus 3 Euro III	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	14PIN Socket	BR300	BR 300 Reisebus 3 Euro III	Select System From Manual	ADM adaptation module	✓	✓	✓	✓		
Bus	14PIN Socket	S315	S315 HD China Euro III	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Bus	14PIN Socket	S315	S315 HD China Euro III	Select System From Manual	FR drive control	✓	✓	✓	✓		
Bus	14PIN Socket	S315	S315 HD China Euro III	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	14PIN Socket	S315	S315 HD China Euro III	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	14PIN Socket	S315	S315 HD China Euro III	Select System From Manual	ADM adaptation module	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	FR drive control	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	GS Gear control (AGS)	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	ZVA Central locking system	✓	✓	✓	✓		

Bus	14PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	FPS Flexibly programmed control	✓	✓	✓			
Bus	14PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	DMUX Display multiplexer	✓	✓	✓			
Bus	14PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	BS Brake control	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	ART Autonomous intelligent cruise control	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	NR1 Level control solo bus or front vehicle	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	SPA Lane Assistant	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	ZL Auxiliary steering	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	Steering wheel angle sensor	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	MTS Modular door control system	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	HLK Heating-Ventilation-Cooling	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 TopClass	Select System From Manual	CLS/ATA central locking system with anti-theft alarm	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	FR drive control	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	GS Gear control (AGS)	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	ZVA Central locking system	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	FPS Flexibly programmed control	✓	✓	✓			
Bus	14PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	DMUX Display multiplexer	✓	✓	✓			
Bus	14PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	BS Brake control	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	ART Autonomous intelligent cruise control	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	NR1 Level control solo bus or front vehicle	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	SPA Lane Assistant	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	ZL Auxiliary steering	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	Steering wheel angle sensor	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	MTS Modular door control system	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 ComfortClass	Select System From Manual	HLK Heating-Ventilation-Cooling	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	FR drive control	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	ABS anti-lock braking system	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	GS Gear control (AGS)	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	ZVA Central locking system	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	FPS Flexibly programmed control	✓	✓	✓			
Bus	14PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	DMUX Display multiplexer	✓	✓	✓			
Bus	14PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	BS Brake control	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	NR1 Level control solo bus or front vehicle	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	MTS Modular door control system	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 MultiClass	Select System From Manual	HLK Heating-Ventilation-Cooling	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 TopClass USA	Select System From Manual	ZVA Central locking system	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 TopClass USA	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 TopClass USA	Select System From Manual	FPS Flexibly programmed control	✓	✓	✓			
Bus	14PIN Socket	BR400	Setra BR400 TopClass USA	Select System From Manual	DMUX Display multiplexer	✓	✓	✓			
Bus	14PIN Socket	BR400	Setra BR400 TopClass USA	Select System From Manual	MTS Modular door control system	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 TopClass USA	Select System From Manual	HLK Heating-Ventilation-Cooling	✓	✓	✓	✓		
Bus	14PIN Socket	BR400	Setra BR400 TopClass USA	Select System From Manual	ABS anti-lock braking system	✓	✓	✓	✓		

Bus	14PIN Socket	0350 TOURISMO 0403	TOURISMO (C632)	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Bus	14PIN Socket	0350 TOURISMO 0403	TOURISMO (C632)	Select System From Manual	FR drive control	✓	✓	✓	✓		
Bus	14PIN Socket	0350 TOURISMO 0403	TOURISMO (C632)	Select System From Manual	GS Gear control (AGS)	✓	✓	✓	✓		
Bus	14PIN Socket	0350 TOURISMO 0403	TOURISMO (C632)	Select System From Manual	ABS anti-lock braking system	✓	✓	✓	✓		
Bus	14PIN Socket	0350 TOURISMO 0403	TOURISMO (C632)	Select System From Manual	ZVA Central locking system	✓	✓	✓	✓		
Bus	14PIN Socket	0350 TOURISMO 0403	TOURISMO (C632)	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	14PIN Socket	0350 TOURISMO 0403	TOURISMO (C632)	Select System From Manual	FPS Flexibly programmed control	✓	✓	✓			
Bus	14PIN Socket	0350 TOURISMO 0403	TOURISMO (C632)	Select System From Manual	DMUX Display multiplexer	✓	✓	✓			
Bus	14PIN Socket	0350 TOURISMO 0403	TOURISMO (C632)	Select System From Manual	BS Brake control	✓	✓	✓	✓		
Bus	14PIN Socket	0350 TOURISMO 0403	TOURISMO (C632)	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	14PIN Socket	0350 TOURISMO 0403	TOURISMO (C632)	Select System From Manual	NR1 Level control solo bus or front vehicle	✓	✓	✓	✓		
Bus	14PIN Socket	0350 TOURISMO 0403	TOURISMO (C632)	Select System From Manual	Steering wheel angle sensor	✓	✓	✓	✓		
Bus	14PIN Socket	0350 TOURISMO 0403	TOURISMO (C632)	Select System From Manual	MFS Modular door control system	✓	✓	✓	✓		
Bus	14PIN Socket	0350 TOURISMO 0403	TOURISMO (C632)	Select System From Manual	HLK Heating-Ventilation-Cooling	✓	✓	✓	✓		
Bus	14PIN Socket	0350 TOURISMO 0403	TOURISMO (C632)	Select System From Manual	ADM adaptation module	✓	✓	✓	✓		
Bus	14PIN Socket	0350 TOURISMO 0403	TOURISMO 0403	Select System From Manual	MR Engine control	✓	✓	✓	✓		
Bus	14PIN Socket	0350 TOURISMO 0403	TOURISMO 0403	Select System From Manual	FR drive control	✓	✓	✓	✓		
Bus	14PIN Socket	0350 TOURISMO 0403	TOURISMO 0403	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	14PIN Socket	0350 TOURISMO 0403	TOURISMO 0403	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	14PIN Socket	0350 TOURISMO 0403	TOURISMO 0403	Select System From Manual	ADM adaptation module	✓	✓	✓	✓		
Bus	14PIN Socket	0350 TOURISMO 0403	TOURISMO 0403	Select System From Manual	RS Retarder control	✓	✓	✓	✓		
Bus	14PIN Socket	0350 TOURISMO 0403	TOURISMO 0403	Select System From Manual	ZHE Auxiliary heater	✓	✓	✓	✓		
Bus	14PIN Socket	0350 TOURISMO 0403	TOURISMO 0403	Select System From Manual	ADM adaptation module	✓	✓	✓	✓		