



Shenzhen Xtooltech Co., Ltd

HINO FUNCTION LIST V7.15

Tips and Instructions:

- * This feature is new.
- √ This feature is supported.
- This feature is not supported.
- ※ This feature is partially supported.

Vehicle	System	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Read Freeze Frame	Actuation Test	Special Functions	System protection data
700 series Japan KL	Engine	√	√	√	√				
700 series Japan KL	Brake (WABCO EBS)	√	√	√	√		√		
700 series Japan KL	Brake (WABCO EBS3)	√	√	√	√		√		
700 series Japan KL	Brake (WABCO ABS-E8)	√	√	√	√		√		
700 series Japan PK/KS	Engine	√	√	√	√		√	√	√
700 series Japan PK/KS	Brake (WABCO EBS)	√	√	√	√		√		
700 series Japan PK/KS	Suspension	√	√	√	√		√		
700 series Japan PK/KS	Scanning cruise/Lane departure warning systems/Pre-crash safety system	√	√	√	√		√		
700 series Japan PK/KS	Tire inflation pressure monitor	√	√	√	√		√		

700 series Japan PK/KS	SRS (Airbag)	√	√	√	√		√		
700 series Japan PK/KS	Brake (WABCO EBS3)	√	√	√	√		√		
700 series Japan PK/KS	Brake (WABCO ABS-E8)	√	√	√	√		√		
700 series Japan ADG	Engine	√	√	√	√		√	√	√
700 series Japan ADG	Brake (WABCO EBS)	√	√	√	√		√		
700 series Japan ADG	Suspension	√	√	√	√		√		
700 series Japan ADG	Scanning cruise/Lane departure warning systems/Pre-crash safety system	√	√	√	√		√		
700 series Japan ADG	Tire inflation pressure monitor	√	√	√	√		√		
700 series Japan ADG	HINO STOP&START SYSTEM	√	√	√	√		√		
700 series Japan ADG	SRS (Airbag)	√	√	√	√		√		
700 series Japan ADG	Brake (WABCO EBS3)	√	√	√	√		√		
700 series Japan ADG	Brake (WABCO ABS-E8)	√	√	√	√		√		
700 series Japan BDG/BKG	Engine	√	√	√	√		√	√	√
700 series Japan BDG/BKG	Transmission (ASTRONIC)	√	√	√	√		√		

700 series Japan BDG/BKG	Brake (WABCO EBS)	√	√	√	√		√		
700 series Japan BDG/BKG	Suspension	√	√	√	√		√		
700 series Japan BDG/BKG	Scanning cruise/Lane departure warning systems/Pre-crash safety system	√	√	√	√		√		
700 series Japan BDG/BKG	Tire inflation pressure monitor	√	√	√	√		√		
700 series Japan BDG/BKG	HINO STOP&START SYSTEM	√	√	√	√		√		
700 series Japan BDG/BKG	SRS (Airbag)	√	√	√	√		√		
700 series Japan BDG/BKG	VCS (Vehicle Control System)	√	√	√	√		√		
700 series Japan BDG/BKG	Brake (WABCO EBS3)	√	√	√	√		√		
700 series Japan BDG/BKG	Brake (WABCO ABS-E8)	√	√	√	√		√		
700 series Japan LDG/LKG/QKG/QDG	Engine	√	√	√	√		√	√	√
700 series Japan LDG/LKG/QKG/QDG	Transmission	√	√	√	√		√		
700 series Japan LDG/LKG/QKG/QDG	Transmission (ASTRONIC)	√	√	√	√		√		
700 series Japan LDG/LKG/QKG/QDG	Brake (WABCO EBS)	√	√	√	√		√		
700 series Japan LDG/LKG/QKG/QDG	Suspension	√	√	√	√		√		

700 series Japan LDG/LKG/QKG/QDG	Scanning cruise/Lane departure warning systems/Pre-crash safety system	√	√	√	√		√		
700 series Japan LDG/LKG/QKG/QDG	Lane departure warning systems	√	√	√	√		√		
700 series Japan LDG/LKG/QKG/QDG	SRS (Airbag)	√	√	√	√		√		
700 series Japan LDG/LKG/QKG/QDG	DCU(Doser) (500K)	√	√	√	√		√	√	√
700 series Japan LDG/LKG/QKG/QDG	Immobilizer	√	√	√	√		√		
700 series Japan LDG/LKG/QKG/QDG	Meter	√	√	√	√		√		
700 series Japan LDG/LKG/QKG/QDG	VCS (Vehicle Control System)	√	√	√	√		√		
700 series Japan LDG/LKG/QKG/QDG	Hybrid	√	√	√	√		√		
700 series Japan LDG/LKG/QKG/QDG	Inverter	√	√	√	√		√		
700 series Japan LDG/LKG/QKG/QDG	Battery	√	√	√	√		√		
700 series Japan LDG/LKG/QKG/QDG	Tire inflation pressure monitor	√	√	√	√		√		
700 series Japan LDG/LKG/QKG/QDG	ABSCOM	√	√	√	√		√		
700 series Japan LDG/LKG/QKG/QDG	Brake (WABCO EBS3)	√	√	√	√		√		
700 series Japan LDG/LKG/QKG/QDG	Brake (WABCO ABS-E8)	√	√	√	√		√		

700 series Japan 2DG/2KG/2PG/2RG/2SG	Engine	√	√	√	√		√	√	√
700 series Japan 2DG/2KG/2PG/2RG/2SG	Transmission	√	√	√	√		√		
700 series Japan 2DG/2KG/2PG/2RG/2SG	Transmission (TRAXON) 500K	√	√	√	√		√		
700 series Japan 2DG/2KG/2PG/2RG/2SG	Brake (WABCO EBS3)	√	√	√	√		√		
700 series Japan 2DG/2KG/2PG/2RG/2SG	Brake (WABCO EBS3 STD)	√	√	√	√		√		
700 series Japan 2DG/2KG/2PG/2RG/2SG	ZF INTARDER3 (500K)	√	√	√	√		√		
700 series Japan 2DG/2KG/2PG/2RG/2SG	Air bag 2	√	√	√	√		√		
700 series Japan 2DG/2KG/2PG/2RG/2SG	Hybrid	√	√	√	√		√		
700 series Japan 2DG/2KG/2PG/2RG/2SG	Inverter	√	√	√	√		√		
700 series Japan 2DG/2KG/2PG/2RG/2SG	Battery	√	√	√	√		√		
700 series Japan 2DG/2KG/2PG/2RG/2SG	DCU (Doser) (500K)	√	√	√	√		√	√	√
700 series Japan 2DG/2KG/2PG/2RG/2SG	Immobilizer	√	√	√	√		√		
700 series Japan 2DG/2KG/2PG/2RG/2SG	Meter (7 inch)	√	√	√	√		√		
700 series Japan 2DG/2KG/2PG/2RG/2SG	VCS (Vehicle Control System)	√	√	√	√		√		

700 series Japan 2DG/2KG/2PG/2RG/2SG	Body Control Module	√	√	√	√				
700 series Japan 2DG/2KG/2PG/2RG/2SG	FCM: Front image recognition sensor	√	√	√	√				
700 series Japan 2DG/2KG/2PG/2RG/2SG	LDWS: Lane departure warning systems_16Mysince (for 700 500 series / buses)	√	√	√	√				
700 series Japan 2DG/2KG/2PG/2RG/2SG	Central gateway	√	√	√	√				
700 series Japan 2DG/2KG/2PG/2RG/2SG	Adaptive Driving Beam	√	√	√	√				
700 series Japan 2DG/2KG/2PG/2RG/2SG	Driving support	√	√	√	√				
700 series Japan 2DG/2KG/2PG/2RG/2SG	Suspension (WABCO AIRSUSPENSION)	√	√	√	√				
700 series Primary4/Primary5	Engine	√	√	√	√			√	√
700 series Primary4/Primary5	VCS (Vehicle Control System)	√	√	√	√				
700 series Primary4/Primary5	ABSCOM	√	√	√	√				
700 series Primary4/Primary5	Brake (WABCO ABS-E8)	√	√	√	√				
700 series Primary4/Primary5	Transmission (TRAXON) 500K	√	√	√	√				
700 series Primary4/Primary5	ZF INTARDER3 (500K)	√	√	√	√		√		
700 series Primary4/Primary5	DCU (Doser) (500K)	√	√	√	√		√	√	√

700 series Primary4/Primary5	Meter	√	√	√	√		√		
700 series Primary4/Primary5	Body Control Module	√	√	√	√		√		
700 series Primary4/Primary5	FCM: Front image recognition sensor	√	√	√	√		√		
700 series Primary4/Primary5	LDWS: Lane departure warning systems_16Mysince (for 700 500 series / buses)	√	√	√	√		√		
700 series Primary4/Primary5	Central gateway	√	√	√	√		√		
700 series Primary4/Primary5	Driving support	√	√	√	√		√		
700 series EURO2/EURO3/EURO4	Engine	√	√	√	√		√	√	√
700 series EURO2/EURO3/EURO4	Brake (WABCO EBS)	√	√	√	√		√		
700 series EURO2/EURO3/EURO4	ABSCOM	√	√	√	√		√		
700 series EURO2/EURO3/EURO4	Transmission (ASTRONIC)	√	√	√	√		√		
700 series EURO2/EURO3/EURO4	Transmission (TRAXON) 250K	√	√	√	√		√		
700 series EURO2/EURO3/EURO4	ZF INTARDER	√	√	√	√		√		
700 series EURO2/EURO3/EURO4	ZF INTARDER3	√	√	√	√		√		
700 series EURO2/EURO3/EURO4	Suspension	√	√	√	√		√		

700 series EURO2/EURO3/EURO4	Scanning cruise/Lane departure warning systems/Pre-crash safety system	√	√	√	√		√		
700 series EURO2/EURO3/EURO4	Lane departure warning systems	√	√	√	√		√		
700 series EURO2/EURO3/EURO4	Tire inflation pressure monitor	√	√	√	√		√		
700 series EURO2/EURO3/EURO4	HINO STOP&START SYSTEM	√	√	√	√		√		
700 series EURO2/EURO3/EURO4	SRS (Airbag)	√	√	√	√		√		
700 series EURO2/EURO3/EURO4	Immobilizer	√	√	√	√		√		
700 series EURO5 With VCS	Engine	√	√	√	√		√	√	√
700 series EURO5 With VCS	VCS (Vehicle Control System)	√	√	√	√		√		
700 series EURO5 With VCS	Brake (WABCO EBS)	√	√	√	√		√		
700 series EURO5 With VCS	ABSCOM	√	√	√	√		√		
700 series EURO5 With VCS	Brake (WABCO EBS3)	√	√	√	√		√		
700 series EURO5 With VCS	Brake (WABCO ABS-E8)	√	√	√	√		√		
700 series EURO5 With VCS	Transmission (ASTRONIC)	√	√	√	√		√		
700 series EURO5 With VCS	Transmission (TRAXON) 500K	√	√	√	√		√		

700 series EURO5 With VCS	ZF INTARDER	√	√	√	√		√		
700 series EURO5 With VCS	ZF INTARDER3 (500K)	√	√	√	√		√		
700 series EURO5 With VCS	DCU(Doser) (500K)	√	√	√	√		√	√	√
700 series EURO5 With VCS	Suspension	√	√	√	√		√		
700 series EURO5 With VCS	SRS (Airbag)	√	√	√	√		√		
700 series EURO5 With VCS	Immobilizer	√	√	√	√		√		
700 series EURO5 Without VCS	Engine	√	√	√	√			√	√
700 series EURO5 Without VCS	Brake (WABCO EBS)	√	√	√	√		√		
700 series EURO5 Without VCS	ABSCOM	√	√	√	√		√		
700 series EURO5 Without VCS	Transmission (ASTRONIC)	√	√	√	√		√		
700 series EURO5 Without VCS	Transmission (TRAXON) 250K	√	√	√	√		√		
700 series EURO5 Without VCS	ZF INTARDER	√	√	√	√		√		
700 series EURO5 Without VCS	ZF INTARDER3	√	√	√	√		√		
700 series EURO5 Without VCS	DCU(Doser) (250K)	√	√	√	√		√	√	√

700 series EURO5 Without VCS	Suspension	√	√	√	√		√		
700 series EURO5 Without VCS	SRS (Airbag)	√	√	√	√		√		
700 series EURO5 Without VCS	Immobilizer	√	√	√	√		√		
700 series EURO6	Engine	√	√	√	√		√	√	√
700 series EURO6	VCS (Vehicle Control System)	√	√	√	√		√		
700 series EURO6	Brake (WABCO EBS)	√	√	√	√		√		
700 series EURO6	ABSCOM	√	√	√	√		√		
700 series EURO6	Brake (WABCO EBS3)	√	√	√	√		√		
700 series EURO6	Brake (WABCO ABS-E8)	√	√	√	√		√		
700 series EURO6	Transmission (ASTRONIC)	√	√	√	√		√		
700 series EURO6	Transmission (TRAXON) 500K	√	√	√	√		√		
700 series EURO6	ZF INTARDER	√	√	√	√		√		
700 series EURO6	ZF INTARDER3 (500K)	√	√	√	√		√		
700 series EURO6	DCU (Doser) (500K)	√	√	√	√		√	√	√

700 series EURO6	Suspension	√	√	√	√		√		
700 series EURO6	SRS (Airbag)	√	√	√	√		√		
700 series EURO6	Immobilizer	√	√	√	√		√		
700 series EURO6	Meter (7 inch)	√	√	√	√		√		
700 series EURO6	Range inhibit	√	√	√	√		√		
700 series Global	Engine	√	√	√	√		√	√	√
700 series Global	VCS (Vehicle Control System)	√	√	√	√		√		
700 series Global	Brake (WABCO EBS)	√	√	√	√		√		
700 series Global	ABSCOM	√	√	√	√		√		
700 series Global	Brake (WABCO EBS3)	√	√	√	√		√		
700 series Global	Brake (WABCO ABS-E8)	√	√	√	√		√		
700 series Global	Transmission (ASTRONIC)	√	√	√	√		√		
700 series Global	Transmission (TRAXON) 500K	√	√	√	√		√		
700 series Global	ZF INTARDER	√	√	√	√		√		

700 series Global	ZF INTARDER3 (500K)	√	√	√	√		√		
700 series Global	Hybrid	√	√	√	√		√		
700 series Global	Hybrid_14Mysince	√	√	√	√		√		
700 series Global	Inverter	√	√	√	√		√		
700 series Global	Battery	√	√	√	√		√		
700 series Global	DCU(Doser) (500K)	√	√	√	√		√	√	√
700 series Global	Suspension	√	√	√	√		√		
700 series Global	Scanning cruise/Lane departure warning systems/Pre-crash safety system	√	√	√	√		√		
700 series Global	Lane departure warning systems	√	√	√	√		√		
700 series Global	Tire inflation pressure monitor	√	√	√	√		√		
700 series Global	HINO STOP&START SYSTEM	√	√	√	√		√		
700 series Global	SRS (Airbag)	√	√	√	√		√		
700 series Global	Air bag 2	√	√	√	√		√		
700 series Global	Immobilizer	√	√	√	√		√		

700 series Global	Meter	√	√	√	√		√		
700 series Global	Meter (7 inch)	√	√	√	√		√		
700 series Global	Body Control Module	√	√	√	√		√		
700 series Global	FCM: Front image recognition sensor	√	√	√	√		√		
700 series Global	LDWS: Lane departure warning systems_16Mysince (for 700 500 series / buses)	√	√	√	√		√		
700 series Global	Central gateway	√	√	√	√		√		
700 series Global	Adaptive Driving Beam	√	√	√	√		√		
700 series Global	Driving support	√	√	√	√		√		
700 series Global	Suspension (WABCO AIRSUSPENSION)	√	√	√	√		√		
700 series ZF INTARDER dedicated connector (250k)	ZF INTARDER3	√	√	√	√		√		
600 series(Conventional) Global	Engine	√	√	√	√		√	√	√
600 series(Conventional) Global	Transmission (old AT)	√	√	√	√		√		
600 series(Conventional) Global	DCU(Doser) (500K)	√	√	√	√		√	√	√
600 series(Conventional) Global	BCU (Burner)	√	√	√	√		√		

600 series(Conventional) Global	Meter	√	√	√	√		√		
600 series(Conventional) Global	Meter (7 inch)	√	√	√	√		√		
600 series(Conventional) Global	VCS (Vehicle Control System)	√	√	√	√		√		
600 series(Conventional) Global	Differential lock	√	√	√	√		√		
600 series(Conventional) Global	Brake (WABCO ABS-E8)	√	√	√	√		√		
600 series(Conventional) Global	Body Control Module	√	√	√	√		√		
600 series(Conventional) North America	Engine	√	√	√	√			√	√
600 series(Conventional) North America	Transmission (old AT)	√	√	√	√		√		
600 series(Conventional) North America	DCU(Doser) (500K)	√	√	√	√		√	√	√
600 series(Conventional) North America	BCU (Burner)	√	√	√	√		√		
600 series(Conventional) North America	Meter	√	√	√	√		√		
600 series(Conventional) North America	Meter (7 inch)	√	√	√	√		√		
600 series(Conventional) North America	VCS (Vehicle Control System)	√	√	√	√		√		
600 series(Conventional) North America	Differential lock	√	√	√	√		√		

600 series(Conventional) North America	Brake (WABCO ABS-E8)	√	√	√	√		√		
600 series(Conventional) North America	Body Control Module	√	√	√	√		√		
500 series Japan KK	Engine	√	√	√	√				
500 series Japan KK	Transmission (old AT)	√	√	√	√		√		
500 series Japan KK	Brake (WABCO ABS-E8)	√	√	√	√		√		
500 series Japan PB/PK/KS/VF	Engine	√	√	√	√		√	√	√
500 series Japan PB/PK/KS/VF	Transmission (old AT)	√	√	√	√		√		
500 series Japan PB/PK/KS/VF	Brake (DENSO ABS)	√	√	√	√		√		
500 series Japan PB/PK/KS/VF	Suspension	√	√	√	√		√		
500 series Japan PB/PK/KS/VF	Scanning cruise/Lane departure warning systems/Pre-crash safety system	√	√	√	√		√		
500 series Japan PB/PK/KS/VF	HINO STOP&START SYSTEM	√	√	√	√		√		
500 series Japan PB/PK/KS/VF	Brake (WABCO ABS-E8)	√	√	√	√		√		
500 series Japan ADG	Engine	√	√	√	√		√	√	√
500 series Japan ADG	Transmission (old AT)	√	√	√	√		√		

500 series Japan ADG	Brake (DENSO ABS)	√	√	√	√		√		
500 series Japan ADG	Suspension	√	√	√	√		√		
500 series Japan ADG	Scanning cruise/Lane departure warning systems/Pre-crash safety system	√	√	√	√		√		
500 series Japan ADG	HINO STOP&START SYSTEM	√	√	√	√		√		
500 series Japan ADG	SRS (Airbag)	√	√	√	√		√		
500 series Japan ADG	Brake (WABCO ABS-E8)	√	√	√	√		√		
500 series Japan BDG/BKG	Engine	√	√	√	√		√	√	√
500 series Japan BDG/BKG	Transmission (old AT)	√	√	√	√		√		
500 series Japan BDG/BKG	Brake (DENSO ABS)	√	√	√	√		√		
500 series Japan BDG/BKG	Suspension	√	√	√	√		√		
500 series Japan BDG/BKG	Scanning cruise/Lane departure warning systems/Pre-crash safety system	√	√	√	√		√		
500 series Japan BDG/BKG	HINO STOP&START SYSTEM	√	√	√	√		√		
500 series Japan BDG/BKG	SRS (Airbag)	√	√	√	√		√		
500 series Japan BDG/BKG	Immobilizer	√	√	√	√		√		

500 series Japan BDG/BKG	Brake (WABCO ABS-E8)	√	√	√	√		√		
500 series Japan BJG	Engine	√	√	√	√		√	√	√
500 series Japan BJG	Transmission (old AT)	√	√	√	√		√		
500 series Japan BJG	Brake (DENSO ABS)	√	√	√	√		√		
500 series Japan BJG	Suspension	√	√	√	√		√		
500 series Japan BJG	SRS (Airbag)	√	√	√	√		√		
500 series Japan BJG	Hybrid	√	√	√	√		√		
500 series Japan BJG	Inverter	√	√	√	√		√		
500 series Japan BJG	Battery	√	√	√	√		√		
500 series Japan BJG	Immobilizer	√	√	√	√		√		
500 series Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Engine	√	√	√	√		√	√	√
500 series Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Brake (DENSO ABS)	√	√	√	√		√		
500 series Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Brake (ADVICS ABS)	√	√	√	√		√		
500 series Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Suspension	√	√	√	√		√		

500 series Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Scanning cruise/Lane departure warning systems/Pre-crash safety system	√	√	√	√		√		
500 series Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Tire inflation pressure monitor	√	√	√	√		√		
500 series Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	SRS (Airbag)	√	√	√	√		√		
500 series Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Hybrid	√	√	√	√		√		
500 series Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Hybrid_14Mysince	√	√	√	√		√		
500 series Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Inverter	√	√	√	√		√		
500 series Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Battery	√	√	√	√		√		
500 series Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Immobilizer	√	√	√	√		√		
500 series Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Headlight auto leveling	√	√	√	√		√		
500 series Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	VCS (Vehicle Control System)	√	√	√	√		√		
500 series Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	ABSCOM	√	√	√	√		√		
500 series Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Brake (WABCO ABS-E8)	√	√	√	√		√		
500 series Japan 2DG/2KG/2PG	Engine	√	√	√	√		√	√	√
500 series Japan 2DG/2KG/2PG	Transmission (AMT)	√	√	√	√		√		

500 series Japan 2DG/2KG/2PG	Brake (ADVICS ABS)	√	√	√	√		√		
500 series Japan 2DG/2KG/2PG	Brake (WABCO ABS-E8)	√	√	√	√		√		
500 series Japan 2DG/2KG/2PG	Air bag 2	√	√	√	√		√		
500 series Japan 2DG/2KG/2PG	DCU (Doser) (500K)	√	√	√	√		√	√	√
500 series Japan 2DG/2KG/2PG	Immobilizer	√	√	√	√		√		
500 series Japan 2DG/2KG/2PG	Meter (7 inch)	√	√	√	√		√		
500 series Japan 2DG/2KG/2PG	VCS (Vehicle Control System)	√	√	√	√		√		
500 series Japan 2DG/2KG/2PG	Headlight auto leveling	√	√	√	√		√		
500 series Japan 2DG/2KG/2PG	Body Control Module	√	√	√	√		√		
500 series Japan 2DG/2KG/2PG	FCM: Front image recognition sensor	√	√	√	√		√		
500 series Japan 2DG/2KG/2PG	LDWS: Lane departure warning systems_16MYsince (for 700 500 series / buses)	√	√	√	√		√		
500 series Japan 2DG/2KG/2PG	Central gateway	√	√	√	√		√		
500 series Japan 2DG/2KG/2PG	Adaptive Driving Beam	√	√	√	√		√		
500 series Japan 2DG/2KG/2PG	Automatic transmission	√	√	√	√		√		

500 series Japan 2DG/2KG/2PG	Driving support	√	√	√	√		√		
500 series Japan 2DG/2KG/2PG	Suspension (WABCO AIRSUSPENSION)	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 Without VCS	Engine	√	√	√	√		√	√	√
500 series EURO3/EURO4/EURO5 Without VCS	Engine (CNG)	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 Without VCS	ABSCOM	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 Without VCS	Brake (DENSO ABS)	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 Without VCS	Brake (ADVICS ABS 250k)	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 Without VCS	Transmission (old AT)	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 Without VCS	DCU(Doser) (250K)	√	√	√	√		√	√	√
500 series EURO3/EURO4/EURO5 Without VCS	Immobilizer	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 Without VCS	Scanning cruise/Lane departure warning systems/Pre-crash safety system	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 Without VCS	HINO STOP&START SYSTEM	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 Without VCS	ES Start	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 Without VCS	Range inhibit	√	√	√	√		√		

500 series EURO3/EURO4/EURO5 Without VCS	SRS (Airbag)	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 Without VCS	Suspension	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 With VCS	Engine	√	√	√	√		√	√	√
500 series EURO3/EURO4/EURO5 With VCS	Engine (CNG)	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 With VCS	VCS (Vehicle Control System)	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 With VCS	ABSCOM	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 With VCS	Brake (WABCO ABS-E8)	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 With VCS	Brake (DENSO ABS)	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 With VCS	Brake (ADVICS ABS)	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 With VCS	Transmission (old AT)	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 With VCS	Transmission(AMT)	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 With VCS	DCU(Doser) (500K)	√	√	√	√		√	√	√
500 series EURO3/EURO4/EURO5 With VCS	Immobilizer	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 With VCS	Meter (7 inch)	√	√	√	√		√		

500 series EURO3/EURO4/EURO5 With VCS	Headlight auto leveling	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 With VCS	Body Control Module	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 With VCS	Scanning cruise/Lane departure warning systems/Pre-crash safety system	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 With VCS	FCM: Front image recognition sensor	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 With VCS	LDWS: Lane departure warning systems_16Mysince (for 700 500 series / buses)	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 With VCS	Central gateway	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 With VCS	Adaptive Driving Beam	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 With VCS	Driving support	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 With VCS	HINO STOP&START SYSTEM	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 With VCS	ES Start	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 With VCS	Range inhibit	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 With VCS	SRS (Airbag)	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 With VCS	Air bag 2	√	√	√	√		√		
500 series EURO3/EURO4/EURO5 With VCS	Suspension	√	√	√	√		√		

500 series EURO6	Engine	√	√	√	√		√	√	√
500 series EURO6	Transmission (old AT)	√	√	√	√		√		
500 series EURO6	Transmission (AMT)	√	√	√	√		√		
500 series EURO6	Brake (DENSO ABS)	√	√	√	√		√		
500 series EURO6	Brake (WABCO ABS-E8)	√	√	√	√		√		
500 series EURO6	Brake (ADVICS ABS)	√	√	√	√		√		
500 series EURO6	ABSCOM	√	√	√	√		√		
500 series EURO6	SRS (Airbag)	√	√	√	√		√		
500 series EURO6	Air bag 2	√	√	√	√		√		
500 series EURO6	DCU(Doser) (500K)	√	√	√	√		√	√	√
500 series EURO6	Immobilizer	√	√	√	√		√		
500 series EURO6	VCS (Vehicle Control System)	√	√	√	√		√		
500 series EURO6	Headlight auto leveling	√	√	√	√		√		
500 series EURO6	ES Start	√	√	√	√		√		

500 series EURO6	Range inhibit	√	√	√	√		√		
500 series EURO6	Meter (7 inch)	√	√	√	√		√		
500 series EURO6	Body Control Module	√	√	√	√		√		
500 series EURO6	FCM: Front image recognition sensor	√	√	√	√		√		
500 series EURO6	LDWS: Lane departure warning systems_16Mysince (for 700 500 series / buses)	√	√	√	√		√		
500 series EURO6	Central gateway	√	√	√	√		√		
500 series EURO6	Adaptive Driving Beam	√	√	√	√		√		
500 series EURO6	Driving support	√	√	√	√		√		
500 series EURO6	Suspension	√	√	√	√		√		
500 series THAI CNG	Engine (CNG)	√	√	√	√		√		
500 series Global	Engine	√	√	√	√		√	√	√
500 series Global	Transmission (old AT)	√	√	√	√		√		
500 series Global	Brake (DENSO ABS)	√	√	√	√		√		
500 series Global	Suspension	√	√	√	√		√		

500 series Global	Scanning cruise/Lane departure warning systems/Pre-crash safety system	√	√	√	√		√		
500 series Global	HINO STOP&START SYSTEM	√	√	√	√		√		
500 series Global	SRS (Airbag)	√	√	√	√		√		
500 series Global	Hybrid	√	√	√	√		√		
500 series Global	Hybrid_14Mysince	√	√	√	√		√		
500 series Global	Inverter	√	√	√	√		√		
500 series Global	Battery	√	√	√	√		√		
500 series Global	Immobilizer	√	√	√	√		√		
500 series Global	VCS (Vehicle Control System)	√	√	√	√		√		
500 series Global	Headlight auto leveling	√	√	√	√		√		
500 series Global	Engine (CNG)	√	√	√	√		√		
500 series Global	ES Start	√	√	√	√		√		
500 series Global	Range inhibit	√	√	√	√		√		
500 series Global	ABSCOM	√	√	√	√		√		

500 series Global	Brake (WABCO ABS-E8)	√	√	√	√		√		
500 series Global	DCU(Doser) (500K)	√	√	√	√		√	√	√
500 series SRS 500k (Airbag)	Air bag 2	√	√	√	√		√		
500 series SRS 250k (Airbag)	SRS (Airbag)	√	√	√	√		√		
300 series Japan KK	Engine	√	√	√	√		√	√	√
300 series Japan KK	Transmission (old AT)	√	√	√	√		√		
300 series Japan PB/VF	Engine	√	√	√	√		√	√	√
300 series Japan PB/VF	Transmission (old AT)	√	√	√	√		√		
300 series Japan PB/VF	Brake (DENSO ABS)	√	√	√	√		√		
300 series Japan PB/VF	SRS (Airbag)	√	√	√	√		√		
300 series Japan ABG/NBG	Engine	√	√	√	√		√	√	√
300 series Japan ABG/NBG	Transmission (old AT)	√	√	√	√		√		
300 series Japan ABG/NBG	Brake (DENSO ABS)	√	√	√	√		√		
300 series Japan ABG/NBG	HINO STOP&START SYSTEM	√	√	√	√		√		

300 series Japan ABG/NBG	SRS (Airbag)	√	√	√	√		√		
300 series Japan ABG/NBG	SRS (Airbag)	√	√	√	√		√		
300 series Japan ABG/NBG	Brake	√	√	√	√		√		
300 series Japan BDG/BKG	Engine	√	√	√	√		√	√	√
300 series Japan BDG/BKG	Transmission (old AT)	√	√	√	√		√		
300 series Japan BDG/BKG	Brake (DENSO ABS)	√	√	√	√		√		
300 series Japan BDG/BKG	HINO STOP&START SYSTEM	√	√	√	√		√		
300 series Japan BDG/BKG	SRS (Airbag)	√	√	√	√		√		
300 series Japan BDG/BKG	Immobilizer	√	√	√	√		√		
300 series Japan BDG/BKG	SRS (Airbag)	√	√	√	√		√		
300 series Japan BJG	Engine	√	√	√	√		√	√	√
300 series Japan BJG	Transmission (old AT)	√	√	√	√		√		
300 series Japan BJG	Brake (DENSO ABS)	√	√	√	√		√		
300 series Japan BJG	SRS (Airbag)	√	√	√	√		√		

300 series Japan BJG	SRS (Airbag)	√	√	√	√		√		
300 series Japan BJG	Hybrid	√	√	√	√		√		
300 series Japan BJG	Inverter	√	√	√	√		√		
300 series Japan BJG	Battery	√	√	√	√		√		
300 series Japan BJG	Immobilizer	√	√	√	√		√		
300 series Japan SJG/SKG/SDG/TQG/TKG/TPG/TSG/TDG	Engine	√	√	√	√		√	√	√
300 series Japan SJG/SKG/SDG/TQG/TKG/TPG/TSG/TDG	Transmission	√	√	√	√		√		
300 series Japan SJG/SKG/SDG/TQG/TKG/TPG/TSG/TDG	Transmission (old AT)	√	√	√	√		√		
300 series Japan SJG/SKG/SDG/TQG/TKG/TPG/TSG/TDG	SRS (Airbag)	√	√	√	√		√		
300 series Japan SJG/SKG/SDG/TQG/TKG/TPG/TSG/TDG	Hybrid	√	√	√	√		√		
300 series Japan SJG/SKG/SDG/TQG/TKG/TPG/TSG/TDG	Hybrid_14MYsince	√	√	√	√		√		
300 series Japan SJG/SKG/SDG/TQG/TKG/TPG/TSG/TDG	Inverter	√	√	√	√		√		
300 series Japan SJG/SKG/SDG/TQG/TKG/TPG/TSG/TDG	Battery	√	√	√	√		√		
300 series Japan SJG/SKG/SDG/TQG/TKG/TPG/TSG/TDG	Immobilizer	√	√	√	√		√		

300 series Japan SJG/SKG/SDG/TQG/TKG/TPG/TSG/TDG	Brake	√	√	√	√		√		
300 series Japan SJG/SKG/SDG/TQG/TKG/TPG/TSG/TDG	Headlight auto leveling	√	√	√	√		√		
300 series Japan SJG/SKG/SDG/TQG/TKG/TPG/TSG/TDG	VCS (Vehicle Control System)	√	√	√	√		√		
300 series Japan SJG/SKG/SDG/TQG/TKG/TPG/TSG/TDG	Lane departure warning systems	√	√	√	√		√		
300 series Japan SJG/SKG/SDG/TQG/TKG/TPG/TSG/TDG	Smart System	√	√	√	√		√		
300 series Japan SJG/SKG/SDG/TQG/TKG/TPG/TSG/TDG	LDWS: Lane departure warning systems_16MYsince (for 300 series)	√	√	√	√		√		
300 series Japan SJG/SKG/SDG/TQG/TKG/TPG/TSG/TDG	FCM: Front image recognition sensor	√	√	√	√		√		
300 series Japan SJG/SKG/SDG/TQG/TKG/TPG/TSG/TDG	Driving support	√	√	√	√		√		
300 series Japan 2KG/2PG/2RG/2SG	Engine	√	√	√	√		√	√	√
300 series Japan 2KG/2PG/2RG/2SG	Transmission	√	√	√	√		√		
300 series Japan 2KG/2PG/2RG/2SG	Transmission (AT)	√	√	√	√		√		
300 series Japan 2KG/2PG/2RG/2SG	Transmission (old AT)	√	√	√	√		√		
300 series Japan 2KG/2PG/2RG/2SG	Brake	√	√	√	√		√		
300 series Japan 2KG/2PG/2RG/2SG	SRS (Airbag)	√	√	√	√		√		

300 series Japan 2KG/2PG/2RG/2SG	Hybrid	√	√	√	√		√		
300 series Japan 2KG/2PG/2RG/2SG	Inverter	√	√	√	√		√		
300 series Japan 2KG/2PG/2RG/2SG	Battery	√	√	√	√		√		
300 series Japan 2KG/2PG/2RG/2SG	Immobilizer	√	√	√	√		√		
300 series Japan 2KG/2PG/2RG/2SG	VCS (Vehicle Control System)	√	√	√	√		√		
300 series Japan 2KG/2PG/2RG/2SG	Headlight auto leveling	√	√	√	√		√		
300 series Japan 2KG/2PG/2RG/2SG	Lane departure warning systems	√	√	√	√		√		
300 series Japan 2KG/2PG/2RG/2SG	Smart System	√	√	√	√		√		
300 series Japan 2KG/2PG/2RG/2SG	FCM: Front image recognition sensor	√	√	√	√		√		
300 series Japan 2KG/2PG/2RG/2SG	LDWS: Lane departure warning systems_16MYsince (for 300 series)	√	√	√	√		√		
300 series Japan 2KG/2PG/2RG/2SG	Driving support	√	√	√	√		√		
300 series Japan 2KG/2PG/2RG/2SG	Error prevention function	√	√	√	√		√		
Bus/Coach, Heavy Japan KL/VM/PJ	Engine	√	√	√	√				
Bus/Coach, Heavy Japan KL/VM/PJ	Brake (WABCO EBS)	√	√	√	√		√		

Bus/Coach, Heavy Japan KL/VM/PJ	Brake (WABCO EBS3)	√	√	√	√		√		
Bus/Coach, Heavy Japan ADG	Engine	√	√	√	√		√	√	√
Bus/Coach, Heavy Japan ADG	Transmission	√	√	√	√		√		
Bus/Coach, Heavy Japan ADG	Suspension	√	√	√	√		√		
Bus/Coach, Heavy Japan ADG	Kneeling system	√	√	√	√		√		
Bus/Coach, Heavy Japan ADG	HINO STOP&START SYSTEM	√	√	√	√		√		
Bus/Coach, Heavy Japan ADG	SRS (Airbag)	√	√	√	√		√		
Bus/Coach, Heavy Japan ADG	Brake (WABCO ABS-E8)	√	√	√	√		√		
Bus/Coach, Heavy Japan BDG/BKG/PKG/PDG/BJG/ACG	Engine	√	√	√	√		√	√	√
Bus/Coach, Heavy Japan BDG/BKG/PKG/PDG/BJG/ACG	Transmission	√	√	√	√		√		
Bus/Coach, Heavy Japan BDG/BKG/PKG/PDG/BJG/ACG	Suspension	√	√	√	√		√		
Bus/Coach, Heavy Japan BDG/BKG/PKG/PDG/BJG/ACG	Kneeling system	√	√	√	√		√		
Bus/Coach, Heavy Japan BDG/BKG/PKG/PDG/BJG/ACG	Scanning cruise/Lane departure warning systems/Pre-crash safety system	√	√	√	√		√		
Bus/Coach, Heavy Japan BDG/BKG/PKG/PDG/BJG/ACG	HINO STOP&START SYSTEM	√	√	√	√		√		

Bus/Coach, Heavy Japan BDG/BKG/PKG/PDG/BJG/ACG	SRS (Airbag)	√	√	√	√		√		
Bus/Coach, Heavy Japan BDG/BKG/PKG/PDG/BJG/ACG	Hybrid	√	√	√	√		√		
Bus/Coach, Heavy Japan BDG/BKG/PKG/PDG/BJG/ACG	Inverter	√	√	√	√		√		
Bus/Coach, Heavy Japan BDG/BKG/PKG/PDG/BJG/ACG	Battery	√	√	√	√		√		
Bus/Coach, Heavy Japan BDG/BKG/PKG/PDG/BJG/ACG	VCS (Vehicle Control System)	√	√	√	√		√		
Bus/Coach, Heavy Japan BDG/BKG/PKG/PDG/BJG/ACG	Brake (WABCO ABS-E8)	√	√	√	√		√		
Bus/Coach, Heavy Japan LDG/LKG/LJG/LNG/QPG/QRG/QQG/QSG/QTG	Engine	√	√	√	√		√	√	√
Bus/Coach, Heavy Japan LDG/LKG/LJG/LNG/QPG/QRG/QQG/QSG/QTG	Transmission	√	√	√	√		√		
Bus/Coach, Heavy Japan LDG/LKG/LJG/LNG/QPG/QRG/QQG/QSG/QTG	Transmission (AMT)	√	√	√	√		√		
Bus/Coach, Heavy Japan LDG/LKG/LJG/LNG/QPG/QRG/QQG/QSG/QTG	Brake (WABCO EBS)	√	√	√	√		√		
Bus/Coach, Heavy Japan LDG/LKG/LJG/LNG/QPG/QRG/QQG/QSG/QTG	Suspension	√	√	√	√		√		
Bus/Coach, Heavy Japan LDG/LKG/LJG/LNG/QPG/QRG/QQG/QSG/QTG	Kneeling system	√	√	√	√		√		
Bus/Coach, Heavy Japan LDG/LKG/LJG/LNG/QPG/QRG/QQG/QSG/QTG	Scanning cruise/Lane departure warning systems/Pre-crash safety system	√	√	√	√		√		
Bus/Coach, Heavy Japan LDG/LKG/LJG/LNG/QPG/QRG/QQG/QSG/QTG	SRS (Airbag)	√	√	√	√		√		

Bus/Coach, Heavy Japan LDG/LKG/LJG/LNG/QPG/QRG/QQG/QSG/QTG	Hybrid	√	√	√	√		√		
Bus/Coach, Heavy Japan LDG/LKG/LJG/LNG/QPG/QRG/QQG/QSG/QTG	DCU (Doser) (500K)	√	√	√	√		√	√	√
Bus/Coach, Heavy Japan LDG/LKG/LJG/LNG/QPG/QRG/QQG/QSG/QTG	Meter	√	√	√	√		√		
Bus/Coach, Heavy Japan LDG/LKG/LJG/LNG/QPG/QRG/QQG/QSG/QTG	Lane departure warning systems	√	√	√	√		√		
Bus/Coach, Heavy Japan LDG/LKG/LJG/LNG/QPG/QRG/QQG/QSG/QTG	VCS (Vehicle Control System)	√	√	√	√		√		
Bus/Coach, Heavy Japan LDG/LKG/LJG/LNG/QPG/QRG/QQG/QSG/QTG	ABSCOM	√	√	√	√		√		
Bus/Coach, Heavy Japan LDG/LKG/LJG/LNG/QPG/QRG/QQG/QSG/QTG	Inverter	√	√	√	√		√		
Bus/Coach, Heavy Japan LDG/LKG/LJG/LNG/QPG/QRG/QQG/QSG/QTG	Battery	√	√	√	√		√		
Bus/Coach, Heavy Japan LDG/LKG/LJG/LNG/QPG/QRG/QQG/QSG/QTG	Brake (WABCO EBS3)	√	√	√	√		√		
Bus/Coach, Heavy Japan LDG/LKG/LJG/LNG/QPG/QRG/QQG/QSG/QTG	Brake (WABCO ABS-E8)	√	√	√	√		√		
Bus/Coach, Heavy Japan LDG/LKG/LJG/LNG/QPG/QRG/QQG/QSG/QTG	Door control	√	√	√	√		√		
Bus/Coach, Heavy Japan 2KG/2RG/2SG/2TG	Engine	√	√	√	√		√	√	√
Bus/Coach, Heavy Japan 2KG/2RG/2SG/2TG	Transmission	√	√	√	√		√		
Bus/Coach, Heavy Japan 2KG/2RG/2SG/2TG	Transmission (AMT)	√	√	√	√		√		

Bus/Coach, Heavy Japan 2KG/2RG/2SG/2TG	Brake (WABCO EBS3)	√	√	√	√		√		
Bus/Coach, Heavy Japan 2KG/2RG/2SG/2TG	Air bag 2	√	√	√	√		√		
Bus/Coach, Heavy Japan 2KG/2RG/2SG/2TG	Hybrid	√	√	√	√		√		
Bus/Coach, Heavy Japan 2KG/2RG/2SG/2TG	Inverter	√	√	√	√		√		
Bus/Coach, Heavy Japan 2KG/2RG/2SG/2TG	Battery	√	√	√	√		√		
Bus/Coach, Heavy Japan 2KG/2RG/2SG/2TG	DCU(Doser) (500K)	√	√	√	√		√	√	√
Bus/Coach, Heavy Japan 2KG/2RG/2SG/2TG	Meter	√	√	√	√		√		
Bus/Coach, Heavy Japan 2KG/2RG/2SG/2TG	Meter (7 inch)	√	√	√	√		√		
Bus/Coach, Heavy Japan 2KG/2RG/2SG/2TG	VCS (Vehicle Control System)	√	√	√	√		√		
Bus/Coach, Heavy Japan 2KG/2RG/2SG/2TG	Door control	√	√	√	√		√		
Bus/Coach, Heavy Japan 2KG/2RG/2SG/2TG	Body Control Module	√	√	√	√		√		
Bus/Coach, Heavy Japan 2KG/2RG/2SG/2TG	FCM: Front image recognition sensor	√	√	√	√		√		
Bus/Coach, Heavy Japan 2KG/2RG/2SG/2TG	LDWS: Lane departure warning systems_16MYsince (for 700 500 series / buses)	√	√	√	√		√		
Bus/Coach, Heavy Japan 2KG/2RG/2SG/2TG	Central gateway	√	√	√	√		√		

Bus/Coach, Heavy Japan 2KG/2RG/2SG/2TG	Adaptive Driving Beam	√	√	√	√		√		
Bus/Coach, Heavy Japan 2KG/2RG/2SG/2TG	Automatic transmission	√	√	√	√		√		
Bus/Coach, Heavy Japan 2KG/2RG/2SG/2TG	Driving support	√	√	√	√		√		
Bus/Coach, Heavy Japan 2KG/2RG/2SG/2TG	Suspension (WABCO AIRSUSPENSION)	√	√	√	√		√		
Bus/Coach, Heavy HL2A left connector	Brake (KNORR ABS)	√	√	√	√		√		
Bus/Coach, Heavy HL2A left connector	Suspension (KNORR AIRSUSPENSION)	√	√	√	√		√		
Bus/Coach, Heavy Long-distance bus	Engine	√	√	√	√			√	√
Bus/Coach, Heavy Long-distance bus	Transmission (AMT)	√	√	√	√		√		
Bus/Coach, Heavy Long-distance bus	DCU(Doser) (500K)	√	√	√	√		√	√	√
Bus/Coach, Heavy Long-distance bus	Hybrid	√	√	√	√		√		
Bus/Coach, Heavy Long-distance bus	VCS (Vehicle Control System)	√	√	√	√		√		
Bus/Coach, Heavy Long-distance bus	Meter (7 inch)	√	√	√	√		√		
Bus/Coach, Heavy Long-distance bus	Vehicle control ECU(Long-distance bus)	√	√	√	√		√		
Bus/Coach, Heavy Long-distance bus	Door control (Main)	√	√	√	√		√		

Bus/Coach, Heavy Long-distance bus	Door control (Sub)	√	√	√	√		√		
Bus/Coach, Heavy Long-distance bus	Body control module (Long-distance bus)	√	√	√	√		√		
Bus/Coach, Heavy Long-distance bus	Brake (WABCO EBS3 Long-distance bus)	√	√	√	√		√		
Bus/Coach, Heavy Long-distance bus	Suspension (KNORR AIRSUSPENSION-500K Long-distance bus)	√	√	√	√		√		
Bus/Coach, Heavy Long-distance bus	Driving support	√	√	√	√		√		
Bus/Coach, Heavy Long-distance bus	Steering control (Long-distance bus)	√	√	√	√		√		
Bus/Coach, Heavy Long-distance bus	View support camera system	√	√	√	√		√		
Bus/Coach, Medium Japan KK/KL	Engine	√	√	√	√				
Bus/Coach, Medium Japan KK/KL	Brake (WABCO ABS-E8)	√	√	√	√		√		
Bus/Coach, Medium Japan PK/PB/PA	Engine	√	√	√	√		√	√	√
Bus/Coach, Medium Japan PK/PB/PA	Transmission	√	√	√	√		√		
Bus/Coach, Medium Japan PK/PB/PA	Brake (WABCO ABS-E8)	√	√	√	√		√		
Bus/Coach, Medium Japan BDG/BKG/PDG/PKG	Engine	√	√	√	√		√	√	√
Bus/Coach, Medium Japan BDG/BKG/PDG/PKG	Transmission	√	√	√	√		√		

Bus/Coach, Medium Japan BDG/BKG/PDG/PKG	Brake (DENSO ABS)	√	√	√	√		√		
Bus/Coach, Medium Japan BDG/BKG/PDG/PKG	HINO STOP&START SYSTEM	√	√	√	√		√		
Bus/Coach, Medium Japan BDG/BKG/PDG/PKG	Brake (WABCO ABS-E8)	√	√	√	√		√		
Bus/Coach, Medium Japan LDG/LKG/SKG/SDG/LNG	Engine	√	√	√	√		√	√	√
Bus/Coach, Medium Japan LDG/LKG/SKG/SDG/LNG	Transmission (old AT)	√	√	√	√		√		
Bus/Coach, Medium Japan LDG/LKG/SKG/SDG/LNG	Brake (DENSO ABS)	√	√	√	√		√		
Bus/Coach, Medium Japan LDG/LKG/SKG/SDG/LNG	VCS (Vehicle Control System)	√	√	√	√		√		
Bus/Coach, Medium Japan LDG/LKG/SKG/SDG/LNG	ABSCOM	√	√	√	√		√		
Bus/Coach, Medium Japan LDG/LKG/SKG/SDG/LNG	Brake (WABCO ABS-E8)	√	√	√	√		√		
Bus/Coach, Medium Japan 2DG	Engine	√	√	√	√		√	√	√
Bus/Coach, Medium Japan 2DG	Transmission (AMT)	√	√	√	√		√		
Bus/Coach, Medium Japan 2DG	Brake (ADVICS ABS)	√	√	√	√		√		
Bus/Coach, Medium Japan 2DG	Air bag 2	√	√	√	√		√		
Bus/Coach, Medium Japan 2DG	VCS (Vehicle Control System)	√	√	√	√		√		

Bus/Coach, Medium Japan 2DG	DCU(Doser) (500K)	√	√	√	√		√	√	√
Bus/Coach, Medium Japan 2DG	Body Control Module	√	√	√	√		√		
Bus/Coach, Light Japan ADG	Engine	√	√	√	√		√	√	√
Bus/Coach, Light Japan ADG	Transmission (old AT)	√	√	√	√		√		
Bus/Coach, Light Japan ADG	Brake (DENSO ABS)	√	√	√	√		√		
Bus/Coach, Light Japan ADG	HINO STOP&START SYSTEM	√	√	√	√		√		
Bus/Coach, Light Japan BDG/PDG/NBG	Engine	√	√	√	√			√	√
Bus/Coach, Light Japan BDG/PDG/NBG	Transmission (old AT)	√	√	√	√		√		
Bus/Coach, Light Japan BDG/PDG/NBG	Brake (DENSO ABS)	√	√	√	√		√		
Bus/Coach, Light Japan BDG/PDG/NBG	HINO STOP&START SYSTEM	√	√	√	√		√		
Bus/Coach, Light Japan KK	Engine	√	√	√	√		√	√	√
Bus/Coach, Light Japan KK	Transmission (old AT)	√	√	√	√		√		
Bus/Coach, Light Japan PB/LD	Engine	√	√	√	√		√	√	√
Bus/Coach, Light Japan PB/LD	Transmission (old AT)	√	√	√	√		√		

Bus/Coach, Light Japan SDG/SKG	Engine	√	√	√	√		√	√	√
Bus/Coach, Light Japan SDG/SKG	Transmission	√	√	√	√		√		
Bus/Coach, Light Japan SDG/SKG	Transmission (old AT)	√	√	√	√		√		
Bus/Coach, Light Japan SDG/SKG	Brake (DENSO ABS)	√	√	√	√		√		
Bus/Coach, Light Japan SDG/SKG	VCS (Vehicle Control System)	√	√	√	√		√		
Bus/Coach, Light Japan 2DG	Engine	√	√	√	√		√	√	√
Bus/Coach, Light Japan 2DG	Transmission	√	√	√	√		√		
Bus/Coach, Light Japan 2DG	Transmission (old AT)	√	√	√	√		√		
Bus/Coach, Light Japan 2DG	Brake (DENSO ABS)	√	√	√	√		√		
Bus/Coach, Light Japan 2DG	Suspension (KNORR AIRSUSPENSION-500K)	√	√	√	√		√		
Bus/Coach, Light Japan 2DG	DCU(Doser) (500K)	√	√	√	√		√	√	√
Bus/Coach, Light Japan 2DG	VCS (Vehicle Control System)	√	√	√	√		√		
Retro Global	Engine	√	√	√	√				
Industrial Engine EURO3	Engine	√	√	√	√		√	√	√

Industrial Engine EURO4	Engine	√	√	√	√		√	√	√
Industrial Engine EURO4	DCU(Doser) (500K)	√	√	√	√		√	√	√
Industrial Engine TIER 3 STAGE 3A	Engine	√	√	√	√		√	√	√
Industrial Engine TIER 4 STAGE 3B	Engine	√	√	√	√		√	√	√
Industrial Engine TIER 4 STAGE 4 / STAGE 5	Engine	√	√	√	√		√	√	√
Industrial Engine TIER 4 STAGE 4 / STAGE 5	DCU(Doser) (500K)	√	√	√	√		√	√	√
Other Other	Steering control	√	√	√	√		√		
Other Other	Approach message system	√	√	√	√		√		
Other Other	Door control(Main)	√	√	√	√		√		
Other Other	Door control(Sub)	√	√	√	√		√		
Other Other	Vehicle control ECU(Long-distance bus)	√	√	√	√		√		
Other Other	Body control module(Long-distance bus)	√	√	√	√		√		
Other Other	Brake(WABCO EBS3_Long-distance bus)	√	√	√	√		√		
Other Other	Suspension(KNORR AIRSUSPENSION-500K_Long-distance bus)	√	√	√	√		√		

Other Other	Urea SCR (DENSO)	√	√	√	√		√		
Other Other	Steering control(Long-distance bus)	√	√	√	√		√		
Other Other	View support camera system	√	√	√	√		√		
Other Other(250K)	Brake (ADVICS ABS 250k)	√	√	√	√		√		
300 series(COE) (North America) North America	Engine	√	√	√	√		√	√	√
300 series(COE) (North America) North America	Transmission	√	√	√	√		√		
300 series(COE) (North America) North America	Transmission (AT)	√	√	√	√		√		
300 series(COE) (North America) North America	Brake (DENSO ABS)	√	√	√	√		√		
300 series(COE) (North America) North America	Hybrid	√	√	√	√		√		
300 series(COE) (North America) North America	Hybrid_14MYsince	√	√	√	√		√		
300 series(COE) (North America) North America	Inverter	√	√	√	√		√		
300 series(COE) (North America) North America	Battery	√	√	√	√		√		
300 series(COE) (North America) North America	DCU(Doser) (500K)	√	√	√	√		√	√	√
300 series(COE) (North America) North America	Brake	√	√	√	√		√		

300 series (COE) (North America) North America	Clutch	√	√	√	√		√		
300 series (COE) (North America) North America	VCS (Vehicle Control System)	√	√	√	√		√		
300 series (N engine) Global	Engine	√	√	√	√		√	√	√
300 series (N engine) Global	Transmission	√	√	√	√		√		
300 series (N engine) Global	Transmission (AT)	√	√	√	√		√		
300 series (N engine) Global	Transmission (old AT)	√	√	√	√		√		
300 series (N engine) Global	Brake	√	√	√	√		√		
300 series (N engine) Global	Brake (DENSO ABS)	√	√	√	√		√		
300 series (N engine) Global	Clutch	√	√	√	√		√		
300 series (N engine) Global	SRS (Airbag)	√	√	√	√		√		
300 series (N engine) Global	SRS (Airbag)	√	√	√	√		√		
300 series (N engine) Global	Hybrid	√	√	√	√		√		
300 series (N engine) Global	Hybrid_14MYsince	√	√	√	√		√		
300 series (N engine) Global	Inverter	√	√	√	√		√		

300 series (N engine) Global	Battery	√	√	√	√		√		
300 series (N engine) Global	Immobilizer	√	√	√	√		√		
300 series (N engine) Global	VCS (Vehicle Control System)	√	√	√	√		√		
300 series (N engine) Global	Headlight auto leveling	√	√	√	√		√		
300 series (N engine) Global	Lane departure warning systems	√	√	√	√		√		
300 series (N engine) Global	Smart System	√	√	√	√		√		
300 series (N engine) Global	FCM: Front image recognition sensor	√	√	√	√		√		
300 series (N engine) Global	LDWS: Lane departure warning systems_16MYsince (for 300 series)	√	√	√	√		√		
300 series (N engine) Global	Driving support	√	√	√	√		√		
300 series (N engine) Global	Error prevention function	√	√	√	√		√		
300 series (N engine) Global	HINO STOP&START SYSTEM	√	√	√	√		√		
300 series (N engine) EURO5 With VCS	Engine	√	√	√	√		√	√	√
300 series (N engine) EURO5 With VCS	Transmission	√	√	√	√		√		
300 series (N engine) EURO5 With VCS	Transmission (AT)	√	√	√	√		√		

300 series (N engine) EURO5 With VCS	Transmission (old AT)	√	√	√	√		√		
300 series (N engine) EURO5 With VCS	Brake	√	√	√	√		√		
300 series (N engine) EURO5 With VCS	Clutch	√	√	√	√		√		
300 series (N engine) EURO5 With VCS	SRS (Airbag)	√	√	√	√		√		
300 series (N engine) EURO5 With VCS	Hybrid	√	√	√	√		√		
300 series (N engine) EURO5 With VCS	Hybrid_14MYsince	√	√	√	√		√		
300 series (N engine) EURO5 With VCS	Inverter	√	√	√	√		√		
300 series (N engine) EURO5 With VCS	Battery	√	√	√	√		√		
300 series (N engine) EURO5 With VCS	Immobilizer	√	√	√	√		√		
300 series (N engine) EURO5 With VCS	VCS (Vehicle Control System)	√	√	√	√		√		
300 series (N engine) EURO5 With VCS	Headlight auto leveling	√	√	√	√		√		
300 series (N engine) EURO5 With VCS	Transfer	√	√	√	√		√		
300 series (N engine) EURO5 With VCS	Error prevention function	√	√	√	√		√		
300 series (N engine) EURO6	Engine	√	√	√	√		√	√	√

300 series (N engine) EURO6	Transmission	√	√	√	√		√		
300 series (N engine) EURO6	Transmission (AT)	√	√	√	√		√		
300 series (N engine) EURO6	Transmission (old AT)	√	√	√	√		√		
300 series (N engine) EURO6	Brake	√	√	√	√		√		
300 series (N engine) EURO6	Clutch	√	√	√	√		√		
300 series (N engine) EURO6	SRS (Airbag)	√	√	√	√		√		
300 series (N engine) EURO6	Hybrid	√	√	√	√		√		
300 series (N engine) EURO6	Hybrid_14MYsince	√	√	√	√		√		
300 series (N engine) EURO6	Inverter	√	√	√	√		√		
300 series (N engine) EURO6	Battery	√	√	√	√		√		
300 series (N engine) EURO6	Immobilizer	√	√	√	√		√		
300 series (N engine) EURO6	VCS (Vehicle Control System)	√	√	√	√		√		
300 series (N engine) EURO6	Headlight auto leveling	√	√	√	√		√		
300 series (N engine) EURO6	Transfer	√	√	√	√		√		

300 series (N engine) EURO6	Urea SCR (DENSO)	√	√	√	√		√		
300 series (N engine) EURO6	Error prevention function	√	√	√	√		√		
300 series (J engine) EURO5 With VCS	Engine	√	√	√	√		√	√	√
300 series (J engine) EURO5 With VCS	Transmission	√	√	√	√		√		
300 series (J engine) EURO5 With VCS	Transmission (AT)	√	√	√	√		√		
300 series (J engine) EURO5 With VCS	Hybrid	√	√	√	√		√		
300 series (J engine) EURO5 With VCS	Hybrid_14Mysince	√	√	√	√		√		
300 series (J engine) EURO5 With VCS	Inverter	√	√	√	√		√		
300 series (J engine) EURO5 With VCS	Battery	√	√	√	√		√		
300 series (J engine) EURO5 With VCS	DCU(Doser) (500K)	√	√	√	√		√	√	√
300 series (J engine) EURO5 With VCS	VCS (Vehicle Control System)	√	√	√	√		√		
300 series (J engine) EURO5 With VCS	Brake	√	√	√	√		√		
300 series (J engine) EURO5 With VCS	Clutch	√	√	√	√		√		
300 series (J engine) EURO5 With VCS	Lane departure warning systems	√	√	√	√		√		

300 series (J engine) EURO5 With VCS	Immobilizer	√	√	√	√		√		
300 series (J engine) EURO5 With VCS	Headlight auto leveling	√	√	√	√		√		
300 series (J engine) EURO5 With VCS	Transfer	√	√	√	√		√		
300 series (J engine) Global	Engine	√	√	√	√		√	√	√
300 series (J engine) Global	Transmission	√	√	√	√		√		
300 series (J engine) Global	Hybrid	√	√	√	√		√		
300 series (J engine) Global	Hybrid_14MYsince	√	√	√	√		√		
300 series (J engine) Global	Inverter	√	√	√	√		√		
300 series (J engine) Global	Battery	√	√	√	√		√		
300 series (J engine) Global	VCS (Vehicle Control System)	√	√	√	√		√		
300 series (J engine) Global	Brake	√	√	√	√		√		
300 series (J engine) Global	Clutch	√	√	√	√		√		
300 series (J engine) Global	Lane departure warning systems	√	√	√	√		√		
300 series (J engine) Global	Immobilizer	√	√	√	√		√		

300 series (J engine) Global	Headlight auto leveling	√	√	√	√		√		
300 series (J engine) EURO6	Engine	√	√	√	√		√	√	√
300 series (J engine) EURO6	Transmission	√	√	√	√		√		
300 series (J engine) EURO6	Transmission (AT)	√	√	√	√		√		
300 series (J engine) EURO6	Hybrid	√	√	√	√		√		
300 series (J engine) EURO6	Hybrid_14MYsince	√	√	√	√		√		
300 series (J engine) EURO6	Inverter	√	√	√	√		√		
300 series (J engine) EURO6	Battery	√	√	√	√		√		
300 series (J engine) EURO6	DCU(Doser) (500K)	√	√	√	√		√	√	√
300 series (J engine) EURO6	VCS (Vehicle Control System)	√	√	√	√		√		
300 series (J engine) EURO6	Brake	√	√	√	√		√		
300 series (J engine) EURO6	Clutch	√	√	√	√		√		
300 series (J engine) EURO6	Lane departure warning systems	√	√	√	√		√		
300 series (J engine) EURO6	Immobilizer	√	√	√	√		√		

300 series (J engine) EURO6	Headlight auto leveling	√	√	√	√		√		
300 series (J engine) EURO6	Transfer	√	√	√	√		√		
300 series (J engine) EURO6	FCM: Front image recognition sensor	√	√	√	√		√		
300 series (J engine) EURO6	Driving support	√	√	√	√		√		
BUS Global With VCS	Engine	√	√	√	√		√	√	√
BUS Global With VCS	VCS (Vehicle Control System)	√	√	√	√		√		
BUS Global With VCS	Hybrid	√	√	√	√		√		
BUS Global With VCS	Inverter	√	√	√	√		√		
BUS Global With VCS	Battery	√	√	√	√		√		
BUS Global With VCS	Transmission	√	√	√	√		√		
BUS Global With VCS	Transmission (old AT)	√	√	√	√		√		
BUS Global With VCS	Transmission (AMT)	√	√	√	√		√		
BUS Global With VCS	ZF INTARDER	√	√	√	√		√		
BUS Global With VCS	ZF INTARDER3 (500K)	√	√	√	√		√		

BUS Global With VCS	Brake (WABCO EBS)	√	√	√	√		√		
BUS Global With VCS	Brake (WABCO EBS3)	√	√	√	√		√		
BUS Global With VCS	ABSCOM	√	√	√	√		√		
BUS Global With VCS	Brake (WABCO ABS-E8)	√	√	√	√		√		
BUS Global With VCS	Brake (DENSO ABS)	√	√	√	√		√		
BUS Global With VCS	Brake	√	√	√	√		√		
BUS Global With VCS	Suspension	√	√	√	√		√		
BUS Global With VCS	Suspension (WABCO AIRSUSPENSION)	√	√	√	√		√		
BUS Global With VCS	DCU(Doser) (500K)	√	√	√	√		√	√	√
BUS Global With VCS	Kneeling system	√	√	√	√		√		
BUS Global With VCS	HINO STOP&START SYSTEM	√	√	√	√		√		
BUS Global With VCS	SRS (Airbag)	√	√	√	√		√		
BUS Global With VCS	Meter	√	√	√	√		√		
BUS Global With VCS	Lane departure warning systems	√	√	√	√		√		

BUS Global Without VCS	Engine	√	√	√	√		√	√	√
BUS Global Without VCS	Transmission	√	√	√	√		√		
BUS Global Without VCS	Transmission (old AT)	√	√	√	√		√		
BUS Global Without VCS	ZF INTARDER	√	√	√	√		√		
BUS Global Without VCS	ZF INTARDER3	√	√	√	√		√		
BUS Global Without VCS	Brake (WABCO EBS)	√	√	√	√		√		
BUS Global Without VCS	ABSCOM	√	√	√	√		√		
BUS Global Without VCS	Brake (DENSO ABS)	√	√	√	√		√		
BUS Global Without VCS	Suspension	√	√	√	√		√		
BUS Global Without VCS	DCU(Doser) (250K)	√	√	√	√		√	√	√
BUS Global Without VCS	Kneeling system	√	√	√	√		√		
BUS Global Without VCS	HINO STOP&START SYSTEM	√	√	√	√		√		
BUS Global Without VCS	SRS (Airbag)	√	√	√	√		√		
BUS Global Without VCS	Lane departure warning systems	√	√	√	√		√		

BUS HS/HU Air suspension diagnosis connector	Suspension (KNORR AIRSUSPENSION)	√	√	√	√		√		
FC bus FC system DLC(A)	FC-A system	√	√	√	√		√		
FC bus FC system DLC(A)	EV-A system	√	√	√	√		√		
FC bus FC system DLC(A)	EVGW	√	√	√	√		√		
FC bus FC system DLC(A)	FCDC	√	√	√	√		√		
FC bus FC system DLC(A)	Plug-in control	√	√	√	√		√		
FC bus FC system DLC(B)	FC-B system	√	√	√	√		√		
FC bus FC system DLC(B)	EV-B system	√	√	√	√		√		
FC bus FC system DLC(B)	EVGW	√	√	√	√		√		
FC bus FC system DLC(B)	FCDC	√	√	√	√		√		
FC bus Chassis and body system	VIF	√	√	√	√		√		
FC bus Chassis and body system	Brake (WABCO EBS3)	√	√	√	√		√		
FC bus Chassis and body system	Brake (WABCO EBS3 STD)	√	√	√	√		√		
FC bus Chassis and body system	Suspension (KNORR AIRSUSPENSION-500K)	√	√	√	√		√		

FC bus Chassis and body system	Meter (7 inch)	√	√	√	√		√		
FC bus Chassis and body system	Vision assistance system	√	√	√	√		√		
FC bus Chassis and body system	Driving support	√	√	√	√		√		
FC bus Chassis and body system	Steering control	√	√	√	√		√		
FC bus Chassis and body system	Approach message system	√	√	√	√		√		
BUS Global With VCS	Brake (WABCO EBS3)	√	√	√	√		√		
BUS Global With VCS	ABSCOM	√	√	√	√		√		
BUS Global With VCS	Brake (WABCO ABS)	√	√	√	√		√		
BUS Global With VCS	Brake (WABCO ABS-E8)	√	√	√	√		√		
BUS Global With VCS	Brake (DENSO ABS)	√	√	√	√		√		
BUS Global With VCS	Brake	√	√	√	√		√		
BUS Global With VCS	Suspension	√	√	√	√		√		
BUS Global With VCS	Suspension (WABCO Air Suspension)	√	√	√	√		√		
BUS Global With VCS	DCU (Doser) (500K)	√	√	√	√		√	√	√

BUS Global With VCS	Kneeling system	√	√	√	√		√		
BUS Global With VCS	HINO STOP&START SYSTEM	√	√	√	√		√		
BUS Global With VCS	SRS (Airbag)	√	√	√	√		√		
BUS Global With VCS	Meter	√	√	√	√		√		
BUS Global With VCS	Lane departure warning systems	√	√	√	√		√		
BUS Global Without VCS	Engine	√	√	√	√		√	√	√
BUS Global Without VCS	Transmission	√	√	√	√		√		
BUS Global Without VCS	Transmission (old AT)	√	√	√	√		√		
BUS Global Without VCS	ZF INTARDER	√	√	√	√		√		
BUS Global Without VCS	ZF INTARDER3	√	√	√	√		√		
BUS Global Without VCS	Brake (WABCO EBS)	√	√	√	√		√		
BUS Global Without VCS	ABSCOM	√	√	√	√		√		
BUS Global Without VCS	Brake (WABCO ABS)	√	√	√	√		√		
BUS Global Without VCS	Brake (DENSO ABS)	√	√	√	√		√		

BUS Global Without VCS	Suspension	√	√	√	√		√		
BUS Global Without VCS	DCU(Doser) (250K)	√	√	√	√		√	√	√
BUS Global Without VCS	Kneeling system	√	√	√	√		√		
BUS Global Without VCS	HINO STOP&START SYSTEM	√	√	√	√		√		
BUS Global Without VCS	SRS (Airbag)	√	√	√	√		√		
BUS Global Without VCS	Lane departure warning systems	√	√	√	√		√		
BUS Air suspension diagnosis connector	Suspension (KNORR AIRSUSPENSION)	√	√	√	√		√		
FC bus FC system DLC(A)	FC-A system	√	√	√	√		√		
FC bus FC system DLC(A)	EV-A system	√	√	√	√		√		
FC bus FC system DLC(A)	EVGW	√	√	√	√		√		
FC bus FC system DLC(A)	FCDC	√	√	√	√		√		
FC bus FC system DLC(A)	Plug-in control	√	√	√	√		√		
FC bus FC system DLC(B)	FC-B system	√	√	√	√		√		
FC bus FC system DLC(B)	EV-B system	√	√	√	√		√		

FC bus FC system DLC(B)	EVGW	√	√	√	√		√		
FC bus FC system DLC(B)	FCDC	√	√	√	√		√		
FC bus Chassis and body system	VIF	√	√	√	√		√		
FC bus Chassis and body system	Brake (WABCO EBS3)	√	√	√	√		√		
FC bus Chassis and body system	Brake(WABCO EBS3 STD)	√	√	√	√		√		
FC bus Chassis and body system	Suspension (KNORR AIRSUSPENSION-500K)	√	√	√	√		√		
FC bus Chassis and body system	Meter (7 inch)	√	√	√	√		√		
FC bus Chassis and body system	Vision assistance system	√	√	√	√		√		
FC bus Chassis and body system	Driving support	√	√	√	√		√		
FC bus Chassis and body system	Steering control	√	√	√	√		√		
FC bus Chassis and body system	Approach message system	√	√	√	√		√		