



BYD Function List V10.30

Tips and Instructions:

The programming function only supports H6PRO, H6PRO Master Edition products.

- * This feature is new.
- ✓ This feature is supported.
- This feature is not supported.
- ※ This feature is partially supported.

Model	Model Series	System Name	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Read Freeze Frame	Actuation Test	Special Functions
BYD	Qin/Qin 14 general models	1.5TID Electronic Injection (ECM)	✓	✓	✓	✓	✓	✓	SP0000-SP0001
BYD	Qin/Qin 14 general models	Dual clutch transmission (TCU)	✓	✓	✓	✓	✓	✓	SP0002-SP0005
BYD	Qin/Qin 14 general models	Drive Motor Controller (ECN)	✓	✓	✓	✓	✓	✓	SP0006
BYD	Qin/Qin 14 general models	Gear Controller (GCM)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	P file controller (PGCM)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	DC-DC assembly (DC-DC)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Electronic Body Stability System (E	✓	✓	✓	✓	✓	✓	SP0007-SP0012
BYD	Qin/Qin 14 general models	Hydraulic Assist Brake (ACMH)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Electronic Parking System (Mando)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Battery Management System (BMS)	✓	✓	✓	✓	✓	✓	SP0013-SP0014
BYD	Qin/Qin 14 general models	Low Voltage Battery Management Syst	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	On-board charger (OBC)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Power Steering (EPS)	✓	✓	✓	✓	✓	✓	SP0015-SP0018
BYD	Qin/Qin 14 general models	Combination Instrument (INS)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	EV-HEV switch (EV-HEV)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Body Controller (BCM)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Intelligent Key (IKey)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Steering shaft lock (ECL)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Airbag (SRS)	✓	✓	✓	✓	✓	✓	SP0019
BYD	Qin/Qin 14 general models	Air Conditioning Controller (ACB)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Air Conditioning Compressor Control	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Tire Pressure Management Module (TP	✓	✓	✓	✓	✓	✓	SP0020-SP0023
BYD	Qin/Qin 14 general models	Engine Sound Simulator (AVAS)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Combination switch (CS)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Cloud Service System (DCM)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Front left gate (DCU FL)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Right front door control (DCU FR)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Door multiple controller (DMCU)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Panoramic image (FV)/panoramic MCU	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Panoramic video (FV)/panoramic DSP	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Information Station (IS)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Multimedia	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Parking Assist System (PAS)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Air conditioning water heater (PTC)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Electric steering column (PTECU)	✓	✓	✓	✓	✓	✓	SP0024
BYD	Qin/Qin 14 general models	Front compartment power distributic	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Rear Multimedia Control Switch (RCS)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Main driver's seat (SECU D)	✓	✓	✓	✓	✓	✓	SP0025
BYD	Qin/Qin 14 general models	Panoramic Steering Wheel Switch (SW	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin 14 general models	Gateway (GW)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	1.5TID Electronic Injection (ECM)	✓	✓	✓	✓	✓	✓	SP0026-SP0027
BYD	Qin/Qin Double Crown Universal Style	Drive Motor Controller (ECN)	✓	✓	✓	✓	✓	✓	SP0028
BYD	Qin/Qin Double Crown Universal Style	Transmission Controller (TCU)	✓	✓	✓	✓	✓	✓	SP0029-SP0032
BYD	Qin/Qin Double Crown Universal Style	DC-DC assembly (DC-DC)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Active Bleeding Controller (BPCM)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Gear Controller (GCM)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Electronic Body Stability System (E	✓	✓	✓	✓	✓	✓	SP0033-SP0038
BYD	Qin/Qin Double Crown Universal Style	Power Steering (EPS)	✓	✓	✓	✓	✓	✓	SP0039-SP0042
BYD	Qin/Qin Double Crown Universal Style	Electronic Parking System (EPB)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Battery Pack Data (BPD)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Battery Management System (BMS)	✓	✓	✓	✓	✓	✓	SP0043-SP0044
BYD	Qin/Qin Double Crown Universal Style	On-board charger (OBC)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Combination Instrument (INS)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Battery Collector (BIC)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	EV-HEV switch (EV-HEV)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Low Voltage Battery Management Syst	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Leakage Sensor (LS)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Steering shaft lock (ECL)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Body Controller (BCM)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Intelligent Key (IKey)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Airbag (SRS)	✓	✓	✓	✓	✓	✓	SP0045
BYD	Qin/Qin Double Crown Universal Style	Air Conditioning Controller (ACB)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Tire Pressure Management Module (TP	✓	✓	✓	✓	✓	✓	SP0046-SP0049
BYD	Qin/Qin Double Crown Universal Style	No. 1 switch group (1#SWITCH)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	4G communication module (4G)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Air Conditioning Compressor Control	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Combination switch (CS)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Co-pilot ventilation heating switch	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Cloud Service System (DCM)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Front left gate (DCU FL)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Right front door control (DCU FR)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Door multiple controller (DMCU)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Panoramic image (FV)/panoramic MCU	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Panoramic video (FV)/panoramic DSP	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Information Station (IS)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Multimedia	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Parking Assist System (PAS)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Green Clean System (PM2.5)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Air conditioning water heater (PTC)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Double Crown Universal Style	Electric steering column (PTECU)	✓	✓	✓	✓	✓	✓	SP0050
BYD	Qin/Qin Double Crown Universal Style	Front compartment power distributic	✓	✓	✓	✓	✓	✓	

BYD	Qin/Qin Pro DM Universal	Integrated body controller (BCM)	✓	✓	✓	✓	✓	✓	SP0170-SP0177
BYD	Qin/Qin Pro DM Universal	Combination Instrument (INS)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Air Conditioning Controller (ACB)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Air Conditioning Compressor (ACC)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Power amplifier (AMP)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Center Console Switch Group (CCS)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Door multiple controller (DMCU)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Front left gate (DCU FL)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Right front door control (DCU FR)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Image Integration (FV)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Inside rearview mirror (IRVM)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	NFC Control Module (NCM)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Multimedia control panel switch gro	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Multimedia (Android version) (Media	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Multimedia Power (MBC)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Main driver's seat (SECU D)	✓	✓	✓	✓	✓	✓	SP0178
BYD	Qin/Qin Pro DM Universal	Parking Assist System (PAS)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Green Clean Svstem (PM2.5)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Auxiliary heating (PTC)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Sunroof Controller (SRM)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Steering Wheel Switch (SWS)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Engine Sound Simulator (VSP)/Engine	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Engine Sound Simulator (VSP)/Engine	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Driving Recorder (VTDR)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Voice Noise Reduction (LLS)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Display bracket assembly (PH)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Wireless charging (WCT)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin Pro DM Universal	Gateway (GW)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Engine Controller [I.5NA] National	✓	✓	✓	✓	✓	✓	SP0179-SP0188
BYD	Qin/Qin PLUS DMI Universal	Vehicle Controller (VCU)/Vehicle Co	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Vehicle Controller (VCU)/Vehicle Co	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Combination switch (KOSTAL) (CS KOS	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Multi-function displav (BYD) (MDS)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Steering wheel switch (BYD) (SWS)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Wireless charging module (WCT)/wire	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Wireless charging module (WCT)/wire	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Display bracket assembly (BYD) (Pa	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Lamp holder for left ambient light	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Dashboard right atmosphere lamp left	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Right lamp holder of dashboard right	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Rear lamp head of left atmosphere l	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Rear lamp head of right atmosphere	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Left body domain controller A L2 (G	✓	✓	✓	✓	✓	✓	SP0189-SP0193
BYD	Qin/Qin PLUS DMI Universal	Right body domain controller R2 (BY	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Rear body domain controller A B1 (E	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Multifunctional Video Controller (M	✓	✓	✓	✓	✓	✓	SP0194-SP0199
BYD	Qin/Qin PLUS DMI Universal	Electric power steering (Mobis) (CF	✓	✓	✓	✓	✓	✓	SP0200
BYD	Qin/Qin PLUS DMI Universal	Airbag (new) (BYD) (SRS)	✓	✓	✓	✓	✓	✓	SP0201-SP0202
BYD	Qin/Qin PLUS DMI Universal	Electro-hydraulic brake (Bosch) (IF	✓	✓	✓	✓	✓	✓	SP0203-SP0230
BYD	Qin/Qin PLUS DMI Universal	Sunroof Controller (BYD) (SRM)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Front millimeter wave radar (mainl	✓	✓	✓	✓	✓	✓	SP0231-SP0235
BYD	Qin/Qin PLUS DMI Universal	Blind Spot Monitoring (Hella) (BSD)	✓	✓	✓	✓	✓	✓	SP0236-SP0237
BYD	Qin/Qin PLUS DMI Universal	Boost DC (BYD) (DC AC)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Front drive motor controller (BYD)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Generator Controller (BYD) (ISG)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Air Conditioning Compressor (BYD)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Shift control mechanism panel assem	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Car power supply assembly (DCOBC)/I	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	On-board power supply assembly (DC	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Battery Manager (BMS)/Battery Manag	✓	✓	✓	✓	✓	✓	SP0238-SP0246
BYD	Qin/Qin PLUS DMI Universal	Battery Manager (BMS)/Battery Manag	✓	✓	✓	✓	✓	✓	SP0247-SP0255
BYD	Qin/Qin PLUS DMI Universal	Auxiliary heating (BYD) (PTC)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Low Voltage Battery Management Svst	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Multimedia System Android (BYD) (Me	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Combination Instrument (INS)/Combir	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Combination Instrument (INS)/Combir	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	Smart Entry Controller (BYD) (SEC)	✓	✓	✓	✓	✓	✓	
BYD	Qin/Qin PLUS DMI Universal	High frequency receiver module (BY	✓	✓	✓	✓	✓	✓	
BYD	Tang/Tang 15 general models	Engine Controller 2.0T1D(ECM)	✓	✓	✓	✓	✓	✓	SP0256-SP0257
BYD	Tang/Tang 15 general models	Wet dual clutch transmission (TCU)	✓	✓	✓	✓	✓	✓	SP0258-SP0269
BYD	Tang/Tang 15 general models	Gear Controller (SCU)	✓	✓	✓	✓	✓	✓	
BYD	Tang/Tang 15 general models	DC-DC assembly (DC-DC)	✓	✓	✓	✓	✓	✓	
BYD	Tang/Tang 15 general models	Front Drive Motor Controller (FMCU)	✓	✓	✓	✓	✓	✓	SP0270
BYD	Tang/Tang 15 general models	Rear Drive Motor Controller (RMCU)	✓	✓	✓	✓	✓	✓	
BYD	Tang/Tang 15 general models	Active Front Discharge (FID)	✓	✓	✓	✓	✓	✓	
BYD	Tang/Tang 15 general models	Rear Active Release (RID)	✓	✓	✓	✓	✓	✓	
BYD	Tang/Tang 15 general models	Electronic Body Stabilitv System (E	✓	✓	✓	✓	✓	✓	SP0271-SP0276
BYD	Tang/Tang 15 general models	Power Steering (EPS)	✓	✓	✓	✓	✓	✓	SP0277-SP0280
BYD	Tang/Tang 15 general models	Electronic Parking System (EPB)/Ele	✓	✓	✓	✓	✓	✓	
BYD	Tang/Tang 15 general models	Electronic Parking System (EPB)/Ele	✓	✓	✓	✓	✓	✓	
BYD	Tang/Tang 15 general models	Battery Management System (BMS)/Bat	✓	✓	✓	✓	✓	✓	SP0281-SP0282
BYD	Tang/Tang 15 general models	Battery Management System (BMS)/Bat	✓	✓	✓	✓	✓	✓	SP0283-SP0284
BYD	Tang/Tang 15 general models	On-board charger (OBC)	✓	✓	✓	✓	✓	✓	
BYD	Tang/Tang 15 general models	Battery Collector (BIC)	✓	✓	✓	✓	✓	✓	
BYD	Tang/Tang 15 general models	EV-HEV switch (EV-HEV)	✓	✓	✓	✓	✓	✓	
BYD	Tang/Tang 15 general models	Combination Instrument (INS)	✓	✓	✓	✓	✓	✓	
BYD	Tang/Tang 15 general models	Low Voltage Battery Management Svst	✓	✓	✓	✓	✓	✓	
BYD	Tang/Tang 15 general models	Leakage Sensor (LS)	✓	✓	✓	✓	✓	✓	
BYD	Tang/Tang 15 general models	Automatic light adjustment system	✓	✓	✓	✓	✓	✓	SP0285
BYD	Tang/Tang 15 general models	Body Controller (BCM)	✓	✓	✓	✓	✓	✓	
BYD	Tang/Tang 15 general models	Steering shaft lock (ECL)	✓	✓	✓	✓	✓	✓	
BYD	Tang/Tang 15 general models	Intelligent Key (IKey)	✓	✓	✓	✓	✓	✓	
BYD	Tang/Tang 15 general models	Airbag (SRS)	✓	✓	✓	✓	✓	✓	SP0286-SP0287
BYD	Tang/Tang 15 general models	Air Conditioning Controller (ACB)	✓	✓	✓	✓	✓	✓	
BYD	Tang/Tang 15 general models	Air Conditioning Compressor Control	✓	✓	✓	✓	✓	✓	
BYD	Tang/Tang 15 general models	Tire Pressure Management Module (TP	✓	✓	✓	✓	✓	✓	SP0288-SP0291

BYD	Tang/A new generation of Tang Universal	Gear Controller (SCU)	√	√	√	√			
BYD	Tang/A new generation of Tang Universal	Electronic Body Stability System (EB	√	√	√	√			SP0379-SP0389
BYD	Tang/A new generation of Tang Universal	Power Steering (EPS)	√	√	√	√			SP0390-SP0397
BYD	Tang/A new generation of Tang Universal	Tire Pressure Management Module (TP	√	√	√	√			SP0398-SP0401
BYD	Tang/A new generation of Tang Universal	Tire Pressure Management Module (TP	√	√	√	√	√		SP0402-SP0405
BYD	Tang/A new generation of Tang Universal	Electronic Parking (Sark) (EPB)	√	√	√	√	√		SP0406
BYD	Tang/A new generation of Tang Universal	Blind Spot Detection (BSD)	√	√	√	√			SP0407-SP0409
BYD	Tang/A new generation of Tang Universal	Multi-Function Video Controller (MF	√	√	√	√			SP0410-SP0416
BYD	Tang/A new generation of Tang Universal	Adaptive Cruise System (MRR)	√	√	√	√			SP0417-SP0420
BYD	Tang/A new generation of Tang Universal	Battery Management System (BMS)/Ter	√	√	√	√	√		SP0421-SP0422
BYD	Tang/A new generation of Tang Universal	Battery Management System (BMS)/Ter	√	√	√	√	√		SP0423-SP0424
BYD	Tang/A new generation of Tang Universal	On-board charger (OBC)/on-board cha	√	√	√	√			
BYD	Tang/A new generation of Tang Universal	On-board charger (OBC)/on-board cha	√	√	√	√			
BYD	Tang/A new generation of Tang Universal	Combination Instrument (INS)	√	√	√	√			
BYD	Tang/A new generation of Tang Universal	Battery heater (BH)	√	√	√	√			
BYD	Tang/A new generation of Tang Universal	Battery Collector (BIC)	√						
BYD	Tang/A new generation of Tang Universal	EV-HEV switch (EV-HEV)	√	√	√	√			
BYD	Tang/A new generation of Tang Universal	Low Voltage Battery Management Syst	√	√	√	√	√		
BYD	Tang/A new generation of Tang Universal	Ternary battery leakage sensor (LS)	√	√	√	√			
BYD	Tang/A new generation of Tang Universal	NFC Control Module (NCM)	√	√	√	√			
BYD	Tang/A new generation of Tang Universal	Body Controller (BCM)	√	√	√	√	√		
BYD	Tang/A new generation of Tang Universal	Steering shaft lock (ECL)	√	√	√	√			
BYD	Tang/A new generation of Tang Universal	Intelligent Key (IKey)	√	√	√	√	√		
BYD	Tang/A new generation of Tang Universal	Airbag (third generation) (SRS III)	√	√	√	√			SP0425-SP0426
BYD	Tang/A new generation of Tang Universal	Air Conditioning Controller (ACB)	√	√	√	√	√		
BYD	Tang/A new generation of Tang Universal	Ambient light (ACM)	√	√	√	√			
BYD	Tang/A new generation of Tang Universal	Electric Back Door (BDECU)	√	√	√	√	√		
BYD	Tang/A new generation of Tang Universal	Combination switch (CS)	√	√	√	√	√		
BYD	Tang/A new generation of Tang Universal	Front left gate (DCU FL)	√	√	√	√	√		
BYD	Tang/A new generation of Tang Universal	Right front door control (DCU FR)	√	√	√	√	√		
BYD	Tang/A new generation of Tang Universal	Door multiple controller (DMCU)	√	√	√	√	√		
BYD	Tang/A new generation of Tang Universal	Left front combination lamp (FL L)	√	√	√	√	√		
BYD	Tang/A new generation of Tang Universal	Right front combination lamp (FL R)	√	√	√	√	√		
BYD	Tang/A new generation of Tang Universal	Indoor Light (ILS)	√	√	√	√			
BYD	Tang/A new generation of Tang Universal	Light Switch Group (LCS)	√	√	√	√	√		
BYD	Tang/A new generation of Tang Universal	Parking Assist System (PAS)	√	√	√	√	√		
BYD	Tang/A new generation of Tang Universal	Electric steering column (PTECU)	√	√	√	√	√		SP0427
BYD	Tang/A new generation of Tang Universal	Main driver seat adjustment switch	√	√	√	√	√		
BYD	Tang/A new generation of Tang Universal	Front passenger seat adjustment swi	√	√	√	√	√		
BYD	Tang/A new generation of Tang Universal	Main driver's seat (SECU D)	√	√	√	√	√		SP0428
BYD	Tang/A new generation of Tang Universal	Front passenger seat (SECU P)	√	√	√	√	√		
BYD	Tang/A new generation of Tang Universal	Sunroof Controller (SRM)	√						
BYD	Tang/A new generation of Tang Universal	Sunroof Sunshade Motor (SSM)	√						
BYD	Tang/A new generation of Tang Universal	Rear compartment power distributor	√	√	√	√	√		
BYD	Tang/A new generation of Tang Universal	Cooling fan (CLF)	√						
BYD	Tang/A new generation of Tang Universal	Condensing fan (CDF)	√						
BYD	Tang/A new generation of Tang Universal	Rear air conditioning panel (ACP4)	√						
BYD	Tang/A new generation of Tang Universal	Rear air conditioner controller (AC	√	√	√	√			
BYD	Tang/A new generation of Tang Universal	Air Conditioning Compressor Control	√	√	√	√			
BYD	Tang/A new generation of Tang Universal	External power amplifier (AMP)	√						
BYD	Tang/A new generation of Tang Universal	Image Integration (FV)	√	√	√	√			
BYD	Tang/A new generation of Tang Universal	Voice Noise Reduction (ILS)	√						
BYD	Tang/A new generation of Tang Universal	Inside rearview mirror (IRVM)	√	√	√		√		
BYD	Tang/A new generation of Tang Universal	Multimedia Power (MBC)	√						
BYD	Tang/A new generation of Tang Universal	Multimedia	√						
BYD	Tang/A new generation of Tang Universal	Multimedia Panel (M P)	√			√	√		
BYD	Tang/A new generation of Tang Universal	Green Clean System (PM2.5)/Green Cl	√	√	√	√	√		
BYD	Tang/A new generation of Tang Universal	Green Clean System (PM2.5)/Green Cl	√	√	√	√	√		
BYD	Tang/A new generation of Tang Universal	Stepless fan speed regulation (SAF)	√	√	√	√	√		
BYD	Tang/A new generation of Tang Universal	Display bracket assembly (PH)	√						
BYD	Tang/A new generation of Tang Universal	Front air conditioning air heater	√	√	√	√			
BYD	Tang/A new generation of Tang Universal	Rear air-conditioning wind heater	√	√	√	√			
BYD	Tang/A new generation of Tang Universal	Panoramic Steering Wheel Switch (SM	√	√	√	√	√		
BYD	Tang/A new generation of Tang Universal	Engine Sound Simulator (VSP)	√	√	√	√	√		
BYD	Tang/A new generation of Tang Universal	Driving Recorder (VTDR)	√	√	√	√			
BYD	Tang/A new generation of Tang Universal	Gateway (GW)	√	√	√	√			
BYD	Tang/A new generation of Tang DM (2021 models) ge	BSG (BYD) (BSG)	√	√	√	√	√		
BYD	Tang/A new generation of Tang DM (2021 models) ge	Engine Controller 2.0TID Contry Si	√	√	√	√	√		SP0429-SP0438
BYD	Tang/A new generation of Tang DM (2021 models) ge	Front drive motor controller (BYD)	√	√	√	√	√		
BYD	Tang/A new generation of Tang DM (2021 models) ge	Rear drive motor controller (BYD)	√	√	√	√	√		
BYD	Tang/A new generation of Tang DM (2021 models) ge	Gear Controller (BYD) (SCU)	√	√	√	√	√		
BYD	Tang/A new generation of Tang DM (2021 models) ge	Wet dual-clutch transmission contr	√	√	√	√	√	√	SP0439-SP0450
BYD	Tang/A new generation of Tang DM (2021 models) ge	Wet dual-clutch transmission contr	√	√	√	√	√	√	SP0451-SP0462
BYD	Tang/A new generation of Tang DM (2021 models) ge	Vehicle Controller BSG (BYD) (VCU)	√	√	√	√	√		SP0463-SP0471
BYD	Tang/A new generation of Tang DM (2021 models) ge	Electronic Parking (Sark) (EPB SAC)	√	√	√	√	√		SP0472-SP0474
BYD	Tang/A new generation of Tang DM (2021 models) ge	Power steering (TRW) (EPS TRW)	√	√	√	√	√		SP0475-SP0477
BYD	Tang/A new generation of Tang DM (2021 models) ge	Multifunctional Video Controller (B	√	√	√	√	√		SP0478-SP0484
BYD	Tang/A new generation of Tang DM (2021 models) ge	Adaptive Cruise System (Bosch) (MRR	√	√	√	√	√		SP0485-SP0489
BYD	Tang/A new generation of Tang DM (2021 models) ge	Tire Pressure Management Module (TP	√	√	√	√	√		SP0490-SP0493
BYD	Tang/A new generation of Tang DM (2021 models) ge	Tire Pressure Management Module (TP	√	√	√	√	√		SP0494-SP0497
BYD	Tang/A new generation of Tang DM (2021 models) ge	Electro-hydraulic brake (Bosch) (IF	√	√	√	√	√		SP0498-SP0523
BYD	Tang/A new generation of Tang DM (2021 models) ge	Left blind spot detection (BYD 77G)	√	√	√	√	√		SP0524-SP0525
BYD	Tang/A new generation of Tang DM (2021 models) ge	Right blind spot detection (BYD 77G)	√	√	√	√	√		SP0526-SP0527
BYD	Tang/A new generation of Tang DM (2021 models) ge	Airbag (new) (BYD) (SRS)	√	√	√	√	√		SP0528-SP0530
BYD	Tang/A new generation of Tang DM (2021 models) ge	Battery heater (BYD) (BH)	√	√	√	√	√		
BYD	Tang/A new generation of Tang DM (2021 models) ge	Battery Collector (BYD) (BIC)	√						
BYD	Tang/A new generation of Tang DM (2021 models) ge	Low Voltage Battery Management Syst	√	√	√	√	√		
BYD	Tang/A new generation of Tang DM (2021 models) ge	Ternary Battery Management System	√	√	√	√	√		
BYD	Tang/A new generation of Tang DM (2021 models) ge	Ternary Battery Management System	√	√	√	√	√		
BYD	Tang/A new generation of Tang DM (2021 models) ge	Two-way vehicle power supply assem	√	√	√	√	√		
BYD	Tang/A new generation of Tang DM (2021 models) ge	Ternary battery leakage sensor (BYL	√	√	√	√	√		
BYD	Tang/A new generation of Tang DM (2021 models) ge	Rear air conditioning controller (B	√	√	√	√	√		
BYD	Tang/A new generation of Tang DM (2021 models) ge	Air conditioning compressor control	√	√	√	√	√		
BYD	Tang/A new generation of Tang DM (2021 models) ge	Green Clean System (BYD) (PM2.5)	√	√	√	√	√		
BYD	Tang/A new generation of Tang DM (2021 models) ge	Front air-conditioning wind heater	√	√	√	√	√		
BYD	Tang/A new generation of Tang DM (2021 models) ge	Rear air-conditioning wind heater	√	√	√	√	√		

BYD	Tang/A new generation of Tang DM (2021 models) ge	NFC control module (BYD) (NCM)	✓	✓	✓	✓		
BYD	Tang/A new generation of Tang DM (2021 models) ge	Integrated body controller B1 (BYD)	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang DM (2021 models) ge	Integrated body controller B2 (BYD)	✓	✓	✓	✓	✓	SP0531-SP0538
BYD	Tang/A new generation of Tang DM (2021 models) ge	Cooling fan (BYD) (CLF)	✓					
BYD	Tang/A new generation of Tang DM (2021 models) ge	Condensing fan (BYD) (CDF)	✓					
BYD	Tang/A new generation of Tang DM (2021 models) ge	Combination Instrument (INS)/Combin	✓	✓	✓	✓		
BYD	Tang/A new generation of Tang DM (2021 models) ge	Combination Instrument (INS)/Combin	✓	✓	✓	✓	✓	SP0539-SP0677
BYD	Tang/A new generation of Tang DM (2021 models) ge	Ambient light (Chongqing Ruibo) (AC	✓	✓	✓	✓		
BYD	Tang/A new generation of Tang DM (2021 models) ge	Ambient light on the left panel (Ch	✓					
BYD	Tang/A new generation of Tang DM (2021 models) ge	Middle panel atmosphere light (Chor	✓					
BYD	Tang/A new generation of Tang DM (2021 models) ge	Ambient light on the right panel (C	✓					
BYD	Tang/A new generation of Tang DM (2021 models) ge	Electric back door (BYD) (BDECU)	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang DM (2021 models) ge	Combination switch (KOSTAL) (GS KOS	✓	✓	✓	✓		
BYD	Tang/A new generation of Tang DM (2021 models) ge	Wireless Charging (WCT)/Wireless Ch	✓	✓	✓	✓		
BYD	Tang/A new generation of Tang DM (2021 models) ge	Wireless Charging (WCT)/Wireless Ch	✓	✓	✓	✓		
BYD	Tang/A new generation of Tang DM (2021 models) ge	Door multi-channel controller (Yang	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang DM (2021 models) ge	Front left door control (KOSTAL) (F	✓	✓	✓	✓		
BYD	Tang/A new generation of Tang DM (2021 models) ge	Right front door control (KOSTAL) (R	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang DM (2021 models) ge	Left front combination lamp (BYD) (L	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang DM (2021 models) ge	Right front combination lamp (BYD) (R	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang DM (2021 models) ge	Indoor light (BYD) (ILS)	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang DM (2021 models) ge	Electric steering column (BYD) (PTF	✓	✓	✓	✓	✓	SP0678
BYD	Tang/A new generation of Tang DM (2021 models) ge	Main driving seat (BYD) (SECU D)	✓	✓	✓	✓	✓	SP0679
BYD	Tang/A new generation of Tang DM (2021 models) ge	Sunroof Motor (BYD) (SRM)	✓					
BYD	Tang/A new generation of Tang DM (2021 models) ge	Rear compartment power distributor	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang DM (2021 models) ge	Rear air conditioning panel (BYD) (✓					
BYD	Tang/A new generation of Tang DM (2021 models) ge	External power amplifier (BYD) (AMP	✓				✓	
BYD	Tang/A new generation of Tang DM (2021 models) ge	Inside rearview mirror (BYD) (IRVM)	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang DM (2021 models) ge	Multimedia System Android (BYD) (Me	✓	✓	✓	✓		
BYD	Tang/A new generation of Tang DM (2021 models) ge	Shift control panel assembly (Yangt	✓	✓	✓	✓		
BYD	Tang/A new generation of Tang DM (2021 models) ge	Display bracket assembly (BYD) (Pac	✓					
BYD	Tang/A new generation of Tang DM (2021 models) ge	Panoramic steering wheel switch (BY	✓	✓	✓	✓	✓	
BYD	Tang/Tang DMI Universal	Green Clean System (BYD) (PM2.5 BY	✓	✓	✓	✓	✓	
BYD	Tang/Tang DMI Universal	Rear body domain controller A B2 (B	✓	✓	✓	✓	✓	
BYD	Tang/Tang DMI Universal	Left body domain controller A L3 (B	✓	✓	✓	✓	✓	SP0680-SP0688
BYD	Tang/Tang DMI Universal	Right body domain controller R1 (BY	✓	✓	✓	✓	✓	
BYD	Tang/Tang DMI Universal	Combination switch (KOSTAL) (GS KOS	✓	✓	✓	✓		
BYD	Tang/Tang DMI Universal	Steering wheel switch (BYD) (SWS B)	✓	✓	✓	✓	✓	
BYD	Tang/Tang DMI Universal	Left front combination lamp (BYD) (L	✓	✓	✓	✓	✓	
BYD	Tang/Tang DMI Universal	Right front combination lamp (BYD) (R	✓	✓	✓	✓	✓	
BYD	Tang/Tang DMI Universal	Inside rearview mirror (BYD) (IRVM)	✓	✓	✓	✓	✓	
BYD	Tang/Tang DMI Universal	Wireless Charging (WCT)/Wireless Ch	✓	✓	✓	✓		
BYD	Tang/Tang DMI Universal	Wireless Charging (WCT)/Wireless Ch	✓	✓	✓	✓		
BYD	Tang/Tang DMI Universal	Display bracket assembly (BYD) (Pac	✓					
BYD	Tang/Tang DMI Universal	External power amplifier (BYD) (AMP	✓				✓	
BYD	Tang/Tang DMI Universal	Ambient light on the left panel (Ch	✓					
BYD	Tang/Tang DMI Universal	Middle panel atmosphere light (Chor	✓					
BYD	Tang/Tang DMI Universal	Ambient light on the right panel (C	✓					
BYD	Tang/Tang DMI Universal	Combination Instrument (INS)/Combin	✓	✓	✓	✓	✓	SP0689-SP0827
BYD	Tang/Tang DMI Universal	Combination Instrument (INS)/Combin	✓	✓	✓	✓	✓	
BYD	Tang/Tang DMI Universal	Kick System (BYD) (KSS)	✓					
BYD	Tang/Tang DMI Universal	Power Steering (EPS)/Power Steering	✓	✓	✓	✓	✓	SP0828-SP0829
BYD	Tang/Tang DMI Universal	Power Steering (EPS)/Power Steering	✓	✓	✓	✓	✓	SP0830
BYD	Tang/Tang DMI Universal	Blind spot detection (BYD) (BSD L F	✓	✓	✓	✓	✓	SP0831
BYD	Tang/Tang DMI Universal	Detection from the blind spot (BYD)	✓	✓	✓	✓	✓	SP0832
BYD	Tang/Tang DMI Universal	Multifunctional Video Controller (B	✓	✓	✓	✓	✓	SP0833-SP0836
BYD	Tang/Tang DMI Universal	Front millimeter wave radar (Bosch)	✓	✓	✓	✓	✓	SP0837-SP0840
BYD	Tang/Tang DMI Universal	Multifunctional Video Controller C	✓					
BYD	Tang/Tang DMI Universal	Front millimeter wave radar config	✓					
BYD	Tang/Tang DMI Universal	Airbag (BYD) (SRS BYD)	✓	✓	✓	✓	✓	SP0841-SP0843
BYD	Tang/Tang DMI Universal	Electro-hydraulic brake (Bosch) (IF	✓	✓	✓	✓	✓	SP0844-SP0868
BYD	Tang/Tang DMI Universal	Front drive motor controller (BYD)	✓	✓	✓	✓		
BYD	Tang/Tang DMI Universal	Vehicle controller (BYD) (VCU BYD)	✓	✓	✓	✓	✓	
BYD	Tang/Tang DMI Universal	Boost DC (BYD) (DC AC BYD)	✓	✓	✓	✓	✓	
BYD	Tang/Tang DMI Universal	Generator controller (BYD) (ISG BYD	✓	✓	✓	✓	✓	
BYD	Tang/Tang DMI Universal	Engine Controller [1.5TID] National	✓	✓	✓	✓	✓	SP0869-SP0874
BYD	Tang/Tang DMI Universal	Vehicle power supply assembly (BYD)	✓	✓	✓	✓	✓	
BYD	Tang/Tang DMI Universal	Low-voltage battery management svst	✓	✓	✓	✓	✓	
BYD	Tang/Tang DMI Universal	Battery Manager (BYD) (BMS BYD)	✓	✓	✓	✓	✓	SP0875-SP0883
BYD	Tang/Tang DMI Universal	Front auxiliary heating (BYD) (FPTC	✓	✓	✓	✓	✓	
BYD	Tang/Tang DMI Universal	Air conditioning compressor (BYD) (✓	✓	✓	✓	✓	
BYD	Tang/Tang DMI Universal	Shift control panel assembly (BYD)	✓	✓	✓	✓	✓	
BYD	Tang/Tang DMI Universal	Smart Entry Controller (BYD) (SEC B	✓	✓	✓	✓	✓	
BYD	Tang/Tang DMI Universal	Multimedia System Android (BYD) (Me	✓	✓	✓	✓	✓	
BYD	Tang/Tang DMI Universal	High frequency receiver module (BYD	✓	✓	✓	✓	✓	
BYD	Song/Song DM General	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓	SP0884-SP0886
BYD	Song/Song DM General	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓	SP0887-SP0897
BYD	Song/Song DM General	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓	SP0898-SP0900
BYD	Song/Song DM General	Transmission Controller (TCU)/Trans	✓	✓	✓	✓	✓	SP0901-SP0904
BYD	Song/Song DM General	Transmission Controller (TCU)/Trans	✓	✓	✓	✓	✓	SP0905-SP0908
BYD	Song/Song DM General	Transmission Controller (TCU)/Trans	✓	✓	✓	✓	✓	SP0909-SP0920
BYD	Song/Song DM General	Transmission Controller (TCU)/Trans	✓	✓	✓	✓	✓	SP0921-SP0932
BYD	Song/Song DM General	Gear position sensor (SCU)	✓	✓	✓	✓	✓	
BYD	Song/Song DM General	BSG (BSG)	✓	✓	✓	✓	✓	
BYD	Song/Song DM General	DC-DC/DC-DC assembly (DC-DC)	✓	✓	✓	✓	✓	
BYD	Song/Song DM General	DC-DC/DC-DC BSG assembly (DC-DC BSG	✓	✓	✓	✓	✓	
BYD	Song/Song DM General	Front Drive Motor Controller (FMCU)	✓	✓	✓	✓	✓	
BYD	Song/Song DM General	Front drive motor controller (FMCU)	✓	✓	✓	✓	✓	
BYD	Song/Song DM General	Front drive motor controller (FMCU)	✓	✓	✓	✓	✓	
BYD	Song/Song DM General	Front Active Release (FID)/Front Ac	✓	✓	✓	✓	✓	
BYD	Song/Song DM General	Front Active Release (FID)/Front Ac	✓	✓	✓	✓	✓	
BYD	Song/Song DM General	Rear Drive Motor Controller (RMCU)	✓	✓	✓	✓	✓	
BYD	Song/Song DM General	Rear Drive Motor Controller (RMCU)	✓	✓	✓	✓	✓	
BYD	Song/Song DM General	Rear active discharge (RID)/rear ac	✓	✓	✓	✓	✓	
BYD	Song/Song DM General	Rear Active Drain (RID)/Rear Active	✓	✓	✓	✓	✓	
BYD	Song/Song DM General	Electronic Body Stability System (E	✓	✓	✓	✓	✓	SP0933-SP0938

BYD	Song/Song DM General	Power Steering (EPS)/Power Steering	✓	✓	✓	✓			SP0939-SP0940
BYD	Song/Song DM General	Power Steering (EPS)/Power Steering	✓	✓	✓	✓			SP0941-SP0945
BYD	Song/Song DM General	Electronic Parking System (Sark) (E	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Lane Departure System (LDWS)	✓	✓	✓	✓			
BYD	Song/Song DM General	Vehicle Controller (VCU)/Vehicle Co	✓	✓	✓	✓	✓		SP0946
BYD	Song/Song DM General	Vehicle Controller (VCU)/Vehicle Co	✓	✓	✓	✓	✓		SP0947-SP0949
BYD	Song/Song DM General	On-board charger (OBC)	✓	✓	✓	✓			
BYD	Song/Song DM General	Battery Management System (BMS)/Bat	✓	✓	✓	✓	✓		SP0950-SP0951
BYD	Song/Song DM General	Battery Management System (BMS)/Bat	✓	✓	✓	✓	✓		SP0952-SP0954
BYD	Song/Song DM General	Battery Management System (BMS)/Bat	✓	✓	✓	✓	✓		SP0955-SP0957
BYD	Song/Song DM General	Main blind spot monitoring (BSD001)	✓	✓	✓	✓			SP0958-SP0959
BYD	Song/Song DM General	Auxiliary blind spot monitoring (BS	✓	✓	✓	✓			SP0960-SP0961
BYD	Song/Song DM General	Battery heater (BH)	✓	✓	✓	✓			
BYD	Song/Song DM General	Battery Acquisition System (BIC)	✓	✓	✓	✓			
BYD	Song/Song DM General	EV-HEV switch (EV-HEV)	✓	✓	✓	✓			
BYD	Song/Song DM General	Combination Instrument (INS)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Low Voltage Battery Management Svst	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Leakage Sensor (LS)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	NFC Control Module (NCM)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Body Controller (BCM)	✓	✓	✓	✓	✓		SP0962-SP0963
BYD	Song/Song DM General	Steering shaft lock (ECL)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Intelligent Key (IKey)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Airbag Three Generation (SRS III)	✓	✓	✓	✓	✓		SP0964-SP0965
BYD	Song/Song DM General	4G communication module (4G)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Air Conditioning Controller (ACB)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Air Conditioning Control Panel (ACC	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Air Conditioning Compressor Control	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Tire Pressure Management Module (TP	✓	✓	✓	✓	✓		SP0966-SP0969
BYD	Song/Song DM General	Tire Pressure Management Module (TP	✓	✓	✓	✓	✓		SP0970-SP0973
BYD	Song/Song DM General	Tire Pressure Management Module (TP	✓	✓	✓	✓	✓		SP0974-SP0977
BYD	Song/Song DM General	External power amplifier (AMP)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Battery Cooling Controller (BCC)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Electric Back Door (BDECU)	✓	✓	✓	✓	✓		SP0978
BYD	Song/Song DM General	Center Console Switch Group (CCS)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Combination switch (CS)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Front left gate (DCU FL)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Right front door control (DCU FR)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Door multiple controller (DMCU)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Panoramic image (PIV)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Inside rearview mirror (IRVM)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Multimedia Power (MBC)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Multimedia	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Multimedia Panel (M P)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Display bracket assembly (PH)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Parking Assist System (PAS)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Green Clean System (PM2.5)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Air conditioning water heater (PTC)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Electric steering column system (PI	✓	✓	✓	✓	✓		SP0979
BYD	Song/Song DM General	Front compartment power distributio	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Stepless Fan (SAF)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Main driver's seat adjustment switc	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Front passenger seat adjustment swi	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Main driving seat system (SECU D)	✓	✓	✓	✓	✓		SP0980
BYD	Song/Song DM General	Front passenger seat svstem (SECU F	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Panoramic Steering Wheel Switch (SW	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Engine Sound Simulator (VSP)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Driving Recorder (VTDR)	✓	✓	✓	✓	✓		
BYD	Song/Song DM General	Gateway (GW)	✓	✓	✓	✓	✓		
BYD	Song/Song Pro DM Universal	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP0981-SP0982
BYD	Song/Song Pro DM Universal	Transmission System (TCU)/Dry Doubl	✓	✓	✓	✓	✓		SP0983-SP0985
BYD	Song/Song Pro DM Universal	Transmission system (TCU)/wet dual	✓	✓	✓	✓	✓		SP0986-SP0997
BYD	Song/Song Pro DM Universal	Low pressure oil pump controller (E	✓	✓	✓	✓	✓		
BYD	Song/Song Pro DM Universal	BSG(BSG)	✓	✓	✓	✓	✓		
BYD	Song/Song Pro DM Universal	Gear position actuator (SCU)/gear r	✓	✓	✓	✓	✓		
BYD	Song/Song Pro DM Universal	Gear position actuator (SCU)/gear r	✓	✓	✓	✓	✓		
BYD	Song/Song Pro DM Universal	Gear position actuator (SCU)/gear r	✓	✓	✓	✓	✓		
BYD	Song/Song Pro DM Universal	Vehicle Controller BSG (VCU BSG)	✓	✓	✓	✓	✓		SP0998-SP1002
BYD	Song/Song Pro DM Universal	Front drive motor controller BSG (E	✓	✓	✓	✓	✓		
BYD	Song/Song Pro DM Universal	Rear drive motor controller four-wf	✓	✓	✓	✓	✓		
BYD	Song/Song Pro DM Universal	Electronic Body Stability System (E	✓	✓	✓	✓	✓		SP1003-SP1013
BYD	Song/Song Pro DM Universal	Power Steering (TRW) (EPS)	✓	✓	✓	✓	✓		SP1014-SP1019
BYD	Song/Song Pro DM Universal	Tire Pressure Management Module (TP	✓	✓	✓	✓	✓		SP1020-SP1027
BYD	Song/Song Pro DM Universal	Tire Pressure Management Module (TP	✓	✓	✓	✓	✓		SP1028-SP1035
BYD	Song/Song Pro DM Universal	Tire Pressure Management Module (TP	✓	✓	✓	✓	✓		SP1036-SP1043
BYD	Song/Song Pro DM Universal	Electronic Parking System (EPB)/Ele	✓	✓	✓	✓	✓		
BYD	Song/Song Pro DM Universal	Electronic Parking System (EPB)/Ele	✓	✓	✓	✓	✓		
BYD	Song/Song Pro DM Universal	Blind Spot Monitoring (Hella) (BSD)	✓	✓	✓	✓	✓		SP1044
BYD	Song/Song Pro DM Universal	Monitoring from the blind spot (BSI	✓	✓	✓	✓	✓		SP1045-SP1046
BYD	Song/Song Pro DM Universal	Multi-Function Video Controller (MF	✓	✓	✓	✓	✓		SP1047-SP1052
BYD	Song/Song Pro DM Universal	Steering wheel angle sensor (KSD)	✓	✓	✓	✓	✓		
BYD	Song/Song Pro DM Universal	Adaptive Cruise (MRR)	✓	✓	✓	✓	✓		SP1053-SP1055
BYD	Song/Song Pro DM Universal	Blind Spot Monitoring (BSD001)	✓	✓	✓	✓	✓		SP1056-SP1057
BYD	Song/Song Pro DM Universal	Battery heater (BH)	✓	✓	✓	✓	✓		
BYD	Song/Song Pro DM Universal	Battery Collector (BIC)	✓	✓	✓	✓	✓		
BYD	Song/Song Pro DM Universal	Power Battery Manager (BMS)	✓	✓	✓	✓	✓		SP1058-SP1061
BYD	Song/Song Pro DM Universal	Combination Instrument (Desai) (INS	✓	✓	✓	✓	✓		
BYD	Song/Song Pro DM Universal	Low Voltage Battery Management Svst	✓	✓	✓	✓	✓		
BYD	Song/Song Pro DM Universal	Leakage Sensor (LS)	✓	✓	✓	✓	✓		
BYD	Song/Song Pro DM Universal	Two-way vehicle power supply assem	✓	✓	✓	✓	✓		
BYD	Song/Song Pro DM Universal	Body Controller (BCM)/Body Controll	✓	✓	✓	✓	✓		
BYD	Song/Song Pro DM Universal	Body Controller (BCM)/Body Controll	✓	✓	✓	✓	✓		
BYD	Song/Song Pro DM Universal	Intelligent Key (IKey)	✓	✓	✓	✓	✓		
BYD	Song/Song Pro DM Universal	Airbag (Winninger) (SRS)	✓	✓	✓	✓	✓		SP1062
BYD	Song/Song Pro DM Universal	Body Controller No. 2 (BCM 2)	✓	✓	✓	✓	✓		
BYD	Song/Song Pro DM Universal	Air Conditioning Controller (ACB)	✓	✓	✓	✓	✓		
BYD	Song/Song Pro DM Universal	Air Conditioning Compressor (ACC)	✓	✓	✓	✓	✓		

BYD	Song/Song Pro DM Universal	NFC Control Module (NCM)	√	√	√	√			
BYD	Song/Song Pro DM Universal	Sunroof Motor (Inalfa) (SRM)	√						
BYD	Song/Song Pro DM Universal	Sunroof Controller (BYD) (SRM)	√						
BYD	Song/Song Pro DM Universal	Display bracket assembly (PH)	√						
BYD	Song/Song Pro DM Universal	Wireless charging (Beijing Yougan)	√	√	√				
BYD	Song/Song Pro DM Universal	Assisted driving switch group (BYD)	√	√	√	√			
BYD	Song/Song Pro DM Universal	Shift control mechanism panel assem	√	√	√	√			
BYD	Song/Song Pro DM Universal	External power amplifier (AMP)	√	√	√				
BYD	Song/Song Pro DM Universal	Electric back door (BYD) (BDECU)	√	√	√	√			
BYD	Song/Song Pro DM Universal	Electric back door (BD ECU)	√	√	√	√			√
BYD	Song/Song Pro DM Universal	Combination switch (CS)	√	√	√	√			√
BYD	Song/Song Pro DM Universal	Front left gate (DCU FL)	√	√	√	√			√
BYD	Song/Song Pro DM Universal	Right front door control (DCU FR)	√	√	√	√			√
BYD	Song/Song Pro DM Universal	Door multiple controller (DMCU)	√	√	√	√			√
BYD	Song/Song Pro DM Universal	Panoramic image (FV)	√	√	√	√			
BYD	Song/Song Pro DM Universal	Multimedia System Android (BYD) (Me	√	√	√				
BYD	Song/Song Pro DM Universal	Parking Assist System (PAS)/Parking	√	√	√				
BYD	Song/Song Pro DM Universal	Parking Assist System (PAS)/Parking	√	√	√				
BYD	Song/Song Pro DM Universal	Green Clean System (PM2.5)/PM2.5 Gr	√	√	√	√			√
BYD	Song/Song Pro DM Universal	Green Clean System (PM2.5)/Green Cl	√	√	√	√			√
BYD	Song/Song Pro DM Universal	Main driving seat (SECU001)	√	√	√	√			√
BYD	Song/Song Pro DM Universal	Steering Wheel Switch (SWS)/Steerir	√	√	√	√			√
BYD	Song/Song Pro DM Universal	Steering Wheel Switch (SWS)/Steerir	√	√	√	√			√
BYD	Song/Song Pro DM Universal	Engine Sound Simulator (AVAS)	√	√	√	√			√
BYD	Song/Song Pro DM Universal	Driving Recorder (VTDR)	√	√	√				
BYD	Song/Song Pro DM Universal	Multimedia Power (MBC)	√						
BYD	Song/Song Pro DM Universal	Gateway (GW)	√	√	√				
BYD	Song/Song Pro DM Universal	PAD(FPAD)	√	√	√				
BYD	Song/Song MAX DM Universal	Engine Controller (ECM)/1.5T1D Engi	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Engine Controller (ECM)/1.5T1D Engi	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Vehicle Controller BSG (VCU BSG)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Wet dual clutch transmission (TCU)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Active venting (BPCM)	√	√	√	√			
BYD	Song/Song MAX DM Universal	Integrated generator motor (BSG)	√	√	√	√			
BYD	Song/Song MAX DM Universal	Low pressure oil pump controller (F	√	√	√	√			
BYD	Song/Song MAX DM Universal	DC-DC assembly (DC-DC)	√	√	√	√			
BYD	Song/Song MAX DM Universal	Drive Motor Controller (ECN)	√	√	√	√			
BYD	Song/Song MAX DM Universal	Gear position sensor (SCU)	√	√	√	√			
BYD	Song/Song MAX DM Universal	Electronic Body Stability System (E	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Power Steering (TRW) (EPS)	√	√	√				√
BYD	Song/Song MAX DM Universal	Tire Pressure Management Module (TP	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Tire Pressure Management Module (TP	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Tire Pressure Management Module (TP	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Electronic Parking System (EPB)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Blind Spot Monitoring (BSD)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Multi-Function Video Controller (MP	√	√	√				√
BYD	Song/Song MAX DM Universal	Adaptive Cruise (MRR)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Power Battery Manager (BMS)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Low Voltage Battery Management Syst	√	√	√	√			√
BYD	Song/Song MAX DM Universal	On-board charger (OBC)	√	√	√	√			
BYD	Song/Song MAX DM Universal	Combination Instrument (INS)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Battery heater (BH)	√	√	√	√			
BYD	Song/Song MAX DM Universal	Battery Collector (BIC)	√						
BYD	Song/Song MAX DM Universal	Mode switch (EV HEV)	√	√	√	√			
BYD	Song/Song MAX DM Universal	Leakage Sensor (LS)	√	√	√	√			
BYD	Song/Song MAX DM Universal	Body Controller (BCM)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Steering shaft lock (ECL)	√	√	√				
BYD	Song/Song MAX DM Universal	Intelligent Key (IKey)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Airbag (SRS)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Integrated body controller B2 (IBCM	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Integrated body controller B1 (IBCM	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Air Conditioning Controller (ACB)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Air Conditioning Compressor (ACC)	√	√	√	√			
BYD	Song/Song MAX DM Universal	Rear automatic air conditioning cor	√	√	√				
BYD	Song/Song MAX DM Universal	External power amplifier (AMP)	√						
BYD	Song/Song MAX DM Universal	Electric back door (BD ECU)	√	√	√				√
BYD	Song/Song MAX DM Universal	Center Console Switch Group (CCS)	√	√	√				
BYD	Song/Song MAX DM Universal	Combination switch (CS)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Front left gate (DCU FL)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Right front door control (DCU FR)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Door Multiplex Controller/Door Mult	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Door multi-channel controller/Door	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Kick ECU (EOS)	√	√	√				
BYD	Song/Song MAX DM Universal	Left front combination lamp (FL L)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Right front combination lamp (FL R)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Panoramic image DSP (FVC)	√	√	√	√			
BYD	Song/Song MAX DM Universal	Voice Noise Reduction (ILS)	√						
BYD	Song/Song MAX DM Universal	Inside rearview mirror (IRVM)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Light Switch Group (LCS)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Multimedia Power (MBC)	√						
BYD	Song/Song MAX DM Universal	Multimedia Panel (M P)	√						
BYD	Song/Song MAX DM Universal	Display bracket assembly (PH)	√						
BYD	Song/Song MAX DM Universal	Parking Assist System (PAS)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	PM2.5 Green Clean System (PM2.5)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Auxiliary heating (PTC)	√	√	√	√			
BYD	Song/Song MAX DM Universal	Stepless Fan Speed Control Module	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Main driver's seat adjustment switc	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Front passenger seat adjustment swi	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Main driving seat (SECU001)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Front passenger seat (SECU002)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Sunroof Controller (SRM)	√						
BYD	Song/Song MAX DM Universal	Sunroof Sunshade Motor (SSM)	√						
BYD	Song/Song MAX DM Universal	4G (4G)	√	√	√				
BYD	Song/Song MAX DM Universal	Steering Wheel Switch (SWS)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Engine Sound Simulator (AVAS)	√	√	√	√			√
BYD	Song/Song MAX DM Universal	Driving Recorder (VTDR)	√	√	√				

BYD	Song/Song MAX DM Universal	NFC Control Module (NCM)	✓	✓	✓	✓		
BYD	Song/Song MAX DM Universal	Gateway (GW)	✓	✓	✓	✓		
BYD	Song/Song PLUS DMI Universal	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓	SP1148-SP1157
BYD	Song/Song PLUS DMI Universal	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓	SP1158-SP1167
BYD	Song/Song PLUS DMI Universal	Gear actuator electronic shift (BYD)	✓	✓	✓	✓		
BYD	Song/Song PLUS DMI Universal	Vehicle Controller (VCU)/Vehicle Co	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Vehicle Controller (VCU)/Vehicle Co	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Left blind spot monitoring (Winning)	✓	✓	✓	✓		SP1168-SP1171
BYD	Song/Song PLUS DMI Universal	Right blind spot monitoring (Winnir)	✓	✓	✓	✓		SP1172-SP1175
BYD	Song/Song PLUS DMI Universal	Power steering (TRIW) (CEPS TRW)	✓	✓	✓	✓		SP1176-SP1184
BYD	Song/Song PLUS DMI Universal	Electro-hydraulic brake (Bosch) (IF	✓	✓	✓	✓	✓	SP1185-SP1216
BYD	Song/Song PLUS DMI Universal	Multifunctional Video Controller (B	✓	✓	✓	✓		SP1217-SP1223
BYD	Song/Song PLUS DMI Universal	Adaptive Cruise (Bosch) (MRR BOSCH)	✓	✓	✓	✓	✓	SP1224-SP1230
BYD	Song/Song PLUS DMI Universal	Left body domain controller A L2 (B	✓	✓	✓	✓	✓	SP1231-SP1235
BYD	Song/Song PLUS DMI Universal	Right body domain controller R2 (B)	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Rear body domain controller A B1 (B	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Rear body domain controller A B2 (B	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	External power amplifier (BYD) (AMP	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Battery heater (BYD) (BH)	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Power Battery Manager (BYD) (BMS)	✓	✓	✓	✓	✓	SP1236-SP1238
BYD	Song/Song PLUS DMI Universal	Two-way vehicle power supply assem	✓	✓	✓	✓		
BYD	Song/Song PLUS DMI Universal	Two-way vehicle power supply assem	✓	✓	✓	✓		
BYD	Song/Song PLUS DMI Universal	Combination Instrument (INS)/Combin	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Combination Instrument (INS)/Combin	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Low Voltage Battery Management Syst	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Auxiliary heating (PTC)/auxiliary h	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Auxiliary heating (PTC)/auxiliary h	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Auxiliary heating (PTC)/auxiliary h	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Rear drive motor controller (BYD) (✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Drive motor controller (BYD) (FMCU)	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Generator Controller (BYD) (ISG)	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Boost DC (BYD) (DC AC)	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Air Conditioning Compressor (BYD)	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Combination switch (KOSTAL) (CS KOS	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Green Clean System (Meximec) (PM2.5	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Left combination rear light control	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Airbag (BYD) (SRS IIL)	✓	✓	✓	✓	✓	SP1239-SP1240
BYD	Song/Song PLUS DMI Universal	Steering wheel switch (BYD) (SWS)	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Wireless Charging (WCT)/Wireless Ch	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Wireless Charging (WCT)/Wireless Ch	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Left front combination lamp (BYD)	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Right front combination lamp (BYD)	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Shift control mechanism panel assem	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Right combination rear light contr	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Left tail light control module (Gua	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Right tail light control module (Gu	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Multimedia System Android (BYD) (Me	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	Smart Entry Controller (BYD) (SEC)	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS DMI Universal	High frequency receiver module (BYD	✓	✓	✓	✓	✓	
BYD	M3	Engine Controller (ECM)	✓	✓	✓	✓	✓	SP1241-SP1242
BYD	M3	Dual clutch transmission (TCU)	✓	✓	✓	✓	✓	SP1243-SP1246
BYD	M3	DC-DC assembly (DC-DC)	✓	✓	✓	✓	✓	
BYD	M3	Drive Motor Controller (ECM)	✓	✓	✓	✓	✓	SP1247
BYD	M3	Active Bleeding Controller (BPCM)	✓	✓	✓	✓	✓	
BYD	M3	Wheel anti-lock brake system (ABS/E	✓	✓	✓	✓	✓	SP1248-SP1253
BYD	M3	Wheel Anti-lock Brake System (ABS/E	✓	✓	✓	✓	✓	SP1254-SP1259
BYD	M3	Electronic Parking System (EPB)	✓	✓	✓	✓	✓	
BYD	M3	Power Steering (EPS)/Power Steering	✓	✓	✓	✓	✓	SP1260-SP1263
BYD	M3	Power Steering (EPS)/Power Steering	✓	✓	✓	✓	✓	SP1264-SP1265
BYD	M3	Battery Management System (BMS)/Bat	✓	✓	✓	✓	✓	SP1266-SP1267
BYD	M3	Battery Management System (BMS)/Bat	✓	✓	✓	✓	✓	SP1268-SP1269
BYD	M3	Low Voltage Battery Management Svst	✓	✓	✓	✓	✓	
BYD	M3	Battery Collector (BIC)	✓	✓	✓	✓	✓	
BYD	M3	On-board charger (OBC)	✓	✓	✓	✓	✓	
BYD	M3	EV-HEV switch (EV-HEV)	✓	✓	✓	✓	✓	
BYD	M3	Gear Controller (GCM)	✓	✓	✓	✓	✓	
BYD	M3	Leakage Sensor (LS)	✓	✓	✓	✓	✓	
BYD	M3	Combination Instrument (INS)	✓	✓	✓	✓	✓	
BYD	M3	Body Controller (BCM)	✓	✓	✓	✓	✓	
BYD	M3	Intelligent Key (IKey)	✓	✓	✓	✓	✓	
BYD	M3	Steering shaft lock (ECL)	✓	✓	✓	✓	✓	
BYD	M3	Airbag (SRS)/Airbag (SRS)	✓	✓	✓	✓	✓	SP1270
BYD	M3	Airbag (SRS)/Airbag (third generati	✓	✓	✓	✓	✓	SP1271
BYD	M3	Air Conditioning Controller (ACB)	✓	✓	✓	✓	✓	
BYD	M3	Air Conditioning Control Panel (ACC	✓	✓	✓	✓	✓	
BYD	M3	Air Conditioning Compressor Control	✓	✓	✓	✓	✓	
BYD	M3	Air conditioning water heater (PTC)	✓	✓	✓	✓	✓	
BYD	M3	Door multiple controller (DMCU)	✓	✓	✓	✓	✓	
BYD	M3	Parking Assist System (PAS)	✓	✓	✓	✓	✓	
BYD	M3	Information Station (IS)	✓	✓	✓	✓	✓	
BYD	M3	Multimedia	✓	✓	✓	✓	✓	
BYD	M3	Rear interior light (RRL)	✓	✓	✓	✓	✓	
BYD	M3	Vehicle terminal (VT)	✓	✓	✓	✓	✓	
BYD	M3	Engine Sound Simulator (AVAS)	✓	✓	✓	✓	✓	
BYD	M3	Cloud Service System (DCM)	✓	✓	✓	✓	✓	
BYD	M3	4G communication module (4G)	✓	✓	✓	✓	✓	
BYD	M3	Gateway (GW)	✓	✓	✓	✓	✓	
BYD	Han DM General	2.0TID engine controller National V	✓	✓	✓	✓	✓	SP1272-SP1281
BYD	Han DM General	Wet Dual Clutch Transmission (TCU)	✓	✓	✓	✓	✓	SP1282-SP1293
BYD	Han DM General	Wet dual-clutch transmission (TCU)/	✓	✓	✓	✓	✓	SP1294-SP1305
BYD	Han DM General	Vehicle Controller (BYD) (VCU)	✓	✓	✓	✓	✓	SP1306
BYD	Han DM General	Integrated generator motor (STC) (B	✓	✓	✓	✓	✓	
BYD	Han DM General	Rear drive motor controller (BYD)	✓	✓	✓	✓	✓	
BYD	Han DM General	Gear position actuator (SCU)/gear p	✓	✓	✓	✓	✓	
BYD	Han DM General	Gear position actuator (SCU)/gear p	✓	✓	✓	✓	✓	
BYD	Han DM General	Electro-hydraulic brake (Bosch) (IF	✓	✓	✓	✓	✓	SP1307-SP1334

BYD	Han DM General	Electronic Parking System (Sark) (E	✓	✓	✓	✓	✓	SP1335-SP1339
BYD	Han DM General	Power Steering CEPS (Tianhe) (CEPS)	✓	✓	✓	✓	✓	SP1340-SP1342
BYD	Han DM General	Front millimeter wave radar (Vining)	✓	✓	✓	✓	✓	SP1343-SP1346
BYD	Han DM General	Multi-Function Video Controller (Wi	✓	✓	✓	✓	✓	SP1347-SP1350
BYD	Han DM General	Tire pressure monitoring module (Se	✓	✓	✓	✓	✓	SP1351-SP1354
BYD	Han DM General	Left front combination lamp (BYD)	✓	✓	✓	✓	✓	
BYD	Han DM General	Right front combination lamp (BYD)	✓	✓	✓	✓	✓	
BYD	Han DM General	Blade Battery Manager 80 (BYD) (BMS	✓	✓	✓	✓	✓	SP1355-SP1356
BYD	Han DM General	Low Voltage Battery Management Svst	✓	✓	✓	✓	✓	
BYD	Han DM General	Battery heater (BH)/Battery heater	✓	✓	✓	✓	✓	
BYD	Han DM General	Battery heater (BH)/Battery heater	✓	✓	✓	✓	✓	
BYD	Han DM General	NFC control module (BYD) (NCM)	✓	✓	✓	✓	✓	
BYD	Han DM General	Two-way vehicle power supply assem	✓	✓	✓	✓	✓	
BYD	Han DM General	Body Controller (BYD) (BCM)	✓	✓	✓	✓	✓	
BYD	Han DM General	Smart Key (BYD) (IKey)	✓	✓	✓	✓	✓	
BYD	Han DM General	Hidden front left door handle (BYD)	✓	✓	✓	✓	✓	
BYD	Han DM General	Hidden rear left door handle (BYD)	✓	✓	✓	✓	✓	
BYD	Han DM General	Right front hidden door handle (BYD)	✓	✓	✓	✓	✓	
BYD	Han DM General	Hidden rear right door handle (BYD)	✓	✓	✓	✓	✓	
BYD	Han DM General	Combination switch (KSD) (CS)	✓	✓	✓	✓	✓	
BYD	Han DM General	Door multiple controller (Yangtze R	✓	✓	✓	✓	✓	
BYD	Han DM General	Parking Assist System (PAS)/Parking	✓	✓	✓	✓	✓	
BYD	Han DM General	Parking Assist System (PAS)/Parking	✓	✓	✓	✓	✓	
BYD	Han DM General	Airbag III (BYD) (SRSIII)	✓	✓	✓	✓	✓	SP1357-SP1359
BYD	Han DM General	Sunroof Motor (SRM)	✓	✓	✓	✓	✓	
BYD	Han DM General	Front center position light (BYD)	✓	✓	✓	✓	✓	
BYD	Han DM General	Wireless charging module (WCT)/wire	✓	✓	✓	✓	✓	
BYD	Han DM General	Wireless charging module (WCT)/wire	✓	✓	✓	✓	✓	
BYD	Han DM General	Left combination rear light control	✓	✓	✓	✓	✓	
BYD	Han DM General	Right combination rear light contro	✓	✓	✓	✓	✓	
BYD	Han DM General	Left tail light control module (BYD)	✓	✓	✓	✓	✓	
BYD	Han DM General	Right tail light control module (BY	✓	✓	✓	✓	✓	
BYD	Han DM General	Charging port indicator (BYD) (CIL)	✓	✓	✓	✓	✓	
BYD	Han DM General	Ambient light control module (Bai R	✓	✓	✓	✓	✓	
BYD	Han DM General	Panel Ambient Light (Baicom Optics)	✓	✓	✓	✓	✓	
BYD	Han DM General	Left rear window lift motor (Dechar	✓	✓	✓	✓	✓	
BYD	Han DM General	Right rear window lift motor (Decha	✓	✓	✓	✓	✓	
BYD	Han DM General	Electric back door (BYD) (BDECU)	✓	✓	✓	✓	✓	
BYD	Han DM General	Air Conditioning Controller (Valeo)	✓	✓	✓	✓	✓	
BYD	Han DM General	Air Conditioning Compressor (BYD)	✓	✓	✓	✓	✓	
BYD	Han DM General	Rear control panel (BYD) (RCP BYD)	✓	✓	✓	✓	✓	
BYD	Han DM General	Display bracket assembly (BYD) (Pa	✓	✓	✓	✓	✓	
BYD	Han DM General	External power amplifier (BYD) (AMP	✓	✓	✓	✓	✓	
BYD	Han DM General	Multimedia System Android (BYD) (Me	✓	✓	✓	✓	✓	
BYD	Han DM General	Electric string controller (BYD) (E	✓	✓	✓	✓	✓	SP1360
BYD	Han DM General	Left front door controller (KOSTAL)	✓	✓	✓	✓	✓	
BYD	Han DM General	Right front door controller (KOSTAL)	✓	✓	✓	✓	✓	
BYD	Han DM General	Combination Instrument (INS)/Combir	✓	✓	✓	✓	✓	
BYD	Han DM General	Combination Instrument (INS)/Combir	✓	✓	✓	✓	✓	
BYD	Han DM General	Steering wheel switch (BYD) (SWS)	✓	✓	✓	✓	✓	
BYD	Han DM General	Shift control mechanism panel assem	✓	✓	✓	✓	✓	
BYD	Han DM General	Green Clean System (PM2.5)/Green Cl	✓	✓	✓	✓	✓	
BYD	Han DM General	Green Clean System (PM2.5)/Green Cl	✓	✓	✓	✓	✓	
BYD	Han DM General	Main driver seat controller (BYD)	✓	✓	✓	✓	✓	SP1361
BYD	Han DM General	Front passenger seat controller (BY	✓	✓	✓	✓	✓	SP1362-SP1363
BYD	Han DM General	Gateway (BYD)	✓	✓	✓	✓	✓	
BYD	F3DM	Bosch ABS system	✓	✓	✓	✓	✓	SP1364
BYD	F3DM	Airbag system	✓	✓	✓	✓	✓	SP1365-SP1366
BYD	F3DM	Power battery management	✓	✓	✓	✓	✓	
BYD	F3DM	Main control ECU	✓	✓	✓	✓	✓	
BYD	F3DM	M2 electric engine control	✓	✓	✓	✓	✓	
BYD	F3DM	Air conditioning controller	✓	✓	✓	✓	✓	
BYD	F3DM	Air conditioner driver	✓	✓	✓	✓	✓	
BYD	F3DM	DC-DC(12V)	✓	✓	✓	✓	✓	
BYD	F3DM	P file motor controller	✓	✓	✓	✓	✓	
BYD	F3DM	Transmission control	✓	✓	✓	✓	✓	
BYD	F3DM	Car charger	✓	✓	✓	✓	✓	
BYD	F3DM	M1 motor generator control	✓	✓	✓	✓	✓	
BYD	F3DM	Electronic Power Steering (EPS)	✓	✓	✓	✓	✓	
BYD	F3DM	Engine management	✓	✓	✓	✓	✓	
BYD	F3DM	solar power charger	✓	✓	✓	✓	✓	
BYD	F3DM	Engine anti-theft	✓	✓	✓	✓	✓	
BYD	Han EV General	Vehicle Controller (VCU)	✓	✓	✓	✓	✓	SP1367-SP1368
BYD	Han EV General	Battery Manager (BMS)/Battery Manag	✓	✓	✓	✓	✓	SP1369-SP1385
BYD	Han EV General	Battery Manager (BMS)/Battery Manag	✓	✓	✓	✓	✓	SP1386-SP1402
BYD	Han EV General	Battery Manager (BMS)/Battery Manag	✓	✓	✓	✓	✓	SP1403-SP1419
BYD	Han EV General	Battery Manager (BMS)/Battery Manag	✓	✓	✓	✓	✓	SP1420-SP1436
BYD	Han EV General	Low Voltage Battery Management Svst	✓	✓	✓	✓	✓	
BYD	Han EV General	Front Drive Motor Controller (FMCU)	✓	✓	✓	✓	✓	SP1437
BYD	Han EV General	Rear Drive Motor Controller (RMCU)	✓	✓	✓	✓	✓	SP1438
BYD	Han EV General	Gear position actuator (SCU)/gear r	✓	✓	✓	✓	✓	
BYD	Han EV General	Gear position actuator (SCU)/gear r	✓	✓	✓	✓	✓	
BYD	Han EV General	Charging and Distribution Assembly	✓	✓	✓	✓	✓	
BYD	Han EV General	DC voltage detection module (DCVDM)	✓	✓	✓	✓	✓	
BYD	Han EV General	Electric drive charging module (EDC	✓	✓	✓	✓	✓	
BYD	Han EV General	NFC Control Module (NCM)	✓	✓	✓	✓	✓	
BYD	Han EV General	Battery heater (BH)	✓	✓	✓	✓	✓	
BYD	Han EV General	Battery heater (kehole) (BH KEBOLE)	✓	✓	✓	✓	✓	
BYD	Han EV General	DC-DC assembly (DC DC)	✓	✓	✓	✓	✓	SP1439-SP1441
BYD	Han EV General	Electro-hydraulic brake (Bosch) (IP	✓	✓	✓	✓	✓	SP1442-SP1471
BYD	Han EV General	Electric Power Steering (EPS)/Elect	✓	✓	✓	✓	✓	SP1472-SP1477
BYD	Han EV General	Electric Power Steering (EPS)/Elect	✓	✓	✓	✓	✓	SP1478-SP1483
BYD	Han EV General	Tire Pressure Monitoring Module (Se	✓	✓	✓	✓	✓	SP1484-SP1491
BYD	Han EV General	Electronic Parking System (Sark) (E	✓	✓	✓	✓	✓	SP1492-SP1494
BYD	Han EV General	Front millimeter wave radar (Vining)	✓	✓	✓	✓	✓	SP1495-SP1501
BYD	Han EV General	Multi-Function Video Controller (Wi	✓	✓	✓	✓	✓	SP1502-SP1510

BYD	Han EV General	Left front combination lamp (FL L)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Right front combination lamp (FL R)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Left Blind Spot Monitoring (Winning)	✓	✓	✓	✓	✓	✓	SP1511-SP1515
BYD	Han EV General	Monitoring from the blind spot (BYD)	✓	✓	✓	✓	✓	✓	SP1516-SP1518
BYD	Han EV General	Right blind spot monitoring (BSD R)	✓	✓	✓	✓	✓	✓	SP1519-SP1523
BYD	Han EV General	Blind Spot Monitoring (BYD) (BSD)	✓	✓	✓	✓	✓	✓	SP1524-SP1526
BYD	Han EV General	Main driver's electric pre-tensions	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Co-pilot electric pre-tensioned seat	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Wireless charging module (Lin'an Ti)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Airbag Three Generation (SRS III)	✓	✓	✓	✓	✓	✓	SP1527-SP1529
BYD	Han EV General	Body Controller (IBCMB)/Integrated	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Body Controller (IBCMB)/Integrated	✓	✓	✓	✓	✓	✓	SP1530-SP1541
BYD	Han EV General	Combination Instrument (INS)/Combin	✓	✓	✓	✓	✓	✓	SP1542-SP1680
BYD	Han EV General	Combination Instrument (INS)/Combin	✓	✓	✓	✓	✓	✓	SP1681-SP1819
BYD	Han EV General	Combination Instrument (INS)/Combin	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Combination switch (Kstar) (CS)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Wireless charging module (Beijing Y)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Hidden front left door handle (DHCL)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Hidden rear left door handle (DHCUZ)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Right front hidden door handle (DHC)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Hidden rear right door handle (DHCL)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Left combination rear light control	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Left tail light control module (TL)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Right tail light control module (TR)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Charging port indicator (CIL)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Ambient light control module (Bai K)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Panel Ambient Light (Bai Kang Optic)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Door multiple controller (Yangtze R)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Front center position light (BYD)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Sunroof Motor (SRM)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Left rear window lift motor (Dechar)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Right rear window lift motor (Decha)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Electric back door (BYD) (BDECU)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Left front door controller (KSD) (L)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Right front door controller (KSD) (R)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Electric String Controller (PTECU)	✓	✓	✓	✓	✓	✓	SP1820
BYD	Han EV General	Steering wheel switch (BYD) (SWS)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Shift control mechanism panel assem	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Air Conditioning Compressor (ACC)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Auxiliary heating (PTC)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Display bracket assembly (PH)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	External power amplifier (AMP)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Automatic parking (Desav SV) (IPA)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Multimedia System Android (Media)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Green Clean System (Meximec) (PM2.5)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Green Clean System (BYD) (PM2.5)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Rear control panel (RCP)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Rear center armrest LCD screen (RH)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Left rear seat massage (Hebei Anwe)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Right rear seat massage (Hebei Anwe)	✓	✓	✓	✓	✓	✓	
BYD	Han EV General	Main driver seat controller (BYD)	✓	✓	✓	✓	✓	✓	SP1821
BYD	Han EV General	Front passenger seat controller (BY)	✓	✓	✓	✓	✓	✓	SP1822-SP1823
BYD	Han EV General	Rear seat controller (BYD) (SECU RL)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Main Controller (ACU)	✓	✓	✓	✓	✓	✓	SP1824-SP1827
BYD	Qin EV/Qin EV General	Battery Pack Data (BPD)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Battery Management System (BMS)	✓	✓	✓	✓	✓	✓	SP1828-SP1830
BYD	Qin EV/Qin EV General	Low Voltage Battery Management Svst	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Battery Collector (BIC)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Combination Instrument (INS)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Active Bleeding Controller (BPCM)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	DC-DC assembly (DC-DC)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Gear Controller (GCM)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Leakage Sensor (LS)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Mode switch (MS)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	On-board charger (OBC)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	VTOG Charge (VTOG C)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	VTOG Drive (VTOG D)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	VTOG mode (VTOG M)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	VTOG DSP2(VTOG DSP2)	✓	✓	✓	✓	✓	✓	SP1831
BYD	Qin EV/Qin EV General	Electronic Body Stability System (E	✓	✓	✓	✓	✓	✓	SP1832-SP1837
BYD	Qin EV/Qin EV General	Power Steering (EPS)	✓	✓	✓	✓	✓	✓	SP1838-SP1841
BYD	Qin EV/Qin EV General	Electronic Parking System (EPB)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Body Controller (BCM)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Steering shaft lock (ECL)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Intelligent Key (IKey)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Airbag (SRS)	✓	✓	✓	✓	✓	✓	SP1842-SP1843
BYD	Qin EV/Qin EV General	Air Conditioning Controller (ACB)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Air Conditioning Compressor Control	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Air Conditioning Control Panel (ACC)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Tire Pressure Management Module (TP	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Battery Cooling Controller (BCC)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Combination switch (CS)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Co-pilot ventilation heating switch	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Cloud Service System (DCM)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Front left gate (DCU FL)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Right front door control (DCU FR)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Door multiple controller (DMCU)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Panoramic Video (FVC)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Panoramic Steering Wheel Switch (SH	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Information Station (IS)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Multimedia	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Multimedia Panel (M P)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Parking Assist System (PAS)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Green Clean System (PM2.5)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Air conditioning water heater (PTC)	✓	✓	✓	✓	✓	✓	
BYD	Qin EV/Qin EV General	Electric steering column (PTECU)	✓	✓	✓	✓	✓	✓	SP1844

BYD	Qin EV/Qin EV General	Front compartment power distributic	√	√	√	√	√	√	
BYD	Qin EV/Qin EV General	Main driving seat system (SECU D)	√	√	√	√	√	√	SP1845
BYD	Qin EV/Qin EV General	Switch group No. 1 (SWITCH 1)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV General	Engine Sound Simulator (AVAS)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV General	Vehicle terminal (VT)	√						
BYD	Qin EV/Qin EV General	4G communication module (4G)	√						
BYD	Qin EV/Qin EV General	Driving Recorder (VTDR)	√						
BYD	Qin EV/Qin EV General	Gateway (GW)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Main Controller (ACU)	√	√	√	√	√	√	SP1846-SP1849
BYD	Qin EV/Qin EV 17 general models	Battery Collector (BIC)	√						
BYD	Qin EV/Qin EV 17 general models	Battery Management System (BMS)	√	√	√	√	√	√	SP1850-SP1853
BYD	Qin EV/Qin EV 17 general models	Combination Instrument (INS)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Active Bleeding Controller (BPCM)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	DC-DC assembly (DC-DC)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Gear Controller (SCU)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Low Voltage Battery Management Syst	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	On-board charger (OBC)/on-board cha	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	On-board charger (OBC)/on-board cha	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	VTOG Charge (VTOG C)	√						
BYD	Qin EV/Qin EV 17 general models	VTOG Drive (VTOG D)	√						
BYD	Qin EV/Qin EV 17 general models	VTOG mode (VTOG M)	√						
BYD	Qin EV/Qin EV 17 general models	VTOG DSP2(VTOG DSP2)/VTOG DSP2(VTOG	√	√	√	√	√	√	SP1854
BYD	Qin EV/Qin EV 17 general models	VTOG DSP2(VTOG DSP2)/VTOG DSP2 shor	√	√	√	√	√	√	SP1855-SP1857
BYD	Qin EV/Qin EV 17 general models	Leakage Sensor (LS)	√						
BYD	Qin EV/Qin EV 17 general models	Mode switch (MS)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Electronic Body Stability System (E	√	√	√	√	√	√	SP1858-SP1863
BYD	Qin EV/Qin EV 17 general models	Power Steering (EPS)	√	√	√	√	√	√	SP1864-SP1867
BYD	Qin EV/Qin EV 17 general models	Electronic parking (EPB)/Electronic	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Electronic parking (EPB)/Electronic	√	√	√	√	√	√	SP1868
BYD	Qin EV/Qin EV 17 general models	Adaptive Cruise System (MRR)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Body Controller (BCM)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Steering shaft lock (ECL)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Intelligent Key (IKey)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Airbag (SRS)	√	√	√	√	√	√	SP1869-SP1870
BYD	Qin EV/Qin EV 17 general models	Air Conditioning Controller (ACB)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Cruise switch (ACCS)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Air Conditioning Compressor (ACC)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Tire Pressure Management Module (TP	√	√	√	√	√	√	SP1871-SP1874
BYD	Qin EV/Qin EV 17 general models	Tire Pressure Management Module (TP	√	√	√	√	√	√	SP1875-SP1878
BYD	Qin EV/Qin EV 17 general models	Tire Pressure Management Module (TP	√	√	√	√	√	√	SP1879-SP1882
BYD	Qin EV/Qin EV 17 general models	Engine Sound Simulator (AVAS)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Battery Cooling Controller (BCC)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Battery heater (BH)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Combination switch (CS)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Front left gate (DCU FL)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Right front door control (DCU FR)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Door multiple controller (DMCU)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Panoramic image (FV)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Inside rearview mirror (IRVM)	√						
BYD	Qin EV/Qin EV 17 general models	Multimedia Power (MBC)	√						
BYD	Qin EV/Qin EV 17 general models	Multimedia	√						
BYD	Qin EV/Qin EV 17 general models	Multimedia Panel (M P)	√						
BYD	Qin EV/Qin EV 17 general models	Parking Assist System (PAS)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Green Clean System (PM2.5)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Air conditioning water heater (PTC)	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Electric steering column (PTECU)	√	√	√	√	√	√	SP1883
BYD	Qin EV/Qin EV 17 general models	Front compartment power distributic	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Main driver's seat adjustment switc	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Front passenger seat adjustment swi	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Main driving seat system (SECU001)	√	√	√	√	√	√	SP1884
BYD	Qin EV/Qin EV 17 general models	Front passenger seat system (SECU00	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Panoramic Steering Wheel Switch (SM	√	√	√	√	√	√	
BYD	Qin EV/Qin EV 17 general models	Driving Recorder (VTDR)	√						
BYD	Qin EV/Qin EV 17 general models	4G communication module (4G)	√						
BYD	Qin EV/Qin EV 17 general models	Gateway (GW)	√	√	√	√	√	√	
BYD	Qin EV/Qin Pro EV General	Vehicle Controller (VCU)	√	√	√	√	√	√	SP1885-SP1889
BYD	Qin EV/Qin Pro EV General	Battery Pack Data (BPD)	√						
BYD	Qin EV/Qin Pro EV General	Battery Manager (BMS)/Ternary Batta	√	√	√	√	√	√	SP1890-SP1892
BYD	Qin EV/Qin Pro EV General	Battery Manager (BMS)/Ternary Batta	√	√	√	√	√	√	SP1893-SP1899
BYD	Qin EV/Qin Pro EV General	Battery Manager (BMS)/Ternary Batta	√	√	√	√	√	√	SP1900-SP1906
BYD	Qin EV/Qin Pro EV General	Battery Manager (BMS)/Battery Manag	√	√	√	√	√	√	SP1907-SP1923
BYD	Qin EV/Qin Pro EV General	Battery Manager (BMS)/Battery Manag	√	√	√	√	√	√	SP1924-SP1940
BYD	Qin EV/Qin Pro EV General	Low Voltage Battery Management Svst	√	√	√	√	√	√	
BYD	Qin EV/Qin Pro EV General	On-board charger (OBC)	√	√	√	√	√	√	
BYD	Qin EV/Qin Pro EV General	Leakage Sensor (LS)	√	√	√	√	√	√	
BYD	Qin EV/Qin Pro EV General	Front Drive Motor Controller (FMCU)	√	√	√	√	√	√	SP1941
BYD	Qin EV/Qin Pro EV General	DC-DC assembly (DC-DC)	√	√	√	√	√	√	
BYD	Qin EV/Qin Pro EV General	Battery heater (BH)	√	√	√	√	√	√	
BYD	Qin EV/Qin Pro EV General	Battery Collector (BIC)	√						
BYD	Qin EV/Qin Pro EV General	Charging and Distribution Assembly	√	√	√	√	√	√	SP1942
BYD	Qin EV/Qin Pro EV General	Boost DC (DC)	√	√	√	√	√	√	
BYD	Qin EV/Qin Pro EV General	Gear position sensor (SCU)	√	√	√	√	√	√	
BYD	Qin EV/Qin Pro EV General	Electronic Body Stability System (E	√	√	√	√	√	√	SP1943-SP1959
BYD	Qin EV/Qin Pro EV General	Electric Power Steering (EPS)/Elect	√	√	√	√	√	√	SP1960-SP1970
BYD	Qin EV/Qin Pro EV General	Electric Power Steering (EPS)/Elect	√	√	√	√	√	√	SP1971
BYD	Qin EV/Qin Pro EV General	Electric Power Steering (EPS)/Elect	√	√	√	√	√	√	SP1972
BYD	Qin EV/Qin Pro EV General	Tire Pressure Management Module (Se	√	√	√	√	√	√	SP1973-SP1976
BYD	Qin EV/Qin Pro EV General	Electronic Parking System (Sark) (E	√	√	√	√	√	√	SP1977-SP1980
BYD	Qin EV/Qin Pro EV General	Steering wheel angle sensor (SWAS)	√	√	√	√	√	√	SP1981-SP1982
BYD	Qin EV/Qin Pro EV General	Blind Spot Detection (BSD)	√	√	√	√	√	√	SP1983-SP1986
BYD	Qin EV/Qin Pro EV General	Multi-Function Video Controller (MF	√	√	√	√	√	√	SP1987-SP1991
BYD	Qin EV/Qin Pro EV General	Adaptive Cruise System (MRR)	√	√	√	√	√	√	SP1992-SP1994
BYD	Qin EV/Qin Pro EV General	Electro-hydraulic brake (Bosch) (IF	√	√	√	√	√	√	SP1995-SP2023
BYD	Qin EV/Qin Pro EV General	Shift control panel assembly (SCPA)	√	√	√	√	√	√	
BYD	Qin EV/Qin Pro EV General	Body Controller (BCM)	√	√	√	√	√	√	
BYD	Qin EV/Qin Pro EV General	Body Controller No. 2 (BCM 2)	√	√	√	√	√	√	

BYD	Qin EV/Qin Pro EV General	Steering shaft lock (ECL)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Intelligent Key (IKey)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Airbag (SRS)/Airbag (new) (SRS)	√	√	√	√	√	√		SP2024
BYD	Qin EV/Qin Pro EV General	Airbag (SRS)/Airbag (SRS)	√	√	√	√	√	√		SP2025-SP2026
BYD	Qin EV/Qin Pro EV General	Combination Instrument (INS)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Air Conditioning Controller (ACB)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Air Conditioning Compressor (ACC)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Fuel heater (FHM)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Engine Sound Simulator (AVAS)/Engir	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Engine Sound Simulator (AVAS)/Engir	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Multimedia control panel switch grc	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Multimedia (Android version) (Media	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Green Clean System (PM2.5)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Auxiliary heating (PTC)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Front left gate (DCU FL)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Right front door control (DCU FR)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Inside rearview mirror (IRVM)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Main driving seat system (SECU D)	√	√	√	√	√	√		SP2027
BYD	Qin EV/Qin Pro EV General	Front passenger seat system (SECU P	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Parking Assist System (PAS)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Multi-function display (MDS)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Display bracket assembly (PH)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	4G communication module (4G)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Door multiple controller (DMCU)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Panoramic image (FV)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Sunroof Controller (SRM)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Panoramic Steering Wheel Switch (SM	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Driving Recorder (VTDR)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	External power amplifier (AMP)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	NFC Control Module (NCM)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Center Console Switch Group (CCS)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Wireless charging (WCT)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Water assisted heating (PTC)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Wind assisted heating (PTC)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Combination switch (Kstar) (CS)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Integrated body controller A (IBCMA	√	√	√	√	√	√		SP2028-SP2029
BYD	Qin EV/Qin Pro EV General	Multimedia Power (MBC)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Gateway (GW)/Gateway (GW)	√	√	√	√	√	√		
BYD	Qin EV/Qin Pro EV General	Gateway (GW)/SafeGateway (SafeGaten	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Vehicle Controller (DD VCU)	√	√	√	√	√	√		SP2030-SP2032
BYD	Qin EV/New Qin EV General	Battery Manager (BMS)/Battery Manag	√	√	√	√	√	√		SP2033-SP2038
BYD	Qin EV/New Qin EV General	Battery Manager (BMS)/Battery Manag	√	√	√	√	√	√		SP2039-SP2045
BYD	Qin EV/New Qin EV General	Battery Manager (BMS)/Battery Manag	√	√	√	√	√	√		SP2046-SP2047
BYD	Qin EV/New Qin EV General	Battery Manager (BMS)/Battery Manag	√	√	√	√	√	√		SP2048-SP2049
BYD	Qin EV/New Qin EV General	Low voltage battery manager (DD LBM	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Car charger (DD OBC)	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Wheel Anti-lock Braking System (ABS	√	√	√	√	√	√		SP2050-SP2056
BYD	Qin EV/New Qin EV General	Combination instrument (Xintongda)	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Gear position sensor (DD SCU)	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Battery Collector (BIC)	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Front drive motor controller (DD FM	√	√	√	√	√	√		SP2057
BYD	Qin EV/New Qin EV General	DC-DC assembly (DC DC)	√	√	√	√	√	√		SP2058-SP2060
BYD	Qin EV/New Qin EV General	Leakage Sensor (DD LS)	√	√	√	√	√	√		SP2061
BYD	Qin EV/New Qin EV General	Electronic body stability system/el	√	√	√	√	√	√		SP2062-SP2088
BYD	Qin EV/New Qin EV General	Electronic body stability system/el	√	√	√	√	√	√		SP2089-SP2097
BYD	Qin EV/New Qin EV General	Electric Power Steering (Yubei) (BE	√	√	√	√	√	√		SP2098
BYD	Qin EV/New Qin EV General	Tire Pressure Monitoring Module (TP	√	√	√	√	√	√		SP2099-SP2102
BYD	Qin EV/New Qin EV General	Tire Pressure Monitoring Module (TP	√	√	√	√	√	√		SP2103-SP2110
BYD	Qin EV/New Qin EV General	Electronic parking (Sark) (BE EPB)	√	√	√	√	√	√		SP2111-SP2113
BYD	Qin EV/New Qin EV General	Security System (BYD) (BSC)	√	√	√	√	√	√		SP2114-SP2134
BYD	Qin EV/New Qin EV General	Body Controller (BCM)	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Intelligent Key (IKey)	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Airbag (third generation) (SRS)	√	√	√	√	√	√		SP2135
BYD	Qin EV/New Qin EV General	Integrated body controller A (BCM)	√	√	√	√	√	√		SP2136-SP2137
BYD	Qin EV/New Qin EV General	Air Conditioning Controller (ACB)/A	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Air Conditioning Controller (ACB)/A	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	NFC Control Module (NCM)	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	4G (4G)	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Shift control panel assembly (BYD)	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Auxiliary heating (HuaGongGoli) (PT	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Auxiliary heating slave (HuaGongGor	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Parking Assist System (Huan) (PAS)	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Parking Assist System (Chongqing Ex	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Combination switch (Kstar) (CS)	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Door multiple controller (DMCU)	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Radio	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Multimedia host (Android) (Media)	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Steering Wheel Switch (SWS)	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Wind heating PTC (PTC)	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Electric Compressor (ACC)	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Air conditioning compressor (Nanjir	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Center console switch group (Yangtz	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Display bracket assembly (PH)	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Built-in power amplifier BSP (IAMP)	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Fuel heater (FHM)	√	√	√	√	√	√		
BYD	Qin EV/New Qin EV General	Gateway (GW)	√	√	√	√	√	√		
BYD	Qin EV/Qin PLUS EV general	Combination switch (KOSTAL) (CS KOS	√	√	√	√	√	√		
BYD	Qin EV/Qin PLUS EV general	Steering wheel switch (BYD) (SWS)	√	√	√	√	√	√		
BYD	Qin EV/Qin PLUS EV general	Green Clean System (PM2.5)/Green Cl	√	√	√	√	√	√		
BYD	Qin EV/Qin PLUS EV general	Green Clean System (PM2.5)/Green Cl	√	√	√	√	√	√		
BYD	Qin EV/Qin PLUS EV general	Wireless charging module (WCT)/wire	√	√	√	√	√	√		
BYD	Qin EV/Qin PLUS EV general	Wireless charging module (WCT)/wire	√	√	√	√	√	√		
BYD	Qin EV/Qin PLUS EV general	Display bracket assembly (BYD) (Pac	√	√	√	√	√	√		
BYD	Qin EV/Qin PLUS EV general	Lamp holder for left ambient light	√	√	√	√	√	√		
BYD	Qin EV/Qin PLUS EV general	Dashboard right atmosphere lamp left	√	√	√	√	√	√		
BYD	Qin EV/Qin PLUS EV general	Right lamp holder of dashboard right	√	√	√	√	√	√		

BYD	Song EV/Song EV General	Tire Pressure Management Module (TPM)	√	√	√	√	√	√	SP2437-SP2440
BYD	Song EV/Song EV General	Tire Pressure Management Module (TPM)	√	√	√	√	√	√	SP2441-SP2444
BYD	Song EV/Song EV General	Tire Pressure Management Module (TPM)	√	√	√	√	√	√	SP2445-SP2448
BYD	Song EV/Song EV General	External power amplifier (AMP)	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Battery Cooling Controller (BCC)	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Battery heater (BH)	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Electric Back Door (BDECU)	√	√	√	√	√	√	SP2449
BYD	Song EV/Song EV General	Center Console Switch Group (CCS)	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Combination switch (CS)	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Front left gate (DCU FL)	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Right front door control (DCU FR)	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Door multiple controller (DMCU)	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Panoramic Video (FVC)	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Inside rearview mirror (IRVM)	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Multimedia Power (MBC)	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Multimedia	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Multimedia Panel (M P)	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Display bracket assembly (PH)	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Parking Assist System (PAS)	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Green Clean System (PM2.5)	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Air conditioning water heater (PTC)	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Electric steering column (PTECU)	√	√	√	√	√	√	SP2450
BYD	Song EV/Song EV General	Front compartment power distributio	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Main driver's seat adjustment switc	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Front passenger seat adjustment swi	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Main driving seat system (SECU D)	√	√	√	√	√	√	SP2451
BYD	Song EV/Song EV General	Front passenger seat system (SECU F	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Panoramic Steering Wheel Switch (SH	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Engine Sound Simulator (VSP)	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Driving Recorder (VTDR)	√	√	√	√	√	√	
BYD	Song EV/Song EV General	4G communication module (4G)	√	√	√	√	√	√	
BYD	Song EV/Song EV General	Gateway (GW)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Vehicle Controller (VCU)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Main Controller (ACU)	√	√	√	√	√	√	SP2452-SP2454
BYD	Song EV/Song EV 4WD Universal	Battery Management System (BMS)	√	√	√	√	√	√	SP2455-SP2456
BYD	Song EV/Song EV 4WD Universal	Battery Collector (BIC)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	On-board charger (OBC)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Combination Instrument (INS)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Active Bleeding Controller (BPCM)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	DC-DC assembly (DC-DC)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Gear Controller (GCM)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Low Voltage Battery Management Syst	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Leakage Sensor (LS)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Mode switch (MS)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Rear Drive Motor Controller (RMCU)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Two-way inverter charge and dischar	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	VTOG Drive (VTOG D)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	VTOG mode (VTOG M)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	VTOG DSP2(VTOG DSP2)	√	√	√	√	√	√	SP2457
BYD	Song EV/Song EV 4WD Universal	Electronic Body Stability System (E	√	√	√	√	√	√	SP2458-SP2463
BYD	Song EV/Song EV 4WD Universal	Electronic Power Steering (EPS)	√	√	√	√	√	√	SP2464-SP2465
BYD	Song EV/Song EV 4WD Universal	Electronic Parking System (Sark) (E	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Body Controller (BCM)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Steering shaft lock (ECL)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Intelligent Key (Ikey)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Airbag Three Generation (SRS III)	√	√	√	√	√	√	SP2466-SP2467
BYD	Song EV/Song EV 4WD Universal	Air Conditioning Controller (ACB)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Air Conditioning Control Panel (ACC	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Air Conditioning Compressor Control	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Tire Pressure Management Module (TP	√	√	√	√	√	√	SP2468-SP2471
BYD	Song EV/Song EV 4WD Universal	Tire Pressure Management Module (TP	√	√	√	√	√	√	SP2472-SP2475
BYD	Song EV/Song EV 4WD Universal	Tire Pressure Management Module (TP	√	√	√	√	√	√	SP2476-SP2479
BYD	Song EV/Song EV 4WD Universal	Engine Sound Simulator (AVAS)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Left front door control module (DCU	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Right front door control module (DC	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Door multiple controller (DMCU)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Panoramic Video (FVC)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Panoramic Steering Wheel Switch (SH	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Information Station (IS)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Multimedia	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Multimedia Panel (M P)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Green Clean System (PM2.5)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Air conditioning heater (PTC)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Parking Assist System (PAS)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Vehicle terminal (VT)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Driving Recorder (VTDR)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Combination switch (CS)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Relay Controller (RCM)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Main driver's seat adjustment switc	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Front passenger seat adjustment swi	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Main driving seat system (SECU Z)	√	√	√	√	√	√	SP2480
BYD	Song EV/Song EV 4WD Universal	Front passenger seat system (SECU F	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Electric steering column (PTECU)	√	√	√	√	√	√	SP2481
BYD	Song EV/Song EV 4WD Universal	Kick ECU (EOS)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Electric Back Door (BDECU)	√	√	√	√	√	√	SP2482
BYD	Song EV/Song EV 4WD Universal	4G communication module (4G)	√	√	√	√	√	√	
BYD	Song EV/Song EV 4WD Universal	Gateway (GW)	√	√	√	√	√	√	
BYD	Song EV/Song MAX EV General	Vehicle Controller (VCU)	√	√	√	√	√	√	SP2483-SP2487
BYD	Song EV/Song MAX EV General	Battery Manager (BMS)/Ternary Batte	√	√	√	√	√	√	SP2488-SP2495
BYD	Song EV/Song MAX EV General	Battery Manager (BMS)/Ternary Batte	√	√	√	√	√	√	SP2496-SP2503
BYD	Song EV/Song MAX EV General	Battery Manager (BMS)/Ternary Batte	√	√	√	√	√	√	SP2504-SP2511
BYD	Song EV/Song MAX EV General	Battery Manager (BMS)/Power Battery	√	√	√	√	√	√	SP2512-SP2519
BYD	Song EV/Song MAX EV General	Battery Manager (BMS)/Battery Manag	√	√	√	√	√	√	SP2520-SP2537
BYD	Song EV/Song MAX EV General	Low Voltage Battery Management Syst	√	√	√	√	√	√	
BYD	Song EV/Song MAX EV General	Combination Instrument (INS)	√	√	√	√	√	√	
BYD	Song EV/Song MAX EV General	On-board charger (OBC)/on-board cha	√	√	√	√	√	√	

BYD	Song EV/Song MAX EV General	Car charger (OBC)/car charger main	✓	✓	✓	✓		
BYD	Song EV/Song MAX EV General	Car Charger (OBC)/Car Charger PFC1	✓					
BYD	Song EV/Song MAX EV General	Car Charger (OBC)/Car Charger LLC1	✓					
BYD	Song EV/Song MAX EV General	Car Charger (OBC)/Car Charger PFC2	✓					
BYD	Song EV/Song MAX EV General	Car Charger (OBC)/Car Charger LLC2	✓					
BYD	Song EV/Song MAX EV General	Three-in-one charging and distribut	✓	✓	✓	✓		SP2538
BYD	Song EV/Song MAX EV General	Leakage Sensor (LS)	✓	✓	✓	✓		SP2539
BYD	Song EV/Song MAX EV General	Front Drive Motor Controller (FMCU)	✓	✓	✓	✓		SP2540
BYD	Song EV/Song MAX EV General	Gear position sensor (SCU)	✓	✓	✓	✓		
BYD	Song EV/Song MAX EV General	Battery heater (BH)	✓	✓	✓	✓		
BYD	Song EV/Song MAX EV General	Battery Collector (BIC)	✓					
BYD	Song EV/Song MAX EV General	Boost DC (DC)	✓	✓	✓	✓		
BYD	Song EV/Song MAX EV General	Steering wheel angle sensor (Kstar)	✓	✓	✓	✓		
BYD	Song EV/Song MAX EV General	DC voltage detection module (DCVDM)	✓	✓	✓	✓		
BYD	Song EV/Song MAX EV General	Electric drive charging module (EDC)	✓	✓	✓	✓		
BYD	Song EV/Song MAX EV General	DC-DC assembly (DC-DC)	✓	✓	✓	✓		
BYD	Song EV/Song MAX EV General	Electronic Body Stability System (E	✓	✓	✓	✓		SP2541-SP2553
BYD	Song EV/Song MAX EV General	Power Steering (TRW) (EPS)	✓	✓	✓	✓		SP2554-SP2559
BYD	Song EV/Song MAX EV General	Tire Pressure Management Module (TP	✓	✓	✓	✓	✓	SP2560-SP2567
BYD	Song EV/Song MAX EV General	Tire Pressure Management Module (TP	✓	✓	✓	✓	✓	SP2568-SP2571
BYD	Song EV/Song MAX EV General	Electronic Parking System (EPB)	✓	✓	✓	✓	✓	SP2572-SP2578
BYD	Song EV/Song MAX EV General	Multi-Function Video Controller (MF	✓	✓	✓	✓	✓	SP2579-SP2583
BYD	Song EV/Song MAX EV General	Adaptive Cruise (MRR)	✓	✓	✓	✓	✓	SP2584-SP2587
BYD	Song EV/Song MAX EV General	Blind Spot Monitoring (Hello) (BSD)	✓	✓	✓	✓	✓	SP2588-SP2589
BYD	Song EV/Song MAX EV General	Electric Liquid Making (Bosch) (LPE	✓	✓	✓	✓	✓	SP2590-SP2621
BYD	Song EV/Song MAX EV General	Body Controller (BCM)	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Intelligent Key (IKey)	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Airbag (SRS)/Airbag (SRS)	✓	✓	✓	✓	✓	SP2622-SP2623
BYD	Song EV/Song MAX EV General	Airbag (SRS)/Airbag (new) (SRS)	✓	✓	✓	✓	✓	SP2624-SP2626
BYD	Song EV/Song MAX EV General	Integrated body controller B1 (IBCM)	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Integrated body controller B2 (IBCM)	✓	✓	✓	✓	✓	SP2627-SP2638
BYD	Song EV/Song MAX EV General	Air Conditioning Controller (ACB)	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Air Conditioning Compressor (ACC)	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Rear automatic air conditioning co	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Front automatic air conditioning co	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Sunroof Controller (SRM)	✓					
BYD	Song EV/Song MAX EV General	Radio	✓					
BYD	Song EV/Song MAX EV General	Fuel heater (FHM)	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	NFC Control Module (NCM)	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Parking Assist System (PAS)	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Left front combination lamp (FL L)	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Right front combination lamp (FL R)	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Electric back door (BD ECU)	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Main driving seat (SECU001)	✓	✓	✓	✓	✓	SP2639
BYD	Song EV/Song MAX EV General	Front passenger seat (SECU002)	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Combination switch (CS)/Combinatio	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Combination switch (CS)/Combinatio	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Door Multiplex Controller (DMCU)/Dc	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Door multi-channel controller (DMCU)	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Main driver's seat adjustment switc	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Front passenger seat adjustment swi	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Wireless charging module (Beijing V	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Front left gate (DCU FL)	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Right front door control (DCU FR)	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Sunshade Controller (SSM)	✓					
BYD	Song EV/Song MAX EV General	Multimedia	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	4G (4G)	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	External power amplifier (AMP)	✓					
BYD	Song EV/Song MAX EV General	Multimedia Control Panel Switch Gro	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Steering Wheel Switch (SWS)	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Engine Sound Simulator (AVAS)/Engin	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Engine Sound Simulator (AVAS)/Engin	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Engine Sound Simulator (AVAS)/Engin	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Driving Recorder (VTDR)	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Panorama (FVC)	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Multimedia Power (MBC)	✓					
BYD	Song EV/Song MAX EV General	Display bracket assembly (PH)	✓					
BYD	Song EV/Song MAX EV General	Inside rearview mirror (IRVM)	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Multimedia Panel (M P)	✓					
BYD	Song EV/Song MAX EV General	Auxiliary heating (PTC)	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	PM2.5 Green Clean System (PM2.5)	✓	✓	✓	✓	✓	
BYD	Song EV/Song MAX EV General	Gateway (GW)	✓	✓	✓	✓	✓	
BYD	Song EV/Song Pro EV	Charging and Distribution Assembly	✓	✓	✓	✓	✓	SP2640
BYD	Song EV/Song Pro EV	Low Voltage Battery Management Syst	✓	✓	✓	✓	✓	
BYD	Song EV/Song Pro EV	Vehicle Controller (VCU)	✓	✓	✓	✓	✓	SP2641-SP2645
BYD	Song EV/Song Pro EV	Front Drive Motor Controller (FMCU)	✓	✓	✓	✓	✓	SP2646
BYD	Song EV/Song Pro EV	Battery heater (BH)	✓	✓	✓	✓	✓	
BYD	Song EV/Song Pro EV	Battery Management System (BMS)/Bat	✓	✓	✓	✓	✓	SP2647-SP2654
BYD	Song EV/Song Pro EV	Battery Management System (BMS)/Bat	✓	✓	✓	✓	✓	SP2655-SP2662
BYD	Song EV/Song Pro EV	Battery Collector (BIC)	✓					
BYD	Song EV/Song Pro EV	Combination Instrument (Desai) (INS	✓	✓	✓	✓	✓	
BYD	Song EV/Song Pro EV	Boost DC (DC)	✓	✓	✓	✓	✓	
BYD	Song EV/Song Pro EV	Blind Spot Monitoring (BSD001)	✓	✓	✓	✓	✓	SP2663-SP2664
BYD	Song EV/Song Pro EV	Gear actuator (Ningbo Gaofa) (SCU N	✓	✓	✓	✓	✓	
BYD	Song EV/Song Pro EV	Airbag (Autoliv) (SRS)	✓	✓	✓	✓	✓	SP2665
BYD	Song EV/Song Pro EV	Electronic Body Stability System (E	✓	✓	✓	✓	✓	SP2666-SP2676
BYD	Song EV/Song Pro EV	Power Steering (EPS)	✓	✓	✓	✓	✓	SP2677-SP2687
BYD	Song EV/Song Pro EV	Tire Pressure Management Module (TP	✓	✓	✓	✓	✓	SP2688-SP2695
BYD	Song EV/Song Pro EV	Tire Pressure Management Module (TP	✓	✓	✓	✓	✓	SP2696-SP2703
BYD	Song EV/Song Pro EV	Tire Pressure Management Module (TP	✓	✓	✓	✓	✓	SP2704-SP2711
BYD	Song EV/Song Pro EV	Electronic Parking (Sark) (EPB)	✓	✓	✓	✓	✓	
BYD	Song EV/Song Pro EV	Gear position actuator (SCU)/gear r	✓	✓	✓	✓	✓	
BYD	Song EV/Song Pro EV	Gear position actuator (SCU)/gear r	✓	✓	✓	✓	✓	
BYD	Song EV/Song Pro EV	Adaptive Cruise System (MRR)	✓	✓	✓	✓	✓	SP2712-SP2714
BYD	Song EV/Song Pro EV	Multi-Function Video Controller (MF	✓	✓	✓	✓	✓	SP2715-SP2719
BYD	Song EV/Song Pro EV	Steering wheel angle sensor (KSD)	✓	✓	✓	✓	✓	

BYD	Song EV/Song Pro EV	Blind Spot Monitoring (Hella) (BSD)	✓	✓	✓	✓			SP2720
BYD	Song EV/Song Pro EV	Monitoring from the blind spot (BSI)	✓	✓	✓	✓			SP2721-SP2722
BYD	Song EV/Song Pro EV	Steering shaft lock (ECL)	✓	✓	✓	✓			
BYD	Song EV/Song Pro EV	Body Controller (BCM)/Body Control	✓	✓	✓	✓			✓
BYD	Song EV/Song Pro EV	Body Controller (BCM)/Body Control	✓	✓	✓	✓			✓
BYD	Song EV/Song Pro EV	Intelligent Key (IKey)	✓	✓	✓	✓			✓
BYD	Song EV/Song Pro EV	Body Controller No. 2 (BCM 2)	✓	✓	✓	✓			✓
BYD	Song EV/Song Pro EV	Sunroof Controller (BYD) (SRM)	✓	✓	✓	✓			
BYD	Song EV/Song Pro EV	Electric back door (BYD) (BDECU)	✓	✓	✓	✓			✓
BYD	Song EV/Song Pro EV	Air Conditioning Compressor Control	✓	✓	✓	✓			✓
BYD	Song EV/Song Pro EV	Air Conditioning Controller (ACB)	✓	✓	✓	✓			✓
BYD	Song EV/Song Pro EV	NFC Control Module (NCM)	✓	✓	✓	✓			
BYD	Song EV/Song Pro EV	Green Clean System (Meximec) (PM2.5)	✓	✓	✓	✓			
BYD	Song EV/Song Pro EV	Engine Sound Simulator (AVAS)/Engin	✓	✓	✓	✓			✓
BYD	Song EV/Song Pro EV	Engine Sound Simulator (AVAS)/Engin	✓	✓	✓	✓			✓
BYD	Song EV/Song Pro EV	Parking Assist System (PAS)/Parking	✓	✓	✓	✓			
BYD	Song EV/Song Pro EV	Parking Assist System (PAS)/Parking	✓	✓	✓	✓			
BYD	Song EV/Song Pro EV	Main driver's seat (SECU D)	✓	✓	✓	✓			SP2723
BYD	Song EV/Song Pro EV	Front left gate (DCU FL)	✓	✓	✓	✓			✓
BYD	Song EV/Song Pro EV	Right front door control (DCU FR)	✓	✓	✓	✓			✓
BYD	Song EV/Song Pro EV	Door multiple controller (DMCU)	✓	✓	✓	✓			✓
BYD	Song EV/Song Pro EV	Combination switch (KSD) (CS)	✓	✓	✓	✓			✓
BYD	Song EV/Song Pro EV	Sunroof Controller (Inalfa) (SRM)	✓	✓	✓	✓			
BYD	Song EV/Song Pro EV	Wireless charging (Beijing Yougan)	✓	✓	✓	✓			
BYD	Song EV/Song Pro EV	Electric Back Door (Magna) (BDECU)	✓	✓	✓	✓			✓
BYD	Song EV/Song Pro EV	Multimedia Power (MBC)	✓	✓	✓	✓			
BYD	Song EV/Song Pro EV	Multimedia System Android (BYD) (Me	✓	✓	✓	✓			
BYD	Song EV/Song Pro EV	External power amplifier (AMP)	✓	✓	✓	✓			
BYD	Song EV/Song Pro EV	Panoramic steering wheel switch (At	✓	✓	✓	✓			✓
BYD	Song EV/Song Pro EV	Steering wheel switch (BYD) (SWS)	✓	✓	✓	✓			✓
BYD	Song EV/Song Pro EV	Auxiliary heating (PTC)	✓	✓	✓	✓			
BYD	Song EV/Song Pro EV	Green Clean System (PM2.5)	✓	✓	✓	✓			✓
BYD	Song EV/Song Pro EV	Image Integration (FV)	✓	✓	✓	✓			
BYD	Song EV/Song Pro EV	Display bracket assembly (PH)	✓	✓	✓	✓			
BYD	Song EV/Song Pro EV	Driving Recorder (VDR)	✓	✓	✓	✓			
BYD	Song EV/Song Pro EV	Shift control mechanism panel assem	✓	✓	✓	✓			
BYD	Song EV/Song Pro EV	Auxiliary driving switch group (BYD)	✓	✓	✓	✓			
BYD	Song EV/Song Pro EV	Tablet PAD (BYD) (FPAD)	✓	✓	✓	✓			
BYD	Song EV/Song Pro EV	Gateway (GW)	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	Gear position actuator (SCU)/gear p	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	Gear position actuator (SCU)/gear p	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	Electronic Parking (Sark) (EPB SAC)	✓	✓	✓	✓			SP2724-SP2726
BYD	Song EV/Song PLUS EV	Electro-hydraulic brake (Bosch) (H	✓	✓	✓	✓			SP2727-SP2753
BYD	Song EV/Song PLUS EV	Adaptive Cruise System (Bosch) (MR	✓	✓	✓	✓			SP2754-SP2756
BYD	Song EV/Song PLUS EV	Multifunctional Video Controller (B	✓	✓	✓	✓			SP2757-SP2760
BYD	Song EV/Song PLUS EV	Left Blind Spot Monitoring (Winnir	✓	✓	✓	✓			SP2761-SP2763
BYD	Song EV/Song PLUS EV	Right Blind Spot Monitoring (Winnir	✓	✓	✓	✓			SP2764-SP2766
BYD	Song EV/Song PLUS EV	Power Steering (TRW) (EPS)	✓	✓	✓	✓			SP2767-SP2774
BYD	Song EV/Song PLUS EV	Tire Pressure Management Module (Bz	✓	✓	✓	✓			SP2775-SP2778
BYD	Song EV/Song PLUS EV	Charging and distribution assembly	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	Vehicle Controller (BYD) (VCU)	✓	✓	✓	✓			SP2779-SP2782
BYD	Song EV/Song PLUS EV	Front drive motor controller (BYD)	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	Battery heater (BYD) (BH)	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	Battery Management System (BMS)/Bat	✓	✓	✓	✓			SP2783-SP2788
BYD	Song EV/Song PLUS EV	Battery Management System (BMS)/Bat	✓	✓	✓	✓			SP2789-SP2794
BYD	Song EV/Song PLUS EV	Combination Instrument (INS)/Combin	✓	✓	✓	✓			✓
BYD	Song EV/Song PLUS EV	Combination Instrument (INS)/Combin	✓	✓	✓	✓			✓
BYD	Song EV/Song PLUS EV	DC voltage detection module (BYD)	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	Electric drive charging module (BYD)	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	DC-DC assembly (BYD) (DC DC)	✓	✓	✓	✓			SP2795-SP2797
BYD	Song EV/Song PLUS EV	Car charger (BYD) (OBC)	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	Green Clean System (Meximec) (PM2.5)	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	Main driving seat (BYD) (SECU D)	✓	✓	✓	✓			SP2798
BYD	Song EV/Song PLUS EV	Front left gate control (KSD) (DCU)	✓	✓	✓	✓			✓
BYD	Song EV/Song PLUS EV	Right front door control (KSD) (DCU)	✓	✓	✓	✓			✓
BYD	Song EV/Song PLUS EV	Door multi-channel controller (Yang	✓	✓	✓	✓			✓
BYD	Song EV/Song PLUS EV	Combination switch (KSD) (CS)	✓	✓	✓	✓			✓
BYD	Song EV/Song PLUS EV	Airbag (BYD) (SRSIII)	✓	✓	✓	✓			SP2799-SP2801
BYD	Song EV/Song PLUS EV	Panel Ambient Light (Baicom Optics)	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	Sunroof Controller (Dechang) (SRM)	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	Wireless charging (Beijing Yougan)	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	Electric back door (Brose) (BDECU)	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	Integrated body controller B1 (BYD)	✓	✓	✓	✓			✓
BYD	Song EV/Song PLUS EV	Integrated body controller B2 (BYD)	✓	✓	✓	✓			SP2802-SP2809
BYD	Song EV/Song PLUS EV	Left combination rear light control	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	Right combination rear light contro	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	Left tail light control module (Gug	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	Right tail light control module (G	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	Steering wheel switch (BYD) (SWS)	✓	✓	✓	✓			✓
BYD	Song EV/Song PLUS EV	Auxiliary heating (BYD) (PTC)	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	Display bracket assembly (BYD) (Pa	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	Shift control mechanism panel assem	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	Air conditioning compressor control	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	Automatic parking (Desay SV) (IPA	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	Left front combination lamp (BYD)	✓	✓	✓	✓			✓
BYD	Song EV/Song PLUS EV	Right front combination lamp (BYD)	✓	✓	✓	✓			✓
BYD	Song EV/Song PLUS EV	Ambient light control module (Bai K	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	Multimedia System Android (BYD) (Me	✓	✓	✓	✓			
BYD	Song EV/Song PLUS EV	NFC Controller (BYD) (NCM)	✓	✓	✓	✓			
BYD	Yuan/ Yuan EA General	Main Controller (ACU)	✓	✓	✓	✓			SP2810-SP2813
BYD	Yuan/ Yuan EA General	Battery Management System (BMS)	✓	✓	✓	✓			SP2814-SP2821
BYD	Yuan/ Yuan EA General	On-board charger (OBC)	✓	✓	✓	✓			
BYD	Yuan/ Yuan EA General	Combination Instrument (INS)	✓	✓	✓	✓			✓
BYD	Yuan/ Yuan EA General	Gear position actuator (SCU)	✓	✓	✓	✓			
BYD	Yuan/ Yuan EA General	Battery Collector (BIC)	✓	✓	✓	✓			
BYD	Yuan/ Yuan EA General	Active Bleeding Controller (BPCM)	✓	✓	✓	✓			

BYD	Yuan/Brand new Yuan EV (S2) General	Electronic Parking System (Sark) (E	✓	✓	✓	✓	✓	✓	SP2951-SP2954
BYD	Yuan/Brand new Yuan EV (S2) General	Steering shaft lock (ECL)	✓	✓	✓	✓	✓	✓	
BYD	Yuan/Brand new Yuan EV (S2) General	Airbag (third generation) (SRS III)	✓	✓	✓	✓	✓	✓	SP2955-SP2956
BYD	Yuan/Brand new Yuan EV (S2) General	Airbag (new) (BYD) (SRS)	✓	✓	✓	✓	✓	✓	SP2957-SP2959
BYD	Yuan/Brand new Yuan EV (S2) General	Integrated body controller (BCM)	✓	✓	✓	✓	✓	✓	SP2960-SP2967
BYD	Yuan/Brand new Yuan EV (S2) General	Fuel heater (BYD) (FHM)	✓	✓	✓	✓	✓	✓	
BYD	Yuan/Brand new Yuan EV (S2) General	Air Conditioning Compressor Control	✓	✓	✓	✓	✓	✓	
BYD	Yuan/Brand new Yuan EV (S2) General	Tire Pressure Management Module (Se	✓	✓	✓	✓	✓	✓	SP2968-SP2971
BYD	Yuan/Brand new Yuan EV (S2) General	Combination switch (CS)	✓	✓	✓	✓	✓	✓	
BYD	Yuan/Brand new Yuan EV (S2) General	Door multiple controller (Yangtze R	✓	✓	✓	✓	✓	✓	
BYD	Yuan/Brand new Yuan EV (S2) General	Display bracket assembly (PH)	✓	✓	✓	✓	✓	✓	
BYD	Yuan/Brand new Yuan EV (S2) General	Center Console Switch Group (CCS)	✓	✓	✓	✓	✓	✓	
BYD	Yuan/Brand new Yuan EV (S2) General	Multimedia control panel switch gro	✓	✓	✓	✓	✓	✓	
BYD	Yuan/Brand new Yuan EV (S2) General	Air conditioning water heater (PTC)	✓	✓	✓	✓	✓	✓	
BYD	Yuan/Brand new Yuan EV (S2) General	Radio	✓	✓	✓	✓	✓	✓	
BYD	Yuan/Brand new Yuan EV (S2) General	Sunroof Motor (SRM)	✓	✓	✓	✓	✓	✓	
BYD	Yuan/Brand new Yuan EV (S2) General	Sunroof Sunshade Motor (SSM)	✓	✓	✓	✓	✓	✓	
BYD	Yuan/Brand new Yuan EV (S2) General	Multimedia	✓	✓	✓	✓	✓	✓	
BYD	Yuan/Brand new Yuan EV (S2) General	Driving Recorder (VTDR)	✓	✓	✓	✓	✓	✓	
BYD	Yuan/Brand new Yuan EV (S2) General	External power amplifier (AMP)	✓	✓	✓	✓	✓	✓	
BYD	Yuan/Brand new Yuan EV (S2) General	Image Integration System (FV)	✓	✓	✓	✓	✓	✓	
BYD	Yuan/Brand new Yuan EV (S2) General	Green Clean System (PM2.5)	✓	✓	✓	✓	✓	✓	
BYD	Yuan/Brand new Yuan EV (S2) General	4G communication module (4G)	✓	✓	✓	✓	✓	✓	
BYD	Yuan/Brand new Yuan EV (S2) General	Multimedia Power (MBC)	✓	✓	✓	✓	✓	✓	
BYD	Yuan/Brand new Yuan EV (S2) General	Volume knob (VK)	✓	✓	✓	✓	✓	✓	
BYD	Yuan/Brand new Yuan EV (S2) General	Steering Wheel Switch (SWS)	✓	✓	✓	✓	✓	✓	
BYD	Yuan/Brand new Yuan EV (S2) General	Shift control mechanism panel assem	✓	✓	✓	✓	✓	✓	
BYD	T3 general	Main Controller (ACU)	✓	✓	✓	✓	✓	✓	SP2972-SP2974
BYD	T3 general	Battery Management System (BMS)	✓	✓	✓	✓	✓	✓	SP2975-SP2976
BYD	T3 general	Low Voltage Battery Management Syst	✓	✓	✓	✓	✓	✓	
BYD	T3 general	On-board charger (OBC)	✓	✓	✓	✓	✓	✓	
BYD	T3 general	Battery Collector (BIC)	✓	✓	✓	✓	✓	✓	
BYD	T3 general	Combination Instrument (INS)	✓	✓	✓	✓	✓	✓	
BYD	T3 general	Active Bleeding Controller (BPCM)	✓	✓	✓	✓	✓	✓	
BYD	T3 general	DC-DC assembly (DC-DC)	✓	✓	✓	✓	✓	✓	
BYD	T3 general	Mode switch (EV-HEV)	✓	✓	✓	✓	✓	✓	
BYD	T3 general	Gear Controller (GCM)	✓	✓	✓	✓	✓	✓	
BYD	T3 general	Leakage Sensor (LS)	✓	✓	✓	✓	✓	✓	
BYD	T3 general	VTOG Charge (VTOG C)	✓	✓	✓	✓	✓	✓	
BYD	T3 general	VTOG Drive (VTOG D)	✓	✓	✓	✓	✓	✓	
BYD	T3 general	VTOG mode (VTOG M)	✓	✓	✓	✓	✓	✓	
BYD	T3 general	VTOG DSP2(VTOG DSP2)/VTOG DSP2 Sout	✓	✓	✓	✓	✓	✓	SP2977
BYD	T3 general	VTOG DSP2(VTOG DSP2)/VTOG DSP2(VTOG	✓	✓	✓	✓	✓	✓	SP2978
BYD	T3 general	Wheel Anti-lock Brake System/Electr	✓	✓	✓	✓	✓	✓	SP2979-SP2984
BYD	T3 general	Wheel Anti-lock Brake System/Electr	✓	✓	✓	✓	✓	✓	SP2985-SP2990
BYD	T3 general	Power Steering (EPS)	✓	✓	✓	✓	✓	✓	
BYD	T3 general	Electronic Parking System (EPB)	✓	✓	✓	✓	✓	✓	
BYD	T3 general	Steering shaft lock (ECL)	✓	✓	✓	✓	✓	✓	
BYD	T3 general	Body Controller (BCM)	✓	✓	✓	✓	✓	✓	
BYD	T3 general	Intelligent Key (IKey)	✓	✓	✓	✓	✓	✓	
BYD	T3 general	Airbag (SRS)/Airbag (third generati	✓	✓	✓	✓	✓	✓	SP2991-SP2992
BYD	T3 general	Airbag (SRS)/Airbag (SRS)	✓	✓	✓	✓	✓	✓	SP2993
BYD	T3 general	Air Conditioner Controller (ACB)/Ai	✓	✓	✓	✓	✓	✓	
BYD	T3 general	Air Conditioning Controller (ACB)/A	✓	✓	✓	✓	✓	✓	
BYD	T3 general	Air Conditioning Control Panel (ACC	✓	✓	✓	✓	✓	✓	
BYD	T3 general	Air Conditioning Compressor Control	✓	✓	✓	✓	✓	✓	
BYD	T3 general	Engine Sound Simulator (AVAS)	✓	✓	✓	✓	✓	✓	
BYD	T3 general	Cloud Service System (DCM)	✓	✓	✓	✓	✓	✓	
BYD	T3 general	Door multiple controller (DMCU)	✓	✓	✓	✓	✓	✓	
BYD	T3 general	Multimedia	✓	✓	✓	✓	✓	✓	
BYD	T3 general	Parking Assist System (PAS)	✓	✓	✓	✓	✓	✓	
BYD	T3 general	Air conditioning water heater (PTC)	✓	✓	✓	✓	✓	✓	
BYD	T3 general	Vehicle terminal (VT)	✓	✓	✓	✓	✓	✓	
BYD	T3 general	4G communication module (4G)	✓	✓	✓	✓	✓	✓	
BYD	T3 general	Gateway (GW)	✓	✓	✓	✓	✓	✓	
BYD	M3 EV general	Vehicle Controller (VCU)	✓	✓	✓	✓	✓	✓	SP2994-SP2995
BYD	M3 EV general	Battery Management System (BMS)	✓	✓	✓	✓	✓	✓	SP2996-SP3003
BYD	M3 EV general	Battery Management System 300 (BMS)	✓	✓	✓	✓	✓	✓	SP3004-SP3018
BYD	M3 EV general	On-board charger (OBC)	✓	✓	✓	✓	✓	✓	
BYD	M3 EV general	Battery Collector (BIC)	✓	✓	✓	✓	✓	✓	
BYD	M3 EV general	Active Bleeding Controller (BPCM)	✓	✓	✓	✓	✓	✓	
BYD	M3 EV general	DC-DC assembly (DC-DC)	✓	✓	✓	✓	✓	✓	
BYD	M3 EV general	Gear Controller (GCM)	✓	✓	✓	✓	✓	✓	
BYD	M3 EV general	Front Drive Motor Controller (FMCU)	✓	✓	✓	✓	✓	✓	SP3019
BYD	M3 EV general	Combination Instrument (INS)	✓	✓	✓	✓	✓	✓	
BYD	M3 EV general	Leakage Sensor (LS)	✓	✓	✓	✓	✓	✓	SP3020
BYD	M3 EV general	Wheel Anti-lock Brake System/Electr	✓	✓	✓	✓	✓	✓	SP3021-SP3027
BYD	M3 EV general	Wheel Anti-lock Brake System/Electr	✓	✓	✓	✓	✓	✓	SP3028-SP3036
BYD	M3 EV general	Power Steering (EPS)/Power Steering	✓	✓	✓	✓	✓	✓	SP3037
BYD	M3 EV general	Power Steering (EPS)/Power Steering	✓	✓	✓	✓	✓	✓	SP3038-SP3040
BYD	M3 EV general	Tire Pressure Management Module (TP	✓	✓	✓	✓	✓	✓	SP3041-SP3044
BYD	M3 EV general	Electronic Parking System (EPB)	✓	✓	✓	✓	✓	✓	SP3045
BYD	M3 EV general	Body Controller (BCM)	✓	✓	✓	✓	✓	✓	
BYD	M3 EV general	Steering shaft lock (ECL)	✓	✓	✓	✓	✓	✓	
BYD	M3 EV general	Intelligent Key (IKey)	✓	✓	✓	✓	✓	✓	
BYD	M3 EV general	Airbag (third generation) (SRS III)	✓	✓	✓	✓	✓	✓	SP3046-SP3047
BYD	M3 EV general	Air Conditioning Controller (ACB)	✓	✓	✓	✓	✓	✓	
BYD	M3 EV general	Air Conditioning Control Panel (ACC	✓	✓	✓	✓	✓	✓	
BYD	M3 EV general	Air Conditioning Compressor Control	✓	✓	✓	✓	✓	✓	
BYD	M3 EV general	Engine Sound Simulator (AVAS)	✓	✓	✓	✓	✓	✓	
BYD	M3 EV general	Door multiple controller (DMCU)	✓	✓	✓	✓	✓	✓	
BYD	M3 EV general	Multimedia	✓	✓	✓	✓	✓	✓	
BYD	M3 EV general	Parking Assist System (PAS)	✓	✓	✓	✓	✓	✓	
BYD	M3 EV general	Air conditioning water heater (PTC)	✓	✓	✓	✓	✓	✓	
BYD	M3 EV general	4G communication module (4G)	✓	✓	✓	✓	✓	✓	
BYD	M3 EV general	Gateway (GW)	✓	✓	✓	✓	✓	✓	

BYD	D1 Universal	Electronic Body Stability System (E	✓	✓	✓	✓			SP3048-SP3058
BYD	D1 Universal	Electronic parking (Sark) (DD EPB)	✓	✓	✓	✓	✓		SP3059-SP3061
BYD	D1 Universal	Electric Power Steering (Yubei) (EP	✓	✓	✓	✓			SP3062
BYD	D1 Universal	Shift control mechanism panel assem	✓	✓	✓	✓			
BYD	D1 Universal	Battery Manager 400 (BYD) (DD BMS40	✓	✓	✓	✓			SP3063-SP3074
BYD	D1 Universal	Vehicle controller (BYD) (DD VCU)	✓	✓	✓	✓	✓		SP3075-SP3077
BYD	D1 Universal	Front drive motor controller (BYD)	✓	✓	✓	✓			
BYD	D1 Universal	Electro-hydraulic brake (Bosch) (IF	✓	✓	✓	✓	✓		SP3078-SP3103
BYD	D1 Universal	DC DC ((BYD) DC DC)	✓	✓	✓	✓			
BYD	D1 Universal	Sintering detection module (BYD) (S	✓	✓	✓	✓			
BYD	D1 Universal	Car charger (BYD) (OBC)	✓	✓	✓	✓			
BYD	D1 Universal	Front millimeter wave radar (FMRR)/	✓	✓	✓	✓			SP3104-SP3106
BYD	D1 Universal	Front millimeter wave radar (FMRR)	✓	✓	✓	✓			
BYD	D1 Universal	Multifunctional Video Controller (M	✓	✓	✓	✓			SP3107-SP3109
BYD	D1 Universal	Multifunctional Video Controller (M	✓	✓	✓	✓			
BYD	D1 Universal	Airbag (BYD) (SRS I11)	✓	✓	✓	✓			SP3110-SP3111
BYD	D1 Universal	Steering wheel switch (BYD) (SWS)	✓	✓	✓	✓			
BYD	D1 Universal	Combination switch (KSD) (ES1 CS)	✓	✓	✓	✓			
BYD	D1 Universal	Air Conditioning Compressor (BYD)	✓	✓	✓	✓			
BYD	D1 Universal	Water-assisted heating (BYD) (ES PT	✓	✓	✓	✓			
BYD	D1 Universal	Information display (BYD) (ES IDS)	✓	✓	✓	✓			
BYD	D1 Universal	Multimedia (BYD) (Media)	✓	✓	✓	✓			
BYD	D1 Universal	Right electric sliding door control	✓	✓	✓	✓	✓		
BYD	D1 Universal	Integrated body controller (BYD) (B	✓	✓	✓	✓	✓		
BYD	e series/e1 general	Vehicle Controller (VCU)	✓	✓	✓	✓	✓		SP3112-SP3114
BYD	e series/e1 general	Power Battery Manager (BMS)	✓	✓	✓	✓	✓		SP3115-SP3120
BYD	e series/e1 general	Wheel Anti-lock Braking System (ABS	✓	✓	✓	✓	✓		SP3121-SP3126
BYD	e series/e1 general	Power Steering (CEPS)	✓	✓	✓	✓			SP3127
BYD	e series/e1 general	Gear Controller (SCU)	✓	✓	✓	✓			
BYD	e series/e1 general	Front Drive Motor Controller (FMCU)	✓	✓	✓	✓			SP3128
BYD	e series/e1 general	Three-in-one charging and distribut	✓	✓	✓	✓			SP3129
BYD	e series/e1 general	Battery Collector (BIC)	✓	✓	✓	✓			
BYD	e series/e1 general	Airbag (SRS)	✓	✓	✓	✓			SP3130
BYD	e series/e1 general	Integrated body controller (BCM)	✓	✓	✓	✓	✓		SP3131-SP3132
BYD	e series/e1 general	Air Conditioning Compressor (ACC)	✓	✓	✓	✓			
BYD	e series/e1 general	Steering shaft lock (ECL)	✓	✓	✓	✓			
BYD	e series/e1 general	Multimedia Power (MBC)	✓	✓	✓	✓			
BYD	e series/e1 general	4G communication module (4G)/4G com	✓	✓	✓	✓			
BYD	e series/e1 general	4G communication module (4G)/4G com	✓	✓	✓	✓			
BYD	e series/e1 general	Panoramic Video System (FV)	✓	✓	✓	✓			
BYD	e series/e1 general	Multimedia Control Panel Switch Gro	✓	✓	✓	✓			
BYD	e series/e1 general	External power amplifier (AMP)	✓	✓	✓	✓			
BYD	e series/e1 general	Combination switch (CS)	✓	✓	✓	✓	✓		
BYD	e series/e1 general	Display bracket assembly (PH)	✓	✓	✓	✓			
BYD	e series/e1 general	Multimedia	✓	✓	✓	✓			
BYD	e series/e1 general	Auxiliary heating (PTC)	✓	✓	✓	✓			
BYD	e series/e1 general	Steering Wheel Switch (SWS)	✓	✓	✓	✓	✓		
BYD	e series/e1 general	Radio	✓	✓	✓	✓			
BYD	e series/e2/e3 general	Vehicle Controller (VCU)	✓	✓	✓	✓	✓		SP3133-SP3135
BYD	e series/e2/e3 general	Battery Pack Data (BPD)	✓	✓	✓	✓			
BYD	e series/e2/e3 general	Battery Manager (BMS)/Battery Manag	✓	✓	✓	✓	✓		SP3136-SP3141
BYD	e series/e2/e3 general	Battery Manager (BMS)/Battery Manag	✓	✓	✓	✓	✓		SP3142-SP3147
BYD	e series/e2/e3 general	Battery Manager (BMS)/Ternary Batte	✓	✓	✓	✓	✓		SP3148-SP3153
BYD	e series/e2/e3 general	Battery Manager (BMS)/Battery Manag	✓	✓	✓	✓	✓		SP3154-SP3167
BYD	e series/e2/e3 general	Battery Manager (BMS)/Battery Manag	✓	✓	✓	✓	✓		SP3168-SP3177
BYD	e series/e2/e3 general	Battery Manager (BMS)/Battery Manag	✓	✓	✓	✓	✓		SP3178-SP3185
BYD	e series/e2/e3 general	On-board charger (OBC)	✓	✓	✓	✓			
BYD	e series/e2/e3 general	Gear Controller (SCU)	✓	✓	✓	✓			
BYD	e series/e2/e3 general	Front Drive Motor Controller (FMCU)	✓	✓	✓	✓			SP3186
BYD	e series/e2/e3 general	Three-in-one charging and distribut	✓	✓	✓	✓			SP3187
BYD	e series/e2/e3 general	DC-DC assembly (DC DC)	✓	✓	✓	✓	✓		SP3188-SP3190
BYD	e series/e2/e3 general	Anti-lock Brake System/Electronic B	✓	✓	✓	✓	✓		SP3191-SP3199
BYD	e series/e2/e3 general	Anti-lock brake system/electronic b	✓	✓	✓	✓	✓		SP3200-SP3209
BYD	e series/e2/e3 general	Power Steering (EPS)/Power Steering	✓	✓	✓	✓	✓		SP3210
BYD	e series/e2/e3 general	Power Steering (EPS)/Power Steering	✓	✓	✓	✓	✓		SP3211
BYD	e series/e2/e3 general	Electronic Parking System (Sark) (E	✓	✓	✓	✓	✓		SP3212-SP3214
BYD	e series/e2/e3 general	Airbag (SRS)/Airbag (third generati	✓	✓	✓	✓			SP3215
BYD	e series/e2/e3 general	Airbag (SRS)/Airbag (SRS)	✓	✓	✓	✓			SP3216-SP3217
BYD	e series/e2/e3 general	Multimedia Control Panel Switch Gro	✓	✓	✓	✓			
BYD	e series/e2/e3 general	Integrated body controller (BCM)	✓	✓	✓	✓	✓		SP3218-SP3225
BYD	e series/e2/e3 general	Built-in power amplifier (AMP)	✓	✓	✓	✓			
BYD	e series/e2/e3 general	NFC Control Module (NCM)	✓	✓	✓	✓			
BYD	e series/e2/e3 general	Combination switch (CS)	✓	✓	✓	✓			
BYD	e series/e2/e3 general	Air Conditioning Compressor (ACC)/A	✓	✓	✓	✓	✓		
BYD	e series/e2/e3 general	Air Conditioning Compressor (ACC)/A	✓	✓	✓	✓	✓		
BYD	e series/e2/e3 general	Steering shaft lock (ECL)	✓	✓	✓	✓			
BYD	e series/e2/e3 general	Display bracket assembly (PH)	✓	✓	✓	✓			
BYD	e series/e2/e3 general	Multimedia System (Media)/Multimedi	✓	✓	✓	✓			
BYD	e series/e2/e3 general	Multimedia system (Media)/Multimedi	✓	✓	✓	✓			
BYD	e series/e2/e3 general	Auxiliary heating (PTC)	✓	✓	✓	✓	✓		
BYD	e series/e2/e3 general	Auxiliary heating (HuaGongGoli) (PT	✓	✓	✓	✓	✓		
BYD	e series/e2/e3 general	Auxiliary heating slave (HuaGongGor	✓	✓	✓	✓			
BYD	e series/e2/e3 general	Steering Wheel Switch (SWS)	✓	✓	✓	✓	✓		
BYD	e series/e2/e3 general	Radio	✓	✓	✓	✓			
BYD	e series/e2/e3 general	Fuel heater (FHM)	✓	✓	✓	✓	✓		
BYD	e series/e2/e3 general	4G communication module (4G)	✓	✓	✓	✓			
BYD	e series/e2/e3 general	Sunshade Controller (SSM)	✓	✓	✓	✓			
BYD	e5/e5 universal	Main Controller (ACU)	✓	✓	✓	✓			SP3226-SP3229
BYD	e5/e5 universal	Battery Pack Data (BPD)	✓	✓	✓	✓			
BYD	e5/e5 universal	Battery Management System (BMS)/Bat	✓	✓	✓	✓	✓		SP3230-SP3231
BYD	e5/e5 universal	Battery Management System (BMS)/Bat	✓	✓	✓	✓	✓		SP3232-SP3234
BYD	e5/e5 universal	Battery Management System (BMS)/Bat	✓	✓	✓	✓	✓		SP3235-SP3236
BYD	e5/e5 universal	Battery Management System (BMS)/Bat	✓	✓	✓	✓	✓		SP3237-SP3240
BYD	e5/e5 universal	Low Voltage Battery Management Syst	✓	✓	✓	✓	✓		
BYD	e5/e5 universal	On-board charger (OBC)/on-board cha	✓	✓	✓	✓	✓		
BYD	e5/e5 universal	Car Charger (OBC)/Car Charger 7kW	✓	✓	✓	✓			

BYD	e5/e5 universal	Battery heater (BH)	✓	✓	✓	✓			
BYD	e5/e5 universal	Battery Collector (BIC)	✓						
BYD	e5/e5 universal	Active Bleeding Controller (BPCM)	✓	✓	✓	✓			
BYD	e5/e5 universal	DC-DC assembly (DC-DC)	✓	✓	✓	✓			
BYD	e5/e5 universal	Gear Controller (GCM)	✓	✓	✓	✓			
BYD	e5/e5 universal	Leakage Sensor (LS)	✓			✓			
BYD	e5/e5 universal	Combination Instrument (INS)/Comb	✓		✓			✓	
BYD	e5/e5 universal	Combination Instrument (INS)/Comb	✓	✓	✓				
BYD	e5/e5 universal	VTOG Drive (VTOG D)	✓						
BYD	e5/e5 universal	VTOG mode (VTOG M)	✓						
BYD	e5/e5 universal	VTOG Charge (VTOG C)	✓						
BYD	e5/e5 universal	VTOG DSP2(VTOG DSP2)/VTOG DSP2(VTOG	✓	✓	✓	✓		✓	SP3241
BYD	e5/e5 universal	VTOG DSP2(VTOG DSP2)/VTOG DSP2 shor	✓	✓	✓	✓		✓	SP3242
BYD	e5/e5 universal	VTOG DSP2(VTOG DSP2)/VTOG DSP2 Sou	✓	✓	✓	✓		✓	SP3243
BYD	e5/e5 universal	Wheel Anti-lock Brake System/Electr	✓	✓	✓	✓			
BYD	e5/e5 universal	Wheel Anti-lock Brake System/Electr	✓	✓	✓	✓			SP3244-SP3249
BYD	e5/e5 universal	Power Steering (EPS)	✓	✓	✓	✓			SP3250-SP3253
BYD	e5/e5 universal	Electronic Parking System (EPB)/Ele	✓	✓	✓	✓		✓	SP3254
BYD	e5/e5 universal	Electronic Parking System (EPB)/Ele	✓	✓	✓	✓			
BYD	e5/e5 universal	Body Controller (BCM)/Body Control	✓	✓	✓	✓		✓	
BYD	e5/e5 universal	Body Controller (BCM)/Body Control	✓	✓	✓	✓		✓	
BYD	e5/e5 universal	Steering shaft lock (ECL)	✓	✓	✓				
BYD	e5/e5 universal	Intelligent Key (IKey)	✓	✓	✓	✓			
BYD	e5/e5 universal	Airbag (SRS)	✓	✓	✓	✓			SP3255-SP3256
BYD	e5/e5 universal	Air Conditioning Controller (ACB)	✓	✓	✓	✓		✓	
BYD	e5/e5 universal	Air Conditioning Compressor Control	✓	✓	✓	✓			
BYD	e5/e5 universal	Air Conditioning Control Panel (ACC	✓						
BYD	e5/e5 universal	Tire Pressure Monitoring Module (TP	✓	✓	✓	✓			SP3257-SP3260
BYD	e5/e5 universal	Tire Pressure Monitoring Module (TP	✓	✓	✓	✓		✓	SP3261-SP3264
BYD	e5/e5 universal	Tire Pressure Monitoring Module (TP	✓	✓	✓	✓		✓	SP3265-SP3268
BYD	e5/e5 universal	Engine Sound Simulator (AVAS)	✓	✓	✓	✓		✓	
BYD	e5/e5 universal	Battery Cooling Controller (BCC)	✓	✓	✓	✓		✓	
BYD	e5/e5 universal	CD player assembly (CD)	✓						
BYD	e5/e5 universal	Combination switch (CS)	✓	✓	✓	✓		✓	
BYD	e5/e5 universal	Door multiple controller (DMCU)	✓	✓	✓	✓		✓	
BYD	e5/e5 universal	Multi-function screen (MDS)	✓	✓	✓				
BYD	e5/e5 universal	Multimedia (Media)/Multimedia (Andr	✓						
BYD	e5/e5 universal	Multimedia/Media	✓						
BYD	e5/e5 universal	Multimedia Panel (M P)/Multimedia P	✓						
BYD	e5/e5 universal	Multimedia Panel (M P)/Multimedia P	✓						
BYD	e5/e5 universal	Parking Assist System (PAS)/Parking	✓	✓	✓	✓		✓	
BYD	e5/e5 universal	Parking Assist System (PAS)/Parking	✓	✓	✓	✓			
BYD	e5/e5 universal	Green Clean System (PM2.5)	✓	✓	✓	✓		✓	
BYD	e5/e5 universal	Air conditioning water heater (PTC)	✓	✓	✓	✓			
BYD	e5/e5 universal	Radio	✓						
BYD	e5/e5 universal	Power distribution box (RCM)/water	✓	✓	✓	✓		✓	
BYD	e5/e5 universal	Power Distribution Box (RCM)/Front	✓	✓	✓	✓		✓	
BYD	e5/e5 universal	Vehicle terminal (VT)	✓						
BYD	e5/e5 universal	4G communication module (4G)	✓						
BYD	e5/e5 universal	Gateway (GW)	✓	✓	✓				
BYD	e5/e5 travel version universal	Vehicle Controller (VCU)	✓	✓	✓	✓			SP3269-SP3271
BYD	e5/e5 travel version universal	Battery Pack Data (BPD)/Battery Pac	✓	✓	✓	✓			
BYD	e5/e5 travel version universal	Battery Pack Data (BPD)/Battery Pac	✓	✓	✓	✓			
BYD	e5/e5 travel version universal	Battery Pack Data (BPD)/Battery Pac	✓	✓	✓	✓			
BYD	e5/e5 travel version universal	Battery Management System (BMS)/Bat	✓	✓	✓	✓		✓	SP3272-SP3279
BYD	e5/e5 travel version universal	Battery Management System (BMS)/Bat	✓	✓	✓	✓		✓	SP3280-SP3287
BYD	e5/e5 travel version universal	Low Voltage Battery Management Svst	✓	✓	✓	✓		✓	
BYD	e5/e5 travel version universal	Car charger 7KW (OBC 7KW)	✓	✓	✓	✓			
BYD	e5/e5 travel version universal	Battery heater (BH)	✓	✓	✓	✓			
BYD	e5/e5 travel version universal	Battery Collector (BIC)	✓						
BYD	e5/e5 travel version universal	DC-DC assembly (DC-DC)	✓	✓	✓	✓			
BYD	e5/e5 travel version universal	Front Drive Motor Controller (FMCU)	✓	✓	✓	✓			SP3288
BYD	e5/e5 travel version universal	Gear Controller (GCM)	✓	✓	✓	✓			
BYD	e5/e5 travel version universal	Leakage Sensor (LS)	✓	✓	✓	✓			
BYD	e5/e5 travel version universal	BYD Security Control (BSC)	✓	✓	✓	✓		✓	SP3289-SP3295
BYD	e5/e5 travel version universal	Wheel Anti-lock Brake System/Electr	✓	✓	✓	✓			SP3296-SP3299
BYD	e5/e5 travel version universal	Wheel Anti-lock Brake System/Electr	✓	✓	✓	✓			SP3300-SP3308
BYD	e5/e5 travel version universal	Power Steering (EPS)	✓	✓	✓	✓			SP3309
BYD	e5/e5 travel version universal	Electronic Parking System (Sark) (E	✓	✓	✓	✓		✓	SP3310
BYD	e5/e5 travel version universal	Body Controller (BCM)	✓	✓	✓	✓		✓	
BYD	e5/e5 travel version universal	Steering shaft lock (ECL)	✓	✓	✓				
BYD	e5/e5 travel version universal	Intelligent Key (IKey)	✓	✓	✓	✓			
BYD	e5/e5 travel version universal	Airbag (third generation) (SRS IIT)	✓	✓	✓	✓			SP3311-SP3312
BYD	e5/e5 travel version universal	Combination Instrument (INS)	✓	✓	✓	✓			
BYD	e5/e5 travel version universal	Air Conditioning Controller (ACB)	✓	✓	✓	✓		✓	
BYD	e5/e5 travel version universal	Air Conditioning Compressor Control	✓	✓	✓	✓			
BYD	e5/e5 travel version universal	Air Conditioning Control Panel (ACC	✓						
BYD	e5/e5 travel version universal	Tire Pressure Management Module (TP	✓	✓	✓	✓		✓	SP3313-SP3316
BYD	e5/e5 travel version universal	Tire Pressure Management Module (TP	✓	✓	✓	✓		✓	SP3317-SP3320
BYD	e5/e5 travel version universal	Combination switch (CS)	✓	✓	✓	✓		✓	
BYD	e5/e5 travel version universal	Door multiple controller (DMCU)	✓	✓	✓	✓		✓	
BYD	e5/e5 travel version universal	Multi-function screen (MDS)	✓	✓	✓				
BYD	e5/e5 travel version universal	Multimedia (Android version) (Media	✓						
BYD	e5/e5 travel version universal	Multimedia Panel (Android Version)	✓						
BYD	e5/e5 travel version universal	Air conditioning water heater (PTC)	✓	✓	✓	✓		✓	
BYD	e5/e5 travel version universal	Fuel heater (FHM)	✓	✓	✓	✓		✓	
BYD	e5/e5 travel version universal	Radio	✓						
BYD	e5/e5 travel version universal	Front compartment power distributio	✓	✓	✓			✓	
BYD	e5/e5 travel version universal	Engine Sound Simulator (AVAS)/Engir	✓	✓	✓	✓		✓	
BYD	e5/e5 travel version universal	Engine Sound Simulator (AVAS)/Engir	✓	✓	✓	✓		✓	
BYD	e5/e5 travel version universal	Vehicle terminal (VT)	✓						
BYD	e5/e5 travel version universal	Driving Recorder (VTDR)	✓						
BYD	e5/e5 travel version universal	4G communication module (4G)	✓						
BYD	e5/e5 travel version universal	Gateway (GW)	✓	✓	✓				
BYD	e6/e6Y general	Battery Pack Data (BPD)	✓	✓	✓	✓			
BYD	e6/e6Y general	Battery Management System (BMS)	✓	✓	✓	✓			SP3321

BYD	e6/e6Y general	Main Controller (ACU)	✓	✓	✓	✓			SP3322-SP3324
BYD	e6/e6Y general	Anti-lock brake system/electronic B	✓	✓	✓	✓			
BYD	e6/e6Y general	Anti-lock Brake System/Electronic B	✓	✓	✓	✓			SP3325-SP3330
BYD	e6/e6Y general	Combination Instrument (INS)	✓	✓	✓	✓			
BYD	e6/e6Y general	Hydraulic Assist Brake (ACMH)	✓	✓	✓	✓			
BYD	e6/e6Y general	DC1(DC1)	✓	✓	✓	✓			
BYD	e6/e6Y general	DC2(DC2)	✓	✓	✓	✓			
BYD	e6/e6Y general	Power Steering (EHPS)	✓	✓	✓	✓			
BYD	e6/e6Y general	Electronic Parking System (Mando)	✓	✓	✓	✓	✓		
BYD	e6/e6Y general	Gear Controller (GCM)	✓	✓	✓	✓			
BYD	e6/e6Y general	P file controller (PGCM)	✓	✓	✓	✓			
BYD	e6/e6Y general	VTOG Charge (VTOG C)	✓						
BYD	e6/e6Y general	VTOG Drive (VTOG D)	✓						
BYD	e6/e6Y general	VTOG mode (VTOG M)	✓						
BYD	e6/e6Y general	VTOG DSP2(VTOG DSP2)	✓	✓	✓	✓	✓		
BYD	e6/e6Y general	Body Controller (BCM)	✓	✓	✓	✓			
BYD	e6/e6Y general	Intelligent Key (IKey)	✓	✓	✓	✓			
BYD	e6/e6Y general	Steering shaft lock (ECL)	✓	✓	✓	✓			
BYD	e6/e6Y general	Airbag (SRS)	✓	✓	✓	✓			SP3331
BYD	e6/e6Y general	Air Conditioning Controller (ACB)	✓	✓	✓	✓			
BYD	e6/e6Y general	Air Conditioning Compressor (ACC)	✓	✓	✓	✓			
BYD	e6/e6Y general	Combination switch (CS)	✓	✓	✓	✓			
BYD	e6/e6Y general	Door multiple controller (DMCU)	✓	✓	✓	✓			
BYD	e6/e6Y general	Parking Assist System (PAS)	✓	✓	✓	✓			
BYD	e6/e6Y general	Air conditioning water heater (PTC)	✓	✓	✓	✓			
BYD	e6/e6Y general	Front compartment power distributic	✓	✓	✓	✓			
BYD	e6/e6Y general	Rear collision ECU (RCSM)	✓	✓	✓	✓			SP3332
BYD	e6/e6Y general	Tire Pressure Management Module (TP	✓	✓	✓	✓			
BYD	e6/e6Y general	Engine Sound Simulator (AVAS)	✓	✓	✓	✓	✓		
BYD	e6/e6Y general	Gateway (GW)	✓	✓	✓	✓			
BYD	e6/e6A universal	Main Controller (ACU)	✓	✓	✓	✓			SP3333-SP3335
BYD	e6/e6A universal	Battery Management System (BMS)	✓	✓	✓	✓			
BYD	e6/e6A universal	Combination Instrument (INS)	✓	✓	✓	✓			
BYD	e6/e6A universal	Air Conditioning Controller (ACB)	✓	✓	✓	✓			
BYD	e6/e6A universal	Air Conditioning Compressor Control	✓	✓	✓	✓			
BYD	e6/e6A universal	MG2 Motor Controller (MG2)	✓	✓	✓	✓			
BYD	e6/e6A universal	Gear Controller (GCM)	✓	✓	✓	✓			
BYD	e6/e6A universal	P file controller (PGCM)	✓	✓	✓	✓			
BYD	e6/e6A universal	Anti-lock brake system/electronic B	✓	✓	✓	✓			
BYD	e6/e6A universal	Anti-lock Brake System/Electronic B	✓	✓	✓	✓			
BYD	e6/e6A universal	Hydraulic Assist Brake (ACMH)	✓	✓	✓	✓			
BYD	e6/e6A universal	Power Steering (EHPS)	✓	✓	✓	✓			
BYD	e6/e6A universal	Airbag (SRS)	✓	✓	✓	✓			SP3336
BYD	e6/e6A universal	Body Controller (BCM)	✓	✓	✓	✓			
BYD	e6/e6A universal	Steering shaft lock (ECL)	✓	✓	✓	✓			
BYD	e6/e6A universal	Intelligent Key (IKey)	✓	✓	✓	✓			
BYD	e6/e6A universal	Combination switch (CS)	✓	✓	✓	✓			
BYD	e6/e6A universal	Door multiple controller (DMCU)	✓	✓	✓	✓			
BYD	e6/e6A universal	Parking Assist System (PAS)	✓	✓	✓	✓			
BYD	e6/e6A universal	Front compartment power distributic	✓	✓	✓	✓			
BYD	e6/e6A universal	Gateway (GW)	✓	✓	✓	✓			
BYD	e6/e6A universal	Battery Management System (BMS)	✓	✓	✓	✓			
BYD	e6/e6B universal	Main Controller (ACU)	✓	✓	✓	✓			SP3337-SP3339
BYD	e6/e6B universal	Anti-lock brake system/electronic B	✓	✓	✓	✓			
BYD	e6/e6B universal	Anti-lock Brake System/Electronic B	✓	✓	✓	✓			
BYD	e6/e6B universal	Power Steering (EHPS)	✓	✓	✓	✓			
BYD	e6/e6B universal	Air Conditioning Controller (ACB)	✓	✓	✓	✓			
BYD	e6/e6B universal	Air Conditioning Compressor Control	✓	✓	✓	✓			
BYD	e6/e6B universal	Combination Instrument (INS)	✓	✓	✓	✓			
BYD	e6/e6B universal	Gear Controller (GCM)	✓	✓	✓	✓			
BYD	e6/e6B universal	Hydraulic Assist Brake (ACMH)	✓	✓	✓	✓			
BYD	e6/e6B universal	MG2 Motor Controller (MG2)	✓	✓	✓	✓			
BYD	e6/e6B universal	P file controller (PGCM)	✓	✓	✓	✓			
BYD	e6/e6B universal	Airbag (SRS)	✓	✓	✓	✓			SP3340
BYD	e6/e6B universal	Body Controller (BCM)	✓	✓	✓	✓			
BYD	e6/e6B universal	Tire Pressure Management Module (TP	✓	✓	✓	✓			
BYD	e6/e6B universal	Steering shaft lock (ECL)	✓	✓	✓	✓			
BYD	e6/e6B universal	Intelligent Key (IKey)	✓	✓	✓	✓			
BYD	e6/e6B universal	Combination switch (CS)	✓	✓	✓	✓			
BYD	e6/e6B universal	Door multiple controller (DMCU)	✓	✓	✓	✓			
BYD	e6/e6B universal	Parking Assist System (PAS)	✓	✓	✓	✓			
BYD	e6/e6B universal	Front compartment power distributic	✓	✓	✓	✓			
BYD	e6/e6B universal	Gateway (GW)	✓	✓	✓	✓			
BYD	e6/e6B universal	Battery Management System (BMS)/e6G	✓	✓	✓	✓			SP3341
BYD	e6/e6H universal	Battery Management System (BMS)/e6H	✓	✓	✓	✓			SP3342
BYD	e6/e6H universal	Combination Instrument (INS)	✓	✓	✓	✓			
BYD	e6/e6H universal	Hydraulic Assist Brake (ACMH)	✓	✓	✓	✓			
BYD	e6/e6H universal	No. 1 Air Conditioning Controller	✓	✓	✓	✓	✓		
BYD	e6/e6H universal	Air Conditioning Compressor No. 1	✓	✓	✓	✓			
BYD	e6/e6H universal	Air Conditioning Control Panel (ACC	✓	✓	✓	✓			
BYD	e6/e6H universal	Main Controller (ACU)	✓	✓	✓	✓			SP3343-SP3346
BYD	e6/e6H universal	DC1(DC1)	✓	✓	✓	✓			
BYD	e6/e6H universal	DC2(DC2)	✓	✓	✓	✓			
BYD	e6/e6H universal	Gear Controller (GCM)	✓	✓	✓	✓			
BYD	e6/e6H universal	Leakage Sensor (LS)	✓	✓	✓	✓			
BYD	e6/e6H universal	P file controller (PGCM)	✓	✓	✓	✓			
BYD	e6/e6H universal	Air conditioning water heater (PTC)	✓	✓	✓	✓			
BYD	e6/e6H universal	VTOG Charge (VTOG C)	✓						
BYD	e6/e6H universal	VTOG Drive (VTOG D)	✓						
BYD	e6/e6H universal	VTOG DSP2(VTOG DSP2)	✓	✓	✓	✓	✓		SP3347
BYD	e6/e6H universal	Anti-lock brake system/electronic B	✓	✓	✓	✓			
BYD	e6/e6H universal	Anti-lock Brake System/Electronic B	✓	✓	✓	✓			SP3348-SP3353
BYD	e6/e6H universal	Power Steering (EHPS)	✓	✓	✓	✓			
BYD	e6/e6H universal	Electronic Parking System (EPB)/Ele	✓	✓	✓	✓	✓		SP3354
BYD	e6/e6H universal	Electronic Parking System (EPB)/Ele	✓	✓	✓	✓	✓		
BYD	e6/e6H universal	Body Controller (BCM)	✓	✓	✓	✓			

BYD	e6/e6H universal	Steering shaft lock (ECL)	✓	✓	✓	✓			
BYD	e6/e6H universal	Intelligent Key (IKey)	✓	✓	✓	✓			
BYD	e6/e6H universal	Airbag (SRS)	✓	✓	✓	✓			SP3355-SP3356
BYD	e6/e6H universal	4G communication module (4G)	✓	✓	✓	✓			
BYD	e6/e6H universal	No. 2 Air Conditioning Controller	✓	✓	✓	✓	✓		
BYD	e6/e6H universal	Air Conditioning Compressor No. 2	✓	✓	✓	✓	✓		
BYD	e6/e6H universal	Tire Pressure Management Module (TP)	✓	✓	✓	✓	✓		SP3357-SP3360
BYD	e6/e6H universal	Tire Pressure Management Module (TP)	✓	✓	✓	✓	✓		SP3361-SP3364
BYD	e6/e6H universal	Tire Pressure Management Module (TP)	✓	✓	✓	✓	✓		SP3365-SP3368
BYD	e6/e6H universal	Engine Sound Simulator (AVAS)	✓	✓	✓	✓	✓		
BYD	e6/e6H universal	Battery heater (BH)	✓	✓	✓	✓	✓		
BYD	e6/e6H universal	Battery Cooling Controller (BCC)	✓	✓	✓	✓	✓		
BYD	e6/e6H universal	Combination switch (CS)	✓	✓	✓	✓	✓		
BYD	e6/e6H universal	Cloud Service System (DCM)	✓	✓	✓	✓	✓		
BYD	e6/e6H universal	Door multiple controller (DMCU)	✓	✓	✓	✓	✓		
BYD	e6/e6H universal	Multimedia	✓	✓	✓	✓	✓		
BYD	e6/e6H universal	Parking Assist System (PAS)	✓	✓	✓	✓	✓		
BYD	e6/e6H universal	Green Clean System (PM2.5)	✓	✓	✓	✓	✓		
BYD	e6/e6H universal	Front compartment power distributic	✓	✓	✓	✓	✓		
BYD	e6/e6H universal	Rear collision ECU (RCSM)	✓	✓	✓	✓	✓		SP3369-SP3370
BYD	e6/e6H universal	Vehicle terminal (VT)	✓	✓	✓	✓	✓		
BYD	e6/e6H universal	Gateway (GW)	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	Battery Management System (BMS)	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	Wheel Anti-lock Brake System/Electr	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	Wheel Anti-lock Brake System/Electr	✓	✓	✓	✓	✓		SP3371-SP3376
BYD	e6/e6M universal	Power Steering (EHPS)	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	Hydraulic Assist Brake (ACMH)	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	Electronic Parking System (Mando)	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	Main Controller (ACU)	✓	✓	✓	✓	✓		SP3377-SP3379
BYD	e6/e6M universal	DC1 (DC1)	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	DC2 (DC2)	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	Gear Controller (GCM)	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	P file controller (PGCM)	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	VTOG Charge (VTOG C)	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	VTOG Drive (VTOG D)	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	VTOG mode (VTOG M)	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	VTOG DSP2 (VTOG DSP2)	✓	✓	✓	✓	✓		SP3380
BYD	e6/e6M universal	Body Controller (BCM)	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	Steering shaft lock (ECL)	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	Intelligent Key (IKey)	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	Airbag (SRS)	✓	✓	✓	✓	✓		SP3381-SP3382
BYD	e6/e6M universal	Combination Instrument (INS)	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	Air Conditioning Controller (ACB)	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	Air Conditioning Compressor Control	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	Tire Pressure Management Module (TP)	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	Combination switch (CS)	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	Door multiple controller (DMCU)	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	Parking Assist System (PAS)	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	Air conditioning water heater (PTC)	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	Front compartment power distributic	✓	✓	✓	✓	✓		
BYD	e6/e6M universal	Rear collision ECU (RCSM)	✓	✓	✓	✓	✓		SP3383-SP3384
BYD	e6/e6M universal	Gateway (GW)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Battery Management System (BMS)	✓	✓	✓	✓	✓		SP3385-SP3388
BYD	e6/E6K universal	Battery heater (BH)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Battery Collector (BIC)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Combination Instrument (INS)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Air Conditioning Control Panel (ACC)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Air conditioning water heater (PTC)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	DC1 (DC1)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	DC2 (DC2)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Gear Controller (SCU)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Leakage Sensor (LS)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Main Controller (ACU)	✓	✓	✓	✓	✓		SP3389-SP3392
BYD	e6/E6K universal	VTOG Charge (VTOG C)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	VTOG Drive (VTOG D)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	VTOG DSP2 (VTOG DSP2)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Wheel Anti-lock Brake System/Electr	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Wheel Anti-lock Brake System/Electr	✓	✓	✓	✓	✓		SP3393-SP3399
BYD	e6/E6K universal	Power Steering (EHPS)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Electronic Parking System (Sark) (E	✓	✓	✓	✓	✓		SP3400
BYD	e6/E6K universal	Steering shaft lock (ECL)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Body Controller (BCM)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Intelligent Key (IKey)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Airbag (third generation) (SRS III)	✓	✓	✓	✓	✓		SP3401-SP3402
BYD	e6/E6K universal	Air Conditioning Controller (ACB)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Air Conditioning Compressor (ACC)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Tire Pressure Management Module (TP)	✓	✓	✓	✓	✓		SP3403-SP3406
BYD	e6/E6K universal	Tire Pressure Management Module (TP)	✓	✓	✓	✓	✓		SP3407-SP3410
BYD	e6/E6K universal	Battery Cooling Controller (BCC)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Combination switch (CS)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Door Multiplex Controller (DMCU)/Dc	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Door Multiple Controller (DMCU)/Door Multipl	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Multimedia Android (Media)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Multimedia Panel (Android) (M P)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Parking Assist System (PAS)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Green Clean System (PM2.5)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Front compartment power distributic	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Rear collision ECU (RSRS)	✓	✓	✓	✓	✓		SP3411-SP3412
BYD	e6/E6K universal	Engine Sound Simulator (AVAS)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	4G communication module (4G)	✓	✓	✓	✓	✓		
BYD	e6/E6K universal	Gateway (GW)	✓	✓	✓	✓	✓		
BYD	K9/K9A	Left VTOG motor controller (L VTOG)	✓	✓	✓	✓	✓		SP3413
BYD	K9/K9A	Right VTOG motor controller (R VTOG)	✓	✓	✓	✓	✓		SP3414
BYD	K9/K9A	24V DC (DC)	✓	✓	✓	✓	✓		
BYD	K9/K9A	Master Gateway Controller (MGWC)	✓	✓	✓	✓	✓		
BYD	K9/K9A	I1939 Gateway (I1939 GW)	✓	✓	✓	✓	✓		

BYD	Qin/New Qin Fuel Edition General	Combination Instrument (INS)/Combin	✓	✓	✓	✓	✓	✓	
BYD	Qin/New Qin Fuel Edition General	Combination Instrument (INS)/Combin	✓	✓	✓	✓	✓	✓	
BYD	Qin/New Qin Fuel Edition General	Air Conditioning Controller (ACB)/A	✓	✓	✓	✓	✓	✓	
BYD	Qin/New Qin Fuel Edition General	Air Conditioner Controller (ACB)/A	✓	✓	✓	✓	✓	✓	
BYD	Qin/New Qin Fuel Edition General	Parking Assist (Haun) (PAS)	✓	✓	✓	✓	✓	✓	
BYD	Qin/New Qin Fuel Edition General	Parking Assist System (Chongqing Ex	✓	✓	✓	✓	✓	✓	
BYD	Qin/New Qin Fuel Edition General	Combination switch (CS)	✓	✓	✓	✓	✓	✓	
BYD	Qin/New Qin Fuel Edition General	Steering Wheel Switch (SWS)	✓	✓	✓	✓	✓	✓	
BYD	Qin/New Qin Fuel Edition General	Radio	✓	✓	✓	✓	✓	✓	
BYD	Qin/New Qin Fuel Edition General	Multimedia host (Media)	✓	✓	✓	✓	✓	✓	
BYD	Qin/New Qin Fuel Edition General	Flat multimedia control panel (M P)	✓	✓	✓	✓	✓	✓	
BYD	Qin/New Qin Fuel Edition General	Center console switch group (Yangtz	✓	✓	✓	✓	✓	✓	
BYD	Qin/New Qin Fuel Edition General	Display bracket assembly (ES PH)	✓	✓	✓	✓	✓	✓	
BYD	Qin/New Qin Fuel Edition General	Built-in power amplifier DSP (ES IA	✓	✓	✓	✓	✓	✓	
BYD	Qin/New Qin Fuel Edition General	4G (4G)	✓	✓	✓	✓	✓	✓	
BYD	Qin/New Qin Fuel Edition General	Gateway (GW)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓	✓	SP3582
BYD	Tang/A new generation of Tang fuel version, gene	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓	✓	SP3583-SP3592
BYD	Tang/A new generation of Tang fuel version, gene	Transmission system (TCD)/wet dual	✓	✓	✓	✓	✓	✓	SP3593-SP3604
BYD	Tang/A new generation of Tang fuel version, gene	Transmission system (TCD)/Hydraulic	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Electronic Body Stability System (E	✓	✓	✓	✓	✓	✓	SP3605-SP3611
BYD	Tang/A new generation of Tang fuel version, gene	Power Steering (EPS)	✓	✓	✓	✓	✓	✓	SP3612-SP3618
BYD	Tang/A new generation of Tang fuel version, gene	Electronic Parking (Sark) (EPB)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Blind Spot Detection (BSD)	✓	✓	✓	✓	✓	✓	SP3619-SP3621
BYD	Tang/A new generation of Tang fuel version, gene	Low pressure oil pump controller (F	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Adaptive Cruise System (MRR)	✓	✓	✓	✓	✓	✓	SP3622-SP3624
BYD	Tang/A new generation of Tang fuel version, gene	Multi-Function Video Controller (MF	✓	✓	✓	✓	✓	✓	SP3625-SP3630
BYD	Tang/A new generation of Tang fuel version, gene	Gear Controller (GCM)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	NFC Control Module (NCM)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Body Controller (BCM)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Steering shaft lock (ECL)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Intelligent Key (IKey)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Airbag Three Generation (SRS III)	✓	✓	✓	✓	✓	✓	SP3631-SP3632
BYD	Tang/A new generation of Tang fuel version, gene	Combination Instrument (INS)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Air Conditioning Controller (ACB)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Rear Air Conditioning Panel (ACCP)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Tire Pressure Management Module (TP	✓	✓	✓	✓	✓	✓	SP3633-SP3636
BYD	Tang/A new generation of Tang fuel version, gene	Tire Pressure Management Module (TP	✓	✓	✓	✓	✓	✓	SP3637-SP3640
BYD	Tang/A new generation of Tang fuel version, gene	External power amplifier (AMP)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Electric Back Door (BDECU)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Combination switch (CS)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Driving Assist Switch Group (DAS)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Front left gate (DCU FL)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Right front door control (DCU FR)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Door multiple controller (DMCU)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Left front combination lamp (FL L)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Right front combination lamp (FL R)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Image Integration Module (FV)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Indoor Light (ILS)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Inside rearview mirror (IRVM)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Light Switch Group (LCS)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Multimedia Power (MBC)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Multimedia (Android) (Media)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Multimedia Panel (Android) (M P)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Display bracket assembly (PH)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Parking Assist System (PAS)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Green Clean System (PM2.5)/Green Cl	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Green Clean System (PM2.5)/Green Cl	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Stepless Fan (SAF)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Main driver's seat (SECU D)	✓	✓	✓	✓	✓	✓	SP3641
BYD	Tang/A new generation of Tang fuel version, gene	Sunroof Controller (SRM)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Sunroof Sunshade Motor (SSM)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Panoramic Steering Wheel Switch (SH	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Rear compartment power distributor	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Driving Recorder (VDR)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel version, gene	Gateway (GW)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel (2021 model) g	Blind spot monitoring (HELLA/BYD 24	✓	✓	✓	✓	✓	✓	SP3642-SP3643
BYD	Tang/A new generation of Tang fuel (2021 model) g	Left blind spot detection (BYD 77C)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel (2021 model) g	Right blind spot detection (BYD 77C)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel (2021 model) g	Engine controller United Electric P	✓	✓	✓	✓	✓	✓	SP3644-SP3660
BYD	Tang/A new generation of Tang fuel (2021 model) g	Electronic Parking (Sark) (EPB SAC)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel (2021 model) g	Power steering (TRW) (EPS TRW)	✓	✓	✓	✓	✓	✓	SP3661-SP3663
BYD	Tang/A new generation of Tang fuel (2021 model) g	Electronic Body Stability System (E	✓	✓	✓	✓	✓	✓	SP3664-SP3669
BYD	Tang/A new generation of Tang fuel (2021 model) g	Adaptive Cruise System (Bosch) (MRR	✓	✓	✓	✓	✓	✓	SP3670-SP3673
BYD	Tang/A new generation of Tang fuel (2021 model) g	Multifunctional Video Controller (B	✓	✓	✓	✓	✓	✓	SP3674-SP3678
BYD	Tang/A new generation of Tang fuel (2021 model) g	Hydraulic automatic transmission (H	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel (2021 model) g	Tire Pressure Management Module/Tir	✓	✓	✓	✓	✓	✓	SP3679-SP3682
BYD	Tang/A new generation of Tang fuel (2021 model) g	Tire Pressure Management Module/Tir	✓	✓	✓	✓	✓	✓	SP3683-SP3686
BYD	Tang/A new generation of Tang fuel (2021 model) g	NFC control module (BYD) (NCM)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel (2021 model) g	Wireless Charging (WCT)/Wireless Ch	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel (2021 model) g	Wireless Charging (WCT)/Wireless Ch	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel (2021 model) g	Integrated body controller B1 (BYD)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel (2021 model) g	Integrated body controller B2 (BYD)	✓	✓	✓	✓	✓	✓	SP3687-SP3694
BYD	Tang/A new generation of Tang fuel (2021 model) g	Electric back door (BYD) (BDECU)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel (2021 model) g	Combination switch (KOSTAL) (CS KOS	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel (2021 model) g	Door multi-channel controller (Char	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel (2021 model) g	Left front combination lamp (BYD)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel (2021 model) g	Right front combination lamp (BYD)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel (2021 model) g	Image integration module (BYD) (FV)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel (2021 model) g	Ambient light (Chongqing Ruibo) (AC	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel (2021 model) g	Indoor light (BYD) (ILS)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel (2021 model) g	Sunroof Controller (Inalfa) (SRM IR	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel (2021 model) g	Sunroof sunshade motor (BYD) (SSM)	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel (2021 model) g	Rear compartment power distributor	✓	✓	✓	✓	✓	✓	
BYD	Tang/A new generation of Tang fuel (2021 model) g	Airbag (new) (BYD) (SRS)	✓	✓	✓	✓	✓	✓	SP3695-SP3697
BYD	Tang/A new generation of Tang fuel (2021 model) g	Rear air conditioning panel (BYD)	✓	✓	✓	✓	✓	✓	

BYD	Tang/A new generation of Tang fuel (2021 model)	Front left door control (KOSTAL)	√	√	√	√	√	√	√	
BYD	Tang/A new generation of Tang fuel (2021 model)	Right front door control (KOSTAL)	√	√	√	√	√	√	√	
BYD	Tang/A new generation of Tang fuel (2021 model)	Combination Instrument (INS)/Combination Instrument (INS)	√	√	√	√	√	√	√	
BYD	Tang/A new generation of Tang fuel (2021 model)	Combination Instrument (INS)/Combination Instrument (INS)	√	√	√	√	√	√	√	
BYD	Tang/A new generation of Tang fuel (2021 model)	Inside rearview mirror (BYD) (IRVM)	√	√	√	√	√	√	√	
BYD	Tang/A new generation of Tang fuel (2021 model)	Multimedia Control Panel (BYD) (MCP)	√	√	√	√	√	√	√	
BYD	Tang/A new generation of Tang fuel (2021 model)	Electric rotating mechanism (BYD)	√	√	√	√	√	√	√	
BYD	Tang/A new generation of Tang fuel (2021 model)	Green Clean System (PM2.5)/PM2.5 Gr	√	√	√	√	√	√	√	
BYD	Tang/A new generation of Tang fuel (2021 model)	Green Clean System (PM2.5)/PM2.5 Gr	√	√	√	√	√	√	√	
BYD	Tang/A new generation of Tang fuel (2021 model)	Main driving seat (BYD) (SECU)	√	√	√	√	√	√	√	SP3698
BYD	Tang/A new generation of Tang fuel (2021 model)	Steering wheel switch (BYD) (SWS)	√	√	√	√	√	√	√	
BYD	Tang/A new generation of Tang fuel (2021 model)	Mode switch (BYD) (EV HEV)	√	√	√	√	√	√	√	
BYD	Tang/A new generation of Tang fuel (2021 model)	External power amplifier (BYD) (AMP)	√	√	√	√	√	√	√	
BYD	Tang/A new generation of Tang fuel (2021 model)	Multimedia System (Android) (BYD)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Engine Controller (ECM)/Engine Cont	√	√	√	√	√	√	√	SP3699
BYD	Song/Song MAX Universal	Engine Controller (ECM)/Engine Cont	√	√	√	√	√	√	√	SP3700
BYD	Song/Song MAX Universal	Engine Controller (ECM)/Engine Cont	√	√	√	√	√	√	√	SP3701-SP3702
BYD	Song/Song MAX Universal	Engine Controller (ECM)/1.5TID EFI	√	√	√	√	√	√	√	SP3703-SP3712
BYD	Song/Song MAX Universal	Engine Controller (ECM)/1.5T1 EFI F	√	√	√	√	√	√	√	SP3713-SP3722
BYD	Song/Song MAX Universal	Dual clutch transmission W(TCU)	√	√	√	√	√	√	√	SP3723-SP3734
BYD	Song/Song MAX Universal	Electronic Body Stability System (E	√	√	√	√	√	√	√	SP3735-SP3742
BYD	Song/Song MAX Universal	Power Steering (TRW) (EPS)	√	√	√	√	√	√	√	SP3743-SP3750
BYD	Song/Song MAX Universal	Electronic Parking System (Sark) (E	√	√	√	√	√	√	√	SP3751-SP3752
BYD	Song/Song MAX Universal	Gear position sensor (SCU)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Steering shaft lock (ECL)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Intelligent Key (IKey)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Body Controller (BCM)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Airbag (third generation) (SRS)	√	√	√	√	√	√	√	SP3753-SP3754
BYD	Song/Song MAX Universal	Integrated body controller B2 (IBCM)	√	√	√	√	√	√	√	SP3755-SP3766
BYD	Song/Song MAX Universal	Integrated body controller B1 (IBCM)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	4G (4G)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Air Conditioning Controller (ACB)/A	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Air Conditioning Controller (ACB)/A	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Front automatic air conditioning co	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Rear automatic air conditioning cor	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Rear automatic air conditioning cor	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Tire Pressure Management Module (TP	√	√	√	√	√	√	√	SP3767-SP3770
BYD	Song/Song MAX Universal	Tire Pressure Management Module (TP	√	√	√	√	√	√	√	SP3771-SP3774
BYD	Song/Song MAX Universal	External power amplifier (AMP)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Electric back door (BD ECU)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Combination switch (CS)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Door Multiplex Controller (DMCU)/Do	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Door multi-channel controller (DMCU)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Left front combination lamp (FL L)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Right front combination lamp (FL R)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Panorama ECU (FVC)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Combination Instrument (INS)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Voice Noise Reduction (VNR)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Inside rearview mirror (IRVM)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Multimedia Power (MBC)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Multimedia	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Multimedia Panel (M P)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Display bracket assembly (PH)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Light Switch Group (LCS)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Parking Assist System (PAS)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Green Clean System (PM2.5)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Main driver's seat adjustment switc	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Front passenger seat adjustment swi	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Main driving seat (SECU001)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Front passenger seat (SECU002)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Sunroof Controller (SRM)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Sunroof Sunshade Motor (SSM)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Steering Wheel Switch (SWS)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Driving Recorder (VTDR)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	NFC Control Module (NCM)	√	√	√	√	√	√	√	
BYD	Song/Song MAX Universal	Multi-Function Video Controller (MF	√	√	√	√	√	√	√	SP3775-SP3784
BYD	Song/Song MAX Universal	Adaptive Cruise (MRR)	√	√	√	√	√	√	√	SP3785-SP3787
BYD	Song/Song MAX Universal	Blind Spot Monitoring (BSD)	√	√	√	√	√	√	√	SP3788
BYD	Song/Song MAX Universal	Gateway (GW)	√	√	√	√	√	√	√	
BYD	Song/Song Fuel Edition General Purpose	Engine Management System (ECM)/1.5T	√	√	√	√	√	√	√	SP3789
BYD	Song/Song Fuel Edition General Purpose	Engine Management System (ECM)/1.5T	√	√	√	√	√	√	√	SP3790
BYD	Song/Song Fuel Edition General Purpose	Engine Management System (ECM)/2.0T	√	√	√	√	√	√	√	SP3791
BYD	Song/Song Fuel Edition General Purpose	Wet dual clutch transmission (TCU)	√	√	√	√	√	√	√	SP3792-SP3803
BYD	Song/Song Fuel Edition General Purpose	Electronic Body Stability System (E	√	√	√	√	√	√	√	SP3804-SP3809
BYD	Song/Song Fuel Edition General Purpose	Power Steering (Lianchuang) (EPS)	√	√	√	√	√	√	√	SP3810-SP3811
BYD	Song/Song Fuel Edition General Purpose	Electronic Parking System (Sark) (E	√	√	√	√	√	√	√	
BYD	Song/Song Fuel Edition General Purpose	Gear position actuator (SCU)	√	√	√	√	√	√	√	
BYD	Song/Song Fuel Edition General Purpose	Body Controller (BCM)	√	√	√	√	√	√	√	
BYD	Song/Song Fuel Edition General Purpose	Steering shaft lock (ECL)	√	√	√	√	√	√	√	
BYD	Song/Song Fuel Edition General Purpose	Intelligent Key (IKey)	√	√	√	√	√	√	√	
BYD	Song/Song Fuel Edition General Purpose	Airbag (SRS)/Airbag (SRS)	√	√	√	√	√	√	√	SP3812
BYD	Song/Song Fuel Edition General Purpose	Airbag (SRS)/Airbag (third generati	√	√	√	√	√	√	√	SP3813
BYD	Song/Song Fuel Edition General Purpose	Combination Instrument (INS)	√	√	√	√	√	√	√	
BYD	Song/Song Fuel Edition General Purpose	Air Conditioning Controller (ACB)	√	√	√	√	√	√	√	
BYD	Song/Song Fuel Edition General Purpose	Air Conditioning Control Panel (ACC	√	√	√	√	√	√	√	
BYD	Song/Song Fuel Edition General Purpose	Tire Pressure Management Module (TP	√	√	√	√	√	√	√	SP3814-SP3817
BYD	Song/Song Fuel Edition General Purpose	Tire Pressure Management Module (TP	√	√	√	√	√	√	√	SP3818-SP3821
BYD	Song/Song Fuel Edition General Purpose	Tire Pressure Management Module (TP	√	√	√	√	√	√	√	SP3822-SP3825
BYD	Song/Song Fuel Edition General Purpose	Panoramic Steering Wheel Switch (SH	√	√	√	√	√	√	√	
BYD	Song/Song Fuel Edition General Purpose	4G communication module (4G)	√	√	√	√	√	√	√	
BYD	Song/Song Fuel Edition General Purpose	Combination switch (CS)	√	√	√	√	√	√	√	
BYD	Song/Song Fuel Edition General Purpose	Front left gate (DCU FL)	√	√	√	√	√	√	√	
BYD	Song/Song Fuel Edition General Purpose	Right front door control (DCU FR)	√	√	√	√	√	√	√	
BYD	Song/Song Fuel Edition General Purpose	Door multiple controller (DMCU)	√	√	√	√	√	√	√	
BYD	Song/Song Fuel Edition General Purpose	Panoramic system (FV)/panoramic MCI	√	√	√	√	√	√	√	
BYD	Song/Song Fuel Edition General Purpose	Panoramic system (FV)/panoramic DSF	√	√	√	√	√	√	√	

BYD	Song/Song Pro	Fuel Edition General Purpose	Combination Instrument (Desai) (INS)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Combination Instrument (BYD) (INS)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Air Conditioning Controller (ACB)/A	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Air Conditioning Controller (ACB)/A	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Tire Pressure Monitoring Module (TP)	✓	✓	✓	✓	✓	✓	SP4031-SP4038
BYD	Song/Song Pro	Fuel Edition General Purpose	Tire Pressure Monitoring Module (TP)	✓	✓	✓	✓	✓	✓	SP4039-SP4046
BYD	Song/Song Pro	Fuel Edition General Purpose	Tire Pressure Monitoring Module (TP)	✓	✓	✓	✓	✓	✓	SP4047-SP4054
BYD	Song/Song Pro	Fuel Edition General Purpose	External power amplifier (AMP)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Center Console Switch Group (CCS)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Shift control panel assembly (Yangtze R)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Shift control panel assembly (BYD)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Combination switch (Kstar) (CS)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Driving Assist Switch (DAS)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Door multiple controller (Yangtze R)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Panorama MCU (FV)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Multimedia Power (MBC)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Multimedia System (BYD) (Media)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Display bracket assembly (PH)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Parking Assist System (PAS)/Parking	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Parking Assist System (PAS)/Parking	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Wireless charging (WCI)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Green Clean System (PM2.5)/Green Cl	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Green Clean System (PM2.5)/Green Cl	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Main driving seat system (SECU D)	✓	✓	✓	✓	✓	✓	SP4055
BYD	Song/Song Pro	Fuel Edition General Purpose	Sunroof Motor (SRM)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Sunroof Controller (SRM)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Steering Wheel Switch (SWS)/Steerir	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Steering Wheel Switch (SWS)/Steerir	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Electric Back Door (BDECU)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Electric back door (BYD) (BDECU)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	NFC Control Module (NCM)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Driving Recorder (VTDR)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Gateway (GW)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song Pro	Fuel Edition General Purpose	Fiat Pad (FPAD)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song MAX	Upgraded Version Universal Model	Wet Dual Clutch Transmission Contro	✓	✓	✓	✓	✓	✓	SP4056-SP4067
BYD	Song/Song MAX	Upgraded Version Universal Model	Wet dual-clutch transmission contro	✓	✓	✓	✓	✓	✓	SP4068-SP4079
BYD	Song/Song MAX	Upgraded Version Universal Model	EFI UMC National Six (UMC) (ECM)/I	✓	✓	✓	✓	✓	✓	SP4080-SP4089
BYD	Song/Song MAX	Upgraded Version Universal Model	EFI UMC Six (UCM)/1.5TI EFI UMC S	✓	✓	✓	✓	✓	✓	SP4090-SP4099
BYD	Song/Song MAX	Upgraded Version Universal Model	Power Steering (EPS)/Power Steering	✓	✓	✓	✓	✓	✓	SP4100-SP4104
BYD	Song/Song MAX	Upgraded Version Universal Model	Power Steering (EPS)/Power Steering	✓	✓	✓	✓	✓	✓	SP4105
BYD	Song/Song MAX	Upgraded Version Universal Model	Electronic Parking System (Sark) (E	✓	✓	✓	✓	✓	✓	SP4106-SP4109
BYD	Song/Song MAX	Upgraded Version Universal Model	Electronic Body Stability System (E	✓	✓	✓	✓	✓	✓	SP4110-SP4119
BYD	Song/Song MAX	Upgraded Version Universal Model	Gear actuator (Qingchang) (SCU) Qing	✓	✓	✓	✓	✓	✓	
BYD	Song/Song MAX	Upgraded Version Universal Model	Adaptive Cruise System (Bosch) (MR	✓	✓	✓	✓	✓	✓	SP4120-SP4122
BYD	Song/Song MAX	Upgraded Version Universal Model	Multifunctional Video Controller (E	✓	✓	✓	✓	✓	✓	SP4123-SP4126
BYD	Song/Song MAX	Upgraded Version Universal Model	Blind Spot Monitoring (Hella) (BSD)	✓	✓	✓	✓	✓	✓	SP4127
BYD	Song/Song MAX	Upgraded Version Universal Model	NFC control module (BYD) (NCM)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song MAX	Upgraded Version Universal Model	Steering wheel angle sensor (KSD)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song MAX	Upgraded Version Universal Model	Gear Sensor (BYD) (SCU)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song MAX	Upgraded Version Universal Model	Tire Pressure Management Module (Ba	✓	✓	✓	✓	✓	✓	SP4128-SP4131
BYD	Song/Song MAX	Upgraded Version Universal Model	Integrated body controller B1 (BYD)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song MAX	Upgraded Version Universal Model	Integrated body controller B2 (BYD)	✓	✓	✓	✓	✓	✓	SP4132-SP4139
BYD	Song/Song MAX	Upgraded Version Universal Model	Steering shaft lock (BYD) (ECL)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song MAX	Upgraded Version Universal Model	Left front combination lamp (BYD)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song MAX	Upgraded Version Universal Model	Right front combination lamp (BYD)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song MAX	Upgraded Version Universal Model	Steering wheel switch (BYD) (SWS)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song MAX	Upgraded Version Universal Model	Door multiple controller (BYD) (DMC	✓	✓	✓	✓	✓	✓	
BYD	Song/Song MAX	Upgraded Version Universal Model	Combination switch (KOSTAL) (CS KOS	✓	✓	✓	✓	✓	✓	
BYD	Song/Song MAX	Upgraded Version Universal Model	Combination Instrument (BYD) (INS)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song MAX	Upgraded Version Universal Model	Sunroof Controller (BYD) (SRM)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song MAX	Upgraded Version Universal Model	Sunroof sunshade motor (BYD) (SSM)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song MAX	Upgraded Version Universal Model	PM2.5 Green Clean System (BYD) (PM2	✓	✓	✓	✓	✓	✓	
BYD	Song/Song MAX	Upgraded Version Universal Model	Display bracket assembly (BYD) (ES)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song MAX	Upgraded Version Universal Model	Multimedia (BYD) (Media)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song MAX	Upgraded Version Universal Model	External power amplifier (BYD) (AMP)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song MAX	Upgraded Version Universal Model	Airbag (new) (BYD) (SRS)	✓	✓	✓	✓	✓	✓	SP4140-SP4141
BYD	Song/Song MAX	Upgraded Version Universal Model	Rear automatic air conditioning cor	✓	✓	✓	✓	✓	✓	
BYD	Song/Song MAX	Upgraded Version Universal Model	Rear automatic air conditioning cor	✓	✓	✓	✓	✓	✓	
BYD	Song/Song MAX	Upgraded Version Universal Model	Main driving seat (BYD) (SECU001)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song MAX	Upgraded Version Universal Model	Main driver seat adjustment switch	✓	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS	Universal	Left blind spot monitoring (Winning)	✓	✓	✓	✓	✓	✓	SP4142-SP4145
BYD	Song/Song PLUS	Universal	Right blind spot monitoring (Winnir	✓	✓	✓	✓	✓	✓	SP4146-SP4149
BYD	Song/Song PLUS	Universal	Left front combination lamp (BYD)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS	Universal	Right front combination lamp (BYD)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS	Universal	Tire Pressure Management Module (Ba	✓	✓	✓	✓	✓	✓	SP4150-SP4153
BYD	Song/Song PLUS	Universal	Left blind spot monitoring (BYD) (E	✓	✓	✓	✓	✓	✓	SP4154-SP4155
BYD	Song/Song PLUS	Universal	Right blind spot monitoring (BYD)	✓	✓	✓	✓	✓	✓	SP4156-SP4157
BYD	Song/Song PLUS	Universal	Multifunction Video Controller (MPV)	✓	✓	✓	✓	✓	✓	SP4158-SP4164
BYD	Song/Song PLUS	Universal	Multifunctional Video Controller (M	✓	✓	✓	✓	✓	✓	SP4165-SP4170
BYD	Song/Song PLUS	Universal	Engine (ECM)/1.5TID EFI UMC Natio	✓	✓	✓	✓	✓	✓	SP4171-SP4179
BYD	Song/Song PLUS	Universal	Engine (ECM)/Engine Controller [1.5	✓	✓	✓	✓	✓	✓	SP4180-SP4189
BYD	Song/Song PLUS	Universal	Electronic Parking System (Sark) (E	✓	✓	✓	✓	✓	✓	SP4190-SP4192
BYD	Song/Song PLUS	Universal	Power steering EPS (Ensk) (EPS NSK)	✓	✓	✓	✓	✓	✓	SP4193
BYD	Song/Song PLUS	Universal	Electronic Body Stability System (E	✓	✓	✓	✓	✓	✓	SP4194-SP4203
BYD	Song/Song PLUS	Universal	Adaptive Cruise System (Bosch) (MR	✓	✓	✓	✓	✓	✓	SP4204-SP4206
BYD	Song/Song PLUS	Universal	Gear position actuator (SCU)/gear r	✓	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS	Universal	Gear position actuator (SCU)/gear r	✓	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS	Universal	Automatic parking (Desay SV) (IPA I	✓	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS	Universal	Wet dual clutch transmission (BYD)	✓	✓	✓	✓	✓	✓	SP4207-SP4218
BYD	Song/Song PLUS	Universal	NFC control module (BYD) (NCM)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS	Universal	Electric back door (Brose) (BDECU E	✓	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS	Universal	Steering shaft lock (BYD) (ECL)	✓	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS	Universal	Combination switch (KOSTAL) (CS KOS	✓	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS	Universal	Ambient light control module (Bai R	✓	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS	Universal	Door multi-channel controller (Char	✓	✓	✓	✓	✓	✓	
BYD	Song/Song PLUS	Universal	Combination Instrument (INS)/Combin	✓	✓	✓	✓	✓	✓	

BYD	Song/Song PLUS Universal	Combination Instrument (INS)/Combin	√	√	√	√	√		
BYD	Song/Song PLUS Universal	Combination Instrument (INS)/Combin	√	√	√	√	√		
BYD	Song/Song PLUS Universal	Display bracket assembly (BYD) (Pa	√	√	√	√	√		
BYD	Song/Song PLUS Universal	LED dot matrix screen (BYD) (LDD)	√	√	√	√	√		
BYD	Song/Song PLUS Universal	Green Clean System (PM2.5)/Green Cl	√	√	√	√	√		
BYD	Song/Song PLUS Universal	Green Clean System (PM2.5)/Green Cl	√	√	√	√	√		
BYD	Song/Song PLUS Universal	Shift control panel assembly (Chang	√	√	√	√	√		
BYD	Song/Song PLUS Universal	Sunroof Controller (Dechang) (SRM	√	√	√	√	√		
BYD	Song/Song PLUS Universal	Airbag (BYD) (SRS III)	√	√	√	√	√		SP4219-SP4221
BYD	Song/Song PLUS Universal	Steering wheel switch (BYD) (SWS)	√	√	√	√	√		
BYD	Song/Song PLUS Universal	Tire pressure monitoring module (Se	√	√	√	√	√		SP4222-SP4225
BYD	Song/Song PLUS Universal	Wireless Charging (WCT)/Wireless Ch	√	√	√	√	√		
BYD	Song/Song PLUS Universal	Wireless Charging (WCT)/Wireless Ch	√	√	√	√	√		
BYD	Song/Song PLUS Universal	Integrated body controller B1 (BYD)	√	√	√	√	√		
BYD	Song/Song PLUS Universal	Integrated body controller B2 (BYD)	√	√	√	√	√		SP4226-SP4233
BYD	Song/Song PLUS Universal	Multimedia System Android (BYD) (Me	√	√	√	√	√		
BYD	Song/Second Generation Song Pro Universal	Left body domain controller A L2 (B	√	√	√	√	√		SP4234-SP4238
BYD	Song/Second Generation Song Pro Universal	Right body domain controller R2 (B)	√	√	√	√	√		
BYD	Song/Second Generation Song Pro Universal	Rear body domain controller A B1 (B	√	√	√	√	√		
BYD	Song/Second Generation Song Pro Universal	Rear body domain controller A B2 (B	√	√	√	√	√		
BYD	Song/Second Generation Song Pro Universal	Combination switch (KOSTAL) (CS KOS	√	√	√	√	√		
BYD	Song/Second Generation Song Pro Universal	Steering wheel switch (BYD) (SWS)	√	√	√	√	√		
BYD	Song/Second Generation Song Pro Universal	Green Clean System (BYD) (PM2.5)	√	√	√	√	√		
BYD	Song/Second Generation Song Pro Universal	Wireless charging module (WCT)/wire	√	√	√	√	√		
BYD	Song/Second Generation Song Pro Universal	Wireless charging module (WCT)/wire	√	√	√	√	√		
BYD	Song/Second Generation Song Pro Universal	Display bracket assembly (BYD) (Pa	√	√	√	√	√		
BYD	Song/Second Generation Song Pro Universal	Power Steering (Nexteer) (CEPS Next	√	√	√	√	√		SP4239
BYD	Song/Second Generation Song Pro Universal	Airbag (Wiminger) (SRS)	√	√	√	√	√		SP4240-SP4241
BYD	Song/Second Generation Song Pro Universal	Electronic Body Stability System (E	√	√	√	√	√		SP4242-SP4255
BYD	Song/Second Generation Song Pro Universal	Shift control mechanism panel assem	√	√	√	√	√		
BYD	Song/Second Generation Song Pro Universal	Engine Controller [1.5TID] National	√	√	√	√	√		SP4256-SP4265
BYD	Song/Second Generation Song Pro Universal	Wet dual-clutch transmission contro	√	√	√	√	√		SP4266-SP4277
BYD	Song/Second Generation Song Pro Universal	Blind Spot Monitoring (BYD) (BSD)	√	√	√	√	√		SP4278-SP4279
BYD	Song/Second Generation Song Pro Universal	Monitoring from the blind spot (BYD	√	√	√	√	√		SP4280-SP4281
BYD	Song/Second Generation Song Pro Universal	Front millimeter wave radar (FMRR)	√	√	√	√	√		SP4282-SP4283
BYD	Song/Second Generation Song Pro Universal	Front millimeter wave radar (FMRR)	√	√	√	√	√		
BYD	Song/Second Generation Song Pro Universal	Smart Entry Controller (SEC)	√	√	√	√	√		
BYD	Song/Second Generation Song Pro Universal	High frequency receiver module (BYD	√	√	√	√	√		
BYD	Song/Second Generation Song Pro Universal	Multimedia System Android (BYD) (Me	√	√	√	√	√		
BYD	Song/Second Generation Song Pro Universal	Combination Instrument (INS)/Combin	√	√	√	√	√		
BYD	Song/Second Generation Song Pro Universal	Combination Instrument (INS)/Combin	√	√	√	√	√		
BYD	Yuan fuel version general purpose	Engine Controller (ECM)/Engine Cont	√	√	√	√	√		SP4284
BYD	Yuan fuel version general purpose	Engine Controller (ECM)/Engine Cont	√	√	√	√	√		SP4285
BYD	Yuan fuel version general purpose	Engine Controller (ECM)/Engine Cont	√	√	√	√	√		SP4286
BYD	Yuan fuel version general purpose	Engine Controller (ECM)/Engine Cont	√	√	√	√	√		SP4287
BYD	Yuan fuel version general purpose	Dual clutch transmission (TCU)	√	√	√	√	√		SP4288-SP4291
BYD	Yuan fuel version general purpose	Electronic body stability system/wi	√	√	√	√	√		SP4292-SP4297
BYD	Yuan fuel version general purpose	Electronic body stability system/wi	√	√	√	√	√		SP4298-SP4303
BYD	Yuan fuel version general purpose	Electronic Parking System (Sark) (E	√	√	√	√	√		
BYD	Yuan fuel version general purpose	Power Steering (Lianchuang) (EPS)	√	√	√	√	√		SP4304-SP4305
BYD	Yuan fuel version general purpose	Gear position actuator (SCU)	√	√	√	√	√		
BYD	Yuan fuel version general purpose	Body Controller (BCM)	√	√	√	√	√		
BYD	Yuan fuel version general purpose	Steering shaft lock (ECL)	√	√	√	√	√		
BYD	Yuan fuel version general purpose	Intelligent Key (IKey)	√	√	√	√	√		
BYD	Yuan fuel version general purpose	Airbag (third generation) (SRS III)	√	√	√	√	√		SP4306-SP4307
BYD	Yuan fuel version general purpose	Air Conditioning Controller (ACB)	√	√	√	√	√		
BYD	Yuan fuel version general purpose	Air Conditioning Control Panel (ACC	√	√	√	√	√		
BYD	Yuan fuel version general purpose	Tire Pressure Monitoring System (TP	√	√	√	√	√		SP4308-SP4311
BYD	Yuan fuel version general purpose	Tire Pressure Monitoring System (TP	√	√	√	√	√		SP4312-SP4315
BYD	Yuan fuel version general purpose	Tire Pressure Monitoring System (TP	√	√	√	√	√		SP4316-SP4319
BYD	Yuan fuel version general purpose	Left front window controller (DMCU)	√	√	√	√	√		
BYD	Yuan fuel version general purpose	Panoramic Video System (FV)/Panoram	√	√	√	√	√		
BYD	Yuan fuel version general purpose	Panoramic Video System (FV)/Panoram	√	√	√	√	√		
BYD	Yuan fuel version general purpose	Information Station (IS)	√	√	√	√	√		
BYD	Yuan fuel version general purpose	Multimedia	√	√	√	√	√		
BYD	Yuan fuel version general purpose	Multimedia Panel (M P)	√	√	√	√	√		
BYD	Yuan fuel version general purpose	Combination Instrument (INS)	√	√	√	√	√		
BYD	Yuan fuel version general purpose	Occupancy Detection System (OCS)	√	√	√	√	√		SP4320
BYD	Yuan fuel version general purpose	Parking Assist System (PAS)	√	√	√	√	√		
BYD	Yuan fuel version general purpose	Green Clean System (PM2.5)	√	√	√	√	√		
BYD	Yuan fuel version general purpose	Radio	√	√	√	√	√		
BYD	Yuan fuel version general purpose	Sunroof Motor (SRM)	√	√	√	√	√		
BYD	Yuan fuel version general purpose	Sunroof Sunshade Motor (SSM)	√	√	√	√	√		
BYD	Yuan fuel version general purpose	Panoramic Steering Wheel Switch (SM	√	√	√	√	√		
BYD	Yuan fuel version general purpose	4G communication module (4G)	√	√	√	√	√		
BYD	Yuan fuel version general purpose	Vehicle terminal (VT)	√	√	√	√	√		
BYD	Yuan fuel version general purpose	Driving Recorder (VTDR)	√	√	√	√	√		
BYD	Yuan fuel version general purpose	Gateway (GW)	√	√	√	√	√		
BYD	F0 general	Engine Control Module (ECM)/M787 K	√	√	√	√	√		SP4321
BYD	F0 general	Engine Control Module (ECM)/M722 E1	√	√	√	√	√		SP4322
BYD	F0 general	Engine Control Module (ECM)/BU100 E	√	√	√	√	√		
BYD	F0 general	Engine Control Module (ECM)/M1788	√	√	√	√	√		SP4323
BYD	F0 general	Engine Control Module (ECM)/M787 CA	√	√	√	√	√		SP4324
BYD	F0 general	Engine Control Module (ECM)/371 Ele	√	√	√	√	√		SP4325
BYD	F0 general	Transmission Control Unit (Marelli)	√	√	√	√	√		SP4326-SP4341
BYD	F0 general	Wheel Anti-lock Brake System (ABS)	√	√	√	√	√		
BYD	F0 general	Wheel Anti-lock Brake System (ABS)	√	√	√	√	√		
BYD	F0 general	Wheel Anti-lock Braking System (ABS)	√	√	√	√	√		
BYD	F0 general	Body Control Module (BCM)	√	√	√	√	√		
BYD	F0 general	Intelligent Key System (IKey)	√	√	√	√	√		
BYD	F0 general	Airbag (SRS)	√	√	√	√	√		
BYD	F0 general	Combination Instrument (INS)	√	√	√	√	√		
BYD	F3 series	Engine system/LMC M79 engine system	√	√	√	√	√		
BYD	F3 series	Engine system/LMC E0BD engine syste	√	√	√	√	√		
BYD	F3 series	ABS system/Delphi ABS system	√	√	√	√	√		SP4342
BYD	F3 series	Airbag system	√	√	√	√	√		SP4343-SP4344

BYD	F3 series	smart key	✓	✓	✓				
BYD	F3 series	Body control	✓	✓	✓				
BYD	F3 series	Steering shaft lock	✓	✓	✓	✓			
BYD	F3 series	air conditioner	✓	✓	✓	✓			
BYD	F3 series	meter	✓	✓	✓				
BYD	F3 series	Multi-function screen	✓	✓	✓				
BYD	F3 series	Parking assist system	✓	✓	✓				
BYD	F3 series/first generation F3/F3R	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4345
BYD	F3 series/first generation F3/F3R	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4346
BYD	F3 series/first generation F3/F3R	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4347
BYD	F3 series/first generation F3/F3R	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4348-SP4349
BYD	F3 series/first generation F3/F3R	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4350
BYD	F3 series/first generation F3/F3R	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4351-SP4352
BYD	F3 series/first generation F3/F3R	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4353
BYD	F3 series/first generation F3/F3R	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4354
BYD	F3 series/first generation F3/F3R	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4355-SP4363
BYD	F3 series/first generation F3/F3R	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4364-SP4367
BYD	F3 series/first generation F3/F3R	Transmission system (TCD)/Dual clut	✓	✓	✓	✓	✓		SP4364-SP4367
BYD	F3 series/first generation F3/F3R	Transmission system (TCD)/transmiss	✓	✓	✓	✓	✓		
BYD	F3 series/first generation F3/F3R	Wheel Anti-lock Brake System (ABS)	✓	✓	✓	✓	✓		SP4368
BYD	F3 series/first generation F3/F3R	Wheel Anti-lock Braking System (ABS)/Wheel A	✓	✓	✓	✓	✓		SP4369
BYD	F3 series/first generation F3/F3R	Wheel Anti-lock Brake System (ABS)	✓	✓	✓	✓	✓		SP4370-SP4371
BYD	F3 series/first generation F3/F3R	Wheel Anti-lock Brake System (ABS)	✓	✓	✓	✓	✓		SP4372-SP4373
BYD	F3 series/first generation F3/F3R	Wheel Anti-lock Brake System (ABS)	✓	✓	✓	✓	✓		
BYD	F3 series/first generation F3/F3R	Wheel Anti-lock Brake System (ABS)	✓	✓	✓	✓	✓		SP4374-SP4381
BYD	F3 series/first generation F3/F3R	Power Steering (EPS)	✓	✓	✓	✓	✓		SP4382-SP4391
BYD	F3 series/first generation F3/F3R	Combination Instrument (INS)	✓	✓	✓	✓	✓		
BYD	F3 series/first generation F3/F3R	Tire Pressure Management Module (Se	✓	✓	✓	✓	✓		SP4392-SP4395
BYD	F3 series/first generation F3/F3R	Airbag (SRS)	✓	✓	✓	✓	✓		
BYD	F3 series/second generation F3	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4396
BYD	F3 series/second generation F3	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4397-SP4398
BYD	F3 series/second generation F3	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4399
BYD	F3 series/second generation F3	Engine Controller (ECM)/M787 CAN EF	✓	✓	✓	✓	✓		SP4400
BYD	F3 series/second generation F3	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4401
BYD	F3 series/second generation F3	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4402
BYD	F3 series/second generation F3	Dual clutch transmission (TCU)	✓	✓	✓	✓	✓		SP4403-SP4406
BYD	F3 series/second generation F3	Wheel anti-lock brake system/body s	✓	✓	✓	✓	✓		SP4407-SP4412
BYD	F3 series/second generation F3	Wheel anti-lock brake system/body s	✓	✓	✓	✓	✓		SP4413
BYD	F3 series/second generation F3	Power Steering System (EPS)	✓	✓	✓	✓	✓		SP4414-SP4417
BYD	F3 series/second generation F3	Body Control Module (BCM)	✓	✓	✓	✓	✓		
BYD	F3 series/second generation F3	Steering shaft lock (ECL)	✓	✓	✓	✓	✓		
BYD	F3 series/second generation F3	Intelligent Key System (IKey)	✓	✓	✓	✓	✓		
BYD	F3 series/second generation F3	Airbag (SRS)/Airbag (SRS)	✓	✓	✓	✓	✓		SP4418
BYD	F3 series/second generation F3	Airbag (SRS)/Airbag (third generati	✓	✓	✓	✓	✓		SP4419
BYD	F3 series/second generation F3	Airbag (SRS)/Airbag K(SRS)	✓	✓	✓	✓	✓		
BYD	F3 series/second generation F3	Combination Instrument (INS)	✓	✓	✓	✓	✓		
BYD	F3 series/second generation F3	Parking Assist System (PAS)	✓	✓	✓	✓	✓		
BYD	F3 series/second generation F3	Gateway (GW)	✓	✓	✓	✓	✓		
BYD	F3 series/third generation F3	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		
BYD	F3 series/third generation F3	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4420
BYD	F3 series/third generation F3	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4421
BYD	F3 series/third generation F3	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4422
BYD	F3 series/third generation F3	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4423-SP4424
BYD	F3 series/third generation F3	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4425
BYD	F3 series/third generation F3	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4426
BYD	F3 series/third generation F3	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4427
BYD	F3 series/third generation F3	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4428
BYD	F3 series/third generation F3	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4429
BYD	F3 series/third generation F3	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4430-SP4439
BYD	F3 series/third generation F3	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4440-SP4449
BYD	F3 series/third generation F3	Transmission system (TCU)/Dual clut	✓	✓	✓	✓	✓		SP4450-SP4453
BYD	F3 series/third generation F3	Transmission System (TCU)/Transmiss	✓	✓	✓	✓	✓		SP4454-SP4461
BYD	F3 series/third generation F3	Anti-lock brake system/body stabili	✓	✓	✓	✓	✓		SP4462-SP4467
BYD	F3 series/third generation F3	Anti-lock brake system/body stabili	✓	✓	✓	✓	✓		
BYD	F3 series/third generation F3	Body Control Module (BCM)	✓	✓	✓	✓	✓		
BYD	F3 series/third generation F3	Steering shaft lock (ECL)	✓	✓	✓	✓	✓		
BYD	F3 series/third generation F3	Intelligent Key System (IKey)	✓	✓	✓	✓	✓		
BYD	F3 series/third generation F3	Airbag (SRS)/Airbag (SRS)	✓	✓	✓	✓	✓		SP4468-SP4469
BYD	F3 series/third generation F3	Airbag (SRS)/Airbag (third generati	✓	✓	✓	✓	✓		SP4470-SP4471
BYD	F3 series/third generation F3	Combination Instrument (INS)	✓	✓	✓	✓	✓		
BYD	F3 series/third generation F3	Air Conditioning Controller (ACB)	✓	✓	✓	✓	✓		
BYD	F3 series/third generation F3	Tire Pressure Management Module (TP	✓	✓	✓	✓	✓		SP4472-SP4475
BYD	F3 series/third generation F3	Tire Pressure Management Module (TP	✓	✓	✓	✓	✓		SP4476-SP4479
BYD	F3 series/third generation F3	Door multiple controller (DMCU)	✓	✓	✓	✓	✓		
BYD	F3 series/third generation F3	Multi-function display (MDS)	✓	✓	✓	✓	✓		
BYD	F3 series/third generation F3	Parking Assist System (PAS)	✓	✓	✓	✓	✓		
BYD	F3 series/third generation F3	Driving Recorder (VTDR)	✓	✓	✓	✓	✓		
BYD	F3 series/third generation F3	Gateway (GW)	✓	✓	✓	✓	✓		
BYD	F6	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4480
BYD	F6	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		
BYD	F6	Engine controller (ECM)/OBD diagnos	✓	✓	✓	✓	✓		
BYD	F6	Transmission Controller (TCU)/Conti	✓	✓	✓	✓	✓		
BYD	F6	Transmission Controller (TCU)/Trans	✓	✓	✓	✓	✓		
BYD	F6	Wheel Anti-lock Braking System (ABS)	✓	✓	✓	✓	✓		
BYD	F6	Wheel anti-lock brake system (ABS)	✓	✓	✓	✓	✓		
BYD	F6	Wheel Anti-lock Braking System (ABS)	✓	✓	✓	✓	✓		
BYD	F6	Airbag (SRS)	✓	✓	✓	✓	✓		SP4481
BYD	F6	Body Controller (BCM)	✓	✓	✓	✓	✓		
BYD	F6	Combination Instrument (INS)	✓	✓	✓	✓	✓		
BYD	F6	Air Conditioning Controller (ACB)	✓	✓	✓	✓	✓		
BYD	F6	Combination switch (CS)	✓	✓	✓	✓	✓		
BYD	F6	Door multiple controller (DMCU)	✓	✓	✓	✓	✓		
BYD	F6	Front compartment power distributic	✓	✓	✓	✓	✓		
BYD	F6	Gateway (GW)	✓	✓	✓	✓	✓		
BYD	S6 universal	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4482
BYD	S6 universal	Engine Controller (ECM)/Engine Cont	✓	✓	✓	✓	✓		SP4483

BYD	M6 universal	Automatic Transmission (TCU)/Dual Clutch	✓	✓	✓	✓	✓	
BYD	M6 universal	Automatic transmission (TCU)/wet disc	✓	✓	✓	✓	✓	SP4761-SP4772
BYD	M6 universal	Automatic Transmission (TCU)/Transmission	✓	✓	✓	✓	✓	
BYD	M6 universal	Wheel Anti-lock Brake System/Electronic	✓	✓	✓	✓	✓	
BYD	M6 universal	Wheel anti-lock brake system/electronic	✓	✓	✓	✓	✓	
BYD	M6 universal	Wheel Anti-lock Brake System/Electronic	✓	✓	✓	✓	✓	SP4773-SP4778
BYD	M6 universal	Body Controller (BCM)	✓	✓	✓	✓	✓	
BYD	M6 universal	Steering shaft lock (ECL)	✓	✓	✓	✓	✓	
BYD	M6 universal	Intelligent Key (IKey)	✓	✓	✓	✓	✓	
BYD	M6 universal	Airbag (SRS)	✓	✓	✓	✓	✓	SP4779
BYD	M6 universal	Combination Instrument (INS)	✓	✓	✓	✓	✓	
BYD	M6 universal	Air Conditioning Controller (ACB)	✓	✓	✓	✓	✓	
BYD	M6 universal	Combination switch (CS)	✓	✓	✓	✓	✓	
BYD	M6 universal	Door multiple controller (DMCU)	✓	✓	✓	✓	✓	
BYD	M6 universal	Panoramic image (FV)/panoramic MCU	✓	✓	✓	✓	✓	
BYD	M6 universal	Panoramic video (FV)/panoramic DSP	✓	✓	✓	✓	✓	
BYD	M6 universal	Multi-function display (MDS)	✓	✓	✓	✓	✓	
BYD	M6 universal	Left Power Sliding Door (LSD)	✓	✓	✓	✓	✓	
BYD	M6 universal	Right electric sliding door (RSD)	✓	✓	✓	✓	✓	
BYD	M6 universal	Parking Assist System (PAS)	✓	✓	✓	✓	✓	
BYD	M6 universal	Front compartment power distribution	✓	✓	✓	✓	✓	
BYD	M6 universal	Panoramic Steering Wheel Switch (SW)	✓	✓	✓	✓	✓	
BYD	M6 universal	Gateway (GW)	✓	✓	✓	✓	✓	
BYD	L3 universal	Engine Controller (ECM)/Engine Control	✓	✓	✓	✓	✓	SP4780
BYD	L3 universal	Engine Controller (ECM)/Engine Control	✓	✓	✓	✓	✓	SP4781
BYD	L3 universal	Engine Controller (ECM)/Engine Control	✓	✓	✓	✓	✓	SP4782
BYD	L3 universal	Engine Controller (ECM)/Engine Control	✓	✓	✓	✓	✓	SP4783
BYD	L3 universal	Engine Controller (ECM)/Engine Control	✓	✓	✓	✓	✓	SP4784
BYD	L3 universal	Engine Controller (ECM)/Engine Control	✓	✓	✓	✓	✓	SP4785
BYD	L3 universal	Transmission system (TCU)/Dual clutch	✓	✓	✓	✓	✓	SP4786-SP4789
BYD	L3 universal	Transmission system (TCU)/transmission	✓	✓	✓	✓	✓	
BYD	L3 universal	Wheel Anti-lock Braking System (ABS)	✓	✓	✓	✓	✓	SP4790-SP4791
BYD	L3 universal	Wheel anti-lock brake system (ABS)	✓	✓	✓	✓	✓	
BYD	L3 universal	Wheel Anti-lock Brake System (ABS)	✓	✓	✓	✓	✓	
BYD	L3 universal	Wheel Anti-lock Braking System (ABS)	✓	✓	✓	✓	✓	
BYD	L3 universal	Body Control Module (BCM)	✓	✓	✓	✓	✓	
BYD	L3 universal	Steering shaft lock (ECL)	✓	✓	✓	✓	✓	
BYD	L3 universal	Intelligent Key System (IKey)	✓	✓	✓	✓	✓	
BYD	L3 universal	Airbag (SRS)	✓	✓	✓	✓	✓	SP4792
BYD	L3 universal	Combination Instrument (INS)	✓	✓	✓	✓	✓	
BYD	L3 universal	Parking Assist System (PAS)	✓	✓	✓	✓	✓	
BYD	L3 universal	Gateway (GW)	✓	✓	✓	✓	✓	
BYD	Flyer	Engine system	✓	✓	✓	✓	✓	
BYD	Flyer	Anti-lock brake system	✓	✓	✓	✓	✓	SP4793-SP4796
BYD	Flyer	Airbag system	✓	✓	✓	✓	✓	SP4797-SP4798
BYD	Flyer	Engine system	✓	✓	✓	✓	✓	
BYD	Flyer	Anti-lock brake system	✓	✓	✓	✓	✓	SP4799-SP4802
BYD	Flyer	Airbag system	✓	✓	✓	✓	✓	SP4803-SP4804
BYD	Flyer	Engine system	✓	✓	✓	✓	✓	
BYD	Flyer	Anti-lock brake system	✓	✓	✓	✓	✓	SP4805-SP4808
BYD	Flyer	Airbag system	✓	✓	✓	✓	✓	SP4809-SP4810

Special Functions List

No.	Functions Name	System Name
SP0000	VIN self-learning	1.5TID Electronic Injection (ECM)
SP0001	Vacuum pump working time is cleared	1.5TID Electronic Injection (ECM)
SP0002	Gear action adaptive	Dual clutch transmission (TCU)
SP0003	Clutch adaptive	Dual clutch transmission (TCU)
SP0004	Slope sensor adaptive	Dual clutch transmission (TCU)
SP0005	Transmission adaptive	Dual clutch transmission (TCU)
SP0006	Tilt calibration	Drive Motor Controller (ECN)
SP0007	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP0008	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP0009	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP0010	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP0011	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP0012	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP0013	Factory calibration of battery pack	Battery Management System (BMS)
SP0014	Battery pack actual calibration	Battery Management System (BMS)
SP0015	Read the current zero point of the torque sensor	Power Steering (EPS)
SP0016	Set the current torque sensor sampling value to zero	Power Steering (EPS)

SP0017	Read the current zero point of the steering wheel angle sensor	Power Steering (EPS)
SP0018	Set the current steering wheel angle sensor sampling value to zero	Power Steering (EPS)
SP0019	ECU unlock	Airbag (SRS)
SP0020	Left front wheel matching	Tire Pressure Management Module (TPMS)
SP0021	Right front wheel matching	Tire Pressure Management Module (TPMS)
SP0022	Left rear wheel matching	Tire Pressure Management Module (TPMS)
SP0023	Right rear wheel matching	Tire Pressure Management Module (TPMS)
SP0024	Electric column calibration	Electric steering column (PTECU)
SP0025	Main driver seat calibration	Main driver's seat (SECU_D)
SP0026	VIN self-learning	1.5TID Electronic Injection (ECM)
SP0027	Vacuum pump working time is cleared	1.5TID Electronic Injection (ECM)
SP0028	Tilt calibration	Drive Motor Controller (ECN)
SP0029	Gear action adaptive	Transmission Controller (TCU)
SP0030	Clutch adaptive	Transmission Controller (TCU)
SP0031	Slope sensor adaptive	Transmission Controller (TCU)
SP0032	Transmission adaptive	Transmission Controller (TCU)
SP0033	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP0034	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP0035	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP0036	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP0037	Yaw rate sensor calibration	Electronic Body Stability System (ESP)

SP0038	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP0039	Read the current zero point of the torque sensor	Power Steering (EPS)
SP0040	Set the current torque sensor sampling value to zero	Power Steering (EPS)
SP0041	Read the current zero point of the steering wheel angle sensor	Power Steering (EPS)
SP0042	Set the current steering wheel angle sensor sampling value to zero	Power Steering (EPS)
SP0043	Factory calibration of battery pack	Battery Management System (BMS)
SP0044	Battery pack actual calibration	Battery Management System (BMS)
SP0045	ECU unlock	Airbag (SRS)
SP0046	Left front wheel matching	Tire Pressure Management Module (TPMS)
SP0047	Right front wheel matching	Tire Pressure Management Module (TPMS)
SP0048	Left rear wheel matching	Tire Pressure Management Module (TPMS)
SP0049	Right rear wheel matching	Tire Pressure Management Module (TPMS)
SP0050	Electric column calibration	Electric steering column (PTECU)
SP0051	Main driver seat calibration	Main driver's seat (SECU_D)
SP0052	VIN self-learning	Engine Controller_1.5TID (ECM)
SP0053	Vacuum pump working time is cleared	Engine Controller_1.5TID (ECM)
SP0054	Engine oil level learning	Engine Controller_1.5TID (ECM)
SP0055	Gear action adaptive	Transmission Controller_Dry Type (TCU)
SP0056	Clutch adaptive	Transmission Controller Dry Type (TCU)

SP0057	Slope sensor adaptive	Transmission Controller_Dry Type (TCU)
SP0058	Transmission adaptive	Transmission Controller_Dry Type (TCU)
SP0059	Tilt calibration	Drive Motor Controller (ECN)
SP0060	Cruise calibration	Drive Motor Controller (ECN)
SP0061	Adaptive cruise calibration	Drive Motor Controller (ECN)
SP0062	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP0063	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP0064	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP0065	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP0066	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP0067	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP0068	Angle zero calibration	Power Steering (EPS)
SP0069	Torque zero calibration	Power Steering (EPS)
SP0070	Gradient sensor calibration	Electronic Parking (Sark) (EPB)
SP0071	Factory calibration of battery pack	Battery Management System_Sanyuan 60 (BMS60)
SP0072	Battery pack actual calibration	Battery Management System_Sanyuan 60 (BMS60)
SP0073	Factory calibration of battery pack	Battery Management System_Sanyuan 80 (BMS80)
SP0074	Battery pack actual calibration	Battery Management System_Sanyuan 80 (BMS80)
SP0075	Factory calibration of battery pack	Battery Management System_Sanyuan 100 (BMS100)
SP0076	Battery pack actual calibration	Battery Management System_Sanyuan 100 (BMS100)

SP0077	Electric column calibration	Electric steering column system (PTECU)
SP0078	Main driver seat calibration	Main driving seat system (SECU_D)
SP0079	ECU unlock	Airbag (SRS)
SP0080	Warning light test	Airbag (SRS)
SP0081	Left front wheel matching	Tire Pressure Management Module (TPMS)
SP0082	Right front wheel matching	Tire Pressure Management Module (TPMS)
SP0083	Left rear wheel matching	Tire Pressure Management Module (TPMS)
SP0084	Right rear wheel matching	Tire Pressure Management Module (TPMS)
SP0085	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP0086	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP0087	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP0088	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP0089	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP0090	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP0091	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP0092	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP0093	VIN self-learning	Engine Controller_1.5TID (ECM_1.5TID)
SP0094	Vacuum pump working time is cleared	Engine Controller_1.5TID (ECM_1.5TID)
SP0095	Engine oil level learning	Engine Controller_1.5TID (ECM_1.5TID)
SP0096	VIN self-learning	Engine Controller_[1.5TID] National Six (ECM 1.5TID)
SP0097	Vacuum pump working time is cleared	Engine Controller_[1.5TID] National Six (ECM_1.5TID)
SP0098	Engine oil level learning	Engine Controller_[1.5TID] National Six (ECM 1.5TID)
SP0099	Enter GPF parking regeneration mode	Engine Controller_[1.5TID] National Six (ECM_1.5TID)

SP0100	Exit the activated GPF active regeneration calibration	Engine Controller_[1.5TID] National Six (ECM_1.5TID)
SP0101	Clear the accumulated carbon amount to zero	Engine Controller_[1.5TID] National Six (ECM_1.5TID)
SP0102	Clear the self-learning value of the GPF differential pressure sensor	Engine Controller_[1.5TID] National Six (ECM_1.5TID)
SP0103	Reset the amount of accumulated ash to zero	Engine Controller_[1.5TID] National Six (ECM_1.5TID)
SP0104	The first step is to use the old ECU	Engine Controller_[1.5TID] National Six (ECM_1.5TID)
SP0105	The second step is to replace the new ECU and start the calibration	Engine Controller_[1.5TID] National Six (ECM_1.5TID)
SP0106	The third step is to query the calibration results	Engine Controller_[1.5TID] National Six (ECM_1.5TID)
SP0107	Gear action adaptive	Dual Clutch Transmission Controller_20(TCU)
SP0108	Clutch adaptive	Dual Clutch Transmission Controller 20(TCU)
SP0109	Slope sensor adaptive	Dual Clutch Transmission Controller_20(TCU)
SP0110	Transmission adaptive	Dual Clutch Transmission Controller_20(TCU)
SP0111	Gear action adaptive	Dry dual clutch transmission controller (TCU)
SP0112	Clutch adaptive	Dry dual clutch transmission controller (TCU)
SP0113	Slope sensor adaptive	Dry dual clutch transmission controller (TCU)
SP0114	Transmission adaptive	Dry dual clutch transmission controller (TCU)
SP0115	80 ternary battery pack	Vehicle Controller (VCU)
SP0116	60 ternary battery pack	Vehicle Controller (VCU)
SP0117	50 ternary battery pack	Vehicle Controller (VCU)

SP0118	Cruise calibration	Vehicle Controller (VCU)
SP0119	Adaptive cruise calibration	Vehicle Controller (VCU)
SP0120	Tilt calibration	Vehicle Controller (VCU)
SP0121	Tilt calibration	Front Drive Motor Controller (FMCU)
SP0122	Cruise calibration	Front Drive Motor Controller (FMCU)
SP0123	Adaptive cruise calibration	Front Drive Motor Controller (FMCU)
SP0124	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP0125	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP0126	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP0127	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP0128	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP0129	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP0130	ECU reset	Electronic Body Stability System (ESP)
SP0131	Tire pressure reset	Electronic Body Stability System (ESP)
SP0132	Angle zero calibration	Electric Power Steering_EPS (Tianhe) (EPS)
SP0133	Write comfort configuration	Electric Power Steering_EPS (Tianhe) (EPS)
SP0134	Write elite configuration	Electric Power Steering_EPS (Tianhe) (EPS)
SP0135	Write premium configuration	Electric Power Steering_EPS (Tianhe) (EPS)
SP0136	Write flagship configuration	Electric Power Steering_EPS (Tianhe) (EPS)
SP0137	Write comfort configuration	Electric Power Steering_EPS (Tianhe) (EPS)
SP0138	Write reserve configuration	Electric Power Steering_EPS (Tianhe) (EPS)
SP0139	Write premium configuration	Electric Power Steering_EPS (Tianhe) (EPS)
SP0140	Write flagship configuration	Electric Power Steering_EPS (Tianhe) (EPS)
SP0141	Write open LKA configuration	Electric Power Steering_EPS (Tianhe) (EPS)

SP0142	Angle zero calibration	Electric power steering_EPS (Mobis) (EPS_MOBIS)
SP0143	Gradient sensor calibration	Electronic Parking System (Sark) (EPB)
SP0144	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP0145	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP0146	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP0147	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP0148	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP0149	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP0150	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP0151	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP0152	Write 2018 flagship configuration	Adaptive Cruise System (MRR)
SP0153	Write 2019 flagship configuration	Adaptive Cruise System (MRR)
SP0154	Write flagship Y	Adaptive Cruise System (MRR)
SP0155	Initial dynamic calibration	Multi-Function Video Controller (MPC)
SP0156	Write 2018 flagship configuration	Multi-Function Video Controller (MPC)
SP0157	Write 2019 flagship configuration	Multi-Function Video Controller (MPC)
SP0158	Write 2020 flagship configuration	Multi-Function Video Controller (MPC)
SP0159	Static calibration	Multi-Function Video Controller (MPC)
SP0160	Write 2019 flagship configuration	Blind Spot Monitoring (BSD)
SP0161	Write flagship Y	Blind Spot Monitoring (BSD)
SP0162	Factory calibration of battery pack	Battery Management System_Sanyuan 50 (BMS50)
SP0163	Battery pack actual calibration	Battery Management System_Sanyuan 50 (BMS50)

SP0164	One-button battery heating active test	Battery Management System_Sanyuan 80 (BMS80)
SP0165	One-button battery heating active test off	Battery Management System_Sanyuan 80 (BMS80)
SP0166	Factory calibration of battery pack	Battery Management System_Sanyuan 80 (BMS80)
SP0167	Battery pack actual calibration	Battery Management System_Sanyuan 80 (BMS80)
SP0168	ECU unlock	Airbag (SRS)
SP0169	Warning light test	Airbag (SRS)
SP0170	Left front wheel matching	Integrated body controller (BCM)
SP0171	Right front wheel matching	Integrated body controller (BCM)
SP0172	Left rear wheel matching	Integrated body controller (BCM)
SP0173	Right rear wheel matching	Integrated body controller (BCM)
SP0174	Left front wheel matching	Integrated body controller (BCM)
SP0175	Right front wheel matching	Integrated body controller (BCM)
SP0176	Left rear wheel matching	Integrated body controller (BCM)
SP0177	Right rear wheel matching	Integrated body controller (BCM)
SP0178	Main driver seat calibration	Main driver's seat (SECU_D)
SP0179	VIN self-learning	Engine Controller_[1.5NA] National VI (BYD) (ECM)
SP0180	Vacuum pump working time is cleared	Engine Controller_[1.5NA] National VI (BYD) (ECM)
SP0181	Enter GPF parking regeneration mode	Engine Controller_[1.5NA] National VI (BYD) (ECM)
SP0182	Exit the activated GPF active regeneration calibration	Engine Controller_[1.5NA] National VI (BYD) (ECM)

SP0183	Clear the accumulated carbon amount to zero	Engine Controller_[1.5NA] National VI (BYD) (ECM)
SP0184	Clear the self-learning value of the GPF differential pressure sensor	Engine Controller_[1.5NA] National VI (BYD) (ECM)
SP0185	Reset the amount of accumulated ash to zero	Engine Controller_[1.5NA] National VI (BYD) (ECM)
SP0186	The first step is to use the old ECU	Engine Controller_[1.5NA] National VI (BYD) (ECM)
SP0187	The second step is to replace the new ECU and start the calibration	Engine Controller_[1.5NA] National VI (BYD) (ECM)
SP0188	The third step is to query the calibration results	Engine Controller_[1.5NA] National VI (BYD) (ECM)
SP0189	Left front wheel matching	Left body domain controller A_L2 (BYD) (L2_BCM)
SP0190	Right front wheel matching	Left body domain controller A_L2 (BYD) (L2_BCM)
SP0191	Left rear wheel matching	Left body domain controller A_L2 (BYD) (L2_BCM)
SP0192	Right rear wheel matching	Left body domain controller A_L2 (BYD) (L2_BCM)
SP0193	Send self-learning information	Left body domain controller A_L2 (BYD) (L2_BCM)
SP0194	After-sales dynamic calibration	Multifunctional Video Controller (Mainland) (MPC_Conti)
SP0195	After-sales dynamic calibration result query (single sending)	Multifunctional Video Controller (Mainland) (MPC_Conti)
SP0196	VIN write	Multifunctional Video Controller (Mainland) (MPC_Conti)
SP0197	After-sale static calibration (HA2HF)	Multifunctional Video Controller (Mainland) (MPC_Conti)

SP0198	start Routine	Multifunctional Video Controller (Mainland) (MPC Conti)
SP0199	request Routine Results	Multifunctional Video Controller (Mainland) (MPC Conti)
SP0200	Steering wheel zero point calibration	Electric power steering (Mobis) (CEPS_Mobis)
SP0201	ECU unlock	Airbag (new) (BYD) (SRS)
SP0202	VIN writing and airbag decryption	Airbag (new) (BYD) (SRS)
SP0203	Stage 1: Exhaust the left rear wheel	Electro-hydraulic brake (Bosch) (IPB)
SP0204	Stage 2: Exhaust the front left wheel	Electro-hydraulic brake (Bosch) (IPB)
SP0205	Stage 3: Exhaust the right front wheel	Electro-hydraulic brake (Bosch) (IPB)
SP0206	Stage 4: Exhaust the right rear wheel	Electro-hydraulic brake (Bosch) (IPB)
SP0207	Step 5: Exhaust the IPB Housing	Electro-hydraulic brake (Bosch) (IPB)
SP0208	Step 6: PFS and TMC2 exhaust	Electro-hydraulic brake (Bosch) (IPB)
SP0209	Step 7: leak check	Electro-hydraulic brake (Bosch) (IPB)
SP0210	Step 8 (1) Main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB)
SP0211	The eighth step (2) evaluate the pressure test of the master cylinder	Electro-hydraulic brake (Bosch) (IPB)
SP0212	The ninth step is to write the byte of the vacuum filling process + exit the installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB)
SP0213	The first step: internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB)
SP0214	Step 2: Calibration of the angle sensor	Electro-hydraulic brake (Bosch) (IPB)

SP0215	Step 3: (VPC) valve body calibration	Electro-hydraulic brake (Bosch) (IPB)
SP0216	The fourth step (1) main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB)
SP0217	The fourth step (2) evaluate the main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB)
SP0218	Step 5 (1): wheel speed sensor test	Electro-hydraulic brake (Bosch) (IPB)
SP0219	Step 5 (2): Evaluate the wheel speed sensor test results	Electro-hydraulic brake (Bosch) (IPB)
SP0220	Enter installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB)
SP0221	Enter stand mode	Electro-hydraulic brake (Bosch) (IPB)
SP0222	Exit stand mode	Electro-hydraulic brake (Bosch) (IPB)
SP0223	Internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB)
SP0224	Check the internal sensor calibration results	Electro-hydraulic brake (Bosch) (IPB)
SP0225	Erase car configuration	Electro-hydraulic brake (Bosch) (IPB)
SP0226	Tire pressure reset	Electro-hydraulic brake (Bosch) (IPB)
SP0227	Write HA2HE comfort type	Electro-hydraulic brake (Bosch) (IPB)
SP0228	Write HA2HF noble type	Electro-hydraulic brake (Bosch) (IPB)
SP0229	Write HA2HE luxury type	Electro-hydraulic brake (Bosch) (IPB)
SP0230	Write HA2HF flagship type	Electro-hydraulic brake (Bosch) (IPB)
SP0231	VIN write	Front millimeter wave radar (mainland) (FMRR)
SP0232	After-sales dynamic calibration	Front millimeter wave radar (mainland) (FMRR)
SP0233	After-sale static calibration	Front millimeter wave radar (mainland) (FMRR)
SP0234	Factory mode on	Front millimeter wave radar (mainland) (FMRR)

SP0235	Factory mode off	Front millimeter wave radar (mainland) (FMRR)
SP0236	Configuration wipe	Blind Spot Monitoring (Hella) (BSD)
SP0237	Write HA2HF flagship type	Blind Spot Monitoring (Hella) (BSD)
SP0238	Request start	Battery Manager 50 (BYD) (BMS50)
SP0239	Progress query	Battery Manager 50 (BYD) (BMS50)
SP0240	Request to close	Battery Manager 50 (BYD) (BMS50)
SP0241	Request start	Battery Manager 50 (BYD) (BMS50)
SP0242	Progress query	Battery Manager 50 (BYD) (BMS50)
SP0243	Request to close	Battery Manager 50 (BYD) (BMS50)
SP0244	Request start	Battery Manager 50 (BYD) (BMS50)
SP0245	Progress query	Battery Manager 50 (BYD) (BMS50)
SP0246	Request to close	Battery Manager 50 (BYD) (BMS50)
SP0247	Request start	Battery Manager 120 (BYD) (BMS120)
SP0248	Progress query	Battery Manager 120 (BYD) (BMS120)
SP0249	Request to close	Battery Manager 120 (BYD) (BMS120)
SP0250	Request start	Battery Manager 120 (BYD) (BMS120)
SP0251	Progress query	Battery Manager 120 (BYD) (BMS120)
SP0252	Request to close	Battery Manager 120 (BYD) (BMS120)
SP0253	Request start	Battery Manager 120 (BYD) (BMS120)
SP0254	Progress query	Battery Manager 120 (BYD) (BMS120)
SP0255	Request to close	Battery Manager 120 (BYD) (BMS120)
SP0256	VIN self-learning	Engine Controller_2.0TID(ECM)
SP0257	Vacuum pump working time is cleared	Engine Controller_2.0TID(ECM)
SP0258	One-key adaptive	Wet dual clutch transmission (TCU)
SP0259	Gear action adaptive	Wet dual clutch transmission (TCU)
SP0260	Oil pump adaptive	Wet dual clutch transmission (TCU)
SP0261	Main pressure valve adaptive	Wet dual clutch transmission (TCU)
SP0262	Safety valve 1 adaptive	Wet dual clutch transmission (TCU)
SP0263	Safety valve 2 adaptive	Wet dual clutch transmission (TCU)
SP0264	Clutch valve 1 adaptive	Wet dual clutch transmission (TCU)
SP0265	Clutch valve 2 adaptive	Wet dual clutch transmission (TCU)
SP0266	Clutch 1 adaptive	Wet dual clutch transmission (TCU)
SP0267	Clutch 2 adaptive	Wet dual clutch transmission (TCU)
SP0268	Slope sensor adaptive	Wet dual clutch transmission (TCU)

SP0269	Electronic oil pump adaptive	Wet dual clutch transmission (TCU)
SP0270	Tilt calibration	Front Drive Motor Controller (FMCU)
SP0271	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP0272	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP0273	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP0274	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP0275	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP0276	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP0277	Read the current zero point of the torque sensor	Power Steering (EPS)
SP0278	Set the current torque sensor sampling value to zero	Power Steering (EPS)
SP0279	Read the current zero point of the steering wheel angle sensor	Power Steering (EPS)
SP0280	Set the current steering wheel angle sensor sampling value to zero	Power Steering (EPS)
SP0281	Factory calibration of battery pack	Battery Management System (BMS)
SP0282	Battery pack actual calibration	Battery Management System (BMS)
SP0283	Factory calibration of battery pack	Battery Management System (Low Battery Version) (BMS)
SP0284	Battery pack actual calibration	Battery Management System (Low Battery Version) (BMS)

SP0285	Headlight initialization	Automatic light adjustment system (ALS)
SP0286	ECU unlock	Airbag (SRS)
SP0287	Warning light test	Airbag (SRS)
SP0288	Left front wheel matching	Tire Pressure Management Module (TPMS)
SP0289	Right front wheel matching	Tire Pressure Management Module (TPMS)
SP0290	Left rear wheel matching	Tire Pressure Management Module (TPMS)
SP0291	Right rear wheel matching	Tire Pressure Management Module (TPMS)
SP0292	Electric column calibration	Electric steering column (PTECU)
SP0293	Main driver seat calibration	Main driving seat system (SECU_D)
SP0294	VIN self-learning	Engine Controller_2.0TID (ECM)
SP0295	Vacuum pump working time is cleared	Engine Controller_2.0TID (ECM)
SP0296	One-key adaptive	Transmission Controller Wet (TCU)
SP0297	Gear action adaptive	Transmission Controller_Wet (TCU)
SP0298	Oil pump adaptive	Transmission Controller_Wet (TCU)
SP0299	Main pressure valve adaptive	Transmission Controller_Wet (TCU)
SP0300	Safety valve 1 adaptive	Transmission Controller_Wet (TCU)
SP0301	Safety valve 2 adaptive	Transmission Controller_Wet (TCU)
SP0302	Clutch 1 valve adaptive	Transmission Controller_Wet (TCU)
SP0303	Clutch 2 valve adaptive	Transmission Controller_Wet (TCU)
SP0304	Clutch 1 adaptive	Transmission Controller_Wet (TCU)
SP0305	Clutch 2 adaptive	Transmission Controller_Wet (TCU)
SP0306	Slope sensor adaptive	Transmission Controller_Wet (TCU)
SP0307	Electronic oil pump adaptive	Transmission Controller_Wet (TCU)
SP0308	Tilt calibration	Front Drive Motor Controller (FMCU)
SP0309	Calibration of Tang 100 Ternary Battery Pack	Front Drive Motor Controller (FMCU)

SP0310	Calibration of Tang 80 Ternary Battery Pack	Front Drive Motor Controller (FMCU)
SP0311	Calibration of Tang 80 iron battery pack	Front Drive Motor Controller (FMCU)
SP0312	Cruise calibration	Front Drive Motor Controller (FMCU)
SP0313	Adaptive cruise calibration	Front Drive Motor Controller (FMCU)
SP0314	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP0315	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP0316	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP0317	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP0318	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP0319	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP0320	ECU reset	Electronic Body Stability System (ESP)
SP0321	Angle zero calibration	Power Steering (EPS)
SP0322	Torque zero calibration	Power Steering (EPS)
SP0323	BSD static calibration	Main blind spot monitoring (BSD001)
SP0324	BSD dynamic calibration	Main blind spot monitoring (BSD001)
SP0325	BSD static calibration	Auxiliary blind spot monitoring (BSD002)
SP0326	BSD dynamic calibration	Auxiliary blind spot monitoring (BSD002)
SP0327	Gradient sensor calibration	Electronic Parking (Sark) (EPB)
SP0328	Factory calibration of battery pack	Battery Management System_Ferroelectric 80 (BMS80_Fe)
SP0329	Battery pack actual calibration	Battery Management System_Ferroelectric 80 (BMS80_Fe)
SP0330	Factory calibration of battery pack	Battery Management System_Sanyuan 80 (BMS80)

SP0331	Battery pack actual calibration	Battery Management System_Sanyuan 80 (BMS80)
SP0332	Factory calibration of battery pack	Battery Management System_Sanyuan 100 (BMS100)
SP0333	Battery pack actual calibration	Battery Management System_Sanyuan 100 (BMS100)
SP0334	Headlight initialization	Automatic light adjustment system (ALS)
SP0335	ECU unlock	Airbag (SRS)
SP0336	Warning light test	Airbag (SRS)
SP0337	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP0338	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP0339	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP0340	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP0341	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP0342	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP0343	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP0344	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP0345	Electric column calibration	Electric steering column (PTECU)
SP0346	Main driver seat calibration	Main driver's seat (SECU_D)
SP0347	VIN self-learning	Engine Controller_2.0TID (ECM)
SP0348	Vacuum pump working time is cleared	Engine Controller_2.0TID (ECM)
SP0349	VIN self-learning	Engine Controller_2.0TID National Six (ECM)
SP0350	Vacuum pump working time is cleared	Engine Controller_2.0TID National Six (ECM)
SP0351	Enter GPF parking regeneration mode	Engine Controller_2.0TID National Six (ECM)

SP0352	Exit the activated GPF active regeneration calibration	Engine Controller_2.OTID National Six (ECM)
SP0353	Clear the accumulated carbon amount to zero	Engine Controller_2.OTID National Six (ECM)
SP0354	Clear the self-learning value of the GPF differential pressure sensor	Engine Controller_2.OTID National Six (ECM)
SP0355	Reset the amount of accumulated ash to zero	Engine Controller_2.OTID National Six (ECM)
SP0356	The first step is to use the old ECU	Engine Controller_2.OTID National Six (ECM)
SP0357	The second step is to replace the new ECU and start the calibration	Engine Controller_2.OTID National Six (ECM)
SP0358	The third step is to query the calibration results	Engine Controller_2.OTID National Six (ECM)
SP0359	One-key adaptive	Wet dual clutch transmission (TCU)
SP0360	Gear action adaptive	Wet dual clutch transmission (TCU)
SP0361	Oil pump adaptive	Wet dual clutch transmission (TCU)
SP0362	Main pressure valve adaptive	Wet dual clutch transmission (TCU)
SP0363	Safety valve 1 adaptive	Wet dual clutch transmission (TCU)
SP0364	Safety valve 2 adaptive	Wet dual clutch transmission (TCU)
SP0365	Clutch 1 valve adaptive	Wet dual clutch transmission (TCU)
SP0366	Clutch 2 valve adaptive	Wet dual clutch transmission (TCU)
SP0367	Clutch 1 adaptive	Wet dual clutch transmission (TCU)
SP0368	Clutch 2 adaptive	Wet dual clutch transmission (TCU)
SP0369	Slope sensor adaptive	Wet dual clutch transmission (TCU)

SP0370	Electronic oil pump adaptive	Wet dual clutch transmission (TCU)
SP0371	100 ternary battery pack	Vehicle Controller_BSG (VCU_BSG)
SP0372	80 ternary battery pack	Vehicle Controller_BSG (VCU_BSG)
SP0373	Cruise calibration	Vehicle Controller_BSG (VCU_BSG)
SP0374	Adaptive cruise calibration	Vehicle Controller_BSG (VCU_BSG)
SP0375	Tilt calibration	Vehicle Controller BSG (VCU BSG)
SP0376	Tilt calibration	Front Drive Motor Controller (FMCU)
SP0377	Motor zero calibration	Front Drive Motor Controller (FMCU)
SP0378	Motor zero calibration	Rear Drive Motor Controller (RMCU)
SP0379	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP0380	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP0381	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP0382	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP0383	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP0384	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP0385	Write flagship type, honor type, honor type 20 inches	Electronic Body Stability System (ESP)
SP0386	Write noble type	Electronic Body Stability System (ESP)
SP0387	Write elite configuration	Electronic Body Stability System (ESP)
SP0388	Erase car configuration	Electronic Body Stability System (ESP)
SP0389	ECU reset	Electronic Body Stability System (ESP)
SP0390	Angle zero calibration	Power Steering (EPS)
SP0391	Write flagship configuration	Power Steering (EPS)
SP0392	Write honor type, honor type 20 inch configuration	Power Steering (EPS)

SP0393	Write premium configuration	Power Steering (EPS)
SP0394	Write elite configuration	Power Steering (EPS)
SP0395	Write STC new feel configuration	Power Steering (EPS)
SP0396	Write STB with LKA configuration	Power Steering (EPS)
SP0397	Write STC with LKA configuration	Power Steering (EPS)
SP0398	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP0399	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP0400	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP0401	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP0402	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP0403	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP0404	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP0405	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP0406	Gradient sensor calibration	Electronic Parking (Sark) (EPB)
SP0407	Write flagship	Blind Spot Detection (BSD)
SP0408	Write honor type, honor type, elite type	Blind Spot Detection (BSD)
SP0409	Configuration wipe	Blind Spot Detection (BSD)
SP0410	Initial dynamic calibration	Multi-Function Video Controller (MPC)
SP0411	Write flagship, honorable, and honorable configuration	Multi-Function Video Controller (MPC)
SP0412	Write elite configuration	Multi-Function Video Controller (MPC)
SP0413	Write STB flagship (LKS) configuration	Multi-Function Video Controller (MPC)

SP0414	Write STC Premium (LKS) configuration	Multi-Function Video Controller (MPC)
SP0415	Erase car configuration	Multi-Function Video Controller (MPC)
SP0416	Static calibration	Multi-Function Video Controller (MPC)
SP0417	Write flagship, honorable configuration	Adaptive Cruise System (MRR)
SP0418	Write premium configuration	Adaptive Cruise System (MRR)
SP0419	Write elite configuration	Adaptive Cruise System (MRR)
SP0420	Erase car configuration	Adaptive Cruise System (MRR)
SP0421	Factory calibration of battery pack	Ternary Battery Management System_80 (BMS80)
SP0422	Battery pack actual calibration	Ternary Battery Management System_80 (BMS80)
SP0423	Factory calibration of battery pack	Ternary Battery Management System_100 (BMS100)
SP0424	Battery pack actual calibration	Ternary Battery Management System_100 (BMS100)
SP0425	ECU unlock	Airbag (third generation) (SRS_III)
SP0426	Warning light test	Airbag (third generation) (SRS_III)
SP0427	Electric column calibration	Electric steering column (PTECU)
SP0428	Main driver seat calibration	Main driver's seat (SECU_D)
SP0429	VIN self-learning	Engine Controller_2.0TID Country Six (BYD) (ECM)
SP0430	Vacuum pump working time is cleared	Engine Controller_2.0TID Country Six (BYD) (ECM)
SP0431	Enter GPF parking regeneration mode	Engine Controller_2.0TID Country Six (BYD) (ECM)
SP0432	Exit the activated GPF active regeneration calibration	Engine Controller_2.0TID Country Six (BYD) (ECM)

SP0433	Clear the accumulated carbon amount to zero	Engine Controller_2.OTID Country Six (BYD) (ECM)
SP0434	Clear the self-learning value of the GPF differential pressure sensor	Engine Controller_2.OTID Country Six (BYD) (ECM)
SP0435	Reset the amount of accumulated ash to zero	Engine Controller_2.OTID Country Six (BYD) (ECM)
SP0436	The first step is to use the old ECU	Engine Controller_2.OTID Country Six (BYD) (ECM)
SP0437	The second step is to replace the new ECU and start the calibration	Engine Controller_2.OTID Country Six (BYD) (ECM)
SP0438	The third step is to query the calibration results	Engine Controller_2.OTID Country Six (BYD) (ECM)
SP0439	One-key adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP0440	Gear action adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP0441	Oil pump adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP0442	Main pressure valve adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP0443	Safety valve 1 adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP0444	Safety valve 2 adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP0445	Clutch 1 valve adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP0446	Clutch 2 valve adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP0447	Clutch 1 adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP0448	Clutch 2 adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP0449	Slope sensor adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP0450	Electronic oil pump adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP0451	One-key adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)

SP0452	Gear action adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)
SP0453	Oil pump adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)
SP0454	Main pressure valve adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)
SP0455	Safety valve 1 adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)
SP0456	Safety valve 2 adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)
SP0457	Clutch 1 valve adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)
SP0458	Clutch 2 valve adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)
SP0459	Clutch 1 adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)
SP0460	Clutch 2 adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)
SP0461	Slope sensor adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)
SP0462	Electronic oil pump adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)
SP0463	Tilt calibration	Vehicle Controller_BSG (BYD) (VCU)
SP0464	ST 100 ternary battery pack configuration write	Vehicle Controller_BSG (BYD) (VCU)
SP0465	ST 80 ternary battery pack configuration write	Vehicle Controller_BSG (BYD) (VCU)
SP0466	ST 60 ternary battery pack configuration write	Vehicle Controller_BSG (BYD) (VCU)
SP0467	Cruise configuration write is not installed	Vehicle Controller_BSG (BYD) (VCU)
SP0468	Cruise control configuration write	Vehicle Controller_BSG (BYD) (VCU)
SP0469	Adaptive cruise configuration write	Vehicle Controller_BSG (BYD) (VCU)
SP0470	Write noble and noble configuration	Vehicle Controller_BSG (BYD) (VCU)
SP0471	Write flagship configuration	Vehicle Controller_BSG (BYD) (VCU)

SP0472	Write STHB distinguished type Y	Electronic Parking (Sark) (EPB_SAC)
SP0473	Write STHA honor type Y, flagship type Y, game type Y	Electronic Parking (Sark) (EPB_SAC)
SP0474	Erase car configuration	Electronic Parking (Sark) (EPB_SAC)
SP0475	Angle zero calibration	Power steering (TRW) (EPS_TRW)
SP0476	Write distinguished type Y (STHB)	Power steering (TRW) (EPS_TRW)
SP0477	Write honor type Y (STHA), flagship type Y (STHA)	Power steering (TRW) (EPS_TRW)
SP0478	Initial dynamic calibration	Multifunctional Video Controller (Bosch) (MPC BOSCH)
SP0479	Turn off dynamic calibration	Multifunctional Video Controller (Bosch) (MPC BOSCH)
SP0480	Write noble type Y	Multifunctional Video Controller (Bosch) (MPC BOSCH)
SP0481	Write honor type Y	Multifunctional Video Controller (Bosch) (MPC BOSCH)
SP0482	Write flagship Y	Multifunctional Video Controller (Bosch) (MPC BOSCH)
SP0483	Erase car configuration	Multifunctional Video Controller (Bosch) (MPC BOSCH)
SP0484	Static calibration	Multifunctional Video Controller (Bosch) (MPC BOSCH)
SP0485	Driver Calibration Service Calibration (SDA)	Adaptive Cruise System (Bosch) (MRR_BOSCH)
SP0486	After-sales calibration	Adaptive Cruise System (Bosch) (MRR_BOSCH)
SP0487	Write honor type Y, flagship type Y	Adaptive Cruise System (Bosch) (MRR_BOSCH)
SP0488	Write noble type Y	Adaptive Cruise System (Bosch) (MRR_BOSCH)
SP0489	Erase car configuration	Adaptive Cruise System (Bosch) (MRR_BOSCH)
SP0490	Left front wheel matching	Tire Pressure Management Module (BaoLong) (TPMS BaoLong)
SP0491	Right front wheel matching	Tire Pressure Management Module (BaoLong) (TPMS BaoLong)

SP0492	Left rear wheel matching	Tire Pressure Management Module (BaoLong) (TPMS BaoLong)
SP0493	Right rear wheel matching	Tire Pressure Management Module (BaoLong) (TPMS BaoLong)
SP0494	Left front wheel matching	Tire pressure management module (Sensata) (TPMS Sensata)
SP0495	Right front wheel matching	Tire pressure management module (Sensata) (TPMS Sensata)
SP0496	Left rear wheel matching	Tire pressure management module (Sensata) (TPMS Sensata)
SP0497	Right rear wheel matching	Tire pressure management module (Sensata) (TPMS Sensata)
SP0498	Stage 1: Exhaust the left rear wheel	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0499	Stage 2: Exhaust the front left wheel	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0500	Stage 3: Exhaust the right front wheel	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0501	Stage 4: Exhaust the right rear wheel	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0502	Step 5: Exhaust the IPB Housing	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0503	Step 6: PFS and TMC2 exhaust	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0504	Step 7: leak check	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0505	Step 8 (1) Main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0506	The eighth step (2) evaluate the pressure test of the master cylinder	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0507	The ninth step is to write the byte of the vacuum filling process + exit the installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0508	The first step: internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)

SP0509	Step 2: Calibration of the angle sensor	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0510	Step 3: (VPC) valve body calibration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0511	The fourth step (1) main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0512	The fourth step (2) evaluate the main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0513	Step 5 (1): wheel speed sensor test	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0514	Step 5 (2): Evaluate the wheel speed sensor test results	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0515	Enter installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0516	Enter stand mode	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0517	Exit stand mode	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0518	Internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0519	Check the internal sensor calibration results	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0520	Erase car configuration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0521	Write STHA honorable type Y, STHA flagship type Y	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0522	Write STHB distinguished type Y	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0523	Tire pressure reset	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0524	Write flagship Y	Left blind spot detection (BYD 77G) (BSD_L)
SP0525	Configuration wipe	Left blind spot detection (BYD 77G) (BSD_L)
SP0526	Write flagship Y	Right blind spot detection (BYD 77G) (BSD_R)
SP0527	Configuration wipe	Right blind spot detection (BYD 77G) (BSD_R)

SP0528	ECU unlock	Airbag (new) (BYD) (SRS)
SP0529	Warning light test	Airbag (new) (BYD) (SRS)
SP0530	VIN writing and airbag decryption	Airbag (new) (BYD) (SRS)
SP0531	Left front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP0532	Right front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP0533	Left rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP0534	Right rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP0535	Left front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP0536	Right front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP0537	Left rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP0538	Right rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP0539	Fuel level at which low fuel alarm is activated	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0540	Fuel level for low fuel alarm cancellation	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0541	The temperature at which the engine coolant temperature high alarm is activated	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0542	The temperature at which the engine coolant temperature high alarm is cancelled	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0543	Engine coolant temperature power-on filter time	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0544	Seat belt alarm activates speed	Combination instrument (Tianyouwei) (INS_Tianyouwei)

SP0545	The speed at which the door is not closed and the audible alarm is activated	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0546	The speed at which the handbrake is not released and the audible alarm is activated	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0547	The speed at which the speeding audible alarm is activated	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0548	Damped vehicle speed canceled by speeding sound alarm	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0549	Maximum display value of cruising range	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0550	Rated fuel consumption	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0551	Instantaneous fuel consumption refresh time	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0552	Maximum instantaneous fuel consumption displayed value	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0553	The minimum vehicle speed for the instantaneous fuel consumption switching unit	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0554	Average fuel consumption refresh time	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0555	Average fuel consumption ratio coefficient	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0556	Maximum display value of average fuel consumption	Combination instrument (Tianyouwei) (INS_Tianyouwei)

SP0557	Drive time refresh time	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0558	Average speed refresh time	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0559	Maximum display value of average speed	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0560	When there are multiple alarms, the normal cycle display time of a single alarm	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0561	Fatigue driving time	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0562	Acceleration time scale factor	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0563	Alarm point of the electricity meter	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0564	Muting fault indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0565	Driver's seat belt is not fastened indicator light	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0566	Co-pilot seat belt not fastened indicator light	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0567	Left rear seat belt not fastened indicator light	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0568	Middle and rear seat belt not fastened indicator light	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0569	Rear right seat belt not fastened indicator light	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0570	SRS fault indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0571	EPS fault indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0572	Headlamp fault indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0573	Brake pad wear indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)

SP0574	ABS fault indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0575	ESP fault indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0576	Steep slope descent fault indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0577	Low oil level indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0578	Engine fault indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0579	Coolant temperature is too high indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0580	Low oil pressure indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0581	Fast tire leak indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0582	Brake failure indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0583	Low-voltage power supply system fault indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0584	Power battery overheating indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0585	Motor overheating indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0586	Motor fault indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0587	Motor coolant temperature is too high indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0588	Power battery failure indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0589	Power system failure indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0590	Drive power limit indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0591	Low tire pressure indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0592	ACC fault indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)

SP0593	Lane change blind spot indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0594	Emergency brake (fault) indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0595	Main warning light	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0596	Block yellow text messages	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0597	Block red text messages	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0598	Please check the SRS system	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0599	Please check the steering system	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0600	Please check the headlight system	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0601	Please check the brake pads	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0602	Please check the ABS system	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0603	Please check the ESP system	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0604	Please check HDC system	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0605	Engine oil level is too low	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0606	Please check the engine system	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0607	Engine coolant temperature is too high	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0608	Insufficient oil pressure	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0609	Fast air leak (in the form of car body tires)	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0610	Please check the brake system	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0611	Low brake fluid level	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0612	Please check the electronic parking system	Combination instrument (Tianyouwei) (INS_Tianyouwei)

SP0613	The low-voltage power supply system is faulty, please stop safely and contact the service shop	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0614	Please check the low-voltage power supply system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0615	Please check the starting iron battery system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0616	The starting iron battery is faulty, please contact the service store for replacement	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0617	Please check the power generation system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0618	Engine speed is too high	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0619	Engine oil level is too high	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0620	Please check the oil monitoring system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0621	Engine accessory functions are limited	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0622	Limited transmission function	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0623	Please check the transmission system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0624	The clutch temperature is high, please pull over and park safely	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0625	The gearbox oil temperature is too high, please pull over to cool down	Combination instrument (Tianyouwei) (INS_Tianyouwei)

SP0626	Please check the gear system	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0627	The engine failed to start, please drive to a safe area and stop for inspection	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0628	Please check the power battery	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0629	Please check the power system	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0630	Limited EV function	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0631	The vehicle enters the forced EV mode and the power is limited	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0632	Please check the tire pressure monitoring system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0633	Tire pressure under pressure alarm	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0634	Abnormal tire pressure signal	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0635	Tire temperature is too high	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0636	Please check the adaptive cruise system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0637	Please check the BSD system	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0638	Please check the automatic emergency braking system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0639	Please check the front millimeter wave radar	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0640	Please check the multi-function video controller	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0641	Please check the predictive collision warning system	Combination instrument (Tianyouwei) (INS_Tianyouwei)

SP0642	Please check the pedestrian detection system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0643	Please check the lane keeping system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0644	Please check the lane departure system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0645	Please check the traffic sign recognition system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0646	Please check the smart far and near beam system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0647	Multi-function video controller has limited functions	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0648	Please check the start-stop system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0649	Air conditioner thermal management failure, please contact the service shop for repair	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0650	Please add fuel	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0651	Please check the four-wheel drive system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0652	Please check the vehicle network	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0653	Please check the memory system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0654	Please check the sunroof system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0655	Please check the car charging system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0656	Please check the charging equipment	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0657	Please check the grid system	Combination instrument (Tianyouwei) (INS_Tianyouwei)

SP0658	Please check the discharge equipment	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0659	The vehicle speed exceeds XXX km/h	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0660	There are still XX days before maintenance	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0661	XXX km to maintenance	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0662	There are still XX days XXX km from maintenance	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0663	Please go to BYD authorized service store for maintenance immediately	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0664	Key not detected	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0665	Key battery is low	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0666	The key is low, please replace the battery as soon as possible	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0667	The key is not detected, please move the key close to the RF card reader and start the vehicle	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0668	The key is not detected, please confirm if the key is in the car	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0669	The communication is abnormal, there are XX days left before the key function fails, please contact the 4S shop to deal with it as soon as possible	Combination instrument (Tianyouwei) (INS_Tianyouwei)

SP0670	The communication is abnormal, there are XX hours left before the key function fails, please contact the 4S shop to deal with it as soon as possible	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0671	The key function has failed and the vehicle cannot be used normally	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0672	RGB screen test	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0673	Black and white grid test	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0674	Return control to ECU	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0675	Engine sound simulator switch	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0676	Engine sound simulator sound function	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0677	Audio source mode	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0678	Electric column calibration	Electric steering column (BYD) (PTECU)
SP0679	Main driver seat calibration	Main driving seat (BYD) (SECU_D)
SP0680	start Routine	Left body domain controller A_L3 (BYD) (BCMA L2 BYD)
SP0681	request Routine Results	Left body domain controller A_L3 (BYD) (BCMA L2 BYD)
SP0682	start Routine	Left body domain controller A_L3 (BYD) (BCMA L2 BYD)
SP0683	request Routine Results	Left body domain controller A_L3 (BYD) (BCMA L2 BYD)
SP0684	Left front wheel matching	Left body domain controller A_L3 (BYD) (BCMA L2 BYD)
SP0685	Right front wheel matching	Left body domain controller A_L3 (BYD) (BCMA L2 BYD)
SP0686	Left rear wheel matching	Left body domain controller A_L3 (BYD) (BCMA L2 BYD)
SP0687	Right rear wheel matching	Left body domain controller A_L3 (BYD) (BCMA L2 BYD)

SP0688	Send self-learning information	Left body domain controller A_L3 (BYD) (BCMA_L2_BYD)
SP0689	Fuel level at which low fuel alarm is activated	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0690	Fuel level for low fuel alarm cancellation	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0691	The temperature at which the engine coolant temperature high alarm is activated	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0692	The temperature at which the engine coolant temperature high alarm is cancelled	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0693	Engine coolant temperature power-on filter time	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0694	Seat belt alarm activates speed	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0695	The speed at which the door is not closed and the audible alarm is activated	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0696	The speed at which the handbrake is not released and the audible alarm is activated	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0697	The speed at which the speeding audible alarm is activated	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0698	Damped vehicle speed canceled by speeding sound alarm	Combination instrument (Tianyouwei) (INS_Tianyouwei)

SP0699	Maximum display value of cruising range	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0700	Rated fuel consumption	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0701	Instantaneous fuel consumption refresh time	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0702	Maximum instantaneous fuel consumption displayed value	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0703	The minimum vehicle speed for the instantaneous fuel consumption switching unit	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0704	Average fuel consumption refresh time	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0705	Average fuel consumption ratio coefficient	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0706	Maximum display value of average fuel consumption	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0707	Drive time refresh time	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0708	Average speed refresh time	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0709	Maximum display value of average speed	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0710	When there are multiple alarms, the normal cycle display time of a single alarm	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0711	Fatigue driving time	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0712	Acceleration time scale factor	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0713	Alarm point of the electricity meter	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0714	Muting fault indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)

SP0715	Driver's seat belt is not fastened indicator light	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0716	Co-pilot seat belt not fastened indicator light	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0717	Left rear seat belt not fastened indicator light	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0718	Middle and rear seat belt not fastened indicator light	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0719	Rear right seat belt not fastened indicator light	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0720	SRS fault indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0721	EPS fault indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0722	Headlamp fault indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0723	Brake pad wear indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0724	ABS fault indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0725	ESP fault indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0726	Steep slope descent fault indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0727	Low oil level indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0728	Engine fault indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0729	Coolant temperature is too high indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0730	Low oil pressure indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0731	Fast tire leak indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0732	Brake failure indicator	Combination instrument (Tianyouwei) (INS Tianyouwei)

SP0733	Low-voltage power supply system fault indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0734	Power battery overheating indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0735	Motor overheating indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0736	Motor fault indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0737	Motor coolant temperature is too high indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0738	Power battery failure indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0739	Power system failure indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0740	Drive power limit indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0741	Low tire pressure indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0742	ACC fault indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0743	Lane change blind spot indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0744	Emergency brake (fault) indicator	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0745	Main warning light	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0746	Block yellow text messages	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0747	Block red text messages	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0748	Please check the SRS system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0749	Please check the steering system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0750	Please check the headlight system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0751	Please check the brake pads	Combination instrument (Tianyouwei) (INS_Tianyouwei)

SP0752	Please check the ABS system	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0753	Please check the ESP system	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0754	Please check HDC system	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0755	Engine oil level is too low	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0756	Please check the engine system	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0757	Engine coolant temperature is too high	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0758	Insufficient oil pressure	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0759	Fast air leak (in the form of car body tires)	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0760	Please check the brake system	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0761	Low brake fluid level	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0762	Please check the electronic parking system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0763	The low-voltage power supply system is faulty, please stop safely and contact the service shop	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0764	Please check the low-voltage power supply system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0765	Please check the starting iron battery system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0766	The starting iron battery is faulty, please contact the service store for replacement	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0767	Please check the power generation system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0768	Engine speed is too high	Combination instrument (Tianyouwei) (INS Tianyouwei)

SP0769	Engine oil level is too high	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0770	Please check the oil monitoring system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0771	Engine accessory functions are limited	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0772	Limited transmission function	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0773	Please check the transmission system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0774	The clutch temperature is high, please pull over and park safely	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0775	The gearbox oil temperature is too high, please pull over to cool down	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0776	Please check the gear system	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0777	The engine failed to start, please drive to a safe area and stop for inspection	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0778	Please check the power battery	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0779	Please check the power system	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0780	Limited EV function	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0781	The vehicle enters the forced EV mode and the power is limited	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0782	Please check the tire pressure monitoring system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0783	Tire pressure under pressure alarm	Combination instrument (Tianyouwei) (INS_Tianyouwei)

SP0784	Abnormal tire pressure signal	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0785	Tire temperature is too high	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0786	Please check the adaptive cruise system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0787	Please check the BSD system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0788	Please check the automatic emergency braking system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0789	Please check the front millimeter wave radar	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0790	Please check the multi-function video controller	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0791	Please check the predictive collision warning system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0792	Please check the pedestrian detection system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0793	Please check the lane keeping system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0794	Please check the lane departure system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0795	Please check the traffic sign recognition system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0796	Please check the smart far and near beam system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0797	Multi-function video controller has limited functions	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0798	Please check the start-stop system	Combination instrument (Tianyouwei) (INS_Tianyouwei)

SP0799	Air conditioner thermal management failure, please contact the service shop for repair	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0800	Please add fuel	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0801	Please check the four-wheel drive system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0802	Please check the vehicle network	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0803	Please check the memory system	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0804	Please check the sunroof system	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0805	Please check the car charging system	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0806	Please check the charging equipment	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0807	Please check the grid system	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0808	Please check the discharge equipment	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0809	The vehicle speed exceeds XXX km/h	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0810	There are still XX days before maintenance	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0811	XXX km to maintenance	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0812	There are still XX days XXX km from maintenance	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0813	Please go to BYD authorized service store for maintenance immediately	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0814	Key not detected	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0815	Key battery is low	Combination instrument (Tianyouwei) (INS Tianyouwei)

SP0816	The key is low, please replace the battery as soon as possible	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0817	The key is not detected, please move the key close to the RF card reader and start the vehicle	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0818	The key is not detected, please confirm if the key is in the car	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0819	The communication is abnormal, there are XX days left before the key function fails, please contact the 4S shop to deal with it as soon as possible	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0820	The communication is abnormal, there are XX hours left before the key function fails, please contact the 4S shop to deal with it as soon as possible	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0821	The key function has failed and the vehicle cannot be used normally	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0822	RGB screen test	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0823	Black and white grid test	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0824	Return control to ECU	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0825	Engine sound simulator switch	Combination instrument (Tianyouwei) (INS_Tianyouwei)

SP0826	Engine sound simulator sound function	Combination instrument (Tianyouwei) (INS_Tianyouwei)
SP0827	Audio source mode	Combination instrument (Tianyouwei) (INS Tianyouwei)
SP0828	Steering wheel zero point calibration	Power Steering_CEPS (Tianhe) (CEPS_TRW)
SP0829	Write STHM luxury Y, STHN two-wheel drive distinguished Y, STHN two-drive distinguished Y configuration word	Power Steering_CEPS (Tianhe) (CEPS_TRW)
SP0830	Angle zero calibration	Power steering_REPS (TRW) (REPS_TRW)
SP0831	Write STHN two-wheel drive honorable Y configuration	Blind spot detection (BYD) (BSD_L_BYD)
SP0832	Write STHN two-wheel drive honorable Y configuration	Detection from the blind spot (BYD) (BSD_R_BYD)
SP0833	Write STHM luxury Y configuration word	Multifunctional Video Controller (Bosch) (MPC_BOSCH)
SP0834	Write STHN two-wheel drive distinguished Y, STHN two-drive distinguished Y configuration word	Multifunctional Video Controller (Bosch) (MPC_BOSCH)
SP0835	After-sales model calibration	Multifunctional Video Controller (Bosch) (MPC_BOSCH)
SP0836	Static calibration	Multifunctional Video Controller (Bosch) (MPC_BOSCH)
SP0837	Start SDA	Front millimeter wave radar (Bosch) (MRR_BOSCH)
SP0838	After-sales calibration	Front millimeter wave radar (Bosch) (MRR_BOSCH)
SP0839	Write STHM luxury Y configuration word	Front millimeter wave radar (Bosch) (MRR_BOSCH)

SP0840	Write STHN two-wheel drive premium Y, STHN two-drive premium Y configuration	Front millimeter wave radar (Bosch) (MRR_BOSCH)
SP0841	ECU unlock	Airbag (BYD) (SRS_BYD)
SP0842	Warning light test	Airbag (BYD) (SRS_BYD)
SP0843	VIN writing and airbag decryption	Airbag (BYD) (SRS_BYD)
SP0844	Stage 1: Exhaust the left rear wheel	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0845	Stage 2: Exhaust the front left wheel	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0846	Stage 3: Exhaust the right front wheel	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0847	Stage 4: Exhaust the right rear wheel	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0848	Step 5: Exhaust the IPB Housing	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0849	Step 6: PFS and TMC2 exhaust	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0850	Step 7: leak check	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0851	Step 8 (1) Main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0852	The eighth step (2) evaluate the pressure test of the master cylinder	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0853	The ninth step is to write the byte of the vacuum filling process + exit the installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0854	The first step: internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)

SP0855	Step 2: Calibration of the angle sensor	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0856	Step 3: (VPC) valve body calibration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0857	The fourth step (1) main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0858	The fourth step (2) evaluate the main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0859	Step 5 (1): wheel speed sensor test	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0860	Step 5 (2): Evaluate the wheel speed sensor test results	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0861	Enter installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0862	Enter stand mode	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0863	Exit stand mode	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0864	Internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0865	Check the internal sensor calibration results	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0866	Erase car configuration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0867	Write STHM luxury Y, STHN two-wheel drive noble type, STHN two-wheel drive noble type Y configuration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0868	Tire pressure reset	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP0869	Start routine affairs	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP0870	End routine affairs	Engine Controller_[1.5TID] National Six (UMC) (ECM)

SP0871	Request routine transaction results	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP0872	Vehicle calibration	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP0873	Query calibration results	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP0874	VIN self-learning	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP0875	Request start	Battery Manager (BYD) (BMS BYD)
SP0876	Progress query	Battery Manager (BYD) (BMS BYD)
SP0877	Request to close	Battery Manager (BYD) (BMS BYD)
SP0878	Request start	Battery Manager (BYD) (BMS BYD)
SP0879	Progress query	Battery Manager (BYD) (BMS BYD)
SP0880	Request to close	Battery Manager (BYD) (BMS BYD)
SP0881	Request start	Battery Manager (BYD) (BMS BYD)
SP0882	Progress query	Battery Manager (BYD) (BMS BYD)
SP0883	Request to close	Battery Manager (BYD) (BMS BYD)
SP0884	VIN self-learning	Engine controller 1.5TID (ECM)
SP0885	Vacuum pump working time is cleared	Engine controller 1.5TID (ECM)
SP0886	Engine oil level learning	Engine controller 1.5TID (ECM)
SP0887	VIN self-learning	Engine Controller_[1.5TID] National Six (ECM)
SP0888	Vacuum pump working time is cleared	Engine Controller_[1.5TID] National Six (ECM)
SP0889	Engine oil level learning	Engine Controller_[1.5TID] National Six (ECM)
SP0890	Enter GPF parking regeneration mode	Engine Controller_[1.5TID] National Six (ECM)
SP0891	Exit the activated GPF active regeneration calibration	Engine Controller_[1.5TID] National Six (ECM)
SP0892	Clear the accumulated carbon amount to zero	Engine Controller_[1.5TID] National Six (ECM)

SP0893	Clear the self-learning value of the GPF differential pressure sensor	Engine Controller_[1.5TID] National Six (ECM)
SP0894	Reset the amount of accumulated ash to zero	Engine Controller_[1.5TID] National Six (ECM)
SP0895	The first step is to use the old ECU	Engine Controller_[1.5TID] National Six (ECM)
SP0896	The second step is to replace the new ECU and start the calibration	Engine Controller_[1.5TID] National Six (ECM)
SP0897	The third step is to query the calibration results	Engine Controller_[1.5TID] National Six (ECM)
SP0898	VIN self-learning	Engine controller 1.5TID_BSG (ECM_BSG)
SP0899	Vacuum pump working time is cleared	Engine controller 1.5TID_BSG (ECM_BSG)
SP0900	Engine oil level learning	Engine controller 1.5TID_BSG (ECM_BSG)
SP0901	Gear action adaptive	Transmission Controller_Dry Type (DDCT)
SP0902	Clutch adaptive	Transmission Controller Dry Type (DDCT)
SP0903	Slope sensor adaptive	Transmission Controller_Dry Type (DDCT)
SP0904	Transmission adaptive	Transmission Controller_Dry Type (DDCT)
SP0905	Gear action adaptive	Transmission Controller_Dry Type_BSG(DDCT)
SP0906	Clutch adaptive	Transmission Controller Dry Type BSG(DDCT)
SP0907	Slope sensor adaptive	Transmission Controller_Dry Type_BSG(DDCT)
SP0908	Transmission adaptive	Transmission Controller_Dry Type_BSG(DDCT)
SP0909	One-key adaptive	Transmission Controller (TCU)
SP0910	Gear action adaptive	Transmission Controller (TCU)
SP0911	Oil pump adaptive	Transmission Controller (TCU)
SP0912	Main pressure valve adaptive	Transmission Controller (TCU)
SP0913	Safety valve 1 adaptive	Transmission Controller (TCU)

SP0914	Safety valve 2 adaptive	Transmission Controller (TCU)
SP0915	Clutch valve 1 adaptive	Transmission Controller (TCU)
SP0916	Clutch valve 2 adaptive	Transmission Controller (TCU)
SP0917	Clutch 1 adaptive	Transmission Controller (TCU)
SP0918	Clutch 2 adaptive	Transmission Controller (TCU)
SP0919	Slope sensor adaptive	Transmission Controller (TCU)
SP0920	Electronic oil pump adaptive	Transmission Controller (TCU)
SP0921	One-key adaptive	Transmission Controller Wet BSG (WDCT BSG)
SP0922	Gear action adaptive	Transmission Controller_Wet_BSG (WDCT_BSG)
SP0923	Oil pump adaptive	Transmission Controller_Wet_BSG (WDCT_BSG)
SP0924	Main pressure valve adaptive	Transmission Controller_Wet_BSG (WDCT_BSG)
SP0925	Safety valve 1 adaptive	Transmission Controller_Wet_BSG (WDCT_BSG)
SP0926	Safety valve 2 adaptive	Transmission Controller_Wet_BSG (WDCT_BSG)
SP0927	Clutch valve 1 adaptive	Transmission Controller_Wet_BSG (WDCT_BSG)
SP0928	Clutch valve 2 adaptive	Transmission Controller_Wet_BSG (WDCT_BSG)
SP0929	Clutch 1 adaptive	Transmission Controller_Wet_BSG (WDCT_BSG)
SP0930	Clutch 2 adaptive	Transmission Controller_Wet_BSG (WDCT_BSG)
SP0931	Slope sensor adaptive	Transmission Controller_Wet_BSG (WDCT_BSG)
SP0932	Electronic oil pump adaptive	Transmission Controller_Wet_BSG (WDCT_BSG)
SP0933	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP0934	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP0935	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP0936	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)

SP0937	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP0938	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP0939	Angle zero calibration	Power Steering (EPS)
SP0940	Torque zero calibration	Power Steering (EPS)
SP0941	Angle zero calibration	Power Steering (TRW) (EPS)
SP0942	Write flagship configuration	Power Steering (TRW) (EPS)
SP0943	Write honorable configuration	Power Steering (TRW) (EPS)
SP0944	Write premium configuration	Power Steering (TRW) (EPS)
SP0945	Write luxury	Power Steering (TRW) (EPS)
SP0946	Tilt calibration	Vehicle Controller (VCU)
SP0947	Tilt calibration	Vehicle controller four-wheel drive BSG (VCU_AWD_BSG)
SP0948	80 ternary battery pack calibration	Vehicle controller_four-wheel drive BSG (VCU_AWD_BSG)
SP0949	60 ternary battery pack calibration	Vehicle controller_four-wheel drive BSG (VCU_AWD_BSG)
SP0950	Factory calibration of battery pack	Battery Management System_Sanyuan 60 (BMS60)
SP0951	Battery pack actual calibration	Battery Management System_Sanyuan 60 (BMS60)
SP0952	One-button battery heating active test	Battery Management System_Sanyuan 80 (BMS80)
SP0953	Factory calibration of battery pack	Battery Management System_Sanyuan 80 (BMS80)
SP0954	Battery pack actual calibration	Battery Management System_Sanyuan 80 (BMS80)
SP0955	One-button battery heating active test	Battery Management System_Sanyuan 80_BSG (BMS80_BSG)
SP0956	Factory calibration of battery pack	Battery Management System_Sanyuan 80_BSG (BMS80_BSG)
SP0957	Battery pack actual calibration	Battery Management System_Sanyuan 80_BSG (BMS80_BSG)

SP0958	BSD static calibration	Main blind spot monitoring (BSD001)
SP0959	BSD dynamic calibration	Main blind spot monitoring (BSD001)
SP0960	BSD static calibration	Auxiliary blind spot monitoring (BSD002)
SP0961	BSD dynamic calibration	Auxiliary blind spot monitoring (BSD002)
SP0962	Enter the high-voltage module update mode	Body Controller (BCM)
SP0963	Exit the high-voltage module update mode	Body Controller (BCM)
SP0964	ECU unlock	Airbag Three Generation (SRS III)
SP0965	Warning light test	Airbag_Three Generation (SRS_III)
SP0966	Left front wheel matching	Tire Pressure Management Module (TPMS)
SP0967	Right front wheel matching	Tire Pressure Management Module (TPMS)
SP0968	Left rear wheel matching	Tire Pressure Management Module (TPMS)
SP0969	Right rear wheel matching	Tire Pressure Management Module (TPMS)
SP0970	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP0971	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP0972	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP0973	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP0974	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP0975	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP0976	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP0977	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP0978	One-click initialization	Electric Back Door (BDECU)
SP0979	Electric column calibration	Electric steering column system (PTECU)
SP0980	Main driver seat calibration	Main driving seat system (SECU_D)
SP0981	VIN self-learning	Engine Controller_1.5TID (ECM)

SP0982	Trigger GPF regeneration calibration	Engine Controller_1.5TID (ECM)
SP0983	Gear action adaptive	Dry dual clutch gearbox controller (TCU001)
SP0984	Clutch adaptive	Dry dual clutch gearbox controller (TCU001)
SP0985	Slope sensor adaptive	Dry dual clutch gearbox controller (TCU001)
SP0986	One-key adaptive	Wet dual clutch transmission (TCU002)
SP0987	Gear action adaptive	Wet dual clutch transmission (TCU002)
SP0988	Oil pump adaptive	Wet dual clutch transmission (TCU002)
SP0989	Main pressure valve adaptive	Wet dual clutch transmission (TCU002)
SP0990	Safety valve 1 adaptive	Wet dual clutch transmission (TCU002)
SP0991	Safety valve 2 adaptive	Wet dual clutch transmission (TCU002)
SP0992	Clutch valve 1 adaptive	Wet dual clutch transmission (TCU002)
SP0993	Clutch valve 2 adaptive	Wet dual clutch transmission (TCU002)
SP0994	Clutch 1 adaptive	Wet dual clutch transmission (TCU002)
SP0995	Clutch 2 adaptive	Wet dual clutch transmission (TCU002)
SP0996	Slope sensor adaptive	Wet dual clutch transmission (TCU002)
SP0997	Electronic oil pump adaptive	Wet dual clutch transmission (TCU002)
SP0998	80 ternary battery pack	Vehicle Controller_BSG (VCU_BSG)
SP0999	60 ternary battery pack	Vehicle Controller_BSG (VCU_BSG)
SP1000	Cruise calibration	Vehicle Controller_BSG (VCU_BSG)
SP1001	Adaptive cruise calibration	Vehicle Controller_BSG (VCU_BSG)
SP1002	Tilt calibration	Vehicle Controller BSG (VCU BSG)
SP1003	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP1004	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP1005	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)

SP1006	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP1007	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP1008	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP1009	Write 2HA honorable flagship configuration	Electronic Body Stability System (ESP)
SP1010	Write 2HX flagship Y configuration	Electronic Body Stability System (ESP)
SP1011	Write 2HX luxury Y/2HY comfortable configuration	Electronic Body Stability System (ESP)
SP1012	Erase car configuration	Electronic Body Stability System (ESP)
SP1013	ECU reset	Electronic Body Stability System (ESP)
SP1014	Angle zero calibration	Power Steering (TRW) (EPS)
SP1015	PDC calibration	Power Steering (TRW) (EPS)
SP1016	Write 2HX luxury configuration	Power Steering (TRW) (EPS)
SP1017	Write 2HY premium configuration	Power Steering (TRW) (EPS)
SP1018	Write LKS function to open configuration	Power Steering (TRW) (EPS)
SP1019	Write 2HA flagship/2HX flagship Y configuration	Power Steering (TRW) (EPS)
SP1020	Write the ID of the front left tire pressure monitoring module	Tire Pressure Monitoring (Baolong) (TPMS)
SP1021	Write the ID of the front right tire pressure monitoring module	Tire Pressure Monitoring (Baolong) (TPMS)

SP1022	Write the ID of the left rear tire pressure monitoring module	Tire Pressure Monitoring (Baolong) (TPMS)
SP1023	Write the ID of the rear right tire pressure monitoring module	Tire Pressure Monitoring (Baolong) (TPMS)
SP1024	Left front wheel matching	Tire Pressure Monitoring (Baolong) (TPMS)
SP1025	Right front wheel matching	Tire Pressure Monitoring (Baolong) (TPMS)
SP1026	Left rear wheel matching	Tire Pressure Monitoring (Baolong) (TPMS)
SP1027	Right rear wheel matching	Tire Pressure Monitoring (Baolong) (TPMS)
SP1028	Write the ID of the front left tire pressure monitoring module	Tire Pressure Management Module (Sensata) (TPMS)
SP1029	Write the ID of the front right tire pressure monitoring module	Tire Pressure Management Module (Sensata) (TPMS)
SP1030	Write the ID of the left rear tire pressure monitoring module	Tire Pressure Management Module (Sensata) (TPMS)
SP1031	Write the ID of the rear right tire pressure monitoring module	Tire Pressure Management Module (Sensata) (TPMS)
SP1032	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP1033	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP1034	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP1035	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)

SP1036	Write the ID of the front left tire pressure monitoring module	Tire pressure management module (cloud collar) (TPMS)
SP1037	Write the ID of the front right tire pressure monitoring module	Tire pressure management module (cloud collar) (TPMS)
SP1038	Write the ID of the left rear tire pressure monitoring module	Tire pressure management module (cloud collar) (TPMS)
SP1039	Write the ID of the rear right tire pressure monitoring module	Tire pressure management module (cloud collar) (TPMS)
SP1040	Left front wheel matching	Tire pressure management module (cloud collar) (TPMS)
SP1041	Right front wheel matching	Tire pressure management module (cloud collar) (TPMS)
SP1042	Left rear wheel matching	Tire pressure management module (cloud collar) (TPMS)
SP1043	Right rear wheel matching	Tire pressure management module (cloud collar) (TPMS)
SP1044	Write flagship	Blind Spot Monitoring (Hella) (BSD)
SP1045	BSD static calibration	Monitoring from the blind spot (BSD002)
SP1046	BSD dynamic calibration	Monitoring from the blind spot (BSD002)
SP1047	Initial dynamic calibration	Multi-Function Video Controller (MPC)
SP1048	Turn off dynamic calibration	Multi-Function Video Controller (MPC)
SP1049	Write flagship (high configuration with LKS) configuration	Multi-Function Video Controller (MPC)
SP1050	Write luxury (high configuration with LKS) configuration	Multi-Function Video Controller (MPC)
SP1051	Erase car configuration	Multi-Function Video Controller (MPC)

SP1052	Static calibration	Multi-Function Video Controller (MPC)
SP1053	Driver Calibration Service Calibration (SDA)	Adaptive Cruise (MRR)
SP1054	After-sales calibration	Adaptive Cruise (MRR)
SP1055	Write flagship Y configuration	Adaptive Cruise (MRR)
SP1056	Write premium configuration	Blind Spot Monitoring (BSD001)
SP1057	Write flagship	Blind Spot Monitoring (BSD001)
SP1058	One-button battery heating active test	Power Battery Manager (BMS)
SP1059	One-button battery heating active test off	Power Battery Manager (BMS)
SP1060	Factory calibration of battery pack	Power Battery Manager (BMS)
SP1061	Battery pack actual calibration	Power Battery Manager (BMS)
SP1062	ECU unlock	Airbag (Winninger) (SRS)
SP1063	Main driver seat calibration	Main driving seat (SECU001)
SP1064	VIN self-learning	1.5TID Engine Controller (ECM)
SP1065	Vacuum pump working time is cleared	1.5TID Engine Controller (ECM)
SP1066	VIN self-learning	1.5TID Engine Controller China Six (ECM)
SP1067	Vacuum pump working time is cleared	1.5TID Engine Controller China Six (ECM)
SP1068	Enter GPF parking regeneration mode	1.5TID Engine Controller China Six (ECM)
SP1069	Exit the activated GPF active regeneration calibration	1.5TID Engine Controller China Six (ECM)

SP1070	Clear the accumulated carbon amount to zero	1.5TID Engine Controller China Six (ECM)
SP1071	Clear the self-learning value of the GPF differential pressure sensor	1.5TID Engine Controller China Six (ECM)
SP1072	Reset the amount of accumulated ash to zero	1.5TID Engine Controller China Six (ECM)
SP1073	The first step is to use the old ECU	1.5TID Engine Controller China Six (ECM)
SP1074	The second step is to replace the new ECU and start the calibration	1.5TID Engine Controller China Six (ECM)
SP1075	The third step is to query the calibration results	1.5TID Engine Controller China Six (ECM)
SP1076	Tilt calibration	Vehicle Controller BSG (VCU_BSG)
SP1077	Song 80 battery pack form calibration	Vehicle Controller_BSG (VCU_BSG)
SP1078	Song 60 battery pack form calibration	Vehicle Controller_BSG (VCU_BSG)
SP1079	Song 50 battery pack form calibration	Vehicle Controller_BSG (VCU_BSG)
SP1080	One-key adaptive	Wet dual clutch transmission (TCU)
SP1081	Gear action adaptive	Wet dual clutch transmission (TCU)
SP1082	Oil pump adaptive	Wet dual clutch transmission (TCU)
SP1083	Main pressure valve adaptive	Wet dual clutch transmission (TCU)
SP1084	Safety valve 1 adaptive	Wet dual clutch transmission (TCU)
SP1085	Safety valve 2 adaptive	Wet dual clutch transmission (TCU)
SP1086	Clutch 1 valve adaptive	Wet dual clutch transmission (TCU)
SP1087	Clutch 2 valve adaptive	Wet dual clutch transmission (TCU)

SP1088	Clutch 1 adaptive	Wet dual clutch transmission (TCU)
SP1089	Clutch 2 adaptive	Wet dual clutch transmission (TCU)
SP1090	Slope sensor adaptive	Wet dual clutch transmission (TCU)
SP1091	Electronic oil pump adaptive	Wet dual clutch transmission (TCU)
SP1092	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP1093	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP1094	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP1095	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP1096	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP1097	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP1098	ECU reset	Electronic Body Stability System (ESP)
SP1099	Angle zero calibration	Power Steering (TRW) (EPS)
SP1100	Write luxury Y configuration	Power Steering (TRW) (EPS)
SP1101	Write exclusive Y configuration	Power Steering (TRW) (EPS)
SP1102	Write premium Y configuration	Power Steering (TRW) (EPS)
SP1103	Write flagship Y configuration	Power Steering (TRW) (EPS)
SP1104	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP1105	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP1106	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP1107	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP1108	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP1109	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP1110	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)

SP1111	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP1112	Write the ID of the front left tire pressure monitoring module	Tire pressure management module (cloud collar) (TPMS)
SP1113	Write the ID of the front right tire pressure monitoring module	Tire pressure management module (cloud collar) (TPMS)
SP1114	Write the ID of the left rear tire pressure monitoring module	Tire pressure management module (cloud collar) (TPMS)
SP1115	Write the ID of the rear right tire pressure monitoring module	Tire pressure management module (cloud collar) (TPMS)
SP1116	Left front wheel matching	Tire pressure management module (cloud collar) (TPMS)
SP1117	Right front wheel matching	Tire pressure management module (cloud collar) (TPMS)
SP1118	Left rear wheel matching	Tire pressure management module (cloud collar) (TPMS)
SP1119	Right rear wheel matching	Tire pressure management module (cloud collar) (TPMS)
SP1120	Gradient sensor calibration	Electronic Parking System (EPB)
SP1121	Write flagship Y configuration	Blind Spot Monitoring (BSD)
SP1122	Configuration wipe	Blind Spot Monitoring (BSD)
SP1123	Initial dynamic calibration	Multi-Function Video Controller (MPC)
SP1124	Turn off dynamic calibration	Multi-Function Video Controller (MPC)
SP1125	Write flagship Y configuration	Multi-Function Video Controller (MPC)
SP1126	Static calibration	Multi-Function Video Controller (MPC)
SP1127	Write flagship Y configuration	Adaptive Cruise (MRR)

SP1128	Driver Calibration Service Calibration (SDA)	Adaptive Cruise (MRR)
SP1129	After-sales calibration	Adaptive Cruise (MRR)
SP1130	One-button battery heating active test	Power Battery Manager (BMS)
SP1131	One-button battery heating active test off	Power Battery Manager (BMS)
SP1132	Factory calibration of battery pack	Power Battery Manager (BMS)
SP1133	Battery pack actual calibration	Power Battery Manager (BMS)
SP1134	ECU unlock	Airbag (SRS)
SP1135	Warning light test	Airbag (SRS)
SP1136	Write the ID of the front left tire pressure monitoring module	Integrated body controller B2 (IBCMB2)
SP1137	Write the ID of the front right tire pressure monitoring module	Integrated body controller B2 (IBCMB2)
SP1138	Write the ID of the left rear tire pressure monitoring module	Integrated body controller B2 (IBCMB2)
SP1139	Write the ID of the rear right tire pressure monitoring module	Integrated body controller B2 (IBCMB2)
SP1140	Left front wheel matching	Integrated body controller B2 (IBCMB2)
SP1141	Right front wheel matching	Integrated body controller B2 (IBCMB2)
SP1142	Left rear wheel matching	Integrated body controller B2 (IBCMB2)
SP1143	Right rear wheel matching	Integrated body controller B2 (IBCMB2)

SP1144	Left front wheel matching	Integrated body controller B2 (IBCMB2)
SP1145	Right front wheel matching	Integrated body controller B2 (IBCMB2)
SP1146	Left rear wheel matching	Integrated body controller B2 (IBCMB2)
SP1147	Right rear wheel matching	Integrated body controller B2 (IBCMB2)
SP1148	VIN self-learning	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP1149	Vacuum pump working time is cleared	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP1150	Enter GPF parking regeneration mode	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP1151	Exit the activated GPF active regeneration calibration	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP1152	Clear the accumulated carbon amount to zero	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP1153	Clear the self-learning value of the GPF differential pressure sensor	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP1154	Reset the amount of accumulated ash to zero	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP1155	The first step is to use the old ECU	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP1156	The second step is to replace the new ECU and start the calibration	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP1157	The third step is to query the calibration results	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP1158	VIN self-learning	Engine Controller_[1.5NA] National VI (BYD) (ECM)

SP1159	Vacuum pump working time is cleared	Engine Controller_[1.5NA] National VI (BYD) (ECM)
SP1160	Enter GPF parking regeneration mode	Engine Controller_[1.5NA] National VI (BYD) (ECM)
SP1161	Exit the activated GPF active regeneration calibration	Engine Controller_[1.5NA] National VI (BYD) (ECM)
SP1162	Clear the accumulated carbon amount to zero	Engine Controller_[1.5NA] National VI (BYD) (ECM)
SP1163	Clear the self-learning value of the GPF differential pressure sensor	Engine Controller_[1.5NA] National VI (BYD) (ECM)
SP1164	Reset the amount of accumulated ash to zero	Engine Controller_[1.5NA] National VI (BYD) (ECM)
SP1165	The first step is to use the old ECU	Engine Controller_[1.5NA] National VI (BYD) (ECM)
SP1166	The second step is to replace the new ECU and start the calibration	Engine Controller_[1.5NA] National VI (BYD) (ECM)
SP1167	The third step is to query the calibration results	Engine Controller_[1.5NA] National VI (BYD) (ECM)
SP1168	Write SA3HE honorable type	Left blind spot monitoring (Winner) (BSD L VEONEER)
SP1169	Write SA3HF flagship plus	Left blind spot monitoring (Winner) (BSD L VEONEER)
SP1170	Configuration wipe	Left blind spot monitoring (Winner) (BSD L VEONEER)
SP1171	After-sales calibration	Left blind spot monitoring (Winner) (BSD L VEONEER)
SP1172	Write SA3HE honorable type	Right blind spot monitoring (Winner) (BSD R VEONEER)
SP1173	Write SA3HF flagship plus	Right blind spot monitoring (Winner) (BSD R VEONEER)
SP1174	Configuration wipe	Right blind spot monitoring (Winner) (BSD R VEONEER)

SP1175	After-sales calibration	Right blind spot monitoring (Winninger) (BSD R VEONEER)
SP1176	Angle zero calibration	Power steering (TRIW) (CEPS_TRW)
SP1177	PDC calibration	Power steering (TRIW) (CEPS_TRW)
SP1178	Write SA3HE premium configuration	Power steering (TRIW) (CEPS_TRW)
SP1179	Write SA3HE honorable configuration	Power steering (TRIW) (CEPS_TRW)
SP1180	Write SA3HF flagship configuration	Power steering (TRIW) (CEPS_TRW)
SP1181	Write SA3HF flagship plus configuration	Power steering (TRIW) (CEPS_TRW)
SP1182	Write SA3HG flagship PLUS Y configuration	Power steering (TRIW) (CEPS_TRW)
SP1183	Write 2HY comfort configuration	Power steering (TRIW) (CEPS_TRW)
SP1184	Write 2HA flagship Y/2HX flagship Y configuration	Power steering (TRIW) (CEPS_TRW)
SP1185	Stage 1: Exhaust the left rear wheel	Electro-hydraulic brake (Bosch) (IPB)
SP1186	Stage 2: Exhaust the front left wheel	Electro-hydraulic brake (Bosch) (IPB)
SP1187	Stage 3: Exhaust the right front wheel	Electro-hydraulic brake (Bosch) (IPB)
SP1188	Stage 4: Exhaust the right rear wheel	Electro-hydraulic brake (Bosch) (IPB)
SP1189	Step 5: Exhaust the IPB Housing	Electro-hydraulic brake (Bosch) (IPB)
SP1190	Step 6: PFS and TMC2 exhaust	Electro-hydraulic brake (Bosch) (IPB)
SP1191	Step 7: leak check	Electro-hydraulic brake (Bosch) (IPB)
SP1192	Step 8 (1) Main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB)

SP1193	The eighth step (2) evaluate the pressure test of the master cylinder	Electro-hydraulic brake (Bosch) (IPB)
SP1194	The ninth step is to write the byte of the vacuum filling process + exit the installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB)
SP1195	The first step: internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB)
SP1196	Step 2: Calibration of the angle sensor	Electro-hydraulic brake (Bosch) (IPB)
SP1197	Step 3: (VPC) valve body calibration	Electro-hydraulic brake (Bosch) (IPB)
SP1198	The fourth step (1) main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB)
SP1199	The fourth step (2) evaluate the main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB)
SP1200	Step 5 (1): wheel speed sensor test	Electro-hydraulic brake (Bosch) (IPB)
SP1201	Step 5 (2): Evaluate the wheel speed sensor test results	Electro-hydraulic brake (Bosch) (IPB)
SP1202	Enter installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB)
SP1203	Enter stand mode	Electro-hydraulic brake (Bosch) (IPB)
SP1204	Exit stand mode	Electro-hydraulic brake (Bosch) (IPB)
SP1205	Internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB)
SP1206	Check the internal sensor calibration results	Electro-hydraulic brake (Bosch) (IPB)
SP1207	Erase car configuration	Electro-hydraulic brake (Bosch) (IPB)

SP1208	Tire pressure reset	Electro-hydraulic brake (Bosch) (IPB)
SP1209	Write SA3HE premium type (non-ACC)	Electro-hydraulic brake (Bosch) (IPB)
SP1210	Write SA3HE honorable type (ACC)	Electro-hydraulic brake (Bosch) (IPB)
SP1211	Write SA3HF flagship type (non-ACC)	Electro-hydraulic brake (Bosch) (IPB)
SP1212	Write SA3HF flagship plus (ACC)	Electro-hydraulic brake (Bosch) (IPB)
SP1213	Write floating clamp 19 inches	Electro-hydraulic brake (Bosch) (IPB)
SP1214	Writing fixed clamp 19 inches (SA3HG optional)	Electro-hydraulic brake (Bosch) (IPB)
SP1215	Write floating clamp 20 inches	Electro-hydraulic brake (Bosch) (IPB)
SP1216	Write fixed clamp 20 inches	Electro-hydraulic brake (Bosch) (IPB)
SP1217	Initial dynamic calibration	Multifunctional Video Controller (Bosch) (MPC_BOSCH)
SP1218	Turn off dynamic calibration	Multifunctional Video Controller (Bosch) (MPC_BOSCH)
SP1219	Write SA3HE honorable configuration	Multifunctional Video Controller (Bosch) (MPC_BOSCH)
SP1220	Write SA3HF flagship plus configuration	Multifunctional Video Controller (Bosch) (MPC_BOSCH)
SP1221	Write SA3HG flagship PLUS Y configuration	Multifunctional Video Controller (Bosch) (MPC_BOSCH)
SP1222	Erase car configuration	Multifunctional Video Controller (Bosch) (MPC_BOSCH)
SP1223	Static calibration	Multifunctional Video Controller (Bosch) (MPC_BOSCH)
SP1224	Driver Calibration Service Calibration (SDA)	Adaptive Cruise (Bosch) (MRR_BOSCH)
SP1225	After-sales calibration	Adaptive Cruise (Bosch) (MRR_BOSCH)
SP1226	Write flagship configuration	Adaptive Cruise (Bosch) (MRR_BOSCH)

SP1227	Write SA3HE honorable configuration	Adaptive Cruise (Bosch) (MRR_BOSCH)
SP1228	Write SA3HF flagship plus configuration	Adaptive Cruise (Bosch) (MRR_BOSCH)
SP1229	Write SA3HG flagship PLUS Y configuration	Adaptive Cruise (Bosch) (MRR_BOSCH)
SP1230	Erase car configuration	Adaptive Cruise (Bosch) (MRR_BOSCH)
SP1231	Left front wheel matching	Left body domain controller A_L2 (BYD) (AL2 BCM)
SP1232	Right front wheel matching	Left body domain controller A_L2 (BYD) (AL2 BCM)
SP1233	Left rear wheel matching	Left body domain controller A_L2 (BYD) (AL2 BCM)
SP1234	Right rear wheel matching	Left body domain controller A_L2 (BYD) (AL2 BCM)
SP1235	Send self-learning information	Left body domain controller A_L2 (BYD) (AL2_BCM)
SP1236	Request start	Power Battery Manager (BYD) (BMS)
SP1237	Progress query	Power Battery Manager (BYD) (BMS)
SP1238	Request to close	Power Battery Manager (BYD) (BMS)
SP1239	ECU unlock	Airbag (BYD) (SRS_III)
SP1240	VIN writing and airbag decryption	Airbag (BYD) (SRS_III)
SP1241	VIN self-learning	Engine Controller (ECM)
SP1242	Vacuum pump working time is cleared	Engine Controller (ECM)
SP1243	Gear action adaptive	Dual clutch transmission (TCU)
SP1244	Clutch adaptive	Dual clutch transmission (TCU)
SP1245	Slope sensor adaptive	Dual clutch transmission (TCU)
SP1246	Transmission adaptive	Dual clutch transmission (TCU)
SP1247	Tilt calibration	Drive Motor Controller (ECN)
SP1248	Stage 1: Exhaust the left rear wheel	Wheel Anti-lock Braking System (ABS)
SP1249	Stage 2: Exhaust the front left wheel	Wheel Anti-lock Braking System (ABS)

SP1250	Stage 3: Exhaust the right front wheel	Wheel Anti-lock Braking System (ABS)
SP1251	Stage 4: Exhaust the right rear wheel	Wheel Anti-lock Braking System (ABS)
SP1252	Yaw rate sensor calibration	Wheel Anti-lock Braking System (ABS)
SP1253	Rotation sensor calibration	Wheel Anti-lock Braking System (ABS)
SP1254	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP1255	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP1256	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP1257	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP1258	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP1259	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP1260	Read the current zero point of the torque sensor	Power Steering (EPS)
SP1261	Set the current torque sensor sampling value to zero	Power Steering (EPS)
SP1262	Read the current zero point of the steering wheel angle sensor	Power Steering (EPS)
SP1263	Set the current steering wheel angle sensor sampling value to zero	Power Steering (EPS)
SP1264	Angle zero calibration	Power Steering (Lianchuang) (EPS)
SP1265	Torque zero calibration	Power Steering (Lianchuang) (EPS)

SP1266	Factory calibration of battery pack	Battery Management System (BMS)
SP1267	Battery pack actual calibration	Battery Management System (BMS)
SP1268	Factory calibration of battery pack	Battery Management System (Low Battery Version) (BMS)
SP1269	Battery pack actual calibration	Battery Management System (Low Battery Version) (BMS)
SP1270	ECU unlock	Airbag (SRS)
SP1271	ECU unlock	Airbag (third generation) (SRS III)
SP1272	VIN self-learning	2.0TID engine controller National VI (BYD) (ECM)
SP1273	Vacuum pump working time is cleared	2.0TID engine controller National VI (BYD) (ECM)
SP1274	Enter GPF parking regeneration mode	2.0TID engine controller National VI (BYD) (ECM)
SP1275	Exit the activated GPF active regeneration calibration	2.0TID engine controller National VI (BYD) (ECM)
SP1276	Clear the accumulated carbon amount to zero	2.0TID engine controller National VI (BYD) (ECM)
SP1277	Clear the self-learning value of the GPF differential pressure sensor	2.0TID engine controller National VI (BYD) (ECM)
SP1278	Reset the amount of accumulated ash to zero	2.0TID engine controller National VI (BYD) (ECM)
SP1279	The first step is to use the old ECU	2.0TID engine controller National VI (BYD) (ECM)
SP1280	The second step is to replace the new ECU and start the calibration	2.0TID engine controller National VI (BYD) (ECM)

SP1281	The third step is to query the calibration results	2.0TID engine controller National VI (BYD) (ECM)
SP1282	One-key adaptive	Wet dual clutch transmission (BYD) (TCU)
SP1283	Gear action adaptive	Wet dual clutch transmission (BYD) (TCU)
SP1284	Oil pump adaptive	Wet dual clutch transmission (BYD) (TCU)
SP1285	Main pressure valve adaptive	Wet dual clutch transmission (BYD) (TCU)
SP1286	Safety valve 1 adaptive	Wet dual clutch transmission (BYD) (TCU)
SP1287	Safety valve 2 adaptive	Wet dual clutch transmission (BYD) (TCU)
SP1288	Clutch 1 valve adaptive	Wet dual clutch transmission (BYD) (TCU)
SP1289	Clutch 2 valve adaptive	Wet dual clutch transmission (BYD) (TCU)
SP1290	Clutch 1 adaptive	Wet dual clutch transmission (BYD) (TCU)
SP1291	Clutch 2 adaptive	Wet dual clutch transmission (BYD) (TCU)
SP1292	Slope sensor adaptive	Wet dual clutch transmission (BYD) (TCU)
SP1293	Electronic oil pump adaptive	Wet dual clutch transmission (BYD) (TCU)
SP1294	One-key adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)
SP1295	Gear action adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)
SP1296	Oil pump adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)
SP1297	Main pressure valve adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)
SP1298	Safety valve 1 adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)
SP1299	Safety valve 2 adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)
SP1300	Clutch 1 valve adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)
SP1301	Clutch 2 valve adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)
SP1302	Clutch 1 adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)
SP1303	Clutch 2 adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)
SP1304	Slope sensor adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)

SP1305	Electronic oil pump adaptive	Wet dual-clutch transmission controller [II] (BYD) (TCU)
SP1306	Tilt calibration	Vehicle Controller (BYD) (VCU)
SP1307	Stage 1: Exhaust the left rear wheel	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1308	Stage 2: Exhaust the front left wheel	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1309	Stage 3: Exhaust the right front wheel	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1310	Stage 4: Exhaust the right rear wheel	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1311	Step 5: Exhaust the IPB Housing	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1312	Step 6: PFS and TMC2 exhaust	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1313	Step 7: leak check	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1314	Step 8 (1) Main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1315	The eighth step (2) evaluate the pressure test of the master cylinder	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1316	The ninth step is to write the byte of the vacuum filling process + exit the installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1317	The first step: internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1318	Step 2: Calibration of the angle sensor	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1319	Step 3: (VPC) valve body calibration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1320	The fourth step (1) main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB_BOSCH)

SP1321	The fourth step (2) evaluate the main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1322	Step 5 (1): wheel speed sensor test	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1323	Step 5 (2): Evaluate the wheel speed sensor test results	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1324	Enter installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1325	Enter stand mode	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1326	Exit stand mode	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1327	Internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1328	Check the internal sensor calibration results	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1329	Erase car configuration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1330	Tire pressure reset	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1331	HC (flagship) configuration word write	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1332	Distinguished (HCB-APA) configuration word write	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1333	Premium type (HCB without APA) configuration word write	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1334	Luxury configuration word write	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP1335	Write HC (flagship) configuration	Electronic Parking System (Sark) (EPB_SAC)
SP1336	Configuration wipe	Electronic Parking System (Sark) (EPB_SAC)
SP1337	Write HCB (Deluxe Y) configuration	Electronic Parking System (Sark) (EPB_SAC)

SP1338	Write HCB (APA) noble type	Electronic Parking System (Sark) (EPB_SAC)
SP1339	Write HCB (no APA) noble type	Electronic Parking System (Sark) (EPB_SAC)
SP1340	Steering wheel zero point calibration	Power Steering_CEPS (Tianhe) (CEPS)
SP1341	Write HCB luxury Y configuration	Power Steering_CEPS (Tianhe) (CEPS)
SP1342	Write HCB distinguished Y configuration	Power Steering_CEPS (Tianhe) (CEPS)
SP1343	Write HCB luxury type Y, noble type Y	Front millimeter wave radar (Vininger) (MRR)
SP1344	Erase car configuration	Front millimeter wave radar (Vininger) (MRR)
SP1345	After-sales calibration	Front millimeter wave radar (Vininger) (MRR)
SP1346	Static calibration	Front millimeter wave radar (Vininger) (MRR)
SP1347	Memory check	Multi-Function Video Controller (Winninger) (MPC)
SP1348	After-sales calibration begins	Multi-Function Video Controller (Winninger) (MPC)
SP1349	Write luxury type Y, noble type Y	Multi-Function Video Controller (Winninger) (MPC)
SP1350	Configuration byte erasure	Multi-Function Video Controller (Winninger) (MPC)
SP1351	Left front wheel matching	Tire pressure monitoring module (Sensata) (TPMS Sensata)
SP1352	Right front wheel matching	Tire pressure monitoring module (Sensata) (TPMS Sensata)
SP1353	Left rear wheel matching	Tire pressure monitoring module (Sensata) (TPMS Sensata)
SP1354	Right rear wheel matching	Tire pressure monitoring module (Sensata) (TPMS Sensata)
SP1355	One-button battery heating active test	Blade Battery Manager 80 (BYD) (BMS80)
SP1356	One-button battery heating active test off	Blade Battery Manager 80 (BYD) (BMS80)
SP1357	ECU unlock	Airbag III (BYD) (SRSIII)
SP1358	Warning light function test	Airbag_III (BYD) (SRSIII)

SP1359	VIN writing and airbag decryption	Airbag_III (BYD) (SRSIII)
SP1360	Electric column calibration	Electric string controller (BYD) (PTECU)
SP1361	Main driver seat calibration	Main driver seat controller (BYD) (SECU_D)
SP1362	Start routine affairs	Front passenger seat controller (BYD) (SECU_P)
SP1363	Request routine transaction results	Front passenger seat controller (BYD) (SECU_P)
SP1364	Exhaust function	Bosch ABS8 system
SP1365	ECU unlock	Airbag system
SP1366	Warning light function test	Airbag system
SP1367	VIN self-learning	Vehicle Controller (VCU)
SP1368	Downline calibration of inclination	Vehicle Controller (VCU)
SP1369	Request to turn on cooling	Battery Manager 500 (BMS500)
SP1370	Progress query	Battery Manager 500 (BMS500)
SP1371	Request to turn off cooling	Battery Manager 500 (BMS500)
SP1372	Request to turn on heating	Battery Manager 500 (BMS500)
SP1373	Progress query	Battery Manager 500 (BMS500)
SP1374	Request to turn off the heating	Battery Manager 500 (BMS500)
SP1375	Request to turn on balance	Battery Manager 500 (BMS500)
SP1376	Progress query	Battery Manager 500 (BMS500)
SP1377	Request to turn off balance	Battery Manager 500 (BMS500)
SP1378	Request to open	Battery Manager 500 (BMS500)
SP1379	Progress query	Battery Manager 500 (BMS500)
SP1380	Request to close	Battery Manager 500 (BMS500)
SP1381	Request to open	Battery Manager 500 (BMS500)
SP1382	Progress query	Battery Manager 500 (BMS500)
SP1383	Request to close	Battery Manager 500 (BMS500)
SP1384	Factory calibration of battery pack	Battery Manager 500 (BMS500)
SP1385	Battery pack actual calibration	Battery Manager 500 (BMS500)

SP1386	Request to turn on cooling	Battery Manager 400 (BMS400)
SP1387	Progress query	Battery Manager 400 (BMS400)
SP1388	Request to turn off cooling	Battery Manager 400 (BMS400)
SP1389	Request to turn on heating	Battery Manager 400 (BMS400)
SP1390	Progress query	Battery Manager 400 (BMS400)
SP1391	Request to turn off the heating	Battery Manager 400 (BMS400)
SP1392	Request to turn on balance	Battery Manager 400 (BMS400)
SP1393	Progress query	Battery Manager 400 (BMS400)
SP1394	Request to turn off balance	Battery Manager 400 (BMS400)
SP1395	Request to open	Battery Manager 400 (BMS400)
SP1396	Progress query	Battery Manager 400 (BMS400)
SP1397	Request to close	Battery Manager 400 (BMS400)
SP1398	Request to open	Battery Manager 400 (BMS400)
SP1399	Progress query	Battery Manager 400 (BMS400)
SP1400	Request to close	Battery Manager 400 (BMS400)
SP1401	Factory calibration of battery pack	Battery Manager 400 (BMS400)
SP1402	Battery pack actual calibration	Battery Manager 400 (BMS400)
SP1403	Request to turn on cooling	Battery Manager 550 (BMS550)
SP1404	Progress query	Battery Manager 550 (BMS550)
SP1405	Request to turn off cooling	Battery Manager 550 (BMS550)
SP1406	Request to turn on heating	Battery Manager 550 (BMS550)
SP1407	Progress query	Battery Manager 550 (BMS550)
SP1408	Request to turn off the heating	Battery Manager 550 (BMS550)
SP1409	Request to turn on balance	Battery Manager 550 (BMS550)
SP1410	Progress query	Battery Manager 550 (BMS550)
SP1411	Request to turn off balance	Battery Manager 550 (BMS550)
SP1412	Request to open	Battery Manager 550 (BMS550)
SP1413	Progress query	Battery Manager 550 (BMS550)
SP1414	Request to close	Battery Manager 550 (BMS550)
SP1415	Request to open	Battery Manager 550 (BMS550)
SP1416	Progress query	Battery Manager 550 (BMS550)
SP1417	Request to close	Battery Manager 550 (BMS550)

SP1418	Factory calibration of battery pack	Battery Manager 550 (BMS550)
SP1419	Battery pack actual calibration	Battery Manager 550 (BMS550)
SP1420	Request to turn on cooling	Battery Manager 600 (BMS600)
SP1421	Progress query	Battery Manager 600 (BMS600)
SP1422	Request to turn off cooling	Battery Manager 600 (BMS600)
SP1423	Request to turn on heating	Battery Manager 600 (BMS600)
SP1424	Progress query	Battery Manager 600 (BMS600)
SP1425	Request to turn off the heating	Battery Manager 600 (BMS600)
SP1426	Request to turn on balance	Battery Manager 600 (BMS600)
SP1427	Progress query	Battery Manager 600 (BMS600)
SP1428	Request to turn off balance	Battery Manager 600 (BMS600)
SP1429	Request to open	Battery Manager 600 (BMS600)
SP1430	Progress query	Battery Manager 600 (BMS600)
SP1431	Request to close	Battery Manager 600 (BMS600)
SP1432	Request to open	Battery Manager 600 (BMS600)
SP1433	Progress query	Battery Manager 600 (BMS600)
SP1434	Request to close	Battery Manager 600 (BMS600)
SP1435	Factory calibration of battery pack	Battery Manager 600 (BMS600)
SP1436	Battery pack actual calibration	Battery Manager 600 (BMS600)
SP1437	Motor zero calibration	Front Drive Motor Controller (FMCU)
SP1438	Motor zero calibration	Rear Drive Motor Controller (RMCU)
SP1439	Start routine	DC-DC assembly (DC DC)
SP1440	Request routine results	DC-DC assembly (DC_DC)
SP1441	Stop routine affairs	DC-DC assembly (DC_DC)
SP1442	Stage 1: Exhaust the left rear wheel	Electro-hydraulic brake (Bosch) (IPB)
SP1443	Stage 2: Exhaust the front left wheel	Electro-hydraulic brake (Bosch) (IPB)

SP1444	Stage 3: Exhaust the right front wheel	Electro-hydraulic brake (Bosch) (IPB)
SP1445	Stage 4: Exhaust the right rear wheel	Electro-hydraulic brake (Bosch) (IPB)
SP1446	Step 5: Exhaust the IPB Housing	Electro-hydraulic brake (Bosch) (IPB)
SP1447	Step 6: PFS and TMC2 exhaust	Electro-hydraulic brake (Bosch) (IPB)
SP1448	Step 7: leak check	Electro-hydraulic brake (Bosch) (IPB)
SP1449	Step 8 (1) Main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB)
SP1450	The eighth step (2) evaluate the pressure test of the master cylinder	Electro-hydraulic brake (Bosch) (IPB)
SP1451	The ninth step is to write the byte of the vacuum filling process + exit the installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB)
SP1452	The first step: internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB)
SP1453	Step 2: Calibration of the angle sensor	Electro-hydraulic brake (Bosch) (IPB)
SP1454	Step 3: (VPC) valve body calibration	Electro-hydraulic brake (Bosch) (IPB)
SP1455	The fourth step (1) main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB)
SP1456	The fourth step (2) evaluate the main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB)
SP1457	Step 5 (1): wheel speed sensor test	Electro-hydraulic brake (Bosch) (IPB)

SP1458	Step 5 (2): Evaluate the wheel speed sensor test results	Electro-hydraulic brake (Bosch) (IPB)
SP1459	Enter installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB)
SP1460	Enter stand mode	Electro-hydraulic brake (Bosch) (IPB)
SP1461	Exit stand mode	Electro-hydraulic brake (Bosch) (IPB)
SP1462	Internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB)
SP1463	Check the internal sensor calibration results	Electro-hydraulic brake (Bosch) (IPB)
SP1464	Erase car configuration	Electro-hydraulic brake (Bosch) (IPB)
SP1465	HCE (flagship) configuration word write	Electro-hydraulic brake (Bosch) (IPB)
SP1466	HCEA (Prestigious) configuration word write	Electro-hydraulic brake (Bosch) (IPB)
SP1467	HCEA (luxury) configuration word write	Electro-hydraulic brake (Bosch) (IPB)
SP1468	HCEB (luxury type) configuration word write	Electro-hydraulic brake (Bosch) (IPB)
SP1469	HCEB (business type) configuration word write	Electro-hydraulic brake (Bosch) (IPB)
SP1470	HCEC (business type) configuration word write	Electro-hydraulic brake (Bosch) (IPB)
SP1471	Tire pressure reset	Electro-hydraulic brake (Bosch) (IPB)
SP1472	Angle zero calibration	Electric power steering_REPS (Tianhe) (EPS)
SP1473	Write HCEB business type Y configuration	Electric power steering_REPS (Tianhe) (EPS)
SP1474	Write HCEB luxury Y configuration	Electric power steering_REPS (Tianhe) (EPS)

SP1475	Write HCEA luxury Y configuration	Electric power steering_REPS (Tianhe) (EPS)
SP1476	Write HCEA distinguished Y configuration	Electric power steering_REPS (Tianhe) (EPS)
SP1477	Write HCE flagship Y configuration	Electric power steering_REPS (Tianhe) (EPS)
SP1478	Steering wheel zero point calibration	Electric Power Steering_CEPS (Tianhe) (EPS)
SP1479	Write HCEB business type Y configuration	Electric Power Steering_CEPS (Tianhe) (EPS)
SP1480	Write HCEB luxury Y configuration	Electric Power Steering_CEPS (Tianhe) (EPS)
SP1481	Write HCEA luxury Y configuration	Electric Power Steering_CEPS (Tianhe) (EPS)
SP1482	Write HCEA distinguished Y configuration	Electric Power Steering_CEPS (Tianhe) (EPS)
SP1483	Write HCE flagship Y configuration	Electric Power Steering_CEPS (Tianhe) (EPS)
SP1484	Write the ID of the front left tire pressure monitoring module	Tire Pressure Monitoring Module (Sensata) (TPMS)
SP1485	Write the ID of the front right tire pressure monitoring module	Tire Pressure Monitoring Module (Sensata) (TPMS)
SP1486	Write the ID of the left rear tire pressure monitoring module	Tire Pressure Monitoring Module (Sensata) (TPMS)
SP1487	Write the ID of the rear right tire pressure monitoring module	Tire Pressure Monitoring Module (Sensata) (TPMS)
SP1488	Left front wheel matching	Tire Pressure Monitoring Module (Sensata) (TPMS)

SP1489	Right front wheel matching	Tire Pressure Monitoring Module (Sensata) (TPMS)
SP1490	Left rear wheel matching	Tire Pressure Monitoring Module (Sensata) (TPMS)
SP1491	Right rear wheel matching	Tire Pressure Monitoring Module (Sensata) (TPMS)
SP1492	Write HCE flagship	Electronic Parking System (Sark) (EPB)
SP1493	Write HCEA noble type	Electronic Parking System (Sark) (EPB)
SP1494	Erase car configuration	Electronic Parking System (Sark) (EPB)
SP1495	Ground coordinate system information	Front millimeter wave radar (Vininger) (FMRR)
SP1496	Erase car configuration	Front millimeter wave radar (Vininger) (FMRR)
SP1497	Write flagship Y	Front millimeter wave radar (Vininger) (FMRR)
SP1498	Write noble type Y	Front millimeter wave radar (Vininger) (FMRR)
SP1499	Write luxury Y	Front millimeter wave radar (Vininger) (FMRR)
SP1500	After-sales calibration	Front millimeter wave radar (Vininger) (FMRR)
SP1501	Static calibration	Front millimeter wave radar (Vininger) (FMRR)
SP1502	Memory check	Multi-Function Video Controller (Winninger) (MPC)
SP1503	Read vehicle VIN	Multi-Function Video Controller (Winninger) (MPC)
SP1504	After-sales calibration begins	Multi-Function Video Controller (Winninger) (MPC)
SP1505	Write flagship Y	Multi-Function Video Controller (Winninger) (MPC)
SP1506	Write noble type Y	Multi-Function Video Controller (Winninger) (MPC)
SP1507	Write luxury Y	Multi-Function Video Controller (Winninger) (MPC)
SP1508	Write noble type Y, luxury type Y	Multi-Function Video Controller (Winninger) (MPC)
SP1509	Configuration byte erasure	Multi-Function Video Controller (Winninger) (MPC)
SP1510	Dynamic calibration	Multi-Function Video Controller (Winninger) (MPC)
SP1511	Write flagship Y	Left Blind Spot Monitoring (Winninger) (BSD_L)
SP1512	Write noble type Y	Left Blind Spot Monitoring (Winninger) (BSD_L)
SP1513	Configuration wipe	Left Blind Spot Monitoring (Winninger) (BSD_L)

SP1514	After-sales calibration	Left Blind Spot Monitoring (Winninger) (BSD_L)
SP1515	Reading the serial number of the millimeter wave radar on the left rear	Left Blind Spot Monitoring (Winninger) (BSD_L)
SP1516	Write flagship Y	Monitoring from the blind spot (BYD) (BSD_C)
SP1517	Write noble type Y	Monitoring from the blind spot (BYD) (BSD_C)
SP1518	Configuration wipe	Monitoring from the blind spot (BYD) (BSD_C)
SP1519	Write flagship Y	Right blind spot monitoring (BSD_R)
SP1520	Write noble type Y	Right blind spot monitoring (BSD_R)
SP1521	Configuration wipe	Right blind spot monitoring (BSD_R)
SP1522	After-sales calibration	Right blind spot monitoring (BSD_R)
SP1523	Reading the serial number of the millimeter wave radar on the right rear	Right blind spot monitoring (BSD_R)
SP1524	Write flagship Y	Blind Spot Monitoring (BYD) (BSD)
SP1525	Write noble type Y	Blind Spot Monitoring (BYD) (BSD)
SP1526	Configuration wipe	Blind Spot Monitoring (BYD) (BSD)
SP1527	ECU unlock	Airbag Three Generation (SRS_III)
SP1528	Warning light function test	Airbag_Three Generation (SRS_III)
SP1529	VIN writing and airbag decryption	Airbag_Three Generation (SRS_III)
SP1530	Write the ID of the front left tire pressure monitoring module	Integrated body controller B2 (IBCMB2)
SP1531	Write the ID of the front right tire pressure monitoring module	Integrated body controller B2 (IBCMB2)
SP1532	Write the ID of the left rear tire pressure monitoring module	Integrated body controller B2 (IBCMB2)

SP1533	Write the ID of the rear right tire pressure monitoring module	Integrated body controller B2 (IBCMB2)
SP1534	Left front wheel matching	Integrated body controller B2 (IBCMB2)
SP1535	Right front wheel matching	Integrated body controller B2 (IBCMB2)
SP1536	Left rear wheel matching	Integrated body controller B2 (IBCMB2)
SP1537	Right rear wheel matching	Integrated body controller B2 (IBCMB2)
SP1538	Left front wheel matching	Integrated body controller B2 (IBCMB2)
SP1539	Right front wheel matching	Integrated body controller B2 (IBCMB2)
SP1540	Left rear wheel matching	Integrated body controller B2 (IBCMB2)
SP1541	Right rear wheel matching	Integrated body controller B2 (IBCMB2)
SP1542	Fuel level at which low fuel alarm is activated	Combination Instrument (Desai) (INS)
SP1543	Fuel level for low fuel alarm cancellation	Combination Instrument (Desai) (INS)
SP1544	The temperature at which the engine coolant temperature high alarm is activated	Combination Instrument (Desai) (INS)
SP1545	The temperature at which the engine coolant temperature high alarm is cancelled	Combination Instrument (Desai) (INS)
SP1546	Engine coolant temperature power-on filter time	Combination Instrument (Desai) (INS)
SP1547	Seat belt alarm activates speed	Combination Instrument (Desai) (INS)

SP1548	The speed at which the door is not closed and the audible alarm is activated	Combination Instrument (Desai) (INS)
SP1549	The speed at which the handbrake is not released and the audible alarm is activated	Combination Instrument (Desai) (INS)
SP1550	The speed at which the speeding audible alarm is activated	Combination Instrument (Desai) (INS)
SP1551	Damped vehicle speed canceled by speeding sound alarm	Combination Instrument (Desai) (INS)
SP1552	Maximum display value of cruising range	Combination Instrument (Desai) (INS)
SP1553	Rated fuel consumption	Combination Instrument (Desai) (INS)
SP1554	Instantaneous fuel consumption refresh time	Combination Instrument (Desai) (INS)
SP1555	Maximum instantaneous fuel consumption displayed value	Combination Instrument (Desai) (INS)
SP1556	The minimum vehicle speed for the instantaneous fuel consumption switching unit	Combination Instrument (Desai) (INS)
SP1557	Average fuel consumption refresh time	Combination Instrument (Desai) (INS)
SP1558	Average fuel consumption ratio coefficient	Combination Instrument (Desai) (INS)
SP1559	Maximum display value of average fuel consumption	Combination Instrument (Desai) (INS)

SP1560	Drive time refresh time	Combination Instrument (Desai) (INS)
SP1561	Average speed refresh time	Combination Instrument (Desai) (INS)
SP1562	Maximum display value of average speed	Combination Instrument (Desai) (INS)
SP1563	When there are multiple alarms, the normal cycle display time of a single alarm	Combination Instrument (Desai) (INS)
SP1564	Fatigue driving time	Combination Instrument (Desai) (INS)
SP1565	Acceleration time scale factor	Combination Instrument (Desai) (INS)
SP1566	Alarm point of the electricity meter	Combination Instrument (Desai) (INS)
SP1567	Muting fault indicator	Combination Instrument (Desai) (INS)
SP1568	Driver's seat belt is not fastened indicator light	Combination Instrument (Desai) (INS)
SP1569	Co-pilot seat belt not fastened indicator light	Combination Instrument (Desai) (INS)
SP1570	Left rear seat belt not fastened indicator light	Combination Instrument (Desai) (INS)
SP1571	Middle and rear seat belt not fastened indicator light	Combination Instrument (Desai) (INS)
SP1572	Rear right seat belt not fastened indicator light	Combination Instrument (Desai) (INS)
SP1573	SRS fault indicator	Combination Instrument (Desai) (INS)
SP1574	EPS fault indicator	Combination Instrument (Desai) (INS)
SP1575	Headlamp fault indicator	Combination Instrument (Desai) (INS)
SP1576	Brake pad wear indicator	Combination Instrument (Desai) (INS)

SP1577	ABS fault indicator	Combination Instrument (Desai) (INS)
SP1578	ESP fault indicator	Combination Instrument (Desai) (INS)
SP1579	Steep slope descent fault indicator	Combination Instrument (Desai) (INS)
SP1580	Low oil level indicator	Combination Instrument (Desai) (INS)
SP1581	Engine fault indicator	Combination Instrument (Desai) (INS)
SP1582	Coolant temperature is too high indicator	Combination Instrument (Desai) (INS)
SP1583	Low oil pressure indicator	Combination Instrument (Desai) (INS)
SP1584	Fast tire leak indicator	Combination Instrument (Desai) (INS)
SP1585	Brake failure indicator	Combination Instrument (Desai) (INS)
SP1586	Low-voltage power supply system fault indicator	Combination Instrument (Desai) (INS)
SP1587	Power battery overheating indicator	Combination Instrument (Desai) (INS)
SP1588	Motor overheating indicator	Combination Instrument (Desai) (INS)
SP1589	Motor fault indicator	Combination Instrument (Desai) (INS)
SP1590	Motor coolant temperature is too high indicator	Combination Instrument (Desai) (INS)
SP1591	Power battery failure indicator	Combination Instrument (Desai) (INS)
SP1592	Power system failure indicator	Combination Instrument (Desai) (INS)
SP1593	Drive power limit indicator	Combination Instrument (Desai) (INS)
SP1594	Low tire pressure indicator	Combination Instrument (Desai) (INS)
SP1595	ACC fault indicator	Combination Instrument (Desai) (INS)

SP1596	Lane change blind spot indicator	Combination Instrument (Desai) (INS)
SP1597	Emergency brake (fault) indicator	Combination Instrument (Desai) (INS)
SP1598	Main warning light	Combination Instrument (Desai) (INS)
SP1599	Block yellow text messages	Combination Instrument (Desai) (INS)
SP1600	Block red text messages	Combination Instrument (Desai) (INS)
SP1601	Please check the SRS system	Combination Instrument (Desai) (INS)
SP1602	Please check the steering system	Combination Instrument (Desai) (INS)
SP1603	Please check the headlight system	Combination Instrument (Desai) (INS)
SP1604	Please check the brake pads	Combination Instrument (Desai) (INS)
SP1605	Please check the ABS system	Combination Instrument (Desai) (INS)
SP1606	Please check the ESP system	Combination Instrument (Desai) (INS)
SP1607	Please check HDC system	Combination Instrument (Desai) (INS)
SP1608	Engine oil level is too low	Combination Instrument (Desai) (INS)
SP1609	Please check the engine system	Combination Instrument (Desai) (INS)
SP1610	Engine coolant temperature is too high	Combination Instrument (Desai) (INS)
SP1611	Insufficient oil pressure	Combination Instrument (Desai) (INS)
SP1612	Fast air leak (in the form of car body tires)	Combination Instrument (Desai) (INS)
SP1613	Please check the brake system	Combination Instrument (Desai) (INS)
SP1614	Low brake fluid level	Combination Instrument (Desai) (INS)
SP1615	Please check the electronic parking system	Combination Instrument (Desai) (INS)

SP1616	The low-voltage power supply system is faulty, please stop safely and contact the service shop	Combination Instrument (Desai) (INS)
SP1617	Please check the low-voltage power supply system	Combination Instrument (Desai) (INS)
SP1618	Please check the starting iron battery system	Combination Instrument (Desai) (INS)
SP1619	The starting iron battery is faulty, please contact the service store for replacement	Combination Instrument (Desai) (INS)
SP1620	Please check the power generation system	Combination Instrument (Desai) (INS)
SP1621	Engine speed is too high	Combination Instrument (Desai) (INS)
SP1622	Engine oil level is too high	Combination Instrument (Desai) (INS)
SP1623	Please check the oil monitoring system	Combination Instrument (Desai) (INS)
SP1624	Engine accessory functions are limited	Combination Instrument (Desai) (INS)
SP1625	Limited transmission function	Combination Instrument (Desai) (INS)
SP1626	Please check the transmission system	Combination Instrument (Desai) (INS)
SP1627	The clutch temperature is high, please pull over and park safely	Combination Instrument (Desai) (INS)
SP1628	The gearbox oil temperature is too high, please pull over to cool down	Combination Instrument (Desai) (INS)

SP1629	Please check the gear system	Combination Instrument (Desai) (INS)
SP1630	The engine failed to start, please drive to a safe area and stop for inspection	Combination Instrument (Desai) (INS)
SP1631	Please check the power battery	Combination Instrument (Desai) (INS)
SP1632	Please check the power system	Combination Instrument (Desai) (INS)
SP1633	Limited EV function	Combination Instrument (Desai) (INS)
SP1634	The vehicle enters the forced EV mode and the power is limited	Combination Instrument (Desai) (INS)
SP1635	Please check the tire pressure monitoring system	Combination Instrument (Desai) (INS)
SP1636	Tire pressure under pressure alarm	Combination Instrument (Desai) (INS)
SP1637	Abnormal tire pressure signal	Combination Instrument (Desai) (INS)
SP1638	Tire temperature is too high	Combination Instrument (Desai) (INS)
SP1639	Please check the adaptive cruise system	Combination Instrument (Desai) (INS)
SP1640	Please check the BSD system	Combination Instrument (Desai) (INS)
SP1641	Please check the automatic emergency braking system	Combination Instrument (Desai) (INS)
SP1642	Please check the front millimeter wave radar	Combination Instrument (Desai) (INS)
SP1643	Please check the multi-function video controller	Combination Instrument (Desai) (INS)
SP1644	Please check the predictive collision warning system	Combination Instrument (Desai) (INS)

SP1645	Please check the pedestrian detection system	Combination Instrument (Desai) (INS)
SP1646	Please check the lane keeping system	Combination Instrument (Desai) (INS)
SP1647	Please check the lane departure system	Combination Instrument (Desai) (INS)
SP1648	Please check the traffic sign recognition system	Combination Instrument (Desai) (INS)
SP1649	Please check the smart far and near beam system	Combination Instrument (Desai) (INS)
SP1650	Multi-function video controller has limited functions	Combination Instrument (Desai) (INS)
SP1651	Please check the start-stop system	Combination Instrument (Desai) (INS)
SP1652	Air conditioner thermal management failure, please contact the service shop for repair	Combination Instrument (Desai) (INS)
SP1653	Please add fuel	Combination Instrument (Desai) (INS)
SP1654	Please check the four-wheel drive system	Combination Instrument (Desai) (INS)
SP1655	Please check the vehicle network	Combination Instrument (Desai) (INS)
SP1656	Please check the memory system	Combination Instrument (Desai) (INS)
SP1657	Please check the sunroof system	Combination Instrument (Desai) (INS)
SP1658	Please check the car charging system	Combination Instrument (Desai) (INS)
SP1659	Please check the charging equipment	Combination Instrument (Desai) (INS)
SP1660	Please check the grid system	Combination Instrument (Desai) (INS)

SP1661	Please check the discharge equipment	Combination Instrument (Desai) (INS)
SP1662	The vehicle speed exceeds XXX km/h	Combination Instrument (Desai) (INS)
SP1663	There are still XX days before maintenance	Combination Instrument (Desai) (INS)
SP1664	XXX km to maintenance	Combination Instrument (Desai) (INS)
SP1665	There are still XX days XXX km from maintenance	Combination Instrument (Desai) (INS)
SP1666	Please go to BYD authorized service store for maintenance immediately	Combination Instrument (Desai) (INS)
SP1667	Key not detected	Combination Instrument (Desai) (INS)
SP1668	Key battery is low	Combination Instrument (Desai) (INS)
SP1669	The key is low, please replace the battery as soon as possible	Combination Instrument (Desai) (INS)
SP1670	The key is not detected, please move the key close to the RF card reader and start the vehicle	Combination Instrument (Desai) (INS)
SP1671	The key is not detected, please confirm if the key is in the car	Combination Instrument (Desai) (INS)
SP1672	The communication is abnormal, there are XX days left before the key function fails, please contact the 4S shop to deal with it as soon as possible	Combination Instrument (Desai) (INS)

SP1673	The communication is abnormal, there are XX hours left before the key function fails, please contact the 4S shop to deal with it as soon as possible	Combination Instrument (Desai) (INS)
SP1674	The key function has failed and the vehicle cannot be used normally	Combination Instrument (Desai) (INS)
SP1675	RGB screen test	Combination Instrument (Desai) (INS)
SP1676	Black and white grid test	Combination Instrument (Desai) (INS)
SP1677	Return control to ECU	Combination Instrument (Desai) (INS)
SP1678	Engine sound simulator switch	Combination Instrument (Desai) (INS)
SP1679	Engine sound simulator sound function	Combination Instrument (Desai) (INS)
SP1680	Audio source mode	Combination Instrument (Desai) (INS)
SP1681	Fuel level at which low fuel alarm is activated	Combination Instrument (Tianyouwei) (INS)
SP1682	Fuel level for low fuel alarm cancellation	Combination Instrument (Tianyouwei) (INS)
SP1683	The temperature at which the engine coolant temperature high alarm is activated	Combination Instrument (Tianyouwei) (INS)
SP1684	The temperature at which the engine coolant temperature high alarm is cancelled	Combination Instrument (Tianyouwei) (INS)

SP1685	Engine coolant temperature power-on filter time	Combination Instrument (Tianyouwei) (INS)
SP1686	Seat belt alarm activates speed	Combination Instrument (Tianyouwei) (INS)
SP1687	The speed at which the door is not closed and the audible alarm is activated	Combination Instrument (Tianyouwei) (INS)
SP1688	The speed at which the handbrake is not released and the audible alarm is activated	Combination Instrument (Tianyouwei) (INS)
SP1689	The speed at which the speeding audible alarm is activated	Combination Instrument (Tianyouwei) (INS)
SP1690	Damped vehicle speed canceled by speeding sound alarm	Combination Instrument (Tianyouwei) (INS)
SP1691	Maximum display value of cruising range	Combination Instrument (Tianyouwei) (INS)
SP1692	Rated fuel consumption	Combination Instrument (Tianyouwei) (INS)
SP1693	Instantaneous fuel consumption refresh time	Combination Instrument (Tianyouwei) (INS)
SP1694	Maximum instantaneous fuel consumption displayed value	Combination Instrument (Tianyouwei) (INS)
SP1695	The minimum vehicle speed for the instantaneous fuel consumption switching unit	Combination Instrument (Tianyouwei) (INS)
SP1696	Average fuel consumption refresh time	Combination Instrument (Tianyouwei) (INS)

SP1697	Average fuel consumption ratio coefficient	Combination Instrument (Tianyouwei) (INS)
SP1698	Maximum display value of average fuel consumption	Combination Instrument (Tianyouwei) (INS)
SP1699	Drive time refresh time	Combination Instrument (Tianyouwei) (INS)
SP1700	Average speed refresh time	Combination Instrument (Tianyouwei) (INS)
SP1701	Maximum display value of average speed	Combination Instrument (Tianyouwei) (INS)
SP1702	When there are multiple alarms, the normal cycle display time of a single alarm	Combination Instrument (Tianyouwei) (INS)
SP1703	Fatigue driving time	Combination Instrument (Tianyouwei) (INS)
SP1704	Acceleration time scale factor	Combination Instrument (Tianyouwei) (INS)
SP1705	Alarm point of the electricity meter	Combination Instrument (Tianyouwei) (INS)
SP1706	Muting fault indicator	Combination Instrument (Tianyouwei) (INS)
SP1707	Driver's seat belt is not fastened indicator light	Combination Instrument (Tianyouwei) (INS)
SP1708	Co-pilot seat belt not fastened indicator light	Combination Instrument (Tianyouwei) (INS)
SP1709	Left rear seat belt not fastened indicator light	Combination Instrument (Tianyouwei) (INS)
SP1710	Middle and rear seat belt not fastened indicator light	Combination Instrument (Tianyouwei) (INS)
SP1711	Rear right seat belt not fastened indicator light	Combination Instrument (Tianyouwei) (INS)

SP1712	SRS fault indicator	Combination Instrument (Tianyouwei) (INS)
SP1713	EPS fault indicator	Combination Instrument (Tianyouwei) (INS)
SP1714	Headlamp fault indicator	Combination Instrument (Tianyouwei) (INS)
SP1715	Brake pad wear indicator	Combination Instrument (Tianyouwei) (INS)
SP1716	ABS fault indicator	Combination Instrument (Tianyouwei) (INS)
SP1717	ESP fault indicator	Combination Instrument (Tianyouwei) (INS)
SP1718	Steep slope descent fault indicator	Combination Instrument (Tianyouwei) (INS)
SP1719	Low oil level indicator	Combination Instrument (Tianyouwei) (INS)
SP1720	Engine fault indicator	Combination Instrument (Tianyouwei) (INS)
SP1721	Coolant temperature is too high indicator	Combination Instrument (Tianyouwei) (INS)
SP1722	Low oil pressure indicator	Combination Instrument (Tianyouwei) (INS)
SP1723	Fast tire leak indicator	Combination Instrument (Tianyouwei) (INS)
SP1724	Brake failure indicator	Combination Instrument (Tianyouwei) (INS)
SP1725	Low-voltage power supply system fault indicator	Combination Instrument (Tianyouwei) (INS)
SP1726	Power battery overheating indicator	Combination Instrument (Tianyouwei) (INS)
SP1727	Motor overheating indicator	Combination Instrument (Tianyouwei) (INS)
SP1728	Motor fault indicator	Combination Instrument (Tianyouwei) (INS)
SP1729	Motor coolant temperature is too high indicator	Combination Instrument (Tianyouwei) (INS)
SP1730	Power battery failure indicator	Combination Instrument (Tianyouwei) (INS)

SP1731	Power system failure indicator	Combination Instrument (Tianyouwei) (INS)
SP1732	Drive power limit indicator	Combination Instrument (Tianyouwei) (INS)
SP1733	Low tire pressure indicator	Combination Instrument (Tianyouwei) (INS)
SP1734	ACC fault indicator	Combination Instrument (Tianyouwei) (INS)
SP1735	Lane change blind spot indicator	Combination Instrument (Tianyouwei) (INS)
SP1736	Emergency brake (fault) indicator	Combination Instrument (Tianyouwei) (INS)
SP1737	Main warning light	Combination Instrument (Tianyouwei) (INS)
SP1738	Block yellow text messages	Combination Instrument (Tianyouwei) (INS)
SP1739	Block red text messages	Combination Instrument (Tianyouwei) (INS)
SP1740	Please check the SRS system	Combination Instrument (Tianyouwei) (INS)
SP1741	Please check the steering system	Combination Instrument (Tianyouwei) (INS)
SP1742	Please check the headlight system	Combination Instrument (Tianyouwei) (INS)
SP1743	Please check the brake pads	Combination Instrument (Tianyouwei) (INS)
SP1744	Please check the ABS system	Combination Instrument (Tianyouwei) (INS)
SP1745	Please check the ESP system	Combination Instrument (Tianyouwei) (INS)
SP1746	Please check HDC system	Combination Instrument (Tianyouwei) (INS)
SP1747	Engine oil level is too low	Combination Instrument (Tianyouwei) (INS)
SP1748	Please check the engine system	Combination Instrument (Tianyouwei) (INS)
SP1749	Engine coolant temperature is too high	Combination Instrument (Tianyouwei) (INS)
SP1750	Insufficient oil pressure	Combination Instrument (Tianyouwei) (INS)
SP1751	Fast air leak (in the form of car body tires)	Combination Instrument (Tianyouwei) (INS)
SP1752	Please check the brake system	Combination Instrument (Tianyouwei) (INS)

SP1753	Low brake fluid level	Combination Instrument (Tianyouwei) (INS)
SP1754	Please check the electronic parking system	Combination Instrument (Tianyouwei) (INS)
SP1755	The low-voltage power supply system is faulty, please stop safely and contact the service shop	Combination Instrument (Tianyouwei) (INS)
SP1756	Please check the low-voltage power supply system	Combination Instrument (Tianyouwei) (INS)
SP1757	Please check the starting iron battery system	Combination Instrument (Tianyouwei) (INS)
SP1758	The starting iron battery is faulty, please contact the service store for replacement	Combination Instrument (Tianyouwei) (INS)
SP1759	Please check the power generation system	Combination Instrument (Tianyouwei) (INS)
SP1760	Engine speed is too high	Combination Instrument (Tianyouwei) (INS)
SP1761	Engine oil level is too high	Combination Instrument (Tianyouwei) (INS)
SP1762	Please check the oil monitoring system	Combination Instrument (Tianyouwei) (INS)
SP1763	Engine accessory functions are limited	Combination Instrument (Tianyouwei) (INS)
SP1764	Limited transmission function	Combination Instrument (Tianyouwei) (INS)
SP1765	Please check the transmission system	Combination Instrument (Tianyouwei) (INS)
SP1766	The clutch temperature is high, please pull over and park safely	Combination Instrument (Tianyouwei) (INS)

SP1767	The gearbox oil temperature is too high, please pull over to cool down	Combination Instrument (Tianyouwei) (INS)
SP1768	Please check the gear system	Combination Instrument (Tianyouwei) (INS)
SP1769	The engine failed to start, please drive to a safe area and stop for inspection	Combination Instrument (Tianyouwei) (INS)
SP1770	Please check the power battery	Combination Instrument (Tianyouwei) (INS)
SP1771	Please check the power system	Combination Instrument (Tianyouwei) (INS)
SP1772	Limited EV function	Combination Instrument (Tianyouwei) (INS)
SP1773	The vehicle enters the forced EV mode and the power is limited	Combination Instrument (Tianyouwei) (INS)
SP1774	Please check the tire pressure monitoring system	Combination Instrument (Tianyouwei) (INS)
SP1775	Tire pressure under pressure alarm	Combination Instrument (Tianyouwei) (INS)
SP1776	Abnormal tire pressure signal	Combination Instrument (Tianyouwei) (INS)
SP1777	Tire temperature is too high	Combination Instrument (Tianyouwei) (INS)
SP1778	Please check the adaptive cruise system	Combination Instrument (Tianyouwei) (INS)
SP1779	Please check the BSD system	Combination Instrument (Tianyouwei) (INS)
SP1780	Please check the automatic emergency braking system	Combination Instrument (Tianyouwei) (INS)
SP1781	Please check the front millimeter wave radar	Combination Instrument (Tianyouwei) (INS)
SP1782	Please check the multi-function video controller	Combination Instrument (Tianyouwei) (INS)

SP1783	Please check the predictive collision warning system	Combination Instrument (Tianyouwei) (INS)
SP1784	Please check the pedestrian detection system	Combination Instrument (Tianyouwei) (INS)
SP1785	Please check the lane keeping system	Combination Instrument (Tianyouwei) (INS)
SP1786	Please check the lane departure system	Combination Instrument (Tianyouwei) (INS)
SP1787	Please check the traffic sign recognition system	Combination Instrument (Tianyouwei) (INS)
SP1788	Please check the smart far and near beam system	Combination Instrument (Tianyouwei) (INS)
SP1789	Multi-function video controller has limited functions	Combination Instrument (Tianyouwei) (INS)
SP1790	Please check the start-stop system	Combination Instrument (Tianyouwei) (INS)
SP1791	Air conditioner thermal management failure, please contact the service shop for repair	Combination Instrument (Tianyouwei) (INS)
SP1792	Please add fuel	Combination Instrument (Tianyouwei) (INS)
SP1793	Please check the four-wheel drive system	Combination Instrument (Tianyouwei) (INS)
SP1794	Please check the vehicle network	Combination Instrument (Tianyouwei) (INS)
SP1795	Please check the memory system	Combination Instrument (Tianyouwei) (INS)
SP1796	Please check the sunroof system	Combination Instrument (Tianyouwei) (INS)
SP1797	Please check the car charging system	Combination Instrument (Tianyouwei) (INS)
SP1798	Please check the charging equipment	Combination Instrument (Tianyouwei) (INS)

SP1799	Please check the grid system	Combination Instrument (Tianyouwei) (INS)
SP1800	Please check the discharge equipment	Combination Instrument (Tianyouwei) (INS)
SP1801	The vehicle speed exceeds XXX km/h	Combination Instrument (Tianyouwei) (INS)
SP1802	There are still XX days before maintenance	Combination Instrument (Tianyouwei) (INS)
SP1803	XXX km to maintenance	Combination Instrument (Tianyouwei) (INS)
SP1804	There are still XX days XXX km from maintenance	Combination Instrument (Tianyouwei) (INS)
SP1805	Please go to BYD authorized service store for maintenance immediately	Combination Instrument (Tianyouwei) (INS)
SP1806	Key not detected	Combination Instrument (Tianyouwei) (INS)
SP1807	Key battery is low	Combination Instrument (Tianyouwei) (INS)
SP1808	The key is low, please replace the battery as soon as possible	Combination Instrument (Tianyouwei) (INS)
SP1809	The key is not detected, please move the key close to the RF card reader and start the vehicle	Combination Instrument (Tianyouwei) (INS)
SP1810	The key is not detected, please confirm if the key is in the car	Combination Instrument (Tianyouwei) (INS)
SP1811	The communication is abnormal, there are XX days left before the key function fails, please contact the 4S shop to deal with it as soon as possible	Combination Instrument (Tianyouwei) (INS)

SP1812	The communication is abnormal, there are XX hours left before the key function fails, please contact the 4S shop to deal with it as soon as possible	Combination Instrument (Tianyouwei) (INS)
SP1813	The key function has failed and the vehicle cannot be used normally	Combination Instrument (Tianyouwei) (INS)
SP1814	RGB screen test	Combination Instrument (Tianyouwei) (INS)
SP1815	Black and white grid test	Combination Instrument (Tianyouwei) (INS)
SP1816	Return control to ECU	Combination Instrument (Tianyouwei) (INS)
SP1817	Engine sound simulator switch	Combination Instrument (Tianyouwei) (INS)
SP1818	Engine sound simulator sound function	Combination Instrument (Tianyouwei) (INS)
SP1819	Audio source mode	Combination Instrument (Tianyouwei) (INS)
SP1820	Electric column calibration	Electric String Controller (PTECU)
SP1821	Main driver seat calibration	Main driver seat controller (BYD) (SECU_D)
SP1822	Start routine affairs	Front passenger seat controller (BYD) (SECU_P)
SP1823	Request routine transaction results	Front passenger seat controller (BYD) (SECU_P)
SP1824	The first step-read the working hours of the original ECU mainland pump	Main Controller (ACU)
SP1825	The second step-write the working time read in the first step	Main Controller (ACU)

SP1826	Clear the working hours of Continental pumps	Main Controller (ACU)
SP1827	VIN self-learning	Main Controller (ACU)
SP1828	One-button battery heating active test	Battery Management System (BMS)
SP1829	Factory calibration of battery pack	Battery Management System (BMS)
SP1830	Battery pack actual calibration	Battery Management System (BMS)
SP1831	Downline calibration of inclination	VTOG_DSP2 (VTOG_DSP2)
SP1832	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP1833	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP1834	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP1835	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP1836	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP1837	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP1838	Read the current zero point of the torque sensor	Power Steering (EPS)
SP1839	Set the current torque sensor sampling value to zero	Power Steering (EPS)
SP1840	Read the current zero point of the steering wheel angle sensor	Power Steering (EPS)

SP1841	Set the current steering wheel angle sensor sampling value to zero	Power Steering (EPS)
SP1842	ECU unlock	Airbag (SRS)
SP1843	Warning light test	Airbag (SRS)
SP1844	Electric column calibration	Electric steering column (PTECU)
SP1845	Main driver seat calibration	Main driving seat system (SECU_D)
SP1846	The first step-read the working hours of the original ECU mainland pump	Main Controller (ACU)
SP1847	The second step-write the working time read in the first step	Main Controller (ACU)
SP1848	Clear the working hours of Continental pumps	Main Controller (ACU)
SP1849	VIN self-learning	Main Controller (ACU)
SP1850	One-button battery heating active test	Battery Management System (BMS)
SP1851	One-button battery heating active test off	Battery Management System (BMS)
SP1852	Factory calibration of battery pack	Battery Management System (BMS)
SP1853	Battery pack actual calibration	Battery Management System (BMS)
SP1854	Downline calibration of inclination	VTOG_DSP2 (VTOG_DSP2)
SP1855	Downline calibration of inclination	VTOG_DSP2 short version (VTOG_DSP2 short version)
SP1856	Cruise calibration	VTOG_DSP2 short version (VTOG_DSP2 short version)
SP1857	Adaptive cruise calibration	VTOG_DSP2 short version (VTOG_DSP2 short version)

SP1858	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP1859	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP1860	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP1861	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP1862	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP1863	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP1864	Read the current zero point of the torque sensor	Power Steering (EPS)
SP1865	Set the current torque sensor sampling value to zero	Power Steering (EPS)
SP1866	Read the current zero point of the steering wheel angle sensor	Power Steering (EPS)
SP1867	Set the current steering wheel angle sensor sampling value to zero	Power Steering (EPS)
SP1868	Gradient sensor calibration	Electronic Parking (Sark) (EPB)
SP1869	ECU unlock	Airbag (SRS)
SP1870	Warning light test	Airbag (SRS)
SP1871	Left front wheel matching	Tire Pressure Management Module (TPMS)
SP1872	Right front wheel matching	Tire Pressure Management Module (TPMS)
SP1873	Left rear wheel matching	Tire Pressure Management Module (TPMS)
SP1874	Right rear wheel matching	Tire Pressure Management Module (TPMS)
SP1875	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)

SP1876	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP1877	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP1878	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP1879	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP1880	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP1881	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP1882	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP1883	Electric column calibration	Electric steering column (PTECU)
SP1884	Main driver seat calibration	Main driving seat system (SECU001)
SP1885	Cruise control configuration write	Vehicle Controller (VCU)
SP1886	Adaptive cruise configuration write	Vehicle Controller (VCU)
SP1887	Vacuum pump working time is cleared	Vehicle Controller (VCU)
SP1888	Downline calibration of inclination	Vehicle Controller (VCU)
SP1889	VIN self-learning	Vehicle Controller (VCU)
SP1890	One-button battery heating active test	Ternary Battery Manager 330 (BMS)
SP1891	Factory calibration of battery pack	Ternary Battery Manager 330 (BMS)
SP1892	Battery pack actual calibration	Ternary Battery Manager 330 (BMS)
SP1893	One-button battery heating active test	Ternary Battery Manager 450 (BMS)
SP1894	Forced balance active test	Ternary Battery Manager 450 (BMS)
SP1895	Force balanced data flow	Ternary Battery Manager 450 (BMS)

SP1896	Cycle query of forced balance progress active test results	Ternary Battery Manager 450 (BMS)
SP1897	Force balance active test off	Ternary Battery Manager 450 (BMS)
SP1898	Factory calibration of battery pack	Ternary Battery Manager 450 (BMS)
SP1899	Battery pack actual calibration	Ternary Battery Manager 450 (BMS)
SP1900	One-button battery heating active test	Ternary Battery Manager 500 (BMS)
SP1901	Forced balance active test	Ternary Battery Manager 500 (BMS)
SP1902	Force balanced data flow	Ternary Battery Manager 500 (BMS)
SP1903	Cycle query of forced balance progress active test results	Ternary Battery Manager 500 (BMS)
SP1904	Force balance active test off	Ternary Battery Manager 500 (BMS)
SP1905	Factory calibration of battery pack	Ternary Battery Manager 500 (BMS)
SP1906	Battery pack actual calibration	Ternary Battery Manager 500 (BMS)
SP1907	Request to turn on cooling	Battery Manager 500 (BMS)
SP1908	Progress query	Battery Manager 500 (BMS)
SP1909	Request to turn off cooling	Battery Manager 500 (BMS)
SP1910	Request to turn on heating	Battery Manager 500 (BMS)
SP1911	Progress query	Battery Manager 500 (BMS)
SP1912	Request to turn off the heating	Battery Manager 500 (BMS)
SP1913	Request to enable forced balance	Battery Manager 500 (BMS)
SP1914	Progress query	Battery Manager 500 (BMS)
SP1915	Request to close forced balance	Battery Manager 500 (BMS)
SP1916	Request to turn on leakage detection	Battery Manager 500 (BMS)

SP1917	Progress query	Battery Manager 500 (BMS)
SP1918	Request to turn off leakage detection	Battery Manager 500 (BMS)
SP1919	Request to enable hard wire interlock	Battery Manager 500 (BMS)
SP1920	Progress query	Battery Manager 500 (BMS)
SP1921	Request to close the hardwire interlock	Battery Manager 500 (BMS)
SP1922	Factory calibration of battery pack	Battery Manager 500 (BMS)
SP1923	Battery pack actual calibration	Battery Manager 500 (BMS)
SP1924	Request to turn on cooling	Battery Manager 400 (BMS)
SP1925	Progress query	Battery Manager 400 (BMS)
SP1926	Request to turn off cooling	Battery Manager 400 (BMS)
SP1927	Request to turn on heating	Battery Manager 400 (BMS)
SP1928	Progress query	Battery Manager 400 (BMS)
SP1929	Request to turn off the heating	Battery Manager 400 (BMS)
SP1930	Request to enable forced balance	Battery Manager 400 (BMS)
SP1931	Progress query	Battery Manager 400 (BMS)
SP1932	Request to close forced balance	Battery Manager 400 (BMS)
SP1933	Request to turn on leakage detection	Battery Manager 400 (BMS)
SP1934	Progress query	Battery Manager 400 (BMS)
SP1935	Request to turn off leakage detection	Battery Manager 400 (BMS)
SP1936	Request to enable hard wire interlock	Battery Manager 400 (BMS)
SP1937	Progress query	Battery Manager 400 (BMS)
SP1938	Request to close the hardwire interlock	Battery Manager 400 (BMS)
SP1939	Factory calibration of battery pack	Battery Manager 400 (BMS)

SP1940	Battery pack actual calibration	Battery Manager 400 (BMS)
SP1941	Motor zero calibration	Front Drive Motor Controller (FMCU)
SP1942	LS control switch off state control function calibration	Charging and Distribution Assembly (CDU)
SP1943	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP1944	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP1945	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP1946	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP1947	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP1948	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP1949	ECU reset	Electronic Body Stability System (ESP)
SP1950	Write luxury type, noble type	Electronic Body Stability System (ESP)
SP1951	Write comfort type	Electronic Body Stability System (ESP)
SP1952	Erase car configuration	Electronic Body Stability System (ESP)
SP1953	Write 500km of luxury type, noble type, and noble type	Electronic Body Stability System (ESP)
SP1954	Write comfort type, luxury type 500km, reserve type	Electronic Body Stability System (ESP)
SP1955	Write aggressive	Electronic Body Stability System (ESP)
SP1956	Erase car configuration	Electronic Body Stability System (ESP)
SP1957	Write noble type	Electronic Body Stability System (ESP)
SP1958	Write luxury type, enterprising type Y	Electronic Body Stability System (ESP)
SP1959	Erase car configuration	Electronic Body Stability System (ESP)

SP1960	Angle zero calibration	Electric Power Steering_EPS (Tianhe) (EPS)
SP1961	Write comfort configuration	Electric Power Steering_EPS (Tianhe) (EPS)
SP1962	Write luxury configuration	Electric Power Steering_EPS (Tianhe) (EPS)
SP1963	Write premium configuration	Electric Power Steering_EPS (Tianhe) (EPS)
SP1964	Write online appointment version configuration	Electric Power Steering_EPS (Tianhe) (EPS)
SP1965	Write comfort configuration	Electric Power Steering_EPS (Tianhe) (EPS)
SP1966	Write luxury configuration	Electric Power Steering_EPS (Tianhe) (EPS)
SP1967	Write premium configuration	Electric Power Steering_EPS (Tianhe) (EPS)
SP1968	Write luxury 500km configuration	Electric Power Steering_EPS (Tianhe) (EPS)
SP1969	Write the distinguished 500km configuration	Electric Power Steering_EPS (Tianhe) (EPS)
SP1970	Write open LKA configuration	Electric Power Steering_EPS (Tianhe) (EPS)
SP1971	Angle zero calibration	Electric power steering_EPS (Mobis) (EPS_Mobis)
SP1972	Angle zero calibration	Electric Power Steering_EPS(Yubei) (CEPS)
SP1973	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP1974	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP1975	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP1976	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP1977	Gradient sensor calibration	Electronic Parking System (Sark) (EPB)
SP1978	Write HADEK aggressive	Electronic Parking System (Sark) (EPB)
SP1979	Write HA2EJ comfort type/luxury type	Electronic Parking System (Sark) (EPB)
SP1980	Erase car configuration	Electronic Parking System (Sark) (EPB)
SP1981	Autopilot adjustment	Steering wheel angle sensor (SWAS)

SP1982	Read autopilot steering wheel angle	Steering wheel angle sensor (SWAS)
SP1983	Write noble type	Blind Spot Detection (BSD)
SP1984	Configuration wipe	Blind Spot Detection (BSD)
SP1985	Write 2019 premium configuration	Blind Spot Detection (BSD)
SP1986	Write noble type (optional package)	Blind Spot Detection (BSD)
SP1987	Initial dynamic calibration	Multi-Function Video Controller (MPC)
SP1988	Write luxury, noble configuration	Multi-Function Video Controller (MPC)
SP1989	Write 2019 luxury, noble, and noble 500km configurations	Multi-Function Video Controller (MPC)
SP1990	Write 2020 premium 500km configuration	Multi-Function Video Controller (MPC)
SP1991	Static calibration	Multi-Function Video Controller (MPC)
SP1992	Write luxury, noble configuration	Adaptive Cruise System (MRR)
SP1993	Write 2019 configuration luxury, noble, noble 500km configuration	Adaptive Cruise System (MRR)
SP1994	Write HA2EF premium configuration	Adaptive Cruise System (MRR)
SP1995	Stage 1: Exhaust the left rear wheel	Electro-hydraulic brake (Bosch) (IPB)
SP1996	Stage 2: Exhaust the front left wheel	Electro-hydraulic brake (Bosch) (IPB)
SP1997	Stage 3: Exhaust the right front wheel	Electro-hydraulic brake (Bosch) (IPB)
SP1998	Stage 4: Exhaust the right rear wheel	Electro-hydraulic brake (Bosch) (IPB)

SP1999	Step 5: Exhaust the IPB Housing	Electro-hydraulic brake (Bosch) (IPB)
SP2000	Step 6: PFS and TMC2 exhaust	Electro-hydraulic brake (Bosch) (IPB)
SP2001	Step 7: leak check	Electro-hydraulic brake (Bosch) (IPB)
SP2002	Step 8 (1) Main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB)
SP2003	The eighth step (2) evaluate the pressure test of the master cylinder	Electro-hydraulic brake (Bosch) (IPB)
SP2004	The ninth step is to write the byte of the vacuum filling process + exit the installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB)
SP2005	The first step: internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB)
SP2006	Step 2: Calibration of the angle sensor	Electro-hydraulic brake (Bosch) (IPB)
SP2007	Step 3: (VPC) valve body calibration	Electro-hydraulic brake (Bosch) (IPB)
SP2008	The fourth step (1) main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB)
SP2009	The fourth step (2) evaluate the main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB)
SP2010	Step 5 (1): wheel speed sensor test	Electro-hydraulic brake (Bosch) (IPB)
SP2011	Step 5 (2): Evaluate the wheel speed sensor test results	Electro-hydraulic brake (Bosch) (IPB)
SP2012	Enter installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB)
SP2013	Enter stand mode	Electro-hydraulic brake (Bosch) (IPB)

SP2014	Exit stand mode	Electro-hydraulic brake (Bosch) (IPB)
SP2015	Internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB)
SP2016	Check the internal sensor calibration results	Electro-hydraulic brake (Bosch) (IPB)
SP2017	Write HA2EJ comfort type/HA2EJ luxury	Electro-hydraulic brake (Bosch) (IPB)
SP2018	Write HA2EP flagship type	Electro-hydraulic brake (Bosch) (IPB)
SP2019	Write HA2EN comfort type/HA2EM luxury type	Electro-hydraulic brake (Bosch) (IPB)
SP2020	Write HA2EM noble type	Electro-hydraulic brake (Bosch) (IPB)
SP2021	Write into HA2EJ (ordinary wheel speed variable)	Electro-hydraulic brake (Bosch) (IPB)
SP2022	Erase car configuration	Electro-hydraulic brake (Bosch) (IPB)
SP2023	Tire pressure reset	Electro-hydraulic brake (Bosch) (IPB)
SP2024	ECU unlock	Airbag (new) (SRS)
SP2025	ECU unlock	Airbag (SRS)
SP2026	Warning light test	Airbag (SRS)
SP2027	Main driver seat calibration	Main driving seat system (SECU_D)
SP2028	VIN self-learning	Integrated body controller A (IBCMA)
SP2029	VIN write	Integrated body controller A (IBCMA)
SP2030	VIN self-learning	Vehicle Controller (DD_VCU)
SP2031	Downline calibration of inclination	Vehicle Controller (DD_VCU)
SP2032	Vacuum pump working time is cleared	Vehicle Controller (DD_VCU)
SP2033	Forced balance active test	Battery Manager (300) (DD_BMS300)
SP2034	Force balanced data flow	Battery Manager (300) (DD_BMS300)

SP2035	Cycle query of forced balance progress active test results	Battery Manager (300) (DD_BMS300)
SP2036	Force balance active test off	Battery Manager (300) (DD_BMS300)
SP2037	Factory calibration of battery pack	Battery Manager (300) (DD_BMS300)
SP2038	Battery pack actual calibration	Battery Manager (300) (DD_BMS300)
SP2039	One-button battery heating active test	Battery Manager (400) (DD_BMS400)
SP2040	Forced balance active test	Battery Manager (400) (DD_BMS400)
SP2041	Force balanced data flow	Battery Manager (400) (DD_BMS400)
SP2042	Cycle query of forced balance progress active test results	Battery Manager (400) (DD_BMS400)
SP2043	Force balance active test off	Battery Manager (400) (DD_BMS400)
SP2044	Factory calibration of battery pack	Battery Manager (400) (DD_BMS400)
SP2045	Battery pack actual calibration	Battery Manager (400) (DD_BMS400)
SP2046	Factory calibration of battery pack	Battery Manager (Private Edition 400KM) (BMS)
SP2047	Battery pack actual calibration	Battery Manager (Private Edition 400KM) (BMS)
SP2048	Factory calibration of battery pack	Battery Manager (for public version 450KM) (BMS)
SP2049	Battery pack actual calibration	Battery Manager (for public version 450KM) (BMS)
SP2050	Phase 1: Exhaust the front left wheel	Wheel Anti-lock Braking System (ABS)
SP2051	Stage 2: Exhaust the right front wheel	Wheel Anti-lock Braking System (ABS)

SP2052	Stage 3: Exhaust the left rear wheel	Wheel Anti-lock Braking System (ABS)
SP2053	Stage 4: Exhaust the right rear wheel	Wheel Anti-lock Braking System (ABS)
SP2054	Tire pressure reset	Wheel Anti-lock Braking System (ABS)
SP2055	Erase configuration word	Wheel Anti-lock Braking System (ABS)
SP2056	Write configuration word	Wheel Anti-lock Braking System (ABS)
SP2057	Motor zero calibration	Front drive motor controller (DD_FMCU)
SP2058	Start routine	DC-DC assembly (DC_DC)
SP2059	Request routine results	DC-DC assembly (DC_DC)
SP2060	Stop routine affairs	DC-DC assembly (DC_DC)
SP2061	Control switch off state control	Leakage Sensor (DD_LS)
SP2062	Stage 1: Exhaust the left rear wheel	Electro-hydraulic brake (Bosch) (IPB)
SP2063	Stage 2: Exhaust the front left wheel	Electro-hydraulic brake (Bosch) (IPB)
SP2064	Stage 3: Exhaust the right front wheel	Electro-hydraulic brake (Bosch) (IPB)
SP2065	Stage 4: Exhaust the right rear wheel	Electro-hydraulic brake (Bosch) (IPB)
SP2066	Step 5: Exhaust the IPB Housing	Electro-hydraulic brake (Bosch) (IPB)
SP2067	Step 6: PFS and TMC2 exhaust	Electro-hydraulic brake (Bosch) (IPB)
SP2068	Step 7: leak check	Electro-hydraulic brake (Bosch) (IPB)
SP2069	Step 8 (1) Main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB)
SP2070	The eighth step (2) evaluate the pressure test of the master cylinder	Electro-hydraulic brake (Bosch) (IPB)

SP2071	The ninth step is to write the byte of the vacuum filling process + exit the installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB)
SP2072	The first step: internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB)
SP2073	Step 2: Calibration of the angle sensor	Electro-hydraulic brake (Bosch) (IPB)
SP2074	Step 3: (VPC) valve body calibration	Electro-hydraulic brake (Bosch) (IPB)
SP2075	The fourth step (1) main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB)
SP2076	The fourth step (2) evaluate the main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB)
SP2077	Step 5 (1): wheel speed sensor test	Electro-hydraulic brake (Bosch) (IPB)
SP2078	Step 5 (2): Evaluate the wheel speed sensor test results	Electro-hydraulic brake (Bosch) (IPB)
SP2079	Enter installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB)
SP2080	Enter stand mode	Electro-hydraulic brake (Bosch) (IPB)
SP2081	Exit stand mode	Electro-hydraulic brake (Bosch) (IPB)
SP2082	Internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB)
SP2083	Check the internal sensor calibration results	Electro-hydraulic brake (Bosch) (IPB)
SP2084	HDEG type configuration word write	Electro-hydraulic brake (Bosch) (IPB)
SP2085	Erase car configuration	Electro-hydraulic brake (Bosch) (IPB)

SP2086	Write HDEF luxury Y, HDEF noble Y, HDEM standard Y configuration words	Electro-hydraulic brake (Bosch) (IPB)
SP2087	Write HDEG standard type Y, HDEG elite type Y, HDEG luxury type Y configuration words	Electro-hydraulic brake (Bosch) (IPB)
SP2088	Tire pressure reset	Electro-hydraulic brake (Bosch) (IPB)
SP2089	Yaw rate sensor calibration	Electronic Body Stability System (BE_ESP)
SP2090	Rotation sensor calibration	Electronic Body Stability System (BE_ESP)
SP2091	Phase 1: Exhaust the front left wheel	Electronic Body Stability System (BE_ESP)
SP2092	Stage 2: Exhaust the right front wheel	Electronic Body Stability System (BE_ESP)
SP2093	Stage 3: Exhaust the left rear wheel	Electronic Body Stability System (BE_ESP)
SP2094	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (BE_ESP)
SP2095	Write comfort type, luxury type, noble type	Electronic Body Stability System (BE_ESP)
SP2096	Erase car configuration	Electronic Body Stability System (BE_ESP)
SP2097	ECU reset	Electronic Body Stability System (BE ESP)
SP2098	Angle zero calibration	Electric Power Steering (Yubei) (BE_EPS)
SP2099	Left front wheel matching	Tire pressure monitoring module (Sensata) (BE TPMS)
SP2100	Right front wheel matching	Tire pressure monitoring module (Sensata) (BE TPMS)
SP2101	Left rear wheel matching	Tire pressure monitoring module (Sensata) (BE TPMS)
SP2102	Right rear wheel matching	Tire pressure monitoring module (Sensata) (BE TPMS)

SP2103	Write the ID of the front left tire pressure monitoring module	Tire pressure monitoring module (Baolong) (BE_TPMS)
SP2104	Write the ID of the front right tire pressure monitoring module	Tire pressure monitoring module (Baolong) (BE_TPMS)
SP2105	Write the ID of the left rear tire pressure monitoring module	Tire pressure monitoring module (Baolong) (BE_TPMS)
SP2106	Write the ID of the rear right tire pressure monitoring module	Tire pressure monitoring module (Baolong) (BE_TPMS)
SP2107	Left front wheel matching	Tire pressure monitoring module (Baolong) (BE_TPMS)
SP2108	Right front wheel matching	Tire pressure monitoring module (Baolong) (BE_TPMS)
SP2109	Left rear wheel matching	Tire pressure monitoring module (Baolong) (BE_TPMS)
SP2110	Right rear wheel matching	Tire pressure monitoring module (Baolong) (BE_TPMS)
SP2111	Write configuration word of all HDE19 series	Electronic parking (Sark) (BE_EPB)
SP2112	Write HDEF distinguished Y configuration word	Electronic parking (Sark) (BE_EPB)
SP2113	Write configuration words for HDEF luxury Y, HDEM standard Y, HDEG standard Y, HDEG elite Y, HDEG luxury Y	Electronic parking (Sark) (BE_EPB)
SP2114	Stage 1: Exhaust the left rear wheel	Security System (BYD) (BSC)
SP2115	Stage 2: Exhaust the front left wheel	Security System (BYD) (BSC)

SP2116	Stage 3: Exhaust the right front wheel	Security System (BYD) (BSC)
SP2117	Stage 4: Exhaust the right rear wheel	Security System (BYD) (BSC)
SP2118	Step 5: Exhaust the IPB Housing	Security System (BYD) (BSC)
SP2119	Step 6: PFS and TMC2 exhaust	Security System (BYD) (BSC)
SP2120	Step 7: leak check	Security System (BYD) (BSC)
SP2121	Step 8 (1) Main cylinder pressure test	Security System (BYD) (BSC)
SP2122	The eighth step (2) evaluate the pressure test of the master cylinder	Security System (BYD) (BSC)
SP2123	The ninth step is to write the byte of the vacuum filling process + exit the installation (factory) mode	Security System (BYD) (BSC)
SP2124	The first step: internal sensor calibration	Security System (BYD) (BSC)
SP2125	Step 2: Calibration of the angle sensor	Security System (BYD) (BSC)
SP2126	Step 3: (VPC) valve body calibration	Security System (BYD) (BSC)
SP2127	The fourth step (1) main cylinder pressure test	Security System (BYD) (BSC)
SP2128	The fourth step (2) evaluate the main cylinder pressure test	Security System (BYD) (BSC)
SP2129	Step 5 (1): wheel speed sensor test	Security System (BYD) (BSC)

SP2130	Step 5 (2): Evaluate the wheel speed sensor test results	Security System (BYD) (BSC)
SP2131	Write EM2E configuration	Security System (BYD) (BSC)
SP2132	Write EM2EF configuration	Security System (BYD) (BSC)
SP2133	Erase car configuration	Security System (BYD) (BSC)
SP2134	Tire pressure reset	Security System (BYD) (BSC)
SP2135	ECU unlock	Airbag (third generation) (SRS)
SP2136	VIN self- learning	Integrated body controller A (BCM)
SP2137	VIN write	Integrated body controller A (BCM)
SP2138	VIN write	Integrated body controller A (BYD) (IBCMA)
SP2139	Main driver seat calibration	Main driving seat system (BYD) (SECU)
SP2140	Left front wheel matching	Left body domain controller A_L2 (BYD) (L2_BCM)
SP2141	Right front wheel matching	Left body domain controller A_L2 (BYD) (L2_BCM)
SP2142	Left rear wheel matching	Left body domain controller A_L2 (BYD) (L2_BCM)
SP2143	Right rear wheel matching	Left body domain controller A_L2 (BYD) (L2_BCM)
SP2144	Send self- learning information	Left body domain controller A_L2 (BYD) (L2_BCM)
SP2145	After-sales dynamic calibration	Multifunctional Video Controller (Mainland) (MPC_Conti)
SP2146	After-sales dynamic calibration result query (single sending)	Multifunctional Video Controller (Mainland) (MPC_Conti)
SP2147	VIN write	Multifunctional Video Controller (Mainland) (MPC_Conti)
SP2148	After-sales static calibration (flagship type)	Multifunctional Video Controller (Mainland) (MPC_Conti)
SP2149	After-sales static calibration (prestige type)	Multifunctional Video Controller (Mainland) (MPC_Conti)

SP2150	start Routine	Multifunctional Video Controller (Mainland) (MPC Conti)
SP2151	request Routine Results	Multifunctional Video Controller (Mainland) (MPC Conti)
SP2152	Steering wheel zero point calibration	Electric power steering (Mobis) (CEPS_Mobis)
SP2153	Steering wheel zero point calibration	Electric Power Steering (Yubei) (CEPS_YB)
SP2154	ECU unlock	Airbag (new) (BYD) (SRS)
SP2155	VIN writing and airbag decryption	Airbag (new) (BYD) (SRS)
SP2156	Stage 1: Exhaust the left rear wheel	Electro-hydraulic brake (Bosch) (IPB)
SP2157	Stage 2: Exhaust the front left wheel	Electro-hydraulic brake (Bosch) (IPB)
SP2158	Stage 3: Exhaust the right front wheel	Electro-hydraulic brake (Bosch) (IPB)
SP2159	Stage 4: Exhaust the right rear wheel	Electro-hydraulic brake (Bosch) (IPB)
SP2160	Step 5: Exhaust the IPB Housing	Electro-hydraulic brake (Bosch) (IPB)
SP2161	Step 6: PFS and TMC2 exhaust	Electro-hydraulic brake (Bosch) (IPB)
SP2162	Step 7: leak check	Electro-hydraulic brake (Bosch) (IPB)
SP2163	Step 8 (1) Main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB)
SP2164	The eighth step (2) evaluate the pressure test of the master cylinder	Electro-hydraulic brake (Bosch) (IPB)
SP2165	The ninth step is to write the byte of the vacuum filling process + exit the installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB)
SP2166	The first step: internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB)

SP2167	Step 2: Calibration of the angle sensor	Electro-hydraulic brake (Bosch) (IPB)
SP2168	Step 3: (VPC) valve body calibration	Electro-hydraulic brake (Bosch) (IPB)
SP2169	The fourth step (1) main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB)
SP2170	The fourth step (2) evaluate the main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB)
SP2171	Step 5 (1): wheel speed sensor test	Electro-hydraulic brake (Bosch) (IPB)
SP2172	Step 5 (2): Evaluate the wheel speed sensor test results	Electro-hydraulic brake (Bosch) (IPB)
SP2173	Enter installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB)
SP2174	Enter stand mode	Electro-hydraulic brake (Bosch) (IPB)
SP2175	Exit stand mode	Electro-hydraulic brake (Bosch) (IPB)
SP2176	Internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB)
SP2177	Check the internal sensor calibration results	Electro-hydraulic brake (Bosch) (IPB)
SP2178	Erase car configuration	Electro-hydraulic brake (Bosch) (IPB)
SP2179	Tire pressure reset	Electro-hydraulic brake (Bosch) (IPB)
SP2180	Write HA2EP flagship type	Electro-hydraulic brake (Bosch) (IPB)
SP2181	Write HA2EN comfort type	Electro-hydraulic brake (Bosch) (IPB)
SP2182	Write HA2EM noble type	Electro-hydraulic brake (Bosch) (IPB)
SP2183	Write HA2EM comfort type	Electro-hydraulic brake (Bosch) (IPB)
SP2184	VIN write	Front millimeter wave radar (mainland) (FMRR)
SP2185	After-sales dynamic calibration	Front millimeter wave radar (mainland) (FMRR)

SP2186	After-sale static calibration	Front millimeter wave radar (mainland) (FMRR)
SP2187	Factory mode on	Front millimeter wave radar (mainland) (FMRR)
SP2188	Factory mode off	Front millimeter wave radar (mainland) (FMRR)
SP2189	Configuration wipe	Blind Spot Monitoring (Hella) (BSD)
SP2190	Write HA2EP flagship type	Blind Spot Monitoring (Hella) (BSD)
SP2191	Write HA2EM noble type	Blind Spot Monitoring (Hella) (BSD)
SP2192	One-button battery cooling active test begins	Battery Manager 500 (BYD) (BMS500)
SP2193	One-click battery cooling active test progress query	Battery Manager 500 (BYD) (BMS500)
SP2194	One-button battery cooling active test off	Battery Manager 500 (BYD) (BMS500)
SP2195	Request to turn on heating	Battery Manager 500 (BYD) (BMS500)
SP2196	Progress query	Battery Manager 500 (BYD) (BMS500)
SP2197	Request to turn off the heating	Battery Manager 500 (BYD) (BMS500)
SP2198	Request to turn on balance	Battery Manager 500 (BYD) (BMS500)
SP2199	Progress query	Battery Manager 500 (BYD) (BMS500)
SP2200	Request to turn off balance	Battery Manager 500 (BYD) (BMS500)
SP2201	Request to open	Battery Manager 500 (BYD) (BMS500)
SP2202	Progress query	Battery Manager 500 (BYD) (BMS500)
SP2203	Request to close	Battery Manager 500 (BYD) (BMS500)
SP2204	Request to open	Battery Manager 500 (BYD) (BMS500)
SP2205	Progress query	Battery Manager 500 (BYD) (BMS500)
SP2206	Request to close	Battery Manager 500 (BYD) (BMS500)
SP2207	One-button battery cooling active test begins	Battery Manager 400 (BYD) (BMS400)
SP2208	One-click battery cooling active test progress query	Battery Manager 400 (BYD) (BMS400)
SP2209	One-button battery cooling active test off	Battery Manager 400 (BYD) (BMS400)

SP2210	Request to turn on balance	Battery Manager 400 (BYD) (BMS400)
SP2211	Progress query	Battery Manager 400 (BYD) (BMS400)
SP2212	Request to turn off balance	Battery Manager 400 (BYD) (BMS400)
SP2213	One-button battery cooling active test begins	Battery Manager 600 (BYD) (BMS600)
SP2214	One-click battery cooling active test progress query	Battery Manager 600 (BYD) (BMS600)
SP2215	One-button battery cooling active test off	Battery Manager 600 (BYD) (BMS600)
SP2216	One-button battery heating active test starts	Battery Manager 600 (BYD) (BMS600)
SP2217	One-click battery heating active test progress query	Battery Manager 600 (BYD) (BMS600)
SP2218	One-button battery heating active test off	Battery Manager 600 (BYD) (BMS600)
SP2219	The leakage detection control switch is disconnected, and the active test starts	Battery Manager 600 (BYD) (BMS600)
SP2220	Leakage detection control switch is disconnected, active test progress query	Battery Manager 600 (BYD) (BMS600)
SP2221	Leakage detection control switch is off, active test is off	Battery Manager 600 (BYD) (BMS600)
SP2222	Hard wire interlocking shield active test begins	Battery Manager 600 (BYD) (BMS600)

SP2223	Hard wire interlocking shield active test progress query	Battery Manager 600 (BYD) (BMS600)
SP2224	Hard wire interlocking shield active test off	Battery Manager 600 (BYD) (BMS600)
SP2225	Request to turn on balance	Battery Manager 600 (BYD) (BMS600)
SP2226	Progress query	Battery Manager 600 (BYD) (BMS600)
SP2227	Request to turn off balance	Battery Manager 600 (BYD) (BMS600)
SP2228	VIN self-learning	Vehicle Controller (BYD) (VCU)
SP2229	Downline calibration of inclination	Vehicle Controller (BYD) (VCU)
SP2230	Cruise control configuration write	Vehicle Controller (BYD) (VCU)
SP2231	Adaptive cruise configuration write	Vehicle Controller (BYD) (VCU)
SP2232	LS control switch disconnected state control function calibration start	Charging and distribution assembly (BYD) (CDU)
SP2233	LS control switch disconnection state control function calibration cycle query	Charging and distribution assembly (BYD) (CDU)
SP2234	LS control switch is off state, control function calibration is off	Charging and distribution assembly (BYD) (CDU)
SP2235	Cruise calibration	Vehicle Controller (VCU)
SP2236	Adaptive cruise calibration	Vehicle Controller (VCU)
SP2237	Tilt calibration	Vehicle Controller (VCU)

SP2238	VIN self-learning	Vehicle Controller (VCU)
SP2239	Request to turn on heating	Ternary Battery Management System_600 (BMS600)
SP2240	Progress query	Ternary Battery Management System_600 (BMS600)
SP2241	Request to turn off the heating	Ternary Battery Management System_600 (BMS600)
SP2242	Forced balance active test	Ternary Battery Management System_600 (BMS600)
SP2243	Force balanced data flow	Ternary Battery Management System_600 (BMS600)
SP2244	Cycle query of forced balance progress active test results	Ternary Battery Management System_600 (BMS600)
SP2245	Force balance active test off	Ternary Battery Management System_600 (BMS600)
SP2246	Factory calibration of battery pack	Ternary Battery Management System_600 (BMS600)
SP2247	Battery pack actual calibration	Ternary Battery Management System_600 (BMS600)
SP2248	Motor zero calibration	Front Drive Motor Controller (FMCU)
SP2249	LS control switch off state control function calibration	Charging and Distribution Assembly (CDU)
SP2250	Motor zero calibration	Rear Drive Motor Controller (RMCU)
SP2251	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP2252	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP2253	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP2254	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP2255	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP2256	Rotation sensor calibration	Electronic Body Stability System (ESP)

SP2257	Write flagship type, honor type, noble type, elite type	Electronic Body Stability System (ESP)
SP2258	Write luxury	Electronic Body Stability System (ESP)
SP2259	Erase car configuration	Electronic Body Stability System (ESP)
SP2260	ECU reset	Electronic Body Stability System (ESP)
SP2261	Angle zero calibration	Power Steering (EPS)
SP2262	Write flagship (four-wheel drive ACC) configuration	Power Steering (EPS)
SP2263	Write luxury (two-drive non-ACC) configuration	Power Steering (EPS)
SP2264	Write honor type (four-wheel drive ACC)	Power Steering (EPS)
SP2265	Write noble (four-wheel drive ACC) configuration	Power Steering (EPS)
SP2266	Write elite (two-drive with ACC) configuration	Power Steering (EPS)
SP2267	Write STE with LKA configuration	Power Steering (EPS)
SP2268	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2269	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2270	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2271	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2272	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2273	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2274	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2275	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2276	Gradient sensor calibration	Electronic Parking (Sark) (EPB)

SP2277	Write luxury type, elite type	Electronic Parking (Sark) (EPB)
SP2278	Write honor type, flagship type, noble type	Electronic Parking (Sark) (EPB)
SP2279	Erase car configuration	Electronic Parking (Sark) (EPB)
SP2280	Write flagship type, honor type, elite type, noble type	Blind Spot Detection (BSD)
SP2281	Configuration wipe	Blind Spot Detection (BSD)
SP2282	Initial dynamic calibration	Multi-Function Video Controller (MPC)
SP2283	Turn off dynamic calibration	Multi-Function Video Controller (MPC)
SP2284	Write honor type, honor type configuration	Multi-Function Video Controller (MPC)
SP2285	Write elite configuration	Multi-Function Video Controller (MPC)
SP2286	Write flagship configuration	Multi-Function Video Controller (MPC)
SP2287	Write flagship four-wheel drive (LKS) configuration	Multi-Function Video Controller (MPC)
SP2288	Write the LKS configuration	Multi-Function Video Controller (MPC)
SP2289	Erase car configuration	Multi-Function Video Controller (MPC)
SP2290	Static calibration	Multi-Function Video Controller (MPC)
SP2291	Driver Calibration Service Calibration (SDA)	Adaptive Cruise System (MRR)
SP2292	After-sales calibration	Adaptive Cruise System (MRR)
SP2293	Write flagship	Adaptive Cruise System (MRR)
SP2294	Write honor type, honor type	Adaptive Cruise System (MRR)
SP2295	Write elite configuration	Adaptive Cruise System (MRR)
SP2296	Erase car configuration	Adaptive Cruise System (MRR)
SP2297	ECU unlock	Airbag (third generation) (SRS III)

SP2298	Warning light test	Airbag (third generation) (SRS_III)
SP2299	Electric column calibration	Electric steering column (PTECU)
SP2300	Main driver seat calibration	Main driver's seat (SECU_D)
SP2301	Gradient sensor calibration	Electronic Parking (Sark) (EPB_SAC)
SP2302	Write STEKA two-drive honorable Y configuration	Electronic Parking (Sark) (EPB_SAC)
SP2303	Write STELA four-wheel drive honorable Y/STELA flagship Y/STEP (European standard) flagship Y configuration	Electronic Parking (Sark) (EPB_SAC)
SP2304	Erase car configuration	Electronic Parking (Sark) (EPB_SAC)
SP2305	Stage 1: Exhaust the left rear wheel	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2306	Stage 2: Exhaust the front left wheel	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2307	Stage 3: Exhaust the right front wheel	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2308	Stage 4: Exhaust the right rear wheel	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2309	Step 5: Exhaust the IPB Housing	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2310	Step 6: PFS and TMC2 exhaust	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2311	Step 7: leak check	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2312	Step 8 (1) Main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2313	The eighth step (2) evaluate the pressure test of the master cylinder	Electro-hydraulic brake (Bosch) (IPB_BOSCH)

SP2314	The ninth step is to write the byte of the vacuum filling process + exit the installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2315	The first step: internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2316	Step 2: Calibration of the angle sensor	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2317	Step 3: (VPC) valve body calibration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2318	The fourth step (1) main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2319	The fourth step (2) evaluate the main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2320	Step 5 (1): wheel speed sensor test	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2321	Step 5 (2): Evaluate the wheel speed sensor test results	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2322	Enter installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2323	Enter stand mode	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2324	Exit stand mode	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2325	Internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2326	Check the internal sensor calibration results	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2327	Erase car configuration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2328	Write STEKA two-drive honorable Y configuration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)

SP2329	Write STELA four-wheel drive honorable Y/STELA flagship Y/STEP (European standard) flagship Y configuration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2330	Tire pressure reset	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP2331	Angle zero calibration	Power steering (TRW) (EPS_TRW)
SP2332	Write STEKA two-wheel drive honorable Y/STELA four-wheel drive honorable Y/STELA flagship Y/STEP (European standard) flagship Y configuration	Power steering (TRW) (EPS_TRW)
SP2333	Driver Calibration Service Calibration (SDA)	Adaptive Cruise System (Bosch) (MRR_BOSCH)
SP2334	After-sales calibration	Adaptive Cruise System (Bosch) (MRR_BOSCH)
SP2335	Write STEKA two-wheel drive honorable Y/STELA four-wheel drive honorable Y/STELA flagship Y/STEP (European standard) flagship Y configuration	Adaptive Cruise System (Bosch) (MRR_BOSCH)
SP2336	Erase car configuration	Adaptive Cruise System (Bosch) (MRR_BOSCH)
SP2337	Initial dynamic calibration	Multifunctional Video Controller (Bosch) (MPC_BOSCH)
SP2338	Turn off dynamic calibration	Multifunctional Video Controller (Bosch) (MPC_BOSCH)

SP2339	Write STEKA two-wheel drive honorable Y/STELA four-wheel drive honorable Y/STELA flagship Y/STEP (European standard) flagship Y configuration	Multifunctional Video Controller (Bosch) (MPC_BOSCH)
SP2340	Erase car configuration	Multifunctional Video Controller (Bosch) (MPC_BOSCH)
SP2341	Static calibration	Multifunctional Video Controller (Bosch) (MPC_BOSCH)
SP2342	Write STEKA two-wheel drive honorable Y/STELA four-wheel drive honorable Y/STELA flagship Y/STEP (European standard) flagship Y configuration	Blind spot detection (HELLA/BYD 24G) (BSD_HELLA)
SP2343	Write STEKA two-wheel drive honorable Y/STELA four-wheel drive honorable Y/STELA flagship Y/STEP (European standard) flagship Y configuration	Left blind spot detection (BYD 77G) (BSD_L)
SP2344	Configuration wipe	Left blind spot detection (BYD 77G) (BSD_L)
SP2345	Write STEKA two-wheel drive honorable Y/STELA four-wheel drive honorable Y/STELA flagship Y/STEP (European standard) flagship Y configuration	Right blind spot detection (BYD 77G) (BSD_R)

SP2346	Configuration wipe	Right blind spot detection (BYD 77G) (BSD_R)
SP2347	Left front wheel matching	Tire Pressure Management Module (BaoLong) (TPMS BaoLong)
SP2348	Right front wheel matching	Tire Pressure Management Module (BaoLong) (TPMS BaoLong)
SP2349	Left rear wheel matching	Tire Pressure Management Module (BaoLong) (TPMS BaoLong)
SP2350	Right rear wheel matching	Tire Pressure Management Module (BaoLong) (TPMS BaoLong)
SP2351	Left front wheel matching	Tire pressure management module (Sensata) (TPMS Sensata)
SP2352	Right front wheel matching	Tire pressure management module (Sensata) (TPMS Sensata)
SP2353	Left rear wheel matching	Tire pressure management module (Sensata) (TPMS Sensata)
SP2354	Right rear wheel matching	Tire pressure management module (Sensata) (TPMS Sensata)
SP2355	Tilt calibration	Vehicle Controller (BYD) (VCU)
SP2356	VIN self-learning	Vehicle Controller (BYD) (VCU)
SP2357	Request to turn on cooling	Battery Management System 505 (BYD) (BMS505)
SP2358	Progress query (the longest cycle query is 50s)	Battery Management System 505 (BYD) (BMS505)
SP2359	Request to turn off cooling	Battery Management System 505 (BYD) (BMS505)
SP2360	Request to turn on heating	Battery Management System 505 (BYD) (BMS505)
SP2361	Progress query (the longest cycle query is 50s)	Battery Management System 505 (BYD) (BMS505)
SP2362	Request to turn off the heating	Battery Management System 505 (BYD) (BMS505)
SP2363	Turn on	Battery Management System 505 (BYD) (BMS505)
SP2364	Progress query (loop query 30s)	Battery Management System 505 (BYD) (BMS505)
SP2365	Close	Battery Management System 505 (BYD) (BMS505)
SP2366	Turn on	Battery Management System 505 (BYD) (BMS505)
SP2367	Progress query (loop query 30s)	Battery Management System 505 (BYD) (BMS505)
SP2368	Close	Battery Management System 505 (BYD) (BMS505)
SP2369	Request to turn on cooling	Battery Management System 565 (BYD) (BMS565)

SP2370	Progress query (the longest cycle query is 50s)	Battery Management System 565 (BYD) (BMS565)
SP2371	Request to turn off cooling	Battery Management System 565 (BYD) (BMS565)
SP2372	Request to turn on heating	Battery Management System 565 (BYD) (BMS565)
SP2373	Progress query (the longest cycle query is 50s)	Battery Management System 565 (BYD) (BMS565)
SP2374	Request to turn off the heating	Battery Management System 565 (BYD) (BMS565)
SP2375	Turn on	Battery Management System 565 (BYD) (BMS565)
SP2376	Progress query (loop query 30s)	Battery Management System 565 (BYD) (BMS565)
SP2377	Close	Battery Management System 565 (BYD) (BMS565)
SP2378	Turn on	Battery Management System 565 (BYD) (BMS565)
SP2379	Progress query (loop query 30s)	Battery Management System 565 (BYD) (BMS565)
SP2380	Close	Battery Management System 565 (BYD) (BMS565)
SP2381	Left front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP2382	Right front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP2383	Left rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP2384	Right rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP2385	Left front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP2386	Right front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP2387	Left rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP2388	Right rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP2389	Electric column calibration	Electric steering column (BYD) (PTECU)
SP2390	Main driver seat calibration	Main driving seat (BYD) (SECU)
SP2391	ECU unlock	Airbag (new) (BYD) (SRS)
SP2392	Warning light test	Airbag (new) (BYD) (SRS)
SP2393	VIN writing and airbag decryption	Airbag (new) (BYD) (SRS)

SP2394	The first step-read the working hours of the original ECU mainland pump	Main Controller (ACU)
SP2395	The second step-write the working time read in the first step	Main Controller (ACU)
SP2396	Clear the working hours of Continental pumps	Main Controller (ACU)
SP2397	VIN self-learning	Main Controller (ACU)
SP2398	One-button battery heating active test	Battery Management System (BMS)
SP2399	One-button battery heating active test off	Battery Management System (BMS)
SP2400	Forced balance active test	Battery Management System (BMS)
SP2401	Force balanced data flow	Battery Management System (BMS)
SP2402	Cycle query of forced balance progress active test results	Battery Management System (BMS)
SP2403	Force balance active test off	Battery Management System (BMS)
SP2404	Factory calibration of battery pack	Battery Management System (BMS)
SP2405	Battery pack actual calibration	Battery Management System (BMS)
SP2406	One-button battery heating active test	Battery Management System_Liquid Cooling (BMS)
SP2407	One-button battery heating active test off	Battery Management System_Liquid Cooling (BMS)
SP2408	Forced balance active test	Battery Management System_Liquid Cooling (BMS)
SP2409	Force balanced data flow	Battery Management System_Liquid Cooling (BMS)

SP2410	Cycle query of forced balance progress active test results	Battery Management System_Liquid Cooling (BMS)
SP2411	Force balance active test off	Battery Management System_Liquid Cooling (BMS)
SP2412	Factory calibration of battery pack	Battery Management System_Liquid Cooling (BMS)
SP2413	Battery pack actual calibration	Battery Management System_Liquid Cooling (BMS)
SP2414	BSD static calibration	Main blind spot monitoring (BSD001)
SP2415	BSD dynamic calibration	Main blind spot monitoring (BSD001)
SP2416	BSD static calibration	Auxiliary blind spot monitoring (BSD002)
SP2417	BSD dynamic calibration	Auxiliary blind spot monitoring (BSD002)
SP2418	Downline calibration of inclination	VTOG_DSP2 (VTOG_DSP2)
SP2419	Downline calibration of inclination	VTOG_递\$增 (VTOG_递\$增)
SP2420	Cruise calibration	VTOG_递\$增 (VTOG_递\$增)
SP2421	Adaptive cruise calibration	VTOG_递\$增 (VTOG_递\$增)
SP2422	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP2423	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP2424	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP2425	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP2426	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP2427	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP2428	Angle zero calibration	Power Steering (TRW) (EPS)
SP2429	Write honorable configuration	Power Steering (TRW) (EPS)

SP2430	Write premium configuration	Power Steering (TRW) (EPS)
SP2431	Write luxury configuration	Power Steering (TRW) (EPS)
SP2432	Write comfort configuration	Power Steering (TRW) (EPS)
SP2433	Angle zero calibration	Power Steering (EPS)
SP2434	Torque zero calibration	Power Steering (EPS)
SP2435	ECU unlock	Airbag Three Generation (SRS III)
SP2436	Warning light test	Airbag_Three Generation (SRS_III)
SP2437	Left front wheel matching	Tire Pressure Management Module (TPMS)
SP2438	Right front wheel matching	Tire Pressure Management Module (TPMS)
SP2439	Left rear wheel matching	Tire Pressure Management Module (TPMS)
SP2440	Right rear wheel matching	Tire Pressure Management Module (TPMS)
SP2441	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2442	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2443	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2444	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2445	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2446	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2447	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2448	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2449	One-click initialization	Electric Back Door (BDECU)
SP2450	Electric column calibration	Electric steering column (PTECU)
SP2451	Main driver seat calibration	Main driving seat system (SECU_D)
SP2452	The first step-read the working hours of the original ECU mainland pump	Main Controller (ACU)

SP2453	The second step-write the working time read in the first step	Main Controller (ACU)
SP2454	Clear the working hours of Continental pumps	Main Controller (ACU)
SP2455	Factory calibration of battery pack	Battery Management System (BMS)
SP2456	Battery pack actual calibration	Battery Management System (BMS)
SP2457	Downline calibration of inclination	VTOG_DSP2 (VTOG_DSP2)
SP2458	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP2459	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP2460	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP2461	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP2462	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP2463	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP2464	Angle zero calibration	Electronic Power Steering (EPS)
SP2465	Torque zero calibration	Electronic Power Steering (EPS)
SP2466	ECU unlock	Airbag Three Generation (SRS III)
SP2467	Warning light test	Airbag_Three Generation (SRS_III)
SP2468	Left front wheel matching	Tire Pressure Management Module (TPMS)
SP2469	Right front wheel matching	Tire Pressure Management Module (TPMS)
SP2470	Left rear wheel matching	Tire Pressure Management Module (TPMS)
SP2471	Right rear wheel matching	Tire Pressure Management Module (TPMS)

SP2472	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2473	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2474	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2475	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2476	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2477	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2478	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2479	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2480	Main driver seat calibration	Main driving seat system (SECU_Z)
SP2481	Electric column calibration	Electric steering column (PTECU)
SP2482	One-click initialization	Electric Back Door (BDECU)
SP2483	Vacuum pump working time is cleared	Vehicle Controller (VCU)
SP2484	Downline calibration of inclination	Vehicle Controller (VCU)
SP2485	Cruise calibration	Vehicle Controller (VCU)
SP2486	Adaptive cruise calibration	Vehicle Controller (VCU)
SP2487	VIN self-learning	Vehicle Controller (VCU)
SP2488	One-button battery heating active test	Ternary Battery Manager 400 Private Edition (BMS)
SP2489	One-button battery heating active test off	Ternary Battery Manager 400 Private Edition (BMS)
SP2490	Request to turn on balance	Ternary Battery Manager 400 Private Edition (BMS)
SP2491	Progress query	Ternary Battery Manager 400 Private Edition (BMS)
SP2492	Force balanced data flow	Ternary Battery Manager 400 Private Edition (BMS)
SP2493	Request to turn off balance	Ternary Battery Manager 400 Private Edition (BMS)

SP2494	Factory calibration of battery pack	Ternary Battery Manager 400 Private Edition (BMS)
SP2495	Battery pack actual calibration	Ternary Battery Manager 400 Private Edition (BMS)
SP2496	One-button battery heating active test	Ternary Battery Manager 400 Rental Edition (BMS)
SP2497	One-button battery heating active test off	Ternary Battery Manager 400 Rental Edition (BMS)
SP2498	Request to turn on balance	Ternary Battery Manager 400 Rental Edition (BMS)
SP2499	Progress query	Ternary Battery Manager 400 Rental Edition (BMS)
SP2500	Force balanced data flow	Ternary Battery Manager 400 Rental Edition (BMS)
SP2501	Request to turn off balance	Ternary Battery Manager 400 Rental Edition (BMS)
SP2502	Factory calibration of battery pack	Ternary Battery Manager 400 Rental Edition (BMS)
SP2503	Battery pack actual calibration	Ternary Battery Manager 400 Rental Edition (BMS)
SP2504	One-button battery heating active test	Three yuan battery manager 400 online version (BMS)
SP2505	One-button battery heating active test off	Three yuan battery manager 400 online version (BMS)
SP2506	Request to turn on balance	Three yuan battery manager 400 online version (BMS)
SP2507	Progress query	Three yuan battery manager 400 online version (BMS)
SP2508	Force balanced data flow	Three yuan battery manager 400 online version (BMS)
SP2509	Request to turn off balance	Three yuan battery manager 400 online version (BMS)
SP2510	Factory calibration of battery pack	Three yuan battery manager 400 online version (BMS)
SP2511	Battery pack actual calibration	Three yuan battery manager 400 online version (BMS)
SP2512	One-button battery heating active test	Power Battery Manager 500 (BMS)

SP2513	One-button battery heating active test off	Power Battery Manager 500 (BMS)
SP2514	Request to turn on balance	Power Battery Manager 500 (BMS)
SP2515	Progress query	Power Battery Manager 500 (BMS)
SP2516	Force balanced data flow	Power Battery Manager 500 (BMS)
SP2517	Request to turn off balance	Power Battery Manager 500 (BMS)
SP2518	Factory calibration of battery pack	Power Battery Manager 500 (BMS)
SP2519	Battery pack actual calibration	Power Battery Manager 500 (BMS)
SP2520	Request to turn on cooling	Battery Manager 450 (BMS)
SP2521	Progress query	Battery Manager 450 (BMS)
SP2522	Request to turn off cooling	Battery Manager 450 (BMS)
SP2523	Request to turn on heating	Battery Manager 450 (BMS)
SP2524	Progress query	Battery Manager 450 (BMS)
SP2525	Request to turn off the heating	Battery Manager 450 (BMS)
SP2526	Request to turn on balance	Battery Manager 450 (BMS)
SP2527	Progress query	Battery Manager 450 (BMS)
SP2528	Force balanced data flow	Battery Manager 450 (BMS)
SP2529	Request to turn off balance	Battery Manager 450 (BMS)
SP2530	Request to open	Battery Manager 450 (BMS)
SP2531	Progress query	Battery Manager 450 (BMS)
SP2532	Request to close	Battery Manager 450 (BMS)
SP2533	Request to open	Battery Manager 450 (BMS)
SP2534	Progress query	Battery Manager 450 (BMS)
SP2535	Request to close	Battery Manager 450 (BMS)
SP2536	Factory calibration of battery pack	Battery Manager 450 (BMS)
SP2537	Battery pack actual calibration	Battery Manager 450 (BMS)
SP2538	The leakage sensor control switch is off	Three-in-one charging and distribution (CDU)

SP2539	Leakage sensor control on	Leakage Sensor (LS)
SP2540	Motor zero calibration	Front Drive Motor Controller (FMCU)
SP2541	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP2542	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP2543	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP2544	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP2545	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP2546	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP2547	ECU reset	Electronic Body Stability System (ESP)
SP2548	Write luxury 400KM (without ACC) configuration	Electronic Body Stability System (ESP)
SP2549	Write the distinguished 500KM (without ACC) configuration	Electronic Body Stability System (ESP)
SP2550	Write exclusive 400KM (ACC) configuration	Electronic Body Stability System (ESP)
SP2551	Write flagship 400KM (ACC) configuration	Electronic Body Stability System (ESP)
SP2552	Write flagship 500KM (ACC) configuration	Electronic Body Stability System (ESP)
SP2553	Erase car configuration	Electronic Body Stability System (ESP)
SP2554	Write luxury configuration	Power Steering (TRW) (EPS)
SP2555	Write exclusive configuration	Power Steering (TRW) (EPS)
SP2556	Write premium configuration	Power Steering (TRW) (EPS)
SP2557	Write flagship configuration	Power Steering (TRW) (EPS)

SP2558	Write MEEC comfort type Y, MEEC luxury type Y	Power Steering (TRW) (EPS)
SP2559	Angle zero calibration	Power Steering (TRW) (EPS)
SP2560	Write the ID of the front left tire pressure monitoring module	Tire pressure management module (cloud collar) (TPMS)
SP2561	Write the ID of the front right tire pressure monitoring module	Tire pressure management module (cloud collar) (TPMS)
SP2562	Write the ID of the left rear tire pressure monitoring module	Tire pressure management module (cloud collar) (TPMS)
SP2563	Write the ID of the rear right tire pressure monitoring module	Tire pressure management module (cloud collar) (TPMS)
SP2564	Left front wheel matching	Tire pressure management module (cloud collar) (TPMS)
SP2565	Right front wheel matching	Tire pressure management module (cloud collar) (TPMS)
SP2566	Left rear wheel matching	Tire pressure management module (cloud collar) (TPMS)
SP2567	Right rear wheel matching	Tire pressure management module (cloud collar) (TPMS)
SP2568	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2569	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2570	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2571	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2572	Write MEEC+IPB luxury	Electronic Parking System (EPB)
SP2573	Write MEEY+IPB comfort and luxury	Electronic Parking System (EPB)
SP2574	Write MEECB+IPB comfort and luxury	Electronic Parking System (EPB)

SP2575	Write MEEC luxury	Electronic Parking System (EPB)
SP2576	Write MEEY comfort/luxury	Electronic Parking System (EPB)
SP2577	Write MEECB comfort/luxury type	Electronic Parking System (EPB)
SP2578	Erase car configuration	Electronic Parking System (EPB)
SP2579	Write luxury Y configuration	Multi-Function Video Controller (MPC)
SP2580	Write Taiwan version Y configuration	Multi-Function Video Controller (MPC)
SP2581	Initial dynamic calibration	Multi-Function Video Controller (MPC)
SP2582	Turn off dynamic calibration	Multi-Function Video Controller (MPC)
SP2583	Static calibration	Multi-Function Video Controller (MPC)
SP2584	Driver Calibration Service Calibration (SDA)	Adaptive Cruise (MRR)
SP2585	After-sales calibration	Adaptive Cruise (MRR)
SP2586	Write luxury Y configuration	Adaptive Cruise (MRR)
SP2587	Write Taiwan version Y configuration	Adaptive Cruise (MRR)
SP2588	Write luxury 400KM (without ACC) configuration	Blind Spot Monitoring (Hella) (BSD)
SP2589	Configuration wipe	Blind Spot Monitoring (Hella) (BSD)
SP2590	Stage 1: Exhaust the left rear wheel	Electric Liquid Making (Bosch) (IPB)
SP2591	Stage 2: Exhaust the front left wheel	Electric Liquid Making (Bosch) (IPB)
SP2592	Stage 3: Exhaust the right front wheel	Electric Liquid Making (Bosch) (IPB)
SP2593	Stage 4: Exhaust the right rear wheel	Electric Liquid Making (Bosch) (IPB)

SP2594	Step 5: Exhaust the IPB Housing	Electric Liquid Making (Bosch) (IPB)
SP2595	Step 6: PFS and TMC2 exhaust	Electric Liquid Making (Bosch) (IPB)
SP2596	Step 7: leak check	Electric Liquid Making (Bosch) (IPB)
SP2597	Step 8 (1) Main cylinder pressure test	Electric Liquid Making (Bosch) (IPB)
SP2598	The eighth step (2) evaluate the pressure test of the master cylinder	Electric Liquid Making (Bosch) (IPB)
SP2599	The ninth step is to write the byte of the vacuum filling process + exit the installation (factory) mode	Electric Liquid Making (Bosch) (IPB)
SP2600	The first step: internal sensor calibration	Electric Liquid Making (Bosch) (IPB)
SP2601	Step 2: Calibration of the angle sensor	Electric Liquid Making (Bosch) (IPB)
SP2602	Step 3: (VPC) valve body calibration	Electric Liquid Making (Bosch) (IPB)
SP2603	The fourth step (1) main cylinder pressure test	Electric Liquid Making (Bosch) (IPB)
SP2604	The fourth step (2) evaluate the main cylinder pressure test	Electric Liquid Making (Bosch) (IPB)
SP2605	Step 5 (1): wheel speed sensor test	Electric Liquid Making (Bosch) (IPB)
SP2606	Step 5 (2): Evaluate the wheel speed sensor test results	Electric Liquid Making (Bosch) (IPB)
SP2607	Enter installation (factory) mode	Electric Liquid Making (Bosch) (IPB)
SP2608	Enter stand mode	Electric Liquid Making (Bosch) (IPB)

SP2609	Exit stand mode	Electric Liquid Making (Bosch) (IPB)
SP2610	Internal sensor calibration	Electric Liquid Making (Bosch) (IPB)
SP2611	Check the internal sensor calibration results	Electric Liquid Making (Bosch) (IPB)
SP2612	Erase car configuration	Electric Liquid Making (Bosch) (IPB)
SP2613	Tire pressure reset	Electric Liquid Making (Bosch) (IPB)
SP2614	Write flagship type Y (STHA)/honor type Y (STHA)	Electric Liquid Making (Bosch) (IPB)
SP2615	Write distinguished type Y (STHB)	Electric Liquid Making (Bosch) (IPB)
SP2616	Write MEEC Deluxe Edition	Electric Liquid Making (Bosch) (IPB)
SP2617	Write that MEEY is comfortable and luxurious; MEECB is comfortable and luxurious	Electric Liquid Making (Bosch) (IPB)
SP2618	Write MEEC Deluxe (AEB)	Electric Liquid Making (Bosch) (IPB)
SP2619	Write MEEY comfort, luxury type/MEECB comfort, luxury type (national standard indirect tire pressure)/MEEC luxury type non-AEB	Electric Liquid Making (Bosch) (IPB)
SP2620	Write MEEY comfort, luxury/MEECB comfort, luxury (European standard indirect tire pressure)	Electric Liquid Making (Bosch) (IPB)
SP2621	ECU reset	Electric Liquid Making (Bosch) (IPB)
SP2622	ECU unlock	Airbag (SRS)
SP2623	Warning light test	Airbag (SRS)

SP2624	ECU unlock	Airbag (new) (SRS)
SP2625	Warning light test	Airbag (new) (SRS)
SP2626	VIN writing and airbag decryption	Airbag (new) (SRS)
SP2627	Write the ID of the front left tire pressure monitoring module	Integrated body controller B2 (IBCMB2)
SP2628	Write the ID of the front right tire pressure monitoring module	Integrated body controller B2 (IBCMB2)
SP2629	Write the ID of the left rear tire pressure monitoring module	Integrated body controller B2 (IBCMB2)
SP2630	Write the ID of the rear right tire pressure monitoring module	Integrated body controller B2 (IBCMB2)
SP2631	Left front wheel matching	Integrated body controller B2 (IBCMB2)
SP2632	Right front wheel matching	Integrated body controller B2 (IBCMB2)
SP2633	Left rear wheel matching	Integrated body controller B2 (IBCMB2)
SP2634	Right rear wheel matching	Integrated body controller B2 (IBCMB2)
SP2635	Left front wheel matching	Integrated body controller B2 (IBCMB2)
SP2636	Right front wheel matching	Integrated body controller B2 (IBCMB2)
SP2637	Left rear wheel matching	Integrated body controller B2 (IBCMB2)
SP2638	Right rear wheel matching	Integrated body controller B2 (IBCMB2)
SP2639	Off-line calibration of the main driver's seat	Main driving seat (SECU001)
SP2640	LS control switch off state control function calibration	Charging and Distribution Assembly (CDU)

SP2641	Cruise calibration	Vehicle Controller (VCU)
SP2642	Adaptive cruise calibration	Vehicle Controller (VCU)
SP2643	Tilt calibration	Vehicle Controller (VCU)
SP2644	Vacuum pump working time is cleared	Vehicle Controller (VCU)
SP2645	VIN self-learning	Vehicle Controller (VCU)
SP2646	Motor zero calibration	Front Drive Motor Controller (FMCU)
SP2647	One-button battery heating active test	Battery Management System 500 (BMS)
SP2648	One-button battery heating active test off	Battery Management System 500 (BMS)
SP2649	Forced balance active test	Battery Management System 500 (BMS)
SP2650	Force balanced data flow	Battery Management System 500 (BMS)
SP2651	Cycle query of forced balance progress active test results	Battery Management System 500 (BMS)
SP2652	Force balance active test off	Battery Management System 500 (BMS)
SP2653	Factory calibration of battery pack	Battery Management System 500 (BMS)
SP2654	Battery pack actual calibration	Battery Management System 500 (BMS)
SP2655	One-button battery heating active test	Battery Management System 400 (BMS_400)
SP2656	One-button battery heating active test off	Battery Management System 400 (BMS_400)
SP2657	Forced balance active test	Battery Management System 400 (BMS_400)
SP2658	Force balanced data flow	Battery Management System 400 (BMS_400)
SP2659	Cycle query of forced balance progress active test results	Battery Management System 400 (BMS_400)
SP2660	Force balance active test off	Battery Management System 400 (BMS_400)

SP2661	Factory calibration of battery pack	Battery Management System 400 (BMS_400)
SP2662	Battery pack actual calibration	Battery Management System 400 (BMS_400)
SP2663	Write premium configuration	Blind Spot Monitoring (BSD001)
SP2664	Write honor type	Blind Spot Monitoring (BSD001)
SP2665	ECU unlock	Airbag (Autoliv) (SRS)
SP2666	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP2667	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP2668	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP2669	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP2670	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP2671	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP2672	Write Respectful Type (REPS)	Electronic Body Stability System (ESP)
SP2673	Write luxury (REPS)	Electronic Body Stability System (ESP)
SP2674	Luxury (CEPS)	Electronic Body Stability System (ESP)
SP2675	Premium (CEPS)	Electronic Body Stability System (ESP)
SP2676	Erase car configuration	Electronic Body Stability System (ESP)
SP2677	Angle zero calibration	Power Steering (EPS)
SP2678	PDC calibration	Power Steering (EPS)
SP2679	Write comfort configuration	Power Steering (EPS)
SP2680	Write comfort Y configuration	Power Steering (EPS)
SP2681	Write luxury Y configuration	Power Steering (EPS)
SP2682	Write premium Y configuration	Power Steering (EPS)
SP2683	Write flagship Y	Power Steering (EPS)
SP2684	Write flagship configuration	Power Steering (EPS)
SP2685	Write honorable Y configuration	Power Steering (EPS)

SP2686	Write LKS function open (CEPS) configuration	Power Steering (EPS)
SP2687	Write LKS function open (REPS) configuration	Power Steering (EPS)
SP2688	Write the ID of the front left tire pressure monitoring module	Tire Pressure Management Module (Sensata) (TPMS)
SP2689	Write the ID of the front right tire pressure monitoring module	Tire Pressure Management Module (Sensata) (TPMS)
SP2690	Write the ID of the left rear tire pressure monitoring module	Tire Pressure Management Module (Sensata) (TPMS)
SP2691	Write the ID of the rear right tire pressure monitoring module	Tire Pressure Management Module (Sensata) (TPMS)
SP2692	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2693	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2694	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2695	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2696	Write the ID of the front left tire pressure monitoring module	Tire Pressure Management Module (Baolong) (TPMS)
SP2697	Write the ID of the front right tire pressure monitoring module	Tire Pressure Management Module (Baolong) (TPMS)

SP2698	Write the ID of the left rear tire pressure monitoring module	Tire Pressure Management Module (Baolong) (TPMS)
SP2699	Write the ID of the rear right tire pressure monitoring module	Tire Pressure Management Module (Baolong) (TPMS)
SP2700	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2701	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2702	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2703	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2704	Write the ID of the front left tire pressure monitoring module	Tire pressure management module (cloud collar) (TPMS)
SP2705	Write the ID of the front right tire pressure monitoring module	Tire pressure management module (cloud collar) (TPMS)
SP2706	Write the ID of the left rear tire pressure monitoring module	Tire pressure management module (cloud collar) (TPMS)
SP2707	Write the ID of the rear right tire pressure monitoring module	Tire pressure management module (cloud collar) (TPMS)
SP2708	Left front wheel matching	Tire pressure management module (cloud collar) (TPMS)
SP2709	Right front wheel matching	Tire pressure management module (cloud collar) (TPMS)
SP2710	Left rear wheel matching	Tire pressure management module (cloud collar) (TPMS)
SP2711	Right rear wheel matching	Tire pressure management module (cloud collar) (TPMS)

SP2712	Driver Calibration Service Calibration (SDA)	Adaptive Cruise System (MRR)
SP2713	After-sales calibration	Adaptive Cruise System (MRR)
SP2714	Write flagship, respectable configuration	Adaptive Cruise System (MRR)
SP2715	Initial dynamic calibration	Multi-Function Video Controller (MPC)
SP2716	Turn off dynamic calibration	Multi-Function Video Controller (MPC)
SP2717	Write honor type (high configuration with LKS)_REPS configuration	Multi-Function Video Controller (MPC)
SP2718	Write the distinguished type (with LKS in the middle)_CEPS configuration	Multi-Function Video Controller (MPC)
SP2719	Static calibration	Multi-Function Video Controller (MPC)
SP2720	Write flagship	Blind Spot Monitoring (Hella) (BSD)
SP2721	BSD static calibration	Monitoring from the blind spot (BSD002)
SP2722	BSD dynamic calibration	Monitoring from the blind spot (BSD002)
SP2723	Main driver seat calibration	Main driver's seat (SECU_D)
SP2724	Write flagship type (without APA and ACC)	Electronic Parking (Sark) (EPB_SAC)
SP2725	Write noble type (no APA, ACC)	Electronic Parking (Sark) (EPB_SAC)
SP2726	Write SA3EE luxury configuration	Electronic Parking (Sark) (EPB_SAC)
SP2727	Stage 1: Exhaust the left rear wheel	Electro-hydraulic brake (Bosch) (IPB)
SP2728	Stage 2: Exhaust the front left wheel	Electro-hydraulic brake (Bosch) (IPB)

SP2729	Stage 3: Exhaust the right front wheel	Electro-hydraulic brake (Bosch) (IPB)
SP2730	Stage 4: Exhaust the right rear wheel	Electro-hydraulic brake (Bosch) (IPB)
SP2731	Step 5: Exhaust the IPB Housing	Electro-hydraulic brake (Bosch) (IPB)
SP2732	Step 6: PFS and TMC2 exhaust	Electro-hydraulic brake (Bosch) (IPB)
SP2733	Step 7: leak check	Electro-hydraulic brake (Bosch) (IPB)
SP2734	Step 8 (1) Main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB)
SP2735	The eighth step (2) evaluate the pressure test of the master cylinder	Electro-hydraulic brake (Bosch) (IPB)
SP2736	The ninth step is to write the byte of the vacuum filling process + exit the installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB)
SP2737	The first step: internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB)
SP2738	Step 2: Calibration of the angle sensor	Electro-hydraulic brake (Bosch) (IPB)
SP2739	Step 3: (VPC) valve body calibration	Electro-hydraulic brake (Bosch) (IPB)
SP2740	The fourth step (1) main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB)
SP2741	The fourth step (2) evaluate the main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB)
SP2742	Step 5 (1): wheel speed sensor test	Electro-hydraulic brake (Bosch) (IPB)

SP2743	Step 5 (2): Evaluate the wheel speed sensor test results	Electro-hydraulic brake (Bosch) (IPB)
SP2744	Enter installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB)
SP2745	Enter stand mode	Electro-hydraulic brake (Bosch) (IPB)
SP2746	Exit stand mode	Electro-hydraulic brake (Bosch) (IPB)
SP2747	Internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB)
SP2748	Check the internal sensor calibration results	Electro-hydraulic brake (Bosch) (IPB)
SP2749	Erase car configuration	Electro-hydraulic brake (Bosch) (IPB)
SP2750	Tire pressure reset	Electro-hydraulic brake (Bosch) (IPB)
SP2751	Write flagship type (without APA and ACC)	Electro-hydraulic brake (Bosch) (IPB)
SP2752	Write noble type (no APA, ACC)	Electro-hydraulic brake (Bosch) (IPB)
SP2753	Write SA3EE luxury type	Electro-hydraulic brake (Bosch) (IPB)
SP2754	Driver Calibration Service Calibration (SDA)	Adaptive Cruise System (Bosch) (MRR)
SP2755	After-sales calibration	Adaptive Cruise System (Bosch) (MRR)
SP2756	Write flagship configuration	Adaptive Cruise System (Bosch) (MRR)
SP2757	Initial dynamic calibration	Multifunctional Video Controller (Bosch) (MPC)
SP2758	Turn off dynamic calibration	Multifunctional Video Controller (Bosch) (MPC)
SP2759	Write flagship configuration	Multifunctional Video Controller (Bosch) (MPC)
SP2760	Static calibration	Multifunctional Video Controller (Bosch) (MPC)
SP2761	Write flagship	Left Blind Spot Monitoring (Winninger) (BSD001)
SP2762	Configuration wipe	Left Blind Spot Monitoring (Winninger) (BSD001)
SP2763	After-sales calibration	Left Blind Spot Monitoring (Winninger) (BSD001)

SP2764	Write flagship	Right Blind Spot Monitoring (Winner) (BSD001)
SP2765	Configuration wipe	Right Blind Spot Monitoring (Winner) (BSD001)
SP2766	After-sales calibration	Right Blind Spot Monitoring (Winner) (BSD001)
SP2767	Angle zero calibration	Power Steering (TRW) (EPS)
SP2768	PDC calibration	Power Steering (TRW) (EPS)
SP2769	Write premium Y configuration	Power Steering (TRW) (EPS)
SP2770	Write flagship Y configuration	Power Steering (TRW) (EPS)
SP2771	Write SA3EE luxury configuration	Power Steering (TRW) (EPS)
SP2772	Write SA3EB distinguished Y configuration	Power Steering (TRW) (EPS)
SP2773	Write SA3EB flagship Y configuration	Power Steering (TRW) (EPS)
SP2774	Write APA function to enable configuration	Power Steering (TRW) (EPS)
SP2775	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2776	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2777	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2778	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2779	Cruise calibration	Vehicle Controller (BYD) (VCU)
SP2780	Adaptive cruise calibration	Vehicle Controller (BYD) (VCU)
SP2781	Tilt calibration	Vehicle Controller (BYD) (VCU)
SP2782	VIN self-learning	Vehicle Controller (BYD) (VCU)
SP2783	One-button battery heating active test	Battery Management System 500 (BYD) (BMS)
SP2784	One-button battery heating active test off	Battery Management System 500 (BYD) (BMS)
SP2785	One-button battery cooling active test	Battery Management System 500 (BYD) (BMS)

SP2786	Leakage detection control switch disconnect active test	Battery Management System 500 (BYD) (BMS)
SP2787	Hard wire interlocking shield active test	Battery Management System 500 (BYD) (BMS)
SP2788	Forced balance active test	Battery Management System 500 (BYD) (BMS)
SP2789	One-button battery heating active test	Battery Management System 400 (BYD) (BMS)
SP2790	One-button battery heating active test off	Battery Management System 400 (BYD) (BMS)
SP2791	One-button battery cooling active test	Battery Management System 400 (BYD) (BMS)
SP2792	Leakage detection control switch disconnect active test	Battery Management System 400 (BYD) (BMS)
SP2793	Hard wire interlocking shield active test	Battery Management System 400 (BYD) (BMS)
SP2794	Forced balance active test	Battery Management System 400 (BYD) (BMS)
SP2795	Start routine	DC-DC assembly (BYD) (DC_DC)
SP2796	Request routine results	DC-DC assembly (BYD) (DC_DC)
SP2797	Stop routine affairs	DC-DC assembly (BYD) (DC_DC)
SP2798	Main driver seat calibration	Main driving seat (BYD) (SECU_D)
SP2799	ECU unlock	Airbag (BYD) (SRSIII)
SP2800	Warning light test	Airbag (BYD) (SRSIII)
SP2801	VIN writing and airbag decryption	Airbag (BYD) (SRSIII)
SP2802	Left front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP2803	Right front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP2804	Left rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)

SP2805	Right rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP2806	Left front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP2807	Right front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP2808	Left rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP2809	Right rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP2810	The first step-read the working hours of the original ECU mainland pump	Main Controller (ACU)
SP2811	The second step-write the working time read in the first step	Main Controller (ACU)
SP2812	Clear the working hours of Continental pumps	Main Controller (ACU)
SP2813	VIN self-learning	Main Controller (ACU)
SP2814	One-button battery heating active test	Battery Management System (BMS)
SP2815	One-button battery heating active test off	Battery Management System (BMS)
SP2816	Forced balance active test	Battery Management System (BMS)
SP2817	Force balanced data flow	Battery Management System (BMS)
SP2818	Cycle query of forced balance progress active test results	Battery Management System (BMS)
SP2819	Force balance active test off	Battery Management System (BMS)
SP2820	Factory calibration of battery pack	Battery Management System (BMS)
SP2821	Battery pack actual calibration	Battery Management System (BMS)
SP2822	Motor zero calibration	VTOG_Drive (VTOG_D)

SP2823	Downline calibration of inclination	VTOG_DSP2 (VTOG_DSP2)
SP2824	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP2825	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP2826	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP2827	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP2828	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP2829	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP2830	Slope calibration	Electronic Parking System (Sark) (EPB)
SP2831	Angle zero calibration	Power Steering (CEPS)
SP2832	The calibration model is a comfortable model	Power Steering (CEPS)
SP2833	The calibrated model is a luxury model	Power Steering (CEPS)
SP2834	The calibrated model is a noble model	Power Steering (CEPS)
SP2835	ECU unlock	Airbag (SRS)
SP2836	Warning light test	Airbag (SRS)
SP2837	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2838	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2839	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2840	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2841	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2842	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2843	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)

SP2844	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2845	Vacuum pump working time is cleared	Vehicle Controller (VCU)
SP2846	Downline calibration of inclination	Vehicle Controller (VCU)
SP2847	VIN self-learning	Vehicle Controller (VCU)
SP2848	The first step-read the working hours of the original ECU mainland pump	Main Controller (ACU)
SP2849	The second step-write the working time read in the first step	Main Controller (ACU)
SP2850	Clear the working hours of Continental pumps	Main Controller (ACU)
SP2851	Forced balance active test	Battery Management System (BMS)
SP2852	Force balanced data flow	Battery Management System (BMS)
SP2853	Cycle query of forced balance progress active test results	Battery Management System (BMS)
SP2854	Force balance active test off	Battery Management System (BMS)
SP2855	Factory calibration of battery pack	Battery Management System (BMS)
SP2856	Battery pack actual calibration	Battery Management System (BMS)
SP2857	Motor zero calibration	Front Drive Motor Controller (FMCU)
SP2858	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP2859	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)

SP2860	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP2861	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP2862	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP2863	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP2864	Angle zero calibration	Power Steering (CEPS)
SP2865	The calibrated model is a standard model	Power Steering (CEPS)
SP2866	The calibrated model is a shared model	Power Steering (CEPS)
SP2867	The calibration model is a comfortable model	Power Steering (CEPS)
SP2868	The calibrated model is a luxury model	Power Steering (CEPS)
SP2869	Slope calibration	Electronic Parking System (Sark) (EPB)
SP2870	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2871	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2872	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2873	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP2874	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2875	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2876	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2877	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2878	Vacuum pump working time is cleared	Vehicle Controller (VCU)
SP2879	Downline calibration of inclination	Vehicle Controller (VCU)

SP2880	VIN self-learning	Vehicle Controller (VCU)
SP2881	Angle zero calibration	Power Steering_EPS (Tianhe) (EPS)
SP2882	Write comfort SCEE, standard SCEQ configuration	Power Steering_EPS (Tianhe) (EPS)
SP2883	Write noble Y+ noble Y optional package (two-color + side air curtain + four-door anti-pinch) SCEN configuration	Power Steering_EPS (Tianhe) (EPS)
SP2884	Write SCEE, SCEQ luxury configuration	Power Steering_EPS (Tianhe) (EPS)
SP2885	Write SCEN luxury configuration	Power Steering_EPS (Tianhe) (EPS)
SP2886	Angle zero calibration	Power Steering_EPS (Nexteer) (EPS)
SP2887	Write flagship configuration	Power Steering_EPS (Nexteer) (EPS)
SP2888	Write honor type, honor type 20 inch configuration	Power Steering_EPS (Nexteer) (EPS)
SP2889	Write premium configuration	Power Steering_EPS (Nexteer) (EPS)
SP2890	Write elite configuration	Power Steering_EPS (Nexteer) (EPS)
SP2891	Motor zero calibration	Drive motor controller MCU (MCU)
SP2892	One-button battery heating active test	Battery Management System_300 (BMS300)
SP2893	One-button battery heating active test off	Battery Management System_300 (BMS300)
SP2894	Forced balance active test	Battery Management System_300 (BMS300)
SP2895	Force balanced data flow	Battery Management System_300 (BMS300)
SP2896	Cycle query of forced balance progress active test results	Battery Management System_300 (BMS300)

SP2897	Force balance active test off	Battery Management System_300 (BMS300)
SP2898	Factory calibration of battery pack	Battery Management System_300 (BMS300)
SP2899	Battery pack actual calibration	Battery Management System_300 (BMS300)
SP2900	One-button battery heating active test	Battery Management System_400 (BMS400)
SP2901	One-button battery heating active test off	Battery Management System_400 (BMS400)
SP2902	Forced balance active test	Battery Management System_400 (BMS400)
SP2903	Force balanced data flow	Battery Management System_400 (BMS400)
SP2904	Cycle query of forced balance progress active test results	Battery Management System_400 (BMS400)
SP2905	Force balance active test off	Battery Management System_400 (BMS400)
SP2906	Factory calibration of battery pack	Battery Management System_400 (BMS400)
SP2907	Battery pack actual calibration	Battery Management System_400 (BMS400)
SP2908	One-button battery cooling active test	Battery Manager 400 (BYD) (BMS)
SP2909	One-button battery cooling active test off	Battery Manager 400 (BYD) (BMS)
SP2910	One-button battery heating active test	Battery Manager 400 (BYD) (BMS)
SP2911	One-button battery heating active test off	Battery Manager 400 (BYD) (BMS)
SP2912	Forced balance active test	Battery Manager 400 (BYD) (BMS)
SP2913	Force balanced data flow	Battery Manager 400 (BYD) (BMS)
SP2914	Cycle query of forced balance progress active test results	Battery Manager 400 (BYD) (BMS)

SP2915	Force balance active test off	Battery Manager 400 (BYD) (BMS)
SP2916	Leakage detection control switch is off	Battery Manager 400 (BYD) (BMS)
SP2917	Leakage detection control switch is off and off	Battery Manager 400 (BYD) (BMS)
SP2918	Hard wire interlocking shield	Battery Manager 400 (BYD) (BMS)
SP2919	Hard wire interlock shield closed	Battery Manager 400 (BYD) (BMS)
SP2920	Model calibration	Leakage Sensor (LS)
SP2921	Stage 1: Exhaust the left rear wheel	Wheel Anti-lock Braking System_[ABS9] (Bosch) (ABS)
SP2922	Stage 2: Exhaust the front left wheel	Wheel Anti-lock Braking System_[ABS9] (Bosch) (ABS)
SP2923	Stage 3: Exhaust the right front wheel	Wheel Anti-lock Braking System_[ABS9] (Bosch) (ABS)
SP2924	Stage 4: Exhaust the right rear wheel	Wheel Anti-lock Braking System_[ABS9] (Bosch) (ABS)
SP2925	Tire pressure reset	Electronic Body Stability System (ESP)
SP2926	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP2927	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP2928	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP2929	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP2930	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP2931	Rotation sensor calibration	Electronic Body Stability System (ESP)

SP2932	Write SCEQ, SCET, SCEE basic type	Electronic Body Stability System (ESP)
SP2933	Write SCEQ, SCET, SCEE comfort type, SCEE luxury type	Electronic Body Stability System (ESP)
SP2934	Write SCED basic type	Electronic Body Stability System (ESP)
SP2935	Write SCED comfort type	Electronic Body Stability System (ESP)
SP2936	Erase car configuration	Electronic Body Stability System (ESP)
SP2937	ECU reset	Electronic Body Stability System (ESP)
SP2938	Tire pressure reset	Electronic Body Stability System (BaseEvo) (Bosch) (ESP)
SP2939	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (BaseEvo) (Bosch) (ESP)
SP2940	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (BaseEvo) (Bosch) (ESP)
SP2941	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (BaseEvo) (Bosch) (ESP)
SP2942	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (BaseEvo) (Bosch) (ESP)
SP2943	Yaw rate sensor calibration	Electronic Body Stability System (BaseEvo) (Bosch) (ESP)
SP2944	Rotation sensor calibration	Electronic Body Stability System (BaseEvo) (Bosch) (ESP)
SP2945	Write SCEQ, SCET, SCEE basic type	Electronic Body Stability System (BaseEvo) (Bosch) (ESP)
SP2946	Write SCEQ, SCET, SCEE comfort type, SCEE luxury type	Electronic Body Stability System (BaseEvo) (Bosch) (ESP)
SP2947	Write SCED basic type	Electronic Body Stability System (BaseEvo) (Bosch) (ESP)
SP2948	Write SCED comfort type	Electronic Body Stability System (BaseEvo) (Bosch) (ESP)
SP2949	Erase car configuration	Electronic Body Stability System (BaseEvo) (Bosch) (ESP)
SP2950	ECU reset	Electronic Body Stability System (BaseEvo) (Bosch) (ESP)
SP2951	Slope calibration	Electronic Parking System (Sark) (EPB)
SP2952	Write SCEN	Electronic Parking System (Sark) (EPB)

SP2953	Write luxury type \noble type	Electronic Parking System (Sark) (EPB)
SP2954	Write to SCEE	Electronic Parking System (Sark) (EPB)
SP2955	ECU unlock	Airbag (third generation) (SRS III)
SP2956	Warning light test	Airbag (third generation) (SRS_III)
SP2957	ECU unlock	Airbag (new) (BYD) (SRS)
SP2958	Warning light test	Airbag (new) (BYD) (SRS)
SP2959	VIN writing and airbag decryption	Airbag (new) (BYD) (SRS)
SP2960	Left front wheel matching	Integrated body controller (BCM)
SP2961	Right front wheel matching	Integrated body controller (BCM)
SP2962	Left rear wheel matching	Integrated body controller (BCM)
SP2963	Right rear wheel matching	Integrated body controller (BCM)
SP2964	Left front wheel matching	Integrated body controller (BCM)
SP2965	Right front wheel matching	Integrated body controller (BCM)
SP2966	Left rear wheel matching	Integrated body controller (BCM)
SP2967	Right rear wheel matching	Integrated body controller (BCM)
SP2968	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2969	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2970	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2971	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP2972	The first step-read the working hours of the original ECU mainland pump	Main Controller (ACU)
SP2973	The second step-write the working time read in the first step	Main Controller (ACU)
SP2974	Clear the working hours of Continental pumps	Main Controller (ACU)

SP2975	Factory calibration of battery pack	Battery Management System (BMS)
SP2976	Battery pack actual calibration	Battery Management System (BMS)
SP2977	Downline calibration of inclination	VTOG_DSP2_South American Version (VTOG_DSP2_NA)
SP2978	Downline calibration of inclination	VTOG_DSP2(VTOG_DSP2)
SP2979	Stage 1: Exhaust the left rear wheel	Wheel Anti-lock Braking System (ABS)
SP2980	Stage 2: Exhaust the front left wheel	Wheel Anti-lock Braking System (ABS)
SP2981	Stage 3: Exhaust the right front wheel	Wheel Anti-lock Braking System (ABS)
SP2982	Stage 4: Exhaust the right rear wheel	Wheel Anti-lock Braking System (ABS)
SP2983	Yaw rate sensor calibration	Wheel Anti-lock Braking System (ABS)
SP2984	Rotation sensor calibration	Wheel Anti-lock Braking System (ABS)
SP2985	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP2986	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP2987	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP2988	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP2989	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP2990	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP2991	ECU unlock	Airbag (third generation) (SRS_III)
SP2992	Warning light test	Airbag (third generation) (SRS_III)
SP2993	ECU unlock	Airbag (SRS)

SP2994	Vacuum pump working time is cleared	Vehicle Controller (VCU)
SP2995	Downline calibration of inclination	Vehicle Controller (VCU)
SP2996	One-button battery heating active test	Battery Management System (BMS)
SP2997	One-button battery heating active test off	Battery Management System (BMS)
SP2998	Factory calibration of battery pack	Battery Management System (BMS)
SP2999	Battery pack actual calibration	Battery Management System (BMS)
SP3000	One-button battery cooling active test	Battery Management System (BMS)
SP3001	Leakage detection control switch disconnect active test	Battery Management System (BMS)
SP3002	Hard wire interlocking shield active test	Battery Management System (BMS)
SP3003	Forced balance active test	Battery Management System (BMS)
SP3004	Request to turn on cooling	Battery Management System 300 (BMS)
SP3005	Progress query	Battery Management System 300 (BMS)
SP3006	Request to turn off cooling	Battery Management System 300 (BMS)
SP3007	Request to turn on heating	Battery Management System 300 (BMS)
SP3008	Progress query	Battery Management System 300 (BMS)
SP3009	Request to turn off the heating	Battery Management System 300 (BMS)
SP3010	Request to turn on balance	Battery Management System 300 (BMS)
SP3011	Progress query	Battery Management System 300 (BMS)
SP3012	Request to turn off balance	Battery Management System 300 (BMS)
SP3013	Turn on	Battery Management System 300 (BMS)
SP3014	Progress query	Battery Management System 300 (BMS)
SP3015	Close	Battery Management System 300 (BMS)

SP3016	Turn on	Battery Management System 300 (BMS)
SP3017	Progress query	Battery Management System 300 (BMS)
SP3018	Close	Battery Management System 300 (BMS)
SP3019	Motor zero calibration	Front Drive Motor Controller (FMCU)
SP3020	The leakage sensor control switch is off	Leakage Sensor (LS)
SP3021	Stage 1: Exhaust the left rear wheel	Wheel Anti-lock Braking System (ABS)
SP3022	Stage 2: Exhaust the front left wheel	Wheel Anti-lock Braking System (ABS)
SP3023	Stage 3: Exhaust the right front wheel	Wheel Anti-lock Braking System (ABS)
SP3024	Stage 4: Exhaust the right rear wheel	Wheel Anti-lock Braking System (ABS)
SP3025	Tire pressure reset	Wheel Anti-lock Braking System (ABS)
SP3026	Erase configuration word	Wheel Anti-lock Braking System (ABS)
SP3027	Write configuration word	Wheel Anti-lock Braking System (ABS)
SP3028	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP3029	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP3030	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP3031	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP3032	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP3033	Tire pressure reset	Electronic Body Stability System (ESP)
SP3034	ECU reset	Electronic Body Stability System (ESP)
SP3035	Write medium/high profile	Electronic Body Stability System (ESP)
SP3036	Erase car configuration	Electronic Body Stability System (ESP)

SP3037	Angle zero calibration	Power Steering (Wanda) (EPS)
SP3038	Angle zero calibration	Power Steering (TRW) (EPS)
SP3039	Write comfort configuration	Power Steering (TRW) (EPS)
SP3040	Write premium configuration	Power Steering (TRW) (EPS)
SP3041	Left front wheel matching	Tire Pressure Management Module (TPMS)
SP3042	Right front wheel matching	Tire Pressure Management Module (TPMS)
SP3043	Left rear wheel matching	Tire Pressure Management Module (TPMS)
SP3044	Right rear wheel matching	Tire Pressure Management Module (TPMS)
SP3045	Gradient sensor calibration	Electronic Parking System (EPB)
SP3046	ECU unlock	Airbag (third generation) (SRS III)
SP3047	Warning light test	Airbag (third generation) (SRS_III)
SP3048	Yaw rate sensor calibration	Electronic Body Stability System (Bosch) (ESP)
SP3049	Phase 1: Exhaust the front left wheel	Electronic Body Stability System (Bosch) (ESP)
SP3050	Stage 2: Exhaust the right front wheel	Electronic Body Stability System (Bosch) (ESP)
SP3051	Stage 3: Exhaust the left rear wheel	Electronic Body Stability System (Bosch) (ESP)
SP3052	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (Bosch) (ESP)
SP3053	Write DAEA high configuration + national standard tire pressure	Electronic Body Stability System (Bosch) (ESP)
SP3054	Write DAEA low configuration + national standard tire pressure	Electronic Body Stability System (Bosch) (ESP)
SP3055	Write DAEA high configuration + European standard tire pressure	Electronic Body Stability System (Bosch) (ESP)

SP3056	Write DAEA low configuration + European standard tire pressure	Electronic Body Stability System (Bosch) (ESP)
SP3057	Erase car configuration	Electronic Body Stability System (Bosch) (ESP)
SP3058	Tire pressure reset	Electronic Body Stability System (Bosch) (ESP)
SP3059	Write EPB (IPB configuration)	Electronic parking (Sark) (DD_EPB)
SP3060	Write EPB (ESP configuration)	Electronic parking (Sark) (DD_EPB)
SP3061	Erase car configuration	Electronic parking (Sark) (DD_EPB)
SP3062	Angle zero calibration	Electric Power Steering (Yubei) (EPS)
SP3063	Request to turn on cooling	Battery Manager 400 (BYD) (DD_BMS400)
SP3064	Progress query (the longest cycle query is 50s)	Battery Manager 400 (BYD) (DD_BMS400)
SP3065	Request to turn off cooling	Battery Manager 400 (BYD) (DD_BMS400)
SP3066	Request to turn on heating	Battery Manager 400 (BYD) (DD_BMS400)
SP3067	Progress query (the longest cycle query is 50s)	Battery Manager 400 (BYD) (DD_BMS400)
SP3068	Request to turn off the heating	Battery Manager 400 (BYD) (DD_BMS400)
SP3069	Turn on	Battery Manager 400 (BYD) (DD_BMS400)
SP3070	Progress query (loop query 30s)	Battery Manager 400 (BYD) (DD_BMS400)
SP3071	Close	Battery Manager 400 (BYD) (DD_BMS400)
SP3072	Turn on	Battery Manager 400 (BYD) (DD_BMS400)
SP3073	Progress query (loop query 30s)	Battery Manager 400 (BYD) (DD_BMS400)
SP3074	Close	Battery Manager 400 (BYD) (DD_BMS400)
SP3075	VIN self-learning	Vehicle controller (BYD) (DD_VCU)
SP3076	Downline calibration of inclination	Vehicle controller (BYD) (DD_VCU)
SP3077	Vacuum pump working time is cleared	Vehicle controller (BYD) (DD_VCU)

SP3078	Stage 1: Exhaust the left rear wheel	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3079	Stage 2: Exhaust the front left wheel	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3080	Stage 3: Exhaust the right front wheel	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3081	Stage 4: Exhaust the right rear wheel	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3082	Step 5: Exhaust the IPB Housing	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3083	Step 6: PFS and TMC2 exhaust	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3084	Step 7: leak check	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3085	Step 8 (1) Main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3086	The eighth step (2) evaluate the pressure test of the master cylinder	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3087	The ninth step is to write the byte of the vacuum filling process + exit the installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3088	The first step: internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3089	Step 2: Calibration of the angle sensor	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3090	Step 3: (VPC) valve body calibration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3091	The fourth step (1) main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3092	The fourth step (2) evaluate the main cylinder pressure test	Electro-hydraulic brake (Bosch) (IPB_BOSCH)

SP3093	Step 5 (1): wheel speed sensor test	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3094	Step 5 (2): Evaluate the wheel speed sensor test results	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3095	Enter installation (factory) mode	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3096	Enter stand mode	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3097	Exit stand mode	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3098	Internal sensor calibration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3099	Check the internal sensor calibration results	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3100	Erase car configuration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3101	Write DAEA low configuration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3102	Write DAEA high configuration	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3103	Tire pressure reset	Electro-hydraulic brake (Bosch) (IPB_BOSCH)
SP3104	Start SDA	Front millimeter wave radar (Bosch) (FMRR BOSCH)
SP3105	Write low profile	Front millimeter wave radar (Bosch) (FMRR BOSCH)
SP3106	Write high configuration	Front millimeter wave radar (Bosch) (FMRR BOSCH)
SP3107	Write low profile	Multifunctional Video Controller (Bosch) (MPC BOSCH)
SP3108	Write high configuration	Multifunctional Video Controller (Bosch) (MPC BOSCH)
SP3109	After-sales model calibration	Multifunctional Video Controller (Bosch) (MPC_BOSCH)
SP3110	ECU unlock	Airbag (BYD) (SRS_III)
SP3111	Warning light test	Airbag (BYD) (SRS_III)
SP3112	Vacuum pump working time is cleared	Vehicle Controller (VCU)
SP3113	Downline calibration of inclination	Vehicle Controller (VCU)

SP3114	VIN self-learning	Vehicle Controller (VCU)
SP3115	Factory calibration of battery pack	Power Battery Manager (BMS)
SP3116	Battery pack actual calibration	Power Battery Manager (BMS)
SP3117	Forced balance active test	Power Battery Manager (BMS)
SP3118	Force balanced data flow	Power Battery Manager (BMS)
SP3119	Cycle query of forced balance progress active test results	Power Battery Manager (BMS)
SP3120	Force balance active test off	Power Battery Manager (BMS)
SP3121	Phase 1: Exhaust the front left wheel	Wheel Anti-lock Braking System (ABS)
SP3122	Stage 2: Exhaust the right front wheel	Wheel Anti-lock Braking System (ABS)
SP3123	Stage 3: Exhaust the left rear wheel	Wheel Anti-lock Braking System (ABS)
SP3124	Stage 4: Exhaust the right rear wheel	Wheel Anti-lock Braking System (ABS)
SP3125	Erase and write configuration word	Wheel Anti-lock Braking System (ABS)
SP3126	Tire pressure reset	Wheel Anti-lock Braking System (ABS)
SP3127	Angle zero calibration	Power Steering (CEPS)
SP3128	Motor zero calibration	Front Drive Motor Controller (FMCU)
SP3129	The leakage sensor control switch is off	Three-in-one charging and distribution (CDU)
SP3130	ECU unlock	Airbag (SRS)
SP3131	Active test in rehydration mode	Integrated body controller (BCM)
SP3132	Rehydration mode is off	Integrated body controller (BCM)
SP3133	Vacuum pump working time is cleared	Vehicle Controller (VCU)

SP3134	Downline calibration of inclination	Vehicle Controller (VCU)
SP3135	VIN self-learning	Vehicle Controller (VCU)
SP3136	Forced balance active test	Battery Manager 300-Private Version (BMS)
SP3137	Force balanced data flow	Battery Manager 300-Private Version (BMS)
SP3138	Cycle query of forced balance progress active test results	Battery Manager 300-Private Version (BMS)
SP3139	Force balance active test off	Battery Manager 300-Private Version (BMS)
SP3140	Factory calibration of battery pack	Battery Manager 300-Private Version (BMS)
SP3141	Battery pack actual calibration	Battery Manager 300-Private Version (BMS)
SP3142	Forced balance active test	Battery Manager 300-to-public version (BMS)
SP3143	Force balanced data flow	Battery Manager 300-to-public version (BMS)
SP3144	Cycle query of forced balance progress active test results	Battery Manager 300-to-public version (BMS)
SP3145	Force balance active test off	Battery Manager 300-to-public version (BMS)
SP3146	Factory calibration of battery pack	Battery Manager 300-to-public version (BMS)
SP3147	Battery pack actual calibration	Battery Manager 300-to-public version (BMS)
SP3148	Forced balance active test	Ternary Battery Manager 400 (BMS)
SP3149	Force balanced data flow	Ternary Battery Manager 400 (BMS)
SP3150	Cycle query of forced balance progress active test results	Ternary Battery Manager 400 (BMS)
SP3151	Force balance active test off	Ternary Battery Manager 400 (BMS)
SP3152	Factory calibration of battery pack	Ternary Battery Manager 400 (BMS)

SP3153	Battery pack actual calibration	Ternary Battery Manager 400 (BMS)
SP3154	One-button battery cooling active test	Battery Manager 400 (BMS)
SP3155	One-button battery cooling active test off	Battery Manager 400 (BMS)
SP3156	One-button battery heating active test	Battery Manager 400 (BMS)
SP3157	One-button battery heating active test off	Battery Manager 400 (BMS)
SP3158	Forced balance active test	Battery Manager 400 (BMS)
SP3159	Force balanced data flow	Battery Manager 400 (BMS)
SP3160	Cycle query of forced balance progress active test results	Battery Manager 400 (BMS)
SP3161	Force balance active test off	Battery Manager 400 (BMS)
SP3162	Leakage detection control switch is off	Battery Manager 400 (BMS)
SP3163	Leakage detection control switch is off and off	Battery Manager 400 (BMS)
SP3164	Hard wire interlocking shield	Battery Manager 400 (BMS)
SP3165	Hard wire interlock shield closed	Battery Manager 400 (BMS)
SP3166	Factory calibration of battery pack	Battery Manager 400 (BMS)
SP3167	Battery pack actual calibration	Battery Manager 400 (BMS)
SP3168	One-button battery cooling active test	Battery Manager 350 (BMS)

SP3169	One-button battery cooling active test off	Battery Manager 350 (BMS)
SP3170	One-button battery heating active test	Battery Manager 350 (BMS)
SP3171	One-button battery heating active test off	Battery Manager 350 (BMS)
SP3172	Leakage detection control switch is off	Battery Manager 350 (BMS)
SP3173	Leakage detection control switch is off and off	Battery Manager 350 (BMS)
SP3174	Hard wire interlocking shield	Battery Manager 350 (BMS)
SP3175	Hard wire interlock shield closed	Battery Manager 350 (BMS)
SP3176	Factory calibration of battery pack	Battery Manager 350 (BMS)
SP3177	Battery pack actual calibration	Battery Manager 350 (BMS)
SP3178	One-button battery cooling active test	Battery Manager 300 (BYD) (BMS)
SP3179	One-button battery cooling active test off	Battery Manager 300 (BYD) (BMS)
SP3180	One-button battery heating active test	Battery Manager 300 (BYD) (BMS)
SP3181	One-button battery heating active test off	Battery Manager 300 (BYD) (BMS)
SP3182	Leakage detection control switch is off	Battery Manager 300 (BYD) (BMS)
SP3183	Leakage detection control switch is off and off	Battery Manager 300 (BYD) (BMS)

SP3184	Hard wire interlocking shield	Battery Manager 300 (BYD) (BMS)
SP3185	Hard wire interlock shield closed	Battery Manager 300 (BYD) (BMS)
SP3186	Motor zero calibration	Front Drive Motor Controller (FMCU)
SP3187	The leakage sensor control switch is off	Three-in-one charging and distribution (CDU)
SP3188	Start routine	DC-DC assembly (DC_DC)
SP3189	Request routine results	DC-DC assembly (DC_DC)
SP3190	Stop routine affairs	DC-DC assembly (DC_DC)
SP3191	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP3192	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP3193	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP3194	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP3195	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP3196	Tire pressure reset	Electronic Body Stability System (ESP)
SP3197	Erase car configuration	Electronic Body Stability System (ESP)
SP3198	Write medium/high profile	Electronic Body Stability System (ESP)
SP3199	ECU reset	Electronic Body Stability System (ESP)
SP3200	Phase 1: Exhaust the front left wheel	Wheel Anti-lock Braking System (ABS)
SP3201	Stage 2: Exhaust the right front wheel	Wheel Anti-lock Braking System (ABS)
SP3202	Stage 3: Exhaust the left rear wheel	Wheel Anti-lock Braking System (ABS)
SP3203	Stage 4: Exhaust the right rear wheel	Wheel Anti-lock Braking System (ABS)

SP3204	Tire pressure reset	Wheel Anti-lock Braking System (ABS)
SP3205	Write EL ABS configuration word	Wheel Anti-lock Braking System (ABS)
SP3206	Write ELETCS ABS without TPMS configuration word	Wheel Anti-lock Braking System (ABS)
SP3207	Write ELETCS ABS+TPMS configuration word	Wheel Anti-lock Braking System (ABS)
SP3208	Erase and write configuration word	Wheel Anti-lock Braking System (ABS)
SP3209	ECU reset	Wheel Anti-lock Braking System (ABS)
SP3210	Steering wheel zero point calibration	Power Steering (Yubei) (EPS)
SP3211	Angle zero calibration	Power Steering (CEPS)
SP3212	Write EL without remote control driving configuration	Electronic Parking System (Sark) (EPB)
SP3213	Write EL with remote control driving configuration	Electronic Parking System (Sark) (EPB)
SP3214	Configuration wipe	Electronic Parking System (Sark) (EPB)
SP3215	ECU unlock	Airbag (third generation) (SRS)
SP3216	ECU unlock	Airbag (SRS)
SP3217	VIN writing and airbag decryption	Airbag (SRS)
SP3218	Left front wheel matching	Integrated body controller (BCM)
SP3219	Right front wheel matching	Integrated body controller (BCM)
SP3220	Left rear wheel matching	Integrated body controller (BCM)
SP3221	Right rear wheel matching	Integrated body controller (BCM)
SP3222	Left front wheel matching	Integrated body controller (BCM)
SP3223	Right front wheel matching	Integrated body controller (BCM)

SP3224	Left rear wheel matching	Integrated body controller (BCM)
SP3225	Right rear wheel matching	Integrated body controller (BCM)
SP3226	The first step-read the working hours of the original ECU mainland pump	Main Controller (ACU)
SP3227	The second step-write the working time read in the first step	Main Controller (ACU)
SP3228	Clear the working hours of Continental pumps	Main Controller (ACU)
SP3229	VIN self-learning	Main Controller (ACU)
SP3230	Factory calibration of battery pack	Battery Management System (BMS)
SP3231	Battery pack actual calibration	Battery Management System (BMS)
SP3232	One-button battery heating active test	Battery Management System_Water Cooling (BMS)
SP3233	Factory calibration of battery pack	Battery Management System_Water Cooling (BMS)
SP3234	Battery pack actual calibration	Battery Management System_Water Cooling (BMS)
SP3235	Factory calibration of battery pack	Battery Management System_South American Version (BMS)
SP3236	Battery pack actual calibration	Battery Management System_South American Version (BMS)
SP3237	One-button battery heating active test	Battery Management System_400 (BMS400)
SP3238	One-button battery heating active test off	Battery Management System_400 (BMS400)
SP3239	Factory calibration of battery pack	Battery Management System_400 (BMS400)

SP3240	Battery pack actual calibration	Battery Management System_400 (BMS400)
SP3241	Tilt calibration	VTOG_DSP2(VTOG_DSP2)
SP3242	Downline calibration of inclination	VTOG_DSP2_short version (VTOG_DSP2_short version)
SP3243	Downline calibration of inclination	VTOG_DSP2_South American Version (VTOG_DSP2_NA)
SP3244	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP3245	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP3246	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP3247	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP3248	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP3249	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP3250	Read the current zero point of the torque sensor	Power Steering (EPS)
SP3251	Set the current torque sensor sampling value to zero	Power Steering (EPS)
SP3252	Read the current zero point of the steering wheel angle sensor	Power Steering (EPS)
SP3253	Set the current steering wheel angle sensor sampling value to zero	Power Steering (EPS)
SP3254	Gradient sensor calibration	Electronic Parking System (Sark) (EPB)
SP3255	ECU unlock	Airbag (SRS)
SP3256	Warning light test	Airbag (SRS)

SP3257	Left front wheel matching	Tire Pressure Monitoring Module (TPMS)
SP3258	Right front wheel matching	Tire Pressure Monitoring Module (TPMS)
SP3259	Left rear wheel matching	Tire Pressure Monitoring Module (TPMS)
SP3260	Right rear wheel matching	Tire Pressure Monitoring Module (TPMS)
SP3261	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3262	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3263	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3264	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3265	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3266	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3267	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3268	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3269	Vacuum pump working time is cleared	Vehicle Controller (VCU)
SP3270	Downline calibration of inclination	Vehicle Controller (VCU)
SP3271	VIN self-learning	Vehicle Controller (VCU)
SP3272	One-button battery heating active test	Battery Management System_300 (BMS300)
SP3273	One-button battery heating active test off	Battery Management System_300 (BMS300)
SP3274	Forced balance active test	Battery Management System_300 (BMS300)
SP3275	Force balanced data flow	Battery Management System_300 (BMS300)
SP3276	Cycle query of forced balance progress active test results	Battery Management System_300 (BMS300)
SP3277	Force balance active test off	Battery Management System_300 (BMS300)

SP3278	Factory calibration of battery pack	Battery Management System_300 (BMS300)
SP3279	Battery pack actual calibration	Battery Management System_300 (BMS300)
SP3280	One-button battery heating active test	Battery Management System_400 (BMS400)
SP3281	One-button battery heating active test off	Battery Management System_400 (BMS400)
SP3282	Forced balance active test	Battery Management System_400 (BMS400)
SP3283	Force balanced data flow	Battery Management System_400 (BMS400)
SP3284	Cycle query of forced balance progress active test results	Battery Management System_400 (BMS400)
SP3285	Force balance active test off	Battery Management System_400 (BMS400)
SP3286	Factory calibration of battery pack	Battery Management System_400 (BMS400)
SP3287	Battery pack actual calibration	Battery Management System_400 (BMS400)
SP3288	Motor zero calibration	Front Drive Motor Controller (FMCU)
SP3289	Inertial sensor calibration	BYD Security Control (BSC)
SP3290	Rotation sensor calibration	BYD Security Control (BSC)
SP3291	Brake depth sensor calibration	BYD Security Control (BSC)
SP3292	Standby mode exhaust	BYD Security Control (BSC)
SP3293	Exhaust stroke simulator	BYD Security Control (BSC)
SP3294	Electromagnetic threshold exhaust	BYD Security Control (BSC)
SP3295	ECU reset	BYD Security Control (BSC)
SP3296	Stage 1: Exhaust the left rear wheel	Wheel Anti-lock Braking System (ABS)

SP3297	Stage 2: Exhaust the front left wheel	Wheel Anti-lock Braking System (ABS)
SP3298	Stage 3: Exhaust the right front wheel	Wheel Anti-lock Braking System (ABS)
SP3299	Stage 4: Exhaust the right rear wheel	Wheel Anti-lock Braking System (ABS)
SP3300	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP3301	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP3302	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP3303	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP3304	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP3305	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP3306	ECU reset	Electronic Body Stability System (ESP)
SP3307	Erase car configuration	Electronic Body Stability System (ESP)
SP3308	Write rental version/online appointment version	Electronic Body Stability System (ESP)
SP3309	Steering wheel zero point calibration	Power Steering (EPS)
SP3310	Slope calibration	Electronic Parking System (Sark) (EPB)
SP3311	ECU unlock	Airbag (third generation) (SRS III)
SP3312	Warning light test	Airbag (third generation) (SRS_III)
SP3313	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3314	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3315	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3316	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3317	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)

SP3318	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3319	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3320	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3321	Battery capacity calibration	Battery Management System (BMS)
SP3322	The first step-read the working hours of the original ECU mainland pump	Main Controller (ACU)
SP3323	The second step-write the working time read in the first step	Main Controller (ACU)
SP3324	Clear the working hours of Continental pumps	Main Controller (ACU)
SP3325	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP3326	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP3327	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP3328	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP3329	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP3330	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP3331	ECU unlock	Airbag (SRS)
SP3332	ECU unlock	Rear collision ECU (RCSM)
SP3333	The first step-read the working hours of the original ECU mainland pump	Main Controller (ACU)
SP3334	The second step-write the working time read in the first step	Main Controller (ACU)

SP3335	Clear the working hours of Continental pumps	Main Controller (ACU)
SP3336	ECU unlock	Airbag (SRS)
SP3337	The first step-read the working hours of the original ECU mainland pump	Main Controller (ACU)
SP3338	The second step-write the working time read in the first step	Main Controller (ACU)
SP3339	Clear the working hours of Continental pumps	Main Controller (ACU)
SP3340	ECU unlock	Airbag (SRS)
SP3341	Battery capacity calibration	e6G Battery Management System (BMS)
SP3342	Battery capacity calibration	e6H Battery Management System (BMS)
SP3343	The first step-read the working hours of the original ECU mainland pump	Main Controller (ACU)
SP3344	The second step-write the working time read in the first step	Main Controller (ACU)
SP3345	Clear the working hours of Continental pumps	Main Controller (ACU)
SP3346	VIN self-learning	Main Controller (ACU)
SP3347	Zero calibration	VTOG DSP2(VTOG DSP2)
SP3348	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP3349	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP3350	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)

SP3351	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP3352	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP3353	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP3354	Gradient sensor calibration	Electronic Parking System (Sark) (EPB)
SP3355	ECU unlock	Airbag (SRS)
SP3356	Warning light test	Airbag (SRS)
SP3357	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3358	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3359	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3360	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3361	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3362	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3363	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3364	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3365	Left front wheel matching	Tire Pressure Management Module (TPMS)
SP3366	Right front wheel matching	Tire Pressure Management Module (TPMS)
SP3367	Left rear wheel matching	Tire Pressure Management Module (TPMS)
SP3368	Right rear wheel matching	Tire Pressure Management Module (TPMS)
SP3369	ECU unlock	Rear collision ECU (RCSM)
SP3370	Warning light test	Rear collision ECU (RCSM)
SP3371	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP3372	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP3373	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)

SP3374	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP3375	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP3376	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP3377	The first step-read the working hours of the original ECU mainland pump	Main Controller (ACU)
SP3378	The second step-write the working time read in the first step	Main Controller (ACU)
SP3379	Clear the working hours of Continental pumps	Main Controller (ACU)
SP3380	Zero calibration	VTOG DSP2(VTOG DSP2)
SP3381	ECU unlock	Airbag (SRS)
SP3382	Warning light test	Airbag (SRS)
SP3383	ECU unlock	Rear collision ECU (RCSM)
SP3384	Warning light test	Rear collision ECU (RCSM)
SP3385	One-button battery heating active test	Battery Management System (BMS)
SP3386	One-button battery heating active test off	Battery Management System (BMS)
SP3387	Factory calibration of battery pack	Battery Management System (BMS)
SP3388	Battery pack actual calibration	Battery Management System (BMS)
SP3389	The first step-read the working hours of the original ECU mainland pump	Main Controller (ACU)
SP3390	The second step-write the working time read in the first step	Main Controller (ACU)

SP3391	Clear the working hours of Continental pumps	Main Controller (ACU)
SP3392	VIN self-learning	Main Controller (ACU)
SP3393	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP3394	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP3395	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP3396	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP3397	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP3398	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP3399	ECU reset	Electronic Body Stability System (ESP)
SP3400	Slope calibration	Electronic Parking System (Sark) (EPB)
SP3401	ECU unlock	Airbag (third generation) (SRS III)
SP3402	Warning light test	Airbag (third generation) (SRS_III)
SP3403	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3404	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3405	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3406	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3407	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3408	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3409	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3410	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3411	ECU unlock	Rear collision ECU (RSRS)
SP3412	Warning light test	Rear collision ECU (RSRS)
SP3413	Tilt sensor calibration	Left VTOG motor controller (L_VTOG)

SP3414	Tilt sensor calibration	Right VTOG motor controller (R_VTOG)
SP3415	VIN calibration	Power Battery Manager (BMS)
SP3416	Battery manager ID calibration	Power Battery Manager (BMS)
SP3417	Battery box ID calibration	Power Battery Manager (BMS)
SP3418	Battery manager status	Power Battery Manager (BMS)
SP3419	Tilt sensor reset	Left Motor Controller (LMC)
SP3420	Tilt sensor calibration	Left Motor Controller (LMC)
SP3421	Tilt sensor reset	Right Motor Controller (RMC)
SP3422	Tilt sensor calibration	Right Motor Controller (RMC)
SP3423	VIN self-learning	Engine Controller_1.5TI (ECM)
SP3424	VIN self-learning	Engine Controller_1.5TID (ECM)
SP3425	Trigger GPF regeneration calibration	Engine Controller_1.5TID (ECM)
SP3426	VIN self-learning	Engine Controller_ME1788 (ECM)
SP3427	VIN self-learning	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3428	Replace GPF calibration	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3429	Query and replace the GPF calibration result	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3430	Replace GPF differential pressure sensor calibration	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3431	Replace GPF differential pressure sensor query	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3432	Trigger GPF regeneration calibration	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3433	The first step is to record the ECU information before replacement	Engine Controller_[1.5TID] National Six (UMC) (ECM)

SP3434	The second step is to write the first step record information to the new ECU	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3435	Model ECU calibration results (after executing the first and second steps, do not exit the current interface, otherwise the query will be invalid)	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3436	Software coding calibration HADF	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3437	Software coding calibration HADFC	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3438	VIN self-learning	Engine Controller_[1.5TI] National Six (UMC) (ECM)
SP3439	Replace GPF calibration	Engine Controller_[1.5TI] National Six (UMC) (ECM)
SP3440	Query and replace the GPF calibration result	Engine Controller_[1.5TI] National Six (UMC) (ECM)
SP3441	Replace GPF differential pressure sensor calibration	Engine Controller_[1.5TI] National Six (UMC) (ECM)
SP3442	Replace GPF differential pressure sensor query	Engine Controller_[1.5TI] National Six (UMC) (ECM)
SP3443	Trigger GPF regeneration calibration	Engine Controller_[1.5TI] National Six (UMC) (ECM)
SP3444	The first step is to record the ECU information before replacement	Engine Controller_[1.5TI] National Six (UMC) (ECM)

SP3445	The second step is to write the first step record information to the new ECU	Engine Controller_[1.5TI] National Six (UMC) (ECM)
SP3446	Model ECU calibration results (after executing the first and second steps, do not exit the current interface, otherwise the query will be invalid)	Engine Controller_[1.5TI] National Six (UMC) (ECM)
SP3447	Software coding calibration HADF	Engine Controller_[1.5TI] National Six (UMC) (ECM)
SP3448	Software coding calibration HADFC	Engine Controller_[1.5TI] National Six (UMC) (ECM)
SP3449	VIN self-learning	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3450	Enter GPF parking regeneration mode	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3451	Exit the activated GPF active regeneration calibration	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3452	Clear the accumulated carbon amount to zero	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3453	Clear the self-learning value of the GPF differential pressure sensor	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3454	Reset the amount of accumulated ash to zero	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3455	The first step is to use the old ECU	Engine Controller_[1.5TID] National VI (BYD) (ECM)

SP3456	The second step is to replace the new ECU and start the calibration	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3457	The third step is to query the calibration results	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3458	VIN self-learning	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3459	Vacuum pump working time is cleared	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3460	Enter GPF parking regeneration mode	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3461	Exit the activated GPF active regeneration calibration	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3462	Clear the accumulated carbon amount to zero	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3463	Clear the self-learning value of the GPF differential pressure sensor	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3464	Reset the amount of accumulated ash to zero	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3465	The first step is to use the old ECU	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3466	The second step is to replace the new ECU and start the calibration	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3467	The third step is to query the calibration results	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3468	One-key adaptive	Dual clutch transmission (TCU)
SP3469	Gear action adaptive	Dual clutch transmission (TCU)

SP3470	Oil pump adaptive	Dual clutch transmission (TCU)
SP3471	Main pressure valve adaptive	Dual clutch transmission (TCU)
SP3472	Safety valve 1 adaptive	Dual clutch transmission (TCU)
SP3473	Safety valve 2 adaptive	Dual clutch transmission (TCU)
SP3474	Clutch valve 1 adaptive	Dual clutch transmission (TCU)
SP3475	Clutch valve 2 adaptive	Dual clutch transmission (TCU)
SP3476	Clutch 1 adaptive	Dual clutch transmission (TCU)
SP3477	Clutch 2 adaptive	Dual clutch transmission (TCU)
SP3478	Slope sensor adaptive	Dual clutch transmission (TCU)
SP3479	Electronic oil pump adaptive	Dual clutch transmission (TCU)
SP3480	One-key adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3481	Gear action adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3482	Oil pump adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3483	Main pressure valve adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3484	Safety valve 1 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3485	Safety valve 2 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3486	Clutch valve 1 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3487	Clutch valve 2 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3488	Clutch 1 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3489	Clutch 2 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3490	Slope sensor adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3491	Electronic oil pump adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3492	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP3493	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)

SP3494	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP3495	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP3496	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP3497	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP3498	ECU reset	Electronic Body Stability System (ESP)
SP3499	Angle zero calibration	Power Steering (TRW) (EPS)
SP3500	Torque zero calibration	Power Steering (TRW) (EPS)
SP3501	Write elite configuration	Power Steering (TRW) (EPS)
SP3502	Write honorable configuration	Power Steering (TRW) (EPS)
SP3503	Write luxury configuration	Power Steering (TRW) (EPS)
SP3504	Write premium configuration	Power Steering (TRW) (EPS)
SP3505	Write comfort configuration	Power Steering (TRW) (EPS)
SP3506	Write luxury configuration	Power Steering (TRW) (EPS)
SP3507	Write HA2FE comfort configuration	Power Steering (TRW) (EPS)
SP3508	Write HA2FF premium configuration	Power Steering (TRW) (EPS)
SP3509	Write HA2FF luxury configuration	Power Steering (TRW) (EPS)
SP3510	Write non-ACC configuration	Electronic Parking System (Universal) (EPB)
SP3511	Write ACC configuration	Electronic Parking System (Universal) (EPB)
SP3512	Write DCT configuration	Electronic Parking System (Universal) (EPB)
SP3513	Write CVT configuration	Electronic Parking System (Universal) (EPB)
SP3514	Write honor type, honor type configuration	Adaptive Cruise System (MRR)
SP3515	Initial dynamic calibration	Multi-Function Video Controller (MPC)

SP3516	Write honor type, honor type configuration	Multi-Function Video Controller (MPC)
SP3517	Write 2019 honorable configuration	Multi-Function Video Controller (MPC)
SP3518	Static calibration	Multi-Function Video Controller (MPC)
SP3519	ECU unlock	Airbag (SRS)
SP3520	Warning light test	Airbag (SRS)
SP3521	VIN self-learning	Integrated body controller A (BCM)
SP3522	VIN write	Integrated body controller A (BCM)
SP3523	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3524	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3525	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3526	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3527	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3528	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3529	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3530	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3531	Left front wheel matching	Left body domain controller A_L1 (BYD) (L1_BCM)
SP3532	Right front wheel matching	Left body domain controller A_L1 (BYD) (L1_BCM)
SP3533	Left rear wheel matching	Left body domain controller A_L1 (BYD) (L1_BCM)
SP3534	Right rear wheel matching	Left body domain controller A_L1 (BYD) (L1_BCM)
SP3535	Send self-learning information	Left body domain controller A_L1 (BYD) (L1_BCM)
SP3536	VIN self-learning	Engine Controller (National VI) (ECM_473MT_G6)
SP3537	Enter GPF parking regeneration mode	Engine Controller (National VI) (ECM_473MT_G6)

SP3538	Exit the activated GPF active regeneration calibration	Engine Controller (National VI) (ECM_473MT_G6)
SP3539	Clear the accumulated carbon amount to zero	Engine Controller (National VI) (ECM_473MT_G6)
SP3540	Clear the self-learning value of the GPF differential pressure sensor	Engine Controller (National VI) (ECM_473MT_G6)
SP3541	Reset the amount of accumulated ash to zero	Engine Controller (National VI) (ECM_473MT_G6)
SP3542	The first step is to use the old ECU	Engine Controller (National VI) (ECM_473MT_G6)
SP3543	The second step is to replace the new ECU and start the calibration	Engine Controller (National VI) (ECM_473MT_G6)
SP3544	The third step is to query the calibration results	Engine Controller (National VI) (ECM_473MT_G6)
SP3545	VIN self-learning	Engine controller (ECM_473MT)
SP3546	Check condition	Transmission system (Wanliyang) (TCU)
SP3547	Clear system fault data	Transmission system (Wanliyang) (TCU)
SP3548	Clear learning value	Transmission system (Wanliyang) (TCU)
SP3549	P gear sensor self-learning	Transmission system (Wanliyang) (TCU)
SP3550	R gear gear sensor self-learning	Transmission system (Wanliyang) (TCU)
SP3551	N gear sensor self-learning	Transmission system (Wanliyang) (TCU)
SP3552	D gear sensor self-learning	Transmission system (Wanliyang) (TCU)
SP3553	L file gear sensor self-learning	Transmission system (Wanliyang) (TCU)
SP3554	Yaw rate sensor calibration	Electronic Body Stability System (Bosch) (ESP)

SP3555	Rotation sensor calibration	Electronic Body Stability System (Bosch) (ESP)
SP3556	Phase 1: Exhaust the front left wheel	Electronic Body Stability System (Bosch) (ESP)
SP3557	Stage 2: Exhaust the right front wheel	Electronic Body Stability System (Bosch) (ESP)
SP3558	Stage 3: Exhaust the left rear wheel	Electronic Body Stability System (Bosch) (ESP)
SP3559	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (Bosch) (ESP)
SP3560	ECU reset	Electronic Body Stability System (Bosch) (ESP)
SP3561	Angle zero calibration	Electric Power Steering (Yubei) (EPS)
SP3562	Left front wheel matching	Tire Pressure Monitoring Module (Sensata) (TPMS)
SP3563	Right front wheel matching	Tire Pressure Monitoring Module (Sensata) (TPMS)
SP3564	Left rear wheel matching	Tire Pressure Monitoring Module (Sensata) (TPMS)
SP3565	Right rear wheel matching	Tire Pressure Monitoring Module (Sensata) (TPMS)
SP3566	Write the ID of the front left tire pressure monitoring module	Tire Pressure Monitoring Module (Baolong) (TPMS)
SP3567	Write the ID of the front right tire pressure monitoring module	Tire Pressure Monitoring Module (Baolong) (TPMS)
SP3568	Write the ID of the left rear tire pressure monitoring module	Tire Pressure Monitoring Module (Baolong) (TPMS)
SP3569	Write the ID of the rear right tire pressure monitoring module	Tire Pressure Monitoring Module (Baolong) (TPMS)
SP3570	Left front wheel matching	Tire Pressure Monitoring Module (Baolong) (TPMS)
SP3571	Right front wheel matching	Tire Pressure Monitoring Module (Baolong) (TPMS)

SP3572	Left rear wheel matching	Tire Pressure Monitoring Module (Baolong) (TPMS)
SP3573	Right rear wheel matching	Tire Pressure Monitoring Module (Baolong) (TPMS)
SP3574	Phase 1: Exhaust the front left wheel	Wheel Anti-lock Braking System (Bosch) (ABS)
SP3575	Stage 2: Exhaust the right front wheel	Wheel Anti-lock Braking System (Bosch) (ABS)
SP3576	Stage 3: Exhaust the left rear wheel	Wheel Anti-lock Braking System (Bosch) (ABS)
SP3577	Stage 4: Exhaust the right rear wheel	Wheel Anti-lock Braking System (Bosch) (ABS)
SP3578	Tire pressure reset	Wheel Anti-lock Braking System (Bosch) (ABS)
SP3579	ECU unlock	Airbag (SRS)
SP3580	VIN self-learning	Integrated body controller A (BCM)
SP3581	VIN write	Integrated body controller A (BCM)
SP3582	VIN self-learning	Engine Controller_2.0TID (ECM)
SP3583	VIN self-learning	Engine Controller_ECM (ECM)
SP3584	Software coding calibration	Engine Controller_ECM (ECM)
SP3585	Replace GPF calibration	Engine Controller_ECM (ECM)
SP3586	Query and replace the GPF calibration result	Engine Controller_ECM (ECM)
SP3587	Replace GPF differential pressure sensor calibration	Engine Controller_ECM (ECM)
SP3588	Replace GPF differential pressure sensor query	Engine Controller_ECM (ECM)
SP3589	Trigger GPF regeneration calibration	Engine Controller_ECM (ECM)
SP3590	The first step is to record the ECU information before replacement	Engine Controller_ECM (ECM)

SP3591	The second step is to write the first step record information to the new ECU	Engine Controller_ECM (ECM)
SP3592	Model ECU calibration results (after executing the first and second steps, do not exit the current interface, otherwise the query will be invalid)	Engine Controller_ECM (ECM)
SP3593	One-key adaptive	Wet dual clutch transmission (TCU_BYD)
SP3594	Gear action adaptive	Wet dual clutch transmission (TCU_BYD)
SP3595	Oil pump adaptive	Wet dual clutch transmission (TCU_BYD)
SP3596	Main pressure valve adaptive	Wet dual clutch transmission (TCU_BYD)
SP3597	Safety valve 1 adaptive	Wet dual clutch transmission (TCU_BYD)
SP3598	Safety valve 2 adaptive	Wet dual clutch transmission (TCU_BYD)
SP3599	Clutch 1 valve adaptive	Wet dual clutch transmission (TCU_BYD)
SP3600	Clutch 2 valve adaptive	Wet dual clutch transmission (TCU_BYD)
SP3601	Clutch 1 adaptive	Wet dual clutch transmission (TCU_BYD)
SP3602	Clutch 2 adaptive	Wet dual clutch transmission (TCU_BYD)
SP3603	Slope sensor adaptive	Wet dual clutch transmission (TCU_BYD)
SP3604	Electronic oil pump adaptive	Wet dual clutch transmission (TCU_BYD)
SP3605	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP3606	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP3607	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)

SP3608	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP3609	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP3610	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP3611	ECU reset	Electronic Body Stability System (ESP)
SP3612	Angle zero calibration	Power Steering (EPS)
SP3613	Write flagship configuration	Power Steering (EPS)
SP3614	Write honorable configuration	Power Steering (EPS)
SP3615	Write premium configuration	Power Steering (EPS)
SP3616	Write luxury configuration	Power Steering (EPS)
SP3617	Write comfort configuration	Power Steering (EPS)
SP3618	Write STF with LKA configuration	Power Steering (EPS)
SP3619	Write flagship type, honor type	Blind Spot Detection (BSD)
SP3620	Write noble type, luxury type, comfortable type	Blind Spot Detection (BSD)
SP3621	Configuration wipe	Blind Spot Detection (BSD)
SP3622	Write flagship, honorable configuration	Adaptive Cruise System (MRR)
SP3623	Write noble, luxurious, and comfortable configurations	Adaptive Cruise System (MRR)
SP3624	Erase car configuration	Adaptive Cruise System (MRR)
SP3625	Initial dynamic calibration	Multi-Function Video Controller (MPC)
SP3626	Write flagship, honorable configuration	Multi-Function Video Controller (MPC)
SP3627	Write noble, luxurious, and comfortable configurations	Multi-Function Video Controller (MPC)

SP3628	Write flagship (LKS) configuration	Multi-Function Video Controller (MPC)
SP3629	Erase car configuration	Multi-Function Video Controller (MPC)
SP3630	Static calibration	Multi-Function Video Controller (MPC)
SP3631	ECU unlock	Airbag Three Generation (SRS III)
SP3632	Warning light test	Airbag_Three Generation (SRS_III)
SP3633	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3634	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3635	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3636	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3637	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3638	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3639	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3640	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3641	Main driver seat calibration	Main driver's seat (SECU_D)
SP3642	Write honor type Y	Blind spot monitoring (HELLA/BYD 24G) (BSD HELLA)
SP3643	Configuration wipe	Blind spot monitoring (HELLA/BYD 24G) (BSD HELLA)
SP3644	VIN self-learning	Engine controller_United Electric Power Six (UCM) (ECM)
SP3645	Software coding calibration	Engine controller_United Electric Power Six (UCM) (ECM)
SP3646	Replace GPF calibration	Engine controller_United Electric Power Six (UCM) (ECM)
SP3647	Query and replace the GPF calibration result	Engine controller_United Electric Power Six (UCM) (ECM)
SP3648	Replace GPF differential pressure sensor calibration	Engine controller_United Electric Power Six (UCM) (ECM)
SP3649	Replace GPF differential pressure sensor query	Engine controller_United Electric Power Six (UCM) (ECM)

SP3650	Enter GPF parking regeneration mode	Engine controller_United Electric Power Six (UCM) (ECM)
SP3651	Exit the activated GPF active regeneration calibration	Engine controller_United Electric Power Six (UCM) (ECM)
SP3652	Clear the accumulated carbon amount to zero	Engine controller_United Electric Power Six (UCM) (ECM)
SP3653	Clear the self-learning value of the GPF differential pressure sensor	Engine controller_United Electric Power Six (UCM) (ECM)
SP3654	Reset the amount of accumulated ash to zero	Engine controller_United Electric Power Six (UCM) (ECM)
SP3655	The first step is to use the old ECU	Engine controller_United Electric Power Six (UCM) (ECM)
SP3656	The second step is to replace the new ECU and start the calibration	Engine controller_United Electric Power Six (UCM) (ECM)
SP3657	The third step is to query the calibration results	Engine controller_United Electric Power Six (UCM) (ECM)
SP3658	The first step is to record the ECU information before replacement	Engine controller_United Electric Power Six (UCM) (ECM)
SP3659	The second step is to write the first step record information to the new ECU	Engine controller_United Electric Power Six (UCM) (ECM)

SP3660	Model ECU calibration results (after executing the first and second steps, do not exit the current interface, otherwise the query will be invalid)	Engine controller_United Electric Power Six (UCM) (ECM)
SP3661	Angle zero calibration	Power steering (TRW) (EPS_TRW)
SP3662	Write luxury Y (STFB), noble Y (STFB) configuration	Power steering (TRW) (EPS_TRW)
SP3663	Write honorable Y (STFB) configuration	Power steering (TRW) (EPS_TRW)
SP3664	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (Bosch) (ESP_BOSCH)
SP3665	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (Bosch) (ESP_BOSCH)
SP3666	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (Bosch) (ESP_BOSCH)
SP3667	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (Bosch) (ESP_BOSCH)
SP3668	Yaw rate sensor calibration	Electronic Body Stability System (Bosch) (ESP_BOSCH)
SP3669	Rotation sensor calibration	Electronic Body Stability System (Bosch) (ESP_BOSCH)
SP3670	Driver Calibration Service Calibration (SDA)	Adaptive Cruise System (Bosch) (MRR_BOSCH)
SP3671	After-sales calibration	Adaptive Cruise System (Bosch) (MRR_BOSCH)
SP3672	Write STFB honorable type Y	Adaptive Cruise System (Bosch) (MRR_BOSCH)
SP3673	Erase car configuration	Adaptive Cruise System (Bosch) (MRR_BOSCH)
SP3674	Initial dynamic calibration	Multifunctional Video Controller (Bosch) (MPC_BOSCH)

SP3675	Turn off dynamic calibration	Multifunctional Video Controller (Bosch) (MPC BOSCH)
SP3676	Write STFB honorable type Y	Multifunctional Video Controller (Bosch) (MPC BOSCH)
SP3677	Erase car configuration	Multifunctional Video Controller (Bosch) (MPC BOSCH)
SP3678	Static calibration	Multifunctional Video Controller (Bosch) (MPC BOSCH)
SP3679	Left front wheel matching	Tire Pressure Management Module (BaoLong) (TPMS BaoLong)
SP3680	Right front wheel matching	Tire Pressure Management Module (BaoLong) (TPMS BaoLong)
SP3681	Left rear wheel matching	Tire Pressure Management Module (BaoLong) (TPMS BaoLong)
SP3682	Right rear wheel matching	Tire Pressure Management Module (BaoLong) (TPMS BaoLong)
SP3683	Left front wheel matching	Tire pressure management module (Sensata) (TPMS Sensata)
SP3684	Right front wheel matching	Tire pressure management module (Sensata) (TPMS Sensata)
SP3685	Left rear wheel matching	Tire pressure management module (Sensata) (TPMS Sensata)
SP3686	Right rear wheel matching	Tire pressure management module (Sensata) (TPMS Sensata)
SP3687	Left front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP3688	Right front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP3689	Left rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP3690	Right rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP3691	Left front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP3692	Right front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP3693	Left rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP3694	Right rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP3695	ECU unlock	Airbag (new) (BYD) (SRS)
SP3696	Warning light test	Airbag (new) (BYD) (SRS)
SP3697	VIN writing and airbag decryption	Airbag (new) (BYD) (SRS)
SP3698	Main driver seat calibration	Main driving seat (BYD) (SECU)
SP3699	VIN self-learning	Engine Controller_1.5TI (ECM)

SP3700	VIN self-learning	Engine Controller_1.5TID (ECM)
SP3701	VIN self-learning	Engine Controller_ UMC ME1788 (ECM)
SP3702	Software coding calibration	Engine Controller_ UMC ME1788 (ECM)
SP3703	VIN self-learning	1.5TID EFI_ UMC Six (ECM)
SP3704	Replace GPF calibration	1.5TID EFI_ UMC Six (ECM)
SP3705	Query and replace the GPF calibration result	1.5TID EFI_ UMC Six (ECM)
SP3706	Replace GPF differential pressure sensor calibration	1.5TID EFI_ UMC Six (ECM)
SP3707	Replace GPF differential pressure sensor query	1.5TID EFI_ UMC Six (ECM)
SP3708	Trigger GPF regeneration calibration	1.5TID EFI_ UMC Six (ECM)
SP3709	The first step is to record the ECU information before replacement	1.5TID EFI_ UMC Six (ECM)
SP3710	The second step is to write the first step record information to the new ECU	1.5TID EFI_ UMC Six (ECM)
SP3711	Model ECU calibration results (after executing the first and second steps, do not exit the current interface, otherwise the query will be invalid)	1.5TID EFI_ UMC Six (ECM)
SP3712	Software coding calibration	1.5TID EFI_ UMC Six (ECM)

SP3713	VIN self-learning	1.5TI EFI_ UMC National Six (ECM)
SP3714	Replace GPF calibration	1.5TI EFI_ UMC National Six (ECM)
SP3715	Query and replace the GPF calibration result	1.5TI EFI_ UMC National Six (ECM)
SP3716	Replace GPF differential pressure sensor calibration	1.5TI EFI_ UMC National Six (ECM)
SP3717	Replace GPF differential pressure sensor query	1.5TI EFI_ UMC National Six (ECM)
SP3718	Trigger GPF regeneration calibration	1.5TI EFI_ UMC National Six (ECM)
SP3719	The first step is to record the ECU information before replacement	1.5TI EFI_ UMC National Six (ECM)
SP3720	The second step is to write the first step record information to the new ECU	1.5TI EFI_ UMC National Six (ECM)
SP3721	Model ECU calibration results (after executing the first and second steps, do not exit the current interface, otherwise the query will be invalid)	1.5TI EFI_ UMC National Six (ECM)
SP3722	Software coding calibration	1.5TI EFI_ UMC National Six (ECM)
SP3723	One-key adaptive	Dual clutch transmission W(TCU)
SP3724	Gear action adaptive	Dual clutch transmission_W(TCU)
SP3725	Oil pump adaptive	Dual clutch transmission_W(TCU)
SP3726	Main pressure valve adaptive	Dual clutch transmission_W(TCU)

SP3727	Safety valve 1 adaptive	Dual clutch transmission_W(TCU)
SP3728	Safety valve 2 adaptive	Dual clutch transmission_W(TCU)
SP3729	Clutch valve 1 adaptive	Dual clutch transmission_W(TCU)
SP3730	Clutch valve 2 adaptive	Dual clutch transmission_W(TCU)
SP3731	Clutch 1 adaptive	Dual clutch transmission_W(TCU)
SP3732	Clutch 2 adaptive	Dual clutch transmission_W(TCU)
SP3733	Slope sensor adaptive	Dual clutch transmission_W(TCU)
SP3734	Electronic oil pump adaptive	Dual clutch transmission_W(TCU)
SP3735	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP3736	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP3737	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP3738	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP3739	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP3740	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP3741	ECU reset	Electronic Body Stability System (ESP)
SP3742	Tire pressure reset	Electronic Body Stability System (ESP)
SP3743	Angle zero calibration	Power Steering (TRW) (EPS)
SP3744	Torque zero calibration	Power Steering (TRW) (EPS)
SP3745	Steering wheel zero point calibration	Power Steering (TRW) (EPS)
SP3746	Write luxury configuration	Power Steering (TRW) (EPS)
SP3747	Write elite configuration	Power Steering (TRW) (EPS)
SP3748	Write exclusive configuration	Power Steering (TRW) (EPS)
SP3749	Write honorable configuration	Power Steering (TRW) (EPS)

SP3750	Write PDC configuration	Power Steering (TRW) (EPS)
SP3751	Write non-ACC configuration	Electronic Parking System (Sark) (EPB)
SP3752	Write ACC configuration	Electronic Parking System (Sark) (EPB)
SP3753	ECU unlock	Airbag (third generation) (SRS)
SP3754	Warning light test	Airbag (third generation) (SRS)
SP3755	Write the ID of the front left tire pressure monitoring module	Integrated body controller B2 (IBCMB2)
SP3756	Write the ID of the front right tire pressure monitoring module	Integrated body controller B2 (IBCMB2)
SP3757	Write the ID of the left rear tire pressure monitoring module	Integrated body controller B2 (IBCMB2)
SP3758	Write the ID of the rear right tire pressure monitoring module	Integrated body controller B2 (IBCMB2)
SP3759	Left front wheel matching	Integrated body controller B2 (IBCMB2)
SP3760	Right front wheel matching	Integrated body controller B2 (IBCMB2)
SP3761	Left rear wheel matching	Integrated body controller B2 (IBCMB2)
SP3762	Right rear wheel matching	Integrated body controller B2 (IBCMB2)
SP3763	Left front wheel matching	Integrated body controller B2 (IBCMB2)
SP3764	Right front wheel matching	Integrated body controller B2 (IBCMB2)
SP3765	Left rear wheel matching	Integrated body controller B2 (IBCMB2)
SP3766	Right rear wheel matching	Integrated body controller B2 (IBCMB2)
SP3767	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3768	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)

SP3769	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3770	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3771	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3772	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3773	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3774	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3775	Initial dynamic calibration	Multi-Function Video Controller (MPC)
SP3776	Turn off dynamic calibration	Multi-Function Video Controller (MPC)
SP3777	Written into the national five fuel DCT-Elite Y configuration	Multi-Function Video Controller (MPC)
SP3778	Written into the national five fuel DCT-exclusive Y configuration	Multi-Function Video Controller (MPC)
SP3779	Written into the national five fuel DCT-honorable Y configuration	Multi-Function Video Controller (MPC)
SP3780	Write the National VI fuel DCT-Elite Y configuration	Multi-Function Video Controller (MPC)
SP3781	Write the National VI fuel DCT-exclusive Y configuration	Multi-Function Video Controller (MPC)
SP3782	Write the National VI fuel DCT-Honorable Y configuration	Multi-Function Video Controller (MPC)
SP3783	Erase car configuration	Multi-Function Video Controller (MPC)
SP3784	Static calibration	Multi-Function Video Controller (MPC)
SP3785	Erase car configuration	Adaptive Cruise (MRR)

SP3786	Driver Calibration Service Calibration (SDA)	Adaptive Cruise (MRR)
SP3787	After-sales calibration	Adaptive Cruise (MRR)
SP3788	Erase car configuration	Blind Spot Monitoring (BSD)
SP3789	VIN self-learning	1.5TI Electronic Injection (ECM)
SP3790	VIN self-learning	1.5TID Electronic Injection (ECM)
SP3791	VIN self-learning	2.0TID Electronic Injection (ECM)
SP3792	One-key adaptive	Wet dual clutch transmission (TCU)
SP3793	Gear action adaptive	Wet dual clutch transmission (TCU)
SP3794	Oil pump adaptive	Wet dual clutch transmission (TCU)
SP3795	Main pressure valve adaptive	Wet dual clutch transmission (TCU)
SP3796	Safety valve 1 adaptive	Wet dual clutch transmission (TCU)
SP3797	Safety valve 2 adaptive	Wet dual clutch transmission (TCU)
SP3798	Clutch valve 1 adaptive	Wet dual clutch transmission (TCU)
SP3799	Clutch valve 2 adaptive	Wet dual clutch transmission (TCU)
SP3800	Clutch 1 adaptive	Wet dual clutch transmission (TCU)
SP3801	Clutch 2 adaptive	Wet dual clutch transmission (TCU)
SP3802	Slope sensor adaptive	Wet dual clutch transmission (TCU)
SP3803	Electronic oil pump adaptive	Wet dual clutch transmission (TCU)
SP3804	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP3805	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP3806	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP3807	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)

SP3808	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP3809	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP3810	Angle zero calibration	Power Steering (Lianchuang) (EPS)
SP3811	Torque zero calibration	Power Steering (Lianchuang) (EPS)
SP3812	ECU unlock	Airbag (SRS)
SP3813	ECU unlock	Airbag (third generation) (SRS III)
SP3814	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3815	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3816	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3817	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3818	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3819	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3820	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3821	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3822	Left front wheel matching	Tire Pressure Management Module (TPMS)
SP3823	Right front wheel matching	Tire Pressure Management Module (TPMS)
SP3824	Left rear wheel matching	Tire Pressure Management Module (TPMS)
SP3825	Right rear wheel matching	Tire Pressure Management Module (TPMS)
SP3826	Main driver seat calibration	Main driving seat system (SECU_D)
SP3827	VIN self-learning	1.5TI Electronic Injection (ECM)
SP3828	Vacuum pump working time is cleared	1.5TI Electronic Injection (ECM)
SP3829	VIN self-learning	1.5TID Electronic Injection (ECM)
SP3830	Vacuum pump working time is cleared	1.5TID Electronic Injection (ECM)
SP3831	VIN self-learning	2.0TID Electronic Injection (ECM)
SP3832	VIN self-learning	Engine Controller_[1.5TID] National VI (BYD) (ECM)

SP3833	Enter GPF parking regeneration mode	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3834	Exit the activated GPF active regeneration calibration	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3835	Clear the accumulated carbon amount to zero	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3836	Clear the self-learning value of the GPF differential pressure sensor	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3837	Reset the amount of accumulated ash to zero	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3838	The first step is to use the old ECU	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3839	The second step is to replace the new ECU and start the calibration	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3840	The third step is to query the calibration results	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3841	Software coding calibration SA2FE	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3842	Software coding calibration SA2FH	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3843	VIN self-learning	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3844	Vacuum pump working time is cleared	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3845	Enter GPF parking regeneration mode	Engine Controller_[1.5TI] National VI (BYD) (ECM)

SP3846	Exit the activated GPF active regeneration calibration	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3847	Clear the accumulated carbon amount to zero	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3848	Clear the self-learning value of the GPF differential pressure sensor	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3849	Reset the amount of accumulated ash to zero	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3850	The first step is to use the old ECU	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3851	The second step is to replace the new ECU and start the calibration	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3852	The third step is to query the calibration results	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3853	VIN self-learning	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3854	Replace GPF calibration	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3855	Query and replace the GPF calibration result	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3856	Replace GPF differential pressure sensor calibration	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3857	Replace GPF differential pressure sensor query	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3858	Trigger GPF regeneration calibration	Engine Controller_[1.5TID] National Six (UMC) (ECM)

SP3859	The first step is to record the ECU information before replacement	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3860	The second step is to write the first step record information to the new ECU	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3861	Model ECU calibration results (after executing the first and second steps, do not exit the current interface, otherwise the query will be invalid)	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3862	Software coding calibration SA2FE	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3863	Software coding calibration SA2FH	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3864	Software code calibration SAFJ	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3865	One-key adaptive	Wet dual clutch transmission (TCU)
SP3866	Gear action adaptive	Wet dual clutch transmission (TCU)
SP3867	Oil pump adaptive	Wet dual clutch transmission (TCU)
SP3868	Main pressure valve adaptive	Wet dual clutch transmission (TCU)
SP3869	Safety valve 1 adaptive	Wet dual clutch transmission (TCU)
SP3870	Safety valve 2 adaptive	Wet dual clutch transmission (TCU)
SP3871	Clutch valve 1 adaptive	Wet dual clutch transmission (TCU)
SP3872	Clutch valve 2 adaptive	Wet dual clutch transmission (TCU)
SP3873	Clutch 1 adaptive	Wet dual clutch transmission (TCU)
SP3874	Clutch 2 adaptive	Wet dual clutch transmission (TCU)

SP3875	Slope sensor adaptive	Wet dual clutch transmission (TCU)
SP3876	Electronic oil pump adaptive	Wet dual clutch transmission (TCU)
SP3877	One-key adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3878	Gear action adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3879	Oil pump adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3880	Main pressure valve adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3881	Safety valve 1 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3882	Safety valve 2 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3883	Clutch valve 1 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3884	Clutch valve 2 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3885	Clutch 1 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3886	Clutch 2 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3887	Slope sensor adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3888	Electronic oil pump adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3889	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP3890	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP3891	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP3892	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP3893	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP3894	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP3895	Read the current zero point of the torque sensor	Electronic Power Steering (CEPS)

SP3896	Set the current torque sensor sampling value to zero	Electronic Power Steering (CEPS)
SP3897	Read the current zero point of the steering wheel angle sensor	Electronic Power Steering (CEPS)
SP3898	Set the current steering wheel angle sensor sampling value to zero	Electronic Power Steering (CEPS)
SP3899	Angle zero calibration	Power Steering (Lianchuang) (EPS)
SP3900	Torque zero calibration	Power Steering (Lianchuang) (EPS)
SP3901	Angle zero calibration	Power steering (Yubei) (CEPS_YB)
SP3902	BSD static calibration	Main blind spot monitoring (BSD001)
SP3903	BSD dynamic calibration	Main blind spot monitoring (BSD001)
SP3904	BSD static calibration	Auxiliary blind spot monitoring (BSD002)
SP3905	BSD dynamic calibration	Auxiliary blind spot monitoring (BSD002)
SP3906	ECU unlock	Airbag (third generation) (SRS)
SP3907	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3908	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3909	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3910	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP3911	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3912	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3913	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3914	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP3915	Main driver seat calibration	Main driving seat system (SECU_D)
SP3916	VIN self-learning	Engine Controller_[1.5TID] National VI (BYD) (ECM)

SP3917	Vacuum pump working time is cleared	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3918	Engine oil level learning	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3919	Enter GPF parking regeneration mode	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3920	Exit the activated GPF active regeneration calibration	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3921	Clear the accumulated carbon amount to zero	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3922	Clear the self-learning value of the GPF differential pressure sensor	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3923	Reset the amount of accumulated ash to zero	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3924	The first step is to use the old ECU	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3925	The second step is to replace the new ECU and start the calibration	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3926	The third step is to query the calibration results	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP3927	VIN self-learning	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3928	Vacuum pump working time is cleared	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3929	Enter GPF parking regeneration mode	Engine Controller_[1.5TI] National VI (BYD) (ECM)

SP3930	Exit the activated GPF active regeneration calibration	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3931	Clear the accumulated carbon amount to zero	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3932	Clear the self-learning value of the GPF differential pressure sensor	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3933	Reset the amount of accumulated ash to zero	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3934	The first step is to use the old ECU	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3935	The second step is to replace the new ECU and start the calibration	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3936	The third step is to query the calibration results	Engine Controller_[1.5TI] National VI (BYD) (ECM)
SP3937	VIN self-learning	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3938	Replace GPF calibration	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3939	Query and replace the GPF calibration result	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3940	Replace GPF differential pressure sensor calibration	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3941	Replace GPF differential pressure sensor query	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3942	Trigger GPF regeneration calibration	Engine Controller_[1.5TID] National Six (UMC) (ECM)

SP3943	The first step is to record the ECU information before replacement	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3944	The second step is to write the first step record information to the new ECU	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3945	Model ECU calibration results (after executing the first and second steps, do not exit the current interface, otherwise the query will be invalid)	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3946	Software coding calibration SA2FE	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3947	Software coding calibration SA2FH	Engine Controller_[1.5TID] National Six (UMC) (ECM)
SP3948	One-key adaptive	Wet dual clutch transmission (TCU)
SP3949	Gear action adaptive	Wet dual clutch transmission (TCU)
SP3950	Oil pump adaptive	Wet dual clutch transmission (TCU)
SP3951	Main pressure valve adaptive	Wet dual clutch transmission (TCU)
SP3952	Safety valve 1 adaptive	Wet dual clutch transmission (TCU)
SP3953	Safety valve 2 adaptive	Wet dual clutch transmission (TCU)
SP3954	Clutch 1 valve adaptive	Wet dual clutch transmission (TCU)
SP3955	Clutch 2 valve adaptive	Wet dual clutch transmission (TCU)
SP3956	Clutch 1 adaptive	Wet dual clutch transmission (TCU)
SP3957	Clutch 2 adaptive	Wet dual clutch transmission (TCU)
SP3958	Slope sensor adaptive	Wet dual clutch transmission (TCU)

SP3959	Electronic oil pump adaptive	Wet dual clutch transmission (TCU)
SP3960	One-key adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3961	Gear action adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3962	Oil pump adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3963	Main pressure valve adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3964	Safety valve 1 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3965	Safety valve 2 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3966	Clutch valve 1 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3967	Clutch valve 2 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3968	Clutch 1 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3969	Clutch 2 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3970	Slope sensor adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3971	Electronic oil pump adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP3972	One-key adaptive	Wet dual clutch transmission controller_II (7DCT) (BYD) (TCU)
SP3973	Gear action adaptive	Wet dual clutch transmission controller_II (7DCT) (BYD) (TCU)
SP3974	Oil pump adaptive	Wet dual clutch transmission controller_II (7DCT) (BYD) (TCU)
SP3975	Main pressure valve adaptive	Wet dual clutch transmission controller_II (7DCT) (BYD) (TCU)
SP3976	Safety valve 1 adaptive	Wet dual clutch transmission controller_II (7DCT) (BYD) (TCU)
SP3977	Safety valve 2 adaptive	Wet dual clutch transmission controller_II (7DCT) (BYD) (TCU)
SP3978	Clutch 1 valve adaptive	Wet dual clutch transmission controller_II (7DCT) (BYD) (TCU)
SP3979	Clutch 2 valve adaptive	Wet dual clutch transmission controller_II (7DCT) (BYD) (TCU)
SP3980	Clutch 1 adaptive	Wet dual clutch transmission controller_II (7DCT) (BYD) (TCU)
SP3981	Clutch 2 adaptive	Wet dual clutch transmission controller_II (7DCT) (BYD) (TCU)
SP3982	Slope sensor adaptive	Wet dual clutch transmission controller_II (7DCT) (BYD) (TCU)
SP3983	Electronic oil pump adaptive	Wet dual clutch transmission controller_II (7DCT) (BYD) (TCU)

SP3984	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP3985	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP3986	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP3987	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP3988	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP3989	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP3990	Write premium configuration	Electronic Body Stability System (ESP)
SP3991	Write flagship configuration	Electronic Body Stability System (ESP)
SP3992	Write SA2FN elite configuration	Electronic Body Stability System (ESP)
SP3993	Write SA2FP elite configuration	Electronic Body Stability System (ESP)
SP3994	Write SA2FP luxury configuration	Electronic Body Stability System (ESP)
SP3995	Erase car configuration	Electronic Body Stability System (ESP)
SP3996	Tire pressure reset	Electronic Body Stability System (ESP)
SP3997	Write MT luxury configuration	Electronic Parking System (Sark) (EPB)
SP3998	Write luxury configuration	Electronic Parking System (Sark) (EPB)
SP3999	Write premium configuration	Electronic Parking System (Sark) (EPB)
SP4000	Write flagship configuration	Electronic Parking System (Sark) (EPB)
SP4001	Write an elite, comfortable configuration	Electronic Parking System (Sark) (EPB)
SP4002	Write SA2FN elite configuration	Electronic Parking System (Sark) (EPB)
SP4003	Write SA2FP elite configuration	Electronic Parking System (Sark) (EPB)

SP4004	Write SA2FP luxury configuration	Electronic Parking System (Sark) (EPB)
SP4005	Steering wheel zero point calibration	Power Steering (TRW) (EPS)
SP4006	PDC calibration	Power Steering (TRW) (EPS)
SP4007	Write 1.5T MT luxury configuration	Power Steering (TRW) (EPS)
SP4008	Write 1.5T DCT elite, comfortable configuration	Power Steering (TRW) (EPS)
SP4009	Write 1.5T DCT luxury configuration	Power Steering (TRW) (EPS)
SP4010	Write 1.5T DCT premium configuration	Power Steering (TRW) (EPS)
SP4011	Write 1.5T DCT flagship configuration	Power Steering (TRW) (EPS)
SP4012	Write SA2FN elite configuration	Power Steering (TRW) (EPS)
SP4013	Write SA2FP elite configuration	Power Steering (TRW) (EPS)
SP4014	Write SA2FP luxury configuration	Power Steering (TRW) (EPS)
SP4015	Write LKS function to open configuration	Power Steering (TRW) (EPS)
SP4016	Steering wheel zero point calibration	Power Steering (Henglong) (EPS)
SP4017	Angle zero calibration	Power steering (Yubei) (CEPS_YB)
SP4018	Write premium configuration	Blind Spot Monitoring (Hella) (BSD)
SP4019	Write premium configuration	Blind Spot Monitoring (BSD001)
SP4020	BSD static calibration	Monitoring from the blind spot (BSD002)
SP4021	BSD dynamic calibration	Monitoring from the blind spot (BSD002)

SP4022	Driver Calibration Service Calibration (SDA)	Adaptive Cruise System (MRR)
SP4023	After-sales calibration	Adaptive Cruise System (MRR)
SP4024	Write premium configuration	Adaptive Cruise System (MRR)
SP4025	Write flagship configuration	Adaptive Cruise System (MRR)
SP4026	Initial dynamic calibration	Multi-Function Video Controller (MPC)
SP4027	Write luxury (with LKS) configuration	Multi-Function Video Controller (MPC)
SP4028	Write noble (high configuration with LKS) configuration	Multi-Function Video Controller (MPC)
SP4029	Static calibration	Multi-Function Video Controller (MPC)
SP4030	ECU unlock	Airbag (Winninger) (SRS)
SP4031	Write the ID of the front left tire pressure monitoring module	Tire Pressure Monitoring Module (Sensata) (TPMS)
SP4032	Write the ID of the front right tire pressure monitoring module	Tire Pressure Monitoring Module (Sensata) (TPMS)
SP4033	Write the ID of the left rear tire pressure monitoring module	Tire Pressure Monitoring Module (Sensata) (TPMS)
SP4034	Write the ID of the rear right tire pressure monitoring module	Tire Pressure Monitoring Module (Sensata) (TPMS)
SP4035	Left front wheel matching	Tire Pressure Monitoring Module (Sensata) (TPMS)
SP4036	Right front wheel matching	Tire Pressure Monitoring Module (Sensata) (TPMS)
SP4037	Left rear wheel matching	Tire Pressure Monitoring Module (Sensata) (TPMS)

SP4038	Right rear wheel matching	Tire Pressure Monitoring Module (Sensata) (TPMS)
SP4039	Write the ID of the front left tire pressure monitoring module	Tire Pressure Monitoring Module (Baolong) (TPMS)
SP4040	Write the ID of the front right tire pressure monitoring module	Tire Pressure Monitoring Module (Baolong) (TPMS)
SP4041	Write the ID of the left rear tire pressure monitoring module	Tire Pressure Monitoring Module (Baolong) (TPMS)
SP4042	Write the ID of the rear right tire pressure monitoring module	Tire Pressure Monitoring Module (Baolong) (TPMS)
SP4043	Left front wheel matching	Tire Pressure Monitoring Module (Baolong) (TPMS)
SP4044	Right front wheel matching	Tire Pressure Monitoring Module (Baolong) (TPMS)
SP4045	Left rear wheel matching	Tire Pressure Monitoring Module (Baolong) (TPMS)
SP4046	Right rear wheel matching	Tire Pressure Monitoring Module (Baolong) (TPMS)
SP4047	Write the ID of the front left tire pressure monitoring module	Tire pressure monitoring module (cloud collar) (TPMS)
SP4048	Write the ID of the front right tire pressure monitoring module	Tire pressure monitoring module (cloud collar) (TPMS)
SP4049	Write the ID of the left rear tire pressure monitoring module	Tire pressure monitoring module (cloud collar) (TPMS)
SP4050	Write the ID of the rear right tire pressure monitoring module	Tire pressure monitoring module (cloud collar) (TPMS)

SP4051	Left front wheel matching	Tire pressure monitoring module (cloud collar) (TPMS)
SP4052	Right front wheel matching	Tire pressure monitoring module (cloud collar) (TPMS)
SP4053	Left rear wheel matching	Tire pressure monitoring module (cloud collar) (TPMS)
SP4054	Right rear wheel matching	Tire pressure monitoring module (cloud collar) (TPMS)
SP4055	Main driver seat calibration	Main driving seat system (SECU_D)
SP4056	One-key adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP4057	Gear action adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP4058	Oil pump adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP4059	Main pressure valve adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP4060	Safety valve 1 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP4061	Safety valve 2 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP4062	Clutch valve 1 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP4063	Clutch valve 2 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP4064	Clutch 1 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP4065	Clutch 2 adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP4066	Slope sensor adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP4067	Electronic oil pump adaptive	Wet dual-clutch transmission controller_II (BYD) (TCU)
SP4068	One-key adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP4069	Gear action adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP4070	Oil pump adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP4071	Main pressure valve adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP4072	Safety valve 1 adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP4073	Safety valve 2 adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP4074	Clutch valve 1 adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP4075	Clutch valve 2 adaptive	Wet dual-clutch transmission controller (BYD) (TCU)

SP4076	Clutch 1 adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP4077	Clutch 2 adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP4078	Slope sensor adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP4079	Electronic oil pump adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP4080	VIN self-learning	1.5TID EFI_ UMC National Six (UCM) (ECM)
SP4081	Replace GPF calibration	1.5TID EFI_ UMC National Six (UCM) (ECM)
SP4082	Query and replace the GPF calibration result	1.5TID EFI_ UMC National Six (UCM) (ECM)
SP4083	Replace GPF differential pressure sensor calibration	1.5TID EFI_ UMC National Six (UCM) (ECM)
SP4084	Replace GPF differential pressure sensor query	1.5TID EFI_ UMC National Six (UCM) (ECM)
SP4085	Trigger GPF regeneration calibration	1.5TID EFI_ UMC National Six (UCM) (ECM)
SP4086	The first step is to record the ECU information before replacement	1.5TID EFI_ UMC National Six (UCM) (ECM)
SP4087	The second step is to write the first step record information to the new ECU	1.5TID EFI_ UMC National Six (UCM) (ECM)
SP4088	Model ECU calibration results (after executing the first and second steps, do not exit the current interface, otherwise the query will be invalid)	1.5TID EFI_ UMC National Six (UCM) (ECM)

SP4089	Software coding calibration	1.5TID EFI_ UMC National Six (UCM) (ECM)
SP4090	VIN self-learning	1.5TI EFI_ UMC National Six (UCM) (ECM)
SP4091	Replace GPF calibration	1.5TI EFI_ UMC National Six (UCM) (ECM)
SP4092	Query and replace the GPF calibration result	1.5TI EFI_ UMC National Six (UCM) (ECM)
SP4093	Replace GPF differential pressure sensor calibration	1.5TI EFI_ UMC National Six (UCM) (ECM)
SP4094	Replace GPF differential pressure sensor query	1.5TI EFI_ UMC National Six (UCM) (ECM)
SP4095	Trigger GPF regeneration calibration	1.5TI EFI_ UMC National Six (UCM) (ECM)
SP4096	The first step is to record the ECU information before replacement	1.5TI EFI_ UMC National Six (UCM) (ECM)
SP4097	The second step is to write the first step record information to the new ECU	1.5TI EFI_ UMC National Six (UCM) (ECM)
SP4098	Model ECU calibration results (after executing the first and second steps, do not exit the current interface, otherwise the query will be invalid)	1.5TI EFI_ UMC National Six (UCM) (ECM)
SP4099	Software coding calibration	1.5TI EFI_ UMC National Six (UCM) (ECM)
SP4100	Steering wheel zero point calibration	Power steering (TRW) (EPS_TRW)

SP4101	Write luxury Y/Prestige Y configuration	Power steering (TRW) (EPS_TRW)
SP4102	Write flagship Y configuration	Power steering (TRW) (EPS_TRW)
SP4103	Write luxury Y/Prestige Y configuration	Power steering (TRW) (EPS_TRW)
SP4104	Write flagship Y configuration	Power steering (TRW) (EPS_TRW)
SP4105	Angle zero calibration	Power Steering (Yubei) (BE_EPS)
SP4106	Write non-ACC configuration	Electronic Parking System (Sark) (EPB_SAC)
SP4107	Write ACC configuration	Electronic Parking System (Sark) (EPB_SAC)
SP4108	Write MEFB configuration	Electronic Parking System (Sark) (EPB_SAC)
SP4109	Write MEFK flagship configuration	Electronic Parking System (Sark) (EPB_SAC)
SP4110	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (Bosch) (ESP)
SP4111	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (Bosch) (ESP)
SP4112	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (Bosch) (ESP)
SP4113	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (Bosch) (ESP)
SP4114	Yaw rate sensor calibration	Electronic Body Stability System (Bosch) (ESP)
SP4115	Rotation sensor calibration	Electronic Body Stability System (Bosch) (ESP)
SP4116	ECU reset	Electronic Body Stability System (Bosch) (ESP)
SP4117	Tire pressure reset	Electronic Body Stability System (Bosch) (ESP)
SP4118	Write flagship Y configuration	Electronic Body Stability System (Bosch) (ESP)
SP4119	Erase car configuration	Electronic Body Stability System (Bosch) (ESP)
SP4120	Driver Calibration Service Calibration (SDA)	Adaptive Cruise System (Bosch) (MRR)

SP4121	After-sales calibration	Adaptive Cruise System (Bosch) (MRR)
SP4122	Write premium Y configuration	Adaptive Cruise System (Bosch) (MRR)
SP4123	Initial dynamic calibration	Multifunctional Video Controller (Bosch) (MPC)
SP4124	Turn off dynamic calibration	Multifunctional Video Controller (Bosch) (MPC)
SP4125	Write premium Y configuration	Multifunctional Video Controller (Bosch) (MPC)
SP4126	Static calibration	Multifunctional Video Controller (Bosch) (MPC)
SP4127	Write premium Y configuration	Blind Spot Monitoring (Hella) (BSD)
SP4128	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP4129	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP4130	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP4131	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP4132	Left front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP4133	Right front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP4134	Left rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP4135	Right rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP4136	Left front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP4137	Right front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP4138	Left rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP4139	Right rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP4140	ECU unlock	Airbag (new) (BYD) (SRS)
SP4141	Warning light test	Airbag (new) (BYD) (SRS)
SP4142	Write luxury type, noble type, flagship type	Left blind spot monitoring (Winner) (BSD_L_VEONEER)
SP4143	Configuration wipe	Left blind spot monitoring (Winner) (BSD L VEONEER)
SP4144	After-sales calibration	Left blind spot monitoring (Winner) (BSD L VEONEER)

SP4145	Reading the serial number of the millimeter wave radar on the left rear	Left blind spot monitoring (Winner) (BSD_L_VEONEER)
SP4146	Write luxury type, noble type, flagship type	Right blind spot monitoring (Winner) (BSD_R_VEONEER)
SP4147	Configuration wipe	Right blind spot monitoring (Winner) (BSD R VEONEER)
SP4148	Reading the serial number of the millimeter wave radar on the right rear	Right blind spot monitoring (Winner) (BSD_R_VEONEER)
SP4149	After-sales calibration	Right blind spot monitoring (Winner) (BSD R VEONEER)
SP4150	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP4151	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP4152	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP4153	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP4154	Write noble type	Left blind spot monitoring (BYD) (BSD L)
SP4155	Configuration wipe	Left blind spot monitoring (BYD) (BSD_L)
SP4156	Write noble type	Right blind spot monitoring (BYD) (BSD R)
SP4157	Configuration wipe	Right blind spot monitoring (BYD) (BSD_R)
SP4158	After-sales calibration	Multi-function video controller (TRW) (MPC_TRW)
SP4159	Routine control of after-sales requests	Multi-function video controller (TRW) (MPC_TRW)
SP4160	Query the results of routine control of the progress of after-sales requests	Multi-function video controller (TRW) (MPC_TRW)
SP4161	After-sales request routine control closure	Multi-function video controller (TRW) (MPC_TRW)
SP4162	Static calibration routine control	Multi-function video controller (TRW) (MPC_TRW)

SP4163	Query routine control results of static calibration progress	Multi-function video controller (TRW) (MPC_TRW)
SP4164	Static calibration routine control closed	Multi-function video controller (TRW) (MPC_TRW)
SP4165	Initial dynamic calibration	Multifunctional Video Controller (Bosch) (MPC_BOSCH)
SP4166	Turn off dynamic calibration	Multifunctional Video Controller (Bosch) (MPC_BOSCH)
SP4167	Write luxury configuration	Multifunctional Video Controller (Bosch) (MPC_BOSCH)
SP4168	Write noble and flagship configuration	Multifunctional Video Controller (Bosch) (MPC_BOSCH)
SP4169	Write SA3FL noble, flagship, flagship PLUS configuration	Multifunctional Video Controller (Bosch) (MPC_BOSCH)
SP4170	Static calibration	Multifunctional Video Controller (Bosch) (MPC_BOSCH)
SP4171	VIN self-learning	1.5TID EFI_ UMC National Six ((UMC) 1.5TID_ECM_G6_UAES)
SP4172	Replace GPF calibration	1.5TID EFI_ UMC National Six ((UMC) 1.5TID_ECM_G6_UAES)
SP4173	Query and replace the GPF calibration result	1.5TID EFI_ UMC National Six ((UMC) 1.5TID_ECM_G6_UAES)
SP4174	Replace GPF differential pressure sensor calibration	1.5TID EFI_ UMC National Six ((UMC) 1.5TID_ECM_G6_UAES)
SP4175	Replace GPF differential pressure sensor query	1.5TID EFI_ UMC National Six ((UMC) 1.5TID_ECM_G6_UAES)
SP4176	Trigger GPF regeneration calibration	1.5TID EFI_ UMC National Six ((UMC) 1.5TID_ECM_G6_UAES)
SP4177	The first step is to record the ECU information before replacement	1.5TID EFI_ UMC National Six ((UMC) 1.5TID_ECM_G6_UAES)

SP4178	The second step is to write the first step record information to the new ECU	1.5TID EFI_ UMC National Six ((UMC) 1.5TID_ECM_G6_UAES)
SP4179	Model ECU calibration results (after executing the first and second steps, do not exit the current interface, otherwise the query will be invalid)	1.5TID EFI_ UMC National Six ((UMC) 1.5TID_ECM_G6_UAES)
SP4180	VIN self-learning	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP4181	Vacuum pump working time is cleared	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP4182	Enter GPF parking regeneration mode	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP4183	Exit the activated GPF active regeneration calibration	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP4184	Clear the accumulated carbon amount to zero	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP4185	Clear the self-learning value of the GPF differential pressure sensor	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP4186	Reset the amount of accumulated ash to zero	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP4187	The first step is to use the old ECU	Engine Controller_[1.5TID] National VI (BYD) (ECM)

SP4188	The second step is to replace the new ECU and start the calibration	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP4189	The third step is to query the calibration results	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP4190	Write 6MT configuration	Electronic Parking System (Sark) (EPB_SAC)
SP4191	Write DCT configuration	Electronic Parking System (Sark) (EPB_SAC)
SP4192	Write AT configuration	Electronic Parking System (Sark) (EPB_SAC)
SP4193	Angle zero calibration	Power steering_EPS (Ensk) (EPS_NSK)
SP4194	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (Bosch) (ESP_BOSCH)
SP4195	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (Bosch) (ESP_BOSCH)
SP4196	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (Bosch) (ESP_BOSCH)
SP4197	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (Bosch) (ESP_BOSCH)
SP4198	Yaw rate sensor calibration	Electronic Body Stability System (Bosch) (ESP_BOSCH)
SP4199	Rotation sensor calibration	Electronic Body Stability System (Bosch) (ESP_BOSCH)
SP4200	Write luxury type, elite type	Electronic Body Stability System (Bosch) (ESP_BOSCH)
SP4201	Write noble type, flagship type, SA3FL flagship PLUS type	Electronic Body Stability System (Bosch) (ESP_BOSCH)
SP4202	Erase car configuration	Electronic Body Stability System (Bosch) (ESP_BOSCH)
SP4203	Tire pressure reset	Electronic Body Stability System (Bosch) (ESP_BOSCH)
SP4204	Driver Calibration Service Calibration (SDA)	Adaptive Cruise System (Bosch) (MRR_BOSCH)

SP4205	After-sales calibration	Adaptive Cruise System (Bosch) (MRR_BOSCH)
SP4206	Write luxury, noble, and flagship configurations	Adaptive Cruise System (Bosch) (MRR_BOSCH)
SP4207	One-key adaptive	Wet dual clutch transmission (BYD) (TCU)
SP4208	Gear action adaptive	Wet dual clutch transmission (BYD) (TCU)
SP4209	Oil pump adaptive	Wet dual clutch transmission (BYD) (TCU)
SP4210	Main pressure valve adaptive	Wet dual clutch transmission (BYD) (TCU)
SP4211	Safety valve 1 adaptive	Wet dual clutch transmission (BYD) (TCU)
SP4212	Safety valve 2 adaptive	Wet dual clutch transmission (BYD) (TCU)
SP4213	Clutch 1 valve adaptive	Wet dual clutch transmission (BYD) (TCU)
SP4214	Clutch 2 valve adaptive	Wet dual clutch transmission (BYD) (TCU)
SP4215	Clutch 1 adaptive	Wet dual clutch transmission (BYD) (TCU)
SP4216	Clutch 2 adaptive	Wet dual clutch transmission (BYD) (TCU)
SP4217	Slope sensor adaptive	Wet dual clutch transmission (BYD) (TCU)
SP4218	Electronic oil pump adaptive	Wet dual clutch transmission (BYD) (TCU)
SP4219	ECU unlock	Airbag (BYD) (SRS_III)
SP4220	Warning light test	Airbag (BYD) (SRS_III)
SP4221	VIN writing and airbag decryption	Airbag (BYD) (SRS_III)
SP4222	Left front wheel matching	Tire pressure monitoring module (Sensata) (TPMS Sensata)
SP4223	Right front wheel matching	Tire pressure monitoring module (Sensata) (TPMS Sensata)
SP4224	Left rear wheel matching	Tire pressure monitoring module (Sensata) (TPMS Sensata)
SP4225	Right rear wheel matching	Tire pressure monitoring module (Sensata) (TPMS Sensata)
SP4226	Left front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP4227	Right front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP4228	Left rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)

SP4229	Right rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP4230	Left front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP4231	Right front wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP4232	Left rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP4233	Right rear wheel matching	Integrated body controller B2 (BYD) (IBCMB2)
SP4234	Left front wheel matching	Left body domain controller A_L2 (BYD) (AL2 BCM)
SP4235	Right front wheel matching	Left body domain controller A_L2 (BYD) (AL2 BCM)
SP4236	Left rear wheel matching	Left body domain controller A_L2 (BYD) (AL2 BCM)
SP4237	Right rear wheel matching	Left body domain controller A_L2 (BYD) (AL2 BCM)
SP4238	Send self-learning information	Left body domain controller A_L2 (BYD) (AL2 BCM)
SP4239	Angle zero calibration	Power Steering (Nexteer) (CEPS_Nexteer)
SP4240	ECU unlock	Airbag (Winninger) (SRS)
SP4241	VIN writing and airbag decryption	Airbag (Winninger) (SRS)
SP4242	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (Bosch) (ESP)
SP4243	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (Bosch) (ESP)
SP4244	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (Bosch) (ESP)
SP4245	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (Bosch) (ESP)
SP4246	Yaw rate sensor calibration	Electronic Body Stability System (Bosch) (ESP)
SP4247	Rotation sensor calibration	Electronic Body Stability System (Bosch) (ESP)
SP4248	Write SA2FN Elite Y configuration	Electronic Body Stability System (Bosch) (ESP)
SP4249	Write SA2FP Elite Y configuration	Electronic Body Stability System (Bosch) (ESP)

SP4250	Write SA2FP luxury Y configuration	Electronic Body Stability System (Bosch) (ESP)
SP4251	Write SA2FL luxury Y configuration	Electronic Body Stability System (Bosch) (ESP)
SP4252	Write SA2FL distinguished Y configuration	Electronic Body Stability System (Bosch) (ESP)
SP4253	Write SA2FL flagship Y configuration	Electronic Body Stability System (Bosch) (ESP)
SP4254	Erase car configuration	Electronic Body Stability System (Bosch) (ESP)
SP4255	ECU reset	Electronic Body Stability System (Bosch) (ESP)
SP4256	VIN self-learning	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP4257	Vacuum pump working time is cleared	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP4258	Enter GPF parking regeneration mode	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP4259	Exit the activated GPF active regeneration calibration	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP4260	Clear the accumulated carbon amount to zero	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP4261	Clear the self-learning value of the GPF differential pressure sensor	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP4262	Reset the amount of accumulated ash to zero	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP4263	The first step is to use the old ECU	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP4264	The second step is to replace the new ECU and start the calibration	Engine Controller_[1.5TID] National VI (BYD) (ECM)

SP4265	The third step is to query the calibration results	Engine Controller_[1.5TID] National VI (BYD) (ECM)
SP4266	One-key adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP4267	Gear action adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP4268	Oil pump adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP4269	Main pressure valve adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP4270	Safety valve 1 adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP4271	Safety valve 2 adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP4272	Clutch valve 1 adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP4273	Clutch valve 2 adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP4274	Clutch 1 adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP4275	Clutch 2 adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP4276	Slope sensor adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP4277	Electronic oil pump adaptive	Wet dual-clutch transmission controller (BYD) (TCU)
SP4278	Write SA2FL flagship type	Blind Spot Monitoring (BYD) (BSD)
SP4279	Configuration wipe	Blind Spot Monitoring (BYD) (BSD)
SP4280	Write SA2FL flagship type	Monitoring from the blind spot (BYD) (BSD)
SP4281	Configuration wipe	Monitoring from the blind spot (BYD) (BSD)
SP4282	Start SDA	Front millimeter wave radar (Bosch) (FMRR BOSCH)
SP4283	Write SA2FL flagship type	Front millimeter wave radar (Bosch) (FMRR BOSCH)
SP4284	VIN self-learning	Engine Controller_1.5TI (ECM)
SP4285	VIN self-learning	Engine Controller_1.5TID (ECM)
SP4286	VIN self-learning	Engine Controller_473DCT (ECM)
SP4287	VIN self-learning	Engine Controller_ UMC ME1788 (ECM)
SP4288	Gear action adaptive	Dual clutch transmission (TCU)

SP4289	Clutch adaptive	Dual clutch transmission (TCU)
SP4290	Slope sensor adaptive	Dual clutch transmission (TCU)
SP4291	Transmission adaptive	Dual clutch transmission (TCU)
SP4292	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP4293	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP4294	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP4295	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP4296	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP4297	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP4298	Stage 1: Exhaust the left rear wheel	Wheel Anti-lock Braking System (ABS)
SP4299	Stage 2: Exhaust the front left wheel	Wheel Anti-lock Braking System (ABS)
SP4300	Stage 3: Exhaust the right front wheel	Wheel Anti-lock Braking System (ABS)
SP4301	Stage 4: Exhaust the right rear wheel	Wheel Anti-lock Braking System (ABS)
SP4302	Yaw rate sensor calibration	Wheel Anti-lock Braking System (ABS)
SP4303	Rotation sensor calibration	Wheel Anti-lock Braking System (ABS)
SP4304	Angle zero calibration	Power Steering (Lianchuang) (EPS)
SP4305	Torque zero calibration	Power Steering (Lianchuang) (EPS)
SP4306	ECU unlock	Airbag (third generation) (SRS III)
SP4307	Warning light test	Airbag (third generation) (SRS_III)
SP4308	Left front wheel matching	Tire Pressure Monitoring System (Baolong) (TPMS)
SP4309	Right front wheel matching	Tire Pressure Monitoring System (Baolong) (TPMS)
SP4310	Left rear wheel matching	Tire Pressure Monitoring System (Baolong) (TPMS)

SP4311	Right rear wheel matching	Tire Pressure Monitoring System (Baolong) (TPMS)
SP4312	Left front wheel matching	Tire Pressure Monitoring System (Sensata) (TPMS)
SP4313	Right front wheel matching	Tire Pressure Monitoring System (Sensata) (TPMS)
SP4314	Left rear wheel matching	Tire Pressure Monitoring System (Sensata) (TPMS)
SP4315	Right rear wheel matching	Tire Pressure Monitoring System (Sensata) (TPMS)
SP4316	Left front wheel matching	Tire Pressure Monitoring System (TPMS)
SP4317	Right front wheel matching	Tire Pressure Monitoring System (TPMS)
SP4318	Left rear wheel matching	Tire Pressure Monitoring System (TPMS)
SP4319	Right rear wheel matching	Tire Pressure Monitoring System (TPMS)
SP4320	OCS calibration	Occupancy Detection System (OCS)
SP4321	Write VIN	M787 K Electronic Injection (UMC) (ECM)
SP4322	Write VIN	MT22 Electronic Injection (Delphi) (ECM)
SP4323	VIN self-learning	ME1788 EFI (UMC) (ECM)
SP4324	VIN self-learning	M787 CAN EFI (UMC) (ECM)
SP4325	VIN self-learning	371 Electronic Injection (ECM)
SP4326	Clutch actuator exhaust	Transmission Control Unit (Marelli) (TCU)
SP4327	Pressure relief of hydraulic system	Transmission Control Unit (Marelli) (TCU)
SP4328	Clutch engagement point self-learning	Transmission Control Unit (Marelli) (TCU)
SP4329	Transmission gear self-learning	Transmission Control Unit (Marelli) (TCU)
SP4330	Replace actuator self-learning	Transmission Control Unit (Marelli) (TCU)
SP4331	Clear clutch group data	Transmission Control Unit (Marelli) (TCU)
SP4332	Clear hydraulic actuator group data	Transmission Control Unit (Marelli) (TCU)
SP4333	Clear gearbox group data	Transmission Control Unit (Marelli) (TCU)
SP4334	Clear joystick group data	Transmission Control Unit (Marelli) (TCU)

SP4335	Clear joystick group data	Transmission Control Unit (Marelli) (TCU)
SP4336	Clear oil pump group data	Transmission Control Unit (Marelli) (TCU)
SP4337	Clear battery pack data	Transmission Control Unit (Marelli) (TCU)
SP4338	Clear oil pump relay group data	Transmission Control Unit (Marelli) (TCU)
SP4339	Clear automatic mode switch group data	Transmission Control Unit (Marelli) (TCU)
SP4340	Clear sport mode switch group data	Transmission Control Unit (Marelli) (TCU)
SP4341	Clear reset static data	Transmission Control Unit (Marelli) (TCU)
SP4342	Automatic exhaust	Delphi ABS system
SP4343	ECU unlock	Airbag system
SP4344	Warning light function test	Airbag system
SP4345	Write VIN	Engine Controller UMC M79 K (ECM)
SP4346	Write VIN	Engine Controller Delphi MT22 (ECM)
SP4347	Write VIN	Engine Controller Delphi MT20U (ECM)
SP4348	Write VIN	Engine Controller Delphi MT20U2 (ECM)
SP4349	System reset	Engine Controller Delphi MT20U2 (ECM)
SP4350	VIN self-learning	Engine Controller_473DCT (ECM)
SP4351	VIN self-learning	Engine Controller_473DCTSS (ECM)
SP4352	Start-stop function and air conditioning related settings	Engine Controller_473DCTSS (ECM)
SP4353	VIN self-learning	Engine Controller_473MTSS (ECM)
SP4354	VIN self-learning	Engine Controller_ UMC M79 (ECM)
SP4355	Vacuum pump working time is cleared	Engine Controller_[473MT] National VI (BYD) (ECM)
SP4356	Enter GPF parking regeneration mode	Engine Controller_[473MT] National VI (BYD) (ECM)
SP4357	Exit the activated GPF active regeneration calibration	Engine Controller_[473MT] National VI (BYD) (ECM)

SP4358	Clear the accumulated carbon amount to zero	Engine Controller_[473MT] National VI (BYD) (ECM)
SP4359	Clear the self-learning value of the GPF differential pressure sensor	Engine Controller_[473MT] National VI (BYD) (ECM)
SP4360	Reset the amount of accumulated ash to zero	Engine Controller_[473MT] National VI (BYD) (ECM)
SP4361	The first step is to use the old ECU	Engine Controller_[473MT] National VI (BYD) (ECM)
SP4362	The second step is to replace the new ECU and start the calibration	Engine Controller_[473MT] National VI (BYD) (ECM)
SP4363	The third step is to query the calibration results	Engine Controller_[473MT] National VI (BYD) (ECM)
SP4364	Gear action adaptive	Dual clutch transmission (TCU)
SP4365	Clutch adaptive	Dual clutch transmission (TCU)
SP4366	Slope sensor adaptive	Dual clutch transmission (TCU)
SP4367	Transmission adaptive	Dual clutch transmission (TCU)
SP4368	Automatic exhaust	Wheel Anti-lock Brake System (Delphi) (ABS7.4)
SP4369	Automatic exhaust	Wheel Anti-lock Braking System (Jingxi Heavy Industry) (ABS7.8)
SP4370	Brake exhaust	Wheel Anti-lock Braking System (Bosch) (ABS8)
SP4371	Modify the filling status	Wheel Anti-lock Braking System (Bosch) (ABS8)
SP4372	Artificial exhaust	Wheel Anti-lock Braking System (Bosch) (ABS9)
SP4373	Modify the filling status	Wheel Anti-lock Braking System (Bosch) (ABS9)
SP4374	Phase 1: Exhaust the front left wheel	Wheel Anti-lock Braking System_[ABS9] (Bosch) (ABS)
SP4375	Stage 2: Exhaust the right front wheel	Wheel Anti-lock Braking System_[ABS9] (Bosch) (ABS)

SP4376	Stage 3: Exhaust the left rear wheel	Wheel Anti-lock Braking System_[ABS9] (Bosch) (ABS)
SP4377	Stage 4: Exhaust the right rear wheel	Wheel Anti-lock Braking System_[ABS9] (Bosch) (ABS)
SP4378	Tire pressure reset	Wheel Anti-lock Braking System [ABS9] (Bosch) (ABS)
SP4379	Erase configuration word	Wheel Anti-lock Braking System_[ABS9] (Bosch) (ABS)
SP4380	Write F3FC drum ABS configuration word	Wheel Anti-lock Braking System_[ABS9] (Bosch) (ABS)
SP4381	Write F3FC disc ABS configuration word	Wheel Anti-lock Braking System_[ABS9] (Bosch) (ABS)
SP4382	Read the current zero point of the torque sensor	Power Steering (EPS)
SP4383	Set the current torque sensor sampling value to zero	Power Steering (EPS)
SP4384	Read the current zero point of the steering wheel angle sensor	Power Steering (EPS)
SP4385	Set the current steering wheel angle sensor sampling value to zero	Power Steering (EPS)
SP4386	Read the current return mode	Power Steering (EPS)
SP4387	Set to strong return mode	Power Steering (EPS)
SP4388	Set to strong return mode	Power Steering (EPS)
SP4389	Set to standard return mode	Power Steering (EPS)
SP4390	Set to weaker return to normal mode	Power Steering (EPS)

SP4391	Set to weak return to positive mode	Power Steering (EPS)
SP4392	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP4393	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP4394	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP4395	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP4396	VIN self-learning	Engine Controller_1.5TI (ECM)
SP4397	VIN self-learning	Engine Controller_473DCTSS (ECM)
SP4398	Start-stop function and air conditioning related settings	Engine Controller_473DCTSS (ECM)
SP4399	VIN self-learning	Engine Controller_473DCT (ECM)
SP4400	VIN self-learning	M787 CAN EFI (UMC) (ECM)
SP4401	Write VIN	Engine Controller UMC M79 K (ECM)
SP4402	Write VIN	Engine Controller Delphi MT22 (ECM)
SP4403	Gear action adaptive	Dual clutch transmission (TCU)
SP4404	Clutch adaptive	Dual clutch transmission (TCU)
SP4405	Slope sensor adaptive	Dual clutch transmission (TCU)
SP4406	Transmission adaptive	Dual clutch transmission (TCU)
SP4407	Stage 1: Exhaust the left rear wheel	Body Stability System (ESP)
SP4408	Stage 2: Exhaust the front left wheel	Body Stability System (ESP)
SP4409	Stage 3: Exhaust the right front wheel	Body Stability System (ESP)
SP4410	Stage 4: Exhaust the right rear wheel	Body Stability System (ESP)
SP4411	Yaw rate sensor calibration	Body Stability System (ESP)
SP4412	Rotation sensor calibration	Body Stability System (ESP)
SP4413	Brake exhaust	Wheel Anti-lock Braking System (ABS9)

SP4414	Read the current zero point of the torque sensor	Power Steering System (EPS)
SP4415	Set the current torque sensor sampling value to zero	Power Steering System (EPS)
SP4416	Read the current zero point of the steering wheel angle sensor	Power Steering System (EPS)
SP4417	Set the current steering wheel angle sensor sampling value to zero	Power Steering System (EPS)
SP4418	ECU unlock	Airbag (SRS)
SP4419	ECU unlock	Airbag (third generation) (SRS)
SP4420	VIN self-learning	Engine Controller_473DCT (ECM)
SP4421	VIN self-learning	Engine Controller_473MTSS (ECM)
SP4422	VIN self-learning	Engine Controller_473MT (ECM)
SP4423	VIN self-learning	Engine Controller_473MT_G6 (ECM)
SP4424	Trigger GPF regeneration calibration	Engine Controller_473MT_G6 (ECM)
SP4425	VIN self-learning	Engine Controller_ UMC ME1788SS (ME1788)
SP4426	VIN self-learning	Engine Controller_ UMC ME1788 (ME1788)
SP4427	VIN self-learning	Engine Controller_Delphi MT22SS (ECM)
SP4428	VIN self-learning	Engine Controller_Delphi MT22 (ECM)
SP4429	Write VIN	Engine Controller UMC M788 K (ECM)
SP4430	VIN self-learning	Engine Controller_[473CVT] (BYD) (ECM)
SP4431	Vacuum pump working time is cleared	Engine Controller_[473CVT] (BYD) (ECM)
SP4432	Enter GPF parking regeneration mode	Engine Controller_[473CVT] (BYD) (ECM)

SP4433	Exit the activated GPF active regeneration calibration	Engine Controller_[473CVT] (BYD) (ECM)
SP4434	Clear the accumulated carbon amount to zero	Engine Controller_[473CVT] (BYD) (ECM)
SP4435	Clear the self-learning value of the GPF differential pressure sensor	Engine Controller_[473CVT] (BYD) (ECM)
SP4436	Reset the amount of accumulated ash to zero	Engine Controller_[473CVT] (BYD) (ECM)
SP4437	The first step is to use the old ECU	Engine Controller_[473CVT] (BYD) (ECM)
SP4438	The second step is to replace the new ECU and start the calibration	Engine Controller_[473CVT] (BYD) (ECM)
SP4439	The third step is to query the calibration results	Engine Controller_[473CVT] (BYD) (ECM)
SP4440	VIN self-learning	Engine Controller_[472MT] National Six (BYD) (ECM)
SP4441	Vacuum pump working time is cleared	Engine Controller_[472MT] National Six (BYD) (ECM)
SP4442	Enter GPF parking regeneration mode	Engine Controller_[472MT] National Six (BYD) (ECM)
SP4443	Exit the activated GPF active regeneration calibration	Engine Controller_[472MT] National Six (BYD) (ECM)
SP4444	Clear the accumulated carbon amount to zero	Engine Controller_[472MT] National Six (BYD) (ECM)

SP4445	Clear the self-learning value of the GPF differential pressure sensor	Engine Controller_[472MT] National Six (BYD) (ECM)
SP4446	Reset the amount of accumulated ash to zero	Engine Controller_[472MT] National Six (BYD) (ECM)
SP4447	The first step is to use the old ECU	Engine Controller_[472MT] National Six (BYD) (ECM)
SP4448	The second step is to replace the new ECU and start the calibration	Engine Controller_[472MT] National Six (BYD) (ECM)
SP4449	The third step is to query the calibration results	Engine Controller_[472MT] National Six (BYD) (ECM)
SP4450	Gear action adaptive	Dual clutch transmission (TCU)
SP4451	Clutch adaptive	Dual clutch transmission (TCU)
SP4452	Slope sensor adaptive	Dual clutch transmission (TCU)
SP4453	Transmission adaptive	Dual clutch transmission (TCU)
SP4454	Check condition	Transmission system (Wanliyang) (TCU)
SP4455	Clear system fault data	Transmission system (Wanliyang) (TCU)
SP4456	Clear learning value	Transmission system (Wanliyang) (TCU)
SP4457	P gear sensor self-learning	Transmission system (Wanliyang) (TCU)
SP4458	R gear sensor self-learning	Transmission system (Wanliyang) (TCU)
SP4459	N gear sensor self-learning	Transmission system (Wanliyang) (TCU)
SP4460	D gear sensor self-learning	Transmission system (Wanliyang) (TCU)
SP4461	L file gear sensor self-learning	Transmission system (Wanliyang) (TCU)
SP4462	Stage 1: Exhaust the left rear wheel	Body Stability System (ESP)
SP4463	Stage 2: Exhaust the front left wheel	Body Stability System (ESP)

SP4464	Stage 3: Exhaust the right front wheel	Body Stability System (ESP)
SP4465	Stage 4: Exhaust the right rear wheel	Body Stability System (ESP)
SP4466	Yaw rate sensor calibration	Body Stability System (ESP)
SP4467	Rotation sensor calibration	Body Stability System (ESP)
SP4468	ECU unlock	Airbag (SRS)
SP4469	Warning light test	Airbag (SRS)
SP4470	ECU unlock	Airbag (third generation) (SRS III)
SP4471	Warning light test	Airbag (third generation) (SRS_III)
SP4472	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP4473	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP4474	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP4475	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP4476	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP4477	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP4478	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP4479	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP4480	Write VIN	Engine Controller UMC M79 (M79 ECM)
SP4481	ECU unlock	Airbag (SRS)
SP4482	VIN self-learning	Engine Controller_1.5TI (ECM)
SP4483	VIN self-learning	Engine Controller_ UMC ME1788 (ECM)
SP4484	VIN self-learning	Engine Controller_UMC M787 (ECM)
SP4485	VIN self-learning	Engine Controller_UMC M7971 (ECM)
SP4486	Gear action adaptive	Dual clutch transmission (TCU)
SP4487	Clutch adaptive	Dual clutch transmission (TCU)
SP4488	Slope sensor adaptive	Dual clutch transmission (TCU)
SP4489	Transmission adaptive	Dual clutch transmission (TCU)

SP4490	One-key adaptive	Wet dual clutch transmission (TCU)
SP4491	Gear action adaptive	Wet dual clutch transmission (TCU)
SP4492	Oil pump adaptive	Wet dual clutch transmission (TCU)
SP4493	Main pressure valve adaptive	Wet dual clutch transmission (TCU)
SP4494	Safety valve 1 adaptive	Wet dual clutch transmission (TCU)
SP4495	Safety valve 2 adaptive	Wet dual clutch transmission (TCU)
SP4496	Clutch valve 1 adaptive	Wet dual clutch transmission (TCU)
SP4497	Clutch valve 2 adaptive	Wet dual clutch transmission (TCU)
SP4498	Clutch 1 adaptive	Wet dual clutch transmission (TCU)
SP4499	Clutch 2 adaptive	Wet dual clutch transmission (TCU)
SP4500	Slope sensor adaptive	Wet dual clutch transmission (TCU)
SP4501	Electronic oil pump adaptive	Wet dual clutch transmission (TCU)
SP4502	Stage 1: Exhaust the left rear wheel	Electronic Body System (ESP)
SP4503	Stage 2: Exhaust the front left wheel	Electronic Body System (ESP)
SP4504	Stage 3: Exhaust the right front wheel	Electronic Body System (ESP)
SP4505	Stage 4: Exhaust the right rear wheel	Electronic Body System (ESP)
SP4506	Yaw rate sensor calibration	Electronic Body System (ESP)
SP4507	Rotation sensor calibration	Electronic Body System (ESP)
SP4508	ECU unlock	Airbag (SRS)
SP4509	Warning light test	Airbag (SRS)
SP4510	ECU unlock	Airbag (third generation) (SRS_III)
SP4511	Warning light test	Airbag (third generation) (SRS_III)
SP4512	VIN self-learning	1.5TI Electronic Injection (ECM)
SP4513	VIN self-learning	2.0TID Electronic Injection (ECM)
SP4514	One-key adaptive	Wet dual clutch transmission (TCU)

SP4515	Gear action adaptive	Wet dual clutch transmission (TCU)
SP4516	Oil pump adaptive	Wet dual clutch transmission (TCU)
SP4517	Main pressure valve adaptive	Wet dual clutch transmission (TCU)
SP4518	Safety valve 1 adaptive	Wet dual clutch transmission (TCU)
SP4519	Safety valve 2 adaptive	Wet dual clutch transmission (TCU)
SP4520	Clutch valve 1 adaptive	Wet dual clutch transmission (TCU)
SP4521	Clutch valve 2 adaptive	Wet dual clutch transmission (TCU)
SP4522	Clutch 1 adaptive	Wet dual clutch transmission (TCU)
SP4523	Clutch 2 adaptive	Wet dual clutch transmission (TCU)
SP4524	Slope sensor adaptive	Wet dual clutch transmission (TCU)
SP4525	Electronic oil pump adaptive	Wet dual clutch transmission (TCU)
SP4526	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP4527	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP4528	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP4529	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP4530	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP4531	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP4532	ECU unlock	Airbag (SRS)
SP4533	Warning light test	Airbag (SRS)
SP4534	ECU unlock	Airbag (third generation) (SRS_III)
SP4535	Warning light test	Airbag (third generation) (SRS_III)
SP4536	Left front wheel matching	Tire Pressure Management Module (TPMS)
SP4537	Right front wheel matching	Tire Pressure Management Module (TPMS)
SP4538	Left rear wheel matching	Tire Pressure Management Module (TPMS)

SP4539	Right rear wheel matching	Tire Pressure Management Module (TPMS)
SP4540	Electric column calibration	Steering column (PTECU)
SP4541	Main driver seat calibration	Main driver's seat (SECU_D)
SP4542	VIN self-learning	1.5TI Electronic Injection (ECM)
SP4543	VIN self-learning	2.0TID Electronic Injection (ECM)
SP4544	One-key adaptive	Wet dual clutch transmission (TCU)
SP4545	Gear action adaptive	Wet dual clutch transmission (TCU)
SP4546	Oil pump adaptive	Wet dual clutch transmission (TCU)
SP4547	Main pressure valve adaptive	Wet dual clutch transmission (TCU)
SP4548	Safety valve 1 adaptive	Wet dual clutch transmission (TCU)
SP4549	Safety valve 2 adaptive	Wet dual clutch transmission (TCU)
SP4550	Clutch valve 1 adaptive	Wet dual clutch transmission (TCU)
SP4551	Clutch valve 2 adaptive	Wet dual clutch transmission (TCU)
SP4552	Clutch 1 adaptive	Wet dual clutch transmission (TCU)
SP4553	Clutch 2 adaptive	Wet dual clutch transmission (TCU)
SP4554	Slope sensor adaptive	Wet dual clutch transmission (TCU)
SP4555	Electronic oil pump adaptive	Wet dual clutch transmission (TCU)
SP4556	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP4557	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP4558	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP4559	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP4560	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP4561	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP4562	ECU unlock	Airbag (SRS)

SP4563	Warning light function test	Airbag (SRS)
SP4564	ECU unlock	Airbag (third generation) (SRS III)
SP4565	Warning light function test	Airbag (third generation) (SRS_III)
SP4566	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP4567	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP4568	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP4569	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP4570	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP4571	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP4572	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP4573	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP4574	Left front wheel matching	Tire Pressure Management Module (TPMS)
SP4575	Right front wheel matching	Tire Pressure Management Module (TPMS)
SP4576	Left rear wheel matching	Tire Pressure Management Module (TPMS)
SP4577	Right rear wheel matching	Tire Pressure Management Module (TPMS)
SP4578	Main driver seat calibration	Electric Back Door (BDECU)
SP4579	Electric column calibration	Steering column (PTECU)
SP4580	Main driver seat calibration	Main driver's seat (SECU_D)
SP4581	VIN self-learning	Engine Controller_473DCT (ECM)
SP4582	VIN self-learning	Engine Controller_473DCTSS (ECM)
SP4583	VIN self-learning	Engine Controller_473MTSS (ECM)
SP4584	VIN self-learning	Engine Controller_UMC M787 (ECM)
SP4585	VIN self-learning	Engine Controller_Delphi MT22 (ECM)
SP4586	Gear action adaptive	Dual clutch transmission (BYD TCU)
SP4587	Clutch adaptive	Dual clutch transmission (BYD TCU)
SP4588	Slope sensor adaptive	Dual clutch transmission (BYD TCU)

SP4589	Transmission adaptive	Dual clutch transmission (BYD TCU)
SP4590	ECU unlock	Airbag (SRS)
SP4591	VIN self-learning	Engine Controller_1.5TI (ECM)
SP4592	VIN self-learning	Engine Controller_1.5TID (ECM)
SP4593	VIN self-learning	Engine Controller_473DCT (ECM)
SP4594	VIN self-learning	Engine Controller_ UMC ME1788 (ECM)
SP4595	VIN self-learning	Engine Controller_Delphi MT22 (ECM)
SP4596	Gear action adaptive	Dual clutch transmission (TCU)
SP4597	Clutch adaptive	Dual clutch transmission (TCU)
SP4598	Slope sensor adaptive	Dual clutch transmission (TCU)
SP4599	Transmission adaptive	Dual clutch transmission (TCU)
SP4600	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP4601	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP4602	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP4603	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP4604	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP4605	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP4606	Angle zero calibration	Power steering (Lianchuang) (EPS_DIAS)
SP4607	Torque zero calibration	Power steering (Lianchuang) (EPS_DIAS)
SP4608	Read the current zero point of the torque sensor	Power Steering (EPS)
SP4609	Set the current torque sensor sampling value to zero	Power Steering (EPS)

SP4610	Read the current zero point of the steering wheel angle sensor	Power Steering (EPS)
SP4611	Set the current steering wheel angle sensor sampling value to zero	Power Steering (EPS)
SP4612	ECU unlock	Airbag (SRS)
SP4613	ECU unlock	Airbag (third generation) (SRS III)
SP4614	Warning light test	Airbag (third generation) (SRS_III)
SP4615	Left front wheel matching	Tire Pressure Management Module (TPMS)
SP4616	Right front wheel matching	Tire Pressure Management Module (TPMS)
SP4617	Left rear wheel matching	Tire Pressure Management Module (TPMS)
SP4618	Right rear wheel matching	Tire Pressure Management Module (TPMS)
SP4619	Main driver seat calibration	Main driver's seat (SECU_D)
SP4620	VIN self-learning	Engine controller_1.5TI_ without cruise (ECM)
SP4621	VIN self-learning	Engine Controller_1.5TI_With Cruise (ECM)
SP4622	VIN self-learning	Engine Controller_1.5TID (ECM)
SP4623	VIN self-learning	Engine Controller_2.0TID (ECM)
SP4624	VIN self-learning	Engine Controller_ UMC ME1788 (ECM)
SP4625	VIN self-learning	Engine Controller_ UMC M79 (M79 CAN)
SP4626	Gear action adaptive	Dual clutch transmission (TCU)
SP4627	Clutch adaptive	Dual clutch transmission (TCU)
SP4628	Slope sensor adaptive	Dual clutch transmission (TCU)
SP4629	Transmission adaptive	Dual clutch transmission (TCU)
SP4630	One-key adaptive	Wet dual clutch transmission (TCU)
SP4631	Gear action adaptive	Wet dual clutch transmission (TCU)
SP4632	Oil pump adaptive	Wet dual clutch transmission (TCU)
SP4633	Main pressure valve adaptive	Wet dual clutch transmission (TCU)

SP4634	Safety valve 1 adaptive	Wet dual clutch transmission (TCU)
SP4635	Safety valve 2 adaptive	Wet dual clutch transmission (TCU)
SP4636	Clutch valve 1 adaptive	Wet dual clutch transmission (TCU)
SP4637	Clutch valve 2 adaptive	Wet dual clutch transmission (TCU)
SP4638	Clutch 1 adaptive	Wet dual clutch transmission (TCU)
SP4639	Clutch 2 adaptive	Wet dual clutch transmission (TCU)
SP4640	Slope sensor adaptive	Wet dual clutch transmission (TCU)
SP4641	Electronic oil pump adaptive	Wet dual clutch transmission (TCU)
SP4642	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP4643	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP4644	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP4645	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP4646	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP4647	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP4648	Headlight initialization	Automatic light adjustment system (ALS)
SP4649	ECU unlock	Airbag (SRS)
SP4650	ECU unlock	Airbag (third generation) (SRS)
SP4651	Warning light test	Airbag (third generation) (SRS)
SP4652	Left front wheel matching	Tire Pressure Management Module (TPMS)
SP4653	Right front wheel matching	Tire Pressure Management Module (TPMS)
SP4654	Left rear wheel matching	Tire Pressure Management Module (TPMS)
SP4655	Right rear wheel matching	Tire Pressure Management Module (TPMS)
SP4656	VIN self-learning	Engine Controller_1.5TI (ECM)
SP4657	VIN self-learning	Engine Controller_1.5TID (ECM)

SP4658	VIN self-learning	Engine Controller_473DCT (ECM)
SP4659	VIN self-learning	473QE DCT Start Stop (ECM)
SP4660	VIN self-learning	Engine Controller_ UMC ME1788 (ECM)
SP4661	Gear action adaptive	Dual clutch transmission_Ti adaptation (TCU)
SP4662	Clutch adaptive	Dual clutch transmission Ti adaptation (TCU)
SP4663	Slope sensor adaptive	Dual clutch transmission_Ti adaptation (TCU)
SP4664	Transmission adaptive	Dual clutch transmission_Ti adaptation (TCU)
SP4665	Gear action adaptive	Dual clutch transmission_self-priming adaptation (TCU)
SP4666	Clutch adaptive	Dual clutch transmission_self-priming adaptation (TCU)
SP4667	Slope sensor adaptive	Dual clutch transmission_self-priming adaptation (TCU)
SP4668	Transmission adaptive	Dual clutch transmission_self-priming adaptation (TCU)
SP4669	Stage 1: Exhaust the left rear wheel	Body Stability System (ESP)
SP4670	Stage 2: Exhaust the front left wheel	Body Stability System (ESP)
SP4671	Stage 3: Exhaust the right front wheel	Body Stability System (ESP)
SP4672	Stage 4: Exhaust the right rear wheel	Body Stability System (ESP)
SP4673	Yaw rate sensor calibration	Body Stability System (ESP)
SP4674	Rotation sensor calibration	Body Stability System (ESP)
SP4675	Read the current zero point of the torque sensor	Power Steering System (EPS)
SP4676	Set the current torque sensor sampling value to zero	Power Steering System (EPS)
SP4677	Read the current zero point of the steering wheel angle sensor	Power Steering System (EPS)

SP4678	Set the current steering wheel angle sensor sampling value to zero	Power Steering System (EPS)
SP4679	Sunroof initialization (manual method)	Body Control Module (BCM)
SP4680	ECU unlock	Airbag (SRS)
SP4681	ECU unlock	Airbag (third generation) (SRS III)
SP4682	Left front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP4683	Right front wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP4684	Left rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP4685	Right rear wheel matching	Tire Pressure Management Module (Baolong) (TPMS)
SP4686	Left front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP4687	Right front wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP4688	Left rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP4689	Right rear wheel matching	Tire Pressure Management Module (Sensata) (TPMS)
SP4690	Left front wheel matching	Tire Pressure Monitoring System (TPMS)
SP4691	Right front wheel matching	Tire Pressure Monitoring System (TPMS)
SP4692	Left rear wheel matching	Tire Pressure Monitoring System (TPMS)
SP4693	Right rear wheel matching	Tire Pressure Monitoring System (TPMS)
SP4694	VIN self-learning	1.5TI Electronic Injection (ECM)
SP4695	VIN self-learning	1.5TID Electronic Injection (ECM)
SP4696	VIN self-learning	473QE DCT Electronic Injection (ECM)
SP4697	VIN self-learning	473QE DCT Start Stop (ECM)
SP4698	VIN self-learning	473QE MT Electronic Injection (ECM)
SP4699	VIN self-learning	ME1788 EFI (UMC) (ECM)
SP4700	Gear action adaptive	Dual clutch transmission (TCU)
SP4701	Clutch adaptive	Dual clutch transmission (TCU)

SP4702	Slope sensor adaptive	Dual clutch transmission (TCU)
SP4703	Transmission adaptive	Dual clutch transmission (TCU)
SP4704	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP4705	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP4706	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP4707	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP4708	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP4709	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP4710	Read the current zero point of the torque sensor	Power Steering (EPS)
SP4711	Set the current torque sensor sampling value to zero	Power Steering (EPS)
SP4712	Read the current zero point of the steering wheel angle sensor	Power Steering (EPS)
SP4713	Set the current steering wheel angle sensor sampling value to zero	Power Steering (EPS)
SP4714	Sunroof initialization (manual method)	Body Controller-Independent Board (BCM)
SP4715	ECU unlock	Airbag (SRS)
SP4716	ECU unlock	Airbag (third generation) (SRS III)
SP4717	Left front wheel matching	Tire Pressure Management Module (TPMS)
SP4718	Right front wheel matching	Tire Pressure Management Module (TPMS)
SP4719	Left rear wheel matching	Tire Pressure Management Module (TPMS)

SP4720	Right rear wheel matching	Tire Pressure Management Module (TPMS)
SP4721	VIN self-learning	Engine Controller_1.5TI (ECM)
SP4722	VIN self-learning	Engine Controller_1.5TID (ECM)
SP4723	VIN self-learning	Engine Controller_2.0TID (ECM)
SP4724	Gear action adaptive	Dual clutch transmission (TCU)
SP4725	Clutch adaptive	Dual clutch transmission (TCU)
SP4726	Slope sensor adaptive	Dual clutch transmission (TCU)
SP4727	Transmission adaptive	Dual clutch transmission (TCU)
SP4728	One-key adaptive	Wet dual clutch transmission (TCU)
SP4729	Gear action adaptive	Wet dual clutch transmission (TCU)
SP4730	Oil pump adaptive	Wet dual clutch transmission (TCU)
SP4731	Main pressure valve adaptive	Wet dual clutch transmission (TCU)
SP4732	Safety valve 1 adaptive	Wet dual clutch transmission (TCU)
SP4733	Safety valve 2 adaptive	Wet dual clutch transmission (TCU)
SP4734	Clutch valve 1 adaptive	Wet dual clutch transmission (TCU)
SP4735	Clutch valve 2 adaptive	Wet dual clutch transmission (TCU)
SP4736	Clutch 1 adaptive	Wet dual clutch transmission (TCU)
SP4737	Clutch 2 adaptive	Wet dual clutch transmission (TCU)
SP4738	Slope sensor adaptive	Wet dual clutch transmission (TCU)
SP4739	Electronic oil pump adaptive	Wet dual clutch transmission (TCU)
SP4740	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP4741	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP4742	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP4743	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)

SP4744	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP4745	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP4746	Read the current zero point of the torque sensor	Power Steering (EPS)
SP4747	Set the current torque sensor sampling value to zero	Power Steering (EPS)
SP4748	Read the current zero point of the steering wheel angle sensor	Power Steering (EPS)
SP4749	Set the current steering wheel angle sensor sampling value to zero	Power Steering (EPS)
SP4750	Headlight initialization	Adaptive Headlight System (AFS)
SP4751	ECU unlock	Airbag (SRS)
SP4752	Left front wheel matching	Tire Pressure Management Module (TPMS)
SP4753	Right front wheel matching	Tire Pressure Management Module (TPMS)
SP4754	Left rear wheel matching	Tire Pressure Management Module (TPMS)
SP4755	Right rear wheel matching	Tire Pressure Management Module (TPMS)
SP4756	Electric column calibration	Electric steering column (PTECU)
SP4757	Main driver seat calibration	Main driver's seat (SECU_D)
SP4758	VIN self-learning	Engine Controller_UMC ME1788 (ME1788 ECM)
SP4759	VIN self-learning	Engine Controller_UMC M787 (M787 ECM)
SP4760	VIN self-learning	Engine Controller_UMC M7971 (ME7971 ECM)
SP4761	One-key adaptive	Wet dual clutch transmission (WDCT)
SP4762	Gear action adaptive	Wet dual clutch transmission (WDCT)
SP4763	Oil pump adaptive	Wet dual clutch transmission (WDCT)
SP4764	Main pressure valve adaptive	Wet dual clutch transmission (WDCT)

SP4765	Safety valve 1 adaptive	Wet dual clutch transmission (WDCT)
SP4766	Safety valve 2 adaptive	Wet dual clutch transmission (WDCT)
SP4767	Clutch valve 1 adaptive	Wet dual clutch transmission (WDCT)
SP4768	Clutch valve 2 adaptive	Wet dual clutch transmission (WDCT)
SP4769	Clutch 1 adaptive	Wet dual clutch transmission (WDCT)
SP4770	Clutch 2 adaptive	Wet dual clutch transmission (WDCT)
SP4771	Slope sensor adaptive	Wet dual clutch transmission (WDCT)
SP4772	Electronic oil pump adaptive	Wet dual clutch transmission (WDCT)
SP4773	Stage 1: Exhaust the left rear wheel	Electronic Body Stability System (ESP)
SP4774	Stage 2: Exhaust the front left wheel	Electronic Body Stability System (ESP)
SP4775	Stage 3: Exhaust the right front wheel	Electronic Body Stability System (ESP)
SP4776	Stage 4: Exhaust the right rear wheel	Electronic Body Stability System (ESP)
SP4777	Yaw rate sensor calibration	Electronic Body Stability System (ESP)
SP4778	Rotation sensor calibration	Electronic Body Stability System (ESP)
SP4779	ECU unlock	Airbag (SRS)
SP4780	VIN self- learning	Engine Controller_473DCT (ECM)
SP4781	VIN self- learning	Engine Controller_473DCTSS (ECM)
SP4782	VIN self- learning	Engine Controller_473MTSS (ECM)
SP4783	VIN self- learning	Engine Controller_1.5TI (ECM)
SP4784	VIN self- learning	Engine Controller_UMC M787 (ECM)
SP4785	VIN self- learning	Engine Controller_Delphi MT22 (ECM)
SP4786	Gear action adaptive	Dual clutch transmission (TCU)
SP4787	Clutch adaptive	Dual clutch transmission (TCU)
SP4788	Slope sensor adaptive	Dual clutch transmission (TCU)

SP4789	Transmission adaptive	Dual clutch transmission (TCU)
SP4790	Artificial exhaust	Wheel Anti-lock Braking System (ABS9)
SP4791	Modify the filling status	Wheel Anti-lock Braking System (ABS9)
SP4792	ECU unlock	Airbag (SRS)
SP4793	Automatic exhaust on right rear wheel	Anti-lock brake system
SP4794	Auto exhaust on left rear wheel	Anti-lock brake system
SP4795	Right front wheel automatic exhaust	Anti-lock brake system
SP4796	Auto exhaust on left front wheel	Anti-lock brake system
SP4797	Ignition lock	Airbag system
SP4798	Read VIN data	Airbag system
SP4799	Automatic exhaust on right rear wheel	Anti-lock brake system
SP4800	Auto exhaust on left rear wheel	Anti-lock brake system
SP4801	Right front wheel automatic exhaust	Anti-lock brake system
SP4802	Auto exhaust on left front wheel	Anti-lock brake system
SP4803	Ignition lock	Airbag system
SP4804	Read VIN data	Airbag system
SP4805	Automatic exhaust on right rear wheel	Anti-lock brake system
SP4806	Auto exhaust on left rear wheel	Anti-lock brake system
SP4807	Right front wheel automatic exhaust	Anti-lock brake system
SP4808	Auto exhaust on left front wheel	Anti-lock brake system
SP4809	Ignition lock	Airbag system
SP4810	Read VIN data	Airbag system