



深圳市朗仁科技有限公司  
Shenzhen Xtooltech Co., Ltd

## 克莱斯勒功能表 V9.21

提示及说明:

编程功能仅支持H6PRO, H6PRO大师版产品.

\* 表示此功能为新增功能.

✓ 表示此功能支持。  
表示此功能不支持。

※ 表示此功能部分支持。

年份	车型	系统名称	读取 版本信息	读取 故障码	清除 故障码	读取 数据流	动作测试	特殊功能
2019	LX-300	防抱死制动	✓	✓	✓	✓	✓	✓
2019	LX-300	自适应巡航控制系统	✓	✓	✓	✓		✓
2019	LX-300	激活衰减控制模块	✓	✓	✓	✓		
2019	LX-300	自适应前部照明系统	✓	✓	✓	✓	✓	✓
2019	LX-300	车身控制器	✓	✓	✓	✓	✓	✓
2019	LX-300	行驶测试控制模块	✓	✓	✓	✓	✓	
2019	LX-300	电力转向	✓	✓	✓	✓		✓
2019	LX-300	电子换挡器	✓	✓	✓	✓	✓	
2019	LX-300	面向前方相机模块	✓	✓	✓	✓		
2019	LX-300	仪表板组	✓	✓	✓	✓	✓	✓
2019	LX-300	安全气囊	✓	✓	✓	✓		✓
2019	LX-300	动力控制模块	✓	✓	✓	✓	✓	✓
2019	LX-300	驻车定位系统(PTS)	✓	✓	✓	✓		
2019	LX-300	无线电频率集线器	✓	✓	✓	✓	✓	
2019	LX-300	转向柱控制模块	✓	✓	✓	✓		
2019	LX-300	轮胎压力监控	✓	✓	✓	✓		✓

2019	LX-300	变速器控制模块	√	√	√	√		√
2019	LX-300	驾驶员门模块	√	√	√	√	√	
2019	LX-300	加热座椅模块	√	√	√	√	√	
2019	LX-300	空调系统	√	√	√	√	√	√
2019	LX-300	集成中央堆栈	√	√	√	√	√	
2019	LX-300	记忆座椅模块	√	√	√	√	√	
2019	LX-300	乘员门模块	√	√	√	√	√	
2019	LX-300	放大器	√	√	√	√		√
2019	LX-300	干扰	√	√	√	√	√	
2019	LX-300	左盲点传感器	√	√	√	√		
2019	LX-300	右盲点传感器	√	√	√	√		
2019	LX-300	收音机	√	√	√	√	√	
2019	RT-Town&Country	动力控制模块	√	√	√	√	√	√
2019	RT-Town&Country	变速器控制模块	√	√	√	√	√	√
2019	RT-Town&Country	防抱死制动	√	√	√	√	√	√
2019	RT-Town&Country	安全气囊	√	√	√	√		√
2019	RT-Town&Country	转向角传感器	√	√	√	√		
2019	RT-Town&Country	无线控制	√	√	√	√	√	
2019	RT-Town&Country	自动远光灯	√	√	√	√	√	√
2019	RT-Town&Country	放大器	√	√	√	√		√
2019	RT-Town&Country	仪表组/车内节点	√	√	√	√	√	√
2019	RT-Town&Country	左前车门模块	√	√	√	√	√	
2019	RT-Town&Country	右前车门模块	√	√	√	√	√	
2019	RT-Town&Country	左后车门模块	√	√	√	√	√	
2019	RT-Town&Country	右后车门模块	√	√	√	√	√	
2019	RT-Town&Country	DVD 换碟器	√	√	√	√		
2019	RT-Town&Country	折叠装载模块	√	√	√	√	√	
2019	RT-Town&Country	免提模块（电话）	√	√	√	√	√	
2019	RT-Town&Country	高强度放电转换器	√	√	√	√	√	

2019	RT-Town&Country	加热座椅模块	√	√	√	√	√	
2019	RT-Town&Country	空调系统	√	√	√	√	√	√
2019	RT-Town&Country	干扰	√	√	√	√	√	
2019	RT-Town&Country	记忆座椅	√	√	√	√	√	
2019	RT-Town&Country	被动进入模块	√	√	√	√		
2019	RT-Town&Country	电动升降门	√	√	√	√	√	
2019	RT-Town&Country	电动滑门（左）	√	√	√	√		
2019	RT-Town&Country	电动滑门（右）	√	√	√	√		
2019	RT-Town&Country	驻车定位系统(PTS)	√	√	√	√	√	
2019	RT-Town&Country	收音机	√	√	√	√		
2019	RT-Town&Country	天窗	√	√	√	√	√	
2019	RT-Town&Country	中央网关	√	√	√	√	√	√
2019	RT-Town&Country	第二行屏幕	√	√	√	√	√	
2019	RT-Town&Country	最后一行屏幕	√	√	√	√	√	
2019	RT-Town&Country	轮胎压力监控	√	√	√	√		√
2019	RT-Town&Country	电子行人保护模块	√	√	√	√		
2019	RT-Town&Country	左盲点传感器	√	√	√	√		
2019	RT-Town&Country	右盲点传感器	√	√	√	√		
2019	RT-Grand Voyager(大捷龙)	动力控制模块	√	√	√	√	√	√
2019	RT-Grand Voyager(大捷龙)	变速器控制模块	√	√	√	√	√	√
2019	RT-Grand Voyager(大捷龙)	防抱死制动	√	√	√	√	√	√
2019	RT-Grand Voyager(大捷龙)	安全气囊	√	√	√	√		√
2019	RT-Grand Voyager(大捷龙)	转向角传感器	√	√	√	√		
2019	RT-Grand Voyager(大捷龙)	无线控制	√	√	√	√	√	
2019	RT-Grand Voyager(大捷龙)	自动远光灯	√	√	√	√	√	√
2019	RT-Grand Voyager(大捷龙)	放大器	√	√	√	√		√
2019	RT-Grand Voyager(大捷龙)	仪表组/车内节点	√	√	√	√	√	√
2019	RT-Grand Voyager(大捷龙)	左前车门模块	√	√	√	√	√	
2019	RT-Grand Voyager(大捷龙)	右前车门模块	√	√	√	√	√	

2019	RT-Grand Voyager(大捷龙)	左后车门模块	√	√	√	√	√	
2019	RT-Grand Voyager(大捷龙)	右后车门模块	√	√	√	√	√	
2019	RT-Grand Voyager(大捷龙)	DVD 换碟器	√	√	√	√		
2019	RT-Grand Voyager(大捷龙)	折叠装载模块	√	√	√	√	√	
2019	RT-Grand Voyager(大捷龙)	免提模块(电话)	√	√	√	√	√	
2019	RT-Grand Voyager(大捷龙)	高强度放电转换器	√	√	√	√	√	
2019	RT-Grand Voyager(大捷龙)	加热座椅模块	√	√	√	√	√	
2019	RT-Grand Voyager(大捷龙)	空调系统	√	√	√	√	√	√
2019	RT-Grand Voyager(大捷龙)	干扰	√	√	√	√	√	
2019	RT-Grand Voyager(大捷龙)	记忆座椅	√	√	√	√	√	
2019	RT-Grand Voyager(大捷龙)	被动进入模块	√	√	√	√		
2019	RT-Grand Voyager(大捷龙)	电动升降门	√	√	√	√	√	
2019	RT-Grand Voyager(大捷龙)	电动滑门(左)	√	√	√	√		
2019	RT-Grand Voyager(大捷龙)	电动滑门(右)	√	√	√	√		
2019	RT-Grand Voyager(大捷龙)	驻车定位系统(PTS)	√	√	√	√	√	
2019	RT-Grand Voyager(大捷龙)	收音机	√	√	√	√		
2019	RT-Grand Voyager(大捷龙)	天窗	√	√	√	√	√	
2019	RT-Grand Voyager(大捷龙)	中央网关	√	√	√	√	√	√
2019	RT-Grand Voyager(大捷龙)	第二行屏幕	√	√	√	√	√	
2019	RT-Grand Voyager(大捷龙)	最后一行屏幕	√	√	√	√	√	
2019	RT-Grand Voyager(大捷龙)	轮胎压力监控	√	√	√	√		√
2019	RT-Grand Voyager(大捷龙)	电子行人保护模块	√	√	√	√		
2019	RT-Grand Voyager(大捷龙)	左盲点传感器	√	√	√	√		
2019	RT-Grand Voyager(大捷龙)	右盲点传感器	√	√	√	√		
2019	RU-Pacifica	防抱死制动	√	√	√	√	√	√
2019	RU-Pacifica	自适应巡航控制系统	√	√	√	√		√
2019	RU-Pacifica	前大灯调平	√	√	√	√		√
2019	RU-Pacifica	放大器	√	√	√	√	√	√
2019	RU-Pacifica	车身控制器	√	√	√	√	√	√

2019	RU-Pacifica	外部盘模块	√	√	√	√	√	
2019	RU-Pacifica	收音机	√	√	√	√	√	
2019	RU-Pacifica	驾驶员门模块	√	√	√	√	√	
2019	RU-Pacifica	左后车门模块	√	√	√	√	√	
2019	RU-Pacifica	右后车门模块	√	√	√	√	√	
2019	RU-Pacifica	电力转向	√	√	√	√		√
2019	RU-Pacifica	电子换挡器	√	√	√	√	√	
2019	RU-Pacifica	折叠装载模块	√	√	√	√	√	
2019	RU-Pacifica	面向前方相机模块	√	√	√	√		
2019	RU-Pacifica	加热座椅模块	√	√	√	√	√	
2019	RU-Pacifica	空调系统	√	√	√	√	√	√
2019	RU-Pacifica	后部空调	√	√	√	√	√	
2019	RU-Pacifica	集成中央堆栈	√	√	√	√	√	
2019	RU-Pacifica	仪表板组	√	√	√	√	√	√
2019	RU-Pacifica	左盲点传感器	√	√	√			
2019	RU-Pacifica	记忆座椅模块	√	√	√	√		
2019	RU-Pacifica	记忆座椅模块 - 乘员	√	√	√	√		
2019	RU-Pacifica	乘员分类	√	√	√	√		
2019	RU-Pacifica	安全气囊	√	√	√	√	√	√
2019	RU-Pacifica	电动升降门	√	√	√	√	√	
2019	RU-Pacifica	动力控制模块	√	√	√	√	√	√
2019	RU-Pacifica	乘员门模块	√	√	√	√	√	
2019	RU-Pacifica	电动滑门（左）	√	√	√	√	√	
2019	RU-Pacifica	电动滑门（右）	√	√	√	√	√	
2019	RU-Pacifica	驻车定位系统(PTS)	√	√	√	√	√	
2019	RU-Pacifica	右盲点传感器	√	√	√			
2019	RU-Pacifica	无线电频率集线器	√	√	√	√	√	
2019	RU-Pacifica	转向柱控制模块	√	√	√	√		
2019	RU-Pacifica	电池组控制模块	√	√	√	√	√	√

2019	RU-Pacifica	附件电源模块	√	√	√	√		√
2019	RU-Pacifica	混合控制处理器	√	√	√	√	√	
2019	RU-Pacifica	车载充电模块	√	√	√	√		
2019	RU-Pacifica	变速器控制模块	√	√	√	√		√
2019	RU-Pacifica	辅助混合控制处理器	√	√	√			
2019	RU-Pacifica	活动噪音消除	√	√	√	√	√	
2019	RU-Pacifica	后部电子顶置模块	√	√	√	√	√	
2019	RU-Pacifica	显示屏模块	√	√	√	√		
2019	RU-Pacifica	视频路由模块	√	√	√	√		
2019	RU-Pacifica	中心视觉处理模块	√	√	√	√		
2019	RU-Pacifica	电子制动助力器模块	√	√	√	√		
2019	RU-Pacifica	电子转向锁	√	√	√	√		
2019	RU-Pacifica	防抱死制动 OBD	√	√	√	√		√
2019	RU-Pacifica	电动空调压缩机	√	√	√	√		
2019	RU-Pacifica	紧急辅助模块	√	√	√	√	√	
2018	LX-300	防抱死制动	√	√	√	√	√	√
2018	LX-300	自适应巡航控制系统	√	√	√	√		√
2018	LX-300	激活衰减控制模块	√	√	√	√		
2018	LX-300	自适应前部照明系统	√	√	√	√	√	√
2018	LX-300	车身控制器	√	√	√	√	√	√
2018	LX-300	行驶测试控制模块	√	√	√	√	√	
2018	LX-300	电力转向	√	√	√	√		√
2018	LX-300	电子换挡器	√	√	√	√	√	
2018	LX-300	面向前方相机模块	√	√	√	√		
2018	LX-300	仪表板组	√	√	√	√	√	√
2018	LX-300	安全气囊	√	√	√	√		√
2018	LX-300	动力控制模块	√	√	√	√	√	√
2018	LX-300	驻车定位系统(PTS)	√	√	√	√		
2018	LX-300	无线电频率集线器	√	√	√	√	√	

2018	LX-300	转向柱控制模块	√	√	√	√		
2018	LX-300	轮胎压力监控	√	√	√	√		√
2018	LX-300	变速器控制模块	√	√	√	√		√
2018	LX-300	驾驶员门模块	√	√	√	√	√	
2018	LX-300	加热座椅模块	√	√	√	√	√	
2018	LX-300	空调系统	√	√	√	√	√	√
2018	LX-300	集成中央堆栈	√	√	√	√	√	
2018	LX-300	记忆座椅模块	√	√	√	√	√	
2018	LX-300	乘员门模块	√	√	√	√	√	
2018	LX-300	放大器	√	√	√	√		√
2018	LX-300	干扰	√	√	√	√	√	
2018	LX-300	左盲点传感器	√	√	√	√		
2018	LX-300	右盲点传感器	√	√	√	√		
2018	LX-300	收音机	√	√	√	√	√	
2018	RT-Town&Country	动力控制模块	√	√	√	√	√	√
2018	RT-Town&Country	变速器控制模块	√	√	√	√	√	√
2018	RT-Town&Country	防抱死制动	√	√	√	√	√	√
2018	RT-Town&Country	安全气囊	√	√	√	√		√
2018	RT-Town&Country	转向角传感器	√	√	√	√		
2018	RT-Town&Country	无线控制	√	√	√	√	√	
2018	RT-Town&Country	自动远光灯	√	√	√	√	√	√
2018	RT-Town&Country	放大器	√	√	√	√		√
2018	RT-Town&Country	仪表组/车内节点	√	√	√	√	√	√
2018	RT-Town&Country	左前车门模块	√	√	√	√	√	
2018	RT-Town&Country	右前车门模块	√	√	√	√	√	
2018	RT-Town&Country	左后车门模块	√	√	√	√	√	
2018	RT-Town&Country	右后车门模块	√	√	√	√	√	
2018	RT-Town&Country	DVD 换碟器	√	√	√	√		
2018	RT-Town&Country	折叠装载模块	√	√	√	√	√	

2018	RT-Town&Country	免提模块（电话）	√	√	√	√	√	
2018	RT-Town&Country	高强度放电转换器	√	√	√	√	√	
2018	RT-Town&Country	加热座椅模块	√	√	√	√	√	
2018	RT-Town&Country	空调系统	√	√	√	√	√	√
2018	RT-Town&Country	干扰	√	√	√	√	√	
2018	RT-Town&Country	记忆座椅	√	√	√	√	√	
2018	RT-Town&Country	被动进入模块	√	√	√	√		
2018	RT-Town&Country	电动升降门	√	√	√	√	√	
2018	RT-Town&Country	电动滑门（左）	√	√	√	√		
2018	RT-Town&Country	电动滑门（右）	√	√	√	√		
2018	RT-Town&Country	驻车定位系统(PTS)	√	√	√	√	√	
2018	RT-Town&Country	收音机	√	√	√	√		
2018	RT-Town&Country	天窗	√	√	√	√	√	
2018	RT-Town&Country	中央网关	√	√	√	√	√	√
2018	RT-Town&Country	第二行屏幕	√	√	√	√	√	
2018	RT-Town&Country	最后一行屏幕	√	√	√	√	√	
2018	RT-Town&Country	轮胎压力监控	√	√	√	√		√
2018	RT-Town&Country	电子行人保护模块	√	√	√	√		
2018	RT-Town&Country	左盲点传感器	√	√	√	√		
2018	RT-Town&Country	右盲点传感器	√	√	√	√		
2018	RT-Grand Voyager(大捷龙)	动力控制模块	√	√	√	√	√	√
2018	RT-Grand Voyager(大捷龙)	变速器控制模块	√	√	√	√	√	√
2018	RT-Grand Voyager(大捷龙)	防抱死制动	√	√	√	√	√	√
2018	RT-Grand Voyager(大捷龙)	安全气囊	√	√	√	√		√
2018	RT-Grand Voyager(大捷龙)	转向角传感器	√	√	√	√		
2018	RT-Grand Voyager(大捷龙)	无线控制	√	√	√	√	√	
2018	RT-Grand Voyager(大捷龙)	自动远光灯	√	√	√	√	√	√
2018	RT-Grand Voyager(大捷龙)	放大器	√	√	√	√		√
2018	RT-Grand Voyager(大捷龙)	仪表组/车内节点	√	√	√	√	√	√



2018	RT-Grand Voyager(大捷龙)	左前车门模块	√	√	√	√	√	
2018	RT-Grand Voyager(大捷龙)	右前车门模块	√	√	√	√	√	
2018	RT-Grand Voyager(大捷龙)	左后车门模块	√	√	√	√	√	
2018	RT-Grand Voyager(大捷龙)	右后车门模块	√	√	√	√	√	
2018	RT-Grand Voyager(大捷龙)	DVD 换碟器	√	√	√	√		
2018	RT-Grand Voyager(大捷龙)	折叠装载模块	√	√	√	√	√	
2018	RT-Grand Voyager(大捷龙)	免提模块（电话）	√	√	√	√	√	
2018	RT-Grand Voyager(大捷龙)	高强度放电转换器	√	√	√	√	√	
2018	RT-Grand Voyager(大捷龙)	加热座椅模块	√	√	√	√	√	
2018	RT-Grand Voyager(大捷龙)	空调系统	√	√	√	√	√	√
2018	RT-Grand Voyager(大捷龙)	干扰	√	√	√	√	√	
2018	RT-Grand Voyager(大捷龙)	记忆座椅	√	√	√	√	√	
2018	RT-Grand Voyager(大捷龙)	被动进入模块	√	√	√	√		
2018	RT-Grand Voyager(大捷龙)	电动升降门	√	√	√	√	√	
2018	RT-Grand Voyager(大捷龙)	电动滑门（左）	√	√	√	√		
2018	RT-Grand Voyager(大捷龙)	电动滑门（右）	√	√	√	√		
2018	RT-Grand Voyager(大捷龙)	驻车定位系统(PTS)	√	√	√	√	√	
2018	RT-Grand Voyager(大捷龙)	收音机	√	√	√	√		
2018	RT-Grand Voyager(大捷龙)	天窗	√	√	√	√	√	
2018	RT-Grand Voyager(大捷龙)	中央网关	√	√	√	√	√	√
2018	RT-Grand Voyager(大捷龙)	第二行屏幕	√	√	√	√	√	
2018	RT-Grand Voyager(大捷龙)	最后一行屏幕	√	√	√	√	√	
2018	RT-Grand Voyager(大捷龙)	轮胎压力监控	√	√	√	√		√
2018	RT-Grand Voyager(大捷龙)	电子行人保护模块	√	√	√	√		
2018	RT-Grand Voyager(大捷龙)	左盲点传感器	√	√	√	√		
2018	RT-Grand Voyager(大捷龙)	右盲点传感器	√	√	√	√		
2018	RU-Pacifica	防抱死制动	√	√	√	√	√	√
2018	RU-Pacifica	自适应巡航控制系统	√	√	√	√		√
2018	RU-Pacifica	前大灯调平	√	√	√	√		√

2018	RU-Pacifica	放大器	√	√	√	√	√	√
2018	RU-Pacifica	车身控制器	√	√	√	√	√	√
2018	RU-Pacifica	外部盘模块	√	√	√	√	√	
2018	RU-Pacifica	收音机	√	√	√	√	√	
2018	RU-Pacifica	驾驶员门模块	√	√	√	√	√	
2018	RU-Pacifica	左后车门模块	√	√	√	√	√	
2018	RU-Pacifica	右后车门模块	√	√	√	√	√	
2018	RU-Pacifica	电力转向	√	√	√	√		√
2018	RU-Pacifica	电子换挡器	√	√	√	√	√	
2018	RU-Pacifica	折叠装载模块	√	√	√	√	√	
2018	RU-Pacifica	面向前方相机模块	√	√	√	√		
2018	RU-Pacifica	加热座椅模块	√	√	√	√	√	
2018	RU-Pacifica	空调系统	√	√	√	√	√	√
2018	RU-Pacifica	后部空调	√	√	√	√	√	
2018	RU-Pacifica	集成中央堆栈	√	√	√	√	√	
2018	RU-Pacifica	仪表板组	√	√	√	√	√	√
2018	RU-Pacifica	左盲点传感器	√	√	√			
2018	RU-Pacifica	记忆座椅模块	√	√	√	√		
2018	RU-Pacifica	记忆座椅模块 - 乘员	√	√	√	√		
2018	RU-Pacifica	乘员分类	√	√	√	√		
2018	RU-Pacifica	安全气囊	√	√	√	√	√	√
2018	RU-Pacifica	电动升降门	√	√	√	√	√	
2018	RU-Pacifica	动力控制模块	√	√	√	√	√	√
2018	RU-Pacifica	乘员门模块	√	√	√	√	√	
2018	RU-Pacifica	电动滑门（左）	√	√	√	√	√	
2018	RU-Pacifica	电动滑门（右）	√	√	√	√	√	
2018	RU-Pacifica	驻车定位系统(PTS)	√	√	√	√	√	
2018	RU-Pacifica	右盲点传感器	√	√	√			
2018	RU-Pacifica	无线电频率集线器	√	√	√	√	√	

2018	RU-Pacifica	转向柱控制模块	√	√	√	√		
2018	RU-Pacifica	电池组控制模块	√	√	√	√	√	√
2018	RU-Pacifica	附件电源模块	√	√	√	√		√
2018	RU-Pacifica	混合控制处理器	√	√	√	√	√	
2018	RU-Pacifica	车载充电模块	√	√	√	√		
2018	RU-Pacifica	变速器控制模块	√	√	√	√		√
2018	RU-Pacifica	辅助混合控制处理器	√	√	√			
2018	RU-Pacifica	活动噪音消除	√	√	√	√	√	
2018	RU-Pacifica	后部电子顶置模块	√	√	√	√	√	
2018	RU-Pacifica	显示屏模块	√	√	√	√		
2018	RU-Pacifica	视频路由模块	√	√	√	√		
2018	RU-Pacifica	中心视觉处理模块	√	√	√	√		
2018	RU-Pacifica	电子制动助力器模块	√	√	√	√		
2018	RU-Pacifica	电子转向锁	√	√	√	√		
2018	RU-Pacifica	防抱死制动 OBD	√	√	√	√		√
2018	RU-Pacifica	电动空调压缩机	√	√	√	√		
2018	RU-Pacifica	紧急辅助模块	√	√	√	√	√	
2017	4C	动力控制模块	√	√	√	√	√	√
2017	4C	防抱死制动	√	√	√	√	√	√
2017	4C	车身控制器	√	√	√	√	√	√
2017	4C	变速器控制模块	√	√	√	√		
2017	4C	仪表板组	√	√	√	√	√	√
2017	4C	安全气囊	√	√	√	√		
2017	4C	驻车辅助模块	√	√	√	√		
2017	4C	轮胎压力监控	√	√	√	√		√
2017	BF-Fiat 500L	动力控制模块	√	√	√	√	√	√
2017	BF-Fiat 500L	防抱死制动	√	√	√	√		√
2017	BF-Fiat 500L	电力转向	√	√	√	√		√
2017	BF-Fiat 500L	电子换挡器	√	√	√	√	√	

2017	BF-Fiat 500L	空调系统		√	√	√	√	√
2017	BF-Fiat 500L	安全气囊	√	√	√	√		√
2017	BF-Fiat 500L	车身控制器	√	√	√	√	√	√
2017	BF-Fiat 500L	仪表板组	√	√	√	√	√	√
2017	BF-Fiat 500L	驻车辅助模块	√	√	√	√		
2017	BF-Fiat 500L	轮胎压力监控	√	√	√	√	√	√
2017	BF-Fiat 500L	娱乐车载通信模块	√	√	√	√		
2017	BF-Fiat 500L	变速器控制模块	√	√	√	√	√	√
2017	BK-Forza	仪表板组	√	√	√	√	√	
2017	BK-Forza	安全气囊	√	√	√	√	√	
2017	DV-Vision	车身控制器	√	√	√	√	√	
2017	DV-Vision	仪表板组	√	√	√	√	√	
2017	DV-Vision	安全气囊	√	√	√	√	√	
2017	FB-500X	自适应巡航控制系统	√	√	√	√	√	√
2017	FB-500X	车身控制器	√	√	√	√	√	√
2017	FB-500X	行驶测试控制模块	√	√	√	√		
2017	FB-500X	电子换挡器	√	√	√	√	√	
2017	FB-500X	仪表板组	√	√	√	√	√	√
2017	FB-500X	发动机控制模块	√	√	√	√	√	√
2017	FB-500X	动力控制模块	√	√	√	√	√	√
2017	FB-500X	无线电频率集线器	√	√	√	√	√	
2017	FB-500X	变速器控制模块	√	√	√	√		√
2017	FB-500X	防抱死制动	√	√	√	√	√	√
2017	FB-500X	电力转向	√	√	√	√		√
2017	FB-500X	电子转向锁		√	√	√		
2017	FB-500X	感触车道反馈	√	√	√	√		
2017	FB-500X	安全气囊	√	√	√	√		√
2017	FB-500X	驻车辅助模块	√	√	√	√		
2017	FB-500X	放大器	√	√	√	√	√	√

2017	FB-500X	舒适座椅车轮模块	√	√	√	√	√	
2017	FB-500X	娱乐车载通信模块	√	√	√	√	√	
2017	FB-500X	空调系统	√	√	√	√	√	√
2017	FB-500X	左盲点传感器	√	√	√	√	√	
2017	FB-500X	右盲点传感器	√	√	√	√	√	
2017	FB-500X	无线电接收器模块	√	√	√	√	√	
2017	FF-500	防抱死制动	√	√	√	√		√
2017	FF-500	车身控制器	√	√	√	√	√	√
2017	FF-500	电池组控制模块	√	√	√	√	√	√
2017	FF-500	电动空调压缩机	√	√	√	√		
2017	FF-500	电力转向	√	√	√	√		√
2017	FF-500	电子车辆控制装置	√	√	√	√	√	
2017	FF-500	电子换挡器	√	√	√			
2017	FF-500	车载充电模块	√	√	√	√		
2017	FF-500	动力控制模块	√	√	√	√	√	√
2017	FF-500	电源转换器模块	√	√	√	√		
2017	FF-500	再生制动控制器	√	√	√	√		
2017	FF-500	变速器控制模块	√	√	√	√	√	√
2017	FF-500	空调系统	√	√	√	√	√	√
2017	FF-500	仪表板组	√	√	√	√	√	√
2017	FF-500	娱乐车载通信模块	√	√	√	√	√	
2017	FF-500	安全气囊	√	√	√	√		√
2017	FF-500	驻车定位系统 (PTS)	√	√	√	√		
2017	FF-500	轮胎压力监控	√	√	√	√	√	√
2017	FF-500	车辆跟踪模块	√	√	√	√		
2017	LX-300/Thema	防抱死制动	√	√	√	√	√	√
2017	LX-300/Thema	自适应巡航控制系统	√	√	√	√		√
2017	LX-300/Thema	激活衰减控制模块	√	√	√	√		
2017	LX-300/Thema	自适应前部照明系统	√	√	√	√	√	√

2017	LX-300/Thema	车身控制器	√	√	√	√	√	√
2017	LX-300/Thema	行驶测试控制模块	√	√	√	√	√	
2017	LX-300/Thema	电力转向	√	√	√	√		√
2017	LX-300/Thema	电子换挡器	√	√	√	√	√	
2017	LX-300/Thema	面向前方相机模块	√	√	√	√		
2017	LX-300/Thema	仪表板组	√	√	√	√	√	√
2017	LX-300/Thema	安全气囊	√	√	√	√		√
2017	LX-300/Thema	动力控制模块	√	√	√	√	√	√
2017	LX-300/Thema	驻车定位系统(PTS)	√	√	√	√		
2017	LX-300/Thema	无线电频率集线器	√	√	√	√	√	
2017	LX-300/Thema	转向柱控制模块	√	√	√	√		
2017	LX-300/Thema	轮胎压力监控	√	√	√	√		√
2017	LX-300/Thema	变速器控制模块	√	√	√	√		√
2017	LX-300/Thema	驾驶员门模块	√	√	√	√	√	
2017	LX-300/Thema	加热座椅模块	√	√	√	√	√	
2017	LX-300/Thema	空调系统	√	√	√	√	√	√
2017	LX-300/Thema	集成中央堆栈	√	√	√	√	√	
2017	LX-300/Thema	记忆座椅模块	√	√	√	√	√	
2017	LX-300/Thema	乘员门模块	√	√	√	√	√	
2017	LX-300/Thema	放大器	√	√	√	√		√
2017	LX-300/Thema	干扰	√	√	√	√	√	
2017	LX-300/Thema	左盲点传感器	√	√	√	√		
2017	LX-300/Thema	右盲点传感器	√	√	√	√		
2017	LX-300/Thema	收音机	√	√	√	√	√	
2017	R7-750	车身控制器	√	√	√	√	√	
2017	R7-750	仪表板组	√	√	√	√	√	
2017	R7-750	安全气囊	√	√	√	√	√	
2017	RT-Town&Country/Voyager(大捷龙)	动力控制模块	√	√	√	√	√	√
2017	RT-Town&Country/Voyager(大捷龙)	变速器控制模块	√	√	√	√	√	√

2017	RT-Town&Country/Voyager (大捷龙)	防抱死制动	√	√	√	√	√	√
2017	RT-Town&Country/Voyager (大捷龙)	安全气囊	√	√	√	√		√
2017	RT-Town&Country/Voyager (大捷龙)	转向角传感器	√	√	√	√		
2017	RT-Town&Country/Voyager (大捷龙)	无线控制	√	√	√	√	√	
2017	RT-Town&Country/Voyager (大捷龙)	自动远光灯	√	√	√	√	√	√
2017	RT-Town&Country/Voyager (大捷龙)	放大器	√	√	√	√		√
2017	RT-Town&Country/Voyager (大捷龙)	仪表组/车内节点	√	√	√	√	√	√
2017	RT-Town&Country/Voyager (大捷龙)	左前车门模块	√	√	√	√	√	
2017	RT-Town&Country/Voyager (大捷龙)	右前车门模块	√	√	√	√	√	
2017	RT-Town&Country/Voyager (大捷龙)	左后车门模块	√	√	√	√	√	
2017	RT-Town&Country/Voyager (大捷龙)	右后车门模块	√	√	√	√	√	
2017	RT-Town&Country/Voyager (大捷龙)	DVD 换碟器	√	√	√	√		
2017	RT-Town&Country/Voyager (大捷龙)	折叠装载模块	√	√	√	√	√	
2017	RT-Town&Country/Voyager (大捷龙)	免提模块 (电话)	√	√	√	√	√	
2017	RT-Town&Country/Voyager (大捷龙)	高强度放电转换器	√	√	√	√	√	
2017	RT-Town&Country/Voyager (大捷龙)	加热座椅模块	√	√	√	√	√	
2017	RT-Town&Country/Voyager (大捷龙)	空调系统	√	√	√	√	√	√
2017	RT-Town&Country/Voyager (大捷龙)	干扰	√	√	√	√	√	
2017	RT-Town&Country/Voyager (大捷龙)	记忆座椅	√	√	√	√	√	
2017	RT-Town&Country/Voyager (大捷龙)	被动进入模块	√	√	√	√		
2017	RT-Town&Country/Voyager (大捷龙)	电动升降门	√	√	√	√	√	
2017	RT-Town&Country/Voyager (大捷龙)	电动滑门 (左)	√	√	√	√		
2017	RT-Town&Country/Voyager (大捷龙)	电动滑门 (右)	√	√	√	√		
2017	RT-Town&Country/Voyager (大捷龙)	驻车定位系统 (PTS)	√	√	√	√	√	
2017	RT-Town&Country/Voyager (大捷龙)	收音机	√	√	√	√		
2017	RT-Town&Country/Voyager (大捷龙)	天窗	√	√	√	√	√	
2017	RT-Town&Country/Voyager (大捷龙)	中央网关	√	√	√	√	√	√
2017	RT-Town&Country/Voyager (大捷龙)	第二行屏幕	√	√	√	√	√	
2017	RT-Town&Country/Voyager (大捷龙)	最后一行屏幕	√	√	√	√	√	

2017	RT-Town&Country/Voyager (大捷龙)	轮胎压力监控	√	√	√	√		√
2017	RT-Town&Country/Voyager (大捷龙)	电子行人保护模块	√	√	√	√		
2017	RT-Town&Country/Voyager (大捷龙)	左盲点传感器	√	√	√	√		
2017	RT-Town&Country/Voyager (大捷龙)	右盲点传感器	√	√	√	√		
2017	RU-Pacifica	防抱死制动	√	√	√	√	√	√
2017	RU-Pacifica	自适应巡航控制系统	√	√	√	√		√
2017	RU-Pacifica	前大灯调平	√	√	√	√		√
2017	RU-Pacifica	放大器	√	√	√	√	√	√
2017	RU-Pacifica	车身控制器	√	√	√	√	√	√
2017	RU-Pacifica	外部盘模块	√	√	√	√	√	
2017	RU-Pacifica	收音机	√	√	√	√	√	
2017	RU-Pacifica	驾驶员门模块	√	√	√	√	√	
2017	RU-Pacifica	左后车门模块	√	√	√	√	√	
2017	RU-Pacifica	右后车门模块	√	√	√	√	√	
2017	RU-Pacifica	电力转向	√	√	√	√		√
2017	RU-Pacifica	电子换挡器	√	√	√	√	√	
2017	RU-Pacifica	折叠装载模块	√	√	√	√	√	
2017	RU-Pacifica	面向前方相机模块	√	√	√	√		
2017	RU-Pacifica	加热座椅模块	√	√	√	√	√	
2017	RU-Pacifica	空调系统	√	√	√	√	√	√
2017	RU-Pacifica	后部空调	√	√	√	√	√	
2017	RU-Pacifica	集成中央堆栈	√	√	√	√	√	
2017	RU-Pacifica	仪表板组	√	√	√	√	√	√
2017	RU-Pacifica	左盲点传感器	√	√	√			
2017	RU-Pacifica	记忆座椅模块	√	√	√	√		
2017	RU-Pacifica	记忆座椅模块 - 乘员	√	√	√	√		
2017	RU-Pacifica	乘员分类	√	√	√	√		
2017	RU-Pacifica	安全气囊	√	√	√	√	√	√
2017	RU-Pacifica	电动升降门	√	√	√	√	√	



2017	RU-Pacifica	动力控制模块	√	√	√	√	√	√
2017	RU-Pacifica	乘员门模块	√	√	√	√	√	
2017	RU-Pacifica	电动滑门（左）	√	√	√	√	√	
2017	RU-Pacifica	电动滑门（右）	√	√	√	√	√	
2017	RU-Pacifica	驻车定位系统(PTS)	√	√	√	√	√	
2017	RU-Pacifica	右盲点传感器	√	√	√			
2017	RU-Pacifica	无线电频率集线器	√	√	√	√	√	
2017	RU-Pacifica	转向柱控制模块	√	√	√	√		
2017	RU-Pacifica	电池组控制模块	√	√	√	√	√	√
2017	RU-Pacifica	附件电源模块	√	√	√	√		√
2017	RU-Pacifica	混合控制处理器	√	√	√	√	√	
2017	RU-Pacifica	车载充电模块	√	√	√	√		
2017	RU-Pacifica	变速器控制模块	√	√	√	√		√
2017	RU-Pacifica	辅助混合控制处理器	√	√	√			
2017	RU-Pacifica	活动噪音消除	√	√	√	√	√	
2017	RU-Pacifica	后部电子顶置模块	√	√	√	√	√	
2017	RU-Pacifica	显示屏模块	√	√	√	√		
2017	RU-Pacifica	视频路由模块	√	√	√	√		
2017	RU-Pacifica	中心视觉处理模块	√	√	√	√		
2017	RU-Pacifica	电子制动助力器模块	√	√	√	√		
2017	RU-Pacifica	电子转向锁	√	√	√	√		
2017	RU-Pacifica	防抱死制动 OBD	√	√	√	√		√
2017	RU-Pacifica	电动空调压缩机	√	√	√	√		
2017	RU-Pacifica	紧急辅助模块	√	√	√	√	√	
2017	UF-200	防抱死制动	√	√	√	√	√	√
2017	UF-200	自适应巡航控制系统	√	√	√	√		√
2017	UF-200	放大器	√	√	√	√		√
2017	UF-200	车身控制器	√	√	√	√	√	√
2017	UF-200	舒适座椅车轮模块	√	√	√	√	√	

2017	UF-200	驾驶员门模块	√	√	√	√	√	
2017	UF-200	行驶测试控制模块	√	√	√	√	√	
2017	UF-200	电子驻车制动	√	√	√	√		√
2017	UF-200	电力转向	√	√	√	√		√
2017	UF-200	电子换挡器	√	√	√	√		
2017	UF-200	面向前方相机模块	√	√	√	√		
2017	UF-200	空调系统	√	√	√	√	√	√
2017	UF-200	集成中央堆栈	√	√	√	√	√	
2017	UF-200	仪表板组	√	√	√	√	√	√
2017	UF-200	左盲点传感器	√	√	√	√		
2017	UF-200	记忆座椅模块	√	√	√	√		
2017	UF-200	乘员分类	√	√	√	√		
2017	UF-200	安全气囊	√	√	√	√	√	√
2017	UF-200	驻车辅助模块	√	√	√	√	√	
2017	UF-200	动力控制模块	√	√	√	√	√	√
2017	UF-200	乘员门模块	√	√	√	√	√	
2017	UF-200	电动传送装置	√	√	√			
2017	UF-200	收音机	√	√	√	√	√	
2017	UF-200	右盲点传感器	√	√	√	√		
2017	UF-200	无线电频率集线器	√	√	√	√	√	
2017	UF-200	无线电接收器模块	√	√	√	√		
2017	UF-200	转向柱控制模块	√	√	√	√		
2017	UF-200	变速器控制模块	√	√	√	√		√
2016	4C	动力控制模块	√	√	√	√	√	√
2016	4C	防抱死制动	√	√	√	√	√	√
2016	4C	车身控制器	√	√	√	√	√	√
2016	4C	变速器控制模块	√	√	√	√		√
2016	4C	仪表板组	√	√	√	√	√	√
2016	4C	安全气囊	√	√	√	√		√

2016	4C	驻车辅助模块	√	√	√	√		
2016	4C	轮胎压力监控	√	√	√	√		√
2016	BF-Fiat 500L	动力控制模块	√	√	√	√	√	√
2016	BF-Fiat 500L	防抱死制动	√	√	√	√		√
2016	BF-Fiat 500L	电力转向	√	√	√	√		√
2016	BF-Fiat 500L	电子换挡器	√	√	√	√	√	
2016	BF-Fiat 500L	空调系统	√	√	√	√	√	√
2016	BF-Fiat 500L	安全气囊	√	√	√	√		√
2016	BF-Fiat 500L	车身控制器	√	√	√	√	√	√
2016	BF-Fiat 500L	仪表板组	√	√	√	√	√	√
2016	BF-Fiat 500L	驻车辅助模块	√	√	√	√		
2016	BF-Fiat 500L	轮胎压力监控	√	√	√	√	√	√
2016	BF-Fiat 500L	娱乐车载通信模块	√	√	√	√		
2016	BF-Fiat 500L	变速器控制模块	√	√	√	√	√	√
2016	BK-Forza	仪表板组	√	√	√	√	√	
2016	BK-Forza	安全气囊	√	√	√	√	√	
2016	DV-Vision	车身控制器	√	√	√	√	√	
2016	DV-Vision	仪表板组	√	√	√	√	√	
2016	DV-Vision	安全气囊	√	√	√	√	√	
2016	FB-500X	自适应巡航控制系统	√	√	√	√	√	√
2016	FB-500X	车身控制器	√	√	√	√	√	√
2016	FB-500X	行驶测试控制模块	√	√	√	√		
2016	FB-500X	电子换挡器	√	√	√	√	√	
2016	FB-500X	仪表板组	√	√	√	√	√	√
2016	FB-500X	发动机控制模块	√	√	√	√	√	√
2016	FB-500X	动力控制模块	√	√	√	√	√	√
2016	FB-500X	无线电频率集线器	√	√	√	√	√	
2016	FB-500X	变速器控制模块	√	√	√	√		√
2016	FB-500X	防抱死制动	√	√	√	√	√	√

2016	FB-500X	电力转向	√	√	√	√		√
2016	FB-500X	电子转向锁		√	√	√		
2016	FB-500X	感触车道反馈	√	√	√	√		
2016	FB-500X	安全气囊	√	√	√	√		√
2016	FB-500X	驻车辅助模块	√	√	√	√		
2016	FB-500X	放大器	√	√	√	√	√	√
2016	FB-500X	舒适座椅车轮模块	√	√	√	√	√	
2016	FB-500X	娱乐车载通信模块	√	√	√	√	√	
2016	FB-500X	空调系统	√	√	√	√	√	√
2016	FB-500X	左盲点传感器	√	√	√	√	√	
2016	FB-500X	右盲点传感器	√	√	√	√	√	
2016	FB-500X	无线电接收器模块	√	√	√	√	√	
2016	FF-500	防抱死制动	√	√	√	√		√
2016	FF-500	车身控制器	√	√	√	√	√	√
2016	FF-500	电池组控制模块	√	√	√	√	√	√
2016	FF-500	电动空调压缩机	√	√	√	√		
2016	FF-500	电力转向	√	√	√	√		√
2016	FF-500	电子车辆控制装置	√	√	√	√	√	
2016	FF-500	电子换挡器	√	√	√			
2016	FF-500	车载充电模块	√	√	√	√		
2016	FF-500	动力控制模块	√	√	√	√	√	√
2016	FF-500	电源转换器模块	√	√	√	√		
2016	FF-500	再生制动控制器	√	√	√	√		
2016	FF-500	变速器控制模块	√	√	√	√	√	√
2016	FF-500	空调系统	√	√	√	√	√	√
2016	FF-500	仪表板组	√	√	√	√	√	√
2016	FF-500	娱乐车载通信模块	√	√	√	√	√	
2016	FF-500	安全气囊	√	√	√	√		√
2016	FF-500	驻车定位系统(PTS)	√	√	√	√		

2016	FF-500	轮胎压力监控	√	√	√	√	√	√
2016	FF-500	车辆跟踪模块	√	√	√	√		
2016	LX-300/Thema	防抱死制动	√	√	√	√	√	√
2016	LX-300/Thema	自适应巡航控制系统	√	√	√	√		√
2016	LX-300/Thema	激活衰减控制模块	√	√	√	√		
2016	LX-300/Thema	自适应前部照明系统	√	√	√	√	√	√
2016	LX-300/Thema	车身控制器	√	√	√	√	√	√
2016	LX-300/Thema	行驶测试控制模块	√	√	√	√	√	
2016	LX-300/Thema	电力转向	√	√	√	√		√
2016	LX-300/Thema	电子换挡器	√	√	√	√	√	
2016	LX-300/Thema	面向前方相机模块	√	√	√	√		
2016	LX-300/Thema	仪表板组	√	√	√	√	√	√
2016	LX-300/Thema	安全气囊	√	√	√	√		√
2016	LX-300/Thema	动力控制模块	√	√	√	√	√	√
2016	LX-300/Thema	驻车定位系统 (PTS)	√	√	√	√	√	
2016	LX-300/Thema	无线电频率集线器	√	√	√	√	√	
2016	LX-300/Thema	转向柱控制模块	√	√	√	√		
2016	LX-300/Thema	轮胎压力监控	√	√	√	√		√
2016	LX-300/Thema	变速器控制模块	√	√	√	√		√
2016	LX-300/Thema	驾驶员门模块	√	√	√	√	√	
2016	LX-300/Thema	加热座椅模块	√	√	√	√	√	
2016	LX-300/Thema	空调系统	√	√	√	√	√	√
2016	LX-300/Thema	集成中央堆栈	√	√	√	√	√	
2016	LX-300/Thema	记忆座椅模块	√	√	√	√	√	
2016	LX-300/Thema	乘员门模块	√	√	√	√	√	
2016	LX-300/Thema	放大器	√	√	√	√	√	√
2016	LX-300/Thema	干扰	√	√	√	√	√	
2016	LX-300/Thema	左盲点传感器	√	√	√	√		
2016	LX-300/Thema	右盲点传感器	√	√	√	√		

2016	LX-300/Thema	收音机	√	√	√	√	√	
2016	NY-Ypsilon	车身控制器	√	√	√	√	√	√
2016	NY-Ypsilon	发动机控制模块	√	√	√	√	√	√
2016	NY-Ypsilon	电力转向	√	√	√	√		√
2016	NY-Ypsilon	仪表板组	√	√	√	√	√	√
2016	NY-Ypsilon	防抱死制动	√	√	√	√	√	√
2016	NY-Ypsilon	空调系统	√	√	√	√	√	√
2016	NY-Ypsilon	变速器控制模块	√	√	√	√	√	√
2016	NY-Ypsilon	安全气囊	√	√	√	√	√	√
2016	NY-Ypsilon	其它加热器模块	√	√	√	√	√	√
2016	R7-750	车身控制器	√	√	√	√	√	
2016	R7-750	仪表板组	√	√	√	√	√	
2016	R7-750	安全气囊	√	√	√	√	√	
2016	RT-Town&Country/Voyager (大捷龙)	动力控制模块	√	√	√	√	√	√
2016	RT-Town&Country/Voyager (大捷龙)	变速器控制模块	√	√	√	√	√	√
2016	RT-Town&Country/Voyager (大捷龙)	防抱死制动	√	√	√	√	√	√
2016	RT-Town&Country/Voyager (大捷龙)	安全气囊	√	√	√	√		√
2016	RT-Town&Country/Voyager (大捷龙)	转向角传感器	√	√	√	√		
2016	RT-Town&Country/Voyager (大捷龙)	无线控制	√	√	√	√	√	
2016	RT-Town&Country/Voyager (大捷龙)	自动远光灯	√	√	√	√	√	√
2016	RT-Town&Country/Voyager (大捷龙)	放大器	√	√	√	√		√
2016	RT-Town&Country/Voyager (大捷龙)	仪表组/车内节点	√	√	√	√	√	√
2016	RT-Town&Country/Voyager (大捷龙)	左前车门模块	√	√	√	√	√	
2016	RT-Town&Country/Voyager (大捷龙)	右前车门模块	√	√	√	√	√	
2016	RT-Town&Country/Voyager (大捷龙)	左后车门模块	√	√	√	√	√	
2016	RT-Town&Country/Voyager (大捷龙)	右后车门模块	√	√	√	√	√	
2016	RT-Town&Country/Voyager (大捷龙)	DVD 换碟器	√	√	√	√		
2016	RT-Town&Country/Voyager (大捷龙)	折叠装载模块	√	√	√	√	√	
2016	RT-Town&Country/Voyager (大捷龙)	免提模块（电话）	√	√	√	√	√	

2016	RT-Town&Country/Voyager (大捷龙)	高强度放电转换器	√	√	√	√	√	
2016	RT-Town&Country/Voyager (大捷龙)	加热座椅模块	√	√	√	√	√	
2016	RT-Town&Country/Voyager (大捷龙)	空调系统	√	√	√	√	√	√
2016	RT-Town&Country/Voyager (大捷龙)	干扰	√	√	√	√	√	
2016	RT-Town&Country/Voyager (大捷龙)	记忆座椅	√	√	√	√	√	
2016	RT-Town&Country/Voyager (大捷龙)	被动进入模块	√	√	√	√		
2016	RT-Town&Country/Voyager (大捷龙)	电动升降门	√	√	√	√	√	
2016	RT-Town&Country/Voyager (大捷龙)	电动滑门 (左)	√	√	√	√		
2016	RT-Town&Country/Voyager (大捷龙)	电动滑门 (右)	√	√	√	√		
2016	RT-Town&Country/Voyager (大捷龙)	驻车定位系统 (PTS)	√	√	√	√	√	
2016	RT-Town&Country/Voyager (大捷龙)	收音机	√	√	√	√	√	
2016	RT-Town&Country/Voyager (大捷龙)	天窗	√	√	√	√	√	
2016	RT-Town&Country/Voyager (大捷龙)	中央网关	√	√	√	√	√	√
2016	RT-Town&Country/Voyager (大捷龙)	第二行屏幕	√	√	√	√	√	
2016	RT-Town&Country/Voyager (大捷龙)	最后一行屏幕	√	√	√	√	√	
2016	RT-Town&Country/Voyager (大捷龙)	轮胎压力监控	√	√	√	√		√
2016	RT-Town&Country/Voyager (大捷龙)	电子行人保护模块	√	√	√	√		
2016	RT-Town&Country/Voyager (大捷龙)	左盲点传感器	√	√	√	√		
2016	RT-Town&Country/Voyager (大捷龙)	右盲点传感器	√	√	√	√		
2016	UF-200	放大器	√	√	√	√		√
2016	UF-200	车身控制器	√	√	√	√	√	√
2016	UF-200	防抱死制动	√	√	√	√	√	√
2016	UF-200	舒适座椅车轮模块	√	√	√	√	√	
2016	UF-200	自适应巡航控制系统	√	√	√	√		√
2016	UF-200	驾驶员门模块	√	√	√	√	√	
2016	UF-200	记忆座椅模块	√	√	√	√		
2016	UF-200	行驶测试控制模块	√	√	√	√	√	
2016	UF-200	空调系统	√	√	√	√	√	√
2016	UF-200	动力控制模块	√	√	√	√	√	√

2016	UF-200	电子驻车制动	√	√	√	√		√
2016	UF-200	电力转向	√	√	√	√		√
2016	UF-200	收音机	√	√	√	√	√	
2016	UF-200	电子换挡器	√	√	√	√		
2016	UF-200	面向前方相机模块	√	√	√	√		
2016	UF-200	集成中央堆栈	√	√	√	√	√	
2016	UF-200	仪表板组	√	√	√	√	√	√
2016	UF-200	左盲点传感器	√	√	√	√		
2016	UF-200	乘员分类	√	√	√	√		
2016	UF-200	安全气囊	√	√	√	√	√	√
2016	UF-200	驻车辅助模块	√	√	√	√	√	
2016	UF-200	乘员门模块	√	√	√	√	√	
2016	UF-200	电动传送装置	√	√	√			
2016	UF-200	右盲点传感器	√	√	√	√		
2016	UF-200	无线电频率集线器	√	√	√	√	√	
2016	UF-200	无线电接收器模块	√	√	√	√		
2016	UF-200	转向柱控制模块	√	√	√	√		
2016	UF-200	变速器控制模块	√	√	√			√
2015	4C	动力控制模块	√	√	√	√	√	√
2015	4C	防抱死制动	√	√	√	√	√	√
2015	4C	车身控制器	√	√	√	√	√	√
2015	4C	变速器控制模块	√	√	√	√		√
2015	4C	仪表板组	√	√	√	√	√	√
2015	4C	安全气囊	√	√	√	√		√
2015	4C	驻车辅助模块	√	√	√	√		
2015	4C	轮胎压力监控	√	√	√	√		√
2015	BF-Fiat 500L	动力控制模块	√	√	√	√	√	√
2015	BF-Fiat 500L	防抱死制动	√	√	√	√		√
2015	BF-Fiat 500L	电力转向	√	√	√	√		√



2015	BF-Fiat 500L	电子换挡器	√	√	√	√	√	
2015	BF-Fiat 500L	空调系统		√	√	√	√	√
2015	BF-Fiat 500L	安全气囊	√	√	√	√		√
2015	BF-Fiat 500L	车身控制器	√	√	√	√	√	√
2015	BF-Fiat 500L	仪表板组	√	√	√	√	√	√
2015	BF-Fiat 500L	驻车辅助模块	√	√	√	√		
2015	BF-Fiat 500L	轮胎压力监控	√	√	√	√	√	√
2015	BF-Fiat 500L	娱乐车载通信模块	√	√	√	√	√	
2015	BF-Fiat 500L	变速器控制模块	√	√	√	√	√	√
2015	BK-Forza	仪表板组	√	√	√	√	√	
2015	BK-Forza	安全气囊	√	√	√	√	√	
2015	DV-Vision	车身控制器	√	√	√	√	√	
2015	DV-Vision	仪表板组	√	√	√	√	√	
2015	DV-Vision	安全气囊	√	√	√	√	√	
2015	FF-500	动力控制模块	√	√	√	√	√	√
2015	FF-500	电子车辆控制装置	√	√	√	√	√	
2015	FF-500	变速器控制模块	√	√	√	√	√	√
2015	FF-500	防抱死制动	√	√	√	√		√
2015	FF-500	电力转向	√	√	√	√		√
2015	FF-500	车身控制器	√	√	√	√	√	√
2015	FF-500	集中远程信息处理模块	√	√	√	√	√	
2015	FF-500	空调系统	√	√	√	√	√	√
2015	FF-500	仪表板组	√	√	√	√	√	√
2015	FF-500	安全气囊	√	√	√	√		√
2015	FF-500	驻车定位系统(PTS)	√	√	√	√		
2015	FF-500	收音机	√	√	√	√	√	
2015	FF-500	轮胎压力监控	√	√	√	√	√	√
2015	FF-500	电池组控制模块	√	√	√	√	√	√
2015	FF-500	电动空调压缩机	√	√	√	√		

2015	FF-500	电源转换器模块	√	√	√	√		
2015	FF-500	再生制动控制器	√	√	√	√		
2015	FF-500	电子换挡器	√	√	√			
2015	FF-500	车载充电模块	√	√	√	√		
2015	FF-500	车辆跟踪模块	√	√	√	√		
2015	LX-300/Thema	防抱死制动	√	√	√	√	√	√
2015	LX-300/Thema	自适应巡航控制系统	√	√	√	√		√
2015	LX-300/Thema	激活衰减控制模块	√	√	√	√		
2015	LX-300/Thema	自适应前部照明系统	√	√	√	√	√	√
2015	LX-300/Thema	车身控制器	√	√	√	√	√	√
2015	LX-300/Thema	行驶测试控制模块	√	√	√	√	√	
2015	LX-300/Thema	电力转向	√	√	√	√		√
2015	LX-300/Thema	电子换挡器	√	√	√	√		
2015	LX-300/Thema	面向前方相机模块	√	√	√	√		
2015	LX-300/Thema	仪表板组	√	√	√	√	√	√
2015	LX-300/Thema	安全气囊	√	√	√	√		√
2015	LX-300/Thema	动力控制模块	√	√	√	√	√	√
2015	LX-300/Thema	驻车定位系统 (PTS)	√	√	√	√		
2015	LX-300/Thema	无线电频率集线器	√	√	√	√	√	
2015	LX-300/Thema	转向柱控制模块	√	√	√	√		
2015	LX-300/Thema	轮胎压力监控	√	√	√	√		√
2015	LX-300/Thema	变速器控制模块	√	√	√	√		√
2015	LX-300/Thema	驾驶员门模块	√	√	√	√	√	
2015	LX-300/Thema	加热座椅模块	√	√	√	√	√	
2015	LX-300/Thema	空调系统	√	√	√	√	√	√
2015	LX-300/Thema	集成中央堆栈	√	√	√	√	√	
2015	LX-300/Thema	记忆座椅模块	√	√	√	√	√	
2015	LX-300/Thema	乘员门模块	√	√	√	√	√	
2015	LX-300/Thema	放大器	√	√	√	√		√

2015	LX-300/Thema	干扰	√	√	√	√	√	
2015	LX-300/Thema	左盲点传感器	√	√	√	√		
2015	LX-300/Thema	右盲点传感器	√	√	√	√		
2015	LX-300/Thema	收音机	√	√	√	√	√	
2015	NY-Ypsilon	车身控制器	√	√	√	√	√	√
2015	NY-Ypsilon	发动机控制模块	√	√	√	√	√	√
2015	NY-Ypsilon	电力转向	√	√	√	√		√
2015	NY-Ypsilon	仪表板组	√	√	√	√	√	√
2015	NY-Ypsilon	防抱死制动	√	√	√	√	√	√
2015	NY-Ypsilon	空调系统	√	√	√	√	√	√
2015	NY-Ypsilon	变速器控制模块	√	√	√	√	√	√
2015	NY-Ypsilon	安全气囊	√	√	√	√	√	√
2015	NY-Ypsilon	其它加热器模块	√	√	√	√	√	√
2015	R7-750	车身控制器	√	√	√	√	√	
2015	R7-750	仪表板组	√	√	√	√	√	
2015	R7-750	安全气囊	√	√	√	√	√	
2015	RT-Town&Country/Voyager (大捷龙)	动力控制模块	√	√	√	√	√	√
2015	RT-Town&Country/Voyager (大捷龙)	变速器控制模块	√	√	√	√	√	√
2015	RT-Town&Country/Voyager (大捷龙)	防抱死制动	√	√	√	√	√	√
2015	RT-Town&Country/Voyager (大捷龙)	安全气囊	√	√	√	√		√
2015	RT-Town&Country/Voyager (大捷龙)	转向角传感器	√	√	√	√		
2015	RT-Town&Country/Voyager (大捷龙)	无线控制	√	√	√	√	√	
2015	RT-Town&Country/Voyager (大捷龙)	自动远光灯	√	√	√	√	√	√
2015	RT-Town&Country/Voyager (大捷龙)	放大器	√	√	√	√		√
2015	RT-Town&Country/Voyager (大捷龙)	仪表组/车内节点	√	√	√	√	√	√
2015	RT-Town&Country/Voyager (大捷龙)	左前车门模块	√	√	√	√	√	
2015	RT-Town&Country/Voyager (大捷龙)	右前车门模块	√	√	√	√	√	
2015	RT-Town&Country/Voyager (大捷龙)	左后车门模块	√	√	√	√	√	
2015	RT-Town&Country/Voyager (大捷龙)	右后车门模块	√	√	√	√	√	

2015	RT-Town&Country/Voyager (大捷龙)	DVD 换碟器	√	√	√	√		
2015	RT-Town&Country/Voyager (大捷龙)	折叠装载模块	√	√	√	√	√	
2015	RT-Town&Country/Voyager (大捷龙)	免提模块 (电话)	√	√	√	√	√	
2015	RT-Town&Country/Voyager (大捷龙)	高强度放电转换器	√	√	√	√	√	
2015	RT-Town&Country/Voyager (大捷龙)	加热座椅模块	√	√	√	√	√	
2015	RT-Town&Country/Voyager (大捷龙)	空调系统	√	√	√	√	√	√
2015	RT-Town&Country/Voyager (大捷龙)	干扰	√	√	√	√	√	
2015	RT-Town&Country/Voyager (大捷龙)	记忆座椅	√	√	√	√	√	
2015	RT-Town&Country/Voyager (大捷龙)	被动进入模块	√	√	√	√		
2015	RT-Town&Country/Voyager (大捷龙)	电动升降门	√	√	√	√	√	
2015	RT-Town&Country/Voyager (大捷龙)	电动滑门 (左)	√	√	√	√		
2015	RT-Town&Country/Voyager (大捷龙)	电动滑门 (右)	√	√	√	√		
2015	RT-Town&Country/Voyager (大捷龙)	驻车定位系统 (PTS)	√	√	√	√	√	
2015	RT-Town&Country/Voyager (大捷龙)	收音机	√	√	√	√	√	
2015	RT-Town&Country/Voyager (大捷龙)	天窗	√	√	√	√	√	
2015	RT-Town&Country/Voyager (大捷龙)	中央网关	√	√	√	√	√	√
2015	RT-Town&Country/Voyager (大捷龙)	第二行屏幕	√	√	√	√	√	
2015	RT-Town&Country/Voyager (大捷龙)	最后一行屏幕	√	√	√	√	√	
2015	RT-Town&Country/Voyager (大捷龙)	轮胎压力监控	√	√	√	√		√
2015	RT-Town&Country/Voyager (大捷龙)	电子行人保护模块	√	√	√	√		
2015	RT-Town&Country/Voyager (大捷龙)	左盲点传感器	√	√	√	√		
2015	RT-Town&Country/Voyager (大捷龙)	右盲点传感器	√	√	√	√		
2015	UF-200	放大器	√	√	√	√		√
2015	UF-200	车身控制器	√	√	√	√	√	√
2015	UF-200	防抱死制动	√	√	√	√	√	√
2015	UF-200	舒适座椅车轮模块	√	√	√	√	√	
2015	UF-200	自适应巡航控制系统	√	√	√	√		√
2015	UF-200	驾驶员门模块	√	√	√	√	√	
2015	UF-200	记忆座椅模块	√	√	√	√		

2015	UF-200	行驶测试控制模块	√	√	√	√	√	
2015	UF-200	空调系统	√	√	√	√	√	√
2015	UF-200	动力控制模块	√	√	√	√	√	√
2015	UF-200	电子驻车制动	√	√	√	√		√
2015	UF-200	电力转向	√	√	√	√		√
2015	UF-200	收音机	√	√	√	√	√	
2015	UF-200	电子换挡器	√	√	√	√		
2015	UF-200	面向前方相机模块	√	√	√	√		
2015	UF-200	集成中央堆栈	√	√	√	√	√	
2015	UF-200	仪表板组	√	√	√	√	√	√
2015	UF-200	左盲点传感器	√	√	√	√		
2015	UF-200	乘员分类	√	√	√	√		
2015	UF-200	安全气囊	√	√	√	√	√	√
2015	UF-200	驻车辅助模块	√	√	√	√	√	
2015	UF-200	乘员门模块	√	√	√	√	√	
2015	UF-200	电动传送装置	√	√	√			
2015	UF-200	右盲点传感器	√	√	√	√		
2015	UF-200	无线电频率集线器	√	√	√	√	√	
2015	UF-200	无线电接收器模块	√	√	√	√		
2015	UF-200	转向柱控制模块	√	√	√	√		
2015	UF-200	变速器控制模块	√	√	√			√
2014	4C	动力控制模块	√	√	√	√	√	√
2014	4C	防抱死制动	√	√	√	√	√	√
2014	4C	车身控制器	√	√	√	√	√	√
2014	4C	变速器控制模块	√	√	√	√		√
2014	4C	仪表板组	√	√	√	√	√	√
2014	4C	安全气囊	√	√	√	√		√
2014	4C	驻车辅助模块	√	√	√	√		
2014	4C	轮胎压力监控	√	√	√	√		√

2014	BF-Fiat 500L	动力控制模块	√	√	√	√	√	√
2014	BF-Fiat 500L	防抱死制动	√	√	√	√	√	√
2014	BF-Fiat 500L	电力转向	√	√	√	√	√	√
2014	BF-Fiat 500L	电子换挡器	√	√	√	√	√	
2014	BF-Fiat 500L	空调系统	√	√	√	√	√	√
2014	BF-Fiat 500L	安全气囊	√	√	√	√	√	√
2014	BF-Fiat 500L	车身控制器	√	√	√	√	√	√
2014	BF-Fiat 500L	仪表板组	√	√	√	√	√	√
2014	BF-Fiat 500L	驻车辅助模块	√	√	√	√	√	
2014	BF-Fiat 500L	轮胎压力监控	√	√	√	√	√	√
2014	BF-Fiat 500L	娱乐车载通信模块	√	√	√	√	√	
2014	BF-Fiat 500L	变速器控制模块	√	√	√	√	√	√
2014	BK-Forza	仪表板组	√	√	√	√	√	
2014	BK-Forza	安全气囊	√	√	√	√	√	
2014	FF-500	动力控制模块	√	√	√	√	√	√
2014	FF-500	电子车辆控制装置	√	√	√	√	√	
2014	FF-500	变速器控制模块	√	√	√	√	√	√
2014	FF-500	防抱死制动	√	√	√	√	√	√
2014	FF-500	电力转向	√	√	√	√	√	√
2014	FF-500	车身控制器	√	√	√	√	√	√
2014	FF-500	集中远程信息处理模块	√	√	√	√	√	
2014	FF-500	空调系统	√	√	√	√	√	√
2014	FF-500	仪表板组	√	√	√	√	√	√
2014	FF-500	安全气囊	√	√	√	√	√	√
2014	FF-500	驻车定位系统(PTS)	√	√	√	√	√	
2014	FF-500	收音机	√	√	√	√	√	
2014	FF-500	轮胎压力监控	√	√	√	√	√	√
2014	FF-500	电池组控制模块	√	√	√	√	√	√
2014	FF-500	电动空调压缩机	√	√	√	√	√	

2014	FF-500	电源转换器模块	√	√	√	√	√	
2014	FF-500	再生制动控制器	√	√	√	√	√	
2014	FF-500	电子换挡器	√	√	√	√	√	
2014	FF-500	车载充电模块	√	√	√	√	√	
2014	FF-500	车辆跟踪模块	√	√	√	√	√	
2014	JS-Sebring/200/Flavia	动力控制模块	√	√	√	√	√	√
2014	JS-Sebring/200/Flavia	防抱死制动	√	√	√	√	√	√
2014	JS-Sebring/200/Flavia	转向角传感器	√	√	√	√	√	
2014	JS-Sebring/200/Flavia	放大器	√	√	√	√	√	√
2014	JS-Sebring/200/Flavia	仪表组/车内节点	√	√	√	√	√	√
2014	JS-Sebring/200/Flavia	驾驶员门模块	√	√	√	√	√	
2014	JS-Sebring/200/Flavia	免提模块（电话）	√	√	√	√	√	
2014	JS-Sebring/200/Flavia	空调系统	√	√	√	√	√	√
2014	JS-Sebring/200/Flavia	安全气囊	√	√	√	√	√	√
2014	JS-Sebring/200/Flavia	乘员门模块	√	√	√	√	√	
2014	JS-Sebring/200/Flavia	收音机	√	√	√	√	√	
2014	JS-Sebring/200/Flavia	中央网关	√	√	√	√	√	√
2014	JS-Sebring/200/Flavia	无线控制	√	√	√	√	√	
2014	LX-300/Sebring/Thema	动力控制模块	√	√	√	√	√	√
2014	LX-300/Sebring/Thema	变速器控制模块	√	√	√	√	√	√
2014	LX-300/Sebring/Thema	防抱死制动	√	√	√	√	√	√
2014	LX-300/Sebring/Thema	自适应巡航控制系统	√	√	√	√	√	√
2014	LX-300/Sebring/Thema	激活衰减控制模块	√	√	√	√	√	
2014	LX-300/Sebring/Thema	自适应前部照明系统	√	√	√	√	√	√
2014	LX-300/Sebring/Thema	车身控制器	√	√	√	√	√	√
2014	LX-300/Sebring/Thema	行驶测试控制模块	√	√	√	√	√	
2014	LX-300/Sebring/Thema	电力转向	√	√	√	√	√	√
2014	LX-300/Sebring/Thema	电子换挡器	√	√	√	√	√	
2014	LX-300/Sebring/Thema	仪表板组	√	√	√	√	√	√

2014	LX-300/Sebring/Thema	安全气囊	√	√	√	√	√	√
2014	LX-300/Sebring/Thema	无线电频率集线器	√	√	√	√	√	
2014	LX-300/Sebring/Thema	轮胎压力监控	√	√	√	√	√	√
2014	LX-300/Sebring/Thema	驾驶员门模块	√	√	√	√	√	
2014	LX-300/Sebring/Thema	加热座椅模块	√	√	√	√	√	
2014	LX-300/Sebring/Thema	空调系统	√	√	√	√	√	√
2014	LX-300/Sebring/Thema	集成中央堆栈	√	√	√	√	√	
2014	LX-300/Sebring/Thema	记忆座椅模块	√	√	√	√	√	
2014	LX-300/Sebring/Thema	乘员门模块	√	√	√	√	√	
2014	LX-300/Sebring/Thema	驻车定位系统 (PTS)	√	√	√	√	√	
2014	LX-300/Sebring/Thema	转向柱控制模块	√	√	√	√	√	
2014	LX-300/Sebring/Thema	远程信息处理通道收音机	√	√	√	√	√	
2014	LX-300/Sebring/Thema	放大器	√	√	√	√	√	√
2014	LX-300/Sebring/Thema	免提模块 (电话)	√	√	√	√	√	
2014	LX-300/Sebring/Thema	干扰	√	√	√	√	√	
2014	LX-300/Sebring/Thema	左盲点传感器	√	√	√	√	√	
2014	LX-300/Sebring/Thema	右盲点传感器	√	√	√	√	√	
2014	NY-Ypsilon	车身控制器	√	√	√	√	√	√
2014	NY-Ypsilon	发动机控制模块	√	√	√	√	√	√
2014	NY-Ypsilon	电力转向	√	√	√	√	√	√
2014	NY-Ypsilon	仪表板组	√	√	√	√	√	√
2014	NY-Ypsilon	防抱死制动	√	√	√	√	√	√
2014	NY-Ypsilon	空调系统	√	√	√	√	√	√
2014	NY-Ypsilon	变速器控制模块	√	√	√	√	√	√
2014	NY-Ypsilon	安全气囊	√	√	√	√	√	√
2014	NY-Ypsilon	其它加热器模块	√	√	√	√	√	√
2014	RT-Town&Country/Voyager (大捷龙)	动力控制模块	√	√	√	√	√	√
2014	RT-Town&Country/Voyager (大捷龙)	变速器控制模块	√	√	√	√	√	√
2014	RT-Town&Country/Voyager (大捷龙)	防抱死制动	√	√	√	√	√	√



2014	RT-Town&Country/Voyager (大捷龙)	安全气囊	√	√	√	√	√	√
2014	RT-Town&Country/Voyager (大捷龙)	转向角传感器	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	无线控制	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	自动远光灯	√	√	√	√	√	√
2014	RT-Town&Country/Voyager (大捷龙)	放大器	√	√	√	√	√	√
2014	RT-Town&Country/Voyager (大捷龙)	仪表组/车内节点	√	√	√	√	√	√
2014	RT-Town&Country/Voyager (大捷龙)	左前车门模块	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	右前车门模块	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	左后车门模块	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	右后车门模块	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	DVD 换碟器	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	折叠装载模块	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	免提模块 (电话)	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	高强度放电转换器	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	加热座椅模块	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	空调系统	√	√	√	√	√	√
2014	RT-Town&Country/Voyager (大捷龙)	干扰	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	记忆座椅	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	被动进入模块	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	电动升降门	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	电动滑门 (左)	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	电动滑门 (右)	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	驻车定位系统 (PTS)	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	收音机	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	天窗	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	中央网关	√	√	√	√	√	√
2014	RT-Town&Country/Voyager (大捷龙)	第二行屏幕	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	最后一行屏幕	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	轮胎压力监控	√	√	√	√	√	√

2014	RT-Town&Country/Voyager (大捷龙)	电子行人保护模块	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	左盲点传感器	√	√	√	√	√	
2014	RT-Town&Country/Voyager (大捷龙)	右盲点传感器	√	√	√	√	√	
2013	BK-Forza	仪表板组	√	√	√	√	√	
2013	BK-Forza	安全气囊	√	√	√	√	√	
2013	FF-500	动力控制模块	√	√	√	√	√	√
2013	FF-500	电子车辆控制装置	√	√	√	√	√	
2013	FF-500	变速器控制模块	√	√	√	√	√	√
2013	FF-500	防抱死制动	√	√	√	√	√	√
2013	FF-500	电力转向	√	√	√	√	√	√
2013	FF-500	车身控制器	√	√	√	√	√	√
2013	FF-500	集中远程信息处理模块	√	√	√	√	√	
2013	FF-500	空调系统	√	√	√	√	√	√
2013	FF-500	仪表板组	√	√	√	√	√	√
2013	FF-500	安全气囊	√	√	√	√	√	√
2013	FF-500	驻车定位系统 (PTS)	√	√	√	√	√	
2013	FF-500	收音机	√	√	√	√	√	
2013	FF-500	轮胎压力监控	√	√	√	√	√	√
2013	FF-500	电池组控制模块	√	√	√	√	√	√
2013	FF-500	电动空调压缩机	√	√	√	√	√	
2013	FF-500	电源转换器模块	√	√	√	√	√	
2013	FF-500	再生制动控制器	√	√	√	√	√	
2013	FF-500	电子换挡器	√	√	√	√	√	
2013	FF-500	车载充电模块	√	√	√	√	√	
2013	FF-500	车辆跟踪模块	√	√	√	√	√	
2013	JS-Sebring/200/Flavia	动力控制模块	√	√	√	√	√	√
2013	JS-Sebring/200/Flavia	防抱死制动	√	√	√	√	√	√
2013	JS-Sebring/200/Flavia	转向角传感器	√	√	√	√	√	
2013	JS-Sebring/200/Flavia	放大器	√	√	√	√	√	√

2013	JS-Sebring/200/Flavia	仪表组/车内节点	√	√	√	√	√	√
2013	JS-Sebring/200/Flavia	驾驶员门模块	√	√	√	√	√	
2013	JS-Sebring/200/Flavia	免提模块（电话）	√	√	√	√	√	
2013	JS-Sebring/200/Flavia	空调系统	√	√	√	√	√	√
2013	JS-Sebring/200/Flavia	安全气囊	√	√	√	√	√	√
2013	JS-Sebring/200/Flavia	乘员门模块	√	√	√	√	√	
2013	JS-Sebring/200/Flavia	收音机	√	√	√	√	√	
2013	JS-Sebring/200/Flavia	中央网关	√	√	√	√	√	√
2013	JS-Sebring/200/Flavia	无线控制	√	√	√	√	√	
2013	LX-300/Thema	动力控制模块	√	√	√	√	√	√
2013	LX-300/Thema	变速器控制模块	√	√	√	√	√	√
2013	LX-300/Thema	防抱死制动	√	√	√	√	√	√
2013	LX-300/Thema	自适应巡航控制系统	√	√	√	√	√	√
2013	LX-300/Thema	激活衰减控制模块	√	√	√	√	√	
2013	LX-300/Thema	自适应前部照明系统	√	√	√	√	√	√
2013	LX-300/Thema	车身控制器	√	√	√	√	√	√
2013	LX-300/Thema	行驶测试控制模块	√	√	√	√	√	
2013	LX-300/Thema	电力转向	√	√	√	√	√	√
2013	LX-300/Thema	电子换挡器	√	√	√	√	√	
2013	LX-300/Thema	仪表板组	√	√	√	√	√	√
2013	LX-300/Thema	安全气囊	√	√	√	√	√	√
2013	LX-300/Thema	无线电频率集线器	√	√	√	√	√	
2013	LX-300/Thema	轮胎压力监控	√	√	√	√	√	√
2013	LX-300/Thema	驾驶员门模块	√	√	√	√	√	
2013	LX-300/Thema	加热座椅模块	√	√	√	√	√	
2013	LX-300/Thema	空调系统	√	√	√	√	√	√
2013	LX-300/Thema	集成中央堆栈	√	√	√	√	√	
2013	LX-300/Thema	记忆座椅模块	√	√	√	√	√	
2013	LX-300/Thema	乘员门模块	√	√	√	√	√	

2013	LX-300/Thema	驻车定位系统(PTS)	√	√	√	√	√	
2013	LX-300/Thema	转向柱控制模块	√	√	√	√	√	
2013	LX-300/Thema	远程信息处理通道收音机	√	√	√	√	√	
2013	LX-300/Thema	放大器	√	√	√	√	√	√
2013	LX-300/Thema	免提模块（电话）	√	√	√	√	√	
2013	LX-300/Thema	干扰	√	√	√	√	√	
2013	LX-300/Thema	左盲点传感器	√	√	√	√	√	
2013	LX-300/Thema	右盲点传感器	√	√	√	√	√	
2013	NY-Ypsilon	车身控制器	√	√	√	√	√	√
2013	NY-Ypsilon	发动机控制模块	√	√	√	√	√	√
2013	NY-Ypsilon	电力转向	√	√	√	√	√	√
2013	NY-Ypsilon	仪表板组	√	√	√	√	√	√
2013	NY-Ypsilon	防抱死制动	√	√	√	√	√	√
2013	NY-Ypsilon	空调系统	√	√	√	√	√	√
2013	NY-Ypsilon	变速器控制模块	√	√	√	√	√	√
2013	NY-Ypsilon	安全气囊	√	√	√	√	√	√
2013	NY-Ypsilon	其它加热器模块	√	√	√	√	√	√
2013	RT-Town&Country/Voyager(大捷龙)	动力控制模块	√	√	√	√	√	√
2013	RT-Town&Country/Voyager(大捷龙)	变速器控制模块	√	√	√	√	√	√
2013	RT-Town&Country/Voyager(大捷龙)	防抱死制动	√	√	√	√	√	√
2013	RT-Town&Country/Voyager(大捷龙)	安全气囊	√	√	√	√	√	√
2013	RT-Town&Country/Voyager(大捷龙)	转向角传感器	√	√	√	√	√	
2013	RT-Town&Country/Voyager(大捷龙)	无线控制	√	√	√	√	√	
2013	RT-Town&Country/Voyager(大捷龙)	自动远光灯	√	√	√	√	√	√
2013	RT-Town&Country/Voyager(大捷龙)	放大器	√	√	√	√	√	√
2013	RT-Town&Country/Voyager(大捷龙)	仪表组/车内节点	√	√	√	√	√	√
2013	RT-Town&Country/Voyager(大捷龙)	左前车门模块	√	√	√	√	√	
2013	RT-Town&Country/Voyager(大捷龙)	右前车门模块	√	√	√	√	√	
2013	RT-Town&Country/Voyager(大捷龙)	左后车门模块	√	√	√	√	√	

2013	RT-Town&Country/Voyager (大捷龙)	右后车门模块	√	√	√	√	√	
2013	RT-Town&Country/Voyager (大捷龙)	DVD 换碟器	√	√	√	√	√	
2013	RT-Town&Country/Voyager (大捷龙)	折叠装载模块	√	√	√	√	√	
2013	RT-Town&Country/Voyager (大捷龙)	免提模块 (电话)	√	√	√	√	√	
2013	RT-Town&Country/Voyager (大捷龙)	高强度放电转换器	√	√	√	√	√	
2013	RT-Town&Country/Voyager (大捷龙)	加热座椅模块	√	√	√	√	√	
2013	RT-Town&Country/Voyager (大捷龙)	空调系统	√	√	√	√	√	√
2013	RT-Town&Country/Voyager (大捷龙)	干扰	√	√	√	√	√	
2013	RT-Town&Country/Voyager (大捷龙)	记忆座椅	√	√	√	√	√	
2013	RT-Town&Country/Voyager (大捷龙)	被动进入模块	√	√	√	√	√	
2013	RT-Town&Country/Voyager (大捷龙)	电动升降门	√	√	√	√	√	
2013	RT-Town&Country/Voyager (大捷龙)	电动滑门 (左)	√	√	√	√	√	
2013	RT-Town&Country/Voyager (大捷龙)	电动滑门 (右)	√	√	√	√	√	
2013	RT-Town&Country/Voyager (大捷龙)	驻车定位系统 (PTS)	√	√	√	√	√	
2013	RT-Town&Country/Voyager (大捷龙)	收音机	√	√	√	√	√	
2013	RT-Town&Country/Voyager (大捷龙)	天窗	√	√	√	√	√	
2013	RT-Town&Country/Voyager (大捷龙)	中央网关	√	√	√	√	√	√
2013	RT-Town&Country/Voyager (大捷龙)	第二行屏幕	√	√	√	√	√	
2013	RT-Town&Country/Voyager (大捷龙)	最后一行屏幕	√	√	√	√	√	
2013	RT-Town&Country/Voyager (大捷龙)	轮胎压力监控	√	√	√	√	√	√
2013	RT-Town&Country/Voyager (大捷龙)	电子行人保护模块	√	√	√	√	√	
2013	RT-Town&Country/Voyager (大捷龙)	左盲点传感器	√	√	√	√	√	
2013	RT-Town&Country/Voyager (大捷龙)	右盲点传感器	√	√	√	√	√	
2012	FF-500	动力控制模块	√	√	√	√	√	√
2012	FF-500	变速器控制模块	√	√	√	√	√	√
2012	FF-500	防抱死制动	√	√	√	√	√	√
2012	FF-500	电力转向	√	√	√	√	√	√
2012	FF-500	车身控制器	√	√	√	√	√	√
2012	FF-500	集中远程信息处理模块	√	√	√	√	√	

2012	FF-500	空调系统	√	√	√	√	√	√
2012	FF-500	仪表板组	√	√	√	√	√	√
2012	FF-500	安全气囊	√	√	√	√	√	√
2012	FF-500	驻车定位系统(PTS)	√	√	√	√	√	
2012	FF-500	收音机	√	√	√	√	√	
2012	FF-500	轮胎压力监控	√	√	√	√	√	√
2012	FF-500	车辆跟踪模块	√	√	√	√	√	
2012	JS-Sebring/200/Flavia	动力控制模块	√	√	√	√	√	√
2012	JS-Sebring/200/Flavia	防抱死制动	√	√	√	√	√	√
2012	JS-Sebring/200/Flavia	转向角传感器	√	√	√	√	√	
2012	JS-Sebring/200/Flavia	放大器	√	√	√	√	√	√
2012	JS-Sebring/200/Flavia	仪表组/车内节点	√	√	√	√	√	√
2012	JS-Sebring/200/Flavia	驾驶员门模块	√	√	√	√	√	
2012	JS-Sebring/200/Flavia	免提模块（电话）	√	√	√	√	√	
2012	JS-Sebring/200/Flavia	空调系统	√	√	√	√	√	√
2012	JS-Sebring/200/Flavia	安全气囊	√	√	√	√	√	√
2012	JS-Sebring/200/Flavia	乘员门模块	√	√	√	√	√	
2012	JS-Sebring/200/Flavia	收音机	√	√	√	√	√	
2012	JS-Sebring/200/Flavia	中央网关	√	√	√	√	√	√
2012	JS-Sebring/200/Flavia	无线控制	√	√	√	√	√	
2012	LX-300/Thema	动力控制模块	√	√	√	√	√	√
2012	LX-300/Thema	变速器控制模块	√	√	√	√	√	√
2012	LX-300/Thema	防抱死制动	√	√	√	√	√	√
2012	LX-300/Thema	自适应巡航控制系统	√	√	√	√	√	√
2012	LX-300/Thema	激活衰减控制模块	√	√	√	√	√	
2012	LX-300/Thema	自适应前部照明系统	√	√	√	√	√	√
2012	LX-300/Thema	车身控制器	√	√	√	√	√	√
2012	LX-300/Thema	行驶测试控制模块	√	√	√	√	√	
2012	LX-300/Thema	电力转向	√	√	√	√	√	√

2012	LX-300/Thema	电子换挡器	√	√	√	√	√	
2012	LX-300/Thema	仪表板组	√	√	√	√	√	√
2012	LX-300/Thema	安全气囊	√	√	√	√	√	√
2012	LX-300/Thema	无线电频率集线器	√	√	√	√	√	
2012	LX-300/Thema	轮胎压力监控	√	√	√	√	√	√
2012	LX-300/Thema	盲点检测模块	√	√	√	√	√	√
2012	LX-300/Thema	驾驶员门模块	√	√	√	√	√	
2012	LX-300/Thema	加热座椅模块	√	√	√	√	√	
2012	LX-300/Thema	空调系统	√	√	√	√	√	√
2012	LX-300/Thema	集成中央堆栈	√	√	√	√	√	
2012	LX-300/Thema	记忆座椅模块	√	√	√	√	√	
2012	LX-300/Thema	乘员门模块	√	√	√	√	√	
2012	LX-300/Thema	驻车定位系统(PTS)	√	√	√	√	√	
2012	LX-300/Thema	转向柱控制模块	√	√	√	√	√	
2012	LX-300/Thema	远程信息处理通道收音机	√	√	√	√	√	
2012	LX-300/Thema	放大器	√	√	√	√	√	√
2012	LX-300/Thema	免提模块（电话）	√	√	√	√	√	
2012	LX-300/Thema	干扰	√	√	√	√	√	
2012	RT-Town&Country/Voyager (大捷龙)	动力控制模块	√	√	√	√	√	√
2012	RT-Town&Country/Voyager (大捷龙)	变速器控制模块	√	√	√	√	√	√
2012	RT-Town&Country/Voyager (大捷龙)	防抱死制动	√	√	√	√	√	√
2012	RT-Town&Country/Voyager (大捷龙)	安全气囊	√	√	√	√	√	√
2012	RT-Town&Country/Voyager (大捷龙)	转向角传感器	√	√	√	√	√	
2012	RT-Town&Country/Voyager (大捷龙)	无线控制	√	√	√	√	√	
2012	RT-Town&Country/Voyager (大捷龙)	自动远光灯	√	√	√	√	√	√
2012	RT-Town&Country/Voyager (大捷龙)	放大器	√	√	√	√	√	√
2012	RT-Town&Country/Voyager (大捷龙)	盲点检测模块	√	√	√	√	√	√
2012	RT-Town&Country/Voyager (大捷龙)	仪表组/车内节点	√	√	√	√	√	√
2012	RT-Town&Country/Voyager (大捷龙)	左前车门模块	√	√	√	√	√	



2012	RT-Town&Country/Voyager (大捷龙)	右前车门模块	√	√	√	√	√	
2012	RT-Town&Country/Voyager (大捷龙)	左后车门模块	√	√	√	√	√	
2012	RT-Town&Country/Voyager (大捷龙)	右后车门模块	√	√	√	√	√	
2012	RT-Town&Country/Voyager (大捷龙)	DVD 换碟器	√	√	√	√	√	
2012	RT-Town&Country/Voyager (大捷龙)	折叠装载模块	√	√	√	√	√	
2012	RT-Town&Country/Voyager (大捷龙)	免提模块 (电话)	√	√	√	√	√	
2012	RT-Town&Country/Voyager (大捷龙)	高强度放电转换器	√	√	√	√	√	
2012	RT-Town&Country/Voyager (大捷龙)	加热座椅模块	√	√	√	√	√	
2012	RT-Town&Country/Voyager (大捷龙)	空调系统	√	√	√	√	√	√
2012	RT-Town&Country/Voyager (大捷龙)	干扰	√	√	√	√	√	
2012	RT-Town&Country/Voyager (大捷龙)	记忆座椅	√	√	√	√	√	
2012	RT-Town&Country/Voyager (大捷龙)	被动进入模块	√	√	√	√	√	
2012	RT-Town&Country/Voyager (大捷龙)	电动升降门	√	√	√	√	√	
2012	RT-Town&Country/Voyager (大捷龙)	电动滑门 (左)	√	√	√	√	√	
2012	RT-Town&Country/Voyager (大捷龙)	电动滑门 (右)	√	√	√	√	√	
2012	RT-Town&Country/Voyager (大捷龙)	驻车定位系统 (PTS)	√	√	√	√	√	
2012	RT-Town&Country/Voyager (大捷龙)	收音机	√	√	√	√	√	
2012	RT-Town&Country/Voyager (大捷龙)	天窗	√	√	√	√	√	
2012	RT-Town&Country/Voyager (大捷龙)	中央网关	√	√	√	√	√	√
2012	RT-Town&Country/Voyager (大捷龙)	第二行屏幕	√	√	√	√	√	
2012	RT-Town&Country/Voyager (大捷龙)	最后一行屏幕	√	√	√	√	√	
2012	RT-Town&Country/Voyager (大捷龙)	轮胎压力监控	√	√	√	√	√	√
2012	RT-Town&Country/Voyager (大捷龙)	电子行人保护模块	√	√	√	√	√	
2011	JS-Sebring/200/Flavia	动力控制模块	√	√	√	√	√	√
2011	JS-Sebring/200/Flavia	防抱死制动	√	√	√	√	√	√
2011	JS-Sebring/200/Flavia	全轮驱动	√	√	√	√	√	
2011	JS-Sebring/200/Flavia	转向角传感器	√	√	√	√	√	
2011	JS-Sebring/200/Flavia	放大器	√	√	√	√	√	√
2011	JS-Sebring/200/Flavia	仪表组/车内节点	√	√	√	√	√	√



2011	JS-Sebring/200/Flavia	驾驶员门模块	√	√	√	√	√	
2011	JS-Sebring/200/Flavia	免提模块（电话）	√	√	√	√	√	
2011	JS-Sebring/200/Flavia	空调系统	√	√	√	√	√	√
2011	JS-Sebring/200/Flavia	干扰	√	√	√	√	√	
2011	JS-Sebring/200/Flavia	安全气囊	√	√	√	√	√	√
2011	JS-Sebring/200/Flavia	乘员门模块	√	√	√	√	√	
2011	JS-Sebring/200/Flavia	收音机	√	√	√	√	√	
2011	JS-Sebring/200/Flavia	中央网关	√	√	√	√	√	√
2011	JS-Sebring/200/Flavia	最后一行屏幕	√	√	√	√	√	
2011	JS-Sebring/200/Flavia	无线控制	√	√	√	√	√	
2011	JS-Sebring/200/Flavia	变速器控制模块	√	√	√	√	√	√
2011	JS-Sebring/200/Flavia	电子换挡器	√	√	√	√	√	
2011	LX-300/Thema	动力控制模块	√	√	√	√	√	√
2011	LX-300/Thema	变速器控制模块	√	√	√	√	√	√
2011	LX-300/Thema	防抱死制动	√	√	√	√	√	√
2011	LX-300/Thema	自适应巡航控制系统	√	√	√	√	√	√
2011	LX-300/Thema	自适应前部照明系统	√	√	√	√	√	√
2011	LX-300/Thema	车身控制器	√	√	√	√	√	√
2011	LX-300/Thema	行驶测试控制模块	√	√	√	√	√	
2011	LX-300/Thema	电力转向	√	√	√	√	√	√
2011	LX-300/Thema	电子换挡器	√	√	√	√	√	
2011	LX-300/Thema	仪表板组	√	√	√	√	√	√
2011	LX-300/Thema	安全气囊	√	√	√	√	√	√
2011	LX-300/Thema	无线电频率集线器	√	√	√	√	√	
2011	LX-300/Thema	轮胎压力监控	√	√	√	√	√	√
2011	LX-300/Thema	盲点检测模块	√	√	√	√	√	√
2011	LX-300/Thema	驾驶员门模块	√	√	√	√	√	
2011	LX-300/Thema	加热座椅模块	√	√	√	√	√	
2011	LX-300/Thema	空调系统	√	√	√	√	√	√

2011	LX-300/Thema	集成中央堆栈	√	√	√	√	√	
2011	LX-300/Thema	记忆座椅模块	√	√	√	√	√	
2011	LX-300/Thema	乘员门模块	√	√	√	√	√	
2011	LX-300/Thema	驻车定位系统(PTS)	√	√	√	√	√	
2011	LX-300/Thema	转向柱控制模块	√	√	√	√	√	
2011	LX-300/Thema	远程信息处理通道收音机	√	√	√	√	√	
2011	LX-300/Thema	放大器	√	√	√	√	√	√
2011	LX-300/Thema	免提模块(电话)	√	√	√	√	√	
2011	NY-Ypsilon	车身控制器	√	√	√	√	√	√
2011	NY-Ypsilon	发动机控制模块	√	√	√	√	√	√
2011	NY-Ypsilon	电力转向	√	√	√	√	√	√
2011	NY-Ypsilon	仪表板组	√	√	√	√	√	√
2011	NY-Ypsilon	防抱死制动	√	√	√	√	√	√
2011	NY-Ypsilon	空调系统	√	√	√	√	√	√
2011	NY-Ypsilon	变速器控制模块	√	√	√	√	√	√
2011	NY-Ypsilon	安全气囊	√	√	√	√	√	√
2011	NY-Ypsilon	其它加热器模块	√	√	√	√	√	√
2011	RT-Town&Country/Voyager(大捷龙)	动力控制模块	√	√	√	√	√	√
2011	RT-Town&Country/Voyager(大捷龙)	变速器控制模块	√	√	√	√	√	√
2011	RT-Town&Country/Voyager(大捷龙)	防抱死制动	√	√	√	√	√	√
2011	RT-Town&Country/Voyager(大捷龙)	安全气囊	√	√	√	√	√	√
2011	RT-Town&Country/Voyager(大捷龙)	转向角传感器	√	√	√	√	√	
2011	RT-Town&Country/Voyager(大捷龙)	轮胎压力监控	√	√	√	√	√	√
2011	RT-Town&Country/Voyager(大捷龙)	无线控制	√	√	√	√	√	
2011	RT-Town&Country/Voyager(大捷龙)	自动远光灯	√	√	√	√	√	√
2011	RT-Town&Country/Voyager(大捷龙)	放大器	√	√	√	√	√	√
2011	RT-Town&Country/Voyager(大捷龙)	盲点检测模块	√	√	√	√	√	√
2011	RT-Town&Country/Voyager(大捷龙)	仪表组/车内节点	√	√	√	√	√	√
2011	RT-Town&Country/Voyager(大捷龙)	左前车门模块	√	√	√	√	√	

2011	RT-Town&Country/Voyager (大捷龙)	右前车门模块	√	√	√	√	√	
2011	RT-Town&Country/Voyager (大捷龙)	左后车门模块	√	√	√	√	√	
2011	RT-Town&Country/Voyager (大捷龙)	右后车门模块	√	√	√	√	√	
2011	RT-Town&Country/Voyager (大捷龙)	DVD 换碟器	√	√	√	√	√	
2011	RT-Town&Country/Voyager (大捷龙)	折叠装载模块	√	√	√	√	√	
2011	RT-Town&Country/Voyager (大捷龙)	免提模块 (电话)	√	√	√	√	√	
2011	RT-Town&Country/Voyager (大捷龙)	高强度放电转换器	√	√	√	√	√	
2011	RT-Town&Country/Voyager (大捷龙)	加热座椅模块	√	√	√	√	√	
2011	RT-Town&Country/Voyager (大捷龙)	空调系统	√	√	√	√	√	√
2011	RT-Town&Country/Voyager (大捷龙)	干扰	√	√	√	√	√	
2011	RT-Town&Country/Voyager (大捷龙)	记忆座椅	√	√	√	√	√	
2011	RT-Town&Country/Voyager (大捷龙)	被动进入模块	√	√	√	√	√	
2011	RT-Town&Country/Voyager (大捷龙)	电动升降门	√	√	√	√	√	
2011	RT-Town&Country/Voyager (大捷龙)	电动滑门 (左)	√	√	√	√	√	
2011	RT-Town&Country/Voyager (大捷龙)	电动滑门 (右)	√	√	√	√	√	
2011	RT-Town&Country/Voyager (大捷龙)	驻车定位系统 (PTS)	√	√	√	√	√	
2011	RT-Town&Country/Voyager (大捷龙)	收音机	√	√	√	√	√	
2011	RT-Town&Country/Voyager (大捷龙)	卫星视频接收器	√	√	√	√	√	
2011	RT-Town&Country/Voyager (大捷龙)	天窗	√	√	√	√	√	
2011	RT-Town&Country/Voyager (大捷龙)	中央网关	√	√	√	√	√	√
2011	RT-Town&Country/Voyager (大捷龙)	第二行屏幕	√	√	√	√	√	
2011	RT-Town&Country/Voyager (大捷龙)	最后一行屏幕	√	√	√	√	√	
2010	JS-Sebring/200/Flavia	动力控制模块	√	√	√	√	√	√
2010	JS-Sebring/200/Flavia	变速器控制模块	√	√	√	√	√	√
2010	JS-Sebring/200/Flavia	防抱死制动	√	√	√	√	√	√
2010	JS-Sebring/200/Flavia	全轮驱动	√	√	√	√	√	
2010	JS-Sebring/200/Flavia	转向角传感器	√	√	√	√	√	
2010	JS-Sebring/200/Flavia	放大器	√	√	√	√	√	√
2010	JS-Sebring/200/Flavia	仪表组/车内节点	√	√	√	√	√	√

2010	JS-Sebring/200/Flavia	驾驶员门模块	√	√	√	√	√	
2010	JS-Sebring/200/Flavia	免提模块（电话）	√	√	√	√	√	
2010	JS-Sebring/200/Flavia	空调系统	√	√	√	√	√	√
2010	JS-Sebring/200/Flavia	干扰	√	√	√	√	√	
2010	JS-Sebring/200/Flavia	安全气囊	√	√	√	√	√	√
2010	JS-Sebring/200/Flavia	乘员门模块	√	√	√	√	√	
2010	JS-Sebring/200/Flavia	收音机	√	√	√	√	√	
2010	JS-Sebring/200/Flavia	中央网关	√	√	√	√	√	√
2010	JS-Sebring/200/Flavia	最后一行屏幕	√	√	√	√	√	
2010	JS-Sebring/200/Flavia	无线控制	√	√	√	√	√	
2010	LX-300/Thema	动力控制模块	√	√	√	√	√	√
2010	LX-300/Thema	变速器控制模块	√	√	√	√	√	√
2010	LX-300/Thema	防抱死制动	√	√	√	√	√	√
2010	LX-300/Thema	自适应巡航控制系统	√	√	√	√	√	√
2010	LX-300/Thema	行驶测试控制模块	√	√	√	√	√	
2010	LX-300/Thema	电子换挡器	√	√	√	√	√	
2010	LX-300/Thema	安全气囊	√	√	√	√	√	√
2010	LX-300/Thema	无线控制	√	√	√	√	√	
2010	LX-300/Thema	轮胎压力监控	√	√	√	√	√	√
2010	LX-300/Thema	自动远光灯	√	√	√	√	√	√
2010	LX-300/Thema	放大器	√	√	√	√	√	√
2010	LX-300/Thema	仪表组/车内节点	√	√	√	√	√	√
2010	LX-300/Thema	驾驶员门模块	√	√	√	√	√	
2010	LX-300/Thema	电子顶置	√	√	√	√	√	
2010	LX-300/Thema	中央网关	√	√	√	√	√	√
2010	LX-300/Thema	免提模块（电话）	√	√	√	√	√	
2010	LX-300/Thema	高强度放电转换器	√	√	√	√	√	
2010	LX-300/Thema	加热座椅模块	√	√	√	√	√	
2010	LX-300/Thema	空调系统	√	√	√	√	√	√

2010	LX-300/Thema	干扰	√	√	√	√	√	
2010	LX-300/Thema	光照雨水传感器模块	√	√	√	√	√	
2010	LX-300/Thema	记忆座椅	√	√	√	√	√	
2010	LX-300/Thema	乘员门模块	√	√	√	√	√	
2010	LX-300/Thema	警察/出租车接口模块	√	√	√	√	√	
2010	LX-300/Thema	驻车定位系统(PTS)	√	√	√	√	√	
2010	LX-300/Thema	收音机	√	√	√	√	√	
2010	LX-300/Thema	转向柱	√	√	√	√	√	
2010	LX-300/Thema	卫星视频接收器	√	√	√	√	√	
2010	LX-300/Thema	天窗	√	√	√	√	√	
2010	LX-300/Thema	最后一行屏幕	√	√	√	√	√	
2010	LX-300/Thema	被动进入模块	√	√	√	√	√	
2010	PT-PT Cruiser(漫步者)	动力控制模块	√	√	√	√	√	√
2010	PT-PT Cruiser(漫步者)	变速器控制模块	√	√	√	√	√	√
2010	PT-PT Cruiser(漫步者)	防抱死制动	√	√	√	√	√	√
2010	PT-PT Cruiser(漫步者)	放大器	√	√	√	√	√	√
2010	PT-PT Cruiser(漫步者)	仪表组/车内节点	√	√	√	√	√	√
2010	PT-PT Cruiser(漫步者)	驾驶员门模块	√	√	√	√	√	
2010	PT-PT Cruiser(漫步者)	免提模块(电话)	√	√	√	√	√	
2010	PT-PT Cruiser(漫步者)	干扰	√	√	√	√	√	
2010	PT-PT Cruiser(漫步者)	乘员分类	√	√	√	√	√	
2010	PT-PT Cruiser(漫步者)	安全气囊	√	√	√	√	√	√
2010	PT-PT Cruiser(漫步者)	乘员门模块	√	√	√	√	√	
2010	PT-PT Cruiser(漫步者)	收音机	√	√	√	√	√	
2010	PT-PT Cruiser(漫步者)	卫星无线电	√	√	√	√	√	
2010	PT-PT Cruiser(漫步者)	中央网关	√	√	√	√	√	√
2010	PT-PT Cruiser(漫步者)	无线控制	√	√	√	√	√	
2010	RT-Town&Country/Voyager(大捷龙)	动力控制模块	√	√	√	√	√	√
2010	RT-Town&Country/Voyager(大捷龙)	变速器控制模块	√	√	√	√	√	√

2010	RT-Town&Country/Voyager (大捷龙)	防抱死制动	√	√	√	√	√	√
2010	RT-Town&Country/Voyager (大捷龙)	安全气囊	√	√	√	√	√	√
2010	RT-Town&Country/Voyager (大捷龙)	转向角传感器	√	√	√	√	√	
2010	RT-Town&Country/Voyager (大捷龙)	无线控制	√	√	√	√	√	
2010	RT-Town&Country/Voyager (大捷龙)	自动远光灯	√	√	√	√	√	√
2010	RT-Town&Country/Voyager (大捷龙)	放大器	√	√	√	√	√	√
2010	RT-Town&Country/Voyager (大捷龙)	盲点检测模块	√	√	√	√	√	√
2010	RT-Town&Country/Voyager (大捷龙)	仪表组/车内节点	√	√	√	√	√	√
2010	RT-Town&Country/Voyager (大捷龙)	左前车门模块	√	√	√	√	√	
2010	RT-Town&Country/Voyager (大捷龙)	右前车门模块	√	√	√	√	√	
2010	RT-Town&Country/Voyager (大捷龙)	左后车门模块	√	√	√	√	√	
2010	RT-Town&Country/Voyager (大捷龙)	右后车门模块	√	√	√	√	√	
2010	RT-Town&Country/Voyager (大捷龙)	DVD 换碟器	√	√	√	√	√	
2010	RT-Town&Country/Voyager (大捷龙)	折叠装载模块	√	√	√	√	√	
2010	RT-Town&Country/Voyager (大捷龙)	免提模块 (电话)	√	√	√	√	√	
2010	RT-Town&Country/Voyager (大捷龙)	高强度放电转换器	√	√	√	√	√	
2010	RT-Town&Country/Voyager (大捷龙)	空调系统	√	√	√	√	√	√
2010	RT-Town&Country/Voyager (大捷龙)	干扰	√	√	√	√	√	
2010	RT-Town&Country/Voyager (大捷龙)	记忆座椅	√	√	√	√	√	
2010	RT-Town&Country/Voyager (大捷龙)	电动升降门	√	√	√	√	√	
2010	RT-Town&Country/Voyager (大捷龙)	电动滑门 (左)	√	√	√	√	√	
2010	RT-Town&Country/Voyager (大捷龙)	电动滑门 (右)	√	√	√	√	√	
2010	RT-Town&Country/Voyager (大捷龙)	驻车定位系统 (PTS)	√	√	√	√	√	
2010	RT-Town&Country/Voyager (大捷龙)	收音机	√	√	√	√	√	
2010	RT-Town&Country/Voyager (大捷龙)	卫星视频接收器	√	√	√	√	√	
2010	RT-Town&Country/Voyager (大捷龙)	天窗	√	√	√	√	√	
2010	RT-Town&Country/Voyager (大捷龙)	中央网关	√	√	√	√	√	√
2010	RT-Town&Country/Voyager (大捷龙)	第二行屏幕	√	√	√	√	√	
2010	RT-Town&Country/Voyager (大捷龙)	最后一行屏幕	√	√	√	√	√	

2009	HG-Aspen	动力控制模块	√	√	√	√	√	√
2009	HG-Aspen	变速器控制模块	√	√	√	√	√	√
2009	HG-Aspen	防抱死制动	√	√	√	√	√	√
2009	HG-Aspen	附件电源模块	√	√	√	√	√	√
2009	HG-Aspen	电池组控制模块	√	√	√	√	√	√
2009	HG-Aspen	电动空调压缩机	√	√	√	√	√	
2009	HG-Aspen	电力转向	√	√	√	√	√	√
2009	HG-Aspen	最终驱动控制/全部车轮驱动	√	√	√	√	√	
2009	HG-Aspen	混合控制处理器	√	√	√	√	√	
2009	HG-Aspen	混合网关模块	√	√	√	√	√	
2009	HG-Aspen	马达控制处理器 A	√	√	√	√	√	
2009	HG-Aspen	马达控制处理器 B	√	√	√	√	√	
2009	HG-Aspen	转向角传感器	√	√	√	√	√	
2009	HG-Aspen	放大器	√	√	√	√	√	√
2009	HG-Aspen	仪表组/车内节点	√	√	√	√	√	√
2009	HG-Aspen	驾驶员门模块	√	√	√	√	√	
2009	HG-Aspen	电子顶置	√	√	√	√	√	
2009	HG-Aspen	中央网关	√	√	√	√	√	√
2009	HG-Aspen	免提模块（电话）	√	√	√	√	√	
2009	HG-Aspen	加热座椅模块	√	√	√	√	√	
2009	HG-Aspen	空调系统	√	√	√	√	√	√
2009	HG-Aspen	记忆座椅	√	√	√	√	√	
2009	HG-Aspen	安全气囊	√	√	√	√	√	√
2009	HG-Aspen	乘员门模块	√	√	√	√	√	
2009	HG-Aspen	电动升降门	√	√	√	√	√	
2009	HG-Aspen	驻车定位系统 (PTS)	√	√	√	√	√	
2009	HG-Aspen	收音机	√	√	√	√	√	
2009	HG-Aspen	卫星视频接收器	√	√	√	√	√	
2009	HG-Aspen	最后一行屏幕	√	√	√	√	√	



2009	HG-Aspen	无线控制	√	√	√	√	√	
2009	JS-Sebring/200/Flavia	动力控制模块	√	√	√	√	√	√
2009	JS-Sebring/200/Flavia	变速器控制模块	√	√	√	√	√	√
2009	JS-Sebring/200/Flavia	防抱死制动	√	√	√	√	√	√
2009	JS-Sebring/200/Flavia	全轮驱动	√	√	√	√	√	
2009	JS-Sebring/200/Flavia	转向角传感器	√	√	√	√	√	
2009	JS-Sebring/200/Flavia	放大器	√	√	√	√	√	√
2009	JS-Sebring/200/Flavia	仪表组/车内节点	√	√	√	√	√	√
2009	JS-Sebring/200/Flavia	驾驶员门模块	√	√	√	√	√	
2009	JS-Sebring/200/Flavia	免提模块（电话）	√	√	√	√	√	
2009	JS-Sebring/200/Flavia	空调系统	√	√	√	√	√	√
2009	JS-Sebring/200/Flavia	干扰	√	√	√	√	√	
2009	JS-Sebring/200/Flavia	安全气囊	√	√	√	√	√	√
2009	JS-Sebring/200/Flavia	乘员门模块	√	√	√	√	√	
2009	JS-Sebring/200/Flavia	收音机	√	√	√	√	√	
2009	JS-Sebring/200/Flavia	中央网关	√	√	√	√	√	√
2009	JS-Sebring/200/Flavia	最后一行屏幕	√	√	√	√	√	
2009	JS-Sebring/200/Flavia	无线控制	√	√	√	√	√	
2009	LX-300/Thema	动力控制模块	√	√	√	√	√	√
2009	LX-300/Thema	变速器控制模块	√	√	√	√	√	√
2009	LX-300/Thema	防抱死制动	√	√	√	√	√	√
2009	LX-300/Thema	自适应巡航控制系统	√	√	√	√	√	√
2009	LX-300/Thema	行驶测试控制模块	√	√	√	√	√	
2009	LX-300/Thema	电子换挡器	√	√	√	√	√	
2009	LX-300/Thema	安全气囊	√	√	√	√	√	√
2009	LX-300/Thema	无线控制	√	√	√	√	√	
2009	LX-300/Thema	轮胎压力监控	√	√	√	√	√	√
2009	LX-300/Thema	自动远光灯	√	√	√	√	√	√
2009	LX-300/Thema	放大器	√	√	√	√	√	√



2009	LX-300/Thema	仪表组/车内节点	√	√	√	√	√	√
2009	LX-300/Thema	驾驶员门模块	√	√	√	√	√	
2009	LX-300/Thema	电子顶置	√	√	√	√	√	
2009	LX-300/Thema	中央网关	√	√	√	√	√	√
2009	LX-300/Thema	免提模块（电话）	√	√	√	√	√	
2009	LX-300/Thema	高强度放电转换器	√	√	√	√	√	
2009	LX-300/Thema	加热座椅模块	√	√	√	√	√	
2009	LX-300/Thema	空调系统	√	√	√	√	√	√
2009	LX-300/Thema	干扰	√	√	√	√	√	
2009	LX-300/Thema	光照雨水传感器模块	√	√	√	√	√	
2009	LX-300/Thema	记忆座椅	√	√	√	√	√	
2009	LX-300/Thema	乘员门模块	√	√	√	√	√	
2009	LX-300/Thema	警察/出租车接口模块	√	√	√	√	√	
2009	LX-300/Thema	驻车定位系统(PTS)	√	√	√	√	√	
2009	LX-300/Thema	收音机	√	√	√	√	√	
2009	LX-300/Thema	转向柱	√	√	√	√	√	
2009	LX-300/Thema	卫星视频接收器	√	√	√	√	√	
2009	LX-300/Thema	天窗	√	√	√	√	√	
2009	LX-300/Thema	最后一行屏幕	√	√	√	√	√	
2009	LX-300/Thema	被动进入模块	√	√	√	√	√	
2009	PT-PT Cruiser(漫步者)	动力控制模块	√	√	√	√	√	√
2009	PT-PT Cruiser(漫步者)	变速器控制模块	√	√	√	√	√	√
2009	PT-PT Cruiser(漫步者)	防抱死制动	√	√	√	√	√	√
2009	PT-PT Cruiser(漫步者)	放大器	√	√	√	√	√	√
2009	PT-PT Cruiser(漫步者)	仪表组/车内节点	√	√	√	√	√	√
2009	PT-PT Cruiser(漫步者)	驾驶员门模块	√	√	√	√	√	
2009	PT-PT Cruiser(漫步者)	免提模块（电话）	√	√	√	√	√	
2009	PT-PT Cruiser(漫步者)	干扰	√	√	√	√	√	
2009	PT-PT Cruiser(漫步者)	乘员分类	√	√	√	√	√	

2009	PT-PT Cruiser(漫步者)	安全气囊	√	√	√	√	√	√
2009	PT-PT Cruiser(漫步者)	乘员门模块	√	√	√	√	√	
2009	PT-PT Cruiser(漫步者)	收音机	√	√	√	√	√	
2009	PT-PT Cruiser(漫步者)	卫星无线电	√	√	√	√	√	
2009	PT-PT Cruiser(漫步者)	中央网关	√	√	√	√	√	√
2009	PT-PT Cruiser(漫步者)	无线控制	√	√	√	√	√	
2009	RT-Town&Country/Voyager(大捷龙)	动力控制模块	√	√	√	√	√	√
2009	RT-Town&Country/Voyager(大捷龙)	变速器控制模块	√	√	√	√	√	√
2009	RT-Town&Country/Voyager(大捷龙)	防抱死制动	√	√	√	√	√	√
2009	RT-Town&Country/Voyager(大捷龙)	安全气囊	√	√	√	√	√	√
2009	RT-Town&Country/Voyager(大捷龙)	转向角传感器	√	√	√	√	√	
2009	RT-Town&Country/Voyager(大捷龙)	无线控制	√	√	√	√	√	
2009	RT-Town&Country/Voyager(大捷龙)	自动远光灯	√	√	√	√	√	√
2009	RT-Town&Country/Voyager(大捷龙)	放大器	√	√	√	√	√	√
2009	RT-Town&Country/Voyager(大捷龙)	盲点检测模块	√	√	√	√	√	√
2009	RT-Town&Country/Voyager(大捷龙)	仪表组/车内节点	√	√	√	√	√	√
2009	RT-Town&Country/Voyager(大捷龙)	左前车门模块	√	√	√	√	√	
2009	RT-Town&Country/Voyager(大捷龙)	右前车门模块	√	√	√	√	√	
2009	RT-Town&Country/Voyager(大捷龙)	左后车门模块	√	√	√	√	√	
2009	RT-Town&Country/Voyager(大捷龙)	右后车门模块	√	√	√	√	√	
2009	RT-Town&Country/Voyager(大捷龙)	DVD 换碟器	√	√	√	√	√	
2009	RT-Town&Country/Voyager(大捷龙)	折叠装载模块	√	√	√	√	√	
2009	RT-Town&Country/Voyager(大捷龙)	免提模块(电话)	√	√	√	√	√	
2009	RT-Town&Country/Voyager(大捷龙)	高强度放电转换器	√	√	√	√	√	
2009	RT-Town&Country/Voyager(大捷龙)	空调系统	√	√	√	√	√	√
2009	RT-Town&Country/Voyager(大捷龙)	干扰	√	√	√	√	√	
2009	RT-Town&Country/Voyager(大捷龙)	记忆座椅	√	√	√	√	√	
2009	RT-Town&Country/Voyager(大捷龙)	电动升降门	√	√	√	√	√	
2009	RT-Town&Country/Voyager(大捷龙)	电动滑门(左)	√	√	√	√	√	

2009	RT-Town&Country/Voyager (大捷龙)	电动滑门 (右)	√	√	√	√	√	
2009	RT-Town&Country/Voyager (大捷龙)	驻车定位系统 (PTS)	√	√	√	√	√	
2009	RT-Town&Country/Voyager (大捷龙)	收音机	√	√	√	√	√	
2009	RT-Town&Country/Voyager (大捷龙)	卫星视频接收器	√	√	√	√	√	
2009	RT-Town&Country/Voyager (大捷龙)	天窗	√	√	√	√	√	
2009	RT-Town&Country/Voyager (大捷龙)	中央网关	√	√	√	√	√	√
2009	RT-Town&Country/Voyager (大捷龙)	第二行屏幕	√	√	√	√	√	
2009	RT-Town&Country/Voyager (大捷龙)	最后一行屏幕	√	√	√	√	√	
2009	VB-Sprinter	防抱死制动	√	√	√	√	√	√
2009	VB-Sprinter	前大灯调平	√	√	√	√	√	√
2009	VB-Sprinter	仪表组/车内节点	√	√	√	√	√	√
2009	VB-Sprinter	发动机控制模块	√	√	√	√	√	√
2009	VB-Sprinter	电子点火开关/中央网关	√	√	√	√	√	
2009	VB-Sprinter	电子换挡器	√	√	√	√	√	
2009	VB-Sprinter	转向柱	√	√	√	√	√	
2009	VB-Sprinter	变速器控制模块	√	√	√	√	√	√
2009	VB-Sprinter	辅助车舱加热器 (STH)	√	√	√	√	√	
2009	VB-Sprinter	辅助电加热模块	√	√	√	√	√	
2009	VB-Sprinter	促进器内加热器模块 (ZHZ)	√	√	√	√	√	
2009	VB-Sprinter	车身控制器	√	√	√	√	√	√
2009	VB-Sprinter	驾驶员门模块	√	√	√	√	√	
2009	VB-Sprinter	空调系统	√	√	√	√	√	√
2009	VB-Sprinter	安全气囊	√	√	√	√	√	√
2009	VB-Sprinter	电动滑门 (左)	√	√	√	√	√	
2009	VB-Sprinter	电动滑门 (右)	√	√	√	√	√	
2009	VB-Sprinter	通用/专用ECU	√	√	√	√	√	
2009	VB-Sprinter	驻车定位系统 (PTS)	√	√	√	√	√	
2009	VB-Sprinter	收音机	√	√	√	√	√	
2009	VB-Sprinter	天窗控制模块	√	√	√	√	√	

2009	VB-Sprinter	中央控制台/开关组模块	√	√	√	√	√	
2009	VB-Sprinter	挂车	√	√	√	√	√	
2009	VB-Sprinter	轮胎压力监控	√	√	√	√	√	√
2008	CS-Pacifica	动力控制模块	√	√	√	√	√	√
2008	CS-Pacifica	防抱死制动	√	√	√	√	√	√
2008	CS-Pacifica	全轮驱动	√	√	√	√	√	
2008	CS-Pacifica	转向角传感器	√	√	√	√	√	
2008	CS-Pacifica	车身控制模块和中央网关	√	√	√	√	√	√
2008	CS-Pacifica	安全气囊	√	√	√	√	√	√
2008	CS-Pacifica	电动升降门	√	√	√	√	√	
2008	HG-Aspen	动力控制模块	√	√	√	√	√	√
2008	HG-Aspen	防抱死制动	√	√	√	√	√	√
2008	HG-Aspen	转向角传感器	√	√	√	√	√	
2008	HG-Aspen	放大器	√	√	√	√	√	√
2008	HG-Aspen	仪表组/车内节点	√	√	√	√	√	√
2008	HG-Aspen	驾驶员门模块	√	√	√	√	√	
2008	HG-Aspen	电子顶置	√	√	√	√	√	
2008	HG-Aspen	中央网关	√	√	√	√	√	√
2008	HG-Aspen	免提模块（电话）	√	√	√	√	√	
2008	HG-Aspen	加热座椅模块	√	√	√	√	√	
2008	HG-Aspen	空调系统	√	√	√	√	√	√
2008	HG-Aspen	记忆座椅	√	√	√	√	√	
2008	HG-Aspen	安全气囊	√	√	√	√	√	√
2008	HG-Aspen	乘员门模块	√	√	√	√	√	
2008	HG-Aspen	电动升降门	√	√	√	√	√	
2008	HG-Aspen	驻车定位系统 (PTS)	√	√	√	√	√	
2008	HG-Aspen	收音机	√	√	√	√	√	
2008	HG-Aspen	最后一行屏幕	√	√	√	√	√	
2008	HG-Aspen	无线控制	√	√	√	√	√	

2008	HG-Aspen	警察/出租车接口模块	√	√	√	√	√	
2008	JS-Sebring/200/Flavia	动力控制模块	√	√	√	√	√	√
2008	JS-Sebring/200/Flavia	变速器控制模块	√	√	√	√	√	√
2008	JS-Sebring/200/Flavia	防抱死制动	√	√	√	√	√	√
2008	JS-Sebring/200/Flavia	全轮驱动	√	√	√	√	√	
2008	JS-Sebring/200/Flavia	转向角传感器	√	√	√	√	√	
2008	JS-Sebring/200/Flavia	放大器	√	√	√	√	√	√
2008	JS-Sebring/200/Flavia	仪表组/车内节点	√	√	√	√	√	√
2008	JS-Sebring/200/Flavia	驾驶员门模块	√	√	√	√	√	
2008	JS-Sebring/200/Flavia	免提模块（电话）	√	√	√	√	√	
2008	JS-Sebring/200/Flavia	空调系统	√	√	√	√	√	√
2008	JS-Sebring/200/Flavia	干扰	√	√	√	√	√	
2008	JS-Sebring/200/Flavia	安全气囊	√	√	√	√	√	√
2008	JS-Sebring/200/Flavia	乘员门模块	√	√	√	√	√	
2008	JS-Sebring/200/Flavia	收音机	√	√	√	√	√	
2008	JS-Sebring/200/Flavia	中央网关	√	√	√	√	√	√
2008	JS-Sebring/200/Flavia	最后一行屏幕	√	√	√	√	√	
2008	JS-Sebring/200/Flavia	无线控制	√	√	√	√	√	
2008	LX-300/Thema	动力控制模块	√	√	√	√	√	√
2008	LX-300/Thema	变速器控制模块	√	√	√	√	√	√
2008	LX-300/Thema	防抱死制动	√	√	√	√	√	√
2008	LX-300/Thema	自适应巡航控制系统	√	√	√	√	√	√
2008	LX-300/Thema	电子换挡器	√	√	√	√	√	
2008	LX-300/Thema	安全气囊	√	√	√	√	√	√
2008	LX-300/Thema	中央网关	√	√	√	√	√	√
2008	LX-300/Thema	无线控制	√	√	√	√	√	
2008	LX-300/Thema	自动远光灯	√	√	√	√	√	√
2008	LX-300/Thema	放大器	√	√	√	√	√	√
2008	LX-300/Thema	仪表组/车内节点	√	√	√	√	√	√

2008	LX-300/Thema	驾驶员门模块	√	√	√	√	√	
2008	LX-300/Thema	电子顶置	√	√	√	√	√	
2008	LX-300/Thema	免提模块（电话）	√	√	√	√	√	
2008	LX-300/Thema	高强度放电转换器	√	√	√	√	√	
2008	LX-300/Thema	加热座椅模块	√	√	√	√	√	
2008	LX-300/Thema	空调系统	√	√	√	√	√	√
2008	LX-300/Thema	干扰	√	√	√	√	√	
2008	LX-300/Thema	光照雨水传感器模块	√	√	√	√	√	
2008	LX-300/Thema	记忆座椅	√	√	√	√	√	
2008	LX-300/Thema	乘员门模块	√	√	√	√	√	
2008	LX-300/Thema	警察/出租车接口模块	√	√	√	√	√	
2008	LX-300/Thema	驻车定位系统 (PTS)	√	√	√	√	√	
2008	LX-300/Thema	收音机	√	√	√	√	√	
2008	LX-300/Thema	转向柱	√	√	√	√	√	
2008	LX-300/Thema	卫星视频接收器	√	√	√	√	√	
2008	LX-300/Thema	天窗	√	√	√	√	√	
2008	LX-300/Thema	最后一行屏幕	√	√	√	√	√	
2008	PT-PT Cruiser (漫步者)	动力控制模块	√	√	√	√	√	√
2008	PT-PT Cruiser (漫步者)	变速器控制模块	√	√	√	√	√	√
2008	PT-PT Cruiser (漫步者)	防抱死制动	√	√	√	√	√	√
2008	PT-PT Cruiser (漫步者)	放大器	√	√	√	√	√	√
2008	PT-PT Cruiser (漫步者)	仪表组/车内节点	√	√	√	√	√	√
2008	PT-PT Cruiser (漫步者)	驾驶员门模块	√	√	√	√	√	
2008	PT-PT Cruiser (漫步者)	免提模块（电话）	√	√	√	√	√	
2008	PT-PT Cruiser (漫步者)	干扰	√	√	√	√	√	
2008	PT-PT Cruiser (漫步者)	乘员分类	√	√	√	√	√	
2008	PT-PT Cruiser (漫步者)	安全气囊	√	√	√	√	√	√
2008	PT-PT Cruiser (漫步者)	乘员门模块	√	√	√	√	√	
2008	PT-PT Cruiser (漫步者)	收音机	√	√	√	√	√	

2008	PT-PT Cruiser(漫步者)	卫星无线电	√	√	√	√	√	
2008	PT-PT Cruiser(漫步者)	中央网关	√	√	√	√	√	√
2008	PT-PT Cruiser(漫步者)	无线控制	√	√	√	√	√	
2008	RT-Town&Country/Voyager(大捷龙)	动力控制模块	√	√	√	√	√	√
2008	RT-Town&Country/Voyager(大捷龙)	变速器控制模块	√	√	√	√	√	√
2008	RT-Town&Country/Voyager(大捷龙)	防抱死制动	√	√	√	√	√	√
2008	RT-Town&Country/Voyager(大捷龙)	安全气囊	√	√	√	√	√	√
2008	RT-Town&Country/Voyager(大捷龙)	转向角传感器	√	√	√	√	√	
2008	RT-Town&Country/Voyager(大捷龙)	无线控制	√	√	√	√	√	
2008	RT-Town&Country/Voyager(大捷龙)	放大器	√	√	√	√	√	√
2008	RT-Town&Country/Voyager(大捷龙)	仪表组/车内节点	√	√	√	√	√	√
2008	RT-Town&Country/Voyager(大捷龙)	左前车门模块	√	√	√	√	√	
2008	RT-Town&Country/Voyager(大捷龙)	右前车门模块	√	√	√	√	√	
2008	RT-Town&Country/Voyager(大捷龙)	左后车门模块	√	√	√	√	√	
2008	RT-Town&Country/Voyager(大捷龙)	右后车门模块	√	√	√	√	√	
2008	RT-Town&Country/Voyager(大捷龙)	DVD 换碟器	√	√	√	√	√	
2008	RT-Town&Country/Voyager(大捷龙)	折叠装载模块	√	√	√	√	√	
2008	RT-Town&Country/Voyager(大捷龙)	免提模块(电话)	√	√	√	√	√	
2008	RT-Town&Country/Voyager(大捷龙)	高强度放电转换器	√	√	√	√	√	
2008	RT-Town&Country/Voyager(大捷龙)	空调系统	√	√	√	√	√	√
2008	RT-Town&Country/Voyager(大捷龙)	干扰	√	√	√	√	√	
2008	RT-Town&Country/Voyager(大捷龙)	记忆座椅	√	√	√	√	√	
2008	RT-Town&Country/Voyager(大捷龙)	电动升降门	√	√	√	√	√	
2008	RT-Town&Country/Voyager(大捷龙)	电动滑门(左)	√	√	√	√	√	
2008	RT-Town&Country/Voyager(大捷龙)	电动滑门(右)	√	√	√	√	√	
2008	RT-Town&Country/Voyager(大捷龙)	驻车定位系统(PTS)	√	√	√	√	√	
2008	RT-Town&Country/Voyager(大捷龙)	收音机	√	√	√	√	√	
2008	RT-Town&Country/Voyager(大捷龙)	卫星视频接收器	√	√	√	√	√	
2008	RT-Town&Country/Voyager(大捷龙)	天窗	√	√	√	√	√	



2008	RT-Town&Country/Voyager(大捷龙)	中央网关	√	√	√	√	√	√
2008	RT-Town&Country/Voyager(大捷龙)	第二行屏幕	√	√	√	√	√	
2008	RT-Town&Country/Voyager(大捷龙)	最后一行屏幕	√	√	√	√	√	
2008	VB-Sprinter	防抱死制动	√	√	√	√	√	√
2008	VB-Sprinter	前大灯调平	√	√	√	√	√	√
2008	VB-Sprinter	仪表组/车内节点	√	√	√	√	√	√
2008	VB-Sprinter	发动机控制模块	√	√	√	√	√	√
2008	VB-Sprinter	电子点火开关/中央网关	√	√	√	√	√	
2008	VB-Sprinter	电子换挡器	√	√	√	√	√	
2008	VB-Sprinter	转向柱	√	√	√	√	√	
2008	VB-Sprinter	变速器控制模块	√	√	√	√	√	√
2008	VB-Sprinter	辅助车舱加热器 (STH)	√	√	√	√	√	
2008	VB-Sprinter	辅助电加热模块	√	√	√	√	√	
2008	VB-Sprinter	促进器内加热器模块 (ZHZ)	√	√	√	√	√	
2008	VB-Sprinter	车身控制器	√	√	√	√	√	√
2008	VB-Sprinter	驾驶员门模块	√	√	√	√	√	
2008	VB-Sprinter	空调系统	√	√	√	√	√	√
2008	VB-Sprinter	安全气囊	√	√	√	√	√	√
2008	VB-Sprinter	电动滑门（左）	√	√	√	√	√	
2008	VB-Sprinter	电动滑门（右）	√	√	√	√	√	
2008	VB-Sprinter	通用/专用ECU	√	√	√	√	√	
2008	VB-Sprinter	驻车定位系统 (PTS)	√	√	√	√	√	
2008	VB-Sprinter	收音机	√	√	√	√	√	
2008	VB-Sprinter	天窗控制模块	√	√	√	√	√	
2008	VB-Sprinter	中央控制台/开关组模块	√	√	√	√	√	
2008	VB-Sprinter	挂车	√	√	√	√	√	
2008	VB-Sprinter	轮胎压力监控	√	√	√	√	√	√
2008	ZH-Crossfire	乘员分类	√	√	√	√	√	
2008	ZH-Crossfire	安全气囊	√	√	√	√	√	√

2007	CS-Pacifica	动力控制模块	√	√	√	√	√	√
2007	CS-Pacifica	防抱死制动	√	√	√	√	√	√
2007	CS-Pacifica	全轮驱动	√	√	√	√	√	
2007	CS-Pacifica	转向角传感器	√	√	√	√	√	
2007	CS-Pacifica	车身控制模块和中央网关	√	√	√	√	√	√
2007	CS-Pacifica	安全气囊	√	√	√	√	√	√
2007	CS-Pacifica	电动升降门	√	√	√	√	√	
2007	HG-Aspen	动力控制模块	√	√	√	√	√	√
2007	HG-Aspen	防抱死制动	√	√	√	√	√	√
2007	HG-Aspen	转向角传感器	√	√	√	√	√	
2007	HG-Aspen	放大器	√	√	√	√	√	√
2007	HG-Aspen	仪表组/车内节点	√	√	√	√	√	√
2007	HG-Aspen	驾驶员门模块	√	√	√	√	√	
2007	HG-Aspen	电子顶置	√	√	√	√	√	
2007	HG-Aspen	中央网关	√	√	√	√	√	√
2007	HG-Aspen	免提模块（电话）	√	√	√	√	√	
2007	HG-Aspen	加热座椅模块	√	√	√	√	√	
2007	HG-Aspen	空调系统	√	√	√	√	√	√
2007	HG-Aspen	记忆座椅	√	√	√	√	√	
2007	HG-Aspen	安全气囊	√	√	√	√	√	√
2007	HG-Aspen	乘员门模块	√	√	√	√	√	
2007	HG-Aspen	电动升降门	√	√	√	√	√	
2007	HG-Aspen	驻车定位系统(PTS)	√	√	√	√	√	
2007	HG-Aspen	收音机	√	√	√	√	√	
2007	HG-Aspen	卫星无线电	√	√	√	√	√	
2007	HG-Aspen	车辆娱乐系统	√	√	√	√	√	
2007	HG-Aspen	无线控制	√	√	√	√	√	
2007	JS-Sebring/200/Flavia	动力控制模块	√	√	√	√	√	√
2007	JS-Sebring/200/Flavia	变速器控制模块	√	√	√	√	√	√

2007	JS-Sebring/200/Flavia	防抱死制动	√	√	√	√	√	√
2007	JS-Sebring/200/Flavia	全轮驱动	√	√	√	√	√	
2007	JS-Sebring/200/Flavia	转向角传感器	√	√	√	√	√	
2007	JS-Sebring/200/Flavia	放大器	√	√	√	√	√	√
2007	JS-Sebring/200/Flavia	仪表组/车内节点	√	√	√	√	√	√
2007	JS-Sebring/200/Flavia	驾驶员门模块	√	√	√	√	√	
2007	JS-Sebring/200/Flavia	免提模块（电话）	√	√	√	√	√	
2007	JS-Sebring/200/Flavia	空调系统	√	√	√	√	√	√
2007	JS-Sebring/200/Flavia	干扰	√	√	√	√	√	
2007	JS-Sebring/200/Flavia	安全气囊	√	√	√	√	√	√
2007	JS-Sebring/200/Flavia	乘员门模块	√	√	√	√	√	
2007	JS-Sebring/200/Flavia	收音机	√	√	√	√	√	
2007	JS-Sebring/200/Flavia	中央网关	√	√	√	√	√	√
2007	JS-Sebring/200/Flavia	最后一行屏幕	√	√	√	√	√	
2007	JS-Sebring/200/Flavia	无线控制	√	√	√	√	√	
2007	LX-300/Thema	动力控制模块	√	√	√	√	√	√
2007	LX-300/Thema	变速器控制模块	√	√	√	√	√	√
2007	LX-300/Thema	防抱死制动	√	√	√	√	√	√
2007	LX-300/Thema	自适应巡航控制系统	√	√	√	√	√	√
2007	LX-300/Thema	电子换挡器	√	√	√	√	√	
2007	LX-300/Thema	自动远光灯	√	√	√	√	√	√
2007	LX-300/Thema	放大器	√	√	√	√	√	√
2007	LX-300/Thema	仪表组/车内节点	√	√	√	√	√	√
2007	LX-300/Thema	驾驶员门模块	√	√	√	√	√	
2007	LX-300/Thema	电子顶置	√	√	√	√	√	
2007	LX-300/Thema	中央网关	√	√	√	√	√	√
2007	LX-300/Thema	免提模块（电话）	√	√	√	√	√	
2007	LX-300/Thema	高强度放电转换器	√	√	√	√	√	
2007	LX-300/Thema	加热座椅模块	√	√	√	√	√	

2007	LX-300/Thema	空调系统	√	√	√	√	√	√
2007	LX-300/Thema	干扰	√	√	√	√	√	
2007	LX-300/Thema	光照雨水传感器模块	√	√	√	√	√	
2007	LX-300/Thema	记忆座椅	√	√	√	√	√	
2007	LX-300/Thema	安全气囊	√	√	√	√	√	√
2007	LX-300/Thema	乘员门模块	√	√	√	√	√	
2007	LX-300/Thema	警察/出租车接口模块	√	√	√	√	√	
2007	LX-300/Thema	驻车定位系统(PTS)	√	√	√	√	√	
2007	LX-300/Thema	收音机	√	√	√	√	√	
2007	LX-300/Thema	转向柱	√	√	√	√	√	
2007	LX-300/Thema	卫星无线电	√	√	√	√	√	
2007	LX-300/Thema	天窗	√	√	√	√	√	
2007	LX-300/Thema	车辆娱乐系统	√	√	√	√	√	
2007	LX-300/Thema	无线控制	√	√	√	√	√	
2007	PT-PT Cruiser(漫步者)	动力控制模块	√	√	√	√	√	√
2007	PT-PT Cruiser(漫步者)	变速器控制模块	√	√	√	√	√	√
2007	PT-PT Cruiser(漫步者)	防抱死制动	√	√	√	√	√	√
2007	PT-PT Cruiser(漫步者)	放大器	√	√	√	√	√	√
2007	PT-PT Cruiser(漫步者)	仪表组/车内节点	√	√	√	√	√	√
2007	PT-PT Cruiser(漫步者)	驾驶员门模块	√	√	√	√	√	
2007	PT-PT Cruiser(漫步者)	免提模块(电话)	√	√	√	√	√	
2007	PT-PT Cruiser(漫步者)	干扰	√	√	√	√	√	
2007	PT-PT Cruiser(漫步者)	乘员分类	√	√	√	√	√	
2007	PT-PT Cruiser(漫步者)	安全气囊	√	√	√	√	√	√
2007	PT-PT Cruiser(漫步者)	乘员门模块	√	√	√	√	√	
2007	PT-PT Cruiser(漫步者)	收音机	√	√	√	√	√	
2007	PT-PT Cruiser(漫步者)	卫星无线电	√	√	√	√	√	
2007	PT-PT Cruiser(漫步者)	中央网关	√	√	√	√	√	√
2007	PT-PT Cruiser(漫步者)	无线控制	√	√	√	√	√	

2007	VB-Sprinter	防抱死制动	√	√	√	√	√	√
2007	VB-Sprinter	前大灯调平	√	√	√	√	√	√
2007	VB-Sprinter	仪表组/车内节点	√	√	√	√	√	√
2007	VB-Sprinter	发动机控制模块	√	√	√	√	√	√
2007	VB-Sprinter	电子点火开关/中央网关	√	√	√	√	√	
2007	VB-Sprinter	电子换挡器	√	√	√	√	√	
2007	VB-Sprinter	转向柱	√	√	√	√	√	
2007	VB-Sprinter	变速器控制模块	√	√	√	√	√	√
2007	VB-Sprinter	辅助车舱加热器 (STH)	√	√	√	√	√	
2007	VB-Sprinter	辅助电加热模块	√	√	√	√	√	
2007	VB-Sprinter	促进器内加热器模块 (ZHZ)	√	√	√	√	√	
2007	VB-Sprinter	车身控制器	√	√	√	√	√	√
2007	VB-Sprinter	驾驶员门模块	√	√	√	√	√	
2007	VB-Sprinter	空调系统	√	√	√	√	√	√
2007	VB-Sprinter	安全气囊	√	√	√	√	√	√
2007	VB-Sprinter	通用/专用ECU	√	√	√	√	√	
2007	VB-Sprinter	驻车定位系统 (PTS)	√	√	√	√	√	
2007	VB-Sprinter	收音机	√	√	√	√	√	
2007	VB-Sprinter	天窗控制模块	√	√	√	√	√	
2007	VB-Sprinter	中央控制台/开关组模块	√	√	√	√	√	
2007	VB-Sprinter	挂车	√	√	√	√	√	
2007	VB-Sprinter	轮胎压力监控	√	√	√	√	√	√
2007	ZH-Crossfire	乘员分类	√	√	√	√	√	
2007	ZH-Crossfire	安全气囊	√	√	√	√	√	√
2006	LX-300/Thema	动力控制模块	√	√	√	√	√	√
2006	LX-300/Thema	防抱死制动	√	√	√	√	√	√
2006	LX-300/Thema	电子换挡器	√	√	√	√	√	
2006	LX-300/Thema	变速器控制模块	√	√	√	√	√	√
2006	LX-300/Thema	自动远光灯	√	√	√	√	√	√

2006	LX-300/Thema	放大器	√	√	√	√	√	√
2006	LX-300/Thema	仪表组/车内节点	√	√	√	√	√	√
2006	LX-300/Thema	驾驶员门模块	√	√	√	√	√	
2006	LX-300/Thema	电子顶置	√	√	√	√	√	
2006	LX-300/Thema	中央网关	√	√	√	√	√	√
2006	LX-300/Thema	免提模块（电话）	√	√	√	√	√	
2006	LX-300/Thema	高强度放电转换器	√	√	√	√	√	
2006	LX-300/Thema	加热座椅模块	√	√	√	√	√	
2006	LX-300/Thema	空调系统	√	√	√	√	√	√
2006	LX-300/Thema	干扰	√	√	√	√	√	
2006	LX-300/Thema	光照雨水传感器模块	√	√	√	√	√	
2006	LX-300/Thema	记忆座椅	√	√	√	√	√	
2006	LX-300/Thema	乘员分类	√	√	√	√	√	
2006	LX-300/Thema	安全气囊	√	√	√	√	√	√
2006	LX-300/Thema	乘员门模块	√	√	√	√	√	
2006	LX-300/Thema	警察/出租车接口模块	√	√	√	√	√	
2006	LX-300/Thema	驻车定位系统(PTS)	√	√	√	√	√	
2006	LX-300/Thema	收音机	√	√	√	√	√	
2006	LX-300/Thema	转向柱	√	√	√	√	√	
2006	LX-300/Thema	卫星无线电	√	√	√	√	√	
2006	LX-300/Thema	天窗	√	√	√	√	√	
2006	LX-300/Thema	车辆娱乐系统	√	√	√	√	√	
2006	LX-300/Thema	无线控制	√	√	√	√	√	
2006	PT-PT Cruiser(漫步者)	动力控制模块	√	√	√	√	√	√
2006	PT-PT Cruiser(漫步者)	防抱死制动	√	√	√	√	√	√
2006	PT-PT Cruiser(漫步者)	变速器控制模块	√	√	√	√	√	√
2006	PT-PT Cruiser(漫步者)	放大器	√	√	√	√	√	√
2006	PT-PT Cruiser(漫步者)	仪表组/车内节点	√	√	√	√	√	√
2006	PT-PT Cruiser(漫步者)	驾驶员门模块	√	√	√	√	√	

2006	PT-PT Cruiser(漫步者)	免提模块（电话）	√	√	√	√	√	
2006	PT-PT Cruiser(漫步者)	干扰	√	√	√	√	√	
2006	PT-PT Cruiser(漫步者)	乘员分类	√	√	√	√	√	
2006	PT-PT Cruiser(漫步者)	安全气囊	√	√	√	√	√	√
2006	PT-PT Cruiser(漫步者)	乘员门模块	√	√	√	√	√	
2006	PT-PT Cruiser(漫步者)	收音机	√	√	√	√	√	
2006	PT-PT Cruiser(漫步者)	卫星无线电	√	√	√	√	√	
2006	PT-PT Cruiser(漫步者)	中央网关	√	√	√	√	√	√
2006	PT-PT Cruiser(漫步者)	无线控制	√	√	√	√	√	
2005	LX-300/Thema	动力控制模块	√	√	√	√	√	√
2005	LX-300/Thema	变速器控制模块	√	√	√	√	√	√
2005	LX-300/Thema	防抱死制动	√	√	√	√	√	√
2005	LX-300/Thema	电子换挡器	√	√	√	√	√	
2005	LX-300/Thema	放大器	√	√	√	√	√	√
2005	LX-300/Thema	仪表组/车内节点	√	√	√	√	√	√
2005	LX-300/Thema	驾驶员门模块	√	√	√	√	√	
2005	LX-300/Thema	电子顶置	√	√	√	√	√	
2005	LX-300/Thema	中央网关	√	√	√	√	√	√
2005	LX-300/Thema	免提模块（电话）	√	√	√	√	√	
2005	LX-300/Thema	高强度放电转换器	√	√	√	√	√	
2005	LX-300/Thema	加热座椅模块	√	√	√	√	√	
2005	LX-300/Thema	空调系统	√	√	√	√	√	√
2005	LX-300/Thema	光照雨水传感器模块	√	√	√	√	√	
2005	LX-300/Thema	记忆座椅	√	√	√	√	√	
2005	LX-300/Thema	乘员分类	√	√	√	√	√	
2005	LX-300/Thema	安全气囊	√	√	√	√	√	√
2005	LX-300/Thema	乘员门模块	√	√	√	√	√	
2005	LX-300/Thema	驻车定位系统(PTS)	√	√	√	√	√	
2005	LX-300/Thema	收音机	√	√	√	√	√	



2005	LX-300/Thema	转向柱	√	√	√	√	√	
2005	LX-300/Thema	卫星无线电	√	√	√	√	√	
2005	LX-300/Thema	天窗	√	√	√	√	√	
2005	LX-300/Thema	无线控制	√	√	√	√	√	

*XTOOL*