



深圳市朗仁科技有限公司
Shenzhen Xtooltech Co., Ltd

ACURA V26.45

Description: ▲: Partially support by OBD(Need accessories) △: Partially support by OBD ×: Not support
 ●: All support by OBD(Need accessories) ○: All support by OBD ◎: Conditional support
 ■: Partially support (Disassembly) □: All support (Disassembly) /:Unnecessary

Brand	Model	Key Type	Read PIN	Add keys	All Keys Lost	Program Remote	Other Functions
ACURA	CDX	Smart key(Knob type)	/	○	○	/	1.Replace smart key ECU 2.Replace knob ignition
ACURA	CDX	Smart key(button type)	/	○	○	/	1.Replace ECM 2.Replace BCM
ACURA	CDX	Blade key	/	○	○	○	1.Replace immobiliser ECU 2.Replace the ECM/PCM 3.Replace MPCS/MICU/IMOES
ACURA	CL	Smart key(Knob type)	/	○	○	/	1.Replace smart key ECU 2.Replace knob ignition
ACURA	CL	Smart key(button type)	/	○	○	/	1.Replace ECM 2.Replace BCM
ACURA	CL	Blade key	/	○	○	○	1.Replace immobiliser ECU 2.Replace the ECM/PCM 3.Replace MPCS/MICU/IMOES
ACURA	CSX	Smart key(Knob type)	/	○	○	/	1.Replace smart key ECU 2.Replace knob ignition
ACURA	CSX	Smart key(button type)	/	○	○	/	1.Replace ECM 2.Replace BCM
ACURA	CSX	Blade key	/	○	○	○	1.Replace immobiliser ECU 2.Replace the ECM/PCM 3.Replace MPCS/MICU/IMOES
ACURA	EL	Smart key(Knob type)	/	○	○	/	1.Replace smart key ECU 2.Replace knob ignition
ACURA	EL	Smart key(button type)	/	○	○	/	1.Replace ECM 2.Replace BCM

ACURA	EL	Blade key	/	○	○	○	1.Replace immobiliser ECU 2.Replace the ECM/PCM 3.Replace MPCS/MICU/IMOES
ACURA	ILX	Smart key(Knob type)	/	○	○	/	1.Replace smart key ECU 2.Replace knob ignition
ACURA	ILX	Smart key(button type)	/	○	○	/	1.Replace ECM 2.Replace BCM
ACURA	ILX	Blade key	/	○	○	○	1.Replace immobiliser ECU 2.Replace the ECM/PCM 3.Replace MPCS/MICU/IMOES
ACURA	MDX	Smart key(Knob type)	/	○	○	/	1.Replace smart key ECU 2.Replace knob ignition
ACURA	MDX	Smart key(button type)	/	○	○	/	1.Replace ECM 2.Replace BCM
ACURA	MDX	Blade key	/	○	○	○	1.Replace immobiliser ECU 2.Replace the ECM/PCM 3.Replace MPCS/MICU/IMOES
ACURA	RDX	Smart key(Knob type)	/	○	○	/	1.Replace smart key ECU 2.Replace knob ignition
ACURA	RDX	Smart key(button type)	/	○	○	/	1.Replace ECM 2.Replace BCM
ACURA	RDX	Blade key	/	○	○	○	1.Replace immobiliser ECU 2.Replace the ECM/PCM 3.Replace MPCS/MICU/IMOES
ACURA	RL	Smart key(Knob type)	/	○	○	/	1.Replace smart key ECU 2.Replace knob ignition
ACURA	RL	Smart key(button type)	/	○	○	/	1.Replace ECM 2.Replace BCM
ACURA	RL	Blade key	/	○	○	○	1.Replace immobiliser ECU 2.Replace the ECM/PCM 3.Replace MPCS/MICU/IMOES
ACURA	RLX	Smart key(Knob type)	/	○	○	/	1.Replace smart key ECU 2.Replace knob ignition
ACURA	RLX	Smart key(button type)	/	○	○	/	1.Replace ECM 2.Replace BCM

ACURA	RLX	Blade key	/	○	○	○	1.Replace immobiliser ECU 2.Replace the ECM/PCM 3.Replace MPCS/MICU/IMOES
ACURA	RSX	Smart key(Knob type)	/	○	○	/	1.Replace smart key ECU 2.Replace knob ignition
ACURA	RSX	Smart key(button type)	/	○	○	/	1.Replace ECM 2.Replace BCM
ACURA	RSX	Blade key	/	○	○	○	1.Replace immobiliser ECU 2.Replace the ECM/PCM 3.Replace MPCS/MICU/IMOES
ACURA	TL	Smart key(Knob type)	/	○	○	/	1.Replace smart key ECU 2.Replace knob ignition
ACURA	TL	Smart key(button type)	/	○	○	/	1.Replace ECM 2.Replace BCM
ACURA	TL	Blade key	/	○	○	○	1.Replace immobiliser ECU 2.Replace the ECM/PCM 3.Replace MPCS/MICU/IMOES
ACURA	TSX	Smart key(Knob type)	/	○	○	/	1.Replace smart key ECU 2.Replace knob ignition
ACURA	TSX	Smart key(button type)	/	○	○	/	1.Replace ECM 2.Replace BCM
ACURA	TSX	Blade key	/	○	○	○	1.Replace immobiliser ECU 2.Replace the ECM/PCM 3.Replace MPCS/MICU/IMOES
ACURA	ZDX	Smart key(Knob type)	/	○	○	/	1.Replace smart key ECU 2.Replace knob ignition
ACURA	ZDX	Smart key(button type)	/	○	○	/	1.Replace ECM 2.Replace BCM
ACURA	ZDX	Blade key	/	○	○	○	1.Replace immobiliser ECU 2.Replace the ECM/PCM 3.Replace MPCS/MICU/IMOES