

## 深圳市朗仁科 Shenzhen Xtool

## Borgward V26.

Description: O: All support by OBD

 $\triangle$ : Partially support by (

• : All support by OBD (Need accessories)

**▲:** Partially support by (

X: Not support

/:Unnecessary

Make	Area	Model	Year	Key Type	Read PIN	Add Keys
Borgward		BX5		smart key	/	0
Borgward		BX6		smart key	/	0
Borgward		BX7		smart key	/	0
Borgward		BXi7		smart key	/	0

## 技有限公司 tech Co., Ltd

06

)BD

 $\Box$ : All support (Disassembly)

)BD(Need accessories)

■: Partially support (Disassembly)

O: Conditional support

All Keys Lost	Programme Remote	Other Functions		
		Matching smart computer		
	/	2. Matching engine computer		
	/	3. Match the new system		
		4. Match the steering column lock		
		1. Matching smart computer		
	/	2. Matching engine computer		
	/	3. Match the new system		
		4. Match the steering column lock		
		1. Matching smart computer		
	/	2. Matching engine computer		
	/	3. Match the new system		
		4. Match the steering column lock		
	/	1. Match the smart key		
		2. Matching engine computer		
	/	3. Match the new system		
		4. Match the steering column lock		