



Shenzhen Xtooltech Co., Ltd

HNMAZDA V26.84

Description: ○: All support by OBD △: Partially support by OBD □: All support (Disassembly)
 ●: All support by OBD(Need accessories) ▲: Partially support by OBD(Need accessories) ■: Partially support (Disassembly)
 ×: Not support /:Unnecessary ◎: Conditional support

Make	Model	Year	Key Type	Read PIN	Add Keys	All Keys Lost	Programme Remote	Other Functions
Haima	Haima 3(1.6/1.8)		Without Smart	×	○	○	/	Read ECU Information Read Trouble Code Clear Trouble Code Live Data Set security code Set security code Input security code Program function Program new system Program keys Erase keys Erase all keys Erase key 1 Erase key 2 Erase key 3 Erase key 4 Erase key 5 Replace immobiliser ECU Replace engine ECU Program immobiliser VIN Program engine VIN Reset engine ECU Reset immobiliser

Haima	Haima E3		smart key system(Fuxin Dare PEPS)	×	○	○	/	Program smart key Program peps Peps program escl Peps program immo Rease peps Write type of gearbox
Haima	Haima E3		Body system	/	/	/	○	Remote control matching
Haima	Haima E7		smart key system(Huf PEPS)	×	○	○	/	Program key Program immobiliser ECU Program engine ECU Program ESCL Program PEPS Program new system Erase ESCL
Haima	Haima E7		Body system(Steelmate)	/	/	/	○	Program remote
Haima	Fumeilai 2		DIAS Immobiliser(The old)	×	○	○	/	Read ECU Information Read Trouble Code Clear Trouble Code Live Data Program function Add a key Erase keys Program new system Replace immobiliser ECU Replace engine ECU Reset immobiliser Reset engine ECU Read VIN Check key Check engine ECU Program engine VIN Program immobiliser VIN Lock immobiliser Actuation test LED status

Haima	Fumeilai 2		Without Smart	×	○	○	/	Read ECU Information Read Trouble Code Clear Trouble Code Live Data Set security code Set security code Input security code Program function Program new system Program keys Erase keys Erase all keys Erase key 1 Erase key 2 Erase key 3 Erase key 4 Erase key 5 Replace immobiliser ECU Replace engine ECU Program immobiliser VIN Program engine VIN Reset engine ECU Reset immobiliser
Haima	Fumeilai 2		smart key system(Huf PEPS)	×	○	○	/	Program key Program immobiliser ECU Program engine ECU Program ESCL Program PEPS Program new system Erase ESCL

Haima	Fumeilai 3	Without Smart	×	○	○	/	Read ECU Information Read Trouble Code Clear Trouble Code Live Data Set security code Set security code Input security code Program function Program new system Program keys Erase keys Erase all keys Erase key 1 Erase key 2 Erase key 3 Erase key 4 Erase key 5 Replace immobiliser ECU Replace engine ECU Program immobiliser VIN Program engine VIN Reset engine ECU Reset immobiliser
Haima	Fumeilai 4	Immobiliser (DIAS)	×	○	○	○	Live data Program function Add new key Add old key Erase keys Reset engine ECU Lock immobiliser Change engine ECU Change immo ECU Program new system Check key Check engine ECU

Haima	Fumeilai 4		smart key system(Huf PEPS)	×	○	○	/	Program key Program immobiliser ECU Program engine ECU Program ESCL Program PEPS Program new system Erase ESCL
Haima	Fumeilai F5		Immobiliser(DI AS)	×	○	○	○	Live data Program function Add new key Add old key Erase keys Reset engine ECU Lock immobiliser Change engine ECU Change immo ECU Program new system Check key Check engine ECU
Haima	Fumeilai F5		smart key system(Huf PEPS)	×	○	○	/	Program key Program immobiliser ECU Program engine ECU Program ESCL Program PEPS Program new system Erase ESCL
Haima	Fumeilai F7		Immobiliser(DI AS)	×	○	○	○	Live data Program function Add new key Add old key Erase keys Reset engine ECU Lock immobiliser Change engine ECU Change immo ECU Program new system Check key Check engine ECU

Haima	Fumeilai F7		Immobiliser (DIAS) 1.5T	×	○	○	○	Check key status Add a new key Add old keys Clear all keys Match the alarm computer Matching engine computer Unlock the alarm computer Lock the alarm computer Reset engine computer Restart the alarm New system matching
Haima	Fumeilai F7		smart key system (Huf PEPS)	×	○	○	/	Program key Program immobiliser ECU Program engine ECU Program ESCL Program PEPS Program new system Erase ESCL
Haima	Fushida Tengda M11		Body system (TungThih)	/	/	/	○	Program remote

Haima	Haima The knight(Haima 7)		Without Smart	×	○	○	/	Read ECU Information Read Trouble Code Clear Trouble Code Live Data Set security code Set security code Input security code Program function Program new system Program keys Erase keys Erase all keys Erase key 1 Erase key 2 Erase key 3 Erase key 4 Erase key 5 Replace immobiliser ECU Replace engine ECU Program immobiliser VIN Program engine VIN Reset engine ECU Reset immobiliser
-------	---------------------------	--	---------------	---	---	---	---	---

Haima	The prince 1.0		Without Smart	×	○	○	/	Read ECU Information Read Trouble Code Clear Trouble Code Live Data Set security code Set security code Input security code Program function Program new system Program keys Erase keys Erase all keys Erase key 1 Erase key 2 Erase key 3 Erase key 4 Erase key 5 Replace immobiliser ECU Replace engine ECU Program immobiliser VIN Program engine VIN Reset engine ECU Reset immobiliser
-------	----------------	--	---------------	---	---	---	---	---

Haima	Haima The prince M1		Immobiliser (DI AS)	×	○	○	/	Read ECU Information Read Trouble Code Clear Trouble Code Live Data Program function Add a key Erase keys Program new system Replace immobiliser ECU Replace engine ECU Reset immobiliser Reset engine ECU Read VIN Check key Check engine ECU Program engine VIN Program immobiliser VIN Lock immobiliser Actuation test LED status
Haima	Haima M3		Immobiliser (DI AS)	△	○	○	○	Live data Program function Add new key Add old key Erase keys Reset engine ECU Lock immobiliser Change engine ECU Change immo ECU Program new system Check key Check engine ECU

Haima	According to the models	Immobiliser (The 2016 model, with One-button Start)	Haima M3	△	○	○	/	Live Data Programming function The key test Clear all keys Match anti-theft computer (Hofer) Match anti-theft computer (Fuxindel) Matching engine computer Unlock the anti-theft computer Lock anti-theft computer Reset engine computer Hardware reset of theft case New System Matching (Huofu) New System Matching (Fuxindel)
Haima	Haima M3		smart key system (Huf PEPS)	△	○	○	/	Program key Program immobiliser ECU Program engine ECU Program ESCL Program PEPS Program new system Erase ESCL
Haima	Haima M5		Immobiliser (DIAS)	×	○	○	○	Live data Program function Add new key Add old key Erase keys Reset engine ECU Lock immobiliser Change engine ECU Change immo ECU Program new system Check key Check engine ECU

Haima	Haima M5		smart key system(Huf PEPS)	×	○	○	/	Program key Program immobiliser ECU Program engine ECU Program ESCL Program PEPS Program new system Erase ESCL
Haima	Haima M6		Immobiliser(with One-button Start)	△	○	○	/	Live Data Programming function The key test Clear all keys Match anti-theft computer (Hofer) Match anti-theft computer (Fuxindel) Matching engine computer Unlock the anti-theft computer Lock anti-theft computer Reset engine computer Hardware reset of theft case New System Matching (Huofu) New System Matching (Fuxindel)
Haima	Haima M6		smart key system(Huf PEPS)	△	○	○	/	Program key Program immobiliser ECU Program engine ECU Program ESCL Program PEPS Program new system Erase ESCL

Haima	Haima M8		Immobiliser(DIAS)	×	○	○	/	Read Trouble Code Clear Trouble Code Live Data Program function Add new keys Add old keys Erase all keys MatchAllSystem Change immo ECU Change engineECU Reset engine ECU Lock immobiliserECU Read key status Read ECM status
Haima	Haima M8		smart key system(Huf PEPS)	×	○	○	/	Program key Program immobiliser ECU Program engine ECU Program ESCL Program PEPS Program new system Erase ESCL
Haima	Haima S5Youth version		smart key system(Huf PEPS)	×	○	○	/	Program key Program immobiliser ECU Program engine ECU Program ESCL Program PEPS Program new system Erase ESCL
Haima	Haima S5Youth version		Body system(TungThih S5 young)	×	○	○	/	Remote matching Reset BCM Key matching BCM learning Model configuration

Haima	Haima S5		Immobiliser (without One-button Start)	△	○	○	○	Live Data Programming function The key test Add a new key Add old keys Clear all keys Match anti-theft computer Matching engine computer Unlock the anti-theft computer Lock anti-theft computer Reset engine computer Hardware reset of theft case New system matching
Haima	Haima S5		Immobiliser (with One-button Start)	△	○	○	/	Live Data Programming function The key test Clear all keys Match anti-theft computer (Hofer) Match anti-theft computer (Fuxindel) Matching engine computer Unlock the anti-theft computer Lock anti-theft computer Reset engine computer Hardware reset of theft case New System Matching (Huofu) New System Matching (Fuxindel)
Haima	Haima S5		smart key system (Huf PEPS)	△	○	○	/	Program key Program immobiliser ECU Program engine ECU Program ESCL Program PEPS Program new system Erase ESCL

Haima	Haima S5		smart key system(Fuxin Dare PEPS)	△	○	○	/	Program smart key Program peps Peps program escl Peps program immo Rease peps Write type of gearbox
Haima	Haima S5 II		smart key system(Fuxin Dare PEPS)	×	○	○	/	Program smart key Program peps Peps program escl Peps program immo Rease peps Write type of gearbox
Haima	Haima S5 II		Body system (Kingdom)	/	/	/	○	Write VIN code Remote matching
Haima	Haima S5 II		Body system(Steelmate)	×	○	○	○	Reset BCM Write VIN code and PIN code Write model configuration IMMO matching (low configuration) Remote matching Mechanical key matching BCM Learning IMMO matching (high configuration) BCM Learning (Huf) BCM Learning (Fuxindare)

Haima	Haima S7		Immobiliser (DI AS)	×	○	○	/	Live data Program function Add new key Add old key Erase keys Reset engine ECU Lock immobiliser Change engine ECU Change immo ECU Program new system Check key Check engine ECU
Haima	Haima S7		Immobiliser (DI AS) 1.8T	×	○	○	/	Check key status Add a new key Add old keys Clear all keys Match the alarm computer Matching engine computer Unlock the alarm computer Lock the alarm computer Reset engine computer Restart the alarm New system matching
Haima	Haima S7		smart key system (Huf PEPS)	×	○	○	/	Program key Program immobiliser ECU Program engine ECU Program ESCL Program PEPS Program new system Erase ESCL

Haima	Haima 8S		Immobiliser (TuningThih)	×	○	○	○	Smart Key Smart key matching PEPS matching (with ESCL) PEPS matching (without ESCL) ESCL matching Mechanical key Key matching Remote matching Immobilizer system matching Write models configuration Immobilizer matching EMS matching
Haima	Haima V70 Family		Immobiliser (DIAS)	×	○	○	○	Read Trouble Code Clear Trouble Code Live Data Program function Add new keys Add old keys Erase all keys MatchAllSystem Change immo ECU Change engine ECU Reset engine ECU Lock immobiliser ECU Read key status Read ECM status
Haima	Haima V70 Family		smart key system (Huf PEPS)	×	○	○	/	Program key Program immobiliser ECU Program engine ECU Program ESCL Program PEPS Program new system Erase ESCL

Haima	Sea star 1.3/1.5		DIAS Immobiliser (The old)	×	○	○	/	Read ECU Information Read Trouble Code Clear Trouble Code Live Data Program function Add a key Erase keys Program new system Replace immobiliser ECU Replace engine ECU Reset immobiliser Reset engine ECU Read VIN Check key Check engine ECU Program engine VIN Program immobiliser VIN Lock immobiliser Actuation test LED status
Haima	Sea star 1.3/1.5		Immobiliser (without One-button Start)	×	○	○	/	Live Data Programming function The key test Add a new key Add old keys Clear all keys Match anti-theft computer Matching engine computer Unlock the anti-theft computer Lock anti-theft computer Reset engine computer Hardware reset of theft case New system matching

Haima	Sea star 1.3/1.5		Immobiliser (with One-button Start)	×	○	○	/	Live Data Programming function The key test Clear all keys Match anti-theft computer (Hofer) Match anti-theft computer (Fuxindel) Matching engine computer Unlock the anti-theft computer Lock anti-theft computer Reset engine computer Hardware reset of theft case New System Matching (Huofu) New System Matching (Fuxindel)
Haima	Sea star 1.6		Without Smart	×	○	○	/	Read ECU Information Read Trouble Code Clear Trouble Code Live Data Set security code Set security code Input security code Program function Program new system Program keys Erase keys Erase all keys Erase key 1 Erase key 2 Erase key 3 Erase key 4 Erase key 5 Replace immobiliser ECU Replace engine ECU Program immobiliser VIN Program engine VIN Reset engine ECU Reset immobiliser

Haima	drama (1.6/1.8)		Without Smart	×	○	○	/	Read ECU Information Read Trouble Code Clear Trouble Code Live Data Set security code Set security code Input security code Program function Program new system Program keys Erase keys Erase all keys Erase key 1 Erase key 2 Erase key 3 Erase key 4 Erase key 5 Replace immobiliser ECU Replace engine ECU Program immobiliser VIN Program engine VIN Reset engine ECU Reset immobiliser
-------	-----------------	--	---------------	---	---	---	---	---

Haima	Cupid(1.3/1.5)		Without Smart	×	○	○	/	Read ECU Information Read Trouble Code Clear Trouble Code Live Data Set security code Set security code Input security code Program function Program new system Program keys Erase keys Erase all keys Erase key 1 Erase key 2 Erase key 3 Erase key 4 Erase key 5 Replace immobiliser ECU Replace engine ECU Program immobiliser VIN Program engine VIN Reset engine ECU Reset immobiliser
-------	----------------	--	---------------	---	---	---	---	---

Haima	primal		Without Smart	×	○	○	/	Read ECU Information Read Trouble Code Clear Trouble Code Live Data Set security code Set security code Input security code Program function Program new system Program keys Erase keys Erase all keys Erase key 1 Erase key 2 Erase key 3 Erase key 4 Erase key 5 Replace immobiliser ECU Replace engine ECU Program immobiliser VIN Program engine VIN Reset engine ECU Reset immobiliser
-------	--------	--	---------------	---	---	---	---	---