



深圳市朗仁科技有限公司
Shenzhen Xtooltech Co., Ltd

HONDA V26.45

Description: ▲: Partially support by OBD(Need accessories) △: Partially support by OBD ×: Not support
 ●: All support by OBD(Need accessories) ○: All support by OBD ◎: Conditional support
 ■: Partially support (Disassembly) □: All support (Disassembly) /:Unnecessary

Make	Model	Key Type	Read PIN	Add Keys	All Keys Lost	Remote	Other Functions
HONDA	Accord	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	Accord	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Accord	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Insight	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	Insight	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Insight	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Odyssey	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	Odyssey	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Odyssey	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Jade	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	Jade	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Jade	smart key Button type	/	○	○	/	Replace ECM, Replace BCM

HONDA	XR-V	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	XR-V	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	XR-V	smart key Button type	/	○	△■	/	Replace ECM, Replace BCM
HONDA	ElySION	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	ElySION	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	ElySION	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Crosstour	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	Crosstour	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Crosstour	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	CR-V	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	CR-V	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	CR-V	smart key Button type	/	○	△■	/	Replace ECM, Replace BCM
HONDA	Element	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	Element	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Element	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Fit	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	Fit	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Fit	smart key Button type	/	○	○	/	Replace ECM, Replace BCM

HONDA	Aviator	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	Aviator	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Aviator	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	City	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	City	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	City	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Civic	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	Civic	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Civic	smart key Button type	/	○	△■	/	Replace ECM, Replace BCM
HONDA	Civic	遥控系统[9代]	/	/	/	○	
HONDA	SPIRIOR	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	SPIRIOR	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	SPIRIOR	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	EVERUS	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	EVERUS	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	EVERUS	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	VEZEL	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	VEZEL	smart key Button type	/	○	△■	/	Replace ECM, Replace BCM

HONDA	Brio	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	Brio	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Brio	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Amaze	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	Amaze	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Amaze	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Hrv	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	Hrv	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Hrv	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Stream	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	Stream	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Stream	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Legend	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	Legend	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Legend	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	CR-Z	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	CR-Z	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	CR-Z	smart key Button type	/	○	○	/	Replace ECM, Replace BCM

HONDA	S2000	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	S2000	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	S2000	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Mobilo	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	Mobilo	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Mobilo	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Pilot	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	Pilot	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Pilot	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Ridgeline	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	Ridgeline	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Ridgeline	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Acty	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	Acty	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Acty	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Airwave	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	Airwave	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Airwave	smart key Button type	/	○	○	/	Replace ECM, Replace BCM

HONDA	Ascot	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	Ascot	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Ascot	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Avancier	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Avancier	smart key Button type	/	○	△■	/	Replace ECM, Replace BCM
HONDA	Ballade	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	Ballade	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Ballade	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	BR-V	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	BR-V	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	BR-V	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Capa	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	Capa	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Capa	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Ciimo	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES
HONDA	Ciimo	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Ciimo	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Clarity	Without smart key	/	○	○	○	Replace immobiliser ECU,Replace the ECM / PCM,Replace MPCS / MICU / IMOES

HONDA	Clarity	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Clarity	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	CR-X	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	CR-X	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	CR-X	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Crider	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Crider	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Crider	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Crossroad	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Crossroad	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Crossroad	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Domani	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Domani	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Domani	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Edix	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Edix	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Edix	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	FCX	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES

HONDA	FCX	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	FCX	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	FR-V	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	FR-V	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	FR-V	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Freed	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Freed	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Freed	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Gienia	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Gienia	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Gienia	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Grace	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Grace	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Grace	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Greiz	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Greiz	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Greiz	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Inspire	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES

HONDA	Inspire	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Inspire	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Integra	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Integra	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Integra	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Jazz	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Jazz	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Jazz	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Lagreat	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Lagreat	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Lagreat	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Life	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Life	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Life	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Logo	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Logo	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Logo	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	MDX	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES

HONDA	MDX	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	MDX	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	MR-V	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	MR-V	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	MR-V	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	N-Box	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	N-Box	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	N-Box	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	N-One	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	N-One	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	N-One	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	NSX	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	NSX	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	NSX	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Orthia	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Orthia	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Orthia	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Partner	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES

HONDA	Partner	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Partner	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Prelude	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Prelude	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Prelude	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Rafaga	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Rafaga	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Rafaga	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	S-MX	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	S-MX	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	S-MX	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	S660	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	S660	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	S660	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Saber	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Saber	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Saber	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Shuttle	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES

HONDA	Shuttle	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Shuttle	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Spike	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Spike	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Spike	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Step Wgn	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Step Wgn	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Step Wgn	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Thats	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Thats	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Thats	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Today	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Today	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Today	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Torneo	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Torneo	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Torneo	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	UR-V	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES

HONDA	UR-V	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	UR-V	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Vamos	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Vamos	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Vamos	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Vigor	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Vigor	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Vigor	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	WR-V	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	WR-V	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	WR-V	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Z	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Z	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Z	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Zest	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Zest	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Zest	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	FCV	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES

HONDA	FCV	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	FCV	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Passport	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Passport	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Passport	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Nwgn	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Nwgn	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Nwgn	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	C 001	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	C 001	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	C 001	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	e Prototype	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	e Prototype	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	e Prototype	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	Urban	Without smart key	/	○	○	○	Replace immobiliser ECU, Replace the ECM / PCM, Replace MPCS / MICU / IMOES
HONDA	Urban	smart key Knob type	/	○	○	/	Replace smart key ECU, Replace knob ignition
HONDA	Urban	smart key Button type	/	○	○	/	Replace ECM, Replace BCM
HONDA	VE-1	smart key Button type	/	○	/	/	Replace ECM, Replace BCM

HONDA	X-NV	smart key Button type	/	○	/	/	Replace ECM, Replace BCM
HONDA	M-NV	smart key Button type	/	○	/	/	Replace ECM, Replace BCM

XTOOL