

Shenzhen Xtooltech Co., Ltd

HONGQI V26.25

Description: O: All support by OBD

 \triangle : Partially support by OBD

□: All support (Disassembly)

• : All support by OBD(Need accessories)

▲: Partially support by OBD(Need accessories)

■: Partially support (Disassembly)

X: Not support /: Unnecessary

O: Conditional support

Make	Model	Year Key Type	Read PIN	Add Keys	All Keys Lost	Programme Remote	Other Functions
HONGQI	Old Hongqi	Without Smart	/	0	0	/	
HONGQI	E-HS3	With Smart	1	0	0	/	1. Programming key 2. Programming PEPS 3. Programming ESCL 4. Programming TBOX
HONGQI	HS5	With Smart	×	0	0	/	1. All keys lost
HONGQI	HS7	With Smart		0	0	/	 Programming key Programming PEPS Programming ESCL Programming TBOX
HONGQI	Н5	With Smart	×	0	0	/	1. Add key 2. All keys lost 3. Programming BTM 4. Programming ESCL 5. Reset ESCL 6. BCM low frequency calibration
HONGQI	Н7	With Smart	/	0	0	/	 Add smart keys Erase smart keys
HONGQI	Н9	With Smart	×	0	0	/	1, All keys lost
HONGQI	HQ300	With Smart	/	0	0	0	1. Program smart keys 2. Program remote 3. Reset immobilizer