



Shenzhen Xtooltech Co., Ltd

MY MITSUBISHI V21.06

Automaker	Model/Protocol	System	Function
MITSUBISHI	Repair Old Key	Immobiliser	1.type 1(MIRAGE 2014) 2.type 2(MIRAGE 2017) 3.type 3(outlander/ASX 2017)
MITSUBISHI(China)	V73	Immobiliser	1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser
MITSUBISHI(China)	V97	Immobiliser	1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser
MITSUBISHI(China)	Galant	Immobiliser	1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser
MITSUBISHI(China)	Grandis	Immobiliser	1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser

<p> MITSUBISHI(China) </p>	<p> Lancer(With smart) </p>	<p> Immobiliser </p>	<p> 1.ECU identification 2.Live data<KEY_INFO> 3.Change security code 4.All smart keys lost 5.Program engine key code 6.Program engine key code&VIN write </p>
<p> MITSUBISHI(China) </p>	<p> Lancer(Without smart) </p>	<p> Immobiliser </p>	<p> 1.ECU identification 2.Live data 3.Change security code 4.All keys lost 5.Program remote 6.Program engine key code 7.Program engine key code&VIN write </p>
<p> MITSUBISHI(China) </p>	<p> Lancer sportback(Without smart) </p>	<p> Immobiliser </p>	<p> 1.ECU identification 2.Live data 3.Change security code 4.All keys lost 5.Program remote 6.Program engine key code 7.Program engine key code&VIN write </p>
<p> MITSUBISHI(China) </p>	<p> Outlander(-2013) </p>	<p> Immobiliser </p>	<p> 1.ECU identification 2.Live data<KEY_INFO> 3.Change security code 4.All smart keys lost 5.Program engine key code 6.Program engine key code&VIN write </p>
<p> MITSUBISHI(China) </p>	<p> Outlander(2014-) </p>	<p> Immobiliser </p>	<p> Program smart keys </p>
<p> MITSUBISHI(China) </p>	<p> ASX </p>	<p> Immobiliser </p>	<p> Program smart keys </p>
<p> MITSUBISHI(China) </p>	<p> L200 TRITON(-2011/Diesel) </p>	<p> Immobiliser(Type 1) </p>	<p> 1.Program keys 2.Program remotes 3.Change security code 4.Program engine key code&VIN write </p>
<p> MITSUBISHI(China) </p>	<p> L200 TRITON(-2011/Diesel) </p>	<p> Immobiliser(Type 2) </p>	<p> 1.All keys lost 2.Program remote </p>

<p> MITSUBISHI(China) L200 TRITON(2011-/Diesel) </p>	<p> Immobiliser(Type 1) </p>	<p> 1.Program keys 2.Program remotes 3.Change security code 4.Program engine key code&VIN write </p>
<p> MITSUBISHI(China) L200 TRITON(2011-/Diesel) </p>	<p> Immobiliser(Type 2) </p>	<p> 1.All keys lost 2.Program remote </p>
<p> MITSUBISHI(China) L200 TRITON(2011-/Petrol) </p>	<p> Immobiliser </p>	<p> 1.All keys lost 2.Program remote 3.Number of keys </p>
<p> MITSUBISHI(China) Pajero(-2010) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(China) Pajero(2010-) </p>	<p> Immobiliser </p>	<p> 1.Program keys 2.Program remotes 3.Change security code 4.Program engine key code&VIN write </p>
<p> MITSUBISHI(China) Pajero sport(-2011/Diesel) </p>	<p> Immobiliser(Type 1) </p>	<p> 1.Program keys 2.Program remotes 3.Change security code 4.Program engine key code&VIN write </p>
<p> MITSUBISHI(China) Pajero sport(-2011/Diesel) </p>	<p> Immobiliser(Type 2) </p>	<p> 1.All keys lost 2.Program remote </p>
<p> MITSUBISHI(China) Pajero sport(2011-/Diesel) </p>	<p> Immobiliser(Type 1) </p>	<p> 1.Program keys 2.Program remotes 3.Change security code 4.Program engine key code&VIN write </p>
<p> MITSUBISHI(China) Pajero sport(2011-/Diesel) </p>	<p> Immobiliser(Type 2) </p>	<p> 1.All keys lost 2.Program remote </p>
<p> MITSUBISHI(China) Pajero sport(2011-/Petrol) </p>	<p> Immobiliser </p>	<p> 1.All keys lost 2.Program remote 3.Number of keys </p>

<p> MITSUBISHI(China) </p>	<p> Spance wagon (Thai) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(China) </p>	<p> Type 1(K) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(China) </p>	<p> Type 2(CAN With smart) </p>	<p> Immobiliser </p>	<p> 1.ECU identification 2.Live data<KEY_INFO> 3.Change secutity code 4.All smart keys lost 5.Program engine key code 6.Program engine key code&VIN write </p>
<p> MITSUBISHI(China) </p>	<p> Type 3(CAN With smart) </p>	<p> Immobiliser </p>	<p> Program smart keys </p>
<p> MITSUBISHI(China) </p>	<p> Type 4(CAN With smart) </p>	<p> Immobiliser </p>	<p> Program smart keys </p>
<p> MITSUBISHI(China) </p>	<p> Type 5(CAN Without smart) </p>	<p> Immobiliser </p>	<p> 1.ECU identification 2.Live data 3.Change secutity code 4.All keys lost 5.Program remote 6.Program engine key code 7.Program engine key code&VIN write </p>
<p> MITSUBISHI(China) </p>	<p> Type 6(CAN Without smart) </p>	<p> Immobiliser </p>	<p> 1.Program keys 2.Program remotes </p>
<p> MITSUBISHI(China) </p>	<p> Type 7(CAN Without smart) </p>	<p> Immobiliser </p>	<p> 1.Change secutity code 2.All keys lost 3.Program remote 4.Program engine key code&VIN write </p>
<p> MITSUBISHI(China) </p>	<p> Type 8(CAN Without smart) </p>	<p> Immobiliser </p>	<p> 1.All keys lost 2.Program remote </p>
<p> MITSUBISHI(China) </p>	<p> Type 9(CAN Without smart) </p>	<p> Immobiliser </p>	<p> 1.All keys lost 2.Program remote 3.Number of keys </p>

<p> MITSUBISHI(Japan) </p>	<p> Carisma(96-04) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Colt(96-00) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Eclipse(96-03) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Galant[PIN1](96-03) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Galant[PIN2](96-03) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Lancer(96-03) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Lancer(03-06) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>

<p> MITSUBISHI(Japan) </p>	<p> Lancer SW(96-03) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> L200(99-06) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 6.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Montero(99-00) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Montero(01-06) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Montero IO(99-) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Montero Sport(99-04) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Nativa(01-02) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>

<p> MITSUBISHI(Japan) </p>	<p> Pajero(96-00) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Pajero(00-05) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Pajero IO(99-) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Pajero PININ(99-) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Pajero Sport(99-03) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Shogun(96-00) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Shogun(00-05) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>

<p> MITSUBISHI(Japan) </p>	<p> Shogun PININ(99-) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Shogun Sport(99-03) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Space Gear(96-) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Space Runner(98-99) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Space Runner(99-02) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Space Start[PIN1](99-) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Space Start[PIN2](99-) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>

<p> MITSUBISHI(Japan) </p>	<p> Space Wagon(98-98) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> Space Wagon(99-02) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Japan) </p>	<p> 3000 GT(96-01) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Australia) </p>	<p> Challenger(99-03) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Australia) </p>	<p> Express(96-) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Australia) </p>	<p> Lancer(96-03) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Australia) </p>	<p> Lancer(03-06) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>

<p> MITSUBISHI(Australia) </p>	<p> Lancer SW(96-03) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Australia) </p>	<p> Magna(96-05) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Australia) </p>	<p> Mirage(96-02) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Australia) </p>	<p> Nimbus(98-99) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Australia) </p>	<p> Nimbus(99-02) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Australia) </p>	<p> Pajero(96-00) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Australia) </p>	<p> Pajero(00-05) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>

<p> MITSUBISHI(Australia) </p>	<p> Pajero IO(99-) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Australia) </p>	<p> Triton[PIN1](99-) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Australia) </p>	<p> Triton[PIN2](99-) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Australia) </p>	<p> Verada(96-02) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Greek) </p>	<p> Carisma(96-04) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Greek) </p>	<p> Colt(96-00) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(Greek) </p>	<p> Colt New(02-) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>

<p>MITSUBISHI(Greek)</p>	<p>Galant(96-03)</p>	<p>Immobiliser</p>	<p>1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser</p>
<p>MITSUBISHI(Greek)</p>	<p>Lancer(96-03)</p>	<p>Immobiliser</p>	<p>1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser</p>
<p>MITSUBISHI(Greek)</p>	<p>Lancer SW(96-03)</p>	<p>Immobiliser</p>	<p>1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser</p>
<p>MITSUBISHI(Greek)</p>	<p>L200(99-06)</p>	<p>Immobiliser</p>	<p>1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser</p>
<p>MITSUBISHI(Greek)</p>	<p>Pajero(96-00)</p>	<p>Immobiliser</p>	<p>1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser</p>
<p>MITSUBISHI(Greek)</p>	<p>Pajero New(00-03)</p>	<p>Immobiliser</p>	<p>1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser</p>
<p>MITSUBISHI(Greek)</p>	<p>Pajero PININ(99-)</p>	<p>Immobiliser</p>	<p>1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser</p>

<p>MITSUBISHI(Greek)</p>	<p>Pajero Sport(99-03)</p>	<p>Immobiliser</p>	<p>1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser</p>
<p>MITSUBISHI(Greek)</p>	<p>Space Gear(96-)</p>	<p>Immobiliser</p>	<p>1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser</p>
<p>MITSUBISHI(Greek)</p>	<p>Space Runner(98-99)</p>	<p>Immobiliser</p>	<p>1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser</p>
<p>MITSUBISHI(Greek)</p>	<p>Space Runne(99-02)</p>	<p>Immobiliser</p>	<p>1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser</p>
<p>MITSUBISHI(Greek)</p>	<p>Space Start(99-)</p>	<p>Immobiliser</p>	<p>1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser</p>
<p>MITSUBISHI(Greek)</p>	<p>3000 GT(96-)</p>	<p>Immobiliser</p>	<p>1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser</p>
<p>MITSUBISHI(USA)</p>	<p>Diamante(00-06)</p>	<p>Immobiliser</p>	<p>1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser</p>

<p> MITSUBISHI(USA) Eclipse(96-05) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(USA) Eclipse[CAN](06-09) </p>	<p> Immobiliser </p>	<p> 1.All keys lost 2.Key NO. </p>
<p> MITSUBISHI(USA) Endeavor[CAN](06-09) </p>	<p> Immobiliser </p>	<p> 1.All keys lost 2.Key NO. </p>
<p> MITSUBISHI(USA) Galant(04-05) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(USA) Galant[CAN](06-09) </p>	<p> Immobiliser </p>	<p> 1.All keys lost 2.Key NO. </p>
<p> MITSUBISHI(USA) Galant[PIN1](96-00) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(USA) Galant[PIN1](00-03) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(USA) Galant[PIN2](96-00) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(USA) Galant[PIN2](00-03) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>

<p> MITSUBISHI(USA) Lancer(96-03) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(USA) Lancer EVO(03-06) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(USA) Lancer SW(96-03) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(USA) Lancer[CAN](08-09) </p>	<p> Immobiliser </p>	<p> 1.All keys lost 2.Key NO. </p>
<p> MITSUBISHI(USA) Montero(99-00)(01-06) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(USA) Montero Sport(99-04) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(USA) Outlander(00-03) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>
<p> MITSUBISHI(USA) Outlander(04-06) </p>	<p> Immobiliser </p>	<p> 1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser </p>

MITSUBISHI(USA)	Outlander[CAN](07-09)	Immobiliser	1.All keys lost 2.Key NO.
-----------------	-----------------------	-------------	------------------------------

XTOOL