



深圳市朗仁科技有限公司
Shenzhen Xtooltech Co., Ltd

MY TOYOTAX100PAD2 V18.92

Automaker	Model	System	Function
Toyota/Lexus	Remote	Type 1	Program remote
Toyota/Lexus	Remote	Type 2	1. Program remote 2. Erase remote
Toyota/Lexus	Immobiliser	Type 1	1. Add a key 2. Erase keys 3. Reset immobiliser 4. Replace engine ECU
Toyota/Lexus	Immobiliser	Type 2(with G)	1. Add a key 2. Erase keys 3. Replace immobiliser ECU 4. Replace engine ECU
Toyota/Lexus	Immobiliser	Type 3(4C)	1. Add a master key 2. Add a vice key 3. Erase keys 4. Erase DTC
Toyota/Lexus	Immobiliser	Type 4(with H)	1. Add a key 2. Erase keys 3. Replace immobiliser ECU 4. Replace engine ECU
Toyota/Lexus	Smart key system	Type 1	1. Add a smart key 2. Erase smart keys 3. Reset smart key ECU 4. Program ECU
Toyota/Lexus	Smart key system	Type 2	1. Program smart keys 2. Program remote 3. Reset immobiliser

Toyota/Lexus	Smart key system	Type 3	1. Add a smart key 2. Erase smart keys 3. Reset smart keys
Toyota/Lexus	Smart key system	Type 4(with H)	1. Add a smart key 2. Erase smart keys 3. Reset smart key ECU 4. Program ECU

XTOOL