



MG Function List V10.50

Tips and Instructions:

The programming function only supports H6PRO, H6PRO Master Edition products.

- * This feature is new.
- ✓ This feature is supported.
- This feature is not supported.
- ※ This feature is partially supported.

Model	System Name	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Read Freeze Frame	Actuation Test	Special Functions
MG/MG Pilot	Engine management system (ECM)	✓	✓	✓	✓		✓	
MG/MG Pilot	Gearbox control module (TCM)	✓	✓	✓	✓			
MG/MG Pilot	Dynamic stabilization control system (SCS/ABS)	✓	✓	✓	✓			SP2193, SP2194, SP2195
MG/MG Pilot	Airbag control module (SDM)	✓	✓	✓	✓			
MG/MG Pilot	Body control module (BCM)	✓	✓	✓	✓		✓	SP2200
MG/MG Pilot	Electronic steering power system (EPS)	✓	✓	✓	✓			SP2196
MG/MG Pilot	Combination instrument (IPK)	✓	✓	✓	✓		✓	
MG/MG Pilot	Air conditioning system (Warm air , Ventilation and air conditioning) (HVAC)	✓	✓	✓	✓		✓	SP2202
MG/MG Pilot	Keyless entry and key launch module (PEPS)	✓	✓	✓	✓			SP2201
MG/MG Pilot	Gateway (GW)	✓	✓	✓	✓			SP2188, SP2189
MG/MG Pilot	Tire pressure monitoring system (TPMS)	✓	✓	✓	✓			SP2203
MG/MG Pilot	Communication module (T-BOX)	✓	✓	✓	✓			
MG/MG Pilot	Switching control unit (SCU)	✓	✓	✓	✓			
MG/MG Pilot	Four-wheel control module (TCCM)	✓	✓	✓	✓			
MG/MG Pilot	Clutch cooling electronic oil pump (CCEOP)	✓	✓	✓	✓			
MG/MG Pilot	Front camera module (FVCM)	✓	✓	✓	✓			SP2197
MG/MG Pilot	Forward detection radar module (FDR)	✓	✓	✓	✓			SP2198, SP2199
MG/MG Pilot	Electronic steering pierlet lock (ESCL)	✓	✓	✓	✓			
MG/MG Pilot	Electric tail door control module (PLCM)	✓	✓	✓	✓			
MG/MG Pilot	Entertainment system control module (FICM)	✓	✓	✓	✓			
MG/MG Pilot	Rear driving assistance module (RDA)	✓	✓	✓	✓			
MG/MG Pilot	360 Panoramic image control module (AVM)	✓	✓	✓	✓			
MG/MG6 (Third generation)	Engine management system (EMS)	✓	✓	✓	✓		✓	SP1703, SP1704, SP1705
MG/MG6 (Third generation)	Gearbox control module (TCM)	✓	✓	✓	✓		✓	
MG/MG6 (Third generation)	Anti-lock brake system / Dynamic stability control (ABS/SCS)	✓	✓	✓	✓			SP1706, SP1707, SP1708, SP1709, SP1710, SP1711, SP1712, SP1713, SP1714, SP1715
MG/MG6 (Third generation)	Airbag control module (SRS)	✓	✓	✓	✓			
MG/MG6 (Third generation)	Body control module (BCM)	✓	✓	✓	✓		✓	SP1717
MG/MG6 (Third generation)	Electronic power steering system (EPS)	✓	✓	✓	✓		✓	SP1716
MG/MG6 (Third generation)	Instrument module (IPK)	✓	✓	✓	✓		✓	SP1720
MG/MG6 (Third generation)	Air conditioner controller (HVAC)	✓	✓	✓	✓		✓	SP1719
MG/MG6 (Third generation)	Gateway module (GW)	✓	✓	✓	✓			SP1702
MG/MG6 (Third generation)	Tire pressure monitoring system (TPMS)	✓	✓	✓	✓			SP1722
MG/MG6 (Third generation)	Keyless entry and start system (PEPS)	✓	✓	✓	✓			SP1718
MG/MG6 (Third generation)	Communication module (T-BOX)	✓	✓	✓	✓			SP1700, SP1701
MG/MG6 (Third generation)	Electronic steering column lock (ESCL)	✓	✓	✓	✓			
MG/MG6 (Third generation)	Front camera module (FVCM)	✓	✓	✓	✓			
MG/MG6 (Third generation)	Navigation entertainment system (FICM)	✓	✓	✓	✓			
MG/MG6 (Third generation)	Driving auxiliary module backward (RDA)	✓	✓	✓	✓			
MG/MG6 (Third generation)	Clutch cooling electronic oil pump (CCEOP)	✓	✓	✓	✓			
MG/MG6 (Third generation)	Seck detection module (SCU)	✓	✓	✓	✓		✓	
MG/ New MG5	Engine control module (ECM)	✓	✓	✓	✓		✓	SP2265, SP2266, SP2267
MG/ New MG5	Gearbox control module (TCM)	✓	✓	✓	✓		✓	
MG/ New MG5	Anti-lock brake system / Dynamic stability control (SCS/ABS)	✓	✓	✓	✓			SP2273, SP2274, SP2275, SP2276, SP2277, SP2278, SP2279, SP2280, SP2281, SP2282
MG/ New MG5	Airbag control module (SDM)	✓	✓	✓	✓			
MG/ New MG5	Body control module (BCM)	✓	✓	✓	✓		✓	SP2263, SP2264
MG/ New MG5	Electronic power steering system (EPS)	✓	✓	✓	✓			SP2268
MG/ New MG5	Combination instrument (IPK)	✓	✓	✓	✓		✓	SP2272
MG/ New MG5	Air conditioning module (HVAC)	✓	✓	✓	✓		✓	SP2271
MG/ New MG5	Gateway module (GW)	✓	✓	✓	✓			SP2269, SP2270
MG/ New MG5	Clutch cooling electronic oil pump (CCEOP)	✓	✓	✓	✓			
MG/ New MG5	Navigation entertainment system (FICM)	✓	✓	✓	✓			

MG/ New MG5	Front camera module (FVCM)	√	√	√	√			
MG/ New MG5	Shock control module (SCU)	√	√	√	√		√	
MG/ New MG5	Communication module (T-BOX)	√	√	√	√			
MG/ New MG5	360 Panoramic image control module (AVM)	√	√	√	√			
MG/ New MG5	Security Bluetooth module (SBTM)	√	√	√	√			SP0748
MG/MG5 2020 Pay 1.5T	Engine control module (ECM)	√	√	√	√		√	SP2285, SP2286
MG/MG5 2020 Pay 1.5T	Gearbox control module (TCM)	√	√	√	√			
MG/MG5 2020 Pay 1.5T	Anti-lock brake system / Dynamic stability control (SCS/ABS)	√	√	√	√			SP2289, SP2290, SP2291, SP2292, SP2293, SP2294, SP2295, SP2296, SP2297, SP2298
MG/MG5 2020 Pay 1.5T	Airbag control module (SDM)	√	√	√	√			
MG/MG5 2020 Pay 1.5T	Body control module (BCM)	√	√	√	√		√	SP2283, SP2284
MG/MG5 2020 Pay 1.5T	Electronic power steering system (EPS)	√	√	√	√			SP2287
MG/MG5 2020 Pay 1.5T	Combination instrument (IPK)	√	√	√	√		√	
MG/MG5 2020 Pay 1.5T	Air conditioning module (HVAC)	√	√	√	√		√	SP2288
MG/MG5 2020 Pay 1.5T	Electronic steering pierlet lock (ESCL)	√	√	√	√			
MG/MG5 2020 Pay 1.5T	Navigation entertainment system (FICM)	√	√	√	√			
MG/MG5 2020 Pay 1.5T	360 Panoramic image control module (AVM)	√	√	√	√			
MG/MG5 2020 Pay 1.5T	Communication module (T-BOX)	√	√	√	√			
MG/MG5 2020 Pay 1.5T	Clutch cooling electronic oil pump (CCEOP)	√	√	√	√			
MG/ MG HS	Engine control management (ECM)	√	√	√	√		√	SP0956
MG/ MG HS	Transmission control module (TCM)	√	√	√	√			SP0972, SP0973, SP0974, SP0975
MG/ MG HS	Anti-lock brake system / Dynamic stability control (SCS/ABS)	√	√	√	√			SP0981, SP0982
MG/ MG HS	Airbag control module (SDM)	√	√	√	√			
MG/ MG HS	Body control module (BCM)	√	√	√	√		√	SP0998
MG/ MG HS	Electronic steering power system (EPS)	√	√	√	√		√	SP0996
MG/ MG HS	Instrument module (IPK)	√	√	√	√		√	SP1001
MG/ MG HS	Keyless entry and start system (PEPS)	√	√	√	√			SP0999
MG/ MG HS	Air conditioning control module (HVAC)	√	√	√	√		√	SP1000
MG/ MG HS	Gateway system (GW)	√	√	√	√			SP0953, SP0954, SP0955
MG/ MG HS	Electronic steering pierlet lock (ESCL)	√	√	√	√			
MG/ MG HS	Electronic hand brake module (EPB)	√	√	√	√			SP0992, SP0993, SP0994, SP0995
MG/ MG HS	Tire pressure monitoring system (TPMS)	√	√	√	√			SP1004
MG/ MG HS	Four-wheel control module (TCCM)	√	√	√	√			SP0978
MG/ MG HS	Front camera module (FVCM)	√	√	√	√			SP0997
MG/ MG HS	Navigation entertainment system (FICM)	√	√	√	√			
MG/ MG HS	Communication module (TBOX)	√	√	√	√			SP0951, SP0952
MG/ MG HS	Stomat detection module (SCU)	√	√	√	√			
MG/ MG HS	Electric tail door control module (PLCM)	√	√	√	√			
MG/ MG HS	Natural light control module (ALCM)	√	√	√	√		√	
MG/ MG HS	Driving auxiliary module backward (RDA)	√	√	√	√			
MG/ MG HS	360 Panoramic image control module (AVM)	√	√	√	√			
MG/ New MG 6	Engine control module (ECM)	√	√	√	√		√	SP1551, SP1552
MG/ New MG 6	Gearbox control module (TCM)	√	√	√	√		√	SP1564
MG/ New MG 6	Anti-lock brake system / Dynamic stability control (SCS)	√	√	√	√			SP1567, SP1568, SP1569, SP1570, SP1571, SP1572, SP1573, SP1574, SP1575, SP1576, SP1577
MG/ New MG 6	Airbag control module (SDM)	√	√	√	√			
MG/ New MG 6	Body control module (BCM)	√	√	√	√		√	SP1583
MG/ New MG 6	Electronic steering power system (EPS)	√	√	√	√			SP1578
MG/ New MG 6	Instrument module (IPK)	√	√	√	√		√	SP1584
MG/ New MG 6	Keyless entry and start system (PEPS)	√	√	√	√			SP1582
MG/ New MG 6	Air conditioning module (HVAC)	√	√	√	√		√	SP1581
MG/ New MG 6	Tire pressure monitoring system (TPMS)	√	√	√	√			SP1585
MG/ New MG 6	Gateway (GW)	√	√	√	√			SP1548, SP1549, SP1550
MG/ New MG 6	Navigation entertainment system (FICM)	√	√	√	√			
MG/ New MG 6	Parking auxiliary control module (PDC)	√	√	√	√		√	
MG/ New MG 6	Front camera module (FVCM)	√	√	√	√			SP1580
MG/ New MG 6	DC converter with power management (PMDC)	√	√	√	√			
MG/ New MG 6	Electronic steering pierlet lock (ESCL)	√	√	√	√			
MG/ New MG 6	Communication module (T-BOX)	√	√	√	√			SP1546, SP1547
MG/ New MG 6	Dynamic headlight level adjustment (DHL)	√	√	√	√		√	SP1566
MG/ New MG 6	360 Panoramic image control module (AVM)	√	√	√	√			
MG/MG3	Engine management system (EMS)	√	√	√	√		√	SP0360, SP0361, SP0362
MG/MG3	Transmission control module (TCM)	√	√	√	√			
MG/MG3	Anti-lock brake system (ABS)	√	√	√	√			SP0363, SP0364
MG/MG3	Airbag module (SRS)	√	√	√	√			
MG/MG3	Body control module (BCM)	√	√	√	√		√	SP0365, SP0366
MG/MG3 ZERO (MCE3)	Engine control module (ECM)	√	√	√	√			SP1867, SP1868, SP1869
MG/MG3 ZERO (MCE3)	Gearbox control module (TCM)	√	√	√	√			
MG/MG3 ZERO (MCE3)	Anti-lock brake system / Dynamic stability control (SCS/ABS)	√	√	√	√			SP1871, SP1872
MG/MG3 ZERO (MCE3)	Airbag control module (SDM)	√	√	√	√			
MG/MG3 ZERO (MCE3)	Body control module (BCM)	√	√	√	√			SP1879
MG/MG3 ZERO (MCE3)	Instrument module (IPK)	√	√	√	√			SP1875
MG/MG3 ZERO (MCE3)	Air conditioning module (ETC)	√	√	√	√			SP1878
MG/MG3 ZERO (MCE3)	Tire pressure monitoring system (TPMS)	√	√	√	√			SP1870
MG/MG3 ZERO (MCE3)	Gateway (GW)	√	√	√	√			SP0661
MG/MG3 ZERO (MCE3)	Communication module (T-BOX)	√	√	√	√			
MG/MG3 ZERO (MCE3)	Navigation entertainment system (FICM)	√	√	√	√			
MG/MG3 ZERO (MCE3)	Corner sensor (SAS)	√	√	√	√			SP1876, SP1877
MG/MG3 ZERO (13 Pay)	Engine management system (EMS)	√	√	√	√			SP1896, SP1897, SP1898
MG/MG3 ZERO (13 Pay)	Automatic transmission control module (TCM)	√	√	√	√			SP1906, SP1907, SP1908, SP1909
MG/MG3 ZERO (13 Pay)	Anti-lock brake system (ABS)	√	√	√	√			SP1910
MG/MG3 ZERO (13 Pay)	Airbag control unit (SRS)	√	√	√	√			

MG/MG3 ZERO(13 Pay)	Body control module (BCM)	√	√	√	√			SP1894
MG/MG3 ZERO(13 Pay)	Instrument module (IPK)	√	√	√	√			SP1895
MG/MG3 ZERO(13 Pay)	Steering wheel corner sensor (SAS)	√	√	√	√			SP1904, SP1905
MG/MG3 ZERO	Engine management system (EMS)	√	√	√	√			SP1860
MG/MG3 ZERO	Automatic transmission control module (TCM)	√	√	√	√			SP1861, SP1862, SP1863, SP1864
MG/MG3 ZERO	Anti-lock brake system (ABS)	√	√	√	√			SP1865
MG/MG3 ZERO	Airbag control unit (SRS)	√	√	√	√			
MG/MG3 ZERO	Body control module (BCM)	√	√	√	√			SP1857
MG/MG3 ZERO	Instrument module (IPK)	√	√	√	√			SP1858, SP1859
MG/MG3 ZERO	Parking assist module (PDC)	√	√	√	√			
MG/MG6	Engine system (EMS)	√	√	√	√	√		
MG/MG6	Automatic gearbox system (AT)	√	√	√	√			
MG/MG6	Anti-lock brake system (ABS)	√	√	√	√	√		SP0370
MG/MG6	Airbag system (SRS)	√	√	√	√			
MG/MG6	Body control module (BCM)	√	√	√	√	√		
MG/MG6	Digital instrument unit (IPK)	√	√	√	√	√		SP0060, SP0061, SP0062
MG/MG6	Auto-air conditioning (AC)	√	√	√	√	√		
MG/MG6	Electronic steering pierlet lock (ESCL)	√	√	√	√			
MG/MG6	Electric window (PWIN)		√	√	√	√		
MG/MG6	Car entertainment equipment (FICM)		√	√				
MG/MG6	Navigation system (NAV)	√	√	√		√		
MG/MG6 14 Year	Engine control management (ECM)	√	√	√	√	√		SP0435, SP0436
MG/MG6 14 Year	Automatic gearbox system (AT)	√	√	√	√			SP0451, SP0452, SP0453, SP0454
MG/MG6 14 Year	Dynamic stabilization control system (SCS/ABS)	√	√	√	√			SP0448, SP0449, SP0450
MG/MG6 14 Year	Airbag system (SRS)	√	√	√	√			
MG/MG6 14 Year	Body control module (BCM)	√	√	√	√			SP0439
MG/MG6 14 Year	Electric power steering system (EHPS)	√	√	√	√			
MG/MG6 14 Year	Instrument unit (IPK)	√	√	√	√	√		
MG/MG6 14 Year	Automatic air conditioning system (ATC)	√	√	√	√	√		
MG/MG6 14 Year	Electronic air conditioner (ETC)	√	√	√	√			
MG/MG6 14 Year	Electronic parking brake system (EPB)	√	√	√	√	√		SP0440, SP0441, SP0442, SP0443, SP0444, SP0445, SP0446, SP0447
MG/MG6 14 Year	Entertainment system (FICM)	√	√	√	√	√		
MG/MG6 14 Year	Adaptive steering headlight system (AFS)	√	√	√	√	√		SP0437, SP0438
MG/MG6 14 Year	Electronic steering column lock (ESCL)	√	√	√	√			
MG/MG6 14 Year	Parking distance control (PDC)	√	√	√	√			
MG/MG6 14 Year	Rain Sensor (RRS)	√	√	√	√			
MG/MG6 14 Year	Switching control unit (SCU)	√	√	√	√			
MG/MG6 14 Year	Communication module (TBOX)	√	√	√	√			SP1506, SP1507, SP1508
MG/MG6 14 Year	Steering wheel corner sensor (SAS)	√	√	√	√			SP0455, SP0456
MG/MG6 13 Year	Engine control management (ECM)	√	√	√	√	√		SP0457, SP0458, SP0459
MG/MG6 13 Year	Automatic gearbox system (AT)	√	√	√	√			SP0467, SP0468, SP0469, SP0470
MG/MG6 13 Year	Dynamic stabilization control system (SCS/ABS)	√	√	√	√			SP0462, SP0463
MG/MG6 13 Year	Airbag system (SRS)	√	√	√	√			
MG/MG6 13 Year	Body control module (BCM)	√	√	√	√	√		SP0460
MG/MG6 13 Year	Instrument unit (IPK)	√	√	√	√	√		SP0461
MG/MG6 13 Year	Automatic air conditioning system (ATC)	√	√	√	√	√		
MG/MG6 13 Year	Electronic parking brake system (EPB)	√	√	√	√	√		SP0471, SP0472, SP0473, SP0474, SP0475, SP0476, SP0477, SP0478
MG/MG6 13 Year	Electronic steering column lock (ESCL)	√	√	√	√			
MG/MG6 13 Year	Entertainment system (FICM)	√	√	√	√	√		
MG/MG6 13 Year	Parking distance control (PDC)	√	√	√	√			
MG/MG6 13 Year	Rain Sensor (RRS)	√	√	√	√			
MG/MG6 13 Year	Switching control unit (SCU)	√	√	√	√	√		
MG/MG6 13 Year	Electronic air conditioner (ETC)	√	√	√	√			
MG/MG7-2007	Engine management system (MEMS)		√	√	√	√	√	
MG/MG7-2007	Airbag system (SRS)	√	√	√	√			
MG/MG7-2008	Engine system (ECM)	√	√	√	√	√		
MG/MG7-2008	Automatic gearbox (Aisin AT)	√	√	√	√			
MG/MG7-2008	Anti-lock brake system (ABS)	功能未知						
MG/MG7-2008	Airbag system (SRS)	√	√	√	√			
MG/MG7-2008	Gateway anti-theft module	√	√	√	√	√		SP0401
MG/MG7-2008	Gateway (GW)	√	√	√	√			
MG/MG7-2009	Engine system (ECM)	√	√	√	√	√		
MG/MG7-2009	Automatic gearbox (AT)	√	√	√	√			
MG/MG7-2009	Automatic gearbox (Aisin AT)	√	√	√	√			
MG/MG7-2009	Anti-lock brake system (ABS)	功能未知						
MG/MG7-2009	Airbag system (SRS)	√	√	√	√			
MG/MG7-2009	Body controller (BCM)	√	√	√	√			
MG/MG7-2009	Combination instrument (IPK)	√	√	√	√			SP0399
MG/MG7-2009	Dynamic stability control (ESP)	√	√	√	√			SP0402, SP0403, SP0404, SP0405, SP0406, SP0407, SP0408, SP0409, SP0410, SP0411, SP0412, SP0413, SP0414, SP0415, SP0416, SP0417
MG/MG7-2009	Automatic air conditioning control module (AC)	√	√	√	√	√		
MG/MG7-2009	Steering angle sensor (SAS)							SP0400
MG/MG7-2009	Gateway anti-theft module (IMMO)	√	√	√	√	√		SP0401
MG/MG7-2009	Gateway (GW)	√	√	√	√			
MG/MG7-2009	Seat memory module (MSM)	√	√	√	√	√		
MG/MG7-2009	Rainstorm / Shining sensor (RRS)	√	√	√	√			
MG/MG7-2009	Driver side portfolio switch (DSDCS)	√	√	√	√			

MG/MG7-2009	Left front smart door motor (LFDOOR)	√	√	√				
MG/MG7-2009	Right front smart door motor (RFDOOR)	√	√	√				
MG/MG7-2009	Left smart door motor (LRDOOR)	√	√	√				
MG/MG7-2009	Right smart door motor (RRDOOR)	√	√	√				
MG/MG7-L	Engine management system KV6 (ECM)	√	√	√	√		√	
MG/MG7-L	Automatic gearbox (AT)	√	√	√	√		√	
MG/MG7-L	Anti-lock brake system (ABS)	√	√	√	√		√	SP0367, SP0368
MG/MG7-L	Airbag system (SRS)	√	√	√				
MG/MG7-L	Gateway anti-theft module (GW)		√	√	√		√	
MG/MG5	Engine control unit (ECM)	√	√	√	√		√	SP0358
MG/MG5	Gearbox control unit (TCU)	√	√	√	√			SP0357
MG/MG5	Airbag system (SRS)	√	√	√	√			
MG/MG5	Body controller (BCM)	√	√	√	√		√	SP0356
MG/MG5	Combined instrument system (IPK)	√	√	√	√		√	SP0353, SP0354, SP0355
MG/MG5	Anti-theft system (IMMO)		√	√				SP0385, SP0386
MG/MG5	Automatic air conditioning control unit (AC)	√	√	√	√			
MG/MG TF	Engine management system (MEMS)	√	√	√	√		√	SP0360, SP0361, SP0362
MG/MG TF	Automatic gearbox (CVT)		√	√	√			
MG/MG TF	Airbag system (SRS)	√	√	√				
MG/MG TF	Safety control unit (BCM)	√			√		√	SP0365, SP0366
MG/MG TF	Power steering (EPS)	√		√	√			
MG/MG TF	Combination instrument (IPK)	√			√		√	SP0396, SP0397
MG/MG GS (Rui Teng)	Engine control module (ECM)	√	√	√	√		√	
MG/MG GS (Rui Teng)	Gearbox control module (TCM)	√	√	√	√			SP0811, SP0812, SP0813, SP0814
MG/MG GS (Rui Teng)	Anti-lock brake system / Dynamic stability control (SCS/ABS)	√	√	√	√			SP0822, SP0823, SP0824, SP0825
MG/MG GS (Rui Teng)	Airbag control module (SDM)	√	√	√	√			
MG/MG GS (Rui Teng)	Body control module (BCM)	√	√	√	√		√	SP0494
MG/MG GS (Rui Teng)	Electronic steering power system (EPS)	√	√	√	√			SP0828
MG/MG GS (Rui Teng)	Combination instrument (IPK)	√	√	√	√		√	SP0493
MG/MG GS (Rui Teng)	Keyless entry and key launch module (PEPS)	√	√	√	√			SP0804
MG/MG GS (Rui Teng)	Air conditioning module (HVAC)	√	√	√	√		√	SP0495
MG/MG GS (Rui Teng)	Gateway module (GW)	√	√	√	√			SP0807, SP0808
MG/MG GS (Rui Teng)	Electronic hand brake module (EPB)	√		√	√			SP0831, SP0832, SP0833, SP0834
MG/MG GS (Rui Teng)	Four-wheel control module (TCCM)	√	√	√	√			SP0816
MG/MG GS (Rui Teng)	Parking assist module (PDC)	√	√	√	√			
MG/MG GS (Rui Teng)	DC converter with power management (PMDC)	√	√	√	√			
MG/MG GS (Rui Teng)	Communication module (TBOX)	√	√	√	√			SP0817, SP0818
MG/MG GS (Rui Teng)	Dynamic headlight level adjustment (AFS)	√	√	√	√			SP0835
MG/MG GS (Rui Teng)	Switching control unit (SCU)	√	√	√	√			
MG/MG GS (Rui Teng)	Entertainment system control module (NMFF)	√	√	√	√			
MG/MG GS (Rui Teng)	Corner sensor (SAS)	√	√	√	√			SP0829, SP0830
MG/MG GS (Rui Teng) (Rui Teng Plus)	Engine control module (ECM)	√	√	√	√			SP0863
MG/MG GS (Rui Teng) (Rui Teng Plus)	Gearbox control module (TCM)	√	√	√	√			SP0865, SP0866, SP0867, SP0868
MG/MG GS (Rui Teng) (Rui Teng Plus)	Anti-lock brake system / Dynamic stability control (SCS/ABS)	√	√	√	√			SP0871, SP0872, SP0873
MG/MG GS (Rui Teng) (Rui Teng Plus)	Airbag control module (SDM)	√	√	√	√			
MG/MG GS (Rui Teng) (Rui Teng Plus)	Body control module (BCM)	√	√	√	√			SP0879
MG/MG GS (Rui Teng) (Rui Teng Plus)	Electronic steering power system (EPS)	√	√	√	√			SP0874
MG/MG GS (Rui Teng) (Rui Teng Plus)	Combination instrument (IPK)	√	√	√	√			SP0883
MG/MG GS (Rui Teng) (Rui Teng Plus)	Air conditioning module (HVAC)	√	√	√	√			SP0881
MG/MG GS (Rui Teng) (Rui Teng Plus)	Keyless entry and key launch module (PEPS)	√	√	√	√			SP0882
MG/MG GS (Rui Teng) (Rui Teng Plus)	Tire pressure monitoring system (TPMS)	√	√	√	√			SP0880
MG/MG GS (Rui Teng) (Rui Teng Plus)	Electronic hand brake module (EPB)	√	√	√	√			SP0875, SP0876, SP0877, SP0878
MG/MG GS (Rui Teng) (Rui Teng Plus)	Gateway module (GW)	√	√	√	√			SP0861, SP0862
MG/MG GS (Rui Teng) (Rui Teng Plus)	Communication module (T-BOX)	√	√	√	√			SP0859, SP0860
MG/MG GS (Rui Teng) (Rui Teng Plus)	Seck detection module (SCU)	√	√	√	√			
MG/MG GS (Rui Teng) (Rui Teng Plus)	Parking assist module (PDC)	√	√	√	√			
MG/MG GS (Rui Teng) (Rui Teng Plus)	Navigation entertainment system (FICM)	√	√	√				
MG/MG GS (Rui Teng) (Rui Teng Plus)	DC converter with power management (PMDC)	√	√	√	√			
MG/MG GS (Rui Teng) (Rui Teng Plus)	Four-wheel control module (TCCM)	√	√	√	√			SP0870
MG/MG GT(Sharp) (1.4T)	Engine management system (EMS)	√	√	√	√		√	SP0518, SP0519, SP0520, SP0521
MG/MG GT(Sharp) (1.4T)	Automatic wave box system (AT)	√	√	√	√		√	SP0522
MG/MG GT(Sharp) (1.4T)	Anti-lock brake system (ABS)	√	√	√	√			SP0523, SP0524
MG/MG GT(Sharp) (1.4T)	Airbag system (SDM)	√	√	√	√		√	
MG/MG GT(Sharp) (1.4T)	Body control module (BCM)	√	√	√	√		√	SP0527

MG/MG GT(Sharp) (1.4T)	Electric power steering system (EPS)	√	√	√	√	√	
MG/MG GT(Sharp) (1.4T)	Instrument unit (IPK)	√	√	√	√	√	SP0528
MG/MG GT(Sharp) (1.4T)	Automatic air conditioning system (ATC)	√	√	√	√	√	SP0529
MG/MG GT(Sharp) (1.4T)	Gateway (GW)	√	√	√	√	√	SP0530, SP0531
MG/MG GT(Sharp) (1.4T)	Entertainment system control module (FICM)	√	√	√	√	√	
MG/MG GT(Sharp) (1.4T)	Steering angle sensor module (SAS)	√	√	√	√		SP0532
MG/MG GT(Sharp) (1.4T)	Car wiring box (TBOX)	√	√	√	√	√	SP0533, SP0534
MG/MG GT(Sharp) (1.5L)	Engine management system (EMS)	√	√	√	√	√	SP0498, SP0499, SP0500, SP0501
MG/MG GT(Sharp) (1.5L)	Automatic wave box system (AT)	√	√	√	√	√	SP0502,
MG/MG GT(Sharp) (1.5L)	Anti-lock brake system (ABS)	√	√	√	√		SP0505, SP0506
MG/MG GT(Sharp) (1.5L)	Airbag system (SDM)	√	√	√	√	√	
MG/MG GT(Sharp) (1.5L)	Body control module (BCM)	√	√	√	√	√	SP0509,
MG/MG GT(Sharp) (1.5L)	Electric power steering system (EPS)	√	√	√	√	√	SP0510
MG/MG GT(Sharp) (1.5L)	Instrument unit (IPK)	√	√	√	√	√	
MG/MG GT(Sharp) (1.5L)	Entertainment system control module (FICM)	√	√	√	√	√	
MG/MG GT(Sharp) (1.5L)	Steering angle sensor module (SAS)	√	√	√	√		SP0511
MG/MG GT(Sharp) (1.5L)	Car wiring box (TBOX)	√	√	√	√		SP0512, SP0513, SP0514
MG/MG ZS	Engine control module (ECM)	√	√	√	√	√	SP1919, SP1920, SP1921
MG/MG ZS	Gearbox control module (TCM)	√	√	√	√		SP1940
MG/MG ZS	Anti-lock brake system / Dynamic stability control (SCS/ABS)	√	√	√	√		SP1943, SP1944
MG/MG ZS	Airbag control module (SDM)	√	√	√	√		
MG/MG ZS	Body control module (BCM)	√	√	√	√	√	SP1916, SP1917
MG/MG ZS	Electronic steering power system (EPS)	√	√	√	√	√	SP1945
MG/MG ZS	Instrument module (IPK)	√	√	√	√	√	SP1946
MG/MG ZS	Air conditioning module (HVAC)	√	√	√	√	√	SP1947
MG/MG ZS	Tire pressure monitoring system (TPMS)	√	√	√	√		SP1948
MG/MG ZS	Electronic steering pierlet lock (ESCL)	√	√	√	√		
MG/MG ZS	Navigation entertainment system (FICM)	√	√	√	√		
MG/MG ZS	Communication module (T-BOX)	√	√	√	√		SP1913, SP1914, SP1915
MG/MG ZS	Security Bluetooth module (STEM)	√	√	√	√		
MG/MG ZS Plus	Engine control module (ECM)	√	√	√	√	√	SP2074, SP2075
MG/MG ZS Plus	Gearbox control module (TCM)	√	√	√	√		
MG/MG ZS Plus	Anti-lock brake system / Dynamic stability control (SCS/ABS)	√	√	√	√		SP2080, SP2081, SP2082
MG/MG ZS Plus	Airbag control module (SDM)	√	√	√	√		
MG/MG ZS Plus	Body control module (BCM)	√	√	√	√	√	SP2072, SP2073
MG/MG ZS Plus	Electronic steering power system (EPS)	√	√	√	√		SP2083
MG/MG ZS Plus	Instrument module (IPK)	√	√	√	√	√	
MG/MG ZS Plus	Air conditioning module (HVAC)	√	√	√	√	√	SP2084
MG/MG ZS Plus	Tire pressure monitoring system (TPMS)	√	√	√	√		SP2085
MG/MG ZS Plus	Communication module (T-BOX)	√	√	√	√		SP2070, SP2071
MG/MG ZS Plus	Electronic steering pierlet lock (ESCL)	√	√	√	√		
MG/MG ZS Plus	Navigation entertainment system (FICM)	√	√	√	√		
MG/MG ZS Plus	360 Panoramic image control module (AVM)	√	√	√	√		
MG/MG ZS Plus Bring ADAS	Engine control module (ECM)	√	√	√	√	√	SP2096, SP2097
MG/MG ZS Plus Bring ADAS	Gearbox control module (TCM)	√	√	√	√		
MG/MG ZS Plus Bring ADAS	Anti-lock brake system / Dynamic stability control (SCS/ABS)	√	√	√	√		SP2092, SP2093, SP2094
MG/MG ZS Plus Bring ADAS	Airbag control module (SDM)	√	√	√	√		
MG/MG ZS Plus Bring ADAS	Body control module (BCM)	√	√	√	√	√	SP2088, SP2089
MG/MG ZS Plus Bring ADAS	Electronic steering power system (EPS)	√	√	√	√		SP2090
MG/MG ZS Plus Bring ADAS	Instrument module (IPK)	√	√	√	√	√	
MG/MG ZS Plus Bring ADAS	Air conditioning module (HVAC)	√	√	√	√	√	SP2115
MG/MG ZS Plus Bring ADAS	Tire pressure monitoring system (TPMS)	√	√	√	√		SP2116
MG/MG ZS Plus Bring ADAS	Gateway module (GW)	√	√	√	√		SP2095
MG/MG ZS Plus Bring ADAS	Communication module (T-BOX)	√	√	√	√		SP2086, SP2087
MG/MG ZS Plus Bring ADAS	Front camera module (FVCM)	√	√	√	√		SP2091
MG/MG ZS Plus Bring ADAS	Electronic steering pierlet lock (ESCL)	√	√	√	√		
MG/MG ZS Plus Bring ADAS	Radar module (FDR)	√	√	√	√		SP2113, SP2114

MG/MG ZS Plus Bring ADAS	Navigation entertainment system (FICM)	√	√	√	√			
MG/MG ZS Plus Bring ADAS	360 Panoramic image control module (AVM)	√	√	√	√			
MG/NEW MG GS	Engine control module (ECM)	√	√	√	√	√		SP0583,
MG/NEW MG GS	Wave box control module (TCM)	√	√	√	√			SP0586, SP0587, SP0588, SP0589, SP0590, SP0591, SP0592,
MG/NEW MG GS	Dynamic stabilization control system / Car anti-lock brake system (SCS/ABS)	√	√	√	√			SP0604, SP0605, SP0606,
MG/NEW MG GS	Airbag system (SRS)	√	√	√	√			
MG/NEW MG GS	Body control module (BCM)	√	√	√	√	√		SP0611,
MG/NEW MG GS	Electric power steering system (EPS)	√	√	√	√	√		SP0603,
MG/NEW MG GS	Instrument unit (IPK)	√	√	√	√	√		SP0585,
MG/NEW MG GS	Keyless entry module (PEPS)	√	√	√	√			SP0610
MG/NEW MG GS	Air conditioning control module (HVAC)	√	√	√	√	√		SP0609,
MG/NEW MG GS	Tire pressure monitoring system (TPMS)	√	√	√	√	√		SP0614
MG/NEW MG GS	Electronic parking brake system (EPB)	√	√	√	√			SP0607, SP0608,
MG/NEW MG GS	Gateway (GW)	√	√	√	√			SP0600, SP0601,
MG/NEW MG GS	Sub-box control module (TCCM)	√	√	√	√			SP0602,
MG/NEW MG GS	Shock control module (SCU)	√	√	√	√			
MG/NEW MG GS	Parking assist system (PDC)	√	√	√	√	√		
MG/NEW MG GS	Entertainment system control module (FICM)	√	√	√	√	√		
MG/NEW MG GS	Communication module (TBOX)	√	√	√	√			SP0612, SP0613,
MG/NEW MG GS	Power Control Module (PMDC)	√	√	√	√			
MG/ MG HS UK	Engine management system (ECM)	√	√	√	√	√		SP1113
MG/ MG HS UK	Gearbox control module (TCM)	√	√	√	√	√		SP1124
MG/ MG HS UK	Dynamic stabilization control system (SCS/ABS)	√	√	√	√			SP1131, SP1132, SP1133, SP1134, SP1135, SP1136, SP1137, SP1138, SP1139
MG/ MG HS UK	Airbag control module (SDM)	√	√	√	√			
MG/ MG HS UK	Body control module (BCM)	√	√	√	√	√		
MG/ MG HS UK	Electronic steering power system (EPS)	√	√	√	√			SP1140
MG/ MG HS UK	Combination instrument (IPK)	√	√	√	√	√		SP1146
MG/ MG HS UK	Keyless entry and key launch module (PEPS)	√	√	√	√			SP1144
MG/ MG HS UK	Air conditioning system (Warm air , Ventilation and air conditioning) (HVAC)	√	√	√	√	√		SP1145
MG/ MG HS UK	Tire pressure monitoring system (TPMS)	√	√	√	√			SP1148
MG/ MG HS UK	Gateway (GW)	√	√	√	√			SP1110, SP1111, SP1112
MG/ MG HS UK	Front camera module (FVCM)	√	√	√	√			SP1141
MG/ MG HS UK	Radar module (FDR)	√	√	√	√			SP1142, SP1143
MG/ MG HS UK	Communication module (T-BOX)	√	√	√	√			
MG/ MG HS UK	Seck detection module (SCU)	√	√	√	√			
MG/ MG HS UK	Electronic steering pierlet lock (ESCL)	√	√	√	√			
MG/ MG HS UK	Electric tail door control module (PLCM)	√	√	√	√			
MG/ MG HS UK	Natural light control module (ALCM)	√	√	√	√	√		
MG/ MG HS UK	Rear driving assistance module (RDA)	√	√	√	√			
MG/ MG HS UK	Entertainment system control module (FICM)	√	√	√	√			
MG/MG6 EU	Engine control unit (ECM)	√	√	√	√	√		SP0358
MG/MG6 EU	Anti-lock brake system (ABS)	功能未知						
MG/MG6 EU	Airbag system (SRS)	√	√	√	√			
MG/MG6 EU	Body control module (BCM)	√	√	√	√	√		
MG/MG6 EU	Body anti-theft system and engine anti-theft system (IMMO)		√	√	√			
MG/MG6 EU	Digital instrument unit (IPK)	√	√	√	√	√		SP0060, SP0061, SP0062
MG/MG6 EU	Auto-air conditioning (AC)	√	√	√	√	√		
MG/MG6 EU	Electric window (PWIN)	√	√	√	√	√		
MG/MG6 EU	Electronic steering pierlet lock (ESCL)	√	√	√	√			
MG/MG6 EU	Car entertainment equipment (FICM)	√	√	√	√			
MG/MG6 EU	Navigation system (NAV)	√	√	√	√	√		
MG/MG6 EU	Central lock (CLOCK)	√	√	√	√	√		
MG/MG6 EU	Wiper and cleaning (WWASH)	√	√	√	√	√		
MG/MG6 EU	Interior lamps and exterior lamps (ELIL)	√	√	√	√	√		
MG/MG6 Eu Diesel(Diesel)	Engine control management (ECM)	√	√	√	√	√		SP0486, SP0487
MG/MG6 Eu Diesel(Diesel)	Electronic stabilization system (ESP)	√	√	√	√			
MG/MG6 Eu Diesel(Diesel)	Airbag system (SRS)	√	√	√	√			
MG/MG6 Eu Diesel(Diesel)	Body control module (BCM)	√	√	√	√	√		
MG/MG6 Eu Diesel(Diesel)	Electric power steering system (EHPS)	√	√	√	√			
MG/MG6 Eu Diesel(Diesel)	Instrument unit (IPK)	√	√	√	√	√		
MG/MG6 Eu Diesel(Diesel)	Automatic air conditioning system (ATC)	√	√	√	√			
MG/MG6 Eu Diesel(Diesel)	Electronic steering column lock (ESCL)	√	√	√	√			
MG/MG6 Eu Diesel(Diesel)	Navigation system (NAV)	√	√	√		√		
MG/MG6 Eu Diesel(Diesel)	Parking distance control (PDC)	√	√	√	√			
MG/MG6 Eu Diesel(Diesel)	Rain Sensor (RLS)	√	√	√	√			
MG/MG3 EU	Engine management system (EMS)	√	√	√	√			
MG/MG3 EU	Dynamic stability control (SCS)	√	√	√	√			
MG/MG3 EU	Airbag control unit (SRS)	√	√	√	√			
MG/MG3 EU	Body control module (BCM)	√	√	√	√			
MG/MG3 EU	Instrument module (IPK)	√	√	√	√			
MG/MG3 EU	Steering wheel corner sensor (SAS)	√	√	√	√			

MG/ZS11 EU	Engine control module (ECM)	✓	✓	✓	✓		✓	SP1951, SP1952, SP1953
MG/ZS11 EU	Gearbox control module (TCM)	✓	✓	✓	✓			SP1970
MG/ZS11 EU	Dynamic stability control (SCS)	✓	✓	✓	✓			SP1973, SP1974
MG/ZS11 EU	Airbag control module (SDM)	✓	✓	✓	✓			
MG/ZS11 EU	Body control module (BCM)	✓	✓	✓	✓		✓	SP1949, SP1950
MG/ZS11 EU	Electronic steering power system (EPS)	✓	✓	✓	✓		✓	SP1975
MG/ZS11 EU	Instrument module (IPK)	✓	✓	✓	✓		✓	SP1976
MG/ZS11 EU	Air conditioning module (HVAC)	✓	✓	✓	✓		✓	SP1977
MG/ZS11 EU	Tire pressure monitoring system (TPMS)	✓	✓	✓	✓			SP1978
MG/ZS11 EU	Electronic steering pierlet lock (ESCL)	✓	✓	✓	✓			
MG/ZS11 EU	Navigation entertainment system (FICM)	✓	✓	✓	✓			
MG/ZS11_MCE_UK	Engine control module (ECM)	✓	✓	✓	✓		✓	SP2131, SP2132, SP2133, SP2134, SP2135, SP2136, SP2137, SP2138, SP2139, SP2140
MG/ZS11_MCE_UK	Gearbox control module (TCM)	✓	✓	✓	✓			
MG/ZS11_MCE_UK	Airbag control module (SDM)	✓	✓	✓	✓			
MG/ZS11_MCE_UK	Anti-lock brake system / Dynamic stability control (SCS/EPB)	✓	✓	✓	✓			SP2147, SP2148, SP2149
MG/ZS11_MCE_UK	Body control module (BCM)	✓	✓	✓	✓		✓	SP2129, SP2130
MG/ZS11_MCE_UK	Electronic steering power system (EPS)	✓	✓	✓	✓			SP2150
MG/ZS11_MCE_UK	Instrument module (IPK)	✓	✓	✓	✓		✓	SP2151
MG/ZS11_MCE_UK	Air conditioning module (HVAC)	✓	✓	✓	✓		✓	SP2152
MG/ZS11_MCE_UK	Tire pressure monitoring system (TPMS)	✓	✓	✓	✓			SP2153
MG/ZS11_MCE_UK	Rear driving assistance module (RDA)	✓	✓	✓	✓			
MG/ZS11_MCE_UK	Electronic steering pierlet lock (ESCL)	✓	✓	✓	✓			
MG/ZS11_MCE_UK	Navigation entertainment system (FICM)	✓	✓	✓	✓			
MG/ZS11_MCE_UK	360 Panoramic image control module (AVM)	✓	✓	✓	✓			
MG/ MG HS TT	Engine management system (ECM)	✓	✓	✓	✓		✓	SP1087, SP1088, SP1089
MG/ MG HS TT	Gearbox control module (TCM)	✓	✓	✓	✓			
MG/ MG HS TT	Dynamic stabilization control system (SCS/ABS)	✓	✓	✓	✓			SP1091, SP1092, SP1093, SP1094, SP1095, SP1096, SP1097, SP1098
MG/ MG HS TT	Airbag control module (SDM)	✓	✓	✓	✓			
MG/ MG HS TT	Body control module (BCM)	✓	✓	✓	✓		✓	SP1103
MG/ MG HS TT	Electronic steering power system (EPS)	✓	✓	✓	✓			SP1101
MG/ MG HS TT	Combination instrument (IPK)	✓	✓	✓	✓		✓	SP1106
MG/ MG HS TT	Keyless entry and key launch module (PEPS)	✓	✓	✓	✓			SP1104
MG/ MG HS TT	Air conditioning system (Warm air , Ventilation and air conditioning) (HVAC)	✓	✓	✓	✓		✓	SP1105
MG/ MG HS TT	Tire pressure monitoring system (TPMS)	✓	✓	✓	✓			SP1109
MG/ MG HS TT	Gateway (GW)	✓	✓	✓	✓			SP1084, SP1085, SP1086
MG/ MG HS TT	Communication module (T-BOX)	✓	✓	✓	✓			SP1083
MG/ MG HS TT	Radar module (FDR)	✓	✓	✓	✓			SP1099, SP1100
MG/ MG HS TT	Front camera module (FVCM)	✓	✓	✓	✓			SP1102
MG/ MG HS TT	Electric tail door control module (PLCM)	✓	✓	✓	✓			
MG/ MG HS TT	Electronic steering pierlet lock (ESCL)	✓	✓	✓	✓			
MG/ MG HS TT	Natural light control module (ALCM)	✓	✓	✓	✓		✓	
MG/ MG HS TT	Rear driving assistance module (RDA)	✓	✓	✓	✓			
MG/ MG HS TT	Entertainment system control module (FICM)	✓	✓	✓	✓			
MG/ MG HS TT	360 Panoramic image control module (AVM)	✓	✓	✓	✓			
MG/IP2X TT	Engine management system (ECM)	✓	✓	✓	✓			
MG/IP2X TT	Automatic transmission control module (TCM)	✓	✓	✓	✓			SP1534, SP1535, SP1536, SP1537
MG/IP2X TT	Anti-lock brake system / Dynamic stability control (ABS/SCS)	✓	✓	✓	✓			SP1544
MG/IP2X TT	Airbag control unit (SDM)	✓	✓	✓	✓			
MG/IP2X TT	Body control module (BCM)	✓	✓	✓	✓			SP1533
MG/IP2X TT	Instrument module (IPK)	✓	✓	✓	✓			SP1532
MG/IP2X TT	Air conditioning module (ATC)	✓	✓	✓	✓			
MG/IP2X TT	Electronic park brake (EPB)	✓	✓	✓	✓			SP1538, SP1539, SP1540, SP1541, SP1542, SP1543
MG/IP2X TT	Electronic steering pierlet lock (ESCL ECU)	✓	✓	✓	✓			
MG/IP2X TT	Seck detection module (SCU)	✓	✓	✓	✓			
MG/ZP11MCE3TT	Engine control module (ECM)	✓	✓	✓	✓			SP1881, SP1882, SP1883
MG/ZP11MCE3TT	Gearbox control module (TCM)	✓	✓	✓	✓			
MG/ZP11MCE3TT	Anti-lock brake system / Dynamic stability control (SCS/ABS)	✓	✓	✓	✓			SP1885, SP1886
MG/ZP11MCE3TT	Airbag control module (SDM)	✓	✓	✓	✓			
MG/ZP11MCE3TT	Body control module (BCM)	✓	✓	✓	✓			SP1893
MG/ZP11MCE3TT	Instrument module (IPK)	✓	✓	✓	✓			SP1889
MG/ZP11MCE3TT	Air conditioning module (ETC)	✓	✓	✓	✓			SP1892
MG/ZP11MCE3TT	Tire pressure monitoring system (TPMS)	✓	✓	✓	✓			SP1884
MG/ZP11MCE3TT	Gateway (GW)	✓	✓	✓	✓			SP1880
MG/ZP11MCE3TT	Communication module (T-BOX)	✓	✓	✓	✓			
MG/ZP11MCE3TT	Navigation entertainment system (FICM)	✓	✓	✓	✓			
MG/ZP11MCE3TT	Corner sensor (SAS)	✓	✓	✓	✓			SP1890, SP1891
MG/ZS11_MCE TT	Engine control module (ECM)	✓	✓	✓	✓		✓	
MG/ZS11_MCE TT	Gearbox control module (TCM)	✓	✓	✓	✓			
MG/ZS11_MCE TT	Anti-lock brake system / Dynamic stability control (SCS/EPB)	✓	✓	✓	✓			SP2122, SP2123, SP2124
MG/ZS11_MCE TT	Airbag control module (SDM)	✓	✓	✓	✓			
MG/ZS11_MCE TT	Body control module (BCM)	✓	✓	✓	✓		✓	SP2118, SP2119
MG/ZS11_MCE TT	Electronic steering power system (EPS)	✓	✓	✓	✓			SP2125
MG/ZS11_MCE TT	Instrument module (IPK)	✓	✓	✓	✓		✓	SP2126
MG/ZS11_MCE TT	Air conditioning module (HVAC)	✓	✓	✓	✓		✓	SP2127
MG/ZS11_MCE TT	Tire pressure monitoring system (TPMS)	✓	✓	✓	✓			SP2128
MG/ZS11_MCE TT	Communication module (T-BOX)	✓	✓	✓	✓			SP2117
MG/ZS11_MCE TT	Electronic steering pierlet lock (ESCL)	✓	✓	✓	✓			
MG/ZS11_MCE TT	Navigation entertainment system (FICM)	✓	✓	✓	✓			
MG/ MG EHS	Engine management system (ECM)	✓	✓	✓	✓		✓	SP1009

MG/ MG EHS	Battery management module (BMS)	√	√	√	√		√	
MG/ MG EHS	Car charger (OBC)	√	√	√	√			
MG/ MG EHS	Hybrid control unit (HCU)	√	√	√	√			SP1018, SP1019, SP1020, SP1021, SP1022, SP1023, SP1024
MG/ MG EHS	Integrated starter control module (ISC)	√	√	√	√		√	SP1025, SP1026
MG/ MG EHS	High-voltage DC / DC converter (HVDCC)	√	√	√	√			
MG/ MG EHS	Seck detection module (SCU)	√	√	√	√			
MG/ MG EHS	Dynamic stabilization control system (SCS/ABS)	√	√	√	√			SP1027, SP1028, SP1029, SP1030, SP1031, SP1032, SP1033, SP1034, SP1035
MG/ MG EHS	Airbag control module (SDM)	√	√	√	√			
MG/ MG EHS	Body control module (BCM)	√	√	√	√		√	SP1038
MG/ MG EHS	Electronic steering power system (EPS)	√	√	√	√			SP1036
MG/ MG EHS	Combination instrument (IPK)	√	√	√	√		√	
MG/ MG EHS	Keyless entry and key launch module (PEPS)	√	√	√	√			SP1039
MG/ MG EHS	Air conditioning system (Warm air , Ventilation and air conditioning) (HVAC)	√	√	√	√		√	SP1040
MG/ MG EHS	Tire pressure monitoring system (TPMS)	√	√	√	√			SP1041
MG/ MG EHS	Gateway (GW)	√	√	√	√			SP1007, SP1008
MG/ MG EHS	Communication module (T-BOX)	√	√	√	√			SP1005, SP1006
MG/ MG EHS	Front camera module (FVCM)	√	√	√	√			SP1037
MG/ MG EHS	Automatic parking assistance system (APA)	√	√	√	√			
MG/ MG EHS	Electric tail door control module (PLCM)	√	√	√	√			
MG/ MG EHS	Electronic steering pierlet lock (ESCL)	√	√	√	√			
MG/ MG EHS	Entertainment system control module (FICM)	√	√	√	√			
MG/ MG EHS	Rear driving assistance module (RDA)	√	√	√	√			
MG/ MG EHS	Natural light control module (ALCM)	√	√	√	√		√	
MG/ MG EZS	Battery management system (BMS)	√	√	√	√		√	
MG/ MG EZS	Vehicle control module (VCU)	√	√	√	√		√	SP1984
MG/ MG EZS	Car charger (OBC)	√	√	√	√			
MG/ MG EZS	DC / DC converter (DCDC)	√	√	√	√			
MG/ MG EZS	Traction motor controller (TC)	√	√	√	√			SP1985
MG/ MG EZS	Anti-lock brake system / Dynamic stability control (SCS/ABS)	√	√	√	√			SP1994, SP1995
MG/ MG EZS	Airbag control module (SDM)	√	√	√	√			
MG/ MG EZS	Body control module (BCM)	√	√	√	√		√	SP1996
MG/ MG EZS	Electronic steering power system (EPS)	√	√	√	√			SP1993
MG/ MG EZS	Instrument module (IPK)	√	√	√	√		√	SP1999
MG/ MG EZS	Keyless entry and start system (PEPS)	√	√	√	√			SP1997
MG/ MG EZS	Air conditioning control module (HVAC)	√	√	√	√		√	SP1998
MG/ MG EZS	Gateway system (GW)	√	√	√	√			SP1981, SP1982, SP1983
MG/ MG EZS	Electronic hand brake module (EPB)	√	√	√	√		√	SP1986, SP1987, SP1988, SP1989, SP1990, SP1991, SP1992
MG/ MG EZS	Tire pressure monitoring system (TPMS)	√	√	√	√			SP2000
MG/ MG EZS	Navigation entertainment system (FICM)	√	√	√	√			
MG/ MG EZS	Communication module (TBOX)	√	√	√	√			SP1979, SP1980
MG/ MG EZS	Stomat detection module (SCU)	√	√	√	√			
MG/ MG 6 New energy (eMG6)	Engine control module (ECM)	√	√	√	√		√	SP1734, SP1735
MG/ MG 6 New energy (eMG6)	Battery management module (BMS)	√	√	√	√		√	
MG/ MG 6 New energy (eMG6)	Car charger (OBC)	√	√	√	√			
MG/ MG 6 New energy (eMG6)	Hybrid control unit (HCU)	√	√	√	√		√	SP1727, SP1728, SP1729, SP1730, SP1731
MG/ MG 6 New energy (eMG6)	Traction motor controller (TC)	√	√	√	√		√	SP1732
MG/ MG 6 New energy (eMG6)	Anti-lock brake system / Dynamic stability control (SCS)	√	√	√	√			SP1736, SP1737, SP1738, SP1739, SP1740, SP1741, SP1742, SP1743, SP1744, SP1745, SP1746
MG/ MG 6 New energy (eMG6)	Airbag control module (SDM)	√	√	√	√			
MG/ MG 6 New energy (eMG6)	Body control module (BCM)	√	√	√	√		√	SP1750
MG/ MG 6 New energy (eMG6)	Electronic steering power system (EPS)	√	√	√	√			SP1747
MG/ MG 6 New energy (eMG6)	Combination instrument (IPK)	√	√	√	√		√	SP1753
MG/ MG 6 New energy (eMG6)	Gateway (GW)	√	√	√	√			SP1723, SP1724
MG/ MG 6 New energy (eMG6)	Keyless entry and start system (PEPS)	√	√	√	√			SP1751
MG/ MG 6 New energy (eMG6)	Air conditioning module (HVAC)	√	√	√	√		√	SP1752
MG/ MG 6 New energy (eMG6)	Electronic steering pierlet lock (ESCL)	√	√	√	√			
MG/ MG 6 New energy (eMG6)	Navigation entertainment system (FICM)	√	√	√	√			
MG/ MG 6 New energy (eMG6)	Communication module (T-BOX)	√	√	√	√			SP1725, SP1726
MG/ MG 6 New energy (eMG6)	Integrated starter control module (ISC)	√	√	√	√			SP1733
MG/ MG 6 New energy (eMG6)	Switching control unit (SCU)	√	√	√	√			
MG/ MG 6 New energy (eMG6)	Electronic oil pump motor controller (EOPC)	√	√	√	√			
MG/ MG 6 New energy (eMG6)	Front camera module (FVCM)	√	√	√	√			SP1748

MG/ MG 6 New energy (eMG6)	Automatic parking system / Parking assist system (APA/PDC)	√	√	√	√		
MG/ MG 6 New energy (eMG6)	Dynamic headlight level adjustment (DHL)	√	√	√	√	√	SP1749
MG/eMG6 Three generations	Engine control module (ECM)	√	√	√	√	√	SP1681, SP1682
MG/eMG6 Three generations	Battery management module (BMS)	√	√	√	√	√	
MG/eMG6 Three generations	Charging control unit (OBC)	√	√	√	√		
MG/eMG6 Three generations	Hybrid control unit (HCU)	√	√	√	√		SP1672, SP1673, SP1674, SP1675, SP1676, SP1677, SP1678
MG/eMG6 Three generations	Anti-lock brake system / Dynamic stability control (SCS)	√	√	√	√		SP1684, SP1685, SP1686, SP1687, SP1688, SP1689, SP1690, SP1691, SP1692, SP1693
MG/eMG6 Three generations	Airbag control module (SDM)	√	√	√	√		
MG/eMG6 Three generations	Body control module (BCM)	√	√	√	√	√	SP1694
MG/eMG6 Three generations	Electronic steering power system (EPS)	√	√	√	√	√	SP1683
MG/eMG6 Three generations	Combination instrument (IPK)	√	√	√	√	√	SP1697
MG/eMG6 Three generations	Gateway (GW)	√	√	√	√		SP1670, SP1671
MG/eMG6 Three generations	Keyless entry and start system (PEPS)	√	√	√	√		SP1695
MG/eMG6 Three generations	Air conditioning module (HVAC)	√	√	√	√	√	SP1696
MG/eMG6 Three generations	Tire pressure monitoring system (TPMS)	√	√	√	√		SP1699
MG/eMG6 Three generations	Electronic steering pierlet lock (ESCL)	√	√	√	√		
MG/eMG6 Three generations	Navigation entertainment system (FICM)	√	√	√	√		
MG/eMG6 Three generations	Communication module (T-BOX)	√	√	√	√		SP1668, SP1669
MG/eMG6 Three generations	Integrated starter control module (ISC)	√	√	√	√	√	SP1679, SP1680
MG/eMG6 Three generations	Switching control unit (SCU)	√	√	√	√	√	
MG/eMG6 Three generations	Front camera module (FVCM)	√	√	√	√		
MG/eMG6 Three generations	Chassis management module (CMM)	√	√	√	√	√	
MG/eMG6 Three generations	Rear driving assistance module (RDA)	√	√	√	√		
MG/eMG6 Plus	Engine control module (ECM)	√	√	√	√	√	SP1640, SP1641
MG/eMG6 Plus	Battery management module (BMS)	√	√	√	√	√	
MG/eMG6 Plus	Charging control unit (OBC)	√	√	√	√		
MG/eMG6 Plus	Hybrid control unit (HCU)	√	√	√	√		SP1644, SP1645, SP1646, SP1647, SP1648, SP1649
MG/eMG6 Plus	DC / DC converter (DCDC)	√	√	√	√		
MG/eMG6 Plus	Anti-lock brake system / Dynamic stability control (SCS)	√	√	√	√		SP1650, SP1651, SP1652, SP1653, SP1654, SP1655, SP1656, SP1657, SP1658, SP1659
MG/eMG6 Plus	Airbag control module (SDM)	√	√	√	√		
MG/eMG6 Plus	Body control module (BCM)	√	√	√	√	√	SP1662
MG/eMG6 Plus	Electronic steering power system (EPS)	√	√	√	√	√	SP1660
MG/eMG6 Plus	Combination instrument (IPK)	√	√	√	√	√	SP1665
MG/eMG6 Plus	Gateway (GW)	√	√	√	√		SP1637, SP1638
MG/eMG6 Plus	Keyless entry and start system (PEPS)	√	√	√	√		SP1663
MG/eMG6 Plus	Air conditioning module (HVAC)	√	√	√	√	√	SP1664
MG/eMG6 Plus	Tire pressure monitoring system (TPMS)	√	√	√	√		SP1667
MG/eMG6 Plus	Electronic steering pierlet lock (ESCL)	√	√	√	√		
MG/eMG6 Plus	Navigation entertainment system (FICM)	√	√	√	√		
MG/eMG6 Plus	Communication module (T-BOX)	√	√	√	√		SP1639
MG/eMG6 Plus	Integrated starter control module (ISC)	√	√	√	√	√	SP1642, SP1643
MG/eMG6 Plus	Switching control unit (SCU)	√	√	√	√		
MG/eMG6 Plus	Front camera module (FVCM)	√	√	√	√		SP1661
MG/eMG6 Plus	Chassis management module (CMM)	√	√	√	√	√	
MG/eMG6 Plus	Automatic parking assistance system (APA)	√	√	√	√		
MG/AS23PUK	Engine management system (ECM)	√	√	√	√	√	SP1046
MG/AS23PUK	Battery management module (BMS)	√	√	√	√	√	
MG/AS23PUK	Car charger (OBC)	√	√	√	√		
MG/AS23PUK	Hybrid control unit (HCU)	√	√	√	√		SP1055, SP1056, SP1057, SP1058, SP1059, SP1060, SP1061
MG/AS23PUK	High-voltage DC / DC converter (HVDCDC)	√	√	√	√		
MG/AS23PUK	Dynamic stabilization control system (SCS/ABS)	√	√	√	√		SP1064, SP1065, SP1066, SP1067, SP1068, SP1069, SP1070, SP1071, SP1072
MG/AS23PUK	Airbag control module (SDM)	√	√	√	√		
MG/AS23PUK	Body control module (BCM)	√	√	√	√	√	SP1077
MG/AS23PUK	Electronic steering power system (EPS)	√	√	√	√		SP1073
MG/AS23PUK	Combination instrument (IPK)	√	√	√	√	√	SP1080
MG/AS23PUK	Keyless entry and key launch module (PEPS)	√	√	√	√		SP1078

MG/AS23PUK	Air conditioning system (Warm air , Ventilation and air conditioning) (HVAC)	✓	✓	✓	✓		✓	SP1079
MG/AS23PUK	Tire pressure monitoring system (TPMS)	✓	✓	✓	✓			SP1081
MG/AS23PUK	Gateway (GW)	✓	✓	✓	✓			SP1044, SP1045
MG/AS23PUK	Electronic steering pierlet lock (ESCL)	✓	✓	✓	✓			
MG/AS23PUK	Entertainment system control module (FICM)	✓	✓	✓	✓			
MG/AS23PUK	Switching control unit (SCU)	✓	✓	✓	✓			
MG/AS23PUK	Integrated starter control module (ISC)	✓	✓	✓	✓		✓	SP1062, SP1063
MG/AS23PUK	Chassis management module (CMM)	✓	✓	✓	✓		✓	
MG/AS23PUK	Communication module (T-BOX)	✓	✓	✓	✓			SP1042, SP1043
MG/AS23PUK	Front camera module (FVCM)	✓	✓	✓	✓			SP1074
MG/AS23PUK	Forward detection radar module (FDR)	✓	✓	✓	✓			SP1075, SP1076
MG/AS23PUK	Electric tail door control module (PLCM)	✓	✓	✓	✓			
MG/AS23PUK	Rear driving assistance module (RDA)	✓	✓	✓	✓			
MG/AS23PUK	Natural light control module (ALCM)	✓	✓	✓	✓		✓	
MG/AS23PUK	360 Panoramic image control module (AVM)	✓	✓	✓	✓			SP1082
MG/ZS11E EU UK	Battery management module (BMS)	✓	✓	✓	✓		✓	
MG/ZS11E EU UK	Seck detection module (SCU)	✓	✓	✓	✓			
MG/ZS11E EU UK	Vehicle control module (VCU)	✓	✓	✓	✓		✓	SP2006
MG/ZS11E EU UK	Traction motor controller (TC)	✓	✓	✓	✓			SP2007
MG/ZS11E EU UK	DC / DC converter (DCDC)	✓	✓	✓	✓			
MG/ZS11E EU UK	Car charger (OBC)	✓	✓	✓	✓			
MG/ZS11E EU UK	Anti-lock brake system / Dynamic stability control (SCS/ABS)	✓	✓	✓	✓			SP2016, SP2017
MG/ZS11E EU UK	Airbag control module (SDM)	✓	✓	✓	✓			
MG/ZS11E EU UK	Body control module (BCM)	✓	✓	✓	✓		✓	SP2021
MG/ZS11E EU UK	Electronic steering power system (EPS)	✓	✓	✓	✓			SP2015
MG/ZS11E EU UK	Combination instrument (IPK)	✓	✓	✓	✓		✓	SP2024
MG/ZS11E EU UK	Keyless entry and key launch module (PEPS)	✓	✓	✓	✓			SP2022
MG/ZS11E EU UK	Air conditioning control module (HVAC)	✓	✓	✓	✓		✓	SP2023
MG/ZS11E EU UK	Tire pressure monitoring system (TPMS)	✓	✓	✓	✓			SP2025
MG/ZS11E EU UK	Gateway module (GW)	✓	✓	✓	✓			SP2003, SP2004, SP2005
MG/ZS11E EU UK	Electronic hand brake module (EPB)	✓	✓	✓	✓		✓	SP2008, SP2009, SP2010, SP2011, SP2012, SP2013, SP2014
MG/ZS11E EU UK	Communication module (T-BOX)	✓	✓	✓	✓			SP2001, SP2002
MG/ZS11E EU UK	Front camera module (FVCM)	✓	✓	✓	✓			SP2018
MG/ZS11E EU UK	Radar module (FDR)	✓	✓	✓	✓			SP2019, SP2020
MG/ZS11E EU UK	Electronic steering pierlet lock (ESCL)	✓	✓	✓	✓			
MG/ZS11E EU UK	Entertainment system control module (FICM)	✓	✓	✓	✓			
MG/ZS11E EU UK	Rear driving assistance module (RDA)	✓	✓	✓	✓			
MG/ZS11E TT	Battery management module (BMS)	✓	✓	✓	✓		✓	
MG/ZS11E TT	Car charger (OBC)	✓	✓	✓	✓			
MG/ZS11E TT	Seck detection module (SCU)	✓	✓	✓	✓			
MG/ZS11E TT	Vehicle control module (VCU)	✓	✓	✓	✓		✓	SP2050
MG/ZS11E TT	Traction motor controller (TC)	✓	✓	✓	✓			SP2051
MG/ZS11E TT	DC / DC converter (DCDC)	✓	✓	✓	✓			
MG/ZS11E TT	Anti-lock brake system / Dynamic stability control (SCS/ABS)	✓	✓	✓	✓			SP2060, SP2061
MG/ZS11E TT	Airbag control module (SDM)	✓	✓	✓	✓			
MG/ZS11E TT	Body control module (BCM)	✓	✓	✓	✓		✓	SP2065
MG/ZS11E TT	Electronic steering power system (EPS)	✓	✓	✓	✓			SP2059
MG/ZS11E TT	Combination instrument (IPK)	✓	✓	✓	✓		✓	SP2068
MG/ZS11E TT	Keyless entry and key launch module (PEPS)	✓	✓	✓	✓			SP2066
MG/ZS11E TT	Air conditioning control module (HVAC)	✓	✓	✓	✓		✓	SP2067
MG/ZS11E TT	Tire pressure monitoring system (TPMS)	✓	✓	✓	✓			SP2069
MG/ZS11E TT	Gateway module (GW)	✓	✓	✓	✓			SP2047, SP2048, SP2049
MG/ZS11E TT	Electronic hand brake module (EPB)	✓	✓	✓	✓		✓	SP2052, SP2053, SP2054, SP2055, SP2056, SP2057, SP2058
MG/ZS11E TT	Front camera module (FVCM)	✓	✓	✓	✓			SP2062
MG/ZS11E TT	Communication module (T-BOX)	✓	✓	✓	✓			SP2046
MG/ZS11E TT	Radar module (FDR)	✓	✓	✓	✓			SP2063, SP2064
MG/ZS11E TT	Electronic steering pierlet lock (ESCL)	✓	✓	✓	✓			
MG/ZS11E TT	Navigation entertainment system (FICM)	✓	✓	✓	✓			
MG/ZS11E TT	Rear driving assistance module (RDA)	✓	✓	✓	✓			
MG/ZS11E INDIA	Battery management module (BMS)	✓	✓	✓	✓		✓	
MG/ZS11E INDIA	Seck detection module (SCU)	✓	✓	✓	✓			
MG/ZS11E INDIA	Vehicle control module (VCU)	✓	✓	✓	✓		✓	SP2029
MG/ZS11E INDIA	Traction motor controller (TC)	✓	✓	✓	✓			SP2030
MG/ZS11E INDIA	DC / DC converter (DCDC)	✓	✓	✓	✓			
MG/ZS11E INDIA	Car charger (OBC)	✓	✓	✓	✓			
MG/ZS11E INDIA	Anti-lock brake system / Dynamic stability control (SCS/ABS)	✓	✓	✓	✓			SP2039, SP2040
MG/ZS11E INDIA	Airbag control module (SDM)	✓	✓	✓	✓			
MG/ZS11E INDIA	Body control module (BCM)	✓	✓	✓	✓		✓	SP2041

Special Functions List

No.	Functions Name	System Name
SP0000	Reset Steering Wheel Angle Sensor	Roewe 950/Steering wheel angle sensor module (EPS)
SP0001	steering wheel angle sensor learn	Roewe 950/Steering wheel angle sensor module (EPS)
SP0003	fuel trim reset	Roewe 950/Fuel pump control module (FPCM)
SP0004	calibration	Roewe 950/Parking brake control module (PBCM)
SP0005	learning CAN bus configuration	Roewe 950/Parking auxiliary control module (ICAC)
SP0006	HVAC actuator learning	Roewe 950/Remote control heater and air conditioning control module (HVAC)
SP0007	learning CAN bus configuration	Roewe 950/Instrument group (IPK)
SP0008	brake pedal position sensor learn	Roewe 950/Body control module (BCM)
SP0009	Read the LIN bus device ID information	Roewe 950/Body control module (BCM)
SP0013	brake pressure sensor calibration	Roewe 950/Anti-lock brake system (ABS)
SP0014	yaw rate sensor learning	Roewe 950/Anti-lock brake system (ABS)
SP0015	steering wheel angle sensor learn	Roewe 950/Anti-lock brake system (ABS)
SP0016	Inspection/maintenance data	Roewe 950/Engine control module (ECM)
SP0017	Inspection/maintenance system status data	Roewe 950/Engine control module (ECM)
SP0018	adaptive value	Roewe 750/Engine system (EMS)
SP0020	Reset adaptive values	Roewe 750/Automatic gearbox system (AT)
SP0021	Brake bleed program	Roewe 750/Anti-lock brake system (ABS)
SP0022	On-board brake deflation	Roewe 750/Anti-lock brake system (ABS)
SP0023	ABS actuator automatic test	Roewe 750/Anti-lock brake system (ABS)
SP0024	Test ISO valve	Roewe 750/Anti-lock brake system (ABS)
SP0025	Test drain valve	Roewe 750/Anti-lock brake system (ABS)
SP0026	Test control components	Roewe 750/Anti-lock brake system (ABS)
SP0027	Activate/deactivate collision detection	Roewe 750/Airbag system (SRS)
SP0028	Activation airbag	Roewe 750/Airbag system (SRS)
SP0029	Disable airbag	Roewe 750/Airbag system (SRS)
SP0032	anti-lock braking system regulator bleed	Roewe 550/Anti-lock brake system (ABS)
SP0033	Reset adaptive values	Roewe 550/Automatic gearbox system (AT)
SP0034	Set the power mode	Roewe 550/Body control module (BCM)
SP0035	Sunroof initialization (manual method)	Roewe 550/Body control module (BCM)
SP0036	Front headlight test	Roewe 550/Interior lamps and exterior lamps (ELIL)
SP0037	adaptive value	Roewe 750(New)/Automatic gearbox system (AT)
SP0038	Set the power mode	Roewe 350/350S/Body controller (BCM)
SP0039	Sunroof initialization (manual method)	Roewe 350/350S/Body controller (BCM)
SP0040	Set the idle speed offset	Roewe 550/Engine system (EMS)
SP0041	Maintenance interval reset	Roewe 350/350S/Instrument unit (IPK)
SP0044	Calibration ABS/ESP sensor	Roewe W5/Anti-lock brake system (ABS)
SP0045	Clear configuration code	Roewe W5/Anti-lock brake system (ABS)
SP0046	ABS module bleed program	Roewe W5/Anti-lock brake system (ABS)
SP0047	Set the power mode	Roewe W5/Body controller (BCM)
SP0056	Odometer data reading	Roewe 750(New)/Instrument unit (IPK)
SP0057	Maintenance interval reset	Roewe 750(New)/Instrument unit (IPK)
SP0058	Meter self-test	Roewe 750(New)/Instrument unit (IPK)
SP0063	Diesel engine exhaust filter cleaning	Roewe new 550/Engine management system (EMS)
SP0064	start-stop system compulsory test,	Roewe new 550/Engine management system (EMS)
SP0074	matching key	Roewe new 550/Body control module (BCM)
SP0075	Delete the key	Roewe new 550/Body control module (BCM)
SP0076	Remaining unlocking time	Roewe new 550/Body control module (BCM)
SP0077	Power mode	Roewe new 550/Body control module (BCM)
SP0078	Maintenance interval reset	Roewe new 550/Instrument unit (IPK)
SP0079	Apply EPB left brake	Roewe new 550/Electronic parking brake system (EPB)
SP0080	Apply EPB right brakes	Roewe new 550/Electronic parking brake system (EPB)
SP0081	Apply EPB side brakes	Roewe new 550/Electronic parking brake system (EPB)
SP0082	EPB Release left side brake of EPB	Roewe new 550/Electronic parking brake system (EPB)
SP0083	EPB Release right side brake of	Roewe new 550/Electronic parking brake system (EPB)
SP0084	Release both side brakes of	Roewe new 550/Electronic parking brake system (EPB)

SP0085	Height sensor zero voltage self-learning	Roewe new 550/Adaptive large lamp system (AFS)
SP0086	corner auxiliary lighting test,	Roewe new 550/Adaptive large lamp system (AFS)
SP0087	Engine control module self-learning value reset	Roewe New 550 HYBRID /Engine Control Module (ECM)
SP0088	OFF online charging circuit request	Roewe New 550 HYBRID /Battery Management Module (BMS)
SP0089	Close main circuit relay request	Roewe New 550 HYBRID /Battery Management Module (BMS)
SP0090	Power mode	Roewe New 550 HYBRID /Body Control Module (BCM)
SP0091	Apply EPB left brake	Roewe New 550 HYBRID /Electronic Parking Brake System (EPB)
SP0092	Apply EPB right brakes	Roewe New 550 HYBRID /Electronic Parking Brake System (EPB)
SP0093	Apply EPB side brakes	Roewe New 550 HYBRID /Electronic Parking Brake System (EPB)
SP0094	EPB Release left side brake of EPB	Roewe New 550 HYBRID /Electronic Parking Brake System (EPB)
SP0095	EPB Release right side brake of	Roewe New 550 HYBRID /Electronic Parking Brake System (EPB)
SP0096	Release both side brakes of	Roewe New 550 HYBRID /Electronic Parking Brake System (EPB)
SP0097	Maintenance interval reset	Roewe New 550 HYBRID /Instrument unit (IPK)
SP0098	ISC acceleration test	Roewe New 550 HYBRID /Integrated Starter Control Module (ISC)
SP0099	ISC cooling system liquid filling exhaust	Roewe New 550 HYBRID /Integrated Starter Control Module (ISC)
SP0100	HCU self-learning	Roewe New 550 HYBRID /Hydraulic Control Unit (HCU)
SP0101	removal EDU valve assembly	Roewe New 550 HYBRID /Hydraulic Control Unit (HCU)
SP0102	EDU hydraulic system pressure relief	Roewe New 550 HYBRID /Hydraulic Control Unit (HCU)
SP0103	Hybrid system solenoid valve cleaning operation	Roewe New 550 HYBRID /Hydraulic Control Unit (HCU)
SP0104	Entertainment test system speaker	Roewe New 550 HYBRID /In-Car Entertainment System (ICE)
SP0105	Tire pressure monitoring system reset	Roewe New 550 HYBRID /Anti-lock brake system (ABS)
SP0106	External Yaw Sensor Calibration	Roewe New 550 HYBRID /Anti-lock brake system (ABS)
SP0107	Starter start-stop times reset	Roewe 360(1.4T)/Engine system (ECM)
SP0108	Battery ID write	Roewe 360(1.4T)/Engine system (ECM)
SP0109	Engine system adaptive learning value reset	Roewe 360(1.4T)/Engine system (ECM)
SP0110	engine throttle self-learning reset	Roewe 360(1.4T)/Engine system (ECM)
SP0111	Transmission control module quick learning	Roewe 360(1.4T)/Automatic gearbox system (AT)
SP0112	ABS maintenance exhaust	Roewe 360(1.4T)/Anti-lock brake system (ABS)
SP0113	Inertial measurement unit calibration	Roewe 360(1.4T)/Anti-lock brake system (ABS)
SP0114	TPMS reset	Roewe 360(1.4T)/Anti-lock brake system (ABS)
SP0115	yaw sensor learning	Roewe 360(1.4T)/Anti-lock brake system (ABS)
SP0119	Maintenance interval reset	Roewe 360(1.4T)/Instrument unit (IPK)
SP0174	Electric power steering system learning	Roewe 360(1.4T)/Electric power steering system (EPS)
SP0175	Air conditioning servo motor self-learning	Roewe 360(1.4T)/Automatic air conditioning system (AC)
SP0176	Set the system operation mode	Roewe 360(1.4T)/Gateway (GW)
SP0177	Brake pedal position sensor self-learning	Roewe 360(1.4T)/Gateway (GW)
SP0178	steering angle sensor calibration	Roewe 360(1.4T)/Steering wheel corner sensor (SAS)
SP0179	TBOX restart	Roewe 360(1.4T)/Communication module (TBOX)
SP0180	TBOX battery life calibration	Roewe 360(1.4T)/Communication module (TBOX)
SP0181	Starter start-stop times reset	Roewe 360(1.5VCT/1.5T)/Engine system (ECM)
SP0182	Battery ID write	Roewe 360(1.5VCT/1.5T)/Engine system (ECM)
SP0183	Engine system adaptive learning value reset	Roewe 360(1.5VCT/1.5T)/Engine system (ECM)
SP0184	engine throttle self-learning reset	Roewe 360(1.5VCT/1.5T)/Engine system (ECM)
SP0185	Transmission control unit reset learning value	Roewe 360(1.5VCT/1.5T)/Automatic gearbox system (AT)
SP0186	ABS maintenance exhaust	Roewe 360(1.5VCT/1.5T)/Anti-lock brake system (ABS)

SP0187	Inertial measurement unit calibration	Roewe 360(1.5VCT/1.5T)/Anti-lock brake system (ABS)
SP0190	Maintenance interval reset	Roewe 360(1.5VCT/1.5T)/Instrument unit (IPK)
SP0191	Power mode	Roewe 360(1.5VCT/1.5T)/Body controller (BCM)
SP0192	matching key	Roewe 360(1.5VCT/1.5T)/Body controller (BCM)
SP0193	Delete the key	Roewe 360(1.5VCT/1.5T)/Body controller (BCM)
SP0194	Remaining unlocking time	Roewe 360(1.5VCT/1.5T)/Body controller (BCM)
SP0195	Maintenance interval reset	E50/Instrument Unit (IPK)
SP0213	Reset all adaptive learning values	Roewe 350/350S/Engine system (ECM)
SP0218	Reset learning value	Roewe 350/350S/Automatic gearbox (AT)
SP0222	ABS maintenance exhaust	Roewe 350/350S/Anti-lock brake system (ABS)
SP0228	Steering angle sensor calibration	Roewe 350/350S/Corner sensor (SAS)
SP0229	Odometer data reading	Roewe 550/Digital instrument unit (IPK)
SP0230	Maintenance interval reset	Roewe 550/Digital instrument unit (IPK)
SP0403	Set the odometer offset	MG5/Combined instrument system (IPK)
SP0404	Meter self-test	MG5/Combined instrument system (IPK)
SP0405	Maintenance interval reset	MG5/Combined instrument system (IPK)
SP0406	Set the power mode	MG5/Body controller (BCM)
SP0407	Reset adaptive value Reset	MG5/Gearbox control unit (TCU)
SP0408	Set the idle speed offset	MG5/Engine control unit (ECM)
SP0410	Engine control module self-learning value reset	MG3/Engine management system (EMS)
SP0411	Engine control module idle speed bias	MG3/Engine management system (EMS)
SP0412	engine Control module ignition angle offset	MG3/Engine management system (EMS)
SP0413	Diagnose the speed limit	MG3/Anti-lock brake system (ABS)
SP0414	Valve relay	MG3/Anti-lock brake system (ABS)
SP0415	SCU EKA coding	MG3/Body control module (BCM)
SP0416	read the alarm Trigger event	MG3/Body control module (BCM)
SP0417	Brake bleed program	MG7-L/Anti-lock brake system (ABS)
SP0418	ABS actuator automatic test	MG7-L/Anti-lock brake system (ABS)
SP0420	Brake bleed program	MG6/Anti-lock brake system (ABS)
SP0435	matching key	MG5/Anti-theft system (IMMO)
SP0436	Delete the key	MG5/Anti-theft system (IMMO)
SP0446	Maintenance interval reset	MG TF/Combination instrument (IPK)
SP0447	Meter self-test	MG TF/Combination instrument (IPK)
SP0449	Hydraulic regulator exhaust	MG7-2009/Combination instrument (IPK)
SP0450	Calibration	MG7-2009/Steering angle sensor (SAS)
SP0451	Identify the key	MG7-2008/Gateway anti-theft module
SP0452	Brake bleed program	MG7-2009/Dynamic stability control (ESP)
SP0453	ABS actuator automatic test	MG7-2009/Dynamic stability control (ESP)
SP0454	Pump motor	MG7-2009/Dynamic stability control (ESP)
SP0455	Left front intake valve	MG7-2009/Dynamic stability control (ESP)
SP0456	Right front intake valve	MG7-2009/Dynamic stability control (ESP)
SP0457	Left rear intake valve,	MG7-2009/Dynamic stability control (ESP)
SP0458	right rear intake valve,	MG7-2009/Dynamic stability control (ESP)
SP0459	Left front exhaust valve	MG7-2009/Dynamic stability control (ESP)
SP0460	Right front exhaust Valve	MG7-2009/Dynamic stability control (ESP)
SP0461	Left rear exhaust valve	MG7-2009/Dynamic stability control (ESP)
SP0462	Rear right exhaust valve Rear	MG7-2009/Dynamic stability control (ESP)
SP0463	Auto SCS VSC test	MG7-2009/Dynamic stability control (ESP)
SP0464	USV 1	MG7-2009/Dynamic stability control (ESP)
SP0465	USV 2	MG7-2009/Dynamic stability control (ESP)
SP0466	HSV 1	MG7-2009/Dynamic stability control (ESP)
SP0467	HSV 2	MG7-2009/Dynamic stability control (ESP)
SP0485	Diesel engine exhaust filter cleaning	MG6 14 Year /Engine control management (ECM)
SP0486	Start-stop system mandatory test	MG6 14 Year /Engine control management (ECM)
SP0487	Height sensor zero voltage self-learning	MG6 14 Year /Adaptive steering headlight system (AFS)
SP0488	corner auxiliary lighting test,	MG6 14 Year /Adaptive steering headlight system (AFS)
SP0489	Power mode	MG6 14 Year /Body control module (BCM)
SP0490	Release left Side actuator	MG6 14 Year /Electronic parking brake system (EPB)
SP0491	Release right side actuator	MG6 14 Year /Electronic parking brake system (EPB)
SP0492	Enable left side actuator	MG6 14 Year /Electronic parking brake system (EPB)
SP0493	Enable right side actuator	MG6 14 Year /Electronic parking brake system (EPB)
SP0494	Enable both side actuators	MG6 14 Year /Electronic parking brake system (EPB)

SP0495	Release both side actuators	MG6 14 Year /Electronic parking brake system (EPB)
SP0496	Parking brake system actuator parts replacement	MG6 14 Year /Electronic parking brake system (EPB)
SP0497	acceleration sensor calibration	MG6 14 Year /Electronic parking brake system (EPB)
SP0498	External Yaw Sensor Calibration	MG6 14 Year /Dynamic stabilization control system (SCS/ABS)
SP0499	Indirect tire pressure monitoring system reset	MG6 14 Year /Dynamic stabilization control system (SCS/ABS)
SP0500	Refilling exhaust	MG6 14 Year /Dynamic stabilization control system (SCS/ABS)
SP0501	Adaptive learning value reset	MG6 14 Year /Automatic gearbox system (AT)
SP0502	Automatic transmission control unit quick learning	MG6 14 Year /Automatic gearbox system (AT)
SP0503	Read the SubRom data	MG6 14 Year /Automatic gearbox system (AT)
SP0504	Automatic transmission sensor test	MG6 14 Year /Automatic gearbox system (AT)
SP0505	wheel angle sensor to zero learn	MG6 14 Year /Steering wheel corner sensor (SAS)
SP0506	the steering angle sensor offset learning	MG6 14 Year /Steering wheel corner sensor (SAS)
SP0507	Engine control module self-learning value reset	MG6 13 Year /Engine control management (ECM)
SP0508	Engine module idle bias	MG6 13 Year /Engine control management (ECM)
SP0509	Battery ID write	MG6 13 Year /Engine control management (ECM)
SP0510	Power mode	MG6 13 Year /Body control module (BCM)
SP0511	Maintenance interval reset	MG6 13 Year /Instrument unit (IPK)
SP0512	Indirect tire pressure monitoring system reset	MG6 13 Year /Dynamic stabilization control system (SCS/ABS)
SP0513	AX sensor calibration	MG6 13 Year /Dynamic stabilization control system (SCS/ABS)
SP0517	Automatic transmission control unit self-learning	MG6 13 Year /Automatic gearbox system (AT)
SP0518	Automatic transmission control unit self-adaptive learning value reset	MG6 13 Year /Automatic gearbox system (AT)
SP0519	Read the SubROM data	MG6 13 Year /Automatic gearbox system (AT)
SP0520	Automatic transmission sensor test	MG6 13 Year /Automatic gearbox system (AT)
SP0521	Parking brake system actuator parts replacement	MG6 13 Year /Electronic parking brake system (EPB)
SP0522	acceleration sensor calibration	MG6 13 Year /Electronic parking brake system (EPB)
SP0523	Release both side actuators	MG6 13 Year /Electronic parking brake system (EPB)
SP0524	Enable left side actuator	MG6 13 Year /Electronic parking brake system (EPB)
SP0525	Enable right side actuator	MG6 13 Year /Electronic parking brake system (EPB)
SP0526	Release left Side actuator	MG6 13 Year /Electronic parking brake system (EPB)
SP0527	Release right side actuator	MG6 13 Year /Electronic parking brake system (EPB)
SP0528	Enable both side actuators	MG6 13 Year /Electronic parking brake system (EPB)
SP0536	Diesel engine exhaust filter cleaning	MG6 Eu Diesel(Diesel)/Engine control management (ECM)
SP0537	Start-stop system mandatory test	MG6 Eu Diesel(Diesel)/Engine control management (ECM)
SP0543	Maintenance mileage reset	MG GS(Rui Teng)/Combination instrument (IPK)
SP0544	Body control module operation mode adjustment	MG GS(Rui Teng)/Body control module (BCM)
SP0545	Air conditioning servo motor self-learning	MG GS(Rui Teng)/Air conditioning module (HVAC)
SP0548	Battery ID write	MG GT(Sharp) (1.5L)/Engine management system (EMS)
SP0549	Starter start-stop times reset	MG GT(Sharp) (1.5L)/Engine management system (EMS)
SP0550	Engine system adaptive learning value reset	MG GT(Sharp) (1.5L)/Engine management system (EMS)
SP0551	engine throttle self-learning reset	MG GT(Sharp) (1.5L)/Engine management system (EMS)
SP0552	Transmission control unit reset learning value	MG GT(Sharp) (1.5L)/Automatic wave box system (AT)
SP0555	TPMS reset	MG GT(Sharp) (1.5L)/Anti-lock brake system (ABS)

SP0556	ABS maintenance exhaust	MG GT(Sharp)(1.5L)/Anti-lock brake system (ABS)
SP0559	Power mode	MG GT(Sharp)(1.5L)/Body control module (BCM)
SP0560	Electric power steering system learning	MG GT(Sharp)(1.5L)/Electric power steering system (EPS)
SP0561	steering angle sensor calibration	MG GT(Sharp)(1.5L)/Steering angle sensor module (SAS)
SP0562	TBOX restart	MG GT(Sharp)(1.5L)/Car wiring box (TBOX)
SP0563	TBOX battery life calibration	MG GT(Sharp)(1.5L)/Car wiring box (TBOX)
SP0564	TBOX activation	MG GT(Sharp)(1.5L)/Car wiring box (TBOX)
SP0568	Battery ID write	MG GT(Sharp)(1.4T)/Engine management system (EMS)
SP0569	Starter start-stop times reset	MG GT(Sharp)(1.4T)/Engine management system (EMS)
SP0570	Engine system adaptive learning value reset	MG GT(Sharp)(1.4T)/Engine management system (EMS)
SP0571	engine throttle self-learning reset	MG GT(Sharp)(1.4T)/Engine management system (EMS)
SP0572	Transmission control module quick learning	MG GT(Sharp)(1.4T)/Automatic wave box system (AT)
SP0573	TPMS reset	MG GT(Sharp)(1.4T)/Anti-lock brake system (ABS)
SP0574	ABS maintenance exhaust	MG GT(Sharp)(1.4T)/Anti-lock brake system (ABS)
SP0577	Power mode	MG GT(Sharp)(1.4T)/Body control module (BCM)
SP0578	Meter self-test	MG GT(Sharp)(1.4T)/Instrument unit (IPK)
SP0579	Air conditioning servo motor self-learning	MG GT(Sharp)(1.4T)/Automatic air conditioning system (ATC)
SP0580	Set the system operation mode	MG GT(Sharp)(1.4T)/Gateway (GW)
SP0581	Brake pedal position sensor self-learning	MG GT(Sharp)(1.4T)/Gateway (GW)
SP0582	steering angle sensor calibration	MG GT(Sharp)(1.4T)/Steering angle sensor module (SAS)
SP0583	TBOX restart	MG GT(Sharp)(1.4T)/Car wiring box (TBOX)
SP0584	TBOX battery life calibration	MG GT(Sharp)(1.4T)/Car wiring box (TBOX)
SP0633	ECM (engine control module), adaptive reset	NEW MG GS/Engine control module (ECM)
SP0635	Maintenance interval reset	NEW MG GS/Instrument unit (IPK)
SP0636	Reset EEPROM	NEW MG GS/Wave box control module (TCM)
SP0637	Read the subROM	NEW MG GS/Wave box control module (TCM)
SP0638	Transmission sensor test	NEW MG GS/Wave box control module (TCM)
SP0639	Transmission self-learning	NEW MG GS/Wave box control module (TCM)
SP0640	Shift Fork Position Self-learning	NEW MG GS/Wave box control module (TCM)
SP0641	Clutch kiss point self-learning	NEW MG GS/Wave box control module (TCM)
SP0642	current mapping curve, clutch pressure self-learning,	NEW MG GS/Wave box control module (TCM)
SP0650	GW brake sensor zero point learning	NEW MG GS/Gateway (GW)
SP0651	GW setting power mode	NEW MG GS/Gateway (GW)
SP0652	TCCM on-demand self-test	NEW MG GS/Sub-box control module (TCCM)
SP0653	EPS (electric power steering) calibration	NEW MG GS/Electric power steering system (EPS)
SP0654	ABS (Anti-lock Braking System)/SCS (Vehicle Stability Control System) Brake bleed	NEW MG GS/Dynamic stabilization control system / Car anti-lock brake system (SCS/ABS)
SP0655	SCS pressure Sensor calibration	NEW MG GS/Dynamic stabilization control system / Car anti-lock brake system (SCS/ABS)
SP0656	a yaw sensor Calibration	NEW MG GS/Dynamic stabilization control system / Car anti-lock brake system (SCS/ABS)
SP0657	EPB (electronic parking brake) brake line adjustment	NEW MG GS/Electronic parking brake system (EPB)
SP0658	EPB (electronic parking brake) brake line fully released	NEW MG GS/Electronic parking brake system (EPB)
SP0659	ATC motor calibration	NEW MG GS/Air conditioning control module (HVAC)
SP0660	PEPS setting power mode	NEW MG GS/Keyless entry module (PEPS)
SP0661	BCM (body control module) power mode	NEW MG GS/Body control module (BCM)
SP0662	TBOX battery calibration	NEW MG GS/Communication module (TBOX)
SP0663	TBOX Bluetooth OTA lock on	NEW MG GS/Communication module (TBOX)
SP0664	TPMS (tire pressure monitoring system) learning	NEW MG GS/Tire pressure monitoring system (TPMS)
SP0711	GW setting power mode	MG3 ZERO(MCE3)/Gateway (GW)
SP0712	Forward camera module self-learning	Ei6 MAX/Front camera module (FVCM)
SP0752	TBOX restart	Roewe 360(1.5VCT/1.5T)/Communication module (TBOX)
SP0768	Electric power steering system learning	Roewe 360(1.5VCT/1.5T)/Electric power steering system (EPS)

SP0769	wheel angle sensor to zero learn	Roewe 360(1.5VCT/1.5T)/Steering wheel corner sensor (SAS)
SP0770	the steering angle sensor offset learning	Roewe 360(1.5VCT/1.5T)/Steering wheel corner sensor (SAS)
SP0796	TBOX restart	i5/Communication module (T-BOX)
SP0797	OTA Bluetooth lock open	i5/Communication module (T-BOX)
SP0798	OTA Bluetooth lock open	i5/Security Bluetooth module (SBTM)
SP0799	Body control module operation mode adjustment	i5/Body control module (BCM)
SP0800	Battery ID write	i5/Body control module (BCM)
SP0801	brake pedal position sensor zero eLearning	i5/Body control module (BCM)
SP0802	tire sensor self-learning,	i5/Body control module (BCM)
SP0803	Maintenance mileage reset	i5/Instrument module (IPK)
SP0804	engine throttle self-learning reset	i5/Engine management system (EMS)
SP0805	Engine control module self-learning value reset	i5/Engine management system (EMS)
SP0812	Forward camera module self-learning	i5/Front camera module (FVCM)
SP0813	parking brake system parts replacement	i5/Anti-lock brake system / Dynamic stability control (ABS/SCS)
SP0814	Pressure sensor learning	i5/Anti-lock brake system / Dynamic stability control (ABS/SCS)
SP0815	yaw sensor learning	i5/Anti-lock brake system / Dynamic stability control (ABS/SCS)
SP0816	ABS Add liquid exhaust	i5/Anti-lock brake system / Dynamic stability control (ABS/SCS)
SP0817	Release left Side actuator	i5/Anti-lock brake system / Dynamic stability control (ABS/SCS)
SP0818	Release right side actuator	i5/Anti-lock brake system / Dynamic stability control (ABS/SCS)
SP0819	Enable left side actuator	i5/Anti-lock brake system / Dynamic stability control (ABS/SCS)
SP0820	Enable right side actuator	i5/Anti-lock brake system / Dynamic stability control (ABS/SCS)
SP0821	Enable both side actuators	i5/Anti-lock brake system / Dynamic stability control (ABS/SCS)
SP0822	Release both side actuators	i5/Anti-lock brake system / Dynamic stability control (ABS/SCS)
SP0823	tire sensor self-learning,	i5/Tire pressure monitoring system (TPMS)
SP0826	Electric power steering system learning	i5/Electronic power steering system (EPS)
SP0827	Air conditioning damper actuator self-learning	i5/Air conditioner controller (HVAC)
SP0828	Body control module operation mode adjustment	i5 2020 Pay 1.5L/Body control module (BCM)
SP0829	tire sensor self-learning,	i5 2020 Pay 1.5L/Body control module (BCM)
SP0830	Maintenance mileage reset	i5 2020 Pay 1.5L/Combination instrument (IPK)
SP0835	Forward camera module self-learning	i5 2020 Pay 1.5L/Front camera module (FVCM)
SP0837	Electric power steering system learning	i5 2020 Pay 1.5L/Electronic steering power system (EPS)
SP0838	Air conditioning servo motor self-learning	i5 2020 Pay 1.5L/Air conditioning control module (HVAC)
SP0839	GW setting power mode	i5 2020 Pay 1.5T/Gateway module (GW)
SP0840	Battery ID write	i5 2020 Pay 1.5T/Gateway module (GW)
SP0846	Electric power steering system learning	i5 2020 Pay 1.5T/Electronic steering power system (EPS)
SP0848	Forward camera module self-learning	i5 2020 Pay 1.5T/Front camera module (FVCM)
SP0849	Air conditioning servo motor self-learning	i5 2020 Pay 1.5T/Air conditioning control module (HVAC)
SP0850	Body control module operation mode adjustment	i5 2020 Pay 1.5T/Body control module (BCM)
SP0851	tire sensor self-learning,	i5 2020 Pay 1.5T/Body control module (BCM)
SP0852	Maintenance mileage reset	i5 2020 Pay 1.5T/Combination instrument (IPK)
SP0854	Power mode adjustment	MG GS(Rui Teng)/Keyless entry and key launch module (PEPS)
SP0857	GW setting power mode	MG GS(Rui Teng)/Gateway module (GW)
SP0858	Gateway brake sensor zero learning	MG GS(Rui Teng)/Gateway module (GW)
SP0861	Automatic transmission self-learning	MG GS(Rui Teng)/Gearbox control module (TCM)
SP0862	Adaptive learning value reset	MG GS(Rui Teng)/Gearbox control module (TCM)
SP0863	Read the SubROM data	MG GS(Rui Teng)/Gearbox control module (TCM)
SP0864	Transmission sensor test sensor self-detection	MG GS(Rui Teng)/Gearbox control module (TCM)
SP0866	Four-wheel drive Control module self-test	MG GS(Rui Teng)/Four-wheel control module (TCCM)
SP0867	TBOX battery life calibration	MG GS(Rui Teng)/Communication module (TBOX)
SP0868	TBOX restart	MG GS(Rui Teng)/Communication module (TBOX)
SP0872	Pressure sensor learning	MG GS(Rui Teng)/Anti-lock brake system / Dynamic stability control (SCS/ABS)

SP0873	Indirect tire pressure system reset	MG GS(Rui Teng)/Anti-lock brake system / Dynamic stability control (SCS/ABS)
SP0874	yaw sensor learning	MG GS(Rui Teng)/Anti-lock brake system / Dynamic stability control (SCS/ABS)
SP0875	ABS Add liquid exhaust	MG GS(Rui Teng)/Anti-lock brake system / Dynamic stability control (SCS/ABS)
SP0878	Electric power steering system learning	MG GS(Rui Teng)/Electronic steering power system (EPS)
SP0879	wheel angle sensor to zero learn	MG GS(Rui Teng)/Corner sensor (SAS)
SP0880	the steering angle sensor offset learning	MG GS(Rui Teng)/Corner sensor (SAS)
SP0881	parking brake cable Adjustment of the parking brake cable	MG GS(Rui Teng)/Electronic hand brake module (EPB)
SP0882	Full release of the	MG GS(Rui Teng)/Electronic hand brake module (EPB)
SP0883	Electronic parking tension test	MG GS(Rui Teng)/Electronic hand brake module (EPB)
SP0884	Electronic parking release test	MG GS(Rui Teng)/Electronic hand brake module (EPB)
SP0885	DHL height sensor zero voltage self-learning	MG GS(Rui Teng)/Dynamic headlight level adjustment (AFS)
SP0909	TBOX restart	MG GS(Rui Teng)(Rui Teng Plus)/Communication module (T-BOX)
SP0910	OTA Bluetooth lock open	MG GS(Rui Teng)(Rui Teng Plus)/Communication module (T-BOX)
SP0911	GW setting power mode	MG GS(Rui Teng)(Rui Teng Plus)/Gateway module (GW)
SP0912	Gateway brake sensor zero learning	MG GS(Rui Teng)(Rui Teng Plus)/Gateway module (GW)
SP0913	Engine control module self-learning value reset	MG GS(Rui Teng)(Rui Teng Plus)/Engine control module (ECM)
SP0915	Automatic transmission self-learning	MG GS(Rui Teng)(Rui Teng Plus)/Gearbox control module (TCM)
SP0916	Adaptive learning value reset	MG GS(Rui Teng)(Rui Teng Plus)/Gearbox control module (TCM)
SP0917	Read the SubROM data	MG GS(Rui Teng)(Rui Teng Plus)/Gearbox control module (TCM)
SP0918	Transmission sensor test sensor self-detection	MG GS(Rui Teng)(Rui Teng Plus)/Gearbox control module (TCM)
SP0920	Four-wheel drive Control module self-test	MG GS(Rui Teng)(Rui Teng Plus)/Four-wheel control module (TCCM)
SP0921	Pressure sensor learning	MG GS(Rui Teng)(Rui Teng Plus)/Anti-lock brake system / Dynamic stability control (SCS/ABS)
SP0922	yaw sensor learning	MG GS(Rui Teng)(Rui Teng Plus)/Anti-lock brake system / Dynamic stability control (SCS/ABS)
SP0923	ABS Add liquid exhaust	MG GS(Rui Teng)(Rui Teng Plus)/Anti-lock brake system / Dynamic stability control (SCS/ABS)
SP0924	Electric power steering system learning	MG GS(Rui Teng)(Rui Teng Plus)/Electronic steering power system (EPS)
SP0925	parking brake cable Adjustment of the parking brake cable	MG GS(Rui Teng)(Rui Teng Plus)/Electronic hand brake module (EPB)
SP0926	Full release of the	MG GS(Rui Teng)(Rui Teng Plus)/Electronic hand brake module (EPB)
SP0927	Electronic parking tension test	MG GS(Rui Teng)(Rui Teng Plus)/Electronic hand brake module (EPB)
SP0928	Electronic parking release test	MG GS(Rui Teng)(Rui Teng Plus)/Electronic hand brake module (EPB)
SP0929	Body control module operation mode adjustment	MG GS(Rui Teng)(Rui Teng Plus)/Body control module (BCM)
SP0930	tire sensor self-learning,	MG GS(Rui Teng)(Rui Teng Plus)/Tire pressure monitoring system (TPMS)
SP0931	Air conditioning servo motor self-learning	MG GS(Rui Teng)(Rui Teng Plus)/Air conditioning module (HVAC)
SP0932	Power mode adjustment	MG GS(Rui Teng)(Rui Teng Plus)/Keyless entry and key launch module (PEPS)
SP0933	Maintenance mileage reset	MG GS(Rui Teng)(Rui Teng Plus)/Combination instrument (IPK)
SP0934	TBOX restart	RX5/Car wiring box (TBOX)
SP0935	OTA Bluetooth lock open	RX5/Car wiring box (TBOX)

SP0936	TBOX refresh port on	RX5/Car wiring box (TBOX)
SP0937	GW setting power mode	RX5/Gateway (GW)
SP0938	Gateway brake sensor zero learning	RX5/Gateway (GW)
SP0939	Brake pedal position sensor self-learning	RX5/Engine management system (EMS)
SP0942	Automatic transmission self-learning	RX5/Wave box control module (TCM)
SP0943	Adaptive learning value reset	RX5/Wave box control module (TCM)
SP0944	Read the SubROM data	RX5/Wave box control module (TCM)
SP0945	Transmission sensor test sensor self-detection	RX5/Wave box control module (TCM)
SP0948	Four-wheel drive Control module self-test	RX5/Sub-box control module (TCCM)
SP0949	Pressure sensor learning	RX5/Ignition control system / Car anti-lock brake system (SCS/ABS)
SP0950	yaw sensor learning	RX5/Ignition control system / Car anti-lock brake system (SCS/ABS)
SP0951	Indirect tire pressure system reset	RX5/Ignition control system / Car anti-lock brake system (SCS/ABS)
SP0952	ABS Add liquid exhaust	RX5/Ignition control system / Car anti-lock brake system (SCS/ABS)
SP0955	Electric power steering system learning	RX5/Electric power steering (EPS)
SP0956	parking brake cable Adjustment of the parking brake cable	RX5/Electronic parking brake system (EPB)
SP0957	Full release of the	RX5/Electronic parking brake system (EPB)
SP0958	Electronic parking tension test	RX5/Electronic parking brake system (EPB)
SP0959	Electronic parking release test	RX5/Electronic parking brake system (EPB)
SP0960	Forward camera module self-learning	RX5/Forward camera module (FVCM)
SP0961	wheel angle sensor to zero learn	RX5/Steering angle sensor module (SAS)
SP0962	the steering angle sensor offset learning	RX5/Steering angle sensor module (SAS)
SP0963	DHL height sensor zero voltage self-learning	RX5/Adaptive large lamp(DHL)
SP0964	Forward detection radar driving calibration	RX5/Forward detection radar module(FDR)
SP0965	of the forward detection radar Query the self-learning result of the forward detection radar driving calibration	RX5/Forward detection radar module(FDR)
SP0966	Body control module operation mode adjustment	RX5/Body control module (BCM)
SP0967	Electric tailgate self-learning	RX5/Electric tail door control module (PLCM)
SP0968	Power mode adjustment	RX5/Keyless entry module (PEPS)
SP0969	Air conditioning servo motor self-learning	RX5/Air conditioning control module (ATC)
SP0970	Maintenance mileage reset	RX5/Instrument system (IPK)
SP0971	tire sensor self-learning,	RX5/Tire pressure monitoring system (TPMS)
SP0972	TBOX restart	RX5 Plus/Car wiring box(T-BOX)
SP0973	OTA Bluetooth lock open	RX5 Plus/Car wiring box(T-BOX)
SP0974	GW setting power mode	RX5 Plus/Gateway(GW)
SP0978	Transmission control module quick learning	RX5 Plus/Gearbox control module(TCM)
SP0979	SCU executes gear self-learning	RX5 Plus/Start control unit(SCU)
SP0980	SCU clears gear learning value	RX5 Plus/Start control unit(SCU)
SP0981	Pressure sensor learning	RX5 Plus/Anti-lock brake system / Dynamic stability control (SCS/ABS)
SP0982	yaw sensor learning	RX5 Plus/Anti-lock brake system / Dynamic stability control (SCS/ABS)
SP0983	Indirect tire pressure system reset	RX5 Plus/Anti-lock brake system / Dynamic stability control (SCS/ABS)
SP0984	ABS Add liquid exhaust	RX5 Plus/Anti-lock brake system / Dynamic stability control (SCS/ABS)
SP0987	Electric power steering system learning	RX5 Plus/Electric power steering(EPS)
SP0988	parking brake cable Adjustment of the parking brake cable	RX5 Plus/Electronic parking brake system(EPB)
SP0989	Full release of the	RX5 Plus/Electronic parking brake system(EPB)
SP0990	Electronic parking tension test	RX5 Plus/Electronic parking brake system(EPB)
SP0991	Electronic parking release test	RX5 Plus/Electronic parking brake system(EPB)
SP0992	Forward camera module self-learning	RX5 Plus/Forward camera module (FVCM)
SP0995	Body control module operation mode adjustment	RX5 Plus/Body control module (BCM)
SP0996	Power mode adjustment	RX5 Plus/Keyless entry module(PEPS)
SP0997	Air conditioning servo motor self-learning	RX5 Plus/Air conditioning module(HVAC)
SP0998	Maintenance mileage reset	RX5 Plus/Instrument system(IPK)
SP1000	tire sensor self-learning,	RX5 Plus/Tire pressure monitoring system(TPMS)
SP1001	TBOX restart	MG HS/Communication module (TBOX)
SP1002	OTA Bluetooth lock open	MG HS/Communication module (TBOX)
SP1003	GW setting power mode	MG HS/Gateway system (GW)
SP1004	Gateway brake sensor zero learning	MG HS/Gateway system (GW)
SP1005	Battery ID write	MG HS/Gateway system (GW)
SP1006	Engine control module self-learning value reset	MG HS/Engine control management (ECM)
SP1022	Automatic transmission self-learning	MG HS/Transmission control module (TCM)
SP1023	Adaptive learning value reset	MG HS/Transmission control module (TCM)
SP1024	Read the SubROM data	MG HS/Transmission control module (TCM)
SP1025	Transmission sensor test sensor self-detection	MG HS/Transmission control module (TCM)
SP1028	Four-wheel drive Control module self-test	MG HS/Four-wheel control module (TCCM)

SP1031	yaw sensor learning	MG HS/Anti-lock brake system / Dynamic stability control (SCS/ABS)
SP1032	ABS Add liquid exhaust	MG HS/Anti-lock brake system / Dynamic stability control (SCS/ABS)
SP1042	parking brake cable Adjustment of the parking brake cable	MG HS/Electronic hand brake module (EPB)
SP1043	Full release of the	MG HS/Electronic hand brake module (EPB)
SP1044	Electronic parking tension test	MG HS/Electronic hand brake module (EPB)
SP1045	Electronic parking release test	MG HS/Electronic hand brake module (EPB)
SP1046	Electric power steering system learning	MG HS/Electronic steering power system (EPS)
SP1047	Forward camera module self-learning	MG HS/Front camera module (FVCM)
SP1048	Body control module operation mode adjustment	MG HS/Body control module (BCM)
SP1049	Power mode adjustment	MG HS/Keyless entry and start system (PEPS)
SP1050	Air conditioning servo motor self-learning	MG HS/Air conditioning control module (HVAC)
SP1051	Maintenance mileage reset	MG HS/Instrument module (IPK)
SP1054	tire sensor self-learning,	MG HS/Tire pressure monitoring system (TPMS)
SP1055	TBOX restart	MG EHS/Communication module (T-BOX)
SP1056	OTA Bluetooth lock open	MG EHS/Communication module (T-BOX)
SP1057	GW setting power mode	MG EHS/Gateway (GW)
SP1058	Gateway battery ID writing	MG EHS/Gateway (GW)
SP1059	Engine control module self-learning value reset	MG EHS/Engine management system (ECM)
SP1068	Clutch parameter self-learning	MG EHS/Hybrid control unit (HCU)
SP1069	Transmission gear selection reference point self-learning	MG EHS/Hybrid control unit (HCU)
SP1070	Transmission parameter self-learning	MG EHS/Hybrid control unit (HCU)
SP1071	Fast adaptive (manual method)	MG EHS/Hybrid control unit (HCU)
SP1072	Clear transmission parameters	MG EHS/Hybrid control unit (HCU)
SP1073	Clear clutch parameters	MG EHS/Hybrid control unit (HCU)
SP1074	Clear shift execution structure parameters	MG EHS/Hybrid control unit (HCU)
SP1075	Drive motor angle self-learning	MG EHS/Integrated starter control module (ISC)
SP1076	Electric drive transmission coolant exhausting	MG EHS/Integrated starter control module (ISC)
SP1077	parking brake system parts replacement	MG EHS/Dynamic stabilization control system (SCS/ABS)
SP1078	yaw sensor learning	MG EHS/Dynamic stabilization control system (SCS/ABS)
SP1079	ABS Add liquid exhaust	MG EHS/Dynamic stabilization control system (SCS/ABS)
SP1080	Release left Side actuator	MG EHS/Dynamic stabilization control system (SCS/ABS)
SP1081	Release right side actuator	MG EHS/Dynamic stabilization control system (SCS/ABS)
SP1082	Enable left side actuator	MG EHS/Dynamic stabilization control system (SCS/ABS)
SP1083	Enable right side actuator	MG EHS/Dynamic stabilization control system (SCS/ABS)
SP1084	Enable both side actuators	MG EHS/Dynamic stabilization control system (SCS/ABS)
SP1085	Release both side actuators	MG EHS/Dynamic stabilization control system (SCS/ABS)
SP1086	Electric power steering system learning	MG EHS/Electronic steering power system (EPS)
SP1087	Forward camera module self-learning	MG EHS/Front camera module (FVCM)
SP1088	Body control module operation mode adjustment	MG EHS/Body control module (BCM)
SP1089	Power mode adjustment	MG EHS/Keyless entry and key launch module (PEPS)
SP1090	Air conditioning servo motor self-learning	MG EHS/Air conditioning system (Warm air , Ventilation and air conditioning) (HVAC)
SP1091	tire sensor self-learning,	MG EHS/Tire pressure monitoring system (TPMS)
SP1092	TBOX restart	AS23PUK/Communication module (T-BOX)
SP1093	OTA Bluetooth lock open	AS23PUK/Communication module (T-BOX)
SP1094	GW setting power mode	AS23PUK/Gateway (GW)
SP1095	Gateway battery ID writing	AS23PUK/Gateway (GW)
SP1096	Engine control module self-learning value reset	AS23PUK/Engine management system (ECM)
SP1105	Clutch parameter self-learning	AS23PUK/Hybrid control unit (HCU)
SP1106	Transmission gear selection reference point self-learning	AS23PUK/Hybrid control unit (HCU)
SP1107	Transmission parameter self-learning	AS23PUK/Hybrid control unit (HCU)
SP1108	Fast adaptive (manual method)	AS23PUK/Hybrid control unit (HCU)
SP1109	Clear transmission parameters	AS23PUK/Hybrid control unit (HCU)
SP1110	Clear clutch parameters	AS23PUK/Hybrid control unit (HCU)
SP1111	Clear shift execution structure parameters	AS23PUK/Hybrid control unit (HCU)
SP1112	Drive motor angle self-learning	AS23PUK/Integrated starter control module (ISC)

SP1113	Electric drive transmission coolant exhausting	AS23PUK/Integrated starter control module (ISC)
SP1114	parking brake system parts replacement	AS23PUK/Dynamic stabilization control system (SCS/ABS)
SP1115	yaw sensor learning	AS23PUK/Dynamic stabilization control system (SCS/ABS)
SP1116	ABS Add liquid exhaust	AS23PUK/Dynamic stabilization control system (SCS/ABS)
SP1117	Release left Side actuator	AS23PUK/Dynamic stabilization control system (SCS/ABS)
SP1118	Release right side actuator	AS23PUK/Dynamic stabilization control system (SCS/ABS)
SP1119	Enable left side actuator	AS23PUK/Dynamic stabilization control system (SCS/ABS)
SP1120	Enable right side actuator	AS23PUK/Dynamic stabilization control system (SCS/ABS)
SP1121	Enable both side actuators	AS23PUK/Dynamic stabilization control system (SCS/ABS)
SP1122	Release both side actuators	AS23PUK/Dynamic stabilization control system (SCS/ABS)
SP1123	Electric power steering system learning	AS23PUK/Electronic steering power system (EPS)
SP1124	Forward camera module self-learning	AS23PUK/Front camera module (FVCM)
SP1125	Forward detection radar driving calibration	AS23PUK/Forward detection radar module (FDR)
SP1126	of the forward detection radar Query the self-learning result of the forward detection radar driving calibration	AS23PUK/Forward detection radar module (FDR)
SP1127	Body control module operation mode adjustment	AS23PUK/Body control module (BCM)
SP1128	Power mode adjustment	AS23PUK/Keyless entry and key launch module (PEPS)
SP1129	Air conditioning servo motor self-learning	AS23PUK/Air conditioning system (Warm air , Ventilation and air conditioning) (HVAC)
SP1130	Maintenance mileage reset	AS23PUK/Combination instrument (IPK)
SP1131	tire sensor self-learning,	AS23PUK/Tire pressure monitoring system (TPMS)
SP1132	360 panoramic image control module self-learning	AS23PUK/360 Panoramic image control module (AVM)
SP1133	TBOX restart	MG HS TT/Communication module (T-BOX)
SP1134	GW setting power mode	MG HS TT/Gateway (GW)
SP1135	Gateway brake sensor zero learning	MG HS TT/Gateway (GW)
SP1136	Battery ID write	MG HS TT/Gateway (GW)
SP1137	Engine control module self-learning value reset	MG HS TT/Engine management system (ECM)
SP1138	Engine start-stop times reset	MG HS TT/Engine management system (ECM)
SP1139	engine throttle self-learning reset	MG HS TT/Engine management system (ECM)
SP1141	parking brake system parts replacement	MG HS TT/Dynamic stabilization control system (SCS/ABS)
SP1142	yaw sensor learning	MG HS TT/Dynamic stabilization control system (SCS/ABS)
SP1143	ABS Add liquid exhaust	MG HS TT/Dynamic stabilization control system (SCS/ABS)
SP1144	Release left Side actuator	MG HS TT/Dynamic stabilization control system (SCS/ABS)
SP1145	Release right side actuator	MG HS TT/Dynamic stabilization control system (SCS/ABS)
SP1146	Enable left side actuator	MG HS TT/Dynamic stabilization control system (SCS/ABS)
SP1147	Enable right side actuator	MG HS TT/Dynamic stabilization control system (SCS/ABS)
SP1148	Enable both side actuators	MG HS TT/Dynamic stabilization control system (SCS/ABS)
SP1149	Forward detection radar driving calibration	MG HS TT/Radar module (FDR)
SP1150	of the forward detection radar Query the self-learning result of the forward detection radar driving calibration	MG HS TT/Radar module (FDR)
SP1151	Electric power steering system learning	MG HS TT/Electronic steering power system (EPS)
SP1152	Forward camera module self-learning	MG HS TT/Front camera module (FVCM)
SP1153	Body control module operation mode adjustment	MG HS TT/Body control module (BCM)
SP1154	Power mode adjustment	MG HS TT/Keyless entry and key launch module (PEPS)
SP1155	Air conditioning servo motor self-learning	MG HS TT/Air conditioning system (Warm air , Ventilation and air conditioning) (HVAC)
SP1156	Maintenance mileage reset	MG HS TT/Combination instrument (IPK)
SP1159	tire sensor self-learning,	MG HS TT/Tire pressure monitoring system (TPMS)

SP1160	GW setting power mode	MG HS UK/Gateway (GW)
SP1161	Gateway brake sensor zero learning	MG HS UK/Gateway (GW)
SP1162	Battery ID write	MG HS UK/Gateway (GW)
SP1163	Engine control module self-learning value reset	MG HS UK/Engine management system (ECM)
SP1174	Transmission control module quick learning	MG HS UK/Gearbox control module (TCM)
SP1181	parking brake system parts replacement	MG HS UK/Dynamic stabilization control system (SCS/ABS)
SP1182	yaw sensor learning	MG HS UK/Dynamic stabilization control system (SCS/ABS)
SP1183	ABS Add liquid exhaust	MG HS UK/Dynamic stabilization control system (SCS/ABS)
SP1184	Release left Side actuator	MG HS UK/Dynamic stabilization control system (SCS/ABS)
SP1185	Release right side actuator	MG HS UK/Dynamic stabilization control system (SCS/ABS)
SP1186	Enable left side actuator	MG HS UK/Dynamic stabilization control system (SCS/ABS)
SP1187	Enable right side actuator	MG HS UK/Dynamic stabilization control system (SCS/ABS)
SP1188	Enable both side actuators	MG HS UK/Dynamic stabilization control system (SCS/ABS)
SP1189	Release both side actuators	MG HS UK/Dynamic stabilization control system (SCS/ABS)
SP1190	Electric power steering system learning	MG HS UK/Electronic steering power system (EPS)
SP1191	Forward camera module self-learning	MG HS UK/Front camera module (FVCM)
SP1192	Forward detection radar driving calibration	MG HS UK/Radar module (FDR)
SP1193	of the forward detection radar Query the self-learning result of the forward detection radar driving calibration	MG HS UK/Radar module (FDR)
SP1194	Power mode adjustment	MG HS UK/Keyless entry and key launch module (PEPS)
SP1195	Air conditioning servo motor self-learning	MG HS UK/Air conditioning system (Warm air , Ventilation and air conditioning) (HVAC)
SP1196	Maintenance mileage reset	MG HS UK/Combination instrument (IPK)
SP1198	tire sensor self-learning,	MG HS UK/Tire pressure monitoring system (TPMS)
SP1199	TBOX restart	eRX5/Car Junction Box (TBOX)
SP1200	TBOX Bluetooth OTA lock on	eRX5/Car Junction Box (TBOX)
SP1201	Gateway brake sensor zero learning	eRX5/Gateway (GW)
SP1202	Battery ID write	eRX5/Gateway (GW)
SP1203	Engine control module self-learning value reset	eRX5/Engine Control Module (ECM)
SP1205	HCU synchronizer position learning	eRX5/Hybrid Control Unit (HCU)
SP1206	HCU clutch engagement point self-learning	eRX5/Hybrid Control Unit (HCU)
SP1207	Hybrid system solenoid valve cleaning operation	eRX5/Hybrid Control Unit (HCU)
SP1208	removal EDU valve assembly	eRX5/Hybrid Control Unit (HCU)
SP1209	EDU hydraulic system pressure relief	eRX5/Hybrid Control Unit (HCU)
SP1210	TM Motor angle self-learning	eRX5/Traction Control (TC)
SP1211	Electric drive transmission coolant exhausting	eRX5/Traction Control (TC)
SP1212	ISG motor angle self-learning	eRX5/Idle speed control system (ISC)
SP1213	ISG motor acceleration test	eRX5/Idle speed control system (ISC)
SP1214	Pressure sensor learning	eRX5/Ignition Control System (SCS)
SP1215	yaw sensor learning	eRX5/Ignition Control System (SCS)
SP1216	ABS Add liquid exhaust	eRX5/Ignition Control System (SCS)
SP1217	Electric power steering system learning	eRX5/Electric Power Steering System (EPS)
SP1218	parking brake cable Adjustment of the parking brake cable	eRX5/Electronic Parking Brake System (EPB)
SP1219	Full release of the	eRX5/Electronic Parking Brake System (EPB)
SP1220	Electronic parking tension test	eRX5/Electronic Parking Brake System (EPB)
SP1221	Electronic parking release test	eRX5/Electronic Parking Brake System (EPB)
SP1222	Forward camera module self-learning	eRX5/Front facing camera module (FVCM)
SP1223	wheel angle sensor to zero learn	eRX5/Steering Angle Sensor Module (SAS)
SP1224	the steering angle sensor offset learning	eRX5/Steering Angle Sensor Module (SAS)
SP1225	Body control module operation mode adjustment	eRX5/Body Control Module (BCM)
SP1226	Electric tailgate self-learning	eRX5/Electric tailgate control module (PLCM)
SP1227	Power mode adjustment	eRX5/Keyless Entry Module (PEPS)
SP1228	Air conditioning servo motor self-learning	eRX5/Temperature Controller (HVAC)
SP1229	Maintenance mileage reset	eRX5/Instrument unit (IPK)
SP1230	tire sensor self-learning,	eRX5/Tire Pressure Monitoring System (TPMS)
SP1231	TBOX restart	RX5 ePlus/Communication Module (T-BOX)
SP1232	OTA Bluetooth lock open	RX5 ePlus/Communication Module (T-BOX)
SP1233	Gateway brake sensor zero learning	RX5 ePlus/Gateway Module (GW)
SP1234	Battery ID write	RX5 ePlus/Gateway Module (GW)

SP1235	Clutch parameter self-learning	RX5 ePlus/Hybrid Control Unit (HCU)
SP1236	Transmission gear selection reference point self-learning	RX5 ePlus/Hybrid Control Unit (HCU)
SP1237	Transmission parameter self-learning	RX5 ePlus/Hybrid Control Unit (HCU)
SP1238	Clear transmission parameters	RX5 ePlus/Hybrid Control Unit (HCU)
SP1239	Clear clutch parameters	RX5 ePlus/Hybrid Control Unit (HCU)
SP1240	Clear shift execution structure parameters	RX5 ePlus/Hybrid Control Unit (HCU)
SP1241	Fast adaptive (manual method)	RX5 ePlus/Hybrid Control Unit (HCU)
SP1242	Drive motor angle self-learning	RX5 ePlus/Integrated Starter Control Module (ISC)
SP1243	Electric drive transmission coolant exhausting	RX5 ePlus/Integrated Starter Control Module (ISC)
SP1244	Engine control module self-learning value reset	RX5 ePlus/Engine Control Module (ECM)
SP1245	engine throttle self-learning reset	RX5 ePlus/Engine Control Module (ECM)
SP1246	Electric power steering system learning	RX5 ePlus/Electronic Power Steering System (EPS)
SP1247	parking brake system parts replacement	RX5 ePlus/Anti-lock braking system/dynamic stability control (SCS)
SP1248	yaw sensor learning	RX5 ePlus/Anti-lock braking system/dynamic stability control (SCS)
SP1249	ABS Add liquid exhaust	RX5 ePlus/Anti-lock braking system/dynamic stability control (SCS)
SP1250	Release left Side actuator	RX5 ePlus/Anti-lock braking system/dynamic stability control (SCS)
SP1251	Release right side actuator	RX5 ePlus/Anti-lock braking system/dynamic stability control (SCS)
SP1252	Enable left side actuator	RX5 ePlus/Anti-lock braking system/dynamic stability control (SCS)
SP1253	Enable right side actuator	RX5 ePlus/Anti-lock braking system/dynamic stability control (SCS)
SP1254	Enable both side actuators	RX5 ePlus/Anti-lock braking system/dynamic stability control (SCS)
SP1255	Release both side actuators	RX5 ePlus/Anti-lock braking system/dynamic stability control (SCS)
SP1256	Forward camera module self-learning	RX5 ePlus/Front camera module (FVCM)
SP1257	Body control module operation mode adjustment	RX5 ePlus/Body Control Module (BCM)
SP1258	Power mode adjustment	RX5 ePlus/Keyless Entry and Keyless Start Module (PEPS)
SP1259	tire sensor self-learning,	RX5 ePlus/Tire Pressure Monitoring System (TPMS)
SP1260	Air conditioning servo motor self-learning	RX5 ePlus/Air Conditioning Module (HVAC)
SP1263	OTA Bluetooth lock open	ERX5 (EV)/Communication Module (T-BOX)
SP1264	GW setting power mode	ERX5 (EV)/Gateway Module (GW)
SP1265	Gateway battery ID writing	ERX5 (EV)/Gateway Module (GW)
SP1266	brake pedal position sensor zero eLearning	ERX5 (EV)/Gateway Module (GW)
SP1267	Coolant filling and exhausting	ERX5 (EV)/ Vehicle Control Module (VCU)
SP1268	Drive motor angle self-learning	ERX5 (EV)/ Traction Motor Controller (TC)
SP1269	Dynamic Stability Control System Pressure Sensor Learning	ERX5 (EV)/Anti-lock braking system/dynamic stability control (ABS/SCS)
SP1270	yaw sensor learning	ERX5 (EV)/Anti-lock braking system/dynamic stability control (ABS/SCS)
SP1271	ABSSCS Add liquid exhaust	ERX5 (EV)/Anti-lock braking system/dynamic stability control (ABS/SCS)
SP1272	Electric power steering system learning	ERX5 (EV)/Electronic Power Steering System (EPS)
SP1273	wheel angle sensor to zero learn	ERX5 (EV)/Rotation Angle Sensor (SAS)
SP1274	the steering angle sensor offset learning	ERX5 (EV)/Rotation Angle Sensor (SAS)
SP1275	parking brake cable Adjustment of the parking brake cable	ERX5 (EV)/Electronic Handbrake Module (EPB)
SP1276	Full release of the	ERX5 (EV)/Electronic Handbrake Module (EPB)
SP1277	Electronic parking tension test	ERX5 (EV)/Electronic Handbrake Module (EPB)
SP1278	Electronic parking release test	ERX5 (EV)/Electronic Handbrake Module (EPB)
SP1279	Forward camera module self-learning	ERX5 (EV)/Front camera module (FVCM)
SP1280	Body control module operation mode adjustment	ERX5 (EV)/Body Control Module (BCM)
SP1281	Power mode adjustment	ERX5 (EV)/Keyless Entry and Start System (PEPS)
SP1282	Air conditioning servo motor self-learning	ERX5 (EV)/Air Conditioning Controller (HVAC)
SP1284	Maintenance mileage reset	ERX5 (EV)/Instrument Module (IPK)
SP1285	Electric tailgate self-learning	ERX5 (EV)/Electric tailgate control module (PLCM)
SP1286	tire sensor self-learning,	ERX5 (EV)/Tire Pressure Monitoring System (TPMS)
SP1287	TBOX restart	RX5 MAX/Communication module (T-BOX)
SP1288	OTA Bluetooth lock open	RX5 MAX/Communication module (T-BOX)

SP1289	GW setting power mode	RX5 MAX/Gateway module (GW)
SP1290	Battery ID write	RX5 MAX/Gateway module (GW)
SP1291	engine throttle self-learning reset	RX5 MAX/Engine control module (ECM)
SP1292	Engine control module self-learning value reset	RX5 MAX/Engine control module (ECM)
SP1293	Brake pedal position sensor self-learning	RX5 MAX/Engine control module (ECM)
SP1304	Automatic transmission self-learning	RX5 MAX/Gearbox control module (TCM)
SP1305	Adaptive learning value reset	RX5 MAX/Gearbox control module (TCM)
SP1306	Read the SubROM data	RX5 MAX/Gearbox control module (TCM)
SP1307	Transmission sensor test sensor self-detection	RX5 MAX/Gearbox control module (TCM)
SP1309	Four-wheel drive Control module self-test	RX5 MAX/Four-wheel control module (TCCM)
SP1310	SCU executes gear self-learning	RX5 MAX/Seck detection module (SCU)
SP1311	SCU clears gear learning value	RX5 MAX/Seck detection module (SCU)
SP1312	parking brake system parts replacement	RX5 MAX/Anti-lock brake system / Dynamic stability control (ABS/SCS)
SP1313	yaw sensor learning	RX5 MAX/Anti-lock brake system / Dynamic stability control (ABS/SCS)
SP1314	ABS Add liquid exhaust	RX5 MAX/Anti-lock brake system / Dynamic stability control (ABS/SCS)
SP1315	Release left Side actuator	RX5 MAX/Anti-lock brake system / Dynamic stability control (ABS/SCS)
SP1316	Release right side actuator	RX5 MAX/Anti-lock brake system / Dynamic stability control (ABS/SCS)
SP1317	Enable left side actuator	RX5 MAX/Anti-lock brake system / Dynamic stability control (ABS/SCS)
SP1318	Enable right side actuator	RX5 MAX/Anti-lock brake system / Dynamic stability control (ABS/SCS)
SP1319	Enable both side actuators	RX5 MAX/Anti-lock brake system / Dynamic stability control (ABS/SCS)
SP1320	Release both side actuators	RX5 MAX/Anti-lock brake system / Dynamic stability control (ABS/SCS)
SP1321	Electric power steering system learning	RX5 MAX/Electronic power steering system (EPS)
SP1322	Forward detection radar driving calibration	RX5 MAX/Forward detection radar module (FDR)
SP1323	of the forward detection radar Query the self-learning result of the forward detection radar driving calibration	RX5 MAX/Forward detection radar module (FDR)
SP1324	Forward camera module self-learning	RX5 MAX/Front camera module (FVCM)
SP1325	Body control module operation mode adjustment	RX5 MAX/Body control module (BCM)
SP1326	Power mode adjustment	RX5 MAX/Keyless entry and start system (PEPS)
SP1327	Air conditioning servo motor self-learning	RX5 MAX/Air conditioner controller (HVAC)
SP1328	Maintenance mileage reset	RX5 MAX/Instrument module (IPK)
SP1329	tire sensor self-learning,	RX5 MAX/Tire pressure monitoring system (TPMS)
SP1330	360 panoramic image control module self-learning	RX5 MAX/360 Panoramic image control module (AVM)
SP1331	TBOX restart	RX5 eMAX/Communication Module (T-BOX)
SP1332	OTA Bluetooth lock open	RX5 eMAX/Communication Module (T-BOX)
SP1333	GW setting power mode	RX5 eMAX/Gateway Module (GW)
SP1334	Battery ID write	RX5 eMAX/Gateway Module (GW)
SP1335	Clutch parameter self-learning	RX5 eMAX/Hybrid Control Unit (HCU)
SP1336	Transmission gear selection reference point self-learning	RX5 eMAX/Hybrid Control Unit (HCU)
SP1337	Transmission parameter self-learning	RX5 eMAX/Hybrid Control Unit (HCU)
SP1338	Clear transmission parameters	RX5 eMAX/Hybrid Control Unit (HCU)
SP1339	Clear clutch parameters	RX5 eMAX/Hybrid Control Unit (HCU)
SP1340	Clear shift execution structure parameters	RX5 eMAX/Hybrid Control Unit (HCU)
SP1341	Fast adaptive (manual method)	RX5 eMAX/Hybrid Control Unit (HCU)
SP1342	Drive motor angle self-learning	RX5 eMAX/Integrated Starter Control Module (ISC)
SP1343	Electric drive transmission coolant exhausting	RX5 eMAX/Integrated Starter Control Module (ISC)
SP1352	parking brake system parts replacement	RX5 eMAX/Anti-lock braking system/dynamic stability control (SCS/ABS)
SP1353	yaw sensor learning	RX5 eMAX/Anti-lock braking system/dynamic stability control (SCS/ABS)
SP1354	ABS Add liquid exhaust	RX5 eMAX/Anti-lock braking system/dynamic stability control (SCS/ABS)
SP1355	Release left Side actuator	RX5 eMAX/Anti-lock braking system/dynamic stability control (SCS/ABS)
SP1356	Release right side actuator	RX5 eMAX/Anti-lock braking system/dynamic stability control (SCS/ABS)
SP1357	Enable left side actuator	RX5 eMAX/Anti-lock braking system/dynamic stability control (SCS/ABS)
SP1358	Enable right side actuator	RX5 eMAX/Anti-lock braking system/dynamic stability control (SCS/ABS)

SP1359	Enable both side actuators	RX5 eMAX/Anti-lock braking system/dynamic stability control (SCS/ABS)
SP1360	Release both side actuators	RX5 eMAX/Anti-lock braking system/dynamic stability control (SCS/ABS)
SP1361	Electric power steering system learning	RX5 eMAX/Electronic Power Steering System (EPS)
SP1362	Forward detection radar driving calibration	RX5 eMAX/Forward Detection Radar Module (FDR)
SP1363	of the forward detection radar Query the self-learning result of the forward detection radar driving calibration	RX5 eMAX/Forward Detection Radar Module (FDR)
SP1364	Forward camera module self-learning	RX5 eMAX/Front camera module (FVCM)
SP1365	Body control module operation mode adjustment	RX5 eMAX/Body Control Module (BCM)
SP1366	Power mode adjustment	RX5 eMAX/Keyless Entry and Keyless Start Module (PEPS)
SP1367	Air conditioning servo motor self-learning	RX5 eMAX/Air Conditioning Module (HVAC)
SP1368	tire sensor self-learning,	RX5 eMAX/Tire Pressure Monitoring System (TPMS)
SP1369	360 panoramic image control module self-learning	RX5 eMAX/360 panoramic image control module (AVM)
SP1379	TBOX restart	MARVEL X/Communication Module (T-BOX)
SP1380	OTA Bluetooth lock open	MARVEL X/Communication Module (T-BOX)
SP1381	GW setting power mode	MARVEL X/Gateway Module (GW)
SP1382	Gateway brake sensor zero learning	MARVEL X/Gateway Module (GW)
SP1383	Gateway battery ID writing	MARVEL X/Gateway Module (GW)
SP1384	HCU synchronizer position learning	MARVEL X/ Vehicle Control Module (VCU)
SP1385	Coolant filling and exhausting	MARVEL X/ Vehicle Control Module (VCU)
SP1386	yaw sensor learning	MARVEL X/Anti-lock braking system/dynamic stability control (ABS/SCS)
SP1387	Refilling exhaust	MARVEL X/Anti-lock braking system/dynamic stability control (ABS/SCS)
SP1388	Electric power steering system learning	MARVEL X/Electronic Power Steering System (EPS)
SP1389	Forward camera module self-learning	MARVEL X/Front camera module (FVCM)
SP1390	parking brake system parts replacement	MARVEL X/Electronic Handbrake Module (EPB)
SP1391	Release left Side actuator	MARVEL X/Electronic Handbrake Module (EPB)
SP1392	Release right side actuator	MARVEL X/Electronic Handbrake Module (EPB)
SP1393	Enable left side actuator	MARVEL X/Electronic Handbrake Module (EPB)
SP1394	Enable right side actuator	MARVEL X/Electronic Handbrake Module (EPB)
SP1395	Enable both side actuators	MARVEL X/Electronic Handbrake Module (EPB)
SP1396	Release both side actuators	MARVEL X/Electronic Handbrake Module (EPB)
SP1397	Forward detection radar driving calibration	MARVEL X/Forward Detection Radar Module (FDR)
SP1398	of the forward detection radar Query the self-learning result of the forward detection radar driving calibration	MARVEL X/Forward Detection Radar Module (FDR)
SP1399	P2P positioning calibration	MARVEL X/Point-to-point memory parking assist module (P2P)
SP1400	Body control module operation mode adjustment	MARVEL X/Body Control Module (BCM)
SP1401	Power mode adjustment	MARVEL X/Keyless Entry and Start System (PEPS)
SP1402	Air conditioning servo motor self-learning	MARVEL X/Air Conditioning Controller (HVAC)
SP1403	Maintenance mileage reset	MARVEL X/Instrument Module (IPK)
SP1404	tire sensor self-learning,	MARVEL X/Tire Pressure Monitoring System (TPMS)
SP1431	TBOX restart	MARVEL R/Communication Module (T-BOX)
SP1432	OTA Bluetooth lock open	MARVEL R/Communication Module (T-BOX)
SP1433	GW setting power mode	MARVEL R/Gateway(GW)
SP1434	Gateway brake sensor zero learning	MARVEL R/Gateway(GW)
SP1435	Gateway battery ID writing	MARVEL R/Gateway(GW)
SP1436	Coolant filling and exhausting	MARVEL R/Vehicle Control Module (VCU)
SP1437	Electric power steering system learning	MARVEL R/Electric Power Steering (EPS)
SP1438	parking brake system parts replacement	MARVEL R/Electronic Handbrake Module (EPB)
SP1439	Release left Side actuator	MARVEL R/Electronic Handbrake Module (EPB)
SP1440	Release right side actuator	MARVEL R/Electronic Handbrake Module (EPB)
SP1441	Enable left side actuator	MARVEL R/Electronic Handbrake Module (EPB)
SP1442	Enable right side actuator	MARVEL R/Electronic Handbrake Module (EPB)
SP1443	Enable both side actuators	MARVEL R/Electronic Handbrake Module (EPB)
SP1444	Release both side actuators	MARVEL R/Electronic Handbrake Module (EPB)
SP1445	Forward detection radar driving calibration	MARVEL R/Radar Module (FDR)
SP1446	of the forward detection radar Query the self-learning result of the forward detection radar driving calibration	MARVEL R/Radar Module (FDR)
SP1447	Forward camera module self-learning	MARVEL R/Front camera module (FVCM)
SP1448	Body control module operation mode adjustment	MARVEL R/Body Control Module (BCM)
SP1449	Air conditioning servo motor self-learning	MARVEL R/Air Conditioning Module (HVAC)

SP1450	Power mode adjustment	MARVEL R/Keyless Entry and Keyless Start Module (PEPS)
SP1451	360 panoramic image control module self-learning	MARVEL R/360 panoramic image control module (AVM)
SP1452	tire sensor self-learning,	MARVEL R/Tire Pressure Monitoring System (TPMS)
SP1453	OTA Bluetooth lock open	Ei5/Communication Module (T-BOX)
SP1454	TBOX restart	Ei5/Communication Module (T-BOX)
SP1455	GW setting power mode	Ei5/Gateway Module (GW)
SP1456	Gateway brake sensor zero learning	Ei5/Gateway Module (GW)
SP1457	Gateway battery ID writing	Ei5/Gateway Module (GW)
SP1458	Drive motor angle self-learning	Ei5/ Traction Motor Controller (TC)
SP1459	Coolant filling and exhausting	Ei5/Vehicle Control Module (VCU)
SP1460	yaw sensor learning	Ei5/Anti-lock braking system/dynamic stability control (SCS/ABS)
SP1461	parking brake system parts replacement	Ei5/Anti-lock braking system/dynamic stability control (SCS/ABS)
SP1462	Refilling exhaust	Ei5/Anti-lock braking system/dynamic stability control (SCS/ABS)
SP1463	Release left Side actuator	Ei5/Anti-lock braking system/dynamic stability control (SCS/ABS)
SP1464	Release right side actuator	Ei5/Anti-lock braking system/dynamic stability control (SCS/ABS)
SP1465	Enable left side actuator	Ei5/Anti-lock braking system/dynamic stability control (SCS/ABS)
SP1466	Enable right side actuator	Ei5/Anti-lock braking system/dynamic stability control (SCS/ABS)
SP1467	Enable both side actuators	Ei5/Anti-lock braking system/dynamic stability control (SCS/ABS)
SP1468	Release both side actuators	Ei5/Anti-lock braking system/dynamic stability control (SCS/ABS)
SP1469	Electric power steering system learning	Ei5/Electronic Power Steering System (EPS)
SP1470	Forward camera module self-learning	Ei5/Front camera module (FVCM)
SP1478	parking brake system parts replacement	Ei5/Electronic Handbrake Module (EPB)
SP1479	Release left Side actuator	Ei5/Electronic Handbrake Module (EPB)
SP1480	Release right side actuator	Ei5/Electronic Handbrake Module (EPB)
SP1481	Enable left side actuator	Ei5/Electronic Handbrake Module (EPB)
SP1482	Enable right side actuator	Ei5/Electronic Handbrake Module (EPB)
SP1483	Enable both side actuators	Ei5/Electronic Handbrake Module (EPB)
SP1484	Release both side actuators	Ei5/Electronic Handbrake Module (EPB)
SP1485	tire sensor self-learning,	Ei5/Tire Pressure Monitoring System (TPMS)
SP1486	Body control module operation mode adjustment	Ei5/Body Control Module (BCM)
SP1487	Power mode adjustment	Ei5/Keyless Entry and Keyless Start Module (PEPS)
SP1488	Air conditioning damper actuator self-learning	Ei5/Air conditioning control module (HVAC)
SP1489	Maintenance mileage reset	Ei5/Combination Instrument (IPK)
SP1491	TBOX restart	CLEVER/Communication Module (T-BOX)
SP1492	Brake pedal position sensor self-learning	CLEVER/Gateway (GW)
SP1493	Gateway power mode adjustment	CLEVER/Gateway (GW)
SP1494	ABS/SCS Add liquid exhaust	CLEVER/Anti-lock Braking System (ABS)
SP1495	Electric power steering system learning	CLEVER/Electric Power Steering (EPS)
SP1496	Electric drive transmission coolant Filling and exhausting	CLEVER/Vehicle Control Module (VCU)
SP1497	Drive motor angle self-learning	CLEVER/ Traction Motor Controller (TC)
SP1498	Maintenance interval reset	CLEVER/Combination Instrument (IPK)
SP1499	Air conditioning damper actuator self-learning	CLEVER/Air Conditioning Module (HVAC)
SP1500	Body control module power mode adjustment	CLEVER/Body Control Module (BCM)
SP1501	tire sensor learning,	CLEVER/Body Control Module (BCM)
SP1502	TBOX restart	IMAX8/Communication module (T-BOX)
SP1503	OTA Bluetooth lock open	IMAX8/Communication module (T-BOX)
SP1504	Gateway power mode adjustment	IMAX8/Gateway module (GW)
SP1505	Battery ID write	IMAX8/Gateway module (GW)
SP1506	Forward detection radar self-learning	IMAX8/Radar module (FDR)
SP1507	Engine control module self-learning value reset	IMAX8/Engine management system (ECM)
SP1508	Electronic throttle self-learning	IMAX8/Engine management system (ECM)
SP1509	GPF learning value reset	IMAX8/Engine management system (ECM)
SP1510	GPF pressure sensor self-learning adaptive value reset	IMAX8/Engine management system (ECM)
SP1511	GPF model update	IMAX8/Engine management system (ECM)
SP1512	GPF learning value backup	IMAX8/Engine management system (ECM)
SP1513	GPF learning value write	IMAX8/Engine management system (ECM)
SP1514	GPF adaptation	IMAX8/Engine management system (ECM)

SP1515	Transmission self-learning value reset	IMAX8/Gearbox control module (TCM)
SP1516	ACU Clear gear self-learning	IMAX8/Action execution module (ACU)
SP1517	performs self-learning gear	IMAX8/Action execution module (ACU)
SP1518	yaw sensor learning	IMAX8/Anti-lock brake system / Dynamic stability control (SCS)
SP1519	ABS/SCS Add liquid exhaust	IMAX8/Anti-lock brake system / Dynamic stability control (SCS)
SP1520	Parking brake system actuator parts replacement	IMAX8/Anti-lock brake system / Dynamic stability control (SCS)
SP1521	Parking brake system function test	IMAX8/Anti-lock brake system / Dynamic stability control (SCS)
SP1522	Release the actuators on both sides of the parking brake system	IMAX8/Anti-lock brake system / Dynamic stability control (SCS)
SP1523	Activate the left actuator of the parking brake system	IMAX8/Anti-lock brake system / Dynamic stability control (SCS)
SP1524	on both sides of the parking brake system Activate the right actuator of the parking brake system	IMAX8/Anti-lock brake system / Dynamic stability control (SCS)
SP1525	parking brake system Release the left actuator of the parking brake system	IMAX8/Anti-lock brake system / Dynamic stability control (SCS)
SP1526	Release the right actuator of the	IMAX8/Anti-lock brake system / Dynamic stability control (SCS)
SP1527	Activate the actuators	IMAX8/Anti-lock brake system / Dynamic stability control (SCS)
SP1528	Steering angle sensor zero learning	IMAX8/Corner sensor (SAS)
SP1529	front-view camera module self-learning,	IMAX8/Front camera module (FVCM)
SP1530	Air conditioning damper actuator self-learning	IMAX8/Air conditioning control module (HVAC)
SP1531	Power mode adjustment	IMAX8/Keyless entry and key launch module (PEPS)
SP1532	Body control module operation mode adjustment	IMAX8/Body control module (BCM)
SP1533	tire sensor learning,	IMAX8/Tire pressure monitoring system (TPMS)
SP1554	wheel angle sensor to zero learn	Roewe New 550 HYBRID /Rotation Angle Sensor (SAS)
SP1555	the steering angle sensor offset learning	Roewe New 550 HYBRID /Rotation Angle Sensor (SAS)
SP1556	TBOX battery life calibration	MG6 14 Year /Communication module (TBOX)
SP1557	TBOX activation	MG6 14 Year /Communication module (TBOX)
SP1558	TBOX restart	MG6 14 Year /Communication module (TBOX)
SP1582	Maintenance mileage reset	IP2X TT/Instrument module (IPK)
SP1583	Power mode	IP2X TT/Body control module (BCM)
SP1584	Automatic transmission control unit quick learning	IP2X TT/Automatic transmission control module (TCM)
SP1585	Adaptive learning value reset	IP2X TT/Automatic transmission control module (TCM)
SP1586	Read the SubRom data	IP2X TT/Automatic transmission control module (TCM)
SP1587	Automatic transmission sensor test	IP2X TT/Automatic transmission control module (TCM)
SP1588	Release left Side actuator	IP2X TT/Electronic park brake (EPB)
SP1589	Release right side actuator	IP2X TT/Electronic park brake (EPB)
SP1590	Enable left side actuator	IP2X TT/Electronic park brake (EPB)
SP1591	Enable right side actuator	IP2X TT/Electronic park brake (EPB)
SP1592	Enable both side actuators	IP2X TT/Electronic park brake (EPB)
SP1593	Release both side actuators	IP2X TT/Electronic park brake (EPB)
SP1594	Refilling exhaust	IP2X TT/Anti-lock brake system / Dynamic stability control (ABS/SCS)
SP1596	OTA Bluetooth lock open	i6/Communication module (T-BOX)
SP1597	TBOX restart	i6/Communication module (T-BOX)
SP1598	GW setting power mode	i6/Gateway (GW)
SP1599	Gateway brake sensor zero learning	i6/Gateway (GW)
SP1600	Battery ID write	i6/Gateway (GW)
SP1601	Adaptive learning value reset	i6/Engine control module (ECM)
SP1602	Electronic throttle quick self-learning	i6/Engine control module (ECM)
SP1614	Transmission control module quick learning	i6/Gearbox control module (TCM)
SP1616	DHL height sensor zero voltage self-learning	i6/Dynamic headlight level adjustment (DHL)
SP1617	Indirect tire pressure system reset	i6/Anti-lock brake system / Dynamic stability control (SCS)
SP1618	parking brake system parts replacement	i6/Anti-lock brake system / Dynamic stability control (SCS)
SP1619	Pressure sensor learning	i6/Anti-lock brake system / Dynamic stability control (SCS)

SP1620	yaw sensor learning	i6/Anti-lock brake system / Dynamic stability control (SCS)
SP1621	ABS Add liquid exhaust	i6/Anti-lock brake system / Dynamic stability control (SCS)
SP1622	Release left Side actuator	i6/Anti-lock brake system / Dynamic stability control (SCS)
SP1623	Release right side actuator	i6/Anti-lock brake system / Dynamic stability control (SCS)
SP1624	Enable left side actuator	i6/Anti-lock brake system / Dynamic stability control (SCS)
SP1625	Enable right side actuator	i6/Anti-lock brake system / Dynamic stability control (SCS)
SP1626	Enable both side actuators	i6/Anti-lock brake system / Dynamic stability control (SCS)
SP1627	Release both side actuators	i6/Anti-lock brake system / Dynamic stability control (SCS)
SP1628	Electric power steering system learning	i6/Electronic steering power system (EPS)
SP1630	Forward camera module self-learning	i6/Front camera module (FVCM)
SP1631	Air conditioning servo motor self-learning	i6/Air conditioning module (HVAC)
SP1632	Power mode adjustment	i6/Keyless entry and start system (PEPS)
SP1633	Body control module operation mode adjustment	i6/Body control module (BCM)
SP1634	Maintenance mileage reset	i6/Instrument module (IPK)
SP1635	tire sensor self-learning,	i6/Tire pressure monitoring system (TPMS)
SP1636	TBOX restart	ER6/Communication Module (T-BOX)
SP1637	OTA Bluetooth lock open	ER6/Communication Module (T-BOX)
SP1638	GW setting power mode	ER6/Gateway (GW)
SP1639	Gateway battery ID writing	ER6/Gateway (GW)
SP1640	brake pedal position sensor zero eLearning	ER6/Gateway (GW)
SP1641	Coolant filling and exhausting	ER6/Vehicle Control Module (VCU)
SP1642	Drive motor angle self-learning	ER6/ Traction Motor Controller (TC)
SP1643	yaw sensor learning	ER6/Anti-lock braking system/dynamic stability control (SCS)
SP1644	ABS Add liquid exhaust	ER6/Anti-lock braking system/dynamic stability control (SCS)
SP1645	Forward camera module self-learning	ER6/Front camera module (FVCM)
SP1646	parking brake system parts replacement	ER6/Electronic Handbrake Module (EPB)
SP1647	Release left Side actuator	ER6/Electronic Handbrake Module (EPB)
SP1648	Release right side actuator	ER6/Electronic Handbrake Module (EPB)
SP1649	Enable left side actuator	ER6/Electronic Handbrake Module (EPB)
SP1650	Enable right side actuator	ER6/Electronic Handbrake Module (EPB)
SP1651	Enable both side actuators	ER6/Electronic Handbrake Module (EPB)
SP1652	Release both side actuators	ER6/Electronic Handbrake Module (EPB)
SP1653	Forward detection radar driving calibration	ER6/Forward Detection Radar Module (FDR)
SP1654	of the forward detection radar Query the self-learning result of the forward detection radar driving calibration	ER6/Forward Detection Radar Module (FDR)
SP1655	Electric power steering system learning	ER6/Electronic Power Steering System (EPS)
SP1656	Body control module operation mode adjustment	ER6/Body Control Module (BCM)
SP1657	Power mode adjustment	ER6/Keyless Entry and Start System (PEPS)
SP1658	Air conditioning servo motor self-learning	ER6/Air Conditioning Module (HVAC)
SP1659	Maintenance mileage reset	ER6/Instrument module (IPK)
SP1660	tire sensor self-learning,	ER6/Tire Pressure Monitoring System (TPMS)
SP1661	TBOX restart	i6 MAX/Communication module (T-BOX)
SP1662	OTA Bluetooth lock open	i6 MAX/Communication module (T-BOX)
SP1663	GW setting power mode	i6 MAX/Gateway (GW)
SP1664	Engine control module self-learning value reset	i6 MAX/Engine control module (ECM)
SP1665	engine throttle self-learning reset	i6 MAX/Engine control module (ECM)
SP1669	parking brake system parts replacement	i6 MAX/Anti-lock brake system / Dynamic stability control (SCS)
SP1670	Pressure sensor learning	i6 MAX/Anti-lock brake system / Dynamic stability control (SCS)
SP1671	yaw sensor learning	i6 MAX/Anti-lock brake system / Dynamic stability control (SCS)
SP1672	ABS Add liquid exhaust	i6 MAX/Anti-lock brake system / Dynamic stability control (SCS)
SP1673	Release left Side actuator	i6 MAX/Anti-lock brake system / Dynamic stability control (SCS)
SP1674	Release right side actuator	i6 MAX/Anti-lock brake system / Dynamic stability control (SCS)
SP1675	Enable left side actuator	i6 MAX/Anti-lock brake system / Dynamic stability control (SCS)

SP1676	Enable right side actuator	i6 MAX/Anti-lock brake system / Dynamic stability control (SCS)
SP1677	Enable both side actuators	i6 MAX/Anti-lock brake system / Dynamic stability control (SCS)
SP1678	Release both side actuators	i6 MAX/Anti-lock brake system / Dynamic stability control (SCS)
SP1679	Electric power steering system learning	i6 MAX/Electronic steering power system (EPS)
SP1681	Body control module operation mode adjustment	i6 MAX/Body control module (BCM)

XTOOL