

Rolls-Royce Function list V10.20

Notes:								
√	Functions marked with √ is fully supported and already existed in former software version.							
*	Functions marked with * is fully supported and newly added in current software version.							
#	Functions marked with # is partially supported , which means the functions is verified on some vehicle models or systems and it might supports other vehicle models or systems.							
	Functions left with blank is not supported.							
Model Series	Part	Systems	ECU Infor	Read Codes	Erase Codes	Live Data	Component activation	Physical HW
RR1/RR2/RR3	Drive	CAS Car Access System	√	√	√	√	√	
RR1/RR2/RR3	Drive	DME Motor Electronics	√	√	√	√	√	
RR1/RR2/RR3	Drive	DME Digital Motor Electronics 2	√	√	√	√	√	
RR1/RR2/RR3	Drive	EGS transmission management	√	√	√	√	√	
RR1/RR2/RR3	Drive	EKPS Fuel-pump control	√	√	√	√	√	
RR1/RR2/RR3	Drive	VTC Valvetronic	√	√	√	√	√	
RR1/RR2/RR3	Drive	VTC2 Valvetronic 2	√	√	√	√	√	
RR1/RR2/RR3	Chassis	ACC Active Cruise Control	√	√	√	√	√	
RR1/RR2/RR3	Chassis	ACC2 Active cruise control 2	√	√	√	√	√	
RR1/RR2/RR3	Chassis	ARS Dynamic Drive	√	√	√	√	√	
RR1/RR2/RR3	Chassis	ARS Dynamic Drive 2	√	√	√	√	√	
RR1/RR2/RR3	Chassis	CIM Chassis Integration Module	√	√	√	√	√	
RR1/RR2/RR3	Chassis	CIM2 Chassis Integration Module 2	√	√	√	√	√	
RR1/RR2/RR3	Chassis	DSC Dynamic Stability Control	√	√	√	√	√	
RR1/RR2/RR3	Chassis	EDC Damper Control	√	√	√	√	√	
RR1/RR2/RR3	Chassis	EHC Electronic Ride-Height Control	√	√	√	√	√	
RR1/RR2/RR3	Chassis	EMF Parking brake	√	√	√	√	√	
RR1/RR2/RR3	Chassis	RDC Tyre pressure control	√	√	√	√	√	
RR1/RR2/RR3	Body	CEM Clean Energy Module	√	√	√	√	√	
RR1/RR2/RR3	Body	AHL Adaptive directional headlights	√	√	√	√	√	
RR1/RR2/RR3	Body	AHM Trailer module	√	√	√	√	√	
RR1/RR2/RR3	Body	AMP Amplifier	√	√	√	√	√	
RR1/RR2/RR3	Body	ANT Aerial/antenna tuner	√	√	√	√	√	
RR1/RR2/RR3	Body	ASK Audio system controller	√	√	√	√	√	

RR1/RR2/RR3	Body	BZM Control centre,centre console	√	√	√	√	√	
RR1/RR2/RR3	Body	FBZM Rear compartment,control centre,centre console	√	√	√	√	√	
RR1/RR2/RR3	Body	CD Control Display	√	√	√	√	√	
RR1/RR2/RR3	Body	CD-GW Control Display(Gateway)	√	√	√	√	√	
RR1/RR2/RR3	Body	SG-FD Control unit,rear-compartment display	√	√	√	√	√	
RR1/RR2/RR3	Body	SG-FD-GW Control unit,rear-compartment display(gateway)	√	√	√	√	√	
RR1/RR2/RR3	Body	FD Rear-compartment display	√	√	√	√	√	
RR1/RR2/RR3	Body	CDC CD Changer	√	√	√	√	√	
RR1/RR2/RR3	Body	CON Controller	√	√	√	√	√	
RR1/RR2/RR3	Body	FCON Rear compartment controller	√	√	√	√	√	
RR1/RR2/RR3	Body	DWA anti-theft alarm system	√	√	√	√	√	
RR1/RR2/RR3	Body	IHKA Integrated automatic heating/air conditioning	√	√	√	√	√	
RR1/RR2/RR3	Body	FKA Rear heater/air conditioning	√	√	√	√	√	
RR1/RR2/RR3	Body	HKL Rear-lid lift	√	√	√	√	√	
RR1/RR2/RR3	Body	JBIT Japan Basis Interface Telephone	√	√	√	√	√	
RR1/RR2/RR3	Body	KHI Headset interface	√	√	√	√	√	
RR1/RR2/RR3	Body	INSTR Instrument cluster	√	√	√	√	√	
RR1/RR2/RR3	Body	LM Lights Module	√	√	√	√	√	
RR1/RR2/RR3	Body	LM2 Light module 2	√	√	√	√	√	
RR1/RR2/RR3	Body	LM2 Light module 2 with adaptive headlight	√	√	√	√	√	
RR1/RR2/RR3	Body	LM2 AHL2 Light module 2 with adaptive headlight 2	√	√	√	√	√	
RR1/RR2/RR3	Body	FLA High Beam Assist	√	√	√	√	√	
RR1/RR2/RR3	Body	FBI Flexible Bus Interface	√	√	√	√	√	
RR1/RR2/RR3	Body	DVDC DVD Changer	√	√	√	√	√	
RR1/RR2/RR3	Body	DAB Digital tuner	√	√	√	√	√	
RR1/RR2/RR3	Body	NAV Navigation computer	√	√	√	√	√	
RR1/RR2/RR3	Body	JNAV Navigation system,Japan	√	√	√	√	√	
RR1/RR2/RR3	Body	KNAV Navigation system,Korea	√	√	√	√	√	
RR1/RR2/RR3	Body	CNAV Navigation system,China	√	√	√	√	√	
RR1/RR2/RR3	Body	NAJ Navigation computer,Japan	√	√	√	√	√	
RR1/RR2/RR3	Body	NVK Night Vision camera	√	√	√	√	√	
RR1/RR2/RR3	Body	NVE Night Vision Electronics	√	√	√	√	√	
RR1/RR2/RR3	Body	PDC Park Distance Control	√	√	√	√	√	
RR1/RR2/RR3	Body	CA Comfort access system	√	√	√	√	√	
RR1/RR2/RR3	Body	RLS Rain/Light Sensor	√	√	√	√	√	
RR1/RR2/RR3	Body	PM Power Module	√	√	√	√	√	

RR1/RR2/RR3	Body	SASL Satellite,A-pillar,left	√	√	√	√	√	
RR1/RR2/RR3	Body	SASR Satellite,A-pillar,right	√	√	√	√	√	
RR1/RR2/RR3	Body	SBSL Satellite,B-pillar,left	√	√	√	√	√	
RR1/RR2/RR3	Body	SBSR Satellite,B-pillar,right	√	√	√	√	√	
RR1/RR2/RR3	Body	SFZ Satellite vehicle centre	√	√	√	√	√	
RR1/RR2/RR3	Body	SSBF Satellite,seat,passenger	√	√	√	√	√	
RR1/RR2/RR3	Body	SSFA Satellite,seat,driver	√	√	√	√	√	
RR1/RR2/RR3	Body	SSH Satellite,seat,rear	√	√	√	√	√	
RR1/RR2/RR3	Body	STVL Satellite,door,front left	√	√	√	√	√	
RR1/RR2/RR3	Body	STVR Satellite,door,front right	√	√	√	√	√	
RR1/RR2/RR3	Body	SHD Sliding/tilting sunroof	√	√	√	√	√	
RR1/RR2/RR3	Body	SHD Slide/tilt sunroof 2	√	√	√	√	√	
RR1/RR2/RR3	Body	SINE Siren and tilt sensor	√	√	√	√	√	
RR1/RR2/RR3	Body	SMFA Seat module,driver	√	√	√	√	√	
RR1/RR2/RR3	Body	SMBF Seat module,passenger	√	√	√	√	√	
RR1/RR2/RR3	Body	SMFAH Seat module,driver's side,rear	√	√	√	√	√	
RR1/RR2/RR3	Body	SMBFH Seat module,passenger's side,rear	√	√	√	√	√	
RR1/RR2/RR3	Body	SDARS Satellite tuner	√	√	√	√	√	
RR1/RR2/RR3	Body	SHZH Independent/auxiliary heater	√	√	√	√	√	
RR1/RR2/RR3	Body	SVS Language processing system	√	√	√	√	√	
RR1/RR2/RR3	Body	SZL Switch centre, steering column	√	√	√	√	√	
RR1/RR2/RR3	Body	SEC2 Supplementary control unit 2	√	√	√	√	√	
RR1/RR2/RR3	Body	IBOC Digital tuner US	√	√	√	√	√	
RR1/RR2/RR3	Body	TEL Telephone interface	√	√	√	√	√	
RR1/RR2/RR3	Body	TEL Telephone(USA)	√	√	√	√	√	
RR1/RR2/RR3	Body	TCU Telematic Control Unit	√	√	√	√	√	
RR1/RR2/RR3	Body	TMBFT Door module,passenger door	√	√	√	√	√	
RR1/RR2/RR3	Body	TMBFH Door module,passenger's side, rear	√	√	√	√	√	
RR1/RR2/RR3	Body	TMFAT Door module,driver's door	√	√	√	√	√	
RR1/RR2/RR3	Body	TMFAH Door module,driver's side, rear	√	√	√	√	√	
RR1/RR2/RR3	Body	VM Video Module	√	√	√	√	√	
RR1/RR2/RR3	Body	WIM Wiper module	√	√	√	√	√	
RR1/RR2/RR3	Body	ZBM Two-battery management	√	√	√	√	√	
RR1/RR2/RR3	Body	ZGM Central Gateway Module	√	√	√	√	√	
RR1/RR2/RR3	Body	SIM Safety and Information Module	√	√	√	√	√	
RR1/RR2/RR3	Body	SGM-ZGM Safety and Gateway Module(ZGM)	√	√	√	√	√	

RR1/RR2/RR3	Body	SGM-SIM Safety and Gateway Module(SIM)	√	√	√	√	√	
RR1/RR2/RR3	Body	MOST system analysis	√	√	√	√	√	
RR1/RR2/RR3	Body	CAN communication analysis	√	√	√	√	√	
RR4/RR5	Drive	CAS Car Access System	√	√	√	√	√	
RR4/RR5	Drive	DDE Diesel Electronics	√	√	√	√	√	
RR4/RR5	Drive	DME Digital Motor Electronics	√	√	√	√	√	
RR4/RR5	Drive	DME Digital Motor Electronics 2	√	√	√	√	√	
RR4/RR5	Drive	EGS transmission management	√	√	√	√	√	
RR4/RR5	Drive	EKPS Fuel-pump control	√	√	√	√	√	
RR4/RR5	Drive	GWS Gear selector switch	√	√	√	√	√	
RR4/RR5	Chassis	AL active steering	√	√	√	√	√	
RR4/RR5	Chassis	DSC Dynamic Stability Control	√	√	√	√	√	
RR4/RR5	Chassis	EDCSHL Damper satellite, rear left	√	√	√	√	√	
RR4/RR5	Chassis	EDCSHR Damper satellite, rear right	√	√	√	√	√	
RR4/RR5	Chassis	EDCSVL Damper satellite, front left	√	√	√	√	√	
RR4/RR5	Chassis	EDCSVR Damper satellite, front right	√	√	√	√	√	
RR4/RR5	Chassis	EHC Electronic Ride-Height Control	√	√	√	√	√	
RR4/RR5	Chassis	EMF Parking brake	√	√	√	√	√	
RR4/RR5	Chassis	ICM Integrated Chassis Management	√	√	√	√	√	
RR4/RR5	Chassis	VDM Vertical Dynamics Management	√	√	√	√	√	
RR4/RR5	Chassis	VDM2 Vertical dynamics management	√	√	√	√	√	
RR4/RR5	Body	ACC Active Cruise Control	√	√	√	√	√	
RR4/RR5	Body	ACSM Crash Safety Module	√	√	√	√	√	
RR4/RR5	Body	AHM Trailer module	√	√	√	√	√	
RR4/RR5	Body	AMPT Top Hi-Fi amplifier	√	√	√	√	√	
RR4/RR5	Body	CBX-ECALL Combox emergency call	√	√	√	√	√	
RR4/RR5	Body	CBX-MEDIA Combox Multimedia	√	√	√	√	√	
RR4/RR5	Body	CIC Car Information Computer	√	√	√	√	√	
RR4/RR5	Body	CID Central Information Display	√	√	√	√	√	
RR4/RR5	Body	CON Controller	√	√	√	√	√	
RR4/RR5	Body	DVDC DVD Changer	√	√	√	√	√	
RR4/RR5	Body	EMALI Electric-motor reel, left	√	√	√	√	√	
RR4/RR5	Body	EMARE Electric-motor reel, right	√	√	√	√	√	
RR4/RR5	Body	EME Electric machine electronics	√	√	√	√	√	
RR4/RR5	Body	EME2 Electrical machine electronics	√	√	√	√	√	
RR4/RR5	Body	FCON Rear compartment controller	√	√	√	√	√	

RR4/RR5	Body	FD Rear-compartment display	√	√	√	√	√	
RR4/RR5	Body	FD2 Rear-compartment display 2	√	√	√	√	√	
RR4/RR5	Body	FKA Rear heater/air conditioning	√	√	√	√	√	
RR4/RR5	Body	FLA High Beam Assist	√	√	√	√	√	
RR4/RR5	Body	FRM Footwell module	√	√	√	√	√	
RR4/RR5	Body	FZD Function centre,roof	√	√	√	√	√	
RR4/RR5	Body	GZAL Targeted illumination,left	√	√	√	√	√	
RR4/RR5	Body	GZAR Targeted illumination,right	√	√	√	√	√	
RR4/RR5	Body	HKA Rear-cabin automatic A/C	√	√	√	√	√	
RR4/RR5	Body	HKL Rear-lid lift	√	√	√	√	√	
RR4/RR5	Body	HSR Rear-axle slip-angle control	√	√	√	√	√	
RR4/RR5	Body	HUD Head-Up Display	√	√	√	√	√	
RR4/RR5	Body	IHKA Integrated automatic heating/air conditioning	√	√	√	√	√	
RR4/RR5	Body	JBE Junction-box electronics	√	√	√	√	√	
RR4/RR5	Body	KAFAS Camera-based driver-assistance systems	√	√	√	√	√	
RR4/RR5	Body	INSTR Instrument cluster	√	√	√	√	√	
RR4/RR5	Body	LHML LED main light module,left	√	√	√	√	√	
RR4/RR5	Body	LHMR LED main light module,right	√	√	√	√	√	
RR4/RR5	Body	NVE Night Vision Electronics	√	√	√	√	√	
RR4/RR5	Body	PDC Park Distance Control	√	√	√	√	√	
RR4/RR5	Body	RAD Radio	√	√	√	√	√	
RR4/RR5	Body	RDC Tyre pressure control	√	√	√	√	√	
RR4/RR5	Body	RSE Rear Seat Entertainment	√	√	√	√	√	
RR4/RR5	Body	SDARS Satellite tuner	√	√	√	√	√	
RR4/RR5	Body	SMBF Seat module,passenger	√	√	√	√	√	
RR4/RR5	Body	SMBFH Seat module,passenger's side,rear	√	√	√	√	√	
RR4/RR5	Body	SME Accumulator-management electronics	√	√	√	√	√	
RR4/RR5	Body	SMFA Seat module,driver	√	√	√	√	√	
RR4/RR5	Body	SMFAH Seat module,driver's side,rear	√	√	√	√	√	
RR4/RR5	Body	SVT Servotronic	√	√	√	√	√	
RR4/RR5	Body	SWW Lane change warning	√	√	√	√	√	
RR4/RR5	Body	SZL Switch centre, steering column	√	√	√	√	√	
RR4/RR5	Body	STML Headlight driver module,left	√	√	√	√	√	
RR4/RR5	Body	STMR Headlight driver module,right	√	√	√	√	√	
RR4/RR5	Body	TR SVC allround-view camera	√	√	√	√	√	
RR4/RR5	Body	TBX Touchbox	√	√	√	√	√	

RR4/RR5	Body	ULF-SBX Interface box	√	√	√	√	√	
RR4/RR5	Body	ULF-SBX-H Interface box high	√	√	√	√	√	
RR4/RR5	Body	VM Video Module	√	√	√	√	√	
RR4/RR5	Body	VSW video switch	√	√	√	√	√	
RR4/RR5	Body	VTG Transfer case	√	√	√	√	√	
RR4/RR5	Body	ZGM Central Gateway Control Module	√	√	√	√	√	
RR4/RR5	Body	SDARS Satellite tuner	√	√	√	√	√	

XTOOL