



Shenzhen Xtooltech Co., Ltd

Abarth Function List V11.40

Tips and Instructions:

The programming function only supports H6PRO, H6PRO Master Edition products.

* This feature is new.

✓ This feature is supported.

This feature is not supported.

※ This feature is partially supported.

| Vehicle | Model | Year/model | System | Read ECU Information | Read Trouble Code | Clear Trouble Code | Live Data | Actuation Test | Special Functions |
|---------|--------|------------|---|----------------------|-------------------|--------------------|-----------|----------------|-------------------|
| ABARTH | SPIDER | 2020 | PCM (Powertrain Control Module) | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | SPIDER | 2020 | TCM (Transmission Control Module) | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | SPIDER | 2020 | ABS (Anti-Lock Braking System) | | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | SPIDER | 2020 | IC (Instrument Cluster) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2020 | BCM (Body Control Module) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2020 | EPS (Electric Power Steering) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2020 | RFH (Radio Frequency Hub) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2020 | AFLS (Adaptive Front Lighting System) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2020 | SRS (Supplemental Inflatable Restraint System, ORC) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2020 | ETM (Entertainment Telematic Module) | | ✓ | ✓ | | | |
| ABARTH | SPIDER | 2020 | AMP (Amplifier) | | ✓ | ✓ | | | |
| ABARTH | SPIDER | 2020 | Lighting Power Module(LSM) | | ✓ | ✓ | | | |
| ABARTH | SPIDER | 2020 | HVAC (Heat, Ventilation And A/C) | | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | SPIDER | 2020 | BSM (Blind Spot Module) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2019 | PCM (Powertrain Control Module) | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | SPIDER | 2019 | TCM (Transmission Control Module) | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | SPIDER | 2019 | ABS (Anti-Lock Braking System) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2019 | IC (Instrument Cluster) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2019 | BCM (Body Control Module) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2019 | EPS (Electric Power Steering) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2019 | RFH (Radio Frequency Hub) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2019 | AFLS (Adaptive Front Lighting System) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2019 | SRS (Supplemental Inflatable Restraint System, ORC) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2019 | ETM (Entertainment Telematic Module) | | ✓ | ✓ | | | |
| ABARTH | SPIDER | 2019 | AMP (Amplifier) | | ✓ | ✓ | | | |
| ABARTH | SPIDER | 2019 | Lighting Power Module(LSM) | | ✓ | ✓ | | | |
| ABARTH | SPIDER | 2019 | HVAC (Heat, Ventilation And A/C) | | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | SPIDER | 2019 | BSM (Blind Spot Module) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2018 | PCM (Powertrain Control Module) | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | SPIDER | 2018 | TCM (Transmission Control Module) | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | SPIDER | 2018 | ABS (Anti-Lock Braking System) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2018 | IC (Instrument Cluster) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2018 | BCM (Body Control Module) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2018 | EPS (Electric Power Steering) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2018 | RFH (Radio Frequency Hub) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2018 | AFLS (Adaptive Front Lighting System) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2018 | SRS (Supplemental Inflatable Restraint System, ORC) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2018 | ETM (Entertainment Telematic Module) | | ✓ | ✓ | | | |
| ABARTH | SPIDER | 2018 | AMP (Amplifier) | | ✓ | ✓ | | | |
| ABARTH | SPIDER | 2018 | Lighting Power Module(LSM) | | ✓ | ✓ | | | |
| ABARTH | SPIDER | 2018 | HVAC (Heat, Ventilation And A/C) | | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | SPIDER | 2018 | BSM (Blind Spot Module) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2017 | PCM (Powertrain Control Module) | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | SPIDER | 2017 | TCM (Transmission Control Module) | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | SPIDER | 2017 | ABS (Anti-Lock Braking System) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2017 | IC (Instrument Cluster) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2017 | BCM (Body Control Module) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2017 | EPS (Electric Power Steering) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2017 | RFH (Radio Frequency Hub) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2017 | AFLS (Adaptive Front Lighting System) | | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2017 | SRS (Supplemental Inflatable Restraint System, ORC) | | ✓ | ✓ | ✓ | | |

| | | | | | | | | | | |
|--------|---------------------|----------------------|---|---|---|---|---|---|---|--|
| ABARTH | SPIDER | 2017 | ETM (Entertainment Telematic Module) | | ✓ | ✓ | | | | |
| ABARTH | SPIDER | 2017 | AMP (Amplifier) | | ✓ | ✓ | | | | |
| ABARTH | SPIDER | 2017 | Lighting Power Module(LSM) | | ✓ | ✓ | | | | |
| ABARTH | SPIDER | 2017 | HVAC (Heat, Ventilation And A/C) | | ✓ | ✓ | ✓ | ✓ | | |
| ABARTH | SPIDER | 2017 | BSM (Blind Spot Module) | | ✓ | ✓ | ✓ | ✓ | | |
| ABARTH | 500 | 1.4 TURBO 16V | Bosch Motronic Injection Me7.9.10 CF5/E0BD (EP Eng. 1.4) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | 500 | 1.4 TURBO 16V | Marelli SELESPEED CFC319 Automatic Gearbox (EP) | ✓ | ✓ | ✓ | ✓ | ✓ | | |
| ABARTH | 500 | 1.4 TURBO 16V | Marelli Cluster (EP) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | 500 | 1.4 TURBO 16V | MARELLI Instrument Panel (EP) 2 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | 500 | 1.4 TURBO 16V | Marelli/Microsoft C3 (EP) Convergence | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | 500 | 1.4 TURBO 16V | Marelli/Microsoft Convergence (EP) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | 500 | 1.4 TURBO 16V | Bosch ABS 8 ESP (EP) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | 500 | 1.4 TURBO 16V | CONTINENTAL Airbag (EP) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | 500 | 1.4 TURBO 16V | Delphi Body Computer (EP) 2 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | 500 | 1.4 TURBO 16V | SIEMENS Airbag (EP - Proxi) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | 500 | 1.4 TURBO 16V | DELPHI (EP) 2 Power Steering | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | 500 | 1.4 TURBO 16V | Denso Single - Zone Climate Control (EP) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | 500 | 1.4 TURBO 16V | Litronic Discharge Headlamp (Left) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | 500 | 1.4 TURBO 16V | Litronic Discharge Headlamp (Right) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | 500 | 1.4 TURBO 16V | VALEO Parking Control Unit (EP) 2 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | Grande PUNTO | 1.4 TURBO 16V | Bosch Motronic Injection Me7.9.10 CF5/E0BD (EP Eng. 1.4) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | Grande PUNTO | 1.4 TURBO 16V | Marelli Cluster (EP) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | Grande PUNTO | 1.4 TURBO 16V | Marelli Instrument Cluster (EP) 3 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | Grande PUNTO | 1.4 TURBO 16V | Marelli/Microsoft C3 (EP) Convergence | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | Grande PUNTO | 1.4 TURBO 16V | Marelli/Microsoft Convergence (EP) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | Grande PUNTO | 1.4 TURBO 16V | Bosch ABS 8 ESP (EP) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | Grande PUNTO | 1.4 TURBO 16V | Bosch ABS 8 ESP (EP) 2 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | Grande PUNTO | 1.4 TURBO 16V | Continental Airbag (EP-Proxy) 2 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | Grande PUNTO | 1.4 TURBO 16V | Delphi (EP) 3 Body Computer | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | Grande PUNTO | 1.4 TURBO 16V | TRW Airbag (EP - Proxi) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | Grande PUNTO | 1.4 TURBO 16V | Delphi Body Computer (EP) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | Grande PUNTO | 1.4 TURBO 16V | Delphi Body Computer (EP) 4 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | Grande PUNTO | 1.4 TURBO 16V | DELPHI (EP) 2 Power Steering | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | Grande PUNTO | 1.4 TURBO 16V | Delphi (EP) 3 Electric Steering | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | Grande PUNTO | 1.4 TURBO 16V | Denso Climate Control (EP) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | Grande PUNTO | 1.4 TURBO 16V | Denso Heater (EP) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | Grande PUNTO | 1.4 TURBO 16V | Trw Tyre Pressure Control (EP) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | Grande PUNTO | 1.4 TURBO 16V | VALEO Parking Control Unit (EP) 2 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | PUNTO EVO (199) | 1.4 TURBO 16V M. AIR | Magneti Marelli Injection IAW 8GMF CF5/E0BD (EP Eng. 1.4) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | PUNTO EVO (199) | 1.4 TURBO 16V M. AIR | Lauberhorn Convergence (EP) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | PUNTO EVO (199) | 1.4 TURBO 16V M. AIR | Marelli Instrument Cluster (EP) 3 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | PUNTO EVO (199) | 1.4 TURBO 16V M. AIR | Marelli/Microsoft C3 (EP) Convergence | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | PUNTO EVO (199) | 1.4 TURBO 16V M. AIR | Marelli/Microsoft Convergence (EP) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | PUNTO EVO (199) | 1.4 TURBO 16V M. AIR | Bosch ABS 8 ESP (EP) 2 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | PUNTO EVO (199) | 1.4 TURBO 16V M. AIR | CONTINENTAL Airbag (EP) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | PUNTO EVO (199) | 1.4 TURBO 16V M. AIR | Delphi Body Computer (EP) 4 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | PUNTO EVO (199) | 1.4 TURBO 16V M. AIR | Delphi (EP) 3 Electric Steering | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | PUNTO EVO (199) | 1.4 TURBO 16V M. AIR | Denso 2 Single - Zone Climate Control (EP) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | PUNTO EVO (199) | 1.4 TURBO 16V M. AIR | Denso Heater (EP) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | PUNTO EVO (199) | 1.4 TURBO 16V M. AIR | Trw Tyre Pressure Control (EP) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | PUNTO EVO (199) | 1.4 TURBO 16V M. AIR | VALEO Parking Control Unit (EP) 2 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | CINQUECENTO/500/595 | A11 | ECM (Engine Control Module) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | sp02848, sp02849, sp02850, sp02851, sp02852, sp02853, sp02854, sp02855, sp02856, sp02857 |
| ABARTH | CINQUECENTO/500/595 | A11 | TCM (Transmission Control Module) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | sp02858, sp02859, sp02860, sp02861 |
| ABARTH | CINQUECENTO/500/595 | A11 | ABS (Anti-Lock Braking System) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | sp02862 |
| ABARTH | CINQUECENTO/500/595 | A11 | SRS (Supplemental Inflatable Restraint System, ORC) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| ABARTH | CINQUECENTO/500/595 | A11 | PAM (Parking Assistant Module) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | sp02863, sp02864 |
| ABARTH | CINQUECENTO/500/595 | A11 | IC (Instrument Cluster) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | sp02865, sp02866, sp02867, sp02868, sp02869 |
| ABARTH | CINQUECENTO/500/595 | A11 | HVAC (Heating Ventilation Air-Conditioning And Cooling) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | sp02870 |
| ABARTH | CINQUECENTO/500/595 | A11 | ETM (Entertainment Telematic Module) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | sp02871 |
| ABARTH | CINQUECENTO/500/595 | A11 | EPS (Electric Power Steering) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | sp02872 |
| ABARTH | CINQUECENTO/500/595 | A11 | CTM (Convergence Telematic Module) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | sp02873 |
| ABARTH | CINQUECENTO/500/595 | A11 | BCM (Body Control Module) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | sp02874 |
| ABARTH | CINQUECENTO/500/595 | A11 | AHM (Additional Heater Module) | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |

Special Functions List

| No. | Functions Name | System Name |
|---------|---|---|
| SP00001 | Reset Accelerator Pedal Adaptives | PCM (Powertrain Control Module) |
| SP00002 | Brake Switch Learn | PCM (Powertrain Control Module) |
| SP00003 | Clutch Pedal Learn | PCM (Powertrain Control Module) |
| SP00004 | Air-Conditioning Self Learning | PCM (Powertrain Control Module) |
| SP00005 | Throttle Body Self Learning | PCM (Powertrain Control Module) |
| SP00006 | Reset ECU | PCM (Powertrain Control Module) |
| SP00007 | Reset Learn Flag Wheel Tooth | PCM (Powertrain Control Module) |
| SP00008 | Differential Pressure Sensor Replac. | PCM (Powertrain Control Module) |
| SP00009 | ECU Replacement With Value Transfer | TCM (Transmission Control Module) |
| SP00010 | Bleed Hydraulic Circuit | TCM (Transmission Control Module) |
| SP00011 | Hydraulic Circuit Depressurization | TCM (Transmission Control Module) |
| SP00012 | Learn Clutches Contact Point | TCM (Transmission Control Module) |
| SP00013 | Quick Learn | TCM (Transmission Control Module) |
| SP00014 | ABS Static Test | ABS (Anti-Lock Braking System) |
| SP00015 | Longitudinal G-Sensor Calibration Test | ABS (Anti-Lock Braking System) |
| SP00016 | Clear TPM Warnings | TPMS (Tire Pressure Monitoring System) |
| SP00017 | Clear TPM Sensor Rolls Test Results | TPMS (Tire Pressure Monitoring System) |
| SP00018 | TPM FGA Proxi Configuration | TPMS (Tire Pressure Monitoring System) |
| SP00019 | Update Front And Rear Axle Nominal Tire Pressure Values | TPMS (Tire Pressure Monitoring System) |
| SP00020 | Program Left Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00021 | Program Left Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00022 | Program Right Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00023 | Program Right Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00024 | TPM Sensor Rolls Test | TPMS (Tire Pressure Monitoring System) |
| SP00025 | RADIO Proxi Configuration | RADIO (RADIO) |
| SP00026 | IPC Enable Seatbelt Minder Chime | IC (Instrument Cluster) |
| SP00027 | Reset Service Information | IC (Instrument Cluster) |
| SP00028 | IPC Disable Seatbelt Minder Chime | IC (Instrument Cluster) |
| SP00029 | IPC Replacement | IC (Instrument Cluster) |
| SP00030 | Self Learning Motor Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP00031 | Clear Steering Pull Compensation | EPS (Electric Power Steering) |

| | | |
|---------|---|---|
| SP00032 | Initialize EPS | EPS (Electric Power Steering) |
| SP00033 | CTM Proxi Configuration | CTM (Convergence Telematic Module) |
| SP00034 | Exit Shipping Mode | BCM (Body Control Module) |
| SP00035 | ECU Replacement With Value Transfer | TCM (Transmission Control Module) |
| SP00036 | Bleed Hydraulic Circuit | TCM (Transmission Control Module) |
| SP00037 | Hydraulic Circuit Depressurization | TCM (Transmission Control Module) |
| SP00038 | Learn Clutches Contact Point | TCM (Transmission Control Module) |
| SP00039 | Quick Learn | TCM (Transmission Control Module) |
| SP00040 | ABS Static Test | ABS (Anti-Lock Braking System) |
| SP00041 | Longitudinal G-Sensor Calibration Test | ABS (Anti-Lock Braking System) |
| SP00042 | Clear TPM Warnings | TPMS (Tire Pressure Monitoring System) |
| SP00043 | Clear TPM Sensor Rolls Test Results | TPMS (Tire Pressure Monitoring System) |
| SP00044 | TPM FGA Proxi Configuration | TPMS (Tire Pressure Monitoring System) |
| SP00045 | Update Front And Rear Axle Nominal Tire Pressure Values | TPMS (Tire Pressure Monitoring System) |
| SP00046 | Program Left Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00047 | Program Left Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00048 | Program Right Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00049 | Program Right Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00050 | TPM Sensor Rolls Test | TPMS (Tire Pressure Monitoring System) |
| SP00051 | RADIO Proxi Configuration | RADIO (RADIO) |
| SP00052 | IPC Enable Seatbelt Minder Chime | IC (Instrument Cluster) |
| SP00053 | Reset Service Information | IC (Instrument Cluster) |
| SP00054 | IPC Disable Seatbelt Minder Chime | IC (Instrument Cluster) |
| SP00055 | IPC Replacement | IC (Instrument Cluster) |
| SP00056 | Self Learning Motor Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP00057 | Clear Steering Pull Compensation | EPS (Electric Power Steering) |
| SP00058 | Initialize EPS | EPS (Electric Power Steering) |
| SP00059 | CTM Proxi Configuration | CTM (Convergence Telematic Module) |
| SP00060 | Exit Shipping Mode | BCM (Body Control Module) |
| SP00061 | Reset Accelerator Pedal Adaptives | PCM (Powertrain Control Module) |
| SP00062 | Brake Switch Learn | PCM (Powertrain Control Module) |
| SP00063 | Clutch Pedal Learn | PCM (Powertrain Control Module) |
| SP00064 | Check PCM Odometer | PCM (Powertrain Control Module) |
| SP00065 | Emissions Rolls Test Mode | PCM (Powertrain Control Module) |
| SP00066 | Clear Misfire TLC | PCM (Powertrain Control Module) |

| | | |
|---------|---|---|
| SP00067 | Air-Conditioning Self Learning | PCM (Powertrain Control Module) |
| SP00068 | Throttle Body Self Learning | PCM (Powertrain Control Module) |
| SP00069 | Reset ECU | PCM (Powertrain Control Module) |
| SP00070 | Reset Memory | PCM (Powertrain Control Module) |
| SP00071 | ECU Replacement With Value Transfer | TCM (Transmission Control Module) |
| SP00072 | Bleed Hydraulic Circuit | TCM (Transmission Control Module) |
| SP00073 | Hydraulic Circuit Depressurization | TCM (Transmission Control Module) |
| SP00074 | Learn Clutches Contact Point | TCM (Transmission Control Module) |
| SP00075 | Quick Learn | TCM (Transmission Control Module) |
| SP00076 | ABS Static Test | ABS (Anti-Lock Braking System) |
| SP00077 | Longitudinal G-Sensor Calibration Test | ABS (Anti-Lock Braking System) |
| SP00078 | Clear TPM Warnings | TPMS (Tire Pressure Monitoring System) |
| SP00079 | Clear TPM Sensor Rolls Test Results | TPMS (Tire Pressure Monitoring System) |
| SP00080 | TPM FGA Proxi Configuration | TPMS (Tire Pressure Monitoring System) |
| SP00081 | Update Front And Rear Axle Nominal Tire Pressure Values | TPMS (Tire Pressure Monitoring System) |
| SP00082 | Program Left Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00083 | Program Left Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00084 | Program Right Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00085 | Program Right Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00086 | TPM Sensor Rolls Test | TPMS (Tire Pressure Monitoring System) |
| SP00087 | RADIO Proxi Configuration | RADIO (RADIO) |
| SP00088 | IPC Enable Seatbelt Minder Chime | IC (Instrument Cluster) |
| SP00089 | Reset Service Information | IC (Instrument Cluster) |
| SP00090 | IPC Disable Seatbelt Minder Chime | IC (Instrument Cluster) |
| SP00091 | IPC Replacement | IC (Instrument Cluster) |
| SP00092 | Self Learning Motor Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP00093 | Clear Steering Pull Compensation | EPS (Electric Power Steering) |
| SP00094 | Initialize EPS | EPS (Electric Power Steering) |
| SP00095 | CTM Proxi Configuration | CTM (Convergence Telematic Module) |
| SP00096 | Exit Shipping Mode | BCM (Body Control Module) |
| SP00097 | Reset Accelerator Pedal Adaptives | PCM (Powertrain Control Module) |
| SP00098 | Brake Switch Learn | PCM (Powertrain Control Module) |
| SP00099 | Clutch Pedal Learn | PCM (Powertrain Control Module) |
| SP00100 | Check PCM Odometer | PCM (Powertrain Control Module) |
| SP00101 | Emissions Rolls Test Mode | PCM (Powertrain Control Module) |

| | | |
|---------|---|---|
| SP00102 | Clear Misfire TLC | PCM (Powertrain Control Module) |
| SP00103 | Air-Conditioning Self Learning | PCM (Powertrain Control Module) |
| SP00104 | Throttle Body Self Learning | PCM (Powertrain Control Module) |
| SP00105 | Reset ECU | PCM (Powertrain Control Module) |
| SP00106 | Reset Memory | PCM (Powertrain Control Module) |
| SP00107 | ECU Replacement With Value Transfer | TCM (Transmission Control Module) |
| SP00108 | Bleed Hydraulic Circuit | TCM (Transmission Control Module) |
| SP00109 | Hydraulic Circuit Depressurization | TCM (Transmission Control Module) |
| SP00110 | Learn Clutches Contact Point | TCM (Transmission Control Module) |
| SP00111 | Quick Learn | TCM (Transmission Control Module) |
| SP00112 | ABS Static Test | ABS (Anti-Lock Braking System) |
| SP00113 | Longitudinal G-Sensor Calibration Test | ABS (Anti-Lock Braking System) |
| SP00114 | Clear TPM Warnings | TPMS (Tire Pressure Monitoring System) |
| SP00115 | Clear TPM Sensor Rolls Test Results | TPMS (Tire Pressure Monitoring System) |
| SP00116 | TPM FGA Proxi Configuration | TPMS (Tire Pressure Monitoring System) |
| SP00117 | Update Front And Rear Axle Nominal Tire Pressure Values | TPMS (Tire Pressure Monitoring System) |
| SP00118 | Program Left Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00119 | Program Left Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00120 | Program Right Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00121 | Program Right Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00122 | TPM Sensor Rolls Test | TPMS (Tire Pressure Monitoring System) |
| SP00123 | RADIO Proxi Configuration | RADIO (RADIO) |
| SP00124 | IPC Enable Seatbelt Minder Chime | IC (Instrument Cluster) |
| SP00125 | Reset Service Information | IC (Instrument Cluster) |
| SP00126 | IPC Disable Seatbelt Minder Chime | IC (Instrument Cluster) |
| SP00127 | IPC Replacement | IC (Instrument Cluster) |
| SP00128 | Self Learning Motor Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP00129 | Clear Steering Pull Compensation | EPS (Electric Power Steering) |
| SP00130 | Initialize EPS | EPS (Electric Power Steering) |
| SP00131 | CTM Proxi Configuration | CTM (Convergence Telematic Module) |
| SP00132 | Exit Shipping Mode | BCM (Body Control Module) |
| SP00133 | Air-Conditioning Self Learning | ECM (Engine Control Module) |
| SP00134 | Brake Switch Learn | ECM (Engine Control Module) |
| SP00135 | Check PCM Odometer | ECM (Engine Control Module) |
| SP00136 | Clear Misfire TLC | ECM (Engine Control Module) |

| | | |
|---------|---|--|
| SP00137 | Reset Accelerator Pedal Adaptives | ECM (Engine Control Module) |
| SP00138 | Reset Memory | ECM (Engine Control Module) |
| SP00139 | Throttle Body Self Learning | ECM (Engine Control Module) |
| SP00140 | Reset Gear Configuration | ABS (Anti-Lock Braking System) |
| SP00141 | Longitudinal And Lateral Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP00142 | Pressure Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP00143 | Clear TPM Warnings | TPMS (Tire Pressure Monitoring System) |
| SP00144 | Clear TPM Sensor Rolls Test Results | TPMS (Tire Pressure Monitoring System) |
| SP00145 | TPM FGA Proxi Configuration | TPMS (Tire Pressure Monitoring System) |
| SP00146 | Update Front And Rear Axle Nominal Tire Pressure Values | TPMS (Tire Pressure Monitoring System) |
| SP00147 | Program Left Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00148 | Program Left Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00149 | Program Right Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00150 | Program Right Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00151 | TPM Sensor Rolls Test | TPMS (Tire Pressure Monitoring System) |
| SP00152 | Trailer Hook Presence Disabling | PAM (Parking Assistant Module) |
| SP00153 | Trailer Hook Presence Enabling | PAM (Parking Assistant Module) |
| SP00154 | Reset Odometer | IC (Instrument Cluster) |
| SP00155 | Reset Service Information | IC (Instrument Cluster) |
| SP00156 | Disable Seat Belts Reminder | IC (Instrument Cluster) |
| SP00157 | Enable Seat Belts Reminder | IC (Instrument Cluster) |
| SP00158 | Last Service Date | IC (Instrument Cluster) |
| SP00159 | Power Down | ETM (Entertainment Telematic Module) |
| SP00160 | Power On And Disable User Inputs | ETM (Entertainment Telematic Module) |
| SP00161 | Audio Video Signal Detection | ETM (Entertainment Telematic Module) |
| SP00162 | Steering Angle Sensor | EPS (Electric Power Steering) |
| SP00163 | Air-Conditioning Self Learning | ECM (Engine Control Module) |
| SP00164 | Brake Switch Learn | ECM (Engine Control Module) |
| SP00165 | Check PCM Odometer | ECM (Engine Control Module) |
| SP00166 | Clear Misfire TLC | ECM (Engine Control Module) |
| SP00167 | Reset Accelerator Pedal Adaptives | ECM (Engine Control Module) |
| SP00168 | Reset Memory | ECM (Engine Control Module) |
| SP00169 | Throttle Body Self Learning | ECM (Engine Control Module) |
| SP00170 | Reset Gear Configuration | ABS (Anti-Lock Braking System) |
| SP00171 | Longitudinal And Lateral Sensor Calibration | ABS (Anti-Lock Braking System) |

| | | |
|---------|---|--|
| SP00172 | Pressure Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP00173 | Clear TPM Warnings | TPMS (Tire Pressure Monitoring System) |
| SP00174 | Clear TPM Sensor Rolls Test Results | TPMS (Tire Pressure Monitoring System) |
| SP00175 | TPM FGA Proxi Configuration | TPMS (Tire Pressure Monitoring System) |
| SP00176 | Update Front And Rear Axle Nominal Tire Pressure Values | TPMS (Tire Pressure Monitoring System) |
| SP00177 | Program Left Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00178 | Program Left Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00179 | Program Right Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00180 | Program Right Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00181 | TPM Sensor Rolls Test | TPMS (Tire Pressure Monitoring System) |
| SP00182 | Trailer Hook Presence Disabling | PAM (Parking Assistant Module) |
| SP00183 | Trailer Hook Presence Enabling | PAM (Parking Assistant Module) |
| SP00184 | Reset Odometer | IC (Instrument Cluster) |
| SP00185 | Reset Service Information | IC (Instrument Cluster) |
| SP00186 | Disable Seat Belts Reminder | IC (Instrument Cluster) |
| SP00187 | Enable Seat Belts Reminder | IC (Instrument Cluster) |
| SP00188 | Last Service Date | IC (Instrument Cluster) |
| SP00189 | Power Down | ETM (Entertainment Telematic Module) |
| SP00190 | Power On And Disable User Inputs | ETM (Entertainment Telematic Module) |
| SP00191 | Audio Video Signal Detection | ETM (Entertainment Telematic Module) |
| SP00192 | Steering Angle Sensor | EPS (Electric Power Steering) |
| SP00193 | Reset Gear Configuration | ABS (Anti-Lock Braking System) |
| SP00194 | Longitudinal And Lateral Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP00195 | Pressure Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP00196 | Clear TPM Warnings | TPMS (Tire Pressure Monitoring System) |
| SP00197 | Clear TPM Sensor Rolls Test Results | TPMS (Tire Pressure Monitoring System) |
| SP00198 | TPM FGA Proxi Configuration | TPMS (Tire Pressure Monitoring System) |
| SP00199 | Update Front And Rear Axle Nominal Tire Pressure Values | TPMS (Tire Pressure Monitoring System) |
| SP00200 | Program Left Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00201 | Program Left Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00202 | Program Right Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00203 | Program Right Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00204 | TPM Sensor Rolls Test | TPMS (Tire Pressure Monitoring System) |
| SP00205 | Trailer Hook Presence Disabling | PAM (Parking Aid Module) |
| SP00206 | Trailer Hook Presence Enabling | PAM (Parking Aid Module) |

| | | |
|---------|---|--|
| SP00207 | Reset Odometer | IC (Instrument Cluster) |
| SP00208 | Reset Service Information | IC (Instrument Cluster) |
| SP00209 | Disable Seat Belts Reminder | IC (Instrument Cluster) |
| SP00210 | Enable Seat Belts Reminder | IC (Instrument Cluster) |
| SP00211 | Last Service Date | IC (Instrument Cluster) |
| SP00212 | Power Down | ETM (Entertainment Telematic Module) |
| SP00213 | Power On And Disable User Inputs | ETM (Entertainment Telematic Module) |
| SP00214 | Audio Video Signal Detection | ETM (Entertainment Telematic Module) |
| SP00215 | Steering Angle Sensor | EPS (Electric Power Steering) |
| SP00216 | Deactivation Of The Power Limitation Function | ECM (Engine Control Module) |
| SP00217 | Phonic Wheel Replacement | ECM (Engine Control Module) |
| SP00218 | Motorised Throttle Replacement | ECM (Engine Control Module) |
| SP00219 | Supercharging System Components Replacement | ECM (Engine Control Module) |
| SP00220 | Neutral Signal Learn | ECM (Engine Control Module) |
| SP00221 | Intake Manifold Replacement | ECM (Engine Control Module) |
| SP00222 | Clutch Group And/Or Clutch Potentiometer Replacement | ECM (Engine Control Module) |
| SP00223 | Clutch Pedal Learning | ECM (Engine Control Module) |
| SP00224 | Neutral Signal Learn | ECM (Engine Control Module) |
| SP00225 | Self-Learnt Functions Reset | ECM (Engine Control Module) |
| SP00226 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP00227 | Tunnel Lever Replacement | TCM (Transmission Control Module) |
| SP00228 | Levers At Wheel Replacement | TCM (Transmission Control Module) |
| SP00229 | Pump Relay Replacement | TCM (Transmission Control Module) |
| SP00230 | Self-Learnt Functions Reset | TCM (Transmission Control Module) |
| SP00231 | Reset Gear Configuration | ABS (Anti-Lock Braking System) |
| SP00232 | Longitudinal And Lateral Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP00233 | Pressure Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP00234 | Clear TPM Warnings | TPMS (Tire Pressure Monitoring System) |
| SP00235 | Clear TPM Sensor Rolls Test Results | TPMS (Tire Pressure Monitoring System) |
| SP00236 | TPM FGA Proxi Configuration | TPMS (Tire Pressure Monitoring System) |
| SP00237 | Update Front And Rear Axle Nominal Tire Pressure Values | TPMS (Tire Pressure Monitoring System) |
| SP00238 | Program Left Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00239 | Program Left Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00240 | Program Right Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00241 | Program Right Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |

| | | |
|---------|--|--|
| SP00242 | TPM Sensor Rolls Test | TPMS (Tire Pressure Monitoring System) |
| SP00243 | Trailer Hook Presence Disabling | PAM (Parking Assistant Module) |
| SP00244 | Trailer Hook Presence Enabling | PAM (Parking Assistant Module) |
| SP00245 | Reset Odometer | IC (Instrument Cluster) |
| SP00246 | Reset Service Information | IC (Instrument Cluster) |
| SP00247 | Disable Seat Belts Reminder | IC (Instrument Cluster) |
| SP00248 | Enable Seat Belts Reminder | IC (Instrument Cluster) |
| SP00249 | Last Service Date | IC (Instrument Cluster) |
| SP00250 | Power Down | ETM (Entertainment Telematic Module) |
| SP00251 | Power On And Disable User Inputs | ETM (Entertainment Telematic Module) |
| SP00252 | Audio Video Signal Detection | ETM (Entertainment Telematic Module) |
| SP00253 | Steering Angle Sensor | EPS (Electric Power Steering) |
| SP00254 | Intake Manifold Replacement | ECM (Engine Control Module) |
| SP00255 | Clutch Group And/Or Clutch Potentiometer Replacement | ECM (Engine Control Module) |
| SP00256 | Phonic Wheel Replacement | ECM (Engine Control Module) |
| SP00257 | Intelligent Alternator (IAM) Replacement | ECM (Engine Control Module) |
| SP00258 | Neutral Signal Learn | ECM (Engine Control Module) |
| SP00259 | Fuel Supply System Components Replacement | ECM (Engine Control Module) |
| SP00260 | Motorized Throttle Replacement | ECM (Engine Control Module) |
| SP00261 | Factory VIN code lock | ECM (Engine Control Module) |
| SP00262 | Control Unit Reprogramming | ECM (Engine Control Module) |
| SP00263 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP00264 | Proxi Alignment Procedure | ECM (Engine Control Module) |
| SP00265 | Injector/S Replacement | ECM (Engine Control Module) |
| SP00266 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP00267 | Self-Learnt Functions Reset | ECM (Engine Control Module) |
| SP00268 | Motorized Throttle Self Learning Command | ECM (Engine Control Module) |
| SP00269 | Proxi Alignment Procedure | TCM (Transmission Control Module) |
| SP00270 | ECU Substitution | ABS (Anti-Lock Braking System) |
| SP00271 | Longitudinal And Lateral Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP00272 | Pressure Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP00273 | TPMS Reset Calibration | ABS (Anti-Lock Braking System) |
| SP00274 | Fire Protection System Activate | BCM (Body Control Module) |
| SP00275 | LIN Line Request Check | BCM (Body Control Module) |
| SP00276 | Ultrasonic Sensors Check | BCM (Body Control Module) |

| | | |
|---------|--|---|
| SP00277 | Power Down | RRM (Radio Receiver Module) |
| SP00278 | Power On And Disable User Inputs | RRM (Radio Receiver Module) |
| SP00279 | Reset Parameters To Default | RRM (Radio Receiver Module) |
| SP00280 | Clear TPM Sensor Audit | RFH (Radio Frequency Hub) |
| SP00281 | Clear TPM Sensor Warnings | RFH (Radio Frequency Hub) |
| SP00282 | Trailer Hook Presence Disabling | PAM (Parking Aid Module) |
| SP00283 | Trailer Hook Presence Enabling | PAM (Parking Aid Module) |
| SP00284 | Reset Odometer | IC (Instrument Cluster) |
| SP00285 | Reset Service Information | IC (Instrument Cluster) |
| SP00286 | Last Service Date | IC (Instrument Cluster) |
| SP00287 | Self Learning Motors Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP00288 | Proxi Alignment Procedure | ESM (Electronic Shifter Module) |
| SP00289 | Factory VIN code lock | ESM (Electronic Shifter Module) |
| SP00290 | Steering Angle Sensor | EPS (Electric Power Steering) |
| SP00291 | Factory VIN code lock | DTCM (Drive Train Control Module) |
| SP00292 | Proxi Alignment Procedure | DTCM (Drive Train Control Module) |
| SP00293 | Factory VIN code lock | CSWM (Comfort Seat Wheel Module) |
| SP00294 | Intake Manifold Replacement | ECM (Engine Control Module) |
| SP00295 | Clutch Group And/Or Clutch Potentiometer Replacement | ECM (Engine Control Module) |
| SP00296 | Phonic Wheel Replacement | ECM (Engine Control Module) |
| SP00297 | Intelligent Alternator (IAM) Replacement | ECM (Engine Control Module) |
| SP00298 | Neutral Signal Learn | ECM (Engine Control Module) |
| SP00299 | Fuel Supply System Components Replacement | ECM (Engine Control Module) |
| SP00300 | Motorized Throttle Replacement | ECM (Engine Control Module) |
| SP00301 | Factory VIN code lock | ECM (Engine Control Module) |
| SP00302 | Control Unit Reprogramming | ECM (Engine Control Module) |
| SP00303 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP00304 | Proxi Alignment Procedure | ECM (Engine Control Module) |
| SP00305 | Injector/S Replacement | ECM (Engine Control Module) |
| SP00306 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP00307 | Self-Learnt Functions Reset | ECM (Engine Control Module) |
| SP00308 | Motorized Throttle Self Learning Command | ECM (Engine Control Module) |
| SP00309 | Proxi Alignment Procedure | TCM (Transmission Control Module) |
| SP00310 | ECU Substitution | ABS (Anti-Lock Braking System) |
| SP00311 | Longitudinal And Lateral Sensor Calibration | ABS (Anti-Lock Braking System) |

| | | |
|---------|--|---|
| SP00312 | Pressure Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP00313 | TPMS Reset Calibration | ABS (Anti-Lock Braking System) |
| SP00314 | Fire Protection System Activate | BCM (Body Control Module) |
| SP00315 | LIN Line Request Check | BCM (Body Control Module) |
| SP00316 | Ultrasonic Sensors Check | BCM (Body Control Module) |
| SP00317 | Power Down | RRM (Radio Receiver Module) |
| SP00318 | Power On And Disable User Inputs | RRM (Radio Receiver Module) |
| SP00319 | Reset Parameters To Default | RRM (Radio Receiver Module) |
| SP00320 | Clear TPM Sensor Audit | RFH (Radio Frequency Hub) |
| SP00321 | Clear TPM Sensor Warnings | RFH (Radio Frequency Hub) |
| SP00322 | Trailer Hook Presence Disabling | PAM (Parking Aid Module) |
| SP00323 | Trailer Hook Presence Enabling | PAM (Parking Aid Module) |
| SP00324 | Reset Odometer | IC (Instrument Cluster) |
| SP00325 | Reset Service Information | IC (Instrument Cluster) |
| SP00326 | Last Service Date | IC (Instrument Cluster) |
| SP00327 | Self Learning Motors Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP00328 | Proxi Alignment Procedure | ESM (Electronic Shifter Module) |
| SP00329 | Factory VIN code lock | ESM (Electronic Shifter Module) |
| SP00330 | Steering Angle Sensor | EPS (Electric Power Steering) |
| SP00331 | Factory VIN code lock | DTCM (Drive Train Control Module) |
| SP00332 | Proxi Alignment Procedure | DTCM (Drive Train Control Module) |
| SP00333 | Factory VIN code lock | CSWM (Comfort Seat Wheel Module) |
| SP00334 | Intake Manifold Replacement | ECM (Engine Control Module) |
| SP00335 | Clutch Group And/Or Clutch Potentiometer Replacement | ECM (Engine Control Module) |
| SP00336 | Phonic Wheel Replacement | ECM (Engine Control Module) |
| SP00337 | Intelligent Alternator (IAM) Replacement | ECM (Engine Control Module) |
| SP00338 | Neutral Signal Learn | ECM (Engine Control Module) |
| SP00339 | Fuel Supply System Components Replacement | ECM (Engine Control Module) |
| SP00340 | Motorized Throttle Replacement | ECM (Engine Control Module) |
| SP00341 | Factory VIN code lock | ECM (Engine Control Module) |
| SP00342 | Control Unit Reprogramming | ECM (Engine Control Module) |
| SP00343 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP00344 | Proxi Alignment Procedure | ECM (Engine Control Module) |
| SP00345 | Injector/S Replacement | ECM (Engine Control Module) |
| SP00346 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |

| | | |
|---------|--|---|
| SP00347 | Self-Learnt Functions Reset | ECM (Engine Control Module) |
| SP00348 | Motorized Throttle Self Learning Command | ECM (Engine Control Module) |
| SP00349 | Proxi Alignment Procedure | TCM (Transmission Control Module) |
| SP00350 | ECU Substitution | ABS (Anti-Lock Braking System) |
| SP00351 | Longitudinal And Lateral Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP00352 | Pressure Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP00353 | TPMS Reset Calibration | ABS (Anti-Lock Braking System) |
| SP00354 | Fire Protection System Activate | BCM (Body Control Module) |
| SP00355 | LIN Line Request Check | BCM (Body Control Module) |
| SP00356 | Ultrasonic Sensors Check | BCM (Body Control Module) |
| SP00357 | Power Down | RRM (Radio Receiver Module) |
| SP00358 | Power On And Disable User Inputs | RRM (Radio Receiver Module) |
| SP00359 | Reset Parameters To Default | RRM (Radio Receiver Module) |
| SP00360 | Clear TPM Sensor Audit | RFH (Radio Frequency Hub) |
| SP00361 | Clear TPM Sensor Warnings | RFH (Radio Frequency Hub) |
| SP00362 | Trailer Hook Presence Disabling | PAM (Parking Aid Module) |
| SP00363 | Trailer Hook Presence Enabling | PAM (Parking Aid Module) |
| SP00364 | Reset Odometer | IC (Instrument Cluster) |
| SP00365 | Reset Service Information | IC (Instrument Cluster) |
| SP00366 | Last Service Date | IC (Instrument Cluster) |
| SP00367 | Self Learning Motors Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP00368 | Proxi Alignment Procedure | ESM (Electronic Shifter Module) |
| SP00369 | Factory VIN code lock | ESM (Electronic Shifter Module) |
| SP00370 | Steering Angle Sensor | EPS (Electric Power Steering) |
| SP00371 | Factory VIN code lock | DTCM (Drive Train Control Module) |
| SP00372 | Proxi Alignment Procedure | DTCM (Drive Train Control Module) |
| SP00373 | Factory VIN code lock | CSWM (Comfort Seat Wheel Module) |
| SP00374 | Intake Manifold Replacement | ECM (Engine Control Module) |
| SP00375 | Clutch Group And/Or Clutch Potentiometer Replacement | ECM (Engine Control Module) |
| SP00376 | Phonic Wheel Replacement | ECM (Engine Control Module) |
| SP00377 | Intelligent Alternator (IAM) Replacement | ECM (Engine Control Module) |
| SP00378 | Neutral Signal Learn | ECM (Engine Control Module) |
| SP00379 | Fuel Supply System Components Replacement | ECM (Engine Control Module) |
| SP00380 | Motorized Throttle Replacement | ECM (Engine Control Module) |
| SP00381 | Factory VIN code lock | ECM (Engine Control Module) |

| | | |
|---------|---|---|
| SP00382 | Control Unit Reprogramming | ECM (Engine Control Module) |
| SP00383 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP00384 | Proxi Alignment Procedure | ECM (Engine Control Module) |
| SP00385 | Injector/S Replacement | ECM (Engine Control Module) |
| SP00386 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP00387 | Self-Learnt Functions Reset | ECM (Engine Control Module) |
| SP00388 | Motorized Throttle Self Learning Command | ECM (Engine Control Module) |
| SP00389 | Proxi Alignment Procedure | TCM (Transmission Control Module) |
| SP00390 | ECU Substitution | ABS (Anti-Lock Braking System) |
| SP00391 | Longitudinal And Lateral Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP00392 | Pressure Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP00393 | TPMS Reset Calibration | ABS (Anti-Lock Braking System) |
| SP00394 | Fire Protection System Activate | BCM (Body Control Module) |
| SP00395 | LIN Line Request Check | BCM (Body Control Module) |
| SP00396 | Ultrasonic Sensors Check | BCM (Body Control Module) |
| SP00397 | Power Down | RRM (Radio Receiver Module) |
| SP00398 | Power On And Disable User Inputs | RRM (Radio Receiver Module) |
| SP00399 | Reset Parameters To Default | RRM (Radio Receiver Module) |
| SP00400 | Clear TPM Sensor Audit | RFH (Radio Frequency Hub) |
| SP00401 | Clear TPM Sensor Warnings | RFH (Radio Frequency Hub) |
| SP00402 | Trailer Hook Presence Disabling | PAM (Parking Aid Module) |
| SP00403 | Trailer Hook Presence Enabling | PAM (Parking Aid Module) |
| SP00404 | Reset Odometer | IC (Instrument Cluster) |
| SP00405 | Reset Service Information | IC (Instrument Cluster) |
| SP00406 | Last Service Date | IC (Instrument Cluster) |
| SP00407 | Self Learning Motors Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP00408 | Proxi Alignment Procedure | ESM (Electronic Shifter Module) |
| SP00409 | Factory VIN code lock | ESM (Electronic Shifter Module) |
| SP00410 | Steering Angle Sensor | EPS (Electric Power Steering) |
| SP00411 | Factory VIN code lock | DTCM (Drive Train Control Module) |
| SP00412 | Proxi Alignment Procedure | DTCM (Drive Train Control Module) |
| SP00413 | Factory VIN code lock | CSWM (Comfort Seat Wheel Module) |
| SP00414 | Deactivation Of The Power Limitation Function | ECM (Engine Control Module) |
| SP00415 | Motorised Throttle Replacement | ECM (Engine Control Module) |
| SP00416 | Supercharging System Components Replacement | ECM (Engine Control Module) |

| | | |
|---------|--|---|
| SP00417 | Intake Manifold Replacement | ECM (Engine Control Module) |
| SP00418 | Clutch Group And/Or Clutch Potentiometer Replacement | ECM (Engine Control Module) |
| SP00419 | Phonic Wheel Replacement | ECM (Engine Control Module) |
| SP00420 | Intelligent Alternator (IAM) Replacement | ECM (Engine Control Module) |
| SP00421 | Neutral Signal Learn | ECM (Engine Control Module) |
| SP00422 | Self-Learnt Functions Reset | ECM (Engine Control Module) |
| SP00423 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP00424 | Tunnel Lever Replacement | TCM (Transmission Control Module) |
| SP00425 | Levers At Wheel Replacement | TCM (Transmission Control Module) |
| SP00426 | Pump Relay Replacement | TCM (Transmission Control Module) |
| SP00427 | Self-Learnt Functions Reset | TCM (Transmission Control Module) |
| SP00428 | Static Test | ABS (Anti-Lock Braking System) |
| SP00429 | Trailer Hook Presence Disabling | PAM (Parking Assistant Module) |
| SP00430 | Trailer Hook Presence Enabling | PAM (Parking Assistant Module) |
| SP00431 | Reset Odometer | IC (Instrument Cluster) |
| SP00432 | Reset Service Information | IC (Instrument Cluster) |
| SP00433 | Disable Seat Belts Reminder | IC (Instrument Cluster) |
| SP00434 | Enable Seat Belts Reminder | IC (Instrument Cluster) |
| SP00435 | Last Service Date | IC (Instrument Cluster) |
| SP00436 | Flap Actuators Learning Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP00437 | Audio Video Signal Detection | ETM (Entertainment Telematic Module) |
| SP00438 | Steering Angle Calibration | EPS (Electric Power Steering) |
| SP00439 | ECU Restart Routine | CTM (Convergence Telematic Module) |
| SP00440 | Fire Protection System Activate | BCM (Body Control Module) |
| SP00441 | Clutch Group And/Or Clutch Potentiometer Replacement | ECM (Engine Control Module) |
| SP00442 | Intelligent Alternator (IAM) Replacement | ECM (Engine Control Module) |
| SP00443 | Differential Pressure Sensor Replac. | ECM (Engine Control Module) |
| SP00444 | Oil Change | ECM (Engine Control Module) |
| SP00445 | Injector Replacement (Per Bank) | ECM (Engine Control Module) |
| SP00446 | Injector Codes Read | ECM (Engine Control Module) |
| SP00447 | Rail Pressure Sensor Replacement | ECM (Engine Control Module) |
| SP00448 | Cylinder 3 Injector Replacement | ECM (Engine Control Module) |
| SP00449 | Cylinder 2 Injector Replacement | ECM (Engine Control Module) |
| SP00450 | Cylinder 1 Injector Replacement | ECM (Engine Control Module) |
| SP00451 | Neutral Signal Learn | ECM (Engine Control Module) |

| | | |
|---------|---|--|
| SP00452 | Phonic Wheel Replacement | ECM (Engine Control Module) |
| SP00453 | Replacement Lambda Sensor | ECM (Engine Control Module) |
| SP00454 | Speed Limit Setting | ECM (Engine Control Module) |
| SP00455 | Speed Limit Setting | ECM (Engine Control Module) |
| SP00456 | EGR Valve Test | ECM (Engine Control Module) |
| SP00457 | Glow Plug Preheating Circuit Test | ECM (Engine Control Module) |
| SP00458 | Resetting Distance Travelled With Water In Diesel W. Lamp | ECM (Engine Control Module) |
| SP00459 | Throttle Valve Test | ECM (Engine Control Module) |
| SP00460 | Resetting Distance Travelled With Water Temperature Warn | ECM (Engine Control Module) |
| SP00461 | Self-Learnt Functions Reset | ECM (Engine Control Module) |
| SP00462 | Fan Cooling Activation | ECM (Engine Control Module) |
| SP00463 | Tunnel Lever Replacement | TCM (Transmission Control Module) |
| SP00464 | Pump Relay Replacement | TCM (Transmission Control Module) |
| SP00465 | Self-Learnt Functions Reset | TCM (Transmission Control Module) |
| SP00466 | Longitudinal And Lateral Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP00467 | Pressure Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP00468 | Steering Angle Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP00469 | Write Front And Rear Nominal Tire Pressure Values | TPMS (Tire Pressure Monitoring System) |
| SP00470 | Clear TPM Warnings | TPMS (Tire Pressure Monitoring System) |
| SP00471 | Clear TPM Sensor Rolls Test Results | TPMS (Tire Pressure Monitoring System) |
| SP00472 | ECU SERIAL NUMBER Management | TPMS (Tire Pressure Monitoring System) |
| SP00473 | TPM Sensor Rolls Test | TPMS (Tire Pressure Monitoring System) |
| SP00474 | Program Left Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00475 | Program Left Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00476 | Program Right Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00477 | Program Right Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00478 | Power Down | RADIO (RADIO) |
| SP00479 | Power On And Disable User Inputs | RADIO (RADIO) |
| SP00480 | Reset Parameters To Default | RADIO (RADIO) |
| SP00481 | Trailer Hook Presence Disabling | PAM (Parking Assistant Module) |
| SP00482 | Trailer Hook Presence Enabling | PAM (Parking Assistant Module) |
| SP00483 | Disable Seat Belts Reminder | IPC (Instrument Panel Cluster) |
| SP00484 | Reset Odometer | IPC (Instrument Panel Cluster) |
| SP00485 | Reset Service Information | IPC (Instrument Panel Cluster) |
| SP00486 | Last Service Date | IPC (Instrument Panel Cluster) |

| | | |
|---------|---|---|
| SP00487 | Enable Seat Belts Reminder | IPC (Instrument Panel Cluster) |
| SP00488 | Flap Actuators Learning Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP00489 | Power Down | ETM (Entertainment Telematic Module) |
| SP00490 | Power On And Disable User Inputs | ETM (Entertainment Telematic Module) |
| SP00491 | Reset Parameters To Default | ETM (Entertainment Telematic Module) |
| SP00492 | Audio Video Signal Detection | ETM (Entertainment Telematic Module) |
| SP00493 | ECU Restart Routine | CTM (Convergence Telematic Module) |
| SP00494 | Fire Protection System Activate | BCM (Body Control Module) |
| SP00495 | Speed Limit Setting | ECM (Engine Control Module) |
| SP00496 | Vehicle Configuration Reset | ECM (Engine Control Module) |
| SP00497 | Reset Adaptative Parameter | ECM (Engine Control Module) |
| SP00498 | Tunnel Lever Replacement | TCM (Transmission Control Module) |
| SP00499 | Pump Relay Replacement | TCM (Transmission Control Module) |
| SP00500 | Self-Learnt Functions Reset | TCM (Transmission Control Module) |
| SP00501 | Inlet Valve Calibration | ABS (Anti-Lock Braking System) |
| SP00502 | Longitudinal And Lateral Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP00503 | Pilot Valve Calibration | ABS (Anti-Lock Braking System) |
| SP00504 | Brake Pressure Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP00505 | Steering Angle Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP00506 | Write Front And Rear Nominal Tire Pressure Values | TPMS (Tire Pressure Monitoring System) |
| SP00507 | Clear TPM Warnings | TPMS (Tire Pressure Monitoring System) |
| SP00508 | Clear TPM Sensor Rolls Test Results | TPMS (Tire Pressure Monitoring System) |
| SP00509 | ECU SERIAL NUMBER Management | TPMS (Tire Pressure Monitoring System) |
| SP00510 | TPM Sensor Rolls Test | TPMS (Tire Pressure Monitoring System) |
| SP00511 | Program Left Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00512 | Program Left Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00513 | Program Right Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00514 | Program Right Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00515 | Trailer Hook Presence Disabling | PAM (Parking Assistant Module) |
| SP00516 | Trailer Hook Presence Enabling | PAM (Parking Assistant Module) |
| SP00517 | Reset Odometer | IC (Instrument Cluster) |
| SP00518 | Reset Service Information | IC (Instrument Cluster) |
| SP00519 | Disable Seat Belts Reminder | IC (Instrument Cluster) |
| SP00520 | Enable Seat Belts Reminder | IC (Instrument Cluster) |
| SP00521 | Last Service Date | IC (Instrument Cluster) |

| | | |
|---------|---|---|
| SP00522 | Flap Actuators Learning Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP00523 | Fire Protection System Activate | BCM (Body Control Module) |
| SP00524 | Clutch Group And/Or Clutch Potentiometer Replacement | ECM (Engine Control Module) |
| SP00525 | Differential Pressure Sensor Replac. | ECM (Engine Control Module) |
| SP00526 | Oil Change | ECM (Engine Control Module) |
| SP00527 | Rail Pressure Sensor Replacement | ECM (Engine Control Module) |
| SP00528 | Phonic Wheel Replacement | ECM (Engine Control Module) |
| SP00529 | Replacement Lambda Sensor | ECM (Engine Control Module) |
| SP00530 | Injector Replacement (Per Bank) | ECM (Engine Control Module) |
| SP00531 | Injector Codes Read | ECM (Engine Control Module) |
| SP00532 | Cylinder 3 Injector Replacement | ECM (Engine Control Module) |
| SP00533 | Cylinder 2 Injector Replacement | ECM (Engine Control Module) |
| SP00534 | Cylinder 1 Injector Replacement | ECM (Engine Control Module) |
| SP00535 | Speed Limit Setting | ECM (Engine Control Module) |
| SP00536 | Self-Learnt Functions Reset | ECM (Engine Control Module) |
| SP00537 | Fan Cooling Activation | ECM (Engine Control Module) |
| SP00538 | EGR Valve Test | ECM (Engine Control Module) |
| SP00539 | Resetting Distance Travelled With Water In Diesel W. Lamp | ECM (Engine Control Module) |
| SP00540 | Throttle Valve Test | ECM (Engine Control Module) |
| SP00541 | Resetting Distance Travelled With Water Temperature Warn | ECM (Engine Control Module) |
| SP00542 | Longitudinal And Lateral Sensor Decalibration | ABS (Anti-Lock Braking System) |
| SP00543 | Longitudinal And Lateral Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP00544 | Static Test | ABS (Anti-Lock Braking System) |
| SP00545 | Steering Angle Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP00546 | Clear TPM Warnings | TPMS (Tire Pressure Monitoring System) |
| SP00547 | Clear TPM Sensor Rolls Test Results | TPMS (Tire Pressure Monitoring System) |
| SP00548 | Program Left Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00549 | Program Right Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00550 | ECU SERIAL NUMBER Management | TPMS (Tire Pressure Monitoring System) |
| SP00551 | TPM Sensor Rolls Test | TPMS (Tire Pressure Monitoring System) |
| SP00552 | Write Front And Rear Axle Nominal Tire Pressure | TPMS (Tire Pressure Monitoring System) |
| SP00553 | Program Left Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00554 | Program Left Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00555 | Program Right Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00556 | Program Right Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |

| | | |
|---------|--|---|
| SP00557 | Power Down | RADIO (RADIO) |
| SP00558 | Power On And Disable User Inputs | RADIO (RADIO) |
| SP00559 | Reset Parameters To Default | RADIO (RADIO) |
| SP00560 | Trailer Hook Presence Disabling | PAM (Parking Aid Module) |
| SP00561 | Trailer Hook Presence Enabling | PAM (Parking Aid Module) |
| SP00562 | Reset Odometer | IC (Instrument Cluster) |
| SP00563 | Reset Service Information | IC (Instrument Cluster) |
| SP00564 | Disable Seat Belts Reminder | IC (Instrument Cluster) |
| SP00565 | Enable Seat Belts Reminder | IC (Instrument Cluster) |
| SP00566 | Last Service Date | IC (Instrument Cluster) |
| SP00567 | Self Learning Motors Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP00568 | Power Down | ETM (Entertainment Telematic Module) |
| SP00569 | Power On And Disable User Inputs | ETM (Entertainment Telematic Module) |
| SP00570 | Reset Parameters To Default | ETM (Entertainment Telematic Module) |
| SP00571 | Audio Video Signal Detection | ETM (Entertainment Telematic Module) |
| SP00572 | Resetting Distance Travelled With Water In Diesel W.Lamp | ECM (Engine Control Module) |
| SP00573 | Resetting Distance Travelled With Water Temperature Warn | ECM (Engine Control Module) |
| SP00574 | Fan Cooling Activation | ECM (Engine Control Module) |
| SP00575 | Neutral Signal Learn | ECM (Engine Control Module) |
| SP00576 | Injector Codes Read | ECM (Engine Control Module) |
| SP00577 | Nox Replacement | ECM (Engine Control Module) |
| SP00578 | Factory VIN code lock | ECM (Engine Control Module) |
| SP00579 | Intelligent Alternator (IAM) Replacement | ECM (Engine Control Module) |
| SP00580 | Clutch Group And/Or Clutch Potentiometer Replacement | ECM (Engine Control Module) |
| SP00581 | Injector Replacement (Per Bank) | ECM (Engine Control Module) |
| SP00582 | Cylinder 1 Injector Replacement | ECM (Engine Control Module) |
| SP00583 | Cylinder 2 Injector Replacement | ECM (Engine Control Module) |
| SP00584 | Cylinder 3 Injector Replacement | ECM (Engine Control Module) |
| SP00585 | Replacement Lambda Sensor | ECM (Engine Control Module) |
| SP00586 | Oil Change | ECM (Engine Control Module) |
| SP00587 | Differential Pressure Sensor Replac. | ECM (Engine Control Module) |
| SP00588 | Rail Pressure Sensor Replacement | ECM (Engine Control Module) |
| SP00589 | Replacement Of EGR Valve | ECM (Engine Control Module) |
| SP00590 | EGR Low Pressure Valve Replacement | ECM (Engine Control Module) |
| SP00591 | Glow Plug Preheating Circuit Test | ECM (Engine Control Module) |

| | | |
|---------|--|---|
| SP00592 | EGR Valve Test | ECM (Engine Control Module) |
| SP00593 | EGR Low Pressure Valve Test | ECM (Engine Control Module) |
| SP00594 | Throttle Valve Test | ECM (Engine Control Module) |
| SP00595 | Proxi Alignment Procedure | ECM (Engine Control Module) |
| SP00596 | Neutral Position Self Learning. | TCM (Transmission Control Module) |
| SP00597 | Clear Self-Learning Data | TCM (Transmission Control Module) |
| SP00598 | Gearbox Replacement | TCM (Transmission Control Module) |
| SP00599 | Static Test | ABS (Anti-Lock Braking System) |
| SP00600 | Power Down | RRM (Radio Receiver Module) |
| SP00601 | Power On And Disable User Inputs | RRM (Radio Receiver Module) |
| SP00602 | Reset Parameters To Default | RRM (Radio Receiver Module) |
| SP00603 | Trailer Hook Presence Disabling | PAM (Parking Assistant Module) |
| SP00604 | Trailer Hook Presence Enabling | PAM (Parking Assistant Module) |
| SP00605 | Reset Service Information | IC (Instrument Cluster) |
| SP00606 | Reset Odometer | IC (Instrument Cluster) |
| SP00607 | Last Service Date | IC (Instrument Cluster) |
| SP00608 | Self Learning Motors Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP00609 | Proxi Alignment Procedure | ESM (Electronic Shifter Module) |
| SP00610 | Factory VIN code lock | ESM (Electronic Shifter Module) |
| SP00611 | Resetting Distance Travelled With Water In Diesel W.Lamp | ECM (Engine Control Module) |
| SP00612 | Resetting Distance Travelled With Water Temperature Warn | ECM (Engine Control Module) |
| SP00613 | Fan Cooling Activation | ECM (Engine Control Module) |
| SP00614 | Neutral Signal Learn | ECM (Engine Control Module) |
| SP00615 | Injector Codes Read | ECM (Engine Control Module) |
| SP00616 | Nox Replacement | ECM (Engine Control Module) |
| SP00617 | Factory VIN code lock | ECM (Engine Control Module) |
| SP00618 | Intelligent Alternator (IAM) Replacement | ECM (Engine Control Module) |
| SP00619 | Clutch Group And/Or Clutch Potentiometer Replacement | ECM (Engine Control Module) |
| SP00620 | Injector Replacement (Per Bank) | ECM (Engine Control Module) |
| SP00621 | Cylinder 1 Injector Replacement | ECM (Engine Control Module) |
| SP00622 | Cylinder 2 Injector Replacement | ECM (Engine Control Module) |
| SP00623 | Cylinder 3 Injector Replacement | ECM (Engine Control Module) |
| SP00624 | Replacement Lambda Sensor | ECM (Engine Control Module) |
| SP00625 | Oil Change | ECM (Engine Control Module) |
| SP00626 | Differential Pressure Sensor Replac. | ECM (Engine Control Module) |

| | | |
|---------|--|---|
| SP00627 | Rail Pressure Sensor Replacement | ECM (Engine Control Module) |
| SP00628 | Replacement Of EGR Valve | ECM (Engine Control Module) |
| SP00629 | EGR Low Pressure Valve Replacement | ECM (Engine Control Module) |
| SP00630 | Glow Plug Preheating Circuit Test | ECM (Engine Control Module) |
| SP00631 | EGR Valve Test | ECM (Engine Control Module) |
| SP00632 | EGR Low Pressure Valve Test | ECM (Engine Control Module) |
| SP00633 | Throttle Valve Test | ECM (Engine Control Module) |
| SP00634 | Proxi Alignment Procedure | ECM (Engine Control Module) |
| SP00635 | Neutral Position Self Learning. | TCM (Transmission Control Module) |
| SP00636 | Clear Self-Learning Data | TCM (Transmission Control Module) |
| SP00637 | Gearbox Replacement | TCM (Transmission Control Module) |
| SP00638 | Static Test | ABS (Anti-Lock Braking System) |
| SP00639 | Power Down | RRM (Radio Receiver Module) |
| SP00640 | Power On And Disable User Inputs | RRM (Radio Receiver Module) |
| SP00641 | Reset Parameters To Default | RRM (Radio Receiver Module) |
| SP00642 | Trailer Hook Presence Disabling | PAM (Parking Assistant Module) |
| SP00643 | Trailer Hook Presence Enabling | PAM (Parking Assistant Module) |
| SP00644 | Reset Service Information | IC (Instrument Cluster) |
| SP00645 | Reset Odometer | IC (Instrument Cluster) |
| SP00646 | Last Service Date | IC (Instrument Cluster) |
| SP00647 | Self Learning Motors Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP00648 | Proxi Alignment Procedure | ESM (Electronic Shifter Module) |
| SP00649 | Factory VIN code lock | ESM (Electronic Shifter Module) |
| SP00650 | Resetting Distance Travelled With Water In Diesel W.Lamp | ECM (Engine Control Module) |
| SP00651 | Resetting Distance Travelled With Water Temperature Warn | ECM (Engine Control Module) |
| SP00652 | Fan Cooling Activation | ECM (Engine Control Module) |
| SP00653 | Neutral Signal Learn | ECM (Engine Control Module) |
| SP00654 | Injector Codes Read | ECM (Engine Control Module) |
| SP00655 | Nox Replacement | ECM (Engine Control Module) |
| SP00656 | Factory VIN code lock | ECM (Engine Control Module) |
| SP00657 | Intelligent Alternator (IAM) Replacement | ECM (Engine Control Module) |
| SP00658 | Clutch Group And/Or Clutch Potentiometer Replacement | ECM (Engine Control Module) |
| SP00659 | Injector Replacement (Per Bank) | ECM (Engine Control Module) |
| SP00660 | Cylinder 1 Injector Replacement | ECM (Engine Control Module) |
| SP00661 | Cylinder 2 Injector Replacement | ECM (Engine Control Module) |

| | | |
|---------|--------------------------------------|---|
| SP00662 | Cylinder 3 Injector Replacement | ECM (Engine Control Module) |
| SP00663 | Replacement Lambda Sensor | ECM (Engine Control Module) |
| SP00664 | Oil Change | ECM (Engine Control Module) |
| SP00665 | Differential Pressure Sensor Replac. | ECM (Engine Control Module) |
| SP00666 | Rail Pressure Sensor Replacement | ECM (Engine Control Module) |
| SP00667 | Replacement Of EGR Valve | ECM (Engine Control Module) |
| SP00668 | EGR Low Pressure Valve Replacement | ECM (Engine Control Module) |
| SP00669 | Glow Plug Preheating Circuit Test | ECM (Engine Control Module) |
| SP00670 | EGR Valve Test | ECM (Engine Control Module) |
| SP00671 | EGR Low Pressure Valve Test | ECM (Engine Control Module) |
| SP00672 | Throttle Valve Test | ECM (Engine Control Module) |
| SP00673 | Proxi Alignment Procedure | ECM (Engine Control Module) |
| SP00674 | Neutral Position Self Learning. | TCM (Transmission Control Module) |
| SP00675 | Clear Self-Learning Data | TCM (Transmission Control Module) |
| SP00676 | Gearbox Replacement | TCM (Transmission Control Module) |
| SP00677 | Static Test | ABS (Anti-Lock Braking System) |
| SP00678 | Power Down | RRM (Radio Receiver Module) |
| SP00679 | Power On And Disable User Inputs | RRM (Radio Receiver Module) |
| SP00680 | Reset Parameters To Default | RRM (Radio Receiver Module) |
| SP00681 | Trailer Hook Presence Disabling | PAM (Parking Assistant Module) |
| SP00682 | Trailer Hook Presence Enabling | PAM (Parking Assistant Module) |
| SP00683 | Reset Service Information | IC (Instrument Cluster) |
| SP00684 | Reset Odometer | IC (Instrument Cluster) |
| SP00685 | Last Service Date | IC (Instrument Cluster) |
| SP00686 | Self Learning Motors Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP00687 | Proxi Alignment Procedure | ESM (Electronic Shifter Module) |
| SP00688 | Factory VIN code lock | ESM (Electronic Shifter Module) |
| SP00689 | Differential Pressure Sensor Replac. | ECM (Engine Control Module) |
| SP00690 | Oil Change | ECM (Engine Control Module) |
| SP00691 | Injector Replacement (Per Bank) | ECM (Engine Control Module) |
| SP00692 | Injector Codes Read | ECM (Engine Control Module) |
| SP00693 | Rail Pressure Sensor Replacement | ECM (Engine Control Module) |
| SP00694 | Cylinder 3 Injector Replacement | ECM (Engine Control Module) |
| SP00695 | Cylinder 2 Injector Replacement | ECM (Engine Control Module) |
| SP00696 | Cylinder 1 Injector Replacement | ECM (Engine Control Module) |

| | | |
|---------|---|---|
| SP00697 | Phonic Wheel Replacement | ECM (Engine Control Module) |
| SP00698 | Replacement Lambda Sensor | ECM (Engine Control Module) |
| SP00699 | Neutral Signal Learn | ECM (Engine Control Module) |
| SP00700 | EGR Valve Test | ECM (Engine Control Module) |
| SP00701 | Glow Plug Preheating Circuit Test | ECM (Engine Control Module) |
| SP00702 | Self-Learnt Functions Reset | ECM (Engine Control Module) |
| SP00703 | Resetting Distance Travelled With Water In Diesel W. Lamp | ECM (Engine Control Module) |
| SP00704 | Throttle Valve Test | ECM (Engine Control Module) |
| SP00705 | Resetting Distance Travelled With Water Temperature Warn | ECM (Engine Control Module) |
| SP00706 | Fan Cooling Activation | ECM (Engine Control Module) |
| SP00707 | Speed Limit Setting | ECM (Engine Control Module) |
| SP00708 | Tunnel Lever Replacement | TCM (Transmission Control Module) |
| SP00709 | Pump Relay Replacement | TCM (Transmission Control Module) |
| SP00710 | Self-Learnt Functions Reset | TCM (Transmission Control Module) |
| SP00711 | Longitudinal And Lateral Sensor Decalibration | ABS (Anti-Lock Braking System) |
| SP00712 | Longitudinal And Lateral Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP00713 | Static Test | ABS (Anti-Lock Braking System) |
| SP00714 | Trailer Hook Presence Disabling | PAM (Parking Aid Module) |
| SP00715 | Trailer Hook Presence Enabling | PAM (Parking Aid Module) |
| SP00716 | Reset Odometer | IC (Instrument Cluster) |
| SP00717 | Enable Seat Belts Reminder | IC (Instrument Cluster) |
| SP00718 | Disable Seat Belts Reminder | IC (Instrument Cluster) |
| SP00719 | ECU Restart Routine | CTM (Convergence Telematic Module) |
| SP00720 | Air Flow Meter Replacement | PCM (Powertrain Control Module) |
| SP00721 | DPF Reset Option | PCM (Powertrain Control Module) |
| SP00722 | Lambda Sensor Replace | PCM (Powertrain Control Module) |
| SP00723 | Reset Of Lambda Values | PCM (Powertrain Control Module) |
| SP00724 | Reset Oil Change Indicator | PCM (Powertrain Control Module) |
| SP00725 | Reset Zero Fuel Quantity Calibration | PCM (Powertrain Control Module) |
| SP00726 | Service Diesel Particulate Filter Regeneration | PCM (Powertrain Control Module) |
| SP00727 | Throttle Valve Learn | PCM (Powertrain Control Module) |
| SP00728 | ABS Bleed Brakes | ABS (Anti-Lock Braking System) |
| SP00729 | Brake Pedal Calibration | ABS (Anti-Lock Braking System) |
| SP00730 | Initialize ORC | SRS (Supplemental Inflatable Restraint System, ORC) |
| SP00731 | Rollover Detection | SRS (Supplemental Inflatable Restraint System, ORC) |

| | | |
|---------|--|---|
| SP00732 | Activate Driver And Passenger Head Restraint | SRS (Supplemental Inflatable Restraint System, ORC) |
| SP00733 | Program Tire Sensor ID With TPM Tool | TPMS (Tire Pressure Monitoring System) |
| SP00734 | Actuator Calibration Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP00735 | Configure License Plate Size | EPB (Electrical Parking Brake) |
| SP00736 | System Wiring Test | EPB (Electrical Parking Brake) |
| SP00737 | Auto Door Lock | BCM (Body Control Module) |
| SP00738 | Program Tire Size | BCM (Body Control Module) |
| SP00739 | Exit Shipping Mode | BCM (Body Control Module) |
| SP00740 | Air Flow Meter Replacement | PCM (Powertrain Control Module) |
| SP00741 | DPF Reset Option | PCM (Powertrain Control Module) |
| SP00742 | Lambda Sensor Replace | PCM (Powertrain Control Module) |
| SP00743 | Reset Of Lambda Values | PCM (Powertrain Control Module) |
| SP00744 | Reset Oil Change Indicator | PCM (Powertrain Control Module) |
| SP00745 | Reset Zero Fuel Quantity Calibration | PCM (Powertrain Control Module) |
| SP00746 | Service Diesel Particulate Filter Regeneration | PCM (Powertrain Control Module) |
| SP00747 | Throttle Valve Learn | PCM (Powertrain Control Module) |
| SP00748 | ABS Bleed Brakes | ABS (Anti-Lock Braking System) |
| SP00749 | Brake Pedal Calibration | ABS (Anti-Lock Braking System) |
| SP00750 | Initialize ORC | SRS (Supplemental Inflatable Restraint System, ORC) |
| SP00751 | Rollover Detection | SRS (Supplemental Inflatable Restraint System, ORC) |
| SP00752 | Activate Driver And Passenger Head Restraint | SRS (Supplemental Inflatable Restraint System, ORC) |
| SP00753 | Program Left Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00754 | Program Left Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00755 | Program Right Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00756 | Program Right Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00757 | Program Tire Sensor ID With TPM Tool | TPMS (Tire Pressure Monitoring System) |
| SP00758 | Activate TPM High Gain Mode | TPMS (Tire Pressure Monitoring System) |
| SP00759 | TPM Sensor Position Parameter Update | TPMS (Tire Pressure Monitoring System) |
| SP00760 | Sensor Rolls Test | TPMS (Tire Pressure Monitoring System) |
| SP00761 | Actuator Calibration Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP00762 | Configure License Plate Size | EPB (Electrical Parking Brake) |
| SP00763 | System Wiring Test | EPB (Electrical Parking Brake) |
| SP00764 | Auto Door Lock | BCM (Body Control Module) |
| SP00765 | Program Tire Size | BCM (Body Control Module) |
| SP00766 | Exit Shipping Mode | BCM (Body Control Module) |

| | | |
|---------|--|---|
| SP00767 | Cam Crank Relearn | PCM (Powertrain Control Module) |
| SP00768 | Check PCM Odometer | PCM (Powertrain Control Module) |
| SP00769 | Quicklearn (62TE) | PCM (Powertrain Control Module) |
| SP00770 | Quicklearn (Non-RFE) | PCM (Powertrain Control Module) |
| SP00771 | Reset Memory | PCM (Powertrain Control Module) |
| SP00772 | Write Pinion Factor | PCM (Powertrain Control Module) |
| SP00773 | EGR System Test | PCM (Powertrain Control Module) |
| SP00774 | ETC Throttle Follower Test | PCM (Powertrain Control Module) |
| SP00775 | Set Engine RPM | PCM (Powertrain Control Module) |
| SP00776 | Shift Lever Position Test (62TE) | PCM (Powertrain Control Module) |
| SP00777 | Shift Lever Position Test (Non-RFE) | PCM (Powertrain Control Module) |
| SP00778 | ABS Bleed Brakes | ABS (Anti-Lock Braking System) |
| SP00779 | Brake Pedal Calibration | ABS (Anti-Lock Braking System) |
| SP00780 | Initialize ORC | SRS (Supplemental Inflatable Restraint System, ORC) |
| SP00781 | Rollover Detection | SRS (Supplemental Inflatable Restraint System, ORC) |
| SP00782 | Activate Driver And Passenger Head Restraint | SRS (Supplemental Inflatable Restraint System, ORC) |
| SP00783 | Program Left Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00784 | Program Left Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00785 | Program Right Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00786 | Program Right Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00787 | Program Tire Sensor ID With TPM Tool | TPMS (Tire Pressure Monitoring System) |
| SP00788 | Sensor Rolls Test | TPMS (Tire Pressure Monitoring System) |
| SP00789 | Actuator Calibration Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP00790 | Configure License Plate Size | EPB (Electrical Parking Brake) |
| SP00791 | System Wiring Test | EPB (Electrical Parking Brake) |
| SP00792 | Auto Door Lock | BCM (Body Control Module) |
| SP00793 | Program Tire Size | BCM (Body Control Module) |
| SP00794 | Exit Shipping Mode | BCM (Body Control Module) |
| SP00795 | Air Flow Meter Replacement | PCM (Powertrain Control Module) |
| SP00796 | DPF Reset Option | PCM (Powertrain Control Module) |
| SP00797 | Lambda Sensor Replace | PCM (Powertrain Control Module) |
| SP00798 | Reset Of Lambda Values | PCM (Powertrain Control Module) |
| SP00799 | Reset Oil Change Indicator | PCM (Powertrain Control Module) |
| SP00800 | Reset Zero Fuel Quantity Calibration | PCM (Powertrain Control Module) |
| SP00801 | Service Diesel Particulate Filter Regeneration | PCM (Powertrain Control Module) |

| | | |
|---------|--|---|
| SP00802 | Throttle Valve Learn | PCM (Powertrain Control Module) |
| SP00803 | ABS Bleed Brakes | ABS (Anti-Lock Braking System) |
| SP00804 | Brake Pedal Calibration | ABS (Anti-Lock Braking System) |
| SP00805 | Initialize ORC | SRS (Supplemental Inflatable Restraint System, ORC) |
| SP00806 | Rollover Detection | SRS (Supplemental Inflatable Restraint System, ORC) |
| SP00807 | Activate Driver And Passenger Head Restraint | SRS (Supplemental Inflatable Restraint System, ORC) |
| SP00808 | Program Left Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00809 | Program Left Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00810 | Program Right Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00811 | Program Right Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00812 | Program Tire Sensor ID With TPM Tool | TPMS (Tire Pressure Monitoring System) |
| SP00813 | Sensor Rolls Test | TPMS (Tire Pressure Monitoring System) |
| SP00814 | Actuator Calibration Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP00815 | Configure License Plate Size | EPB (Electrical Parking Brake) |
| SP00816 | System Wiring Test | EPB (Electrical Parking Brake) |
| SP00817 | Auto Door Lock | BCM (Body Control Module) |
| SP00818 | Program Tire Size | BCM (Body Control Module) |
| SP00819 | Exit Shipping Mode | BCM (Body Control Module) |
| SP00820 | Air Flow Meter Replacement | PCM (Powertrain Control Module) |
| SP00821 | DPF Reset Option | PCM (Powertrain Control Module) |
| SP00822 | Lambda Sensor Replace | PCM (Powertrain Control Module) |
| SP00823 | Reset Of Lambda Values | PCM (Powertrain Control Module) |
| SP00824 | Reset Oil Change Indicator | PCM (Powertrain Control Module) |
| SP00825 | Reset Zero Fuel Quantity Calibration | PCM (Powertrain Control Module) |
| SP00826 | Service Diesel Particulate Filter Regeneration | PCM (Powertrain Control Module) |
| SP00827 | Throttle Valve Learn | PCM (Powertrain Control Module) |
| SP00828 | ABS Bleed Brakes | ABS (Anti-Lock Braking System) |
| SP00829 | Brake Pedal Calibration | ABS (Anti-Lock Braking System) |
| SP00830 | Initialize ORC | SRS (Supplemental Inflatable Restraint System, ORC) |
| SP00831 | Rollover Detection | SRS (Supplemental Inflatable Restraint System, ORC) |
| SP00832 | Activate Driver And Passenger Head Restraint | SRS (Supplemental Inflatable Restraint System, ORC) |
| SP00833 | Program Left Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00834 | Program Left Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00835 | Program Right Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00836 | Program Right Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |

| | | |
|---------|--|---|
| SP00837 | Program Tire Sensor ID With TPM Tool | TPMS (Tire Pressure Monitoring System) |
| SP00838 | Sensor Rolls Test | TPMS (Tire Pressure Monitoring System) |
| SP00839 | Actuator Calibration Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP00840 | Configure License Plate Size | EPB (Electrical Parking Brake) |
| SP00841 | System Wiring Test | EPB (Electrical Parking Brake) |
| SP00842 | Auto Door Lock | BCM (Body Control Module) |
| SP00843 | Program Tire Size | BCM (Body Control Module) |
| SP00844 | Exit Shipping Mode | BCM (Body Control Module) |
| SP00845 | Air Flow Meter Replacement | PCM (Powertrain Control Module) |
| SP00846 | DPF Reset Option | PCM (Powertrain Control Module) |
| SP00847 | Lambda Sensor Replace | PCM (Powertrain Control Module) |
| SP00848 | Reset Of Lambda Values | PCM (Powertrain Control Module) |
| SP00849 | Reset Oil Change Indicator | PCM (Powertrain Control Module) |
| SP00850 | Reset Zero Fuel Quantity Calibration | PCM (Powertrain Control Module) |
| SP00851 | Service Diesel Particulate Filter Regeneration | PCM (Powertrain Control Module) |
| SP00852 | Throttle Valve Learn | PCM (Powertrain Control Module) |
| SP00853 | ABS Bleed Brakes | ABS (Anti-Lock Braking System) |
| SP00854 | Brake Pedal Calibration | ABS (Anti-Lock Braking System) |
| SP00855 | Initialize ORC | SRS (Supplemental Inflatable Restraint System, ORC) |
| SP00856 | Rollover Detection | SRS (Supplemental Inflatable Restraint System, ORC) |
| SP00857 | Activate Driver And Passenger Head Restraint | SRS (Supplemental Inflatable Restraint System, ORC) |
| SP00858 | Auto Door Lock | BCM (Body Control Module) |
| SP00859 | Program Tire Size | BCM (Body Control Module) |
| SP00860 | Exit Shipping Mode | BCM (Body Control Module) |
| SP00861 | Program Left Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00862 | Program Left Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00863 | Program Right Front Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00864 | Program Right Rear Tire Sensor ID | TPMS (Tire Pressure Monitoring System) |
| SP00865 | Program Tire Sensor ID With TPM Tool | TPMS (Tire Pressure Monitoring System) |
| SP00866 | Sensor Rolls Test | TPMS (Tire Pressure Monitoring System) |
| SP00867 | Actuator Calibration Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP00868 | Configure License Plate Size | EPB (Electrical Parking Brake) |
| SP00869 | System Wiring Test | EPB (Electrical Parking Brake) |
| SP00870 | Fuel Circuit Purge | ECM (Engine Control Module) |
| SP00871 | General Stop Actuator | ECM (Engine Control Module) |

| | | |
|---------|---|----------------------------------|
| SP00872 | Reset Adaptative Parameter | ECM (Engine Control Module) |
| SP00873 | Reset Purge Fuel Circuit | ECM (Engine Control Module) |
| SP00874 | Reset Phonic Wheel Tooth Learn | ECM (Engine Control Module) |
| SP00875 | Reset Camshaft Adaptative | ECM (Engine Control Module) |
| SP00876 | Cam Crank Relearn | PCM (Powertrain Control Module) |
| SP00877 | Check PCM Odometer | PCM (Powertrain Control Module) |
| SP00878 | FCM Enable Emissions Rolls Test Mode | PCM (Powertrain Control Module) |
| SP00879 | Quicklearn (62TE) | PCM (Powertrain Control Module) |
| SP00880 | Quicklearn (Non-RFE) | PCM (Powertrain Control Module) |
| SP00881 | Reset Memory | PCM (Powertrain Control Module) |
| SP00882 | Clear Engine Auto Restart Crank Counter | PCM (Powertrain Control Module) |
| SP00883 | Cooled EGR H-Bridge Valve System Test | PCM (Powertrain Control Module) |
| SP00884 | Reset Enhanced Automatic Oil Change Indicator | PCM (Powertrain Control Module) |
| SP00885 | Enable Engine Idle Shutdown Feature | PCM (Powertrain Control Module) |
| SP00886 | EGR System Test | PCM (Powertrain Control Module) |
| SP00887 | ETC Throttle Follower Test | PCM (Powertrain Control Module) |
| SP00888 | Set Engine RPM | PCM (Powertrain Control Module) |
| SP00889 | Shift Lever Position Test (62TE) | PCM (Powertrain Control Module) |
| SP00890 | Shift Lever Position Test (Non-RFE) | PCM (Powertrain Control Module) |
| SP00891 | Clear TPM Sensor Audit | RFH (Radio Frequency Hub) |
| SP00892 | Clear TPM Sensor Warnings | RFH (Radio Frequency Hub) |
| SP00893 | Trailer Hook Presence Disabling | PAM (Parking Aid Module) |
| SP00894 | Trailer Hook Presence Enabling | PAM (Parking Aid Module) |
| SP00895 | Reset Odometer | IPC (Instrument Panel Cluster) |
| SP00896 | Self Learning Motors Test | HVAC (Heat, Ventilation And A/C) |
| SP00897 | Proxi Alignment Procedure | ESM (Electronic Shifter Module) |
| SP00898 | Factory VIN code lock | ESM (Electronic Shifter Module) |
| SP00899 | Steering Angle Sensor | EPS (Electric Power Steering) |
| SP00900 | Driver Mirror Axis X Command | DMM (Doors Management Module) |
| SP00901 | Driver Mirror Axis Y Command | DMM (Doors Management Module) |
| SP00902 | Fire Protection System Activate | BCM (Body Control Module) |
| SP00903 | Lock Doors Command | BCM (Body Control Module) |
| SP00904 | Unlock Doors Command | BCM (Body Control Module) |
| SP00905 | Check Siren | BCM (Body Control Module) |
| SP00906 | Siren Command | BCM (Body Control Module) |

| | | |
|---------|---|---|
| SP00907 | Cargo Unlock Relay | BCM (Body Control Module) |
| SP00908 | Cargo Lock Relay | BCM (Body Control Module) |
| SP00909 | Cam Crank Relearn | PCM (Powertrain Control Module) |
| SP00910 | Check PCM Odometer | PCM (Powertrain Control Module) |
| SP00911 | FCM Enable Emissions Rolls Test Mode | PCM (Powertrain Control Module) |
| SP00912 | Quicklearn (62TE) | PCM (Powertrain Control Module) |
| SP00913 | Quicklearn (Non-RFE) | PCM (Powertrain Control Module) |
| SP00914 | Reset Memory | PCM (Powertrain Control Module) |
| SP00915 | Clear Engine Auto Restart Crank Counter | PCM (Powertrain Control Module) |
| SP00916 | Cooled EGR H-Bridge Valve System Test | PCM (Powertrain Control Module) |
| SP00917 | Reset Enhanced Automatic Oil Change Indicator | PCM (Powertrain Control Module) |
| SP00918 | Enable Engine Idle Shutdown Feature | PCM (Powertrain Control Module) |
| SP00919 | EGR System Test | PCM (Powertrain Control Module) |
| SP00920 | ETC Throttle Follower Test | PCM (Powertrain Control Module) |
| SP00921 | Set Engine RPM | PCM (Powertrain Control Module) |
| SP00922 | Shift Lever Position Test (62TE) | PCM (Powertrain Control Module) |
| SP00923 | Shift Lever Position Test (Non-RFE) | PCM (Powertrain Control Module) |
| SP00924 | Fuel Circuit Purge | ECM (Engine Control Module) |
| SP00925 | General Stop Actuator | ECM (Engine Control Module) |
| SP00926 | Reset Adaptative Parameter | ECM (Engine Control Module) |
| SP00927 | Reset Purge Fuel Circuit | ECM (Engine Control Module) |
| SP00928 | Reset Phonic Wheel Tooth Learn | ECM (Engine Control Module) |
| SP00929 | Reset Camshaft Adaptative | ECM (Engine Control Module) |
| SP00930 | Clear Self Learning Data | TCM (Transmission Control Module) |
| SP00931 | Neutral Position Self-Learning | TCM (Transmission Control Module) |
| SP00932 | Clear TPM Sensor Audit | RFH (Radio Frequency Hub) |
| SP00933 | Clear TPM Sensor Warnings | RFH (Radio Frequency Hub) |
| SP00934 | Trailer Hook Presence Disabling | PAM (Parking Assistant Module) |
| SP00935 | Trailer Hook Presence Enabling | PAM (Parking Assistant Module) |
| SP00936 | Reset Service Information | IC (Instrument Cluster) |
| SP00937 | Self Learning Motors Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP00938 | Proxi Alignment Procedure | ESM (Electronic Shifter Module) |
| SP00939 | Factory VIN code lock | ESM (Electronic Shifter Module) |
| SP00940 | Steering Angle Sensor | EPS (Electric Power Steering) |
| SP00941 | Driver Mirror Axis X Command | DMM (Doors Management Module) |

| | | |
|---------|--|--------------------------------------|
| SP00942 | Driver Mirror Axis Y Command | DMM (Doors Management Module) |
| SP00943 | Exit Shipping Mode | BCM (Body Control Module) |
| SP00944 | Lock Doors Command | BCM (Body Control Module) |
| SP00945 | Unlock Doors Command | BCM (Body Control Module) |
| SP00946 | Siren Command | BCM (Body Control Module) |
| SP00947 | Fire Protection System Activate | BCM (Body Control Module) |
| SP00948 | ECM Proxi Alignment | ECM (Engine Control Module) |
| SP00949 | Reset Adaptative Parameter | ECM (Engine Control Module) |
| SP00950 | Vehicle Configuration Reset | ECM (Engine Control Module) |
| SP00951 | Self Learning Throttle Body Activation | ECM (Engine Control Module) |
| SP00952 | General Stop Actuator | ECM (Engine Control Module) |
| SP00953 | Reset Functions Self Learned | TCM (Transmission Control Module) |
| SP00954 | Disabling All Actuators | TCM (Transmission Control Module) |
| SP00955 | Shutdown Actuators | TCM (Transmission Control Module) |
| SP00956 | Learn Clutches Contact Point | TCM (Transmission Control Module) |
| SP00957 | Quick Learn | TCM (Transmission Control Module) |
| SP00958 | Hydraulic Circuit Depressurization | TCM (Transmission Control Module) |
| SP00959 | Bleed Hydraulic Circuit | TCM (Transmission Control Module) |
| SP00960 | MTA Proxi Configuration | TCM (Transmission Control Module) |
| SP00961 | ECU Replacement With Value Transfer | TCM (Transmission Control Module) |
| SP00962 | New Actuators | TCM (Transmission Control Module) |
| SP00963 | Reset TPMS Calibration | ABS (Anti Lock Brakes) |
| SP00964 | ORC Proxi Alignment | ORC (Occupant Restraint) |
| SP00965 | Reset Parameter. | LTM (Low Telematic Module) |
| SP00966 | Reset Parameter. | ETM (Entertainment Telematic Module) |
| SP00967 | Reset Parameter | ETM (Entertainment Telematic Module) |
| SP00968 | Reset Functions Self Learned | DMM (Doors Management Module) |
| SP00969 | Disabling All Actuators | DMM (Doors Management Module) |
| SP00970 | Shutdown Actuators | DMM (Doors Management Module) |
| SP00971 | Learn Clutches Contact Point | DMM (Doors Management Module) |
| SP00972 | Quick Learn | DMM (Doors Management Module) |
| SP00973 | Hydraulic Circuit Depressurization | DMM (Doors Management Module) |
| SP00974 | Bleed Hydraulic Circuit | DMM (Doors Management Module) |
| SP00975 | MTA Proxi Configuration | DMM (Doors Management Module) |
| SP00976 | ECU Replacement With Value Transfer | DMM (Doors Management Module) |

| | | |
|---------|--|-----------------------------------|
| SP00977 | New Actuators | DMM (Doors Management Module) |
| SP00978 | Lock Doors Command | BCM (Body Control Module) |
| SP00979 | Wind Shield Wiper | BCM (Body Control Module) |
| SP00980 | Rear Window Washer Command | BCM (Body Control Module) |
| SP00981 | Unlock Doors Command | BCM (Body Control Module) |
| SP00982 | Rear Window Wiper Command | BCM (Body Control Module) |
| SP00983 | Siren Command | BCM (Body Control Module) |
| SP00984 | Impone AF Gasoline | ECM (Engine Control Module) |
| SP00985 | Impone AF Learning | ECM (Engine Control Module) |
| SP00986 | ECM Proxi Alignment | ECM (Engine Control Module) |
| SP00987 | Vehicle Configuration Reset | ECM (Engine Control Module) |
| SP00988 | Self Learning Throttle Body Activation | ECM (Engine Control Module) |
| SP00989 | General Stop Actuator | ECM (Engine Control Module) |
| SP00990 | Impone AF Alcool | ECM (Engine Control Module) |
| SP00991 | Fuel Circuit Purge | ECM (Engine Control Module) |
| SP00992 | Purge Fuel Circuit Reset | ECM (Engine Control Module) |
| SP00993 | Clutch Pedal Learning | ECM (Engine Control Module) |
| SP00994 | Reset Adaptative Parameter | ECM (Engine Control Module) |
| SP00995 | Reset Functions Self Learned | TCM (Transmission Control Module) |
| SP00996 | Disabling All Actuators | TCM (Transmission Control Module) |
| SP00997 | Shutdown Actuators | TCM (Transmission Control Module) |
| SP00998 | Learn Clutches Contact Point | TCM (Transmission Control Module) |
| SP00999 | Quick Learn | TCM (Transmission Control Module) |
| SP01000 | Hydraulic Circuit Depressurization | TCM (Transmission Control Module) |
| SP01001 | Bleed Hydraulic Circuit | TCM (Transmission Control Module) |
| SP01002 | MTA Proxi Configuration | TCM (Transmission Control Module) |
| SP01003 | ECU Replacement With Value Transfer | TCM (Transmission Control Module) |
| SP01004 | New Actuators | TCM (Transmission Control Module) |
| SP01005 | Reset TPMS Calibration | ABS (Anti Lock Brakes) |
| SP01006 | ORC Proxi Alignment | ORC (Occupant Restraint) |
| SP01007 | Reset Functions Self Learned | DMM (Doors Management Module) |
| SP01008 | Disabling All Actuators | DMM (Doors Management Module) |
| SP01009 | Shutdown Actuators | DMM (Doors Management Module) |
| SP01010 | Learn Clutches Contact Point | DMM (Doors Management Module) |
| SP01011 | Quick Learn | DMM (Doors Management Module) |

| | | |
|---------|--|---|
| SP01012 | Hydraulic Circuit Depressurization | DMM (Doors Management Module) |
| SP01013 | Bleed Hydraulic Circuit | DMM (Doors Management Module) |
| SP01014 | MTA Proxi Configuration | DMM (Doors Management Module) |
| SP01015 | ECU Replacement With Value Transfer | DMM (Doors Management Module) |
| SP01016 | New Actuators | DMM (Doors Management Module) |
| SP01017 | Lock Doors Command | BCM (Body Control Module) |
| SP01018 | Wind Shield Wiper | BCM (Body Control Module) |
| SP01019 | Rear Window Washer Command | BCM (Body Control Module) |
| SP01020 | Unlock Doors Command | BCM (Body Control Module) |
| SP01021 | Rear Window Wiper Command | BCM (Body Control Module) |
| SP01022 | Siren Command | BCM (Body Control Module) |
| SP01023 | ECM Proxi Alignment | ECM (Engine Control Module) |
| SP01024 | Reset Adaptative Parameter | ECM (Engine Control Module) |
| SP01025 | Vehicle Configuration Reset | ECM (Engine Control Module) |
| SP01026 | Self Learning Throttle Body Activation | ECM (Engine Control Module) |
| SP01027 | General Stop Actuator | ECM (Engine Control Module) |
| SP01028 | Reset Functions Self Learned | TCM (Transmission Control Module) |
| SP01029 | Disabling All Actuators | TCM (Transmission Control Module) |
| SP01030 | Shutdown Actuators | TCM (Transmission Control Module) |
| SP01031 | Learn Clutches Contact Point | TCM (Transmission Control Module) |
| SP01032 | Quick Learn | TCM (Transmission Control Module) |
| SP01033 | Hydraulic Circuit Depressurization | TCM (Transmission Control Module) |
| SP01034 | Bleed Hydraulic Circuit | TCM (Transmission Control Module) |
| SP01035 | MTA Proxi Configuration | TCM (Transmission Control Module) |
| SP01036 | ECU Replacement With Value Transfer | TCM (Transmission Control Module) |
| SP01037 | New Actuators | TCM (Transmission Control Module) |
| SP01038 | BSM Proxi Alignment | ABS (Anti-Lock Braking System) |
| SP01039 | ORC Proxi Alignment | SRS (Supplemental Inflatable Restraint System, ORC) |
| SP01040 | Oil Service Reset | IC (Instrument Cluster) |
| SP01041 | Reset Functions Self Learned | DMM (Doors Management Module) |
| SP01042 | Disabling All Actuators | DMM (Doors Management Module) |
| SP01043 | Shutdown Actuators | DMM (Doors Management Module) |
| SP01044 | Learn Clutches Contact Point | DMM (Doors Management Module) |
| SP01045 | Quick Learn | DMM (Doors Management Module) |
| SP01046 | Hydraulic Circuit Depressurization | DMM (Doors Management Module) |

| | | |
|---------|--|---|
| SP01047 | Bleed Hydraulic Circuit | DMM (Doors Management Module) |
| SP01048 | MTA Proxi Configuration | DMM (Doors Management Module) |
| SP01049 | ECU Replacement With Value Transfer | DMM (Doors Management Module) |
| SP01050 | New Actuators | DMM (Doors Management Module) |
| SP01051 | Exit Shipping Mode | BCM (Body Control Module) |
| SP01052 | Read Proxi | BCM (Body Control Module) |
| SP01053 | Check Siren | BCM (Body Control Module) |
| SP01054 | Request Check | BCM (Body Control Module) |
| SP01055 | Lock Doors Command | BCM (Body Control Module) |
| SP01056 | Glass Washer Rear | BCM (Body Control Module) |
| SP01057 | Siren Command | BCM (Body Control Module) |
| SP01058 | Unlock Doors Command | BCM (Body Control Module) |
| SP01059 | Wind Shield Washer | BCM (Body Control Module) |
| SP01060 | Impone AF Gasoline | ECM (Engine Control Module) |
| SP01061 | Impone AF Learning | ECM (Engine Control Module) |
| SP01062 | Reset Adaptative Parameter | ECM (Engine Control Module) |
| SP01063 | Vehicle Configuration Reset | ECM (Engine Control Module) |
| SP01064 | Self Learning Throttle Body Activation | ECM (Engine Control Module) |
| SP01065 | General Stop Actuator | ECM (Engine Control Module) |
| SP01066 | Impone AF Alcool | ECM (Engine Control Module) |
| SP01067 | ECM Proxi Alignment | ECM (Engine Control Module) |
| SP01068 | Reset Functions Self Learned | TCM (Transmission Control Module) |
| SP01069 | Disabling All Actuators | TCM (Transmission Control Module) |
| SP01070 | Shutdown Actuators | TCM (Transmission Control Module) |
| SP01071 | Learn Clutches Contact Point | TCM (Transmission Control Module) |
| SP01072 | Quick Learn | TCM (Transmission Control Module) |
| SP01073 | Hydraulic Circuit Depressurization | TCM (Transmission Control Module) |
| SP01074 | Bleed Hydraulic Circuit | TCM (Transmission Control Module) |
| SP01075 | MTA Proxi Configuration | TCM (Transmission Control Module) |
| SP01076 | ECU Replacement With Value Transfer | TCM (Transmission Control Module) |
| SP01077 | New Actuators | TCM (Transmission Control Module) |
| SP01078 | BSM Proxi Alignment | ABS (Anti-Lock Braking System) |
| SP01079 | ORC Proxi Alignment | SRS (Supplemental Inflatable Restraint System, ORC) |
| SP01080 | Oil Service Reset | IC (Instrument Cluster) |
| SP01081 | Reset Functions Self Learned | DMM (Doors Management Module) |

| | | |
|---------|---|---|
| SP01082 | Disabling All Actuators | DMM (Doors Management Module) |
| SP01083 | Shutdown Actuators | DMM (Doors Management Module) |
| SP01084 | Learn Clutches Contact Point | DMM (Doors Management Module) |
| SP01085 | Quick Learn | DMM (Doors Management Module) |
| SP01086 | Hydraulic Circuit Depressurization | DMM (Doors Management Module) |
| SP01087 | Bleed Hydraulic Circuit | DMM (Doors Management Module) |
| SP01088 | MTA Proxi Configuration | DMM (Doors Management Module) |
| SP01089 | ECU Replacement With Value Transfer | DMM (Doors Management Module) |
| SP01090 | New Actuators | DMM (Doors Management Module) |
| SP01091 | Exit Shipping Mode | BCM (Body Control Module) |
| SP01092 | Read Proxi | BCM (Body Control Module) |
| SP01093 | Check Siren | BCM (Body Control Module) |
| SP01094 | Request Check | BCM (Body Control Module) |
| SP01095 | Lock Doors Command | BCM (Body Control Module) |
| SP01096 | Glass Washer Rear | BCM (Body Control Module) |
| SP01097 | Siren Command | BCM (Body Control Module) |
| SP01098 | Unlock Doors Command | BCM (Body Control Module) |
| SP01099 | Wind Shield Washer | BCM (Body Control Module) |
| SP01100 | Deactivation Of The Power Limitation Function | ECM (Engine Control Module) |
| SP01101 | Fan Cooling Activation | ECM (Engine Control Module) |
| SP01102 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP01103 | Self-Learnt Functions Reset | ECM (Engine Control Module) |
| SP01104 | Gearbox Replacement | TCM (Transmission Control Module) |
| SP01105 | Lever Release Solenoid Command | TCM (Transmission Control Module) |
| SP01106 | Static Test | ABS (Anti-Lock Braking System) |
| SP01107 | Trailer Hook Presence Disabling | PAM (Parking Aid Module) |
| SP01108 | Trailer Hook Presence Enabling | PAM (Parking Aid Module) |
| SP01109 | Reset Odometer | IC (Instrument Cluster) |
| SP01110 | Reset Service Information | IC (Instrument Cluster) |
| SP01111 | Disable Seat Belts Reminder | IC (Instrument Cluster) |
| SP01112 | Enable Seat Belts Reminder | IC (Instrument Cluster) |
| SP01113 | Last Service Date | IC (Instrument Cluster) |
| SP01114 | Actuator Calibration Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP01115 | Fire Protection System Activate | BCM (Body Control Module) |
| SP01116 | Fire Protection System Activate | BCM (Body Control Module) |

| | | |
|---------|---|---|
| SP01117 | Reset Adaptative Parameters | PCM (Powertrain Control Module) |
| SP01118 | Reset Phases Front | PCM (Powertrain Control Module) |
| SP01119 | Self Learning Throttle Body | PCM (Powertrain Control Module) |
| SP01120 | Tunnel Lever Replacement | TCM (Transmission Control Module) |
| SP01121 | Pump Relay Replacement | TCM (Transmission Control Module) |
| SP01122 | Self-Learnt Functions Reset | TCM (Transmission Control Module) |
| SP01123 | Static Test | ABS (Anti-Lock Braking System) |
| SP01124 | Enable Tow Hook Presence | PTS (Parktronics) |
| SP01125 | Disable Tow Hook Presence | PTS (Parktronics) |
| SP01126 | Reset Odometer | IC (Instrument Cluster) |
| SP01127 | Reset Service Information | IC (Instrument Cluster) |
| SP01128 | Disable Seat Belts Reminder | IC (Instrument Cluster) |
| SP01129 | Last Service Date | IC (Instrument Cluster) |
| SP01130 | Enable Seat Belts Reminder | IC (Instrument Cluster) |
| SP01131 | Flap Actuators Learning Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP01132 | Injector Codes Read | ECM (Engine Control Module) |
| SP01133 | Rail Pressure Sensor Replacement | ECM (Engine Control Module) |
| SP01134 | Phonic Wheel Replacement | ECM (Engine Control Module) |
| SP01135 | Replacement Lambda Sensor | ECM (Engine Control Module) |
| SP01136 | Cylinder 1 Injector Replacement | ECM (Engine Control Module) |
| SP01137 | Cylinder 2 Injector Replacement | ECM (Engine Control Module) |
| SP01138 | Cylinder 3 Injector Replacement | ECM (Engine Control Module) |
| SP01139 | Injector Replacement (Per Bank) | ECM (Engine Control Module) |
| SP01140 | Rail Pressure Sensor And Injector/S Replacement | ECM (Engine Control Module) |
| SP01141 | Self-Learnt Functions Reset | ECM (Engine Control Module) |
| SP01142 | Tunnel Lever Replacement | TCM (Transmission Control Module) |
| SP01143 | Levers At Wheel Replacement | TCM (Transmission Control Module) |
| SP01144 | Pump Relay Replacement | TCM (Transmission Control Module) |
| SP01145 | Self-Learnt Functions Reset | TCM (Transmission Control Module) |
| SP01146 | Longitudinal And Lateral Sensor Decalibration | ABS (Anti-Lock Braking System) |
| SP01147 | Longitudinal And Lateral Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP01148 | Static Test | ABS (Anti-Lock Braking System) |
| SP01149 | Alarms Deletion | TPMS (Tire Pressure Monitoring System) |
| SP01150 | Antenna Replacement | TPMS (Tire Pressure Monitoring System) |
| SP01151 | Control Unit Activation | TPMS (Tire Pressure Monitoring System) |

| | | |
|---------|---|---|
| SP01152 | Control Unit Deactivation | TPMS (Tire Pressure Monitoring System) |
| SP01153 | Manual System Configuration | TPMS (Tire Pressure Monitoring System) |
| SP01154 | Automatic Configuration Read | TPMS (Tire Pressure Monitoring System) |
| SP01155 | Wheel Transmitters Learning | TPMS (Tire Pressure Monitoring System) |
| SP01156 | Automatic Configuration Write | TPMS (Tire Pressure Monitoring System) |
| SP01157 | Trailer Hook Presence Disabling | PAM (Parking Aid Module) |
| SP01158 | Trailer Hook Presence Enabling | PAM (Parking Aid Module) |
| SP01159 | Enable Seat Belts Reminder | IC (Instrument Cluster) |
| SP01160 | Disable Seat Belts Reminder | IC (Instrument Cluster) |
| SP01161 | Reset Odometer | IC (Instrument Cluster) |
| SP01162 | Reset Service Information | IC (Instrument Cluster) |
| SP01163 | Last Service Date | IC (Instrument Cluster) |
| SP01164 | Self Learning Motor Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP01165 | ECU Restart Routine | CTM (Convergence Telematic Module) |
| SP01166 | Fire Protection System Activate | BCM (Body Control Module) |
| SP01167 | Fuel Circuit Purge | ECM (Engine Control Module) |
| SP01168 | General Stop Actuator | ECM (Engine Control Module) |
| SP01169 | Reset Adaptative Parameter | ECM (Engine Control Module) |
| SP01170 | Reset Purge Fuel Circuit | ECM (Engine Control Module) |
| SP01171 | Reset Phonic Wheel Tooth Learn | ECM (Engine Control Module) |
| SP01172 | Reset Camshaft Adaptative | ECM (Engine Control Module) |
| SP01173 | Cam Crank Relearn | PCM (Powertrain Control Module) |
| SP01174 | Check PCM Odometer | PCM (Powertrain Control Module) |
| SP01175 | FCM Enable Emissions Rolls Test Mode | PCM (Powertrain Control Module) |
| SP01176 | Quicklearn (62TE) | PCM (Powertrain Control Module) |
| SP01177 | Quicklearn (Non-RFE) | PCM (Powertrain Control Module) |
| SP01178 | Reset Memory | PCM (Powertrain Control Module) |
| SP01179 | Clear Engine Auto Restart Crank Counter | PCM (Powertrain Control Module) |
| SP01180 | Cooled EGR H-Bridge Valve System Test | PCM (Powertrain Control Module) |
| SP01181 | Reset Enhanced Automatic Oil Change Indicator | PCM (Powertrain Control Module) |
| SP01182 | Enable Engine Idle Shutdown Feature | PCM (Powertrain Control Module) |
| SP01183 | EGR System Test | PCM (Powertrain Control Module) |
| SP01184 | ETC Throttle Follower Test | PCM (Powertrain Control Module) |
| SP01185 | Set Engine RPM | PCM (Powertrain Control Module) |
| SP01186 | Shift Lever Position Test (62TE) | PCM (Powertrain Control Module) |

| | | |
|---------|---|----------------------------------|
| SP01187 | Shift Lever Position Test (Non-RFE) | PCM (Powertrain Control Module) |
| SP01188 | Clear TPM Sensor Audit | RFH (Radio Frequency Hub) |
| SP01189 | Clear TPM Sensor Warnings | RFH (Radio Frequency Hub) |
| SP01190 | Trailer Hook Presence Disabling | PAM (Parking Aid Module) |
| SP01191 | Trailer Hook Presence Enabling | PAM (Parking Aid Module) |
| SP01192 | Reset Odometer | IPC (Instrument Panel Cluster) |
| SP01193 | Self Learning Motors Test | HVAC (Heat, Ventilation And A/C) |
| SP01194 | Proxi Alignment Procedure | ESM (Electronic Shifter Module) |
| SP01195 | Factory VIN code lock | ESM (Electronic Shifter Module) |
| SP01196 | Steering Angle Sensor | EPS (Electric Power Steering) |
| SP01197 | Driver Mirror Axis X Command | DMM (Doors Management Module) |
| SP01198 | Driver Mirror Axis Y Command | DMM (Doors Management Module) |
| SP01199 | Fire Protection System Activate | BCM (Body Control Module) |
| SP01200 | Lock Doors Command | BCM (Body Control Module) |
| SP01201 | Unlock Doors Command | BCM (Body Control Module) |
| SP01202 | Check Siren | BCM (Body Control Module) |
| SP01203 | Siren Command | BCM (Body Control Module) |
| SP01204 | Cargo Unlock Relay | BCM (Body Control Module) |
| SP01205 | Cargo Lock Relay | BCM (Body Control Module) |
| SP01206 | Fuel Circuit Purge | ECM (Engine Control Module) |
| SP01207 | General Stop Actuator | ECM (Engine Control Module) |
| SP01208 | Reset Adaptative Parameter | ECM (Engine Control Module) |
| SP01209 | Reset Purge Fuel Circuit | ECM (Engine Control Module) |
| SP01210 | Reset Phonic Wheel Tooth Learn | ECM (Engine Control Module) |
| SP01211 | Reset Camshaft Adaptative | ECM (Engine Control Module) |
| SP01212 | Cam Crank Relearn | PCM (Powertrain Control Module) |
| SP01213 | Check PCM Odometer | PCM (Powertrain Control Module) |
| SP01214 | FCM Enable Emissions Rolls Test Mode | PCM (Powertrain Control Module) |
| SP01215 | Quicklearn (62TE) | PCM (Powertrain Control Module) |
| SP01216 | Quicklearn (Non-RFE) | PCM (Powertrain Control Module) |
| SP01217 | Reset Memory | PCM (Powertrain Control Module) |
| SP01218 | Clear Engine Auto Restart Crank Counter | PCM (Powertrain Control Module) |
| SP01219 | Cooled EGR H-Bridge Valve System Test | PCM (Powertrain Control Module) |
| SP01220 | Reset Enhanced Automatic Oil Change Indicator | PCM (Powertrain Control Module) |
| SP01221 | Enable Engine Idle Shutdown Feature | PCM (Powertrain Control Module) |

| | | |
|---------|--------------------------------------|----------------------------------|
| SP01222 | EGR System Test | PCM (Powertrain Control Module) |
| SP01223 | ETC Throttle Follower Test | PCM (Powertrain Control Module) |
| SP01224 | Set Engine RPM | PCM (Powertrain Control Module) |
| SP01225 | Shift Lever Position Test (62TE) | PCM (Powertrain Control Module) |
| SP01226 | Shift Lever Position Test (Non-RFE) | PCM (Powertrain Control Module) |
| SP01227 | Clear TPM Sensor Audit | RFH (Radio Frequency Hub) |
| SP01228 | Clear TPM Sensor Warnings | RFH (Radio Frequency Hub) |
| SP01229 | Trailer Hook Presence Disabling | PAM (Parking Aid Module) |
| SP01230 | Trailer Hook Presence Enabling | PAM (Parking Aid Module) |
| SP01231 | Reset Odometer | IPC (Instrument Panel Cluster) |
| SP01232 | Self Learning Motors Test | HVAC (Heat, Ventilation And A/C) |
| SP01233 | Proxi Alignment Procedure | ESM (Electronic Shifter Module) |
| SP01234 | Factory VIN code lock | ESM (Electronic Shifter Module) |
| SP01235 | Steering Angle Sensor | EPS (Electric Power Steering) |
| SP01236 | Driver Mirror Axis X Command | DMM (Doors Management Module) |
| SP01237 | Driver Mirror Axis Y Command | DMM (Doors Management Module) |
| SP01238 | Fire Protection System Activate | BCM (Body Control Module) |
| SP01239 | Lock Doors Command | BCM (Body Control Module) |
| SP01240 | Unlock Doors Command | BCM (Body Control Module) |
| SP01241 | Check Siren | BCM (Body Control Module) |
| SP01242 | Siren Command | BCM (Body Control Module) |
| SP01243 | Cargo Unlock Relay | BCM (Body Control Module) |
| SP01244 | Cargo Lock Relay | BCM (Body Control Module) |
| SP01245 | Fuel Circuit Purge | ECM (Engine Control Module) |
| SP01246 | General Stop Actuator | ECM (Engine Control Module) |
| SP01247 | Reset Adaptative Parameter | ECM (Engine Control Module) |
| SP01248 | Reset Purge Fuel Circuit | ECM (Engine Control Module) |
| SP01249 | Reset Phonic Wheel Tooth Learn | ECM (Engine Control Module) |
| SP01250 | Reset Camshaft Adaptative | ECM (Engine Control Module) |
| SP01251 | Cam Crank Relearn | PCM (Powertrain Control Module) |
| SP01252 | Check PCM Odometer | PCM (Powertrain Control Module) |
| SP01253 | FCM Enable Emissions Rolls Test Mode | PCM (Powertrain Control Module) |
| SP01254 | Quicklearn (62TE) | PCM (Powertrain Control Module) |
| SP01255 | Quicklearn (Non-RFE) | PCM (Powertrain Control Module) |
| SP01256 | Reset Memory | PCM (Powertrain Control Module) |

| | | |
|---------|---|----------------------------------|
| SP01257 | Clear Engine Auto Restart Crank Counter | PCM (Powertrain Control Module) |
| SP01258 | Cooled EGR H-Bridge Valve System Test | PCM (Powertrain Control Module) |
| SP01259 | Reset Enhanced Automatic Oil Change Indicator | PCM (Powertrain Control Module) |
| SP01260 | Enable Engine Idle Shutdown Feature | PCM (Powertrain Control Module) |
| SP01261 | EGR System Test | PCM (Powertrain Control Module) |
| SP01262 | ETC Throttle Follower Test | PCM (Powertrain Control Module) |
| SP01263 | Set Engine RPM | PCM (Powertrain Control Module) |
| SP01264 | Shift Lever Position Test (62TE) | PCM (Powertrain Control Module) |
| SP01265 | Shift Lever Position Test (Non-RFE) | PCM (Powertrain Control Module) |
| SP01266 | Clear TPM Sensor Audit | RFH (Radio Frequency Hub) |
| SP01267 | Clear TPM Sensor Warnings | RFH (Radio Frequency Hub) |
| SP01268 | Auto Door Lock | RBSS (Right Blind Spot Sensor) |
| SP01269 | Program Tire Size | RBSS (Right Blind Spot Sensor) |
| SP01270 | Exit Shipping Mode | RBSS (Right Blind Spot Sensor) |
| SP01271 | Trailer Hook Presence Disabling | PAM (Parking Aid Module) |
| SP01272 | Trailer Hook Presence Enabling | PAM (Parking Aid Module) |
| SP01273 | Reset Odometer | IPC (Instrument Panel Cluster) |
| SP01274 | Self Learning Motors Test | HVAC (Heat, Ventilation And A/C) |
| SP01275 | Proxi Alignment Procedure | ESM (Electronic Shifter Module) |
| SP01276 | Factory VIN code lock | ESM (Electronic Shifter Module) |
| SP01277 | Steering Angle Sensor | EPS (Electric Power Steering) |
| SP01278 | Driver Mirror Axis X Command | DMM (Doors Management Module) |
| SP01279 | Driver Mirror Axis Y Command | DMM (Doors Management Module) |
| SP01280 | Fire Protection System Activate | BCM (Body Control Module) |
| SP01281 | Lock Doors Command | BCM (Body Control Module) |
| SP01282 | Unlock Doors Command | BCM (Body Control Module) |
| SP01283 | Check Siren | BCM (Body Control Module) |
| SP01284 | Siren Command | BCM (Body Control Module) |
| SP01285 | Cargo Unlock Relay | BCM (Body Control Module) |
| SP01286 | Cargo Lock Relay | BCM (Body Control Module) |
| SP01287 | Cam Crank Relearn | PCM (Powertrain Control Module) |
| SP01288 | Check PCM Odometer | PCM (Powertrain Control Module) |
| SP01289 | FCM Enable Emissions Rolls Test Mode | PCM (Powertrain Control Module) |
| SP01290 | Quicklearn (62TE) | PCM (Powertrain Control Module) |
| SP01291 | Quicklearn (Non-RFE) | PCM (Powertrain Control Module) |

| | | |
|---------|---|---|
| SP01292 | Reset Memory | PCM (Powertrain Control Module) |
| SP01293 | Clear Engine Auto Restart Crank Counter | PCM (Powertrain Control Module) |
| SP01294 | Cooled EGR H-Bridge Valve System Test | PCM (Powertrain Control Module) |
| SP01295 | Reset Enhanced Automatic Oil Change Indicator | PCM (Powertrain Control Module) |
| SP01296 | Enable Engine Idle Shutdown Feature | PCM (Powertrain Control Module) |
| SP01297 | EGR System Test | PCM (Powertrain Control Module) |
| SP01298 | ETC Throttle Follower Test | PCM (Powertrain Control Module) |
| SP01299 | Set Engine RPM | PCM (Powertrain Control Module) |
| SP01300 | Shift Lever Position Test (62TE) | PCM (Powertrain Control Module) |
| SP01301 | Shift Lever Position Test (Non-RFE) | PCM (Powertrain Control Module) |
| SP01302 | Fuel Circuit Purge | ECM (Engine Control Module) |
| SP01303 | General Stop Actuator | ECM (Engine Control Module) |
| SP01304 | Reset Adaptative Parameter | ECM (Engine Control Module) |
| SP01305 | Reset Purge Fuel Circuit | ECM (Engine Control Module) |
| SP01306 | Reset Phonic Wheel Tooth Learn | ECM (Engine Control Module) |
| SP01307 | Reset Camshaft Adaptative | ECM (Engine Control Module) |
| SP01308 | Clear Self Learning Data | TCM (Transmission Control Module) |
| SP01309 | Neutral Position Self-Learning | TCM (Transmission Control Module) |
| SP01310 | Clear TPM Sensor Audit | RFH (Radio Frequency Hub) |
| SP01311 | Clear TPM Sensor Warnings | RFH (Radio Frequency Hub) |
| SP01312 | Trailer Hook Presence Disabling | PAM (Parking Assistant Module) |
| SP01313 | Trailer Hook Presence Enabling | PAM (Parking Assistant Module) |
| SP01314 | Reset Service Information | IC (Instrument Cluster) |
| SP01315 | Self Learning Motors Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP01316 | Proxi Alignment Procedure | ESM (Electronic Shifter Module) |
| SP01317 | Factory VIN code lock | ESM (Electronic Shifter Module) |
| SP01318 | Steering Angle Sensor | EPS (Electric Power Steering) |
| SP01319 | Driver Mirror Axis X Command | DMM (Doors Management Module) |
| SP01320 | Driver Mirror Axis Y Command | DMM (Doors Management Module) |
| SP01321 | Exit Shipping Mode | BCM (Body Control Module) |
| SP01322 | Lock Doors Command | BCM (Body Control Module) |
| SP01323 | Unlock Doors Command | BCM (Body Control Module) |
| SP01324 | Siren Command | BCM (Body Control Module) |
| SP01325 | Fire Protection System Activate | BCM (Body Control Module) |
| SP01326 | Deactivation Of The Power Limitation Function | ECM (Engine Control Module) |

| | | |
|---------|--|---|
| SP01327 | Fan Cooling Activation | ECM (Engine Control Module) |
| SP01328 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP01329 | Self-Learnt Functions Reset | ECM (Engine Control Module) |
| SP01330 | Gearbox Replacement | TCM (Transmission Control Module) |
| SP01331 | Lever Release Solenoid Command | TCM (Transmission Control Module) |
| SP01332 | Static Test | ABS (Anti-Lock Braking System) |
| SP01333 | Trailer Hook Presence Disabling | PAM (Parking Aid Module) |
| SP01334 | Trailer Hook Presence Enabling | PAM (Parking Aid Module) |
| SP01335 | Reset Odometer | IC (Instrument Cluster) |
| SP01336 | Reset Service Information | IC (Instrument Cluster) |
| SP01337 | Disable Seat Belts Reminder | IC (Instrument Cluster) |
| SP01338 | Enable Seat Belts Reminder | IC (Instrument Cluster) |
| SP01339 | Last Service Date | IC (Instrument Cluster) |
| SP01340 | Actuator Calibration Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP01341 | Fire Protection System Activate | BCM (Body Control Module) |
| SP01342 | Cam Crank Relearn | PCM (Powertrain Control Module) |
| SP01343 | Check PCM Odometer | PCM (Powertrain Control Module) |
| SP01344 | Quicklearn (62TE) | PCM (Powertrain Control Module) |
| SP01345 | Quicklearn (Non-RFE) | PCM (Powertrain Control Module) |
| SP01346 | Reset Memory | PCM (Powertrain Control Module) |
| SP01347 | EGR System Test | PCM (Powertrain Control Module) |
| SP01348 | ETC Throttle Follower Test | PCM (Powertrain Control Module) |
| SP01349 | Set Engine RPM | PCM (Powertrain Control Module) |
| SP01350 | Shift Lever Position Test (62TE) | PCM (Powertrain Control Module) |
| SP01351 | Shift Lever Position Test (Non-RFE) | PCM (Powertrain Control Module) |
| SP01352 | ABS Initialization | ABS (Anti Lock Brakes) |
| SP01353 | Bleed Brakes | ABS (Anti Lock Brakes) |
| SP01354 | Activate Driver And Passenger Head Restraint | ORC (Occupant Restraint) |
| SP01355 | Program Tire Sensor ID With TPM Tool | WCM (Wireless Control) |
| SP01356 | Reset Odometer | PDM (Passenger Door Module) |
| SP01357 | Reset Service Information | PDM (Passenger Door Module) |
| SP01358 | Disable Seat Belts Reminder | PDM (Passenger Door Module) |
| SP01359 | Enable Seat Belts Reminder | PDM (Passenger Door Module) |
| SP01360 | Actuator Calibration Test | HVAC (Heat, Ventilation And A/C) |
| SP01361 | Auto Door Lock | CCN (Instrument Cluster/Cabin Compartment Node) |

| | | |
|---------|--|---|
| SP01362 | Auto Door Unlock | CCN (Instrument Cluster/Cabin Compartment Node) |
| SP01363 | Seatbelt Alert Minder | CCN (Instrument Cluster/Cabin Compartment Node) |
| SP01364 | Update Measurement Unit | CCN (Instrument Cluster/Cabin Compartment Node) |
| SP01365 | Seatbelt Alert Minder | CCN (Instrument Cluster/Cabin Compartment Node) |
| SP01366 | Self Test | CCN (Instrument Cluster/Cabin Compartment Node) |
| SP01367 | Cam Crank Relearn | PCM (Powertrain Control Module) |
| SP01368 | Check PCM Odometer | PCM (Powertrain Control Module) |
| SP01369 | Quicklearn (62TE) | PCM (Powertrain Control Module) |
| SP01370 | Quicklearn (Non-RFE) | PCM (Powertrain Control Module) |
| SP01371 | Reset Memory | PCM (Powertrain Control Module) |
| SP01372 | EGR System Test | PCM (Powertrain Control Module) |
| SP01373 | ETC Throttle Follower Test | PCM (Powertrain Control Module) |
| SP01374 | Set Engine RPM | PCM (Powertrain Control Module) |
| SP01375 | Shift Lever Position Test (62TE) | PCM (Powertrain Control Module) |
| SP01376 | Shift Lever Position Test (Non-RFE) | PCM (Powertrain Control Module) |
| SP01377 | ABS Initialization | ABS (Anti Lock Brakes) |
| SP01378 | Bleed Brakes | ABS (Anti Lock Brakes) |
| SP01379 | Activate Driver And Passenger Head Restraint | ORC (Occupant Restraint) |
| SP01380 | Program Tire Sensor ID With TPM Tool | WCM (Wireless Control) |
| SP01381 | Reset Odometer | PDM (Passenger Door Module) |
| SP01382 | Reset Service Information | PDM (Passenger Door Module) |
| SP01383 | Disable Seat Belts Reminder | PDM (Passenger Door Module) |
| SP01384 | Enable Seat Belts Reminder | PDM (Passenger Door Module) |
| SP01385 | Actuator Calibration Test | HVAC (Heat, Ventilation And A/C) |
| SP01386 | Auto Door Lock | CCN (Instrument Cluster/Cabin Compartment Node) |
| SP01387 | Auto Door Unlock | CCN (Instrument Cluster/Cabin Compartment Node) |
| SP01388 | Seatbelt Alert Minder | CCN (Instrument Cluster/Cabin Compartment Node) |
| SP01389 | Update Measurement Unit | CCN (Instrument Cluster/Cabin Compartment Node) |
| SP01390 | Seatbelt Alert Minder | CCN (Instrument Cluster/Cabin Compartment Node) |
| SP01391 | Self Test | CCN (Instrument Cluster/Cabin Compartment Node) |
| SP01392 | Resetting Distance Travelled With Water In Diesel W.Lamp | ECM (Engine Control Module) |
| SP01393 | Resetting Distance Travelled With Water Temperature Warn | ECM (Engine Control Module) |
| SP01394 | Fan Cooling Activation | ECM (Engine Control Module) |
| SP01395 | Neutral Signal Learn | ECM (Engine Control Module) |
| SP01396 | Injector Codes Read | ECM (Engine Control Module) |

| | | |
|---------|--|-----------------------------------|
| SP01397 | Nox Replacement | ECM (Engine Control Module) |
| SP01398 | Factory VIN code lock | ECM (Engine Control Module) |
| SP01399 | Intelligent Alternator (IAM) Replacement | ECM (Engine Control Module) |
| SP01400 | Clutch Group And/Or Clutch Potentiometer Replacement | ECM (Engine Control Module) |
| SP01401 | Injector Replacement (Per Bank) | ECM (Engine Control Module) |
| SP01402 | Cylinder 1 Injector Replacement | ECM (Engine Control Module) |
| SP01403 | Cylinder 2 Injector Replacement | ECM (Engine Control Module) |
| SP01404 | Cylinder 3 Injector Replacement | ECM (Engine Control Module) |
| SP01405 | Replacement Lambda Sensor | ECM (Engine Control Module) |
| SP01406 | Oil Change | ECM (Engine Control Module) |
| SP01407 | Differential Pressure Sensor Replac. | ECM (Engine Control Module) |
| SP01408 | Rail Pressure Sensor Replacement | ECM (Engine Control Module) |
| SP01409 | Replacement Of EGR Valve | ECM (Engine Control Module) |
| SP01410 | EGR Low Pressure Valve Replacement | ECM (Engine Control Module) |
| SP01411 | Glow Plug Preheating Circuit Test | ECM (Engine Control Module) |
| SP01412 | EGR Valve Test | ECM (Engine Control Module) |
| SP01413 | EGR Low Pressure Valve Test | ECM (Engine Control Module) |
| SP01414 | Throttle Valve Test | ECM (Engine Control Module) |
| SP01415 | Proxi Alignment Procedure | ECM (Engine Control Module) |
| SP01416 | Proxi Alignment Procedure | TCM (Transmission Control Module) |
| SP01417 | ECU Substitution | ABS (Anti Lock Brakes) |
| SP01418 | Longitudinal And Lateral Sensor Calibration | ABS (Anti Lock Brakes) |
| SP01419 | Pressure Sensor Calibration | ABS (Anti Lock Brakes) |
| SP01420 | Power Down | RRM (Radio Receiver Module) |
| SP01421 | Power On And Disable User Inputs | RRM (Radio Receiver Module) |
| SP01422 | Reset Parameters To Default | RRM (Radio Receiver Module) |
| SP01423 | Clear TPM Sensor Audit | RFH (Radio Frequency Hub) |
| SP01424 | Clear TPM Sensor Warnings | RFH (Radio Frequency Hub) |
| SP01425 | Cam Crank Relearn | PCM (Powertrain Control Module) |
| SP01426 | Check PCM Odometer | PCM (Powertrain Control Module) |
| SP01427 | Cooled EGR H-Bridge Valve System Test | PCM (Powertrain Control Module) |
| SP01428 | Reset Enhanced Automatic Oil Change Indicator | PCM (Powertrain Control Module) |
| SP01429 | Write Pinion Factor | PCM (Powertrain Control Module) |
| SP01430 | Reset Learn Flag Wheel Tooth | PCM (Powertrain Control Module) |
| SP01431 | EGR System Test | PCM (Powertrain Control Module) |

| | | |
|---------|---|-----------------------------------|
| SP01432 | ETC Throttle Follower Test | PCM (Powertrain Control Module) |
| SP01433 | Set Engine RPM | PCM (Powertrain Control Module) |
| SP01434 | Shift Lever Position Test (62TE) | PCM (Powertrain Control Module) |
| SP01435 | Trailer Hook Presence Disabling | PAM (Parking Aid Module) |
| SP01436 | Trailer Hook Presence Enabling | PAM (Parking Aid Module) |
| SP01437 | Reset Service Information | IPC (Instrument Panel Cluster) |
| SP01438 | Reset Odometer | IPC (Instrument Panel Cluster) |
| SP01439 | Disable Seat Belts Reminder | IPC (Instrument Panel Cluster) |
| SP01440 | Enable Seat Belts Reminder | IPC (Instrument Panel Cluster) |
| SP01441 | Last Service Date | IPC (Instrument Panel Cluster) |
| SP01442 | Self Learning Motors Test | HVAC (Heat, Ventilation And A/C) |
| SP01443 | Proxi Alignment Procedure | ESM (Electronic Shifter Module) |
| SP01444 | Factory VIN code lock | ESM (Electronic Shifter Module) |
| SP01445 | Steering Angle Sensor | EPS (Electric Power Steering) |
| SP01446 | Factory VIN code lock | DTCM (Drive Train Control Module) |
| SP01447 | Proxi Alignment Procedure | DTCM (Drive Train Control Module) |
| SP01448 | Factory VIN code lock | CSWM (Comfort Seat Wheel Module) |
| SP01449 | Cam Crank Relearn | PCM (Powertrain Control Module) |
| SP01450 | Check PCM Odometer | PCM (Powertrain Control Module) |
| SP01451 | Cooled EGR H-Bridge Valve System Test | PCM (Powertrain Control Module) |
| SP01452 | Reset Enhanced Automatic Oil Change Indicator | PCM (Powertrain Control Module) |
| SP01453 | Write Pinion Factor | PCM (Powertrain Control Module) |
| SP01454 | Reset Learn Flag Wheel Tooth | PCM (Powertrain Control Module) |
| SP01455 | Enable Engine Idle Shutdown Feature | PCM (Powertrain Control Module) |
| SP01456 | EGR System Test | PCM (Powertrain Control Module) |
| SP01457 | ETC Throttle Follower Test | PCM (Powertrain Control Module) |
| SP01458 | Set Engine RPM | PCM (Powertrain Control Module) |
| SP01459 | Shift Lever Position Test (62TE) | PCM (Powertrain Control Module) |
| SP01460 | Reset Learned Adaptives | TCM (Transmission Control Module) |
| SP01461 | Store Learned Adaptives | TCM (Transmission Control Module) |
| SP01462 | ABS Bleed Brakes | ABS (Anti Lock Brakes) |
| SP01463 | Brake Pedal Calibration | ABS (Anti Lock Brakes) |
| SP01464 | Initialize ORC | ORC (Occupant Restraint) |
| SP01465 | Program Tire Sensor ID With TPM Tool | TPM (Tire Pressure Monitor) |
| SP01466 | System Wiring Test | PTS (Parktronics) |

| | | |
|---------|---|---------------------------------------|
| SP01467 | Enable/Disable Seatbelt Minder | IPC (Instrument Panel Cluster) |
| SP01468 | Program Left Front Tire Sensor ID | ESM (Electronic Shifter Module) |
| SP01469 | Program Left Rear Tire Sensor ID | ESM (Electronic Shifter Module) |
| SP01470 | Program Right Front Tire Sensor ID | ESM (Electronic Shifter Module) |
| SP01471 | Program Right Rear Tire Sensor ID | ESM (Electronic Shifter Module) |
| SP01472 | Sensor Rolls Test | ESM (Electronic Shifter Module) |
| SP01473 | AFLS Calibration | AFLS (Adaptive Front Lighting System) |
| SP01474 | Cam Crank Relearn | PCM (Powertrain Control Module) |
| SP01475 | Check PCM Odometer | PCM (Powertrain Control Module) |
| SP01476 | Quicklearn (62TE) | PCM (Powertrain Control Module) |
| SP01477 | Reset Memory | PCM (Powertrain Control Module) |
| SP01478 | Clear Engine Auto Restart Crank Counter | PCM (Powertrain Control Module) |
| SP01479 | Cooled EGR H-Bridge Valve System Test | PCM (Powertrain Control Module) |
| SP01480 | Reset Enhanced Automatic Oil Change Indicator | PCM (Powertrain Control Module) |
| SP01481 | EGR System Test | PCM (Powertrain Control Module) |
| SP01482 | ETC Throttle Follower Test | PCM (Powertrain Control Module) |
| SP01483 | Set Engine RPM | PCM (Powertrain Control Module) |
| SP01484 | Shift Lever Position Test (62TE) | PCM (Powertrain Control Module) |
| SP01485 | ABS Bleed Brakes | ABS (Anti Lock Brakes) |
| SP01486 | Brake Pedal Calibration | ABS (Anti Lock Brakes) |
| SP01487 | Initialize ORC | ORC (Occupant Restraint) |
| SP01488 | Program Left Front Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01489 | Program Left Rear Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01490 | Program Right Front Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01491 | Program Right Rear Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01492 | Program Tire Sensor ID With TPM Tool | TPM (Tire Pressure Monitor) |
| SP01493 | Activate TPM High Gain Mode | TPM (Tire Pressure Monitor) |
| SP01494 | TPM Sensor Position Parameter Update | TPM (Tire Pressure Monitor) |
| SP01495 | Sensor Rolls Test | TPM (Tire Pressure Monitor) |
| SP01496 | System Wiring Test | PTS (Parktronics) |
| SP01497 | Enable/Disable Seatbelt Minder | IPC (Instrument Panel Cluster) |
| SP01498 | Program Left Front Tire Sensor ID | ESM (Electronic Shifter Module) |
| SP01499 | Program Left Rear Tire Sensor ID | ESM (Electronic Shifter Module) |
| SP01500 | Program Right Front Tire Sensor ID | ESM (Electronic Shifter Module) |
| SP01501 | Program Right Rear Tire Sensor ID | ESM (Electronic Shifter Module) |

| | | |
|---------|---|---------------------------------------|
| SP01502 | Sensor Rolls Test | ESM (Electronic Shifter Module) |
| SP01503 | AFLS Calibration | AFLS (Adaptive Front Lighting System) |
| SP01504 | Cam Crank Relearn | PCM (Powertrain Control Module) |
| SP01505 | Check PCM Odometer | PCM (Powertrain Control Module) |
| SP01506 | Quicklearn (62TE) | PCM (Powertrain Control Module) |
| SP01507 | Quicklearn (Non-RFE) | PCM (Powertrain Control Module) |
| SP01508 | Reset Memory | PCM (Powertrain Control Module) |
| SP01509 | Cooled EGR H-Bridge Valve System Test | PCM (Powertrain Control Module) |
| SP01510 | Reset Enhanced Automatic Oil Change Indicator | PCM (Powertrain Control Module) |
| SP01511 | Write Pinion Factor | PCM (Powertrain Control Module) |
| SP01512 | EGR System Test | PCM (Powertrain Control Module) |
| SP01513 | ETC Throttle Follower Test | PCM (Powertrain Control Module) |
| SP01514 | Set Engine RPM | PCM (Powertrain Control Module) |
| SP01515 | Shift Lever Position Test (62TE) | PCM (Powertrain Control Module) |
| SP01516 | Shift Lever Position Test (Non-RFE) | PCM (Powertrain Control Module) |
| SP01517 | Reset Adaptive Values | TCM (Transmission Control Module) |
| SP01518 | ABS Bleed Brakes | ABS (Anti Lock Brakes) |
| SP01519 | Brake Pedal Calibration | ABS (Anti Lock Brakes) |
| SP01520 | Initialize ORC | ORC (Occupant Restraint) |
| SP01521 | Program Left Front Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01522 | Program Left Rear Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01523 | Program Right Front Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01524 | Program Right Rear Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01525 | Program Tire Sensor ID With TPM Tool | TPM (Tire Pressure Monitor) |
| SP01526 | Sensor Rolls Test | TPM (Tire Pressure Monitor) |
| SP01527 | Configure License Plate Size | PTS (Parktronics) |
| SP01528 | System Wiring Test | PTS (Parktronics) |
| SP01529 | Disable/Enable Seatbelt Minder Chime | IPC (Instrument Panel Cluster) |
| SP01530 | Auto Door Lock | BCM (Body Control Module) |
| SP01531 | Program Tire Size | BCM (Body Control Module) |
| SP01532 | Exit Shipping Mode | BCM (Body Control Module) |
| SP01533 | AFLS Calibration | AFLS (Adaptive Front Lighting System) |
| SP01534 | Air Flow Meter Replacement | PCM (Powertrain Control Module) |
| SP01535 | DPF Reset Option | PCM (Powertrain Control Module) |
| SP01536 | Lambda Sensor Replace | PCM (Powertrain Control Module) |

| | | |
|---------|--|---------------------------------------|
| SP01537 | Reset Of Lambda Values | PCM (Powertrain Control Module) |
| SP01538 | Reset Oil Change Indicator | PCM (Powertrain Control Module) |
| SP01539 | Reset Zero Fuel Quantity Calibration | PCM (Powertrain Control Module) |
| SP01540 | Service Diesel Particulate Filter Regeneration | PCM (Powertrain Control Module) |
| SP01541 | Throttle Valve Learn | PCM (Powertrain Control Module) |
| SP01542 | Reset Adaptive Values | TCM (Transmission Control Module) |
| SP01543 | ABS Bleed Brakes | ABS (Anti Lock Brakes) |
| SP01544 | Brake Pedal Calibration | ABS (Anti Lock Brakes) |
| SP01545 | Initialize ORC | ORC (Occupant Restraint) |
| SP01546 | Program Left Front Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01547 | Program Left Rear Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01548 | Program Right Front Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01549 | Program Right Rear Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01550 | Program Tire Sensor ID With TPM Tool | TPM (Tire Pressure Monitor) |
| SP01551 | Sensor Rolls Test | TPM (Tire Pressure Monitor) |
| SP01552 | Configure License Plate Size | PTS (Parktronics) |
| SP01553 | System Wiring Test | PTS (Parktronics) |
| SP01554 | Disable/Enable Seatbelt Minder Chime | IPC (Instrument Panel Cluster) |
| SP01555 | Auto Door Lock | BCM (Body Control Module) |
| SP01556 | Program Tire Size | BCM (Body Control Module) |
| SP01557 | Exit Shipping Mode | BCM (Body Control Module) |
| SP01558 | AFLS Calibration | AFLS (Adaptive Front Lighting System) |
| SP01559 | Air Flow Meter Replacement | PCM (Powertrain Control Module) |
| SP01560 | DPF Reset Option | PCM (Powertrain Control Module) |
| SP01561 | Lambda Sensor Replace | PCM (Powertrain Control Module) |
| SP01562 | Reset Of Lambda Values | PCM (Powertrain Control Module) |
| SP01563 | Reset Oil Change Indicator | PCM (Powertrain Control Module) |
| SP01564 | Reset Zero Fuel Quantity Calibration | PCM (Powertrain Control Module) |
| SP01565 | Service Diesel Particulate Filter Regeneration | PCM (Powertrain Control Module) |
| SP01566 | Throttle Valve Learn | PCM (Powertrain Control Module) |
| SP01567 | Reset Adaptive Values | TCM (Transmission Control Module) |
| SP01568 | ABS Bleed Brakes | ABS (Anti Lock Brakes) |
| SP01569 | Brake Pedal Calibration | ABS (Anti Lock Brakes) |
| SP01570 | Initialize ORC | ORC (Occupant Restraint) |
| SP01571 | Program Left Front Tire Sensor ID | TPM (Tire Pressure Monitor) |

| | | |
|---------|--|---------------------------------------|
| SP01572 | Program Left Rear Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01573 | Program Right Front Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01574 | Program Right Rear Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01575 | Program Tire Sensor ID With TPM Tool | TPM (Tire Pressure Monitor) |
| SP01576 | Sensor Rolls Test | TPM (Tire Pressure Monitor) |
| SP01577 | Configure License Plate Size | PTS (Parktronics) |
| SP01578 | System Wiring Test | PTS (Parktronics) |
| SP01579 | Disable/Enable Seatbelt Minder Chime | IPC (Instrument Panel Cluster) |
| SP01580 | Auto Door Lock | BCM (Body Control Module) |
| SP01581 | Program Tire Size | BCM (Body Control Module) |
| SP01582 | Exit Shipping Mode | BCM (Body Control Module) |
| SP01583 | AFLS Calibration | AFLS (Adaptive Front Lighting System) |
| SP01584 | Lambda Sensor 1 Initialization | PCM (Powertrain Control Module) |
| SP01585 | Service Diesel Particulate Filter Regeneration | PCM (Powertrain Control Module) |
| SP01586 | Rail Pressure Control Switchover | PCM (Powertrain Control Module) |
| SP01587 | Diesel Particulate Filter Replacement | PCM (Powertrain Control Module) |
| SP01588 | Request Anti-Slugging For Air Condition Compressor | PCM (Powertrain Control Module) |
| SP01589 | Lambda Sensor 1 Initialization | PCM (Powertrain Control Module) |
| SP01590 | Service Diesel Particulate Filter Regeneration | PCM (Powertrain Control Module) |
| SP01591 | Rail Pressure Control Switchover | PCM (Powertrain Control Module) |
| SP01592 | Diesel Particulate Filter Replacement | PCM (Powertrain Control Module) |
| SP01593 | Request Anti-Slugging For Air Condition Compressor | PCM (Powertrain Control Module) |
| SP01594 | ABS Bleed Brakes | ABS (Anti Lock Brakes) |
| SP01595 | Initialize ORC | ORC (Occupant Restraint) |
| SP01596 | Activate Driver And Passenger Head Restraint | ORC (Occupant Restraint) |
| SP01597 | Reset WIN Configuration | WCM (Wireless Control) |
| SP01598 | Program Tire Sensor ID With TPM Tool | WCM (Wireless Control) |
| SP01599 | Program Left Front Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01600 | Program Left Rear Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01601 | Program Right Front Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01602 | Program Right Rear Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01603 | Turn Off Gain Mode Override | TPM (Tire Pressure Monitor) |
| SP01604 | Program Tire Sensor ID With TPM Tool | TPM (Tire Pressure Monitor) |
| SP01605 | TPM Sensor Rolls Test | TPM (Tire Pressure Monitor) |
| SP01606 | Auto Wipers | TIPMCGW (Central Gateway) |

| | | |
|---------|--|---|
| SP01607 | Auto Door Lock | TIPMCGW (Central Gateway) |
| SP01608 | Auto Door Unlock | TIPMCGW (Central Gateway) |
| SP01609 | Configure License Plate Size | PTS (Parktronics) |
| SP01610 | System Wiring Test | PTS (Parktronics) |
| SP01611 | Actuate Drive Clutch Engage | PSDMR (Power Sliding Doors (Right)) |
| SP01612 | Sliding Door Close Test | PSDMR (Power Sliding Doors (Right)) |
| SP01613 | Sliding Door Open Test | PSDMR (Power Sliding Doors (Right)) |
| SP01614 | Actuate Drive Clutch Engage | PSDML (Power Sliding Doors (Left)) |
| SP01615 | Sliding Door Close Test | PSDML (Power Sliding Doors (Left)) |
| SP01616 | Sliding Door Open Test | PSDML (Power Sliding Doors (Left)) |
| SP01617 | ITM Initialize Siren | ITM (Intrusion) |
| SP01618 | Actuator Calibration Test | HVAC (Heat, Ventilation And A/C) |
| SP01619 | Heated Steering Wheel Configuration | HSM (Heated Seat Module) |
| SP01620 | Update Measurement Unit | CCN (Instrument Cluster/Cabin Compartment Node) |
| SP01621 | Seatbelt Alert Minder | CCN (Instrument Cluster/Cabin Compartment Node) |
| SP01622 | Self Test | CCN (Instrument Cluster/Cabin Compartment Node) |
| SP01623 | Lambda Sensor 1 Initialization | PCM (Powertrain Control Module) |
| SP01624 | Service Diesel Particulate Filter Regeneration | PCM (Powertrain Control Module) |
| SP01625 | Rail Pressure Control Switchover | PCM (Powertrain Control Module) |
| SP01626 | Diesel Particulate Filter Replacement | PCM (Powertrain Control Module) |
| SP01627 | Request Anti-Slugging For Air Condition Compressor | PCM (Powertrain Control Module) |
| SP01628 | ABS Bleed Brakes | ABS (Anti Lock Brakes) |
| SP01629 | Initialize ORC | ORC (Occupant Restraint) |
| SP01630 | Activate Driver And Passenger Head Restraint | ORC (Occupant Restraint) |
| SP01631 | Reset WIN Configuration | WCM (Wireless Control) |
| SP01632 | Program Tire Sensor ID With TPM Tool | WCM (Wireless Control) |
| SP01633 | Program Left Front Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01634 | Program Left Rear Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01635 | Program Right Front Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01636 | Program Right Rear Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01637 | TPM Sensor Position Parameter Update | TPM (Tire Pressure Monitor) |
| SP01638 | Program Tire Sensor ID With TPM Tool | TPM (Tire Pressure Monitor) |
| SP01639 | TPM Sensor Rolls Test | TPM (Tire Pressure Monitor) |
| SP01640 | Auto Wipers | TIPMCGW (Central Gateway) |
| SP01641 | Auto Door Lock | TIPMCGW (Central Gateway) |

| | | |
|---------|--|---|
| SP01642 | Auto Door Unlock | TIPMCGW (Central Gateway) |
| SP01643 | Configure License Plate Size | PTS (Parktronics) |
| SP01644 | System Wiring Test | PTS (Parktronics) |
| SP01645 | Actuate Drive Clutch Engage | PSDMR (Power Sliding Doors (Right)) |
| SP01646 | Sliding Door Close Test | PSDMR (Power Sliding Doors (Right)) |
| SP01647 | Sliding Door Open Test | PSDMR (Power Sliding Doors (Right)) |
| SP01648 | Actuate Drive Clutch Engage | PSDML (Power Sliding Doors (Left)) |
| SP01649 | Sliding Door Close Test | PSDML (Power Sliding Doors (Left)) |
| SP01650 | Sliding Door Open Test | PSDML (Power Sliding Doors (Left)) |
| SP01651 | ITM Initialize Siren | ITM (Intrusion) |
| SP01652 | Actuator Calibration Test | HVAC (Heat, Ventilation And A/C) |
| SP01653 | Heated Steering Wheel Configuration | HSM (Heated Seat Module) |
| SP01654 | Update Measurement Unit | CCN (Instrument Cluster/Cabin Compartment Node) |
| SP01655 | Seatbelt Alert Minder | CCN (Instrument Cluster/Cabin Compartment Node) |
| SP01656 | Self Test | CCN (Instrument Cluster/Cabin Compartment Node) |
| SP01657 | Cam Crank Relearn | PCM (Powertrain Control Module) |
| SP01658 | Check PCM Odometer | PCM (Powertrain Control Module) |
| SP01659 | Quicklearn (62TE) | PCM (Powertrain Control Module) |
| SP01660 | Quicklearn (Non-RFE) | PCM (Powertrain Control Module) |
| SP01661 | Reset Memory | PCM (Powertrain Control Module) |
| SP01662 | EGR System Test | PCM (Powertrain Control Module) |
| SP01663 | ETC Throttle Follower Test | PCM (Powertrain Control Module) |
| SP01664 | Set Engine RPM | PCM (Powertrain Control Module) |
| SP01665 | Shift Lever Position Test (62TE) | PCM (Powertrain Control Module) |
| SP01666 | Shift Lever Position Test (Non-RFE) | PCM (Powertrain Control Module) |
| SP01667 | ABS Initialization | ABS (Anti Lock Brakes) |
| SP01668 | Bleed Brakes | ABS (Anti Lock Brakes) |
| SP01669 | Initialize ORC | ORC (Occupant Restraint) |
| SP01670 | Activate Driver And Passenger Head Restraint | ORC (Occupant Restraint) |
| SP01671 | Reset WIN Configuration | WCM (Wireless Control) |
| SP01672 | Program Tire Sensor ID With TPM Tool | WCM (Wireless Control) |
| SP01673 | Program Left Front Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01674 | Program Left Rear Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01675 | Program Right Front Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01676 | Program Right Rear Tire Sensor ID | TPM (Tire Pressure Monitor) |

| | | |
|---------|--|---|
| SP01677 | TPM Sensor Position Parameter Update | TPM (Tire Pressure Monitor) |
| SP01678 | Program Tire Sensor ID With TPM Tool | TPM (Tire Pressure Monitor) |
| SP01679 | TPM Sensor Rolls Test | TPM (Tire Pressure Monitor) |
| SP01680 | Auto Wipers | TIPMCGW (Central Gateway) |
| SP01681 | Auto Door Lock | TIPMCGW (Central Gateway) |
| SP01682 | Auto Door Unlock | TIPMCGW (Central Gateway) |
| SP01683 | Configure License Plate Size | PTS (Parktronics) |
| SP01684 | System Wiring Test | PTS (Parktronics) |
| SP01685 | Actuate Drive Clutch Engage | PSDMR (Power Sliding Doors (Right)) |
| SP01686 | Sliding Door Close Test | PSDMR (Power Sliding Doors (Right)) |
| SP01687 | Sliding Door Open Test | PSDMR (Power Sliding Doors (Right)) |
| SP01688 | Actuate Drive Clutch Engage | PSDML (Power Sliding Doors (Left)) |
| SP01689 | Sliding Door Close Test | PSDML (Power Sliding Doors (Left)) |
| SP01690 | Sliding Door Open Test | PSDML (Power Sliding Doors (Left)) |
| SP01691 | ITM Initialize Siren | ITM (Intrusion) |
| SP01692 | Heated Steering Wheel Configuration | HSM (Heated Seat Module) |
| SP01693 | Update Measurement Unit | CCN (Instrument Cluster/Cabin Compartment Node) |
| SP01694 | Seatbelt Alert Minder | CCN (Instrument Cluster/Cabin Compartment Node) |
| SP01695 | Self Test | CCN (Instrument Cluster/Cabin Compartment Node) |
| SP01696 | Cam Crank Relearn | PCM (Powertrain Control Module) |
| SP01697 | Check PCM Odometer | PCM (Powertrain Control Module) |
| SP01698 | Quicklearn (62TE) | PCM (Powertrain Control Module) |
| SP01699 | Quicklearn (Non-RFE) | PCM (Powertrain Control Module) |
| SP01700 | Reset Memory | PCM (Powertrain Control Module) |
| SP01701 | EGR System Test | PCM (Powertrain Control Module) |
| SP01702 | ETC Throttle Follower Test | PCM (Powertrain Control Module) |
| SP01703 | Set Engine RPM | PCM (Powertrain Control Module) |
| SP01704 | Shift Lever Position Test (62TE) | PCM (Powertrain Control Module) |
| SP01705 | Shift Lever Position Test (Non-RFE) | PCM (Powertrain Control Module) |
| SP01706 | ABS Initialization | ABS (Anti Lock Brakes) |
| SP01707 | Bleed Brakes | ABS (Anti Lock Brakes) |
| SP01708 | Initialize ORC | ORC (Occupant Restraint) |
| SP01709 | Rollover Detection | ORC (Occupant Restraint) |
| SP01710 | Activate Driver And Passenger Head Restraint | ORC (Occupant Restraint) |
| SP01711 | Reset WIN Configuration | WCM (Wireless Control) |

| | | |
|---------|--|---|
| SP01712 | Program Tire Sensor ID With TPM Tool | WCM (Wireless Control) |
| SP01713 | Program Left Front Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01714 | Program Left Rear Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01715 | Program Right Front Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01716 | Program Right Rear Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01717 | TPM Sensor Position Parameter Update | TPM (Tire Pressure Monitor) |
| SP01718 | Program Tire Sensor ID With TPM Tool | TPM (Tire Pressure Monitor) |
| SP01719 | TPM Sensor Rolls Test | TPM (Tire Pressure Monitor) |
| SP01720 | Auto Wipers | TIPMCGW (Central Gateway) |
| SP01721 | Auto Door Lock | TIPMCGW (Central Gateway) |
| SP01722 | Auto Door Unlock | TIPMCGW (Central Gateway) |
| SP01723 | Configure License Plate Size | PTS (Parktronics) |
| SP01724 | System Wiring Test | PTS (Parktronics) |
| SP01725 | Actuate Drive Clutch Engage | PSDMR (Power Sliding Doors (Right)) |
| SP01726 | Sliding Door Close Test | PSDMR (Power Sliding Doors (Right)) |
| SP01727 | Sliding Door Open Test | PSDMR (Power Sliding Doors (Right)) |
| SP01728 | Actuate Drive Clutch Engage | PSDML (Power Sliding Doors (Left)) |
| SP01729 | Sliding Door Close Test | PSDML (Power Sliding Doors (Left)) |
| SP01730 | Sliding Door Open Test | PSDML (Power Sliding Doors (Left)) |
| SP01731 | ITM Initialize Siren | ITM (Intrusion) |
| SP01732 | Heated Steering Wheel Configuration | HSM (Heated Seat Module) |
| SP01733 | Update Measurement Unit | CCN (Instrument Cluster/Cabin Compartment Node) |
| SP01734 | Seatbelt Alert Minder | CCN (Instrument Cluster/Cabin Compartment Node) |
| SP01735 | Self Test | CCN (Instrument Cluster/Cabin Compartment Node) |
| SP01736 | Intelligent Alternator (IAM) Replacement | ECM (Engine Control Module) |
| SP01737 | Differential Pressure Sensor Replac. | ECM (Engine Control Module) |
| SP01738 | Oil Change | ECM (Engine Control Module) |
| SP01739 | Injector Replacement (Per Bank) | ECM (Engine Control Module) |
| SP01740 | Injector Codes Read | ECM (Engine Control Module) |
| SP01741 | Rail Pressure Sensor Replacement | ECM (Engine Control Module) |
| SP01742 | Cylinder 3 Injector Replacement | ECM (Engine Control Module) |
| SP01743 | Cylinder 2 Injector Replacement | ECM (Engine Control Module) |
| SP01744 | Cylinder 1 Injector Replacement | ECM (Engine Control Module) |
| SP01745 | Phonic Wheel Replacement | ECM (Engine Control Module) |
| SP01746 | Replacement Lambda Sensor | ECM (Engine Control Module) |

| | | |
|---------|--|------------------------------------|
| SP01747 | Neutral Signal Learn | ECM (Engine Control Module) |
| SP01748 | Rail Overpressure Waste Gate Valve Replacement | ECM (Engine Control Module) |
| SP01749 | EGR Valve Test | ECM (Engine Control Module) |
| SP01750 | Glow Plug Preheating Circuit Test | ECM (Engine Control Module) |
| SP01751 | Self-Learnt Functions Reset | ECM (Engine Control Module) |
| SP01752 | Resetting Distance Travelled With Water In Diesel W.Lamp | ECM (Engine Control Module) |
| SP01753 | Throttle Valve Test | ECM (Engine Control Module) |
| SP01754 | Resetting Distance Travelled With Water Temperature Warn | ECM (Engine Control Module) |
| SP01755 | Fan Cooling Activation | ECM (Engine Control Module) |
| SP01756 | Tunnel Lever Replacement | TCM (Transmission Control Module) |
| SP01757 | Pump Relay Replacement | TCM (Transmission Control Module) |
| SP01758 | Self-Learnt Functions Reset | TCM (Transmission Control Module) |
| SP01759 | Longitudinal And Lateral Sensor Decalibration | ABS (Anti Lock Brakes) |
| SP01760 | Longitudinal And Lateral Sensor Calibration | ABS (Anti Lock Brakes) |
| SP01761 | Static Test | ABS (Anti Lock Brakes) |
| SP01762 | Wheel Speed Sensor Type Test | ABS (Anti Lock Brakes) |
| SP01763 | Flap Actuators Learning Test | HVAC (Heat, Ventilation And A/C) |
| SP01764 | Steering Angle Calibration | EPS (Electric Power Steering) |
| SP01765 | ECU Restart Routine | CTM (Convergence Telematic Module) |
| SP01766 | Fire Protection System Activate | BCM (Body Control Module) |
| SP01767 | Deactivation Of The Power Limitation Function | ECM (Engine Control Module) |
| SP01768 | Motorised Throttle Replacement | ECM (Engine Control Module) |
| SP01769 | Supercharging System Components Replacement | ECM (Engine Control Module) |
| SP01770 | Intake Manifold Replacement | ECM (Engine Control Module) |
| SP01771 | Clutch Group And/Or Clutch Potentiometer Replacement | ECM (Engine Control Module) |
| SP01772 | Phonic Wheel Replacement | ECM (Engine Control Module) |
| SP01773 | Intelligent Alternator (IAM) Replacement | ECM (Engine Control Module) |
| SP01774 | Neutral Signal Learn | ECM (Engine Control Module) |
| SP01775 | Self-Learnt Functions Reset | ECM (Engine Control Module) |
| SP01776 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP01777 | Tunnel Lever Replacement | TCM (Transmission Control Module) |
| SP01778 | Levers At Wheel Replacement | TCM (Transmission Control Module) |
| SP01779 | Pump Relay Replacement | TCM (Transmission Control Module) |
| SP01780 | Self-Learnt Functions Reset | TCM (Transmission Control Module) |
| SP01781 | Static Test | ABS (Anti-Lock Braking System) |

| | | |
|---------|---|---|
| SP01782 | Trailer Hook Presence Disabling | PAM (Parking Assistant Module) |
| SP01783 | Trailer Hook Presence Enabling | PAM (Parking Assistant Module) |
| SP01784 | Reset Odometer | IC (Instrument Cluster) |
| SP01785 | Reset Service Information | IC (Instrument Cluster) |
| SP01786 | Disable Seat Belts Reminder | IC (Instrument Cluster) |
| SP01787 | Enable Seat Belts Reminder | IC (Instrument Cluster) |
| SP01788 | Last Service Date | IC (Instrument Cluster) |
| SP01789 | Flap Actuators Learning Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP01790 | Audio Video Signal Detection | ETM (Entertainment Telematic Module) |
| SP01791 | Steering Angle Calibration | EPS (Electric Power Steering) |
| SP01792 | ECU Restart Routine | CTM (Convergence Telematic Module) |
| SP01793 | Fire Protection System Activate | BCM (Body Control Module) |
| SP01794 | Deactivation Of The Power Limitation Function | ECM (Engine Control Module) |
| SP01795 | Supercharging System Components Replacement | ECM (Engine Control Module) |
| SP01796 | Engine Replacement | ECM (Engine Control Module) |
| SP01797 | Oil Change | ECM (Engine Control Module) |
| SP01798 | Fan Cooling Activation | ECM (Engine Control Module) |
| SP01799 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP01800 | Self-Learnt Functions Reset | ECM (Engine Control Module) |
| SP01801 | Longitudinal And Lateral Sensor Decalibration | ABS (Anti Lock Brakes) |
| SP01802 | Longitudinal And Lateral Sensor Calibration | ABS (Anti Lock Brakes) |
| SP01803 | Static Test | ABS (Anti Lock Brakes) |
| SP01804 | Steering Angle Sensor Calibration | ABS (Anti Lock Brakes) |
| SP01805 | Write Front And Rear Nominal Tire Pressure Values | TPM (Tire Pressure Monitor) |
| SP01806 | Clear TPM Warnings | TPM (Tire Pressure Monitor) |
| SP01807 | Clear TPM Sensor Rolls Test Results | TPM (Tire Pressure Monitor) |
| SP01808 | ECU SERIAL NUMBER Management | TPM (Tire Pressure Monitor) |
| SP01809 | TPM Sensor Rolls Test | TPM (Tire Pressure Monitor) |
| SP01810 | Program Left Front Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01811 | Program Left Rear Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01812 | Program Right Front Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01813 | Program Right Rear Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP01814 | Tow Hook Exclusion | PAM (Parking Aid Module) |
| SP01815 | Reset Odometer | IPC (Instrument Panel) |
| SP01816 | Reset Service Information | IPC (Instrument Panel) |

| | | |
|---------|--|-----------------------------------|
| SP01817 | Disable Seat Belts Reminder | IPC (Instrument Panel) |
| SP01818 | Enable Seat Belts Reminder | IPC (Instrument Panel) |
| SP01819 | Fire Protection System Activate | BCM (Body Control Module) |
| SP01820 | Neutral Signal Learn | ECM (Engine Control Module) |
| SP01821 | Factory VIN code lock | ECM (Engine Control Module) |
| SP01822 | Clutch Group And/Or Clutch Potentiometer Replacement | ECM (Engine Control Module) |
| SP01823 | Control Unit Reprogramming | ECM (Engine Control Module) |
| SP01824 | Fuel Supply System Components Replacement | ECM (Engine Control Module) |
| SP01825 | Supercharging System Components Replacement | ECM (Engine Control Module) |
| SP01826 | Electronic Throttle Replacement | ECM (Engine Control Module) |
| SP01827 | Oil Change | ECM (Engine Control Module) |
| SP01828 | Oil Level Sensor Replacement | ECM (Engine Control Module) |
| SP01829 | Lambda Sensor And/Or Catalytic Convertor And/Or Injector | ECM (Engine Control Module) |
| SP01830 | Proxi Alignment Procedure | ECM (Engine Control Module) |
| SP01831 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP01832 | Ionisation Control Module Adaptive Values Reset | ECM (Engine Control Module) |
| SP01833 | Fan Cooling Activation | ECM (Engine Control Module) |
| SP01834 | Proxi Alignment Procedure | TCM (Transmission Control Module) |
| SP01835 | Check Air Presence In ABS Unit | ABS (Anti-Lock Braking System) |
| SP01836 | Brake Pads Substitution (Brembo) | ABS (Anti-Lock Braking System) |
| SP01837 | Brake Pads Substitution EPB (Brembo) | ABS (Anti-Lock Braking System) |
| SP01838 | Brake Pads Substitution (Continental) | ABS (Anti-Lock Braking System) |
| SP01839 | Disks Management Brembo | ABS (Anti-Lock Braking System) |
| SP01840 | Replacement Brake Discs | ABS (Anti-Lock Braking System) |
| SP01841 | Control Unit Reprogramming | ABS (Anti-Lock Braking System) |
| SP01842 | Electric Park Brake Management | ABS (Anti-Lock Braking System) |
| SP01843 | Electric Park Brake Motors Substitution | ABS (Anti-Lock Braking System) |
| SP01844 | Longitudinal And Lateral Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP01845 | Brake Pressure Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP01846 | Settling Group Caliper And Brake Pads | ABS (Anti-Lock Braking System) |
| SP01847 | Production State | ABS (Anti-Lock Braking System) |
| SP01848 | Reset Angle Offset | ABS (Anti-Lock Braking System) |
| SP01849 | Bleeding Brake System | ABS (Anti-Lock Braking System) |
| SP01850 | Enable/Disable The Roll Bench Mode | ABS (Anti-Lock Braking System) |
| SP01851 | ABS Unit Bleed | ABS (Anti-Lock Braking System) |

| | | |
|---------|---|--|
| SP01852 | Calibrate Tandem Master Cylinder Sensor | ABS (Anti-Lock Braking System) |
| SP01853 | Checking Air In The Hydraulic Circuit Between The Control | ABS (Anti-Lock Braking System) |
| SP01854 | Enabling Brake Pedal | ABS (Anti-Lock Braking System) |
| SP01855 | Oil Change Reset | TVM (Torque Vectoring Module) |
| SP01856 | Gearbox Data Transfer | TVM (Torque Vectoring Module) |
| SP01857 | Clutch Adjustment | TVM (Torque Vectoring Module) |
| SP01858 | E-Motor Replacement | TVM (Torque Vectoring Module) |
| SP01859 | Self Test | TBM (Telematic Box Module) |
| SP01860 | Backup Battery Test | TBM (Telematic Box Module) |
| SP01861 | Clear TPM Sensor Audit | RFH (Radio Frequency Hub) |
| SP01862 | Clear TPM Sensor Warnings | RFH (Radio Frequency Hub) |
| SP01863 | Reset Service Information | IC (Instrument Cluster) |
| SP01864 | Test Pattern Display | IC (Instrument Cluster) |
| SP01865 | Proxi Alignment Procedure | ESM (Electronic Shifter Module) |
| SP01866 | Factory VIN code lock | ESM (Electronic Shifter Module) |
| SP01867 | LED Light Control Command | ESM (Electronic Shifter Module) |
| SP01868 | Steering Angle Calibration | EPS (Electric Power Steering) |
| SP01869 | Upload Configuration | EMCM (Entertainment Multimedia Control Module) |
| SP01870 | Read Touch Pad Configuration | EMCM (Entertainment Multimedia Control Module) |
| SP01871 | Touch Pad Self Test | EMCM (Entertainment Multimedia Control Module) |
| SP01872 | Touch Pad Self Calibration | EMCM (Entertainment Multimedia Control Module) |
| SP01873 | Restore Default Configuration | EMCM (Entertainment Multimedia Control Module) |
| SP01874 | Proxi Alignment Procedure | DTCM (Drive Train Control Module) |
| SP01875 | Transfer Case Reset | DTCM (Drive Train Control Module) |
| SP01876 | First Calibration | DTCM (Drive Train Control Module) |
| SP01877 | Calibration Reset | DTCM (Drive Train Control Module) |
| SP01878 | Factory VIN code lock | CDCM (Chassis Domain Control Module) |
| SP01879 | Calibration Accelerometers | CDCM (Chassis Domain Control Module) |
| SP01880 | AFLS Calibration | AFLS (Adaptive Front Lighting System) |
| SP01881 | Self Learning - Sensors Calibration | AAMR (Active Aerodynamic Module Right) |
| SP01882 | Neutral Signal Learn | ECM (Engine Control Module) |
| SP01883 | Factory VIN code lock | ECM (Engine Control Module) |
| SP01884 | Clutch Group And/Or Clutch Potentiometer Replacement | ECM (Engine Control Module) |
| SP01885 | Control Unit Reprogramming | ECM (Engine Control Module) |
| SP01886 | Fuel Supply System Components Replacement | ECM (Engine Control Module) |

| | | |
|---------|--|-----------------------------------|
| SP01887 | Supercharging System Components Replacement | ECM (Engine Control Module) |
| SP01888 | Electronic Throttle Replacement | ECM (Engine Control Module) |
| SP01889 | Oil Change | ECM (Engine Control Module) |
| SP01890 | Oil Level Sensor Replacement | ECM (Engine Control Module) |
| SP01891 | Lambda Sensor And/Or Catalytic Convertor And/Or Injector | ECM (Engine Control Module) |
| SP01892 | Proxi Alignment Procedure | ECM (Engine Control Module) |
| SP01893 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP01894 | Ionisation Control Module Adaptive Values Reset | ECM (Engine Control Module) |
| SP01895 | Fan Cooling Activation | ECM (Engine Control Module) |
| SP01896 | Proxi Alignment Procedure | TCM (Transmission Control Module) |
| SP01897 | Check Air Presence In ABS Unit | ABS (Anti-Lock Braking System) |
| SP01898 | Brake Pads Substitution (Brembo) | ABS (Anti-Lock Braking System) |
| SP01899 | Brake Pads Substitution EPB (Brembo) | ABS (Anti-Lock Braking System) |
| SP01900 | Brake Pads Substitution (Continental) | ABS (Anti-Lock Braking System) |
| SP01901 | Disks Management Brembo | ABS (Anti-Lock Braking System) |
| SP01902 | Replacement Brake Discs | ABS (Anti-Lock Braking System) |
| SP01903 | Control Unit Reprogramming | ABS (Anti-Lock Braking System) |
| SP01904 | Electric Park Brake Management | ABS (Anti-Lock Braking System) |
| SP01905 | Electric Park Brake Motors Substitution | ABS (Anti-Lock Braking System) |
| SP01906 | Longitudinal And Lateral Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP01907 | Brake Pressure Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP01908 | Settling Group Caliper And Brake Pads | ABS (Anti-Lock Braking System) |
| SP01909 | Production State | ABS (Anti-Lock Braking System) |
| SP01910 | Reset Angle Offset | ABS (Anti-Lock Braking System) |
| SP01911 | Bleeding Brake System | ABS (Anti-Lock Braking System) |
| SP01912 | Enable/Disable The Roll Bench Mode | ABS (Anti-Lock Braking System) |
| SP01913 | ABS Unit Bleed | ABS (Anti-Lock Braking System) |
| SP01914 | Calibrate Tandem Master Cylinder Sensor | ABS (Anti-Lock Braking System) |
| SP01915 | Checking Air In The Hydraulic Circuit Between The Contro | ABS (Anti-Lock Braking System) |
| SP01916 | Enabling Brake Pedal | ABS (Anti-Lock Braking System) |
| SP01917 | Oil Change Reset | TVM (Torque Vectoring Module) |
| SP01918 | Gearbox Data Transfer | TVM (Torque Vectoring Module) |
| SP01919 | Clutch Adjustment | TVM (Torque Vectoring Module) |
| SP01920 | E-Motor Replacement | TVM (Torque Vectoring Module) |
| SP01921 | Self Test | TBM (Telematic Box Module) |

| | | |
|---------|--|--|
| SP01922 | Backup Battery Test | TBM (Telematic Box Module) |
| SP01923 | Clear TPM Sensor Audit | RFH (Radio Frequency Hub) |
| SP01924 | Clear TPM Sensor Warnings | RFH (Radio Frequency Hub) |
| SP01925 | Reset Service Information | IC (Instrument Cluster) |
| SP01926 | Test Pattern Display | IC (Instrument Cluster) |
| SP01927 | Proxi Alignment Procedure | ESM (Electronic Shifter Module) |
| SP01928 | Factory VIN code lock | ESM (Electronic Shifter Module) |
| SP01929 | LED Light Control Command | ESM (Electronic Shifter Module) |
| SP01930 | Steering Angle Calibration | EPS (Electric Power Steering) |
| SP01931 | Upload Configuration | EMCM (Entertainment Multimedia Control Module) |
| SP01932 | Read Touch Pad Configuration | EMCM (Entertainment Multimedia Control Module) |
| SP01933 | Touch Pad Self Test | EMCM (Entertainment Multimedia Control Module) |
| SP01934 | Touch Pad Self Calibration | EMCM (Entertainment Multimedia Control Module) |
| SP01935 | Restore Default Configuration | EMCM (Entertainment Multimedia Control Module) |
| SP01936 | Proxi Alignment Procedure | DTCM (Drive Train Control Module) |
| SP01937 | Transfer Case Reset | DTCM (Drive Train Control Module) |
| SP01938 | First Calibration | DTCM (Drive Train Control Module) |
| SP01939 | Calibration Reset | DTCM (Drive Train Control Module) |
| SP01940 | Factory VIN code lock | CDCM (Chassis Domain Control Module) |
| SP01941 | Calibration Accelerometers | CDCM (Chassis Domain Control Module) |
| SP01942 | AFLS Calibration | AFLS (Adaptive Front Lighting System) |
| SP01943 | Self Learning - Sensors Calibration | AAMR (Active Aerodynamic Module Right) |
| SP01944 | Neutral Signal Learn | ECM (Engine Control Module) |
| SP01945 | Factory VIN code lock | ECM (Engine Control Module) |
| SP01946 | Clutch Group And/Or Clutch Potentiometer Replacement | ECM (Engine Control Module) |
| SP01947 | Control Unit Reprogramming | ECM (Engine Control Module) |
| SP01948 | Fuel Supply System Components Replacement | ECM (Engine Control Module) |
| SP01949 | Supercharging System Components Replacement | ECM (Engine Control Module) |
| SP01950 | Electronic Throttle Replacement | ECM (Engine Control Module) |
| SP01951 | Oil Change | ECM (Engine Control Module) |
| SP01952 | Oil Level Sensor Replacement | ECM (Engine Control Module) |
| SP01953 | Lambda Sensor And/Or Catalytic Convertor And/Or Injector | ECM (Engine Control Module) |
| SP01954 | Proxi Alignment Procedure | ECM (Engine Control Module) |
| SP01955 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP01956 | Ionisation Control Module Adaptive Values Reset | ECM (Engine Control Module) |

| | | |
|---------|---|-----------------------------------|
| SP01957 | Fan Cooling Activation | ECM (Engine Control Module) |
| SP01958 | Proxi Alignment Procedure | TCM (Transmission Control Module) |
| SP01959 | Check Air Presence In ABS Unit | ABS (Anti-Lock Braking System) |
| SP01960 | Brake Pads Substitution (Brembo) | ABS (Anti-Lock Braking System) |
| SP01961 | Brake Pads Substitution EPB (Brembo) | ABS (Anti-Lock Braking System) |
| SP01962 | Brake Pads Substitution (Continental) | ABS (Anti-Lock Braking System) |
| SP01963 | Disks Management Brembo | ABS (Anti-Lock Braking System) |
| SP01964 | Replacement Brake Discs | ABS (Anti-Lock Braking System) |
| SP01965 | Control Unit Reprogramming | ABS (Anti-Lock Braking System) |
| SP01966 | Electric Park Brake Management | ABS (Anti-Lock Braking System) |
| SP01967 | Electric Park Brake Motors Substitution | ABS (Anti-Lock Braking System) |
| SP01968 | Longitudinal And Lateral Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP01969 | Brake Pressure Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP01970 | Settling Group Caliper And Brake Pads | ABS (Anti-Lock Braking System) |
| SP01971 | Production State | ABS (Anti-Lock Braking System) |
| SP01972 | Reset Angle Offset | ABS (Anti-Lock Braking System) |
| SP01973 | Bleeding Brake System | ABS (Anti-Lock Braking System) |
| SP01974 | Enable/Disable The Roll Bench Mode | ABS (Anti-Lock Braking System) |
| SP01975 | ABS Unit Bleed | ABS (Anti-Lock Braking System) |
| SP01976 | Calibrate Tandem Master Cylinder Sensor | ABS (Anti-Lock Braking System) |
| SP01977 | Checking Air In The Hydraulic Circuit Between The Control | ABS (Anti-Lock Braking System) |
| SP01978 | Enabling Brake Pedal | ABS (Anti-Lock Braking System) |
| SP01979 | Oil Change Reset | TVM (Torque Vectoring Module) |
| SP01980 | Gearbox Data Transfer | TVM (Torque Vectoring Module) |
| SP01981 | Clutch Adjustment | TVM (Torque Vectoring Module) |
| SP01982 | E-Motor Replacement | TVM (Torque Vectoring Module) |
| SP01983 | Self Test | TBM (Telematic Box Module) |
| SP01984 | Backup Battery Test | TBM (Telematic Box Module) |
| SP01985 | Clear TPM Sensor Audit | RFH (Radio Frequency Hub) |
| SP01986 | Clear TPM Sensor Warnings | RFH (Radio Frequency Hub) |
| SP01987 | Reset Service Information | IC (Instrument Cluster) |
| SP01988 | Test Pattern Display | IC (Instrument Cluster) |
| SP01989 | Proxi Alignment Procedure | ESM (Electronic Shifter Module) |
| SP01990 | Factory VIN code lock | ESM (Electronic Shifter Module) |
| SP01991 | LED Light Control Command | ESM (Electronic Shifter Module) |

| | | |
|---------|--|--|
| SP01992 | Steering Angle Calibration | EPS (Electric Power Steering) |
| SP01993 | Upload Configuration | EMCM (Entertainment Multimedia Control Module) |
| SP01994 | Read Touch Pad Configuration | EMCM (Entertainment Multimedia Control Module) |
| SP01995 | Touch Pad Self Test | EMCM (Entertainment Multimedia Control Module) |
| SP01996 | Touch Pad Self Calibration | EMCM (Entertainment Multimedia Control Module) |
| SP01997 | Restore Default Configuration | EMCM (Entertainment Multimedia Control Module) |
| SP01998 | Proxi Alignment Procedure | DTCM (Drive Train Control Module) |
| SP01999 | Transfer Case Reset | DTCM (Drive Train Control Module) |
| SP02000 | First Calibration | DTCM (Drive Train Control Module) |
| SP02001 | Calibration Reset | DTCM (Drive Train Control Module) |
| SP02002 | Factory VIN code lock | CDCM (Chassis Domain Control Module) |
| SP02003 | Calibration Accelerometers | CDCM (Chassis Domain Control Module) |
| SP02004 | AFLS Calibration | AFLS (Adaptive Front Lighting System) |
| SP02005 | Self Learning - Sensors Calibration | AAMR (Active Aerodynamic Module Right) |
| SP02006 | Neutral Signal Learn | ECM (Engine Control Module) |
| SP02007 | Factory VIN code lock | ECM (Engine Control Module) |
| SP02008 | Clutch Group And/Or Clutch Potentiometer Replacement | ECM (Engine Control Module) |
| SP02009 | Control Unit Reprogramming | ECM (Engine Control Module) |
| SP02010 | Fuel Supply System Components Replacement | ECM (Engine Control Module) |
| SP02011 | Supercharging System Components Replacement | ECM (Engine Control Module) |
| SP02012 | Electronic Throttle Replacement | ECM (Engine Control Module) |
| SP02013 | Oil Change | ECM (Engine Control Module) |
| SP02014 | Oil Level Sensor Replacement | ECM (Engine Control Module) |
| SP02015 | Lambda Sensor And/Or Catalytic Convertor And/Or Injector | ECM (Engine Control Module) |
| SP02016 | Proxi Alignment Procedure | ECM (Engine Control Module) |
| SP02017 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP02018 | Ionisation Control Module Adaptive Values Reset | ECM (Engine Control Module) |
| SP02019 | Fan Cooling Activation | ECM (Engine Control Module) |
| SP02020 | Proxi Alignment Procedure | TCM (Transmission Control Module) |
| SP02021 | Check Air Presence In ABS Unit | ABS (Anti-Lock Braking System) |
| SP02022 | Brake Pads Substitution (Brembo) | ABS (Anti-Lock Braking System) |
| SP02023 | Brake Pads Substitution EPB (Brembo) | ABS (Anti-Lock Braking System) |
| SP02024 | Brake Pads Substitution (Continental) | ABS (Anti-Lock Braking System) |
| SP02025 | Disks Management Brembo | ABS (Anti-Lock Braking System) |
| SP02026 | Replacement Brake Discs | ABS (Anti-Lock Braking System) |

| | | |
|---------|---|--|
| SP02027 | Control Unit Reprogramming | ABS (Anti-Lock Braking System) |
| SP02028 | Electric Park Brake Management | ABS (Anti-Lock Braking System) |
| SP02029 | Electric Park Brake Motors Substitution | ABS (Anti-Lock Braking System) |
| SP02030 | Longitudinal And Lateral Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP02031 | Brake Pressure Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP02032 | Settling Group Caliper And Brake Pads | ABS (Anti-Lock Braking System) |
| SP02033 | Production State | ABS (Anti-Lock Braking System) |
| SP02034 | Reset Angle Offset | ABS (Anti-Lock Braking System) |
| SP02035 | Bleeding Brake System | ABS (Anti-Lock Braking System) |
| SP02036 | Enable/Disable The Roll Bench Mode | ABS (Anti-Lock Braking System) |
| SP02037 | ABS Unit Bleed | ABS (Anti-Lock Braking System) |
| SP02038 | Calibrate Tandem Master Cylinder Sensor | ABS (Anti-Lock Braking System) |
| SP02039 | Checking Air In The Hydraulic Circuit Between The Control | ABS (Anti-Lock Braking System) |
| SP02040 | Enabling Brake Pedal | ABS (Anti-Lock Braking System) |
| SP02041 | Oil Change Reset | TVM (Torque Vectoring Module) |
| SP02042 | Gearbox Data Transfer | TVM (Torque Vectoring Module) |
| SP02043 | Clutch Adjustment | TVM (Torque Vectoring Module) |
| SP02044 | E-Motor Replacement | TVM (Torque Vectoring Module) |
| SP02045 | Self Test | TBM (Telematic Box Module) |
| SP02046 | Backup Battery Test | TBM (Telematic Box Module) |
| SP02047 | Clear TPM Sensor Audit | RFH (Radio Frequency Hub) |
| SP02048 | Clear TPM Sensor Warnings | RFH (Radio Frequency Hub) |
| SP02049 | Reset Service Information | IC (Instrument Cluster) |
| SP02050 | Test Pattern Display | IC (Instrument Cluster) |
| SP02051 | Proxi Alignment Procedure | ESM (Electronic Shifter Module) |
| SP02052 | Factory VIN code lock | ESM (Electronic Shifter Module) |
| SP02053 | LED Light Control Command | ESM (Electronic Shifter Module) |
| SP02054 | Steering Angle Calibration | EPS (Electric Power Steering) |
| SP02055 | Upload Configuration | EMCM (Entertainment Multimedia Control Module) |
| SP02056 | Read Touch Pad Configuration | EMCM (Entertainment Multimedia Control Module) |
| SP02057 | Touch Pad Self Test | EMCM (Entertainment Multimedia Control Module) |
| SP02058 | Touch Pad Self Calibration | EMCM (Entertainment Multimedia Control Module) |
| SP02059 | Restore Default Configuration | EMCM (Entertainment Multimedia Control Module) |
| SP02060 | Proxi Alignment Procedure | DTCM (Drive Train Control Module) |
| SP02061 | Transfer Case Reset | DTCM (Drive Train Control Module) |

| | | |
|---------|--|--|
| SP02062 | First Calibration | DTCM (Drive Train Control Module) |
| SP02063 | Calibration Reset | DTCM (Drive Train Control Module) |
| SP02064 | Factory VIN code lock | CDCM (Chassis Domain Control Module) |
| SP02065 | Calibration Accelerometers | CDCM (Chassis Domain Control Module) |
| SP02066 | AFLS Calibration | AFLS (Adaptive Front Lighting System) |
| SP02067 | Self Learning - Sensors Calibration | AAMR (Active Aerodynamic Module Right) |
| SP02068 | Deactivation Of The Power Limitation Function | ECM (Engine Control Module) |
| SP02069 | Motorised Throttle Replacement | ECM (Engine Control Module) |
| SP02070 | Supercharging System Components Replacement | ECM (Engine Control Module) |
| SP02071 | Phonic Wheel Replacement | ECM (Engine Control Module) |
| SP02072 | Intelligent Alternator (IAM) Replacement | ECM (Engine Control Module) |
| SP02073 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP02074 | Self-Learnt Functions Reset | ECM (Engine Control Module) |
| SP02075 | Hydraulic Circuit Depressurization | TCM (Transmission Control Module) |
| SP02076 | Gearbox Replacement | TCM (Transmission Control Module) |
| SP02077 | Lever Release Solenoid Command | TCM (Transmission Control Module) |
| SP02078 | Control Unit Reprogramming | TCM (Transmission Control Module) |
| SP02079 | Inlet Valve Calibration | ABS (Anti Lock Brakes) |
| SP02080 | Longitudinal And Lateral Sensor Calibration | ABS (Anti Lock Brakes) |
| SP02081 | Pilot Valve Calibration | ABS (Anti Lock Brakes) |
| SP02082 | Brake Pressure Sensor Calibration | ABS (Anti Lock Brakes) |
| SP02083 | Steering Wheel Angle Sensor Offset Calibration | ABS (Anti Lock Brakes) |
| SP02084 | Trailer Hook Presence Disabling | PAM (Parking Aid Module) |
| SP02085 | Trailer Hook Presence Enabling | PAM (Parking Aid Module) |
| SP02086 | Reset Odometer | IPC (Instrument Panel) |
| SP02087 | Reset Service Information | IPC (Instrument Panel) |
| SP02088 | Disable Seat Belts Reminder | IPC (Instrument Panel) |
| SP02089 | Enable Seat Belts Reminder | IPC (Instrument Panel) |
| SP02090 | Last Service Date | IPC (Instrument Panel) |
| SP02091 | Self Learning Motor Test | HVAC (Heat, Ventilation And A/C) |
| SP02092 | Power Down | ETM (Entertainment Telematic Module) |
| SP02093 | Power On And Disable User Inputs | ETM (Entertainment Telematic Module) |
| SP02094 | Audio Video Signal Detection | ETM (Entertainment Telematic Module) |
| SP02095 | Steering Angle Calibration | EPS (Electric Power Steering) |
| SP02096 | ECU Restart Routine | CTM (Convergence Telematic Module) |

| | | |
|---------|--|---------------------------------------|
| SP02097 | Fire Protection System Activate | BCM (Body Control Module) |
| SP02098 | LIN Line Request Check | BCM (Body Control Module) |
| SP02099 | Siren Check | BCM (Body Control Module) |
| SP02100 | Ultrasonic Sensors Check | BCM (Body Control Module) |
| SP02101 | AFLS Calibration | AFLS (Adaptive Front Lighting System) |
| SP02102 | Deactivation Of The Power Limitation Function | ECM (Engine Control Module) |
| SP02103 | Motorised Throttle Replacement | ECM (Engine Control Module) |
| SP02104 | Supercharging System Components Replacement | ECM (Engine Control Module) |
| SP02105 | Phonic Wheel Replacement | ECM (Engine Control Module) |
| SP02106 | Intelligent Alternator (IAM) Replacement | ECM (Engine Control Module) |
| SP02107 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP02108 | Self-Learnt Functions Reset | ECM (Engine Control Module) |
| SP02109 | Hydraulic Circuit Depressurization | TCM (Transmission Control Module) |
| SP02110 | Gearbox Replacement | TCM (Transmission Control Module) |
| SP02111 | Lever Release Solenoid Command | TCM (Transmission Control Module) |
| SP02112 | Control Unit Reprogramming | TCM (Transmission Control Module) |
| SP02113 | Inlet Valve Calibration | ABS (Anti Lock Brakes) |
| SP02114 | Longitudinal And Lateral Sensor Calibration | ABS (Anti Lock Brakes) |
| SP02115 | Pilot Valve Calibration | ABS (Anti Lock Brakes) |
| SP02116 | Brake Pressure Sensor Calibration | ABS (Anti Lock Brakes) |
| SP02117 | Steering Wheel Angle Sensor Offset Calibration | ABS (Anti Lock Brakes) |
| SP02118 | Trailer Hook Presence Disabling | PAM (Parking Aid Module) |
| SP02119 | Trailer Hook Presence Enabling | PAM (Parking Aid Module) |
| SP02120 | Reset Odometer | IPC (Instrument Panel) |
| SP02121 | Reset Service Information | IPC (Instrument Panel) |
| SP02122 | Disable Seat Belts Reminder | IPC (Instrument Panel) |
| SP02123 | Enable Seat Belts Reminder | IPC (Instrument Panel) |
| SP02124 | Last Service Date | IPC (Instrument Panel) |
| SP02125 | Self Learning Motor Test | HVAC (Heat, Ventilation And A/C) |
| SP02126 | Power Down | ETM (Entertainment Telematic Module) |
| SP02127 | Power On And Disable User Inputs | ETM (Entertainment Telematic Module) |
| SP02128 | Audio Video Signal Detection | ETM (Entertainment Telematic Module) |
| SP02129 | Steering Angle Calibration | EPS (Electric Power Steering) |
| SP02130 | ECU Restart Routine | CTM (Convergence Telematic Module) |
| SP02131 | Fire Protection System Activate | BCM (Body Control Module) |

| | | |
|---------|---|---------------------------------------|
| SP02132 | LIN Line Request Check | BCM (Body Control Module) |
| SP02133 | Siren Check | BCM (Body Control Module) |
| SP02134 | Ultrasonic Sensors Check | BCM (Body Control Module) |
| SP02135 | AFLS Calibration | AFLS (Adaptive Front Lighting System) |
| SP02136 | Deactivation Of The Power Limitation Function | ECM (Engine Control Module) |
| SP02137 | Motorised Throttle Replacement | ECM (Engine Control Module) |
| SP02138 | Supercharging System Components Replacement | ECM (Engine Control Module) |
| SP02139 | Intake Manifold Replacement | ECM (Engine Control Module) |
| SP02140 | Phonic Wheel Replacement | ECM (Engine Control Module) |
| SP02141 | Intelligent Alternator (IAM) Replacement | ECM (Engine Control Module) |
| SP02142 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP02143 | Self-Learnt Functions Reset | ECM (Engine Control Module) |
| SP02144 | Hydraulic Circuit Depressurization | TCM (Transmission Control Module) |
| SP02145 | Gearbox Replacement | TCM (Transmission Control Module) |
| SP02146 | Lever Release Solenoid Command | TCM (Transmission Control Module) |
| SP02147 | Control Unit Reprogramming | TCM (Transmission Control Module) |
| SP02148 | Static Test | ABS (Anti Lock Brakes) |
| SP02149 | Longitudinal G-Sensor Calibration Test | ABS (Anti Lock Brakes) |
| SP02150 | Clear TPM Warnings | TPM (Tire Pressure Monitor) |
| SP02151 | Clear TPM Sensor Rolls Test Results | TPM (Tire Pressure Monitor) |
| SP02152 | Update Front And Rear Axle Nominal Tire Pressure Values | TPM (Tire Pressure Monitor) |
| SP02153 | Program Left Front Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP02154 | Program Left Rear Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP02155 | Program Right Front Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP02156 | Program Right Rear Tire Sensor ID | TPM (Tire Pressure Monitor) |
| SP02157 | TPM Sensor Rolls Test | TPM (Tire Pressure Monitor) |
| SP02158 | Trailer Hook Presence Disabling | PAM (Parking Aid Module) |
| SP02159 | Trailer Hook Presence Enabling | PAM (Parking Aid Module) |
| SP02160 | Reset Odometer | IPC (Instrument Panel) |
| SP02161 | Reset Service Information | IPC (Instrument Panel) |
| SP02162 | Disable Seat Belts Reminder | IPC (Instrument Panel) |
| SP02163 | Enable Seat Belts Reminder | IPC (Instrument Panel) |
| SP02164 | Last Service Date | IPC (Instrument Panel) |
| SP02165 | Flap Actuators Learning Test | HVAC (Heat, Ventilation And A/C) |
| SP02166 | ECU Restart Routine | CTM (Convergence Telematic Module) |

| | | |
|---------|--|-----------------------------------|
| SP02167 | Fire Protection System Activate | BCM (Body Control Module) |
| SP02168 | LIN Line Request Check | BCM (Body Control Module) |
| SP02169 | LIN Ultrasonic Sensors Check | BCM (Body Control Module) |
| SP02170 | Neutral Signal Learn | ECM (Engine Control Module) |
| SP02171 | Factory VIN code lock | ECM (Engine Control Module) |
| SP02172 | Clutch Group And/Or Clutch Potentiometer Replacement | ECM (Engine Control Module) |
| SP02173 | Control Unit Reprogramming | ECM (Engine Control Module) |
| SP02174 | Fuel Supply System Components Replacement | ECM (Engine Control Module) |
| SP02175 | Supercharging System Components Replacement | ECM (Engine Control Module) |
| SP02176 | Electronic Throttle Replacement | ECM (Engine Control Module) |
| SP02177 | Oil Change | ECM (Engine Control Module) |
| SP02178 | Oil Level Sensor Replacement | ECM (Engine Control Module) |
| SP02179 | Lambda Sensor And/Or Catalytic Convertor And/Or Injector | ECM (Engine Control Module) |
| SP02180 | Proxi Alignment Procedure | ECM (Engine Control Module) |
| SP02181 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP02182 | Ionisation Control Module Adaptive Values Reset | ECM (Engine Control Module) |
| SP02183 | Fan Cooling Activation | ECM (Engine Control Module) |
| SP02184 | Proxi Alignment Procedure | TCM (Transmission Control Module) |
| SP02185 | Check Air Presence In ABS Unit | ABS (Anti-Lock Braking System) |
| SP02186 | Brake Pads Substitution (Brembo) | ABS (Anti-Lock Braking System) |
| SP02187 | Brake Pads Substitution EPB (Brembo) | ABS (Anti-Lock Braking System) |
| SP02188 | Brake Pads Substitution (Continental) | ABS (Anti-Lock Braking System) |
| SP02189 | Disks Management Brembo | ABS (Anti-Lock Braking System) |
| SP02190 | Replacement Brake Discs | ABS (Anti-Lock Braking System) |
| SP02191 | Control Unit Reprogramming | ABS (Anti-Lock Braking System) |
| SP02192 | Electric Park Brake Management | ABS (Anti-Lock Braking System) |
| SP02193 | Electric Park Brake Motors Substitution | ABS (Anti-Lock Braking System) |
| SP02194 | Longitudinal And Lateral Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP02195 | Brake Pressure Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP02196 | Settling Group Caliper And Brake Pads | ABS (Anti-Lock Braking System) |
| SP02197 | Production State | ABS (Anti-Lock Braking System) |
| SP02198 | Reset Angle Offset | ABS (Anti-Lock Braking System) |
| SP02199 | Bleeding Brake System | ABS (Anti-Lock Braking System) |
| SP02200 | Enable/Disable The Roll Bench Mode | ABS (Anti-Lock Braking System) |
| SP02201 | ABS Unit Bleed | ABS (Anti-Lock Braking System) |

| | | |
|---------|---|--|
| SP02202 | Calibrate Tandem Master Cylinder Sensor | ABS (Anti-Lock Braking System) |
| SP02203 | Checking Air In The Hydraulic Circuit Between The Control | ABS (Anti-Lock Braking System) |
| SP02204 | Enabling Brake Pedal | ABS (Anti-Lock Braking System) |
| SP02205 | Oil Change Reset | TVM (Torque Vectoring Module) |
| SP02206 | Gearbox Data Transfer | TVM (Torque Vectoring Module) |
| SP02207 | Clutch Adjustment | TVM (Torque Vectoring Module) |
| SP02208 | E-Motor Replacement | TVM (Torque Vectoring Module) |
| SP02209 | Self Test | TBM (Telematic Box Module) |
| SP02210 | Backup Battery Test | TBM (Telematic Box Module) |
| SP02211 | Clear TPM Sensor Audit | RFH (Radio Frequency Hub) |
| SP02212 | Clear TPM Sensor Warnings | RFH (Radio Frequency Hub) |
| SP02213 | Reset Service Information | IC (Instrument Cluster) |
| SP02214 | Test Pattern Display | IC (Instrument Cluster) |
| SP02215 | Proxi Alignment Procedure | ESM (Electronic Shifter Module) |
| SP02216 | Factory VIN code lock | ESM (Electronic Shifter Module) |
| SP02217 | LED Light Control Command | ESM (Electronic Shifter Module) |
| SP02218 | Steering Angle Calibration | EPS (Electric Power Steering) |
| SP02219 | Upload Configuration | EMCM (Entertainment Multimedia Control Module) |
| SP02220 | Read Touch Pad Configuration | EMCM (Entertainment Multimedia Control Module) |
| SP02221 | Touch Pad Self Test | EMCM (Entertainment Multimedia Control Module) |
| SP02222 | Touch Pad Self Calibration | EMCM (Entertainment Multimedia Control Module) |
| SP02223 | Restore Default Configuration | EMCM (Entertainment Multimedia Control Module) |
| SP02224 | Proxi Alignment Procedure | DTCM (Drive Train Control Module) |
| SP02225 | Transfer Case Reset | DTCM (Drive Train Control Module) |
| SP02226 | First Calibration | DTCM (Drive Train Control Module) |
| SP02227 | Calibration Reset | DTCM (Drive Train Control Module) |
| SP02228 | Factory VIN code lock | CDCM (Chassis Domain Control Module) |
| SP02229 | Calibration Accelerometers | CDCM (Chassis Domain Control Module) |
| SP02230 | AFLS Calibration | AFLS (Adaptive Front Lighting System) |
| SP02231 | Self Learning - Sensors Calibration | AAMR (Active Aerodynamic Module Right) |
| SP02232 | Neutral Signal Learn | ECM (Engine Control Module) |
| SP02233 | Factory VIN code lock | ECM (Engine Control Module) |
| SP02234 | Clutch Group And/Or Clutch Potentiometer Replacement | ECM (Engine Control Module) |
| SP02235 | Control Unit Reprogramming | ECM (Engine Control Module) |
| SP02236 | Fuel Supply System Components Replacement | ECM (Engine Control Module) |

| | | |
|---------|--|-----------------------------------|
| SP02237 | Supercharging System Components Replacement | ECM (Engine Control Module) |
| SP02238 | Electronic Throttle Replacement | ECM (Engine Control Module) |
| SP02239 | Oil Change | ECM (Engine Control Module) |
| SP02240 | Oil Level Sensor Replacement | ECM (Engine Control Module) |
| SP02241 | Lambda Sensor And/Or Catalytic Convertor And/Or Injector | ECM (Engine Control Module) |
| SP02242 | Proxi Alignment Procedure | ECM (Engine Control Module) |
| SP02243 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP02244 | Ionisation Control Module Adaptive Values Reset | ECM (Engine Control Module) |
| SP02245 | Fan Cooling Activation | ECM (Engine Control Module) |
| SP02246 | Proxi Alignment Procedure | TCM (Transmission Control Module) |
| SP02247 | Check Air Presence In ABS Unit | ABS (Anti-Lock Braking System) |
| SP02248 | Brake Pads Substitution (Brembo) | ABS (Anti-Lock Braking System) |
| SP02249 | Brake Pads Substitution EPB (Brembo) | ABS (Anti-Lock Braking System) |
| SP02250 | Brake Pads Substitution (Continental) | ABS (Anti-Lock Braking System) |
| SP02251 | Disks Management Brembo | ABS (Anti-Lock Braking System) |
| SP02252 | Replacement Brake Discs | ABS (Anti-Lock Braking System) |
| SP02253 | Control Unit Reprogramming | ABS (Anti-Lock Braking System) |
| SP02254 | Electric Park Brake Management | ABS (Anti-Lock Braking System) |
| SP02255 | Electric Park Brake Motors Substitution | ABS (Anti-Lock Braking System) |
| SP02256 | Longitudinal And Lateral Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP02257 | Brake Pressure Sensor Calibration | ABS (Anti-Lock Braking System) |
| SP02258 | Settling Group Caliper And Brake Pads | ABS (Anti-Lock Braking System) |
| SP02259 | Production State | ABS (Anti-Lock Braking System) |
| SP02260 | Reset Angle Offset | ABS (Anti-Lock Braking System) |
| SP02261 | Bleeding Brake System | ABS (Anti-Lock Braking System) |
| SP02262 | Enable/Disable The Roll Bench Mode | ABS (Anti-Lock Braking System) |
| SP02263 | ABS Unit Bleed | ABS (Anti-Lock Braking System) |
| SP02264 | Calibrate Tandem Master Cylinder Sensor | ABS (Anti-Lock Braking System) |
| SP02265 | Checking Air In The Hydraulic Circuit Between The Contro | ABS (Anti-Lock Braking System) |
| SP02266 | Enabling Brake Pedal | ABS (Anti-Lock Braking System) |
| SP02267 | Oil Change Reset | TVM (Torque Vectoring Module) |
| SP02268 | Gearbox Data Transfer | TVM (Torque Vectoring Module) |
| SP02269 | Clutch Adjustment | TVM (Torque Vectoring Module) |
| SP02270 | E-Motor Replacement | TVM (Torque Vectoring Module) |
| SP02271 | Self Test | TBM (Telematic Box Module) |

| | | |
|---------|---|--|
| SP02272 | Backup Battery Test | TBM (Telematic Box Module) |
| SP02273 | Clear TPM Sensor Audit | RFH (Radio Frequency Hub) |
| SP02274 | Clear TPM Sensor Warnings | RFH (Radio Frequency Hub) |
| SP02275 | Reset Service Information | IC (Instrument Cluster) |
| SP02276 | Test Pattern Display | IC (Instrument Cluster) |
| SP02277 | Proxi Alignment Procedure | ESM (Electronic Shifter Module) |
| SP02278 | Factory VIN code lock | ESM (Electronic Shifter Module) |
| SP02279 | LED Light Control Command | ESM (Electronic Shifter Module) |
| SP02280 | Steering Angle Calibration | EPS (Electric Power Steering) |
| SP02281 | Upload Configuration | EMCM (Entertainment Multimedia Control Module) |
| SP02282 | Read Touch Pad Configuration | EMCM (Entertainment Multimedia Control Module) |
| SP02283 | Touch Pad Self Test | EMCM (Entertainment Multimedia Control Module) |
| SP02284 | Touch Pad Self Calibration | EMCM (Entertainment Multimedia Control Module) |
| SP02285 | Restore Default Configuration | EMCM (Entertainment Multimedia Control Module) |
| SP02286 | Proxi Alignment Procedure | DTCM (Drive Train Control Module) |
| SP02287 | Transfer Case Reset | DTCM (Drive Train Control Module) |
| SP02288 | First Calibration | DTCM (Drive Train Control Module) |
| SP02289 | Calibration Reset | DTCM (Drive Train Control Module) |
| SP02290 | Factory VIN code lock | CDCM (Chassis Domain Control Module) |
| SP02291 | Calibration Accelerometers | CDCM (Chassis Domain Control Module) |
| SP02292 | AFLS Calibration | AFLS (Adaptive Front Lighting System) |
| SP02293 | Self Learning - Sensors Calibration | AAMR (Active Aerodynamic Module Right) |
| SP02294 | Deactivation Of The Power Limitation Function | ECM (Engine Control Module) |
| SP02295 | Fan Cooling Activation | ECM (Engine Control Module) |
| SP02296 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP02297 | Self-Learnt Functions Reset | ECM (Engine Control Module) |
| SP02298 | Gearbox Replacement | TCM (Transmission Control Module) |
| SP02299 | Lever Release Solenoid Command | TCM (Transmission Control Module) |
| SP02300 | Static Test | ABS (Anti-Lock Braking System) |
| SP02301 | Trailer Hook Presence Disabling | PAM (Parking Aid Module) |
| SP02302 | Trailer Hook Presence Enabling | PAM (Parking Aid Module) |
| SP02303 | Reset Odometer | IC (Instrument Cluster) |
| SP02304 | Reset Service Information | IC (Instrument Cluster) |
| SP02305 | Disable Seat Belts Reminder | IC (Instrument Cluster) |
| SP02306 | Enable Seat Belts Reminder | IC (Instrument Cluster) |

| | | |
|---------|---|---|
| SP02307 | Last Service Date | IC (Instrument Cluster) |
| SP02308 | Actuator Calibration Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP02309 | Fire Protection System Activate | BCM (Body Control Module) |
| SP02310 | Deactivation Of The Power Limitation Function | ECM (Engine Control Module) |
| SP02311 | Fan Cooling Activation | ECM (Engine Control Module) |
| SP02312 | Self-Adaptive Parameters Reset | ECM (Engine Control Module) |
| SP02313 | Self-Learnt Functions Reset | ECM (Engine Control Module) |
| SP02314 | Gearbox Replacement | TCM (Transmission Control Module) |
| SP02315 | Lever Release Solenoid Command | TCM (Transmission Control Module) |
| SP02316 | Static Test | ABS (Anti-Lock Braking System) |
| SP02317 | Trailer Hook Presence Disabling | PAM (Parking Aid Module) |
| SP02318 | Trailer Hook Presence Enabling | PAM (Parking Aid Module) |
| SP02319 | Reset Odometer | IC (Instrument Cluster) |
| SP02320 | Reset Service Information | IC (Instrument Cluster) |
| SP02321 | Disable Seat Belts Reminder | IC (Instrument Cluster) |
| SP02322 | Enable Seat Belts Reminder | IC (Instrument Cluster) |
| SP02323 | Last Service Date | IC (Instrument Cluster) |
| SP02324 | Actuator Calibration Test | HVAC (Heating Ventilation Air-Conditioning And Cooling) |
| SP02325 | Fire Protection System Activate | BCM (Body Control Module) |
| SP02326 | Service Single Pole Calibration | HALF (Haptical Lane Feedback) |
| SP02327 | FFCM Calibration | FFCM (Forward Facing Camera Module) |
| SP02328 | Active alignment program: radar calibration | ACC (Adaptive Cruise Control) |
| SP02329 | Target Calibration | HALF (Haptical Lane Feedback) |