



Shenzhen Xtooltech Co., Ltd

Buick Function List V13.40

Tips and Instructions:

The programming function only supports H6PRO, H6PRO Master Edition products.

* This feature is new.

√ This feature is supported.

 This feature is not supported.

※ This feature is partially supported.

Year	Make	Model Series	System Name	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Actuation Test	Special Functions
2024	Buick	Encore	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP0132,SP0115,SP0086,SP0212,SP0214,SP0217,SP0006,SP0144,SP0139,SP0757,SP0085,SP075E,SP075F,SP0760,SP0761,SP0213,SP0762,SP0258,SP0763,SP0764,SP0765
2024	Buick	Encore	Transmission Control Module	√	√	√	√	√	SP0017,SP0016,SP075C
2024	Buick	Encore	Brake System Control Module	√	√	√	√	√	SP0766,SP0758,SP0767,SP0768,SP0229,SP078F,SP0790
2024	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	SP0172,SP0134,SP0111,SP0758
2024	Buick	Encore	Body Control Module	√	√	√	√	√	SP0199,SP0239,SP0161,SP0162,SP0163,SP0164,SP0165,SP0166,SP0167,SP0168,SP0242,SP0263,SP0203,SP0201,SP0208,SP0206,SP0083,SP0267,SP0160,SP0233,SP0159
2024	Buick	Encore	HVAC Control Module	√	√	√	√	√	SP0007,SP0129
2024	Buick	Encore	HVAC Controls	√	√	√	√		
2024	Buick	Encore	Headlamp Control Module	√	√	√	√	√	SP0195
2024	Buick	Encore	Liftgate Control Module	√	√	√	√	√	SP0146,SP0169
2024	Buick	Encore	Seat Memory Control Module - Driver	√	√	√	√	√	
2024	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	SP0755
2024	Buick	Encore	Rear Drive Control Module	√	√	√	√	√	SP0003
2024	Buick	Encore	Video Processing Control Module	√	√	√	√	√	
2024	Buick	Encore	Amplifier	√	√	√	√		

2024	Buick	Encore	Frontview Camera - Windshield	√	√	√	√	√	SP0196,SP0084
2024	Buick	Encore	Radio	√	√	√	√	√	SP0269,SP0150
2024	Buick	Encore	Head-Up Display Module	√	√	√	√	√	
2024	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	SP0247
2024	Buick	Encore	Serial Data Gateway Module - Processor 1	√	√	√			
2024	Buick	Encore	Serial Data Gateway Module - Processor 2	√	√	√			
2024	Buick	Encore	Side Obstacle Detection Control Module - Left	√	√	√		√	
2024	Buick	Encore	Side Obstacle Detection Control Module - Right	√	√	√		√	
2024	Buick	Encore	Steering Column Lock Control Module	√	√	√	√		
2024	Buick	Encore	Keyless Entry Control Module	√	√	√	√	√	SP0759
2024	Buick	Encore	Passenger Presence Module	√	√	√	√	√	SP0057
2024	Buick	Encore	Power Steering Control Module	√	√	√	√	√	SP0089,SP0084
2024	Buick	Envista	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP0132,SP0115,SP0086,SP0212,SP0214,SP0217,SP0006,SP0144,SP0139,SP0757,SP0008
2024	Buick	Envista	Transmission Control Module	√	√	√	√	√	SP0017,SP0036
2024	Buick	Envista	Brake System Control Module	√	√	√	√	√	SP0766,SP0758,SP0767,SP0768,SP0229,SP078F,SP0790
2024	Buick	Envista	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	SP0172,SP0134,SP0111,SP0758
2024	Buick	Envista	Body Control Module	√	√	√	√	√	SP0199,SP0239,SP0161,SP0162,SP0163,SP0164,SP0165,SP0166,SP0167,SP0168,SP0242,SP0263,SP0203,SP0201,SP0208,SP0206,SP0083,SP0267,SP0160,SP0233,SP0159
2024	Buick	Envista	HVAC Control Module	√	√	√	√	√	SP0007,SP0129
2024	Buick	Envista	HVAC Controls	√	√	√	√		
2024	Buick	Envista	Liftgate Control Module	√	√	√	√	√	SP0146,SP0169
2024	Buick	Envista	Telematics Communication Interface Control Module	√	√	√	√	√	SP0755
2024	Buick	Envista	Frontview Camera - Windshield	√	√	√	√		SP0196,SP0084
2024	Buick	Envista	Keyless Entry Control Module	√	√	√	√	√	SP0759
2024	Buick	Envista	Passenger Presence Module	√	√	√	√	√	SP0057
2024	Buick	Envista	Radio	√	√	√	√	√	SP0269,SP0793,SP0267,SP0226
2024	Buick	Envista	Power Steering Control Module	√	√	√	√	√	SP0089,SP0084

2024	Buick	Envision	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP075E,SP076B,SP0760,SP076C,SP0115,SP076D,SP0761,SP0086,SP076E,SP0212,SP0217,SP0006,SP0144,SP0764,SP0763,SP0258,SP0139
2024	Buick	Envision	Transmission Control Module	√	√	√	√	√	SP0019,SP076A
2024	Buick	Envision	Brake System Control Module	√	√	√	√	√	SP0767,SP0768,SP0766,SP0758,SP0229,SP078F,SP0790,SP0799
2024	Buick	Envision	Restraints Control Module	√	√	√	√	√	SP0758,SP0134
2024	Buick	Envision	Body Control Module	√	√	√	√	√	SP0263,SP0226,SP0754,SP0007,SP0129,SP0267
2024	Buick	Envision	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	Buick	Envision	Headlamp Control Module	√	√	√	√	√	SP0195
2024	Buick	Envision	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	Buick	Envision	Telematics Control Module	√	√	√	√	√	SP0270,SP0755
2024	Buick	Envision	Restraints Occupant Classification System Module - Passenger	√	√	√	√	√	SP0057
2024	Buick	Envision	Power Steering Control Module	√	√	√	√	√	SP0766
2024	Buick	Envision	Electronic Suspension Control Module	√	√	√	√	√	SP0198
2024	Buick	Envision	Rear Drive Control Module	√	√	√	√	√	
2024	Buick	Envision	Video Processing Module	√	√	√	√	√	
2024	Buick	Envision	Wireless Accessory Charging Module	√	√	√	√	√	
2024	Buick	Enclave	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP0115,SP0756,SP0086,SP0085,SP0757,SP0217,SP0258,SP0139,SP0006
2024	Buick	Enclave	Transmission Control Module	√	√	√	√	√	SP0017
2024	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	SP0225,SP0090,SP0111,SP0277,SP0229
2024	Buick	Enclave	Body Control Module	√	√	√	√	√	SP0199,SP0239,SP0161,SP0162,SP0163,SP0164,SP0165,SP0166,SP0167,SP0168,SP0242,SP0263,SP0203,SP0201,SP0208,SP0206,SP0083,SP0267,SP0160,SP0233,SP0159
2024	Buick	Enclave	Instrument Cluster	√	√	√	√	√	SP0247
2024	Buick	Enclave	HVAC Control Module	√	√	√	√	√	SP0007,SP0129
2024	Buick	Enclave	HVAC Controls	√	√	√	√	√	
2024	Buick	Enclave	Chassis Control Module	√	√	√	√	√	SP0014,SP0078

2024	Buick	Enclave	Liftgate Control Module	√	√	√	√	√	SP0146,SP0169
2024	Buick	Enclave	Seat Memory Control Module - Driver	√	√	√	√	√	
2024	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	SP0755
2024	Buick	Enclave	Headlamp Control Module	√	√	√	√	√	SP0195
2024	Buick	Enclave	Power Steering Control Module	√	√	√	√	√	SP0089,SP0084
2024	Buick	Enclave	Suspension Control Module	√	√	√	√	√	
2024	Buick	Enclave	Amplifier	√	√	√	√	√	
2024	Buick	Enclave	Radio Controls	√	√	√	√	√	SP0241
2024	Buick	Enclave	Radio	√	√	√	√	√	SP0269,SP0793,SP0267,SP0226
2024	Buick	Enclave	Serial Data Gateway Module - Processor 2	√	√	√			
2024	Buick	Enclave	Serial Data Gateway Module - Processor 1	√	√	√			
2024	Buick	Enclave	Side Obstacle Detection Control Module - Right	√	√	√		√	
2024	Buick	Enclave	Side Obstacle Detection Control Module - Left	√	√	√		√	
2024	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	SP0247
2024	Buick	Enclave	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Buick	Enclave	Passenger Presence Module	√	√	√	√	√	SP0057
2024	Buick	Enclave	Active Safety Control Module	√	√	√	√		
2024	Buick	Enclave	Rear Drive Control Module	√	√	√	√	√	SP0003
2024	Buick	Enclave	Video Processing Control Module	√	√	√	√	√	
2024	Buick	Enclave	Frontview Camera - Windshield	√	√	√	√	√	SP0196,SP075A
2023	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0209 0115 0756 0086 0085 0757 0217 0258 0139 0006 075E 0760 076C 0761 0212 0114 0754 0753
2023	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0017
2023	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2023	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	Buick	Enclave	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	Buick	Enclave	Instrument Cluster	√	√	√	√	√	0247
2023	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0007 0129
2023	Buick	Enclave	HVAC Controls	√	√	√	√		
2023	Buick	Enclave	Liftgate Control Module	√	√	√	√	√	0146 0169
2023	Buick	Enclave	Seat Memory Control Module - Driver	√	√	√	√	√	
2023	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	Buick	Enclave	Power Steering Control Module	√	√	√	√		0089 0084
2023	Buick	Enclave	Suspension Control Module	√	√	√	√	√	
2023	Buick	Enclave	Chassis Control Module	√	√	√	√	√	0014 0078

2023	Buick	Enclave	Video Processing Control Module	√	√	√	√	√	
2023	Buick	Enclave	Amplifier	√	√	√	√		
2023	Buick	Enclave	Radio Controls	√	√	√	√		
2023	Buick	Enclave	Radio	√	√	√	√	√	0269 0793 0267 0226
2023	Buick	Enclave	Rear Drive Control Module	√	√	√	√	√	0003
2023	Buick	Enclave	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	Buick	Enclave	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	Buick	Enclave	Serial Data Gateway Module - Processor 1	√	√	√			
2023	Buick	Enclave	Serial Data Gateway Module - Processor 2	√	√	√			
2023	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247
2023	Buick	Enclave	Active Safety Control Module	√	√	√	√		
2023	Buick	Enclave	Frontview Camera - Windshield	√	√	√	√		0196
2023	Buick	Enclave	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Buick	Enclave	Short Range Radar Sensor - Rear Middle	√	√	√			
2023	Buick	Enclave	Keyless Entry Control Module	√	√	√	√	√	0759
2023	Buick	Enclave	Passenger Presence Module	√	√	√	√	√	0057
2023	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0209 0132 0115 0086 0212 0214 0217 0006 0144 0139 0757 0085 075E 075F 0760 0761 0213 0762 0258 0763 0764 0765 0017 0016 075C
2023	Buick	Encore	Transmission Control Module	√	√	√	√	√	0766 0758 0767 0768 0229 078F 0790
2023	Buick	Encore	Brake System Control Module	√	√	√	√	√	0172 0134 0111 0758
2023	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	Buick	Encore	Body Control Module	√	√	√	√	√	0247
2023	Buick	Encore	Instrument Cluster	√	√	√	√	√	0007 0129
2023	Buick	Encore	HVAC Control Module	√	√	√	√	√	
2023	Buick	Encore	HVAC Controls	√	√	√	√		
2023	Buick	Encore	Rear Drive Control Module	√	√	√	√	√	0003
2023	Buick	Encore	Video Processing Control Module	√	√	√	√	√	
2023	Buick	Encore	Amplifier	√	√	√	√		
2023	Buick	Encore	Headlamp Control Module	√	√	√	√	√	0195
2023	Buick	Encore	Liftgate Control Module	√	√	√	√	√	0146 0169
2023	Buick	Encore	Seat Memory Control Module - Driver	√	√	√	√	√	
2023	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	Buick	Encore	Power Steering Control Module	√	√	√	√		0089 0084
2023	Buick	Encore	Radio	√	√	√	√	√	0150 0226 0269 0793

2023	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247
2023	Buick	Encore	Serial Data Gateway Module - Processor 1	√	√	√			
2023	Buick	Encore	Serial Data Gateway Module - Processor 2	√	√	√			
2023	Buick	Encore	Head-Up Display Module	√	√	√	√	√	
2023	Buick	Encore	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	Buick	Encore	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	Buick	Encore	Steering Column Lock Control Module	√	√	√	√		
2023	Buick	Encore	Frontview Camera - Windshield	√	√	√	√		0196 0084
2023	Buick	Encore	Keyless Entry Control Module	√	√	√	√	√	0759
2023	Buick	Encore	Passenger Presence Module	√	√	√	√	√	0057
2023	Buick	Envision	Engine Control Module	√	√	√	√	√	0263 0209 075E 076B 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0764 0762 0270 0130
2023	Buick	Envision	Transmission Control Module	√	√	√	√	√	0019 076A
2023	Buick	Envision	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758 0229 078F 0790 0799
2023	Buick	Envision	Restraints Control Module	√	√	√	√	√	0758 0134
2023	Buick	Envision	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	Buick	Envision	Instrument Panel Cluster Control Module	√	√	√	√	√	
2023	Buick	Envision	Serial Data Gateway Module	√	√	√			
2023	Buick	Envision	Power Steering Control Module	√	√	√	√		0766
2023	Buick	Envision	Wireless Accessory Charging Module	√	√	√	√		
2023	Buick	Envision	Video Processing Module	√	√	√			
2023	Buick	Envision	Rear Drive Control Module	√	√	√	√	√	
2023	Buick	Envision	Audio Amplifier	√	√	√	√		
2023	Buick	Envision	Heater and Air Conditioning Auxiliary Control	√	√	√			
2023	Buick	Envision	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	Buick	Envision	Infotainment Control Switch	√	√	√			
2023	Buick	Envision	Radio Controls	√	√	√	√		
2023	Buick	Envision	Radio	√	√	√	√	√	0769 0269 07A7 07A8
2023	Buick	Envision	Video Display - Right Front Seat Back	√	√	√			
2023	Buick	Envision	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	Buick	Envision	Headlamp Control Module	√	√	√	√		0195
2023	Buick	Envision	Rear Gate Module	√	√	√	√	√	0146 0753
2023	Buick	Envision	Telematics Control Module	√	√	√	√		0270 0755
2023	Buick	Envision	Frontview Camera - Windshield	√	√	√	√		0196
2023	Buick	Envision	Parking Assist Control Module	√	√	√	√	√	
2023	Buick	Envision	Side Obstacle Detection Control Module - Left	√	√	√			
2023	Buick	Envision	Side Obstacle Detection Control Module - Right	√	√	√			
2023	Buick	Envision	Steering Column Lock Control Module	√	√	√	√		

2023	Buick	Envision	Lighting Control Module	√	√	√	√	√	
2023	Buick	Envision	Gear Shift Control Module	√					
2023	Buick	Envision	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	Buick	Envision	Driver Monitoring System Control Module	√	√	√			
2023	Buick	Envision	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Buick	Envision	Image Processing Module	√	√	√	√		
2023	Buick	Envision	Electronic Suspension Control Module	√	√	√	√	√	0198
2022	Buick	Enclave	Amplifier	√	√	√	√		
2022	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Buick	Enclave	HVAC Controls	√	√	√	√		
2022	Buick	Enclave	Radio Controls	√	√	√	√		0241
2022	Buick	Enclave	Radio	√	√	√	√	√	0226 0267 0269
2022	Buick	Enclave	Headlamp Control Module	√	√	√	√	√	0195
2022	Buick	Enclave	Liftgate Control Module	√	√	√	√	√	0146 0169
2022	Buick	Enclave	Seat Memory Control Module - Driver	√	√	√	√	√	
2022	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	Buick	Enclave	Video Processing Control Module	√	√	√	√	√	
2022	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0017
2022	Buick	Enclave	Chassis Control Module	√	√	√	√	√	0014 0078
2022	Buick	Enclave	Active Safety Control Module	√	√	√	√		
2022	Buick	Enclave	Frontview Camera - Windshield	√	√	√	√		0196
2022	Buick	Enclave	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0209 0115 0756 0086 0085 0757 0217 0258 0139 0006
2022	Buick	Enclave	Instrument Cluster	√	√	√	√	√	0247
2022	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247 0271
2022	Buick	Enclave	Serial Data Gateway Module - Processor 1	√	√	√			
2022	Buick	Enclave	Serial Data Gateway Module - Processor 2	√	√	√			
2022	Buick	Enclave	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Buick	Enclave	Keyless Entry Control Module	√	√	√	√	√	0759
2022	Buick	Enclave	Passenger Presence Module	√	√	√	√	√	0057
2022	Buick	Enclave	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2022	Buick	Enclave	Power Steering Control Module	√	√	√	√		0089 0084
2022	Buick	Enclave	Suspension Control Module	√	√	√	√	√	

2022	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2022	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0755 0259 0048 0011
2022	Buick	Encore	HVAC Controls	√	√	√	√		
2022	Buick	Encore	Radio	√	√	√	√	√	0150 0226 0269 0267
2022	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Buick	Encore	Headlamp Control Module	√	√	√	√	√	0195
2022	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2022	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2022	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247 0271
2022	Buick	Encore	Serial Data Gateway Module	√	√	√			
2022	Buick	Encore	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	Buick	Encore	Steering Column Lock Control Module	√	√	√	√		
2022	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Buick	Encore	Keyless Entry Control Module	√	√	√	√	√	0759
2022	Buick	Encore	Passenger Presence Module	√	√	√	√	√	0057
2022	Buick	Encore	Frontview Camera - Windshield	√	√	√	√	√	0196 0084 0205 075A
2022	Buick	Encore	Transmission Control Module	√	√	√	√	√	0016 075C 0017 0036
2022	Buick	Encore	Rear Drive Control Module	√	√	√	√	√	0003 075B
2022	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0209 0132 0115 0086 0212 0214 0217 0006 0144 0139 0757 0085 075D 075E 075F 0760 0756 0761 0213 0762 0758 0763 0764
2022	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2022	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2022	Buick	Encore	Power Steering Control Module	√	√	√	√		0089 0084 0207
2022	Buick	Encore	Amplifier	√	√	√	√		
2022	Buick	Encore	Head-Up Display Module	√	√	√	√	√	
2022	Buick	Encore	Side Obstacle Detection Control Module - Right	√	√	√		√	
2022	Buick	Encore	Serial Data Gateway Module - Processor 1	√	√	√			
2022	Buick	Encore	Serial Data Gateway Module - Processor 2	√	√	√			
2022	Buick	Encore	Liftgate Control Module	√	√	√	√	√	0146 0169
2022	Buick	Encore	Seat Memory Control Module - Driver	√	√	√	√	√	
2022	Buick	Encore	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2022	Buick	Envision	Audio Amplifier	√	√	√	√		
2022	Buick	Envision	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2022	Buick	Envision	Radio	√	√	√	√	√	0769

2022	Buick	Envision	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2022	Buick	Envision	Headlamp Control Module	√	√	√	√	√	0195
2022	Buick	Envision	Rear Gate Module	√	√	√	√	√	0753
2022	Buick	Envision	Telematics Control Module	√	√	√	√	√	0270
2022	Buick	Envision	Restraints Control Module	√	√	√	√	√	0758 0134
2022	Buick	Envision	Radio Controls	√	√	√	√	√	
2022	Buick	Envision	Transmission Control Module	√	√	√	√	√	0019 076A
2022	Buick	Envision	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758
2022	Buick	Envision	Power Steering Control Module	√	√	√	√	√	0766
2022	Buick	Envision	Engine Control Module	√	√	√	√	√	0263 0209 075D 075E 076B 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0764 0762 0250 0130
2022	Buick	Envision	Video Processing Module	√	√	√	√	√	
2022	Buick	Envision	Wireless Accessory Charging Module	√	√	√	√	√	
2022	Buick	Envision	Gear Shift Control Module	√	√	√	√	√	
2022	Buick	Envision	Instrument Panel Cluster Control Module	√	√	√	√	√	
2022	Buick	Envision	Parking Assist Control Module	√	√	√	√	√	
2022	Buick	Envision	Lighting Control Module	√	√	√	√	√	
2022	Buick	Envision	Serial Data Gateway Module	√	√	√	√	√	
2022	Buick	Envision	Side Obstacle Detection Control Module - Left	√	√	√	√	√	076F
2022	Buick	Envision	Side Obstacle Detection Control Module - Right	√	√	√	√	√	
2022	Buick	Envision	Restraints Occupant Classification System Module - Passenger	√	√	√	√	√	0057
2022	Buick	Envision	Image Processing Module	√	√	√	√	√	
2022	Buick	Envision	Frontview Camera - Windshield	√	√	√	√	√	0196
2022	Buick	Envision	Forward Range Radar Sensor - Long Range	√	√	√	√	√	0260
2022	Buick	Envision	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2022	Buick	Envision	Rear Drive Control Module	√	√	√	√	√	
2021	Buick	Enclave	Liftgate Control Module	√	√	√	√	√	0146 0169
2021	Buick	Enclave	Seat Memory Control Module - Driver	√	√	√	√	√	
2021	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	Buick	Enclave	Video Processing Control Module	√	√	√	√	√	
2021	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0209 0115 0756 0086 0085 0757 0217 0258 0139 0006
2021	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0017
2021	Buick	Enclave	Chassis Control Module	√	√	√	√	√	0014 0078
2021	Buick	Enclave	Rear Drive Control Module	√	√	√	√	√	0003
2021	Buick	Enclave	Instrument Cluster	√	√	√	√	√	0247
2021	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247 0271

2021	Buick	Enclave	Serial Data Gateway Module - Processor 1	√	√	√			
2021	Buick	Enclave	Serial Data Gateway Module - Processor 2	√	√	√			
2021	Buick	Enclave	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Buick	Enclave	Keyless Entry Control Module	√	√	√	√	√	0759
2021	Buick	Enclave	Passenger Presence Module	√	√	√	√	√	0057
2021	Buick	Enclave	Active Safety Control Module	√	√	√	√		
2021	Buick	Enclave	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Buick	Enclave	Frontview Camera - Windshield	√	√	√	√		0196
2021	Buick	Enclave	Radio	√	√	√	√	√	0226 0267 0269
2021	Buick	Enclave	HVAC Controls	√	√	√	√		
2021	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Buick	Enclave	Amplifier	√	√	√	√		
2021	Buick	Enclave	Radio Controls	√	√	√	√		0241
2021	Buick	Enclave	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2021	Buick	Enclave	Power Steering Control Module	√	√	√	√		0089 0084
2021	Buick	Enclave	Suspension Control Module	√	√	√	√	√	
2021	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2021	Buick	Encore	Headlamp Control Module	√	√	√	√	√	0195
2021	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0755 0259 0048 0011
2021	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2021	Buick	Encore	Steering Column Lock Control Module	√	√	√	√		
2021	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247 0271
2021	Buick	Encore	Serial Data Gateway Module	√	√	√			
2021	Buick	Encore	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Buick	Encore	Frontview Camera - Windshield	√	√	√	√	√	0196 0084 0205 075A
2021	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Buick	Encore	Keyless Entry Control Module	√	√	√	√	√	0759
2021	Buick	Encore	Passenger Presence Module	√	√	√	√	√	0057
2021	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2021	Buick	Encore	Power Steering Control Module	√	√	√	√		0089 0084 0207
2021	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2021	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150

2021	Buick	Encore	Radio	√	√	√	√	√	0150 0226 0269 0267
2021	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Buick	Encore	Amplifier	√	√	√	√		
2021	Buick	Encore	Radio Controls	√	√	√	√		0241
2021	Buick	Encore	Rear Drive Control Module	√	√	√	√	√	0003 075B
2021	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0209 0132 0115 0086 0212 0214 0217 0006 0144 0139 0757 0085 075D 075E 075F 0760 0756 0761 0213 0762 0258 0763 0764 0765 0156 0020 0067
2021	Buick	Encore	HVAC Controls	√	√	√	√		
2021	Buick	Encore	Transmission Control Module	√	√	√	√	√	0016 075C 0017 0036
2021	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217
2021	Buick	Encore	Head-Up Display Module	√	√	√	√	√	
2021	Buick	Encore	Side Obstacle Detection Control Module - Right	√	√	√		√	
2021	Buick	Encore	Serial Data Gateway Module - Processor 1	√	√	√			
2021	Buick	Encore	Serial Data Gateway Module - Processor 2	√	√	√			
2021	Buick	Encore	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2021	Buick	Encore	Video Processing Control Module	√	√	√	√	√	
2021	Buick	Encore	Seat Memory Control Module - Driver	√	√	√	√	√	
2021	Buick	Encore	Liftgate Control Module	√	√	√	√	√	0146 0169
2021	Buick	Envision	Frontview Camera - Windshield	√	√	√	√		0196
2021	Buick	Envision	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Buick	Envision	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2021	Buick	Envision	Headlamp Control Module	√	√	√	√		0195
2021	Buick	Envision	Rear Gate Module	√	√	√	√		0753
2021	Buick	Envision	Instrument Panel Cluster Control Module	√	√	√	√	√	
2021	Buick	Envision	Parking Assist Control Module	√	√	√	√	√	
2021	Buick	Envision	Serial Data Gateway Module	√	√	√			
2021	Buick	Envision	Lighting Control Module	√	√	√	√	√	
2021	Buick	Envision	Gear Shift Control Module	√					
2021	Buick	Envision	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2021	Buick	Envision	Side Obstacle Detection Control Module - Right	√	√	√			
2021	Buick	Envision	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2021	Buick	Envision	Radio	√	√	√	√	√	0769
2021	Buick	Envision	Restraints Control Module	√	√	√	√	√	0758 0134
2021	Buick	Envision	Video Processing Module	√	√	√			
2021	Buick	Envision	Wireless Accessory Charging Module	√	√	√	√		
2021	Buick	Envision	Transmission Control Module	√	√	√	√	√	0019 076A

2021	Buick	Envision	Engine Control Module	√	√	√	√	√	0263 0209 075D 075E 076B 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0764 0762 0220 0130
2021	Buick	Envision	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2021	Buick	Envision	Rear Drive Control Module	√	√	√	√		
2021	Buick	Envision	Image Processing Module	√	√	√	√		
2021	Buick	Envision	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758
2021	Buick	Envision	Power Steering Control Module	√	√	√	√		0766
2021	Buick	Envision	Telematics Control Module	√	√	√	√		0270
2021	Buick	Envision	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2021	Buick	Envision	Audio Amplifier	√	√	√	√		
2020	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0017
2020	Buick	Enclave	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	Buick	Enclave	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Buick	Enclave	Serial Data Gateway Module - Processor 2	√	√	√			
2020	Buick	Enclave	Video Processing Control Module	√	√	√	√	√	
2020	Buick	Enclave	Instrument Cluster	√	√	√	√	√	0247
2020	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Buick	Enclave	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Buick	Enclave	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Buick	Enclave	Passenger Presence Module	√	√	√	√	√	0057
2020	Buick	Enclave	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Buick	Enclave	Side Object Sensor Module - Left	√	√	√		√	
2020	Buick	Enclave	Active Safety Control Module	√	√	√	√		
2020	Buick	Enclave	Frontview Camera - Windshield	√	√	√	√		0196
2020	Buick	Enclave	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Buick	Enclave	Short Range Radar Sensor - Left Front	√	√	√			
2020	Buick	Enclave	Short Range Radar Sensor - Right Front	√	√	√			
2020	Buick	Enclave	Short Range Radar Sensor - Rear Middle	√	√	√			
2020	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2020	Buick	Enclave	Power Steering Control Module	√	√	√	√		0089 0084
2020	Buick	Enclave	Suspension Control Module	√	√	√	√	√	
2020	Buick	Enclave	Amplifier	√	√	√	√		

2020	Buick	Enclave	HVAC Controls	√	√	√	√	√	
2020	Buick	Enclave	Radio	√	√	√	√	√	0226 0267 0269
2020	Buick	Enclave	Radio Controls	√	√	√	√	√	0241
2020	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0156 0209 0006 0115 0756 0086 0085 0154 0217 0258 0236
2020	Buick	Enclave	Rear Drive Control Module	√	√	√	√	√	0003
2020	Buick	Enclave	Chassis Control Module	√	√	√	√	√	0014 0078
2020	Buick	Encore	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A 0084
2020	Buick	Encore	Headlamp Control Module	√	√	√	√	√	0195
2020	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006 0144 0258 0139 0115 0212 0214 0757 0085 075D 075E 075F 0760 0756 0761 0762 0763
2020	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017 0036 0016 075C
2020	Buick	Encore	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Buick	Encore	Passenger Presence Module	√	√	√	√	√	0057
2020	Buick	Encore	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Buick	Encore	HVAC Controls	√	√	√	√	√	
2020	Buick	Encore	Radio Controls	√	√	√	√	√	0241
2020	Buick	Encore	Radio	√	√	√	√	√	0226 0150 0269 0267
2020	Buick	Encore	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2020	Buick	Encore	Power Steering Control Module	√	√	√	√	√	0207 0089 0084
2020	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Buick	Encore	Rear Drive Control Module	√	√	√	√	√	0003 075B
2020	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2020	Buick	Encore	Head-Up Display Module	√	√	√	√	√	
2020	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Buick	Encore	Side Object Sensor Module - Left	√	√	√	√	√	
2020	Buick	Encore	Side Object Sensor Module - Right	√	√	√	√	√	
2020	Buick	Encore	Serial Data Gateway Module - Processor 1	√	√	√	√	√	
2020	Buick	Encore	Serial Data Gateway Module - Processor 2	√	√	√	√	√	
2020	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Buick	Encore	Steering Column Lock Control Module	√	√	√	√	√	

2020	Buick	Encore	Video Processing Control Module	√	√	√	√	√	
2020	Buick	Encore	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Buick	Encore	Amplifier	√	√	√	√		
2020	Buick	Encore	Serial Data Gateway Module	√	√	√			
2020	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2020	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Buick	Encore	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2020	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2020	Buick	Encore	Human Machine Interface Control Module	√	√	√	√	√	0150
2020	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217
2020	Buick	Envision	Transmission Control Module	√	√	√	√	√	0017 0036
2020	Buick	Envision	Serial Data Gateway Module	√	√	√			
2020	Buick	Envision	Instrument Cluster	√	√	√	√	√	0247
2020	Buick	Envision	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Buick	Envision	Video Processing Control Module	√	√	√	√	√	
2020	Buick	Envision	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Buick	Envision	Keyless Entry Control Module	√	√	√	√	√	
2020	Buick	Envision	Passenger Presence Module	√	√	√	√	√	0057
2020	Buick	Envision	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2020	Buick	Envision	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2020	Buick	Envision	Power Steering Control Module	√	√	√	√		0081 0080 0089
2020	Buick	Envision	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Buick	Envision	Suspension Control Module	√	√	√	√	√	
2020	Buick	Envision	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Buick	Envision	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	Buick	Envision	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Buick	Envision	Accessory DC/AC Power Inverter Module	√	√	√	√	√	
2020	Buick	Envision	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Buick	Envision	Amplifier	√	√	√	√		
2020	Buick	Envision	Human Machine Interface Control Module	√	√	√	√	√	0150
2020	Buick	Envision	HVAC Controls	√	√	√	√	√	
2020	Buick	Envision	Radio	√	√	√	√	√	0226 0150
2020	Buick	Envision	Radio Controls	√	√	√	√	√	0241
2020	Buick	Envision	Active Safety Control Module	√	√	√	√	√	
2020	Buick	Envision	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2020	Buick	Envision	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Buick	Envision	Side Object Sensor Module - Left	√	√	√		√	

2020	Buick	Envision	Side Object Sensor Module - Right	√	√	√	√	√	
2020	Buick	Envision	Forward Range Radar Sensor - Long Range	√	√	√	√	√	0260
2020	Buick	Envision	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0226 0130 0020 0212
2020	Buick	Envision	Rear Drive Control Module	√	√	√	√	√	0003
2020	Buick	Regal	Transmission Control Module	√	√	√	√	√	0017 0020 0084
2020	Buick	Regal	Headlamp Control Module	√	√	√	√	√	0195
2020	Buick	Regal	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Buick	Regal	Passenger Presence Module	√	√	√	√	√	0057
2020	Buick	Regal	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0226 0130 0020 0212
2020	Buick	Regal	Side Object Sensor Module - Left	√	√	√	√	√	
2020	Buick	Regal	Instrument Cluster	√	√	√	√	√	0247
2020	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Buick	Regal	Serial Data Gateway Module	√	√	√	√	√	
2020	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2020	Buick	Regal	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2020	Buick	Regal	Suspension Control Module	√	√	√	√	√	
2020	Buick	Regal	Active Safety Control Module	√	√	√	√	√	
2020	Buick	Regal	Forward Range Radar Sensor - Long Range	√	√	√	√	√	0260
2020	Buick	Regal	Frontview Camera - Windshield	√	√	√	√	√	0196
2020	Buick	Regal	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Buick	Regal	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Buick	Regal	Amplifier	√	√	√	√	√	
2020	Buick	Regal	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Buick	Regal	HVAC Controls	√	√	√	√	√	
2020	Buick	Regal	Radio	√	√	√	√	√	0150 0226 0269 0267
2020	Buick	Regal	Radio Controls	√	√	√	√	√	0241
2020	Buick	Regal	Rear Drive Control Module	√	√	√	√	√	0003
2020	Buick	Regal	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	Buick	Cascada	Transmission Control Module	√	√	√	√	√	0017 0036

2019	Buick	Cascada	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0130
2019	Buick	Cascada	Headlamp Control Module	√	√	√	√	√	0195
2019	Buick	Cascada	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Buick	Cascada	Chassis Control Module	√	√	√	√	√	0217
2019	Buick	Cascada	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Buick	Cascada	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Buick	Cascada	Front Seat Heating Control Module	√	√	√	√	√	
2019	Buick	Cascada	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2019	Buick	Cascada	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2019	Buick	Cascada	Parking Brake Control Module	√	√	√	√	√	0229
2019	Buick	Cascada	Power Steering Control Module	√	√	√	√		0089 0081 0080
2019	Buick	Cascada	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Buick	Cascada	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Buick	Cascada	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2019	Buick	Cascada	Radio	√	√	√	√	√	
2019	Buick	Cascada	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2019	Buick	Cascada	Folding Top Control Module	√	√	√	√	√	0247 0004 0005
2019	Buick	Cascada	Instrument Cluster	√	√	√	√	√	0247
2019	Buick	Cascada	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Buick	Cascada	Headlamp High Beam Control Module	√	√	√	√	√	0247
2019	Buick	Cascada	Passenger Presence Module	√	√	√	√	√	0057
2019	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0017
2019	Buick	Enclave	Chassis Control Module	√	√	√	√	√	0014 0078
2019	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0156 0209 0006 0115 0756 0086 0085 0154 0217 0258 0236
2019	Buick	Enclave	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2019	Buick	Enclave	Power Steering Control Module	√	√	√	√	√	0089 0084
2019	Buick	Enclave	Suspension Control Module	√	√	√	√	√	
2019	Buick	Enclave	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Buick	Enclave	Passenger Presence Module	√	√	√	√	√	0057
2019	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Buick	Enclave	Keyless Entry Control Module	√	√	√	√	√	0759
2019	Buick	Enclave	Instrument Cluster	√	√	√	√	√	0247
2019	Buick	Enclave	Left Side Object Detection Control Module	√	√	√			

2019	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Buick	Enclave	Frontview Camera - Windshield	√	√	√	√		0196
2019	Buick	Enclave	Active Safety Control Module	√	√	√	√		
2019	Buick	Enclave	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Buick	Enclave	Left Front Short Range Radar Sensor Module	√	√	√			
2019	Buick	Enclave	Right Front Short Range Radar Sensor Module	√	√	√			
2019	Buick	Enclave	Rear Short Range Radar Sensor Module	√	√	√			
2019	Buick	Enclave	Amplifier	√	√	√	√		
2019	Buick	Enclave	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Buick	Enclave	HVAC Controls	√	√	√	√	√	
2019	Buick	Enclave	Radio Controls	√	√	√	√		0241
2019	Buick	Enclave	Radio	√	√	√	√	√	0226 0150
2019	Buick	Enclave	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Buick	Enclave	Video Processing Control Module	√	√	√	√	√	
2019	Buick	Enclave	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	Buick	Enclave	Serial Data Gateway Module - Processor 1	√	√	√			
2019	Buick	Enclave	Serial Data Gateway Module - Processor 2	√	√	√			
2019	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0066 0760
2019	Buick	Encore	Headlamp Control Module	√	√	√	√	√	0195
2019	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Buick	Encore	Steering Column Lock Control Module	√	√	√	√		
2019	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217
2019	Buick	Encore	Trailer Lighting Control Module	√	√	√	√	√	0247
2019	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2019	Buick	Encore	Power Steering Control Module	√	√	√	√		0207
2019	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Buick	Encore	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Buick	Encore	Keyless Entry Control Module	√	√	√	√	√	
2019	Buick	Encore	Passenger Presence Module	√	√	√	√		0057
2019	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2019	Buick	Encore	Left Side Object Detection Control Module	√	√	√		√	

2019	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Buick	Encore	Serial Data Gateway Module	√	√	√			
2019	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Buick	Encore	Amplifier	√	√	√	√		
2019	Buick	Encore	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Buick	Encore	Radio	√	√	√	√	√	0226 0150
2019	Buick	Encore	Radio Controls	√	√	√	√		0241
2019	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2019	Buick	Encore	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2019	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2019	Buick	Envision	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Buick	Envision	Instrument Cluster	√	√	√	√	√	0247
2019	Buick	Envision	Left Side Object Detection Control Module	√	√	√		√	
2019	Buick	Envision	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Buick	Envision	Right Side Object Detection Control Module	√	√	√		√	
2019	Buick	Envision	Serial Data Gateway Module	√	√	√			
2019	Buick	Envision	Headlamp Control Module	√	√	√	√	√	0195
2019	Buick	Envision	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Buick	Envision	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Buick	Envision	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Buick	Envision	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0006 0130 0000 0010
2019	Buick	Envision	Accessory DC/AC Power Inverter Module	√	√	√	√	√	
2019	Buick	Envision	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Buick	Envision	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Buick	Envision	Active Safety Control Module	√	√	√	√	√	
2019	Buick	Envision	Long Range Radar Sensor Module	√	√	√	√	√	0260
2019	Buick	Envision	Video Processing Control Module	√	√	√	√	√	
2019	Buick	Envision	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Buick	Envision	Passenger Presence Module	√	√	√	√	√	0057
2019	Buick	Envision	Keyless Entry Control Module	√	√	√	√	√	
2019	Buick	Envision	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150

2019	Buick	Envision	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2019	Buick	Envision	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	Buick	Envision	Steering Column Lock Control Module	√	√	√	√		
2019	Buick	Envision	Amplifier	√	√	√	√		
2019	Buick	Envision	Radio	√	√	√	√	√	0226 0150
2019	Buick	Envision	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Buick	Envision	HVAC Controls	√	√	√	√	√	
2019	Buick	Envision	Radio Controls	√	√	√	√		0241
2019	Buick	Envision	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2019	Buick	Envision	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Buick	Envision	Power Steering Control Module	√	√	√	√		0081 0080 0089
2019	Buick	Envision	Suspension Control Module	√	√	√	√	√	
2019	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Buick	LaCrosse	Chassis Control Module	√	√	√	√	√	0014 0078
2019	Buick	LaCrosse	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2019	Buick	LaCrosse	Hybrid/EV Powertrain Control Module 2	√	√	√	√	√	0202 0218
2019	Buick	LaCrosse	Hybrid/EV Powertrain Control Module 1	√	√	√	√	√	0436 0263
2019	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0006 0756 0005 0006
2019	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2019	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	Buick	LaCrosse	Brake Booster Control Module	√	√	√	√		
2019	Buick	LaCrosse	Active Safety Control Module	√	√	√	√	√	
2019	Buick	LaCrosse	Frontview Camera - Windshield	√	√	√	√		0196
2019	Buick	LaCrosse	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2019	Buick	LaCrosse	Passenger Presence Module	√	√	√	√	√	0057
2019	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Buick	LaCrosse	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Buick	LaCrosse	Amplifier	√	√	√	√		
2019	Buick	LaCrosse	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Buick	LaCrosse	HVAC Controls	√	√	√	√	√	
2019	Buick	LaCrosse	Radio Controls	√	√	√	√		0241
2019	Buick	LaCrosse	Radio	√	√	√	√	√	0226 0150

2019	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2019	Buick	LaCrosse	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2019	Buick	LaCrosse	Suspension Control Module	√	√	√	√	√	
2019	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0247
2019	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√		√	
2019	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Buick	LaCrosse	Right Side Object Detection Control Module	√	√	√		√	
2019	Buick	LaCrosse	Serial Data Gateway Module	√	√	√			
2019	Buick	Regal	Transmission Control Module	√	√	√	√	√	0020 0084 0017
2019	Buick	Regal	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0120 0256 0007
2019	Buick	Regal	Headlamp Control Module	√	√	√	√	√	0195
2019	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	Buick	Regal	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Buick	Regal	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Buick	Regal	Instrument Cluster	√	√	√	√	√	0247
2019	Buick	Regal	Left Side Object Detection Control Module	√	√	√		√	
2019	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Buick	Regal	Serial Data Gateway Module	√	√	√			
2019	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	0759
2019	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Buick	Regal	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Buick	Regal	Passenger Presence Module	√	√	√	√	√	0057
2019	Buick	Regal	Amplifier	√	√	√	√		
2019	Buick	Regal	HVAC Controls	√	√	√	√	√	
2019	Buick	Regal	Radio Controls	√	√	√	√		0241
2019	Buick	Regal	Radio	√	√	√	√	√	0226 0267 0269 0150
2019	Buick	Regal	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2019	Buick	Regal	Active Safety Control Module	√	√	√	√		
2019	Buick	Regal	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Buick	Regal	Frontview Camera - Windshield	√	√	√	√		0196
2019	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2019	Buick	Regal	Power Steering Control Module	√	√	√	√		0081 0080 0089
2019	Buick	Regal	Suspension Control Module	√	√	√	√	√	

2019	Buick	Regal	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Buick	Regal	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	Buick	Cascada	Folding Top Control Module	√	√	√	√	√	0247 0004 0005
2018	Buick	Cascada	Instrument Cluster	√	√	√	√	√	0247
2018	Buick	Cascada	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Buick	Cascada	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Buick	Cascada	Chassis Control Module	√	√	√	√	√	0217
2018	Buick	Cascada	Frontview Camera Module	√	√	√	√	√	0247 0205 0196 075A
2018	Buick	Cascada	Headlamp Control Module	√	√	√	√	√	0195
2018	Buick	Cascada	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Buick	Cascada	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Buick	Cascada	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2018	Buick	Cascada	Radio	√	√	√	√	√	
2018	Buick	Cascada	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Buick	Cascada	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2018	Buick	Cascada	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2018	Buick	Cascada	Parking Brake Control Module	√	√	√	√	√	0229
2018	Buick	Cascada	Power Steering Control Module	√	√	√	√		0089 0081 0080
2018	Buick	Cascada	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Buick	Cascada	Front Seat Heating Control Module	√	√	√	√	√	
2018	Buick	Cascada	Passenger Presence Module	√	√	√	√	√	0057
2018	Buick	Cascada	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0111 0258 0158
2018	Buick	Enclave	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Buick	Enclave	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0156 0209 0006 0115 0756 0086 0085 0154 0217 0258 0236
2018	Buick	Enclave	Instrument Cluster	√	√	√	√	√	0247
2018	Buick	Enclave	Left Side Object Detection Control Module	√	√	√		√	
2018	Buick	Enclave	Serial Data Gateway Module	√	√	√			
2018	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Buick	Enclave	Active Safety Control Module	√	√	√	√		
2018	Buick	Enclave	Frontview Camera Module	√	√	√	√		0196
2018	Buick	Enclave	Left Front Short Range Radar Sensor Module	√	√	√			
2018	Buick	Enclave	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Buick	Enclave	Right Front Short Range Radar Sensor Module	√	√	√			

2018	Buick	Enclave	Rear Short Range Radar Sensor Module	√	√	√			
2018	Buick	Enclave	Video Processing Control Module	√	√	√	√	√	
2018	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0017
2018	Buick	Enclave	Chassis Control Module	√	√	√	√	√	0014 0078
2018	Buick	Enclave	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Buick	Enclave	Amplifier	√	√	√	√		
2018	Buick	Enclave	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Buick	Enclave	HVAC Controls	√	√	√	√	√	
2018	Buick	Enclave	Radio Controls	√	√	√	√		0241
2018	Buick	Enclave	Radio	√	√	√	√	√	0226 0150
2018	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2018	Buick	Enclave	Power Steering Control Module	√	√	√	√		0089 0084
2018	Buick	Enclave	Suspension Control Module	√	√	√	√	√	
2018	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Buick	Enclave	Keyless Entry Control Module	√	√	√	√	√	0759
2018	Buick	Enclave	Passenger Presence Module	√	√	√	√	√	0057
2018	Buick	Enclave	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2018	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Buick	Encore	Headlamp Control Module	√	√	√	√	√	0195
2018	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2018	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0066 0260
2018	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2018	Buick	Encore	Radio	√	√	√	√	√	0226 0150
2018	Buick	Encore	Passenger Presence Module	√	√	√	√		0057
2018	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2018	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Buick	Encore	Left Side Object Detection Control Module	√	√	√		√	
2018	Buick	Encore	Serial Data Gateway Module	√	√	√			
2018	Buick	Encore	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2018	Buick	Encore	Keyless Entry Control Module	√	√	√	√	√	
2018	Buick	Encore	Amplifier	√	√	√	√		

2018	Buick	Encore	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2018	Buick	Encore	Power Steering Control Module	√	√	√	√	√	0207
2018	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√	√	√	0093 0090
2018	Buick	Encore	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2018	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0150 0233 0150
2018	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217
2018	Buick	Encore	HVAC Controls	√	√	√	√	√	
2018	Buick	Encore	Radio Controls	√	√	√	√	√	0241
2018	Buick	Encore	Rear Differential Clutch Control Module	√	√	√	√	√	0003 075B
2018	Buick	Envision	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0076 0147 0236
2018	Buick	Envision	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Buick	Envision	Headlamp Control Module	√	√	√	√	√	0195
2018	Buick	Envision	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Buick	Envision	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Buick	Envision	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Buick	Envision	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Buick	Envision	Steering Column Lock Control Module	√	√	√	√	√	
2018	Buick	Envision	Keyless Entry Control Module	√	√	√	√	√	
2018	Buick	Envision	Instrument Cluster	√	√	√	√	√	0247
2018	Buick	Envision	Left Side Object Detection Control Module	√	√	√	√	√	
2018	Buick	Envision	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Buick	Envision	Right Side Object Detection Control Module	√	√	√	√	√	
2018	Buick	Envision	Serial Data Gateway Module	√	√	√	√	√	
2018	Buick	Envision	Active Safety Control Module	√	√	√	√	√	
2018	Buick	Envision	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2018	Buick	Envision	Long Range Radar Sensor Module	√	√	√	√	√	0260
2018	Buick	Envision	Video Processing Control Module	√	√	√	√	√	
2018	Buick	Envision	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Buick	Envision	Amplifier	√	√	√	√	√	
2018	Buick	Envision	Human Machine Interface Control Module	√	√	√	√	√	0150

2018	Buick	Envision	HVAC Controls	√	√	√	√	√	
2018	Buick	Envision	Radio Controls	√	√	√	√	√	0241
2018	Buick	Envision	Navigation Control Module	√	√	√	√	√	
2018	Buick	Envision	Radio	√	√	√	√	√	0226 0150
2018	Buick	Envision	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2018	Buick	Envision	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2018	Buick	Envision	Power Steering Control Module	√	√	√	√		0081 0080 0089
2018	Buick	Envision	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Buick	Envision	Suspension Control Module	√	√	√	√	√	
2018	Buick	Envision	Passenger Presence Module	√	√	√	√	√	0057
2018	Buick	Envision	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Buick	Envision	Accessory DC/AC Power Inverter Module	√	√	√	√	√	
2018	Buick	Envision	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2018	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Buick	LaCrosse	Chassis Control Module	√	√	√	√	√	0014 0078
2018	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Buick	LaCrosse	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2018	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2018	Buick	LaCrosse	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2018	Buick	LaCrosse	Suspension Control Module	√	√	√	√	√	
2018	Buick	LaCrosse	Brake Booster Control Module	√	√	√	√	√	
2018	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0006 0756 0005 0006
2018	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0247
2018	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√		√	
2018	Buick	LaCrosse	Right Side Object Detection Control Module	√	√	√		√	
2018	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Buick	LaCrosse	Serial Data Gateway Module	√	√	√			
2018	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2018	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Buick	LaCrosse	Passenger Presence Module	√	√	√	√	√	0057
2018	Buick	LaCrosse	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Buick	LaCrosse	Radio	√	√	√	√	√	0226 0150
2018	Buick	LaCrosse	Amplifier	√	√	√	√	√	
2018	Buick	LaCrosse	HVAC Controls	√	√	√	√	√	
2018	Buick	LaCrosse	Radio Controls	√	√	√	√	√	0241
2018	Buick	LaCrosse	Media Disc Player	√	√	√	√	√	
2018	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0436 0263

2018	Buick	LaCrosse	Hybrid Powertrain Control Module 2	√	√	√	√	√	0202 0218
2018	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2018	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Buick	LaCrosse	Active Safety Control Module	√	√	√	√	√	
2018	Buick	LaCrosse	Long Range Radar Sensor Module	√	√	√	√	√	0260
2018	Buick	LaCrosse	Video Processing Control Module	√	√	√	√	√	
2018	Buick	LaCrosse	Frontview Camera Module	√	√	√	√	√	0196
2018	Buick	LaCrosse	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2018	Buick	LaCrosse	Transmission Range Control Module	√	√	√	√	√	0014 0078 0013
2018	Buick	Regal	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0226 0130 0755 0005
2018	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Buick	Regal	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Buick	Regal	HVAC Controls	√	√	√	√	√	
2018	Buick	Regal	Radio Controls	√	√	√	√	√	0241
2018	Buick	Regal	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Buick	Regal	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Buick	Regal	Chassis Control Module	√	√	√	√	√	0014 0078
2018	Buick	Regal	Transmission Control Module	√	√	√	√	√	0020 0084 0017
2018	Buick	Regal	Active Safety Control Module	√	√	√	√	√	
2018	Buick	Regal	Frontview Camera Module	√	√	√	√	√	0196
2018	Buick	Regal	Long Range Radar Sensor Module	√	√	√	√	√	0260
2018	Buick	Regal	Instrument Cluster	√	√	√	√	√	0247
2018	Buick	Regal	Left Side Object Detection Control Module	√	√	√	√	√	
2018	Buick	Regal	Serial Data Gateway Module	√	√	√	√	√	
2018	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Buick	Regal	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Buick	Regal	Amplifier	√	√	√	√	√	
2018	Buick	Regal	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2018	Buick	Regal	Radio	√	√	√	√	√	0226 0150 0269 0267
2018	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2018	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	0759

2018	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Buick	Regal	Passenger Presence Module	√	√	√	√	√	0057
2018	Buick	Regal	Headlamp Control Module	√	√	√	√	√	0195
2018	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2018	Buick	Regal	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2018	Buick	Regal	Suspension Control Module	√	√	√	√	√	
2018	Buick	Regal	Steering Column Lock Control Module	√	√	√	√	√	
2018	Buick	Regal	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Buick	Regal	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	Buick	Verano	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Buick	Verano	Active Safety Control Module	√	√	√	√	√	
2018	Buick	Verano	Frontview Camera Module	√	√	√	√	√	0205 0196
2018	Buick	Verano	Long Range Radar Sensor Module	√	√	√	√	√	0260
2018	Buick	Verano	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Buick	Verano	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0000 0150
2017	Buick	Cascada	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Buick	Cascada	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Buick	Cascada	Frontview Camera Module	√	√	√	√	√	0247 0205 0196 075A
2017	Buick	Cascada	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2017	Buick	Cascada	Radio	√	√	√	√	√	
2017	Buick	Cascada	Multimedia Player Interface Module	√	√	√	√	√	0247
2017	Buick	Cascada	Instrument Cluster	√	√	√	√	√	0247
2017	Buick	Cascada	Folding Top Control Module	√	√	√	√	√	0247 0004 0005
2017	Buick	Cascada	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Buick	Cascada	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2017	Buick	Cascada	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Buick	Cascada	Passenger Presence Module	√	√	√	√	√	0057
2017	Buick	Cascada	Chassis Control Module	√	√	√	√	√	0217
2017	Buick	Cascada	Front Seat Heating Control Module	√	√	√	√	√	
2017	Buick	Cascada	Headlamp Control Module	√	√	√	√	√	0195
2017	Buick	Cascada	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Buick	Cascada	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0111 0250 0130
2017	Buick	Cascada	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2017	Buick	Cascada	Parking Brake Control Module	√	√	√	√	√	0229
2017	Buick	Cascada	Power Steering Control Module	√	√	√	√	√	0089 0081 0080

2017	Buick	Cascada	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Buick	Cascada	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2017	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Buick	Enclave	Headlamp Control Module	√	√	√			
2017	Buick	Enclave	Liftgate Control Module	√	√	√	√		0146
2017	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0016
2017	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247
2017	Buick	Enclave	Theft Deterrent Module	√	√	√	√		
2017	Buick	Enclave	Instrument Cluster	√	√	√	√	√	
2017	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2017	Buick	Enclave	Passenger Presence Module	√	√	√	√		0057
2017	Buick	Enclave	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2017	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2017	Buick	Enclave	Front Seat Heating Control Module	√	√	√	√	√	
2017	Buick	Enclave	Frontview Camera Module	√	√	√	√	√	0205 0196
2017	Buick	Enclave	Left Side Object Detection Control Module	√	√	√		√	
2017	Buick	Enclave	Right Side Object Detection Control Module	√	√	√		√	
2017	Buick	Enclave	Seat Memory Control Module	√	√	√	√	√	
2017	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2017	Buick	Enclave	Body Control Module	√	√	√	√	√	0263 0261
2017	Buick	Enclave	Driver Door Switch Panel Control Module	√	√	√	√	√	
2017	Buick	Enclave	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2017	Buick	Enclave	Personal Audio Link Control Module	√	√	√			0231
2017	Buick	Enclave	Rear Audio Control Module	√	√	√	√		
2017	Buick	Enclave	Radio	√	√	√	√	√	
2017	Buick	Enclave	Digital Radio Receiver Control Module	√	√	√	√	√	
2017	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0212
2017	Buick	Enclave	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2017	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2017	Buick	Encore	Amplifier	√	√	√	√		
2017	Buick	Encore	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Buick	Encore	Radio	√	√	√	√	√	0226 0150
2017	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Buick	Encore	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2017	Buick	Encore	Keyless Entry Control Module	√	√	√	√	√	
2017	Buick	Encore	Passenger Presence Module	√	√	√	√		0057

2017	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0150 0232 0150
2017	Buick	Encore	Left Side Object Detection Control Module	√	√	√		√	
2017	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217
2017	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2017	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2017	Buick	Encore	Headlamp Control Module	√	√	√	√	√	0195
2017	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0066 0263
2017	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Buick	Encore	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Buick	Encore	Serial Data Gateway Module	√	√	√			
2017	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2017	Buick	Encore	Power Steering Control Module	√	√	√	√		0207
2017	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Buick	Encore	Steering Column Lock Control Module	√	√	√	√		
2017	Buick	Encore	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2017	Buick	Envision	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0020 0085 0212 0221
2017	Buick	Envision	Steering Column Lock Control Module	√	√	√	√		
2017	Buick	Envision	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Buick	Envision	Headlamp Control Module	√	√	√	√	√	0195
2017	Buick	Envision	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	Buick	Envision	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Buick	Envision	Amplifier	√	√	√	√		
2017	Buick	Envision	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Buick	Envision	Radio	√	√	√	√	√	0226 0150
2017	Buick	Envision	Radio Controls	√	√	√	√		0241
2017	Buick	Envision	HVAC Controls	√	√	√	√	√	
2017	Buick	Envision	Instrument Cluster	√	√	√	√	√	0247
2017	Buick	Envision	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Buick	Envision	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Buick	Envision	Keyless Entry Control Module	√	√	√	√	√	
2017	Buick	Envision	Passenger Presence Module	√	√	√	√	√	0057

2017	Buick	Envision	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Buick	Envision	Left Side Object Detection Control Module	√	√	√		√	
2017	Buick	Envision	Right Side Object Detection Control Module	√	√	√		√	
2017	Buick	Envision	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2017	Buick	Envision	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Buick	Envision	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Buick	Envision	Serial Data Gateway Module	√	√	√			
2017	Buick	Envision	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2017	Buick	Envision	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2017	Buick	Envision	Power Steering Control Module	√	√	√	√		0081 0080 0089
2017	Buick	Envision	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Buick	Envision	Active Safety Control Module	√	√	√	√	√	
2017	Buick	Envision	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Buick	Envision	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Buick	Envision	Video Processing Control Module	√	√	√	√	√	
2017	Buick	Envision	Suspension Control Module	√	√	√	√	√	
2017	Buick	Envision	Accessory DC/AC Power Inverter Module	√	√	√	√	√	
2017	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0017 0036 0020 0084
2017	Buick	LaCrosse	Amplifier	√	√	√	√		
2017	Buick	LaCrosse	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Buick	LaCrosse	HVAC Controls	√	√	√	√	√	
2017	Buick	LaCrosse	Radio Controls	√	√	√	√		0241
2017	Buick	LaCrosse	Media Disc Player	√	√	√	√	√	
2017	Buick	LaCrosse	Radio	√	√	√	√	√	0226 0150
2017	Buick	LaCrosse	Infotainment Control Touchpad	√	√	√	√	√	
2017	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0247
2017	Buick	LaCrosse	Active Safety Control Module	√	√	√	√	√	
2017	Buick	LaCrosse	Frontview Camera Module	√	√	√	√		0196
2017	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√		√	
2017	Buick	LaCrosse	Right Side Object Detection Control Module	√	√	√		√	
2017	Buick	LaCrosse	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2017	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2017	Buick	LaCrosse	Passenger Presence Module	√	√	√	√	√	0057

2017	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Buick	LaCrosse	Chassis Control Module	√	√	√	√	√	0014 0078
2017	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2017	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0006 0756 0005 0006
2017	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Buick	LaCrosse	Serial Data Gateway Module	√	√	√	√	√	
2017	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2017	Buick	LaCrosse	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2017	Buick	LaCrosse	Suspension Control Module	√	√	√	√	√	
2017	Buick	LaCrosse	Long Range Radar Sensor Module	√	√	√	√	√	0260
2017	Buick	LaCrosse	Transmission Range Control Module	√	√	√	√	√	0014 0078 0013
2017	Buick	Regal	Transmission Control Module	√	√	√	√	√	0016 0017 0036
2017	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0247
2017	Buick	Regal	Instrument Cluster	√	√	√	√	√	0247
2017	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2017	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	
2017	Buick	Regal	Passenger Presence Module	√	√	√	√	√	0057
2017	Buick	Regal	Front Seat Heating Control Module	√	√	√	√	√	
2017	Buick	Regal	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Buick	Regal	Left Side Object Detection Control Module	√	√	√	√	√	
2017	Buick	Regal	Seat Memory Control Module	√	√	√	√	√	0310
2017	Buick	Regal	Amplifier	√	√	√	√	√	
2017	Buick	Regal	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Buick	Regal	HVAC Controls	√	√	√	√	√	
2017	Buick	Regal	Radio	√	√	√	√	√	0226 0150
2017	Buick	Regal	Radio Controls	√	√	√	√	√	0241
2017	Buick	Regal	Media Disc Player	√	√	√	√	√	
2017	Buick	Regal	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150

2017	Buick	Regal	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0066 0086 0217 0258 0213 0212
2017	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2017	Buick	Regal	Parking Brake Control Module	√	√	√	√	√	0229
2017	Buick	Regal	Suspension Control Module	√	√	√	√	√	
2017	Buick	Regal	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Buick	Regal	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2017	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	
2017	Buick	Regal	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Buick	Regal	Distance Sensing Cruise Control Module	√	√	√	√	√	0047
2017	Buick	Verano	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Buick	Verano	Radio	√	√	√	√	√	
2017	Buick	Verano	Multimedia Player Interface Module	√	√	√	√	√	0247
2017	Buick	Verano	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2017	Buick	Verano	Keyless Entry Control Module	√	√	√	√	√	
2017	Buick	Verano	Passenger Presence Module	√	√	√	√	√	0057
2017	Buick	Verano	Instrument Cluster	√	√	√	√	√	0247
2017	Buick	Verano	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Buick	Verano	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2017	Buick	Verano	Left Side Object Detection Control Module	√	√	√		√	
2017	Buick	Verano	Right Side Object Detection Control Module	√	√	√		√	
2017	Buick	Verano	Chassis Control Module	√	√	√	√	√	0217
2017	Buick	Verano	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2017	Buick	Verano	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2017	Buick	Verano	Parking Brake Control Module	√	√	√	√	√	0229
2017	Buick	Verano	Power Steering Control Module	√	√	√	√	√	0089 0081 0080
2017	Buick	Verano	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Buick	Verano	Front Seat Heating Control Module	√	√	√	√	√	
2017	Buick	Verano	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0213
2017	Buick	Verano	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Buick	Verano	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Buick	Verano	Active Safety Control Module	√	√	√	√	√	
2017	Buick	Verano	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Buick	Verano	Long Range Radar Sensor Module	√	√	√	√	√	0260
2016	Buick	Cascada	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Buick	Cascada	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Buick	Cascada	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2016	Buick	Cascada	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2016	Buick	Cascada	Passenger Presence Module	√	√	√	√	√	0057
2016	Buick	Cascada	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Buick	Cascada	Instrument Cluster	√	√	√	√	√	0247
2016	Buick	Cascada	Parking Assist Control Module	√	√	√	√	√	0247
2016	Buick	Cascada	Folding Top Control Module	√	√	√	√	√	0247 0004 0005
2016	Buick	Cascada	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0114 0250 0120
2016	Buick	Cascada	Multimedia Player Interface Module	√	√	√	√	√	0247
2016	Buick	Cascada	Radio	√	√	√	√	√	
2016	Buick	Cascada	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2016	Buick	Cascada	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2016	Buick	Cascada	Power Steering Control Module	√	√	√	√		0089 0081 0080
2016	Buick	Cascada	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Buick	Cascada	Front Seat Heating Control Module	√	√	√	√	√	
2016	Buick	Cascada	Frontview Camera Module	√	√	√	√	√	0247 0205 0196 075A
2016	Buick	Cascada	Parking Brake Control Module	√	√	√	√	√	0229
2016	Buick	Cascada	Headlamp Control Module	√	√	√	√	√	0195
2016	Buick	Cascada	Chassis Control Module	√	√	√	√	√	0217
2016	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0016
2016	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Buick	Enclave	Head-Up Display Module	√	√	√	√	√	
2016	Buick	Enclave	Instrument Cluster	√	√	√	√	√	
2016	Buick	Enclave	Theft Deterrent Module	√	√	√	√		
2016	Buick	Enclave	Headlamp Control Module	√	√	√			
2016	Buick	Enclave	Liftgate Control Module	√	√	√	√		0146
2016	Buick	Enclave	Digital Radio Receiver Control Module	√	√	√	√	√	
2016	Buick	Enclave	Front Seat Heating Control Module	√	√	√	√		
2016	Buick	Enclave	Frontview Camera Module	√	√	√	√	√	0205 0196
2016	Buick	Enclave	Left Side Object Detection Control Module	√	√	√		√	
2016	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247
2016	Buick	Enclave	Right Side Object Detection Control Module	√	√	√		√	
2016	Buick	Enclave	Seat Memory Control Module	√	√	√	√	√	
2016	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2016	Buick	Enclave	Body Control Module	√	√	√	√	√	0263 0261
2016	Buick	Enclave	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2016	Buick	Enclave	Passenger Presence Module	√	√	√	√		0057
2016	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2016	Buick	Enclave	Rear Differential Clutch Control Module	√	√	√	√	√	0155

2016	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0212
2016	Buick	Enclave	Driver Door Switch Panel Control Module	√	√	√	√	√	
2016	Buick	Enclave	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2016	Buick	Enclave	Personal Audio Link Control Module	√	√	√	√	√	0231
2016	Buick	Enclave	Radio	√	√	√	√	√	
2016	Buick	Enclave	Rear Audio Control Module	√	√	√	√	√	
2016	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2016	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2016	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0066 076D
2016	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0082 0156 0032 0158
2016	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2016	Buick	Encore	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Buick	Encore	Left Side Object Detection Control Module	√	√	√	√	√	
2016	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2016	Buick	Encore	Passenger Presence Module	√	√	√	√	√	0057
2016	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Buick	Encore	Radio	√	√	√	√	√	
2016	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2016	Buick	Encore	Power Steering Control Module	√	√	√	√	√	0207
2016	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√	√	√	0093 0090
2016	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217
2016	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Buick	Encore	Steering Column Lock Control Module	√	√	√	√	√	
2016	Buick	Encore	Rear Differential Clutch Control Module	√	√	√	√	√	0003 075B
2016	Buick	Envision	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Buick	Envision	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0082 0156 0032 0158
2016	Buick	Envision	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Buick	Envision	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2016	Buick	Envision	Keyless Entry Control Module	√	√	√	√	√	
2016	Buick	Envision	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Buick	Envision	Left Side Object Detection Control Module	√	√	√	√	√	
2016	Buick	Envision	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Buick	Envision	Right Side Object Detection Control Module	√	√	√	√	√	
2016	Buick	Envision	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Buick	Envision	Headlamp Control Module	√	√	√	√	√	0195
2016	Buick	Envision	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2016	Buick	Envision	Steering Column Lock Control Module	√	√	√	√	√	
2016	Buick	Envision	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2016	Buick	Envision	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2016	Buick	Envision	Multi-Axis Acceleration Sensor Module	√	√	√	√	√	0111
2016	Buick	Envision	Steering Wheel Angle Sensor Module	√	√	√	√	√	0093 0090
2016	Buick	Envision	Passenger Presence Module	√	√	√	√	√	0057
2016	Buick	Envision	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Buick	Envision	Long Range Radar Sensor Module	√	√	√	√	√	0260
2016	Buick	Envision	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0150 0000 0150
2016	Buick	Envision	Liftgate Control Module	√	√	√	√	√	0146 0169
2016	Buick	Envision	Radio	√	√	√	√	√	0226 0150
2016	Buick	Envision	Instrument Cluster	√	√	√	√	√	0247
2016	Buick	Envision	Video Processing Control Module	√	√	√	√	√	
2016	Buick	Envision	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Buick	Envision	Amplifier	√	√	√	√	√	
2016	Buick	Envision	Radio Controls	√	√	√	√	√	0241
2016	Buick	Envision	HVAC Controls	√	√	√	√	√	
2016	Buick	Envision	Suspension Control Module	√	√	√	√	√	
2016	Buick	Envision	Accessory DC/AC Power Inverter Module	√	√	√	√	√	
2016	Buick	Envision	Active Safety Control Module	√	√	√	√	√	
2016	Buick	LaCrosse	Battery Energy Control Module	√	√	√	√	√	
2016	Buick	LaCrosse	Drive Motor Control Module	√	√	√	√	√	
2016	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2016	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Buick	LaCrosse	Head-Up Display Module	√	√	√	√	√	
2016	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0247
2016	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2016	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0150 0000 0150

2016	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2016	Buick	LaCrosse	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√	√	√	
2016	Buick	LaCrosse	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0247
2016	Buick	LaCrosse	Passenger Presence Module	√	√	√	√	√	0057
2016	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2016	Buick	LaCrosse	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0209 0132 0067 0086 0217 0258 0263 0156
2016	Buick	LaCrosse	Amplifier	√	√	√	√	√	
2016	Buick	LaCrosse	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Buick	LaCrosse	HVAC Controls	√	√	√	√	√	
2016	Buick	LaCrosse	Radio Controls	√	√	√	√	√	0241
2016	Buick	LaCrosse	Media Disc Player	√	√	√	√	√	
2016	Buick	LaCrosse	Radio	√	√	√	√	√	0226 0150
2016	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Buick	LaCrosse	Distance Sensing Cruise Control Module	√	√	√	√	√	0047
2016	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2016	Buick	LaCrosse	Parking Brake Control Module	√	√	√	√	√	0229
2016	Buick	LaCrosse	Steering Wheel Angle Sensor Module	√	√	√	√	√	0093 0090
2016	Buick	LaCrosse	Suspension Control Module	√	√	√	√	√	
2016	Buick	LaCrosse	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2016	Buick	LaCrosse	Rear Audio Control Module	√	√	√	√	√	
2016	Buick	LaCrosse	Infotainment Control Touchpad	√	√	√	√	√	
2016	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	
2016	Buick	Regal	Transmission Control Module	√	√	√	√	√	0016 0017 0036
2016	Buick	Regal	Battery Energy Control Module	√	√	√	√	√	
2016	Buick	Regal	Drive Motor Control Module	√	√	√	√	√	
2016	Buick	Regal	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2016	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Buick	Regal	Instrument Cluster	√	√	√	√	√	0247
2016	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	
2016	Buick	Regal	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0000 0150 0000 0150
2016	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0247
2016	Buick	Regal	Amplifier	√	√	√	√	√	
2016	Buick	Regal	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Buick	Regal	HVAC Controls	√	√	√	√	√	

2016	Buick	Regal	Radio Controls	√	√	√	√		0241
2016	Buick	Regal	Radio	√	√	√	√	√	0226 0150
2016	Buick	Regal	Infotainment Control Touchpad	√	√	√	√	√	
2016	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Buick	Regal	Passenger Presence Module	√	√	√	√	√	0057
2016	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	
2016	Buick	Regal	Chassis Control Module	√	√	√	√	√	0217
2016	Buick	Regal	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0066 0086 0217 0258 0213 0212
2016	Buick	Regal	Front Seat Heating Control Module	√	√	√	√	√	
2016	Buick	Regal	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Buick	Regal	Left Side Object Detection Control Module	√	√	√		√	
2016	Buick	Regal	Seat Memory Control Module	√	√	√	√	√	0310
2016	Buick	Regal	Distance Sensing Cruise Control Module	√	√	√	√		0047
2016	Buick	Regal	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2016	Buick	Regal	Parking Brake Control Module	√	√	√	√	√	0229
2016	Buick	Regal	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Buick	Regal	Suspension Control Module	√	√	√	√	√	
2016	Buick	Regal	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2016	Buick	Verano	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Buick	Verano	Instrument Cluster	√	√	√	√	√	0247
2016	Buick	Verano	Front Seat Heating Control Module	√	√	√	√	√	
2016	Buick	Verano	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Buick	Verano	Left Side Object Detection Control Module	√	√	√		√	
2016	Buick	Verano	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Buick	Verano	Right Side Object Detection Control Module	√	√	√		√	
2016	Buick	Verano	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Buick	Verano	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2016	Buick	Verano	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Buick	Verano	Keyless Entry Control Module	√	√	√	√	√	
2016	Buick	Verano	Passenger Presence Module	√	√	√	√		0057
2016	Buick	Verano	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2016	Buick	Verano	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0066 0086 0217 0258
2016	Buick	Verano	Chassis Control Module	√	√	√	√	√	0217
2016	Buick	Verano	Radio	√	√	√	√	√	
2016	Buick	Verano	Multimedia Player Interface Module	√	√	√	√		0247
2016	Buick	Verano	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2016	Buick	Verano	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111

2016	Buick	Verano	Parking Brake Control Module	√	√	√	√	√	0229
2016	Buick	Verano	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Buick	Verano	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2015	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2015	Buick	Enclave	Headlamp Control Module	√	√	√			
2015	Buick	Enclave	Liftgate Control Module	√	√	√	√		0146
2015	Buick	Enclave	Digital Radio Receiver Control Module	√	√	√	√	√	
2015	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0212
2015	Buick	Enclave	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2015	Buick	Enclave	Front Seat Heating Control Module	√	√	√	√	√	
2015	Buick	Enclave	Frontview Camera Module	√	√	√	√	√	0205 0196
2015	Buick	Enclave	Left Side Object Detection Control Module	√	√	√		√	
2015	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247
2015	Buick	Enclave	Right Side Object Detection Control Module	√	√	√		√	
2015	Buick	Enclave	Seat Memory Control Module	√	√	√	√	√	
2015	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0016
2015	Buick	Enclave	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2015	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2015	Buick	Enclave	Passenger Presence Module	√	√	√	√		0057
2015	Buick	Enclave	Radio	√	√	√	√	√	
2015	Buick	Enclave	Rear Audio Control Module	√	√	√	√		
2015	Buick	Enclave	Personal Audio Link Control Module	√	√	√			0231
2015	Buick	Enclave	Driver Door Switch Panel Control Module	√	√	√	√	√	
2015	Buick	Enclave	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2015	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2015	Buick	Enclave	Instrument Cluster	√	√	√	√	√	
2015	Buick	Enclave	Theft Deterrent Module	√	√	√	√		
2015	Buick	Enclave	Head-Up Display Module	√	√	√	√	√	
2015	Buick	Enclave	Body Control Module	√	√	√	√	√	0263 0261
2015	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2015	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006
2015	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2015	Buick	Encore	Power Steering Control Module	√	√	√	√		0207
2015	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	

2015	Buick	Encore	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2015	Buick	Encore	Left Side Object Detection Control Module	√	√	√	√	√	
2015	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247
2015	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2015	Buick	Encore	Rear Differential Clutch Control Module	√	√	√	√	√	0003 075B
2015	Buick	Encore	Passenger Presence Module	√	√	√	√	√	0057
2015	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0150 0000 0150
2015	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217
2015	Buick	Encore	Radio	√	√	√	√	√	
2015	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2015	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	
2015	Buick	LaCrosse	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0247
2015	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2015	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2015	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Buick	LaCrosse	Passenger Presence Module	√	√	√	√	√	0057
2015	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Buick	LaCrosse	Distance Sensing Cruise Control Module	√	√	√	√	√	0047
2015	Buick	LaCrosse	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2015	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√	√	√	
2015	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0247
2015	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0209 0132 0067 0086 0217 0258 0263 0156
2015	Buick	LaCrosse	Drive Motor Control Module	√	√	√	√	√	
2015	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2015	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0150 0000 0150
2015	Buick	LaCrosse	Head-Up Display Module	√	√	√	√	√	
2015	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2015	Buick	LaCrosse	Parking Brake Control Module	√	√	√	√	√	0229
2015	Buick	LaCrosse	Steering Wheel Angle Sensor Module	√	√	√	√	√	0093 0090
2015	Buick	LaCrosse	Suspension Control Module	√	√	√	√	√	
2015	Buick	LaCrosse	Power Steering Control Module	√	√	√	√	√	0081 0080 0089

2015	Buick	LaCrosse	Battery Energy Control Module	√			√		
2015	Buick	LaCrosse	Radio	√	√	√	√	√	0226 0150
2015	Buick	LaCrosse	Radio Controls	√	√	√	√	√	0241
2015	Buick	LaCrosse	HVAC Controls	√	√	√	√	√	
2015	Buick	LaCrosse	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Buick	LaCrosse	Amplifier	√	√	√	√	√	
2015	Buick	LaCrosse	Media Disc Player	√	√	√	√	√	
2015	Buick	LaCrosse	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Buick	Regal	Battery Energy Control Module	√			√		
2015	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	
2015	Buick	Regal	Chassis Control Module	√	√	√	√	√	0217
2015	Buick	Regal	Instrument Cluster	√	√	√	√	√	0247
2015	Buick	Regal	Transmission Control Module	√	√	√	√	√	0016 0017 0036
2015	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	
2015	Buick	Regal	Passenger Presence Module	√	√	√	√		0057
2015	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Buick	Regal	Amplifier	√	√	√	√		
2015	Buick	Regal	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Buick	Regal	HVAC Controls	√	√	√	√	√	
2015	Buick	Regal	Radio Controls	√	√	√	√	√	0241
2015	Buick	Regal	Radio	√	√	√	√	√	0226 0150
2015	Buick	Regal	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Buick	Regal	Distance Sensing Cruise Control Module	√	√	√	√		0047
2015	Buick	Regal	Front Seat Heating Control Module	√	√	√	√	√	
2015	Buick	Regal	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2015	Buick	Regal	Left Side Object Detection Control Module	√	√	√		√	
2015	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0247
2015	Buick	Regal	Seat Memory Control Module	√	√	√	√	√	0310
2015	Buick	Regal	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0066 0086 0217 0258 0213 0212
2015	Buick	Regal	Drive Motor Control Module	√	√	√	√		
2015	Buick	Regal	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2015	Buick	Regal	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0000 0150 0000 0150
2015	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2015	Buick	Regal	Parking Brake Control Module	√	√	√	√	√	0229
2015	Buick	Regal	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Buick	Regal	Suspension Control Module	√	√	√	√	√	

2015	Buick	Regal	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2015	Buick	Verano	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Buick	Verano	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Buick	Verano	Front Seat Heating Control Module	√	√	√	√	√	
2015	Buick	Verano	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2015	Buick	Verano	Left Side Object Detection Control Module	√	√	√	√	√	
2015	Buick	Verano	Parking Assist Control Module	√	√	√	√	√	0247
2015	Buick	Verano	Right Side Object Detection Control Module	√	√	√	√	√	
2015	Buick	Verano	Instrument Cluster	√	√	√	√	√	0247
2015	Buick	Verano	Keyless Entry Control Module	√	√	√	√	√	
2015	Buick	Verano	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2015	Buick	Verano	Passenger Presence Module	√	√	√	√	√	0057
2015	Buick	Verano	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0066 0086 0217 0258
2015	Buick	Verano	Chassis Control Module	√	√	√	√	√	0217
2015	Buick	Verano	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2015	Buick	Verano	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2015	Buick	Verano	Parking Brake Control Module	√	√	√	√	√	0229
2015	Buick	Verano	Multi-Axis Acceleration Sensor Module	√	√	√	√	√	0112 0111
2015	Buick	Verano	Steering Wheel Angle Sensor Module	√	√	√	√	√	0093 0090
2015	Buick	Verano	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2015	Buick	Verano	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Buick	Verano	Radio	√	√	√	√	√	
2015	Buick	Verano	Multimedia Player Interface Module	√	√	√	√	√	0247
2014	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0016
2014	Buick	Enclave	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2014	Buick	Enclave	Body Control Module	√	√	√	√	√	0263 0261
2014	Buick	Enclave	Instrument Cluster	√	√	√	√	√	
2014	Buick	Enclave	Headlamp Control Module	√	√	√	√	√	
2014	Buick	Enclave	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Buick	Enclave	Liftgate Control Module	√	√	√	√	√	0146
2014	Buick	Enclave	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	Buick	Enclave	Theft Deterrent Module	√	√	√	√	√	
2014	Buick	Enclave	Left Side Object Detection Control Module	√	√	√	√	√	
2014	Buick	Enclave	Right Side Object Detection Control Module	√	√	√	√	√	
2014	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247
2014	Buick	Enclave	Seat Memory Control Module	√	√	√	√	√	
2014	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2014	Buick	Enclave	Radio	√	√	√	√	√	

2014	Buick	Enclave	Rear Audio Control Module	√	√	√	√		
2014	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2014	Buick	Enclave	Passenger Presence Module	√	√	√	√		0057
2014	Buick	Enclave	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0214
2014	Buick	Enclave	Driver Door Switch Panel Control Module	√	√	√	√	√	
2014	Buick	Enclave	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2014	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2014	Buick	Enclave	Front Seat Heating Control Module	√	√	√	√		
2014	Buick	Enclave	Personal Audio Link Control Module	√	√	√			0231
2014	Buick	Enclave	Frontview Camera Module	√	√	√	√	√	0205 0196
2014	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2014	Buick	Encore	Power Steering Control Module	√	√	√	√		0207
2014	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006
2014	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Buick	Encore	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2014	Buick	Encore	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2014	Buick	Encore	Passenger Presence Module	√	√	√	√		0057
2014	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2014	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2014	Buick	Encore	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2014	Buick	Encore	Left Side Object Detection Control Module	√	√	√		√	
2014	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247
2014	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2014	Buick	Encore	Radio	√	√	√	√	√	
2014	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2014	Buick	LaCrosse	Battery Energy Control Module	√			√		
2014	Buick	LaCrosse	Drive Motor Control Module	√	√	√	√		
2014	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2014	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2014	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2014	Buick	LaCrosse	Parking Brake Control Module	√	√	√	√	√	0229

2014	Buick	LaCrosse	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	
2014	Buick	LaCrosse	Suspension Control Module	√	√	√	√	√	
2014	Buick	LaCrosse	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Buick	LaCrosse	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2014	Buick	LaCrosse	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2014	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0209 0132 0067 0086 0217 0258 0263 0156
2014	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2014	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2014	Buick	LaCrosse	Passenger Presence Module	√	√	√	√		0057
2014	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√		√	
2014	Buick	LaCrosse	Radio Controls	√	√	√	√		0241
2014	Buick	LaCrosse	HVAC Controls	√	√	√	√	√	
2014	Buick	LaCrosse	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2014	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0000 0150 0000 0150
2014	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Buick	LaCrosse	Distance Sensing Cruise Control Module	√	√	√	√		0047
2014	Buick	LaCrosse	Human Machine Interface Control Module	√	√	√	√	√	0150
2014	Buick	LaCrosse	Radio	√	√	√	√	√	0226 0150
2014	Buick	LaCrosse	Amplifier	√	√	√	√		
2014	Buick	LaCrosse	Media Disc Player	√	√	√	√	√	
2014	Buick	LaCrosse	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2014	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0247
2014	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0247
2014	Buick	LaCrosse	Head-Up Display Module	√	√	√	√	√	
2014	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Buick	Regal	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2014	Buick	Regal	Drive Motor Control Module	√	√	√	√		
2014	Buick	Regal	Battery Energy Control Module	√			√		
2014	Buick	Regal	Transmission Control Module	√	√	√	√	√	0016 0017 0036
2014	Buick	Regal	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Buick	Regal	Radio	√	√	√	√	√	0226 0150
2014	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	
2014	Buick	Regal	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0066 0086 0217 0258 0213 0212
2014	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	
2014	Buick	Regal	Passenger Presence Module	√	√	√	√		0057

2014	Buick	Regal	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0232 0150
2014	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2014	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2014	Buick	Regal	Parking Brake Control Module	√	√	√	√	√	0229
2014	Buick	Regal	Instrument Cluster	√	√	√	√	√	0247
2014	Buick	Regal	Front Seat Heating Control Module	√	√	√	√	√	
2014	Buick	Regal	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2014	Buick	Regal	Left Side Object Detection Control Module	√	√	√		√	
2014	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0247
2014	Buick	Regal	Seat Memory Control Module	√	√	√	√	√	0310
2014	Buick	Regal	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2014	Buick	Regal	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Buick	Regal	Distance Sensing Cruise Control Module	√	√	√	√		0047
2014	Buick	Regal	Human Machine Interface Control Module	√	√	√	√	√	0150
2014	Buick	Regal	Radio Controls	√	√	√	√		0241
2014	Buick	Regal	HVAC Controls	√	√	√	√	√	
2014	Buick	Regal	Amplifier	√	√	√	√		
2014	Buick	Regal	Suspension Control Module	√	√	√	√	√	
2014	Buick	Regal	Power Steering Control Module	√	√	√	√		0081 0080 0089
2014	Buick	Regal	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Buick	Verano	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Buick	Verano	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Buick	Verano	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Buick	Verano	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0066 0086 0217 0258
2014	Buick	Verano	Keyless Entry Control Module	√	√	√	√	√	
2014	Buick	Verano	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Buick	Verano	Passenger Presence Module	√	√	√	√		0057
2014	Buick	Verano	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	Buick	Verano	Front Seat Heating Control Module	√	√	√	√	√	
2014	Buick	Verano	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2014	Buick	Verano	Left Side Object Detection Control Module	√	√	√		√	
2014	Buick	Verano	Right Side Object Detection Control Module	√	√	√		√	
2014	Buick	Verano	Parking Assist Control Module	√	√	√	√	√	0247
2014	Buick	Verano	Instrument Cluster	√	√	√	√	√	0247
2014	Buick	Verano	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Buick	Verano	Parking Brake Control Module	√	√	√	√	√	0229
2014	Buick	Verano	Steering Wheel Angle Sensor Module	√	√	√			0093 0090

2014	Buick	Verano	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2014	Buick	Verano	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2014	Buick	Verano	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Buick	Verano	Radio	√	√	√	√	√	
2014	Buick	Verano	Multimedia Player Interface Module	√	√	√	√	√	0247
2013	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017
2013	Buick	Encore	Instrument Cluster	√	√	√	√	√	0301
2013	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2013	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0301
2013	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2013	Buick	Encore	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0323 0305 0020 0306 0067 0217 0337
2013	Buick	Encore	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Buick	Encore	Passenger Presence Module	√	√	√	√		0322
2013	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2013	Buick	Encore	Multi-Axis Acceleration Sensor Module	√	√	√			
2013	Buick	Encore	Power Steering Control Module	√	√	√	√		
2013	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			
2013	Buick	Encore	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Buick	Encore	Rear Differential Clutch Control Module	√	√	√	√	√	
2013	Buick	Encore	Radio	√	√	√	√	√	
2013	Buick	Encore	Frontview Camera Module	√	√	√	√	√	0205 0196
2013	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2013	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0305 0306 0067 0308 0217 0309
2013	Buick	LaCrosse	Fuel Injector Control Module	√	√	√	√	√	
2013	Buick	LaCrosse	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2013	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0020 0106
2013	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	
2013	Buick	LaCrosse	Drive Motor Control Module	√	√	√	√		
2013	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2013	Buick	LaCrosse	Parking Brake Control Module	√	√	√	√	√	0316
2013	Buick	LaCrosse	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2013	Buick	LaCrosse	Power Steering Control Module	√	√	√	√		
2013	Buick	LaCrosse	Steering Wheel Angle Sensor Module	√	√	√			
2013	Buick	LaCrosse	Suension Control Module	√	√	√	√	√	
2013	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298

2013	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2013	Buick	LaCrosse	Passenger Presence Module	√	√	√	√		0322
2013	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0301
2013	Buick	LaCrosse	Head-Up Display Module	√	√	√	√	√	
2013	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2013	Buick	LaCrosse	Radio	√	√	√	√	√	
2013	Buick	LaCrosse	Multimedia Player Interface Module	√	√	√	√		
2013	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Buick	LaCrosse	Seat Memory Control Module	√	√	√	√	√	0310
2013	Buick	LaCrosse	Front Seat Heating Control Module	√	√	√	√	√	
2013	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2013	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0301
2013	Buick	LaCrosse	Steering Column Lock Control Module	√	√	√	√		
2013	Buick	Regal	Engine Control Module	√	√	√	√	√	0305 0306 0067 0308 0217 0309
2013	Buick	Regal	Fuel Injector Control Module	√	√	√	√	√	
2013	Buick	Regal	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Buick	Regal	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2013	Buick	Regal	Transmission Control Module	√	√	√	√	√	0016
2013	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	
2013	Buick	Regal	Drive Motor Control Module	√	√	√	√		
2013	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2013	Buick	Regal	Parking Brake Control Module	√	√	√	√	√	0316
2013	Buick	Regal	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Buick	Regal	Power Steering Control Module	√	√	√	√		
2013	Buick	Regal	Steering Wheel Angle Sensor Module	√	√	√			
2013	Buick	Regal	Suspension Control Module	√	√	√	√	√	
2013	Buick	Regal	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2013	Buick	Regal	Passenger Presence Module	√	√	√	√		0322
2013	Buick	Regal	Instrument Cluster	√	√	√	√	√	0301
2013	Buick	Regal	Radio	√	√	√	√	√	
2013	Buick	Regal	Multimedia Player Interface Module	√	√	√	√		
2013	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Buick	Regal	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Buick	Verano	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Buick	Verano	Transmission Control Module	√	√	√	√	√	0020 0106
2013	Buick	Verano	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2013	Buick	Verano	Power Steering Control Module	√	√	√	√		
2013	Buick	Verano	Instrument Cluster	√	√	√	√	√	0301

2013	Buick	Verano	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Buick	Verano	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Buick	Verano	Front Seat Heating Control Module	√	√	√	√	√	
2013	Buick	Verano	Parking Assist Control Module	√	√	√	√	√	0301
2013	Buick	Verano	Left Side Object Detection Control Module	√	√	√		√	
2013	Buick	Verano	Right Side Object Detection Control Module	√	√	√		√	
2013	Buick	Verano	Parking Brake Control Module	√	√	√	√	√	0316
2013	Buick	Verano	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2013	Buick	Verano	Passenger Presence Module	√	√	√	√		0322
2013	Buick	Verano	Keyless Entry Control Module	√	√	√	√	√	
2013	Buick	Verano	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Buick	Verano	Radio	√	√	√	√	√	
2013	Buick	Verano	Multimedia Player Interface Module	√	√	√	√		
2013	Buick	Verano	Engine Control Module	√	√	√	√	√	0323 0305 0306 0067 0066 0308 0217 0309
2013	Buick	Verano	Steering Wheel Angle Sensor Module	√	√	√			
2013	Buick	Verano	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Buick	Enclave - AWD	Engine Control Module	√	√	√	√	√	0493
2013	Buick	Enclave - AWD	Transmission control module		√	√	√	√	
2013	Buick	Enclave - AWD	Fuel Pump Control Module	√	√	√	√	√	
2013	Buick	Enclave - AWD	Digital radio receiver	√	√	√	√	√	
2013	Buick	Enclave - AWD	Liftgate module	√	√	√	√	√	
2013	Buick	Enclave - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	Buick	Enclave - AWD	Instrument panel cluster	√	√	√	√	√	
2013	Buick	Enclave - AWD	Memory seat module	√	√	√	√	√	
2013	Buick	Enclave - AWD	Park assist module	√	√	√	√		
2013	Buick	Enclave - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Buick	Enclave - AWD	Rear HVAC/RSA	√	√	√	√	√	
2013	Buick	Enclave - AWD	Headlamp Control Module	√	√	√			
2013	Buick	Enclave - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Buick	Enclave - AWD	Driver door switch	√	√	√	√	√	0527
2013	Buick	Enclave - AWD	Passenger door switch	√	√	√	√	√	0527
2013	Buick	Enclave - AWD	Personal audio link module	√	√	√			0528 0529
2013	Buick	Enclave - AWD	Radio	√	√	√	√	√	
2013	Buick	Enclave - AWD	Passenger presence system	√	√	√	√	√	
2013	Buick	Enclave - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Buick	Enclave - AWD	Theft Deterrent Module	√	√	√	√		
2013	Buick	Enclave - AWD	Body Control Module	√	√	√	√	√	0499 0497
2013	Buick	Enclave - AWD	Left side object detection module	√	√	√		√	
2013	Buick	Enclave - AWD	Right side object detection module	√	√	√		√	
2013	Buick	Enclave - AWD	Electronic Brake Control Module	√	√	√	√	√	0506

2013	Buick	Enclave - AWD	Rear drive system	√	√	√	√	√	0530
2013	Buick	Enclave - FWD	Engine Control Module	√	√	√	√	√	0493
2013	Buick	Enclave - FWD	Transmission control module		√	√	√	√	
2013	Buick	Enclave - FWD	Fuel Pump Control Module	√	√	√	√	√	
2013	Buick	Enclave - FWD	Digital radio receiver	√	√	√	√	√	
2013	Buick	Enclave - FWD	Liftgate module	√	√	√	√	√	
2013	Buick	Enclave - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	Buick	Enclave - FWD	Instrument panel cluster	√	√	√	√	√	
2013	Buick	Enclave - FWD	Memory seat module	√	√	√	√	√	
2013	Buick	Enclave - FWD	Park assist module	√	√	√	√		
2013	Buick	Enclave - FWD	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Buick	Enclave - FWD	Rear HVAC/RSA	√	√	√	√	√	
2013	Buick	Enclave - FWD	Headlamp Control Module	√	√	√			
2013	Buick	Enclave - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Buick	Enclave - FWD	Driver door switch	√	√	√	√	√	0527
2013	Buick	Enclave - FWD	Passenger door switch	√	√	√	√	√	0527
2013	Buick	Enclave - FWD	Personal audio link module	√	√	√			0528 0529
2013	Buick	Enclave - FWD	Radio	√	√	√	√	√	
2013	Buick	Enclave - FWD	Passenger presence system	√	√	√	√	√	
2013	Buick	Enclave - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Buick	Enclave - FWD	Theft Deterrent Module	√	√	√	√		
2013	Buick	Enclave - FWD	Body Control Module	√	√	√	√	√	0499 0497
2013	Buick	Enclave - FWD	Left side object detection module	√	√	√		√	
2013	Buick	Enclave - FWD	Right side object detection module	√	√	√		√	
2013	Buick	Enclave - FWD	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Buick	Enclave - FWD	Rear drive system	√	√	√	√	√	0530
2012	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0323 0308 0217 0309
2012	Buick	LaCrosse	Fuel Injector Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2012	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0016
2012	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Drive Motor Control Module	√	√	√	√		
2012	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2012	Buick	LaCrosse	Parking Brake Control Module	√	√	√	√	√	0316
2012	Buick	LaCrosse	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Buick	LaCrosse	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2012	Buick	LaCrosse	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2012	Buick	LaCrosse	Suension Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298

2012	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2012	Buick	LaCrosse	Passenger Presence Module	√	√	√	√		0322
2012	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0301
2012	Buick	LaCrosse	Head-Up Dilay Module	√	√	√	√	√	
2012	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Radio	√	√	√	√	√	
2012	Buick	LaCrosse	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2012	Buick	LaCrosse	Multimedia Player Interface Module	√	√	√	√		
2012	Buick	LaCrosse	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2012	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2012	Buick	LaCrosse	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2012	Buick	LaCrosse	Seat Memory Control Module	√	√	√	√	√	0310
2012	Buick	LaCrosse	Front Seat Heating Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Rear Seat Heating Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0301
2012	Buick	LaCrosse	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2012	Buick	LaCrosse	Steering Column Lock Control Module	√	√	√	√		
2012	Buick	LaCrosse	Battery Energy Control Module	√			√		
2012	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Right Side Object Detection Control Module	√	√	√	√	√	
2012	Buick	Regal	Engine Control Module	√	√	√	√	√	0323 0308 0217 0309
2012	Buick	Regal	Fuel Injector Control Module	√	√	√	√	√	
2012	Buick	Regal	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Buick	Regal	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2012	Buick	Regal	Transmission Control Module	√	√	√	√	√	0016
2012	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	
2012	Buick	Regal	Drive Motor Control Module	√	√	√	√		
2012	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2012	Buick	Regal	Parking Brake Control Module	√	√	√	√	√	0316
2012	Buick	Regal	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Buick	Regal	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2012	Buick	Regal	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2012	Buick	Regal	Suension Control Module	√	√	√	√	√	
2012	Buick	Regal	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2012	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2012	Buick	Regal	Passenger Presence Module	√	√	√	√		0322
2012	Buick	Regal	Instrument Cluster	√	√	√	√	√	0301
2012	Buick	Regal	Head-Up Dilay Module	√	√	√	√	√	
2012	Buick	Regal	Headlamp Control Module	√	√	√	√	√	

2012	Buick	Regal	Radio	√	√	√	√	√	
2012	Buick	Regal	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2012	Buick	Regal	Multimedia Player Interface Module	√	√	√	√		
2012	Buick	Regal	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2012	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2012	Buick	Regal	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2012	Buick	Regal	Seat Memory Control Module	√	√	√	√	√	0310
2012	Buick	Regal	Front Seat Heating Control Module	√	√	√	√	√	
2012	Buick	Regal	Rear Seat Heating Control Module	√	√	√	√	√	
2012	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	
2012	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0301
2012	Buick	Regal	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2012	Buick	Regal	Steering Column Lock Control Module	√	√	√	√		
2012	Buick	Regal	Battery Energy Control Module	√			√		
2012	Buick	Regal	Left Side Object Detection Control Module	√	√	√	√	√	
2012	Buick	Regal	Right Side Object Detection Control Module	√	√	√	√	√	
2012	Buick	Verano	Engine Control Module	√	√	√	√	√	0323 0305 0306 0067 0263 0308 0217
2012	Buick	Verano	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Buick	Verano	Transmission Control Module	√	√	√	√	√	0017
2012	Buick	Verano	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2012	Buick	Verano	Parking Brake Control Module	√	√	√	√	√	0316
2012	Buick	Verano	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Buick	Verano	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2012	Buick	Verano	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2012	Buick	Verano	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2012	Buick	Verano	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2012	Buick	Verano	Passenger Presence Module	√	√	√	√		0322
2012	Buick	Verano	Instrument Cluster	√	√	√	√	√	
2012	Buick	Verano	Headlamp Control Module	√	√	√	√	√	
2012	Buick	Verano	Radio	√	√	√	√	√	
2012	Buick	Verano	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2012	Buick	Verano	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2012	Buick	Verano	Front Seat Heating Control Module	√	√	√	√	√	
2012	Buick	Verano	Keyless Entry Control Module	√	√	√	√	√	
2012	Buick	Verano	Parking Assist Control Module	√	√	√	√	√	0301
2012	Buick	Enclave - AWD	Engine Control Module	√	√	√	√	√	0493
2012	Buick	Enclave - AWD	Fuel Pump Control Module	√	√	√	√	√	
2012	Buick	Enclave - AWD	Transmission control module		√	√	√	√	
2012	Buick	Enclave - AWD	Digital radio receiver	√	√	√	√	√	
2012	Buick	Enclave - AWD	Headlamp Control Module	√	√	√			

2012	Buick	Enclave - AWD	Liftgate module	√	√	√	√	√	
2012	Buick	Enclave - AWD	Rear HVAC/RSA	√	√	√	√	√	
2012	Buick	Enclave - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	Buick	Enclave - AWD	Instrument panel cluster	√	√	√	√	√	
2012	Buick	Enclave - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Buick	Enclave - AWD	Passenger presence system	√	√	√	√	√	
2012	Buick	Enclave - AWD	Driver door switch	√	√	√	√	√	0527
2012	Buick	Enclave - AWD	Passenger door switch	√	√	√	√	√	0527
2012	Buick	Enclave - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Buick	Enclave - AWD	Theft Deterrent Module	√	√	√	√		
2012	Buick	Enclave - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Buick	Enclave - AWD	Body Control Module	√	√	√	√	√	0499 0497
2012	Buick	Enclave - AWD	Radio	√	√	√	√	√	
2012	Buick	Enclave - AWD	Personal audio link module	√	√	√			0528 0529
2012	Buick	Enclave - AWD	Memory seat module	√	√	√	√	√	
2012	Buick	Enclave - AWD	Park assist module	√	√	√	√		
2012	Buick	Enclave - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Buick	Enclave - AWD	Rear drive system	√	√	√	√	√	0530
2012	Buick	Enclave - FWD	Engine Control Module	√	√	√	√	√	0493
2012	Buick	Enclave - FWD	Fuel Pump Control Module	√	√	√	√	√	
2012	Buick	Enclave - FWD	Transmission control module		√	√	√	√	
2012	Buick	Enclave - FWD	Digital radio receiver	√	√	√	√	√	
2012	Buick	Enclave - FWD	Headlamp Control Module	√	√	√			
2012	Buick	Enclave - FWD	Liftgate module	√	√	√	√	√	
2012	Buick	Enclave - FWD	Rear HVAC/RSA	√	√	√	√	√	
2012	Buick	Enclave - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	Buick	Enclave - FWD	Instrument panel cluster	√	√	√	√	√	
2012	Buick	Enclave - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Buick	Enclave - FWD	Passenger presence system	√	√	√	√	√	
2012	Buick	Enclave - FWD	Driver door switch	√	√	√	√	√	0527
2012	Buick	Enclave - FWD	Passenger door switch	√	√	√	√	√	0527
2012	Buick	Enclave - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Buick	Enclave - FWD	Theft Deterrent Module	√	√	√	√		
2012	Buick	Enclave - FWD	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Buick	Enclave - FWD	Body Control Module	√	√	√	√	√	0499 0497
2012	Buick	Enclave - FWD	Radio	√	√	√	√	√	
2012	Buick	Enclave - FWD	Personal audio link module	√	√	√			0528 0529
2012	Buick	Enclave - FWD	Memory seat module	√	√	√	√	√	
2012	Buick	Enclave - FWD	Park assist module	√	√	√	√		
2012	Buick	Enclave - FWD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Buick	Enclave - FWD	Rear drive system	√	√	√	√	√	0530

2011	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0323 0308 0217 0309
2011	Buick	LaCrosse	Fuel Injector Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Fuel Pump Control Module	√	√	√	√	√	0217
2011	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2011	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0016
2011	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Drive Motor Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2011	Buick	LaCrosse	Parking Brake Control Module	√	√	√	√	√	0316
2011	Buick	LaCrosse	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2011	Buick	LaCrosse	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2011	Buick	LaCrosse	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2011	Buick	LaCrosse	Suension Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2011	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2011	Buick	LaCrosse	Passenger Presence Module	√	√	√	√		0322
2011	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0301
2011	Buick	LaCrosse	Head-Up Dilay Module	√	√	√	√	√	
2011	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Radio	√	√	√	√	√	
2011	Buick	LaCrosse	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2011	Buick	LaCrosse	Multimedia Player Interface Module	√	√	√	√		
2011	Buick	LaCrosse	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2011	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2011	Buick	LaCrosse	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2011	Buick	LaCrosse	Seat Memory Control Module	√	√	√	√	√	0310
2011	Buick	LaCrosse	Front Seat Heating Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Rear Seat Heating Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0301
2011	Buick	LaCrosse	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2011	Buick	LaCrosse	Steering Column Lock Control Module	√	√	√	√		
2011	Buick	LaCrosse	Battery Energy Control Module	√			√		
2011	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Right Side Object Detection Control Module	√	√	√	√	√	
2011	Buick	Regal	Engine Control Module	√	√	√	√	√	0323 0308 0217 0309
2011	Buick	Regal	Fuel Injector Control Module	√	√	√	√	√	
2011	Buick	Regal	Fuel Pump Control Module	√	√	√	√	√	0217
2011	Buick	Regal	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2011	Buick	Regal	Transmission Control Module	√	√	√	√	√	0016

2011	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	
2011	Buick	Regal	Drive Motor Control Module	√	√	√	√		
2011	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2011	Buick	Regal	Parking Brake Control Module	√	√	√	√	√	0316
2011	Buick	Regal	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2011	Buick	Regal	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2011	Buick	Regal	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2011	Buick	Regal	Suension Control Module	√	√	√	√	√	
2011	Buick	Regal	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2011	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2011	Buick	Regal	Passenger Presence Module	√	√	√	√		0322
2011	Buick	Regal	Instrument Cluster	√	√	√	√	√	0301
2011	Buick	Regal	Head-Up Dilay Module	√	√	√	√	√	
2011	Buick	Regal	Headlamp Control Module	√	√	√	√	√	
2011	Buick	Regal	Radio	√	√	√	√	√	
2011	Buick	Regal	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2011	Buick	Regal	Multimedia Player Interface Module	√	√	√	√		
2011	Buick	Regal	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2011	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2011	Buick	Regal	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2011	Buick	Regal	Seat Memory Control Module	√	√	√	√	√	0310
2011	Buick	Regal	Front Seat Heating Control Module	√	√	√	√	√	
2011	Buick	Regal	Rear Seat Heating Control Module	√	√	√	√	√	
2011	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	
2011	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0301
2011	Buick	Regal	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2011	Buick	Regal	Steering Column Lock Control Module	√	√	√	√		
2011	Buick	Regal	Battery Energy Control Module	√			√		
2011	Buick	Regal	Left Side Object Detection Control Module	√	√	√	√	√	
2011	Buick	Regal	Right Side Object Detection Control Module	√	√	√	√	√	
2011	Buick	Lucerne	Transmission control module		√	√	√	√	
2011	Buick	Lucerne	Engine Control Module	√	√	√	√	√	0493
2011	Buick	Lucerne	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Buick	Lucerne	Radio	√	√	√	√	√	
2011	Buick	Lucerne	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Buick	Lucerne	Theft Deterrent Module	√	√	√	√		
2011	Buick	Lucerne	Left side object detection module	√	√	√	√	√	
2011	Buick	Lucerne	Memory seat module	√	√	√	√	√	
2011	Buick	Lucerne	Park assist module	√	√	√	√		
2011	Buick	Lucerne	Right side object detection module	√	√	√	√		

2011	Buick	Lucerne	Veh direction alert alarm warn mod	√	√	√	√	√	
2011	Buick	Lucerne	Passenger presence system	√	√	√	√	√	0517
2011	Buick	Lucerne	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Buick	Lucerne	HVAC Control Module	√	√	√	√	√	
2011	Buick	Lucerne	Digital radio receiver	√	√	√	√	√	
2011	Buick	Lucerne	Driver door switch	√	√	√	√	√	
2011	Buick	Lucerne	Passenger door switch	√	√	√	√	√	
2011	Buick	Lucerne	Body Control Module	√	√	√	√	√	0499 0497
2011	Buick	Lucerne	Instrument panel cluster	√	√	√	√	√	0494 0495 0496
2011	Buick	Lucerne	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Buick	Lucerne	Electronic suspension control	√	√	√	√	√	
2011	Buick	Enclave - AWD	Transmission control module		√	√	√	√	
2011	Buick	Enclave - AWD	Engine Control Module	√	√	√	√	√	
2011	Buick	Enclave - AWD	Fuel Pump Control Module	√	√	√	√	√	
2011	Buick	Enclave - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	Buick	Enclave - AWD	Digital radio receiver	√	√	√	√	√	
2011	Buick	Enclave - AWD	Body Control Module						0499 0497
2011	Buick	Enclave - AWD	Headlamp Control Module	√	√	√			
2011	Buick	Enclave - AWD	Liftgate module	√	√	√	√	√	
2011	Buick	Enclave - AWD	Personal audio link module	√	√	√			0528 0529
2011	Buick	Enclave - AWD	Radio	√	√	√	√	√	
2011	Buick	Enclave - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Buick	Enclave - AWD	Theft Deterrent Module	√	√	√	√	√	
2011	Buick	Enclave - AWD	Instrument panel cluster	√	√	√	√	√	
2011	Buick	Enclave - AWD	Memory seat module	√	√	√	√	√	
2011	Buick	Enclave - AWD	Park assist module	√	√	√	√	√	
2011	Buick	Enclave - AWD	Passenger presence system	√	√	√	√	√	
2011	Buick	Enclave - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Buick	Enclave - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Buick	Enclave - AWD	Driver door switch	√	√	√	√	√	0527
2011	Buick	Enclave - AWD	Passenger door switch	√	√	√	√	√	0527
2011	Buick	Enclave - AWD	Rear HVAC/RSA	√	√	√	√	√	
2011	Buick	Enclave - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Buick	Enclave - AWD	Rear drive system	√	√	√	√	√	0530
2011	Buick	Enclave - FWD	Transmission control module		√	√	√	√	
2011	Buick	Enclave - FWD	Engine Control Module	√	√	√	√	√	
2011	Buick	Enclave - FWD	Fuel Pump Control Module	√	√	√	√	√	
2011	Buick	Enclave - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	Buick	Enclave - FWD	Digital radio receiver	√	√	√	√	√	
2011	Buick	Enclave - FWD	Body Control Module						0499 0497
2011	Buick	Enclave - FWD	Headlamp Control Module	√	√	√			

2011	Buick	Enclave - FWD	Liftgate module	√	√	√	√	√	
2011	Buick	Enclave - FWD	Personal audio link module	√	√	√			0528 0529
2011	Buick	Enclave - FWD	Radio	√	√	√	√	√	
2011	Buick	Enclave - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Buick	Enclave - FWD	Theft Deterrent Module	√	√	√	√	√	
2011	Buick	Enclave - FWD	Instrument panel cluster	√	√	√	√	√	
2011	Buick	Enclave - FWD	Memory seat module	√	√	√	√	√	
2011	Buick	Enclave - FWD	Park assist module	√	√	√	√	√	
2011	Buick	Enclave - FWD	Passenger presence system	√	√	√	√	√	
2011	Buick	Enclave - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Buick	Enclave - FWD	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Buick	Enclave - FWD	Driver door switch	√	√	√	√	√	0527
2011	Buick	Enclave - FWD	Passenger door switch	√	√	√	√	√	0527
2011	Buick	Enclave - FWD	Rear HVAC/RSA	√	√	√	√	√	
2011	Buick	Enclave - FWD	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Buick	Enclave - FWD	Rear drive system	√	√	√	√	√	0530
2010	Buick	Allure	Engine Control Module	√	√	√	√	√	0323 0308 0217 0309
2010	Buick	Allure	Fuel Injector Control Module	√	√	√	√	√	
2010	Buick	Allure	Fuel Pump Control Module	√	√	√	√	√	0217
2010	Buick	Allure	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2010	Buick	Allure	Transmission Control Module	√	√	√	√	√	0016
2010	Buick	Allure	Rear Differential Clutch Control Module	√	√	√	√	√	
2010	Buick	Allure	Drive Motor Control Module	√	√	√	√	√	
2010	Buick	Allure	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2010	Buick	Allure	Parking Brake Control Module	√	√	√	√	√	0316
2010	Buick	Allure	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2010	Buick	Allure	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2010	Buick	Allure	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2010	Buick	Allure	Suension Control Module	√	√	√	√	√	
2010	Buick	Allure	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2010	Buick	Allure	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2010	Buick	Allure	Passenger Presence Module	√	√	√	√		0322
2010	Buick	Allure	Instrument Cluster	√	√	√	√	√	0301
2010	Buick	Allure	Head-Up Dilay Module	√	√	√	√	√	
2010	Buick	Allure	Headlamp Control Module	√	√	√	√	√	
2010	Buick	Allure	Radio	√	√	√	√	√	
2010	Buick	Allure	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2010	Buick	Allure	Multimedia Player Interface Module	√	√	√	√	√	
2010	Buick	Allure	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2010	Buick	Allure	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259

2010	Buick	Allure	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2010	Buick	Allure	Seat Memory Control Module	√	√	√	√	√	0310
2010	Buick	Allure	Front Seat Heating Control Module	√	√	√	√	√	
2010	Buick	Allure	Rear Seat Heating Control Module	√	√	√	√	√	
2010	Buick	Allure	Keyless Entry Control Module	√	√	√	√	√	
2010	Buick	Allure	Parking Assist Control Module	√	√	√	√	√	0301
2010	Buick	Allure	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2010	Buick	Allure	Steering Column Lock Control Module	√	√	√	√	√	
2010	Buick	Allure	Battery Energy Control Module	√			√		
2010	Buick	Allure	Left Side Object Detection Control Module	√	√	√	√	√	
2010	Buick	Allure	Right Side Object Detection Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0323 0308 0217 0309
2010	Buick	LaCrosse	Fuel Injector Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Fuel Pump Control Module	√	√	√	√	√	0217
2010	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2010	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0016
2010	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Drive Motor Control Module	√	√	√	√		
2010	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2010	Buick	LaCrosse	Parking Brake Control Module	√	√	√	√	√	0316
2010	Buick	LaCrosse	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2010	Buick	LaCrosse	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2010	Buick	LaCrosse	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2010	Buick	LaCrosse	Suension Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2010	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2010	Buick	LaCrosse	Passenger Presence Module	√	√	√	√		0322
2010	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0301
2010	Buick	LaCrosse	Head-Up Dilay Module	√	√	√	√	√	
2010	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Radio	√	√	√	√	√	
2010	Buick	LaCrosse	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2010	Buick	LaCrosse	Multimedia Player Interface Module	√	√	√	√		
2010	Buick	LaCrosse	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2010	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2010	Buick	LaCrosse	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2010	Buick	LaCrosse	Seat Memory Control Module	√	√	√	√	√	0310
2010	Buick	LaCrosse	Front Seat Heating Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Rear Seat Heating Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	

2010	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0301
2010	Buick	LaCrosse	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2010	Buick	LaCrosse	Steering Column Lock Control Module	√	√	√	√		
2010	Buick	LaCrosse	Battery Energy Control Module	√			√		
2010	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Right Side Object Detection Control Module	√	√	√	√	√	
2010	Buick	Lucerne	Transmission control module		√	√	√	√	
2010	Buick	Lucerne	Engine Control Module	√	√	√	√	√	0493
2010	Buick	Lucerne	Digital radio receiver	√	√	√	√	√	
2010	Buick	Lucerne	Radio	√	√	√	√	√	
2010	Buick	Lucerne	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Buick	Lucerne	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Buick	Lucerne	Veh direction alert alarm warn mod	√	√	√	√	√	
2010	Buick	Lucerne	Passenger presence system	√	√	√	√		0512
2010	Buick	Lucerne	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Buick	Lucerne	Left side object detection module	√	√	√	√	√	
2010	Buick	Lucerne	Memory seat module	√	√	√	√	√	
2010	Buick	Lucerne	Park assist module	√	√	√	√	√	
2010	Buick	Lucerne	Right side object detection module	√	√	√	√		
2010	Buick	Lucerne	Theft Deterrent Module	√	√	√	√		
2010	Buick	Lucerne	Instrument panel cluster	√	√	√	√	√	
2010	Buick	Lucerne	HVAC Control Module	√	√	√	√	√	
2010	Buick	Lucerne	Driver door switch	√	√	√	√	√	
2010	Buick	Lucerne	Passenger door switch	√	√	√	√	√	
2010	Buick	Lucerne	Body Control Module	√	√	√	√	√	0499 0497
2010	Buick	Lucerne	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Buick	Lucerne	Electronic suspension control	√	√	√	√	√	
2010	Buick	Enclave - AWD	Transmission control module		√	√	√	√	
2010	Buick	Enclave - AWD	Fuel Pump Control Module	√	√	√	√	√	
2010	Buick	Enclave - AWD	Engine Control Module	√	√	√	√	√	
2010	Buick	Enclave - AWD	Digital radio receiver	√	√	√	√	√	
2010	Buick	Enclave - AWD	Radio	√	√	√	√	√	
2010	Buick	Enclave - AWD	Rear HVAC/RSA	√	√	√	√	√	
2010	Buick	Enclave - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Buick	Enclave - AWD	Headlamp Control Module	√	√	√			
2010	Buick	Enclave - AWD	Personal audio link module	√	√	√			0528 0529
2010	Buick	Enclave - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Buick	Enclave - AWD	Passenger presence system	√	√	√	√	√	
2010	Buick	Enclave - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Buick	Enclave - AWD	Memory seat module	√	√	√	√	√	
2010	Buick	Enclave - AWD	Park assist module	√	√	√	√	√	

2010	Buick	Enclave - AWD	Theft Deterrent Module	√	√	√	√		
2010	Buick	Enclave - AWD	Instrument panel cluster	√	√	√	√	√	
2010	Buick	Enclave - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Buick	Enclave - AWD	Driver door switch	√	√	√	√	√	0527
2010	Buick	Enclave - AWD	Passenger door switch	√	√	√	√	√	0527
2010	Buick	Enclave - AWD	Body Control Module	√	√	√	√	√	0499 0497
2010	Buick	Enclave - AWD	Liftgate module	√	√	√	√	√	
2010	Buick	Enclave - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Buick	Enclave - AWD	Rear drive system	√	√	√	√	√	0530
2010	Buick	Enclave - FWD	Transmission control module		√	√	√	√	
2010	Buick	Enclave - FWD	Fuel Pump Control Module	√	√	√	√	√	
2010	Buick	Enclave - FWD	Engine Control Module	√	√	√	√	√	
2010	Buick	Enclave - FWD	Digital radio receiver	√	√	√	√	√	
2010	Buick	Enclave - FWD	Radio	√	√	√	√	√	
2010	Buick	Enclave - FWD	Rear HVAC/RSA	√	√	√	√	√	
2010	Buick	Enclave - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Buick	Enclave - FWD	Headlamp Control Module	√	√	√			
2010	Buick	Enclave - FWD	Personal audio link module	√	√	√			0528 0529
2010	Buick	Enclave - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Buick	Enclave - FWD	Passenger presence system	√	√	√	√	√	
2010	Buick	Enclave - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Buick	Enclave - FWD	Memory seat module	√	√	√	√	√	
2010	Buick	Enclave - FWD	Park assist module	√	√	√	√		
2010	Buick	Enclave - FWD	Theft Deterrent Module	√	√	√	√		
2010	Buick	Enclave - FWD	Instrument panel cluster	√	√	√	√	√	
2010	Buick	Enclave - FWD	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Buick	Enclave - FWD	Driver door switch	√	√	√	√	√	0527
2010	Buick	Enclave - FWD	Passenger door switch	√	√	√	√	√	0527
2010	Buick	Enclave - FWD	Body Control Module	√	√	√	√	√	0499 0497
2010	Buick	Enclave - FWD	Liftgate module	√	√	√	√	√	
2010	Buick	Enclave - FWD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Buick	Enclave - FWD	Rear drive system	√	√	√	√	√	0530
2009	Buick	LaCrosse	Powertrain control module	√	√	√	√	√	0493
2009	Buick	LaCrosse	Transmission control module		√	√	√	√	
2009	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0493
2009	Buick	LaCrosse	Remote control door lock receiver	√	√	√	√	√	0159
2009	Buick	LaCrosse	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Buick	LaCrosse	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0552
2009	Buick	LaCrosse	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	Buick	LaCrosse	Digital radio receiver	√	√	√	√	√	0516

2009	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0499
2009	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0500
2009	Buick	LaCrosse	Instrument panel cluster	√	√	√	√	√	0159
2009	Buick	LaCrosse	Electronic Brake Control Module		√	√	√	√	0506
2009	Buick	LaCrosse (Allure in Canada)	Powertrain control module	√	√	√	√	√	0493
2009	Buick	LaCrosse (Allure in Canada)	Transmission control module		√	√	√	√	
2009	Buick	LaCrosse (Allure in Canada)	Engine Control Module	√	√	√	√	√	0493
2009	Buick	LaCrosse (Allure in Canada)	Remote control door lock receiver	√	√	√	√	√	0159
2009	Buick	LaCrosse (Allure in Canada)	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Buick	LaCrosse (Allure in Canada)	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0552
2009	Buick	LaCrosse (Allure in Canada)	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	Buick	LaCrosse (Allure in Canada)	Digital radio receiver	√	√	√	√	√	0516
2009	Buick	LaCrosse (Allure in Canada)	Body Control Module	√	√	√	√	√	0499
2009	Buick	LaCrosse (Allure in Canada)	HVAC Control Module	√	√	√	√	√	0500
2009	Buick	LaCrosse (Allure in Canada)	Instrument panel cluster	√	√	√	√	√	0159
2009	Buick	LaCrosse (Allure in Canada)	Electronic Brake Control Module		√	√	√	√	0506
2009	Buick	Lucerne	Transmission control module		√	√	√	√	
2009	Buick	Lucerne	Engine Control Module	√	√	√	√	√	0493
2009	Buick	Lucerne	Passenger presence system	√	√	√	√		0512
2009	Buick	Lucerne	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Buick	Lucerne	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Buick	Lucerne	Theft Deterrent Module	√	√	√	√		
2009	Buick	Lucerne	Radio	√	√	√	√	√	
2009	Buick	Lucerne	Digital radio receiver	√	√	√	√	√	
2009	Buick	Lucerne	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Buick	Lucerne	Veh direction alert alarm warn mod	√	√	√	√	√	
2009	Buick	Lucerne	Left side object detection module	√	√	√	√	√	
2009	Buick	Lucerne	Memory seat module	√	√	√	√	√	
2009	Buick	Lucerne	Park assist module	√	√	√	√	√	
2009	Buick	Lucerne	Right side object detection module	√	√	√	√		
2009	Buick	Lucerne	Instrument panel cluster	√	√	√	√	√	
2009	Buick	Lucerne	HVAC Control Module	√	√	√	√	√	
2009	Buick	Lucerne	Driver door switch	√	√	√	√	√	
2009	Buick	Lucerne	Passenger door switch	√	√	√	√	√	
2009	Buick	Lucerne	Body Control Module	√	√	√	√	√	0499 0497
2009	Buick	Lucerne	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Buick	Lucerne	Electronic suspension control	√	√	√	√	√	
2009	Buick	Others	Immobilizer						0508
2009	Buick	Others	Engine Control Module	√	√	√	√	√	
2009	Buick	Others	Transmission control module	√	√	√	√	√	

2009	Buick	Enclave - AWD	Transmission control module		√	√	√	√	
2009	Buick	Enclave - AWD	Engine Control Module	√	√	√	√	√	
2009	Buick	Enclave - AWD	Passenger presence system	√	√	√	√	√	
2009	Buick	Enclave - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Buick	Enclave - AWD	Rollover sensor	√	√	√	√	√	0541
2009	Buick	Enclave - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Buick	Enclave - AWD	Theft Deterrent Module	√	√	√	√	√	
2009	Buick	Enclave - AWD	Personal audio link module	√	√	√	√	√	0528 0529
2009	Buick	Enclave - AWD	Radio	√	√	√	√	√	
2009	Buick	Enclave - AWD	Digital radio receiver	√	√	√	√	√	
2009	Buick	Enclave - AWD	Headlamp Control Module	√	√	√	√	√	
2009	Buick	Enclave - AWD	Rear HVAC/RSA	√	√	√	√	√	
2009	Buick	Enclave - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Buick	Enclave - AWD	Memory seat module	√	√	√	√	√	
2009	Buick	Enclave - AWD	Park assist module	√	√	√	√	√	
2009	Buick	Enclave - AWD	Liftgate module	√	√	√	√	√	
2009	Buick	Enclave - AWD	Instrument panel cluster	√	√	√	√	√	
2009	Buick	Enclave - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Buick	Enclave - AWD	Body Control Module	√	√	√	√	√	0499 0497
2009	Buick	Enclave - AWD	Driver door switch	√	√	√	√	√	0527
2009	Buick	Enclave - AWD	Passenger door switch	√	√	√	√	√	0527
2009	Buick	Enclave - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Buick	Enclave - AWD	Rear drive system	√	√	√	√	√	0530
2009	Buick	Enclave - FWD	Transmission control module		√	√	√	√	
2009	Buick	Enclave - FWD	Engine Control Module	√	√	√	√	√	
2009	Buick	Enclave - FWD	Passenger presence system	√	√	√	√	√	
2009	Buick	Enclave - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Buick	Enclave - FWD	Rollover sensor	√	√	√	√	√	0541
2009	Buick	Enclave - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Buick	Enclave - FWD	Theft Deterrent Module	√	√	√	√	√	
2009	Buick	Enclave - FWD	Personal audio link module	√	√	√	√	√	0528 0529
2009	Buick	Enclave - FWD	Radio	√	√	√	√	√	
2009	Buick	Enclave - FWD	Digital radio receiver	√	√	√	√	√	
2009	Buick	Enclave - FWD	Headlamp Control Module	√	√	√	√	√	
2009	Buick	Enclave - FWD	Rear HVAC/RSA	√	√	√	√	√	
2009	Buick	Enclave - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Buick	Enclave - FWD	Memory seat module	√	√	√	√	√	
2009	Buick	Enclave - FWD	Park assist module	√	√	√	√	√	
2009	Buick	Enclave - FWD	Liftgate module	√	√	√	√	√	
2009	Buick	Enclave - FWD	Instrument panel cluster	√	√	√	√	√	
2009	Buick	Enclave - FWD	HVAC Control Module	√	√	√	√	√	0500 0526

2009	Buick	Enclave - FWD	Body Control Module	√	√	√	√	√	0499 0497
2009	Buick	Enclave - FWD	Driver door switch	√	√	√	√	√	0527
2009	Buick	Enclave - FWD	Passenger door switch	√	√	√	√	√	0527
2009	Buick	Enclave - FWD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Buick	Enclave - FWD	Rear drive system	√	√	√	√	√	0530
2008	Buick	LaCrosse	Powertrain control module	√	√	√	√	√	0493
2008	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	
2008	Buick	LaCrosse	Transmission control module	√	√	√	√	√	0493
2008	Buick	LaCrosse	Remote control door lock receiver	√	√	√	√	√	0159
2008	Buick	LaCrosse	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0499
2008	Buick	LaCrosse	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0552
2008	Buick	LaCrosse	Digital radio receiver	√	√	√	√		0516
2008	Buick	LaCrosse	Vehicle comm. interface module	√	√	√	√	√	0565 0495 0585
2008	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0500
2008	Buick	LaCrosse	Instrument panel cluster	√	√	√	√	√	0159
2008	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Buick	LaCrosse (Allure in Canada)	Powertrain control module	√	√	√	√	√	0493
2008	Buick	LaCrosse (Allure in Canada)	Engine Control Module	√	√	√	√	√	
2008	Buick	LaCrosse (Allure in Canada)	Transmission control module	√	√	√	√	√	0493
2008	Buick	LaCrosse (Allure in Canada)	Remote control door lock receiver	√	√	√	√	√	0159
2008	Buick	LaCrosse (Allure in Canada)	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Buick	LaCrosse (Allure in Canada)	Body Control Module	√	√	√	√	√	0499
2008	Buick	LaCrosse (Allure in Canada)	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0552
2008	Buick	LaCrosse (Allure in Canada)	Digital radio receiver	√	√	√	√		0516
2008	Buick	LaCrosse (Allure in Canada)	Vehicle comm. interface module	√	√	√	√	√	0565 0495 0585
2008	Buick	LaCrosse (Allure in Canada)	HVAC Control Module	√	√	√	√	√	0500
2008	Buick	LaCrosse (Allure in Canada)	Instrument panel cluster	√	√	√	√	√	0159
2008	Buick	LaCrosse (Allure in Canada)	Electronic Brake Control Module		√	√	√	√	0506
2008	Buick	Lucerne	Powertrain control module	√	√	√	√	√	0493
2008	Buick	Lucerne	Engine Control Module	√	√	√	√	√	0493
2008	Buick	Lucerne	Transmission control module	√	√	√	√	√	0493
2008	Buick	Lucerne	Passenger presence system	√	√	√	√		0512
2008	Buick	Lucerne	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Buick	Lucerne	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Buick	Lucerne	Theft Deterrent Module	√	√	√	√		
2008	Buick	Lucerne	Radio	√	√	√	√	√	
2008	Buick	Lucerne	Veh direction alert alarm warn mod	√	√	√	√	√	
2008	Buick	Lucerne	Digital radio receiver	√	√	√	√		
2008	Buick	Lucerne	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495

2008	Buick	Lucerne	HVAC Control Module	√	√	√	√	√	
2008	Buick	Lucerne	Body Control Module	√	√	√	√	√	0499 0497
2008	Buick	Lucerne	Left side object detection module	√	√	√	√	√	
2008	Buick	Lucerne	Right side object detection module	√	√	√	√	√	
2008	Buick	Lucerne	Memory seat module	√	√	√	√	√	
2008	Buick	Lucerne	Park assist module	√	√	√	√	√	
2008	Buick	Lucerne	Instrument panel cluster	√	√	√	√	√	
2008	Buick	Lucerne	Driver door switch	√	√	√	√	√	
2008	Buick	Lucerne	Passenger door switch	√	√	√	√	√	0512
2008	Buick	Lucerne	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Buick	Lucerne	Electronic suspension control	√	√	√	√	√	
2008	Buick	Others	Immobilizer						0508
2008	Buick	Others	Engine Control Module	√	√	√	√	√	0507
2008	Buick	Others	Transmission control module	√	√	√	√	√	0493
2008	Buick	Enclave - AWD	Engine Control Module	√	√	√	√	√	0493
2008	Buick	Enclave - AWD	Transmission control module		√	√	√	√	
2008	Buick	Enclave - AWD	Passenger presence system	√	√	√	√		0537
2008	Buick	Enclave - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Buick	Enclave - AWD	Rollover sensor	√	√	√	√		0541
2008	Buick	Enclave - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Buick	Enclave - AWD	Theft Deterrent Module	√	√	√	√		
2008	Buick	Enclave - AWD	Memory seat module	√	√	√	√	√	
2008	Buick	Enclave - AWD	Park assist module	√	√	√	√	√	
2008	Buick	Enclave - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Buick	Enclave - AWD	Digital radio receiver	√	√	√	√		
2008	Buick	Enclave - AWD	Radio	√	√	√	√	√	
2008	Buick	Enclave - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Buick	Enclave - AWD	Body Control Module						0499 0497
2008	Buick	Enclave - AWD	Rear HVAC/RSA	√	√	√	√	√	
2008	Buick	Enclave - AWD	Personal audio link module	√	√	√			0528 0529
2008	Buick	Enclave - AWD	Driver door switch	√	√	√	√	√	0527
2008	Buick	Enclave - AWD	Passenger door switch	√	√	√	√	√	0527
2008	Buick	Enclave - AWD	Instrument panel cluster					√	
2008	Buick	Enclave - AWD	Headlamp Control Module	√	√	√	√	√	
2008	Buick	Enclave - AWD	Liftgate module	√	√	√	√	√	
2008	Buick	Enclave - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Buick	Enclave - AWD	Rear drive system	√	√	√	√	√	0530
2008	Buick	Enclave - FWD	Engine Control Module	√	√	√	√	√	0493
2008	Buick	Enclave - FWD	Rear drive system	√	√	√	√	√	0530
2008	Buick	Enclave - FWD	Passenger presence system	√	√	√	√		0537
2008	Buick	Enclave - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159

2008	Buick	Enclave - FWD	Rollover sensor	√	√	√	√		0541
2008	Buick	Enclave - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Buick	Enclave - FWD	Theft Deterrent Module	√	√	√	√		
2008	Buick	Enclave - FWD	Memory seat module	√	√	√	√	√	
2008	Buick	Enclave - FWD	Park assist module	√	√	√	√	√	
2008	Buick	Enclave - FWD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Buick	Enclave - FWD	Digital radio receiver	√	√	√	√		
2008	Buick	Enclave - FWD	Radio	√	√	√	√	√	
2008	Buick	Enclave - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Buick	Enclave - FWD	Body Control Module						0499 0497
2008	Buick	Enclave - FWD	Rear HVAC/RSA	√	√	√	√	√	
2008	Buick	Enclave - FWD	Personal audio link module	√	√	√			0528 0529
2008	Buick	Enclave - FWD	Driver door switch	√	√	√	√	√	0527
2008	Buick	Enclave - FWD	Passenger door switch	√	√	√	√	√	0527
2008	Buick	Enclave - FWD	Instrument panel cluster					√	
2008	Buick	Enclave - FWD	Headlamp Control Module	√	√	√	√	√	
2008	Buick	Enclave - FWD	Liftgate module	√	√	√	√	√	
2008	Buick	Enclave - FWD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Buick	LaCrosse	Powertrain control module	√	√	√	√	√	
2007	Buick	LaCrosse	Transmission control module		√	√	√	√	
2007	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	
2007	Buick	LaCrosse	Remote control door lock receiver	√	√	√	√	√	0159
2007	Buick	LaCrosse	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Buick	LaCrosse	Digital radio receiver	√	√	√	√		0516
2007	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0499
2007	Buick	LaCrosse	Instrument panel cluster	√	√	√	√	√	
2007	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0500
2007	Buick	LaCrosse	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0552
2007	Buick	LaCrosse	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Buick	LaCrosse	Electronic Brake Control Module				√		0506
2007	Buick	LaCrosse (Allure in Canada)	Powertrain control module	√	√	√	√	√	
2007	Buick	LaCrosse (Allure in Canada)	Transmission control module		√	√	√	√	
2007	Buick	LaCrosse (Allure in Canada)	Engine Control Module	√	√	√	√	√	
2007	Buick	LaCrosse (Allure in Canada)	Remote control door lock receiver	√	√	√	√	√	0159
2007	Buick	LaCrosse (Allure in Canada)	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Buick	LaCrosse (Allure in Canada)	Digital radio receiver	√	√	√	√		0516
2007	Buick	LaCrosse (Allure in Canada)	Body Control Module	√	√	√	√	√	0499
2007	Buick	LaCrosse (Allure in Canada)	Instrument panel cluster	√	√	√	√	√	
2007	Buick	LaCrosse (Allure in Canada)	HVAC Control Module	√	√	√	√	√	0500
2007	Buick	LaCrosse (Allure in Canada)	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0552

2007	Buick	LaCrosse (Allure in Canada)	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Buick	LaCrosse (Allure in Canada)	Electronic Brake Control Module				√		0506
2007	Buick	Lucerne	Powertrain control module	√	√	√	√	√	0493
2007	Buick	Lucerne	Transmission control module		√	√	√	√	
2007	Buick	Lucerne	Engine Control Module	√	√	√	√	√	0493
2007	Buick	Lucerne	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Buick	Lucerne	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Buick	Lucerne	Theft Deterrent Module	√	√	√	√		
2007	Buick	Lucerne	Passenger presence system	√	√	√	√		0512
2007	Buick	Lucerne	Digital radio receiver	√	√	√	√		
2007	Buick	Lucerne	Radio	√	√	√	√	√	
2007	Buick	Lucerne	Body Control Module	√	√	√	√	√	0499 0497
2007	Buick	Lucerne	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Buick	Lucerne	HVAC Control Module	√	√	√	√	√	
2007	Buick	Lucerne	Driver door switch	√	√	√	√	√	
2007	Buick	Lucerne	Passenger door switch	√	√	√	√	√	
2007	Buick	Lucerne	Instrument panel cluster	√	√	√	√	√	
2007	Buick	Lucerne	Memory seat module	√	√	√	√	√	
2007	Buick	Lucerne	Park assist module	√	√	√	√	√	0513 0159
2007	Buick	Lucerne	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Buick	Lucerne	Electronic suspension control	√	√	√	√	√	
2007	Buick	Rainier	Powertrain control module		√	√	√	√	
2007	Buick	Rainier	Transmission control module		√	√	√	√	
2007	Buick	Rainier	Engine Control Module	√	√	√	√	√	0493
2007	Buick	Rainier	Supplemental inflatable restraint	√	√	√	√	√	
2007	Buick	Rainier	Disc player and video delay	√	√	√			
2007	Buick	Rainier	Radio	√	√	√	√		
2007	Buick	Rainier	Rear seat audio	√	√	√	√		
2007	Buick	Rainier	Digital radio receiver	√	√	√	√		0516
2007	Buick	Rainier	Instrument panel cluster	√	√	√	√	√	
2007	Buick	Rainier	Generator battery control module	√	√	√	√	√	
2007	Buick	Rainier	Body Control Module	√	√	√	√	√	0550
2007	Buick	Rainier	Driver door module	√	√	√	√	√	
2007	Buick	Rainier	Driver seat module	√	√	√	√	√	
2007	Buick	Rainier	HVAC Control Module	√	√	√	√	√	
2007	Buick	Rainier	Passenger door module	√	√	√	√	√	
2007	Buick	Rainier	Liftgate module	√	√	√	√	√	0159
2007	Buick	Rainier	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Buick	Rainier	Passenger presence system	√	√	√	√	√	0512
2007	Buick	Rainier	Navigation radio	√	√	√	√	√	0525
2007	Buick	Rainier	Electronic Brake Control Module	√	√	√	√	√	

2007	Buick	Rainier	Transfer Case Control Module	√	√	√	√	√	0493
2007	Buick	Rendezvous - FWD	Powertrain control module	√	√	√	√	√	
2007	Buick	Rendezvous - FWD	Passenger presence system		√	√			0512
2007	Buick	Rendezvous - FWD	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Buick	Rendezvous - FWD	Theft Deterrent Module	√	√	√	√		
2007	Buick	Rendezvous - FWD	Digital radio receiver	√	√	√	√		0516
2007	Buick	Rendezvous - FWD	Disc player and video dilay	√	√	√			
2007	Buick	Rendezvous - FWD	Radio	√	√	√	√	√	0573 0572 0574 0524
2007	Buick	Rendezvous - FWD	HVAC Control Module	√	√	√	√	√	
2007	Buick	Rendezvous - FWD	Instrument panel cluster	√	√	√	√	√	
2007	Buick	Rendezvous - FWD	Body Control Module	√	√	√	√	√	0628 0637 0614 0515
2007	Buick	Rendezvous - FWD	Head up dilay	√	√	√	√		
2007	Buick	Rendezvous - FWD	Memory seat module		√	√	√	√	
2007	Buick	Rendezvous - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Buick	Rendezvous - FWD	Electronic Brake Control Module		√	√	√	√	0506
2007	Buick	Terraza	Transmission control module		√	√	√	√	
2007	Buick	Terraza	Engine Control Module	√	√	√	√	√	0493
2007	Buick	Terraza	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Buick	Terraza	Mobile digital media		√	√			
2007	Buick	Terraza	Radio	√	√	√	√	√	0587 0524 0525
2007	Buick	Terraza	Disc player and video dilay	√	√	√			
2007	Buick	Terraza	Body Control Module	√	√	√	√	√	0499
2007	Buick	Terraza	Left power sliding door module	√	√	√	√	√	
2007	Buick	Terraza	Right power sliding door module	√	√	√	√	√	
2007	Buick	Terraza	Memory seat module	√	√	√	√	√	
2007	Buick	Terraza	HVAC Control Module	√	√	√	√	√	
2007	Buick	Terraza	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Buick	Terraza	Digital radio receiver	√	√	√	√		0516
2007	Buick	Terraza	Passenger presence system	√	√	√	√	√	0512
2007	Buick	Terraza	Navigation radio	√	√	√	√	√	0525
2007	Buick	Terraza	Electronic Brake Control Module		√	√	√	√	0506
2007	Buick	Terraza Ext.	Transmission control module		√	√	√	√	
2007	Buick	Terraza Ext.	Engine Control Module	√	√	√	√	√	0493
2007	Buick	Terraza Ext.	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Buick	Terraza Ext.	Mobile digital media		√	√			
2007	Buick	Terraza Ext.	Radio	√	√	√	√	√	0587 0524 0525
2007	Buick	Terraza Ext.	Disc player and video dilay	√	√	√			
2007	Buick	Terraza Ext.	Body Control Module	√	√	√	√	√	0499
2007	Buick	Terraza Ext.	Left power sliding door module	√	√	√	√	√	
2007	Buick	Terraza Ext.	Right power sliding door module	√	√	√	√	√	
2007	Buick	Terraza Ext.	Memory seat module	√	√	√	√	√	

2007	Buick	Terraza Ext.	HVAC Control Module	√	√	√	√	√	
2007	Buick	Terraza Ext.	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Buick	Terraza Ext.	Digital radio receiver	√	√	√	√	√	0516
2007	Buick	Terraza Ext.	Passenger presence system	√	√	√	√	√	0512
2007	Buick	Terraza Ext.	Navigation radio	√	√	√	√	√	0525
2007	Buick	Terraza Ext.	Electronic Brake Control Module		√	√	√	√	0506
2006	Buick	LaCrosse	HVAC systems - manual	√	√	√	√	√	0499
2006	Buick	LaCrosse	HVAC systems - automatic	√	√	√	√	√	0500
2006	Buick	LaCrosse	Antilock Braking System	√	√	√	√	√	0506
2006	Buick	LaCrosse	Engine controls		√	√	√	√	
2006	Buick	LaCrosse	Engine cooling		√	√	√	√	
2006	Buick	LaCrosse	Engine electrical	√	√	√	√	√	0499
2006	Buick	LaCrosse	Shift lock control	√	√	√	√	√	0499
2006	Buick	LaCrosse	Automatic transaxle	√	√	√	√	√	0499
2006	Buick	LaCrosse	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Buick	LaCrosse	Cruise Control	√	√	√	√	√	
2006	Buick	LaCrosse	Entertainment	√	√	√	√	√	0516
2006	Buick	LaCrosse	Horns	√	√	√	√	√	0499
2006	Buick	LaCrosse	Instrument panel	√	√	√	√	√	
2006	Buick	LaCrosse	Keyless entry	√	√	√	√	√	0499
2006	Buick	LaCrosse	Lighting systems	√	√	√	√	√	0499
2006	Buick	LaCrosse	Seats	√	√	√	√	√	0499
2006	Buick	LaCrosse	Stationary windows	√	√	√	√	√	0499
2006	Buick	LaCrosse	Theft deterrent	√	√	√	√	√	0499
2006	Buick	LaCrosse	Wipers/washer systems	√	√	√	√	√	0499
2006	Buick	LaCrosse	Seat belts	√	√	√	√	√	0639 0515
2006	Buick	LaCrosse	SIR	√	√	√	√	√	0639 0515
2006	Buick	LaCrosse (Allure in Canada)	HVAC systems - manual	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	HVAC systems - automatic	√	√	√	√	√	0500
2006	Buick	LaCrosse (Allure in Canada)	Antilock Braking System	√	√	√	√	√	0506
2006	Buick	LaCrosse (Allure in Canada)	Engine controls		√	√	√	√	
2006	Buick	LaCrosse (Allure in Canada)	Engine cooling		√	√	√	√	
2006	Buick	LaCrosse (Allure in Canada)	Engine electrical	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Shift lock control	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Automatic transaxle	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Buick	LaCrosse (Allure in Canada)	Cruise Control	√	√	√	√	√	
2006	Buick	LaCrosse (Allure in Canada)	Entertainment	√	√	√	√	√	0516
2006	Buick	LaCrosse (Allure in Canada)	Horns	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Instrument panel	√	√	√	√	√	
2006	Buick	LaCrosse (Allure in Canada)	Keyless entry	√	√	√	√	√	0499

2006	Buick	LaCrosse (Allure in Canada)	Lighting systems	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Seats	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Stationary windows	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Theft deterrent	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Wipers/washer systems	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Seat belts	√	√	√	√	√	0639 0515
2006	Buick	LaCrosse (Allure in Canada)	SIR	√	√	√	√	√	0639 0515
2006	Buick	Lucerne	HVAC systems - automatic	√	√	√	√	√	
2006	Buick	Lucerne	HVAC systems - manual	√	√	√	√	√	0493
2006	Buick	Lucerne	Steering	√	√	√	√		
2006	Buick	Lucerne	Suension		√	√	√	√	
2006	Buick	Lucerne	Antilock Braking System	√	√	√	√	√	0493
2006	Buick	Lucerne	Hydraulic brakes	√	√	√			
2006	Buick	Lucerne	Park brake	√	√	√	√	√	0506
2006	Buick	Lucerne	Engine controls	√	√	√	√	√	0493
2006	Buick	Lucerne	Engine cooling	√	√	√	√	√	0493
2006	Buick	Lucerne	Engine electrical	√	√	√	√	√	0493
2006	Buick	Lucerne	Shift lock control	√	√	√	√		
2006	Buick	Lucerne	Automatic transaxle	√	√	√	√	√	
2006	Buick	Lucerne	Body rear end	√	√	√	√		
2006	Buick	Lucerne	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Buick	Lucerne	Cruise Control	√	√	√	√	√	0493
2006	Buick	Lucerne	Door	√	√	√	√	√	
2006	Buick	Lucerne	Entertainment	√	√	√	√	√	
2006	Buick	Lucerne	Horns	√	√	√	√		
2006	Buick	Lucerne	Instrument panel	√	√	√	√	√	0493
2006	Buick	Lucerne	Keyless entry	√	√	√	√	√	0493
2006	Buick	Lucerne	Lighting systems	√	√	√	√		
2006	Buick	Lucerne	Body Control Module	√	√	√	√		
2006	Buick	Lucerne	Seats	√	√	√	√	√	
2006	Buick	Lucerne	Stationary windows	√	√	√	√		
2006	Buick	Lucerne	Theft deterrent	√	√	√	√	√	0493
2006	Buick	Lucerne	Wipers/washer systems	√	√	√	√		
2006	Buick	Lucerne	Rear parking assist	√	√	√	√	√	0494 0591 0565 0495
2006	Buick	Lucerne	Seat belts	√	√	√	√	√	0497
2006	Buick	Lucerne	SIR	√	√	√	√	√	0497
2006	Buick	Others	Powertrain	√	√	√	√	√	0493
2006	Buick	Others	Electronic Brake Control Module	√	√	√	√	√	0506
2006	Buick	Rainier	Powertrain	√	√	√	√	√	0493
2006	Buick	Rainier	Disc player and video dilay	√	√	√			
2006	Buick	Rainier	Digital radio receiver	√	√	√	√		0516

2006	Buick	Rainier	Radio	√	√	√	√		
2006	Buick	Rainier	Rear seat audio	√	√	√	√		
2006	Buick	Rainier	Body Control Module	√	√	√	√	√	0550
2006	Buick	Rainier	Instrument panel cluster	√	√	√	√	√	
2006	Buick	Rainier	Driver door module	√	√	√	√	√	
2006	Buick	Rainier	Driver seat module	√	√	√	√	√	
2006	Buick	Rainier	Heating and air conditioning	√	√	√	√	√	
2006	Buick	Rainier	Lift gate module	√	√	√	√	√	
2006	Buick	Rainier	Passenger door module	√	√	√	√	√	
2006	Buick	Rainier	Passenger presence system		√	√			0512
2006	Buick	Rainier	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Buick	Rainier	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	Buick	Rainier	Navigation radio	√	√	√	√	√	0525
2006	Buick	Rainier	ABS/TCS/VSES	√	√	√	√	√	0493
2006	Buick	Rainier - 2WD	Powertrain	√	√	√	√	√	0493
2006	Buick	Rainier - 2WD	Disc player and video dilay	√	√	√			
2006	Buick	Rainier - 2WD	Digital radio receiver	√	√	√	√		0516
2006	Buick	Rainier - 2WD	Radio	√	√	√	√		
2006	Buick	Rainier - 2WD	Rear seat audio	√	√	√	√		
2006	Buick	Rainier - 2WD	Body Control Module	√	√	√	√	√	0550
2006	Buick	Rainier - 2WD	Instrument panel cluster	√	√	√	√	√	
2006	Buick	Rainier - 2WD	Driver door module	√	√	√	√	√	
2006	Buick	Rainier - 2WD	Driver seat module	√	√	√	√	√	
2006	Buick	Rainier - 2WD	Heating and air conditioning	√	√	√	√	√	
2006	Buick	Rainier - 2WD	Lift gate module	√	√	√	√	√	
2006	Buick	Rainier - 2WD	Passenger door module	√	√	√	√	√	
2006	Buick	Rainier - 2WD	Passenger presence system		√	√			0512
2006	Buick	Rainier - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Buick	Rainier - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	Buick	Rainier - 2WD	Navigation radio	√	√	√	√	√	0525
2006	Buick	Rainier - 2WD	ABS/TCS/VSES	√	√	√	√	√	0493
2006	Buick	Rendezvous - AWD	Powertrain	√	√	√	√	√	
2006	Buick	Rendezvous - AWD	Radio	√	√	√	√	√	0573 0574 0636 0572
2006	Buick	Rendezvous - AWD	Disc player and video dilay	√	√	√			
2006	Buick	Rendezvous - AWD	Digital radio receiver	√	√	√	√		0516
2006	Buick	Rendezvous - AWD	Navigation radio	√	√	√	√	√	0525
2006	Buick	Rendezvous - AWD	Vehicle theft deterrent	√	√	√	√		
2006	Buick	Rendezvous - AWD	Passenger presence system		√	√			0512
2006	Buick	Rendezvous - AWD	Body Control Module		√	√	√	√	0560 0515 0628 0637
2006	Buick	Rendezvous - AWD	Head up dilay		√	√	√		
2006	Buick	Rendezvous - AWD	Instrument panel cluster		√	√	√	√	

2006	Buick	Rendezvous - AWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Buick	Rendezvous - AWD	Supplemental inflatable restraint	√	√	√	√	√	0515
2006	Buick	Rendezvous - AWD	Memory seat module	√	√	√	√	√	0573 0574 0636 0572
2006	Buick	Rendezvous - AWD	Chassis	√	√	√	√	√	0506
2006	Buick	Rendezvous - FWD	Powertrain	√	√	√	√	√	
2006	Buick	Rendezvous - FWD	Radio	√	√	√	√	√	0573 0574 0636 0572
2006	Buick	Rendezvous - FWD	Disc player and video dilay	√	√	√			
2006	Buick	Rendezvous - FWD	Digital radio receiver	√	√	√	√		0516
2006	Buick	Rendezvous - FWD	Navigation radio	√	√	√	√	√	0525
2006	Buick	Rendezvous - FWD	Vehicle theft deterrent	√	√	√	√		
2006	Buick	Rendezvous - FWD	Passenger presence system		√	√			0512
2006	Buick	Rendezvous - FWD	Body Control Module		√	√	√	√	0560 0515 0628 0637
2006	Buick	Rendezvous - FWD	Head up dilay		√	√	√		
2006	Buick	Rendezvous - FWD	Instrument panel cluster		√	√	√	√	
2006	Buick	Rendezvous - FWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Buick	Rendezvous - FWD	Supplemental inflatable restraint	√	√	√	√	√	0515
2006	Buick	Rendezvous - FWD	Memory seat module	√	√	√	√	√	0573 0574 0636 0572
2006	Buick	Rendezvous - FWD	Chassis	√	√	√	√	√	0506
2006	Buick	Terraza	HVAC systems - manual	√	√	√	√	√	0499
2006	Buick	Terraza	Antilock Braking System	√	√	√	√	√	0506
2006	Buick	Terraza	Engine controls	√	√	√	√	√	0493
2006	Buick	Terraza	Engine cooling	√	√	√	√	√	0493
2006	Buick	Terraza	Engine electrical	√	√	√	√	√	0499
2006	Buick	Terraza	Shift lock control	√	√	√	√	√	0499
2006	Buick	Terraza	Automatic transaxle	√	√	√	√	√	0499
2006	Buick	Terraza	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Buick	Terraza	Cruise Control	√	√	√	√	√	0493
2006	Buick	Terraza	Door	√	√	√	√	√	
2006	Buick	Terraza	Entertainment	√	√	√	√	√	0516
2006	Buick	Terraza	Horns	√	√	√	√	√	0499
2006	Buick	Terraza	Instrument panel	√	√	√	√	√	0499
2006	Buick	Terraza	Lighting systems	√	√	√	√	√	0499
2006	Buick	Terraza	Navigation System	√	√	√	√	√	0525
2006	Buick	Terraza	Seats	√	√	√	√	√	
2006	Buick	Terraza	Stationary windows	√	√	√	√	√	
2006	Buick	Terraza	Theft deterrent	√	√	√	√	√	0499
2006	Buick	Terraza	Wipers/washer systems	√	√	√	√	√	0499
2006	Buick	Terraza	Keyless entry	√	√	√	√	√	0499
2006	Buick	Terraza	Seat belts	√	√	√	√	√	0639 0515
2006	Buick	Terraza	SIR	√	√	√	√	√	0639 0515
2006	Buick	Terraza - 4WD	HVAC systems - manual	√	√	√	√	√	0499

2006	Buick	Terraza - 4WD	Antilock Braking System	√	√	√	√	√	0506
2006	Buick	Terraza - 4WD	Engine controls		√	√	√	√	
2006	Buick	Terraza - 4WD	Engine cooling		√	√	√	√	
2006	Buick	Terraza - 4WD	Engine electrical	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Shift lock control	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Automatic transaxle	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Buick	Terraza - 4WD	Cruise Control	√	√	√	√	√	0493
2006	Buick	Terraza - 4WD	Door	√	√	√	√	√	
2006	Buick	Terraza - 4WD	Entertainment	√	√	√	√	√	0516
2006	Buick	Terraza - 4WD	Horns	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Instrument panel	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Keyless entry	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Lighting systems	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Navigation System	√	√	√	√	√	0525
2006	Buick	Terraza - 4WD	Seats	√	√	√	√	√	
2006	Buick	Terraza - 4WD	Stationary windows	√	√	√	√	√	
2006	Buick	Terraza - 4WD	Theft deterrent	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Wipers/washer systems	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Seat belts	√	√	√	√	√	0639 0515
2006	Buick	Terraza - 4WD	SIR	√	√	√	√	√	0639 0515
2006	Buick	Terraza Ext.	HVAC systems - manual	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Antilock Braking System	√	√	√	√	√	0506
2006	Buick	Terraza Ext.	Engine controls		√	√	√	√	
2006	Buick	Terraza Ext.	Engine cooling		√	√	√	√	
2006	Buick	Terraza Ext.	Engine electrical	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Shift lock control	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Automatic transaxle	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Buick	Terraza Ext.	Cruise Control	√	√	√	√	√	0493
2006	Buick	Terraza Ext.	Door	√	√	√	√	√	
2006	Buick	Terraza Ext.	Entertainment	√	√	√	√	√	0516
2006	Buick	Terraza Ext.	Horns	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Instrument panel	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Keyless entry	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Lighting systems	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Navigation System	√	√	√	√	√	0525
2006	Buick	Terraza Ext.	Seats	√	√	√	√	√	
2006	Buick	Terraza Ext.	Stationary windows	√	√	√	√	√	
2006	Buick	Terraza Ext.	Theft deterrent	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Wipers/washer systems	√	√	√	√	√	0499

2006	Buick	Terraza Ext.	Seat belts	√	√	√	√	√	0639 0515
2006	Buick	Terraza Ext.	SIR	√	√	√	√	√	0639 0515
2005	Buick	Century	Powertrain	√	√	√	√	√	
2005	Buick	Century	Supplemental inflatable restraint	√	√	√	√	√	
2005	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0628
2005	Buick	Century	Radio		√	√	√	√	0573 0636 0572
2005	Buick	Century	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2005	Buick	Century	Heating and air conditioning		√	√	√	√	
2005	Buick	Century	Chassis	√	√	√	√	√	0506
2005	Buick	LaCrosse	HVAC systems - manual		√	√	√	√	
2005	Buick	LaCrosse	HVAC systems - automatic	√	√	√	√	√	0500
2005	Buick	LaCrosse	Brakes	√	√	√	√	√	0506
2005	Buick	LaCrosse	Engine controls		√	√	√	√	
2005	Buick	LaCrosse	Engine cooling		√	√	√	√	
2005	Buick	LaCrosse	Engine electrical	√	√	√	√	√	0515
2005	Buick	LaCrosse	Shift lock control	√	√	√	√	√	0499
2005	Buick	LaCrosse	Automatic transaxle	√	√	√	√	√	0499
2005	Buick	LaCrosse	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Buick	LaCrosse	Cruise Control		√	√	√	√	
2005	Buick	LaCrosse	Entertainment	√	√	√	√	√	0516
2005	Buick	LaCrosse	Horns	√	√	√	√	√	0499
2005	Buick	LaCrosse	Instrument panel	√	√	√	√	√	0663
2005	Buick	LaCrosse	Keyless entry	√	√	√	√	√	0499
2005	Buick	LaCrosse	Lighting systems	√	√	√	√	√	0499
2005	Buick	LaCrosse	Seats	√	√	√	√	√	0499
2005	Buick	LaCrosse	Stationary windows	√	√	√	√	√	0499
2005	Buick	LaCrosse	Theft deterrent	√	√	√	√	√	0499
2005	Buick	LaCrosse	Wipers/washer systems	√	√	√	√	√	0499
2005	Buick	LaCrosse	Seat belts	√	√	√	√	√	0515
2005	Buick	LaCrosse	SIR	√	√	√	√	√	0515
2005	Buick	LaCrosse (Allure in Canada)	HVAC systems - manual		√	√	√	√	
2005	Buick	LaCrosse (Allure in Canada)	HVAC systems - automatic	√	√	√	√	√	0500
2005	Buick	LaCrosse (Allure in Canada)	Brakes	√	√	√	√	√	0506
2005	Buick	LaCrosse (Allure in Canada)	Engine controls		√	√	√	√	
2005	Buick	LaCrosse (Allure in Canada)	Engine cooling		√	√	√	√	
2005	Buick	LaCrosse (Allure in Canada)	Engine electrical	√	√	√	√	√	0515
2005	Buick	LaCrosse (Allure in Canada)	Shift lock control	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Automatic transaxle	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Buick	LaCrosse (Allure in Canada)	Cruise Control		√	√	√	√	
2005	Buick	LaCrosse (Allure in Canada)	Entertainment	√	√	√	√	√	0516

2005	Buick	LaCrosse (Allure in Canada)	Horns	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Instrument panel	√	√	√	√	√	0663
2005	Buick	LaCrosse (Allure in Canada)	Keyless entry	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Lighting systems	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Seats	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Stationary windows	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Theft deterrent	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Wipers/washer systems	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Seat belts	√	√	√	√		0515
2005	Buick	LaCrosse (Allure in Canada)	SIR	√	√	√	√		0515
2005	Buick	LeSabre	Powertrain	√	√	√	√	√	
2005	Buick	LeSabre	Dash integration module	√	√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604
2005	Buick	LeSabre	Head up dilay	√	√	√	√	√	
2005	Buick	LeSabre	Rear integration module	√	√	√	√	√	
2005	Buick	LeSabre	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Buick	LeSabre	Driver door module	√	√	√	√	√	
2005	Buick	LeSabre	CD changer	√	√	√	√		
2005	Buick	LeSabre	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636
2005	Buick	LeSabre	Digital radio receiver	√	√	√	√		0516
2005	Buick	LeSabre	Supplemental inflatable restraint	√	√	√	√		0605
2005	Buick	LeSabre	Remote function actuation	√	√	√	√	√	
2005	Buick	LeSabre	Vehicle theft deterrent	√	√	√	√		
2005	Buick	LeSabre	Instrument panel cluster	√	√	√	√	√	0651 0650
2005	Buick	LeSabre	Climate control panel	√	√	√	√	√	
2005	Buick	LeSabre	Instrument panel module	√	√	√	√	√	0630 0667
2005	Buick	LeSabre	DRP/ABS/TIM		√	√	√	√	0506
2005	Buick	LeSabre	Powertrain	√	√	√	√	√	
2005	Buick	LeSabre	Dash integration module	√	√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604
2005	Buick	LeSabre	Head up dilay	√	√	√	√	√	
2005	Buick	LeSabre	Rear integration module	√	√	√	√	√	
2005	Buick	LeSabre	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Buick	LeSabre	Driver door module	√	√	√	√	√	
2005	Buick	LeSabre	CD changer	√	√	√	√		
2005	Buick	LeSabre	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636
2005	Buick	LeSabre	Memory seat module	√	√	√	√	√	
2005	Buick	LeSabre	Digital radio receiver	√	√	√	√		0516
2005	Buick	LeSabre	Supplemental inflatable restraint	√	√	√	√		0605
2005	Buick	LeSabre	Remote function actuation	√	√	√	√	√	

2005	Buick	LeSabre	Vehicle theft deterrent	√	√	√	√		
2005	Buick	LeSabre	Instrument panel cluster	√	√	√	√	√	0651 0650
2005	Buick	LeSabre	Climate control panel	√	√	√	√	√	
2005	Buick	LeSabre	Instrument panel module	√	√	√	√	√	0630 0667
2005	Buick	LeSabre	DRP/ABS/TIM		√	√	√	√	0506
2005	Buick	Park Avenue	Powertrain	√	√	√	√	√	
2005	Buick	Park Avenue	Body Control Module	√	√	√	√	√	0614 0668 0550
2005	Buick	Park Avenue	Memory seat module	√	√	√	√	√	0669
2005	Buick	Park Avenue	Driver door module	√	√	√	√	√	
2005	Buick	Park Avenue	Supplemental inflatable restraint	√	√	√	√		0515
2005	Buick	Park Avenue	Remote function actuation	√			√	√	
2005	Buick	Park Avenue	Vehicle theft deterrent		√	√	√		
2005	Buick	Park Avenue	Heating and air conditioning	√	√	√	√	√	0630
2005	Buick	Park Avenue	Vehicle comm. interface module	√	√	√	√		0647 0585
2005	Buick	Park Avenue	DRP/ABS/TIM		√	√	√	√	0506
2005	Buick	Rainier	Powertrain	√	√	√	√	√	0493
2005	Buick	Rainier	Digital radio receiver	√	√	√	√		0516
2005	Buick	Rainier	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Buick	Rainier	Radio	√	√	√	√		
2005	Buick	Rainier	Disc player and video delay	√	√	√			
2005	Buick	Rainier	Passenger presence system		√	√			0512
2005	Buick	Rainier	Instrument panel cluster	√	√	√	√	√	
2005	Buick	Rainier	Driver door module	√	√	√	√	√	
2005	Buick	Rainier	Driver seat module	√	√	√	√	√	
2005	Buick	Rainier	Heating and air conditioning	√	√	√	√	√	
2005	Buick	Rainier	Lift gate module	√	√	√	√	√	
2005	Buick	Rainier	Passenger door module	√	√	√	√	√	
2005	Buick	Rainier	Rear seat audio	√	√	√	√		
2005	Buick	Rainier	Body Control Module	√	√	√	√	√	0550
2005	Buick	Rainier	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	Buick	Rainier	Navigation radio	√	√	√	√	√	0525
2005	Buick	Rainier	ABS	√	√	√	√	√	
2005	Buick	Rainier	4WAL 3 sensor	√	√	√	√	√	0493
2005	Buick	Rainier - 2WD	Powertrain	√	√	√	√	√	0493
2005	Buick	Rainier - 2WD	Digital radio receiver	√	√	√	√		0516
2005	Buick	Rainier - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Buick	Rainier - 2WD	Radio	√	√	√	√		
2005	Buick	Rainier - 2WD	Disc player and video delay	√	√	√			
2005	Buick	Rainier - 2WD	Passenger presence system		√	√			0512
2005	Buick	Rainier - 2WD	Instrument panel cluster	√	√	√	√	√	
2005	Buick	Rainier - 2WD	Driver door module	√	√	√	√	√	

2005	Buick	Rainier - 2WD	Driver seat module	√	√	√	√	√	
2005	Buick	Rainier - 2WD	Heating and air conditioning	√	√	√	√	√	
2005	Buick	Rainier - 2WD	Lift gate module	√	√	√	√	√	
2005	Buick	Rainier - 2WD	Passenger door module	√	√	√	√	√	
2005	Buick	Rainier - 2WD	Rear seat audio	√	√	√	√	√	
2005	Buick	Rainier - 2WD	Body Control Module	√	√	√	√	√	0550
2005	Buick	Rainier - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	Buick	Rainier - 2WD	Navigation radio	√	√	√	√	√	0525
2005	Buick	Rainier - 2WD	ABS	√	√	√	√	√	
2005	Buick	Rainier - 2WD	4WAL 3 sensor	√	√	√	√	√	0493
2005	Buick	Rendezvous - AWD	Powertrain	√	√	√	√	√	
2005	Buick	Rendezvous - AWD	Disc player and video dilay	√	√	√			
2005	Buick	Rendezvous - AWD	Digital radio receiver	√	√	√	√		0516
2005	Buick	Rendezvous - AWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Buick	Rendezvous - AWD	Radio						0524
2005	Buick	Rendezvous - AWD	Heating and air conditioning		√	√	√	√	
2005	Buick	Rendezvous - AWD	Vehicle theft deterrent		√	√	√		
2005	Buick	Rendezvous - AWD	Passenger presence system		√	√			0512
2005	Buick	Rendezvous - AWD	Head up dilay		√	√	√		
2005	Buick	Rendezvous - AWD	Memory seat module		√	√	√	√	
2005	Buick	Rendezvous - AWD	Instrument panel cluster		√	√	√	√	
2005	Buick	Rendezvous - AWD	Body Control Module	√	√	√	√	√	0560 0515 0628 0614
2005	Buick	Rendezvous - AWD	Navigation radio	√	√	√	√	√	0525
2005	Buick	Rendezvous - AWD	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	Buick	Rendezvous - AWD	Chassis	√	√	√	√	√	0506
2005	Buick	Rendezvous - FWD	Powertrain	√	√	√	√	√	
2005	Buick	Rendezvous - FWD	Disc player and video dilay	√	√	√			
2005	Buick	Rendezvous - FWD	Digital radio receiver	√	√	√	√		0516
2005	Buick	Rendezvous - FWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Buick	Rendezvous - FWD	Radio						0524
2005	Buick	Rendezvous - FWD	Heating and air conditioning		√	√	√	√	
2005	Buick	Rendezvous - FWD	Vehicle theft deterrent		√	√	√		
2005	Buick	Rendezvous - FWD	Passenger presence system		√	√			0512
2005	Buick	Rendezvous - FWD	Head up dilay		√	√	√		
2005	Buick	Rendezvous - FWD	Memory seat module		√	√	√	√	
2005	Buick	Rendezvous - FWD	Instrument panel cluster		√	√	√	√	
2005	Buick	Rendezvous - FWD	Body Control Module	√	√	√	√	√	0560 0515 0628 0614
2005	Buick	Rendezvous - FWD	Navigation radio	√	√	√	√	√	0525
2005	Buick	Rendezvous - FWD	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	Buick	Rendezvous - FWD	Chassis	√	√	√	√	√	0506
2005	Buick	Terraza	HVAC	√	√	√	√	√	0499

2005	Buick	Terraza	Brakes		√	√	√	√	0506
2005	Buick	Terraza	Engine controls		√	√	√	√	
2005	Buick	Terraza	Engine cooling		√	√	√	√	
2005	Buick	Terraza	Engine electrical	√	√	√	√	√	0499
2005	Buick	Terraza	Shift lock control	√	√	√	√	√	0499
2005	Buick	Terraza	Automatic transaxle		√	√	√	√	
2005	Buick	Terraza	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Buick	Terraza	Cruise Control		√	√	√	√	
2005	Buick	Terraza	Door	√	√	√	√	√	
2005	Buick	Terraza	Entertainment	√	√	√	√	√	0516
2005	Buick	Terraza	Horns	√	√	√	√	√	0499
2005	Buick	Terraza	Instrument panel	√	√	√	√	√	0499
2005	Buick	Terraza	Keyless entry	√	√	√	√	√	0499
2005	Buick	Terraza	Lighting systems	√	√	√	√	√	0499
2005	Buick	Terraza	Navigation System	√	√	√	√	√	0525
2005	Buick	Terraza	Seats	√	√	√	√	√	
2005	Buick	Terraza	Stationary windows	√	√	√	√	√	
2005	Buick	Terraza	Theft deterrent	√	√	√	√	√	0499
2005	Buick	Terraza	Wipers/washer systems	√	√	√	√	√	0499
2005	Buick	Terraza	Seat belts	√	√	√	√	√	0515
2005	Buick	Terraza	SIR	√	√	√	√	√	0512
2005	Buick	Terraza - 4WD	HVAC	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Brakes		√	√	√	√	0506
2005	Buick	Terraza - 4WD	Engine controls		√	√	√	√	
2005	Buick	Terraza - 4WD	Engine cooling		√	√	√	√	
2005	Buick	Terraza - 4WD	Engine electrical	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Shift lock control	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Automatic transaxle		√	√	√	√	
2005	Buick	Terraza - 4WD	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Buick	Terraza - 4WD	Cruise Control		√	√	√	√	
2005	Buick	Terraza - 4WD	Door	√	√	√	√	√	
2005	Buick	Terraza - 4WD	Entertainment	√	√	√	√	√	0516
2005	Buick	Terraza - 4WD	Horns	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Instrument panel	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Keyless entry	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Lighting systems	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Navigation System	√	√	√	√	√	0525
2005	Buick	Terraza - 4WD	Seats	√	√	√	√	√	
2005	Buick	Terraza - 4WD	Stationary windows	√	√	√	√	√	
2005	Buick	Terraza - 4WD	Theft deterrent	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Wipers/washer systems	√	√	√	√	√	0499

2005	Buick	Terraza - 4WD	Seat belts	√	√	√	√	√	0515
2005	Buick	Terraza - 4WD	SIR	√	√	√	√	√	0512
2005	Buick	Terraza Ext.	HVAC	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Brakes		√	√	√	√	0506
2005	Buick	Terraza Ext.	Engine controls		√	√	√	√	
2005	Buick	Terraza Ext.	Engine cooling		√	√	√	√	
2005	Buick	Terraza Ext.	Engine electrical	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Shift lock control	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Automatic transaxle		√	√	√	√	
2005	Buick	Terraza Ext.	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Buick	Terraza Ext.	Cruise Control		√	√	√	√	
2005	Buick	Terraza Ext.	Door	√	√	√	√	√	
2005	Buick	Terraza Ext.	Entertainment	√	√	√	√	√	0516
2005	Buick	Terraza Ext.	Horns	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Instrument panel	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Keyless entry	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Lighting systems	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Navigation System	√	√	√	√	√	0525
2005	Buick	Terraza Ext.	Seats	√	√	√	√	√	
2005	Buick	Terraza Ext.	Stationary windows	√	√	√	√	√	
2005	Buick	Terraza Ext.	Theft deterrent	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Wipers/washer systems	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Seat belts	√	√	√	√	√	0515
2005	Buick	Terraza Ext.	SIR	√	√	√	√	√	0512
2004	Buick	Century	Powertrain	√	√	√	√	√	
2004	Buick	Century	Onstar	√	√	√	√	√	0647 0683
2004	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0628 0573 0636 0572
2004	Buick	Century	Supplemental inflatable restraint		√	√	√		0515
2004	Buick	Century	Chassis	√	√	√	√	√	0506
2004	Buick	LeSabre	Powertrain	√	√	√	√	√	
2004	Buick	LeSabre	Onstar	√	√	√	√	√	0647 0683
2004	Buick	LeSabre	Digital radio receiver	√	√	√	√		0516
2004	Buick	LeSabre	CD changer	√	√	√	√		
2004	Buick	LeSabre	Climate control panel		√	√			
2004	Buick	LeSabre	Dash integration module		√	√			0614 0664 0615 0619 0665 0666 0618 0604
2004	Buick	LeSabre	Driver door module	√	√	√	√	√	
2004	Buick	LeSabre	Head up dilay		√	√		√	
2004	Buick	LeSabre	Instrument panel module		√	√			0630 0667
2004	Buick	LeSabre	Rear integration module		√	√			
2004	Buick	LeSabre	Remote function actuation	√	√	√	√	√	

2004	Buick	LeSabre	Instrument panel cluster		√	√		√	
2004	Buick	LeSabre	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636
2004	Buick	LeSabre	Vehicle theft deterrent	√	√	√	√	√	
2004	Buick	LeSabre	Supplemental inflatable restraint	√	√	√	√	√	0604
2004	Buick	LeSabre	DRP/ABS/TIM		√	√	√	√	0506
2004	Buick	LeSabre	Powertrain	√	√	√	√	√	
2004	Buick	LeSabre	Onstar	√	√	√	√	√	0647 0683
2004	Buick	LeSabre	Digital radio receiver	√	√	√	√		0516
2004	Buick	LeSabre	CD changer	√	√	√	√		
2004	Buick	LeSabre	Climate control panel		√	√			
2004	Buick	LeSabre	Dash integration module		√	√			0614 0664 0615 0619 0665 0666 0618 0604
2004	Buick	LeSabre	Driver door module	√	√	√	√	√	
2004	Buick	LeSabre	Head up dilay		√	√		√	
2004	Buick	LeSabre	Instrument panel module		√	√			0630 0667
2004	Buick	LeSabre	Memory seat module	√	√	√	√	√	
2004	Buick	LeSabre	Rear integration module		√	√			
2004	Buick	LeSabre	Remote function actuation	√	√	√	√	√	
2004	Buick	LeSabre	Instrument panel cluster		√	√		√	
2004	Buick	LeSabre	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636
2004	Buick	LeSabre	Vehicle theft deterrent	√	√	√	√	√	
2004	Buick	LeSabre	Supplemental inflatable restraint	√	√	√	√	√	0604
2004	Buick	LeSabre	DRP/ABS/TIM		√	√	√	√	0506
2004	Buick	Park Avenue	Powertrain	√	√	√	√	√	
2004	Buick	Park Avenue	Onstar	√	√	√	√		0647 0495 0683
2004	Buick	Park Avenue	Driver door module	√	√	√	√	√	
2004	Buick	Park Avenue	Memory seat module	√	√	√	√	√	0669
2004	Buick	Park Avenue	Heating and air conditioning	√	√	√	√	√	0630
2004	Buick	Park Avenue	Remote function actuation	√			√	√	
2004	Buick	Park Avenue	Body Control Module	√	√	√	√	√	0614 0668 0550
2004	Buick	Park Avenue	Cellular telephone	√	√	√	√		0684
2004	Buick	Park Avenue	Instrument panel cluster	√	√	√	√	√	0550 0550
2004	Buick	Park Avenue	Vehicle theft deterrent		√	√	√		
2004	Buick	Park Avenue	DRP/ABS/TIM		√	√	√	√	0506
2004	Buick	Regal	Powertrain	√	√	√	√	√	
2004	Buick	Regal	Onstar	√	√	√	√	√	0647 0683
2004	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0628 0573 0636 0572
2004	Buick	Regal	Supplemental inflatable restraint		√	√	√		0515
2004	Buick	Regal	Chassis	√	√	√	√	√	0506

2004	Buick	Rainier	Powertrain	√	√	√	√	√	
2004	Buick	Rainier	Onstar	√	√	√	√	√	0647 0683
2004	Buick	Rainier	Digital radio receiver	√	√	√	√	√	0516
2004	Buick	Rainier	Body Control Module	√	√	√	√	√	0550
2004	Buick	Rainier	Instrument panel cluster	√	√	√	√	√	
2004	Buick	Rainier	Driver door module	√	√	√	√	√	
2004	Buick	Rainier	Passenger door module	√	√	√	√	√	
2004	Buick	Rainier	Driver seat module	√	√	√	√	√	
2004	Buick	Rainier	Heating and air conditioning	√	√	√	√	√	
2004	Buick	Rainier	Supplemental inflatable restraint	√	√	√	√	√	0531
2004	Buick	Rainier	Amplifier (bose)	√	√	√	√	√	
2004	Buick	Rainier	Radio	√	√	√	√	√	0524
2004	Buick	Rainier	Rear seat audio	√	√	√	√	√	
2004	Buick	Rainier	Lift gate module	√	√	√	√	√	
2004	Buick	Rainier	Rear seat entertainment	√	√	√	√	√	0550
2004	Buick	Rainier	Navigation radio	√	√	√	√	√	0525
2004	Buick	Rainier	ABS	√	√	√	√	√	
2004	Buick	Rainier	4WAL 3 sensor	√	√	√	√	√	0647 0683
2004	Buick	Rainier - 2WD	Powertrain	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Onstar	√	√	√	√	√	0647 0683
2004	Buick	Rainier - 2WD	Digital radio receiver	√	√	√	√	√	0516
2004	Buick	Rainier - 2WD	Body Control Module	√	√	√	√	√	0550
2004	Buick	Rainier - 2WD	Instrument panel cluster	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Driver door module	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Passenger door module	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Driver seat module	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Heating and air conditioning	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0531
2004	Buick	Rainier - 2WD	Amplifier (bose)	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Radio	√	√	√	√	√	0524
2004	Buick	Rainier - 2WD	Rear seat audio	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Lift gate module	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Rear seat entertainment	√	√	√	√	√	0550
2004	Buick	Rainier - 2WD	Navigation radio	√	√	√	√	√	0525
2004	Buick	Rainier - 2WD	ABS	√	√	√	√	√	
2004	Buick	Rainier - 2WD	4WAL 3 sensor	√	√	√	√	√	0647 0683
2004	Buick	Rendezvous - AWD	Powertrain	√	√	√	√	√	
2004	Buick	Rendezvous - AWD	Onstar	√	√	√	√	√	0647 0683
2004	Buick	Rendezvous - AWD	Digital radio receiver	√	√	√	√	√	0516
2004	Buick	Rendezvous - AWD	Body Control Module		√	√	√	√	0560 0515 0628 0614 0573 0574 0636 0572

2004	Buick	Rendezvous - AWD	Navigation radio	√	√	√	√		0525
2004	Buick	Rendezvous - AWD	Supplemental inflatable restraint		√	√	√		
2004	Buick	Rendezvous - AWD	Vehicle theft deterrent		√	√	√		
2004	Buick	Rendezvous - AWD	Rear seat entertainment	√	√	√	√		
2004	Buick	Rendezvous - AWD	Head up dilay		√	√	√		
2004	Buick	Rendezvous - AWD	Radio	√	√	√	√	√	0573 0574 0636 0572
2004	Buick	Rendezvous - AWD	Chassis	√	√	√	√	√	0506
2004	Buick	Rendezvous - FWD	Powertrain	√	√	√	√	√	
2004	Buick	Rendezvous - FWD	Onstar	√	√	√	√	√	0647 0683
2004	Buick	Rendezvous - FWD	Digital radio receiver	√	√	√	√	√	0516
2004	Buick	Rendezvous - FWD	Body Control Module		√	√	√	√	0560 0515 0628 0614 0573 0574 0636 0572
2004	Buick	Rendezvous - FWD	Navigation radio	√	√	√	√	√	0525
2004	Buick	Rendezvous - FWD	Supplemental inflatable restraint		√	√	√	√	
2004	Buick	Rendezvous - FWD	Vehicle theft deterrent		√	√	√	√	
2004	Buick	Rendezvous - FWD	Rear seat entertainment	√	√	√	√	√	
2004	Buick	Rendezvous - FWD	Head up dilay		√	√	√	√	
2004	Buick	Rendezvous - FWD	Radio	√	√	√	√	√	0573 0574 0636 0572
2004	Buick	Rendezvous - FWD	Chassis	√	√	√	√	√	0506
2003	Buick	Century	Powertrain	√	√	√	√	√	0493
2003	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0690 0628
2003	Buick	Century	Onstar	√	√	√	√	√	0647 0683
2003	Buick	Century	Supplemental inflatable restraint		√	√	√	√	0515
2003	Buick	Century	Chassis	√	√	√	√	√	0506
2003	Buick	LeSabre	Powertrain	√	√	√	√	√	0493
2003	Buick	LeSabre	Dash integration module				√	√	0651 0650 0573 0574 0575 0576 0577 0578 0579 0636 0572 0552
2003	Buick	LeSabre	CD changer		√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604
2003	Buick	LeSabre	Climate control panel		√	√	√	√	
2003	Buick	LeSabre	Instrument panel module		√	√	√	√	0630 0667
2003	Buick	LeSabre	Onstar	√	√	√	√	√	0647 0683
2003	Buick	LeSabre	Digital radio receiver	√	√	√	√	√	0516
2003	Buick	LeSabre	Remote function actuation		√	√	√	√	
2003	Buick	LeSabre	Supplemental inflatable restraint		√	√	√	√	
2003	Buick	LeSabre	Vehicle theft deterrent		√	√	√	√	0651 0650 0573 0574 0575 0576 0577 0578 0579 0636 0572 0552
2003	Buick	LeSabre	Memory seat module	√	√	√	√	√	0647 0683
2003	Buick	LeSabre	Rear integration module		√	√	√	√	
2003	Buick	LeSabre	DRP/ABS/TIM		√	√	√	√	0506

2003	Buick	Park Avenue	Powertrain	√	√	√	√	√	0493
2003	Buick	Park Avenue	Body Control Module		√	√	√	√	0614 0668 0684 0630
2003	Buick	Park Avenue	Onstar	√	√	√	√	√	0647 0683
2003	Buick	Park Avenue	Personalization		√	√	√	√	0550 0550
2003	Buick	Park Avenue	Vehicle theft deterrent		√	√			
2003	Buick	Park Avenue	DRP/ABS/TIM		√	√	√	√	0506
2003	Buick	Regal	Powertrain	√	√	√	√	√	0493
2003	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0690 0628
2003	Buick	Regal	Onstar	√	√	√	√	√	0647 0683
2003	Buick	Regal	Supplemental inflatable restraint		√	√	√		0515
2003	Buick	Regal	Chassis	√	√	√	√	√	0506
2003	Buick	Rendezvous - AWD	Powertrain	√	√	√	√	√	0493
2003	Buick	Rendezvous - AWD	Body Control Module		√	√	√	√	0560 0515 0628 0614 0573 0574 0636 0572
2003	Buick	Rendezvous - AWD	Onstar	√	√	√	√	√	0647 0683
2003	Buick	Rendezvous - AWD	Digital radio receiver	√	√	√	√	√	0516
2003	Buick	Rendezvous - AWD	Vehicle theft deterrent		√	√			
2003	Buick	Rendezvous - AWD	Supplemental inflatable restraint		√	√	√		
2003	Buick	Rendezvous - AWD	Rear seat entertainment	√	√	√	√	√	0560 0515 0628 0614 0573 0574 0636 0572
2003	Buick	Rendezvous - AWD	Chassis		√	√	√	√	0506
2003	Buick	Rendezvous - FWD	Powertrain	√	√	√	√	√	0493
2003	Buick	Rendezvous - FWD	Body Control Module		√	√	√	√	0560 0515 0628 0614 0573 0574 0636 0572
2003	Buick	Rendezvous - FWD	Onstar	√	√	√	√	√	0647 0683
2003	Buick	Rendezvous - FWD	Digital radio receiver	√	√	√	√	√	0516
2003	Buick	Rendezvous - FWD	Vehicle theft deterrent		√	√			
2003	Buick	Rendezvous - FWD	Supplemental inflatable restraint		√	√	√		
2003	Buick	Rendezvous - FWD	Rear seat entertainment	√	√	√	√	√	0560 0515 0628 0614 0573 0574 0636 0572
2003	Buick	Rendezvous - FWD	Chassis		√	√	√	√	0506
2002	Buick	Century	Powertrain	√	√	√	√	√	0493
2002	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0690 0628
2002	Buick	Century	Onstar	√	√	√	√	√	0647 0683
2002	Buick	Century	Supplemental inflatable restraint		√	√	√		0515
2002	Buick	Century	Chassis	√	√	√	√	√	0506
2002	Buick	Lesabre	Powertrain	√	√	√	√	√	0493
2002	Buick	Lesabre	Dash integration module				√	√	0651 0650
2002	Buick	Lesabre	CD changer		√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604
2002	Buick	Lesabre	Instrument panel module		√	√	√	√	0630 0667


2002	Buick	Lesabre	Radio				√		0573 0574 0575 0576 0577 0694 0695 0578 0579 0636 0572 0552
2002	Buick	Lesabre	Onstar	√	√	√	√		0647 0683
2002	Buick	Lesabre	Remote function actuation		√	√		√	
2002	Buick	Lesabre	Supplemental inflatable restraint		√	√			
2002	Buick	Lesabre	Vehicle theft deterrent		√	√	√	√	0651 0650
2002	Buick	Lesabre	Memory seat module	√	√	√	√	√	0573 0574 0575 0576 0577 0694 0695 0578 0579 0636 0572 0552
2002	Buick	Lesabre	Rear integration module		√	√	√	√	
2002	Buick	Lesabre	DRP/ABS/TIM		√	√	√	√	0506
2002	Buick	Park Avenue	Powertrain	√	√	√	√	√	0493
2002	Buick	Park Avenue	Body Control Module		√	√	√	√	0614 0668 0684 0630
2002	Buick	Park Avenue	Onstar	√	√	√	√		0647 0683
2002	Buick	Park Avenue	Personalization		√	√	√	√	0550 0550
2002	Buick	Park Avenue	Vehicle theft deterrent		√	√			
2002	Buick	Park Avenue	DRP/ABS/TIM		√	√	√	√	0506
2002	Buick	Regal	Powertrain	√	√	√	√	√	0493
2002	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0690 0628
2002	Buick	Regal	Onstar	√	√	√	√	√	0647 0683
2002	Buick	Regal	Supplemental inflatable restraint		√	√	√		0515
2002	Buick	Regal	Chassis	√	√	√	√	√	0506
2002	Buick	Rendezvous - AWD	Powertrain	√	√	√	√	√	0493
2002	Buick	Rendezvous - AWD	Body Control Module		√	√	√	√	0560 0515 0628 0614 0705 0573 0574 0636
2002	Buick	Rendezvous - AWD	Onstar	√	√	√	√		0647 0683
2002	Buick	Rendezvous - AWD	Supplemental inflatable restraint		√	√			
2002	Buick	Rendezvous - AWD	Vehicle theft deterrent	√	√	√	√	√	0560 0515 0628 0614 0705 0573 0574 0636
2002	Buick	Rendezvous - AWD	Chassis		√	√	√	√	0506
2002	Buick	Rendezvous - FWD	Powertrain	√	√	√	√	√	0493
2002	Buick	Rendezvous - FWD	Body Control Module		√	√	√	√	0560 0515 0628 0614 0705 0573 0574 0636
2002	Buick	Rendezvous - FWD	Onstar	√	√	√	√		0647 0683
2002	Buick	Rendezvous - FWD	Supplemental inflatable restraint		√	√			
2002	Buick	Rendezvous - FWD	Vehicle theft deterrent	√	√	√	√	√	0560 0515 0628 0614 0705 0573 0574 0636
2002	Buick	Rendezvous - FWD	Chassis		√	√	√	√	0506
2001	Buick	Century	Powertrain	√	√	√	√	√	0493
2001	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0690
2001	Buick	Century	Onstar	√	√	√	√		0683

2001	Buick	Century	Supplemental inflatable restraint		√	√	√		0515
2001	Buick	Century	Chassis	√	√	√	√	√	0506
2001	Buick	Lesabre	Powertrain	√	√	√	√	√	0493
2001	Buick	Lesabre	Dash integration module			√	√	√	0650 0574 0576
2001	Buick	Lesabre	CD changer		√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604
2001	Buick	Lesabre	Instrument panel module		√	√	√	√	0630 0667
2001	Buick	Lesabre	Radio						0525
2001	Buick	Lesabre	Onstar	√	√	√	√		0683
2001	Buick	Lesabre	Vehicle theft deterrent		√	√			
2001	Buick	Lesabre	Supplemental inflatable restraint		√	√			
2001	Buick	Lesabre	Remote function actuation		√	√	√	√	0650 0574 0576
2001	Buick	Lesabre	Climate control panel	√	√	√	√	√	0525
2001	Buick	Lesabre	Rear integration module		√	√	√	√	
2001	Buick	Lesabre	DRP/ABS/TIM		√	√	√	√	0506
2001	Buick	Park Avenue	Powertrain	√	√	√	√	√	0493
2001	Buick	Park Avenue	Body Control Module		√	√	√	√	0614 0668 0684 0630
2001	Buick	Park Avenue	Onstar	√	√	√	√		0683
2001	Buick	Park Avenue	Vehicle theft deterrent		√	√			
2001	Buick	Park Avenue	Personalization		√	√	√	√	0550 0550
2001	Buick	Park Avenue	DRP/ABS/TIM		√	√	√	√	0506
2001	Buick	Regal	Powertrain	√	√	√	√	√	0493
2001	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0690
2001	Buick	Regal	Onstar	√	√	√	√		0683
2001	Buick	Regal	Supplemental inflatable restraint		√	√	√		0515
2001	Buick	Regal	Chassis	√	√	√	√	√	0506
2000	Buick	Century	Powertrain	√	√	√	√	√	0493
2000	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0690
2000	Buick	Century	Onstar	√	√	√	√		0683
2000	Buick	Century	Supplemental inflatable restraint		√	√	√		0515
2000	Buick	Century	Chassis	√	√	√		√	0506
2000	Buick	Lesabre	Powertrain	√	√	√	√	√	0493
2000	Buick	Lesabre	Dash integration module		√	√	√	√	0650 0574 0576
2000	Buick	Lesabre	CD changer		√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604 0628 0604 0691
2000	Buick	Lesabre	Instrument panel module		√	√	√	√	0630 0667
2000	Buick	Lesabre	Radio						0525
2000	Buick	Lesabre	Onstar	√	√	√	√	√	0683
2000	Buick	Lesabre	Climate control panel	√	√	√	√	√	0525
2000	Buick	Lesabre	Rear integration module		√	√	√	√	
2000	Buick	Lesabre	DRP/ABS/TIM		√	√	√	√	0506

2000	Buick	Park Avenue	Powertrain	√	√	√	√	√	0493
2000	Buick	Park Avenue	Body Control Module		√	√	√	√	0614 0668 0684 0630 0531 0692
2000	Buick	Park Avenue	Onstar	√	√	√	√		0683
2000	Buick	Park Avenue	DRP/ABS/TIM		√	√	√	√	0506
2000	Buick	Regal	Powertrain	√	√	√	√	√	0493
2000	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0690
2000	Buick	Regal	Onstar	√	√	√	√		0683
2000	Buick	Regal	Supplemental inflatable restraint		√	√	√		0515
2000	Buick	Regal	Chassis	√	√	√		√	0506
1999	Buick	Century	Powertrain	√	√	√	√	√	0493
1999	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0690 0628
1999	Buick	Century	Onstar		√	√	√		0683
1999	Buick	Century	Onstar (VS-3B)		√	√	√		
1999	Buick	Century	Supplemental inflatable restraint		√	√	√		0515
1999	Buick	Century	Chassis	√	√	√		√	0506
1999	Buick	Lesabre	Powertrain	√	√	√	√	√	0493
1999	Buick	Lesabre	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1999	Buick	Lesabre	Onstar		√	√	√		0683
1999	Buick	Lesabre	Onstar (VS-3B)		√	√	√		
1999	Buick	Lesabre	Remote function actuation		√	√	√	√	0711 0716 0717 0718 0719 0720 0721 0722
1999	Buick	Lesabre	ABS		√	√		√	0641 0506
1999	Buick	Park Avenue	Powertrain	√	√	√	√	√	0493
1999	Buick	Park Avenue	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1999	Buick	Park Avenue	Onstar		√	√	√		0683
1999	Buick	Park Avenue	Onstar (VS-3B)		√	√	√		
1999	Buick	Park Avenue	ABS		√	√		√	0641 0506
1999	Buick	Regal	Powertrain	√	√	√	√	√	0493
1999	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0690 0628
1999	Buick	Regal	Onstar		√	√	√		0683
1999	Buick	Regal	Onstar (VS-3B)		√	√	√		
1999	Buick	Regal	Supplemental inflatable restraint		√	√	√	√	0515
1999	Buick	Regal	Chassis	√	√	√		√	0506
1999	Buick	Riviera	Powertrain	√	√	√	√	√	0493
1999	Buick	Riviera	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1999	Buick	Riviera	Onstar		√	√	√		0683
1999	Buick	Riviera	Onstar (VS-3B)		√	√	√		
1998	Buick	Century	Powertrain	√	√	√	√	√	0493

1998	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0690
1998	Buick	Century	Onstar		√	√	√		0683
1998	Buick	Century	Chassis		√	√		√	
1998	Buick	Lesabre	Powertrain	√	√	√	√	√	0493
1998	Buick	Lesabre	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1998	Buick	Lesabre	Onstar		√	√	√		0683
1998	Buick	Lesabre	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1998	Buick	Lesabre	Entertainment & comfort bus		√	√	√	√	0683
1998	Buick	Lesabre	ABS		√	√		√	0641 0506
1998	Buick	Park Avenue	Powertrain	√	√	√	√	√	0493
1998	Buick	Park Avenue	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1998	Buick	Park Avenue	Onstar		√	√	√		0683
1998	Buick	Park Avenue	ABS		√	√		√	0641 0506
1998	Buick	Regal	Powertrain	√	√	√	√	√	0493
1998	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0690
1998	Buick	Regal	Onstar		√	√	√		0683
1998	Buick	Regal	Chassis		√	√		√	
1998	Buick	Riviera	Powertrain	√	√	√	√	√	0493
1998	Buick	Riviera	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1998	Buick	Riviera	Onstar		√	√	√		0683
1998	Buick	Skylark	Powertrain	√	√	√	√	√	0493
1998	Buick	Skylark	Chassis		√	√	√	√	
1997	Buick	Century	Powertrain	√	√	√	√	√	0493
1997	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0690
1997	Buick	Lesabre	Powertrain	√	√	√	√	√	0493
1997	Buick	Lesabre	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1997	Buick	Lesabre	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1997	Buick	Lesabre	ABS		√	√		√	0641 0506
1997	Buick	Park Avenue	Powertrain	√	√	√	√	√	0493
1997	Buick	Park Avenue	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1997	Buick	Park Avenue	ABS		√	√		√	0641 0506
1997	Buick	Regal	Powertrain	√	√	√	√	√	0493
1997	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0690
1997	Buick	Riviera	Powertrain	√	√	√	√	√	0493

1997	Buick	Riviera	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1997	Buick	Skylark	Powertrain	√	√	√	√	√	0493
1996	Buick	Century	Powertrain	√	√	√	√	√	
1996	Buick	Lesabre	Powertrain	√	√	√	√	√	
1996	Buick	Lesabre	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1996	Buick	Park Avenue	Powertrain	√	√	√	√	√	
1996	Buick	Park Avenue	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1996	Buick	Regal	Powertrain	√	√	√	√	√	
1996	Buick	Riviera	Powertrain	√	√	√	√	√	
1996	Buick	Riviera	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1996	Buick	Roadmaster	Powertrain	√	√	√	√	√	
1996	Buick	Skylark	Powertrain	√	√	√	√	√	

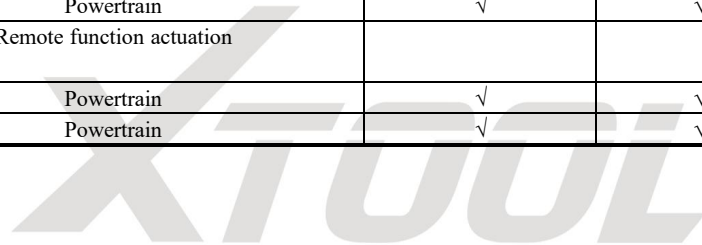

Special Functions List

No.	Functions Name
SP0000	1-2 Shift Adapt Data
SP0001	14V Power Module
SP0002	ABS Motor
SP0003	AWD Disabled-by-Malfunction Counter Reset
SP0004	B237D Easy Entry Seat Position Sensor - Driver Learn
SP0005	B237P Easy Entry Seat Position Sensor - Passenger Learn
SP0006	HO2S Heater Resistance Learned Values Reset
SP0007	HVAC Actuators Learn
SP0008	MOST Bus Diagnostic Starting Point
SP0009	PTO Operation Mode
SP0010	WLAN Service Set Identifier (SSID) Reset
SP0011	WLAN Password Reset
SP0012	Backup Battery Test
SP0013	Backup Park Lock Actuator Disarming
SP0014	Transmission Range Control Module Range Motor Position Learn
SP0015	Transmission Learn Data
SP0016	Transmission Adaptive Pressure Reset
SP0017	Transmission Service Fast Learn
SP0018	Transmission Adaptive Torque Reset
SP0019	Transmission Adaptive Values Learn
SP0020	Gear Selector -N- Position Learn
SP0021	Transmission Solenoid Valves Calibration Preset
SP0022	Shift Transmission Gear
SP0023	Transmission Clutch 1 Return Spring Learn
SP0024	Transmission Clutch 1 Volume Learn
SP0025	Transmission Clutch 2 Return Spring Learn
SP0026	Transmission Clutch 2 Volume Learn
SP0027	Transmission Clutch 3 Return Spring Learn

SP0028	Transmission Clutch 3 Volume Learn
SP0029	Transmission Clutch 4 Return Spring Learn
SP0030	Transmission Clutch 4 Volume Learn
SP0031	Transmission Clutch 5 Return Spring Learn
SP0032	Transmission Clutch 5 Volume Learn
SP0033	Transmission Clutch Learn Status
SP0034	Transmission Adaptive Pressure Reset
SP0035	Transmission Learn
SP0036	Transmission Oil Life Reset
SP0037	Range Actuator Learn
SP0038	Manual Door Locks (-AU3)(-AU4) Without Seat Belt Pretensioner (-A70)
SP0039	Electric Door Locks (AU3) Without Seat Belt Pretensioner (-A70)
SP0040	Automatic Electric Door Locks (AU4) Without Seat Belt Pretensioner (-A70)
SP0041	Retained Accessory Power
SP0042	DPF/Catalyst 2 Reset
SP0043	DPF Service Regeneration
SP0044	DPF Pressure Sensor Reset
SP0045	DPF Reset
SP0046	Lane Departure Warning Indicator
SP0047	Distance Sensing Cruise Control Module
SP0048	Vehicle Health Data Upload
SP0049	Vehicle Direction Camera Learn
SP0050	Vehicle Inclination Sensor
SP0051	VIN Digits 10-17 Right Headlamp High Beam Control Module
SP0052	VIN Digits 10-17 Left Headlamp High Beam Control Module
SP0053	Vehicle Model
SP0054	Content Theft - Exterior Lamp Flash
SP0055	Content Theft - Horn Chirp / Door Key Cylinder Disarming
SP0056	Passenger Compartment Heater Coolant Control Solenoid Valve Learn
SP0057	Passenger Presence Sensor Learn
SP0058	Catalyst 1 Reset
SP0059	Catalyst Test

SP0060	Catalyst Reset
SP0061	BARO Sensor Reset
SP0062	Manual Door Locks (-AU3)(-AU4) With Seat Belt Pretensioner (A70)
SP0063	Electric Door Locks (AU3) With Seat Belt Pretensioner (A70)
SP0064	Automatic Electric Door Locks (AU4) With Seat Belt Pretensioner (A70)
SP0065	Code Index
SP0066	Idle Speed Adjustment
SP0067	Idle Learn
SP0068	Idle Air Control Reset
SP0069	Idle Speed Control Reset
SP0070	NOx Sensor 1 Reset
SP0071	NOx Sensor 2 Reset
SP0072	NOx Catalyst Reductant Loading Reset
SP0073	NOx Catalyst Reset
SP0074	NOx Adsorber Catalyst Data Reset
SP0075	NOx Adsorber Catalyst Reset
SP0076	Gear Position Sensor Learn
SP0077	Gear Selector -N- Position Learn
SP0078	Backup Park Lock Actuator Arming
SP0079	EV Range Reset
SP0080	Power Steering Softstops Learn
SP0081	Power Steering Softstops Reset
SP0082	Power Steering Pressure Sensor Learn
SP0083	Read LIN Bus Device ID Information
SP0084	Learned Values Reset
SP0085	Engine Oil Type Setup
SP0086	Engine Oil Life Reset
SP0087	ECM Reset
SP0088	Engine Serial Number
SP0089	Steering Wheel Angle Sensor Centering
SP0090	Steering Wheel Angle Sensor Learn
SP0091	Steering Wheel Angle Sensor Learn

SP0092	Steering Wheel Angle Sensor Centering
SP0093	Steering Wheel Angle Sensor Reset
SP0094	Flywheel Learn
SP0095	Exhaust Flow Control Valve Learn
SP0096	Exhaust Gas Temperature Sensor Learn
SP0097	Exhaust Gas Temperature Sensor Reset
SP0098	EGR Valve Learn
SP0099	Transfer Case Clutch Identifier
SP0100	Transfer Case Clutch Overtemperature Counter Reset
SP0101	Assist Step Motor Learn
SP0102	Reset PTO Inhibit and Disengage History
SP0103	Power Steering Softstops Reset
SP0104	Steering Wheel Angle Sensor Reset
SP0105	Reset Functions
SP0106	Learned Values Reset
SP0107	Copy and Restore Tire Pressure Monitoring Information
SP0108	High Pressure Fuel Pump Learn
SP0109	High Pressure Fuel Correction Reset
SP0110	Personalization
SP0111	Yaw Rate Sensor Learn
SP0112	Yaw Rate Sensor Reset
SP0113	Rear Differential Clutch Service Calibration Setup
SP0114	Rear Suspension Position Sensor Trim Height
SP0115	Ambient Air Temperature Calculation Reset
SP0116	Ambient Air Temperature Instant Update
SP0117	Reductant Fluid Tank Level Reset
SP0118	Reductant Injector Reset
SP0119	Reductant System Data Reset
SP0120	Reductant System Reset
SP0121	Restore Factory Settings
SP0122	Hybrid/EV Battery Contactor Open Reasons Reset
SP0123	Hybrid/EV Battery Pack Charging Adaptive Learn Reset

SP0124	Hybrid/EV Battery Pack Coolant Control Solenoid Valve Learn
SP0125	Hybrid/EV Battery Pack Capacity Learn
SP0126	Hybrid/EV Battery Pack Capacity Reset
SP0127	Hybrid/EV Battery Pack Data Reset
SP0128	Calculated Fuel Economy Setup
SP0129	HVAC Afterblow Configuration
SP0130	HO2S Learn
SP0131	HO2S Learned Values Reset
SP0132	HO2S Heater Learn
SP0133	APP Learn
SP0134	Reset High Voltage Disable Request After Crash Event Detected
SP0135	Inspection/Maintenance Data
SP0136	Depressurize System
SP0137	Copy Injector Flow Identifiers from ECM to Glow Plug Control Module
SP0138	Copy Injector Flow Identifiers from Glow Plug Control Module to ECM
SP0139	Throttle Body Idle Air Flow Compensation Reset
SP0140	Throttle Position Learn
SP0141	Throttle Actuator Reset
SP0142	Panic Alarm
SP0143	Intake Air Flow Valve Learn
SP0144	Intake System Learned Values Reset
SP0145	Speedometer Calibration
SP0146	Liftgate Maximum Open Position Learn
SP0147	Neutral Position Sensor Learn
SP0148	A/C Compressor Speed
SP0149	A/C Indicator
SP0150	Control Module Reset
SP0151	Control Module Self-Test
SP0152	Control Module Self-Test
SP0153	Clutch Purge
SP0154	Excessive Clutch Slip Data Reset
SP0155	Clutch Control Module/Rear Drive System Matching Identification Setup

SP0156	Clutch Pedal Position Learn
SP0157	Clutch Position Learn
SP0158	Odometer Setup
SP0159	Tire Type/Pressure Selection
SP0160	Tire Pressure Sensors Learn
SP0161	Key Fob 1
SP0162	Key Fob 2
SP0163	Key Fob 3
SP0164	Key Fob 4
SP0165	Key Fob 5
SP0166	Key Fob 6
SP0167	Key Fob 7
SP0168	Key Fob 8
SP0169	Hands-Free Liftgate Sensor Control Module Calibration
SP0170	Module Setup
SP0171	Exhaust Aftertreatment Fuel Injector Reset
SP0172	Configure New Module
SP0173	Injector Flow Rate Programming
SP0174	Yaw Rate Sensor Reset
SP0175	Yaw Rate Sensor Learn
SP0176	Average Fuel Age Reset
SP0177	Enable Deployment Loops
SP0178	Cylinder 1 Injector Flow Identifier
SP0179	Cylinder 1 Fuel Injector Correction Value Reset
SP0180	Cylinder 2 Injector Flow Identifier
SP0181	Cylinder 2 Fuel Injector Correction Value Reset
SP0182	Cylinder 3 Injector Flow Identifier
SP0183	Cylinder 3 Fuel Injector Correction Value Reset
SP0184	Cylinder 4 Injector Flow Identifier
SP0185	Cylinder 4 Fuel Injector Correction Value Reset
SP0186	Cylinder 5 Injector Flow Identifier
SP0187	Cylinder 5 Fuel Injector Correction Value Reset

SP0188	Cylinder 6 Injector Flow Identifier
SP0189	Cylinder 6 Fuel Injector Correction Value Reset
SP0190	Cylinder 7 Injector Flow Identifier
SP0191	Cylinder 7 Fuel Injector Correction Value Reset
SP0192	Cylinder 8 Injector Flow Identifier
SP0193	Cylinder 8 Fuel Injector Correction Value Reset
SP0194	Cylinder Deactivation Exhaust Flow Control Valve Learn
SP0195	Headlamp Leveling Sensor Learn
SP0196	Frontview Camera Learn
SP0197	Frontview Camera Learn
SP0198	Front Suspension Position Sensor Trim Height
SP0199	Erase/Program All Key Fobs
SP0200	Clear Transmission Counters
SP0201	Clear Passenger Window Learned Values
SP0202	Clear Secured High Voltage DTCs
SP0203	Clear Driver Window Learned Values
SP0204	Erase All Key Fobs
SP0205	Clear Disable History Data
SP0206	Clear Right Rear Window Learned Values
SP0207	Clear Active Pull Compensation Learned Limits
SP0208	Clear Left Rear Window Learned Values
SP0209	Crankshaft Position Variation Learn
SP0210	Crankshaft Position Reluctor Ring Learn
SP0211	Cancel Camera Learn
SP0212	Fuel Pump Trim Reset
SP0213	Fuel Composition Reset
SP0214	Fuel Rail Pressure Relief Valve Learned Values Reset
SP0215	Fuel Rail Pressure Sensor Reset
SP0216	Fuel Rail Pressure Sensor or Fuel Rail Learn
SP0217	Fuel Trim Reset
SP0218	Fuel Economy Reset
SP0219	Fuel Filter Life Reset

SP0220	Fuel Injector Correction Value Preset
SP0221	Fuel Injection Small Quantity Data Reset
SP0222	Fuel Injection Small Quantity Learn
SP0223	Fuel Trim Reset
SP0224	Fuel Pressure Regulator Learn
SP0225	Brake Pressure Sensor Calibration
SP0226	Erase Valet Mode Code
SP0227	Manual Door Locks (-AU3) (-AU4)
SP0228	Manual Service Disconnect Fuse Life Reset
SP0229	Park Brake Calibration
SP0230	Data Display
SP0231	Digital Radio Receiver Control Module
SP0232	All Cylinders Fuel Injector Correction Value Reset
SP0233	Tire Pressure Sensor Signal Reset
SP0234	Tire Pressure Selection
SP0235	Add/Replace Key Fobs
SP0236	Stop/Start Capacitor State of Health Reset
SP0237	Turbocharger Learn
SP0238	Turbocharger Learned Values Reset
SP0239	Next Available Slot
SP0240	Display ECM and Glow Plug Control Module Injector Flow Identifiers
SP0241	Info Display/Infotainment Faceplate Reset
SP0242	Battery Sensor Module Learn
SP0243	Battery Sensor Module Learn
SP0244	Energy Storage Capacitor Learn
SP0245	Suspension Position Sensor Trim Height
SP0246	Option Configuration
SP0247	CAN Bus Configuration Learn
SP0248	Transmission Adaptive Values Learn
SP0249	VIN Learn
SP0250	Power Steering Softstops Learn
SP0251	Learn Functions

SP0252	Throttle Position Learn
SP0253	Inlet Solenoid Valves Learn
SP0254	Liftgate Maximum Open Position Learn
SP0255	CO Adjust
SP0256	Calculated Fuel Economy Setup
SP0257	Glow Plug Learn
SP0258	Remote Vehicle Start Disable History Reset
SP0259	Remote Vehicle Speed Limiting Reset
SP0260	Long Range Radar Sensor Module Learn
SP0261	Setup SDM Part Number in BCM
SP0262	DC Charging Disabled Reset
SP0263	Brake Pedal Position Sensor Learn
SP0264	Brake Hydraulics Sensors Learn
SP0265	MAF Sensor Learn
SP0266	Reset History Buffer
SP0267	Reset Teen Driver Key PIN
SP0268	Reset Event Records
SP0269	Reset Manufacturer Enable Counter
SP0270	Proactive Alerts
SP0271	Parking Assist Sensor Learn
SP0272	Park Brake Reset
SP0273	Steering Gear Learned Values Reset
SP0274	Steering Gear Replacement Procedure
SP0275	Assembly Plant Mode
SP0276	Automatic Braking Active Signal
SP0277	Adaptive Pressure Control Learn
SP0278	Longitudinal Acceleration Sensor Reset
SP0279	Assembly Plant Emission and Fuel Economy Test
SP0280	Brake Pedal Position Sensor Learn
SP0281	Headlamp Leveling Sensor Learn
SP0282	Erase/Program All Key Fobs
SP0283	Next Available Slot

SP0284	Key Fob 1
SP0285	Key Fob 2
SP0286	Key Fob 3
SP0287	Key Fob 4
SP0288	Key Fob 5
SP0289	Key Fob 6
SP0290	Key Fob 7
SP0291	Key Fob 8
SP0292	Battery Sensor Module Learn
SP0293	Clear Driver Window Learned Values
SP0294	Clear Passenger Window Learned Values
SP0295	Clear Left Rear Window Learned Values
SP0296	Clear Right Rear Window Learned Values
SP0297	Read LIN Bus Device ID Information
SP0298	Tire Pressure Sensors Learn
SP0299	Tire Pressure Sensor Signal Reset
SP0300	Tire Type/Pressure Selection
SP0301	CAN Bus Configuration Learn
SP0302	Transmission Service Fast Learn
SP0303	Configure New Module
SP0304	Fuel Trim Reset
SP0305	Crankshaft Position Variation Learn
SP0306	HO2S Heater Learn
SP0307	Idle Learn
SP0308	Engine Oil Life Reset
SP0309	Remote Vehicle Start Disable History Reset
SP0310	Adjustable Pedals Softstops Learn
SP0311	HVAC Actuators Learn
SP0312	HVAC Afterblow Configuration
SP0313	Brake Pressure Sensor Calibration
SP0314	Steering Wheel Angle Sensor Learn
SP0315	Yaw Rate Sensor Learn

SP0316	Park Brake Calibration
SP0317	Suspension Position Sensor Trim Height
SP0318	Remote Vehicle Speed Limiting Reset
SP0319	Vehicle Health Data Upload
SP0320	WLAN Password Reset
SP0321	WLAN Service Set Identifier (SSID) Reset
SP0322	Passenger Presence Sensor Learn
SP0323	Clutch Pedal Position Learn
SP0324	Neutral Position Sensor Learn
SP0325	Fuel Pump Trim Reset
SP0326	Steering Wheel Angle Sensor Centering
SP0327	Transmission Adaptive Pressure Reset
SP0328	Liftgate Maximum Open Position Learn
SP0329	Clear Disable History Data
SP0330	Frontview Camera Learn
SP0331	Ambient Air Temperature Instant Update
SP0332	Setup SDM Part Number in BCM
SP0333	Erase All Key Fobs
SP0334	Clutch Control Module/Rear Drive System Matching Identification Setup
SP0335	Digital Radio Receiver Control Module
SP0336	Gear Selector -N- Position Learn
SP0337	Fuel Composition Reset
SP0338	Stop/Start Capacitor State of Health Reset
SP0339	AWD Disabled-by-Malfunction Counter Reset
SP0340	Long Range Radar Sensor Module Learn
SP0341	Hands-Free Liftgate Sensor Control Module Calibration
SP0342	Erase Valet Mode Code
SP0343	Control Module Reset
SP0344	Info Display/Infotainment Faceplate Reset
SP0345	Exhaust Flow Control Valve Learn
SP0346	Cylinder Deactivation Exhaust Flow Control Valve Learn
SP0347	Distance Sensing Cruise Control Module

SP0348	Adaptive Pressure Control Learn
SP0349	Yaw Rate Sensor Reset
SP0350	Gear Position Sensor Learn
SP0351	Transfer Case Clutch Identifier
SP0352	Transfer Case Clutch Overtemperature Counter Reset
SP0353	Vehicle Model
SP0354	Power Steering Softstops Learn
SP0355	Rear Suspension Position Sensor Trim Height
SP0356	Front Suspension Position Sensor Trim Height
SP0357	Reset History Buffer
SP0358	Rear Differential Clutch Service Calibration Setup
SP0359	Range Actuator Learn
SP0360	Parking Assist Sensor Learn
SP0361	Learned Values Reset
SP0362	Hybrid/EV Battery Pack Coolant Control Solenoid Valve Learn
SP0363	Hybrid/EV Battery Pack Capacity Learn
SP0364	Passenger Compartment Heater Coolant Control Solenoid Valve Learn
SP0365	Fuel Economy Reset
SP0366	Hybrid/EV Battery Contactor Open Reasons Reset
SP0367	Hybrid/EV Battery Pack Charging Adaptive Learn Reset
SP0368	Hybrid/EV Battery Pack Data Reset
SP0369	Manual Service Disconnect Fuse Life Reset
SP0370	Average Fuel Age Reset
SP0371	Electronic Brake Control Module Learn
SP0372	Steering Wheel Angle Sensor Reset
SP0373	Fuel Rail Pressure Relief Valve Learned Values Reset
SP0374	Idle Speed Control Reset
SP0375	ECM Reset
SP0376	Speedometer Calibration
SP0377	Retained Accessory Power
SP0378	Throttle Position Learn
SP0379	Automatic Braking Active Signal

SP0380	Transmission Oil Life Reset
SP0381	APP Learn
SP0382	Crankshaft Position Reluctor Ring Learn
SP0383	DPF Pressure Sensor Learn
SP0384	EGR Valve Learn
SP0385	Exhaust Gas Temperature Sensor Learn
SP0386	Flywheel Learn
SP0387	Fuel Rail Pressure Sensor or Fuel Rail Learn
SP0388	HO2S Learn
SP0389	Intake Air Flow Valve Learn
SP0390	MAF Sensor Learn
SP0391	Turbocharger Learn
SP0392	DPF Reset
SP0393	Glow Plug Control Module Reset
SP0394	DPF Service Regeneration
SP0395	Inspection/Maintenance Data
SP0396	Calculated Fuel Economy Setup
SP0397	Injector Flow Rate Programming
SP0398	Ambient Air Temperature Calculation Reset
SP0399	Catalyst 1 Reset
SP0400	DPF/Catalyst 2 Reset
SP0401	DPF Pressure Sensor Reset
SP0402	Engine Serial Number
SP0403	Fuel Filter Life Reset
SP0404	NOx Catalyst Reset
SP0405	NOx Catalyst Reductant Loading Reset
SP0406	NOx Sensor 1 Reset
SP0407	NOx Sensor 2 Reset
SP0408	Reductant Fluid Tank Level Reset
SP0409	Reductant Injector Reset
SP0410	Reductant System Data Reset
SP0411	Reductant System Reset

SP0412	Display ECM and Glow Plug Control Module Injector Flow Identifiers
SP0413	Cylinder 1 Injector Flow Identifier
SP0414	Cylinder 2 Injector Flow Identifier
SP0415	Cylinder 3 Injector Flow Identifier
SP0416	Cylinder 4 Injector Flow Identifier
SP0417	Cylinder 5 Injector Flow Identifier
SP0418	Cylinder 6 Injector Flow Identifier
SP0419	Cylinder 7 Injector Flow Identifier
SP0420	Cylinder 8 Injector Flow Identifier
SP0421	Copy Injector Flow Identifiers from Glow Plug Control Module to ECM
SP0422	Copy Injector Flow Identifiers from ECM to Glow Plug Control Module
SP0423	Cylinder 1 Fuel Injector Correction Value Reset
SP0424	Cylinder 2 Fuel Injector Correction Value Reset
SP0425	Cylinder 3 Fuel Injector Correction Value Reset
SP0426	Cylinder 4 Fuel Injector Correction Value Reset
SP0427	Cylinder 5 Fuel Injector Correction Value Reset
SP0428	Cylinder 6 Fuel Injector Correction Value Reset
SP0429	Cylinder 7 Fuel Injector Correction Value Reset
SP0430	Cylinder 8 Fuel Injector Correction Value Reset
SP0431	All Cylinders Fuel Injector Correction Value Reset
SP0432	Fuel Injector Correction Value Preset
SP0433	Glow Plug Learn
SP0434	CO Adjust
SP0435	Clear Secured High Voltage DTCs
SP0436	On-Board Jump Assist Counter Reset
SP0437	Reset PTO Inhibit and Disengage History
SP0438	Restore Factory Settings
SP0439	DC Charging Disabled Reset
SP0440	EV Range Reset
SP0441	Idle Speed Adjustment
SP0442	Transmission Adaptive Torque Reset
SP0443	Fuel Rail Pressure Sensor Reset

SP0444	Power Steering Softstops Reset
SP0445	Transmission Adaptive Values Learn
SP0446	Turbocharger Learned Values Reset
SP0447	Vehicle Direction Camera Learn
SP0448	Fuel Pressure Regulator Learn
SP0449	Fuel Pressure Regulator Fast Learn
SP0450	Intake Manifold Runner Control Valve Learn
SP0451	High Pressure Fuel Pump Learn
SP0452	Boost Pressure Sensor Learn
SP0453	Cylinder 1 Injector
SP0454	Cylinder 2 Injector
SP0455	Cylinder 3 Injector
SP0456	Cylinder 4 Injector
SP0457	Vehicle Inclination Sensor
SP0458	Code Index
SP0459	Fuel Injection Small Quantity Data Reset
SP0460	Fuel Injection Small Quantity Learn
SP0461	Catalyst Reset
SP0462	Exhaust Gas Temperature Sensor Reset
SP0463	Idle Air Control Reset
SP0464	Throttle Actuator Reset
SP0465	Preferred Roaming List Update
SP0466	Module Setup
SP0467	Not Linked
SP0468	Linked
SP0469	Option Configuration
SP0470	Audio Code Index
SP0471	Personalization
SP0472	Total Fuel Consumed Reset
SP0473	Automatic Electric Door Locks (AU4) With Seat Belt Pretensioner (A70)
SP0474	Automatic Electric Door Locks (AU4) Without Seat Belt Pretensioner (-A70)
SP0475	Electric Door Locks (AU3) With Seat Belt Pretensioner (A70)

SP0476	Electric Door Locks (AU3) Without Seat Belt Pretensioner (-A70)
SP0477	Manual Door Locks (-AU3) (-AU4)
SP0478	Enable Deployment Loops
SP0479	Clear Transmission Counters
SP0480	Clutch Position Learn
SP0481	Clutch Purge
SP0482	Depressurize System
SP0483	Transmission Learn
SP0484	Fuel Injector Learn
SP0485	Low Speed Target Pressure
SP0486	High Speed Target Pressure
SP0487	Minimum Telltale Pressure
SP0488	Safe Telltale Pressure
SP0489	Low Speed Threshold
SP0490	High Speed Threshold
SP0491	Setup Module DTCs
SP0492	Reset
SP0493	Crankshaft pos. variation learn
SP0494	PRL update
SP0495	Set language
SP0496	Stolen vehicle slowdown clear
SP0497	Setup SDM primary key in BCM
SP0498	Inclination sensor enable
SP0499	BPP sensor calibration
SP0500	Afterblow option
SP0501	Data recorder
SP0502	Audiopilot test
SP0503	Eject
SP0504	TV region lockout
SP0505	TV region select
SP0506	Automated bleed
SP0507	CO adjust (leaded fuel only)

SP0508	Change to neutral mode
SP0509	DPF reset replace ECM
SP0510	Learn sensor location
SP0511	Learn sen loc with tire press tool
SP0512	Re-zero passenger presence system
SP0513	Copy and paste TPM information
SP0514	Tire type/pressure selection
SP0515	Setup SDM part number in BCM
SP0516	DRR setup
SP0517	Passenger presence sensor learn
SP0518	Auto. door unlock
SP0519	Key fob in veh. warning
SP0520	Passive door lock
SP0521	Setup new RCCLR
SP0522	Column calibration
SP0523	Setup new HVAC
SP0524	Radio setup
SP0525	VIN relearn
SP0526	HVAC ambient temp. disp.
SP0527	Power window motor programming
SP0528	Digital radio receiver
SP0529	Radio RPO selection
SP0530	CCM RDS matching ID
SP0531	Clear manufacturer enable counter
SP0532	Bump stop
SP0533	Acceleration sensor reset
SP0534	BMC prim. piston pos. relearn
SP0535	EBCM relearn
SP0536	Steering pos./torque sensor cal.
SP0537	Preload passenger presence system
SP0538	Engine serial number
SP0539	Capture & restore data

SP0540	Injector flow rate programming
SP0541	Setup new ROS
SP0542	PTO options
SP0543	ECM PTO options
SP0544	Reset ECM
SP0545	Reset immobilizer
SP0546	Reset vehicle build settings
SP0547	Middle east speed bias (UC2)
SP0548	Brazil units (CV2)
SP0549	Module setup
SP0550	Setup SDM serial number in BCM
SP0551	Program VIN
SP0552	Tuner calibration
SP0553	Navigation option
SP0554	Transmission type
SP0555	Disable/enable secure car
SP0556	Auto. door unlock trigger
SP0557	Delayed locking
SP0558	Passive door unlock
SP0559	Setup SDM part number in IPM
SP0560	Disable dtc(s)
SP0561	Bluetooth
SP0562	System configuration
SP0563	PSCM calibration procedure
SP0564	New actuator setup procedure
SP0565	Program phone number
SP0566	Hybrid batt. charge hrs.
SP0567	Hybrid batt. discharge amp hrs.
SP0568	Erase transponder-keys
SP0569	Seat belt chime
SP0570	Learn tire pressure sensors
SP0571	Engine shutdown

SP0572	Country code
SP0573	Chime level
SP0574	Loud chime volume
SP0575	Loud amp chime volume
SP0576	Normal chime volume
SP0577	Normal amp chime volume
SP0578	AM pass A stopping
SP0579	FM pass A stopping
SP0580	IPC setup
SP0581	U85
SP0582	UZ6
SP0583	Driver info. display option
SP0584	Calibrate module
SP0585	VCIM setup
SP0586	Optional modules
SP0587	Region code options
SP0588	New tire/wheel base/booster info.
SP0589	Setup SDM part number in IPC
SP0590	Setup SDM serial number in IPC
SP0591	Acquisition setting
SP0592	Step 1
SP0593	Step 2
SP0594	North america
SP0595	Middle east
SP0596	Steering tuning selection
SP0597	Yaw rate sensor recalibration
SP0598	BCM copy and flash
SP0599	Reduction of pressure drive
SP0600	IPC recalibration
SP0601	Injector flow rates
SP0602	Vehicle speed limit
SP0603	Navigation voice

SP0604	Setup SDM serial number in DIM
SP0605	Setup SDM part number in DIM
SP0606	LONG WAVE
SP0607	Traffic seek
SP0608	Vehicle type
SP0609	Door zone module VIN relearn
SP0610	Intrusion sensor step 1
SP0611	Inclination sensor step 1
SP0612	Alarm siren module step 1
SP0613	Tap shift
SP0614	Point of sale
SP0615	Miscellaneous options 2
SP0616	Variable effort steering
SP0617	Right hand drive
SP0618	Personalization option
SP0619	Universal theft deterrent
SP0620	Intrusion sensor step 2
SP0621	Inclination sensor step 2
SP0622	Alarm siren module step 2
SP0623	Twilight sentinel
SP0624	Front fog lamp type
SP0625	DRL option
SP0626	Perimeter lighting
SP0627	TPM option enable
SP0628	New VIN
SP0629	Tire rotation procedure
SP0630	Afterblow
SP0631	Recalibration
SP0632	Accessory wheel size setup
SP0633	Clear memory and program all fobs
SP0634	CTD operation
SP0635	Fob feedback

SP0636	Theftlock LED
SP0637	Option configuration
SP0638	Fuel injector balance
SP0639	Buckle up reminder
SP0640	Pre-alarm option
SP0641	Solenoid test
SP0642	Cruise control options
SP0643	Exhaust brake options
SP0644	Gear down protection options
SP0645	Oil capacity options
SP0646	DPM setup
SP0647	Preferred system setting
SP0648	ALC trimset
SP0649	Dimming delay
SP0650	Export ID
SP0651	Language
SP0652	AM distant
SP0653	AM local
SP0654	FM distant
SP0655	FM local
SP0656	Fob button hold time
SP0657	Electronic suspension control
SP0658	Nav. radio theft
SP0659	Oil life monitor
SP0660	Axle ratio
SP0661	Fast learn adapt. process
SP0662	BCM reprogramming
SP0663	Setup IPC
SP0664	Miscellaneous options 1
SP0665	Automatic/manual HVAC options
SP0666	Magna steer option
SP0667	Temperature offset

SP0668	Load management option
SP0669	Disable belt tower dtc's
SP0670	Navigation radio present
SP0671	Military or standard time
SP0672	Tire pressure warning
SP0673	Tire pressure monitor
SP0674	Performance shift
SP0675	Key fob personalization
SP0676	SCLM setup
SP0677	DTC mask
SP0678	Accessory inflator
SP0679	Middle east region mode
SP0680	Tire rotation/sensor replacement
SP0681	Setup RFA
SP0682	Synchronize IPC and SIR
SP0683	Setup new onstar
SP0684	Electronic serial number
SP0685	Update HVAC calcs. in DIM
SP0686	LH drvr. personalization
SP0687	RH drvr. personalization
SP0688	BCM RPO reprogram
SP0689	Twilight sentinel reprogram
SP0690	Seed and key relearn
SP0691	Setup new VTD module
SP0692	Export option
SP0693	Valet lockout
SP0694	Compact disc
SP0695	Cellular telephone
SP0696	A/C compressor calibration
SP0697	Option A
SP0698	Option B
SP0699	Option C

SP0700	Option D
SP0701	Option E
SP0702	VIN information
SP0703	Bass frequency response
SP0704	Steering angle sensor centering
SP0705	Heater recalibration
SP0706	Door lock
SP0707	Door unlock
SP0708	Door jamb switch
SP0709	Brake pedal
SP0710	Ignition switch
SP0711	Option no. 0
SP0712	HVAC recal. download
SP0713	TV present
SP0714	Bose display
SP0715	Isolation valve test
SP0716	Option no. 1
SP0717	Fob 1 option 2
SP0718	Fob 1 option 3
SP0719	Fob 2 option 1
SP0720	Fob 2 option 2
SP0721	Fob 2 option 3
SP0722	Option no. 2
SP0723	Service spark retard reset
SP0724	Odometer reset
SP0725	Gauge setup
SP0726	Synchronize TTM and MSM
SP0727	Synchronize MSM and TTM
SP0728	Remove/reset module
SP0729	Vehicle dynamic sensor offset calibration
SP0730	Clear Proximity Detection Disable Reason
SP0731	Engine air filter monitor settings

SP0732	Transmission overtemperature counter reset
SP0733	Reset buffer history instruction
SP0734	Transmission clutch read in
SP0735	Vehicle dynamic sensor 1 and 2 offset calibration
SP0736	Read the starting point of the brake system piston pressure rise
SP0737	Reading of brake system plunger motor position sensor
SP0738	Read brake pedal stroke sensor
SP0739	Front axle brake pad life monitoring reset
SP0740	Rear axle brake pad life monitoring reset
SP0741	Configuration/reset function
SP0742	Trailer tire pressure sensor read in manually
SP0743	Steering wheel angle sensor offset calibration
SP0744	Read in longitudinal acceleration sensor
SP0745	Regeneration of diesel particulate filters
SP0746	Injector correction reset
SP0747	Capture information
SP0748	Copy and restore data
SP0749	Gear actuator correction read
SP0750	4WD high-low gear low-speed actuator clutch read-in
SP0751	Distance sensing constant speed control module
SP0752	Engine speed/throttle
SP0753	Rear Gate Driver Information Center Message Reset
SP0754	Headlamp Leveling System Suspension Trim Position Learn
SP0755	Backup Battery Timer Reset
SP0756	Engine Air Filter Life Reset
SP0757	Fuel Pump Driver Control Module Configuration
SP0758	Vehicle Dynamic Sensor Offset Calibration
SP0759	Clear Approach Detection Disabled Reasons
SP075A	All Cameras Alignment Learn
SP075B	Rear Drive Clutch Service Calibration Setup
SP075C	Transmission Overtemperature Counter Reset
SP075D	Engine Block Coolant Valve Position Learn

SP075E	Engine Coolant Control Valve Learn
SP075F	Engine Coolant Flow Control Valve Learn
SP0760	Turbocharger Wastegate Learn
SP0761	Engine Coolant Pump Data Reset
SP0762	Heater Core Coolant Temperature Sensor Reset
SP0763	Particulate Filter Reset
SP0764	Particulate Filter Pressure Sensor Reset
SP0765	Engine Air Filter Monitor Setup
SP0766	Steering Wheel Angle Sensor Offset Calibration
SP0767	Brake System Plunger Motor Position Sensor Learn
SP0768	Brake System Plunger Pressure Rise Starting Point Learn
SP0769	License Compliance Materials Download Error Counter Reset
SP076A	Transmission Control Module Reset
SP076B	Exhaust Control Valve Learn
SP076C	Air Cleaner Monitor Setup
SP076D	Barometric Pressure Sensor Reset
SP076E	Fuel Pump Power Control Module Configuration
SP076F	Correction Angle Reset
SP0770	Cylinder Deactivation Exhaust Control Valve Learn
SP0771	Longitudinal Acceleration Sensor Learn
SP0772	Clear Short Range Radar Sensor Vehicle Position
SP0773	Variable Exhaust Flow Control Valve Learn
SP0774	Vehicle Longitudinal Accelerometer Sensor Learn
SP0775	Heated Oxygen Sensor Heater Resistance Learned Values Reset
SP0776	Range Actuator Correlation Learn
SP0777	Engine Block Coolant Control Valve Position Learn
SP0778	Turbocharger/Supercharger Boost Control Initial Position Learn
SP0779	Catalytic Converter Reset
SP077A	High Pressure Fuel Variable Reset
SP077B	Nitrogen Oxides Catalytic Converter Reductant Loading Reset
SP077C	Nitrogen Oxides Catalytic Converter Reset
SP077D	Nitrogen Oxides Sensor Reset

SP077E	Display ECM Injector Flow Identifiers
SP077F	Cylinder 1 Fuel Injector Flow Identifier
SP0780	Cylinder 2 Fuel Injector Flow Identifier
SP0781	Cylinder 3 Fuel Injector Flow Identifier
SP0782	Cylinder 4 Fuel Injector Flow Identifier
SP0783	Cylinder 5 Fuel Injector Flow Identifier
SP0784	Cylinder 6 Fuel Injector Flow Identifier
SP0785	Left Front Air Spring Inflate
SP0786	Right Front Air Spring Inflate
SP0787	Left Rear Air Spring Inflate
SP0788	Right Rear Air Spring Inflate
SP0789	Left Front Suspension Position Sensor Trim Height
SP078A	Right Front Suspension Position Sensor Trim Height
SP078B	Left Rear Suspension Position Sensor Trim Height
SP078C	Right Rear Suspension Position Sensor Trim Height
SP078D	Level Vehicle to Target Height
SP078E	Brake Pedal Travel Sensor Learn
SP078F	Front Axle Brake Pad Life Monitoring Reset
SP0790	Rear Axle Brake Pad Life Monitoring Reset
SP0791	Turbocharger Vane Position Learn
SP0792	Fuel Injection Small Quantity Learning Odometer Reset
SP0793	Theft Deterrent Relearn
SP0794	Vehicle Dynamic Sensors 1 and 2 Offset Calibration
SP0795	Transmission Clutch 6 Volume Learn
SP0796	Transmission Clutch 6 Return Spring Learn
SP0797	Service Cleaning Procedure
SP0798	Hydraulic System Leak Test
SP0799	Park Brake Pad Life Monitoring Reset
SP079A	Crankshaft Position Reluctor Ring Learned Values Reset
SP079B	Copy Tire Pressure Monitoring Information
SP079C	CO Adjustment
SP079D	Tire Pressure Sensors Manual Learn

SP079E	Flexible Fuel Reset
SP079F	Steering Performance Calibration
SP07A0	Powertrain Compartment Cover Full Open Height Reset
SP07A1	Powertrain Compartment Cover Cycle Counts Reset
SP07A2	Powertrain Compartment Cover Hold Open Counter Reset
SP07A3	Powertrain Compartment Cover Obstacle Counter Reset
SP07A4	Powertrain Compartment Cover Zone Counter Reset
SP07A5	Powertrain Compartment Cover Drive Unit Learn
SP07A6	4WD Low Range Actuator Clutch Learn
SP07A7	Theft Deterrent Relearn VIN Reset
SP07A8	Radio Favorites Reset
SP07A9	Turbocharger Boost Control Initial Position Learn
SP07AA	Fuel System Adaptation Reset
SP07AB	Power Take-Off Operation Mode Settings
SP07AC	Copy and Restore Data
SP07AD	Trailer Tire Pressure Sensor Manual Learn
SP07AE	Clear All Vehicle DTCs
SP07AF	Stop/Start Capacitor Control Module State of Health Reset
SP07B0	Vehicle Variant
SP07B1	Hydraulic Clutch Bleed
SP07B2	Engine Coolant Bypass Valve Position Learn
SP07B3	Set Time and Date
SP07B4	Remove/Reset Module
SP07B5	Temperature Code Index
SP07B6	EGR Cooler Run Time Counter Reset
SP07B7	Rear Differential Clutch Learn Command
SP07B8	Rear Differential Functional Test Command
SP07B9	Drive Motor Position Sensor Offset Reset
SP07BA	Hybrid/Electric Vehicle Battery Pack Capacity Fast Learn
SP07BB	Hybrid/Electric Vehicle Battery Contactor Open Reason History Reset
SP07BC	Hybrid/Electric Vehicle Battery DC Charging Disabled Reset
SP07BD	Hybrid/Electric Vehicle Battery Interface Control Module Over Temperature Reset

SP07BE	Hybrid/Electric Vehicle Battery Interface Control Module Voltage Sensor Circuits High - Low Reset
SP07BF	Hybrid/Electric Vehicle Range Reset
SP07C0	System Isolation / Impact Sensor Fault - Hybrid/Electric Vehicle Battery System Reset
SP07C1	14 Volt Power Module - Rail Overvoltage Exposure Reset
SP07C2	Air Conditioning Electric Compressor - Rail Overvoltage Exposure Reset
SP07C3	Battery Charger Control Module - Rail Overvoltage Exposure Reset
SP07C4	Drive Motor Control Module - Rail Overvoltage Exposure Reset
SP07C5	Drive Motor Control Module 2 - Rail Overvoltage Exposure Reset
SP07C6	Drive Motor Control Module 3 - Rail Overvoltage Exposure Reset
SP07C7	Hybrid/Electric Vehicle Coolant Heater - Rail Overvoltage Exposure Reset
SP07C8	Power Steering Active Pull/Drift Compensation Learn
SP07C9	Particulate Filter Reset Bank 2
SP07CA	Hydraulic System Flush Procedure
SP07CB	Transmission Service Diagnostic Test
SP07CC	Camshaft Position Actuator Learn
SP07CD	Clutch Energy Level History Counter Reset
SP07CE	Timing Belt Life Reset
SP07CF	Reset Camera Alignment Learned Values
SP07D0	Battery Charger Control Module 2 - Rail Overvoltage Exposure Reset
SP07D1	Restore Power Takeoff Factory Settings
SP07D2	Reset Power Takeoff Inhibit and Disengage History