



Shenzhen Xtooltech Co., Ltd

Cadillac Function List V13.40

Tips and Instructions:

The programming function only supports H6PRO, H6PRO Master Edition products.

* This feature is new.

√ This feature is supported.

This feature is not supported.

※ This feature is partially supported.

Year	Make	Model Series	System Name	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Actuation Test	Special Functions
2024	Cadillac	CT4	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP075E,SP076B,SP0760,SP076C,SP0115,SP076D,SP0761,SP0086,SP076E,SP0212,SP0217,SP0006,SP0144,SP0764,SP0763,SP0258,SP0139,SP0156,SP0770,SP0076,SP0774,SP0773,SP0775,SP0154
2024	Cadillac	CT4	Transmission Control Module	√	√	√	√	√	SP0017,SP0033,SP0016
2024	Cadillac	CT4	Brake System Control Module	√	√	√	√	√	SP0767,SP0768,SP0766,SP0758,SP0229,SP078F,SP0790,SP0799
2024	Cadillac	CT4	Restraints Control Module	√	√	√	√	√	SP0758,SP0134
2024	Cadillac	CT4	Instrument Panel Cluster Control Module	√	√	√	√	√	
2024	Cadillac	CT4	Serial Data Gateway Module	√	√	√			
2024	Cadillac	CT4	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	CT4	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	CT4	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	Cadillac	CT4	Differential Control Module	√	√	√	√	√	SP07B7,SP07B8
2024	Cadillac	CT4	Vehicle Performance Data Recorder	√	√	√	√		
2024	Cadillac	CT4	Video Processing Module	√	√	√			
2024	Cadillac	CT4	Wireless Accessory Charging Module	√	√	√	√		
2024	Cadillac	CT4	Power Steering Control Module	√	√	√	√		SP0766
2024	Cadillac	CT4	Electronic Suspension Control Module	√	√	√	√	√	SP0198
2024	Cadillac	CT4	Transfer Case Control Module	√	√	√	√	√	SP0099,SP0100
2024	Cadillac	CT4	Restraints Occupant Classification System Module - Passenger	√	√	√	√		SP0057
2024	Cadillac	CT4	Audio Amplifier	√	√	√	√		
2024	Cadillac	CT4	Automated Driving Mapping Module	√	√	√	√	√	

2024	Cadillac	CT4	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2024	Cadillac	CT4	Infotainment Control Switch	√	√	√			
2024	Cadillac	CT4	Radio Controls	√	√	√	√		
2024	Cadillac	CT4	Radio	√	√	√	√	√	SP0269,SP0769,SP07A7,SP07A8
2024	Cadillac	CT4	Steering Column Lock Control Module	√	√	√	√		
2024	Cadillac	CT4	Parking Assist Control Module	√	√	√	√	√	
2024	Cadillac	CT4	Lighting Control Module	√	√	√	√	√	
2024	Cadillac	CT4	Gear Shift Control Module	√					
2024	Cadillac	CT4	Side Obstacle Detection Control Module - Left	√	√	√			
2024	Cadillac	CT4	Side Obstacle Detection Control Module - Right	√	√	√			
2024	Cadillac	CT4	Image Processing Module	√	√	√	√		
2024	Cadillac	CT4	Driver Monitoring System Control Module	√	√	√			
2024	Cadillac	CT4	Image Processing Module 1 - Processor 1	√	√	√	√		
2024	Cadillac	CT4	Image Processing Module 1 - Processor 2	√	√	√			SP0758
2024	Cadillac	CT4	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	Cadillac	CT4	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	Cadillac	CT4	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	Cadillac	CT4	Short Range Radar Sensor - Right Rear	√	√	√			SP0772
2024	Cadillac	CT4	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Cadillac	CT4	Frontview Camera - Windshield	√	√	√	√		SP0196
2024	Cadillac	Lyriq	Brake System Control Module	√	√	√	√	√	SP0225,SP0229,SP078E,SP0767,SP0758,SP0090
2024	Cadillac	Lyriq	Restraints Control Module	√	√	√	√	√	SP0758,SP0134
2024	Cadillac	Lyriq	Body Control Module	√	√	√	√	√	SP0263,SP0226,SP0754,SP0007,SP0129,SP0267
2024	Cadillac	Lyriq	Serial Data Gateway Module	√	√	√			
2024	Cadillac	Lyriq	Head-Up Display Module	√	√	√			
2024	Cadillac	Lyriq	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	Lyriq	Headlamp Control Module	√	√	√	√		SP0195
2024	Cadillac	Lyriq	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	Lyriq	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	Cadillac	Lyriq	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	Cadillac	Lyriq	Side Obstacle Detection Control Module - Left	√	√	√			
2024	Cadillac	Lyriq	Side Obstacle Detection Control Module - Right	√	√	√			
2024	Cadillac	Lyriq	Video Processing Module	√	√	√			
2024	Cadillac	Lyriq	Wireless Accessory Charging Module	√	√	√	√		
2024	Cadillac	Lyriq	Drive Motor Control Module 2	√	√	√	√		SP07B9
2024	Cadillac	Lyriq	Drive Motor Control Module	√	√	√	√	√	SP07B9,SP0258
2024	Cadillac	Lyriq	Lighting Control Module	√	√	√	√	√	
2024	Cadillac	Lyriq	Parking Assist Control Module	√	√	√	√	√	
2024	Cadillac	Lyriq	Steering Column Lock Control Module	√	√	√	√		

2024	Cadillac	Lyriq	Near Field Communication Module	√	√	√	√		
2024	Cadillac	Lyriq	Restraints Occupant Classification System Module - Passenger	√	√	√	√		SP0057
2024	Cadillac	Lyriq	Image Processing Module 1 - Processor 1	√	√	√	√		SP0758,SP0766
2024	Cadillac	Lyriq	Image Processing Module 1 - Processor 2	√	√	√	√		SP07CF
2024	Cadillac	Lyriq	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Cadillac	Lyriq	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	Cadillac	Lyriq	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	Cadillac	Lyriq	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	Cadillac	Lyriq	Short Range Radar Sensor - Right Rear	√	√	√			SP0772
2024	Cadillac	Lyriq	Battery Energy Control Module	√	√	√	√	√	SP07BA,SP0115,SP07B B,SP07BC,SP07BD,SP0 7BE,SP0123,SP07BF,SP 07C0,SP07C1,SP07C2,S P07C3,SP07D0,SP07C4, SP07C5,SP07C6,SP07C 7
2024	Cadillac	Lyriq	Audio Amplifier	√	√	√	√	√	
2024	Cadillac	Lyriq	Frontview Camera - Windshield	√	√	√	√		SP0196
2024	Cadillac	Lyriq	Heater and Air Conditioning Auxiliary Control	√	√	√			
2024	Cadillac	Lyriq	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2024	Cadillac	Lyriq	Infotainment Control Switch	√	√	√			
2024	Cadillac	Lyriq	Radio	√	√	√	√	√	SP07A8
2024	Cadillac	Lyriq	Power Steering Control Module 1	√	√	√	√		SP0766,SP07C8
2024	Cadillac	Lyriq	Power Steering Control Module 2	√	√	√	√		
2024	Cadillac	Lyriq	Automatic Level Control Module	√	√	√	√	√	SP0785,SP0786,SP0787, SP0788,SP0789,SP078A ,SP078B,SP078C,SP078
2024	Cadillac	Lyriq	Short Range Radar Sensor - Rear Middle	√	√	√			SP0772
2024	Cadillac	Lyriq	Automated Driving Mapping Module	√	√	√	√	√	
2024	Cadillac	XT4	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP075E ,SP076B,SP0760,SP076 C,SP0115,SP076D,SP07 61,SP0086,SP076E,SP0 212,SP0217,SP0006,SP0 144,SP0764,SP0763,SP0 258,SP0130
2024	Cadillac	XT4	Transmission Control Module	√	√	√	√	√	SP0019,SP076A
2024	Cadillac	XT4	Brake System Control Module	√	√	√	√	√	SP0767,SP0768,SP0766, SP0758,SP0229,SP078F, SP0790,SP0799
2024	Cadillac	XT4	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	SP0172,SP0134,SP0111, SP0758

2024	Cadillac	XT4	Body Control Module	√	√	√	√	√	SP0263,SP0226,SP0754, SP0007,SP0129,SP0267
2024	Cadillac	XT4	Serial Data Gateway Module	√	√	√			
2024	Cadillac	XT4	Headlamp Control Module	√	√	√	√		SP0195
2024	Cadillac	XT4	Rear Drive Control Module	√	√	√	√	√	
2024	Cadillac	XT4	Side Obstacle Detection Control Module - Left	√	√	√			
2024	Cadillac	XT4	Side Obstacle Detection Control Module - Right	√	√	√			
2024	Cadillac	XT4	Parking Assist Control Module	√	√	√	√	√	
2024	Cadillac	XT4	Steering Column Lock Control Module	√	√	√	√		
2024	Cadillac	XT4	Infotainment Control Switch	√	√	√			
2024	Cadillac	XT4	Radio	√	√	√	√	√	SP07A8
2024	Cadillac	XT4	Passenger Presence Module	√	√	√	√	√	SP0057
2024	Cadillac	XT4	Keyless Entry Control Module	√	√	√	√	√	
2024	Cadillac	XT4	Power Steering Control Module	√	√	√	√		SP0766
2024	Cadillac	XT4	Lighting Control Module	√	√	√	√	√	
2024	Cadillac	XT4	Wireless Accessory Charging Module	√	√	√	√		
2024	Cadillac	XT4	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Cadillac	XT4	Short Range Radar Sensor - Rear Middle	√	√	√			SP0772
2024	Cadillac	XT4	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	Cadillac	XT4	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	Cadillac	XT4	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	Cadillac	XT4	Short Range Radar Sensor - Right Rear	√	√	√			SP0772
2024	Cadillac	XT4	Image Processing Module 1 - Processor 2	√	√	√	√		SP07CF
2024	Cadillac	XT4	Image Processing Module 1 - Processor 1	√	√	√	√		
2024	Cadillac	XT4	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	XT4	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	XT4	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	Cadillac	XT4	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	Cadillac	XT4	Video Processing Module	√	√	√			
2024	Cadillac	XT4	Driver Monitoring System Control Module	√	√	√	√		
2024	Cadillac	XT4	Gear Shift Control Module	√					
2024	Cadillac	XT4	Audio Amplifier	√	√	√	√		
2024	Cadillac	XT4	Frontview Camera - Windshield	√	√	√	√		SP0196
2024	Cadillac	XT4	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2024	Cadillac	XT4	Electronic Suspension Control Module	√	√	√	√	√	

2024	Cadillac	CT5	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP075E,SP076B,SP0760,SP076C,SP0115,SP076D,SP0761,SP0086,SP076E,SP0212,SP0217,SP0006,SP0144,SP0764,SP0763,SP0258,SP0139,SP0156,SP0770,SP0076,SP0774,SP0773,SP0775,SP0154,SP07CD
2024	Cadillac	CT5	Transmission Control Module	√	√	√	√	√	SP0017,SP0033,SP0016
2024	Cadillac	CT5	Brake System Control Module	√	√	√	√	√	SP0767,SP0768,SP0766,SP0758,SP0229,SP078F,SP0790,SP0799
2024	Cadillac	CT5	Restraints Control Module	√	√	√	√	√	SP0758,SP0134
2024	Cadillac	CT5	Body Control Module	√	√	√	√	√	SP0263,SP0226,SP0754,SP0007,SP0129,SP0267
2024	Cadillac	CT5	Instrument Panel Cluster Control Module	√	√	√	√	√	
2024	Cadillac	CT5	Serial Data Gateway Module	√	√	√			
2024	Cadillac	CT5	Transfer Case Control Module	√	√	√	√	√	SP0099,SP0100
2024	Cadillac	CT5	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	CT5	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	CT5	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	Cadillac	CT5	Electronic Suspension Control Module	√	√	√	√	√	
2024	Cadillac	CT5	Power Steering Control Module	√	√	√	√		SP0766
2024	Cadillac	CT5	Audio Amplifier	√	√	√	√		
2024	Cadillac	CT5	Automated Driving Mapping Module	√	√	√	√	√	
2024	Cadillac	CT5	Frontview Camera - Windshield	√	√	√	√		SP0196
2024	Cadillac	CT5	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2024	Cadillac	CT5	Infotainment Control Switch	√	√	√			
2024	Cadillac	CT5	Radio Controls	√	√	√	√		
2024	Cadillac	CT5	Radio	√	√	√	√	√	SP0269,SP0769,SP07A7,SP07A8
2024	Cadillac	CT5	Gear Shift Control Module	√					
2024	Cadillac	CT5	Lighting Control Module	√	√	√	√	√	
2024	Cadillac	CT5	Side Obstacle Detection Control Module - Right	√	√	√			
2024	Cadillac	CT5	Side Obstacle Detection Control Module - Left	√	√	√			
2024	Cadillac	CT5	Parking Assist Control Module	√	√	√	√	√	
2024	Cadillac	CT5	Steering Column Lock Control Module	√	√	√	√		
2024	Cadillac	CT5	Restraints Occupant Classification System Module - Passenger	√	√	√	√		SP0057
2024	Cadillac	CT5	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	SP0266
2024	Cadillac	CT5	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	SP0266

2024	Cadillac	CT5	Differential Control Module	√	√	√	√	√	SP07B7,SP07B8
2024	Cadillac	CT5	Vehicle Performance Data Recorder	√	√	√	√		
2024	Cadillac	CT5	Video Processing Module	√	√	√			
2024	Cadillac	CT5	Wireless Accessory Charging Module	√	√	√	√		
2024	Cadillac	CT5	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Cadillac	CT5	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	Cadillac	CT5	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	Cadillac	CT5	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	Cadillac	CT5	Short Range Radar Sensor - Right Rear	√	√	√			SP0772
2024	Cadillac	CT5	Short Range Radar Sensor - Rear Middle	√	√	√			SP0772
2024	Cadillac	CT5	Image Processing Module	√	√	√	√		
2024	Cadillac	CT5	Image Processing Module 1 - Processor 1	√	√	√	√		
2024	Cadillac	CT5	Image Processing Module 1 - Processor 2	√	√	√			SP0758
2024	Cadillac	CT5	Driver Monitoring System Control Module	√	√	√			
2024	Cadillac	XT5	Engine Control Module	√	√	√	√	√	SP0209,SP075E,SP0760,SP076C,SP0115,SP0263,SP0761,SP0086,SP0085,SP0757,SP0212,SP0217,SP0006,SP0144,SP0764,SP0763,SP0258,SP0139,SP0756
2024	Cadillac	XT5	Transmission Control Module	√	√	√	√	√	SP0017
2024	Cadillac	XT5	Brake System Control Module	√	√	√	√	√	SP0090,SP0758,SP0768,SP0767,SP078E,SP0225,SP0229,SP078F,SP0790
2024	Cadillac	XT5	Electronic Brake Control Module	√	√	√	√	√	SP0225,SP0090,SP0111,SP0277,SP0229
2024	Cadillac	XT5	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	SP0172,SP0134,SP0111,SP0758
2024	Cadillac	XT5	Body Control Module	√	√	√	√	√	SP0199,SP0239,SP0161,SP0162,SP0163,SP0164,SP0165,SP0166,SP0167,SP0168,SP0242,SP0263,SP0203,SP0201,SP0208,SP0206,SP0083,SP0267,SP0160,SP0233,SP0159
2024	Cadillac	XT5	Instrument Cluster	√	√	√	√	√	SP0247
2024	Cadillac	XT5	HVAC Control Module	√	√	√	√	√	SP0007,SP0129
2024	Cadillac	XT5	HVAC Controls	√	√	√	√		
2024	Cadillac	XT5	Headlamp Control Module		√	√			
2024	Cadillac	XT5	Liftgate Control Module	√	√	√	√	√	SP0146,SP0169
2024	Cadillac	XT5	Seat Memory Control Module - Driver	√	√	√	√	√	
2024	Cadillac	XT5	Telematics Communication Interface Control Module	√	√	√	√	√	SP0755

2024	Cadillac	XT5	Amplifier	√	√	√	√		
2024	Cadillac	XT5	Infotainment Control Switch	√	√	√			
2024	Cadillac	XT5	Radio Controls	√	√	√	√		
2024	Cadillac	XT5	Radio	√	√	√	√	√	SP0269,SP0793,SP0267,SP0226
2024	Cadillac	XT5	Active Safety Control Module	√	√	√	√	√	
2024	Cadillac	XT5	Night Vision Camera Control Module	√	√	√	√		SP0492
2024	Cadillac	XT5	Rear Drive Control Module	√	√	√	√	√	SP0003
2024	Cadillac	XT5	Trailer Lighting Control Module	√	√	√	√	√	SP0247
2024	Cadillac	XT5	Video Processing Control Module	√	√	√	√	√	
2024	Cadillac	XT5	Frontview Camera - Windshield	√	√	√	√		SP0196,SP075A
2024	Cadillac	XT5	Parking Assist Control Module	√	√	√	√	√	SP0247
2024	Cadillac	XT5	Serial Data Gateway Module - Processor 1	√	√	√			
2024	Cadillac	XT5	Serial Data Gateway Module - Processor 2	√	√	√			
2024	Cadillac	XT5	Steering Column Lock Control Module	√	√	√	√		
2024	Cadillac	XT5	Side Obstacle Detection Control Module - Left	√	√	√		√	
2024	Cadillac	XT5	Side Obstacle Detection Control Module - Right	√	√	√		√	
2024	Cadillac	XT5	Keyless Entry Control Module	√	√	√	√	√	SP0759
2024	Cadillac	XT5	Passenger Presence Module	√	√	√	√	√	SP0057
2024	Cadillac	XT5	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	SP0266
2024	Cadillac	XT5	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	SP0266
2024	Cadillac	XT5	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Cadillac	XT5	Short Range Radar Sensor - Rear Middle	√	√	√			
2024	Cadillac	XT5	Power Steering Control Module	√	√	√	√		SP0081,SP0080,SP0089
2024	Cadillac	XT5	Suspension Control Module	√	√	√	√	√	
2024	Cadillac	XT6	Engine Control Module	√	√	√	√	√	SP0209,SP075E,SP0760,SP076C,SP0115,SP0263,SP0761,SP0086,SP0085,SP0757,SP0212,SP0217,SP0006,SP0144,SP0764,SP0763,SP0258,SP0139,SP0756
2024	Cadillac	XT6	Transmission Control Module	√	√	√	√	√	SP0017
2024	Cadillac	XT6	Brake System Control Module	√	√	√	√	√	SP0090,SP0758,SP0768,SP0767,SP078E,SP0225,SP0229,SP078F,SP0790
2024	Cadillac	XT6	Electronic Brake Control Module	√	√	√	√	√	SP0225,SP0090,SP0111,SP0277,SP0229
2024	Cadillac	XT6	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	SP0172,SP0134,SP0111,SP0758

2024	Cadillac	XT6	Body Control Module	√	√	√	√	√	SP0199,SP0239,SP0161,SP0162,SP0163,SP0164,SP0165,SP0166,SP0167,SP0168,SP0242,SP0263,SP0203,SP0201,SP0208,SP0206,SP0083,SP0267,SP0160,SP0233,SP0159
2024	Cadillac	XT6	Instrument Cluster	√	√	√	√	√	SP0247
2024	Cadillac	XT6	HVAC Control Module	√	√	√	√	√	SP0007,SP0129
2024	Cadillac	XT6	HVAC Controls	√	√	√	√		
2024	Cadillac	XT6	Headlamp Control Module	√	√	√	√	√	SP0195
2024	Cadillac	XT6	Liftgate Control Module	√	√	√	√	√	SP0146,SP0169
2024	Cadillac	XT6	Seat Memory Control Module - Driver	√	√	√	√	√	
2024	Cadillac	XT6	Telematics Communication Interface Control Module	√	√	√	√	√	SP0755
2024	Cadillac	XT6	Amplifier	√	√	√	√		
2024	Cadillac	XT6	Infotainment Control Switch	√	√	√			
2024	Cadillac	XT6	Radio Controls	√	√	√	√		
2024	Cadillac	XT6	Radio	√	√	√	√	√	SP0269,SP0793,SP0267,SP0226
2024	Cadillac	XT6	Active Safety Control Module 1 - Processor A	√	√	√	√		SP0268,SP0794
2024	Cadillac	XT6	Active Safety Control Module 1 - Processor B	√	√	√	√		SP0111,SP0268
2024	Cadillac	XT6	Active Safety Control Module 1 - Processor C	√	√	√	√		SP0268
2024	Cadillac	XT6	Active Safety Control Module 2 - Processor A	√	√	√	√		SP0268,SP0794
2024	Cadillac	XT6	Active Safety Control Module 2 - Processor B	√	√	√	√		SP0111,SP0268
2024	Cadillac	XT6	Active Safety Control Module 2 - Processor C	√	√	√	√		SP0268
2024	Cadillac	XT6	Active Safety Control Module	√	√	√	√	√	
2024	Cadillac	XT6	Frontview Camera - Windshield	√	√	√	√		SP0196,SP075A
2024	Cadillac	XT6	Night Vision Camera Control Module	√	√	√	√		SP0492
2024	Cadillac	XT6	Rear Drive Control Module	√	√	√	√	√	SP0003
2024	Cadillac	XT6	Trailer Lighting Control Module	√	√	√	√	√	SP0247
2024	Cadillac	XT6	Video Processing Control Module	√	√	√	√	√	
2024	Cadillac	XT6	Parking Assist Control Module	√	√	√	√	√	SP0247
2024	Cadillac	XT6	Steering Column Lock Control Module	√	√	√	√		
2024	Cadillac	XT6	Side Obstacle Detection Control Module - Left	√	√	√		√	
2024	Cadillac	XT6	Side Obstacle Detection Control Module - Right	√	√	√		√	
2024	Cadillac	XT6	Serial Data Gateway Module - Processor 1	√	√	√			
2024	Cadillac	XT6	Serial Data Gateway Module - Processor 2	√	√	√			
2024	Cadillac	XT6	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	SP0266
2024	Cadillac	XT6	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	SP0266
2024	Cadillac	XT6	Keyless Entry Control Module	√	√	√	√	√	SP0759
2024	Cadillac	XT6	Passenger Presence Module	√	√	√	√	√	SP0057
2024	Cadillac	XT6	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260

2024	Cadillac	XT6	Short Range Radar Sensor - Rear Middle	√	√	√			
2024	Cadillac	XT6	Power Steering Control Module	√	√	√	√	√	SP0089,SP0084
2024	Cadillac	XT6	Suspension Control Module	√	√	√	√	√	
2024	Cadillac	XT6	Driver Monitoring System Control Module	√	√	√	√		
2024	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP076C,SP0115,SP0086,SP0085,SP076E,SP0212,SP0217,SP0775,SP0258,SP0139,SP0773,SP0144
2024	Cadillac	Escalade	Transmission Control Module	√	√	√	√	√	SP0017,SP0033,SP0016
2024	Cadillac	Escalade	Body Control Module	√	√	√	√	√	SP0263,SP0226,SP0754,SP0007,SP0129,SP0267
2024	Cadillac	Escalade	Serial Data Gateway Module	√	√	√			
2024	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	SP0037,SP0099,SP0100,SP0776
2024	Cadillac	Escalade	Chassis Control Module - Auxiliary	√	√	√	√		
2024	Cadillac	Escalade	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	Escalade	Headlamp Control Module	√	√	√	√		SP0195
2024	Cadillac	Escalade	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	Escalade	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	Cadillac	Escalade	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	Cadillac	Escalade	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Cadillac	Escalade	Image Processing Module 1 - Processor 1	√	√	√	√		SP0758,SP0766
2024	Cadillac	Escalade	Image Processing Module 1 - Processor 2	√	√	√	√		SP07CF
2024	Cadillac	Escalade	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	Cadillac	Escalade	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	Cadillac	Escalade	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	Cadillac	Escalade	Short Range Radar Sensor - Right Rear	√	√	√			SP0772
2024	Cadillac	Escalade	Audio Amplifier	√	√	√	√		
2024	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP076C,SP0115,SP0086,SP0085,SP076E,SP0212,SP0217,SP0775,SP0258,SP0139,SP0773,SP0144
2024	Cadillac	Escalade ESV	Transmission Control Module	√	√	√	√	√	SP0017,SP0033,SP0016
2024	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	SP0263,SP0226,SP0754,SP0007,SP0129,SP0267
2024	Cadillac	Escalade ESV	Serial Data Gateway Module	√	√	√			
2024	Cadillac	Escalade ESV	Chassis Control Module - Auxiliary	√	√	√	√		
2024	Cadillac	Escalade ESV	Transfer Case Control Module	√	√	√	√	√	SP0037,SP0099,SP0100,SP0776
2024	Cadillac	Escalade ESV	Driver Seat Adjuster Memory Module	√	√	√	√	√	

2024	Cadillac	Escalade ESV	Headlamp Control Module	√	√	√	√		SP0195
2024	Cadillac	Escalade ESV	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	Escalade ESV	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	Cadillac	Escalade ESV	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	Cadillac	Escalade ESV	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Cadillac	Escalade ESV	Image Processing Module 1 - Processor 1	√	√	√	√		SP0758,SP0766
2024	Cadillac	Escalade ESV	Image Processing Module 1 - Processor 2	√	√	√	√		SP07CF
2024	Cadillac	Escalade ESV	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	Cadillac	Escalade ESV	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	Cadillac	Escalade ESV	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	Cadillac	Escalade ESV	Short Range Radar Sensor - Right Rear	√	√	√			SP0772
2024	Cadillac	Celestiq	Body Control Module	√	√	√	√	√	SP0263,SP0226,SP0754,SP0007,SP0129,SP0267
2024	Cadillac	Celestiq	Serial Data Gateway Module	√	√	√			
2024	Cadillac	Celestiq	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	Cadillac	Celestiq	Drive Motor Control Module 2		√	√			
2024	Cadillac	Celestiq	Drive Motor Control Module		√	√			
2024	Cadillac	Celestiq	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	Celestiq	Front Side Door Access Control Module - Left	√	√	√	√	√	
2024	Cadillac	Celestiq	Front Side Door Access Control Module - Right	√	√	√	√	√	
2024	Cadillac	Celestiq	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	Celestiq	Rear Side Door Access Control Module - Left	√	√	√	√	√	
2024	Cadillac	Celestiq	Rear Side Door Access Control Module - Right	√	√	√	√	√	
2024	Cadillac	Celestiq	Battery Energy Control Module	√	√	√	√	√	SP07BA,SP0115,SP07B B,SP07BC,SP07BD,SP0 7BE,SP0123,SP07BF,SP 07C0,SP07C1,SP07C2,S P07C3,SP07D0,SP07C4, SP07C5,SP07C6,SP07C 7
2024	Cadillac	Celestiq	Lighting Control Module	√	√	√	√	√	
2024	Cadillac	Celestiq	Side Obstacle Detection Control Module - Left	√	√	√			
2024	Cadillac	Celestiq	Side Obstacle Detection Control Module - Right	√	√	√			
2024	Cadillac	Celestiq	Powertrain Compartment Cover Module	√	√	√	√	√	SP07A0,SP07A1,SP07A 2,SP07A3,SP07A4,SP07
2024	Cadillac	Celestiq	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	Cadillac	Celestiq	Rear Seat Adjuster Memory Module - Left		√	√			
2024	Cadillac	Celestiq	Rear Seat Adjuster Memory Module - Right		√	√			

2023	Cadillac	CT4	Engine Control Module	√	√	√	√	√	0263 0209 075E 076B 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0764 0763 0258 0139 0156 0770 0076 0774 0773 0775 0154
2023	Cadillac	CT4	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2023	Cadillac	CT4	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758 0229 078F 0790 0799
2023	Cadillac	CT4	Restraints Control Module	√	√	√	√	√	0758 0134
2023	Cadillac	CT4	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	Cadillac	CT4	Instrument Panel Cluster Control Module	√	√	√	√	√	
2023	Cadillac	CT4	Serial Data Gateway Module	√	√	√			
2023	Cadillac	CT4	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	Cadillac	CT4	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2023	Cadillac	CT4	Telematics Control Module	√	√	√	√		0270 0755
2023	Cadillac	CT4	Transfer Case Control Module	√	√	√	√	√	0099 0100
2023	Cadillac	CT4	Audio Amplifier	√	√	√	√		
2023	Cadillac	CT4	Automated Driving Mapping Module	√	√	√	√	√	
2023	Cadillac	CT4	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	Cadillac	CT4	Infotainment Control Switch	√	√	√			
2023	Cadillac	CT4	Radio Controls	√	√	√	√		
2023	Cadillac	CT4	Radio	√	√	√	√	√	0769 0269 07A7 07A8
2023	Cadillac	CT4	Wireless Accessory Charging Module	√	√	√	√		
2023	Cadillac	CT4	Video Processing Module	√	√	√			
2023	Cadillac	CT4	Differential Control Module	√	√	√	√	√	07B7 07B8
2023	Cadillac	CT4	Gear Shift Control Module	√					
2023	Cadillac	CT4	Side Obstacle Detection Control Module - Left	√	√	√			
2023	Cadillac	CT4	Side Obstacle Detection Control Module - Right	√	√	√			
2023	Cadillac	CT4	Steering Column Lock Control Module	√	√	√	√		
2023	Cadillac	CT4	Lighting Control Module	√	√	√	√	√	
2023	Cadillac	CT4	Parking Assist Control Module	√	√	√	√	√	
2023	Cadillac	CT4	Electronic Suspension Control Module	√	√	√	√	√	0198
2023	Cadillac	CT4	Power Steering Control Module	√	√	√	√		0766
2023	Cadillac	CT4	Frontview Camera - Windshield	√	√	√	√		0196
2023	Cadillac	CT4	Image Processing Module	√	√	√	√		
2023	Cadillac	CT4	Image Processing Module 1 - Processor 1	√	√	√	√		
2023	Cadillac	CT4	Image Processing Module 1 - Processor 2	√	√	√			0758
2023	Cadillac	CT4	Driver Monitoring System Control Module	√	√	√			
2023	Cadillac	CT4	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Cadillac	CT4	Short Range Radar Sensor - Left Front	√	√	√			0772

2023	Cadillac	CT4	Short Range Radar Sensor - Left Rear	√	√	√			0772
2023	Cadillac	CT4	Short Range Radar Sensor - Right Front	√	√	√			0772
2023	Cadillac	CT4	Short Range Radar Sensor - Right Rear	√	√	√			0772
2023	Cadillac	CT4	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	Cadillac	CT4	Vehicle Performance Data Recorder	√	√	√	√		
2023	Cadillac	CT5	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0773 0115 07CD 0086 0154 0212 0217 0775 0144 0258 0139 0770 0774 076B 075E 0760 076C 076D 0761 076E 0006 0764 0763 0017 0033 0016
2023	Cadillac	CT5	Transmission Control Module	√	√	√	√	√	0767 0768 0766 0758 0229 078F 0790 0799
2023	Cadillac	CT5	Brake System Control Module	√	√	√	√	√	0758 0134
2023	Cadillac	CT5	Restraints Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	Cadillac	CT5	Body Control Module	√	√	√	√	√	
2023	Cadillac	CT5	Instrument Panel Cluster Control Module	√	√	√	√	√	
2023	Cadillac	CT5	Serial Data Gateway Module	√	√	√			
2023	Cadillac	CT5	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	Cadillac	CT5	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2023	Cadillac	CT5	Telematics Control Module	√	√	√	√		0270 0755
2023	Cadillac	CT5	Transfer Case Control Module	√	√	√	√	√	0099 0100
2023	Cadillac	CT5	Audio Amplifier	√	√	√	√		
2023	Cadillac	CT5	Automated Driving Mapping Module	√	√	√	√	√	
2023	Cadillac	CT5	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	Cadillac	CT5	Infotainment Control Switch	√	√	√			
2023	Cadillac	CT5	Radio Controls	√	√	√	√		
2023	Cadillac	CT5	Radio	√	√	√	√	√	0769 0269 07A7 07A8
2023	Cadillac	CT5	Parking Assist Control Module	√	√	√	√	√	
2023	Cadillac	CT5	Side Obstacle Detection Control Module - Left	√	√	√			
2023	Cadillac	CT5	Side Obstacle Detection Control Module - Right	√	√	√			
2023	Cadillac	CT5	Steering Column Lock Control Module	√	√	√	√		
2023	Cadillac	CT5	Gear Shift Control Module	√					
2023	Cadillac	CT5	Lighting Control Module	√	√	√	√	√	
2023	Cadillac	CT5	Differential Control Module	√	√	√	√	√	07B7 07B8
2023	Cadillac	CT5	Video Processing Module	√	√	√			
2023	Cadillac	CT5	Wireless Accessory Charging Module	√	√	√	√		
2023	Cadillac	CT5	Electronic Suspension Control Module	√	√	√	√	√	
2023	Cadillac	CT5	Power Steering Control Module	√	√	√	√		0766
2023	Cadillac	CT5	Frontview Camera - Windshield	√	√	√	√		0196

2023	Cadillac	CT5	Driver Monitoring System Control Module	√	√	√			
2023	Cadillac	CT5	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Cadillac	CT5	Image Processing Module 1 - Processor 1	√	√	√	√		
2023	Cadillac	CT5	Image Processing Module 1 - Processor 2	√	√	√			0758
2023	Cadillac	CT5	Image Processing Module	√	√	√	√		
2023	Cadillac	CT5	Short Range Radar Sensor - Left Front	√	√	√			0772
2023	Cadillac	CT5	Short Range Radar Sensor - Left Rear	√	√	√			0772
2023	Cadillac	CT5	Short Range Radar Sensor - Rear Middle	√	√	√			0772
2023	Cadillac	CT5	Short Range Radar Sensor - Right Front	√	√	√			0772
2023	Cadillac	CT5	Short Range Radar Sensor - Right Rear	√	√	√			0772
2023	Cadillac	CT5	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	Cadillac	CT5	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2023	Cadillac	CT5	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2023	Cadillac	CT5	UHF Short Range Low Energy Remote Control Access Transceiver	√	√	√			
2023	Cadillac	CT5	Vehicle Performance Data Recorder	√	√	√	√		
2023	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0263 0209 075E 075F 0778 076C 0115 076D 0779 0086 0085 0097 0221 0757 077A 077B 077C 077D 0764 0763 0117 0119 0258 07CE 077E 077F 0780 0781 0782 0783 0784 076E 0212 0217 0775 0139 0156 0076 0773 0774 07CD 0154 0144
2023	Cadillac	Escalade	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2023	Cadillac	Escalade	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2023	Cadillac	Escalade	Restraints Control Module	√	√	√	√	√	0758 0134
2023	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	Cadillac	Escalade	Instrument Panel Cluster Control Module	√	√	√	√	√	
2023	Cadillac	Escalade	Serial Data Gateway Module	√	√	√			
2023	Cadillac	Escalade	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	Cadillac	Escalade	Headlamp Control Module	√	√	√	√		0195
2023	Cadillac	Escalade	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2023	Cadillac	Escalade	Rear Gate Module	√	√	√	√	√	0146 0753
2023	Cadillac	Escalade	Telematics Control Module	√	√	√	√		0270 0755
2023	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2023	Cadillac	Escalade	Audio Amplifier	√	√	√	√		

2023	Cadillac	Escalade	Automated Driving Mapping Module	√	√	√	√	√	
2023	Cadillac	Escalade	Heater and Air Conditioning Auxiliary Control	√	√	√			
2023	Cadillac	Escalade	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	Cadillac	Escalade	Infotainment Control Switch	√	√	√			
2023	Cadillac	Escalade	Radio Controls	√	√	√	√		
2023	Cadillac	Escalade	Radio	√	√	√	√	√	0769 0269 07A7 07A8
2023	Cadillac	Escalade	Video Display - Right Front Seat Back	√	√	√			
2023	Cadillac	Escalade	Chassis Control Module - Auxiliary	√	√	√	√	√	
2023	Cadillac	Escalade	Frontview Camera - Windshield	√	√	√	√		0196
2023	Cadillac	Escalade	Gear Shift Control Module	√					
2023	Cadillac	Escalade	Parking Assist Control Module	√	√	√	√	√	
2023	Cadillac	Escalade	Lighting Control Module	√	√	√	√	√	
2023	Cadillac	Escalade	Side Obstacle Detection Control Module - Left	√	√	√			
2023	Cadillac	Escalade	Side Obstacle Detection Control Module - Right	√	√	√			
2023	Cadillac	Escalade	Steering Column Lock Control Module	√	√	√	√		
2023	Cadillac	Escalade	Wireless Accessory Charging Module	√	√	√	√		
2023	Cadillac	Escalade	Video Processing Module	√	√	√	√		
2023	Cadillac	Escalade	Night Vision Control Module	√	√	√	√		
2023	Cadillac	Escalade	Running Board Control Module	√	√	√	√	√	
2023	Cadillac	Escalade	Trailer Lamp Control Module	√	√	√	√	√	
2023	Cadillac	Escalade	Differential Control Module	√	√	√	√	√	07B7 07B8
2023	Cadillac	Escalade	Image Processing Module	√	√	√	√		
2023	Cadillac	Escalade	Driver Monitoring System Control Module	√	√	√			
2023	Cadillac	Escalade	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Cadillac	Escalade	Image Processing Module 1 - Processor 1	√	√	√	√		
2023	Cadillac	Escalade	Image Processing Module 1 - Processor 2	√	√	√			0758
2023	Cadillac	Escalade	Short Range Radar Sensor - Left Front	√	√	√			0772
2023	Cadillac	Escalade	Short Range Radar Sensor - Left Rear	√	√	√			0772
2023	Cadillac	Escalade	Short Range Radar Sensor - Right Front	√	√	√			0772
2023	Cadillac	Escalade	Short Range Radar Sensor - Right Rear	√	√	√			0772
2023	Cadillac	Escalade	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	Cadillac	Escalade	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2023	Cadillac	Escalade	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2023	Cadillac	Escalade	Power Steering Control Module	√	√	√	√		0089
2023	Cadillac	Escalade	Electronic Suspension Control Module	√	√	√	√	√	0198
2023	Cadillac	Escalade	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D

2023	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0263 0209 075E 075F 0778 076C 0115 076D 0779 0086 0085 0097 0221 0757 077A 077B 077C 077D 0764 0763 0117 0119 0258 07CE 077E 077F 0780 0781 0782 0783 0784 076E 0212 0217 0775 0139 0156 0076 0773 0774 07CD 0154 0144
2023	Cadillac	Escalade ESV	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2023	Cadillac	Escalade ESV	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2023	Cadillac	Escalade ESV	Restraints Control Module	√	√	√	√	√	0758 0134
2023	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	Cadillac	Escalade ESV	Instrument Panel Cluster Control Module	√	√	√	√	√	
2023	Cadillac	Escalade ESV	Serial Data Gateway Module	√	√	√			
2023	Cadillac	Escalade ESV	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	Cadillac	Escalade ESV	Headlamp Control Module	√	√	√	√		0195
2023	Cadillac	Escalade ESV	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2023	Cadillac	Escalade ESV	Rear Gate Module	√	√	√	√		
2023	Cadillac	Escalade ESV	Telematics Control Module	√	√	√	√		0270 0755
2023	Cadillac	Escalade ESV	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2023	Cadillac	Escalade ESV	Audio Amplifier	√	√	√	√		
2023	Cadillac	Escalade ESV	Automated Driving Mapping Module	√	√	√	√	√	
2023	Cadillac	Escalade ESV	Heater and Air Conditioning Auxiliary Control	√	√	√			
2023	Cadillac	Escalade ESV	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	Cadillac	Escalade ESV	Infotainment Control Switch	√	√	√			
2023	Cadillac	Escalade ESV	Radio	√	√	√	√	√	0769 0269 07A7 07A8
2023	Cadillac	Escalade ESV	Video Display - Right Front Seat Back	√	√	√			
2023	Cadillac	Escalade ESV	Chassis Control Module - Auxiliary	√	√	√	√	√	
2023	Cadillac	Escalade ESV	Frontview Camera - Windshield	√	√	√	√		0196
2023	Cadillac	Escalade ESV	Gear Shift Control Module	√					
2023	Cadillac	Escalade ESV	Side Obstacle Detection Control Module - Left	√	√	√			
2023	Cadillac	Escalade ESV	Side Obstacle Detection Control Module - Right	√	√	√			
2023	Cadillac	Escalade ESV	Steering Column Lock Control Module	√	√	√	√		
2023	Cadillac	Escalade ESV	Wireless Accessory Charging Module	√	√	√	√		
2023	Cadillac	Escalade ESV	Video Processing Module	√	√	√	√		
2023	Cadillac	Escalade ESV	Night Vision Control Module	√	√	√	√		
2023	Cadillac	Escalade ESV	Running Board Control Module	√	√	√	√	√	
2023	Cadillac	Escalade ESV	Trailer Lamp Control Module	√	√	√	√	√	

2023	Cadillac	Escalade ESV	Differential Control Module	√	√	√	√	√	07B7 07B8
2023	Cadillac	Escalade ESV	Driver Monitoring System Control Module	√	√	√			
2023	Cadillac	Escalade ESV	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Cadillac	Escalade ESV	Image Processing Module 1 - Processor 1	√	√	√	√		
2023	Cadillac	Escalade ESV	Image Processing Module 1 - Processor 2	√	√	√			0758
2023	Cadillac	Escalade ESV	Image Processing Module	√	√	√	√		
2023	Cadillac	Escalade ESV	Short Range Radar Sensor - Left Front	√	√	√			0772
2023	Cadillac	Escalade ESV	Short Range Radar Sensor - Left Rear	√	√	√			0772
2023	Cadillac	Escalade ESV	Short Range Radar Sensor - Right Front	√	√	√			0772
2023	Cadillac	Escalade ESV	Short Range Radar Sensor - Right Rear	√	√	√			0772
2023	Cadillac	Escalade ESV	Parking Assist Control Module	√	√	√	√	√	
2023	Cadillac	Escalade ESV	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	Cadillac	Escalade ESV	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2023	Cadillac	Escalade ESV	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2023	Cadillac	Escalade ESV	Lighting Control Module	√	√	√	√	√	
2023	Cadillac	Escalade ESV	Radio Controls	√	√	√	√		
2023	Cadillac	Escalade ESV	Power Steering Control Module	√	√	√	√		0089
2023	Cadillac	Escalade ESV	Electronic Suspension Control Module	√	√	√	√	√	0198
2023	Cadillac	Escalade ESV	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2023	Cadillac	Lyriq	Brake System Control Module	√	√	√	√	√	0225 0229 078E 0767 0758 0090
2023	Cadillac	Lyriq	Restraints Control Module	√	√	√	√	√	0758 0134
2023	Cadillac	Lyriq	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	Cadillac	Lyriq	Serial Data Gateway Module	√	√	√			
2023	Cadillac	Lyriq	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	Cadillac	Lyriq	Headlamp Control Module	√	√	√	√		0195
2023	Cadillac	Lyriq	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2023	Cadillac	Lyriq	Rear Gate Module	√	√	√	√		0753
2023	Cadillac	Lyriq	Telematics Control Module	√	√	√	√		0270 0755
2023	Cadillac	Lyriq	Audio Amplifier	√	√	√	√		
2023	Cadillac	Lyriq	Heater and Air Conditioning Auxiliary Control	√	√	√			
2023	Cadillac	Lyriq	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	Cadillac	Lyriq	Infotainment Control Switch	√	√	√			
2023	Cadillac	Lyriq	Radio	√	√	√	√	√	07A8
2023	Cadillac	Lyriq	Wireless Accessory Charging Module	√	√	√	√		
2023	Cadillac	Lyriq	Drive Motor Control Module	√	√	√	√	√	07B9 0258
2023	Cadillac	Lyriq	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057

2023	Cadillac	Lyriq	Frontview Camera - Windshield	√	√	√	√		0196
2023	Cadillac	Lyriq	Parking Assist Control Module	√	√	√	√	√	
2023	Cadillac	Lyriq	Lighting Control Module	√	√	√	√	√	
2023	Cadillac	Lyriq	Steering Column Lock Control Module	√	√	√	√		
2023	Cadillac	Lyriq	Side Obstacle Detection Control Module - Left	√	√	√			
2023	Cadillac	Lyriq	Side Obstacle Detection Control Module - Right	√	√	√			
2023	Cadillac	Lyriq	Driver Monitoring System Control Module	√	√	√			
2023	Cadillac	Lyriq	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Cadillac	Lyriq	Image Processing Module 1 - Processor 1	√	√	√	√		
2023	Cadillac	Lyriq	Image Processing Module 1 - Processor 2	√	√	√			0758
2023	Cadillac	Lyriq	Image Processing Module	√	√	√	√		
2023	Cadillac	Lyriq	Short Range Radar Sensor - Left Front	√	√	√			0772
2023	Cadillac	Lyriq	Short Range Radar Sensor - Left Rear	√	√	√			0772
2023	Cadillac	Lyriq	Short Range Radar Sensor - Right Front	√	√	√			0772
2023	Cadillac	Lyriq	Short Range Radar Sensor - Right Rear	√	√	√			0772
2023	Cadillac	Lyriq	Drive Motor Control Module 2	√	√	√	√		07B9
2023	Cadillac	Lyriq	Battery Energy Control Module	√	√	√	√	√	07BA 0115 07BB 07BC 07BD 07BE 0123 07BF 07C0 07C1 07C2 07C3 07C4 07C5 07C6 07C7
2023	Cadillac	Lyriq	Near Field Communication Module	√	√	√	√		
2023	Cadillac	Lyriq	Power Steering Control Module 2	√	√	√	√		
2023	Cadillac	Lyriq	Power Steering Control Module 1	√	√	√	√		0766 07C8
2023	Cadillac	XT4	Engine Control Module	√	√	√	√	√	0263 0209 0791 075E 076C 0115 076D 0058 0763 0764 0086 0097 0219 0221 0792 0073 0072 0070 0071 0117 0119 0258 077E 0178 0180 0182 0184 0246 0760 0761 0085 0757 0212 0217 0006 0144
2023	Cadillac	XT4	Transmission Control Module	√	√	√	√	√	0017
2023	Cadillac	XT4	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768 0229 078F 0790
2023	Cadillac	XT4	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	Cadillac	XT4	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	Cadillac	XT4	Instrument Cluster	√	√	√	√	√	0247
2023	Cadillac	XT4	HVAC Control Module	√	√	√	√	√	0007 0129

2023	Cadillac	XT4	HVAC Controls	√	√	√	√		
2023	Cadillac	XT4	Headlamp Control Module	√	√	√	√	√	0195
2023	Cadillac	XT4	Liftgate Control Module	√	√	√	√	√	0146 0169
2023	Cadillac	XT4	Seat Memory Control Module - Driver	√	√	√	√	√	
2023	Cadillac	XT4	Seat Memory Control Module - Passenger	√	√	√	√	√	
2023	Cadillac	XT4	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	Cadillac	XT4	Power Steering Control Module	√	√	√	√		0081 0080 0089
2023	Cadillac	XT4	Suspension Control Module	√	√	√	√	√	
2023	Cadillac	XT4	Parking Assist Control Module	√	√	√	√	√	0247
2023	Cadillac	XT4	Serial Data Gateway Module - Processor 1	√	√	√			
2023	Cadillac	XT4	Serial Data Gateway Module - Processor 2	√	√	√			
2023	Cadillac	XT4	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	Cadillac	XT4	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	Cadillac	XT4	Steering Column Lock Control Module	√	√	√	√		
2023	Cadillac	XT4	Amplifier	√	√	√	√		
2023	Cadillac	XT4	Infotainment Control Switch	√	√	√			
2023	Cadillac	XT4	Radio Controls	√	√	√	√		
2023	Cadillac	XT4	Radio	√	√	√	√	√	0269 0793 0267 0226
2023	Cadillac	XT4	Video Processing Control Module	√	√	√	√	√	
2023	Cadillac	XT4	Trailer Lighting Control Module	√	√	√	√	√	0247
2023	Cadillac	XT4	Rear Drive Control Module	√	√	√	√	√	0003
2023	Cadillac	XT4	Active Safety Control Module	√	√	√	√	√	
2023	Cadillac	XT4	Frontview Camera - Windshield	√	√	√	√		0196
2023	Cadillac	XT4	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Cadillac	XT4	Short Range Radar Sensor - Rear Middle	√	√	√			
2023	Cadillac	XT4	Passenger Presence Module	√	√	√	√	√	0057
2023	Cadillac	XT4	Keyless Entry Control Module	√	√	√	√	√	
2023	Cadillac	XT5	Engine Control Module	√	√	√	√	√	0209 075E 0760 076C 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0259 0138 0756
2023	Cadillac	XT5	Transmission Control Module	√	√	√	√	√	0017
2023	Cadillac	XT5	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2023	Cadillac	XT5	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2023	Cadillac	XT5	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	Cadillac	XT5	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0159
2023	Cadillac	XT5	Instrument Cluster	√	√	√	√	√	0247

2023	Cadillac	XT5	HVAC Control Module	√	√	√	√	√	0007 0129
2023	Cadillac	XT5	HVAC Controls	√	√	√	√		
2023	Cadillac	XT5	Headlamp Control Module		√	√			
2023	Cadillac	XT5	Liftgate Control Module	√	√	√	√	√	0146 0169
2023	Cadillac	XT5	Seat Memory Control Module - Driver	√	√	√	√	√	
2023	Cadillac	XT5	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	Cadillac	XT5	Power Steering Control Module	√	√	√	√		0081 0080 0089
2023	Cadillac	XT5	Suspension Control Module	√	√	√	√	√	
2023	Cadillac	XT5	Parking Assist Control Module	√	√	√	√	√	0247
2023	Cadillac	XT5	Serial Data Gateway Module - Processor 1	√	√	√			
2023	Cadillac	XT5	Serial Data Gateway Module - Processor 2	√	√	√			
2023	Cadillac	XT5	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	Cadillac	XT5	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	Cadillac	XT5	Steering Column Lock Control Module	√	√	√	√		
2023	Cadillac	XT5	Amplifier	√	√	√	√		
2023	Cadillac	XT5	Infotainment Control Switch	√	√	√			
2023	Cadillac	XT5	Radio Controls	√	√	√	√		
2023	Cadillac	XT5	Radio	√	√	√	√	√	0269 0793 0267 0226
2023	Cadillac	XT5	Night Vision Camera Control Module	√	√	√	√		0492
2023	Cadillac	XT5	Video Processing Control Module	√	√	√	√	√	
2023	Cadillac	XT5	Trailer Lighting Control Module	√	√	√	√	√	0247
2023	Cadillac	XT5	Rear Drive Control Module	√	√	√	√	√	0003
2023	Cadillac	XT5	Active Safety Control Module	√	√	√	√	√	
2023	Cadillac	XT5	Frontview Camera - Windshield	√	√	√	√		0196
2023	Cadillac	XT5	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Cadillac	XT5	Short Range Radar Sensor - Rear Middle	√	√	√			
2023	Cadillac	XT5	Keyless Entry Control Module	√	√	√	√	√	0759
2023	Cadillac	XT5	Passenger Presence Module	√	√	√	√	√	0057
2023	Cadillac	XT5	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2023	Cadillac	XT5	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2023	Cadillac	XT6	Engine Control Module	√	√	√	√	√	0209 075E 0760 076C 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0138 0256
2023	Cadillac	XT6	Transmission Control Module	√	√	√	√	√	0017
2023	Cadillac	XT6	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2023	Cadillac	XT6	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2023	Cadillac	XT6	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2023	Cadillac	XT6	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	Cadillac	XT6	Instrument Cluster	√	√	√	√	√	0247
2023	Cadillac	XT6	HVAC Control Module	√	√	√	√	√	0007 0129
2023	Cadillac	XT6	HVAC Controls	√	√	√	√		
2023	Cadillac	XT6	Headlamp Control Module	√	√	√	√	√	0195
2023	Cadillac	XT6	Liftgate Control Module	√	√	√	√	√	0146 0169
2023	Cadillac	XT6	Seat Memory Control Module - Driver	√	√	√	√	√	
2023	Cadillac	XT6	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	Cadillac	XT6	Parking Assist Control Module	√	√	√	√	√	0247
2023	Cadillac	XT6	Serial Data Gateway Module - Processor 1	√	√	√			
2023	Cadillac	XT6	Serial Data Gateway Module - Processor 2	√	√	√			
2023	Cadillac	XT6	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	Cadillac	XT6	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	Cadillac	XT6	Steering Column Lock Control Module	√	√	√	√		
2023	Cadillac	XT6	Amplifier	√	√	√	√		
2023	Cadillac	XT6	Infotainment Control Switch	√	√	√			
2023	Cadillac	XT6	Radio Controls	√	√	√	√		
2023	Cadillac	XT6	Radio	√	√	√	√	√	0269 0793 0267 0226
2023	Cadillac	XT6	Night Vision Camera Control Module	√	√	√	√		0492
2023	Cadillac	XT6	Video Processing Control Module	√	√	√	√	√	
2023	Cadillac	XT6	Trailer Lighting Control Module	√	√	√	√	√	0247
2023	Cadillac	XT6	Rear Drive Control Module	√	√	√	√	√	0003
2023	Cadillac	XT6	Active Safety Control Module	√	√	√	√	√	
2023	Cadillac	XT6	Active Safety Control Module 1 - Processor A	√	√	√	√		0268 0794
2023	Cadillac	XT6	Active Safety Control Module 1 - Processor B	√	√	√	√		0111 0268
2023	Cadillac	XT6	Active Safety Control Module 1 - Processor C	√	√	√	√		0268
2023	Cadillac	XT6	Active Safety Control Module 2 - Processor A	√	√	√	√		0268 0794
2023	Cadillac	XT6	Active Safety Control Module 2 - Processor B	√	√	√	√		0111 0268
2023	Cadillac	XT6	Active Safety Control Module 2 - Processor C	√	√	√	√		0268
2023	Cadillac	XT6	Driver Monitoring System Control Module	√	√	√	√		
2023	Cadillac	XT6	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Cadillac	XT6	Frontview Camera - Windshield	√	√	√	√		0196
2023	Cadillac	XT6	Short Range Radar Sensor - Rear Middle	√	√	√			
2023	Cadillac	XT6	Keyless Entry Control Module	√	√	√	√	√	0759
2023	Cadillac	XT6	Passenger Presence Module	√	√	√	√	√	0057
2023	Cadillac	XT6	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2023	Cadillac	XT6	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2023	Cadillac	XT6	Power Steering Control Module	√	√	√	√		0089 0084

2023	Cadillac	XT6	Suspension Control Module	√	√	√	√	√	
2022	Cadillac	CT4	Transfer Case Control Module	√	√	√	√	√	0099 0100
2022	Cadillac	CT4	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2022	Cadillac	CT4	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2022	Cadillac	CT4	Telematics Control Module	√	√	√	√		0270
2022	Cadillac	CT4	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2022	Cadillac	CT4	Automated Driving Mapping Module	√	√	√	√	√	
2022	Cadillac	CT4	Engine Control Module	√	√	√	√	√	0263 0209 075D 075E 076B 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0764 0763 0258 0139 0770 0771 0757
2022	Cadillac	CT4	Audio Amplifier	√	√	√	√		
2022	Cadillac	CT4	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2022	Cadillac	CT4	Infotainment Control Switch	√	√	√			
2022	Cadillac	CT4	Radio Controls	√	√	√	√		
2022	Cadillac	CT4	Radio	√	√	√	√	√	0769 0269
2022	Cadillac	CT4	Wireless Accessory Charging Module	√	√	√	√		
2022	Cadillac	CT4	Video Processing Module	√	√	√			
2022	Cadillac	CT4	Restraints Control Module	√	√	√	√	√	0758 0134
2022	Cadillac	CT4	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2022	Cadillac	CT4	Gear Shift Control Module	√					
2022	Cadillac	CT4	Instrument Panel Cluster Control Module	√	√	√	√	√	
2022	Cadillac	CT4	Lighting Control Module	√	√	√	√	√	
2022	Cadillac	CT4	Parking Assist Control Module	√	√	√	√	√	
2022	Cadillac	CT4	Serial Data Gateway Module	√	√	√			
2022	Cadillac	CT4	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2022	Cadillac	CT4	Side Obstacle Detection Control Module - Right	√	√	√			
2022	Cadillac	CT4	Steering Column Lock Control Module	√	√	√	√		
2022	Cadillac	CT4	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	Cadillac	CT4	Frontview Camera - Windshield	√	√	√	√		0196
2022	Cadillac	CT4	Image Processing Module	√	√	√	√		
2022	Cadillac	CT4	Short Range Radar Sensor - Left Rear	√	√	√			0772
2022	Cadillac	CT4	Short Range Radar Sensor - Right Rear	√	√	√			0772
2022	Cadillac	CT4	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758
2022	Cadillac	CT4	Electronic Suspension Control Module	√	√	√	√	√	0198
2022	Cadillac	CT4	Power Steering Control Module	√	√	√	√		0766
2022	Cadillac	CT4	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2022	Cadillac	CT5	Transfer Case Control Module	√	√	√	√	√	0099 0100

2022	Cadillac	CT5	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2022	Cadillac	CT5	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2022	Cadillac	CT5	Telematics Control Module	√	√	√	√		0270
2022	Cadillac	CT5	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2022	Cadillac	CT5	Audio Amplifier	√	√	√	√		
2022	Cadillac	CT5	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2022	Cadillac	CT5	Infotainment Control Switch	√	√	√			
2022	Cadillac	CT5	Radio Controls	√	√	√	√		
2022	Cadillac	CT5	Radio	√	√	√	√	√	0769 0269
2022	Cadillac	CT5	Engine Control Module	√	√	√	√	√	0263 0209 075D 075E 076B 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0764 0763 0258 0139 0770 0771 0757 0773 0774 0775
2022	Cadillac	CT5	Wireless Accessory Charging Module	√	√	√	√		
2022	Cadillac	CT5	Video Processing Module	√	√	√			
2022	Cadillac	CT5	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2022	Cadillac	CT5	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2022	Cadillac	CT5	Restraints Control Module	√	√	√	√	√	0758 0134
2022	Cadillac	CT5	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2022	Cadillac	CT5	Gear Shift Control Module	√					
2022	Cadillac	CT5	Instrument Panel Cluster Control Module	√	√	√	√	√	
2022	Cadillac	CT5	Lighting Control Module	√	√	√	√	√	
2022	Cadillac	CT5	Parking Assist Control Module	√	√	√	√	√	
2022	Cadillac	CT5	Serial Data Gateway Module	√	√	√			
2022	Cadillac	CT5	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2022	Cadillac	CT5	Side Obstacle Detection Control Module - Right	√	√	√			
2022	Cadillac	CT5	Steering Column Lock Control Module	√	√	√	√		
2022	Cadillac	CT5	Automated Driving Mapping Module	√	√	√	√	√	
2022	Cadillac	CT5	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	Cadillac	CT5	Frontview Camera - Windshield	√	√	√	√		0196
2022	Cadillac	CT5	Image Processing Module	√	√	√	√		
2022	Cadillac	CT5	Short Range Radar Sensor - Rear Middle	√	√	√			0772
2022	Cadillac	CT5	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758
2022	Cadillac	CT5	Electronic Suspension Control Module	√	√	√	√	√	
2022	Cadillac	CT5	Power Steering Control Module	√	√	√	√		0766
2022	Cadillac	CT5	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2022	Cadillac	CT5	UHF Short Range Low Energy Remote Control Access Transceiver	√	√	√			

2022	Cadillac	CT5	Differential Control Module	√	√	√	√	√	
2022	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2022	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0263 0209 0774 076C 0115 0086 0085 0757 0212 0217 0775 0258 0139 0777 075E 075F 0778 076D 0779 0097 0221 077A 077B 077C 077D 0764 0763 0117 0119 077E 077F 0780 0781 0782 0783 0784
2022	Cadillac	Escalade	Automated Driving Mapping Module	√	√	√	√	√	
2022	Cadillac	Escalade	Chassis Control Module - Auxiliary	√	√	√	√		
2022	Cadillac	Escalade	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2022	Cadillac	Escalade	Headlamp Control Module	√	√	√	√		0195
2022	Cadillac	Escalade	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2022	Cadillac	Escalade	Rear Gate Module	√	√	√	√		0753
2022	Cadillac	Escalade	Telematics Control Module	√	√	√	√		0270
2022	Cadillac	Escalade	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2022	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2022	Cadillac	Escalade	Audio Amplifier	√	√	√	√		
2022	Cadillac	Escalade	Heater and Air Conditioning Auxiliary Control	√	√	√			
2022	Cadillac	Escalade	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2022	Cadillac	Escalade	Infotainment Control Switch	√	√	√			
2022	Cadillac	Escalade	Radio Controls	√	√	√	√		
2022	Cadillac	Escalade	Radio	√	√	√	√	√	0769 0269
2022	Cadillac	Escalade	Video Display - Right Front Seat Back	√	√	√			
2022	Cadillac	Escalade	Running Board Control Module	√	√	√	√	√	
2022	Cadillac	Escalade	Trailer Lamp Control Module	√	√	√	√	√	
2022	Cadillac	Escalade	Video Processing Module	√	√	√			
2022	Cadillac	Escalade	Wireless Accessory Charging Module	√	√	√	√		
2022	Cadillac	Escalade	Night Vision Control Module	√	√	√	√		
2022	Cadillac	Escalade	Gear Shift Control Module	√					
2022	Cadillac	Escalade	Instrument Panel Cluster Control Module	√	√	√	√	√	
2022	Cadillac	Escalade	Parking Assist Control Module	√	√	√	√	√	
2022	Cadillac	Escalade	Serial Data Gateway Module	√	√	√			
2022	Cadillac	Escalade	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2022	Cadillac	Escalade	Side Obstacle Detection Control Module - Right	√	√	√			
2022	Cadillac	Escalade	Steering Column Lock Control Module	√	√	√	√		
2022	Cadillac	Escalade	Lighting Control Module	√	√	√	√	√	
2022	Cadillac	Escalade	Restraints Control Module	√	√	√	√	√	0758 0134

2022	Cadillac	Escalade	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2022	Cadillac	Escalade	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2022	Cadillac	Escalade	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2022	Cadillac	Escalade	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2022	Cadillac	Escalade	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2022	Cadillac	Escalade	Electronic Suspension Control Module	√	√	√	√	√	0198
2022	Cadillac	Escalade	Power Steering Control Module	√	√	√	√		0089
2022	Cadillac	Escalade ESV	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2022	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0263 0209 0774 076C 0115 0086 0085 0757 0212 0217 0775 0258 0139 0777 075E 075F 0778 076D 0779 0097 0221 077A 077B 077C 077D 0764 0763 0117 0119 077E 077F 0780 0781 0782 0783 0784
2022	Cadillac	Escalade ESV	Automated Driving Mapping Module	√	√	√	√	√	
2022	Cadillac	Escalade ESV	Chassis Control Module - Auxiliary	√	√	√	√		
2022	Cadillac	Escalade ESV	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2022	Cadillac	Escalade ESV	Headlamp Control Module	√	√	√	√		0195
2022	Cadillac	Escalade ESV	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2022	Cadillac	Escalade ESV	Rear Gate Module	√	√	√	√		0753
2022	Cadillac	Escalade ESV	Telematics Control Module	√	√	√	√		0270
2022	Cadillac	Escalade ESV	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2022	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2022	Cadillac	Escalade ESV	Audio Amplifier	√	√	√	√		
2022	Cadillac	Escalade ESV	Heater and Air Conditioning Auxiliary Control	√	√	√			
2022	Cadillac	Escalade ESV	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2022	Cadillac	Escalade ESV	Infotainment Control Switch	√	√	√			
2022	Cadillac	Escalade ESV	Radio Controls	√	√	√	√		
2022	Cadillac	Escalade ESV	Radio	√	√	√	√	√	0769 0269
2022	Cadillac	Escalade ESV	Video Display - Right Front Seat Back	√	√	√			
2022	Cadillac	Escalade ESV	Night Vision Control Module	√	√	√	√		
2022	Cadillac	Escalade ESV	Running Board Control Module	√	√	√	√	√	
2022	Cadillac	Escalade ESV	Trailer Lamp Control Module	√	√	√	√	√	
2022	Cadillac	Escalade ESV	Video Processing Module	√	√	√			
2022	Cadillac	Escalade ESV	Wireless Accessory Charging Module	√	√	√	√		

2022	Cadillac	Escalade ESV	Gear Shift Control Module	√					
2022	Cadillac	Escalade ESV	Instrument Panel Cluster Control Module	√	√	√	√	√	
2022	Cadillac	Escalade ESV	Lighting Control Module	√	√	√	√	√	
2022	Cadillac	Escalade ESV	Parking Assist Control Module	√	√	√	√	√	
2022	Cadillac	Escalade ESV	Serial Data Gateway Module	√	√	√			
2022	Cadillac	Escalade ESV	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2022	Cadillac	Escalade ESV	Side Obstacle Detection Control Module - Right	√	√	√			
2022	Cadillac	Escalade ESV	Steering Column Lock Control Module	√	√	√	√		
2022	Cadillac	Escalade ESV	Restraints Control Module	√	√	√	√	√	0758 0134
2022	Cadillac	Escalade ESV	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2022	Cadillac	Escalade ESV	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2022	Cadillac	Escalade ESV	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2022	Cadillac	Escalade ESV	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2022	Cadillac	Escalade ESV	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2022	Cadillac	Escalade ESV	Electronic Suspension Control Module	√	√	√	√	√	0198
2022	Cadillac	Escalade ESV	Power Steering Control Module	√	√	√	√		0089
2022	Cadillac	XT4	Engine Control Module	√	√	√	√	√	0263 0209 0791 075E 076C 0115 076D 0058 0763 0764 0086 0097 0219 0221 0792 0073 0072 0070 0071 0117 0119 0258 077E 0178 0180 0182 0184 0246 075D 0760 0761 0085 0757 0212 0217 0006
2022	Cadillac	XT4	Headlamp Control Module	√	√	√	√	√	0195
2022	Cadillac	XT4	Liftgate Control Module	√	√	√	√	√	0146 0169
2022	Cadillac	XT4	Seat Memory Control Module - Driver	√	√	√	√	√	
2022	Cadillac	XT4	Seat Memory Control Module - Passenger	√	√	√	√	√	
2022	Cadillac	XT4	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	Cadillac	XT4	Amplifier	√	√	√	√		
2022	Cadillac	XT4	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Cadillac	XT4	Radio Controls	√	√	√	√		0241
2022	Cadillac	XT4	Radio	√	√	√	√	√	0226 0267 0269
2022	Cadillac	XT4	HVAC Controls	√	√	√	√		
2022	Cadillac	XT4	Infotainment Control Switch	√	√	√			
2022	Cadillac	XT4	Video Processing Control Module	√	√	√	√	√	
2022	Cadillac	XT4	Trailer Lighting Control Module	√	√	√	√	√	0247
2022	Cadillac	XT4	Transmission Control Module	√	√	√	√	√	0017

2022	Cadillac	XT4	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Cadillac	XT4	Keyless Entry Control Module	√	√	√	√	√	
2022	Cadillac	XT4	Passenger Presence Module	√	√	√	√	√	0057
2022	Cadillac	XT4	Instrument Cluster	√	√	√	√	√	0247
2022	Cadillac	XT4	Parking Assist Control Module	√	√	√	√	√	0247
2022	Cadillac	XT4	Serial Data Gateway Module - Processor 1	√	√	√			
2022	Cadillac	XT4	Serial Data Gateway Module - Processor 2	√	√	√			
2022	Cadillac	XT4	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	Cadillac	XT4	Side Obstacle Detection Control Module - Right	√	√	√		√	
2022	Cadillac	XT4	Steering Column Lock Control Module	√	√	√	√		
2022	Cadillac	XT4	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2022	Cadillac	XT4	Power Steering Control Module	√	√	√	√		0081 0080 0089
2022	Cadillac	XT4	Suspension Control Module	√	√	√	√	√	
2022	Cadillac	XT4	Active Safety Control Module	√	√	√	√	√	
2022	Cadillac	XT4	Frontview Camera - Windshield	√	√	√	√		0196
2022	Cadillac	XT4	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	Cadillac	XT4	Short Range Radar Sensor - Rear Middle	√	√	√			
2022	Cadillac	XT4	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	Cadillac	XT4	Rear Drive Control Module	√	√	√	√	√	0003
2022	Cadillac	XT5	Headlamp Control Module		√	√			
2022	Cadillac	XT5	Liftgate Control Module	√	√	√	√	√	0146 0169
2022	Cadillac	XT5	Seat Memory Control Module - Driver	√	√	√	√	√	
2022	Cadillac	XT5	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	Cadillac	XT5	Amplifier	√	√	√	√		
2022	Cadillac	XT5	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Cadillac	XT5	HVAC Controls	√	√	√	√		
2022	Cadillac	XT5	Infotainment Control Switch	√	√	√			
2022	Cadillac	XT5	Radio Controls	√	√	√	√		0241
2022	Cadillac	XT5	Radio	√	√	√	√	√	0226 0267 0269
2022	Cadillac	XT5	Transmission Control Module	√	√	√	√	√	0017
2022	Cadillac	XT5	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0138 0756
2022	Cadillac	XT5	Night Vision Camera Control Module	√	√	√	√		0492
2022	Cadillac	XT5	Trailer Lighting Control Module	√	√	√	√	√	0247
2022	Cadillac	XT5	Video Processing Control Module	√	√	√	√	√	
2022	Cadillac	XT5	Instrument Cluster	√	√	√	√	√	0247

2022	Cadillac	XT5	Parking Assist Control Module	√	√	√	√	√	0247
2022	Cadillac	XT5	Serial Data Gateway Module - Processor 1	√	√	√			
2022	Cadillac	XT5	Serial Data Gateway Module - Processor 2	√	√	√			
2022	Cadillac	XT5	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	Cadillac	XT5	Side Obstacle Detection Control Module - Right	√	√	√		√	
2022	Cadillac	XT5	Steering Column Lock Control Module	√	√	√	√		
2022	Cadillac	XT5	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Cadillac	XT5	Keyless Entry Control Module	√	√	√	√	√	0759
2022	Cadillac	XT5	Passenger Presence Module	√	√	√	√	√	0057
2022	Cadillac	XT5	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2022	Cadillac	XT5	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2022	Cadillac	XT5	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0158
2022	Cadillac	XT5	Active Safety Control Module	√	√	√	√	√	
2022	Cadillac	XT5	Frontview Camera - Windshield	√	√	√	√		0196
2022	Cadillac	XT5	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	Cadillac	XT5	Short Range Radar Sensor - Rear Middle	√	√	√			
2022	Cadillac	XT5	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2022	Cadillac	XT5	Power Steering Control Module	√	√	√	√		0089 0084
2022	Cadillac	XT5	Suspension Control Module	√	√	√	√	√	
2022	Cadillac	XT5	Rear Drive Control Module	√	√	√	√	√	0003
2022	Cadillac	XT6	Trailer Lighting Control Module	√	√	√	√	√	0247
2022	Cadillac	XT6	Headlamp Control Module	√	√	√	√	√	0195
2022	Cadillac	XT6	Liftgate Control Module	√	√	√	√	√	0146 0169
2022	Cadillac	XT6	Seat Memory Control Module - Driver	√	√	√	√	√	
2022	Cadillac	XT6	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	Cadillac	XT6	Amplifier	√	√	√	√		
2022	Cadillac	XT6	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Cadillac	XT6	Infotainment Control Switch	√	√	√			
2022	Cadillac	XT6	Radio Controls	√	√	√	√		0241
2022	Cadillac	XT6	Radio	√	√	√	√	√	0226 0267 0269
2022	Cadillac	XT6	HVAC Controls	√	√	√	√		
2022	Cadillac	XT6	Transmission Control Module	√	√	√	√	√	0017
2022	Cadillac	XT6	Night Vision Camera Control Module	√	√	√	√		0492
2022	Cadillac	XT6	Video Processing Control Module	√	√	√	√	√	

2022	Cadillac	XT6	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 0756
2022	Cadillac	XT6	Instrument Cluster	√	√	√	√	√	0247
2022	Cadillac	XT6	Parking Assist Control Module	√	√	√	√	√	0247
2022	Cadillac	XT6	Serial Data Gateway Module - Processor 1	√	√	√			
2022	Cadillac	XT6	Serial Data Gateway Module - Processor 2	√	√	√			
2022	Cadillac	XT6	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	Cadillac	XT6	Side Obstacle Detection Control Module - Right	√	√	√		√	
2022	Cadillac	XT6	Steering Column Lock Control Module	√	√	√	√		
2022	Cadillac	XT6	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Cadillac	XT6	Keyless Entry Control Module	√	√	√	√	√	0759
2022	Cadillac	XT6	Passenger Presence Module	√	√	√	√	√	0057
2022	Cadillac	XT6	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2022	Cadillac	XT6	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2022	Cadillac	XT6	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0159
2022	Cadillac	XT6	Active Safety Control Module	√	√	√	√	√	
2022	Cadillac	XT6	Frontview Camera - Windshield	√	√	√	√		0196
2022	Cadillac	XT6	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	Cadillac	XT6	Short Range Radar Sensor - Rear Middle	√	√	√			
2022	Cadillac	XT6	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2022	Cadillac	XT6	Power Steering Control Module	√	√	√	√		0089 0084
2022	Cadillac	XT6	Suspension Control Module	√	√	√	√	√	
2021	Cadillac	CT4	Gear Shift Control Module	√					
2021	Cadillac	CT4	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2021	Cadillac	CT4	Wireless Accessory Charging Module	√	√	√	√		
2021	Cadillac	CT4	Engine Control Module	√	√	√	√	√	0263 0209 075D 075E 076B 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0764 0763 0258 0139
2021	Cadillac	CT4	Steering Column Lock Control Module	√	√	√	√		
2021	Cadillac	CT4	Instrument Panel Cluster Control Module	√	√	√	√	√	
2021	Cadillac	CT4	Parking Assist Control Module	√	√	√	√	√	
2021	Cadillac	CT4	Serial Data Gateway Module	√	√	√			
2021	Cadillac	CT4	Lighting Control Module	√	√	√	√	√	

2021	Cadillac	CT4	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2021	Cadillac	CT4	Side Obstacle Detection Control Module - Right	√	√	√			
2021	Cadillac	CT4	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2021	Cadillac	CT4	Restraints Control Module	√	√	√	√	√	0758 0134
2021	Cadillac	CT4	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758
2021	Cadillac	CT4	Electronic Suspension Control Module	√	√	√	√	√	0198
2021	Cadillac	CT4	Power Steering Control Module	√	√	√	√		0766
2021	Cadillac	CT4	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2021	Cadillac	CT4	Frontview Camera - Windshield	√	√	√	√		0196
2021	Cadillac	CT4	Image Processing Module	√	√	√	√		
2021	Cadillac	CT4	Short Range Radar Sensor - Left Rear	√	√	√			0772
2021	Cadillac	CT4	Short Range Radar Sensor - Right Rear	√	√	√			0772
2021	Cadillac	CT4	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Cadillac	CT4	Automated Driving Mapping Module	√	√	√	√	√	
2021	Cadillac	CT4	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2021	Cadillac	CT4	Audio Amplifier	√	√	√	√		
2021	Cadillac	CT4	Radio	√	√	√	√	√	0269 0769
2021	Cadillac	CT4	Infotainment Control Switch	√	√	√			
2021	Cadillac	CT4	Radio Controls	√	√	√	√		
2021	Cadillac	CT4	Video Processing Module	√	√	√			
2021	Cadillac	CT4	Telematics Control Module	√	√	√	√		0270
2021	Cadillac	CT4	Transfer Case Control Module	√	√	√	√	√	0099 0100
2021	Cadillac	CT4	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2021	Cadillac	CT4	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2021	Cadillac	CT4	Differential Control Module	√	√	√	√	√	
2021	Cadillac	CT4	Image Processing Module 1 - Processor 1	√	√	√	√		
2021	Cadillac	CT4	Image Processing Module 1 - Processor 2	√	√	√			0758
2021	Cadillac	CT4	Driver Monitoring System Control Module	√	√	√			
2021	Cadillac	CT4	Short Range Radar Sensor - Left Front	√	√	√			0772
2021	Cadillac	CT4	Short Range Radar Sensor - Right Front	√	√	√			0772
2021	Cadillac	CT5	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2021	Cadillac	CT5	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2021	Cadillac	CT5	Video Processing Module	√	√	√			
2021	Cadillac	CT5	Wireless Accessory Charging Module	√	√	√	√		
2021	Cadillac	CT5	Engine Control Module	√	√	√	√	√	0263 0209 075D 075E 076B 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0764 0763 0258 0139 0770 0771
2021	Cadillac	CT5	Gear Shift Control Module	√					

2021	Cadillac	CT5	Instrument Panel Cluster Control Module	√	√	√	√	√	
2021	Cadillac	CT5	Lighting Control Module	√	√	√	√	√	
2021	Cadillac	CT5	Parking Assist Control Module	√	√	√	√	√	
2021	Cadillac	CT5	Serial Data Gateway Module	√	√	√			
2021	Cadillac	CT5	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2021	Cadillac	CT5	Side Obstacle Detection Control Module - Right	√	√	√			
2021	Cadillac	CT5	Steering Column Lock Control Module	√	√	√	√		
2021	Cadillac	CT5	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2021	Cadillac	CT5	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2021	Cadillac	CT5	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2021	Cadillac	CT5	Restraints Control Module	√	√	√	√	√	0758 0134
2021	Cadillac	CT5	UHF Short Range Low Energy Remote Control Access Transceiver	√	√	√			
2021	Cadillac	CT5	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758
2021	Cadillac	CT5	Electronic Suspension Control Module	√	√	√	√	√	
2021	Cadillac	CT5	Power Steering Control Module	√	√	√	√		0766
2021	Cadillac	CT5	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2021	Cadillac	CT5	Frontview Camera - Windshield	√	√	√	√		0196
2021	Cadillac	CT5	Image Processing Module	√	√	√	√		
2021	Cadillac	CT5	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Cadillac	CT5	Short Range Radar Sensor - Rear Middle	√	√	√			0772
2021	Cadillac	CT5	Automated Driving Mapping Module	√	√	√	√	√	
2021	Cadillac	CT5	Radio	√	√	√	√	√	0269 0769
2021	Cadillac	CT5	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2021	Cadillac	CT5	Audio Amplifier	√	√	√	√		
2021	Cadillac	CT5	Differential Control Module	√	√	√	√	√	
2021	Cadillac	CT5	Infotainment Control Switch	√	√	√			
2021	Cadillac	CT5	Radio Controls	√	√	√	√		
2021	Cadillac	CT5	Telematics Control Module	√	√	√	√		0270
2021	Cadillac	CT5	Transfer Case Control Module	√	√	√	√	√	0099 0100
2021	Cadillac	CT5	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2021	Cadillac	CT5	Driver Monitoring System Control Module	√	√	√			
2021	Cadillac	CT5	Image Processing Module 1 - Processor 1	√	√	√	√		
2021	Cadillac	CT5	Image Processing Module 1 - Processor 2	√	√	√			0758
2021	Cadillac	CT5	Short Range Radar Sensor - Left Front	√	√	√			0772
2021	Cadillac	CT5	Short Range Radar Sensor - Right Front	√	√	√			0772
2021	Cadillac	CT5	Short Range Radar Sensor - Left Rear	√	√	√			0772
2021	Cadillac	CT5	Short Range Radar Sensor - Right Rear	√	√	√			0772
2021	Cadillac	CT6	Night Vision Camera Control Module	√	√	√	√		0492
2021	Cadillac	CT6	Headlamp Control Module	√	√	√	√	√	0195

2021	Cadillac	CT6	Headlamp High Beam Control Module	√	√	√	√	√	0247
2021	Cadillac	CT6	Liftgate Control Module	√	√	√	√	√	0146 0169
2021	Cadillac	CT6	Seat Memory Control Module - Driver	√	√	√	√	√	
2021	Cadillac	CT6	Seat Memory Control Module - Left Rear	√	√	√	√	√	
2021	Cadillac	CT6	Seat Memory Control Module - Passenger	√	√	√	√	√	
2021	Cadillac	CT6	Seat Memory Control Module - Right Rear	√	√	√	√	√	
2021	Cadillac	CT6	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	Cadillac	CT6	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Cadillac	CT6	Amplifier	√	√	√	√		
2021	Cadillac	CT6	HVAC Controls	√	√	√	√		
2021	Cadillac	CT6	Infotainment Control Switch	√	√	√			
2021	Cadillac	CT6	Radio Controls	√	√	√	√		
2021	Cadillac	CT6	Radio	√	√	√	√	√	0226 0267 0269
2021	Cadillac	CT6	Instrument Cluster	√	√	√	√	√	0247
2021	Cadillac	CT6	Parking Assist Control Module	√	√	√	√	√	0247
2021	Cadillac	CT6	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Cadillac	CT6	Serial Data Gateway Module - Processor 1	√	√	√			
2021	Cadillac	CT6	Serial Data Gateway Module - Processor 2	√	√	√			
2021	Cadillac	CT6	Steering Column Lock Control Module	√	√	√	√		
2021	Cadillac	CT6	Transfer Case Control Module	√	√	√	√	√	0037 0099
2021	Cadillac	CT6	Active Safety Control Module 1 - Processor A	√	√	√	√		0794 0268
2021	Cadillac	CT6	Active Safety Control Module 1 - Processor B	√	√	√	√		0111 0268
2021	Cadillac	CT6	Active Safety Control Module 1 - Processor C	√	√	√	√		0268
2021	Cadillac	CT6	Active Safety Control Module 2 - Processor A	√	√	√	√		0794 0268
2021	Cadillac	CT6	Active Safety Control Module 2 - Processor B	√	√	√	√		0111 0268
2021	Cadillac	CT6	Active Safety Control Module 2 - Processor C	√	√	√	√		0268
2021	Cadillac	CT6	Active Safety Control Module	√	√	√	√	√	
2021	Cadillac	CT6	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Cadillac	CT6	Frontview Camera - Windshield	√	√	√	√		0196
2021	Cadillac	CT6	Short Range Radar Sensor - Left Front	√	√	√			
2021	Cadillac	CT6	Short Range Radar Sensor - Left Rear	√	√	√			
2021	Cadillac	CT6	Short Range Radar Sensor - Rear Middle	√	√	√			
2021	Cadillac	CT6	Short Range Radar Sensor - Right Front	√	√	√			
2021	Cadillac	CT6	Short Range Radar Sensor - Right Rear	√	√	√			
2021	Cadillac	CT6	Driver Monitoring System Control Module	√	√	√	√	√	
2021	Cadillac	CT6	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2021	Cadillac	CT6	Power Steering Control Module	√	√	√	√		0081 0080 0089
2021	Cadillac	Escalade	Video Processing Module	√	√	√			
2021	Cadillac	Escalade	Wireless Accessory Charging Module	√	√	√	√		
2021	Cadillac	Escalade	Trailer Lamp Control Module	√	√	√	√	√	

2021	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2021	Cadillac	Escalade	Chassis Control Module - Auxiliary	√	√	√	√		
2021	Cadillac	Escalade	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2021	Cadillac	Escalade	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2021	Cadillac	Escalade	Rear Gate Module	√	√	√	√		0753
2021	Cadillac	Escalade	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2021	Cadillac	Escalade	Electronic Suspension Control Module	√	√	√	√	√	0198
2021	Cadillac	Escalade	Power Steering Control Module	√	√	√	√		0089
2021	Cadillac	Escalade	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2021	Cadillac	Escalade	Running Board Control Module	√	√	√	√	√	
2021	Cadillac	Escalade	Instrument Panel Cluster Control Module	√	√	√	√	√	
2021	Cadillac	Escalade	Parking Assist Control Module	√	√	√	√	√	
2021	Cadillac	Escalade	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2021	Cadillac	Escalade	Side Obstacle Detection Control Module - Right	√	√	√			
2021	Cadillac	Escalade	Serial Data Gateway Module	√	√	√			
2021	Cadillac	Escalade	Steering Column Lock Control Module	√	√	√	√		
2021	Cadillac	Escalade	Restraints Control Module	√	√	√	√	√	0758 0134
2021	Cadillac	Escalade	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2021	Cadillac	Escalade	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2021	Cadillac	Escalade	Audio Amplifier	√	√	√	√		
2021	Cadillac	Escalade	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2021	Cadillac	Escalade	Infotainment Control Switch	√	√	√			
2021	Cadillac	Escalade	Radio	√	√	√	√	√	0769 0269 07A7 07A8
2021	Cadillac	Escalade	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2021	Cadillac	Escalade	Lighting Control Module	√	√	√	√	√	
2021	Cadillac	Escalade	Gear Shift Control Module	√					
2021	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0263 0209 0774 076C 0115 0086 0085 0757 0212 0217 0775 0258 0139 0777 075E 075F 0778 076D 0779 0097 0221 077A 077B 077C 077D 0764 0763 0117 0119 077E 077F 0780 0781 0782 0783 0784
2021	Cadillac	Escalade	Headlamp Control Module	√	√	√	√		0195
2021	Cadillac	Escalade	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Cadillac	Escalade	Frontview Camera - Windshield	√	√	√	√		0196
2021	Cadillac	Escalade	Image Processing Module	√	√	√	√		
2021	Cadillac	Escalade	Short Range Radar Sensor - Left Front	√	√	√			0772

2021	Cadillac	Escalade	Short Range Radar Sensor - Left Rear	√	√	√			0772
2021	Cadillac	Escalade	Short Range Radar Sensor - Right Front	√	√	√			0772
2021	Cadillac	Escalade	Short Range Radar Sensor - Right Rear	√	√	√			0772
2021	Cadillac	Escalade	Driver Monitoring System Control Module	√	√	√			
2021	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2021	Cadillac	Escalade	Video Display - Right Front Seat Back	√	√	√			
2021	Cadillac	Escalade	Automated Driving Mapping Module	√	√	√	√	√	
2021	Cadillac	Escalade	Differential Control Module	√	√	√	√	√	
2021	Cadillac	Escalade	Heater and Air Conditioning Auxiliary Control	√	√	√			
2021	Cadillac	Escalade	Radio Controls	√	√	√	√		
2021	Cadillac	Escalade	Telematics Control Module	√	√	√	√		0270
2021	Cadillac	Escalade	Night Vision Control Module	√	√	√	√		
2021	Cadillac	Escalade	Image Processing Module 1 - Processor 1	√	√	√	√		
2021	Cadillac	Escalade	Image Processing Module 1 - Processor 2	√	√	√			0758
2021	Cadillac	Escalade	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2021	Cadillac	Escalade ESV	Video Processing Module	√	√	√			
2021	Cadillac	Escalade ESV	Wireless Accessory Charging Module	√	√	√	√		
2021	Cadillac	Escalade ESV	Trailer Lamp Control Module	√	√	√	√	√	
2021	Cadillac	Escalade ESV	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2021	Cadillac	Escalade ESV	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2021	Cadillac	Escalade ESV	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2021	Cadillac	Escalade ESV	Rear Gate Module	√	√	√	√		0753
2021	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0263 0209 0774 076C 0115 0086 0085 0757 0212 0217 0775 0258 0139 0777 075E 075F 0778 076D 0779 0097 0221 077A 077B 077C 077D 0764 0763 0117 0119 077E 077F 0780 0781 0782 0783 0784 0768 0229 0225 078E 0767 0758 0090 078F
2021	Cadillac	Escalade ESV	Brake System Control Module	√	√	√	√	√	
2021	Cadillac	Escalade ESV	Electronic Suspension Control Module	√	√	√	√	√	0198
2021	Cadillac	Escalade ESV	Power Steering Control Module	√	√	√	√		0089
2021	Cadillac	Escalade ESV	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2021	Cadillac	Escalade ESV	Running Board Control Module	√	√	√	√	√	
2021	Cadillac	Escalade ESV	Instrument Panel Cluster Control Module	√	√	√	√	√	
2021	Cadillac	Escalade ESV	Parking Assist Control Module	√	√	√	√	√	

2021	Cadillac	Escalade ESV	Serial Data Gateway Module	√	√	√			
2021	Cadillac	Escalade ESV	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2021	Cadillac	Escalade ESV	Side Obstacle Detection Control Module - Right	√	√	√			
2021	Cadillac	Escalade ESV	Steering Column Lock Control Module	√	√	√	√		
2021	Cadillac	Escalade ESV	Restraints Control Module	√	√	√	√	√	0758 0134
2021	Cadillac	Escalade ESV	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2021	Cadillac	Escalade ESV	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2021	Cadillac	Escalade ESV	Audio Amplifier	√	√	√	√		
2021	Cadillac	Escalade ESV	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2021	Cadillac	Escalade ESV	Infotainment Control Switch	√	√	√			
2021	Cadillac	Escalade ESV	Radio	√	√	√	√	√	0769 0269 07A7 07A8
2021	Cadillac	Escalade ESV	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2021	Cadillac	Escalade ESV	Lighting Control Module	√	√	√	√	√	
2021	Cadillac	Escalade ESV	Gear Shift Control Module	√					
2021	Cadillac	Escalade ESV	Chassis Control Module - Auxiliary	√	√	√	√		
2021	Cadillac	Escalade ESV	Headlamp Control Module	√	√	√	√		0195
2021	Cadillac	Escalade ESV	Frontview Camera - Windshield	√	√	√	√		0196
2021	Cadillac	Escalade ESV	Image Processing Module	√	√	√	√		
2021	Cadillac	Escalade ESV	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Cadillac	Escalade ESV	Short Range Radar Sensor - Left Front	√	√	√			0772
2021	Cadillac	Escalade ESV	Parking Brake Control Module	√	√	√	√	√	0229
2021	Cadillac	Escalade ESV	Short Range Radar Sensor - Left Rear	√	√	√			0772
2021	Cadillac	Escalade ESV	Short Range Radar Sensor - Right Front	√	√	√			0772
2021	Cadillac	Escalade ESV	Short Range Radar Sensor - Right Rear	√	√	√			0772
2021	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2021	Cadillac	Escalade ESV	Video Display - Right Front Seat Back	√	√	√			
2021	Cadillac	Escalade ESV	Automated Driving Mapping Module	√	√	√	√	√	
2021	Cadillac	Escalade ESV	Differential Control Module	√	√	√	√	√	
2021	Cadillac	Escalade ESV	Heater and Air Conditioning Auxiliary Control	√	√	√			
2021	Cadillac	Escalade ESV	Radio Controls	√	√	√	√		
2021	Cadillac	Escalade ESV	Telematics Control Module	√	√	√	√		0270
2021	Cadillac	Escalade ESV	Night Vision Control Module	√	√	√	√		
2021	Cadillac	Escalade ESV	Image Processing Module 1 - Processor 1	√	√	√	√		
2021	Cadillac	Escalade ESV	Image Processing Module 1 - Processor 2	√	√	√			0758
2021	Cadillac	Escalade ESV	Driver Monitoring System Control Module	√	√	√			
2021	Cadillac	Escalade ESV	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2021	Cadillac	XT4	Video Processing Control Module	√	√	√	√	√	
2021	Cadillac	XT4	Liftgate Control Module	√	√	√	√	√	0146 0169
2021	Cadillac	XT4	Seat Memory Control Module - Driver	√	√	√	√	√	
2021	Cadillac	XT4	Seat Memory Control Module - Passenger	√	√	√	√	√	

2021	Cadillac	XT4	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	Cadillac	XT4	Trailer Lighting Control Module	√	√	√	√	√	0247
2021	Cadillac	XT4	Transmission Control Module	√	√	√	√	√	0017
2021	Cadillac	XT4	Instrument Cluster	√	√	√	√	√	0247
2021	Cadillac	XT4	Parking Assist Control Module	√	√	√	√	√	0247
2021	Cadillac	XT4	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Cadillac	XT4	Side Obstacle Detection Control Module - Right	√	√	√		√	
2021	Cadillac	XT4	Serial Data Gateway Module - Processor 1	√	√	√			
2021	Cadillac	XT4	Serial Data Gateway Module - Processor 2	√	√	√			
2021	Cadillac	XT4	Steering Column Lock Control Module	√	√	√	√		
2021	Cadillac	XT4	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Cadillac	XT4	Keyless Entry Control Module	√	√	√	√	√	
2021	Cadillac	XT4	Passenger Presence Module	√	√	√	√	√	0057
2021	Cadillac	XT4	Active Safety Control Module	√	√	√	√	√	
2021	Cadillac	XT4	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Cadillac	XT4	Short Range Radar Sensor - Rear Middle	√	√	√			
2021	Cadillac	XT4	Frontview Camera - Windshield	√	√	√	√		0196
2021	Cadillac	XT4	Headlamp Control Module	√	√	√	√	√	0195
2021	Cadillac	XT4	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2021	Cadillac	XT4	Power Steering Control Module	√	√	√	√		0081 0080 0089
2021	Cadillac	XT4	Suspension Control Module	√	√	√	√	√	
2021	Cadillac	XT4	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Cadillac	XT4	Radio	√	√	√	√	√	0226 0267 0269
2021	Cadillac	XT4	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Cadillac	XT4	Amplifier	√	√	√	√		
2021	Cadillac	XT4	Radio Controls	√	√	√	√		
2021	Cadillac	XT4	HVAC Controls	√	√	√	√		
2021	Cadillac	XT4	Rear Drive Control Module	√	√	√	√	√	0003
2021	Cadillac	XT4	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 0791 076C 076D 0058 0097 0219 0221 0792 0073 0072 0070 0071 0117 0119 077E 0178 0180 0182
2021	Cadillac	XT4	Infotainment Control Switch	√	√	√			
2021	Cadillac	XT5	Night Vision Camera Control Module	√	√	√	√		0492

2021	Cadillac	XT5	Headlamp Control Module		√	√			
2021	Cadillac	XT5	Liftgate Control Module	√	√	√	√	√	0146 0169
2021	Cadillac	XT5	Seat Memory Control Module - Driver	√	√	√	√	√	
2021	Cadillac	XT5	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	Cadillac	XT5	Transmission Control Module	√	√	√	√	√	0017
2021	Cadillac	XT5	Trailer Lighting Control Module	√	√	√	√	√	0247
2021	Cadillac	XT5	Video Processing Control Module	√	√	√	√	√	
2021	Cadillac	XT5	Serial Data Gateway Module - Processor 1	√	√	√			
2021	Cadillac	XT5	Serial Data Gateway Module - Processor 2	√	√	√			
2021	Cadillac	XT5	Steering Column Lock Control Module	√	√	√	√		
2021	Cadillac	XT5	Parking Assist Control Module	√	√	√	√	√	0247
2021	Cadillac	XT5	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Cadillac	XT5	Instrument Cluster	√	√	√	√	√	0247
2021	Cadillac	XT5	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Cadillac	XT5	Keyless Entry Control Module	√	√	√	√	√	0759
2021	Cadillac	XT5	Passenger Presence Module	√	√	√	√	√	0057
2021	Cadillac	XT5	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2021	Cadillac	XT5	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2021	Cadillac	XT5	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0138 0756
2021	Cadillac	XT5	Active Safety Control Module	√	√	√	√	√	
2021	Cadillac	XT5	Frontview Camera - Windshield	√	√	√	√		0196
2021	Cadillac	XT5	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Cadillac	XT5	Short Range Radar Sensor - Rear Middle	√	√	√			
2021	Cadillac	XT5	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2021	Cadillac	XT5	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2021	Cadillac	XT5	Power Steering Control Module	√	√	√	√		0089 0084
2021	Cadillac	XT5	Suspension Control Module	√	√	√	√	√	
2021	Cadillac	XT5	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Cadillac	XT5	Rear Drive Control Module	√	√	√	√	√	0003
2021	Cadillac	XT5	Radio	√	√	√	√	√	0226 0267 0269
2021	Cadillac	XT5	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Cadillac	XT5	Amplifier	√	√	√	√		
2021	Cadillac	XT5	Radio Controls	√	√	√	√		0241
2021	Cadillac	XT5	HVAC Controls	√	√	√	√		

2021	Cadillac	XT5	Infotainment Control Switch	√	√	√			
2021	Cadillac	XT5	Side Obstacle Detection Control Module - Right	√	√	√		√	
2021	Cadillac	XT6	Night Vision Camera Control Module	√	√	√	√		0492
2021	Cadillac	XT6	Headlamp Control Module	√	√	√	√	√	0195
2021	Cadillac	XT6	Seat Memory Control Module - Driver	√	√	√	√	√	
2021	Cadillac	XT6	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	Cadillac	XT6	Transmission Control Module	√	√	√	√	√	0017
2021	Cadillac	XT6	Video Processing Control Module	√	√	√	√	√	
2021	Cadillac	XT6	Trailer Lighting Control Module	√	√	√	√	√	0247
2021	Cadillac	XT6	Instrument Cluster	√	√	√	√	√	0247
2021	Cadillac	XT6	Parking Assist Control Module	√	√	√	√	√	0247
2021	Cadillac	XT6	Serial Data Gateway Module - Processor 1	√	√	√			
2021	Cadillac	XT6	Serial Data Gateway Module - Processor 2	√	√	√			
2021	Cadillac	XT6	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Cadillac	XT6	Side Obstacle Detection Control Module - Right	√	√	√		√	
2021	Cadillac	XT6	Steering Column Lock Control Module	√	√	√	√		
2021	Cadillac	XT6	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Cadillac	XT6	Keyless Entry Control Module	√	√	√	√	√	0759
2021	Cadillac	XT6	Passenger Presence Module	√	√	√	√	√	0057
2021	Cadillac	XT6	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2021	Cadillac	XT6	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2021	Cadillac	XT6	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0138 0756
2021	Cadillac	XT6	Active Safety Control Module	√	√	√	√	√	
2021	Cadillac	XT6	Frontview Camera - Windshield	√	√	√	√		0196
2021	Cadillac	XT6	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Cadillac	XT6	Short Range Radar Sensor - Rear Middle	√	√	√			
2021	Cadillac	XT6	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2021	Cadillac	XT6	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2021	Cadillac	XT6	Power Steering Control Module	√	√	√	√		0089 0084
2021	Cadillac	XT6	Suspension Control Module	√	√	√	√	√	
2021	Cadillac	XT6	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0159
2021	Cadillac	XT6	Rear Drive Control Module	√	√	√	√	√	0003
2021	Cadillac	XT6	Radio	√	√	√	√	√	0226 0267 0269
2021	Cadillac	XT6	HVAC Control Module	√	√	√	√	√	0007 0129

2021	Cadillac	XT6	Amplifier	√	√	√	√		
2021	Cadillac	XT6	Radio Controls	√	√	√	√		0241
2021	Cadillac	XT6	HVAC Controls	√	√	√	√		
2021	Cadillac	XT6	Infotainment Control Switch	√	√	√			
2021	Cadillac	XT6	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Cadillac	CT4	Serial Data Gateway Module	√	√	√			
2020	Cadillac	CT4	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758
2020	Cadillac	CT4	Electronic Suspension Control Module	√	√	√	√	√	
2020	Cadillac	CT4	Power Steering Control Module	√	√	√	√		0766
2020	Cadillac	CT4	Transfer Case Control Module	√	√	√	√	√	0099 0100
2020	Cadillac	CT4	Engine Control Module	√	√	√	√	√	0263 0209 075D 075E 076B 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0764 0763 0258 0139
2020	Cadillac	CT4	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2020	Cadillac	CT4	Restraints Control Module	√	√	√	√	√	0758 0134
2020	Cadillac	CT4	Instrument Panel Cluster Control Module	√	√	√	√	√	
2020	Cadillac	CT4	Parking Assist Control Module	√	√	√	√	√	
2020	Cadillac	CT4	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2020	Cadillac	CT4	Side Obstacle Detection Control Module - Right	√	√	√			
2020	Cadillac	CT4	Column Lock Module	√	√	√	√		
2020	Cadillac	CT4	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2020	Cadillac	CT4	Frontview Camera - Windshield	√	√	√	√		0196
2020	Cadillac	CT4	Image Processing Module	√	√	√	√		
2020	Cadillac	CT4	Short Range Radar Sensor - Left Rear	√	√	√			0772
2020	Cadillac	CT4	Short Range Radar Sensor - Right Rear	√	√	√			0772
2020	Cadillac	CT4	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Cadillac	CT4	Lighting Control Module	√	√	√	√	√	
2020	Cadillac	CT4	Audio Amplifier	√	√	√	√		
2020	Cadillac	CT4	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2020	Cadillac	CT4	Radio	√	√	√	√	√	0269 0769
2020	Cadillac	CT4	Infotainment Control Switch	√	√	√			
2020	Cadillac	CT4	Wireless Accessory Charging Module	√	√	√	√		
2020	Cadillac	CT4	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2020	Cadillac	CT4	Gear Shift Control Module	√					
2020	Cadillac	CT4	Radio Controls	√	√	√	√		
2020	Cadillac	CT4	Telematics Control Module	√	√	√	√		0270
2020	Cadillac	CT4	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2020	Cadillac	CT4	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057

2020	Cadillac	CT5	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758
2020	Cadillac	CT5	Serial Data Gateway Module	√	√	√			
2020	Cadillac	CT5	Power Steering Control Module	√	√	√	√		0766
2020	Cadillac	CT5	Electronic Suspension Control Module	√	√	√	√	√	
2020	Cadillac	CT5	Video Processing Module	√	√	√			
2020	Cadillac	CT5	Transfer Case Control Module	√	√	√	√	√	0099 0100
2020	Cadillac	CT5	Restraints Control Module	√	√	√	√	√	0758 0134
2020	Cadillac	CT5	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2020	Cadillac	CT5	UHF Short Range Low Energy Remote Control Access Transceiver	√	√	√			
2020	Cadillac	CT5	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2020	Cadillac	CT5	Parking Assist Control Module	√	√	√	√	√	
2020	Cadillac	CT5	Instrument Panel Cluster Control Module	√	√	√	√	√	
2020	Cadillac	CT5	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2020	Cadillac	CT5	Side Obstacle Detection Control Module - Right	√	√	√			
2020	Cadillac	CT5	Column Lock Module	√	√	√	√		
2020	Cadillac	CT5	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2020	Cadillac	CT5	Engine Control Module	√	√	√	√	√	0263 0209 075D 075E 076B 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0764 0763 0258 0139 0370 0371
2020	Cadillac	CT5	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2020	Cadillac	CT5	Image Processing Module	√	√	√	√		
2020	Cadillac	CT5	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Cadillac	CT5	Frontview Camera - Windshield	√	√	√	√		0196
2020	Cadillac	CT5	Differential Control Module	√	√	√	√	√	
2020	Cadillac	CT5	Lighting Control Module	√	√	√	√	√	
2020	Cadillac	CT5	Gear Shift Control Module	√					
2020	Cadillac	CT5	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2020	Cadillac	CT5	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2020	Cadillac	CT5	Wireless Accessory Charging Module	√	√	√	√		
2020	Cadillac	CT5	Audio Amplifier	√	√	√	√		
2020	Cadillac	CT5	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2020	Cadillac	CT5	Radio	√	√	√	√	√	0269 0769
2020	Cadillac	CT5	Infotainment Control Switch	√	√	√			
2020	Cadillac	CT5	Short Range Radar Sensor - Rear Middle	√	√	√			0772
2020	Cadillac	CT5	Radio Controls	√	√	√	√		
2020	Cadillac	CT5	Telematics Control Module	√	√	√	√		0270
2020	Cadillac	CT5	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057

2020	Cadillac	CT6	Headlamp Control Module	√	√	√	√	√	0195
2020	Cadillac	CT6	Headlamp High Beam Control Module	√	√	√	√	√	0247
2020	Cadillac	CT6	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Cadillac	CT6	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	Cadillac	CT6	Night Vision Camera Control Module	√	√	√	√		0492
2020	Cadillac	CT6	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0795 0023 0025 0027 0029
2020	Cadillac	CT6	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 0156 0132 0067 0238 0756 0154 0236 076C 079A 07AE
2020	Cadillac	CT6	Video Processing Control Module	√	√	√	√	√	
2020	Cadillac	CT6	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Cadillac	CT6	Serial Data Gateway Module - Processor 2	√	√	√			
2020	Cadillac	CT6	Side Object Sensor Module - Left	√	√	√		√	
2020	Cadillac	CT6	Active Safety Control Module	√	√	√	√	√	
2020	Cadillac	CT6	Active Safety Control Module 1 - Processor A	√	√	√	√		0794 0268
2020	Cadillac	CT6	Active Safety Control Module 1 - Processor B	√	√	√	√		0111 0268
2020	Cadillac	CT6	Active Safety Control Module 1 - Processor C	√	√	√	√		0268
2020	Cadillac	CT6	Active Safety Control Module 2 - Processor A	√	√	√	√		0794 0268
2020	Cadillac	CT6	Active Safety Control Module 2 - Processor B	√	√	√	√		0111 0268
2020	Cadillac	CT6	Active Safety Control Module 2 - Processor C	√	√	√	√		0268
2020	Cadillac	CT6	Frontview Camera - Windshield	√	√	√	√		0196
2020	Cadillac	CT6	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Cadillac	CT6	Driver Monitoring System Control Module	√	√	√	√	√	
2020	Cadillac	CT6	Short Range Radar Sensor - Rear Middle	√	√	√			
2020	Cadillac	CT6	Short Range Radar Sensor - Left Front	√	√	√			
2020	Cadillac	CT6	Short Range Radar Sensor - Right Front	√	√	√			
2020	Cadillac	CT6	Short Range Radar Sensor - Right Rear	√	√	√			
2020	Cadillac	CT6	Short Range Radar Sensor - Left Rear	√	√	√			
2020	Cadillac	CT6	Instrument Cluster	√	√	√	√	√	0247
2020	Cadillac	CT6	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Cadillac	CT6	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Cadillac	CT6	Passenger Presence Module	√	√	√	√	√	0057
2020	Cadillac	CT6	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2020	Cadillac	CT6	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2020	Cadillac	CT6	Parking Assist Control Module	√	√	√	√	√	0247
2020	Cadillac	CT6	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F

2020	Cadillac	CT6	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2020	Cadillac	CT6	Power Steering Control Module	√	√	√	√		0081 0080 0089
2020	Cadillac	CT6	Rear Wheel Steering Control Module	√	√	√	√		
2020	Cadillac	CT6	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Cadillac	CT6	Suspension Control Module	√	√	√	√	√	0245
2020	Cadillac	CT6	Multi-Axis Acceleration Sensor 1	√	√	√			
2020	Cadillac	CT6	Multi-Axis Acceleration Sensor 2	√	√	√			
2020	Cadillac	CT6	Multifunction Energy Storage Capacitor Control	√	√	√	√	√	0151 0244
2020	Cadillac	CT6	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Cadillac	CT6	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Cadillac	CT6	Seat Memory Control Module - Left Rear	√	√	√	√	√	
2020	Cadillac	CT6	Seat Memory Control Module - Right Rear	√	√	√	√	√	
2020	Cadillac	CT6	Seat Memory Control Module - Passenger	√	√	√	√	√	
2020	Cadillac	CT6	Amplifier	√	√	√	√		
2020	Cadillac	CT6	HVAC Controls	√	√	√	√	√	
2020	Cadillac	CT6	Infotainment Control Switch	√	√	√			
2020	Cadillac	CT6	Media Disc Player	√	√	√	√	√	
2020	Cadillac	CT6	Digital Map Control Module	√	√	√	√		
2020	Cadillac	CT6	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2020	Cadillac	CT6	Radio	√	√	√	√	√	0226 0267 0269
2020	Cadillac	CT6	Radio Controls	√	√	√	√		0241
2020	Cadillac	CT6	Transfer Case Control Module	√	√	√	√	√	0037 0099
2020	Cadillac	CT6	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2020	Cadillac	CT6	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Cadillac	CT6	Steering Column Lock Control Module	√	√	√	√		
2020	Cadillac	Escalade	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2020	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2020	Cadillac	Escalade	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2020	Cadillac	Escalade	Power Steering Control Module	√	√	√	√	√	0150
2020	Cadillac	Escalade	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Cadillac	Escalade	Suspension Control Module	√	√	√	√	√	0245
2020	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2020	Cadillac	Escalade	Serial Data Gateway Module	√	√	√			
2020	Cadillac	Escalade	Trailer Lighting Control Module	√	√	√	√	√	0247

2020	Cadillac	Escalade	Video Processing Control Module	√	√	√	√	√	
2020	Cadillac	Escalade	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Cadillac	Escalade	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	Cadillac	Escalade	Instrument Cluster	√	√	√	√	√	0247
2020	Cadillac	Escalade	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Cadillac	Escalade	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Cadillac	Escalade	Passenger Presence Module	√	√	√	√	√	0057
2020	Cadillac	Escalade	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2020	Cadillac	Escalade	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2020	Cadillac	Escalade	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Cadillac	Escalade	Side Object Sensor Module - Left	√	√	√		√	
2020	Cadillac	Escalade	Steering Column Lock Control Module	√	√	√	√		
2020	Cadillac	Escalade	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2020	Cadillac	Escalade	Active Safety Control Module	√	√	√	√	√	
2020	Cadillac	Escalade	Frontview Camera - Windshield	√	√	√	√		0196 075A
2020	Cadillac	Escalade	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Cadillac	Escalade	Short Range Radar Sensor - Left Front	√	√	√			
2020	Cadillac	Escalade	Short Range Radar Sensor - Right Front	√	√	√			
2020	Cadillac	Escalade	Short Range Radar Sensor - Left Rear	√	√	√			
2020	Cadillac	Escalade	Short Range Radar Sensor - Right Rear	√	√	√			
2020	Cadillac	Escalade	Parking Brake Control Module	√	√	√	√	√	0229
2020	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Cadillac	Escalade	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Cadillac	Escalade	Seat Memory Control Module - Passenger	√	√	√	√	√	
2020	Cadillac	Escalade	Assist Step Control Module	√	√	√	√	√	
2020	Cadillac	Escalade	Amplifier	√	√	√	√		
2020	Cadillac	Escalade	Human Machine Interface Control Module	√	√	√	√	√	0150
2020	Cadillac	Escalade	Media Disc Player	√	√	√	√	√	
2020	Cadillac	Escalade	Navigation Control Module	√	√	√	√	√	
2020	Cadillac	Escalade	Radio	√	√	√	√	√	0226 0150
2020	Cadillac	Escalade	Radio/HVAC Controls	√	√	√	√	√	
2020	Cadillac	Escalade	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2020	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	0037
2020	Cadillac	Escalade ESV	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017

2020	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2020	Cadillac	Escalade ESV	Serial Data Gateway Module	√	√	√			
2020	Cadillac	Escalade ESV	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	Cadillac	Escalade ESV	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2020	Cadillac	Escalade ESV	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2020	Cadillac	Escalade ESV	Power Steering Control Module	√	√	√	√	√	0150
2020	Cadillac	Escalade ESV	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Cadillac	Escalade ESV	Suspension Control Module	√	√	√	√	√	0245
2020	Cadillac	Escalade ESV	Video Processing Control Module	√	√	√	√	√	
2020	Cadillac	Escalade ESV	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Cadillac	Escalade ESV	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	Cadillac	Escalade ESV	Instrument Cluster	√	√	√	√	√	0247
2020	Cadillac	Escalade ESV	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Cadillac	Escalade ESV	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Cadillac	Escalade ESV	Passenger Presence Module	√	√	√	√	√	0057
2020	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2020	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2020	Cadillac	Escalade ESV	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Cadillac	Escalade ESV	Side Object Sensor Module - Left	√	√	√		√	
2020	Cadillac	Escalade ESV	Steering Column Lock Control Module	√	√	√	√		
2020	Cadillac	Escalade ESV	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2020	Cadillac	Escalade ESV	Active Safety Control Module	√	√	√	√	√	
2020	Cadillac	Escalade ESV	Frontview Camera - Windshield	√	√	√	√		0196 075A
2020	Cadillac	Escalade ESV	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Cadillac	Escalade ESV	Short Range Radar Sensor - Left Front	√	√	√			
2020	Cadillac	Escalade ESV	Short Range Radar Sensor - Left Rear	√	√	√			
2020	Cadillac	Escalade ESV	Short Range Radar Sensor - Right Front	√	√	√			
2020	Cadillac	Escalade ESV	Short Range Radar Sensor - Right Rear	√	√	√			
2020	Cadillac	Escalade ESV	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Cadillac	Escalade ESV	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Cadillac	Escalade ESV	Seat Memory Control Module - Passenger	√	√	√	√	√	
2020	Cadillac	Escalade ESV	Assist Step Control Module	√	√	√	√	√	
2020	Cadillac	Escalade ESV	Amplifier	√	√	√	√		
2020	Cadillac	Escalade ESV	Human Machine Interface Control Module	√	√	√	√	√	0150
2020	Cadillac	Escalade ESV	Media Disc Player	√	√	√	√	√	

2020	Cadillac	Escalade ESV	Navigation Control Module	√	√	√	√	√	
2020	Cadillac	Escalade ESV	Radio	√	√	√	√	√	0226 0150
2020	Cadillac	Escalade ESV	Radio/HVAC Controls	√	√	√	√	√	
2020	Cadillac	Escalade ESV	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2020	Cadillac	Escalade ESV	Transfer Case Control Module	√	√	√	√	√	0037
2020	Cadillac	Escalade ESV	Parking Brake Control Module	√	√	√	√	√	0229
2020	Cadillac	XT4	Instrument Cluster	√	√	√	√	√	0247
2020	Cadillac	XT4	Parking Assist Control Module	√	√	√	√	√	0247
2020	Cadillac	XT4	Steering Column Lock Control Module	√	√	√	√		
2020	Cadillac	XT4	Transmission Control Module	√	√	√	√	√	0016 075C 0017
2020	Cadillac	XT4	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Cadillac	XT4	Serial Data Gateway Module - Processor 2	√	√	√			
2020	Cadillac	XT4	Video Processing Control Module	√	√	√	√	√	
2020	Cadillac	XT4	Headlamp Control Module	√	√	√	√	√	0195
2020	Cadillac	XT4	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Cadillac	XT4	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	Cadillac	XT4	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	Cadillac	XT4	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Cadillac	XT4	Keyless Entry Control Module	√	√	√	√	√	
2020	Cadillac	XT4	Passenger Presence Module	√	√	√	√	√	0057
2020	Cadillac	XT4	Side Object Sensor Module - Left	√	√	√		√	
2020	Cadillac	XT4	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Cadillac	XT4	Active Safety Control Module	√	√	√	√	√	
2020	Cadillac	XT4	Frontview Camera - Windshield	√	√	√	√		0196
2020	Cadillac	XT4	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Cadillac	XT4	Short Range Radar Sensor - Left Front	√	√	√			
2020	Cadillac	XT4	Short Range Radar Sensor - Right Front	√	√	√			
2020	Cadillac	XT4	Short Range Radar Sensor - Rear Middle	√	√	√			
2020	Cadillac	XT4	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2020	Cadillac	XT4	Power Steering Control Module	√	√	√	√		0081 0080 0089
2020	Cadillac	XT4	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Cadillac	XT4	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Cadillac	XT4	Suspension Control Module	√	√	√	√	√	
2020	Cadillac	XT4	Amplifier	√	√	√	√		
2020	Cadillac	XT4	HVAC Controls	√	√	√	√	√	
2020	Cadillac	XT4	Infotainment Control Switch	√	√	√			
2020	Cadillac	XT4	Radio	√	√	√	√	√	0226 0267 0269
2020	Cadillac	XT4	Radio Controls	√	√	√	√		0241

2020	Cadillac	XT4	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 0791 076C 076D 0058 0097 0219 0221 0792 0073 0072 0070 0071 0117 0119 077E 0178 0180 0182
2020	Cadillac	XT4	Side Object Sensor Module - Right	√	√	√		√	
2020	Cadillac	XT4	Seat Memory Control Module - Passenger	√	√	√	√	√	
2020	Cadillac	XT4	Rear Drive Control Module	√	√	√	√	√	0003
2020	Cadillac	XT5	Transmission Control Module	√	√	√	√	√	0017
2020	Cadillac	XT5	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	Cadillac	XT5	Video Processing Control Module	√	√	√	√	√	
2020	Cadillac	XT5	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Cadillac	XT5	Serial Data Gateway Module - Processor 2	√	√	√			
2020	Cadillac	XT5	Night Vision Camera Control Module	√	√	√	√		0492
2020	Cadillac	XT5	Headlamp Control Module	√	√	√			
2020	Cadillac	XT5	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Cadillac	XT5	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	Cadillac	XT5	Active Safety Control Module	√	√	√	√	√	
2020	Cadillac	XT5	Frontview Camera - Windshield	√	√	√	√		0196
2020	Cadillac	XT5	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Cadillac	XT5	Short Range Radar Sensor - Left Front	√	√	√			
2020	Cadillac	XT5	Short Range Radar Sensor - Right Front	√	√	√			
2020	Cadillac	XT5	Short Range Radar Sensor - Rear Middle	√	√	√			
2020	Cadillac	XT5	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Cadillac	XT5	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Cadillac	XT5	Instrument Cluster	√	√	√	√	√	0247
2020	Cadillac	XT5	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Cadillac	XT5	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Cadillac	XT5	Passenger Presence Module	√	√	√	√	√	0057
2020	Cadillac	XT5	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2020	Cadillac	XT5	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2020	Cadillac	XT5	Short Range Remote Control Transceiver	√	√	√	√		
2020	Cadillac	XT5	Steering Column Lock Control Module	√	√	√	√		
2020	Cadillac	XT5	Side Object Sensor Module - Left	√	√	√		√	
2020	Cadillac	XT5	Parking Assist Control Module	√	√	√	√	√	0247
2020	Cadillac	XT5	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2020	Cadillac	XT5	Power Steering Control Module	√	√	√	√		0089 0084
2020	Cadillac	XT5	Suspension Control Module	√	√	√	√	√	

2020	Cadillac	XT5	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 0156 0756 0154 0226
2020	Cadillac	XT5	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2020	Cadillac	XT5	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Cadillac	XT5	Amplifier	√	√	√	√		
2020	Cadillac	XT5	HVAC Controls	√	√	√	√	√	
2020	Cadillac	XT5	Infotainment Control Switch	√	√	√			
2020	Cadillac	XT5	Radio Controls	√	√	√	√		0241
2020	Cadillac	XT5	Radio	√	√	√	√	√	0150 0226 0269 0267
2020	Cadillac	XT5	Rear Drive Control Module	√	√	√	√	√	0003
2020	Cadillac	XT6	Transmission Control Module	√	√	√	√	√	0017
2020	Cadillac	XT6	Night Vision Camera Control Module	√	√	√	√		0492
2020	Cadillac	XT6	Video Processing Control Module	√	√	√	√	√	
2020	Cadillac	XT6	Passenger Presence Module	√	√	√	√	√	0057
2020	Cadillac	XT6	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Cadillac	XT6	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2020	Cadillac	XT6	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2020	Cadillac	XT6	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Cadillac	XT6	Instrument Cluster	√	√	√	√	√	0247
2020	Cadillac	XT6	Parking Assist Control Module	√	√	√	√	√	0247
2020	Cadillac	XT6	Steering Column Lock Control Module	√	√	√	√		
2020	Cadillac	XT6	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2020	Cadillac	XT6	Suspension Control Module	√	√	√	√	√	
2020	Cadillac	XT6	Power Steering Control Module	√	√	√	√		0089 0084
2020	Cadillac	XT6	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Cadillac	XT6	Serial Data Gateway Module - Processor 2	√	√	√			
2020	Cadillac	XT6	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Cadillac	XT6	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Cadillac	XT6	Headlamp Control Module	√	√	√	√	√	0195
2020	Cadillac	XT6	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Cadillac	XT6	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	Cadillac	XT6	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	Cadillac	XT6	Active Safety Control Module	√	√	√	√	√	

2020	Cadillac	XT6	Frontview Camera - Windshield	√	√	√	√		0196
2020	Cadillac	XT6	Amplifier	√	√	√	√		
2020	Cadillac	XT6	HVAC Controls	√	√	√	√	√	
2020	Cadillac	XT6	Infotainment Control Switch	√	√	√			
2020	Cadillac	XT6	Radio	√	√	√	√	√	0226 0267 0269
2020	Cadillac	XT6	Radio Controls	√	√	√	√		0241
2020	Cadillac	XT6	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2020	Cadillac	XT6	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Cadillac	XT6	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Cadillac	XT6	Short Range Radar Sensor - Left Front	√	√	√			
2020	Cadillac	XT6	Short Range Radar Sensor - Right Front	√	√	√			
2020	Cadillac	XT6	Short Range Radar Sensor - Rear Middle	√	√	√			
2020	Cadillac	XT6	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 0156 0756 0154 0236
2020	Cadillac	XT6	Side Object Sensor Module - Left	√	√	√		√	
2020	Cadillac	XT6	Side Object Sensor Module - Right	√	√	√		√	
2020	Cadillac	XT6	Rear Drive Control Module	√	√	√	√	√	0003
2020	Cadillac	XTS	Video Processing Control Module	√	√	√	√	√	
2020	Cadillac	XTS	Headlamp Control Module	√	√	√	√	√	0195
2020	Cadillac	XTS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048
2020	Cadillac	XTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Cadillac	XTS	Keyless Entry Control Module	√	√	√	√	√	
2020	Cadillac	XTS	Passenger Presence Module	√	√	√	√		0057
2020	Cadillac	XTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2020	Cadillac	XTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2020	Cadillac	XTS	Parking Brake Control Module	√	√	√	√	√	0229
2020	Cadillac	XTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Cadillac	XTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2020	Cadillac	XTS	Power Steering Control Module	√	√	√	√	√	0089
2020	Cadillac	XTS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Cadillac	XTS	Active Safety Control Module	√	√	√	√	√	

2020	Cadillac	XTS	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2020	Cadillac	XTS	Left Front Short Range Radar Sensor Module	√	√	√			
2020	Cadillac	XTS	Right Front Short Range Radar Sensor Module	√	√	√			
2020	Cadillac	XTS	Left Rear Radar Short Range Sensor Module	√	√	√			
2020	Cadillac	XTS	Right Rear Short Range Radar Sensor Module	√	√	√			
2020	Cadillac	XTS	Long Range Radar Sensor Module	√	√	√	√		0260
2020	Cadillac	XTS	Instrument Cluster	√	√	√	√	√	0247
2020	Cadillac	XTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Cadillac	XTS	Side Object Sensor Module - Left	√	√	√		√	
2020	Cadillac	XTS	Steering Column Lock Control Module	√	√	√	√		
2020	Cadillac	XTS	Serial Data Gateway Module	√	√	√			
2020	Cadillac	XTS	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Cadillac	XTS	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Cadillac	XTS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2020	Cadillac	XTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0006
2020	Cadillac	XTS	Transmission Control Module	√	√	√	√	√	0016
2020	Cadillac	XTS	Amplifier	√	√	√	√		
2020	Cadillac	XTS	Radio	√	√	√	√	√	0226 0267 0269
2020	Cadillac	XTS	Radio/HVAC Controls	√	√	√	√	√	
2020	Cadillac	XTS	Rear Audio Control Module	√	√	√	√	√	
2020	Cadillac	XTS	Rear Differential Clutch Control Module	√	√	√	√	√	
2020	Cadillac	XTS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2019	Cadillac	ATS	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2019	Cadillac	ATS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0020 0756 0085
2019	Cadillac	ATS	Headlamp Control Module	√	√	√	√	√	0195
2019	Cadillac	ATS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048
2019	Cadillac	ATS	Rear Differential Clutch Control Module	√	√	√	√	√	
2019	Cadillac	ATS	Steering Column Lock Control Module	√	√	√	√		
2019	Cadillac	ATS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2019	Cadillac	ATS	Transfer Case Control Module	√	√	√	√	√	0099 0100 07B0
2019	Cadillac	ATS	Pedestrian Impact Detection Module	√	√	√	√		0170
2019	Cadillac	ATS	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Cadillac	ATS	Left Side Object Detection Control Module	√	√	√		√	
2019	Cadillac	ATS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Cadillac	ATS	Right Side Object Detection Control Module	√	√	√		√	

2019	Cadillac	ATS	Keyless Entry Control Module	√	√	√	√	√	
2019	Cadillac	ATS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Cadillac	ATS	Instrument Cluster	√	√	√	√	√	0247
2019	Cadillac	ATS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2019	Cadillac	ATS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2019	Cadillac	ATS	Parking Brake Control Module	√	√	√	√	√	0229
2019	Cadillac	ATS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2019	Cadillac	ATS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Cadillac	ATS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2019	Cadillac	ATS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Cadillac	ATS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2019	Cadillac	ATS	Amplifier	√	√	√	√		
2019	Cadillac	ATS	Radio/HVAC Controls	√	√	√	√	√	
2019	Cadillac	ATS	Navigation Control Module	√	√	√	√	√	
2019	Cadillac	ATS	Radio	√	√	√	√	√	0226 0267 0269
2019	Cadillac	ATS	Active Safety Control Module	√	√	√	√	√	
2019	Cadillac	ATS	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Cadillac	ATS	Left Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	ATS	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Cadillac	ATS	Right Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	ATS	Rear Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	ATS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	Cadillac	ATS	Passenger Presence Module	√	√	√	√		0057
2019	Cadillac	CT6	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0795 0023 0025 0027 0029
2019	Cadillac	CT6	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 0156 0132 0067 0238 0756 0154 0236 076C 079A 07AE
2019	Cadillac	CT6	Steering Column Lock Control Module	√	√	√	√		
2019	Cadillac	CT6	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2019	Cadillac	CT6	Transfer Case Control Module	√	√	√	√	√	0037 0099
2019	Cadillac	CT6	Night Vision Camera Control Module	√	√	√	√		0492
2019	Cadillac	CT6	Instrument Cluster	√	√	√	√	√	0247
2019	Cadillac	CT6	Left Side Object Detection Control Module	√	√	√		√	

2019	Cadillac	CT6	Parking Assist Control Module	√	√	√	√	√	0247
2019	Cadillac	CT6	Video Processing Control Module	√	√	√	√	√	
2019	Cadillac	CT6	Headlamp Control Module	√	√	√	√	√	0195
2019	Cadillac	CT6	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Cadillac	CT6	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	Cadillac	CT6	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Cadillac	CT6	Keyless Entry Control Module	√	√	√	√	√	0759
2019	Cadillac	CT6	Passenger Presence Module	√	√	√	√	√	0057
2019	Cadillac	CT6	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2019	Cadillac	CT6	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2019	Cadillac	CT6	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Cadillac	CT6	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2019	Cadillac	CT6	Multi-Axis Acceleration Sensor 1	√	√	√			
2019	Cadillac	CT6	Multi-Axis Acceleration Sensor 2	√	√	√			
2019	Cadillac	CT6	Power Steering Control Module	√	√	√	√		0081 0080 0089
2019	Cadillac	CT6	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Cadillac	CT6	Suspension Control Module	√	√	√	√	√	0245
2019	Cadillac	CT6	Frontview Camera - Windshield	√	√	√	√		0196 075A
2019	Cadillac	CT6	Active Safety Control Module	√	√	√	√	√	
2019	Cadillac	CT6	Active Safety Control Module 1 - Processor A	√	√	√	√		0794 0268
2019	Cadillac	CT6	Active Safety Control Module 1 - Processor B	√	√	√	√		0111 0268
2019	Cadillac	CT6	Active Safety Control Module 1 - Processor C	√	√	√	√		0268
2019	Cadillac	CT6	Active Safety Control Module 2 - Processor A	√	√	√	√		0794 0268
2019	Cadillac	CT6	Active Safety Control Module 2 - Processor B	√	√	√	√		0111 0268
2019	Cadillac	CT6	Active Safety Control Module 2 - Processor C	√	√	√	√		0268
2019	Cadillac	CT6	Driver Monitoring System Control Module	√	√	√	√	√	
2019	Cadillac	CT6	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Cadillac	CT6	Left Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	CT6	Left Rear Radar Short Range Sensor Module	√	√	√			
2019	Cadillac	CT6	Right Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	CT6	Right Rear Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	CT6	Rear Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	CT6	Rear Middle Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	CT6	Amplifier	√	√	√	√		
2019	Cadillac	CT6	HVAC Controls	√	√	√	√	√	
2019	Cadillac	CT6	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2019	Cadillac	CT6	Radio Controls	√	√	√	√		0241
2019	Cadillac	CT6	Media Disc Player	√	√	√	√	√	

2019	Cadillac	CT6	Radio	√	√	√	√	√	0226 0267 0269
2019	Cadillac	CT6	Seat Memory Control Module - Left Rear	√	√	√	√	√	
2019	Cadillac	CT6	Seat Memory Control Module - Right Rear	√	√	√	√	√	
2019	Cadillac	CT6	Rear Wheel Steering Control Module	√	√	√	√		
2019	Cadillac	CT6	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2019	Cadillac	CT6	Headlamp High Beam Control Module	√	√	√	√	√	0247
2019	Cadillac	CT6	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Cadillac	CT6	Multifunction Energy Storage Capacitor Control	√	√	√	√	√	0151 0244
2019	Cadillac	CT6	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Cadillac	CT6	Infotainment Control Switch	√	√	√			
2019	Cadillac	CT6	Serial Data Gateway Module - Processor 1	√	√	√			
2019	Cadillac	CT6	Serial Data Gateway Module - Processor 2	√	√	√			
2019	Cadillac	CT6	Digital Map Control Module	√	√	√	√		
2019	Cadillac	CTS	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2019	Cadillac	CTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0756 0085 0020
2019	Cadillac	CTS	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2019	Cadillac	CTS	Steering Column Lock Control Module	√	√	√	√		
2019	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	0195
2019	Cadillac	CTS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048
2019	Cadillac	CTS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2019	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	0099 0100 07B0
2019	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√		0170
2019	Cadillac	CTS	Video Processing Control Module	√	√	√	√	√	
2019	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Cadillac	CTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2019	Cadillac	CTS	Keyless Entry Control Module	√	√	√	√	√	
2019	Cadillac	CTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Cadillac	CTS	Passenger Presence Module	√	√	√	√		0057
2019	Cadillac	CTS	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2019	Cadillac	CTS	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2019	Cadillac	CTS	Instrument Cluster	√	√	√	√	√	0247
2019	Cadillac	CTS	Left Side Object Detection Control Module	√	√	√		√	
2019	Cadillac	CTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Cadillac	CTS	Right Side Object Detection Control Module	√	√	√		√	
2019	Cadillac	CTS	Serial Data Gateway Module	√	√	√			

2019	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2019	Cadillac	CTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2019	Cadillac	CTS	Parking Brake Control Module	√	√	√	√	√	0229
2019	Cadillac	CTS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2019	Cadillac	CTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Cadillac	CTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2019	Cadillac	CTS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Cadillac	CTS	Navigation Control Module	√	√	√	√	√	
2019	Cadillac	CTS	Amplifier	√	√	√	√		
2019	Cadillac	CTS	Radio/HVAC Controls	√	√	√	√	√	
2019	Cadillac	CTS	Radio	√	√	√	√	√	0226 0267 0269
2019	Cadillac	CTS	Active Safety External Communication Control	√	√	√	√		
2019	Cadillac	CTS	Active Safety Control Module	√	√	√	√	√	
2019	Cadillac	CTS	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Cadillac	CTS	Left Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	CTS	Right Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	CTS	Rear Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	CTS	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Cadillac	CTS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2019	Cadillac	Escalade	Steering Column Lock Control Module	√	√	√	√		
2019	Cadillac	Escalade	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Cadillac	Escalade	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Cadillac	Escalade	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2019	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	0037
2019	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2019	Cadillac	Escalade	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2019	Cadillac	Escalade	Power Steering Control Module	√	√	√	√	√	0150
2019	Cadillac	Escalade	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Cadillac	Escalade	Suspension Control Module	√	√	√	√	√	0245
2019	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Cadillac	Escalade	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Cadillac	Escalade	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	Cadillac	Escalade	Trailer Lighting Control Module	√	√	√	√	√	0247

2019	Cadillac	Escalade	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2019	Cadillac	Escalade	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Cadillac	Escalade	Passenger Presence Module	√	√	√	√	√	0057
2019	Cadillac	Escalade	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2019	Cadillac	Escalade	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2019	Cadillac	Escalade	Video Processing Control Module	√	√	√	√	√	
2019	Cadillac	Escalade	Keyless Entry Control Module	√	√	√	√	√	0759
2019	Cadillac	Escalade	Frontview Camera - Windshield	√	√	√	√		0196 075A
2019	Cadillac	Escalade	Active Safety Control Module	√	√	√	√	√	
2019	Cadillac	Escalade	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Cadillac	Escalade	Left Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	Escalade	Right Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	Escalade	Left Rear Radar Short Range Sensor Module	√	√	√			
2019	Cadillac	Escalade	Right Rear Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	Escalade	Instrument Cluster	√	√	√	√	√	0247
2019	Cadillac	Escalade	Left Side Object Detection Control Module	√	√	√		√	
2019	Cadillac	Escalade	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Cadillac	Escalade	Serial Data Gateway Module	√	√	√			
2019	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Cadillac	Escalade	Parking Brake Control Module	√	√	√	√	√	0229
2019	Cadillac	Escalade	Amplifier	√	√	√	√		
2019	Cadillac	Escalade	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Cadillac	Escalade	Radio/HVAC Controls	√	√	√	√	√	
2019	Cadillac	Escalade	Assist Step Control Module	√	√	√	√	√	
2019	Cadillac	Escalade	Media Disc Player	√	√	√	√	√	
2019	Cadillac	Escalade	Radio	√	√	√	√	√	0226 0150
2019	Cadillac	Escalade	Right Side Object Detection Control Module	√	√	√		√	
2019	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2019	Cadillac	Escalade ESV	Steering Column Lock Control Module	√	√	√	√		
2019	Cadillac	Escalade ESV	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Cadillac	Escalade ESV	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Cadillac	Escalade ESV	Transfer Case Control Module	√	√	√	√	√	0037
2019	Cadillac	Escalade ESV	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2019	Cadillac	Escalade ESV	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277

2019	Cadillac	Escalade ESV	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2019	Cadillac	Escalade ESV	Power Steering Control Module	√	√	√	√	√	0150
2019	Cadillac	Escalade ESV	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Cadillac	Escalade ESV	Suspension Control Module	√	√	√	√	√	0245
2019	Cadillac	Escalade ESV	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Cadillac	Escalade ESV	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	Cadillac	Escalade ESV	Trailer Lighting Control Module	√	√	√	√	√	0247
2019	Cadillac	Escalade ESV	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Cadillac	Escalade ESV	Passenger Presence Module	√	√	√	√	√	0057
2019	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2019	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2019	Cadillac	Escalade ESV	Keyless Entry Control Module	√	√	√	√	√	0759
2019	Cadillac	Escalade ESV	Video Processing Control Module	√	√	√	√	√	
2019	Cadillac	Escalade ESV	Active Safety Control Module	√	√	√	√	√	
2019	Cadillac	Escalade ESV	Frontview Camera - Windshield	√	√	√	√		0196 075A
2019	Cadillac	Escalade ESV	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Cadillac	Escalade ESV	Left Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	Escalade ESV	Right Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	Escalade ESV	Left Rear Radar Short Range Sensor Module	√	√	√			
2019	Cadillac	Escalade ESV	Right Rear Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	Escalade ESV	Instrument Cluster	√	√	√	√	√	0247
2019	Cadillac	Escalade ESV	Left Side Object Detection Control Module	√	√	√		√	
2019	Cadillac	Escalade ESV	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Cadillac	Escalade ESV	Serial Data Gateway Module	√	√	√			
2019	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Cadillac	Escalade ESV	Parking Brake Control Module	√	√	√	√	√	0229
2019	Cadillac	Escalade ESV	Amplifier	√	√	√	√		
2019	Cadillac	Escalade ESV	Assist Step Control Module	√	√	√	√	√	
2019	Cadillac	Escalade ESV	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Cadillac	Escalade ESV	Media Disc Player	√	√	√	√	√	
2019	Cadillac	Escalade ESV	Radio/HVAC Controls	√	√	√	√	√	
2019	Cadillac	Escalade ESV	Radio	√	√	√	√	√	0226 0150
2019	Cadillac	Escalade ESV	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Cadillac	Escalade ESV	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2019	Cadillac	Escalade ESV	Right Side Object Detection Control Module	√	√	√		√	
2019	Cadillac	XT4	Telematics Communication Interface Control Module	√	√	√	√	√	0755

2019	Cadillac	XT4	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0130
2019	Cadillac	XT4	Instrument Cluster	√	√	√	√	√	0247
2019	Cadillac	XT4	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Cadillac	XT4	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Cadillac	XT4	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2019	Cadillac	XT4	Left Side Object Detection Control Module	√	√	√		√	
2019	Cadillac	XT4	Parking Assist Control Module	√	√	√	√	√	0247
2019	Cadillac	XT4	Video Processing Control Module	√	√	√	√	√	
2019	Cadillac	XT4	Right Side Object Detection Control Module	√	√	√		√	
2019	Cadillac	XT4	Transmission Control Module	√	√	√	√	√	0017
2019	Cadillac	XT4	Keyless Entry Control Module	√	√	√	√	√	
2019	Cadillac	XT4	Passenger Presence Module	√	√	√	√	√	0057
2019	Cadillac	XT4	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Cadillac	XT4	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Cadillac	XT4	Headlamp Control Module	√	√	√	√	√	0195
2019	Cadillac	XT4	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	Cadillac	XT4	Amplifier	√	√	√	√		
2019	Cadillac	XT4	HVAC Controls	√	√	√	√	√	
2019	Cadillac	XT4	Radio Controls	√	√	√	√		0241
2019	Cadillac	XT4	Radio	√	√	√	√	√	0226 0267 0269
2019	Cadillac	XT4	Media Disc Player	√	√	√	√	√	
2019	Cadillac	XT4	Active Safety Control Module	√	√	√	√	√	
2019	Cadillac	XT4	Frontview Camera - Windshield	√	√	√	√		0196
2019	Cadillac	XT4	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Cadillac	XT4	Left Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	XT4	Right Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	XT4	Rear Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	XT4	Power Steering Control Module	√	√	√	√		0081 0080 0089
2019	Cadillac	XT4	Suspension Control Module	√	√	√	√	√	
2019	Cadillac	XT4	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Cadillac	XT4	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	Cadillac	XT4	Steering Column Lock Control Module	√	√	√	√		
2019	Cadillac	XT4	Infotainment Control Switch	√	√	√			
2019	Cadillac	XT4	Serial Data Gateway Module - Processor 1	√	√	√			
2019	Cadillac	XT4	Serial Data Gateway Module - Processor 2	√	√	√			

2019	Cadillac	XT5	Transmission Control Module	√	√	√	√	√	0017 0020 0084
2019	Cadillac	XT5	Chassis Control Module	√	√	√	√	√	0014 0078
2019	Cadillac	XT5	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2019	Cadillac	XT5	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0147 0115 0086 0154 0217 0258 0263 0236 0212 0076 0214 0006 0144 0130 0756 0005
2019	Cadillac	XT5	Steering Column Lock Control Module	√	√	√	√		
2019	Cadillac	XT5	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	Cadillac	XT5	Headlamp Control Module	√	√	√	√	√	0195
2019	Cadillac	XT5	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Cadillac	XT5	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Cadillac	XT5	Trailer Lighting Control Module	√	√	√	√	√	0247
2019	Cadillac	XT5	Video Processing Control Module	√	√	√	√	√	
2019	Cadillac	XT5	Frontview Camera - Windshield	√	√	√	√		0196
2019	Cadillac	XT5	Active Safety Control Module	√	√	√	√	√	
2019	Cadillac	XT5	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Cadillac	XT5	Left Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	XT5	Right Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	XT5	Rear Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	XT5	Keyless Entry Control Module	√	√	√	√	√	
2019	Cadillac	XT5	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2019	Cadillac	XT5	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2019	Cadillac	XT5	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Cadillac	XT5	Passenger Presence Module	√	√	√	√	√	0057
2019	Cadillac	XT5	Amplifier	√	√	√	√		
2019	Cadillac	XT5	Radio	√	√	√	√	√	0226 0150
2019	Cadillac	XT5	Radio Controls	√	√	√	√		0241
2019	Cadillac	XT5	HVAC Controls	√	√	√	√	√	
2019	Cadillac	XT5	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Cadillac	XT5	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Cadillac	XT5	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Cadillac	XT5	Left Side Object Detection Control Module	√	√	√		√	
2019	Cadillac	XT5	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Cadillac	XT5	Serial Data Gateway Module	√	√	√			
2019	Cadillac	XT5	Instrument Cluster	√	√	√	√	√	0247
2019	Cadillac	XT5	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Cadillac	XT5	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277

2019	Cadillac	XT5	Power Steering Control Module	√	√	√	√		0089 0084
2019	Cadillac	XT5	Suspension Control Module	√	√	√	√	√	
2019	Cadillac	XTS	Transmission Control Module	√	√	√	√	√	0016
2019	Cadillac	XTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0006
2019	Cadillac	XTS	Headlamp Control Module	√	√	√	√	√	0195
2019	Cadillac	XTS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048
2019	Cadillac	XTS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2019	Cadillac	XTS	Rear Differential Clutch Control Module	√	√	√	√	√	
2019	Cadillac	XTS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Cadillac	XTS	Keyless Entry Control Module	√	√	√	√	√	
2019	Cadillac	XTS	Passenger Presence Module	√	√	√	√		0057
2019	Cadillac	XTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Cadillac	XTS	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Cadillac	XTS	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Cadillac	XTS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	Cadillac	XTS	Radio	√	√	√	√	√	0226 0267 0269
2019	Cadillac	XTS	Amplifier	√	√	√	√		
2019	Cadillac	XTS	Rear Audio Control Module	√	√	√	√	√	
2019	Cadillac	XTS	Radio/HVAC Controls	√	√	√	√	√	
2019	Cadillac	XTS	Video Processing Control Module	√	√	√	√	√	
2019	Cadillac	XTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2019	Cadillac	XTS	Active Safety Control Module	√	√	√	√	√	
2019	Cadillac	XTS	Frontview Camera - Windshield	√	√	√	√	√	0196 0205 075A
2019	Cadillac	XTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2019	Cadillac	XTS	Parking Brake Control Module	√	√	√	√	√	0229
2019	Cadillac	XTS	Left Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	XTS	Right Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	XTS	Right Rear Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	XTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2019	Cadillac	XTS	Left Rear Radar Short Range Sensor Module	√	√	√			
2019	Cadillac	XTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Cadillac	XTS	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Cadillac	XTS	Power Steering Control Module	√	√	√	√	√	0089
2019	Cadillac	XTS	Instrument Cluster	√	√	√	√	√	0247
2019	Cadillac	XTS	Left Side Object Detection Control Module	√	√	√		√	
2019	Cadillac	XTS	Serial Data Gateway Module	√	√	√			
2019	Cadillac	XTS	Parking Assist Control Module	√	√	√	√	√	0247 0271

2018	Cadillac	ATS	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2018	Cadillac	ATS	Headlamp Control Module	√	√	√	√	√	0195
2018	Cadillac	ATS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Cadillac	ATS	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Cadillac	ATS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	Cadillac	ATS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Cadillac	ATS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0020 0756 0085
2018	Cadillac	ATS	Transfer Case Control Module	√	√	√	√	√	0099 0100 07B0
2018	Cadillac	ATS	Instrument Cluster	√	√	√	√	√	0247
2018	Cadillac	ATS	Left Side Object Detection Control Module	√	√	√		√	
2018	Cadillac	ATS	Right Side Object Detection Control Module	√	√	√		√	
2018	Cadillac	ATS	Serial Data Gateway Module	√	√	√			
2018	Cadillac	ATS	Pedestrian Impact Detection Module	√	√	√	√		0170
2018	Cadillac	ATS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Cadillac	ATS	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2018	Cadillac	ATS	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2018	Cadillac	ATS	Passenger Presence Module	√	√	√	√		0057
2018	Cadillac	ATS	Keyless Entry Control Module	√	√	√	√	√	
2018	Cadillac	ATS	Steering Column Lock Control Module	√	√	√	√		
2018	Cadillac	ATS	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2018	Cadillac	ATS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Cadillac	ATS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2018	Cadillac	ATS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Cadillac	ATS	Active Safety Control Module	√	√	√	√	√	
2018	Cadillac	ATS	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Cadillac	ATS	Left Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	ATS	Right Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	ATS	Rear Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	ATS	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2018	Cadillac	ATS	Amplifier	√	√	√	√		
2018	Cadillac	ATS	Radio/HVAC Controls	√	√	√	√	√	
2018	Cadillac	ATS	Media Disc Player	√	√	√	√	√	

2018	Cadillac	ATS	Navigation Control Module	√	√	√	√	√	
2018	Cadillac	ATS	Vehicle Performance Data Recorder	√	√	√	√		
2018	Cadillac	ATS	Radio	√	√	√	√	√	0226 0267 0269
2018	Cadillac	ATS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2018	Cadillac	ATS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2018	Cadillac	ATS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2018	Cadillac	ATS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Cadillac	ATS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2018	Cadillac	ATS	Parking Brake Control Module	√	√	√	√	√	0229
2018	Cadillac	CT6	Frontview Camera Module	√	√	√	√	√	0247 0196
2018	Cadillac	CT6	Headlamp Control Module	√	√	√	√	√	0195
2018	Cadillac	CT6	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Cadillac	CT6	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Cadillac	CT6	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Cadillac	CT6	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	Cadillac	CT6	Seat Memory Control Module - Right Rear	√	√	√	√	√	
2018	Cadillac	CT6	Seat Memory Control Module - Left Rear	√	√	√	√	√	
2018	Cadillac	CT6	Battery Energy Control Module	√			√		
2018	Cadillac	CT6	Electric A/C Compressor Control Module	√					
2018	Cadillac	CT6	Hybrid Powertrain Control Module 2	√	√	√	√	√	0125 0056 0218 0122
2018	Cadillac	CT6	Brake Booster Control Module	√	√	√	√		
2018	Cadillac	CT6	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2018	Cadillac	CT6	Power Steering Control Module	√	√	√	√		0081 0080 0089
2018	Cadillac	CT6	Rear Wheel Steering Control Module	√	√	√	√		
2018	Cadillac	CT6	Suspension Control Module	√	√	√	√	√	0245
2018	Cadillac	CT6	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2018	Cadillac	CT6	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Cadillac	CT6	Drive Motor Control Module 1	√	√	√	√		
2018	Cadillac	CT6	Drive Motor Control Module 2	√	√	√	√		
2018	Cadillac	CT6	Hybrid Powertrain Control Module	√	√	√	√	√	0018
2018	Cadillac	CT6	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Cadillac	CT6	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0147 0176 0086 0217 0258 0263 0236 0212 0076 0115 0154 0214 0006 0144 0139 0238 0756 0085

2018	Cadillac	CT6	Amplifier	√	√	√	√		
2018	Cadillac	CT6	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Cadillac	CT6	HVAC Controls	√	√	√	√	√	
2018	Cadillac	CT6	Radio Controls	√	√	√	√		0241
2018	Cadillac	CT6	Media Disc Player	√	√	√	√	√	
2018	Cadillac	CT6	Navigation Control Module	√	√	√	√	√	
2018	Cadillac	CT6	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2018	Cadillac	CT6	Radio	√	√	√	√	√	0226 0150
2018	Cadillac	CT6	Infotainment Control Touchpad	√	√	√	√	√	
2018	Cadillac	CT6	Instrument Cluster	√	√	√	√	√	0247
2018	Cadillac	CT6	Left Side Object Detection Control Module	√	√	√		√	
2018	Cadillac	CT6	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Cadillac	CT6	Serial Data Gateway Module	√	√	√			
2018	Cadillac	CT6	Transfer Case Control Module	√	√	√	√	√	0037 0099
2018	Cadillac	CT6	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2018	Cadillac	CT6	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2018	Cadillac	CT6	Passenger Presence Module	√	√	√	√	√	0057
2018	Cadillac	CT6	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Cadillac	CT6	Keyless Entry Control Module	√	√	√	√	√	
2018	Cadillac	CT6	Steering Column Lock Control Module	√	√	√	√		
2018	Cadillac	CT6	Active Safety Control Module	√	√	√	√	√	
2018	Cadillac	CT6	Video Processing Control Module	√	√	√	√	√	
2018	Cadillac	CT6	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Cadillac	CT6	Left Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	CT6	Right Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	CT6	Rear Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	CT6	Night Vision Camera Control Module	√	√	√	√		0492
2018	Cadillac	CT6	Driver Monitoring System Control Module	√	√	√	√	√	
2018	Cadillac	CT6	Multi-Axis Acceleration Sensor 1	√	√	√			
2018	Cadillac	CT6	Multi-Axis Acceleration Sensor 2	√	√	√			
2018	Cadillac	CT6	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Cadillac	CT6	Rear Middle Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	CT6	Active Safety Control Module 1 - Processor A	√	√	√	√		0794 0268
2018	Cadillac	CT6	Active Safety Control Module 1 - Processor B	√	√	√	√		0111 0268
2018	Cadillac	CT6	Active Safety Control Module 1 - Processor C	√	√	√	√		0268
2018	Cadillac	CT6	Multifunction Energy Storage Capacitor Control	√	√	√	√	√	0151 0244
2018	Cadillac	CT6	Active Safety Control Module 2 - Processor A	√	√	√	√		0794 0268
2018	Cadillac	CT6	Active Safety Control Module 2 - Processor B	√	√	√	√		0111 0268
2018	Cadillac	CT6	Active Safety Control Module 2 - Processor C	√	√	√	√		0268
2018	Cadillac	CT6	Right Rear Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	CT6	Left Rear Radar Short Range Sensor Module	√	√	√			

2018	Cadillac	CT6	Accessory DC/AC Power Inverter Module	√	√	√	√	√	
2018	Cadillac	CT6	Digital Map Control Module	√	√	√	√		
2018	Cadillac	CTS	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2018	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	0195
2018	Cadillac	CTS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Cadillac	CTS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	Cadillac	CTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Cadillac	CTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0756 0085 0020 0121
2018	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	0099 0100 07B0
2018	Cadillac	CTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Cadillac	CTS	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2018	Cadillac	CTS	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2018	Cadillac	CTS	Keyless Entry Control Module	√	√	√	√	√	
2018	Cadillac	CTS	Passenger Presence Module	√	√	√	√		0057
2018	Cadillac	CTS	Steering Column Lock Control Module	√	√	√	√		
2018	Cadillac	CTS	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2018	Cadillac	CTS	Instrument Cluster	√	√	√	√	√	0247
2018	Cadillac	CTS	Left Side Object Detection Control Module	√	√	√		√	
2018	Cadillac	CTS	Right Side Object Detection Control Module	√	√	√		√	
2018	Cadillac	CTS	Serial Data Gateway Module	√	√	√			
2018	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√		0170
2018	Cadillac	CTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Cadillac	CTS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2018	Cadillac	CTS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Cadillac	CTS	Active Safety Control Module	√	√	√	√	√	
2018	Cadillac	CTS	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2018	Cadillac	CTS	Left Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	CTS	Right Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	CTS	Rear Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	CTS	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Cadillac	CTS	Video Processing Control Module	√	√	√	√	√	

2018	Cadillac	CTS	Active Safety External Communication Control	√	√	√	√		
2018	Cadillac	CTS	Amplifier	√	√	√	√		
2018	Cadillac	CTS	Radio/HVAC Controls	√	√	√	√	√	
2018	Cadillac	CTS	Navigation Control Module	√	√	√	√	√	
2018	Cadillac	CTS	Vehicle Performance Data Recorder	√	√	√	√		
2018	Cadillac	CTS	Radio	√	√	√	√	√	0226 0267 0269
2018	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2018	Cadillac	CTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2018	Cadillac	CTS	Parking Brake Control Module	√	√	√	√	√	0229
2018	Cadillac	CTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Cadillac	CTS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2018	Cadillac	CTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2018	Cadillac	Escalade	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2018	Cadillac	Escalade	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Cadillac	Escalade	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Cadillac	Escalade	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	Cadillac	Escalade	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2018	Cadillac	Escalade	Keyless Entry Control Module	√	√	√	√	√	
2018	Cadillac	Escalade	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Cadillac	Escalade	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2018	Cadillac	Escalade	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2018	Cadillac	Escalade	Passenger Presence Module	√	√	√	√	√	0057
2018	Cadillac	Escalade	Steering Column Lock Control Module	√	√	√	√		
2018	Cadillac	Escalade	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Cadillac	Escalade	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Cadillac	Escalade	Instrument Cluster	√	√	√	√	√	0247
2018	Cadillac	Escalade	Left Side Object Detection Control Module	√	√	√		√	
2018	Cadillac	Escalade	Serial Data Gateway Module	√	√	√			
2018	Cadillac	Escalade	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	Cadillac	Escalade	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2018	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	0037
2018	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150

2018	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2018	Cadillac	Escalade	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2018	Cadillac	Escalade	Power Steering Control Module	√	√	√	√	√	0150
2018	Cadillac	Escalade	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Cadillac	Escalade	Suspension Control Module	√	√	√	√	√	0245
2018	Cadillac	Escalade	Left Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	Escalade	Left Rear Radar Short Range Sensor Module	√	√	√			
2018	Cadillac	Escalade	Right Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	Escalade	Right Rear Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	Escalade	Active Safety Control Module	√	√	√	√	√	
2018	Cadillac	Escalade	Video Processing Control Module	√	√	√	√	√	
2018	Cadillac	Escalade	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Cadillac	Escalade	Frontview Camera Module	√	√	√	√	√	0196 0205
2018	Cadillac	Escalade	Amplifier	√	√	√	√		
2018	Cadillac	Escalade	Assist Step Control Module	√	√	√	√	√	
2018	Cadillac	Escalade	Media Disc Player	√	√	√	√	√	
2018	Cadillac	Escalade	Radio	√	√	√	√	√	0226 0150
2018	Cadillac	Escalade	Parking Brake Control Module	√	√	√	√	√	0229
2018	Cadillac	Escalade	Radio/HVAC Controls	√	√	√	√	√	
2018	Cadillac	Escalade ESV	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2018	Cadillac	Escalade ESV	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Cadillac	Escalade ESV	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Cadillac	Escalade ESV	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Cadillac	Escalade ESV	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	Cadillac	Escalade ESV	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2018	Cadillac	Escalade ESV	Passenger Presence Module	√	√	√	√	√	0057
2018	Cadillac	Escalade ESV	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Cadillac	Escalade ESV	Keyless Entry Control Module	√	√	√	√	√	
2018	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2018	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2018	Cadillac	Escalade ESV	Steering Column Lock Control Module	√	√	√	√		
2018	Cadillac	Escalade ESV	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Cadillac	Escalade ESV	Instrument Cluster	√	√	√	√	√	0247
2018	Cadillac	Escalade ESV	Left Side Object Detection Control Module	√	√	√		√	
2018	Cadillac	Escalade ESV	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Cadillac	Escalade ESV	Serial Data Gateway Module	√	√	√			
2018	Cadillac	Escalade ESV	Trailer Lighting Control Module	√	√	√	√	√	0247

2018	Cadillac	Escalade ESV	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2018	Cadillac	Escalade ESV	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2018	Cadillac	Escalade ESV	Power Steering Control Module	√	√	√	√	√	0150
2018	Cadillac	Escalade ESV	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Cadillac	Escalade ESV	Suspension Control Module	√	√	√	√	√	0245
2018	Cadillac	Escalade ESV	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2018	Cadillac	Escalade ESV	Transfer Case Control Module	√	√	√	√	√	0037
2018	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Cadillac	Escalade ESV	Left Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	Escalade ESV	Left Rear Radar Short Range Sensor Module	√	√	√			
2018	Cadillac	Escalade ESV	Right Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	Escalade ESV	Right Rear Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	Escalade ESV	Active Safety Control Module	√	√	√	√	√	
2018	Cadillac	Escalade ESV	Video Processing Control Module	√	√	√	√	√	
2018	Cadillac	Escalade ESV	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Cadillac	Escalade ESV	Frontview Camera Module	√	√	√	√	√	0205 0196
2018	Cadillac	Escalade ESV	Amplifier	√	√	√	√		
2018	Cadillac	Escalade ESV	Assist Step Control Module	√	√	√	√	√	
2018	Cadillac	Escalade ESV	Radio Controls	√	√	√	√		0241
2018	Cadillac	Escalade ESV	HVAC Controls	√	√	√	√	√	
2018	Cadillac	Escalade ESV	Media Disc Player	√	√	√	√	√	
2018	Cadillac	Escalade ESV	Radio	√	√	√	√	√	0226 0150
2018	Cadillac	Escalade ESV	Parking Brake Control Module	√	√	√	√	√	0229
2018	Cadillac	XT5	Headlamp Control Module	√	√	√	√	√	0195
2018	Cadillac	XT5	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Cadillac	XT5	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Cadillac	XT5	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Cadillac	XT5	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Cadillac	XT5	Engine Control Module	√	√	√	√	√	0263 0156 0209 0006 0115 0756 0086 0085 0154 0217 0258 0236
2018	Cadillac	XT5	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Cadillac	XT5	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2018	Cadillac	XT5	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2018	Cadillac	XT5	Keyless Entry Control Module	√	√	√	√	√	
2018	Cadillac	XT5	Passenger Presence Module	√	√	√	√	√	0057
2018	Cadillac	XT5	Steering Column Lock Control Module	√	√	√	√		
2018	Cadillac	XT5	Instrument Cluster	√	√	√	√	√	0247

2018	Cadillac	XT5	Left Side Object Detection Control Module	√	√	√		√	
2018	Cadillac	XT5	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Cadillac	XT5	Serial Data Gateway Module	√	√	√			
2018	Cadillac	XT5	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2018	Cadillac	XT5	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	Cadillac	XT5	Chassis Control Module	√	√	√	√	√	0014 0078
2018	Cadillac	XT5	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2018	Cadillac	XT5	Transmission Control Module	√	√	√	√	√	0020 0084
2018	Cadillac	XT5	Amplifier	√	√	√	√		
2018	Cadillac	XT5	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Cadillac	XT5	HVAC Controls	√	√	√	√	√	
2018	Cadillac	XT5	Radio Controls	√	√	√	√		0241
2018	Cadillac	XT5	Radio	√	√	√	√	√	0226 0150
2018	Cadillac	XT5	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Cadillac	XT5	Active Safety Control Module	√	√	√	√		
2018	Cadillac	XT5	Frontview Camera Module	√	√	√	√		0196
2018	Cadillac	XT5	Left Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	XT5	Right Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	XT5	Rear Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	XT5	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Cadillac	XT5	Video Processing Control Module	√	√	√	√	√	
2018	Cadillac	XT5	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2018	Cadillac	XT5	Suspension Control Module	√	√	√	√	√	
2018	Cadillac	XT5	Power Steering Control Module	√	√	√	√		0089 0084
2018	Cadillac	XT5	Media Disc Player	√	√	√	√	√	
2018	Cadillac	XTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2018	Cadillac	XTS	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Cadillac	XTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Cadillac	XTS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	Cadillac	XTS	Headlamp Control Module	√	√	√	√	√	0195
2018	Cadillac	XTS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048
2018	Cadillac	XTS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2018	Cadillac	XTS	Transmission Control Module	√	√	√	√	√	0016
2018	Cadillac	XTS	Instrument Cluster	√	√	√	√	√	0247
2018	Cadillac	XTS	Serial Data Gateway Module	√	√	√			
2018	Cadillac	XTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Cadillac	XTS	Right Side Object Detection Control Module	√	√	√		√	

2018	Cadillac	XTS	Left Side Object Detection Control Module	√	√	√		√	
2018	Cadillac	XTS	Active Safety Control Module	√	√	√	√	√	
2018	Cadillac	XTS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2018	Cadillac	XTS	Left Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	XTS	Left Rear Radar Short Range Sensor Module	√	√	√			
2018	Cadillac	XTS	Right Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	XTS	Right Rear Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	XTS	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Cadillac	XTS	Video Processing Control Module	√	√	√	√	√	
2018	Cadillac	XTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Cadillac	XTS	Keyless Entry Control Module	√	√	√	√	√	
2018	Cadillac	XTS	Passenger Presence Module	√	√	√	√		0057
2018	Cadillac	XTS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0159
2018	Cadillac	XTS	Amplifier	√	√	√	√		
2018	Cadillac	XTS	Radio/HVAC Controls	√	√	√	√	√	
2018	Cadillac	XTS	Radio	√	√	√	√	√	0226 0267 0269
2018	Cadillac	XTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2018	Cadillac	XTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2018	Cadillac	XTS	Parking Brake Control Module	√	√	√	√	√	0229
2018	Cadillac	XTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Cadillac	XTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2018	Cadillac	XTS	Rear Differential Clutch Control Module	√	√	√	√	√	
2018	Cadillac	XTS	Power Steering Control Module	√	√	√	√	√	0089
2018	Cadillac	XTS	Rear Audio Control Module	√	√	√	√	√	
2017	Cadillac	ATS	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2017	Cadillac	ATS	Headlamp Control Module	√	√	√	√	√	0195
2017	Cadillac	ATS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Cadillac	ATS	Steering Column Lock Control Module	√	√	√	√		
2017	Cadillac	ATS	Amplifier	√	√	√	√		
2017	Cadillac	ATS	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Cadillac	ATS	Radio/HVAC Controls	√	√	√	√	√	
2017	Cadillac	ATS	Media Disc Player	√	√	√	√	√	
2017	Cadillac	ATS	Navigation Control Module	√	√	√	√	√	
2017	Cadillac	ATS	Radio	√	√	√	√	√	0226 0150
2017	Cadillac	ATS	Instrument Cluster	√	√	√	√	√	0247
2017	Cadillac	ATS	Trailer Interface Control Module	√	√	√	√	√	0247

2017	Cadillac	ATS	Parking Assist Control Module	√	√	√	√	√	
2017	Cadillac	ATS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Cadillac	ATS	Keyless Entry Control Module	√	√	√	√	√	
2017	Cadillac	ATS	Passenger Presence Module	√	√	√	√		0057
2017	Cadillac	ATS	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2017	Cadillac	ATS	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2017	Cadillac	ATS	Pedestrian Impact Detection Module	√	√	√	√		0170
2017	Cadillac	ATS	Vehicle Performance Data Recorder	√	√	√	√		
2017	Cadillac	ATS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Cadillac	ATS	Left Side Object Detection Control Module	√	√	√		√	
2017	Cadillac	ATS	Right Side Object Detection Control Module	√	√	√		√	
2017	Cadillac	ATS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2017	Cadillac	ATS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2017	Cadillac	ATS	Parking Brake Control Module	√	√	√	√	√	0229
2017	Cadillac	ATS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2017	Cadillac	ATS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Cadillac	ATS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2017	Cadillac	ATS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Cadillac	ATS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2017	Cadillac	ATS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2017	Cadillac	ATS	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Cadillac	ATS	Serial Data Gateway Module	√	√	√			
2017	Cadillac	ATS	Transfer Case Control Module	√	√	√	√	√	0099 0100 07B0
2017	Cadillac	ATS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0020 0213 0756 0085
2017	Cadillac	ATS	Active Safety Control Module	√	√	√	√	√	
2017	Cadillac	ATS	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Cadillac	ATS	Rear Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	ATS	Left Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	ATS	Right Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	ATS	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Cadillac	ATS	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2017	Cadillac	CT6	Battery Energy Control Module	√			√		
2017	Cadillac	CT6	Electric A/C Compressor Control Module	√					
2017	Cadillac	CT6	Steering Column Lock Control Module	√	√	√	√		

2017	Cadillac	CT6	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2017	Cadillac	CT6	Headlamp Control Module	√	√	√	√	√	0195
2017	Cadillac	CT6	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Cadillac	CT6	Drive Motor Control Module 1	√	√	√	√		
2017	Cadillac	CT6	Drive Motor Control Module 2	√	√	√	√		
2017	Cadillac	CT6	Hybrid Powertrain Control Module	√	√	√	√	√	0018
2017	Cadillac	CT6	Hybrid Powertrain Control Module 2	√	√	√	√	√	0125 0056 0218 0122
2017	Cadillac	CT6	Frontview Camera Module	√	√	√	√	√	0247 0196
2017	Cadillac	CT6	Amplifier	√	√	√	√		
2017	Cadillac	CT6	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Cadillac	CT6	HVAC Controls	√	√	√	√	√	
2017	Cadillac	CT6	Radio Controls	√	√	√	√		0241
2017	Cadillac	CT6	Media Disc Player	√	√	√	√	√	
2017	Cadillac	CT6	Navigation Control Module	√	√	√	√	√	
2017	Cadillac	CT6	Radio	√	√	√	√	√	0226 0150
2017	Cadillac	CT6	Infotainment Control Touchpad	√	√	√	√	√	
2017	Cadillac	CT6	Instrument Cluster	√	√	√	√	√	0247
2017	Cadillac	CT6	Serial Data Gateway Module	√	√	√			
2017	Cadillac	CT6	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Cadillac	CT6	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Cadillac	CT6	Keyless Entry Control Module	√	√	√	√	√	
2017	Cadillac	CT6	Passenger Presence Module	√	√	√	√	√	0057
2017	Cadillac	CT6	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2017	Cadillac	CT6	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2017	Cadillac	CT6	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Cadillac	CT6	Left Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	CT6	Right Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	CT6	Rear Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	CT6	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Cadillac	CT6	Left Side Object Detection Control Module	√	√	√		√	
2017	Cadillac	CT6	Brake Booster Control Module	√	√	√	√		
2017	Cadillac	CT6	Rear Wheel Steering Control Module	√	√	√	√		
2017	Cadillac	CT6	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2017	Cadillac	CT6	Power Steering Control Module	√	√	√	√		0081 0080 0089
2017	Cadillac	CT6	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Cadillac	CT6	Seat Memory Control Module - Left Rear	√	√	√	√	√	
2017	Cadillac	CT6	Seat Memory Control Module - Passenger	√	√	√	√	√	
2017	Cadillac	CT6	Seat Memory Control Module - Right Rear	√	√	√	√	√	

2017	Cadillac	CT6	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Cadillac	CT6	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0176 0238 0256 0085
2017	Cadillac	CT6	Active Safety Control Module	√	√	√	√	√	
2017	Cadillac	CT6	Night Vision Camera Control Module	√	√	√	√	√	0492
2017	Cadillac	CT6	Video Processing Control Module	√	√	√	√	√	
2017	Cadillac	CT6	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Cadillac	CT6	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	Cadillac	CT6	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2017	Cadillac	CT6	Transfer Case Control Module	√	√	√	√	√	0037 0099
2017	Cadillac	CT6	Suspension Control Module	√	√	√	√	√	0245
2017	Cadillac	CT6	Accessory DC/AC Power Inverter Module	√	√	√	√	√	
2017	Cadillac	CTS	Radio	√	√	√	√	√	0226 0150 0267 0269
2017	Cadillac	CTS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Cadillac	CTS	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2017	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	0195
2017	Cadillac	CTS	Instrument Cluster	√	√	√	√	√	0247
2017	Cadillac	CTS	Amplifier	√	√	√	√	√	
2017	Cadillac	CTS	Radio/HVAC Controls	√	√	√	√	√	
2017	Cadillac	CTS	Navigation Control Module	√	√	√	√	√	
2017	Cadillac	CTS	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Cadillac	CTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Cadillac	CTS	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Cadillac	CTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Cadillac	CTS	Keyless Entry Control Module	√	√	√	√	√	
2017	Cadillac	CTS	Passenger Presence Module	√	√	√	√	√	0057
2017	Cadillac	CTS	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2017	Cadillac	CTS	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2017	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√	√	0170
2017	Cadillac	CTS	Vehicle Performance Data Recorder	√	√	√	√	√	

2017	Cadillac	CTS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Cadillac	CTS	Left Side Object Detection Control Module	√	√	√		√	
2017	Cadillac	CTS	Right Side Object Detection Control Module	√	√	√		√	
2017	Cadillac	CTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Cadillac	CTS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2017	Cadillac	CTS	Steering Column Lock Control Module	√	√	√	√		
2017	Cadillac	CTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0756 0085 0020 0131
2017	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Cadillac	CTS	Serial Data Gateway Module	√	√	√			
2017	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2017	Cadillac	CTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2017	Cadillac	CTS	Parking Brake Control Module	√	√	√	√	√	0229
2017	Cadillac	CTS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2017	Cadillac	CTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	0099 0100 07B0
2017	Cadillac	CTS	Active Safety Control Module	√	√	√	√	√	
2017	Cadillac	CTS	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Cadillac	CTS	Left Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	CTS	Rear Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	CTS	Right Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	CTS	Video Processing Control Module	√	√	√	√	√	
2017	Cadillac	CTS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2017	Cadillac	CTS	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2017	Cadillac	CTS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2017	Cadillac	CTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2017	Cadillac	CTS	Active Safety External Communication Control	√	√	√	√		
2017	Cadillac	Escalade	Steering Column Lock Control Module	√	√	√	√		
2017	Cadillac	Escalade	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2017	Cadillac	Escalade	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	Cadillac	Escalade	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010

2017	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2017	Cadillac	Escalade	Amplifier	√	√	√	√		
2017	Cadillac	Escalade	Assist Step Control Module	√	√	√	√	√	
2017	Cadillac	Escalade	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Cadillac	Escalade	Radio/HVAC Controls	√	√	√	√	√	
2017	Cadillac	Escalade	Media Disc Player	√	√	√	√	√	
2017	Cadillac	Escalade	Rear Audio Control Module	√	√	√	√	√	
2017	Cadillac	Escalade	Radio	√	√	√	√	√	0226 0150
2017	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Cadillac	Escalade	Instrument Cluster	√	√	√	√	√	0247
2017	Cadillac	Escalade	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Cadillac	Escalade	Left Side Object Detection Control Module	√	√	√		√	
2017	Cadillac	Escalade	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Cadillac	Escalade	Seat Memory Control Module - Passenger	√	√	√	√	√	
2017	Cadillac	Escalade	Keyless Entry Control Module	√	√	√	√	√	
2017	Cadillac	Escalade	Passenger Presence Module	√	√	√	√	√	0057
2017	Cadillac	Escalade	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2017	Cadillac	Escalade	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2017	Cadillac	Escalade	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Cadillac	Escalade	Active Safety Control Module	√	√	√	√	√	
2017	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Cadillac	Escalade	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Cadillac	Escalade	Right Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	Escalade	Left Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	Escalade	Video Processing Control Module	√	√	√	√	√	
2017	Cadillac	Escalade	Right Rear Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	Escalade	Left Rear Radar Short Range Sensor Module	√	√	√			
2017	Cadillac	Escalade	Frontview Camera Module	√	√	√	√	√	0196 0205
2017	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	0037
2017	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2017	Cadillac	Escalade	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2017	Cadillac	Escalade	Power Steering Control Module	√	√	√	√	√	0150
2017	Cadillac	Escalade	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Cadillac	Escalade	Suspension Control Module	√	√	√	√	√	0245
2017	Cadillac	Escalade	Parking Brake Control Module	√	√	√	√	√	0229
2017	Cadillac	Escalade	Serial Data Gateway Module	√	√	√			

2017	Cadillac	Escalade	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2017	Cadillac	Escalade ESV	Steering Column Lock Control Module	√	√	√	√		
2017	Cadillac	Escalade ESV	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	Cadillac	Escalade ESV	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2017	Cadillac	Escalade ESV	Radio/HVAC Controls		√	√			
2017	Cadillac	Escalade ESV	Amplifier	√	√	√	√		
2017	Cadillac	Escalade ESV	Assist Step Control Module	√	√	√	√	√	
2017	Cadillac	Escalade ESV	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Cadillac	Escalade ESV	Media Disc Player	√	√	√	√	√	
2017	Cadillac	Escalade ESV	Rear Audio Control Module	√	√	√	√	√	
2017	Cadillac	Escalade ESV	Radio	√	√	√	√	√	0226 0150
2017	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Cadillac	Escalade ESV	Instrument Cluster	√	√	√	√	√	0247
2017	Cadillac	Escalade ESV	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Cadillac	Escalade ESV	Left Side Object Detection Control Module	√	√	√		√	
2017	Cadillac	Escalade ESV	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Cadillac	Escalade ESV	Seat Memory Control Module - Passenger	√	√	√	√	√	
2017	Cadillac	Escalade ESV	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Cadillac	Escalade ESV	Keyless Entry Control Module	√	√	√	√	√	
2017	Cadillac	Escalade ESV	Passenger Presence Module	√	√	√	√	√	0057
2017	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2017	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2017	Cadillac	Escalade ESV	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2017	Cadillac	Escalade ESV	Active Safety Control Module	√	√	√	√	√	
2017	Cadillac	Escalade ESV	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Cadillac	Escalade ESV	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Cadillac	Escalade ESV	Left Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	Escalade ESV	Left Rear Radar Short Range Sensor Module	√	√	√			
2017	Cadillac	Escalade ESV	Right Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	Escalade ESV	Right Rear Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	Escalade ESV	Video Processing Control Module	√	√	√	√	√	
2017	Cadillac	Escalade ESV	Frontview Camera Module	√	√	√	√	√	0196 0205
2017	Cadillac	Escalade ESV	Transfer Case Control Module	√	√	√	√	√	0037

2017	Cadillac	Escalade ESV	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2017	Cadillac	Escalade ESV	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2017	Cadillac	Escalade ESV	Power Steering Control Module	√	√	√	√	√	0150
2017	Cadillac	Escalade ESV	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Cadillac	Escalade ESV	Suspension Control Module	√	√	√	√	√	0245
2017	Cadillac	Escalade ESV	Parking Brake Control Module	√	√	√	√	√	0229
2017	Cadillac	Escalade ESV	Serial Data Gateway Module	√	√	√			
2017	Cadillac	Escalade ESV	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2017	Cadillac	XT5	Radio	√	√	√	√	√	0226 0150
2017	Cadillac	XT5	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Cadillac	XT5	Instrument Cluster	√	√	√	√	√	0247
2017	Cadillac	XT5	Engine Control Module	√	√	√	√	√	0263 0156 0209 0006 0115 0756 0086 0085 0154 0217 0258 0236
2017	Cadillac	XT5	Transmission Control Module	√	√	√	√	√	0020 0084
2017	Cadillac	XT5	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Cadillac	XT5	Headlamp Control Module	√	√	√	√	√	0195
2017	Cadillac	XT5	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Cadillac	XT5	Passenger Presence Module	√	√	√	√	√	0057
2017	Cadillac	XT5	Keyless Entry Control Module	√	√	√	√	√	
2017	Cadillac	XT5	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Cadillac	XT5	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Cadillac	XT5	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Cadillac	XT5	Rear Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	XT5	Left Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	XT5	Right Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	XT5	Serial Data Gateway Module	√	√	√			
2017	Cadillac	XT5	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Cadillac	XT5	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	Cadillac	XT5	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Cadillac	XT5	Radio Controls	√	√	√	√		0241
2017	Cadillac	XT5	HVAC Controls	√	√	√	√	√	
2017	Cadillac	XT5	Amplifier	√	√	√	√		
2017	Cadillac	XT5	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2017	Cadillac	XT5	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2017	Cadillac	XT5	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Cadillac	XT5	Left Side Object Detection Control Module	√	√	√		√	
2017	Cadillac	XT5	Active Safety Control Module	√	√	√	√		

2017	Cadillac	XT5	Frontview Camera Module	√	√	√	√		0196
2017	Cadillac	XT5	Video Processing Control Module	√	√	√	√	√	
2017	Cadillac	XT5	Chassis Control Module	√	√	√	√	√	0014 0078
2017	Cadillac	XT5	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2017	Cadillac	XT5	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2017	Cadillac	XT5	Suspension Control Module	√	√	√	√	√	
2017	Cadillac	XT5	Steering Column Lock Control Module	√	√	√	√		
2017	Cadillac	XT5	Media Disc Player	√	√	√	√	√	
2017	Cadillac	XT5	Power Steering Control Module	√	√	√	√		0089 0084
2017	Cadillac	XT5	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2017	Cadillac	XTS	Transmission Control Module	√	√	√	√	√	0016
2017	Cadillac	XTS	Headlamp Control Module	√	√	√	√	√	0195
2017	Cadillac	XTS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Cadillac	XTS	Instrument Cluster	√	√	√	√	√	0247
2017	Cadillac	XTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Cadillac	XTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Cadillac	XTS	Keyless Entry Control Module	√	√	√	√	√	
2017	Cadillac	XTS	Passenger Presence Module	√	√	√	√		0057
2017	Cadillac	XTS	Active Safety Control Module	√	√	√	√	√	
2017	Cadillac	XTS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2017	Cadillac	XTS	Left Side Object Detection Control Module	√	√	√		√	
2017	Cadillac	XTS	Right Side Object Detection Control Module	√	√	√		√	
2017	Cadillac	XTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Cadillac	XTS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2017	Cadillac	XTS	Video Processing Control Module	√	√	√	√	√	
2017	Cadillac	XTS	Amplifier	√	√	√	√		
2017	Cadillac	XTS	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Cadillac	XTS	Radio/HVAC Controls	√	√	√	√	√	
2017	Cadillac	XTS	Radio	√	√	√	√	√	0226 0150
2017	Cadillac	XTS	Media Disc Player	√	√	√	√	√	
2017	Cadillac	XTS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Cadillac	XTS	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0066 0086 0217 0258 0263 0006 0131
2017	Cadillac	XTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2017	Cadillac	XTS	Parking Brake Control Module	√	√	√	√	√	0229
2017	Cadillac	XTS	Power Steering Control Module	√	√	√	√	√	0089
2017	Cadillac	XTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111

2017	Cadillac	XTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Cadillac	XTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2017	Cadillac	XTS	Rear Differential Clutch Control Module	√	√	√	√	√	
2017	Cadillac	XTS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2017	Cadillac	XTS	Serial Data Gateway Module	√	√	√			
2017	Cadillac	XTS	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Cadillac	XTS	Left Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	XTS	Right Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	XTS	Rear Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	XTS	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Cadillac	XTS	Steering Column Lock Control Module	√	√	√	√		
2016	Cadillac	ATS	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2016	Cadillac	ATS	Steering Column Lock Control Module	√	√	√	√		
2016	Cadillac	ATS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Cadillac	ATS	Instrument Cluster	√	√	√	√	√	0247
2016	Cadillac	ATS	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Cadillac	ATS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0020 0213 0756 0085
2016	Cadillac	ATS	Headlamp Control Module	√	√	√	√	√	0195
2016	Cadillac	ATS	Active Safety Control Module	√	√	√	√	√	
2016	Cadillac	ATS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2016	Cadillac	ATS	Left Side Object Detection Control Module	√	√	√		√	
2016	Cadillac	ATS	Parking Assist Control Module	√	√	√	√	√	0247
2016	Cadillac	ATS	Pedestrian Impact Detection Module	√	√	√	√		0170
2016	Cadillac	ATS	Right Side Object Detection Control Module	√	√	√		√	
2016	Cadillac	ATS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Cadillac	ATS	Transfer Case Control Module	√	√	√	√	√	0099 0100 07B0
2016	Cadillac	ATS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2016	Cadillac	ATS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2016	Cadillac	ATS	Parking Brake Control Module	√	√	√	√	√	0229
2016	Cadillac	ATS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2016	Cadillac	ATS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Cadillac	ATS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2016	Cadillac	ATS	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2016	Cadillac	ATS	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2016	Cadillac	ATS	Passenger Presence Module	√	√	√	√		0057
2016	Cadillac	ATS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2016	Cadillac	ATS	Keyless Entry Control Module	√	√	√	√	√	
2016	Cadillac	ATS	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Cadillac	ATS	Long Range Radar Sensor Module	√	√	√	√		0260
2016	Cadillac	ATS	Left Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	ATS	Right Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	ATS	Rear Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	ATS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	Cadillac	ATS	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2016	Cadillac	ATS	Amplifier	√	√	√	√		
2016	Cadillac	ATS	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Cadillac	ATS	Radio/HVAC Controls	√	√	√	√	√	
2016	Cadillac	ATS	Navigation Control Module	√	√	√	√	√	
2016	Cadillac	ATS	Media Disc Player	√	√	√	√	√	
2016	Cadillac	ATS	Radio	√	√	√	√	√	0226 0150
2016	Cadillac	ATS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Cadillac	ATS	Vehicle Performance Data Recorder	√	√	√	√		
2016	Cadillac	ATS	Rear Audio Control Module	√	√	√	√	√	
2016	Cadillac	ATS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2016	Cadillac	CT6	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0238 0756 0085
2016	Cadillac	CT6	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Cadillac	CT6	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2016	Cadillac	CT6	Liftgate Control Module	√	√	√	√	√	0146
2016	Cadillac	CT6	Transfer Case Control Module	√	√	√	√	√	0037 0099
2016	Cadillac	CT6	Headlamp Control Module	√	√	√	√	√	0195
2016	Cadillac	CT6	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	Cadillac	CT6	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2016	Cadillac	CT6	Passenger Presence Module	√	√	√	√	√	0057
2016	Cadillac	CT6	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266

2016	Cadillac	CT6	Active Safety Control Module	√	√	√	√	√	
2016	Cadillac	CT6	Frontview Camera Module	√	√	√	√	√	0196 0205
2016	Cadillac	CT6	Left Side Object Detection Control Module	√	√	√		√	
2016	Cadillac	CT6	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Cadillac	CT6	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2016	Cadillac	CT6	Keyless Entry Control Module	√	√	√	√	√	
2016	Cadillac	CT6	Instrument Cluster	√	√	√	√	√	0247
2016	Cadillac	CT6	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Cadillac	CT6	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Cadillac	CT6	Video Processing Control Module	√	√	√	√	√	
2016	Cadillac	CT6	Amplifier	√	√	√	√		
2016	Cadillac	CT6	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Cadillac	CT6	Navigation Control Module	√	√	√	√	√	
2016	Cadillac	CT6	Radio	√	√	√	√	√	0226 0150
2016	Cadillac	CT6	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Cadillac	CT6	Long Range Radar Sensor Module	√	√	√	√		0260
2016	Cadillac	CT6	Left Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	CT6	Rear Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	CT6	Right Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	CT6	Serial Data Gateway Module	√	√	√			
2016	Cadillac	CT6	Seat Memory Control Module - Passenger	√	√	√	√	√	
2016	Cadillac	CT6	Seat Memory Control Module - Left Rear	√	√	√	√	√	
2016	Cadillac	CT6	Seat Memory Control Module - Right Rear	√	√	√	√	√	
2016	Cadillac	CT6	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2016	Cadillac	CT6	Power Steering Control Module	√	√	√	√		0081 0080 0089
2016	Cadillac	CT6	Suspension Control Module	√	√	√	√	√	0245
2016	Cadillac	CT6	Radio Controls	√	√	√	√		0241
2016	Cadillac	CT6	HVAC Controls	√	√	√	√	√	
2016	Cadillac	CT6	Brake Booster Control Module	√	√	√	√		
2016	Cadillac	CT6	Rear Wheel Steering Control Module	√	√	√	√		
2016	Cadillac	CT6	Night Vision Camera Control Module	√	√	√	√		0492
2016	Cadillac	CT6	Infotainment Control Touchpad	√	√	√	√	√	
2016	Cadillac	CT6	Media Disc Player	√	√	√	√	√	
2016	Cadillac	CT6	Accessory DC/AC Power Inverter Module	√	√	√	√	√	
2016	Cadillac	CT6	Steering Column Lock Control Module	√	√	√	√		
2016	Cadillac	CTS	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2016	Cadillac	CTS	Steering Column Lock Control Module	√	√	√	√		
2016	Cadillac	CTS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Cadillac	CTS	Instrument Cluster	√	√	√	√	√	0247

2016	Cadillac	CTS	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	0195
2016	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	0099 0100 07B0
2016	Cadillac	CTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0756 0085 0020 0131
2016	Cadillac	CTS	Active Safety Control Module	√	√	√	√	√	
2016	Cadillac	CTS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2016	Cadillac	CTS	Left Side Object Detection Control Module	√	√	√		√	
2016	Cadillac	CTS	Right Side Object Detection Control Module	√	√	√		√	
2016	Cadillac	CTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Cadillac	CTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√		0170
2016	Cadillac	CTS	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2016	Cadillac	CTS	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2016	Cadillac	CTS	Passenger Presence Module	√	√	√	√		0057
2016	Cadillac	CTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2016	Cadillac	CTS	Keyless Entry Control Module	√	√	√	√	√	
2016	Cadillac	CTS	Amplifier	√	√	√	√		
2016	Cadillac	CTS	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Cadillac	CTS	Radio/HVAC Controls	√	√	√	√	√	
2016	Cadillac	CTS	Navigation Control Module	√	√	√	√	√	
2016	Cadillac	CTS	Radio	√	√	√	√	√	0226 0150
2016	Cadillac	CTS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Cadillac	CTS	Long Range Radar Sensor Module	√	√	√	√		0260
2016	Cadillac	CTS	Left Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	CTS	Rear Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	CTS	Right Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	CTS	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2016	Cadillac	CTS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0000 0150
2016	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2016	Cadillac	CTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2016	Cadillac	CTS	Parking Brake Control Module	√	√	√	√	√	0229
2016	Cadillac	CTS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2016	Cadillac	CTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Cadillac	CTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245

2016	Cadillac	CTS	Video Processing Control Module	√	√	√	√	√	
2016	Cadillac	CTS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2016	Cadillac	CTS	Vehicle Performance Data Recorder	√	√	√	√		
2016	Cadillac	ELR	Auxiliary Transmission Fluid Pump	√	√	√	√		
2016	Cadillac	ELR	Battery Charger Control Module	√			√		
2016	Cadillac	ELR	Battery Energy Control Module	√			√		
2016	Cadillac	ELR	Coolant Heater Control Module	√	√	√			
2016	Cadillac	ELR	Drive Motor Control Module 1	√	√	√	√		
2016	Cadillac	ELR	Drive Motor Control Module 2	√	√	√	√		
2016	Cadillac	ELR	Transmission Control Module	√	√	√	√	√	
2016	Cadillac	ELR	Electric A/C Compressor Control Module	√					
2016	Cadillac	ELR	Hybrid Powertrain Control Module	√	√	√	√	√	
2016	Cadillac	ELR	Hybrid Powertrain Control Module 2	√	√	√	√	√	0124 0125 0056 0218 0122 0123 0127 0228
2016	Cadillac	ELR	Steering Column Lock Control Module	√	√	√	√		
2016	Cadillac	ELR	Instrument Cluster	√	√	√	√	√	0247
2016	Cadillac	ELR	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Cadillac	ELR	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Cadillac	ELR	Left Side Object Detection Control Module	√	√	√		√	
2016	Cadillac	ELR	Parking Assist Control Module	√	√	√	√	√	0247
2016	Cadillac	ELR	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Cadillac	ELR	Headlamp Control Module	√	√	√	√	√	0195
2016	Cadillac	ELR	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2016	Cadillac	ELR	Passenger Presence Module	√	√	√	√		0057
2016	Cadillac	ELR	Keyless Entry Control Module	√	√	√	√	√	
2016	Cadillac	ELR	Engine Control Module	√	√	√	√	√	0209 0132 0067 0086 0217 0176
2016	Cadillac	ELR	Electronic Brake Control Module	√	√	√	√	√	0263 0371 0111
2016	Cadillac	ELR	Parking Brake Control Module	√	√	√	√	√	0229
2016	Cadillac	ELR	Power Steering Control Module	√	√	√	√		0081 0080 0089
2016	Cadillac	ELR	Suspension Control Module	√	√	√	√	√	
2016	Cadillac	ELR	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Cadillac	ELR	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2016	Cadillac	ELR	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0000 0150 0000 0150
2016	Cadillac	ELR	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Cadillac	ELR	Amplifier	√	√	√	√		
2016	Cadillac	ELR	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Cadillac	ELR	Distance Sensing Cruise Control Module	√	√	√	√		0047
2016	Cadillac	ELR	HVAC Control Module	√	√	√	√	√	0007 0129

2016	Cadillac	ELR	Radio/HVAC Controls	√	√	√	√	√	
2016	Cadillac	ELR	Radio	√	√	√	√	√	0226 0150
2016	Cadillac	ELR	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2016	Cadillac	Escalade	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2016	Cadillac	Escalade	Steering Column Lock Control Module	√	√	√	√		
2016	Cadillac	Escalade	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Cadillac	Escalade	Instrument Cluster	√	√	√	√	√	0247
2016	Cadillac	Escalade	Liftgate Control Module	√	√	√	√	√	0146 0169
2016	Cadillac	Escalade	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2016	Cadillac	Escalade	Active Safety Control Module	√	√	√	√	√	
2016	Cadillac	Escalade	Frontview Camera Module	√	√	√	√	√	0196 0205
2016	Cadillac	Escalade	Left Side Object Detection Control Module	√	√	√		√	
2016	Cadillac	Escalade	Video Processing Control Module	√	√	√	√	√	
2016	Cadillac	Escalade	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Cadillac	Escalade	Passenger Presence Module	√	√	√	√	√	0057
2016	Cadillac	Escalade	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2016	Cadillac	Escalade	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2016	Cadillac	Escalade	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Cadillac	Escalade	Keyless Entry Control Module	√	√	√	√	√	
2016	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	0037
2016	Cadillac	Escalade	Amplifier	√	√	√	√		
2016	Cadillac	Escalade	Assist Step Control Module	√	√	√	√	√	
2016	Cadillac	Escalade	Media Disc Player	√	√	√	√	√	
2016	Cadillac	Escalade	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Cadillac	Escalade	Radio	√	√	√	√	√	0226 0150
2016	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2016	Cadillac	Escalade	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2016	Cadillac	Escalade	Power Steering Control Module	√	√	√	√	√	0150
2016	Cadillac	Escalade	Suspension Control Module	√	√	√	√	√	0245
2016	Cadillac	Escalade	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Cadillac	Escalade	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Cadillac	Escalade	Long Range Radar Sensor Module	√	√	√	√		0260
2016	Cadillac	Escalade	Left Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	Escalade	Left Rear Radar Short Range Sensor Module	√	√	√			
2016	Cadillac	Escalade	Right Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	Escalade	Right Rear Short Range Radar Sensor Module	√	√	√			

2016	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	Cadillac	Escalade	Parking Brake Control Module	√	√	√	√	√	0229
2016	Cadillac	Escalade	Radio/HVAC Controls	√	√	√	√	√	
2016	Cadillac	Escalade	Seat Memory Control Module - Passenger	√	√	√	√	√	
2016	Cadillac	Escalade ESV	Steering Column Lock Control Module	√	√	√	√		
2016	Cadillac	Escalade ESV	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Cadillac	Escalade ESV	Instrument Cluster	√	√	√	√	√	0247
2016	Cadillac	Escalade ESV	Liftgate Control Module	√	√	√	√	√	0146 0169
2016	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2016	Cadillac	Escalade ESV	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2016	Cadillac	Escalade ESV	Active Safety Control Module	√	√	√	√	√	
2016	Cadillac	Escalade ESV	Frontview Camera Module	√	√	√	√	√	0196 0205
2016	Cadillac	Escalade ESV	Left Side Object Detection Control Module	√	√	√		√	
2016	Cadillac	Escalade ESV	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Cadillac	Escalade ESV	Video Processing Control Module	√	√	√	√	√	
2016	Cadillac	Escalade ESV	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Cadillac	Escalade ESV	Keyless Entry Control Module	√	√	√	√	√	
2016	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2016	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2016	Cadillac	Escalade ESV	Passenger Presence Module	√	√	√	√	√	0057
2016	Cadillac	Escalade ESV	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Cadillac	Escalade ESV	Transfer Case Control Module	√	√	√	√	√	0037
2016	Cadillac	Escalade ESV	Amplifier	√	√	√	√		
2016	Cadillac	Escalade ESV	Assist Step Control Module	√	√	√	√	√	
2016	Cadillac	Escalade ESV	Media Disc Player	√	√	√	√	√	
2016	Cadillac	Escalade ESV	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Cadillac	Escalade ESV	HVAC Controls	√	√	√	√	√	
2016	Cadillac	Escalade ESV	Radio Controls	√	√	√	√		0241
2016	Cadillac	Escalade ESV	Radio	√	√	√	√	√	0226 0150
2016	Cadillac	Escalade ESV	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2016	Cadillac	Escalade ESV	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2016	Cadillac	Escalade ESV	Power Steering Control Module	√	√	√	√	√	0150
2016	Cadillac	Escalade ESV	Suspension Control Module	√	√	√	√	√	0245
2016	Cadillac	Escalade ESV	Steering Wheel Angle Sensor Module	√	√	√			0093 0090

2016	Cadillac	Escalade ESV	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Cadillac	Escalade ESV	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Cadillac	Escalade ESV	Right Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	Escalade ESV	Right Rear Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	Escalade ESV	Left Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	Escalade ESV	Left Rear Radar Short Range Sensor Module	√	√	√			
2016	Cadillac	Escalade ESV	Long Range Radar Sensor Module	√	√	√	√		0260
2016	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	Cadillac	Escalade ESV	Parking Brake Control Module	√	√	√	√	√	0229
2016	Cadillac	Escalade ESV	Seat Memory Control Module - Passenger	√	√	√	√	√	
2016	Cadillac	SRX	Steering Column Lock Control Module	√	√	√	√		
2016	Cadillac	SRX	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Cadillac	SRX	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Cadillac	SRX	Instrument Cluster	√	√	√	√	√	0247
2016	Cadillac	SRX	Transmission Control Module	√	√	√	√	√	0016
2016	Cadillac	SRX	Headlamp Control Module	√	√	√	√	√	0195
2016	Cadillac	SRX	Liftgate Control Module	√	√	√	√	√	0146 0169
2016	Cadillac	SRX	Active Safety Control Module	√	√	√	√	√	
2016	Cadillac	SRX	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2016	Cadillac	SRX	Left Side Object Detection Control Module	√	√	√		√	
2016	Cadillac	SRX	Parking Assist Control Module	√	√	√	√	√	0247
2016	Cadillac	SRX	Rear Seat Heating Control Module	√	√	√	√	√	
2016	Cadillac	SRX	Right Side Object Detection Control Module	√	√	√		√	
2016	Cadillac	SRX	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Cadillac	SRX	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	Cadillac	SRX	Keyless Entry Control Module	√	√	√	√	√	
2016	Cadillac	SRX	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2016	Cadillac	SRX	Passenger Presence Module	√	√	√	√		0057
2016	Cadillac	SRX	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2016	Cadillac	SRX	Rear Differential Clutch Control Module	√	√	√	√	√	
2016	Cadillac	SRX	Amplifier	√	√	√	√		
2016	Cadillac	SRX	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Cadillac	SRX	Radio/HVAC Controls	√	√	√	√	√	
2016	Cadillac	SRX	Media Disc Player	√	√	√	√	√	

2016	Cadillac	SRX	Navigation Control Module	√	√	√	√	√	
2016	Cadillac	SRX	Rear Audio Control Module	√	√	√	√	√	
2016	Cadillac	SRX	Radio	√	√	√	√	√	0226 0150
2016	Cadillac	SRX	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2016	Cadillac	SRX	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2016	Cadillac	SRX	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Cadillac	SRX	Suspension Control Module	√	√	√	√	√	
2016	Cadillac	SRX	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Cadillac	SRX	Left Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	SRX	Right Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	SRX	Rear Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	SRX	Long Range Radar Sensor Module	√	√	√	√		0260
2016	Cadillac	SRX	Parking Brake Control Module	√	√	√	√	√	0229
2016	Cadillac	XTS	Transmission Control Module	√	√	√	√	√	0016
2016	Cadillac	XTS	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2016	Cadillac	XTS	Headlamp Control Module	√	√	√	√	√	0195
2016	Cadillac	XTS	Instrument Cluster	√	√	√	√	√	0247
2016	Cadillac	XTS	Active Safety Control Module	√	√	√	√	√	
2016	Cadillac	XTS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2016	Cadillac	XTS	Left Side Object Detection Control Module	√	√	√	√	√	
2016	Cadillac	XTS	Right Side Object Detection Control Module	√	√	√	√	√	
2016	Cadillac	XTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Cadillac	XTS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2016	Cadillac	XTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Cadillac	XTS	Rear Differential Clutch Control Module	√	√	√	√	√	
2016	Cadillac	XTS	Passenger Presence Module	√	√	√	√		0057
2016	Cadillac	XTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2016	Cadillac	XTS	Keyless Entry Control Module	√	√	√	√	√	
2016	Cadillac	XTS	Amplifier	√	√	√	√		
2016	Cadillac	XTS	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Cadillac	XTS	Radio/HVAC Controls	√	√	√	√	√	
2016	Cadillac	XTS	Media Disc Player	√	√	√	√	√	
2016	Cadillac	XTS	Radio	√	√	√	√	√	0226 0150
2016	Cadillac	XTS	Chassis Control Module	√	√	√	√	√	0217
2016	Cadillac	XTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258 0006 0131 0066
2016	Cadillac	XTS	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Cadillac	XTS	Long Range Radar Sensor Module	√	√	√	√		0260
2016	Cadillac	XTS	Left Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	XTS	Right Front Short Range Radar Sensor Module	√	√	√			

2016	Cadillac	XTS	Rear Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	XTS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	Cadillac	XTS	Steering Column Lock Control Module	√	√	√	√		
2016	Cadillac	XTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2016	Cadillac	XTS	Parking Brake Control Module	√	√	√	√	√	0229
2016	Cadillac	XTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2016	Cadillac	XTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Cadillac	XTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2016	Cadillac	XTS	Power Steering Control Module	√	√	√	√	√	0089
2016	Cadillac	XTS	Video Processing Control Module	√	√	√	√	√	
2015	Cadillac	ATS	Headlamp Control Module	√	√	√	√	√	0195
2015	Cadillac	ATS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Cadillac	ATS	Steering Column Lock Control Module	√	√	√	√		
2015	Cadillac	ATS	Transmission Control Module	√	√	√	√	√	0016
2015	Cadillac	ATS	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Cadillac	ATS	Long Range Radar Sensor Module	√	√	√	√		0260
2015	Cadillac	ATS	Left Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	ATS	Right Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	ATS	Rear Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	ATS	Active Safety Control Module	√	√	√	√	√	
2015	Cadillac	ATS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	Cadillac	ATS	Left Side Object Detection Control Module	√	√	√		√	
2015	Cadillac	ATS	Parking Assist Control Module	√	√	√	√	√	0247
2015	Cadillac	ATS	Pedestrian Impact Detection Module	√	√	√	√		0170
2015	Cadillac	ATS	Right Side Object Detection Control Module	√	√	√		√	
2015	Cadillac	ATS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Cadillac	ATS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2015	Cadillac	ATS	Passenger Presence Module	√	√	√	√		0057
2015	Cadillac	ATS	Keyless Entry Control Module	√	√	√	√	√	
2015	Cadillac	ATS	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2015	Cadillac	ATS	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2015	Cadillac	ATS	Instrument Cluster	√	√	√	√	√	0247
2015	Cadillac	ATS	Trailer Interface Control Module	√	√	√	√	√	0247
2015	Cadillac	ATS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2015	Cadillac	ATS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2015	Cadillac	ATS	Parking Brake Control Module	√	√	√	√	√	0229
2015	Cadillac	ATS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2015	Cadillac	ATS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084

2015	Cadillac	ATS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Cadillac	ATS	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0066 0086 0217 0258 0263 0213 0006 0131
2015	Cadillac	ATS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Cadillac	ATS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0150 0222 0150
2015	Cadillac	ATS	Transfer Case Control Module	√	√	√	√	√	0099 0100 07B0
2015	Cadillac	ATS	Radio	√	√	√	√	√	0226 0150
2015	Cadillac	ATS	Radio/HVAC Controls	√	√	√	√	√	
2015	Cadillac	ATS	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Cadillac	ATS	Media Disc Player	√	√	√	√	√	
2015	Cadillac	ATS	Amplifier	√	√	√	√		
2015	Cadillac	ATS	Navigation Control Module	√	√	√	√	√	
2015	Cadillac	CTS	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	0195
2015	Cadillac	CTS	Steering Column Lock Control Module	√	√	√	√		
2015	Cadillac	CTS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Cadillac	CTS	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2015	Cadillac	CTS	Transmission Control Module	√	√	√	√	√	0016 0084
2015	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0129 0007
2015	Cadillac	CTS	Long Range Radar Sensor Module	√	√	√	√		0260
2015	Cadillac	CTS	Left Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	CTS	Right Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	CTS	Rear Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	CTS	Active Safety Control Module	√	√	√	√	√	
2015	Cadillac	CTS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	Cadillac	CTS	Left Side Object Detection Control Module	√	√	√	√	√	
2015	Cadillac	CTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2015	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√		0170
2015	Cadillac	CTS	Right Side Object Detection Control Module	√	√	√	√	√	
2015	Cadillac	CTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2015	Cadillac	CTS	Parking Brake Control Module	√	√	√	√	√	0229
2015	Cadillac	CTS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2015	Cadillac	CTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2015	Cadillac	CTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Cadillac	CTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2015	Cadillac	CTS	Instrument Cluster	√	√	√	√	√	0247
2015	Cadillac	CTS	Trailer Interface Control Module	√	√	√	√	√	0247

2015	Cadillac	CTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0006 0131 0258 0066
2015	Cadillac	CTS	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2015	Cadillac	CTS	Passenger Presence Module	√	√	√	√		0057
2015	Cadillac	CTS	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2015	Cadillac	CTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261 0134 0111
2015	Cadillac	CTS	Keyless Entry Control Module	√	√	√	√	√	
2015	Cadillac	CTS	Body Control Module	√	√	√	√	√	0263 0261 0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0203 0201 0208 0206 0083 0160 0233 0150
2015	Cadillac	CTS	Navigation Control Module	√	√	√	√	√	
2015	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	0100 0099 07B0
2015	Cadillac	CTS	Radio	√	√	√	√	√	0226 0150
2015	Cadillac	CTS	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Cadillac	CTS	Amplifier	√	√	√	√		
2015	Cadillac	CTS	Liftgate Control Module	√	√	√	√		0146
2015	Cadillac	CTS	Seat Memory Control Module	√	√	√	√	√	
2015	Cadillac	CTS	Remote Control Door Lock Receiver	√	√	√	√	√	0110 0160 0159 079B
2015	Cadillac	CTS	Driver Door Switch Panel Control Module	√	√	√	√	√	
2015	Cadillac	CTS	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2015	Cadillac	CTS	Television Antenna Module	√	√	√	√	√	
2015	Cadillac	CTS	Theft Deterrent Module	√	√	√	√		
2015	Cadillac	CTS	Auxiliary Body Control Module	√	√	√	√	√	0050
2015	Cadillac	ELR	Electric A/C Compressor Control Module	√					
2015	Cadillac	ELR	Battery Energy Control Module	√			√		
2015	Cadillac	ELR	Coolant Heater Control Module	√	√	√			
2015	Cadillac	ELR	Battery Charger Control Module	√			√		
2015	Cadillac	ELR	Hybrid Powertrain Control Module 2	√	√	√	√	√	0124 0125 0056 0218 0122 0123 0127
2015	Cadillac	ELR	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Cadillac	ELR	Headlamp Control Module	√	√	√	√	√	0195
2015	Cadillac	ELR	Steering Column Lock Control Module	√	√	√	√		
2015	Cadillac	ELR	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Cadillac	ELR	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2015	Cadillac	ELR	Left Side Object Detection Control Module	√	√	√		√	
2015	Cadillac	ELR	Parking Assist Control Module	√	√	√	√	√	0247
2015	Cadillac	ELR	Right Side Object Detection Control Module	√	√	√		√	
2015	Cadillac	ELR	Instrument Cluster	√	√	√	√	√	0247
2015	Cadillac	ELR	Transmission Control Module	√	√	√	√	√	

2015	Cadillac	ELR	Engine Control Module	√	√	√	√	√	0209 0132 0067 0086 0217 0176
2015	Cadillac	ELR	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Cadillac	ELR	Distance Sensing Cruise Control Module	√	√	√	√		0047
2015	Cadillac	ELR	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2015	Cadillac	ELR	Passenger Presence Module	√	√	√	√		0057
2015	Cadillac	ELR	Keyless Entry Control Module	√	√	√	√	√	
2015	Cadillac	ELR	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Cadillac	ELR	Amplifier	√	√	√	√		
2015	Cadillac	ELR	Radio	√	√	√	√	√	0226 0150
2015	Cadillac	ELR	Radio/HVAC Controls	√	√	√	√	√	
2015	Cadillac	ELR	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2015	Cadillac	ELR	Electronic Brake Control Module	√	√	√	√	√	0263 0371 0111
2015	Cadillac	ELR	Parking Brake Control Module	√	√	√	√	√	0229
2015	Cadillac	ELR	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2015	Cadillac	ELR	Hybrid Powertrain Control Module	√	√	√	√	√	
2015	Cadillac	ELR	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Cadillac	ELR	Drive Motor Control Module 1	√	√	√	√		
2015	Cadillac	ELR	Drive Motor Control Module 2	√	√	√	√		
2015	Cadillac	ELR	Auxiliary Transmission Fluid Pump	√	√	√	√		
2015	Cadillac	ELR	Suspension Control Module	√	√	√	√	√	
2015	Cadillac	ELR	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0150 0232 0150
2015	Cadillac	ELR	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Cadillac	ELR	Power Steering Control Module	√	√	√	√		0081 0080 0089
2015	Cadillac	Escalade	Hybrid Powertrain Control Module	√	√	√	√	√	
2015	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	0037
2015	Cadillac	Escalade	Drive Motor Control Module 1	√			√		
2015	Cadillac	Escalade	Drive Motor Control Module 2	√			√		
2015	Cadillac	Escalade	Auxiliary Transmission Fluid Pump	√	√	√	√		
2015	Cadillac	Escalade	Battery Energy Control Module	√			√		
2015	Cadillac	Escalade	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2015	Cadillac	Escalade	Parking Assist Control Module	√	√	√	√	√	0247 0271
2015	Cadillac	Escalade	Left Side Object Detection Control Module	√	√	√		√	
2015	Cadillac	Escalade	Instrument Cluster	√	√	√	√	√	0247
2015	Cadillac	Escalade	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	Cadillac	Escalade	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Cadillac	Escalade	Passenger Presence Module	√	√	√	√	√	0057

2015	Cadillac	Escalade	Keyless Entry Control Module	√	√	√	√	√	
2015	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2015	Cadillac	Escalade	Power Steering Control Module	√	√	√	√	√	0150
2015	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2015	Cadillac	Escalade	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2015	Cadillac	Escalade	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Cadillac	Escalade	Suspension Control Module	√	√	√	√	√	0245
2015	Cadillac	Escalade	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Cadillac	Escalade	Steering Column Lock Control Module	√	√	√	√		
2015	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Cadillac	Escalade	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	Cadillac	Escalade	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0000 0150 0000 0150
2015	Cadillac	Escalade	Liftgate Control Module	√	√	√	√	√	0146 0169
2015	Cadillac	Escalade	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2015	Cadillac	Escalade	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2015	Cadillac	Escalade	Long Range Radar Sensor Module	√	√	√	√		0260
2015	Cadillac	Escalade	Amplifier	√	√	√	√		
2015	Cadillac	Escalade	Radio	√	√	√	√	√	0226 0150
2015	Cadillac	Escalade	Media Disc Player	√	√	√	√	√	
2015	Cadillac	Escalade	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Cadillac	Escalade	Assist Step Control Module	√	√	√	√	√	
2015	Cadillac	Escalade	Parking Brake Control Module	√	√	√	√	√	0229
2015	Cadillac	Escalade	Radio/HVAC Controls	√	√	√	√	√	
2015	Cadillac	Escalade	Left Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	Escalade	Right Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	Escalade	Right Rear Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	Escalade	Left Rear Radar Short Range Sensor Module	√	√	√			
2015	Cadillac	Escalade	Active Safety Control Module	√	√	√	√	√	
2015	Cadillac	Escalade	Video Processing Control Module	√	√	√	√	√	
2015	Cadillac	Escalade	Seat Memory Control Module - Passenger	√	√	√	√	√	
2015	Cadillac	Escalade ESV	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2015	Cadillac	Escalade ESV	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2015	Cadillac	Escalade ESV	Power Steering Control Module	√	√	√	√	√	0150
2015	Cadillac	Escalade ESV	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Cadillac	Escalade ESV	Suspension Control Module	√	√	√	√	√	0245
2015	Cadillac	Escalade ESV	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245

2015	Cadillac	Escalade ESV	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Cadillac	Escalade ESV	Passenger Presence Module	√	√	√	√	√	0057
2015	Cadillac	Escalade ESV	Keyless Entry Control Module	√	√	√	√	√	
2015	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2015	Cadillac	Escalade ESV	Transfer Case Control Module	√	√	√	√	√	0037
2015	Cadillac	Escalade ESV	Steering Column Lock Control Module	√	√	√	√		
2015	Cadillac	Escalade ESV	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Cadillac	Escalade ESV	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	Cadillac	Escalade ESV	Left Side Object Detection Control Module	√	√	√		√	
2015	Cadillac	Escalade ESV	Parking Assist Control Module	√	√	√	√	√	0247 0271
2015	Cadillac	Escalade ESV	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0033 0150
2015	Cadillac	Escalade ESV	Liftgate Control Module	√	√	√	√	√	0146 0169
2015	Cadillac	Escalade ESV	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2015	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2015	Cadillac	Escalade ESV	Long Range Radar Sensor Module	√	√	√	√		0260
2015	Cadillac	Escalade ESV	Amplifier	√	√	√	√		
2015	Cadillac	Escalade ESV	Radio	√	√	√	√	√	0226 0150
2015	Cadillac	Escalade ESV	Media Disc Player	√	√	√	√	√	
2015	Cadillac	Escalade ESV	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Cadillac	Escalade ESV	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2015	Cadillac	Escalade ESV	Assist Step Control Module	√	√	√	√	√	
2015	Cadillac	Escalade ESV	Parking Brake Control Module	√	√	√	√	√	0229
2015	Cadillac	Escalade ESV	Instrument Cluster	√	√	√	√	√	0247
2015	Cadillac	Escalade ESV	Left Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	Escalade ESV	Left Rear Radar Short Range Sensor Module	√	√	√			
2015	Cadillac	Escalade ESV	Right Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	Escalade ESV	Right Rear Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	Escalade ESV	Active Safety Control Module	√	√	√	√	√	
2015	Cadillac	Escalade ESV	Video Processing Control Module	√	√	√	√	√	
2015	Cadillac	Escalade ESV	Radio/HVAC Controls	√	√	√	√	√	
2015	Cadillac	Escalade ESV	Seat Memory Control Module - Passenger	√	√	√	√	√	
2015	Cadillac	SRX	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Cadillac	SRX	Liftgate Control Module	√	√	√	√		0146

2015	Cadillac	SRX	Steering Column Lock Control Module	√	√	√	√		
2015	Cadillac	SRX	Headlamp Control Module	√	√	√	√	√	0195
2015	Cadillac	SRX	Rear Differential Clutch Control Module	√	√	√	√	√	
2015	Cadillac	SRX	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2015	Cadillac	SRX	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2015	Cadillac	SRX	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Cadillac	SRX	Suspension Control Module	√	√	√	√	√	
2015	Cadillac	SRX	Instrument Cluster	√	√	√	√	√	0247
2015	Cadillac	SRX	Trailer Interface Control Module	√	√	√	√	√	0247
2015	Cadillac	SRX	Transmission Control Module	√	√	√	√	√	0016
2015	Cadillac	SRX	Amplifier	√	√	√	√		
2015	Cadillac	SRX	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Cadillac	SRX	Media Disc Player	√	√	√	√	√	
2015	Cadillac	SRX	Rear Audio Control Module	√	√	√	√	√	
2015	Cadillac	SRX	Radio	√	√	√	√	√	0226 0150
2015	Cadillac	SRX	Navigation Control Module	√	√	√	√	√	
2015	Cadillac	SRX	Radio/HVAC Controls	√	√	√	√	√	
2015	Cadillac	SRX	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Cadillac	SRX	Long Range Radar Sensor Module	√	√	√	√		0260
2015	Cadillac	SRX	Left Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	SRX	Right Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	SRX	Rear Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	SRX	Active Safety Control Module	√	√	√	√	√	
2015	Cadillac	SRX	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	Cadillac	SRX	Left Side Object Detection Control Module	√	√	√		√	
2015	Cadillac	SRX	Parking Assist Control Module	√	√	√	√	√	0247
2015	Cadillac	SRX	Rear Seat Heating Control Module	√	√	√	√	√	
2015	Cadillac	SRX	Right Side Object Detection Control Module	√	√	√		√	
2015	Cadillac	SRX	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Cadillac	SRX	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2015	Cadillac	SRX	Passenger Presence Module	√	√	√	√		0057
2015	Cadillac	SRX	Keyless Entry Control Module	√	√	√	√	√	
2015	Cadillac	SRX	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2015	Cadillac	SRX	Parking Brake Control Module	√	√	√	√	√	0229
2015	Cadillac	SRX	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0093 0150 0333 0150
2015	Cadillac	XTS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Cadillac	XTS	Headlamp Control Module	√	√	√	√	√	0195
2015	Cadillac	XTS	Rear Differential Clutch Control Module	√	√	√	√	√	

2015	Cadillac	XTS	Transmission Control Module	√	√	√	√	√	0016
2015	Cadillac	XTS	Active Safety Control Module	√	√	√	√	√	
2015	Cadillac	XTS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	Cadillac	XTS	Left Side Object Detection Control Module	√	√	√		√	
2015	Cadillac	XTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2015	Cadillac	XTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Cadillac	XTS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2015	Cadillac	XTS	Right Side Object Detection Control Module	√	√	√		√	
2015	Cadillac	XTS	Instrument Cluster	√	√	√	√	√	0247
2015	Cadillac	XTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2015	Cadillac	XTS	Parking Brake Control Module	√	√	√	√	√	0229
2015	Cadillac	XTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2015	Cadillac	XTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Cadillac	XTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2015	Cadillac	XTS	Passenger Presence Module	√	√	√	√		0057
2015	Cadillac	XTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2015	Cadillac	XTS	Keyless Entry Control Module	√	√	√	√	√	
2015	Cadillac	XTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2015	Cadillac	XTS	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Cadillac	XTS	Left Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	XTS	Long Range Radar Sensor Module	√	√	√	√		0260
2015	Cadillac	XTS	Rear Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	XTS	Right Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	XTS	Chassis Control Module	√	√	√	√	√	0217
2015	Cadillac	XTS	Power Steering Control Module	√	√	√	√	√	0089
2015	Cadillac	XTS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0160 0232 0150
2015	Cadillac	XTS	Radio/HVAC Controls	√	√	√	√	√	
2015	Cadillac	XTS	Radio	√	√	√	√	√	0226 0150
2015	Cadillac	XTS	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Cadillac	XTS	Amplifier	√	√	√	√		
2015	Cadillac	XTS	Media Disc Player	√	√	√	√	√	
2014	Cadillac	ATS	Headlamp Control Module	√	√	√	√	√	0195
2014	Cadillac	ATS	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Cadillac	ATS	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Cadillac	ATS	Instrument Cluster	√	√	√	√	√	0247
2014	Cadillac	ATS	Transmission Control Module	√	√	√	√	√	0016

2014	Cadillac	ATS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0150 0033 0150
2014	Cadillac	ATS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2014	Cadillac	ATS	Passenger Presence Module	√	√	√	√		0057
2014	Cadillac	ATS	Keyless Entry Control Module	√	√	√	√	√	
2014	Cadillac	ATS	Steering Column Lock Control Module	√	√	√	√		
2014	Cadillac	ATS	Transfer Case Control Module	√	√	√	√	√	0099 0100 07B0
2014	Cadillac	ATS	Active Safety Control Module	√	√	√	√	√	
2014	Cadillac	ATS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2014	Cadillac	ATS	Left Side Object Detection Control Module	√	√	√		√	
2014	Cadillac	ATS	Parking Assist Control Module	√	√	√	√	√	0247
2014	Cadillac	ATS	Pedestrian Impact Detection Module	√	√	√	√		0170
2014	Cadillac	ATS	Right Side Object Detection Control Module	√	√	√		√	
2014	Cadillac	ATS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2014	Cadillac	ATS	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0066 0086 0217 0258 0263 0213 0006 0131
2014	Cadillac	ATS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2014	Cadillac	ATS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2014	Cadillac	ATS	Parking Brake Control Module	√	√	√	√	√	0229
2014	Cadillac	ATS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2014	Cadillac	ATS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Cadillac	ATS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2014	Cadillac	ATS	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Cadillac	ATS	Long Range Radar Sensor Module	√	√	√	√		0260
2014	Cadillac	ATS	Rear Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	ATS	Left Front Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	ATS	Right Front Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	ATS	Human Machine Interface Control Module	√	√	√	√	√	0150
2014	Cadillac	ATS	Media Disc Player	√	√	√	√	√	
2014	Cadillac	ATS	Radio/HVAC Controls		√	√			
2014	Cadillac	ATS	Radio	√	√	√	√	√	0226 0150
2014	Cadillac	ATS	Amplifier	√	√	√	√		
2014	Cadillac	ATS	Trailer Interface Control Module	√	√	√	√	√	0247
2014	Cadillac	ATS	Navigation Control Module	√	√	√	√	√	
2014	Cadillac	CTS	Transmission Control Module	√	√	√	√	√	0016 0084
2014	Cadillac	CTS	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2014	Cadillac	CTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2014	Cadillac	CTS	Instrument Cluster	√	√	√	√	√	0247

2014	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	0100 0099 07B0
2014	Cadillac	CTS	Left Side Object Detection Control Module	√	√	√	√	√	
2014	Cadillac	CTS	Right Side Object Detection Control Module	√	√	√	√	√	
2014	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0129 0007
2014	Cadillac	CTS	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	0195
2014	Cadillac	CTS	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2014	Cadillac	CTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261 0134 0111
2014	Cadillac	CTS	Passenger Presence Module	√	√	√	√		0057
2014	Cadillac	CTS	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2014	Cadillac	CTS	Keyless Entry Control Module	√	√	√	√	√	
2014	Cadillac	CTS	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2014	Cadillac	CTS	Steering Column Lock Control Module	√	√	√	√		
2014	Cadillac	CTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2014	Cadillac	CTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0006 0131 0258 0066
2014	Cadillac	CTS	Trailer Interface Control Module	√	√	√	√	√	0247
2014	Cadillac	CTS	Radio	√	√	√	√	√	0226 0150
2014	Cadillac	CTS	Amplifier	√	√	√	√		
2014	Cadillac	CTS	Human Machine Interface Control Module	√	√	√	√	√	0150
2014	Cadillac	CTS	Body Control Module	√	√	√	√	√	0263 0261 0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0203 0201 0208 0206 0083 0160 0233 0150
2014	Cadillac	CTS	Active Safety Control Module	√	√	√	√	√	
2014	Cadillac	CTS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2014	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√		0170
2014	Cadillac	CTS	Parking Brake Control Module	√	√	√	√	√	0229
2014	Cadillac	CTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2014	Cadillac	CTS	Long Range Radar Sensor Module	√	√	√	√		0260
2014	Cadillac	CTS	Left Front Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	CTS	Right Front Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	CTS	Rear Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	CTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2014	Cadillac	CTS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2014	Cadillac	CTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Cadillac	CTS	Radio/HVAC Controls	√	√	√	√	√	
2014	Cadillac	CTS	Navigation Control Module	√	√	√	√	√	
2014	Cadillac	CTS	Auxiliary Body Control Module	√	√	√	√	√	0050
2014	Cadillac	CTS	Liftgate Control Module	√	√	√	√		0146

2014	Cadillac	CTS	Remote Control Door Lock Receiver	√	√	√	√	√	0110 0160 0159 079B 0233 0204 0239 0161 0162 0163 0164
2014	Cadillac	CTS	Theft Deterrent Module	√	√	√	√		
2014	Cadillac	CTS	Seat Memory Control Module	√	√	√	√	√	
2014	Cadillac	CTS	Driver Door Switch Panel Control Module	√	√	√	√	√	
2014	Cadillac	CTS	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2014	Cadillac	CTS	Television Antenna Module	√	√	√	√	√	
2014	Cadillac	ELR	Hybrid Powertrain Control Module	√	√	√	√	√	
2014	Cadillac	ELR	Auxiliary Transmission Fluid Pump	√	√	√	√		
2014	Cadillac	ELR	Drive Motor Control Module 1	√	√	√	√		
2014	Cadillac	ELR	Drive Motor Control Module 2	√	√	√	√		
2014	Cadillac	ELR	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Cadillac	ELR	Electric A/C Compressor Control Module	√					
2014	Cadillac	ELR	Battery Energy Control Module	√			√		
2014	Cadillac	ELR	Battery Charger Control Module	√			√		
2014	Cadillac	ELR	Coolant Heater Control Module	√	√	√			
2014	Cadillac	ELR	Hybrid Powertrain Control Module 2	√	√	√	√	√	0124 0125 0056 0218 0122 0123 0127
2014	Cadillac	ELR	Transmission Control Module	√	√	√	√	√	
2014	Cadillac	ELR	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Cadillac	ELR	Engine Control Module	√	√	√	√	√	0209 0132 0067 0086 0217 0176
2014	Cadillac	ELR	Keyless Entry Control Module	√	√	√	√	√	
2014	Cadillac	ELR	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2014	Cadillac	ELR	Passenger Presence Module	√	√	√	√		0057
2014	Cadillac	ELR	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0160 0333 0150
2014	Cadillac	ELR	Steering Column Lock Control Module	√	√	√	√		
2014	Cadillac	ELR	Instrument Cluster	√	√	√	√	√	0247
2014	Cadillac	ELR	Electronic Brake Control Module	√	√	√	√	√	0263 0371 0111
2014	Cadillac	ELR	Parking Brake Control Module	√	√	√	√	√	0229
2014	Cadillac	ELR	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2014	Cadillac	ELR	Left Side Object Detection Control Module	√	√	√		√	
2014	Cadillac	ELR	Parking Assist Control Module	√	√	√	√	√	0247
2014	Cadillac	ELR	Right Side Object Detection Control Module	√	√	√		√	
2014	Cadillac	ELR	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2014	Cadillac	ELR	Suspension Control Module	√	√	√	√	√	
2014	Cadillac	ELR	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2014	Cadillac	ELR	Steering Wheel Angle Sensor Module	√	√	√			0093 0090

2014	Cadillac	ELR	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Cadillac	ELR	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2014	Cadillac	ELR	Human Machine Interface Control Module	√	√	√	√	√	0150
2014	Cadillac	ELR	Radio	√	√	√	√	√	0226 0150
2014	Cadillac	ELR	Amplifier	√	√	√	√		
2014	Cadillac	ELR	Radio/HVAC Controls		√	√			
2014	Cadillac	ELR	Distance Sensing Cruise Control Module	√	√	√	√		0047
2014	Cadillac	ELR	Power Steering Control Module	√	√	√	√		0081 0080 0089
2014	Cadillac	Escalade	Instrument Cluster	√	√	√	√	√	
2014	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2014	Cadillac	Escalade	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	Cadillac	Escalade	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2014	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0258
2014	Cadillac	Escalade	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	Cadillac	Escalade	Liftgate Control Module	√	√	√	√		0146
2014	Cadillac	Escalade	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Cadillac	Escalade	Transmission Control Module	√	√	√	√	√	0016
2014	Cadillac	Escalade	Chassis Control Module	√	√	√	√	√	0217
2014	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	0037
2014	Cadillac	Escalade	Passenger Presence Module	√	√	√	√		
2014	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0263 0261
2014	Cadillac	Escalade	Auxiliary Body Control Module	√	√	√	√	√	0050
2014	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2014	Cadillac	Escalade	Left Side Object Detection Control Module	√	√	√	√	√	
2014	Cadillac	Escalade	Parking Assist Control Module	√	√	√	√	√	
2014	Cadillac	Escalade	Rear Seat Heating Control Module	√	√	√	√	√	
2014	Cadillac	Escalade	Right Side Object Detection Control Module	√	√	√	√	√	
2014	Cadillac	Escalade	Seat Memory Control Module	√	√	√	√	√	
2014	Cadillac	Escalade	Driver Door Switch Panel Control Module	√	√	√	√	√	
2014	Cadillac	Escalade	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2014	Cadillac	Escalade	Radio	√	√	√	√	√	
2014	Cadillac	Escalade	Personal Audio Link Control Module	√	√	√			0231
2014	Cadillac	Escalade	Amplifier	√	√	√	√		
2014	Cadillac	Escalade	Rear Audio Control Module	√	√	√	√		
2014	Cadillac	Escalade	Assist Step Control Module	√	√	√	√	√	
2014	Cadillac	Escalade	Suspension Control Module	√	√	√	√	√	0245
2014	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0225 0111
2014	Cadillac	Escalade ESV	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Cadillac	Escalade ESV	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2014	Cadillac	Escalade ESV	Passenger Presence Module	√	√	√	√		

2014	Cadillac	Escalade ESV	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	Cadillac	Escalade ESV	Transfer Case Control Module	√	√	√	√	√	0037
2014	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0263 0261
2014	Cadillac	Escalade ESV	Theft Deterrent Module	√	√	√	√		
2014	Cadillac	Escalade ESV	Instrument Cluster	√	√	√	√	√	
2014	Cadillac	Escalade ESV	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2014	Cadillac	Escalade ESV	Left Side Object Detection Control Module	√	√	√	√	√	
2014	Cadillac	Escalade ESV	Parking Assist Control Module	√	√	√	√	√	
2014	Cadillac	Escalade ESV	Rear Seat Heating Control Module	√	√	√	√	√	
2014	Cadillac	Escalade ESV	Right Side Object Detection Control Module	√	√	√	√	√	
2014	Cadillac	Escalade ESV	Seat Memory Control Module	√	√	√	√	√	
2014	Cadillac	Escalade ESV	Auxiliary Body Control Module	√	√	√	√	√	0050
2014	Cadillac	Escalade ESV	Chassis Control Module	√	√	√	√	√	0217
2014	Cadillac	Escalade ESV	Driver Door Switch Panel Control Module	√	√	√	√	√	
2014	Cadillac	Escalade ESV	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2014	Cadillac	Escalade ESV	Radio	√	√	√	√	√	
2014	Cadillac	Escalade ESV	Personal Audio Link Control Module	√	√	√			0231
2014	Cadillac	Escalade ESV	Amplifier	√	√	√	√		
2014	Cadillac	Escalade ESV	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	Cadillac	Escalade ESV	Liftgate Control Module	√	√	√	√		0146
2014	Cadillac	Escalade ESV	Rear Audio Control Module	√	√	√	√		
2014	Cadillac	Escalade ESV	Suspension Control Module	√	√	√	√	√	0245
2014	Cadillac	Escalade ESV	Electronic Brake Control Module	√	√	√	√	√	0225 0111
2014	Cadillac	Escalade ESV	Transmission Control Module	√	√	√	√	√	0016
2014	Cadillac	Escalade ESV	Assist Step Control Module	√	√	√	√	√	
2014	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0258
2014	Cadillac	SRX	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Cadillac	SRX	Headlamp Control Module	√	√	√	√	√	0195
2014	Cadillac	SRX	Liftgate Control Module	√	√	√	√		0146
2014	Cadillac	SRX	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2014	Cadillac	SRX	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Cadillac	SRX	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Cadillac	SRX	Suspension Control Module	√	√	√	√	√	
2014	Cadillac	SRX	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Cadillac	SRX	Transmission Control Module	√	√	√	√	√	0016
2014	Cadillac	SRX	Steering Column Lock Control Module	√	√	√	√		
2014	Cadillac	SRX	Rear Differential Clutch Control Module	√	√	√	√	√	

2014	Cadillac	SRX	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0222 0150
2014	Cadillac	SRX	Keyless Entry Control Module	√	√	√	√	√	
2014	Cadillac	SRX	Passenger Presence Module	√	√	√	√		0057
2014	Cadillac	SRX	Trailer Interface Control Module	√	√	√	√	√	0247
2014	Cadillac	SRX	Instrument Cluster	√	√	√	√	√	0247
2014	Cadillac	SRX	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2014	Cadillac	SRX	Rear Seat Heating Control Module	√	√	√	√	√	
2014	Cadillac	SRX	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2014	Cadillac	SRX	Parking Assist Control Module	√	√	√	√	√	0247
2014	Cadillac	SRX	Left Side Object Detection Control Module	√	√	√		√	
2014	Cadillac	SRX	Active Safety Control Module	√	√	√	√	√	
2014	Cadillac	SRX	Right Side Object Detection Control Module	√	√	√		√	
2014	Cadillac	SRX	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2014	Cadillac	SRX	Parking Brake Control Module	√	√	√	√	√	0229
2014	Cadillac	SRX	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Cadillac	SRX	Long Range Radar Sensor Module	√	√	√	√		0260
2014	Cadillac	SRX	Rear Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	SRX	Right Front Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	SRX	Left Front Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	SRX	Radio	√	√	√	√	√	0226 0150
2014	Cadillac	SRX	Media Disc Player	√	√	√	√	√	
2014	Cadillac	SRX	Human Machine Interface Control Module	√	√	√	√	√	0150
2014	Cadillac	SRX	Amplifier	√	√	√	√		
2014	Cadillac	SRX	Navigation Control Module	√	√	√	√	√	
2014	Cadillac	SRX	Radio/HVAC Controls	√	√	√	√	√	
2014	Cadillac	XTS	Active Safety Control Module	√	√	√	√	√	
2014	Cadillac	XTS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2014	Cadillac	XTS	Left Side Object Detection Control Module	√	√	√		√	
2014	Cadillac	XTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2014	Cadillac	XTS	Right Side Object Detection Control Module	√	√	√		√	
2014	Cadillac	XTS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0222 0150
2014	Cadillac	XTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2014	Cadillac	XTS	Passenger Presence Module	√	√	√	√		0057
2014	Cadillac	XTS	Keyless Entry Control Module	√	√	√	√	√	
2014	Cadillac	XTS	Transmission Control Module	√	√	√	√	√	0016

2014	Cadillac	XTS	Headlamp Control Module	√	√	√	√	√	0195
2014	Cadillac	XTS	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Cadillac	XTS	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Cadillac	XTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2014	Cadillac	XTS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2014	Cadillac	XTS	Instrument Cluster	√	√	√	√	√	0247
2014	Cadillac	XTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2014	Cadillac	XTS	Parking Brake Control Module	√	√	√	√	√	0229
2014	Cadillac	XTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2014	Cadillac	XTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2014	Cadillac	XTS	Radio	√	√	√	√	√	0226 0150
2014	Cadillac	XTS	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Cadillac	XTS	Long Range Radar Sensor Module	√	√	√	√		0260
2014	Cadillac	XTS	Left Front Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	XTS	Rear Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	XTS	Right Front Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	XTS	Amplifier	√	√	√	√		
2014	Cadillac	XTS	Radio/HVAC Controls	√	√	√			
2014	Cadillac	XTS	Human Machine Interface Control Module	√	√	√	√	√	0150
2014	Cadillac	XTS	Media Disc Player	√	√	√	√	√	
2014	Cadillac	XTS	Rear Differential Clutch Control Module	√	√	√	√	√	
2014	Cadillac	XTS	Power Steering Control Module	√	√	√	√	√	0089
2014	Cadillac	XTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2014	Cadillac	XTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2013	Cadillac	ATS	Engine Control Module	√	√	√	√	√	0263 0305 0306 0067 0308 0217 0309
2013	Cadillac	ATS	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Cadillac	ATS	Transmission Control Module	√	√	√	√	√	0016
2013	Cadillac	ATS	Transfer Case Control Module	√	√	√	√	√	0099 0100
2013	Cadillac	ATS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0111
2013	Cadillac	ATS	Parking Brake Control Module	√	√	√	√	√	0316
2013	Cadillac	ATS	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Cadillac	ATS	Power Steering Control Module	√	√	√	√		0080
2013	Cadillac	ATS	Steering Wheel Angle Sensor Module	√	√	√			
2013	Cadillac	ATS	Suension Control Module	√	√	√	√	√	0114 0198 0198 0245
2013	Cadillac	ATS	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Cadillac	ATS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172 0172 0111 0111 0111 0111 0111
2013	Cadillac	ATS	Passenger Presence Module	√	√	√	√		0322
2013	Cadillac	ATS	Instrument Cluster	√	√	√	√	√	0301

2013	Cadillac	ATS	Headlamp Control Module	√	√	√	√	√	0195
2013	Cadillac	ATS	Radio	√	√	√	√	√	0226 0150
2013	Cadillac	ATS	Amplifier	√	√	√	√		
2013	Cadillac	ATS	Human Machine Interface Control Module	√	√	√	√	√	0150
2013	Cadillac	ATS	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Cadillac	ATS	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Cadillac	ATS	Seat Memory Control Module	√	√	√	√	√	0310
2013	Cadillac	ATS	Keyless Entry Control Module	√	√	√	√	√	
2013	Cadillac	ATS	Parking Assist Control Module	√	√	√	√	√	0301
2013	Cadillac	ATS	Steering Column Lock Control Module	√	√	√	√		
2013	Cadillac	ATS	Left Front Short Range Radar Sensor Module	√	√	√	√		
2013	Cadillac	ATS	Right Front Short Range Radar Sensor Module	√	√	√	√		
2013	Cadillac	ATS	Rear Short Range Radar Sensor Module	√	√	√	√		
2013	Cadillac	ATS	Left Side Object Detection Control Module	√	√	√		√	
2013	Cadillac	ATS	Right Side Object Detection Control Module	√	√	√		√	
2013	Cadillac	ATS	Trailer Interface Control Module	√	√	√	√	√	0301
2013	Cadillac	ATS	Frontview Camera Module	√	√	√	√	√	0205 0196
2013	Cadillac	ATS	Long Range Radar Sensor Module	√	√	√	√		0340
2013	Cadillac	ATS	Active Safety Control Module	√	√	√	√	√	
2013	Cadillac	SRX	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2013	Cadillac	SRX	Transmission Control Module	√	√	√	√	√	0016
2013	Cadillac	SRX	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2013	Cadillac	SRX	Parking Brake Control Module	√	√	√	√	√	0316
2013	Cadillac	SRX	Instrument Cluster	√	√	√	√	√	0301
2013	Cadillac	SRX	Headlamp Control Module	√	√	√	√	√	
2013	Cadillac	SRX	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Cadillac	SRX	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Cadillac	SRX	Seat Memory Control Module	√	√	√	√	√	0310
2013	Cadillac	SRX	Rear Seat Heating Control Module	√	√	√	√	√	
2013	Cadillac	SRX	Parking Assist Control Module	√	√	√	√	√	0301
2013	Cadillac	SRX	Steering Column Lock Control Module	√	√	√	√		
2013	Cadillac	SRX	Left Side Object Detection Control Module	√	√	√		√	
2013	Cadillac	SRX	Right Side Object Detection Control Module	√	√	√		√	
2013	Cadillac	SRX	Trailer Interface Control Module	√	√	√	√	√	0301
2013	Cadillac	SRX	Liftgate Control Module	√	√	√	√	√	0146
2013	Cadillac	SRX	Radio	√	√	√	√	√	0226 0150
2013	Cadillac	SRX	Amplifier	√	√	√	√		
2013	Cadillac	SRX	Human Machine Interface Control Module	√	√	√	√	√	0150
2013	Cadillac	SRX	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2013	Cadillac	SRX	Passenger Presence Module	√	√	√	√		0322

2013	Cadillac	SRX	Keyless Entry Control Module	√	√	√	√	√	
2013	Cadillac	SRX	Rear Differential Clutch Control Module	√	√	√	√	√	
2013	Cadillac	SRX	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Cadillac	SRX	Frontview Camera Module	√	√	√	√	√	0205 0196
2013	Cadillac	SRX	Multi-Axis Acceleration Sensor Module	√	√	√			
2013	Cadillac	SRX	Steering Wheel Angle Sensor Module	√	√	√			
2013	Cadillac	SRX	Suension Control Module	√	√	√	√	√	
2013	Cadillac	SRX	Long Range Radar Sensor Module	√	√	√	√		0340
2013	Cadillac	SRX	Media Disc Player	√	√	√	√	√	
2013	Cadillac	SRX	Left Front Short Range Radar Sensor Module	√	√	√	√		
2013	Cadillac	SRX	Right Front Short Range Radar Sensor Module	√	√	√	√		
2013	Cadillac	SRX	Rear Short Range Radar Sensor Module	√	√	√	√		
2013	Cadillac	XTS	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2013	Cadillac	XTS	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Cadillac	XTS	Transmission Control Module	√	√	√	√	√	0016
2013	Cadillac	XTS	Rear Differential Clutch Control Module	√	√	√	√	√	
2013	Cadillac	XTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2013	Cadillac	XTS	Parking Brake Control Module	√	√	√	√	√	0316
2013	Cadillac	XTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Cadillac	XTS	Power Steering Control Module	√	√	√	√		
2013	Cadillac	XTS	Steering Wheel Angle Sensor Module	√	√	√			
2013	Cadillac	XTS	Suension Control Module	√	√	√	√	√	0114 0198 0198 0245
2013	Cadillac	XTS	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Cadillac	XTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172 0172 0111 0111 0111 0111 0111
2013	Cadillac	XTS	Passenger Presence Module	√	√	√	√		0322
2013	Cadillac	XTS	Instrument Cluster	√	√	√	√	√	0301
2013	Cadillac	XTS	Headlamp Control Module	√	√	√	√	√	0195
2013	Cadillac	XTS	Radio	√	√	√	√	√	0226 0150
2013	Cadillac	XTS	Amplifier	√	√	√	√		
2013	Cadillac	XTS	Human Machine Interface Control Module	√	√	√	√	√	0150
2013	Cadillac	XTS	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Cadillac	XTS	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Cadillac	XTS	Seat Memory Control Module	√	√	√	√	√	0310
2013	Cadillac	XTS	Keyless Entry Control Module	√	√	√	√	√	
2013	Cadillac	XTS	Parking Assist Control Module	√	√	√	√	√	0301
2013	Cadillac	XTS	Frontview Camera Module	√	√	√	√	√	0205 0196
2013	Cadillac	XTS	Long Range Radar Sensor Module	√	√	√	√		0340
2013	Cadillac	XTS	Left Front Short Range Radar Sensor Module	√	√	√	√		

2013	Cadillac	CTS	Engine Control Module	√	√	√	√	√	0493
2013	Cadillac	CTS	Fuel Pump Control Module	√	√	√	√	√	
2013	Cadillac	CTS	Transmission control module		√	√	√	√	
2013	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	0493
2013	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	
2013	Cadillac	CTS	Liftgate module	√	√	√	√	√	
2013	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2013	Cadillac	CTS	Passenger presence system	√	√	√	√	√	
2013	Cadillac	CTS	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Cadillac	CTS	Body Control Module	√	√	√	√	√	0498
2013	Cadillac	CTS	Body Control Module	√	√	√	√	√	0499 0497
2013	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2013	Cadillac	CTS	Park assist module	√	√	√	√	√	
2013	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0500
2013	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√	√	0501
2013	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	0502
2013	Cadillac	CTS	Driver door switch	√	√	√	√	√	
2013	Cadillac	CTS	Passenger door switch	√	√	√	√	√	
2013	Cadillac	CTS	Radio	√	√	√	√	√	0503
2013	Cadillac	CTS	TV antenna module	√	√	√	√		0504 0505
2013	Cadillac	CTS	Right side object detection module	√	√	√	√		
2013	Cadillac	CTS	Left side object detection module	√	√	√	√	√	0494 0495 0496
2013	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Cadillac	CTS	Park Brake Control Module	√	√	√	√	√	
2013	Cadillac	CTS	Electronic suspension control		√	√	√	√	
2013	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2013	Cadillac	Escalade	Transmission control module		√	√	√	√	
2013	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	
2013	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2013	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2013	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2013	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2013	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2013	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2013	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2013	Cadillac	Escalade	Inside rear view mirror module	√	√	√	√	√	
2013	Cadillac	Escalade	Rear heated seat module	√	√	√	√		

2013	Cadillac	Escalade	Park assist module	√	√	√	√		
2013	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2013	Cadillac	Escalade	Right side object detection module	√	√	√	√		
2013	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2013	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2013	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2013	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2013	Cadillac	Escalade	Personal audio link module						0529
2013	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0499 0497
2013	Cadillac	Escalade	Radio	√	√	√	√	√	
2013	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	
2013	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Cadillac	Escalade	Electronic suension control	√	√	√	√	√	0532
2013	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2013	Cadillac	Escalade	Transmission control module		√	√	√	√	
2013	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	
2013	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2013	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2013	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2013	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2013	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2013	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2013	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2013	Cadillac	Escalade	Inside rear view mirror module	√	√	√	√	√	
2013	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2013	Cadillac	Escalade	Park assist module	√	√	√	√		
2013	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2013	Cadillac	Escalade	Right side object detection module	√	√	√	√		
2013	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2013	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2013	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2013	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2013	Cadillac	Escalade	Personal audio link module						0529
2013	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0499 0497
2013	Cadillac	Escalade	Radio	√	√	√	√	√	
2013	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	

2013	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Cadillac	Escalade	Electronic suension control	√	√	√	√	√	0532
2013	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2013	Cadillac	Escalade Hybrid	Transmission control module		√	√	√	√	
2013	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Accessory power module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2013	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2013	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2013	Cadillac	Escalade Hybrid	A/C compressor control module	√	√	√	√		
2013	Cadillac	Escalade Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Assist step controller	√	√	√	√	√	0531
2013	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√			
2013	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2013	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√		
2013	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		
2013	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Personal audio link module						0529
2013	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0499 0497
2013	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2013	Cadillac	Escalade Hybrid	Electronic suension control	√	√	√	√	√	0532
2013	Cadillac	Escalade Hybrid	Power steering control module	√	√	√	√	√	0536
2013	Cadillac	Escalade Hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2013	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2013	Cadillac	Escalade Hybrid	Transmission control module		√	√	√	√	
2013	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Accessory power module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	

2013	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2013	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	A/C compressor control module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Assist step controller	√	√	√	√	√	0531
2013	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Personal audio link module						0529
2013	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0499 0497
2013	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2013	Cadillac	Escalade Hybrid	Electronic suspension control	√	√	√	√	√	0532
2013	Cadillac	Escalade Hybrid	Power steering control module	√	√	√	√	√	0536
2013	Cadillac	Escalade Hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2012	Cadillac	SRX	Engine Control Module	√	√	√	√	√	0067 0308 0217 0309
2012	Cadillac	SRX	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Cadillac	SRX	Transmission Control Module	√	√	√	√	√	0020 0106
2012	Cadillac	SRX	Rear Differential Clutch Control Module	√	√	√	√	√	
2012	Cadillac	SRX	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2012	Cadillac	SRX	Parking Brake Control Module	√	√	√	√	√	0316
2012	Cadillac	SRX	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Cadillac	SRX	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2012	Cadillac	SRX	Suspension Control Module	√	√	√	√	√	
2012	Cadillac	SRX	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2012	Cadillac	SRX	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172

2012	Cadillac	SRX	Passenger Presence Module	√	√	√	√		0322
2012	Cadillac	SRX	Instrument Cluster	√	√	√	√	√	0301
2012	Cadillac	SRX	Headlamp Control Module	√	√	√	√	√	
2012	Cadillac	SRX	Trailer Interface Control Module	√	√	√	√	√	0301
2012	Cadillac	SRX	Radio	√	√	√	√	√	
2012	Cadillac	SRX	Rear Audio Control Module	√	√	√	√	√	
2012	Cadillac	SRX	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2012	Cadillac	SRX	Multimedia Player Interface Module	√	√	√	√		
2012	Cadillac	SRX	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2012	Cadillac	SRX	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2012	Cadillac	SRX	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2012	Cadillac	SRX	Liftgate Control Module	√	√	√	√	√	0146
2012	Cadillac	SRX	Seat Memory Control Module	√	√	√	√	√	0310
2012	Cadillac	SRX	Front Seat Heating Control Module	√	√	√	√	√	
2012	Cadillac	SRX	Rear Seat Heating Control Module	√	√	√	√	√	
2012	Cadillac	SRX	Keyless Entry Control Module	√	√	√	√	√	
2012	Cadillac	SRX	Parking Assist Control Module	√	√	√	√	√	0301
2012	Cadillac	SRX	Steering Column Lock Control Module	√	√	√	√		
2012	Cadillac	XTS	Radio	√	√	√	√	√	0226 0150
2012	Cadillac	XTS	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0417 0418 0419 0420
2012	Cadillac	XTS	Transmission Control Module	√	√	√	√	√	
2012	Cadillac	XTS	Human Machine Interface Control Module	√	√	√	√	√	0150
2012	Cadillac	XTS	Parking Assist Control Module	√	√	√	√	√	0271
2012	Cadillac	XTS	Video Processing Control Module	√	√	√	√	√	
2012	Cadillac	XTS	Seat Memory Control Module - Left Rear	√	√	√	√	√	
2012	Cadillac	XTS	Seat Memory Control Module - Right Rear	√	√	√	√	√	
2012	Cadillac	XTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2012	Cadillac	XTS	Engine Control Module	√	√	√	√	√	0391 0382 0115 0399 0400 0401 0308 0088 0219 0073 0405 0070 0071 0408 0118 0410 0120 0309 0240 0178 0180 0182 0184 0417 0418 0419 0420 0138 0137 0423 0424 0425 0426 0427 0428 0429
2012	Cadillac	XTS	Instrument Cluster	√	√	√	√	√	
2012	Cadillac	XTS	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297
2012	Cadillac	XTS	HVAC Control Module	√	√	√	√	√	0129
2012	Cadillac	XTS	HVAC Controls	√	√	√	√	√	0344
2012	Cadillac	XTS	Keyless Entry Control Module	√	√	√	√	√	

2012	Cadillac	XTS	Rear Blower Module	√	√	√	√	√	0485 0486 0487 0488 0489 0490 0491
2012	Cadillac	XTS	Radio Controls	√	√	√	√		0344
2012	Cadillac	XTS	Left Side Object Detection Control Module	√	√	√		√	
2012	Cadillac	XTS	Right Side Object Detection Control Module	√	√	√		√	
2012	Cadillac	XTS	Suension Control Module	√	√	√	√	√	
2012	Cadillac	XTS	Amplifier	√	√	√	√		
2012	Cadillac	CTS	Fuel Pump Control Module	√	√	√	√	√	
2012	Cadillac	CTS	Engine Control Module	√	√	√	√	√	0493
2012	Cadillac	CTS	Transmission control module		√	√	√	√	
2012	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	0493
2012	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	0502
2012	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	
2012	Cadillac	CTS	Liftgate module	√	√	√	√	√	
2012	Cadillac	CTS	TV antenna module	√	√	√	√		0504 0505
2012	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2012	Cadillac	CTS	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Cadillac	CTS	Passenger presence system	√	√	√	√	√	
2012	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0500
2012	Cadillac	CTS	Body Control Module	√	√	√	√	√	0498
2012	Cadillac	CTS	Body Control Module	√	√	√	√	√	0499 0497
2012	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2012	Cadillac	CTS	Park assist module	√	√	√	√	√	
2012	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√	√	0501
2012	Cadillac	CTS	Driver door switch	√	√	√	√	√	
2012	Cadillac	CTS	Passenger door switch	√	√	√	√	√	
2012	Cadillac	CTS	Radio	√	√	√	√	√	0503
2012	Cadillac	CTS	Left side object detection module	√	√	√	√	√	
2012	Cadillac	CTS	Right side object detection module	√	√	√	√	√	0502
2012	Cadillac	CTS	Park Brake Control Module	√	√	√	√	√	
2012	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Cadillac	CTS	Electronic suension control		√	√	√	√	
2012	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2012	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	
2012	Cadillac	Escalade	Transmission control module	√	√	√	√	√	0493
2012	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2012	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2012	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2012	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	

2012	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2012	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2012	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2012	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2012	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2012	Cadillac	Escalade	Inside rear view mirror module	√	√	√	√	√	
2012	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2012	Cadillac	Escalade	Park assist module	√	√	√	√		
2012	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2012	Cadillac	Escalade	Right side object detection module	√	√	√	√		
2012	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0499 0497
2012	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2012	Cadillac	Escalade	Personal audio link module	√	√	√			0528
2012	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2012	Cadillac	Escalade	Radio	√	√	√	√	√	
2012	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	
2012	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Cadillac	Escalade	Electronic suspension control	√	√	√	√	√	0532
2012	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2012	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	
2012	Cadillac	Escalade	Transmission control module		√	√	√	√	
2012	Cadillac	Escalade	Accessory power module	√	√	√	√	√	
2012	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2012	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2012	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2012	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2012	Cadillac	Escalade	A/C compressor control module	√	√	√	√		
2012	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2012	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2012	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2012	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2012	Cadillac	Escalade	Inside rear view mirror module	√	√	√			
2012	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2012	Cadillac	Escalade	Rear heated seat module	√	√	√	√		

2012	Cadillac	Escalade	Park assist module	√	√	√	√		
2012	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2012	Cadillac	Escalade	Right side object detection module	√	√	√	√		
2012	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0499 0497
2012	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2012	Cadillac	Escalade	Serial Data Gateway Module	√	√	√	√	√	
2012	Cadillac	Escalade	Personal audio link module	√	√	√			0528
2012	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2012	Cadillac	Escalade	Radio	√	√	√	√	√	
2012	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	
2012	Cadillac	Escalade	Electronic suension control	√	√	√	√	√	0532
2012	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2012	Cadillac	Escalade	Power steering control module	√	√	√	√	√	0536
2012	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2012	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	
2012	Cadillac	Escalade	Transmission control module	√	√	√	√	√	0493
2012	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2012	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2012	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2012	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2012	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2012	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2012	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2012	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2012	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2012	Cadillac	Escalade	Inside rear view mirror module	√	√	√	√	√	
2012	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2012	Cadillac	Escalade	Park assist module	√	√	√	√		
2012	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2012	Cadillac	Escalade	Right side object detection module	√	√	√	√		
2012	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0499 0497
2012	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2012	Cadillac	Escalade	Personal audio link module	√	√	√			0528
2012	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2012	Cadillac	Escalade	Radio	√	√	√	√	√	
2012	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	
2012	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0506

2012	Cadillac	Escalade	Electronic suspension control	√	√	√	√	√	0532
2012	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2012	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	
2012	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	
2012	Cadillac	Escalade	Transmission control module		√	√	√	√	
2012	Cadillac	Escalade	Accessory power module	√	√	√	√	√	
2012	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2012	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2012	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2012	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2012	Cadillac	Escalade	A/C compressor control module	√	√	√	√		
2012	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2012	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2012	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2012	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2012	Cadillac	Escalade	Inside rear view mirror module	√	√	√			
2012	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2012	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2012	Cadillac	Escalade	Park assist module	√	√	√	√		
2012	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2012	Cadillac	Escalade	Right side object detection module	√	√	√	√		
2012	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0499 0497
2012	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2012	Cadillac	Escalade	Serial Data Gateway Module	√	√	√	√	√	
2012	Cadillac	Escalade	Personal audio link module	√	√	√			0528
2012	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2012	Cadillac	Escalade	Radio	√	√	√	√	√	
2012	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	
2012	Cadillac	Escalade	Electronic suspension control	√	√	√	√	√	0532
2012	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2012	Cadillac	Escalade	Power steering control module	√	√	√	√	√	0536
2012	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2012	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Transmission control module	√	√	√	√	√	0493
2012	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	

2012	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0499 0497
2012	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2012	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528
2012	Cadillac	Escalade Hybrid	Assist step controller	√	√	√	√	√	0531
2012	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Cadillac	Escalade Hybrid	Electronic suspension control	√	√	√	√	√	0532
2012	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2012	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Transmission control module		√	√	√	√	
2012	Cadillac	Escalade Hybrid	Accessory power module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	A/C compressor control module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√			

2012	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0499 0497
2012	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2012	Cadillac	Escalade Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528
2012	Cadillac	Escalade Hybrid	Assist step controller	√	√	√	√	√	0531
2012	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Electronic suspension control	√	√	√	√	√	0532
2012	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2012	Cadillac	Escalade Hybrid	Power steering control module	√	√	√	√	√	0536
2012	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2012	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Transmission control module	√	√	√	√	√	0493
2012	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0499 0497
2012	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2012	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528
2012	Cadillac	Escalade Hybrid	Assist step controller	√	√	√	√	√	0531
2012	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	

2012	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Cadillac	Escalade Hybrid	Electronic suspension control	√	√	√	√	√	0532
2012	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2012	Cadillac	Escalade Hybrid	Transfer Case Control Module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Transmission control module		√	√	√	√	
2012	Cadillac	Escalade Hybrid	Accessory power module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	A/C compressor control module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√			
2012	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0499 0497
2012	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2012	Cadillac	Escalade Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528
2012	Cadillac	Escalade Hybrid	Assist step controller	√	√	√	√	√	0531
2012	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Electronic suspension control	√	√	√	√	√	0532
2012	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2012	Cadillac	Escalade Hybrid	Power steering control module	√	√	√	√	√	0536
2011	Cadillac	SRX	Engine Control Module	√	√	√	√	√	0067 0308 0217 0309
2011	Cadillac	SRX	Fuel Pump Control Module	√	√	√	√	√	0217
2011	Cadillac	SRX	Transmission Control Module	√	√	√	√	√	0020 0106
2011	Cadillac	SRX	Rear Differential Clutch Control Module	√	√	√	√	√	

2011	Cadillac	SRX	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2011	Cadillac	SRX	Parking Brake Control Module	√	√	√	√	√	0316
2011	Cadillac	SRX	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2011	Cadillac	SRX	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2011	Cadillac	SRX	Suension Control Module	√	√	√	√	√	
2011	Cadillac	SRX	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2011	Cadillac	SRX	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2011	Cadillac	SRX	Passenger Presence Module	√	√	√	√		0322
2011	Cadillac	SRX	Instrument Cluster	√	√	√	√	√	0301
2011	Cadillac	SRX	Headlamp Control Module	√	√	√	√	√	
2011	Cadillac	SRX	Trailer Interface Control Module	√	√	√	√	√	0301
2011	Cadillac	SRX	Radio	√	√	√	√	√	
2011	Cadillac	SRX	Rear Audio Control Module	√	√	√	√	√	
2011	Cadillac	SRX	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2011	Cadillac	SRX	Multimedia Player Interface Module	√	√	√	√		
2011	Cadillac	SRX	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2011	Cadillac	SRX	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2011	Cadillac	SRX	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2011	Cadillac	SRX	Liftgate Control Module	√	√	√	√	√	0146
2011	Cadillac	SRX	Seat Memory Control Module	√	√	√	√	√	0310
2011	Cadillac	SRX	Front Seat Heating Control Module	√	√	√	√	√	
2011	Cadillac	SRX	Rear Seat Heating Control Module	√	√	√	√	√	
2011	Cadillac	SRX	Keyless Entry Control Module	√	√	√	√	√	
2011	Cadillac	SRX	Parking Assist Control Module	√	√	√	√	√	0301
2011	Cadillac	SRX	Steering Column Lock Control Module	√	√	√	√		
2011	Cadillac	CTS	Engine Control Module	√	√	√	√	√	
2011	Cadillac	CTS	Fuel Pump Control Module	√	√	√	√	√	
2011	Cadillac	CTS	Transmission control module		√	√	√	√	
2011	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	0493
2011	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Cadillac	CTS	Body Control Module	√	√	√	√	√	0498
2011	Cadillac	CTS	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2011	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√	√	0501
2011	Cadillac	CTS	Passenger presence system	√	√	√	√	√	
2011	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2011	Cadillac	CTS	Park assist module	√	√	√	√	√	
2011	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0500
2011	Cadillac	CTS	Driver door switch	√	√	√	√	√	
2011	Cadillac	CTS	Passenger door switch	√	√	√	√	√	

2011	Cadillac	CTS	Radio	√	√	√	√	√	0503
2011	Cadillac	CTS	TV antenna module	√	√	√	√		0504 0505
2011	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	0502
2011	Cadillac	CTS	Liftgate module	√	√	√	√	√	
2011	Cadillac	CTS	Body Control Module	√	√	√	√	√	0499 0497
2011	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	0494 0495 0496
2011	Cadillac	CTS	Park Brake Control Module	√	√	√	√	√	
2011	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Cadillac	CTS	Electronic suspension control		√	√	√	√	
2011	Cadillac	DTS	Transmission control module		√	√	√	√	
2011	Cadillac	DTS	Engine Control Module	√	√	√	√	√	0493
2011	Cadillac	DTS	Instrument panel cluster	√	√	√	√	√	
2011	Cadillac	DTS	Amplifier (bose)	√	√	√	√	√	
2011	Cadillac	DTS	Digital radio receiver	√	√	√	√	√	
2011	Cadillac	DTS	Body Control Module	√	√	√	√	√	0499 0497
2011	Cadillac	DTS	Radio	√	√	√	√	√	
2011	Cadillac	DTS	TV antenna module	√	√	√	√		0504 0505
2011	Cadillac	DTS	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Cadillac	DTS	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Cadillac	DTS	Theft Deterrent Module	√	√	√	√		
2011	Cadillac	DTS	Passenger presence system	√	√	√	√		0517
2011	Cadillac	DTS	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Cadillac	DTS	Driver position module	√	√	√	√	√	
2011	Cadillac	DTS	Inside rear view mirror module	√	√	√			
2011	Cadillac	DTS	Left side object detection module	√	√	√	√	√	
2011	Cadillac	DTS	Rear heated seat module	√	√	√	√		
2011	Cadillac	DTS	Right side object detection module	√	√	√	√		
2011	Cadillac	DTS	Park assist module	√	√	√	√	√	
2011	Cadillac	DTS	Veh direction alert alarm warn mod	√	√	√	√	√	
2011	Cadillac	DTS	HVAC Control Module	√	√	√	√	√	
2011	Cadillac	DTS	Distance sensing cruise control	√	√	√	√	√	
2011	Cadillac	DTS	Driver door switch	√	√	√	√	√	0527
2011	Cadillac	DTS	Passenger door switch	√	√	√	√	√	0527
2011	Cadillac	DTS	Aux. HVAC control module	√	√	√	√	√	0527
2011	Cadillac	DTS	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Cadillac	DTS	Electronic suspension control	√	√	√	√	√	
2011	Cadillac	STS	Engine Control Module	√	√	√	√	√	
2011	Cadillac	STS	Transmission control module		√	√	√	√	
2011	Cadillac	STS	Amplifier (bose)		√	√	√	√	
2011	Cadillac	STS	Digital radio receiver	√	√	√	√	√	0516
2011	Cadillac	STS	Headlamp Control Module	√	√	√	√	√	

2011	Cadillac	STS	Instrument panel module	√	√	√	√	√	0551
2011	Cadillac	STS	Radio	√	√	√	√		0552 0525
2011	Cadillac	STS	Rear integration module	√	√	√	√	√	
2011	Cadillac	STS	Head up delay	√	√	√	√	√	
2011	Cadillac	STS	Instrument panel cluster	√	√	√	√	√	0553 0554
2011	Cadillac	STS	Remote control door lock receiver	√	√	√	√	√	0513 0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519
2011	Cadillac	STS	Passenger presence system		√	√			
2011	Cadillac	STS	Supplemental inflatable restraint	√	√	√	√	√	0559
2011	Cadillac	STS	Driver position module	√	√	√	√	√	
2011	Cadillac	STS	Left side object detection module	√	√	√	√	√	
2011	Cadillac	STS	Right side object detection module	√	√	√	√		
2011	Cadillac	STS	Veh direction alert alarm warn mod	√	√	√	√	√	
2011	Cadillac	STS	Distance sensing cruise control	√	√	√	√	√	
2011	Cadillac	STS	HVAC Control Module	√	√	√	√	√	
2011	Cadillac	STS	Driver door module	√	√	√	√	√	0560
2011	Cadillac	STS	Driver door switch	√	√	√	√		
2011	Cadillac	STS	Left rear door module	√	√	√	√	√	0560
2011	Cadillac	STS	Passenger door module	√	√	√	√	√	0560
2011	Cadillac	STS	Right rear door module	√	√	√	√	√	0560
2011	Cadillac	STS	TV antenna module	√	√	√	√		
2011	Cadillac	STS	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	Cadillac	STS	Navigation radio	√	√	√	√	√	0561
2011	Cadillac	STS	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Cadillac	STS	Electronic suspension control	√	√	√	√	√	
2011	Cadillac	Escalade	Transmission control module		√	√	√	√	
2011	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2011	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Cadillac	Escalade	Digital radio receiver	√	√	√	√	√	
2011	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2011	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2011	Cadillac	Escalade	Personal audio link module	√	√	√			0528
2011	Cadillac	Escalade	Radio	√	√	√	√	√	
2011	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2011	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2011	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2011	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Cadillac	Escalade	Memory seat module	√	√	√	√	√	

2011	Cadillac	Escalade	Inside rear view mirror module	√	√	√	√	√	
2011	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2011	Cadillac	Escalade	Park assist module	√	√	√	√		
2011	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2011	Cadillac	Escalade	Right side object detection module	√	√	√	√		
2011	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2011	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2011	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2011	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0497
2011	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2011	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2011	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Cadillac	Escalade	Electronic suension control	√	√	√	√	√	0532
2011	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	0506
2011	Cadillac	Escalade	Transmission control module	√	√	√	√	√	
2011	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2011	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Cadillac	Escalade	Digital radio receiver	√	√	√	√	√	
2011	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2011	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2011	Cadillac	Escalade	Personal audio link module	√	√	√			0528
2011	Cadillac	Escalade	Radio	√	√	√	√	√	
2011	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2011	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2011	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2011	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2011	Cadillac	Escalade	Inside rear view mirror module	√	√	√	√	√	
2011	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2011	Cadillac	Escalade	Park assist module	√	√	√	√		
2011	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2011	Cadillac	Escalade	Right side object detection module	√	√	√	√		
2011	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2011	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2011	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2011	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0497
2011	Cadillac	Escalade	Driver door switch	√	√	√	√	√	

2011	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2011	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Cadillac	Escalade	Electronic suspension control	√	√	√	√	√	0532
2011	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	0506
2011	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2011	Cadillac	Escalade Hybrid	Accessory power module	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Transmission control module		√	√	√	√	
2011	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Cadillac	Escalade Hybrid	Digital radio receiver	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2011	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528
2011	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√			
2011	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Assist step controller	√	√	√	√	√	0531
2011	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Cadillac	Escalade Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0497
2011	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	A/C compressor control module	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Power steering control module		√	√	√		0536
2011	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2011	Cadillac	Escalade Hybrid	Electronic suspension control	√	√	√	√	√	0532
2011	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	0536
2011	Cadillac	Escalade Hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2011	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2011	Cadillac	Escalade Hybrid	Accessory power module	√	√	√	√	√	

2011	Cadillac	Escalade Hybrid	Transmission control module		√	√	√	√	
2011	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Cadillac	Escalade Hybrid	Digital radio receiver	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2011	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528
2011	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√			
2011	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Assist step controller	√	√	√	√	√	0531
2011	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Cadillac	Escalade Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0497
2011	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	A/C compressor control module	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Power steering control module		√	√	√		0536
2011	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2011	Cadillac	Escalade Hybrid	Electronic suension control	√	√	√	√	√	0532
2011	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	0536
2011	Cadillac	Escalade Hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2011	Cadillac	Hearse	Engine Control Module	√	√	√	√	√	0493
2011	Cadillac	Hearse	Transmission control module		√	√	√	√	
2011	Cadillac	Hearse	Digital radio receiver	√	√	√	√	√	
2011	Cadillac	Hearse	Driver door switch	√	√	√	√	√	
2011	Cadillac	Hearse	Passenger door switch	√	√	√	√	√	
2011	Cadillac	Hearse	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Cadillac	Hearse	Theft Deterrent Module	√	√	√	√		
2011	Cadillac	Hearse	Instrument panel cluster	√	√	√	√	√	

2011	Cadillac	Hearse	Driver position module	√	√	√	√	√	
2011	Cadillac	Hearse	Rear heated seat module	√	√	√	√		
2011	Cadillac	Hearse	Passenger presence system	√	√	√	√		0512
2011	Cadillac	Hearse	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Cadillac	Hearse	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Cadillac	Hearse	HVAC Control Module	√	√	√	√	√	
2011	Cadillac	Hearse	Body Control Module	√	√	√	√	√	0499 0497
2011	Cadillac	Hearse	Amplifier (bose)	√	√	√	√	√	
2011	Cadillac	Hearse	Radio	√	√	√	√	√	
2011	Cadillac	Hearse	Air suspension control module	√	√	√	√	√	
2011	Cadillac	Hearse	Electronic Brake Control Module	√	√	√	√		0506
2011	Cadillac	Limousine	Engine Control Module	√	√	√	√	√	0493
2011	Cadillac	Limousine	Transmission control module		√	√	√	√	
2011	Cadillac	Limousine	Digital radio receiver	√	√	√	√	√	
2011	Cadillac	Limousine	Driver door switch	√	√	√	√	√	
2011	Cadillac	Limousine	Passenger door switch	√	√	√	√	√	
2011	Cadillac	Limousine	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Cadillac	Limousine	Theft Deterrent Module	√	√	√	√		
2011	Cadillac	Limousine	Instrument panel cluster	√	√	√	√	√	
2011	Cadillac	Limousine	Driver position module	√	√	√	√	√	
2011	Cadillac	Limousine	Rear heated seat module	√	√	√	√		
2011	Cadillac	Limousine	Passenger presence system	√	√	√	√		0512
2011	Cadillac	Limousine	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Cadillac	Limousine	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Cadillac	Limousine	HVAC Control Module	√	√	√	√	√	
2011	Cadillac	Limousine	Aux. HVAC control module	√			√	√	
2011	Cadillac	Limousine	Body Control Module	√	√	√	√	√	0499 0497
2011	Cadillac	Limousine	Amplifier (bose)	√	√	√	√	√	
2011	Cadillac	Limousine	Radio	√	√	√	√	√	
2011	Cadillac	Limousine	Air suspension control module	√	√	√	√	√	
2011	Cadillac	Limousine	Electronic Brake Control Module	√	√	√	√		0506
2010	Cadillac	SRX	Engine Control Module	√	√	√	√	√	0067 0308 0217 0309
2010	Cadillac	SRX	Fuel Pump Control Module	√	√	√	√	√	0217
2010	Cadillac	SRX	Transmission Control Module	√	√	√	√	√	0020 0106
2010	Cadillac	SRX	Rear Differential Clutch Control Module	√	√	√	√	√	
2010	Cadillac	SRX	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2010	Cadillac	SRX	Parking Brake Control Module	√	√	√	√	√	0316
2010	Cadillac	SRX	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2010	Cadillac	SRX	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2010	Cadillac	SRX	Suspension Control Module	√	√	√	√	√	

2010	Cadillac	SRX	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2010	Cadillac	SRX	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2010	Cadillac	SRX	Passenger Presence Module	√	√	√	√		0322
2010	Cadillac	SRX	Instrument Cluster	√	√	√	√	√	0301
2010	Cadillac	SRX	Headlamp Control Module	√	√	√	√	√	
2010	Cadillac	SRX	Trailer Interface Control Module	√	√	√	√	√	0301
2010	Cadillac	SRX	Radio	√	√	√	√	√	
2010	Cadillac	SRX	Rear Audio Control Module	√	√	√	√	√	
2010	Cadillac	SRX	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2010	Cadillac	SRX	Multimedia Player Interface Module	√	√	√	√		
2010	Cadillac	SRX	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2010	Cadillac	SRX	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2010	Cadillac	SRX	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2010	Cadillac	SRX	Liftgate Control Module	√	√	√	√	√	0146
2010	Cadillac	SRX	Seat Memory Control Module	√	√	√	√	√	0310
2010	Cadillac	SRX	Front Seat Heating Control Module	√	√	√	√	√	
2010	Cadillac	SRX	Rear Seat Heating Control Module	√	√	√	√	√	
2010	Cadillac	SRX	Keyless Entry Control Module	√	√	√	√	√	
2010	Cadillac	SRX	Parking Assist Control Module	√	√	√	√	√	0301
2010	Cadillac	SRX	Steering Column Lock Control Module	√	√	√	√		
2010	Cadillac	CTS	Transmission control module		√	√	√	√	
2010	Cadillac	CTS	Fuel Pump Control Module	√	√	√	√	√	
2010	Cadillac	CTS	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	0493
2010	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	0502
2010	Cadillac	CTS	Radio	√	√	√	√	√	0503
2010	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	CTS	TV antenna module	√	√	√	√		0504 0505
2010	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2010	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	
2010	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√	√	0501
2010	Cadillac	CTS	Passenger presence system	√	√	√	√	√	
2010	Cadillac	CTS	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0500
2010	Cadillac	CTS	Body Control Module	√	√	√	√	√	0498
2010	Cadillac	CTS	Driver door switch	√	√	√	√	√	
2010	Cadillac	CTS	Passenger door switch	√	√	√	√	√	
2010	Cadillac	CTS	Liftgate module	√	√	√	√	√	
2010	Cadillac	CTS	Body Control Module	√	√	√	√	√	0499 0497

2010	Cadillac	CTS	Park assist module	√	√	√	√	√	0502
2010	Cadillac	CTS	Park Brake Control Module	√	√	√	√	√	
2010	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Cadillac	CTS	Electronic suension control		√	√	√	√	
2010	Cadillac	DTS	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	DTS	Transmission control module		√	√	√	√	
2010	Cadillac	DTS	Amplifier (bose)	√	√	√	√	√	
2010	Cadillac	DTS	Digital radio receiver	√	√	√	√	√	
2010	Cadillac	DTS	Radio	√	√	√	√	√	
2010	Cadillac	DTS	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	DTS	TV antenna module	√	√	√	√		0504 0505
2010	Cadillac	DTS	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Cadillac	DTS	Veh direction alert alarm warn mod	√	√	√	√	√	
2010	Cadillac	DTS	Passenger presence system	√	√	√	√		0512
2010	Cadillac	DTS	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Cadillac	DTS	Distance sensing cruise control	√	√	√	√	√	
2010	Cadillac	DTS	Driver position module	√	√	√	√	√	
2010	Cadillac	DTS	Inside rear view mirror module	√	√	√			
2010	Cadillac	DTS	Left side object detection module	√	√	√	√	√	
2010	Cadillac	DTS	Rear heated seat module	√	√	√	√		
2010	Cadillac	DTS	Right side object detection module	√	√	√	√		
2010	Cadillac	DTS	Park assist module	√	√	√	√	√	
2010	Cadillac	DTS	Theft Deterrent Module	√	√	√	√		
2010	Cadillac	DTS	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	DTS	HVAC Control Module	√	√	√	√	√	
2010	Cadillac	DTS	Driver door switch	√	√	√	√	√	0527
2010	Cadillac	DTS	Passenger door switch	√	√	√	√	√	0527
2010	Cadillac	DTS	Body Control Module	√	√	√	√	√	0499 0497
2010	Cadillac	DTS	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Cadillac	DTS	Electronic suension control	√	√	√	√	√	
2010	Cadillac	STS	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	STS	Transmission control module	√	√	√	√	√	
2010	Cadillac	STS	Amplifier (bose)		√	√	√	√	
2010	Cadillac	STS	Digital radio receiver	√	√	√	√	√	0516
2010	Cadillac	STS	Radio	√	√	√	√		0552 0525
2010	Cadillac	STS	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Cadillac	STS	TV antenna module	√	√	√	√		
2010	Cadillac	STS	Remote control door lock receiver	√	√	√	√	√	0513 0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519
2010	Cadillac	STS	Veh direction alert alarm warn mod	√	√	√	√	√	

2010	Cadillac	STS	Passenger presence system		√	√			
2010	Cadillac	STS	Supplemental inflatable restraint	√	√	√	√	√	0559
2010	Cadillac	STS	Head up delay	√	√	√	√	√	
2010	Cadillac	STS	Headlamp Control Module	√	√	√	√	√	
2010	Cadillac	STS	Driver position module	√	√	√	√	√	
2010	Cadillac	STS	Left side object detection module	√	√	√	√	√	
2010	Cadillac	STS	Right side object detection module	√	√	√	√		
2010	Cadillac	STS	Instrument panel cluster	√	√	√	√	√	0553 0554
2010	Cadillac	STS	Driver door module	√	√	√	√	√	0560
2010	Cadillac	STS	Driver door switch	√	√	√	√		
2010	Cadillac	STS	Instrument panel module	√	√	√	√	√	0551
2010	Cadillac	STS	Left rear door module	√	√	√	√	√	0560
2010	Cadillac	STS	Passenger door module	√	√	√	√	√	0560
2010	Cadillac	STS	Right rear door module	√	√	√	√	√	0560
2010	Cadillac	STS	Rear integration module	√	√	√	√	√	
2010	Cadillac	STS	Distance sensing cruise control	√	√	√	√	√	
2010	Cadillac	STS	HVAC Control Module	√	√	√	√	√	
2010	Cadillac	STS	Steering column lock module	√	√	√	√	√	0516
2010	Cadillac	STS	Navigation radio	√	√	√	√	√	0561
2010	Cadillac	STS	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Cadillac	STS	Electronic suspension control	√	√	√	√	√	
2010	Cadillac	STS	Power steering control module		√	√	√		0563 0564
2010	Cadillac	STS	Vehicle stability control module	√	√	√	√	√	0506
2010	Cadillac	Escalade	Transmission control module		√	√	√	√	
2010	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade	Digital radio receiver	√	√	√	√	√	
2010	Cadillac	Escalade	Personal audio link module	√	√	√			0528
2010	Cadillac	Escalade	Radio	√	√	√	√	√	
2010	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2010	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2010	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2010	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2010	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Cadillac	Escalade	Park assist module	√	√	√	√		
2010	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2010	Cadillac	Escalade	Inside rear view mirror module	√	√	√	√	√	
2010	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2010	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2010	Cadillac	Escalade	Right side object detection module	√	√	√	√		0529

2010	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2010	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2010	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2010	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0497
2010	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2010	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2010	Cadillac	Escalade	Electronic suspension control	√	√	√	√	√	0532
2010	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Cadillac	Escalade	Accessory power module	√	√	√	√	√	
2010	Cadillac	Escalade	Transmission control module		√	√	√	√	
2010	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	
2010	Cadillac	Escalade	Digital radio receiver	√	√	√	√	√	
2010	Cadillac	Escalade	Personal audio link module	√	√	√			0528
2010	Cadillac	Escalade	Radio	√	√	√	√	√	
2010	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2010	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2010	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Cadillac	Escalade	A/C compressor control module	√	√	√	√		
2010	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2010	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2010	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Cadillac	Escalade	Park assist module	√	√	√	√		
2010	Cadillac	Escalade	Inside rear view mirror module	√	√	√			
2010	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2010	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2010	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2010	Cadillac	Escalade	Right side object detection module	√	√	√	√		0529
2010	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2010	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2010	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0497
2010	Cadillac	Escalade	Serial Data Gateway Module	√	√	√	√	√	
2010	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2010	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	

2010	Cadillac	Escalade	Electronic suspension control	√	√	√	√	√	0532
2010	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	Cadillac	Escalade	Power steering control module		√	√	√		0536
2010	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	Cadillac	Escalade	Transmission control module		√	√	√	√	
2010	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade	Digital radio receiver	√	√	√	√	√	
2010	Cadillac	Escalade	Personal audio link module	√	√	√			0528
2010	Cadillac	Escalade	Radio	√	√	√	√	√	
2010	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2010	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2010	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2010	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2010	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Cadillac	Escalade	Park assist module	√	√	√	√		
2010	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2010	Cadillac	Escalade	Inside rear view mirror module	√	√	√	√	√	
2010	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2010	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2010	Cadillac	Escalade	Right side object detection module	√	√	√	√		0529
2010	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2010	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2010	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2010	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0497
2010	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2010	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2010	Cadillac	Escalade	Electronic suspension control	√	√	√	√	√	0532
2010	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Cadillac	Escalade	Accessory power module	√	√	√	√	√	
2010	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	
2010	Cadillac	Escalade	Transmission control module		√	√	√	√	
2010	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	
2010	Cadillac	Escalade	Digital radio receiver	√	√	√	√	√	
2010	Cadillac	Escalade	Personal audio link module	√	√	√			0528

2010	Cadillac	Escalade	Radio	√	√	√	√	√	
2010	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2010	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2010	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Cadillac	Escalade	A/C compressor control module	√	√	√	√		
2010	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2010	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2010	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Cadillac	Escalade	Park assist module	√	√	√	√		
2010	Cadillac	Escalade	Inside rear view mirror module	√	√	√			
2010	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2010	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2010	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2010	Cadillac	Escalade	Right side object detection module	√	√	√	√		0529
2010	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2010	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2010	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0497
2010	Cadillac	Escalade	Serial Data Gateway Module	√	√	√	√	√	
2010	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2010	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2010	Cadillac	Escalade	Electronic suspension control	√	√	√	√	√	0532
2010	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	Cadillac	Escalade	Power steering control module		√	√	√		0536
2010	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	Cadillac	Escalade Hybrid	Transmission control module		√	√	√	√	
2010	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade Hybrid	Digital radio receiver	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528
2010	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	

2010	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		0529
2010	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Assist step controller	√	√	√	√	√	0531
2010	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2010	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0497
2010	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Electronic suspension control	√	√	√	√	√	0532
2010	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Cadillac	Escalade Hybrid	Accessory power module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Transmission control module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Digital radio receiver	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528
2010	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Cadillac	Escalade Hybrid	A/C compressor control module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√			
2010	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		0529
2010	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2010	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0497

2010	Cadillac	Escalade Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Electronic suension control	√	√	√	√	√	0532
2010	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	Cadillac	Escalade Hybrid	Power steering control module		√	√	√		0536
2010	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	Cadillac	Escalade Hybrid	Transmission control module		√	√	√	√	
2010	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade Hybrid	Digital radio receiver	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528
2010	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		0529
2010	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Assist step controller	√	√	√	√	√	0531
2010	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2010	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0497
2010	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Electronic suension control	√	√	√	√	√	0532
2010	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Cadillac	Escalade Hybrid	Accessory power module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Transfer Case Control Module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Transmission control module		√	√	√	√	

2010	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Digital radio receiver	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528
2010	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Cadillac	Escalade Hybrid	A/C compressor control module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√			
2010	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		0529
2010	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2010	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0497
2010	Cadillac	Escalade Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Electronic suspension control	√	√	√	√	√	0532
2010	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	Cadillac	Escalade Hybrid	Power steering control module		√	√	√		0536
2010	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	Cadillac	Hearse	Amplifier (bose)	√	√	√	√	√	
2010	Cadillac	Hearse	Digital radio receiver	√	√	√	√	√	
2010	Cadillac	Hearse	Radio	√	√	√	√	√	
2010	Cadillac	Hearse	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	Hearse	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Cadillac	Hearse	Passenger presence system	√	√	√	√		0512
2010	Cadillac	Hearse	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Cadillac	Hearse	Driver position module	√	√	√	√	√	
2010	Cadillac	Hearse	Rear heated seat module	√	√	√	√		
2010	Cadillac	Hearse	Theft Deterrent Module	√	√	√	√		

2010	Cadillac	Hearse	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	Hearse	HVAC Control Module	√	√	√	√	√	
2010	Cadillac	Hearse	Body Control Module	√	√	√	√	√	0499 0497
2010	Cadillac	Hearse	Driver door switch	√	√	√	√	√	
2010	Cadillac	Hearse	Passenger door switch	√	√	√	√	√	
2010	Cadillac	Hearse	Air suension control module	√	√	√	√	√	
2010	Cadillac	Hearse	Electronic Brake Control Module	√	√	√	√		0506
2010	Cadillac	Hearse	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	Hearse	Transmission control module		√	√	√	√	
2010	Cadillac	Limousine	Amplifier (bose)	√	√	√	√	√	
2010	Cadillac	Limousine	Digital radio receiver	√	√	√	√	√	
2010	Cadillac	Limousine	Radio	√	√	√	√	√	
2010	Cadillac	Limousine	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	Limousine	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Cadillac	Limousine	Passenger presence system	√	√	√	√		0512
2010	Cadillac	Limousine	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Cadillac	Limousine	Driver position module	√	√	√	√	√	
2010	Cadillac	Limousine	Rear heated seat module	√	√	√	√		
2010	Cadillac	Limousine	Theft Deterrent Module	√	√	√	√		
2010	Cadillac	Limousine	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	Limousine	HVAC Control Module	√	√	√	√	√	
2010	Cadillac	Limousine	Aux. HVAC control module	√			√	√	
2010	Cadillac	Limousine	Body Control Module	√	√	√	√	√	0499 0497
2010	Cadillac	Limousine	Driver door switch	√	√	√	√	√	
2010	Cadillac	Limousine	Passenger door switch	√	√	√	√	√	
2010	Cadillac	Limousine	Air suension control module	√	√	√	√	√	
2010	Cadillac	Limousine	Electronic Brake Control Module	√	√	√	√		0506
2010	Cadillac	Limousine	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	Limousine	Transmission control module		√	√	√	√	
2009	Cadillac	CTS	Transmission control module		√	√	√	√	
2009	Cadillac	CTS	Engine Control Module	√	√	√	√	√	
2009	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	0493
2009	Cadillac	CTS	Fuel Pump Control Module	√	√	√	√	√	0493
2009	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√	√	0501
2009	Cadillac	CTS	Passenger presence system	√	√	√	√	√	
2009	Cadillac	CTS	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	0502
2009	Cadillac	CTS	Radio	√	√	√	√	√	0503
2009	Cadillac	CTS	TV antenna module	√	√	√	√		0504 0505
2009	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	
2009	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0494 0495

2009	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2009	Cadillac	CTS	Park assist module	√	√	√	√	√	
2009	Cadillac	CTS	Body Control Module	√	√	√	√	√	0499 0497
2009	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0500
2009	Cadillac	CTS	Body Control Module	√	√	√	√	√	0498
2009	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2009	Cadillac	CTS	Driver door switch	√	√	√	√	√	
2009	Cadillac	CTS	Passenger door switch	√	√	√	√	√	
2009	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Cadillac	CTS	Park Brake Control Module	√	√	√	√	√	
2009	Cadillac	CTS	Electronic suspension control		√	√	√	√	
2009	Cadillac	DTS	Engine Control Module	√	√	√	√	√	0493
2009	Cadillac	DTS	Transmission control module		√	√	√	√	
2009	Cadillac	DTS	Passenger presence system	√	√	√	√		0512
2009	Cadillac	DTS	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Cadillac	DTS	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Cadillac	DTS	Theft Deterrent Module	√	√	√	√		
2009	Cadillac	DTS	Radio	√	√	√	√	√	
2009	Cadillac	DTS	TV antenna module	√	√	√	√		0504 0505
2009	Cadillac	DTS	Amplifier (bose)	√	√	√	√	√	
2009	Cadillac	DTS	Digital radio receiver	√	√	√	√	√	
2009	Cadillac	DTS	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Cadillac	DTS	Veh direction alert alarm warn mod	√	√	√	√	√	
2009	Cadillac	DTS	Driver position module	√	√	√	√	√	
2009	Cadillac	DTS	Inside rear view mirror module	√	√	√			
2009	Cadillac	DTS	Left side object detection module	√	√	√	√	√	
2009	Cadillac	DTS	Rear heated seat module	√	√	√	√		
2009	Cadillac	DTS	Right side object detection module	√	√	√	√		
2009	Cadillac	DTS	Park assist module	√	√	√	√	√	
2009	Cadillac	DTS	Instrument panel cluster	√	√	√	√	√	
2009	Cadillac	DTS	Body Control Module	√	√	√	√	√	0499 0497
2009	Cadillac	DTS	Distance sensing cruise control	√	√	√	√	√	
2009	Cadillac	DTS	HVAC Control Module	√	√	√	√	√	
2009	Cadillac	DTS	Driver door switch	√	√	√	√	√	0527
2009	Cadillac	DTS	Passenger door switch	√	√	√	√	√	0527
2009	Cadillac	DTS	Aux. HVAC control module	√	√	√	√	√	0527
2009	Cadillac	DTS	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Cadillac	DTS	Electronic suspension control	√	√	√	√	√	
2009	Cadillac	STS	Transmission control module		√	√	√	√	
2009	Cadillac	STS	Engine Control Module	√	√	√	√	√	0493
2009	Cadillac	STS	Passenger presence system		√	√			

2009	Cadillac	STS	Remote control door lock receiver	√	√	√	√	√	0513 0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519
2009	Cadillac	STS	Supplemental inflatable restraint	√	√	√	√	√	0559
2009	Cadillac	STS	Amplifier (bose)		√	√	√	√	
2009	Cadillac	STS	Radio	√	√	√	√		0552 0525
2009	Cadillac	STS	TV antenna module	√	√	√	√		
2009	Cadillac	STS	Digital radio receiver	√	√	√	√	√	0516
2009	Cadillac	STS	Headlamp Control Module	√	√	√	√	√	
2009	Cadillac	STS	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Cadillac	STS	Veh direction alert alarm warn mod	√	√	√	√	√	
2009	Cadillac	STS	Driver position module	√	√	√	√	√	
2009	Cadillac	STS	Left side object detection module	√	√	√	√	√	
2009	Cadillac	STS	Right side object detection module	√	√	√	√		
2009	Cadillac	STS	Steering column lock module	√	√	√	√	√	
2009	Cadillac	STS	Instrument panel cluster	√	√	√	√	√	0553 0554
2009	Cadillac	STS	Head up display	√	√	√	√	√	
2009	Cadillac	STS	Distance sensing cruise control	√	√	√	√	√	
2009	Cadillac	STS	HVAC Control Module	√	√	√	√	√	
2009	Cadillac	STS	Driver door module	√	√	√	√	√	0560
2009	Cadillac	STS	Driver door switch	√	√	√	√		
2009	Cadillac	STS	Instrument panel module	√	√	√	√	√	0551
2009	Cadillac	STS	Left rear door module	√	√	√	√	√	0560
2009	Cadillac	STS	Passenger door module	√	√	√	√	√	0560
2009	Cadillac	STS	Right rear door module	√	√	√	√	√	0560
2009	Cadillac	STS	Rear integration module	√	√	√	√	√	0513 0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519
2009	Cadillac	STS	Navigation radio	√	√	√	√	√	0561
2009	Cadillac	STS	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Cadillac	STS	Electronic suspension control	√	√	√	√	√	
2009	Cadillac	STS	Vehicle stability control module		√	√	√	√	
2009	Cadillac	STS	Power steering control module	√	√	√	√	√	0563 0564
2009	Cadillac	XLR	Engine Control Module	√	√	√	√	√	0493
2009	Cadillac	XLR	Transmission control module	√	√	√	√	√	0493
2009	Cadillac	XLR	Exhaust flow control module	√	√	√	√	√	
2009	Cadillac	XLR	Passenger presence system		√	√			0512
2009	Cadillac	XLR	Remote control door lock receiver	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2009	Cadillac	XLR	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Cadillac	XLR	CD changer	√	√	√			
2009	Cadillac	XLR	Navigation radio	√	√	√	√		0525

2009	Cadillac	XLR	Vehicle comm. interface module	√	√	√	√	√	0494 0565 0495
2009	Cadillac	XLR	Amplifier (bose)	√	√	√	√	√	
2009	Cadillac	XLR	Digital radio receiver	√	√	√	√	√	0516
2009	Cadillac	XLR	Headlamp Control Module	√	√	√	√	√	
2009	Cadillac	XLR	Body Control Module	√	√	√	√	√	0515
2009	Cadillac	XLR	Driver position module	√	√	√	√	√	0522
2009	Cadillac	XLR	Folding top module	√	√	√	√	√	
2009	Cadillac	XLR	Steering column lock module	√	√	√	√	√	
2009	Cadillac	XLR	Instrument panel cluster	√	√	√	√	√	
2009	Cadillac	XLR	Head up dilay	√	√	√	√	√	
2009	Cadillac	XLR	Distance sensing cruise control	√	√	√	√	√	
2009	Cadillac	XLR	HVAC Control Module	√	√	√	√	√	0500
2009	Cadillac	XLR	Driver door module	√	√	√	√	√	
2009	Cadillac	XLR	Driver door switch	√	√	√	√	√	
2009	Cadillac	XLR	Passenger door module	√	√	√	√	√	
2009	Cadillac	XLR	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Cadillac	XLR	Electronic suension control	√	√	√	√	√	
2009	Cadillac	SLS	Vehicle comm. interface module	√	√	√	√	√	0494
2009	Cadillac	SLS	Radio	√	√	√	√	√	
2009	Cadillac	SLS	Passenger presence system		√	√			
2009	Cadillac	SLS	Driver position module	√	√	√	√	√	
2009	Cadillac	SLS	Driver door module	√	√	√	√	√	
2009	Cadillac	SLS	Driver door switch	√	√	√	√		
2009	Cadillac	SLS	Headlamp Control Module	√	√	√	√		
2009	Cadillac	SLS	Instrument panel module	√	√	√	√	√	0551
2009	Cadillac	SLS	Left rear door module	√	√	√	√	√	0560
2009	Cadillac	SLS	Passenger door module	√	√	√	√	√	0560
2009	Cadillac	SLS	Rear integration module	√	√	√	√	√	
2009	Cadillac	SLS	Right rear door module	√	√	√	√	√	0560
2009	Cadillac	SLS	Supplemental inflatable restraint	√	√	√	√	√	0559
2009	Cadillac	SLS	HVAC Control Module	√	√	√	√	√	
2009	Cadillac	SLS	Instrument panel cluster	√	√	√	√	√	0580
2009	Cadillac	SLS	TV antenna module	√	√	√	√		
2009	Cadillac	SLS	Amplifier (bose)		√	√	√	√	
2009	Cadillac	SLS	Remote control door lock receiver	√	√	√	√	√	0513 0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519
2009	Cadillac	SLS	Rear HVAC/RSA	√	√	√	√	√	
2009	Cadillac	SLS	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Cadillac	SLS	Electronic suension control	√	√	√	√	√	
2009	Cadillac	SLS	Transmission control module	√	√	√	√	√	

2009	Cadillac	SLS	Engine Control Module	√	√	√	√	√	0493
2009	Cadillac	Escalade	Transmission control module		√	√	√	√	
2009	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2009	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	
2009	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Cadillac	Escalade	Rollover sensor	√	√	√	√		0541
2009	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2009	Cadillac	Escalade	Digital radio receiver	√	√	√	√	√	
2009	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2009	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Cadillac	Escalade	Inside rear view mirror module	√	√	√			
2009	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2009	Cadillac	Escalade	Park assist module	√	√	√	√	√	
2009	Cadillac	Escalade	Personal audio link module	√	√	√			0528
2009	Cadillac	Escalade	Radio	√	√	√	√	√	
2009	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2009	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2009	Cadillac	Escalade	Right side object detection module	√	√	√	√		
2009	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2009	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2009	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2009	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0497
2009	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2009	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2009	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	0529
2009	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2009	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2009	Cadillac	Escalade	Electronic suspension control	√	√	√	√	√	0532
2009	Cadillac	Escalade	Trailer brake control module	√	√	√	√	√	
2009	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Cadillac	Escalade	Transmission control module		√	√	√	√	
2009	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2009	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	
2009	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Cadillac	Escalade	Rollover sensor	√	√	√	√		0541
2009	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2009	Cadillac	Escalade	Digital radio receiver	√	√	√	√	√	
2009	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	

2009	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Cadillac	Escalade	Inside rear view mirror module	√	√	√			
2009	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2009	Cadillac	Escalade	Park assist module	√	√	√	√	√	
2009	Cadillac	Escalade	Personal audio link module	√	√	√			0528
2009	Cadillac	Escalade	Radio	√	√	√	√	√	
2009	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2009	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2009	Cadillac	Escalade	Right side object detection module	√	√	√	√		
2009	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2009	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2009	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2009	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0497
2009	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2009	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2009	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	0529
2009	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2009	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2009	Cadillac	Escalade	Electronic suspension control	√	√	√	√	√	0532
2009	Cadillac	Escalade	Trailer brake control module	√	√	√	√	√	
2009	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Cadillac	Escalade Hybrid	Rollover sensor	√	√	√	√		0541
2009	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2009	Cadillac	Escalade Hybrid	Digital radio receiver	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√			
2009	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2009	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528
2009	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		
2009	Cadillac	Escalade Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	A/C compressor control module	√	√	√	√		
2009	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2009	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	

2009	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0497
2009	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2009	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Electronic suension control	√	√	√	√	√	0532
2009	Cadillac	Escalade Hybrid	Trailer brake control module	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2009	Cadillac	Escalade Hybrid	Power steering control module	√	√	√	√	√	0536
2009	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Cadillac	Escalade Hybrid	Rollover sensor	√	√	√	√		0541
2009	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2009	Cadillac	Escalade Hybrid	Digital radio receiver	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√			
2009	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2009	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528
2009	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		
2009	Cadillac	Escalade Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	A/C compressor control module	√	√	√	√		
2009	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2009	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0497
2009	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2009	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Electronic suension control	√	√	√	√	√	0532
2009	Cadillac	Escalade Hybrid	Trailer brake control module	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2009	Cadillac	Escalade Hybrid	Power steering control module	√	√	√	√	√	0536

2009	Cadillac	SRX	Engine Control Module	√	√	√	√	√	0493
2009	Cadillac	SRX	Transmission control module	√	√	√	√	√	
2009	Cadillac	SRX	Passenger presence system	√	√	√	√		0537
2009	Cadillac	SRX	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Cadillac	SRX	Rollover sensor	√	√	√	√		0541
2009	Cadillac	SRX	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Cadillac	SRX	Theft Deterrent Module	√	√	√	√		
2009	Cadillac	SRX	TV antenna module	√	√	√	√		0504 0505
2009	Cadillac	SRX	Radio	√	√	√	√	√	
2009	Cadillac	SRX	Amplifier (bose)	√	√	√	√	√	
2009	Cadillac	SRX	Digital radio receiver	√	√	√	√	√	
2009	Cadillac	SRX	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2009	Cadillac	SRX	Rear HVAC/RSA	√	√	√	√	√	
2009	Cadillac	SRX	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Cadillac	SRX	Memory seat module	√	√	√	√	√	
2009	Cadillac	SRX	Rear seat module	√	√	√	√	√	
2009	Cadillac	SRX	Park assist module	√	√	√	√	√	
2009	Cadillac	SRX	Instrument panel cluster	√	√	√	√	√	
2009	Cadillac	SRX	Body Control Module	√	√	√	√	√	0499 0497
2009	Cadillac	SRX	HVAC Control Module	√	√	√	√	√	
2009	Cadillac	SRX	Body Control Module	√	√	√	√	√	0498
2009	Cadillac	SRX	Driver door switch	√	√	√	√	√	0527
2009	Cadillac	SRX	Passenger door switch	√	√	√	√	√	0527
2009	Cadillac	SRX	Liftgate module	√	√	√	√	√	
2009	Cadillac	SRX	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Cadillac	SRX	Electronic suspension control		√	√	√	√	
2009	Cadillac	Hearse	Engine Control Module	√	√	√	√	√	0493
2009	Cadillac	Hearse	Transmission control module		√	√	√	√	
2009	Cadillac	Hearse	Radio	√	√	√	√	√	
2009	Cadillac	Hearse	Passenger presence system	√	√	√	√		0512
2009	Cadillac	Hearse	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Cadillac	Hearse	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Cadillac	Hearse	Theft Deterrent Module	√	√	√	√		
2009	Cadillac	Hearse	Amplifier (bose)	√	√	√	√	√	
2009	Cadillac	Hearse	Digital radio receiver	√	√	√	√	√	
2009	Cadillac	Hearse	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Cadillac	Hearse	Driver position module	√	√	√	√	√	
2009	Cadillac	Hearse	Rear heated seat module	√	√	√	√		
2009	Cadillac	Hearse	Body Control Module	√	√	√	√	√	0499 0497
2009	Cadillac	Hearse	Instrument panel cluster	√	√	√	√	√	
2009	Cadillac	Hearse	HVAC Control Module	√	√	√	√	√	

2009	Cadillac	Hearse	Driver door switch	√	√	√	√	√	
2009	Cadillac	Hearse	Passenger door switch	√	√	√	√	√	
2009	Cadillac	Hearse	Air suension control module	√	√	√	√	√	
2009	Cadillac	Hearse	Electronic Brake Control Module	√	√	√	√		0506
2009	Cadillac	Limousine	Engine Control Module	√	√	√	√	√	0493
2009	Cadillac	Limousine	Transmission control module		√	√	√	√	
2009	Cadillac	Limousine	Radio	√	√	√	√	√	
2009	Cadillac	Limousine	Passenger presence system	√	√	√	√		0512
2009	Cadillac	Limousine	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Cadillac	Limousine	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Cadillac	Limousine	Theft Deterrent Module	√	√	√	√		
2009	Cadillac	Limousine	Amplifier (bose)	√	√	√	√	√	
2009	Cadillac	Limousine	Digital radio receiver	√	√	√	√	√	
2009	Cadillac	Limousine	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Cadillac	Limousine	Driver position module	√	√	√	√	√	
2009	Cadillac	Limousine	Rear heated seat module	√	√	√	√		
2009	Cadillac	Limousine	Body Control Module	√	√	√	√	√	0499 0497
2009	Cadillac	Limousine	Instrument panel cluster	√	√	√	√	√	
2009	Cadillac	Limousine	HVAC Control Module	√	√	√	√	√	
2009	Cadillac	Limousine	Aux. HVAC control module	√			√	√	
2009	Cadillac	Limousine	Driver door switch	√	√	√	√	√	
2009	Cadillac	Limousine	Passenger door switch	√	√	√	√	√	
2009	Cadillac	Limousine	Air suension control module	√	√	√	√	√	
2009	Cadillac	Limousine	Electronic Brake Control Module	√	√	√	√		0506
2008	Cadillac	SLS	Engine Control Module	√	√	√	√	√	
2008	Cadillac	SLS	Transmission control module	√	√	√	√	√	0493
2008	Cadillac	SLS	Radio	√	√	√	√	√	
2008	Cadillac	SLS	HVAC Control Module	√	√	√	√	√	
2008	Cadillac	SLS	Rear HVAC/RSA	√	√	√	√	√	
2008	Cadillac	SLS	Amplifier (bose)		√	√	√	√	
2008	Cadillac	SLS	Remote control door lock receiver	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2008	Cadillac	SLS	TV antenna module	√	√	√	√		
2008	Cadillac	SLS	Passenger presence system		√	√			
2008	Cadillac	SLS	Driver position module	√	√	√	√	√	
2008	Cadillac	SLS	Driver door module	√	√	√	√	√	
2008	Cadillac	SLS	Driver door switch	√	√	√	√		
2008	Cadillac	SLS	Headlamp Control Module	√	√	√	√		
2008	Cadillac	SLS	Instrument panel module	√	√	√	√	√	0551
2008	Cadillac	SLS	Left rear door module	√	√	√	√	√	0560

2008	Cadillac	SLS	Passenger door module	√	√	√	√	√	0560
2008	Cadillac	SLS	Rear integration module	√	√	√	√	√	
2008	Cadillac	SLS	Right rear door module	√	√	√	√	√	0560
2008	Cadillac	SLS	Supplemental inflatable restraint	√	√	√	√	√	0559
2008	Cadillac	SLS	Instrument panel cluster	√	√	√	√	√	0580
2008	Cadillac	SLS	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Cadillac	SLS	Electronic suension control	√	√	√	√	√	
2008	Cadillac	CTS	Transmission control module		√	√	√	√	
2008	Cadillac	CTS	Engine Control Module	√	√	√	√	√	
2008	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	
2008	Cadillac	CTS	Passenger presence system	√	√	√	√		0537
2008	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√	√	0501
2008	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	
2008	Cadillac	CTS	TV antenna module	√	√	√	√		0504 0505
2008	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2008	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0500
2008	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2008	Cadillac	CTS	Radio	√	√	√	√	√	
2008	Cadillac	CTS	Body Control Module	√	√	√	√	√	0499 0497
2008	Cadillac	CTS	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Cadillac	CTS	Park assist module	√	√	√	√	√	
2008	Cadillac	CTS	Memory seat module	√	√	√	√	√	0503
2008	Cadillac	CTS	Body Control Module	√	√	√	√	√	0498
2008	Cadillac	CTS	Infotainment faceplate module	√					
2008	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0585
2008	Cadillac	CTS	Driver door switch	√	√	√	√	√	
2008	Cadillac	CTS	Passenger door switch	√	√	√	√	√	
2008	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Cadillac	DTS	Engine Control Module	√	√	√	√	√	0493
2008	Cadillac	DTS	Transmission control module		√	√	√	√	
2008	Cadillac	DTS	Passenger presence system	√	√	√	√		0512
2008	Cadillac	DTS	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Cadillac	DTS	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Cadillac	DTS	Theft Deterrent Module	√	√	√	√		
2008	Cadillac	DTS	Amplifier (bose)	√	√	√	√	√	
2008	Cadillac	DTS	Radio	√	√	√	√	√	
2008	Cadillac	DTS	TV antenna module	√	√	√	√		0504 0505
2008	Cadillac	DTS	Veh direction alert alarm warn mod	√	√	√	√	√	
2008	Cadillac	DTS	Body Control Module	√	√	√	√	√	0499 0497
2008	Cadillac	DTS	Digital radio receiver	√	√	√	√		
2008	Cadillac	DTS	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495

2008	Cadillac	DTS	HVAC Control Module	√	√	√	√	√	
2008	Cadillac	DTS	Left side object detection module	√	√	√	√	√	
2008	Cadillac	DTS	Right side object detection module	√	√	√	√		
2008	Cadillac	DTS	Driver position module	√	√	√	√	√	
2008	Cadillac	DTS	Inside rear view mirror module	√	√	√			
2008	Cadillac	DTS	Rear heated seat module	√	√	√	√		
2008	Cadillac	DTS	Park assist module	√	√	√	√	√	
2008	Cadillac	DTS	Distance sensing cruise control	√	√	√	√	√	
2008	Cadillac	DTS	Instrument panel cluster	√	√	√	√	√	
2008	Cadillac	DTS	Driver door switch	√	√	√	√	√	0527
2008	Cadillac	DTS	Passenger door switch	√	√	√	√	√	0527
2008	Cadillac	DTS	Aux. HVAC control module	√	√	√	√	√	0527
2008	Cadillac	DTS	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Cadillac	DTS	Electronic suension control	√	√	√	√	√	
2008	Cadillac	STS	Transmission control module		√	√	√	√	
2008	Cadillac	STS	Engine Control Module	√	√	√	√	√	0493
2008	Cadillac	STS	Passenger presence system		√	√			
2008	Cadillac	STS	Remote control door lock receiver	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2008	Cadillac	STS	Supplemental inflatable restraint	√	√	√	√	√	0559
2008	Cadillac	STS	Amplifier (bose)		√	√	√	√	
2008	Cadillac	STS	Radio	√	√	√	√		0552 0525
2008	Cadillac	STS	TV antenna module	√	√	√	√		
2008	Cadillac	STS	Veh direction alert alarm warn mod	√	√	√	√	√	
2008	Cadillac	STS	Digital radio receiver	√	√	√	√		0516
2008	Cadillac	STS	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Cadillac	STS	Head up dilay	√	√	√	√	√	
2008	Cadillac	STS	HVAC Control Module	√	√	√	√	√	
2008	Cadillac	STS	Headlamp Control Module	√	√	√	√	√	
2008	Cadillac	STS	Driver position module	√	√	√	√	√	
2008	Cadillac	STS	Steering column lock module	√	√	√	√	√	
2008	Cadillac	STS	Distance sensing cruise control	√	√	√	√	√	
2008	Cadillac	STS	Left side object detection module	√	√	√	√	√	
2008	Cadillac	STS	Right side object detection module	√	√	√	√		
2008	Cadillac	STS	Instrument panel cluster	√	√	√	√	√	
2008	Cadillac	STS	Instrument panel module	√	√	√	√	√	0551
2008	Cadillac	STS	Driver door module	√	√	√	√	√	0560
2008	Cadillac	STS	Driver door switch	√	√	√	√		
2008	Cadillac	STS	Left rear door module	√	√	√	√	√	0560
2008	Cadillac	STS	Passenger door module	√	√	√	√	√	0560

2008	Cadillac	STS	Right rear door module	√	√	√	√	√	0560
2008	Cadillac	STS	Rear integration module	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2008	Cadillac	STS	Navigation radio	√	√	√	√	√	0561
2008	Cadillac	STS	Power steering control module		√	√	√		0563 0564
2008	Cadillac	STS	Electronic suspension control	√	√	√	√	√	
2008	Cadillac	STS	Vehicle stability control module					√	
2008	Cadillac	STS	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Cadillac	XLR	Transmission control module		√	√	√	√	
2008	Cadillac	XLR	Engine Control Module	√	√	√	√	√	0493
2008	Cadillac	XLR	Exhaust flow control module	√	√	√	√	√	
2008	Cadillac	XLR	Passenger presence system		√	√			0512
2008	Cadillac	XLR	Remote control door lock receiver	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2008	Cadillac	XLR	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Cadillac	XLR	Amplifier (bose)	√	√	√	√	√	
2008	Cadillac	XLR	CD changer	√	√	√			
2008	Cadillac	XLR	Navigation radio	√	√	√	√		0525
2008	Cadillac	XLR	Body Control Module	√	√	√	√	√	0515
2008	Cadillac	XLR	HVAC Control Module	√	√	√	√	√	0500
2008	Cadillac	XLR	Headlamp Control Module	√	√	√	√	√	
2008	Cadillac	XLR	Digital radio receiver	√	√	√	√		0516
2008	Cadillac	XLR	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Cadillac	XLR	Head up display	√	√	√	√	√	
2008	Cadillac	XLR	Driver position module	√	√	√	√	√	0522
2008	Cadillac	XLR	Folding top module	√	√	√	√	√	
2008	Cadillac	XLR	Steering column lock module	√	√	√	√	√	
2008	Cadillac	XLR	Distance sensing cruise control	√	√	√	√	√	
2008	Cadillac	XLR	Instrument panel cluster	√	√	√	√	√	
2008	Cadillac	XLR	Driver door module	√	√	√	√	√	
2008	Cadillac	XLR	Passenger door module	√	√	√	√	√	
2008	Cadillac	XLR	Driver door switch	√	√	√	√		
2008	Cadillac	XLR	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Cadillac	XLR	Electronic suspension control	√	√	√	√	√	
2008	Cadillac	Hearse	Engine Control Module	√	√	√	√	√	0493
2008	Cadillac	Hearse	Transmission control module		√	√	√	√	
2008	Cadillac	Hearse	Passenger presence system	√	√	√	√		0512
2008	Cadillac	Hearse	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Cadillac	Hearse	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Cadillac	Hearse	Theft Deterrent Module	√	√	√	√		
2008	Cadillac	Hearse	Amplifier (bose)	√	√	√	√	√	

2008	Cadillac	Hearse	Radio	√	√	√	√	√	
2008	Cadillac	Hearse	Instrument panel cluster	√	√	√	√	√	
2008	Cadillac	Hearse	Digital radio receiver	√	√	√	√		
2008	Cadillac	Hearse	HVAC Control Module	√	√	√	√	√	
2008	Cadillac	Hearse	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Cadillac	Hearse	Driver position module	√	√	√	√	√	
2008	Cadillac	Hearse	Rear heated seat module	√	√	√	√		
2008	Cadillac	Hearse	Body Control Module	√	√	√	√	√	0499 0497
2008	Cadillac	Hearse	Driver door switch	√	√	√	√	√	
2008	Cadillac	Hearse	Passenger door switch	√	√	√	√	√	
2008	Cadillac	Hearse	Air suspension control module	√	√	√	√	√	
2008	Cadillac	Hearse	Electronic Brake Control Module	√	√	√	√		0506
2008	Cadillac	Limousine	Engine Control Module	√	√	√	√	√	0493
2008	Cadillac	Limousine	Transmission control module		√	√	√	√	
2008	Cadillac	Limousine	Passenger presence system	√	√	√	√		0512
2008	Cadillac	Limousine	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Cadillac	Limousine	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Cadillac	Limousine	Theft Deterrent Module	√	√	√	√		
2008	Cadillac	Limousine	Amplifier (bose)	√	√	√	√	√	
2008	Cadillac	Limousine	Radio	√	√	√	√	√	
2008	Cadillac	Limousine	Instrument panel cluster	√	√	√	√	√	
2008	Cadillac	Limousine	Digital radio receiver	√	√	√	√		
2008	Cadillac	Limousine	HVAC Control Module	√	√	√	√	√	
2008	Cadillac	Limousine	Aux. HVAC control module	√			√	√	
2008	Cadillac	Limousine	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Cadillac	Limousine	Driver position module	√	√	√	√	√	
2008	Cadillac	Limousine	Rear heated seat module	√	√	√	√		
2008	Cadillac	Limousine	Body Control Module	√	√	√	√	√	0499 0497
2008	Cadillac	Limousine	Driver door switch	√	√	√	√	√	
2008	Cadillac	Limousine	Passenger door switch	√	√	√	√	√	
2008	Cadillac	Limousine	Air suspension control module	√	√	√	√	√	
2008	Cadillac	Limousine	Electronic Brake Control Module	√	√	√	√		0506
2008	Cadillac	Escalade - 2WD	Transmission control module		√	√	√	√	
2008	Cadillac	Escalade - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	Cadillac	Escalade - 2WD	Fuel Pump Control Module	√	√	√	√	√	
2008	Cadillac	Escalade - 2WD	Passenger presence system	√	√	√	√		0512
2008	Cadillac	Escalade - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Cadillac	Escalade - 2WD	Rollover sensor	√	√	√	√		0541
2008	Cadillac	Escalade - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Cadillac	Escalade - 2WD	Theft Deterrent Module	√	√	√	√		
2008	Cadillac	Escalade - 2WD	Body Control Module	√	√	√	√	√	0497

2008	Cadillac	Escalade - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Cadillac	Escalade - 2WD	Amplifier (bose)	√	√	√	√	√	
2008	Cadillac	Escalade - 2WD	Digital radio receiver	√	√	√	√		
2008	Cadillac	Escalade - 2WD	Radio	√	√	√	√	√	
2008	Cadillac	Escalade - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Cadillac	Escalade - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	Cadillac	Escalade - 2WD	Memory seat module	√	√	√	√	√	
2008	Cadillac	Escalade - 2WD	Inside rear view mirror module	√	√	√			
2008	Cadillac	Escalade - 2WD	Rear heated seat module	√	√	√	√		
2008	Cadillac	Escalade - 2WD	Park assist module	√	√	√	√	√	
2008	Cadillac	Escalade - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2008	Cadillac	Escalade - 2WD	Personal audio link module	√	√	√			0528
2008	Cadillac	Escalade - 2WD	Passenger door switch	√	√	√	√	√	
2008	Cadillac	Escalade - 2WD	Driver door switch	√	√	√	√	√	
2008	Cadillac	Escalade - 2WD	Assist step controller	√	√	√	√	√	0531
2008	Cadillac	Escalade - 2WD	Body Control Module	√	√	√	√	√	0498
2008	Cadillac	Escalade - 2WD	Liftgate module	√	√	√	√	√	0529
2008	Cadillac	Escalade - 2WD	Electronic suension control	√	√	√	√	√	0532
2008	Cadillac	Escalade - 2WD	Trailer brake control module	√	√	√	√		
2008	Cadillac	Escalade - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Cadillac	Escalade - AWD	Transmission control module		√	√	√	√	
2008	Cadillac	Escalade - AWD	Engine Control Module	√	√	√	√	√	0493
2008	Cadillac	Escalade - AWD	Fuel Pump Control Module	√	√	√	√	√	
2008	Cadillac	Escalade - AWD	Passenger presence system	√	√	√	√		0512
2008	Cadillac	Escalade - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Cadillac	Escalade - AWD	Rollover sensor	√	√	√	√		0541
2008	Cadillac	Escalade - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Cadillac	Escalade - AWD	Theft Deterrent Module	√	√	√	√		
2008	Cadillac	Escalade - AWD	Body Control Module	√	√	√	√	√	0497
2008	Cadillac	Escalade - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Cadillac	Escalade - AWD	Amplifier (bose)	√	√	√	√	√	
2008	Cadillac	Escalade - AWD	Digital radio receiver	√	√	√	√		
2008	Cadillac	Escalade - AWD	Radio	√	√	√	√	√	
2008	Cadillac	Escalade - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Cadillac	Escalade - AWD	Instrument panel cluster	√	√	√	√	√	
2008	Cadillac	Escalade - AWD	Memory seat module	√	√	√	√	√	
2008	Cadillac	Escalade - AWD	Inside rear view mirror module	√	√	√			
2008	Cadillac	Escalade - AWD	Rear heated seat module	√	√	√	√		
2008	Cadillac	Escalade - AWD	Park assist module	√	√	√	√	√	
2008	Cadillac	Escalade - AWD	Rear HVAC/RSA	√	√	√	√	√	
2008	Cadillac	Escalade - AWD	Personal audio link module	√	√	√			0528

2008	Cadillac	Escalade - AWD	Passenger door switch	√	√	√	√	√	
2008	Cadillac	Escalade - AWD	Driver door switch	√	√	√	√	√	
2008	Cadillac	Escalade - AWD	Assist step controller	√	√	√	√	√	0531
2008	Cadillac	Escalade - AWD	Body Control Module	√	√	√	√	√	0498
2008	Cadillac	Escalade - AWD	Liftgate module	√	√	√	√	√	0529
2008	Cadillac	Escalade - AWD	Electronic suension control	√	√	√	√	√	0532
2008	Cadillac	Escalade - AWD	Trailer brake control module	√	√	√	√		
2008	Cadillac	Escalade - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Cadillac	Escalade ESV	Transmission control module		√	√	√	√	
2008	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0493
2008	Cadillac	Escalade ESV	Fuel Pump Control Module	√	√	√	√	√	
2008	Cadillac	Escalade ESV	Passenger presence system	√	√	√	√		0512
2008	Cadillac	Escalade ESV	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Cadillac	Escalade ESV	Rollover sensor	√	√	√	√		0541
2008	Cadillac	Escalade ESV	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Cadillac	Escalade ESV	Theft Deterrent Module	√	√	√	√		
2008	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0497
2008	Cadillac	Escalade ESV	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Cadillac	Escalade ESV	Amplifier (bose)	√	√	√	√	√	
2008	Cadillac	Escalade ESV	Digital radio receiver	√	√	√	√		
2008	Cadillac	Escalade ESV	Radio	√	√	√	√	√	
2008	Cadillac	Escalade ESV	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Cadillac	Escalade ESV	Instrument panel cluster	√	√	√	√	√	
2008	Cadillac	Escalade ESV	Memory seat module	√	√	√	√	√	
2008	Cadillac	Escalade ESV	Inside rear view mirror module	√	√	√			
2008	Cadillac	Escalade ESV	Rear heated seat module	√	√	√	√		
2008	Cadillac	Escalade ESV	Park assist module	√	√	√	√	√	
2008	Cadillac	Escalade ESV	Rear HVAC/RSA	√	√	√	√	√	
2008	Cadillac	Escalade ESV	Personal audio link module	√	√	√			0528
2008	Cadillac	Escalade ESV	Passenger door switch	√	√	√	√	√	
2008	Cadillac	Escalade ESV	Driver door switch	√	√	√	√	√	
2008	Cadillac	Escalade ESV	Assist step controller	√	√	√	√	√	0531
2008	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0498
2008	Cadillac	Escalade ESV	Liftgate module	√	√	√	√	√	0529
2008	Cadillac	Escalade ESV	Electronic suension control	√	√	√	√	√	0532
2008	Cadillac	Escalade ESV	Trailer brake control module	√	√	√	√		
2008	Cadillac	Escalade ESV	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Cadillac	Escalade EXT	Transmission control module		√	√	√	√	
2008	Cadillac	Escalade EXT	Engine Control Module	√	√	√	√	√	0493
2008	Cadillac	Escalade EXT	Fuel Pump Control Module	√	√	√	√	√	
2008	Cadillac	Escalade EXT	Passenger presence system	√	√	√	√		0512

2008	Cadillac	Escalade EXT	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Cadillac	Escalade EXT	Rollover sensor	√	√	√	√		0541
2008	Cadillac	Escalade EXT	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Cadillac	Escalade EXT	Theft Deterrent Module	√	√	√	√		
2008	Cadillac	Escalade EXT	Body Control Module	√	√	√	√	√	0497
2008	Cadillac	Escalade EXT	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Cadillac	Escalade EXT	Amplifier (bose)	√	√	√	√	√	
2008	Cadillac	Escalade EXT	Digital radio receiver	√	√	√	√		
2008	Cadillac	Escalade EXT	Radio	√	√	√	√	√	
2008	Cadillac	Escalade EXT	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Cadillac	Escalade EXT	Instrument panel cluster	√	√	√	√	√	
2008	Cadillac	Escalade EXT	Memory seat module	√	√	√	√	√	
2008	Cadillac	Escalade EXT	Inside rear view mirror module	√	√	√			
2008	Cadillac	Escalade EXT	Rear heated seat module	√	√	√	√		
2008	Cadillac	Escalade EXT	Park assist module	√	√	√	√	√	
2008	Cadillac	Escalade EXT	Rear HVAC/RSA	√	√	√	√	√	
2008	Cadillac	Escalade EXT	Personal audio link module	√	√	√			0528
2008	Cadillac	Escalade EXT	Passenger door switch	√	√	√	√	√	
2008	Cadillac	Escalade EXT	Driver door switch	√	√	√	√	√	
2008	Cadillac	Escalade EXT	Assist step controller	√	√	√	√	√	0531
2008	Cadillac	Escalade EXT	Body Control Module	√	√	√	√	√	0498
2008	Cadillac	Escalade EXT	Liftgate module	√	√	√	√	√	0529
2008	Cadillac	Escalade EXT	Electronic suspension control	√	√	√	√	√	0532
2008	Cadillac	Escalade EXT	Trailer brake control module	√	√	√	√		
2008	Cadillac	Escalade EXT	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Cadillac	SRX	Transmission control module		√	√	√	√	
2008	Cadillac	SRX	Engine Control Module	√	√	√	√	√	0493
2008	Cadillac	SRX	Passenger presence system	√	√	√	√		0537
2008	Cadillac	SRX	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Cadillac	SRX	Rollover sensor	√	√	√	√		0541
2008	Cadillac	SRX	Theft Deterrent Module	√	√	√	√		
2008	Cadillac	SRX	TV antenna module	√	√	√	√		0504 0505
2008	Cadillac	SRX	Radio	√	√	√	√	√	
2008	Cadillac	SRX	Rear HVAC/RSA	√	√	√	√	√	
2008	Cadillac	SRX	Amplifier (bose)	√	√	√	√	√	
2008	Cadillac	SRX	Digital radio receiver	√	√	√	√		
2008	Cadillac	SRX	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Cadillac	SRX	Body Control Module	√	√	√	√	√	0499 0497
2008	Cadillac	SRX	HVAC Control Module	√	√	√	√	√	
2008	Cadillac	SRX	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2008	Cadillac	SRX	Memory seat module	√	√	√	√	√	

2008	Cadillac	SRX	Rear seat module	√	√	√	√	√	
2008	Cadillac	SRX	Park assist module	√	√	√	√	√	
2008	Cadillac	SRX	Instrument panel cluster	√	√	√	√	√	
2008	Cadillac	SRX	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Cadillac	SRX	Body Control Module	√	√	√	√	√	0498
2008	Cadillac	SRX	Driver door switch	√	√	√	√	√	0527
2008	Cadillac	SRX	Passenger door switch	√	√	√	√	√	0527
2008	Cadillac	SRX	Liftgate module	√	√	√	√	√	
2008	Cadillac	SRX	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Cadillac	SRX	Electronic suension control		√	√	√	√	
2007	Cadillac	DTS	Transmission control module		√	√	√	√	
2007	Cadillac	DTS	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	DTS	Passenger presence system	√	√	√	√		0512
2007	Cadillac	DTS	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Cadillac	DTS	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Cadillac	DTS	Theft Deterrent Module	√	√	√	√		
2007	Cadillac	DTS	Digital radio receiver	√	√	√	√		
2007	Cadillac	DTS	Amplifier (bose)	√	√	√	√	√	0603
2007	Cadillac	DTS	Radio	√	√	√	√	√	
2007	Cadillac	DTS	TV antenna module	√	√	√	√		0504 0505
2007	Cadillac	DTS	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	DTS	HVAC Control Module	√	√	√	√	√	
2007	Cadillac	DTS	Body Control Module	√	√	√	√	√	0499 0497
2007	Cadillac	DTS	Driver door switch	√	√	√	√	√	
2007	Cadillac	DTS	Passenger door switch	√	√	√	√	√	
2007	Cadillac	DTS	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	DTS	Driver position module	√	√	√	√	√	
2007	Cadillac	DTS	Park assist module	√	√	√	√	√	
2007	Cadillac	DTS	Rear heated seat module	√	√	√	√		
2007	Cadillac	DTS	Inside rear view mirror module	√	√	√			
2007	Cadillac	DTS	Distance sensing cruise control	√	√	√	√	√	0512
2007	Cadillac	DTS	Aux. HVAC control module	√	√	√	√	√	0499 0497
2007	Cadillac	DTS	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Cadillac	DTS	Electronic suension control	√	√	√	√	√	
2007	Cadillac	CTS	Transmission control module	√	√	√	√	√	
2007	Cadillac	CTS	Engine Control Module	√	√	√	√	√	
2007	Cadillac	CTS	Passenger presence system		√	√			
2007	Cadillac	CTS	Dash integration module	√	√	√	√	√	0604 0605
2007	Cadillac	CTS	Theft Deterrent Module	√	√	√	√		
2007	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516

2007	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2007	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2007	Cadillac	CTS	Radio	√	√	√	√		0524
2007	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2007	Cadillac	CTS	Climate control panel	√	√	√	√	√	
2007	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2007	Cadillac	CTS	Driver door switch	√	√	√	√		0609 0609 0609 0609
2007	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2007	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2007	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2007	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	CTS	Memory seat module	√	√	√	√	√	0610 0611 0612 0613
2007	Cadillac	CTS	Remote control door lock receiver	√	√	√	√	√	0629
2007	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2007	Cadillac	CTS	Transmission control module	√	√	√	√	√	
2007	Cadillac	CTS	Engine Control Module	√	√	√	√	√	
2007	Cadillac	CTS	Passenger presence system	√	√	√			
2007	Cadillac	CTS	Dash integration module	√	√	√	√	√	0604 0605
2007	Cadillac	CTS	Theft Deterrent Module	√	√	√	√		
2007	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2007	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2007	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2007	Cadillac	CTS	Radio	√	√	√	√		0524
2007	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2007	Cadillac	CTS	Climate control panel	√	√	√	√	√	
2007	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2007	Cadillac	CTS	Driver door switch	√	√	√	√		
2007	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2007	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2007	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2007	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	CTS	Memory seat module	√	√	√	√	√	0610 0611 0612 0613
2007	Cadillac	CTS	Remote control door lock receiver	√	√	√	√	√	0629
2007	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2007	Cadillac	CTS	Transmission control module	√	√	√	√	√	
2007	Cadillac	CTS	Engine Control Module	√	√	√	√	√	
2007	Cadillac	CTS	Passenger presence system		√	√			
2007	Cadillac	CTS	Dash integration module	√	√	√	√	√	0604 0605

2007	Cadillac	CTS	Theft Deterrent Module	√	√	√	√		
2007	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2007	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2007	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2007	Cadillac	CTS	Radio	√	√	√	√		0524
2007	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2007	Cadillac	CTS	Climate control panel	√	√	√	√	√	
2007	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2007	Cadillac	CTS	Driver door switch	√	√	√	√		
2007	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2007	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2007	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2007	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	CTS	Memory seat module	√	√	√	√	√	0610 0611 0612 0613
2007	Cadillac	CTS	Remote control door lock receiver	√	√	√	√	√	0629
2007	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2007	Cadillac	CTS	Passenger presence system	√	√	√			
2007	Cadillac	CTS	Dash integration module	√	√	√	√	√	0604 0605
2007	Cadillac	CTS	Theft Deterrent Module	√	√	√	√		
2007	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2007	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2007	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2007	Cadillac	CTS	Radio	√	√	√	√		0524
2007	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2007	Cadillac	CTS	Climate control panel	√	√	√	√	√	
2007	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2007	Cadillac	CTS	Driver door switch	√	√	√	√		
2007	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2007	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2007	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2007	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	CTS	Memory seat module	√	√	√	√	√	0610 0611 0612 0613
2007	Cadillac	CTS	Remote control door lock receiver	√	√	√	√	√	0629
2007	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2007	Cadillac	CTS	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	STS	Transmission control module		√	√	√	√	
2007	Cadillac	STS	Engine Control Module	√	√	√	√	√	0493

2007	Cadillac	STS	Passenger presence system		√	√			
2007	Cadillac	STS	Remote control door lock receiver	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2007	Cadillac	STS	Supplemental inflatable restraint	√	√	√	√	√	0559
2007	Cadillac	STS	Digital radio receiver	√	√	√	√		0516
2007	Cadillac	STS	Headlamp Control Module	√	√	√	√	√	
2007	Cadillac	STS	Instrument panel module	√	√	√	√	√	0630 0551
2007	Cadillac	STS	Radio	√	√	√	√		0552 0525
2007	Cadillac	STS	TV antenna module	√	√	√	√		
2007	Cadillac	STS	Amplifier (bose)		√	√	√	√	
2007	Cadillac	STS	Driver door module	√	√	√	√	√	0560
2007	Cadillac	STS	Driver door switch	√	√	√	√		
2007	Cadillac	STS	Passenger door module	√	√	√	√	√	0560
2007	Cadillac	STS	Left rear door module	√	√	√	√	√	0560
2007	Cadillac	STS	Right rear door module	√	√	√	√	√	0560
2007	Cadillac	STS	HVAC Control Module	√	√	√	√	√	
2007	Cadillac	STS	Rear integration module	√	√	√	√	√	
2007	Cadillac	STS	Instrument panel cluster	√	√	√	√	√	0560
2007	Cadillac	STS	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	STS	Driver position module	√	√	√	√	√	
2007	Cadillac	STS	Steering column lock module	√	√	√	√	√	
2007	Cadillac	STS	Distance sensing cruise control	√	√	√	√	√	
2007	Cadillac	STS	Head up display	√	√	√	√	√	
2007	Cadillac	STS	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Cadillac	STS	Electronic suspension control	√	√	√	√	√	
2007	Cadillac	STS	Transmission control module	√	√	√	√	√	
2007	Cadillac	STS	Engine Control Module	√	√	√	√	√	
2007	Cadillac	STS	Passenger presence system		√	√			
2007	Cadillac	STS	Remote control door lock receiver	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2007	Cadillac	STS	Supplemental inflatable restraint	√	√	√	√	√	0559
2007	Cadillac	STS	Digital radio receiver	√	√	√	√		0516
2007	Cadillac	STS	Headlamp Control Module	√	√	√	√	√	
2007	Cadillac	STS	Instrument panel module	√	√	√	√	√	0630 0551
2007	Cadillac	STS	Radio	√	√	√	√		0552 0525
2007	Cadillac	STS	TV antenna module	√	√	√	√		
2007	Cadillac	STS	Amplifier (bose)		√	√	√	√	
2007	Cadillac	STS	Driver door module	√	√	√	√	√	0560
2007	Cadillac	STS	Driver door switch	√	√	√	√		
2007	Cadillac	STS	Passenger door module	√	√	√	√	√	0560

2007	Cadillac	STS	Left rear door module	√	√	√	√	√	0560
2007	Cadillac	STS	Right rear door module	√	√	√	√	√	0560
2007	Cadillac	STS	HVAC Control Module	√	√	√	√	√	
2007	Cadillac	STS	Rear integration module	√	√	√	√	√	
2007	Cadillac	STS	Instrument panel cluster	√	√	√	√	√	0560
2007	Cadillac	STS	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	STS	Driver position module	√	√	√	√	√	
2007	Cadillac	STS	Steering column lock module	√	√	√	√	√	
2007	Cadillac	STS	Distance sensing cruise control	√	√	√	√	√	
2007	Cadillac	STS	Head up dilay	√	√	√	√	√	
2007	Cadillac	STS	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Cadillac	STS	Electronic suension control	√	√	√	√	√	
2007	Cadillac	STS	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	STS	Transmission control module		√	√	√	√	
2007	Cadillac	STS	Passenger presence system		√	√			
2007	Cadillac	STS	Supplemental inflatable restraint	√	√	√	√	√	0559
2007	Cadillac	STS	Remote control door lock receiver	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2007	Cadillac	STS	Digital radio receiver	√	√	√	√		0516
2007	Cadillac	STS	Headlamp Control Module	√	√	√	√	√	
2007	Cadillac	STS	Instrument panel module	√	√	√	√	√	0630 0551
2007	Cadillac	STS	Radio	√	√	√	√		0552 0525
2007	Cadillac	STS	TV antenna module	√	√	√	√		
2007	Cadillac	STS	Amplifier (bose)		√	√	√	√	
2007	Cadillac	STS	HVAC Control Module	√	√	√	√	√	
2007	Cadillac	STS	Driver door module	√	√	√	√	√	0560
2007	Cadillac	STS	Driver door switch	√	√	√	√		
2007	Cadillac	STS	Passenger door module	√	√	√	√	√	0560
2007	Cadillac	STS	Left rear door module	√	√	√	√	√	0560
2007	Cadillac	STS	Right rear door module	√	√	√	√	√	0560
2007	Cadillac	STS	Rear integration module	√	√	√	√	√	
2007	Cadillac	STS	Instrument panel cluster	√	√	√	√	√	0560
2007	Cadillac	STS	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	STS	Driver position module	√	√	√	√	√	
2007	Cadillac	STS	Steering column lock module	√	√	√	√	√	
2007	Cadillac	STS	Distance sensing cruise control	√	√	√	√	√	
2007	Cadillac	STS	Head up dilay	√	√	√	√	√	
2007	Cadillac	STS	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Cadillac	STS	Electronic suension control	√	√	√	√	√	
2007	Cadillac	XLR	Transmission control module		√	√	√	√	

2007	Cadillac	XLR	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	XLR	Exhaust flow control module	√	√	√	√	√	
2007	Cadillac	XLR	Passenger presence system		√	√			0512
2007	Cadillac	XLR	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Cadillac	XLR	Remote control door lock receiver	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2007	Cadillac	XLR	Digital radio receiver	√	√	√	√		0516
2007	Cadillac	XLR	Headlamp Control Module	√	√	√	√	√	
2007	Cadillac	XLR	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	XLR	HVAC Control Module	√	√	√	√	√	0500
2007	Cadillac	XLR	Driver door module	√	√	√	√	√	
2007	Cadillac	XLR	Driver door switch	√	√	√	√		
2007	Cadillac	XLR	Passenger door module	√	√	√	√	√	
2007	Cadillac	XLR	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	XLR	Driver position module	√	√	√	√	√	0522
2007	Cadillac	XLR	Folding top module	√	√	√	√	√	
2007	Cadillac	XLR	CD changer	√	√	√			
2007	Cadillac	XLR	Navigation radio	√	√	√	√		0525
2007	Cadillac	XLR	Body Control Module	√	√	√	√	√	0551 0515
2007	Cadillac	XLR	Head up display	√	√	√	√	√	
2007	Cadillac	XLR	Distance sensing cruise control	√	√	√	√	√	
2007	Cadillac	XLR	Steering column lock module	√	√	√	√	√	
2007	Cadillac	XLR	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	XLR	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Cadillac	XLR	Electronic suspension control	√	√	√	√	√	
2007	Cadillac	XLR	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	XLR	Transmission control module		√	√	√	√	
2007	Cadillac	XLR	Exhaust flow control module	√	√	√	√	√	
2007	Cadillac	XLR	Passenger presence system		√	√			0512
2007	Cadillac	XLR	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Cadillac	XLR	Remote control door lock receiver	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2007	Cadillac	XLR	Digital radio receiver	√	√	√	√		0516
2007	Cadillac	XLR	Headlamp Control Module	√	√	√	√	√	
2007	Cadillac	XLR	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	XLR	HVAC Control Module	√	√	√	√	√	0500
2007	Cadillac	XLR	Driver door module	√	√	√	√	√	
2007	Cadillac	XLR	Driver door switch	√	√	√	√		
2007	Cadillac	XLR	Passenger door module	√	√	√	√	√	
2007	Cadillac	XLR	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	XLR	Driver position module	√	√	√	√	√	0522
2007	Cadillac	XLR	Folding top module	√	√	√	√	√	

2007	Cadillac	XLR	CD changer	√	√	√			
2007	Cadillac	XLR	Navigation radio	√	√	√	√		0525
2007	Cadillac	XLR	Body Control Module	√	√	√	√	√	0551 0515
2007	Cadillac	XLR	Head up delay	√	√	√	√	√	
2007	Cadillac	XLR	Distance sensing cruise control	√	√	√	√	√	
2007	Cadillac	XLR	Steering column lock module	√	√	√	√	√	
2007	Cadillac	XLR	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	XLR	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Cadillac	XLR	Electronic suspension control	√	√	√	√	√	
2007	Cadillac	Hearse	Transmission control module		√	√	√	√	
2007	Cadillac	Hearse	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	Hearse	Passenger presence system	√	√	√	√		0512
2007	Cadillac	Hearse	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Cadillac	Hearse	Theft Deterrent Module	√	√	√	√		
2007	Cadillac	Hearse	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Cadillac	Hearse	Digital radio receiver	√	√	√	√		
2007	Cadillac	Hearse	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	Hearse	Radio	√	√	√	√	√	
2007	Cadillac	Hearse	Body Control Module	√	√	√	√	√	0499 0497
2007	Cadillac	Hearse	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	Hearse	HVAC Control Module	√	√	√	√	√	
2007	Cadillac	Hearse	Driver door switch	√	√	√	√	√	
2007	Cadillac	Hearse	Passenger door switch	√	√	√	√	√	
2007	Cadillac	Hearse	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	Hearse	Driver position module	√	√	√	√	√	
2007	Cadillac	Hearse	Rear heated seat module	√	√	√	√		
2007	Cadillac	Hearse	Inside rear view mirror module	√	√	√			
2007	Cadillac	Hearse	Electronic Brake Control Module	√	√	√	√		0506
2007	Cadillac	Hearse	Air suspension control module	√	√	√	√	√	
2007	Cadillac	Limousine	Transmission control module		√	√	√	√	
2007	Cadillac	Limousine	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	Limousine	Passenger presence system	√	√	√	√		0512
2007	Cadillac	Limousine	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Cadillac	Limousine	Theft Deterrent Module	√	√	√	√		
2007	Cadillac	Limousine	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Cadillac	Limousine	Digital radio receiver	√	√	√	√		
2007	Cadillac	Limousine	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	Limousine	Radio	√	√	√	√	√	
2007	Cadillac	Limousine	Body Control Module	√	√	√	√	√	0499 0497
2007	Cadillac	Limousine	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	Limousine	HVAC Control Module	√	√	√	√	√	

2007	Cadillac	Limousine	Aux. HVAC control module	√			√	√	
2007	Cadillac	Limousine	Driver door switch	√	√	√	√	√	
2007	Cadillac	Limousine	Passenger door switch	√	√	√	√	√	
2007	Cadillac	Limousine	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	Limousine	Driver position module	√	√	√	√	√	
2007	Cadillac	Limousine	Rear heated seat module	√	√	√	√		
2007	Cadillac	Limousine	Inside rear view mirror module	√	√	√			
2007	Cadillac	Escalade - 2WD	Electronic Brake Control Module	√	√	√	√		0506
2007	Cadillac	Limousine	Air suspension control module	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	Escalade - 2WD	Transmission control module		√	√	√	√	
2007	Cadillac	Escalade - 2WD	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	Driver door switch	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	Passenger door switch	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	Digital radio receiver	√	√	√	√		
2007	Cadillac	Escalade - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	Theft Deterrent Module	√	√	√	√		
2007	Cadillac	Escalade - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Cadillac	Escalade - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Cadillac	Escalade - 2WD	Passenger presence system	√	√	√	√		0512
2007	Cadillac	Escalade - 2WD	Inside rear view mirror module	√	√	√			
2007	Cadillac	Escalade - 2WD	Park assist module	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	Memory seat module	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	Rear heated seat module	√	√	√	√		
2007	Cadillac	Escalade - 2WD	Body Control Module	√	√	√	√	√	0497
2007	Cadillac	Escalade - 2WD	Rollover sensor	√	√	√	√		0541
2007	Cadillac	Escalade - 2WD	Body Control Module	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	Assist step controller	√	√	√	√	√	0531
2007	Cadillac	Escalade - 2WD	Radio	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Cadillac	Escalade - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	Escalade - 2WD	Personal audio link module	√	√	√			0528
2007	Cadillac	Escalade - 2WD	Liftgate module	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	Electronic suspension control	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Cadillac	Escalade - AWD	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	Escalade - AWD	Transmission control module		√	√	√	√	
2007	Cadillac	Escalade - AWD	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	Escalade - AWD	Driver door switch	√	√	√	√	√	
2007	Cadillac	Escalade - AWD	Passenger door switch	√	√	√	√	√	

2007	Cadillac	Escalade - AWD	Digital radio receiver	√	√	√	√		
2007	Cadillac	Escalade - AWD	Rear HVAC/RSA	√	√	√	√	√	
2007	Cadillac	Escalade - AWD	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	Escalade - AWD	Theft Deterrent Module	√	√	√	√		
2007	Cadillac	Escalade - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Cadillac	Escalade - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Cadillac	Escalade - AWD	Passenger presence system	√	√	√	√		0512
2007	Cadillac	Escalade - AWD	Inside rear view mirror module	√	√	√			
2007	Cadillac	Escalade - AWD	Park assist module	√	√	√	√	√	
2007	Cadillac	Escalade - AWD	Memory seat module	√	√	√	√	√	
2007	Cadillac	Escalade - AWD	Rear heated seat module	√	√	√	√		
2007	Cadillac	Escalade - AWD	Body Control Module	√	√	√	√	√	0497
2007	Cadillac	Escalade - AWD	Rollover sensor	√	√	√	√		0541
2007	Cadillac	Escalade - AWD	Body Control Module	√	√	√	√	√	
2007	Cadillac	Escalade - AWD	Assist step controller	√	√	√	√	√	0531
2007	Cadillac	Escalade - AWD	Radio	√	√	√	√	√	
2007	Cadillac	Escalade - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Cadillac	Escalade - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	Escalade - AWD	Personal audio link module	√	√	√			0528
2007	Cadillac	Escalade - AWD	Liftgate module	√	√	√	√	√	
2007	Cadillac	Escalade - AWD	Electronic suspension control	√	√	√	√	√	
2007	Cadillac	Escalade - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	Escalade ESV	Transmission control module		√	√	√	√	
2007	Cadillac	Escalade ESV	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	Escalade ESV	Driver door switch	√	√	√	√	√	
2007	Cadillac	Escalade ESV	Passenger door switch	√	√	√	√	√	
2007	Cadillac	Escalade ESV	Digital radio receiver	√	√	√	√		
2007	Cadillac	Escalade ESV	Rear HVAC/RSA	√	√	√	√	√	
2007	Cadillac	Escalade ESV	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	Escalade ESV	Theft Deterrent Module	√	√	√	√		
2007	Cadillac	Escalade ESV	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Cadillac	Escalade ESV	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Cadillac	Escalade ESV	Passenger presence system	√	√	√	√		0512
2007	Cadillac	Escalade ESV	Inside rear view mirror module	√	√	√			
2007	Cadillac	Escalade ESV	Park assist module	√	√	√	√	√	
2007	Cadillac	Escalade ESV	Memory seat module	√	√	√	√	√	
2007	Cadillac	Escalade ESV	Rear heated seat module	√	√	√	√		
2007	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0497
2007	Cadillac	Escalade ESV	Rollover sensor	√	√	√	√		0541
2007	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	

2007	Cadillac	Escalade ESV	Assist step controller	√	√	√	√	√	0531
2007	Cadillac	Escalade ESV	Radio	√	√	√	√	√	
2007	Cadillac	Escalade ESV	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Cadillac	Escalade ESV	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	Escalade ESV	Personal audio link module	√	√	√			0528
2007	Cadillac	Escalade ESV	Liftgate module	√	√	√	√	√	
2007	Cadillac	Escalade ESV	Electronic suension control	√	√	√	√	√	
2007	Cadillac	Escalade ESV	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Cadillac	Escalade EXT	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	Escalade EXT	Transmission control module		√	√	√	√	
2007	Cadillac	Escalade EXT	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	Escalade EXT	Driver door switch	√	√	√	√	√	
2007	Cadillac	Escalade EXT	Passenger door switch	√	√	√	√	√	
2007	Cadillac	Escalade EXT	Digital radio receiver	√	√	√	√		
2007	Cadillac	Escalade EXT	Rear HVAC/RSA	√	√	√	√	√	
2007	Cadillac	Escalade EXT	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	Escalade EXT	Theft Deterrent Module	√	√	√	√		
2007	Cadillac	Escalade EXT	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Cadillac	Escalade EXT	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Cadillac	Escalade EXT	Passenger presence system	√	√	√	√		0512
2007	Cadillac	Escalade EXT	Inside rear view mirror module	√	√	√			
2007	Cadillac	Escalade EXT	Park assist module	√	√	√	√	√	
2007	Cadillac	Escalade EXT	Memory seat module	√	√	√	√	√	
2007	Cadillac	Escalade EXT	Rear heated seat module	√	√	√	√		
2007	Cadillac	Escalade EXT	Body Control Module	√	√	√	√	√	0497
2007	Cadillac	Escalade EXT	Rollover sensor	√	√	√	√		0541
2007	Cadillac	Escalade EXT	Body Control Module	√	√	√	√	√	
2007	Cadillac	Escalade EXT	Assist step controller	√	√	√	√	√	0531
2007	Cadillac	Escalade EXT	Radio	√	√	√	√	√	
2007	Cadillac	Escalade EXT	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Cadillac	Escalade EXT	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	Escalade EXT	Personal audio link module	√	√	√			0528
2007	Cadillac	Escalade EXT	Liftgate module	√	√	√	√	√	
2007	Cadillac	Escalade EXT	Electronic suension control	√	√	√	√	√	
2007	Cadillac	Escalade EXT	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Cadillac	SRX	Transmission control module	√	√	√	√	√	
2007	Cadillac	SRX	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	SRX	Passenger presence system	√	√	√	√		0537
2007	Cadillac	SRX	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Cadillac	SRX	Rollover sensor	√	√	√	√		0541
2007	Cadillac	SRX	Theft Deterrent Module	√	√	√	√		

2007	Cadillac	SRX	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	SRX	Digital radio receiver	√	√	√	√		
2007	Cadillac	SRX	Radio	√	√	√	√	√	
2007	Cadillac	SRX	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2007	Cadillac	SRX	TV antenna module	√	√	√	√		0504 0505
2007	Cadillac	SRX	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	SRX	Rear HVAC/RSA	√	√	√	√	√	
2007	Cadillac	SRX	HVAC Control Module	√	√	√	√	√	
2007	Cadillac	SRX	Memory seat module	√	√	√	√	√	
2007	Cadillac	SRX	Rear seat module	√	√	√	√	√	
2007	Cadillac	SRX	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	SRX	Driver door switch	√	√	√	√	√	
2007	Cadillac	SRX	Passenger door switch	√	√	√	√	√	
2007	Cadillac	SRX	Body Control Module	√	√	√	√	√	0499 0497
2007	Cadillac	SRX	Park assist module	√	√	√	√	√	
2007	Cadillac	SRX	Body Control Module	√	√	√	√	√	0498
2007	Cadillac	SRX	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Cadillac	SRX	Liftgate module	√	√	√	√	√	
2007	Cadillac	SRX	Electronic suspension control	√	√	√	√	√	
2007	Cadillac	SRX	Electronic Brake Control Module	√	√	√	√	√	0506
2006	Cadillac	CTS	Powertrain	√	√	√	√	√	
2006	Cadillac	CTS	Vehicle theft deterrent	√	√	√	√		
2006	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2006	Cadillac	CTS	Driver door switch	√	√	√	√		0609 0609 0609 0609
2006	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2006	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2006	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2006	Cadillac	CTS	Passenger presence system		√	√			
2006	Cadillac	CTS	Remote function actuation	√	√	√	√	√	
2006	Cadillac	CTS	Climate control panel	√	√	√	√	√	
2006	Cadillac	CTS	Dash integration module	√	√	√	√	√	0610 0611 0612 0613
2006	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2006	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2006	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2006	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2006	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2006	Cadillac	CTS	Radio	√	√	√	√		0524
2006	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2006	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2006	Cadillac	CTS	Tire pressure monitor		√	√	√	√	0629

2006	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2006	Cadillac	CTS	Powertrain	√	√	√	√	√	
2006	Cadillac	CTS	Vehicle theft deterrent	√	√	√	√		
2006	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2006	Cadillac	CTS	Driver door switch	√	√	√	√		
2006	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2006	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2006	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2006	Cadillac	CTS	Passenger presence system		√	√			
2006	Cadillac	CTS	Remote function actuation	√	√	√	√	√	
2006	Cadillac	CTS	Climate control panel	√	√	√	√	√	
2006	Cadillac	CTS	Dash integration module	√	√	√	√	√	0610 0611 0612 0613
2006	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2006	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2006	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2006	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2006	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2006	Cadillac	CTS	Radio	√	√	√	√		0524
2006	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2006	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2006	Cadillac	CTS	Tire pressure monitor		√	√	√	√	0629
2006	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2006	Cadillac	CTS	Powertrain	√	√	√	√	√	
2006	Cadillac	CTS	Vehicle theft deterrent	√	√	√	√		
2006	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2006	Cadillac	CTS	Driver door switch	√	√	√	√		
2006	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2006	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2006	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2006	Cadillac	CTS	Passenger presence system		√	√			
2006	Cadillac	CTS	Remote function actuation	√	√	√	√	√	
2006	Cadillac	CTS	Climate control panel	√	√	√	√	√	
2006	Cadillac	CTS	Dash integration module	√	√	√	√	√	0610 0611 0612 0613
2006	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2006	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2006	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2006	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2006	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2006	Cadillac	CTS	Radio	√	√	√	√		0524
2006	Cadillac	CTS	TV antenna module	√	√	√	√	√	

2006	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2006	Cadillac	CTS	Tire pressure monitor		√	√	√	√	0629
2006	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2006	Cadillac	CTS	Powertrain	√	√	√	√	√	0493
2006	Cadillac	CTS	Vehicle theft deterrent	√	√	√	√		
2006	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2006	Cadillac	CTS	Driver door switch	√	√	√	√		
2006	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2006	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2006	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2006	Cadillac	CTS	Passenger presence system		√	√			
2006	Cadillac	CTS	Remote function actuation	√	√	√	√	√	
2006	Cadillac	CTS	Climate control panel	√	√	√	√	√	
2006	Cadillac	CTS	Dash integration module	√	√	√	√	√	0610 0611 0612 0613
2006	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2006	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2006	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2006	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2006	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2006	Cadillac	CTS	Radio	√	√	√	√		0524
2006	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2006	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2006	Cadillac	CTS	Tire pressure monitor		√	√	√	√	0629
2006	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2006	Cadillac	DTS	HVAC systems - automatic	√	√	√	√	√	0493
2006	Cadillac	DTS	Steering wheel and column	√	√	√	√	√	
2006	Cadillac	DTS	Tire pressure monitoring	√	√	√	√	√	0513 0159
2006	Cadillac	DTS	Electronic suension control (ESC)		√	√	√	√	
2006	Cadillac	DTS	Antilock Braking System	√	√	√	√	√	0493
2006	Cadillac	DTS	Hydraulic brakes	√	√	√			
2006	Cadillac	DTS	Park brake	√	√	√	√		
2006	Cadillac	DTS	Engine controls	√	√	√	√	√	0493
2006	Cadillac	DTS	Engine cooling	√	√	√	√	√	0493
2006	Cadillac	DTS	Engine electrical	√	√	√	√	√	0493
2006	Cadillac	DTS	Shift lock control	√	√	√	√		
2006	Cadillac	DTS	Automatic transaxle	√	√	√	√	√	
2006	Cadillac	DTS	Body rear end	√	√	√	√		
2006	Cadillac	DTS	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Cadillac	DTS	Cruise Control	√	√	√	√	√	0493

2006	Cadillac	DTS	Door	√	√	√	√	√	
2006	Cadillac	DTS	Entertainment	√	√	√	√	√	0603
2006	Cadillac	DTS	Horns	√	√	√	√		
2006	Cadillac	DTS	Instrument panel	√	√	√	√	√	0493
2006	Cadillac	DTS	Keyless entry	√	√	√	√	√	0513 0159
2006	Cadillac	DTS	Lighting systems	√	√	√	√		
2006	Cadillac	DTS	Body Control Module	√	√	√	√		
2006	Cadillac	DTS	Seats	√	√	√	√	√	
2006	Cadillac	DTS	Stationary windows	√	√	√	√		
2006	Cadillac	DTS	Theft deterrent	√	√	√	√	√	0493
2006	Cadillac	DTS	Wipers/washer systems	√	√	√	√		
2006	Cadillac	DTS	Rear parking assist	√	√	√	√	√	
2006	Cadillac	DTS	Seat belts	√	√	√	√	√	0497
2006	Cadillac	DTS	SIR	√	√	√	√	√	0497
2006	Cadillac	STS	Shift lock control	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Automatic transmission	√	√	√	√	√	
2006	Cadillac	STS	HVAC systems - automatic	√	√	√	√	√	0493
2006	Cadillac	STS	Variable effort steering		√	√	√		
2006	Cadillac	STS	Steering wheel and column	√	√	√	√	√	0551
2006	Cadillac	STS	Electronic suspension control (ESC)		√	√	√	√	
2006	Cadillac	STS	Antilock Braking System	√	√	√	√	√	0493
2006	Cadillac	STS	Hydraulic brakes		√	√	√		
2006	Cadillac	STS	Park brake	√	√	√	√	√	
2006	Cadillac	STS	Engine controls	√	√	√	√	√	0493
2006	Cadillac	STS	Engine cooling	√	√	√	√	√	0493
2006	Cadillac	STS	Engine electrical	√	√	√	√	√	0559
2006	Cadillac	STS	Body rear end	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Cadillac	STS	Cruise Control	√	√	√	√	√	0493
2006	Cadillac	STS	Door	√	√	√	√	√	0560
2006	Cadillac	STS	Entertainment	√	√	√	√	√	0516
2006	Cadillac	STS	Horns	√	√	√	√	√	
2006	Cadillac	STS	Instrument panel	√	√	√	√	√	0493
2006	Cadillac	STS	Keyless entry	√	√	√	√	√	0551
2006	Cadillac	STS	Lighting systems	√	√	√	√	√	0551
2006	Cadillac	STS	Seats	√	√	√	√	√	
2006	Cadillac	STS	Stationary windows	√	√	√	√	√	
2006	Cadillac	STS	Theft deterrent	√	√	√	√	√	0493

2006	Cadillac	STS	Wipers/washer systems	√	√	√	√	√	0551
2006	Cadillac	STS	Rear parking assist	√	√	√	√	√	
2006	Cadillac	STS	Seat belts	√	√	√	√	√	0559
2006	Cadillac	STS	SIR	√	√	√	√	√	0559
2006	Cadillac	STS	HVAC systems - automatic	√	√	√	√	√	0493
2006	Cadillac	STS	Variable effort steering		√	√	√		
2006	Cadillac	STS	Steering wheel and column	√	√	√	√	√	0551
2006	Cadillac	STS	Tire pressure monitoring	√	√	√	√	√	0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520 0558
2006	Cadillac	STS	Electronic suspension control (ESC)		√	√	√	√	
2006	Cadillac	STS	Antilock Braking System	√	√	√	√	√	0493
2006	Cadillac	STS	Hydraulic brakes		√	√	√	√	
2006	Cadillac	STS	Park brake	√	√	√	√	√	
2006	Cadillac	STS	Engine controls	√	√	√	√	√	0493
2006	Cadillac	STS	Engine cooling	√	√	√	√	√	0493
2006	Cadillac	STS	Engine electrical	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Shift lock control	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Automatic transmission	√	√	√	√	√	
2006	Cadillac	STS	Body rear end	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Cadillac	STS	Cruise Control	√	√	√	√	√	0551
2006	Cadillac	STS	Door	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Entertainment	√	√	√	√	√	0516
2006	Cadillac	STS	Horns	√	√	√	√	√	
2006	Cadillac	STS	Instrument panel	√	√	√	√	√	0551
2006	Cadillac	STS	Keyless entry	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Lighting systems	√	√	√	√	√	0551
2006	Cadillac	STS	Seats	√	√	√	√	√	
2006	Cadillac	STS	Stationary windows	√	√	√	√	√	

2006	Cadillac	STS	Theft deterrent	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Wipers/washer systems	√	√	√	√	√	0551
2006	Cadillac	STS	Rear parking assist	√	√	√	√	√	
2006	Cadillac	STS	Seat belts	√	√	√	√	√	0559
2006	Cadillac	STS	SIR	√	√	√	√	√	0559
2006	Cadillac	STS	Variable effort steering		√	√	√		
2006	Cadillac	STS	Steering wheel and column	√	√	√	√	√	0551
2006	Cadillac	STS	Tire pressure monitoring	√	√	√	√	√	0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520 0558
2006	Cadillac	STS	Electronic suension control (ESC)		√	√	√	√	
2006	Cadillac	STS	Seat belts	√	√	√	√	√	0559
2006	Cadillac	STS	SIR	√	√	√	√	√	0559
2006	Cadillac	STS	HVAC systems - automatic	√	√	√	√	√	
2006	Cadillac	STS	Antilock Braking System	√	√	√	√	√	0506
2006	Cadillac	STS	Hydraulic brakes		√	√	√	√	
2006	Cadillac	STS	Park brake	√	√	√	√	√	
2006	Cadillac	STS	Engine controls	√	√	√	√	√	
2006	Cadillac	STS	Engine cooling	√	√	√	√	√	
2006	Cadillac	STS	Engine electrical	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Shift lock control	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Automatic transmission	√	√	√	√	√	
2006	Cadillac	STS	Body rear end	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Cadillac	STS	Cruise Control	√	√	√	√	√	0551
2006	Cadillac	STS	Door	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Entertainment	√	√	√	√	√	0516
2006	Cadillac	STS	Horns	√	√	√	√	√	
2006	Cadillac	STS	Instrument panel	√	√	√	√	√	0551
2006	Cadillac	STS	Keyless entry	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520

2006	Cadillac	STS	Lighting systems	√	√	√	√	√	0551
2006	Cadillac	STS	Seats	√	√	√	√	√	
2006	Cadillac	STS	Stationary windows	√	√	√	√	√	
2006	Cadillac	STS	Theft deterrent	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Wipers/washer systems	√	√	√	√	√	0551
2006	Cadillac	STS	Rear parking assist	√	√	√	√	√	
2006	Cadillac	XLR	HVAC systems - automatic	√	√	√	√	√	0493
2006	Cadillac	XLR	Variable effort steering		√	√	√		
2006	Cadillac	XLR	Steering wheel and column		√	√	√	√	
2006	Cadillac	XLR	Tire pressure monitoring	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Electronic suspension control (ESC)		√	√	√	√	
2006	Cadillac	XLR	Antilock Braking System	√	√	√	√	√	0493
2006	Cadillac	XLR	Hydraulic brakes		√	√	√	√	
2006	Cadillac	XLR	Park brake		√	√	√	√	
2006	Cadillac	XLR	Engine exhaust	√	√	√	√	√	
2006	Cadillac	XLR	Engine controls	√	√	√	√	√	0493
2006	Cadillac	XLR	Engine cooling	√	√	√	√	√	0493
2006	Cadillac	XLR	Engine electrical	√	√	√	√	√	0493
2006	Cadillac	XLR	Shift lock control	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Automatic transmission	√	√	√	√	√	
2006	Cadillac	XLR	Body rear end	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Cadillac	XLR	Cruise Control	√	√	√	√	√	0493
2006	Cadillac	XLR	Door	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Entertainment	√	√	√	√	√	0516
2006	Cadillac	XLR	Horns		√	√	√	√	
2006	Cadillac	XLR	Instrument panel	√	√	√	√	√	0493
2006	Cadillac	XLR	Keyless entry	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Lighting systems	√	√	√	√	√	
2006	Cadillac	XLR	Roof	√	√	√	√	√	
2006	Cadillac	XLR	Seats	√	√	√	√	√	0522 0646
2006	Cadillac	XLR	Theft deterrent	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Wipers/washer systems		√	√	√	√	
2006	Cadillac	XLR	Seat belts	√	√	√	√	√	0515

2006	Cadillac	XLR	SIR	√	√	√	√	√	0515
2006	Cadillac	XLR	HVAC systems - automatic	√	√	√	√	√	0493
2006	Cadillac	XLR	Variable effort steering		√	√	√		
2006	Cadillac	XLR	Steering wheel and column		√	√	√	√	
2006	Cadillac	XLR	Tire pressure monitoring	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Electronic suspension control (ESC)		√	√	√	√	
2006	Cadillac	XLR	Antilock Braking System	√	√	√	√	√	0493
2006	Cadillac	XLR	Hydraulic brakes		√	√	√	√	
2006	Cadillac	XLR	Park brake		√	√	√	√	
2006	Cadillac	XLR	Engine exhaust	√	√	√	√	√	
2006	Cadillac	XLR	Engine controls	√	√	√	√	√	0493
2006	Cadillac	XLR	Engine cooling	√	√	√	√	√	0493
2006	Cadillac	XLR	Engine electrical	√	√	√	√	√	0493
2006	Cadillac	XLR	Shift lock control	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Automatic transmission	√	√	√	√	√	
2006	Cadillac	XLR	Body rear end	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Cadillac	XLR	Cruise Control	√	√	√	√	√	0493
2006	Cadillac	XLR	Door	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Entertainment	√	√	√	√	√	0516
2006	Cadillac	XLR	Horns		√	√	√	√	
2006	Cadillac	XLR	Instrument panel		√	√	√	√	
2006	Cadillac	XLR	Keyless entry	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Lighting systems	√	√	√	√	√	
2006	Cadillac	XLR	Roof	√	√	√	√	√	
2006	Cadillac	XLR	Seats	√	√	√	√	√	0522 0646
2006	Cadillac	XLR	Theft deterrent	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Wipers/washer systems		√	√	√	√	
2006	Cadillac	XLR	Seat belts	√	√	√	√	√	0515
2006	Cadillac	XLR	SIR	√	√	√	√	√	0515
2006	Cadillac	Escalade - 2WD	Powertrain	√	√	√	√	√	
2006	Cadillac	Escalade - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2006	Cadillac	Escalade - 2WD	CD changer	√	√	√			
2006	Cadillac	Escalade - 2WD	Chime	√	√	√	√	√	
2006	Cadillac	Escalade - 2WD	Disc player and video delay	√	√	√			
2006	Cadillac	Escalade - 2WD	Digital radio receiver	√	√	√	√		0516

2006	Cadillac	Escalade - 2WD	Radio	√	√	√	√		
2006	Cadillac	Escalade - 2WD	Rear seat audio	√	√	√	√		
2006	Cadillac	Escalade - 2WD	Driver door module	√	√	√	√	√	
2006	Cadillac	Escalade - 2WD	Heating and air conditioning	√	√	√	√	√	
2006	Cadillac	Escalade - 2WD	Passenger door module	√	√	√	√	√	
2006	Cadillac	Escalade - 2WD	Rear HVAC	√	√	√	√		
2006	Cadillac	Escalade - 2WD	Generator battery control module	√	√	√	√	√	
2006	Cadillac	Escalade - 2WD	Driver seat module	√	√	√	√	√	
2006	Cadillac	Escalade - 2WD	Rear aux. climate module	√	√	√	√	√	
2006	Cadillac	Escalade - 2WD	Instrument panel cluster	√	√	√	√	√	
2006	Cadillac	Escalade - 2WD	Body Control Module	√	√	√	√	√	
2006	Cadillac	Escalade - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	Cadillac	Escalade - 2WD	Passenger presence system		√	√			0512
2006	Cadillac	Escalade - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Cadillac	Escalade - 2WD	Navigation radio	√	√	√	√	√	0525
2006	Cadillac	Escalade - 2WD	Traction assist (if equipped)		√	√	√	√	
2006	Cadillac	Escalade - 2WD	ABS	√	√	√	√	√	
2006	Cadillac	Escalade - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2006	Cadillac	Escalade - 2WD	Tire pressure monitor	√	√	√	√	√	0159
2006	Cadillac	Escalade - AWD	Powertrain	√	√	√	√	√	
2006	Cadillac	Escalade - AWD	Amplifier (bose)	√	√	√	√	√	0631
2006	Cadillac	Escalade - AWD	CD changer	√	√	√			
2006	Cadillac	Escalade - AWD	Chime	√	√	√	√	√	
2006	Cadillac	Escalade - AWD	Disc player and video delay	√	√	√			
2006	Cadillac	Escalade - AWD	Digital radio receiver	√	√	√	√		0516
2006	Cadillac	Escalade - AWD	Radio	√	√	√	√		
2006	Cadillac	Escalade - AWD	Rear seat audio	√	√	√	√		
2006	Cadillac	Escalade - AWD	Driver door module	√	√	√	√	√	
2006	Cadillac	Escalade - AWD	Heating and air conditioning	√	√	√	√	√	
2006	Cadillac	Escalade - AWD	Passenger door module	√	√	√	√	√	
2006	Cadillac	Escalade - AWD	Rear HVAC	√	√	√	√		
2006	Cadillac	Escalade - AWD	Generator battery control module	√	√	√	√	√	
2006	Cadillac	Escalade - AWD	Driver seat module	√	√	√	√	√	
2006	Cadillac	Escalade - AWD	Rear aux. climate module	√	√	√	√	√	
2006	Cadillac	Escalade - AWD	Instrument panel cluster	√	√	√	√	√	
2006	Cadillac	Escalade - AWD	Body Control Module	√	√	√	√	√	
2006	Cadillac	Escalade - AWD	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	Cadillac	Escalade - AWD	Passenger presence system		√	√			0512
2006	Cadillac	Escalade - AWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Cadillac	Escalade - AWD	Navigation radio	√	√	√	√	√	0525
2006	Cadillac	Escalade - AWD	Traction assist (if equipped)		√	√	√	√	

2006	Cadillac	Escalade - AWD	ABS	√	√	√	√	√	
2006	Cadillac	Escalade - AWD	ESC (if equipped)	√	√	√	√	√	0648
2006	Cadillac	Escalade - AWD	Tire pressure monitor	√	√	√	√	√	0159
2006	Cadillac	Escalade ESV	Powertrain	√	√	√	√	√	
2006	Cadillac	Escalade ESV	Amplifier (bose)	√	√	√	√	√	0631
2006	Cadillac	Escalade ESV	CD changer	√	√	√			
2006	Cadillac	Escalade ESV	Chime	√	√	√	√	√	
2006	Cadillac	Escalade ESV	Disc player and video delay	√	√	√			
2006	Cadillac	Escalade ESV	Digital radio receiver	√	√	√	√		0516
2006	Cadillac	Escalade ESV	Radio	√	√	√	√		
2006	Cadillac	Escalade ESV	Rear seat audio	√	√	√	√		
2006	Cadillac	Escalade ESV	Driver door module	√	√	√	√	√	
2006	Cadillac	Escalade ESV	Heating and air conditioning	√	√	√	√	√	
2006	Cadillac	Escalade ESV	Passenger door module	√	√	√	√	√	
2006	Cadillac	Escalade ESV	Rear HVAC	√	√	√	√		
2006	Cadillac	Escalade ESV	Generator battery control module	√	√	√	√	√	
2006	Cadillac	Escalade ESV	Driver seat module	√	√	√	√	√	
2006	Cadillac	Escalade ESV	Rear aux. climate module	√	√	√	√	√	
2006	Cadillac	Escalade ESV	Instrument panel cluster	√	√	√	√	√	
2006	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	
2006	Cadillac	Escalade ESV	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	Cadillac	Escalade ESV	Passenger presence system		√	√			0512
2006	Cadillac	Escalade ESV	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Cadillac	Escalade ESV	Navigation radio	√	√	√	√	√	0525
2006	Cadillac	Escalade ESV	Traction assist (if equipped)		√	√	√	√	
2006	Cadillac	Escalade ESV	ABS	√	√	√	√	√	
2006	Cadillac	Escalade ESV	ESC (if equipped)	√	√	√	√	√	0648
2006	Cadillac	Escalade ESV	Tire pressure monitor	√	√	√	√	√	0159
2006	Cadillac	Escalade EXT	Powertrain	√	√	√	√	√	
2006	Cadillac	Escalade EXT	Amplifier (bose)	√	√	√	√	√	0631
2006	Cadillac	Escalade EXT	CD changer	√	√	√			
2006	Cadillac	Escalade EXT	Chime	√	√	√	√	√	
2006	Cadillac	Escalade EXT	Disc player and video delay	√	√	√			
2006	Cadillac	Escalade EXT	Digital radio receiver	√	√	√	√		0516
2006	Cadillac	Escalade EXT	Radio	√	√	√	√		
2006	Cadillac	Escalade EXT	Rear seat audio	√	√	√	√		
2006	Cadillac	Escalade EXT	Driver door module	√	√	√	√	√	
2006	Cadillac	Escalade EXT	Heating and air conditioning	√	√	√	√	√	
2006	Cadillac	Escalade EXT	Passenger door module	√	√	√	√	√	
2006	Cadillac	Escalade EXT	Rear HVAC	√	√	√	√		
2006	Cadillac	Escalade EXT	Generator battery control module	√	√	√	√	√	

2006	Cadillac	Escalade EXT	Driver seat module	√	√	√	√	√	
2006	Cadillac	Escalade EXT	Rear aux. climate module	√	√	√	√	√	
2006	Cadillac	Escalade EXT	Instrument panel cluster	√	√	√	√	√	
2006	Cadillac	Escalade EXT	Body Control Module	√	√	√	√	√	
2006	Cadillac	Escalade EXT	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	Cadillac	Escalade EXT	Passenger presence system		√	√			0512
2006	Cadillac	Escalade EXT	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Cadillac	Escalade EXT	Navigation radio	√	√	√	√	√	0525
2006	Cadillac	Escalade EXT	Traction assist (if equipped)		√	√	√	√	
2006	Cadillac	Escalade EXT	ABS	√	√	√	√	√	
2006	Cadillac	Escalade EXT	ESC (if equipped)	√	√	√	√	√	0648
2006	Cadillac	Escalade EXT	Tire pressure monitor	√	√	√	√	√	0159
2006	Cadillac	SRX	Powertrain	√	√	√	√	√	0493
2006	Cadillac	SRX	Digital radio receiver	√	√	√	√		0516
2006	Cadillac	SRX	Amplifier (bose)	√	√	√	√	√	
2006	Cadillac	SRX	Amplifier (delco)	√	√	√	√	√	
2006	Cadillac	SRX	CD changer	√					
2006	Cadillac	SRX	Disc player and video delay	√	√	√			
2006	Cadillac	SRX	Radio	√	√	√	√		0649 0650 0651 0586 0587 0652 0653 0654 0655 0608 0525 0525
2006	Cadillac	SRX	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2006	Cadillac	SRX	Remote function actuation	√	√	√	√	√	0656
2006	Cadillac	SRX	Vehicle theft deterrent	√	√	√	√		
2006	Cadillac	SRX	Dash integration module	√	√	√	√	√	0604 0605
2006	Cadillac	SRX	Driver door module	√	√	√	√	√	0609 0609 0609 0609
2006	Cadillac	SRX	Driver door switch	√	√	√	√		
2006	Cadillac	SRX	Left rear door module	√	√	√	√	√	
2006	Cadillac	SRX	Passenger door module	√	√	√	√	√	0608
2006	Cadillac	SRX	Right rear door module	√	√	√	√	√	
2006	Cadillac	SRX	Climate control panel	√	√	√	√	√	0614 0615 0616 0618 0619 0610 0620 0611 0621 0612 0622 0623 0624 0625 0626 0627
2006	Cadillac	SRX	Personalization	√	√	√	√	√	
2006	Cadillac	SRX	Memory seat module	√	√	√	√	√	
2006	Cadillac	SRX	Rear seat module	√	√	√	√	√	
2006	Cadillac	SRX	Instrument panel cluster	√	√	√	√	√	
2006	Cadillac	SRX	Liftgate module	√	√	√	√	√	
2006	Cadillac	SRX	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Cadillac	SRX	Navigation radio	√	√	√	√	√	0658
2006	Cadillac	SRX	Tire pressure monitor		√	√	√	√	0629

2006	Cadillac	SRX	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2006	Cadillac	SRX	Electronic suension control	√	√	√	√	√	
2006	Cadillac	Hearse	HVAC systems - automatic	√	√	√	√	√	0493
2006	Cadillac	Hearse	Steering	√	√	√	√		
2006	Cadillac	Hearse	Tire pressure monitoring	√	√	√	√	√	0513 0159
2006	Cadillac	Hearse	Air suension	√	√	√	√	√	
2006	Cadillac	Hearse	Antilock Braking System	√	√	√	√	√	0506
2006	Cadillac	Hearse	Hydraulic brakes	√	√	√			
2006	Cadillac	Hearse	Park brake	√	√	√	√		
2006	Cadillac	Hearse	Engine controls	√	√	√	√	√	0493
2006	Cadillac	Hearse	Engine cooling	√	√	√	√	√	0493
2006	Cadillac	Hearse	Engine electrical	√	√	√	√	√	0493
2006	Cadillac	Hearse	Shift lock control	√	√	√	√		
2006	Cadillac	Hearse	Automatic transaxle	√	√	√	√	√	
2006	Cadillac	Hearse	Body rear end	√	√	√	√		
2006	Cadillac	Hearse	Cellular communication	√	√	√	√	√	0494 0591 0495 0585
2006	Cadillac	Hearse	Cruise Control	√	√	√	√	√	0493
2006	Cadillac	Hearse	Door	√	√	√	√	√	
2006	Cadillac	Hearse	Entertainment	√	√	√	√	√	
2006	Cadillac	Hearse	Horns	√	√	√	√		
2006	Cadillac	Hearse	Instrument panel	√	√	√	√	√	0493
2006	Cadillac	Hearse	Keyless entry	√	√	√	√	√	0513 0159
2006	Cadillac	Hearse	Lighting systems	√	√	√	√		
2006	Cadillac	Hearse	Body Control Module	√	√	√	√		
2006	Cadillac	Hearse	Seats	√	√	√	√	√	
2006	Cadillac	Hearse	Stationary windows	√	√	√	√		
2006	Cadillac	Hearse	Theft deterrent	√	√	√	√	√	0493
2006	Cadillac	Hearse	Wipers/washer systems	√	√	√	√		
2006	Cadillac	Hearse	Seat belts	√	√	√	√	√	0497
2006	Cadillac	Hearse	SIR	√	√	√	√	√	0497
2006	Cadillac	Limousine	HVAC systems - automatic	√	√	√	√	√	0493
2006	Cadillac	Limousine	Steering	√	√	√	√		
2006	Cadillac	Limousine	Tire pressure monitoring	√	√	√	√	√	0513 0159
2006	Cadillac	Limousine	Air suension	√	√	√	√	√	
2006	Cadillac	Limousine	Antilock Braking System	√	√	√	√	√	0506
2006	Cadillac	Limousine	Hydraulic brakes	√	√	√			
2006	Cadillac	Limousine	Park brake	√	√	√	√		
2006	Cadillac	Limousine	Engine controls	√	√	√	√	√	0493
2006	Cadillac	Limousine	Engine cooling	√	√	√	√	√	0493
2006	Cadillac	Limousine	Engine electrical	√	√	√	√	√	0493
2006	Cadillac	Limousine	Shift lock control	√	√	√	√		

2006	Cadillac	Limousine	Automatic transaxle	√	√	√	√	√	
2006	Cadillac	Limousine	Body rear end	√	√	√	√		
2006	Cadillac	Limousine	Cellular communication	√	√	√	√	√	0494 0591 0495 0585
2006	Cadillac	Limousine	Cruise Control	√	√	√	√	√	0493
2006	Cadillac	Limousine	Door	√	√	√	√	√	
2006	Cadillac	Limousine	Entertainment	√	√	√	√	√	
2006	Cadillac	Limousine	Horns	√	√	√	√		
2006	Cadillac	Limousine	Instrument panel	√	√	√	√	√	0493
2006	Cadillac	Limousine	Keyless entry	√	√	√	√	√	0513 0159
2006	Cadillac	Limousine	Lighting systems	√	√	√	√		
2006	Cadillac	Limousine	Body Control Module	√	√	√	√		
2006	Cadillac	Limousine	Seats	√	√	√	√	√	
2006	Cadillac	Limousine	Stationary windows	√	√	√	√		
2006	Cadillac	Limousine	Theft deterrent	√	√	√	√	√	0493
2006	Cadillac	Limousine	Wipers/washer systems	√	√	√	√		
2006	Cadillac	Limousine	Seat belts	√	√	√	√	√	0497
2006	Cadillac	Limousine	SIR	√	√	√	√	√	0497
2005	Cadillac	CTS	Powertrain	√	√	√	√	√	
2005	Cadillac	CTS	Dash integration module	√	√	√	√	√	0614 0615 0616 0617 0618 0619 0620 0621 0622 0623 0624 0625
2005	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2005	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2005	Cadillac	CTS	Driver door switch	√	√	√	√		0609 0609 0609 0609
2005	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2005	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2005	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2005	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2005	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2005	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2005	Cadillac	CTS	Radio	√	√	√	√		0606 0586 0587 0578 0579 0607 0525 0525
2005	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2005	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2005	Cadillac	CTS	Remote function actuation	√	√	√	√	√	
2005	Cadillac	CTS	Vehicle theft deterrent	√	√	√	√		
2005	Cadillac	CTS	Passenger presence system		√	√			
2005	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2005	Cadillac	CTS	Climate control panel	√	√	√	√	√	0524
2005	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2005	Cadillac	CTS	Powertrain	√	√	√	√	√	

2005	Cadillac	CTS	Dash integration module	√	√	√	√	√	0614 0615 0616 0617 0618 0619 0620 0621 0622 0623 0624 0625
2005	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2005	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2005	Cadillac	CTS	Driver door switch	√	√	√	√		
2005	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2005	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2005	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2005	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2005	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2005	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2005	Cadillac	CTS	Radio	√	√	√	√		0606 0586 0587 0578 0579 0607 0525 0525
2005	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2005	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2005	Cadillac	CTS	Remote function actuation	√	√	√	√	√	
2005	Cadillac	CTS	Vehicle theft deterrent	√	√	√	√		
2005	Cadillac	CTS	Passenger presence system		√	√			
2005	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2005	Cadillac	CTS	Climate control panel	√	√	√	√	√	0524
2005	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2005	Cadillac	CTS	Powertrain	√	√	√	√	√	
2005	Cadillac	CTS	Dash integration module	√	√	√	√	√	0614 0615 0616 0617 0618 0619 0620 0621 0622 0623 0624 0625
2005	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2005	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2005	Cadillac	CTS	Driver door switch	√	√	√	√		
2005	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2005	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2005	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2005	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2005	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2005	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2005	Cadillac	CTS	Radio	√	√	√	√		0606 0586 0587 0578 0579 0607 0525 0525
2005	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2005	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2005	Cadillac	CTS	Remote function actuation	√	√	√	√	√	

2005	Cadillac	CTS	Vehicle theft deterrent	√	√	√	√		
2005	Cadillac	CTS	Passenger presence system		√	√			
2005	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2005	Cadillac	CTS	Climate control panel	√	√	√	√	√	0524
2005	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2005	Cadillac	CTS	Dash integration module	√	√	√	√	√	0614 0615 0616 0617 0618 0619 0620 0621 0622 0623 0624 0625
2005	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2005	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2005	Cadillac	CTS	Driver door switch	√	√	√	√		
2005	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2005	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2005	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2005	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2005	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2005	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2005	Cadillac	CTS	Radio	√	√	√	√		0606 0586 0587 0578 0579 0607 0525 0525
2005	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2005	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2005	Cadillac	CTS	Remote function actuation	√	√	√	√	√	
2005	Cadillac	CTS	Vehicle theft deterrent	√	√	√	√		
2005	Cadillac	CTS	Passenger presence system		√	√			
2005	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2005	Cadillac	CTS	Climate control panel	√	√	√	√	√	0604 0605
2005	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2005	Cadillac	CTS	Tire pressure monitor		√	√	√	√	0629
2005	Cadillac	CTS	Powertrain	√	√	√	√	√	
2005	Cadillac	Deville	Powertrain	√	√	√	√	√	
2005	Cadillac	Deville	Dash integration module		√	√	√	√	0614 0664 0615 0619 0670 0628
2005	Cadillac	Deville	Personalization		√	√	√	√	
2005	Cadillac	Deville	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Cadillac	Deville	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	Deville	CD changer	√	√	√	√		
2005	Cadillac	Deville	Memory seat module		√	√	√	√	
2005	Cadillac	Deville	Driver door switch	√	√	√	√		
2005	Cadillac	Deville	Driver door module	√	√	√	√	√	
2005	Cadillac	Deville	Passenger door module	√	√	√	√	√	
2005	Cadillac	Deville	Left rear door module	√	√	√	√	√	

2005	Cadillac	Deville	Right rear door module	√	√	√	√	√	
2005	Cadillac	Deville	Amplifier (delco)		√	√	√	√	
2005	Cadillac	Deville	Navigation radio	√	√	√	√		0658
2005	Cadillac	Deville	Radio	√	√	√	√	√	0671 0578 0579 0525
2005	Cadillac	Deville	Remote function actuation	√	√	√	√	√	0672
2005	Cadillac	Deville	Vehicle theft deterrent		√	√	√		
2005	Cadillac	Deville	Instrument panel cluster		√	√	√	√	0651 0650 0673 0586
2005	Cadillac	Deville	Instrument panel module		√	√	√	√	0630 0667
2005	Cadillac	Deville	Rear climate control panel		√	√	√	√	
2005	Cadillac	Deville	eed sensitive steering		√	√	√		
2005	Cadillac	DHS	Powertrain	√	√	√	√	√	
2005	Cadillac	DHS	Dash integration module		√	√	√	√	0614 0664 0615 0619 0670 0628
2005	Cadillac	DHS	Personalization		√	√	√	√	
2005	Cadillac	DHS	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Cadillac	DHS	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	DHS	CD changer	√	√	√	√		
2005	Cadillac	DHS	Memory seat module		√	√	√	√	
2005	Cadillac	DHS	Driver door switch	√	√	√	√		
2005	Cadillac	DHS	Driver door module	√	√	√	√	√	
2005	Cadillac	DHS	Passenger door module	√	√	√	√	√	
2005	Cadillac	DHS	Left rear door module	√	√	√	√	√	
2005	Cadillac	DHS	Right rear door module	√	√	√	√	√	
2005	Cadillac	DHS	Amplifier (bose)		√	√	√	√	
2005	Cadillac	DHS	Navigation radio	√	√	√	√		0658
2005	Cadillac	DHS	Radio	√	√	√	√	√	0671 0578 0579 0525
2005	Cadillac	DHS	Remote function actuation	√	√	√	√	√	0672
2005	Cadillac	DHS	Vehicle theft deterrent		√	√	√		
2005	Cadillac	DHS	Instrument panel cluster		√	√	√	√	0651 0650 0673 0586
2005	Cadillac	DHS	Instrument panel module		√	√	√	√	0630 0667
2005	Cadillac	DHS	Rear climate control panel		√	√	√	√	
2005	Cadillac	DHS	eed sensitive steering		√	√	√		
2005	Cadillac	DTS	Powertrain	√	√	√	√	√	
2005	Cadillac	DTS	Dash integration module		√	√	√	√	0614 0664 0615 0619 0670 0628
2005	Cadillac	DTS	Personalization		√	√	√	√	
2005	Cadillac	DTS	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Cadillac	DTS	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	DTS	CD changer	√	√	√	√		
2005	Cadillac	DTS	Memory seat module		√	√	√	√	
2005	Cadillac	DTS	Driver door switch	√	√	√	√		
2005	Cadillac	DTS	Driver door module	√	√	√	√	√	

2005	Cadillac	DTS	Passenger door module	√	√	√	√	√	
2005	Cadillac	DTS	Left rear door module	√	√	√	√	√	
2005	Cadillac	DTS	Right rear door module	√	√	√	√	√	
2005	Cadillac	DTS	Amplifier (bose)		√	√	√	√	
2005	Cadillac	DTS	Navigation radio	√	√	√	√		0658
2005	Cadillac	DTS	Radio	√	√	√	√	√	0671 0578 0579 0525
2005	Cadillac	DTS	Remote function actuation	√	√	√	√	√	0672
2005	Cadillac	DTS	Vehicle theft deterrent		√	√	√		
2005	Cadillac	DTS	Instrument panel cluster		√	√	√	√	0651 0650 0673 0586
2005	Cadillac	DTS	Instrument panel module		√	√	√	√	0630 0667
2005	Cadillac	DTS	Rear climate control panel		√	√	√	√	
2005	Cadillac	DTS	Speed sensitive steering		√	√	√		
2005	Cadillac	STS	HVAC systems - automatic	√	√	√	√	√	0493
2005	Cadillac	STS	Variable effort steering		√	√	√		
2005	Cadillac	STS	Steering wheel and column	√	√	√	√	√	0551
2005	Cadillac	STS	Tire pressure monitoring	√	√	√	√	√	0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520 0558
2005	Cadillac	STS	Electronic suspension control (ESC)		√	√	√	√	
2005	Cadillac	STS	Antilock Braking System	√	√	√	√	√	0506
2005	Cadillac	STS	Hydraulic brakes		√	√	√	√	
2005	Cadillac	STS	Park brake	√	√	√	√	√	
2005	Cadillac	STS	Engine controls	√	√	√	√	√	0493
2005	Cadillac	STS	Engine cooling	√	√	√	√	√	0493
2005	Cadillac	STS	Engine electrical	√	√	√	√	√	0551
2005	Cadillac	STS	Shift lock control	√	√	√	√	√	0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520 0558
2005	Cadillac	STS	Automatic transmission	√	√	√	√	√	
2005	Cadillac	STS	Body rear end	√	√	√	√	√	0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520 0558
2005	Cadillac	STS	Cellular communication	√	√	√	√	√	0647
2005	Cadillac	STS	Cruise Control	√	√	√	√	√	0551
2005	Cadillac	STS	Door	√	√	√	√	√	0560
2005	Cadillac	STS	Entertainment	√	√	√	√	√	0561 0525 0525
2005	Cadillac	STS	Horns	√	√	√	√	√	
2005	Cadillac	STS	Instrument panel	√	√	√	√	√	0551
2005	Cadillac	STS	Keyless entry	√	√	√	√	√	0551
2005	Cadillac	STS	Lighting systems	√	√	√	√	√	0551
2005	Cadillac	STS	Driver position module		√	√	√		
2005	Cadillac	STS	Seats	√	√	√	√	√	

2005	Cadillac	STS	Stationary windows	√	√	√	√	√	
2005	Cadillac	STS	Theft deterrent	√	√	√	√	√	0551
2005	Cadillac	STS	Wipers/washer systems	√	√	√	√	√	0551
2005	Cadillac	STS	Rear parking assist	√	√	√	√	√	
2005	Cadillac	STS	Seat belts	√	√	√	√		0559
2005	Cadillac	STS	SIR	√	√	√	√		0559
2005	Cadillac	STS	Variable effort steering		√	√	√		
2005	Cadillac	STS	Steering wheel and column	√	√	√	√	√	0551
2005	Cadillac	STS	Tire pressure monitoring	√	√	√	√	√	0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520 0558
2005	Cadillac	STS	Electronic suension control (ESC)		√	√	√	√	
2005	Cadillac	STS	Shift lock control	√	√	√	√	√	0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520 0558
2005	Cadillac	STS	Automatic transmission	√	√	√	√	√	0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520 0558
2005	Cadillac	STS	Body rear end	√	√	√	√	√	0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520 0558
2005	Cadillac	STS	Cellular communication	√	√	√	√	√	0647
2005	Cadillac	STS	Door	√	√	√	√	√	0560
2005	Cadillac	STS	Entertainment	√	√	√	√	√	0561 0525 0525
2005	Cadillac	STS	Horns	√	√	√	√	√	
2005	Cadillac	STS	Keyless entry	√	√	√	√	√	0551
2005	Cadillac	STS	Lighting systems	√	√	√	√	√	0551
2005	Cadillac	STS	Driver position module		√	√	√		
2005	Cadillac	STS	Seats	√	√	√	√	√	
2005	Cadillac	STS	Stationary windows	√	√	√	√	√	
2005	Cadillac	STS	Wipers/washer systems	√	√	√	√	√	0551
2005	Cadillac	STS	Rear parking assist	√	√	√	√	√	
2005	Cadillac	STS	Cruise Control	√	√	√	√	√	0551
2005	Cadillac	STS	Instrument panel	√	√	√	√	√	0551
2005	Cadillac	STS	Theft deterrent	√	√	√	√	√	0551
2005	Cadillac	STS	Seat belts	√	√	√	√		0559
2005	Cadillac	STS	SIR	√	√	√	√		0559
2005	Cadillac	STS	HVAC systems - automatic	√	√	√	√	√	
2005	Cadillac	STS	Antilock Braking System	√	√	√	√	√	0506
2005	Cadillac	STS	Hydraulic brakes		√	√	√	√	
2005	Cadillac	STS	Park brake	√	√	√	√	√	
2005	Cadillac	STS	Engine controls	√	√	√	√	√	

2005	Cadillac	STS	Engine cooling	√	√	√	√	√	
2005	Cadillac	STS	Engine electrical	√	√	√	√	√	0551
2005	Cadillac	XLR	HVAC systems - automatic	√	√	√	√	√	0500 0493
2005	Cadillac	XLR	Variable effort steering		√	√	√		
2005	Cadillac	XLR	Steering wheel and column		√	√	√	√	
2005	Cadillac	XLR	Tire pressure monitoring	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2005	Cadillac	XLR	Electronic suspension control (ESC)		√	√	√	√	
2005	Cadillac	XLR	Antilock Braking System	√	√	√	√	√	0506 0493
2005	Cadillac	XLR	Hydraulic brakes		√	√	√	√	
2005	Cadillac	XLR	Park brake		√	√	√	√	
2005	Cadillac	XLR	Engine controls	√	√	√	√	√	0493
2005	Cadillac	XLR	Engine cooling	√	√	√	√	√	0493
2005	Cadillac	XLR	Engine electrical	√	√	√	√	√	0493
2005	Cadillac	XLR	Shift lock control	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2005	Cadillac	XLR	Automatic transmission	√	√	√	√	√	
2005	Cadillac	XLR	Body rear end	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2005	Cadillac	XLR	Cellular communication	√	√	√	√	√	0647 0585
2005	Cadillac	XLR	Cruise Control	√	√	√	√	√	0493
2005	Cadillac	XLR	Door	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2005	Cadillac	XLR	Entertainment	√	√	√	√	√	0516
2005	Cadillac	XLR	Horns		√	√	√	√	
2005	Cadillac	XLR	Instrument panel	√	√	√	√	√	0493
2005	Cadillac	XLR	Keyless entry	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2005	Cadillac	XLR	Lighting systems	√	√	√	√	√	
2005	Cadillac	XLR	Navigation System		√	√	√		0525
2005	Cadillac	XLR	Roof	√	√	√	√	√	
2005	Cadillac	XLR	Seats	√	√	√	√	√	0522 0646
2005	Cadillac	XLR	Theft deterrent	√	√	√	√	√	0493
2005	Cadillac	XLR	Wipers/washer systems		√	√	√	√	
2005	Cadillac	XLR	Seat belts	√	√	√	√	√	0515
2005	Cadillac	XLR	SIR	√	√	√	√	√	0515
2005	Cadillac	Escalade - 2WD	Powertrain	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2005	Cadillac	Escalade - 2WD	CD changer	√	√	√			
2005	Cadillac	Escalade - 2WD	Chime	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	Escalade - 2WD	Radio	√	√	√	√		

2005	Cadillac	Escalade - 2WD	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	Cadillac	Escalade - 2WD	Disc player and video delay	√	√	√			
2005	Cadillac	Escalade - 2WD	Passenger presence system		√	√			0512
2005	Cadillac	Escalade - 2WD	Instrument panel cluster	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	Driver door module	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	Passenger door module	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	Body Control Module	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	Driver seat module	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	Heating and air conditioning	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	Rear aux. climate module	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	Rear HVAC	√	√	√	√		
2005	Cadillac	Escalade - 2WD	Rear seat audio	√	√	√	√		
2005	Cadillac	Escalade - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Cadillac	Escalade - 2WD	Generator battery control module	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	Remote function actuation	√	√	√	√	√	0631
2005	Cadillac	Escalade - 2WD	Navigation radio	√	√	√	√	√	0525
2005	Cadillac	Escalade - 2WD	Traction assist (if equipped)		√	√	√	√	
2005	Cadillac	Escalade - 2WD	ABS	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	Rear wheel steering	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2005	Cadillac	Escalade - 2WD	Tire pressure monitor	√	√	√	√	√	0159
2005	Cadillac	Escalade - AWD	Powertrain	√	√	√	√	√	
2005	Cadillac	Escalade - AWD	Amplifier (bose)	√	√	√	√	√	0631
2005	Cadillac	Escalade - AWD	CD changer	√	√	√			
2005	Cadillac	Escalade - AWD	Chime	√	√	√	√	√	
2005	Cadillac	Escalade - AWD	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	Escalade - AWD	Radio	√	√	√	√		
2005	Cadillac	Escalade - AWD	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	Cadillac	Escalade - AWD	Disc player and video delay	√	√	√			
2005	Cadillac	Escalade - AWD	Passenger presence system		√	√			0512
2005	Cadillac	Escalade - AWD	Instrument panel cluster	√	√	√	√	√	
2005	Cadillac	Escalade - AWD	Driver door module	√	√	√	√	√	
2005	Cadillac	Escalade - AWD	Passenger door module	√	√	√	√	√	
2005	Cadillac	Escalade - AWD	Body Control Module	√	√	√	√	√	
2005	Cadillac	Escalade - AWD	Driver seat module	√	√	√	√	√	
2005	Cadillac	Escalade - AWD	Heating and air conditioning	√	√	√	√	√	
2005	Cadillac	Escalade - AWD	Rear aux. climate module	√	√	√	√	√	
2005	Cadillac	Escalade - AWD	Rear HVAC	√	√	√	√		
2005	Cadillac	Escalade - AWD	Rear seat audio	√	√	√	√		
2005	Cadillac	Escalade - AWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Cadillac	Escalade - AWD	Generator battery control module	√	√	√	√	√	

2005	Cadillac	Escalade - AWD	Remote function actuation	√	√	√	√	√	0631
2005	Cadillac	Escalade - AWD	Navigation radio	√	√	√	√	√	0525
2005	Cadillac	Escalade - AWD	Traction assist (if equipped)		√	√	√	√	
2005	Cadillac	Escalade - AWD	ABS	√	√	√	√	√	
2005	Cadillac	Escalade - AWD	Rear wheel steering	√	√	√	√	√	
2005	Cadillac	Escalade - AWD	ESC (if equipped)	√	√	√	√	√	0648
2005	Cadillac	Escalade - AWD	Tire pressure monitor	√	√	√	√	√	0159
2005	Cadillac	Escalade ESV	Powertrain	√	√	√	√	√	
2005	Cadillac	Escalade ESV	Amplifier (bose)	√	√	√	√	√	0631
2005	Cadillac	Escalade ESV	CD changer	√	√	√			
2005	Cadillac	Escalade ESV	Chime	√	√	√	√	√	
2005	Cadillac	Escalade ESV	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	Escalade ESV	Radio	√	√	√	√		
2005	Cadillac	Escalade ESV	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	Cadillac	Escalade ESV	Disc player and video dilay	√	√	√			
2005	Cadillac	Escalade ESV	Passenger presence system		√	√			0512
2005	Cadillac	Escalade ESV	Instrument panel cluster	√	√	√	√	√	
2005	Cadillac	Escalade ESV	Driver door module	√	√	√	√	√	
2005	Cadillac	Escalade ESV	Passenger door module	√	√	√	√	√	
2005	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	
2005	Cadillac	Escalade ESV	Driver seat module	√	√	√	√	√	
2005	Cadillac	Escalade ESV	Heating and air conditioning	√	√	√	√	√	
2005	Cadillac	Escalade ESV	Rear aux. climate module	√	√	√	√	√	
2005	Cadillac	Escalade ESV	Rear HVAC	√	√	√	√		
2005	Cadillac	Escalade ESV	Rear seat audio	√	√	√	√		
2005	Cadillac	Escalade ESV	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Cadillac	Escalade ESV	Generator battery control module	√	√	√	√	√	
2005	Cadillac	Escalade ESV	Remote function actuation	√	√	√	√	√	0631
2005	Cadillac	Escalade ESV	Navigation radio	√	√	√	√	√	0525
2005	Cadillac	Escalade ESV	Traction assist (if equipped)		√	√	√	√	
2005	Cadillac	Escalade ESV	ABS	√	√	√	√	√	
2005	Cadillac	Escalade ESV	Rear wheel steering	√	√	√	√	√	
2005	Cadillac	Escalade ESV	ESC (if equipped)	√	√	√	√	√	0648
2005	Cadillac	Escalade ESV	Tire pressure monitor	√	√	√	√	√	0159
2005	Cadillac	Escalade EXT	Powertrain	√	√	√	√	√	
2005	Cadillac	Escalade EXT	Amplifier (bose)	√	√	√	√	√	0631
2005	Cadillac	Escalade EXT	CD changer	√	√	√			
2005	Cadillac	Escalade EXT	Chime	√	√	√	√	√	
2005	Cadillac	Escalade EXT	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	Escalade EXT	Radio	√	√	√	√		
2005	Cadillac	Escalade EXT	Supplemental inflatable restraint	√	√	√	√		0531 0639

2005	Cadillac	Escalade EXT	Disc player and video dilay	√	√	√			
2005	Cadillac	Escalade EXT	Passenger presence system		√	√			0512
2005	Cadillac	Escalade EXT	Instrument panel cluster	√	√	√	√	√	
2005	Cadillac	Escalade EXT	Driver door module	√	√	√	√	√	
2005	Cadillac	Escalade EXT	Passenger door module	√	√	√	√	√	
2005	Cadillac	Escalade EXT	Body Control Module	√	√	√	√	√	
2005	Cadillac	Escalade EXT	Driver seat module	√	√	√	√	√	
2005	Cadillac	Escalade EXT	Heating and air conditioning	√	√	√	√	√	
2005	Cadillac	Escalade EXT	Rear aux. climate module	√	√	√	√	√	
2005	Cadillac	Escalade EXT	Rear HVAC	√	√	√	√		
2005	Cadillac	Escalade EXT	Rear seat audio	√	√	√	√		
2005	Cadillac	Escalade EXT	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Cadillac	Escalade EXT	Generator battery control module	√	√	√	√	√	
2005	Cadillac	Escalade EXT	Remote function actuation	√	√	√	√	√	0631
2005	Cadillac	Escalade EXT	Navigation radio	√	√	√	√	√	0525
2005	Cadillac	Escalade EXT	Traction assist (if equipped)		√	√	√	√	
2005	Cadillac	Escalade EXT	ABS	√	√	√	√	√	
2005	Cadillac	Escalade EXT	Rear wheel steering	√	√	√	√	√	
2005	Cadillac	Escalade EXT	ESC (if equipped)	√	√	√	√	√	0648
2005	Cadillac	Escalade EXT	Tire pressure monitor	√	√	√	√	√	0159
2005	Cadillac	SRX	Powertrain	√	√	√	√	√	0493
2005	Cadillac	SRX	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2005	Cadillac	SRX	Disc player and video dilay	√	√	√			
2005	Cadillac	SRX	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	SRX	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2005	Cadillac	SRX	Radio	√	√	√	√		0649 0650 0651 0586 0587 0652 0653 0654 0655 0608 0525 0525
2005	Cadillac	SRX	TV antenna module	√	√	√	√	√	
2005	Cadillac	SRX	Amplifier (delco)	√	√	√	√	√	
2005	Cadillac	SRX	Amplifier (bose)	√	√	√	√	√	
2005	Cadillac	SRX	CD changer	√					
2005	Cadillac	SRX	Driver door module	√	√	√	√	√	0609 0609 0609 0609
2005	Cadillac	SRX	Driver door switch	√	√	√	√		
2005	Cadillac	SRX	Left rear door module	√	√	√	√	√	
2005	Cadillac	SRX	Passenger door module	√	√	√	√	√	0608
2005	Cadillac	SRX	Right rear door module	√	√	√	√	√	
2005	Cadillac	SRX	Dash integration module	√	√	√	√	√	0614 0615 0616 0618 0619 0610 0620 0611 0621 0612 0622 0623 0624 0625 0626 0627
2005	Cadillac	SRX	Personalization	√	√	√	√	√	

2005	Cadillac	SRX	Remote function actuation	√	√	√	√	√	
2005	Cadillac	SRX	Vehicle theft deterrent	√	√	√	√		
2005	Cadillac	SRX	Memory seat module	√	√	√	√	√	
2005	Cadillac	SRX	Rear seat module	√	√	√	√	√	
2005	Cadillac	SRX	Instrument panel cluster	√	√	√	√	√	
2005	Cadillac	SRX	Climate control panel	√	√	√	√	√	0604 0605
2005	Cadillac	SRX	Tire pressure monitor		√	√	√	√	0629
2005	Cadillac	SRX	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2005	Cadillac	SRX	Electronic suspension control	√	√	√	√	√	
2005	Cadillac	Hearse	Powertrain	√	√	√	√	√	
2005	Cadillac	Hearse	Driver door module	√	√	√	√	√	
2005	Cadillac	Hearse	Driver door switch	√	√	√	√		
2005	Cadillac	Hearse	Passenger door module	√	√	√	√	√	
2005	Cadillac	Hearse	Rear integration module				√		
2005	Cadillac	Hearse	Dash integration module		√	√	√	√	0614 0615 0619 0628
2005	Cadillac	Hearse	Remote function actuation	√	√	√	√	√	
2005	Cadillac	Hearse	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	Hearse	Vehicle theft deterrent		√	√	√		
2005	Cadillac	Hearse	Amplifier (delco)	√	√	√	√	√	0671 0578 0579 0525
2005	Cadillac	Hearse	Instrument panel module		√	√	√	√	0630 0667
2005	Cadillac	Hearse	Instrument panel cluster		√	√	√	√	0651 0650 0673 0586
2005	Cadillac	Hearse	Tire pressure monitor		√	√	√		0159 0680 0681
2005	Cadillac	Hearse	DRP/ABS/TCS		√	√	√	√	
2005	Cadillac	Limousine	Powertrain	√	√	√	√	√	
2005	Cadillac	Limousine	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Cadillac	Limousine	Driver door module	√	√	√	√	√	
2005	Cadillac	Limousine	Driver door switch	√	√	√	√		
2005	Cadillac	Limousine	Left mid door module	√	√	√	√	√	
2005	Cadillac	Limousine	Left rear door module	√	√	√	√	√	
2005	Cadillac	Limousine	Passenger door module	√	√	√	√	√	
2005	Cadillac	Limousine	Right mid door module	√	√	√	√	√	
2005	Cadillac	Limousine	Right rear door module	√	√	√	√	√	
2005	Cadillac	Limousine	Rear integration module				√	√	
2005	Cadillac	Limousine	Dash integration module		√	√	√	√	0614 0615 0619 0628
2005	Cadillac	Limousine	Remote function actuation	√	√	√	√	√	
2005	Cadillac	Limousine	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	Limousine	Vehicle theft deterrent		√	√	√		
2005	Cadillac	Limousine	Amplifier (delco)		√	√	√		
2005	Cadillac	Limousine	Navigation radio	√	√	√	√	√	0658
2005	Cadillac	Limousine	Rear climate control panel		√	√	√	√	
2005	Cadillac	Limousine	Instrument panel module		√	√	√	√	0630 0667

2005	Cadillac	Limousine	Instrument panel cluster		√	√	√	√	0651 0650 0673 0586
2005	Cadillac	Limousine	Tire pressure monitor		√	√	√		0159 0680 0681
2005	Cadillac	Limousine	DRP/ABS/TCS		√	√	√	√	
2004	Cadillac	CTS	Powertrain	√	√	√	√	√	
2004	Cadillac	CTS	Onstar	√	√	√	√	√	0647 0683
2004	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2004	Cadillac	CTS	Dash integration module	√	√	√	√	√	0610 0611 0612
2004	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2004	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2004	Cadillac	CTS	Climate control panel	√	√	√	√	√	0614 0615 0616 0617 0618 0619 0620 0621 0622 0623 0624 0625
2004	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2004	Cadillac	CTS	Driver door switch	√	√	√	√		
2004	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2004	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2004	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2004	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2004	Cadillac	CTS	Instrument panel cluster		√	√			
2004	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2004	Cadillac	CTS	Remote function actuation	√	√	√	√	√	
2004	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2004	Cadillac	CTS	Vehicle theft deterrent	√	√	√	√		
2004	Cadillac	CTS	Radio	√	√	√	√	√	0606 0586 0587 0578 0579 0607 0525 0525
2004	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2004	Cadillac	CTS	Powertrain	√	√	√	√	√	
2004	Cadillac	CTS	Onstar	√	√	√	√	√	0647 0683
2004	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2004	Cadillac	CTS	Dash integration module	√	√	√	√	√	0610 0611 0612
2004	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2004	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2004	Cadillac	CTS	Climate control panel	√	√	√	√	√	0614 0615 0616 0617 0618 0619 0620 0621 0622 0623 0624 0625
2004	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2004	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2004	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2004	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2004	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2004	Cadillac	CTS	Instrument panel cluster		√	√			
2004	Cadillac	CTS	Memory seat module	√	√	√	√	√	

2004	Cadillac	CTS	Remote function actuation	√	√	√	√	√	
2004	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2004	Cadillac	CTS	Vehicle theft deterrent	√	√	√	√		
2004	Cadillac	CTS	Radio	√	√	√	√	√	0606 0586 0587 0578 0579 0607 0525 0525
2004	Cadillac	CTS	Driver door switch	√	√	√	√	√	0604 0605
2004	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2004	Cadillac	CTS	Onstar	√	√	√	√	√	0647 0683
2004	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2004	Cadillac	CTS	Dash integration module	√	√	√	√	√	0610 0611 0612
2004	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2004	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2004	Cadillac	CTS	Climate control panel	√	√	√	√	√	0614 0615 0616 0617 0618 0619 0620 0621 0622 0623 0624 0625
2004	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2004	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2004	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2004	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2004	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2004	Cadillac	CTS	Instrument panel cluster		√	√			
2004	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2004	Cadillac	CTS	Remote function actuation	√	√	√	√	√	
2004	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2004	Cadillac	CTS	Vehicle theft deterrent	√	√	√	√		
2004	Cadillac	CTS	Radio	√	√	√	√	√	0606 0586 0587 0578 0579 0607 0525 0525
2004	Cadillac	CTS	Driver door switch	√	√	√	√	√	0604 0605
2004	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2004	Cadillac	CTS	Tire pressure monitor		√	√	√	√	0629
2004	Cadillac	CTS	Powertrain	√	√	√	√	√	
2004	Cadillac	Deville	Powertrain	√	√	√	√	√	
2004	Cadillac	Deville	Memory seat module					√	
2004	Cadillac	Deville	Onstar	√	√	√	√	√	0647 0683
2004	Cadillac	Deville	Digital radio receiver	√	√	√	√		0516
2004	Cadillac	Deville	Navigation radio	√	√	√	√		0658
2004	Cadillac	Deville	Amplifier (delco)		√	√	√	√	
2004	Cadillac	Deville	CD changer	√	√	√	√		
2004	Cadillac	Deville	Dash integration module		√	√			0664 0615 0670 0628
2004	Cadillac	Deville	Instrument panel module		√	√			0630
2004	Cadillac	Deville	Rear climate control panel		√	√			
2004	Cadillac	Deville	Remote function actuation		√	√	√	√	0672

2004	Cadillac	Deville	Vehicle theft deterrent		√	√	√		
2004	Cadillac	Deville	Radio		√	√		√	0671 0578 0579 0525
2004	Cadillac	Deville	Instrument panel cluster		√	√	√	√	0586
2004	Cadillac	Deville	Driver door module	√	√	√	√	√	
2004	Cadillac	Deville	Rear integration module		√	√			
2004	Cadillac	Deville	Personalization		√	√	√	√	0630 0667
2004	Cadillac	Deville	Right rear door module	√	√	√	√	√	
2004	Cadillac	Deville	Left rear door module	√	√	√	√	√	
2004	Cadillac	Deville	Passenger door module	√	√	√	√	√	
2004	Cadillac	Deville	Driver door switch	√	√	√	√		0604 0605
2004	Cadillac	Deville	eed sensitive steering		√	√	√		
2004	Cadillac	DHS	Powertrain	√	√	√	√	√	
2004	Cadillac	DHS	Onstar	√	√	√	√	√	0647 0683
2004	Cadillac	DHS	Digital radio receiver	√	√	√	√		0516
2004	Cadillac	DHS	Navigation radio	√	√	√	√		0658
2004	Cadillac	DHS	CD changer	√	√	√	√		
2004	Cadillac	DHS	Dash integration module		√	√			0664 0615 0670 0628
2004	Cadillac	DHS	Instrument panel cluster				√		0608
2004	Cadillac	DHS	Instrument panel module		√	√			0630
2004	Cadillac	DHS	Rear climate control panel		√	√			
2004	Cadillac	DHS	Remote function actuation		√	√	√	√	0672
2004	Cadillac	DHS	Vehicle theft deterrent		√	√	√		
2004	Cadillac	DHS	Radio		√	√	√	√	0671 0578 0579 0525
2004	Cadillac	DHS	Amplifier (bose)		√	√	√	√	
2004	Cadillac	DHS	Memory seat module		√	√	√	√	0618
2004	Cadillac	DHS	Driver door module	√	√	√	√	√	
2004	Cadillac	DHS	Rear integration module		√	√			
2004	Cadillac	DHS	Personalization		√	√	√	√	0630 0667
2004	Cadillac	DHS	Right rear door module	√	√	√	√	√	
2004	Cadillac	DHS	Left rear door module	√	√	√	√	√	
2004	Cadillac	DHS	Passenger door module	√	√	√	√	√	
2004	Cadillac	DHS	Driver door switch	√	√	√	√		0604 0605
2004	Cadillac	DHS	eed sensitive steering		√	√	√		
2004	Cadillac	DTS	Powertrain	√	√	√	√	√	
2004	Cadillac	DTS	Onstar	√	√	√	√	√	0647 0683
2004	Cadillac	DTS	Digital radio receiver	√	√	√	√		0516
2004	Cadillac	DTS	Navigation radio	√	√	√	√		0658
2004	Cadillac	DTS	CD changer	√	√	√	√		
2004	Cadillac	DTS	Dash integration module		√	√			0664 0615 0670 0628
2004	Cadillac	DTS	Instrument panel cluster				√		0608
2004	Cadillac	DTS	Instrument panel module		√	√			0630

2004	Cadillac	DTS	Rear climate control panel		√	√			
2004	Cadillac	DTS	Remote function actuation		√	√	√	√	0672
2004	Cadillac	DTS	Vehicle theft deterrent		√	√	√		
2004	Cadillac	DTS	Radio		√	√	√	√	0671 0578 0579 0525
2004	Cadillac	DTS	Amplifier (bose)		√	√	√	√	
2004	Cadillac	DTS	Memory seat module		√	√	√	√	0618
2004	Cadillac	DTS	Driver door module	√	√	√	√	√	
2004	Cadillac	DTS	Rear integration module		√	√			
2004	Cadillac	DTS	Personalization		√	√	√	√	0630 0667
2004	Cadillac	DTS	Right rear door module	√	√	√	√	√	
2004	Cadillac	DTS	Left rear door module	√	√	√	√	√	
2004	Cadillac	DTS	Passenger door module	√	√	√	√	√	
2004	Cadillac	DTS	Driver door switch	√	√	√	√		0604 0605
2004	Cadillac	DTS	eed sensitive steering		√	√	√		
2004	Cadillac	Seville	Powertrain	√	√	√	√	√	
2004	Cadillac	Seville	Onstar	√	√	√	√	√	0647 0683
2004	Cadillac	Seville	Digital radio receiver	√	√	√	√		0516
2004	Cadillac	Seville	Instrument panel module		√	√	√	√	
2004	Cadillac	Seville	Dash integration module		√	√	√	√	0614 0617 0686 0687
2004	Cadillac	Seville	Navigation radio	√	√	√	√		0658
2004	Cadillac	Seville	Amplifier (delco)		√	√	√	√	
2004	Cadillac	Seville	CD changer	√	√	√	√		0664 0615 0670 0628
2004	Cadillac	Seville	Driver door module		√	√	√	√	
2004	Cadillac	Seville	Instrument panel cluster		√	√	√		0608
2004	Cadillac	Seville	Remote function actuation		√	√	√	√	0672
2004	Cadillac	Seville	Vehicle theft deterrent		√	√	√		
2004	Cadillac	Seville	Radio		√	√	√	√	0671 0578 0579 0525
2004	Cadillac	Seville	Memory seat module		√	√	√	√	
2004	Cadillac	Seville	Amplifier (bose)		√	√	√	√	
2004	Cadillac	Seville	Rear integration module		√	√	√	√	0674
2004	Cadillac	Seville	eed sensitive steering		√	√	√		
2004	Cadillac	Seville	Powertrain	√	√	√	√	√	
2004	Cadillac	Seville	Onstar	√	√	√	√	√	0647 0683
2004	Cadillac	Seville	Digital radio receiver	√	√	√	√		0516
2004	Cadillac	Seville	Instrument panel module		√	√	√	√	
2004	Cadillac	Seville	Dash integration module		√	√	√	√	0614 0617 0686 0687
2004	Cadillac	Seville	Navigation radio	√	√	√	√		0658
2004	Cadillac	Seville	Amplifier (delco)		√	√	√	√	
2004	Cadillac	Seville	CD changer	√	√	√	√		0664 0615 0670 0628
2004	Cadillac	Seville	Driver door module		√	√	√	√	
2004	Cadillac	Seville	Instrument panel cluster		√	√	√		0608

2004	Cadillac	Seville	Remote function actuation		√	√	√	√	0672
2004	Cadillac	Seville	Vehicle theft deterrent		√	√	√		
2004	Cadillac	Seville	Radio		√	√	√	√	0671 0578 0579 0525
2004	Cadillac	Seville	Memory seat module		√	√	√	√	
2004	Cadillac	Seville	Amplifier (bose)		√	√	√	√	
2004	Cadillac	Seville	Rear integration module		√	√	√	√	0674
2004	Cadillac	Seville	eed sensitive steering		√	√	√		
2004	Cadillac	XLR	HVAC systems - automatic	√	√	√	√	√	0500 0493
2004	Cadillac	XLR	Variable effort steering		√	√	√	√	
2004	Cadillac	XLR	Steering wheel and column		√	√	√	√	
2004	Cadillac	XLR	Tire pressure monitoring	√	√	√	√	√	0521
2004	Cadillac	XLR	Electronic suension control (ESC)		√	√	√	√	
2004	Cadillac	XLR	Antilock Braking System	√	√	√	√	√	0506 0493
2004	Cadillac	XLR	Hydraulic brakes		√	√	√	√	
2004	Cadillac	XLR	Park brake		√	√	√	√	
2004	Cadillac	XLR	Engine controls	√	√	√	√	√	0493
2004	Cadillac	XLR	Engine cooling	√	√	√	√	√	0493
2004	Cadillac	XLR	Engine electrical	√	√	√	√	√	0493
2004	Cadillac	XLR	Shift lock control	√	√	√	√	√	0521
2004	Cadillac	XLR	Automatic transmission	√	√	√	√	√	
2004	Cadillac	XLR	Body rear end	√	√	√	√	√	0521
2004	Cadillac	XLR	Cellular communication	√	√	√	√	√	0647 0585
2004	Cadillac	XLR	Cruise Control	√	√	√	√	√	0493
2004	Cadillac	XLR	Door	√	√	√	√	√	0521
2004	Cadillac	XLR	Entertainment	√	√	√	√	√	0525
2004	Cadillac	XLR	Horns		√	√	√	√	
2004	Cadillac	XLR	Instrument panel	√	√	√	√	√	0493
2004	Cadillac	XLR	Keyless entry		√	√	√	√	0521
2004	Cadillac	XLR	Lighting systems		√	√	√	√	
2004	Cadillac	XLR	Navigation System		√	√	√		0525
2004	Cadillac	XLR	Roof		√	√	√	√	
2004	Cadillac	XLR	Seats		√	√	√	√	0522 0646
2004	Cadillac	XLR	Theft deterrent	√	√	√	√	√	0493
2004	Cadillac	XLR	Wipers/washer systems		√	√	√	√	
2004	Cadillac	XLR	Seat belts				√	√	0515
2004	Cadillac	XLR	SIR				√	√	0515
2004	Cadillac	Escalade	Powertrain	√	√	√	√	√	
2004	Cadillac	Escalade	Digital radio receiver	√	√	√	√		0516
2004	Cadillac	Escalade	Body Control Module	√	√	√	√	√	
2004	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2004	Cadillac	Escalade	Passenger presence system		√	√			0512

2004	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	0631
2004	Cadillac	Escalade	Chime	√	√	√	√	√	
2004	Cadillac	Escalade	Passenger door module	√	√	√	√	√	
2004	Cadillac	Escalade	Driver door module	√	√	√	√	√	
2004	Cadillac	Escalade	Onstar	√	√	√	√	√	0647 0683
2004	Cadillac	Escalade	Driver seat module	√	√	√	√	√	
2004	Cadillac	Escalade	Rear HVAC	√	√	√	√		
2004	Cadillac	Escalade	Heating and air conditioning	√	√	√	√	√	
2004	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√		0531
2004	Cadillac	Escalade	CD changer	√	√	√			
2004	Cadillac	Escalade	Radio	√	√	√	√		
2004	Cadillac	Escalade	Rear seat entertainment	√	√	√			
2004	Cadillac	Escalade	Rear seat audio	√	√	√	√		
2004	Cadillac	Escalade	Rear aux. climate module	√	√	√	√	√	0516
2004	Cadillac	Escalade	Navigation radio	√	√	√	√	√	0525
2004	Cadillac	Escalade	Rear wheel steering	√	√	√	√	√	
2004	Cadillac	Escalade	ABS	√	√	√	√	√	
2004	Cadillac	Escalade	ESC (if equipped)	√	√	√	√	√	0648
2004	Cadillac	Escalade	Tire pressure monitor	√	√	√	√	√	0159
2004	Cadillac	Escalade	Traction assist (if equipped)	√	√	√	√	√	0648
2004	Cadillac	SRX	Powertrain	√	√	√	√	√	0493
2004	Cadillac	SRX	Onstar	√	√	√	√	√	0647 0683
2004	Cadillac	SRX	Digital radio receiver	√	√	√	√		0516
2004	Cadillac	SRX	Amplifier (bose)	√	√	√	√		
2004	Cadillac	SRX	Amplifier (delco)	√	√	√	√	√	
2004	Cadillac	SRX	Climate control panel	√	√	√	√	√	
2004	Cadillac	SRX	Dash integration module	√	√	√	√	√	0614 0615 0616 0618 0619 0620 0621 0622 0623 0624 0625 0626
2004	Cadillac	SRX	Driver door module	√	√	√	√	√	0608
2004	Cadillac	SRX	Driver door switch	√	√	√	√		
2004	Cadillac	SRX	Left rear door module	√	√	√	√	√	
2004	Cadillac	SRX	Right rear door module	√	√	√	√	√	
2004	Cadillac	SRX	Passenger door module	√	√	√	√	√	0608
2004	Cadillac	SRX	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2004	Cadillac	SRX	Memory seat module	√	√	√	√	√	
2004	Cadillac	SRX	Instrument panel cluster	√	√	√	√	√	
2004	Cadillac	SRX	Radio	√	√	√	√		0649 0650 0651 0586 0587 0652 0653 0654 0655 0608 0525 0525
2004	Cadillac	SRX	Remote function actuation	√	√	√	√	√	0610 0611 0612
2004	Cadillac	SRX	Rear seat module	√	√	√	√	√	

2004	Cadillac	SRX	TV antenna module	√	√	√	√	√	
2004	Cadillac	SRX	Vehicle theft deterrent	√	√	√	√		0609 0609 0609 0609
2004	Cadillac	SRX	Disc player and video delay	√	√	√			
2004	Cadillac	SRX	CD changer	√	√	√	√	√	0604 0605
2004	Cadillac	SRX	Navigation radio	√	√	√	√	√	0658
2004	Cadillac	SRX	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2004	Cadillac	SRX	Electronic suspension control	√	√	√	√	√	
2004	Cadillac	SRX	Tire pressure monitor		√	√	√	√	0629
2004	Cadillac	Incomplete(Hearse)	Powertrain	√	√	√	√	√	
2004	Cadillac	Incomplete(Hearse)	Amplifier (delco)		√	√	√	√	0618 0619 0604 0628 0650 0586 0630 0667 0671 0578 0579 0525
2004	Cadillac	Incomplete(Hearse)	Rear integration module		√	√	√	√	0628 0671 0578 0579 0525 0691 0692
2004	Cadillac	Incomplete(Hearse)	Driver door module	√	√	√	√	√	
2004	Cadillac	Incomplete(Hearse)	Passenger door module	√	√	√	√	√	
2004	Cadillac	Incomplete(Hearse)	Driver door switch	√	√	√	√	√	
2004	Cadillac	Incomplete(Hearse)	DRP/ABS/TCS		√	√	√	√	
2004	Cadillac	Incomplete(Hearse)	Tire pressure monitor		√	√	√		0159 0680 0681
2004	Cadillac	Incomplete(Limousine)	Powertrain	√	√	√	√	√	
2004	Cadillac	Incomplete(Limousine)	Onstar	√	√	√	√	√	0647 0683
2004	Cadillac	Incomplete(Limousine)	Amplifier (delco)		√	√	√	√	0618 0619 0604 0628 0650 0586 0630 0667 0671 0578 0579 0525
2004	Cadillac	Incomplete(Limousine)	Navigation radio	√	√	√	√	√	0658
2004	Cadillac	Incomplete(Limousine)	Driver door module	√	√	√	√	√	
2004	Cadillac	Incomplete(Limousine)	Passenger door module	√	√	√	√	√	
2004	Cadillac	Incomplete(Limousine)	Driver door switch	√	√	√	√		
2004	Cadillac	Incomplete(Limousine)	Left rear door module	√	√	√	√	√	
2004	Cadillac	Incomplete(Limousine)	Right rear door module	√	√	√	√	√	
2004	Cadillac	Incomplete(Limousine)	Left mid door module	√	√	√	√	√	
2004	Cadillac	Incomplete(Limousine)	Right mid door module	√	√	√	√	√	
2004	Cadillac	Incomplete(Limousine)	Rear climate control panel		√	√	√	√	
2004	Cadillac	Incomplete(Limousine)	DRP/ABS/TCS		√	√	√	√	
2004	Cadillac	Incomplete(Limousine)	Tire pressure monitor		√	√	√		0159 0680 0681
2003	Cadillac	CTS	Powertrain	√	√	√	√	√	
2003	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	0614 0615 0616 0617 0618 0619 0610 0620 0611 0621 0612 0622 0623 0624 0625 0626
2003	Cadillac	CTS	Radio	√			√		0606 0586 0587 0578 0579 0607 0525 0525

2003	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2003	Cadillac	CTS	Onstar	√	√	√	√	√	0647 0683
2003	Cadillac	CTS	Rear integration module	√	√	√	√	√	
2003	Cadillac	CTS	Vehicle theft deterrent		√	√			
2003	Cadillac	CTS	Remote function actuation		√	√		√	
2003	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2003	Cadillac	CTS	Dash integration module	√	√	√	√	√	0604 0605
2003	Cadillac	CTS	DRP/ABS/TCS	√	√	√	√	√	0506
2003	Cadillac	CTS	VES	√	√	√	√	√	0506
2003	Cadillac	Deville	Powertrain	√	√	√	√	√	
2003	Cadillac	Deville	Dash integration module		√	√	√	√	0614 0615 0619 0586 0630 0667
2003	Cadillac	Deville	CD changer		√	√	√	√	0670 0670 0628 0651 0650 0673 0614
2003	Cadillac	Deville	Instrument panel cluster				√		
2003	Cadillac	Deville	Amplifier (delco)		√	√	√	√	
2003	Cadillac	Deville	Radio		√	√		√	0525
2003	Cadillac	Deville	Memory seat module					√	
2003	Cadillac	Deville	Onstar	√	√	√	√	√	0647 0683
2003	Cadillac	Deville	Digital radio receiver	√	√	√	√		0516
2003	Cadillac	Deville	Navigation radio	√	√	√	√		0658
2003	Cadillac	Deville	Remote function actuation		√	√		√	0672
2003	Cadillac	Deville	Vehicle theft deterrent		√	√			0685
2003	Cadillac	Deville	Driver door switch	√	√	√	√		
2003	Cadillac	Deville	Left rear door module	√	√	√	√	√	
2003	Cadillac	Deville	Right rear door module	√	√	√	√	√	
2003	Cadillac	Deville	Driver door module	√	√	√	√	√	
2003	Cadillac	Deville	Passenger door module	√	√	√	√		0604 0605
2003	Cadillac	Deville	eed sensitive steering		√	√	√		
2003	Cadillac	DHS	Powertrain	√	√	√	√	√	
2003	Cadillac	DHS	Dash integration module		√	√	√	√	0614 0615 0619 0586 0630 0667
2003	Cadillac	DHS	Amplifier (bose)		√	√	√	√	
2003	Cadillac	DHS	CD changer		√	√	√	√	0670 0670 0628 0651 0650 0673 0614
2003	Cadillac	DHS	Instrument panel cluster				√		0608
2003	Cadillac	DHS	Radio		√	√		√	0525
2003	Cadillac	DHS	Onstar	√	√	√	√	√	0647 0683
2003	Cadillac	DHS	Digital radio receiver	√	√	√	√		0516
2003	Cadillac	DHS	Navigation radio	√	√	√	√		0658
2003	Cadillac	DHS	Remote function actuation		√	√		√	0672
2003	Cadillac	DHS	Vehicle theft deterrent		√	√			0685

2003	Cadillac	DHS	Driver door switch	√	√	√	√		
2003	Cadillac	DHS	Left rear door module	√	√	√	√	√	
2003	Cadillac	DHS	Right rear door module	√	√	√	√	√	
2003	Cadillac	DHS	Driver door module	√	√	√	√	√	
2003	Cadillac	DHS	Passenger door module	√	√	√	√		0604 0605
2003	Cadillac	DHS	eed sensitive steering		√	√	√		
2003	Cadillac	DTS	Powertrain	√	√	√	√	√	
2003	Cadillac	DTS	Dash integration module		√	√	√	√	0614 0615 0619 0586 0630 0667
2003	Cadillac	DTS	Amplifier (bose)		√	√	√	√	
2003	Cadillac	DTS	CD changer		√	√	√	√	0670 0670 0628 0651 0650 0673 0614
2003	Cadillac	DTS	Instrument panel cluster				√		0608
2003	Cadillac	DTS	Radio		√	√		√	0525
2003	Cadillac	DTS	Onstar	√	√	√	√	√	0647 0683
2003	Cadillac	DTS	Digital radio receiver	√	√	√	√		0516
2003	Cadillac	DTS	Navigation radio	√	√	√	√		0658
2003	Cadillac	DTS	Remote function actuation		√	√		√	0672
2003	Cadillac	DTS	Vehicle theft deterrent		√	√			0685
2003	Cadillac	DTS	Driver door switch	√	√	√	√		
2003	Cadillac	DTS	Left rear door module	√	√	√	√	√	
2003	Cadillac	DTS	Right rear door module	√	√	√	√	√	
2003	Cadillac	DTS	Driver door module	√	√	√	√	√	
2003	Cadillac	DTS	Passenger door module	√	√	√	√		0604 0605
2003	Cadillac	DTS	eed sensitive steering		√	√	√		
2003	Cadillac	Seville	Powertrain	√	√	√	√	√	
2003	Cadillac	Seville	Amplifier (bose)		√	√	√	√	0614 0615 0617 0686 0687 0685 0586 0630
2003	Cadillac	Seville	CD changer		√	√	√	√	0670 0670 0628 0651 0650 0673 0614
2003	Cadillac	Seville	Amplifier (delco)		√	√	√	√	
2003	Cadillac	Seville	Instrument panel cluster				√		0608
2003	Cadillac	Seville	Memory seat module		√	√	√	√	
2003	Cadillac	Seville	Radio		√	√		√	0525
2003	Cadillac	Seville	Onstar	√	√	√	√	√	0647 0683
2003	Cadillac	Seville	Digital radio receiver	√	√	√	√		0516
2003	Cadillac	Seville	Navigation radio	√	√	√	√		0658
2003	Cadillac	Seville	Dash integration module						0664
2003	Cadillac	Seville	Remote function actuation		√	√	√	√	0672
2003	Cadillac	Seville	Vehicle theft deterrent	√	√	√	√	√	0614 0615 0617 0686 0687 0685 0586 0630
2003	Cadillac	Seville	eed sensitive steering		√	√	√		

2003	Cadillac	Escalade - 2WD	Powertrain	√	√	√	√	√	
2003	Cadillac	Escalade - 2WD	Body Control Module	√	√	√	√	√	
2003	Cadillac	Escalade - 2WD	Heating and air conditioning	√	√	√	√	√	
2003	Cadillac	Escalade - 2WD	Radio				√		
2003	Cadillac	Escalade - 2WD	Supplemental inflatable restraint		√	√			0531
2003	Cadillac	Escalade - 2WD	Onstar	√	√	√	√	√	0647 0683
2003	Cadillac	Escalade - 2WD	Digital radio receiver	√	√	√	√		0516
2003	Cadillac	Escalade - 2WD	Instrument panel cluster	√	√	√	√	√	
2003	Cadillac	Escalade - 2WD	Rear seat entertainment	√	√	√			
2003	Cadillac	Escalade - 2WD	Passenger presence system	√	√	√	√	√	0512
2003	Cadillac	Escalade - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2003	Cadillac	Escalade - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2003	Cadillac	Escalade - 2WD	ABS	√	√	√	√	√	
2003	Cadillac	Escalade - 2WD	Traction assist (if equipped)	√	√	√	√	√	0648
2003	Cadillac	Escalade - AWD	Powertrain	√	√	√	√	√	
2003	Cadillac	Escalade - AWD	Body Control Module	√	√	√	√	√	
2003	Cadillac	Escalade - AWD	Heating and air conditioning	√	√	√	√	√	
2003	Cadillac	Escalade - AWD	Radio				√		
2003	Cadillac	Escalade - AWD	Supplemental inflatable restraint		√	√			0531
2003	Cadillac	Escalade - AWD	Onstar	√	√	√	√	√	0647 0683
2003	Cadillac	Escalade - AWD	Digital radio receiver	√	√	√	√		0516
2003	Cadillac	Escalade - AWD	Instrument panel cluster	√	√	√	√	√	
2003	Cadillac	Escalade - AWD	Rear seat entertainment	√	√	√			
2003	Cadillac	Escalade - AWD	Passenger presence system	√	√	√	√	√	0512
2003	Cadillac	Escalade - AWD	Amplifier (bose)	√	√	√	√	√	0631
2003	Cadillac	Escalade - AWD	ESC (if equipped)	√	√	√	√	√	0648
2003	Cadillac	Escalade - AWD	ABS	√	√	√	√	√	
2003	Cadillac	Escalade - AWD	Traction assist (if equipped)	√	√	√	√	√	0648
2003	Cadillac	Escalade ESV	Powertrain	√	√	√	√	√	
2003	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	
2003	Cadillac	Escalade ESV	Heating and air conditioning	√	√	√	√	√	
2003	Cadillac	Escalade ESV	Radio				√		
2003	Cadillac	Escalade ESV	Supplemental inflatable restraint		√	√			0531
2003	Cadillac	Escalade ESV	Onstar	√	√	√	√	√	0647 0683
2003	Cadillac	Escalade ESV	Digital radio receiver	√	√	√	√		0516
2003	Cadillac	Escalade ESV	Instrument panel cluster	√	√	√	√	√	
2003	Cadillac	Escalade ESV	Rear seat entertainment	√	√	√			
2003	Cadillac	Escalade ESV	Passenger presence system	√	√	√	√	√	0512
2003	Cadillac	Escalade ESV	Amplifier (bose)	√	√	√	√	√	0631
2003	Cadillac	Escalade ESV	ESC (if equipped)	√	√	√	√	√	0648
2003	Cadillac	Escalade ESV	ABS	√	√	√	√	√	

2003	Cadillac	Escalade ESV	Traction assist (if equipped)	√	√	√	√	√	0648
2003	Cadillac	Escalade EXT	Powertrain	√	√	√	√	√	
2003	Cadillac	Escalade EXT	Body Control Module	√	√	√	√	√	
2003	Cadillac	Escalade EXT	Heating and air conditioning	√	√	√	√	√	
2003	Cadillac	Escalade EXT	Radio				√		
2003	Cadillac	Escalade EXT	Supplemental inflatable restraint		√	√			0531
2003	Cadillac	Escalade EXT	Onstar	√	√	√	√	√	0647 0683
2003	Cadillac	Escalade EXT	Digital radio receiver	√	√	√	√		0516
2003	Cadillac	Escalade EXT	Instrument panel cluster	√	√	√	√	√	
2003	Cadillac	Escalade EXT	Rear seat entertainment	√	√	√			
2003	Cadillac	Escalade EXT	Passenger presence system	√	√	√	√	√	0512
2003	Cadillac	Escalade EXT	Amplifier (bose)	√	√	√	√	√	0631
2003	Cadillac	Escalade EXT	ESC (if equipped)	√	√	√	√	√	0648
2003	Cadillac	Escalade EXT	ABS	√	√	√	√	√	
2003	Cadillac	Escalade EXT	Traction assist (if equipped)	√	√	√	√	√	0648
2003	Cadillac	Incomplete	Amplifier (delco)		√	√	√	√	0664 0618 0619 0628 0650 0586 0630 0667 0671 0578 0579 0525
2003	Cadillac	Incomplete	Rear integration module				√		
2003	Cadillac	Incomplete	Vehicle theft deterrent		√	√			0691 0692
2003	Cadillac	Incomplete	Dash integration module		√	√			0604 0605
2003	Cadillac	Incomplete	Remote function actuation		√	√		√	
2003	Cadillac	Incomplete	Driver door module	√	√	√	√	√	
2003	Cadillac	Incomplete	Driver door switch	√	√	√	√		
2003	Cadillac	Incomplete	Passenger door module	√	√	√	√	√	0664 0618 0619 0628 0650 0586 0630 0667 0671 0578 0579 0525
2003	Cadillac	Incomplete	Rear climate control panel		√	√	√	√	
2003	Cadillac	Incomplete	Onstar	√	√	√	√	√	0647 0683
2003	Cadillac	Incomplete	Left mid door module	√	√	√	√	√	
2003	Cadillac	Incomplete	Left rear door module	√	√	√	√	√	
2003	Cadillac	Incomplete	Right mid door module	√	√	√	√	√	
2003	Cadillac	Incomplete	Right rear door module	√	√	√	√	√	
2003	Cadillac	Incomplete	DRP/ABS/TCS		√	√	√	√	
2003	Cadillac	Incomplete	Powertrain	√	√	√	√	√	0493
2002	Cadillac	Deville	Powertrain	√	√	√	√	√	
2002	Cadillac	Deville	Dash integration module		√	√	√	√	0614 0615 0619 0696 0586 0630 0667
2002	Cadillac	Deville	CD changer		√	√	√	√	0670 0670 0628 0651 0650 0673 0614 0672
2002	Cadillac	Deville	Instrument panel cluster				√		
2002	Cadillac	Deville	Amplifier (delco)		√	√	√	√	

2002	Cadillac	Deville	Memory seat module		√	√	√	√	
2002	Cadillac	Deville	Onstar	√	√	√	√	√	0647 0683
2002	Cadillac	Deville	Digital radio receiver	√	√	√	√		0664
2002	Cadillac	Deville	Remote function actuation		√	√		√	
2002	Cadillac	Deville	Vehicle theft deterrent		√	√			
2002	Cadillac	Deville	Driver door switch	√	√	√	√		
2002	Cadillac	Deville	Left rear door module	√	√	√	√	√	
2002	Cadillac	Deville	Right rear door module	√	√	√	√	√	
2002	Cadillac	Deville	Driver door module	√	√	√	√	√	
2002	Cadillac	Deville	Passenger door module	√	√	√	√		0685
2002	Cadillac	Deville	Tire pressure monitor		√	√	√		
2002	Cadillac	Deville	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2002	Cadillac	Deville	eed sensitive steering		√	√	√		
2002	Cadillac	Deville	Electronic suension control	√	√	√	√	√	
2002	Cadillac	DHS	Powertrain	√	√	√	√	√	
2002	Cadillac	DHS	Dash integration module		√	√	√	√	0614 0615 0619 0696 0586 0630 0667
2002	Cadillac	DHS	Amplifier (bose)		√	√	√	√	
2002	Cadillac	DHS	CD changer		√	√	√	√	0670 0670 0628 0651 0650 0673 0614 0672
2002	Cadillac	DHS	Instrument panel cluster	√	√	√	√		0608 0658
2002	Cadillac	DHS	Memory seat module		√	√	√	√	
2002	Cadillac	DHS	Onstar	√	√	√	√	√	0647 0683
2002	Cadillac	DHS	Digital radio receiver	√	√	√	√		0664
2002	Cadillac	DHS	Remote function actuation		√	√		√	
2002	Cadillac	DHS	Vehicle theft deterrent		√	√			
2002	Cadillac	DHS	Driver door switch	√	√	√	√		
2002	Cadillac	DHS	Left rear door module	√	√	√	√	√	
2002	Cadillac	DHS	Right rear door module	√	√	√	√	√	
2002	Cadillac	DHS	Driver door module	√	√	√	√	√	
2002	Cadillac	DHS	Passenger door module	√	√	√	√		0685
2002	Cadillac	DHS	Tire pressure monitor		√	√	√		
2002	Cadillac	DHS	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2002	Cadillac	DHS	eed sensitive steering		√	√	√		
2002	Cadillac	DHS	Electronic suension control	√	√	√	√	√	
2002	Cadillac	DTS	Powertrain	√	√	√	√	√	
2002	Cadillac	DTS	Dash integration module		√	√	√	√	0614 0615 0619 0696 0586 0630 0667
2002	Cadillac	DTS	Amplifier (bose)		√	√	√	√	
2002	Cadillac	DTS	CD changer		√	√	√	√	0670 0670 0628 0651 0650 0673 0614 0672
2002	Cadillac	DTS	Instrument panel cluster	√	√	√	√		0608 0658

2002	Cadillac	DTS	Memory seat module		√	√	√	√	0674
2002	Cadillac	DTS	Onstar	√	√	√	√	√	0647 0683
2002	Cadillac	DTS	Digital radio receiver	√	√	√	√		0664
2002	Cadillac	DTS	Remote function actuation		√	√		√	
2002	Cadillac	DTS	Vehicle theft deterrent		√	√			
2002	Cadillac	DTS	Driver door switch	√	√	√	√		
2002	Cadillac	DTS	Left rear door module	√	√	√	√	√	
2002	Cadillac	DTS	Right rear door module	√	√	√	√	√	
2002	Cadillac	DTS	Driver door module	√	√	√	√	√	
2002	Cadillac	DTS	Passenger door module	√	√	√	√		0685
2002	Cadillac	DTS	Tire pressure monitor		√	√	√		
2002	Cadillac	DTS	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2002	Cadillac	DTS	eed sensitive steering		√	√	√		
2002	Cadillac	DTS	Electronic suension control	√	√	√	√	√	
2002	Cadillac	Eldorado	Powertrain	√	√	√	√	√	
2002	Cadillac	Eldorado	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682 0525
2002	Cadillac	Eldorado	Radio		√	√	√	√	0702
2002	Cadillac	Eldorado	Onstar	√	√	√	√		0647 0683
2002	Cadillac	Eldorado	Remote function actuation		√	√		√	
2002	Cadillac	Eldorado	Supplemental inflatable restraint		√	√			
2002	Cadillac	Eldorado	Delco/Xtool ABS/TCS		√	√		√	0641 0506
2002	Cadillac	Eldorado	Magna steer		√	√			
2002	Cadillac	Seville	Powertrain	√	√	√	√	√	
2002	Cadillac	Seville	Amplifier (bose)		√	√	√	√	0614 0615 0617 0686 0687 0685 0586
2002	Cadillac	Seville	CD changer		√	√	√	√	0670 0670 0628 0651 0650 0673 0614 0672
2002	Cadillac	Seville	Amplifier (delco)		√	√	√	√	
2002	Cadillac	Seville	Instrument panel cluster	√	√	√	√		0608 0658
2002	Cadillac	Seville	Memory seat module		√	√	√	√	0674
2002	Cadillac	Seville	Onstar	√	√	√	√	√	0647 0683
2002	Cadillac	Seville	Digital radio receiver	√	√	√	√		
2002	Cadillac	Seville	Dash integration module						0664
2002	Cadillac	Seville	Remote function actuation		√	√	√	√	0604 0605
2002	Cadillac	Seville	Vehicle theft deterrent	√	√	√	√	√	0614 0615 0617 0686 0687 0685 0586
2002	Cadillac	Seville	Tire pressure monitor		√	√	√		
2002	Cadillac	Seville	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2002	Cadillac	Seville	eed sensitive steering		√	√	√		
2002	Cadillac	Seville	Electronic suension control	√	√	√	√	√	
2002	Cadillac	Escalade - 2WD	Powertrain	√	√	√	√	√	

2002	Cadillac	Escalade - 2WD	Body Control Module	√	√	√	√	√	0523
2002	Cadillac	Escalade - 2WD	Memory mirror module		√	√	√	√	
2002	Cadillac	Escalade - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2002	Cadillac	Escalade - 2WD	Onstar	√	√	√	√	√	0647 0683
2002	Cadillac	Escalade - 2WD	RTD (autoride) / EVO		√	√	√	√	
2002	Cadillac	Escalade - 2WD	4WAL 3 sensor		√	√	√	√	0648
2002	Cadillac	Escalade - 2WD	VSES (if equipped)		√	√	√	√	0648
2002	Cadillac	Escalade - AWD	Powertrain	√	√	√	√	√	
2002	Cadillac	Escalade - AWD	Body Control Module	√	√	√	√	√	0523
2002	Cadillac	Escalade - AWD	Memory mirror module		√	√	√	√	
2002	Cadillac	Escalade - AWD	Supplemental inflatable restraint		√	√	√	√	0531
2002	Cadillac	Escalade - AWD	Onstar	√	√	√	√	√	0647 0683
2002	Cadillac	Escalade - AWD	RTD (autoride) / EVO		√	√	√	√	
2002	Cadillac	Escalade - AWD	4WAL 3 sensor		√	√	√	√	0648
2002	Cadillac	Escalade - AWD	VSES (if equipped)		√	√	√	√	0648
2002	Cadillac	Escalade EXT	Powertrain	√	√	√	√	√	
2002	Cadillac	Escalade EXT	Body Control Module	√	√	√	√	√	0523
2002	Cadillac	Escalade EXT	Memory mirror module		√	√	√	√	
2002	Cadillac	Escalade EXT	Supplemental inflatable restraint		√	√	√	√	0531
2002	Cadillac	Escalade EXT	Onstar	√	√	√	√	√	0647 0683
2002	Cadillac	Escalade EXT	RTD (autoride) / EVO		√	√	√	√	
2002	Cadillac	Escalade EXT	4WAL 3 sensor		√	√	√	√	0648
2002	Cadillac	Escalade EXT	VSES (if equipped)		√	√	√	√	0648
2002	Cadillac	Incomplete	Powertrain	√	√	√	√	√	0493
2002	Cadillac	Incomplete	Amplifier (delco)		√	√	√	√	0664 0618 0619 0628 0650 0586 0630 0667 0671 0578 0579 0525
2002	Cadillac	Incomplete	Rear integration module				√		
2002	Cadillac	Incomplete	Remote function actuation		√	√		√	
2002	Cadillac	Incomplete	Dash integration module		√	√			0604 0605
2002	Cadillac	Incomplete	Vehicle theft deterrent		√	√			0691
2002	Cadillac	Incomplete	Driver door module	√	√	√	√	√	
2002	Cadillac	Incomplete	Driver door switch	√	√	√	√	√	
2002	Cadillac	Incomplete	Passenger door module	√	√	√	√	√	0664 0618 0619 0628 0650 0586 0630 0667 0671 0578 0579 0525
2002	Cadillac	Incomplete	Rear climate control panel		√	√	√	√	
2002	Cadillac	Incomplete	Onstar	√	√	√	√	√	0647 0683
2002	Cadillac	Incomplete	Left mid door module	√	√	√	√	√	
2002	Cadillac	Incomplete	Left rear door module	√	√	√	√	√	
2002	Cadillac	Incomplete	Right mid door module	√	√	√	√	√	
2002	Cadillac	Incomplete	Right rear door module	√	√	√	√	√	

2002	Cadillac	Incomplete	DRP/ABS/TCS		√	√	√	√	
2001	Cadillac	Catera	Powertrain	√	√	√	√	√	
2001	Cadillac	Catera	Body Control Module		√	√	√	√	0711 0628
2001	Cadillac	Catera	Radio		√	√	√	√	0671 0578 0579 0525
2001	Cadillac	Catera	Cellular telephone						0684
2001	Cadillac	Catera	Onstar	√	√	√	√		0683
2001	Cadillac	Catera	ABS		√	√	√	√	
2001	Cadillac	Deville	Powertrain	√	√	√	√	√	
2001	Cadillac	Deville	Dash integration module		√	√	√	√	0614 0664 0615 0619 0696 0712 0586 0630
2001	Cadillac	Deville	Cellular telephone		√	√	√	√	0628 0651 0650 0673 0614 0672
2001	Cadillac	Deville	Instrument panel cluster				√		
2001	Cadillac	Deville	Amplifier (delco)		√	√	√	√	
2001	Cadillac	Deville	Memory seat module		√	√	√	√	
2001	Cadillac	Deville	Onstar	√	√	√	√		0683
2001	Cadillac	Deville	Vehicle theft deterrent		√	√			
2001	Cadillac	Deville	Remote function actuation		√	√		√	0685
2001	Cadillac	Deville	Left rear door module	√	√	√	√	√	
2001	Cadillac	Deville	Right rear door module	√	√	√	√	√	
2001	Cadillac	Deville	Driver door switch	√	√	√	√		
2001	Cadillac	Deville	Driver door module	√	√	√	√	√	
2001	Cadillac	Deville	Passenger door module	√	√	√	√		0604 0605
2001	Cadillac	Deville	Tire pressure monitor		√	√	√		
2001	Cadillac	Deville	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2001	Cadillac	Deville	eed sensitive steering		√	√	√		
2001	Cadillac	Deville	CVRSS/ALC		√	√	√	√	
2001	Cadillac	DHS	Powertrain	√	√	√	√	√	
2001	Cadillac	DHS	Dash integration module		√	√	√	√	0614 0664 0615 0619 0696 0712 0586 0630
2001	Cadillac	DHS	Amplifier (bose)		√	√	√	√	0713
2001	Cadillac	DHS	Cellular telephone		√	√	√	√	0628 0651 0650 0673 0614 0672
2001	Cadillac	DHS	Instrument panel cluster		√	√	√	√	0608 0578 0579 0658
2001	Cadillac	DHS	Memory seat module		√	√	√	√	
2001	Cadillac	DHS	Onstar	√	√	√	√		0683
2001	Cadillac	DHS	Vehicle theft deterrent		√	√			
2001	Cadillac	DHS	Remote function actuation		√	√		√	0685
2001	Cadillac	DHS	Left rear door module	√	√	√	√	√	
2001	Cadillac	DHS	Right rear door module	√	√	√	√	√	
2001	Cadillac	DHS	Driver door switch	√	√	√	√		
2001	Cadillac	DHS	Driver door module	√	√	√	√	√	

2001	Cadillac	DHS	Passenger door module	√	√	√	√		0604 0605
2001	Cadillac	DHS	Tire pressure monitor		√	√	√		
2001	Cadillac	DHS	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2001	Cadillac	DHS	eed sensitive steering		√	√	√		
2001	Cadillac	DHS	CVRSS/ALC		√	√	√	√	
2001	Cadillac	DTS	Powertrain	√	√	√	√	√	
2001	Cadillac	DTS	Dash integration module		√	√	√	√	0614 0664 0615 0619 0696 0712 0586 0630
2001	Cadillac	DTS	Amplifier (bose)		√	√	√	√	0713
2001	Cadillac	DTS	Cellular telephone		√	√	√	√	0628 0651 0650 0673 0614 0672
2001	Cadillac	DTS	Instrument panel cluster		√	√	√	√	0608 0578 0579 0658
2001	Cadillac	DTS	Memory seat module		√	√	√	√	0674
2001	Cadillac	DTS	Onstar	√	√	√	√		0683
2001	Cadillac	DTS	Vehicle theft deterrent		√	√			
2001	Cadillac	DTS	Remote function actuation		√	√		√	0685
2001	Cadillac	DTS	Left rear door module	√	√	√	√	√	
2001	Cadillac	DTS	Right rear door module	√	√	√	√	√	
2001	Cadillac	DTS	Driver door switch	√	√	√	√		
2001	Cadillac	DTS	Driver door module	√	√	√	√	√	
2001	Cadillac	DTS	Passenger door module	√	√	√	√		0604 0605
2001	Cadillac	DTS	Tire pressure monitor		√	√	√		
2001	Cadillac	DTS	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2001	Cadillac	DTS	eed sensitive steering		√	√	√		
2001	Cadillac	DTS	CVRSS/ALC		√	√	√	√	
2001	Cadillac	Eldorado	Powertrain	√	√	√	√	√	
2001	Cadillac	Eldorado	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
2001	Cadillac	Eldorado	Radio		√	√	√	√	0702 0525
2001	Cadillac	Eldorado	Onstar	√	√	√	√		0683
2001	Cadillac	Eldorado	Remote function actuation		√	√		√	
2001	Cadillac	Eldorado	Supplemental inflatable restraint		√	√			
2001	Cadillac	Eldorado	Delco/Xtool ABS/TCS		√	√		√	0641 0506
2001	Cadillac	Eldorado	Magna steer		√	√			
2001	Cadillac	Seville	Powertrain	√	√	√	√	√	
2001	Cadillac	Seville	Amplifier (bose)		√	√	√	√	0614 0664 0615 0617 0686 0687 0685 0712
2001	Cadillac	Seville	Cellular telephone		√	√	√	√	0628 0651 0650 0673 0614 0672
2001	Cadillac	Seville	Instrument panel cluster		√	√	√	√	0608 0578 0579 0658
2001	Cadillac	Seville	Amplifier (delco)		√	√	√	√	
2001	Cadillac	Seville	Memory seat module		√	√	√	√	0674

2001	Cadillac	Seville	Onstar	√	√	√	√		0683
2001	Cadillac	Seville	Vehicle theft deterrent		√	√			
2001	Cadillac	Seville	Remote function actuation		√	√		√	
2001	Cadillac	Seville	Dash integration module	√	√	√	√	√	0604 0605
2001	Cadillac	Seville	Tire pressure monitor		√	√	√		
2001	Cadillac	Seville	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2001	Cadillac	Seville	eed sensitive steering		√	√	√		
2001	Cadillac	Seville	CVRSS/ALC		√	√	√	√	
2001	Cadillac	Incomplete	Powertrain	√	√	√	√	√	0493
2001	Cadillac	Incomplete	Amplifier (delco)		√	√	√	√	0664 0618 0619 0628 0650 0586 0630 0667 0671 0578 0579 0525
2001	Cadillac	Incomplete	Rear integration module				√		
2001	Cadillac	Incomplete	Remote function actuation		√	√		√	
2001	Cadillac	Incomplete	Dash integration module		√	√			0604 0605
2001	Cadillac	Incomplete	Vehicle theft deterrent		√	√			0691
2001	Cadillac	Incomplete	Driver door module	√	√	√	√	√	
2001	Cadillac	Incomplete	Driver door switch	√	√	√	√		
2001	Cadillac	Incomplete	Passenger door module	√	√	√	√	√	0664 0618 0619 0628 0650 0586 0630 0667 0671 0578 0579 0525
2001	Cadillac	Incomplete	Rear climate control panel		√	√	√	√	
2001	Cadillac	Incomplete	Onstar	√	√	√	√	√	0683
2001	Cadillac	Incomplete	Left mid door module	√	√	√	√	√	
2001	Cadillac	Incomplete	Left rear door module	√	√	√	√	√	
2001	Cadillac	Incomplete	Right mid door module	√	√	√	√	√	
2001	Cadillac	Incomplete	Right rear door module	√	√	√	√	√	
2001	Cadillac	Incomplete	DRP/ABS/TCS		√	√	√	√	
2000	Cadillac	Catera	Powertrain	√	√	√	√	√	
2000	Cadillac	Catera	Body Control Module		√	√	√	√	0711 0628
2000	Cadillac	Catera	Radio		√	√	√	√	0671 0578 0579 0525
2000	Cadillac	Catera	Cellular telephone						0684
2000	Cadillac	Catera	Onstar	√	√	√	√		0683
2000	Cadillac	Catera	ABS		√	√	√	√	
2000	Cadillac	Deville	Powertrain	√	√	√	√	√	
2000	Cadillac	Deville	Dash integration module		√	√	√	√	0614 0664 0615 0619 0696 0712 0586 0630
2000	Cadillac	Deville	Cellular telephone		√	√	√	√	0628 0651 0650 0614 0671 0578 0579 0525
2000	Cadillac	Deville	Instrument panel cluster				√		
2000	Cadillac	Deville	Memory seat module		√	√	√	√	
2000	Cadillac	Deville	Amplifier (delco)		√	√	√	√	0618

2000	Cadillac	Deville	Onstar	√	√	√	√		0683
2000	Cadillac	Deville	Left rear door module	√	√	√	√	√	
2000	Cadillac	Deville	Passenger door module	√	√	√	√	√	
2000	Cadillac	Deville	Right rear door module	√	√	√	√	√	
2000	Cadillac	Deville	Driver door module	√	√	√	√	√	
2000	Cadillac	Deville	Driver door switch	√	√	√	√		
2000	Cadillac	Deville	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2000	Cadillac	Deville	eed sensitive steering		√	√	√		
2000	Cadillac	Deville	CVRSS/ALC		√	√	√	√	
2000	Cadillac	DHS	Powertrain	√	√	√	√	√	
2000	Cadillac	DHS	Dash integration module		√	√	√	√	0614 0664 0615 0619 0696 0712 0586 0630
2000	Cadillac	DHS	Amplifier (bose)		√	√	√	√	0713
2000	Cadillac	DHS	Cellular telephone		√	√	√	√	0628 0651 0650 0614 0671 0578 0579 0525
2000	Cadillac	DHS	Instrument panel cluster		√	√	√	√	0608 0578 0579 0658
2000	Cadillac	DHS	Memory seat module		√	√	√	√	0618
2000	Cadillac	DHS	Onstar	√	√	√	√		0683
2000	Cadillac	DHS	Left rear door module	√	√	√	√	√	
2000	Cadillac	DHS	Passenger door module	√	√	√	√	√	
2000	Cadillac	DHS	Right rear door module	√	√	√	√	√	
2000	Cadillac	DHS	Driver door module	√	√	√	√	√	
2000	Cadillac	DHS	Driver door switch	√	√	√	√		
2000	Cadillac	DHS	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2000	Cadillac	DHS	eed sensitive steering		√	√	√		
2000	Cadillac	DHS	CVRSS/ALC		√	√	√	√	
2000	Cadillac	DTS	Powertrain	√	√	√	√	√	
2000	Cadillac	DTS	Dash integration module		√	√	√	√	0614 0664 0615 0619 0696 0712 0586 0630
2000	Cadillac	DTS	Amplifier (bose)		√	√	√	√	0713
2000	Cadillac	DTS	Cellular telephone		√	√	√	√	0628 0651 0650 0614 0671 0578 0579 0525
2000	Cadillac	DTS	Instrument panel cluster		√	√	√	√	0608 0578 0579 0658
2000	Cadillac	DTS	Memory seat module		√	√	√	√	0618
2000	Cadillac	DTS	Onstar	√	√	√	√		0683
2000	Cadillac	DTS	Left rear door module	√	√	√	√	√	
2000	Cadillac	DTS	Passenger door module	√	√	√	√	√	
2000	Cadillac	DTS	Right rear door module	√	√	√	√	√	
2000	Cadillac	DTS	Driver door module	√	√	√	√	√	
2000	Cadillac	DTS	Driver door switch	√	√	√	√		
2000	Cadillac	DTS	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2000	Cadillac	DTS	eed sensitive steering		√	√	√		

2000	Cadillac	DTS	CVRSS/ALC		√	√	√	√	
2000	Cadillac	Eldorado	Powertrain	√	√	√	√	√	
2000	Cadillac	Eldorado	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
2000	Cadillac	Eldorado	Radio		√	√	√	√	0702 0525
2000	Cadillac	Eldorado	Onstar	√	√	√	√		0683
2000	Cadillac	Eldorado	Delco/Xtool ABS/TCS		√	√		√	0641 0506
2000	Cadillac	Eldorado	Magna steer		√	√			
2000	Cadillac	Seville	Powertrain	√	√	√	√	√	
2000	Cadillac	Seville	Amplifier (bose)		√	√	√	√	0614 0664 0615 0617 0686 0687 0685 0712
2000	Cadillac	Seville	Cellular telephone		√	√	√	√	0628 0651 0650 0614 0671 0578 0579 0525
2000	Cadillac	Seville	Instrument panel cluster		√	√	√	√	0608 0578 0579 0658
2000	Cadillac	Seville	Amplifier (delco)		√	√	√	√	
2000	Cadillac	Seville	Memory seat module		√	√	√	√	0674
2000	Cadillac	Seville	Onstar	√	√	√	√		0683
2000	Cadillac	Seville	Dash integration module	√	√	√	√	√	0604 0605
2000	Cadillac	Seville	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2000	Cadillac	Seville	eed sensitive steering		√	√	√		
2000	Cadillac	Seville	CVRSS/ALC		√	√	√	√	
2000	Cadillac	Escalade - AWD	Powertrain	√	√	√	√	√	
2000	Cadillac	Escalade - AWD	Passlock		√	√	√	√	
2000	Cadillac	Escalade - AWD	Memory seat module		√	√			
2000	Cadillac	Escalade - AWD	Onstar (VS-3B)		√	√	√		
2000	Cadillac	Escalade - AWD	Onstar		√	√	√		0683
2000	Cadillac	Escalade - AWD	Supplemental inflatable restraint		√	√	√	√	0531
2000	Cadillac	Escalade - AWD	RTD (autoride) / EVO		√	√	√	√	
2000	Cadillac	Escalade - AWD	4WAL 3 sensor		√	√	√	√	
2000	Cadillac	Hearse	Powertrain	√	√	√	√	√	0493
2000	Cadillac	Hearse	Amplifier (delco)		√	√	√	√	0664 0618 0619 0604 0628 0650 0586 0630 0667 0671 0578 0579 0525 0605 0691 0692
2000	Cadillac	Hearse	Rear integration module				√		
2000	Cadillac	Hearse	Driver door module	√	√	√	√	√	
2000	Cadillac	Hearse	Passenger door module	√	√	√	√		
2000	Cadillac	Hearse	Driver door switch	√	√	√	√		
2000	Cadillac	Hearse	DRP/ABS/TCS		√	√	√	√	
2000	Cadillac	Limousine	Powertrain	√	√	√	√	√	0493

2000	Cadillac	Limousine	Amplifier (delco)		√	√	√	√	0664 0618 0619 0604 0628 0650 0586 0630 0667 0671 0578 0579 0525 0605 0691 0692
2000	Cadillac	Limousine	Rear climate control panel		√	√	√	√	
2000	Cadillac	Limousine	Onstar	√	√	√	√		0683
2000	Cadillac	Limousine	Driver door module	√	√	√	√	√	
2000	Cadillac	Limousine	Passenger door module	√	√	√	√		
2000	Cadillac	Limousine	Driver door switch	√	√	√	√		
2000	Cadillac	Limousine	Left mid door module	√	√	√	√	√	
2000	Cadillac	Limousine	Left rear door module	√	√	√	√	√	
2000	Cadillac	Limousine	Right mid door module	√	√	√	√	√	
2000	Cadillac	Limousine	Right rear door module	√	√	√	√	√	
2000	Cadillac	Limousine	DRP/ABS/TCS		√	√	√	√	
1999	Cadillac	Catera	Powertrain	√	√	√	√	√	0723
1999	Cadillac	Catera	Remote function actuator		√	√	√		
1999	Cadillac	Catera	Body Control Module				√		0628
1999	Cadillac	Catera	BCM/RFA		√	√		√	0711
1999	Cadillac	Catera	Radio		√	√	√	√	0671 0525
1999	Cadillac	Catera	Onstar (VS-3B)		√	√	√		
1999	Cadillac	Catera	Cellular telephone		√	√	√		0684
1999	Cadillac	Catera	Onstar		√	√	√	√	0683
1999	Cadillac	Catera	ABS		√	√	√	√	
1999	Cadillac	Deville	Powertrain	√	√	√	√	√	0723
1999	Cadillac	Deville	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1999	Cadillac	Deville	Radio		√	√	√	√	0702 0525
1999	Cadillac	Deville	Onstar		√	√	√		0683
1999	Cadillac	Deville	Onstar (VS-3B)		√	√	√		
1999	Cadillac	Deville	Cellular telephone		√	√	√	√	0697 0698 0699 0700 0701 0682
1999	Cadillac	Deville	Delco/Xtool ABS/TCS		√	√		√	0641 0506
1999	Cadillac	Deville	Magna steer		√	√			
1999	Cadillac	Deville	ABS/TCS BLW ICCS2		√	√		√	0641 0506
1999	Cadillac	Eldorado	Powertrain	√	√	√	√	√	0723
1999	Cadillac	Eldorado	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1999	Cadillac	Eldorado	Radio		√	√	√	√	0702 0525
1999	Cadillac	Eldorado	Onstar		√	√	√		0683
1999	Cadillac	Eldorado	Onstar (VS-3B)		√	√	√		
1999	Cadillac	Eldorado	Delco/Xtool ABS/TCS		√	√		√	0641 0506
1999	Cadillac	Eldorado	Magna steer		√	√			

1999	Cadillac	Seville	Powertrain	√	√	√	√	√	0723
1999	Cadillac	Seville	Cellular telephone		√	√	√		
1999	Cadillac	Seville	Amplifier (bose)		√	√	√	√	0614 0664 0615 0617 0686 0687 0604 0685 0628 0651 0725 0586 0671 0671 0587 0525
1999	Cadillac	Seville	Memory seat module		√	√	√	√	
1999	Cadillac	Seville	Remote function actuation		√	√	√		0727
1999	Cadillac	Seville	Onstar		√	√	√		0683
1999	Cadillac	Seville	Onstar (VS-3B)		√	√	√	√	0614 0664 0615 0617 0686 0687 0604 0685 0628 0651 0725 0586 0671 0671 0587 0525
1999	Cadillac	Seville	ABS/TCS BLW ICCS2		√	√		√	0641 0506
1999	Cadillac	Escalade - AWD	Powertrain	√	√	√	√	√	
1999	Cadillac	Escalade - AWD	Passlock		√	√	√	√	
1999	Cadillac	Escalade - AWD	Onstar		√	√	√		0683
1999	Cadillac	Escalade - AWD	Onstar (VS-3B)		√	√	√	√	0683
1999	Cadillac	Escalade - AWD	Electronic variable orifice		√	√	√		
1999	Cadillac	Escalade - AWD	4WAL 3 sensor		√	√	√	√	
1999	Cadillac	Hearse	Powertrain	√	√	√	√	√	0493
1999	Cadillac	Hearse	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1999	Cadillac	Hearse	Radio						0702
1999	Cadillac	Hearse	Delco/Xtool ABS/TCS		√	√		√	0641 0506
1999	Cadillac	Limousine	Powertrain	√	√	√	√	√	0493
1999	Cadillac	Limousine	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1999	Cadillac	Limousine	Radio						0702
1999	Cadillac	Limousine	Delco/Xtool ABS/TCS		√	√		√	0641 0506
1998	Cadillac	Catera	Powertrain	√	√	√	√	√	
1998	Cadillac	Catera	Remote function actuator		√	√	√		
1998	Cadillac	Catera	Body Control Module		√	√	√	√	0711 0628
1998	Cadillac	Catera	Radio		√	√	√	√	0525
1998	Cadillac	Catera	Immobilizer					√	
1998	Cadillac	Catera	Cellular telephone		√	√	√		0684
1998	Cadillac	Catera	Onstar		√	√	√		0683
1998	Cadillac	Catera	ABS		√	√	√	√	
1998	Cadillac	Deville	Powertrain	√	√	√	√	√	0724 0723
1998	Cadillac	Deville	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1998	Cadillac	Deville	Radio		√	√	√	√	0702 0525

1998	Cadillac	Deville	Onstar		√	√	√		0683
1998	Cadillac	Deville	Cellular telephone		√	√	√	√	0697 0698 0699 0700 0701 0682
1998	Cadillac	Deville	ABS/TCS BLW ICCS2		√	√		√	0641 0506
1998	Cadillac	Eldorado	Powertrain	√	√	√	√	√	0724 0723
1998	Cadillac	Eldorado	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1998	Cadillac	Eldorado	Radio		√	√	√	√	0702 0525
1998	Cadillac	Eldorado	Onstar		√	√	√		0683
1998	Cadillac	Seville	Powertrain	√	√	√	√	√	0723
1998	Cadillac	Seville	Cellular telephone		√	√			
1998	Cadillac	Seville	Amplifier (bose)		√	√	√	√	0614 0664 0615 0617 0686 0687 0604 0685 0628 0651 0725 0586 0671 0671 0587 0525
1998	Cadillac	Seville	Memory seat module		√	√	√	√	
1998	Cadillac	Seville	Remote function actuation		√	√	√		0727
1998	Cadillac	Seville	Onstar		√	√	√	√	0683
1998	Cadillac	Seville	ABS/TCS BLW ICCS2		√	√		√	0641 0506
1998	Cadillac	Hearse	Powertrain	√	√	√	√	√	0493
1998	Cadillac	Hearse	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1998	Cadillac	Hearse	Radio						0702
1998	Cadillac	Hearse	Delco/Xtool ABS/TCS		√	√		√	0641 0506
1998	Cadillac	Limousine	Powertrain	√	√	√	√	√	0493
1998	Cadillac	Limousine	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1998	Cadillac	Limousine	Radio						0702
1998	Cadillac	Limousine	Delco/Xtool ABS/TCS		√	√		√	0641 0506
1997	Cadillac	Concours	Powertrain	√	√	√	√	√	0723
1997	Cadillac	Concours	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1997	Cadillac	Concours	Radio				√		
1997	Cadillac	Concours	Cellular telephone		√	√	√	√	0702
1997	Cadillac	Concours	Magna steer		√	√			
1997	Cadillac	Concours	ABS		√	√		√	0641 0506
1997	Cadillac	Deville	Powertrain	√	√	√	√	√	0723
1997	Cadillac	Deville	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1997	Cadillac	Deville	Radio				√		
1997	Cadillac	Deville	Cellular telephone		√	√	√	√	0702
1997	Cadillac	Deville	Magna steer		√	√			

1997	Cadillac	Deville	ABS		√	√		√	0641 0506
1997	Cadillac	Eldorado	Powertrain	√	√	√	√	√	0723
1997	Cadillac	Eldorado	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1997	Cadillac	Eldorado	Radio				√		
1997	Cadillac	Eldorado	Cellular telephone		√	√	√	√	0702
1997	Cadillac	Eldorado	Magna steer		√	√			
1997	Cadillac	Eldorado	ABS		√	√		√	0641 0506
1997	Cadillac	Seville	Powertrain	√	√	√	√	√	0723
1997	Cadillac	Seville	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1997	Cadillac	Seville	Radio				√		
1997	Cadillac	Seville	Cellular telephone		√	√	√	√	0702
1997	Cadillac	Seville	Magna steer		√	√			
1997	Cadillac	Seville	ABS		√	√		√	0641 0506
1997	Cadillac	Hearse	Powertrain	√	√	√	√	√	0493
1997	Cadillac	Hearse	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682 0702
1997	Cadillac	Hearse	Radio				√	√	
1997	Cadillac	Hearse	Delco/Xtool ABS/TCS		√	√		√	0641 0506
1997	Cadillac	Limousine	Powertrain	√	√	√	√	√	0493
1997	Cadillac	Limousine	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682 0702
1997	Cadillac	Limousine	Radio				√	√	
1997	Cadillac	Limousine	Delco/Xtool ABS/TCS		√	√		√	0641 0506
1996	Cadillac	Concours	Powertrain	√	√	√	√	√	0724
1996	Cadillac	Concours	Body Control Module		√	√	√	√	0698 0701
1996	Cadillac	Concours	Radio		√	√	√	√	0698 0701
1996	Cadillac	Concours	CVRSS/ALC		√	√	√	√	
1996	Cadillac	Deville	Powertrain	√	√	√	√	√	0724
1996	Cadillac	Deville	Body Control Module		√	√	√	√	0698 0701
1996	Cadillac	Deville	Radio		√	√	√	√	0698 0701
1996	Cadillac	Deville	CVRSS/ALC		√	√	√	√	
1996	Cadillac	Eldorado	Powertrain	√	√	√	√	√	0724
1996	Cadillac	Eldorado	Body Control Module		√	√	√	√	0698 0701
1996	Cadillac	Eldorado	Radio		√	√	√	√	0698 0701
1996	Cadillac	Eldorado	CVRSS/ALC		√	√	√	√	
1996	Cadillac	Fleetwood	Powertrain	√	√	√	√	√	
1996	Cadillac	Seville	Powertrain	√	√	√	√	√	0724
1996	Cadillac	Seville	Body Control Module		√	√	√	√	0698 0701
1996	Cadillac	Seville	Radio		√	√	√	√	0698 0701

1996	Cadillac	Seville	CVRSS/ALC		√	√	√	√	
------	----------	---------	-----------	--	---	---	---	---	--

XTOOL

Special Functions List

No.	Functions Name
SP0000	1-2 Shift Adapt Data
SP0001	14V Power Module
SP0002	ABS Motor
SP0003	AWD Disabled-by-Malfunction Counter Reset
SP0004	B237D Easy Entry Seat Position Sensor - Driver Learn
SP0005	B237P Easy Entry Seat Position Sensor - Passenger Learn
SP0006	HO2S Heater Resistance Learned Values Reset
SP0007	HVAC Actuators Learn
SP0008	MOST Bus Diagnostic Starting Point
SP0009	PTO Operation Mode
SP0010	WLAN Service Set Identifier (SSID) Reset
SP0011	WLAN Password Reset
SP0012	Backup Battery Test
SP0013	Backup Park Lock Actuator Disarming
SP0014	Transmission Range Control Module Range Motor Position Learn
SP0015	Transmission Learn Data
SP0016	Transmission Adaptive Pressure Reset
SP0017	Transmission Service Fast Learn
SP0018	Transmission Adaptive Torque Reset
SP0019	Transmission Adaptive Values Learn
SP0020	Gear Selector -N- Position Learn
SP0021	Transmission Solenoid Valves Calibration Preset
SP0022	Shift Transmission Gear
SP0023	Transmission Clutch 1 Return Spring Learn
SP0024	Transmission Clutch 1 Volume Learn
SP0025	Transmission Clutch 2 Return Spring Learn
SP0026	Transmission Clutch 2 Volume Learn
SP0027	Transmission Clutch 3 Return Spring Learn

SP0028	Transmission Clutch 3 Volume Learn
SP0029	Transmission Clutch 4 Return Spring Learn
SP0030	Transmission Clutch 4 Volume Learn
SP0031	Transmission Clutch 5 Return Spring Learn
SP0032	Transmission Clutch 5 Volume Learn
SP0033	Transmission Clutch Learn Status
SP0034	Transmission Adaptive Pressure Reset
SP0035	Transmission Learn
SP0036	Transmission Oil Life Reset
SP0037	Range Actuator Learn
SP0038	Manual Door Locks (-AU3)(-AU4) Without Seat Belt Pretensioner (-A70)
SP0039	Electric Door Locks (AU3) Without Seat Belt Pretensioner (-A70)
SP0040	Automatic Electric Door Locks (AU4) Without Seat Belt Pretensioner (-A70)
SP0041	Retained Accessory Power
SP0042	DPF/Catalyst 2 Reset
SP0043	DPF Service Regeneration
SP0044	DPF Pressure Sensor Reset
SP0045	DPF Reset
SP0046	Lane Departure Warning Indicator
SP0047	Distance Sensing Cruise Control Module
SP0048	Vehicle Health Data Upload
SP0049	Vehicle Direction Camera Learn
SP0050	Vehicle Inclination Sensor
SP0051	VIN Digits 10-17 Right Headlamp High Beam Control Module
SP0052	VIN Digits 10-17 Left Headlamp High Beam Control Module
SP0053	Vehicle Model
SP0054	Content Theft - Exterior Lamp Flash
SP0055	Content Theft - Horn Chirp / Door Key Cylinder Disarming
SP0056	Passenger Compartment Heater Coolant Control Solenoid Valve Learn
SP0057	Passenger Presence Sensor Learn
SP0058	Catalyst 1 Reset
SP0059	Catalyst Test

SP0060	Catalyst Reset
SP0061	BARO Sensor Reset
SP0062	Manual Door Locks (-AU3)(-AU4) With Seat Belt Pretensioner (A70)
SP0063	Electric Door Locks (AU3) With Seat Belt Pretensioner (A70)
SP0064	Automatic Electric Door Locks (AU4) With Seat Belt Pretensioner (A70)
SP0065	Code Index
SP0066	Idle Speed Adjustment
SP0067	Idle Learn
SP0068	Idle Air Control Reset
SP0069	Idle Speed Control Reset
SP0070	NOx Sensor 1 Reset
SP0071	NOx Sensor 2 Reset
SP0072	NOx Catalyst Reductant Loading Reset
SP0073	NOx Catalyst Reset
SP0074	NOx Adsorber Catalyst Data Reset
SP0075	NOx Adsorber Catalyst Reset
SP0076	Gear Position Sensor Learn
SP0077	Gear Selector -N- Position Learn
SP0078	Backup Park Lock Actuator Arming
SP0079	EV Range Reset
SP0080	Power Steering Softstops Learn
SP0081	Power Steering Softstops Reset
SP0082	Power Steering Pressure Sensor Learn
SP0083	Read LIN Bus Device ID Information
SP0084	Learned Values Reset
SP0085	Engine Oil Type Setup
SP0086	Engine Oil Life Reset
SP0087	ECM Reset
SP0088	Engine Serial Number
SP0089	Steering Wheel Angle Sensor Centering
SP0090	Steering Wheel Angle Sensor Learn
SP0091	Steering Wheel Angle Sensor Learn

SP0092	Steering Wheel Angle Sensor Centering
SP0093	Steering Wheel Angle Sensor Reset
SP0094	Flywheel Learn
SP0095	Exhaust Flow Control Valve Learn
SP0096	Exhaust Gas Temperature Sensor Learn
SP0097	Exhaust Gas Temperature Sensor Reset
SP0098	EGR Valve Learn
SP0099	Transfer Case Clutch Identifier
SP0100	Transfer Case Clutch Overtemperature Counter Reset
SP0101	Assist Step Motor Learn
SP0102	Reset PTO Inhibit and Disengage History
SP0103	Power Steering Softstops Reset
SP0104	Steering Wheel Angle Sensor Reset
SP0105	Reset Functions
SP0106	Learned Values Reset
SP0107	Copy and Restore Tire Pressure Monitoring Information
SP0108	High Pressure Fuel Pump Learn
SP0109	High Pressure Fuel Correction Reset
SP0110	Personalization
SP0111	Yaw Rate Sensor Learn
SP0112	Yaw Rate Sensor Reset
SP0113	Rear Differential Clutch Service Calibration Setup
SP0114	Rear Suspension Position Sensor Trim Height
SP0115	Ambient Air Temperature Calculation Reset
SP0116	Ambient Air Temperature Instant Update
SP0117	Reductant Fluid Tank Level Reset
SP0118	Reductant Injector Reset
SP0119	Reductant System Data Reset
SP0120	Reductant System Reset
SP0121	Restore Factory Settings
SP0122	Hybrid/EV Battery Contactor Open Reasons Reset
SP0123	Hybrid/EV Battery Pack Charging Adaptive Learn Reset

SP0124	Hybrid/EV Battery Pack Coolant Control Solenoid Valve Learn
SP0125	Hybrid/EV Battery Pack Capacity Learn
SP0126	Hybrid/EV Battery Pack Capacity Reset
SP0127	Hybrid/EV Battery Pack Data Reset
SP0128	Calculated Fuel Economy Setup
SP0129	HVAC Afterblow Configuration
SP0130	HO2S Learn
SP0131	HO2S Learned Values Reset
SP0132	HO2S Heater Learn
SP0133	APP Learn
SP0134	Reset High Voltage Disable Request After Crash Event Detected
SP0135	Inspection/Maintenance Data
SP0136	Depressurize System
SP0137	Copy Injector Flow Identifiers from ECM to Glow Plug Control Module
SP0138	Copy Injector Flow Identifiers from Glow Plug Control Module to ECM
SP0139	Throttle Body Idle Air Flow Compensation Reset
SP0140	Throttle Position Learn
SP0141	Throttle Actuator Reset
SP0142	Panic Alarm
SP0143	Intake Air Flow Valve Learn
SP0144	Intake System Learned Values Reset
SP0145	Speedometer Calibration
SP0146	Liftgate Maximum Open Position Learn
SP0147	Neutral Position Sensor Learn
SP0148	A/C Compressor Speed
SP0149	A/C Indicator
SP0150	Control Module Reset
SP0151	Control Module Self-Test
SP0152	Control Module Self-Test
SP0153	Clutch Purge
SP0154	Excessive Clutch Slip Data Reset
SP0155	Clutch Control Module/Rear Drive System Matching Identification Setup

SP0156	Clutch Pedal Position Learn
SP0157	Clutch Position Learn
SP0158	Odometer Setup
SP0159	Tire Type/Pressure Selection
SP0160	Tire Pressure Sensors Learn
SP0161	Key Fob 1
SP0162	Key Fob 2
SP0163	Key Fob 3
SP0164	Key Fob 4
SP0165	Key Fob 5
SP0166	Key Fob 6
SP0167	Key Fob 7
SP0168	Key Fob 8
SP0169	Hands-Free Liftgate Sensor Control Module Calibration
SP0170	Module Setup
SP0171	Exhaust Aftertreatment Fuel Injector Reset
SP0172	Configure New Module
SP0173	Injector Flow Rate Programming
SP0174	Yaw Rate Sensor Reset
SP0175	Yaw Rate Sensor Learn
SP0176	Average Fuel Age Reset
SP0177	Enable Deployment Loops
SP0178	Cylinder 1 Injector Flow Identifier
SP0179	Cylinder 1 Fuel Injector Correction Value Reset
SP0180	Cylinder 2 Injector Flow Identifier
SP0181	Cylinder 2 Fuel Injector Correction Value Reset
SP0182	Cylinder 3 Injector Flow Identifier
SP0183	Cylinder 3 Fuel Injector Correction Value Reset
SP0184	Cylinder 4 Injector Flow Identifier
SP0185	Cylinder 4 Fuel Injector Correction Value Reset
SP0186	Cylinder 5 Injector Flow Identifier
SP0187	Cylinder 5 Fuel Injector Correction Value Reset

SP0188	Cylinder 6 Injector Flow Identifier
SP0189	Cylinder 6 Fuel Injector Correction Value Reset
SP0190	Cylinder 7 Injector Flow Identifier
SP0191	Cylinder 7 Fuel Injector Correction Value Reset
SP0192	Cylinder 8 Injector Flow Identifier
SP0193	Cylinder 8 Fuel Injector Correction Value Reset
SP0194	Cylinder Deactivation Exhaust Flow Control Valve Learn
SP0195	Headlamp Leveling Sensor Learn
SP0196	Frontview Camera Learn
SP0197	Frontview Camera Learn
SP0198	Front Suspension Position Sensor Trim Height
SP0199	Erase/Program All Key Fobs
SP0200	Clear Transmission Counters
SP0201	Clear Passenger Window Learned Values
SP0202	Clear Secured High Voltage DTCs
SP0203	Clear Driver Window Learned Values
SP0204	Erase All Key Fobs
SP0205	Clear Disable History Data
SP0206	Clear Right Rear Window Learned Values
SP0207	Clear Active Pull Compensation Learned Limits
SP0208	Clear Left Rear Window Learned Values
SP0209	Crankshaft Position Variation Learn
SP0210	Crankshaft Position Reluctor Ring Learn
SP0211	Cancel Camera Learn
SP0212	Fuel Pump Trim Reset
SP0213	Fuel Composition Reset
SP0214	Fuel Rail Pressure Relief Valve Learned Values Reset
SP0215	Fuel Rail Pressure Sensor Reset
SP0216	Fuel Rail Pressure Sensor or Fuel Rail Learn
SP0217	Fuel Trim Reset
SP0218	Fuel Economy Reset
SP0219	Fuel Filter Life Reset

SP0220	Fuel Injector Correction Value Preset
SP0221	Fuel Injection Small Quantity Data Reset
SP0222	Fuel Injection Small Quantity Learn
SP0223	Fuel Trim Reset
SP0224	Fuel Pressure Regulator Learn
SP0225	Brake Pressure Sensor Calibration
SP0226	Erase Valet Mode Code
SP0227	Manual Door Locks (-AU3) (-AU4)
SP0228	Manual Service Disconnect Fuse Life Reset
SP0229	Park Brake Calibration
SP0230	Data Display
SP0231	Digital Radio Receiver Control Module
SP0232	All Cylinders Fuel Injector Correction Value Reset
SP0233	Tire Pressure Sensor Signal Reset
SP0234	Tire Pressure Selection
SP0235	Add/Replace Key Fobs
SP0236	Stop/Start Capacitor State of Health Reset
SP0237	Turbocharger Learn
SP0238	Turbocharger Learned Values Reset
SP0239	Next Available Slot
SP0240	Display ECM and Glow Plug Control Module Injector Flow Identifiers
SP0241	Info Display/Infotainment Faceplate Reset
SP0242	Battery Sensor Module Learn
SP0243	Battery Sensor Module Learn
SP0244	Energy Storage Capacitor Learn
SP0245	Suspension Position Sensor Trim Height
SP0246	Option Configuration
SP0247	CAN Bus Configuration Learn
SP0248	Transmission Adaptive Values Learn
SP0249	VIN Learn
SP0250	Power Steering Softstops Learn
SP0251	Learn Functions

SP0252	Throttle Position Learn
SP0253	Inlet Solenoid Valves Learn
SP0254	Liftgate Maximum Open Position Learn
SP0255	CO Adjust
SP0256	Calculated Fuel Economy Setup
SP0257	Glow Plug Learn
SP0258	Remote Vehicle Start Disable History Reset
SP0259	Remote Vehicle Speed Limiting Reset
SP0260	Long Range Radar Sensor Module Learn
SP0261	Setup SDM Part Number in BCM
SP0262	DC Charging Disabled Reset
SP0263	Brake Pedal Position Sensor Learn
SP0264	Brake Hydraulics Sensors Learn
SP0265	MAF Sensor Learn
SP0266	Reset History Buffer
SP0267	Reset Teen Driver Key PIN
SP0268	Reset Event Records
SP0269	Reset Manufacturer Enable Counter
SP0270	Proactive Alerts
SP0271	Parking Assist Sensor Learn
SP0272	Park Brake Reset
SP0273	Steering Gear Learned Values Reset
SP0274	Steering Gear Replacement Procedure
SP0275	Assembly Plant Mode
SP0276	Automatic Braking Active Signal
SP0277	Adaptive Pressure Control Learn
SP0278	Longitudinal Acceleration Sensor Reset
SP0279	Assembly Plant Emission and Fuel Economy Test
SP0280	Brake Pedal Position Sensor Learn
SP0281	Headlamp Leveling Sensor Learn
SP0282	Erase/Program All Key Fobs
SP0283	Next Available Slot

SP0284	Key Fob 1
SP0285	Key Fob 2
SP0286	Key Fob 3
SP0287	Key Fob 4
SP0288	Key Fob 5
SP0289	Key Fob 6
SP0290	Key Fob 7
SP0291	Key Fob 8
SP0292	Battery Sensor Module Learn
SP0293	Clear Driver Window Learned Values
SP0294	Clear Passenger Window Learned Values
SP0295	Clear Left Rear Window Learned Values
SP0296	Clear Right Rear Window Learned Values
SP0297	Read LIN Bus Device ID Information
SP0298	Tire Pressure Sensors Learn
SP0299	Tire Pressure Sensor Signal Reset
SP0300	Tire Type/Pressure Selection
SP0301	CAN Bus Configuration Learn
SP0302	Transmission Service Fast Learn
SP0303	Configure New Module
SP0304	Fuel Trim Reset
SP0305	Crankshaft Position Variation Learn
SP0306	HO2S Heater Learn
SP0307	Idle Learn
SP0308	Engine Oil Life Reset
SP0309	Remote Vehicle Start Disable History Reset
SP0310	Adjustable Pedals Softstops Learn
SP0311	HVAC Actuators Learn
SP0312	HVAC Afterblow Configuration
SP0313	Brake Pressure Sensor Calibration
SP0314	Steering Wheel Angle Sensor Learn
SP0315	Yaw Rate Sensor Learn

SP0316	Park Brake Calibration
SP0317	Suspension Position Sensor Trim Height
SP0318	Remote Vehicle Speed Limiting Reset
SP0319	Vehicle Health Data Upload
SP0320	WLAN Password Reset
SP0321	WLAN Service Set Identifier (SSID) Reset
SP0322	Passenger Presence Sensor Learn
SP0323	Clutch Pedal Position Learn
SP0324	Neutral Position Sensor Learn
SP0325	Fuel Pump Trim Reset
SP0326	Steering Wheel Angle Sensor Centering
SP0327	Transmission Adaptive Pressure Reset
SP0328	Liftgate Maximum Open Position Learn
SP0329	Clear Disable History Data
SP0330	Frontview Camera Learn
SP0331	Ambient Air Temperature Instant Update
SP0332	Setup SDM Part Number in BCM
SP0333	Erase All Key Fobs
SP0334	Clutch Control Module/Rear Drive System Matching Identification Setup
SP0335	Digital Radio Receiver Control Module
SP0336	Gear Selector -N- Position Learn
SP0337	Fuel Composition Reset
SP0338	Stop/Start Capacitor State of Health Reset
SP0339	AWD Disabled-by-Malfunction Counter Reset
SP0340	Long Range Radar Sensor Module Learn
SP0341	Hands-Free Liftgate Sensor Control Module Calibration
SP0342	Erase Valet Mode Code
SP0343	Control Module Reset
SP0344	Info Display/Infotainment Faceplate Reset
SP0345	Exhaust Flow Control Valve Learn
SP0346	Cylinder Deactivation Exhaust Flow Control Valve Learn
SP0347	Distance Sensing Cruise Control Module

SP0348	Adaptive Pressure Control Learn
SP0349	Yaw Rate Sensor Reset
SP0350	Gear Position Sensor Learn
SP0351	Transfer Case Clutch Identifier
SP0352	Transfer Case Clutch Overtemperature Counter Reset
SP0353	Vehicle Model
SP0354	Power Steering Softstops Learn
SP0355	Rear Suspension Position Sensor Trim Height
SP0356	Front Suspension Position Sensor Trim Height
SP0357	Reset History Buffer
SP0358	Rear Differential Clutch Service Calibration Setup
SP0359	Range Actuator Learn
SP0360	Parking Assist Sensor Learn
SP0361	Learned Values Reset
SP0362	Hybrid/EV Battery Pack Coolant Control Solenoid Valve Learn
SP0363	Hybrid/EV Battery Pack Capacity Learn
SP0364	Passenger Compartment Heater Coolant Control Solenoid Valve Learn
SP0365	Fuel Economy Reset
SP0366	Hybrid/EV Battery Contactor Open Reasons Reset
SP0367	Hybrid/EV Battery Pack Charging Adaptive Learn Reset
SP0368	Hybrid/EV Battery Pack Data Reset
SP0369	Manual Service Disconnect Fuse Life Reset
SP0370	Average Fuel Age Reset
SP0371	Electronic Brake Control Module Learn
SP0372	Steering Wheel Angle Sensor Reset
SP0373	Fuel Rail Pressure Relief Valve Learned Values Reset
SP0374	Idle Speed Control Reset
SP0375	ECM Reset
SP0376	Speedometer Calibration
SP0377	Retained Accessory Power
SP0378	Throttle Position Learn
SP0379	Automatic Braking Active Signal

SP0380	Transmission Oil Life Reset
SP0381	APP Learn
SP0382	Crankshaft Position Reluctor Ring Learn
SP0383	DPF Pressure Sensor Learn
SP0384	EGR Valve Learn
SP0385	Exhaust Gas Temperature Sensor Learn
SP0386	Flywheel Learn
SP0387	Fuel Rail Pressure Sensor or Fuel Rail Learn
SP0388	HO2S Learn
SP0389	Intake Air Flow Valve Learn
SP0390	MAF Sensor Learn
SP0391	Turbocharger Learn
SP0392	DPF Reset
SP0393	Glow Plug Control Module Reset
SP0394	DPF Service Regeneration
SP0395	Inspection/Maintenance Data
SP0396	Calculated Fuel Economy Setup
SP0397	Injector Flow Rate Programming
SP0398	Ambient Air Temperature Calculation Reset
SP0399	Catalyst 1 Reset
SP0400	DPF/Catalyst 2 Reset
SP0401	DPF Pressure Sensor Reset
SP0402	Engine Serial Number
SP0403	Fuel Filter Life Reset
SP0404	NOx Catalyst Reset
SP0405	NOx Catalyst Reductant Loading Reset
SP0406	NOx Sensor 1 Reset
SP0407	NOx Sensor 2 Reset
SP0408	Reductant Fluid Tank Level Reset
SP0409	Reductant Injector Reset
SP0410	Reductant System Data Reset
SP0411	Reductant System Reset

SP0412	Display ECM and Glow Plug Control Module Injector Flow Identifiers
SP0413	Cylinder 1 Injector Flow Identifier
SP0414	Cylinder 2 Injector Flow Identifier
SP0415	Cylinder 3 Injector Flow Identifier
SP0416	Cylinder 4 Injector Flow Identifier
SP0417	Cylinder 5 Injector Flow Identifier
SP0418	Cylinder 6 Injector Flow Identifier
SP0419	Cylinder 7 Injector Flow Identifier
SP0420	Cylinder 8 Injector Flow Identifier
SP0421	Copy Injector Flow Identifiers from Glow Plug Control Module to ECM
SP0422	Copy Injector Flow Identifiers from ECM to Glow Plug Control Module
SP0423	Cylinder 1 Fuel Injector Correction Value Reset
SP0424	Cylinder 2 Fuel Injector Correction Value Reset
SP0425	Cylinder 3 Fuel Injector Correction Value Reset
SP0426	Cylinder 4 Fuel Injector Correction Value Reset
SP0427	Cylinder 5 Fuel Injector Correction Value Reset
SP0428	Cylinder 6 Fuel Injector Correction Value Reset
SP0429	Cylinder 7 Fuel Injector Correction Value Reset
SP0430	Cylinder 8 Fuel Injector Correction Value Reset
SP0431	All Cylinders Fuel Injector Correction Value Reset
SP0432	Fuel Injector Correction Value Preset
SP0433	Glow Plug Learn
SP0434	CO Adjust
SP0435	Clear Secured High Voltage DTCs
SP0436	On-Board Jump Assist Counter Reset
SP0437	Reset PTO Inhibit and Disengage History
SP0438	Restore Factory Settings
SP0439	DC Charging Disabled Reset
SP0440	EV Range Reset
SP0441	Idle Speed Adjustment
SP0442	Transmission Adaptive Torque Reset
SP0443	Fuel Rail Pressure Sensor Reset

SP0444	Power Steering Softstops Reset
SP0445	Transmission Adaptive Values Learn
SP0446	Turbocharger Learned Values Reset
SP0447	Vehicle Direction Camera Learn
SP0448	Fuel Pressure Regulator Learn
SP0449	Fuel Pressure Regulator Fast Learn
SP0450	Intake Manifold Runner Control Valve Learn
SP0451	High Pressure Fuel Pump Learn
SP0452	Boost Pressure Sensor Learn
SP0453	Cylinder 1 Injector
SP0454	Cylinder 2 Injector
SP0455	Cylinder 3 Injector
SP0456	Cylinder 4 Injector
SP0457	Vehicle Inclination Sensor
SP0458	Code Index
SP0459	Fuel Injection Small Quantity Data Reset
SP0460	Fuel Injection Small Quantity Learn
SP0461	Catalyst Reset
SP0462	Exhaust Gas Temperature Sensor Reset
SP0463	Idle Air Control Reset
SP0464	Throttle Actuator Reset
SP0465	Preferred Roaming List Update
SP0466	Module Setup
SP0467	Not Linked
SP0468	Linked
SP0469	Option Configuration
SP0470	Audio Code Index
SP0471	Personalization
SP0472	Total Fuel Consumed Reset
SP0473	Automatic Electric Door Locks (AU4) With Seat Belt Pretensioner (A70)
SP0474	Automatic Electric Door Locks (AU4) Without Seat Belt Pretensioner (-A70)
SP0475	Electric Door Locks (AU3) With Seat Belt Pretensioner (A70)

SP0476	Electric Door Locks (AU3) Without Seat Belt Pretensioner (-A70)
SP0477	Manual Door Locks (-AU3) (-AU4)
SP0478	Enable Deployment Loops
SP0479	Clear Transmission Counters
SP0480	Clutch Position Learn
SP0481	Clutch Purge
SP0482	Depressurize System
SP0483	Transmission Learn
SP0484	Fuel Injector Learn
SP0485	Low Speed Target Pressure
SP0486	High Speed Target Pressure
SP0487	Minimum Telltale Pressure
SP0488	Safe Tellale Pressure
SP0489	Low Speed Threshold
SP0490	High Speed Threshold
SP0491	Setup Module DTCs
SP0492	Reset
SP0493	Crankshaft pos. variation learn
SP0494	PRL update
SP0495	Set language
SP0496	Stolen vehicle slowdown clear
SP0497	Setup SDM primary key in BCM
SP0498	Inclination sensor enable
SP0499	BPP sensor calibration
SP0500	Afterblow option
SP0501	Data recorder
SP0502	Audiopilot test
SP0503	Eject
SP0504	TV region lockout
SP0505	TV region select
SP0506	Automated bleed
SP0507	CO adjust (leaded fuel only)

SP0508	Change to neutral mode
SP0509	DPF reset replace ECM
SP0510	Learn sensor location
SP0511	Learn sen loc with tire press tool
SP0512	Re-zero passenger presence system
SP0513	Copy and paste TPM information
SP0514	Tire type/pressure selection
SP0515	Setup SDM part number in BCM
SP0516	DRR setup
SP0517	Passenger presence sensor learn
SP0518	Auto. door unlock
SP0519	Key fob in veh. warning
SP0520	Passive door lock
SP0521	Setup new RCDLR
SP0522	Column calibration
SP0523	Setup new HVAC
SP0524	Radio setup
SP0525	VIN relearn
SP0526	HVAC ambient temp. disp.
SP0527	Power window motor programming
SP0528	Digital radio receiver
SP0529	Radio RPO selection
SP0530	CCM RDS matching ID
SP0531	Clear manufacturer enable counter
SP0532	Bump stop
SP0533	Acceleration sensor reset
SP0534	BMC prim. piston pos. relearn
SP0535	EBCM relearn
SP0536	Steering pos./torque sensor cal.
SP0537	Preload passenger presence system
SP0538	Engine serial number
SP0539	Capture & restore data

SP0540	Injector flow rate programming
SP0541	Setup new ROS
SP0542	PTO options
SP0543	ECM PTO options
SP0544	Reset ECM
SP0545	Reset immobilizer
SP0546	Reset vehicle build settings
SP0547	Middle east speed bias (UC2)
SP0548	Brazil units (CV2)
SP0549	Module setup
SP0550	Setup SDM serial number in BCM
SP0551	Program VIN
SP0552	Tuner calibration
SP0553	Navigation option
SP0554	Transmission type
SP0555	Disable/enable secure car
SP0556	Auto. door unlock trigger
SP0557	Delayed locking
SP0558	Passive door unlock
SP0559	Setup SDM part number in IPM
SP0560	Disable dtc(s)
SP0561	Bluetooth
SP0562	System configuration
SP0563	PSCM calibration procedure
SP0564	New actuator setup procedure
SP0565	Program phone number
SP0566	Hybrid batt. charge hrs.
SP0567	Hybrid batt. discharge amp hrs.
SP0568	Erase transponder-keys
SP0569	Seat belt chime
SP0570	Learn tire pressure sensors
SP0571	Engine shutdown

SP0572	Country code
SP0573	Chime level
SP0574	Loud chime volume
SP0575	Loud amp chime volume
SP0576	Normal chime volume
SP0577	Normal amp chime volume
SP0578	AM pass A stopping
SP0579	FM pass A stopping
SP0580	IPC setup
SP0581	U85
SP0582	UZ6
SP0583	Driver info. display option
SP0584	Calibrate module
SP0585	VCIM setup
SP0586	Optional modules
SP0587	Region code options
SP0588	New tire/wheel base/booster info.
SP0589	Setup SDM part number in IPC
SP0590	Setup SDM serial number in IPC
SP0591	Acquisition setting
SP0592	Step 1
SP0593	Step 2
SP0594	North america
SP0595	Middle east
SP0596	Steering tuning selection
SP0597	Yaw rate sensor recalibration
SP0598	BCM copy and flash
SP0599	Reduction of pressure drive
SP0600	IPC recalibration
SP0601	Injector flow rates
SP0602	Vehicle speed limit
SP0603	Navigation voice

SP0604	Setup SDM serial number in DIM
SP0605	Setup SDM part number in DIM
SP0606	LONG WAVE
SP0607	Traffic seek
SP0608	Vehicle type
SP0609	Door zone module VIN relearn
SP0610	Intrusion sensor step 1
SP0611	Inclination sensor step 1
SP0612	Alarm siren module step 1
SP0613	Tap shift
SP0614	Point of sale
SP0615	Miscellaneous options 2
SP0616	Variable effort steering
SP0617	Right hand drive
SP0618	Personalization option
SP0619	Universal theft deterrent
SP0620	Intrusion sensor step 2
SP0621	Inclination sensor step 2
SP0622	Alarm siren module step 2
SP0623	Twilight sentinel
SP0624	Front fog lamp type
SP0625	DRL option
SP0626	Perimeter lighting
SP0627	TPM option enable
SP0628	New VIN
SP0629	Tire rotation procedure
SP0630	Afterblow
SP0631	Recalibration
SP0632	Accessory wheel size setup
SP0633	Clear memory and program all fobs
SP0634	CTD operation
SP0635	Fob feedback

SP0636	Theftlock LED
SP0637	Option configuration
SP0638	Fuel injector balance
SP0639	Buckle up reminder
SP0640	Pre-alarm option
SP0641	Solenoid test
SP0642	Cruise control options
SP0643	Exhaust brake options
SP0644	Gear down protection options
SP0645	Oil capacity options
SP0646	DPM setup
SP0647	Preferred system setting
SP0648	ALC trimset
SP0649	Dimming delay
SP0650	Export ID
SP0651	Language
SP0652	AM distant
SP0653	AM local
SP0654	FM distant
SP0655	FM local
SP0656	Fob button hold time
SP0657	Electronic suspension control
SP0658	Nav. radio theft
SP0659	Oil life monitor
SP0660	Axle ratio
SP0661	Fast learn adapt. process
SP0662	BCM reprogramming
SP0663	Setup IPC
SP0664	Miscellaneous options 1
SP0665	Automatic/manual HVAC options
SP0666	Magna steer option
SP0667	Temperature offset

SP0668	Load management option
SP0669	Disable belt tower dtc's
SP0670	Navigation radio present
SP0671	Military or standard time
SP0672	Tire pressure warning
SP0673	Tire pressure monitor
SP0674	Performance shift
SP0675	Key fob personalization
SP0676	SCLM setup
SP0677	DTC mask
SP0678	Accessory inflator
SP0679	Middle east region mode
SP0680	Tire rotation/sensor replacement
SP0681	Setup RFA
SP0682	Synchronize IPC and SIR
SP0683	Setup new onstar
SP0684	Electronic serial number
SP0685	Update HVAC cals. in DIM
SP0686	LH drvr. personalization
SP0687	RH drvr. personalization
SP0688	BCM RPO reprogram
SP0689	Twilight sentinel reprogram
SP0690	Seed and key relearn
SP0691	Setup new VTD module
SP0692	Export option
SP0693	Valet lockout
SP0694	Compact disc
SP0695	Cellular telephone
SP0696	A/C compressor calibration
SP0697	Option A
SP0698	Option B
SP0699	Option C

SP0700	Option D
SP0701	Option E
SP0702	VIN information
SP0703	Bass frequency response
SP0704	Steering angle sensor centering
SP0705	Heater recalibration
SP0706	Door lock
SP0707	Door unlock
SP0708	Door jamb switch
SP0709	Brake pedal
SP0710	Ignition switch
SP0711	Option no. 0
SP0712	HVAC recal. download
SP0713	TV present
SP0714	Bose display
SP0715	Isolation valve test
SP0716	Option no. 1
SP0717	Fob 1 option 2
SP0718	Fob 1 option 3
SP0719	Fob 2 option 1
SP0720	Fob 2 option 2
SP0721	Fob 2 option 3
SP0722	Option no. 2
SP0723	Service spark retard reset
SP0724	Odometer reset
SP0725	Gauge setup
SP0726	Synchronize TTM and MSM
SP0727	Synchronize MSM and TTM
SP0728	Remove/reset module
SP0729	Vehicle dynamic sensor offset calibration
SP0730	Clear Proximity Detection Disable Reason
SP0731	Engine air filter monitor settings

SP0732	Transmission overtemperature counter reset
SP0733	Reset buffer history instruction
SP0734	Transmission clutch read in
SP0735	Vehicle dynamic sensor 1 and 2 offset calibration
SP0736	Read the starting point of the brake system piston pressure rise
SP0737	Reading of brake system plunger motor position sensor
SP0738	Read brake pedal stroke sensor
SP0739	Front axle brake pad life monitoring reset
SP0740	Rear axle brake pad life monitoring reset
SP0741	Configuration/reset function
SP0742	Trailer tire pressure sensor read in manually
SP0743	Steering wheel angle sensor offset calibration
SP0744	Read in longitudinal acceleration sensor
SP0745	Regeneration of diesel particulate filters
SP0746	Injector correction reset
SP0747	Capture information
SP0748	Copy and restore data
SP0749	Gear actuator correction read
SP0750	4WD high-low gear low-speed actuator clutch read-in
SP0751	Distance sensing constant speed control module
SP0752	Engine speed/throttle
SP0753	Rear Gate Driver Information Center Message Reset
SP0754	Headlamp Leveling System Suspension Trim Position Learn
SP0755	Backup Battery Timer Reset
SP0756	Engine Air Filter Life Reset
SP0757	Fuel Pump Driver Control Module Configuration
SP0758	Vehicle Dynamic Sensor Offset Calibration
SP0759	Clear Approach Detection Disabled Reasons
SP075A	All Cameras Alignment Learn
SP075B	Rear Drive Clutch Service Calibration Setup
SP075C	Transmission Overtemperature Counter Reset
SP075D	Engine Block Coolant Valve Position Learn

SP075E	Engine Coolant Control Valve Learn
SP075F	Engine Coolant Flow Control Valve Learn
SP0760	Turbocharger Wastegate Learn
SP0761	Engine Coolant Pump Data Reset
SP0762	Heater Core Coolant Temperature Sensor Reset
SP0763	Particulate Filter Reset
SP0764	Particulate Filter Pressure Sensor Reset
SP0765	Engine Air Filter Monitor Setup
SP0766	Steering Wheel Angle Sensor Offset Calibration
SP0767	Brake System Plunger Motor Position Sensor Learn
SP0768	Brake System Plunger Pressure Rise Starting Point Learn
SP0769	License Compliance Materials Download Error Counter Reset
SP076A	Transmission Control Module Reset
SP076B	Exhaust Control Valve Learn
SP076C	Air Cleaner Monitor Setup
SP076D	Barometric Pressure Sensor Reset
SP076E	Fuel Pump Power Control Module Configuration
SP076F	Correction Angle Reset
SP0770	Cylinder Deactivation Exhaust Control Valve Learn
SP0771	Longitudinal Acceleration Sensor Learn
SP0772	Clear Short Range Radar Sensor Vehicle Position
SP0773	Variable Exhaust Flow Control Valve Learn
SP0774	Vehicle Longitudinal Accelerometer Sensor Learn
SP0775	Heated Oxygen Sensor Heater Resistance Learned Values Reset
SP0776	Range Actuator Correlation Learn
SP0777	Engine Block Coolant Control Valve Position Learn
SP0778	Turbocharger/Supercharger Boost Control Initial Position Learn
SP0779	Catalytic Converter Reset
SP077A	High Pressure Fuel Variable Reset
SP077B	Nitrogen Oxides Catalytic Converter Reductant Loading Reset
SP077C	Nitrogen Oxides Catalytic Converter Reset
SP077D	Nitrogen Oxides Sensor Reset

SP077E	Display ECM Injector Flow Identifiers
SP077F	Cylinder 1 Fuel Injector Flow Identifier
SP0780	Cylinder 2 Fuel Injector Flow Identifier
SP0781	Cylinder 3 Fuel Injector Flow Identifier
SP0782	Cylinder 4 Fuel Injector Flow Identifier
SP0783	Cylinder 5 Fuel Injector Flow Identifier
SP0784	Cylinder 6 Fuel Injector Flow Identifier
SP0785	Left Front Air Spring Inflate
SP0786	Right Front Air Spring Inflate
SP0787	Left Rear Air Spring Inflate
SP0788	Right Rear Air Spring Inflate
SP0789	Left Front Suspension Position Sensor Trim Height
SP078A	Right Front Suspension Position Sensor Trim Height
SP078B	Left Rear Suspension Position Sensor Trim Height
SP078C	Right Rear Suspension Position Sensor Trim Height
SP078D	Level Vehicle to Target Height
SP078E	Brake Pedal Travel Sensor Learn
SP078F	Front Axle Brake Pad Life Monitoring Reset
SP0790	Rear Axle Brake Pad Life Monitoring Reset
SP0791	Turbocharger Vane Position Learn
SP0792	Fuel Injection Small Quantity Learning Odometer Reset
SP0793	Theft Deterrent Relearn
SP0794	Vehicle Dynamic Sensors 1 and 2 Offset Calibration
SP0795	Transmission Clutch 6 Volume Learn
SP0796	Transmission Clutch 6 Return Spring Learn
SP0797	Service Cleaning Procedure
SP0798	Hydraulic System Leak Test
SP0799	Park Brake Pad Life Monitoring Reset
SP079A	Crankshaft Position Reluctor Ring Learned Values Reset
SP079B	Copy Tire Pressure Monitoring Information
SP079C	CO Adjustment
SP079D	Tire Pressure Sensors Manual Learn

SP079E	Flexible Fuel Reset
SP079F	Steering Performance Calibration
SP07A0	Powertrain Compartment Cover Full Open Height Reset
SP07A1	Powertrain Compartment Cover Cycle Counts Reset
SP07A2	Powertrain Compartment Cover Hold Open Counter Reset
SP07A3	Powertrain Compartment Cover Obstacle Counter Reset
SP07A4	Powertrain Compartment Cover Zone Counter Reset
SP07A5	Powertrain Compartment Cover Drive Unit Learn
SP07A6	4WD Low Range Actuator Clutch Learn
SP07A7	Theft Deterrent Relearn VIN Reset
SP07A8	Radio Favorites Reset
SP07A9	Turbocharger Boost Control Initial Position Learn
SP07AA	Fuel System Adaptation Reset
SP07AB	Power Take-Off Operation Mode Settings
SP07AC	Copy and Restore Data
SP07AD	Trailer Tire Pressure Sensor Manual Learn
SP07AE	Clear All Vehicle DTCs
SP07AF	Stop/Start Capacitor Control Module State of Health Reset
SP07B0	Vehicle Variant
SP07B1	Hydraulic Clutch Bleed
SP07B2	Engine Coolant Bypass Valve Position Learn
SP07B3	Set Time and Date
SP07B4	Remove/Reset Module
SP07B5	Temperature Code Index
SP07B6	EGR Cooler Run Time Counter Reset
SP07B7	Rear Differential Clutch Learn Command
SP07B8	Rear Differential Functional Test Command
SP07B9	Drive Motor Position Sensor Offset Reset
SP07BA	Hybrid/Electric Vehicle Battery Pack Capacity Fast Learn
SP07BB	Hybrid/Electric Vehicle Battery Contactor Open Reason History Reset
SP07BC	Hybrid/Electric Vehicle Battery DC Charging Disabled Reset
SP07BD	Hybrid/Electric Vehicle Battery Interface Control Module Over Temperature Reset

SP07BE	Hybrid/Electric Vehicle Battery Interface Control Module Voltage Sensor Circuits High - Low Reset
SP07BF	Hybrid/Electric Vehicle Range Reset
SP07C0	System Isolation / Impact Sensor Fault - Hybrid/Electric Vehicle Battery System Reset
SP07C1	14 Volt Power Module - Rail Overvoltage Exposure Reset
SP07C2	Air Conditioning Electric Compressor - Rail Overvoltage Exposure Reset
SP07C3	Battery Charger Control Module - Rail Overvoltage Exposure Reset
SP07C4	Drive Motor Control Module - Rail Overvoltage Exposure Reset
SP07C5	Drive Motor Control Module 2 - Rail Overvoltage Exposure Reset
SP07C6	Drive Motor Control Module 3 - Rail Overvoltage Exposure Reset
SP07C7	Hybrid/Electric Vehicle Coolant Heater - Rail Overvoltage Exposure Reset
SP07C8	Power Steering Active Pull/Drift Compensation Learn
SP07C9	Particulate Filter Reset Bank 2
SP07CA	Hydraulic System Flush Procedure
SP07CB	Transmission Service Diagnostic Test
SP07CC	Camshaft Position Actuator Learn
SP07CD	Clutch Energy Level History Counter Reset
SP07CE	Timing Belt Life Reset
SP07CF	Reset Camera Alignment Learned Values
SP07D0	Battery Charger Control Module 2 - Rail Overvoltage Exposure Reset
SP07D1	Restore Power Takeoff Factory Settings
SP07D2	Reset Power Takeoff Inhibit and Disengage History