



# Shenzhen Xtooltech Co., Ltd

## Citroen Function List V11.10

### Tips and Instructions:

- \* This feature is new.
- ✓ This feature is supported.
- This feature is not supported.
- ※ This feature is partially supported.

Model	System Name	ECU	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Actuation Test	Special Functions
DS 3	engine management ECU	MED17 4 EURO4	✓	✓	✓	✓	✓	S0034
DS 3	engine management ECU	MEV17 4 EURO5	✓	✓	✓	✓	✓	S0034
DS 3	engine management ECU	EDC16C3	✓	✓	✓	✓	✓	S0036
DS 3	engine management ECU	HDI SID807	✓	✓	✓	✓	✓	S0037
DS 3	engine management ECU	HDI SID807 BR2	✓	✓	✓	✓	✓	S0037
DS 3	engine management ECU	EDC17C10	✓	✓	✓	✓	✓	S0037
DS 3	engine management ECU	EDC17C10_BR2	✓	✓	✓	✓	✓	S0037, S0036
DS 3	engine management ECU	MED17 4 2	✓	✓	✓	✓	✓	
DS 3	engine management ECU	MEV17 4 2	✓	✓	✓	✓	✓	S0034
DS 3	engine management ECU	V46	✓	✓	✓	✓	✓	
DS 3	engine management ECU	EDC17C60	✓	✓	✓			
DS 3	engine management ECU	VD46	✓	✓	✓			
DS 3	engine management ECU	MED17 4 4	✓	✓	✓			
DS 3	engine management ECU	MED17 4 EURO5	✓	✓	✓			
DS 3	engine management ECU	MEVD17 4 4	✓	✓	✓			
DS 3	automatic or piloted manual gearbox	BVA_AL4	✓	✓	✓	✓	✓	
DS 3	automatic or piloted manual gearbox	BVMP	✓	✓	✓	✓		

DS 3	automatic or piloted manual gearbox	CFC300P	✓	✓	✓	✓		
DS 3	automatic or piloted manual gearbox	MAPS_UDS	✓	✓	✓			
DS 3	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓			
DS 3	automatic or piloted manual gearbox	BVMP_MCP_UDS	✓	✓	✓			
DS 3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABSMK70_1	✓	✓	✓	✓	✓	
DS 3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESPMK60_0	✓	✓	✓	✓	✓	S0039
DS 3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESPMK100	✓	✓	✓	✓	✓	
DS 3	airbags and pretensioners ECU	SAC_AUTOLIV	✓	✓	✓	✓		
DS 3	built-in systems interface	BSI	✓	✓	✓			S0033
DS 3	power steering	DAE A515	✓	✓	✓	✓		S0035
DS 3	power steering	DAE	✓	✓	✓			
DS 3	power steering	DAE_UDS	✓	✓	✓			
DS 3	anti-theft alarm	ALARME	✓	✓	✓	✓		
DS 3	instrument panel	COMBINE	✓	✓	✓	✓		
DS 3	air conditioning	CLIM REGULEE	✓	✓	✓	✓		
DS 3	parking assistance	AAS	✓	✓	✓	✓		
DS 3	diesel fuel additive pump	PADDGO	✓	✓	✓	✓		
DS 3	diesel fuel additive pump	PADDGO_TI_E6	✓	✓	✓			

DS 3	Voltage maintaining device	DMTC	✓					
DS 3	Voltage maintaining device	DMTR	✓	✓	✓			
DS 3	Voltage maintaining device	DMTR_DTC3B	✓	✓	✓			
DS 3	engine wiring housing	BSM	✓	✓	✓			
DS 3	Trailer relay unit	BSR	✓	✓	✓	✓		
DS 3	battery charge status control unit	BECB	✓	✓	✓			
DS 3	battery charge status control unit	BECB_GEN2	✓	✓	✓			
DS 3	controls under the steering wheel	HDC	✓	✓	✓	✓		
DS 3	seat belt not fastened warning lights unit	TNB	✓					
DS 3	rain and sunlight sensor	PLUIE_LUMINOSITE	✓	✓	✓			
DS 3	Vehicle Distance Assistance	LIDAR	✓	✓	✓			
DS 3	multifunction screen	EMF_A	✓	✓	✓	✓		
DS 3	multifunction screen	EMF_C	✓	✓	✓	✓		
DS 3	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG	✓	✓	✓			
DS 3	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEGC	✓	✓	✓			
DS 3	Telematic unit (RTx) or audio-navigation	RNEG2010	✓	✓	✓			
DS 3	Telematic unit (RTx) or audio-navigation	SMEG_PLUS	✓	✓	✓			
DS 3	radio	AUTORADIO	✓	✓	✓	✓	✓	
DS 3	radio	RD45	✓	✓	✓	✓		

DS 3	Service module / Independent telematic unit	BTA	✓	✓	✓			
DS 3	Service module / Independent telematic unit	BTA_2	✓	✓	✓			
DS 3	Service module / Independent telematic unit	BTA_3R	✓	✓	✓			
DS 3	Service module / Independent telematic unit	BTA_3S	✓	✓	✓			
DS 3	high frequency receiver	RHF	✓	✓	✓	✓		
DS 3	Hands-free Kit / Portable Unit	BOITIER_NOMADE	✓	✓	✓	✓		
DS 3 (A55P)	engine management ECU	VD46	✓	✓	✓			
DS 3 (A55P)	engine management ECU	CMM VD56	✓	✓	✓			
DS 3 (A55P)	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓			
DS 3 (A55P)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESPMK100	✓	✓	✓			
DS 3 (A55P)	airbags and pretensioners ECU	RBG_UDS	✓	✓	✓			
DS 3 (A55P)	built-in systems interface	BSI2010_EV	✓	✓	✓			
DS 3 (A55P)	power steering	DAE	✓	✓	✓			
DS 3 (A55P)	anti-theft alarm	MUS	✓	✓	✓			
DS 3 (A55P)	Intrusion alarm siren	SIR	✓	✓	✓			
DS 3 (A55P)	instrument panel	COMBINE	✓	✓	✓			
DS 3 (A55P)	air conditioning	CLIM REGULEE	✓	✓	✓			
DS 3 (A55P)	Trailer relay unit	BSG 2010 RQ	✓	✓	✓			

DS 3 (A55P)	controls under the steering wheel	COM2008P	✓	✓	✓			
DS 3 (A55P)	rain and sunlight sensor	CDPL_UDS_HELLA	✓	✓	✓			
DS 3 (A55P)	Vehicle Distance Assistance	LIDAR	✓	✓	✓			
DS 3 (A55P)	touch screen	EMF DGT LVDS BD	✓	✓	✓			
DS 3 (A55P)	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
DS 3 (A55P)	Telematic unit (RTx) or audio-navigation	RCC	✓	✓	✓			
DS 3 (A55P)	Service module / Independent telematic unit	BTA_2	✓	✓	✓			
DS 3 (A55P)	Service module / Independent telematic unit	BTA_3R	✓	✓	✓			
DS 3 (A55P)	battery charge status control unit	BECB_GEN2	✓	✓	✓			
DS 4	engine management ECU	DCM35_BR2	✓	✓	✓	✓	✓	S0037
DS 4	engine management ECU	EDC17C10_BR2	✓	✓	✓	✓	✓	S0037, S0036
DS 4	engine management ECU	HDI_SID807_BR2	✓	✓	✓			
DS 4	engine management ECU	MEV17_4_2	✓	✓	✓	✓	✓	S0034
DS 4	engine management ECU	MED17_4_2	✓	✓	✓	✓	✓	
DS 4	engine management ECU	MEVD17_4_2	✓	✓	✓	✓		S0034
DS 4	engine management ECU	ME745	✓	✓	✓	✓	✓	S0034
DS 4	engine management ECU	ME745_EC5	✓	✓	✓	✓	✓	
DS 4	engine management ECU	V46_21	✓	✓	✓	✓	✓	
DS 4	engine management ECU	V46_32	✓	✓	✓	✓	✓	
DS 4	engine management ECU	MM6KP	✓	✓	✓			
DS 4	engine management ECU	VD46	✓	✓	✓			
DS 4	engine management ECU	EDC17C60	✓	✓	✓			
DS 4	engine management ECU	MED17_4_4	✓	✓	✓	✓		S0034
DS 4	engine management ECU	DCM62	✓	✓	✓			

DS 4	engine management ECU	MEVD17 4 4	✓	✓	✓			
DS 4	engine management ECU	ME749 EC5	✓	✓	✓			
DS 4	automatic or piloted manual gearbox	BVA_AL4	✓	✓	✓	✓	✓	
DS 4	automatic or piloted manual gearbox	BVA_AM6_AT6_EUR05	✓	✓	✓	✓	✓	
DS 4	automatic or piloted manual gearbox	CFC300P	✓	✓	✓	✓		
DS 4	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓	✓		
DS 4	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS81	✓	✓	✓	✓	✓	S0035, S0039
DS 4	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP81	✓	✓	✓	✓	✓	S0035, S0039
DS 4	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓			
DS 4	airbags and pretensioners ECU	RBG_UDS	✓	✓	✓	✓		
DS 4	built-in systems interface	BSI2010	✓	✓	✓			S0033
DS 4	power steering	GEP	✓	✓	✓	✓		
DS 4	Electric steering lock	AVE	✓	✓	✓			
DS 4	anti-theft alarm	ALARME	✓	✓	✓	✓		
DS 4	instrument panel	COMBINE UDS	✓	✓	✓	✓		
DS 4	Control panel dot matrix display	MATT_C_2010	✓	✓	✓			
DS 4	Control panel dot matrix display	MATT_M_2010	✓	✓	✓			

DS 4	Control panel dot matrix display	MATT_P_2010	✓	✓	✓			
DS 4	Hands-free unit	BML	✓	✓	✓			
DS 4	air conditioning	CLIM REGULEE UDS	✓	✓	✓	✓		
DS 4	air conditioning	BCC	✓	✓	✓			
DS 4	UNDER-INFLATION DETECTION	DSG	✓	✓	✓			
DS 4	UNDER-INFLATION DETECTION	DSG_UDS	✓	✓	✓			
DS 4	parking assistance	AAS UDS	✓	✓	✓	✓		
DS 4	diesel fuel additive pump	PADDGO_E5	✓	✓	✓	✓		
DS 4	diesel fuel additive pump	PADDGO_TI_E6	✓	✓	✓			
DS 4	Voltage maintaining device	DMTC	✓					
DS 4	Voltage maintaining device	DMTR	✓	✓	✓			
DS 4	Voltage maintaining device	DMTR_DTC3B	✓	✓	✓			
DS 4	Electric secondary brake	FSE	✓	✓	✓			
DS 4	Dynamic headlamp height adjuster	LADCT	✓	✓	✓			
DS 4	Dynamic headlamp height adjuster	BEMP	✓	✓	✓			
DS 4	engine wiring housing	BSM_2010	✓	✓	✓			
DS 4	Trailer relay unit	BSG_2010 RQ	✓	✓	✓	✓		
DS 4	battery charge status control unit	BECB_GEN2	✓	✓	✓	✓		
DS 4	supplies protection and management unit	BPGA2010	✓	✓	✓			
DS 4	Electronic key reader	LCE	✓	✓	✓			
DS 4	controls under the steering wheel	HDC	✓	✓	✓	✓		

DS 4	controls under the steering wheel	COM2008P	✓	✓	✓	✓		
DS 4	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓			
DS 4	Multifunction control panel	FMUX	✓	✓	✓			
DS 4	driving school module	MAE	✓	✓	✓			
DS 4	seat belt not fastened warning lights unit	TNB_2010	✓					
DS 4	rain and sunlight sensor	PLUIE_LUMINOSITE_UDS	✓	✓	✓	✓		
DS 4	lane wandering alert	AFIL	✓	✓	✓	✓		
DS 4	Blind spot monitoring	SAM	✓	✓	✓			
DS 4	multifunction screen	EMF A UDS	✓	✓	✓			
DS 4	multifunction screen	EMF C UDS	✓	✓	✓			
DS 4	touch screen	EMF DGT LVDS BD	✓	✓	✓			
DS 4	Telematic unit (RTx) or audio-navigation	MRN	✓	✓	✓			
DS 4	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEGC	✓	✓	✓			
DS 4	Telematic unit (RTx) or audio-navigation	RNEG2010	✓	✓	✓			
DS 4	Telematic unit (RTx) or audio-navigation	SMEG_PLUS	✓	✓	✓			
DS 4	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
DS 4	Telematic unit (RTx) or audio-navigation	RCC	✓	✓	✓			
DS 4	Telematic unit (RTx) or audio-navigation	AIO	✓	✓	✓			
DS 4	radio	RD5	✓	✓	✓	✓		
DS 4	radio	RD45	✓	✓	✓			



DS 4	radio	RD6_CN	✓	✓	✓			
DS 4	Service module / Independent telematic unit	BTA	✓	✓	✓	✓		
DS 4	Service module / Independent telematic unit	BLVV	✓	✓	✓			
DS 4	Service module / Independent telematic unit	BTA_CN	✓	✓	✓			
DS 4	Service module / Independent telematic unit	BTA_2	✓	✓	✓			
DS 4	Service module / Independent telematic unit	BTA_3R	✓	✓	✓			
DS 4	Service module / Independent telematic unit	BTA_3S	✓	✓	✓			
DS 4	external CD player	CDE	✓	✓	✓			
DS 4	audio amplifier	AMPLI AUDIO	✓	✓	✓			
DS 4	driver's door module	PDPC	✓	✓	✓	✓		
DS 4	Seat driver position memory module.	BDMC	✓	✓	✓	✓		
DS 5	engine management ECU	HDI_SID807_BR2	✓	✓	✓	✓	✓	S0037
DS 5	engine management ECU	DCM35_HY	✓	✓	✓	✓		S0037
DS 5	engine management ECU	DCM35_BR2	✓	✓	✓	✓	✓	S0037
DS 5	engine management ECU	MED17_4_2	✓	✓	✓	✓	✓	
DS 5	engine management ECU	MEVD17_4_2	✓	✓	✓	✓		
DS 5	engine management ECU	DCM62	✓	✓	✓			
DS 5	engine management ECU	EDC17C60	✓	✓	✓			
DS 5	engine management ECU	MED17_4_4	✓	✓	✓			
DS 5	engine management ECU	MED17_4_4_EP8	✓	✓	✓			
DS 5	engine management ECU	MEVD17_4_4	✓	✓	✓			

DS 5	automatic or piloted manual gearbox	CFC300P_HY	✓	✓	✓	✓		
DS 5	automatic or piloted manual gearbox	BVA_AM6_AT6_EUR05	✓	✓	✓	✓	✓	
DS 5	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓			
DS 5	automatic or piloted manual gearbox	CFC300P	✓	✓	✓	✓		
DS 5	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP81	✓	✓	✓	✓	✓	
DS 5	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓			
DS 5	airbags and pretensioners ECU	RBG_UDS	✓	✓	✓	✓		
DS 5	built-in systems interface	BSI2010	✓	✓	✓			
DS 5	power steering	GEP	✓	✓	✓	✓		
DS 5	Electric steering lock	AVE	✓	✓	✓			
DS 5	anti-theft alarm	ALARME	✓	✓	✓	✓		
DS 5	instrument panel	COMBINE UDS	✓	✓	✓	✓		
DS 5	Control panel dot matrix display	MATT_C_2010	✓	✓	✓			
DS 5	Control panel dot matrix display	MATT_M_2010	✓	✓	✓			
DS 5	Hands-free unit	BML	✓	✓	✓			
DS 5	air conditioning	CLIM REGULEE UDS	✓	✓	✓	✓		
DS 5	UNDER-INFLATION DETECTION	DSG	✓	✓	✓			
DS 5	UNDER-INFLATION DETECTION	DSG_UDS	✓	✓	✓			

DS 5	parking assistance	AAS UDS	✓	✓	✓	✓		
DS 5	battery charge status control unit	BECB_GEN2	✓	✓	✓			
DS 5	diesel fuel additive pump	PADDGO_E5	✓	✓	✓			
DS 5	diesel fuel additive pump	PADDGO_TI_E6	✓	✓	✓			
DS 5	Electric secondary brake	FSE	✓	✓	✓			
DS 5	Vibrators control ECU	BPV	✓	✓	✓			
DS 5	Dynamic headlamp height adjuster	LADCT	✓	✓	✓			
DS 5	Dynamic headlamp height adjuster	BEMP_2	✓	✓	✓			
DS 5	engine wiring housing	BSM 2010	✓	✓	✓			
DS 5	Trailer relay unit	BSG 2010 RQ	✓	✓	✓			
DS 5	supplies protection and management unit	BPGA2010	✓	✓	✓			
DS 5	Service module / Independent telematic unit	BTA	✓	✓	✓			
DS 5	Service module / Independent telematic unit	BLVV	✓	✓	✓			
DS 5	Service module / Independent telematic unit	BTA_CN	✓	✓	✓			
DS 5	Service module / Independent telematic unit	BTA_2	✓	✓	✓			
DS 5	Telematic navigator / separate control pad	CRT_UDS	✓					
DS 5	controls under the steering wheel	COM2008P	✓	✓	✓	✓		

DS 5	Electronic key reader	LCE	✓	✓	✓			
DS 5	seat belt not fastened warning lights unit	TNB_2010	✓					
DS 5	multifunction screen	EMF A UDS	✓	✓	✓			
DS 5	multifunction screen	EMF C UDS	✓	✓	✓			
DS 5	rain and sunlight sensor	PLUIE_LUMINOSITE_UDS	✓	✓	✓	✓		
DS 5	Voltage maintaining device	DMTC	✓					
DS 5	Voltage maintaining device	DMTR	✓	✓	✓			
DS 5	Voltage maintaining device	DMTR_DTC3B	✓	✓	✓			
DS 5	Multifunction video camera (CMF)	CVM	✓	✓	✓			
DS 5	Seat driver position memory module.	BDMC	✓	✓	✓	✓		
DS 5	Head Up Display	VTH UDS	✓	✓	✓			
DS 5	audio amplifier	AMPLI AUDIO	✓	✓	✓			
DS 5	Telematic unit (RTx) or audio-navigation	RNEG2010	✓	✓	✓			
DS 5	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEGC	✓	✓	✓			
DS 5	Telematic unit (RTx) or audio-navigation	MRN	✓	✓	✓			
DS 5	Telematic unit (RTx) or audio-navigation	SMEG_PLUS	✓	✓	✓			
DS 5	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
DS 5	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓			

DS 5	Multifunction control panel	FMUX	✓	✓	✓			
DS 5	radio	RD5	✓	✓	✓	✓		
DS 5	radio	RD45	✓	✓	✓			
DS 5	Clock	HORL	✓	✓	✓			
DS 5	windscreen wiper	ESSUIV UDS	✓	✓	✓			
DS 5	external CD player	CDE	✓	✓	✓			
DS 5	touch screen	EMF_DGT LVDS BD	✓	✓	✓			
DS 5 Hybrid4	engine management ECU	HDI_SID807 BR2	✓	✓	✓	✓	✓	S0037
DS 5 Hybrid4	engine management ECU	DCM35 HY	✓	✓	✓	✓		S0037
DS 5 Hybrid4	engine management ECU	DCM35 BR2	✓	✓	✓	✓	✓	S0037
DS 5 Hybrid4	engine management ECU	MED17 4 2	✓	✓	✓	✓	✓	
DS 5 Hybrid4	engine management ECU	MEVD17 4 2	✓	✓	✓	✓		
DS 5 Hybrid4	engine management ECU	DCM62	✓	✓	✓			
DS 5 Hybrid4	engine management ECU	EDC17C60	✓	✓	✓			
DS 5 Hybrid4	engine management ECU	MED17 4 4	✓	✓	✓			
DS 5 Hybrid4	engine management ECU	MED17 4 4 EP8	✓	✓	✓			
DS 5 Hybrid4	engine management ECU	MEVD17 4 4	✓	✓	✓			
DS 5 Hybrid4	traction battery ECU	TBMU	✓	✓	✓			
DS 5 Hybrid4	hybrid control ECU 1	HCU1	✓	✓	✓			
DS 5 Hybrid4	hybrid control ECU 2	HCU2	✓	✓	✓			
DS 5 Hybrid4	automatic or piloted manual gearbox	CFC300P_HY	✓	✓	✓	✓		
DS 5 Hybrid4	automatic or piloted manual gearbox	BVA_AM6_AT6_EURO5	✓	✓	✓	✓	✓	
DS 5 Hybrid4	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓			
DS 5 Hybrid4	automatic or piloted manual gearbox	CFC300P	✓	✓	✓	✓		
DS 5 Hybrid4	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP81	✓	✓	✓	✓	✓	

DS 5 Hybrid4	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓			
DS 5 Hybrid4	airbags and pretensioners ECU	RBG_UDS	✓	✓	✓	✓		
DS 5 Hybrid4	built-in systems interface	BSI2010	✓	✓	✓			
DS 5 Hybrid4	power steering	GEP	✓	✓	✓	✓		
DS 5 Hybrid4	Electric steering lock	AVE	✓	✓	✓			
DS 5 Hybrid4	anti-theft alarm	ALARME	✓	✓	✓	✓		
DS 5 Hybrid4	instrument panel	COMBINE UDS	✓	✓	✓	✓		
DS 5 Hybrid4	Control panel dot matrix display	MATT_C_2010	✓	✓	✓			
DS 5 Hybrid4	Control panel dot matrix display	MATT_M_2010	✓	✓	✓			
DS 5 Hybrid4	Hands-free unit	BML	✓	✓	✓			
DS 5 Hybrid4	air conditioning	CLIM REGULEE UDS	✓	✓	✓	✓		
DS 5 Hybrid4	UNDER-INFLATION DETECTION	DSG	✓	✓	✓			
DS 5 Hybrid4	UNDER-INFLATION DETECTION	DSG_UDS	✓	✓	✓			
DS 5 Hybrid4	parking assistance	AAS UDS	✓	✓	✓	✓		
DS 5 Hybrid4	Hybrid mode selector	MCM	✓					
DS 5 Hybrid4	battery charge status control unit	BECB_GEN2	✓	✓	✓			
DS 5 Hybrid4	diesel fuel additive pump	PADDGO_E5	✓	✓	✓			
DS 5 Hybrid4	diesel fuel additive pump	PADDGO_TI_E6	✓	✓	✓			
DS 5 Hybrid4	Electric secondary brake	FSE	✓	✓	✓			
DS 5 Hybrid4	Vibrators control ECU	BPV	✓	✓	✓			

DS 5 Hybrid4	Dynamic headlamp height adjuster	LADCT	✓	✓	✓			
DS 5 Hybrid4	Dynamic headlamp height adjuster	BEMP_2	✓	✓	✓			
DS 5 Hybrid4	engine wiring housing	BSM 2010	✓	✓	✓			
DS 5 Hybrid4	Trailer relay unit	BSG 2010 RQ	✓	✓	✓			
DS 5 Hybrid4	supplies protection and management unit	BPGA2010	✓	✓	✓			
DS 5 Hybrid4	Service module / Independent telematic unit	BTA	✓	✓	✓			
DS 5 Hybrid4	Service module / Independent telematic unit	BLVV	✓	✓	✓			
DS 5 Hybrid4	Service module / Independent telematic unit	BTA_CN	✓	✓	✓			
DS 5 Hybrid4	Service module / Independent telematic unit	BTA_2	✓	✓	✓			
DS 5 Hybrid4	Telematic navigator / separate control pad	CRT_UDS	✓					
DS 5 Hybrid4	controls under the steering wheel	COM2008P	✓	✓	✓	✓		
DS 5 Hybrid4	Electronic key reader	LCE	✓	✓	✓			
DS 5 Hybrid4	seat belt not fastened warning lights unit	TNB_2010	✓					
DS 5 Hybrid4	multifunction screen	EMF A UDS	✓	✓	✓			
DS 5 Hybrid4	multifunction screen	EMF C UDS	✓	✓	✓			
DS 5 Hybrid4	rain and sunlight sensor	PLUIE_LUMINOSITE_UDS	✓	✓	✓	✓		
DS 5 Hybrid4	Multifunction video camera (CMF)	CVM	✓	✓	✓			

DS 5 Hybrid4	Seat driver position memory module.	BDMC	✓	✓	✓	✓		
DS 5 Hybrid4	Head Up Display	VTH UDS	✓	✓	✓			
DS 5 Hybrid4	audio amplifier	AMPLI AUDIO	✓	✓	✓			
DS 5 Hybrid4	Telematic unit (RTx) or audio-navigation	RNEG2010	✓	✓	✓			
DS 5 Hybrid4	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEGC	✓	✓	✓			
DS 5 Hybrid4	Telematic unit (RTx) or audio-navigation	MRN	✓	✓	✓			
DS 5 Hybrid4	Telematic unit (RTx) or audio-navigation	SMEG_PLUS	✓	✓	✓			
DS 5 Hybrid4	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
DS 5 Hybrid4	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓			
DS 5 Hybrid4	Multifunction control panel	FMUX	✓	✓	✓			
DS 5 Hybrid4	radio	RD5	✓	✓	✓	✓		
DS 5 Hybrid4	radio	RD45	✓	✓	✓			
DS 5 Hybrid4	Clock	HORL	✓	✓	✓			
DS 5 Hybrid4	windscreen wiper	ESSUIV UDS	✓	✓	✓			
DS 5 Hybrid4	external CD player	CDE	✓	✓	✓			
DS 5 Hybrid4	touch screen	EMF_DGT LVDS_BD	✓	✓	✓			
C-ZERO	Electric machine management ECU	MCU	✓	✓	✓	✓		
C-ZERO	electric vehicle ECU	EV ECU	✓	✓	✓			
C-ZERO	traction battery ECU	BMU	✓	✓	✓			
C-ZERO	Traction battery cells management ECU ( module 1 )	CMU_01	✓					



C-ZERO	Traction battery cells management ECU ( module 2 )	CMU_02	√					
C-ZERO	Traction battery cells management ECU ( module 3 )	CMU_03	√					
C-ZERO	Traction battery cells management ECU ( module 4 )	CMU_04	√					
C-ZERO	Traction battery cells management ECU ( module 5 )	CMU_05	√					
C-ZERO	Traction battery cells management ECU ( module 7 )	CMU_07	√					
C-ZERO	Traction battery cells management ECU ( module 8 )	CMU_08	√					
C-ZERO	Traction battery cells management ECU ( module 9 )	CMU_09	√					
C-ZERO	Traction battery cells management ECU ( module 10 )	CMU_10	√					
C-ZERO	Traction battery cells management ECU ( module 11 )	CMU_11	√					
C-ZERO	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ASC	√	√	√	√		
C-ZERO	airbags and pretensioners ECU	SRS	√	√	√	√		
C-ZERO	airbags and pretensioners ECU	ORC	√	√	√			

C-ZERO	built-in systems interface	ETACS	✓	✓	✓			
C-ZERO	power steering	EPS	✓	✓	✓	✓		
C-ZERO	instrument panel	METER	✓	✓	✓	✓		
C-ZERO	air conditioning	HVAC	✓	✓	✓	✓		
C-ZERO	Control of the passenger compartment air conditioning and heating compressor	COMP_HTR	✓	✓	✓	✓		
C-ZERO	On-board charger / direct voltage transformer assembly	OBC_DCDC	✓	✓	✓			
C-ZERO	steering wheel angle sensor	SAS	✓	✓	✓	✓		
C-ZERO	Gateway wiring housing	BSP	✓	✓	✓	✓		
C-ZERO	Service module / Independent telematic unit	BTA	✓	✓	✓	✓		
C-ZERO	Service module / Independent telematic unit	BTA_2	✓	✓	✓			
C-ZERO	radio	RDE	✓	✓	✓	✓		
C-ZERO	Passenger compartment thermal programming and traction battery charge ECU	REMOTE_EV	✓	✓	✓			
C1 (B0)	engine management ECU	HDI_SID805	✓	✓	✓	✓	✓	
C1 (B0)	engine management ECU	ME795	✓					
C1 (B0)	automatic or piloted manual gearbox	MMT	✓					
C1 (B0)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS90_T	✓					

C1 (B0)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS_8_0_C1	✓			✓		
C1 (B0)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP_8_0_C1	✓					
C1 (B0)	airbags and pretensioners ECU	SAC_TRW	✓					
C1 (B0)	power steering	DAE	✓					
C1 (B0)	coded immobiliser / Hands-free unit	ADC	✓					
C1 (B0)	radio	RDE	✓	✓	✓			
C1 (B4)	engine management ECU	V46	✓	✓	✓			
C1 (B4)	engine management ECU ( Engine 1KR)	ME17_9_52	✓	✓	✓			
C1 (B4)	automatic or piloted manual gearbox	MMT_T	✓	✓	✓			
C1 (B4)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	RBV	✓	✓	✓			
C1 (B4)	airbags and pretensioners ECU	ABG	✓	✓	✓			
C1 (B4)	power steering	EPS_T	✓	✓	✓			
C1 (B4)	instrument panel	MET	✓	✓	✓			
C1 (B4)	Stop and Start ECU	ECO	✓	✓	✓			
C1 (B4)	coded immobiliser / Hands-free unit	IMMO	✓	✓	✓			
C1 (B4)	Hands-free unit (Entry and start) : starting monitoring	PMN_SC	✓	✓	✓			

C1 (B4)	Hands-free unit (Entry and start) : starting authorised	PMN_PS	✓	✓	✓			
C1 (B4)	Hands-free unit (Entry and start) : Access and starting	IDT	✓	✓	✓			
C1 (B4)	air conditioning	ACN HVAC	✓	✓	✓			
C1 (B4)	multifunction screen	AVN	✓	✓	✓			
C1 (B4)	Multifunction video camera and remote detection by laser assembly	CSP	✓	✓	✓			
C3 (A51)	engine management ECU	MEV17 4 EURO5	✓	✓	✓	✓	✓	S0034
C3 (A51)	engine management ECU	EDC16C3	✓	✓	✓	✓	✓	S0036
C3 (A51)	engine management ECU	EDC17C10	✓	✓	✓	✓	✓	S0037
C3 (A51)	engine management ECU	EDC16C3DV4	✓	✓	✓	✓	✓	S0036
C3 (A51)	engine management ECU	V341	✓	✓	✓	✓	✓	S0034
C3 (A51)	engine management ECU	J34P	✓	✓	✓	✓	✓	S0034
C3 (A51)	engine management ECU	HDI SID807	✓	✓	✓	✓	✓	S0037
C3 (A51)	engine management ECU	EDC17C10 BR2	✓	✓	✓	✓	✓	S0036
C3 (A51)	engine management ECU	MEV17 4 2	✓	✓	✓	✓	✓	S0034
C3 (A51)	engine management ECU	HDI SID807 BR2	✓	✓	✓	✓	✓	S0037
C3 (A51)	engine management ECU	V46	✓	✓	✓	✓		
C3 (A51)	engine management ECU	VD46	✓	✓	✓			
C3 (A51)	engine management ECU	EDC17C60	✓	✓	✓			
C3 (A51)	automatic or piloted manual gearbox	BVA_AL4	✓	✓	✓	✓	✓	
C3 (A51)	automatic or piloted manual gearbox	BVMP	✓	✓	✓	✓		
C3 (A51)	automatic or piloted manual gearbox	MAPS_UDS	✓	✓	✓			
C3 (A51)	automatic or piloted manual gearbox	CFC300P	✓	✓	✓	✓		

C3 (A51)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABSMK70_1	✓	✓	✓	✓	✓	S0039
C3 (A51)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESPMK60_0	✓	✓	✓	✓	✓	S0039
C3 (A51)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABSMK100	✓	✓	✓	✓	✓	S0039
C3 (A51)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESPMK100	✓	✓	✓	✓	✓	S0039
C3 (A51)	airbags and pretensioners ECU	SAC_AUTOLIV	✓	✓	✓	✓		
C3 (A51)	built-in systems interface	BSI	✓	✓	✓			S0033
C3 (A51)	power steering	DAE A515	✓	✓	✓	✓		
C3 (A51)	power steering	DAE UDS	✓	✓	✓			
C3 (A51)	anti-theft alarm	ALARME	✓	✓	✓	✓		
C3 (A51)	instrument panel	COMBINE	✓	✓	✓	✓	✓	
C3 (A51)	air conditioning	CLIM REGULEE	✓	✓	✓	✓		
C3 (A51)	parking assistance	AAS	✓	✓	✓	✓		
C3 (A51)	diesel fuel additive pump	PADDGO	✓	✓	✓	✓		
C3 (A51)	diesel fuel additive pump	PADDGO_TI_E6	✓	✓	✓			
C3 (A51)	battery charge status control unit	BECB	✓	✓	✓	✓		S0031
C3 (A51)	battery charge status control unit	BECB_GEN2	✓	✓	✓			
C3 (A51)	Trailer relay unit	BSR	✓	✓	✓			

C3 (A51)	engine wiring housing	BSM	✓	✓	✓			
C3 (A51)	controls under the steering wheel	HDC	✓	✓	✓	✓		
C3 (A51)	multifunction screen	EMF A	✓	✓	✓	✓		
C3 (A51)	multifunction screen	EMF C	✓	✓	✓	✓		
C3 (A51)	Hands-free Kit / Portable Unit	BOITIER_NOMADE	✓	✓	✓	✓		
C3 (A51)	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG	✓	✓	✓			
C3 (A51)	Telematic unit (RTx) or audio-navigation	RNEG2010	✓	✓	✓			
C3 (A51)	Telematic unit (RTx) or audio-navigation	SMEG_PLUS	✓	✓	✓			
C3 (A51)	radio	AUTORADIO	✓	✓	✓	✓	✓	
C3 (A51)	radio	RD45	✓	✓	✓			
C3 (A51)	driver's door module	PDPC	✓	✓	✓	✓		
C3 (A51)	seat belt not fastened warning lights unit	TNB	✓					
C3 (A51)	driving school module	MAE	✓	✓	✓			
C3 (A51)	rain and sunlight sensor	PLUIE_LUMINOSITE	✓	✓	✓			
C3 (A51)	high frequency receiver	RHF	✓	✓	✓	✓		
C3 (A51)	Service module / Independent telematic unit	BTA	✓	✓	✓	✓		
C3 (A51)	Service module / Independent telematic unit	BTA_2	✓	✓	✓			
C3 (A51)	Voltage maintaining device	DMTC	✓					
C3 (A51)	Voltage maintaining device	DMTR	✓	✓	✓			

C3 (Ai51)	Voltage maintaining device	DMTR_DTC3B	✓	✓	✓			
C3 (Ai51)	engine management ECU	ME749	✓	✓	✓	✓	✓	S0034
C3 (Ai51)	engine management ECU	ME749 EC5	✓	✓	✓	✓		
C3 (Ai51)	engine management ECU	V344	✓	✓	✓	✓		
C3 (Ai51)	engine management ECU	V345	✓	✓	✓			
C3 (Ai51)	engine management ECU	V46	✓	✓	✓			
C3 (Ai51)	engine management ECU	V46_6	✓	✓	✓			
C3 (Ai51)	engine management ECU	V46_21	✓	✓	✓			
C3 (Ai51)	automatic or piloted manual gearbox	BVA_AL4	✓	✓	✓	✓	✓	
C3 (Ai51)	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓			
C3 (Ai51)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABSMK70_1	✓	✓	✓	✓	✓	S0039
C3 (Ai51)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESPMK60_0	✓	✓	✓	✓	✓	S0035, S0039
C3 (Ai51)	airbags and pretensioners ECU	SAC_AUTOLIV	✓	✓	✓	✓		
C3 (Ai51)	built-in systems interface	BSI	✓	✓	✓			S0033
C3 (Ai51)	power steering	DAE_A515	✓	✓	✓	✓		
C3 (Ai51)	power steering	DAE_UDS	✓	✓	✓			
C3 (Ai51)	anti-theft alarm	ALARME LIN	✓	✓	✓	✓		
C3 (Ai51)	instrument panel	COMBINE	✓	✓	✓	✓		
C3 (Ai51)	air conditioning	CLIM REGULEE	✓	✓	✓	✓		
C3 (Ai51)	parking assistance	AAS	✓	✓	✓	✓		
C3 (Ai51)	parking assistance	AAS UDS	✓	✓	✓			
C3 (Ai51)	Trailer relay unit	BSR	✓	✓	✓	✓		
C3 (Ai51)	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG_ECO	✓	✓	✓			

C3 (Ai51)	Telematic unit (RTx) or audio-navigation	SMEG_PLUS	✓	✓	✓			
C3 (Ai51)	radio	RDE	✓	✓	✓	✓		
C3 (Ai51)	radio	RD6	✓	✓	✓			
C3 (Ai51)	controls under the steering wheel	HDC	✓	✓	✓	✓		
C3 (Ai51)	rain and sunlight sensor	PLUIE_LUMINOSITE	✓	✓	✓			
C3 (Ai51)	Service module / Independent telematic unit	BLVV	✓	✓	✓			
C3 (B618)	engine management ECU	EDC17C10 BR2	✓	✓	✓			
C3 (B618)	engine management ECU	V46	✓	✓	✓			
C3 (B618)	engine management ECU	V46 21	✓	✓	✓			
C3 (B618)	engine management ECU	EDC17C60	✓	✓	✓			
C3 (B618)	engine management ECU	VD46	✓	✓	✓			
C3 (B618)	engine management ECU	MED17 4 4	✓	✓	✓			
C3 (B618)	engine management ECU	CMM MD1CS003	✓	✓	✓			
C3 (B618)	engine management ECU	CMM V56	✓	✓	✓			
C3 (B618)	engine management ECU	CMM VD56	✓	✓	✓			
C3 (B618)	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓			
C3 (B618)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓			
C3 (B618)	airbags and pretensioners ECU	RBG_SPEED_UDS	✓	✓	✓			
C3 (B618)	built-in systems interface	BSI2010_EV	✓	✓	✓			
C3 (B618)	power steering	DAE UDS	✓	✓	✓			
C3 (B618)	Electric steering lock	AVE	✓	✓	✓			
C3 (B618)	Intrusion alarm siren	SIR	✓	✓	✓			
C3 (B618)	instrument panel	COMBINE UDS	✓	✓	✓			



C3 (B618)	air conditioning	BCC	✓	✓	✓			
C3 (B618)	air conditioning	TDC CH MUX	✓	✓	✓			
C3 (B618)	air conditioning	TDC RF MUX	✓	✓	✓			
C3 (B618)	parking assistance	AAS UDS	✓	✓	✓			
C3 (B618)	diesel fuel additive pump	PADDGO_TI_E6	✓	✓	✓			
C3 (B618)	Voltage maintaining device	DMTR_DTC3B	✓	✓	✓			
C3 (B618)	Trailer relay unit	BSG_2010_RQ	✓	✓	✓			
C3 (B618)	battery charge status control unit	BECB_GEN2	✓	✓	✓			
C3 (B618)	controls under the steering wheel	COM2008P	✓	✓	✓			
C3 (B618)	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓			
C3 (B618)	Multifunction control panel	FMUX	✓	✓	✓			
C3 (B618)	seat belt not fastened warning lights unit	TNB_2010	✓					
C3 (B618)	rain and sunlight sensor	CDPL_UDS_HELLA	✓	✓	✓			
C3 (B618)	Multifunction video camera (CMF)	CVM_2	✓	✓	✓			
C3 (B618)	multifunction screen	EMF_C_UDS	✓	✓	✓			
C3 (B618)	touch screen	EMF_DGT_UDS_GP	✓	✓	✓			
C3 (B618)	Audio-navigation/telematic unit/connected audio system	NAC	✓	✓	✓			

C3 (B618)	Audio- navigation/telematic unit/connected audio system	RCC	✓	✓	✓			
C3 (B618)	radio	RD6	✓	✓	✓			
C3 (B618)	audio system control panel	CRT_EMF	✓	✓	✓			
C3 (B618)	Service module / Independent telematic unit	BTA_2	✓	✓	✓			
C3 (B618)	external CD player	CDE	✓	✓	✓			
C3 PICASSO (A58)	engine management ECU	MEV17 4 EURO4	✓	✓	✓	✓	✓	
C3 PICASSO (A58)	engine management ECU	MEV17 4 EURO5	✓	✓	✓	✓	✓	
C3 PICASSO (A58)	engine management ECU	MED17 4 EURO4	✓	✓	✓	✓	✓	
C3 PICASSO (A58)	engine management ECU	EDC16C3	✓	✓	✓	✓	✓	S0036
C3 PICASSO (A58)	engine management ECU	EDC17C10	✓	✓	✓	✓	✓	S0037
C3 PICASSO (A58)	engine management ECU	HDI SID807	✓	✓	✓	✓	✓	S0037
C3 PICASSO (A58)	engine management ECU	MEV17 4 2	✓	✓	✓	✓	✓	
C3 PICASSO (A58)	engine management ECU	HDI SID807 BR2	✓	✓	✓	✓	✓	S0037
C3 PICASSO (A58)	engine management ECU	EDC17C10_BR2	✓	✓	✓	✓	✓	S0037, S0036
C3 PICASSO (A58)	engine management ECU	VD46	✓	✓	✓			
C3 PICASSO (A58)	engine management ECU	EDC17C60	✓	✓	✓			
C3 PICASSO (A58)	automatic or piloted manual gearbox	CFC300P	✓	✓	✓	✓	✓	
C3 PICASSO (A58)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABSMK70_1	✓	✓	✓	✓	✓	S0039
C3 PICASSO (A58)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESPMK60_0	✓	✓	✓	✓	✓	S0035, S0039

C3 PICASSO (A58)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABSMK100	✓	✓	✓	✓	✓	S0039
C3 PICASSO (A58)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESPMK100	✓	✓	✓	✓	✓	
C3 PICASSO (A58)	airbags and pretensioners ECU	SAC_AUTOLIV	✓	✓	✓	✓		
C3 PICASSO (A58)	built-in systems interface	BSI	✓	✓	✓			
C3 PICASSO (A58)	power steering	DAE	✓	✓	✓	✓		
C3 PICASSO (A58)	anti-theft alarm	ALARME	✓	✓	✓	✓		
C3 PICASSO (A58)	instrument panel	COMBINE	✓	✓	✓	✓	✓	
C3 PICASSO (A58)	air conditioning	CLIM REGULEE	✓	✓	✓	✓		
C3 PICASSO (A58)	parking assistance	AAS	✓	✓	✓	✓		
C3 PICASSO (A58)	diesel fuel additive pump	PADDGO	✓	✓	✓	✓		
C3 PICASSO (A58)	diesel fuel additive pump	PADDGO_TI_E6	✓	✓	✓			
C3 PICASSO (A58)	battery charge status control unit	BECB	✓	✓	✓	✓		S0031
C3 PICASSO (A58)	battery charge status control unit	BECB_GEN2	✓	✓	✓			
C3 PICASSO (A58)	engine wiring housing	BSM	✓	✓	✓			
C3 PICASSO (A58)	Trailer relay unit	BSR	✓	✓	✓			
C3 PICASSO (A58)	controls under the steering wheel	HDC	✓	✓	✓	✓	✓	
C3 PICASSO (A58)	multifunction screen	EMF A	✓	✓	✓	✓		
C3 PICASSO (A58)	multifunction screen	EMF C	✓	✓	✓	✓		
C3 PICASSO (A58)	radio	AUTORADIO	✓	✓	✓	✓	✓	
C3 PICASSO (A58)	radio	RD45	✓	✓	✓			
C3 PICASSO (A58)	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG	✓	✓	✓			

C3 PICASSO (A58)	Telematic unit (RTx) or audio-navigation	RNEG2010	✓	✓	✓			
C3 PICASSO (A58)	Hands-free Kit / Portable Unit	BOITIER_NOMADE	✓	✓	✓	✓	✓	
C3 PICASSO (A58)	driver's door module	PDPC	✓	✓	✓	✓	✓	
C3 PICASSO (A58)	seat belt not fastened warning lights unit	TNB	✓					
C3 PICASSO (A58)	Service module / Independent telematic unit	BTA	✓	✓	✓	✓		
C3 PICASSO (A58)	rain and sunlight sensor	PLUIE_LUMINOSITE	✓	✓	✓			
C3 PICASSO (A58)	high frequency receiver	RHF	✓	✓	✓			
C3 PICASSO (A58)	Voltage maintaining device	DMTC	✓					
C3 PICASSO (Ai58)	engine management ECU	ME749	✓	✓	✓	✓	✓	S0034
C3 PICASSO (Ai58)	engine management ECU	ME749 EC5	✓	✓	✓	✓		
C3 PICASSO (Ai58)	engine management ECU	V344	✓	✓	✓	✓		
C3 PICASSO (Ai58)	engine management ECU	V345	✓	✓	✓			
C3 PICASSO (Ai58)	engine management ECU	V46	✓	✓	✓			
C3 PICASSO (Ai58)	engine management ECU	V46 6	✓	✓	✓			
C3 PICASSO (Ai58)	engine management ECU	V46 21	✓	✓	✓			
C3 PICASSO (Ai58)	automatic or piloted manual gearbox	BVA_AL4	✓	✓	✓	✓	✓	
C3 PICASSO (Ai58)	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓			
C3 PICASSO (Ai58)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABSMK70_1	✓	✓	✓	✓	✓	S0039

C3 PICASSO (Ai58)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESPMK60_0	✓	✓	✓	✓	✓	S0035, S0039
C3 PICASSO (Ai58)	airbags and pretensioners ECU	SAC_AUTOLIV	✓	✓	✓	✓		
C3 PICASSO (Ai58)	built-in systems interface	BSI	✓	✓	✓			S0033
C3 PICASSO (Ai58)	power steering	DAE A515	✓	✓	✓	✓		
C3 PICASSO (Ai58)	power steering	DAE UDS	✓	✓	✓			
C3 PICASSO (Ai58)	anti-theft alarm	ALARME LIN	✓	✓	✓	✓		
C3 PICASSO (Ai58)	instrument panel	COMBINE	✓	✓	✓	✓		
C3 PICASSO (Ai58)	air conditioning	CLIM REGULEE	✓	✓	✓	✓		
C3 PICASSO (Ai58)	parking assistance	AAS	✓	✓	✓	✓		
C3 PICASSO (Ai58)	parking assistance	AAS UDS	✓	✓	✓			
C3 PICASSO (Ai58)	Trailer relay unit	BSR	✓	✓	✓	✓		
C3 PICASSO (Ai58)	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG_ECO	✓	✓	✓			
C3 PICASSO (Ai58)	Telematic unit (RTx) or audio-navigation	SMEG_PLUS	✓	✓	✓			
C3 PICASSO (Ai58)	radio	RDE	✓	✓	✓	✓		
C3 PICASSO (Ai58)	radio	RD6	✓	✓	✓			
C3 PICASSO (Ai58)	controls under the steering wheel	HDC	✓	✓	✓	✓		
C3 PICASSO (Ai58)	rain and sunlight sensor	PLUIE_LUMINOSITE	✓	✓	✓			
C3 PICASSO (Ai58)	Service module / Independent telematic unit	BLVV	✓	✓	✓			
C3 Aircross (Ai58)	engine management ECU	ME749	✓	✓	✓	✓	✓	S0034
C3 Aircross (Ai58)	engine management ECU	ME749 EC5	✓	✓	✓	✓		
C3 Aircross (Ai58)	engine management ECU	V344	✓	✓	✓	✓		
C3 Aircross (Ai58)	engine management ECU	V345	✓	✓	✓			
C3 Aircross (Ai58)	engine management ECU	V46	✓	✓	✓			
C3 Aircross (Ai58)	engine management ECU	V46 6	✓	✓	✓			

C3 Aircross (Ai58)	engine management ECU	V46 21	✓	✓	✓			
C3 Aircross (Ai58)	automatic or piloted manual gearbox	BVA_AL4	✓	✓	✓	✓	✓	
C3 Aircross (Ai58)	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓			
C3 Aircross (Ai58)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABSMK70_1	✓	✓	✓	✓	✓	S0039
C3 Aircross (Ai58)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESPMK60_0	✓	✓	✓	✓	✓	S0035, S0039
C3 Aircross (Ai58)	airbags and pretensioners ECU	SAC_AUTOLIV	✓	✓	✓	✓		
C3 Aircross (Ai58)	built-in systems interface	BSI	✓	✓	✓			S0033
C3 Aircross (Ai58)	power steering	DAE A515	✓	✓	✓	✓		
C3 Aircross (Ai58)	power steering	DAE UDS	✓	✓	✓			
C3 Aircross (Ai58)	anti-theft alarm	ALARME LIN	✓	✓	✓	✓		
C3 Aircross (Ai58)	instrument panel	COMBINE	✓	✓	✓	✓		
C3 Aircross (Ai58)	air conditioning	CLIM REGULEE	✓	✓	✓	✓		
C3 Aircross (Ai58)	parking assistance	AAS	✓	✓	✓	✓		
C3 Aircross (Ai58)	parking assistance	AAS UDS	✓	✓	✓			
C3 Aircross (Ai58)	Trailer relay unit	BSR	✓	✓	✓	✓		
C3 Aircross (Ai58)	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG_ECO	✓	✓	✓			
C3 Aircross (Ai58)	Telematic unit (RTx) or audio-navigation	SMEG_PLUS	✓	✓	✓			
C3 Aircross (Ai58)	radio	RDE	✓	✓	✓	✓		
C3 Aircross (Ai58)	radio	RD6	✓	✓	✓			
C3 Aircross (Ai58)	controls under the steering wheel	HDC	✓	✓	✓	✓		
C3 Aircross (Ai58)	rain and sunlight sensor	PLUIE_LUMINOSITE	✓	✓	✓			

C3 Aircross (Ai58)	Service module / Independent telematic unit	BLVV	✓	✓	✓			
C3 Aircross (A88)	engine management ECU	EDC17C10_BR2	✓	✓	✓	✓	✓	S0036, S0037
C3 Aircross (A88)	engine management ECU	V46	✓	✓	✓	✓		S0034
C3 Aircross (A88)	engine management ECU	EDC17C60	✓	✓	✓	✓		
C3 Aircross (A88)	engine management ECU	VD46	✓	✓	✓	✓		
C3 Aircross (A88)	engine management ECU	CMM_V56	✓	✓	✓			
C3 Aircross (A88)	engine management ECU	CMM_MD1CS003	✓	✓	✓			
C3 Aircross (A88)	engine management ECU	CMM_VD56	✓	✓	✓			
C3 Aircross (A88)	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓	✓		
C3 Aircross (A88)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓	✓		S0035, S0039 , S0038
C3 Aircross (A88)	airbags and pretensioners ECU	RBG_SPEED_UDS	✓	✓	✓			
C3 Aircross (A88)	built-in systems interface	BSI2010_EV	✓	✓	✓			
C3 Aircross (A88)	Electric steering lock	AVE	✓	✓	✓	✓		
C3 Aircross (A88)	power steering	DAE UDS	✓	✓	✓			
C3 Aircross (A88)	anti-theft alarm	MUS2	✓	✓	✓	✓		
C3 Aircross (A88)	Intrusion alarm siren	SIR	✓	✓	✓			
C3 Aircross (A88)	instrument panel	COMBINE UDS	✓	✓	✓	✓		
C3 Aircross (A88)	air conditioning	BCC	✓	✓	✓	✓		
C3 Aircross (A88)	parking assistance	AAS UDS	✓	✓	✓	✓		
C3 Aircross (A88)	Traction control mode selector	ASR	✓			✓		
C3 Aircross (A88)	seat belt not fastened warning lights unit	TNB_2010	✓					

C3 Aircross (A88)	battery charge status control unit	BECB_GEN2	✓	✓	✓	✓		
C3 Aircross (A88)	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓	✓		
C3 Aircross (A88)	Voltage maintaining device	DMTR_DTC3B	✓	✓	✓			
C3 Aircross (A88)	driver's door module	PDPC UDS	✓	✓	✓	✓		
C3 Aircross (A88)	audio system control panel	CRT_EMF	✓	✓	✓			
C3 Aircross (A88)	controls under the steering wheel	COM2008P	✓	✓	✓	✓		
C3 Aircross (A88)	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
C3 Aircross (A88)	Telematic unit (RTx) or audio-navigation	RCC	✓	✓	✓			
C3 Aircross (A88)	Trailer relay unit	BSG 2010 RQ	✓	✓	✓	✓		
C3 Aircross (A88)	rain and sunlight sensor	CDPL_UDS_HELLA	✓	✓	✓	✓		
C3 Aircross (A88)	multifunction screen	EMF_C UDS	✓	✓	✓	✓		
C3 Aircross (A88)	touch screen	EMF_DGT UDS_GP	✓	✓	✓			
C3 Aircross (A88)	diesel fuel additive pump	PADDGO	✓	✓	✓	✓		
C3 Aircross (A88)	diesel fuel additive pump	PADDGO_TI_E6	✓	✓	✓	✓		
C3 Aircross (A88)	Service module / Independent telematic unit	BTA_2	✓	✓	✓			
C3 Aircross (A88)	Service module / Independent telematic unit	BTA_3R	✓	✓	✓			
C3 Aircross (A88)	Service module / Independent telematic unit	BTA_3S	✓	✓	✓			



C3 Aircross (A88)	Multifunction video camera (CMF)	CVM_2	✓	✓	✓			
C3 Aircross (A88)	Head Up Display	VTH UDS	✓	✓	✓	✓		
C3 Aircross (A88)	external CD player	CDE	✓	✓	✓	✓		
C3 Aircross (A88)	Multifunction control panel	FMUX	✓	✓	✓	✓		
C3 Aircross (A88)	radio	RD6	✓	✓	✓			
C-ELYSEE	engine management ECU	V46 21	✓	✓	✓	✓	✓	
C-ELYSEE	engine management ECU	EDC17C10 BR2	✓	✓	✓	✓	✓	S0036
C-ELYSEE	engine management ECU	V46	✓	✓	✓	✓	✓	
C-ELYSEE	engine management ECU	ME745 EC5	✓	✓	✓	✓	✓	
C-ELYSEE	engine management ECU	MED17 4 4	✓	✓	✓	✓		
C-ELYSEE	engine management ECU	EDC17C60	✓	✓	✓			
C-ELYSEE	engine management ECU	V46 52	✓	✓	✓			
C-ELYSEE	engine management ECU	VD46	✓	✓	✓			
C-ELYSEE	engine management ECU	CMM V56	✓	✓	✓			
C-ELYSEE	engine management ECU	CMM MD1CS003	✓	✓	✓			
C-ELYSEE	automatic or piloted manual gearbox	BVA_AL4	✓	✓	✓	✓	✓	
C-ELYSEE	automatic or piloted manual gearbox	MAPS_UDS	✓	✓	✓			
C-ELYSEE	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓	✓		
C-ELYSEE	automatic or piloted manual gearbox	DCT_6DCT200	✓	✓	✓			
C-ELYSEE	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABSMK100	✓	✓	✓	✓	✓	S0039
C-ELYSEE	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESPMK100	✓	✓	✓	✓	✓	

C-ELYSEE	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓			
C-ELYSEE	airbags and pretensioners ECU	RBG_UDS	✓	✓	✓	✓		
C-ELYSEE	built-in systems interface	BSI2010	✓	✓	✓			S0033
C-ELYSEE	power steering	DAE	✓	✓	✓	✓		
C-ELYSEE	power steering	DAE A515	✓	✓	✓	✓		
C-ELYSEE	power steering	GEP	✓	✓	✓			
C-ELYSEE	power steering	DAE UDS	✓	✓	✓			
C-ELYSEE	Intrusion alarm siren	SIR	✓	✓	✓			
C-ELYSEE	instrument panel	COMBINE UDS	✓	✓	✓	✓		
C-ELYSEE	parking assistance	AAS UDS	✓	✓	✓	✓		
C-ELYSEE	diesel fuel additive pump	PADDGO	✓	✓	✓	✓		
C-ELYSEE	diesel fuel additive pump	PADDGO_TI_E6	✓	✓	✓			
C-ELYSEE	Voltage maintaining device	DMTR	✓	✓	✓			
C-ELYSEE	Voltage maintaining device	DMTR_DTC3B	✓	✓	✓			
C-ELYSEE	Trailer relay unit	BSG 2010 RQ	✓	✓	✓	✓		
C-ELYSEE	battery charge status control unit	BECB_GEN2	✓	✓	✓			
C-ELYSEE	controls under the steering wheel	HDC	✓	✓	✓	✓		
C-ELYSEE	controls under the steering wheel	COM2008P	✓	✓	✓			
C-ELYSEE	multifunction screen	EMF A UDS	✓	✓	✓			
C-ELYSEE	multifunction screen	EMF C UDS	✓	✓	✓	✓		
C-ELYSEE	touch screen	EMF DGT LVDS BD	✓	✓	✓			
C-ELYSEE	Telematic unit (RTx) or audio-navigation	MRN	✓	✓	✓	✓		

C-ELYSEE	Telematic unit (RTx) or audio-navigation	RCC	✓	✓	✓			
C-ELYSEE	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
C-ELYSEE	radio	RDE	✓	✓	✓	✓		
C-ELYSEE	radio	RD45	✓	✓	✓	✓		
C-ELYSEE	radio	RD6 CN	✓	✓	✓			
C3-XR	engine management ECU	V46 21	✓	✓	✓	✓	✓	
C3-XR	engine management ECU	EDC17C10 BR2	✓	✓	✓	✓	✓	S0036
C3-XR	engine management ECU	V46	✓	✓	✓	✓	✓	
C3-XR	engine management ECU	ME745 EC5	✓	✓	✓	✓	✓	
C3-XR	engine management ECU	MED17 4 4	✓	✓	✓	✓		
C3-XR	engine management ECU	EDC17C60	✓	✓	✓			
C3-XR	engine management ECU	V46 52	✓	✓	✓			
C3-XR	engine management ECU	VD46	✓	✓	✓			
C3-XR	engine management ECU	CMM V56	✓	✓	✓			
C3-XR	engine management ECU	CMM MD1CS003	✓	✓	✓			
C3-XR	automatic or piloted manual gearbox	BVA_AL4	✓	✓	✓	✓	✓	
C3-XR	automatic or piloted manual gearbox	MAPS_UDS	✓	✓	✓			
C3-XR	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓	✓		
C3-XR	automatic or piloted manual gearbox	DCT_6DCT200	✓	✓	✓			
C3-XR	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABSMK100	✓	✓	✓	✓	✓	S0039
C3-XR	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESPMK100	✓	✓	✓	✓	✓	

C3-XR	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓			
C3-XR	airbags and pretensioners ECU	RBG_UDS	✓	✓	✓	✓		
C3-XR	built-in systems interface	BSI2010	✓	✓	✓			S0033
C3-XR	power steering	DAE	✓	✓	✓	✓		
C3-XR	power steering	DAE A515	✓	✓	✓	✓		
C3-XR	power steering	GEP	✓	✓	✓			
C3-XR	power steering	DAE UDS	✓	✓	✓			
C3-XR	Electric steering lock	AVE	✓	✓	✓	✓		
C3-XR	instrument panel	COMBINE UDS	✓	✓	✓	✓		
C3-XR	Hands-free unit	BML	✓	✓	✓	✓		
C3-XR	parking assistance	AAS UDS	✓	✓	✓	✓		
C3-XR	Voltage maintaining device	DMTR	✓	✓	✓			
C3-XR	Voltage maintaining device	DMTR_DTC3B	✓	✓	✓			
C3-XR	battery charge status control unit	BECB_GEN2	✓	✓	✓			
C3-XR	Electronic key reader	LCE	✓	✓	✓	✓		
C3-XR	controls under the steering wheel	HDC	✓	✓	✓	✓		
C3-XR	controls under the steering wheel	COM2008P	✓	✓	✓			
C3-XR	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓	✓		
C3-XR	Traction control mode selector	ASR	✓			✓		

C3-XR	Multifunction control panel	FMUX	✓	✓	✓	✓		
C3-XR	multifunction screen	EMF A UDS	✓	✓	✓			
C3-XR	multifunction screen	EMF C UDS	✓	✓	✓	✓		
C3-XR	touch screen	EMF DGT LVDS BD	✓	✓	✓			
C3-XR	Telematic unit (RTx) or audio-navigation	MRN	✓	✓	✓	✓		
C3-XR	Telematic unit (RTx) or audio-navigation	RCC	✓	✓	✓			
C3-XR	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
C3-XR	radio	RDE	✓	✓	✓	✓		
C3-XR	radio	RD45	✓	✓	✓	✓		
C3-XR	radio	RD6 CN	✓	✓	✓			
C3-XR	Service module / Independent telematic unit	BTA_CN	✓	✓	✓	✓		
C4	engine management ECU	DCM35 BR2	✓	✓	✓	✓	✓	
C4	engine management ECU	HDI SID803	✓	✓	✓	✓	✓	
C4	engine management ECU	MM6LP	✓	✓	✓	✓	✓	
C4	engine management ECU	MM6LPB	✓	✓	✓	✓	✓	S0034
C4	engine management ECU	ME745	✓	✓	✓	✓	✓	S0034
C4	engine management ECU	EDC16C3	✓	✓	✓	✓	✓	
C4	engine management ECU	HDI SID803A	✓	✓	✓	✓	✓	S0037
C4	engine management ECU	MED17 4 EURO4	✓	✓	✓	✓	✓	S0034
C4	engine management ECU	DCM34	✓	✓	✓	✓	✓	S0037, S0036
C4	engine management ECU	MEV17 4 EURO4	✓	✓	✓	✓	✓	S0034
C4	engine management ECU	MEV17 4 EURO5	✓	✓	✓	✓	✓	
C4	engine management ECU	ME749	✓	✓	✓	✓	✓	S0034
C4	engine management ECU	EDC15C2	✓	✓	✓	✓	✓	
C4	engine management ECU	EDC15C2	✓	✓	✓	✓	✓	
C4	engine management ECU	MM6KP	✓	✓	✓	✓	✓	
C4	engine management ECU	DCM35	✓	✓	✓	✓	✓	S0037, S0036

C4	engine management ECU	MEV17 4 2	✓	✓	✓	✓	✓	
C4	engine management ECU	MED17 4 2	✓	✓	✓	✓	✓	
C4	engine management ECU	HDI SID807 BR2	✓	✓	✓	✓	✓	S0037
C4	engine management ECU	HDI SID807	✓	✓	✓	✓	✓	
C4	engine management ECU	MED17 4 EURO5	✓	✓	✓	✓	✓	
C4	engine management ECU	MM6LPC	✓	✓	✓	✓	✓	
C4	automatic or piloted manual gearbox	BVA_AM6_AT6_EUR05	✓	✓	✓	✓	✓	
C4	automatic or piloted manual gearbox	BVA_AL4	✓	✓	✓	✓	✓	
C4	automatic or piloted manual gearbox	BVA_AM6	✓	✓	✓	✓		
C4	automatic or piloted manual gearbox	CFC300P	✓	✓	✓	✓	✓	
C4	automatic gearbox electric control ECU	COMELBVA	✓	✓	✓	✓		
C4	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS8_BOSCH	✓	✓	✓	✓		
C4	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP8_BOSCH	✓	✓	✓	✓	✓	
C4	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS81	✓	✓	✓	✓	✓	
C4	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP81	✓	✓	✓	✓	✓	
C4	airbags and pretensioners ECU	SAC_AUTOLIV	✓	✓	✓	✓		

C4	built-in systems interface	BSI	✓	✓	✓			S0033
C4	power steering	GEP	✓	✓	✓	✓		
C4	power steering	GEP	✓	✓	✓	✓	✓	
C4	anti-theft alarm	ALARME	✓	✓	✓	✓		
C4	instrument panel	COMBINE	✓	✓	✓	✓	✓	
C4	Separate instrument panel	COMPTE_TOURS	✓	✓	✓	✓		
C4	air conditioning	CLIM_REGULEE	✓	✓	✓	✓		
C4	UNDER-INFLATION DETECTION	DSG	✓	✓	✓	✓		
C4	parking assistance	AAS	✓	✓	✓	✓		
C4	pneumatic suspension	SUSPENSION	✓	✓	✓			
C4	diesel additive	ADDGO3	✓	✓	✓	✓		
C4	diesel fuel additive pump	PADDGO	✓	✓	✓	✓		
C4	diesel fuel additive pump	PADDGO_E5	✓	✓	✓	✓	✓	
C4	Dynamic headlamp height adjuster	PROJECTEURS	✓	✓	✓			
C4	battery charge status control unit	BECB	✓	✓	✓			
C4	battery charge status control unit	BECB_GEN2	✓	✓	✓			
C4	Electric secondary brake	FSE	✓	✓	✓	✓		S0038
C4	lane wandering alert	AFIL	✓	✓	✓	✓		
C4	engine wiring housing	BSM	✓	✓	✓		✓	
C4	Trailer relay unit	BSR	✓	✓	✓			
C4	multifunction screen	EMF A	✓			✓		
C4	multifunction screen	EMF C	✓			✓		
C4	windscreen wiper	MOTEV	✓	✓	✓			
C4	controls under the steering wheel	VCCF	✓	✓	✓	✓	✓	
C4	audio amplifier	AMPLI AUDIO	✓	✓	✓			

C4	CD changer / external CD player	CHANGEUR_CD	✓	✓	✓	✓		
C4	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG	✓	✓	✓			
C4	Telematic unit (RTx) or audio-navigation	BOITIER_TELEMATIQUE	✓	✓	✓			
C4	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG_ECO	✓	✓	✓			
C4	Telematic unit (RTx) or audio-navigation	RNEG2010	✓	✓	✓			
C4	radio	AUTORADIO	✓	✓	✓	✓	✓	
C4	radio	RD45	✓	✓	✓	✓		
C4	Hands-free Kit / Portable Unit	KML	✓	✓	✓	✓	✓	
C4	Hands-free Kit / Portable Unit	BOITIER_NOMADE	✓	✓	✓	✓		
C4	Seat driver position memory module.	BDMC	✓	✓	✓	✓		
C4	passenger door module	EDPP	✓	✓	✓	✓	✓	
C4	driver's door module	EDPC	✓	✓	✓	✓	✓	
C4	interior ambiance lighting control unit	BPL	✓	✓	✓	✓		
C4	rain and sunlight sensor	PLUIE_LUMINOSITE	✓	✓	✓			
C4	driving school module	MAE	✓	✓	✓			
C4	high frequency receiver	RHF	✓	✓	✓	✓		
C4	Service module / Independent telematic unit	BTA	✓	✓	✓			S0033
C4	Service module / Independent telematic unit	BLVV	✓	✓	✓			
C4 SEDAN	engine management ECU	DCM35 BR2	✓	✓	✓	✓	✓	
C4 SEDAN	engine management ECU	HDI SID803	✓	✓	✓	✓	✓	



C4 SEDAN	engine management ECU	MM6LP	✓	✓	✓	✓	✓	
C4 SEDAN	engine management ECU	MM6LPB	✓	✓	✓	✓	✓	S0034
C4 SEDAN	engine management ECU	ME745	✓	✓	✓	✓	✓	S0034
C4 SEDAN	engine management ECU	EDC16C3	✓	✓	✓	✓	✓	
C4 SEDAN	engine management ECU	HDI SID803A	✓	✓	✓	✓	✓	S0037
C4 SEDAN	engine management ECU	MED17 4 EURO4	✓	✓	✓	✓	✓	S0034
C4 SEDAN	engine management ECU	DCM34	✓	✓	✓	✓	✓	S0037, S0036
C4 SEDAN	engine management ECU	MEV17 4 EURO4	✓	✓	✓	✓	✓	S0034
C4 SEDAN	engine management ECU	MEV17 4 EURO5	✓	✓	✓	✓	✓	
C4 SEDAN	engine management ECU	ME749	✓	✓	✓	✓	✓	S0034
C4 SEDAN	engine management ECU	EDC15C2	✓	✓	✓	✓	✓	
C4 SEDAN	engine management ECU	EDC15C2	✓	✓	✓	✓	✓	
C4 SEDAN	engine management ECU	MM6KP	✓	✓	✓	✓	✓	
C4 SEDAN	engine management ECU	DCM35	✓	✓	✓	✓	✓	S0037, S0036
C4 SEDAN	engine management ECU	MEV17 4 2	✓	✓	✓	✓	✓	
C4 SEDAN	engine management ECU	MED17 4 2	✓	✓	✓	✓	✓	
C4 SEDAN	engine management ECU	HDI SID807 BR2	✓	✓	✓	✓	✓	S0037
C4 SEDAN	engine management ECU	HDI SID807	✓	✓	✓	✓	✓	
C4 SEDAN	engine management ECU	MED17 4 EURO5	✓	✓	✓	✓	✓	
C4 SEDAN	engine management ECU	MM6LPC	✓	✓	✓	✓	✓	
C4 SEDAN	automatic or piloted manual gearbox	BVA_AM6_AT6_EURO5	✓	✓	✓	✓	✓	
C4 SEDAN	automatic or piloted manual gearbox	BVA_AL4	✓	✓	✓	✓	✓	
C4 SEDAN	automatic or piloted manual gearbox	BVA_AM6	✓	✓	✓	✓		
C4 SEDAN	automatic or piloted manual gearbox	CFC300P	✓	✓	✓	✓	✓	
C4 SEDAN	automatic gearbox electric control ECU	COMELBVA	✓	✓	✓	✓		

C4 SEDAN	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS8_BOSCH	✓	✓	✓	✓		
C4 SEDAN	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP8_BOSCH	✓	✓	✓	✓	✓	
C4 SEDAN	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS81	✓	✓	✓	✓	✓	
C4 SEDAN	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP81	✓	✓	✓	✓	✓	
C4 SEDAN	airbags and pretensioners ECU	SAC_AUTOLIV	✓	✓	✓	✓		
C4 SEDAN	built-in systems interface	BSI	✓	✓	✓			S0033
C4 SEDAN	power steering	GEP	✓	✓	✓	✓		
C4 SEDAN	power steering	GEP	✓	✓	✓	✓	✓	
C4 SEDAN	anti-theft alarm	ALARME	✓	✓	✓	✓		
C4 SEDAN	instrument panel	COMBINE	✓	✓	✓	✓	✓	
C4 SEDAN	Separate instrument panel	COMPTE_TOURS	✓	✓	✓	✓		
C4 SEDAN	air conditioning	CLIM_REGULEE	✓	✓	✓	✓		
C4 SEDAN	UNDER-INFLATION DETECTION	DSG	✓	✓	✓	✓		
C4 SEDAN	parking assistance	AAS	✓	✓	✓	✓		
C4 SEDAN	pneumatic suspension	SUSPENSION	✓	✓	✓			
C4 SEDAN	diesel additive	ADDG03	✓	✓	✓	✓		
C4 SEDAN	diesel fuel additive pump	PADDGO	✓	✓	✓	✓		

C4 SEDAN	diesel fuel additive pump	PADDGO_E5	✓	✓	✓	✓	✓	
C4 SEDAN	Dynamic headlamp height adjuster	PROJECTEURS	✓	✓	✓			
C4 SEDAN	battery charge status control unit	BECB	✓	✓	✓			
C4 SEDAN	battery charge status control unit	BECB_GEN2	✓	✓	✓			
C4 SEDAN	Electric secondary brake	FSE	✓	✓	✓	✓		S0038
C4 SEDAN	lane wandering alert	AFIL	✓	✓	✓	✓		
C4 SEDAN	engine wiring housing	BSM	✓	✓	✓		✓	
C4 SEDAN	Trailer relay unit	BSR	✓	✓	✓			
C4 SEDAN	multifunction screen	EMF A	✓			✓		
C4 SEDAN	multifunction screen	EMF C	✓			✓		
C4 SEDAN	windscreen wiper	MOTEV	✓	✓	✓			
C4 SEDAN	controls under the steering wheel	VCCF	✓	✓	✓	✓	✓	
C4 SEDAN	audio amplifier	AMPLI AUDIO	✓	✓	✓			
C4 SEDAN	CD changer / external CD player	CHANGEUR_CD	✓	✓	✓	✓		
C4 SEDAN	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG	✓	✓	✓			
C4 SEDAN	Telematic unit (RTx) or audio-navigation	BOITIER_TELEMATIQUE	✓	✓	✓			
C4 SEDAN	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG_ECO	✓	✓	✓			
C4 SEDAN	Telematic unit (RTx) or audio-navigation	RNEG2010	✓	✓	✓			
C4 SEDAN	radio	AUTORADIO	✓	✓	✓	✓	✓	
C4 SEDAN	radio	RD45	✓	✓	✓	✓		
C4 SEDAN	Hands-free Kit / Portable Unit	KML	✓	✓	✓	✓	✓	
C4 SEDAN	Hands-free Kit / Portable Unit	BOITIER_NOMADE	✓	✓	✓	✓		

C4 SEDAN	Seat driver position memory module.	BDMC	✓	✓	✓	✓		
C4 SEDAN	passenger door module	EDPP	✓	✓	✓	✓	✓	
C4 SEDAN	driver's door module	EDPC	✓	✓	✓	✓	✓	
C4 SEDAN	interior ambiance lighting control unit	BPL	✓	✓	✓	✓		
C4 SEDAN	rain and sunlight sensor	PLUIE_LUMINOSITE	✓	✓	✓			
C4 SEDAN	driving school module	MAE	✓	✓	✓			
C4 SEDAN	high frequency receiver	RHF	✓	✓	✓	✓		
C4 SEDAN	Service module / Independent telematic unit	BTA	✓	✓	✓			S0033
C4 SEDAN	Service module / Independent telematic unit	BLVV	✓	✓	✓			
C4 (B7)	engine management ECU	DCM35_BR2	✓	✓	✓	✓	✓	S0037
C4 (B7)	engine management ECU	EDC17C10_BR2	✓	✓	✓	✓	✓	S0037, S0036
C4 (B7)	engine management ECU	HDI_SID807_BR2	✓	✓	✓			
C4 (B7)	engine management ECU	MEV17 4 2	✓	✓	✓	✓	✓	S0034
C4 (B7)	engine management ECU	MED17 4 2	✓	✓	✓	✓	✓	
C4 (B7)	engine management ECU	MEVD17 4 2	✓	✓	✓	✓		S0034
C4 (B7)	engine management ECU	ME745	✓	✓	✓	✓	✓	S0034
C4 (B7)	engine management ECU	ME745 EC5	✓	✓	✓	✓	✓	
C4 (B7)	engine management ECU	V46 21	✓	✓	✓	✓	✓	
C4 (B7)	engine management ECU	V46 32	✓	✓	✓	✓	✓	
C4 (B7)	engine management ECU	MM6KP	✓	✓	✓			
C4 (B7)	engine management ECU	VD46	✓	✓	✓			
C4 (B7)	engine management ECU	EDC17C60	✓	✓	✓			
C4 (B7)	engine management ECU	MED17 4 4	✓	✓	✓	✓		S0034
C4 (B7)	engine management ECU	DCM62	✓	✓	✓			
C4 (B7)	engine management ECU	MEVD17 4 4	✓	✓	✓			
C4 (B7)	engine management ECU	ME749 EC5	✓	✓	✓			

C4 (B7)	automatic or piloted manual gearbox	BVA_AL4	✓	✓	✓	✓	✓	
C4 (B7)	automatic or piloted manual gearbox	BVA_AM6_AT6_EUR05	✓	✓	✓	✓	✓	
C4 (B7)	automatic or piloted manual gearbox	CFC300P	✓	✓	✓	✓		
C4 (B7)	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓	✓		
C4 (B7)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS81	✓	✓	✓	✓	✓	S0035, S0039
C4 (B7)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP81	✓	✓	✓	✓	✓	S0035, S0039
C4 (B7)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓			
C4 (B7)	airbags and pretensioners ECU	RBG_UDS	✓	✓	✓	✓		
C4 (B7)	built-in systems interface	BSI2010	✓	✓	✓			S0033
C4 (B7)	power steering	GEP	✓	✓	✓	✓		
C4 (B7)	Electric steering lock	AVE	✓	✓	✓			
C4 (B7)	anti-theft alarm	ALARME	✓	✓	✓	✓		
C4 (B7)	instrument panel	COMBINE_UDS	✓	✓	✓	✓		
C4 (B7)	Control panel dot matrix display	MATT_C_2010	✓	✓	✓			
C4 (B7)	Control panel dot matrix display	MATT_M_2010	✓	✓	✓			
C4 (B7)	Control panel dot matrix display	MATT_P_2010	✓	✓	✓			

C4 (B7)	Hands-free unit	BML	✓	✓	✓			
C4 (B7)	air conditioning	CLIM_REGULEE_UDS	✓	✓	✓	✓		
C4 (B7)	air conditioning	BCC	✓	✓	✓			
C4 (B7)	UNDER-INFLATION DETECTION	DSG	✓	✓	✓			
C4 (B7)	UNDER-INFLATION DETECTION	DSG_UDS	✓	✓	✓			
C4 (B7)	parking assistance	AAS_UDS	✓	✓	✓	✓		
C4 (B7)	diesel fuel additive pump	PADDGO_E5	✓	✓	✓	✓		
C4 (B7)	diesel fuel additive pump	PADDGO_TI_E6	✓	✓	✓			
C4 (B7)	Voltage maintaining device	DMTC	✓					
C4 (B7)	Voltage maintaining device	DMTR	✓	✓	✓			
C4 (B7)	Voltage maintaining device	DMTR_DTC3B	✓	✓	✓			
C4 (B7)	Electric secondary brake	FSE	✓	✓	✓			
C4 (B7)	Dynamic headlamp height adjuster	LADCT	✓	✓	✓			
C4 (B7)	Dynamic headlamp height adjuster	BEMP	✓	✓	✓			
C4 (B7)	engine wiring housing	BSM_2010	✓	✓	✓			
C4 (B7)	Trailer relay unit	BSG_2010_RQ	✓	✓	✓	✓		
C4 (B7)	battery charge status control unit	BECB_GEN2	✓	✓	✓	✓		
C4 (B7)	supplies protection and management unit	BPGA2010	✓	✓	✓			
C4 (B7)	Electronic key reader	LCE	✓	✓	✓			
C4 (B7)	controls under the steering wheel	HDC	✓	✓	✓	✓		
C4 (B7)	controls under the steering wheel	COM2008P	✓	✓	✓	✓		

C4 (B7)	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓			
C4 (B7)	Multifunction control panel	FMUX	✓	✓	✓			
C4 (B7)	driving school module	MAE	✓	✓	✓			
C4 (B7)	seat belt not fastened warning lights unit	TNB_2010	✓					
C4 (B7)	rain and sunlight sensor	PLUIE_LUMINOSITE_UDS	✓	✓	✓	✓		
C4 (B7)	lane wandering alert	AFIL	✓	✓	✓	✓		
C4 (B7)	Blind spot monitoring	SAM	✓	✓	✓			
C4 (B7)	multifunction screen	EMF A UDS	✓	✓	✓			
C4 (B7)	multifunction screen	EMF C UDS	✓	✓	✓			
C4 (B7)	touch screen	EMF DGT LVDS BD	✓	✓	✓			
C4 (B7)	Telematic unit (RTx) or audio-navigation	MRN	✓	✓	✓			
C4 (B7)	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEGC	✓	✓	✓			
C4 (B7)	Telematic unit (RTx) or audio-navigation	RNEG2010	✓	✓	✓			
C4 (B7)	Telematic unit (RTx) or audio-navigation	SMEG_PLUS	✓	✓	✓			
C4 (B7)	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
C4 (B7)	Telematic unit (RTx) or audio-navigation	RCC	✓	✓	✓			
C4 (B7)	Telematic unit (RTx) or audio-navigation	AIO	✓	✓	✓			
C4 (B7)	radio	RD5	✓	✓	✓	✓		
C4 (B7)	radio	RD45	✓	✓	✓			
C4 (B7)	radio	RD6 CN	✓	✓	✓			

C4 (B7)	Service module / Independent telematic unit	BTA	✓	✓	✓	✓		
C4 (B7)	Service module / Independent telematic unit	BLVV	✓	✓	✓			
C4 (B7)	Service module / Independent telematic unit	BTA_CN	✓	✓	✓			
C4 (B7)	Service module / Independent telematic unit	BTA_2	✓	✓	✓			
C4 (B7)	Service module / Independent telematic unit	BTA_3R	✓	✓	✓			
C4 (B7)	Service module / Independent telematic unit	BTA_3S	✓	✓	✓			
C4 (B7)	external CD player	CDE	✓	✓	✓			
C4 (B7)	audio amplifier	AMPLI AUDIO	✓	✓	✓			
C4 (B7)	driver's door module	PDPC	✓	✓	✓	✓		
C4 (B7)	Seat driver position memory module.	BDMC	✓	✓	✓	✓		
C4 L / C4 SEDAN (B7)	engine management ECU	DCM35_BR2	✓	✓	✓	✓	✓	S0037
C4 L / C4 SEDAN (B7)	engine management ECU	EDC17C10_BR2	✓	✓	✓	✓	✓	S0037, S0036
C4 L / C4 SEDAN (B7)	engine management ECU	HDI_SID807_BR2	✓	✓	✓			
C4 L / C4 SEDAN (B7)	engine management ECU	MEV17_4_2	✓	✓	✓	✓	✓	S0034
C4 L / C4 SEDAN (B7)	engine management ECU	MED17_4_2	✓	✓	✓	✓	✓	
C4 L / C4 SEDAN (B7)	engine management ECU	MEVD17_4_2	✓	✓	✓	✓		S0034



C4 L / C4 SEDAN (B7)	engine management ECU	ME745	✓	✓	✓	✓	✓	S0034
C4 L / C4 SEDAN (B7)	engine management ECU	ME745_EC5	✓	✓	✓	✓	✓	
C4 L / C4 SEDAN (B7)	engine management ECU	V46_21	✓	✓	✓	✓	✓	
C4 L / C4 SEDAN (B7)	engine management ECU	V46_32	✓	✓	✓	✓	✓	
C4 L / C4 SEDAN (B7)	engine management ECU	MM6KP	✓	✓	✓			
C4 L / C4 SEDAN (B7)	engine management ECU	VD46	✓	✓	✓			
C4 L / C4 SEDAN (B7)	engine management ECU	EDC17C60	✓	✓	✓			
C4 L / C4 SEDAN (B7)	engine management ECU	MED17_4_4	✓	✓	✓	✓		S0034
C4 L / C4 SEDAN (B7)	engine management ECU	DCM62	✓	✓	✓			
C4 L / C4 SEDAN (B7)	engine management ECU	MEVD17_4_4	✓	✓	✓			
C4 L / C4 SEDAN (B7)	engine management ECU	ME749_EC5	✓	✓	✓			
C4 L / C4 SEDAN (B7)	automatic or piloted manual gearbox	BVA_AL4	✓	✓	✓	✓	✓	
C4 L / C4 SEDAN (B7)	automatic or piloted manual gearbox	BVA_AM6_AT6_EUR05	✓	✓	✓	✓	✓	
C4 L / C4 SEDAN (B7)	automatic or piloted manual gearbox	CFC300P	✓	✓	✓	✓		
C4 L / C4 SEDAN (B7)	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓	✓		
C4 L / C4 SEDAN (B7)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS81	✓	✓	✓	✓	✓	S0035, S0039

C4 L / C4 SEDAN (B7)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP81	✓	✓	✓	✓	✓	S0035, S0039
C4 L / C4 SEDAN (B7)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓			
C4 L / C4 SEDAN (B7)	airbags and pretensioners ECU	RBG_UDS	✓	✓	✓	✓		
C4 L / C4 SEDAN (B7)	built-in systems interface	BSI2010	✓	✓	✓			S0033
C4 L / C4 SEDAN (B7)	power steering	GEP	✓	✓	✓	✓		
C4 L / C4 SEDAN (B7)	Electric steering lock	AVE	✓	✓	✓			
C4 L / C4 SEDAN (B7)	anti-theft alarm	ALARME	✓	✓	✓	✓		
C4 L / C4 SEDAN (B7)	instrument panel	COMBINE_UDS	✓	✓	✓	✓		
C4 L / C4 SEDAN (B7)	Control panel dot matrix display	MATT_C_2010	✓	✓	✓			
C4 L / C4 SEDAN (B7)	Control panel dot matrix display	MATT_M_2010	✓	✓	✓			
C4 L / C4 SEDAN (B7)	Control panel dot matrix display	MATT_P_2010	✓	✓	✓			
C4 L / C4 SEDAN (B7)	Hands-free unit	BML	✓	✓	✓			
C4 L / C4 SEDAN (B7)	air conditioning	CLIM_REGULEE_UDS	✓	✓	✓	✓		
C4 L / C4 SEDAN (B7)	air conditioning	BCC	✓	✓	✓			
C4 L / C4 SEDAN (B7)	UNDER-INFLATION DETECTION	DSG	✓	✓	✓			

C4 L / C4 SEDAN (B7)	UNDER-INFLATION DETECTION	DSG_UDS	✓	✓	✓			
C4 L / C4 SEDAN (B7)	parking assistance	AAS_UDS	✓	✓	✓	✓		
C4 L / C4 SEDAN (B7)	Voltage maintaining device	DMTC	✓					
C4 L / C4 SEDAN (B7)	Voltage maintaining device	DMTR	✓	✓	✓			
C4 L / C4 SEDAN (B7)	Voltage maintaining device	DMTR_DTC3B	✓	✓	✓			
C4 L / C4 SEDAN (B7)	engine wiring housing	BSM_2010	✓	✓	✓			
C4 L / C4 SEDAN (B7)	battery charge status control unit	BECB_GEN2	✓	✓	✓	✓		
C4 L / C4 SEDAN (B7)	supplies protection and management unit	BPGA2010	✓	✓	✓			
C4 L / C4 SEDAN (B7)	Electronic key reader	LCE	✓	✓	✓			
C4 L / C4 SEDAN (B7)	controls under the steering wheel	HDC	✓	✓	✓	✓		
C4 L / C4 SEDAN (B7)	controls under the steering wheel	COM2008P	✓	✓	✓	✓		
C4 L / C4 SEDAN (B7)	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓			
C4 L / C4 SEDAN (B7)	Multifunction control panel	FMUX	✓	✓	✓			
C4 L / C4 SEDAN (B7)	rain and sunlight sensor	PLUIE_LUMINOSITE_UDS	✓	✓	✓	✓		
C4 L / C4 SEDAN (B7)	Multifunction video recording camera	IDVR	✓	✓	✓			
C4 L / C4 SEDAN (B7)	multifunction screen	EMF_A_UDS	✓	✓	✓			

C4 L / C4 SEDAN (B7)	multifunction screen	EMF_C_UDS	✓	✓	✓			
C4 L / C4 SEDAN (B7)	Telematic unit (RTx) or audio-navigation	MRN	✓	✓	✓			
C4 L / C4 SEDAN (B7)	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEGC	✓	✓	✓			
C4 L / C4 SEDAN (B7)	Telematic unit (RTx) or audio-navigation	RNEG2010	✓	✓	✓			
C4 L / C4 SEDAN (B7)	Telematic unit (RTx) or audio-navigation	SMEG_PLUS	✓	✓	✓			
C4 L / C4 SEDAN (B7)	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
C4 L / C4 SEDAN (B7)	Telematic unit (RTx) or audio-navigation	RCC	✓	✓	✓			
C4 L / C4 SEDAN (B7)	Telematic unit (RTx) or audio-navigation	AIO	✓	✓	✓			
C4 L / C4 SEDAN (B7)	radio	RD5	✓	✓	✓	✓		
C4 L / C4 SEDAN (B7)	radio	RD45	✓	✓	✓			
C4 L / C4 SEDAN (B7)	radio	RD6_CN	✓	✓	✓			
C4 L / C4 SEDAN (B7)	Service module / Independent telematic unit	BTA	✓	✓	✓	✓		
C4 L / C4 SEDAN (B7)	Service module / Independent telematic unit	BLVV	✓	✓	✓			
C4 L / C4 SEDAN (B7)	Service module / Independent telematic unit	BTA_CN	✓	✓	✓			
C4 L / C4 SEDAN (B7)	Service module / Independent telematic unit	BTA_2	✓	✓	✓			

C4 L / C4 SEDAN (B7)	Service module / Independent telematic unit	BTA_3R	✓	✓	✓			
C4 L / C4 SEDAN (B7)	Service module / Independent telematic unit	BTA_3S	✓	✓	✓			
C4 China	engine management ECU	V46 21	✓	✓	✓	✓	✓	
C4 China	engine management ECU	EDC17C10_BR2	✓	✓	✓	✓	✓	S0036
C4 China	engine management ECU	V46	✓	✓	✓	✓	✓	
C4 China	engine management ECU	ME745 EC5	✓	✓	✓	✓	✓	
C4 China	engine management ECU	MED17 4 4	✓	✓	✓	✓		
C4 China	engine management ECU	EDC17C60	✓	✓	✓			
C4 China	engine management ECU	V46 52	✓	✓	✓			
C4 China	engine management ECU	VD46	✓	✓	✓			
C4 China	engine management ECU	CMM V56	✓	✓	✓			
C4 China	engine management ECU	CMM MD1CS003	✓	✓	✓			
C4 China	automatic or piloted manual gearbox	BVA_AL4	✓	✓	✓	✓	✓	
C4 China	automatic or piloted manual gearbox	MAPS_UDS	✓	✓	✓			
C4 China	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓	✓		
C4 China	automatic or piloted manual gearbox	DCT_6DCT200	✓	✓	✓			
C4 China	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABSMK100	✓	✓	✓	✓	✓	S0039
C4 China	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESPMK100	✓	✓	✓	✓	✓	

C4 China	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓			
C4 China	airbags and pretensioners ECU	RBG_UDS	✓	✓	✓	✓		
C4 China	built-in systems interface	BSI2010	✓	✓	✓			S0033
C4 China	power steering	DAE	✓	✓	✓	✓		
C4 China	power steering	DAE A515	✓	✓	✓	✓		
C4 China	power steering	GEP	✓	✓	✓			
C4 China	power steering	DAE UDS	✓	✓	✓			
C4 China	Electric steering lock	AVE	✓	✓	✓	✓		
C4 China	instrument panel	COMBINE UDS	✓	✓	✓	✓		
C4 China	Hands-free unit	BML	✓	✓	✓	✓		
C4 China	air conditioning	CLIM REGULEE UDS	✓	✓	✓			
C4 China	parking assistance	AAS UDS	✓	✓	✓	✓		
C4 China	Voltage maintaining device	DMTR	✓	✓	✓			
C4 China	Voltage maintaining device	DMTR_DTC3B	✓	✓	✓			
C4 China	battery charge status control unit	BECB_GEN2	✓	✓	✓			
C4 China	Electronic key reader	LCE	✓	✓	✓	✓		
C4 China	controls under the steering wheel	HDC	✓	✓	✓	✓		
C4 China	controls under the steering wheel	COM2008P	✓	✓	✓			
C4 China	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓	✓		
C4 China	Multifunction control panel	FMUX	✓	✓	✓	✓		

C4 China	rain and sunlight sensor	PLUIE_LUMINOSITE_UDS	✓	✓	✓			
C4 China	Multifunction video recording camera	IDVR	✓	✓	✓			
C4 China	Telematic unit (RTx) or audio-navigation	MRN	✓	✓	✓	✓		
C4 China	Telematic unit (RTx) or audio-navigation	RCC	✓	✓	✓			
C4 China	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
C4 China	Service module / Independent telematic unit	BTA_CN	✓	✓	✓	✓		
C4 CACTUS (E3)	engine management ECU	EDC17C10 BR2	✓	✓	✓	✓		
C4 CACTUS (E3)	engine management ECU	ME749 EC5	✓	✓	✓			
C4 CACTUS (E3)	engine management ECU	V46	✓	✓	✓	✓		
C4 CACTUS (E3)	engine management ECU	V46 21	✓	✓	✓			
C4 CACTUS (E3)	engine management ECU	V46 6	✓	✓	✓			
C4 CACTUS (E3)	engine management ECU	VD46	✓	✓	✓	✓		
C4 CACTUS (E3)	engine management ECU	EDC17C60	✓	✓	✓	✓		
C4 CACTUS (E3)	engine management ECU	MED17 4 4	✓	✓	✓			
C4 CACTUS (E3)	engine management ECU	CMM MD1CS003	✓	✓	✓			
C4 CACTUS (E3)	engine management ECU	CMM VD56	✓	✓	✓			
C4 CACTUS (E3)	automatic or piloted manual gearbox	CFC300P	✓	✓	✓	✓		
C4 CACTUS (E3)	automatic or piloted manual gearbox	MAPS_UDS	✓	✓	✓	✓		
C4 CACTUS (E3)	automatic or piloted manual gearbox	BVMP_MCP_UDS	✓	✓	✓			
C4 CACTUS (E3)	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓			
C4 CACTUS (E3)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABSMK100	✓	✓	✓			

C4 CACTUS (E3)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESPMK100	✓	✓	✓	✓		
C4 CACTUS (E3)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓			
C4 CACTUS (E3)	airbags and pretensioners ECU	RBG_UDS	✓	✓	✓	✓		
C4 CACTUS (E3)	built-in systems interface	BSI2010	✓	✓	✓			S0033
C4 CACTUS (E3)	built-in systems interface	BSI2010_EV	✓	✓	✓			
C4 CACTUS (E3)	power steering	DAE	✓	✓	✓	✓		
C4 CACTUS (E3)	power steering	DAE UDS	✓	✓	✓			
C4 CACTUS (E3)	instrument panel	COMBINE UDS	✓	✓	✓	✓		
C4 CACTUS (E3)	air conditioning	BCC	✓	✓	✓	✓		
C4 CACTUS (E3)	parking assistance	AAS UDS	✓	✓	✓	✓		
C4 CACTUS (E3)	parking assistance	AAS UDS G6	✓	✓	✓			
C4 CACTUS (E3)	diesel fuel additive pump	PADDGO	✓	✓	✓	✓		
C4 CACTUS (E3)	diesel fuel additive pump	PADDGO_TI_E6	✓	✓	✓	✓		
C4 CACTUS (E3)	Voltage maintaining device	DMTC	✓					
C4 CACTUS (E3)	Voltage maintaining device	DMTR	✓	✓	✓			
C4 CACTUS (E3)	Voltage maintaining device	DMTR_DTC3B	✓	✓	✓			
C4 CACTUS (E3)	Trailer relay unit	BSG 2010 RQ	✓	✓	✓	✓		
C4 CACTUS (E3)	battery charge status control unit	BECB_GEN2	✓	✓	✓			
C4 CACTUS (E3)	controls under the steering wheel	COM2008P	✓	✓	✓	✓		



C4 CACTUS (E3)	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓	✓		
C4 CACTUS (E3)	Traction control mode selector	ASR	✓					
C4 CACTUS (E3)	Multifunction control panel	FMUX	✓	✓	✓			
C4 CACTUS (E3)	seat belt not fastened warning lights unit	TNB_2010	✓					
C4 CACTUS (E3)	rain and sunlight sensor	CDPL_UDS_HELLA	✓	✓	✓	✓		
C4 CACTUS (E3)	touch screen	EMF DGT UDS	✓	✓	✓			
C4 CACTUS (E3)	touch screen	EMF DGT UDS GP	✓	✓	✓			
C4 CACTUS (E3)	Telematic unit (RTx) or audio-navigation	SMEG_PLUS	✓	✓	✓	✓		
C4 CACTUS (E3)	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
C4 CACTUS (E3)	Telematic unit (RTx) or audio-navigation	RCC	✓	✓	✓			
C4 CACTUS (E3)	Telematic unit (RTx) or audio-navigation	AIO	✓	✓	✓			
C4 CACTUS (E3)	Telematic unit (RTx) or audio-navigation	RCE	✓	✓	✓			
C4 CACTUS (E3)	Service module / Independent telematic unit	BTA	✓	✓	✓	✓		
C4 CACTUS (E3)	Service module / Independent telematic unit	BTA_2	✓	✓	✓			
C4 CACTUS (E3)	external CD player	CDE	✓	✓	✓	✓		
C4 CACTUS (F3)	engine management ECU	EDC17C10 BR2	✓	✓	✓	✓		
C4 CACTUS (F3)	engine management ECU	ME749 EC5	✓	✓	✓			
C4 CACTUS (F3)	engine management ECU	V46	✓	✓	✓	✓		

C4 CACTUS (F3)	engine management ECU	V46 21	✓	✓	✓			
C4 CACTUS (F3)	engine management ECU	V46 6	✓	✓	✓			
C4 CACTUS (F3)	engine management ECU	VD46	✓	✓	✓	✓		
C4 CACTUS (F3)	engine management ECU	EDC17C60	✓	✓	✓	✓		
C4 CACTUS (F3)	engine management ECU	MED17 4 4	✓	✓	✓			
C4 CACTUS (F3)	engine management ECU	CMM MD1CS003	✓	✓	✓			
C4 CACTUS (F3)	engine management ECU	CMM VD56	✓	✓	✓			
C4 CACTUS (F3)	automatic or piloted manual gearbox	CFC300P	✓	✓	✓	✓		
C4 CACTUS (F3)	automatic or piloted manual gearbox	MAPS_UDS	✓	✓	✓	✓		
C4 CACTUS (F3)	automatic or piloted manual gearbox	BVMP_MCP_UDS	✓	✓	✓			
C4 CACTUS (F3)	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓			
C4 CACTUS (F3)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABSMK100	✓	✓	✓			
C4 CACTUS (F3)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESPMK100	✓	✓	✓	✓		
C4 CACTUS (F3)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓			
C4 CACTUS (F3)	airbags and pretensioners ECU	RBG_UDS	✓	✓	✓	✓		
C4 CACTUS (F3)	built-in systems interface	BSI2010	✓	✓	✓			S0033
C4 CACTUS (F3)	built-in systems interface	BSI2010_EV	✓	✓	✓			
C4 CACTUS (F3)	power steering	DAE	✓	✓	✓	✓		
C4 CACTUS (F3)	power steering	DAE UDS	✓	✓	✓			

C4 CACTUS (F3)	instrument panel	COMBINE UDS	✓	✓	✓	✓		
C4 CACTUS (F3)	air conditioning	BCC	✓	✓	✓	✓		
C4 CACTUS (F3)	parking assistance	AAS UDS	✓	✓	✓	✓		
C4 CACTUS (F3)	parking assistance	AAS UDS G6	✓	✓	✓			
C4 CACTUS (F3)	diesel fuel additive pump	PADDGO	✓	✓	✓	✓		
C4 CACTUS (F3)	diesel fuel additive pump	PADDGO_TI_E6	✓	✓	✓	✓		
C4 CACTUS (F3)	Voltage maintaining device	DMTC	✓					
C4 CACTUS (F3)	Voltage maintaining device	DMTR	✓	✓	✓			
C4 CACTUS (F3)	Voltage maintaining device	DMTR_DTC3B	✓	✓	✓			
C4 CACTUS (F3)	Trailer relay unit	BSG 2010 RQ	✓	✓	✓	✓		
C4 CACTUS (F3)	battery charge status control unit	BECB_GEN2	✓	✓	✓			
C4 CACTUS (F3)	controls under the steering wheel	COM2008P	✓	✓	✓	✓		
C4 CACTUS (F3)	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓	✓		
C4 CACTUS (F3)	Traction control mode selector	ASR	✓					
C4 CACTUS (F3)	Multifunction control panel	FMUX	✓	✓	✓			
C4 CACTUS (F3)	seat belt not fastened warning lights unit	TNB_2010	✓					
C4 CACTUS (F3)	rain and sunlight sensor	CDPL_UDS_HELLA	✓	✓	✓	✓		
C4 CACTUS (F3)	touch screen	EMF DGT UDS	✓	✓	✓			
C4 CACTUS (F3)	touch screen	EMF DGT UDS GP	✓	✓	✓			

C4 CACTUS (F3)	Telematic unit (RTx) or audio-navigation	SMEG_PLUS	✓	✓	✓	✓		
C4 CACTUS (F3)	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
C4 CACTUS (F3)	Telematic unit (RTx) or audio-navigation	RCC	✓	✓	✓			
C4 CACTUS (F3)	Telematic unit (RTx) or audio-navigation	AIO	✓	✓	✓			
C4 CACTUS (F3)	Telematic unit (RTx) or audio-navigation	RCE	✓	✓	✓			
C4 CACTUS (F3)	Service module / Independent telematic unit	BTA	✓	✓	✓	✓		
C4 CACTUS (F3)	Service module / Independent telematic unit	BTA_2	✓	✓	✓			
C4 CACTUS (F3)	external CD player	CDE	✓	✓	✓	✓		
C4 PICASSO	engine management ECU	DCM35 BR2	✓	✓	✓	✓	✓	
C4 PICASSO	engine management ECU	HDI SID803	✓	✓	✓	✓	✓	
C4 PICASSO	engine management ECU	MM6LP	✓	✓	✓	✓	✓	
C4 PICASSO	engine management ECU	MM6LPB	✓	✓	✓	✓	✓	S0034
C4 PICASSO	engine management ECU	ME745	✓	✓	✓	✓	✓	S0034
C4 PICASSO	engine management ECU	EDC16C3	✓	✓	✓	✓	✓	
C4 PICASSO	engine management ECU	HDI SID803A	✓	✓	✓	✓	✓	S0037
C4 PICASSO	engine management ECU	MED17 4 EURO4	✓	✓	✓	✓	✓	S0034
C4 PICASSO	engine management ECU	DCM34	✓	✓	✓	✓	✓	S0037, S0036
C4 PICASSO	engine management ECU	MEV17 4 EURO4	✓	✓	✓	✓	✓	S0034
C4 PICASSO	engine management ECU	MEV17 4 EURO5	✓	✓	✓	✓	✓	
C4 PICASSO	engine management ECU	ME749	✓	✓	✓	✓	✓	S0034
C4 PICASSO	engine management ECU	EDC15C2	✓	✓	✓	✓	✓	
C4 PICASSO	engine management ECU	EDC15C2	✓	✓	✓	✓	✓	
C4 PICASSO	engine management ECU	MM6KP	✓	✓	✓	✓	✓	
C4 PICASSO	engine management ECU	DCM35	✓	✓	✓	✓	✓	S0037, S0036

C4 PICASSO	engine management ECU	MEV17 4 2	✓	✓	✓	✓	✓	
C4 PICASSO	engine management ECU	MED17 4 2	✓	✓	✓	✓	✓	
C4 PICASSO	engine management ECU	HDI SID807 BR2	✓	✓	✓	✓	✓	S0037
C4 PICASSO	engine management ECU	HDI SID807	✓	✓	✓	✓	✓	
C4 PICASSO	engine management ECU	MED17 4 EURO5	✓	✓	✓	✓	✓	
C4 PICASSO	engine management ECU	MM6LPC	✓	✓	✓	✓	✓	
C4 PICASSO	automatic or piloted manual gearbox	BVA_AM6_AT6_EUR05	✓	✓	✓	✓	✓	
C4 PICASSO	automatic or piloted manual gearbox	BVA_AL4	✓	✓	✓	✓	✓	
C4 PICASSO	automatic or piloted manual gearbox	BVA_AM6	✓	✓	✓	✓		
C4 PICASSO	automatic or piloted manual gearbox	CFC300P	✓	✓	✓	✓	✓	
C4 PICASSO	automatic gearbox electric control ECU	COMELBVA	✓	✓	✓	✓		
C4 PICASSO	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS8_BOSCH	✓	✓	✓	✓		
C4 PICASSO	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP8_BOSCH	✓	✓	✓	✓	✓	
C4 PICASSO	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS81	✓	✓	✓	✓	✓	
C4 PICASSO	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP81	✓	✓	✓	✓	✓	
C4 PICASSO	airbags and pretensioners ECU	SAC_AUTOLIV	✓	✓	✓	✓		

C4 PICASSO	built-in systems interface	BSI	✓	✓	✓			S0033
C4 PICASSO	power steering	GEP	✓	✓	✓	✓		
C4 PICASSO	power steering	GEP	✓	✓	✓	✓	✓	
C4 PICASSO	anti-theft alarm	ALARME	✓	✓	✓	✓		
C4 PICASSO	instrument panel	COMBINE	✓	✓	✓	✓	✓	
C4 PICASSO	Separate instrument panel	COMPTE_TOURS	✓	✓	✓	✓		
C4 PICASSO	air conditioning	CLIM_REGULEE	✓	✓	✓	✓		
C4 PICASSO	UNDER-INFLATION DETECTION	DSG	✓	✓	✓	✓		
C4 PICASSO	parking assistance	AAS	✓	✓	✓	✓		
C4 PICASSO	pneumatic suspension	SUSPENSION	✓	✓	✓			
C4 PICASSO	diesel fuel additive pump	PADDGO	✓	✓	✓	✓		
C4 PICASSO	diesel fuel additive pump	PADDGO_E5	✓	✓	✓	✓	✓	
C4 PICASSO	Dynamic headlamp height adjuster	PROJECTEURS	✓	✓	✓			
C4 PICASSO	battery charge status control unit	BECB	✓	✓	✓			
C4 PICASSO	battery charge status control unit	BECB_GEN2	✓	✓	✓			
C4 PICASSO	Electric secondary brake	FSE	✓	✓	✓	✓		S0038
C4 PICASSO	lane wandering alert	AFIL	✓	✓	✓	✓		
C4 PICASSO	engine wiring housing	BSM	✓	✓	✓		✓	
C4 PICASSO	Trailer relay unit	BSR	✓	✓	✓			
C4 PICASSO	windscreen wiper	MOTEV	✓	✓	✓			
C4 PICASSO	controls under the steering wheel	VCCF	✓	✓	✓	✓	✓	
C4 PICASSO	audio amplifier	AMPLI_AUDIO	✓	✓	✓			
C4 PICASSO	CD changer / external CD player	CHANGEUR_CD	✓	✓	✓	✓		

C4 PICASSO	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG	✓	✓	✓			
C4 PICASSO	Telematic unit (RTx) or audio-navigation	BOITIER_TELEMATIQUE	✓	✓	✓			
C4 PICASSO	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG_ECO	✓	✓	✓			
C4 PICASSO	Telematic unit (RTx) or audio-navigation	RNEG2010	✓	✓	✓			
C4 PICASSO	radio	AUTORADIO	✓	✓	✓	✓	✓	
C4 PICASSO	radio	RD45	✓	✓	✓	✓		
C4 PICASSO	Hands-free Kit / Portable Unit	KML	✓	✓	✓	✓	✓	
C4 PICASSO	Hands-free Kit / Portable Unit	BOITIER_NOMADE	✓	✓	✓	✓		
C4 PICASSO	Voltage maintaining device	DMTC	✓					
C4 PICASSO	Seat driver position memory module.	BDMC	✓	✓	✓	✓		
C4 PICASSO	passenger door module	EDPP	✓	✓	✓	✓	✓	
C4 PICASSO	driver's door module	EDPC	✓	✓	✓	✓	✓	
C4 PICASSO	interior ambiance lighting control unit	BPL	✓	✓	✓	✓		
C4 PICASSO	rain and sunlight sensor	PLUIE_LUMINOSITE	✓	✓	✓			
C4 PICASSO	high frequency receiver	RHF	✓	✓	✓	✓		
C4 PICASSO	Service module / Independent telematic unit	BTA	✓	✓	✓			S0033
C4 PICASSO	Service module / Independent telematic unit	BLVV	✓	✓	✓			
C4 SPACETOURER (B78)	engine management ECU	HDI_SID807_BR2	✓	✓	✓	✓	✓	S0037

C4 SPACETOURER (B78)	engine management ECU	EDC17C10_BR2	✓	✓	✓	✓	✓	S0037
C4 SPACETOURER (B78)	engine management ECU	MED17_4_2	✓	✓	✓	✓	✓	
C4 SPACETOURER (B78)	engine management ECU	MEV17_4_2	✓	✓	✓	✓	✓	S0034
C4 SPACETOURER (B78)	engine management ECU	DCM62	✓	✓	✓			
C4 SPACETOURER (B78)	engine management ECU	EDC17C60	✓	✓	✓			
C4 SPACETOURER (B78)	engine management ECU	VD46	✓	✓	✓			
C4 SPACETOURER (B78)	engine management ECU	MED17_4_4	✓	✓	✓	✓		
C4 SPACETOURER (B78)	engine management ECU	CMM_DCM71	✓	✓	✓			
C4 SPACETOURER (B78)	engine management ECU	CMM_MD1CS003	✓	✓	✓			
C4 SPACETOURER (B78)	engine management ECU	CMM_VD56	✓	✓	✓			
C4 SPACETOURER (B78)	engine management ECU	CMM_MG1CS042	✓	✓	✓			
C4 SPACETOURER (B78)	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓	✓		
C4 SPACETOURER (B78)	automatic or piloted manual gearbox	CFC300P	✓	✓	✓	✓		
C4 SPACETOURER (B78)	automatic or piloted manual gearbox	BVA_AXN8	✓	✓	✓			
C4 SPACETOURER (B78)	automatic gearbox electric control ECU	COMELEC2	✓	✓	✓			
C4 SPACETOURER (B78)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓			



C4 SPACETOURER (B78)	airbags and pretensioners ECU	RBG_UDS	✓	✓	✓	✓		
C4 SPACETOURER (B78)	built-in systems interface	BSI2010	✓	✓	✓	✓		S0033
C4 SPACETOURER (B78)	built-in systems interface	BSI2010_EV	✓	✓	✓			
C4 SPACETOURER (B78)	Electric steering lock	AVE	✓	✓	✓			
C4 SPACETOURER (B78)	power steering	DAE_BVH2	✓	✓	✓			
C4 SPACETOURER (B78)	anti-theft alarm	MUS	✓	✓	✓	✓		
C4 SPACETOURER (B78)	Intrusion alarm siren	SIR	✓	✓	✓			
C4 SPACETOURER (B78)	instrument panel	CIROCCO	✓	✓	✓	✓		
C4 SPACETOURER (B78)	instrument panel	COMBINE_UDS	✓	✓	✓	✓		
C4 SPACETOURER (B78)	Hands-free unit	BML	✓	✓	✓			
C4 SPACETOURER (B78)	Hands full access ECU, right-hand side or rear	BAAST	✓					
C4 SPACETOURER (B78)	air conditioning	BCC	✓	✓	✓	✓		
C4 SPACETOURER (B78)	parking assistance	AAS_UDS	✓	✓	✓	✓		
C4 SPACETOURER (B78)	engine wiring housing	BSM_2010	✓	✓	✓			
C4 SPACETOURER (B78)	Trailer relay unit	BSG_2010_RQ	✓	✓	✓	✓		
C4 SPACETOURER (B78)	controls under the steering wheel	COM2008P	✓	✓	✓	✓		
C4 SPACETOURER (B78)	external CD player	CDE	✓	✓	✓			

C4 SPACETOURER (B78)	audio amplifier	AMPLI_AUDIO	✓	✓	✓			
C4 SPACETOURER (B78)	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓			
C4 SPACETOURER (B78)	Multifunction video camera (CMF)	CVM	✓	✓	✓			
C4 SPACETOURER (B78)	Multifunction video camera (CMF)	CVM_2	✓	✓	✓			
C4 SPACETOURER (B78)	front left wiper motor	MOTEV_UDS	✓	✓	✓			
C4 SPACETOURER (B78)	front right wiper motor	MOTED_UDS	✓	✓	✓			
C4 SPACETOURER (B78)	Vehicle Distance Assistance	ARTIV_UDS	✓	✓	✓			
C4 SPACETOURER (B78)	Seat driver position memory module.	BDMC	✓	✓	✓	✓		
C4 SPACETOURER (B78)	rain and sunlight sensor	PLUIE_LUMINOSITE_UDS	✓	✓	✓	✓		
C4 SPACETOURER (B78)	rain and sunlight sensor	CDPL_UDS_HELLA	✓	✓	✓			
C4 SPACETOURER (B78)	Right-hand reversible seat belt inertia reel	ECR_D	✓	✓	✓			
C4 SPACETOURER (B78)	Left-hand reversible seat belt inertia reel	ECR_G	✓	✓	✓			
C4 SPACETOURER (B78)	battery charge status control unit	BECB_GEN2	✓	✓	✓	✓		
C4 SPACETOURER (B78)	Multifunction control panel	FMUX	✓	✓	✓			
C4 SPACETOURER (B78)	Telematic unit (RTx) or audio-navigation	SMEG_PLUS	✓	✓	✓			

C4 SPACETOURER (B78)	Telematic unit (RTx) or audio-navigation	MRN	✓	✓	✓			
C4 SPACETOURER (B78)	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
C4 SPACETOURER (B78)	Telematic unit (RTx) or audio-navigation	RCC	✓	✓	✓			
C4 SPACETOURER (B78)	Dynamic headlamp height adjuster	LADCT	✓	✓	✓			
C4 SPACETOURER (B78)	Electronic key reader	LCE	✓	✓	✓			
C4 SPACETOURER (B78)	Signalling fuse box	BSG_S	✓	✓	✓			
C4 SPACETOURER (B78)	driver's door module	PDPC_UDS	✓	✓	✓			
C4 SPACETOURER (B78)	supplies protection and management unit	BPGA2010	✓	✓	✓			
C4 SPACETOURER (B78)	Service module / Independent telematic unit	BTA	✓	✓	✓			
C4 SPACETOURER (B78)	Service module / Independent telematic unit	BTA_2	✓	✓	✓			
C4 SPACETOURER (B78)	Service module / Independent telematic unit	BTA_3R	✓	✓	✓			
C4 SPACETOURER (B78)	Service module / Independent telematic unit	BTA_3S	✓	✓	✓			
C4 SPACETOURER (B78)	Voltage maintaining device	DMTC	✓					
C4 SPACETOURER (B78)	Voltage maintaining device	DMTR	✓	✓	✓			
C4 SPACETOURER (B78)	Voltage maintaining device	DMTR_DTC3B	✓	✓	✓			

C4 SPACETOURER (B78)	Motorised Boot Unit	VERINS_MOTORISES	✓	✓	✓			
C4 SPACETOURER (B78)	diesel fuel additive pump	PADDGO_INERGY	✓	✓	✓			
C4 SPACETOURER (B78)	Panoramic visual assistance ECU	AVP	✓	✓	✓			
C4 SPACETOURER (B78)	additional heating	CHAUFF_ADD	✓	✓	✓			
C4 SPACETOURER (B78)	touch screen	EMF_DGT_LVDS_BD	✓	✓	✓			
C4 SPACETOURER (B78)	Driver's seat comfort ECU	SCB_D	✓	✓	✓			
C4 Aircross (J4)	engine management ECU	MIVEC	✓	✓	✓	✓	✓	
C4 Aircross (J4)	engine management ECU	CMM 4A92	✓	✓	✓	✓	✓	
C4 Aircross (J4)	engine management ECU	HDI 4N13	✓	✓	✓	✓	✓	
C4 Aircross (J4)	engine management ECU	HDI SID807 J3J4	✓	✓	✓	✓	✓	
C4 Aircross (J4)	automatic or piloted manual gearbox	BV_CVT	✓	✓	✓	✓		
C4 Aircross (J4)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS_4x4	✓	✓	✓	✓		
C4 Aircross (J4)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP_4x4	✓	✓	✓	✓	✓	S0035
C4 Aircross (J4)	airbags and pretensioners ECU	SAC_TRW	✓	✓	✓	✓	✓	
C4 Aircross (J4)	built-in systems interface	ETACS_SUV	✓	✓	✓	✓	✓	
C4 Aircross (J4)	power steering	EPS	✓	✓	✓	✓		
C4 Aircross (J4)	power steering (Recent vehicle )	EPS_M	✓	✓	✓			
C4 Aircross (J4)	anti-theft alarm	ALARME MMC	✓	✓	✓	✓		
C4 Aircross (J4)	instrument panel	COMBINE	✓	✓	✓	✓	✓	S0033

C4 Aircross (J4)	coded immobiliser / Hands-free unit	WCM	✓	✓	✓	✓		
C4 Aircross (J4)	coded immobiliser / Hands-free unit	KOS	✓	✓	✓	✓	✓	
C4 Aircross (J4)	Starting authorisation ECU	OSS	✓	✓	✓			
C4 Aircross (J4)	Stop and Start ECU	STT MMC	✓	✓	✓	✓		
C4 Aircross (J4)	air conditioning	CLIM REGULEE	✓	✓	✓	✓	✓	
C4 Aircross (J4)	parking assistance	AAS MMC	✓	✓	✓	✓		
C4 Aircross (J4)	rear final drive controlled clutch ECU	TRANSMISSION	✓	✓	✓	✓		
C4 Aircross (J4)	driver's door module	PDPC	✓			✓		
C4 Aircross (J4)	steering wheel angle sensor	CAV	✓	✓	✓			S0035
C4 Aircross (J4)	rain and sunlight sensor	CDPL	✓			✓		
C4 Aircross (J4)	Dynamic headlamp height adjuster	CORPRO	✓	✓	✓	✓	✓	
C4 Aircross (J4)	radio	AUTORADIO 3	✓	✓	✓	✓		
C4 Aircross (J4)	aid to navigation	NAVIGATION	✓	✓	✓			
C4 Aircross (A88)	engine management ECU	VD46	✓	✓	✓			
C4 Aircross (A88)	engine management ECU	MED17 4 4	✓	✓	✓			
C4 Aircross (A88)	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓			
C4 Aircross (A88)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓			
C4 Aircross (A88)	airbags and pretensioners ECU	RBG_SPEED_UDS	✓	✓	✓			
C4 Aircross (A88)	built-in systems interface	BSI2010_EV	✓	✓	✓			
C4 Aircross (A88)	power steering	DAE UDS	✓	✓	✓			
C4 Aircross (A88)	Electric steering lock	AVE	✓	✓	✓			

C4 Aircross (A88)	instrument panel	COMBINE UDS	✓	✓	✓			
C4 Aircross (A88)	air conditioning	BCC	✓	✓	✓			
C4 Aircross (A88)	parking assistance	AAS UDS	✓	✓	✓			
C4 Aircross (A88)	Voltage maintaining device	DMTR_DTC3B	✓	✓	✓			
C4 Aircross (A88)	battery charge status control unit	BECB_GEN2	✓	✓	✓			
C4 Aircross (A88)	Head Up Display	VTH_UDS	✓	✓	✓			
C4 Aircross (A88)	controls under the steering wheel	COM2008P	✓	✓	✓			
C4 Aircross (A88)	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓			
C4 Aircross (A88)	Multifunction control panel	FMUX	✓	✓	✓			
C4 Aircross (A88)	seat belt not fastened warning lights unit	TNB_2010	✓					
C4 Aircross (A88)	rain and sunlight sensor	CDPL_UDS_HELLA	✓	✓	✓			
C4 Aircross (A88)	Multifunction video camera (CMF)	CVM_2	✓	✓	✓			
C4 Aircross (A88)	touch screen	EMF DGT UDS GP	✓	✓	✓			
C4 Aircross (A88)	touch screen	EMF DGT LVDS BD	✓	✓	✓			
C4 Aircross (A88)	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
C4 Aircross (A88)	Service module / Independent telematic unit	ITB	✓	✓	✓			
C4 Aircross (A88)	driver's door module	PDPC	✓	✓	✓			
C5 (X7)	engine management ECU	DCM35_BR2	✓	✓	✓	✓	✓	S0034, S0037
C5 (X7)	engine management ECU	ME747	✓	✓	✓	✓	✓	S0034
C5 (X7)	engine management ECU	SID201	✓	✓	✓	✓	✓	

C5 (X7)	engine management ECU	EDC16CP39	✓	✓	✓	✓	✓	
C5 (X7)	engine management ECU	MM6KP	✓	✓	✓	✓	✓	
C5 (X7)	engine management ECU	DCM34	✓	✓	✓	✓	✓	S0037, S0036
C5 (X7)	engine management ECU	DCM34 P	✓	✓	✓	✓	✓	S0037
C5 (X7)	engine management ECU	DCM35	✓	✓	✓	✓	✓	S0037, S0036
C5 (X7)	engine management ECU	EDC16C3	✓	✓	✓	✓	✓	
C5 (X7)	engine management ECU	EDC17CP11	✓	✓	✓	✓	✓	S0036, S0037
C5 (X7)	engine management ECU	MED17 4 EURO5	✓	✓	✓	✓	✓	S0034
C5 (X7)	engine management ECU	MEV17 4 2	✓	✓	✓	✓	✓	S0034
C5 (X7)	engine management ECU	HDI SID807 BR2	✓	✓	✓	✓	✓	
C5 (X7)	engine management ECU	HDI SID807	✓	✓	✓	✓	✓	S0037
C5 (X7)	engine management ECU	MED17 4 2	✓	✓	✓	✓	✓	
C5 (X7)	engine management ECU	EDC17CP42	✓	✓	✓	✓	✓	S0037
C5 (X7)	engine management ECU	MED17 4 4	✓	✓	✓	✓		
C5 (X7)	engine management ECU	DCM62	✓	✓	✓			
C5 (X7)	engine management ECU	MED17 4 4 EP8	✓	✓	✓			
C5 (X7)	automatic or piloted manual gearbox	BVA_AM6_AT6_EURO5	✓	✓	✓	✓	✓	
C5 (X7)	automatic or piloted manual gearbox	BVA_AM6	✓	✓	✓	✓	✓	
C5 (X7)	automatic or piloted manual gearbox	BVA_AL4	✓	✓	✓	✓	✓	
C5 (X7)	automatic or piloted manual gearbox	CFC300P	✓	✓	✓	✓	✓	
C5 (X7)	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓	✓		
C5 (X7)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP81	✓	✓	✓	✓	✓	
C5 (X7)	airbags and pretensioners ECU	SAC_AUTOLIV	✓	✓	✓	✓		

C5 (X7)	built-in systems interface	BSI	✓	✓	✓			S0033
C5 (X7)	power steering	GEP	✓	✓	✓	✓		
C5 (X7)	anti-theft alarm	ALARME	✓	✓	✓	✓		
C5 (X7)	instrument panel	COMBINE	✓	✓	✓	✓	✓	
C5 (X7)	air conditioning	CLIM REGULEE	✓	✓	✓	✓		
C5 (X7)	UNDER-INFLATION DETECTION	DSG	✓	✓	✓	✓		
C5 (X7)	UNDER-INFLATION DETECTION	DSG_UDS	✓	✓	✓	✓		
C5 (X7)	parking assistance	AAS	✓	✓	✓	✓		
C5 (X7)	electronically managed suspension	SUSPENSION_ECOTECH	✓	✓	✓			
C5 (X7)	Body height ECU	BASHE5	✓	✓	✓			
C5 (X7)	Variable damping ECU	CSS	✓	✓	✓			
C5 (X7)	additional heating	CHAUFF ADD	✓	✓	✓			
C5 (X7)	Dynamic headlamp height adjuster	PROJECTEURS	✓	✓	✓			
C5 (X7)	battery charge status control unit	BECB	✓	✓	✓			
C5 (X7)	battery charge status control unit	BECB_GEN2	✓	✓	✓			
C5 (X7)	Electric secondary brake	FSE	✓	✓	✓	✓		S0038
C5 (X7)	lane wandering alert	AFIL	✓	✓	✓	✓		
C5 (X7)	Trailer relay unit	BSR	✓	✓	✓			
C5 (X7)	engine wiring housing	BSM	✓	✓	✓			
C5 (X7)	multifunction screen	EMF A	✓	✓	✓	✓		
C5 (X7)	multifunction screen	EMF C	✓	✓	✓	✓		
C5 (X7)	windscreen wiper	MOTEV	✓	✓	✓			
C5 (X7)	controls under the steering wheel	VCCF	✓	✓	✓	✓		
C5 (X7)	audio amplifier	AMPLI AUDIO	✓	✓	✓			
C5 (X7)	CD changer / external CD player	CHANGEUR_CD	✓	✓	✓	✓		



C5 (X7)	Hands-free Kit / Portable Unit	KML	✓	✓	✓	✓		
C5 (X7)	Hands-free Kit / Portable Unit	BOITIER_NOMADE	✓	✓	✓	✓	✓	
C5 (X7)	Voltage maintaining device	DMTC	✓					
C5 (X7)	Voltage maintaining device	DMTR	✓	✓	✓			
C5 (X7)	Voltage maintaining device	DMTR_DTC3B	✓	✓	✓			
C5 (X7)	radio	AUTORADIO	✓	✓	✓	✓		
C5 (X7)	radio	RD45	✓	✓	✓	✓		
C5 (X7)	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEGC	✓	✓	✓			
C5 (X7)	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG	✓	✓	✓			
C5 (X7)	Telematic unit (RTx) or audio-navigation	RADIONAV_NG4	✓	✓	✓			
C5 (X7)	Telematic unit (RTx) or audio-navigation	BOITIER_TELEMATIQUE	✓	✓	✓			
C5 (X7)	Telematic unit (RTx) or audio-navigation	RNEG2010	✓	✓	✓			
C5 (X7)	Telematic unit (RTx) or audio-navigation	MRN	✓	✓	✓			
C5 (X7)	Telematic unit (RTx) or audio-navigation	SMEG_PLUS	✓	✓	✓			
C5 (X7)	Seat driver position memory module.	BDMC	✓	✓	✓	✓		
C5 (X7)	driver's door module	PDPC	✓	✓	✓	✓		
C5 (X7)	Service module / Independent telematic unit	MD_SERV	✓	✓	✓			
C5 (X7)	Service module / Independent telematic unit	BTA	✓	✓	✓			

C5 (X7)	Service module / Independent telematic unit	BTA_CN	✓	✓	✓			
C5 (X7)	Service module / Independent telematic unit	BTA_2	✓	✓	✓			
C5 (X7)	rain and sunlight sensor	PLUIE_LUMINOSITE	✓	✓	✓			
C5 (X7)	seat belt not fastened warning lights unit	TNB	✓					
C5 (X7)	Motorised Boot Unit	COFFRE MOTORISE	✓	✓	✓	✓		
C5 (X7)	high frequency receiver	RHF	✓	✓	✓			
C5 (X7)	active damper electronic unit	BEBA	✓	✓	✓			
C5 (X73RR)	engine management ECU	MED17 4 4	✓	✓	✓			
C5 (X73RR)	engine management ECU	MED17 4 4 EP8	✓	✓	✓			
C5 (X73RR)	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓	✓	✓	
C5 (X73RR)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓	✓	✓	S0035
C5 (X73RR)	airbags and pretensioners ECU	RBG_UDS	✓	✓	✓	✓		
C5 (X73RR)	built-in systems interface	BSI2010_EV	✓	✓	✓			
C5 (X73RR)	power steering	GEP	✓	✓	✓			
C5 (X73RR)	Electric steering lock	AVE	✓	✓	✓			
C5 (X73RR)	instrument panel	CIROCCO	✓	✓	✓	✓	✓	
C5 (X73RR)	instrument panel	COMBINE UDS	✓	✓	✓			
C5 (X73RR)	air conditioning	CLIM REGULEE UDS	✓	✓	✓	✓		

C5 (X73RR)	UNDER-INFLATION DETECTION	DSG_UDS	✓	✓	✓	✓		
C5 (X73RR)	parking assistance	AAS UDS	✓	✓	✓	✓		
C5 (X73RR)	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓			
C5 (X73RR)	Service module / Independent telematic unit	BTA_CN	✓	✓	✓			
C5 (X73RR)	Multifunction video recording camera	IDVR	✓	✓	✓			
C5 (X73RR)	controls under the steering wheel	COM2008P	✓	✓	✓	✓		
C5 (X73RR)	Multifunction control panel	FMUX	✓	✓	✓			
C5 (X73RR)	battery charge status control unit	BECB_GEN2	✓	✓	✓			
C5 (X73RR)	Voltage maintaining device	DMTR_DTC3B	✓	✓	✓			
C5 (X73RR)	Panoramic visual assistance ECU	AVP	✓	✓	✓			
C5 (X73RR)	touch screen	EMF_DGT_LVDS_BD	✓	✓	✓			
C5 (X73RR)	driver's door module	PDPC	✓	✓	✓	✓		
C5 (X73RR)	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
C5 (X73RR)	rain and sunlight sensor	CDPL_UDS_HELLA	✓	✓	✓			
C5 (X73RR)	audio amplifier	AMPLI_AUDIO	✓	✓	✓			
C5 (X73RR)	Dynamic headlamp height adjuster	BEMP	✓	✓	✓			
C5 (X73RR)	Front left seat heated pads and ventilation regulation ECU	BRNC_AVG	✓					

C5 (X73RR)	Front right seat heated pads and ventilation regulation ECU	BRNC_AVD	✓					
C5 (X73RR)	Control of the telematic unit	CRT_UDS_KOSTAL	✓					
C5 (X73RR)	Seat driver position memory module.	BDMC	✓	✓	✓	✓		
C5 (X73RR)	front left wiper motor	MOTEV_UDS	✓	✓	✓			
C5 (X73RR)	front right wiper motor	MOTED_UDS	✓	✓	✓			
C5 Aircross	engine management ECU	VD46	✓	✓	✓	✓		
C5 Aircross	engine management ECU	MED17 4 4	✓	✓	✓	✓		
C5 Aircross	engine management ECU	MED17 4 4 EP8	✓	✓	✓	✓		
C5 Aircross	engine management ECU	MEVD17 4 4	✓	✓	✓			
C5 Aircross	engine management ECU	CMM DCM71	✓	✓	✓			
C5 Aircross	engine management ECU	CMM MD1CS003	✓	✓	✓			
C5 Aircross	engine management ECU	CMM VD56	✓	✓	✓			
C5 Aircross	engine management ECU	CMM MG1CS042	✓	✓	✓			
C5 Aircross	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓	✓		
C5 Aircross	automatic or piloted manual gearbox	BVA_AXN8	✓	✓	✓			
C5 Aircross	automatic gearbox electric control ECU	COMELEC2	✓	✓	✓	✓		
C5 Aircross	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓	✓		
C5 Aircross	airbags and pretensioners ECU	RBG_SPEED_UDS	✓	✓	✓	✓		
C5 Aircross	built-in systems interface	BSI2010_EV	✓	✓	✓			
C5 Aircross	power steering	DAE BVH2	✓	✓	✓	✓		

C5 Aircross	Electric steering lock	AVE	✓	✓	✓	✓		
C5 Aircross	anti-theft alarm	MUS2	✓	✓	✓			
C5 Aircross	Intrusion alarm siren	SIR	✓	✓	✓			
C5 Aircross	instrument panel	CIROCCO	✓	✓	✓	✓		
C5 Aircross	instrument panel	COMBINE UDS	✓	✓	✓	✓		
C5 Aircross	Hands full access ECU, right-hand side or rear	BAAST	✓					
C5 Aircross	air conditioning	BCC	✓	✓	✓	✓		
C5 Aircross	parking assistance	AAS UDS	✓	✓	✓	✓		
C5 Aircross	diesel fuel additive pump	PADDGO_TI_UDS	✓	✓	✓			
C5 Aircross	Voltage maintaining device	DMTR_DTC3B	✓	✓	✓			
C5 Aircross	Voltage maintaining device	DMTC	✓					
C5 Aircross	Sequential gear lever	ESM	✓	✓	✓			
C5 Aircross	Dynamic headlamp height adjuster	LADCT	✓	✓	✓	✓		
C5 Aircross	Trailer relay unit	BSG 2010 RQ	✓	✓	✓			
C5 Aircross	battery charge status control unit	BECB_GEN2	✓	✓	✓	✓		
C5 Aircross	controls under the steering wheel	COM2008P	✓	✓	✓	✓		
C5 Aircross	Traction control mode selector	ASR	✓			✓		
C5 Aircross	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓	✓		
C5 Aircross	Multifunction control panel	FMUX	✓	✓	✓	✓		

C5 Aircross	seat belt not fastened warning lights unit	TNB_2010	✓					
C5 Aircross	windscreen wiper	ESV	✓	✓	✓			
C5 Aircross	rain and sunlight sensor	CDPL_UDS_HELLA	✓	✓	✓	✓		
C5 Aircross	Panoramic visual assistance ECU	AVP	✓	✓	✓	✓		
C5 Aircross	Multifunction video camera (CMF)	CVM_2	✓	✓	✓	✓		
C5 Aircross	Multifunction video camera (CMF)	CVM_3	✓	✓	✓			
C5 Aircross	Vehicle Distance Assistance	ARTIV_UDS	✓	✓	✓	✓		
C5 Aircross	Vehicle Distance Assistance	RADAR_AV_4	✓	✓	✓			
C5 Aircross	touch screen	EMF DGT LVDS BD	✓	✓	✓			
C5 Aircross	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
C5 Aircross	Telematic unit (RTx) or audio-navigation	RCC	✓	✓	✓			
C5 Aircross	Control of the telematic unit	CRT_UDS_KOSTAL	✓			✓		
C5 Aircross	Service module / Independent telematic unit	BTA_CN	✓	✓	✓	✓		
C5 Aircross	Service module / Independent telematic unit	BTA_3R	✓	✓	✓			
C5 Aircross	Service module / Independent telematic unit	BTA_3S	✓	✓	✓			
C5 Aircross	driver's door module	PDPC	✓	✓	✓	✓		
C5 Aircross	driver's door module	PDPC UDS	✓	✓	✓			
C5 Aircross	Motorised Boot Unit	VERINS MOTORISES	✓	✓	✓	✓		

C5 Aircross	additional heating	BECH	✓					
C5 Aircross	Front left seat heated pads and ventilation regulation ECU	BRNC_AVG	✓					
C5 Aircross	Front right seat heated pads and ventilation regulation ECU	BRNC_AVD	✓					
C5 Aircross	Driver's seat comfort ECU	SCB_D	✓	✓	✓			
C5 Aircross	Driver's seat pneumatic functions ECU	SPB_D	✓					
C5 Aircross	Passenger's seat pneumatic functions ECU	SPB_P	✓					
C6 (X6)	engine management ECU	ME747	✓	✓	✓	✓	✓	S0034
C6 (X6)	engine management ECU	SID201	✓	✓	✓	✓	✓	
C6 (X6)	engine management ECU	EDC16CP39	✓	✓	✓	✓	✓	
C6 (X6)	engine management ECU	EDC17CP11	✓	✓	✓	✓	✓	S0037
C6 (X6)	automatic or piloted manual gearbox	BVA_AM6_AT6_EUR05	✓	✓	✓	✓	✓	
C6 (X6)	automatic or piloted manual gearbox	BVA_AM6	✓	✓	✓	✓	✓	
C6 (X6)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP_EBC_440_CAN	✓	✓	✓	✓	✓	
C6 (X6)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP_EBC_440_K	✓	✓	✓	✓	✓	

C6 (X6)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP81	✓	✓	✓	✓	✓	S0035, S0039
C6 (X6)	airbags and pretensioners ECU	SAC_AUTOLIV	✓	✓	✓	✓		
C6 (X6)	built-in systems interface	BSI	✓	✓	✓			S0033
C6 (X6)	power steering	GEP	✓	✓	✓	✓		
C6 (X6)	anti-theft alarm	ALARME	✓	✓	✓	✓		
C6 (X6)	instrument panel	COMBINE	✓	✓	✓	✓	✓	
C6 (X6)	air conditioning	CLIM REGULEE	✓	✓	✓	✓		
C6 (X6)	UNDER-INFLATION DETECTION	DSG	✓	✓	✓	✓		
C6 (X6)	parking assistance	AAS	✓	✓	✓	✓		
C6 (X6)	electronically managed suspension	SUSPENSION_ECOTECH	✓	✓	✓			
C6 (X6)	Variable damping ECU	CSS	✓	✓	✓			
C6 (X6)	additional heating	CHAUFF ADD	✓	✓	✓			
C6 (X6)	Dynamic headlamp height adjuster	PROJECTEURS	✓	✓	✓			
C6 (X6)	Right-hand dynamic headlamp height adjuster	PROJECTEURD	✓	✓	✓			
C6 (X6)	Left-hand dynamic headlamp height adjuster	PROJECTEURG	✓	✓	✓			
C6 (X6)	battery charge status control unit	BECB	✓	✓	✓			
C6 (X6)	battery charge status control unit	BECB_GEN2	✓	✓	✓			
C6 (X6)	Electric secondary brake	FSE	✓	✓	✓	✓		S0038
C6 (X6)	lane wandering alert	AFIL	✓	✓	✓	✓		
C6 (X6)	Boot relay unit	BSC	✓	✓	✓			



C6 (X6)	engine wiring housing	BSM	✓	✓	✓			
C6 (X6)	Trailer relay unit	BSR	✓	✓	✓			
C6 (X6)	multifunction screen	EMF A	✓			✓		
C6 (X6)	multifunction screen	EMF C	✓			✓		
C6 (X6)	windscreen wiper	MOTEV	✓	✓	✓			
C6 (X6)	controls under the steering wheel	HDC	✓	✓	✓	✓	✓	
C6 (X6)	Hands-free Kit / Portable Unit	KML	✓	✓	✓	✓		
C6 (X6)	Hands-free Kit / Portable Unit	BOITIER_NOMADE	✓	✓	✓	✓	✓	
C6 (X6)	radio	AUTORADIO	✓	✓	✓	✓	✓	
C6 (X6)	Telematic unit (RTx) or audio-navigation	BOITIER_TELEMATIQUE	✓	✓	✓			
C6 (X6)	CD changer / external CD player	CHANGEUR_CD	✓	✓	✓	✓		
C6 (X6)	Rear seats position memorisation unit	BDM_AR	✓	✓	✓			
C6 (X6)	Seat passenger position memory module.	BDMP	✓	✓	✓			
C6 (X6)	Seat driver position memory module.	BDMC	✓	✓	✓	✓		
C6 (X6)	passenger door module	EDPP	✓	✓	✓	✓	✓	
C6 (X6)	Driver's seat panel	PLAT SIEGE GAUCHE	✓	✓	✓			
C6 (X6)	Passenger's seat panel	PLAT_SIEGE_DROITE	✓	✓	✓			
C6 (X6)	driver's door module	EDPC	✓	✓	✓	✓	✓	
C6 (X6)	Moving panel deflector	DEFL_PAN_MOBIL	✓	✓	✓			
C6 (X6)	headlamp beam corrector	CDSPD	✓			✓		
C6 (X6)	headlamp beam corrector	CDSPG	✓			✓		

C6 (X6)	rear air conditioning control panel	TAB_CLIM_AR	✓	✓	✓			
C6 (X6)	Head Up Display	VTH	✓	✓	✓	✓		
C6 (X6)	rain and sunlight sensor	PLUIE_LUMINOSITE	✓	✓	✓			
C6 (X6)	Pedestrian Impact Detection Unit	DETECT_CHOC_PIETON	✓			✓		
C6 (X6)	high frequency receiver	RHF	✓	✓	✓			
C6 (X81)	engine management ECU	MED17 4 4	✓	✓	✓	✓		
C6 (X81)	engine management ECU	MEVD17 4 4	✓	✓	✓			
C6 (X81)	engine management ECU	MED17 4 4 EP8	✓	✓	✓	✓		
C6 (X81)	engine management ECU	CMM MG1CS042	✓	✓	✓			
C6 (X81)	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓	✓		
C6 (X81)	automatic or piloted manual gearbox	BVA_AXN8	✓	✓	✓			
C6 (X81)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓	✓		S0035, S0038, S0039
C6 (X81)	airbags and pretensioners ECU	RBG_UDS	✓	✓	✓	✓		
C6 (X81)	built-in systems interface	BSI2010_EV	✓	✓	✓			
C6 (X81)	Electric steering lock	AVE	✓	✓	✓	✓		
C6 (X81)	power steering	GEP	✓	✓	✓	✓		
C6 (X81)	instrument panel	CIROCCO	✓	✓	✓	✓		
C6 (X81)	instrument panel	COMBINE UDS	✓	✓	✓	✓		
C6 (X81)	air conditioning	CLIM REGULEE UDS	✓	✓	✓	✓		
C6 (X81)	UNDER-INFLATION DETECTION	DSG_UDS	✓	✓	✓			
C6 (X81)	parking assistance	AAS UDS	✓	✓	✓	✓		

C6 (X81)	Multifunction video camera (CMF)	CVM_2	✓	✓	✓			
C6 (X81)	driver's door module	PDPC	✓	✓	✓	✓		
C6 (X81)	Panoramic visual assistance ECU	AVP	✓	✓	✓			
C6 (X81)	controls under the steering wheel	COM2008P	✓	✓	✓	✓		
C6 (X81)	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓	✓		
C6 (X81)	Vehicle Distance Assistance	ARTIV_UDS	✓	✓	✓	✓		
C6 (X81)	Voltage maintaining device	DMTR_DTC3B	✓	✓	✓			
C6 (X81)	Front left seat heated pads and ventilation regulation ECU	BRNC_AVG	✓					
C6 (X81)	Front right seat heated pads and ventilation regulation ECU	BRNC_AVD	✓					
C6 (X81)	engine wiring housing	BSM 2010	✓	✓	✓	✓		
C6 (X81)	Service module / Independent telematic unit	BTA_CN	✓	✓	✓	✓		
C6 (X81)	audio amplifier	AMPLI_AUDIO	✓	✓	✓			
C6 (X81)	rain and sunlight sensor	CDPL_UDS_HELLA	✓	✓	✓	✓		
C6 (X81)	Multifunction control panel	FMUX	✓	✓	✓	✓		

C6 (X81)	Audio- navigation/telematic unit/connected audio system	NAC	✓	✓	✓			
C6 (X81)	touch screen	EMF DGT LVDS BD	✓	✓	✓			
C6 (X81)	Driver's seat comfort ECU	SCB_D	✓	✓	✓			
C6 (X81)	battery charge status control unit	BECB_GEN2	✓	✓	✓			
C6 (X81)	supplies protection and management unit	BPGA2010	✓	✓	✓			
C6 (X81)	front left wiper motor	MOTEV_UDS	✓	✓	✓	✓		
C6 (X81)	front right wiper motor	MOTED_UDS	✓	✓	✓			
C6 (X81)	Control of the telematic unit	CRT_UDS_KOSTAL	✓			✓		
C8 CAN	engine management ECU	EDC15C2	✓	✓	✓	✓	✓	
C8 CAN	engine management ECU	EDC15C2	✓	✓	✓			
C8 CAN	engine management ECU	MM6LPB	✓	✓	✓	✓	✓	S0034
C8 CAN	engine management ECU	HDI_SID803A	✓	✓	✓	✓	✓	S0037
C8 CAN	engine management ECU	EDC16CP39	✓	✓	✓	✓	✓	
C8 CAN	engine management ECU	DCM35	✓	✓	✓	✓	✓	S0037, S0036
C8 CAN	engine management ECU	DCM35_BR2	✓	✓	✓			
C8 CAN	automatic or piloted manual gearbox	BVA_AM6_AT6_EURO5	✓	✓	✓	✓	✓	
C8 CAN	automatic or piloted manual gearbox	BVA_AM6	✓	✓	✓	✓	✓	
C8 CAN	automatic or piloted manual gearbox	BVA_AL4	✓	✓	✓	✓	✓	
C8 CAN	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP8_BOSCH	✓	✓	✓	✓	✓	S0035, S0039

C8 CAN	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP81	✓	✓	✓	✓	✓	S0035, S0039
C8 CAN	airbags and pretensioners ECU	SAC_AUTOLIV	✓	✓	✓	✓		
C8 CAN	built-in systems interface	BSI	✓	✓	✓			S0033
C8 CAN	power steering	GEP	✓	✓	✓	✓	✓	
C8 CAN	anti-theft alarm	ALARME	✓	✓	✓	✓		
C8 CAN	instrument panel	COMBINE	✓	✓	✓	✓	✓	
C8 CAN	air conditioning	CLIM REGULEE	✓	✓	✓	✓		
C8 CAN	UNDER-INFLATION DETECTION	DSG	✓	✓	✓	✓		
C8 CAN	parking assistance	AAS	✓	✓	✓	✓		
C8 CAN	diesel additive	ADDG03	✓	✓	✓	✓	✓	
C8 CAN	additional heating	CHAUFF ADD	✓	✓	✓			
C8 CAN	Left-hand dynamic headlamp height adjuster	PROJECTEURG	✓					
C8 CAN	Right-hand dynamic headlamp height adjuster	PROJECTEURD	✓					
C8 CAN	Trailer relay unit	BSR	✓	✓	✓	✓		
C8 CAN	engine wiring housing	BSM	✓	✓	✓			
C8 CAN	multifunction screen	EMF_A	✓	✓	✓	✓		
C8 CAN	multifunction screen	EMF_C	✓	✓	✓	✓		
C8 CAN	controls under the steering wheel	HDC	✓	✓	✓	✓	✓	
C8 CAN	CD changer / external CD player	CHANGEUR_CD	✓	✓	✓			
C8 CAN	radio	AUTORADIO	✓	✓	✓	✓	✓	
C8 CAN	radio	RD45	✓	✓	✓	✓		
C8 CAN	Hands-free Kit / Portable Unit	KML	✓	✓	✓	✓		

C8 CAN	Hands-free Kit / Portable Unit	BOITIER_NOMADE	✓	✓	✓	✓	✓	
C8 CAN	Telematic unit (RTx) or audio-navigation	BOITIER_TELEMATIQUE	✓	✓	✓			
C8 CAN	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG	✓	✓	✓			
C8 CAN	Telematic unit (RTx) or audio-navigation	RNEG2010	✓	✓	✓			
C8 CAN	Seat driver position memory module.	BDMC	✓	✓	✓	✓		
C8 CAN	passenger door module	EDPP	✓	✓	✓	✓	✓	
C8 CAN	sliding side doors module	PLCM	✓	✓	✓			
C8 CAN	driver's door module	EDPC	✓	✓	✓	✓	✓	
C8 CAN	rear sunroof	TO INALFA	✓	✓	✓	✓		
C8 CAN	front sunroof	TO INALFA	✓	✓	✓	✓		
C8 CAN	central sunroof	TO INALFA	✓	✓	✓	✓		
C8 CAN	Odometer LED unit	BTO	✓	✓	✓			
C8 CAN	rain and sunlight sensor	PLUIE_LUMINOSITE	✓	✓	✓			
C8 CAN	Control of the telematic unit	CRT	✓					
C-CROSSER	engine management ECU	EDC16CP39	✓	✓	✓	✓		
C-CROSSER	engine management ECU	MIVEC	✓	✓	✓	✓	✓	
C-CROSSER	engine management ECU	EDC16CP39 E5	✓	✓	✓			
C-CROSSER	automatic or piloted manual gearbox	BV_CVT	✓	✓	✓	✓		
C-CROSSER	automatic or piloted manual gearbox	BOITE_GETRAG	✓	✓	✓	✓		
C-CROSSER	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS	✓	✓	✓	✓		

C-CROSSER	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP	✓	✓	✓	✓	✓	
C-CROSSER	airbags and pretensioners ECU	SAC_TRW	✓	✓	✓	✓	✓	
C-CROSSER	built-in systems interface	ETACS_SUV	✓	✓	✓	✓	✓	
C-CROSSER	instrument panel	COMBINE	✓	✓	✓	✓	✓	
C-CROSSER	coded immobiliser / Hands-free unit	WCM	✓	✓	✓	✓	✓	
C-CROSSER	air conditioning	CLIM REGULEE	✓	✓	✓	✓	✓	
C-CROSSER	parking assistance	AAS MMC	✓	✓	✓			
C-CROSSER	gear lever	LEVIER DCT	✓	✓	✓	✓		
C-CROSSER	rear final drive controlled clutch ECU	TRANSMISSION	✓	✓	✓	✓		
C-CROSSER	Hands-free Kit / Portable Unit	KML	✓	✓	✓	✓		
C-CROSSER	aid to navigation	NAVIGATION	✓	✓	✓			
C-CROSSER	radio	AUTORADIO 3	✓	✓	✓	✓		
C-CROSSER	rear left door control pad	PDPARG	✓					
C-CROSSER	driver's door module	PDPC	✓			✓		
C-CROSSER	passenger door module	PDPP	✓			✓		
C-CROSSER	rear right door control pad	PDPARD	✓			✓		
C-CROSSER	sunroof	TO WEBASTO	✓			✓		
C-CROSSER	steering wheel angle sensor	CAV	✓	✓	✓			
C-CROSSER	rain and sunlight sensor	CDPL	✓			✓		
C-CROSSER	Dynamic headlamp height adjuster	CORPRO	✓	✓	✓			
NEMO	engine management ECU	EDC16C34	✓	✓	✓	✓		
NEMO	engine management ECU	V34P	✓	✓	✓	✓	✓	

NEMO	engine management ECU	V342	✓	✓	✓	✓		
NEMO	engine management ECU	HDI 8DF2	✓	✓	✓	✓		
NEMO	engine management ECU	HDI 8DF3	✓	✓	✓			
NEMO	engine management ECU	HDI 9DF	✓	✓	✓			
NEMO	automatic or piloted manual gearbox	BVMP_MTA	✓	✓	✓	✓		
NEMO	automatic or piloted manual gearbox	BVMP	✓	✓	✓	✓		
NEMO	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS81	✓	✓	✓	✓	✓	
NEMO	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP81	✓	✓	✓	✓		S0035
NEMO	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90_F	✓	✓	✓			
NEMO	airbags and pretensioners ECU	SAC_AUTOLIV	✓	✓	✓	✓		
NEMO	built-in systems interface	BCM	✓	✓	✓			
NEMO	instrument panel	COMBINE	✓	✓	✓	✓		
NEMO	parking assistance	AAS	✓	✓	✓	✓		
NEMO	Telematic unit (RTx) or audio-navigation	CTM	✓	✓	✓			
BERLINGO 2 Iran-AMLAT	engine management ECU	ME745	✓	✓	✓			
BERLINGO 2 Iran-AMLAT	engine management ECU	ME749	✓	✓	✓			
BERLINGO 2 Iran-AMLAT	engine management ECU	EDC17C10_BR2	✓	✓	✓			



BERLINGO 2 Iran-AMLAT	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS81	✓	✓	✓			
BERLINGO 2 Iran-AMLAT	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP81	✓	✓	✓			
BERLINGO 2 Iran-AMLAT	airbags and pretensioners ECU	SAC_AUTOLIV	✓	✓	✓			
BERLINGO 2 Iran-AMLAT	built-in systems interface	BSI	✓					
BERLINGO 2 Iran-AMLAT	instrument panel	COMBINE	✓					
BERLINGO 2 Iran-AMLAT	multifunction screen	AMF	✓					
BERLINGO 2 Iran-AMLAT	controls under the steering wheel	COM2000	✓					
BERLINGO 2 Iran-AMLAT	radio	AUTORADIO	✓	✓	✓			
BERLINGO 2 Iran-AMLAT	radio	RDE	✓	✓	✓			
BERLINGO 2 Iran-AMLAT	Service module / Independent telematic unit	BLVV	✓	✓	✓			
BERLINGO 2 (M69)	engine management ECU	EDC17C10_BR2	✓	✓	✓	✓	✓	S0036, S0037
BERLINGO 2 (M69)	engine management ECU	ME749_EC5	✓	✓	✓	✓		S0036, S0037
BERLINGO 2 (M69)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABSMK70_1	✓	✓	✓	✓		S0039
BERLINGO 2 (M69)	airbags and pretensioners ECU	SAC_AUTOLIV	✓	✓	✓	✓		

BERLINGO 2 (M69)	built-in systems interface	BSI	✓	✓	✓			S0033
BERLINGO 2 (M69)	instrument panel	COMBINE	✓	✓	✓	✓	✓	
BERLINGO 2 (M69)	controls under the steering wheel	HDC	✓	✓	✓	✓	✓	S0035
BERLINGO 2 (M69)	Telematic unit (RTx) or audio-navigation	AIO	✓	✓	✓			
BERLINGO 2 (M69)	radio	RD6	✓	✓	✓			
BERLINGO (B9)	engine management ECU	ME745	✓	✓	✓	✓	✓	S0034
BERLINGO (B9)	engine management ECU	EDC16C3	✓	✓	✓	✓	✓	S0036
BERLINGO (B9)	engine management ECU	MEV17 4 EURO5	✓	✓	✓	✓	✓	S0034
BERLINGO (B9)	engine management ECU	EDC17C10_BR2	✓	✓	✓	✓	✓	S0037, S0036
BERLINGO (B9)	engine management ECU	MEV17 4 2	✓	✓	✓	✓	✓	S0034
BERLINGO (B9)	engine management ECU	HDI SID807 BR2	✓	✓	✓	✓	✓	
BERLINGO (B9)	engine management ECU	HDI SID807	✓	✓	✓	✓	✓	S0037
BERLINGO (B9)	engine management ECU	EDC17C60	✓	✓	✓			
BERLINGO (B9)	engine management ECU	VD46	✓	✓	✓			
BERLINGO (B9)	automatic or piloted manual gearbox	CFC300P	✓	✓	✓	✓	✓	
BERLINGO (B9)	automatic or piloted manual gearbox	BVMP_MCP_UDS	✓	✓	✓			
BERLINGO (B9)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS81	✓	✓	✓	✓	✓	S0035
BERLINGO (B9)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP81	✓	✓	✓	✓	✓	S0035, S0039
BERLINGO (B9)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓			

BERLINGO (B9)	airbags and pretensioners ECU	SAC_AUTOLIV	✓	✓	✓	✓		
BERLINGO (B9)	built-in systems interface	BSI	✓	✓	✓			
BERLINGO (B9)	power steering	GEP	✓	✓	✓	✓	✓	
BERLINGO (B9)	anti-theft alarm	ALARME	✓	✓	✓	✓		
BERLINGO (B9)	instrument panel	COMBINE	✓	✓	✓	✓	✓	
BERLINGO (B9)	air conditioning	CLIM_REGULEE	✓	✓	✓			
BERLINGO (B9)	air conditioning	CLIM	✓	✓	✓	✓		
BERLINGO (B9)	UNDER-INFLATION DETECTION	DSG	✓	✓	✓	✓		
BERLINGO (B9)	UNDER-INFLATION DETECTION	DSG_UDS	✓	✓	✓			
BERLINGO (B9)	parking assistance	AAS	✓	✓	✓	✓		
BERLINGO (B9)	parking assistance	AAS UDS	✓	✓	✓			
BERLINGO (B9)	diesel fuel additive pump	PADDGO	✓	✓	✓			
BERLINGO (B9)	diesel fuel additive pump	PADDGO_E5	✓	✓	✓	✓		
BERLINGO (B9)	diesel fuel additive pump	PADDGO_TI_E6	✓	✓	✓	✓		
BERLINGO (B9)	battery charge status control unit	BECB	✓	✓	✓			
BERLINGO (B9)	battery charge status control unit	BECB_GEN2	✓	✓	✓			
BERLINGO (B9)	engine wiring housing	BSM	✓	✓	✓		✓	
BERLINGO (B9)	bodywork conversion unit	BTC	✓	✓	✓			
BERLINGO (B9)	Trailer relay unit	BSR	✓	✓	✓			
BERLINGO (B9)	multifunction screen	EMF A	✓	✓	✓	✓		
BERLINGO (B9)	multifunction screen	EMF C	✓	✓	✓	✓		
BERLINGO (B9)	controls under the steering wheel	HDC	✓	✓	✓	✓	✓	
BERLINGO (B9)	Hands-free Kit / Portable Unit	KML	✓	✓	✓	✓		

BERLINGO (B9)	Hands-free Kit / Portable Unit	BOITIER_NOMADE	✓	✓	✓	✓		
BERLINGO (B9)	radio	AUTORADIO	✓	✓	✓	✓	✓	
BERLINGO (B9)	radio	RD45	✓	✓	✓			
BERLINGO (B9)	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG	✓	✓	✓			
BERLINGO (B9)	Telematic unit (RTx) or audio-navigation	RNEG2010	✓	✓	✓			
BERLINGO (B9)	Telematic unit (RTx) or audio-navigation	SMEG_PLUS	✓	✓	✓			
BERLINGO (B9)	CD changer / external CD player	CHANGEUR_CD	✓	✓	✓			
BERLINGO (B9)	Traction control mode selector	ASR	✓					
BERLINGO (B9)	Service module / Independent telematic unit	BTA	✓	✓	✓	✓		
BERLINGO (B9)	Service module / Independent telematic unit	BTA_3R	✓	✓	✓			
BERLINGO (B9)	Service module / Independent telematic unit	BTA_3S	✓	✓	✓			
BERLINGO (B9)	rain and sunlight sensor	PLUIE_LUMINOSITE	✓	✓	✓			
BERLINGO (B9)	high frequency receiver	RHF	✓	✓	✓			
BERLINGO (B9)	Voltage maintaining device	DMTC	✓					
BERLINGO (B9)	Voltage maintaining device	DMTR	✓	✓	✓			
BERLINGO (B9)	Voltage maintaining device	DMTR_DTC3B	✓	✓	✓			
BERLINGO (B9)	Vehicle Distance Assistance	LIDAR	✓	✓	✓			

BERLINGO Electric (B9e)	traction battery ECU	BMU	✓	✓	✓			
BERLINGO Electric (B9e)	Traction battery cells management ECU ( module 1 )	CMU_01	✓					
BERLINGO Electric (B9e)	Traction battery cells management ECU ( module 2 )	CMU_02	✓					
BERLINGO Electric (B9e)	Traction battery cells management ECU ( module 3 )	CMU_03	✓					
BERLINGO Electric (B9e)	Traction battery cells management ECU ( module 4 )	CMU_04	✓					
BERLINGO Electric (B9e)	Traction battery cells management ECU ( module 5 )	CMU_05	✓					
BERLINGO Electric (B9e)	Traction battery cells management ECU ( module 6 )	CMU_06	✓					
BERLINGO Electric (B9e)	Traction battery cells management ECU ( module 7 )	CMU_07	✓					
BERLINGO Electric (B9e)	Traction battery cells management ECU ( module 8 )	CMU_08	✓					
BERLINGO Electric (B9e)	Traction battery cells management ECU ( module 9 )	CMU_09	✓					
BERLINGO Electric (B9e)	Traction battery cells management ECU ( module 10 )	CMU_10	✓					
BERLINGO Electric (B9e)	electric vehicle ECU	EV_ECU	✓	✓	✓			

BERLINGO Electric (B9e)	Electric machine management ECU	MCU	✓	✓	✓			
BERLINGO Electric (B9e)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS81	✓	✓	✓	✓	✓	S0035
BERLINGO Electric (B9e)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP81	✓	✓	✓	✓	✓	S0035, S0039
BERLINGO Electric (B9e)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓			
BERLINGO Electric (B9e)	airbags and pretensioners ECU	SAC_AUTOLIV	✓	✓	✓	✓		
BERLINGO Electric (B9e)	built-in systems interface	BSI	✓	✓	✓			
BERLINGO Electric (B9e)	power steering	GEP	✓	✓	✓	✓	✓	
BERLINGO Electric (B9e)	anti-theft alarm	ALARME	✓	✓	✓	✓		
BERLINGO Electric (B9e)	instrument panel	COMBINE	✓	✓	✓	✓	✓	
BERLINGO Electric (B9e)	air conditioning	CLIM_REGULEE	✓	✓	✓			
BERLINGO Electric (B9e)	air conditioning	CLIM	✓	✓	✓	✓		
BERLINGO Electric (B9e)	UNDER-INFLATION DETECTION	DSG	✓	✓	✓	✓		
BERLINGO Electric (B9e)	UNDER-INFLATION DETECTION	DSG_UDS	✓	✓	✓			
BERLINGO Electric (B9e)	parking assistance	AAS	✓	✓	✓	✓		

BERLINGO Electric (B9e)	parking assistance	AAS_UDS	✓	✓	✓			
BERLINGO Electric (B9e)	radio	AUTORADIO	✓	✓	✓	✓	✓	
BERLINGO Electric (B9e)	radio	RD45	✓	✓	✓			
BERLINGO Electric (B9e)	On-board charger / direct voltage transformer assembly	OBC_DCDC	✓	✓	✓			
BERLINGO Electric (B9e)	passenger compartment air heating resistor	CTPA	✓	✓	✓			
BERLINGO Electric (B9e)	air con compressor	CCE	✓	✓	✓			
BERLINGO Electric (B9e)	Service module / Independent telematic unit	BTA	✓	✓	✓	✓		
BERLINGO Electric (B9e)	Service module / Independent telematic unit	BTA_3R	✓	✓	✓			
BERLINGO Electric (B9e)	Service module / Independent telematic unit	BTA_3S	✓	✓	✓			
BERLINGO Electric (B9e)	multifunction screen	EMF_A	✓	✓	✓	✓		
BERLINGO Electric (B9e)	multifunction screen	EMF_C	✓	✓	✓	✓		
BERLINGO Electric (B9e)	Drive train interface ECU	PIU	✓	✓	✓			
BERLINGO Electric (B9e)	rain and sunlight sensor	PLUIE_LUMINOSITE	✓	✓	✓			
BERLINGO Electric (B9e)	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG	✓	✓	✓			
BERLINGO Electric (B9e)	Telematic unit (RTx) or audio-navigation	RNEG2010	✓	✓	✓			

BERLINGO Electric (B9e)	Telematic unit (RTx) or audio-navigation	SMEG_PLUS	✓	✓	✓			
BERLINGO Electric (B9e)	battery charge status control unit	BECB_GEN2_VE	✓	✓	✓			
BERLINGO Electric (B9e)	engine wiring housing	BSM	✓	✓	✓		✓	
BERLINGO Electric (B9e)	Gateway wiring housing	BSP	✓	✓	✓			
BERLINGO Electric (B9e)	controls under the steering wheel	HDC	✓	✓	✓	✓	✓	
BERLINGO (K9)	engine management ECU	EDC17C60	✓	✓	✓			
BERLINGO (K9)	engine management ECU	CMM MD1CS003	✓	✓	✓			
BERLINGO (K9)	engine management ECU	EDC17C10 BR2	✓	✓	✓			
BERLINGO (K9)	engine management ECU	V46 21	✓	✓	✓			
BERLINGO (K9)	engine management ECU	CMM VD56	✓	✓	✓			
BERLINGO (K9)	automatic or piloted manual gearbox	BVA_AXN8	✓	✓	✓			
BERLINGO (K9)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓			
BERLINGO (K9)	airbags and pretensioners ECU	RBG_SPEED_UDS	✓	✓	✓			
BERLINGO (K9)	built-in systems interface	BSI2010_EV	✓	✓	✓			
BERLINGO (K9)	power steering	DAE_BVH2	✓	✓	✓			
BERLINGO (K9)	Electric steering lock	AVE	✓	✓	✓			
BERLINGO (K9)	anti-theft alarm	MUS2	✓	✓	✓			
BERLINGO (K9)	Intrusion alarm siren	SIR	✓	✓	✓			
BERLINGO (K9)	instrument panel	COMBINE UDS	✓	✓	✓			
BERLINGO (K9)	air conditioning	BCC	✓	✓	✓			
BERLINGO (K9)	parking assistance	AAS UDS G6	✓	✓	✓			
BERLINGO (K9)	diesel fuel additive pump	PADDGO_TI_UDS	✓	✓	✓			



BERLINGO (K9)	overload indicator ECU	OLVI	✓	✓	✓			
BERLINGO (K9)	Trailer relay unit	BSG_2010_RQ	✓	✓	✓			
BERLINGO (K9)	bodywork conversion unit	BSG_2010_TC	✓	✓	✓			
BERLINGO (K9)	battery charge status control unit	BECB_GEN2	✓	✓	✓			
BERLINGO (K9)	Head Up Display	VTH_UDS	✓	✓	✓			
BERLINGO (K9)	controls under the steering wheel	COM2008P	✓	✓	✓			
BERLINGO (K9)	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓			
BERLINGO (K9)	Traction control mode selector	ASR	✓					
BERLINGO (K9)	Multifunction control panel	FMUX	✓	✓	✓			
BERLINGO (K9)	seat belt not fastened warning lights unit	TNB_2010	✓					
BERLINGO (K9)	rain and sunlight sensor	CDPL_UDS_HELLA	✓	✓	✓			
BERLINGO (K9)	Interior mirror with screen	SVSB	✓					
BERLINGO (K9)	Multifunction video camera (CMF)	CVM_3	✓	✓	✓			
BERLINGO (K9)	multifunction screen	EMF_C_UDS	✓	✓	✓			
BERLINGO (K9)	touch screen	EMF_DGT_LVDS_BD	✓	✓	✓			
BERLINGO (K9)	Audio-navigation/telematic unit/connected audio system	NAC	✓	✓	✓			

BERLINGO (K9)	Audio- navigation/telematic unit/connected audio system	RCC	✓	✓	✓			
BERLINGO (K9)	radio	RD6	✓	✓	✓			
BERLINGO (K9)	Control of the telematic unit	CRT_UDS_KOSTAL	✓					
BERLINGO (K9)	Service module / Independent telematic unit	BTA_3S	✓	✓	✓			
BERLINGO (K9)	external CD player	CDE	✓	✓	✓			
BERLINGO (K9)	driver's door module	PDPC UDS	✓	✓	✓			
BERLINGO (K9)	additional heating	BECH	✓					
JUMPY 3	engine management ECU	DCM35_BR2	✓	✓	✓	✓	✓	S0034, S0037
JUMPY 3	engine management ECU	EDC16C3	✓	✓	✓	✓	✓	S0036
JUMPY 3	engine management ECU	HDI_SID803A	✓	✓	✓	✓	✓	S0037
JUMPY 3	engine management ECU	MM6KP	✓	✓	✓	✓	✓	
JUMPY 3	engine management ECU	DCM35	✓	✓	✓	✓	✓	S0037, S0036
JUMPY 3	engine management ECU	EDC17C10 BR2	✓	✓	✓	✓	✓	S0037
JUMPY 3	automatic or piloted manual gearbox	BVA_AM6_AT6_EUR05	✓	✓	✓	✓	✓	
JUMPY 3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS81	✓	✓	✓	✓	✓	S0035, S0039
JUMPY 3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP81	✓	✓	✓	✓	✓	S0035, S0039
JUMPY 3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS8_BOSCH	✓	✓	✓	✓	✓	S0035, S0039

JUMPY 3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP8_BOSCH	✓	✓	✓	✓	✓	S0035, S0039
JUMPY 3	airbags and pretensioners ECU	SAC_AUTOLIV	✓	✓	✓	✓		
JUMPY 3	built-in systems interface	BSI	✓	✓	✓			
JUMPY 3	power steering	GEP	✓	✓	✓			
JUMPY 3	anti-theft alarm	ALARME	✓	✓	✓	✓		
JUMPY 3	instrument panel	COMBINE	✓	✓	✓	✓	✓	
JUMPY 3	air conditioning	CLIM REGULEE	✓	✓	✓	✓		
JUMPY 3	UNDER-INFLATION DETECTION	DSG	✓	✓	✓			
JUMPY 3	UNDER-INFLATION DETECTION	DSG_UDS	✓	✓	✓			
JUMPY 3	parking assistance	AAS	✓	✓	✓	✓		
JUMPY 3	pneumatic suspension	SUSPENSION	✓	✓	✓	✓	✓	
JUMPY 3	additional heating	CHAUFF ADD	✓	✓	✓			
JUMPY 3	Trailer relay unit	BSR	✓	✓	✓			
JUMPY 3	bodywork conversion unit	BTC	✓	✓	✓			
JUMPY 3	engine wiring housing	BSM	✓	✓	✓		✓	
JUMPY 3	controls under the steering wheel	HDC	✓	✓	✓	✓	✓	
JUMPY 3	multifunction screen	EMF_A	✓	✓	✓	✓		
JUMPY 3	multifunction screen	EMF_C	✓	✓	✓	✓		
JUMPY 3	CD changer / external CD player	CHANGEUR_CD	✓	✓	✓			
JUMPY 3	Hands-free Kit / Portable Unit	KML	✓	✓	✓	✓		
JUMPY 3	Hands-free Kit / Portable Unit	BOITIER NOMADE	✓	✓	✓	✓	✓	
JUMPY 3	radio	AUTORADIO	✓	✓	✓	✓		
JUMPY 3	radio	RD45	✓	✓	✓			

JUMPY 3	Telematic unit (RTx) or audio-navigation	BOITIER TELEMATIQUE	✓	✓	✓			
JUMPY 3	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG	✓	✓	✓			
JUMPY 3	Telematic unit (RTx) or audio-navigation	RNEG2010	✓	✓	✓			
JUMPY 3	Traction control mode selector	ASR	✓					
JUMPY 3	rear air conditioning control panel	TAB CLIM AR	✓	✓	✓	✓		
JUMPY 3	rain and sunlight sensor	PLUIE LUMINOSITE	✓	✓	✓			
JUMPY 3	high frequency receiver	RHF	✓	✓	✓			
JUMPY 3	battery charge status control unit	BECB_GEN2	✓	✓	✓			
JUMPY (KO)	engine management ECU	EDC17C10_BR2	✓	✓	✓	✓		
JUMPY (KO)	engine management ECU	DCM62	✓	✓	✓	✓		
JUMPY (KO)	engine management ECU	EDC17C60	✓	✓	✓	✓		
JUMPY (KO)	engine management ECU	CMM_DCM71	✓	✓	✓			
JUMPY (KO)	engine management ECU	CMM_MD1CS003	✓	✓	✓			
JUMPY (KO)	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓	✓		
JUMPY (KO)	automatic or piloted manual gearbox	BVMP_MCP_UDS	✓	✓	✓	✓		
JUMPY (KO)	automatic or piloted manual gearbox	BVA_AXN8	✓	✓	✓			
JUMPY (KO)	automatic gearbox electric control ECU	COMELEC2	✓	✓	✓	✓		
JUMPY (KO)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓	✓		
JUMPY (KO)	airbags and pretensioners ECU	RBG_UDS	✓	✓	✓	✓		

JUMPY (KO)	built-in systems interface	BSI2010 EV	✓	✓	✓			S0033
JUMPY (KO)	power steering	GEP UDS	✓	✓	✓			
JUMPY (KO)	Electric steering lock	AVE	✓	✓	✓	✓		
JUMPY (KO)	anti-theft alarm	MUS	✓	✓	✓	✓		
JUMPY (KO)	Intrusion alarm siren	SIR	✓	✓	✓	✓		
JUMPY (KO)	instrument panel	COMBINE UDS	✓	✓	✓	✓		
JUMPY (KO)	Hands full access ECU, left-hand side	BAASL	✓					
JUMPY (KO)	Hands full access ECU, right-hand side or rear	BAAST	✓					
JUMPY (KO)	air conditioning	BCC	✓	✓	✓	✓		
JUMPY (KO)	rear air conditioning ECU	BCC ADD	✓	✓	✓			
JUMPY (KO)	parking assistance	AAS UDS	✓	✓	✓	✓		
JUMPY (KO)	diesel fuel additive pump	PADDGO TI UDS	✓	✓	✓			
JUMPY (KO)	Voltage maintaining device	DMTC	✓					
JUMPY (KO)	Voltage maintaining device	DMTR DTC3B	✓	✓	✓			
JUMPY (KO)	engine wiring housing	BSM 2010	✓	✓	✓	✓		
JUMPY (KO)	Trailer relay unit	BSG 2010 RQ	✓	✓	✓	✓		
JUMPY (KO)	bodywork conversion unit	BSG 2010 TC	✓	✓	✓			
JUMPY (KO)	battery charge status control unit	BECB GEN2	✓	✓	✓	✓		
JUMPY (KO)	supplies protection and management unit	BPGA2010	✓	✓	✓	✓		
JUMPY (KO)	Head Up Display	VTH UDS	✓	✓	✓	✓		
JUMPY (KO)	controls under the steering wheel	COM2008P	✓	✓	✓	✓		

JUMPY (KO)	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓	✓		
JUMPY (KO)	Traction control mode selector	ASR	✓			✓		
JUMPY (KO)	Multifunction control panel	FMUX	✓	✓	✓	✓		
JUMPY (KO)	seat belt not fastened warning lights unit	TNB 2010	✓					
JUMPY (KO)	rain and sunlight sensor	CDPL UDS HELLA	✓	✓	✓	✓		
JUMPY (KO)	Multifunction video camera (CMF)	CVM 2	✓	✓	✓	✓		
JUMPY (KO)	Vehicle Distance Assistance	ARTIV UDS	✓	✓	✓	✓		
JUMPY (KO)	multifunction screen	EMF A UDS	✓	✓	✓			
JUMPY (KO)	multifunction screen	EMF C UDS	✓	✓	✓	✓		
JUMPY (KO)	touch screen	EMF DGT LVDS BD	✓	✓	✓			
JUMPY (KO)	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
JUMPY (KO)	Telematic unit (RTx) or audio-navigation	RCC	✓	✓	✓			
JUMPY (KO)	radio	RD6	✓	✓	✓			
JUMPY (KO)	Control of the telematic unit	CRT UDS KOSTAL	✓			✓		
JUMPY (KO)	Service module / Independent telematic unit	BTA 2	✓	✓	✓			
JUMPY (KO)	Service module / Independent telematic unit	BTA 3R	✓	✓	✓			

JUMPY (KO)	Service module / Independent telematic unit	BTA 3S	✓	✓	✓			
JUMPY (KO)	Left-hand sliding side door ECU	MDPLC_G	✓	✓	✓			
JUMPY (KO)	Right-hand sliding side door ECU	MDPLC_D	✓	✓	✓			
JUMPY (KO)	rear air conditioning control panel	IHM_AR CENTRAL	✓					
JUMPY (KO)	additional heating	CHAUFF_ADD	✓	✓	✓	✓		
SPACETOURER	engine management ECU	EDC17C10_BR2	✓	✓	✓	✓		
SPACETOURER	engine management ECU	DCM62	✓	✓	✓	✓		
SPACETOURER	engine management ECU	EDC17C60	✓	✓	✓	✓		
SPACETOURER	engine management ECU	CMM_DCM71	✓	✓	✓			
SPACETOURER	engine management ECU	CMM_MD1CS003	✓	✓	✓			
SPACETOURER	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓	✓		
SPACETOURER	automatic or piloted manual gearbox	BVMP_MCP_UDS	✓	✓	✓	✓		
SPACETOURER	automatic or piloted manual gearbox	BVA_AXN8	✓	✓	✓			
SPACETOURER	automatic gearbox electric control ECU	COMELEC2	✓	✓	✓	✓		
SPACETOURER	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓	✓		
SPACETOURER	airbags and pretensioners ECU	RBG_UDS	✓	✓	✓	✓		
SPACETOURER	built-in systems interface	BSI2010_EV	✓	✓	✓			S0033
SPACETOURER	power steering	GEP_UDS	✓	✓	✓			
SPACETOURER	Electric steering lock	AVE	✓	✓	✓	✓		
SPACETOURER	anti-theft alarm	MUS	✓	✓	✓	✓		

SPACETOURER	Intrusion alarm siren	SIR	✓	✓	✓	✓		
SPACETOURER	instrument panel	COMBINE UDS	✓	✓	✓	✓		
SPACETOURER	Hands full access ECU, left-hand side	BAASL	✓					
SPACETOURER	Hands full access ECU, right-hand side or rear	BAAST	✓					
SPACETOURER	air conditioning	BCC	✓	✓	✓	✓		
SPACETOURER	rear air conditioning ECU	BCC ADD	✓	✓	✓			
SPACETOURER	parking assistance	AAS UDS	✓	✓	✓	✓		
SPACETOURER	diesel fuel additive pump	PADDGO TI UDS	✓	✓	✓			
SPACETOURER	Voltage maintaining device	DMTC	✓					
SPACETOURER	Voltage maintaining device	DMTR DTC3B	✓	✓	✓			
SPACETOURER	engine wiring housing	BSM 2010	✓	✓	✓	✓		
SPACETOURER	Trailer relay unit	BSG 2010 RQ	✓	✓	✓	✓		
SPACETOURER	bodywork conversion unit	BSG 2010 TC	✓	✓	✓			
SPACETOURER	battery charge status control unit	BECB_GEN2	✓	✓	✓	✓		
SPACETOURER	supplies protection and management unit	BPGA2010	✓	✓	✓	✓		
SPACETOURER	Head Up Display	VTH UDS	✓	✓	✓	✓		
SPACETOURER	controls under the steering wheel	COM2008P	✓	✓	✓	✓		
SPACETOURER	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓	✓		
SPACETOURER	Traction control mode selector	ASR	✓			✓		



SPACETOURER	Multifunction control panel	FMUX	✓	✓	✓	✓		
SPACETOURER	seat belt not fastened warning lights unit	TNB_2010	✓					
SPACETOURER	rain and sunlight sensor	CDPL UDS HELLA	✓	✓	✓	✓		
SPACETOURER	Multifunction video camera (CMF)	CVM_2	✓	✓	✓	✓		
SPACETOURER	Vehicle Distance Assistance	ARTIV UDS	✓	✓	✓	✓		
SPACETOURER	multifunction screen	EMF A UDS	✓	✓	✓			
SPACETOURER	multifunction screen	EMF C UDS	✓	✓	✓	✓		
SPACETOURER	touch screen	EMF DGT LVDS BD	✓	✓	✓			
SPACETOURER	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
SPACETOURER	Telematic unit (RTx) or audio-navigation	RCC	✓	✓	✓			
SPACETOURER	radio	RD6	✓	✓	✓			
SPACETOURER	Control of the telematic unit	CRT UDS KOSTAL	✓			✓		
SPACETOURER	Service module / Independent telematic unit	BTA_2	✓	✓	✓			
SPACETOURER	Service module / Independent telematic unit	BTA_3R	✓	✓	✓			
SPACETOURER	Service module / Independent telematic unit	BTA_3S	✓	✓	✓			
SPACETOURER	Left-hand sliding side door ECU	MDPLC_G	✓	✓	✓			
SPACETOURER	Right-hand sliding side door ECU	MDPLC_D	✓	✓	✓			

SPACETOURER	rear air conditioning control panel	IHM AR CENTRAL	✓					
SPACETOURER	additional heating	CHAUFF ADD	✓	✓	✓	✓		
JUMPER 3	engine management ECU	PUMA	✓	✓	✓	✓		
JUMPER 3	engine management ECU	EDC16C39	✓	✓	✓	✓		
JUMPER 3	engine management ECU	EDC17CP52	✓	✓	✓	✓		
JUMPER 3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS80	✓	✓	✓	✓	✓	S0039
JUMPER 3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP80	✓	✓	✓	✓	✓	S0039
JUMPER 3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ASR80	✓	✓	✓	✓		S0039
JUMPER 3	airbags and pretensioners ECU	SAC TRW	✓	✓	✓	✓		
JUMPER 3	airbags and pretensioners ECU	SDM	✓	✓	✓			
JUMPER 3	built-in systems interface	NBC	✓	✓	✓			
JUMPER 3	power steering	SSCU	✓	✓	✓	✓		
JUMPER 3	instrument panel	COMBINE	✓	✓	✓	✓		
JUMPER 3	air conditioning	CLIM REGULEE	✓	✓	✓	✓		
JUMPER 3	parking assistance	AAS	✓	✓	✓	✓		
JUMPER 3	electronically managed suspension	SUSPENSION	✓	✓	✓	✓		
JUMPER 3	additional heating	CHAUFF ADD	✓	✓	✓	✓		
JUMPER 3	Telematic unit (RTx) or audio-navigation	BOITIER TELEMATIQUE	✓	✓	✓	✓		
JUMPER 3	tachograph	CHRONOTACHYGRAPHE	✓	✓	✓	✓		
JUMPER 3 Minibus	engine management ECU	PUMA	✓	✓	✓	✓		

JUMPER 3 Minibus	engine management ECU	EDC16C39	✓	✓	✓	✓		
JUMPER 3 Minibus	engine management ECU	EDC17CP52	✓	✓	✓	✓		
JUMPER 3 Minibus	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS80	✓	✓	✓	✓	✓	
JUMPER 3 Minibus	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP80	✓	✓	✓	✓	✓	
JUMPER 3 Minibus	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ASR80	✓	✓	✓	✓		
JUMPER 3 Minibus	airbags and pretensioners ECU	SAC_TRW	✓	✓	✓	✓		
JUMPER 3 Minibus	airbags and pretensioners ECU	SDM	✓	✓	✓			
JUMPER 3 Minibus	built-in systems interface	NBC	✓	✓	✓			
JUMPER 3 Minibus	power steering	SSCU	✓	✓	✓	✓		
JUMPER 3 Minibus	instrument panel	COMBINE	✓	✓	✓	✓		
JUMPER 3 Minibus	air conditioning	CLIM_REGULEE	✓	✓	✓	✓		
JUMPER 3 Minibus	parking assistance	AAS	✓	✓	✓	✓		
JUMPER 3 Minibus	electronically managed suspension	SUSPENSION	✓	✓	✓	✓		
JUMPER 3 Minibus	additional heating	CHAUFF_ADD	✓	✓	✓	✓		
JUMPER 3 Minibus	Telematic unit (RTx) or audio-navigation	BOITIER_TELEMATIQUE	✓	✓	✓	✓		
JUMPER 3 Minibus	tachograph	CHRONOTACHYGRAPHE	✓	✓	✓	✓		
JUMPER 3 Euro 5 / Euro 6	engine management ECU	EDC17CP52 UDS	✓	✓	✓	✓		
JUMPER 3 Euro 5 / Euro 6	engine management ECU	SID208	✓	✓	✓	✓		

JUMPER 3 Euro 5 / Euro 6	engine management ECU	DCM62 F	✓	✓	✓			
JUMPER 3 Euro 5 / Euro 6	engine management ECU	CMM DCM71 F	✓	✓	✓			
JUMPER 3 Euro 5 / Euro 6	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS90 F	✓	✓	✓	✓		
JUMPER 3 Euro 5 / Euro 6	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90 F	✓	✓	✓	✓		
JUMPER 3 Euro 5 / Euro 6	airbags and pretensioners ECU	SDM	✓	✓	✓			
JUMPER 3 Euro 5 / Euro 6	built-in systems interface	BCM	✓	✓	✓			S0033
JUMPER 3 Euro 5 / Euro 6	power steering	SSCU	✓	✓	✓	✓		
JUMPER 3 Euro 5 / Euro 6	instrument panel	IPC	✓	✓	✓	✓		S0033
JUMPER 3 Euro 5 / Euro 6	air conditioning	ACM	✓	✓	✓	✓		
JUMPER 3 Euro 5 / Euro 6	UNDER-INFLATION DETECTION	TPMS	✓	✓	✓			
JUMPER 3 Euro 5 / Euro 6	parking assistance	AAS	✓	✓	✓	✓		
JUMPER 3 Euro 5 / Euro 6	Trailer relay unit	TTM	✓	✓	✓			
JUMPER 3 Euro 5 / Euro 6	additional heating	CHAUFF ADD	✓	✓	✓	✓		
JUMPER 3 Euro 5 / Euro 6	Telematic unit (RTx) or audio-navigation	CTM	✓	✓	✓			
JUMPER 3 Euro 5 / Euro 6	Audio-navigation system	LTM	✓	✓	✓			

JUMPER 3 Euro 5 / Euro 6	tachograph	CHRONOTACHYGRAPHE	✓	✓	✓			
JUMPER 3 Euro 5 / Euro 6	electronically managed suspension	SUSPENSION	✓	✓	✓			
JUMPER 3 Euro 5 / Euro 6	radio	RRM	✓	✓	✓			
JUMPER 3 Euro 5 / Euro 6	lane wandering alert	HALF	✓	✓	✓			
DS 3 CROSSBACK	engine management ECU	CMM VD56	✓	✓	✓			
DS 3 CROSSBACK	engine management ECU	CMM MD1CS003	✓	✓	✓			
DS 3 CROSSBACK	automatic or piloted manual gearbox	BVA AXN8	✓	✓	✓			
DS 3 CROSSBACK	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESPMK100 UDS	✓	✓	✓			
DS 3 CROSSBACK	airbags and pretensioners ECU	RBG SPEED UDS	✓	✓	✓			
DS 3 CROSSBACK	built-in systems interface	BSI2010 EV	✓	✓	✓			
DS 3 CROSSBACK	power steering	DAE UDS	✓	✓	✓			
DS 3 CROSSBACK	Electric steering lock	AVE	✓	✓	✓			
DS 3 CROSSBACK	anti-theft alarm	MUS2	✓	✓	✓			
DS 3 CROSSBACK	Intrusion alarm siren	SIR	✓	✓	✓			
DS 3 CROSSBACK	instrument panel	COMBINE UDS EV	✓	✓	✓			
DS 3 CROSSBACK	Hands-free unit	SDCM	✓	✓	✓			
DS 3 CROSSBACK	air conditioning	BCC	✓	✓	✓			
DS 3 CROSSBACK	parking assistance	AAS UDS G6	✓	✓	✓			
DS 3 CROSSBACK	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
DS 3 CROSSBACK	Telematic unit (RTx) or audio-navigation	RCC	✓	✓	✓			
DS 3 CROSSBACK	Telematic unit (RTx) or audio-navigation	RCE	✓	✓	✓			

DS 3 CROSSBACK	Dynamic headlamp height adjuster	BEMP_UDS	✓	✓	✓			
DS 3 CROSSBACK	Sequential gear lever	ESM	✓	✓	✓			
DS 3 CROSSBACK	Multifunction control panel	FMUX_2	✓	✓	✓			
DS 3 CROSSBACK	Trailer relay unit	BSG_2010_RQ	✓	✓	✓			
DS 3 CROSSBACK	battery charge status control unit	BECB_GEN2	✓	✓	✓			
DS 3 CROSSBACK	controls under the steering wheel	COM2008P	✓	✓	✓			
DS 3 CROSSBACK	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓			
DS 3 CROSSBACK	Head Up Display	VTH_UDS_2	✓	✓	✓			
DS 3 CROSSBACK	seat belt not fastened warning lights unit	TNB_2010	✓					
DS 3 CROSSBACK	rain and sunlight sensor	CDPL_UDS_HELLA	✓	✓	✓			
DS 3 CROSSBACK	Multifunction video camera (CMF)	CVM_3	✓	✓	✓			
DS 3 CROSSBACK	TBTProjecteur gauche	DRIVER_LED_L	✓	✓	✓			
DS 3 CROSSBACK	TBTProjecteur droit	DRIVER_LED_R	✓	✓	✓			
DS 3 CROSSBACK	Vehicle Distance Assistance	RADAR_AV_4	✓	✓	✓			
DS 3 CROSSBACK	touch screen	EMF_DGT_LVDS_BD	✓	✓	✓			
DS 3 CROSSBACK	touch screen	EMF_DGT_UDS_GP	✓	✓	✓			
DS 3 CROSSBACK	Service module / Independent telematic unit	BTA_3R	✓	✓	✓			
DS 3 CROSSBACK	Service module / Independent telematic unit	BTA_3S	✓	✓	✓			
DS 3 CROSSBACK	audio amplifier	AMPLI_AUDIO	✓	✓	✓			

DS 3 CROSSBACK	Front left seat heated pads and ventilation regulation ECU	BRNC_AVG	✓					
DS 3 CROSSBACK	Front right seat heated pads and ventilation regulation ECU	BRNC_AVD	✓					
DS 4S	engine management ECU	MED17_4_2	✓	✓	✓	✓	✓	S0034
DS 4S	engine management ECU	MEVD17_4_2	✓	✓	✓	✓		S0034
DS 4S	engine management ECU	V46_32	✓	✓	✓	✓		
DS 4S	engine management ECU	MED17_4_4	✓	✓	✓	✓		S0034
DS 4S	engine management ECU	MED17_4_4_EP8	✓	✓	✓	✓		
DS 4S	engine management ECU	VD46	✓	✓	✓	✓		
DS 4S	engine management ECU	MEVD17_4_4	✓	✓	✓			
DS 4S	automatic or piloted manual gearbox	BVA_AM6_AT6_EURO5	✓	✓	✓	✓	✓	
DS 4S	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓	✓	✓	
DS 4S	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP81	✓	✓	✓	✓	✓	
DS 4S	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓	✓		S0035, S0039, S0038
DS 4S	airbags and pretensioners ECU	RBG_UDS	✓	✓	✓	✓		
DS 4S	built-in systems interface	BSI2010	✓	✓	✓			
DS 4S	built-in systems interface	BSI2010_EV	✓	✓	✓			
DS 4S	Electric steering lock	AVE	✓	✓	✓	✓		

DS 4S	power steering	GEP	✓	✓	✓	✓		
DS 4S	anti-theft alarm	ALARME	✓	✓	✓	✓		
DS 4S	instrument panel	COMBINE UDS	✓	✓	✓	✓		
DS 4S	Control panel dot matrix display	MATT_C 2010	✓	✓	✓			
DS 4S	Control panel dot matrix display	MATT M 2010	✓	✓	✓			
DS 4S	Hands-free unit	BML	✓	✓	✓	✓		
DS 4S	air conditioning	CLIM_REGULEE UDS	✓	✓	✓	✓		
DS 4S	UNDER-INFLATION DETECTION	DSG UDS	✓	✓	✓	✓		
DS 4S	parking assistance	AAS UDS	✓	✓	✓	✓		
DS 4S	audio amplifier	AMPLI AUDIO	✓	✓	✓			
DS 4S	Electric secondary brake	FSE	✓	✓	✓	✓		
DS 4S	engine wiring housing	BSM_2010	✓	✓	✓	✓		
DS 4S	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓	✓		
DS 4S	Electronic key reader	LCE	✓	✓	✓	✓		
DS 4S	rain and sunlight sensor	PLUIE_LUMINOSITE UDS	✓	✓	✓	✓		
DS 4S	rain and sunlight sensor	CDPL UDS HELLA	✓	✓	✓			
DS 4S	Multifunction control panel	FMUX	✓	✓	✓	✓		
DS 4S	battery charge status control unit	BECB_GEN2	✓	✓	✓	✓		
DS 4S	multifunction screen	EMF_A UDS	✓	✓	✓	✓		
DS 4S	multifunction screen	EMF_C UDS	✓	✓	✓			
DS 4S	supplies protection and management unit	BPGA2010	✓	✓	✓	✓		
DS 4S	radio	RD45	✓	✓	✓	✓		



DS 4S	Telematic unit (RTx) or audio-navigation	MRN	✓	✓	✓	✓		
DS 4S	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
DS 4S	Voltage maintaining device	DMTR	✓	✓	✓			
DS 4S	Voltage maintaining device	DMTR_DTC3B	✓	✓	✓			
DS 4S	Service module / Independent telematic unit	BTA_CN	✓	✓	✓	✓		
DS 4S	controls under the steering wheel	COM2008P	✓	✓	✓	✓		
DS 4S	Dynamic headlamp height adjuster	LADCT	✓	✓	✓	✓		
DS 4S	Dynamic headlamp height adjuster	BEMP	✓	✓	✓			
DS 4S	touch screen	EMF DGT LVDS BD	✓	✓	✓			
DS 4S	Multifunction video camera (CMF)	CVM 2	✓	✓	✓			
DS 5LS	engine management ECU	MED17 4 2	✓	✓	✓	✓	✓	S0034
DS 5LS	engine management ECU	MEVD17 4 2	✓	✓	✓	✓		S0034
DS 5LS	engine management ECU	V46 32	✓	✓	✓	✓		
DS 5LS	engine management ECU	MED17 4 4	✓	✓	✓	✓		S0034
DS 5LS	engine management ECU	MED17 4 4 EP8	✓	✓	✓	✓		
DS 5LS	engine management ECU	VD46	✓	✓	✓	✓		
DS 5LS	engine management ECU	MEVD17 4 4	✓	✓	✓			
DS 5LS	automatic or piloted manual gearbox	BVA AM6 AT6 EURO5	✓	✓	✓	✓	✓	
DS 5LS	automatic or piloted manual gearbox	BVA AM6 AT6 UDS	✓	✓	✓	✓	✓	
DS 5LS	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP81	✓	✓	✓	✓	✓	

DS 5LS	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓	✓		S0035, S0039, S0038
DS 5LS	airbags and pretensioners ECU	RBG UDS	✓	✓	✓	✓		
DS 5LS	built-in systems interface	BSI2010	✓	✓	✓			
DS 5LS	built-in systems interface	BSI2010 EV	✓	✓	✓			
DS 5LS	power steering	GEP	✓	✓	✓	✓		
DS 5LS	Electric steering lock	AVE	✓	✓	✓	✓		
DS 5LS	anti-theft alarm	ALARME	✓	✓	✓	✓		
DS 5LS	Control panel dot matrix display	MATT_C 2010	✓	✓	✓			
DS 5LS	Control panel dot matrix display	MATT M 2010	✓	✓	✓			
DS 5LS	instrument panel	COMBINE UDS	✓	✓	✓	✓		
DS 5LS	Hands-free unit	BML	✓	✓	✓	✓		
DS 5LS	air conditioning	CLIM REGULEE UDS	✓	✓	✓	✓		
DS 5LS	UNDER-INFLATION DETECTION	DSG UDS	✓	✓	✓	✓		
DS 5LS	parking assistance	AAS UDS	✓	✓	✓	✓		
DS 5LS	Voltage maintaining device	DMTR	✓	✓	✓			
DS 5LS	Voltage maintaining device	DMTR DTC3B	✓	✓	✓			
DS 5LS	Multifunction control panel	FMUX	✓	✓	✓	✓		
DS 5LS	supplies protection and management unit	BPGA2010	✓	✓	✓	✓		
DS 5LS	Electronic key reader	LCE	✓	✓	✓	✓		
DS 5LS	battery charge status control unit	BECB GEN2	✓	✓	✓	✓		

DS 5LS	Electric secondary brake	FSE	✓	✓	✓	✓		
DS 5LS	radio	RD45	✓	✓	✓	✓		
DS 5LS	Telematic unit (RTx) or audio-navigation	MRN	✓	✓	✓	✓		
DS 5LS	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
DS 5LS	Service module / Independent telematic unit	BTA CN	✓	✓	✓	✓		
DS 5LS	audio amplifier	AMPLI AUDIO	✓	✓	✓			
DS 5LS	multifunction screen	EMF A UDS	✓	✓	✓	✓		
DS 5LS	multifunction screen	EMF C UDS	✓	✓	✓			
DS 5LS	controls under the steering wheel	COM2008P	✓	✓	✓	✓		
DS 5LS	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓	✓		
DS 5LS	Dynamic headlamp height adjuster	LADCT	✓	✓	✓	✓		
DS 5LS	Dynamic headlamp height adjuster	BEMP	✓	✓	✓			
DS 5LS	rain and sunlight sensor	PLUIE LUMINOSITE UDS	✓	✓	✓	✓		
DS 5LS	rain and sunlight sensor	CDPL UDS HELLA	✓	✓	✓			
DS 5LS	engine wiring housing	BSM 2010	✓	✓	✓	✓		
DS 5LS	Vehicle Distance Assistance	ARTIV UDS	✓	✓	✓			
DS 5LS	touch screen	EMF DGT LVDS BD	✓	✓	✓			
DS 5LS	Multifunction video camera (CMF)	CVM 2	✓	✓	✓			
DS 6	engine management ECU	MED17_4_2	✓	✓	✓	✓	✓	S0034
DS 6	engine management ECU	MEVD17_4_2	✓	✓	✓	✓		S0034

DS 6	engine management ECU	V46 32	✓	✓	✓	✓		
DS 6	engine management ECU	MED17 4 4	✓	✓	✓	✓		S0034
DS 6	engine management ECU	MED17 4 4 EP8	✓	✓	✓	✓		
DS 6	engine management ECU	VD46	✓	✓	✓	✓		
DS 6	engine management ECU	MEVD17 4 4	✓	✓	✓			
DS 6	automatic or piloted manual gearbox	BVA AM6 AT6 EURO5	✓	✓	✓	✓	✓	
DS 6	automatic or piloted manual gearbox	BVA AM6 AT6 UDS	✓	✓	✓	✓	✓	
DS 6	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP81	✓	✓	✓	✓	✓	
DS 6	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓	✓		S0035, S0039, S0038
DS 6	airbags and pretensioners ECU	RBG UDS	✓	✓	✓	✓		
DS 6	built-in systems interface	BSI2010	✓	✓	✓			
DS 6	built-in systems interface	BSI2010_EV	✓	✓	✓			
DS 6	power steering	GEP	✓	✓	✓	✓		
DS 6	Electric steering lock	AVE	✓	✓	✓	✓		
DS 6	anti-theft alarm	ALARME	✓	✓	✓	✓		
DS 6	instrument panel	COMBINE UDS	✓	✓	✓	✓		
DS 6	Control panel dot matrix display	MATT C 2010	✓	✓	✓			
DS 6	Control panel dot matrix display	MATT M 2010	✓	✓	✓			
DS 6	Hands-free unit	BML	✓	✓	✓	✓		

DS 6	Hands full access ECU, right-hand side or rear	BAAST	✓					
DS 6	air conditioning	CLIM REGULEE UDS	✓	✓	✓	✓		
DS 6	UNDER-INFLATION DETECTION	DSG UDS	✓	✓	✓	✓		
DS 6	parking assistance	AAS UDS	✓	✓	✓	✓		
DS 6	Telematic unit (RTx) or audio-navigation	MRN	✓	✓	✓	✓		
DS 6	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
DS 6	rain and sunlight sensor	PLUIE LUMINOSITE UDS	✓	✓	✓	✓		
DS 6	rain and sunlight sensor	CDPL UDS HELLA	✓	✓	✓			
DS 6	Multifunction control panel	FMUX	✓	✓	✓	✓		
DS 6	supplies protection and management unit	BPGA2010	✓	✓	✓	✓		
DS 6	Electronic key reader	LCE	✓	✓	✓	✓		
DS 6	Voltage maintaining device	DMTR	✓	✓	✓			
DS 6	Voltage maintaining device	DMTR DTC3B	✓	✓	✓			
DS 6	battery charge status control unit	BECB GEN2	✓	✓	✓	✓		
DS 6	Dynamic headlamp height adjuster	LADCT	✓	✓	✓	✓		
DS 6	Dynamic headlamp height adjuster	BEMP	✓	✓	✓			
DS 6	Signalling fuse box	BSG S	✓	✓	✓	✓		
DS 6	Traction control mode selector	ASR	✓			✓		

DS 6	Service module / Independent telematic unit	BTA CN	✓	✓	✓	✓		
DS 6	controls under the steering wheel	COM2008P	✓	✓	✓	✓		
DS 6	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓	✓		
DS 6	audio amplifier	AMPLI AUDIO	✓	✓	✓			
DS 6	Electric secondary brake	FSE	✓	✓	✓	✓		
DS 6	engine wiring housing	BSM 2010	✓	✓	✓	✓		
DS 6	Motorised Boot Unit	VERINS MOTORISES	✓	✓	✓	✓		
DS 6	Vehicle Distance Assistance	ARTIV UDS	✓	✓	✓			
DS 6	Dynamic headlamp height adjuster	LADCT	✓	✓	✓	✓		
DS 6	Dynamic headlamp height adjuster	BEMP	✓	✓	✓			
DS 6	touch screen	EMF DGT LVDS BD	✓	✓	✓			
DS 6	Multifunction video camera (CMF)	CVM_2	✓	✓	✓			
DS 7 CROSSBACK	engine management ECU	MED17 4 4	✓	✓	✓			
DS 7 CROSSBACK	engine management ECU	CMM DCM71	✓	✓	✓			
DS 7 CROSSBACK	engine management ECU	CMM MD1CS003	✓	✓	✓			
DS 7 CROSSBACK	engine management ECU	CMM MG1CS042	✓	✓	✓			
DS 7 CROSSBACK	engine management ECU	CMM VD56	✓	✓	✓			
DS 7 CROSSBACK	engine management ECU	CMM MG1CS042 PHEV	✓	✓	✓			
DS 7 CROSSBACK	traction battery ECU	TBMU PHEV	✓					
DS 7 CROSSBACK	Electric machine management ECU	MCU PHEV	✓	✓	✓			
DS 7 CROSSBACK	automatic or piloted manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓			

DS 7 CROSSBACK	automatic or piloted manual gearbox	BVA AXN8	✓	✓	✓			
DS 7 CROSSBACK	automatic or piloted manual gearbox	BVA EATN8	✓					
DS 7 CROSSBACK	automatic gearbox electric control ECU	COMELEC2	✓	✓	✓			
DS 7 CROSSBACK	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓			
DS 7 CROSSBACK	airbags and pretensioners ECU	RBG SPEED UDS	✓	✓	✓			
DS 7 CROSSBACK	built-in systems interface	BSI2010 EV	✓	✓	✓			
DS 7 CROSSBACK	power steering	DAE BVH2	✓	✓	✓			
DS 7 CROSSBACK	Electric steering lock	AVE	✓	✓	✓			
DS 7 CROSSBACK	anti-theft alarm	MUS2	✓	✓	✓			
DS 7 CROSSBACK	Intrusion alarm siren	SIR	✓	✓	✓			
DS 7 CROSSBACK	instrument panel	CIROCCO	✓	✓	✓			
DS 7 CROSSBACK	instrument panel	COMBINE UDS	✓	✓	✓			
DS 7 CROSSBACK	Hands full access ECU, right-hand side or rear	BAAST	✓					
DS 7 CROSSBACK	air conditioning	BCC	✓	✓	✓			
DS 7 CROSSBACK	rear air conditioning ECU	BCC ADD	✓	✓	✓			
DS 7 CROSSBACK	parking assistance	AAS UDS G6	✓	✓	✓			
DS 7 CROSSBACK	rear electric drive machine	RMCU PHEV	✓					
DS 7 CROSSBACK	ancillaries battery switch 1	LVNSD	✓	✓	✓			
DS 7 CROSSBACK	ancillaries battery switch 2	LVNSD2	✓	✓	✓			

DS 7 CROSSBACK	On-board charger / direct voltage transformer assembly	OBC DCDC PHEV	✓	✓	✓			
DS 7 CROSSBACK	diesel fuel additive pump	PADDGO_TI_UDS	✓	✓	✓			
DS 7 CROSSBACK	Voltage maintaining device	DMTC	✓					
DS 7 CROSSBACK	Sequential gear lever	ESM	✓	✓	✓			
DS 7 CROSSBACK	Variable damping ECU	CSS_UDS	✓	✓	✓			
DS 7 CROSSBACK	Dynamic headlamp height adjuster	BEMP_UDS	✓	✓	✓			
DS 7 CROSSBACK	Trailer relay unit	BSG 2010 RQ	✓	✓	✓			
DS 7 CROSSBACK	pedestrian horn	AVAS	✓	✓	✓			
DS 7 CROSSBACK	battery charge status control unit	BECB_GEN2	✓	✓	✓			
DS 7 CROSSBACK	controls under the steering wheel	COM2008P	✓	✓	✓			
DS 7 CROSSBACK	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓			
DS 7 CROSSBACK	Multifunction control panel	FMUX	✓	✓	✓			
DS 7 CROSSBACK	seat belt not fastened warning lights unit	TNB_2010	✓					
DS 7 CROSSBACK	windscreen wiper	ESV	✓	✓	✓			
DS 7 CROSSBACK	rain and sunlight sensor	CDPL_UDS_HELLA	✓	✓	✓			
DS 7 CROSSBACK	Panoramic visual assistance ECU	AVP	✓	✓	✓			
DS 7 CROSSBACK	Multifunction video camera (CMF)	CVM_3	✓	✓	✓			
DS 7 CROSSBACK	Vehicle Distance Assistance	RADAR_AV_4	✓	✓	✓			



DS 7 CROSSBACK	night vision ECU	BVN	✓	✓	✓			
DS 7 CROSSBACK	Driver monitoring camera	IVC D	✓	✓	✓			
DS 7 CROSSBACK	Signalling fuse box	BSG S	✓	✓	✓			
DS 7 CROSSBACK	touch screen	EMF_DGT_LVDS_BD	✓	✓	✓			
DS 7 CROSSBACK	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
DS 7 CROSSBACK	Telematic unit (RTx) or audio-navigation	RCC	✓	✓	✓			
DS 7 CROSSBACK	Service module / Independent telematic unit	BTA 3R	✓	✓	✓			
DS 7 CROSSBACK	Service module / Independent telematic unit	BTA 3S	✓	✓	✓			
DS 7 CROSSBACK	Service module / Independent telematic unit	BTA CN	✓	✓	✓			
DS 7 CROSSBACK	Service module / Independent telematic unit	BTA 2	✓	✓	✓			
DS 7 CROSSBACK	external CD player	CDE	✓	✓	✓			
DS 7 CROSSBACK	audio amplifier	AMPLI_AUDIO	✓	✓	✓			
DS 7 CROSSBACK	Clock	HORL	✓	✓	✓			
DS 7 CROSSBACK	Electric windows and exterior mirrors control pad ECU	BCLVR	✓	✓	✓			
DS 7 CROSSBACK	Motorised Boot Unit	VERINS MOTORISES	✓	✓	✓			
DS 7 CROSSBACK	rear air conditioning control panel	IHM AR CENTRAL	✓					
DS 7 CROSSBACK	air con compressor	CCE	✓					
DS 7 CROSSBACK	additional heating	BECH	✓					
DS 7 CROSSBACK	electric coolant heater	CTPE	✓					

DS 7 CROSSBACK	Front left seat heated pads and ventilation regulation ECU	BRNC_AVG	✓					
DS 7 CROSSBACK	Front right seat heated pads and ventilation regulation ECU	BRNC_AVD	✓					
DS 7 CROSSBACK	Driver's seat comfort ECU	SCB_D	✓	✓	✓			
DS 7 CROSSBACK	Driver's seat pneumatic functions ECU	SPB_D	✓					
DS 7 CROSSBACK	Passenger's seat pneumatic functions ECU	SPB_P	✓					
DS 7 CROSSBACK	Passenger compartment LEDs management ECU	PLMB	✓	✓	✓			
X83 Chine	engine management ECU	CMM_MG1CS042	✓	✓	✓			
X83 Chine	Electric machine management ECU	MCU_PHEV	✓					
X83 Chine	automatic or piloted manual gearbox	BVA_AXN8	✓	✓	✓			
X83 Chine	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	✓	✓	✓			
X83 Chine	airbags and pretensioners ECU	RBG_SPEED_UDS	✓	✓	✓			
X83 Chine	built-in systems interface	BSI2010_EV	✓	✓	✓			
X83 Chine	power steering	DAE_BVH2	✓	✓	✓			
X83 Chine	anti-theft alarm	MUS2	✓	✓	✓			
X83 Chine	Intrusion alarm siren	SIR	✓	✓	✓			
X83 Chine	instrument panel	CIROCCO	✓	✓	✓			

X83 Chine	instrument panel	COMBINE UDS	✓	✓	✓			
X83 Chine	Hands-free unit	SDCM	✓	✓	✓			
X83 Chine	Hands full access ECU, right-hand side or rear	BAAST	✓					
X83 Chine	air conditioning	BCC	✓	✓	✓			
X83 Chine	parking assistance	AAS UDS G6	✓	✓	✓			
X83 Chine	Sequential gear lever	ESM	✓	✓	✓			
X83 Chine	Variable damping ECU	CSS UDS	✓	✓	✓			
X83 Chine	Dynamic headlamp height adjuster	BEMP UDS	✓	✓	✓			
X83 Chine	battery charge status control unit	BECB GEN2	✓	✓	✓			
X83 Chine	controls under the steering wheel	COM2008P	✓	✓	✓			
X83 Chine	Controls on the steering wheel / Integral controls steering wheel	VCI	✓	✓	✓			
X83 Chine	Multifunction control panel	FMUX	✓	✓	✓			
X83 Chine	windscreen wiper	ESV	✓	✓	✓			
X83 Chine	rain and sunlight sensor	CDPL UDS HELLA	✓	✓	✓			
X83 Chine	Panoramic visual assistance ECU	AVP	✓	✓	✓			
X83 Chine	Multifunction video camera (CMF)	CVM 3	✓	✓	✓			
X83 Chine	Vehicle Distance Assistance	RADAR AV 4	✓	✓	✓			
X83 Chine	night vision ECU	BVN	✓	✓	✓			
X83 Chine	Driver monitoring camera	IVC D	✓	✓	✓			
X83 Chine	touch screen	EMF_DGT_LVDS_BD	✓	✓	✓			

X83 Chine	Telematic unit (RTx) or audio-navigation	NAC	✓	✓	✓			
X83 Chine	Telematic unit (RTx) or audio-navigation	RCC	✓	✓	✓			
X83 Chine	Service module / Independent telematic unit	BTA 3S	✓	✓	✓			
X83 Chine	Service module / Independent telematic unit	BTA CN	✓	✓	✓			
X83 Chine	audio amplifier	AMPLI_AUDIO	✓	✓	✓			
X83 Chine	Clock	HORL	✓	✓	✓			
X83 Chine	Electric windows and exterior mirrors control pad ECU	BCLVR	✓	✓	✓			
X83 Chine	Motorised Boot Unit	VERINS MOTORISES	✓	✓	✓			
X83 Chine	sunroof	TO_DTC	✓	✓	✓			
X83 Chine	rear air conditioning control panel	IHM_AR_CENTRAL	✓					
X83 Chine	Front left seat heated pads and ventilation regulation ECU	BRNC_AVG	✓					
X83 Chine	Front right seat heated pads and ventilation regulation ECU	BRNC_AVD	✓					
X83 Chine	Driver's seat comfort ECU	SCB_D	✓	✓	✓			
X83 Chine	Driver's seat pneumatic functions ECU	SPB_D	✓					
X83 Chine	Passenger compartment LEDs management ECU	PLMB	✓	✓	✓			

# Special Functions List

No.	Functions Name	System Name
S0033	Maintenance lights zero	Bsi
S0033	Maintenance lights zero	Bsi-Bsi 2010
S0033	Maintenance lights zero	Combination Instrument
S0033	Maintenance lights zero	Instrument Panel
S0033	Maintenance lights zero	Service And Maintenance
S0034	Throttle matching	Engine-1.1L Hfx Mm48P
S0034	Throttle matching	Engine-1.4L Kfv Sagem S2000 Pm1
S0034	Throttle matching	Engine-1.6L KFA/HFX/N6A/NFS/NFU ME744
S0034	Throttle matching	Engine-3.0L Xfx Bosch Me746
S0034	Throttle matching	Engine-5FV MED 17.4.2 EURO 5
S0034	Throttle matching	Engine-6Fy/Rfj Mm6Lpb
S0034	Throttle matching	Engine-Bosch Me749
S0034	Throttle matching	Engine-Dcm35 Br2
S0034	Throttle matching	Engine-J34P
S0034	Throttle matching	Engine-Kfa/Hfx/N6A/Nfs/Nfu Me744
S0034	Throttle matching	Engine-Kfu Mm6Lpc
S0034	Throttle matching	Engine-Kfu/Rfk/Rfn Mm6Lp
S0034	Throttle matching	Engine-Kfv Sagem S2000 Pm1
S0034	Throttle matching	Engine-Kfv Sagem S2000 Pm2
S0034	Throttle matching	Engine-Me745
S0034	Throttle matching	Engine-Me745 Ec5
S0034	Throttle matching	Engine-Me747
S0034	Throttle matching	Engine-Me749
S0034	Throttle matching	Engine-Med17 4 Euro4
S0034	Throttle matching	Engine-Med17 4 Euro5
S0034	Throttle matching	Engine-Med17_4_4
S0034	Throttle matching	Engine-Mev17 4 2
S0034	Throttle matching	Engine-Mev17 4 Euro4
S0034	Throttle matching	Engine-Mev17 4 Euro5
S0034	Throttle matching	Engine-Mevd17 4 2
S0034	Throttle matching	Engine-Mevd17.42 Euro 5 Ep6Cdtx

S0034	Throttle matching	Engine-Mm48P
S0034	Throttle matching	Engine-Mm6Kp
S0034	Throttle matching	Engine-Mm6Lpb
S0034	Throttle matching	Engine-N6A Bosch Me745
S0034	Throttle matching	Engine-N6A/N6B/Nfr/Nfs/Nfu Me745
S0034	Throttle matching	Engine-Nfu J35
S0034	Throttle matching	Engine-Rfj Mm6Lpb
S0034	Throttle matching	Engine-Rfj/6Fy Mm6Lpb
S0034	Throttle matching	Engine-Tu1A/Tu3A J34P
S0034	Throttle matching	Engine-Tu3A J34P
S0034	Throttle matching	Engine-V341
S0034	Throttle matching	Engine-V46
S0034	Throttle matching	Engine-V46 21
S0035	Steering angle reset	Abs With Or Without Esp-Bosch Esp 5.7
S0035	Steering angle reset	Abs-Abs8 Bosch
S0035	Steering angle reset	Abs-Abs8.1 Bosch
S0035	Steering angle reset	Abs-Abs81
S0035	Steering angle reset	Abs-Abs81 Bosch
S0035	Steering angle reset	Abs-Bosch Esp5.7
S0035	Steering angle reset	Abs-Electronic Stability Program
S0035	Steering angle reset	Abs-Esp 4X4
S0035	Steering angle reset	Abs-Esp 90
S0035	Steering angle reset	Abs-Esp Mk60
S0035	Steering angle reset	Abs-Esp8 Bosch
S0035	Steering angle reset	Abs-Esp8.1 Bosch
S0035	Steering angle reset	Abs-Esp81
S0035	Steering angle reset	Abs-Esp81
S0035	Steering angle reset	Abs-Esp81 Bosch
S0035	Steering angle reset	Abs-Esp81 Bosch
S0035	Steering angle reset	Abs-Espmk60 0
S0035	Steering angle reset	Electric Power Steering
S0035	Steering angle reset	Esp9
S0035	Steering angle reset	Steering Wheel Angle Sensor
S0035	Steering angle reset	Steering Wheel Switching Module(Vccf)

S0036	Injector code	Engine-Dcm34
S0036	Injector code	Engine-Dcm35
S0036	Injector code	Engine-Edcl6C3
S0036	Injector code	Engine-Edcl6C34 Dv4Td
S0036	Injector code	Engine-Edcl7C10 Br2
S0036	Injector code	Engine-Edcl7C10_Br2
S0036	Injector code	Engine-Edcl7Cp11
S0036	Injector code	Engine-Me749 Ec5
S0037	DPF regeneration	Engine-Dcm34
S0037	DPF regeneration	Engine-Dcm34 P
S0037	DPF regeneration	Engine-Dcm35
S0037	DPF regeneration	Engine-Dcm35 Br2
S0037	DPF regeneration	Engine-Dcm35 Hy
S0037	DPF regeneration	Engine-Edcl7C10
S0037	DPF regeneration	Engine-Edcl7C10 Br2
S0037	DPF regeneration	Engine-Edcl7C10_Br2
S0037	DPF regeneration	Engine-Edcl7Cp11
S0037	DPF regeneration	Engine-Edcl7Cp42
S0037	DPF regeneration	Engine-Hdi Sid803A
S0037	DPF regeneration	Engine-Hdi Sid807
S0037	DPF regeneration	Engine-Hdi Sid807 Br2
S0037	DPF regeneration	Engine-Me749 Ec5
S0037	DPF regeneration	Engine-Sid803A
S0038	Brake pad reset	Abs-Esp 90
S0038	Brake pad reset	Electric Secondary Brake
S0038	Brake pad reset	Esp9
S0039	exhaust	Abs
S0039	exhaust	Abs With Or Without Esp-Absmk100
S0039	exhaust	Abs-Abs Mk 70 1
S0039	exhaust	Abs-Abs8 Bosch
S0039	exhaust	Abs-Abs8.1 Bosch
S0039	exhaust	Abs-Abs81
S0039	exhaust	Abs-Abs81 Bosch
S0039	exhaust	Abs-Absmk100

S0039	exhaust	Abs-Absmk70 1
S0039	exhaust	Abs-Esp 90
S0039	exhaust	Abs-Esp Mk60
S0039	exhaust	Abs-Esp8 Bosch
S0039	exhaust	Abs-Esp8.1 Bosch
S0039	exhaust	Abs-Esp81
S0039	exhaust	Abs-Esp81
S0039	exhaust	Abs-Esp81 Bosch
S0039	exhaust	Abs-Esp81 Bosch
S0039	exhaust	Abs-Espmk100
S0039	exhaust	Abs-Espmk60 0
S0039	exhaust	Abs/Electronic Stability Program-Abs8
S0039	exhaust	Abs/Electronic Stability Program-Asr8.0
S0039	exhaust	Abs/Electronic Stability Program-Esp8
S0039	exhaust	Esp9
S003A	Battery matching	Battery Change Status Unit-Battery

*XT*TOOL