



# Shenzhen Xtooltech Co., Ltd

## GM Function List V13.40

### Tips and Instructions:

The programming function only supports H6PRO, H6PRO Master Edition products.

\* This feature is new.

✓ This feature is supported.

This feature is not supported.

※ This feature is partially supported.

Year	Make	Model Series	System Name	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Actuation Test	Special Functions
2024	Buick	Encore	Engine Control Module	✓	✓	✓	✓	✓	SP0263,SP0209,SP0132,SP0115,SP0086,SP0212,SP0214,SP0217,SP0006,SP0144,SP0139,SP0757,SP0085,SP075E,SP075F,SP0760,SP0761,SP0213,SP0762,SP0258,SP0763,SP0764,SP0765
2024	Buick	Encore	Transmission Control Module	✓	✓	✓	✓	✓	SP0017,SP0016,SP075C
2024	Buick	Encore	Brake System Control Module	✓	✓	✓	✓	✓	SP0766,SP0758,SP0767,SP0768,SP0229,SP078F,SP0790
2024	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	✓	✓	✓	✓	✓	SP0172,SP0134,SP0111,SP0758
2024	Buick	Encore	Body Control Module	✓	✓	✓	✓	✓	SP0199,SP0239,SP0161,SP0162,SP0163,SP0164,SP0165,SP0166,SP0167,SP0168,SP0242,SP0263,SP0203,SP0201,SP0208,SP0206,SP0083,SP0267,SP0160,SP0233,SP0159
2024	Buick	Encore	HVAC Control Module	✓	✓	✓	✓	✓	SP0007,SP0129
2024	Buick	Encore	HVAC Controls	✓	✓	✓	✓		
2024	Buick	Encore	Headlamp Control Module	✓	✓	✓	✓	✓	SP0195
2024	Buick	Encore	Liftgate Control Module	✓	✓	✓	✓	✓	SP0146,SP0169
2024	Buick	Encore	Seat Memory Control Module - Driver	✓	✓	✓	✓	✓	
2024	Buick	Encore	Telematics Communication Interface Control Module	✓	✓	✓	✓	✓	SP0755
2024	Buick	Encore	Rear Drive Control Module	✓	✓	✓	✓	✓	SP0003
2024	Buick	Encore	Video Processing Control Module	✓	✓	✓	✓	✓	
2024	Buick	Encore	Amplifier	✓	✓	✓	✓		

2024	Buick	Encore	Frontview Camera - Windshield	√	√	√	√		SP0196,SP0084
2024	Buick	Encore	Radio	√	√	√	√	√	SP0269,SP0150
2024	Buick	Encore	Head-Up Display Module	√	√	√	√	√	
2024	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	SP0247
2024	Buick	Encore	Serial Data Gateway Module - Processor 1	√	√	√			
2024	Buick	Encore	Serial Data Gateway Module - Processor 2	√	√	√			
2024	Buick	Encore	Side Obstacle Detection Control Module - Left	√	√	√		√	
2024	Buick	Encore	Side Obstacle Detection Control Module - Right	√	√	√		√	
2024	Buick	Encore	Steering Column Lock Control Module	√	√	√	√		
2024	Buick	Encore	Keyless Entry Control Module	√	√	√	√	√	SP0759
2024	Buick	Encore	Passenger Presence Module	√	√	√	√	√	SP0057
2024	Buick	Encore	Power Steering Control Module	√	√	√	√	√	SP0089,SP0084
2024	Buick	Envista	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP0132, SP0115,SP0086,SP0212, SP0214,SP0217,SP0006, SP0144,SP0139,SP0757, SP0007
2024	Buick	Envista	Transmission Control Module	√	√	√	√	√	SP0017,SP0036
2024	Buick	Envista	Brake System Control Module	√	√	√	√	√	SP0766,SP0758,SP0767, SP0768,SP0229,SP078F, SP0790
2024	Buick	Envista	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	SP0172,SP0134,SP0111, SP0758
2024	Buick	Envista	Body Control Module	√	√	√	√	√	SP0199,SP0239,SP0161, SP0162,SP0163,SP0164, SP0165,SP0166,SP0167, SP0168,SP0242,SP0263, SP0203,SP0201,SP0208, SP0206,SP0083,SP0267, SP0160,SP0233,SP0159
2024	Buick	Envista	HVAC Control Module	√	√	√	√	√	SP0007,SP0129
2024	Buick	Envista	HVAC Controls	√	√	√	√		
2024	Buick	Envista	Liftgate Control Module	√	√	√	√	√	SP0146,SP0169
2024	Buick	Envista	Telematics Communication Interface Control Module	√	√	√	√	√	SP0755
2024	Buick	Envista	Frontview Camera - Windshield	√	√	√	√		SP0196,SP0084
2024	Buick	Envista	Keyless Entry Control Module	√	√	√	√	√	SP0759
2024	Buick	Envista	Passenger Presence Module	√	√	√	√	√	SP0057
2024	Buick	Envista	Radio	√	√	√	√	√	SP0269,SP0793,SP0267, SP0226
2024	Buick	Envista	Power Steering Control Module	√	√	√	√	√	SP0089,SP0084

2024	Buick	Envision	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP075E, SP076B,SP0760,SP076C ,SP0115,SP076D,SP0761 ,SP0086,SP076E,SP0212 ,SP0217,SP0006,SP0144, SP0764,SP0763,SP0258, SP0129
2024	Buick	Envision	Transmission Control Module	√	√	√	√	√	SP0019,SP076A
2024	Buick	Envision	Brake System Control Module	√	√	√	√	√	SP0767,SP0768,SP0766, SP0758,SP0229,SP078F, SP0790,SP0799
2024	Buick	Envision	Restraints Control Module	√	√	√	√	√	SP0758,SP0134
2024	Buick	Envision	Body Control Module	√	√	√	√	√	SP0263,SP0226,SP0754, SP0007,SP0129,SP0267
2024	Buick	Envision	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	Buick	Envision	Headlamp Control Module	√	√	√	√		SP0195
2024	Buick	Envision	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	Buick	Envision	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	Buick	Envision	Restraints Occupant Classification System Module - Passenger	√	√	√	√		SP0057
2024	Buick	Envision	Power Steering Control Module	√	√	√	√		SP0766
2024	Buick	Envision	Electronic Suspension Control Module	√	√	√	√	√	SP0198
2024	Buick	Envision	Rear Drive Control Module	√	√	√	√	√	
2024	Buick	Envision	Video Processing Module	√	√	√			
2024	Buick	Envision	Wireless Accessory Charging Module	√	√	√	√		
2024	Buick	Enclave	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP0115, SP0756,SP0086,SP0085, SP0757,SP0217,SP0258, SP0139,SP0006
2024	Buick	Enclave	Transmission Control Module	√	√	√	√	√	SP0017
2024	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	SP0225,SP0090,SP0111, SP0277,SP0229
2024	Buick	Enclave	Body Control Module	√	√	√	√	√	SP0199,SP0239,SP0161, SP0162,SP0163,SP0164, SP0165,SP0166,SP0167, SP0168,SP0242,SP0263, SP0203,SP0201,SP0208, SP0206,SP0083,SP0267, SP0160,SP0233,SP0159
2024	Buick	Enclave	Instrument Cluster	√	√	√	√	√	SP0247
2024	Buick	Enclave	HVAC Control Module	√	√	√	√	√	SP0007,SP0129
2024	Buick	Enclave	HVAC Controls	√	√	√	√		
2024	Buick	Enclave	Chassis Control Module	√	√	√	√	√	SP0014,SP0078

2024	Buick	Enclave	Liftgate Control Module	√	√	√	√	√	SP0146,SP0169
2024	Buick	Enclave	Seat Memory Control Module - Driver	√	√	√	√	√	
2024	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	SP0755
2024	Buick	Enclave	Headlamp Control Module	√	√	√	√	√	SP0195
2024	Buick	Enclave	Power Steering Control Module	√	√	√	√	√	SP0089,SP0084
2024	Buick	Enclave	Suspension Control Module	√	√	√	√	√	
2024	Buick	Enclave	Amplifier	√	√	√	√		
2024	Buick	Enclave	Radio Controls	√	√	√	√		SP0241
2024	Buick	Enclave	Radio	√	√	√	√	√	SP0269,SP0793,SP0267, SP0226
2024	Buick	Enclave	Serial Data Gateway Module - Processor 2	√	√	√			
2024	Buick	Enclave	Serial Data Gateway Module - Processor 1	√	√	√			
2024	Buick	Enclave	Side Obstacle Detection Control Module - Right	√	√	√		√	
2024	Buick	Enclave	Side Obstacle Detection Control Module - Left	√	√	√		√	
2024	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	SP0247
2024	Buick	Enclave	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Buick	Enclave	Passenger Presence Module	√	√	√	√	√	SP0057
2024	Buick	Enclave	Active Safety Control Module	√	√	√	√		
2024	Buick	Enclave	Rear Drive Control Module	√	√	√	√	√	SP0003
2024	Buick	Enclave	Video Processing Control Module	√	√	√	√	√	
2024	Buick	Enclave	Frontview Camera - Windshield	√	√	√	√		SP0196,SP075A
2024	Cadillac	CT4	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP075E, SP076B,SP0760,SP076C ,SP0115,SP076D,SP0761 ,SP0086,SP076E,SP0212 ,SP0217,SP0006,SP0144, SP0764,SP0763,SP0258, SP0139,SP0156,SP0770, SP0076,SP0774,SP0773, SP0775,SP0154
2024	Cadillac	CT4	Transmission Control Module	√	√	√	√	√	SP0017,SP0033,SP0016
2024	Cadillac	CT4	Brake System Control Module	√	√	√	√	√	SP0767,SP0768,SP0766, SP0758,SP0229,SP078F, SP0790,SP0799
2024	Cadillac	CT4	Restraints Control Module	√	√	√	√	√	SP0758,SP0134
2024	Cadillac	CT4	Instrument Panel Cluster Control Module	√	√	√	√	√	
2024	Cadillac	CT4	Serial Data Gateway Module	√	√	√			
2024	Cadillac	CT4	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	CT4	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	CT4	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	Cadillac	CT4	Differential Control Module	√	√	√	√	√	SP07B7,SP07B8
2024	Cadillac	CT4	Vehicle Performance Data Recorder	√	√	√	√		
2024	Cadillac	CT4	Video Processing Module	√	√	√			

2024	Cadillac	CT4	Wireless Accessory Charging Module	√	√	√	√		
2024	Cadillac	CT4	Power Steering Control Module	√	√	√	√		SP0766
2024	Cadillac	CT4	Electronic Suspension Control Module	√	√	√	√	√	SP0198
2024	Cadillac	CT4	Transfer Case Control Module	√	√	√	√	√	SP0099,SP0100
2024	Cadillac	CT4	Restraints Occupant Classification System Module - Passenger	√	√	√	√		SP0057
2024	Cadillac	CT4	Audio Amplifier	√	√	√	√		
2024	Cadillac	CT4	Automated Driving Mapping Module	√	√	√	√	√	
2024	Cadillac	CT4	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2024	Cadillac	CT4	Infotainment Control Switch	√	√	√			
2024	Cadillac	CT4	Radio Controls	√	√	√	√		
2024	Cadillac	CT4	Radio	√	√	√	√	√	SP0269,SP0769,SP07A7,SP07A8
2024	Cadillac	CT4	Steering Column Lock Control Module	√	√	√	√		
2024	Cadillac	CT4	Parking Assist Control Module	√	√	√	√	√	
2024	Cadillac	CT4	Lighting Control Module	√	√	√	√	√	
2024	Cadillac	CT4	Gear Shift Control Module	√					
2024	Cadillac	CT4	Side Obstacle Detection Control Module - Left	√	√	√			
2024	Cadillac	CT4	Side Obstacle Detection Control Module - Right	√	√	√			
2024	Cadillac	CT4	Image Processing Module	√	√	√	√		
2024	Cadillac	CT4	Driver Monitoring System Control Module	√	√	√			
2024	Cadillac	CT4	Image Processing Module 1 - Processor 1	√	√	√	√		
2024	Cadillac	CT4	Image Processing Module 1 - Processor 2	√	√	√			SP0758
2024	Cadillac	CT4	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	Cadillac	CT4	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	Cadillac	CT4	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	Cadillac	CT4	Short Range Radar Sensor - Right Rear	√	√	√			SP0772
2024	Cadillac	CT4	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Cadillac	CT4	Frontview Camera - Windshield	√	√	√	√		SP0196
2024	Cadillac	Lyriq	Brake System Control Module	√	√	√	√	√	SP0225,SP0229,SP078E,SP0767,SP0758,SP0090
2024	Cadillac	Lyriq	Restraints Control Module	√	√	√	√	√	SP0758,SP0134
2024	Cadillac	Lyriq	Body Control Module	√	√	√	√	√	SP0263,SP0226,SP0754,SP0007,SP0129,SP0267
2024	Cadillac	Lyriq	Serial Data Gateway Module	√	√	√			
2024	Cadillac	Lyriq	Head-Up Display Module	√	√	√			
2024	Cadillac	Lyriq	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	Lyriq	Headlamp Control Module	√	√	√	√		SP0195
2024	Cadillac	Lyriq	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	Lyriq	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	Cadillac	Lyriq	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	Cadillac	Lyriq	Side Obstacle Detection Control Module - Left	√	√	√			

2024	Cadillac	Lyriq	Side Obstacle Detection Control Module - Right	√	√	√			
2024	Cadillac	Lyriq	Video Processing Module	√	√	√			
2024	Cadillac	Lyriq	Wireless Accessory Charging Module	√	√	√	√		
2024	Cadillac	Lyriq	Drive Motor Control Module 2	√	√	√	√		SP07B9
2024	Cadillac	Lyriq	Drive Motor Control Module	√	√	√	√	√	SP07B9,SP0258
2024	Cadillac	Lyriq	Lighting Control Module	√	√	√	√	√	
2024	Cadillac	Lyriq	Parking Assist Control Module	√	√	√	√	√	
2024	Cadillac	Lyriq	Steering Column Lock Control Module	√	√	√	√		
2024	Cadillac	Lyriq	Near Field Communication Module	√	√	√	√		
2024	Cadillac	Lyriq	Restraints Occupant Classification System Module - Passenger	√	√	√	√		SP0057
2024	Cadillac	Lyriq	Image Processing Module 1 - Processor 1	√	√	√	√		SP0758,SP0766
2024	Cadillac	Lyriq	Image Processing Module 1 - Processor 2	√	√	√	√		SP07CF
2024	Cadillac	Lyriq	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Cadillac	Lyriq	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	Cadillac	Lyriq	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	Cadillac	Lyriq	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	Cadillac	Lyriq	Short Range Radar Sensor - Right Rear	√	√	√			SP0772
2024	Cadillac	Lyriq	Battery Energy Control Module	√	√	√	√	√	SP07BA,SP0115,SP07B B,SP07BC,SP07BD,SP0 7BE,SP0123,SP07BF,SP 07C0,SP07C1,SP07C2,S P07C3,SP07D0,SP07C4, SP07C5,SP07C6,SP07C7
2024	Cadillac	Lyriq	Audio Amplifier	√	√	√	√	√	
2024	Cadillac	Lyriq	Frontview Camera - Windshield	√	√	√	√		SP0196
2024	Cadillac	Lyriq	Heater and Air Conditioning Auxiliary Control	√	√	√			
2024	Cadillac	Lyriq	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2024	Cadillac	Lyriq	Infotainment Control Switch	√	√	√			
2024	Cadillac	Lyriq	Radio	√	√	√	√	√	SP07A8
2024	Cadillac	Lyriq	Power Steering Control Module 1	√	√	√	√		SP0766,SP07C8
2024	Cadillac	Lyriq	Power Steering Control Module 2	√	√	√	√		
2024	Cadillac	Lyriq	Automatic Level Control Module	√	√	√	√	√	SP0785,SP0786,SP0787, SP0788,SP0789,SP078A, SP078B,SP078C,SP078D
2024	Cadillac	Lyriq	Short Range Radar Sensor - Rear Middle	√	√	√			SP0772
2024	Cadillac	Lyriq	Automated Driving Mapping Module	√	√	√	√	√	

2024	Cadillac	XT4	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP075E, SP076B,SP0760,SP076C ,SP0115,SP076D,SP0761 ,SP0086,SP076E,SP0212 ,SP0217,SP0006,SP0144, SP0764,SP0763,SP0258, SP0120
2024	Cadillac	XT4	Transmission Control Module	√	√	√	√	√	SP0019,SP076A
2024	Cadillac	XT4	Brake System Control Module	√	√	√	√	√	SP0767,SP0768,SP0766, SP0758,SP0229,SP078F, SP0790,SP0799
2024	Cadillac	XT4	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	SP0172,SP0134,SP0111, SP0758
2024	Cadillac	XT4	Body Control Module	√	√	√	√	√	SP0263,SP0226,SP0754, SP0007,SP0129,SP0267
2024	Cadillac	XT4	Serial Data Gateway Module	√	√	√			
2024	Cadillac	XT4	Headlamp Control Module	√	√	√	√		SP0195
2024	Cadillac	XT4	Rear Drive Control Module	√	√	√	√	√	
2024	Cadillac	XT4	Side Obstacle Detection Control Module - Left	√	√	√			
2024	Cadillac	XT4	Side Obstacle Detection Control Module - Right	√	√	√			
2024	Cadillac	XT4	Parking Assist Control Module	√	√	√	√	√	
2024	Cadillac	XT4	Steering Column Lock Control Module	√	√	√	√		
2024	Cadillac	XT4	Infotainment Control Switch	√	√	√			
2024	Cadillac	XT4	Radio	√	√	√	√	√	SP07A8
2024	Cadillac	XT4	Passenger Presence Module	√	√	√	√	√	SP0057
2024	Cadillac	XT4	Keyless Entry Control Module	√	√	√	√	√	
2024	Cadillac	XT4	Power Steering Control Module	√	√	√	√		SP0766
2024	Cadillac	XT4	Lighting Control Module	√	√	√	√	√	
2024	Cadillac	XT4	Wireless Accessory Charging Module	√	√	√	√		
2024	Cadillac	XT4	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Cadillac	XT4	Short Range Radar Sensor - Rear Middle	√	√	√			SP0772
2024	Cadillac	XT4	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	Cadillac	XT4	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	Cadillac	XT4	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	Cadillac	XT4	Short Range Radar Sensor - Right Rear	√	√	√			SP0772
2024	Cadillac	XT4	Image Processing Module 1 - Processor 2	√	√	√	√		SP07CF
2024	Cadillac	XT4	Image Processing Module 1 - Processor 1	√	√	√	√		
2024	Cadillac	XT4	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	XT4	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	XT4	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	Cadillac	XT4	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	Cadillac	XT4	Video Processing Module	√	√	√			
2024	Cadillac	XT4	Driver Monitoring System Control Module	√	√	√	√		

2024	Cadillac	XT4	Gear Shift Control Module	√					
2024	Cadillac	XT4	Audio Amplifier	√	√	√	√		
2024	Cadillac	XT4	Frontview Camera - Windshield	√	√	√	√		SP0196
2024	Cadillac	XT4	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2024	Cadillac	XT4	Electronic Suspension Control Module	√	√	√	√	√	
2024	Cadillac	CT5	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP075E, SP076B,SP0760,SP076C ,SP0115,SP076D,SP0761 ,SP0086,SP076E,SP0212 ,SP0217,SP0006,SP0144, SP0764,SP0763,SP0258, SP0139,SP0156,SP0770, SP0076,SP0774,SP0773, SP0775,SP0154,SP07CD
2024	Cadillac	CT5	Transmission Control Module	√	√	√	√	√	SP0017,SP0033,SP0016
2024	Cadillac	CT5	Brake System Control Module	√	√	√	√	√	SP0767,SP0768,SP0766, SP0758,SP0229,SP078F, SP0790,SP0799
2024	Cadillac	CT5	Restraints Control Module	√	√	√	√	√	SP0758,SP0134
2024	Cadillac	CT5	Body Control Module	√	√	√	√	√	SP0263,SP0226,SP0754, SP0007,SP0129,SP0267
2024	Cadillac	CT5	Instrument Panel Cluster Control Module	√	√	√	√	√	
2024	Cadillac	CT5	Serial Data Gateway Module	√	√	√			
2024	Cadillac	CT5	Transfer Case Control Module	√	√	√	√	√	SP0099,SP0100
2024	Cadillac	CT5	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	CT5	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	CT5	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	Cadillac	CT5	Electronic Suspension Control Module	√	√	√	√	√	
2024	Cadillac	CT5	Power Steering Control Module	√	√	√	√		SP0766
2024	Cadillac	CT5	Audio Amplifier	√	√	√	√		
2024	Cadillac	CT5	Automated Driving Mapping Module	√	√	√	√	√	
2024	Cadillac	CT5	Frontview Camera - Windshield	√	√	√	√		SP0196
2024	Cadillac	CT5	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2024	Cadillac	CT5	Infotainment Control Switch	√	√	√			
2024	Cadillac	CT5	Radio Controls	√	√	√	√		
2024	Cadillac	CT5	Radio	√	√	√	√	√	SP0269,SP0769,SP07A7, SP07A8
2024	Cadillac	CT5	Gear Shift Control Module	√					
2024	Cadillac	CT5	Lighting Control Module	√	√	√	√	√	
2024	Cadillac	CT5	Side Obstacle Detection Control Module - Right	√	√	√			
2024	Cadillac	CT5	Side Obstacle Detection Control Module - Left	√	√	√			
2024	Cadillac	CT5	Parking Assist Control Module	√	√	√	√	√	



2024	Cadillac	CT5	Steering Column Lock Control Module	√	√	√	√		
2024	Cadillac	CT5	Restraints Occupant Classification System Module - Passenger	√	√	√	√		SP0057
2024	Cadillac	CT5	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	SP0266
2024	Cadillac	CT5	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	SP0266
2024	Cadillac	CT5	Differential Control Module	√	√	√	√	√	SP07B7,SP07B8
2024	Cadillac	CT5	Vehicle Performance Data Recorder	√	√	√	√		
2024	Cadillac	CT5	Video Processing Module	√	√	√			
2024	Cadillac	CT5	Wireless Accessory Charging Module	√	√	√	√		
2024	Cadillac	CT5	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Cadillac	CT5	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	Cadillac	CT5	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	Cadillac	CT5	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	Cadillac	CT5	Short Range Radar Sensor - Right Rear	√	√	√			SP0772
2024	Cadillac	CT5	Short Range Radar Sensor - Rear Middle	√	√	√			SP0772
2024	Cadillac	CT5	Image Processing Module	√	√	√	√		
2024	Cadillac	CT5	Image Processing Module 1 - Processor 1	√	√	√	√		
2024	Cadillac	CT5	Image Processing Module 1 - Processor 2	√	√	√			SP0758
2024	Cadillac	CT5	Driver Monitoring System Control Module	√	√	√			
2024	Cadillac	XT5	Engine Control Module	√	√	√	√	√	SP0209,SP075E,SP0760,SP076C,SP0115,SP0263,SP0761,SP0086,SP0085,SP0757,SP0212,SP0217,SP0006,SP0144,SP0764,SP0763,SP0258,SP0139,SP0756
2024	Cadillac	XT5	Transmission Control Module	√	√	√	√	√	SP0017
2024	Cadillac	XT5	Brake System Control Module	√	√	√	√	√	SP0090,SP0758,SP0768,SP0767,SP078E,SP0225,SP0229,SP078F,SP0790
2024	Cadillac	XT5	Electronic Brake Control Module	√	√	√	√	√	SP0225,SP0090,SP0111,SP0277,SP0229
2024	Cadillac	XT5	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	SP0172,SP0134,SP0111,SP0758
2024	Cadillac	XT5	Body Control Module	√	√	√	√	√	SP0199,SP0239,SP0161,SP0162,SP0163,SP0164,SP0165,SP0166,SP0167,SP0168,SP0242,SP0263,SP0203,SP0201,SP0208,SP0206,SP0083,SP0267,SP0160,SP0233,SP0159
2024	Cadillac	XT5	Instrument Cluster	√	√	√	√	√	SP0247
2024	Cadillac	XT5	HVAC Control Module	√	√	√	√	√	SP0007,SP0129

2024	Cadillac	XT5	HVAC Controls	√	√	√	√		
2024	Cadillac	XT5	Headlamp Control Module		√	√			
2024	Cadillac	XT5	Liftgate Control Module	√	√	√	√	√	SP0146,SP0169
2024	Cadillac	XT5	Seat Memory Control Module - Driver	√	√	√	√	√	
2024	Cadillac	XT5	Telematics Communication Interface Control Module	√	√	√	√	√	SP0755
2024	Cadillac	XT5	Amplifier	√	√	√	√		
2024	Cadillac	XT5	Infotainment Control Switch	√	√	√			
2024	Cadillac	XT5	Radio Controls	√	√	√	√		
2024	Cadillac	XT5	Radio	√	√	√	√	√	SP0269,SP0793,SP0267,SP0226
2024	Cadillac	XT5	Active Safety Control Module	√	√	√	√	√	
2024	Cadillac	XT5	Night Vision Camera Control Module	√	√	√	√		SP0492
2024	Cadillac	XT5	Rear Drive Control Module	√	√	√	√	√	SP0003
2024	Cadillac	XT5	Trailer Lighting Control Module	√	√	√	√	√	SP0247
2024	Cadillac	XT5	Video Processing Control Module	√	√	√	√	√	
2024	Cadillac	XT5	Frontview Camera - Windshield	√	√	√	√		SP0196,SP075A
2024	Cadillac	XT5	Parking Assist Control Module	√	√	√	√	√	SP0247
2024	Cadillac	XT5	Serial Data Gateway Module - Processor 1	√	√	√			
2024	Cadillac	XT5	Serial Data Gateway Module - Processor 2	√	√	√			
2024	Cadillac	XT5	Steering Column Lock Control Module	√	√	√	√		
2024	Cadillac	XT5	Side Obstacle Detection Control Module - Left	√	√	√		√	
2024	Cadillac	XT5	Side Obstacle Detection Control Module - Right	√	√	√		√	
2024	Cadillac	XT5	Keyless Entry Control Module	√	√	√	√	√	SP0759
2024	Cadillac	XT5	Passenger Presence Module	√	√	√	√	√	SP0057
2024	Cadillac	XT5	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	SP0266
2024	Cadillac	XT5	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	SP0266
2024	Cadillac	XT5	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Cadillac	XT5	Short Range Radar Sensor - Rear Middle	√	√	√			
2024	Cadillac	XT5	Power Steering Control Module	√	√	√	√		SP0081,SP0080,SP0089
2024	Cadillac	XT5	Suspension Control Module	√	√	√	√	√	
2024	Cadillac	XT6	Engine Control Module	√	√	√	√	√	SP0209,SP075E,SP0760,SP076C,SP0115,SP0263,SP0761,SP0086,SP0085,SP0757,SP0212,SP0217,SP0006,SP0144,SP0764,SP0763,SP0258,SP0139,SP0756
2024	Cadillac	XT6	Transmission Control Module	√	√	√	√	√	SP0017
2024	Cadillac	XT6	Brake System Control Module	√	√	√	√	√	SP0090,SP0758,SP0768,SP0767,SP078E,SP0225,SP0229,SP078F,SP0790
2024	Cadillac	XT6	Electronic Brake Control Module	√	√	√	√	√	SP0225,SP0090,SP0111,SP0277,SP0229

2024	Cadillac	XT6	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	SP0172,SP0134,SP0111,SP0758
2024	Cadillac	XT6	Body Control Module	√	√	√	√	√	SP0199,SP0239,SP0161,SP0162,SP0163,SP0164,SP0165,SP0166,SP0167,SP0168,SP0242,SP0263,SP0203,SP0201,SP0208,SP0206,SP0083,SP0267,SP0160,SP0233,SP0159
2024	Cadillac	XT6	Instrument Cluster	√	√	√	√	√	SP0247
2024	Cadillac	XT6	HVAC Control Module	√	√	√	√	√	SP0007,SP0129
2024	Cadillac	XT6	HVAC Controls	√	√	√	√		
2024	Cadillac	XT6	Headlamp Control Module	√	√	√	√	√	SP0195
2024	Cadillac	XT6	Liftgate Control Module	√	√	√	√	√	SP0146,SP0169
2024	Cadillac	XT6	Seat Memory Control Module - Driver	√	√	√	√	√	
2024	Cadillac	XT6	Telematics Communication Interface Control Module	√	√	√	√	√	SP0755
2024	Cadillac	XT6	Amplifier	√	√	√	√		
2024	Cadillac	XT6	Infotainment Control Switch	√	√	√			
2024	Cadillac	XT6	Radio Controls	√	√	√	√		
2024	Cadillac	XT6	Radio	√	√	√	√	√	SP0269,SP0793,SP0267,SP0226
2024	Cadillac	XT6	Active Safety Control Module 1 - Processor A	√	√	√	√		SP0268,SP0794
2024	Cadillac	XT6	Active Safety Control Module 1 - Processor B	√	√	√	√		SP0111,SP0268
2024	Cadillac	XT6	Active Safety Control Module 1 - Processor C	√	√	√	√		SP0268
2024	Cadillac	XT6	Active Safety Control Module 2 - Processor A	√	√	√	√		SP0268,SP0794
2024	Cadillac	XT6	Active Safety Control Module 2 - Processor B	√	√	√	√		SP0111,SP0268
2024	Cadillac	XT6	Active Safety Control Module 2 - Processor C	√	√	√	√		SP0268
2024	Cadillac	XT6	Active Safety Control Module	√	√	√	√	√	
2024	Cadillac	XT6	Frontview Camera - Windshield	√	√	√	√		SP0196,SP075A
2024	Cadillac	XT6	Night Vision Camera Control Module	√	√	√	√		SP0492
2024	Cadillac	XT6	Rear Drive Control Module	√	√	√	√	√	SP0003
2024	Cadillac	XT6	Trailer Lighting Control Module	√	√	√	√	√	SP0247
2024	Cadillac	XT6	Video Processing Control Module	√	√	√	√	√	
2024	Cadillac	XT6	Parking Assist Control Module	√	√	√	√	√	SP0247
2024	Cadillac	XT6	Steering Column Lock Control Module	√	√	√	√		
2024	Cadillac	XT6	Side Obstacle Detection Control Module - Left	√	√	√		√	
2024	Cadillac	XT6	Side Obstacle Detection Control Module - Right	√	√	√		√	
2024	Cadillac	XT6	Serial Data Gateway Module - Processor 1	√	√	√			
2024	Cadillac	XT6	Serial Data Gateway Module - Processor 2	√	√	√			
2024	Cadillac	XT6	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	SP0266
2024	Cadillac	XT6	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	SP0266
2024	Cadillac	XT6	Keyless Entry Control Module	√	√	√	√	√	SP0759

2024	Cadillac	XT6	Passenger Presence Module	√	√	√	√	√	SP0057
2024	Cadillac	XT6	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Cadillac	XT6	Short Range Radar Sensor - Rear Middle	√	√	√			
2024	Cadillac	XT6	Power Steering Control Module	√	√	√	√	√	SP0089,SP0084
2024	Cadillac	XT6	Suspension Control Module	√	√	√	√	√	
2024	Cadillac	XT6	Driver Monitoring System Control Module	√	√	√	√		
2024	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP076C, SP0115,SP0086,SP0085, SP076E,SP0212,SP0217, SP0775,SP0258,SP0139, SP0773,SP0144
2024	Cadillac	Escalade	Transmission Control Module	√	√	√	√	√	SP0017,SP0033,SP0016
2024	Cadillac	Escalade	Body Control Module	√	√	√	√	√	SP0263,SP0226,SP0754, SP0007,SP0129,SP0267
2024	Cadillac	Escalade	Serial Data Gateway Module	√	√	√			
2024	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	SP0037,SP0099,SP0100, SP0776
2024	Cadillac	Escalade	Chassis Control Module - Auxiliary	√	√	√	√		
2024	Cadillac	Escalade	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	Escalade	Headlamp Control Module	√	√	√	√		SP0195
2024	Cadillac	Escalade	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	Escalade	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	Cadillac	Escalade	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	Cadillac	Escalade	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Cadillac	Escalade	Image Processing Module 1 - Processor 1	√	√	√	√		SP0758,SP0766
2024	Cadillac	Escalade	Image Processing Module 1 - Processor 2	√	√	√	√		SP07CF
2024	Cadillac	Escalade	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	Cadillac	Escalade	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	Cadillac	Escalade	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	Cadillac	Escalade	Short Range Radar Sensor - Right Rear	√	√	√			SP0772
2024	Cadillac	Escalade	Audio Amplifier	√	√	√	√		
2024	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP076C, SP0115,SP0086,SP0085, SP076E,SP0212,SP0217, SP0775,SP0258,SP0139, SP0773,SP0144
2024	Cadillac	Escalade ESV	Transmission Control Module	√	√	√	√	√	SP0017,SP0033,SP0016
2024	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	SP0263,SP0226,SP0754, SP0007,SP0129,SP0267
2024	Cadillac	Escalade ESV	Serial Data Gateway Module	√	√	√			
2024	Cadillac	Escalade ESV	Chassis Control Module - Auxiliary	√	√	√	√		

2024	Cadillac	Escalade ESV	Transfer Case Control Module	√	√	√	√	√	SP0037,SP0099,SP0100,SP0776
2024	Cadillac	Escalade ESV	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	Escalade ESV	Headlamp Control Module	√	√	√	√		SP0195
2024	Cadillac	Escalade ESV	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	Escalade ESV	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	Cadillac	Escalade ESV	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	Cadillac	Escalade ESV	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Cadillac	Escalade ESV	Image Processing Module 1 - Processor 1	√	√	√	√		SP0758,SP0766
2024	Cadillac	Escalade ESV	Image Processing Module 1 - Processor 2	√	√	√	√		SP07CF
2024	Cadillac	Escalade ESV	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	Cadillac	Escalade ESV	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	Cadillac	Escalade ESV	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	Cadillac	Escalade ESV	Short Range Radar Sensor - Right Rear	√	√	√			SP0772
2024	Cadillac	Celestiq	Body Control Module	√	√	√	√	√	SP0263,SP0226,SP0754,SP0007,SP0129,SP0267
2024	Cadillac	Celestiq	Serial Data Gateway Module	√	√	√			
2024	Cadillac	Celestiq	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	Cadillac	Celestiq	Drive Motor Control Module 2		√	√			
2024	Cadillac	Celestiq	Drive Motor Control Module		√	√			
2024	Cadillac	Celestiq	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	Celestiq	Front Side Door Access Control Module - Left	√	√	√	√	√	
2024	Cadillac	Celestiq	Front Side Door Access Control Module - Right	√	√	√	√	√	
2024	Cadillac	Celestiq	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2024	Cadillac	Celestiq	Rear Side Door Access Control Module - Left	√	√	√	√	√	
2024	Cadillac	Celestiq	Rear Side Door Access Control Module - Right	√	√	√	√	√	
2024	Cadillac	Celestiq	Battery Energy Control Module	√	√	√	√	√	SP07BA,SP0115,SP07BB,SP07BC,SP07BD,SP07BE,SP0123,SP07BF,SP07C0,SP07C1,SP07C2,SP07C3,SP07D0,SP07C4,SP07C5,SP07C6,SP07C7
2024	Cadillac	Celestiq	Lighting Control Module	√	√	√	√	√	
2024	Cadillac	Celestiq	Side Obstacle Detection Control Module - Left	√	√	√			
2024	Cadillac	Celestiq	Side Obstacle Detection Control Module - Right	√	√	√			
2024	Cadillac	Celestiq	Powertrain Compartment Cover Module	√	√	√	√	√	SP07A0,SP07A1,SP07A2,SP07A3,SP07A4,SP07
2024	Cadillac	Celestiq	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	Cadillac	Celestiq	Rear Seat Adjuster Memory Module - Left		√	√			
2024	Cadillac	Celestiq	Rear Seat Adjuster Memory Module - Right		√	√			

2024	Chevrolet	Colorado	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP075E, SP0760,SP076C,SP0115, SP076D,SP0761,SP0086, SP076E,SP0212,SP0217, SP0006,SP0144,SP0258, SP0130
2024	Chevrolet	Colorado	Transmission Control Module	√	√	√	√	√	SP0017,SP0033
2024	Chevrolet	Colorado	Serial Data Gateway Module	√	√	√			
2024	Chevrolet	Colorado	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	Chevrolet	Colorado	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	Chevrolet	Colorado	Trailer Lamp Control Module	√	√	√	√	√	
2024	Chevrolet	Colorado	Video Processing Module	√	√	√	√		
2024	Chevrolet	Colorado	Wireless Accessory Charging Module	√	√	√	√		
2024	Chevrolet	Colorado	Lighting Control Module	√	√	√	√	√	
2024	Chevrolet	Colorado	Parking Assist Control Module	√	√	√	√	√	
2024	Chevrolet	Colorado	Side Obstacle Detection Control Module - Left	√	√	√			
2024	Chevrolet	Colorado	Side Obstacle Detection Control Module - Right	√	√	√			
2024	Chevrolet	Colorado	Chassis Control Module - Auxiliary	√	√	√	√	√	
2024	Chevrolet	Colorado	Transfer Case Control Module	√	√	√	√	√	SP0037,SP0099,SP0100, SP0776
2024	Chevrolet	Corvette	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP0770, SP0773,SP0774,SP076C, SP079A,SP0086,SP0217, SP0763,SP07C9,SP0258, SP076B,SP0115,SP0212, SP0775,SP0764,SP0139
2024	Chevrolet	Corvette	Transmission Control Module	√	√	√	√	√	SP0017,SP07CA,SP0798 ,SP07CB
2024	Chevrolet	Corvette	Brake System Control Module	√	√	√	√	√	SP0767,SP0768,SP0766, SP0758,SP0229,SP0799
2024	Chevrolet	Corvette	Restraints Control Module	√	√	√	√	√	SP0758,SP0134
2024	Chevrolet	Corvette	Instrument Panel Cluster Control Module	√	√	√	√	√	
2024	Chevrolet	Corvette	Serial Data Gateway Module	√	√	√			
2024	Chevrolet	Corvette	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	Chevrolet	Corvette	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2024	Chevrolet	Corvette	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	Chevrolet	Corvette	Vehicle Performance Data Recorder	√	√	√	√		
2024	Chevrolet	Corvette	Video Processing Module	√	√	√			
2024	Chevrolet	Corvette	Wireless Accessory Charging Module	√	√	√	√		
2024	Chevrolet	Corvette	Drive Motor Control Module		√	√		√	
2024	Chevrolet	Corvette	Folding Top Control Module - Left	√	√	√	√		
2024	Chevrolet	Corvette	Folding Top Control Module - Right	√	√	√			
2024	Chevrolet	Corvette	Folding Top Stowage Compartment Control Module -	√	√	√			

2024	Chevrolet	Corvette	Folding Top Stowage Compartment Control Module -	√	√	√	√		
2024	Chevrolet	Corvette	Lighting Control Module	√	√	√	√	√	
2024	Chevrolet	Corvette	Steering Column Lock Control Module	√	√	√	√		
2024	Chevrolet	Corvette	Parking Assist Control Module	√	√	√	√	√	
2024	Chevrolet	Corvette	Gear Shift Control Module	√					
2024	Chevrolet	Corvette	Side Obstacle Detection Control Module - Left	√	√	√			
2024	Chevrolet	Corvette	Side Obstacle Detection Control Module - Right	√	√	√			
2024	Chevrolet	Corvette	Audio Amplifier	√	√	√	√		
2024	Chevrolet	Corvette	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2024	Chevrolet	Corvette	Radio Controls	√	√	√	√		
2024	Chevrolet	Corvette	Radio	√	√	√	√	√	SP0269,SP0769,SP07A7,SP07A8
2024	Chevrolet	Corvette	Restraints Occupant Classification System Module - Passenger	√	√	√	√		SP0057
2024	Chevrolet	Corvette	Electric Power Steering Control Module	√	√	√	√		SP0766
2024	Chevrolet	Corvette	Electronic Suspension Control Module	√	√	√	√	√	SP0198
2024	Chevrolet	Corvette	Front Suspension Leveling/Lifting Hydraulic Power Pack Module	√	√	√	√	√	
2024	Chevrolet	Corvette	Battery Energy Control Module	√	√	√	√	√	SP07BA,SP0115,SP07BB,SP07BC,SP07BD,SP07BE,SP0123,SP07BF,SP07C0,SP07C1,SP07C2,SP07C3,SP07C4,SP07C5,SP07C6,SP07C7
2024	Chevrolet	Corvette	Chassis Control Module - Auxiliary	√	√	√	√	√	
2024	Chevrolet	Equinox	Brake System Control Module	√	√	√	√	√	SP0225,SP0229,SP078E,SP0767,SP0758,SP0090
2024	Chevrolet	Equinox	Restraints Control Module	√	√	√	√	√	SP0758,SP0134
2024	Chevrolet	Equinox	Serial Data Gateway Module	√	√	√			
2024	Chevrolet	Equinox	Wireless Accessory Charging Module	√	√	√	√		
2024	Chevrolet	Equinox	Lighting Control Module	√	√	√	√	√	
2024	Chevrolet	Equinox	Side Obstacle Detection Control Module - Right	√	√	√			
2024	Chevrolet	Equinox	Side Obstacle Detection Control Module - Left	√	√	√			
2024	Chevrolet	Equinox	Steering Column Lock Control Module	√	√	√	√		
2024	Chevrolet	Equinox	Parking Assist Control Module	√	√	√	√	√	
2024	Chevrolet	Equinox	Drive Motor Control Module		√	√			
2024	Chevrolet	Equinox	Drive Motor Control Module 2		√	√			

2024	Chevrolet	Equinox	Battery Energy Control Module	√	√	√	√	√	SP07BA,SP0115,SP07B B,SP07BC,SP07BD,SP0 7BE,SP0123,SP07BF,SP 07C0,SP07C1,SP07C2,S P07C3,SP07D0,SP07C4, SP07C5,SP07C6,SP07C7
2024	Chevrolet	Equinox	Restraints Occupant Classification System Module - Passenger	√	√	√	√		SP0057
2024	Chevrolet	Equinox	Near Field Communication Module	√	√	√	√		
2024	Chevrolet	Equinox	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	Chevrolet	Equinox	Special Purpose Vehicle Module	√	√	√			
2024	Chevrolet	Equinox	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	Chevrolet	Equinox	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Chevrolet	Equinox	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	Chevrolet	Equinox	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	Chevrolet	Equinox	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	Chevrolet	Equinox	Short Range Radar Sensor - Right Rear	√	√	√			SP0772
2024	Chevrolet	Equinox	Short Range Radar Sensor - Rear Middle	√	√	√			SP0772
2024	Chevrolet	Equinox	Image Processing Module 1 - Processor 1	√	√	√	√		SP0758,SP0766
2024	Chevrolet	Equinox	Image Processing Module 1 - Processor 2	√	√	√	√		SP07CF
2024	Chevrolet	Onix	Engine Control Module	√	√	√	√	√	SP0263,SP0156,SP0209, SP0774,SP0212,SP0217, SP0258,SP0086,SP0775, SP0139,SP079E,SP0085, SP0154,SP0144,SP0115, SP0140,SP0147
2024	Chevrolet	Onix	Transmission Control Module	√	√	√	√	√	SP0017
2024	Chevrolet	Onix	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2024	Chevrolet	Onix	Body Control Module	√	√	√	√	√	SP0269
2024	Chevrolet	Onix	Instrument Cluster	√	√	√	√	√	
2024	Chevrolet	Onix	Radio	√	√	√	√	√	
2024	Chevrolet	S10	Engine Control Module	√	√	√	√	√	SP0263,SP0210,SP0224, SP0130,SP0222,SP0066, SP0147,SP0060,SP0044, SP0045,SP0086,SP0217, SP0109,SP0068,SP0084, SP0070,SP0071,SP0074, SP0075,SP0043,SP0173, SP0179,SP0181,SP0183, SP0185,SP0232
2024	Chevrolet	S10	Transmission Control Module	√	√	√	√	√	SP0016
2024	Chevrolet	S10	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	SP0172,SP0134,SP0111, SP0758
2024	Chevrolet	S10	Instrument Cluster	√	√	√	√	√	SP0247



2024	Chevrolet	S10	HVAC Control Module	√	√	√	√	√	SP0007,SP0129
2024	Chevrolet	S10	HVAC Controls	√	√	√	√		
2024	Chevrolet	S10	Telematics Communication Interface Control Module	√	√	√	√	√	SP0755
2024	Chevrolet	S10	Trailer Lighting Control Module	√	√	√	√	√	SP0247
2024	Chevrolet	S10	Side Obstacle Detection Control Module - Left	√	√	√		√	
2024	Chevrolet	S10	Side Obstacle Detection Control Module - Right	√	√	√		√	
2024	Chevrolet	S10	Parking Assist Control Module	√	√	√	√	√	SP0247,SP0271
2024	Chevrolet	S10	Radio	√	√	√	√	√	SP0269,SP0793,SP0267, SP0226,SP0150
2024	Chevrolet	S10	Frontview Camera - Windshield	√	√	√	√	√	SP0196
2024	Chevrolet	S10	Transfer Case Control Module	√	√	√	√	√	SP0037
2024	Chevrolet	Spin	Engine Control Module	√	√	√	√	√	SP0156,SP0209,SP0132, SP0067,SP0263,SP0086, SP0217,SP0115,SP0139
2024	Chevrolet	Spin	Transmission Control Module	√	√	√	√	√	SP0017,SP0036
2024	Chevrolet	Spin	Electronic Brake Control Module	√	√	√	√	√	SP0090
2024	Chevrolet	Spin	Telematics Communication Interface Control Module	√	√	√		√	
2024	Chevrolet	Spin	Steering Wheel Angle Sensor Module	√	√	√			SP0093,SP0090
2024	Chevrolet	Spin	Power Steering Control Module	√	√	√	√		SP0207
2024	Chevrolet	Silverado	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP075E, SP0760,SP076C,SP0115, SP076D,SP0761,SP0086, SP076E,SP0212,SP0217, SP0006,SP0144,SP0258, SP0139,SP0085,SP0775, SP07A9,SP0779,SP0171, SP0097,SP0221,SP077B, SP077C,SP077D,SP0763 ,SP0764,SP0117,SP0119, SP07D1,SP07D2,SP0150 ,SP0246,SP077E,SP0178 ,SP0180,SP0182,SP0184, SP0186,SP0188,SP0190,
2024	Chevrolet	Silverado	Transmission Control Module	√	√	√	√	√	SP0017,SP0033,SP0016
2024	Chevrolet	Silverado	Brake System Control Module	√	√	√	√	√	SP0768,SP0229,SP0225, SP078E,SP0767,SP0758, SP0090,SP078F,SP0790
2024	Chevrolet	Silverado	Electronic Brake Control Module	√	√	√	√	√	
2024	Chevrolet	Silverado	Restraints Control Module	√	√	√	√	√	SP0758,SP0134
2024	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	SP0263,SP0226,SP0754, SP0007,SP0129,SP0267
2024	Chevrolet	Silverado	Instrument Panel Cluster Control Module	√	√	√	√	√	
2024	Chevrolet	Silverado	Serial Data Gateway Module	√	√	√			

2024	Chevrolet	Silverado	Audio Amplifier	√	√	√	√		
2024	Chevrolet	Silverado	Frontview Camera - Windshield	√	√	√	√		SP0196
2024	Chevrolet	Silverado	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2024	Chevrolet	Silverado	Radio	√	√	√	√	√	SP0226,SP0150,SP0269, SP0769,SP07A7,SP07A8
2024	Chevrolet	Silverado	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	Chevrolet	Silverado	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2024	Chevrolet	Silverado	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	Chevrolet	Silverado	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	Chevrolet	Silverado	Running Board Control Module	√	√	√	√	√	
2024	Chevrolet	Silverado	Trailer Lamp Control Module	√	√	√	√	√	
2024	Chevrolet	Silverado	Video Processing Module	√	√	√	√		
2024	Chevrolet	Silverado	Wireless Accessory Charging Module	√	√	√	√		
2024	Chevrolet	Silverado	Steering Column Lock Control Module	√	√	√	√		
2024	Chevrolet	Silverado	Parking Assist Control Module	√	√	√	√	√	
2024	Chevrolet	Silverado	Lighting Control Module	√	√	√	√	√	
2024	Chevrolet	Silverado	Side Obstacle Detection Control Module - Left	√	√	√			
2024	Chevrolet	Silverado	Side Obstacle Detection Control Module - Right	√	√	√			
2024	Chevrolet	Silverado	Restraints Occupant Classification System Module - Passenger	√	√	√	√		SP0057
2024	Chevrolet	Silverado	Special Purpose Vehicle Module	√	√	√			
2024	Chevrolet	Silverado	Glow Plug Control Module	√	√	√	√	√	SP0178,SP0180,SP0182, SP0184,SP0186,SP0188, SP0190,SP0192,SP0257
2024	Chevrolet	Silverado	Chassis Control Module - Auxiliary	√	√	√	√	√	
2024	Chevrolet	Silverado	Transfer Case Control Module	√	√	√	√	√	SP0037,SP0099,SP0100, SP0776
2024	Chevrolet	Silverado	Image Processing Module 1 - Processor 1	√	√	√	√		
2024	Chevrolet	Silverado	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	SP0266
2024	Chevrolet	Silverado	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	SP0266
2024	Chevrolet	Silverado	Automated Driving Mapping Module	√	√	√	√	√	
2024	Chevrolet	Silverado	Video Display - Right Front Seat Back	√	√	√			
2024	Chevrolet	Silverado	Power Steering Control Module	√	√	√	√		SP0089
2024	Chevrolet	Silverado	Suspension Control Module	√	√	√	√	√	
2024	Chevrolet	Silverado	Driver Monitoring System Control Module	√	√	√			
2024	Chevrolet	Silverado	Image Processing Module	√	√	√	√		
2024	Chevrolet	Silverado	Image Processing Module 1 - Processor 2	√	√	√			SP0758
2024	Chevrolet	Silverado	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Chevrolet	Silverado	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	Chevrolet	Silverado	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	Chevrolet	Silverado	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	Chevrolet	Silverado	Short Range Radar Sensor - Right Rear	√	√	√			SP0772

2024	Chevrolet	Tracker	Engine Control Module	√	√	√	√	√	SP0263,SP0156,SP0209, SP0774,SP0212,SP0217, SP0258,SP0086,SP0775, SP0139,SP079E,SP0085, SP0154,SP0144,SP0115, SP0140,SP0147
2024	Chevrolet	Tracker	Transmission Control Module	√	√	√	√	√	SP0017
2024	Chevrolet	Tracker	Electronic Brake Control Module	√	√	√	√	√	SP0269
2024	Chevrolet	Tracker	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2024	Chevrolet	Tracker	Instrument Cluster	√	√	√	√	√	
2024	Chevrolet	Tracker	Frontview Camera - Windshield	√	√	√	√		SP0269
2024	Chevrolet	Tracker	Radio	√	√	√	√	√	
2024	Chevrolet	Tracker	Firewall Control Module	√	√	√	√	√	SP0269
2024	Chevrolet	Tracker	Electric Power Steering Control Module	√	√	√	√		SP079F,SP0269
2024	Chevrolet	Trax	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP0132, SP0115,SP0086,SP0212, SP0214,SP0217,SP0006, SP0144,SP0139,SP0757, SP0007
2024	Chevrolet	Trax	Transmission Control Module	√	√	√	√	√	SP0017,SP0036
2024	Chevrolet	Trax	Brake System Control Module	√	√	√	√	√	SP0766,SP0758,SP0767, SP0768,SP0229,SP078F, SP0790
2024	Chevrolet	Trax	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	SP0172,SP0134,SP0111, SP0758
2024	Chevrolet	Trax	Body Control Module	√	√	√	√	√	SP0199,SP0239,SP0161, SP0162,SP0163,SP0164, SP0165,SP0166,SP0167, SP0168,SP0242,SP0263, SP0203,SP0201,SP0208, SP0206,SP0083,SP0267, SP0160,SP0233,SP0159
2024	Chevrolet	Trax	Instrument Cluster	√	√	√	√	√	SP0247
2024	Chevrolet	Trax	HVAC Control Module	√	√	√	√	√	SP0007,SP0129
2024	Chevrolet	Trax	HVAC Controls	√	√	√	√		
2024	Chevrolet	Trax	Parking Assist Control Module	√	√	√	√	√	SP0247,SP0271
2024	Chevrolet	Trax	Side Obstacle Detection Control Module - Left	√	√	√		√	
2024	Chevrolet	Trax	Side Obstacle Detection Control Module - Right	√	√	√		√	
2024	Chevrolet	Trax	Serial Data Gateway Module - Processor 1	√	√	√			
2024	Chevrolet	Trax	Serial Data Gateway Module - Processor 2	√	√	√			
2024	Chevrolet	Trax	Radio	√	√	√	√	√	SP0269,SP0150,SP0226
2024	Chevrolet	Trax	Keyless Entry Control Module	√	√	√	√	√	
2024	Chevrolet	Trax	Telematics Communication Interface Control Module	√	√	√	√	√	SP0755
2024	Chevrolet	Trax	Frontview Camera - Windshield	√	√	√	√		SP0196,SP0084

2024	Chevrolet	Trax	Power Steering Control Module	√	√	√	√	√	SP0089,SP0084
2024	Chevrolet	Trailblazer	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP0132, SP0115,SP0086,SP0212, SP0214,SP0217,SP0006, SP0144,SP0139,SP0757, SP0085,SP075E,SP075F, SP0760,SP0761,SP0213, SP0762,SP0258,SP0763, SP0764,SP0765
2024	Chevrolet	Trailblazer	Brake System Control Module	√	√	√	√	√	SP0766,SP0758,SP0767, SP0768,SP0229
2024	Chevrolet	Trailblazer	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	SP0172,SP0134,SP0111, SP0758
2024	Chevrolet	Trailblazer	Body Control Module	√	√	√	√	√	SP0199,SP0239,SP0161, SP0162,SP0163,SP0164, SP0165,SP0166,SP0167, SP0168,SP0242,SP0263, SP0203,SP0201,SP0208, SP0206,SP0083,SP0267, SP0160,SP0233,SP0159
2024	Chevrolet	Trailblazer	HVAC Control Module	√	√	√	√	√	SP0007,SP0129
2024	Chevrolet	Trailblazer	HVAC Controls	√	√	√	√		
2024	Chevrolet	Trailblazer	Headlamp Control Module	√	√	√	√	√	SP0195
2024	Chevrolet	Trailblazer	Liftgate Control Module	√	√	√	√	√	SP0146,SP0169
2024	Chevrolet	Trailblazer	Telematics Communication Interface Control Module	√	√	√	√	√	SP0755
2024	Chevrolet	Trailblazer	Amplifier	√	√	√	√		
2024	Chevrolet	Trailblazer	Radio	√	√	√	√	√	SP0150,SP0226,SP0269
2024	Chevrolet	Trailblazer	Keyless Entry Control Module	√	√	√	√	√	
2024	Chevrolet	Trailblazer	Frontview Camera - Windshield	√	√	√	√	√	SP0196,SP075A
2024	Chevrolet	Trailblazer	Rear Drive Control Module	√	√	√	√	√	SP0003
2024	Chevrolet	Trailblazer	Power Steering Control Module	√	√	√	√		SP0089,SP0084
2024	Chevrolet	Trailblazer	Parking Assist Control Module	√	√	√	√	√	SP0247
2024	Chevrolet	Trailblazer	Serial Data Gateway Module - Processor 1	√	√	√			
2024	Chevrolet	Trailblazer	Serial Data Gateway Module - Processor 2	√	√	√			
2024	Chevrolet	Trailblazer	Side Obstacle Detection Control Module - Left	√	√	√		√	
2024	Chevrolet	Trailblazer	Side Obstacle Detection Control Module - Right	√	√	√		√	
2024	Chevrolet	Trailblazer	Steering Column Lock Control Module	√	√	√	√		
2024	Chevrolet	Blazer	Brake System Control Module	√	√	√	√	√	SP0225,SP0229,SP078E, SP0767,SP0758,SP0090
2024	Chevrolet	Blazer	Restraints Control Module	√	√	√	√	√	SP0758,SP0134
2024	Chevrolet	Blazer	Serial Data Gateway Module	√	√	√			
2024	Chevrolet	Blazer	Audio Amplifier	√	√	√	√	√	
2024	Chevrolet	Blazer	Frontview Camera - Windshield	√	√	√	√		SP0196

2024	Chevrolet	Blazer	Radio	√	√	√	√	√	SP07A8
2024	Chevrolet	Blazer	Near Field Communication Module	√	√	√	√		
2024	Chevrolet	Blazer	Restraints Occupant Classification System Module - Passenger	√	√	√	√		SP0057
2024	Chevrolet	Blazer	Lighting Control Module	√	√	√	√	√	
2024	Chevrolet	Blazer	Parking Assist Control Module	√	√	√	√	√	
2024	Chevrolet	Blazer	Side Obstacle Detection Control Module - Left	√	√	√			
2024	Chevrolet	Blazer	Side Obstacle Detection Control Module - Right	√	√	√			
2024	Chevrolet	Blazer	Steering Column Lock Control Module	√	√	√	√		
2024	Chevrolet	Blazer	Battery Energy Control Module	√	√	√	√	√	SP07BA,SP0115,SP07B B,SP07BC,SP07BD,SP0 7BE,SP0123,SP07BF,SP 07C0,SP07C1,SP07C2,S P07C3,SP07D0,SP07C4, SP07C5,SP07C6,SP07C7
2024	Chevrolet	Blazer	Battery Energy Control Module 2	√	√	√			
2024	Chevrolet	Blazer	Drive Motor Control Module 2	√	√	√	√	√	SP07B9
2024	Chevrolet	Blazer	Drive Motor Control Module	√	√	√	√	√	SP07B9,SP0258
2024	Chevrolet	Blazer	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	Chevrolet	Blazer	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	Chevrolet	Blazer	Special Purpose Vehicle Module	√	√	√			
2024	Chevrolet	Blazer	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	Chevrolet	Blazer	Video Processing Module	√	√	√			
2024	Chevrolet	Blazer	Image Processing Module 1 - Processor 1	√	√	√	√		SP0758,SP0766
2024	Chevrolet	Blazer	Image Processing Module 1 - Processor 2	√	√	√	√		SP07CF
2024	Chevrolet	Blazer	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	Chevrolet	Blazer	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	Chevrolet	Blazer	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	Chevrolet	Blazer	Short Range Radar Sensor - Right Rear	√	√	√			SP0772
2024	Chevrolet	Blazer	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Chevrolet	Blazer	Power Steering Control Module 1	√	√	√	√		SP0766,SP07C8
2024	Chevrolet	Blazer	Power Steering Control Module 2	√	√	√	√		
2024	Chevrolet	Blazer	Short Range Radar Sensor - Rear Middle	√	√	√			SP0772
2024	Chevrolet	Suburban	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP076C, SP0115,SP0086,SP0085, SP076E,SP0212,SP0217, SP0775,SP0258,SP0139
2024	Chevrolet	Suburban	Transmission Control Module	√	√	√	√	√	SP0017,SP0033,SP0016
2024	Chevrolet	Suburban	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	Chevrolet	Suburban	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	Chevrolet	Suburban	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	Chevrolet	Suburban	Chassis Control Module - Auxiliary	√	√	√	√		

2024	Chevrolet	Suburban	Transfer Case Control Module	√	√	√	√	√	SP0037,SP0099,SP0100,SP0776
2024	Chevrolet	Suburban	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Chevrolet	Suburban	Image Processing Module 1 - Processor 1	√	√	√	√		SP0758,SP0766
2024	Chevrolet	Suburban	Image Processing Module 1 - Processor 2	√	√	√	√		SP07CF
2024	Chevrolet	Suburban	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	Chevrolet	Suburban	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	Chevrolet	Suburban	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	Chevrolet	Suburban	Short Range Radar Sensor - Right Rear	√	√	√			SP0772
2024	Chevrolet	Tahoe	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP076C,SP0115,SP0086,SP0085,SP076E,SP0212,SP0217,SP0775,SP0258,SP0139
2024	Chevrolet	Tahoe	Transmission Control Module	√	√	√	√	√	SP0017,SP0033,SP0016
2024	Chevrolet	Tahoe	Brake System Control Module	√	√	√	√	√	SP0768,SP0229,SP0225,SP078E,SP0767,SP0758,SP0090,SP078F,SP0790
2024	Chevrolet	Tahoe	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	Chevrolet	Tahoe	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	Chevrolet	Tahoe	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	Chevrolet	Tahoe	Chassis Control Module - Auxiliary	√	√	√	√	√	
2024	Chevrolet	Tahoe	Transfer Case Control Module	√	√	√	√	√	SP0037,SP0099,SP0100,SP0776
2024	Chevrolet	Tahoe	Audio Amplifier	√	√	√	√		
2024	Chevrolet	Tahoe	Frontview Camera - Windshield	√	√	√	√		SP0196
2024	Chevrolet	Tahoe	Heater and Air Conditioning Auxiliary Control	√	√	√			
2024	Chevrolet	Tahoe	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2024	Chevrolet	Tahoe	Radio	√	√	√	√	√	SP0269,SP0769,SP07A7,SP07A8
2024	Chevrolet	Tahoe	Video Display - Right Front Seat Back	√	√	√			
2024	Chevrolet	Tahoe	Power Steering Control Module	√	√	√	√		SP0089
2024	Chevrolet	Tahoe	Automatic Level Control Module	√	√	√	√	√	SP0785,SP0786,SP0787,SP0788,SP0789,SP078A,SP078B,SP078C,SP078D
2024	Chevrolet	Tahoe	Suspension Control Module	√	√	√	√	√	
2024	Chevrolet	Tahoe	Steering Column Lock Control Module	√	√	√	√		
2024	Chevrolet	Tahoe	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Chevrolet	Tahoe	Image Processing Module 1 - Processor 1	√	√	√	√		SP0758,SP0766
2024	Chevrolet	Tahoe	Image Processing Module 1 - Processor 2	√	√	√	√		SP07CF
2024	Chevrolet	Tahoe	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	Chevrolet	Tahoe	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	Chevrolet	Tahoe	Short Range Radar Sensor - Right Front	√	√	√			SP0772

2024	Chevrolet	Tahoe	Short Range Radar Sensor - Right Rear	√	√	√			SP0772
2024	Chevrolet	Montana	Engine Control Module	√	√	√	√	√	SP0263,SP0156,SP0209, SP0774,SP0212,SP0217, SP0258,SP0086,SP0775, SP0139,SP079E,SP0085, SP0154,SP0144,SP0115
2024	Chevrolet	Montana	Transmission Control Module	√	√	√	√	√	SP0017
2024	Chevrolet	Montana	HVAC Control Module	√	√	√	√	√	SP0007
2024	Chevrolet	Montana	Radio	√	√	√	√	√	
2024	Chevrolet	Montana	Telematics Communication Interface Control Module	√	√	√	√		
2024	Chevrolet	Camaro	Engine Control Module	√	√	√	√	√	SP0263,SP0156,SP0209, SP0076,SP0132,SP0067, SP0147,SP0115,SP076C, SP0086,SP0154,SP0212, SP0214,SP0217,SP0006, SP0144,SP0258,SP0236, SP0139,SP0756,SP0085, SP0757,SP0020
2024	Chevrolet	Camaro	Transmission Control Module	√	√	√	√	√	SP0016,SP0033,SP0024, SP0026,SP0028,SP0030, SP0032,SP0795,SP0023, SP0025,SP0027,SP0029, SP0031,SP0796,SP0017
2024	Chevrolet	Camaro	Electronic Brake Control Module	√	√	√	√	√	SP0090,SP0111,SP0229
2024	Chevrolet	Camaro	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	SP0172,SP0134,SP0111, SP0758
2024	Chevrolet	Camaro	HVAC Control Module	√	√	√	√	√	SP0007,SP0129
2024	Chevrolet	Camaro	HVAC Controls	√	√	√	√		
2024	Chevrolet	Camaro	Serial Data Gateway Module	√	√	√			
2024	Chevrolet	Camaro	Headlamp Control Module	√	√	√	√	√	SP0195
2024	Chevrolet	Camaro	Seat Memory Control Module - Driver	√	√	√	√	√	SP0310
2024	Chevrolet	Camaro	Telematics Communication Interface Control Module	√	√	√	√	√	SP0755
2024	Chevrolet	Camaro	Keyless Entry Control Module	√	√	√	√	√	
2024	Chevrolet	Camaro	Restraints Occupant Classification System Module - Passenger	√	√	√	√		SP0057
2024	Chevrolet	Camaro	Steering Column Lock Control Module	√	√	√	√		
2024	Chevrolet	Camaro	Side Obstacle Detection Control Module - Left	√	√	√		√	
2024	Chevrolet	Camaro	Side Obstacle Detection Control Module - Right	√	√	√		√	
2024	Chevrolet	Camaro	Parking Assist Control Module	√	√	√	√	√	SP0247
2024	Chevrolet	Camaro	Folding Top Control Module	√	√	√	√	√	
2024	Chevrolet	Camaro	Frontview Camera - Windshield	√	√	√	√		SP0196,SP0084
2024	Chevrolet	Camaro	Rear Differential Clutch Control Module	√	√	√	√	√	SP0113
2024	Chevrolet	Camaro	Vehicle Performance Data Recorder	√	√	√	√		

2024	Chevrolet	Camaro	Amplifier	√	√	√	√		
2024	Chevrolet	Camaro	Radio Controls	√	√	√	√		
2024	Chevrolet	Camaro	Radio	√	√	√	√	√	SP0150,SP0226,SP0269, SP0793,SP0267
2024	Chevrolet	Camaro	Parking Brake Control Module	√	√	√	√	√	SP0229
2024	Chevrolet	Camaro	Power Steering Control Module	√	√	√	√		SP0081,SP0080,SP0089, SP0084
2024	Chevrolet	Camaro	Steering Wheel Angle Sensor Module	√	√	√			SP0093,SP0090
2024	Chevrolet	Camaro	Suspension Control Module	√	√	√	√	√	SP0245
2024	Chevrolet	Traverse	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	Chevrolet	Traverse	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	Chevrolet	Traverse	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	Chevrolet	Traverse	Powertrain Control Module	√	√	√	√		
2024	Chevrolet	Traverse	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Chevrolet	Traverse	Image Processing Module 1 - Processor 1	√	√	√	√		SP0758,SP0766
2024	Chevrolet	Traverse	Image Processing Module 1 - Processor 2	√	√	√	√		SP07CF
2024	Chevrolet	Traverse	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	Chevrolet	Traverse	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	Chevrolet	Traverse	Short Range Radar Sensor - Rear Middle	√	√	√			SP0772
2024	Chevrolet	Traverse	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	Chevrolet	Traverse	Short Range Radar Sensor - Right Rear	√	√	√			SP0772
2024	Chevrolet	Cruze	Engine Control Module	√	√	√	√	√	SP0263,SP0156,SP0209, SP0020,SP0132,SP0115, SP076C,SP0086,SP0085, SP0154,SP0213,SP0221, SP0212,SP0214,SP0217, SP0006,SP0144,SP0258, SP0130
2024	Chevrolet	Cruze	Transmission Control Module	√	√	√	√	√	SP0017,SP0036
2024	Chevrolet	Cruze	Electronic Brake Control Module	√	√	√	√	√	SP0090,SP0111,SP0229, SP0225
2024	Chevrolet	Cruze	Body Control Module	√	√	√	√	√	SP0199,SP0239,SP0161, SP0162,SP0163,SP0164, SP0165,SP0166,SP0167, SP0168,SP0242,SP0263, SP0203,SP0201,SP0208, SP0206,SP0083,SP0267, SP0160,SP0233,SP0159
2024	Chevrolet	Cruze	Telematics Communication Interface Control Module	√	√	√	√	√	SP0755
2024	Chevrolet	Cruze	Power Steering Control Module	√	√	√	√		SP0081,SP0080,SP0089



2024	Chevrolet	Malibu	Engine Control Module	√	√	√	√	√	SP0263,SP0156,SP0209, SP0132,SP0147,SP076C, SP0115,SP0086,SP0085, SP0154,SP0213,SP0212, SP0217,SP0006,SP0144, SP0764,SP0763,SP0258, SP0129
2024	Chevrolet	Malibu	Transmission Control Module	√	√	√	√	√	SP0017,SP0036,SP0016, SP075C
2024	Chevrolet	Malibu	Brake System Control Module	√	√	√	√	√	SP0766,SP0758,SP0767, SP0768,SP0229,SP078F, SP0790
2024	Chevrolet	Malibu	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	SP0172,SP0134,SP0111, SP0758
2024	Chevrolet	Malibu	Body Control Module	√	√	√	√	√	SP0199,SP0239,SP0161, SP0162,SP0163,SP0164, SP0165,SP0166,SP0167, SP0168,SP0242,SP0263, SP0203,SP0201,SP0208, SP0206,SP0083,SP0267, SP0160,SP0233,SP0159
2024	Chevrolet	Malibu	Instrument Cluster	√	√	√	√	√	SP0247
2024	Chevrolet	Malibu	HVAC Control Module	√	√	√	√	√	SP0007,SP0129
2024	Chevrolet	Malibu	HVAC Controls	√	√	√	√		
2024	Chevrolet	Malibu	Frontview Camera - Windshield	√	√	√	√		SP0196,SP075A
2024	Chevrolet	Malibu	Active Safety Control Module	√	√	√	√		
2024	Chevrolet	Malibu	Seat Memory Control Module - Driver	√	√	√	√	√	
2024	Chevrolet	Malibu	Telematics Communication Interface Control Module	√	√	√	√	√	SP0755
2024	Chevrolet	Malibu	Amplifier	√	√	√	√		
2024	Chevrolet	Malibu	Radio Controls	√	√	√	√		
2024	Chevrolet	Malibu	Radio	√	√	√	√	√	SP0150,SP0226,SP0269, SP0793,SP0267
2024	Chevrolet	Malibu	Parking Assist Control Module	√	√	√	√	√	SP0247,SP0271
2024	Chevrolet	Malibu	Serial Data Gateway Module - Processor 1	√	√	√			
2024	Chevrolet	Malibu	Serial Data Gateway Module - Processor 2	√	√	√			
2024	Chevrolet	Malibu	Side Obstacle Detection Control Module - Left	√	√	√		√	
2024	Chevrolet	Malibu	Side Obstacle Detection Control Module - Right	√	√	√		√	
2024	Chevrolet	Malibu	Keyless Entry Control Module	√	√	√	√	√	
2024	Chevrolet	Malibu	Passenger Presence Module	√	√	√	√	√	SP0057
2024	Chevrolet	Malibu	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Chevrolet	Malibu	Power Steering Control Module	√	√	√	√		SP0081,SP0080,SP0089
2024	Chevrolet	Bolt	Engine Control Module	√	√	√	√	√	SP0258,SP0263,SP0771
2024	Chevrolet	Bolt	Electronic Brake Control Module	√	√	√	√	√	SP0090,SP0111,SP0229

2024	Chevrolet	Bolt	Body Control Module	√	√	√	√	√	SP0199,SP0239,SP0161, SP0162,SP0163,SP0164, SP0165,SP0166,SP0167, SP0168,SP0242,SP0263, SP0203,SP0201,SP0208, SP0206,SP0083,SP0267, SP0160,SP0233,SP0159
2024	Chevrolet	Bolt	Telematics Communication Interface Control Module	√	√	√	√	√	SP0755
2024	Chevrolet	Bolt	Air Conditioning Compressor	√					
2024	Chevrolet	Bolt	Battery Energy Control Module	√			√		
2024	Chevrolet	Bolt	Hybrid/EV Powertrain Control Module 1	√	√	√	√	√	SP0202,SP0018
2024	Chevrolet	Bolt	Hybrid/EV Powertrain Control Module 2	√	√	√	√	√	SP0125,SP0262,SP0079, SP0122,SP0123,SP0127, SP0202
2024	Chevrolet	Bolt	Power Line Communication Module	√			√		
2024	Chevrolet	Bolt	Transmission Range Control Module	√	√	√	√		SP0014,SP0078,SP0013
2024	Chevrolet	Bolt	Brake Booster Control Module	√	√	√	√		
2024	Chevrolet	Bolt	Power Steering Control Module	√	√	√	√	√	SP0089,SP0084
2024	Chevrolet	Bolt	Video Processing Control Module	√	√	√	√	√	
2024	Chevrolet	Bolt	Active Safety Control Module 1 - Processor A	√	√	√	√		SP0268,SP0794
2024	Chevrolet	Bolt	Active Safety Control Module 1 - Processor B	√	√	√	√		SP0111,SP0268
2024	Chevrolet	Bolt	Active Safety Control Module 1 - Processor C	√	√	√	√		SP0268
2024	Chevrolet	Bolt	Active Safety Control Module 2 - Processor A	√	√	√	√		SP0268,SP0794
2024	Chevrolet	Bolt	Active Safety Control Module 2 - Processor B	√	√	√	√		SP0111,SP0268
2024	Chevrolet	Bolt	Active Safety Control Module 2 - Processor C	√	√	√	√		SP0268
2024	Chevrolet	Bolt	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2024	Chevrolet	Bolt	Frontview Camera - Windshield	√	√	√	√		SP0196
2024	Chevrolet	Bolt	Driver Monitoring System Control Module	√	√	√	√		
2024	Chevrolet	Bolt	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	Chevrolet	Cobalt	Engine Control Module	√	√	√	√	√	SP0156,SP0209,SP0132, SP0067,SP0263,SP0086, SP0217,SP0139
2024	Chevrolet	Cobalt	Transmission Control Module	√	√	√	√	√	SP0017,SP0036
2024	Chevrolet	Cobalt	Electronic Brake Control Module	√	√	√	√	√	SP0090
2024	Chevrolet	Cobalt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	SP0172,SP0134,SP0111, SP0758

2024	Chevrolet	Cobalt	Body Control Module	√	√	√	√	√	SP0199,SP0239,SP0161, SP0162,SP0163,SP0164, SP0165,SP0166,SP0167, SP0168,SP0242,SP0263, SP0203,SP0201,SP0208, SP0206,SP0083,SP0267, SP0160,SP0233,SP0159
2024	Chevrolet	Cobalt	Instrument Cluster	√	√	√	√	√	SP0247
2024	Chevrolet	Cobalt	Serial Data Gateway Module	√	√	√			
2024	Chevrolet	Cobalt	Front Seat Heating Control Module	√	√	√	√	√	
2024	Chevrolet	Cobalt	Telematics Communication Interface Control Module	√	√	√	√	√	
2024	Chevrolet	Cobalt	Radio	√	√	√	√	√	
2024	Chevrolet	Cobalt	Steering Wheel Angle Sensor Module	√	√	√			SP0093,SP0090
2024	Chevrolet	Cobalt	Power Steering Control Module	√	√	√	√		SP0207
2024	Chevrolet	Prisma	Engine Control Module	√	√	√	√	√	SP0156,SP0209,SP0132, SP0067,SP0263,SP0086, SP0217,SP0115,SP0139
2024	Chevrolet	Prisma	Body Control Module	√	√	√	√	√	SP0199,SP0239,SP0161, SP0162,SP0163,SP0164, SP0165,SP0166,SP0167, SP0168,SP0242,SP0263, SP0203,SP0201,SP0208, SP0206,SP0083,SP0267, SP0160,SP0233,SP0159
2024	Chevrolet	Express	Engine Control Module	√	√	√	√	√	SP0263,SP0156,SP0209, SP0757,SP0076,SP0020, SP0132,SP0067,SP0086, SP0154,SP0212,SP0214, SP0217,SP0258,SP076C, SP0115,SP0088,SP0006, <del>SP0131,SP0130</del>
2024	Chevrolet	Express	Transmission Control Module	√	√	√	√	√	SP0016,SP0033,SP0024, SP0026,SP0028,SP0030, SP0032,SP0023,SP0025, SP0027,SP0029,SP0031, <del>SP0015</del>
2024	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	SP0225,SP0111,SP0277, SP0090
2024	Chevrolet	Express	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	SP0172,SP0261
2024	Chevrolet	Express	Body Control Module	√	√	√	√	√	SP0263,SP0261
2024	Chevrolet	Express	Theft Deterrent Module	√	√	√	√		
2024	Chevrolet	Express	Instrument Cluster	√	√	√	√	√	
2024	Chevrolet	Express	Telematics Communication Interface Control Module	√	√	√	√	√	SP0259,SP0048,SP0011, SP0010

2024	Chevrolet	Express	Remote Control Door Lock Receiver	√	√	√	√	√	SP0204,SP0239,SP0161, SP0162,SP0163,SP0164, SP0159,SP0160,SP079B,
2024	Chevrolet	Express	Frontview Camera - Windshield	√	√	√	√		SP0196
2024	Chevrolet	Express	Side Obstacle Detection Control Module - Left	√	√	√		√	
2024	Chevrolet	Express	Side Obstacle Detection Control Module - Right	√	√	√		√	
2024	Chevrolet	Express	Parking Assist Control Module	√	√	√	√	√	SP0247
2024	Chevrolet	Express	Steering Wheel Angle Sensor Module	√	√	√			SP0093,SP0090,SP0084
2024	Chevrolet	Express	Multi-Axis Acceleration Sensor Module	√	√	√			SP0112,SP0111
2024	Chevrolet	Move	Engine Control Module	√	√	√	√	√	SP0069,SP0087,SP079C
2024	Chevrolet	Move	Electronic Brake Control Module	√	√	√	√	√	
2024	Chevrolet	Move	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2024	Chevrolet	Max	Engine Control Module	√	√	√	√	√	SP0069,SP0087,SP079C
2024	Chevrolet	Max	Electronic Brake Control Module	√	√	√	√	√	
2024	Chevrolet	Max	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2024	Chevrolet	Work	Engine Control Module	√	√	√	√	√	SP0069,SP0087,SP079C
2024	Chevrolet	Work	Electronic Brake Control Module	√	√	√	√	√	
2024	Chevrolet	Work	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2024	Chevrolet	Optra	Body Control Module	√	√	√	√	√	
2024	Chevrolet	Optra	Instrument Cluster	√	√	√	√	√	
2024	Chevrolet	Cavalier	Engine Control Module	√	√	√	√	√	SP0140,SP0263
2024	Chevrolet	Cavalier	Transmission Control Module	√	√	√	√	√	SP0017
2024	Chevrolet	Cavalier	Electronic Brake Control Module	√	√	√	√	√	SP0090
2024	Chevrolet	Cavalier	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√		SP0111
2024	Chevrolet	Cavalier	Body Control Module	√	√	√	√	√	
2024	Chevrolet	Cavalier	Instrument Cluster	√	√	√	√	√	
2024	Chevrolet	Cavalier	Serial Data Gateway Module	√	√	√	√		
2024	Chevrolet	Cavalier	Power Supply Transformer	√	√	√	√	√	
2024	Chevrolet	Cavalier	Parking Assist Control Module	√	√	√	√	√	
2024	Chevrolet	Cavalier	Radio	√	√	√	√	√	
2024	Chevrolet	Cavalier	Radio Controls	√	√	√	√	√	
2024	Chevrolet	Cavalier	Steering Wheel Angle Sensor Module	√	√	√			SP0093,SP0090
2024	Chevrolet	Cavalier	Power Steering Control Module	√	√	√	√		SP0081,SP0080,SP0089
2024	GMC	Canyon	Transmission Control Module	√	√	√	√	√	SP0017,SP0033
2024	GMC	Canyon	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	GMC	Canyon	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	GMC	Canyon	Chassis Control Module - Auxiliary	√	√	√	√	√	
2024	GMC	Canyon	Transfer Case Control Module	√	√	√	√	√	SP0037,SP0099,SP0100, SP0776
2024	GMC	Hummer	Brake System Control Module	√	√	√	√	√	SP0768,SP0229,SP0225, SP078E,SP0767,SP0758, SP0090,SP078F,SP0790

2024	GMC	Hummer	Restraints Control Module	√	√	√	√	√	SP0758,SP0134
2024	GMC	Hummer	Body Control Module	√	√	√	√	√	SP0263,SP0226,SP0754, SP0007,SP0129,SP0267
2024	GMC	Hummer	Instrument Panel Cluster Control Module	√	√	√	√	√	
2024	GMC	Hummer	Serial Data Gateway Module	√	√	√			
2024	GMC	Hummer	Drive Motor Control Module 2	√	√	√	√	√	SP07B9
2024	GMC	Hummer	Drive Motor Control Module 3	√	√	√	√		SP07B9
2024	GMC	Hummer	Drive Motor Control Module	√	√	√	√	√	SP07B9,SP0258
2024	GMC	Hummer	Hybrid/EV Powertrain Control Module 1		√	√			
2024	GMC	Hummer	Audio Amplifier	√	√	√	√		
2024	GMC	Hummer	Automated Driving Mapping Module	√	√	√	√	√	
2024	GMC	Hummer	Frontview Camera - Windshield	√	√	√	√		SP0196
2024	GMC	Hummer	Heater and Air Conditioning Auxiliary Control	√	√	√			
2024	GMC	Hummer	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2024	GMC	Hummer	Radio	√	√	√	√	√	SP0269,SP0769
2024	GMC	Hummer	Lighting Control Module	√	√	√	√	√	
2024	GMC	Hummer	Parking Assist Control Module	√	√	√	√	√	
2024	GMC	Hummer	Gear Shift Control Module	√					
2024	GMC	Hummer	Trailer Lamp Control Module	√	√	√	√	√	
2024	GMC	Hummer	Video Processing Module	√	√	√	√		
2024	GMC	Hummer	Wireless Accessory Charging Module	√	√	√	√		
2024	GMC	Hummer	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	GMC	Hummer	Powertrain Compartment Cover Module	√	√	√	√	√	SP07A0,SP07A1,SP07A 2,SP07A3,SP07A4,SP07
2024	GMC	Hummer	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	GMC	Hummer	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	GMC	Hummer	Near Field Communication Module	√	√	√	√		
2024	GMC	Hummer	Restraints Occupant Classification System Module - Passenger	√	√	√	√		SP0057
2024	GMC	Hummer	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	GMC	Hummer	Driver Monitoring System Control Module	√	√	√	√		
2024	GMC	Hummer	Image Processing Module 1 - Processor 1	√	√	√	√		
2024	GMC	Hummer	Image Processing Module 1 - Processor 2	√	√	√			SP0758
2024	GMC	Hummer	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	GMC	Hummer	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	GMC	Hummer	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	GMC	Hummer	Short Range Radar Sensor - Right Rear	√	√	√			SP0772

2024	GMC	Hummer	Battery Energy Control Module	√	√	√	√	√	SP07BA,SP0115,SP07B B,SP07BC,SP07BD,SP0 7BE,SP0123,SP07BF,SP 07C0,SP07C1,SP07C2,S P07C3,SP07D0,SP07C4, SP07C5,SP07C6,SP07C7
2024	GMC	Hummer	Battery Energy Control Module 2	√	√	√			
2024	GMC	Hummer	Chassis Control Module - Auxiliary	√	√	√	√	√	
2024	GMC	Hummer	Rear Wheel Steering Control Module	√	√	√	√		
2024	GMC	Hummer	Power Steering Control Module 2	√	√	√	√		
2024	GMC	Hummer	Power Steering Control Module	√	√	√	√		SP0089
2024	GMC	Hummer	Automatic Level Control Module	√	√	√	√	√	SP0785,SP0786,SP0787, SP0788,SP0789,SP078A, SP078B,SP078C,SP078D
2024	GMC	Hummer	Front Side Door Access Control Module - Right	√	√	√	√	√	
2024	GMC	Hummer	Rear Side Door Access Control Module - Left	√	√	√	√	√	
2024	GMC	Hummer	Rear Side Door Access Control Module - Right	√	√	√	√	√	
2024	GMC	Hummer	Suspension Control Module	√	√	√	√	√	
2024	GMC	Sierra	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP075E, SP0760,SP076C,SP0115, SP076D,SP0761,SP0086, SP076E,SP0212,SP0217, SP0006,SP0144,SP0258, SP0139,SP0085,SP0775, SP07A9,SP0779,SP0171, SP0097,SP0221,SP077B, SP077C,SP077D,SP0763 ,SP0764,SP0117,SP0119, SP07D1,SP07D2,SP0150 ,SP0246,SP077E,SP0178 ,SP0180,SP0182,SP0184, SP0186,SP0188,SP0190,
2024	GMC	Sierra	Transmission Control Module	√	√	√	√	√	SP0017,SP0033,SP0016
2024	GMC	Sierra	Brake System Control Module	√	√	√	√	√	SP0768,SP0229,SP0225, SP078E,SP0767,SP0758, SP0090,SP078F,SP0790
2024	GMC	Sierra	Electronic Brake Control Module	√	√	√	√	√	
2024	GMC	Sierra	Restraints Control Module	√	√	√	√	√	SP0758,SP0134
2024	GMC	Sierra	Body Control Module	√	√	√	√	√	SP0263,SP0226,SP0754, SP0007,SP0129,SP0267
2024	GMC	Sierra	Instrument Panel Cluster Control Module	√	√	√	√	√	
2024	GMC	Sierra	Serial Data Gateway Module	√	√	√			
2024	GMC	Sierra	Audio Amplifier	√	√	√	√		

2024	GMC	Sierra	Frontview Camera - Windshield	√	√	√	√		SP0196
2024	GMC	Sierra	Radio	√	√	√	√	√	SP0269,SP0769,SP07A7,SP07A8
2024	GMC	Sierra	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	GMC	Sierra	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2024	GMC	Sierra	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	GMC	Sierra	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	GMC	Sierra	Running Board Control Module	√	√	√	√	√	
2024	GMC	Sierra	Trailer Lamp Control Module	√	√	√	√	√	
2024	GMC	Sierra	Video Processing Module	√	√	√	√		
2024	GMC	Sierra	Wireless Accessory Charging Module	√	√	√	√		
2024	GMC	Sierra	Steering Column Lock Control Module	√	√	√	√		
2024	GMC	Sierra	Side Obstacle Detection Control Module - Left	√	√	√			
2024	GMC	Sierra	Side Obstacle Detection Control Module - Right	√	√	√			
2024	GMC	Sierra	Lighting Control Module	√	√	√	√	√	
2024	GMC	Sierra	Parking Assist Control Module	√	√	√	√	√	
2024	GMC	Sierra	Restraints Occupant Classification System Module - Passenger	√	√	√	√		SP0057
2024	GMC	Sierra	Glow Plug Control Module	√	√	√	√	√	SP0178,SP0180,SP0182,SP0184,SP0186,SP0188,SP0190,SP0192,SP0257
2024	GMC	Sierra	Chassis Control Module - Auxiliary	√	√	√	√	√	
2024	GMC	Sierra	Transfer Case Control Module	√	√	√	√	√	SP0037,SP0099,SP0100,SP0776
2024	GMC	Sierra	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	SP0266
2024	GMC	Sierra	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	SP0266
2024	GMC	Sierra	Automated Driving Mapping Module	√	√	√	√	√	
2024	GMC	Sierra	Video Display - Right Front Seat Back	√	√	√			
2024	GMC	Sierra	Power Steering Control Module	√	√	√	√		SP0089
2024	GMC	Sierra	Suspension Control Module	√	√	√	√	√	
2024	GMC	Sierra	Image Processing Module 1 - Processor 2	√	√	√			SP0758
2024	GMC	Sierra	Image Processing Module 1 - Processor 1	√	√	√	√		
2024	GMC	Sierra	Image Processing Module	√	√	√	√		
2024	GMC	Sierra	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	GMC	Sierra	Driver Monitoring System Control Module	√	√	√			
2024	GMC	Sierra	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	GMC	Sierra	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	GMC	Sierra	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	GMC	Sierra	Short Range Radar Sensor - Right Rear	√	√	√			SP0772
2024	GMC	Sierra	Gear Shift Control Module	√					
2024	GMC	Sierra	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2024	GMC	Sierra	Special Purpose Vehicle Module	√	√	√			

2024	GMC	Terrain	Engine Control Module	√	√	√	√	√	SP0263,SP0156,SP0209, SP0132,SP0147,SP076C, SP0115,SP0086,SP0085, SP0154,SP0213,SP0212, SP0217,SP0006,SP0144, SP0764,SP0763,SP0258, SP0129
2024	GMC	Terrain	Transmission Control Module	√	√	√	√	√	SP0017
2024	GMC	Terrain	Brake System Control Module	√	√	√	√	√	SP0766,SP0758,SP0767, SP0768,SP0229
2024	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	SP0172,SP0134,SP0111, SP0758
2024	GMC	Terrain	Body Control Module	√	√	√	√	√	SP0199,SP0239,SP0161, SP0162,SP0163,SP0164, SP0165,SP0166,SP0167, SP0168,SP0242,SP0263, SP0203,SP0201,SP0208, SP0206,SP0083,SP0267, SP0160,SP0233,SP0159
2024	GMC	Terrain	HVAC Control Module	√	√	√	√	√	SP0007,SP0129
2024	GMC	Terrain	HVAC Controls	√	√	√	√		
2024	GMC	Terrain	Headlamp Control Module	√	√	√	√	√	SP0195
2024	GMC	Terrain	Headlamp High Beam Control Module	√	√	√	√	√	SP0247
2024	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	SP0146,SP0169
2024	GMC	Terrain	Seat Memory Control Module - Driver	√	√	√	√	√	
2024	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	SP0755
2024	GMC	Terrain	Rear Drive Control Module	√	√	√	√	√	SP0003
2024	GMC	Terrain	Video Processing Control Module	√	√	√	√	√	
2024	GMC	Terrain	Frontview Camera - Windshield	√	√	√	√		SP0196,SP0084
2024	GMC	Terrain	Keyless Entry Control Module	√	√	√	√	√	
2024	GMC	Terrain	Passenger Presence Module	√	√	√	√	√	SP0057
2024	GMC	Terrain	Amplifier	√	√	√	√		
2024	GMC	Terrain	Radio	√	√	√	√	√	SP0150,SP0226,SP0269, SP0793,SP0267
2024	GMC	Terrain	Power Steering Control Module	√	√	√	√		SP0081,SP0080,SP0089
2024	GMC	Yukon	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP075E, SP0760,SP076C,SP0115, SP076D,SP0761,SP0086, SP076E,SP0212,SP0217, SP0006,SP0144,SP0258, SP0139,SP0085,SP0775
2024	GMC	Yukon	Transmission Control Module	√	√	√	√	√	SP0017,SP0033,SP0016



2024	GMC	Yukon	Brake System Control Module	√	√	√	√	√	SP0768,SP0229,SP0225, SP078E,SP0767,SP0758, SP0090,SP078F,SP0790
2024	GMC	Yukon	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	GMC	Yukon	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	GMC	Yukon	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	GMC	Yukon	Chassis Control Module - Auxiliary	√	√	√	√		
2024	GMC	Yukon	Transfer Case Control Module	√	√	√	√	√	SP0037,SP0099,SP0100, SP0776
2024	GMC	Yukon	Automatic Level Control Module	√	√	√	√	√	SP0785,SP0786,SP0787, SP0788,SP0789,SP078A, SP078B,SP078C,SP078D
2024	GMC	Yukon	Suspension Control Module	√	√	√	√	√	
2024	GMC	Yukon	Power Steering Control Module	√	√	√	√		SP0089
2024	GMC	Yukon	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	GMC	Yukon	Image Processing Module 1 - Processor 1	√	√	√	√		SP0758,SP0766
2024	GMC	Yukon	Image Processing Module 1 - Processor 2	√	√	√	√		SP07CF
2024	GMC	Yukon	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	GMC	Yukon	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	GMC	Yukon	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	GMC	Yukon	Short Range Radar Sensor - Right Rear	√	√	√			SP0772
2024	GMC	Yukon XL	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP076C, SP0115,SP0086,SP0085, SP076E,SP0212,SP0217, SP0775,SP0258,SP0139
2024	GMC	Yukon XL	Transmission Control Module	√	√	√	√	√	SP0017,SP0033,SP0016
2024	GMC	Yukon XL	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	GMC	Yukon XL	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	GMC	Yukon XL	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	GMC	Yukon XL	Chassis Control Module - Auxiliary	√	√	√	√		
2024	GMC	Yukon XL	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	GMC	Yukon XL	Image Processing Module 1 - Processor 2	√	√	√	√		SP07CF
2024	GMC	Yukon XL	Image Processing Module 1 - Processor 1	√	√	√	√		SP0758,SP0766
2024	GMC	Yukon XL	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	GMC	Yukon XL	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	GMC	Yukon XL	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	GMC	Yukon XL	Short Range Radar Sensor - Right Rear	√	√	√			SP0772

2024	GMC	Savana	Engine Control Module	√	√	√	√	√	SP0263,SP0156,SP0209, SP0757,SP0076,SP0020, SP0132,SP0067,SP0086, SP0154,SP0212,SP0214, SP0217,SP0258,SP076C, SP0115,SP0088,SP0006, SP0121,SP0120
2024	GMC	Savana	Transmission Control Module	√	√	√	√	√	SP0016,SP0033,SP0024, SP0026,SP0028,SP0030, SP0032,SP0023,SP0025, SP0027,SP0029,SP0031, SP0017
2024	GMC	Savana	Electronic Brake Control Module	√	√	√	√	√	SP0225,SP0111,SP0277, SP0090
2024	GMC	Savana	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	SP0172,SP0261
2024	GMC	Savana	Body Control Module	√	√	√	√	√	SP0263,SP0261
2024	GMC	Savana	Theft Deterrent Module	√	√	√	√		
2024	GMC	Savana	Instrument Cluster	√	√	√	√	√	
2024	GMC	Savana	Remote Control Door Lock Receiver	√	√	√	√	√	SP0204,SP0239,SP0161, SP0162,SP0163,SP0164, SP0159,SP0160,SP079B,
2024	GMC	Savana	Telematics Communication Interface Control Module	√	√	√	√	√	SP0259,SP0048,SP0011, SP0010
2024	GMC	Savana	Frontview Camera - Windshield	√	√	√	√		SP0196
2024	GMC	Savana	Side Obstacle Detection Control Module - Right	√	√	√		√	
2024	GMC	Savana	Side Obstacle Detection Control Module - Left	√	√	√		√	
2024	GMC	Savana	Parking Assist Control Module	√	√	√	√	√	SP0247
2024	GMC	Savana	Steering Wheel Angle Sensor Module	√	√	√			SP0093,SP0090,SP0084
2024	GMC	Savana	Multi-Axis Acceleration Sensor Module	√	√	√			SP0112,SP0111
2023	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0209 0115 0756 0086 0085 0757 0217 0258 0139 0006 075E 0760 076C 0761 0212 0111 0261 0753
2023	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0017
2023	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2023	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	Buick	Enclave	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	Buick	Enclave	Instrument Cluster	√	√	√	√	√	0247
2023	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0007 0129
2023	Buick	Enclave	HVAC Controls	√	√	√	√		

2023	Buick	Enclave	Liftgate Control Module	√	√	√	√	√	0146 0169
2023	Buick	Enclave	Seat Memory Control Module - Driver	√	√	√	√	√	
2023	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	Buick	Enclave	Power Steering Control Module	√	√	√	√		0089 0084
2023	Buick	Enclave	Suspension Control Module	√	√	√	√	√	
2023	Buick	Enclave	Chassis Control Module	√	√	√	√	√	0014 0078
2023	Buick	Enclave	Video Processing Control Module	√	√	√	√	√	
2023	Buick	Enclave	Amplifier	√	√	√	√		
2023	Buick	Enclave	Radio Controls	√	√	√	√		
2023	Buick	Enclave	Radio	√	√	√	√	√	0269 0793 0267 0226
2023	Buick	Enclave	Rear Drive Control Module	√	√	√	√	√	0003
2023	Buick	Enclave	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	Buick	Enclave	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	Buick	Enclave	Serial Data Gateway Module - Processor 1	√	√	√			
2023	Buick	Enclave	Serial Data Gateway Module - Processor 2	√	√	√			
2023	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247
2023	Buick	Enclave	Active Safety Control Module	√	√	√	√		
2023	Buick	Enclave	Frontview Camera - Windshield	√	√	√	√		0196
2023	Buick	Enclave	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Buick	Enclave	Short Range Radar Sensor - Rear Middle	√	√	√			
2023	Buick	Enclave	Keyless Entry Control Module	√	√	√	√	√	0759
2023	Buick	Enclave	Passenger Presence Module	√	√	√	√	√	0057
2023	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0209 0132 0115 0086 0212 0214 0217 0006 0144 0139 0757 0085 075E 075F 0760 0761 0213 0762 0258 0763 0764 0765
2023	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017 0016 075C
2023	Buick	Encore	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768 0229 078F 0790
2023	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2023	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2023	Buick	Encore	HVAC Controls	√	√	√	√		
2023	Buick	Encore	Rear Drive Control Module	√	√	√	√	√	0003
2023	Buick	Encore	Video Processing Control Module	√	√	√	√	√	
2023	Buick	Encore	Amplifier	√	√	√	√		

2023	Buick	Encore	Headlamp Control Module	√	√	√	√	√	0195
2023	Buick	Encore	Liftgate Control Module	√	√	√	√	√	0146 0169
2023	Buick	Encore	Seat Memory Control Module - Driver	√	√	√	√	√	
2023	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	Buick	Encore	Power Steering Control Module	√	√	√	√		0089 0084
2023	Buick	Encore	Radio	√	√	√	√	√	0150 0226 0269 0793
2023	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247
2023	Buick	Encore	Serial Data Gateway Module - Processor 1	√	√	√			
2023	Buick	Encore	Serial Data Gateway Module - Processor 2	√	√	√			
2023	Buick	Encore	Head-Up Display Module	√	√	√	√	√	
2023	Buick	Encore	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	Buick	Encore	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	Buick	Encore	Steering Column Lock Control Module	√	√	√	√		
2023	Buick	Encore	Frontview Camera - Windshield	√	√	√	√		0196 0084
2023	Buick	Encore	Keyless Entry Control Module	√	√	√	√	√	0759
2023	Buick	Encore	Passenger Presence Module	√	√	√	√	√	0057
2023	Buick	Envision	Engine Control Module	√	√	√	√	√	0263 0209 075E 076B 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0764 0762 0226 0120
2023	Buick	Envision	Transmission Control Module	√	√	√	√	√	0019 076A
2023	Buick	Envision	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758 0229 078F 0790 0799
2023	Buick	Envision	Restraints Control Module	√	√	√	√	√	0758 0134
2023	Buick	Envision	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	Buick	Envision	Instrument Panel Cluster Control Module	√	√	√	√	√	
2023	Buick	Envision	Serial Data Gateway Module	√	√	√			
2023	Buick	Envision	Power Steering Control Module	√	√	√	√		0766
2023	Buick	Envision	Wireless Accessory Charging Module	√	√	√	√		
2023	Buick	Envision	Video Processing Module	√	√	√			
2023	Buick	Envision	Rear Drive Control Module	√	√	√	√	√	
2023	Buick	Envision	Audio Amplifier	√	√	√	√		
2023	Buick	Envision	Heater and Air Conditioning Auxiliary Control	√	√	√			
2023	Buick	Envision	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	Buick	Envision	Infotainment Control Switch	√	√	√			
2023	Buick	Envision	Radio Controls	√	√	√	√		
2023	Buick	Envision	Radio	√	√	√	√	√	0769 0269 07A7 07A8
2023	Buick	Envision	Video Display - Right Front Seat Back	√	√	√			
2023	Buick	Envision	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	Buick	Envision	Headlamp Control Module	√	√	√	√		0195
2023	Buick	Envision	Rear Gate Module	√	√	√	√	√	0146 0753

2023	Buick	Envision	Telematics Control Module	√	√	√	√		0270 0755
2023	Buick	Envision	Frontview Camera - Windshield	√	√	√	√		0196
2023	Buick	Envision	Parking Assist Control Module	√	√	√	√	√	
2023	Buick	Envision	Side Obstacle Detection Control Module - Left	√	√	√			
2023	Buick	Envision	Side Obstacle Detection Control Module - Right	√	√	√			
2023	Buick	Envision	Steering Column Lock Control Module	√	√	√	√		
2023	Buick	Envision	Lighting Control Module	√	√	√	√	√	
2023	Buick	Envision	Gear Shift Control Module	√					
2023	Buick	Envision	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	Buick	Envision	Driver Monitoring System Control Module	√	√	√			
2023	Buick	Envision	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Buick	Envision	Image Processing Module	√	√	√	√		
2023	Buick	Envision	Electronic Suspension Control Module	√	√	√	√	√	0198
2023	Cadillac	CT4	Engine Control Module	√	√	√	√	√	0263 0209 075E 076B 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0764 0763 0258 0139 0156 0770 0076 0774 0773 0775 0154
2023	Cadillac	CT4	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2023	Cadillac	CT4	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758 0229 078F 0790 0799
2023	Cadillac	CT4	Restraints Control Module	√	√	√	√	√	0758 0134
2023	Cadillac	CT4	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	Cadillac	CT4	Instrument Panel Cluster Control Module	√	√	√	√	√	
2023	Cadillac	CT4	Serial Data Gateway Module	√	√	√			
2023	Cadillac	CT4	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	Cadillac	CT4	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2023	Cadillac	CT4	Telematics Control Module	√	√	√	√		0270 0755
2023	Cadillac	CT4	Transfer Case Control Module	√	√	√	√	√	0099 0100
2023	Cadillac	CT4	Audio Amplifier	√	√	√	√		
2023	Cadillac	CT4	Automated Driving Mapping Module	√	√	√	√	√	
2023	Cadillac	CT4	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	Cadillac	CT4	Infotainment Control Switch	√	√	√			
2023	Cadillac	CT4	Radio Controls	√	√	√	√		
2023	Cadillac	CT4	Radio	√	√	√	√	√	0769 0269 07A7 07A8
2023	Cadillac	CT4	Wireless Accessory Charging Module	√	√	√	√		
2023	Cadillac	CT4	Video Processing Module	√	√	√			
2023	Cadillac	CT4	Differential Control Module	√	√	√	√	√	07B7 07B8
2023	Cadillac	CT4	Gear Shift Control Module	√					

2023	Cadillac	CT4	Side Obstacle Detection Control Module - Left	√	√	√			
2023	Cadillac	CT4	Side Obstacle Detection Control Module - Right	√	√	√			
2023	Cadillac	CT4	Steering Column Lock Control Module	√	√	√	√		
2023	Cadillac	CT4	Lighting Control Module	√	√	√	√	√	
2023	Cadillac	CT4	Parking Assist Control Module	√	√	√	√	√	
2023	Cadillac	CT4	Electronic Suspension Control Module	√	√	√	√	√	0198
2023	Cadillac	CT4	Power Steering Control Module	√	√	√	√		0766
2023	Cadillac	CT4	Frontview Camera - Windshield	√	√	√	√		0196
2023	Cadillac	CT4	Image Processing Module	√	√	√	√		
2023	Cadillac	CT4	Image Processing Module 1 - Processor 1	√	√	√	√		
2023	Cadillac	CT4	Image Processing Module 1 - Processor 2	√	√	√			0758
2023	Cadillac	CT4	Driver Monitoring System Control Module	√	√	√			
2023	Cadillac	CT4	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Cadillac	CT4	Short Range Radar Sensor - Left Front	√	√	√			0772
2023	Cadillac	CT4	Short Range Radar Sensor - Left Rear	√	√	√			0772
2023	Cadillac	CT4	Short Range Radar Sensor - Right Front	√	√	√			0772
2023	Cadillac	CT4	Short Range Radar Sensor - Right Rear	√	√	√			0772
2023	Cadillac	CT4	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	Cadillac	CT4	Vehicle Performance Data Recorder	√	√	√	√		
2023	Cadillac	CT5	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0773 0115 07CD 0086 0154 0212 0217 0775 0144 0258 0139 0770 0774 076B 075E 0760 076C 076D 0761 076E 0006 0764 0763
2023	Cadillac	CT5	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2023	Cadillac	CT5	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758 0229 078F 0790 0799
2023	Cadillac	CT5	Restraints Control Module	√	√	√	√	√	0758 0134
2023	Cadillac	CT5	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	Cadillac	CT5	Instrument Panel Cluster Control Module	√	√	√	√	√	
2023	Cadillac	CT5	Serial Data Gateway Module	√	√	√			
2023	Cadillac	CT5	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	Cadillac	CT5	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2023	Cadillac	CT5	Telematics Control Module	√	√	√	√		0270 0755
2023	Cadillac	CT5	Transfer Case Control Module	√	√	√	√	√	0099 0100
2023	Cadillac	CT5	Audio Amplifier	√	√	√	√		
2023	Cadillac	CT5	Automated Driving Mapping Module	√	√	√	√	√	
2023	Cadillac	CT5	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	Cadillac	CT5	Infotainment Control Switch	√	√	√			

2023	Cadillac	CT5	Radio Controls	√	√	√	√		
2023	Cadillac	CT5	Radio	√	√	√	√	√	0769 0269 07A7 07A8
2023	Cadillac	CT5	Parking Assist Control Module	√	√	√	√	√	
2023	Cadillac	CT5	Side Obstacle Detection Control Module - Left	√	√	√			
2023	Cadillac	CT5	Side Obstacle Detection Control Module - Right	√	√	√			
2023	Cadillac	CT5	Steering Column Lock Control Module	√	√	√	√		
2023	Cadillac	CT5	Gear Shift Control Module	√					
2023	Cadillac	CT5	Lighting Control Module	√	√	√	√	√	
2023	Cadillac	CT5	Differential Control Module	√	√	√	√	√	07B7 07B8
2023	Cadillac	CT5	Video Processing Module	√	√	√			
2023	Cadillac	CT5	Wireless Accessory Charging Module	√	√	√	√		
2023	Cadillac	CT5	Electronic Suspension Control Module	√	√	√	√	√	
2023	Cadillac	CT5	Power Steering Control Module	√	√	√	√		0766
2023	Cadillac	CT5	Frontview Camera - Windshield	√	√	√	√		0196
2023	Cadillac	CT5	Driver Monitoring System Control Module	√	√	√			
2023	Cadillac	CT5	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Cadillac	CT5	Image Processing Module 1 - Processor 1	√	√	√	√		
2023	Cadillac	CT5	Image Processing Module 1 - Processor 2	√	√	√			0758
2023	Cadillac	CT5	Image Processing Module	√	√	√	√		
2023	Cadillac	CT5	Short Range Radar Sensor - Left Front	√	√	√			0772
2023	Cadillac	CT5	Short Range Radar Sensor - Left Rear	√	√	√			0772
2023	Cadillac	CT5	Short Range Radar Sensor - Rear Middle	√	√	√			0772
2023	Cadillac	CT5	Short Range Radar Sensor - Right Front	√	√	√			0772
2023	Cadillac	CT5	Short Range Radar Sensor - Right Rear	√	√	√			0772
2023	Cadillac	CT5	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	Cadillac	CT5	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2023	Cadillac	CT5	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2023	Cadillac	CT5	UHF Short Range Low Energy Remote Control Access Transceiver	√	√	√			
2023	Cadillac	CT5	Vehicle Performance Data Recorder	√	√	√	√		
2023	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0263 0209 075E 075F 0778 076C 0115 076D 0779 0086 0085 0097 0221 0757 077A 077B 077C 077D 0764 0763 0117 0119 0258 07CE 077E 077F 0780 0781 0782 0783 0784 076E 0212 0217 0775 0139 0156 0076 0773 0774
2023	Cadillac	Escalade	Transmission Control Module	√	√	√	√	√	0017 0033 0016

2023	Cadillac	Escalade	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2023	Cadillac	Escalade	Restraints Control Module	√	√	√	√	√	0758 0134
2023	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	Cadillac	Escalade	Instrument Panel Cluster Control Module	√	√	√	√	√	
2023	Cadillac	Escalade	Serial Data Gateway Module	√	√	√			
2023	Cadillac	Escalade	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	Cadillac	Escalade	Headlamp Control Module	√	√	√	√		0195
2023	Cadillac	Escalade	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2023	Cadillac	Escalade	Rear Gate Module	√	√	√	√	√	0146 0753
2023	Cadillac	Escalade	Telematics Control Module	√	√	√	√		0270 0755
2023	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2023	Cadillac	Escalade	Audio Amplifier	√	√	√	√		
2023	Cadillac	Escalade	Automated Driving Mapping Module	√	√	√	√	√	
2023	Cadillac	Escalade	Heater and Air Conditioning Auxiliary Control	√	√	√			
2023	Cadillac	Escalade	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	Cadillac	Escalade	Infotainment Control Switch	√	√	√			
2023	Cadillac	Escalade	Radio Controls	√	√	√	√		
2023	Cadillac	Escalade	Radio	√	√	√	√	√	0769 0269 07A7 07A8
2023	Cadillac	Escalade	Video Display - Right Front Seat Back	√	√	√			
2023	Cadillac	Escalade	Chassis Control Module - Auxiliary	√	√	√	√	√	
2023	Cadillac	Escalade	Frontview Camera - Windshield	√	√	√	√		0196
2023	Cadillac	Escalade	Gear Shift Control Module	√					
2023	Cadillac	Escalade	Parking Assist Control Module	√	√	√	√	√	
2023	Cadillac	Escalade	Lighting Control Module	√	√	√	√	√	
2023	Cadillac	Escalade	Side Obstacle Detection Control Module - Left	√	√	√			
2023	Cadillac	Escalade	Side Obstacle Detection Control Module - Right	√	√	√			
2023	Cadillac	Escalade	Steering Column Lock Control Module	√	√	√	√		
2023	Cadillac	Escalade	Wireless Accessory Charging Module	√	√	√	√		
2023	Cadillac	Escalade	Video Processing Module	√	√	√	√		
2023	Cadillac	Escalade	Night Vision Control Module	√	√	√	√		
2023	Cadillac	Escalade	Running Board Control Module	√	√	√	√	√	
2023	Cadillac	Escalade	Trailer Lamp Control Module	√	√	√	√	√	
2023	Cadillac	Escalade	Differential Control Module	√	√	√	√	√	07B7 07B8
2023	Cadillac	Escalade	Image Processing Module	√	√	√	√		
2023	Cadillac	Escalade	Driver Monitoring System Control Module	√	√	√			
2023	Cadillac	Escalade	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Cadillac	Escalade	Image Processing Module 1 - Processor 1	√	√	√	√		
2023	Cadillac	Escalade	Image Processing Module 1 - Processor 2	√	√	√			0758
2023	Cadillac	Escalade	Short Range Radar Sensor - Left Front	√	√	√			0772
2023	Cadillac	Escalade	Short Range Radar Sensor - Left Rear	√	√	√			0772



2023	Cadillac	Escalade	Short Range Radar Sensor - Right Front	√	√	√			0772
2023	Cadillac	Escalade	Short Range Radar Sensor - Right Rear	√	√	√			0772
2023	Cadillac	Escalade	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	Cadillac	Escalade	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2023	Cadillac	Escalade	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2023	Cadillac	Escalade	Power Steering Control Module	√	√	√	√		0089
2023	Cadillac	Escalade	Electronic Suspension Control Module	√	√	√	√	√	0198
2023	Cadillac	Escalade	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2023	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0263 0209 075E 075F 0778 076C 0115 076D 0779 0086 0085 0097 0221 0757 077A 077B 077C 077D 0764 0763 0117 0119 0258 07CE 077E 077F 0780 0781 0782 0783 0784 076E 0212 0217 0775 0139 0156 0076 0773 0774
2023	Cadillac	Escalade ESV	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2023	Cadillac	Escalade ESV	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2023	Cadillac	Escalade ESV	Restraints Control Module	√	√	√	√	√	0758 0134
2023	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	Cadillac	Escalade ESV	Instrument Panel Cluster Control Module	√	√	√	√	√	
2023	Cadillac	Escalade ESV	Serial Data Gateway Module	√	√	√			
2023	Cadillac	Escalade ESV	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	Cadillac	Escalade ESV	Headlamp Control Module	√	√	√	√		0195
2023	Cadillac	Escalade ESV	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2023	Cadillac	Escalade ESV	Rear Gate Module	√	√	√	√		
2023	Cadillac	Escalade ESV	Telematics Control Module	√	√	√	√		0270 0755
2023	Cadillac	Escalade ESV	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2023	Cadillac	Escalade ESV	Audio Amplifier	√	√	√	√		
2023	Cadillac	Escalade ESV	Automated Driving Mapping Module	√	√	√	√	√	
2023	Cadillac	Escalade ESV	Heater and Air Conditioning Auxiliary Control	√	√	√			
2023	Cadillac	Escalade ESV	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	Cadillac	Escalade ESV	Infotainment Control Switch	√	√	√			
2023	Cadillac	Escalade ESV	Radio	√	√	√	√	√	0769 0269 07A7 07A8
2023	Cadillac	Escalade ESV	Video Display - Right Front Seat Back	√	√	√			
2023	Cadillac	Escalade ESV	Chassis Control Module - Auxiliary	√	√	√	√	√	

2023	Cadillac	Escalade ESV	Frontview Camera - Windshield	√	√	√	√		0196
2023	Cadillac	Escalade ESV	Gear Shift Control Module	√					
2023	Cadillac	Escalade ESV	Side Obstacle Detection Control Module - Left	√	√	√			
2023	Cadillac	Escalade ESV	Side Obstacle Detection Control Module - Right	√	√	√			
2023	Cadillac	Escalade ESV	Steering Column Lock Control Module	√	√	√	√		
2023	Cadillac	Escalade ESV	Wireless Accessory Charging Module	√	√	√	√		
2023	Cadillac	Escalade ESV	Video Processing Module	√	√	√	√		
2023	Cadillac	Escalade ESV	Night Vision Control Module	√	√	√	√		
2023	Cadillac	Escalade ESV	Running Board Control Module	√	√	√	√	√	
2023	Cadillac	Escalade ESV	Trailer Lamp Control Module	√	√	√	√	√	
2023	Cadillac	Escalade ESV	Differential Control Module	√	√	√	√	√	07B7 07B8
2023	Cadillac	Escalade ESV	Driver Monitoring System Control Module	√	√	√			
2023	Cadillac	Escalade ESV	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Cadillac	Escalade ESV	Image Processing Module 1 - Processor 1	√	√	√	√		
2023	Cadillac	Escalade ESV	Image Processing Module 1 - Processor 2	√	√	√			0758
2023	Cadillac	Escalade ESV	Image Processing Module	√	√	√	√		
2023	Cadillac	Escalade ESV	Short Range Radar Sensor - Left Front	√	√	√			0772
2023	Cadillac	Escalade ESV	Short Range Radar Sensor - Left Rear	√	√	√			0772
2023	Cadillac	Escalade ESV	Short Range Radar Sensor - Right Front	√	√	√			0772
2023	Cadillac	Escalade ESV	Short Range Radar Sensor - Right Rear	√	√	√			0772
2023	Cadillac	Escalade ESV	Parking Assist Control Module	√	√	√	√	√	
2023	Cadillac	Escalade ESV	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	Cadillac	Escalade ESV	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2023	Cadillac	Escalade ESV	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2023	Cadillac	Escalade ESV	Lighting Control Module	√	√	√	√	√	
2023	Cadillac	Escalade ESV	Radio Controls	√	√	√	√		
2023	Cadillac	Escalade ESV	Power Steering Control Module	√	√	√	√		0089
2023	Cadillac	Escalade ESV	Electronic Suspension Control Module	√	√	√	√	√	0198
2023	Cadillac	Escalade ESV	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2023	Cadillac	Lyriq	Brake System Control Module	√	√	√	√	√	0225 0229 078E 0767 0758 0090
2023	Cadillac	Lyriq	Restraints Control Module	√	√	√	√	√	0758 0134
2023	Cadillac	Lyriq	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	Cadillac	Lyriq	Serial Data Gateway Module	√	√	√			
2023	Cadillac	Lyriq	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	Cadillac	Lyriq	Headlamp Control Module	√	√	√	√		0195
2023	Cadillac	Lyriq	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2023	Cadillac	Lyriq	Rear Gate Module	√	√	√	√		0753

2023	Cadillac	Lyriq	Telematics Control Module	√	√	√	√		0270 0755
2023	Cadillac	Lyriq	Audio Amplifier	√	√	√	√		
2023	Cadillac	Lyriq	Heater and Air Conditioning Auxiliary Control	√	√	√			
2023	Cadillac	Lyriq	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	Cadillac	Lyriq	Infotainment Control Switch	√	√	√			
2023	Cadillac	Lyriq	Radio	√	√	√	√	√	07A8
2023	Cadillac	Lyriq	Wireless Accessory Charging Module	√	√	√	√		
2023	Cadillac	Lyriq	Drive Motor Control Module	√	√	√	√	√	07B9 0258
2023	Cadillac	Lyriq	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	Cadillac	Lyriq	Frontview Camera - Windshield	√	√	√	√		0196
2023	Cadillac	Lyriq	Parking Assist Control Module	√	√	√	√	√	
2023	Cadillac	Lyriq	Lighting Control Module	√	√	√	√	√	
2023	Cadillac	Lyriq	Steering Column Lock Control Module	√	√	√	√		
2023	Cadillac	Lyriq	Side Obstacle Detection Control Module - Left	√	√	√			
2023	Cadillac	Lyriq	Side Obstacle Detection Control Module - Right	√	√	√			
2023	Cadillac	Lyriq	Driver Monitoring System Control Module	√	√	√			
2023	Cadillac	Lyriq	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Cadillac	Lyriq	Image Processing Module 1 - Processor 1	√	√	√	√		
2023	Cadillac	Lyriq	Image Processing Module 1 - Processor 2	√	√	√			0758
2023	Cadillac	Lyriq	Image Processing Module	√	√	√	√		
2023	Cadillac	Lyriq	Short Range Radar Sensor - Left Front	√	√	√			0772
2023	Cadillac	Lyriq	Short Range Radar Sensor - Left Rear	√	√	√			0772
2023	Cadillac	Lyriq	Short Range Radar Sensor - Right Front	√	√	√			0772
2023	Cadillac	Lyriq	Short Range Radar Sensor - Right Rear	√	√	√			0772
2023	Cadillac	Lyriq	Drive Motor Control Module 2	√	√	√	√		07B9
2023	Cadillac	Lyriq	Battery Energy Control Module	√	√	√	√	√	07BA 0115 07BB 07BC 07BD 07BE 0123 07BF 07C0 07C1 07C2 07C3 07C4 07C5 07C6 07C7
2023	Cadillac	Lyriq	Near Field Communication Module	√	√	√	√		
2023	Cadillac	Lyriq	Power Steering Control Module 2	√	√	√	√		
2023	Cadillac	Lyriq	Power Steering Control Module 1	√	√	√	√		0766 07C8
2023	Cadillac	XT4	Engine Control Module	√	√	√	√	√	0263 0209 0791 075E 076C 0115 076D 0058 0763 0764 0086 0097 0219 0221 0792 0073 0072 0070 0071 0117 0119 0258 077E 0178 0180 0182 0184 0246 0760 0761 0085 0757 0212 0217 0006 0144
2023	Cadillac	XT4	Transmission Control Module	√	√	√	√	√	0017

2023	Cadillac	XT4	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768 0229 078F 0790
2023	Cadillac	XT4	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	Cadillac	XT4	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	Cadillac	XT4	Instrument Cluster	√	√	√	√	√	0247
2023	Cadillac	XT4	HVAC Control Module	√	√	√	√	√	0007 0129
2023	Cadillac	XT4	HVAC Controls	√	√	√	√		
2023	Cadillac	XT4	Headlamp Control Module	√	√	√	√	√	0195
2023	Cadillac	XT4	Liftgate Control Module	√	√	√	√	√	0146 0169
2023	Cadillac	XT4	Seat Memory Control Module - Driver	√	√	√	√	√	
2023	Cadillac	XT4	Seat Memory Control Module - Passenger	√	√	√	√	√	
2023	Cadillac	XT4	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	Cadillac	XT4	Power Steering Control Module	√	√	√	√		0081 0080 0089
2023	Cadillac	XT4	Suspension Control Module	√	√	√	√	√	
2023	Cadillac	XT4	Parking Assist Control Module	√	√	√	√	√	0247
2023	Cadillac	XT4	Serial Data Gateway Module - Processor 1	√	√	√			
2023	Cadillac	XT4	Serial Data Gateway Module - Processor 2	√	√	√			
2023	Cadillac	XT4	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	Cadillac	XT4	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	Cadillac	XT4	Steering Column Lock Control Module	√	√	√	√		
2023	Cadillac	XT4	Amplifier	√	√	√	√		
2023	Cadillac	XT4	Infotainment Control Switch	√	√	√			
2023	Cadillac	XT4	Radio Controls	√	√	√	√		
2023	Cadillac	XT4	Radio	√	√	√	√	√	0269 0793 0267 0226
2023	Cadillac	XT4	Video Processing Control Module	√	√	√	√	√	
2023	Cadillac	XT4	Trailer Lighting Control Module	√	√	√	√	√	0247
2023	Cadillac	XT4	Rear Drive Control Module	√	√	√	√	√	0003
2023	Cadillac	XT4	Active Safety Control Module	√	√	√	√	√	
2023	Cadillac	XT4	Frontview Camera - Windshield	√	√	√	√		0196
2023	Cadillac	XT4	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Cadillac	XT4	Short Range Radar Sensor - Rear Middle	√	√	√			
2023	Cadillac	XT4	Passenger Presence Module	√	√	√	√	√	0057
2023	Cadillac	XT4	Keyless Entry Control Module	√	√	√	√	√	
2023	Cadillac	XT5	Engine Control Module	√	√	√	√	√	0209 075E 0760 076C 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0250 0130 0766
2023	Cadillac	XT5	Transmission Control Module	√	√	√	√	√	0017

2023	Cadillac	XT5	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2023	Cadillac	XT5	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2023	Cadillac	XT5	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	Cadillac	XT5	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	Cadillac	XT5	Instrument Cluster	√	√	√	√	√	0247
2023	Cadillac	XT5	HVAC Control Module	√	√	√	√	√	0007 0129
2023	Cadillac	XT5	HVAC Controls	√	√	√	√		
2023	Cadillac	XT5	Headlamp Control Module		√	√			
2023	Cadillac	XT5	Liftgate Control Module	√	√	√	√	√	0146 0169
2023	Cadillac	XT5	Seat Memory Control Module - Driver	√	√	√	√	√	
2023	Cadillac	XT5	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	Cadillac	XT5	Power Steering Control Module	√	√	√	√		0081 0080 0089
2023	Cadillac	XT5	Suspension Control Module	√	√	√	√	√	
2023	Cadillac	XT5	Parking Assist Control Module	√	√	√	√	√	0247
2023	Cadillac	XT5	Serial Data Gateway Module - Processor 1	√	√	√			
2023	Cadillac	XT5	Serial Data Gateway Module - Processor 2	√	√	√			
2023	Cadillac	XT5	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	Cadillac	XT5	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	Cadillac	XT5	Steering Column Lock Control Module	√	√	√	√		
2023	Cadillac	XT5	Amplifier	√	√	√	√		
2023	Cadillac	XT5	Infotainment Control Switch	√	√	√			
2023	Cadillac	XT5	Radio Controls	√	√	√	√		
2023	Cadillac	XT5	Radio	√	√	√	√	√	0269 0793 0267 0226
2023	Cadillac	XT5	Night Vision Camera Control Module	√	√	√	√		0492
2023	Cadillac	XT5	Video Processing Control Module	√	√	√	√	√	
2023	Cadillac	XT5	Trailer Lighting Control Module	√	√	√	√	√	0247
2023	Cadillac	XT5	Rear Drive Control Module	√	√	√	√	√	0003
2023	Cadillac	XT5	Active Safety Control Module	√	√	√	√	√	
2023	Cadillac	XT5	Frontview Camera - Windshield	√	√	√	√		0196
2023	Cadillac	XT5	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Cadillac	XT5	Short Range Radar Sensor - Rear Middle	√	√	√			
2023	Cadillac	XT5	Keyless Entry Control Module	√	√	√	√	√	0759
2023	Cadillac	XT5	Passenger Presence Module	√	√	√	√	√	0057
2023	Cadillac	XT5	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2023	Cadillac	XT5	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266

2023	Cadillac	XT6	Engine Control Module	√	√	√	√	√	0209 075E 0760 076C 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0130 0756
2023	Cadillac	XT6	Transmission Control Module	√	√	√	√	√	0017
2023	Cadillac	XT6	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2023	Cadillac	XT6	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2023	Cadillac	XT6	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	Cadillac	XT6	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	Cadillac	XT6	Instrument Cluster	√	√	√	√	√	0247
2023	Cadillac	XT6	HVAC Control Module	√	√	√	√	√	0007 0129
2023	Cadillac	XT6	HVAC Controls	√	√	√	√		
2023	Cadillac	XT6	Headlamp Control Module	√	√	√	√	√	0195
2023	Cadillac	XT6	Liftgate Control Module	√	√	√	√	√	0146 0169
2023	Cadillac	XT6	Seat Memory Control Module - Driver	√	√	√	√	√	
2023	Cadillac	XT6	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	Cadillac	XT6	Parking Assist Control Module	√	√	√	√	√	0247
2023	Cadillac	XT6	Serial Data Gateway Module - Processor 1	√	√	√			
2023	Cadillac	XT6	Serial Data Gateway Module - Processor 2	√	√	√			
2023	Cadillac	XT6	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	Cadillac	XT6	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	Cadillac	XT6	Steering Column Lock Control Module	√	√	√	√		
2023	Cadillac	XT6	Amplifier	√	√	√	√		
2023	Cadillac	XT6	Infotainment Control Switch	√	√	√			
2023	Cadillac	XT6	Radio Controls	√	√	√	√		
2023	Cadillac	XT6	Radio	√	√	√	√	√	0269 0793 0267 0226
2023	Cadillac	XT6	Night Vision Camera Control Module	√	√	√	√		0492
2023	Cadillac	XT6	Video Processing Control Module	√	√	√	√	√	
2023	Cadillac	XT6	Trailer Lighting Control Module	√	√	√	√	√	0247
2023	Cadillac	XT6	Rear Drive Control Module	√	√	√	√	√	0003
2023	Cadillac	XT6	Active Safety Control Module	√	√	√	√	√	
2023	Cadillac	XT6	Active Safety Control Module 1 - Processor A	√	√	√	√		0268 0794
2023	Cadillac	XT6	Active Safety Control Module 1 - Processor B	√	√	√	√		0111 0268
2023	Cadillac	XT6	Active Safety Control Module 1 - Processor C	√	√	√	√		0268
2023	Cadillac	XT6	Active Safety Control Module 2 - Processor A	√	√	√	√		0268 0794
2023	Cadillac	XT6	Active Safety Control Module 2 - Processor B	√	√	√	√		0111 0268
2023	Cadillac	XT6	Active Safety Control Module 2 - Processor C	√	√	√	√		0268

2023	Cadillac	XT6	Driver Monitoring System Control Module	√	√	√	√		
2023	Cadillac	XT6	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Cadillac	XT6	Frontview Camera - Windshield	√	√	√	√		0196
2023	Cadillac	XT6	Short Range Radar Sensor - Rear Middle	√	√	√			
2023	Cadillac	XT6	Keyless Entry Control Module	√	√	√	√	√	0759
2023	Cadillac	XT6	Passenger Presence Module	√	√	√	√	√	0057
2023	Cadillac	XT6	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2023	Cadillac	XT6	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2023	Cadillac	XT6	Power Steering Control Module	√	√	√	√		0089 0084
2023	Cadillac	XT6	Suspension Control Module	√	√	√	√	√	
2023	Chevrolet	Aveo	Engine Control Module	√	√	√	√	√	0156 0020 0140
2023	Chevrolet	Aveo	Transmission Control Module	√	√	√	√	√	0016
2023	Chevrolet	Aveo	Electronic Brake Control Module	√	√	√	√	√	0111 0090
2023	Chevrolet	Aveo	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261 0111
2023	Chevrolet	Aveo	Body Control Module	√	√	√	√	√	0263
2023	Chevrolet	Aveo	HVAC Control Module	√	√	√	√	√	0007 0129
2023	Chevrolet	Aveo	Radio/HVAC Controls	√	√	√	√	√	0150
2023	Chevrolet	Aveo	Power Steering Control Module	√	√	√	√		0081 0089
2023	Chevrolet	Aveo	Radio	√	√	√	√	√	
2023	Chevrolet	Aveo	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2023	Chevrolet	Aveo	Telematics Communication Interface Control Module	√	√	√		√	
2023	Chevrolet	Blazer	Engine Control Module	√	√	√	√	√	0263 0209 0115 0756 0086 0085 0757 0217 0258 0139 0006 075E 0760 076C 0761 0212 0144 0764 0762
2023	Chevrolet	Blazer	Transmission Control Module	√	√	√	√	√	0017
2023	Chevrolet	Blazer	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2023	Chevrolet	Blazer	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2023	Chevrolet	Blazer	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	Chevrolet	Blazer	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	Chevrolet	Blazer	Instrument Cluster	√	√	√	√	√	0247
2023	Chevrolet	Blazer	HVAC Control Module	√	√	√	√	√	0007 0129
2023	Chevrolet	Blazer	HVAC Controls	√	√	√	√		
2023	Chevrolet	Blazer	Liftgate Control Module	√	√	√	√	√	0146 0169
2023	Chevrolet	Blazer	Seat Memory Control Module - Driver	√	√	√	√	√	
2023	Chevrolet	Blazer	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	Chevrolet	Blazer	Amplifier	√	√	√	√		

2023	Chevrolet	Blazer	Radio	√	√	√	√	√	0269 0793 0267 0226
2023	Chevrolet	Blazer	Video Processing Control Module	√	√	√	√	√	
2023	Chevrolet	Blazer	Parking Assist Control Module	√	√	√	√	√	0247
2023	Chevrolet	Blazer	Serial Data Gateway Module - Processor 1	√	√	√			
2023	Chevrolet	Blazer	Serial Data Gateway Module - Processor 2	√	√	√			
2023	Chevrolet	Blazer	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	Chevrolet	Blazer	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	Chevrolet	Blazer	Rear Drive Control Module	√	√	√	√	√	0003
2023	Chevrolet	Blazer	Active Safety Control Module	√	√	√	√		
2023	Chevrolet	Blazer	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Chevrolet	Blazer	Frontview Camera - Windshield	√	√	√	√		0196
2023	Chevrolet	Blazer	Keyless Entry Control Module	√	√	√	√	√	0759
2023	Chevrolet	Blazer	Passenger Presence Module	√	√	√	√	√	0057
2023	Chevrolet	Blazer	Power Steering Control Module	√	√	√	√		0089 0084
2023	Chevrolet	Bolt	Engine Control Module	√	√	√	√	√	0258 0263 0771
2023	Chevrolet	Bolt	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229
2023	Chevrolet	Bolt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	Chevrolet	Bolt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	Chevrolet	Bolt	Instrument Cluster	√	√	√	√	√	0247
2023	Chevrolet	Bolt	HVAC Control Module	√	√	√	√	√	0007 0129
2023	Chevrolet	Bolt	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2023	Chevrolet	Bolt	Air Conditioning Compressor	√					
2023	Chevrolet	Bolt	Battery Energy Control Module	√			√		
2023	Chevrolet	Bolt	Hybrid/EV Powertrain Control Module 1	√	√	√	√	√	0202 0018
2023	Chevrolet	Bolt	Hybrid/EV Powertrain Control Module 2	√	√	√	√	√	0125 0262 0079 0122 0123 0127 0202
2023	Chevrolet	Bolt	Power Line Communication Module	√			√		
2023	Chevrolet	Bolt	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	Chevrolet	Bolt	Radio	√	√	√	√	√	0269 0793 0267 0226
2023	Chevrolet	Bolt	Video Processing Control Module	√	√	√	√	√	
2023	Chevrolet	Bolt	Parking Assist Control Module	√	√	√	√	√	0247
2023	Chevrolet	Bolt	Serial Data Gateway Module - Processor 1	√	√	√			
2023	Chevrolet	Bolt	Serial Data Gateway Module - Processor 2	√	√	√			
2023	Chevrolet	Bolt	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	Chevrolet	Bolt	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	Chevrolet	Bolt	Active Safety Control Module	√	√	√	√	√	
2023	Chevrolet	Bolt	Active Safety Control Module 1 - Processor A	√	√	√	√		0268 0794
2023	Chevrolet	Bolt	Active Safety Control Module 1 - Processor B	√	√	√	√		0111 0268



2023	Chevrolet	Bolt	Active Safety Control Module 1 - Processor C	√	√	√	√		0268
2023	Chevrolet	Bolt	Active Safety Control Module 2 - Processor A	√	√	√	√		0268 0794
2023	Chevrolet	Bolt	Active Safety Control Module 2 - Processor B	√	√	√	√		0111 0268
2023	Chevrolet	Bolt	Active Safety Control Module 2 - Processor C	√	√	√	√		0268
2023	Chevrolet	Bolt	Driver Monitoring System Control Module	√	√	√	√		
2023	Chevrolet	Bolt	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Chevrolet	Bolt	Frontview Camera - Windshield	√	√	√	√		0196
2023	Chevrolet	Bolt	Keyless Entry Control Module	√	√	√	√	√	
2023	Chevrolet	Bolt	Passenger Presence Module	√	√	√	√	√	0057
2023	Chevrolet	Bolt	Short Range Remote Control Transceiver	√	√	√	√		
2023	Chevrolet	Bolt	Brake Booster Control Module	√	√	√	√		
2023	Chevrolet	Bolt	Power Steering Control Module	√	√	√	√		0089 0084
2023	Chevrolet	Bolt	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2023	Chevrolet	Camaro	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 076C 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0020 0256 0085 0262
2023	Chevrolet	Camaro	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2023	Chevrolet	Camaro	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229
2023	Chevrolet	Camaro	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	Chevrolet	Camaro	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	Chevrolet	Camaro	Instrument Cluster	√	√	√	√	√	0247
2023	Chevrolet	Camaro	HVAC Control Module	√	√	√	√	√	0007 0129
2023	Chevrolet	Camaro	HVAC Controls	√	√	√	√		
2023	Chevrolet	Camaro	Serial Data Gateway Module	√	√	√			
2023	Chevrolet	Camaro	Headlamp Control Module	√	√	√	√	√	0195
2023	Chevrolet	Camaro	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2023	Chevrolet	Camaro	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	Chevrolet	Camaro	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2023	Chevrolet	Camaro	Folding Top Control Module	√	√	√	√	√	
2023	Chevrolet	Camaro	Parking Assist Control Module	√	√	√	√	√	0247
2023	Chevrolet	Camaro	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	Chevrolet	Camaro	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	Chevrolet	Camaro	Steering Column Lock Control Module	√	√	√	√		
2023	Chevrolet	Camaro	Amplifier	√	√	√	√		

2023	Chevrolet	Camaro	Radio Controls	√	√	√	√		
2023	Chevrolet	Camaro	Radio	√	√	√	√	√	0150 0226 0269 0793
2023	Chevrolet	Camaro	Vehicle Performance Data Recorder	√	√	√	√		
2023	Chevrolet	Camaro	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2023	Chevrolet	Camaro	Frontview Camera - Windshield	√	√	√	√		0196 0084
2023	Chevrolet	Camaro	Parking Brake Control Module	√	√	√	√	√	0229
2023	Chevrolet	Camaro	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2023	Chevrolet	Camaro	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2023	Chevrolet	Camaro	Keyless Entry Control Module	√	√	√	√	√	
2023	Chevrolet	Camaro	Passenger Presence Module	√	√	√	√	√	0057
2023	Chevrolet	Camaro	Suspension Control Module	√	√	√	√	√	0245
2023	Chevrolet	Cavalier	Engine Control Module	√	√	√	√	√	0140 0263
2023	Chevrolet	Cavalier	Transmission Control Module	√	√	√	√	√	0017
2023	Chevrolet	Cavalier	Electronic Brake Control Module	√	√	√	√	√	0090
2023	Chevrolet	Cavalier	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√		0111
2023	Chevrolet	Cavalier	Body Control Module	√	√	√	√	√	
2023	Chevrolet	Cavalier	Instrument Cluster	√	√	√	√	√	
2023	Chevrolet	Cavalier	Serial Data Gateway Module	√	√	√	√		
2023	Chevrolet	Cavalier	Parking Assist Control Module	√	√	√	√	√	
2023	Chevrolet	Cavalier	Power Steering Control Module	√	√	√	√		0081 0080 0089
2023	Chevrolet	Cavalier	Power Supply Transformer	√	√	√	√	√	
2023	Chevrolet	Cavalier	Radio	√	√	√	√	√	
2023	Chevrolet	Cavalier	Radio Controls	√	√	√	√	√	
2023	Chevrolet	Cavalier	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2023	Chevrolet	Cobalt	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139
2023	Chevrolet	Cobalt	Transmission Control Module	√	√	√	√	√	0017 0036
2023	Chevrolet	Cobalt	Electronic Brake Control Module	√	√	√	√	√	0090
2023	Chevrolet	Cobalt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	Chevrolet	Cobalt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	Chevrolet	Cobalt	Instrument Cluster	√	√	√	√	√	0247
2023	Chevrolet	Cobalt	Serial Data Gateway Module	√	√	√			
2023	Chevrolet	Cobalt	Front Seat Heating Control Module	√	√	√	√	√	
2023	Chevrolet	Cobalt	Telematics Communication Interface Control Module	√	√	√	√	√	
2023	Chevrolet	Cobalt	Radio	√	√	√	√	√	
2023	Chevrolet	Cobalt	Power Steering Control Module	√	√	√	√		0207
2023	Chevrolet	Cobalt	Steering Wheel Angle Sensor Module	√	√	√			0093 0090

2023	Chevrolet	Colorado	Engine Control Module	√	√	√	√	√	0263 0209 075E 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0258 0139
2023	Chevrolet	Colorado	Transmission Control Module	√	√	√	√	√	0017 0033
2023	Chevrolet	Colorado	Restraints Control Module	√	√	√	√	√	0758 0134
2023	Chevrolet	Colorado	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	Chevrolet	Colorado	Serial Data Gateway Module	√	√	√			
2023	Chevrolet	Colorado	Chassis Control Module - Auxiliary	√	√	√	√	√	
2023	Chevrolet	Colorado	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2023	Chevrolet	Colorado	Telematics Control Module	√	√	√	√		0270 0755
2023	Chevrolet	Colorado	Trailer Lamp Control Module	√	√	√	√	√	
2023	Chevrolet	Colorado	Wireless Accessory Charging Module	√	√	√	√		
2023	Chevrolet	Colorado	Video Processing Module	√	√	√	√		
2023	Chevrolet	Colorado	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	Chevrolet	Colorado	Audio Amplifier	√	√	√	√		
2023	Chevrolet	Colorado	Frontview Camera - Windshield	√	√	√	√		0196
2023	Chevrolet	Colorado	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	Chevrolet	Colorado	Radio	√	√	√	√	√	07A8
2023	Chevrolet	Colorado	Parking Assist Control Module	√	√	√	√	√	
2023	Chevrolet	Colorado	Side Obstacle Detection Control Module - Left	√	√	√			
2023	Chevrolet	Colorado	Side Obstacle Detection Control Module - Right	√	√	√			
2023	Chevrolet	Colorado	Lighting Control Module	√	√	√	√	√	
2023	Chevrolet	Colorado	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	Chevrolet	Corvette	Engine Control Module	√	√	√	√	√	0263 0209 0770 0773 0774 076C 079A 0086 076E 0217 0763 07C9 0258 076B 0115 0757 0013 0275 0761 0138
2023	Chevrolet	Corvette	Transmission Control Module	√	√	√	√	√	0017 07CA 0798 07CB
2023	Chevrolet	Corvette	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758 0229 0799
2023	Chevrolet	Corvette	Restraints Control Module	√	√	√	√	√	0758 0134
2023	Chevrolet	Corvette	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	Chevrolet	Corvette	Instrument Panel Cluster Control Module	√	√	√	√	√	
2023	Chevrolet	Corvette	Serial Data Gateway Module	√	√	√			
2023	Chevrolet	Corvette	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	Chevrolet	Corvette	Telematics Control Module	√	√	√	√		0270 0755
2023	Chevrolet	Corvette	Audio Amplifier	√	√	√	√		
2023	Chevrolet	Corvette	Heater and Air Conditioning User Interface Control -	√	√	√	√		

2023	Chevrolet	Corvette	Radio Controls	√	√	√	√		
2023	Chevrolet	Corvette	Radio	√	√	√	√	√	0269 0769 07A7 07A8
2023	Chevrolet	Corvette	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2023	Chevrolet	Corvette	Wireless Accessory Charging Module	√	√	√	√		
2023	Chevrolet	Corvette	Video Processing Module	√	√	√			
2023	Chevrolet	Corvette	Vehicle Performance Data Recorder	√	√	√	√		
2023	Chevrolet	Corvette	Folding Top Control Module - Left	√	√	√	√		
2023	Chevrolet	Corvette	Folding Top Control Module - Right	√	√	√			
2023	Chevrolet	Corvette	Folding Top Stowage Compartment Control Module -	√	√	√			
2023	Chevrolet	Corvette	Folding Top Stowage Compartment Control Module -	√	√	√	√		
2023	Chevrolet	Corvette	Gear Shift Control Module	√					
2023	Chevrolet	Corvette	Lighting Control Module	√	√	√	√	√	
2023	Chevrolet	Corvette	Parking Assist Control Module	√	√	√	√	√	
2023	Chevrolet	Corvette	Side Obstacle Detection Control Module - Left	√	√	√			
2023	Chevrolet	Corvette	Side Obstacle Detection Control Module - Right	√	√	√			
2023	Chevrolet	Corvette	Steering Column Lock Control Module	√	√	√	√		
2023	Chevrolet	Corvette	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	Chevrolet	Corvette	Electric Power Steering Control Module	√	√	√	√		0766
2023	Chevrolet	Corvette	Electronic Suspension Control Module	√	√	√	√	√	0198
2023	Chevrolet	Corvette	Front Suspension Leveling/Lifting Hydraulic Power Pack Module	√	√	√	√	√	
2023	Chevrolet	Cruze	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0115 076C 0086 0085 0154 0213 0221 0212 0214 0217 0006 0114 0258 0128
2023	Chevrolet	Cruze	Transmission Control Module	√	√	√	√	√	0017 0036
2023	Chevrolet	Cruze	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2023	Chevrolet	Cruze	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	Chevrolet	Cruze	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	Chevrolet	Cruze	Instrument Cluster	√	√	√	√	√	0247
2023	Chevrolet	Cruze	HVAC Control Module	√	√	√	√	√	0007 0129
2023	Chevrolet	Cruze	HVAC Controls	√	√	√	√		
2023	Chevrolet	Cruze	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	Chevrolet	Cruze	Radio	√	√	√	√	√	0150 0226 0269 0793
2023	Chevrolet	Cruze	Parking Assist Control Module	√	√	√	√	√	0247 0271
2023	Chevrolet	Cruze	Serial Data Gateway Module - Processor 1	√	√	√			
2023	Chevrolet	Cruze	Serial Data Gateway Module - Processor 2	√	√	√			

2023	Chevrolet	Cruze	Steering Column Lock Control Module	√	√	√	√		
2023	Chevrolet	Cruze	Frontview Camera - Windshield	√	√	√	√		0196 0084
2023	Chevrolet	Cruze	Keyless Entry Control Module	√	√	√	√	√	
2023	Chevrolet	Cruze	Power Steering Control Module	√	√	√	√		0081 0080 0089
2023	Chevrolet	Equinox	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0147 076C 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0764 0763 0258 0138 0755 0760 0761
2023	Chevrolet	Equinox	Transmission Control Module	√	√	√	√	√	0017 0036
2023	Chevrolet	Equinox	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2023	Chevrolet	Equinox	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0229 0111
2023	Chevrolet	Equinox	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	Chevrolet	Equinox	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	Chevrolet	Equinox	Instrument Cluster	√	√	√	√	√	0247
2023	Chevrolet	Equinox	HVAC Control Module	√	√	√	√	√	0007 0129
2023	Chevrolet	Equinox	HVAC Controls	√	√	√	√		
2023	Chevrolet	Equinox	Headlamp Control Module	√	√	√	√	√	0195
2023	Chevrolet	Equinox	Liftgate Control Module	√	√	√	√	√	0146 0169
2023	Chevrolet	Equinox	Seat Memory Control Module - Driver	√	√	√	√	√	
2023	Chevrolet	Equinox	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	Chevrolet	Equinox	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	Chevrolet	Equinox	Rear Drive Control Module	√	√	√	√	√	0003
2023	Chevrolet	Equinox	Video Processing Control Module	√	√	√	√	√	
2023	Chevrolet	Equinox	Amplifier	√	√	√	√		
2023	Chevrolet	Equinox	Radio Controls	√	√	√	√		
2023	Chevrolet	Equinox	Radio	√	√	√	√	√	0150 0226 0269 0793
2023	Chevrolet	Equinox	Parking Assist Control Module	√	√	√	√	√	0247 0271
2023	Chevrolet	Equinox	Steering Column Lock Control Module	√	√	√	√		
2023	Chevrolet	Equinox	Serial Data Gateway Module - Processor 1	√	√	√			
2023	Chevrolet	Equinox	Serial Data Gateway Module - Processor 2	√	√	√			
2023	Chevrolet	Equinox	Keyless Entry Control Module	√	√	√	√	√	
2023	Chevrolet	Equinox	Passenger Presence Module	√	√	√	√	√	0057
2023	Chevrolet	Equinox	Frontview Camera - Windshield	√	√	√	√		0196 0084
2023	Chevrolet	Equinox	Battery Energy Control Module	√	√	√	√		
2023	Chevrolet	Equinox	Drive Motor Control Module	√	√	√	√		
2023	Chevrolet	Equinox	Power Steering Control Module	√	√	√	√		0081 0080 0089

2023	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0263 0156 0209 0757 0076 0020 0132 0067 0086 0154 0212 0214 0217 0258 076C 0115 0088 0086 0131 0138
2023	Chevrolet	Express	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2023	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0225 0111 0277 0090
2023	Chevrolet	Express	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2023	Chevrolet	Express	Body Control Module	√	√	√	√	√	0263 0261
2023	Chevrolet	Express	Theft Deterrent Module	√	√	√	√		
2023	Chevrolet	Express	Instrument Cluster	√	√	√	√	√	
2023	Chevrolet	Express	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2023	Chevrolet	Express	Parking Assist Control Module	√	√	√	√	√	0247
2023	Chevrolet	Express	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	Chevrolet	Express	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	Chevrolet	Express	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2023	Chevrolet	Express	Frontview Camera - Windshield	√	√	√	√		0196
2023	Chevrolet	Express	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2023	Chevrolet	Express	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2023	Chevrolet	Malibu	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0147 076C 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0764 0763 0258 0138
2023	Chevrolet	Malibu	Transmission Control Module	√	√	√	√	√	0017 0036 0016 075C
2023	Chevrolet	Malibu	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768 0229 078F 0790
2023	Chevrolet	Malibu	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2023	Chevrolet	Malibu	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	Chevrolet	Malibu	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	Chevrolet	Malibu	Instrument Cluster	√	√	√	√	√	0247
2023	Chevrolet	Malibu	HVAC Control Module	√	√	√	√	√	0007 0129
2023	Chevrolet	Malibu	HVAC Controls	√	√	√	√		
2023	Chevrolet	Malibu	Seat Memory Control Module - Driver	√	√	√	√	√	
2023	Chevrolet	Malibu	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	Chevrolet	Malibu	Amplifier	√	√	√	√		

2023	Chevrolet	Malibu	Radio Controls	√	√	√	√		
2023	Chevrolet	Malibu	Radio	√	√	√	√	√	0150 0226 0269 0793
2023	Chevrolet	Malibu	Parking Assist Control Module	√	√	√	√	√	0247 0271
2023	Chevrolet	Malibu	Serial Data Gateway Module - Processor 1	√	√	√			
2023	Chevrolet	Malibu	Serial Data Gateway Module - Processor 2	√	√	√			
2023	Chevrolet	Malibu	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	Chevrolet	Malibu	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	Chevrolet	Malibu	Steering Column Lock Control Module	√	√	√	√		
2023	Chevrolet	Malibu	Active Safety Control Module	√	√	√	√		
2023	Chevrolet	Malibu	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Chevrolet	Malibu	Frontview Camera - Windshield	√	√	√	√		0196
2023	Chevrolet	Malibu	Keyless Entry Control Module	√	√	√	√	√	
2023	Chevrolet	Malibu	Passenger Presence Module	√	√	√	√	√	0057
2023	Chevrolet	Malibu	Power Steering Control Module	√	√	√	√		0081 0080 0089
2023	Chevrolet	Max	Engine Control Module	√	√	√	√	√	0069 0087 079C
2023	Chevrolet	Max	Electronic Brake Control Module	√	√	√	√	√	
2023	Chevrolet	Max	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2023	Chevrolet	Move	Engine Control Module	√	√	√	√	√	0069 0087 079C
2023	Chevrolet	Move	Electronic Brake Control Module	√	√	√	√	√	
2023	Chevrolet	Move	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2023	Chevrolet	Onix	Engine Control Module	√	√	√	√	√	0263 0156 0209 0774 0212 0217 0258 0086 0775 0139 079E 0085 0154 0144 0115 0140 0147 07CC 0156 0209 0132 0067 0263 0086 0217 0115 0130
2023	Chevrolet	Onix	Transmission Control Module	√	√	√	√	√	0017
2023	Chevrolet	Onix	Electronic Brake Control Module	√	√	√	√	√	0090
2023	Chevrolet	Onix	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0111 0172 0134 0111
2023	Chevrolet	Onix	Body Control Module	√	√	√	√	√	0269 0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0222 0150
2023	Chevrolet	Onix	Instrument Cluster	√	√	√	√	√	0247
2023	Chevrolet	Onix	HVAC Control Module	√	√	√	√	√	0007
2023	Chevrolet	Onix	Serial Data Gateway Module	√	√	√			
2023	Chevrolet	Onix	Parking Assist Control Module	√	√	√	√	√	
2023	Chevrolet	Onix	Electric Power Steering Control Module	√	√	√	√		079F 0269
2023	Chevrolet	Onix	Telematics Communication Interface Control Module	√	√	√	√		
2023	Chevrolet	Onix	Radio	√	√	√	√	√	
2023	Chevrolet	Onix	Firewall Control Module	√	√	√	√	√	0269

2023	Chevrolet	Onix	Passenger Presence Module	√	√	√	√		0057
2023	Chevrolet	Onix	Power Steering Control Module	√	√	√	√		0207
2023	Chevrolet	Onix	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2023	Chevrolet	Optra	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2023	Chevrolet	Optra	Transmission Control Module	√	√	√	√	√	0017 0036
2023	Chevrolet	Optra	Electronic Brake Control Module	√	√	√	√	√	
2023	Chevrolet	Optra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2023	Chevrolet	Optra	Body Control Module	√	√	√	√	√	
2023	Chevrolet	Optra	Instrument Cluster	√	√	√	√	√	
2023	Chevrolet	Optra	Power Steering Control Module	√	√	√	√		0089 0081 0080
2023	Chevrolet	Prisma	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0115
2023	Chevrolet	Prisma	Electronic Brake Control Module	√	√	√	√	√	0090
2023	Chevrolet	Prisma	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	Chevrolet	Prisma	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	Chevrolet	Prisma	Instrument Cluster	√	√	√	√	√	0247
2023	Chevrolet	Prisma	Serial Data Gateway Module	√	√	√			
2023	Chevrolet	Prisma	Passenger Presence Module	√	√	√	√		0057
2023	Chevrolet	Prisma	Power Steering Control Module	√	√	√	√		0207
2023	Chevrolet	Prisma	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2023	Chevrolet	S10	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0222 0066 0147 0060 0044 0045 0086 0217 0109 0068 0084 0070 0071 0074 0075 0043 0173 0179 0181 0183 0185 0232
2023	Chevrolet	S10	Transmission Control Module	√	√	√	√	√	0016
2023	Chevrolet	S10	Electronic Brake Control Module	√	√	√	√	√	0090 0112 0111
2023	Chevrolet	S10	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	Chevrolet	S10	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	Chevrolet	S10	Instrument Cluster	√	√	√	√	√	0247
2023	Chevrolet	S10	HVAC Control Module	√	√	√	√	√	0007 0129
2023	Chevrolet	S10	HVAC Controls	√	√	√	√		
2023	Chevrolet	S10	Serial Data Gateway Module	√	√	√			



2023	Chevrolet	S10	Radio	√	√	√	√	√	0150 0226 0269 0793
2023	Chevrolet	S10	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	Chevrolet	S10	Power Steering Control Module	√	√	√	√		0093 0090
2023	Chevrolet	S10	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2023	Chevrolet	S10	Parking Assist Control Module	√	√	√	√	√	0247 0271
2023	Chevrolet	S10	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	Chevrolet	S10	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	Chevrolet	S10	Frontview Camera - Windshield	√	√	√	√	√	0196
2023	Chevrolet	S10	Transfer Case Control Module	√	√	√	√	√	0037
2023	Chevrolet	S10	Trailer Lighting Control Module	√	√	√	√	√	0247
2023	Chevrolet	Sail	Engine Control Module	√	√	√	√	√	0156 0020 0140
2023	Chevrolet	Sail	Transmission Control Module	√	√	√	√	√	0016
2023	Chevrolet	Sail	Electronic Brake Control Module	√	√	√	√	√	0111 0090
2023	Chevrolet	Sail	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261 0111
2023	Chevrolet	Sail	Body Control Module	√	√	√	√	√	0263
2023	Chevrolet	Sail	HVAC Control Module	√	√	√	√	√	0007 0129
2023	Chevrolet	Sail	Radio/HVAC Controls	√	√	√	√	√	0150
2023	Chevrolet	Sail	Power Steering Control Module	√	√	√	√		0081 0089
2023	Chevrolet	Sail	Radio	√	√	√	√	√	
2023	Chevrolet	Sail	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2023	Chevrolet	Sail	Telematics Communication Interface Control Module	√	√	√		√	
2023	Chevrolet	Silverado	Engine Control Module	√	√	√	√	√	0263 0209 07A9 076C 0115 076D 0058 079A 0045 0044 0086 0088 0097 0219 0221 0792 0757 07AA 0217 0073 0072 0070 0071 0117 0118 0119 0258 077E 0178 0180 0182 0184 0186 0188 0190 0192 0246 0067 0214 0006 0131 0139 0263 0209 075E 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0258 0139 075F 0778 0779 0085 0097 0219 0221 0757 077A 077B 077C 077D 0764 0763 0117 0119 077E 077F
2023	Chevrolet	Silverado	Transmission Control Module	√	√	√	√	√	0016 0033 0017 0017 0033 0016
2023	Chevrolet	Silverado	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F

2023	Chevrolet	Silverado	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0771 0277 078F 0790
2023	Chevrolet	Silverado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	Chevrolet	Silverado	Restraints Control Module	√	√	√	√	√	0758 0134
2023	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0159 0263 0226 0754 0007 0129 0267
2023	Chevrolet	Silverado	Instrument Panel Cluster Control Module	√	√	√	√	√	
2023	Chevrolet	Silverado	Instrument Cluster	√	√	√	√	√	0247
2023	Chevrolet	Silverado	HVAC Control Module	√	√	√	√	√	0007 0129
2023	Chevrolet	Silverado	Serial Data Gateway Module	√	√	√			
2023	Chevrolet	Silverado	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	Chevrolet	Silverado	Rear Gate Module	√	√	√	√		
2023	Chevrolet	Silverado	Telematics Control Module	√	√	√	√		0270 0755
2023	Chevrolet	Silverado	Audio Amplifier	√	√	√	√		
2023	Chevrolet	Silverado	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	Chevrolet	Silverado	Radio	√	√	√	√	√	0226 0150 0269 0267 0269 0769 07A7 07A8
2023	Chevrolet	Silverado	Transfer Case Control Module	√	√	√	√	√	0037 0776 07A6 0099 0037 0100 0776
2023	Chevrolet	Silverado	Running Board Control Module	√	√	√	√	√	
2023	Chevrolet	Silverado	Video Processing Module	√	√	√	√		
2023	Chevrolet	Silverado	Wireless Accessory Charging Module	√	√	√	√		
2023	Chevrolet	Silverado	Trailer Lamp Control Module	√	√	√	√	√	
2023	Chevrolet	Silverado	Automated Driving Mapping Module	√	√	√	√	√	
2023	Chevrolet	Silverado	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A 0084
2023	Chevrolet	Silverado	Video Display - Right Front Seat Back	√	√	√			
2023	Chevrolet	Silverado	Parking Assist Control Module	√	√	√	√	√	0247
2023	Chevrolet	Silverado	Steering Column Lock Control Module	√	√	√	√		
2023	Chevrolet	Silverado	Lighting Control Module	√	√	√	√	√	
2023	Chevrolet	Silverado	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	Chevrolet	Silverado	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	Chevrolet	Silverado	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2023	Chevrolet	Silverado	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2023	Chevrolet	Silverado	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	Chevrolet	Silverado	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2023	Chevrolet	Silverado	Driver Monitoring System Control Module	√	√	√			
2023	Chevrolet	Silverado	Image Processing Module	√	√	√	√		

2023	Chevrolet	Silverado	Image Processing Module 1 - Processor 1	√	√	√	√		
2023	Chevrolet	Silverado	Image Processing Module 1 - Processor 2	√	√	√			0758
2023	Chevrolet	Silverado	Short Range Radar Sensor - Left Front	√	√	√			0772
2023	Chevrolet	Silverado	Short Range Radar Sensor - Left Rear	√	√	√			0772
2023	Chevrolet	Silverado	Short Range Radar Sensor - Right Front	√	√	√			0772
2023	Chevrolet	Silverado	Short Range Radar Sensor - Right Rear	√	√	√			0772
2023	Chevrolet	Silverado	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Chevrolet	Silverado	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2023	Chevrolet	Silverado	Power Steering Control Module	√	√	√	√		0089
2023	Chevrolet	Silverado	Electronic Suspension Control Module	√	√	√	√	√	0198
2023	Chevrolet	Silverado	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2023	Chevrolet	Silverado	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 07AB 0009 07AC
2023	Chevrolet	Silverado	Seat Memory Control Module - Driver	√	√	√	√	√	
2023	Chevrolet	Silverado	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	Chevrolet	Silverado	Serial Data Gateway Module - Processor 1	√	√	√			
2023	Chevrolet	Silverado	Serial Data Gateway Module - Processor 2	√	√	√			
2023	Chevrolet	Silverado	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2023	Chevrolet	Silverado	Video Processing Control Module	√	√	√	√	√	
2023	Chevrolet	Silverado	Assist Step Control Module	√	√	√	√	√	
2023	Chevrolet	Silverado	Trailer Lighting Control Module	√	√	√	√	√	
2023	Chevrolet	Silverado	Passenger Presence Module	√	√	√	√	√	0057
2023	Chevrolet	Silverado	Keyless Entry Control Module	√	√	√	√	√	
2023	Chevrolet	Silverado	Amplifier	√	√	√	√		
2023	Chevrolet	Silverado	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2023	Chevrolet	Spark	Engine Control Module	√	√	√	√	√	0069 0087
2023	Chevrolet	Spark	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2023	Chevrolet	Spark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	Chevrolet	Spark	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2023	Chevrolet	Spark	Instrument Cluster	√	√	√	√	√	0247
2023	Chevrolet	Spark	HVAC Control Module	√	√	√	√	√	0007 0129
2023	Chevrolet	Spark	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	Chevrolet	Spark	Radio	√	√	√	√	√	
2023	Chevrolet	Spark	Power Steering Control Module	√	√	√	√		0089
2023	Chevrolet	Spin	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0115
2023	Chevrolet	Spin	Transmission Control Module	√	√	√	√	√	0017 0036
2023	Chevrolet	Spin	Electronic Brake Control Module	√	√	√	√	√	0090
2023	Chevrolet	Spin	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2023	Chevrolet	Spin	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	Chevrolet	Spin	Instrument Cluster	√	√	√	√	√	0247
2023	Chevrolet	Spin	Serial Data Gateway Module	√	√	√			
2023	Chevrolet	Spin	Telematics Communication Interface Control Module	√	√	√		√	
2023	Chevrolet	Spin	Radio	√	√	√	√	√	
2023	Chevrolet	Spin	Power Steering Control Module	√	√	√	√		0207
2023	Chevrolet	Spin	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2023	Chevrolet	Spin	Parking Assist Control Module	√	√	√	√	√	0247 0271
2023	Chevrolet	Spin	Passenger Presence Module	√	√	√	√	√	0057
2023	Chevrolet	Suburban	Engine Control Module	√	√	√	√	√	0263 0209 075E 075F 0778 076C 0115 076D 0779 0086 0085 0097 0221 0757 077A 077B 077C 077D 0764 0763 0117 0119 0258 07CE 077E 077F 0780 0781 0782 0783 0784 076E 0212 0217 0775 0139
2023	Chevrolet	Suburban	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2023	Chevrolet	Suburban	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2023	Chevrolet	Suburban	Restraints Control Module	√	√	√	√	√	0758 0134
2023	Chevrolet	Suburban	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	Chevrolet	Suburban	Instrument Panel Cluster Control Module	√	√	√	√	√	
2023	Chevrolet	Suburban	Serial Data Gateway Module	√	√	√			
2023	Chevrolet	Suburban	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	Chevrolet	Suburban	Rear Gate Module	√	√	√	√		
2023	Chevrolet	Suburban	Telematics Control Module	√	√	√	√		0270 0755
2023	Chevrolet	Suburban	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2023	Chevrolet	Suburban	Audio Amplifier	√	√	√	√		
2023	Chevrolet	Suburban	Heater and Air Conditioning Auxiliary Control	√	√	√			
2023	Chevrolet	Suburban	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	Chevrolet	Suburban	Radio	√	√	√	√	√	0269 0769 07A7 07A8
2023	Chevrolet	Suburban	Video Display - Right Front Seat Back	√	√	√			
2023	Chevrolet	Suburban	Frontview Camera - Windshield	√	√	√	√		0196
2023	Chevrolet	Suburban	Chassis Control Module - Auxiliary	√	√	√	√	√	
2023	Chevrolet	Suburban	Wireless Accessory Charging Module	√	√	√	√		
2023	Chevrolet	Suburban	Video Processing Module	√	√	√	√		

2023	Chevrolet	Suburban	Running Board Control Module	√	√	√	√	√	
2023	Chevrolet	Suburban	Trailer Lamp Control Module	√	√	√	√	√	
2023	Chevrolet	Suburban	Differential Control Module	√	√	√	√	√	07B7 07B8
2023	Chevrolet	Suburban	Parking Assist Control Module	√	√	√	√	√	
2023	Chevrolet	Suburban	Gear Shift Control Module	√					
2023	Chevrolet	Suburban	Side Obstacle Detection Control Module - Left	√	√	√			
2023	Chevrolet	Suburban	Side Obstacle Detection Control Module - Right	√	√	√			
2023	Chevrolet	Suburban	Lighting Control Module	√	√	√	√	√	
2023	Chevrolet	Suburban	Steering Column Lock Control Module	√	√	√	√		
2023	Chevrolet	Suburban	Image Processing Module	√	√	√	√		
2023	Chevrolet	Suburban	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Chevrolet	Suburban	Short Range Radar Sensor - Left Front	√	√	√			0772
2023	Chevrolet	Suburban	Short Range Radar Sensor - Left Rear	√	√	√			0772
2023	Chevrolet	Suburban	Short Range Radar Sensor - Right Front	√	√	√			0772
2023	Chevrolet	Suburban	Short Range Radar Sensor - Right Rear	√	√	√			0772
2023	Chevrolet	Suburban	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	Chevrolet	Suburban	UHF Short Range Low Energy Remote Control Access Transceiver	√	√	√			
2023	Chevrolet	Suburban	Power Steering Control Module	√	√	√	√		0089
2023	Chevrolet	Suburban	Electronic Suspension Control Module	√	√	√	√	√	0198
2023	Chevrolet	Suburban	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2023	Chevrolet	Tahoe	Engine Control Module	√	√	√	√	√	0263 0209 075E 075F 0778 076C 0115 076D 0779 0086 0085 0097 0221 0757 077A 077B 077C 077D 0764 0763 0117 0119 0258 07CE 077E 077F 0780 0781 0782 0783 0784 076E 0212 0217 0775 0139
2023	Chevrolet	Tahoe	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2023	Chevrolet	Tahoe	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2023	Chevrolet	Tahoe	Restraints Control Module	√	√	√	√	√	0758 0134
2023	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	Chevrolet	Tahoe	Instrument Panel Cluster Control Module	√	√	√	√	√	
2023	Chevrolet	Tahoe	Serial Data Gateway Module	√	√	√			
2023	Chevrolet	Tahoe	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	Chevrolet	Tahoe	Rear Gate Module	√	√	√	√		

2023	Chevrolet	Tahoe	Telematics Control Module	√	√	√	√		0270 0755
2023	Chevrolet	Tahoe	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2023	Chevrolet	Tahoe	Audio Amplifier	√	√	√	√		
2023	Chevrolet	Tahoe	Heater and Air Conditioning Auxiliary Control	√	√	√			
2023	Chevrolet	Tahoe	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	Chevrolet	Tahoe	Radio	√	√	√	√	√	0269 0769 07A7 07A8
2023	Chevrolet	Tahoe	Video Display - Right Front Seat Back	√	√	√			
2023	Chevrolet	Tahoe	Frontview Camera - Windshield	√	√	√	√		0196
2023	Chevrolet	Tahoe	Chassis Control Module - Auxiliary	√	√	√	√	√	
2023	Chevrolet	Tahoe	Wireless Accessory Charging Module	√	√	√	√		
2023	Chevrolet	Tahoe	Video Processing Module	√	√	√	√		
2023	Chevrolet	Tahoe	Running Board Control Module	√	√	√	√	√	
2023	Chevrolet	Tahoe	Trailer Lamp Control Module	√	√	√	√	√	
2023	Chevrolet	Tahoe	Differential Control Module	√	√	√	√	√	07B7 07B8
2023	Chevrolet	Tahoe	Parking Assist Control Module	√	√	√	√	√	
2023	Chevrolet	Tahoe	Gear Shift Control Module	√					
2023	Chevrolet	Tahoe	Side Obstacle Detection Control Module - Left	√	√	√			
2023	Chevrolet	Tahoe	Side Obstacle Detection Control Module - Right	√	√	√			
2023	Chevrolet	Tahoe	Lighting Control Module	√	√	√	√	√	
2023	Chevrolet	Tahoe	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Chevrolet	Tahoe	Image Processing Module	√	√	√	√		
2023	Chevrolet	Tahoe	Short Range Radar Sensor - Left Front	√	√	√			0772
2023	Chevrolet	Tahoe	Short Range Radar Sensor - Left Rear	√	√	√			0772
2023	Chevrolet	Tahoe	Short Range Radar Sensor - Right Front	√	√	√			0772
2023	Chevrolet	Tahoe	Short Range Radar Sensor - Right Rear	√	√	√			0772
2023	Chevrolet	Tahoe	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	Chevrolet	Tahoe	UHF Short Range Low Energy Remote Control Access Transceiver	√	√	√			
2023	Chevrolet	Tahoe	Steering Column Lock Control Module	√	√	√	√		
2023	Chevrolet	Tahoe	Power Steering Control Module	√	√	√	√		0089
2023	Chevrolet	Tahoe	Electronic Suspension Control Module	√	√	√	√	√	0198
2023	Chevrolet	Tahoe	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2023	Chevrolet	Tracker	Engine Control Module	√	√	√	√	√	0263 0156 0209 0774 0212 0217 0258 0086 0775 0139 079E 0085 0154 0144 0115 0140 0117 0786
2023	Chevrolet	Tracker	Transmission Control Module	√	√	√	√	√	0017
2023	Chevrolet	Tracker	Electronic Brake Control Module	√	√	√	√	√	0269
2023	Chevrolet	Tracker	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	

2023	Chevrolet	Tracker	Body Control Module	√	√	√	√	√	0269
2023	Chevrolet	Tracker	Instrument Cluster	√	√	√	√	√	
2023	Chevrolet	Tracker	HVAC Control Module	√	√	√	√	√	0007
2023	Chevrolet	Tracker	Parking Assist Control Module	√	√	√	√	√	
2023	Chevrolet	Tracker	Electric Power Steering Control Module	√	√	√	√		079F 0269
2023	Chevrolet	Tracker	Radio	√	√	√	√	√	
2023	Chevrolet	Tracker	Frontview Camera - Windshield	√	√	√	√		0269
2023	Chevrolet	Tracker	Telematics Communication Interface Control Module	√	√	√	√		
2023	Chevrolet	Tracker	Firewall Control Module	√	√	√	√	√	0269
2023	Chevrolet	Tracker	Steering Column Lock Control Module	√	√	√	√		0269
2023	Chevrolet	Trailblazer	Engine Control Module	√	√	√	√	√	0263 0209 075E 075F 0760 0115 0761 0086 0213 0757 0212 0217 0762 0006 0144 0258 0139 0763 0764 0765 0085 0132 0214 0263 0209 0066 0086 0217 0258 0006 0139 0210 0224 0130 0222 0147 0060 0044 0045 0109 0068 0084 0070 0071 0074 0075 0043 0173
2023	Chevrolet	Trailblazer	Transmission Control Module	√	√	√	√	√	0016 075C 0017
2023	Chevrolet	Trailblazer	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2023	Chevrolet	Trailblazer	Electronic Brake Control Module	√	√	√	√	√	0090 0112 0111
2023	Chevrolet	Trailblazer	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	Chevrolet	Trailblazer	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	Chevrolet	Trailblazer	Instrument Cluster	√	√	√	√	√	0247
2023	Chevrolet	Trailblazer	HVAC Control Module	√	√	√	√	√	0007 0129
2023	Chevrolet	Trailblazer	HVAC Controls	√	√	√	√		
2023	Chevrolet	Trailblazer	Serial Data Gateway Module	√	√	√			
2023	Chevrolet	Trailblazer	Radio	√	√	√	√	√	0150 0226 0269 0793
2023	Chevrolet	Trailblazer	Power Steering Control Module	√	√	√	√		0089 0084 0093 0090
2023	Chevrolet	Trailblazer	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2023	Chevrolet	Trailblazer	Parking Assist Control Module	√	√	√	√	√	0247 0247 0271
2023	Chevrolet	Trailblazer	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	Chevrolet	Trailblazer	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	Chevrolet	Trailblazer	Frontview Camera - Windshield	√	√	√	√	√	0196
2023	Chevrolet	Trailblazer	Transfer Case Control Module	√	√	√	√	√	0037

2023	Chevrolet	Trailblazer	Trailer Lighting Control Module	√	√	√	√	√	0247
2023	Chevrolet	Trailblazer	Headlamp Control Module	√	√	√	√	√	0195
2023	Chevrolet	Trailblazer	Liftgate Control Module	√	√	√	√	√	0146 0169
2023	Chevrolet	Trailblazer	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	Chevrolet	Trailblazer	Amplifier	√	√	√	√		
2023	Chevrolet	Trailblazer	Serial Data Gateway Module - Processor 1	√	√	√			
2023	Chevrolet	Trailblazer	Serial Data Gateway Module - Processor 2	√	√	√			
2023	Chevrolet	Trailblazer	Head-Up Display Module	√	√	√	√	√	
2023	Chevrolet	Trailblazer	Rear Drive Control Module	√	√	√	√	√	0003
2023	Chevrolet	Trailblazer	Keyless Entry Control Module	√	√	√	√	√	
2023	Chevrolet	Traverse	Engine Control Module	√	√	√	√	√	0263 0209 0115 0756 0086 0085 0757 0217 0258 0139 0006
2023	Chevrolet	Traverse	Transmission Control Module	√	√	√	√	√	0017
2023	Chevrolet	Traverse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2023	Chevrolet	Traverse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	Chevrolet	Traverse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	Chevrolet	Traverse	Instrument Cluster	√	√	√	√	√	0247
2023	Chevrolet	Traverse	HVAC Control Module	√	√	√	√	√	0007 0129
2023	Chevrolet	Traverse	HVAC Controls	√	√	√	√		
2023	Chevrolet	Traverse	Liftgate Control Module	√	√	√	√	√	0146 0169
2023	Chevrolet	Traverse	Seat Memory Control Module - Driver	√	√	√	√	√	
2023	Chevrolet	Traverse	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	Chevrolet	Traverse	Amplifier	√	√	√	√		
2023	Chevrolet	Traverse	Radio Controls	√	√	√	√		
2023	Chevrolet	Traverse	Radio	√	√	√	√	√	0150 0226 0269 0793
2023	Chevrolet	Traverse	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	Chevrolet	Traverse	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	Chevrolet	Traverse	Steering Column Lock Control Module	√	√	√	√		
2023	Chevrolet	Traverse	Serial Data Gateway Module - Processor 1	√	√	√			
2023	Chevrolet	Traverse	Serial Data Gateway Module - Processor 2	√	√	√			
2023	Chevrolet	Traverse	Parking Assist Control Module	√	√	√	√	√	0247 0271
2023	Chevrolet	Traverse	Active Safety Control Module	√	√	√	√		
2023	Chevrolet	Traverse	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	Chevrolet	Traverse	Frontview Camera - Windshield	√	√	√	√		0196
2023	Chevrolet	Traverse	Keyless Entry Control Module	√	√	√	√	√	0759
2023	Chevrolet	Traverse	Passenger Presence Module	√	√	√	√	√	0057
2023	Chevrolet	Traverse	Rear Drive Control Module	√	√	√	√	√	0003



2023	Chevrolet	Traverse	Video Processing Control Module	√	√	√	√	√	
2023	Chevrolet	Traverse	Power Steering Control Module	√	√	√	√	√	0089 0084
2023	Chevrolet	Work	Engine Control Module	√	√	√	√	√	0069 0087 079C
2023	Chevrolet	Work	Electronic Brake Control Module	√	√	√	√	√	
2023	Chevrolet	Work	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2023	Chevrolet	Montana	Radio	√	√	√	√	√	
2023	Chevrolet	Montana	Telematics Communication Interface Control Module	√	√	√	√	√	
2023	Chevrolet	Lacetti	Engine Control Module	√	√	√	√	√	SP0209,SP0156,SP0147,SP0217
2023	Chevrolet	Lacetti	Transmission Control Module	√	√	√	√	√	SP0017,SP0036
2023	Chevrolet	Lacetti	Electronic Brake Control Module	√	√	√	√	√	
2023	Chevrolet	Lacetti	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	SP0172,SP0134
2023	Chevrolet	Lacetti	Variable Power Steering Control Module				√	√	
2023	GMC	Acadia	Engine Control Module	√	√	√	√	√	0209 075E 0760 076C 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0138 0756
2023	GMC	Acadia	Transmission Control Module	√	√	√	√	√	0017
2023	GMC	Acadia	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2023	GMC	Acadia	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2023	GMC	Acadia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	GMC	Acadia	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	GMC	Acadia	Instrument Cluster	√	√	√	√	√	0247
2023	GMC	Acadia	HVAC Control Module	√	√	√	√	√	0007 0129
2023	GMC	Acadia	HVAC Controls	√	√	√	√	√	
2023	GMC	Acadia	Liftgate Control Module	√	√	√	√	√	0146 0169
2023	GMC	Acadia	Seat Memory Control Module - Driver	√	√	√	√	√	
2023	GMC	Acadia	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	GMC	Acadia	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	GMC	Acadia	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	GMC	Acadia	Serial Data Gateway Module - Processor 1	√	√	√			
2023	GMC	Acadia	Serial Data Gateway Module - Processor 2	√	√	√			
2023	GMC	Acadia	Amplifier	√	√	√	√		
2023	GMC	Acadia	Radio	√	√	√	√	√	0150 0226 0269 0793
2023	GMC	Acadia	Parking Assist Control Module	√	√	√	√	√	0247
2023	GMC	Acadia	Video Processing Control Module	√	√	√	√	√	
2023	GMC	Acadia	Rear Drive Control Module	√	√	√	√	√	0003

2023	GMC	Acadia	Active Safety Control Module	√	√	√	√		
2023	GMC	Acadia	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	GMC	Acadia	Frontview Camera - Windshield	√	√	√	√		0196
2023	GMC	Acadia	Keyless Entry Control Module	√	√	√	√	√	0759
2023	GMC	Acadia	Passenger Presence Module	√	√	√	√	√	0057
2023	GMC	Acadia	Power Steering Control Module	√	√	√	√		0089 0084
2023	GMC	Acadia	Suspension Control Module	√	√	√	√	√	
2023	GMC	Acadia	Steering Column Lock Control Module	√	√	√	√		
2023	GMC	Canyon	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2023	GMC	Canyon	Restraints Control Module	√	√	√	√	√	0758 0134
2023	GMC	Canyon	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	GMC	Canyon	Serial Data Gateway Module	√	√	√			
2023	GMC	Canyon	Telematics Control Module	√	√	√	√		0270 0755
2023	GMC	Canyon	Trailer Lamp Control Module	√	√	√	√	√	
2023	GMC	Canyon	Video Processing Module	√	√	√	√		
2023	GMC	Canyon	Wireless Accessory Charging Module	√	√	√	√		
2023	GMC	Canyon	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	GMC	Canyon	Side Obstacle Detection Control Module - Left	√	√	√			
2023	GMC	Canyon	Side Obstacle Detection Control Module - Right	√	√	√			
2023	GMC	Canyon	Parking Assist Control Module	√	√	√	√	√	
2023	GMC	Canyon	Lighting Control Module	√	√	√	√	√	
2023	GMC	Canyon	Audio Amplifier	√	√	√	√		
2023	GMC	Canyon	Frontview Camera - Windshield	√	√	√	√		0196
2023	GMC	Canyon	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	GMC	Canyon	Radio	√	√	√	√	√	07A8
2023	GMC	Canyon	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	GMC	Canyon	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2023	GMC	Canyon	Chassis Control Module - Auxiliary	√	√	√	√	√	
2023	GMC	Hummer	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2023	GMC	Hummer	Restraints Control Module	√	√	√	√	√	0758 0134
2023	GMC	Hummer	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	GMC	Hummer	Instrument Panel Cluster Control Module	√	√	√	√	√	
2023	GMC	Hummer	Serial Data Gateway Module	√	√	√			
2023	GMC	Hummer	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	GMC	Hummer	Powertrain Compartment Cover Module	√	√	√	√	√	07A0 07A1 07A2 07A3 07A4 07A5

2023	GMC	Hummer	Telematics Control Module	√	√	√	√		0270 0755
2023	GMC	Hummer	Chassis Control Module - Auxiliary	√	√	√	√	√	
2023	GMC	Hummer	Trailer Lamp Control Module	√	√	√	√	√	
2023	GMC	Hummer	Video Processing Module	√	√	√	√		
2023	GMC	Hummer	Wireless Accessory Charging Module	√	√	√	√		
2023	GMC	Hummer	Heater and Air Conditioning Auxiliary Control	√	√	√			
2023	GMC	Hummer	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	GMC	Hummer	Radio	√	√	√	√	√	0269 0769
2023	GMC	Hummer	Rear Gate Module	√	√	√	√	√	0146 0753
2023	GMC	Hummer	Frontview Camera - Windshield	√	√	√	√		0196
2023	GMC	Hummer	Drive Motor Control Module 3	√	√	√	√		07B9
2023	GMC	Hummer	Drive Motor Control Module 2	√	√	√	√	√	07B9
2023	GMC	Hummer	Drive Motor Control Module	√	√	√	√	√	07B9 0258
2023	GMC	Hummer	Parking Assist Control Module	√	√	√	√	√	
2023	GMC	Hummer	Lighting Control Module	√	√	√	√	√	
2023	GMC	Hummer	Gear Shift Control Module	√					
2023	GMC	Hummer	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	GMC	Hummer	Driver Monitoring System Control Module	√	√	√			
2023	GMC	Hummer	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	GMC	Hummer	Image Processing Module 1 - Processor 1	√	√	√	√		
2023	GMC	Hummer	Image Processing Module 1 - Processor 2	√	√	√			0758
2023	GMC	Hummer	Short Range Radar Sensor - Left Front	√	√	√			0772
2023	GMC	Hummer	Short Range Radar Sensor - Right Front	√	√	√			0772
2023	GMC	Hummer	Short Range Radar Sensor - Left Rear	√	√	√			0772
2023	GMC	Hummer	Short Range Radar Sensor - Right Rear	√	√	√			0772
2023	GMC	Hummer	Battery Energy Control Module	√	√	√	√	√	07BA 0115 07BB 07BC 07BD 07BE 0123 07BF 07C0 07C1 07C2 07C3 07C4 07C5 07C6 07C7
2023	GMC	Hummer	Battery Energy Control Module 2	√	√	√			
2023	GMC	Hummer	Audio Amplifier	√	√	√	√		
2023	GMC	Hummer	Automated Driving Mapping Module	√	√	√	√	√	
2023	GMC	Hummer	Near Field Communication Module	√	√	√	√		
2023	GMC	Hummer	Rear Wheel Steering Control Module	√	√	√	√		
2023	GMC	Hummer	Power Steering Control Module	√	√	√	√		0089
2023	GMC	Hummer	Electronic Suspension Control Module	√	√	√	√	√	0198
2023	GMC	Hummer	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2023	GMC	Hummer	Power Steering Control Module 2	√	√	√	√		

2023	GMC	Savana	Engine Control Module	√	√	√	√	√	0263 0156 0209 0757 0076 0020 0132 0067 0086 0154 0212 0214 0217 0258 076C 0115 0088 0086 0131 0138
2023	GMC	Savana	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2023	GMC	Savana	Electronic Brake Control Module	√	√	√	√	√	0225 0111 0277 0090
2023	GMC	Savana	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2023	GMC	Savana	Body Control Module	√	√	√	√	√	0263 0261
2023	GMC	Savana	Theft Deterrent Module	√	√	√	√		
2023	GMC	Savana	Instrument Cluster	√	√	√	√	√	
2023	GMC	Savana	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2023	GMC	Savana	Parking Assist Control Module	√	√	√	√	√	0247
2023	GMC	Savana	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	GMC	Savana	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	GMC	Savana	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2023	GMC	Savana	Frontview Camera - Windshield	√	√	√	√		0196
2023	GMC	Savana	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2023	GMC	Savana	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2023	GMC	Sierra	Engine Control Module	√	√	√	√	√	0263 0209 075E 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0258 0139 075F 0778 0779 0085 0097 0219 0221 0757 077A 077B 077C 077D 0764 0763 0117 0119 077E 077F 0780 0781 0782 0783 0784 0775 0263 0209 07A9 076C 0115 076D 0058 079A 0045 0044 0086 0088 0097 0219 0221 0792 0757 07AA 0217 0073 0072 0070 0071 0117 0118 0119 0258 077E 0178 0180 0182 0184 0186 0188 0190 0192
2023	GMC	Sierra	Transmission Control Module	√	√	√	√	√	0017 0033 0016 0016 0033 0017
2023	GMC	Sierra	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F

2023	GMC	Sierra	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0771 0277 078F 0790
2023	GMC	Sierra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	GMC	Sierra	Restraints Control Module	√	√	√	√	√	0758 0134
2023	GMC	Sierra	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267 0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	GMC	Sierra	Instrument Panel Cluster Control Module	√	√	√	√	√	
2023	GMC	Sierra	Instrument Cluster	√	√	√	√	√	0247
2023	GMC	Sierra	HVAC Control Module	√	√	√	√	√	0007 0129
2023	GMC	Sierra	Serial Data Gateway Module	√	√	√			
2023	GMC	Sierra	Rear Gate Module	√	√	√	√	√	0146 0753
2023	GMC	Sierra	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 07AB 0009 07AC
2023	GMC	Sierra	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2023	GMC	Sierra	Seat Memory Control Module - Driver	√	√	√	√	√	
2023	GMC	Sierra	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	GMC	Sierra	Video Processing Control Module	√	√	√	√	√	
2023	GMC	Sierra	Assist Step Control Module	√	√	√	√	√	
2023	GMC	Sierra	Trailer Lighting Control Module	√	√	√	√	√	
2023	GMC	Sierra	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776 0037 0776 07A6 0099
2023	GMC	Sierra	Parking Assist Control Module	√	√	√	√	√	0247
2023	GMC	Sierra	Serial Data Gateway Module - Processor 1	√	√	√			
2023	GMC	Sierra	Serial Data Gateway Module - Processor 2	√	√	√			
2023	GMC	Sierra	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	GMC	Sierra	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	GMC	Sierra	Steering Column Lock Control Module	√	√	√	√		
2023	GMC	Sierra	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2023	GMC	Sierra	Frontview Camera - Windshield	√	√	√	√	√	0196 0205 0196 075A
2023	GMC	Sierra	Keyless Entry Control Module	√	√	√	√	√	
2023	GMC	Sierra	Passenger Presence Module	√	√	√	√	√	0057
2023	GMC	Sierra	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2023	GMC	Sierra	Amplifier	√	√	√	√		
2023	GMC	Sierra	Radio	√	√	√	√	√	0269 0769 07A7 07A8 0150 0226 0269 0267
2023	GMC	Sierra	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2023	GMC	Sierra	Driver Seat Adjuster Memory Module	√	√	√	√	√	

2023	GMC	Sierra	Telematics Control Module	√	√	√	√		0270 0755
2023	GMC	Sierra	Audio Amplifier	√	√	√	√		
2023	GMC	Sierra	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	GMC	Sierra	Running Board Control Module	√	√	√	√	√	
2023	GMC	Sierra	Trailer Lamp Control Module	√	√	√	√	√	
2023	GMC	Sierra	Video Processing Module	√	√	√	√		
2023	GMC	Sierra	Wireless Accessory Charging Module	√	√	√	√		
2023	GMC	Sierra	Automated Driving Mapping Module	√	√	√	√	√	
2023	GMC	Sierra	Video Display - Right Front Seat Back	√	√	√			
2023	GMC	Sierra	Lighting Control Module	√	√	√	√	√	
2023	GMC	Sierra	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2023	GMC	Sierra	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	GMC	Sierra	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2023	GMC	Sierra	Driver Monitoring System Control Module	√	√	√			
2023	GMC	Sierra	Image Processing Module	√	√	√	√		
2023	GMC	Sierra	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	GMC	Sierra	Image Processing Module 1 - Processor 1	√	√	√	√		
2023	GMC	Sierra	Image Processing Module 1 - Processor 2	√	√	√			0758
2023	GMC	Sierra	Short Range Radar Sensor - Left Front	√	√	√			0772
2023	GMC	Sierra	Short Range Radar Sensor - Left Rear	√	√	√			0772
2023	GMC	Sierra	Short Range Radar Sensor - Right Front	√	√	√			0772
2023	GMC	Sierra	Short Range Radar Sensor - Right Rear	√	√	√			0772
2023	GMC	Sierra	Power Steering Control Module	√	√	√	√		0089
2023	GMC	Sierra	Electronic Suspension Control Module	√	√	√	√	√	0198
2023	GMC	Sierra	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2023	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0147 076C 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0764 0763 0258 0130
2023	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0017
2023	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0229 0111
2023	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	GMC	Terrain	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0247
2023	GMC	Terrain	HVAC Control Module	√	√	√	√	√	0007 0129
2023	GMC	Terrain	HVAC Controls	√	√	√	√		

2023	GMC	Terrain	Headlamp Control Module	√	√	√	√	√	0195
2023	GMC	Terrain	Headlamp High Beam Control Module	√	√	√	√	√	0247
2023	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146 0169
2023	GMC	Terrain	Seat Memory Control Module - Driver	√	√	√	√	√	
2023	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	GMC	Terrain	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	GMC	Terrain	Rear Drive Control Module	√	√	√	√	√	0003
2023	GMC	Terrain	Video Processing Control Module	√	√	√	√	√	
2023	GMC	Terrain	Serial Data Gateway Module - Processor 1	√	√	√			
2023	GMC	Terrain	Serial Data Gateway Module - Processor 2	√	√	√			
2023	GMC	Terrain	Amplifier	√	√	√	√		
2023	GMC	Terrain	Radio	√	√	√	√	√	0150 0226 0269 0793
2023	GMC	Terrain	Head-Up Display Module	√	√	√	√	√	
2023	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0247 0271
2023	GMC	Terrain	Steering Column Lock Control Module	√	√	√	√		
2023	GMC	Terrain	Keyless Entry Control Module	√	√	√	√	√	
2023	GMC	Terrain	Passenger Presence Module	√	√	√	√	√	0057
2023	GMC	Terrain	Frontview Camera - Windshield	√	√	√	√		0196 0084
2023	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0080 0089
2023	GMC	Yukon	Engine Control Module	√	√	√	√	√	0263 0209 075E 075F 0778 076C 0115 076D 0779 0086 0085 0097 0221 0757 077A 077B 077C 077D 0764 0763 0117 0119 0258 07CE 077E 077F 0780 0781 0782 0783 0784 076E 0212 0217 0775 0139
2023	GMC	Yukon	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2023	GMC	Yukon	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2023	GMC	Yukon	Restraints Control Module	√	√	√	√	√	0758 0134
2023	GMC	Yukon	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	GMC	Yukon	Instrument Panel Cluster Control Module	√	√	√	√	√	
2023	GMC	Yukon	Serial Data Gateway Module	√	√	√			
2023	GMC	Yukon	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	GMC	Yukon	Rear Gate Module	√	√	√	√	√	0146 0753
2023	GMC	Yukon	Telematics Control Module	√	√	√	√		0270 0755
2023	GMC	Yukon	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2023	GMC	Yukon	Audio Amplifier	√	√	√	√		
2023	GMC	Yukon	Heater and Air Conditioning Auxiliary Control	√	√	√			
2023	GMC	Yukon	Heater and Air Conditioning User Interface Control -	√	√	√	√		

2023	GMC	Yukon	Radio	√	√	√	√	√	0269 0769
2023	GMC	Yukon	Video Display - Right Front Seat Back	√	√	√			
2023	GMC	Yukon	Frontview Camera - Windshield	√	√	√	√		0196
2023	GMC	Yukon	Chassis Control Module - Auxiliary	√	√	√	√	√	
2023	GMC	Yukon	Wireless Accessory Charging Module	√	√	√	√		
2023	GMC	Yukon	Video Processing Module	√	√	√	√		
2023	GMC	Yukon	Running Board Control Module	√	√	√	√	√	
2023	GMC	Yukon	Trailer Lamp Control Module	√	√	√	√	√	
2023	GMC	Yukon	Differential Control Module	√	√	√	√	√	07B7 07B8
2023	GMC	Yukon	Gear Shift Control Module	√					
2023	GMC	Yukon	Parking Assist Control Module	√	√	√	√	√	
2023	GMC	Yukon	Side Obstacle Detection Control Module - Left	√	√	√			
2023	GMC	Yukon	Side Obstacle Detection Control Module - Right	√	√	√			
2023	GMC	Yukon	Steering Column Lock Control Module	√	√	√	√		
2023	GMC	Yukon	Lighting Control Module	√	√	√	√	√	
2023	GMC	Yukon	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	GMC	Yukon	Image Processing Module	√	√	√	√		
2023	GMC	Yukon	Short Range Radar Sensor - Left Front	√	√	√			0772
2023	GMC	Yukon	Short Range Radar Sensor - Left Rear	√	√	√			0772
2023	GMC	Yukon	Short Range Radar Sensor - Right Front	√	√	√			0772
2023	GMC	Yukon	Short Range Radar Sensor - Right Rear	√	√	√			0772
2023	GMC	Yukon	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	GMC	Yukon	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2023	GMC	Yukon	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2023	GMC	Yukon	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2023	GMC	Yukon	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2023	GMC	Yukon	Electronic Suspension Control Module	√	√	√	√	√	0198
2023	GMC	Yukon	Power Steering Control Module	√	√	√	√		0089
2023	GMC	Yukon XL	Engine Control Module	√	√	√	√	√	0263 0209 075E 075F 0778 076C 0115 076D 0779 0086 0085 0097 0221 0757 077A 077B 077C 077D 0764 0763 0117 0119 0258 07CE 077E 077F 0780 0781 0782 0783 0784 076E 0212 0217 0775 0139
2023	GMC	Yukon XL	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2023	GMC	Yukon XL	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F



2023	GMC	Yukon XL	Restraints Control Module	√	√	√	√	√	0758 0134
2023	GMC	Yukon XL	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	GMC	Yukon XL	Instrument Panel Cluster Control Module	√	√	√	√	√	
2023	GMC	Yukon XL	Serial Data Gateway Module	√	√	√			
2023	GMC	Yukon XL	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	GMC	Yukon XL	Rear Gate Module	√	√	√	√	√	0146 0753
2023	GMC	Yukon XL	Telematics Control Module	√	√	√	√		0270 0755
2023	GMC	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2023	GMC	Yukon XL	Audio Amplifier	√	√	√	√		
2023	GMC	Yukon XL	Heater and Air Conditioning Auxiliary Control	√	√	√			
2023	GMC	Yukon XL	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	GMC	Yukon XL	Radio	√	√	√	√	√	0269 0769
2023	GMC	Yukon XL	Video Display - Right Front Seat Back	√	√	√			
2023	GMC	Yukon XL	Frontview Camera - Windshield	√	√	√	√		0196
2023	GMC	Yukon XL	Chassis Control Module - Auxiliary	√	√	√	√	√	
2023	GMC	Yukon XL	Wireless Accessory Charging Module	√	√	√	√		
2023	GMC	Yukon XL	Video Processing Module	√	√	√	√		
2023	GMC	Yukon XL	Running Board Control Module	√	√	√	√	√	
2023	GMC	Yukon XL	Trailer Lamp Control Module	√	√	√	√	√	
2023	GMC	Yukon XL	Differential Control Module	√	√	√	√	√	07B7 07B8
2023	GMC	Yukon XL	Side Obstacle Detection Control Module - Left	√	√	√			
2023	GMC	Yukon XL	Side Obstacle Detection Control Module - Right	√	√	√			
2023	GMC	Yukon XL	Parking Assist Control Module	√	√	√	√	√	
2023	GMC	Yukon XL	Gear Shift Control Module	√					
2023	GMC	Yukon XL	Lighting Control Module	√	√	√	√	√	
2023	GMC	Yukon XL	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	GMC	Yukon XL	Image Processing Module	√	√	√	√		
2023	GMC	Yukon XL	Short Range Radar Sensor - Left Front	√	√	√			0772
2023	GMC	Yukon XL	Short Range Radar Sensor - Left Rear	√	√	√			0772
2023	GMC	Yukon XL	Short Range Radar Sensor - Right Front	√	√	√			0772
2023	GMC	Yukon XL	Short Range Radar Sensor - Right Rear	√	√	√			0772
2023	GMC	Yukon XL	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2023	GMC	Yukon XL	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2023	GMC	Yukon XL	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2023	GMC	Yukon XL	Steering Column Lock Control Module	√	√	√	√		
2023	GMC	Yukon XL	Power Steering Control Module	√	√	√	√		0089
2023	GMC	Yukon XL	Electronic Suspension Control Module	√	√	√	√	√	0198
2023	GMC	Yukon XL	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D

2022	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0209 0115 0756 0086 0085 0757 0217 0258 0139 0006
2022	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0017
2022	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2022	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Buick	Enclave	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	Buick	Enclave	Instrument Cluster	√	√	√	√	√	0247
2022	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Buick	Enclave	HVAC Controls	√	√	√	√		
2022	Buick	Enclave	Amplifier	√	√	√	√		
2022	Buick	Enclave	Radio Controls	√	√	√	√		0241
2022	Buick	Enclave	Radio	√	√	√	√	√	0226 0267 0269
2022	Buick	Enclave	Headlamp Control Module	√	√	√	√	√	0195
2022	Buick	Enclave	Liftgate Control Module	√	√	√	√	√	0146 0169
2022	Buick	Enclave	Seat Memory Control Module - Driver	√	√	√	√	√	
2022	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	Buick	Enclave	Video Processing Control Module	√	√	√	√	√	
2022	Buick	Enclave	Chassis Control Module	√	√	√	√	√	0014 0078
2022	Buick	Enclave	Active Safety Control Module	√	√	√	√		
2022	Buick	Enclave	Frontview Camera - Windshield	√	√	√	√		0196
2022	Buick	Enclave	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247 0271
2022	Buick	Enclave	Serial Data Gateway Module - Processor 1	√	√	√			
2022	Buick	Enclave	Serial Data Gateway Module - Processor 2	√	√	√			
2022	Buick	Enclave	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	Buick	Enclave	Keyless Entry Control Module	√	√	√	√	√	0759
2022	Buick	Enclave	Passenger Presence Module	√	√	√	√	√	0057
2022	Buick	Enclave	Power Steering Control Module	√	√	√	√		0089 0084
2022	Buick	Enclave	Suspension Control Module	√	√	√	√	√	
2022	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0209 0132 0115 0086 0212 0214 0217 0006 0144 0139 0757 0085 075D 075E 075F 0760 0756 0761 0213 0762 0758 0763 0764
2022	Buick	Encore	Transmission Control Module	√	√	√	√	√	0016 075C 0017 0036
2022	Buick	Encore	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2022	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090

2022	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2022	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Buick	Encore	HVAC Controls	√	√	√	√		
2022	Buick	Encore	Serial Data Gateway Module	√	√	√			
2022	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2022	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0755 0259 0048 0011
2022	Buick	Encore	Radio	√	√	√	√	√	0150 0226 0269 0267
2022	Buick	Encore	Headlamp Control Module	√	√	√	√	√	0195
2022	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2022	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247 0271
2022	Buick	Encore	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	Buick	Encore	Steering Column Lock Control Module	√	√	√	√		
2022	Buick	Encore	Keyless Entry Control Module	√	√	√	√	√	0759
2022	Buick	Encore	Passenger Presence Module	√	√	√	√	√	0057
2022	Buick	Encore	Frontview Camera - Windshield	√	√	√	√	√	0196 0084 0205 075A
2022	Buick	Encore	Rear Drive Control Module	√	√	√	√	√	0003 075B
2022	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2022	Buick	Encore	Power Steering Control Module	√	√	√	√		0089 0084 0207
2022	Buick	Encore	Amplifier	√	√	√	√		
2022	Buick	Encore	Head-Up Display Module	√	√	√	√	√	
2022	Buick	Encore	Side Obstacle Detection Control Module - Right	√	√	√		√	
2022	Buick	Encore	Serial Data Gateway Module - Processor 1	√	√	√			
2022	Buick	Encore	Serial Data Gateway Module - Processor 2	√	√	√			
2022	Buick	Encore	Liftgate Control Module	√	√	√	√	√	0146 0169
2022	Buick	Encore	Seat Memory Control Module - Driver	√	√	√	√	√	
2022	Buick	Envision	Engine Control Module	√	√	√	√	√	0263 0209 075D 075E 076B 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0151 0753 0268 0128
2022	Buick	Envision	Transmission Control Module	√	√	√	√	√	0019 076A
2022	Buick	Envision	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758
2022	Buick	Envision	Restraints Control Module	√	√	√	√	√	0758 0134
2022	Buick	Envision	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2022	Buick	Envision	Instrument Panel Cluster Control Module	√	√	√	√	√	
2022	Buick	Envision	Serial Data Gateway Module	√	√	√			

2022	Buick	Envision	Audio Amplifier	√	√	√	√		
2022	Buick	Envision	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2022	Buick	Envision	Radio	√	√	√	√	√	0769
2022	Buick	Envision	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2022	Buick	Envision	Headlamp Control Module	√	√	√	√		0195
2022	Buick	Envision	Rear Gate Module	√	√	√	√		0753
2022	Buick	Envision	Telematics Control Module	√	√	√	√		0270
2022	Buick	Envision	Radio Controls	√	√	√	√		
2022	Buick	Envision	Power Steering Control Module	√	√	√	√		0766
2022	Buick	Envision	Video Processing Module	√	√	√			
2022	Buick	Envision	Wireless Accessory Charging Module	√	√	√	√		
2022	Buick	Envision	Gear Shift Control Module	√					
2022	Buick	Envision	Parking Assist Control Module	√	√	√	√	√	
2022	Buick	Envision	Lighting Control Module	√	√	√	√	√	
2022	Buick	Envision	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2022	Buick	Envision	Side Obstacle Detection Control Module - Right	√	√	√			
2022	Buick	Envision	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2022	Buick	Envision	Image Processing Module	√	√	√	√		
2022	Buick	Envision	Frontview Camera - Windshield	√	√	√	√		0196
2022	Buick	Envision	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	Buick	Envision	Rear Drive Control Module	√	√	√	√		
2022	Cadillac	CT4	Engine Control Module	√	√	√	√	√	0263 0209 075D 075E 076B 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0764 0763 0258 0139 0770 0771 0767
2022	Cadillac	CT4	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2022	Cadillac	CT4	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758
2022	Cadillac	CT4	Restraints Control Module	√	√	√	√	√	0758 0134
2022	Cadillac	CT4	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2022	Cadillac	CT4	Instrument Panel Cluster Control Module	√	√	√	√	√	
2022	Cadillac	CT4	Serial Data Gateway Module	√	√	√			
2022	Cadillac	CT4	Transfer Case Control Module	√	√	√	√	√	0099 0100
2022	Cadillac	CT4	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2022	Cadillac	CT4	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2022	Cadillac	CT4	Telematics Control Module	√	√	√	√		0270
2022	Cadillac	CT4	Automated Driving Mapping Module	√	√	√	√	√	
2022	Cadillac	CT4	Audio Amplifier	√	√	√	√		
2022	Cadillac	CT4	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2022	Cadillac	CT4	Infotainment Control Switch	√	√	√			

2022	Cadillac	CT4	Radio Controls	√	√	√	√		
2022	Cadillac	CT4	Radio	√	√	√	√	√	0769 0269
2022	Cadillac	CT4	Wireless Accessory Charging Module	√	√	√	√		
2022	Cadillac	CT4	Video Processing Module	√	√	√			
2022	Cadillac	CT4	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2022	Cadillac	CT4	Gear Shift Control Module	√					
2022	Cadillac	CT4	Lighting Control Module	√	√	√	√	√	
2022	Cadillac	CT4	Parking Assist Control Module	√	√	√	√	√	
2022	Cadillac	CT4	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2022	Cadillac	CT4	Side Obstacle Detection Control Module - Right	√	√	√			
2022	Cadillac	CT4	Steering Column Lock Control Module	√	√	√	√		
2022	Cadillac	CT4	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	Cadillac	CT4	Frontview Camera - Windshield	√	√	√	√		0196
2022	Cadillac	CT4	Image Processing Module	√	√	√	√		
2022	Cadillac	CT4	Short Range Radar Sensor - Left Rear	√	√	√			0772
2022	Cadillac	CT4	Short Range Radar Sensor - Right Rear	√	√	√			0772
2022	Cadillac	CT4	Electronic Suspension Control Module	√	√	√	√	√	0198
2022	Cadillac	CT4	Power Steering Control Module	√	√	√	√		0766
2022	Cadillac	CT5	Engine Control Module	√	√	√	√	√	0263 0209 075D 075E 076B 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0764 0763 0258 0139 0770 0771 0757 0773 0774 0775
2022	Cadillac	CT5	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2022	Cadillac	CT5	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758
2022	Cadillac	CT5	Restraints Control Module	√	√	√	√	√	0758 0134
2022	Cadillac	CT5	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2022	Cadillac	CT5	Instrument Panel Cluster Control Module	√	√	√	√	√	
2022	Cadillac	CT5	Serial Data Gateway Module	√	√	√			
2022	Cadillac	CT5	Transfer Case Control Module	√	√	√	√	√	0099 0100
2022	Cadillac	CT5	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2022	Cadillac	CT5	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2022	Cadillac	CT5	Telematics Control Module	√	√	√	√		0270
2022	Cadillac	CT5	Audio Amplifier	√	√	√	√		
2022	Cadillac	CT5	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2022	Cadillac	CT5	Infotainment Control Switch	√	√	√			
2022	Cadillac	CT5	Radio Controls	√	√	√	√		
2022	Cadillac	CT5	Radio	√	√	√	√	√	0769 0269
2022	Cadillac	CT5	Wireless Accessory Charging Module	√	√	√	√		

2022	Cadillac	CT5	Video Processing Module	√	√	√			
2022	Cadillac	CT5	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2022	Cadillac	CT5	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2022	Cadillac	CT5	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2022	Cadillac	CT5	Gear Shift Control Module	√					
2022	Cadillac	CT5	Lighting Control Module	√	√	√	√	√	
2022	Cadillac	CT5	Parking Assist Control Module	√	√	√	√	√	
2022	Cadillac	CT5	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2022	Cadillac	CT5	Side Obstacle Detection Control Module - Right	√	√	√			
2022	Cadillac	CT5	Steering Column Lock Control Module	√	√	√	√		
2022	Cadillac	CT5	Automated Driving Mapping Module	√	√	√	√	√	
2022	Cadillac	CT5	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	Cadillac	CT5	Frontview Camera - Windshield	√	√	√	√		0196
2022	Cadillac	CT5	Image Processing Module	√	√	√	√		
2022	Cadillac	CT5	Short Range Radar Sensor - Rear Middle	√	√	√			0772
2022	Cadillac	CT5	Electronic Suspension Control Module	√	√	√	√	√	
2022	Cadillac	CT5	Power Steering Control Module	√	√	√	√		0766
2022	Cadillac	CT5	UHF Short Range Low Energy Remote Control Access Transceiver	√	√	√			
2022	Cadillac	CT5	Differential Control Module	√	√	√	√	√	
2022	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0263 0209 0774 076C 0115 0086 0085 0757 0212 0217 0775 0258 0139 0777 075E 075F 0778 076D 0779 0097 0221 077A 077B 077C 077D 0764 0763 0117 0119 077E 077F 0780 0781 0782 0783 0784
2022	Cadillac	Escalade	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2022	Cadillac	Escalade	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2022	Cadillac	Escalade	Restraints Control Module	√	√	√	√	√	0758 0134
2022	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2022	Cadillac	Escalade	Instrument Panel Cluster Control Module	√	√	√	√	√	
2022	Cadillac	Escalade	Serial Data Gateway Module	√	√	√			
2022	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2022	Cadillac	Escalade	Automated Driving Mapping Module	√	√	√	√	√	
2022	Cadillac	Escalade	Chassis Control Module - Auxiliary	√	√	√	√		
2022	Cadillac	Escalade	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2022	Cadillac	Escalade	Headlamp Control Module	√	√	√	√		0195

2022	Cadillac	Escalade	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2022	Cadillac	Escalade	Rear Gate Module	√	√	√	√		0753
2022	Cadillac	Escalade	Telematics Control Module	√	√	√	√		0270
2022	Cadillac	Escalade	Audio Amplifier	√	√	√	√		
2022	Cadillac	Escalade	Heater and Air Conditioning Auxiliary Control	√	√	√			
2022	Cadillac	Escalade	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2022	Cadillac	Escalade	Infotainment Control Switch	√	√	√			
2022	Cadillac	Escalade	Radio Controls	√	√	√	√		
2022	Cadillac	Escalade	Radio	√	√	√	√	√	0769 0269
2022	Cadillac	Escalade	Video Display - Right Front Seat Back	√	√	√			
2022	Cadillac	Escalade	Running Board Control Module	√	√	√	√	√	
2022	Cadillac	Escalade	Trailer Lamp Control Module	√	√	√	√	√	
2022	Cadillac	Escalade	Video Processing Module	√	√	√			
2022	Cadillac	Escalade	Wireless Accessory Charging Module	√	√	√	√		
2022	Cadillac	Escalade	Night Vision Control Module	√	√	√	√		
2022	Cadillac	Escalade	Gear Shift Control Module	√					
2022	Cadillac	Escalade	Parking Assist Control Module	√	√	√	√	√	
2022	Cadillac	Escalade	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2022	Cadillac	Escalade	Side Obstacle Detection Control Module - Right	√	√	√			
2022	Cadillac	Escalade	Steering Column Lock Control Module	√	√	√	√		
2022	Cadillac	Escalade	Lighting Control Module	√	√	√	√	√	
2022	Cadillac	Escalade	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2022	Cadillac	Escalade	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2022	Cadillac	Escalade	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2022	Cadillac	Escalade	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2022	Cadillac	Escalade	Electronic Suspension Control Module	√	√	√	√	√	0198
2022	Cadillac	Escalade	Power Steering Control Module	√	√	√	√		0089
2022	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0263 0209 0774 076C 0115 0086 0085 0757 0212 0217 0775 0258 0139 0777 075E 075F 0778 076D 0779 0097 0221 077A 077B 077C 077D 0764 0763 0117 0119 077E 077F 0780 0781 0782 0783 0784
2022	Cadillac	Escalade ESV	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2022	Cadillac	Escalade ESV	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2022	Cadillac	Escalade ESV	Restraints Control Module	√	√	√	√	√	0758 0134

2022	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2022	Cadillac	Escalade ESV	Instrument Panel Cluster Control Module	√	√	√	√	√	
2022	Cadillac	Escalade ESV	Serial Data Gateway Module	√	√	√			
2022	Cadillac	Escalade ESV	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2022	Cadillac	Escalade ESV	Automated Driving Mapping Module	√	√	√	√	√	
2022	Cadillac	Escalade ESV	Chassis Control Module - Auxiliary	√	√	√	√		
2022	Cadillac	Escalade ESV	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2022	Cadillac	Escalade ESV	Headlamp Control Module	√	√	√	√		0195
2022	Cadillac	Escalade ESV	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2022	Cadillac	Escalade ESV	Rear Gate Module	√	√	√	√		0753
2022	Cadillac	Escalade ESV	Telematics Control Module	√	√	√	√		0270
2022	Cadillac	Escalade ESV	Audio Amplifier	√	√	√	√		
2022	Cadillac	Escalade ESV	Heater and Air Conditioning Auxiliary Control	√	√	√			
2022	Cadillac	Escalade ESV	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2022	Cadillac	Escalade ESV	Infotainment Control Switch	√	√	√			
2022	Cadillac	Escalade ESV	Radio Controls	√	√	√	√		
2022	Cadillac	Escalade ESV	Radio	√	√	√	√	√	0769 0269
2022	Cadillac	Escalade ESV	Video Display - Right Front Seat Back	√	√	√			
2022	Cadillac	Escalade ESV	Night Vision Control Module	√	√	√	√		
2022	Cadillac	Escalade ESV	Running Board Control Module	√	√	√	√	√	
2022	Cadillac	Escalade ESV	Trailer Lamp Control Module	√	√	√	√	√	
2022	Cadillac	Escalade ESV	Video Processing Module	√	√	√			
2022	Cadillac	Escalade ESV	Wireless Accessory Charging Module	√	√	√	√		
2022	Cadillac	Escalade ESV	Gear Shift Control Module	√					
2022	Cadillac	Escalade ESV	Lighting Control Module	√	√	√	√	√	
2022	Cadillac	Escalade ESV	Parking Assist Control Module	√	√	√	√	√	
2022	Cadillac	Escalade ESV	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2022	Cadillac	Escalade ESV	Side Obstacle Detection Control Module - Right	√	√	√			
2022	Cadillac	Escalade ESV	Steering Column Lock Control Module	√	√	√	√		
2022	Cadillac	Escalade ESV	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2022	Cadillac	Escalade ESV	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2022	Cadillac	Escalade ESV	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2022	Cadillac	Escalade ESV	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2022	Cadillac	Escalade ESV	Electronic Suspension Control Module	√	√	√	√	√	0198
2022	Cadillac	Escalade ESV	Power Steering Control Module	√	√	√	√		0089



2022	Cadillac	XT4	Engine Control Module	√	√	√	√	√	0263 0209 0791 075E 076C 0115 076D 0058 0763 0764 0086 0097 0219 0221 0792 0073 0072 0070 0071 0117 0119 0258 077E 0178 0180 0182 0184 0246 075D 0760 0761 0085 0757 0212 0217 0006
2022	Cadillac	XT4	Transmission Control Module	√	√	√	√	√	0017
2022	Cadillac	XT4	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2022	Cadillac	XT4	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Cadillac	XT4	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	Cadillac	XT4	Instrument Cluster	√	√	√	√	√	0247
2022	Cadillac	XT4	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Cadillac	XT4	HVAC Controls	√	√	√	√		
2022	Cadillac	XT4	Headlamp Control Module	√	√	√	√	√	0195
2022	Cadillac	XT4	Liftgate Control Module	√	√	√	√	√	0146 0169
2022	Cadillac	XT4	Seat Memory Control Module - Driver	√	√	√	√	√	
2022	Cadillac	XT4	Seat Memory Control Module - Passenger	√	√	√	√	√	
2022	Cadillac	XT4	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	Cadillac	XT4	Amplifier	√	√	√	√		
2022	Cadillac	XT4	Radio Controls	√	√	√	√		0241
2022	Cadillac	XT4	Radio	√	√	√	√	√	0226 0267 0269
2022	Cadillac	XT4	Infotainment Control Switch	√	√	√			
2022	Cadillac	XT4	Video Processing Control Module	√	√	√	√	√	
2022	Cadillac	XT4	Trailer Lighting Control Module	√	√	√	√	√	0247
2022	Cadillac	XT4	Keyless Entry Control Module	√	√	√	√	√	
2022	Cadillac	XT4	Passenger Presence Module	√	√	√	√	√	0057
2022	Cadillac	XT4	Parking Assist Control Module	√	√	√	√	√	0247
2022	Cadillac	XT4	Serial Data Gateway Module - Processor 1	√	√	√			
2022	Cadillac	XT4	Serial Data Gateway Module - Processor 2	√	√	√			
2022	Cadillac	XT4	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	Cadillac	XT4	Side Obstacle Detection Control Module - Right	√	√	√		√	
2022	Cadillac	XT4	Steering Column Lock Control Module	√	√	√	√		
2022	Cadillac	XT4	Power Steering Control Module	√	√	√	√		0081 0080 0089
2022	Cadillac	XT4	Suspension Control Module	√	√	√	√	√	
2022	Cadillac	XT4	Active Safety Control Module	√	√	√	√	√	
2022	Cadillac	XT4	Frontview Camera - Windshield	√	√	√	√		0196

2022	Cadillac	XT4	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	Cadillac	XT4	Short Range Radar Sensor - Rear Middle	√	√	√			
2022	Cadillac	XT4	Rear Drive Control Module	√	√	√	√	√	0003
2022	Cadillac	XT5	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0138 0756
2022	Cadillac	XT5	Transmission Control Module	√	√	√	√	√	0017
2022	Cadillac	XT5	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2022	Cadillac	XT5	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Cadillac	XT5	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	Cadillac	XT5	Instrument Cluster	√	√	√	√	√	0247
2022	Cadillac	XT5	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Cadillac	XT5	HVAC Controls	√	√	√	√		
2022	Cadillac	XT5	Headlamp Control Module		√	√			
2022	Cadillac	XT5	Liftgate Control Module	√	√	√	√	√	0146 0169
2022	Cadillac	XT5	Seat Memory Control Module - Driver	√	√	√	√	√	
2022	Cadillac	XT5	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	Cadillac	XT5	Amplifier	√	√	√	√		
2022	Cadillac	XT5	Infotainment Control Switch	√	√	√			
2022	Cadillac	XT5	Radio Controls	√	√	√	√		0241
2022	Cadillac	XT5	Radio	√	√	√	√	√	0226 0267 0269
2022	Cadillac	XT5	Night Vision Camera Control Module	√	√	√	√		0492
2022	Cadillac	XT5	Trailer Lighting Control Module	√	√	√	√	√	0247
2022	Cadillac	XT5	Video Processing Control Module	√	√	√	√	√	
2022	Cadillac	XT5	Parking Assist Control Module	√	√	√	√	√	0247
2022	Cadillac	XT5	Serial Data Gateway Module - Processor 1	√	√	√			
2022	Cadillac	XT5	Serial Data Gateway Module - Processor 2	√	√	√			
2022	Cadillac	XT5	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	Cadillac	XT5	Side Obstacle Detection Control Module - Right	√	√	√		√	
2022	Cadillac	XT5	Steering Column Lock Control Module	√	√	√	√		
2022	Cadillac	XT5	Keyless Entry Control Module	√	√	√	√	√	0759
2022	Cadillac	XT5	Passenger Presence Module	√	√	√	√	√	0057
2022	Cadillac	XT5	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2022	Cadillac	XT5	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2022	Cadillac	XT5	Active Safety Control Module	√	√	√	√	√	
2022	Cadillac	XT5	Frontview Camera - Windshield	√	√	√	√		0196

2022	Cadillac	XT5	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	Cadillac	XT5	Short Range Radar Sensor - Rear Middle	√	√	√			
2022	Cadillac	XT5	Power Steering Control Module	√	√	√	√		0089 0084
2022	Cadillac	XT5	Suspension Control Module	√	√	√	√	√	
2022	Cadillac	XT5	Rear Drive Control Module	√	√	√	√	√	0003
2022	Cadillac	XT6	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0128 0756
2022	Cadillac	XT6	Transmission Control Module	√	√	√	√	√	0017
2022	Cadillac	XT6	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2022	Cadillac	XT6	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Cadillac	XT6	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0159
2022	Cadillac	XT6	Instrument Cluster	√	√	√	√	√	0247
2022	Cadillac	XT6	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Cadillac	XT6	HVAC Controls	√	√	√	√		
2022	Cadillac	XT6	Trailer Lighting Control Module	√	√	√	√	√	0247
2022	Cadillac	XT6	Headlamp Control Module	√	√	√	√	√	0195
2022	Cadillac	XT6	Liftgate Control Module	√	√	√	√	√	0146 0169
2022	Cadillac	XT6	Seat Memory Control Module - Driver	√	√	√	√	√	
2022	Cadillac	XT6	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	Cadillac	XT6	Amplifier	√	√	√	√		
2022	Cadillac	XT6	Infotainment Control Switch	√	√	√			
2022	Cadillac	XT6	Radio Controls	√	√	√	√		0241
2022	Cadillac	XT6	Radio	√	√	√	√	√	0226 0267 0269
2022	Cadillac	XT6	Night Vision Camera Control Module	√	√	√	√		0492
2022	Cadillac	XT6	Video Processing Control Module	√	√	√	√	√	
2022	Cadillac	XT6	Parking Assist Control Module	√	√	√	√	√	0247
2022	Cadillac	XT6	Serial Data Gateway Module - Processor 1	√	√	√			
2022	Cadillac	XT6	Serial Data Gateway Module - Processor 2	√	√	√			
2022	Cadillac	XT6	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	Cadillac	XT6	Side Obstacle Detection Control Module - Right	√	√	√		√	
2022	Cadillac	XT6	Steering Column Lock Control Module	√	√	√	√		
2022	Cadillac	XT6	Keyless Entry Control Module	√	√	√	√	√	0759
2022	Cadillac	XT6	Passenger Presence Module	√	√	√	√	√	0057
2022	Cadillac	XT6	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2022	Cadillac	XT6	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266

2022	Cadillac	XT6	Active Safety Control Module	√	√	√	√	√	
2022	Cadillac	XT6	Frontview Camera - Windshield	√	√	√	√		0196
2022	Cadillac	XT6	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	Cadillac	XT6	Short Range Radar Sensor - Rear Middle	√	√	√			
2022	Cadillac	XT6	Power Steering Control Module	√	√	√	√		0089 0084
2022	Cadillac	XT6	Suspension Control Module	√	√	√	√	√	
2022	Chevrolet	Aveo	Engine Control Module	√	√	√	√	√	0156 0020 0140
2022	Chevrolet	Aveo	Transmission Control Module	√	√	√	√	√	0016
2022	Chevrolet	Aveo	Electronic Brake Control Module	√	√	√	√	√	0111 0090
2022	Chevrolet	Aveo	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261 0111
2022	Chevrolet	Aveo	Body Control Module	√	√	√	√	√	0263
2022	Chevrolet	Aveo	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Chevrolet	Aveo	Radio/HVAC Controls	√	√	√	√	√	0150
2022	Chevrolet	Aveo	Power Steering Control Module	√	√	√	√		0081 0089
2022	Chevrolet	Aveo	Radio	√	√	√	√	√	
2022	Chevrolet	Aveo	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2022	Chevrolet	Aveo	Telematics Communication Interface Control Module	√	√	√		√	
2022	Chevrolet	Beat	Engine Control Module	√	√	√	√	√	0133 0210 0098 0096 0094 0216 0143 0265 0393 0173 0149 0069 0087 0209 0156 0147 0017
2022	Chevrolet	Beat	Electronic Brake Control Module	√	√	√	√	√	0090
2022	Chevrolet	Beat	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2022	Chevrolet	Beat	Instrument Cluster	√	√	√	√	√	
2022	Chevrolet	Beat	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	Chevrolet	Beat	Radio	√	√	√	√	√	0226
2022	Chevrolet	Beat	Power Steering Control Module	√	√	√	√		0089
2022	Chevrolet	Blazer	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 0156 0020 0132 0067 0154 0213 0214 0756
2022	Chevrolet	Blazer	Transmission Control Module	√	√	√	√	√	0017
2022	Chevrolet	Blazer	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Chevrolet	Blazer	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	Chevrolet	Blazer	Instrument Cluster	√	√	√	√	√	0247
2022	Chevrolet	Blazer	HVAC Control Module	√	√	√	√	√	0007 0129

2022	Chevrolet	Blazer	HVAC Controls	√	√	√	√		
2022	Chevrolet	Blazer	Amplifier	√	√	√	√		
2022	Chevrolet	Blazer	Radio Controls	√	√	√	√		0241
2022	Chevrolet	Blazer	Radio	√	√	√	√	√	0150 0226 0269 0267
2022	Chevrolet	Blazer	Liftgate Control Module	√	√	√	√	√	0146 0169
2022	Chevrolet	Blazer	Seat Memory Control Module - Driver	√	√	√	√	√	
2022	Chevrolet	Blazer	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	Chevrolet	Blazer	Video Processing Control Module	√	√	√	√	√	
2022	Chevrolet	Blazer	Active Safety Control Module	√	√	√	√		
2022	Chevrolet	Blazer	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	Chevrolet	Blazer	Frontview Camera - Windshield	√	√	√	√		0196
2022	Chevrolet	Blazer	Parking Assist Control Module	√	√	√	√	√	0247
2022	Chevrolet	Blazer	Serial Data Gateway Module - Processor 1	√	√	√			
2022	Chevrolet	Blazer	Serial Data Gateway Module - Processor 2	√	√	√			
2022	Chevrolet	Blazer	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	Chevrolet	Blazer	Side Obstacle Detection Control Module - Right	√	√	√		√	
2022	Chevrolet	Blazer	Keyless Entry Control Module	√	√	√	√	√	0759
2022	Chevrolet	Blazer	Passenger Presence Module	√	√	√	√	√	0057
2022	Chevrolet	Blazer	Rear Drive Control Module	√	√	√	√	√	0003
2022	Chevrolet	Bolt	Engine Control Module	√	√	√	√	√	0258
2022	Chevrolet	Bolt	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229
2022	Chevrolet	Bolt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Chevrolet	Bolt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	Chevrolet	Bolt	Instrument Cluster	√	√	√	√	√	0247
2022	Chevrolet	Bolt	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Chevrolet	Bolt	Chassis Control Module	√	√	√	√	√	0014 0078
2022	Chevrolet	Bolt	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2022	Chevrolet	Bolt	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	Chevrolet	Bolt	Radio	√	√	√	√	√	0269 0121 0793 0267
2022	Chevrolet	Bolt	Video Processing Control Module	√	√	√	√	√	
2022	Chevrolet	Bolt	Trailer Lighting Control Module	√	√	√	√	√	0247
2022	Chevrolet	Bolt	Air Conditioning Compressor	√					
2022	Chevrolet	Bolt	Battery Energy Control Module	√			√		
2022	Chevrolet	Bolt	Hybrid/EV Powertrain Control Module 1	√	√	√	√	√	0202 0018
2022	Chevrolet	Bolt	Hybrid/EV Powertrain Control Module 2	√	√	√	√	√	0125 0202 0262 0079 0122 0123 0127
2022	Chevrolet	Bolt	Power Line Communication Module	√			√		
2022	Chevrolet	Bolt	Frontview Camera - Windshield	√	√	√	√		0196 0084

2022	Chevrolet	Bolt	Parking Assist Control Module	√	√	√	√	√	0247
2022	Chevrolet	Bolt	Serial Data Gateway Module - Processor 1	√	√	√			
2022	Chevrolet	Bolt	Serial Data Gateway Module - Processor 2	√	√	√			
2022	Chevrolet	Bolt	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	Chevrolet	Bolt	Keyless Entry Control Module	√	√	√	√	√	
2022	Chevrolet	Bolt	Passenger Presence Module	√	√	√	√	√	0057
2022	Chevrolet	Bolt	Short Range Remote Control Transceiver	√	√	√	√		
2022	Chevrolet	Bolt	Side Obstacle Detection Control Module - Right	√	√	√		√	
2022	Chevrolet	Bolt	Brake Booster Control Module	√	√	√	√		
2022	Chevrolet	Bolt	Power Steering Control Module	√	√	√	√		0089 0084
2022	Chevrolet	Bolt	Digital Map Control Module	√	√	√	√		
2022	Chevrolet	Bolt	Active Safety Control Module 1 - Processor A	√	√	√	√		0794 0268
2022	Chevrolet	Bolt	Active Safety Control Module 1 - Processor B	√	√	√	√		0111 0268
2022	Chevrolet	Bolt	Active Safety Control Module 1 - Processor C	√	√	√	√		0268
2022	Chevrolet	Bolt	Active Safety Control Module 2 - Processor A	√	√	√	√		0794 0268
2022	Chevrolet	Bolt	Active Safety Control Module 2 - Processor B	√	√	√	√		0111 0268
2022	Chevrolet	Bolt	Active Safety Control Module 2 - Processor C	√	√	√	√		0268
2022	Chevrolet	Bolt	Driver Monitoring System Control Module	√	√	√	√	√	
2022	Chevrolet	Bolt	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	Chevrolet	Camaro	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0756 0085 0757 0020
2022	Chevrolet	Camaro	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2022	Chevrolet	Camaro	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229
2022	Chevrolet	Camaro	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Chevrolet	Camaro	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	Chevrolet	Camaro	Instrument Cluster	√	√	√	√	√	0247
2022	Chevrolet	Camaro	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Chevrolet	Camaro	HVAC Controls	√	√	√	√		
2022	Chevrolet	Camaro	Serial Data Gateway Module	√	√	√			
2022	Chevrolet	Camaro	Amplifier	√	√	√	√		
2022	Chevrolet	Camaro	Radio Controls	√	√	√	√		0241
2022	Chevrolet	Camaro	Radio	√	√	√	√	√	0150 0226 0269 0267
2022	Chevrolet	Camaro	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245

2022	Chevrolet	Camaro	Vehicle Performance Data Recorder	√	√	√	√		
2022	Chevrolet	Camaro	Headlamp Control Module	√	√	√	√	√	0195
2022	Chevrolet	Camaro	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2022	Chevrolet	Camaro	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	Chevrolet	Camaro	Folding Top Control Module	√	√	√	√	√	
2022	Chevrolet	Camaro	Parking Assist Control Module	√	√	√	√	√	0247
2022	Chevrolet	Camaro	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	Chevrolet	Camaro	Side Obstacle Detection Control Module - Right	√	√	√		√	
2022	Chevrolet	Camaro	Steering Column Lock Control Module	√	√	√	√		
2022	Chevrolet	Camaro	Keyless Entry Control Module	√	√	√	√	√	
2022	Chevrolet	Camaro	Passenger Presence Module	√	√	√	√	√	0057
2022	Chevrolet	Camaro	Frontview Camera - Windshield	√	√	√	√		0196 0084
2022	Chevrolet	Camaro	Parking Brake Control Module	√	√	√	√	√	0229
2022	Chevrolet	Camaro	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2022	Chevrolet	Camaro	Suspension Control Module	√	√	√	√	√	0245
2022	Chevrolet	Cavalier	Engine Control Module	√	√	√	√	√	0156 0020 0140 0263
2022	Chevrolet	Cavalier	Electronic Brake Control Module	√	√	√	√	√	0090
2022	Chevrolet	Cavalier	Serial Data Gateway Module	√	√	√	√		
2022	Chevrolet	Cavalier	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2022	Chevrolet	Cobalt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Chevrolet	Cobalt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	Chevrolet	Cobalt	Instrument Cluster	√	√	√	√	√	0247
2022	Chevrolet	Cobalt	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Chevrolet	Cobalt	Serial Data Gateway Module	√	√	√			
2022	Chevrolet	Cobalt	Front Seat Heating Control Module	√	√	√	√	√	
2022	Chevrolet	Cobalt	Telematics Communication Interface Control Module	√	√	√	√	√	
2022	Chevrolet	Cobalt	Radio	√	√	√	√	√	0150 0226 0269
2022	Chevrolet	Colorado	Transmission Control Module	√	√	√	√	√	0016
2022	Chevrolet	Colorado	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2022	Chevrolet	Colorado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Chevrolet	Colorado	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	Chevrolet	Colorado	Instrument Cluster	√	√	√	√	√	0247
2022	Chevrolet	Colorado	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Chevrolet	Colorado	HVAC Controls	√	√	√	√		

2022	Chevrolet	Colorado	Serial Data Gateway Module	√	√	√			
2022	Chevrolet	Colorado	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	Chevrolet	Colorado	Transfer Case Control Module	√	√	√	√	√	0037
2022	Chevrolet	Colorado	Amplifier	√	√	√	√		
2022	Chevrolet	Colorado	Radio	√	√	√	√	√	0150 0226 0269 0267
2022	Chevrolet	Colorado	Frontview Camera - Windshield	√	√	√	√	√	0196
2022	Chevrolet	Colorado	Trailer Lighting Control Module	√	√	√	√	√	0247
2022	Chevrolet	Colorado	Parking Assist Control Module	√	√	√	√	√	0247 0271
2022	Chevrolet	Colorado	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	Chevrolet	Colorado	Side Obstacle Detection Control Module - Right	√	√	√		√	
2022	Chevrolet	Colorado	Passenger Presence Module	√	√	√	√	√	0057
2022	Chevrolet	Colorado	Power Steering Control Module	√	√	√	√		0093 0090
2022	Chevrolet	Colorado	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2022	Chevrolet	Corvette	Engine Control Module	√	√	√	√	√	0263 0209 0770 076B 0774 076C 0115 0086 0757 0212 0217 0775
2022	Chevrolet	Corvette	Transmission Control Module	√	√	√	√	√	0017 0797 0798
2022	Chevrolet	Corvette	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758 0229 0799
2022	Chevrolet	Corvette	Restraints Control Module	√	√	√	√	√	0758 0134
2022	Chevrolet	Corvette	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2022	Chevrolet	Corvette	Instrument Panel Cluster Control Module	√	√	√	√	√	
2022	Chevrolet	Corvette	Serial Data Gateway Module	√	√	√			
2022	Chevrolet	Corvette	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2022	Chevrolet	Corvette	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2022	Chevrolet	Corvette	Telematics Control Module	√	√	√	√		0270
2022	Chevrolet	Corvette	Audio Amplifier	√	√	√	√		
2022	Chevrolet	Corvette	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2022	Chevrolet	Corvette	Radio Controls	√	√	√	√		
2022	Chevrolet	Corvette	Radio	√	√	√	√	√	0269 0769
2022	Chevrolet	Corvette	Hybrid/EV Powertrain Control Module 1		√	√			
2022	Chevrolet	Corvette	Vehicle Performance Data Recorder	√	√	√	√		
2022	Chevrolet	Corvette	Video Processing Module	√	√	√			
2022	Chevrolet	Corvette	Wireless Accessory Charging Module	√	√	√	√		
2022	Chevrolet	Corvette	Lighting Control Module	√	√	√	√	√	
2022	Chevrolet	Corvette	Folding Top Control Module - Left	√	√	√	√		
2022	Chevrolet	Corvette	Folding Top Control Module - Right	√	√	√			
2022	Chevrolet	Corvette	Folding Top Stowage Compartment Control Module -	√	√	√			
2022	Chevrolet	Corvette	Folding Top Stowage Compartment Control Module -	√	√	√	√		
2022	Chevrolet	Corvette	Parking Assist Control Module	√	√	√	√	√	
2022	Chevrolet	Corvette	Steering Column Lock Control Module	√	√	√	√		



2022	Chevrolet	Corvette	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2022	Chevrolet	Corvette	Front Suspension Leveling/Lifting Hydraulic Power Pack Module	√	√	√	√	√	
2022	Chevrolet	Corvette	Electric Power Steering Control Module	√	√	√	√		0766
2022	Chevrolet	Corvette	Electronic Suspension Control Module	√	√	√	√	√	0198
2022	Chevrolet	Cruze	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0114 0258 0128
2022	Chevrolet	Cruze	Transmission Control Module	√	√	√	√	√	0017 0036
2022	Chevrolet	Cruze	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2022	Chevrolet	Cruze	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Chevrolet	Cruze	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0159
2022	Chevrolet	Cruze	Instrument Cluster	√	√	√	√	√	0247
2022	Chevrolet	Cruze	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Chevrolet	Cruze	HVAC Controls	√	√	√	√		
2022	Chevrolet	Cruze	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	Chevrolet	Cruze	Radio	√	√	√	√	√	0150 0226 0269 0267
2022	Chevrolet	Cruze	Parking Assist Control Module	√	√	√	√	√	0247 0271
2022	Chevrolet	Cruze	Serial Data Gateway Module - Processor 1	√	√	√			
2022	Chevrolet	Cruze	Serial Data Gateway Module - Processor 2	√	√	√			
2022	Chevrolet	Cruze	Steering Column Lock Control Module	√	√	√	√		
2022	Chevrolet	Cruze	Keyless Entry Control Module	√	√	√	√	√	
2022	Chevrolet	Cruze	Power Steering Control Module	√	√	√	√		0081 0080 0089
2022	Chevrolet	Cruze	Frontview Camera - Windshield	√	√	√	√		0196 0084
2022	Chevrolet	Equinox	Engine Control Module	√	√	√	√	√	0263 0156 0209 0147 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0764 0763 0258 0139 0020 0132 0067
2022	Chevrolet	Equinox	Transmission Control Module	√	√	√	√	√	0017 0036 0016 075C
2022	Chevrolet	Equinox	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0229 0111
2022	Chevrolet	Equinox	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2022	Chevrolet	Equinox	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	Chevrolet	Equinox	Instrument Cluster	√	√	√	√	√	0247
2022	Chevrolet	Equinox	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Chevrolet	Equinox	HVAC Controls	√	√	√	√		
2022	Chevrolet	Equinox	Serial Data Gateway Module	√	√	√			
2022	Chevrolet	Equinox	Headlamp Control Module	√	√	√	√	√	0195
2022	Chevrolet	Equinox	Liftgate Control Module	√	√	√	√	√	0146 0169
2022	Chevrolet	Equinox	Seat Memory Control Module - Driver	√	√	√	√	√	
2022	Chevrolet	Equinox	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	Chevrolet	Equinox	Amplifier	√	√	√	√		
2022	Chevrolet	Equinox	Radio Controls	√	√	√	√		
2022	Chevrolet	Equinox	Radio	√	√	√	√	√	0150 0226 0269 0267
2022	Chevrolet	Equinox	Video Processing Control Module	√	√	√	√	√	
2022	Chevrolet	Equinox	Parking Assist Control Module	√	√	√	√	√	0247 0271
2022	Chevrolet	Equinox	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	Chevrolet	Equinox	Steering Column Lock Control Module	√	√	√	√		
2022	Chevrolet	Equinox	Keyless Entry Control Module	√	√	√	√	√	
2022	Chevrolet	Equinox	Passenger Presence Module	√	√	√	√	√	0057
2022	Chevrolet	Equinox	Frontview Camera - Windshield	√	√	√	√		0196 0084
2022	Chevrolet	Equinox	Rear Drive Control Module	√	√	√	√	√	0003
2022	Chevrolet	Equinox	Power Steering Control Module	√	√	√	√		0081 0080 0089
2022	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0263 0209 076C 0115 076D 0060 079A 0044 0045 0086 0097 0171 0219 0792 0217 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0156 0076 0020 0132 0067 0154 0212 0214 0258 0757 0006
2022	Chevrolet	Express	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2022	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0225 0111 0277 0090
2022	Chevrolet	Express	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2022	Chevrolet	Express	Body Control Module	√	√	√	√	√	0263 0261
2022	Chevrolet	Express	Theft Deterrent Module	√	√	√	√		
2022	Chevrolet	Express	Instrument Cluster	√	√	√	√	√	

2022	Chevrolet	Express	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2022	Chevrolet	Express	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2022	Chevrolet	Express	Radio	√	√	√	√	√	
2022	Chevrolet	Express	Parking Assist Control Module	√	√	√	√	√	0247
2022	Chevrolet	Express	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	Chevrolet	Express	Side Obstacle Detection Control Module - Right	√	√	√		√	
2022	Chevrolet	Express	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2022	Chevrolet	Express	Frontview Camera - Windshield	√	√	√	√		0196
2022	Chevrolet	Express	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2022	Chevrolet	Express	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2022	Chevrolet	Labo	Fuel Injector Control Module	√	√	√	√	√	
2022	Chevrolet	Malibu	Engine Control Module	√	√	√	√	√	0263 0209 075D 075E 075F 0760 0115 0756 0761 0086 0213 0757 0212 0217 0762 0006 0144 0258 0139 0763 0764 0765 0156 0147 0085 0154 0221 0214 0076 0132 0067 0236
2022	Chevrolet	Malibu	Transmission Control Module	√	√	√	√	√	0017 0036 0016 075C
2022	Chevrolet	Malibu	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2022	Chevrolet	Malibu	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2022	Chevrolet	Malibu	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Chevrolet	Malibu	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0158
2022	Chevrolet	Malibu	Instrument Cluster	√	√	√	√	√	0247
2022	Chevrolet	Malibu	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Chevrolet	Malibu	HVAC Controls	√	√	√	√		
2022	Chevrolet	Malibu	Headlamp Control Module	√	√	√	√	√	0195
2022	Chevrolet	Malibu	Seat Memory Control Module - Driver	√	√	√	√	√	
2022	Chevrolet	Malibu	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	Chevrolet	Malibu	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2022	Chevrolet	Malibu	Amplifier	√	√	√	√		
2022	Chevrolet	Malibu	Radio Controls	√	√	√	√		0241
2022	Chevrolet	Malibu	Radio	√	√	√	√	√	0150 0226 0269 0267
2022	Chevrolet	Malibu	Keyless Entry Control Module	√	√	√	√	√	
2022	Chevrolet	Malibu	Passenger Presence Module	√	√	√	√	√	0057
2022	Chevrolet	Malibu	Parking Assist Control Module	√	√	√	√	√	0247 0271
2022	Chevrolet	Malibu	Serial Data Gateway Module - Processor 1	√	√	√			

2022	Chevrolet	Malibu	Serial Data Gateway Module - Processor 2	√	√	√			
2022	Chevrolet	Malibu	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	Chevrolet	Malibu	Side Obstacle Detection Control Module - Right	√	√	√		√	
2022	Chevrolet	Malibu	Steering Column Lock Control Module	√	√	√	√		
2022	Chevrolet	Malibu	Power Steering Control Module	√	√	√	√		0081 0080 0089
2022	Chevrolet	Malibu	Active Safety Control Module	√	√	√	√		
2022	Chevrolet	Malibu	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	Chevrolet	Malibu	Frontview Camera - Windshield	√	√	√	√		0196
2022	Chevrolet	Max	Engine Control Module	√	√	√	√	√	0069 0087 079C
2022	Chevrolet	Max	Electronic Brake Control Module	√	√	√	√	√	
2022	Chevrolet	Max	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2022	Chevrolet	Move	Engine Control Module	√	√	√	√	√	0069 0087 079C
2022	Chevrolet	Move	Electronic Brake Control Module	√	√	√	√	√	
2022	Chevrolet	Move	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2022	Chevrolet	Nexia	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2022	Chevrolet	Nexia	Transmission Control Module	√	√	√	√	√	0017 0036
2022	Chevrolet	Nexia	Electronic Brake Control Module	√	√	√	√	√	
2022	Chevrolet	Nexia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2022	Chevrolet	Nexia	Instrument Cluster	√	√	√		√	
2022	Chevrolet	Nexia	Tire Pressure Indicator Module	√	√	√	√		079D 0234
2022	Chevrolet	Nexia	Keyless Entry Control Module				√		
2022	Chevrolet	Nexia	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2022	Chevrolet	Nexia	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2022	Chevrolet	Onix	Engine Control Module	√	√	√	√	√	0263 0156 0209 0774 0212 0217 0258 0086 0775 0139 079E 0085 0154 0144 0115 0132
2022	Chevrolet	Onix	Transmission Control Module	√	√	√	√	√	0017
2022	Chevrolet	Onix	Electronic Brake Control Module	√	√	√	√	√	0090
2022	Chevrolet	Onix	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0111 0172 0134 0758
2022	Chevrolet	Onix	Body Control Module	√	√	√	√	√	0269 0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0222 0150
2022	Chevrolet	Onix	Instrument Cluster	√	√	√	√	√	0247
2022	Chevrolet	Onix	HVAC Control Module	√	√	√	√	√	0007
2022	Chevrolet	Onix	Serial Data Gateway Module	√	√	√			
2022	Chevrolet	Onix	Firewall Control Module	√	√	√	√	√	0269
2022	Chevrolet	Onix	Radio	√	√	√	√	√	
2022	Chevrolet	Onix	Parking Assist Control Module	√	√	√	√	√	
2022	Chevrolet	Onix	Electric Power Steering Control Module	√	√	√	√		079F

2022	Chevrolet	Onix	Telematics Communication Interface Control Module	√	√	√	√		
2022	Chevrolet	Onix	Passenger Presence Module	√	√	√	√		0057
2022	Chevrolet	Onix	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2022	Chevrolet	Onix	Power Steering Control Module	√	√	√	√		0207
2022	Chevrolet	Optra	Transmission Control Module	√	√	√	√	√	0017 0036
2022	Chevrolet	Optra	Electronic Brake Control Module	√	√	√	√	√	
2022	Chevrolet	Optra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2022	Chevrolet	Optra	Body Control Module	√	√	√	√	√	
2022	Chevrolet	Optra	Instrument Cluster	√	√	√	√	√	
2022	Chevrolet	Optra	Power Steering Control Module	√	√	√	√		0089 0081 0080
2022	Chevrolet	Prisma	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0115
2022	Chevrolet	Prisma	Electronic Brake Control Module	√	√	√	√	√	0090
2022	Chevrolet	Prisma	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Chevrolet	Prisma	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	Chevrolet	Prisma	Instrument Cluster	√	√	√	√	√	0247
2022	Chevrolet	Prisma	Serial Data Gateway Module	√	√	√			
2022	Chevrolet	Prisma	Passenger Presence Module	√	√	√	√		0057
2022	Chevrolet	Prisma	Power Steering Control Module	√	√	√	√		0207
2022	Chevrolet	Prisma	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2022	Chevrolet	S10	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0210 0224 0130 0222 0066 0147 0060 0044 0045 0109 0068 0084 0070 0071 0074 0075 0043 0173 0179 0181 0183 0185
2022	Chevrolet	S10	Transmission Control Module	√	√	√	√	√	0016
2022	Chevrolet	S10	Electronic Brake Control Module	√	√	√	√	√	0090 0112 0111
2022	Chevrolet	S10	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Chevrolet	S10	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	Chevrolet	S10	Instrument Cluster	√	√	√	√	√	0247
2022	Chevrolet	S10	HVAC Control Module	√	√	√	√	√	0007 0129

2022	Chevrolet	S10	HVAC Controls	√	√	√	√		
2022	Chevrolet	S10	Serial Data Gateway Module	√	√	√			
2022	Chevrolet	S10	Frontview Camera - Windshield	√	√	√	√	√	0196
2022	Chevrolet	S10	Radio	√	√	√	√	√	0150 0226 0269 0121 0793 0267
2022	Chevrolet	S10	Parking Assist Control Module	√	√	√	√	√	0247 0271
2022	Chevrolet	S10	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	Chevrolet	S10	Side Obstacle Detection Control Module - Right	√	√	√		√	
2022	Chevrolet	S10	Trailer Lighting Control Module	√	√	√	√	√	0247
2022	Chevrolet	S10	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	Chevrolet	S10	Passenger Presence Module	√	√	√	√	√	0057
2022	Chevrolet	S10	Transfer Case Control Module	√	√	√	√	√	0037
2022	Chevrolet	S10	Power Steering Control Module	√	√	√	√		0093 0090
2022	Chevrolet	S10	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2022	Chevrolet	Sail	Engine Control Module	√	√	√	√	√	0156 0020 0140
2022	Chevrolet	Sail	Transmission Control Module	√	√	√	√	√	0016
2022	Chevrolet	Sail	Electronic Brake Control Module	√	√	√	√	√	0111 0090
2022	Chevrolet	Sail	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261 0111
2022	Chevrolet	Sail	Body Control Module	√	√	√	√	√	0263
2022	Chevrolet	Sail	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Chevrolet	Sail	Radio/HVAC Controls	√	√	√	√	√	0150
2022	Chevrolet	Sail	Power Steering Control Module	√	√	√	√		0081 0089
2022	Chevrolet	Sail	Radio	√	√	√	√	√	
2022	Chevrolet	Sail	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2022	Chevrolet	Sail	Telematics Communication Interface Control Module	√	√	√		√	
2022	Chevrolet	Silverado	Engine Control Module	√	√	√	√	√	0263 0209 076C 0115 0086 0217 0006 0131 0258 0139 0067 0212 07A9 076D 0058 079A 0045 0044 0088 0097 0219 0221 0792 0757 07AA 0073 0072 0070 0071 0117 0118 0119 077E 0178 0180 0182 0184 0186 0188 0190
2022	Chevrolet	Silverado	Transmission Control Module	√	√	√	√	√	0016 0033 0017
2022	Chevrolet	Silverado	Electronic Brake Control Module	√	√	√	√	√	0229 0225 0090 0758 0767 0768 078E 078F
2022	Chevrolet	Silverado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2022	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	Chevrolet	Silverado	Instrument Cluster	√	√	√	√	√	0247
2022	Chevrolet	Silverado	Transfer Case Control Module	√	√	√	√	√	0037 0776 07A6 0099
2022	Chevrolet	Silverado	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 07AB 0009 07AC
2022	Chevrolet	Silverado	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2022	Chevrolet	Silverado	Rear Gate Module	√	√	√	√		
2022	Chevrolet	Silverado	Audio Amplifier	√	√	√	√		
2022	Chevrolet	Silverado	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2022	Chevrolet	Silverado	Radio	√	√	√	√	√	0769 0269
2022	Chevrolet	Silverado	Trailer Lighting Control Module	√	√	√	√	√	
2022	Chevrolet	Silverado	Video Processing Control Module	√	√	√	√	√	
2022	Chevrolet	Silverado	Parking Assist Control Module	√	√	√	√	√	0247
2022	Chevrolet	Silverado	Serial Data Gateway Module - Processor 1	√	√	√			
2022	Chevrolet	Silverado	Serial Data Gateway Module - Processor 2	√	√	√			
2022	Chevrolet	Silverado	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	Chevrolet	Silverado	Side Obstacle Detection Control Module - Right	√	√	√		√	
2022	Chevrolet	Silverado	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2022	Chevrolet	Silverado	Steering Column Lock Control Module	√	√	√	√		
2022	Chevrolet	Silverado	Keyless Entry Control Module	√	√	√	√	√	
2022	Chevrolet	Silverado	Passenger Presence Module	√	√	√	√	√	0057
2022	Chevrolet	Silverado	Assist Step Control Module	√	√	√	√	√	
2022	Chevrolet	Silverado	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A 0084
2022	Chevrolet	Silverado	Seat Memory Control Module - Driver	√	√	√	√	√	
2022	Chevrolet	Silverado	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	Chevrolet	Silverado	Power Steering Control Module	√	√	√	√		0089 0084 0273 0082
2022	Chevrolet	Silverado	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2022	Chevrolet	Spark	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0115
2022	Chevrolet	Spark	Transmission Control Module	√	√	√	√	√	0017
2022	Chevrolet	Spark	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2022	Chevrolet	Spark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Chevrolet	Spark	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150

2022	Chevrolet	Spark	Instrument Cluster	√	√	√	√	√	0247
2022	Chevrolet	Spark	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Chevrolet	Spark	HVAC Controls	√	√	√	√		
2022	Chevrolet	Spark	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	Chevrolet	Spark	Radio	√	√	√	√	√	0150 0226 0269
2022	Chevrolet	Spark	Parking Assist Control Module	√	√	√	√	√	0247 0271
2022	Chevrolet	Spark	Serial Data Gateway Module - Processor 1	√	√	√			
2022	Chevrolet	Spark	Serial Data Gateway Module - Processor 2	√	√	√			
2022	Chevrolet	Spark	Steering Column Lock Control Module	√	√	√	√		
2022	Chevrolet	Spark	Keyless Entry Control Module	√	√	√	√	√	
2022	Chevrolet	Spark	Passenger Presence Module	√	√	√	√	√	0057
2022	Chevrolet	Spark	Short Range Remote Control Transceiver	√	√	√	√		
2022	Chevrolet	Spark	Power Steering Control Module	√	√	√	√		0089
2022	Chevrolet	Spark	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2022	Chevrolet	Spin	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0115
2022	Chevrolet	Spin	Transmission Control Module	√	√	√	√	√	0017 0036
2022	Chevrolet	Spin	Electronic Brake Control Module	√	√	√	√	√	0090
2022	Chevrolet	Spin	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Chevrolet	Spin	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	Chevrolet	Spin	Instrument Cluster	√	√	√	√	√	0247
2022	Chevrolet	Spin	Serial Data Gateway Module	√	√	√			
2022	Chevrolet	Spin	Telematics Communication Interface Control Module	√	√	√		√	
2022	Chevrolet	Spin	Radio	√	√	√	√	√	0226
2022	Chevrolet	Spin	Parking Assist Control Module	√	√	√	√	√	0247 0271
2022	Chevrolet	Spin	Power Steering Control Module	√	√	√	√		0207
2022	Chevrolet	Spin	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2022	Chevrolet	Lacetti	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2022	Chevrolet	Lacetti	Transmission Control Module	√	√	√	√	√	0017 0036
2022	Chevrolet	Lacetti	Electronic Brake Control Module	√	√	√	√	√	
2022	Chevrolet	Lacetti	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2022	Chevrolet	Lacetti	Variable Power Steering Control Module				√	√	



2022	Chevrolet	Suburban	Engine Control Module	√	√	√	√	√	0263 0209 0774 076C 0115 0086 0085 0757 0212 0217 0775 0258 0139 0777 075E 075F 0778 076D 0779 0097 0221 077A 077B 077C 077D 0764 0763 0117 0119 077E 077F 0780 0781 0782 0783 0784
2022	Chevrolet	Suburban	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2022	Chevrolet	Suburban	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2022	Chevrolet	Suburban	Restraints Control Module	√	√	√	√	√	0758 0134
2022	Chevrolet	Suburban	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2022	Chevrolet	Suburban	Instrument Panel Cluster Control Module	√	√	√	√	√	
2022	Chevrolet	Suburban	Serial Data Gateway Module	√	√	√			
2022	Chevrolet	Suburban	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2022	Chevrolet	Suburban	Telematics Control Module	√	√	√	√		0270
2022	Chevrolet	Suburban	Running Board Control Module	√	√	√	√	√	
2022	Chevrolet	Suburban	Trailer Lamp Control Module	√	√	√	√	√	
2022	Chevrolet	Suburban	Video Processing Module	√	√	√			
2022	Chevrolet	Suburban	Wireless Accessory Charging Module	√	√	√	√		
2022	Chevrolet	Suburban	Audio Amplifier	√	√	√	√		
2022	Chevrolet	Suburban	Heater and Air Conditioning Auxiliary Control	√	√	√			
2022	Chevrolet	Suburban	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2022	Chevrolet	Suburban	Video Display - Right Front Seat Back	√	√	√			
2022	Chevrolet	Suburban	Radio	√	√	√	√	√	0769
2022	Chevrolet	Suburban	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2022	Chevrolet	Suburban	Gear Shift Control Module	√					
2022	Chevrolet	Suburban	Parking Assist Control Module	√	√	√	√	√	
2022	Chevrolet	Suburban	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2022	Chevrolet	Suburban	Side Obstacle Detection Control Module - Right	√	√	√			
2022	Chevrolet	Suburban	Steering Column Lock Control Module	√	√	√	√		
2022	Chevrolet	Suburban	Lighting Control Module	√	√	√	√	√	
2022	Chevrolet	Suburban	Rear Gate Module	√	√	√	√		0753
2022	Chevrolet	Suburban	Frontview Camera - Windshield	√	√	√	√		0196
2022	Chevrolet	Suburban	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	Chevrolet	Suburban	Image Processing Module	√	√	√	√		
2022	Chevrolet	Suburban	Short Range Radar Sensor - Left Front	√	√	√			0772
2022	Chevrolet	Suburban	Short Range Radar Sensor - Left Rear	√	√	√			0772
2022	Chevrolet	Suburban	Short Range Radar Sensor - Right Front	√	√	√			0772
2022	Chevrolet	Suburban	Short Range Radar Sensor - Right Rear	√	√	√			0772

2022	Chevrolet	Suburban	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2022	Chevrolet	Suburban	UHF Short Range Low Energy Remote Control Access Transceiver	√	√	√			
2022	Chevrolet	Suburban	Chassis Control Module - Auxiliary	√	√	√	√		
2022	Chevrolet	Suburban	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2022	Chevrolet	Suburban	Electronic Suspension Control Module	√	√	√	√	√	0198
2022	Chevrolet	Suburban	Power Steering Control Module	√	√	√	√		0089
2022	Chevrolet	Tahoe	Engine Control Module	√	√	√	√	√	0263 0209 0774 076C 0115 0086 0085 0757 0212 0217 0775 0258 0139 0777 075E 075F 0778 076D 0779 0097 0221 077A 077B 077C 077D 0764 0763 0117 0119 077E 077F 0780 0781 0782 0783 0784
2022	Chevrolet	Tahoe	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2022	Chevrolet	Tahoe	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2022	Chevrolet	Tahoe	Restraints Control Module	√	√	√	√	√	0758 0134
2022	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2022	Chevrolet	Tahoe	Instrument Panel Cluster Control Module	√	√	√	√	√	
2022	Chevrolet	Tahoe	Serial Data Gateway Module	√	√	√			
2022	Chevrolet	Tahoe	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2022	Chevrolet	Tahoe	Telematics Control Module	√	√	√	√		0270
2022	Chevrolet	Tahoe	Audio Amplifier	√	√	√	√		
2022	Chevrolet	Tahoe	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2022	Chevrolet	Tahoe	Heater and Air Conditioning Auxiliary Control	√	√	√			
2022	Chevrolet	Tahoe	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2022	Chevrolet	Tahoe	Radio	√	√	√	√	√	0769
2022	Chevrolet	Tahoe	Video Display - Right Front Seat Back	√	√	√			
2022	Chevrolet	Tahoe	Running Board Control Module	√	√	√	√	√	
2022	Chevrolet	Tahoe	Trailer Lamp Control Module	√	√	√	√	√	
2022	Chevrolet	Tahoe	Video Processing Module	√	√	√			
2022	Chevrolet	Tahoe	Wireless Accessory Charging Module	√	√	√	√		
2022	Chevrolet	Tahoe	Gear Shift Control Module	√					
2022	Chevrolet	Tahoe	Lighting Control Module	√	√	√	√	√	
2022	Chevrolet	Tahoe	Parking Assist Control Module	√	√	√	√	√	
2022	Chevrolet	Tahoe	Side Obstacle Detection Control Module - Left	√	√	√	√		076F

2022	Chevrolet	Tahoe	Side Obstacle Detection Control Module - Right	√	√	√			
2022	Chevrolet	Tahoe	Steering Column Lock Control Module	√	√	√	√		
2022	Chevrolet	Tahoe	Rear Gate Module	√	√	√	√		0753
2022	Chevrolet	Tahoe	Frontview Camera - Windshield	√	√	√	√		0196
2022	Chevrolet	Tahoe	Image Processing Module	√	√	√	√		
2022	Chevrolet	Tahoe	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	Chevrolet	Tahoe	Short Range Radar Sensor - Left Front	√	√	√			0772
2022	Chevrolet	Tahoe	Short Range Radar Sensor - Left Rear	√	√	√			0772
2022	Chevrolet	Tahoe	Short Range Radar Sensor - Right Front	√	√	√			0772
2022	Chevrolet	Tahoe	Short Range Radar Sensor - Right Rear	√	√	√			0772
2022	Chevrolet	Tahoe	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2022	Chevrolet	Tahoe	UHF Short Range Low Energy Remote Control Access Transceiver	√	√	√			
2022	Chevrolet	Tahoe	Chassis Control Module - Auxiliary	√	√	√	√		
2022	Chevrolet	Tahoe	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2022	Chevrolet	Tahoe	Electronic Suspension Control Module	√	√	√	√	√	0198
2022	Chevrolet	Tahoe	Power Steering Control Module	√	√	√	√		0089
2022	Chevrolet	Tracker	Engine Control Module	√	√	√	√	√	0263 0156 0209 0774 0212 0217 0258 0086 0775 0139 079E 0085
2022	Chevrolet	Tracker	Transmission Control Module	√	√	√	√	√	0017
2022	Chevrolet	Tracker	Electronic Brake Control Module	√	√	√	√	√	
2022	Chevrolet	Tracker	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2022	Chevrolet	Tracker	Body Control Module	√	√	√	√	√	0269
2022	Chevrolet	Tracker	Instrument Cluster	√	√	√	√	√	
2022	Chevrolet	Tracker	HVAC Control Module	√	√	√	√	√	0007
2022	Chevrolet	Tracker	Firewall Control Module	√	√	√	√	√	0269
2022	Chevrolet	Tracker	Radio	√	√	√	√	√	
2022	Chevrolet	Tracker	Parking Assist Control Module	√	√	√	√	√	
2022	Chevrolet	Tracker	Telematics Communication Interface Control Module	√	√	√	√		
2022	Chevrolet	Tracker	Frontview Camera - Windshield	√	√	√	√		0269
2022	Chevrolet	Tracker	Electric Power Steering Control Module	√	√	√	√		079F

2022	Chevrolet	Trailblazer	Engine Control Module	√	√	√	√	√	0263 0209 0132 0115 0086 0212 0214 0217 0006 0144 0139 0757 0085 075D 075E 075F 0760 0756 0761 0213 0762 0258 0763 0764 0765 0791 076C 076D 0058 0097 0219 0221 0792 0073 0072 0070 0071 0117 0119 077E 0178 0180 0182 0184
2022	Chevrolet	Trailblazer	Transmission Control Module	√	√	√	√	√	0017 0016 075C
2022	Chevrolet	Trailblazer	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2022	Chevrolet	Trailblazer	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Chevrolet	Trailblazer	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	Chevrolet	Trailblazer	Instrument Cluster	√	√	√	√	√	0247
2022	Chevrolet	Trailblazer	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Chevrolet	Trailblazer	HVAC Controls	√	√	√	√	√	
2022	Chevrolet	Trailblazer	Headlamp Control Module	√	√	√	√	√	0195
2022	Chevrolet	Trailblazer	Liftgate Control Module	√	√	√	√	√	0146 0169
2022	Chevrolet	Trailblazer	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	Chevrolet	Trailblazer	Amplifier	√	√	√	√	√	
2022	Chevrolet	Trailblazer	Radio	√	√	√	√	√	0150 0226 0269 0121 0793 0267
2022	Chevrolet	Trailblazer	Rear Drive Control Module	√	√	√	√	√	0003
2022	Chevrolet	Trailblazer	Head-Up Display Module	√	√	√	√	√	
2022	Chevrolet	Trailblazer	Parking Assist Control Module	√	√	√	√	√	0247
2022	Chevrolet	Trailblazer	Serial Data Gateway Module - Processor 1	√	√	√	√	√	
2022	Chevrolet	Trailblazer	Serial Data Gateway Module - Processor 2	√	√	√	√	√	
2022	Chevrolet	Trailblazer	Side Obstacle Detection Control Module - Left	√	√	√	√	√	
2022	Chevrolet	Trailblazer	Side Obstacle Detection Control Module - Right	√	√	√	√	√	
2022	Chevrolet	Trailblazer	Keyless Entry Control Module	√	√	√	√	√	
2022	Chevrolet	Trailblazer	Frontview Camera - Windshield	√	√	√	√	√	0196 075A
2022	Chevrolet	Trailblazer	Power Steering Control Module	√	√	√	√	√	0089 0084
2022	Chevrolet	Trailblazer	Passenger Presence Module	√	√	√	√	√	0057

2022	Chevrolet	Traverse	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0756 0085 0757
2022	Chevrolet	Traverse	Transmission Control Module	√	√	√	√	√	0017
2022	Chevrolet	Traverse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Chevrolet	Traverse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	Chevrolet	Traverse	Instrument Cluster	√	√	√	√	√	0247
2022	Chevrolet	Traverse	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Chevrolet	Traverse	HVAC Controls	√	√	√	√		
2022	Chevrolet	Traverse	Liftgate Control Module	√	√	√	√	√	0146 0169
2022	Chevrolet	Traverse	Seat Memory Control Module - Driver	√	√	√	√	√	
2022	Chevrolet	Traverse	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	Chevrolet	Traverse	Amplifier	√	√	√	√		
2022	Chevrolet	Traverse	Radio Controls	√	√	√	√		0241
2022	Chevrolet	Traverse	Radio	√	√	√	√	√	0150 0226 0269 0267
2022	Chevrolet	Traverse	Video Processing Control Module	√	√	√	√	√	
2022	Chevrolet	Traverse	Keyless Entry Control Module	√	√	√	√	√	0759
2022	Chevrolet	Traverse	Passenger Presence Module	√	√	√	√	√	0057
2022	Chevrolet	Traverse	Parking Assist Control Module	√	√	√	√	√	0247 0271
2022	Chevrolet	Traverse	Serial Data Gateway Module - Processor 1	√	√	√			
2022	Chevrolet	Traverse	Serial Data Gateway Module - Processor 2	√	√	√			
2022	Chevrolet	Traverse	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	Chevrolet	Traverse	Steering Column Lock Control Module	√	√	√	√		
2022	Chevrolet	Traverse	Side Obstacle Detection Control Module - Right	√	√	√		√	
2022	Chevrolet	Traverse	Active Safety Control Module	√	√	√	√		
2022	Chevrolet	Traverse	Frontview Camera - Windshield	√	√	√	√		0196
2022	Chevrolet	Traverse	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	Chevrolet	Traverse	Rear Drive Control Module	√	√	√	√	√	0003
2022	Chevrolet	Trax	Engine Control Module	√	√	√	√	√	0263 0156 0209 0147 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0764 0763 0258 0139 0020 0132 0067 0066 0760
2022	Chevrolet	Trax	Transmission Control Module	√	√	√	√	√	0017 0036
2022	Chevrolet	Trax	Electronic Brake Control Module	√	√	√	√	√	0090
2022	Chevrolet	Trax	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2022	Chevrolet	Trax	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	Chevrolet	Trax	Instrument Cluster	√	√	√	√	√	0247
2022	Chevrolet	Trax	HVAC Control Module	√	√	√	√	√	0007 0129
2022	Chevrolet	Trax	Serial Data Gateway Module	√	√	√			
2022	Chevrolet	Trax	Front Seat Heating Control Module	√	√	√	√	√	
2022	Chevrolet	Trax	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0755
2022	Chevrolet	Trax	Radio	√	√	√	√	√	0150 0226 0269
2022	Chevrolet	Trax	Chassis Control Module	√	√	√	√	√	0217
2022	Chevrolet	Trax	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2022	Chevrolet	Trax	Rear Drive Control Module	√	√	√	√		0003 075B
2022	Chevrolet	Trax	Parking Assist Control Module	√	√	√	√	√	0247 0271
2022	Chevrolet	Trax	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	Chevrolet	Trax	Keyless Entry Control Module	√	√	√	√	√	
2022	Chevrolet	Trax	Passenger Presence Module	√	√	√	√		0057
2022	Chevrolet	Trax	Power Steering Control Module	√	√	√	√		0207
2022	Chevrolet	Trax	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2022	Chevrolet	Trax	Steering Column Lock Control Module	√	√	√	√		
2022	Chevrolet	Work	Engine Control Module	√	√	√	√	√	0069 0087 079C
2022	Chevrolet	Work	Electronic Brake Control Module	√	√	√	√	√	
2022	Chevrolet	Work	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2022	GMC	Acadia	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 0156 0020 0132 0067 0154 0213 0214 0756
2022	GMC	Acadia	Transmission Control Module	√	√	√	√	√	0017
2022	GMC	Acadia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	GMC	Acadia	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	GMC	Acadia	Instrument Cluster	√	√	√	√	√	0247
2022	GMC	Acadia	HVAC Control Module	√	√	√	√	√	0007 0129
2022	GMC	Acadia	HVAC Controls	√	√	√	√		
2022	GMC	Acadia	Liftgate Control Module	√	√	√	√	√	0146 0169
2022	GMC	Acadia	Seat Memory Control Module - Driver	√	√	√	√	√	

2022	GMC	Acadia	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	GMC	Acadia	Amplifier	√	√	√	√		
2022	GMC	Acadia	Radio	√	√	√	√	√	0150 0226 0269 0267
2022	GMC	Acadia	Video Processing Control Module	√	√	√	√	√	
2022	GMC	Acadia	Parking Assist Control Module	√	√	√	√	√	0247
2022	GMC	Acadia	Serial Data Gateway Module - Processor 1	√	√	√			
2022	GMC	Acadia	Serial Data Gateway Module - Processor 2	√	√	√			
2022	GMC	Acadia	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	GMC	Acadia	Side Obstacle Detection Control Module - Right	√	√	√		√	
2022	GMC	Acadia	Steering Column Lock Control Module	√	√	√	√		
2022	GMC	Acadia	Keyless Entry Control Module	√	√	√	√	√	0759
2022	GMC	Acadia	Passenger Presence Module	√	√	√	√	√	0057
2022	GMC	Acadia	Active Safety Control Module	√	√	√	√		
2022	GMC	Acadia	Frontview Camera - Windshield	√	√	√	√		0196
2022	GMC	Acadia	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	GMC	Acadia	Rear Drive Control Module	√	√	√	√	√	0003
2022	GMC	Canyon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 076C 076D 0060 079A 0044 0045 0097 0171 0219 0792 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0756 0085
2022	GMC	Canyon	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2022	GMC	Canyon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2022	GMC	Canyon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	GMC	Canyon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	GMC	Canyon	Instrument Cluster	√	√	√	√	√	0247
2022	GMC	Canyon	HVAC Control Module	√	√	√	√	√	0007 0129
2022	GMC	Canyon	HVAC Controls	√	√	√	√		
2022	GMC	Canyon	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	GMC	Canyon	Amplifier	√	√	√	√		
2022	GMC	Canyon	Radio	√	√	√	√	√	0150 0226 0269 0267
2022	GMC	Canyon	Parking Assist Control Module	√	√	√	√	√	0247

2022	GMC	Canyon	Serial Data Gateway Module - Processor 1	√	√	√			
2022	GMC	Canyon	Serial Data Gateway Module - Processor 2	√	√	√			
2022	GMC	Canyon	Passenger Presence Module	√	√	√	√	√	0057
2022	GMC	Canyon	Frontview Camera - Windshield	√	√	√	√	√	0196
2022	GMC	Canyon	Transfer Case Control Module	√	√	√	√	√	0037
2022	GMC	Canyon	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2022	GMC	Canyon	Power Steering Control Module	√	√	√	√		0093 0090
2022	GMC	Hummer	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2022	GMC	Hummer	Restraints Control Module	√	√	√	√	√	0758 0134
2022	GMC	Hummer	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2022	GMC	Hummer	Instrument Panel Cluster Control Module	√	√	√	√	√	
2022	GMC	Hummer	Serial Data Gateway Module	√	√	√			
2022	GMC	Hummer	Telematics Control Module	√	√	√	√		0270
2022	GMC	Hummer	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2022	GMC	Hummer	Chassis Control Module - Auxiliary						
2022	GMC	Hummer	Wireless Accessory Charging Module	√	√	√	√		
2022	GMC	Hummer	Audio Amplifier	√	√	√	√		
2022	GMC	Hummer	Automated Driving Mapping Module	√	√	√	√	√	
2022	GMC	Hummer	Heater and Air Conditioning Auxiliary Control	√	√	√			
2022	GMC	Hummer	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2022	GMC	Hummer	Radio	√	√	√	√	√	0269 0769
2022	GMC	Hummer	Parking Assist Control Module	√	√	√	√	√	
2022	GMC	Hummer	Lighting Control Module	√	√	√	√	√	
2022	GMC	Hummer	Video Processing Module	√	√	√			
2022	GMC	Hummer	Trailer Lamp Control Module	√	√	√	√	√	
2022	GMC	Hummer	UHF Short Range Low Energy Remote Control Access Transceiver	√	√	√	√		
2022	GMC	Hummer	Powertrain Compartment Cover Module	√	√	√	√	√	07A0 07A1 07A2 07A3 07A4 07A5
2022	GMC	Hummer	Steering Column Lock Control Module	√	√	√	√		
2022	GMC	Hummer	Drive Motor Control Module 1		√	√		√	
2022	GMC	Hummer	Image Processing Module 1 - Processor 1	√	√	√	√		
2022	GMC	Hummer	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2022	GMC	Hummer	Image Processing Module 1 - Processor 2	√	√	√			0758
2022	GMC	Hummer	Frontview Camera - Windshield	√	√	√	√		0196
2022	GMC	Hummer	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	GMC	Hummer	Driver Monitoring System Control Module	√	√	√			
2022	GMC	Hummer	Short Range Radar Sensor - Left Front	√	√	√			0772
2022	GMC	Hummer	Short Range Radar Sensor - Left Rear	√	√	√			0772



2022	GMC	Hummer	Short Range Radar Sensor - Right Front	√	√	√			0772
2022	GMC	Hummer	Short Range Radar Sensor - Right Rear	√	√	√			0772
2022	GMC	Hummer	Gear Shift Control Module	√					
2022	GMC	Hummer	Drive Motor Control Module 2		√	√		√	
2022	GMC	Hummer	Drive Motor Control Module 3		√	√		√	
2022	GMC	Hummer	Battery Energy Control Module 1		√	√		√	
2022	GMC	Hummer	Battery Energy Control Module 2		√	√		√	
2022	GMC	Hummer	Electronic Suspension Control Module	√	√	√	√	√	0198
2022	GMC	Hummer	Power Steering Control Module	√	√	√	√		0089
2022	GMC	Hummer	Rear Wheel Steering Control Module	√	√	√			
2022	GMC	Hummer	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2022	GMC	Savana	Engine Control Module	√	√	√	√	√	0263 0209 076C 0115 076D 0060 079A 0044 0045 0086 0097 0171 0219 0792 0217 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0156 0076 0020 0132 0067 0154 0212 0214 0258 0757 0006
2022	GMC	Savana	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2022	GMC	Savana	Electronic Brake Control Module	√	√	√	√	√	0225 0111 0277 0090
2022	GMC	Savana	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2022	GMC	Savana	Body Control Module	√	√	√	√	√	0263 0261
2022	GMC	Savana	Theft Deterrent Module	√	√	√	√		
2022	GMC	Savana	Instrument Cluster	√	√	√	√	√	
2022	GMC	Savana	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2022	GMC	Savana	Radio	√	√	√	√	√	
2022	GMC	Savana	Parking Assist Control Module	√	√	√	√	√	0247
2022	GMC	Savana	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	GMC	Savana	Side Obstacle Detection Control Module - Right	√	√	√		√	
2022	GMC	Savana	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2022	GMC	Savana	Frontview Camera - Windshield	√	√	√	√		0196
2022	GMC	Savana	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2022	GMC	Savana	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084

2022	GMC	Sierra	Engine Control Module	√	√	√	√	√	0263 0209 076C 0115 0086 0217 0006 0131 0258 0139 0067 0212 07A9 076D 0058 079A 0045 0044 0088 0097 0219 0221 0792 0757 07AA 0073 0072 0070 0071 0117 0118 0119 077E 0178 0180 0182 0184 0186 0188 0190
2022	GMC	Sierra	Transmission Control Module	√	√	√	√	√	0016 0033 0017
2022	GMC	Sierra	Brake System Control Module	√	√	√	√	√	0229 0225 0090 0758 0767 0768 078E 078F
2022	GMC	Sierra	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0771 0277 078F 0790
2022	GMC	Sierra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	GMC	Sierra	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	GMC	Sierra	Instrument Cluster	√	√	√	√	√	0247
2022	GMC	Sierra	Transfer Case Control Module	√	√	√	√	√	0037 0776 07A6 0099
2022	GMC	Sierra	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2022	GMC	Sierra	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 07AB 0009 07AC
2022	GMC	Sierra	Rear Gate Module	√	√	√	√		
2022	GMC	Sierra	Audio Amplifier	√	√	√	√		
2022	GMC	Sierra	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2022	GMC	Sierra	Radio	√	√	√	√	√	0769 0269
2022	GMC	Sierra	Trailer Lighting Control Module	√	√	√	√	√	
2022	GMC	Sierra	Video Processing Control Module	√	√	√	√	√	
2022	GMC	Sierra	Parking Assist Control Module	√	√	√	√	√	0247
2022	GMC	Sierra	Serial Data Gateway Module - Processor 1	√	√	√			
2022	GMC	Sierra	Serial Data Gateway Module - Processor 2	√	√	√			
2022	GMC	Sierra	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	GMC	Sierra	Side Obstacle Detection Control Module - Right	√	√	√		√	
2022	GMC	Sierra	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2022	GMC	Sierra	Steering Column Lock Control Module	√	√	√	√		
2022	GMC	Sierra	Keyless Entry Control Module	√	√	√	√	√	
2022	GMC	Sierra	Passenger Presence Module	√	√	√	√	√	0057
2022	GMC	Sierra	Assist Step Control Module	√	√	√	√	√	

2022	GMC	Sierra	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A 0084
2022	GMC	Sierra	Seat Memory Control Module - Driver	√	√	√	√	√	
2022	GMC	Sierra	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	GMC	Sierra	Power Steering Control Module	√	√	√	√		0089 0084 0273 0082
2022	GMC	Sierra	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2022	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0114 0258 0128
2022	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0017
2022	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0229 0111
2022	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	GMC	Terrain	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0247
2022	GMC	Terrain	HVAC Control Module	√	√	√	√	√	0007 0129
2022	GMC	Terrain	HVAC Controls	√	√	√	√		
2022	GMC	Terrain	Serial Data Gateway Module	√	√	√			
2022	GMC	Terrain	Headlamp Control Module	√	√	√	√	√	0195
2022	GMC	Terrain	Headlamp High Beam Control Module	√	√	√	√	√	0247
2022	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146 0169
2022	GMC	Terrain	Seat Memory Control Module - Driver	√	√	√	√	√	
2022	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	GMC	Terrain	Amplifier	√	√	√	√		
2022	GMC	Terrain	Radio	√	√	√	√	√	0150 0226 0269 0267
2022	GMC	Terrain	Video Processing Control Module	√	√	√	√	√	
2022	GMC	Terrain	Head-Up Display Module	√	√	√	√	√	
2022	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0247 0271
2022	GMC	Terrain	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	GMC	Terrain	Steering Column Lock Control Module	√	√	√	√		
2022	GMC	Terrain	Keyless Entry Control Module	√	√	√	√	√	
2022	GMC	Terrain	Passenger Presence Module	√	√	√	√	√	0057
2022	GMC	Terrain	Frontview Camera - Windshield	√	√	√	√		0196 0084
2022	GMC	Terrain	Rear Drive Control Module	√	√	√	√	√	0003
2022	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0080 0089

2022	GMC	Yukon	Engine Control Module	√	√	√	√	√	0263 0209 0774 076C 0115 0086 0085 0757 0212 0217 0775 0258 0139 0777 075E 075F 0778 076D 0779 0097 0221 077A 077B 077C 077D 0764 0763 0117 0119 077E 077F 0780 0781 0782 0783 0784
2022	GMC	Yukon	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2022	GMC	Yukon	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2022	GMC	Yukon	Restraints Control Module	√	√	√	√	√	0758 0134
2022	GMC	Yukon	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2022	GMC	Yukon	Instrument Panel Cluster Control Module	√	√	√	√	√	
2022	GMC	Yukon	Serial Data Gateway Module	√	√	√			
2022	GMC	Yukon	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2022	GMC	Yukon	Telematics Control Module	√	√	√	√		0270
2022	GMC	Yukon	Radio	√	√	√	√	√	0769
2022	GMC	Yukon	Audio Amplifier	√	√	√	√		
2022	GMC	Yukon	Video Display - Right Front Seat Back	√	√	√			
2022	GMC	Yukon	Heater and Air Conditioning Auxiliary Control	√	√	√			
2022	GMC	Yukon	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2022	GMC	Yukon	Running Board Control Module	√	√	√	√	√	
2022	GMC	Yukon	Trailer Lamp Control Module	√	√	√	√	√	
2022	GMC	Yukon	Video Processing Module	√	√	√			
2022	GMC	Yukon	Wireless Accessory Charging Module	√	√	√	√		
2022	GMC	Yukon	Rear Gate Module	√	√	√	√		0753
2022	GMC	Yukon	Frontview Camera - Windshield	√	√	√	√		0196
2022	GMC	Yukon	Image Processing Module	√	√	√	√		
2022	GMC	Yukon	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	GMC	Yukon	Short Range Radar Sensor - Left Front	√	√	√			0772
2022	GMC	Yukon	Short Range Radar Sensor - Left Rear	√	√	√			0772
2022	GMC	Yukon	Short Range Radar Sensor - Right Front	√	√	√			0772
2022	GMC	Yukon	Short Range Radar Sensor - Right Rear	√	√	√			0772
2022	GMC	Yukon	Gear Shift Control Module	√					
2022	GMC	Yukon	Lighting Control Module	√	√	√	√	√	
2022	GMC	Yukon	Parking Assist Control Module	√	√	√	√	√	
2022	GMC	Yukon	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2022	GMC	Yukon	Side Obstacle Detection Control Module - Right	√	√	√			
2022	GMC	Yukon	Steering Column Lock Control Module	√	√	√	√		

2022	GMC	Yukon	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2022	GMC	Yukon	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2022	GMC	Yukon	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2022	GMC	Yukon	Chassis Control Module - Auxiliary	√	√	√	√		
2022	GMC	Yukon	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2022	GMC	Yukon	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2022	GMC	Yukon	Electronic Suspension Control Module	√	√	√	√	√	0198
2022	GMC	Yukon	Power Steering Control Module	√	√	√	√		0089
2022	GMC	Yukon XL	Engine Control Module	√	√	√	√	√	0263 0209 0774 076C 0115 0086 0085 0757 0212 0217 0775 0258 0139 0777 075E 075F 0778 076D 0779 0097 0221 077A 077B 077C 077D 0764 0763 0117 0119 077E 077F 0780 0781 0782 0783 0784
2022	GMC	Yukon XL	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2022	GMC	Yukon XL	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2022	GMC	Yukon XL	Restraints Control Module	√	√	√	√	√	0758 0134
2022	GMC	Yukon XL	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2022	GMC	Yukon XL	Instrument Panel Cluster Control Module	√	√	√	√	√	
2022	GMC	Yukon XL	Serial Data Gateway Module	√	√	√			
2022	GMC	Yukon XL	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2022	GMC	Yukon XL	Telematics Control Module	√	√	√	√		0270
2022	GMC	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2022	GMC	Yukon XL	Audio Amplifier	√	√	√	√		
2022	GMC	Yukon XL	Heater and Air Conditioning Auxiliary Control	√	√	√			
2022	GMC	Yukon XL	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2022	GMC	Yukon XL	Radio	√	√	√	√	√	0769
2022	GMC	Yukon XL	Video Display - Right Front Seat Back	√	√	√			
2022	GMC	Yukon XL	Running Board Control Module	√	√	√	√	√	
2022	GMC	Yukon XL	Trailer Lamp Control Module	√	√	√	√	√	
2022	GMC	Yukon XL	Video Processing Module	√	√	√			
2022	GMC	Yukon XL	Wireless Accessory Charging Module	√	√	√	√		
2022	GMC	Yukon XL	Rear Gate Module	√	√	√	√		0753
2022	GMC	Yukon XL	Frontview Camera - Windshield	√	√	√	√		0196
2022	GMC	Yukon XL	Forward Range Radar Sensor - Long Range	√	√	√	√		0260

2022	GMC	Yukon XL	Image Processing Module	√	√	√	√		
2022	GMC	Yukon XL	Short Range Radar Sensor - Left Rear	√	√	√			0772
2022	GMC	Yukon XL	Short Range Radar Sensor - Left Front	√	√	√			0772
2022	GMC	Yukon XL	Short Range Radar Sensor - Right Front	√	√	√			0772
2022	GMC	Yukon XL	Short Range Radar Sensor - Right Rear	√	√	√			0772
2022	GMC	Yukon XL	Gear Shift Control Module	√					
2022	GMC	Yukon XL	Parking Assist Control Module	√	√	√	√	√	
2022	GMC	Yukon XL	Lighting Control Module	√	√	√	√	√	
2022	GMC	Yukon XL	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2022	GMC	Yukon XL	Side Obstacle Detection Control Module - Right	√	√	√			
2022	GMC	Yukon XL	Steering Column Lock Control Module	√	√	√	√		
2022	GMC	Yukon XL	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2022	GMC	Yukon XL	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2022	GMC	Yukon XL	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2022	GMC	Yukon XL	Chassis Control Module - Auxiliary	√	√	√	√		
2022	GMC	Yukon XL	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2022	GMC	Yukon XL	Electronic Suspension Control Module	√	√	√	√	√	0198
2022	Ravon	R4	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139
2022	Ravon	R4	Transmission Control Module	√	√	√	√	√	0017 0036
2022	Ravon	R4	Electronic Brake Control Module	√	√	√	√	√	0090
2022	Ravon	R4	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	Ravon	R4	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	Ravon	R4	Instrument Cluster	√	√	√	√	√	0247
2022	Ravon	R4	Serial Data Gateway Module	√	√	√			
2022	Ravon	R4	Front Seat Heating Control Module	√	√	√	√	√	
2022	Ravon	R4	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2022	Ravon	R4	Radio	√	√	√	√	√	
2022	GMC	Yukon XL	Power Steering Control Module	√	√	√	√		0089
2021	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0209 0115 0756 0086 0085 0757 0217 0258 0139 0006
2021	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0017
2021	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2021	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2021	Buick	Enclave	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Buick	Enclave	Instrument Cluster	√	√	√	√	√	0247
2021	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Buick	Enclave	HVAC Controls	√	√	√	√		
2021	Buick	Enclave	Liftgate Control Module	√	√	√	√	√	0146 0169
2021	Buick	Enclave	Seat Memory Control Module - Driver	√	√	√	√	√	
2021	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	Buick	Enclave	Video Processing Control Module	√	√	√	√	√	
2021	Buick	Enclave	Chassis Control Module	√	√	√	√	√	0014 0078
2021	Buick	Enclave	Rear Drive Control Module	√	√	√	√	√	0003
2021	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247 0271
2021	Buick	Enclave	Serial Data Gateway Module - Processor 1	√	√	√			
2021	Buick	Enclave	Serial Data Gateway Module - Processor 2	√	√	√			
2021	Buick	Enclave	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Buick	Enclave	Keyless Entry Control Module	√	√	√	√	√	0759
2021	Buick	Enclave	Passenger Presence Module	√	√	√	√	√	0057
2021	Buick	Enclave	Active Safety Control Module	√	√	√	√		
2021	Buick	Enclave	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Buick	Enclave	Frontview Camera - Windshield	√	√	√	√		0196
2021	Buick	Enclave	Radio	√	√	√	√	√	0226 0267 0269
2021	Buick	Enclave	Amplifier	√	√	√	√		
2021	Buick	Enclave	Radio Controls	√	√	√	√		0241
2021	Buick	Enclave	Power Steering Control Module	√	√	√	√		0089 0084
2021	Buick	Enclave	Suspension Control Module	√	√	√	√	√	
2021	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0209 0132 0115 0086 0212 0214 0217 0006 0144 0139 0757 0085 075D 075E 075F 0760 0756 0761 0213 0762 0258 0763 0764 0765 0156 0020 0067
2021	Buick	Encore	Transmission Control Module	√	√	√	√	√	0016 075C 0017 0036
2021	Buick	Encore	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2021	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2021	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2021	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2021	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Buick	Encore	HVAC Controls	√	√	√	√		
2021	Buick	Encore	Serial Data Gateway Module	√	√	√			
2021	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2021	Buick	Encore	Headlamp Control Module	√	√	√	√	√	0195
2021	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0755 0259 0048 0011
2021	Buick	Encore	Steering Column Lock Control Module	√	√	√	√		
2021	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247 0271
2021	Buick	Encore	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Buick	Encore	Frontview Camera - Windshield	√	√	√	√	√	0196 0084 0205 075A
2021	Buick	Encore	Keyless Entry Control Module	√	√	√	√	√	0759
2021	Buick	Encore	Passenger Presence Module	√	√	√	√	√	0057
2021	Buick	Encore	Power Steering Control Module	√	√	√	√		0089 0084 0207
2021	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2021	Buick	Encore	Radio	√	√	√	√	√	0150 0226 0269 0267
2021	Buick	Encore	Amplifier	√	√	√	√		
2021	Buick	Encore	Radio Controls	√	√	√	√		0241
2021	Buick	Encore	Rear Drive Control Module	√	√	√	√	√	0003 075B
2021	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217
2021	Buick	Encore	Head-Up Display Module	√	√	√	√	√	
2021	Buick	Encore	Side Obstacle Detection Control Module - Right	√	√	√		√	
2021	Buick	Encore	Serial Data Gateway Module - Processor 1	√	√	√			
2021	Buick	Encore	Serial Data Gateway Module - Processor 2	√	√	√			
2021	Buick	Encore	Video Processing Control Module	√	√	√	√	√	
2021	Buick	Encore	Seat Memory Control Module - Driver	√	√	√	√	√	
2021	Buick	Encore	Liftgate Control Module	√	√	√	√	√	0146 0169
2021	Buick	Envision	Engine Control Module	√	√	√	√	√	0263 0209 075D 075E 076B 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0264 0262 0268 0122
2021	Buick	Envision	Transmission Control Module	√	√	√	√	√	0019 076A
2021	Buick	Envision	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758
2021	Buick	Envision	Restraints Control Module	√	√	√	√	√	0758 0134
2021	Buick	Envision	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2021	Buick	Envision	Instrument Panel Cluster Control Module	√	√	√	√	√	



2021	Buick	Envision	Serial Data Gateway Module	√	√	√			
2021	Buick	Envision	Frontview Camera - Windshield	√	√	√	√		0196
2021	Buick	Envision	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Buick	Envision	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2021	Buick	Envision	Headlamp Control Module	√	√	√	√		0195
2021	Buick	Envision	Rear Gate Module	√	√	√	√		0753
2021	Buick	Envision	Parking Assist Control Module	√	√	√	√	√	
2021	Buick	Envision	Lighting Control Module	√	√	√	√	√	
2021	Buick	Envision	Gear Shift Control Module	√					
2021	Buick	Envision	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2021	Buick	Envision	Side Obstacle Detection Control Module - Right	√	√	√			
2021	Buick	Envision	Radio	√	√	√	√	√	0769
2021	Buick	Envision	Video Processing Module	√	√	√			
2021	Buick	Envision	Wireless Accessory Charging Module	√	√	√	√		
2021	Buick	Envision	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2021	Buick	Envision	Rear Drive Control Module	√	√	√	√		
2021	Buick	Envision	Image Processing Module	√	√	√	√		
2021	Buick	Envision	Power Steering Control Module	√	√	√	√		0766
2021	Buick	Envision	Telematics Control Module	√	√	√	√		0270
2021	Buick	Envision	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2021	Buick	Envision	Audio Amplifier	√	√	√	√		
2021	Cadillac	CT4	Engine Control Module	√	√	√	√	√	0263 0209 075D 075E 076B 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0754 0753 0226 0128
2021	Cadillac	CT4	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2021	Cadillac	CT4	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758
2021	Cadillac	CT4	Restraints Control Module	√	√	√	√	√	0758 0134
2021	Cadillac	CT4	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2021	Cadillac	CT4	Instrument Panel Cluster Control Module	√	√	√	√	√	
2021	Cadillac	CT4	Serial Data Gateway Module	√	√	√			
2021	Cadillac	CT4	Gear Shift Control Module	√					
2021	Cadillac	CT4	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2021	Cadillac	CT4	Wireless Accessory Charging Module	√	√	√	√		
2021	Cadillac	CT4	Steering Column Lock Control Module	√	√	√	√		
2021	Cadillac	CT4	Parking Assist Control Module	√	√	√	√	√	
2021	Cadillac	CT4	Lighting Control Module	√	√	√	√	√	
2021	Cadillac	CT4	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2021	Cadillac	CT4	Side Obstacle Detection Control Module - Right	√	√	√			
2021	Cadillac	CT4	Electronic Suspension Control Module	√	√	√	√	√	0198

2021	Cadillac	CT4	Power Steering Control Module	√	√	√	√		0766
2021	Cadillac	CT4	Frontview Camera - Windshield	√	√	√	√		0196
2021	Cadillac	CT4	Image Processing Module	√	√	√	√		
2021	Cadillac	CT4	Short Range Radar Sensor - Left Rear	√	√	√			0772
2021	Cadillac	CT4	Short Range Radar Sensor - Right Rear	√	√	√			0772
2021	Cadillac	CT4	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Cadillac	CT4	Automated Driving Mapping Module	√	√	√	√	√	
2021	Cadillac	CT4	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2021	Cadillac	CT4	Audio Amplifier	√	√	√	√		
2021	Cadillac	CT4	Radio	√	√	√	√	√	0269 0769
2021	Cadillac	CT4	Infotainment Control Switch	√	√	√			
2021	Cadillac	CT4	Radio Controls	√	√	√	√		
2021	Cadillac	CT4	Video Processing Module	√	√	√			
2021	Cadillac	CT4	Telematics Control Module	√	√	√	√		0270
2021	Cadillac	CT4	Transfer Case Control Module	√	√	√	√	√	0099 0100
2021	Cadillac	CT4	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2021	Cadillac	CT4	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2021	Cadillac	CT4	Differential Control Module	√	√	√	√	√	
2021	Cadillac	CT4	Image Processing Module 1 - Processor 1	√	√	√	√		
2021	Cadillac	CT4	Image Processing Module 1 - Processor 2	√	√	√			0758
2021	Cadillac	CT4	Driver Monitoring System Control Module	√	√	√			
2021	Cadillac	CT4	Short Range Radar Sensor - Left Front	√	√	√			0772
2021	Cadillac	CT4	Short Range Radar Sensor - Right Front	√	√	√			0772
2021	Cadillac	CT5	Engine Control Module	√	√	√	√	√	0263 0209 075D 075E 076B 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0764 0763 0258 0139 0770 0771
2021	Cadillac	CT5	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2021	Cadillac	CT5	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758
2021	Cadillac	CT5	Restraints Control Module	√	√	√	√	√	0758 0134
2021	Cadillac	CT5	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2021	Cadillac	CT5	Instrument Panel Cluster Control Module	√	√	√	√	√	
2021	Cadillac	CT5	Serial Data Gateway Module	√	√	√			
2021	Cadillac	CT5	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2021	Cadillac	CT5	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2021	Cadillac	CT5	Video Processing Module	√	√	√			
2021	Cadillac	CT5	Wireless Accessory Charging Module	√	√	√	√		
2021	Cadillac	CT5	Gear Shift Control Module	√					
2021	Cadillac	CT5	Lighting Control Module	√	√	√	√	√	

2021	Cadillac	CT5	Parking Assist Control Module	√	√	√	√	√	
2021	Cadillac	CT5	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2021	Cadillac	CT5	Side Obstacle Detection Control Module - Right	√	√	√			
2021	Cadillac	CT5	Steering Column Lock Control Module	√	√	√	√		
2021	Cadillac	CT5	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2021	Cadillac	CT5	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2021	Cadillac	CT5	UHF Short Range Low Energy Remote Control Access Transceiver	√	√	√			
2021	Cadillac	CT5	Electronic Suspension Control Module	√	√	√	√	√	
2021	Cadillac	CT5	Power Steering Control Module	√	√	√	√		0766
2021	Cadillac	CT5	Frontview Camera - Windshield	√	√	√	√		0196
2021	Cadillac	CT5	Image Processing Module	√	√	√	√		
2021	Cadillac	CT5	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Cadillac	CT5	Short Range Radar Sensor - Rear Middle	√	√	√			0772
2021	Cadillac	CT5	Automated Driving Mapping Module	√	√	√	√	√	
2021	Cadillac	CT5	Radio	√	√	√	√	√	0269 0769
2021	Cadillac	CT5	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2021	Cadillac	CT5	Audio Amplifier	√	√	√	√		
2021	Cadillac	CT5	Differential Control Module	√	√	√	√	√	
2021	Cadillac	CT5	Infotainment Control Switch	√	√	√			
2021	Cadillac	CT5	Radio Controls	√	√	√	√		
2021	Cadillac	CT5	Telematics Control Module	√	√	√	√		0270
2021	Cadillac	CT5	Transfer Case Control Module	√	√	√	√	√	0099 0100
2021	Cadillac	CT5	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2021	Cadillac	CT5	Driver Monitoring System Control Module	√	√	√			
2021	Cadillac	CT5	Image Processing Module 1 - Processor 1	√	√	√	√		
2021	Cadillac	CT5	Image Processing Module 1 - Processor 2	√	√	√			0758
2021	Cadillac	CT5	Short Range Radar Sensor - Left Front	√	√	√			0772
2021	Cadillac	CT5	Short Range Radar Sensor - Right Front	√	√	√			0772
2021	Cadillac	CT5	Short Range Radar Sensor - Left Rear	√	√	√			0772
2021	Cadillac	CT5	Short Range Radar Sensor - Right Rear	√	√	√			0772
2021	Cadillac	CT6	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2021	Cadillac	CT6	Instrument Cluster	√	√	√	√	√	0247
2021	Cadillac	CT6	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Cadillac	CT6	HVAC Controls	√	√	√	√		
2021	Cadillac	CT6	Night Vision Camera Control Module	√	√	√	√		0492
2021	Cadillac	CT6	Headlamp Control Module	√	√	√	√	√	0195
2021	Cadillac	CT6	Headlamp High Beam Control Module	√	√	√	√	√	0247
2021	Cadillac	CT6	Liftgate Control Module	√	√	√	√	√	0146 0169
2021	Cadillac	CT6	Seat Memory Control Module - Driver	√	√	√	√	√	

2021	Cadillac	CT6	Seat Memory Control Module - Left Rear	√	√	√	√	√	
2021	Cadillac	CT6	Seat Memory Control Module - Passenger	√	√	√	√	√	
2021	Cadillac	CT6	Seat Memory Control Module - Right Rear	√	√	√	√	√	
2021	Cadillac	CT6	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	Cadillac	CT6	Amplifier	√	√	√	√		
2021	Cadillac	CT6	Infotainment Control Switch	√	√	√			
2021	Cadillac	CT6	Radio Controls	√	√	√	√		
2021	Cadillac	CT6	Radio	√	√	√	√	√	0226 0267 0269
2021	Cadillac	CT6	Parking Assist Control Module	√	√	√	√	√	0247
2021	Cadillac	CT6	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Cadillac	CT6	Serial Data Gateway Module - Processor 1	√	√	√			
2021	Cadillac	CT6	Serial Data Gateway Module - Processor 2	√	√	√			
2021	Cadillac	CT6	Steering Column Lock Control Module	√	√	√	√		
2021	Cadillac	CT6	Transfer Case Control Module	√	√	√	√	√	0037 0099
2021	Cadillac	CT6	Active Safety Control Module 1 - Processor A	√	√	√	√		0794 0268
2021	Cadillac	CT6	Active Safety Control Module 1 - Processor B	√	√	√	√		0111 0268
2021	Cadillac	CT6	Active Safety Control Module 1 - Processor C	√	√	√	√		0268
2021	Cadillac	CT6	Active Safety Control Module 2 - Processor A	√	√	√	√		0794 0268
2021	Cadillac	CT6	Active Safety Control Module 2 - Processor B	√	√	√	√		0111 0268
2021	Cadillac	CT6	Active Safety Control Module 2 - Processor C	√	√	√	√		0268
2021	Cadillac	CT6	Active Safety Control Module	√	√	√	√	√	
2021	Cadillac	CT6	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Cadillac	CT6	Frontview Camera - Windshield	√	√	√	√		0196
2021	Cadillac	CT6	Short Range Radar Sensor - Left Front	√	√	√			
2021	Cadillac	CT6	Short Range Radar Sensor - Left Rear	√	√	√			
2021	Cadillac	CT6	Short Range Radar Sensor - Rear Middle	√	√	√			
2021	Cadillac	CT6	Short Range Radar Sensor - Right Front	√	√	√			
2021	Cadillac	CT6	Short Range Radar Sensor - Right Rear	√	√	√			
2021	Cadillac	CT6	Driver Monitoring System Control Module	√	√	√	√	√	
2021	Cadillac	CT6	Power Steering Control Module	√	√	√	√		0081 0080 0089
2021	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0263 0209 0774 076C 0115 0086 0085 0757 0212 0217 0775 0258 0139 0777 075E 075F 0778 076D 0779 0097 0221 077A 077B 077C 077D 0764 0763 0117 0119 077E 077F 0780 0781 0782 0783 0784
2021	Cadillac	Escalade	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2021	Cadillac	Escalade	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2021	Cadillac	Escalade	Restraints Control Module	√	√	√	√	√	0758 0134

2021	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2021	Cadillac	Escalade	Instrument Panel Cluster Control Module	√	√	√	√	√	
2021	Cadillac	Escalade	Serial Data Gateway Module	√	√	√			
2021	Cadillac	Escalade	Video Processing Module	√	√	√			
2021	Cadillac	Escalade	Wireless Accessory Charging Module	√	√	√	√		
2021	Cadillac	Escalade	Trailer Lamp Control Module	√	√	√	√	√	
2021	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2021	Cadillac	Escalade	Chassis Control Module - Auxiliary	√	√	√	√		
2021	Cadillac	Escalade	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2021	Cadillac	Escalade	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2021	Cadillac	Escalade	Rear Gate Module	√	√	√	√		0753
2021	Cadillac	Escalade	Electronic Suspension Control Module	√	√	√	√	√	0198
2021	Cadillac	Escalade	Power Steering Control Module	√	√	√	√		0089
2021	Cadillac	Escalade	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2021	Cadillac	Escalade	Running Board Control Module	√	√	√	√	√	
2021	Cadillac	Escalade	Parking Assist Control Module	√	√	√	√	√	
2021	Cadillac	Escalade	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2021	Cadillac	Escalade	Side Obstacle Detection Control Module - Right	√	√	√			
2021	Cadillac	Escalade	Steering Column Lock Control Module	√	√	√	√		
2021	Cadillac	Escalade	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2021	Cadillac	Escalade	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2021	Cadillac	Escalade	Audio Amplifier	√	√	√	√		
2021	Cadillac	Escalade	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2021	Cadillac	Escalade	Infotainment Control Switch	√	√	√			
2021	Cadillac	Escalade	Radio	√	√	√	√	√	0769 0269 07A7 07A8
2021	Cadillac	Escalade	Lighting Control Module	√	√	√	√	√	
2021	Cadillac	Escalade	Gear Shift Control Module	√					
2021	Cadillac	Escalade	Headlamp Control Module	√	√	√	√		0195
2021	Cadillac	Escalade	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Cadillac	Escalade	Frontview Camera - Windshield	√	√	√	√		0196
2021	Cadillac	Escalade	Image Processing Module	√	√	√	√		
2021	Cadillac	Escalade	Short Range Radar Sensor - Left Front	√	√	√			0772
2021	Cadillac	Escalade	Short Range Radar Sensor - Left Rear	√	√	√			0772
2021	Cadillac	Escalade	Short Range Radar Sensor - Right Front	√	√	√			0772
2021	Cadillac	Escalade	Short Range Radar Sensor - Right Rear	√	√	√			0772
2021	Cadillac	Escalade	Driver Monitoring System Control Module	√	√	√			
2021	Cadillac	Escalade	Video Display - Right Front Seat Back	√	√	√			
2021	Cadillac	Escalade	Automated Driving Mapping Module	√	√	√	√	√	
2021	Cadillac	Escalade	Differential Control Module	√	√	√	√	√	

2021	Cadillac	Escalade	Heater and Air Conditioning Auxiliary Control	√	√	√			
2021	Cadillac	Escalade	Radio Controls	√	√	√	√		
2021	Cadillac	Escalade	Telematics Control Module	√	√	√	√		0270
2021	Cadillac	Escalade	Night Vision Control Module	√	√	√	√		
2021	Cadillac	Escalade	Image Processing Module 1 - Processor 1	√	√	√	√		
2021	Cadillac	Escalade	Image Processing Module 1 - Processor 2	√	√	√			0758
2021	Cadillac	Escalade	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2021	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0263 0209 0774 076C 0115 0086 0085 0757 0212 0217 0775 0258 0139 0777 075E 075F 0778 076D 0779 0097 0221 077A 077B 077C 077D 0764 0763 0117 0119 077E 077F 0780 0781 0782 0783 0784
2021	Cadillac	Escalade ESV	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2021	Cadillac	Escalade ESV	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2021	Cadillac	Escalade ESV	Restraints Control Module	√	√	√	√	√	0758 0134
2021	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2021	Cadillac	Escalade ESV	Instrument Panel Cluster Control Module	√	√	√	√	√	
2021	Cadillac	Escalade ESV	Serial Data Gateway Module	√	√	√			
2021	Cadillac	Escalade ESV	Video Processing Module	√	√	√			
2021	Cadillac	Escalade ESV	Wireless Accessory Charging Module	√	√	√	√		
2021	Cadillac	Escalade ESV	Trailer Lamp Control Module	√	√	√	√	√	
2021	Cadillac	Escalade ESV	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2021	Cadillac	Escalade ESV	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2021	Cadillac	Escalade ESV	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2021	Cadillac	Escalade ESV	Rear Gate Module	√	√	√	√		0753
2021	Cadillac	Escalade ESV	Electronic Suspension Control Module	√	√	√	√	√	0198
2021	Cadillac	Escalade ESV	Power Steering Control Module	√	√	√	√		0089
2021	Cadillac	Escalade ESV	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2021	Cadillac	Escalade ESV	Running Board Control Module	√	√	√	√	√	
2021	Cadillac	Escalade ESV	Parking Assist Control Module	√	√	√	√	√	
2021	Cadillac	Escalade ESV	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2021	Cadillac	Escalade ESV	Side Obstacle Detection Control Module - Right	√	√	√			
2021	Cadillac	Escalade ESV	Steering Column Lock Control Module	√	√	√	√		
2021	Cadillac	Escalade ESV	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266

2021	Cadillac	Escalade ESV	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2021	Cadillac	Escalade ESV	Audio Amplifier	√	√	√	√		
2021	Cadillac	Escalade ESV	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2021	Cadillac	Escalade ESV	Infotainment Control Switch	√	√	√			
2021	Cadillac	Escalade ESV	Radio	√	√	√	√	√	0769 0269 07A7 07A8
2021	Cadillac	Escalade ESV	Lighting Control Module	√	√	√	√	√	
2021	Cadillac	Escalade ESV	Gear Shift Control Module	√					
2021	Cadillac	Escalade ESV	Chassis Control Module - Auxiliary	√	√	√	√		
2021	Cadillac	Escalade ESV	Headlamp Control Module	√	√	√	√		0195
2021	Cadillac	Escalade ESV	Frontview Camera - Windshield	√	√	√	√		0196
2021	Cadillac	Escalade ESV	Image Processing Module	√	√	√	√		
2021	Cadillac	Escalade ESV	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Cadillac	Escalade ESV	Short Range Radar Sensor - Left Front	√	√	√			0772
2021	Cadillac	Escalade ESV	Parking Brake Control Module	√	√	√	√	√	0229
2021	Cadillac	Escalade ESV	Short Range Radar Sensor - Left Rear	√	√	√			0772
2021	Cadillac	Escalade ESV	Short Range Radar Sensor - Right Front	√	√	√			0772
2021	Cadillac	Escalade ESV	Short Range Radar Sensor - Right Rear	√	√	√			0772
2021	Cadillac	Escalade ESV	Video Display - Right Front Seat Back	√	√	√			
2021	Cadillac	Escalade ESV	Automated Driving Mapping Module	√	√	√	√	√	
2021	Cadillac	Escalade ESV	Differential Control Module	√	√	√	√	√	
2021	Cadillac	Escalade ESV	Heater and Air Conditioning Auxiliary Control	√	√	√			
2021	Cadillac	Escalade ESV	Radio Controls	√	√	√	√		
2021	Cadillac	Escalade ESV	Telematics Control Module	√	√	√	√		0270
2021	Cadillac	Escalade ESV	Night Vision Control Module	√	√	√	√		
2021	Cadillac	Escalade ESV	Image Processing Module 1 - Processor 1	√	√	√	√		
2021	Cadillac	Escalade ESV	Image Processing Module 1 - Processor 2	√	√	√			0758
2021	Cadillac	Escalade ESV	Driver Monitoring System Control Module	√	√	√			
2021	Cadillac	Escalade ESV	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2021	Cadillac	XT4	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 0791 076C 076D 0058 0097 0219 0221 0792 0073 0072 0070 0071 0117 0119 077E 0178 0180 0182
2021	Cadillac	XT4	Transmission Control Module	√	√	√	√	√	0017
2021	Cadillac	XT4	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2021	Cadillac	XT4	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2021	Cadillac	XT4	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Cadillac	XT4	Instrument Cluster	√	√	√	√	√	0247
2021	Cadillac	XT4	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Cadillac	XT4	HVAC Controls	√	√	√	√		
2021	Cadillac	XT4	Video Processing Control Module	√	√	√	√	√	
2021	Cadillac	XT4	Liftgate Control Module	√	√	√	√	√	0146 0169
2021	Cadillac	XT4	Seat Memory Control Module - Driver	√	√	√	√	√	
2021	Cadillac	XT4	Seat Memory Control Module - Passenger	√	√	√	√	√	
2021	Cadillac	XT4	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	Cadillac	XT4	Trailer Lighting Control Module	√	√	√	√	√	0247
2021	Cadillac	XT4	Parking Assist Control Module	√	√	√	√	√	0247
2021	Cadillac	XT4	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Cadillac	XT4	Side Obstacle Detection Control Module - Right	√	√	√		√	
2021	Cadillac	XT4	Serial Data Gateway Module - Processor 1	√	√	√			
2021	Cadillac	XT4	Serial Data Gateway Module - Processor 2	√	√	√			
2021	Cadillac	XT4	Steering Column Lock Control Module	√	√	√	√		
2021	Cadillac	XT4	Keyless Entry Control Module	√	√	√	√	√	
2021	Cadillac	XT4	Passenger Presence Module	√	√	√	√	√	0057
2021	Cadillac	XT4	Active Safety Control Module	√	√	√	√	√	
2021	Cadillac	XT4	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Cadillac	XT4	Short Range Radar Sensor - Rear Middle	√	√	√			
2021	Cadillac	XT4	Frontview Camera - Windshield	√	√	√	√		0196
2021	Cadillac	XT4	Headlamp Control Module	√	√	√	√	√	0195
2021	Cadillac	XT4	Power Steering Control Module	√	√	√	√		0081 0080 0089
2021	Cadillac	XT4	Suspension Control Module	√	√	√	√	√	
2021	Cadillac	XT4	Radio	√	√	√	√	√	0226 0267 0269
2021	Cadillac	XT4	Amplifier	√	√	√	√		
2021	Cadillac	XT4	Radio Controls	√	√	√	√		
2021	Cadillac	XT4	Rear Drive Control Module	√	√	√	√	√	0003
2021	Cadillac	XT4	Infotainment Control Switch	√	√	√			
2021	Cadillac	XT5	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0050 0130 0756
2021	Cadillac	XT5	Transmission Control Module	√	√	√	√	√	0017
2021	Cadillac	XT5	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2021	Cadillac	XT5	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277



2021	Cadillac	XT5	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Cadillac	XT5	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Cadillac	XT5	Instrument Cluster	√	√	√	√	√	0247
2021	Cadillac	XT5	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Cadillac	XT5	HVAC Controls	√	√	√	√		
2021	Cadillac	XT5	Night Vision Camera Control Module	√	√	√	√		0492
2021	Cadillac	XT5	Headlamp Control Module		√	√			
2021	Cadillac	XT5	Liftgate Control Module	√	√	√	√	√	0146 0169
2021	Cadillac	XT5	Seat Memory Control Module - Driver	√	√	√	√	√	
2021	Cadillac	XT5	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	Cadillac	XT5	Trailer Lighting Control Module	√	√	√	√	√	0247
2021	Cadillac	XT5	Video Processing Control Module	√	√	√	√	√	
2021	Cadillac	XT5	Serial Data Gateway Module - Processor 1	√	√	√			
2021	Cadillac	XT5	Serial Data Gateway Module - Processor 2	√	√	√			
2021	Cadillac	XT5	Steering Column Lock Control Module	√	√	√	√		
2021	Cadillac	XT5	Parking Assist Control Module	√	√	√	√	√	0247
2021	Cadillac	XT5	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Cadillac	XT5	Keyless Entry Control Module	√	√	√	√	√	0759
2021	Cadillac	XT5	Passenger Presence Module	√	√	√	√	√	0057
2021	Cadillac	XT5	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2021	Cadillac	XT5	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2021	Cadillac	XT5	Active Safety Control Module	√	√	√	√	√	
2021	Cadillac	XT5	Frontview Camera - Windshield	√	√	√	√		0196
2021	Cadillac	XT5	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Cadillac	XT5	Short Range Radar Sensor - Rear Middle	√	√	√			
2021	Cadillac	XT5	Power Steering Control Module	√	√	√	√		0089 0084
2021	Cadillac	XT5	Suspension Control Module	√	√	√	√	√	
2021	Cadillac	XT5	Rear Drive Control Module	√	√	√	√	√	0003
2021	Cadillac	XT5	Radio	√	√	√	√	√	0226 0267 0269
2021	Cadillac	XT5	Amplifier	√	√	√	√		
2021	Cadillac	XT5	Radio Controls	√	√	√	√		0241
2021	Cadillac	XT5	Infotainment Control Switch	√	√	√			
2021	Cadillac	XT5	Side Obstacle Detection Control Module - Right	√	√	√		√	
2021	Cadillac	XT6	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0250 0130 0766
2021	Cadillac	XT6	Transmission Control Module	√	√	√	√	√	0017

2021	Cadillac	XT6	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2021	Cadillac	XT6	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2021	Cadillac	XT6	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Cadillac	XT6	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Cadillac	XT6	Instrument Cluster	√	√	√	√	√	0247
2021	Cadillac	XT6	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Cadillac	XT6	HVAC Controls	√	√	√	√		
2021	Cadillac	XT6	Night Vision Camera Control Module	√	√	√	√		0492
2021	Cadillac	XT6	Headlamp Control Module	√	√	√	√	√	0195
2021	Cadillac	XT6	Seat Memory Control Module - Driver	√	√	√	√	√	
2021	Cadillac	XT6	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	Cadillac	XT6	Video Processing Control Module	√	√	√	√	√	
2021	Cadillac	XT6	Trailer Lighting Control Module	√	√	√	√	√	0247
2021	Cadillac	XT6	Parking Assist Control Module	√	√	√	√	√	0247
2021	Cadillac	XT6	Serial Data Gateway Module - Processor 1	√	√	√			
2021	Cadillac	XT6	Serial Data Gateway Module - Processor 2	√	√	√			
2021	Cadillac	XT6	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Cadillac	XT6	Side Obstacle Detection Control Module - Right	√	√	√		√	
2021	Cadillac	XT6	Steering Column Lock Control Module	√	√	√	√		
2021	Cadillac	XT6	Keyless Entry Control Module	√	√	√	√	√	0759
2021	Cadillac	XT6	Passenger Presence Module	√	√	√	√	√	0057
2021	Cadillac	XT6	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2021	Cadillac	XT6	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2021	Cadillac	XT6	Active Safety Control Module	√	√	√	√	√	
2021	Cadillac	XT6	Frontview Camera - Windshield	√	√	√	√		0196
2021	Cadillac	XT6	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Cadillac	XT6	Short Range Radar Sensor - Rear Middle	√	√	√			
2021	Cadillac	XT6	Power Steering Control Module	√	√	√	√		0089 0084
2021	Cadillac	XT6	Suspension Control Module	√	√	√	√	√	
2021	Cadillac	XT6	Rear Drive Control Module	√	√	√	√	√	0003
2021	Cadillac	XT6	Radio	√	√	√	√	√	0226 0267 0269
2021	Cadillac	XT6	Amplifier	√	√	√	√		
2021	Cadillac	XT6	Radio Controls	√	√	√	√		0241
2021	Cadillac	XT6	Infotainment Control Switch	√	√	√			
2021	Cadillac	XT6	Liftgate Control Module	√	√	√	√	√	0146 0169
2021	Chevrolet	Aveo	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217 0020 0140

2021	Chevrolet	Aveo	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2021	Chevrolet	Aveo	Electronic Brake Control Module	√	√	√	√	√	0111 0090
2021	Chevrolet	Aveo	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0261 0111
2021	Chevrolet	Aveo	Body Control Module	√	√	√	√	√	0263
2021	Chevrolet	Aveo	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Chevrolet	Aveo	Radio/HVAC Controls	√	√	√	√	√	0150
2021	Chevrolet	Aveo	Keyless Entry Control Module				√		
2021	Chevrolet	Aveo	Power Steering Control Module	√	√	√	√		0081 0089
2021	Chevrolet	Aveo	Radio	√	√	√	√	√	
2021	Chevrolet	Aveo	Telematics Communication Interface Control Module	√	√	√		√	
2021	Chevrolet	Aveo	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2021	Chevrolet	Beat	Engine Control Module	√	√	√	√	√	0133 0210 0098 0096 0094 0216 0143 0265 0393 0173 0149 0069 0087 0209 0156 0147 0315
2021	Chevrolet	Beat	Electronic Brake Control Module	√	√	√	√	√	0090
2021	Chevrolet	Beat	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2021	Chevrolet	Beat	Instrument Cluster	√	√	√	√	√	
2021	Chevrolet	Beat	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	Chevrolet	Beat	Power Steering Control Module	√	√	√	√		0089
2021	Chevrolet	Beat	Radio	√	√	√	√	√	0226
2021	Chevrolet	Blazer	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 0156 0020 0132 0067 0154 0213 0214 0756
2021	Chevrolet	Blazer	Transmission Control Module	√	√	√	√	√	0017
2021	Chevrolet	Blazer	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2021	Chevrolet	Blazer	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2021	Chevrolet	Blazer	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Chevrolet	Blazer	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Chevrolet	Blazer	Instrument Cluster	√	√	√	√	√	0247
2021	Chevrolet	Blazer	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Chevrolet	Blazer	HVAC Controls	√	√	√	√		
2021	Chevrolet	Blazer	Liftgate Control Module	√	√	√	√		0146
2021	Chevrolet	Blazer	Seat Memory Control Module - Driver	√	√	√	√	√	

2021	Chevrolet	Blazer	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	Chevrolet	Blazer	Power Steering Control Module	√	√	√	√		0089 0084
2021	Chevrolet	Blazer	Video Processing Control Module	√	√	√	√	√	
2021	Chevrolet	Blazer	Parking Assist Control Module	√	√	√	√	√	0247
2021	Chevrolet	Blazer	Serial Data Gateway Module - Processor 1	√	√	√			
2021	Chevrolet	Blazer	Serial Data Gateway Module - Processor 2	√	√	√			
2021	Chevrolet	Blazer	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Chevrolet	Blazer	Side Obstacle Detection Control Module - Right	√	√	√		√	
2021	Chevrolet	Blazer	Keyless Entry Control Module	√	√	√	√	√	0759
2021	Chevrolet	Blazer	Passenger Presence Module	√	√	√	√	√	0057
2021	Chevrolet	Blazer	Active Safety Control Module	√	√	√	√		
2021	Chevrolet	Blazer	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Chevrolet	Blazer	Frontview Camera - Windshield	√	√	√	√		0196
2021	Chevrolet	Blazer	Rear Drive Control Module	√	√	√	√	√	0003
2021	Chevrolet	Blazer	Radio	√	√	√	√	√	0150 0226 0269 0267
2021	Chevrolet	Blazer	Amplifier	√	√	√	√		
2021	Chevrolet	Blazer	Radio Controls	√	√	√	√		0241
2021	Chevrolet	Bolt	Engine Control Module	√	√	√	√	√	0258
2021	Chevrolet	Bolt	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229
2021	Chevrolet	Bolt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Chevrolet	Bolt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Chevrolet	Bolt	Instrument Cluster	√	√	√	√	√	0247
2021	Chevrolet	Bolt	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Chevrolet	Bolt	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	Chevrolet	Bolt	Video Processing Control Module	√	√	√	√	√	
2021	Chevrolet	Bolt	Trailer Lighting Control Module	√	√	√	√	√	0247
2021	Chevrolet	Bolt	Chassis Control Module	√	√	√	√	√	0014 0078
2021	Chevrolet	Bolt	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2021	Chevrolet	Bolt	Parking Assist Control Module	√	√	√	√	√	0247
2021	Chevrolet	Bolt	Serial Data Gateway Module - Processor 1	√	√	√			
2021	Chevrolet	Bolt	Serial Data Gateway Module - Processor 2	√	√	√			
2021	Chevrolet	Bolt	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Chevrolet	Bolt	Air Conditioning Compressor	√					
2021	Chevrolet	Bolt	Battery Energy Control Module	√			√		
2021	Chevrolet	Bolt	Hybrid/EV Powertrain Control Module 1	√	√	√	√	√	0202 0018
2021	Chevrolet	Bolt	Hybrid/EV Powertrain Control Module 2	√	√	√	√	√	0125 0202 0262 0079 0122 0123 0127
2021	Chevrolet	Bolt	Power Line Communication Module	√			√		

2021	Chevrolet	Bolt	Radio	√	√	√	√	√	0226 0267 0269
2021	Chevrolet	Bolt	Keyless Entry Control Module	√	√	√	√	√	
2021	Chevrolet	Bolt	Passenger Presence Module	√	√	√	√	√	0057
2021	Chevrolet	Bolt	Short Range Remote Control Transceiver	√	√	√	√		
2021	Chevrolet	Bolt	Frontview Camera - Windshield	√	√	√	√		0196
2021	Chevrolet	Bolt	Brake Booster Control Module	√	√	√	√		
2021	Chevrolet	Bolt	Power Steering Control Module	√	√	√	√		0089 0084
2021	Chevrolet	Camaro	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0756 0085 0257 0030
2021	Chevrolet	Camaro	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2021	Chevrolet	Camaro	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229
2021	Chevrolet	Camaro	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Chevrolet	Camaro	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Chevrolet	Camaro	Instrument Cluster	√	√	√	√	√	0247
2021	Chevrolet	Camaro	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Chevrolet	Camaro	HVAC Controls	√	√	√	√		
2021	Chevrolet	Camaro	Serial Data Gateway Module	√	√	√			
2021	Chevrolet	Camaro	Headlamp Control Module	√	√	√	√	√	0195
2021	Chevrolet	Camaro	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2021	Chevrolet	Camaro	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	Chevrolet	Camaro	Vehicle Performance Data Recorder	√	√	√	√		
2021	Chevrolet	Camaro	Folding Top Control Module	√	√	√	√	√	
2021	Chevrolet	Camaro	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Chevrolet	Camaro	Side Obstacle Detection Control Module - Right	√	√	√		√	
2021	Chevrolet	Camaro	Parking Assist Control Module	√	√	√	√	√	0247
2021	Chevrolet	Camaro	Steering Column Lock Control Module	√	√	√	√		
2021	Chevrolet	Camaro	Keyless Entry Control Module	√	√	√	√	√	
2021	Chevrolet	Camaro	Passenger Presence Module	√	√	√	√	√	0057
2021	Chevrolet	Camaro	Parking Brake Control Module	√	√	√	√	√	0229
2021	Chevrolet	Camaro	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2021	Chevrolet	Camaro	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2021	Chevrolet	Camaro	Suspension Control Module	√	√	√	√	√	0245
2021	Chevrolet	Camaro	Frontview Camera - Windshield	√	√	√	√		0196 0084

2021	Chevrolet	Camaro	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2021	Chevrolet	Camaro	Radio	√	√	√	√	√	0150 0226 0269 0267
2021	Chevrolet	Camaro	Amplifier	√	√	√	√		
2021	Chevrolet	Camaro	Radio Controls	√	√	√	√		0241
2021	Chevrolet	Camaro	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2021	Chevrolet	Cavalier	Engine Control Module	√	√	√	√	√	0156 0020 0140 0263
2021	Chevrolet	Cavalier	Transmission Control Module	√	√	√	√	√	0017
2021	Chevrolet	Cavalier	Electronic Brake Control Module	√	√	√	√	√	0090
2021	Chevrolet	Cavalier	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√		0111
2021	Chevrolet	Cavalier	Body Control Module	√	√	√	√	√	
2021	Chevrolet	Cavalier	Instrument Cluster	√	√	√	√	√	0247
2021	Chevrolet	Cavalier	Serial Data Gateway Module	√	√	√	√		
2021	Chevrolet	Cavalier	Parking Assist Control Module	√	√	√	√		
2021	Chevrolet	Cavalier	Power Steering Control Module	√	√	√	√		0081 0080 0089
2021	Chevrolet	Cavalier	Radio	√	√	√	√	√	
2021	Chevrolet	Cavalier	Radio Controls	√	√	√	√	√	
2021	Chevrolet	Cavalier	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2021	Chevrolet	Cavalier	Power Supply Transformer	√	√	√	√	√	
2021	Chevrolet	Cobalt	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139
2021	Chevrolet	Cobalt	Transmission Control Module	√	√	√	√	√	0017 0036
2021	Chevrolet	Cobalt	Electronic Brake Control Module	√	√	√	√	√	0090
2021	Chevrolet	Cobalt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Chevrolet	Cobalt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Chevrolet	Cobalt	Instrument Cluster	√	√	√	√	√	0247
2021	Chevrolet	Cobalt	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Chevrolet	Cobalt	Serial Data Gateway Module	√	√	√			
2021	Chevrolet	Cobalt	Power Steering Control Module	√	√	√	√		0207
2021	Chevrolet	Cobalt	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2021	Chevrolet	Cobalt	Front Seat Heating Control Module	√	√	√	√	√	
2021	Chevrolet	Cobalt	Radio	√	√	√	√	√	0150 0226 0269
2021	Chevrolet	Cobalt	Telematics Communication Interface Control Module	√	√	√	√	√	
2021	Chevrolet	Cobalt	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A

2021	Chevrolet	Colorado	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0210 0224 0130 0222 0066 0147 0060 0044 0045 0109 0068 0084 0070 0071 0074 0075 0043 0173 0179 0181 0183 0185 0232 0756 0085 0757 0006 076C 076D 079A 0097 0171 0219 0792 0072 0073 0119 0117
2021	Chevrolet	Colorado	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2021	Chevrolet	Colorado	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2021	Chevrolet	Colorado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Chevrolet	Colorado	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Chevrolet	Colorado	Instrument Cluster	√	√	√	√	√	0247
2021	Chevrolet	Colorado	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Chevrolet	Colorado	HVAC Controls	√	√	√	√	√	
2021	Chevrolet	Colorado	Serial Data Gateway Module	√	√	√			
2021	Chevrolet	Colorado	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	Chevrolet	Colorado	Parking Assist Control Module	√	√	√	√	√	0247 0271
2021	Chevrolet	Colorado	Passenger Presence Module	√	√	√	√	√	0057
2021	Chevrolet	Colorado	Trailer Lighting Control Module	√	√	√	√	√	0247
2021	Chevrolet	Colorado	Radio	√	√	√	√	√	0150 0226 0269 0267
2021	Chevrolet	Colorado	Amplifier	√	√	√	√		
2021	Chevrolet	Colorado	Frontview Camera - Windshield	√	√	√	√	√	0196
2021	Chevrolet	Colorado	Power Steering Control Module	√	√	√	√		0093 0090
2021	Chevrolet	Colorado	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2021	Chevrolet	Colorado	Transfer Case Control Module	√	√	√	√	√	0037
2021	Chevrolet	Colorado	Serial Data Gateway Module - Processor 1	√	√	√			
2021	Chevrolet	Colorado	Serial Data Gateway Module - Processor 2	√	√	√			
2021	Chevrolet	Colorado	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Chevrolet	Colorado	Side Obstacle Detection Control Module - Right	√	√	√		√	
2021	Chevrolet	Colorado	Steering Wheel Angle Sensor Module	√	√	√			0093 0090

2021	Chevrolet	Corvette	Engine Control Module	√	√	√	√	√	0263 0209 0770 076B 0774 076C 0115 0086 0757 0212 0217 0775
2021	Chevrolet	Corvette	Transmission Control Module	√	√	√	√	√	0017 0797 0798
2021	Chevrolet	Corvette	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758 0229 0799
2021	Chevrolet	Corvette	Restraints Control Module	√	√	√	√	√	0758 0134
2021	Chevrolet	Corvette	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2021	Chevrolet	Corvette	Instrument Panel Cluster Control Module	√	√	√	√	√	
2021	Chevrolet	Corvette	Serial Data Gateway Module	√	√	√			
2021	Chevrolet	Corvette	Gear Shift Control Module	√					
2021	Chevrolet	Corvette	Parking Assist Control Module	√	√	√	√	√	
2021	Chevrolet	Corvette	Vehicle Performance Data Recorder	√	√	√	√		
2021	Chevrolet	Corvette	Video Processing Module	√	√	√			
2021	Chevrolet	Corvette	Wireless Accessory Charging Module	√	√	√	√		
2021	Chevrolet	Corvette	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2021	Chevrolet	Corvette	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2021	Chevrolet	Corvette	Folding Top Control Module - Left	√	√	√	√		
2021	Chevrolet	Corvette	Folding Top Control Module - Right	√	√	√			
2021	Chevrolet	Corvette	Folding Top Stowage Compartment Control Module -	√	√	√			
2021	Chevrolet	Corvette	Folding Top Stowage Compartment Control Module -	√	√	√	√		
2021	Chevrolet	Corvette	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2021	Chevrolet	Corvette	Side Obstacle Detection Control Module - Right	√	√	√			
2021	Chevrolet	Corvette	Steering Column Lock Control Module	√	√	√	√		
2021	Chevrolet	Corvette	Lighting Control Module	√	√	√	√	√	
2021	Chevrolet	Corvette	Electric Power Steering Control Module	√	√	√	√		0766
2021	Chevrolet	Corvette	Electronic Suspension Control Module	√	√	√	√	√	0198
2021	Chevrolet	Corvette	Front Suspension Leveling/Lifting Hydraulic Power Pack Module	√	√	√	√	√	
2021	Chevrolet	Corvette	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2021	Chevrolet	Corvette	Radio	√	√	√	√	√	0269 0769
2021	Chevrolet	Corvette	Radio Controls	√	√	√	√		
2021	Chevrolet	Corvette	Telematics Control Module	√	√	√	√		0270
2021	Chevrolet	Corvette	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2021	Chevrolet	Corvette	Audio Amplifier	√	√	√	√		
2021	Chevrolet	Cruze	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0114 0250 0120
2021	Chevrolet	Cruze	Transmission Control Module	√	√	√	√	√	0017 0036



2021	Chevrolet	Cruze	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2021	Chevrolet	Cruze	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Chevrolet	Cruze	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Chevrolet	Cruze	Instrument Cluster	√	√	√	√	√	0247
2021	Chevrolet	Cruze	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Chevrolet	Cruze	HVAC Controls	√	√	√	√		
2021	Chevrolet	Cruze	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	Chevrolet	Cruze	Serial Data Gateway Module - Processor 1	√	√	√			
2021	Chevrolet	Cruze	Serial Data Gateway Module - Processor 2	√	√	√			
2021	Chevrolet	Cruze	Parking Assist Control Module	√	√	√	√	√	0247 0271
2021	Chevrolet	Cruze	Steering Column Lock Control Module	√	√	√	√		
2021	Chevrolet	Cruze	Keyless Entry Control Module	√	√	√	√	√	
2021	Chevrolet	Cruze	Frontview Camera - Windshield	√	√	√	√		0196 0084
2021	Chevrolet	Cruze	Power Steering Control Module	√	√	√	√		0081 0080 0089
2021	Chevrolet	Cruze	Radio	√	√	√	√	√	0150 0226 0269 0267
2021	Chevrolet	Damas	Engine Control Module	√	√	√	√	√	0069 0087
2021	Chevrolet	Damas	Fuel Injector Control Module	√	√	√	√	√	
2021	Chevrolet	Damas	Tire Pressure Indicator Module	√	√	√	√		079D 0234
2021	Chevrolet	Equinox	Engine Control Module	√	√	√	√	√	0263 0156 0209 0147 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0764 0763 0258 0139 0020 0132 0067 075D 075E 0760 0761 0757 0076
2021	Chevrolet	Equinox	Transmission Control Module	√	√	√	√	√	0017 0036 0016 075C
2021	Chevrolet	Equinox	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2021	Chevrolet	Equinox	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0229 0111
2021	Chevrolet	Equinox	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Chevrolet	Equinox	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Chevrolet	Equinox	Instrument Cluster	√	√	√	√	√	0247
2021	Chevrolet	Equinox	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Chevrolet	Equinox	HVAC Controls	√	√	√	√		
2021	Chevrolet	Equinox	Serial Data Gateway Module	√	√	√			
2021	Chevrolet	Equinox	Video Processing Control Module	√	√	√	√	√	

2021	Chevrolet	Equinox	Frontview Camera - Windshield	√	√	√	√		0196 0084
2021	Chevrolet	Equinox	Headlamp Control Module	√	√	√	√	√	0195
2021	Chevrolet	Equinox	Liftgate Control Module	√	√	√	√	√	0146 0169
2021	Chevrolet	Equinox	Seat Memory Control Module - Driver	√	√	√	√	√	
2021	Chevrolet	Equinox	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	Chevrolet	Equinox	Power Steering Control Module	√	√	√	√		0081 0080 0089
2021	Chevrolet	Equinox	Keyless Entry Control Module	√	√	√	√	√	
2021	Chevrolet	Equinox	Passenger Presence Module	√	√	√	√	√	0057
2021	Chevrolet	Equinox	Parking Assist Control Module	√	√	√	√	√	0247 0271
2021	Chevrolet	Equinox	Steering Column Lock Control Module	√	√	√	√		
2021	Chevrolet	Equinox	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Chevrolet	Equinox	Radio	√	√	√	√	√	0150 0226 0269 0267
2021	Chevrolet	Equinox	Amplifier	√	√	√	√		
2021	Chevrolet	Equinox	Radio Controls	√	√	√	√		
2021	Chevrolet	Equinox	Rear Drive Control Module	√	√	√	√	√	0003
2021	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0263 0209 076C 0115 076D 0060 079A 0044 0045 0086 0097 0171 0219 0792 0217 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0156 0076 0020 0132 0067 0154 0212 0214 0258 0757 0006
2021	Chevrolet	Express	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2021	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0225 0111 0277 0090
2021	Chevrolet	Express	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2021	Chevrolet	Express	Body Control Module	√	√	√	√	√	0263 0261
2021	Chevrolet	Express	Theft Deterrent Module	√	√	√	√		
2021	Chevrolet	Express	Instrument Cluster	√	√	√	√	√	
2021	Chevrolet	Express	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2021	Chevrolet	Express	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2021	Chevrolet	Express	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2021	Chevrolet	Express	Parking Assist Control Module	√	√	√	√	√	0247
2021	Chevrolet	Express	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Chevrolet	Express	Side Obstacle Detection Control Module - Right	√	√	√		√	
2021	Chevrolet	Express	Frontview Camera - Windshield	√	√	√	√		0196
2021	Chevrolet	Express	Radio	√	√	√	√	√	
2021	Chevrolet	Express	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111

2021	Chevrolet	Express	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2021	Chevrolet	Gentra	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2021	Chevrolet	Gentra	Electronic Brake Control Module	√	√	√	√	√	
2021	Chevrolet	Gentra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2021	Chevrolet	Gentra	Variable Power Steering Control Module				√	√	
2021	Chevrolet	Labo	Engine Control Module	√	√	√	√	√	0069 0087
2021	Chevrolet	Labo	Fuel Injector Control Module	√	√	√	√	√	
2021	Chevrolet	Labo	Tire Pressure Indicator Module	√	√	√	√		079D 0234
2021	Chevrolet	Lacetti	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2021	Chevrolet	Lacetti	Transmission Control Module	√	√	√	√	√	0017 0036
2021	Chevrolet	Lacetti	Electronic Brake Control Module	√	√	√	√	√	
2021	Chevrolet	Lacetti	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2021	Chevrolet	Lacetti	Variable Power Steering Control Module				√	√	
2021	Chevrolet	Lacetti	Fuel Injector Control Module	√	√	√	√	√	
2021	Chevrolet	Malibu	Engine Control Module	√	√	√	√	√	0263 0209 075D 075E 075F 0760 0115 0756 0761 0086 0213 0757 0212 0217 0762 0006 0144 0258 0139 0763 0764 0765 0156 0147 0085 0154 0221 0214 0132 0067 0176 0215
2021	Chevrolet	Malibu	Transmission Control Module	√	√	√	√	√	0016 075C 0017 0036
2021	Chevrolet	Malibu	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2021	Chevrolet	Malibu	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2021	Chevrolet	Malibu	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Chevrolet	Malibu	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Chevrolet	Malibu	Instrument Cluster	√	√	√	√	√	0247
2021	Chevrolet	Malibu	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Chevrolet	Malibu	HVAC Controls	√	√	√	√		
2021	Chevrolet	Malibu	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Chevrolet	Malibu	Side Obstacle Detection Control Module - Right	√	√	√		√	
2021	Chevrolet	Malibu	Headlamp Control Module	√	√	√	√	√	0195
2021	Chevrolet	Malibu	Seat Memory Control Module - Driver	√	√	√	√	√	
2021	Chevrolet	Malibu	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	Chevrolet	Malibu	Parking Assist Control Module	√	√	√	√	√	0247 0271
2021	Chevrolet	Malibu	Serial Data Gateway Module - Processor 1	√	√	√			
2021	Chevrolet	Malibu	Serial Data Gateway Module - Processor 2	√	√	√			
2021	Chevrolet	Malibu	Steering Column Lock Control Module	√	√	√	√		

2021	Chevrolet	Malibu	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2021	Chevrolet	Malibu	Keyless Entry Control Module	√	√	√	√	√	
2021	Chevrolet	Malibu	Passenger Presence Module	√	√	√	√	√	0057
2021	Chevrolet	Malibu	Active Safety Control Module	√	√	√	√		
2021	Chevrolet	Malibu	Frontview Camera - Windshield	√	√	√	√		0196
2021	Chevrolet	Malibu	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Chevrolet	Malibu	Power Steering Control Module	√	√	√	√		0081 0080 0089
2021	Chevrolet	Malibu	Radio	√	√	√	√	√	0150 0226 0269 0267
2021	Chevrolet	Malibu	Amplifier	√	√	√	√		
2021	Chevrolet	Malibu	Radio Controls	√	√	√	√		0241
2021	Chevrolet	Malibu	Brake Booster Control Module	√	√	√	√		
2021	Chevrolet	Max	Engine Control Module	√	√	√	√	√	0069 0087 079C
2021	Chevrolet	Max	Electronic Brake Control Module	√	√	√	√	√	
2021	Chevrolet	Max	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2021	Chevrolet	Move	Engine Control Module	√	√	√	√	√	0069 0087 079C
2021	Chevrolet	Move	Electronic Brake Control Module	√	√	√	√	√	
2021	Chevrolet	Move	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2021	Chevrolet	Nexia	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2021	Chevrolet	Nexia	Transmission Control Module	√	√	√	√	√	0017 0036
2021	Chevrolet	Nexia	Electronic Brake Control Module	√	√	√	√	√	
2021	Chevrolet	Nexia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2021	Chevrolet	Nexia	Instrument Cluster	√	√	√		√	
2021	Chevrolet	Nexia	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2021	Chevrolet	Nexia	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2021	Chevrolet	Nexia	Tire Pressure Indicator Module	√	√	√	√		079D 0234
2021	Chevrolet	Nexia	Keyless Entry Control Module				√		
2021	Chevrolet	Onix	Engine Control Module	√	√	√	√	√	0263 0156 0209 0774 0212 0217 0258 0086 0775 0139 079E 0085 0154 0144 0115 0132
2021	Chevrolet	Onix	Transmission Control Module	√	√	√	√	√	0017
2021	Chevrolet	Onix	Electronic Brake Control Module	√	√	√	√	√	0269 0090
2021	Chevrolet	Onix	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0111 0172 0134 0758
2021	Chevrolet	Onix	Body Control Module	√	√	√	√	√	0269 0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0222 0150
2021	Chevrolet	Onix	Instrument Cluster	√	√	√	√	√	0269 0247
2021	Chevrolet	Onix	HVAC Control Module	√	√	√	√	√	0007 0269
2021	Chevrolet	Onix	Serial Data Gateway Module	√	√	√			
2021	Chevrolet	Onix	Radio	√	√	√	√	√	0269

2021	Chevrolet	Onix	Telematics Communication Interface Control Module	√	√	√	√		
2021	Chevrolet	Onix	Firewall Control Module	√	√	√	√	√	0269
2021	Chevrolet	Onix	Electric Power Steering Control Module	√	√	√	√		079F
2021	Chevrolet	Onix	Parking Assist Control Module	√	√	√	√	√	0247 0271
2021	Chevrolet	Onix	Steering Column Lock Control Module	√	√	√	√		
2021	Chevrolet	Onix	Power Steering Control Module	√	√	√	√		0207
2021	Chevrolet	Onix	Passenger Presence Module	√	√	√	√		0057
2021	Chevrolet	Onix	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2021	Chevrolet	Onix	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2021	Chevrolet	Optra	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2021	Chevrolet	Optra	Transmission Control Module	√	√	√	√	√	0017 0036
2021	Chevrolet	Optra	Electronic Brake Control Module	√	√	√	√	√	
2021	Chevrolet	Optra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2021	Chevrolet	Optra	Body Control Module	√	√	√	√	√	
2021	Chevrolet	Optra	Instrument Cluster	√	√	√	√	√	
2021	Chevrolet	Optra	Power Steering Control Module	√	√	√	√		0089 0081 0080
2021	Chevrolet	Prisma	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0115
2021	Chevrolet	Prisma	Electronic Brake Control Module	√	√	√	√	√	0090
2021	Chevrolet	Prisma	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Chevrolet	Prisma	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Chevrolet	Prisma	Instrument Cluster	√	√	√	√	√	0247
2021	Chevrolet	Prisma	Serial Data Gateway Module	√	√	√			
2021	Chevrolet	Prisma	Parking Assist Control Module	√	√	√	√	√	0247 0271
2021	Chevrolet	Prisma	Passenger Presence Module	√	√	√	√		0057
2021	Chevrolet	Prisma	Power Steering Control Module	√	√	√	√		0207
2021	Chevrolet	Prisma	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2021	Chevrolet	Prisma	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2021	Chevrolet	S10	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0210 0224 0130 0222 0066 0147 0060 0044 0045 0109 0068 0084 0070 0071 0074 0075 0043 0173 0179 0181 0183 0185
2021	Chevrolet	S10	Transmission Control Module	√	√	√	√	√	0016
2021	Chevrolet	S10	Electronic Brake Control Module	√	√	√	√	√	0090 0112 0111

2021	Chevrolet	S10	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Chevrolet	S10	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Chevrolet	S10	Instrument Cluster	√	√	√	√	√	0247
2021	Chevrolet	S10	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Chevrolet	S10	HVAC Controls	√	√	√	√	√	
2021	Chevrolet	S10	Serial Data Gateway Module	√	√	√			
2021	Chevrolet	S10	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Chevrolet	S10	Side Obstacle Detection Control Module - Right	√	√	√		√	
2021	Chevrolet	S10	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	Chevrolet	S10	Parking Assist Control Module	√	√	√	√	√	0247 0271
2021	Chevrolet	S10	Trailer Lighting Control Module	√	√	√	√	√	0247
2021	Chevrolet	S10	Radio	√	√	√	√	√	0150 0226 0269 0267
2021	Chevrolet	S10	Frontview Camera - Windshield	√	√	√	√	√	0196
2021	Chevrolet	S10	Power Steering Control Module	√	√	√	√		0093 0090
2021	Chevrolet	S10	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2021	Chevrolet	S10	Transfer Case Control Module	√	√	√	√	√	0037
2021	Chevrolet	S10	Passenger Presence Module	√	√	√	√	√	0057
2021	Chevrolet	Sail	Engine Control Module	√	√	√	√	√	0156 0020 0140
2021	Chevrolet	Sail	Transmission Control Module	√	√	√	√	√	0016
2021	Chevrolet	Sail	Electronic Brake Control Module	√	√	√	√	√	0111 0090
2021	Chevrolet	Sail	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261 0111
2021	Chevrolet	Sail	Body Control Module	√	√	√	√	√	0263
2021	Chevrolet	Sail	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Chevrolet	Sail	Radio/HVAC Controls	√	√	√	√	√	0150
2021	Chevrolet	Sail	Power Steering Control Module	√	√	√	√		0081 0089
2021	Chevrolet	Sail	Radio	√	√	√	√	√	
2021	Chevrolet	Sail	Telematics Communication Interface Control Module	√	√	√		√	
2021	Chevrolet	Sail	Steering Wheel Angle Sensor Module	√	√	√			0093 0090

2021	Chevrolet	Silverado	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 075F 0216 07A9 076C 076D 0058 0097 0219 0221 0792 0215 077A 0073 0072 0070 0071 0117 0119 077E 0178 0180 0182 0184 0186 0188 0246 0131 0067 079A 0045 0044 0088 07AA 0118
2021	Chevrolet	Silverado	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2021	Chevrolet	Silverado	Brake System Control Module	√	√	√	√	√	0229 0225 0090 0758 0767 0768 078E 078F
2021	Chevrolet	Silverado	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0771 0277 078F 0790
2021	Chevrolet	Silverado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Chevrolet	Silverado	Instrument Cluster	√	√	√	√	√	0247
2021	Chevrolet	Silverado	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Chevrolet	Silverado	HVAC Controls	√	√	√	√		
2021	Chevrolet	Silverado	Power Steering Control Module	√	√	√	√		0089 0084 0273 0082
2021	Chevrolet	Silverado	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2021	Chevrolet	Silverado	Suspension Control Module	√	√	√	√	√	
2021	Chevrolet	Silverado	Rear Gate Module	√	√	√	√		
2021	Chevrolet	Silverado	Seat Memory Control Module - Driver	√	√	√	√	√	
2021	Chevrolet	Silverado	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	Chevrolet	Silverado	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2021	Chevrolet	Silverado	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 07AB 0009 07AC
2021	Chevrolet	Silverado	Assist Step Control Module	√	√	√	√	√	
2021	Chevrolet	Silverado	Trailer Lighting Control Module	√	√	√	√	√	
2021	Chevrolet	Silverado	Parking Assist Control Module	√	√	√	√	√	0247
2021	Chevrolet	Silverado	Serial Data Gateway Module - Processor 1	√	√	√			

2021	Chevrolet	Silverado	Serial Data Gateway Module - Processor 2	√	√	√			
2021	Chevrolet	Silverado	Steering Column Lock Control Module	√	√	√	√		
2021	Chevrolet	Silverado	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Chevrolet	Silverado	Side Obstacle Detection Control Module - Right	√	√	√		√	
2021	Chevrolet	Silverado	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2021	Chevrolet	Silverado	Video Processing Control Module	√	√	√	√	√	
2021	Chevrolet	Silverado	Keyless Entry Control Module	√	√	√	√	√	
2021	Chevrolet	Silverado	Passenger Presence Module	√	√	√	√	√	0057
2021	Chevrolet	Silverado	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A 0084
2021	Chevrolet	Silverado	Transfer Case Control Module	√	√	√	√	√	0037 0776 07A6 0099
2021	Chevrolet	Silverado	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2021	Chevrolet	Silverado	Radio	√	√	√	√	√	0150 0226 0269 0267
2021	Chevrolet	Silverado	Amplifier	√	√	√	√		
2021	Chevrolet	Spark	Engine Control Module	√	√	√	√	√	0156 0140 0209 0132 0067 0263 0086 0217 0139 0069 0087 0115
2021	Chevrolet	Spark	Transmission Control Module	√	√	√	√	√	0017 0016
2021	Chevrolet	Spark	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2021	Chevrolet	Spark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Chevrolet	Spark	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160 0233 0159 0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0267
2021	Chevrolet	Spark	Instrument Cluster	√	√	√	√	√	0247
2021	Chevrolet	Spark	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Chevrolet	Spark	HVAC Controls	√	√	√	√		
2021	Chevrolet	Spark	Parking Assist Control Module	√	√	√	√	√	0247 0271
2021	Chevrolet	Spark	Serial Data Gateway Module - Processor 1	√	√	√			
2021	Chevrolet	Spark	Serial Data Gateway Module - Processor 2	√	√	√			
2021	Chevrolet	Spark	Steering Column Lock Control Module	√	√	√	√		
2021	Chevrolet	Spark	Keyless Entry Control Module	√	√	√	√	√	
2021	Chevrolet	Spark	Passenger Presence Module	√	√	√	√	√	0057
2021	Chevrolet	Spark	Short Range Remote Control Transceiver	√	√	√	√		
2021	Chevrolet	Spark	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	Chevrolet	Spark	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2021	Chevrolet	Spark	Power Steering Control Module	√	√	√	√		0089
2021	Chevrolet	Spark	Radio	√	√	√	√	√	0226 0150 0269
2021	Chevrolet	Spin	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0115
2021	Chevrolet	Spin	Transmission Control Module	√	√	√	√	√	0017 0036
2021	Chevrolet	Spin	Electronic Brake Control Module	√	√	√	√	√	0090



2021	Chevrolet	Spin	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Chevrolet	Spin	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Chevrolet	Spin	Instrument Cluster	√	√	√	√	√	0247
2021	Chevrolet	Spin	Serial Data Gateway Module	√	√	√			
2021	Chevrolet	Spin	Power Steering Control Module	√	√	√	√		0207
2021	Chevrolet	Spin	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2021	Chevrolet	Spin	Telematics Communication Interface Control Module	√	√	√		√	
2021	Chevrolet	Spin	Parking Assist Control Module	√	√	√	√	√	0247 0271
2021	Chevrolet	Spin	Radio	√	√	√	√	√	0226
2021	Chevrolet	Spin	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2021	Chevrolet	Suburban	Engine Control Module	√	√	√	√	√	0263 0209 0777 075E 075F 0778 076C 0115 076D 0779 0086 0085 0097 0221 077A 077B 077C 077D 0764 0763 0117 0119 0258 077E 077F 0780 0781 0782 0783 0784 0774 0757 0212 0217 0775 0139
2021	Chevrolet	Suburban	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2021	Chevrolet	Suburban	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2021	Chevrolet	Suburban	Restraints Control Module	√	√	√	√	√	0758 0134
2021	Chevrolet	Suburban	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2021	Chevrolet	Suburban	Instrument Panel Cluster Control Module	√	√	√	√	√	
2021	Chevrolet	Suburban	Serial Data Gateway Module	√	√	√			
2021	Chevrolet	Suburban	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2021	Chevrolet	Suburban	Rear Gate Module	√	√	√	√		0753
2021	Chevrolet	Suburban	Trailer Lamp Control Module	√	√	√	√	√	
2021	Chevrolet	Suburban	Wireless Accessory Charging Module	√	√	√	√		
2021	Chevrolet	Suburban	Video Processing Module	√	√	√			
2021	Chevrolet	Suburban	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Chevrolet	Suburban	Image Processing Module	√	√	√	√		
2021	Chevrolet	Suburban	Frontview Camera - Windshield	√	√	√	√		0196
2021	Chevrolet	Suburban	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2021	Chevrolet	Suburban	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D

2021	Chevrolet	Suburban	Electronic Suspension Control Module	√	√	√	√	√	0198
2021	Chevrolet	Suburban	Power Steering Control Module	√	√	√	√		0089
2021	Chevrolet	Suburban	Running Board Control Module	√	√	√	√	√	
2021	Chevrolet	Suburban	Parking Assist Control Module	√	√	√	√	√	
2021	Chevrolet	Suburban	Steering Column Lock Control Module	√	√	√	√		
2021	Chevrolet	Suburban	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2021	Chevrolet	Suburban	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2021	Chevrolet	Suburban	Lighting Control Module	√	√	√	√	√	
2021	Chevrolet	Suburban	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2021	Chevrolet	Suburban	Side Obstacle Detection Control Module - Right	√	√	√			
2021	Chevrolet	Suburban	Gear Shift Control Module	√					
2021	Chevrolet	Suburban	Driver Monitoring System Control Module	√	√	√			
2021	Chevrolet	Suburban	Radio	√	√	√	√	√	0269 0769 07A7 07A8
2021	Chevrolet	Suburban	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2021	Chevrolet	Suburban	Video Display - Right Front Seat Back	√	√	√			
2021	Chevrolet	Suburban	Chassis Control Module - Auxiliary	√	√	√	√		
2021	Chevrolet	Suburban	UHF Short Range Low Energy Remote Control Access Transceiver	√	√	√			
2021	Chevrolet	Suburban	Short Range Radar Sensor - Left Front	√	√	√			0772
2021	Chevrolet	Suburban	Short Range Radar Sensor - Left Rear	√	√	√			0772
2021	Chevrolet	Suburban	Short Range Radar Sensor - Right Front	√	√	√			0772
2021	Chevrolet	Suburban	Short Range Radar Sensor - Right Rear	√	√	√			0772
2021	Chevrolet	Suburban	Differential Control Module	√	√	√	√	√	
2021	Chevrolet	Suburban	Heater and Air Conditioning Auxiliary Control	√	√	√			
2021	Chevrolet	Suburban	Radio Controls	√	√	√	√		
2021	Chevrolet	Suburban	Telematics Control Module	√	√	√	√		0270
2021	Chevrolet	Suburban	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2021	Chevrolet	Suburban	Audio Amplifier	√	√	√	√		
2021	Chevrolet	Tahoe	Engine Control Module	√	√	√	√	√	0263 0209 0777 075E 075F 0778 076C 0115 076D 0779 0086 0085 0097 0221 077A 077B 077C 077D 0764 0763 0117 0119 0258 077E 077F 0780 0781 0782 0783 0784 0774 0757 0212 0217 0775 0139
2021	Chevrolet	Tahoe	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2021	Chevrolet	Tahoe	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2021	Chevrolet	Tahoe	Restraints Control Module	√	√	√	√	√	0758 0134

2021	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2021	Chevrolet	Tahoe	Instrument Panel Cluster Control Module	√	√	√	√	√	
2021	Chevrolet	Tahoe	Serial Data Gateway Module	√	√	√			
2021	Chevrolet	Tahoe	Video Processing Module	√	√	√			
2021	Chevrolet	Tahoe	Electronic Suspension Control Module	√	√	√	√	√	0198
2021	Chevrolet	Tahoe	Power Steering Control Module	√	√	√	√		0089
2021	Chevrolet	Tahoe	Wireless Accessory Charging Module	√	√	√	√		
2021	Chevrolet	Tahoe	Gear Shift Control Module	√					
2021	Chevrolet	Tahoe	Lighting Control Module	√	√	√	√	√	
2021	Chevrolet	Tahoe	Parking Assist Control Module	√	√	√	√	√	
2021	Chevrolet	Tahoe	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2021	Chevrolet	Tahoe	Side Obstacle Detection Control Module - Right	√	√	√			
2021	Chevrolet	Tahoe	Trailer Lamp Control Module	√	√	√	√	√	
2021	Chevrolet	Tahoe	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2021	Chevrolet	Tahoe	Rear Gate Module	√	√	√	√		0753
2021	Chevrolet	Tahoe	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Chevrolet	Tahoe	Frontview Camera - Windshield	√	√	√	√		0196
2021	Chevrolet	Tahoe	Image Processing Module	√	√	√	√		
2021	Chevrolet	Tahoe	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2021	Chevrolet	Tahoe	Audio Amplifier	√	√	√	√		
2021	Chevrolet	Tahoe	Radio	√	√	√	√	√	0269 0769 07A7 07A8
2021	Chevrolet	Tahoe	Steering Column Lock Control Module	√	√	√	√		
2021	Chevrolet	Tahoe	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2021	Chevrolet	Tahoe	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2021	Chevrolet	Tahoe	Running Board Control Module	√	√	√	√	√	
2021	Chevrolet	Tahoe	Chassis Control Module - Auxiliary	√	√	√	√		
2021	Chevrolet	Tahoe	Video Display - Right Front Seat Back	√	√	√			
2021	Chevrolet	Tahoe	UHF Short Range Low Energy Remote Control Access Transceiver	√	√	√			
2021	Chevrolet	Tahoe	Short Range Radar Sensor - Left Front	√	√	√			0772
2021	Chevrolet	Tahoe	Short Range Radar Sensor - Left Rear	√	√	√			0772
2021	Chevrolet	Tahoe	Short Range Radar Sensor - Right Front	√	√	√			0772
2021	Chevrolet	Tahoe	Short Range Radar Sensor - Right Rear	√	√	√			0772
2021	Chevrolet	Tahoe	Differential Control Module	√	√	√	√	√	
2021	Chevrolet	Tahoe	Heater and Air Conditioning Auxiliary Control	√	√	√			
2021	Chevrolet	Tahoe	Radio Controls	√	√	√	√		
2021	Chevrolet	Tahoe	Telematics Control Module	√	√	√	√		0270
2021	Chevrolet	Tahoe	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057

2021	Chevrolet	Tracker	Engine Control Module	√	√	√	√	√	0263 0156 0209 0757 0066 0774 0212 0217 0258 0086 0775 0139 079E 0085 0154 0144 0115 0140 0147
2021	Chevrolet	Tracker	Transmission Control Module	√	√	√	√	√	0017
2021	Chevrolet	Tracker	Electronic Brake Control Module	√	√	√	√	√	0269
2021	Chevrolet	Tracker	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0111
2021	Chevrolet	Tracker	Body Control Module	√	√	√	√	√	0269
2021	Chevrolet	Tracker	Instrument Cluster	√	√	√	√	√	0269
2021	Chevrolet	Tracker	HVAC Control Module	√	√	√	√	√	0007 0269
2021	Chevrolet	Tracker	Frontview Camera - Windshield	√	√	√	√		0269
2021	Chevrolet	Tracker	Radio	√	√	√	√	√	0269
2021	Chevrolet	Tracker	Parking Assist Control Module	√	√	√	√	√	0269
2021	Chevrolet	Tracker	Telematics Communication Interface Control Module	√	√	√	√		
2021	Chevrolet	Tracker	Firewall Control Module	√	√	√	√	√	0269
2021	Chevrolet	Tracker	Electric Power Steering Control Module	√	√	√	√		079F 0269
2021	Chevrolet	Tracker	Steering Column Lock Control Module	√	√	√	√		
2021	Chevrolet	Trailblazer	Engine Control Module	√	√	√	√	√	0263 0209 0132 0115 0086 0212 0214 0217 0006 0144 0139 0757 0085 075D 075E 075F 0760 0756 0761 0213 0762 0258 0763 0764 0765 0791 076C 076D 0058 0097 0219 0221 0792 0073 0072 0070 0071 0117 0119 077E 0178 0180 0182 0184 0186 0188 0246 0066 0210 0224 0130 0222 0147 0060 0044 0045 0109 0068 0084 0074 0075 0013 0153 0130
2021	Chevrolet	Trailblazer	Transmission Control Module	√	√	√	√	√	0016 075C 0017
2021	Chevrolet	Trailblazer	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2021	Chevrolet	Trailblazer	Electronic Brake Control Module	√	√	√	√	√	0090 0112 0111
2021	Chevrolet	Trailblazer	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Chevrolet	Trailblazer	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Chevrolet	Trailblazer	Instrument Cluster	√	√	√	√	√	0247
2021	Chevrolet	Trailblazer	HVAC Control Module	√	√	√	√	√	0007 0129

2021	Chevrolet	Trailblazer	HVAC Controls	√	√	√	√	√	
2021	Chevrolet	Trailblazer	Serial Data Gateway Module	√	√	√			
2021	Chevrolet	Trailblazer	Frontview Camera - Windshield	√	√	√	√	√	0196
2021	Chevrolet	Trailblazer	Parking Assist Control Module	√	√	√	√	√	0247 0271
2021	Chevrolet	Trailblazer	Keyless Entry Control Module	√	√	√	√	√	
2021	Chevrolet	Trailblazer	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	Chevrolet	Trailblazer	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Chevrolet	Trailblazer	Side Obstacle Detection Control Module - Right	√	√	√		√	
2021	Chevrolet	Trailblazer	Passenger Presence Module	√	√	√	√	√	0057
2021	Chevrolet	Trailblazer	Trailer Lighting Control Module	√	√	√	√	√	0247
2021	Chevrolet	Trailblazer	Radio	√	√	√	√	√	0150 0226 0269 0267
2021	Chevrolet	Trailblazer	Transfer Case Control Module	√	√	√	√	√	0037
2021	Chevrolet	Trailblazer	Power Steering Control Module	√	√	√	√		0089 0084 0093 0090
2021	Chevrolet	Trailblazer	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2021	Chevrolet	Trailblazer	Headlamp Control Module	√	√	√	√	√	0195
2021	Chevrolet	Trailblazer	Amplifier	√	√	√	√		
2021	Chevrolet	Trailblazer	Serial Data Gateway Module - Processor 1	√	√	√			
2021	Chevrolet	Trailblazer	Serial Data Gateway Module - Processor 2	√	√	√			
2021	Chevrolet	Trailblazer	Head-Up Display Module	√	√	√	√	√	
2021	Chevrolet	Trailblazer	Rear Drive Control Module	√	√	√	√	√	0003
2021	Chevrolet	Trailblazer	Liftgate Control Module	√	√	√	√	√	0146 0169
2021	Chevrolet	Traverse	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0756 0085 0757
2021	Chevrolet	Traverse	Transmission Control Module	√	√	√	√	√	0017
2021	Chevrolet	Traverse	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2021	Chevrolet	Traverse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2021	Chevrolet	Traverse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Chevrolet	Traverse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Chevrolet	Traverse	Instrument Cluster	√	√	√	√	√	0247
2021	Chevrolet	Traverse	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Chevrolet	Traverse	HVAC Controls	√	√	√	√		
2021	Chevrolet	Traverse	Liftgate Control Module	√	√	√	√	√	0146 0169
2021	Chevrolet	Traverse	Seat Memory Control Module - Driver	√	√	√	√	√	
2021	Chevrolet	Traverse	Telematics Communication Interface Control Module	√	√	√	√	√	0755

2021	Chevrolet	Traverse	Video Processing Control Module	√	√	√	√	√	
2021	Chevrolet	Traverse	Rear Drive Control Module	√	√	√	√	√	0003
2021	Chevrolet	Traverse	Parking Assist Control Module	√	√	√	√	√	0247 0271
2021	Chevrolet	Traverse	Serial Data Gateway Module - Processor 1	√	√	√			
2021	Chevrolet	Traverse	Serial Data Gateway Module - Processor 2	√	√	√			
2021	Chevrolet	Traverse	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	Chevrolet	Traverse	Keyless Entry Control Module	√	√	√	√	√	0759
2021	Chevrolet	Traverse	Passenger Presence Module	√	√	√	√	√	0057
2021	Chevrolet	Traverse	Active Safety Control Module	√	√	√	√		
2021	Chevrolet	Traverse	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	Chevrolet	Traverse	Frontview Camera - Windshield	√	√	√	√		0196
2021	Chevrolet	Traverse	Radio	√	√	√	√	√	0150 0226 0269 0267
2021	Chevrolet	Traverse	Amplifier	√	√	√	√		
2021	Chevrolet	Traverse	Radio Controls	√	√	√	√		0241
2021	Chevrolet	Traverse	Power Steering Control Module	√	√	√	√		0089 0084
2021	Chevrolet	Traverse	Suspension Control Module	√	√	√	√	√	
2021	Chevrolet	Traverse	Steering Column Lock Control Module	√	√	√	√		
2021	Chevrolet	Trax	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0066 076D 0222 0044 0045 0171 0219 0074 0075 0072 0073 0070 0071 0117 0119 077E 0178
2021	Chevrolet	Trax	Transmission Control Module	√	√	√	√	√	0017 0036
2021	Chevrolet	Trax	Electronic Brake Control Module	√	√	√	√	√	0090
2021	Chevrolet	Trax	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	Chevrolet	Trax	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Chevrolet	Trax	Instrument Cluster	√	√	√	√	√	0247
2021	Chevrolet	Trax	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Chevrolet	Trax	HVAC Controls	√	√	√	√		
2021	Chevrolet	Trax	Serial Data Gateway Module	√	√	√			
2021	Chevrolet	Trax	Front Seat Heating Control Module	√	√	√	√	√	
2021	Chevrolet	Trax	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0755
2021	Chevrolet	Trax	Power Supply Transformer	√	√	√	√		
2021	Chevrolet	Trax	Parking Assist Control Module	√	√	√	√	√	0247 0271
2021	Chevrolet	Trax	Side Obstacle Detection Control Module - Left	√	√	√		√	

2021	Chevrolet	Trax	Steering Column Lock Control Module	√	√	√	√		
2021	Chevrolet	Trax	Keyless Entry Control Module	√	√	√	√	√	
2021	Chevrolet	Trax	Passenger Presence Module	√	√	√	√		0057
2021	Chevrolet	Trax	Power Steering Control Module	√	√	√	√		0207
2021	Chevrolet	Trax	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2021	Chevrolet	Trax	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2021	Chevrolet	Trax	Chassis Control Module	√	√	√	√	√	0217
2021	Chevrolet	Trax	Amplifier	√	√	√	√		
2021	Chevrolet	Trax	Radio Controls	√	√	√	√		0241
2021	Chevrolet	Trax	Rear Drive Control Module	√	√	√	√		0003 075B
2021	Chevrolet	Trax	Radio	√	√	√	√	√	0150 0226 0269
2021	Chevrolet	Work	Engine Control Module	√	√	√	√	√	0069 0087 079C
2021	Chevrolet	Work	Electronic Brake Control Module	√	√	√	√	√	
2021	Chevrolet	Work	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2021	GMC	Acadia	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 0156 0020 0132 0067 0154 0213 0214 0756
2021	GMC	Acadia	Transmission Control Module	√	√	√	√	√	0017
2021	GMC	Acadia	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2021	GMC	Acadia	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2021	GMC	Acadia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	GMC	Acadia	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	GMC	Acadia	Instrument Cluster	√	√	√	√	√	0247
2021	GMC	Acadia	HVAC Control Module	√	√	√	√	√	0007 0129
2021	GMC	Acadia	HVAC Controls	√	√	√	√		
2021	GMC	Acadia	Liftgate Control Module	√	√	√	√	√	0146 0169
2021	GMC	Acadia	Seat Memory Control Module - Driver	√	√	√	√	√	
2021	GMC	Acadia	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	GMC	Acadia	Video Processing Control Module	√	√	√	√	√	
2021	GMC	Acadia	Parking Assist Control Module	√	√	√	√	√	0247
2021	GMC	Acadia	Serial Data Gateway Module - Processor 1	√	√	√			
2021	GMC	Acadia	Serial Data Gateway Module - Processor 2	√	√	√			
2021	GMC	Acadia	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	GMC	Acadia	Steering Column Lock Control Module	√	√	√	√		

2021	GMC	Acadia	Keyless Entry Control Module	√	√	√	√	√	0759
2021	GMC	Acadia	Passenger Presence Module	√	√	√	√	√	0057
2021	GMC	Acadia	Active Safety Control Module	√	√	√	√		
2021	GMC	Acadia	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	GMC	Acadia	Frontview Camera - Windshield	√	√	√	√		0196
2021	GMC	Acadia	Power Steering Control Module	√	√	√	√		0089 0084
2021	GMC	Acadia	Suspension Control Module	√	√	√	√	√	
2021	GMC	Acadia	Rear Drive Control Module	√	√	√	√	√	0003
2021	GMC	Acadia	Radio	√	√	√	√	√	0150 0226 0269 0267
2021	GMC	Acadia	Amplifier	√	√	√	√		
2021	GMC	Acadia	Side Obstacle Detection Control Module - Right	√	√	√		√	
2021	GMC	Canyon	Engine Control Module	√	√	√	√	√	0263 0209 0115 0756 0086 0085 0757 0217 0258 0139 0006 076C 076D 0060 079A 0044 0045 0097 0171 0219 0792 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0156 0020 0132 0067 0154
2021	GMC	Canyon	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2021	GMC	Canyon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2021	GMC	Canyon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	GMC	Canyon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	GMC	Canyon	Instrument Cluster	√	√	√	√	√	0247
2021	GMC	Canyon	HVAC Control Module	√	√	√	√	√	0007 0129
2021	GMC	Canyon	HVAC Controls	√	√	√	√	√	
2021	GMC	Canyon	Parking Assist Control Module	√	√	√	√	√	0247
2021	GMC	Canyon	Passenger Presence Module	√	√	√	√	√	0057
2021	GMC	Canyon	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	GMC	Canyon	Amplifier	√	√	√	√		
2021	GMC	Canyon	Radio	√	√	√	√	√	0150 0226 0269 0267
2021	GMC	Canyon	Frontview Camera - Windshield	√	√	√	√	√	0196
2021	GMC	Canyon	Power Steering Control Module	√	√	√	√		0093 0090
2021	GMC	Canyon	Transfer Case Control Module	√	√	√	√	√	0037
2021	GMC	Canyon	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245



2021	GMC	Canyon	Serial Data Gateway Module - Processor 1	√	√	√			
2021	GMC	Canyon	Serial Data Gateway Module - Processor 2	√	√	√			
2021	GMC	Savana	Engine Control Module	√	√	√	√	√	0263 0209 076C 0115 076D 0060 079A 0044 0045 0086 0097 0171 0219 0792 0217 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0156 0076 0020 0132 0067 0154 0212 0214 0258 0757 0006
2021	GMC	Savana	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2021	GMC	Savana	Electronic Brake Control Module	√	√	√	√	√	0225 0111 0277 0090
2021	GMC	Savana	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2021	GMC	Savana	Body Control Module	√	√	√	√	√	0263 0261
2021	GMC	Savana	Theft Deterrent Module	√	√	√	√		
2021	GMC	Savana	Instrument Cluster	√	√	√	√	√	
2021	GMC	Savana	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2021	GMC	Savana	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2021	GMC	Savana	Parking Assist Control Module	√	√	√	√	√	0247
2021	GMC	Savana	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	GMC	Savana	Side Obstacle Detection Control Module - Right	√	√	√		√	
2021	GMC	Savana	Frontview Camera - Windshield	√	√	√	√		0196
2021	GMC	Savana	Radio	√	√	√	√	√	
2021	GMC	Savana	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2021	GMC	Sierra	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 075F 0216 07A9 076C 076D 0058 0097 0219 0221 0792 0215 077A 0073 0072 0070 0071 0117 0119 077E 0178 0180 0182 0184 0186 0188 0246 0131 0067 079A 0045 0044 0088 07AA 0118

2021	GMC	Sierra	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2021	GMC	Sierra	Brake System Control Module	√	√	√	√	√	0229 0225 0090 0758 0767 0768 078E 078F
2021	GMC	Sierra	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0771 0277 078F 0790
2021	GMC	Sierra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	GMC	Sierra	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0158
2021	GMC	Sierra	Instrument Cluster	√	√	√	√	√	0247
2021	GMC	Sierra	HVAC Control Module	√	√	√	√	√	0007 0129
2021	GMC	Sierra	HVAC Controls	√	√	√	√		
2021	GMC	Sierra	Power Steering Control Module	√	√	√	√		0089 0084 0273 0082
2021	GMC	Sierra	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2021	GMC	Sierra	Suspension Control Module	√	√	√	√	√	
2021	GMC	Sierra	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2021	GMC	Sierra	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 07AB 0009 07AC
2021	GMC	Sierra	Assist Step Control Module	√	√	√	√	√	
2021	GMC	Sierra	Trailer Lighting Control Module	√	√	√	√	√	
2021	GMC	Sierra	Parking Assist Control Module	√	√	√	√	√	0247
2021	GMC	Sierra	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	GMC	Sierra	Side Obstacle Detection Control Module - Right	√	√	√		√	
2021	GMC	Sierra	Serial Data Gateway Module - Processor 1	√	√	√			
2021	GMC	Sierra	Serial Data Gateway Module - Processor 2	√	√	√			
2021	GMC	Sierra	Steering Column Lock Control Module	√	√	√	√		
2021	GMC	Sierra	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2021	GMC	Sierra	Video Processing Control Module	√	√	√	√	√	
2021	GMC	Sierra	Keyless Entry Control Module	√	√	√	√	√	
2021	GMC	Sierra	Passenger Presence Module	√	√	√	√	√	0057
2021	GMC	Sierra	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A 0084
2021	GMC	Sierra	Rear Gate Module	√	√	√	√		
2021	GMC	Sierra	Seat Memory Control Module - Driver	√	√	√	√	√	
2021	GMC	Sierra	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	GMC	Sierra	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2021	GMC	Sierra	Transfer Case Control Module	√	√	√	√	√	0037 0776 07A6 0099
2021	GMC	Sierra	Radio	√	√	√	√	√	0150 0226 0269 0267

2021	GMC	Sierra	Amplifier	√	√	√	√		
2021	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 075D 075E 0760 0761 0757 0764 0763
2021	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0017
2021	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0229 0111
2021	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	GMC	Terrain	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0247
2021	GMC	Terrain	HVAC Control Module	√	√	√	√	√	0007 0129
2021	GMC	Terrain	HVAC Controls	√	√	√	√		
2021	GMC	Terrain	Serial Data Gateway Module	√	√	√			
2021	GMC	Terrain	Video Processing Control Module	√	√	√	√	√	
2021	GMC	Terrain	Headlamp Control Module	√	√	√	√	√	0195
2021	GMC	Terrain	Headlamp High Beam Control Module	√	√	√	√	√	0247
2021	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146 0169
2021	GMC	Terrain	Seat Memory Control Module - Driver	√	√	√	√	√	
2021	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	GMC	Terrain	Frontview Camera - Windshield	√	√	√	√		0196 0084
2021	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0080 0089
2021	GMC	Terrain	Keyless Entry Control Module	√	√	√	√	√	
2021	GMC	Terrain	Passenger Presence Module	√	√	√	√	√	0057
2021	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0247 0271
2021	GMC	Terrain	Steering Column Lock Control Module	√	√	√	√		
2021	GMC	Terrain	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	GMC	Terrain	Head-Up Display Module	√	√	√	√	√	
2021	GMC	Terrain	Radio	√	√	√	√	√	0150 0226 0269 0267
2021	GMC	Terrain	Amplifier	√	√	√	√		
2021	GMC	Terrain	Rear Drive Control Module	√	√	√	√	√	0003

2021	GMC	Yukon	Engine Control Module	√	√	√	√	√	0263 0209 0777 075E 075F 0778 076C 0115 076D 0779 0086 0085 0097 0221 077A 077B 077C 077D 0764 0763 0117 0119 0258 077E 077F 0780 0781 0782 0783 0784 0774 0757 0212 0217 0775 0139
2021	GMC	Yukon	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2021	GMC	Yukon	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2021	GMC	Yukon	Restraints Control Module	√	√	√	√	√	0758 0134
2021	GMC	Yukon	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2021	GMC	Yukon	Instrument Panel Cluster Control Module	√	√	√	√	√	
2021	GMC	Yukon	Serial Data Gateway Module	√	√	√			
2021	GMC	Yukon	Video Processing Module	√	√	√			
2021	GMC	Yukon	Electronic Suspension Control Module	√	√	√	√	√	0198
2021	GMC	Yukon	Power Steering Control Module	√	√	√	√		0089
2021	GMC	Yukon	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2021	GMC	Yukon	Wireless Accessory Charging Module	√	√	√	√		
2021	GMC	Yukon	Gear Shift Control Module	√					
2021	GMC	Yukon	Lighting Control Module	√	√	√	√	√	
2021	GMC	Yukon	Parking Assist Control Module	√	√	√	√	√	
2021	GMC	Yukon	Trailer Lamp Control Module	√	√	√	√	√	
2021	GMC	Yukon	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2021	GMC	Yukon	Rear Gate Module	√	√	√	√		0753
2021	GMC	Yukon	Image Processing Module	√	√	√	√		
2021	GMC	Yukon	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	GMC	Yukon	Frontview Camera - Windshield	√	√	√	√		0196
2021	GMC	Yukon	Audio Amplifier	√	√	√	√		
2021	GMC	Yukon	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2021	GMC	Yukon	Radio	√	√	√	√	√	0269 0769 07A7 07A8
2021	GMC	Yukon	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2021	GMC	Yukon	Running Board Control Module	√	√	√	√	√	
2021	GMC	Yukon	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2021	GMC	Yukon	Side Obstacle Detection Control Module - Right	√	√	√			
2021	GMC	Yukon	Steering Column Lock Control Module	√	√	√	√		
2021	GMC	Yukon	Chassis Control Module - Auxiliary	√	√	√	√		
2021	GMC	Yukon	Video Display - Right Front Seat Back	√	√	√			

2021	GMC	Yukon	Short Range Radar Sensor - Left Front	√	√	√			0772
2021	GMC	Yukon	Short Range Radar Sensor - Left Rear	√	√	√			0772
2021	GMC	Yukon	Short Range Radar Sensor - Right Front	√	√	√			0772
2021	GMC	Yukon	Short Range Radar Sensor - Right Rear	√	√	√			0772
2021	GMC	Yukon	Differential Control Module	√	√	√	√	√	
2021	GMC	Yukon	Heater and Air Conditioning Auxiliary Control	√	√	√			
2021	GMC	Yukon	Radio Controls	√	√	√	√		
2021	GMC	Yukon	Telematics Control Module	√	√	√	√		0270
2021	GMC	Yukon	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2021	GMC	Yukon XL	Engine Control Module	√	√	√	√	√	0263 0209 0777 075E 075F 0778 076C 0115 076D 0779 0086 0085 0097 0221 077A 077B 077C 077D 0764 0763 0117 0119 0258 077E 077F 0780 0781 0782 0783 0784 0774 0757 0212 0217 0775 0139
2021	GMC	Yukon XL	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2021	GMC	Yukon XL	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2021	GMC	Yukon XL	Restraints Control Module	√	√	√	√	√	0758 0134
2021	GMC	Yukon XL	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2021	GMC	Yukon XL	Instrument Panel Cluster Control Module	√	√	√	√	√	
2021	GMC	Yukon XL	Serial Data Gateway Module	√	√	√			
2021	GMC	Yukon XL	Wireless Accessory Charging Module	√	√	√	√		
2021	GMC	Yukon XL	Video Processing Module	√	√	√			
2021	GMC	Yukon XL	Trailer Lamp Control Module	√	√	√	√	√	
2021	GMC	Yukon XL	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2021	GMC	Yukon XL	Rear Gate Module	√	√	√	√		0753
2021	GMC	Yukon XL	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2021	GMC	Yukon XL	Electronic Suspension Control Module	√	√	√	√	√	0198
2021	GMC	Yukon XL	Power Steering Control Module	√	√	√	√		0089
2021	GMC	Yukon XL	Frontview Camera - Windshield	√	√	√	√		0196
2021	GMC	Yukon XL	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	GMC	Yukon XL	Image Processing Module	√	√	√	√		
2021	GMC	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2021	GMC	Yukon XL	Running Board Control Module	√	√	√	√	√	
2021	GMC	Yukon XL	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266

2021	GMC	Yukon XL	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2021	GMC	Yukon XL	Lighting Control Module	√	√	√	√	√	
2021	GMC	Yukon XL	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2021	GMC	Yukon XL	Side Obstacle Detection Control Module - Right	√	√	√			
2021	GMC	Yukon XL	Steering Column Lock Control Module	√	√	√	√		
2021	GMC	Yukon XL	Parking Assist Control Module	√	√	√	√	√	
2021	GMC	Yukon XL	Gear Shift Control Module	√					
2021	GMC	Yukon XL	Chassis Control Module - Auxiliary	√	√	√	√		
2021	GMC	Yukon XL	Radio	√	√	√	√	√	0269 0769 07A7 07A8
2021	GMC	Yukon XL	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2021	GMC	Yukon XL	Video Display - Right Front Seat Back	√	√	√			
2021	GMC	Yukon XL	Short Range Radar Sensor - Left Front	√	√	√			0772
2021	GMC	Yukon XL	Short Range Radar Sensor - Left Rear	√	√	√			0772
2021	GMC	Yukon XL	Short Range Radar Sensor - Right Front	√	√	√			0772
2021	GMC	Yukon XL	Short Range Radar Sensor - Right Rear	√	√	√			0772
2021	GMC	Yukon XL	Differential Control Module	√	√	√	√	√	
2021	GMC	Yukon XL	Heater and Air Conditioning Auxiliary Control	√	√	√			
2021	GMC	Yukon XL	Radio Controls	√	√	√	√		
2021	GMC	Yukon XL	Telematics Control Module	√	√	√	√		0270
2021	GMC	Yukon XL	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2021	GMC	Yukon XL	Audio Amplifier	√	√	√	√		
2021	Ravon	R2	Engine Control Module	√	√	√	√	√	0156 0140 0209 0132 0067 0263 0086 0217
2021	Ravon	R2	Transmission Control Module	√	√	√	√	√	0016
2021	Ravon	R2	Electronic Brake Control Module	√	√	√	√	√	0090
2021	Ravon	R2	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2021	Ravon	R2	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2021	Ravon	R2	Instrument Cluster	√	√	√	√	√	
2021	Ravon	R2	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Ravon	R2	Power Steering Control Module	√	√	√	√		0089
2021	Ravon	R2	Radio	√	√	√	√	√	0226
2021	Ravon	R4	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139
2021	Ravon	R4	Transmission Control Module	√	√	√	√	√	0017 0036
2021	Ravon	R4	Electronic Brake Control Module	√	√	√	√	√	0090
2021	Ravon	R4	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2021	Ravon	R4	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	Ravon	R4	Instrument Cluster	√	√	√	√	√	0247
2021	Ravon	R4	HVAC Control Module	√	√	√	√	√	0007 0129
2021	Ravon	R4	Serial Data Gateway Module	√	√	√			
2021	Ravon	R4	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2021	Ravon	R4	Parking Assist Control Module	√	√	√	√	√	0247 0271
2021	Ravon	R4	Front Seat Heating Control Module	√	√	√	√	√	
2021	Ravon	R4	Radio	√	√	√	√	√	0150 0226 0269
2020	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0156 0209 0006 0115 0756 0086 0085 0154 0217 0258 0236
2020	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0017
2020	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2020	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Buick	Enclave	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Buick	Enclave	Instrument Cluster	√	√	√	√	√	0247
2020	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Buick	Enclave	HVAC Controls	√	√	√	√	√	
2020	Buick	Enclave	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	Buick	Enclave	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Buick	Enclave	Serial Data Gateway Module - Processor 2	√	√	√			
2020	Buick	Enclave	Video Processing Control Module	√	√	√	√	√	
2020	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Buick	Enclave	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Buick	Enclave	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Buick	Enclave	Passenger Presence Module	√	√	√	√	√	0057
2020	Buick	Enclave	Side Object Sensor Module - Left	√	√	√		√	
2020	Buick	Enclave	Active Safety Control Module	√	√	√	√		
2020	Buick	Enclave	Frontview Camera - Windshield	√	√	√	√		0196
2020	Buick	Enclave	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Buick	Enclave	Short Range Radar Sensor - Left Front	√	√	√			
2020	Buick	Enclave	Short Range Radar Sensor - Right Front	√	√	√			
2020	Buick	Enclave	Short Range Radar Sensor - Rear Middle	√	√	√			

2020	Buick	Enclave	Power Steering Control Module	√	√	√	√		0089 0084
2020	Buick	Enclave	Suspension Control Module	√	√	√	√	√	
2020	Buick	Enclave	Amplifier	√	√	√	√		
2020	Buick	Enclave	Radio	√	√	√	√	√	0226 0267 0269
2020	Buick	Enclave	Radio Controls	√	√	√	√		0241
2020	Buick	Enclave	Rear Drive Control Module	√	√	√	√	√	0003
2020	Buick	Enclave	Chassis Control Module	√	√	√	√	√	0014 0078
2020	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006 0144 0258 0139 0115 0212 0214 0757 0085 075D 075E 075F 0760 0756 0761 0762 0763 0017 0036 0016 075C
2020	Buick	Encore	Transmission Control Module	√	√	√	√	√	0766 0758 0767 0768
2020	Buick	Encore	Brake System Control Module	√	√	√	√	√	
2020	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2020	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2020	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Buick	Encore	HVAC Controls	√	√	√	√	√	
2020	Buick	Encore	Serial Data Gateway Module	√	√	√			
2020	Buick	Encore	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A 0084
2020	Buick	Encore	Headlamp Control Module	√	√	√	√	√	0195
2020	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	Buick	Encore	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Buick	Encore	Passenger Presence Module	√	√	√	√	√	0057
2020	Buick	Encore	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Buick	Encore	Radio Controls	√	√	√	√		0241
2020	Buick	Encore	Radio	√	√	√	√	√	0226 0150 0269 0267
2020	Buick	Encore	Power Steering Control Module	√	√	√	√		0207 0089 0084
2020	Buick	Encore	Rear Drive Control Module	√	√	√	√	√	0003 075B
2020	Buick	Encore	Head-Up Display Module	√	√	√	√	√	
2020	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Buick	Encore	Side Object Sensor Module - Left	√	√	√		√	
2020	Buick	Encore	Side Object Sensor Module - Right	√	√	√		√	
2020	Buick	Encore	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Buick	Encore	Serial Data Gateway Module - Processor 2	√	√	√			



2020	Buick	Encore	Steering Column Lock Control Module	√	√	√	√		
2020	Buick	Encore	Video Processing Control Module	√	√	√	√	√	
2020	Buick	Encore	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Buick	Encore	Amplifier	√	√	√	√		
2020	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Buick	Encore	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2020	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2020	Buick	Encore	Human Machine Interface Control Module	√	√	√	√	√	0150
2020	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217
2020	Buick	Envision	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0130 0030 0212
2020	Buick	Envision	Transmission Control Module	√	√	√	√	√	0017 0036
2020	Buick	Envision	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2020	Buick	Envision	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Buick	Envision	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Buick	Envision	Instrument Cluster	√	√	√	√	√	0247
2020	Buick	Envision	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Buick	Envision	HVAC Controls	√	√	√	√	√	
2020	Buick	Envision	Serial Data Gateway Module	√	√	√			
2020	Buick	Envision	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Buick	Envision	Video Processing Control Module	√	√	√	√	√	
2020	Buick	Envision	Keyless Entry Control Module	√	√	√	√	√	
2020	Buick	Envision	Passenger Presence Module	√	√	√	√	√	0057
2020	Buick	Envision	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2020	Buick	Envision	Power Steering Control Module	√	√	√	√		0081 0080 0089
2020	Buick	Envision	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Buick	Envision	Suspension Control Module	√	√	√	√	√	
2020	Buick	Envision	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Buick	Envision	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	Buick	Envision	Accessory DC/AC Power Inverter Module	√	√	√	√	√	
2020	Buick	Envision	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Buick	Envision	Amplifier	√	√	√	√		
2020	Buick	Envision	Human Machine Interface Control Module	√	√	√	√	√	0150
2020	Buick	Envision	Radio	√	√	√	√	√	0226 0150
2020	Buick	Envision	Radio Controls	√	√	√	√		0241

2020	Buick	Envision	Active Safety Control Module	√	√	√	√	√	
2020	Buick	Envision	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2020	Buick	Envision	Side Object Sensor Module - Left	√	√	√		√	
2020	Buick	Envision	Side Object Sensor Module - Right	√	√	√		√	
2020	Buick	Envision	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Buick	Envision	Rear Drive Control Module	√	√	√	√	√	0003
2020	Buick	Regal	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0226 0128 0256 0005
2020	Buick	Regal	Transmission Control Module	√	√	√	√	√	0017 0020 0084
2020	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2020	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Buick	Regal	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Buick	Regal	Instrument Cluster	√	√	√	√	√	0247
2020	Buick	Regal	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Buick	Regal	HVAC Controls	√	√	√	√	√	
2020	Buick	Regal	Serial Data Gateway Module	√	√	√			
2020	Buick	Regal	Headlamp Control Module	√	√	√	√	√	0195
2020	Buick	Regal	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Buick	Regal	Passenger Presence Module	√	√	√	√	√	0057
2020	Buick	Regal	Side Object Sensor Module - Left	√	√	√		√	
2020	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Buick	Regal	Power Steering Control Module	√	√	√	√		0081 0080 0089
2020	Buick	Regal	Suspension Control Module	√	√	√	√	√	
2020	Buick	Regal	Active Safety Control Module	√	√	√	√		
2020	Buick	Regal	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Buick	Regal	Frontview Camera - Windshield	√	√	√	√		0196
2020	Buick	Regal	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Buick	Regal	Amplifier	√	√	√	√		
2020	Buick	Regal	Radio	√	√	√	√	√	0150 0226 0269 0267
2020	Buick	Regal	Radio Controls	√	√	√	√		0241
2020	Buick	Regal	Rear Drive Control Module	√	√	√	√	√	0003
2020	Buick	Regal	Seat Memory Control Module - Passenger	√	√	√	√	√	

2020	Cadillac	CT4	Engine Control Module	√	√	√	√	√	0263 0209 075D 075E 076B 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0764 0763 0258 0139
2020	Cadillac	CT4	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2020	Cadillac	CT4	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758
2020	Cadillac	CT4	Restraints Control Module	√	√	√	√	√	0758 0134
2020	Cadillac	CT4	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2020	Cadillac	CT4	Instrument Panel Cluster Control Module	√	√	√	√	√	
2020	Cadillac	CT4	Serial Data Gateway Module	√	√	√			
2020	Cadillac	CT4	Electronic Suspension Control Module	√	√	√	√	√	
2020	Cadillac	CT4	Power Steering Control Module	√	√	√	√		0766
2020	Cadillac	CT4	Transfer Case Control Module	√	√	√	√	√	0099 0100
2020	Cadillac	CT4	Parking Assist Control Module	√	√	√	√	√	
2020	Cadillac	CT4	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2020	Cadillac	CT4	Side Obstacle Detection Control Module - Right	√	√	√			
2020	Cadillac	CT4	Column Lock Module	√	√	√	√		
2020	Cadillac	CT4	Frontview Camera - Windshield	√	√	√	√		0196
2020	Cadillac	CT4	Image Processing Module	√	√	√	√		
2020	Cadillac	CT4	Short Range Radar Sensor - Left Rear	√	√	√			0772
2020	Cadillac	CT4	Short Range Radar Sensor - Right Rear	√	√	√			0772
2020	Cadillac	CT4	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Cadillac	CT4	Lighting Control Module	√	√	√	√	√	
2020	Cadillac	CT4	Audio Amplifier	√	√	√	√		
2020	Cadillac	CT4	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2020	Cadillac	CT4	Radio	√	√	√	√	√	0269 0769
2020	Cadillac	CT4	Infotainment Control Switch	√	√	√			
2020	Cadillac	CT4	Wireless Accessory Charging Module	√	√	√	√		
2020	Cadillac	CT4	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2020	Cadillac	CT4	Gear Shift Control Module	√					
2020	Cadillac	CT4	Radio Controls	√	√	√	√		
2020	Cadillac	CT4	Telematics Control Module	√	√	√	√		0270
2020	Cadillac	CT4	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2020	Cadillac	CT4	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2020	Cadillac	CT5	Engine Control Module	√	√	√	√	√	0263 0209 075D 075E 076B 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0764 0763 0258 0139 0770 0771
2020	Cadillac	CT5	Transmission Control Module	√	√	√	√	√	0017 0033 0016

2020	Cadillac	CT5	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758
2020	Cadillac	CT5	Restraints Control Module	√	√	√	√	√	0758 0134
2020	Cadillac	CT5	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2020	Cadillac	CT5	Instrument Panel Cluster Control Module	√	√	√	√	√	
2020	Cadillac	CT5	Serial Data Gateway Module	√	√	√			
2020	Cadillac	CT5	Power Steering Control Module	√	√	√	√		0766
2020	Cadillac	CT5	Electronic Suspension Control Module	√	√	√	√	√	
2020	Cadillac	CT5	Video Processing Module	√	√	√			
2020	Cadillac	CT5	Transfer Case Control Module	√	√	√	√	√	0099 0100
2020	Cadillac	CT5	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2020	Cadillac	CT5	UHF Short Range Low Energy Remote Control Access Transceiver	√	√	√			
2020	Cadillac	CT5	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2020	Cadillac	CT5	Parking Assist Control Module	√	√	√	√	√	
2020	Cadillac	CT5	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2020	Cadillac	CT5	Side Obstacle Detection Control Module - Right	√	√	√			
2020	Cadillac	CT5	Column Lock Module	√	√	√	√		
2020	Cadillac	CT5	Image Processing Module	√	√	√	√		
2020	Cadillac	CT5	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Cadillac	CT5	Frontview Camera - Windshield	√	√	√	√		0196
2020	Cadillac	CT5	Differential Control Module	√	√	√	√	√	
2020	Cadillac	CT5	Lighting Control Module	√	√	√	√	√	
2020	Cadillac	CT5	Gear Shift Control Module	√					
2020	Cadillac	CT5	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2020	Cadillac	CT5	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2020	Cadillac	CT5	Wireless Accessory Charging Module	√	√	√	√		
2020	Cadillac	CT5	Audio Amplifier	√	√	√	√		
2020	Cadillac	CT5	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2020	Cadillac	CT5	Radio	√	√	√	√	√	0269 0769
2020	Cadillac	CT5	Infotainment Control Switch	√	√	√			
2020	Cadillac	CT5	Short Range Radar Sensor - Rear Middle	√	√	√			0772
2020	Cadillac	CT5	Radio Controls	√	√	√	√		
2020	Cadillac	CT5	Telematics Control Module	√	√	√	√		0270
2020	Cadillac	CT5	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2020	Cadillac	CT6	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 0156 0132 0067 0238 0756 0154 0236 076C 079A 074E

2020	Cadillac	CT6	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0795 0023 0025 0027 0029
2020	Cadillac	CT6	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2020	Cadillac	CT6	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2020	Cadillac	CT6	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Cadillac	CT6	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Cadillac	CT6	Instrument Cluster	√	√	√	√	√	0247
2020	Cadillac	CT6	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Cadillac	CT6	HVAC Controls	√	√	√	√	√	
2020	Cadillac	CT6	Headlamp Control Module	√	√	√	√	√	0195
2020	Cadillac	CT6	Headlamp High Beam Control Module	√	√	√	√	√	0247
2020	Cadillac	CT6	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Cadillac	CT6	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	Cadillac	CT6	Night Vision Camera Control Module	√	√	√	√		0492
2020	Cadillac	CT6	Video Processing Control Module	√	√	√	√	√	
2020	Cadillac	CT6	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Cadillac	CT6	Serial Data Gateway Module - Processor 2	√	√	√			
2020	Cadillac	CT6	Side Object Sensor Module - Left	√	√	√		√	
2020	Cadillac	CT6	Active Safety Control Module	√	√	√	√	√	
2020	Cadillac	CT6	Active Safety Control Module 1 - Processor A	√	√	√	√		0794 0268
2020	Cadillac	CT6	Active Safety Control Module 1 - Processor B	√	√	√	√		0111 0268
2020	Cadillac	CT6	Active Safety Control Module 1 - Processor C	√	√	√	√		0268
2020	Cadillac	CT6	Active Safety Control Module 2 - Processor A	√	√	√	√		0794 0268
2020	Cadillac	CT6	Active Safety Control Module 2 - Processor B	√	√	√	√		0111 0268
2020	Cadillac	CT6	Active Safety Control Module 2 - Processor C	√	√	√	√		0268
2020	Cadillac	CT6	Frontview Camera - Windshield	√	√	√	√		0196
2020	Cadillac	CT6	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Cadillac	CT6	Driver Monitoring System Control Module	√	√	√	√	√	
2020	Cadillac	CT6	Short Range Radar Sensor - Rear Middle	√	√	√			
2020	Cadillac	CT6	Short Range Radar Sensor - Left Front	√	√	√			
2020	Cadillac	CT6	Short Range Radar Sensor - Right Front	√	√	√			
2020	Cadillac	CT6	Short Range Radar Sensor - Right Rear	√	√	√			
2020	Cadillac	CT6	Short Range Radar Sensor - Left Rear	√	√	√			
2020	Cadillac	CT6	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Cadillac	CT6	Passenger Presence Module	√	√	√	√	√	0057
2020	Cadillac	CT6	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266

2020	Cadillac	CT6	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2020	Cadillac	CT6	Parking Assist Control Module	√	√	√	√	√	0247
2020	Cadillac	CT6	Power Steering Control Module	√	√	√	√		0081 0080 0089
2020	Cadillac	CT6	Rear Wheel Steering Control Module	√	√	√	√		
2020	Cadillac	CT6	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Cadillac	CT6	Suspension Control Module	√	√	√	√	√	0245
2020	Cadillac	CT6	Multi-Axis Acceleration Sensor 1	√	√	√			
2020	Cadillac	CT6	Multi-Axis Acceleration Sensor 2	√	√	√			
2020	Cadillac	CT6	Multifunction Energy Storage Capacitor Control	√	√	√	√	√	0151 0244
2020	Cadillac	CT6	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Cadillac	CT6	Seat Memory Control Module - Left Rear	√	√	√	√	√	
2020	Cadillac	CT6	Seat Memory Control Module - Right Rear	√	√	√	√	√	
2020	Cadillac	CT6	Seat Memory Control Module - Passenger	√	√	√	√	√	
2020	Cadillac	CT6	Amplifier	√	√	√	√		
2020	Cadillac	CT6	Infotainment Control Switch	√	√	√			
2020	Cadillac	CT6	Media Disc Player	√	√	√	√	√	
2020	Cadillac	CT6	Digital Map Control Module	√	√	√	√		
2020	Cadillac	CT6	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2020	Cadillac	CT6	Radio	√	√	√	√	√	0226 0267 0269
2020	Cadillac	CT6	Radio Controls	√	√	√	√		0241
2020	Cadillac	CT6	Transfer Case Control Module	√	√	√	√	√	0037 0099
2020	Cadillac	CT6	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2020	Cadillac	CT6	Steering Column Lock Control Module	√	√	√	√		
2020	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2020	Cadillac	Escalade	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2020	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2020	Cadillac	Escalade	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Cadillac	Escalade	Instrument Cluster	√	√	√	√	√	0247
2020	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Cadillac	Escalade	Radio/HVAC Controls	√	√	√	√	√	
2020	Cadillac	Escalade	Serial Data Gateway Module	√	√	√			
2020	Cadillac	Escalade	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2020	Cadillac	Escalade	Power Steering Control Module	√	√	√	√	√	0150

2020	Cadillac	Escalade	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Cadillac	Escalade	Suspension Control Module	√	√	√	√	√	0245
2020	Cadillac	Escalade	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	Cadillac	Escalade	Video Processing Control Module	√	√	√	√	√	
2020	Cadillac	Escalade	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Cadillac	Escalade	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	Cadillac	Escalade	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Cadillac	Escalade	Passenger Presence Module	√	√	√	√	√	0057
2020	Cadillac	Escalade	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2020	Cadillac	Escalade	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2020	Cadillac	Escalade	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Cadillac	Escalade	Side Object Sensor Module - Left	√	√	√		√	
2020	Cadillac	Escalade	Steering Column Lock Control Module	√	√	√	√		
2020	Cadillac	Escalade	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2020	Cadillac	Escalade	Active Safety Control Module	√	√	√	√	√	
2020	Cadillac	Escalade	Frontview Camera - Windshield	√	√	√	√		0196 075A
2020	Cadillac	Escalade	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Cadillac	Escalade	Short Range Radar Sensor - Left Front	√	√	√			
2020	Cadillac	Escalade	Short Range Radar Sensor - Right Front	√	√	√			
2020	Cadillac	Escalade	Short Range Radar Sensor - Left Rear	√	√	√			
2020	Cadillac	Escalade	Short Range Radar Sensor - Right Rear	√	√	√			
2020	Cadillac	Escalade	Parking Brake Control Module	√	√	√	√	√	0229
2020	Cadillac	Escalade	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Cadillac	Escalade	Seat Memory Control Module - Passenger	√	√	√	√	√	
2020	Cadillac	Escalade	Assist Step Control Module	√	√	√	√	√	
2020	Cadillac	Escalade	Amplifier	√	√	√	√		
2020	Cadillac	Escalade	Human Machine Interface Control Module	√	√	√	√	√	0150
2020	Cadillac	Escalade	Media Disc Player	√	√	√	√	√	
2020	Cadillac	Escalade	Navigation Control Module	√	√	√	√	√	
2020	Cadillac	Escalade	Radio	√	√	√	√	√	0226 0150
2020	Cadillac	Escalade	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2020	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	0037
2020	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2020	Cadillac	Escalade ESV	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2020	Cadillac	Escalade ESV	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2020	Cadillac	Escalade ESV	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2020	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Cadillac	Escalade ESV	Instrument Cluster	√	√	√	√	√	0247
2020	Cadillac	Escalade ESV	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Cadillac	Escalade ESV	Radio/HVAC Controls	√	√	√	√	√	
2020	Cadillac	Escalade ESV	Serial Data Gateway Module	√	√	√			
2020	Cadillac	Escalade ESV	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	Cadillac	Escalade ESV	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2020	Cadillac	Escalade ESV	Power Steering Control Module	√	√	√	√	√	0150
2020	Cadillac	Escalade ESV	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Cadillac	Escalade ESV	Suspension Control Module	√	√	√	√	√	0245
2020	Cadillac	Escalade ESV	Video Processing Control Module	√	√	√	√	√	
2020	Cadillac	Escalade ESV	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Cadillac	Escalade ESV	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	Cadillac	Escalade ESV	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Cadillac	Escalade ESV	Passenger Presence Module	√	√	√	√	√	0057
2020	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2020	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2020	Cadillac	Escalade ESV	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Cadillac	Escalade ESV	Side Object Sensor Module - Left	√	√	√		√	
2020	Cadillac	Escalade ESV	Steering Column Lock Control Module	√	√	√	√		
2020	Cadillac	Escalade ESV	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2020	Cadillac	Escalade ESV	Active Safety Control Module	√	√	√	√	√	
2020	Cadillac	Escalade ESV	Frontview Camera - Windshield	√	√	√	√		0196 075A
2020	Cadillac	Escalade ESV	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Cadillac	Escalade ESV	Short Range Radar Sensor - Left Front	√	√	√			
2020	Cadillac	Escalade ESV	Short Range Radar Sensor - Left Rear	√	√	√			
2020	Cadillac	Escalade ESV	Short Range Radar Sensor - Right Front	√	√	√			
2020	Cadillac	Escalade ESV	Short Range Radar Sensor - Right Rear	√	√	√			
2020	Cadillac	Escalade ESV	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Cadillac	Escalade ESV	Seat Memory Control Module - Passenger	√	√	√	√	√	
2020	Cadillac	Escalade ESV	Assist Step Control Module	√	√	√	√	√	
2020	Cadillac	Escalade ESV	Amplifier	√	√	√	√		
2020	Cadillac	Escalade ESV	Human Machine Interface Control Module	√	√	√	√	√	0150
2020	Cadillac	Escalade ESV	Media Disc Player	√	√	√	√	√	
2020	Cadillac	Escalade ESV	Navigation Control Module	√	√	√	√	√	
2020	Cadillac	Escalade ESV	Radio	√	√	√	√	√	0226 0150
2020	Cadillac	Escalade ESV	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2020	Cadillac	Escalade ESV	Transfer Case Control Module	√	√	√	√	√	0037



2020	Cadillac	Escalade ESV	Parking Brake Control Module	√	√	√	√	√	0229
2020	Cadillac	XT4	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 0791 076C 076D 0058 0097 0219 0221 0792 0073 0072 0070 0071 0117 0119 077E 0178 0180 0182
2020	Cadillac	XT4	Transmission Control Module	√	√	√	√	√	0016 075C 0017
2020	Cadillac	XT4	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2020	Cadillac	XT4	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Cadillac	XT4	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Cadillac	XT4	Instrument Cluster	√	√	√	√	√	0247
2020	Cadillac	XT4	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Cadillac	XT4	HVAC Controls	√	√	√	√	√	
2020	Cadillac	XT4	Parking Assist Control Module	√	√	√	√	√	0247
2020	Cadillac	XT4	Steering Column Lock Control Module	√	√	√	√		
2020	Cadillac	XT4	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Cadillac	XT4	Serial Data Gateway Module - Processor 2	√	√	√			
2020	Cadillac	XT4	Video Processing Control Module	√	√	√	√	√	
2020	Cadillac	XT4	Headlamp Control Module	√	√	√	√	√	0195
2020	Cadillac	XT4	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Cadillac	XT4	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	Cadillac	XT4	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	Cadillac	XT4	Keyless Entry Control Module	√	√	√	√	√	
2020	Cadillac	XT4	Passenger Presence Module	√	√	√	√	√	0057
2020	Cadillac	XT4	Side Object Sensor Module - Left	√	√	√		√	
2020	Cadillac	XT4	Active Safety Control Module	√	√	√	√	√	
2020	Cadillac	XT4	Frontview Camera - Windshield	√	√	√	√		0196
2020	Cadillac	XT4	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Cadillac	XT4	Short Range Radar Sensor - Left Front	√	√	√			
2020	Cadillac	XT4	Short Range Radar Sensor - Right Front	√	√	√			
2020	Cadillac	XT4	Short Range Radar Sensor - Rear Middle	√	√	√			
2020	Cadillac	XT4	Power Steering Control Module	√	√	√	√		0081 0080 0089
2020	Cadillac	XT4	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Cadillac	XT4	Suspension Control Module	√	√	√	√	√	
2020	Cadillac	XT4	Amplifier	√	√	√	√		

2020	Cadillac	XT4	Infotainment Control Switch	√	√	√			
2020	Cadillac	XT4	Radio	√	√	√	√	√	0226 0267 0269
2020	Cadillac	XT4	Radio Controls	√	√	√	√		0241
2020	Cadillac	XT4	Side Object Sensor Module - Right	√	√	√		√	
2020	Cadillac	XT4	Seat Memory Control Module - Passenger	√	√	√	√	√	
2020	Cadillac	XT4	Rear Drive Control Module	√	√	√	√	√	0003
2020	Cadillac	XT5	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 0156 0756 0154 0236
2020	Cadillac	XT5	Transmission Control Module	√	√	√	√	√	0017
2020	Cadillac	XT5	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2020	Cadillac	XT5	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2020	Cadillac	XT5	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Cadillac	XT5	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Cadillac	XT5	Instrument Cluster	√	√	√	√	√	0247
2020	Cadillac	XT5	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Cadillac	XT5	HVAC Controls	√	√	√	√	√	
2020	Cadillac	XT5	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	Cadillac	XT5	Video Processing Control Module	√	√	√	√	√	
2020	Cadillac	XT5	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Cadillac	XT5	Serial Data Gateway Module - Processor 2	√	√	√			
2020	Cadillac	XT5	Night Vision Camera Control Module	√	√	√	√		0492
2020	Cadillac	XT5	Headlamp Control Module		√	√			
2020	Cadillac	XT5	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Cadillac	XT5	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	Cadillac	XT5	Active Safety Control Module	√	√	√	√	√	
2020	Cadillac	XT5	Frontview Camera - Windshield	√	√	√	√		0196
2020	Cadillac	XT5	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Cadillac	XT5	Short Range Radar Sensor - Left Front	√	√	√			
2020	Cadillac	XT5	Short Range Radar Sensor - Right Front	√	√	√			
2020	Cadillac	XT5	Short Range Radar Sensor - Rear Middle	√	√	√			
2020	Cadillac	XT5	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Cadillac	XT5	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Cadillac	XT5	Passenger Presence Module	√	√	√	√	√	0057
2020	Cadillac	XT5	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266

2020	Cadillac	XT5	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2020	Cadillac	XT5	Short Range Remote Control Transceiver	√	√	√	√		
2020	Cadillac	XT5	Steering Column Lock Control Module	√	√	√	√		
2020	Cadillac	XT5	Side Object Sensor Module - Left	√	√	√		√	
2020	Cadillac	XT5	Parking Assist Control Module	√	√	√	√	√	0247
2020	Cadillac	XT5	Power Steering Control Module	√	√	√	√		0089 0084
2020	Cadillac	XT5	Suspension Control Module	√	√	√	√	√	
2020	Cadillac	XT5	Amplifier	√	√	√	√		
2020	Cadillac	XT5	Infotainment Control Switch	√	√	√			
2020	Cadillac	XT5	Radio Controls	√	√	√	√		0241
2020	Cadillac	XT5	Radio	√	√	√	√	√	0150 0226 0269 0267
2020	Cadillac	XT5	Rear Drive Control Module	√	√	√	√	√	0003
2020	Cadillac	XT6	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 0156 0756 0154 0236
2020	Cadillac	XT6	Transmission Control Module	√	√	√	√	√	0017
2020	Cadillac	XT6	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2020	Cadillac	XT6	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2020	Cadillac	XT6	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Cadillac	XT6	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Cadillac	XT6	Instrument Cluster	√	√	√	√	√	0247
2020	Cadillac	XT6	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Cadillac	XT6	HVAC Controls	√	√	√	√	√	
2020	Cadillac	XT6	Night Vision Camera Control Module	√	√	√	√		0492
2020	Cadillac	XT6	Video Processing Control Module	√	√	√	√	√	
2020	Cadillac	XT6	Passenger Presence Module	√	√	√	√	√	0057
2020	Cadillac	XT6	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Cadillac	XT6	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2020	Cadillac	XT6	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2020	Cadillac	XT6	Parking Assist Control Module	√	√	√	√	√	0247
2020	Cadillac	XT6	Steering Column Lock Control Module	√	√	√	√		
2020	Cadillac	XT6	Suspension Control Module	√	√	√	√	√	
2020	Cadillac	XT6	Power Steering Control Module	√	√	√	√		0089 0084
2020	Cadillac	XT6	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Cadillac	XT6	Serial Data Gateway Module - Processor 2	√	√	√			

2020	Cadillac	XT6	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Cadillac	XT6	Headlamp Control Module	√	√	√	√	√	0195
2020	Cadillac	XT6	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Cadillac	XT6	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	Cadillac	XT6	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	Cadillac	XT6	Active Safety Control Module	√	√	√	√	√	
2020	Cadillac	XT6	Frontview Camera - Windshield	√	√	√	√		0196
2020	Cadillac	XT6	Amplifier	√	√	√	√		
2020	Cadillac	XT6	Infotainment Control Switch	√	√	√			
2020	Cadillac	XT6	Radio	√	√	√	√	√	0226 0267 0269
2020	Cadillac	XT6	Radio Controls	√	√	√	√		0241
2020	Cadillac	XT6	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Cadillac	XT6	Short Range Radar Sensor - Left Front	√	√	√			
2020	Cadillac	XT6	Short Range Radar Sensor - Right Front	√	√	√			
2020	Cadillac	XT6	Short Range Radar Sensor - Rear Middle	√	√	√			
2020	Cadillac	XT6	Side Object Sensor Module - Left	√	√	√		√	
2020	Cadillac	XT6	Side Object Sensor Module - Right	√	√	√		√	
2020	Cadillac	XT6	Rear Drive Control Module	√	√	√	√	√	0003
2020	Cadillac	XTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0006
2020	Cadillac	XTS	Transmission Control Module	√	√	√	√	√	0016
2020	Cadillac	XTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2020	Cadillac	XTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Cadillac	XTS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Cadillac	XTS	Instrument Cluster	√	√	√	√	√	0247
2020	Cadillac	XTS	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Cadillac	XTS	Radio/HVAC Controls	√	√	√	√	√	
2020	Cadillac	XTS	Serial Data Gateway Module	√	√	√			
2020	Cadillac	XTS	Video Processing Control Module	√	√	√	√	√	
2020	Cadillac	XTS	Headlamp Control Module	√	√	√	√	√	0195
2020	Cadillac	XTS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048
2020	Cadillac	XTS	Keyless Entry Control Module	√	√	√	√	√	
2020	Cadillac	XTS	Passenger Presence Module	√	√	√	√		0057
2020	Cadillac	XTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2020	Cadillac	XTS	Parking Brake Control Module	√	√	√	√	√	0229
2020	Cadillac	XTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Cadillac	XTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2020	Cadillac	XTS	Power Steering Control Module	√	√	√	√	√	0089

2020	Cadillac	XTS	Active Safety Control Module	√	√	√	√	√	
2020	Cadillac	XTS	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2020	Cadillac	XTS	Left Front Short Range Radar Sensor Module	√	√	√			
2020	Cadillac	XTS	Right Front Short Range Radar Sensor Module	√	√	√			
2020	Cadillac	XTS	Left Rear Radar Short Range Sensor Module	√	√	√			
2020	Cadillac	XTS	Right Rear Short Range Radar Sensor Module	√	√	√			
2020	Cadillac	XTS	Long Range Radar Sensor Module	√	√	√	√		0260
2020	Cadillac	XTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Cadillac	XTS	Side Object Sensor Module - Left	√	√	√		√	
2020	Cadillac	XTS	Steering Column Lock Control Module	√	√	√	√		
2020	Cadillac	XTS	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Cadillac	XTS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2020	Cadillac	XTS	Amplifier	√	√	√	√		
2020	Cadillac	XTS	Radio	√	√	√	√	√	0226 0267 0269
2020	Cadillac	XTS	Rear Audio Control Module	√	√	√	√	√	
2020	Cadillac	XTS	Rear Differential Clutch Control Module	√	√	√	√	√	
2020	Cadillac	XTS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2020	Chevrolet	Aveo	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139 0020 0066 076D 0213 0006 0144 0258 0147 0050 0210 0110
2020	Chevrolet	Aveo	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2020	Chevrolet	Aveo	Electronic Brake Control Module	√	√	√	√	√	0090 0111
2020	Chevrolet	Aveo	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0261
2020	Chevrolet	Aveo	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0030 0150
2020	Chevrolet	Aveo	Instrument Cluster	√	√	√	√	√	0247
2020	Chevrolet	Aveo	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Chevrolet	Aveo	Radio/HVAC Controls	√	√	√	√	√	0150
2020	Chevrolet	Aveo	Serial Data Gateway Module	√	√	√			
2020	Chevrolet	Aveo	Keyless Entry Control Module	√	√	√	√	√	
2020	Chevrolet	Aveo	Steering Column Lock Control Module	√	√	√	√		
2020	Chevrolet	Aveo	Chassis Control Module	√	√	√	√	√	0217
2020	Chevrolet	Aveo	Power Steering Control Module	√	√	√	√		0207 0081 0089
2020	Chevrolet	Aveo	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Chevrolet	Aveo	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Chevrolet	Aveo	Radio	√	√	√	√	√	0226
2020	Chevrolet	Aveo	Front Seat Heating Control Module	√	√	√	√	√	
2020	Chevrolet	Aveo	Telematics Communication Interface Control Module	√	√	√		√	

2020	Chevrolet	Beat	Engine Control Module	√	√	√	√	√	0133 0210 0098 0096 0094 0216 0143 0265 0393 0173 0149 0069 0087 0209 0156 0147 0017
2020	Chevrolet	Beat	Electronic Brake Control Module	√	√	√	√	√	0090
2020	Chevrolet	Beat	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2020	Chevrolet	Beat	Instrument Cluster	√	√	√	√	√	
2020	Chevrolet	Beat	Keyless Entry Control Module				√		
2020	Chevrolet	Beat	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	Chevrolet	Beat	Power Steering Control Module	√	√	√	√		0089
2020	Chevrolet	Beat	Radio	√	√	√	√	√	0226
2020	Chevrolet	Beat	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2020	Chevrolet	Blazer	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 0156 0020 0132 0067 0154 0213 0214 0756 0236
2020	Chevrolet	Blazer	Transmission Control Module	√	√	√	√	√	0017
2020	Chevrolet	Blazer	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2020	Chevrolet	Blazer	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2020	Chevrolet	Blazer	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Chevrolet	Blazer	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Chevrolet	Blazer	Instrument Cluster	√	√	√	√	√	0247
2020	Chevrolet	Blazer	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Chevrolet	Blazer	HVAC Controls	√	√	√	√	√	
2020	Chevrolet	Blazer	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Chevrolet	Blazer	Serial Data Gateway Module - Processor 2	√	√	√			
2020	Chevrolet	Blazer	Video Processing Control Module	√	√	√	√	√	
2020	Chevrolet	Blazer	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Chevrolet	Blazer	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	Chevrolet	Blazer	Active Safety Control Module	√	√	√	√		
2020	Chevrolet	Blazer	Frontview Camera - Windshield	√	√	√	√		0196
2020	Chevrolet	Blazer	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Chevrolet	Blazer	Parking Assist Control Module	√	√	√	√	√	0247
2020	Chevrolet	Blazer	Side Object Sensor Module - Left	√	√	√		√	
2020	Chevrolet	Blazer	Side Object Sensor Module - Right	√	√	√		√	

2020	Chevrolet	Blazer	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Chevrolet	Blazer	Passenger Presence Module	√	√	√	√	√	0057
2020	Chevrolet	Blazer	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Chevrolet	Blazer	Amplifier	√	√	√	√		
2020	Chevrolet	Blazer	Radio	√	√	√	√	√	0150 0226 0269 0267
2020	Chevrolet	Blazer	Radio Controls	√	√	√	√		0241
2020	Chevrolet	Blazer	Power Steering Control Module	√	√	√	√		0089 0084
2020	Chevrolet	Blazer	Rear Drive Control Module	√	√	√	√	√	0003
2020	Chevrolet	Bolt	Engine Control Module	√	√	√	√	√	0258
2020	Chevrolet	Bolt	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229
2020	Chevrolet	Bolt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Chevrolet	Bolt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Chevrolet	Bolt	Instrument Cluster	√	√	√	√	√	0247
2020	Chevrolet	Bolt	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Chevrolet	Bolt	Battery Energy Control Module	√			√		
2020	Chevrolet	Bolt	Power Line Communication Module	√			√		
2020	Chevrolet	Bolt	Hybrid/EV Powertrain Control Module 2	√	√	√	√	√	0125 0202 0262 0079 0122 0123 0127
2020	Chevrolet	Bolt	Hybrid/EV Powertrain Control Module 1	√	√	√	√	√	0202 0018
2020	Chevrolet	Bolt	Chassis Control Module	√	√	√	√	√	0014 0078
2020	Chevrolet	Bolt	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2020	Chevrolet	Bolt	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Chevrolet	Bolt	Serial Data Gateway Module - Processor 2	√	√	√			
2020	Chevrolet	Bolt	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	Chevrolet	Bolt	Video Processing Control Module	√	√	√	√	√	
2020	Chevrolet	Bolt	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Chevrolet	Bolt	Headlamp High Beam Control Module	√	√	√	√	√	0247
2020	Chevrolet	Bolt	Telematics Communication Interface Control Module	√	√	√	√	√	
2020	Chevrolet	Bolt	Frontview Camera - Windshield	√	√	√	√		0196
2020	Chevrolet	Bolt	Brake Booster Control Module	√	√	√	√		
2020	Chevrolet	Bolt	Power Steering Control Module	√	√	√	√		0089 0084
2020	Chevrolet	Bolt	Side Object Sensor Module - Left	√	√	√		√	
2020	Chevrolet	Bolt	Keyless Entry Control Module	√	√	√	√	√	
2020	Chevrolet	Bolt	Passenger Presence Module	√	√	√	√	√	0057
2020	Chevrolet	Bolt	Short Range Remote Control Transceiver	√	√	√	√		
2020	Chevrolet	Bolt	Radio	√	√	√	√	√	0226 0267 0269
2020	Chevrolet	Bolt	Air Conditioning Compressor	√					
2020	Chevrolet	Bolt	Pedestrian Alert Sound Control Module	√	√	√	√	√	

2020	Chevrolet	Camaro	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0756 0085 0030
2020	Chevrolet	Camaro	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2020	Chevrolet	Camaro	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229
2020	Chevrolet	Camaro	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Chevrolet	Camaro	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Chevrolet	Camaro	Instrument Cluster	√	√	√	√	√	0247
2020	Chevrolet	Camaro	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Chevrolet	Camaro	HVAC Controls	√	√	√	√	√	
2020	Chevrolet	Camaro	Serial Data Gateway Module	√	√	√			
2020	Chevrolet	Camaro	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2020	Chevrolet	Camaro	Headlamp Control Module	√	√	√	√	√	0195
2020	Chevrolet	Camaro	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	Chevrolet	Camaro	Folding Top Control Module	√	√	√	√	√	
2020	Chevrolet	Camaro	Side Object Sensor Module - Left	√	√	√		√	
2020	Chevrolet	Camaro	Side Object Sensor Module - Right	√	√	√		√	
2020	Chevrolet	Camaro	Steering Column Lock Control Module	√	√	√	√		
2020	Chevrolet	Camaro	Parking Assist Control Module	√	√	√	√	√	0247
2020	Chevrolet	Camaro	Frontview Camera - Windshield	√	√	√	√		0196 0084
2020	Chevrolet	Camaro	Parking Brake Control Module	√	√	√	√	√	0229
2020	Chevrolet	Camaro	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2020	Chevrolet	Camaro	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Chevrolet	Camaro	Suspension Control Module	√	√	√	√	√	0245
2020	Chevrolet	Camaro	Keyless Entry Control Module	√	√	√	√	√	
2020	Chevrolet	Camaro	Passenger Presence Module	√	√	√	√	√	0057
2020	Chevrolet	Camaro	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2020	Chevrolet	Camaro	Amplifier	√	√	√	√		
2020	Chevrolet	Camaro	Radio Controls	√	√	√	√		0241
2020	Chevrolet	Camaro	Radio	√	√	√	√	√	0150 0226 0269 0267
2020	Chevrolet	Camaro	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2020	Chevrolet	Camaro	Vehicle Performance Data Recorder	√	√	√	√		
2020	Chevrolet	Cavalier	Engine Control Module	√	√	√	√	√	0156 0020 0140 0263
2020	Chevrolet	Cavalier	Transmission Control Module	√	√	√	√	√	0017



2020	Chevrolet	Cavalier	Electronic Brake Control Module	√	√	√	√	√	0090
2020	Chevrolet	Cavalier	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√		0111
2020	Chevrolet	Cavalier	Body Control Module	√	√	√	√	√	
2020	Chevrolet	Cavalier	Instrument Cluster	√	√	√	√	√	0247
2020	Chevrolet	Cavalier	Serial Data Gateway Module	√	√	√	√		
2020	Chevrolet	Cavalier	Radio Controls	√	√	√	√	√	
2020	Chevrolet	Cavalier	Power Supply Transformer	√	√	√	√	√	
2020	Chevrolet	Cavalier	Parking Assist Control Module	√	√	√	√		
2020	Chevrolet	Cavalier	Radio	√	√	√	√	√	
2020	Chevrolet	Cavalier	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Chevrolet	Cavalier	Power Steering Control Module	√	√	√	√		0081 0080 0089
2020	Chevrolet	Cobalt	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139
2020	Chevrolet	Cobalt	Transmission Control Module	√	√	√	√	√	0017 0036
2020	Chevrolet	Cobalt	Electronic Brake Control Module	√	√	√	√	√	0090
2020	Chevrolet	Cobalt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Chevrolet	Cobalt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Chevrolet	Cobalt	Instrument Cluster	√	√	√	√	√	0247
2020	Chevrolet	Cobalt	Serial Data Gateway Module	√	√	√			
2020	Chevrolet	Cobalt	Telematics Communication Interface Control Module	√	√	√	√	√	
2020	Chevrolet	Cobalt	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Chevrolet	Cobalt	Power Steering Control Module	√	√	√	√		0207
2020	Chevrolet	Cobalt	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Chevrolet	Cobalt	Radio	√	√	√	√	√	
2020	Chevrolet	Cobalt	Front Seat Heating Control Module	√	√	√	√	√	
2020	Chevrolet	Cobalt	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2020	Chevrolet	Colorado	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0222 0066 0147 0060 0044 0045 0086 0217 0109 0068 0084 0070 0071 0074 0075 0043 0173 0179 0181 0183 0185 0232 0156 0209 0020 0132 0067 0115 0154 0213 0214 0258 0139 076C 076D 079A 0097 0171 0219 0792 0072 0073 0119 0117 077E 0178 0180 0182

2020	Chevrolet	Colorado	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2020	Chevrolet	Colorado	Electronic Brake Control Module	√	√	√	√	√	0090 0112 0111 0225
2020	Chevrolet	Colorado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Chevrolet	Colorado	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Chevrolet	Colorado	Instrument Cluster	√	√	√	√	√	0247
2020	Chevrolet	Colorado	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Chevrolet	Colorado	HVAC Controls	√	√	√	√	√	
2020	Chevrolet	Colorado	Serial Data Gateway Module	√	√	√			
2020	Chevrolet	Colorado	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2020	Chevrolet	Colorado	Transfer Case Control Module	√	√	√	√	√	0037
2020	Chevrolet	Colorado	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	Chevrolet	Colorado	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	Chevrolet	Colorado	Power Steering Control Module	√	√	√	√		0093 0090
2020	Chevrolet	Colorado	Frontview Camera - Windshield	√	√	√	√	√	0196
2020	Chevrolet	Colorado	Passenger Presence Module	√	√	√	√	√	0057
2020	Chevrolet	Colorado	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Chevrolet	Colorado	Amplifier	√	√	√	√		
2020	Chevrolet	Colorado	Human Machine Interface Control Module	√	√	√	√	√	0150
2020	Chevrolet	Colorado	Radio	√	√	√	√	√	0226 0150 0269 0267
2020	Chevrolet	Colorado	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Chevrolet	Colorado	Radio Controls	√	√	√	√		0241
2020	Chevrolet	Colorado	Side Object Sensor Module - Left	√	√	√		√	
2020	Chevrolet	Colorado	Side Object Sensor Module - Right	√	√	√		√	
2020	Chevrolet	Corvette	Engine Control Module	√	√	√	√	√	0263 0209 0770 076B 0774 076C 0115 0086 0757 0212 0217 0775
2020	Chevrolet	Corvette	Transmission Control Module	√	√	√	√	√	0017 0797 0798
2020	Chevrolet	Corvette	Brake System Control Module	√	√	√	√	√	0767 0768 0766 0758 0229 0799
2020	Chevrolet	Corvette	Restraints Control Module	√	√	√	√	√	0758 0134
2020	Chevrolet	Corvette	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2020	Chevrolet	Corvette	Instrument Panel Cluster Control Module	√	√	√	√	√	
2020	Chevrolet	Corvette	Serial Data Gateway Module	√	√	√			
2020	Chevrolet	Corvette	Video Processing Module	√	√	√			
2020	Chevrolet	Corvette	Electronic Suspension Control Module	√	√	√	√	√	0198

2020	Chevrolet	Corvette	Electric Power Steering Control Module	√	√	√	√		0766
2020	Chevrolet	Corvette	Folding Top Control Module - Left	√	√	√	√		
2020	Chevrolet	Corvette	Folding Top Control Module - Right	√	√	√			
2020	Chevrolet	Corvette	Folding Top Stowage Compartment Control Module -	√	√	√			
2020	Chevrolet	Corvette	Folding Top Stowage Compartment Control Module -	√	√	√	√		
2020	Chevrolet	Corvette	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2020	Chevrolet	Corvette	Side Obstacle Detection Control Module - Right	√	√	√			
2020	Chevrolet	Corvette	Parking Assist Control Module	√	√	√	√	√	
2020	Chevrolet	Corvette	Column Lock Module	√	√	√	√		
2020	Chevrolet	Corvette	Lighting Control Module	√	√	√	√	√	
2020	Chevrolet	Corvette	Gear Shift Control Module	√					
2020	Chevrolet	Corvette	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2020	Chevrolet	Corvette	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2020	Chevrolet	Corvette	Wireless Accessory Charging Module	√	√	√	√		
2020	Chevrolet	Corvette	Audio Amplifier	√	√	√	√		
2020	Chevrolet	Corvette	Radio	√	√	√	√	√	0269 0769
2020	Chevrolet	Corvette	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2020	Chevrolet	Corvette	Vehicle Performance Data Recorder	√	√	√	√		
2020	Chevrolet	Corvette	Front Suspension Leveling/Lifting Hydraulic Power Pack Module	√	√	√	√	√	
2020	Chevrolet	Corvette	Radio Controls	√	√	√	√		
2020	Chevrolet	Corvette	Telematics Control Module	√	√	√	√		0270
2020	Chevrolet	Corvette	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2020	Chevrolet	Cruze	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0222 076D 079A 0044 0045 0171 0219 0792 0109 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182
2020	Chevrolet	Cruze	Transmission Control Module	√	√	√	√	√	0017 0036
2020	Chevrolet	Cruze	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2020	Chevrolet	Cruze	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Chevrolet	Cruze	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Chevrolet	Cruze	Instrument Cluster	√	√	√	√	√	0247

2020	Chevrolet	Cruze	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Chevrolet	Cruze	HVAC Controls	√	√	√	√	√	
2020	Chevrolet	Cruze	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Chevrolet	Cruze	Serial Data Gateway Module - Processor 2	√	√	√			
2020	Chevrolet	Cruze	Steering Column Lock Control Module	√	√	√	√		
2020	Chevrolet	Cruze	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	Chevrolet	Cruze	Side Object Sensor Module - Left	√	√	√		√	
2020	Chevrolet	Cruze	Side Object Sensor Module - Right	√	√	√		√	
2020	Chevrolet	Cruze	Keyless Entry Control Module	√	√	√	√	√	
2020	Chevrolet	Cruze	Passenger Presence Module	√	√	√	√		0057
2020	Chevrolet	Cruze	Short Range Remote Control Transceiver	√	√	√	√		
2020	Chevrolet	Cruze	Frontview Camera - Windshield	√	√	√	√		0196 0084
2020	Chevrolet	Cruze	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Chevrolet	Cruze	Power Steering Control Module	√	√	√	√		0081 0080 0089
2020	Chevrolet	Cruze	Radio	√	√	√	√	√	0150 0226 0269 0267
2020	Chevrolet	Damas	Engine Control Module	√	√	√	√	√	0069 0087
2020	Chevrolet	Damas	Tire Pressure Indicator Module	√	√	√	√		079D 0234
2020	Chevrolet	Damas	Fuel Injector Control Module	√	√	√	√	√	
2020	Chevrolet	Equinox	Engine Control Module	√	√	√	√	√	0263 0156 0209 0147 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0764 0763 0258 0139 0020 0132 0067 0076 0236 0222 076D 079A 0171 0219 0792 0109 0074 0075 0072 0073 0070 0071 0119 0117 07AF 077E 0178 0180 0182
2020	Chevrolet	Equinox	Transmission Control Module	√	√	√	√	√	0017 0036
2020	Chevrolet	Equinox	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0229 0111
2020	Chevrolet	Equinox	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Chevrolet	Equinox	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Chevrolet	Equinox	Instrument Cluster	√	√	√	√	√	0247
2020	Chevrolet	Equinox	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Chevrolet	Equinox	HVAC Controls	√	√	√	√	√	
2020	Chevrolet	Equinox	Serial Data Gateway Module	√	√	√			
2020	Chevrolet	Equinox	Headlamp Control Module	√	√	√	√	√	0195
2020	Chevrolet	Equinox	Liftgate Control Module	√	√	√	√	√	0146 0169

2020	Chevrolet	Equinox	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	Chevrolet	Equinox	Power Steering Control Module	√	√	√	√		0081 0080 0089
2020	Chevrolet	Equinox	Video Processing Control Module	√	√	√	√	√	
2020	Chevrolet	Equinox	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Chevrolet	Equinox	Steering Column Lock Control Module	√	√	√	√		
2020	Chevrolet	Equinox	Keyless Entry Control Module	√	√	√	√	√	
2020	Chevrolet	Equinox	Passenger Presence Module	√	√	√	√	√	0057
2020	Chevrolet	Equinox	Side Object Sensor Module - Left	√	√	√		√	
2020	Chevrolet	Equinox	Frontview Camera - Windshield	√	√	√	√		0196 0084
2020	Chevrolet	Equinox	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Chevrolet	Equinox	Amplifier	√	√	√	√		
2020	Chevrolet	Equinox	Human Machine Interface Control Module	√	√	√	√	√	0150
2020	Chevrolet	Equinox	Radio Controls	√	√	√	√		0241
2020	Chevrolet	Equinox	Radio	√	√	√	√	√	0226 0150 0269 0267
2020	Chevrolet	Equinox	Rear Drive Control Module	√	√	√	√	√	0003
2020	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0212 0214 0217 0258 0088 0139 076C 0115 076D 0060 079A 0044 0045 0097 0171 0219 0792 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184
2020	Chevrolet	Express	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2020	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0225 0111 0277 0090
2020	Chevrolet	Express	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2020	Chevrolet	Express	Body Control Module	√	√	√	√	√	0263 0261
2020	Chevrolet	Express	Theft Deterrent Module	√	√	√	√		
2020	Chevrolet	Express	Instrument Cluster	√	√	√	√	√	
2020	Chevrolet	Express	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	Chevrolet	Express	Frontview Camera - Windshield	√	√	√	√		0196
2020	Chevrolet	Express	Side Object Sensor Module - Left	√	√	√		√	
2020	Chevrolet	Express	Side Object Sensor Module - Right	√	√	√		√	
2020	Chevrolet	Express	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2020	Chevrolet	Express	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2020	Chevrolet	Express	Radio	√	√	√	√	√	
2020	Chevrolet	Express	Parking Assist Control Module	√	√	√	√	√	0247
2020	Chevrolet	Express	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160

2020	Chevrolet	Express	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2020	Chevrolet	Express	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2020	Chevrolet	Impala	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2020	Chevrolet	Impala	Transmission Control Module	√	√	√	√	√	0016
2020	Chevrolet	Impala	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2020	Chevrolet	Impala	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Chevrolet	Impala	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0160 0033 0150
2020	Chevrolet	Impala	Instrument Cluster	√	√	√	√	√	0247
2020	Chevrolet	Impala	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Chevrolet	Impala	HVAC Controls	√	√	√	√	√	
2020	Chevrolet	Impala	Serial Data Gateway Module	√	√	√			
2020	Chevrolet	Impala	Keyless Entry Control Module	√	√	√	√	√	
2020	Chevrolet	Impala	Passenger Presence Module	√	√	√	√		0057
2020	Chevrolet	Impala	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Chevrolet	Impala	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	Chevrolet	Impala	Distance Sensing Cruise Control Module	√	√	√	√		0047
2020	Chevrolet	Impala	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2020	Chevrolet	Impala	Parking Brake Control Module	√	√	√	√	√	0229
2020	Chevrolet	Impala	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Chevrolet	Impala	Power Steering Control Module	√	√	√	√		0081 0080 0089
2020	Chevrolet	Impala	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2020	Chevrolet	Impala	Amplifier	√	√	√	√		
2020	Chevrolet	Impala	Human Machine Interface Control Module	√	√	√	√	√	0150
2020	Chevrolet	Impala	Radio	√	√	√	√	√	0226 0150
2020	Chevrolet	Impala	Radio Controls	√	√	√	√		0241
2020	Chevrolet	Impala	Navigation Control Module	√	√	√	√	√	
2020	Chevrolet	Impala	Rear Audio Control Module	√	√	√	√	√	
2020	Chevrolet	Impala	Side Object Sensor Module - Left	√	√	√		√	
2020	Chevrolet	Impala	Side Object Sensor Module - Right	√	√	√		√	
2020	Chevrolet	Impala	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Chevrolet	Labo	Engine Control Module	√	√	√	√	√	0069 0087
2020	Chevrolet	Labo	Tire Pressure Indicator Module	√	√	√	√		079D 0234
2020	Chevrolet	Labo	Fuel Injector Control Module	√	√	√	√	√	
2020	Chevrolet	Lacetti	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2020	Chevrolet	Lacetti	Transmission Control Module	√	√	√	√	√	0017 0036
2020	Chevrolet	Lacetti	Electronic Brake Control Module	√	√	√	√	√	
2020	Chevrolet	Lacetti	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2020	Chevrolet	Lacetti	Variable Power Steering Control Module				√	√	

2020	Chevrolet	Lacetti	Fuel Injector Control Module	√	√	√	√	√	
2020	Chevrolet	Malibu	Engine Control Module	√	√	√	√	√	0263 0209 075D 075E 075F 0760 0115 0756 0761 0086 0213 0757 0212 0217 0762 0006 0144 0258 0139 0763 0764 0765 0156 0147 0085 0154 0221 0214 0222 076D 079A 0171 0219 0792 0109 0074 0075 0072 0073 0070 0071 0119 0117 07AF 077E 0178 0180 0182
2020	Chevrolet	Malibu	Transmission Control Module	√	√	√	√	√	0017 0036 0016 075C
2020	Chevrolet	Malibu	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2020	Chevrolet	Malibu	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2020	Chevrolet	Malibu	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Chevrolet	Malibu	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Chevrolet	Malibu	Instrument Cluster	√	√	√	√	√	0247
2020	Chevrolet	Malibu	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Chevrolet	Malibu	HVAC Controls	√	√	√	√	√	
2020	Chevrolet	Malibu	Hybrid/EV Powertrain Control Module 2	√	√	√	√	√	0202 0218 0122
2020	Chevrolet	Malibu	Drive Motor Control Module 1	√	√	√	√		
2020	Chevrolet	Malibu	Drive Motor Control Module 2	√	√	√	√		
2020	Chevrolet	Malibu	Hybrid/EV Powertrain Control Module 1	√	√	√	√	√	0018
2020	Chevrolet	Malibu	Steering Column Lock Control Module	√	√	√	√		
2020	Chevrolet	Malibu	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Chevrolet	Malibu	Serial Data Gateway Module - Processor 2	√	√	√			
2020	Chevrolet	Malibu	Keyless Entry Control Module	√	√	√	√	√	
2020	Chevrolet	Malibu	Passenger Presence Module	√	√	√	√	√	0057
2020	Chevrolet	Malibu	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Chevrolet	Malibu	Headlamp Control Module	√	√	√	√	√	0195
2020	Chevrolet	Malibu	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	Chevrolet	Malibu	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Chevrolet	Malibu	Frontview Camera - Windshield	√	√	√	√		0196
2020	Chevrolet	Malibu	Active Safety Control Module	√	√	√	√		
2020	Chevrolet	Malibu	Amplifier	√	√	√	√		
2020	Chevrolet	Malibu	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2020	Chevrolet	Malibu	Radio	√	√	√	√	√	0150 0226 0269 0267

2020	Chevrolet	Malibu	Radio Controls	√	√	√	√		0241
2020	Chevrolet	Malibu	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Chevrolet	Malibu	Brake Booster Control Module	√	√	√	√		
2020	Chevrolet	Malibu	Power Steering Control Module	√	√	√	√		0081 0080 0089
2020	Chevrolet	Malibu	Side Object Sensor Module - Left	√	√	√		√	
2020	Chevrolet	Malibu	Side Object Sensor Module - Right	√	√	√		√	
2020	Chevrolet	Malibu	Air Conditioning Compressor	√					
2020	Chevrolet	Max	Engine Control Module	√	√	√	√	√	0069 0087 079C
2020	Chevrolet	Max	Electronic Brake Control Module	√	√	√	√	√	
2020	Chevrolet	Max	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2020	Chevrolet	Move	Engine Control Module	√	√	√	√	√	0069 0087 079C
2020	Chevrolet	Move	Electronic Brake Control Module	√	√	√	√	√	
2020	Chevrolet	Move	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2020	Chevrolet	Nexia	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2020	Chevrolet	Nexia	Transmission Control Module	√	√	√	√	√	0017 0036
2020	Chevrolet	Nexia	Electronic Brake Control Module	√	√	√	√	√	
2020	Chevrolet	Nexia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2020	Chevrolet	Nexia	Instrument Cluster	√	√	√		√	
2020	Chevrolet	Nexia	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2020	Chevrolet	Nexia	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Chevrolet	Nexia	Tire Pressure Indicator Module	√	√	√	√		079D 0234
2020	Chevrolet	Onix	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0115 0139 0774 0212 0258 0775 079E 0085 0154 0114
2020	Chevrolet	Onix	Transmission Control Module	√	√	√	√	√	0017
2020	Chevrolet	Onix	Electronic Brake Control Module	√	√	√	√	√	0090 0269
2020	Chevrolet	Onix	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Chevrolet	Onix	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0158 0268
2020	Chevrolet	Onix	Instrument Cluster	√	√	√	√	√	0247 0269
2020	Chevrolet	Onix	HVAC Control Module	√	√	√	√	√	0007 0269
2020	Chevrolet	Onix	Serial Data Gateway Module	√	√	√			
2020	Chevrolet	Onix	Radio	√	√	√	√	√	0226 0269
2020	Chevrolet	Onix	Firewall Control Module	√	√	√	√	√	0269
2020	Chevrolet	Onix	Electric Power Steering Control Module	√	√	√	√		079F 0269
2020	Chevrolet	Onix	Telematics Communication Interface Control Module	√	√	√	√	√	
2020	Chevrolet	Onix	Parking Assist Control Module	√	√	√	√	√	0247 0271 0269
2020	Chevrolet	Onix	Power Steering Control Module	√	√	√	√		0207



2020	Chevrolet	Onix	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2020	Chevrolet	Onix	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Chevrolet	Optra	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2020	Chevrolet	Optra	Transmission Control Module	√	√	√	√	√	0017 0036
2020	Chevrolet	Optra	Electronic Brake Control Module	√	√	√	√	√	
2020	Chevrolet	Optra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2020	Chevrolet	Optra	Body Control Module	√	√	√	√	√	
2020	Chevrolet	Optra	Instrument Cluster	√	√	√	√	√	
2020	Chevrolet	Optra	Power Steering Control Module	√	√	√	√		0089 0081 0080
2020	Chevrolet	Prisma	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0115
2020	Chevrolet	Prisma	Electronic Brake Control Module	√	√	√	√	√	0090
2020	Chevrolet	Prisma	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Chevrolet	Prisma	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Chevrolet	Prisma	Instrument Cluster	√	√	√	√	√	0247
2020	Chevrolet	Prisma	Serial Data Gateway Module	√	√	√			
2020	Chevrolet	Prisma	Radio	√	√	√	√	√	0226
2020	Chevrolet	Prisma	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Chevrolet	Prisma	Telematics Communication Interface Control Module	√	√	√		√	
2020	Chevrolet	Prisma	Power Steering Control Module	√	√	√	√		0207
2020	Chevrolet	Prisma	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Chevrolet	S10	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0222 0066 0147 0060 0044 0045 0086 0217 0109 0068 0084 0070 0071 0074 0075 0043 0173 0179 0181 0183 0185 0232 0156 0209 0020 0132 0067 0115 0154 0213 0214 0258
2020	Chevrolet	S10	Transmission Control Module	√	√	√	√	√	0016
2020	Chevrolet	S10	Electronic Brake Control Module	√	√	√	√	√	0090 0112 0111
2020	Chevrolet	S10	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Chevrolet	S10	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Chevrolet	S10	Instrument Cluster	√	√	√	√	√	0247

2020	Chevrolet	S10	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Chevrolet	S10	HVAC Controls	√	√	√	√	√	
2020	Chevrolet	S10	Serial Data Gateway Module	√	√	√			
2020	Chevrolet	S10	Telematics Communication Interface Control Module	√	√	√		√	
2020	Chevrolet	S10	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Chevrolet	S10	Power Steering Control Module	√	√	√	√		0093 0090
2020	Chevrolet	S10	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Chevrolet	S10	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	Chevrolet	S10	Radio	√	√	√	√	√	0226 0150
2020	Chevrolet	S10	Human Machine Interface Control Module	√	√	√	√	√	0150
2020	Chevrolet	S10	Radio Controls	√	√	√	√		0241
2020	Chevrolet	S10	Frontview Camera - Windshield	√	√	√	√	√	0196
2020	Chevrolet	S10	Transfer Case Control Module	√	√	√	√	√	0037
2020	Chevrolet	S10	Side Object Sensor Module - Left	√	√	√		√	
2020	Chevrolet	S10	Side Object Sensor Module - Right	√	√	√		√	
2020	Chevrolet	Sail	Engine Control Module	√	√	√	√	√	0087 0209 0217 0133 0210 0098 0096 0094 0216 0143 0265 0393 0173 0149 0156 0020 0110
2020	Chevrolet	Sail	Transmission Control Module	√	√	√	√	√	0200 0157 0153 0136 0035 0016
2020	Chevrolet	Sail	Electronic Brake Control Module	√	√	√	√	√	0111 0090
2020	Chevrolet	Sail	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0064 0040 0063 0039 0227 0172 0062 0038 0177 0261 0111
2020	Chevrolet	Sail	Body Control Module	√	√	√	√	√	0263
2020	Chevrolet	Sail	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Chevrolet	Sail	Radio/HVAC Controls	√	√	√	√	√	0150
2020	Chevrolet	Sail	Power Steering Control Module	√	√	√	√		0081 0089
2020	Chevrolet	Sail	Radio	√	√	√	√	√	
2020	Chevrolet	Sail	Telematics Communication Interface Control Module	√	√	√		√	
2020	Chevrolet	Sail	Keyless Entry Control Module						0204

2020	Chevrolet	Silverado	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 076C 0131 0067 07A9 076D 0058 079A 0045 0044 0088 0097 0219 0221 0792 07AA 0073 0072 0070 0071 0117 0118 0119 077E 0178 0180 0182 0184 0186 0188 0190 0192 0246 0214 075F
2020	Chevrolet	Silverado	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2020	Chevrolet	Silverado	Brake System Control Module	√	√	√	√	√	0229 0225 0090 0758 0767 0768 078E 078F
2020	Chevrolet	Silverado	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0771 0277 078F 0790
2020	Chevrolet	Silverado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Chevrolet	Silverado	Instrument Cluster	√	√	√	√	√	0247
2020	Chevrolet	Silverado	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Chevrolet	Silverado	HVAC Controls	√	√	√	√	√	
2020	Chevrolet	Silverado	Trailer Lighting Control Module	√	√	√	√	√	
2020	Chevrolet	Silverado	Parking Assist Control Module	√	√	√	√	√	0247
2020	Chevrolet	Silverado	Steering Column Lock Control Module	√	√	√	√		
2020	Chevrolet	Silverado	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2020	Chevrolet	Silverado	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A 0084
2020	Chevrolet	Silverado	Keyless Entry Control Module	√	√	√	√	√	
2020	Chevrolet	Silverado	Passenger Presence Module	√	√	√	√	√	0057
2020	Chevrolet	Silverado	Transfer Case Control Module	√	√	√	√	√	0037 0776 07A6 0099
2020	Chevrolet	Silverado	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2020	Chevrolet	Silverado	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 07AB 0009 07AC
2020	Chevrolet	Silverado	Power Steering Control Module	√	√	√	√		0089 0084 0273 0082
2020	Chevrolet	Silverado	Suspension Control Module	√	√	√	√	√	

2020	Chevrolet	Silverado	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Chevrolet	Silverado	Serial Data Gateway Module - Processor 2	√	√	√			
2020	Chevrolet	Silverado	Video Processing Control Module	√	√	√	√	√	
2020	Chevrolet	Silverado	Rear Gate Module	√	√	√	√		
2020	Chevrolet	Silverado	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	Chevrolet	Silverado	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Chevrolet	Silverado	Assist Step Control Module	√	√	√	√	√	
2020	Chevrolet	Silverado	Amplifier	√	√	√	√		
2020	Chevrolet	Silverado	Radio	√	√	√	√	√	0150 0226 0269 0267
2020	Chevrolet	Silverado	Side Object Sensor Module - Left	√	√	√		√	
2020	Chevrolet	Silverado	Side Object Sensor Module - Right	√	√	√		√	
2020	Chevrolet	Silverado	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2020	Chevrolet	Silverado	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2020	Chevrolet	Sonic	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139 0020 0066 076D 0213
2020	Chevrolet	Sonic	Transmission Control Module	√	√	√	√	√	0017 0036
2020	Chevrolet	Sonic	Electronic Brake Control Module	√	√	√	√	√	0090
2020	Chevrolet	Sonic	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Chevrolet	Sonic	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0333 0150
2020	Chevrolet	Sonic	Instrument Cluster	√	√	√	√	√	0247
2020	Chevrolet	Sonic	Serial Data Gateway Module	√	√	√			
2020	Chevrolet	Sonic	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	Chevrolet	Sonic	Power Steering Control Module	√	√	√	√		0207
2020	Chevrolet	Sonic	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Chevrolet	Sonic	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Chevrolet	Sonic	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2020	Chevrolet	Sonic	Keyless Entry Control Module	√	√	√	√	√	
2020	Chevrolet	Sonic	Passenger Presence Module	√	√	√	√		0057
2020	Chevrolet	Sonic	Front Seat Heating Control Module	√	√	√	√	√	
2020	Chevrolet	Sonic	Chassis Control Module	√	√	√	√	√	0217
2020	Chevrolet	Sonic	Radio	√	√	√	√	√	0150 0226 0269
2020	Chevrolet	Spark	Engine Control Module	√	√	√	√	√	0156 0140 0209 0132 0067 0263 0086 0217 0139 0069 0087 0115
2020	Chevrolet	Spark	Transmission Control Module	√	√	√	√	√	0017 0016
2020	Chevrolet	Spark	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2020	Chevrolet	Spark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2020	Chevrolet	Spark	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160 0233 0159 0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0267
2020	Chevrolet	Spark	Instrument Cluster	√	√	√	√	√	0247
2020	Chevrolet	Spark	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Chevrolet	Spark	HVAC Controls	√	√	√	√	√	
2020	Chevrolet	Spark	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Chevrolet	Spark	Radio	√	√	√	√	√	0226 0150 0269
2020	Chevrolet	Spark	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	Chevrolet	Spark	Keyless Entry Control Module	√	√	√	√	√	
2020	Chevrolet	Spark	Passenger Presence Module	√	√	√	√	√	0057
2020	Chevrolet	Spark	Short Range Remote Control Transceiver	√	√	√	√		
2020	Chevrolet	Spark	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2020	Chevrolet	Spark	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Chevrolet	Spark	Serial Data Gateway Module - Processor 2	√	√	√			
2020	Chevrolet	Spark	Power Steering Control Module	√	√	√	√		0089
2020	Chevrolet	Spark	Steering Column Lock Control Module	√	√	√	√		
2020	Chevrolet	Spark	Chime Alarm Control Module	√	√	√		√	
2020	Chevrolet	Spin	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0115
2020	Chevrolet	Spin	Transmission Control Module	√	√	√	√	√	0017 0036
2020	Chevrolet	Spin	Electronic Brake Control Module	√	√	√	√	√	0090
2020	Chevrolet	Spin	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Chevrolet	Spin	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Chevrolet	Spin	Instrument Cluster	√	√	√	√	√	0247
2020	Chevrolet	Spin	Serial Data Gateway Module	√	√	√			
2020	Chevrolet	Spin	Radio	√	√	√	√	√	0226
2020	Chevrolet	Spin	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Chevrolet	Spin	Telematics Communication Interface Control Module	√	√	√		√	
2020	Chevrolet	Spin	Power Steering Control Module	√	√	√	√		0207
2020	Chevrolet	Spin	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Chevrolet	Suburban	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2020	Chevrolet	Suburban	Transmission Control Module	√	√	√	√	√	0017 0016
2020	Chevrolet	Suburban	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277

2020	Chevrolet	Suburban	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Chevrolet	Suburban	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Chevrolet	Suburban	Instrument Cluster	√	√	√	√	√	0247
2020	Chevrolet	Suburban	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Chevrolet	Suburban	HVAC Controls	√	√	√	√	√	
2020	Chevrolet	Suburban	Serial Data Gateway Module	√	√	√			
2020	Chevrolet	Suburban	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	Chevrolet	Suburban	Power Steering Control Module	√	√	√	√	√	0150
2020	Chevrolet	Suburban	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2020	Chevrolet	Suburban	Suspension Control Module	√	√	√	√	√	0245
2020	Chevrolet	Suburban	Video Processing Control Module	√	√	√	√	√	
2020	Chevrolet	Suburban	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Chevrolet	Suburban	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	Chevrolet	Suburban	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Chevrolet	Suburban	Passenger Presence Module	√	√	√	√	√	0057
2020	Chevrolet	Suburban	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2020	Chevrolet	Suburban	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2020	Chevrolet	Suburban	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Chevrolet	Suburban	Side Object Sensor Module - Left	√	√	√		√	
2020	Chevrolet	Suburban	Side Object Sensor Module - Right	√	√	√		√	
2020	Chevrolet	Suburban	Steering Column Lock Control Module	√	√	√	√		
2020	Chevrolet	Suburban	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2020	Chevrolet	Suburban	Active Safety Control Module	√	√	√	√	√	
2020	Chevrolet	Suburban	Distance Sensing Cruise Control Module	√	√	√	√		0047
2020	Chevrolet	Suburban	Frontview Camera - Windshield	√	√	√	√		0196 075A
2020	Chevrolet	Suburban	Parking Brake Control Module	√	√	√	√	√	0229
2020	Chevrolet	Suburban	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Chevrolet	Suburban	Seat Memory Control Module - Passenger	√	√	√	√	√	
2020	Chevrolet	Suburban	Assist Step Control Module	√	√	√	√	√	
2020	Chevrolet	Suburban	Amplifier	√	√	√	√		
2020	Chevrolet	Suburban	Human Machine Interface Control Module	√	√	√	√	√	0150
2020	Chevrolet	Suburban	Media Disc Player	√	√	√	√	√	
2020	Chevrolet	Suburban	Radio	√	√	√	√	√	0226 0150
2020	Chevrolet	Suburban	Radio Controls	√	√	√	√		0241
2020	Chevrolet	Suburban	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2020	Chevrolet	Suburban	Transfer Case Control Module	√	√	√	√	√	0037

2020	Chevrolet	Tahoe	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2020	Chevrolet	Tahoe	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2020	Chevrolet	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2020	Chevrolet	Tahoe	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Chevrolet	Tahoe	Instrument Cluster	√	√	√	√	√	0247
2020	Chevrolet	Tahoe	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Chevrolet	Tahoe	HVAC Controls	√	√	√	√	√	
2020	Chevrolet	Tahoe	Serial Data Gateway Module	√	√	√			
2020	Chevrolet	Tahoe	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	Chevrolet	Tahoe	Video Processing Control Module	√	√	√	√	√	
2020	Chevrolet	Tahoe	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Chevrolet	Tahoe	Suspension Control Module	√	√	√	√	√	0245
2020	Chevrolet	Tahoe	Power Steering Control Module	√	√	√	√	√	0150
2020	Chevrolet	Tahoe	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Chevrolet	Tahoe	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	Chevrolet	Tahoe	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Chevrolet	Tahoe	Passenger Presence Module	√	√	√	√	√	0057
2020	Chevrolet	Tahoe	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2020	Chevrolet	Tahoe	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2020	Chevrolet	Tahoe	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Chevrolet	Tahoe	Side Object Sensor Module - Left	√	√	√		√	
2020	Chevrolet	Tahoe	Side Object Sensor Module - Right	√	√	√		√	
2020	Chevrolet	Tahoe	Steering Column Lock Control Module	√	√	√	√		
2020	Chevrolet	Tahoe	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2020	Chevrolet	Tahoe	Frontview Camera - Windshield	√	√	√	√		0196 075A
2020	Chevrolet	Tahoe	Active Safety Control Module	√	√	√	√	√	
2020	Chevrolet	Tahoe	Distance Sensing Cruise Control Module	√	√	√	√		0047
2020	Chevrolet	Tahoe	Parking Brake Control Module	√	√	√	√	√	0229
2020	Chevrolet	Tahoe	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Chevrolet	Tahoe	Seat Memory Control Module - Passenger	√	√	√	√	√	
2020	Chevrolet	Tahoe	Assist Step Control Module	√	√	√	√	√	
2020	Chevrolet	Tahoe	Amplifier	√	√	√	√		
2020	Chevrolet	Tahoe	Human Machine Interface Control Module	√	√	√	√	√	0150

2020	Chevrolet	Tahoe	Media Disc Player	√	√	√	√	√	
2020	Chevrolet	Tahoe	Radio	√	√	√	√	√	0226 0150
2020	Chevrolet	Tahoe	Radio Controls	√	√	√	√	√	0241
2020	Chevrolet	Tahoe	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2020	Chevrolet	Tahoe	Transfer Case Control Module	√	√	√	√	√	0037
2020	Chevrolet	Tracker	Engine Control Module	√	√	√	√	√	0140 0147 0086 0217 0263 0156 0209 0020 0132 0067 0115 0085 0154 0213 0221 0212 0214 0006 0144 0258 0139 0066 076D 0222 079A 0764 0171 0219 0792 0109 0074 0075 0072 0073 0070 0071 0119 0117 07AF 077E
2020	Chevrolet	Tracker	Transmission Control Module	√	√	√	√	√	0017 0036
2020	Chevrolet	Tracker	Electronic Brake Control Module	√	√	√	√	√	0269 0090
2020	Chevrolet	Tracker	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0111 0172 0134 0758
2020	Chevrolet	Tracker	Body Control Module	√	√	√	√	√	0269 0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0222 0150
2020	Chevrolet	Tracker	Instrument Cluster	√	√	√	√	√	0269 0247
2020	Chevrolet	Tracker	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Chevrolet	Tracker	Serial Data Gateway Module	√	√	√			
2020	Chevrolet	Tracker	Telematics Communication Interface Control Module	√	√	√		√	
2020	Chevrolet	Tracker	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Chevrolet	Tracker	Power Steering Control Module	√	√	√	√		0207
2020	Chevrolet	Tracker	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Chevrolet	Tracker	Keyless Entry Control Module	√	√	√	√	√	
2020	Chevrolet	Tracker	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2020	Chevrolet	Tracker	Chassis Control Module	√	√	√	√	√	0217
2020	Chevrolet	Tracker	Front Seat Heating Control Module	√	√	√	√	√	
2020	Chevrolet	Tracker	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2020	Chevrolet	Tracker	Side Object Sensor Module - Left	√	√	√		√	
2020	Chevrolet	Tracker	Steering Column Lock Control Module	√	√	√	√		
2020	Chevrolet	Tracker	Radio	√	√	√	√	√	0269 0226
2020	Chevrolet	Tracker	Firewall Control Module	√	√	√	√	√	0269
2020	Chevrolet	Tracker	Electric Power Steering Control Module	√	√	√	√		079F 0269



2020	Chevrolet	Trailblazer	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0066 0086 0217 0258 0210 0224 0130 0222 0147 0060 0044 0045 0109 0068 0084 0070 0071 0074 0075 0043 0173 0179 0181 0183 0185 0232
2020	Chevrolet	Trailblazer	Transmission Control Module	√	√	√	√	√	0016
2020	Chevrolet	Trailblazer	Electronic Brake Control Module	√	√	√	√	√	0090 0112 0111
2020	Chevrolet	Trailblazer	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Chevrolet	Trailblazer	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Chevrolet	Trailblazer	Instrument Cluster	√	√	√	√	√	0247
2020	Chevrolet	Trailblazer	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Chevrolet	Trailblazer	HVAC Controls	√	√	√	√	√	
2020	Chevrolet	Trailblazer	Serial Data Gateway Module	√	√	√			
2020	Chevrolet	Trailblazer	Telematics Communication Interface Control Module	√	√	√		√	
2020	Chevrolet	Trailblazer	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Chevrolet	Trailblazer	Power Steering Control Module	√	√	√	√		0093 0090
2020	Chevrolet	Trailblazer	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Chevrolet	Trailblazer	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	Chevrolet	Trailblazer	Radio	√	√	√	√	√	0226 0150
2020	Chevrolet	Trailblazer	Human Machine Interface Control Module	√	√	√	√	√	0150
2020	Chevrolet	Trailblazer	Radio Controls	√	√	√	√		0241
2020	Chevrolet	Trailblazer	Frontview Camera - Windshield	√	√	√	√	√	0196
2020	Chevrolet	Trailblazer	Transfer Case Control Module	√	√	√	√	√	0037
2020	Chevrolet	Trailblazer	Side Object Sensor Module - Left	√	√	√		√	
2020	Chevrolet	Trailblazer	Side Object Sensor Module - Right	√	√	√		√	
2020	Chevrolet	Traverse	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0226 0130 0756 0005
2020	Chevrolet	Traverse	Transmission Control Module	√	√	√	√	√	0017
2020	Chevrolet	Traverse	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2020	Chevrolet	Traverse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2020	Chevrolet	Traverse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2020	Chevrolet	Traverse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Chevrolet	Traverse	Instrument Cluster	√	√	√	√	√	0247
2020	Chevrolet	Traverse	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Chevrolet	Traverse	HVAC Controls	√	√	√	√	√	
2020	Chevrolet	Traverse	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Chevrolet	Traverse	Serial Data Gateway Module - Processor 2	√	√	√			
2020	Chevrolet	Traverse	Video Processing Control Module	√	√	√	√	√	
2020	Chevrolet	Traverse	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Chevrolet	Traverse	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Chevrolet	Traverse	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	Chevrolet	Traverse	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Chevrolet	Traverse	Passenger Presence Module	√	√	√	√	√	0057
2020	Chevrolet	Traverse	Active Safety Control Module	√	√	√	√		
2020	Chevrolet	Traverse	Long Range Radar Sensor Module	√	√	√	√		0260
2020	Chevrolet	Traverse	Frontview Camera - Windshield	√	√	√	√		0196
2020	Chevrolet	Traverse	Power Steering Control Module	√	√	√	√		0089 0084
2020	Chevrolet	Traverse	Suspension Control Module	√	√	√	√	√	
2020	Chevrolet	Traverse	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Chevrolet	Traverse	Amplifier	√	√	√	√		
2020	Chevrolet	Traverse	Radio Controls	√	√	√	√		0241
2020	Chevrolet	Traverse	Radio	√	√	√	√	√	0150 0226 0269 0267
2020	Chevrolet	Traverse	Side Object Sensor Module - Left	√	√	√		√	
2020	Chevrolet	Traverse	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Chevrolet	Traverse	Rear Drive Control Module	√	√	√	√	√	0003
2020	Chevrolet	Traverse	Steering Column Lock Control Module	√	√	√	√		
2020	Chevrolet	Trax	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0066 076D 0222 0044 0045 0171 0219 0074 0075 0072 0073 0070 0071 0117 0119 077E 0178
2020	Chevrolet	Trax	Transmission Control Module	√	√	√	√	√	0017 0036
2020	Chevrolet	Trax	Electronic Brake Control Module	√	√	√	√	√	0090
2020	Chevrolet	Trax	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2020	Chevrolet	Trax	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Chevrolet	Trax	Instrument Cluster	√	√	√	√	√	0247
2020	Chevrolet	Trax	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Chevrolet	Trax	Serial Data Gateway Module	√	√	√			
2020	Chevrolet	Trax	Steering Column Lock Control Module	√	√	√	√		
2020	Chevrolet	Trax	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	Chevrolet	Trax	Power Steering Control Module	√	√	√	√		0207
2020	Chevrolet	Trax	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Chevrolet	Trax	Keyless Entry Control Module	√	√	√	√	√	
2020	Chevrolet	Trax	Passenger Presence Module	√	√	√	√		0057
2020	Chevrolet	Trax	Short Range Remote Control Transceiver	√	√	√	√		
2020	Chevrolet	Trax	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Chevrolet	Trax	Side Object Sensor Module - Left	√	√	√		√	
2020	Chevrolet	Trax	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2020	Chevrolet	Trax	Power Supply Transformer	√	√	√	√		
2020	Chevrolet	Trax	Front Seat Heating Control Module	√	√	√	√	√	
2020	Chevrolet	Trax	Chassis Control Module	√	√	√	√	√	0217
2020	Chevrolet	Trax	Radio	√	√	√	√	√	0226 0150 0269
2020	Chevrolet	Trax	Rear Drive Control Module	√	√	√	√		0003 075B
2020	Chevrolet	Work	Engine Control Module	√	√	√	√	√	0069 0087 079C
2020	Chevrolet	Work	Electronic Brake Control Module	√	√	√	√	√	
2020	Chevrolet	Work	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2020	Holden	Acadia	Engine Control Module	√	√	√	√	√	0263 0156 0209 0006 0115 0756 0086 0085 0154 0217 0258 0236
2020	Holden	Acadia	Transmission Control Module	√	√	√	√	√	0017
2020	Holden	Acadia	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2020	Holden	Acadia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Holden	Acadia	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Holden	Acadia	Instrument Cluster	√	√	√	√	√	0247
2020	Holden	Acadia	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Holden	Acadia	HVAC Controls	√	√	√	√	√	
2020	Holden	Acadia	Video Processing Control Module	√	√	√	√	√	
2020	Holden	Acadia	Liftgate Control Module	√	√	√	√	√	0146 0169

2020	Holden	Acadia	Active Safety Control Module	√	√	√	√		
2020	Holden	Acadia	Frontview Camera - Windshield	√	√	√	√		0196
2020	Holden	Acadia	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Holden	Acadia	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Holden	Acadia	Serial Data Gateway Module - Processor 2	√	√	√			
2020	Holden	Acadia	Side Object Sensor Module - Left	√	√	√		√	
2020	Holden	Acadia	Side Object Sensor Module - Right	√	√	√		√	
2020	Holden	Acadia	Steering Column Lock Control Module	√	√	√	√		
2020	Holden	Acadia	Parking Assist Control Module	√	√	√	√	√	0247
2020	Holden	Acadia	Keyless Entry Control Module	√	√	√	√	√	0759
2020	Holden	Acadia	Passenger Presence Module	√	√	√	√	√	0057
2020	Holden	Acadia	Power Steering Control Module	√	√	√	√		0089 0084
2020	Holden	Acadia	Suspension Control Module	√	√	√	√	√	
2020	Holden	Acadia	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Holden	Acadia	Radio	√	√	√	√	√	0226 0267 0269
2020	Holden	Acadia	Amplifier	√	√	√	√		
2020	Holden	Acadia	Rear Drive Control Module	√	√	√	√	√	0003
2020	Holden	Astra	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0076 0147 0236
2020	Holden	Astra	Transmission Control Module	√	√	√	√	√	0017 0036
2020	Holden	Astra	Electronic Brake Control Module	√	√	√	√	√	0090 0278
2020	Holden	Astra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2020	Holden	Astra	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Holden	Astra	Instrument Cluster	√	√	√	√	√	0247
2020	Holden	Astra	HVAC Control Module	√	√	√	√	√	0007 0247 0129
2020	Holden	Astra	HVAC Controls	√	√	√	√	√	
2020	Holden	Astra	Keyless Entry Control Module	√	√	√	√	√	
2020	Holden	Astra	Frontview Camera - Windshield	√	√	√	√		0196
2020	Holden	Astra	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Holden	Astra	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Holden	Astra	Serial Data Gateway Module - Processor 2	√	√	√			
2020	Holden	Astra	Steering Column Lock Control Module	√	√	√	√		
2020	Holden	Astra	Power Supply Transformer	√	√	√	√		
2020	Holden	Astra	Radio	√	√	√	√	√	0150 0226 0269
2020	Holden	Astra	Trailer Lighting Control Module	√	√	√	√	√	0247

2020	Holden	Astra	Power Steering Control Module	√	√	√	√		0089
2020	Holden	Astra	Active Safety Control Module	√	√	√	√		
2020	Holden	Astra	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Holden	Colorado	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0222 0066 0147 0060 0044 0045 0086 0217 0109 0068 0084 0070 0071 0074 0075 0043 0173 0179 0181 0183 0185 0232
2020	Holden	Colorado	Transmission Control Module	√	√	√	√	√	0016
2020	Holden	Colorado	Electronic Brake Control Module	√	√	√	√	√	0090 0112
2020	Holden	Colorado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Holden	Colorado	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Holden	Colorado	Instrument Cluster	√	√	√	√	√	0247
2020	Holden	Colorado	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Holden	Colorado	HVAC Controls	√	√	√	√	√	
2020	Holden	Colorado	Serial Data Gateway Module	√	√	√			
2020	Holden	Colorado	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Holden	Colorado	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	Holden	Colorado	Human Machine Interface Control Module	√	√	√	√	√	0150
2020	Holden	Colorado	Radio	√	√	√	√	√	0226 0150
2020	Holden	Colorado	Radio Controls	√	√	√	√		0241
2020	Holden	Colorado	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2020	Holden	Colorado	Frontview Camera - Windshield	√	√	√	√	√	0196
2020	Holden	Colorado	Power Steering Control Module	√	√	√	√		0089
2020	Holden	Colorado	Side Object Sensor Module - Right	√	√	√		√	
2020	Holden	Colorado	Side Object Sensor Module - Left	√	√	√		√	
2020	Holden	Colorado	Transfer Case Control Module	√	√	√	√	√	0037
2020	Holden	Colorado	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Holden	Commodore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0756 0085 0222 076D 079A 0044 0045 0171 0219 0792 0109 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180

2020	Holden	Commodore	Transmission Control Module	√	√	√	√	√	0020 0084 0017
2020	Holden	Commodore	Electronic Brake Control Module	√	√	√	√	√	0090 0278
2020	Holden	Commodore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2020	Holden	Commodore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Holden	Commodore	Instrument Cluster	√	√	√	√	√	0247 0145
2020	Holden	Commodore	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Holden	Commodore	HVAC Controls	√	√	√	√	√	
2020	Holden	Commodore	Serial Data Gateway Module	√	√	√			
2020	Holden	Commodore	Video Processing Control Module	√	√	√	√	√	
2020	Holden	Commodore	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	Holden	Commodore	Headlamp Control Module	√	√	√	√	√	0195
2020	Holden	Commodore	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Holden	Commodore	Side Object Sensor Module - Left	√	√	√		√	
2020	Holden	Commodore	Active Safety Control Module	√	√	√	√		
2020	Holden	Commodore	Frontview Camera - Windshield	√	√	√	√		0196
2020	Holden	Commodore	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	Holden	Commodore	Steering Column Lock Control Module	√	√	√	√		
2020	Holden	Commodore	Power Steering Control Module	√	√	√	√		0089
2020	Holden	Commodore	Suspension Control Module	√	√	√	√	√	
2020	Holden	Commodore	Keyless Entry Control Module	√	√	√	√	√	
2020	Holden	Commodore	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Holden	Commodore	Seat Memory Control Module - Passenger	√	√	√	√	√	
2020	Holden	Commodore	Amplifier	√	√	√	√		
2020	Holden	Commodore	Radio Controls	√	√	√	√		0241
2020	Holden	Commodore	Radio	√	√	√	√	√	0150 0226 0269
2020	Holden	Commodore	Power Supply Transformer	√	√	√	√		
2020	Holden	Commodore	Parking Assist Control Module	√	√	√	√	√	
2020	Holden	Commodore	Differential Control Module	√	√	√	√	√	0003
2020	Holden	Equinox	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0076 0147 0236 0222 076D 079A 0764 0171 0219 0792 0109 0074 0075 0072 0073 0070 0071 0119 0117 07AF 077E
2020	Holden	Equinox	Transmission Control Module	√	√	√	√	√	0017 0036

2020	Holden	Equinox	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0229 0771
2020	Holden	Equinox	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Holden	Equinox	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Holden	Equinox	Instrument Cluster	√	√	√	√	√	0247
2020	Holden	Equinox	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Holden	Equinox	HVAC Controls	√	√	√	√	√	
2020	Holden	Equinox	Serial Data Gateway Module	√	√	√			
2020	Holden	Equinox	Power Steering Control Module	√	√	√	√		0089
2020	Holden	Equinox	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	Holden	Equinox	Video Processing Control Module	√	√	√	√	√	
2020	Holden	Equinox	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Holden	Equinox	Steering Column Lock Control Module	√	√	√	√		
2020	Holden	Equinox	Headlamp Control Module	√	√	√	√	√	0195
2020	Holden	Equinox	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	Holden	Equinox	Telematics Communication Interface Control Module	√	√	√			
2020	Holden	Equinox	Keyless Entry Control Module	√	√	√	√	√	
2020	Holden	Equinox	Side Object Sensor Module - Left	√	√	√		√	
2020	Holden	Equinox	Frontview Camera - Windshield	√	√	√	√		0196 0084
2020	Holden	Equinox	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Holden	Equinox	Amplifier	√	√	√	√		
2020	Holden	Equinox	Radio Controls	√	√	√	√		0241
2020	Holden	Equinox	Radio	√	√	√	√	√	0150 0226 0269
2020	Holden	Equinox	Rear Drive Control Module	√	√	√	√	√	0003
2020	Holden	Spark	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0115
2020	Holden	Spark	Transmission Control Module	√	√	√	√	√	0017
2020	Holden	Spark	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2020	Holden	Spark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2020	Holden	Spark	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Holden	Spark	Instrument Cluster	√	√	√	√	√	0247
2020	Holden	Spark	Keyless Entry Control Module	√	√	√	√	√	
2020	Holden	Spark	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Holden	Spark	Steering Column Lock Control Module	√	√	√	√		
2020	Holden	Spark	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A

2020	Holden	Spark	Power Steering Control Module	√	√	√	√		0089
2020	Holden	Spark	Radio	√	√	√	√	√	0150 0226 0269
2020	Holden	Spark	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Holden	Spark	Serial Data Gateway Module - Processor 2	√	√	√			
2020	Holden	Trailblazer	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0222 0066 0147 0060 0044 0045 0086 0217 0109 0068 0084 0070 0071 0074 0075 0043 0173 0179 0181 0183 0185 0232
2020	Holden	Trailblazer	Transmission Control Module	√	√	√	√	√	0016
2020	Holden	Trailblazer	Electronic Brake Control Module	√	√	√	√	√	0090 0112
2020	Holden	Trailblazer	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Holden	Trailblazer	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Holden	Trailblazer	Instrument Cluster	√	√	√	√	√	0247
2020	Holden	Trailblazer	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Holden	Trailblazer	HVAC Controls	√	√	√	√	√	
2020	Holden	Trailblazer	Serial Data Gateway Module	√	√	√			
2020	Holden	Trailblazer	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Holden	Trailblazer	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	Holden	Trailblazer	Human Machine Interface Control Module	√	√	√	√	√	0150
2020	Holden	Trailblazer	Radio	√	√	√	√	√	0226 0150
2020	Holden	Trailblazer	Radio Controls	√	√	√	√		0241
2020	Holden	Trailblazer	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2020	Holden	Trailblazer	Frontview Camera - Windshield	√	√	√	√	√	0196
2020	Holden	Trailblazer	Power Steering Control Module	√	√	√	√		0089
2020	Holden	Trailblazer	Transfer Case Control Module	√	√	√	√	√	0037
2020	Holden	Trailblazer	Side Object Sensor Module - Left	√	√	√		√	
2020	Holden	Trailblazer	Side Object Sensor Module - Right	√	√	√		√	
2020	Holden	Trailblazer	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Holden	Trax	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006
2020	Holden	Trax	Transmission Control Module	√	√	√	√	√	0017 0036
2020	Holden	Trax	Electronic Brake Control Module	√	√	√	√	√	0090
2020	Holden	Trax	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Holden	Trax	Body Control Module	√	√	√	√	√	0263 0203 0083 0159
2020	Holden	Trax	Instrument Cluster	√	√	√	√	√	0247



2020	Holden	Trax	HVAC Control Module	√	√	√	√	√	
2020	Holden	Trax	Serial Data Gateway Module	√	√	√			
2020	Holden	Trax	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	Holden	Trax	Power Steering Control Module	√	√	√	√		0207
2020	Holden	Trax	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Holden	Trax	Headlamp Control Module	√	√	√	√	√	0195
2020	Holden	Trax	Headlamp High Beam Control Module	√	√	√	√	√	0247
2020	Holden	Trax	Keyless Entry Control Module	√	√	√	√	√	
2020	Holden	Trax	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Holden	Trax	Steering Column Lock Control Module	√	√	√	√		
2020	Holden	Trax	Side Object Sensor Module - Left	√	√	√		√	
2020	Holden	Trax	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2020	Holden	Trax	Power Supply Transformer	√	√	√	√		
2020	Holden	Trax	Front Seat Heating Control Module	√	√	√	√	√	
2020	Holden	Trax	Radio	√	√	√	√	√	
2020	Holden	Trax	Chassis Control Module	√	√	√	√	√	0217
2020	Ravon	Gentra	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2020	Ravon	Gentra	Transmission Control Module	√	√	√	√	√	0017 0036
2020	Ravon	Gentra	Electronic Brake Control Module	√	√	√	√	√	
2020	Ravon	Gentra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2020	Ravon	Gentra	Variable Power Steering Control Module				√	√	
2020	Ravon	Nexia R3	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2020	Ravon	Nexia R3	Transmission Control Module	√	√	√	√	√	0017 0036
2020	Ravon	Nexia R3	Electronic Brake Control Module	√	√	√	√	√	0090
2020	Ravon	Nexia R3	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2020	Ravon	Nexia R3	Instrument Cluster	√	√	√		√	
2020	Ravon	Nexia R3	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2020	Ravon	Nexia R3	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Ravon	Nexia R3	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	Ravon	Nexia R3	Tire Pressure Indicator Module	√	√	√	√		079D 0234
2020	Ravon	R2	Engine Control Module	√	√	√	√	√	0156 0140 0209 0132 0067 0263 0086 0217
2020	Ravon	R2	Transmission Control Module	√	√	√	√	√	0016
2020	Ravon	R2	Electronic Brake Control Module	√	√	√	√	√	0090
2020	Ravon	R2	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2020	Ravon	R2	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2020	Ravon	R2	Instrument Cluster	√	√	√	√	√	
2020	Ravon	R2	Serial Data Gateway Module	√	√	√			
2020	Ravon	R2	Power Steering Control Module	√	√	√	√		0089
2020	Ravon	R2	Radio	√	√	√	√	√	0226

2020	Ravon	R4	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139
2020	Ravon	R4	Transmission Control Module	√	√	√	√	√	0017 0036
2020	Ravon	R4	Electronic Brake Control Module	√	√	√	√	√	0090
2020	Ravon	R4	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Ravon	R4	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Ravon	R4	Instrument Cluster	√	√	√	√	√	0247
2020	Ravon	R4	Serial Data Gateway Module	√	√	√			
2020	Ravon	R4	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	Ravon	R4	Front Seat Heating Control Module	√	√	√	√	√	
2020	Ravon	R4	Radio	√	√	√	√	√	
2020	Ravon	R4	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2020	Ravon	R4	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	GMC	Acadia	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 0156 0020 0132 0067 0154 0213 0214 0756 0236
2020	GMC	Acadia	Transmission Control Module	√	√	√	√	√	0017
2020	GMC	Acadia	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2020	GMC	Acadia	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2020	GMC	Acadia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	GMC	Acadia	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	GMC	Acadia	Instrument Cluster	√	√	√	√	√	0247
2020	GMC	Acadia	HVAC Control Module	√	√	√	√	√	0007 0129
2020	GMC	Acadia	HVAC Controls	√	√	√	√	√	
2020	GMC	Acadia	Video Processing Control Module	√	√	√	√	√	
2020	GMC	Acadia	Serial Data Gateway Module - Processor 1	√	√	√			
2020	GMC	Acadia	Serial Data Gateway Module - Processor 2	√	√	√			
2020	GMC	Acadia	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	GMC	Acadia	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	GMC	Acadia	Parking Assist Control Module	√	√	√	√	√	0247

2020	GMC	Acadia	Side Object Sensor Module - Left	√	√	√		√	
2020	GMC	Acadia	Steering Column Lock Control Module	√	√	√	√		
2020	GMC	Acadia	Active Safety Control Module	√	√	√	√		
2020	GMC	Acadia	Frontview Camera - Windshield	√	√	√	√		0196
2020	GMC	Acadia	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	GMC	Acadia	Power Steering Control Module	√	√	√	√		0089 0084
2020	GMC	Acadia	Suspension Control Module	√	√	√	√	√	
2020	GMC	Acadia	Keyless Entry Control Module	√	√	√	√	√	0759
2020	GMC	Acadia	Passenger Presence Module	√	√	√	√	√	0057
2020	GMC	Acadia	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	GMC	Acadia	Amplifier	√	√	√	√		
2020	GMC	Acadia	Radio	√	√	√	√	√	0150 0226 0269 0267
2020	GMC	Acadia	Rear Drive Control Module	√	√	√	√	√	0003
2020	GMC	Canyon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0006 0756 0085 0236 076C 076D 0060 079A 0044 0045 0097 0171 0219 0792 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2020	GMC	Canyon	Transmission Control Module	√	√	√	√	√	0225 0090 0111
2020	GMC	Canyon	Electronic Brake Control Module	√	√	√	√	√	0172 0134 0111 0758
2020	GMC	Canyon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	GMC	Canyon	Body Control Module	√	√	√	√	√	0247
2020	GMC	Canyon	Instrument Cluster	√	√	√	√	√	0007 0129
2020	GMC	Canyon	HVAC Control Module	√	√	√	√	√	
2020	GMC	Canyon	HVAC Controls	√	√	√	√	√	
2020	GMC	Canyon	Serial Data Gateway Module	√	√	√			
2020	GMC	Canyon	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	GMC	Canyon	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	GMC	Canyon	Power Steering Control Module	√	√	√	√		0093 0090
2020	GMC	Canyon	Frontview Camera - Windshield	√	√	√	√	√	0196
2020	GMC	Canyon	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2020	GMC	Canyon	Transfer Case Control Module	√	√	√	√	√	0037

2020	GMC	Canyon	Amplifier	√	√	√	√		
2020	GMC	Canyon	Radio	√	√	√	√	√	0150 0226 0269 0267
2020	GMC	Canyon	Passenger Presence Module	√	√	√	√	√	0057
2020	GMC	Canyon	Parking Assist Control Module	√	√	√	√	√	0247
2020	GMC	Savana	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0212 0214 0217 0258 0088 0139 076C 0115 076D 0060 079A 0044 0045 0097 0171 0219 0792 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184
2020	GMC	Savana	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2020	GMC	Savana	Electronic Brake Control Module	√	√	√	√	√	0225 0111 0277 0090
2020	GMC	Savana	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2020	GMC	Savana	Body Control Module	√	√	√	√	√	0263 0261
2020	GMC	Savana	Theft Deterrent Module	√	√	√	√		
2020	GMC	Savana	Instrument Cluster	√	√	√	√	√	
2020	GMC	Savana	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	GMC	Savana	Frontview Camera - Windshield	√	√	√	√		0196
2020	GMC	Savana	Side Object Sensor Module - Left	√	√	√		√	
2020	GMC	Savana	Side Object Sensor Module - Right	√	√	√		√	
2020	GMC	Savana	Parking Assist Control Module	√	√	√	√	√	0247
2020	GMC	Savana	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2020	GMC	Savana	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2020	GMC	Savana	Radio	√	√	√	√	√	
2020	GMC	Savana	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2020	GMC	Savana	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2020	GMC	Savana	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111

2020	GMC	Sierra	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 076C 0131 0067 07A9 076D 0058 079A 0045 0044 0088 0097 0219 0221 0792 07AA 0073 0072 0070 0071 0117 0118 0119 077E 0178 0180 0182 0184 0186 0188 0190 0192 0246 0214 075F
2020	GMC	Sierra	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2020	GMC	Sierra	Brake System Control Module	√	√	√	√	√	0229 0225 0090 0758 0767 0768 078E 078F
2020	GMC	Sierra	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0771 0277 078F 0790
2020	GMC	Sierra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	GMC	Sierra	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	GMC	Sierra	Instrument Cluster	√	√	√	√	√	0247
2020	GMC	Sierra	HVAC Control Module	√	√	√	√	√	0007 0129
2020	GMC	Sierra	HVAC Controls	√	√	√	√	√	
2020	GMC	Sierra	Trailer Lighting Control Module	√	√	√	√	√	
2020	GMC	Sierra	Parking Assist Control Module	√	√	√	√	√	0247
2020	GMC	Sierra	Steering Column Lock Control Module	√	√	√	√		
2020	GMC	Sierra	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2020	GMC	Sierra	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A 0084
2020	GMC	Sierra	Keyless Entry Control Module	√	√	√	√	√	
2020	GMC	Sierra	Passenger Presence Module	√	√	√	√	√	0057
2020	GMC	Sierra	Transfer Case Control Module	√	√	√	√	√	0037 0776 07A6 0099
2020	GMC	Sierra	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2020	GMC	Sierra	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 07AB 0009 07AC
2020	GMC	Sierra	Power Steering Control Module	√	√	√	√		0089 0084 0273 0082
2020	GMC	Sierra	Suspension Control Module	√	√	√	√	√	

2020	GMC	Sierra	Serial Data Gateway Module - Processor 1	√	√	√			
2020	GMC	Sierra	Serial Data Gateway Module - Processor 2	√	√	√			
2020	GMC	Sierra	Video Processing Control Module	√	√	√	√	√	
2020	GMC	Sierra	Rear Gate Module	√	√	√	√		
2020	GMC	Sierra	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	GMC	Sierra	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	GMC	Sierra	Amplifier	√	√	√	√		
2020	GMC	Sierra	Radio	√	√	√	√	√	0150 0226 0269 0267
2020	GMC	Sierra	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	GMC	Sierra	Side Object Sensor Module - Left	√	√	√		√	
2020	GMC	Sierra	Side Object Sensor Module - Right	√	√	√		√	
2020	GMC	Sierra	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2020	GMC	Sierra	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2020	GMC	Sierra	Assist Step Control Module	√	√	√	√	√	
2020	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0076 0147 0236 0222 076D 079A 0044 0045 0171 0219 0792 0109 0074 0075 0072 0073 0070 0071 0119 0117 077E
2020	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0017 0036
2020	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0229 0111
2020	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	GMC	Terrain	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233
2020	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0150 0247
2020	GMC	Terrain	HVAC Control Module	√	√	√	√	√	0007 0129
2020	GMC	Terrain	HVAC Controls	√	√	√	√	√	
2020	GMC	Terrain	Serial Data Gateway Module	√	√	√			
2020	GMC	Terrain	Video Processing Control Module	√	√	√	√	√	
2020	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	GMC	Terrain	Keyless Entry Control Module	√	√	√	√	√	
2020	GMC	Terrain	Passenger Presence Module	√	√	√	√	√	0057
2020	GMC	Terrain	Frontview Camera - Windshield	√	√	√	√		0196 0084

2020	GMC	Terrain	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	GMC	Terrain	Headlamp Control Module	√	√	√	√	√	0195
2020	GMC	Terrain	Headlamp High Beam Control Module	√	√	√	√	√	0247
2020	GMC	Terrain	Amplifier	√	√	√	√		
2020	GMC	Terrain	Radio Controls	√	√	√	√		0241
2020	GMC	Terrain	Radio	√	√	√	√	√	0150 0226 0269 0267
2020	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0080 0089
2020	GMC	Terrain	Side Object Sensor Module - Left	√	√	√		√	
2020	GMC	Terrain	Rear Drive Control Module	√	√	√	√	√	0003
2020	GMC	Terrain	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2020	GMC	Yukon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2020	GMC	Yukon	Transmission Control Module	√	√	√	√	√	0016 0017
2020	GMC	Yukon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2020	GMC	Yukon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	GMC	Yukon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	GMC	Yukon	Instrument Cluster	√	√	√	√	√	0247
2020	GMC	Yukon	HVAC Control Module	√	√	√	√	√	0007 0129
2020	GMC	Yukon	HVAC Controls	√	√	√	√	√	
2020	GMC	Yukon	Serial Data Gateway Module	√	√	√			
2020	GMC	Yukon	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	GMC	Yukon	Video Processing Control Module	√	√	√	√	√	
2020	GMC	Yukon	Power Steering Control Module	√	√	√	√	√	0150
2020	GMC	Yukon	Suspension Control Module	√	√	√	√	√	0245
2020	GMC	Yukon	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	GMC	Yukon	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	GMC	Yukon	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	GMC	Yukon	Keyless Entry Control Module	√	√	√	√	√	0759
2020	GMC	Yukon	Passenger Presence Module	√	√	√	√	√	0057
2020	GMC	Yukon	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2020	GMC	Yukon	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2020	GMC	Yukon	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	GMC	Yukon	Side Object Sensor Module - Left	√	√	√		√	
2020	GMC	Yukon	Side Object Sensor Module - Right	√	√	√		√	
2020	GMC	Yukon	Steering Column Lock Control Module	√	√	√	√		
2020	GMC	Yukon	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2020	GMC	Yukon	Active Safety Control Module	√	√	√	√	√	

2020	GMC	Yukon	Frontview Camera - Windshield	√	√	√	√		0196 075A
2020	GMC	Yukon	Distance Sensing Cruise Control Module	√	√	√	√		0047
2020	GMC	Yukon	Parking Brake Control Module	√	√	√	√	√	0229
2020	GMC	Yukon	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	GMC	Yukon	Seat Memory Control Module - Passenger	√	√	√	√	√	
2020	GMC	Yukon	Assist Step Control Module	√	√	√	√	√	
2020	GMC	Yukon	Amplifier	√	√	√	√		
2020	GMC	Yukon	Human Machine Interface Control Module	√	√	√	√	√	0150
2020	GMC	Yukon	Media Disc Player	√	√	√	√	√	
2020	GMC	Yukon	Radio	√	√	√	√	√	0226 0150
2020	GMC	Yukon	Radio Controls	√	√	√	√		0241
2020	GMC	Yukon	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2020	GMC	Yukon	Transfer Case Control Module	√	√	√	√	√	0037
2020	GMC	Yukon XL	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2020	GMC	Yukon XL	Transmission Control Module	√	√	√	√	√	0016 0017
2020	GMC	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2020	GMC	Yukon XL	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	GMC	Yukon XL	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	GMC	Yukon XL	Instrument Cluster	√	√	√	√	√	0247
2020	GMC	Yukon XL	HVAC Control Module	√	√	√	√	√	0007 0129
2020	GMC	Yukon XL	HVAC Controls	√	√	√	√	√	
2020	GMC	Yukon XL	Serial Data Gateway Module	√	√	√			
2020	GMC	Yukon XL	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	GMC	Yukon XL	Video Processing Control Module	√	√	√	√	√	
2020	GMC	Yukon XL	Power Steering Control Module	√	√	√	√	√	0150
2020	GMC	Yukon XL	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	GMC	Yukon XL	Suspension Control Module	√	√	√	√	√	0245
2020	GMC	Yukon XL	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	GMC	Yukon XL	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	GMC	Yukon XL	Passenger Presence Module	√	√	√	√		
2020	GMC	Yukon XL	Keyless Entry Control Module	√	√	√	√	√	0759
2020	GMC	Yukon XL	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2020	GMC	Yukon XL	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2020	GMC	Yukon XL	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	GMC	Yukon XL	Side Object Sensor Module - Left	√	√	√		√	
2020	GMC	Yukon XL	Side Object Sensor Module - Right	√	√	√		√	



2020	GMC	Yukon XL	Steering Column Lock Control Module	√	√	√	√		
2020	GMC	Yukon XL	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2020	GMC	Yukon XL	Active Safety Control Module	√	√	√	√	√	
2020	GMC	Yukon XL	Distance Sensing Cruise Control Module	√	√	√	√		0047
2020	GMC	Yukon XL	Frontview Camera - Windshield	√	√	√	√		0196 075A
2020	GMC	Yukon XL	Parking Brake Control Module	√	√	√	√	√	0229
2020	GMC	Yukon XL	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	GMC	Yukon XL	Seat Memory Control Module - Passenger	√	√	√	√	√	
2020	GMC	Yukon XL	Assist Step Control Module	√	√	√	√	√	
2020	GMC	Yukon XL	Amplifier	√	√	√	√		
2020	GMC	Yukon XL	Human Machine Interface Control Module	√	√	√	√	√	0150
2020	GMC	Yukon XL	Media Disc Player	√	√	√	√	√	
2020	GMC	Yukon XL	Radio	√	√	√	√	√	0226 0150
2020	GMC	Yukon XL	Radio Controls	√	√	√	√		0241
2020	GMC	Yukon XL	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2020	GMC	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0037
2019	Buick	Cascada	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0111 0228 0128
2019	Buick	Cascada	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Buick	Cascada	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2019	Buick	Cascada	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Buick	Cascada	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2019	Buick	Cascada	Instrument Cluster	√	√	√	√	√	0247
2019	Buick	Cascada	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Buick	Cascada	Headlamp Control Module	√	√	√	√	√	0195
2019	Buick	Cascada	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Buick	Cascada	Chassis Control Module	√	√	√	√	√	0217
2019	Buick	Cascada	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Buick	Cascada	Front Seat Heating Control Module	√	√	√	√	√	
2019	Buick	Cascada	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2019	Buick	Cascada	Parking Brake Control Module	√	√	√	√	√	0229
2019	Buick	Cascada	Power Steering Control Module	√	√	√	√		0089 0081 0080
2019	Buick	Cascada	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Buick	Cascada	Radio	√	√	√	√	√	
2019	Buick	Cascada	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2019	Buick	Cascada	Folding Top Control Module	√	√	√	√	√	0247 0004 0005
2019	Buick	Cascada	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Buick	Cascada	Headlamp High Beam Control Module	√	√	√	√	√	0247
2019	Buick	Cascada	Passenger Presence Module	√	√	√	√	√	0057

2019	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0156 0209 0006 0115 0756 0086 0085 0154 0217 0258 0236
2019	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0017
2019	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2019	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Buick	Enclave	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Buick	Enclave	Instrument Cluster	√	√	√	√	√	0247
2019	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Buick	Enclave	HVAC Controls	√	√	√	√	√	
2019	Buick	Enclave	Chassis Control Module	√	√	√	√	√	0014 0078
2019	Buick	Enclave	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Buick	Enclave	Power Steering Control Module	√	√	√	√		0089 0084
2019	Buick	Enclave	Suspension Control Module	√	√	√	√	√	
2019	Buick	Enclave	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Buick	Enclave	Passenger Presence Module	√	√	√	√	√	0057
2019	Buick	Enclave	Keyless Entry Control Module	√	√	√	√	√	0759
2019	Buick	Enclave	Left Side Object Detection Control Module	√	√	√		√	
2019	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Buick	Enclave	Frontview Camera - Windshield	√	√	√	√		0196
2019	Buick	Enclave	Active Safety Control Module	√	√	√	√		
2019	Buick	Enclave	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Buick	Enclave	Left Front Short Range Radar Sensor Module	√	√	√			
2019	Buick	Enclave	Right Front Short Range Radar Sensor Module	√	√	√			
2019	Buick	Enclave	Rear Short Range Radar Sensor Module	√	√	√			
2019	Buick	Enclave	Amplifier	√	√	√	√		
2019	Buick	Enclave	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Buick	Enclave	Radio Controls	√	√	√	√		0241
2019	Buick	Enclave	Radio	√	√	√	√	√	0226 0150
2019	Buick	Enclave	Video Processing Control Module	√	√	√	√	√	
2019	Buick	Enclave	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	Buick	Enclave	Serial Data Gateway Module - Processor 1	√	√	√			
2019	Buick	Enclave	Serial Data Gateway Module - Processor 2	√	√	√			

2019	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0066 026D
2019	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2019	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0158
2019	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2019	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Buick	Encore	Serial Data Gateway Module	√	√	√			
2019	Buick	Encore	Headlamp Control Module	√	√	√	√	√	0195
2019	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Buick	Encore	Steering Column Lock Control Module	√	√	√	√		
2019	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217
2019	Buick	Encore	Trailer Lighting Control Module	√	√	√	√	√	0247
2019	Buick	Encore	Power Steering Control Module	√	√	√	√		0207
2019	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Buick	Encore	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Buick	Encore	Keyless Entry Control Module	√	√	√	√	√	
2019	Buick	Encore	Passenger Presence Module	√	√	√	√		0057
2019	Buick	Encore	Left Side Object Detection Control Module	√	√	√		√	
2019	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Buick	Encore	Amplifier	√	√	√	√		
2019	Buick	Encore	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Buick	Encore	Radio	√	√	√	√	√	0226 0150
2019	Buick	Encore	Radio Controls	√	√	√	√		0241
2019	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2019	Buick	Encore	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2019	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2019	Buick	Envision	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0138 0038 0213
2019	Buick	Envision	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Buick	Envision	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2019	Buick	Envision	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2019	Buick	Envision	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Buick	Envision	Instrument Cluster	√	√	√	√	√	0247
2019	Buick	Envision	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Buick	Envision	HVAC Controls	√	√	√	√	√	
2019	Buick	Envision	Serial Data Gateway Module	√	√	√			
2019	Buick	Envision	Left Side Object Detection Control Module	√	√	√		√	
2019	Buick	Envision	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Buick	Envision	Right Side Object Detection Control Module	√	√	√		√	
2019	Buick	Envision	Headlamp Control Module	√	√	√	√	√	0195
2019	Buick	Envision	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Buick	Envision	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Buick	Envision	Accessory DC/AC Power Inverter Module	√	√	√	√	√	
2019	Buick	Envision	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Buick	Envision	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Buick	Envision	Active Safety Control Module	√	√	√	√	√	
2019	Buick	Envision	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Buick	Envision	Video Processing Control Module	√	√	√	√	√	
2019	Buick	Envision	Passenger Presence Module	√	√	√	√	√	0057
2019	Buick	Envision	Keyless Entry Control Module	√	√	√	√	√	
2019	Buick	Envision	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2019	Buick	Envision	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	Buick	Envision	Steering Column Lock Control Module	√	√	√	√		
2019	Buick	Envision	Amplifier	√	√	√	√		
2019	Buick	Envision	Radio	√	√	√	√	√	0226 0150
2019	Buick	Envision	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Buick	Envision	Radio Controls	√	√	√	√		0241
2019	Buick	Envision	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Buick	Envision	Power Steering Control Module	√	√	√	√		0081 0080 0089
2019	Buick	Envision	Suspension Control Module	√	√	√	√	√	
2019	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0006 0756 0005 0006
2019	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2019	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2019	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0247
2019	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Buick	LaCrosse	HVAC Controls	√	√	√	√	√	
2019	Buick	LaCrosse	Serial Data Gateway Module	√	√	√			
2019	Buick	LaCrosse	Chassis Control Module	√	√	√	√	√	0014 0078
2019	Buick	LaCrosse	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2019	Buick	LaCrosse	Hybrid/EV Powertrain Control Module 2	√	√	√	√	√	0202 0218
2019	Buick	LaCrosse	Hybrid/EV Powertrain Control Module 1	√	√	√	√	√	0436 0263
2019	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2019	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	Buick	LaCrosse	Brake Booster Control Module	√	√	√	√		
2019	Buick	LaCrosse	Active Safety Control Module	√	√	√	√	√	
2019	Buick	LaCrosse	Frontview Camera - Windshield	√	√	√	√		0196
2019	Buick	LaCrosse	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2019	Buick	LaCrosse	Passenger Presence Module	√	√	√	√	√	0057
2019	Buick	LaCrosse	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Buick	LaCrosse	Amplifier	√	√	√	√		
2019	Buick	LaCrosse	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Buick	LaCrosse	Radio Controls	√	√	√	√		0241
2019	Buick	LaCrosse	Radio	√	√	√	√	√	0226 0150
2019	Buick	LaCrosse	Power Steering Control Module	√	√	√	√		0081 0080 0089
2019	Buick	LaCrosse	Suspension Control Module	√	√	√	√	√	
2019	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√		√	
2019	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Buick	LaCrosse	Right Side Object Detection Control Module	√	√	√		√	
2019	Buick	Regal	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0226 0130 0755 0007
2019	Buick	Regal	Transmission Control Module	√	√	√	√	√	0020 0084 0017
2019	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2019	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2019	Buick	Regal	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Buick	Regal	Instrument Cluster	√	√	√	√	√	0247
2019	Buick	Regal	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Buick	Regal	HVAC Controls	√	√	√	√	√	
2019	Buick	Regal	Serial Data Gateway Module	√	√	√			
2019	Buick	Regal	Headlamp Control Module	√	√	√	√	√	0195
2019	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	Buick	Regal	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Buick	Regal	Left Side Object Detection Control Module	√	√	√		√	
2019	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	0759
2019	Buick	Regal	Passenger Presence Module	√	√	√	√	√	0057
2019	Buick	Regal	Amplifier	√	√	√	√		
2019	Buick	Regal	Radio Controls	√	√	√	√		0241
2019	Buick	Regal	Radio	√	√	√	√	√	0226 0267 0269 0150
2019	Buick	Regal	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2019	Buick	Regal	Active Safety Control Module	√	√	√	√		
2019	Buick	Regal	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Buick	Regal	Frontview Camera - Windshield	√	√	√	√		0196
2019	Buick	Regal	Power Steering Control Module	√	√	√	√		0081 0080 0089
2019	Buick	Regal	Suspension Control Module	√	√	√	√	√	
2019	Buick	Regal	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Buick	Regal	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	Cadillac	ATS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0020 0756 0085
2019	Cadillac	ATS	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2019	Cadillac	ATS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2019	Cadillac	ATS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2019	Cadillac	ATS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Cadillac	ATS	Instrument Cluster	√	√	√	√	√	0247
2019	Cadillac	ATS	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Cadillac	ATS	Radio/HVAC Controls	√	√	√	√	√	
2019	Cadillac	ATS	Headlamp Control Module	√	√	√	√	√	0195
2019	Cadillac	ATS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048
2019	Cadillac	ATS	Rear Differential Clutch Control Module	√	√	√	√	√	
2019	Cadillac	ATS	Steering Column Lock Control Module	√	√	√	√		
2019	Cadillac	ATS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2019	Cadillac	ATS	Transfer Case Control Module	√	√	√	√	√	0099 0100 07B0
2019	Cadillac	ATS	Pedestrian Impact Detection Module	√	√	√	√		0170
2019	Cadillac	ATS	Left Side Object Detection Control Module	√	√	√		√	
2019	Cadillac	ATS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Cadillac	ATS	Right Side Object Detection Control Module	√	√	√		√	
2019	Cadillac	ATS	Keyless Entry Control Module	√	√	√	√	√	
2019	Cadillac	ATS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2019	Cadillac	ATS	Parking Brake Control Module	√	√	√	√	√	0229
2019	Cadillac	ATS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2019	Cadillac	ATS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Cadillac	ATS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2019	Cadillac	ATS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2019	Cadillac	ATS	Amplifier	√	√	√	√		
2019	Cadillac	ATS	Navigation Control Module	√	√	√	√	√	
2019	Cadillac	ATS	Radio	√	√	√	√	√	0226 0267 0269
2019	Cadillac	ATS	Active Safety Control Module	√	√	√	√	√	
2019	Cadillac	ATS	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Cadillac	ATS	Left Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	ATS	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Cadillac	ATS	Right Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	ATS	Rear Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	ATS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	Cadillac	ATS	Passenger Presence Module	√	√	√	√		0057
2019	Cadillac	CT6	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 0156 0132 0067 0238 0756 0154 0236 076C 079A 074E

2019	Cadillac	CT6	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0795 0023 0025 0027 0029
2019	Cadillac	CT6	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2019	Cadillac	CT6	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2019	Cadillac	CT6	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Cadillac	CT6	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Cadillac	CT6	Instrument Cluster	√	√	√	√	√	0247
2019	Cadillac	CT6	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Cadillac	CT6	HVAC Controls	√	√	√	√	√	
2019	Cadillac	CT6	Steering Column Lock Control Module	√	√	√	√		
2019	Cadillac	CT6	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2019	Cadillac	CT6	Transfer Case Control Module	√	√	√	√	√	0037 0099
2019	Cadillac	CT6	Night Vision Camera Control Module	√	√	√	√		0492
2019	Cadillac	CT6	Left Side Object Detection Control Module	√	√	√		√	
2019	Cadillac	CT6	Parking Assist Control Module	√	√	√	√	√	0247
2019	Cadillac	CT6	Video Processing Control Module	√	√	√	√	√	
2019	Cadillac	CT6	Headlamp Control Module	√	√	√	√	√	0195
2019	Cadillac	CT6	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	Cadillac	CT6	Keyless Entry Control Module	√	√	√	√	√	0759
2019	Cadillac	CT6	Passenger Presence Module	√	√	√	√	√	0057
2019	Cadillac	CT6	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2019	Cadillac	CT6	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2019	Cadillac	CT6	Multi-Axis Acceleration Sensor 1	√	√	√			
2019	Cadillac	CT6	Multi-Axis Acceleration Sensor 2	√	√	√			
2019	Cadillac	CT6	Power Steering Control Module	√	√	√	√		0081 0080 0089
2019	Cadillac	CT6	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Cadillac	CT6	Suspension Control Module	√	√	√	√	√	0245
2019	Cadillac	CT6	Frontview Camera - Windshield	√	√	√	√		0196 075A
2019	Cadillac	CT6	Active Safety Control Module	√	√	√	√	√	
2019	Cadillac	CT6	Active Safety Control Module 1 - Processor A	√	√	√	√		0794 0268
2019	Cadillac	CT6	Active Safety Control Module 1 - Processor B	√	√	√	√		0111 0268
2019	Cadillac	CT6	Active Safety Control Module 1 - Processor C	√	√	√	√		0268
2019	Cadillac	CT6	Active Safety Control Module 2 - Processor A	√	√	√	√		0794 0268
2019	Cadillac	CT6	Active Safety Control Module 2 - Processor B	√	√	√	√		0111 0268
2019	Cadillac	CT6	Active Safety Control Module 2 - Processor C	√	√	√	√		0268
2019	Cadillac	CT6	Driver Monitoring System Control Module	√	√	√	√	√	



2019	Cadillac	CT6	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Cadillac	CT6	Left Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	CT6	Left Rear Radar Short Range Sensor Module	√	√	√			
2019	Cadillac	CT6	Right Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	CT6	Right Rear Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	CT6	Rear Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	CT6	Rear Middle Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	CT6	Amplifier	√	√	√	√		
2019	Cadillac	CT6	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2019	Cadillac	CT6	Radio Controls	√	√	√	√		0241
2019	Cadillac	CT6	Media Disc Player	√	√	√	√	√	
2019	Cadillac	CT6	Radio	√	√	√	√	√	0226 0267 0269
2019	Cadillac	CT6	Seat Memory Control Module - Left Rear	√	√	√	√	√	
2019	Cadillac	CT6	Seat Memory Control Module - Right Rear	√	√	√	√	√	
2019	Cadillac	CT6	Rear Wheel Steering Control Module	√	√	√	√		
2019	Cadillac	CT6	Headlamp High Beam Control Module	√	√	√	√	√	0247
2019	Cadillac	CT6	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Cadillac	CT6	Multifunction Energy Storage Capacitor Control	√	√	√	√	√	0151 0244
2019	Cadillac	CT6	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Cadillac	CT6	Infotainment Control Switch	√	√	√			
2019	Cadillac	CT6	Serial Data Gateway Module - Processor 1	√	√	√			
2019	Cadillac	CT6	Serial Data Gateway Module - Processor 2	√	√	√			
2019	Cadillac	CT6	Digital Map Control Module	√	√	√	√		
2019	Cadillac	CTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0756 0085 0030
2019	Cadillac	CTS	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017 0021
2019	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2019	Cadillac	CTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Cadillac	CTS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Cadillac	CTS	Instrument Cluster	√	√	√	√	√	0247
2019	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Cadillac	CTS	Radio/HVAC Controls	√	√	√	√	√	
2019	Cadillac	CTS	Serial Data Gateway Module	√	√	√			

2019	Cadillac	CTS	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2019	Cadillac	CTS	Steering Column Lock Control Module	√	√	√	√		
2019	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	0195
2019	Cadillac	CTS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048
2019	Cadillac	CTS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2019	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	0099 0100 07B0
2019	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√		0170
2019	Cadillac	CTS	Video Processing Control Module	√	√	√	√	√	
2019	Cadillac	CTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2019	Cadillac	CTS	Keyless Entry Control Module	√	√	√	√	√	
2019	Cadillac	CTS	Passenger Presence Module	√	√	√	√		0057
2019	Cadillac	CTS	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2019	Cadillac	CTS	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2019	Cadillac	CTS	Left Side Object Detection Control Module	√	√	√		√	
2019	Cadillac	CTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Cadillac	CTS	Right Side Object Detection Control Module	√	√	√		√	
2019	Cadillac	CTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2019	Cadillac	CTS	Parking Brake Control Module	√	√	√	√	√	0229
2019	Cadillac	CTS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2019	Cadillac	CTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Cadillac	CTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2019	Cadillac	CTS	Navigation Control Module	√	√	√	√	√	
2019	Cadillac	CTS	Amplifier	√	√	√	√		
2019	Cadillac	CTS	Radio	√	√	√	√	√	0226 0267 0269
2019	Cadillac	CTS	Active Safety External Communication Control	√	√	√	√		
2019	Cadillac	CTS	Active Safety Control Module	√	√	√	√	√	
2019	Cadillac	CTS	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Cadillac	CTS	Left Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	CTS	Right Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	CTS	Rear Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	CTS	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Cadillac	CTS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2019	Cadillac	Escalade	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2019	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2019	Cadillac	Escalade	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2019	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Cadillac	Escalade	Instrument Cluster	√	√	√	√	√	0247
2019	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Cadillac	Escalade	Radio/HVAC Controls	√	√	√	√	√	
2019	Cadillac	Escalade	Serial Data Gateway Module	√	√	√			
2019	Cadillac	Escalade	Steering Column Lock Control Module	√	√	√	√		
2019	Cadillac	Escalade	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Cadillac	Escalade	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Cadillac	Escalade	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2019	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	0037
2019	Cadillac	Escalade	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2019	Cadillac	Escalade	Power Steering Control Module	√	√	√	√	√	0150
2019	Cadillac	Escalade	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Cadillac	Escalade	Suspension Control Module	√	√	√	√	√	0245
2019	Cadillac	Escalade	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Cadillac	Escalade	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	Cadillac	Escalade	Trailer Lighting Control Module	√	√	√	√	√	0247
2019	Cadillac	Escalade	Passenger Presence Module	√	√	√	√	√	0057
2019	Cadillac	Escalade	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2019	Cadillac	Escalade	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2019	Cadillac	Escalade	Video Processing Control Module	√	√	√	√	√	
2019	Cadillac	Escalade	Keyless Entry Control Module	√	√	√	√	√	0759
2019	Cadillac	Escalade	Frontview Camera - Windshield	√	√	√	√		0196 075A
2019	Cadillac	Escalade	Active Safety Control Module	√	√	√	√	√	
2019	Cadillac	Escalade	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Cadillac	Escalade	Left Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	Escalade	Right Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	Escalade	Left Rear Radar Short Range Sensor Module	√	√	√			
2019	Cadillac	Escalade	Right Rear Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	Escalade	Left Side Object Detection Control Module	√	√	√		√	
2019	Cadillac	Escalade	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Cadillac	Escalade	Parking Brake Control Module	√	√	√	√	√	0229
2019	Cadillac	Escalade	Amplifier	√	√	√	√		
2019	Cadillac	Escalade	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Cadillac	Escalade	Assist Step Control Module	√	√	√	√	√	
2019	Cadillac	Escalade	Media Disc Player	√	√	√	√	√	
2019	Cadillac	Escalade	Radio	√	√	√	√	√	0226 0150
2019	Cadillac	Escalade	Right Side Object Detection Control Module	√	√	√		√	

2019	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2019	Cadillac	Escalade ESV	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2019	Cadillac	Escalade ESV	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2019	Cadillac	Escalade ESV	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0158
2019	Cadillac	Escalade ESV	Instrument Cluster	√	√	√	√	√	0247
2019	Cadillac	Escalade ESV	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Cadillac	Escalade ESV	Radio/HVAC Controls	√	√	√	√	√	
2019	Cadillac	Escalade ESV	Serial Data Gateway Module	√	√	√			
2019	Cadillac	Escalade ESV	Steering Column Lock Control Module	√	√	√	√		
2019	Cadillac	Escalade ESV	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Cadillac	Escalade ESV	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Cadillac	Escalade ESV	Transfer Case Control Module	√	√	√	√	√	0037
2019	Cadillac	Escalade ESV	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2019	Cadillac	Escalade ESV	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2019	Cadillac	Escalade ESV	Power Steering Control Module	√	√	√	√	√	0150
2019	Cadillac	Escalade ESV	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Cadillac	Escalade ESV	Suspension Control Module	√	√	√	√	√	0245
2019	Cadillac	Escalade ESV	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Cadillac	Escalade ESV	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	Cadillac	Escalade ESV	Trailer Lighting Control Module	√	√	√	√	√	0247
2019	Cadillac	Escalade ESV	Passenger Presence Module	√	√	√	√	√	0057
2019	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2019	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2019	Cadillac	Escalade ESV	Keyless Entry Control Module	√	√	√	√	√	0759
2019	Cadillac	Escalade ESV	Video Processing Control Module	√	√	√	√	√	
2019	Cadillac	Escalade ESV	Active Safety Control Module	√	√	√	√	√	
2019	Cadillac	Escalade ESV	Frontview Camera - Windshield	√	√	√	√		0196 075A
2019	Cadillac	Escalade ESV	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Cadillac	Escalade ESV	Left Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	Escalade ESV	Right Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	Escalade ESV	Left Rear Radar Short Range Sensor Module	√	√	√			
2019	Cadillac	Escalade ESV	Right Rear Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	Escalade ESV	Left Side Object Detection Control Module	√	√	√		√	

2019	Cadillac	Escalade ESV	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Cadillac	Escalade ESV	Parking Brake Control Module	√	√	√	√	√	0229
2019	Cadillac	Escalade ESV	Amplifier	√	√	√	√	√	
2019	Cadillac	Escalade ESV	Assist Step Control Module	√	√	√	√	√	
2019	Cadillac	Escalade ESV	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Cadillac	Escalade ESV	Media Disc Player	√	√	√	√	√	
2019	Cadillac	Escalade ESV	Radio	√	√	√	√	√	0226 0150
2019	Cadillac	Escalade ESV	Right Side Object Detection Control Module	√	√	√		√	
2019	Cadillac	XT4	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0128
2019	Cadillac	XT4	Transmission Control Module	√	√	√	√	√	0017
2019	Cadillac	XT4	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2019	Cadillac	XT4	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Cadillac	XT4	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Cadillac	XT4	Instrument Cluster	√	√	√	√	√	0247
2019	Cadillac	XT4	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Cadillac	XT4	HVAC Controls	√	√	√	√	√	
2019	Cadillac	XT4	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2019	Cadillac	XT4	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Cadillac	XT4	Left Side Object Detection Control Module	√	√	√		√	
2019	Cadillac	XT4	Parking Assist Control Module	√	√	√	√	√	0247
2019	Cadillac	XT4	Video Processing Control Module	√	√	√	√	√	
2019	Cadillac	XT4	Right Side Object Detection Control Module	√	√	√		√	
2019	Cadillac	XT4	Keyless Entry Control Module	√	√	√	√	√	
2019	Cadillac	XT4	Passenger Presence Module	√	√	√	√	√	0057
2019	Cadillac	XT4	Headlamp Control Module	√	√	√	√	√	0195
2019	Cadillac	XT4	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	Cadillac	XT4	Amplifier	√	√	√	√	√	
2019	Cadillac	XT4	Radio Controls	√	√	√	√	√	0241
2019	Cadillac	XT4	Radio	√	√	√	√	√	0226 0267 0269
2019	Cadillac	XT4	Media Disc Player	√	√	√	√	√	
2019	Cadillac	XT4	Active Safety Control Module	√	√	√	√	√	
2019	Cadillac	XT4	Frontview Camera - Windshield	√	√	√	√	√	0196
2019	Cadillac	XT4	Long Range Radar Sensor Module	√	√	√	√	√	0260
2019	Cadillac	XT4	Left Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	XT4	Right Front Short Range Radar Sensor Module	√	√	√			

2019	Cadillac	XT4	Rear Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	XT4	Power Steering Control Module	√	√	√	√		0081 0080 0089
2019	Cadillac	XT4	Suspension Control Module	√	√	√	√	√	
2019	Cadillac	XT4	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Cadillac	XT4	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	Cadillac	XT4	Steering Column Lock Control Module	√	√	√	√		
2019	Cadillac	XT4	Infotainment Control Switch	√	√	√			
2019	Cadillac	XT4	Serial Data Gateway Module - Processor 1	√	√	√			
2019	Cadillac	XT4	Serial Data Gateway Module - Processor 2	√	√	√			
2019	Cadillac	XT5	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0147 0115 0086 0154 0217 0258 0263 0236 0212 0076 0214 0006 0114 0138 0256 0005
2019	Cadillac	XT5	Transmission Control Module	√	√	√	√	√	0017 0020 0084
2019	Cadillac	XT5	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2019	Cadillac	XT5	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Cadillac	XT5	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Cadillac	XT5	Instrument Cluster	√	√	√	√	√	0247
2019	Cadillac	XT5	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Cadillac	XT5	HVAC Controls	√	√	√	√	√	
2019	Cadillac	XT5	Serial Data Gateway Module	√	√	√			
2019	Cadillac	XT5	Chassis Control Module	√	√	√	√	√	0014 0078
2019	Cadillac	XT5	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2019	Cadillac	XT5	Steering Column Lock Control Module	√	√	√	√		
2019	Cadillac	XT5	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	Cadillac	XT5	Headlamp Control Module	√	√	√	√	√	0195
2019	Cadillac	XT5	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Cadillac	XT5	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Cadillac	XT5	Trailer Lighting Control Module	√	√	√	√	√	0247
2019	Cadillac	XT5	Video Processing Control Module	√	√	√	√	√	
2019	Cadillac	XT5	Frontview Camera - Windshield	√	√	√	√		0196
2019	Cadillac	XT5	Active Safety Control Module	√	√	√	√	√	
2019	Cadillac	XT5	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Cadillac	XT5	Left Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	XT5	Right Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	XT5	Rear Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	XT5	Keyless Entry Control Module	√	√	√	√	√	
2019	Cadillac	XT5	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266

2019	Cadillac	XT5	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2019	Cadillac	XT5	Passenger Presence Module	√	√	√	√	√	0057
2019	Cadillac	XT5	Amplifier	√	√	√	√		
2019	Cadillac	XT5	Radio	√	√	√	√	√	0226 0150
2019	Cadillac	XT5	Radio Controls	√	√	√	√		0241
2019	Cadillac	XT5	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Cadillac	XT5	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Cadillac	XT5	Left Side Object Detection Control Module	√	√	√		√	
2019	Cadillac	XT5	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Cadillac	XT5	Power Steering Control Module	√	√	√	√		0089 0084
2019	Cadillac	XT5	Suspension Control Module	√	√	√	√	√	
2019	Cadillac	XTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0006
2019	Cadillac	XTS	Transmission Control Module	√	√	√	√	√	0016
2019	Cadillac	XTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2019	Cadillac	XTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Cadillac	XTS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Cadillac	XTS	Instrument Cluster	√	√	√	√	√	0247
2019	Cadillac	XTS	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Cadillac	XTS	Radio/HVAC Controls	√	√	√	√	√	
2019	Cadillac	XTS	Serial Data Gateway Module	√	√	√			
2019	Cadillac	XTS	Headlamp Control Module	√	√	√	√	√	0195
2019	Cadillac	XTS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048
2019	Cadillac	XTS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2019	Cadillac	XTS	Rear Differential Clutch Control Module	√	√	√	√	√	
2019	Cadillac	XTS	Keyless Entry Control Module	√	√	√	√	√	
2019	Cadillac	XTS	Passenger Presence Module	√	√	√	√		0057
2019	Cadillac	XTS	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Cadillac	XTS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	Cadillac	XTS	Radio	√	√	√	√	√	0226 0267 0269
2019	Cadillac	XTS	Amplifier	√	√	√	√		
2019	Cadillac	XTS	Rear Audio Control Module	√	√	√	√	√	
2019	Cadillac	XTS	Video Processing Control Module	√	√	√	√	√	
2019	Cadillac	XTS	Active Safety Control Module	√	√	√	√	√	
2019	Cadillac	XTS	Frontview Camera - Windshield	√	√	√	√	√	0196 0205 075A
2019	Cadillac	XTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2019	Cadillac	XTS	Parking Brake Control Module	√	√	√	√	√	0229
2019	Cadillac	XTS	Left Front Short Range Radar Sensor Module	√	√	√			

2019	Cadillac	XTS	Right Front Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	XTS	Right Rear Short Range Radar Sensor Module	√	√	√			
2019	Cadillac	XTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2019	Cadillac	XTS	Left Rear Radar Short Range Sensor Module	√	√	√			
2019	Cadillac	XTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Cadillac	XTS	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Cadillac	XTS	Power Steering Control Module	√	√	√	√	√	0089
2019	Cadillac	XTS	Left Side Object Detection Control Module	√	√	√		√	
2019	Cadillac	XTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Chevrolet	Aveo	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139 0020 0066 076D 0213 0006 0144 0258 0147 0068 0318 0148
2019	Chevrolet	Aveo	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2019	Chevrolet	Aveo	Electronic Brake Control Module	√	√	√	√	√	0090 0111
2019	Chevrolet	Aveo	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0261
2019	Chevrolet	Aveo	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0082 0158 0032 0158
2019	Chevrolet	Aveo	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Aveo	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Chevrolet	Aveo	Radio/HVAC Controls	√	√	√	√	√	0150
2019	Chevrolet	Aveo	Serial Data Gateway Module	√	√	√			
2019	Chevrolet	Aveo	Keyless Entry Control Module	√	√	√	√	√	
2019	Chevrolet	Aveo	Power Steering Control Module	√	√	√	√		0207 0081 0089
2019	Chevrolet	Aveo	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Chevrolet	Aveo	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Chevrolet	Aveo	Front Seat Heating Control Module	√	√	√	√	√	
2019	Chevrolet	Aveo	Radio	√	√	√	√	√	0226
2019	Chevrolet	Aveo	Chassis Control Module	√	√	√	√	√	0217
2019	Chevrolet	Aveo	Telematics Communication Interface Control Module	√	√	√		√	
2019	Chevrolet	Beat	Engine Control Module	√	√	√	√	√	0133 0210 0098 0096 0094 0216 0143 0265 0393 0173 0149 0069 0087 0209 0156 0147 0017
2019	Chevrolet	Beat	Electronic Brake Control Module	√	√	√	√	√	0090
2019	Chevrolet	Beat	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2019	Chevrolet	Beat	Instrument Cluster	√	√	√	√	√	
2019	Chevrolet	Beat	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Chevrolet	Beat	Radio	√	√	√	√	√	0226
2019	Chevrolet	Beat	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A



2019	Chevrolet	Beat	Power Steering Control Module	√	√	√	√		0089
2019	Chevrolet	Beat	Keyless Entry Control Module				√		
2019	Chevrolet	Beat	Fuel Injector Control Module	√	√	√	√	√	
2019	Chevrolet	Blazer	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0006 0756 0085 0036
2019	Chevrolet	Blazer	Transmission Control Module	√	√	√	√	√	0017
2019	Chevrolet	Blazer	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2019	Chevrolet	Blazer	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Chevrolet	Blazer	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Chevrolet	Blazer	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Blazer	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Chevrolet	Blazer	HVAC Controls	√	√	√	√	√	
2019	Chevrolet	Blazer	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Chevrolet	Blazer	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2019	Chevrolet	Blazer	Video Processing Control Module	√	√	√	√	√	
2019	Chevrolet	Blazer	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Chevrolet	Blazer	Left Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Blazer	Parking Assist Control Module	√	√	√	√	√	0247
2019	Chevrolet	Blazer	Passenger Presence Module	√	√	√	√	√	0057
2019	Chevrolet	Blazer	Keyless Entry Control Module	√	√	√	√	√	0759
2019	Chevrolet	Blazer	Amplifier	√	√	√	√		
2019	Chevrolet	Blazer	Radio Controls	√	√	√	√		0241
2019	Chevrolet	Blazer	Radio	√	√	√	√	√	0150 0226 0269 0267
2019	Chevrolet	Blazer	Active Safety Control Module	√	√	√	√		
2019	Chevrolet	Blazer	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Chevrolet	Blazer	Left Front Short Range Radar Sensor Module	√	√	√			
2019	Chevrolet	Blazer	Right Front Short Range Radar Sensor Module	√	√	√			
2019	Chevrolet	Blazer	Rear Short Range Radar Sensor Module	√	√	√			
2019	Chevrolet	Blazer	Frontview Camera - Windshield	√	√	√	√		0196
2019	Chevrolet	Blazer	Power Steering Control Module	√	√	√	√		0089 0084
2019	Chevrolet	Blazer	Suspension Control Module	√	√	√	√	√	
2019	Chevrolet	Blazer	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	Chevrolet	Blazer	Serial Data Gateway Module - Processor 1	√	√	√			
2019	Chevrolet	Blazer	Serial Data Gateway Module - Processor 2	√	√	√			
2019	Chevrolet	Blazer	Right Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Bolt	Engine Control Module	√	√	√	√	√	0258

2019	Chevrolet	Bolt	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229
2019	Chevrolet	Bolt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Chevrolet	Bolt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Chevrolet	Bolt	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Bolt	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Chevrolet	Bolt	Battery Energy Control Module	√			√		
2019	Chevrolet	Bolt	Electric A/C Compressor Control Module	√					
2019	Chevrolet	Bolt	Power Line Communication Module	√			√		
2019	Chevrolet	Bolt	Hybrid/EV Powertrain Control Module 2	√	√	√	√	√	0125 0202 0262 0079 0122 0123 0127
2019	Chevrolet	Bolt	Hybrid/EV Powertrain Control Module 1	√	√	√	√	√	0202 0018
2019	Chevrolet	Bolt	Trailer Lighting Control Module	√	√	√	√	√	0247
2019	Chevrolet	Bolt	Video Processing Control Module	√	√	√	√	√	
2019	Chevrolet	Bolt	Chassis Control Module	√	√	√	√	√	0014 0078
2019	Chevrolet	Bolt	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2019	Chevrolet	Bolt	Keyless Entry Control Module	√	√	√	√	√	
2019	Chevrolet	Bolt	Passenger Presence Module	√	√	√	√	√	0057
2019	Chevrolet	Bolt	Left Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Bolt	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Chevrolet	Bolt	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Chevrolet	Bolt	Radio	√	√	√	√	√	
2019	Chevrolet	Bolt	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2019	Chevrolet	Bolt	Frontview Camera - Windshield	√	√	√	√		0196
2019	Chevrolet	Bolt	Brake Booster Control Module	√	√	√	√		
2019	Chevrolet	Bolt	Power Steering Control Module	√	√	√	√		0089 0084
2019	Chevrolet	Bolt	Short Range Remote Control Transceiver	√	√	√	√		
2019	Chevrolet	Bolt	Headlamp High Beam Control Module	√	√	√	√	√	0247
2019	Chevrolet	Bolt	Serial Data Gateway Module - Processor 1	√	√	√			
2019	Chevrolet	Bolt	Serial Data Gateway Module - Processor 2	√	√	√			
2019	Chevrolet	Camaro	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0756 0085 0020
2019	Chevrolet	Camaro	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2019	Chevrolet	Camaro	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229

2019	Chevrolet	Camaro	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Chevrolet	Camaro	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Chevrolet	Camaro	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Camaro	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Chevrolet	Camaro	HVAC Controls	√	√	√	√	√	
2019	Chevrolet	Camaro	Serial Data Gateway Module	√	√	√			
2019	Chevrolet	Camaro	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2019	Chevrolet	Camaro	Steering Column Lock Control Module	√	√	√	√		
2019	Chevrolet	Camaro	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2019	Chevrolet	Camaro	Frontview Camera - Windshield	√	√	√	√		0196 0084
2019	Chevrolet	Camaro	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2019	Chevrolet	Camaro	Folding Top Control Module	√	√	√	√	√	
2019	Chevrolet	Camaro	Left Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Camaro	Right Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Camaro	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2019	Chevrolet	Camaro	Keyless Entry Control Module	√	√	√	√	√	
2019	Chevrolet	Camaro	Passenger Presence Module	√	√	√	√	√	0057
2019	Chevrolet	Camaro	Amplifier	√	√	√	√		
2019	Chevrolet	Camaro	Radio Controls	√	√	√	√		0241
2019	Chevrolet	Camaro	Vehicle Performance Data Recorder	√	√	√	√		
2019	Chevrolet	Camaro	Radio	√	√	√	√	√	0150 0226 0269 0267
2019	Chevrolet	Camaro	Parking Brake Control Module	√	√	√	√	√	0229
2019	Chevrolet	Camaro	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2019	Chevrolet	Camaro	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Chevrolet	Camaro	Suspension Control Module	√	√	√	√	√	0245
2019	Chevrolet	Camaro	Parking Assist Control Module	√	√	√	√	√	0247
2019	Chevrolet	Camaro	Headlamp Control Module	√	√	√	√	√	0195
2019	Chevrolet	Cavalier	Engine Control Module	√	√	√	√	√	0156 0020 0140 0263
2019	Chevrolet	Cavalier	Transmission Control Module	√	√	√	√	√	0017
2019	Chevrolet	Cavalier	Electronic Brake Control Module	√	√	√	√	√	0090
2019	Chevrolet	Cavalier	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√		0111
2019	Chevrolet	Cavalier	Body Control Module	√	√	√	√	√	
2019	Chevrolet	Cavalier	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Cavalier	Serial Data Gateway Module	√	√	√	√		
2019	Chevrolet	Cavalier	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Chevrolet	Cavalier	Radio Controls	√	√	√	√	√	
2019	Chevrolet	Cavalier	Parking Assist Control Module	√	√	√	√		
2019	Chevrolet	Cavalier	Power Supply Transformer	√	√	√	√	√	

2019	Chevrolet	Cavalier	Radio	√	√	√	√	√	
2019	Chevrolet	Cavalier	Power Steering Control Module	√	√	√	√		0081 0080 0089
2019	Chevrolet	City Express	Engine Control Module	√	√	√	√	√	0217 0067 0140
2019	Chevrolet	City Express	Electronic Brake Control Module	√	√	√	√	√	0090 0111
2019	Chevrolet	City Express	Inflatable Restraint Sensing and Diagnostic Module		√	√			
2019	Chevrolet	City Express	Body Control Module	√	√	√	√	√	0041
2019	Chevrolet	City Express	Instrument Cluster		√	√	√		
2019	Chevrolet	City Express	Power Steering Control Module	√	√	√	√		
2019	Chevrolet	City Express	Tire Pressure Indicator Module	√	√	√	√	√	0160
2019	Chevrolet	City Express	Passenger Presence Module						0057
2019	Chevrolet	City Express	Underhood Fuse Block	√	√	√	√	√	
2019	Chevrolet	Cobalt	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139
2019	Chevrolet	Cobalt	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Chevrolet	Cobalt	Electronic Brake Control Module	√	√	√	√	√	0090
2019	Chevrolet	Cobalt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Chevrolet	Cobalt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Chevrolet	Cobalt	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Cobalt	Serial Data Gateway Module	√	√	√			
2019	Chevrolet	Cobalt	Power Steering Control Module	√	√	√	√		0207
2019	Chevrolet	Cobalt	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Chevrolet	Cobalt	Telematics Communication Interface Control Module	√	√	√	√	√	
2019	Chevrolet	Cobalt	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Chevrolet	Cobalt	Radio	√	√	√	√	√	0226
2019	Chevrolet	Cobalt	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Chevrolet	Cobalt	Front Seat Heating Control Module	√	√	√	√	√	
2019	Chevrolet	Colorado	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0210 0224 0130 0222 0066 0147 0060 0044 0045 0109 0068 0084 0070 0071 0074 0075 0043 0173 0179 0181 0183 0185 0232 0006 0756 0085 0236 076D 079A 0097 0171 0219 0792 0072 0073 0119 0117 077E

2019	Chevrolet	Colorado	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2019	Chevrolet	Colorado	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0112
2019	Chevrolet	Colorado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Chevrolet	Colorado	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Chevrolet	Colorado	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Colorado	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Chevrolet	Colorado	HVAC Controls	√	√	√	√	√	
2019	Chevrolet	Colorado	Serial Data Gateway Module	√	√	√			
2019	Chevrolet	Colorado	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2019	Chevrolet	Colorado	Frontview Camera - Windshield	√	√	√	√	√	0196
2019	Chevrolet	Colorado	Amplifier	√	√	√	√		
2019	Chevrolet	Colorado	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Chevrolet	Colorado	Radio	√	√	√	√	√	0226 0150 0267 0269
2019	Chevrolet	Colorado	Radio Controls	√	√	√	√		0241
2019	Chevrolet	Colorado	Power Steering Control Module	√	√	√	√		0093 0090
2019	Chevrolet	Colorado	Passenger Presence Module	√	√	√	√	√	0057
2019	Chevrolet	Colorado	Transfer Case Control Module	√	√	√	√	√	0037
2019	Chevrolet	Colorado	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2019	Chevrolet	Colorado	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Chevrolet	Colorado	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Chevrolet	Colorado	Left Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Colorado	Right Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Colorado	Trailer Lighting Control Module	√	√	√	√	√	0247
2019	Chevrolet	Corvette	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0214 0217 0258 0115 0215 0006 0131 0128
2019	Chevrolet	Corvette	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2019	Chevrolet	Corvette	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229
2019	Chevrolet	Corvette	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111

2019	Chevrolet	Corvette	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Chevrolet	Corvette	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Corvette	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Chevrolet	Corvette	Radio/HVAC Controls	√	√	√	√	√	
2019	Chevrolet	Corvette	Serial Data Gateway Module	√	√	√			
2019	Chevrolet	Corvette	Folding Top Control Module	√	√	√	√	√	
2019	Chevrolet	Corvette	Liftgate Control Module	√	√	√	√	√	
2019	Chevrolet	Corvette	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Chevrolet	Corvette	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	Chevrolet	Corvette	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Chevrolet	Corvette	Keyless Entry Control Module	√	√	√	√	√	
2019	Chevrolet	Corvette	Passenger Presence Module	√	√	√	√	√	0057
2019	Chevrolet	Corvette	Steering Column Lock Control Module	√	√	√	√		
2019	Chevrolet	Corvette	Parking Brake Control Module	√	√	√	√	√	0229
2019	Chevrolet	Corvette	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2019	Chevrolet	Corvette	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Chevrolet	Corvette	Suspension Control Module	√	√	√	√	√	0245
2019	Chevrolet	Corvette	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2019	Chevrolet	Corvette	Video Processing Control Module	√	√	√	√	√	
2019	Chevrolet	Corvette	Fuel Injector Control Module	√	√	√	√	√	0128
2019	Chevrolet	Corvette	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2019	Chevrolet	Corvette	Amplifier	√	√	√	√		
2019	Chevrolet	Corvette	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Chevrolet	Corvette	Radio	√	√	√	√	√	0226 0150
2019	Chevrolet	Corvette	Vehicle Performance Data Recorder	√	√	√	√		
2019	Chevrolet	Cruze	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0222 076D 0060 079A 0044 0045 0097 0171 0219 0792 0109 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0210 0224 0130 0066 0147 0068 0043 0173
2019	Chevrolet	Cruze	Transmission Control Module	√	√	√	√	√	0017 0036 0016 075C

2019	Chevrolet	Cruze	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2019	Chevrolet	Cruze	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Chevrolet	Cruze	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Chevrolet	Cruze	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Cruze	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Chevrolet	Cruze	HVAC Controls	√	√	√	√	√	
2019	Chevrolet	Cruze	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Chevrolet	Cruze	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Chevrolet	Cruze	Power Supply Transformer	√	√	√	√		
2019	Chevrolet	Cruze	Keyless Entry Control Module	√	√	√	√	√	
2019	Chevrolet	Cruze	Passenger Presence Module	√	√	√	√		0057
2019	Chevrolet	Cruze	Steering Column Lock Control Module	√	√	√	√		
2019	Chevrolet	Cruze	Left Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Cruze	Right Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Cruze	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Chevrolet	Cruze	Frontview Camera - Windshield	√	√	√	√	√	0196 0084 0205 075A
2019	Chevrolet	Cruze	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Chevrolet	Cruze	Amplifier	√	√	√	√		
2019	Chevrolet	Cruze	Navigation Control Module	√	√	√	√	√	
2019	Chevrolet	Cruze	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Chevrolet	Cruze	Radio Controls	√	√	√	√		0241
2019	Chevrolet	Cruze	Radio	√	√	√	√	√	0226 0150 0269 0267
2019	Chevrolet	Cruze	Power Steering Control Module	√	√	√	√		0081 0080 0089
2019	Chevrolet	Cruze	Short Range Remote Control Transceiver	√	√	√	√		
2019	Chevrolet	Cruze	Serial Data Gateway Module - Processor 1	√	√	√			
2019	Chevrolet	Cruze	Serial Data Gateway Module - Processor 2	√	√	√			
2019	Chevrolet	Damas	Engine Control Module	√	√	√	√	√	0069 0087
2019	Chevrolet	Damas	Tire Pressure Indicator Module	√	√	√	√		079D 0234
2019	Chevrolet	Damas	Fuel Injector Control Module	√	√	√	√	√	

2019	Chevrolet	Equinox	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0222 076D 0060 079A 0044 0045 0097 0171 0219 0792 0109 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0210 0224 0130 0066 0147 0068 0043 0173
2019	Chevrolet	Equinox	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Chevrolet	Equinox	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0229 0111
2019	Chevrolet	Equinox	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Chevrolet	Equinox	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Chevrolet	Equinox	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Equinox	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Chevrolet	Equinox	HVAC Controls	√	√	√	√	√	
2019	Chevrolet	Equinox	Serial Data Gateway Module	√	√	√			
2019	Chevrolet	Equinox	Steering Column Lock Control Module	√	√	√	√		
2019	Chevrolet	Equinox	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Chevrolet	Equinox	Left Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Equinox	Power Steering Control Module	√	√	√	√		0081 0080 0089
2019	Chevrolet	Equinox	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	Chevrolet	Equinox	Amplifier	√	√	√	√		
2019	Chevrolet	Equinox	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Chevrolet	Equinox	Radio Controls	√	√	√	√		0241
2019	Chevrolet	Equinox	Radio	√	√	√	√	√	0226 0150 0269 0267
2019	Chevrolet	Equinox	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2019	Chevrolet	Equinox	Headlamp Control Module	√	√	√	√	√	0195
2019	Chevrolet	Equinox	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2019	Chevrolet	Equinox	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Chevrolet	Equinox	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Chevrolet	Equinox	Frontview Camera - Windshield	√	√	√	√		0196 0084
2019	Chevrolet	Equinox	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Chevrolet	Equinox	Video Processing Control Module	√	√	√	√	√	
2019	Chevrolet	Equinox	Keyless Entry Control Module	√	√	√	√	√	0759



2019	Chevrolet	Equinox	Passenger Presence Module	√	√	√	√	√	0057
2019	Chevrolet	Equinox	Headlamp High Beam Control Module	√	√	√	√	√	0247
2019	Chevrolet	Essentia	Engine Control Module	√	√	√	√	√	0133 0210 0098 0096 0094 0216 0143 0265 0393 0173 0149 0069
2019	Chevrolet	Essentia	Electronic Brake Control Module	√	√	√	√	√	0090
2019	Chevrolet	Essentia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2019	Chevrolet	Essentia	Instrument Cluster	√	√	√	√	√	
2019	Chevrolet	Essentia	Radio	√	√	√	√	√	0226
2019	Chevrolet	Essentia	Telematics Communication Interface Control Module	√	√	√		√	
2019	Chevrolet	Essentia	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Chevrolet	Essentia	Power Steering Control Module	√	√	√	√		0089
2019	Chevrolet	Essentia	Fuel Injector Control Module	√	√	√	√	√	
2019	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0263 0209 0115 076D 0060 079A 0044 0045 0086 0097 0171 0219 0792 0217 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0156 0076 0020 0132 0067 0154 0212 0214
2019	Chevrolet	Express	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2019	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0225 0111 0277 0090
2019	Chevrolet	Express	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2019	Chevrolet	Express	Body Control Module	√	√	√	√	√	0263 0261
2019	Chevrolet	Express	Theft Deterrent Module	√	√	√	√		
2019	Chevrolet	Express	Instrument Cluster	√	√	√	√	√	
2019	Chevrolet	Express	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Chevrolet	Express	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2019	Chevrolet	Express	Left Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Express	Parking Assist Control Module	√	√	√	√	√	0247
2019	Chevrolet	Express	Right Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Express	Auxiliary Heater Control Module	√	√	√	√	√	
2019	Chevrolet	Express	Chime Alarm Control Module	√	√	√		√	
2019	Chevrolet	Express	Radio	√	√	√	√	√	
2019	Chevrolet	Express	Digital Radio Receiver Control Module	√	√	√	√	√	
2019	Chevrolet	Express	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2019	Chevrolet	Express	Frontview Camera - Windshield	√	√	√	√		0196
2019	Chevrolet	Express	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084

2019	Chevrolet	Express	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2019	Chevrolet	Impala	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2019	Chevrolet	Impala	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2019	Chevrolet	Impala	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2019	Chevrolet	Impala	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Chevrolet	Impala	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0000 0150
2019	Chevrolet	Impala	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Impala	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Chevrolet	Impala	HVAC Controls	√	√	√	√	√	
2019	Chevrolet	Impala	Serial Data Gateway Module	√	√	√			
2019	Chevrolet	Impala	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Chevrolet	Impala	Keyless Entry Control Module	√	√	√	√	√	
2019	Chevrolet	Impala	Passenger Presence Module	√	√	√	√		0057
2019	Chevrolet	Impala	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Chevrolet	Impala	Amplifier	√	√	√	√		
2019	Chevrolet	Impala	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Chevrolet	Impala	Radio Controls	√	√	√	√		0241
2019	Chevrolet	Impala	Radio	√	√	√	√	√	0226 0150
2019	Chevrolet	Impala	Navigation Control Module	√	√	√	√	√	
2019	Chevrolet	Impala	Rear Audio Control Module	√	√	√	√	√	
2019	Chevrolet	Impala	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Chevrolet	Impala	Distance Sensing Cruise Control Module	√	√	√	√		0047
2019	Chevrolet	Impala	Parking Brake Control Module	√	√	√	√	√	0229
2019	Chevrolet	Impala	Power Steering Control Module	√	√	√	√		0081 0080 0089
2019	Chevrolet	Impala	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Chevrolet	Impala	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Chevrolet	Impala	Left Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Impala	Right Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Impala	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2019	Chevrolet	Labo	Engine Control Module	√	√	√	√	√	0069 0087
2019	Chevrolet	Labo	Tire Pressure Indicator Module	√	√	√	√		079D 0234
2019	Chevrolet	Labo	Fuel Injector Control Module	√	√	√	√	√	
2019	Chevrolet	Lacetti	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2019	Chevrolet	Lacetti	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Chevrolet	Lacetti	Electronic Brake Control Module	√	√	√	√	√	
2019	Chevrolet	Lacetti	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2019	Chevrolet	Lacetti	Fuel Injector Control Module	√	√	√	√	√	
2019	Chevrolet	Lacetti	Variable Power Steering Control Module				√	√	

2019	Chevrolet	Malibu	Engine Control Module	√	√	√	√	√	0263 0209 075D 075E 075F 0760 0115 0756 0761 0086 0213 0757 0212 0217 0762 0006 0144 0258 0139 0763 0764 0765 0156 0020 0132 0067 0085 0154 0221 0214 0210 0224 0130 0222 0066 0147 0060 0044 0045 0109 0068 0084 0070 0071 0074 0075 0043 0173 0179 0181 0183 0185
2019	Chevrolet	Malibu	Transmission Control Module	√	√	√	√	√	0016 075C 0017 0036
2019	Chevrolet	Malibu	Brake System Control Module	√	√	√	√	√	0766 0758 0767 0768
2019	Chevrolet	Malibu	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2019	Chevrolet	Malibu	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Chevrolet	Malibu	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Chevrolet	Malibu	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Malibu	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Chevrolet	Malibu	HVAC Controls	√	√	√	√	√	
2019	Chevrolet	Malibu	Brake Booster Control Module	√	√	√	√	√	
2019	Chevrolet	Malibu	Headlamp Control Module	√	√	√	√	√	0195
2019	Chevrolet	Malibu	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2019	Chevrolet	Malibu	Electric A/C Compressor Control Module	√					
2019	Chevrolet	Malibu	Hybrid/EV Powertrain Control Module 2	√	√	√	√	√	0202 0218 0122
2019	Chevrolet	Malibu	Steering Column Lock Control Module	√	√	√	√	√	
2019	Chevrolet	Malibu	Hybrid/EV Powertrain Control Module 1	√	√	√	√	√	0018
2019	Chevrolet	Malibu	Drive Motor Control Module 1	√	√	√	√	√	
2019	Chevrolet	Malibu	Drive Motor Control Module 2	√	√	√	√	√	
2019	Chevrolet	Malibu	Keyless Entry Control Module	√	√	√	√	√	
2019	Chevrolet	Malibu	Passenger Presence Module	√	√	√	√	√	0057
2019	Chevrolet	Malibu	Left Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Malibu	Right Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Malibu	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2019	Chevrolet	Malibu	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Chevrolet	Malibu	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Chevrolet	Malibu	Amplifier	√	√	√	√	√	
2019	Chevrolet	Malibu	Radio Controls	√	√	√	√	√	0241

2019	Chevrolet	Malibu	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2019	Chevrolet	Malibu	Radio	√	√	√	√	√	0150 0226 0269 0267
2019	Chevrolet	Malibu	Active Safety Control Module	√	√	√	√		
2019	Chevrolet	Malibu	Frontview Camera - Windshield	√	√	√	√		0196
2019	Chevrolet	Malibu	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Chevrolet	Malibu	Serial Data Gateway Module - Processor 1	√	√	√			
2019	Chevrolet	Malibu	Serial Data Gateway Module - Processor 2	√	√	√			
2019	Chevrolet	Max	Engine Control Module	√	√	√	√	√	0069 0087 079C
2019	Chevrolet	Max	Electronic Brake Control Module	√	√	√	√	√	
2019	Chevrolet	Max	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2019	Chevrolet	Move	Engine Control Module	√	√	√	√	√	0069 0087 079C
2019	Chevrolet	Move	Electronic Brake Control Module	√	√	√	√	√	
2019	Chevrolet	Move	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2019	Chevrolet	Nexia	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2019	Chevrolet	Nexia	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Chevrolet	Nexia	Electronic Brake Control Module	√	√	√	√	√	
2019	Chevrolet	Nexia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2019	Chevrolet	Nexia	Instrument Cluster	√	√	√		√	
2019	Chevrolet	Nexia	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2019	Chevrolet	Nexia	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Chevrolet	Nexia	Tire Pressure Indicator Module	√	√	√	√		079D 0234
2019	Chevrolet	Onix	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0115
2019	Chevrolet	Onix	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Chevrolet	Onix	Electronic Brake Control Module	√	√	√	√	√	0090
2019	Chevrolet	Onix	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Chevrolet	Onix	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Chevrolet	Onix	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Onix	Serial Data Gateway Module	√	√	√			
2019	Chevrolet	Onix	Telematics Communication Interface Control Module	√	√	√		√	
2019	Chevrolet	Onix	Power Steering Control Module	√	√	√	√		0207
2019	Chevrolet	Onix	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Chevrolet	Onix	Radio	√	√	√	√	√	0226 0150 0269
2019	Chevrolet	Onix	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Chevrolet	Optra	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2019	Chevrolet	Optra	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Chevrolet	Optra	Electronic Brake Control Module	√	√	√	√	√	
2019	Chevrolet	Optra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172

2019	Chevrolet	Optra	Body Control Module	√	√	√	√	√	
2019	Chevrolet	Optra	Instrument Cluster	√	√	√	√	√	
2019	Chevrolet	Optra	Power Steering Control Module	√	√	√	√		0089 0081 0080
2019	Chevrolet	Prisma	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0115
2019	Chevrolet	Prisma	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Chevrolet	Prisma	Electronic Brake Control Module	√	√	√	√	√	0090
2019	Chevrolet	Prisma	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Chevrolet	Prisma	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Chevrolet	Prisma	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Prisma	Serial Data Gateway Module	√	√	√			
2019	Chevrolet	Prisma	Telematics Communication Interface Control Module	√	√	√		√	
2019	Chevrolet	Prisma	Power Steering Control Module	√	√	√	√		0207
2019	Chevrolet	Prisma	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Chevrolet	Prisma	Radio	√	√	√	√	√	0226 0150 0269
2019	Chevrolet	Prisma	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Chevrolet	S10	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0210 0224 0130 0222 0066 0147 0060 0044 0045 0109 0068 0084 0070 0071 0074 0075 0043 0173 0179 0181 0183 0185
2019	Chevrolet	S10	Transmission Control Module	√	√	√	√	√	0016
2019	Chevrolet	S10	Electronic Brake Control Module	√	√	√	√	√	0090 0112 0111
2019	Chevrolet	S10	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Chevrolet	S10	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Chevrolet	S10	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	S10	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Chevrolet	S10	HVAC Controls	√	√	√	√	√	
2019	Chevrolet	S10	Serial Data Gateway Module	√	√	√			
2019	Chevrolet	S10	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Chevrolet	S10	Telematics Communication Interface Control Module	√	√	√		√	

2019	Chevrolet	S10	Left Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	S10	Right Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	S10	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Chevrolet	S10	Frontview Camera - Windshield	√	√	√	√	√	0196
2019	Chevrolet	S10	Amplifier	√	√	√	√		
2019	Chevrolet	S10	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Chevrolet	S10	Radio Controls	√	√	√	√		0241
2019	Chevrolet	S10	Radio	√	√	√	√	√	0226 0150
2019	Chevrolet	S10	Transfer Case Control Module	√	√	√	√	√	0037
2019	Chevrolet	S10	Power Steering Control Module	√	√	√	√		0093 0090
2019	Chevrolet	Sail	Engine Control Module	√	√	√	√	√	0087 0133 0210 0098 0096 0094 0216 0143 0265 0393 0173 0149 0209 0217 0156 0020 0148
2019	Chevrolet	Sail	Transmission Control Module	√	√	√	√	√	0200 0157 0153 0136 0035 0016
2019	Chevrolet	Sail	Electronic Brake Control Module	√	√	√	√	√	0111 0090
2019	Chevrolet	Sail	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0064 0040 0063 0039 0227 0172 0062 0038 0177 0261 0111
2019	Chevrolet	Sail	Body Control Module	√	√	√	√	√	0263
2019	Chevrolet	Sail	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Chevrolet	Sail	Radio/HVAC Controls	√	√	√	√	√	0150
2019	Chevrolet	Sail	Power Steering Control Module	√	√	√	√		0081 0089
2019	Chevrolet	Sail	Radio	√	√	√	√	√	
2019	Chevrolet	Sail	Telematics Communication Interface Control Module	√	√	√		√	
2019	Chevrolet	Sail	Keyless Entry Control Module						0204
2020	Chevrolet	Silverado	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 076C 0131 0067 07A9 076D 0058 079A 0045 0044 0088 0097 0219 0221 0792 07AA 0073 0072 0070 0071 0117 0118 0119 077E 0178 0180 0182 0184 0186 0188 0190 0192 0246 0214 075F 0216 0215 077A 0156

2020	Chevrolet	Silverado	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017 0795 0796 0019
2020	Chevrolet	Silverado	Brake System Control Module	√	√	√	√	√	0229 0225 0090 0758 0767 0768 078E 078F
2020	Chevrolet	Silverado	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0771 0277 078F 0790 0111
2020	Chevrolet	Silverado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	Chevrolet	Silverado	Instrument Cluster	√	√	√	√	√	0247
2020	Chevrolet	Silverado	HVAC Control Module	√	√	√	√	√	0007 0129
2020	Chevrolet	Silverado	HVAC Controls	√	√	√	√	√	
2020	Chevrolet	Silverado	Serial Data Gateway Module	√	√	√			
2020	Chevrolet	Silverado	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2020	Chevrolet	Silverado	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 07AB 0009 07AC
2020	Chevrolet	Silverado	Telematics Communication Interface Control Module	√	√	√	√	√	0755 0259 0048 0011
2020	Chevrolet	Silverado	Power Steering Control Module	√	√	√	√	√	0089 0084 0273 0082 0274 0150
2020	Chevrolet	Silverado	Suspension Control Module	√	√	√	√	√	0245
2020	Chevrolet	Silverado	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2020	Chevrolet	Silverado	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	Chevrolet	Silverado	Passenger Presence Module	√	√	√	√	√	0057
2020	Chevrolet	Silverado	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	Chevrolet	Silverado	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A 0084
2020	Chevrolet	Silverado	Amplifier	√	√	√	√		
2020	Chevrolet	Silverado	Human Machine Interface Control Module	√	√	√	√	√	0150
2020	Chevrolet	Silverado	Radio Controls	√	√	√	√		0241
2020	Chevrolet	Silverado	Media Disc Player	√	√	√	√	√	
2020	Chevrolet	Silverado	Radio	√	√	√	√	√	0150 0226 0269 0267
2020	Chevrolet	Silverado	Transfer Case Control Module	√	√	√	√	√	0037 0776 07A6 0099
2020	Chevrolet	Silverado	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2020	Chevrolet	Silverado	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2020	Chevrolet	Silverado	Assist Step Control Module	√	√	√	√	√	
2020	Chevrolet	Silverado	Keyless Entry Control Module	√	√	√	√	√	
2020	Chevrolet	Silverado	Video Processing Control Module	√	√	√	√	√	

2020	Chevrolet	Silverado	Trailer Lighting Control Module	√	√	√	√	√	
2020	Chevrolet	Silverado	Short Range Remote Control Transceiver	√	√	√	√		
2020	Chevrolet	Silverado	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2020	Chevrolet	Silverado	Left Side Object Detection Control Module	√	√	√		√	
2020	Chevrolet	Silverado	Right Side Object Detection Control Module	√	√	√		√	
2020	Chevrolet	Silverado	Steering Column Lock Control Module	√	√	√	√		
2020	Chevrolet	Silverado	Rear Gate Module	√	√	√	√		
2020	Chevrolet	Silverado	Serial Data Gateway Module - Processor 1	√	√	√			
2020	Chevrolet	Silverado	Serial Data Gateway Module - Processor 2	√	√	√			
2020	Chevrolet	Silverado	Side Object Sensor Module - Left	√	√	√		√	
2020	Chevrolet	Silverado	Side Object Sensor Module - Right	√	√	√		√	
2019	Chevrolet	Sonic	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139 0020 0066 076D 0213
2019	Chevrolet	Sonic	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Chevrolet	Sonic	Electronic Brake Control Module	√	√	√	√	√	0090
2019	Chevrolet	Sonic	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Chevrolet	Sonic	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0032 0150
2019	Chevrolet	Sonic	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Sonic	HVAC Control Module	√	√	√	√	√	
2019	Chevrolet	Sonic	Serial Data Gateway Module	√	√	√			
2019	Chevrolet	Sonic	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Chevrolet	Sonic	Power Steering Control Module	√	√	√	√		0207
2019	Chevrolet	Sonic	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Chevrolet	Sonic	Keyless Entry Control Module	√	√	√	√	√	
2019	Chevrolet	Sonic	Passenger Presence Module	√	√	√	√		0057
2019	Chevrolet	Sonic	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Chevrolet	Sonic	Front Seat Heating Control Module	√	√	√	√	√	
2019	Chevrolet	Sonic	Radio	√	√	√	√	√	0226 0150 0269
2019	Chevrolet	Sonic	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Chevrolet	Sonic	Chassis Control Module	√	√	√	√	√	0217
2019	Chevrolet	Spark	Engine Control Module	√	√	√	√	√	0156 0140 0209 0132 0067 0263 0086 0217 0139 0069 0087 079C
2019	Chevrolet	Spark	Transmission Control Module	√	√	√	√	√	0016 0017 0136 07B1
2019	Chevrolet	Spark	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2019	Chevrolet	Spark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758



2019	Chevrolet	Spark	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160 0233 0159 0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0267
2019	Chevrolet	Spark	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Spark	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Chevrolet	Spark	HVAC Controls	√	√	√	√	√	
2019	Chevrolet	Spark	Serial Data Gateway Module	√	√	√			
2019	Chevrolet	Spark	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0755
2019	Chevrolet	Spark	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Chevrolet	Spark	Keyless Entry Control Module	√	√	√	√	√	
2019	Chevrolet	Spark	Power Steering Control Module	√	√	√	√		0089
2019	Chevrolet	Spark	Radio	√	√	√	√	√	0226 0150 0269
2019	Chevrolet	Spark	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Chevrolet	Spark	Passenger Presence Module	√	√	√	√	√	0057
2019	Chevrolet	Spark	Short Range Remote Control Transceiver	√	√	√	√		
2019	Chevrolet	Spin	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0115
2019	Chevrolet	Spin	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Chevrolet	Spin	Electronic Brake Control Module	√	√	√	√	√	0090
2019	Chevrolet	Spin	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2019	Chevrolet	Spin	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Chevrolet	Spin	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Spin	Serial Data Gateway Module	√	√	√			
2019	Chevrolet	Spin	Telematics Communication Interface Control Module	√	√	√		√	
2019	Chevrolet	Spin	Power Steering Control Module	√	√	√	√		0207
2019	Chevrolet	Spin	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Chevrolet	Spin	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Chevrolet	Spin	Radio	√	√	√	√	√	
2019	Chevrolet	Suburban	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2019	Chevrolet	Suburban	Transmission Control Module	√	√	√	√	√	0016 0017
2019	Chevrolet	Suburban	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2019	Chevrolet	Suburban	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2019	Chevrolet	Suburban	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Chevrolet	Suburban	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Suburban	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Chevrolet	Suburban	HVAC Controls	√	√	√	√	√	
2019	Chevrolet	Suburban	Serial Data Gateway Module	√	√	√			
2019	Chevrolet	Suburban	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2019	Chevrolet	Suburban	Suspension Control Module	√	√	√	√	√	0245
2019	Chevrolet	Suburban	Power Steering Control Module	√	√	√	√	√	0150
2019	Chevrolet	Suburban	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Chevrolet	Suburban	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Chevrolet	Suburban	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Chevrolet	Suburban	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	Chevrolet	Suburban	Trailer Lighting Control Module	√	√	√	√	√	0247
2019	Chevrolet	Suburban	Passenger Presence Module	√	√	√	√	√	0057
2019	Chevrolet	Suburban	Steering Column Lock Control Module	√	√	√	√		
2019	Chevrolet	Suburban	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2019	Chevrolet	Suburban	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2019	Chevrolet	Suburban	Keyless Entry Control Module	√	√	√	√	√	0759
2019	Chevrolet	Suburban	Video Processing Control Module	√	√	√	√	√	
2019	Chevrolet	Suburban	Frontview Camera - Windshield	√	√	√	√		0196 075A
2019	Chevrolet	Suburban	Active Safety Control Module	√	√	√	√	√	
2019	Chevrolet	Suburban	Left Front Short Range Radar Sensor Module	√	√	√			
2019	Chevrolet	Suburban	Left Rear Radar Short Range Sensor Module	√	√	√			
2019	Chevrolet	Suburban	Right Front Short Range Radar Sensor Module	√	√	√			
2019	Chevrolet	Suburban	Right Rear Short Range Radar Sensor Module	√	√	√			
2019	Chevrolet	Suburban	Distance Sensing Cruise Control Module	√	√	√	√		0047
2019	Chevrolet	Suburban	Left Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Suburban	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Chevrolet	Suburban	Parking Brake Control Module	√	√	√	√	√	0229
2019	Chevrolet	Suburban	Amplifier	√	√	√	√		
2019	Chevrolet	Suburban	Assist Step Control Module	√	√	√	√	√	
2019	Chevrolet	Suburban	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Chevrolet	Suburban	Radio	√	√	√	√	√	0226 0150
2019	Chevrolet	Suburban	Radio Controls	√	√	√	√		0241
2019	Chevrolet	Suburban	Media Disc Player	√	√	√	√	√	
2019	Chevrolet	Suburban	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2019	Chevrolet	Suburban	Transfer Case Control Module	√	√	√	√	√	0037
2019	Chevrolet	Suburban	Right Side Object Detection Control Module	√	√	√		√	

2019	Chevrolet	Tahoe	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2019	Chevrolet	Tahoe	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2019	Chevrolet	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2019	Chevrolet	Tahoe	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0158
2019	Chevrolet	Tahoe	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Tahoe	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Chevrolet	Tahoe	HVAC Controls	√	√	√	√	√	
2019	Chevrolet	Tahoe	Serial Data Gateway Module	√	√	√			
2019	Chevrolet	Tahoe	Steering Column Lock Control Module	√	√	√	√		
2019	Chevrolet	Tahoe	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Chevrolet	Tahoe	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Chevrolet	Tahoe	Power Steering Control Module	√	√	√	√	√	0150
2019	Chevrolet	Tahoe	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Chevrolet	Tahoe	Suspension Control Module	√	√	√	√	√	0245
2019	Chevrolet	Tahoe	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Chevrolet	Tahoe	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	Chevrolet	Tahoe	Trailer Lighting Control Module	√	√	√	√	√	0247
2019	Chevrolet	Tahoe	Passenger Presence Module	√	√	√	√	√	0057
2019	Chevrolet	Tahoe	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2019	Chevrolet	Tahoe	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2019	Chevrolet	Tahoe	Keyless Entry Control Module	√	√	√	√	√	0759
2019	Chevrolet	Tahoe	Video Processing Control Module	√	√	√	√	√	
2019	Chevrolet	Tahoe	Active Safety Control Module	√	√	√	√	√	
2019	Chevrolet	Tahoe	Frontview Camera - Windshield	√	√	√	√		0196 075A
2019	Chevrolet	Tahoe	Left Front Short Range Radar Sensor Module	√	√	√			
2019	Chevrolet	Tahoe	Left Rear Radar Short Range Sensor Module	√	√	√			
2019	Chevrolet	Tahoe	Right Front Short Range Radar Sensor Module	√	√	√			
2019	Chevrolet	Tahoe	Right Rear Short Range Radar Sensor Module	√	√	√			
2019	Chevrolet	Tahoe	Distance Sensing Cruise Control Module	√	√	√	√		0047
2019	Chevrolet	Tahoe	Left Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Tahoe	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Chevrolet	Tahoe	Parking Brake Control Module	√	√	√	√	√	0229
2019	Chevrolet	Tahoe	Short Range Remote Control Transceiver	√	√	√	√		

2019	Chevrolet	Tahoe	Amplifier	√	√	√	√		
2019	Chevrolet	Tahoe	Assist Step Control Module	√	√	√	√	√	
2019	Chevrolet	Tahoe	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Chevrolet	Tahoe	Radio Controls	√	√	√	√		0241
2019	Chevrolet	Tahoe	Radio	√	√	√	√	√	0226 0150
2019	Chevrolet	Tahoe	Media Disc Player	√	√	√	√	√	
2019	Chevrolet	Tahoe	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2019	Chevrolet	Tahoe	Transfer Case Control Module	√	√	√	√	√	0037
2019	Chevrolet	Tahoe	Right Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Tracker	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0066 076D 0210 0224 0130 0222 0147 0060 079A 0044 0045 0097 0792 0109 0068 0084 0070 0071 0074 0075 0117 0043 0173 0179 0181
2019	Chevrolet	Tracker	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Chevrolet	Tracker	Electronic Brake Control Module	√	√	√	√	√	0090
2019	Chevrolet	Tracker	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Chevrolet	Tracker	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Chevrolet	Tracker	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Tracker	HVAC Control Module	√	√	√	√	√	
2019	Chevrolet	Tracker	Serial Data Gateway Module	√	√	√			
2019	Chevrolet	Tracker	Telematics Communication Interface Control Module	√	√	√	√	√	
2019	Chevrolet	Tracker	Trailer Lighting Control Module	√	√	√	√	√	0247
2019	Chevrolet	Tracker	Power Steering Control Module	√	√	√	√		0207
2019	Chevrolet	Tracker	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Chevrolet	Tracker	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Chevrolet	Tracker	Headlamp Control Module	√	√	√	√	√	0195
2019	Chevrolet	Tracker	Front Seat Heating Control Module	√	√	√	√	√	
2019	Chevrolet	Tracker	Radio	√	√	√	√	√	0226
2019	Chevrolet	Tracker	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2019	Chevrolet	Tracker	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Chevrolet	Tracker	Chassis Control Module	√	√	√	√	√	0217
2019	Chevrolet	Tracker	Left Side Object Detection Control Module	√	√	√		√	

2019	Chevrolet	Trailblazer	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0066 0086 0217 0258 0210 0224 0130 0222 0147 0060 0044 0045 0109 0068 0084 0070 0071 0074 0075 0043 0173 0179 0181 0183 0185 0232
2019	Chevrolet	Trailblazer	Transmission Control Module	√	√	√	√	√	0016
2019	Chevrolet	Trailblazer	Electronic Brake Control Module	√	√	√	√	√	0090 0112 0111
2019	Chevrolet	Trailblazer	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Chevrolet	Trailblazer	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Chevrolet	Trailblazer	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Trailblazer	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Chevrolet	Trailblazer	HVAC Controls	√	√	√	√	√	
2019	Chevrolet	Trailblazer	Serial Data Gateway Module	√	√	√			
2019	Chevrolet	Trailblazer	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Chevrolet	Trailblazer	Left Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Trailblazer	Right Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Trailblazer	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Chevrolet	Trailblazer	Telematics Communication Interface Control Module	√	√	√		√	
2019	Chevrolet	Trailblazer	Frontview Camera - Windshield	√	√	√	√	√	0196
2019	Chevrolet	Trailblazer	Transfer Case Control Module	√	√	√	√	√	0037
2019	Chevrolet	Trailblazer	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Chevrolet	Trailblazer	Amplifier	√	√	√	√		
2019	Chevrolet	Trailblazer	Radio Controls	√	√	√	√		0241
2019	Chevrolet	Trailblazer	Radio	√	√	√	√	√	0226 0150 0267 0269
2019	Chevrolet	Trailblazer	Power Steering Control Module	√	√	√	√		0093 0090
2019	Chevrolet	Traverse	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0226 0130 0756 0005
2019	Chevrolet	Traverse	Transmission Control Module	√	√	√	√	√	0017
2019	Chevrolet	Traverse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2019	Chevrolet	Traverse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2019	Chevrolet	Traverse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Chevrolet	Traverse	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Traverse	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Chevrolet	Traverse	HVAC Controls	√	√	√	√	√	
2019	Chevrolet	Traverse	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Chevrolet	Traverse	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Chevrolet	Traverse	Chassis Control Module	√	√	√	√	√	0014 0078
2019	Chevrolet	Traverse	Passenger Presence Module	√	√	√	√	√	0057
2019	Chevrolet	Traverse	Keyless Entry Control Module	√	√	√	√	√	0759
2019	Chevrolet	Traverse	Left Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Traverse	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Chevrolet	Traverse	Active Safety Control Module	√	√	√	√		
2019	Chevrolet	Traverse	Frontview Camera - Windshield	√	√	√	√		0196
2019	Chevrolet	Traverse	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Chevrolet	Traverse	Left Front Short Range Radar Sensor Module	√	√	√			
2019	Chevrolet	Traverse	Right Front Short Range Radar Sensor Module	√	√	√			
2019	Chevrolet	Traverse	Rear Short Range Radar Sensor Module	√	√	√			
2019	Chevrolet	Traverse	Amplifier	√	√	√	√		
2019	Chevrolet	Traverse	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Chevrolet	Traverse	Radio Controls	√	√	√	√		0241
2019	Chevrolet	Traverse	Radio	√	√	√	√	√	0226 0150
2019	Chevrolet	Traverse	Power Steering Control Module	√	√	√	√		0089 0084
2019	Chevrolet	Traverse	Suspension Control Module	√	√	√	√	√	
2019	Chevrolet	Traverse	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Chevrolet	Traverse	Video Processing Control Module	√	√	√	√	√	
2019	Chevrolet	Traverse	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	Chevrolet	Traverse	Serial Data Gateway Module - Processor 1	√	√	√			
2019	Chevrolet	Traverse	Serial Data Gateway Module - Processor 2	√	√	√			
2019	Chevrolet	Traverse	Steering Column Lock Control Module	√	√	√	√		

2019	Chevrolet	Trax	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0066 076D 0210 0224 0130 0222 0147 0060 079A 0044 0045 0097 0792 0109 0068 0084 0070 0071 0074 0075 0117 0043 0173 0179 0181
2019	Chevrolet	Trax	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Chevrolet	Trax	Electronic Brake Control Module	√	√	√	√	√	0090
2019	Chevrolet	Trax	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Chevrolet	Trax	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Chevrolet	Trax	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Trax	HVAC Control Module	√	√	√	√	√	
2019	Chevrolet	Trax	Serial Data Gateway Module	√	√	√			
2019	Chevrolet	Trax	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	Chevrolet	Trax	Steering Column Lock Control Module	√	√	√	√		
2019	Chevrolet	Trax	Power Steering Control Module	√	√	√	√		0207
2019	Chevrolet	Trax	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Chevrolet	Trax	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Chevrolet	Trax	Keyless Entry Control Module	√	√	√	√	√	
2019	Chevrolet	Trax	Passenger Presence Module	√	√	√	√		0057
2019	Chevrolet	Trax	Left Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Trax	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Chevrolet	Trax	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2019	Chevrolet	Trax	Front Seat Heating Control Module	√	√	√	√	√	
2019	Chevrolet	Trax	Power Supply Transformer	√	√	√	√		
2019	Chevrolet	Trax	Seat Memory Control Module	√	√	√	√	√	0310
2019	Chevrolet	Trax	Radio	√	√	√	√	√	0226 0150 0269
2019	Chevrolet	Trax	Short Range Remote Control Transceiver	√	√	√	√		
2019	Chevrolet	Trax	Trailer Lighting Control Module	√	√	√	√	√	0247
2019	Chevrolet	Trax	Chassis Control Module	√	√	√	√	√	0217
2019	Chevrolet	Volt	Engine Control Module	√	√	√	√	√	0209 0132 0067 0263 0086 0217 0176 0212
2019	Chevrolet	Volt	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229
2019	Chevrolet	Volt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2019	Chevrolet	Volt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Chevrolet	Volt	Instrument Cluster	√	√	√	√	√	0247
2019	Chevrolet	Volt	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Chevrolet	Volt	HVAC Controls	√	√	√	√	√	
2019	Chevrolet	Volt	Battery Energy Control Module	√			√		
2019	Chevrolet	Volt	Electric A/C Compressor Control Module	√					
2019	Chevrolet	Volt	Hybrid/EV Powertrain Control Module 2	√	√	√	√	√	07B2 0125 0202 0079 0218 0122 0123 0127
2019	Chevrolet	Volt	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2019	Chevrolet	Volt	Steering Column Lock Control Module	√	√	√	√		
2019	Chevrolet	Volt	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Chevrolet	Volt	Right Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Volt	Left Side Object Detection Control Module	√	√	√		√	
2019	Chevrolet	Volt	Drive Motor Control Module 1	√	√	√	√		
2019	Chevrolet	Volt	Drive Motor Control Module 2	√	√	√	√		
2019	Chevrolet	Volt	Hybrid/EV Powertrain Control Module 1	√	√	√	√	√	0018
2019	Chevrolet	Volt	Passenger Presence Module	√	√	√	√		0057
2019	Chevrolet	Volt	Keyless Entry Control Module	√	√	√	√	√	
2019	Chevrolet	Volt	Amplifier	√	√	√	√		
2019	Chevrolet	Volt	Radio Controls	√	√	√	√		0241
2019	Chevrolet	Volt	Radio	√	√	√	√	√	0226 0267 0269
2019	Chevrolet	Volt	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2019	Chevrolet	Volt	Brake Booster Control Module	√	√	√	√		
2019	Chevrolet	Volt	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2019	Chevrolet	Volt	Power Steering Control Module	√	√	√	√		0081 0080 0089
2019	Chevrolet	Volt	Active Safety Control Module	√	√	√	√	√	
2019	Chevrolet	Volt	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Chevrolet	Volt	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Chevrolet	Volt	Short Range Remote Control Transceiver	√	√	√	√		
2019	Chevrolet	Volt	Serial Data Gateway Module - Processor 1	√	√	√			
2019	Chevrolet	Volt	Serial Data Gateway Module - Processor 2	√	√	√			
2019	Chevrolet	Work	Engine Control Module	√	√	√	√	√	0069 0087 079C
2019	Chevrolet	Work	Electronic Brake Control Module	√	√	√	√	√	
2019	Chevrolet	Work	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2019	GMC	Acadia	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0006 0756 0005 0006



2019	GMC	Acadia	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2019	GMC	Acadia	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2019	GMC	Acadia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	GMC	Acadia	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	GMC	Acadia	Instrument Cluster	√	√	√	√	√	0247
2019	GMC	Acadia	HVAC Control Module	√	√	√	√	√	0007 0129
2019	GMC	Acadia	HVAC Controls	√	√	√	√	√	
2019	GMC	Acadia	Serial Data Gateway Module	√	√	√			
2019	GMC	Acadia	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	GMC	Acadia	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	GMC	Acadia	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	GMC	Acadia	Frontview Camera - Windshield	√	√	√	√		0196
2019	GMC	Acadia	Active Safety Control Module	√	√	√	√		
2019	GMC	Acadia	Long Range Radar Sensor Module	√	√	√	√		0260
2019	GMC	Acadia	Left Front Short Range Radar Sensor Module	√	√	√			
2019	GMC	Acadia	Right Front Short Range Radar Sensor Module	√	√	√			
2019	GMC	Acadia	Rear Short Range Radar Sensor Module	√	√	√			
2019	GMC	Acadia	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	GMC	Acadia	Left Side Object Detection Control Module	√	√	√		√	
2019	GMC	Acadia	Amplifier	√	√	√	√		
2019	GMC	Acadia	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	GMC	Acadia	Radio Controls	√	√	√	√		0241
2019	GMC	Acadia	Radio	√	√	√	√	√	0226 0150
2019	GMC	Acadia	Keyless Entry Control Module	√	√	√	√	√	
2019	GMC	Acadia	Passenger Presence Module	√	√	√	√	√	0057
2019	GMC	Acadia	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	GMC	Acadia	Power Steering Control Module	√	√	√	√		0089 0084
2019	GMC	Acadia	Suspension Control Module	√	√	√	√	√	
2019	GMC	Acadia	Video Processing Control Module	√	√	√	√	√	
2019	GMC	Acadia	Steering Column Lock Control Module	√	√	√	√		

2019	GMC	Canyon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0006 0756 0085 0236 076D 0060 079A 0044 0045 0097 0171 0219 0792 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182
2019	GMC	Canyon	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2019	GMC	Canyon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2019	GMC	Canyon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	GMC	Canyon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	GMC	Canyon	Instrument Cluster	√	√	√	√	√	0247
2019	GMC	Canyon	HVAC Control Module	√	√	√	√	√	0007 0129
2019	GMC	Canyon	HVAC Controls	√	√	√	√	√	
2019	GMC	Canyon	Serial Data Gateway Module	√	√	√			
2019	GMC	Canyon	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2019	GMC	Canyon	Frontview Camera - Windshield	√	√	√	√	√	0196
2019	GMC	Canyon	Power Steering Control Module	√	√	√	√		0093 0090
2019	GMC	Canyon	Passenger Presence Module	√	√	√	√	√	0057
2019	GMC	Canyon	Amplifier	√	√	√	√		
2019	GMC	Canyon	Radio	√	√	√	√	√	0150 0226 0269 0267
2019	GMC	Canyon	Transfer Case Control Module	√	√	√	√	√	0037
2019	GMC	Canyon	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2019	GMC	Canyon	Parking Assist Control Module	√	√	√	√	√	0247
2019	GMC	Savana	Engine Control Module	√	√	√	√	√	0263 0209 0115 076D 0060 079A 0044 0045 0086 0097 0171 0219 0792 0217 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0156 0076 0020 0132 0067 0154 0212 0214

2019	GMC	Savana	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2019	GMC	Savana	Electronic Brake Control Module	√	√	√	√	√	0225 0111 0277 0090
2019	GMC	Savana	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2019	GMC	Savana	Body Control Module	√	√	√	√	√	0263 0261
2019	GMC	Savana	Theft Deterrent Module	√	√	√	√	√	
2019	GMC	Savana	Instrument Cluster	√	√	√	√	√	
2019	GMC	Savana	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	GMC	Savana	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2019	GMC	Savana	Parking Assist Control Module	√	√	√	√	√	0247
2019	GMC	Savana	Left Side Object Detection Control Module	√	√	√		√	
2019	GMC	Savana	Right Side Object Detection Control Module	√	√	√		√	
2019	GMC	Savana	Auxiliary Heater Control Module	√	√	√	√	√	
2019	GMC	Savana	Radio	√	√	√	√	√	
2019	GMC	Savana	Digital Radio Receiver Control Module	√	√	√	√	√	
2019	GMC	Savana	Chime Alarm Control Module	√	√	√		√	
2019	GMC	Savana	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2019	GMC	Savana	Frontview Camera - Windshield	√	√	√	√		0196
2019	GMC	Savana	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2019	GMC	Savana	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2019	GMC	Sierra	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 075F 0216 07A9 076C 076D 0058 0097 0219 0221 0792 0215 077A 0073 0072 0070 0071 0117 0119 077E 0178 0180 0182 0184 0186 0188 0246 0131 0067 0156 0076 0020 0132 0154 0791
2019	GMC	Sierra	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017 0016 0795 0796 0019
2019	GMC	Sierra	Brake System Control Module	√	√	√	√	√	0229 0225 0090 0758 0767 0768 078E 078F
2019	GMC	Sierra	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2019	GMC	Sierra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2019	GMC	Sierra	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	GMC	Sierra	Instrument Cluster	√	√	√	√	√	0247
2019	GMC	Sierra	HVAC Control Module	√	√	√	√	√	0007 0129
2019	GMC	Sierra	HVAC Controls	√	√	√	√	√	
2019	GMC	Sierra	Serial Data Gateway Module	√	√	√			
2019	GMC	Sierra	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2019	GMC	Sierra	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 07AB 0009 07AC
2019	GMC	Sierra	Telematics Communication Interface Control Module	√	√	√	√	√	0755 0259 0048 0011
2019	GMC	Sierra	Power Steering Control Module	√	√	√	√	√	0089 0084 0150 0273 0082 0274
2019	GMC	Sierra	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2019	GMC	Sierra	Suspension Control Module	√	√	√	√	√	0245
2019	GMC	Sierra	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	GMC	Sierra	Passenger Presence Module	√	√	√	√	√	0057
2019	GMC	Sierra	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	GMC	Sierra	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A 0084
2019	GMC	Sierra	Transfer Case Control Module	√	√	√	√	√	0037
2019	GMC	Sierra	Radio	√	√	√	√	√	0150 0226 0269 0267
2019	GMC	Sierra	Amplifier	√	√	√	√		
2019	GMC	Sierra	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	GMC	Sierra	Media Disc Player	√	√	√	√	√	
2019	GMC	Sierra	Radio Controls	√	√	√	√		0241
2019	GMC	Sierra	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2019	GMC	Sierra	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2019	GMC	Sierra	Assist Step Control Module	√	√	√	√	√	
2019	GMC	Sierra	Keyless Entry Control Module	√	√	√	√	√	
2019	GMC	Sierra	Video Processing Control Module	√	√	√	√	√	
2019	GMC	Sierra	Trailer Lighting Control Module	√	√	√	√	√	
2019	GMC	Sierra	Left Side Object Detection Control Module	√	√	√		√	
2019	GMC	Sierra	Right Side Object Detection Control Module	√	√	√		√	
2019	GMC	Sierra	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2019	GMC	Sierra	Steering Column Lock Control Module	√	√	√	√		
2019	GMC	Sierra	Serial Data Gateway Module - Processor 1	√	√	√			
2019	GMC	Sierra	Serial Data Gateway Module - Processor 2	√	√	√			
2019	GMC	Sierra	Rear Gate Module	√	√	√	√		

2019	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0222 076D 0060 079A 0044 0045 0097 0171 0219 0792 0109 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184
2019	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0017 0036
2019	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0229 0111
2019	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	GMC	Terrain	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0247
2019	GMC	Terrain	HVAC Control Module	√	√	√	√	√	0007 0129
2019	GMC	Terrain	HVAC Controls	√	√	√	√	√	
2019	GMC	Terrain	Serial Data Gateway Module	√	√	√			
2019	GMC	Terrain	Left Side Object Detection Control Module	√	√	√		√	
2019	GMC	Terrain	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2019	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0080 0089
2019	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	GMC	Terrain	Amplifier	√	√	√	√		
2019	GMC	Terrain	Radio Controls	√	√	√	√		0241
2019	GMC	Terrain	Navigation Control Module	√	√	√	√	√	
2019	GMC	Terrain	Radio	√	√	√	√	√	0150 0226 0269 0267
2019	GMC	Terrain	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2019	GMC	Terrain	Headlamp Control Module	√	√	√	√	√	0195
2019	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2019	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	GMC	Terrain	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	GMC	Terrain	Frontview Camera - Windshield	√	√	√	√		0196 0084
2019	GMC	Terrain	Video Processing Control Module	√	√	√	√	√	
2019	GMC	Terrain	Long Range Radar Sensor Module	√	√	√	√		0260
2019	GMC	Terrain	Passenger Presence Module	√	√	√	√	√	0057
2019	GMC	Terrain	Keyless Entry Control Module	√	√	√	√	√	0759
2019	GMC	Terrain	Steering Column Lock Control Module	√	√	√	√		
2019	GMC	Terrain	Rear Differential Clutch Control Module	√	√	√	√	√	0003

2019	GMC	Terrain	Headlamp High Beam Control Module	√	√	√	√	√	0247
2019	GMC	Terrain	Chassis Control Module	√	√	√	√	√	0014 0078
2019	GMC	Yukon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2019	GMC	Yukon	Transmission Control Module	√	√	√	√	√	0016 0017
2019	GMC	Yukon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2019	GMC	Yukon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	GMC	Yukon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	GMC	Yukon	Instrument Cluster	√	√	√	√	√	0247
2019	GMC	Yukon	HVAC Control Module	√	√	√	√	√	0007 0129
2019	GMC	Yukon	HVAC Controls	√	√	√	√	√	
2019	GMC	Yukon	Serial Data Gateway Module	√	√	√			
2019	GMC	Yukon	Steering Column Lock Control Module	√	√	√	√		
2019	GMC	Yukon	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	GMC	Yukon	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	GMC	Yukon	Power Steering Control Module	√	√	√	√	√	0150
2019	GMC	Yukon	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	GMC	Yukon	Suspension Control Module	√	√	√	√	√	0245
2019	GMC	Yukon	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	GMC	Yukon	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	GMC	Yukon	Trailer Lighting Control Module	√	√	√	√	√	0247
2019	GMC	Yukon	Passenger Presence Module	√	√	√	√	√	0057
2019	GMC	Yukon	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2019	GMC	Yukon	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2019	GMC	Yukon	Keyless Entry Control Module	√	√	√	√	√	0759
2019	GMC	Yukon	Video Processing Control Module	√	√	√	√	√	
2019	GMC	Yukon	Active Safety Control Module	√	√	√	√	√	
2019	GMC	Yukon	Frontview Camera - Windshield	√	√	√	√		0196 075A
2019	GMC	Yukon	Left Front Short Range Radar Sensor Module	√	√	√			
2019	GMC	Yukon	Left Rear Radar Short Range Sensor Module	√	√	√			
2019	GMC	Yukon	Right Front Short Range Radar Sensor Module	√	√	√			
2019	GMC	Yukon	Right Rear Short Range Radar Sensor Module	√	√	√			
2019	GMC	Yukon	Distance Sensing Cruise Control Module	√	√	√	√		0047
2019	GMC	Yukon	Left Side Object Detection Control Module	√	√	√		√	
2019	GMC	Yukon	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	GMC	Yukon	Parking Brake Control Module	√	√	√	√	√	0229
2019	GMC	Yukon	Amplifier	√	√	√	√		

2019	GMC	Yukon	Assist Step Control Module	√	√	√	√	√	
2019	GMC	Yukon	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	GMC	Yukon	Media Disc Player	√	√	√	√	√	
2019	GMC	Yukon	Radio	√	√	√	√	√	0226 0150
2019	GMC	Yukon	Radio Controls	√	√	√	√	√	0241
2019	GMC	Yukon	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2019	GMC	Yukon	Transfer Case Control Module	√	√	√	√	√	0037
2019	GMC	Yukon	Right Side Object Detection Control Module	√	√	√		√	
2019	GMC	Yukon XL	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2019	GMC	Yukon XL	Transmission Control Module	√	√	√	√	√	0016 0017
2019	GMC	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2019	GMC	Yukon XL	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	GMC	Yukon XL	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	GMC	Yukon XL	Instrument Cluster	√	√	√	√	√	0247
2019	GMC	Yukon XL	HVAC Control Module	√	√	√	√	√	0007 0129
2019	GMC	Yukon XL	HVAC Controls	√	√	√	√	√	
2019	GMC	Yukon XL	Serial Data Gateway Module	√	√	√			
2019	GMC	Yukon XL	Steering Column Lock Control Module	√	√	√	√		
2019	GMC	Yukon XL	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	GMC	Yukon XL	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	GMC	Yukon XL	Power Steering Control Module	√	√	√	√	√	0150
2019	GMC	Yukon XL	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	GMC	Yukon XL	Suspension Control Module	√	√	√	√	√	0245
2019	GMC	Yukon XL	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	GMC	Yukon XL	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	GMC	Yukon XL	Trailer Lighting Control Module	√	√	√	√	√	0247
2019	GMC	Yukon XL	Passenger Presence Module	√	√	√	√		
2019	GMC	Yukon XL	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2019	GMC	Yukon XL	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2019	GMC	Yukon XL	Keyless Entry Control Module	√	√	√	√	√	0759
2019	GMC	Yukon XL	Video Processing Control Module	√	√	√	√	√	
2019	GMC	Yukon XL	Active Safety Control Module	√	√	√	√	√	
2019	GMC	Yukon XL	Frontview Camera - Windshield	√	√	√	√		0196 075A
2019	GMC	Yukon XL	Left Front Short Range Radar Sensor Module	√	√	√			
2019	GMC	Yukon XL	Left Rear Radar Short Range Sensor Module	√	√	√			
2019	GMC	Yukon XL	Right Front Short Range Radar Sensor Module	√	√	√			

2019	GMC	Yukon XL	Right Rear Short Range Radar Sensor Module	√	√	√			
2019	GMC	Yukon XL	Distance Sensing Cruise Control Module	√	√	√	√		0047
2019	GMC	Yukon XL	Left Side Object Detection Control Module	√	√	√		√	
2019	GMC	Yukon XL	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	GMC	Yukon XL	Parking Brake Control Module	√	√	√	√	√	0229
2019	GMC	Yukon XL	Amplifier	√	√	√	√		
2019	GMC	Yukon XL	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	GMC	Yukon XL	Assist Step Control Module	√	√	√	√	√	
2019	GMC	Yukon XL	Media Disc Player	√	√	√	√	√	
2019	GMC	Yukon XL	Radio	√	√	√	√	√	0226 0150
2019	GMC	Yukon XL	Radio Controls	√	√	√	√		0241
2019	GMC	Yukon XL	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2019	GMC	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0037
2019	GMC	Yukon XL	Right Side Object Detection Control Module	√	√	√		√	
2019	Holden	Acadia	Engine Control Module	√	√	√	√	√	0263 0156 0209 0006 0115 0756 0086 0085 0154 0217 0258 0236
2019	Holden	Acadia	Transmission Control Module	√	√	√	√	√	0017
2019	Holden	Acadia	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2019	Holden	Acadia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Holden	Acadia	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Holden	Acadia	Instrument Cluster	√	√	√	√	√	0247
2019	Holden	Acadia	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Holden	Acadia	HVAC Controls	√	√	√	√	√	
2019	Holden	Acadia	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Holden	Acadia	Video Processing Control Module	√	√	√	√	√	
2019	Holden	Acadia	Left Side Object Detection Control Module	√	√	√		√	
2019	Holden	Acadia	Parking Assist Control Module	√	√	√	√	√	0247
2019	Holden	Acadia	Keyless Entry Control Module	√	√	√	√	√	
2019	Holden	Acadia	Amplifier	√	√	√	√		
2019	Holden	Acadia	Radio	√	√	√	√	√	0226 0267 0269
2019	Holden	Acadia	Active Safety Control Module	√	√	√	√		
2019	Holden	Acadia	Frontview Camera - Windshield	√	√	√	√		0196
2019	Holden	Acadia	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Holden	Acadia	Power Steering Control Module	√	√	√	√		0089 0084
2019	Holden	Acadia	Suspension Control Module	√	√	√	√	√	
2019	Holden	Acadia	Right Side Object Detection Control Module	√	√	√		√	
2019	Holden	Acadia	Seat Memory Control Module - Driver	√	√	√	√	√	



2019	Holden	Acadia	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	Holden	Acadia	Serial Data Gateway Module - Processor 1	√	√	√			
2019	Holden	Acadia	Serial Data Gateway Module - Processor 2	√	√	√			
2019	Holden	Acadia	Steering Column Lock Control Module	√	√	√	√		
2019	Holden	Astra Sedan NB4	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0114 0258 0128
2019	Holden	Astra Sedan NB4	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Holden	Astra Sedan NB4	Electronic Brake Control Module	√	√	√	√	√	0090 0278
2019	Holden	Astra Sedan NB4	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2019	Holden	Astra Sedan NB4	Body Control Module	√	√	√	√	√	0242 0263 0203 0208 0201 0206 0083 0160
2019	Holden	Astra Sedan NB4	Instrument Cluster	√	√	√	√	√	0247
2019	Holden	Astra Sedan NB4	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Holden	Astra Sedan NB4	HVAC Controls	√	√	√	√	√	
2019	Holden	Astra Sedan NB4	Steering Column Lock Control Module	√	√	√	√		
2019	Holden	Astra Sedan NB4	Trailer Lighting Control Module	√	√	√	√	√	0247
2019	Holden	Astra Sedan NB4	Power Supply Transformer	√	√	√	√		
2019	Holden	Astra Sedan NB4	Keyless Entry Control Module	√	√	√	√	√	
2019	Holden	Astra Sedan NB4	Radio	√	√	√	√	√	0226 0150
2019	Holden	Astra Sedan NB4	Amplifier	√	√	√	√		
2019	Holden	Astra Sedan NB4	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Holden	Astra Sedan NB4	Radio Controls	√	√	√	√		0241
2019	Holden	Astra Sedan NB4	Parking Assist Control Module	√	√	√	√	√	0271 0247
2019	Holden	Astra Sedan NB4	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Holden	Astra Sedan NB4	Power Steering Control Module	√	√	√	√		0089
2019	Holden	Astra-K	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0114 0258 0128
2019	Holden	Astra-K	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Holden	Astra-K	Electronic Brake Control Module	√	√	√	√	√	0090 0278
2019	Holden	Astra-K	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2019	Holden	Astra-K	Body Control Module	√	√	√	√	√	0242 0263 0203 0208 0201 0206 0083 0160
2019	Holden	Astra-K	Instrument Cluster	√	√	√	√	√	0247
2019	Holden	Astra-K	HVAC Control Module	√	√	√	√	√	0007 0247 0129
2019	Holden	Astra-K	HVAC Controls	√	√	√	√	√	
2019	Holden	Astra-K	Serial Data Gateway Module	√	√	√			
2019	Holden	Astra-K	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Holden	Astra-K	Trailer Lighting Control Module	√	√	√	√	√	0247

2019	Holden	Astra-K	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Holden	Astra-K	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Holden	Astra-K	Active Safety Control Module	√	√	√	√	√	
2019	Holden	Astra-K	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Holden	Astra-K	Power Supply Transformer	√	√	√	√		
2019	Holden	Astra-K	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Holden	Astra-K	Radio	√	√	√	√	√	0226 0150
2019	Holden	Astra-K	Radio Controls	√	√	√	√		0241
2019	Holden	Astra-K	Headlamp Control Module	√	√	√	√	√	0195
2019	Holden	Astra-K	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2019	Holden	Astra-K	Power Steering Control Module	√	√	√	√		0089
2019	Holden	Barina	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139
2019	Holden	Barina	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Holden	Barina	Electronic Brake Control Module	√	√	√	√	√	0090
2019	Holden	Barina	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2019	Holden	Barina	Body Control Module	√	√	√	√	√	0263 0203 0083 0159
2019	Holden	Barina	Instrument Cluster	√	√	√	√	√	
2019	Holden	Barina	HVAC Control Module	√	√	√	√	√	
2019	Holden	Barina	Serial Data Gateway Module	√	√	√			
2019	Holden	Barina	Power Steering Control Module	√	√	√	√		0207
2019	Holden	Barina	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Holden	Barina	Keyless Entry Control Module	√	√	√	√	√	
2019	Holden	Barina	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Holden	Barina	Front Seat Heating Control Module	√	√	√	√	√	
2019	Holden	Barina	Radio	√	√	√	√	√	
2019	Holden	Barina	Chassis Control Module	√	√	√	√	√	0217
2019	Holden	Barina	Steering Column Lock Control Module	√	√	√	√		
2019	Holden	Colorado	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0222 0066 0147 0060 0044 0045 0086 0217 0109 0068 0084 0070 0071 0074 0075 0043 0173 0179 0181 0183 0185 0232
2019	Holden	Colorado	Transmission Control Module	√	√	√	√	√	0016
2019	Holden	Colorado	Electronic Brake Control Module	√	√	√	√	√	0090 0112
2019	Holden	Colorado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Holden	Colorado	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150

2019	Holden	Colorado	Instrument Cluster	√	√	√	√	√	0247
2019	Holden	Colorado	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Holden	Colorado	HVAC Controls	√	√	√	√	√	
2019	Holden	Colorado	Serial Data Gateway Module	√	√	√			
2019	Holden	Colorado	Power Steering Control Module	√	√	√	√		0089
2019	Holden	Colorado	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Holden	Colorado	Trailer Lighting Control Module	√	√	√	√	√	0247
2019	Holden	Colorado	Frontview Camera - Windshield	√	√	√	√	√	0196
2019	Holden	Colorado	Transfer Case Control Module	√	√	√	√	√	0037
2019	Holden	Colorado	Radio	√	√	√	√	√	0226 0150
2019	Holden	Colorado	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Holden	Colorado	Radio Controls	√	√	√	√		0241
2019	Holden	Colorado	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Holden	Commodore	Engine Control Module	√	√	√	√	√	0156 0210 0066 0147 0060 0044 0045 0086 0097 0068 0084 0073 0070 0071 0117 0119 0131 0179 0181 0183 0185 0232 0043 0173 0128 0263 0209 0076 0132 0067 0115 0154 0212 0214 0217 0006 0144 0258 0236 0139
2019	Holden	Commodore	Transmission Control Module	√	√	√	√	√	0020 0084 0017
2019	Holden	Commodore	Electronic Brake Control Module	√	√	√	√	√	0090 0278
2019	Holden	Commodore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2019	Holden	Commodore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Holden	Commodore	Instrument Cluster	√	√	√	√	√	0247 0145
2019	Holden	Commodore	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Holden	Commodore	HVAC Controls	√	√	√	√	√	
2019	Holden	Commodore	Serial Data Gateway Module	√	√	√			
2019	Holden	Commodore	Headlamp Control Module	√	√	√	√	√	0195
2019	Holden	Commodore	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Holden	Commodore	Trailer Lighting Control Module	√	√	√	√	√	0247
2019	Holden	Commodore	Steering Column Lock Control Module	√	√	√	√		
2019	Holden	Commodore	Video Processing Control Module	√	√	√	√	√	
2019	Holden	Commodore	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Holden	Commodore	Left Side Object Detection Control Module	√	√	√		√	
2019	Holden	Commodore	Parking Assist Control Module	√	√	√	√	√	

2019	Holden	Commodore	Keyless Entry Control Module	√	√	√	√	√	0759
2019	Holden	Commodore	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	Holden	Commodore	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	Holden	Commodore	Power Supply Transformer	√	√	√	√		
2019	Holden	Commodore	Radio	√	√	√	√	√	0150 0226 0269 0267
2019	Holden	Commodore	Amplifier	√	√	√	√		
2019	Holden	Commodore	Radio Controls	√	√	√	√		0241
2019	Holden	Commodore	Active Safety Control Module	√	√	√	√		
2019	Holden	Commodore	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Holden	Commodore	Frontview Camera - Windshield	√	√	√	√		0196
2019	Holden	Commodore	Power Steering Control Module	√	√	√	√		0089
2019	Holden	Commodore	Suspension Control Module	√	√	√	√	√	
2019	Holden	Equinox	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0210 0224 0130 0222 0066 0147 0060 079A 0044 0045 0097 0792 0109 0068 0084 0070 0071 0074 0075 0117 0043 0173 0179 0181 0183
2019	Holden	Equinox	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Holden	Equinox	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0229 0771
2019	Holden	Equinox	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Holden	Equinox	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Holden	Equinox	Instrument Cluster	√	√	√	√	√	0247
2019	Holden	Equinox	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Holden	Equinox	HVAC Controls	√	√	√	√	√	
2019	Holden	Equinox	Serial Data Gateway Module	√	√	√			
2019	Holden	Equinox	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	Holden	Equinox	Steering Column Lock Control Module	√	√	√	√		
2019	Holden	Equinox	Power Steering Control Module	√	√	√	√		0089
2019	Holden	Equinox	Frontview Camera Module	√	√	√	√	√	0247
2019	Holden	Equinox	Headlamp Control Module	√	√	√	√	√	0195
2019	Holden	Equinox	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	Holden	Equinox	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	Holden	Equinox	Frontview Camera - Windshield	√	√	√	√		0196 0084

2019	Holden	Equinox	Long Range Radar Sensor Module	√	√	√	√		0260
2019	Holden	Equinox	Video Processing Control Module	√	√	√	√	√	
2019	Holden	Equinox	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Holden	Equinox	Left Side Object Detection Control Module	√	√	√		√	
2019	Holden	Equinox	Keyless Entry Control Module	√	√	√	√	√	0759
2019	Holden	Equinox	Amplifier	√	√	√	√		
2019	Holden	Equinox	Radio	√	√	√	√	√	0150 0226 0269 0267
2019	Holden	Equinox	Radio Controls	√	√	√	√		0241
2019	Holden	Equinox	Trailer Interface Control Module	√	√	√	√	√	0247
2019	Holden	Spark	Engine Control Module	√	√	√	√	√	0263 0156 0132 0067 0147 0209 0086 0217
2019	Holden	Spark	Transmission Control Module	√	√	√	√	√	0017
2019	Holden	Spark	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2019	Holden	Spark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2019	Holden	Spark	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Holden	Spark	Instrument Cluster	√	√	√	√	√	0247
2019	Holden	Spark	HVAC Controls	√	√	√	√	√	
2019	Holden	Spark	Serial Data Gateway Module	√	√	√			
2019	Holden	Spark	Steering Column Lock Control Module	√	√	√	√		
2019	Holden	Spark	Keyless Entry Control Module	√	√	√	√	√	
2019	Holden	Spark	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Holden	Spark	Radio	√	√	√	√	√	0150 0226 0269
2019	Holden	Spark	Power Steering Control Module	√	√	√	√		0089
2019	Holden	Spark	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Holden	Trailblazer	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0222 0066 0147 0060 0044 0045 0086 0217 0109 0068 0084 0070 0071 0074 0075 0043 0173 0179 0181 0183 0185 0232
2019	Holden	Trailblazer	Transmission Control Module	√	√	√	√	√	0016
2019	Holden	Trailblazer	Electronic Brake Control Module	√	√	√	√	√	0090 0112
2019	Holden	Trailblazer	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Holden	Trailblazer	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150

2019	Holden	Trailblazer	Instrument Cluster	√	√	√	√	√	0247
2019	Holden	Trailblazer	HVAC Control Module	√	√	√	√	√	0007 0129
2019	Holden	Trailblazer	HVAC Controls	√	√	√	√	√	
2019	Holden	Trailblazer	Serial Data Gateway Module	√	√	√			
2019	Holden	Trailblazer	Power Steering Control Module	√	√	√	√		0089
2019	Holden	Trailblazer	Frontview Camera - Windshield	√	√	√	√	√	0196
2019	Holden	Trailblazer	Left Side Object Detection Control Module	√	√	√		√	
2019	Holden	Trailblazer	Right Side Object Detection Control Module	√	√	√		√	
2019	Holden	Trailblazer	Trailer Lighting Control Module	√	√	√	√	√	0247
2019	Holden	Trailblazer	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Holden	Trailblazer	Transfer Case Control Module	√	√	√	√	√	0037
2019	Holden	Trailblazer	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	Holden	Trailblazer	Radio Controls	√	√	√	√		0241
2019	Holden	Trailblazer	Radio	√	√	√	√	√	0226 0150
2019	Holden	Trailblazer	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Holden	Trax	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006
2019	Holden	Trax	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Holden	Trax	Electronic Brake Control Module	√	√	√	√	√	0090
2019	Holden	Trax	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	Holden	Trax	Body Control Module	√	√	√	√	√	0263 0203 0083 0159
2019	Holden	Trax	Instrument Cluster	√	√	√	√	√	0247
2019	Holden	Trax	HVAC Control Module	√	√	√	√	√	
2019	Holden	Trax	Serial Data Gateway Module	√	√	√			
2019	Holden	Trax	Steering Column Lock Control Module	√	√	√	√		
2019	Holden	Trax	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2019	Holden	Trax	Headlamp Control Module	√	√	√	√	√	0195
2019	Holden	Trax	Chassis Control Module	√	√	√	√	√	0217
2019	Holden	Trax	Trailer Lighting Control Module	√	√	√	√	√	0247
2019	Holden	Trax	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2019	Holden	Trax	Keyless Entry Control Module	√	√	√	√	√	
2019	Holden	Trax	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Holden	Trax	Left Side Object Detection Control Module	√	√	√		√	
2019	Holden	Trax	Front Seat Heating Control Module	√	√	√	√	√	
2019	Holden	Trax	Radio	√	√	√	√	√	
2019	Holden	Trax	Power Supply Transformer	√	√	√	√		
2019	Holden	Trax	Headlamp High Beam Control Module	√	√	√	√	√	0247
2019	Holden	Trax	Power Steering Control Module	√	√	√	√		0207
2019	Holden	Trax	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Ravon	Genra	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217

2019	Ravon	Gentra	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Ravon	Gentra	Electronic Brake Control Module	√	√	√	√	√	
2019	Ravon	Gentra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2019	Ravon	Gentra	Telematics Communication Interface Control Module	√	√	√	√	√	
2019	Ravon	Gentra	Variable Power Steering Control Module				√	√	
2019	Ravon	Nexia R3	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2019	Ravon	Nexia R3	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Ravon	Nexia R3	Electronic Brake Control Module	√	√	√	√	√	0090
2019	Ravon	Nexia R3	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2019	Ravon	Nexia R3	Instrument Cluster	√	√	√		√	
2019	Ravon	Nexia R3	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Ravon	Nexia R3	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2019	Ravon	Nexia R3	Telematics Communication Interface Control Module	√	√	√	√	√	
2019	Ravon	Nexia R3	Tire Pressure Indicator Module	√	√	√	√		079D 0234
2019	Ravon	R2	Engine Control Module	√	√	√	√	√	0156 0140 0209 0132 0067 0263 0086 0217
2019	Ravon	R2	Transmission Control Module	√	√	√	√	√	0016
2019	Ravon	R2	Electronic Brake Control Module	√	√	√	√	√	0090
2019	Ravon	R2	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2019	Ravon	R2	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2019	Ravon	R2	Instrument Cluster	√	√	√	√	√	
2019	Ravon	R2	Telematics Communication Interface Control Module	√	√	√	√	√	
2019	Ravon	R2	Keyless Entry Control Module				√		
2019	Ravon	R2	Power Steering Control Module	√	√	√	√		0089
2019	Ravon	R2	Radio	√	√	√	√	√	0226
2019	Ravon	R4	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139
2019	Ravon	R4	Transmission Control Module	√	√	√	√	√	0017 0036
2019	Ravon	R4	Electronic Brake Control Module	√	√	√	√	√	0090
2019	Ravon	R4	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2019	Ravon	R4	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	Ravon	R4	Instrument Cluster	√	√	√	√	√	0247
2019	Ravon	R4	Serial Data Gateway Module	√	√	√			
2019	Ravon	R4	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	Ravon	R4	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	Ravon	R4	Radio	√	√	√	√	√	
2019	Ravon	R4	Front Seat Heating Control Module	√	√	√	√	√	

2019	Ravon	R4	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A
2018	Buick	Cascada	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0114 0258 0120
2018	Buick	Cascada	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Buick	Cascada	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2018	Buick	Cascada	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Buick	Cascada	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2018	Buick	Cascada	Instrument Cluster	√	√	√	√	√	0247
2018	Buick	Cascada	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Buick	Cascada	Folding Top Control Module	√	√	√	√	√	0247 0004 0005
2018	Buick	Cascada	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Buick	Cascada	Chassis Control Module	√	√	√	√	√	0217
2018	Buick	Cascada	Frontview Camera Module	√	√	√	√	√	0247 0205 0196 075A
2018	Buick	Cascada	Headlamp Control Module	√	√	√	√	√	0195
2018	Buick	Cascada	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Buick	Cascada	Radio	√	√	√	√	√	
2018	Buick	Cascada	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2018	Buick	Cascada	Parking Brake Control Module	√	√	√	√	√	0229
2018	Buick	Cascada	Power Steering Control Module	√	√	√	√		0089 0081 0080
2018	Buick	Cascada	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Buick	Cascada	Front Seat Heating Control Module	√	√	√	√	√	
2018	Buick	Cascada	Passenger Presence Module	√	√	√	√	√	0057
2018	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0156 0209 0006 0115 0756 0086 0085 0154 0217 0258 0236
2018	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0017
2018	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2018	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Buick	Enclave	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Buick	Enclave	Instrument Cluster	√	√	√	√	√	0247
2018	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Buick	Enclave	HVAC Controls	√	√	√	√	√	
2018	Buick	Enclave	Serial Data Gateway Module	√	√	√			
2018	Buick	Enclave	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010



2018	Buick	Enclave	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Buick	Enclave	Left Side Object Detection Control Module	√	√	√		√	
2018	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Buick	Enclave	Active Safety Control Module	√	√	√	√		
2018	Buick	Enclave	Frontview Camera Module	√	√	√	√		0196
2018	Buick	Enclave	Left Front Short Range Radar Sensor Module	√	√	√			
2018	Buick	Enclave	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Buick	Enclave	Right Front Short Range Radar Sensor Module	√	√	√			
2018	Buick	Enclave	Rear Short Range Radar Sensor Module	√	√	√			
2018	Buick	Enclave	Video Processing Control Module	√	√	√	√	√	
2018	Buick	Enclave	Chassis Control Module	√	√	√	√	√	0014 0078
2018	Buick	Enclave	Amplifier	√	√	√	√		
2018	Buick	Enclave	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Buick	Enclave	Radio Controls	√	√	√	√		0241
2018	Buick	Enclave	Radio	√	√	√	√	√	0226 0150
2018	Buick	Enclave	Power Steering Control Module	√	√	√	√		0089 0084
2018	Buick	Enclave	Suspension Control Module	√	√	√	√	√	
2018	Buick	Enclave	Keyless Entry Control Module	√	√	√	√	√	0759
2018	Buick	Enclave	Passenger Presence Module	√	√	√	√	√	0057
2018	Buick	Enclave	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2018	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0066 0760
2018	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2018	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2018	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0160 0233 0160
2018	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2018	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Buick	Encore	HVAC Controls	√	√	√	√	√	
2018	Buick	Encore	Serial Data Gateway Module	√	√	√			
2018	Buick	Encore	Headlamp Control Module	√	√	√	√	√	0195
2018	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2018	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2018	Buick	Encore	Radio	√	√	√	√	√	0226 0150
2018	Buick	Encore	Passenger Presence Module	√	√	√	√		0057

2018	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Buick	Encore	Left Side Object Detection Control Module	√	√	√		√	
2018	Buick	Encore	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	Buick	Encore	Keyless Entry Control Module	√	√	√	√	√	
2018	Buick	Encore	Amplifier	√	√	√	√		
2018	Buick	Encore	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Buick	Encore	Power Steering Control Module	√	√	√	√		0207
2018	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Buick	Encore	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2018	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217
2018	Buick	Encore	Radio Controls	√	√	√	√		0241
2018	Buick	Encore	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2018	Buick	Envision	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0076 0147 0236
2018	Buick	Envision	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Buick	Envision	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2018	Buick	Envision	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Buick	Envision	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Buick	Envision	Instrument Cluster	√	√	√	√	√	0247
2018	Buick	Envision	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Buick	Envision	HVAC Controls	√	√	√	√	√	
2018	Buick	Envision	Serial Data Gateway Module	√	√	√			
2018	Buick	Envision	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Buick	Envision	Headlamp Control Module	√	√	√	√	√	0195
2018	Buick	Envision	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Buick	Envision	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Buick	Envision	Steering Column Lock Control Module	√	√	√	√		
2018	Buick	Envision	Keyless Entry Control Module	√	√	√	√	√	
2018	Buick	Envision	Left Side Object Detection Control Module	√	√	√		√	
2018	Buick	Envision	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Buick	Envision	Right Side Object Detection Control Module	√	√	√		√	
2018	Buick	Envision	Active Safety Control Module	√	√	√	√	√	
2018	Buick	Envision	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2018	Buick	Envision	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Buick	Envision	Video Processing Control Module	√	√	√	√	√	

2018	Buick	Envision	Amplifier	√	√	√	√		
2018	Buick	Envision	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Buick	Envision	Radio Controls	√	√	√	√		0241
2018	Buick	Envision	Navigation Control Module	√	√	√	√	√	
2018	Buick	Envision	Radio	√	√	√	√	√	0226 0150
2018	Buick	Envision	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2018	Buick	Envision	Power Steering Control Module	√	√	√	√		0081 0080 0089
2018	Buick	Envision	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Buick	Envision	Suspension Control Module	√	√	√	√	√	
2018	Buick	Envision	Passenger Presence Module	√	√	√	√	√	0057
2018	Buick	Envision	Accessory DC/AC Power Inverter Module	√	√	√	√	√	
2018	Buick	Envision	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2018	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0006 0756 0005 0006
2018	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2018	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0247
2018	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Buick	LaCrosse	HVAC Controls	√	√	√	√	√	
2018	Buick	LaCrosse	Serial Data Gateway Module	√	√	√			
2018	Buick	LaCrosse	Chassis Control Module	√	√	√	√	√	0014 0078
2018	Buick	LaCrosse	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2018	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Buick	LaCrosse	Power Steering Control Module	√	√	√	√		0081 0080 0089
2018	Buick	LaCrosse	Suspension Control Module	√	√	√	√	√	
2018	Buick	LaCrosse	Brake Booster Control Module	√	√	√	√		
2018	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√		√	
2018	Buick	LaCrosse	Right Side Object Detection Control Module	√	√	√		√	
2018	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2018	Buick	LaCrosse	Passenger Presence Module	√	√	√	√	√	0057
2018	Buick	LaCrosse	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Buick	LaCrosse	Radio	√	√	√	√	√	0226 0150

2018	Buick	LaCrosse	Amplifier	√	√	√	√		
2018	Buick	LaCrosse	Radio Controls	√	√	√	√		0241
2018	Buick	LaCrosse	Media Disc Player	√	√	√	√	√	
2018	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0436 0263
2018	Buick	LaCrosse	Hybrid Powertrain Control Module 2	√	√	√	√	√	0202 0218
2018	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2018	Buick	LaCrosse	Active Safety Control Module	√	√	√	√	√	
2018	Buick	LaCrosse	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Buick	LaCrosse	Video Processing Control Module	√	√	√	√	√	
2018	Buick	LaCrosse	Frontview Camera Module	√	√	√	√		0196
2018	Buick	LaCrosse	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2018	Buick	LaCrosse	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2018	Buick	Regal	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0036 0130 0255 0005
2018	Buick	Regal	Transmission Control Module	√	√	√	√	√	0020 0084 0017
2018	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2018	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Buick	Regal	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Buick	Regal	Instrument Cluster	√	√	√	√	√	0247
2018	Buick	Regal	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Buick	Regal	HVAC Controls	√	√	√	√	√	
2018	Buick	Regal	Serial Data Gateway Module	√	√	√			
2018	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Buick	Regal	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Buick	Regal	Radio Controls	√	√	√	√		0241
2018	Buick	Regal	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Buick	Regal	Chassis Control Module	√	√	√	√	√	0014 0078
2018	Buick	Regal	Active Safety Control Module	√	√	√	√		
2018	Buick	Regal	Frontview Camera Module	√	√	√	√		0196
2018	Buick	Regal	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Buick	Regal	Left Side Object Detection Control Module	√	√	√		√	
2018	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Buick	Regal	Amplifier	√	√	√	√		
2018	Buick	Regal	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2018	Buick	Regal	Radio	√	√	√	√	√	0226 0150 0269 0267
2018	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	0003

2018	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	0759
2018	Buick	Regal	Passenger Presence Module	√	√	√	√	√	0057
2018	Buick	Regal	Headlamp Control Module	√	√	√	√	√	0195
2018	Buick	Regal	Power Steering Control Module	√	√	√	√		0081 0080 0089
2018	Buick	Regal	Suspension Control Module	√	√	√	√	√	
2018	Buick	Regal	Steering Column Lock Control Module	√	√	√	√		
2018	Buick	Regal	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Buick	Regal	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	Buick	Verano	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Buick	Verano	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0160 0333 0150
2018	Buick	Verano	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Buick	Verano	Active Safety Control Module	√	√	√	√	√	
2018	Buick	Verano	Frontview Camera Module	√	√	√	√		0205 0196
2018	Buick	Verano	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Cadillac	ATS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0020 0756 0085
2018	Cadillac	ATS	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2018	Cadillac	ATS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2018	Cadillac	ATS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Cadillac	ATS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Cadillac	ATS	Instrument Cluster	√	√	√	√	√	0247
2018	Cadillac	ATS	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Cadillac	ATS	Radio/HVAC Controls	√	√	√	√	√	
2018	Cadillac	ATS	Serial Data Gateway Module	√	√	√			
2018	Cadillac	ATS	Headlamp Control Module	√	√	√	√	√	0195
2018	Cadillac	ATS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Cadillac	ATS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	Cadillac	ATS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Cadillac	ATS	Transfer Case Control Module	√	√	√	√	√	0099 0100 07B0
2018	Cadillac	ATS	Left Side Object Detection Control Module	√	√	√		√	

2018	Cadillac	ATS	Right Side Object Detection Control Module	√	√	√		√	
2018	Cadillac	ATS	Pedestrian Impact Detection Module	√	√	√	√		0170
2018	Cadillac	ATS	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2018	Cadillac	ATS	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2018	Cadillac	ATS	Passenger Presence Module	√	√	√	√		0057
2018	Cadillac	ATS	Keyless Entry Control Module	√	√	√	√	√	
2018	Cadillac	ATS	Steering Column Lock Control Module	√	√	√	√		
2018	Cadillac	ATS	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2018	Cadillac	ATS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Cadillac	ATS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2018	Cadillac	ATS	Active Safety Control Module	√	√	√	√	√	
2018	Cadillac	ATS	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Cadillac	ATS	Left Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	ATS	Right Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	ATS	Rear Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	ATS	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2018	Cadillac	ATS	Amplifier	√	√	√	√		
2018	Cadillac	ATS	Media Disc Player	√	√	√	√	√	
2018	Cadillac	ATS	Navigation Control Module	√	√	√	√	√	
2018	Cadillac	ATS	Vehicle Performance Data Recorder	√	√	√	√		
2018	Cadillac	ATS	Radio	√	√	√	√	√	0226 0267 0269
2018	Cadillac	ATS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2018	Cadillac	ATS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2018	Cadillac	ATS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Cadillac	ATS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2018	Cadillac	ATS	Parking Brake Control Module	√	√	√	√	√	0229
2018	Cadillac	CT6	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0147 0176 0086 0217 0258 0263 0236 0212 0076 0115 0154 0214 0006 0144 0139 0238 0256 0085
2018	Cadillac	CT6	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2018	Cadillac	CT6	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2018	Cadillac	CT6	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Cadillac	CT6	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Cadillac	CT6	Instrument Cluster	√	√	√	√	√	0247

2018	Cadillac	CT6	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Cadillac	CT6	HVAC Controls	√	√	√	√	√	
2018	Cadillac	CT6	Serial Data Gateway Module	√	√	√			
2018	Cadillac	CT6	Frontview Camera Module	√	√	√	√	√	0247 0196
2018	Cadillac	CT6	Headlamp Control Module	√	√	√	√	√	0195
2018	Cadillac	CT6	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Cadillac	CT6	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Cadillac	CT6	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Cadillac	CT6	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	Cadillac	CT6	Seat Memory Control Module - Right Rear	√	√	√	√	√	
2018	Cadillac	CT6	Seat Memory Control Module - Left Rear	√	√	√	√	√	
2018	Cadillac	CT6	Battery Energy Control Module	√			√		
2018	Cadillac	CT6	Electric A/C Compressor Control Module	√					
2018	Cadillac	CT6	Hybrid Powertrain Control Module 2	√	√	√	√	√	0125 0056 0218 0122
2018	Cadillac	CT6	Brake Booster Control Module	√	√	√	√		
2018	Cadillac	CT6	Power Steering Control Module	√	√	√	√		0081 0080 0089
2018	Cadillac	CT6	Rear Wheel Steering Control Module	√	√	√	√		
2018	Cadillac	CT6	Suspension Control Module	√	√	√	√	√	0245
2018	Cadillac	CT6	Drive Motor Control Module 1	√	√	√	√		
2018	Cadillac	CT6	Drive Motor Control Module 2	√	√	√	√		
2018	Cadillac	CT6	Hybrid Powertrain Control Module	√	√	√	√	√	0018
2018	Cadillac	CT6	Amplifier	√	√	√	√		
2018	Cadillac	CT6	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Cadillac	CT6	Radio Controls	√	√	√	√		0241
2018	Cadillac	CT6	Media Disc Player	√	√	√	√	√	
2018	Cadillac	CT6	Navigation Control Module	√	√	√	√	√	
2018	Cadillac	CT6	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2018	Cadillac	CT6	Radio	√	√	√	√	√	0226 0150
2018	Cadillac	CT6	Infotainment Control Touchpad	√	√	√	√	√	
2018	Cadillac	CT6	Left Side Object Detection Control Module	√	√	√		√	
2018	Cadillac	CT6	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Cadillac	CT6	Transfer Case Control Module	√	√	√	√	√	0037 0099
2018	Cadillac	CT6	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2018	Cadillac	CT6	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2018	Cadillac	CT6	Passenger Presence Module	√	√	√	√	√	0057
2018	Cadillac	CT6	Keyless Entry Control Module	√	√	√	√	√	
2018	Cadillac	CT6	Steering Column Lock Control Module	√	√	√	√		
2018	Cadillac	CT6	Active Safety Control Module	√	√	√	√	√	
2018	Cadillac	CT6	Video Processing Control Module	√	√	√	√	√	
2018	Cadillac	CT6	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Cadillac	CT6	Left Front Short Range Radar Sensor Module	√	√	√			

2018	Cadillac	CT6	Right Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	CT6	Rear Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	CT6	Night Vision Camera Control Module	√	√	√	√		0492
2018	Cadillac	CT6	Driver Monitoring System Control Module	√	√	√	√	√	
2018	Cadillac	CT6	Multi-Axis Acceleration Sensor 1	√	√	√			
2018	Cadillac	CT6	Multi-Axis Acceleration Sensor 2	√	√	√			
2018	Cadillac	CT6	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Cadillac	CT6	Rear Middle Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	CT6	Active Safety Control Module 1 - Processor A	√	√	√	√		0794 0268
2018	Cadillac	CT6	Active Safety Control Module 1 - Processor B	√	√	√	√		0111 0268
2018	Cadillac	CT6	Active Safety Control Module 1 - Processor C	√	√	√	√		0268
2018	Cadillac	CT6	Multifunction Energy Storage Capacitor Control	√	√	√	√	√	0151 0244
2018	Cadillac	CT6	Active Safety Control Module 2 - Processor A	√	√	√	√		0794 0268
2018	Cadillac	CT6	Active Safety Control Module 2 - Processor B	√	√	√	√		0111 0268
2018	Cadillac	CT6	Active Safety Control Module 2 - Processor C	√	√	√	√		0268
2018	Cadillac	CT6	Right Rear Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	CT6	Left Rear Radar Short Range Sensor Module	√	√	√			
2018	Cadillac	CT6	Accessory DC/AC Power Inverter Module	√	√	√	√	√	
2018	Cadillac	CT6	Digital Map Control Module	√	√	√	√		
2018	Cadillac	CTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0756 0085 0030 0131
2018	Cadillac	CTS	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017 0021
2018	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2018	Cadillac	CTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Cadillac	CTS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Cadillac	CTS	Instrument Cluster	√	√	√	√	√	0247
2018	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Cadillac	CTS	Radio/HVAC Controls	√	√	√	√	√	
2018	Cadillac	CTS	Serial Data Gateway Module	√	√	√			
2018	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	0195
2018	Cadillac	CTS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Cadillac	CTS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	Cadillac	CTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310



2018	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	0099 0100 07B0
2018	Cadillac	CTS	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2018	Cadillac	CTS	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2018	Cadillac	CTS	Keyless Entry Control Module	√	√	√	√	√	
2018	Cadillac	CTS	Passenger Presence Module	√	√	√	√		0057
2018	Cadillac	CTS	Steering Column Lock Control Module	√	√	√	√		
2018	Cadillac	CTS	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2018	Cadillac	CTS	Left Side Object Detection Control Module	√	√	√		√	
2018	Cadillac	CTS	Right Side Object Detection Control Module	√	√	√		√	
2018	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√		0170
2018	Cadillac	CTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Cadillac	CTS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2018	Cadillac	CTS	Active Safety Control Module	√	√	√	√	√	
2018	Cadillac	CTS	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2018	Cadillac	CTS	Left Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	CTS	Right Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	CTS	Rear Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	CTS	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Cadillac	CTS	Video Processing Control Module	√	√	√	√	√	
2018	Cadillac	CTS	Active Safety External Communication Control	√	√	√	√		
2018	Cadillac	CTS	Amplifier	√	√	√	√		
2018	Cadillac	CTS	Navigation Control Module	√	√	√	√	√	
2018	Cadillac	CTS	Vehicle Performance Data Recorder	√	√	√	√		
2018	Cadillac	CTS	Radio	√	√	√	√	√	0226 0267 0269
2018	Cadillac	CTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2018	Cadillac	CTS	Parking Brake Control Module	√	√	√	√	√	0229
2018	Cadillac	CTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Cadillac	CTS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2018	Cadillac	CTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2018	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2018	Cadillac	Escalade	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2018	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2018	Cadillac	Escalade	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0159

2018	Cadillac	Escalade	Instrument Cluster	√	√	√	√	√	0247
2018	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Cadillac	Escalade	Radio/HVAC Controls	√	√	√	√	√	
2018	Cadillac	Escalade	Serial Data Gateway Module	√	√	√			
2018	Cadillac	Escalade	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Cadillac	Escalade	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Cadillac	Escalade	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	Cadillac	Escalade	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Cadillac	Escalade	Keyless Entry Control Module	√	√	√	√	√	
2018	Cadillac	Escalade	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2018	Cadillac	Escalade	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2018	Cadillac	Escalade	Passenger Presence Module	√	√	√	√	√	0057
2018	Cadillac	Escalade	Steering Column Lock Control Module	√	√	√	√		
2018	Cadillac	Escalade	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Cadillac	Escalade	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Cadillac	Escalade	Left Side Object Detection Control Module	√	√	√		√	
2018	Cadillac	Escalade	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	Cadillac	Escalade	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2018	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	0037
2018	Cadillac	Escalade	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2018	Cadillac	Escalade	Power Steering Control Module	√	√	√	√	√	0150
2018	Cadillac	Escalade	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Cadillac	Escalade	Suspension Control Module	√	√	√	√	√	0245
2018	Cadillac	Escalade	Left Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	Escalade	Left Rear Radar Short Range Sensor Module	√	√	√			
2018	Cadillac	Escalade	Right Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	Escalade	Right Rear Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	Escalade	Active Safety Control Module	√	√	√	√	√	
2018	Cadillac	Escalade	Video Processing Control Module	√	√	√	√	√	
2018	Cadillac	Escalade	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Cadillac	Escalade	Frontview Camera Module	√	√	√	√	√	0196 0205
2018	Cadillac	Escalade	Amplifier	√	√	√	√		
2018	Cadillac	Escalade	Assist Step Control Module	√	√	√	√	√	
2018	Cadillac	Escalade	Media Disc Player	√	√	√	√	√	
2018	Cadillac	Escalade	Radio	√	√	√	√	√	0226 0150
2018	Cadillac	Escalade	Parking Brake Control Module	√	√	√	√	√	0229
2018	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2018	Cadillac	Escalade ESV	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017

2018	Cadillac	Escalade ESV	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2018	Cadillac	Escalade ESV	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Cadillac	Escalade ESV	Instrument Cluster	√	√	√	√	√	0247
2018	Cadillac	Escalade ESV	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Cadillac	Escalade ESV	HVAC Controls	√	√	√	√	√	
2018	Cadillac	Escalade ESV	Serial Data Gateway Module	√	√	√			
2018	Cadillac	Escalade ESV	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Cadillac	Escalade ESV	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Cadillac	Escalade ESV	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	Cadillac	Escalade ESV	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Cadillac	Escalade ESV	Passenger Presence Module	√	√	√	√	√	0057
2018	Cadillac	Escalade ESV	Keyless Entry Control Module	√	√	√	√	√	
2018	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2018	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2018	Cadillac	Escalade ESV	Steering Column Lock Control Module	√	√	√	√		
2018	Cadillac	Escalade ESV	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Cadillac	Escalade ESV	Left Side Object Detection Control Module	√	√	√		√	
2018	Cadillac	Escalade ESV	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Cadillac	Escalade ESV	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	Cadillac	Escalade ESV	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2018	Cadillac	Escalade ESV	Power Steering Control Module	√	√	√	√	√	0150
2018	Cadillac	Escalade ESV	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Cadillac	Escalade ESV	Suspension Control Module	√	√	√	√	√	0245
2018	Cadillac	Escalade ESV	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2018	Cadillac	Escalade ESV	Transfer Case Control Module	√	√	√	√	√	0037
2018	Cadillac	Escalade ESV	Left Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	Escalade ESV	Left Rear Radar Short Range Sensor Module	√	√	√			
2018	Cadillac	Escalade ESV	Right Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	Escalade ESV	Right Rear Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	Escalade ESV	Active Safety Control Module	√	√	√	√	√	
2018	Cadillac	Escalade ESV	Video Processing Control Module	√	√	√	√	√	
2018	Cadillac	Escalade ESV	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Cadillac	Escalade ESV	Frontview Camera Module	√	√	√	√	√	0205 0196
2018	Cadillac	Escalade ESV	Amplifier	√	√	√	√		
2018	Cadillac	Escalade ESV	Assist Step Control Module	√	√	√	√	√	
2018	Cadillac	Escalade ESV	Radio Controls	√	√	√	√		0241
2018	Cadillac	Escalade ESV	Media Disc Player	√	√	√	√	√	

2018	Cadillac	Escalade ESV	Radio	√	√	√	√	√	0226 0150
2018	Cadillac	Escalade ESV	Parking Brake Control Module	√	√	√	√	√	0229
2018	Cadillac	XT5	Engine Control Module	√	√	√	√	√	0263 0156 0209 0006 0115 0756 0086 0085 0154 0217 0258 0236
2018	Cadillac	XT5	Transmission Control Module	√	√	√	√	√	0020 0084
2018	Cadillac	XT5	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2018	Cadillac	XT5	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Cadillac	XT5	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Cadillac	XT5	Instrument Cluster	√	√	√	√	√	0247
2018	Cadillac	XT5	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Cadillac	XT5	HVAC Controls	√	√	√	√	√	
2018	Cadillac	XT5	Serial Data Gateway Module	√	√	√			
2018	Cadillac	XT5	Headlamp Control Module	√	√	√	√	√	0195
2018	Cadillac	XT5	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Cadillac	XT5	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Cadillac	XT5	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Cadillac	XT5	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2018	Cadillac	XT5	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2018	Cadillac	XT5	Keyless Entry Control Module	√	√	√	√	√	
2018	Cadillac	XT5	Passenger Presence Module	√	√	√	√	√	0057
2018	Cadillac	XT5	Steering Column Lock Control Module	√	√	√	√		
2018	Cadillac	XT5	Left Side Object Detection Control Module	√	√	√		√	
2018	Cadillac	XT5	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Cadillac	XT5	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2018	Cadillac	XT5	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	Cadillac	XT5	Chassis Control Module	√	√	√	√	√	0014 0078
2018	Cadillac	XT5	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2018	Cadillac	XT5	Amplifier	√	√	√	√		
2018	Cadillac	XT5	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Cadillac	XT5	Radio Controls	√	√	√	√		0241
2018	Cadillac	XT5	Radio	√	√	√	√	√	0226 0150
2018	Cadillac	XT5	Active Safety Control Module	√	√	√	√		
2018	Cadillac	XT5	Frontview Camera Module	√	√	√	√		0196
2018	Cadillac	XT5	Left Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	XT5	Right Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	XT5	Rear Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	XT5	Long Range Radar Sensor Module	√	√	√	√		0260

2018	Cadillac	XT5	Video Processing Control Module	√	√	√	√	√	
2018	Cadillac	XT5	Suspension Control Module	√	√	√	√	√	
2018	Cadillac	XT5	Power Steering Control Module	√	√	√	√	√	0089 0084
2018	Cadillac	XT5	Media Disc Player	√	√	√	√	√	
2018	Cadillac	XTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2018	Cadillac	XTS	Transmission Control Module	√	√	√	√	√	0016
2018	Cadillac	XTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2018	Cadillac	XTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Cadillac	XTS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0158
2018	Cadillac	XTS	Instrument Cluster	√	√	√	√	√	0247
2018	Cadillac	XTS	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Cadillac	XTS	Radio/HVAC Controls	√	√	√	√	√	
2018	Cadillac	XTS	Serial Data Gateway Module	√	√	√			
2018	Cadillac	XTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Cadillac	XTS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	Cadillac	XTS	Headlamp Control Module	√	√	√	√	√	0195
2018	Cadillac	XTS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048
2018	Cadillac	XTS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2018	Cadillac	XTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Cadillac	XTS	Right Side Object Detection Control Module	√	√	√		√	
2018	Cadillac	XTS	Left Side Object Detection Control Module	√	√	√		√	
2018	Cadillac	XTS	Active Safety Control Module	√	√	√	√	√	
2018	Cadillac	XTS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2018	Cadillac	XTS	Left Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	XTS	Left Rear Radar Short Range Sensor Module	√	√	√			
2018	Cadillac	XTS	Right Front Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	XTS	Right Rear Short Range Radar Sensor Module	√	√	√			
2018	Cadillac	XTS	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Cadillac	XTS	Video Processing Control Module	√	√	√	√	√	
2018	Cadillac	XTS	Keyless Entry Control Module	√	√	√	√	√	
2018	Cadillac	XTS	Passenger Presence Module	√	√	√	√		0057
2018	Cadillac	XTS	Amplifier	√	√	√	√		
2018	Cadillac	XTS	Radio	√	√	√	√	√	0226 0267 0269
2018	Cadillac	XTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2018	Cadillac	XTS	Parking Brake Control Module	√	√	√	√	√	0229
2018	Cadillac	XTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Cadillac	XTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245

2018	Cadillac	XTS	Rear Differential Clutch Control Module	√	√	√	√	√	
2018	Cadillac	XTS	Power Steering Control Module	√	√	√	√	√	0089
2018	Cadillac	XTS	Rear Audio Control Module	√	√	√	√	√	
2018	Chevrolet	Aveo	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006 0144 0258 0139 0147 0068 0218 0148
2018	Chevrolet	Aveo	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2018	Chevrolet	Aveo	Electronic Brake Control Module	√	√	√	√	√	0090 0111
2018	Chevrolet	Aveo	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0261
2018	Chevrolet	Aveo	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0168 0233 0168
2018	Chevrolet	Aveo	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Aveo	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Chevrolet	Aveo	Radio/HVAC Controls	√	√	√	√	√	0150
2018	Chevrolet	Aveo	Serial Data Gateway Module	√	√	√			
2018	Chevrolet	Aveo	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Chevrolet	Aveo	Keyless Entry Control Module	√	√	√	√	√	
2018	Chevrolet	Aveo	Chassis Control Module	√	√	√	√	√	0217
2018	Chevrolet	Aveo	Front Seat Heating Control Module	√	√	√	√	√	
2018	Chevrolet	Aveo	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	Aveo	Radio	√	√	√	√	√	
2018	Chevrolet	Aveo	Power Steering Control Module	√	√	√	√		0207 0081 0089
2018	Chevrolet	Aveo	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Chevrolet	Beat	Engine Control Module	√	√	√	√	√	0133 0210 0098 0096 0094 0216 0143 0265 0393 0173 0149 0069 0087 0209 0156 0147 0017
2018	Chevrolet	Beat	Electronic Brake Control Module	√	√	√	√	√	0090
2018	Chevrolet	Beat	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2018	Chevrolet	Beat	Instrument Cluster	√	√	√	√	√	
2018	Chevrolet	Beat	Keyless Entry Control Module				√		
2018	Chevrolet	Beat	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Chevrolet	Beat	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2018	Chevrolet	Beat	Power Steering Control Module	√	√	√	√		0089
2018	Chevrolet	Beat	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Chevrolet	Beat	Fuel Injector Control Module	√	√	√	√	√	
2018	Chevrolet	Beat	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2018	Chevrolet	Beat	Radio	√	√	√	√	√	0226
2018	Chevrolet	Bolt	Engine Control Module	√	√	√	√	√	0258

2018	Chevrolet	Bolt	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229
2018	Chevrolet	Bolt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Chevrolet	Bolt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Chevrolet	Bolt	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Bolt	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Chevrolet	Bolt	Serial Data Gateway Module	√	√	√			
2018	Chevrolet	Bolt	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Chevrolet	Bolt	Electric A/C Compressor Control Module	√					
2018	Chevrolet	Bolt	Battery Energy Control Module	√			√		
2018	Chevrolet	Bolt	Hybrid Powertrain Control Module 2	√	√	√	√	√	0125 0262 0079 0122 0123 0127
2018	Chevrolet	Bolt	Power Line Communication Module	√			√		
2018	Chevrolet	Bolt	Hybrid Powertrain Control Module	√	√	√	√	√	0018
2018	Chevrolet	Bolt	Chassis Control Module	√	√	√	√	√	0014 0078
2018	Chevrolet	Bolt	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2018	Chevrolet	Bolt	Left Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Bolt	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	Bolt	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	Chevrolet	Bolt	Brake Booster Control Module	√	√	√	√		
2018	Chevrolet	Bolt	Power Steering Control Module	√	√	√	√		0089 0084
2018	Chevrolet	Bolt	Radio	√	√	√	√	√	
2018	Chevrolet	Bolt	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2018	Chevrolet	Bolt	Frontview Camera Module	√	√	√	√	√	0196 0247
2018	Chevrolet	Bolt	Video Processing Control Module	√	√	√	√	√	
2018	Chevrolet	Bolt	Keyless Entry Control Module	√	√	√	√	√	
2018	Chevrolet	Bolt	Passenger Presence Module	√	√	√	√	√	0057
2018	Chevrolet	Camaro	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0756 0085 0020 0131
2018	Chevrolet	Camaro	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2018	Chevrolet	Camaro	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229
2018	Chevrolet	Camaro	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2018	Chevrolet	Camaro	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Chevrolet	Camaro	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Camaro	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Chevrolet	Camaro	HVAC Controls	√	√	√	√	√	
2018	Chevrolet	Camaro	Serial Data Gateway Module	√	√	√			
2018	Chevrolet	Camaro	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Chevrolet	Camaro	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Chevrolet	Camaro	Folding Top Control Module	√	√	√	√	√	
2018	Chevrolet	Camaro	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	Camaro	Left Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Camaro	Right Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Camaro	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2018	Chevrolet	Camaro	Steering Column Lock Control Module	√	√	√	√		
2018	Chevrolet	Camaro	Keyless Entry Control Module	√	√	√	√	√	
2018	Chevrolet	Camaro	Passenger Presence Module	√	√	√	√	√	0057
2018	Chevrolet	Camaro	Amplifier	√	√	√	√		
2018	Chevrolet	Camaro	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Chevrolet	Camaro	Radio Controls	√	√	√	√		0241
2018	Chevrolet	Camaro	Navigation Control Module	√	√	√	√	√	
2018	Chevrolet	Camaro	Vehicle Performance Data Recorder	√	√	√	√		
2018	Chevrolet	Camaro	Radio	√	√	√	√	√	0226 0150
2018	Chevrolet	Camaro	Active Safety Control Module	√	√	√	√	√	
2018	Chevrolet	Camaro	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2018	Chevrolet	Camaro	Left Front Short Range Radar Sensor Module	√	√	√			
2018	Chevrolet	Camaro	Right Front Short Range Radar Sensor Module	√	√	√			
2018	Chevrolet	Camaro	Rear Short Range Radar Sensor Module	√	√	√			
2018	Chevrolet	Camaro	Parking Brake Control Module	√	√	√	√	√	0229
2018	Chevrolet	Camaro	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2018	Chevrolet	Camaro	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Chevrolet	Camaro	Suspension Control Module	√	√	√	√	√	0245



2018	Chevrolet	Captiva	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0156 0222 0066 0147 0115 0060 079A 0044 0045 0086 0097 0221 0792 0217 0109 0068 0084 0070 0071 0074 0075 0117 0043 0173 0179 0181 0183 0185 0232 0209 0098 0216 0449 0143 0450 0265 0108 0452 0237 0135 0453 0454 0455 0456
2018	Chevrolet	Captiva	Transmission Control Module	√	√	√	√	√	0020 0084 0017 0036
2018	Chevrolet	Captiva	Electronic Brake Control Module	√	√	√	√	√	0090 0111
2018	Chevrolet	Captiva	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2018	Chevrolet	Captiva	Body Control Module	√	√	√	√	√	0242 0263 0261
2018	Chevrolet	Captiva	Theft Deterrent Module	√	√	√	√		
2018	Chevrolet	Captiva	Instrument Cluster	√	√	√	√	√	
2018	Chevrolet	Captiva	HVAC Control Module	√	√	√		√	
2018	Chevrolet	Captiva	Headlamp Control Module	√	√	√	√	√	0195 0065
2018	Chevrolet	Captiva	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Chevrolet	Captiva	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2018	Chevrolet	Captiva	Left Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Captiva	Right Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Captiva	Chassis Control Module	√	√	√	√	√	0217
2018	Chevrolet	Captiva	Parking Brake Control Module	√	√	√	√	√	0229
2018	Chevrolet	Captiva	Power Steering Control Module	√	√	√	√		0081 0080 0089
2018	Chevrolet	Captiva	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160 079B 0233 0110
2018	Chevrolet	Captiva	Radio	√	√	√	√	√	
2018	Chevrolet	Captiva	Auxiliary Body Control Module	√	√	√	√	√	0050
2018	Chevrolet	Cavalier	Engine Control Module	√	√	√	√	√	0156 0020 0140 0263
2018	Chevrolet	Cavalier	Transmission Control Module	√	√	√	√	√	0017
2018	Chevrolet	Cavalier	Electronic Brake Control Module	√	√	√	√	√	0090
2018	Chevrolet	Cavalier	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√		0111
2018	Chevrolet	Cavalier	Body Control Module	√	√	√	√	√	
2018	Chevrolet	Cavalier	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Cavalier	Serial Data Gateway Module	√	√	√	√		
2018	Chevrolet	Cavalier	Radio	√	√	√	√	√	
2018	Chevrolet	Cavalier	Parking Assist Control Module	√	√	√	√		
2018	Chevrolet	Cavalier	Power Supply Transformer	√	√	√	√	√	
2018	Chevrolet	Cavalier	Steering Wheel Angle Sensor Module	√	√	√			0093 0090

2018	Chevrolet	Cavalier	Power Steering Control Module	√	√	√	√		0081 0080 0089
2018	Chevrolet	Cavalier	Radio Controls	√	√	√	√	√	
2018	Chevrolet	City Express	Engine Control Module	√	√	√	√	√	0217 0067 0140
2018	Chevrolet	City Express	Transmission Control Module	√	√	√	√		0276 0036
2018	Chevrolet	City Express	Electronic Brake Control Module	√	√	√	√	√	0090 0111
2018	Chevrolet	City Express	Inflatable Restraint Sensing and Diagnostic Module		√	√			
2018	Chevrolet	City Express	Body Control Module	√	√	√	√	√	0041
2018	Chevrolet	City Express	Instrument Cluster		√	√	√		
2018	Chevrolet	City Express	Power Steering Control Module	√	√	√	√		
2018	Chevrolet	City Express	Tire Pressure Indicator Module	√	√	√	√	√	0160
2018	Chevrolet	City Express	Passenger Presence Module						0057
2018	Chevrolet	City Express	Underhood Fuse Block	√	√	√	√	√	
2018	Chevrolet	Cobalt	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139
2018	Chevrolet	Cobalt	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Chevrolet	Cobalt	Electronic Brake Control Module	√	√	√	√	√	0090
2018	Chevrolet	Cobalt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Chevrolet	Cobalt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Chevrolet	Cobalt	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Cobalt	Serial Data Gateway Module	√	√	√			
2018	Chevrolet	Cobalt	Telematics Communication Interface Control Module	√	√	√	√	√	
2018	Chevrolet	Cobalt	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	Cobalt	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Chevrolet	Cobalt	Radio	√	√	√	√	√	0226
2018	Chevrolet	Cobalt	Front Seat Heating Control Module	√	√	√	√	√	
2018	Chevrolet	Cobalt	Power Steering Control Module	√	√	√	√		0207
2018	Chevrolet	Cobalt	Frontview Camera Module	√	√	√	√	√	0205 0196 075A

2018	Chevrolet	Colorado	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0210 0224 0130 0222 0066 0147 0060 079A 0044 0045 0097 0221 0792 0109 0068 0084 0070 0071 0074 0075 0117 0043 0173 0179 0181 0183 0185 0232 076D 0171 0219 0072 0073 0119 077E 0178 0180 0182
2018	Chevrolet	Colorado	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2018	Chevrolet	Colorado	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0112
2018	Chevrolet	Colorado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Chevrolet	Colorado	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Chevrolet	Colorado	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Colorado	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Chevrolet	Colorado	HVAC Controls	√	√	√	√	√	
2018	Chevrolet	Colorado	Serial Data Gateway Module	√	√	√			
2018	Chevrolet	Colorado	Radio	√	√	√	√	√	0226 0150
2018	Chevrolet	Colorado	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Chevrolet	Colorado	Radio Controls	√	√	√	√		0241
2018	Chevrolet	Colorado	Amplifier	√	√	√	√		
2018	Chevrolet	Colorado	Frontview Camera Module	√	√	√	√	√	0205 0196
2018	Chevrolet	Colorado	Transfer Case Control Module	√	√	√	√	√	0037
2018	Chevrolet	Colorado	Passenger Presence Module	√	√	√	√	√	0057
2018	Chevrolet	Colorado	Power Steering Control Module	√	√	√	√		0093 0090
2018	Chevrolet	Colorado	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2018	Chevrolet	Colorado	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Chevrolet	Colorado	Left Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Colorado	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	Colorado	Right Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Colorado	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Chevrolet	Colorado	Trailer Lighting Control Module	√	√	√	√	√	0247

2018	Chevrolet	Corvette	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2018	Chevrolet	Corvette	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2018	Chevrolet	Corvette	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229
2018	Chevrolet	Corvette	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2018	Chevrolet	Corvette	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0158
2018	Chevrolet	Corvette	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Corvette	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Chevrolet	Corvette	Radio/HVAC Controls	√	√	√	√	√	
2018	Chevrolet	Corvette	Serial Data Gateway Module	√	√	√			
2018	Chevrolet	Corvette	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Chevrolet	Corvette	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	Chevrolet	Corvette	Liftgate Control Module	√	√	√	√	√	
2018	Chevrolet	Corvette	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Chevrolet	Corvette	Inside Rearview Mirror	√	√	√	√	√	
2018	Chevrolet	Corvette	Folding Top Control Module	√	√	√	√	√	
2018	Chevrolet	Corvette	Passenger Presence Module	√	√	√	√	√	0057
2018	Chevrolet	Corvette	Keyless Entry Control Module	√	√	√	√	√	
2018	Chevrolet	Corvette	Steering Column Lock Control Module	√	√	√	√		
2018	Chevrolet	Corvette	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2018	Chevrolet	Corvette	Video Processing Control Module	√	√	√	√	√	
2018	Chevrolet	Corvette	Amplifier	√	√	√	√		
2018	Chevrolet	Corvette	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Chevrolet	Corvette	Vehicle Performance Data Recorder	√	√	√	√		
2018	Chevrolet	Corvette	Radio	√	√	√	√	√	0226 0150
2018	Chevrolet	Corvette	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2018	Chevrolet	Corvette	Parking Brake Control Module	√	√	√	√	√	0229
2018	Chevrolet	Corvette	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2018	Chevrolet	Corvette	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Chevrolet	Corvette	Suspension Control Module	√	√	√	√	√	0245

2018	Chevrolet	Cruze	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0222 076D 0060 079A 0044 0045 0097 0171 0219 0792 0109 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0210 0224 0130 0066 0147 0068 0043 0173
2018	Chevrolet	Cruze	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Chevrolet	Cruze	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2018	Chevrolet	Cruze	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Chevrolet	Cruze	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Chevrolet	Cruze	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Cruze	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Chevrolet	Cruze	HVAC Controls	√	√	√	√	√	
2018	Chevrolet	Cruze	Serial Data Gateway Module	√	√	√			
2018	Chevrolet	Cruze	Power Steering Control Module	√	√	√	√		0081 0080 0089
2018	Chevrolet	Cruze	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Chevrolet	Cruze	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Chevrolet	Cruze	Power Supply Transformer	√	√	√	√		
2018	Chevrolet	Cruze	Left Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Cruze	Right Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Cruze	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	Cruze	Keyless Entry Control Module	√	√	√	√	√	
2018	Chevrolet	Cruze	Steering Column Lock Control Module	√	√	√	√		
2018	Chevrolet	Cruze	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	Chevrolet	Cruze	Amplifier	√	√	√	√		
2018	Chevrolet	Cruze	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Chevrolet	Cruze	Radio Controls	√	√	√	√		0241
2018	Chevrolet	Cruze	Radio	√	√	√	√	√	0226 0150
2018	Chevrolet	Cruze	Navigation Control Module	√	√	√	√	√	
2018	Chevrolet	Cruze	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Chevrolet	Cruze	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2018	Chevrolet	Cruze	Passenger Presence Module	√	√	√	√		0057

2018	Chevrolet	Cruze	Mobile Telephone Control Module	√	√	√	√	√	0247
2018	Chevrolet	Cruze	Front Seat Heating Control Module	√	√	√	√	√	
2018	Chevrolet	Cruze	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2018	Chevrolet	Cruze	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Chevrolet	Cruze	Fuel Injector Control Module	√			√	√	
2018	Chevrolet	Cruze	Multimedia Player Interface Module	√	√	√	√		0247
2018	Chevrolet	Damas	Engine Control Module	√	√	√	√	√	0069 0087
2018	Chevrolet	Damas	Fuel Injector Control Module	√	√	√	√	√	
2018	Chevrolet	Damas	Tire Pressure Indicator Module	√	√	√	√		079D 0234
2018	Chevrolet	Equinox	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0222 076D 0060 079A 0044 0045 0097 0171 0219 0792 0109 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0210 0224 0130 0066 0147 0068 0043 0173
2018	Chevrolet	Equinox	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Chevrolet	Equinox	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0229 0111
2018	Chevrolet	Equinox	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Chevrolet	Equinox	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Chevrolet	Equinox	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Equinox	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Chevrolet	Equinox	HVAC Controls	√	√	√	√	√	
2018	Chevrolet	Equinox	Serial Data Gateway Module	√	√	√			
2018	Chevrolet	Equinox	Frontview Camera Module	√	√	√	√	√	0247 0205 0196 075A
2018	Chevrolet	Equinox	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Chevrolet	Equinox	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Chevrolet	Equinox	Active Safety Control Module	√	√	√	√	√	
2018	Chevrolet	Equinox	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Chevrolet	Equinox	Video Processing Control Module	√	√	√	√	√	
2018	Chevrolet	Equinox	Keyless Entry Control Module	√	√	√	√	√	
2018	Chevrolet	Equinox	Passenger Presence Module	√	√	√	√	√	0057
2018	Chevrolet	Equinox	Amplifier	√	√	√	√		

2018	Chevrolet	Equinox	Radio Controls	√	√	√	√		0241
2018	Chevrolet	Equinox	Radio	√	√	√	√	√	0226 0150
2018	Chevrolet	Equinox	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2018	Chevrolet	Equinox	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	Equinox	Steering Column Lock Control Module	√	√	√	√		
2018	Chevrolet	Equinox	Headlamp Control Module	√	√	√	√	√	0195
2018	Chevrolet	Equinox	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Chevrolet	Equinox	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Chevrolet	Equinox	Left Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Equinox	Power Steering Control Module	√	√	√	√		0081 0080 0089
2018	Chevrolet	Equinox	Chassis Control Module	√	√	√	√	√	0014 0078
2018	Chevrolet	Equinox	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2018	Chevrolet	Equinox	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2018	Chevrolet	Equinox	Navigation Control Module	√	√	√	√	√	
2018	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0263 0209 0115 076D 0060 079A 0044 0045 0086 0097 0171 0219 0792 0217 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0156 0076 0020 0132 0067 0154 0212 0214 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2018	Chevrolet	Express	Transmission Control Module	√	√	√	√	√	0225 0111 0277 0090
2018	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0172 0261
2018	Chevrolet	Express	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0263 0261
2018	Chevrolet	Express	Body Control Module	√	√	√	√	√	
2018	Chevrolet	Express	Theft Deterrent Module	√	√	√	√		
2018	Chevrolet	Express	Instrument Cluster	√	√	√	√	√	
2018	Chevrolet	Express	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2018	Chevrolet	Express	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Chevrolet	Express	Parking Assist Control Module	√	√	√	√	√	0247
2018	Chevrolet	Express	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2018	Chevrolet	Express	Auxiliary Heater Control Module	√	√	√	√	√	
2018	Chevrolet	Express	Digital Radio Receiver Control Module	√	√	√	√	√	
2018	Chevrolet	Express	Chime Alarm Control Module	√	√	√		√	
2018	Chevrolet	Express	Radio	√	√	√	√	√	
2018	Chevrolet	Express	Left Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Express	Right Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Express	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084

2018	Chevrolet	Express	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2018	Chevrolet	Impala	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2018	Chevrolet	Impala	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2018	Chevrolet	Impala	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2018	Chevrolet	Impala	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Chevrolet	Impala	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0032 0150
2018	Chevrolet	Impala	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Impala	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Chevrolet	Impala	HVAC Controls	√	√	√	√	√	
2018	Chevrolet	Impala	Serial Data Gateway Module	√	√	√			
2018	Chevrolet	Impala	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Chevrolet	Impala	Parking Brake Control Module	√	√	√	√	√	0229
2018	Chevrolet	Impala	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Chevrolet	Impala	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	Impala	Left Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Impala	Right Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Impala	Keyless Entry Control Module	√	√	√	√	√	
2018	Chevrolet	Impala	Passenger Presence Module	√	√	√	√		0057
2018	Chevrolet	Impala	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Chevrolet	Impala	Power Steering Control Module	√	√	√	√		0081 0080 0089
2018	Chevrolet	Impala	Amplifier	√	√	√	√		
2018	Chevrolet	Impala	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Chevrolet	Impala	Radio Controls	√	√	√	√		0241
2018	Chevrolet	Impala	Media Disc Player	√	√	√	√	√	
2018	Chevrolet	Impala	Navigation Control Module	√	√	√	√	√	
2018	Chevrolet	Impala	Rear Audio Control Module	√	√	√	√	√	
2018	Chevrolet	Impala	Radio	√	√	√	√	√	0226 0150
2018	Chevrolet	Impala	Distance Sensing Cruise Control Module	√	√	√	√		0047
2018	Chevrolet	Impala	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2018	Chevrolet	Impala	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2018	Chevrolet	Labo	Engine Control Module	√	√	√	√	√	0069 0087
2018	Chevrolet	Labo	Fuel Injector Control Module	√	√	√	√	√	
2018	Chevrolet	Labo	Tire Pressure Indicator Module	√	√	√	√		079D 0234
2018	Chevrolet	Lacetti	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2018	Chevrolet	Lacetti	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Chevrolet	Lacetti	Electronic Brake Control Module	√	√	√	√	√	
2018	Chevrolet	Lacetti	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2018	Chevrolet	Lacetti	Fuel Injector Control Module	√	√	√	√	√	



2018	Chevrolet	Lacetti	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Chevrolet	Lacetti	Variable Power Steering Control Module				√	√	
2018	Chevrolet	Malibu	Engine Control Module	√	√	√	√	√	0263 0156 0209 0147 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0764 0763 0258 0139 0132 0067 0176 0215 0076 0236 0020
2018	Chevrolet	Malibu	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Chevrolet	Malibu	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2018	Chevrolet	Malibu	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Chevrolet	Malibu	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Chevrolet	Malibu	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Malibu	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Chevrolet	Malibu	HVAC Controls	√	√	√	√	√	
2018	Chevrolet	Malibu	Serial Data Gateway Module	√	√	√			
2018	Chevrolet	Malibu	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Chevrolet	Malibu	Headlamp Control Module	√	√	√	√	√	0195
2018	Chevrolet	Malibu	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Chevrolet	Malibu	Electric A/C Compressor Control Module	√					
2018	Chevrolet	Malibu	Hybrid Powertrain Control Module 2	√	√	√	√	√	0202 0218 0122
2018	Chevrolet	Malibu	Drive Motor Control Module 1	√	√	√	√		
2018	Chevrolet	Malibu	Drive Motor Control Module 2	√	√	√	√		
2018	Chevrolet	Malibu	Hybrid Powertrain Control Module	√	√	√	√	√	0018
2018	Chevrolet	Malibu	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	Malibu	Left Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Malibu	Right Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Malibu	Keyless Entry Control Module	√	√	√	√	√	
2018	Chevrolet	Malibu	Passenger Presence Module	√	√	√	√	√	0057
2018	Chevrolet	Malibu	Steering Column Lock Control Module	√	√	√	√		
2018	Chevrolet	Malibu	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Chevrolet	Malibu	Radio Controls	√	√	√	√		0241
2018	Chevrolet	Malibu	Radio	√	√	√	√	√	0226 0150
2018	Chevrolet	Malibu	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2018	Chevrolet	Malibu	Amplifier	√	√	√	√		
2018	Chevrolet	Malibu	Navigation Control Module	√	√	√	√	√	
2018	Chevrolet	Malibu	Active Safety Control Module	√	√	√	√		
2018	Chevrolet	Malibu	Frontview Camera Module	√	√	√	√		0196

2018	Chevrolet	Malibu	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Chevrolet	Malibu	Brake Booster Control Module	√	√	√	√		
2018	Chevrolet	Malibu	Power Steering Control Module	√	√	√	√		0081 0080 0089
2018	Chevrolet	Malibu	Active Safety Control Module 2		√	√			
2018	Chevrolet	Malibu	Active Safety Functional Diagnostics	√					
2018	Chevrolet	Matiz	Engine Control Module	√	√	√	√	√	0069 0087 079C
2018	Chevrolet	Matiz	Electronic Brake Control Module	√	√	√	√	√	
2018	Chevrolet	Matiz	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2018	Chevrolet	Matiz	Instrument Cluster	√	√	√	√	√	
2018	Chevrolet	Matiz	Keyless Entry Control Module				√		
2018	Chevrolet	Max	Engine Control Module	√	√	√	√	√	0069 0087 079C
2018	Chevrolet	Max	Electronic Brake Control Module	√	√	√	√	√	
2018	Chevrolet	Max	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2018	Chevrolet	Move	Engine Control Module	√	√	√	√	√	0069 0087 079C
2018	Chevrolet	Move	Electronic Brake Control Module	√	√	√	√	√	
2018	Chevrolet	Move	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2018	Chevrolet	Nexia	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2018	Chevrolet	Nexia	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Chevrolet	Nexia	Electronic Brake Control Module	√	√	√	√	√	
2018	Chevrolet	Nexia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2018	Chevrolet	Nexia	Instrument Cluster	√	√	√		√	
2018	Chevrolet	Nexia	Tire Pressure Indicator Module	√	√	√	√		079D 0234
2018	Chevrolet	Nexia	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2018	Chevrolet	Nexia	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Chevrolet	Onix	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0115
2018	Chevrolet	Onix	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Chevrolet	Onix	Electronic Brake Control Module	√	√	√	√	√	0090
2018	Chevrolet	Onix	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Chevrolet	Onix	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Chevrolet	Onix	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Onix	Serial Data Gateway Module	√	√	√			
2018	Chevrolet	Onix	Telematics Communication Interface Control Module	√	√	√	√	√	
2018	Chevrolet	Onix	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	Onix	Radio	√	√	√	√	√	
2018	Chevrolet	Onix	Power Steering Control Module	√	√	√	√		0207
2018	Chevrolet	Onix	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Chevrolet	Optra	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217

2018	Chevrolet	Optra	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Chevrolet	Optra	Electronic Brake Control Module	√	√	√	√	√	
2018	Chevrolet	Optra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2018	Chevrolet	Optra	Body Control Module	√	√	√	√	√	
2018	Chevrolet	Optra	Instrument Cluster	√	√	√	√	√	
2018	Chevrolet	Optra	Power Steering Control Module	√	√	√	√		0089 0081 0080
2018	Chevrolet	Orlando	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0156 0222 0066 0147 0115 0060 079A 0044 0045 0086 0097 0221 0792 0217 0109 0068 0084 0070 0071 0074 0075 0117 0043 0173 0179 0181 0183 0185 0232 0209 0132 0067
2018	Chevrolet	Orlando	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Chevrolet	Orlando	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2018	Chevrolet	Orlando	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Chevrolet	Orlando	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2018	Chevrolet	Orlando	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Orlando	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Chevrolet	Orlando	Keyless Entry Control Module	√	√	√	√	√	
2018	Chevrolet	Orlando	Rear Seat Heating Control Module	√	√	√	√	√	
2018	Chevrolet	Orlando	Front Seat Heating Control Module	√	√	√	√	√	
2018	Chevrolet	Orlando	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	Orlando	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2018	Chevrolet	Orlando	Radio	√	√	√	√	√	
2018	Chevrolet	Orlando	Multimedia Player Interface Module	√	√	√	√		0247
2018	Chevrolet	Orlando	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2018	Chevrolet	Orlando	Power Steering Control Module	√	√	√	√		0089 0081 0080
2018	Chevrolet	Orlando	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Chevrolet	Orlando	Fuel Injector Control Module	√	√	√	√	√	
2018	Chevrolet	Prisma	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0115
2018	Chevrolet	Prisma	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Chevrolet	Prisma	Electronic Brake Control Module	√	√	√	√	√	0090
2018	Chevrolet	Prisma	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Chevrolet	Prisma	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150

2018	Chevrolet	Prisma	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Prisma	Serial Data Gateway Module	√	√	√			
2018	Chevrolet	Prisma	Telematics Communication Interface Control Module	√	√	√	√	√	
2018	Chevrolet	Prisma	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	Prisma	Radio	√	√	√	√	√	
2018	Chevrolet	Prisma	Power Steering Control Module	√	√	√	√		0207
2018	Chevrolet	Prisma	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Chevrolet	S10	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0210 0224 0130 0222 0066 0147 0060 0044 0045 0109 0068 0084 0070 0071 0074 0075 0043 0173 0179 0181 0183 0185
2018	Chevrolet	S10	Transmission Control Module	√	√	√	√	√	0016
2018	Chevrolet	S10	Electronic Brake Control Module	√	√	√	√	√	0090 0112 0111
2018	Chevrolet	S10	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Chevrolet	S10	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Chevrolet	S10	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	S10	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Chevrolet	S10	HVAC Controls	√	√	√	√	√	
2018	Chevrolet	S10	Serial Data Gateway Module	√	√	√			
2018	Chevrolet	S10	Left Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	S10	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	S10	Right Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	S10	Radio	√	√	√	√	√	0226 0150
2018	Chevrolet	S10	Amplifier	√	√	√	√		
2018	Chevrolet	S10	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Chevrolet	S10	Radio Controls	√	√	√	√		0241
2018	Chevrolet	S10	Frontview Camera Module	√	√	√	√	√	0205 0196
2018	Chevrolet	S10	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Chevrolet	S10	Transfer Case Control Module	√	√	√	√	√	0037
2018	Chevrolet	S10	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Chevrolet	S10	Power Steering Control Module	√	√	√	√		0093 0090

2018	Chevrolet	Sail	Engine Control Module	√	√	√	√	√	0087 0133 0210 0098 0096 0094 0216 0143 0265 0393 0173 0149 0209 0217 0156 0020 0140
2018	Chevrolet	Sail	Transmission Control Module	√	√	√	√	√	0200 0157 0153 0136 0035 0016
2018	Chevrolet	Sail	Electronic Brake Control Module	√	√	√	√	√	0111 0090
2018	Chevrolet	Sail	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0064 0040 0063 0039 0227 0172 0062 0038 0177 0261 0111
2018	Chevrolet	Sail	Body Control Module	√	√	√	√	√	0263
2018	Chevrolet	Sail	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Chevrolet	Sail	Radio/HVAC Controls	√	√	√	√	√	0150
2018	Chevrolet	Sail	Power Steering Control Module	√	√	√	√		0081 0089
2018	Chevrolet	Sail	Radio	√	√	√	√	√	
2018	Chevrolet	Sail	Telematics Communication Interface Control Module	√	√	√		√	
2018	Chevrolet	Sail	Keyless Entry Control Module						0204
2018	Chevrolet	Silverado	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131 0258 0212 0214 0139 0791 0115 076D 0058 079A 0045 0044 0088 0097 0219 0221 07AA 0073 0072 0070 0071 0117 0119 077E 0178 0180 0182 0184 0186
2018	Chevrolet	Silverado	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2018	Chevrolet	Silverado	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2018	Chevrolet	Silverado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Chevrolet	Silverado	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Silverado	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Chevrolet	Silverado	HVAC Controls	√	√	√	√	√	
2018	Chevrolet	Silverado	Serial Data Gateway Module	√	√	√			
2018	Chevrolet	Silverado	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Chevrolet	Silverado	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010

2018	Chevrolet	Silverado	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2018	Chevrolet	Silverado	Hybrid Powertrain Control Module 2	√	√	√	√	√	0202 0218
2018	Chevrolet	Silverado	Hybrid Powertrain Control Module	√	√	√	√	√	0436 0263
2018	Chevrolet	Silverado	Passenger Presence Module	√	√	√	√	√	0057
2018	Chevrolet	Silverado	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 07AB 0009 07AC
2018	Chevrolet	Silverado	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2018	Chevrolet	Silverado	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Chevrolet	Silverado	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	Silverado	Transfer Case Control Module	√	√	√	√	√	0037
2018	Chevrolet	Silverado	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2018	Chevrolet	Silverado	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2018	Chevrolet	Silverado	Power Steering Control Module	√	√	√	√	√	0084 0273 0082 0274
2018	Chevrolet	Silverado	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2018	Chevrolet	Silverado	Suspension Control Module	√	√	√	√	√	0245
2018	Chevrolet	Silverado	Amplifier	√	√	√	√		
2018	Chevrolet	Silverado	Assist Step Control Module	√	√	√	√	√	
2018	Chevrolet	Silverado	Radio Controls	√	√	√	√		0241
2018	Chevrolet	Silverado	Media Disc Player	√	√	√	√	√	
2018	Chevrolet	Silverado	Radio	√	√	√	√	√	0226 0150
2018	Chevrolet	Sonic	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139 0020 0066 076D 0213
2018	Chevrolet	Sonic	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Chevrolet	Sonic	Electronic Brake Control Module	√	√	√	√	√	0090
2018	Chevrolet	Sonic	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2018	Chevrolet	Sonic	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0082 0150 0232 0150
2018	Chevrolet	Sonic	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Sonic	HVAC Control Module	√	√	√	√	√	
2018	Chevrolet	Sonic	Serial Data Gateway Module	√	√	√			
2018	Chevrolet	Sonic	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048
2018	Chevrolet	Sonic	Front Seat Heating Control Module	√	√	√	√	√	
2018	Chevrolet	Sonic	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	Sonic	Passenger Presence Module	√	√	√	√		0057
2018	Chevrolet	Sonic	Keyless Entry Control Module	√	√	√	√	√	
2018	Chevrolet	Sonic	Power Steering Control Module	√	√	√	√		0207
2018	Chevrolet	Sonic	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Chevrolet	Sonic	Radio	√	√	√	√	√	0226 0150 0269

2018	Chevrolet	Sonic	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2018	Chevrolet	Sonic	Chassis Control Module	√	√	√	√	√	0217
2018	Chevrolet	Spark	Engine Control Module	√	√	√	√	√	0156 0140 0209 0132 0067 0263 0086 0217 0139 0069 0087 079C
2018	Chevrolet	Spark	Transmission Control Module	√	√	√	√	√	0016 0017 0136 07B1
2018	Chevrolet	Spark	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2018	Chevrolet	Spark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Chevrolet	Spark	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160 0233 0159 0199 0239 0161 0162 0163 0164 0165 0166 0167 0168
2018	Chevrolet	Spark	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Spark	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Chevrolet	Spark	HVAC Controls	√	√	√	√	√	
2018	Chevrolet	Spark	Serial Data Gateway Module	√	√	√			
2018	Chevrolet	Spark	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Chevrolet	Spark	Keyless Entry Control Module	√	√	√	√	√	
2018	Chevrolet	Spark	Radio	√	√	√	√	√	0226
2018	Chevrolet	Spark	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2018	Chevrolet	Spark	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2018	Chevrolet	Spark	Power Steering Control Module	√	√	√	√		0089
2018	Chevrolet	Spark	Fuel Injector Control Module	√	√	√	√	√	
2018	Chevrolet	Spark	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	Spark	Passenger Presence Module	√	√	√	√	√	0057
2018	Chevrolet	Spark	Radio Controls	√	√	√	√	√	0247
2018	Chevrolet	Spin	Engine Control Module	√	√	√	√	√	0133 0156 0210 0383 0098 0096 0094 0216 0130 0143 0265 0147 0237 0045 0086 0393 0043 0135 0128 0173 0209 0132 0067 0263 0217 0139 0115
2018	Chevrolet	Spin	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Chevrolet	Spin	Electronic Brake Control Module	√	√	√	√	√	0090
2018	Chevrolet	Spin	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Chevrolet	Spin	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0159
2018	Chevrolet	Spin	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Spin	Serial Data Gateway Module	√	√	√			

2018	Chevrolet	Spin	Telematics Communication Interface Control Module	√	√	√		√	
2018	Chevrolet	Spin	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	Spin	Radio	√	√	√	√	√	
2018	Chevrolet	Spin	Power Steering Control Module	√	√	√	√		0207
2018	Chevrolet	Spin	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Chevrolet	Suburban	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2018	Chevrolet	Suburban	Transmission Control Module	√	√	√	√	√	0016
2018	Chevrolet	Suburban	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2018	Chevrolet	Suburban	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Chevrolet	Suburban	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Chevrolet	Suburban	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Suburban	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Chevrolet	Suburban	HVAC Controls	√	√	√	√	√	
2018	Chevrolet	Suburban	Serial Data Gateway Module	√	√	√			
2018	Chevrolet	Suburban	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Chevrolet	Suburban	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	Chevrolet	Suburban	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Chevrolet	Suburban	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Chevrolet	Suburban	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2018	Chevrolet	Suburban	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2018	Chevrolet	Suburban	Passenger Presence Module	√	√	√	√	√	0057
2018	Chevrolet	Suburban	Keyless Entry Control Module	√	√	√	√	√	
2018	Chevrolet	Suburban	Steering Column Lock Control Module	√	√	√	√		
2018	Chevrolet	Suburban	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Chevrolet	Suburban	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	Suburban	Left Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Suburban	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	Chevrolet	Suburban	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2018	Chevrolet	Suburban	Transfer Case Control Module	√	√	√	√	√	0037
2018	Chevrolet	Suburban	Power Steering Control Module	√	√	√	√	√	0150
2018	Chevrolet	Suburban	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Chevrolet	Suburban	Suspension Control Module	√	√	√	√	√	0245
2018	Chevrolet	Suburban	Left Front Short Range Radar Sensor Module	√	√	√			
2018	Chevrolet	Suburban	Right Front Short Range Radar Sensor Module	√	√	√			
2018	Chevrolet	Suburban	Right Rear Short Range Radar Sensor Module	√	√	√			
2018	Chevrolet	Suburban	Left Rear Radar Short Range Sensor Module	√	√	√			



2018	Chevrolet	Suburban	Active Safety Control Module	√	√	√	√	√	
2018	Chevrolet	Suburban	Video Processing Control Module	√	√	√	√	√	
2018	Chevrolet	Suburban	Distance Sensing Cruise Control Module	√	√	√	√		0047
2018	Chevrolet	Suburban	Frontview Camera Module	√	√	√	√		0196
2018	Chevrolet	Suburban	Amplifier	√	√	√	√		
2018	Chevrolet	Suburban	Assist Step Control Module	√	√	√	√	√	
2018	Chevrolet	Suburban	Radio Controls	√	√	√	√		0241
2018	Chevrolet	Suburban	Media Disc Player	√	√	√	√	√	
2018	Chevrolet	Suburban	Radio	√	√	√	√	√	0226 0150
2018	Chevrolet	Suburban	Parking Brake Control Module	√	√	√	√	√	0229
2018	Chevrolet	Tahoe	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2018	Chevrolet	Tahoe	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2018	Chevrolet	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2018	Chevrolet	Tahoe	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Chevrolet	Tahoe	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Tahoe	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Chevrolet	Tahoe	HVAC Controls	√	√	√	√	√	
2018	Chevrolet	Tahoe	Serial Data Gateway Module	√	√	√			
2018	Chevrolet	Tahoe	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	Chevrolet	Tahoe	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Chevrolet	Tahoe	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Chevrolet	Tahoe	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Chevrolet	Tahoe	Keyless Entry Control Module	√	√	√	√	√	
2018	Chevrolet	Tahoe	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2018	Chevrolet	Tahoe	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2018	Chevrolet	Tahoe	Passenger Presence Module	√	√	√	√	√	0057
2018	Chevrolet	Tahoe	Steering Column Lock Control Module	√	√	√	√		
2018	Chevrolet	Tahoe	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Chevrolet	Tahoe	Left Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Tahoe	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	Tahoe	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	Chevrolet	Tahoe	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2018	Chevrolet	Tahoe	Transfer Case Control Module	√	√	√	√	√	0037

2018	Chevrolet	Tahoe	Power Steering Control Module	√	√	√	√	√	0150
2018	Chevrolet	Tahoe	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Chevrolet	Tahoe	Suspension Control Module	√	√	√	√	√	0245
2018	Chevrolet	Tahoe	Left Front Short Range Radar Sensor Module	√	√	√			
2018	Chevrolet	Tahoe	Left Rear Radar Short Range Sensor Module	√	√	√			
2018	Chevrolet	Tahoe	Right Front Short Range Radar Sensor Module	√	√	√			
2018	Chevrolet	Tahoe	Right Rear Short Range Radar Sensor Module	√	√	√			
2018	Chevrolet	Tahoe	Active Safety Control Module	√	√	√	√	√	
2018	Chevrolet	Tahoe	Video Processing Control Module	√	√	√	√	√	
2018	Chevrolet	Tahoe	Distance Sensing Cruise Control Module	√	√	√	√		0047
2018	Chevrolet	Tahoe	Frontview Camera Module	√	√	√	√		0196
2018	Chevrolet	Tahoe	Amplifier	√	√	√	√		
2018	Chevrolet	Tahoe	Assist Step Control Module	√	√	√	√	√	
2018	Chevrolet	Tahoe	Radio Controls	√	√	√	√		0241
2018	Chevrolet	Tahoe	Media Disc Player	√	√	√	√	√	
2018	Chevrolet	Tahoe	Radio	√	√	√	√	√	0226 0150
2018	Chevrolet	Tahoe	Parking Brake Control Module	√	√	√	√	√	0229
2018	Chevrolet	Tavera	Engine Control Module	√	√	√	√	√	0178 0180 0182 0184
2018	Chevrolet	Tracker	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0066 0260
2018	Chevrolet	Tracker	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Chevrolet	Tracker	Electronic Brake Control Module	√	√	√	√	√	0090
2018	Chevrolet	Tracker	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2018	Chevrolet	Tracker	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0160 0232 0150
2018	Chevrolet	Tracker	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Tracker	HVAC Control Module	√	√	√	√	√	
2018	Chevrolet	Tracker	Serial Data Gateway Module	√	√	√			
2018	Chevrolet	Tracker	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Chevrolet	Tracker	Front Seat Heating Control Module	√	√	√	√	√	
2018	Chevrolet	Tracker	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	Chevrolet	Tracker	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	Tracker	Power Steering Control Module	√	√	√	√		0207
2018	Chevrolet	Tracker	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Chevrolet	Tracker	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2018	Chevrolet	Tracker	Chassis Control Module	√	√	√	√	√	0217
2018	Chevrolet	Tracker	Radio	√	√	√	√	√	0226

2018	Chevrolet	Tracker	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2018	Chevrolet	Tracker	Keyless Entry Control Module	√	√	√	√	√	
2018	Chevrolet	Tracker	Left Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Trailblazer	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0156 0222 0066 0147 0115 0060 079A 0044 0045 0086 0097 0221 0792 0217 0109 0068 0084 0070 0071 0074 0075 0117 0043 0173 0179 0181 0183 0185 0232 0209 0132 0067
2018	Chevrolet	Trailblazer	Transmission Control Module	√	√	√	√	√	0016
2018	Chevrolet	Trailblazer	Electronic Brake Control Module	√	√	√	√	√	0090 0112 0111
2018	Chevrolet	Trailblazer	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Chevrolet	Trailblazer	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Chevrolet	Trailblazer	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Trailblazer	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Chevrolet	Trailblazer	HVAC Controls	√	√	√	√	√	
2018	Chevrolet	Trailblazer	Serial Data Gateway Module	√	√	√			
2018	Chevrolet	Trailblazer	Left Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Trailblazer	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	Trailblazer	Right Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Trailblazer	Frontview Camera Module	√	√	√	√	√	0205 0196
2018	Chevrolet	Trailblazer	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Chevrolet	Trailblazer	Transfer Case Control Module	√	√	√	√	√	0037
2018	Chevrolet	Trailblazer	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Chevrolet	Trailblazer	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Chevrolet	Trailblazer	Radio	√	√	√	√	√	0226 0150
2018	Chevrolet	Trailblazer	Radio Controls	√	√	√	√		0241
2018	Chevrolet	Trailblazer	Power Steering Control Module	√	√	√	√		0093 0090
2018	Chevrolet	Traverse	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0006 0130 0055 0005
2018	Chevrolet	Traverse	Transmission Control Module	√	√	√	√	√	0017
2018	Chevrolet	Traverse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2018	Chevrolet	Traverse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2018	Chevrolet	Traverse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Chevrolet	Traverse	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Traverse	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Chevrolet	Traverse	HVAC Controls	√	√	√	√	√	
2018	Chevrolet	Traverse	Serial Data Gateway Module	√	√	√			
2018	Chevrolet	Traverse	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Chevrolet	Traverse	Telematics Communication Interface Control Module	√	√	√	√	√	
2018	Chevrolet	Traverse	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Chevrolet	Traverse	Frontview Camera Module	√	√	√	√		0196
2018	Chevrolet	Traverse	Keyless Entry Control Module	√	√	√	√	√	0759
2018	Chevrolet	Traverse	Passenger Presence Module	√	√	√	√	√	0057
2018	Chevrolet	Traverse	Active Safety Control Module	√	√	√	√		
2018	Chevrolet	Traverse	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Chevrolet	Traverse	Video Processing Control Module	√	√	√	√	√	
2018	Chevrolet	Traverse	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	Traverse	Left Front Short Range Radar Sensor Module	√	√	√			
2018	Chevrolet	Traverse	Right Front Short Range Radar Sensor Module	√	√	√			
2018	Chevrolet	Traverse	Rear Short Range Radar Sensor Module	√	√	√			
2018	Chevrolet	Traverse	Left Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Traverse	Amplifier	√	√	√	√		
2018	Chevrolet	Traverse	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Chevrolet	Traverse	Radio Controls	√	√	√	√		0241
2018	Chevrolet	Traverse	Radio	√	√	√	√	√	0226 0150
2018	Chevrolet	Traverse	Media Disc Player	√	√	√	√	√	
2018	Chevrolet	Traverse	Suspension Control Module	√	√	√	√	√	
2018	Chevrolet	Traverse	Power Steering Control Module	√	√	√	√		0089 0084
2018	Chevrolet	Traverse	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2018	Chevrolet	Trax	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006 0144 0258 0139 0210 0224 0130 0222 0147 0115 0060 079A 0044 0045 0097 0221 0792 0109 0068 0084 0070 0071 0074 0075 0117 0043 0173 0179 0181
2018	Chevrolet	Trax	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Chevrolet	Trax	Electronic Brake Control Module	√	√	√	√	√	0090

2018	Chevrolet	Trax	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Chevrolet	Trax	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0150 0233 0150
2018	Chevrolet	Trax	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Trax	HVAC Control Module	√	√	√	√	√	
2018	Chevrolet	Trax	Serial Data Gateway Module	√	√	√			
2018	Chevrolet	Trax	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Chevrolet	Trax	Seat Memory Control Module	√	√	√	√	√	0310
2018	Chevrolet	Trax	Front Seat Heating Control Module	√	√	√	√	√	
2018	Chevrolet	Trax	Keyless Entry Control Module	√	√	√	√	√	
2018	Chevrolet	Trax	Passenger Presence Module	√	√	√	√		0057
2018	Chevrolet	Trax	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	Trax	Left Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Trax	Right Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Trax	Radio	√	√	√	√	√	0226 0150 0269
2018	Chevrolet	Trax	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Chevrolet	Trax	Power Steering Control Module	√	√	√	√		0207
2018	Chevrolet	Trax	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2018	Chevrolet	Trax	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	Chevrolet	Trax	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2018	Chevrolet	Trax	Steering Column Lock Control Module	√	√	√	√		
2018	Chevrolet	Trax	Chassis Control Module	√	√	√	√	√	0217
2018	Chevrolet	Volt	Engine Control Module	√	√	√	√	√	0209 0132 0067 0263 0086 0217 0176 0212
2018	Chevrolet	Volt	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229
2018	Chevrolet	Volt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Chevrolet	Volt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Chevrolet	Volt	Instrument Cluster	√	√	√	√	√	0247
2018	Chevrolet	Volt	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Chevrolet	Volt	HVAC Controls	√	√	√	√	√	
2018	Chevrolet	Volt	Serial Data Gateway Module	√	√	√			
2018	Chevrolet	Volt	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Chevrolet	Volt	Battery Energy Control Module	√			√		
2018	Chevrolet	Volt	Electric A/C Compressor Control Module	√					
2018	Chevrolet	Volt	Hybrid Powertrain Control Module 2	√	√	√	√	√	0125 0056 0079 0218 0122 0123 0127

2018	Chevrolet	Volt	Drive Motor Control Module 2	√	√	√	√		
2018	Chevrolet	Volt	Drive Motor Control Module 1	√	√	√	√		
2018	Chevrolet	Volt	Hybrid Powertrain Control Module	√	√	√	√	√	0018
2018	Chevrolet	Volt	Passenger Presence Module	√	√	√	√		0057
2018	Chevrolet	Volt	Keyless Entry Control Module	√	√	√	√	√	
2018	Chevrolet	Volt	Steering Column Lock Control Module	√	√	√	√		
2018	Chevrolet	Volt	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Chevrolet	Volt	Left Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Volt	Right Side Object Detection Control Module	√	√	√		√	
2018	Chevrolet	Volt	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Chevrolet	Volt	Active Safety Control Module	√	√	√	√	√	
2018	Chevrolet	Volt	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Chevrolet	Volt	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2018	Chevrolet	Volt	Amplifier	√	√	√	√		
2018	Chevrolet	Volt	Radio Controls	√	√	√	√		0241
2018	Chevrolet	Volt	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2018	Chevrolet	Volt	Radio	√	√	√	√	√	0226 0150
2018	Chevrolet	Volt	Brake Booster Control Module	√	√	√	√		
2018	Chevrolet	Volt	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2018	Chevrolet	Volt	Power Steering Control Module	√	√	√	√		0081 0080 0089
2018	Chevrolet	Work	Engine Control Module	√	√	√	√	√	0069 0087 079C
2018	Chevrolet	Work	Electronic Brake Control Module	√	√	√	√	√	
2018	Chevrolet	Work	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2018	GMC	Acadia	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0006 0756 0085 0036
2018	GMC	Acadia	Transmission Control Module	√	√	√	√	√	0016 0017 0036
2018	GMC	Acadia	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2018	GMC	Acadia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	GMC	Acadia	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	GMC	Acadia	Instrument Cluster	√	√	√	√	√	0247
2018	GMC	Acadia	HVAC Control Module	√	√	√	√	√	0007 0129
2018	GMC	Acadia	HVAC Controls	√	√	√	√	√	
2018	GMC	Acadia	Serial Data Gateway Module	√	√	√			
2018	GMC	Acadia	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	GMC	Acadia	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	GMC	Acadia	Seat Memory Control Module - Driver	√	√	√	√	√	0310

2018	GMC	Acadia	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	GMC	Acadia	Left Side Object Detection Control Module	√	√	√		√	
2018	GMC	Acadia	Keyless Entry Control Module	√	√	√	√	√	
2018	GMC	Acadia	Passenger Presence Module	√	√	√	√	√	0057
2018	GMC	Acadia	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2018	GMC	Acadia	Active Safety Control Module	√	√	√	√		
2018	GMC	Acadia	Frontview Camera Module	√	√	√	√		0196
2018	GMC	Acadia	Left Front Short Range Radar Sensor Module	√	√	√			
2018	GMC	Acadia	Right Front Short Range Radar Sensor Module	√	√	√			
2018	GMC	Acadia	Rear Short Range Radar Sensor Module	√	√	√			
2018	GMC	Acadia	Video Processing Control Module	√	√	√	√	√	
2018	GMC	Acadia	Long Range Radar Sensor Module	√	√	√	√		0260
2018	GMC	Acadia	Amplifier	√	√	√	√		
2018	GMC	Acadia	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	GMC	Acadia	Radio Controls	√	√	√	√		0241
2018	GMC	Acadia	Media Disc Player	√	√	√	√	√	
2018	GMC	Acadia	Radio	√	√	√	√	√	0226 0150
2018	GMC	Acadia	Power Steering Control Module	√	√	√	√		0089 0084
2018	GMC	Acadia	Suspension Control Module	√	√	√	√	√	
2018	GMC	Canyon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 076D 0060 079A 0044 0045 0097 0171 0219 0792 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0006 0756 0085
2018	GMC	Canyon	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2018	GMC	Canyon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2018	GMC	Canyon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	GMC	Canyon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	GMC	Canyon	Instrument Cluster	√	√	√	√	√	0247
2018	GMC	Canyon	HVAC Control Module	√	√	√	√	√	0007 0129
2018	GMC	Canyon	HVAC Controls	√	√	√	√	√	
2018	GMC	Canyon	Serial Data Gateway Module	√	√	√			

2018	GMC	Canyon	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	GMC	Canyon	Frontview Camera Module	√	√	√	√	√	0205 0196
2018	GMC	Canyon	Passenger Presence Module	√	√	√	√	√	0057
2018	GMC	Canyon	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	GMC	Canyon	Transfer Case Control Module	√	√	√	√	√	0037
2018	GMC	Canyon	Radio	√	√	√	√	√	0226 0150
2018	GMC	Canyon	Amplifier	√	√	√	√		
2018	GMC	Canyon	Radio Controls	√	√	√	√		0241
2018	GMC	Canyon	Power Steering Control Module	√	√	√	√		0093 0090
2018	GMC	Canyon	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2018	GMC	Savana	Engine Control Module	√	√	√	√	√	0263 0209 0115 076D 0060 079A 0044 0045 0086 0097 0171 0219 0792 0217 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0156 0076 0020 0132 0067 0154 0212 0214
2018	GMC	Savana	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2018	GMC	Savana	Electronic Brake Control Module	√	√	√	√	√	0225 0111 0277 0090
2018	GMC	Savana	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2018	GMC	Savana	Body Control Module	√	√	√	√	√	0263 0261
2018	GMC	Savana	Theft Deterrent Module	√	√	√	√		
2018	GMC	Savana	Instrument Cluster	√	√	√	√	√	
2018	GMC	Savana	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2018	GMC	Savana	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	GMC	Savana	Parking Assist Control Module	√	√	√	√	√	0247
2018	GMC	Savana	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2018	GMC	Savana	Auxiliary Heater Control Module	√	√	√	√	√	
2018	GMC	Savana	Radio	√	√	√	√	√	
2018	GMC	Savana	Chime Alarm Control Module	√	√	√		√	
2018	GMC	Savana	Digital Radio Receiver Control Module	√	√	√	√	√	
2018	GMC	Savana	Left Side Object Detection Control Module	√	√	√		√	
2018	GMC	Savana	Right Side Object Detection Control Module	√	√	√		√	
2018	GMC	Savana	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2018	GMC	Savana	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111



2018	GMC	Sierra	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131 0258 0139 0212 0214 0791 0115 076D 0058 079A 0045 0044 0088 0097 0219 0221 07AA 0073 0072 0070 0071 0117 0119 077E 0178 0180 0182 0184 0186
2018	GMC	Sierra	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2018	GMC	Sierra	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2018	GMC	Sierra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	GMC	Sierra	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	GMC	Sierra	Instrument Cluster	√	√	√	√	√	0247
2018	GMC	Sierra	HVAC Control Module	√	√	√	√	√	0007 0129
2018	GMC	Sierra	HVAC Controls	√	√	√	√	√	
2018	GMC	Sierra	Serial Data Gateway Module	√	√	√			
2018	GMC	Sierra	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	GMC	Sierra	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	GMC	Sierra	Hybrid Powertrain Control Module 2	√	√	√	√	√	0202 0218
2018	GMC	Sierra	Hybrid Powertrain Control Module	√	√	√	√	√	0436 0263
2018	GMC	Sierra	Passenger Presence Module	√	√	√	√	√	0057
2018	GMC	Sierra	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 07AB 0009 07AC
2018	GMC	Sierra	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2018	GMC	Sierra	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	GMC	Sierra	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	GMC	Sierra	Transfer Case Control Module	√	√	√	√	√	0037
2018	GMC	Sierra	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2018	GMC	Sierra	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2018	GMC	Sierra	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2018	GMC	Sierra	Power Steering Control Module	√	√	√	√	√	0150 0084 0273 0082
2018	GMC	Sierra	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2018	GMC	Sierra	Suspension Control Module	√	√	√	√	√	0245
2018	GMC	Sierra	Amplifier	√	√	√	√		

2018	GMC	Sierra	Assist Step Control Module	√	√	√	√	√	
2018	GMC	Sierra	Radio Controls	√	√	√	√		0241
2018	GMC	Sierra	Media Disc Player	√	√	√	√	√	
2018	GMC	Sierra	Radio	√	√	√	√	√	0226 0150
2018	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0222 076D 0060 079A 0044 0045 0097 0171 0219 0792 0109 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184
2018	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0017 0036
2018	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0229 0111
2018	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	GMC	Terrain	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0247
2018	GMC	Terrain	HVAC Control Module	√	√	√	√	√	0007 0129
2018	GMC	Terrain	HVAC Controls	√	√	√	√	√	
2018	GMC	Terrain	Serial Data Gateway Module	√	√	√			
2018	GMC	Terrain	Radio	√	√	√	√	√	0150 0226 0269 0267
2018	GMC	Terrain	Amplifier	√	√	√	√		
2018	GMC	Terrain	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	GMC	Terrain	Frontview Camera Module	√	√	√	√	√	0247 0205 0196 075A
2018	GMC	Terrain	Headlamp Control Module	√	√	√	√	√	0195
2018	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	GMC	Terrain	Left Side Object Detection Control Module	√	√	√		√	
2018	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	GMC	Terrain	Keyless Entry Control Module	√	√	√	√	√	
2018	GMC	Terrain	Passenger Presence Module	√	√	√	√	√	0057
2018	GMC	Terrain	Steering Column Lock Control Module	√	√	√	√		
2018	GMC	Terrain	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	GMC	Terrain	Video Processing Control Module	√	√	√	√	√	
2018	GMC	Terrain	Active Safety Control Module	√	√	√	√	√	
2018	GMC	Terrain	Long Range Radar Sensor Module	√	√	√	√		0260

2018	GMC	Terrain	Radio Controls	√	√	√	√		0241
2018	GMC	Terrain	Navigation Control Module	√	√	√	√	√	
2018	GMC	Terrain	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2018	GMC	Terrain	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2018	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0080 0089
2018	GMC	Terrain	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2018	GMC	Terrain	Chassis Control Module	√	√	√	√	√	0014 0078
2018	GMC	Yukon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2018	GMC	Yukon	Transmission Control Module	√	√	√	√	√	0016 0017
2018	GMC	Yukon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2018	GMC	Yukon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	GMC	Yukon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	GMC	Yukon	Instrument Cluster	√	√	√	√	√	0247
2018	GMC	Yukon	HVAC Control Module	√	√	√	√	√	0007 0129
2018	GMC	Yukon	HVAC Controls	√	√	√	√	√	
2018	GMC	Yukon	Serial Data Gateway Module	√	√	√			
2018	GMC	Yukon	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	GMC	Yukon	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	GMC	Yukon	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	GMC	Yukon	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2018	GMC	Yukon	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2018	GMC	Yukon	Passenger Presence Module	√	√	√	√	√	0057
2018	GMC	Yukon	Keyless Entry Control Module	√	√	√	√	√	
2018	GMC	Yukon	Steering Column Lock Control Module	√	√	√	√		
2018	GMC	Yukon	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	GMC	Yukon	Left Side Object Detection Control Module	√	√	√		√	
2018	GMC	Yukon	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	GMC	Yukon	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	GMC	Yukon	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2018	GMC	Yukon	Transfer Case Control Module	√	√	√	√	√	0037
2018	GMC	Yukon	Power Steering Control Module	√	√	√	√	√	0150
2018	GMC	Yukon	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	GMC	Yukon	Suspension Control Module	√	√	√	√	√	0245
2018	GMC	Yukon	Left Front Short Range Radar Sensor Module	√	√	√			
2018	GMC	Yukon	Left Rear Radar Short Range Sensor Module	√	√	√			
2018	GMC	Yukon	Right Rear Short Range Radar Sensor Module	√	√	√			

2018	GMC	Yukon	Right Front Short Range Radar Sensor Module	√	√	√			
2018	GMC	Yukon	Active Safety Control Module	√	√	√	√	√	
2018	GMC	Yukon	Video Processing Control Module	√	√	√	√	√	
2018	GMC	Yukon	Distance Sensing Cruise Control Module	√	√	√	√		0047
2018	GMC	Yukon	Frontview Camera Module	√	√	√	√		0196
2018	GMC	Yukon	Amplifier	√	√	√	√		
2018	GMC	Yukon	Assist Step Control Module	√	√	√	√	√	
2018	GMC	Yukon	Radio Controls	√	√	√	√		0241
2018	GMC	Yukon	Media Disc Player	√	√	√	√	√	
2018	GMC	Yukon	Radio	√	√	√	√	√	0226 0150
2018	GMC	Yukon	Parking Brake Control Module	√	√	√	√	√	0229
2018	GMC	Yukon	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	GMC	Yukon XL	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2018	GMC	Yukon XL	Transmission Control Module	√	√	√	√	√	0016 0017
2018	GMC	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2018	GMC	Yukon XL	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	GMC	Yukon XL	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	GMC	Yukon XL	Instrument Cluster	√	√	√	√	√	0247
2018	GMC	Yukon XL	HVAC Control Module	√	√	√	√	√	0007 0129
2018	GMC	Yukon XL	HVAC Controls	√	√	√	√	√	
2018	GMC	Yukon XL	Serial Data Gateway Module	√	√	√			
2018	GMC	Yukon XL	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	GMC	Yukon XL	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	GMC	Yukon XL	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	GMC	Yukon XL	Keyless Entry Control Module	√	√	√	√	√	
2018	GMC	Yukon XL	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2018	GMC	Yukon XL	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2018	GMC	Yukon XL	Passenger Presence Module	√	√	√	√		
2018	GMC	Yukon XL	Steering Column Lock Control Module	√	√	√	√		
2018	GMC	Yukon XL	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	GMC	Yukon XL	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	GMC	Yukon XL	Left Side Object Detection Control Module	√	√	√		√	
2018	GMC	Yukon XL	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	GMC	Yukon XL	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2018	GMC	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0037
2018	GMC	Yukon XL	Power Steering Control Module	√	√	√	√	√	0150

2018	GMC	Yukon XL	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	GMC	Yukon XL	Suspension Control Module	√	√	√	√	√	0245
2018	GMC	Yukon XL	Left Front Short Range Radar Sensor Module	√	√	√			
2018	GMC	Yukon XL	Left Rear Radar Short Range Sensor Module	√	√	√			
2018	GMC	Yukon XL	Right Front Short Range Radar Sensor Module	√	√	√			
2018	GMC	Yukon XL	Right Rear Short Range Radar Sensor Module	√	√	√			
2018	GMC	Yukon XL	Active Safety Control Module	√	√	√	√	√	
2018	GMC	Yukon XL	Video Processing Control Module	√	√	√	√	√	
2018	GMC	Yukon XL	Distance Sensing Cruise Control Module	√	√	√	√		0047
2018	GMC	Yukon XL	Frontview Camera Module	√	√	√	√		0196
2018	GMC	Yukon XL	Amplifier	√	√	√	√		
2018	GMC	Yukon XL	Assist Step Control Module	√	√	√	√	√	
2018	GMC	Yukon XL	Radio Controls	√	√	√	√		0241
2018	GMC	Yukon XL	Media Disc Player	√	√	√	√	√	
2018	GMC	Yukon XL	Radio	√	√	√	√	√	0226 0150
2018	GMC	Yukon XL	Parking Brake Control Module	√	√	√	√	√	0229
2018	GMC	Yukon XL	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Holden	Astra Sedan NB4	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0114 0258 0128
2018	Holden	Astra Sedan NB4	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Holden	Astra Sedan NB4	Electronic Brake Control Module	√	√	√	√	√	0090 0278
2018	Holden	Astra Sedan NB4	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2018	Holden	Astra Sedan NB4	Body Control Module	√	√	√	√	√	0263 0242 0203 0201 0208 0206 0083 0160
2018	Holden	Astra Sedan NB4	Instrument Cluster	√	√	√	√	√	0247 0145
2018	Holden	Astra Sedan NB4	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Holden	Astra Sedan NB4	HVAC Controls	√	√	√			
2018	Holden	Astra Sedan NB4	Power Supply Transformer	√	√	√	√		
2018	Holden	Astra Sedan NB4	Power Steering Control Module	√	√	√	√		0089
2018	Holden	Astra Sedan NB4	Radio	√	√	√	√	√	0226
2018	Holden	Astra Sedan NB4	Parking Assist Control Module	√	√	√	√	√	0271 0247
2018	Holden	Astra Sedan NB4	Radio Controls	√	√	√			
2018	Holden	Astra Sedan NB4	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	Holden	Astra Sedan NB4	Frontview Camera Module	√	√	√	√		0205 0196 075A
2018	Holden	Astra Sedan NB4	Amplifier	√	√	√	√		
2018	Holden	Astra Sedan NB4	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Holden	Astra Sedan NB4	Keyless Entry Control Module	√	√	√	√	√	
2018	Holden	Astra Sedan NB4	Steering Column Lock Control Module	√	√	√	√		

2018	Holden	Astra-J	Engine Control Module	√	√	√	√	√	0263 0156 0209 0216 0132 0067 0147 0066 0115 0086 0154 0214 0215 0217 0006 0144 0128 0258
2018	Holden	Astra-J	Transmission Control Module	√	√	√	√	√	0019
2018	Holden	Astra-J	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2018	Holden	Astra-J	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2018	Holden	Astra-J	Body Control Module	√	√	√	√	√	0242 0263 0203 0208 0201 0206 0083 0160
2018	Holden	Astra-J	Instrument Cluster	√	√	√	√	√	0247
2018	Holden	Astra-J	HVAC Control Module	√	√	√	√	√	0007 0247 0129
2018	Holden	Astra-J	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2018	Holden	Astra-J	Parking Assist Control Module	√	√	√	√	√	0247
2018	Holden	Astra-J	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	Holden	Astra-J	Headlamp Control Module	√	√	√	√	√	0195
2018	Holden	Astra-J	Suspension Control Module	√	√	√	√	√	
2018	Holden	Astra-J	Parking Brake Control Module	√	√	√	√	√	0229
2018	Holden	Astra-J	Power Steering Control Module	√	√	√	√		0081 0080 0089
2018	Holden	Astra-J	Radio	√	√	√	√	√	
2018	Holden	Astra-J	Front Seat Heating Control Module	√	√	√	√	√	
2018	Holden	Astra-J	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2018	Holden	Astra-J	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2018	Holden	Astra-J	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Holden	Astra-J	Frontview Camera Module	√	√	√	√	√	0205 0196 0247
2018	Holden	Astra-K	Engine Control Module	√	√	√	√	√	0263 0156 0209 0216 0132 0067 0147 0066 0115 0086 0154 0214 0215 0217 0006 0144 0128
2018	Holden	Astra-K	Transmission Control Module	√	√	√	√	√	0019
2018	Holden	Astra-K	Electronic Brake Control Module	√	√	√	√	√	0090 0278
2018	Holden	Astra-K	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2018	Holden	Astra-K	Body Control Module	√	√	√	√	√	0242 0263 0203 0208 0201 0206 0083 0160
2018	Holden	Astra-K	Instrument Cluster	√	√	√	√	√	0247 0145
2018	Holden	Astra-K	HVAC Control Module	√	√	√	√	√	0007 0247 0129
2018	Holden	Astra-K	HVAC Controls	√	√	√			
2018	Holden	Astra-K	Serial Data Gateway Module	√	√	√			
2018	Holden	Astra-K	Radio Controls	√	√	√			
2018	Holden	Astra-K	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	Holden	Astra-K	Parking Assist Control Module	√	√	√	√	√	0271 0247
2018	Holden	Astra-K	Liftgate Control Module	√	√	√	√		0146 0169
2018	Holden	Astra-K	Human Machine Interface Control Module	√	√	√	√	√	0150

2018	Holden	Astra-K	Headlamp Control Module	√	√	√	√	√	0195
2018	Holden	Astra-K	Power Supply Transformer	√	√	√	√		
2018	Holden	Astra-K	Steering Column Lock Control Module	√	√	√	√		
2018	Holden	Astra-K	Power Steering Control Module	√	√	√	√		0089
2018	Holden	Astra-K	Radio	√	√	√	√	√	0226
2018	Holden	Astra-K	Frontview Camera Module	√	√	√	√		0205 0196 075A
2018	Holden	Astra-K	Active Safety Control Module	√	√	√	√	√	
2018	Holden	Astra-K	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Holden	Astra-K	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2018	Holden	Astra-K	Keyless Entry Control Module	√	√	√	√	√	
2018	Holden	Barina	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139
2018	Holden	Barina	Transmission Control Module	√	√	√	√	√	0019
2018	Holden	Barina	Electronic Brake Control Module	√	√	√	√	√	0090
2018	Holden	Barina	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2018	Holden	Barina	Body Control Module	√	√	√	√	√	0263 0203 0083 0159
2018	Holden	Barina	Instrument Cluster	√	√	√	√	√	
2018	Holden	Barina	HVAC Control Module	√	√	√	√	√	
2018	Holden	Barina	Serial Data Gateway Module	√	√	√			
2018	Holden	Barina	Parking Assist Control Module	√	√	√	√	√	0247
2018	Holden	Barina	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Holden	Barina	Power Steering Control Module	√	√	√	√		0207
2018	Holden	Barina	Radio	√	√	√	√	√	
2018	Holden	Barina	Front Seat Heating Control Module	√	√	√	√	√	
2018	Holden	Barina	Steering Column Lock Control Module	√	√	√	√		
2018	Holden	Barina	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2018	Holden	Barina	Keyless Entry Control Module	√	√	√	√	√	
2018	Holden	Captiva	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0213 0098 0216 0224 0449 0130 0143 0450 0265 0147 0108 0452 0237 0044 0045 0043 0135 0453 0454 0455 0456
2018	Holden	Captiva	Transmission Control Module	√	√	√	√	√	0019
2018	Holden	Captiva	Electronic Brake Control Module	√	√	√	√	√	0090
2018	Holden	Captiva	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2018	Holden	Captiva	Body Control Module	√	√	√	√	√	0242 0263 0261
2018	Holden	Captiva	Instrument Cluster	√	√	√	√	√	
2018	Holden	Captiva	HVAC Control Module	√	√	√		√	
2018	Holden	Captiva	Headlamp Control Module	√	√	√	√	√	0195 0065
2018	Holden	Captiva	Variable Power Steering Control Module	√				√	
2018	Holden	Captiva	Radio	√	√	√	√	√	

2018	Holden	Captiva	Left Side Object Detection Control Module	√	√	√		√	
2018	Holden	Captiva	Right Side Object Detection Control Module	√	√	√		√	
2018	Holden	Captiva	Parking Brake Control Module	√	√	√	√	√	0229
2018	Holden	Captiva	Remote Control Door Lock Receiver	√	√	√	√	√	0110 0160 0159 079B
2018	Holden	Captiva	Auxiliary Body Control Module	√	√	√	√	√	0050
2018	Holden	Captiva	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2018	Holden	Captiva	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2018	Holden	Cascada	Engine Control Module	√	√	√	√	√	0263 0156 0209 0216 0132 0067 0147 0066 0115 0086 0154 0214 0215 0217 0006 0144
2018	Holden	Cascada	Transmission Control Module	√	√	√	√	√	0019
2018	Holden	Cascada	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2018	Holden	Cascada	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2018	Holden	Cascada	Body Control Module	√	√	√	√	√	0242 0263 0203 0208 0201 0206 0083 0160
2018	Holden	Cascada	Instrument Cluster	√	√	√	√	√	0247
2018	Holden	Cascada	HVAC Control Module	√	√	√	√	√	0007 0247 0129
2018	Holden	Cascada	Folding Top Control Module	√	√	√	√	√	0247 0004 0005
2018	Holden	Cascada	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2018	Holden	Cascada	Headlamp Control Module	√	√	√	√	√	0195
2018	Holden	Cascada	Parking Assist Control Module	√	√	√	√	√	0247
2018	Holden	Cascada	Suspension Control Module	√	√	√	√	√	
2018	Holden	Cascada	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2018	Holden	Cascada	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Holden	Cascada	Frontview Camera Module	√	√	√	√	√	0205 0196 075A 0247
2018	Holden	Cascada	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2018	Holden	Cascada	Front Seat Heating Control Module	√	√	√	√	√	
2018	Holden	Cascada	Power Steering Control Module	√	√	√	√		0081 0080 0089
2018	Holden	Cascada	Radio	√	√	√	√	√	
2018	Holden	Cascada	Parking Brake Control Module	√	√	√	√	√	0229
2018	Holden	Colorado	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0222 0066 0147 0060 0044 0045 0086 0217 0109 0068 0084 0070 0071 0074 0075 0043 0173 0179 0181 0183 0185 0222
2018	Holden	Colorado	Transmission Control Module	√	√	√	√	√	0016
2018	Holden	Colorado	Electronic Brake Control Module	√	√	√	√	√	0090 0112
2018	Holden	Colorado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111



2018	Holden	Colorado	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Holden	Colorado	Instrument Cluster	√	√	√	√	√	0247
2018	Holden	Colorado	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Holden	Colorado	HVAC Controls	√	√	√	√	√	
2018	Holden	Colorado	Serial Data Gateway Module	√	√	√			
2018	Holden	Colorado	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	Holden	Colorado	Radio Controls	√	√	√	√	√	
2018	Holden	Colorado	Parking Assist Control Module	√	√	√	√	√	0247
2018	Holden	Colorado	Power Steering Control Module	√	√	√	√		0089
2018	Holden	Colorado	Radio	√	√	√	√	√	0226
2018	Holden	Colorado	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Holden	Colorado	Transfer Case Control Module	√	√	√	√	√	0037
2018	Holden	Colorado	Frontview Camera Module	√	√	√	√	√	0205 0196
2018	Holden	Commodore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0006 0115 0756 0086 0085 0154 0217 0258 0236 0139 0076 0132 0067 0147 0212 0214 0144 0210 0066 0060 0044 0045 0097 0068 0084 0073 0070 0071 0117 0119 0131 0179 0181 0183 0185 0232 0043
2018	Holden	Commodore	Transmission Control Module	√	√	√	√	√	0017 0020 0084
2018	Holden	Commodore	Electronic Brake Control Module	√	√	√	√	√	0090 0278
2018	Holden	Commodore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2018	Holden	Commodore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Holden	Commodore	Instrument Cluster	√	√	√	√	√	0247 0145
2018	Holden	Commodore	HVAC Control Module	√	√	√	√	√	0129
2018	Holden	Commodore	HVAC Controls	√	√	√			
2018	Holden	Commodore	Serial Data Gateway Module	√	√	√			
2018	Holden	Commodore	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	Holden	Commodore	Radio Controls	√	√	√			
2018	Holden	Commodore	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Holden	Commodore	Headlamp Control Module	√	√	√	√	√	0195

2018	Holden	Commodore	Parking Assist Control Module	√	√	√	√	√	
2018	Holden	Commodore	Power Steering Control Module	√	√	√	√		0089
2018	Holden	Commodore	Radio	√	√	√	√	√	0226
2018	Holden	Commodore	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	Holden	Commodore	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	Holden	Commodore	Suspension Control Module	√	√	√	√	√	
2018	Holden	Commodore	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2018	Holden	Commodore	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Holden	Commodore	Steering Column Lock Control Module	√	√	√	√		
2018	Holden	Commodore	Frontview Camera Module	√	√	√	√		0196
2018	Holden	Commodore	Active Safety Control Module	√	√	√	√	√	
2018	Holden	Commodore	Long Range Radar Sensor Module	√	√	√	√		0260
2018	Holden	Commodore	Video Processing Control Module	√	√	√	√	√	
2018	Holden	Commodore	Power Supply Transformer	√	√	√	√		
2018	Holden	Commodore	Left Side Object Detection Control Module	√	√	√		√	
2018	Holden	Commodore	Keyless Entry Control Module	√	√	√	√	√	0759
2018	Holden	Commodore	Amplifier	√	√	√	√		
2018	Holden	Equinox	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0210 0224 0130 0222 0066 0147 0060 079A 0044 0045 0097 0792 0109 0068 0084 0070 0071 0074 0075 0117 0043 0173 0179 0181 0183
2018	Holden	Equinox	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Holden	Equinox	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0229 0771
2018	Holden	Equinox	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2018	Holden	Equinox	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Holden	Equinox	Instrument Cluster	√	√	√	√	√	0247 0145
2018	Holden	Equinox	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Holden	Equinox	HVAC Controls	√	√	√			
2018	Holden	Equinox	Serial Data Gateway Module	√	√	√			
2018	Holden	Equinox	Steering Column Lock Control Module	√	√	√	√		
2018	Holden	Equinox	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	Holden	Equinox	Parking Assist Control Module	√	√	√	√	√	0271 0247

2018	Holden	Equinox	Power Steering Control Module	√	√	√	√		0089
2018	Holden	Equinox	Radio	√	√	√	√	√	0226
2018	Holden	Equinox	Seat Memory Control Module - Driver	√	√	√	√	√	
2018	Holden	Equinox	Audio Amplifier	√	√	√	√		
2018	Holden	Equinox	Radio Controls	√	√	√			
2018	Holden	Equinox	Frontview Camera Module	√	√	√	√		0205 0196 075A
2018	Holden	Equinox	Headlamp Control Module	√	√	√	√	√	0195
2018	Holden	Equinox	Left Side Object Detection Control Module	√	√	√		√	
2018	Holden	Equinox	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2018	Holden	Equinox	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Holden	Equinox	Keyless Entry Control Module	√	√	√	√	√	
2018	Holden	Equinox	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	Holden	Spark	Engine Control Module	√	√	√	√	√	0263 0156 0209 0066 0086 0217 0141 0139
2018	Holden	Spark	Transmission Control Module	√	√	√	√	√	0017
2018	Holden	Spark	Electronic Brake Control Module	√	√	√	√	√	0090
2018	Holden	Spark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2018	Holden	Spark	Body Control Module	√	√	√	√	√	0263 0203 0083 0159
2018	Holden	Spark	Instrument Cluster	√	√	√	√	√	0247
2018	Holden	Spark	Serial Data Gateway Module	√	√	√			
2018	Holden	Spark	Radio	√	√	√	√	√	
2018	Holden	Spark	Power Steering Control Module	√	√	√	√		0089
2018	Holden	Spark	Steering Column Lock Control Module	√	√	√	√		
2018	Holden	Spark	Parking Assist Control Module	√	√	√	√	√	0271 0247
2018	Holden	Spark	Keyless Entry Control Module	√	√	√	√	√	
2018	Holden	Trailblazer	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0222 0060 0044 0045 0086 0097 0084 0043
2018	Holden	Trailblazer	Transmission Control Module	√	√	√	√	√	0016
2018	Holden	Trailblazer	Electronic Brake Control Module	√	√	√	√	√	0090 0112
2018	Holden	Trailblazer	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2018	Holden	Trailblazer	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Holden	Trailblazer	Instrument Cluster	√	√	√	√	√	0247
2018	Holden	Trailblazer	HVAC Control Module	√	√	√	√	√	0007 0129
2018	Holden	Trailblazer	HVAC Controls	√	√	√	√	√	
2018	Holden	Trailblazer	Serial Data Gateway Module	√	√	√			
2018	Holden	Trailblazer	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	Holden	Trailblazer	Radio Controls	√	√	√	√	√	

2018	Holden	Trailblazer	Parking Assist Control Module	√	√	√	√	√	0247
2018	Holden	Trailblazer	Power Steering Control Module	√	√	√	√		0089
2018	Holden	Trailblazer	Radio	√	√	√	√	√	0226
2018	Holden	Trailblazer	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Holden	Trailblazer	Transfer Case Control Module	√	√	√	√	√	0037
2018	Holden	Trailblazer	Frontview Camera Module	√	√	√	√	√	0205 0196
2018	Holden	Trailblazer	Left Side Object Detection Control Module	√	√	√		√	
2018	Holden	Trailblazer	Right Side Object Detection Control Module	√	√	√		√	
2018	Holden	Trax	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006
2018	Holden	Trax	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Holden	Trax	Electronic Brake Control Module	√	√	√	√	√	0090
2018	Holden	Trax	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2018	Holden	Trax	Body Control Module	√	√	√	√	√	0263 0203 0083 0159
2018	Holden	Trax	Instrument Cluster	√	√	√	√	√	0247
2018	Holden	Trax	HVAC Control Module	√	√	√	√	√	
2018	Holden	Trax	Serial Data Gateway Module	√	√	√			
2018	Holden	Trax	Radio Controls	√	√	√			
2018	Holden	Trax	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	Holden	Trax	Power Supply Transformer	√	√	√	√		
2018	Holden	Trax	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Holden	Trax	Left Side Object Detection Control Module	√	√	√		√	
2018	Holden	Trax	Steering Column Lock Control Module	√	√	√	√		
2018	Holden	Trax	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2018	Holden	Trax	Power Steering Control Module	√	√	√	√		0207
2018	Holden	Trax	Radio	√	√	√	√	√	
2018	Holden	Trax	Front Seat Heating Control Module	√	√	√	√	√	
2018	Holden	Trax	Parking Assist Control Module	√	√	√	√	√	0247
2018	Holden	Trax	Frontview Camera Module	√	√	√	√	√	0205 0196 075A 0247
2018	Holden	Trax	Headlamp Control Module	√	√	√	√	√	0195
2018	Holden	Trax	Amplifier	√	√	√	√		
2018	Holden	Trax	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	Holden	Trax	Keyless Entry Control Module	√	√	√	√	√	
2018	Holden	Trax	Chassis Control Module	√	√	√	√	√	0217
2018	Ravon	Gentra	Engine Control Module	√	√	√	√	√	0068 0217 0210 0209 0156 0147
2018	Ravon	Gentra	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Ravon	Gentra	Electronic Brake Control Module	√	√	√	√	√	
2018	Ravon	Gentra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2018	Ravon	Gentra	Telematics Communication Interface Control Module	√	√	√	√	√	
2018	Ravon	Gentra	Variable Power Steering Control Module				√	√	

2018	Ravon	Matiz	Engine Control Module	√	√	√	√	√	0069 0087 079C
2018	Ravon	Matiz	Electronic Brake Control Module	√	√	√	√	√	
2018	Ravon	Matiz	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2018	Ravon	Matiz	Instrument Cluster	√	√	√	√	√	
2018	Ravon	Matiz	Keyless Entry Control Module				√		
2018	Ravon	Nexia R3	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2018	Ravon	Nexia R3	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Ravon	Nexia R3	Electronic Brake Control Module	√	√	√	√	√	0090
2018	Ravon	Nexia R3	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2018	Ravon	Nexia R3	Instrument Cluster	√	√	√		√	
2018	Ravon	Nexia R3	Telematics Communication Interface Control Module	√	√	√	√	√	
2018	Ravon	Nexia R3	Tire Pressure Indicator Module	√	√	√	√		079D 0234
2018	Ravon	Nexia R3	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2018	Ravon	Nexia R3	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Ravon	R2	Engine Control Module	√	√	√	√	√	0156 0140 0209 0132 0067 0263 0086 0217
2018	Ravon	R2	Transmission Control Module	√	√	√	√	√	0016
2018	Ravon	R2	Electronic Brake Control Module	√	√	√	√	√	0090
2018	Ravon	R2	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2018	Ravon	R2	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2018	Ravon	R2	Instrument Cluster	√	√	√	√	√	
2018	Ravon	R2	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	Ravon	R2	Keyless Entry Control Module				√		
2018	Ravon	R2	Radio	√	√	√	√	√	0226
2018	Ravon	R2	Power Steering Control Module	√	√	√	√		0089
2018	Ravon	R4	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139
2018	Ravon	R4	Transmission Control Module	√	√	√	√	√	0017 0036
2018	Ravon	R4	Electronic Brake Control Module	√	√	√	√	√	0090
2018	Ravon	R4	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	Ravon	R4	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	Ravon	R4	Instrument Cluster	√	√	√	√	√	0247
2018	Ravon	R4	Serial Data Gateway Module	√	√	√			
2018	Ravon	R4	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	Ravon	R4	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	Ravon	R4	Front Seat Heating Control Module	√	√	√	√	√	
2018	Ravon	R4	Radio	√	√	√	√	√	

2018	Ravon	R4	Telematics Communication Interface Control Module	√	√	√	√	√	
2017	Buick	Cascada	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0114 0258 0120
2017	Buick	Cascada	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Buick	Cascada	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2017	Buick	Cascada	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Buick	Cascada	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2017	Buick	Cascada	Instrument Cluster	√	√	√	√	√	0247
2017	Buick	Cascada	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Buick	Cascada	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Buick	Cascada	Frontview Camera Module	√	√	√	√	√	0247 0205 0196 075A
2017	Buick	Cascada	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2017	Buick	Cascada	Radio	√	√	√	√	√	
2017	Buick	Cascada	Multimedia Player Interface Module	√	√	√	√		0247
2017	Buick	Cascada	Folding Top Control Module	√	√	√	√	√	0247 0004 0005
2017	Buick	Cascada	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Buick	Cascada	Passenger Presence Module	√	√	√	√	√	0057
2017	Buick	Cascada	Chassis Control Module	√	√	√	√	√	0217
2017	Buick	Cascada	Front Seat Heating Control Module	√	√	√	√	√	
2017	Buick	Cascada	Headlamp Control Module	√	√	√	√	√	0195
2017	Buick	Cascada	Parking Brake Control Module	√	√	√	√	√	0229
2017	Buick	Cascada	Power Steering Control Module	√	√	√	√		0089 0081 0080
2017	Buick	Cascada	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Buick	Cascada	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2017	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0212
2017	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0016
2017	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2017	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2017	Buick	Enclave	Body Control Module	√	√	√	√	√	0263 0261
2017	Buick	Enclave	Theft Deterrent Module	√	√	√	√		
2017	Buick	Enclave	Instrument Cluster	√	√	√	√	√	
2017	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2017	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Buick	Enclave	Headlamp Control Module	√	√	√			
2017	Buick	Enclave	Liftgate Control Module	√	√	√	√		0146
2017	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247
2017	Buick	Enclave	Passenger Presence Module	√	√	√	√		0057

2017	Buick	Enclave	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2017	Buick	Enclave	Front Seat Heating Control Module	√	√	√	√	√	
2017	Buick	Enclave	Frontview Camera Module	√	√	√	√	√	0205 0196
2017	Buick	Enclave	Left Side Object Detection Control Module	√	√	√		√	
2017	Buick	Enclave	Right Side Object Detection Control Module	√	√	√		√	
2017	Buick	Enclave	Seat Memory Control Module	√	√	√	√	√	
2017	Buick	Enclave	Driver Door Switch Panel Control Module	√	√	√	√	√	
2017	Buick	Enclave	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2017	Buick	Enclave	Personal Audio Link Control Module	√	√	√			0231
2017	Buick	Enclave	Rear Audio Control Module	√	√	√	√		
2017	Buick	Enclave	Radio	√	√	√	√	√	
2017	Buick	Enclave	Digital Radio Receiver Control Module	√	√	√	√	√	
2017	Buick	Enclave	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2017	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0066 076D
2017	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2017	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2017	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0150 0232 0150
2017	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2017	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Buick	Encore	Serial Data Gateway Module	√	√	√			
2017	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Buick	Encore	Amplifier	√	√	√	√		
2017	Buick	Encore	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Buick	Encore	Radio	√	√	√	√	√	0226 0150
2017	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Buick	Encore	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Buick	Encore	Keyless Entry Control Module	√	√	√	√	√	
2017	Buick	Encore	Passenger Presence Module	√	√	√	√		0057
2017	Buick	Encore	Left Side Object Detection Control Module	√	√	√		√	
2017	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217
2017	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2017	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2017	Buick	Encore	Headlamp Control Module	√	√	√	√	√	0195

2017	Buick	Encore	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Buick	Encore	Power Steering Control Module	√	√	√	√		0207
2017	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Buick	Encore	Steering Column Lock Control Module	√	√	√	√		
2017	Buick	Encore	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2017	Buick	Envision	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0020 0085 0212 0221
2017	Buick	Envision	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Buick	Envision	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2017	Buick	Envision	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Buick	Envision	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Buick	Envision	Instrument Cluster	√	√	√	√	√	0247
2017	Buick	Envision	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Buick	Envision	HVAC Controls	√	√	√	√	√	
2017	Buick	Envision	Serial Data Gateway Module	√	√	√			
2017	Buick	Envision	Steering Column Lock Control Module	√	√	√	√		
2017	Buick	Envision	Headlamp Control Module	√	√	√	√	√	0195
2017	Buick	Envision	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	Buick	Envision	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Buick	Envision	Amplifier	√	√	√	√		
2017	Buick	Envision	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Buick	Envision	Radio	√	√	√	√	√	0226 0150
2017	Buick	Envision	Radio Controls	√	√	√	√		0241
2017	Buick	Envision	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Buick	Envision	Keyless Entry Control Module	√	√	√	√	√	
2017	Buick	Envision	Passenger Presence Module	√	√	√	√	√	0057
2017	Buick	Envision	Left Side Object Detection Control Module	√	√	√		√	
2017	Buick	Envision	Right Side Object Detection Control Module	√	√	√		√	
2017	Buick	Envision	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2017	Buick	Envision	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Buick	Envision	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2017	Buick	Envision	Power Steering Control Module	√	√	√	√		0081 0080 0089
2017	Buick	Envision	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Buick	Envision	Active Safety Control Module	√	√	√	√	√	
2017	Buick	Envision	Frontview Camera Module	√	√	√	√	√	0205 0196 075A



2017	Buick	Envision	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Buick	Envision	Video Processing Control Module	√	√	√	√	√	
2017	Buick	Envision	Suspension Control Module	√	√	√	√	√	
2017	Buick	Envision	Accessory DC/AC Power Inverter Module	√	√	√	√	√	
2017	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0006 0756 0085 0036
2017	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0017 0036 0020 0084
2017	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2017	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0247
2017	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Buick	LaCrosse	HVAC Controls	√	√	√	√	√	
2017	Buick	LaCrosse	Serial Data Gateway Module	√	√	√			
2017	Buick	LaCrosse	Amplifier	√	√	√	√		
2017	Buick	LaCrosse	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Buick	LaCrosse	Radio Controls	√	√	√	√		0241
2017	Buick	LaCrosse	Media Disc Player	√	√	√	√	√	
2017	Buick	LaCrosse	Radio	√	√	√	√	√	0226 0150
2017	Buick	LaCrosse	Infotainment Control Touchpad	√	√	√	√	√	
2017	Buick	LaCrosse	Active Safety Control Module	√	√	√	√	√	
2017	Buick	LaCrosse	Frontview Camera Module	√	√	√	√		0196
2017	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√		√	
2017	Buick	LaCrosse	Right Side Object Detection Control Module	√	√	√		√	
2017	Buick	LaCrosse	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2017	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2017	Buick	LaCrosse	Passenger Presence Module	√	√	√	√	√	0057
2017	Buick	LaCrosse	Chassis Control Module	√	√	√	√	√	0014 0078
2017	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2017	Buick	LaCrosse	Power Steering Control Module	√	√	√	√		0081 0080 0089
2017	Buick	LaCrosse	Suspension Control Module	√	√	√	√	√	
2017	Buick	LaCrosse	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Buick	LaCrosse	Transmission Range Control Module	√	√	√	√		0014 0078 0013

2017	Buick	Regal	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0066 0086 0217 0258 0213 0212
2017	Buick	Regal	Transmission Control Module	√	√	√	√	√	0016 0017 0036
2017	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2017	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2017	Buick	Regal	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Buick	Regal	Instrument Cluster	√	√	√	√	√	0247
2017	Buick	Regal	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Buick	Regal	HVAC Controls	√	√	√	√	√	
2017	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0247
2017	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	
2017	Buick	Regal	Passenger Presence Module	√	√	√	√		0057
2017	Buick	Regal	Front Seat Heating Control Module	√	√	√	√	√	
2017	Buick	Regal	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Buick	Regal	Left Side Object Detection Control Module	√	√	√		√	
2017	Buick	Regal	Seat Memory Control Module	√	√	√	√	√	0310
2017	Buick	Regal	Amplifier	√	√	√	√		
2017	Buick	Regal	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Buick	Regal	Radio	√	√	√	√	√	0226 0150
2017	Buick	Regal	Radio Controls	√	√	√	√		0241
2017	Buick	Regal	Media Disc Player	√	√	√	√	√	
2017	Buick	Regal	Parking Brake Control Module	√	√	√	√	√	0229
2017	Buick	Regal	Suspension Control Module	√	√	√	√	√	
2017	Buick	Regal	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Buick	Regal	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2017	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	
2017	Buick	Regal	Distance Sensing Cruise Control Module	√	√	√	√		0047
2017	Buick	Verano	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0213
2017	Buick	Verano	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Buick	Verano	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2017	Buick	Verano	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2017	Buick	Verano	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2017	Buick	Verano	Instrument Cluster	√	√	√	√	√	0247
2017	Buick	Verano	HVAC Control Module	√	√	√	√	√	0007 0129

2017	Buick	Verano	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Buick	Verano	Radio	√	√	√	√	√	
2017	Buick	Verano	Multimedia Player Interface Module	√	√	√	√	√	0247
2017	Buick	Verano	Keyless Entry Control Module	√	√	√	√	√	
2017	Buick	Verano	Passenger Presence Module	√	√	√	√	√	0057
2017	Buick	Verano	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Buick	Verano	Left Side Object Detection Control Module	√	√	√		√	
2017	Buick	Verano	Right Side Object Detection Control Module	√	√	√		√	
2017	Buick	Verano	Chassis Control Module	√	√	√	√	√	0217
2017	Buick	Verano	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2017	Buick	Verano	Parking Brake Control Module	√	√	√	√	√	0229
2017	Buick	Verano	Power Steering Control Module	√	√	√	√	√	0089 0081 0080
2017	Buick	Verano	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Buick	Verano	Front Seat Heating Control Module	√	√	√	√	√	
2017	Buick	Verano	Active Safety Control Module	√	√	√	√	√	
2017	Buick	Verano	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Buick	Verano	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Cadillac	ATS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0020 0213 0256 0085
2017	Cadillac	ATS	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2017	Cadillac	ATS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2017	Cadillac	ATS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Cadillac	ATS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Cadillac	ATS	Instrument Cluster	√	√	√	√	√	0247
2017	Cadillac	ATS	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Cadillac	ATS	Radio/HVAC Controls	√	√	√	√	√	
2017	Cadillac	ATS	Serial Data Gateway Module	√	√	√			
2017	Cadillac	ATS	Headlamp Control Module	√	√	√	√	√	0195
2017	Cadillac	ATS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Cadillac	ATS	Steering Column Lock Control Module	√	√	√	√		
2017	Cadillac	ATS	Amplifier	√	√	√	√		
2017	Cadillac	ATS	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Cadillac	ATS	Media Disc Player	√	√	√	√	√	

2017	Cadillac	ATS	Navigation Control Module	√	√	√	√	√	
2017	Cadillac	ATS	Radio	√	√	√	√	√	0226 0150
2017	Cadillac	ATS	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Cadillac	ATS	Parking Assist Control Module	√	√	√	√	√	
2017	Cadillac	ATS	Keyless Entry Control Module	√	√	√	√	√	
2017	Cadillac	ATS	Passenger Presence Module	√	√	√	√		0057
2017	Cadillac	ATS	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2017	Cadillac	ATS	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2017	Cadillac	ATS	Pedestrian Impact Detection Module	√	√	√	√		0170
2017	Cadillac	ATS	Vehicle Performance Data Recorder	√	√	√	√		
2017	Cadillac	ATS	Left Side Object Detection Control Module	√	√	√		√	
2017	Cadillac	ATS	Right Side Object Detection Control Module	√	√	√		√	
2017	Cadillac	ATS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2017	Cadillac	ATS	Parking Brake Control Module	√	√	√	√	√	0229
2017	Cadillac	ATS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2017	Cadillac	ATS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Cadillac	ATS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2017	Cadillac	ATS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Cadillac	ATS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2017	Cadillac	ATS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2017	Cadillac	ATS	Transfer Case Control Module	√	√	√	√	√	0099 0100 07B0
2017	Cadillac	ATS	Active Safety Control Module	√	√	√	√	√	
2017	Cadillac	ATS	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Cadillac	ATS	Rear Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	ATS	Left Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	ATS	Right Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	ATS	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Cadillac	ATS	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2017	Cadillac	CT6	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0176 0238 0256 0085
2017	Cadillac	CT6	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2017	Cadillac	CT6	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2017	Cadillac	CT6	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2017	Cadillac	CT6	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Cadillac	CT6	Instrument Cluster	√	√	√	√	√	0247
2017	Cadillac	CT6	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Cadillac	CT6	HVAC Controls	√	√	√	√	√	
2017	Cadillac	CT6	Serial Data Gateway Module	√	√	√			
2017	Cadillac	CT6	Battery Energy Control Module	√			√		
2017	Cadillac	CT6	Electric A/C Compressor Control Module	√					
2017	Cadillac	CT6	Steering Column Lock Control Module	√	√	√	√		
2017	Cadillac	CT6	Headlamp Control Module	√	√	√	√	√	0195
2017	Cadillac	CT6	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Cadillac	CT6	Drive Motor Control Module 1	√	√	√	√		
2017	Cadillac	CT6	Drive Motor Control Module 2	√	√	√	√		
2017	Cadillac	CT6	Hybrid Powertrain Control Module	√	√	√	√	√	0018
2017	Cadillac	CT6	Hybrid Powertrain Control Module 2	√	√	√	√	√	0125 0056 0218 0122
2017	Cadillac	CT6	Frontview Camera Module	√	√	√	√	√	0247 0196
2017	Cadillac	CT6	Amplifier	√	√	√	√		
2017	Cadillac	CT6	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Cadillac	CT6	Radio Controls	√	√	√	√		0241
2017	Cadillac	CT6	Media Disc Player	√	√	√	√	√	
2017	Cadillac	CT6	Navigation Control Module	√	√	√	√	√	
2017	Cadillac	CT6	Radio	√	√	√	√	√	0226 0150
2017	Cadillac	CT6	Infotainment Control Touchpad	√	√	√	√	√	
2017	Cadillac	CT6	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Cadillac	CT6	Keyless Entry Control Module	√	√	√	√	√	
2017	Cadillac	CT6	Passenger Presence Module	√	√	√	√	√	0057
2017	Cadillac	CT6	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2017	Cadillac	CT6	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2017	Cadillac	CT6	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Cadillac	CT6	Left Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	CT6	Right Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	CT6	Rear Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	CT6	Left Side Object Detection Control Module	√	√	√		√	
2017	Cadillac	CT6	Brake Booster Control Module	√	√	√	√		
2017	Cadillac	CT6	Rear Wheel Steering Control Module	√	√	√	√		
2017	Cadillac	CT6	Power Steering Control Module	√	√	√	√		0081 0080 0089
2017	Cadillac	CT6	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Cadillac	CT6	Seat Memory Control Module - Left Rear	√	√	√	√	√	
2017	Cadillac	CT6	Seat Memory Control Module - Passenger	√	√	√	√	√	

2017	Cadillac	CT6	Seat Memory Control Module - Right Rear	√	√	√	√	√	
2017	Cadillac	CT6	Active Safety Control Module	√	√	√	√	√	
2017	Cadillac	CT6	Night Vision Camera Control Module	√	√	√	√		0492
2017	Cadillac	CT6	Video Processing Control Module	√	√	√	√	√	
2017	Cadillac	CT6	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Cadillac	CT6	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	Cadillac	CT6	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2017	Cadillac	CT6	Transfer Case Control Module	√	√	√	√	√	0037 0099
2017	Cadillac	CT6	Suspension Control Module	√	√	√	√	√	0245
2017	Cadillac	CT6	Accessory DC/AC Power Inverter Module	√	√	√	√	√	
2017	Cadillac	CTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0756 0085 0230 0131
2017	Cadillac	CTS	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2017	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2017	Cadillac	CTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Cadillac	CTS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Cadillac	CTS	Instrument Cluster	√	√	√	√	√	0247
2017	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Cadillac	CTS	Radio/HVAC Controls	√	√	√	√	√	
2017	Cadillac	CTS	Serial Data Gateway Module	√	√	√			
2017	Cadillac	CTS	Radio	√	√	√	√	√	0226 0150 0267 0269
2017	Cadillac	CTS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	0195
2017	Cadillac	CTS	Amplifier	√	√	√	√		
2017	Cadillac	CTS	Navigation Control Module	√	√	√	√	√	
2017	Cadillac	CTS	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Cadillac	CTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Cadillac	CTS	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Cadillac	CTS	Keyless Entry Control Module	√	√	√	√	√	
2017	Cadillac	CTS	Passenger Presence Module	√	√	√	√		0057
2017	Cadillac	CTS	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2017	Cadillac	CTS	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2017	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√		0170

2017	Cadillac	CTS	Vehicle Performance Data Recorder	√	√	√	√		
2017	Cadillac	CTS	Left Side Object Detection Control Module	√	√	√		√	
2017	Cadillac	CTS	Right Side Object Detection Control Module	√	√	√		√	
2017	Cadillac	CTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Cadillac	CTS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2017	Cadillac	CTS	Steering Column Lock Control Module	√	√	√	√		
2017	Cadillac	CTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2017	Cadillac	CTS	Parking Brake Control Module	√	√	√	√	√	0229
2017	Cadillac	CTS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2017	Cadillac	CTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	0099 0100 07B0
2017	Cadillac	CTS	Active Safety Control Module	√	√	√	√	√	
2017	Cadillac	CTS	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Cadillac	CTS	Left Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	CTS	Rear Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	CTS	Right Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	CTS	Video Processing Control Module	√	√	√	√	√	
2017	Cadillac	CTS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2017	Cadillac	CTS	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2017	Cadillac	CTS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2017	Cadillac	CTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2017	Cadillac	CTS	Active Safety External Communication Control	√	√	√	√		
2017	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2017	Cadillac	Escalade	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2017	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2017	Cadillac	Escalade	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Cadillac	Escalade	Instrument Cluster	√	√	√	√	√	0247
2017	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Cadillac	Escalade	Radio/HVAC Controls	√	√	√	√	√	
2017	Cadillac	Escalade	Serial Data Gateway Module	√	√	√			
2017	Cadillac	Escalade	Steering Column Lock Control Module	√	√	√	√		
2017	Cadillac	Escalade	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	Cadillac	Escalade	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010

2017	Cadillac	Escalade	Amplifier	√	√	√	√		
2017	Cadillac	Escalade	Assist Step Control Module	√	√	√	√	√	
2017	Cadillac	Escalade	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Cadillac	Escalade	Media Disc Player	√	√	√	√	√	
2017	Cadillac	Escalade	Rear Audio Control Module	√	√	√	√	√	
2017	Cadillac	Escalade	Radio	√	√	√	√	√	0226 0150
2017	Cadillac	Escalade	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Cadillac	Escalade	Left Side Object Detection Control Module	√	√	√		√	
2017	Cadillac	Escalade	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Cadillac	Escalade	Seat Memory Control Module - Passenger	√	√	√	√	√	
2017	Cadillac	Escalade	Keyless Entry Control Module	√	√	√	√	√	
2017	Cadillac	Escalade	Passenger Presence Module	√	√	√	√	√	0057
2017	Cadillac	Escalade	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2017	Cadillac	Escalade	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2017	Cadillac	Escalade	Active Safety Control Module	√	√	√	√	√	
2017	Cadillac	Escalade	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Cadillac	Escalade	Right Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	Escalade	Left Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	Escalade	Video Processing Control Module	√	√	√	√	√	
2017	Cadillac	Escalade	Right Rear Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	Escalade	Left Rear Radar Short Range Sensor Module	√	√	√			
2017	Cadillac	Escalade	Frontview Camera Module	√	√	√	√	√	0196 0205
2017	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	0037
2017	Cadillac	Escalade	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2017	Cadillac	Escalade	Power Steering Control Module	√	√	√	√	√	0150
2017	Cadillac	Escalade	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Cadillac	Escalade	Suspension Control Module	√	√	√	√	√	0245
2017	Cadillac	Escalade	Parking Brake Control Module	√	√	√	√	√	0229
2017	Cadillac	Escalade	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2017	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2017	Cadillac	Escalade ESV	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2017	Cadillac	Escalade ESV	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2017	Cadillac	Escalade ESV	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150



2017	Cadillac	Escalade ESV	Instrument Cluster	√	√	√	√	√	0247
2017	Cadillac	Escalade ESV	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Cadillac	Escalade ESV	Radio/HVAC Controls		√	√			
2017	Cadillac	Escalade ESV	Serial Data Gateway Module	√	√	√			
2017	Cadillac	Escalade ESV	Steering Column Lock Control Module	√	√	√	√		
2017	Cadillac	Escalade ESV	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	Cadillac	Escalade ESV	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Cadillac	Escalade ESV	Amplifier	√	√	√	√		
2017	Cadillac	Escalade ESV	Assist Step Control Module	√	√	√	√	√	
2017	Cadillac	Escalade ESV	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Cadillac	Escalade ESV	Media Disc Player	√	√	√	√	√	
2017	Cadillac	Escalade ESV	Rear Audio Control Module	√	√	√	√	√	
2017	Cadillac	Escalade ESV	Radio	√	√	√	√	√	0226 0150
2017	Cadillac	Escalade ESV	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Cadillac	Escalade ESV	Left Side Object Detection Control Module	√	√	√		√	
2017	Cadillac	Escalade ESV	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Cadillac	Escalade ESV	Seat Memory Control Module - Passenger	√	√	√	√	√	
2017	Cadillac	Escalade ESV	Keyless Entry Control Module	√	√	√	√	√	
2017	Cadillac	Escalade ESV	Passenger Presence Module	√	√	√	√	√	0057
2017	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2017	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2017	Cadillac	Escalade ESV	Active Safety Control Module	√	√	√	√	√	
2017	Cadillac	Escalade ESV	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Cadillac	Escalade ESV	Left Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	Escalade ESV	Left Rear Radar Short Range Sensor Module	√	√	√			
2017	Cadillac	Escalade ESV	Right Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	Escalade ESV	Right Rear Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	Escalade ESV	Video Processing Control Module	√	√	√	√	√	
2017	Cadillac	Escalade ESV	Frontview Camera Module	√	√	√	√	√	0196 0205
2017	Cadillac	Escalade ESV	Transfer Case Control Module	√	√	√	√	√	0037
2017	Cadillac	Escalade ESV	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2017	Cadillac	Escalade ESV	Power Steering Control Module	√	√	√	√	√	0150
2017	Cadillac	Escalade ESV	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Cadillac	Escalade ESV	Suspension Control Module	√	√	√	√	√	0245
2017	Cadillac	Escalade ESV	Parking Brake Control Module	√	√	√	√	√	0229
2017	Cadillac	Escalade ESV	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2017	Cadillac	XT5	Engine Control Module	√	√	√	√	√	0263 0156 0209 0006 0115 0756 0086 0085 0154 0217 0258 0236
2017	Cadillac	XT5	Transmission Control Module	√	√	√	√	√	0020 0084
2017	Cadillac	XT5	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277

2017	Cadillac	XT5	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Cadillac	XT5	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Cadillac	XT5	Instrument Cluster	√	√	√	√	√	0247
2017	Cadillac	XT5	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Cadillac	XT5	HVAC Controls	√	√	√	√	√	
2017	Cadillac	XT5	Serial Data Gateway Module	√	√	√			
2017	Cadillac	XT5	Radio	√	√	√	√	√	0226 0150
2017	Cadillac	XT5	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Cadillac	XT5	Headlamp Control Module	√	√	√	√	√	0195
2017	Cadillac	XT5	Passenger Presence Module	√	√	√	√	√	0057
2017	Cadillac	XT5	Keyless Entry Control Module	√	√	√	√	√	
2017	Cadillac	XT5	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Cadillac	XT5	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Cadillac	XT5	Rear Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	XT5	Left Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	XT5	Right Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	XT5	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Cadillac	XT5	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	Cadillac	XT5	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Cadillac	XT5	Radio Controls	√	√	√	√		0241
2017	Cadillac	XT5	Amplifier	√	√	√	√		
2017	Cadillac	XT5	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2017	Cadillac	XT5	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2017	Cadillac	XT5	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Cadillac	XT5	Left Side Object Detection Control Module	√	√	√		√	
2017	Cadillac	XT5	Active Safety Control Module	√	√	√	√		
2017	Cadillac	XT5	Frontview Camera Module	√	√	√	√		0196
2017	Cadillac	XT5	Video Processing Control Module	√	√	√	√	√	
2017	Cadillac	XT5	Chassis Control Module	√	√	√	√	√	0014 0078
2017	Cadillac	XT5	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2017	Cadillac	XT5	Suspension Control Module	√	√	√	√	√	
2017	Cadillac	XT5	Steering Column Lock Control Module	√	√	√	√		
2017	Cadillac	XT5	Media Disc Player	√	√	√	√	√	
2017	Cadillac	XT5	Power Steering Control Module	√	√	√	√		0089 0084
2017	Cadillac	XT5	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2017	Cadillac	XTS	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0066 0086 0217 0258 0263 0006 0131

2017	Cadillac	XTS	Transmission Control Module	√	√	√	√	√	0016
2017	Cadillac	XTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2017	Cadillac	XTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Cadillac	XTS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Cadillac	XTS	Instrument Cluster	√	√	√	√	√	0247
2017	Cadillac	XTS	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Cadillac	XTS	Radio/HVAC Controls	√	√	√	√	√	
2017	Cadillac	XTS	Serial Data Gateway Module	√	√	√			
2017	Cadillac	XTS	Headlamp Control Module	√	√	√	√	√	0195
2017	Cadillac	XTS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Cadillac	XTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Cadillac	XTS	Keyless Entry Control Module	√	√	√	√	√	
2017	Cadillac	XTS	Passenger Presence Module	√	√	√	√		0057
2017	Cadillac	XTS	Active Safety Control Module	√	√	√	√	√	
2017	Cadillac	XTS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2017	Cadillac	XTS	Left Side Object Detection Control Module	√	√	√		√	
2017	Cadillac	XTS	Right Side Object Detection Control Module	√	√	√		√	
2017	Cadillac	XTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Cadillac	XTS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2017	Cadillac	XTS	Video Processing Control Module	√	√	√	√	√	
2017	Cadillac	XTS	Amplifier	√	√	√	√		
2017	Cadillac	XTS	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Cadillac	XTS	Radio	√	√	√	√	√	0226 0150
2017	Cadillac	XTS	Media Disc Player	√	√	√	√	√	
2017	Cadillac	XTS	Parking Brake Control Module	√	√	√	√	√	0229
2017	Cadillac	XTS	Power Steering Control Module	√	√	√	√	√	0089
2017	Cadillac	XTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2017	Cadillac	XTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Cadillac	XTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2017	Cadillac	XTS	Rear Differential Clutch Control Module	√	√	√	√	√	
2017	Cadillac	XTS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2017	Cadillac	XTS	Left Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	XTS	Right Front Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	XTS	Rear Short Range Radar Sensor Module	√	√	√			
2017	Cadillac	XTS	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Cadillac	XTS	Steering Column Lock Control Module	√	√	√	√		

2017	Chevrolet	Aveo	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139 0020 0066 076D 0213 0006 0144 0258 0147 0058 0218
2017	Chevrolet	Aveo	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Chevrolet	Aveo	Electronic Brake Control Module	√	√	√	√	√	0090
2017	Chevrolet	Aveo	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2017	Chevrolet	Aveo	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0168 0232 0158
2017	Chevrolet	Aveo	Instrument Cluster	√	√	√	√	√	0247
2017	Chevrolet	Aveo	HVAC Control Module	√	√	√	√	√	
2017	Chevrolet	Aveo	Serial Data Gateway Module	√	√	√			
2017	Chevrolet	Aveo	Keyless Entry Control Module	√	√	√	√	√	
2017	Chevrolet	Aveo	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Aveo	Chassis Control Module	√	√	√	√	√	0217
2017	Chevrolet	Aveo	Front Seat Heating Control Module	√	√	√	√	√	
2017	Chevrolet	Aveo	Radio	√	√	√	√	√	
2017	Chevrolet	Aveo	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Chevrolet	Aveo	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Chevrolet	Aveo	Power Steering Control Module	√	√	√	√		0207
2017	Chevrolet	Aveo	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Chevrolet	Beat	Engine Control Module	√	√	√	√	√	0133 0210 0098 0096 0094 0216 0143 0265 0393 0173 0149 0069 0087 0209 0156 0147 0217
2017	Chevrolet	Beat	Transmission Control Module	√	√	√	√	√	
2017	Chevrolet	Beat	Electronic Brake Control Module	√	√	√	√	√	0090
2017	Chevrolet	Beat	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2017	Chevrolet	Beat	Instrument Cluster	√	√	√	√	√	
2017	Chevrolet	Beat	Keyless Entry Control Module				√		
2017	Chevrolet	Beat	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Beat	Fuel Injector Control Module	√	√	√	√	√	
2017	Chevrolet	Beat	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2017	Chevrolet	Beat	Power Steering Control Module	√	√	√	√		0089
2017	Chevrolet	Beat	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Chevrolet	Beat	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Chevrolet	Beat	Radio	√	√	√	√	√	
2017	Chevrolet	Bolt	Engine Control Module	√	√	√	√	√	0258
2017	Chevrolet	Bolt	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229
2017	Chevrolet	Bolt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2017	Chevrolet	Bolt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Chevrolet	Bolt	Instrument Cluster	√	√	√	√	√	0247
2017	Chevrolet	Bolt	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Chevrolet	Bolt	HVAC Controls	√	√	√	√	√	
2017	Chevrolet	Bolt	Serial Data Gateway Module	√	√	√			
2017	Chevrolet	Bolt	Hybrid Powertrain Control Module	√	√	√	√	√	0018
2017	Chevrolet	Bolt	Hybrid Powertrain Control Module 2	√	√	√	√	√	0125 0262 0079 0122 0123 0127
2017	Chevrolet	Bolt	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Bolt	Battery Energy Control Module	√			√		
2017	Chevrolet	Bolt	Frontview Camera Module	√	√	√	√	√	0247 0196
2017	Chevrolet	Bolt	Keyless Entry Control Module	√	√	√	√	√	
2017	Chevrolet	Bolt	Passenger Presence Module	√	√	√	√	√	0057
2017	Chevrolet	Bolt	Electric A/C Compressor Control Module	√					
2017	Chevrolet	Bolt	Radio	√	√	√	√	√	
2017	Chevrolet	Bolt	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2017	Chevrolet	Bolt	Chassis Control Module	√	√	√	√	√	0014 0078
2017	Chevrolet	Bolt	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Chevrolet	Bolt	Left Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Bolt	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Chevrolet	Bolt	Power Line Communication Module	√			√		
2017	Chevrolet	Bolt	Brake Booster Control Module	√	√	√	√		
2017	Chevrolet	Bolt	Power Steering Control Module	√	√	√	√		0089 0084
2017	Chevrolet	Bolt	Video Processing Control Module	√	√	√	√	√	
2017	Chevrolet	Bolt	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Chevrolet	Bolt	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2017	Chevrolet	Camaro	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0756 0085 0020 0131
2017	Chevrolet	Camaro	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2017	Chevrolet	Camaro	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229
2017	Chevrolet	Camaro	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2017	Chevrolet	Camaro	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Chevrolet	Camaro	Instrument Cluster	√	√	√	√	√	0247
2017	Chevrolet	Camaro	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Chevrolet	Camaro	HVAC Controls	√	√	√	√	√	
2017	Chevrolet	Camaro	Serial Data Gateway Module	√	√	√			
2017	Chevrolet	Camaro	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Camaro	Mobile Telephone Control Module	√	√	√	√	√	0247
2017	Chevrolet	Camaro	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Chevrolet	Camaro	Folding Top Control Module	√	√	√	√	√	
2017	Chevrolet	Camaro	Keyless Entry Control Module	√	√	√	√	√	
2017	Chevrolet	Camaro	Passenger Presence Module	√	√	√	√	√	0057
2017	Chevrolet	Camaro	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2017	Chevrolet	Camaro	Left Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Camaro	Right Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Camaro	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Chevrolet	Camaro	Amplifier	√	√	√	√		
2017	Chevrolet	Camaro	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Chevrolet	Camaro	Radio Controls	√	√	√	√		0241
2017	Chevrolet	Camaro	Radio	√	√	√	√	√	0226 0150
2017	Chevrolet	Camaro	Vehicle Performance Data Recorder	√	√	√	√		
2017	Chevrolet	Camaro	Navigation Control Module	√	√	√	√	√	
2017	Chevrolet	Camaro	Parking Brake Control Module	√	√	√	√	√	0229
2017	Chevrolet	Camaro	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2017	Chevrolet	Camaro	Suspension Control Module	√	√	√	√	√	0245
2017	Chevrolet	Camaro	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Chevrolet	Camaro	Steering Column Lock Control Module	√	√	√	√		
2017	Chevrolet	Camaro	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2017	Chevrolet	Camaro	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Chevrolet	Caprice	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2017	Chevrolet	Caprice	Transmission Control Module	√	√	√	√	√	0016
2017	Chevrolet	Caprice	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2017	Chevrolet	Caprice	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2017	Chevrolet	Caprice	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Chevrolet	Caprice	Instrument Cluster	√	√	√	√	√	0247 0145

2017	Chevrolet	Caprice	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Chevrolet	Caprice	HVAC Controls	√	√	√	√	√	
2017	Chevrolet	Caprice	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Caprice	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Chevrolet	Caprice	Radio	√	√	√	√	√	
2017	Chevrolet	Caprice	Radio Controls	√	√	√	√	√	0247
2017	Chevrolet	Caprice	Head-Up Display Module	√	√	√	√	√	
2017	Chevrolet	Caprice	Left Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Caprice	Right Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Caprice	Passenger Presence Module	√	√	√	√		0057
2017	Chevrolet	Caprice	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2017	Chevrolet	Caprice	Fuel Injector Control Module	√			√	√	
2017	Chevrolet	Caprice	Parking Assist Control Module	√	√	√	√	√	0247
2017	Chevrolet	Caprice	Parking Brake Control Module	√	√	√	√	√	0229
2017	Chevrolet	Caprice	Power Steering Control Module	√	√	√	√		0081
2017	Chevrolet	Caprice	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Chevrolet	Caprice	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2017	Chevrolet	Captiva	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0156 0222 0066 0147 0115 0060 079A 0044 0045 0086 0097 0221 0792 0217 0109 0068 0084 0070 0071 0074 0075 0117 0043 0173 0179 0181 0183 0185 0232 0209 0098 0216 0449 0143 0450 0265 0108 0452 0237 0135 0453 0454 0455 0456
2017	Chevrolet	Captiva	Transmission Control Module	√	√	√	√	√	0020 0084 0017 0036
2017	Chevrolet	Captiva	Electronic Brake Control Module	√	√	√	√	√	0090 0111
2017	Chevrolet	Captiva	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2017	Chevrolet	Captiva	Body Control Module	√	√	√	√	√	0242 0263 0261
2017	Chevrolet	Captiva	Theft Deterrent Module	√	√	√	√		
2017	Chevrolet	Captiva	Instrument Cluster	√	√	√	√	√	
2017	Chevrolet	Captiva	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Chevrolet	Captiva	Parking Assist Control Module	√	√	√	√	√	
2017	Chevrolet	Captiva	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160 079B 0233 0110
2017	Chevrolet	Captiva	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Captiva	Front Seat Heating Control Module	√	√	√	√		
2017	Chevrolet	Captiva	Radio	√	√	√	√	√	

2017	Chevrolet	Captiva	Digital Radio Receiver Control Module	√	√	√	√	√	
2017	Chevrolet	Captiva	Parking Brake Control Module	√	√	√	√	√	0229
2017	Chevrolet	Captiva	Mobile Telephone Control Module	√	√	√	√	√	
2017	Chevrolet	Captiva	Auxiliary Body Control Module	√	√	√	√	√	0050
2017	Chevrolet	Captiva	Headlamp Control Module	√	√	√	√	√	0195 0065
2017	Chevrolet	Captiva	Left Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Captiva	Right Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Captiva	Chassis Control Module	√	√	√	√	√	0217
2017	Chevrolet	Captiva	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2017	Chevrolet	Captiva	Power Steering Control Module	√	√	√	√		0081 0080 0089
2017	Chevrolet	City Express	Engine Control Module	√	√	√	√	√	0217 0067 0140
2017	Chevrolet	City Express	Transmission Control Module	√	√	√	√		0276 0036
2017	Chevrolet	City Express	Electronic Brake Control Module	√	√	√	√	√	0090 0111
2017	Chevrolet	City Express	Inflatable Restraint Sensing and Diagnostic Module		√	√			
2017	Chevrolet	City Express	Body Control Module	√	√	√	√	√	0041
2017	Chevrolet	City Express	Instrument Cluster		√	√	√		
2017	Chevrolet	City Express	Underhood Fuse Block	√	√	√	√	√	
2017	Chevrolet	City Express	Radio	√	√	√	√		
2017	Chevrolet	City Express	Tire Pressure Indicator Module	√	√	√	√	√	0160
2017	Chevrolet	City Express	Passenger Presence Module						0057
2017	Chevrolet	City Express	Power Steering Control Module	√	√	√	√		
2017	Chevrolet	Cobalt	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139
2017	Chevrolet	Cobalt	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Chevrolet	Cobalt	Electronic Brake Control Module	√	√	√	√	√	0090
2017	Chevrolet	Cobalt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2017	Chevrolet	Cobalt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Chevrolet	Cobalt	Instrument Cluster	√	√	√	√	√	0247
2017	Chevrolet	Cobalt	Serial Data Gateway Module	√	√	√			
2017	Chevrolet	Cobalt	Telematics Communication Interface Control Module	√	√	√	√	√	
2017	Chevrolet	Cobalt	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Chevrolet	Cobalt	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Chevrolet	Cobalt	Radio	√	√	√	√	√	
2017	Chevrolet	Cobalt	Front Seat Heating Control Module	√	√	√	√	√	
2017	Chevrolet	Cobalt	Power Steering Control Module	√	√	√	√		0207
2017	Chevrolet	Cobalt	Frontview Camera Module	√	√	√	√	√	0205 0196 075A



2017	Chevrolet	Colorado	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0210 0224 0130 0222 0066 0147 0060 079A 0044 0045 0097 0221 0792 0109 0068 0084 0070 0071 0074 0075 0117 0043 0173 0179 0181 0183 0185 0232 076D 0171 0219 0072 0073 0119 077E 0178 0180 0182
2017	Chevrolet	Colorado	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2017	Chevrolet	Colorado	Electronic Brake Control Module	√	√	√	√	√	0090 0112 0111 0225
2017	Chevrolet	Colorado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Chevrolet	Colorado	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Chevrolet	Colorado	Instrument Cluster	√	√	√	√	√	0247
2017	Chevrolet	Colorado	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Chevrolet	Colorado	HVAC Controls	√	√	√	√	√	0247
2017	Chevrolet	Colorado	Serial Data Gateway Module	√	√	√			
2017	Chevrolet	Colorado	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Colorado	Amplifier	√	√	√	√		
2017	Chevrolet	Colorado	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Chevrolet	Colorado	Radio Controls	√	√	√	√		0241
2017	Chevrolet	Colorado	Radio	√	√	√	√	√	0226 0150
2017	Chevrolet	Colorado	Transfer Case Control Module	√	√	√	√	√	0037
2017	Chevrolet	Colorado	Frontview Camera Module	√	√	√	√	√	0205 0196
2017	Chevrolet	Colorado	Passenger Presence Module	√	√	√	√	√	0057
2017	Chevrolet	Colorado	Power Steering Control Module	√	√	√	√		0093 0090
2017	Chevrolet	Colorado	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2017	Chevrolet	Colorado	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Chevrolet	Colorado	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Chevrolet	Colorado	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2017	Chevrolet	Colorado	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Chevrolet	Colorado	Right Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Colorado	Left Side Object Detection Control Module	√	√	√		√	

2017	Chevrolet	Corvette	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2017	Chevrolet	Corvette	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2017	Chevrolet	Corvette	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229
2017	Chevrolet	Corvette	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2017	Chevrolet	Corvette	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Chevrolet	Corvette	Instrument Cluster	√	√	√	√	√	0247
2017	Chevrolet	Corvette	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Chevrolet	Corvette	Radio/HVAC Controls	√	√	√	√	√	
2017	Chevrolet	Corvette	Serial Data Gateway Module	√	√	√			
2017	Chevrolet	Corvette	Steering Column Lock Control Module	√	√	√	√		
2017	Chevrolet	Corvette	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Corvette	Folding Top Control Module	√	√	√	√	√	
2017	Chevrolet	Corvette	Inside Rearview Mirror	√	√	√	√	√	
2017	Chevrolet	Corvette	Keyless Entry Control Module	√	√	√	√	√	
2017	Chevrolet	Corvette	Passenger Presence Module	√	√	√	√	√	0057
2017	Chevrolet	Corvette	Amplifier	√	√	√	√		
2017	Chevrolet	Corvette	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Chevrolet	Corvette	Radio	√	√	√	√	√	0226 0150
2017	Chevrolet	Corvette	Vehicle Performance Data Recorder	√	√	√	√		
2017	Chevrolet	Corvette	Liftgate Control Module	√	√	√	√	√	
2017	Chevrolet	Corvette	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Chevrolet	Corvette	Seat Memory Control Module - Passenger	√	√	√	√	√	
2017	Chevrolet	Corvette	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2017	Chevrolet	Corvette	Parking Brake Control Module	√	√	√	√	√	0229
2017	Chevrolet	Corvette	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2017	Chevrolet	Corvette	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Chevrolet	Corvette	Suspension Control Module	√	√	√	√	√	0245
2017	Chevrolet	Corvette	Video Processing Control Module	√	√	√	√	√	
2017	Chevrolet	Corvette	Rear Differential Clutch Control Module	√	√	√	√	√	0113

2017	Chevrolet	Cruze	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0222 076D 0060 079A 0044 0045 0097 0171 0219 0792 0109 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0066 0210 0224 0130 0147 0068 0043 0173 0179 0181 0183 0185 0232 0098 0216 0449 0143 0450 0265 0108 0450 0227 0135 0462
2017	Chevrolet	Cruze	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Chevrolet	Cruze	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2017	Chevrolet	Cruze	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Chevrolet	Cruze	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Chevrolet	Cruze	Instrument Cluster	√	√	√	√	√	0247
2017	Chevrolet	Cruze	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Chevrolet	Cruze	HVAC Controls	√	√	√	√	√	
2017	Chevrolet	Cruze	Serial Data Gateway Module	√	√	√			
2017	Chevrolet	Cruze	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Chevrolet	Cruze	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Chevrolet	Cruze	Keyless Entry Control Module	√	√	√	√	√	
2017	Chevrolet	Cruze	Passenger Presence Module	√	√	√	√		0057
2017	Chevrolet	Cruze	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Chevrolet	Cruze	Left Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Cruze	Right Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Cruze	Amplifier	√	√	√	√		
2017	Chevrolet	Cruze	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Chevrolet	Cruze	Radio	√	√	√	√	√	0226 0150
2017	Chevrolet	Cruze	Radio Controls	√	√	√	√		0241
2017	Chevrolet	Cruze	Navigation Control Module	√	√	√	√	√	
2017	Chevrolet	Cruze	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Cruze	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	Chevrolet	Cruze	Power Steering Control Module	√	√	√	√		0081 0080 0089

2017	Chevrolet	Cruze	Power Supply Transformer	√	√	√	√		
2017	Chevrolet	Cruze	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Chevrolet	Cruze	Steering Column Lock Control Module	√	√	√	√		
2017	Chevrolet	Cruze	Mobile Telephone Control Module	√	√	√	√	√	0247
2017	Chevrolet	Cruze	Front Seat Heating Control Module	√	√	√	√	√	
2017	Chevrolet	Cruze	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2017	Chevrolet	Cruze	Multimedia Player Interface Module	√	√	√	√		0247
2017	Chevrolet	Cruze	Fuel Injector Control Module	√			√	√	
2017	Chevrolet	Cruze	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2017	Chevrolet	Cruze	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Chevrolet	Damas	Engine Control Module	√	√	√	√	√	0069 0087
2017	Chevrolet	Damas	Tire Pressure Indicator Module	√	√	√	√		079D 0234
2017	Chevrolet	Damas	Fuel Injector Control Module	√	√	√	√	√	
2017	Chevrolet	Equinox	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0111 0258 0138
2017	Chevrolet	Equinox	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2017	Chevrolet	Equinox	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2017	Chevrolet	Equinox	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2017	Chevrolet	Equinox	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2017	Chevrolet	Equinox	Instrument Cluster	√	√	√	√	√	0247
2017	Chevrolet	Equinox	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Chevrolet	Equinox	Parking Assist Control Module	√	√	√	√	√	0247
2017	Chevrolet	Equinox	Passenger Presence Module	√	√	√	√		0057
2017	Chevrolet	Equinox	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Equinox	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	Chevrolet	Equinox	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2017	Chevrolet	Equinox	Power Steering Control Module	√	√	√	√		0081 0080 0089
2017	Chevrolet	Equinox	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Chevrolet	Equinox	Front Seat Heating Control Module	√	√	√	√	√	
2017	Chevrolet	Equinox	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Chevrolet	Equinox	Left Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Equinox	Right Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Equinox	Seat Memory Control Module	√	√	√	√	√	0310
2017	Chevrolet	Equinox	Radio	√	√	√	√	√	
2017	Chevrolet	Equinox	Rear Differential Clutch Control Module	√	√	√	√		0155
2017	Chevrolet	Equinox	Steering Column Lock Control Module	√	√	√	√		
2017	Chevrolet	Equinox	Navigation Control Module	√	√	√	√	√	

2017	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0263 0209 0115 076D 0060 079A 0044 0045 0086 0097 0171 0219 0792 0217 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0132 0067 0258 0139 0237 0210 0058 0042 0088 0118 0120 0240 0186 0188 0190 0192 0138 0137 0179 0181 0183 0185 0187 0189
2017	Chevrolet	Express	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2017	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0225 0111
2017	Chevrolet	Express	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2017	Chevrolet	Express	Body Control Module	√	√	√	√	√	0263 0261
2017	Chevrolet	Express	Theft Deterrent Module	√	√	√	√	√	
2017	Chevrolet	Express	Instrument Cluster	√	√	√	√	√	
2017	Chevrolet	Express	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Express	Radio	√	√	√	√	√	
2017	Chevrolet	Express	Chime Alarm Control Module	√	√	√	√	√	
2017	Chevrolet	Express	Digital Radio Receiver Control Module	√	√	√	√	√	
2017	Chevrolet	Express	Parking Assist Control Module	√	√	√	√	√	0247
2017	Chevrolet	Express	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2017	Chevrolet	Express	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2017	Chevrolet	Express	Auxiliary Heater Control Module	√	√	√	√	√	
2017	Chevrolet	Express	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2017	Chevrolet	Impala	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2017	Chevrolet	Impala	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2017	Chevrolet	Impala	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2017	Chevrolet	Impala	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Chevrolet	Impala	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0156 0222 0158
2017	Chevrolet	Impala	Instrument Cluster	√	√	√	√	√	0247
2017	Chevrolet	Impala	HVAC Control Module	√	√	√	√	√	0007 0129

2017	Chevrolet	Impala	HVAC Controls	√	√	√	√	√	
2017	Chevrolet	Impala	Serial Data Gateway Module	√	√	√			
2017	Chevrolet	Impala	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Chevrolet	Impala	Keyless Entry Control Module	√	√	√	√	√	
2017	Chevrolet	Impala	Passenger Presence Module	√	√	√	√		0057
2017	Chevrolet	Impala	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Impala	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Chevrolet	Impala	Left Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Impala	Right Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Impala	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Chevrolet	Impala	Amplifier	√	√	√	√		
2017	Chevrolet	Impala	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Chevrolet	Impala	Radio Controls	√	√	√	√		0241
2017	Chevrolet	Impala	Radio	√	√	√	√	√	0226 0150
2017	Chevrolet	Impala	Navigation Control Module	√	√	√	√	√	
2017	Chevrolet	Impala	Parking Brake Control Module	√	√	√	√	√	0229
2017	Chevrolet	Impala	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Chevrolet	Impala	Power Steering Control Module	√	√	√	√		0081 0080 0089
2017	Chevrolet	Impala	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2017	Chevrolet	Impala	Distance Sensing Cruise Control Module	√	√	√	√		0047
2017	Chevrolet	Impala	Rear Audio Control Module	√	√	√	√	√	
2017	Chevrolet	Labo	Engine Control Module	√	√	√	√	√	0069 0087
2017	Chevrolet	Labo	Tire Pressure Indicator Module	√	√	√	√		079D 0234
2017	Chevrolet	Labo	Fuel Injector Control Module	√	√	√	√	√	
2017	Chevrolet	Lacetti	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2017	Chevrolet	Lacetti	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Chevrolet	Lacetti	Electronic Brake Control Module	√	√	√	√	√	
2017	Chevrolet	Lacetti	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2017	Chevrolet	Lacetti	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Lacetti	Fuel Injector Control Module	√	√	√	√	√	
2017	Chevrolet	Lacetti	Variable Power Steering Control Module				√	√	
2017	Chevrolet	Malibu	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0176 0215 0036 0147 0236
2017	Chevrolet	Malibu	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Chevrolet	Malibu	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2017	Chevrolet	Malibu	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2017	Chevrolet	Malibu	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Chevrolet	Malibu	Instrument Cluster	√	√	√	√	√	0247
2017	Chevrolet	Malibu	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Chevrolet	Malibu	HVAC Controls	√	√	√	√	√	
2017	Chevrolet	Malibu	Serial Data Gateway Module	√	√	√			
2017	Chevrolet	Malibu	Hybrid Powertrain Control Module	√	√	√	√	√	0018
2017	Chevrolet	Malibu	Hybrid Powertrain Control Module 2	√	√	√	√	√	0202 0218 0122
2017	Chevrolet	Malibu	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Chevrolet	Malibu	Brake Booster Control Module	√	√	√	√		
2017	Chevrolet	Malibu	Keyless Entry Control Module	√	√	√	√	√	
2017	Chevrolet	Malibu	Passenger Presence Module	√	√	√	√	√	0057
2017	Chevrolet	Malibu	Drive Motor Control Module 1	√	√	√	√		
2017	Chevrolet	Malibu	Drive Motor Control Module 2	√	√	√	√		
2017	Chevrolet	Malibu	Electric A/C Compressor Control Module	√					
2017	Chevrolet	Malibu	Mobile Telephone Control Module	√	√	√	√	√	0247
2017	Chevrolet	Malibu	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Malibu	Active Safety Control Module	√	√	√	√		
2017	Chevrolet	Malibu	Frontview Camera Module	√	√	√	√		0196
2017	Chevrolet	Malibu	Left Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Malibu	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Chevrolet	Malibu	Video Processing Control Module	√	√	√	√	√	
2017	Chevrolet	Malibu	Radio	√	√	√	√	√	0226 0150
2017	Chevrolet	Malibu	Navigation Control Module	√	√	√	√	√	
2017	Chevrolet	Malibu	Amplifier	√	√	√	√		
2017	Chevrolet	Malibu	Right Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Malibu	Headlamp Control Module	√	√	√	√	√	0195
2017	Chevrolet	Malibu	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Chevrolet	Malibu	Steering Column Lock Control Module	√	√	√	√		
2017	Chevrolet	Malibu	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2017	Chevrolet	Malibu	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Chevrolet	Malibu	Radio Controls	√	√	√	√		0241
2017	Chevrolet	Malibu	Power Steering Control Module	√	√	√	√		0081 0080 0089
2017	Chevrolet	Matiz	Engine Control Module	√	√	√	√	√	0069 0087 079C
2017	Chevrolet	Matiz	Electronic Brake Control Module	√	√	√	√	√	
2017	Chevrolet	Matiz	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2017	Chevrolet	Matiz	Instrument Cluster	√	√	√	√	√	
2017	Chevrolet	Matiz	Keyless Entry Control Module				√		
2017	Chevrolet	Max	Engine Control Module	√	√	√	√	√	0069 0087 079C

2017	Chevrolet	Max	Electronic Brake Control Module	√	√	√	√	√	
2017	Chevrolet	Max	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2017	Chevrolet	Move	Engine Control Module	√	√	√	√	√	0069 0087 079C
2017	Chevrolet	Move	Electronic Brake Control Module	√	√	√	√	√	
2017	Chevrolet	Move	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2017	Chevrolet	Nexia	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2017	Chevrolet	Nexia	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Chevrolet	Nexia	Electronic Brake Control Module	√	√	√	√	√	
2017	Chevrolet	Nexia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2017	Chevrolet	Nexia	Instrument Cluster	√	√	√		√	
2017	Chevrolet	Nexia	Tire Pressure Indicator Module	√	√	√	√		079D 0234
2017	Chevrolet	Nexia	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2017	Chevrolet	Nexia	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Chevrolet	Onix	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0115
2017	Chevrolet	Onix	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Chevrolet	Onix	Electronic Brake Control Module	√	√	√	√	√	0090
2017	Chevrolet	Onix	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Chevrolet	Onix	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0159
2017	Chevrolet	Onix	Instrument Cluster	√	√	√	√	√	0247
2017	Chevrolet	Onix	Serial Data Gateway Module	√	√	√			
2017	Chevrolet	Onix	Radio	√	√	√	√	√	
2017	Chevrolet	Onix	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Chevrolet	Onix	Telematics Communication Interface Control Module	√	√	√		√	
2017	Chevrolet	Onix	Power Steering Control Module	√	√	√	√		0207
2017	Chevrolet	Onix	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Chevrolet	Optra	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2017	Chevrolet	Optra	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Chevrolet	Optra	Electronic Brake Control Module	√	√	√	√	√	
2017	Chevrolet	Optra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2017	Chevrolet	Optra	Body Control Module	√	√	√	√	√	
2017	Chevrolet	Optra	Instrument Cluster	√	√	√	√	√	
2017	Chevrolet	Optra	Power Steering Control Module	√	√	√	√		0089 0081 0080



2017	Chevrolet	Orlando	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006 0144 0258 0139 0210 0224 0130 0222 0147 0115 0060 079A 0044 0045 0097 0221 0792 0109 0068 0084 0070 0071 0074 0075 0117 0043 0173 0179 0181 0183 0185 0232 0098 0216 0449 0143 0450 0265 0108 0452 0237
2017	Chevrolet	Orlando	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Chevrolet	Orlando	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2017	Chevrolet	Orlando	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2017	Chevrolet	Orlando	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2017	Chevrolet	Orlando	Instrument Cluster	√	√	√	√	√	0247
2017	Chevrolet	Orlando	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Chevrolet	Orlando	Mobile Telephone Control Module	√	√	√	√	√	0247
2017	Chevrolet	Orlando	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Orlando	Keyless Entry Control Module	√	√	√	√	√	
2017	Chevrolet	Orlando	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Chevrolet	Orlando	Radio	√	√	√	√	√	
2017	Chevrolet	Orlando	Multimedia Player Interface Module	√	√	√	√		0247
2017	Chevrolet	Orlando	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2017	Chevrolet	Orlando	Rear Seat Heating Control Module	√	√	√	√	√	
2017	Chevrolet	Orlando	Front Seat Heating Control Module	√	√	√	√	√	
2017	Chevrolet	Orlando	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Chevrolet	Orlando	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2017	Chevrolet	Orlando	Power Steering Control Module	√	√	√	√		0089 0081 0080
2017	Chevrolet	Orlando	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Chevrolet	Orlando	Fuel Injector Control Module	√	√	√	√	√	
2017	Chevrolet	Prisma	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0115
2017	Chevrolet	Prisma	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Chevrolet	Prisma	Electronic Brake Control Module	√	√	√	√	√	0090
2017	Chevrolet	Prisma	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2017	Chevrolet	Prisma	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Chevrolet	Prisma	Instrument Cluster	√	√	√	√	√	0247
2017	Chevrolet	Prisma	Serial Data Gateway Module	√	√	√			
2017	Chevrolet	Prisma	Radio	√	√	√	√	√	
2017	Chevrolet	Prisma	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Chevrolet	Prisma	Telematics Communication Interface Control Module	√	√	√	√	√	
2017	Chevrolet	Prisma	Power Steering Control Module	√	√	√	√		0207
2017	Chevrolet	Prisma	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Chevrolet	S10	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139 0020 0115 0154 0213 0214 0258 0210 0224 0130 0222 0066 0147 0060 079A 0044 0045 0097 0221 0792 0109 0068 0084 0070 0071 0074 0075 0117 0043 0173 0179 0181 0183
2017	Chevrolet	S10	Transmission Control Module	√	√	√	√	√	0016
2017	Chevrolet	S10	Electronic Brake Control Module	√	√	√	√	√	0090 0112 0111
2017	Chevrolet	S10	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Chevrolet	S10	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Chevrolet	S10	Instrument Cluster	√	√	√	√	√	0247
2017	Chevrolet	S10	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Chevrolet	S10	HVAC Controls	√	√	√	√	√	
2017	Chevrolet	S10	Serial Data Gateway Module	√	√	√			
2017	Chevrolet	S10	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Chevrolet	S10	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Chevrolet	S10	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2017	Chevrolet	S10	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Chevrolet	S10	Telematics Communication Interface Control Module	√	√	√		√	
2017	Chevrolet	S10	Radio	√	√	√	√	√	0226 0150
2017	Chevrolet	S10	Frontview Camera Module	√	√	√	√	√	0205 0196
2017	Chevrolet	S10	Transfer Case Control Module	√	√	√	√	√	0037
2017	Chevrolet	S10	Power Steering Control Module	√	√	√	√		0093 0090

2017	Chevrolet	S10	Left Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	S10	Right Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	S10	Radio Controls	√	√	√	√		0241
2017	Chevrolet	S10	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Chevrolet	S10	Amplifier	√	√	√	√		
2017	Chevrolet	Sail	Engine Control Module	√	√	√	√	√	0087 0133 0210 0098 0096 0094 0216 0143 0265 0393 0173 0149 0209 0217 0156 0020
2017	Chevrolet	Sail	Transmission Control Module	√	√	√	√	√	0200 0157 0153 0136 0035 0016
2017	Chevrolet	Sail	Electronic Brake Control Module	√	√	√	√	√	0111
2017	Chevrolet	Sail	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0064 0040 0063 0039 0227 0172 0062 0038 0177 0261 0111
2017	Chevrolet	Sail	Body Control Module	√	√	√	√	√	0263
2017	Chevrolet	Sail	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Chevrolet	Sail	Radio/HVAC Controls	√	√	√	√	√	0150
2017	Chevrolet	Sail	Power Steering Control Module	√	√	√	√		0081 0089
2017	Chevrolet	Sail	Radio	√	√	√	√	√	
2017	Chevrolet	Sail	Telematics Communication Interface Control Module	√	√	√		√	
2017	Chevrolet	Sail	Keyless Entry Control Module						0204
2017	Chevrolet	Silverado	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131 0258 0212 0214 0139 0791 0115 076D 0058 079A 0045 0044 0088 0097 0219 0221 07AA 0073 0072 0070 0071 0117 0119 077E 0178 0180 0182 0184 0186
2017	Chevrolet	Silverado	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2017	Chevrolet	Silverado	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2017	Chevrolet	Silverado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233
2017	Chevrolet	Silverado	Instrument Cluster	√	√	√	√	√	0150 0247

2017	Chevrolet	Silverado	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Chevrolet	Silverado	HVAC Controls	√	√	√	√	√	
2017	Chevrolet	Silverado	Serial Data Gateway Module	√	√	√			
2017	Chevrolet	Silverado	Hybrid Powertrain Control Module 2	√	√	√	√	√	0202 0218
2017	Chevrolet	Silverado	Hybrid Powertrain Control Module	√	√	√	√	√	0436 0263
2017	Chevrolet	Silverado	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 07AB 0009 07AC
2017	Chevrolet	Silverado	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Silverado	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2017	Chevrolet	Silverado	Amplifier	√	√	√	√		
2017	Chevrolet	Silverado	Assist Step Control Module	√	√	√	√	√	
2017	Chevrolet	Silverado	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Chevrolet	Silverado	Radio Controls	√	√	√	√		0241
2017	Chevrolet	Silverado	Media Disc Player	√	√	√	√	√	
2017	Chevrolet	Silverado	Radio	√	√	√	√	√	0226 0150
2017	Chevrolet	Silverado	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Chevrolet	Silverado	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Chevrolet	Silverado	Passenger Presence Module	√	√	√	√	√	0057
2017	Chevrolet	Silverado	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Chevrolet	Silverado	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2017	Chevrolet	Silverado	Transfer Case Control Module	√	√	√	√	√	0037
2017	Chevrolet	Silverado	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Chevrolet	Silverado	Power Steering Control Module	√	√	√	√	√	0150 0084 0273 0082
2017	Chevrolet	Silverado	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2017	Chevrolet	Silverado	Suspension Control Module	√	√	√	√	√	0245
2017	Chevrolet	Silverado	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2017	Chevrolet	Sonic	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139 0133 0210 0383 0098 0096 0094 0216 0130 0143 0265 0147 0237 0045 0060 0393 0043 0135 0128 0173 0020 0066 076D 0213 0006
2017	Chevrolet	Sonic	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Chevrolet	Sonic	Electronic Brake Control Module	√	√	√	√	√	0090
2017	Chevrolet	Sonic	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2017	Chevrolet	Sonic	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0000 0150
2017	Chevrolet	Sonic	Instrument Cluster	√	√	√	√	√	0247

2017	Chevrolet	Sonic	HVAC Control Module	√	√	√	√	√	
2017	Chevrolet	Sonic	Serial Data Gateway Module	√	√	√			
2017	Chevrolet	Sonic	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Sonic	Radio	√	√	√	√	√	0226
2017	Chevrolet	Sonic	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Chevrolet	Sonic	Keyless Entry Control Module	√	√	√	√	√	
2017	Chevrolet	Sonic	Passenger Presence Module	√	√	√	√		0057
2017	Chevrolet	Sonic	Front Seat Heating Control Module	√	√	√	√	√	
2017	Chevrolet	Sonic	Chassis Control Module	√	√	√	√	√	0217
2017	Chevrolet	Sonic	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Chevrolet	Sonic	Power Steering Control Module	√	√	√	√		0207
2017	Chevrolet	Sonic	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Chevrolet	Spark	Engine Control Module	√	√	√	√	√	0156 0140 0263 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006 0144 0258 0139 0016 0017 0136 07B1
2017	Chevrolet	Spark	Transmission Control Module	√	√	√	√	√	0090 0111 0229 0225
2017	Chevrolet	Spark	Electronic Brake Control Module	√	√	√	√	√	0172 0134 0111 0758
2017	Chevrolet	Spark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160 0233 0159 0199 0239 0161 0162 0163 0164 0165 0166 0167 0168
2017	Chevrolet	Spark	Body Control Module	√	√	√	√	√	0247
2017	Chevrolet	Spark	Instrument Cluster	√	√	√	√	√	0007 0129
2017	Chevrolet	Spark	HVAC Control Module	√	√	√	√	√	
2017	Chevrolet	Spark	HVAC Controls	√	√	√	√	√	
2017	Chevrolet	Spark	Serial Data Gateway Module	√	√	√			
2017	Chevrolet	Spark	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Spark	Keyless Entry Control Module	√	√	√	√	√	
2017	Chevrolet	Spark	Radio	√	√	√	√	√	0226
2017	Chevrolet	Spark	Steering Column Lock Control Module	√	√	√	√		
2017	Chevrolet	Spark	Fuel Injector Control Module	√	√	√	√	√	
2017	Chevrolet	Spark	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Chevrolet	Spark	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2017	Chevrolet	Spark	Power Steering Control Module	√	√	√	√		0089
2017	Chevrolet	Spark	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Chevrolet	Spark	Passenger Presence Module	√	√	√	√	√	0057
2017	Chevrolet	Spark	Radio Controls	√	√	√	√	√	0247

2017	Chevrolet	Spin	Engine Control Module	√	√	√	√	√	0133 0156 0210 0383 0098 0096 0094 0216 0130 0143 0265 0147 0237 0045 0086 0393 0043 0135 0128 0173 0209 0132 0067 0263 0217 0120 0115
2017	Chevrolet	Spin	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Chevrolet	Spin	Electronic Brake Control Module	√	√	√	√	√	0090
2017	Chevrolet	Spin	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2017	Chevrolet	Spin	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Chevrolet	Spin	Instrument Cluster	√	√	√	√	√	0247
2017	Chevrolet	Spin	Serial Data Gateway Module	√	√	√			
2017	Chevrolet	Spin	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Chevrolet	Spin	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Chevrolet	Spin	Telematics Communication Interface Control Module	√	√	√		√	
2017	Chevrolet	Spin	Radio	√	√	√	√	√	
2017	Chevrolet	Spin	Power Steering Control Module	√	√	√	√		0207
2017	Chevrolet	SS	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0258
2017	Chevrolet	SS	Transmission Control Module	√	√	√	√	√	0016
2017	Chevrolet	SS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2017	Chevrolet	SS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2017	Chevrolet	SS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0160 0233 0150
2017	Chevrolet	SS	Instrument Cluster	√	√	√	√	√	0247 0145
2017	Chevrolet	SS	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Chevrolet	SS	HVAC Controls	√	√	√	√	√	
2017	Chevrolet	SS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	SS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Chevrolet	SS	Radio	√	√	√	√	√	
2017	Chevrolet	SS	Radio Controls	√	√	√	√	√	0247
2017	Chevrolet	SS	Head-Up Display Module	√	√	√	√	√	
2017	Chevrolet	SS	Left Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	SS	Right Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	SS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Chevrolet	SS	Keyless Entry Control Module	√	√	√	√	√	

2017	Chevrolet	SS	Passenger Presence Module	√	√	√	√		0057
2017	Chevrolet	SS	Fuel Injector Control Module	√			√	√	
2017	Chevrolet	SS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2017	Chevrolet	SS	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Chevrolet	SS	Parking Brake Control Module	√	√	√	√	√	0229
2017	Chevrolet	SS	Power Steering Control Module	√	√	√	√		0081
2017	Chevrolet	SS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Chevrolet	SS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2017	Chevrolet	Suburban	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2017	Chevrolet	Suburban	Transmission Control Module	√	√	√	√	√	0016
2017	Chevrolet	Suburban	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2017	Chevrolet	Suburban	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Chevrolet	Suburban	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Chevrolet	Suburban	Instrument Cluster	√	√	√	√	√	0247
2017	Chevrolet	Suburban	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Chevrolet	Suburban	HVAC Controls	√	√	√	√	√	
2017	Chevrolet	Suburban	Serial Data Gateway Module	√	√	√			
2017	Chevrolet	Suburban	Steering Column Lock Control Module	√	√	√	√		
2017	Chevrolet	Suburban	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	Chevrolet	Suburban	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Suburban	Amplifier	√	√	√	√		
2017	Chevrolet	Suburban	Assist Step Control Module	√	√	√	√	√	
2017	Chevrolet	Suburban	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Chevrolet	Suburban	Radio Controls	√	√	√	√		0241
2017	Chevrolet	Suburban	Media Disc Player	√	√	√	√	√	
2017	Chevrolet	Suburban	Rear Audio Control Module	√	√	√	√	√	
2017	Chevrolet	Suburban	Radio	√	√	√	√	√	0226 0150
2017	Chevrolet	Suburban	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Chevrolet	Suburban	Left Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Suburban	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Chevrolet	Suburban	Seat Memory Control Module - Passenger	√	√	√	√	√	
2017	Chevrolet	Suburban	Keyless Entry Control Module	√	√	√	√	√	
2017	Chevrolet	Suburban	Passenger Presence Module	√	√	√	√	√	0057
2017	Chevrolet	Suburban	Transfer Case Control Module	√	√	√	√	√	0037
2017	Chevrolet	Suburban	Distance Sensing Cruise Control Module	√	√	√	√		0047
2017	Chevrolet	Suburban	Frontview Camera Module	√	√	√	√		0196

2017	Chevrolet	Suburban	Video Processing Control Module	√	√	√	√	√	
2017	Chevrolet	Suburban	Power Steering Control Module	√	√	√	√	√	0150
2017	Chevrolet	Suburban	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Chevrolet	Suburban	Suspension Control Module	√	√	√	√	√	0245
2017	Chevrolet	Suburban	Parking Brake Control Module	√	√	√	√	√	0229
2017	Chevrolet	Suburban	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2017	Chevrolet	Tahoe	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2017	Chevrolet	Tahoe	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2017	Chevrolet	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2017	Chevrolet	Tahoe	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Chevrolet	Tahoe	Instrument Cluster	√	√	√	√	√	0247
2017	Chevrolet	Tahoe	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Chevrolet	Tahoe	HVAC Controls	√	√	√	√	√	
2017	Chevrolet	Tahoe	Serial Data Gateway Module	√	√	√			
2017	Chevrolet	Tahoe	Steering Column Lock Control Module	√	√	√	√		
2017	Chevrolet	Tahoe	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	Chevrolet	Tahoe	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Tahoe	Amplifier	√	√	√	√		
2017	Chevrolet	Tahoe	Assist Step Control Module	√	√	√	√	√	
2017	Chevrolet	Tahoe	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Chevrolet	Tahoe	Radio Controls	√	√	√	√		0241
2017	Chevrolet	Tahoe	Media Disc Player	√	√	√	√	√	
2017	Chevrolet	Tahoe	Rear Audio Control Module	√	√	√	√	√	
2017	Chevrolet	Tahoe	Radio	√	√	√	√	√	0226 0150
2017	Chevrolet	Tahoe	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Chevrolet	Tahoe	Left Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Tahoe	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	Chevrolet	Tahoe	Seat Memory Control Module - Passenger	√	√	√	√	√	
2017	Chevrolet	Tahoe	Keyless Entry Control Module	√	√	√	√	√	
2017	Chevrolet	Tahoe	Passenger Presence Module	√	√	√	√	√	0057
2017	Chevrolet	Tahoe	Transfer Case Control Module	√	√	√	√	√	0037
2017	Chevrolet	Tahoe	Video Processing Control Module	√	√	√	√	√	
2017	Chevrolet	Tahoe	Frontview Camera Module	√	√	√	√		0196



2017	Chevrolet	Tahoe	Distance Sensing Cruise Control Module	√	√	√	√		0047
2017	Chevrolet	Tahoe	Power Steering Control Module	√	√	√	√	√	0150
2017	Chevrolet	Tahoe	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Chevrolet	Tahoe	Suspension Control Module	√	√	√	√	√	0245
2017	Chevrolet	Tahoe	Parking Brake Control Module	√	√	√	√	√	0229
2017	Chevrolet	Tahoe	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2017	Chevrolet	Tavera	Engine Control Module	√	√	√	√	√	
2017	Chevrolet	Tracker	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0066 0263 0156 0209 0020
2017	Chevrolet	Tracker	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Chevrolet	Tracker	Electronic Brake Control Module	√	√	√	√	√	0090
2017	Chevrolet	Tracker	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2017	Chevrolet	Tracker	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0093 0156 0209 0020
2017	Chevrolet	Tracker	Instrument Cluster	√	√	√	√	√	0247
2017	Chevrolet	Tracker	HVAC Control Module	√	√	√	√	√	
2017	Chevrolet	Tracker	Serial Data Gateway Module	√	√	√			
2017	Chevrolet	Tracker	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Tracker	Radio	√	√	√	√	√	0226
2017	Chevrolet	Tracker	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Chevrolet	Tracker	Front Seat Heating Control Module	√	√	√	√	√	
2017	Chevrolet	Tracker	Keyless Entry Control Module	√	√	√	√	√	
2017	Chevrolet	Tracker	Chassis Control Module	√	√	√	√	√	0217
2017	Chevrolet	Tracker	Power Steering Control Module	√	√	√	√		0207
2017	Chevrolet	Tracker	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Chevrolet	Tracker	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Chevrolet	Tracker	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Chevrolet	Tracker	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2017	Chevrolet	Tracker	Left Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Trailblazer	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0156 0222 0066 0147 0115 0060 079A 0044 0045 0086 0097 0221 0792 0217 0109 0068 0084 0070 0071 0074 0075 0117 0043 0173 0179 0181 0183 0185 0232 0209 0132 0067

2017	Chevrolet	Trailblazer	Transmission Control Module	√	√	√	√	√	0016
2017	Chevrolet	Trailblazer	Electronic Brake Control Module	√	√	√	√	√	0090 0112 0111
2017	Chevrolet	Trailblazer	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Chevrolet	Trailblazer	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Chevrolet	Trailblazer	Instrument Cluster	√	√	√	√	√	0247
2017	Chevrolet	Trailblazer	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Chevrolet	Trailblazer	HVAC Controls	√	√	√	√	√	
2017	Chevrolet	Trailblazer	Serial Data Gateway Module	√	√	√			
2017	Chevrolet	Trailblazer	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2017	Chevrolet	Trailblazer	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Chevrolet	Trailblazer	Telematics Communication Interface Control Module	√	√	√		√	
2017	Chevrolet	Trailblazer	Radio	√	√	√	√	√	0226 0150
2017	Chevrolet	Trailblazer	Frontview Camera Module	√	√	√	√	√	0205 0196
2017	Chevrolet	Trailblazer	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Chevrolet	Trailblazer	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Chevrolet	Trailblazer	Transfer Case Control Module	√	√	√	√	√	0037
2017	Chevrolet	Trailblazer	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Chevrolet	Trailblazer	Radio Controls	√	√	√	√		0241
2017	Chevrolet	Trailblazer	Power Steering Control Module	√	√	√	√		0093 0090
2017	Chevrolet	Trailblazer	Left Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Trailblazer	Right Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Traverse	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0212
2017	Chevrolet	Traverse	Transmission Control Module	√	√	√	√	√	0016
2017	Chevrolet	Traverse	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2017	Chevrolet	Traverse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2017	Chevrolet	Traverse	Body Control Module	√	√	√	√	√	0263 0261
2017	Chevrolet	Traverse	Theft Deterrent Module	√	√	√	√		
2017	Chevrolet	Traverse	Instrument Cluster	√	√	√	√	√	
2017	Chevrolet	Traverse	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2017	Chevrolet	Traverse	Parking Assist Control Module	√	√	√	√	√	0247
2017	Chevrolet	Traverse	Passenger Presence Module	√	√	√	√		0057
2017	Chevrolet	Traverse	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2017	Chevrolet	Traverse	Liftgate Control Module	√	√	√	√		0146
2017	Chevrolet	Traverse	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Traverse	Front Seat Heating Control Module	√	√	√	√		
2017	Chevrolet	Traverse	Frontview Camera Module	√	√	√	√	√	0205 0196

2017	Chevrolet	Traverse	Left Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Traverse	Right Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Traverse	Seat Memory Control Module	√	√	√	√	√	
2017	Chevrolet	Traverse	Driver Door Switch Panel Control Module	√	√	√	√	√	
2017	Chevrolet	Traverse	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2017	Chevrolet	Traverse	Personal Audio Link Control Module	√	√	√			0231
2017	Chevrolet	Traverse	Radio	√	√	√	√	√	
2017	Chevrolet	Traverse	Rear Audio Control Module	√	√	√	√		
2017	Chevrolet	Traverse	Digital Radio Receiver Control Module	√	√	√	√	√	
2017	Chevrolet	Traverse	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2017	Chevrolet	Trax	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0147 0086 0217 0258 0263 0020 0066 076D 0213 0006 0144 0139 0210 0224 0130 0222 0115 0060 079A 0044 0045 0097 0221 0792 0109 0068 0084 0070 0071 0074 0075 0117 0043 0173 0179 0181
2017	Chevrolet	Trax	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Chevrolet	Trax	Electronic Brake Control Module	√	√	√	√	√	0090
2017	Chevrolet	Trax	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2017	Chevrolet	Trax	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0082 0160 0232 0150
2017	Chevrolet	Trax	Instrument Cluster	√	√	√	√	√	0247
2017	Chevrolet	Trax	HVAC Control Module	√	√	√	√	√	
2017	Chevrolet	Trax	HVAC Controls	√	√	√	√	√	
2017	Chevrolet	Trax	Serial Data Gateway Module	√	√	√			
2017	Chevrolet	Trax	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Trax	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Chevrolet	Trax	Left Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Trax	Right Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Trax	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Chevrolet	Trax	Seat Memory Control Module	√	√	√	√	√	0310
2017	Chevrolet	Trax	Front Seat Heating Control Module	√	√	√	√	√	
2017	Chevrolet	Trax	Keyless Entry Control Module	√	√	√	√	√	
2017	Chevrolet	Trax	Passenger Presence Module	√	√	√	√		0057
2017	Chevrolet	Trax	Radio	√	√	√	√	√	0226
2017	Chevrolet	Trax	Radio Controls	√	√	√	√		0241
2017	Chevrolet	Trax	Amplifier	√	√	√	√		

2017	Chevrolet	Trax	Power Steering Control Module	√	√	√	√		0207
2017	Chevrolet	Trax	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Chevrolet	Trax	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Chevrolet	Trax	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2017	Chevrolet	Trax	Chassis Control Module	√	√	√	√	√	0217
2017	Chevrolet	Volt	Engine Control Module	√	√	√	√	√	0209 0132 0067 0263 0086 0217 0176 0212
2017	Chevrolet	Volt	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229
2017	Chevrolet	Volt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	Chevrolet	Volt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Chevrolet	Volt	Instrument Cluster	√	√	√	√	√	0247
2017	Chevrolet	Volt	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Chevrolet	Volt	HVAC Controls	√	√	√	√	√	
2017	Chevrolet	Volt	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Chevrolet	Volt	Battery Energy Control Module	√			√		
2017	Chevrolet	Volt	Drive Motor Control Module 1	√	√	√	√		
2017	Chevrolet	Volt	Drive Motor Control Module 2	√	√	√	√		
2017	Chevrolet	Volt	Electric A/C Compressor Control Module	√					
2017	Chevrolet	Volt	Hybrid Powertrain Control Module	√	√	√	√	√	0018
2017	Chevrolet	Volt	Hybrid Powertrain Control Module 2	√	√	√	√	√	0125 0056 0079 0218 0122 0123 0127
2017	Chevrolet	Volt	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	Chevrolet	Volt	Keyless Entry Control Module	√	√	√	√	√	
2017	Chevrolet	Volt	Passenger Presence Module	√	√	√	√		0057
2017	Chevrolet	Volt	Steering Column Lock Control Module	√	√	√	√		
2017	Chevrolet	Volt	Amplifier	√	√	√	√		
2017	Chevrolet	Volt	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Chevrolet	Volt	Radio Controls	√	√	√	√		0241
2017	Chevrolet	Volt	Radio	√	√	√	√	√	0226 0150
2017	Chevrolet	Volt	Brake Booster Control Module	√	√	√	√		
2017	Chevrolet	Volt	Power Steering Control Module	√	√	√	√		0081 0080 0089
2017	Chevrolet	Volt	Active Safety Control Module	√	√	√	√	√	
2017	Chevrolet	Volt	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	Chevrolet	Volt	Left Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Volt	Right Side Object Detection Control Module	√	√	√		√	
2017	Chevrolet	Volt	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Chevrolet	Volt	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2017	Chevrolet	Volt	Multi-Axis Acceleration Sensor Module	√	√	√			0111

2017	Chevrolet	Work	Engine Control Module	√	√	√	√	√	0069 0087 079C
2017	Chevrolet	Work	Electronic Brake Control Module	√	√	√	√	√	
2017	Chevrolet	Work	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2017	GMC	Acadia	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0212 0156 0020 0115 0154 0213 0214 0139 0006 0256 0085 0336
2017	GMC	Acadia	Transmission Control Module	√	√	√	√	√	0016 0017 0036
2017	GMC	Acadia	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111 0277
2017	GMC	Acadia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261 0134 0111
2017	GMC	Acadia	Body Control Module	√	√	√	√	√	0263 0261 0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0203 0201 0208 0206 0083 0267 0160 0322 0150
2017	GMC	Acadia	Theft Deterrent Module	√	√	√	√		
2017	GMC	Acadia	Instrument Cluster	√	√	√	√	√	0247
2017	GMC	Acadia	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2017	GMC	Acadia	HVAC Controls	√	√	√	√	√	
2017	GMC	Acadia	Serial Data Gateway Module	√	√	√			
2017	GMC	Acadia	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	GMC	Acadia	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	GMC	Acadia	Long Range Radar Sensor Module	√	√	√	√		0260
2017	GMC	Acadia	Left Front Short Range Radar Sensor Module	√	√	√			
2017	GMC	Acadia	Right Front Short Range Radar Sensor Module	√	√	√			
2017	GMC	Acadia	Rear Short Range Radar Sensor Module	√	√	√			
2017	GMC	Acadia	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	GMC	Acadia	Suspension Control Module	√	√	√	√	√	
2017	GMC	Acadia	Power Steering Control Module	√	√	√	√		0089 0084
2017	GMC	Acadia	Chassis Control Module	√	√	√	√	√	0014 0078
2017	GMC	Acadia	Rear Differential Clutch Control Module	√	√	√	√	√	0155 0003
2017	GMC	Acadia	Passenger Presence Module	√	√	√	√	√	0057
2017	GMC	Acadia	Keyless Entry Control Module	√	√	√	√	√	
2017	GMC	Acadia	Amplifier	√	√	√	√		
2017	GMC	Acadia	Radio Controls	√	√	√	√		0241
2017	GMC	Acadia	Radio	√	√	√	√	√	0226 0150
2017	GMC	Acadia	Media Disc Player	√	√	√	√	√	
2017	GMC	Acadia	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	GMC	Acadia	Active Safety Control Module	√	√	√	√		
2017	GMC	Acadia	Frontview Camera Module	√	√	√	√	√	0205 0196
2017	GMC	Acadia	Left Side Object Detection Control Module	√	√	√		√	
2017	GMC	Acadia	Seat Memory Control Module - Driver	√	√	√	√	√	0310

2017	GMC	Acadia	Video Processing Control Module	√	√	√	√	√	
2017	GMC	Acadia	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2017	GMC	Acadia	Driver Door Switch Panel Control Module	√	√	√	√	√	
2017	GMC	Acadia	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2017	GMC	Acadia	Personal Audio Link Control Module	√	√	√			0231
2017	GMC	Acadia	Rear Audio Control Module	√	√	√	√		
2017	GMC	Acadia	Right Side Object Detection Control Module	√	√	√		√	
2017	GMC	Acadia	Seat Memory Control Module	√	√	√	√	√	
2017	GMC	Acadia	Digital Radio Receiver Control Module	√	√	√	√	√	
2017	GMC	Acadia	Head-Up Display Module	√	√	√	√	√	
2017	GMC	Canyon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 076D 0060 079A 0044 0045 0097 0171 0219 0792 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0006 0756 0085
2017	GMC	Canyon	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2017	GMC	Canyon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2017	GMC	Canyon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	GMC	Canyon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	GMC	Canyon	Instrument Cluster	√	√	√	√	√	0247
2017	GMC	Canyon	HVAC Control Module	√	√	√	√	√	0007 0129
2017	GMC	Canyon	HVAC Controls	√	√	√	√	√	
2017	GMC	Canyon	Serial Data Gateway Module	√	√	√			
2017	GMC	Canyon	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	GMC	Canyon	Frontview Camera Module	√	√	√	√	√	0205 0196
2017	GMC	Canyon	Transfer Case Control Module	√	√	√	√	√	0037
2017	GMC	Canyon	Passenger Presence Module	√	√	√	√	√	0057
2017	GMC	Canyon	Amplifier	√	√	√	√		
2017	GMC	Canyon	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	GMC	Canyon	Radio Controls	√	√	√	√		0241
2017	GMC	Canyon	Radio	√	√	√	√	√	0226 0150

2017	GMC	Canyon	Power Steering Control Module	√	√	√	√		0093 0090
2017	GMC	Canyon	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2017	GMC	Savana	Engine Control Module	√	√	√	√	√	0263 0209 0115 076D 0060 079A 0044 0045 0086 0097 0171 0219 0792 0217 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0132 0067 0258 0139 0237 0210 0058 0042 0088 0118 0120 0240 0186 0188 0190 0192 0138 0137 0179 0181 0183 0185 0187 0189
2017	GMC	Savana	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2017	GMC	Savana	Electronic Brake Control Module	√	√	√	√	√	0225 0111
2017	GMC	Savana	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2017	GMC	Savana	Body Control Module	√	√	√	√	√	0263 0261
2017	GMC	Savana	Theft Deterrent Module	√	√	√	√		
2017	GMC	Savana	Instrument Cluster	√	√	√	√	√	
2017	GMC	Savana	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	GMC	Savana	Radio	√	√	√	√	√	
2017	GMC	Savana	Chime Alarm Control Module	√	√	√		√	
2017	GMC	Savana	Digital Radio Receiver Control Module	√	√	√	√	√	
2017	GMC	Savana	Parking Assist Control Module	√	√	√	√	√	0247
2017	GMC	Savana	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2017	GMC	Savana	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2017	GMC	Savana	Auxiliary Heater Control Module	√	√	√	√	√	
2017	GMC	Savana	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2017	GMC	Sierra	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131 0258 0212 0214 0139 0791 0115 076D 0058 079A 0045 0044 0088 0097 0219 0221 07AA 0073 0072 0070 0071 0117 0119 077E 0178 0180 0182 0184 0186

2017	GMC	Sierra	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2017	GMC	Sierra	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2017	GMC	Sierra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	GMC	Sierra	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	GMC	Sierra	Instrument Cluster	√	√	√	√	√	0247
2017	GMC	Sierra	HVAC Control Module	√	√	√	√	√	0007 0129
2017	GMC	Sierra	HVAC Controls	√	√	√	√	√	
2017	GMC	Sierra	Serial Data Gateway Module	√	√	√			
2017	GMC	Sierra	Hybrid Powertrain Control Module	√	√	√	√	√	0436 0263
2017	GMC	Sierra	Hybrid Powertrain Control Module 2	√	√	√	√	√	0202 0218
2017	GMC	Sierra	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	GMC	Sierra	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2017	GMC	Sierra	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	GMC	Sierra	Trailer Interface Control Module	√	√	√	√	√	0247
2017	GMC	Sierra	Passenger Presence Module	√	√	√	√	√	0057
2017	GMC	Sierra	Amplifier	√	√	√	√		
2017	GMC	Sierra	Assist Step Control Module	√	√	√	√	√	
2017	GMC	Sierra	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	GMC	Sierra	Radio Controls	√	√	√	√		0241
2017	GMC	Sierra	Media Disc Player	√	√	√	√	√	
2017	GMC	Sierra	Radio	√	√	√	√	√	0226 0150
2017	GMC	Sierra	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	GMC	Sierra	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2017	GMC	Sierra	Transfer Case Control Module	√	√	√	√	√	0037
2017	GMC	Sierra	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	GMC	Sierra	Power Steering Control Module	√	√	√	√	√	0150 0084 0273 0082
2017	GMC	Sierra	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2017	GMC	Sierra	Suspension Control Module	√	√	√	√	√	0245
2017	GMC	Sierra	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2017	GMC	Sierra	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 07AB 0009 07AC
2017	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2017	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2017	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111



2017	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2017	GMC	Terrain	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2017	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0247
2017	GMC	Terrain	HVAC Control Module	√	√	√	√	√	0007 0129
2017	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0247
2017	GMC	Terrain	Passenger Presence Module	√	√	√	√	√	0057
2017	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	GMC	Terrain	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2017	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0080 0089
2017	GMC	Terrain	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	GMC	Terrain	Front Seat Heating Control Module	√	√	√	√	√	
2017	GMC	Terrain	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	GMC	Terrain	Left Side Object Detection Control Module	√	√	√		√	
2017	GMC	Terrain	Right Side Object Detection Control Module	√	√	√		√	
2017	GMC	Terrain	Seat Memory Control Module	√	√	√	√	√	0310
2017	GMC	Terrain	Radio	√	√	√	√	√	
2017	GMC	Terrain	Rear Differential Clutch Control Module	√	√	√	√		0155
2017	GMC	Yukon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2017	GMC	Yukon	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2017	GMC	Yukon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2017	GMC	Yukon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	GMC	Yukon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	GMC	Yukon	Instrument Cluster	√	√	√	√	√	0247
2017	GMC	Yukon	HVAC Control Module	√	√	√	√	√	0007 0129
2017	GMC	Yukon	HVAC Controls	√	√	√	√	√	
2017	GMC	Yukon	Serial Data Gateway Module	√	√	√			
2017	GMC	Yukon	Steering Column Lock Control Module	√	√	√	√		
2017	GMC	Yukon	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	GMC	Yukon	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	GMC	Yukon	Amplifier	√	√	√	√		
2017	GMC	Yukon	Assist Step Control Module	√	√	√	√	√	
2017	GMC	Yukon	Human Machine Interface Control Module	√	√	√	√	√	0150

2017	GMC	Yukon	Radio Controls	√	√	√	√		0241
2017	GMC	Yukon	Media Disc Player	√	√	√	√	√	
2017	GMC	Yukon	Rear Audio Control Module	√	√	√	√	√	
2017	GMC	Yukon	Radio	√	√	√	√	√	0226 0150
2017	GMC	Yukon	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	GMC	Yukon	Left Side Object Detection Control Module	√	√	√		√	
2017	GMC	Yukon	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	GMC	Yukon	Seat Memory Control Module - Passenger	√	√	√	√	√	
2017	GMC	Yukon	Keyless Entry Control Module	√	√	√	√	√	
2017	GMC	Yukon	Passenger Presence Module	√	√	√	√	√	0057
2017	GMC	Yukon	Distance Sensing Cruise Control Module	√	√	√	√		0047
2017	GMC	Yukon	Video Processing Control Module	√	√	√	√	√	
2017	GMC	Yukon	Frontview Camera Module	√	√	√	√		0196
2017	GMC	Yukon	Power Steering Control Module	√	√	√	√	√	0150
2017	GMC	Yukon	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	GMC	Yukon	Suspension Control Module	√	√	√	√	√	0245
2017	GMC	Yukon	Parking Brake Control Module	√	√	√	√	√	0229
2017	GMC	Yukon	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2017	GMC	Yukon	Transfer Case Control Module	√	√	√	√	√	0037
2017	GMC	Yukon XL	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2017	GMC	Yukon XL	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2017	GMC	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2017	GMC	Yukon XL	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	GMC	Yukon XL	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233
2017	GMC	Yukon XL	Instrument Cluster	√	√	√	√	√	0150 0247
2017	GMC	Yukon XL	HVAC Control Module	√	√	√	√	√	0007 0129
2017	GMC	Yukon XL	HVAC Controls	√	√	√	√	√	
2017	GMC	Yukon XL	Serial Data Gateway Module	√	√	√			
2017	GMC	Yukon XL	Steering Column Lock Control Module	√	√	√	√		
2017	GMC	Yukon XL	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	GMC	Yukon XL	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	GMC	Yukon XL	Amplifier	√	√	√	√		
2017	GMC	Yukon XL	Assist Step Control Module	√	√	√	√	√	
2017	GMC	Yukon XL	Human Machine Interface Control Module	√	√	√	√	√	0150

2017	GMC	Yukon XL	Radio Controls	√	√	√	√		0241
2017	GMC	Yukon XL	Media Disc Player	√	√	√	√	√	
2017	GMC	Yukon XL	Rear Audio Control Module	√	√	√	√	√	
2017	GMC	Yukon XL	Radio	√	√	√	√	√	0226 0150
2017	GMC	Yukon XL	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	GMC	Yukon XL	Left Side Object Detection Control Module	√	√	√		√	
2017	GMC	Yukon XL	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	GMC	Yukon XL	Seat Memory Control Module - Passenger	√	√	√	√	√	
2017	GMC	Yukon XL	Keyless Entry Control Module	√	√	√	√	√	
2017	GMC	Yukon XL	Passenger Presence Module	√	√	√	√	√	0057
2017	GMC	Yukon XL	Video Processing Control Module	√	√	√	√	√	
2017	GMC	Yukon XL	Distance Sensing Cruise Control Module	√	√	√	√		0047
2017	GMC	Yukon XL	Frontview Camera Module	√	√	√	√		0196
2017	GMC	Yukon XL	Power Steering Control Module	√	√	√	√	√	0150
2017	GMC	Yukon XL	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	GMC	Yukon XL	Suspension Control Module	√	√	√	√	√	0245
2017	GMC	Yukon XL	Parking Brake Control Module	√	√	√	√	√	0229
2017	GMC	Yukon XL	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2017	GMC	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0037
2017	Holden	Astra Sedan NB4	Engine Control Module	√	√	√	√	√	0263 0156 0209 0216 0132 0067 0147 0066 0115 0086 0154 0214 0215 0217 0006 0144 0128
2017	Holden	Astra Sedan NB4	Transmission Control Module	√	√	√	√	√	0019
2017	Holden	Astra Sedan NB4	Electronic Brake Control Module	√	√	√	√	√	0090 0278
2017	Holden	Astra Sedan NB4	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2017	Holden	Astra Sedan NB4	Body Control Module	√	√	√	√	√	0263 0242 0203 0201 0208 0206 0083 0160
2017	Holden	Astra Sedan NB4	Instrument Cluster	√	√	√	√	√	0247 0145
2017	Holden	Astra Sedan NB4	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Holden	Astra Sedan NB4	HVAC Controls	√	√	√			
2017	Holden	Astra Sedan NB4	Serial Data Gateway Module	√	√	√			
2017	Holden	Astra Sedan NB4	Keyless Entry Control Module	√	√	√	√	√	
2017	Holden	Astra Sedan NB4	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Holden	Astra Sedan NB4	Power Steering Control Module	√	√	√	√		0089
2017	Holden	Astra Sedan NB4	Radio	√	√	√	√	√	0226
2017	Holden	Astra Sedan NB4	Parking Assist Control Module	√	√	√	√	√	0271 0247
2017	Holden	Astra Sedan NB4	Steering Column Lock Control Module	√	√	√	√		
2017	Holden	Astra Sedan NB4	Power Supply Transformer	√	√	√	√		
2017	Holden	Astra Sedan NB4	Frontview Camera Module	√	√	√	√		0205 0196 075A
2017	Holden	Astra Sedan NB4	Radio Controls	√	√	√			
2017	Holden	Astra Sedan NB4	Trailer Lighting Control Module	√	√	√	√	√	0247

2017	Holden	Astra-J	Engine Control Module	√	√	√	√	√	0263 0156 0209 0216 0132 0067 0147 0066 0115 0086 0154 0214 0215 0217 0006 0144 0128 0258
2017	Holden	Astra-J	Transmission Control Module	√	√	√	√	√	0019
2017	Holden	Astra-J	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2017	Holden	Astra-J	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2017	Holden	Astra-J	Body Control Module	√	√	√	√	√	0242 0263 0203 0208 0201 0206 0083 0160
2017	Holden	Astra-J	Instrument Cluster	√	√	√	√	√	0247
2017	Holden	Astra-J	HVAC Control Module	√	√	√	√	√	0007 0247 0129
2017	Holden	Astra-J	Headlamp Control Module	√	√	√	√	√	0195
2017	Holden	Astra-J	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Holden	Astra-J	Suspension Control Module	√	√	√	√	√	
2017	Holden	Astra-J	Front Seat Heating Control Module	√	√	√	√	√	
2017	Holden	Astra-J	Parking Brake Control Module	√	√	√	√	√	0229
2017	Holden	Astra-J	Power Steering Control Module	√	√	√	√		0081 0080 0089
2017	Holden	Astra-J	Radio	√	√	√	√	√	
2017	Holden	Astra-J	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2017	Holden	Astra-J	Parking Assist Control Module	√	√	√	√	√	0247
2017	Holden	Astra-J	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2017	Holden	Astra-J	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2017	Holden	Astra-J	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Holden	Astra-J	Frontview Camera Module	√	√	√	√	√	0205 0196 0247
2017	Holden	Astra-K	Engine Control Module	√	√	√	√	√	0263 0156 0209 0216 0132 0067 0147 0066 0115 0086 0154 0214 0215 0217 0006 0144 0128
2017	Holden	Astra-K	Transmission Control Module	√	√	√	√	√	0019
2017	Holden	Astra-K	Electronic Brake Control Module	√	√	√	√	√	0090 0278
2017	Holden	Astra-K	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2017	Holden	Astra-K	Body Control Module	√	√	√	√	√	0242 0263 0203 0208 0201 0206 0083 0160
2017	Holden	Astra-K	Instrument Cluster	√	√	√	√	√	0247
2017	Holden	Astra-K	HVAC Control Module	√	√	√	√	√	0007 0247 0129
2017	Holden	Astra-K	HVAC Controls	√	√	√	√	√	
2017	Holden	Astra-K	Serial Data Gateway Module	√	√	√			
2017	Holden	Astra-K	Radio Controls	√	√	√	√	√	0150
2017	Holden	Astra-K	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Holden	Astra-K	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Holden	Astra-K	Frontview Camera Module	√	√	√	√		0205 0196 075A
2017	Holden	Astra-K	Headlamp Control Module	√	√	√	√	√	0195

2017	Holden	Astra-K	Keyless Entry Control Module	√	√	√	√	√	
2017	Holden	Astra-K	Steering Column Lock Control Module	√	√	√	√		
2017	Holden	Astra-K	Parking Assist Control Module	√	√	√	√	√	0271 0247
2017	Holden	Astra-K	Power Supply Transformer	√	√	√	√		
2017	Holden	Astra-K	Power Steering Control Module	√	√	√	√		0089
2017	Holden	Astra-K	Radio	√	√	√	√	√	0226
2017	Holden	Astra-K	Active Safety Control Module	√	√	√	√	√	
2017	Holden	Astra-K	Long Range Radar Sensor Module	√	√	√	√		0260
2017	Holden	Astra-K	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2017	Holden	Barina	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139
2017	Holden	Barina	Transmission Control Module	√	√	√	√	√	0019
2017	Holden	Barina	Electronic Brake Control Module	√	√	√	√	√	0090
2017	Holden	Barina	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2017	Holden	Barina	Body Control Module	√	√	√	√	√	0263 0203 0083 0159
2017	Holden	Barina	Instrument Cluster	√	√	√	√	√	0247
2017	Holden	Barina	HVAC Control Module	√	√	√	√	√	
2017	Holden	Barina	Serial Data Gateway Module	√	√	√			
2017	Holden	Barina	Parking Assist Control Module	√	√	√	√	√	0247
2017	Holden	Barina	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Holden	Barina	Front Seat Heating Control Module	√	√	√	√	√	
2017	Holden	Barina	Power Steering Control Module	√	√	√	√		0207
2017	Holden	Barina	Radio	√	√	√	√	√	
2017	Holden	Barina	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2017	Holden	Barina	Steering Column Lock Control Module	√	√	√	√		
2017	Holden	Barina	Keyless Entry Control Module	√	√	√	√	√	
2017	Holden	Caprice	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0258
2017	Holden	Caprice	Transmission Control Module	√	√	√	√	√	0016
2017	Holden	Caprice	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2017	Holden	Caprice	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2017	Holden	Caprice	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0083 0160 0159
2017	Holden	Caprice	Instrument Cluster	√	√	√	√	√	0247 0145
2017	Holden	Caprice	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Holden	Caprice	HVAC Controls	√	√	√	√	√	
2017	Holden	Caprice	Headlamp Control Module	√	√	√	√	√	0195
2017	Holden	Caprice	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Holden	Caprice	Radio Controls	√	√	√	√	√	0241 0247
2017	Holden	Caprice	Parking Assist Control Module	√	√	√	√	√	0247
2017	Holden	Caprice	Head-Up Display Module	√	√	√	√	√	
2017	Holden	Caprice	Suspension Control Module	√	√	√	√	√	0245

2017	Holden	Caprice	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Holden	Caprice	Right Side Object Detection Control Module	√	√	√		√	
2017	Holden	Caprice	Left Side Object Detection Control Module	√	√	√		√	
2017	Holden	Caprice	Frontview Camera Module	√	√	√	√	√	0205 0049
2017	Holden	Caprice	Power Steering Control Module	√	√	√	√		0081
2017	Holden	Caprice	Radio	√	√	√	√	√	
2017	Holden	Caprice	Seat Memory Control Module - Driver	√	√	√	√	√	
2017	Holden	Caprice	Parking Brake Control Module	√	√	√	√	√	0229
2017	Holden	Caprice	Steering Column Lock Control Module	√	√	√	√		
2017	Holden	Caprice	Liftgate Control Module	√	√	√	√		
2017	Holden	Caprice	Keyless Entry Control Module	√	√	√	√	√	
2017	Holden	Caprice	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2017	Holden	Captiva	Engine Control Module	√	√	√	√	√	0156 0209 0098 0216 0224 0449 0130 0143 0450 0265 0147 0108 0452 0237 0044 0045 0086 0043 0135 0453 0454 0455 0456 0263 0132 0067 0217 0213
2017	Holden	Captiva	Transmission Control Module	√	√	√	√	√	0019
2017	Holden	Captiva	Electronic Brake Control Module	√	√	√	√	√	0090
2017	Holden	Captiva	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2017	Holden	Captiva	Body Control Module	√	√	√	√	√	0242 0263 0261
2017	Holden	Captiva	Instrument Cluster	√	√	√	√	√	
2017	Holden	Captiva	HVAC Control Module	√	√	√		√	
2017	Holden	Captiva	Headlamp Control Module	√	√	√	√	√	0195 0065
2017	Holden	Captiva	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2017	Holden	Captiva	Remote Control Door Lock Receiver	√	√	√	√	√	0110 0160 0159 079B
2017	Holden	Captiva	Auxiliary Body Control Module	√	√	√	√	√	0050
2017	Holden	Captiva	Parking Brake Control Module	√	√	√	√	√	0229
2017	Holden	Captiva	Left Side Object Detection Control Module	√	√	√		√	
2017	Holden	Captiva	Right Side Object Detection Control Module	√	√	√		√	
2017	Holden	Captiva	Radio	√	√	√	√	√	
2017	Holden	Captiva	Variable Power Steering Control Module	√				√	
2017	Holden	Captiva	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2017	Holden	Cascada	Engine Control Module	√	√	√	√	√	0263 0156 0209 0216 0132 0067 0147 0066 0115 0086 0154 0214 0215 0217 0006 0144 0128
2017	Holden	Cascada	Transmission Control Module	√	√	√	√	√	0019
2017	Holden	Cascada	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2017	Holden	Cascada	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111

2017	Holden	Cascada	Body Control Module	√	√	√	√	√	0242 0263 0203 0208 0201 0206 0083 0160
2017	Holden	Cascada	Instrument Cluster	√	√	√	√	√	0247
2017	Holden	Cascada	HVAC Control Module	√	√	√	√	√	0007 0247 0129
2017	Holden	Cascada	Folding Top Control Module	√	√	√	√	√	0247 0004 0005
2017	Holden	Cascada	Headlamp Control Module	√	√	√	√	√	0195
2017	Holden	Cascada	Parking Assist Control Module	√	√	√	√	√	0247
2017	Holden	Cascada	Frontview Camera Module	√	√	√	√	√	0247
2017	Holden	Cascada	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2017	Holden	Cascada	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Holden	Cascada	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2017	Holden	Cascada	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2017	Holden	Cascada	Front Seat Heating Control Module	√	√	√	√	√	
2017	Holden	Cascada	Parking Brake Control Module	√	√	√	√	√	0229
2017	Holden	Cascada	Power Steering Control Module	√	√	√	√		0081 0080 0089
2017	Holden	Cascada	Radio	√	√	√	√	√	
2017	Holden	Cascada	Suspension Control Module	√	√	√	√	√	
2017	Holden	Colorado	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0222 0060 0044 0045 0086 0097 0084 0043
2017	Holden	Colorado	Transmission Control Module	√	√	√	√	√	0016
2017	Holden	Colorado	Electronic Brake Control Module	√	√	√	√	√	0090 0112
2017	Holden	Colorado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2017	Holden	Colorado	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Holden	Colorado	Instrument Cluster	√	√	√	√	√	0247
2017	Holden	Colorado	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Holden	Colorado	HVAC Controls	√	√	√	√	√	
2017	Holden	Colorado	Serial Data Gateway Module	√	√	√			
2017	Holden	Colorado	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Holden	Colorado	Parking Assist Control Module	√	√	√	√	√	0247
2017	Holden	Colorado	Radio	√	√	√	√	√	0226
2017	Holden	Colorado	Transfer Case Control Module	√	√	√	√	√	0037
2017	Holden	Colorado	Power Steering Control Module	√	√	√	√		0089
2017	Holden	Colorado	Frontview Camera Module	√	√	√	√	√	0205 0196
2017	Holden	Colorado	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Holden	Colorado	Radio Controls	√	√	√	√	√	
2017	Holden	Commodore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258

2017	Holden	Commodore	Transmission Control Module	√	√	√	√	√	0016
2017	Holden	Commodore	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2017	Holden	Commodore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2017	Holden	Commodore	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0083 0160 0159
2017	Holden	Commodore	Instrument Cluster	√	√	√	√	√	0247 0145
2017	Holden	Commodore	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Holden	Commodore	HVAC Controls	√	√	√	√	√	
2017	Holden	Commodore	Liftgate Control Module	√	√	√	√	√	
2017	Holden	Commodore	Headlamp Control Module	√	√	√	√	√	0195
2017	Holden	Commodore	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Holden	Commodore	Radio Controls	√	√	√	√	√	0241 0247
2017	Holden	Commodore	Parking Assist Control Module	√	√	√	√	√	0247
2017	Holden	Commodore	Head-Up Display Module	√	√	√	√	√	
2017	Holden	Commodore	Suspension Control Module	√	√	√	√	√	0245
2017	Holden	Commodore	Steering Column Lock Control Module	√	√	√	√	√	
2017	Holden	Commodore	Parking Brake Control Module	√	√	√	√	√	0229
2017	Holden	Commodore	Power Steering Control Module	√	√	√	√	√	0081
2017	Holden	Commodore	Radio	√	√	√	√	√	
2017	Holden	Commodore	Seat Memory Control Module - Driver	√	√	√	√	√	
2017	Holden	Commodore	Keyless Entry Control Module	√	√	√	√	√	
2017	Holden	Commodore	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2017	Holden	Commodore	Steering Wheel Angle Sensor Module	√	√	√	√	√	0093 0090
2017	Holden	Commodore	Right Side Object Detection Control Module	√	√	√	√	√	
2017	Holden	Commodore	Left Side Object Detection Control Module	√	√	√	√	√	
2017	Holden	Commodore	Frontview Camera Module	√	√	√	√	√	0205 0049
2017	Holden	Insignia	Engine Control Module	√	√	√	√	√	0156 0067 0086 0217
2017	Holden	Insignia	Transmission Control Module	√	√	√	√	√	0020 0084
2017	Holden	Insignia	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2017	Holden	Insignia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2017	Holden	Insignia	Body Control Module	√	√	√	√	√	0242 0263 0203 0208 0201 0206 0083 0160
2017	Holden	Insignia	Instrument Cluster	√	√	√	√	√	0247
2017	Holden	Insignia	HVAC Control Module	√	√	√	√	√	0007 0247 0129
2017	Holden	Insignia	HVAC Controls	√	√	√	√	√	
2017	Holden	Insignia	Steering Column Lock Control Module	√	√	√	√	√	
2017	Holden	Insignia	Keyless Entry Control Module	√	√	√	√	√	
2017	Holden	Insignia	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Holden	Insignia	Headlamp Control Module	√	√	√	√	√	0195
2017	Holden	Insignia	Amplifier	√	√	√	√	√	
2017	Holden	Insignia	Radio Controls	√	√	√	√	√	0150
2017	Holden	Insignia	Trailer Interface Control Module	√	√	√	√	√	0247



2017	Holden	Insignia	Suspension Control Module	√	√	√	√	√	
2017	Holden	Insignia	Rear Differential Clutch Control Module	√	√	√	√	√	
2017	Holden	Insignia	Parking Assist Control Module	√	√	√	√	√	0247
2017	Holden	Insignia	Radio	√	√	√	√	√	0226
2017	Holden	Insignia	Front Seat Heating/Venting/Cooling/Memory Control Module	√	√	√	√	√	
2017	Holden	Insignia	Power Steering Control Module	√	√	√	√	√	
2017	Holden	Insignia	Parking Brake Control Module	√	√	√	√	√	0229
2017	Holden	Insignia	Frontview Camera Module	√	√	√	√	√	0205 0196
2017	Holden	Insignia	Distance Sensing Cruise Control Module	√	√	√	√		0047
2017	Holden	Insignia	Left Side Object Detection Control Module	√	√	√		√	
2017	Holden	Insignia	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Holden	Insignia	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2017	Holden	Spark	Engine Control Module	√	√	√	√	√	0263 0156 0209 0066 0086 0217 0141 0139
2017	Holden	Spark	Transmission Control Module	√	√	√	√	√	0017
2017	Holden	Spark	Electronic Brake Control Module	√	√	√	√	√	0090
2017	Holden	Spark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2017	Holden	Spark	Body Control Module	√	√	√	√	√	0263 0203 0083 0159
2017	Holden	Spark	Instrument Cluster	√	√	√	√	√	0247
2017	Holden	Spark	Serial Data Gateway Module	√	√	√			
2017	Holden	Spark	Power Steering Control Module	√	√	√	√		0089
2017	Holden	Spark	Radio	√	√	√	√	√	
2017	Holden	Spark	Keyless Entry Control Module	√	√	√	√	√	
2017	Holden	Spark	Parking Assist Control Module	√	√	√	√	√	0271 0247
2017	Holden	Spark	Steering Column Lock Control Module	√	√	√	√		
2017	Holden	Trailblazer	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0222 0060 0044 0045 0086 0097 0084 0043
2017	Holden	Trailblazer	Transmission Control Module	√	√	√	√	√	0016
2017	Holden	Trailblazer	Electronic Brake Control Module	√	√	√	√	√	0090 0112
2017	Holden	Trailblazer	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2017	Holden	Trailblazer	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0159
2017	Holden	Trailblazer	Instrument Cluster	√	√	√	√	√	0247
2017	Holden	Trailblazer	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Holden	Trailblazer	HVAC Controls	√	√	√	√	√	
2017	Holden	Trailblazer	Serial Data Gateway Module	√	√	√			
2017	Holden	Trailblazer	Trailer Interface Control Module	√	√	√	√	√	0247

2017	Holden	Trailblazer	Parking Assist Control Module	√	√	√	√	√	0247
2017	Holden	Trailblazer	Transfer Case Control Module	√	√	√	√	√	0037
2017	Holden	Trailblazer	Left Side Object Detection Control Module	√	√	√		√	
2017	Holden	Trailblazer	Right Side Object Detection Control Module	√	√	√		√	
2017	Holden	Trailblazer	Power Steering Control Module	√	√	√	√		0089
2017	Holden	Trailblazer	Radio	√	√	√	√	√	0226
2017	Holden	Trailblazer	Frontview Camera Module	√	√	√	√	√	0205 0196
2017	Holden	Trailblazer	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	Holden	Trailblazer	Radio Controls	√	√	√	√	√	
2017	Holden	Trax	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0066 0217 0086
2017	Holden	Trax	Transmission Control Module	√	√	√	√	√	0019
2017	Holden	Trax	Electronic Brake Control Module	√	√	√	√	√	0090
2017	Holden	Trax	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2017	Holden	Trax	Body Control Module	√	√	√	√	√	0263 0203 0083 0159
2017	Holden	Trax	Instrument Cluster	√	√	√	√	√	0247
2017	Holden	Trax	HVAC Control Module	√	√	√	√	√	
2017	Holden	Trax	Serial Data Gateway Module	√	√	√			
2017	Holden	Trax	Trailer Interface Control Module	√	√	√	√	√	0247
2017	Holden	Trax	Parking Assist Control Module	√	√	√	√	√	0247
2017	Holden	Trax	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2017	Holden	Trax	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Holden	Trax	Keyless Entry Control Module	√	√	√	√	√	
2017	Holden	Trax	Radio Controls	√	√	√	√	√	
2017	Holden	Trax	Front Seat Heating Control Module	√	√	√	√	√	
2017	Holden	Trax	Power Steering Control Module	√	√	√	√		0207
2017	Holden	Trax	Radio	√	√	√	√	√	
2017	Holden	Trax	Steering Column Lock Control Module	√	√	√	√		
2017	Holden	Trax	Power Supply Transformer	√	√	√	√		
2017	Holden	Trax	Left Side Object Detection Control Module	√	√	√		√	
2017	Holden	Trax	Chassis Control Module	√	√	√	√	√	0217
2017	Ravon	Gentra	Engine Control Module	√	√	√	√	√	0068 0217 0210 0209 0156 0147
2017	Ravon	Gentra	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Ravon	Gentra	Electronic Brake Control Module	√	√	√	√	√	
2017	Ravon	Gentra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2017	Ravon	Gentra	Telematics Communication Interface Control Module	√	√	√	√	√	
2017	Ravon	Gentra	Variable Power Steering Control Module				√	√	
2017	Ravon	Matiz	Engine Control Module	√	√	√	√	√	0069 0087 079C
2017	Ravon	Matiz	Electronic Brake Control Module	√	√	√	√	√	
2017	Ravon	Matiz	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2017	Ravon	Matiz	Instrument Cluster	√	√	√	√	√	

2017	Ravon	Matiz	Keyless Entry Control Module				√		
2017	Ravon	Nexia R3	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2017	Ravon	Nexia R3	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Ravon	Nexia R3	Electronic Brake Control Module	√	√	√	√	√	0090
2017	Ravon	Nexia R3	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2017	Ravon	Nexia R3	Instrument Cluster	√	√	√		√	
2017	Ravon	Nexia R3	Tire Pressure Indicator Module	√	√	√	√		079D 0234
2017	Ravon	Nexia R3	Telematics Communication Interface Control Module	√	√	√	√	√	
2017	Ravon	Nexia R3	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Ravon	Nexia R3	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2017	Ravon	R2	Engine Control Module	√	√	√	√	√	0156 0140 0263 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006 0144 0258 0139
2017	Ravon	R2	Transmission Control Module	√	√	√	√	√	0016
2017	Ravon	R2	Electronic Brake Control Module	√	√	√	√	√	0090
2017	Ravon	R2	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2017	Ravon	R2	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2017	Ravon	R2	Instrument Cluster	√	√	√	√	√	
2017	Ravon	R2	HVAC Control Module	√	√	√	√	√	0007 0129
2017	Ravon	R2	Keyless Entry Control Module				√		
2017	Ravon	R2	Radio	√	√	√	√	√	
2017	Ravon	R2	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Ravon	R2	Power Steering Control Module	√	√	√	√		0089
2017	Ravon	R4	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139
2017	Ravon	R4	Transmission Control Module	√	√	√	√	√	0017 0036
2017	Ravon	R4	Electronic Brake Control Module	√	√	√	√	√	0090
2017	Ravon	R4	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2017	Ravon	R4	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	Ravon	R4	Instrument Cluster	√	√	√	√	√	0247
2017	Ravon	R4	Serial Data Gateway Module	√	√	√			
2017	Ravon	R4	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	Ravon	R4	Front Seat Heating Control Module	√	√	√	√	√	
2017	Ravon	R4	Radio	√	√	√	√	√	
2017	Ravon	R4	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	Ravon	R4	Parking Assist Control Module	√	√	√	√	√	0247 0271

2017	Ravon	R4	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Alpheon	Alpheon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2016	Alpheon	Alpheon	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Alpheon	Alpheon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2016	Alpheon	Alpheon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2016	Alpheon	Alpheon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0030 0150
2016	Alpheon	Alpheon	Instrument Cluster	√	√	√	√	√	0247
2016	Alpheon	Alpheon	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Alpheon	Alpheon	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2016	Alpheon	Alpheon	Battery Energy Control Module	√			√		
2016	Alpheon	Alpheon	Drive Motor Control Module	√	√	√	√		
2016	Alpheon	Alpheon	Headlamp Control Module	√	√	√	√	√	0195
2016	Alpheon	Alpheon	Mobile Telephone Control Module	√	√	√	√	√	0247
2016	Alpheon	Alpheon	Parking Assist Control Module	√	√	√	√	√	0247
2016	Alpheon	Alpheon	Keyless Entry Control Module	√	√	√	√	√	
2016	Alpheon	Alpheon	Chassis Control Module	√	√	√	√	√	0217
2016	Alpheon	Alpheon	Front Seat Heating Control Module	√	√	√	√	√	
2016	Alpheon	Alpheon	Rear Seat Heating Control Module	√	√	√	√	√	
2016	Alpheon	Alpheon	Seat Memory Control Module	√	√	√	√	√	0310
2016	Alpheon	Alpheon	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2016	Alpheon	Alpheon	Parking Brake Control Module	√	√	√	√	√	0229
2016	Alpheon	Alpheon	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Alpheon	Alpheon	Suspension Control Module	√	√	√	√	√	
2016	Alpheon	Alpheon	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2016	Alpheon	Alpheon	Radio	√	√	√	√	√	
2016	Alpheon	Alpheon	Rear Audio Control Module	√	√	√	√	√	
2016	Alpheon	Alpheon	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Buick	Cascada	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0114 0050 0130
2016	Buick	Cascada	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Buick	Cascada	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2016	Buick	Cascada	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2016	Buick	Cascada	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2016	Buick	Cascada	Instrument Cluster	√	√	√	√	√	0247
2016	Buick	Cascada	HVAC Control Module	√	√	√	√	√	0007 0129

2016	Buick	Cascada	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Buick	Cascada	Passenger Presence Module	√	√	√	√	√	0057
2016	Buick	Cascada	Parking Assist Control Module	√	√	√	√	√	0247
2016	Buick	Cascada	Folding Top Control Module	√	√	√	√	√	0247 0004 0005
2016	Buick	Cascada	Multimedia Player Interface Module	√	√	√	√	√	0247
2016	Buick	Cascada	Radio	√	√	√	√	√	
2016	Buick	Cascada	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2016	Buick	Cascada	Power Steering Control Module	√	√	√	√		0089 0081 0080
2016	Buick	Cascada	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Buick	Cascada	Front Seat Heating Control Module	√	√	√	√	√	
2016	Buick	Cascada	Frontview Camera Module	√	√	√	√	√	0247 0205 0196 075A
2016	Buick	Cascada	Parking Brake Control Module	√	√	√	√	√	0229
2016	Buick	Cascada	Headlamp Control Module	√	√	√	√	√	0195
2016	Buick	Cascada	Chassis Control Module	√	√	√	√	√	0217
2016	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0212
2016	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0016
2016	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2016	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2016	Buick	Enclave	Body Control Module	√	√	√	√	√	0263 0261
2016	Buick	Enclave	Theft Deterrent Module	√	√	√	√		
2016	Buick	Enclave	Instrument Cluster	√	√	√	√	√	
2016	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2016	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Buick	Enclave	Head-Up Display Module	√	√	√	√	√	
2016	Buick	Enclave	Headlamp Control Module	√	√	√			
2016	Buick	Enclave	Liftgate Control Module	√	√	√	√		0146
2016	Buick	Enclave	Digital Radio Receiver Control Module	√	√	√	√	√	
2016	Buick	Enclave	Front Seat Heating Control Module	√	√	√	√		
2016	Buick	Enclave	Frontview Camera Module	√	√	√	√	√	0205 0196
2016	Buick	Enclave	Left Side Object Detection Control Module	√	√	√		√	
2016	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247
2016	Buick	Enclave	Right Side Object Detection Control Module	√	√	√		√	
2016	Buick	Enclave	Seat Memory Control Module	√	√	√	√	√	
2016	Buick	Enclave	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2016	Buick	Enclave	Passenger Presence Module	√	√	√	√		0057
2016	Buick	Enclave	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2016	Buick	Enclave	Driver Door Switch Panel Control Module	√	√	√	√	√	
2016	Buick	Enclave	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2016	Buick	Enclave	Personal Audio Link Control Module	√	√	√			0231
2016	Buick	Enclave	Radio	√	√	√	√	√	

2016	Buick	Enclave	Rear Audio Control Module	√	√	√	√		
2016	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0066 076B
2016	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2016	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0156 0033 0156
2016	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2016	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2016	Buick	Encore	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Buick	Encore	Left Side Object Detection Control Module	√	√	√		√	
2016	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2016	Buick	Encore	Passenger Presence Module	√	√	√	√		0057
2016	Buick	Encore	Radio	√	√	√	√	√	
2016	Buick	Encore	Power Steering Control Module	√	√	√	√		0207
2016	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217
2016	Buick	Encore	Steering Column Lock Control Module	√	√	√	√		
2016	Buick	Encore	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2016	Buick	Envision	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0036 0139 0088 0013
2016	Buick	Envision	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Buick	Envision	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2016	Buick	Envision	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2016	Buick	Envision	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0156 0033 0156
2016	Buick	Envision	Instrument Cluster	√	√	√	√	√	0247
2016	Buick	Envision	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Buick	Envision	HVAC Controls	√	√	√	√	√	

2016	Buick	Envision	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Buick	Envision	Keyless Entry Control Module	√	√	√	√	√	
2016	Buick	Envision	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Buick	Envision	Left Side Object Detection Control Module	√	√	√		√	
2016	Buick	Envision	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Buick	Envision	Right Side Object Detection Control Module	√	√	√		√	
2016	Buick	Envision	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Buick	Envision	Headlamp Control Module	√	√	√	√	√	0195
2016	Buick	Envision	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2016	Buick	Envision	Steering Column Lock Control Module	√	√	√	√		
2016	Buick	Envision	Power Steering Control Module	√	√	√	√		0081 0080 0089
2016	Buick	Envision	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2016	Buick	Envision	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Buick	Envision	Passenger Presence Module	√	√	√	√	√	0057
2016	Buick	Envision	Long Range Radar Sensor Module	√	√	√	√		0260
2016	Buick	Envision	Liftgate Control Module	√	√	√	√	√	0146 0169
2016	Buick	Envision	Radio	√	√	√	√	√	0226 0150
2016	Buick	Envision	Video Processing Control Module	√	√	√	√	√	
2016	Buick	Envision	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Buick	Envision	Amplifier	√	√	√	√		
2016	Buick	Envision	Radio Controls	√	√	√	√		0241
2016	Buick	Envision	Suspension Control Module	√	√	√	√	√	
2016	Buick	Envision	Accessory DC/AC Power Inverter Module	√	√	√	√	√	
2016	Buick	Envision	Active Safety Control Module	√	√	√	√	√	
2016	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0209 0132 0067 0086 0217 0258 0263 0156
2016	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2016	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2016	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0160 0233 0150
2016	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0247
2016	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Buick	LaCrosse	HVAC Controls	√	√	√	√	√	
2016	Buick	LaCrosse	Battery Energy Control Module	√			√		
2016	Buick	LaCrosse	Drive Motor Control Module	√	√	√	√		
2016	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2016	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Buick	LaCrosse	Head-Up Display Module	√	√	√	√	√	
2016	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	

2016	Buick	LaCrosse	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√		√	
2016	Buick	LaCrosse	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0247
2016	Buick	LaCrosse	Passenger Presence Module	√	√	√	√		0057
2016	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2016	Buick	LaCrosse	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Buick	LaCrosse	Amplifier	√	√	√	√		
2016	Buick	LaCrosse	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Buick	LaCrosse	Radio Controls	√	√	√	√		0241
2016	Buick	LaCrosse	Media Disc Player	√	√	√	√	√	
2016	Buick	LaCrosse	Radio	√	√	√	√	√	0226 0150
2016	Buick	LaCrosse	Distance Sensing Cruise Control Module	√	√	√	√		0047
2016	Buick	LaCrosse	Parking Brake Control Module	√	√	√	√	√	0229
2016	Buick	LaCrosse	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Buick	LaCrosse	Suspension Control Module	√	√	√	√	√	
2016	Buick	LaCrosse	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2016	Buick	LaCrosse	Rear Audio Control Module	√	√	√	√	√	
2016	Buick	LaCrosse	Infotainment Control Touchpad	√	√	√	√	√	
2016	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	
2016	Buick	Regal	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0066 0086 0217 0258 0213 0212
2016	Buick	Regal	Transmission Control Module	√	√	√	√	√	0016 0017 0036
2016	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2016	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Buick	Regal	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0150 0232 0150
2016	Buick	Regal	Instrument Cluster	√	√	√	√	√	0247
2016	Buick	Regal	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Buick	Regal	HVAC Controls	√	√	√	√	√	
2016	Buick	Regal	Battery Energy Control Module	√			√		
2016	Buick	Regal	Drive Motor Control Module	√	√	√	√		
2016	Buick	Regal	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2016	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	
2016	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0247
2016	Buick	Regal	Amplifier	√	√	√	√		
2016	Buick	Regal	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Buick	Regal	Radio Controls	√	√	√	√		0241



2016	Buick	Regal	Radio	√	√	√	√	√	0226 0150
2016	Buick	Regal	Infotainment Control Touchpad	√	√	√	√	√	
2016	Buick	Regal	Passenger Presence Module	√	√	√	√	√	0057
2016	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	
2016	Buick	Regal	Chassis Control Module	√	√	√	√	√	0217
2016	Buick	Regal	Front Seat Heating Control Module	√	√	√	√	√	
2016	Buick	Regal	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Buick	Regal	Left Side Object Detection Control Module	√	√	√		√	
2016	Buick	Regal	Seat Memory Control Module	√	√	√	√	√	0310
2016	Buick	Regal	Distance Sensing Cruise Control Module	√	√	√	√		0047
2016	Buick	Regal	Parking Brake Control Module	√	√	√	√	√	0229
2016	Buick	Regal	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Buick	Regal	Suspension Control Module	√	√	√	√	√	
2016	Buick	Regal	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2016	Buick	Verano	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0066 0086 0217 0258
2016	Buick	Verano	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Buick	Verano	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2016	Buick	Verano	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2016	Buick	Verano	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2016	Buick	Verano	Instrument Cluster	√	√	√	√	√	0247
2016	Buick	Verano	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Buick	Verano	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Buick	Verano	Front Seat Heating Control Module	√	√	√	√	√	
2016	Buick	Verano	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Buick	Verano	Left Side Object Detection Control Module	√	√	√		√	
2016	Buick	Verano	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Buick	Verano	Right Side Object Detection Control Module	√	√	√		√	
2016	Buick	Verano	Keyless Entry Control Module	√	√	√	√	√	
2016	Buick	Verano	Passenger Presence Module	√	√	√	√		0057
2016	Buick	Verano	Chassis Control Module	√	√	√	√	√	0217
2016	Buick	Verano	Radio	√	√	√	√	√	
2016	Buick	Verano	Multimedia Player Interface Module	√	√	√	√		0247
2016	Buick	Verano	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2016	Buick	Verano	Parking Brake Control Module	√	√	√	√	√	0229
2016	Buick	Verano	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Buick	Verano	Power Steering Control Module	√	√	√	√	√	0081 0080 0089

2016	Cadillac	ATS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0020 0213 0756 0085
2016	Cadillac	ATS	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2016	Cadillac	ATS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2016	Cadillac	ATS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2016	Cadillac	ATS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	Cadillac	ATS	Instrument Cluster	√	√	√	√	√	0247
2016	Cadillac	ATS	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Cadillac	ATS	Radio/HVAC Controls	√	√	√	√	√	
2016	Cadillac	ATS	Steering Column Lock Control Module	√	√	√	√		
2016	Cadillac	ATS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Cadillac	ATS	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Cadillac	ATS	Headlamp Control Module	√	√	√	√	√	0195
2016	Cadillac	ATS	Active Safety Control Module	√	√	√	√	√	
2016	Cadillac	ATS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2016	Cadillac	ATS	Left Side Object Detection Control Module	√	√	√		√	
2016	Cadillac	ATS	Parking Assist Control Module	√	√	√	√	√	0247
2016	Cadillac	ATS	Pedestrian Impact Detection Module	√	√	√	√		0170
2016	Cadillac	ATS	Right Side Object Detection Control Module	√	√	√		√	
2016	Cadillac	ATS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Cadillac	ATS	Transfer Case Control Module	√	√	√	√	√	0099 0100 07B0
2016	Cadillac	ATS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2016	Cadillac	ATS	Parking Brake Control Module	√	√	√	√	√	0229
2016	Cadillac	ATS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2016	Cadillac	ATS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Cadillac	ATS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2016	Cadillac	ATS	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2016	Cadillac	ATS	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2016	Cadillac	ATS	Passenger Presence Module	√	√	√	√		0057
2016	Cadillac	ATS	Keyless Entry Control Module	√	√	√	√	√	
2016	Cadillac	ATS	Long Range Radar Sensor Module	√	√	√	√		0260
2016	Cadillac	ATS	Left Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	ATS	Right Front Short Range Radar Sensor Module	√	√	√			

2016	Cadillac	ATS	Rear Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	ATS	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2016	Cadillac	ATS	Amplifier	√	√	√	√		
2016	Cadillac	ATS	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Cadillac	ATS	Navigation Control Module	√	√	√	√	√	
2016	Cadillac	ATS	Media Disc Player	√	√	√	√	√	
2016	Cadillac	ATS	Radio	√	√	√	√	√	0226 0150
2016	Cadillac	ATS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Cadillac	ATS	Vehicle Performance Data Recorder	√	√	√	√		
2016	Cadillac	ATS	Rear Audio Control Module	√	√	√	√	√	
2016	Cadillac	ATS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2016	Cadillac	CT6	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0238 0756 0085
2016	Cadillac	CT6	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2016	Cadillac	CT6	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2016	Cadillac	CT6	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2016	Cadillac	CT6	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	Cadillac	CT6	Instrument Cluster	√	√	√	√	√	0247
2016	Cadillac	CT6	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Cadillac	CT6	HVAC Controls	√	√	√	√	√	
2016	Cadillac	CT6	Serial Data Gateway Module	√	√	√			
2016	Cadillac	CT6	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Cadillac	CT6	Liftgate Control Module	√	√	√	√	√	0146
2016	Cadillac	CT6	Transfer Case Control Module	√	√	√	√	√	0037 0099
2016	Cadillac	CT6	Headlamp Control Module	√	√	√	√	√	0195
2016	Cadillac	CT6	Passenger Presence Module	√	√	√	√	√	0057
2016	Cadillac	CT6	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2016	Cadillac	CT6	Active Safety Control Module	√	√	√	√	√	
2016	Cadillac	CT6	Frontview Camera Module	√	√	√	√	√	0196 0205
2016	Cadillac	CT6	Left Side Object Detection Control Module	√	√	√		√	
2016	Cadillac	CT6	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Cadillac	CT6	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2016	Cadillac	CT6	Keyless Entry Control Module	√	√	√	√	√	

2016	Cadillac	CT6	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Cadillac	CT6	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Cadillac	CT6	Video Processing Control Module	√	√	√	√	√	
2016	Cadillac	CT6	Amplifier	√	√	√	√	√	
2016	Cadillac	CT6	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Cadillac	CT6	Navigation Control Module	√	√	√	√	√	
2016	Cadillac	CT6	Radio	√	√	√	√	√	0226 0150
2016	Cadillac	CT6	Long Range Radar Sensor Module	√	√	√	√	√	0260
2016	Cadillac	CT6	Left Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	CT6	Rear Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	CT6	Right Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	CT6	Seat Memory Control Module - Passenger	√	√	√	√	√	
2016	Cadillac	CT6	Seat Memory Control Module - Left Rear	√	√	√	√	√	
2016	Cadillac	CT6	Seat Memory Control Module - Right Rear	√	√	√	√	√	
2016	Cadillac	CT6	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2016	Cadillac	CT6	Suspension Control Module	√	√	√	√	√	0245
2016	Cadillac	CT6	Radio Controls	√	√	√	√	√	0241
2016	Cadillac	CT6	Brake Booster Control Module	√	√	√	√	√	
2016	Cadillac	CT6	Rear Wheel Steering Control Module	√	√	√	√	√	
2016	Cadillac	CT6	Night Vision Camera Control Module	√	√	√	√	√	0492
2016	Cadillac	CT6	Infotainment Control Touchpad	√	√	√	√	√	
2016	Cadillac	CT6	Media Disc Player	√	√	√	√	√	
2016	Cadillac	CT6	Accessory DC/AC Power Inverter Module	√	√	√	√	√	
2016	Cadillac	CT6	Steering Column Lock Control Module	√	√	√	√	√	
2016	Cadillac	CTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0756 0085 0030 0131
2016	Cadillac	CTS	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2016	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2016	Cadillac	CTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2016	Cadillac	CTS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0082 0150 0032 0150
2016	Cadillac	CTS	Instrument Cluster	√	√	√	√	√	0247
2016	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Cadillac	CTS	Radio/HVAC Controls	√	√	√	√	√	
2016	Cadillac	CTS	Steering Column Lock Control Module	√	√	√	√	√	

2016	Cadillac	CTS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Cadillac	CTS	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	0195
2016	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	0099 0100 07B0
2016	Cadillac	CTS	Active Safety Control Module	√	√	√	√	√	
2016	Cadillac	CTS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2016	Cadillac	CTS	Left Side Object Detection Control Module	√	√	√		√	
2016	Cadillac	CTS	Right Side Object Detection Control Module	√	√	√		√	
2016	Cadillac	CTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Cadillac	CTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√		0170
2016	Cadillac	CTS	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2016	Cadillac	CTS	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2016	Cadillac	CTS	Passenger Presence Module	√	√	√	√		0057
2016	Cadillac	CTS	Keyless Entry Control Module	√	√	√	√	√	
2016	Cadillac	CTS	Amplifier	√	√	√	√		
2016	Cadillac	CTS	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Cadillac	CTS	Navigation Control Module	√	√	√	√	√	
2016	Cadillac	CTS	Radio	√	√	√	√	√	0226 0150
2016	Cadillac	CTS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Cadillac	CTS	Long Range Radar Sensor Module	√	√	√	√		0260
2016	Cadillac	CTS	Left Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	CTS	Rear Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	CTS	Right Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	CTS	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2016	Cadillac	CTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2016	Cadillac	CTS	Parking Brake Control Module	√	√	√	√	√	0229
2016	Cadillac	CTS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2016	Cadillac	CTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Cadillac	CTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2016	Cadillac	CTS	Video Processing Control Module	√	√	√	√	√	
2016	Cadillac	CTS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2016	Cadillac	CTS	Vehicle Performance Data Recorder	√	√	√	√		
2016	Cadillac	ELR	Engine Control Module	√	√	√	√	√	0209 0132 0067 0086 0217 0176
2016	Cadillac	ELR	Transmission Control Module	√	√	√	√	√	
2016	Cadillac	ELR	Electronic Brake Control Module	√	√	√	√	√	0263 0371 0111
2016	Cadillac	ELR	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2016	Cadillac	ELR	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0232 0150

2016	Cadillac	ELR	Instrument Cluster	√	√	√	√	√	0247
2016	Cadillac	ELR	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Cadillac	ELR	Radio/HVAC Controls	√	√	√	√	√	
2016	Cadillac	ELR	Auxiliary Transmission Fluid Pump	√	√	√	√		
2016	Cadillac	ELR	Battery Charger Control Module	√			√		
2016	Cadillac	ELR	Battery Energy Control Module	√			√		
2016	Cadillac	ELR	Coolant Heater Control Module	√	√	√			
2016	Cadillac	ELR	Drive Motor Control Module 1	√	√	√	√		
2016	Cadillac	ELR	Drive Motor Control Module 2	√	√	√	√		
2016	Cadillac	ELR	Electric A/C Compressor Control Module	√					
2016	Cadillac	ELR	Hybrid Powertrain Control Module	√	√	√	√	√	
2016	Cadillac	ELR	Hybrid Powertrain Control Module 2	√	√	√	√	√	0124 0125 0056 0218 0122 0123 0127 0228
2016	Cadillac	ELR	Steering Column Lock Control Module	√	√	√	√		
2016	Cadillac	ELR	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Cadillac	ELR	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Cadillac	ELR	Left Side Object Detection Control Module	√	√	√		√	
2016	Cadillac	ELR	Parking Assist Control Module	√	√	√	√	√	0247
2016	Cadillac	ELR	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Cadillac	ELR	Headlamp Control Module	√	√	√	√	√	0195
2016	Cadillac	ELR	Passenger Presence Module	√	√	√	√		0057
2016	Cadillac	ELR	Keyless Entry Control Module	√	√	√	√	√	
2016	Cadillac	ELR	Parking Brake Control Module	√	√	√	√	√	0229
2016	Cadillac	ELR	Power Steering Control Module	√	√	√	√		0081 0080 0089
2016	Cadillac	ELR	Suspension Control Module	√	√	√	√	√	
2016	Cadillac	ELR	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Cadillac	ELR	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2016	Cadillac	ELR	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Cadillac	ELR	Amplifier	√	√	√	√		
2016	Cadillac	ELR	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Cadillac	ELR	Distance Sensing Cruise Control Module	√	√	√	√		0047
2016	Cadillac	ELR	Radio	√	√	√	√	√	0226 0150
2016	Cadillac	ELR	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2016	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2016	Cadillac	Escalade	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2016	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2016	Cadillac	Escalade	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111

2016	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	Cadillac	Escalade	Instrument Cluster	√	√	√	√	√	0247
2016	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Cadillac	Escalade	Radio/HVAC Controls	√	√	√	√	√	
2016	Cadillac	Escalade	Steering Column Lock Control Module	√	√	√	√		
2016	Cadillac	Escalade	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Cadillac	Escalade	Liftgate Control Module	√	√	√	√	√	0146 0169
2016	Cadillac	Escalade	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Cadillac	Escalade	Active Safety Control Module	√	√	√	√	√	
2016	Cadillac	Escalade	Frontview Camera Module	√	√	√	√	√	0196 0205
2016	Cadillac	Escalade	Left Side Object Detection Control Module	√	√	√		√	
2016	Cadillac	Escalade	Video Processing Control Module	√	√	√	√	√	
2016	Cadillac	Escalade	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Cadillac	Escalade	Passenger Presence Module	√	√	√	√	√	0057
2016	Cadillac	Escalade	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2016	Cadillac	Escalade	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2016	Cadillac	Escalade	Keyless Entry Control Module	√	√	√	√	√	
2016	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	0037
2016	Cadillac	Escalade	Amplifier	√	√	√	√		
2016	Cadillac	Escalade	Assist Step Control Module	√	√	√	√	√	
2016	Cadillac	Escalade	Media Disc Player	√	√	√	√	√	
2016	Cadillac	Escalade	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Cadillac	Escalade	Radio	√	√	√	√	√	0226 0150
2016	Cadillac	Escalade	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2016	Cadillac	Escalade	Power Steering Control Module	√	√	√	√	√	0150
2016	Cadillac	Escalade	Suspension Control Module	√	√	√	√	√	0245
2016	Cadillac	Escalade	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Cadillac	Escalade	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Cadillac	Escalade	Long Range Radar Sensor Module	√	√	√	√		0260
2016	Cadillac	Escalade	Left Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	Escalade	Left Rear Radar Short Range Sensor Module	√	√	√			
2016	Cadillac	Escalade	Right Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	Escalade	Right Rear Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	Escalade	Parking Brake Control Module	√	√	√	√	√	0229
2016	Cadillac	Escalade	Seat Memory Control Module - Passenger	√	√	√	√	√	
2016	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131

2016	Cadillac	Escalade ESV	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2016	Cadillac	Escalade ESV	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2016	Cadillac	Escalade ESV	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	Cadillac	Escalade ESV	Instrument Cluster	√	√	√	√	√	0247
2016	Cadillac	Escalade ESV	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Cadillac	Escalade ESV	HVAC Controls	√	√	√	√	√	
2016	Cadillac	Escalade ESV	Steering Column Lock Control Module	√	√	√	√		
2016	Cadillac	Escalade ESV	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Cadillac	Escalade ESV	Liftgate Control Module	√	√	√	√	√	0146 0169
2016	Cadillac	Escalade ESV	Active Safety Control Module	√	√	√	√	√	
2016	Cadillac	Escalade ESV	Frontview Camera Module	√	√	√	√	√	0196 0205
2016	Cadillac	Escalade ESV	Left Side Object Detection Control Module	√	√	√		√	
2016	Cadillac	Escalade ESV	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Cadillac	Escalade ESV	Video Processing Control Module	√	√	√	√	√	
2016	Cadillac	Escalade ESV	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Cadillac	Escalade ESV	Keyless Entry Control Module	√	√	√	√	√	
2016	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2016	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2016	Cadillac	Escalade ESV	Passenger Presence Module	√	√	√	√	√	0057
2016	Cadillac	Escalade ESV	Transfer Case Control Module	√	√	√	√	√	0037
2016	Cadillac	Escalade ESV	Amplifier	√	√	√	√		
2016	Cadillac	Escalade ESV	Assist Step Control Module	√	√	√	√	√	
2016	Cadillac	Escalade ESV	Media Disc Player	√	√	√	√	√	
2016	Cadillac	Escalade ESV	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Cadillac	Escalade ESV	Radio Controls	√	√	√	√		0241
2016	Cadillac	Escalade ESV	Radio	√	√	√	√	√	0226 0150
2016	Cadillac	Escalade ESV	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2016	Cadillac	Escalade ESV	Power Steering Control Module	√	√	√	√	√	0150
2016	Cadillac	Escalade ESV	Suspension Control Module	√	√	√	√	√	0245
2016	Cadillac	Escalade ESV	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Cadillac	Escalade ESV	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Cadillac	Escalade ESV	Right Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	Escalade ESV	Right Rear Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	Escalade ESV	Left Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	Escalade ESV	Left Rear Radar Short Range Sensor Module	√	√	√			



2016	Cadillac	Escalade ESV	Long Range Radar Sensor Module	√	√	√	√		0260
2016	Cadillac	Escalade ESV	Parking Brake Control Module	√	√	√	√	√	0229
2016	Cadillac	Escalade ESV	Seat Memory Control Module - Passenger	√	√	√	√	√	
2016	Cadillac	SRX	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2016	Cadillac	SRX	Transmission Control Module	√	√	√	√	√	0016
2016	Cadillac	SRX	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2016	Cadillac	SRX	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2016	Cadillac	SRX	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0160 0232 0150
2016	Cadillac	SRX	Instrument Cluster	√	√	√	√	√	0247
2016	Cadillac	SRX	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Cadillac	SRX	Radio/HVAC Controls	√	√	√	√	√	
2016	Cadillac	SRX	Steering Column Lock Control Module	√	√	√	√		
2016	Cadillac	SRX	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Cadillac	SRX	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Cadillac	SRX	Headlamp Control Module	√	√	√	√	√	0195
2016	Cadillac	SRX	Liftgate Control Module	√	√	√	√	√	0146 0169
2016	Cadillac	SRX	Active Safety Control Module	√	√	√	√	√	
2016	Cadillac	SRX	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2016	Cadillac	SRX	Left Side Object Detection Control Module	√	√	√		√	
2016	Cadillac	SRX	Parking Assist Control Module	√	√	√	√	√	0247
2016	Cadillac	SRX	Rear Seat Heating Control Module	√	√	√	√	√	
2016	Cadillac	SRX	Right Side Object Detection Control Module	√	√	√		√	
2016	Cadillac	SRX	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Cadillac	SRX	Keyless Entry Control Module	√	√	√	√	√	
2016	Cadillac	SRX	Passenger Presence Module	√	√	√	√		0057
2016	Cadillac	SRX	Rear Differential Clutch Control Module	√	√	√	√	√	
2016	Cadillac	SRX	Amplifier	√	√	√	√		
2016	Cadillac	SRX	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Cadillac	SRX	Media Disc Player	√	√	√	√	√	
2016	Cadillac	SRX	Navigation Control Module	√	√	√	√	√	
2016	Cadillac	SRX	Rear Audio Control Module	√	√	√	√	√	
2016	Cadillac	SRX	Radio	√	√	√	√	√	0226 0150
2016	Cadillac	SRX	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2016	Cadillac	SRX	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Cadillac	SRX	Suspension Control Module	√	√	√	√	√	
2016	Cadillac	SRX	Left Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	SRX	Right Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	SRX	Rear Short Range Radar Sensor Module	√	√	√			

2016	Cadillac	SRX	Long Range Radar Sensor Module	√	√	√	√		0260
2016	Cadillac	SRX	Parking Brake Control Module	√	√	√	√	√	0229
2016	Cadillac	XTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258 0006 0131 0066
2016	Cadillac	XTS	Transmission Control Module	√	√	√	√	√	0016
2016	Cadillac	XTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2016	Cadillac	XTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2016	Cadillac	XTS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	Cadillac	XTS	Instrument Cluster	√	√	√	√	√	0247
2016	Cadillac	XTS	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Cadillac	XTS	Radio/HVAC Controls	√	√	√	√	√	
2016	Cadillac	XTS	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2016	Cadillac	XTS	Headlamp Control Module	√	√	√	√	√	0195
2016	Cadillac	XTS	Active Safety Control Module	√	√	√	√	√	
2016	Cadillac	XTS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2016	Cadillac	XTS	Left Side Object Detection Control Module	√	√	√	√	√	
2016	Cadillac	XTS	Right Side Object Detection Control Module	√	√	√	√	√	
2016	Cadillac	XTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Cadillac	XTS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2016	Cadillac	XTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Cadillac	XTS	Rear Differential Clutch Control Module	√	√	√	√	√	
2016	Cadillac	XTS	Passenger Presence Module	√	√	√	√		0057
2016	Cadillac	XTS	Keyless Entry Control Module	√	√	√	√	√	
2016	Cadillac	XTS	Amplifier	√	√	√	√		
2016	Cadillac	XTS	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Cadillac	XTS	Media Disc Player	√	√	√	√	√	
2016	Cadillac	XTS	Radio	√	√	√	√	√	0226 0150
2016	Cadillac	XTS	Chassis Control Module	√	√	√	√	√	0217
2016	Cadillac	XTS	Long Range Radar Sensor Module	√	√	√	√		0260
2016	Cadillac	XTS	Left Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	XTS	Right Front Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	XTS	Rear Short Range Radar Sensor Module	√	√	√			
2016	Cadillac	XTS	Steering Column Lock Control Module	√	√	√	√		
2016	Cadillac	XTS	Parking Brake Control Module	√	√	√	√	√	0229
2016	Cadillac	XTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2016	Cadillac	XTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Cadillac	XTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245

2016	Cadillac	XTS	Power Steering Control Module	√	√	√	√	√	0089
2016	Cadillac	XTS	Video Processing Control Module	√	√	√	√	√	
2016	Chevrolet	Aveo	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139 0020 0066 076D 0213 0006 0144 0258 0133 0210 0383 0098 0096 0094 0216 0130 0143 0265 0147 0237 0045 0060 0393 0043 0135 0128 0173 0069 0087
2016	Chevrolet	Aveo	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Chevrolet	Aveo	Electronic Brake Control Module	√	√	√	√	√	0090
2016	Chevrolet	Aveo	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Chevrolet	Aveo	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0160 0033 0150
2016	Chevrolet	Aveo	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Aveo	HVAC Control Module	√	√	√	√	√	
2016	Chevrolet	Aveo	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Aveo	Keyless Entry Control Module				√		
2016	Chevrolet	Aveo	Front Seat Heating Control Module	√	√	√	√	√	
2016	Chevrolet	Aveo	Power Steering Control Module	√	√	√	√		0207
2016	Chevrolet	Aveo	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Chevrolet	Aveo	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Chevrolet	Aveo	Radio	√	√	√	√	√	
2016	Chevrolet	Aveo	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Chevrolet	Aveo	Chassis Control Module	√	√	√	√	√	0217
2016	Chevrolet	Aveo	Fuel Injector Control Module	√	√	√	√	√	
2016	Chevrolet	Aveo	Power Supply Transformer	√	√	√	√		
2016	Chevrolet	Beat	Engine Control Module	√	√	√	√	√	0133 0210 0098 0096 0094 0216 0143 0265 0393 0173 0149 0069 0087 0209 0156 0147 0017
2016	Chevrolet	Beat	Transmission Control Module	√	√	√	√	√	
2016	Chevrolet	Beat	Electronic Brake Control Module	√	√	√	√	√	0090
2016	Chevrolet	Beat	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2016	Chevrolet	Beat	Instrument Cluster	√	√	√	√	√	
2016	Chevrolet	Beat	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Beat	Fuel Injector Control Module	√	√	√	√	√	
2016	Chevrolet	Beat	Radio	√	√	√	√	√	
2016	Chevrolet	Beat	Keyless Entry Control Module				√		

2016	Chevrolet	Beat	Power Steering Control Module	√	√	√	√		0089
2016	Chevrolet	Beat	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2016	Chevrolet	Beat	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Chevrolet	Camaro	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0132 0067 0147 0115 0086 0154 0212 0214 0217 0006 0144 0258 0236 0139 0756 0085 0030 0131
2016	Chevrolet	Camaro	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2016	Chevrolet	Camaro	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229
2016	Chevrolet	Camaro	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2016	Chevrolet	Camaro	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	Chevrolet	Camaro	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Camaro	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Chevrolet	Camaro	HVAC Controls	√	√	√	√	√	
2016	Chevrolet	Camaro	Serial Data Gateway Module	√	√	√			
2016	Chevrolet	Camaro	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Camaro	Mobile Telephone Control Module	√	√	√	√	√	0247
2016	Chevrolet	Camaro	Passenger Presence Module	√	√	√	√	√	0057
2016	Chevrolet	Camaro	Keyless Entry Control Module	√	√	√	√	√	
2016	Chevrolet	Camaro	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Chevrolet	Camaro	Folding Top Control Module	√	√	√	√	√	
2016	Chevrolet	Camaro	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Chevrolet	Camaro	Parking Brake Control Module	√	√	√	√	√	0229
2016	Chevrolet	Camaro	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2016	Chevrolet	Camaro	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Chevrolet	Camaro	Amplifier	√	√	√	√		
2016	Chevrolet	Camaro	Radio	√	√	√	√	√	0226 0150
2016	Chevrolet	Camaro	Suspension Control Module	√	√	√	√	√	0245
2016	Chevrolet	Camaro	Radio Controls	√	√	√	√		0241
2016	Chevrolet	Camaro	Media Disc Player	√	√	√	√	√	
2016	Chevrolet	Camaro	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Chevrolet	Camaro	Left Side Object Detection Control Module	√	√	√		√	
2016	Chevrolet	Camaro	Right Side Object Detection Control Module	√	√	√		√	
2016	Chevrolet	Camaro	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Chevrolet	Camaro	Navigation Control Module	√	√	√	√	√	

2016	Chevrolet	Camaro	Vehicle Performance Data Recorder	√	√	√	√		
2016	Chevrolet	Caprice	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2016	Chevrolet	Caprice	Transmission Control Module	√	√	√	√	√	0016
2016	Chevrolet	Caprice	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2016	Chevrolet	Caprice	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Chevrolet	Caprice	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0030 0150
2016	Chevrolet	Caprice	Instrument Cluster	√	√	√	√	√	0247 0145
2016	Chevrolet	Caprice	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Chevrolet	Caprice	HVAC Controls	√	√	√	√	√	
2016	Chevrolet	Caprice	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Caprice	Fuel Injector Control Module	√			√	√	
2016	Chevrolet	Caprice	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Chevrolet	Caprice	Passenger Presence Module	√	√	√	√		0057
2016	Chevrolet	Caprice	Head-Up Display Module	√	√	√	√	√	
2016	Chevrolet	Caprice	Parking Brake Control Module	√	√	√	√	√	0229
2016	Chevrolet	Caprice	Power Steering Control Module	√	√	√	√		0081
2016	Chevrolet	Caprice	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Chevrolet	Caprice	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2016	Chevrolet	Caprice	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Chevrolet	Caprice	Left Side Object Detection Control Module	√	√	√		√	
2016	Chevrolet	Caprice	Right Side Object Detection Control Module	√	√	√		√	
2016	Chevrolet	Caprice	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Chevrolet	Caprice	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Chevrolet	Caprice	Parking Assist Control Module	√	√	√	√	√	0247
2016	Chevrolet	Caprice	Radio Controls	√	√	√	√	√	0247
2016	Chevrolet	Caprice	Radio	√	√	√	√	√	
2016	Chevrolet	Captiva	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0156 0222 0066 0147 0115 0060 079A 0044 0045 0086 0097 0221 0792 0217 0109 0068 0084 0070 0071 0074 0075 0117 0043 0173 0179 0181 0183 0185 0232 0209 0098 0216 0449 0143 0450 0265 0108 0452 0237 0135 0453 0454 0455 0456
2016	Chevrolet	Captiva	Transmission Control Module	√	√	√	√	√	0020 0084 0017 0036

2016	Chevrolet	Captiva	Electronic Brake Control Module	√	√	√	√	√	0090 0111
2016	Chevrolet	Captiva	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2016	Chevrolet	Captiva	Body Control Module	√	√	√	√	√	0242 0263 0261
2016	Chevrolet	Captiva	Theft Deterrent Module	√	√	√	√	√	
2016	Chevrolet	Captiva	Instrument Cluster	√	√	√	√	√	
2016	Chevrolet	Captiva	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Chevrolet	Captiva	Digital Radio Receiver Control Module	√	√	√	√	√	
2016	Chevrolet	Captiva	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Captiva	Front Seat Heating Control Module	√	√	√	√	√	
2016	Chevrolet	Captiva	Parking Assist Control Module	√	√	√	√	√	
2016	Chevrolet	Captiva	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160 079B 0233 0110
2016	Chevrolet	Captiva	Radio	√	√	√	√	√	
2016	Chevrolet	Captiva	Parking Brake Control Module	√	√	√	√	√	0229
2016	Chevrolet	Captiva	Mobile Telephone Control Module	√	√	√	√	√	
2016	Chevrolet	Captiva	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2016	Chevrolet	Captiva	Chassis Control Module	√	√	√	√	√	0217
2016	Chevrolet	Captiva	Auxiliary Body Control Module	√	√	√	√	√	0050
2016	Chevrolet	Captiva	Headlamp Control Module	√	√	√	√	√	0195 0065
2016	Chevrolet	Captiva	Left Side Object Detection Control Module	√	√	√	√	√	
2016	Chevrolet	Captiva	Right Side Object Detection Control Module	√	√	√	√	√	
2016	Chevrolet	Captiva	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2016	Chevrolet	Cheyenne	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2016	Chevrolet	Cheyenne	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2016	Chevrolet	Cheyenne	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2016	Chevrolet	Cheyenne	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Chevrolet	Cheyenne	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	Chevrolet	Cheyenne	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Cheyenne	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Chevrolet	Cheyenne	HVAC Controls	√	√	√	√	√	
2016	Chevrolet	Cheyenne	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Cheyenne	Transfer Case Control Module	√	√	√	√	√	0037
2016	Chevrolet	Cheyenne	Fuel Injector Control Module	√	√	√	√	√	

2016	Chevrolet	Cheyenne	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Chevrolet	Cheyenne	Passenger Presence Module	√	√	√	√	√	0057
2016	Chevrolet	Cheyenne	Frontview Camera Module	√	√	√	√	√	0196
2016	Chevrolet	Cheyenne	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Chevrolet	Cheyenne	Power Steering Control Module	√	√	√	√	√	0150
2016	Chevrolet	Cheyenne	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2016	Chevrolet	Cheyenne	Suspension Control Module	√	√	√	√	√	0245
2016	Chevrolet	Cheyenne	Amplifier	√	√	√	√		
2016	Chevrolet	Cheyenne	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Chevrolet	Cheyenne	Radio Controls	√	√	√	√		0241
2016	Chevrolet	Cheyenne	Media Disc Player	√	√	√	√	√	
2016	Chevrolet	Cheyenne	Radio	√	√	√	√	√	0226 0150
2016	Chevrolet	Cheyenne	Assist Step Control Module	√	√	√	√	√	
2016	Chevrolet	Cheyenne	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Chevrolet	City Express	Engine Control Module	√	√	√	√	√	0217 0067 0140
2016	Chevrolet	City Express	Transmission Control Module	√	√	√	√		0276 0036
2016	Chevrolet	City Express	Electronic Brake Control Module	√	√	√	√	√	0090 0111
2016	Chevrolet	City Express	Inflatable Restraint Sensing and Diagnostic Module		√	√			
2016	Chevrolet	City Express	Body Control Module	√	√	√	√	√	0041
2016	Chevrolet	City Express	Instrument Cluster		√	√	√		
2016	Chevrolet	City Express	Underhood Fuse Block	√	√	√	√	√	
2016	Chevrolet	City Express	Passenger Presence Module						0057
2016	Chevrolet	City Express	Tire Pressure Indicator Module	√	√	√	√	√	0160
2016	Chevrolet	City Express	Power Steering Control Module	√	√	√	√		
2016	Chevrolet	City Express	Radio	√	√	√	√		
2016	Chevrolet	Cobalt	Engine Control Module	√	√	√	√	√	0133 0156 0210 0383 0098 0096 0094 0216 0130 0143 0265 0147 0237 0045 0060 0086 0393 0043 0135 0128 0173 0209 0132 0067 0263 0217 0130
2016	Chevrolet	Cobalt	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Chevrolet	Cobalt	Electronic Brake Control Module	√	√	√	√	√	0090
2016	Chevrolet	Cobalt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Chevrolet	Cobalt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0082 0160 0032 0150
2016	Chevrolet	Cobalt	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Cobalt	Front Seat Heating Control Module	√	√	√	√	√	
2016	Chevrolet	Cobalt	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Chevrolet	Cobalt	Radio	√	√	√	√	√	

2016	Chevrolet	Cobalt	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Chevrolet	Cobalt	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Chevrolet	Colorado	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0147 0086 0217 0258 0210 0224 0130 0222 0066 0115 0060 079A 0044 0045 0097 0221 0792 0109 0068 0084 0070 0071 0074 0075 0117 0043 0173 0179 0181 0183 0185 0232 076D 0171 0219 0072 0073 0119 0118
2016	Chevrolet	Colorado	Transmission Control Module	√	√	√	√	√	0016
2016	Chevrolet	Colorado	Electronic Brake Control Module	√	√	√	√	√	0090 0112 0111 0225
2016	Chevrolet	Colorado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2016	Chevrolet	Colorado	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0150 0000 0150
2016	Chevrolet	Colorado	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Colorado	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Chevrolet	Colorado	HVAC Controls	√	√	√	√	√	
2016	Chevrolet	Colorado	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Colorado	Frontview Camera Module	√	√	√	√	√	0205 0196
2016	Chevrolet	Colorado	Passenger Presence Module	√	√	√	√	√	0057
2016	Chevrolet	Colorado	Amplifier	√	√	√	√		
2016	Chevrolet	Colorado	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Chevrolet	Colorado	Radio	√	√	√	√	√	0226 0150
2016	Chevrolet	Colorado	Power Steering Control Module	√	√	√	√		0093 0090
2016	Chevrolet	Colorado	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Chevrolet	Colorado	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Chevrolet	Colorado	Transfer Case Control Module	√	√	√	√	√	0037
2016	Chevrolet	Colorado	Radio Controls	√	√	√	√		0241
2016	Chevrolet	Colorado	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Chevrolet	Colorado	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Chevrolet	Corvette	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2016	Chevrolet	Corvette	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2016	Chevrolet	Corvette	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111



2016	Chevrolet	Corvette	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Chevrolet	Corvette	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	Chevrolet	Corvette	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Corvette	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Chevrolet	Corvette	Radio/HVAC Controls	√	√	√	√	√	
2016	Chevrolet	Corvette	Steering Column Lock Control Module	√	√	√	√		
2016	Chevrolet	Corvette	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Corvette	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2016	Chevrolet	Corvette	Folding Top Control Module	√	√	√	√	√	
2016	Chevrolet	Corvette	Inside Rearview Mirror	√	√	√	√	√	
2016	Chevrolet	Corvette	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Chevrolet	Corvette	Seat Memory Control Module - Passenger	√	√	√	√	√	
2016	Chevrolet	Corvette	Keyless Entry Control Module	√	√	√	√	√	
2016	Chevrolet	Corvette	Passenger Presence Module	√	√	√	√	√	0057
2016	Chevrolet	Corvette	Amplifier	√	√	√	√		
2016	Chevrolet	Corvette	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Chevrolet	Corvette	Vehicle Performance Data Recorder	√	√	√	√		
2016	Chevrolet	Corvette	Radio	√	√	√	√	√	0226 0150
2016	Chevrolet	Corvette	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Chevrolet	Corvette	Video Processing Control Module	√	√	√	√	√	
2016	Chevrolet	Corvette	Parking Brake Control Module	√	√	√	√	√	0229
2016	Chevrolet	Corvette	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2016	Chevrolet	Corvette	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Chevrolet	Corvette	Suspension Control Module	√	√	√	√	√	0245
2016	Chevrolet	Corvette	Liftgate Control Module	√	√	√	√	√	
2016	Chevrolet	Cruze	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0066 076D 0210 0224 0130 0222 0147 0060 079A 0044 0045 0097 0792 0109 0068 0084 0070 0071 0074 0075 0117 0043 0173 0179 0181 0183 0185 0232 0098 0216 0449 0143 0450 0265 0108 0452 0237

2016	Chevrolet	Cruze	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Chevrolet	Cruze	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2016	Chevrolet	Cruze	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2016	Chevrolet	Cruze	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0160 0222 0150
2016	Chevrolet	Cruze	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Cruze	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Chevrolet	Cruze	HVAC Controls	√	√	√	√	√	
2016	Chevrolet	Cruze	Serial Data Gateway Module	√	√	√			
2016	Chevrolet	Cruze	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Cruze	Power Steering Control Module	√	√	√	√		0081 0080 0089
2016	Chevrolet	Cruze	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Chevrolet	Cruze	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Chevrolet	Cruze	Left Side Object Detection Control Module	√	√	√		√	
2016	Chevrolet	Cruze	Right Side Object Detection Control Module	√	√	√		√	
2016	Chevrolet	Cruze	Keyless Entry Control Module	√	√	√	√	√	
2016	Chevrolet	Cruze	Passenger Presence Module	√	√	√	√		0057
2016	Chevrolet	Cruze	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Chevrolet	Cruze	Radio	√	√	√	√	√	0226 0150
2016	Chevrolet	Cruze	Distance Sensing Cruise Control Module	√	√	√	√		0047
2016	Chevrolet	Cruze	Radio Controls	√	√	√	√		0241
2016	Chevrolet	Cruze	Amplifier	√	√	√	√		
2016	Chevrolet	Cruze	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Chevrolet	Cruze	Long Range Radar Sensor Module	√	√	√	√		0260
2016	Chevrolet	Cruze	Steering Column Lock Control Module	√	√	√	√		
2016	Chevrolet	Cruze	Power Supply Transformer	√	√	√	√		
2016	Chevrolet	Cruze	Front Seat Heating Control Module	√	√	√	√	√	
2016	Chevrolet	Cruze	Multimedia Player Interface Module	√	√	√	√		0247
2016	Chevrolet	Cruze	Fuel Injector Control Module	√			√	√	
2016	Chevrolet	Cruze	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Chevrolet	Cruze	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Chevrolet	Cruze	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2016	Chevrolet	Cruze	Mobile Telephone Control Module	√	√	√	√	√	0247
2016	Chevrolet	Damas	Engine Control Module	√	√	√	√	√	0069 0087
2016	Chevrolet	Damas	Fuel Injector Control Module	√	√	√	√	√	
2016	Chevrolet	Enjoy	Engine Control Module	√	√	√	√	√	0210 0173 0066 0060 0086 0084 0209 0156
2016	Chevrolet	Enjoy	Electronic Brake Control Module	√	√	√	√	√	
2016	Chevrolet	Enjoy	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√		0172
2016	Chevrolet	Enjoy	Instrument Cluster		√	√			

2016	Chevrolet	Equinox	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2016	Chevrolet	Equinox	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2016	Chevrolet	Equinox	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2016	Chevrolet	Equinox	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2016	Chevrolet	Equinox	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2016	Chevrolet	Equinox	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Equinox	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Chevrolet	Equinox	Liftgate Control Module	√	√	√	√	√	0146 0169
2016	Chevrolet	Equinox	Rear Differential Clutch Control Module	√	√	√	√		0155
2016	Chevrolet	Equinox	Parking Assist Control Module	√	√	√	√	√	0247
2016	Chevrolet	Equinox	Radio	√	√	√	√	√	
2016	Chevrolet	Equinox	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2016	Chevrolet	Equinox	Power Steering Control Module	√	√	√	√		0081 0080 0089
2016	Chevrolet	Equinox	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Chevrolet	Equinox	Passenger Presence Module	√	√	√	√		0057
2016	Chevrolet	Equinox	Front Seat Heating Control Module	√	√	√	√	√	
2016	Chevrolet	Equinox	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Chevrolet	Equinox	Left Side Object Detection Control Module	√	√	√		√	
2016	Chevrolet	Equinox	Right Side Object Detection Control Module	√	√	√		√	
2016	Chevrolet	Equinox	Seat Memory Control Module	√	√	√	√	√	0310
2016	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0139 0237 0210 0115 0058 0042 0044 0088 0219 0073 0072 0070 0071 0117 0118 0119 0120 0240 0178 0180 0182 0184 0186 0188 0190 0192 0138 0137 0179 0181 0183 0185 0187
2016	Chevrolet	Express	Transmission Control Module	√	√	√	√	√	0016
2016	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0225 0111
2016	Chevrolet	Express	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2016	Chevrolet	Express	Body Control Module	√	√	√	√	√	0263 0261
2016	Chevrolet	Express	Theft Deterrent Module	√	√	√	√		
2016	Chevrolet	Express	Instrument Cluster	√	√	√	√	√	
2016	Chevrolet	Express	Auxiliary Heater Control Module	√	√	√	√	√	
2016	Chevrolet	Express	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2016	Chevrolet	Express	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Express	Digital Radio Receiver Control Module	√	√	√	√	√	

2016	Chevrolet	Express	Parking Assist Control Module	√	√	√	√	√	0247
2016	Chevrolet	Express	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2016	Chevrolet	Express	Radio	√	√	√	√	√	
2016	Chevrolet	Express	Chime Alarm Control Module	√	√	√		√	
2016	Chevrolet	Express	Fuel Injector Control Module		√	√			
2016	Chevrolet	Impala	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2016	Chevrolet	Impala	Transmission Control Module	√	√	√	√	√	0016 0017 0036
2016	Chevrolet	Impala	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2016	Chevrolet	Impala	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261 0134 0111
2016	Chevrolet	Impala	Body Control Module	√	√	√	√	√	0263 0261 0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0203 0201 0208 0206 0083 0160 0233 0150
2016	Chevrolet	Impala	Theft Deterrent Module	√	√	√	√		
2016	Chevrolet	Impala	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Impala	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Chevrolet	Impala	HVAC Controls	√	√	√	√	√	
2016	Chevrolet	Impala	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2016	Chevrolet	Impala	Passenger Presence Module	√	√	√	√		0057
2016	Chevrolet	Impala	Keyless Entry Control Module	√	√	√	√	√	
2016	Chevrolet	Impala	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2016	Chevrolet	Impala	Left Side Object Detection Control Module	√	√	√		√	
2016	Chevrolet	Impala	Right Side Object Detection Control Module	√	√	√		√	
2016	Chevrolet	Impala	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Chevrolet	Impala	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Chevrolet	Impala	Amplifier	√	√	√	√		
2016	Chevrolet	Impala	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Chevrolet	Impala	Radio Controls	√	√	√	√		0241
2016	Chevrolet	Impala	Radio	√	√	√	√	√	0226 0150
2016	Chevrolet	Impala	Distance Sensing Cruise Control Module	√	√	√	√		0047
2016	Chevrolet	Impala	Parking Brake Control Module	√	√	√	√	√	0229
2016	Chevrolet	Impala	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Chevrolet	Impala	Power Steering Control Module	√	√	√	√		0081 0080 0089
2016	Chevrolet	Impala	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Chevrolet	Impala	Navigation Control Module	√	√	√	√	√	
2016	Chevrolet	Impala	Rear Audio Control Module	√	√	√	√	√	
2016	Chevrolet	Impala	Digital Radio Receiver Control Module	√	√	√	√	√	
2016	Chevrolet	Impala	Front Seat Heating Control Module	√	√	√	√		

2016	Chevrolet	Impala	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2016	Chevrolet	Labo	Engine Control Module	√	√	√	√	√	0069 0087
2016	Chevrolet	Labo	Fuel Injector Control Module	√	√	√	√	√	
2016	Chevrolet	Lacetti	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2016	Chevrolet	Lacetti	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Chevrolet	Lacetti	Electronic Brake Control Module	√	√	√	√	√	
2016	Chevrolet	Lacetti	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2016	Chevrolet	Lacetti	Fuel Injector Control Module	√	√	√	√	√	
2016	Chevrolet	Lacetti	Variable Power Steering Control Module				√	√	
2016	Chevrolet	Malibu	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0176 0215 0076 0147 0236 0066 076D
2016	Chevrolet	Malibu	Transmission Control Module	√	√	√	√	√	0017 0036 0020 0084
2016	Chevrolet	Malibu	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2016	Chevrolet	Malibu	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2016	Chevrolet	Malibu	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	Chevrolet	Malibu	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Malibu	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Chevrolet	Malibu	HVAC Controls	√	√	√	√	√	
2016	Chevrolet	Malibu	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Malibu	Keyless Entry Control Module	√	√	√	√	√	
2016	Chevrolet	Malibu	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2016	Chevrolet	Malibu	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Chevrolet	Malibu	Front Seat Heating Control Module	√	√	√	√	√	
2016	Chevrolet	Malibu	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Chevrolet	Malibu	Left Side Object Detection Control Module	√	√	√		√	
2016	Chevrolet	Malibu	Rear Seat Heating Control Module	√	√	√	√	√	
2016	Chevrolet	Malibu	Seat Memory Control Module	√	√	√	√	√	0310
2016	Chevrolet	Malibu	Passenger Presence Module	√	√	√	√	√	0057
2016	Chevrolet	Malibu	Multimedia Player Interface Module	√	√	√	√		0247
2016	Chevrolet	Malibu	Radio	√	√	√	√	√	0226 0150
2016	Chevrolet	Malibu	Parking Brake Control Module	√	√	√	√	√	0229
2016	Chevrolet	Malibu	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Chevrolet	Malibu	Headlamp Control Module	√	√	√	√	√	0195

2016	Chevrolet	Malibu	Mobile Telephone Control Module	√	√	√	√	√	0247
2016	Chevrolet	Malibu	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Chevrolet	Malibu	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2016	Chevrolet	Malibu	Hybrid Powertrain Control Module	√	√	√	√	√	0018
2016	Chevrolet	Malibu	Hybrid Powertrain Control Module 2	√	√	√	√	√	0202 0218 0122
2016	Chevrolet	Malibu	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Chevrolet	Malibu	Right Side Object Detection Control Module	√	√	√		√	
2016	Chevrolet	Malibu	Amplifier	√	√	√	√		
2016	Chevrolet	Malibu	Navigation Control Module	√	√	√	√	√	
2016	Chevrolet	Malibu	Active Safety Control Module	√	√	√	√		
2016	Chevrolet	Malibu	Drive Motor Control Module 1	√	√	√	√		
2016	Chevrolet	Malibu	Drive Motor Control Module 2	√	√	√	√		
2016	Chevrolet	Malibu	Electric A/C Compressor Control Module	√					
2016	Chevrolet	Malibu	Brake Booster Control Module	√	√	√	√		
2016	Chevrolet	Malibu	Radio Controls	√	√	√	√		0241
2016	Chevrolet	Malibu	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Chevrolet	Malibu	Long Range Radar Sensor Module	√	√	√	√		0260
2016	Chevrolet	Malibu	Steering Column Lock Control Module	√	√	√	√		
2016	Chevrolet	Malibu	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2016	Chevrolet	Max	Engine Control Module	√	√	√	√	√	0069 0087 079C
2016	Chevrolet	Max	Electronic Brake Control Module	√	√	√	√	√	
2016	Chevrolet	Max	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2016	Chevrolet	Move	Engine Control Module	√	√	√	√	√	0069 0087 079C
2016	Chevrolet	Move	Electronic Brake Control Module	√	√	√	√	√	
2016	Chevrolet	Move	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2016	Chevrolet	Onix	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139
2016	Chevrolet	Onix	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Chevrolet	Onix	Electronic Brake Control Module	√	√	√	√	√	0090
2016	Chevrolet	Onix	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2016	Chevrolet	Onix	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0160 0233 0150
2016	Chevrolet	Onix	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Onix	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Chevrolet	Onix	Radio	√	√	√	√	√	
2016	Chevrolet	Onix	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Chevrolet	Optra	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2016	Chevrolet	Optra	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Chevrolet	Optra	Electronic Brake Control Module	√	√	√	√	√	
2016	Chevrolet	Optra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172

2016	Chevrolet	Optra	Body Control Module	√	√	√	√	√	
2016	Chevrolet	Optra	Instrument Cluster	√	√	√	√	√	
2016	Chevrolet	Orlando	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006 0144 0258 0139 0210 0224 0130 0222 0147 0115 0060 079A 0044 0045 0097 0221 0792 0109 0068 0084 0070 0071 0074 0075 0117 0043 0173 0179 0181 0183 0185 0232 0098 0216 0449 0143 0450 0265 0108 0452 0237
2016	Chevrolet	Orlando	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Chevrolet	Orlando	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2016	Chevrolet	Orlando	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2016	Chevrolet	Orlando	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2016	Chevrolet	Orlando	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Orlando	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Chevrolet	Orlando	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Orlando	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Chevrolet	Orlando	Power Steering Control Module	√	√	√	√		0089 0081 0080
2016	Chevrolet	Orlando	Keyless Entry Control Module	√	√	√	√	√	
2016	Chevrolet	Orlando	Front Seat Heating Control Module	√	√	√	√	√	
2016	Chevrolet	Orlando	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Chevrolet	Orlando	Rear Seat Heating Control Module	√	√	√	√	√	
2016	Chevrolet	Orlando	Fuel Injector Control Module	√	√	√	√	√	
2016	Chevrolet	Orlando	Multimedia Player Interface Module	√	√	√	√		0247
2016	Chevrolet	Orlando	Radio	√	√	√	√	√	
2016	Chevrolet	Orlando	Mobile Telephone Control Module	√	√	√	√	√	0247
2016	Chevrolet	Orlando	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2016	Chevrolet	Orlando	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Chevrolet	Orlando	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2016	Chevrolet	Prisma	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139
2016	Chevrolet	Prisma	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Chevrolet	Prisma	Electronic Brake Control Module	√	√	√	√	√	0090
2016	Chevrolet	Prisma	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2016	Chevrolet	Prisma	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0150 0333 0150
2016	Chevrolet	Prisma	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Prisma	HVAC Control Module	√	√	√	√	√	
2016	Chevrolet	Prisma	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Chevrolet	Prisma	Front Seat Heating Control Module	√	√	√	√	√	
2016	Chevrolet	Prisma	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Chevrolet	Prisma	Radio	√	√	√	√	√	
2016	Chevrolet	S10	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139 0147 0258 0210 0224 0130 0222 0066 0115 0060 079A 0044 0045 0097 0221 0792 0109 0068 0084 0070 0071 0074 0075 0117 0043 0173 0179 0181 0183
2016	Chevrolet	S10	Transmission Control Module	√	√	√	√	√	0016
2016	Chevrolet	S10	Electronic Brake Control Module	√	√	√	√	√	0090 0112 0111
2016	Chevrolet	S10	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2016	Chevrolet	S10	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0150 0333 0150
2016	Chevrolet	S10	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	S10	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Chevrolet	S10	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	S10	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Chevrolet	S10	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Chevrolet	S10	Radio	√	√	√	√	√	
2016	Chevrolet	S10	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Chevrolet	S10	Transfer Case Control Module	√	√	√	√	√	0037
2016	Chevrolet	Sail	Engine Control Module	√	√	√	√	√	0087 0133 0210 0098 0096 0094 0216 0143 0265 0393 0173 0149 0209 0217 0156 0020 0140
2016	Chevrolet	Sail	Transmission Control Module	√	√	√	√	√	0200 0157 0153 0136 0035 0016
2016	Chevrolet	Sail	Electronic Brake Control Module	√	√	√	√	√	0111



2016	Chevrolet	Sail	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0064 0040 0063 0039 0227 0172 0062 0038 0177 0261 0111
2016	Chevrolet	Sail	Body Control Module	√	√	√	√	√	0263
2016	Chevrolet	Sail	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Chevrolet	Sail	Radio/HVAC Controls	√	√	√	√	√	0150
2016	Chevrolet	Sail	Keyless Entry Control Module						0204
2016	Chevrolet	Sail	Radio	√	√	√	√	√	
2016	Chevrolet	Sail	Power Steering Control Module	√	√	√	√		0081 0089
2016	Chevrolet	Silverado	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131 0258 0212 0214 0139 0237 0210 0115 0058 0042 0044 0088 0219 0073 0072 0070 0071 0117 0118 0119 0120 0240 0178 0180 0182 0184 0186 0188 0190 0192 0138 0137 0179 0181 0183 0185 0187
2016	Chevrolet	Silverado	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2016	Chevrolet	Silverado	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2016	Chevrolet	Silverado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	Chevrolet	Silverado	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Silverado	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Chevrolet	Silverado	HVAC Controls	√	√	√	√	√	
2016	Chevrolet	Silverado	Hybrid Powertrain Control Module 2	√	√	√	√	√	0202 0218
2016	Chevrolet	Silverado	Hybrid Powertrain Control Module	√	√	√	√	√	0436 0263
2016	Chevrolet	Silverado	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2016	Chevrolet	Silverado	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 0009
2016	Chevrolet	Silverado	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Silverado	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Chevrolet	Silverado	Transfer Case Control Module	√	√	√	√	√	0037
2016	Chevrolet	Silverado	Fuel Injector Control Module	√	√	√	√	√	

2016	Chevrolet	Silverado	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Chevrolet	Silverado	Passenger Presence Module	√	√	√	√	√	0057
2016	Chevrolet	Silverado	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Chevrolet	Silverado	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Chevrolet	Silverado	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2016	Chevrolet	Silverado	Power Steering Control Module	√	√	√	√	√	0150 0084 0273 0082
2016	Chevrolet	Silverado	Suspension Control Module	√	√	√	√	√	0245
2016	Chevrolet	Silverado	Amplifier	√	√	√	√		
2016	Chevrolet	Silverado	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Chevrolet	Silverado	Radio Controls	√	√	√	√		0241
2016	Chevrolet	Silverado	Media Disc Player	√	√	√	√	√	
2016	Chevrolet	Silverado	Radio	√	√	√	√	√	0226 0150
2016	Chevrolet	Silverado	Assist Step Control Module	√	√	√	√	√	
2016	Chevrolet	Sonic	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139 0133 0210 0383 0098 0096 0094 0216 0130 0143 0265 0147 0237 0045 0060 0393 0043 0135 0128 0173 0020 0066 076D 0213 0006
2016	Chevrolet	Sonic	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Chevrolet	Sonic	Electronic Brake Control Module	√	√	√	√	√	0090
2016	Chevrolet	Sonic	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Chevrolet	Sonic	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0082 0160 0232 0150
2016	Chevrolet	Sonic	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Sonic	HVAC Control Module	√	√	√	√	√	
2016	Chevrolet	Sonic	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Sonic	Front Seat Heating Control Module	√	√	√	√	√	
2016	Chevrolet	Sonic	Passenger Presence Module	√	√	√	√		0057
2016	Chevrolet	Sonic	Power Steering Control Module	√	√	√	√		0207
2016	Chevrolet	Sonic	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Chevrolet	Sonic	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Chevrolet	Sonic	Chassis Control Module	√	√	√	√	√	0217
2016	Chevrolet	Sonic	Radio	√	√	√	√	√	
2016	Chevrolet	Sonic	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Chevrolet	Sonic	Fuel Injector Control Module	√			√	√	

2016	Chevrolet	Spark	Engine Control Module	√	√	√	√	√	0263 0156 0132 0067 0147 0209 0086 0217 0258 0069 0087 0140 0020 0066 076D 0213 0006 0144 0130 0700
2016	Chevrolet	Spark	Transmission Control Module	√	√	√	√	√	0016 0017
2016	Chevrolet	Spark	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229 0225
2016	Chevrolet	Spark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2016	Chevrolet	Spark	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160 0233 0159 0199 0239 0161 0162 0163 0164 0165 0166 0167 0168
2016	Chevrolet	Spark	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Spark	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Chevrolet	Spark	HVAC Controls	√	√	√	√	√	
2016	Chevrolet	Spark	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Spark	Keyless Entry Control Module	√	√	√	√	√	
2016	Chevrolet	Spark	Fuel Injector Control Module	√	√	√	√	√	
2016	Chevrolet	Spark	Radio	√	√	√	√	√	0226
2016	Chevrolet	Spark	Power Steering Control Module	√	√	√	√		0089
2016	Chevrolet	Spark	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Chevrolet	Spark	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2016	Chevrolet	Spark	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Chevrolet	Spark	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Chevrolet	Spark	Passenger Presence Module	√	√	√	√	√	0057
2016	Chevrolet	Spark	Radio Controls	√	√	√	√	√	0247
2016	Chevrolet	Spark EV	Engine Control Module	√	√	√	√	√	0258
2016	Chevrolet	Spark EV	Electronic Brake Control Module	√	√	√	√	√	0263 0371 0111
2016	Chevrolet	Spark EV	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Chevrolet	Spark EV	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0160 0003 0160
2016	Chevrolet	Spark EV	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Spark EV	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Chevrolet	Spark EV	Auxiliary Transmission Fluid Pump	√	√	√	√		
2016	Chevrolet	Spark EV	Battery Charger Control Module	√			√		
2016	Chevrolet	Spark EV	Battery Energy Control Module	√			√		
2016	Chevrolet	Spark EV	Coolant Heater Control Module	√	√	√			
2016	Chevrolet	Spark EV	DC Charging Control Module	√			√		
2016	Chevrolet	Spark EV	Electric A/C Compressor Control Module	√					
2016	Chevrolet	Spark EV	Drive Motor Control Module	√	√	√	√		
2016	Chevrolet	Spark EV	Hybrid Powertrain Control Module	√	√	√	√	√	

2016	Chevrolet	Spark EV	Hybrid Powertrain Control Module 2	√	√	√	√	√	0125 0124 0262 0079 0122 0123 0127
2016	Chevrolet	Spark EV	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Spark EV	Parking Brake Control Module	√	√	√	√	√	0229
2016	Chevrolet	Spark EV	Keyless Entry Control Module	√	√	√	√	√	
2016	Chevrolet	Spark EV	Passenger Presence Module	√	√	√	√	√	0057
2016	Chevrolet	Spark EV	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Chevrolet	Spark EV	Power Steering Control Module	√	√	√	√		0089
2016	Chevrolet	Spark EV	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2016	Chevrolet	Spark EV	Radio	√	√	√	√	√	
2016	Chevrolet	Spin	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139 0133 0210 0383 0098 0096 0094 0216 0130 0143 0265 0147 0237 0045 0393 0043 0135 0128 0173
2016	Chevrolet	Spin	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Chevrolet	Spin	Electronic Brake Control Module	√	√	√	√	√	0090
2016	Chevrolet	Spin	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2016	Chevrolet	Spin	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0150 0000 0150
2016	Chevrolet	Spin	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Spin	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Spin	Radio	√	√	√	√	√	
2016	Chevrolet	Spin	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Chevrolet	Spin	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Chevrolet	SS	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0258
2016	Chevrolet	SS	Transmission Control Module	√	√	√	√	√	0016
2016	Chevrolet	SS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2016	Chevrolet	SS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Chevrolet	SS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0150 0000 0150
2016	Chevrolet	SS	Instrument Cluster	√	√	√	√	√	0247 0145
2016	Chevrolet	SS	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Chevrolet	SS	HVAC Controls	√	√	√	√	√	
2016	Chevrolet	SS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	SS	Fuel Injector Control Module	√			√	√	

2016	Chevrolet	SS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Chevrolet	SS	Passenger Presence Module	√	√	√	√		0057
2016	Chevrolet	SS	Keyless Entry Control Module	√	√	√	√	√	
2016	Chevrolet	SS	Head-Up Display Module	√	√	√	√	√	
2016	Chevrolet	SS	Power Steering Control Module	√	√	√	√		0081
2016	Chevrolet	SS	Parking Brake Control Module	√	√	√	√	√	0229
2016	Chevrolet	SS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Chevrolet	SS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2016	Chevrolet	SS	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Chevrolet	SS	Left Side Object Detection Control Module	√	√	√		√	
2016	Chevrolet	SS	Right Side Object Detection Control Module	√	√	√		√	
2016	Chevrolet	SS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Chevrolet	SS	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Chevrolet	SS	Parking Assist Control Module	√	√	√	√	√	0247
2016	Chevrolet	SS	Radio Controls	√	√	√	√	√	0247
2016	Chevrolet	SS	Radio	√	√	√	√	√	
2016	Chevrolet	Suburban	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2016	Chevrolet	Suburban	Transmission Control Module	√	√	√	√	√	0016
2016	Chevrolet	Suburban	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2016	Chevrolet	Suburban	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Chevrolet	Suburban	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	Chevrolet	Suburban	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Suburban	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Chevrolet	Suburban	HVAC Controls	√	√	√	√	√	
2016	Chevrolet	Suburban	Steering Column Lock Control Module	√	√	√	√		
2016	Chevrolet	Suburban	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Suburban	Liftgate Control Module	√	√	√	√	√	0146 0169
2016	Chevrolet	Suburban	Frontview Camera Module	√	√	√	√	√	0196
2016	Chevrolet	Suburban	Left Side Object Detection Control Module	√	√	√		√	
2016	Chevrolet	Suburban	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Chevrolet	Suburban	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Chevrolet	Suburban	Passenger Presence Module	√	√	√	√	√	0057
2016	Chevrolet	Suburban	Keyless Entry Control Module	√	√	√	√	√	
2016	Chevrolet	Suburban	Transfer Case Control Module	√	√	√	√	√	0037
2016	Chevrolet	Suburban	Amplifier	√	√	√	√		
2016	Chevrolet	Suburban	Assist Step Control Module	√	√	√	√	√	

2016	Chevrolet	Suburban	Media Disc Player	√	√	√	√	√	
2016	Chevrolet	Suburban	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Chevrolet	Suburban	Radio Controls	√	√	√	√	√	0241
2016	Chevrolet	Suburban	Radio	√	√	√	√	√	0226 0150
2016	Chevrolet	Suburban	Power Steering Control Module	√	√	√	√	√	0150
2016	Chevrolet	Suburban	Suspension Control Module	√	√	√	√	√	0245
2016	Chevrolet	Suburban	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Chevrolet	Suburban	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Chevrolet	Suburban	Distance Sensing Cruise Control Module	√	√	√	√		0047
2016	Chevrolet	Suburban	Parking Brake Control Module	√	√	√	√	√	0229
2016	Chevrolet	Suburban	Seat Memory Control Module - Passenger	√	√	√	√	√	
2016	Chevrolet	Tahoe	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2016	Chevrolet	Tahoe	Transmission Control Module	√	√	√	√	√	0016
2016	Chevrolet	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2016	Chevrolet	Tahoe	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	Chevrolet	Tahoe	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Tahoe	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Chevrolet	Tahoe	HVAC Controls	√	√	√	√	√	
2016	Chevrolet	Tahoe	Steering Column Lock Control Module	√	√	√	√		
2016	Chevrolet	Tahoe	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Tahoe	Liftgate Control Module	√	√	√	√	√	0146 0169
2016	Chevrolet	Tahoe	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Chevrolet	Tahoe	Frontview Camera Module	√	√	√	√	√	0196
2016	Chevrolet	Tahoe	Left Side Object Detection Control Module	√	√	√		√	
2016	Chevrolet	Tahoe	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	Chevrolet	Tahoe	Passenger Presence Module	√	√	√	√	√	0057
2016	Chevrolet	Tahoe	Keyless Entry Control Module	√	√	√	√	√	
2016	Chevrolet	Tahoe	Transfer Case Control Module	√	√	√	√	√	0037
2016	Chevrolet	Tahoe	Amplifier	√	√	√	√		
2016	Chevrolet	Tahoe	Assist Step Control Module	√	√	√	√	√	
2016	Chevrolet	Tahoe	Media Disc Player	√	√	√	√	√	
2016	Chevrolet	Tahoe	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Chevrolet	Tahoe	Radio Controls	√	√	√	√		0241
2016	Chevrolet	Tahoe	Radio	√	√	√	√	√	0226 0150
2016	Chevrolet	Tahoe	Steering Wheel Angle Sensor Module	√	√	√			0093 0090

2016	Chevrolet	Tahoe	Suspension Control Module	√	√	√	√	√	0245
2016	Chevrolet	Tahoe	Power Steering Control Module	√	√	√	√	√	0150
2016	Chevrolet	Tahoe	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Chevrolet	Tahoe	Distance Sensing Cruise Control Module	√	√	√	√		0047
2016	Chevrolet	Tahoe	Parking Brake Control Module	√	√	√	√	√	0229
2016	Chevrolet	Tahoe	Seat Memory Control Module - Passenger	√	√	√	√	√	
2016	Chevrolet	Tavera	Engine Control Module	√	√	√	√	√	
2016	Chevrolet	Tracker	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006
2016	Chevrolet	Tracker	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Chevrolet	Tracker	Electronic Brake Control Module	√	√	√	√	√	0090
2016	Chevrolet	Tracker	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Chevrolet	Tracker	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0156 0003 0156
2016	Chevrolet	Tracker	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Tracker	HVAC Control Module	√	√	√	√	√	
2016	Chevrolet	Tracker	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Tracker	Power Steering Control Module	√	√	√	√		0207
2016	Chevrolet	Tracker	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Chevrolet	Tracker	Front Seat Heating Control Module	√	√	√	√	√	
2016	Chevrolet	Tracker	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Chevrolet	Tracker	Radio	√	√	√	√	√	
2016	Chevrolet	Tracker	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Chevrolet	Tracker	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Chevrolet	Tracker	Fuel Injector Control Module	√			√	√	
2016	Chevrolet	Tracker	Chassis Control Module	√	√	√	√	√	0217
2016	Chevrolet	Tracker	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2016	Chevrolet	Trailblazer	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0222 0060 0044 0045 0086 0097 0084 0043 0173 0156 0066 0147 0115 079A 0221 0792 0217 0109 0068 0070 0071 0074 0075 0117 0179 0181 0183 0185 0232 0209 0132 0067
2016	Chevrolet	Trailblazer	Transmission Control Module	√	√	√	√	√	0016
2016	Chevrolet	Trailblazer	Electronic Brake Control Module	√	√	√	√	√	0090 0112 0111
2016	Chevrolet	Trailblazer	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134

2016	Chevrolet	Trailblazer	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0159 0232 0158
2016	Chevrolet	Trailblazer	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Trailblazer	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Chevrolet	Trailblazer	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Trailblazer	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Chevrolet	Trailblazer	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Chevrolet	Trailblazer	Radio	√	√	√	√	√	
2016	Chevrolet	Trailblazer	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2016	Chevrolet	Trailblazer	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Chevrolet	Trailblazer	Transfer Case Control Module	√	√	√	√	√	0037
2016	Chevrolet	Traverse	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0212
2016	Chevrolet	Traverse	Transmission Control Module	√	√	√	√	√	0016
2016	Chevrolet	Traverse	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2016	Chevrolet	Traverse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2016	Chevrolet	Traverse	Body Control Module	√	√	√	√	√	0263 0261
2016	Chevrolet	Traverse	Theft Deterrent Module	√	√	√	√		
2016	Chevrolet	Traverse	Instrument Cluster	√	√	√	√	√	
2016	Chevrolet	Traverse	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2016	Chevrolet	Traverse	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Traverse	Liftgate Control Module	√	√	√	√		0146
2016	Chevrolet	Traverse	Digital Radio Receiver Control Module	√	√	√	√	√	
2016	Chevrolet	Traverse	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2016	Chevrolet	Traverse	Frontview Camera Module	√	√	√	√	√	0205 0196
2016	Chevrolet	Traverse	Left Side Object Detection Control Module	√	√	√		√	
2016	Chevrolet	Traverse	Parking Assist Control Module	√	√	√	√	√	0247
2016	Chevrolet	Traverse	Right Side Object Detection Control Module	√	√	√		√	
2016	Chevrolet	Traverse	Seat Memory Control Module	√	√	√	√	√	
2016	Chevrolet	Traverse	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2016	Chevrolet	Traverse	Passenger Presence Module	√	√	√	√		0057
2016	Chevrolet	Traverse	Radio	√	√	√	√	√	
2016	Chevrolet	Traverse	Driver Door Switch Panel Control Module	√	√	√	√	√	
2016	Chevrolet	Traverse	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2016	Chevrolet	Traverse	Personal Audio Link Control Module	√	√	√			0231
2016	Chevrolet	Traverse	Rear Audio Control Module	√	√	√	√		



2016	Chevrolet	Trax	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0147 0086 0217 0258 0263 0020 0066 076D 0213 0006 0144 0139 0210 0224 0130 0222 0115 0060 079A 0044 0045 0097 0221 0792 0109 0068 0084 0070 0071 0074 0075 0117 0043 0173 0179 0181
2016	Chevrolet	Trax	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Chevrolet	Trax	Electronic Brake Control Module	√	√	√	√	√	0090
2016	Chevrolet	Trax	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	Chevrolet	Trax	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0156 0033 0156
2016	Chevrolet	Trax	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Trax	HVAC Control Module	√	√	√	√	√	
2016	Chevrolet	Trax	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Trax	Power Steering Control Module	√	√	√	√	√	0207
2016	Chevrolet	Trax	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Chevrolet	Trax	Front Seat Heating Control Module	√	√	√	√	√	
2016	Chevrolet	Trax	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Chevrolet	Trax	Left Side Object Detection Control Module	√	√	√		√	
2016	Chevrolet	Trax	Right Side Object Detection Control Module	√	√	√		√	
2016	Chevrolet	Trax	Seat Memory Control Module	√	√	√	√	√	0310
2016	Chevrolet	Trax	Passenger Presence Module	√	√	√	√		0057
2016	Chevrolet	Trax	Radio	√	√	√	√	√	
2016	Chevrolet	Trax	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Chevrolet	Trax	Fuel Injector Control Module	√			√	√	
2016	Chevrolet	Trax	Chassis Control Module	√	√	√	√	√	0217
2016	Chevrolet	Trax	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Chevrolet	Trax	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2016	Chevrolet	Volt	Engine Control Module	√	√	√	√	√	0209 0132 0067 0263 0086 0217 0176 0212
2016	Chevrolet	Volt	Electronic Brake Control Module	√	√	√	√	√	0090 0111 0229
2016	Chevrolet	Volt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2016	Chevrolet	Volt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0156

2016	Chevrolet	Volt	Instrument Cluster	√	√	√	√	√	0247
2016	Chevrolet	Volt	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Chevrolet	Volt	HVAC Controls	√	√	√	√	√	
2016	Chevrolet	Volt	Hybrid Powertrain Control Module 2	√	√	√	√	√	0125 0056 0079 0218 0122 0123 0127
2016	Chevrolet	Volt	Battery Energy Control Module	√			√		
2016	Chevrolet	Volt	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	Chevrolet	Volt	Electric A/C Compressor Control Module	√					
2016	Chevrolet	Volt	Hybrid Powertrain Control Module	√	√	√	√	√	0018
2016	Chevrolet	Volt	Drive Motor Control Module 1	√	√	√	√		
2016	Chevrolet	Volt	Drive Motor Control Module 2	√	√	√	√		
2016	Chevrolet	Volt	Steering Column Lock Control Module	√	√	√	√		
2016	Chevrolet	Volt	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	Chevrolet	Volt	Passenger Presence Module	√	√	√	√		0057
2016	Chevrolet	Volt	Keyless Entry Control Module	√	√	√	√	√	
2016	Chevrolet	Volt	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	Chevrolet	Volt	Radio	√	√	√	√	√	0226 0150
2016	Chevrolet	Volt	Long Range Radar Sensor Module	√	√	√	√		0260
2016	Chevrolet	Volt	Brake Booster Control Module	√	√	√	√		
2016	Chevrolet	Volt	Power Steering Control Module	√	√	√	√		0081 0080 0089
2016	Chevrolet	Volt	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Chevrolet	Volt	Amplifier	√	√	√	√		
2016	Chevrolet	Volt	Radio Controls	√	√	√	√		0241
2016	Chevrolet	Volt	Left Side Object Detection Control Module	√	√	√		√	
2016	Chevrolet	Volt	Right Side Object Detection Control Module	√	√	√		√	
2016	Chevrolet	Volt	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2016	Chevrolet	Work	Engine Control Module	√	√	√	√	√	0069 0087 079C
2016	Chevrolet	Work	Electronic Brake Control Module	√	√	√	√	√	
2016	Chevrolet	Work	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2016	GMC	Acadia	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0212
2016	GMC	Acadia	Transmission Control Module	√	√	√	√	√	0016
2016	GMC	Acadia	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2016	GMC	Acadia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2016	GMC	Acadia	Body Control Module	√	√	√	√	√	0263 0261
2016	GMC	Acadia	Theft Deterrent Module	√	√	√	√		
2016	GMC	Acadia	Instrument Cluster	√	√	√	√	√	
2016	GMC	Acadia	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2016	GMC	Acadia	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	GMC	Acadia	Head-Up Display Module	√	√	√	√	√	
2016	GMC	Acadia	Digital Radio Receiver Control Module	√	√	√	√	√	
2016	GMC	Acadia	Liftgate Control Module	√	√	√	√		0146

2016	GMC	Acadia	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2016	GMC	Acadia	Frontview Camera Module	√	√	√	√	√	0205 0196
2016	GMC	Acadia	Left Side Object Detection Control Module	√	√	√		√	
2016	GMC	Acadia	Parking Assist Control Module	√	√	√	√	√	0247
2016	GMC	Acadia	Right Side Object Detection Control Module	√	√	√		√	
2016	GMC	Acadia	Seat Memory Control Module	√	√	√	√	√	
2016	GMC	Acadia	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2016	GMC	Acadia	Passenger Presence Module	√	√	√	√		0057
2016	GMC	Acadia	Driver Door Switch Panel Control Module	√	√	√	√	√	
2016	GMC	Acadia	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2016	GMC	Acadia	Personal Audio Link Control Module	√	√	√			0231
2016	GMC	Acadia	Radio	√	√	√	√	√	
2016	GMC	Acadia	Rear Audio Control Module	√	√	√	√		
2016	GMC	Canyon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0147 0086 0217 0258 0222 0115 076D 0060 0044 0045 0097 0171 0219 0084 0074 0075 0072 0073 0119 0117 0118 0120 0178 0180 0182 0184 0066
2016	GMC	Canyon	Transmission Control Module	√	√	√	√	√	0016
2016	GMC	Canyon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2016	GMC	Canyon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2016	GMC	Canyon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0082 0160 0232 0150
2016	GMC	Canyon	Instrument Cluster	√	√	√	√	√	0247
2016	GMC	Canyon	HVAC Control Module	√	√	√	√	√	0007 0129
2016	GMC	Canyon	HVAC Controls	√	√	√	√	√	
2016	GMC	Canyon	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	GMC	Canyon	Frontview Camera Module	√	√	√	√	√	0205 0196
2016	GMC	Canyon	Passenger Presence Module	√	√	√	√	√	0057
2016	GMC	Canyon	Amplifier	√	√	√	√		
2016	GMC	Canyon	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	GMC	Canyon	Radio	√	√	√	√	√	0226 0150
2016	GMC	Canyon	Power Steering Control Module	√	√	√	√		0093 0090
2016	GMC	Canyon	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	GMC	Canyon	Trailer Interface Control Module	√	√	√	√	√	0247
2016	GMC	Canyon	Transfer Case Control Module	√	√	√	√	√	0037
2016	GMC	Canyon	Radio Controls	√	√	√	√		0241

2016	GMC	Savana	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0139 0237 0210 0115 0058 0042 0044 0088 0219 0073 0072 0070 0071 0117 0118 0119 0120 0240 0178 0180 0182 0184 0186 0188 0190 0192 0138 0137 0179 0181 0183 0185 0187
2016	GMC	Savana	Transmission Control Module	√	√	√	√	√	0016
2016	GMC	Savana	Electronic Brake Control Module	√	√	√	√	√	0225 0111
2016	GMC	Savana	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2016	GMC	Savana	Body Control Module	√	√	√	√	√	0263 0261
2016	GMC	Savana	Theft Deterrent Module	√	√	√	√		
2016	GMC	Savana	Instrument Cluster	√	√	√	√	√	
2016	GMC	Savana	Auxiliary Heater Control Module	√	√	√	√	√	
2016	GMC	Savana	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2016	GMC	Savana	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	GMC	Savana	Digital Radio Receiver Control Module	√	√	√	√	√	
2016	GMC	Savana	Parking Assist Control Module	√	√	√	√	√	0247
2016	GMC	Savana	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2016	GMC	Savana	Radio	√	√	√	√	√	
2016	GMC	Savana	Chime Alarm Control Module	√	√	√		√	
2016	GMC	Savana	Fuel Injector Control Module		√	√			
2016	GMC	Sierra	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131 0258 0212 0214 0139 0237 0210 0115 0058 0042 0044 0088 0219 0073 0072 0070 0071 0117 0118 0119 0120 0240 0178 0180 0182 0184 0186 0188 0190 0192 0138 0137 0179 0181 0183 0185 0187
2016	GMC	Sierra	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2016	GMC	Sierra	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2016	GMC	Sierra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111

2016	GMC	Sierra	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	GMC	Sierra	Instrument Cluster	√	√	√	√	√	0247
2016	GMC	Sierra	HVAC Control Module	√	√	√	√	√	0007 0129
2016	GMC	Sierra	HVAC Controls	√	√	√	√	√	
2016	GMC	Sierra	Hybrid Powertrain Control Module 2	√	√	√	√	√	0202 0218
2016	GMC	Sierra	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2016	GMC	Sierra	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 0009
2016	GMC	Sierra	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	GMC	Sierra	Hybrid Powertrain Control Module	√	√	√	√	√	0436 0263
2016	GMC	Sierra	Fuel Injector Control Module	√	√	√	√	√	
2016	GMC	Sierra	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	GMC	Sierra	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	GMC	Sierra	Passenger Presence Module	√	√	√	√	√	0057
2016	GMC	Sierra	Transfer Case Control Module	√	√	√	√	√	0037
2016	GMC	Sierra	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	GMC	Sierra	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	GMC	Sierra	Distance Sensing Cruise Control Module	√	√	√	√		0047
2016	GMC	Sierra	Power Steering Control Module	√	√	√	√	√	0150 0084 0273 0082
2016	GMC	Sierra	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2016	GMC	Sierra	Suspension Control Module	√	√	√	√	√	0245
2016	GMC	Sierra	Parking Brake Control Module	√	√	√	√	√	0229
2016	GMC	Sierra	Amplifier	√	√	√	√		
2016	GMC	Sierra	Assist Step Control Module	√	√	√	√	√	
2016	GMC	Sierra	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	GMC	Sierra	Radio Controls	√	√	√	√		0241
2016	GMC	Sierra	Media Disc Player	√	√	√	√	√	
2016	GMC	Sierra	Radio	√	√	√	√	√	0226 0150
2016	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2016	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2016	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2016	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2016	GMC	Terrain	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2016	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0247
2016	GMC	Terrain	HVAC Control Module	√	√	√	√	√	0007 0129
2016	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0259

2016	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146 0169
2016	GMC	Terrain	Rear Differential Clutch Control Module	√	√	√	√		0155
2016	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0247
2016	GMC	Terrain	Radio	√	√	√	√	√	
2016	GMC	Terrain	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2016	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0080 0089
2016	GMC	Terrain	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	GMC	Terrain	Passenger Presence Module	√	√	√	√		0057
2016	GMC	Terrain	Front Seat Heating Control Module	√	√	√	√	√	
2016	GMC	Terrain	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	GMC	Terrain	Left Side Object Detection Control Module	√	√	√		√	
2016	GMC	Terrain	Right Side Object Detection Control Module	√	√	√		√	
2016	GMC	Terrain	Seat Memory Control Module	√	√	√	√	√	0310
2016	GMC	Yukon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2016	GMC	Yukon	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2016	GMC	Yukon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2016	GMC	Yukon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	GMC	Yukon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	GMC	Yukon	Instrument Cluster	√	√	√	√	√	0247
2016	GMC	Yukon	HVAC Control Module	√	√	√	√	√	0007 0129
2016	GMC	Yukon	HVAC Controls	√	√	√	√	√	
2016	GMC	Yukon	Steering Column Lock Control Module	√	√	√	√		
2016	GMC	Yukon	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	GMC	Yukon	Liftgate Control Module	√	√	√	√	√	0146 0169
2016	GMC	Yukon	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	GMC	Yukon	Frontview Camera Module	√	√	√	√	√	0196
2016	GMC	Yukon	Left Side Object Detection Control Module	√	√	√		√	
2016	GMC	Yukon	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	GMC	Yukon	Passenger Presence Module	√	√	√	√	√	0057
2016	GMC	Yukon	Keyless Entry Control Module	√	√	√	√	√	
2016	GMC	Yukon	Transfer Case Control Module	√	√	√	√	√	0037
2016	GMC	Yukon	Amplifier	√	√	√	√		
2016	GMC	Yukon	Assist Step Control Module	√	√	√	√	√	
2016	GMC	Yukon	Media Disc Player	√	√	√	√	√	

2016	GMC	Yukon	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	GMC	Yukon	Radio Controls	√	√	√	√		0241
2016	GMC	Yukon	Radio	√	√	√	√	√	0226 0150
2016	GMC	Yukon	Power Steering Control Module	√	√	√	√	√	0150
2016	GMC	Yukon	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	GMC	Yukon	Suspension Control Module	√	√	√	√	√	0245
2016	GMC	Yukon	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	GMC	Yukon	Distance Sensing Cruise Control Module	√	√	√	√		0047
2016	GMC	Yukon	Parking Brake Control Module	√	√	√	√	√	0229
2016	GMC	Yukon	Seat Memory Control Module - Passenger	√	√	√	√	√	
2016	GMC	Yukon XL	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2016	GMC	Yukon XL	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2016	GMC	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2016	GMC	Yukon XL	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	GMC	Yukon XL	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	GMC	Yukon XL	Instrument Cluster	√	√	√	√	√	0247
2016	GMC	Yukon XL	HVAC Control Module	√	√	√	√	√	0007 0129
2016	GMC	Yukon XL	HVAC Controls	√	√	√	√	√	
2016	GMC	Yukon XL	Steering Column Lock Control Module	√	√	√	√		
2016	GMC	Yukon XL	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	GMC	Yukon XL	Liftgate Control Module	√	√	√	√	√	0146 0169
2016	GMC	Yukon XL	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	GMC	Yukon XL	Frontview Camera Module	√	√	√	√	√	0196
2016	GMC	Yukon XL	Left Side Object Detection Control Module	√	√	√		√	
2016	GMC	Yukon XL	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	GMC	Yukon XL	Keyless Entry Control Module	√	√	√	√	√	
2016	GMC	Yukon XL	Passenger Presence Module	√	√	√	√	√	0057
2016	GMC	Yukon XL	Amplifier	√	√	√	√		
2016	GMC	Yukon XL	Assist Step Control Module	√	√	√	√	√	
2016	GMC	Yukon XL	Media Disc Player	√	√	√	√	√	
2016	GMC	Yukon XL	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	GMC	Yukon XL	Radio Controls	√	√	√	√		0241
2016	GMC	Yukon XL	Radio	√	√	√	√	√	0226 0150
2016	GMC	Yukon XL	Power Steering Control Module	√	√	√	√	√	0150

2016	GMC	Yukon XL	Suspension Control Module	√	√	√	√	√	0245
2016	GMC	Yukon XL	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	GMC	Yukon XL	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	GMC	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0037
2016	GMC	Yukon XL	Distance Sensing Cruise Control Module	√	√	√	√		0047
2016	GMC	Yukon XL	Parking Brake Control Module	√	√	√	√	√	0229
2016	GMC	Yukon XL	Seat Memory Control Module - Passenger	√	√	√	√	√	
2016	Holden	Astra-J	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0216 0086 0217 0258 0128 0147 0066 0115 0154 0214 0215 0086 0144
2016	Holden	Astra-J	Transmission Control Module	√	√	√	√	√	0019
2016	Holden	Astra-J	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2016	Holden	Astra-J	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2016	Holden	Astra-J	Body Control Module	√	√	√	√	√	0242 0263 0203 0208 0201 0206 0083 0160
2016	Holden	Astra-J	Instrument Cluster	√	√	√	√	√	0247
2016	Holden	Astra-J	HVAC Control Module	√	√	√	√	√	0007 0247 0129
2016	Holden	Astra-J	Parking Assist Control Module	√	√	√	√	√	0247
2016	Holden	Astra-J	Front Seat Heating Control Module	√	√	√	√	√	
2016	Holden	Astra-J	Radio	√	√	√	√	√	
2016	Holden	Astra-J	Headlamp Control Module	√	√	√	√	√	0195
2016	Holden	Astra-J	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Holden	Astra-J	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2016	Holden	Astra-J	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Holden	Astra-J	Frontview Camera Module	√	√	√	√	√	0205 0196 0247
2016	Holden	Astra-J	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2016	Holden	Astra-J	Power Steering Control Module	√	√	√	√		0081 0080 0089
2016	Holden	Astra-J	Parking Brake Control Module	√	√	√	√	√	0229
2016	Holden	Astra-J	Suspension Control Module	√	√	√	√	√	
2016	Holden	Astra-J	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2016	Holden	Barina	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0066 0217 0086 0238 0128 0139
2016	Holden	Barina	Transmission Control Module	√	√	√	√	√	0019
2016	Holden	Barina	Electronic Brake Control Module	√	√	√	√	√	0090
2016	Holden	Barina	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2016	Holden	Barina	Body Control Module	√	√	√	√	√	0263 0203 0083 0159
2016	Holden	Barina	Instrument Cluster	√	√	√	√	√	0247
2016	Holden	Barina	HVAC Control Module	√	√	√	√	√	
2016	Holden	Barina	Front Seat Heating Control Module	√	√	√	√	√	
2016	Holden	Barina	Power Steering Control Module	√	√	√	√		0207



2016	Holden	Barina	Parking Assist Control Module	√	√	√	√	√	0247
2016	Holden	Barina	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Holden	Barina	Radio	√	√	√	√	√	
2016	Holden	Barina	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2016	Holden	Caprice	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0258
2016	Holden	Caprice	Transmission Control Module	√	√	√	√	√	0016
2016	Holden	Caprice	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2016	Holden	Caprice	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2016	Holden	Caprice	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0083 0160 0159
2016	Holden	Caprice	Instrument Cluster	√	√	√	√	√	0247 0145
2016	Holden	Caprice	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Holden	Caprice	HVAC Controls	√	√	√	√	√	
2016	Holden	Caprice	Seat Memory Control Module - Driver	√	√	√	√	√	
2016	Holden	Caprice	Parking Assist Control Module	√	√	√	√	√	0247
2016	Holden	Caprice	Keyless Entry Control Module	√	√	√	√	√	
2016	Holden	Caprice	Radio Controls	√	√	√	√	√	0241 0247
2016	Holden	Caprice	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Holden	Caprice	Parking Brake Control Module	√	√	√	√	√	0229
2016	Holden	Caprice	Power Steering Control Module	√	√	√	√		0081
2016	Holden	Caprice	Suspension Control Module	√	√	√	√	√	0245
2016	Holden	Caprice	Head-Up Display Module	√	√	√	√	√	
2016	Holden	Caprice	Radio	√	√	√	√	√	
2016	Holden	Caprice	Steering Column Lock Control Module	√	√	√	√		
2016	Holden	Caprice	Frontview Camera Module	√	√	√	√	√	0205 0049
2016	Holden	Caprice	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Holden	Caprice	Left Side Object Detection Control Module	√	√	√		√	
2016	Holden	Caprice	Headlamp Control Module	√	√	√	√	√	0195
2016	Holden	Caprice	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Holden	Caprice	Right Side Object Detection Control Module	√	√	√		√	
2016	Holden	Captiva	Engine Control Module	√	√	√	√	√	0156 0209 0098 0216 0224 0449 0130 0143 0450 0265 0147 0108 0452 0237 0044 0045 0086 0043 0135 0453 0454 0455 0456 0263 0132 0067 0217 0213
2016	Holden	Captiva	Transmission Control Module	√	√	√	√	√	0019
2016	Holden	Captiva	Electronic Brake Control Module	√	√	√	√	√	0090
2016	Holden	Captiva	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2016	Holden	Captiva	Body Control Module	√	√	√	√	√	0242 0263 0261
2016	Holden	Captiva	Instrument Cluster	√	√	√	√	√	

2016	Holden	Captiva	HVAC Control Module	√	√	√	√	√	
2016	Holden	Captiva	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2016	Holden	Captiva	Radio	√	√	√	√	√	
2016	Holden	Captiva	Variable Power Steering Control Module	√				√	
2016	Holden	Captiva	Parking Brake Control Module	√	√	√	√	√	0229
2016	Holden	Captiva	Auxiliary Body Control Module	√	√	√	√	√	0050
2016	Holden	Captiva	Remote Control Door Lock Receiver	√	√	√	√	√	0110 0160 0159 079B
2016	Holden	Captiva	Left Side Object Detection Control Module	√	√	√		√	
2016	Holden	Captiva	Right Side Object Detection Control Module	√	√	√		√	
2016	Holden	Captiva	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2016	Holden	Captiva	Headlamp Control Module	√	√	√	√	√	0195 0065
2016	Holden	Cascada	Engine Control Module	√	√	√	√	√	0263 0156 0209 0216 0132 0067 0147 0066 0115 0086 0154 0214 0215 0217 0006 0144 0138
2016	Holden	Cascada	Transmission Control Module	√	√	√	√	√	0019
2016	Holden	Cascada	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2016	Holden	Cascada	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2016	Holden	Cascada	Body Control Module	√	√	√	√	√	0242 0263 0203 0208 0201 0206 0083 0160
2016	Holden	Cascada	Instrument Cluster	√	√	√	√	√	0247
2016	Holden	Cascada	HVAC Control Module	√	√	√	√	√	0007 0247 0129
2016	Holden	Cascada	Parking Assist Control Module	√	√	√	√	√	0247
2016	Holden	Cascada	Front Seat Heating Control Module	√	√	√	√	√	
2016	Holden	Cascada	Radio	√	√	√	√	√	
2016	Holden	Cascada	Headlamp Control Module	√	√	√	√	√	0195
2016	Holden	Cascada	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2016	Holden	Cascada	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Holden	Cascada	Frontview Camera Module	√	√	√	√	√	0205 0196 0247
2016	Holden	Cascada	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2016	Holden	Cascada	Parking Brake Control Module	√	√	√	√	√	0229
2016	Holden	Cascada	Power Steering Control Module	√	√	√	√		0081 0080 0089
2016	Holden	Cascada	Folding Top Control Module	√	√	√	√	√	0247 0004 0005
2016	Holden	Cascada	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2016	Holden	Cascada	Suspension Control Module	√	√	√	√	√	
2016	Holden	Colorado	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0222 0060 0044 0045 0086 0097 0084 0043
2016	Holden	Colorado	Transmission Control Module	√	√	√	√	√	0016
2016	Holden	Colorado	Electronic Brake Control Module	√	√	√	√	√	0090 0112
2016	Holden	Colorado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172

2016	Holden	Colorado	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0083 0160 0159
2016	Holden	Colorado	Instrument Cluster	√	√	√	√	√	0247
2016	Holden	Colorado	Parking Assist Control Module	√	√	√	√	√	0247
2016	Holden	Colorado	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2016	Holden	Colorado	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Holden	Colorado	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Holden	Colorado	Radio	√	√	√	√	√	
2016	Holden	Colorado	Transfer Case Control Module	√	√	√	√	√	0037
2016	Holden	Colorado 7	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0222 0060 0044 0045 0086 0097 0084 0043
2016	Holden	Colorado 7	Transmission Control Module	√	√	√	√	√	0016
2016	Holden	Colorado 7	Electronic Brake Control Module	√	√	√	√	√	0090 0112
2016	Holden	Colorado 7	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2016	Holden	Colorado 7	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0083 0160 0159
2016	Holden	Colorado 7	Instrument Cluster	√	√	√	√	√	0247
2016	Holden	Colorado 7	Parking Assist Control Module	√	√	√	√	√	0247
2016	Holden	Colorado 7	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Holden	Colorado 7	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2016	Holden	Colorado 7	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Holden	Colorado 7	Radio	√	√	√	√	√	
2016	Holden	Colorado 7	Transfer Case Control Module	√	√	√	√	√	0037
2016	Holden	Commodore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2016	Holden	Commodore	Transmission Control Module	√	√	√	√	√	0016
2016	Holden	Commodore	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2016	Holden	Commodore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2016	Holden	Commodore	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0083 0160 0159
2016	Holden	Commodore	Instrument Cluster	√	√	√	√	√	0247 0145
2016	Holden	Commodore	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Holden	Commodore	HVAC Controls	√	√	√	√	√	
2016	Holden	Commodore	Steering Column Lock Control Module	√	√	√	√		
2016	Holden	Commodore	Liftgate Control Module	√	√	√	√	√	
2016	Holden	Commodore	Seat Memory Control Module - Driver	√	√	√	√	√	
2016	Holden	Commodore	Parking Assist Control Module	√	√	√	√	√	0247
2016	Holden	Commodore	Keyless Entry Control Module	√	√	√	√	√	
2016	Holden	Commodore	Radio Controls	√	√	√	√	√	0241 0247
2016	Holden	Commodore	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Holden	Commodore	Power Steering Control Module	√	√	√	√		0081

2016	Holden	Commodore	Suspension Control Module	√	√	√	√	√	0245
2016	Holden	Commodore	Head-Up Display Module	√	√	√	√	√	
2016	Holden	Commodore	Parking Brake Control Module	√	√	√	√	√	0229
2016	Holden	Commodore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Holden	Commodore	Left Side Object Detection Control Module	√	√	√		√	
2016	Holden	Commodore	Frontview Camera Module	√	√	√	√	√	0205 0049
2016	Holden	Commodore	Radio	√	√	√	√	√	
2016	Holden	Commodore	Headlamp Control Module	√	√	√	√	√	0195
2016	Holden	Commodore	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	Holden	Commodore	Right Side Object Detection Control Module	√	√	√		√	
2016	Holden	Cruze	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0066 0086 0217 0156
2016	Holden	Cruze	Transmission Control Module	√	√	√	√	√	0019
2016	Holden	Cruze	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2016	Holden	Cruze	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2016	Holden	Cruze	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0083 0160 0159
2016	Holden	Cruze	Instrument Cluster	√	√	√	√	√	0247
2016	Holden	Cruze	HVAC Control Module	√	√	√	√	√	0007 0129
2016	Holden	Cruze	Power Steering Control Module	√	√	√	√		0081 0080 0089
2016	Holden	Cruze	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Holden	Cruze	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2016	Holden	Cruze	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Holden	Cruze	Front Seat Heating Control Module	√	√	√	√	√	
2016	Holden	Cruze	Radio	√	√	√	√	√	
2016	Holden	Cruze	Parking Assist Control Module	√	√	√	√	√	0247
2016	Holden	Cruze	Steering Column Lock Control Module	√	√	√	√		
2016	Holden	Cruze	Keyless Entry Control Module	√	√	√	√	√	
2016	Holden	Insignia	Engine Control Module	√	√	√	√	√	0156 0067 0086 0217
2016	Holden	Insignia	Transmission Control Module	√	√	√	√	√	0020 0084
2016	Holden	Insignia	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2016	Holden	Insignia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2016	Holden	Insignia	Body Control Module	√	√	√	√	√	0242 0263 0203 0208 0201 0206 0083 0160
2016	Holden	Insignia	Instrument Cluster	√	√	√	√	√	0247
2016	Holden	Insignia	HVAC Control Module	√	√	√	√	√	0007 0247 0129
2016	Holden	Insignia	HVAC Controls	√	√	√	√	√	
2016	Holden	Insignia	Front Seat Heating/Venting/Cooling/Memory Control Module	√	√	√	√	√	
2016	Holden	Insignia	Parking Assist Control Module	√	√	√	√	√	0247
2016	Holden	Insignia	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	Holden	Insignia	Headlamp Control Module	√	√	√	√	√	0195

2016	Holden	Insignia	Radio	√	√	√	√	√	0226
2016	Holden	Insignia	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Holden	Insignia	Left Side Object Detection Control Module	√	√	√		√	
2016	Holden	Insignia	Distance Sensing Cruise Control Module	√	√	√	√		0047
2016	Holden	Insignia	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2016	Holden	Insignia	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Holden	Insignia	Frontview Camera Module	√	√	√	√	√	0205 0196
2016	Holden	Insignia	Amplifier	√	√	√	√		
2016	Holden	Insignia	Power Steering Control Module	√	√	√	√	√	
2016	Holden	Insignia	Parking Brake Control Module	√	√	√	√	√	0229
2016	Holden	Insignia	Steering Column Lock Control Module	√	√	√	√		
2016	Holden	Insignia	Keyless Entry Control Module	√	√	√	√	√	
2016	Holden	Insignia	Radio Controls	√	√	√	√	√	0150
2016	Holden	Insignia	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2016	Holden	Insignia	Rear Differential Clutch Control Module	√	√	√	√	√	
2016	Holden	Insignia	Suspension Control Module	√	√	√	√	√	
2016	Holden	Spark	Engine Control Module	√	√	√	√	√	0263 0156 0209 0066 0086 0217 0141 0139
2016	Holden	Spark	Transmission Control Module	√	√	√	√	√	0017
2016	Holden	Spark	Electronic Brake Control Module	√	√	√	√	√	0090
2016	Holden	Spark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2016	Holden	Spark	Body Control Module	√	√	√	√	√	0263 0203 0083 0159
2016	Holden	Spark	Instrument Cluster	√	√	√	√	√	0247
2016	Holden	Spark	Parking Assist Control Module	√	√	√	√	√	0271 0247
2016	Holden	Spark	Power Steering Control Module	√	√	√	√		0089
2016	Holden	Spark	Radio	√	√	√	√	√	
2016	Holden	Spark	Keyless Entry Control Module	√	√	√	√	√	
2016	Holden	Spark	Steering Column Lock Control Module	√	√	√	√		
2016	Holden	Trax	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0066 0217 0086
2016	Holden	Trax	Transmission Control Module	√	√	√	√	√	0019
2016	Holden	Trax	Electronic Brake Control Module	√	√	√	√	√	0090
2016	Holden	Trax	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2016	Holden	Trax	Body Control Module	√	√	√	√	√	0263 0203 0083 0159
2016	Holden	Trax	Instrument Cluster	√	√	√	√	√	0247
2016	Holden	Trax	HVAC Control Module	√	√	√	√	√	
2016	Holden	Trax	Power Steering Control Module	√	√	√	√		0207
2016	Holden	Trax	Parking Assist Control Module	√	√	√	√	√	0247
2016	Holden	Trax	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	Holden	Trax	Front Seat Heating Control Module	√	√	√	√	√	
2016	Holden	Trax	Radio	√	√	√	√	√	
2016	Holden	Trax	Rear Differential Clutch Control Module	√	√	√	√		0003 075B

2016	Holden	Trax	Trailer Interface Control Module	√	√	√	√	√	0247
2016	Holden	Trax	Chassis Control Module	√	√	√	√	√	0217
2016	Ravon	Gentra	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2016	Ravon	Gentra	Transmission Control Module	√	√	√	√	√	0017 0036
2016	Ravon	Gentra	Electronic Brake Control Module	√	√	√	√	√	
2016	Ravon	Gentra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2016	Ravon	Gentra	Fuel Injector Control Module	√	√	√	√	√	
2016	Ravon	Gentra	Variable Power Steering Control Module				√	√	
2016	Ravon	Matiz	Engine Control Module	√	√	√	√	√	0069 0087 079C
2016	Ravon	Matiz	Electronic Brake Control Module	√	√	√	√	√	
2016	Ravon	Matiz	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2016	Ravon	Matiz	Keyless Entry Control Module				√		
2015	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0212
2015	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0016
2015	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2015	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2015	Buick	Enclave	Body Control Module	√	√	√	√	√	0263 0261
2015	Buick	Enclave	Theft Deterrent Module	√	√	√	√		
2015	Buick	Enclave	Instrument Cluster	√	√	√	√	√	
2015	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2015	Buick	Enclave	Headlamp Control Module	√	√	√			
2015	Buick	Enclave	Liftgate Control Module	√	√	√	√		0146
2015	Buick	Enclave	Digital Radio Receiver Control Module	√	√	√	√	√	
2015	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	Buick	Enclave	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2015	Buick	Enclave	Front Seat Heating Control Module	√	√	√	√	√	
2015	Buick	Enclave	Frontview Camera Module	√	√	√	√	√	0205 0196
2015	Buick	Enclave	Left Side Object Detection Control Module	√	√	√		√	
2015	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247
2015	Buick	Enclave	Right Side Object Detection Control Module	√	√	√		√	
2015	Buick	Enclave	Seat Memory Control Module	√	√	√	√	√	
2015	Buick	Enclave	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2015	Buick	Enclave	Passenger Presence Module	√	√	√	√		0057
2015	Buick	Enclave	Radio	√	√	√	√	√	
2015	Buick	Enclave	Rear Audio Control Module	√	√	√	√		
2015	Buick	Enclave	Personal Audio Link Control Module	√	√	√			0231
2015	Buick	Enclave	Driver Door Switch Panel Control Module	√	√	√	√	√	
2015	Buick	Enclave	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2015	Buick	Enclave	Head-Up Display Module	√	√	√	√	√	

2015	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006
2015	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2015	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Buick	Encore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0156 0003 0156
2015	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2015	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Buick	Encore	Power Steering Control Module	√	√	√	√		0207
2015	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2015	Buick	Encore	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2015	Buick	Encore	Left Side Object Detection Control Module	√	√	√		√	
2015	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247
2015	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2015	Buick	Encore	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2015	Buick	Encore	Passenger Presence Module	√	√	√	√		0057
2015	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217
2015	Buick	Encore	Radio	√	√	√	√	√	
2015	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0209 0132 0067 0086 0217 0258 0263 0156
2015	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2015	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2015	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0156 0003 0156
2015	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0247
2015	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Buick	LaCrosse	HVAC Controls	√	√	√	√	√	
2015	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2015	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	
2015	Buick	LaCrosse	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2015	Buick	LaCrosse	Passenger Presence Module	√	√	√	√		0057

2015	Buick	LaCrosse	Distance Sensing Cruise Control Module	√	√	√	√		0047
2015	Buick	LaCrosse	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2015	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√		√	
2015	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0247
2015	Buick	LaCrosse	Drive Motor Control Module	√	√	√	√		
2015	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2015	Buick	LaCrosse	Head-Up Display Module	√	√	√	√	√	
2015	Buick	LaCrosse	Parking Brake Control Module	√	√	√	√	√	0229
2015	Buick	LaCrosse	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Buick	LaCrosse	Suspension Control Module	√	√	√	√	√	
2015	Buick	LaCrosse	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2015	Buick	LaCrosse	Battery Energy Control Module	√			√		
2015	Buick	LaCrosse	Radio	√	√	√	√	√	0226 0150
2015	Buick	LaCrosse	Radio Controls	√	√	√	√		0241
2015	Buick	LaCrosse	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Buick	LaCrosse	Amplifier	√	√	√	√		
2015	Buick	LaCrosse	Media Disc Player	√	√	√	√	√	
2015	Buick	LaCrosse	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Buick	Regal	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0066 0086 0217 0258 0213 0212
2015	Buick	Regal	Transmission Control Module	√	√	√	√	√	0016 0017 0036
2015	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2015	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Buick	Regal	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0169 0232 0150
2015	Buick	Regal	Instrument Cluster	√	√	√	√	√	0247
2015	Buick	Regal	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Buick	Regal	HVAC Controls	√	√	√	√	√	
2015	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Buick	Regal	Battery Energy Control Module	√			√		
2015	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	
2015	Buick	Regal	Chassis Control Module	√	√	√	√	√	0217
2015	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	
2015	Buick	Regal	Passenger Presence Module	√	√	√	√		0057
2015	Buick	Regal	Amplifier	√	√	√	√		
2015	Buick	Regal	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Buick	Regal	Radio Controls	√	√	√	√		0241
2015	Buick	Regal	Radio	√	√	√	√	√	0226 0150
2015	Buick	Regal	Distance Sensing Cruise Control Module	√	√	√	√		0047



2015	Buick	Regal	Front Seat Heating Control Module	√	√	√	√	√	
2015	Buick	Regal	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2015	Buick	Regal	Left Side Object Detection Control Module	√	√	√		√	
2015	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0247
2015	Buick	Regal	Seat Memory Control Module	√	√	√	√	√	0310
2015	Buick	Regal	Drive Motor Control Module	√	√	√	√		
2015	Buick	Regal	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2015	Buick	Regal	Parking Brake Control Module	√	√	√	√	√	0229
2015	Buick	Regal	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Buick	Regal	Suspension Control Module	√	√	√	√	√	
2015	Buick	Regal	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2015	Buick	Verano	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0066 0086 0217 0258
2015	Buick	Verano	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Buick	Verano	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2015	Buick	Verano	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2015	Buick	Verano	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2015	Buick	Verano	Instrument Cluster	√	√	√	√	√	0247
2015	Buick	Verano	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Buick	Verano	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Buick	Verano	Front Seat Heating Control Module	√	√	√	√	√	
2015	Buick	Verano	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2015	Buick	Verano	Left Side Object Detection Control Module	√	√	√		√	
2015	Buick	Verano	Parking Assist Control Module	√	√	√	√	√	0247
2015	Buick	Verano	Right Side Object Detection Control Module	√	√	√		√	
2015	Buick	Verano	Keyless Entry Control Module	√	√	√	√	√	
2015	Buick	Verano	Passenger Presence Module	√	√	√	√		0057
2015	Buick	Verano	Chassis Control Module	√	√	√	√	√	0217
2015	Buick	Verano	Parking Brake Control Module	√	√	√	√	√	0229
2015	Buick	Verano	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2015	Buick	Verano	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Buick	Verano	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2015	Buick	Verano	Radio	√	√	√	√	√	
2015	Buick	Verano	Multimedia Player Interface Module	√	√	√	√		0247
2015	Cadillac	ATS	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0066 0086 0217 0258 0263 0213 0006 0131
2015	Cadillac	ATS	Transmission Control Module	√	√	√	√	√	0016
2015	Cadillac	ATS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2015	Cadillac	ATS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2015	Cadillac	ATS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0032 0150
2015	Cadillac	ATS	Instrument Cluster	√	√	√	√	√	0247
2015	Cadillac	ATS	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Cadillac	ATS	Radio/HVAC Controls	√	√	√	√	√	
2015	Cadillac	ATS	Headlamp Control Module	√	√	√	√	√	0195
2015	Cadillac	ATS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Cadillac	ATS	Steering Column Lock Control Module	√	√	√	√		
2015	Cadillac	ATS	Long Range Radar Sensor Module	√	√	√	√		0260
2015	Cadillac	ATS	Left Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	ATS	Right Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	ATS	Rear Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	ATS	Active Safety Control Module	√	√	√	√	√	
2015	Cadillac	ATS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	Cadillac	ATS	Left Side Object Detection Control Module	√	√	√		√	
2015	Cadillac	ATS	Parking Assist Control Module	√	√	√	√	√	0247
2015	Cadillac	ATS	Pedestrian Impact Detection Module	√	√	√	√		0170
2015	Cadillac	ATS	Right Side Object Detection Control Module	√	√	√		√	
2015	Cadillac	ATS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Cadillac	ATS	Passenger Presence Module	√	√	√	√		0057
2015	Cadillac	ATS	Keyless Entry Control Module	√	√	√	√	√	
2015	Cadillac	ATS	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2015	Cadillac	ATS	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2015	Cadillac	ATS	Trailer Interface Control Module	√	√	√	√	√	0247
2015	Cadillac	ATS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2015	Cadillac	ATS	Parking Brake Control Module	√	√	√	√	√	0229
2015	Cadillac	ATS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2015	Cadillac	ATS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2015	Cadillac	ATS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Cadillac	ATS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Cadillac	ATS	Transfer Case Control Module	√	√	√	√	√	0099 0100 07B0
2015	Cadillac	ATS	Radio	√	√	√	√	√	0226 0150
2015	Cadillac	ATS	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Cadillac	ATS	Media Disc Player	√	√	√	√	√	
2015	Cadillac	ATS	Amplifier	√	√	√	√		
2015	Cadillac	ATS	Navigation Control Module	√	√	√	√	√	
2015	Cadillac	CTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0006 0131 0258 0066
2015	Cadillac	CTS	Transmission Control Module	√	√	√	√	√	0016 0084

2015	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2015	Cadillac	CTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261 0134 0111
2015	Cadillac	CTS	Body Control Module	√	√	√	√	√	0263 0261 0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0203 0201 0208 0206 0083 0160 0233 0150
2015	Cadillac	CTS	Theft Deterrent Module	√	√	√	√		
2015	Cadillac	CTS	Instrument Cluster	√	√	√	√	√	0247
2015	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0129 0007
2015	Cadillac	CTS	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	0195
2015	Cadillac	CTS	Steering Column Lock Control Module	√	√	√	√		
2015	Cadillac	CTS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Cadillac	CTS	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2015	Cadillac	CTS	Long Range Radar Sensor Module	√	√	√	√		0260
2015	Cadillac	CTS	Left Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	CTS	Right Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	CTS	Rear Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	CTS	Active Safety Control Module	√	√	√	√	√	
2015	Cadillac	CTS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	Cadillac	CTS	Left Side Object Detection Control Module	√	√	√	√	√	
2015	Cadillac	CTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2015	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√		0170
2015	Cadillac	CTS	Right Side Object Detection Control Module	√	√	√	√	√	
2015	Cadillac	CTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Cadillac	CTS	Parking Brake Control Module	√	√	√	√	√	0229
2015	Cadillac	CTS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2015	Cadillac	CTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2015	Cadillac	CTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Cadillac	CTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2015	Cadillac	CTS	Trailer Interface Control Module	√	√	√	√	√	0247
2015	Cadillac	CTS	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2015	Cadillac	CTS	Passenger Presence Module	√	√	√	√		0057
2015	Cadillac	CTS	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2015	Cadillac	CTS	Keyless Entry Control Module	√	√	√	√	√	
2015	Cadillac	CTS	Navigation Control Module	√	√	√	√	√	
2015	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	0100 0099 07B0
2015	Cadillac	CTS	Radio	√	√	√	√	√	0226 0150
2015	Cadillac	CTS	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Cadillac	CTS	Amplifier	√	√	√	√		
2015	Cadillac	CTS	Liftgate Control Module	√	√	√	√		0146

2015	Cadillac	CTS	Seat Memory Control Module	√	√	√	√	√	
2015	Cadillac	CTS	Remote Control Door Lock Receiver	√	√	√	√	√	0110 0160 0159 079B
2015	Cadillac	CTS	Driver Door Switch Panel Control Module	√	√	√	√	√	
2015	Cadillac	CTS	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2015	Cadillac	CTS	Television Antenna Module	√	√	√	√	√	
2015	Cadillac	CTS	Auxiliary Body Control Module	√	√	√	√	√	0050
2015	Cadillac	ELR	Engine Control Module	√	√	√	√	√	0209 0132 0067 0086 0217 0176
2015	Cadillac	ELR	Transmission Control Module	√	√	√	√	√	
2015	Cadillac	ELR	Electronic Brake Control Module	√	√	√	√	√	0263 0371 0111
2015	Cadillac	ELR	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2015	Cadillac	ELR	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0222 0160 0233 0150
2015	Cadillac	ELR	Instrument Cluster	√	√	√	√	√	0247
2015	Cadillac	ELR	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Cadillac	ELR	Radio/HVAC Controls	√	√	√	√	√	
2015	Cadillac	ELR	Electric A/C Compressor Control Module	√					
2015	Cadillac	ELR	Battery Energy Control Module	√			√		
2015	Cadillac	ELR	Coolant Heater Control Module	√	√	√			
2015	Cadillac	ELR	Battery Charger Control Module	√			√		
2015	Cadillac	ELR	Hybrid Powertrain Control Module 2	√	√	√	√	√	0124 0125 0056 0218 0122 0123 0127
2015	Cadillac	ELR	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Cadillac	ELR	Headlamp Control Module	√	√	√	√	√	0195
2015	Cadillac	ELR	Steering Column Lock Control Module	√	√	√	√		
2015	Cadillac	ELR	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Cadillac	ELR	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2015	Cadillac	ELR	Left Side Object Detection Control Module	√	√	√		√	
2015	Cadillac	ELR	Parking Assist Control Module	√	√	√	√	√	0247
2015	Cadillac	ELR	Right Side Object Detection Control Module	√	√	√		√	
2015	Cadillac	ELR	Distance Sensing Cruise Control Module	√	√	√	√		0047
2015	Cadillac	ELR	Passenger Presence Module	√	√	√	√		0057
2015	Cadillac	ELR	Keyless Entry Control Module	√	√	√	√	√	
2015	Cadillac	ELR	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Cadillac	ELR	Amplifier	√	√	√	√		
2015	Cadillac	ELR	Radio	√	√	√	√	√	0226 0150
2015	Cadillac	ELR	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2015	Cadillac	ELR	Parking Brake Control Module	√	√	√	√	√	0229
2015	Cadillac	ELR	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2015	Cadillac	ELR	Hybrid Powertrain Control Module	√	√	√	√	√	

2015	Cadillac	ELR	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Cadillac	ELR	Drive Motor Control Module 1	√	√	√	√		
2015	Cadillac	ELR	Drive Motor Control Module 2	√	√	√	√		
2015	Cadillac	ELR	Auxiliary Transmission Fluid Pump	√	√	√	√		
2015	Cadillac	ELR	Suspension Control Module	√	√	√	√	√	
2015	Cadillac	ELR	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Cadillac	ELR	Power Steering Control Module	√	√	√	√		0081 0080 0089
2015	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2015	Cadillac	Escalade	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2015	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2015	Cadillac	Escalade	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0000 0150 0000 0150
2015	Cadillac	Escalade	Instrument Cluster	√	√	√	√	√	0247
2015	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Cadillac	Escalade	Radio/HVAC Controls	√	√	√	√	√	
2015	Cadillac	Escalade	Hybrid Powertrain Control Module	√	√	√	√	√	
2015	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	0037
2015	Cadillac	Escalade	Drive Motor Control Module 1	√			√		
2015	Cadillac	Escalade	Drive Motor Control Module 2	√			√		
2015	Cadillac	Escalade	Auxiliary Transmission Fluid Pump	√	√	√	√		
2015	Cadillac	Escalade	Battery Energy Control Module	√			√		
2015	Cadillac	Escalade	Parking Assist Control Module	√	√	√	√	√	0247 0271
2015	Cadillac	Escalade	Left Side Object Detection Control Module	√	√	√		√	
2015	Cadillac	Escalade	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	Cadillac	Escalade	Passenger Presence Module	√	√	√	√	√	0057
2015	Cadillac	Escalade	Keyless Entry Control Module	√	√	√	√	√	
2015	Cadillac	Escalade	Power Steering Control Module	√	√	√	√	√	0150
2015	Cadillac	Escalade	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2015	Cadillac	Escalade	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Cadillac	Escalade	Suspension Control Module	√	√	√	√	√	0245
2015	Cadillac	Escalade	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Cadillac	Escalade	Steering Column Lock Control Module	√	√	√	√		
2015	Cadillac	Escalade	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	Cadillac	Escalade	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Cadillac	Escalade	Liftgate Control Module	√	√	√	√	√	0146 0169

2015	Cadillac	Escalade	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2015	Cadillac	Escalade	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2015	Cadillac	Escalade	Long Range Radar Sensor Module	√	√	√	√		0260
2015	Cadillac	Escalade	Amplifier	√	√	√	√		
2015	Cadillac	Escalade	Radio	√	√	√	√	√	0226 0150
2015	Cadillac	Escalade	Media Disc Player	√	√	√	√	√	
2015	Cadillac	Escalade	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Cadillac	Escalade	Assist Step Control Module	√	√	√	√	√	
2015	Cadillac	Escalade	Parking Brake Control Module	√	√	√	√	√	0229
2015	Cadillac	Escalade	Left Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	Escalade	Right Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	Escalade	Right Rear Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	Escalade	Left Rear Radar Short Range Sensor Module	√	√	√			
2015	Cadillac	Escalade	Active Safety Control Module	√	√	√	√	√	
2015	Cadillac	Escalade	Video Processing Control Module	√	√	√	√	√	
2015	Cadillac	Escalade	Seat Memory Control Module - Passenger	√	√	√	√	√	
2015	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2015	Cadillac	Escalade ESV	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2015	Cadillac	Escalade ESV	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2015	Cadillac	Escalade ESV	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0000 0150
2015	Cadillac	Escalade ESV	Instrument Cluster	√	√	√	√	√	0247
2015	Cadillac	Escalade ESV	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Cadillac	Escalade ESV	Radio/HVAC Controls	√	√	√	√	√	
2015	Cadillac	Escalade ESV	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2015	Cadillac	Escalade ESV	Power Steering Control Module	√	√	√	√	√	0150
2015	Cadillac	Escalade ESV	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Cadillac	Escalade ESV	Suspension Control Module	√	√	√	√	√	0245
2015	Cadillac	Escalade ESV	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Cadillac	Escalade ESV	Passenger Presence Module	√	√	√	√	√	0057
2015	Cadillac	Escalade ESV	Keyless Entry Control Module	√	√	√	√	√	
2015	Cadillac	Escalade ESV	Transfer Case Control Module	√	√	√	√	√	0037
2015	Cadillac	Escalade ESV	Steering Column Lock Control Module	√	√	√	√		
2015	Cadillac	Escalade ESV	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	Cadillac	Escalade ESV	Left Side Object Detection Control Module	√	√	√		√	

2015	Cadillac	Escalade ESV	Parking Assist Control Module	√	√	√	√	√	0247 0271
2015	Cadillac	Escalade ESV	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Cadillac	Escalade ESV	Liftgate Control Module	√	√	√	√	√	0146 0169
2015	Cadillac	Escalade ESV	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2015	Cadillac	Escalade ESV	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2015	Cadillac	Escalade ESV	Long Range Radar Sensor Module	√	√	√	√		0260
2015	Cadillac	Escalade ESV	Amplifier	√	√	√	√		
2015	Cadillac	Escalade ESV	Radio	√	√	√	√	√	0226 0150
2015	Cadillac	Escalade ESV	Media Disc Player	√	√	√	√	√	
2015	Cadillac	Escalade ESV	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Cadillac	Escalade ESV	Assist Step Control Module	√	√	√	√	√	
2015	Cadillac	Escalade ESV	Parking Brake Control Module	√	√	√	√	√	0229
2015	Cadillac	Escalade ESV	Left Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	Escalade ESV	Left Rear Radar Short Range Sensor Module	√	√	√			
2015	Cadillac	Escalade ESV	Right Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	Escalade ESV	Right Rear Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	Escalade ESV	Active Safety Control Module	√	√	√	√	√	
2015	Cadillac	Escalade ESV	Video Processing Control Module	√	√	√	√	√	
2015	Cadillac	Escalade ESV	Seat Memory Control Module - Passenger	√	√	√	√	√	
2015	Cadillac	SRX	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2015	Cadillac	SRX	Transmission Control Module	√	√	√	√	√	0016
2015	Cadillac	SRX	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2015	Cadillac	SRX	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2015	Cadillac	SRX	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0160 0033 0150
2015	Cadillac	SRX	Instrument Cluster	√	√	√	√	√	0247
2015	Cadillac	SRX	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Cadillac	SRX	Radio/HVAC Controls	√	√	√	√	√	
2015	Cadillac	SRX	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Cadillac	SRX	Liftgate Control Module	√	√	√	√		0146
2015	Cadillac	SRX	Steering Column Lock Control Module	√	√	√	√		
2015	Cadillac	SRX	Headlamp Control Module	√	√	√	√	√	0195
2015	Cadillac	SRX	Rear Differential Clutch Control Module	√	√	√	√	√	
2015	Cadillac	SRX	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2015	Cadillac	SRX	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Cadillac	SRX	Suspension Control Module	√	√	√	√	√	
2015	Cadillac	SRX	Trailer Interface Control Module	√	√	√	√	√	0247
2015	Cadillac	SRX	Amplifier	√	√	√	√		

2015	Cadillac	SRX	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Cadillac	SRX	Media Disc Player	√	√	√	√	√	
2015	Cadillac	SRX	Rear Audio Control Module	√	√	√	√	√	
2015	Cadillac	SRX	Radio	√	√	√	√	√	0226 0150
2015	Cadillac	SRX	Navigation Control Module	√	√	√	√	√	
2015	Cadillac	SRX	Long Range Radar Sensor Module	√	√	√	√		0260
2015	Cadillac	SRX	Left Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	SRX	Right Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	SRX	Rear Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	SRX	Active Safety Control Module	√	√	√	√	√	
2015	Cadillac	SRX	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	Cadillac	SRX	Left Side Object Detection Control Module	√	√	√		√	
2015	Cadillac	SRX	Parking Assist Control Module	√	√	√	√	√	0247
2015	Cadillac	SRX	Rear Seat Heating Control Module	√	√	√	√	√	
2015	Cadillac	SRX	Right Side Object Detection Control Module	√	√	√		√	
2015	Cadillac	SRX	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Cadillac	SRX	Passenger Presence Module	√	√	√	√		0057
2015	Cadillac	SRX	Keyless Entry Control Module	√	√	√	√	√	
2015	Cadillac	SRX	Parking Brake Control Module	√	√	√	√	√	0229
2015	Cadillac	XTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2015	Cadillac	XTS	Transmission Control Module	√	√	√	√	√	0016
2015	Cadillac	XTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2015	Cadillac	XTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2015	Cadillac	XTS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0150 0232 0150
2015	Cadillac	XTS	Instrument Cluster	√	√	√	√	√	0247
2015	Cadillac	XTS	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Cadillac	XTS	Radio/HVAC Controls	√	√	√	√	√	
2015	Cadillac	XTS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Cadillac	XTS	Headlamp Control Module	√	√	√	√	√	0195
2015	Cadillac	XTS	Rear Differential Clutch Control Module	√	√	√	√	√	
2015	Cadillac	XTS	Active Safety Control Module	√	√	√	√	√	
2015	Cadillac	XTS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	Cadillac	XTS	Left Side Object Detection Control Module	√	√	√		√	
2015	Cadillac	XTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2015	Cadillac	XTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Cadillac	XTS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2015	Cadillac	XTS	Right Side Object Detection Control Module	√	√	√		√	
2015	Cadillac	XTS	Parking Brake Control Module	√	√	√	√	√	0229



2015	Cadillac	XTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2015	Cadillac	XTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Cadillac	XTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2015	Cadillac	XTS	Passenger Presence Module	√	√	√	√		0057
2015	Cadillac	XTS	Keyless Entry Control Module	√	√	√	√	√	
2015	Cadillac	XTS	Left Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	XTS	Long Range Radar Sensor Module	√	√	√	√		0260
2015	Cadillac	XTS	Rear Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	XTS	Right Front Short Range Radar Sensor Module	√	√	√			
2015	Cadillac	XTS	Chassis Control Module	√	√	√	√	√	0217
2015	Cadillac	XTS	Power Steering Control Module	√	√	√	√	√	0089
2015	Cadillac	XTS	Radio	√	√	√	√	√	0226 0150
2015	Cadillac	XTS	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Cadillac	XTS	Amplifier	√	√	√	√		
2015	Cadillac	XTS	Media Disc Player	√	√	√	√	√	
2015	Chevrolet	Aveo	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006 0144 0258 0139 0133 0210 0383 0098 0096 0094 0216 0130 0143 0265 0147 0237 0045 0393 0043 0135 0128 0173 0069 0087 079C
2015	Chevrolet	Aveo	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Chevrolet	Aveo	Electronic Brake Control Module	√	√	√	√	√	0090
2015	Chevrolet	Aveo	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Chevrolet	Aveo	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0160 0333 0150
2015	Chevrolet	Aveo	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	Aveo	HVAC Control Module	√	√	√	√	√	
2015	Chevrolet	Aveo	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Chevrolet	Aveo	Keyless Entry Control Module				√		
2015	Chevrolet	Aveo	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Chevrolet	Aveo	Parking Assist Control Module	√	√	√	√	√	0247
2015	Chevrolet	Aveo	Power Steering Control Module	√	√	√	√		0207
2015	Chevrolet	Aveo	Fuel Injector Control Module	√			√	√	
2015	Chevrolet	Aveo	Front Seat Heating Control Module	√	√	√	√	√	
2015	Chevrolet	Aveo	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Chevrolet	Aveo	Radio	√	√	√	√	√	

2015	Chevrolet	Beat	Engine Control Module	√	√	√	√	√	0133 0210 0098 0094 0216 0265 0237 0086 0393 0173 0069 0087 0209 0156 0147 0217
2015	Chevrolet	Beat	Transmission Control Module	√	√	√	√	√	
2015	Chevrolet	Beat	Electronic Brake Control Module	√	√	√	√	√	0090
2015	Chevrolet	Beat	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2015	Chevrolet	Beat	Instrument Cluster	√	√	√	√	√	
2015	Chevrolet	Beat	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Chevrolet	Beat	Fuel Injector Control Module	√	√	√	√	√	
2015	Chevrolet	Beat	Power Steering Control Module	√	√	√	√		0089
2015	Chevrolet	Beat	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2015	Chevrolet	Beat	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Chevrolet	Beat	Keyless Entry Control Module				√		
2015	Chevrolet	Beat	Radio	√	√	√	√	√	
2015	Chevrolet	Camaro	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0006
2015	Chevrolet	Camaro	Transmission Control Module	√	√	√	√	√	0016
2015	Chevrolet	Camaro	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2015	Chevrolet	Camaro	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2015	Chevrolet	Camaro	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0033 0150
2015	Chevrolet	Camaro	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	Camaro	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Chevrolet	Camaro	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	Chevrolet	Camaro	Headlamp Control Module	√	√	√	√	√	0195
2015	Chevrolet	Camaro	Mobile Telephone Control Module	√	√	√	√	√	0247
2015	Chevrolet	Camaro	Head-Up Display Module	√	√	√	√	√	
2015	Chevrolet	Camaro	Folding Top Control Module	√	√	√	√	√	
2015	Chevrolet	Camaro	Front Seat Heating Control Module	√	√	√	√	√	
2015	Chevrolet	Camaro	Parking Assist Control Module	√	√	√	√	√	0247
2015	Chevrolet	Camaro	Passenger Presence Module	√	√	√	√		0057
2015	Chevrolet	Camaro	Radio	√	√	√	√	√	
2015	Chevrolet	Camaro	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Chevrolet	Camaro	Power Steering Control Module	√	√	√	√		0089
2015	Chevrolet	Camaro	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Chevrolet	Camaro	Suspension Control Module	√	√	√	√	√	0245
2015	Chevrolet	Camaro	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2015	Chevrolet	Camaro	Parking Brake Control Module	√	√	√	√	√	0229
2015	Chevrolet	Camaro	Auxiliary Gauge Module	√	√	√	√	√	

2015	Chevrolet	Caprice	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2015	Chevrolet	Caprice	Transmission Control Module	√	√	√	√	√	0016
2015	Chevrolet	Caprice	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2015	Chevrolet	Caprice	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Chevrolet	Caprice	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0158 0222 0158
2015	Chevrolet	Caprice	Instrument Cluster	√	√	√	√	√	0247 0145
2015	Chevrolet	Caprice	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Chevrolet	Caprice	HVAC Controls	√	√	√	√	√	
2015	Chevrolet	Caprice	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Chevrolet	Caprice	Headlamp Control Module	√	√	√	√	√	0195
2015	Chevrolet	Caprice	Suspension Control Module	√	√	√	√	√	0245
2015	Chevrolet	Caprice	Trailer Interface Control Module	√	√	√	√	√	0247
2015	Chevrolet	Caprice	Fuel Injector Control Module	√	√	√	√	√	
2015	Chevrolet	Caprice	Head-Up Display Module	√	√	√	√	√	
2015	Chevrolet	Caprice	Passenger Presence Module	√	√	√	√	√	0057
2015	Chevrolet	Caprice	Power Steering Control Module	√	√	√	√	√	0081
2015	Chevrolet	Caprice	Parking Assist Control Module	√	√	√	√	√	0247
2015	Chevrolet	Caprice	Steering Wheel Angle Sensor Module	√	√	√	√	√	0093 0090
2015	Chevrolet	Caprice	Frontview Camera Module	√	√	√	√	√	0205 0049
2015	Chevrolet	Caprice	Parking Brake Control Module	√	√	√	√	√	0229
2015	Chevrolet	Caprice	Left Side Object Detection Control Module	√	√	√	√	√	
2015	Chevrolet	Caprice	Right Side Object Detection Control Module	√	√	√	√	√	
2015	Chevrolet	Caprice	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Chevrolet	Caprice	Radio Controls	√	√	√	√	√	0247
2015	Chevrolet	Caprice	Radio	√	√	√	√	√	
2015	Chevrolet	Caprice	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Chevrolet	Captiva	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0156 0086 0217 0213 0098 0216 0224 0449 0130 0143 0450 0265 0147 0108 0452 0237 0044 0045 0043 0135 0453 0454 0455 0456 0006 0131 0258 0212
2015	Chevrolet	Captiva	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Chevrolet	Captiva	Electronic Brake Control Module	√	√	√	√	√	0090 0111
2015	Chevrolet	Captiva	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2015	Chevrolet	Captiva	Body Control Module	√	√	√	√	√	0242 0263 0261
2015	Chevrolet	Captiva	Theft Deterrent Module	√	√	√	√	√	

2015	Chevrolet	Captiva	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√		
2015	Chevrolet	Captiva	Instrument Cluster	√	√	√	√	√	
2015	Chevrolet	Captiva	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Chevrolet	Captiva	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Chevrolet	Captiva	Digital Radio Receiver Control Module	√	√	√	√	√	
2015	Chevrolet	Captiva	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2015	Chevrolet	Captiva	Front Seat Heating Control Module	√	√	√	√		
2015	Chevrolet	Captiva	Parking Assist Control Module	√	√	√	√	√	
2015	Chevrolet	Captiva	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160 079B 0233 0110
2015	Chevrolet	Captiva	Passenger Presence Module	√	√	√	√		0057
2015	Chevrolet	Captiva	Radio	√	√	√	√	√	
2015	Chevrolet	Captiva	Parking Brake Control Module	√	√	√	√	√	0229
2015	Chevrolet	Captiva	Variable Power Steering Control Module					√	
2015	Chevrolet	Captiva	Mobile Telephone Control Module	√	√	√	√	√	
2015	Chevrolet	Captiva	Headlamp Control Module	√	√	√	√	√	0195 0065
2015	Chevrolet	Captiva	Chassis Control Module	√	√	√	√	√	0217
2015	Chevrolet	Captiva	Auxiliary Body Control Module	√	√	√	√	√	0050
2015	Chevrolet	Cheyenne	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2015	Chevrolet	Cheyenne	Transmission Control Module	√	√	√	√	√	0016
2015	Chevrolet	Cheyenne	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2015	Chevrolet	Cheyenne	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Chevrolet	Cheyenne	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0156 0233 0158
2015	Chevrolet	Cheyenne	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	Cheyenne	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Chevrolet	Cheyenne	HVAC Controls	√	√	√	√	√	
2015	Chevrolet	Cheyenne	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Chevrolet	Cheyenne	Passenger Presence Module	√	√	√	√	√	0057
2015	Chevrolet	Cheyenne	Power Steering Control Module	√	√	√	√	√	0150
2015	Chevrolet	Cheyenne	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2015	Chevrolet	Cheyenne	Suspension Control Module	√	√	√	√	√	0245
2015	Chevrolet	Cheyenne	Fuel Injector Control Module	√	√	√	√	√	
2015	Chevrolet	Cheyenne	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Chevrolet	Cheyenne	Transfer Case Control Module	√	√	√	√	√	0037
2015	Chevrolet	Cheyenne	Amplifier	√	√	√	√		

2015	Chevrolet	Cheyenne	Radio Controls	√	√	√	√		0241
2015	Chevrolet	Cheyenne	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Chevrolet	Cheyenne	Radio	√	√	√	√	√	0226 0150
2015	Chevrolet	Cheyenne	Media Disc Player	√	√	√	√	√	
2015	Chevrolet	Cheyenne	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2015	Chevrolet	Cheyenne	Parking Assist Control Module	√	√	√	√	√	0247 0271
2015	Chevrolet	Cheyenne	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Chevrolet	City Express	Engine Control Module	√	√	√	√	√	0217 0067 0140
2015	Chevrolet	City Express	Transmission Control Module	√	√	√	√		0276 0036
2015	Chevrolet	City Express	Electronic Brake Control Module	√	√	√	√	√	0090 0111
2015	Chevrolet	City Express	Inflatable Restraint Sensing and Diagnostic Module		√	√			
2015	Chevrolet	City Express	Body Control Module	√	√	√	√	√	0041
2015	Chevrolet	City Express	Instrument Cluster		√	√	√		
2015	Chevrolet	City Express	Passenger Presence Module						0057
2015	Chevrolet	City Express	Radio	√	√	√	√		
2015	Chevrolet	City Express	Power Steering Control Module	√	√	√	√		
2015	Chevrolet	City Express	Tire Pressure Indicator Module	√	√	√	√	√	0160
2015	Chevrolet	City Express	Underhood Fuse Block	√	√	√	√	√	
2015	Chevrolet	Cobalt	Engine Control Module	√	√	√	√	√	0133 0156 0210 0383 0098 0096 0094 0216 0130 0143 0265 0147 0237 0045 0086 0393 0043 0135 0128 0173 0209 0132 0067 0263 0217 0129
2015	Chevrolet	Cobalt	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Chevrolet	Cobalt	Electronic Brake Control Module	√	√	√	√	√	0090
2015	Chevrolet	Cobalt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2015	Chevrolet	Cobalt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0160 0333 0150
2015	Chevrolet	Cobalt	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	Cobalt	HVAC Control Module	√	√	√	√	√	
2015	Chevrolet	Cobalt	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Chevrolet	Cobalt	Front Seat Heating Control Module	√	√	√	√	√	
2015	Chevrolet	Cobalt	Parking Assist Control Module	√	√	√	√	√	0247
2015	Chevrolet	Cobalt	Radio	√	√	√	√	√	
2015	Chevrolet	Cobalt	Steering Wheel Angle Sensor Module	√	√	√			0093 0090

2015	Chevrolet	Colorado	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0147 0086 0217 0258 0212 0210 0224 0130 0222 0060 0044 0045 0097 0084 0043 0172 0134 0111 0758
2015	Chevrolet	Colorado	Transmission Control Module	√	√	√	√	√	0016
2015	Chevrolet	Colorado	Electronic Brake Control Module	√	√	√	√	√	0090 0112 0225 0111
2015	Chevrolet	Colorado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2015	Chevrolet	Colorado	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0093 0150 0006 0131
2015	Chevrolet	Colorado	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	Colorado	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Chevrolet	Colorado	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Chevrolet	Colorado	Passenger Presence Module	√	√	√	√	√	0057
2015	Chevrolet	Colorado	Power Steering Control Module	√	√	√	√	√	0093 0090
2015	Chevrolet	Colorado	Transfer Case Control Module	√	√	√	√	√	0037
2015	Chevrolet	Colorado	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Chevrolet	Colorado	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2015	Chevrolet	Colorado	Radio	√	√	√	√	√	0226 0150
2015	Chevrolet	Colorado	Amplifier	√	√	√	√	√	
2015	Chevrolet	Colorado	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Chevrolet	Colorado	Parking Assist Control Module	√	√	√	√	√	0247
2015	Chevrolet	Colorado	Multi-Axis Acceleration Sensor Module	√	√	√	√	√	0112 0111
2015	Chevrolet	Colorado	Steering Wheel Angle Sensor Module	√	√	√	√	√	0093 0090
2015	Chevrolet	Corvette	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2015	Chevrolet	Corvette	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2015	Chevrolet	Corvette	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2015	Chevrolet	Corvette	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Chevrolet	Corvette	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0093 0150 0006 0131
2015	Chevrolet	Corvette	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	Corvette	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Chevrolet	Corvette	Radio/HVAC Controls	√	√	√	√	√	
2015	Chevrolet	Corvette	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010

2015	Chevrolet	Corvette	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Chevrolet	Corvette	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2015	Chevrolet	Corvette	Vehicle Performance Data Recorder	√	√	√	√		
2015	Chevrolet	Corvette	Steering Column Lock Control Module	√	√	√	√		
2015	Chevrolet	Corvette	Folding Top Control Module	√	√	√	√	√	
2015	Chevrolet	Corvette	Inside Rearview Mirror	√	√	√	√	√	
2015	Chevrolet	Corvette	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Chevrolet	Corvette	Seat Memory Control Module - Passenger	√	√	√	√	√	
2015	Chevrolet	Corvette	Keyless Entry Control Module	√	√	√	√	√	
2015	Chevrolet	Corvette	Passenger Presence Module	√	√	√	√	√	0057
2015	Chevrolet	Corvette	Amplifier	√	√	√	√		
2015	Chevrolet	Corvette	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Chevrolet	Corvette	Radio	√	√	√	√	√	0226 0150
2015	Chevrolet	Corvette	Parking Brake Control Module	√	√	√	√	√	0229
2015	Chevrolet	Corvette	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2015	Chevrolet	Corvette	Suspension Control Module	√	√	√	√	√	0245
2015	Chevrolet	Corvette	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Chevrolet	Cruze	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006 0144 0258 0139 0210 0222 0224 0130 0147 0060 0044 0045 0097 0068 0084 0075 0074 0073 0117 0119 0043 0173 0128 0098 0216 0449 0143 0450 0265 0108 0452 0237 0135 0453 0454 0455 0456 0219 0072 0070 0071 0118 0120 0472 0178
2015	Chevrolet	Cruze	Transmission Control Module	√	√	√	√	√	0017 0036 0020 0084
2015	Chevrolet	Cruze	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2015	Chevrolet	Cruze	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2015	Chevrolet	Cruze	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2015	Chevrolet	Cruze	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	Cruze	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Chevrolet	Cruze	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	Chevrolet	Cruze	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2015	Chevrolet	Cruze	Steering Column Lock Control Module	√	√	√	√	√	
2015	Chevrolet	Cruze	Front Seat Heating Control Module	√	√	√	√	√	

2015	Chevrolet	Cruze	Left Side Object Detection Control Module	√	√	√		√	
2015	Chevrolet	Cruze	Parking Assist Control Module	√	√	√	√	√	0247
2015	Chevrolet	Cruze	Right Side Object Detection Control Module	√	√	√		√	
2015	Chevrolet	Cruze	Passenger Presence Module	√	√	√	√		0057
2015	Chevrolet	Cruze	Keyless Entry Control Module	√	√	√	√	√	
2015	Chevrolet	Cruze	Fuel Injector Control Module	√			√	√	
2015	Chevrolet	Cruze	Trailer Interface Control Module	√	√	√	√	√	0247
2015	Chevrolet	Cruze	Mobile Telephone Control Module	√	√	√	√	√	0247
2015	Chevrolet	Cruze	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2015	Chevrolet	Cruze	Power Steering Control Module	√	√	√	√		0081 0080 0089
2015	Chevrolet	Cruze	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2015	Chevrolet	Cruze	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Chevrolet	Cruze	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Chevrolet	Cruze	Radio	√	√	√	√	√	
2015	Chevrolet	Cruze	Multimedia Player Interface Module	√	√	√	√		0247
2015	Chevrolet	Enjoy	Engine Control Module	√	√	√	√	√	0210 0173 0066 0060 0086 0084 0209 0156
2015	Chevrolet	Enjoy	Electronic Brake Control Module	√	√	√	√	√	
2015	Chevrolet	Enjoy	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√		0172
2015	Chevrolet	Enjoy	Instrument Cluster		√	√			
2015	Chevrolet	Equinox	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2015	Chevrolet	Equinox	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2015	Chevrolet	Equinox	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2015	Chevrolet	Equinox	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2015	Chevrolet	Equinox	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2015	Chevrolet	Equinox	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	Equinox	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Chevrolet	Equinox	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Chevrolet	Equinox	Liftgate Control Module	√	√	√	√		0146
2015	Chevrolet	Equinox	Rear Differential Clutch Control Module	√	√	√	√		0155
2015	Chevrolet	Equinox	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2015	Chevrolet	Equinox	Power Steering Control Module	√	√	√	√		0081 0080 0089
2015	Chevrolet	Equinox	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Chevrolet	Equinox	Radio	√	√	√	√	√	
2015	Chevrolet	Equinox	Passenger Presence Module	√	√	√	√		0057
2015	Chevrolet	Equinox	Front Seat Heating Control Module	√	√	√	√	√	
2015	Chevrolet	Equinox	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	Chevrolet	Equinox	Left Side Object Detection Control Module	√	√	√		√	
2015	Chevrolet	Equinox	Parking Assist Control Module	√	√	√	√	√	0247
2015	Chevrolet	Equinox	Right Side Object Detection Control Module	√	√	√		√	



2015	Chevrolet	Equinox	Seat Memory Control Module	√	√	√	√	√	0310
2015	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0258 0237 0210 0115 0058 0042 0044 0088 0219 0073 0072 0070 0071 0117 0118 0119 0120 0240 0178 0180 0182 0184 0186 0188 0190 0192 0138 0137 0179 0181 0183 0185 0187
2015	Chevrolet	Express	Transmission Control Module	√	√	√	√	√	0016
2015	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0225 0111
2015	Chevrolet	Express	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√		0172 0261
2015	Chevrolet	Express	Body Control Module	√	√	√	√	√	0263 0261
2015	Chevrolet	Express	Theft Deterrent Module	√	√	√	√		
2015	Chevrolet	Express	Instrument Cluster	√	√	√	√	√	
2015	Chevrolet	Express	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	Chevrolet	Express	Digital Radio Receiver Control Module	√	√	√	√	√	
2015	Chevrolet	Express	Auxiliary Heater Control Module	√	√	√	√	√	
2015	Chevrolet	Express	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2015	Chevrolet	Express	Parking Assist Control Module	√	√	√	√	√	0247
2015	Chevrolet	Express	Rollover Sensor Module	√	√	√	√		0172
2015	Chevrolet	Express	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2015	Chevrolet	Express	Radio	√	√	√	√	√	
2015	Chevrolet	Express	Fuel Injector Control Module		√	√			
2015	Chevrolet	Express	Chime Alarm Control Module	√	√	√		√	
2015	Chevrolet	Impala	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2015	Chevrolet	Impala	Transmission Control Module	√	√	√	√	√	0016 0017 0036
2015	Chevrolet	Impala	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2015	Chevrolet	Impala	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261 0134 0111
2015	Chevrolet	Impala	Body Control Module	√	√	√	√	√	0263 0261 0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0203 0201 0208 0206 0083 0160 0233 0150
2015	Chevrolet	Impala	Theft Deterrent Module	√	√	√	√		
2015	Chevrolet	Impala	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	Impala	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Chevrolet	Impala	HVAC Controls	√	√	√	√	√	

2015	Chevrolet	Impala	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	Chevrolet	Impala	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Chevrolet	Impala	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	Chevrolet	Impala	Left Side Object Detection Control Module	√	√	√		√	
2015	Chevrolet	Impala	Parking Assist Control Module	√	√	√	√	√	0247 0271
2015	Chevrolet	Impala	Right Side Object Detection Control Module	√	√	√		√	
2015	Chevrolet	Impala	Seat Memory Control Module	√	√	√	√	√	0310
2015	Chevrolet	Impala	Passenger Presence Module	√	√	√	√		0057
2015	Chevrolet	Impala	Keyless Entry Control Module	√	√	√	√	√	
2015	Chevrolet	Impala	Amplifier	√	√	√	√		
2015	Chevrolet	Impala	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Chevrolet	Impala	Radio Controls	√	√	√	√		0241
2015	Chevrolet	Impala	Radio	√	√	√	√	√	0226 0150
2015	Chevrolet	Impala	Distance Sensing Cruise Control Module	√	√	√	√		0047
2015	Chevrolet	Impala	Parking Brake Control Module	√	√	√	√	√	0229
2015	Chevrolet	Impala	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Chevrolet	Impala	Power Steering Control Module	√	√	√	√		0081 0080 0089
2015	Chevrolet	Impala	Digital Radio Receiver Control Module	√	√	√	√	√	
2015	Chevrolet	Impala	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2015	Chevrolet	Impala	Front Seat Heating Control Module	√	√	√	√		
2015	Chevrolet	Lacetti	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2015	Chevrolet	Lacetti	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Chevrolet	Lacetti	Electronic Brake Control Module	√	√	√	√	√	
2015	Chevrolet	Lacetti	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2015	Chevrolet	Lacetti	Variable Power Steering Control Module				√	√	
2015	Chevrolet	Lacetti	Fuel Injector Control Module	√	√	√	√	√	
2015	Chevrolet	Malibu	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139 0133 0484 0130 0265 0210 0237 0094 0060 0141 0066 0258 0213 0212 0020 076D 0006 0144 0383 0098 0096 0216 0143 0147 0045 0393 0043 0135 0128
2015	Chevrolet	Malibu	Transmission Control Module	√	√	√	√	√	0017 0036 0016 0020
2015	Chevrolet	Malibu	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2015	Chevrolet	Malibu	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Chevrolet	Malibu	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0032 0150

2015	Chevrolet	Malibu	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	Malibu	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Chevrolet	Malibu	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Chevrolet	Malibu	Steering Column Lock Control Module	√	√	√	√		
2015	Chevrolet	Malibu	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Chevrolet	Malibu	Front Seat Heating Control Module	√	√	√	√	√	
2015	Chevrolet	Malibu	Left Side Object Detection Control Module	√	√	√		√	
2015	Chevrolet	Malibu	Parking Assist Control Module	√	√	√	√	√	0247
2015	Chevrolet	Malibu	Seat Memory Control Module	√	√	√	√	√	0310
2015	Chevrolet	Malibu	Keyless Entry Control Module	√	√	√	√	√	
2015	Chevrolet	Malibu	Passenger Presence Module	√	√	√	√		0057
2015	Chevrolet	Malibu	Radio	√	√	√	√	√	
2015	Chevrolet	Malibu	Frontview Camera Module	√	√	√	√	√	0205 0196 075A 0049
2015	Chevrolet	Malibu	Parking Brake Control Module	√	√	√	√	√	0229
2015	Chevrolet	Malibu	Rear Seat Heating Control Module	√	√	√	√	√	
2015	Chevrolet	Malibu	Rear Differential Clutch Control Module	√	√	√	√	√	
2015	Chevrolet	Malibu	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2015	Chevrolet	Malibu	Mobile Telephone Control Module	√	√	√	√	√	0247
2015	Chevrolet	Malibu	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2015	Chevrolet	Malibu	Headlamp Control Module	√	√	√	√	√	0195
2015	Chevrolet	Malibu	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Chevrolet	Malibu	Fuel Injector Control Module	√	√	√	√	√	
2015	Chevrolet	Malibu	Multimedia Player Interface Module	√	√	√	√		0247
2015	Chevrolet	Malibu	Suspension Control Module	√	√	√	√	√	
2015	Chevrolet	Matiz	Engine Control Module	√	√	√	√	√	0069 0087 079C
2015	Chevrolet	Matiz	Electronic Brake Control Module	√	√	√	√	√	
2015	Chevrolet	Matiz	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2015	Chevrolet	Matiz	Keyless Entry Control Module				√		
2015	Chevrolet	Max	Engine Control Module	√	√	√	√	√	0069 0087 079C
2015	Chevrolet	Max	Electronic Brake Control Module	√	√	√	√	√	
2015	Chevrolet	Max	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2015	Chevrolet	Move	Engine Control Module	√	√	√	√	√	0069 0087 079C
2015	Chevrolet	Move	Electronic Brake Control Module	√	√	√	√	√	
2015	Chevrolet	Move	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2015	Chevrolet	Onix	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139
2015	Chevrolet	Onix	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Chevrolet	Onix	Electronic Brake Control Module	√	√	√	√	√	0090
2015	Chevrolet	Onix	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2015	Chevrolet	Onix	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0156 0232 0158
2015	Chevrolet	Onix	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	Onix	Parking Assist Control Module	√	√	√	√	√	0247
2015	Chevrolet	Onix	Radio	√	√	√	√	√	
2015	Chevrolet	Onix	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Chevrolet	Optra	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2015	Chevrolet	Optra	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Chevrolet	Optra	Electronic Brake Control Module	√	√	√	√	√	
2015	Chevrolet	Optra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2015	Chevrolet	Optra	Body Control Module	√	√	√	√	√	
2015	Chevrolet	Optra	Instrument Cluster	√	√	√	√	√	
2015	Chevrolet	Orlando	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006 0144 0258 0139 0098 0216 0224 0449 0130 0143 0450 0265 0147 0108 0452 0237 0044 0045 0043 0135 0453 0454 0455 0456 0212
2015	Chevrolet	Orlando	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Chevrolet	Orlando	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2015	Chevrolet	Orlando	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2015	Chevrolet	Orlando	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2015	Chevrolet	Orlando	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	Orlando	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Chevrolet	Orlando	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Chevrolet	Orlando	Fuel Injector Control Module	√	√	√	√	√	
2015	Chevrolet	Orlando	Front Seat Heating Control Module	√	√	√	√	√	
2015	Chevrolet	Orlando	Parking Assist Control Module	√	√	√	√	√	0247
2015	Chevrolet	Orlando	Rear Seat Heating Control Module	√	√	√	√	√	
2015	Chevrolet	Orlando	Keyless Entry Control Module	√	√	√	√	√	
2015	Chevrolet	Orlando	Frontview Camera Module	√	√	√	√	√	0205 0049
2015	Chevrolet	Orlando	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2015	Chevrolet	Orlando	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Chevrolet	Orlando	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2015	Chevrolet	Orlando	Power Steering Control Module	√	√	√	√		0081 0080 0089
2015	Chevrolet	Orlando	Radio	√	√	√	√	√	
2015	Chevrolet	Orlando	Mobile Telephone Control Module	√	√	√	√	√	0247

2015	Chevrolet	Prisma	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139
2015	Chevrolet	Prisma	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Chevrolet	Prisma	Electronic Brake Control Module	√	√	√	√	√	0090
2015	Chevrolet	Prisma	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2015	Chevrolet	Prisma	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0150 0232 0150
2015	Chevrolet	Prisma	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	Prisma	Parking Assist Control Module	√	√	√	√	√	0247
2015	Chevrolet	Prisma	Radio	√	√	√	√	√	
2015	Chevrolet	Prisma	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Chevrolet	S10	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139 0147 0258 0210 0224 0130 0222 0060 0044 0045 0097 0084 0043 0172
2015	Chevrolet	S10	Transmission Control Module	√	√	√	√	√	0016
2015	Chevrolet	S10	Electronic Brake Control Module	√	√	√	√	√	0090 0112
2015	Chevrolet	S10	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2015	Chevrolet	S10	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0150 0232 0150
2015	Chevrolet	S10	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	S10	Trailer Interface Control Module	√	√	√	√	√	0247
2015	Chevrolet	S10	Parking Assist Control Module	√	√	√	√	√	0247
2015	Chevrolet	S10	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2015	Chevrolet	S10	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Chevrolet	S10	Transfer Case Control Module	√	√	√	√	√	0037
2015	Chevrolet	S10	Radio	√	√	√	√	√	
2015	Chevrolet	Sail	Engine Control Module	√	√	√	√	√	0087 0133 0210 0098 0096 0094 0216 0143 0265 0173 0209 0217
2015	Chevrolet	Sail	Transmission Control Module	√	√	√	√	√	0200 0157 0153 0136
2015	Chevrolet	Sail	Electronic Brake Control Module	√	√	√	√	√	0111
2015	Chevrolet	Sail	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0064 0040 0063 0039 0227 0172 0062 0038 0177 0261 0111
2015	Chevrolet	Sail	Body Control Module	√	√	√	√	√	0263
2015	Chevrolet	Sail	HVAC Control Module	√	√	√	√	√	0007 0129

2015	Chevrolet	Sail	Radio/HVAC Controls	√	√	√	√	√	0150
2015	Chevrolet	Sail	Keyless Entry Control Module						0204
2015	Chevrolet	Sail	Power Steering Control Module	√	√	√	√		0081 0089
2015	Chevrolet	Silverado	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131 0258 0139 0237 0210 0115 0058 0042 0044 0088 0219 0073 0072 0070 0071 0117 0118 0119 0120 0240 0178 0180 0182 0184 0186 0188 0190 0192 0138 0137 0179 0181 0183 0185 0187 0189 0191
2015	Chevrolet	Silverado	Transmission Control Module	√	√	√	√	√	0016 0019
2015	Chevrolet	Silverado	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2015	Chevrolet	Silverado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0150 0232 0150
2015	Chevrolet	Silverado	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	Silverado	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Chevrolet	Silverado	HVAC Controls	√	√	√	√	√	
2015	Chevrolet	Silverado	Power Steering Control Module	√	√	√	√	√	0150
2015	Chevrolet	Silverado	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2015	Chevrolet	Silverado	Suspension Control Module	√	√	√	√	√	0245
2015	Chevrolet	Silverado	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Chevrolet	Silverado	Transfer Case Control Module	√	√	√	√	√	0037
2015	Chevrolet	Silverado	Passenger Presence Module	√	√	√	√	√	0057
2015	Chevrolet	Silverado	Fuel Injector Control Module	√	√	√	√	√	
2015	Chevrolet	Silverado	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	Chevrolet	Silverado	Parking Assist Control Module	√	√	√	√	√	0247 0271
2015	Chevrolet	Silverado	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Chevrolet	Silverado	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	Chevrolet	Silverado	Distance Sensing Cruise Control Module	√	√	√	√		0047
2015	Chevrolet	Silverado	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2015	Chevrolet	Silverado	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 0009
2015	Chevrolet	Silverado	Radio	√	√	√	√	√	0226 0150
2015	Chevrolet	Silverado	Amplifier	√	√	√	√		
2015	Chevrolet	Silverado	Media Disc Player	√	√	√	√	√	

2015	Chevrolet	Silverado	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Chevrolet	Silverado	Radio Controls	√	√	√	√		0241
2015	Chevrolet	Sonic	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139 0133 0210 0383 0098 0096 0094 0216 0130 0143 0265 0147 0237 0045 0393 0043 0135 0128 0173 0020 0066 076D 0213 0006 0144
2015	Chevrolet	Sonic	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Chevrolet	Sonic	Electronic Brake Control Module	√	√	√	√	√	0090
2015	Chevrolet	Sonic	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Chevrolet	Sonic	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0000 0160 0000 0160
2015	Chevrolet	Sonic	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	Sonic	HVAC Control Module	√	√	√	√	√	
2015	Chevrolet	Sonic	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Chevrolet	Sonic	Passenger Presence Module	√	√	√	√	√	0057
2015	Chevrolet	Sonic	Radio	√	√	√	√	√	
2015	Chevrolet	Sonic	Parking Assist Control Module	√	√	√	√	√	0247
2015	Chevrolet	Sonic	Power Steering Control Module	√	√	√	√	√	0207
2015	Chevrolet	Sonic	Fuel Injector Control Module	√			√	√	
2015	Chevrolet	Sonic	Front Seat Heating Control Module	√	√	√	√	√	
2015	Chevrolet	Sonic	Frontview Camera Module	√	√	√	√	√	0205 0049
2015	Chevrolet	Sonic	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Chevrolet	Sonic	Chassis Control Module	√	√	√	√	√	0217
2015	Chevrolet	Spark	Engine Control Module	√	√	√	√	√	0069 0087 0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006 0144 0258 0000 0160 0000 0160
2015	Chevrolet	Spark	Transmission Control Module	√	√	√	√	√	0016 0017
2015	Chevrolet	Spark	Electronic Brake Control Module	√	√	√	√	√	0090
2015	Chevrolet	Spark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2015	Chevrolet	Spark	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2015	Chevrolet	Spark	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	Spark	Keyless Entry Control Module				√		
2015	Chevrolet	Spark	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	Chevrolet	Spark	Passenger Presence Module	√	√	√	√	√	0057
2015	Chevrolet	Spark	Fuel Injector Control Module	√	√	√	√	√	

2015	Chevrolet	Spark	Power Steering Control Module	√	√	√	√		0089
2015	Chevrolet	Spark	Radio	√	√	√	√	√	
2015	Chevrolet	Spark	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2015	Chevrolet	Spark	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Chevrolet	Spark	Tire Pressure Indicator Module	√	√	√	√		079D
2015	Chevrolet	Spark EV	Engine Control Module	√	√	√	√	√	0258
2015	Chevrolet	Spark EV	Electronic Brake Control Module	√	√	√	√	√	0263 0371 0111
2015	Chevrolet	Spark EV	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Chevrolet	Spark EV	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0160 0232 0150
2015	Chevrolet	Spark EV	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	Spark EV	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Chevrolet	Spark EV	Battery Charger Control Module	√			√		
2015	Chevrolet	Spark EV	Battery Energy Control Module	√			√		
2015	Chevrolet	Spark EV	Coolant Heater Control Module	√	√	√			
2015	Chevrolet	Spark EV	Electric A/C Compressor Control Module	√					
2015	Chevrolet	Spark EV	DC Charging Control Module	√			√		
2015	Chevrolet	Spark EV	Passenger Presence Module	√	√	√	√	√	0057
2015	Chevrolet	Spark EV	Hybrid Powertrain Control Module 2	√	√	√	√	√	0125 0124 0262 0079 0122 0123 0127
2015	Chevrolet	Spark EV	Hybrid Powertrain Control Module	√	√	√	√	√	
2015	Chevrolet	Spark EV	Auxiliary Transmission Fluid Pump	√	√	√	√		
2015	Chevrolet	Spark EV	Drive Motor Control Module	√	√	√	√		
2015	Chevrolet	Spark EV	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	Chevrolet	Spark EV	Keyless Entry Control Module	√	√	√	√	√	
2015	Chevrolet	Spark EV	Parking Brake Control Module	√	√	√	√	√	0229
2015	Chevrolet	Spark EV	Radio	√	√	√	√	√	
2015	Chevrolet	Spark EV	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2015	Chevrolet	Spark EV	Power Steering Control Module	√	√	√	√		0089
2015	Chevrolet	Spin	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139 0133 0210 0383 0098 0096 0094 0216 0130 0143 0265 0147 0237 0045 0393 0043 0135 0128 0172
2015	Chevrolet	Spin	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Chevrolet	Spin	Electronic Brake Control Module	√	√	√	√	√	0090
2015	Chevrolet	Spin	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134



2015	Chevrolet	Spin	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0150 0033 0150
2015	Chevrolet	Spin	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	Spin	HVAC Control Module	√	√	√	√	√	
2015	Chevrolet	Spin	Radio	√	√	√	√	√	
2015	Chevrolet	Spin	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Chevrolet	Spin	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Chevrolet	Spin	Parking Assist Control Module	√	√	√	√	√	0247
2015	Chevrolet	SS	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0258
2015	Chevrolet	SS	Transmission Control Module	√	√	√	√	√	0016
2015	Chevrolet	SS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2015	Chevrolet	SS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Chevrolet	SS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0150 0033 0150
2015	Chevrolet	SS	Instrument Cluster	√	√	√	√	√	0247 0145
2015	Chevrolet	SS	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Chevrolet	SS	HVAC Controls	√	√	√	√	√	
2015	Chevrolet	SS	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Chevrolet	SS	Headlamp Control Module	√	√	√	√	√	0195
2015	Chevrolet	SS	Suspension Control Module	√	√	√	√	√	0245
2015	Chevrolet	SS	Trailer Interface Control Module	√	√	√	√	√	0247
2015	Chevrolet	SS	Fuel Injector Control Module	√			√	√	
2015	Chevrolet	SS	Head-Up Display Module	√	√	√	√	√	
2015	Chevrolet	SS	Keyless Entry Control Module	√	√	√	√	√	
2015	Chevrolet	SS	Passenger Presence Module	√	√	√	√		0057
2015	Chevrolet	SS	Power Steering Control Module	√	√	√	√		0081
2015	Chevrolet	SS	Parking Assist Control Module	√	√	√	√	√	0247
2015	Chevrolet	SS	Frontview Camera Module	√	√	√	√	√	0205 0049
2015	Chevrolet	SS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Chevrolet	SS	Parking Brake Control Module	√	√	√	√	√	0229
2015	Chevrolet	SS	Left Side Object Detection Control Module	√	√	√		√	
2015	Chevrolet	SS	Right Side Object Detection Control Module	√	√	√		√	
2015	Chevrolet	SS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Chevrolet	SS	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Chevrolet	SS	Radio Controls	√	√	√	√	√	0247
2015	Chevrolet	SS	Radio	√	√	√	√	√	

2015	Chevrolet	Suburban	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2015	Chevrolet	Suburban	Transmission Control Module	√	√	√	√	√	0016
2015	Chevrolet	Suburban	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2015	Chevrolet	Suburban	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Chevrolet	Suburban	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0000 0150
2015	Chevrolet	Suburban	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	Suburban	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Chevrolet	Suburban	HVAC Controls	√	√	√	√	√	
2015	Chevrolet	Suburban	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	Chevrolet	Suburban	Passenger Presence Module	√	√	√	√	√	0057
2015	Chevrolet	Suburban	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2015	Chevrolet	Suburban	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Chevrolet	Suburban	Keyless Entry Control Module	√	√	√	√	√	
2015	Chevrolet	Suburban	Power Steering Control Module	√	√	√	√	√	0150
2015	Chevrolet	Suburban	Suspension Control Module	√	√	√	√	√	0245
2015	Chevrolet	Suburban	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Chevrolet	Suburban	Transfer Case Control Module	√	√	√	√	√	0037
2015	Chevrolet	Suburban	Steering Column Lock Control Module	√	√	√	√		
2015	Chevrolet	Suburban	Liftgate Control Module	√	√	√	√	√	0146 0169
2015	Chevrolet	Suburban	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	Chevrolet	Suburban	Left Side Object Detection Control Module	√	√	√		√	
2015	Chevrolet	Suburban	Parking Assist Control Module	√	√	√	√	√	0247 0271
2015	Chevrolet	Suburban	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Chevrolet	Suburban	Amplifier	√	√	√	√		
2015	Chevrolet	Suburban	Radio Controls	√	√	√	√		0241
2015	Chevrolet	Suburban	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Chevrolet	Suburban	Media Disc Player	√	√	√	√	√	
2015	Chevrolet	Suburban	Radio	√	√	√	√	√	0226 0150
2015	Chevrolet	Suburban	Distance Sensing Cruise Control Module	√	√	√	√		0047
2015	Chevrolet	Suburban	Assist Step Control Module	√	√	√	√	√	
2015	Chevrolet	Suburban	Parking Brake Control Module	√	√	√	√	√	0229
2015	Chevrolet	Tahoe	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2015	Chevrolet	Tahoe	Transmission Control Module	√	√	√	√	√	0016
2015	Chevrolet	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2015	Chevrolet	Tahoe	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111

2015	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0150 0232 0150
2015	Chevrolet	Tahoe	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	Tahoe	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Chevrolet	Tahoe	HVAC Controls	√	√	√	√	√	
2015	Chevrolet	Tahoe	Hybrid Powertrain Control Module	√	√	√	√	√	
2015	Chevrolet	Tahoe	Transfer Case Control Module	√	√	√	√	√	0037
2015	Chevrolet	Tahoe	Drive Motor Control Module 1	√			√		
2015	Chevrolet	Tahoe	Drive Motor Control Module 2	√			√		
2015	Chevrolet	Tahoe	Auxiliary Transmission Fluid Pump	√	√	√	√		
2015	Chevrolet	Tahoe	Battery Energy Control Module	√			√		
2015	Chevrolet	Tahoe	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	Chevrolet	Tahoe	Passenger Presence Module	√	√	√	√	√	0057
2015	Chevrolet	Tahoe	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Chevrolet	Tahoe	Keyless Entry Control Module	√	√	√	√	√	
2015	Chevrolet	Tahoe	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2015	Chevrolet	Tahoe	Power Steering Control Module	√	√	√	√	√	0150
2015	Chevrolet	Tahoe	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Chevrolet	Tahoe	Suspension Control Module	√	√	√	√	√	0245
2015	Chevrolet	Tahoe	Steering Column Lock Control Module	√	√	√	√		
2015	Chevrolet	Tahoe	Amplifier	√	√	√	√		
2015	Chevrolet	Tahoe	Radio Controls	√	√	√	√		0241
2015	Chevrolet	Tahoe	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Chevrolet	Tahoe	Media Disc Player	√	√	√	√	√	
2015	Chevrolet	Tahoe	Radio	√	√	√	√	√	0226 0150
2015	Chevrolet	Tahoe	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	Chevrolet	Tahoe	Left Side Object Detection Control Module	√	√	√		√	
2015	Chevrolet	Tahoe	Parking Assist Control Module	√	√	√	√	√	0247 0271
2015	Chevrolet	Tahoe	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	Chevrolet	Tahoe	Liftgate Control Module	√	√	√	√	√	0146 0169
2015	Chevrolet	Tahoe	Distance Sensing Cruise Control Module	√	√	√	√		0047
2015	Chevrolet	Tahoe	Assist Step Control Module	√	√	√	√	√	
2015	Chevrolet	Tahoe	Parking Brake Control Module	√	√	√	√	√	0229
2015	Chevrolet	Tavera	Engine Control Module	√	√	√	√	√	

2015	Chevrolet	Tracker	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006 0144 0258 0139 0210 0222 0224 0130 0147 0060 0044 0045 0097 0068 0084 0075 0074 0073 0117 0119 0043
2015	Chevrolet	Tracker	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Chevrolet	Tracker	Electronic Brake Control Module	√	√	√	√	√	0090
2015	Chevrolet	Tracker	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Chevrolet	Tracker	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0156 0003 0156
2015	Chevrolet	Tracker	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	Tracker	HVAC Control Module	√	√	√	√	√	
2015	Chevrolet	Tracker	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Chevrolet	Tracker	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2015	Chevrolet	Tracker	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Chevrolet	Tracker	Frontview Camera Module	√	√	√	√	√	0205 0049
2015	Chevrolet	Tracker	Power Steering Control Module	√	√	√	√		0207
2015	Chevrolet	Tracker	Parking Assist Control Module	√	√	√	√	√	0247
2015	Chevrolet	Tracker	Front Seat Heating Control Module	√	√	√	√	√	
2015	Chevrolet	Trailblazer	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0222 0060 0044 0045 0086 0097 0084 0043 0173 0156 0209 0132 0067 0217 0068 0212
2015	Chevrolet	Trailblazer	Transmission Control Module	√	√	√	√	√	0016
2015	Chevrolet	Trailblazer	Electronic Brake Control Module	√	√	√	√	√	0090 0112
2015	Chevrolet	Trailblazer	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2015	Chevrolet	Trailblazer	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0156 0003 0156
2015	Chevrolet	Trailblazer	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	Trailblazer	Trailer Interface Control Module	√	√	√	√	√	0247
2015	Chevrolet	Trailblazer	Parking Assist Control Module	√	√	√	√	√	0247
2015	Chevrolet	Trailblazer	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Chevrolet	Trailblazer	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2015	Chevrolet	Trailblazer	Transfer Case Control Module	√	√	√	√	√	0037
2015	Chevrolet	Trailblazer	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Chevrolet	Trailblazer	Radio	√	√	√	√	√	

2015	Chevrolet	Traverse	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0212
2015	Chevrolet	Traverse	Transmission Control Module	√	√	√	√	√	0016
2015	Chevrolet	Traverse	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2015	Chevrolet	Traverse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2015	Chevrolet	Traverse	Body Control Module	√	√	√	√	√	0263 0261
2015	Chevrolet	Traverse	Theft Deterrent Module	√	√	√	√	√	
2015	Chevrolet	Traverse	Instrument Cluster	√	√	√	√	√	
2015	Chevrolet	Traverse	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2015	Chevrolet	Traverse	Digital Radio Receiver Control Module	√	√	√	√	√	
2015	Chevrolet	Traverse	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	Chevrolet	Traverse	Liftgate Control Module	√	√	√	√	√	0146
2015	Chevrolet	Traverse	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2015	Chevrolet	Traverse	Passenger Presence Module	√	√	√	√	√	0057
2015	Chevrolet	Traverse	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2015	Chevrolet	Traverse	Front Seat Heating Control Module	√	√	√	√	√	
2015	Chevrolet	Traverse	Frontview Camera Module	√	√	√	√	√	0205 0196
2015	Chevrolet	Traverse	Left Side Object Detection Control Module	√	√	√	√	√	
2015	Chevrolet	Traverse	Parking Assist Control Module	√	√	√	√	√	0247
2015	Chevrolet	Traverse	Right Side Object Detection Control Module	√	√	√	√	√	
2015	Chevrolet	Traverse	Seat Memory Control Module	√	√	√	√	√	
2015	Chevrolet	Traverse	Radio	√	√	√	√	√	
2015	Chevrolet	Traverse	Driver Door Switch Panel Control Module	√	√	√	√	√	
2015	Chevrolet	Traverse	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2015	Chevrolet	Traverse	Rear Audio Control Module	√	√	√	√	√	
2015	Chevrolet	Traverse	Personal Audio Link Control Module	√	√	√	√	√	0231
2015	Chevrolet	Trax	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006 0144 0258 0139 0210 0222 0224 0130 0147 0060 0044 0045 0097 0068 0084 0075 0074 0073 0117 0119 0043
2015	Chevrolet	Trax	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Chevrolet	Trax	Electronic Brake Control Module	√	√	√	√	√	0090
2015	Chevrolet	Trax	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Chevrolet	Trax	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0000 0150
2015	Chevrolet	Trax	Instrument Cluster	√	√	√	√	√	0247

2015	Chevrolet	Trax	HVAC Control Module	√	√	√	√	√	
2015	Chevrolet	Trax	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Chevrolet	Trax	Passenger Presence Module	√	√	√	√	√	0057
2015	Chevrolet	Trax	Front Seat Heating Control Module	√	√	√	√	√	
2015	Chevrolet	Trax	Frontview Camera Module	√	√	√	√	√	0205 0049
2015	Chevrolet	Trax	Left Side Object Detection Control Module	√	√	√	√	√	
2015	Chevrolet	Trax	Parking Assist Control Module	√	√	√	√	√	0247
2015	Chevrolet	Trax	Right Side Object Detection Control Module	√	√	√	√	√	
2015	Chevrolet	Trax	Seat Memory Control Module	√	√	√	√	√	0310
2015	Chevrolet	Trax	Fuel Injector Control Module	√			√	√	
2015	Chevrolet	Trax	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2015	Chevrolet	Trax	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Chevrolet	Trax	Power Steering Control Module	√	√	√	√		0207
2015	Chevrolet	Trax	Radio	√	√	√	√	√	
2015	Chevrolet	Trax	Chassis Control Module	√	√	√	√	√	0217
2015	Chevrolet	Volt	Engine Control Module	√	√	√	√	√	0209 0132 0067 0086 0217 0176
2015	Chevrolet	Volt	Transmission Control Module	√	√	√	√	√	
2015	Chevrolet	Volt	Electronic Brake Control Module	√	√	√	√	√	0263 0371 0111
2015	Chevrolet	Volt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2015	Chevrolet	Volt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0150 0333 0150
2015	Chevrolet	Volt	Instrument Cluster	√	√	√	√	√	0247
2015	Chevrolet	Volt	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Chevrolet	Volt	Electric A/C Compressor Control Module	√					
2015	Chevrolet	Volt	Battery Energy Control Module	√			√		
2015	Chevrolet	Volt	Coolant Heater Control Module	√	√	√			
2015	Chevrolet	Volt	Battery Charger Control Module	√			√		
2015	Chevrolet	Volt	Hybrid Powertrain Control Module	√	√	√	√	√	
2015	Chevrolet	Volt	Drive Motor Control Module 1	√	√	√	√		
2015	Chevrolet	Volt	Drive Motor Control Module 2	√	√	√	√		
2015	Chevrolet	Volt	Auxiliary Transmission Fluid Pump	√	√	√	√		
2015	Chevrolet	Volt	Hybrid Powertrain Control Module 2	√	√	√	√	√	0124 0125 0056 0218 0122 0123 0127
2015	Chevrolet	Volt	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	Chevrolet	Volt	Steering Column Lock Control Module	√	√	√	√		
2015	Chevrolet	Volt	Chassis Control Module	√	√	√	√	√	0217
2015	Chevrolet	Volt	Front Seat Heating Control Module	√	√	√	√	√	
2015	Chevrolet	Volt	Parking Assist Control Module	√	√	√	√	√	0247
2015	Chevrolet	Volt	Parking Brake Control Module	√	√	√	√	√	0229

2015	Chevrolet	Volt	Passenger Presence Module	√	√	√	√		0057
2015	Chevrolet	Volt	Keyless Entry Control Module	√	√	√	√	√	
2015	Chevrolet	Volt	Radio	√	√	√	√	√	
2015	Chevrolet	Volt	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2015	Chevrolet	Volt	Power Steering Control Module	√	√	√	√		0081 0080 0089
2015	Chevrolet	Volt	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Chevrolet	Volt	Frontview Camera Module	√	√	√	√	√	0205 0049
2015	Chevrolet	Work	Engine Control Module	√	√	√	√	√	0069 0087 079C
2015	Chevrolet	Work	Electronic Brake Control Module	√	√	√	√	√	
2015	Chevrolet	Work	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2015	Daewoo	Alpheon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2015	Daewoo	Alpheon	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Daewoo	Alpheon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2015	Daewoo	Alpheon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2015	Daewoo	Alpheon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0000 0150 0000 0150
2015	Daewoo	Alpheon	Instrument Cluster	√	√	√	√	√	0247
2015	Daewoo	Alpheon	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Daewoo	Alpheon	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2015	Daewoo	Alpheon	Drive Motor Control Module	√	√	√	√		
2015	Daewoo	Alpheon	Battery Energy Control Module	√			√		
2015	Daewoo	Alpheon	Headlamp Control Module	√	√	√	√	√	0195
2015	Daewoo	Alpheon	Mobile Telephone Control Module	√	√	√	√	√	0247
2015	Daewoo	Alpheon	Front Seat Heating Control Module	√	√	√	√	√	
2015	Daewoo	Alpheon	Parking Assist Control Module	√	√	√	√	√	0247
2015	Daewoo	Alpheon	Rear Seat Heating Control Module	√	√	√	√	√	
2015	Daewoo	Alpheon	Seat Memory Control Module	√	√	√	√	√	0310
2015	Daewoo	Alpheon	Keyless Entry Control Module	√	√	√	√	√	
2015	Daewoo	Alpheon	Chassis Control Module	√	√	√	√	√	0217
2015	Daewoo	Alpheon	Parking Brake Control Module	√	√	√	√	√	0229
2015	Daewoo	Alpheon	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2015	Daewoo	Alpheon	Suspension Control Module	√	√	√	√	√	
2015	Daewoo	Alpheon	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Daewoo	Alpheon	Power Steering Control Module	√	√	√	√	√	0089 0081 0080
2015	Daewoo	Alpheon	Radio	√	√	√	√	√	
2015	Daewoo	Alpheon	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2015	Daewoo	Gentra	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2015	Daewoo	Gentra	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Daewoo	Gentra	Electronic Brake Control Module	√	√	√	√	√	

2015	Daewoo	Gentra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2015	Daewoo	Gentra	Variable Power Steering Control Module				√	√	
2015	Daewoo	Gentra	Fuel Injector Control Module	√	√	√	√	√	
2015	GMC	Acadia	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0212
2015	GMC	Acadia	Transmission Control Module	√	√	√	√	√	0016
2015	GMC	Acadia	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2015	GMC	Acadia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2015	GMC	Acadia	Body Control Module	√	√	√	√	√	0263 0261
2015	GMC	Acadia	Theft Deterrent Module	√	√	√	√		
2015	GMC	Acadia	Instrument Cluster	√	√	√	√	√	
2015	GMC	Acadia	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2015	GMC	Acadia	Liftgate Control Module	√	√	√	√		0146
2015	GMC	Acadia	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	GMC	Acadia	Digital Radio Receiver Control Module	√	√	√	√	√	
2015	GMC	Acadia	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2015	GMC	Acadia	Front Seat Heating Control Module	√	√	√	√		
2015	GMC	Acadia	Frontview Camera Module	√	√	√	√	√	0205 0196
2015	GMC	Acadia	Left Side Object Detection Control Module	√	√	√		√	
2015	GMC	Acadia	Parking Assist Control Module	√	√	√	√	√	0247
2015	GMC	Acadia	Right Side Object Detection Control Module	√	√	√		√	
2015	GMC	Acadia	Seat Memory Control Module	√	√	√	√	√	
2015	GMC	Acadia	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2015	GMC	Acadia	Passenger Presence Module	√	√	√	√		0057
2015	GMC	Acadia	Radio	√	√	√	√	√	
2015	GMC	Acadia	Rear Audio Control Module	√	√	√	√		
2015	GMC	Acadia	Personal Audio Link Control Module	√	√	√			0231
2015	GMC	Acadia	Driver Door Switch Panel Control Module	√	√	√	√	√	
2015	GMC	Acadia	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2015	GMC	Acadia	Head-Up Display Module	√	√	√	√	√	
2015	GMC	Canyon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0147 0086 0217
2015	GMC	Canyon	Transmission Control Module	√	√	√	√	√	0016
2015	GMC	Canyon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2015	GMC	Canyon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2015	GMC	Canyon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0332 0150
2015	GMC	Canyon	Instrument Cluster	√	√	√	√	√	0247
2015	GMC	Canyon	HVAC Control Module	√	√	√	√	√	0007 0129



2015	GMC	Canyon	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	GMC	Canyon	Passenger Presence Module	√	√	√	√	√	0057
2015	GMC	Canyon	Parking Assist Control Module	√	√	√	√	√	0247
2015	GMC	Canyon	Power Steering Control Module	√	√	√	√		0093 0090
2015	GMC	Canyon	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	GMC	Canyon	Transfer Case Control Module	√	√	√	√	√	0037
2015	GMC	Canyon	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2015	GMC	Canyon	Amplifier	√	√	√	√		
2015	GMC	Canyon	Radio	√	√	√	√	√	0226 0150
2015	GMC	Canyon	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	GMC	Savana	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0258 0237 0210 0115 0058 0042 0044 0088 0219 0073 0072 0070 0071 0117 0118 0119 0120 0240 0178 0180 0182 0184 0186 0188 0190 0192 0138 0137 0179 0181 0183 0185 0187
2015	GMC	Savana	Transmission Control Module	√	√	√	√	√	0016
2015	GMC	Savana	Electronic Brake Control Module	√	√	√	√	√	0225 0111
2015	GMC	Savana	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√		0172 0261
2015	GMC	Savana	Body Control Module	√	√	√	√	√	0263 0261
2015	GMC	Savana	Theft Deterrent Module	√	√	√	√		
2015	GMC	Savana	Instrument Cluster	√	√	√	√	√	
2015	GMC	Savana	Digital Radio Receiver Control Module	√	√	√	√	√	
2015	GMC	Savana	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	GMC	Savana	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2015	GMC	Savana	Auxiliary Heater Control Module	√	√	√	√	√	
2015	GMC	Savana	Parking Assist Control Module	√	√	√	√	√	0247
2015	GMC	Savana	Rollover Sensor Module	√	√	√	√		0172
2015	GMC	Savana	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2015	GMC	Savana	Radio	√	√	√	√	√	

2015	GMC	Sierra	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131 0258 0139 0237 0210 0115 0058 0042 0044 0088 0219 0073 0072 0070 0071 0117 0118 0119 0120 0240 0178 0180 0182 0184 0186 0188 0190 0192 0138 0137 0179 0181 0183 0185 0187 0189 0191
2015	GMC	Sierra	Transmission Control Module	√	√	√	√	√	0016 0019
2015	GMC	Sierra	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2015	GMC	Sierra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	GMC	Sierra	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0033 0150
2015	GMC	Sierra	Instrument Cluster	√	√	√	√	√	0247
2015	GMC	Sierra	HVAC Control Module	√	√	√	√	√	0007 0129
2015	GMC	Sierra	HVAC Controls	√	√	√	√	√	
2015	GMC	Sierra	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	GMC	Sierra	Transfer Case Control Module	√	√	√	√	√	0037
2015	GMC	Sierra	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	GMC	Sierra	Power Steering Control Module	√	√	√	√	√	0150
2015	GMC	Sierra	Suspension Control Module	√	√	√	√	√	0245
2015	GMC	Sierra	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2015	GMC	Sierra	Passenger Presence Module	√	√	√	√	√	0057
2015	GMC	Sierra	Fuel Injector Control Module	√	√	√	√	√	
2015	GMC	Sierra	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	GMC	Sierra	Parking Assist Control Module	√	√	√	√	√	0247 0271
2015	GMC	Sierra	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	GMC	Sierra	Distance Sensing Cruise Control Module	√	√	√	√		0047
2015	GMC	Sierra	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2015	GMC	Sierra	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 0009
2015	GMC	Sierra	Amplifier	√	√	√	√		
2015	GMC	Sierra	Media Disc Player	√	√	√	√	√	
2015	GMC	Sierra	Radio	√	√	√	√	√	0226 0150
2015	GMC	Sierra	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	GMC	Sierra	Radio Controls	√	√	√	√		0241
2015	GMC	Sierra	Parking Brake Control Module	√	√	√	√	√	0229

2015	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2015	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2015	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2015	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2015	GMC	Terrain	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2015	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0247
2015	GMC	Terrain	HVAC Control Module	√	√	√	√	√	0007 0129
2015	GMC	Terrain	Liftgate Control Module	√	√	√	√		0146
2015	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0259
2015	GMC	Terrain	Rear Differential Clutch Control Module	√	√	√	√		0155
2015	GMC	Terrain	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2015	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0080 0089
2015	GMC	Terrain	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	GMC	Terrain	Radio	√	√	√	√	√	
2015	GMC	Terrain	Passenger Presence Module	√	√	√	√		0057
2015	GMC	Terrain	Front Seat Heating Control Module	√	√	√	√	√	
2015	GMC	Terrain	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	GMC	Terrain	Left Side Object Detection Control Module	√	√	√		√	
2015	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0247
2015	GMC	Terrain	Right Side Object Detection Control Module	√	√	√		√	
2015	GMC	Terrain	Seat Memory Control Module	√	√	√	√	√	0310
2015	GMC	Yukon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2015	GMC	Yukon	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2015	GMC	Yukon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2015	GMC	Yukon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	GMC	Yukon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0156 0033 0158
2015	GMC	Yukon	Instrument Cluster	√	√	√	√	√	0247
2015	GMC	Yukon	HVAC Control Module	√	√	√	√	√	0007 0129
2015	GMC	Yukon	HVAC Controls	√	√	√	√	√	
2015	GMC	Yukon	Hybrid Powertrain Control Module	√	√	√	√	√	
2015	GMC	Yukon	Transfer Case Control Module	√	√	√	√	√	0037
2015	GMC	Yukon	Drive Motor Control Module 1	√			√		
2015	GMC	Yukon	Drive Motor Control Module 2	√			√		

2015	GMC	Yukon	Auxiliary Transmission Fluid Pump	√	√	√	√		
2015	GMC	Yukon	Battery Energy Control Module	√			√		
2015	GMC	Yukon	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	GMC	Yukon	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	GMC	Yukon	Passenger Presence Module	√	√	√	√	√	0057
2015	GMC	Yukon	Keyless Entry Control Module	√	√	√	√	√	
2015	GMC	Yukon	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	GMC	Yukon	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2015	GMC	Yukon	Power Steering Control Module	√	√	√	√	√	0150
2015	GMC	Yukon	Suspension Control Module	√	√	√	√	√	0245
2015	GMC	Yukon	Steering Column Lock Control Module	√	√	√	√		
2015	GMC	Yukon	Amplifier	√	√	√	√		
2015	GMC	Yukon	Radio Controls	√	√	√	√		0241
2015	GMC	Yukon	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	GMC	Yukon	Media Disc Player	√	√	√	√	√	
2015	GMC	Yukon	Radio	√	√	√	√	√	0226 0150
2015	GMC	Yukon	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	GMC	Yukon	Left Side Object Detection Control Module	√	√	√		√	
2015	GMC	Yukon	Parking Assist Control Module	√	√	√	√	√	0247 0271
2015	GMC	Yukon	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	GMC	Yukon	Liftgate Control Module	√	√	√	√	√	0146 0169
2015	GMC	Yukon	Distance Sensing Cruise Control Module	√	√	√	√		0047
2015	GMC	Yukon	Assist Step Control Module	√	√	√	√	√	
2015	GMC	Yukon	Parking Brake Control Module	√	√	√	√	√	0229
2015	GMC	Yukon XL	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2015	GMC	Yukon XL	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2015	GMC	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2015	GMC	Yukon XL	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	GMC	Yukon XL	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0033 0150
2015	GMC	Yukon XL	Instrument Cluster	√	√	√	√	√	0247
2015	GMC	Yukon XL	HVAC Control Module	√	√	√	√	√	0007 0129
2015	GMC	Yukon XL	HVAC Controls	√	√	√	√	√	
2015	GMC	Yukon XL	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	GMC	Yukon XL	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	GMC	Yukon XL	Passenger Presence Module	√	√	√	√	√	0057

2015	GMC	Yukon XL	Keyless Entry Control Module	√	√	√	√	√	
2015	GMC	Yukon XL	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2015	GMC	Yukon XL	Power Steering Control Module	√	√	√	√	√	0150
2015	GMC	Yukon XL	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	GMC	Yukon XL	Suspension Control Module	√	√	√	√	√	0245
2015	GMC	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0037
2015	GMC	Yukon XL	Steering Column Lock Control Module	√	√	√	√		
2015	GMC	Yukon XL	Amplifier	√	√	√	√		
2015	GMC	Yukon XL	Radio Controls	√	√	√	√		0241
2015	GMC	Yukon XL	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	GMC	Yukon XL	Media Disc Player	√	√	√	√	√	
2015	GMC	Yukon XL	Radio	√	√	√	√	√	0226 0150
2015	GMC	Yukon XL	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	GMC	Yukon XL	Left Side Object Detection Control Module	√	√	√		√	
2015	GMC	Yukon XL	Parking Assist Control Module	√	√	√	√	√	0247 0271
2015	GMC	Yukon XL	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	GMC	Yukon XL	Liftgate Control Module	√	√	√	√	√	0146 0169
2015	GMC	Yukon XL	Distance Sensing Cruise Control Module	√	√	√	√		0047
2015	GMC	Yukon XL	Assist Step Control Module	√	√	√	√	√	
2015	GMC	Yukon XL	Parking Brake Control Module	√	√	√	√	√	0229
2015	Holden	Astra-J	Engine Control Module	√	√	√	√	√	0263 0156 0209 0216 0132 0067 0147 0066 0115 0086 0154 0214 0215 0217 0006 0144 0138 0358
2015	Holden	Astra-J	Transmission Control Module	√	√	√	√	√	0019
2015	Holden	Astra-J	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2015	Holden	Astra-J	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2015	Holden	Astra-J	Body Control Module	√	√	√	√	√	0242 0263 0203 0208 0201 0206 0083 0160
2015	Holden	Astra-J	Instrument Cluster	√	√	√	√	√	0247
2015	Holden	Astra-J	HVAC Control Module	√	√	√	√	√	0007 0247 0129
2015	Holden	Astra-J	Trailer Interface Control Module	√	√	√	√	√	0247
2015	Holden	Astra-J	Parking Brake Control Module	√	√	√	√	√	0229
2015	Holden	Astra-J	Power Steering Control Module	√	√	√	√		0081 0080 0089
2015	Holden	Astra-J	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2015	Holden	Astra-J	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Holden	Astra-J	Frontview Camera Module	√	√	√	√	√	0247
2015	Holden	Astra-J	Front Seat Heating Control Module	√	√	√	√	√	
2015	Holden	Astra-J	Parking Assist Control Module	√	√	√	√	√	0247
2015	Holden	Astra-J	Radio	√	√	√	√	√	
2015	Holden	Astra-J	Suspension Control Module	√	√	√	√	√	
2015	Holden	Astra-J	Chassis Control Module	√	√	√	√	√	0217 0095 0194

2015	Holden	Astra-J	Headlamp Control Module	√	√	√	√	√	0195
2015	Holden	Astra-J	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2015	Holden	Barina	Engine Control Module	√	√	√	√	√	0133 0156 0210 0383 0098 0096 0094 0216 0130 0143 0265 0147 0237 0045 0086 0393 0043 0135 0128 0173 0263 0209 0020 0132 0067 0066 076D 0213 0217 0006 0144 0258
2015	Holden	Barina	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Holden	Barina	Electronic Brake Control Module	√	√	√	√	√	0090
2015	Holden	Barina	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Holden	Barina	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2015	Holden	Barina	Instrument Cluster	√	√	√	√	√	0247
2015	Holden	Barina	HVAC Control Module	√	√	√	√	√	
2015	Holden	Barina	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Holden	Barina	Front Seat Heating Control Module	√	√	√	√	√	
2015	Holden	Barina	Radio	√	√	√	√	√	
2015	Holden	Barina	Parking Assist Control Module	√	√	√	√	√	0247
2015	Holden	Barina	Power Steering Control Module	√	√	√	√		0207
2015	Holden	Barina	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Holden	Barina Spark	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139
2015	Holden	Barina Spark	Transmission Control Module	√	√	√	√	√	0016
2015	Holden	Barina Spark	Electronic Brake Control Module	√	√	√	√	√	0090
2015	Holden	Barina Spark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2015	Holden	Barina Spark	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2015	Holden	Barina Spark	Instrument Cluster	√	√	√	√	√	0247
2015	Holden	Barina Spark	Keyless Entry Control Module				√		
2015	Holden	Barina Spark	Radio	√	√	√	√	√	
2015	Holden	Barina Spark	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2015	Holden	Barina Spark	Power Steering Control Module	√	√	√	√		0089
2015	Holden	Caprice	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258 0212 0006 0131
2015	Holden	Caprice	Transmission Control Module	√	√	√	√	√	0016
2015	Holden	Caprice	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2015	Holden	Caprice	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111

2015	Holden	Caprice	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0150 0232 0150
2015	Holden	Caprice	Instrument Cluster	√	√	√	√	√	0247 0145
2015	Holden	Caprice	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Holden	Caprice	HVAC Controls	√	√	√	√	√	
2015	Holden	Caprice	Steering Column Lock Control Module	√	√	√	√		
2015	Holden	Caprice	Head-Up Display Module	√	√	√	√	√	
2015	Holden	Caprice	Left Side Object Detection Control Module	√	√	√		√	
2015	Holden	Caprice	Right Side Object Detection Control Module	√	√	√		√	
2015	Holden	Caprice	Seat Memory Control Module - Driver	√	√	√	√	√	
2015	Holden	Caprice	Headlamp Control Module	√	√	√	√	√	0195
2015	Holden	Caprice	Suspension Control Module	√	√	√	√	√	0245
2015	Holden	Caprice	Trailer Interface Control Module	√	√	√	√	√	0247
2015	Holden	Caprice	Fuel Injector Control Module	√			√	√	
2015	Holden	Caprice	Keyless Entry Control Module	√	√	√	√	√	
2015	Holden	Caprice	Power Steering Control Module	√	√	√	√		0081
2015	Holden	Caprice	Parking Assist Control Module	√	√	√	√	√	0247
2015	Holden	Caprice	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Holden	Caprice	Frontview Camera Module	√	√	√	√	√	0205 0049
2015	Holden	Caprice	Parking Brake Control Module	√	√	√	√	√	0229
2015	Holden	Caprice	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Holden	Caprice	Radio Controls	√	√	√	√	√	0247
2015	Holden	Caprice	Radio	√	√	√	√	√	
2015	Holden	Captiva 5	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0156 0086 0217 0213 0098 0216 0224 0449 0130 0143 0450 0265 0147 0108 0452 0237 0044 0045 0043 0135 0453 0454 0455 0456
2015	Holden	Captiva 5	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Holden	Captiva 5	Electronic Brake Control Module	√	√	√	√	√	0090
2015	Holden	Captiva 5	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2015	Holden	Captiva 5	Body Control Module	√	√	√	√	√	0242 0263 0261
2015	Holden	Captiva 5	Theft Deterrent Module	√	√	√	√		
2015	Holden	Captiva 5	Instrument Cluster	√	√	√	√	√	
2015	Holden	Captiva 5	HVAC Control Module	√	√	√		√	
2015	Holden	Captiva 5	Mobile Telephone Control Module	√	√	√		√	0247 0065 0249 0246
2015	Holden	Captiva 5	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2015	Holden	Captiva 5	Headlamp Control Module	√	√	√	√	√	0195 0065
2015	Holden	Captiva 5	Variable Power Steering Control Module	√				√	

2015	Holden	Captiva 5	Info Display Module	√	√	√	√	√	0170 0467 0468 0247 0246 0065 0249 07B3
2015	Holden	Captiva 5	Parking Brake Control Module	√	√	√	√	√	0229
2015	Holden	Captiva 5	Parking Assist Control Module	√	√	√	√	√	
2015	Holden	Captiva 5	Auxiliary Body Control Module	√	√	√	√	√	0050
2015	Holden	Captiva 5	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2015	Holden	Captiva 5	Radio	√	√	√	√	√	0170 07B4 0247 0246 0065 0470 07B5
2015	Holden	Captiva 5	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2015	Holden	Captiva 7	Engine Control Module	√	√	√	√	√	0156 0209 0098 0216 0224 0449 0130 0143 0450 0265 0147 0108 0452 0237 0044 0045 0086 0043 0135 0453 0454 0455 0456 0263 0132 0067 0217 0213 0006 0131 0258
2015	Holden	Captiva 7	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Holden	Captiva 7	Electronic Brake Control Module	√	√	√	√	√	0090 0111
2015	Holden	Captiva 7	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2015	Holden	Captiva 7	Body Control Module	√	√	√	√	√	0242 0263 0261
2015	Holden	Captiva 7	Theft Deterrent Module	√	√	√	√	√	
2015	Holden	Captiva 7	Instrument Cluster	√	√	√	√	√	
2015	Holden	Captiva 7	HVAC Control Module	√	√	√	√	√	
2015	Holden	Captiva 7	Mobile Telephone Control Module	√	√	√	√	√	
2015	Holden	Captiva 7	Variable Power Steering Control Module					√	
2015	Holden	Captiva 7	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2015	Holden	Captiva 7	Headlamp Control Module	√	√	√	√	√	0195 0065
2015	Holden	Captiva 7	Remote Control Door Lock Receiver	√	√	√	√	√	0110 0160 0159 079B
2015	Holden	Captiva 7	Chassis Control Module	√	√	√	√	√	0217
2015	Holden	Captiva 7	Parking Brake Control Module	√	√	√	√	√	0229
2015	Holden	Captiva 7	Auxiliary Body Control Module	√	√	√	√	√	0050
2015	Holden	Cascada	Engine Control Module	√	√	√	√	√	0263 0156 0209 0216 0132 0067 0147 0066 0115 0086 0154 0214 0215 0217 0006 0144 0132
2015	Holden	Cascada	Transmission Control Module	√	√	√	√	√	0019
2015	Holden	Cascada	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2015	Holden	Cascada	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2015	Holden	Cascada	Body Control Module	√	√	√	√	√	0242 0263 0203 0208 0201 0206 0083 0160
2015	Holden	Cascada	Instrument Cluster	√	√	√	√	√	0247



2015	Holden	Cascada	HVAC Control Module	√	√	√	√	√	0007 0247 0129
2015	Holden	Cascada	Folding Top Control Module	√	√	√	√	√	0247 0004 0005
2015	Holden	Cascada	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2015	Holden	Cascada	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Holden	Cascada	Frontview Camera Module	√	√	√	√	√	0247
2015	Holden	Cascada	Front Seat Heating Control Module	√	√	√	√	√	
2015	Holden	Cascada	Parking Assist Control Module	√	√	√	√	√	0247
2015	Holden	Cascada	Parking Brake Control Module	√	√	√	√	√	0229
2015	Holden	Cascada	Power Steering Control Module	√	√	√	√		0081 0080 0089
2015	Holden	Cascada	Radio	√	√	√	√	√	
2015	Holden	Cascada	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2015	Holden	Cascada	Headlamp Control Module	√	√	√	√	√	0195
2015	Holden	Cascada	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2015	Holden	Colorado	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0222 0060 0044 0045 0086 0097 0084 0043
2015	Holden	Colorado	Transmission Control Module	√	√	√	√	√	0016
2015	Holden	Colorado	Electronic Brake Control Module	√	√	√	√	√	0090 0112
2015	Holden	Colorado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2015	Holden	Colorado	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0082 0150 0222 0150
2015	Holden	Colorado	Instrument Cluster	√	√	√	√	√	0247
2015	Holden	Colorado	Parking Assist Control Module	√	√	√	√	√	0247
2015	Holden	Colorado	Trailer Interface Control Module	√	√	√	√	√	0247
2015	Holden	Colorado	Transfer Case Control Module	√	√	√	√	√	0037
2015	Holden	Colorado	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2015	Holden	Colorado	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Holden	Colorado	Radio	√	√	√	√	√	
2015	Holden	Colorado 7	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0222 0060 0044 0045 0086 0097 0084 0043
2015	Holden	Colorado 7	Transmission Control Module	√	√	√	√	√	0016
2015	Holden	Colorado 7	Electronic Brake Control Module	√	√	√	√	√	0090 0112
2015	Holden	Colorado 7	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2015	Holden	Colorado 7	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0082 0150 0222 0150
2015	Holden	Colorado 7	Instrument Cluster	√	√	√	√	√	0247
2015	Holden	Colorado 7	Parking Assist Control Module	√	√	√	√	√	0247

2015	Holden	Colorado 7	Trailer Interface Control Module	√	√	√	√	√	0247
2015	Holden	Colorado 7	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2015	Holden	Colorado 7	Transfer Case Control Module	√	√	√	√	√	0037
2015	Holden	Colorado 7	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Holden	Colorado 7	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2015	Holden	Colorado 7	Radio	√	√	√	√	√	
2015	Holden	Commodore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258 0212 0006 0131
2015	Holden	Commodore	Transmission Control Module	√	√	√	√	√	0016
2015	Holden	Commodore	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2015	Holden	Commodore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Holden	Commodore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0000 0150 0000 0150
2015	Holden	Commodore	Instrument Cluster	√	√	√	√	√	0247 0145
2015	Holden	Commodore	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Holden	Commodore	HVAC Controls	√	√	√	√	√	
2015	Holden	Commodore	Liftgate Control Module	√	√	√	√	√	
2015	Holden	Commodore	Steering Column Lock Control Module	√	√	√	√	√	
2015	Holden	Commodore	Head-Up Display Module	√	√	√	√	√	
2015	Holden	Commodore	Left Side Object Detection Control Module	√	√	√		√	
2015	Holden	Commodore	Right Side Object Detection Control Module	√	√	√		√	
2015	Holden	Commodore	Seat Memory Control Module - Driver	√	√	√	√	√	
2015	Holden	Commodore	Headlamp Control Module	√	√	√	√	√	0195
2015	Holden	Commodore	Suspension Control Module	√	√	√	√	√	0245
2015	Holden	Commodore	Trailer Interface Control Module	√	√	√	√	√	0247
2015	Holden	Commodore	Fuel Injector Control Module	√			√	√	
2015	Holden	Commodore	Keyless Entry Control Module	√	√	√	√	√	
2015	Holden	Commodore	Power Steering Control Module	√	√	√	√		0081
2015	Holden	Commodore	Parking Assist Control Module	√	√	√	√	√	0247
2015	Holden	Commodore	Frontview Camera Module	√	√	√	√	√	0205 0049
2015	Holden	Commodore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Holden	Commodore	Parking Brake Control Module	√	√	√	√	√	0229
2015	Holden	Commodore	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	Holden	Commodore	Radio Controls	√	√	√	√	√	0247
2015	Holden	Commodore	Radio	√	√	√	√	√	

2015	Holden	Cruze	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139 0020 0066 076D 0213 0006 0144 0258 0098 0216 0224 0449 0130 0143 0450 0265 0147 0108 0452 0237 0044 0045 0043 0135 0453
2015	Holden	Cruze	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Holden	Cruze	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2015	Holden	Cruze	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2015	Holden	Cruze	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2015	Holden	Cruze	Instrument Cluster	√	√	√	√	√	0247
2015	Holden	Cruze	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Holden	Cruze	Front Seat Heating Control Module	√	√	√	√	√	
2015	Holden	Cruze	Left Side Object Detection Control Module	√	√	√		√	
2015	Holden	Cruze	Parking Assist Control Module	√	√	√	√	√	0247
2015	Holden	Cruze	Right Side Object Detection Control Module	√	√	√		√	
2015	Holden	Cruze	Power Steering Control Module	√	√	√	√		0081 0080 0089
2015	Holden	Cruze	Keyless Entry Control Module	√	√	√	√	√	
2015	Holden	Cruze	Mobile Telephone Control Module	√	√	√	√	√	0247
2015	Holden	Cruze	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2015	Holden	Cruze	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Holden	Cruze	Fuel Injector Control Module	√			√	√	
2015	Holden	Cruze	Chassis Control Module	√	√	√	√	√	0217
2015	Holden	Cruze	Radio	√	√	√	√	√	
2015	Holden	Cruze	Trailer Interface Control Module	√	√	√	√	√	0247
2015	Holden	Cruze	Multimedia Player Interface Module	√	√	√	√		0247
2015	Holden	Cruze	Steering Column Lock Control Module	√	√	√	√		
2015	Holden	Insignia	Engine Control Module	√	√	√	√	√	0156 0067 0086 0217
2015	Holden	Insignia	Transmission Control Module	√	√	√	√	√	0020 0084
2015	Holden	Insignia	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2015	Holden	Insignia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0111
2015	Holden	Insignia	Body Control Module	√	√	√	√	√	0242 0263 0203 0208 0201 0206 0083 0160
2015	Holden	Insignia	Instrument Cluster	√	√	√	√	√	0247
2015	Holden	Insignia	HVAC Control Module	√	√	√	√	√	0007 0247 0129
2015	Holden	Insignia	HVAC Controls	√	√	√	√	√	
2015	Holden	Insignia	Trailer Interface Control Module	√	√	√	√	√	0247
2015	Holden	Insignia	Keyless Entry Control Module	√	√	√	√	√	
2015	Holden	Insignia	Steering Column Lock Control Module	√	√	√	√		
2015	Holden	Insignia	Steering Wheel Angle Sensor Module	√	√	√			0093 0090

2015	Holden	Insignia	Frontview Camera Module	√	√	√	√	√	0205 0196
2015	Holden	Insignia	Parking Brake Control Module	√	√	√	√	√	0229
2015	Holden	Insignia	Power Steering Control Module	√	√	√	√	√	
2015	Holden	Insignia	Radio	√	√	√	√	√	0226
2015	Holden	Insignia	Amplifier	√	√	√	√		
2015	Holden	Insignia	Front Seat Heating/Venting/Cooling/Memory Control Module	√	√	√	√	√	
2015	Holden	Insignia	Parking Assist Control Module	√	√	√	√	√	0247
2015	Holden	Insignia	Distance Sensing Cruise Control Module	√	√	√	√		0047
2015	Holden	Insignia	Left Side Object Detection Control Module	√	√	√		√	
2015	Holden	Insignia	Rear Differential Clutch Control Module	√	√	√	√	√	
2015	Holden	Insignia	Suspension Control Module	√	√	√	√	√	
2015	Holden	Insignia	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	Holden	Insignia	Radio Controls	√	√	√	√	√	0150
2015	Holden	Insignia	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2015	Holden	Insignia	Headlamp Control Module	√	√	√	√	√	0195
2015	Holden	Malibu	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006 0144 0258 0139 0133 0210 0383 0098 0096 0094 0216 0130 0143 0265 0147 0237 0045 0393 0043 0135 0128 0017 0036 0020 0084
2015	Holden	Malibu	Transmission Control Module	√	√	√	√	√	0225 0090 0111
2015	Holden	Malibu	Electronic Brake Control Module	√	√	√	√	√	0172 0134 0111
2015	Holden	Malibu	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0160 0333 0150
2015	Holden	Malibu	Body Control Module	√	√	√	√	√	0247
2015	Holden	Malibu	Instrument Cluster	√	√	√	√	√	0007 0129
2015	Holden	Malibu	HVAC Control Module	√	√	√	√	√	
2015	Holden	Malibu	Steering Column Lock Control Module	√	√	√	√		
2015	Holden	Malibu	Parking Brake Control Module	√	√	√	√	√	0229
2015	Holden	Malibu	Headlamp Control Module	√	√	√	√	√	0195
2015	Holden	Malibu	Rear Differential Clutch Control Module	√	√	√	√	√	
2015	Holden	Malibu	Keyless Entry Control Module	√	√	√	√	√	
2015	Holden	Malibu	Parking Assist Control Module	√	√	√	√	√	0247
2015	Holden	Malibu	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2015	Holden	Malibu	Mobile Telephone Control Module	√	√	√	√	√	0247
2015	Holden	Malibu	Frontview Camera Module	√	√	√	√	√	0205 0049
2015	Holden	Malibu	Steering Wheel Angle Sensor Module	√	√	√			0093 0090

2015	Holden	Malibu	Front Seat Heating Control Module	√	√	√	√	√	
2015	Holden	Malibu	Left Side Object Detection Control Module	√	√	√	√	√	
2015	Holden	Malibu	Rear Seat Heating Control Module	√	√	√	√	√	
2015	Holden	Malibu	Seat Memory Control Module	√	√	√	√	√	0310
2015	Holden	Malibu	Radio	√	√	√	√	√	
2015	Holden	Malibu	Multimedia Player Interface Module	√	√	√	√		0247
2015	Holden	Malibu	Trailer Interface Control Module	√	√	√	√	√	0247
2015	Holden	Trax	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006
2015	Holden	Trax	Transmission Control Module	√	√	√	√	√	0017 0036
2015	Holden	Trax	Electronic Brake Control Module	√	√	√	√	√	0090
2015	Holden	Trax	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	Holden	Trax	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0156 0033 0156
2015	Holden	Trax	Instrument Cluster	√	√	√	√	√	0247
2015	Holden	Trax	HVAC Control Module	√	√	√	√	√	
2015	Holden	Trax	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2015	Holden	Trax	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Holden	Trax	Power Steering Control Module	√	√	√	√		0207
2015	Holden	Trax	Parking Assist Control Module	√	√	√	√	√	0247
2015	Holden	Trax	Front Seat Heating Control Module	√	√	√	√	√	
2015	Holden	Trax	Seat Memory Control Module	√	√	√	√	√	0310
2015	Holden	Trax	Radio	√	√	√	√	√	
2015	Holden	Trax	Trailer Interface Control Module	√	√	√	√	√	0247
2015	Holden	Volt	Engine Control Module	√	√	√	√	√	0209 0132 0067 0086 0217 0176
2015	Holden	Volt	Transmission Control Module	√	√	√	√	√	
2015	Holden	Volt	Electronic Brake Control Module	√	√	√	√	√	0263 0371 0111
2015	Holden	Volt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2015	Holden	Volt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0156 0033 0156
2015	Holden	Volt	Instrument Cluster	√	√	√	√	√	0247
2015	Holden	Volt	HVAC Control Module	√	√	√	√	√	0007 0129
2015	Holden	Volt	Electric A/C Compressor Control Module	√					
2015	Holden	Volt	Battery Energy Control Module	√			√		
2015	Holden	Volt	Coolant Heater Control Module	√	√	√			
2015	Holden	Volt	Battery Charger Control Module	√			√		

2015	Holden	Volt	Hybrid Powertrain Control Module	√	√	√	√	√	
2015	Holden	Volt	Drive Motor Control Module 1	√	√	√	√		
2015	Holden	Volt	Drive Motor Control Module 2	√	√	√	√		
2015	Holden	Volt	Auxiliary Transmission Fluid Pump	√	√	√	√		
2015	Holden	Volt	Hybrid Powertrain Control Module 2	√	√	√	√	√	0124 0125 0056 0218 0122 0123 0127
2015	Holden	Volt	Telematics Communication Interface Control Module	√	√	√	√		
2015	Holden	Volt	Steering Column Lock Control Module	√	√	√	√		
2015	Holden	Volt	Chassis Control Module	√	√	√	√	√	0217
2015	Holden	Volt	Front Seat Heating Control Module	√	√	√	√	√	
2015	Holden	Volt	Parking Assist Control Module	√	√	√	√	√	0247
2015	Holden	Volt	Keyless Entry Control Module	√	√	√	√	√	
2015	Holden	Volt	Radio	√	√	√	√	√	
2015	Holden	Volt	Parking Brake Control Module	√	√	√	√	√	0229
2015	Holden	Volt	Power Steering Control Module	√	√	√	√		0081 0080 0089
2015	Holden	Volt	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	Holden	Volt	Frontview Camera Module	√	√	√	√	√	0205 0049
2014	Buick	Enclave	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0214
2014	Buick	Enclave	Transmission Control Module	√	√	√	√	√	0016
2014	Buick	Enclave	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2014	Buick	Enclave	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2014	Buick	Enclave	Body Control Module	√	√	√	√	√	0263 0261
2014	Buick	Enclave	Theft Deterrent Module	√	√	√	√		
2014	Buick	Enclave	Instrument Cluster	√	√	√	√	√	
2014	Buick	Enclave	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2014	Buick	Enclave	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2014	Buick	Enclave	Headlamp Control Module	√	√	√			
2014	Buick	Enclave	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	Buick	Enclave	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Buick	Enclave	Liftgate Control Module	√	√	√	√		0146
2014	Buick	Enclave	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	Buick	Enclave	Left Side Object Detection Control Module	√	√	√		√	
2014	Buick	Enclave	Right Side Object Detection Control Module	√	√	√		√	
2014	Buick	Enclave	Parking Assist Control Module	√	√	√	√	√	0247
2014	Buick	Enclave	Seat Memory Control Module	√	√	√	√	√	
2014	Buick	Enclave	Radio	√	√	√	√	√	
2014	Buick	Enclave	Rear Audio Control Module	√	√	√	√		
2014	Buick	Enclave	Passenger Presence Module	√	√	√	√		0057
2014	Buick	Enclave	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Buick	Enclave	Driver Door Switch Panel Control Module	√	√	√	√	√	

2014	Buick	Enclave	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2014	Buick	Enclave	Front Seat Heating Control Module	√	√	√	√		
2014	Buick	Enclave	Personal Audio Link Control Module	√	√	√			0231
2014	Buick	Enclave	Frontview Camera Module	√	√	√	√	√	0205 0196
2014	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006
2014	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2014	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2014	Buick	Encore	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	Buick	Encore	Instrument Cluster	√	√	√	√	√	0247
2014	Buick	Encore	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Buick	Encore	Power Steering Control Module	√	√	√	√		0207
2014	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Buick	Encore	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Buick	Encore	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2014	Buick	Encore	Passenger Presence Module	√	√	√	√		0057
2014	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2014	Buick	Encore	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2014	Buick	Encore	Left Side Object Detection Control Module	√	√	√		√	
2014	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0247
2014	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2014	Buick	Encore	Radio	√	√	√	√	√	
2014	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0209 0132 0067 0086 0217 0258 0263 0156
2014	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2014	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2014	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2014	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0158 0233 0158
2014	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0247
2014	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Buick	LaCrosse	HVAC Controls	√	√	√	√	√	
2014	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2014	Buick	LaCrosse	Battery Energy Control Module	√			√		
2014	Buick	LaCrosse	Drive Motor Control Module	√	√	√	√		

2014	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2014	Buick	LaCrosse	Parking Brake Control Module	√	√	√	√	√	0229
2014	Buick	LaCrosse	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	
2014	Buick	LaCrosse	Suspension Control Module	√	√	√	√	√	
2014	Buick	LaCrosse	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Buick	LaCrosse	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2014	Buick	LaCrosse	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2014	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2014	Buick	LaCrosse	Passenger Presence Module	√	√	√	√		0057
2014	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√		√	
2014	Buick	LaCrosse	Radio Controls	√	√	√	√		0241
2014	Buick	LaCrosse	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2014	Buick	LaCrosse	Distance Sensing Cruise Control Module	√	√	√	√		0047
2014	Buick	LaCrosse	Human Machine Interface Control Module	√	√	√	√	√	0150
2014	Buick	LaCrosse	Radio	√	√	√	√	√	0226 0150
2014	Buick	LaCrosse	Amplifier	√	√	√	√		
2014	Buick	LaCrosse	Media Disc Player	√	√	√	√	√	
2014	Buick	LaCrosse	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2014	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0247
2014	Buick	LaCrosse	Head-Up Display Module	√	√	√	√	√	
2014	Buick	Regal	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0066 0086 0217 0258 0213 0212
2014	Buick	Regal	Transmission Control Module	√	√	√	√	√	0016 0017 0036
2014	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2014	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2014	Buick	Regal	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0150 0222 0150
2014	Buick	Regal	Instrument Cluster	√	√	√	√	√	0247
2014	Buick	Regal	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Buick	Regal	HVAC Controls	√	√	√	√	√	
2014	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Buick	Regal	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2014	Buick	Regal	Drive Motor Control Module	√	√	√	√		
2014	Buick	Regal	Battery Energy Control Module	√			√		
2014	Buick	Regal	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Buick	Regal	Radio	√	√	√	√	√	0226 0150
2014	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	
2014	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	



2014	Buick	Regal	Passenger Presence Module	√	√	√	√		0057
2014	Buick	Regal	Parking Brake Control Module	√	√	√	√	√	0229
2014	Buick	Regal	Front Seat Heating Control Module	√	√	√	√	√	
2014	Buick	Regal	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2014	Buick	Regal	Left Side Object Detection Control Module	√	√	√		√	
2014	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0247
2014	Buick	Regal	Seat Memory Control Module	√	√	√	√	√	0310
2014	Buick	Regal	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2014	Buick	Regal	Distance Sensing Cruise Control Module	√	√	√	√		0047
2014	Buick	Regal	Human Machine Interface Control Module	√	√	√	√	√	0150
2014	Buick	Regal	Radio Controls	√	√	√	√		0241
2014	Buick	Regal	Amplifier	√	√	√	√		
2014	Buick	Regal	Suspension Control Module	√	√	√	√	√	
2014	Buick	Regal	Power Steering Control Module	√	√	√	√		0081 0080 0089
2014	Buick	Regal	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Buick	Verano	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0066 0086 0217 0258
2014	Buick	Verano	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Buick	Verano	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2014	Buick	Verano	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Buick	Verano	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	Buick	Verano	Instrument Cluster	√	√	√	√	√	0247
2014	Buick	Verano	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Buick	Verano	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Buick	Verano	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Buick	Verano	Keyless Entry Control Module	√	√	√	√	√	
2014	Buick	Verano	Passenger Presence Module	√	√	√	√		0057
2014	Buick	Verano	Front Seat Heating Control Module	√	√	√	√	√	
2014	Buick	Verano	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2014	Buick	Verano	Left Side Object Detection Control Module	√	√	√		√	
2014	Buick	Verano	Right Side Object Detection Control Module	√	√	√		√	
2014	Buick	Verano	Parking Assist Control Module	√	√	√	√	√	0247
2014	Buick	Verano	Parking Brake Control Module	√	√	√	√	√	0229
2014	Buick	Verano	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Buick	Verano	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2014	Buick	Verano	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Buick	Verano	Radio	√	√	√	√	√	
2014	Buick	Verano	Multimedia Player Interface Module	√	√	√	√		0247
2014	Cadillac	ATS	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0066 0086 0217 0258 0263 0213 0006 0131

2014	Cadillac	ATS	Transmission Control Module	√	√	√	√	√	0016
2014	Cadillac	ATS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2014	Cadillac	ATS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2014	Cadillac	ATS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0160 0232 0150
2014	Cadillac	ATS	Instrument Cluster	√	√	√	√	√	0247
2014	Cadillac	ATS	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Cadillac	ATS	Radio/HVAC Controls		√	√			
2014	Cadillac	ATS	Headlamp Control Module	√	√	√	√	√	0195
2014	Cadillac	ATS	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Cadillac	ATS	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Cadillac	ATS	Passenger Presence Module	√	√	√	√		0057
2014	Cadillac	ATS	Keyless Entry Control Module	√	√	√	√	√	
2014	Cadillac	ATS	Steering Column Lock Control Module	√	√	√	√		
2014	Cadillac	ATS	Transfer Case Control Module	√	√	√	√	√	0099 0100 07B0
2014	Cadillac	ATS	Active Safety Control Module	√	√	√	√	√	
2014	Cadillac	ATS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2014	Cadillac	ATS	Left Side Object Detection Control Module	√	√	√		√	
2014	Cadillac	ATS	Parking Assist Control Module	√	√	√	√	√	0247
2014	Cadillac	ATS	Pedestrian Impact Detection Module	√	√	√	√		0170
2014	Cadillac	ATS	Right Side Object Detection Control Module	√	√	√		√	
2014	Cadillac	ATS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2014	Cadillac	ATS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2014	Cadillac	ATS	Parking Brake Control Module	√	√	√	√	√	0229
2014	Cadillac	ATS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2014	Cadillac	ATS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Cadillac	ATS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2014	Cadillac	ATS	Long Range Radar Sensor Module	√	√	√	√		0260
2014	Cadillac	ATS	Rear Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	ATS	Left Front Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	ATS	Right Front Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	ATS	Human Machine Interface Control Module	√	√	√	√	√	0150
2014	Cadillac	ATS	Media Disc Player	√	√	√	√	√	
2014	Cadillac	ATS	Radio	√	√	√	√	√	0226 0150
2014	Cadillac	ATS	Amplifier	√	√	√	√		
2014	Cadillac	ATS	Trailer Interface Control Module	√	√	√	√	√	0247
2014	Cadillac	ATS	Navigation Control Module	√	√	√	√	√	
2014	Cadillac	CTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0006 0131 0258 0066

2014	Cadillac	CTS	Transmission Control Module	√	√	√	√	√	0016 0084
2014	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0229
2014	Cadillac	CTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261 0134 0111
2014	Cadillac	CTS	Body Control Module	√	√	√	√	√	0263 0261 0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0203 0201 0208 0206 0083 0160 0233 0150
2014	Cadillac	CTS	Theft Deterrent Module	√	√	√	√		
2014	Cadillac	CTS	Instrument Cluster	√	√	√	√	√	0247
2014	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0129 0007
2014	Cadillac	CTS	Radio/HVAC Controls	√	√	√	√	√	
2014	Cadillac	CTS	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Cadillac	CTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2014	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	0100 0099 07B0
2014	Cadillac	CTS	Left Side Object Detection Control Module	√	√	√	√	√	
2014	Cadillac	CTS	Right Side Object Detection Control Module	√	√	√	√	√	
2014	Cadillac	CTS	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	0195
2014	Cadillac	CTS	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2014	Cadillac	CTS	Passenger Presence Module	√	√	√	√		0057
2014	Cadillac	CTS	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2014	Cadillac	CTS	Keyless Entry Control Module	√	√	√	√	√	
2014	Cadillac	CTS	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2014	Cadillac	CTS	Steering Column Lock Control Module	√	√	√	√		
2014	Cadillac	CTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2014	Cadillac	CTS	Trailer Interface Control Module	√	√	√	√	√	0247
2014	Cadillac	CTS	Radio	√	√	√	√	√	0226 0150
2014	Cadillac	CTS	Amplifier	√	√	√	√		
2014	Cadillac	CTS	Human Machine Interface Control Module	√	√	√	√	√	0150
2014	Cadillac	CTS	Active Safety Control Module	√	√	√	√	√	
2014	Cadillac	CTS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2014	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√		0170
2014	Cadillac	CTS	Parking Brake Control Module	√	√	√	√	√	0229
2014	Cadillac	CTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2014	Cadillac	CTS	Long Range Radar Sensor Module	√	√	√	√		0260
2014	Cadillac	CTS	Left Front Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	CTS	Right Front Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	CTS	Rear Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	CTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2014	Cadillac	CTS	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2014	Cadillac	CTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090

2014	Cadillac	CTS	Navigation Control Module	√	√	√	√	√	
2014	Cadillac	CTS	Auxiliary Body Control Module	√	√	√	√	√	0050
2014	Cadillac	CTS	Liftgate Control Module	√	√	√	√		0146
2014	Cadillac	CTS	Remote Control Door Lock Receiver	√	√	√	√	√	0110 0160 0159 079B 0233 0204 0239 0161 0162 0163 0164
2014	Cadillac	CTS	Seat Memory Control Module	√	√	√	√	√	
2014	Cadillac	CTS	Driver Door Switch Panel Control Module	√	√	√	√	√	
2014	Cadillac	CTS	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2014	Cadillac	CTS	Television Antenna Module	√	√	√	√	√	
2014	Cadillac	ELR	Engine Control Module	√	√	√	√	√	0209 0132 0067 0086 0217 0176
2014	Cadillac	ELR	Transmission Control Module	√	√	√	√	√	
2014	Cadillac	ELR	Electronic Brake Control Module	√	√	√	√	√	0263 0371 0111
2014	Cadillac	ELR	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2014	Cadillac	ELR	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0000 0160 0000 0160
2014	Cadillac	ELR	Instrument Cluster	√	√	√	√	√	0247
2014	Cadillac	ELR	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Cadillac	ELR	Radio/HVAC Controls		√	√			
2014	Cadillac	ELR	Hybrid Powertrain Control Module	√	√	√	√	√	
2014	Cadillac	ELR	Auxiliary Transmission Fluid Pump	√	√	√	√		
2014	Cadillac	ELR	Drive Motor Control Module 1	√	√	√	√		
2014	Cadillac	ELR	Drive Motor Control Module 2	√	√	√	√		
2014	Cadillac	ELR	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Cadillac	ELR	Electric A/C Compressor Control Module	√					
2014	Cadillac	ELR	Battery Energy Control Module	√			√		
2014	Cadillac	ELR	Battery Charger Control Module	√			√		
2014	Cadillac	ELR	Coolant Heater Control Module	√	√	√			
2014	Cadillac	ELR	Hybrid Powertrain Control Module 2	√	√	√	√	√	0124 0125 0056 0218 0122 0123 0127
2014	Cadillac	ELR	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Cadillac	ELR	Keyless Entry Control Module	√	√	√	√	√	
2014	Cadillac	ELR	Passenger Presence Module	√	√	√	√		0057
2014	Cadillac	ELR	Steering Column Lock Control Module	√	√	√	√		
2014	Cadillac	ELR	Parking Brake Control Module	√	√	√	√	√	0229
2014	Cadillac	ELR	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2014	Cadillac	ELR	Left Side Object Detection Control Module	√	√	√		√	
2014	Cadillac	ELR	Parking Assist Control Module	√	√	√	√	√	0247
2014	Cadillac	ELR	Right Side Object Detection Control Module	√	√	√		√	

2014	Cadillac	ELR	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2014	Cadillac	ELR	Suspension Control Module	√	√	√	√	√	
2014	Cadillac	ELR	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2014	Cadillac	ELR	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Cadillac	ELR	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2014	Cadillac	ELR	Human Machine Interface Control Module	√	√	√	√	√	0150
2014	Cadillac	ELR	Radio	√	√	√	√	√	0226 0150
2014	Cadillac	ELR	Amplifier	√	√	√	√		
2014	Cadillac	ELR	Distance Sensing Cruise Control Module	√	√	√	√		0047
2014	Cadillac	ELR	Power Steering Control Module	√	√	√	√		0081 0080 0089
2014	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0258
2014	Cadillac	Escalade	Transmission Control Module	√	√	√	√	√	0016
2014	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0225 0111
2014	Cadillac	Escalade	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2014	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0263 0261
2014	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2014	Cadillac	Escalade	Instrument Cluster	√	√	√	√	√	
2014	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2014	Cadillac	Escalade	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	Cadillac	Escalade	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	Cadillac	Escalade	Liftgate Control Module	√	√	√	√		0146
2014	Cadillac	Escalade	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Cadillac	Escalade	Chassis Control Module	√	√	√	√	√	0217
2014	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	0037
2014	Cadillac	Escalade	Passenger Presence Module	√	√	√	√		
2014	Cadillac	Escalade	Auxiliary Body Control Module	√	√	√	√	√	0050
2014	Cadillac	Escalade	Left Side Object Detection Control Module	√	√	√	√	√	
2014	Cadillac	Escalade	Parking Assist Control Module	√	√	√	√	√	
2014	Cadillac	Escalade	Rear Seat Heating Control Module	√	√	√	√	√	
2014	Cadillac	Escalade	Right Side Object Detection Control Module	√	√	√	√	√	
2014	Cadillac	Escalade	Seat Memory Control Module	√	√	√	√	√	
2014	Cadillac	Escalade	Driver Door Switch Panel Control Module	√	√	√	√	√	
2014	Cadillac	Escalade	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2014	Cadillac	Escalade	Radio	√	√	√	√	√	
2014	Cadillac	Escalade	Personal Audio Link Control Module	√	√	√			0231
2014	Cadillac	Escalade	Amplifier	√	√	√	√		
2014	Cadillac	Escalade	Rear Audio Control Module	√	√	√	√		
2014	Cadillac	Escalade	Assist Step Control Module	√	√	√	√	√	
2014	Cadillac	Escalade	Suspension Control Module	√	√	√	√	√	0245

2014	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0258
2014	Cadillac	Escalade ESV	Transmission Control Module	√	√	√	√	√	0016
2014	Cadillac	Escalade ESV	Electronic Brake Control Module	√	√	√	√	√	0225 0111
2014	Cadillac	Escalade ESV	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2014	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0263 0261
2014	Cadillac	Escalade ESV	Theft Deterrent Module	√	√	√	√		
2014	Cadillac	Escalade ESV	Instrument Cluster	√	√	√	√	√	
2014	Cadillac	Escalade ESV	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2014	Cadillac	Escalade ESV	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Cadillac	Escalade ESV	Passenger Presence Module	√	√	√	√		
2014	Cadillac	Escalade ESV	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	Cadillac	Escalade ESV	Transfer Case Control Module	√	√	√	√	√	0037
2014	Cadillac	Escalade ESV	Left Side Object Detection Control Module	√	√	√	√	√	
2014	Cadillac	Escalade ESV	Parking Assist Control Module	√	√	√	√	√	
2014	Cadillac	Escalade ESV	Rear Seat Heating Control Module	√	√	√	√	√	
2014	Cadillac	Escalade ESV	Right Side Object Detection Control Module	√	√	√	√	√	
2014	Cadillac	Escalade ESV	Seat Memory Control Module	√	√	√	√	√	
2014	Cadillac	Escalade ESV	Auxiliary Body Control Module	√	√	√	√	√	0050
2014	Cadillac	Escalade ESV	Chassis Control Module	√	√	√	√	√	0217
2014	Cadillac	Escalade ESV	Driver Door Switch Panel Control Module	√	√	√	√	√	
2014	Cadillac	Escalade ESV	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2014	Cadillac	Escalade ESV	Radio	√	√	√	√	√	
2014	Cadillac	Escalade ESV	Personal Audio Link Control Module	√	√	√			0231
2014	Cadillac	Escalade ESV	Amplifier	√	√	√	√		
2014	Cadillac	Escalade ESV	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	Cadillac	Escalade ESV	Liftgate Control Module	√	√	√	√		0146
2014	Cadillac	Escalade ESV	Rear Audio Control Module	√	√	√	√		
2014	Cadillac	Escalade ESV	Suspension Control Module	√	√	√	√	√	0245
2014	Cadillac	Escalade ESV	Assist Step Control Module	√	√	√	√	√	
2014	Cadillac	SRX	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2014	Cadillac	SRX	Transmission Control Module	√	√	√	√	√	0016
2014	Cadillac	SRX	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2014	Cadillac	SRX	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Cadillac	SRX	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0156 0333 0158
2014	Cadillac	SRX	Instrument Cluster	√	√	√	√	√	0247
2014	Cadillac	SRX	HVAC Control Module	√	√	√	√	√	0007 0129

2014	Cadillac	SRX	Radio/HVAC Controls	√	√	√	√	√	
2014	Cadillac	SRX	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Cadillac	SRX	Headlamp Control Module	√	√	√	√	√	0195
2014	Cadillac	SRX	Liftgate Control Module	√	√	√	√		0146
2014	Cadillac	SRX	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Cadillac	SRX	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Cadillac	SRX	Suspension Control Module	√	√	√	√	√	
2014	Cadillac	SRX	Steering Column Lock Control Module	√	√	√	√		
2014	Cadillac	SRX	Rear Differential Clutch Control Module	√	√	√	√	√	
2014	Cadillac	SRX	Keyless Entry Control Module	√	√	√	√	√	
2014	Cadillac	SRX	Passenger Presence Module	√	√	√	√		0057
2014	Cadillac	SRX	Trailer Interface Control Module	√	√	√	√	√	0247
2014	Cadillac	SRX	Rear Seat Heating Control Module	√	√	√	√	√	
2014	Cadillac	SRX	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2014	Cadillac	SRX	Parking Assist Control Module	√	√	√	√	√	0247
2014	Cadillac	SRX	Left Side Object Detection Control Module	√	√	√		√	
2014	Cadillac	SRX	Active Safety Control Module	√	√	√	√	√	
2014	Cadillac	SRX	Right Side Object Detection Control Module	√	√	√		√	
2014	Cadillac	SRX	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2014	Cadillac	SRX	Parking Brake Control Module	√	√	√	√	√	0229
2014	Cadillac	SRX	Long Range Radar Sensor Module	√	√	√	√		0260
2014	Cadillac	SRX	Rear Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	SRX	Right Front Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	SRX	Left Front Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	SRX	Radio	√	√	√	√	√	0226 0150
2014	Cadillac	SRX	Media Disc Player	√	√	√	√	√	
2014	Cadillac	SRX	Human Machine Interface Control Module	√	√	√	√	√	0150
2014	Cadillac	SRX	Amplifier	√	√	√	√		
2014	Cadillac	SRX	Navigation Control Module	√	√	√	√	√	
2014	Cadillac	XTS	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2014	Cadillac	XTS	Transmission Control Module	√	√	√	√	√	0016
2014	Cadillac	XTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2014	Cadillac	XTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2014	Cadillac	XTS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0000 0150 0000 0150
2014	Cadillac	XTS	Instrument Cluster	√	√	√	√	√	0247
2014	Cadillac	XTS	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Cadillac	XTS	Radio/HVAC Controls		√	√			
2014	Cadillac	XTS	Active Safety Control Module	√	√	√	√	√	

2014	Cadillac	XTS	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2014	Cadillac	XTS	Left Side Object Detection Control Module	√	√	√		√	
2014	Cadillac	XTS	Parking Assist Control Module	√	√	√	√	√	0247 0271
2014	Cadillac	XTS	Right Side Object Detection Control Module	√	√	√		√	
2014	Cadillac	XTS	Passenger Presence Module	√	√	√	√		0057
2014	Cadillac	XTS	Keyless Entry Control Module	√	√	√	√	√	
2014	Cadillac	XTS	Headlamp Control Module	√	√	√	√	√	0195
2014	Cadillac	XTS	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Cadillac	XTS	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Cadillac	XTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2014	Cadillac	XTS	Seat Memory Control Module - Passenger	√	√	√	√	√	
2014	Cadillac	XTS	Parking Brake Control Module	√	√	√	√	√	0229
2014	Cadillac	XTS	Suspension Control Module	√	√	√	√	√	0114 0198 0245
2014	Cadillac	XTS	Radio	√	√	√	√	√	0226 0150
2014	Cadillac	XTS	Long Range Radar Sensor Module	√	√	√	√		0260
2014	Cadillac	XTS	Left Front Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	XTS	Rear Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	XTS	Right Front Short Range Radar Sensor Module	√	√	√			
2014	Cadillac	XTS	Amplifier	√	√	√	√		
2014	Cadillac	XTS	Human Machine Interface Control Module	√	√	√	√	√	0150
2014	Cadillac	XTS	Media Disc Player	√	√	√	√	√	
2014	Cadillac	XTS	Rear Differential Clutch Control Module	√	√	√	√	√	
2014	Cadillac	XTS	Power Steering Control Module	√	√	√	√	√	0089
2014	Cadillac	XTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2014	Cadillac	XTS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Aveo	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006 0144 0258 0139 0133 0210 0383 0098 0096 0094 0216 0130 0143 0265 0147 0237 0045 0393 0043 0135 0128 0173 0069 0087 079C
2014	Chevrolet	Aveo	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Chevrolet	Aveo	Electronic Brake Control Module	√	√	√	√	√	0090
2014	Chevrolet	Aveo	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Chevrolet	Aveo	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	Chevrolet	Aveo	Instrument Cluster	√	√	√	√	√	0247
2014	Chevrolet	Aveo	HVAC Control Module	√	√	√	√	√	
2014	Chevrolet	Aveo	Keyless Entry Control Module				√		
2014	Chevrolet	Aveo	Fuel Injector Control Module	√	√	√	√	√	



2014	Chevrolet	Aveo	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2014	Chevrolet	Aveo	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Chevrolet	Aveo	Front Seat Heating Control Module	√	√	√	√	√	
2014	Chevrolet	Aveo	Power Steering Control Module	√	√	√	√	√	0207
2014	Chevrolet	Aveo	Parking Assist Control Module	√	√	√	√	√	0247
2014	Chevrolet	Aveo	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Chevrolet	Aveo	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Aveo	Radio	√	√	√	√	√	
2014	Chevrolet	Beat	Engine Control Module	√	√	√	√	√	0133 0210 0098 0094 0216 0265 0237 0086 0393 0173 0069 0087 0209 0156 0147 0217
2014	Chevrolet	Beat	Transmission Control Module	√	√	√	√	√	
2014	Chevrolet	Beat	Electronic Brake Control Module	√	√	√	√	√	0090
2014	Chevrolet	Beat	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Chevrolet	Beat	Instrument Cluster	√	√	√	√	√	
2014	Chevrolet	Beat	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2014	Chevrolet	Beat	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Chevrolet	Beat	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Beat	Power Steering Control Module	√	√	√	√		0089
2014	Chevrolet	Beat	Fuel Injector Control Module	√	√	√	√	√	
2014	Chevrolet	Camaro	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0006
2014	Chevrolet	Camaro	Transmission Control Module	√	√	√	√	√	0016
2014	Chevrolet	Camaro	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2014	Chevrolet	Camaro	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Chevrolet	Camaro	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0156 0333 0158
2014	Chevrolet	Camaro	Instrument Cluster	√	√	√	√	√	0247
2014	Chevrolet	Camaro	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Chevrolet	Camaro	Head-Up Display Module	√	√	√	√	√	
2014	Chevrolet	Camaro	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Chevrolet	Camaro	Headlamp Control Module	√	√	√	√	√	0195
2014	Chevrolet	Camaro	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Chevrolet	Camaro	Passenger Presence Module	√	√	√	√	√	0057
2014	Chevrolet	Camaro	Folding Top Control Module	√	√	√	√	√	
2014	Chevrolet	Camaro	Front Seat Heating Control Module	√	√	√	√	√	
2014	Chevrolet	Camaro	Parking Assist Control Module	√	√	√	√	√	0247
2014	Chevrolet	Camaro	Radio	√	√	√	√	√	
2014	Chevrolet	Camaro	Mobile Telephone Control Module	√	√	√	√	√	0247

2014	Chevrolet	Camaro	Power Steering Control Module	√	√	√	√		0089
2014	Chevrolet	Camaro	Suspension Control Module	√	√	√	√	√	0245
2014	Chevrolet	Camaro	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Camaro	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Chevrolet	Camaro	Parking Brake Control Module	√	√	√	√	√	0229
2014	Chevrolet	Camaro	Auxiliary Gauge Module	√	√	√	√	√	
2014	Chevrolet	Caprice	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2014	Chevrolet	Caprice	Transmission Control Module	√	√	√	√	√	0016
2014	Chevrolet	Caprice	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2014	Chevrolet	Caprice	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2014	Chevrolet	Caprice	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0209 0156 0209 0132
2014	Chevrolet	Caprice	Instrument Cluster	√	√	√	√	√	0247 0145
2014	Chevrolet	Caprice	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Chevrolet	Caprice	HVAC Controls	√	√	√	√	√	
2014	Chevrolet	Caprice	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Chevrolet	Caprice	Steering Column Lock Control Module	√	√	√	√		
2014	Chevrolet	Caprice	Headlamp Control Module	√	√	√	√	√	0195
2014	Chevrolet	Caprice	Passenger Presence Module	√	√	√	√		0057
2014	Chevrolet	Caprice	Trailer Interface Control Module	√	√	√	√	√	0247
2014	Chevrolet	Caprice	Power Steering Control Module	√	√	√	√		0081
2014	Chevrolet	Caprice	Parking Brake Control Module	√	√	√	√	√	0229
2014	Chevrolet	Caprice	Frontview Camera Module	√	√	√	√	√	0205 0049
2014	Chevrolet	Caprice	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Caprice	Radio Controls	√	√	√	√	√	0247
2014	Chevrolet	Caprice	Radio	√	√	√	√	√	
2014	Chevrolet	Caprice	Parking Assist Control Module	√	√	√	√	√	0247
2014	Chevrolet	Captiva	Engine Control Module	√	√	√	√	√	0156 0209 0098 0216 0224 0449 0130 0143 0450 0265 0147 0108 0452 0237 0044 0045 0086 0043 0135 0453 0454 0455 0456 0263 0132 0067 0217 0213 0006 0131 0258 0212
2014	Chevrolet	Captiva	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Chevrolet	Captiva	Electronic Brake Control Module	√	√	√	√	√	0090 0111
2014	Chevrolet	Captiva	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2014	Chevrolet	Captiva	Body Control Module	√	√	√	√	√	0242 0263 0261
2014	Chevrolet	Captiva	Theft Deterrent Module	√	√	√	√		

2014	Chevrolet	Captiva	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√		
2014	Chevrolet	Captiva	Instrument Cluster	√	√	√	√	√	
2014	Chevrolet	Captiva	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Chevrolet	Captiva	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2014	Chevrolet	Captiva	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	Chevrolet	Captiva	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Chevrolet	Captiva	Remote Control Door Lock Receiver	√	√	√	√	√	0110 0160 0159 079B 0233 0204 0239 0161 0162 0163 0164
2014	Chevrolet	Captiva	Passenger Presence Module	√	√	√	√		0057
2014	Chevrolet	Captiva	Front Seat Heating Control Module	√	√	√	√		
2014	Chevrolet	Captiva	Parking Assist Control Module	√	√	√	√	√	
2014	Chevrolet	Captiva	Parking Brake Control Module	√	√	√	√	√	0229
2014	Chevrolet	Captiva	Radio	√	√	√	√	√	
2014	Chevrolet	Captiva	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Chevrolet	Captiva	Auxiliary Body Control Module	√	√	√	√	√	0050
2014	Chevrolet	Captiva	Variable Power Steering Control Module					√	
2014	Chevrolet	Captiva	Headlamp Control Module	√	√	√	√	√	0195 0065
2014	Chevrolet	Captiva	Mobile Telephone Control Module	√	√	√	√	√	
2014	Chevrolet	Cheyenne	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2014	Chevrolet	Cheyenne	Transmission Control Module	√	√	√	√	√	0016
2014	Chevrolet	Cheyenne	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2014	Chevrolet	Cheyenne	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2014	Chevrolet	Cheyenne	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0160 0333 0150
2014	Chevrolet	Cheyenne	Instrument Cluster	√	√	√	√	√	0247
2014	Chevrolet	Cheyenne	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Chevrolet	Cheyenne	HVAC Controls	√	√	√	√	√	
2014	Chevrolet	Cheyenne	Transfer Case Control Module	√	√	√	√	√	0037
2014	Chevrolet	Cheyenne	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2014	Chevrolet	Cheyenne	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Chevrolet	Cheyenne	Passenger Presence Module	√	√	√	√	√	0057
2014	Chevrolet	Cheyenne	Power Steering Control Module	√	√	√	√	√	0150
2014	Chevrolet	Cheyenne	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2014	Chevrolet	Cheyenne	Left Side Object Detection Control Module	√	√	√	√	√	
2014	Chevrolet	Cheyenne	Parking Assist Control Module	√	√	√	√	√	0247
2014	Chevrolet	Cheyenne	Seat Memory Control Module - Driver	√	√	√	√	√	0310

2014	Chevrolet	Cheyenne	Parking Brake Control Module	√	√	√	√	√	0229
2014	Chevrolet	Cheyenne	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Cheyenne	Radio	√	√	√	√	√	0226 0150
2014	Chevrolet	Cheyenne	Radio Controls	√	√	√	√		0241
2014	Chevrolet	Cheyenne	Human Machine Interface Control Module	√	√	√	√	√	0150
2014	Chevrolet	Cheyenne	Media Disc Player	√	√	√	√	√	
2014	Chevrolet	Cheyenne	Amplifier	√	√	√	√		
2014	Chevrolet	Cobalt	Engine Control Module	√	√	√	√	√	0133 0156 0210 0383 0098 0096 0094 0216 0130 0143 0265 0147 0237 0045 0086 0393 0043 0135 0128 0173 0209 0132 0067 0263 0217 0138
2014	Chevrolet	Cobalt	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Chevrolet	Cobalt	Electronic Brake Control Module	√	√	√	√	√	0090
2014	Chevrolet	Cobalt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Chevrolet	Cobalt	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	Chevrolet	Cobalt	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2014	Chevrolet	Cobalt	Instrument Cluster	√	√	√	√	√	0247
2014	Chevrolet	Cobalt	HVAC Control Module	√	√	√	√	√	
2014	Chevrolet	Cobalt	Front Seat Heating Control Module	√	√	√	√	√	
2014	Chevrolet	Cobalt	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Chevrolet	Cobalt	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Cobalt	Radio	√	√	√	√	√	
2014	Chevrolet	Cobalt	Parking Assist Control Module	√	√	√	√	√	0247
2014	Chevrolet	Colorado	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139 0210 0224 0130 0222 0060 0044 0045 0097 0001 0012 0153 0030
2014	Chevrolet	Colorado	Transmission Control Module	√	√	√	√	√	0016
2014	Chevrolet	Colorado	Electronic Brake Control Module	√	√	√	√	√	0090 0112
2014	Chevrolet	Colorado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Chevrolet	Colorado	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160 0159 0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0033
2014	Chevrolet	Colorado	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2014	Chevrolet	Colorado	Instrument Cluster	√	√	√	√	√	0247
2014	Chevrolet	Colorado	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259

2014	Chevrolet	Colorado	Transfer Case Control Module	√	√	√	√	√	0037
2014	Chevrolet	Colorado	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Chevrolet	Colorado	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Colorado	Radio	√	√	√	√	√	
2014	Chevrolet	Colorado	Parking Assist Control Module	√	√	√	√	√	0247
2014	Chevrolet	Corvette	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2014	Chevrolet	Corvette	Transmission Control Module	√	√	√	√	√	0016
2014	Chevrolet	Corvette	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2014	Chevrolet	Corvette	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2014	Chevrolet	Corvette	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0160 0233 0150
2014	Chevrolet	Corvette	Instrument Cluster	√	√	√	√	√	0247
2014	Chevrolet	Corvette	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Chevrolet	Corvette	Radio/HVAC Controls	√	√	√	√	√	
2014	Chevrolet	Corvette	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Chevrolet	Corvette	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Chevrolet	Corvette	Rear Differential Clutch Control Module	√	√	√	√	√	0113
2014	Chevrolet	Corvette	Steering Column Lock Control Module	√	√	√	√		
2014	Chevrolet	Corvette	Passenger Presence Module	√	√	√	√	√	0057
2014	Chevrolet	Corvette	Keyless Entry Control Module	√	√	√	√	√	
2014	Chevrolet	Corvette	Human Machine Interface Control Module	√	√	√	√	√	0150
2014	Chevrolet	Corvette	Radio	√	√	√	√	√	0226 0150
2014	Chevrolet	Corvette	Amplifier	√	√	√	√		
2014	Chevrolet	Corvette	Folding Top Control Module	√	√	√	√	√	
2014	Chevrolet	Corvette	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2014	Chevrolet	Corvette	Seat Memory Control Module - Passenger	√	√	√	√	√	
2014	Chevrolet	Corvette	Parking Brake Control Module	√	√	√	√	√	0229
2014	Chevrolet	Corvette	Suspension Control Module	√	√	√	√	√	0245
2014	Chevrolet	Corvette	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Corvette	Power Steering Control Module	√	√	√	√		0081 0080 0089 0084
2014	Chevrolet	Corvette	Inside Rearview Mirror	√	√	√	√	√	

2014	Chevrolet	Cruze	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006 0144 0258 0139 0210 0222 0224 0130 0147 0060 0044 0045 0097 0068 0043 0173 0128 0098 0216 0449 0143 0450 0265 0108 0452 0237 0135 0453 0454 0455 0456 0219 0073 0072 0070 0071 0117 0118 0119 0120 0472 0178 0180 0182 0184
2014	Chevrolet	Cruze	Transmission Control Module	√	√	√	√	√	0017 0036 0020 0084
2014	Chevrolet	Cruze	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2014	Chevrolet	Cruze	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Chevrolet	Cruze	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	Chevrolet	Cruze	Instrument Cluster	√	√	√	√	√	0247
2014	Chevrolet	Cruze	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Chevrolet	Cruze	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2014	Chevrolet	Cruze	Front Seat Heating Control Module	√	√	√	√	√	
2014	Chevrolet	Cruze	Left Side Object Detection Control Module	√	√	√		√	
2014	Chevrolet	Cruze	Parking Assist Control Module	√	√	√	√	√	0247
2014	Chevrolet	Cruze	Right Side Object Detection Control Module	√	√	√		√	
2014	Chevrolet	Cruze	Passenger Presence Module	√	√	√	√		0057
2014	Chevrolet	Cruze	Keyless Entry Control Module	√	√	√	√	√	
2014	Chevrolet	Cruze	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Chevrolet	Cruze	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Chevrolet	Cruze	Mobile Telephone Control Module	√	√	√	√	√	0247
2014	Chevrolet	Cruze	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2014	Chevrolet	Cruze	Trailer Interface Control Module	√	√	√	√	√	0247
2014	Chevrolet	Cruze	Power Steering Control Module	√	√	√	√		0081 0080 0089
2014	Chevrolet	Cruze	Radio	√	√	√	√	√	
2014	Chevrolet	Cruze	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Cruze	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Chevrolet	Cruze	Multimedia Player Interface Module	√	√	√	√		0247
2014	Chevrolet	Cruze	Steering Column Lock Control Module	√	√	√	√		
2014	Chevrolet	Cruze	Fuel Injector Control Module	√			√	√	
2014	Chevrolet	Enjoy	Engine Control Module	√	√	√	√	√	0210 0173 0066 0060 0086 0084

2014	Chevrolet	Enjoy	Electronic Brake Control Module	√	√	√	√	√	
2014	Chevrolet	Enjoy	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√		0172
2014	Chevrolet	Enjoy	Instrument Cluster		√	√			
2014	Chevrolet	Equinox	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2014	Chevrolet	Equinox	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2014	Chevrolet	Equinox	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2014	Chevrolet	Equinox	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Chevrolet	Equinox	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	Chevrolet	Equinox	Instrument Cluster	√	√	√	√	√	0247
2014	Chevrolet	Equinox	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Chevrolet	Equinox	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Chevrolet	Equinox	Power Steering Control Module	√	√	√	√		0081 0080 0089
2014	Chevrolet	Equinox	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Equinox	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Chevrolet	Equinox	Liftgate Control Module	√	√	√	√		0146
2014	Chevrolet	Equinox	Rear Differential Clutch Control Module	√	√	√	√		0155
2014	Chevrolet	Equinox	Passenger Presence Module	√	√	√	√		0057
2014	Chevrolet	Equinox	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2014	Chevrolet	Equinox	Left Side Object Detection Control Module	√	√	√		√	
2014	Chevrolet	Equinox	Right Side Object Detection Control Module	√	√	√		√	
2014	Chevrolet	Equinox	Parking Assist Control Module	√	√	√	√	√	0247
2014	Chevrolet	Equinox	Seat Memory Control Module	√	√	√	√	√	0310
2014	Chevrolet	Equinox	Front Seat Heating Control Module	√	√	√	√	√	
2014	Chevrolet	Equinox	Radio	√	√	√	√	√	
2014	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0209 0132 0067 0086 0217 0258 0156 0263 0237 0210 0115 0058 0042 0044 0088 0219 0073 0072 0070 0071 0117 0118 0119 0120 0240 0178 0180 0182 0184 0186 0188 0190 0192 0138 0137 0179 0181 0183 0185 0187
2014	Chevrolet	Express	Transmission Control Module	√	√	√	√	√	0016
2014	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0225 0111
2014	Chevrolet	Express	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√		0172 0261
2014	Chevrolet	Express	Body Control Module	√	√	√	√	√	0263 0261
2014	Chevrolet	Express	Theft Deterrent Module	√	√	√	√		
2014	Chevrolet	Express	Instrument Cluster	√	√	√	√	√	
2014	Chevrolet	Express	Passenger Presence Module	√	√	√	√		0057

2014	Chevrolet	Express	Rollover Sensor Module	√	√	√	√		0172
2014	Chevrolet	Express	Chime Alarm Control Module	√	√	√		√	
2014	Chevrolet	Express	Radio	√	√	√	√	√	
2014	Chevrolet	Express	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	Chevrolet	Express	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Chevrolet	Express	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	Chevrolet	Express	Auxiliary Heater Control Module	√	√	√	√	√	
2014	Chevrolet	Express	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2014	Chevrolet	Express	Parking Assist Control Module	√	√	√	√	√	0247
2014	Chevrolet	Express	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Chevrolet	Impala	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2014	Chevrolet	Impala	Transmission Control Module	√	√	√	√	√	0016 0017 0036
2014	Chevrolet	Impala	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2014	Chevrolet	Impala	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261 0134 0111
2014	Chevrolet	Impala	Body Control Module	√	√	√	√	√	0263 0261 0242 0203 0201 0208 0206 0083 0160 0233 0159
2014	Chevrolet	Impala	Theft Deterrent Module	√	√	√	√		
2014	Chevrolet	Impala	Instrument Cluster	√	√	√	√	√	0247
2014	Chevrolet	Impala	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Chevrolet	Impala	HVAC Controls	√	√	√	√	√	
2014	Chevrolet	Impala	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Chevrolet	Impala	Passenger Presence Module	√	√	√	√		0057
2014	Chevrolet	Impala	Keyless Entry Control Module	√	√	√	√	√	
2014	Chevrolet	Impala	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2014	Chevrolet	Impala	Left Side Object Detection Control Module	√	√	√		√	
2014	Chevrolet	Impala	Parking Assist Control Module	√	√	√	√	√	0247 0271
2014	Chevrolet	Impala	Right Side Object Detection Control Module	√	√	√		√	
2014	Chevrolet	Impala	Seat Memory Control Module	√	√	√	√	√	0310
2014	Chevrolet	Impala	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Chevrolet	Impala	Parking Brake Control Module	√	√	√	√	√	0229
2014	Chevrolet	Impala	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Impala	Distance Sensing Cruise Control Module	√	√	√	√		0047
2014	Chevrolet	Impala	Radio	√	√	√	√	√	0226 0150
2014	Chevrolet	Impala	Human Machine Interface Control Module	√	√	√	√	√	0150
2014	Chevrolet	Impala	Amplifier	√	√	√	√		
2014	Chevrolet	Impala	Power Steering Control Module	√	√	√	√		0081 0080 0089
2014	Chevrolet	Impala	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2014	Chevrolet	Impala	Drive Motor Control Module	√	√	√	√		



2014	Chevrolet	Impala	Battery Energy Control Module	√			√		
2014	Chevrolet	Impala	Radio Controls	√	√	√	√		0241
2014	Chevrolet	Impala	Steering Column Lock Control Module	√	√	√	√		
2014	Chevrolet	Impala	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	Chevrolet	Impala	Front Seat Heating Control Module	√	√	√	√		
2014	Chevrolet	Impala	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	Chevrolet	Lacetti	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2014	Chevrolet	Lacetti	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Chevrolet	Lacetti	Electronic Brake Control Module	√	√	√	√	√	
2014	Chevrolet	Lacetti	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2014	Chevrolet	Lacetti	Variable Power Steering Control Module				√	√	
2014	Chevrolet	Lacetti	Fuel Injector Control Module	√	√	√	√	√	
2014	Chevrolet	Lumina	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0258
2014	Chevrolet	Lumina	Transmission Control Module	√	√	√	√	√	0016
2014	Chevrolet	Lumina	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2014	Chevrolet	Lumina	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2014	Chevrolet	Lumina	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0156 0232 0158
2014	Chevrolet	Lumina	Instrument Cluster	√	√	√	√	√	0247 0145
2014	Chevrolet	Lumina	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Chevrolet	Lumina	HVAC Controls	√	√	√	√	√	
2014	Chevrolet	Lumina	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Chevrolet	Lumina	Steering Column Lock Control Module	√	√	√	√		
2014	Chevrolet	Lumina	Head-Up Display Module	√	√	√	√	√	
2014	Chevrolet	Lumina	Headlamp Control Module	√	√	√	√	√	0195
2014	Chevrolet	Lumina	Suspension Control Module	√	√	√	√	√	0245
2014	Chevrolet	Lumina	Keyless Entry Control Module	√	√	√	√	√	
2014	Chevrolet	Lumina	Trailer Interface Control Module	√	√	√	√	√	0247
2014	Chevrolet	Lumina	Fuel Injector Control Module	√			√	√	
2014	Chevrolet	Lumina	Power Steering Control Module	√	√	√	√		0081
2014	Chevrolet	Lumina	Frontview Camera Module	√	√	√	√	√	0205 0049
2014	Chevrolet	Lumina	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Lumina	Left Side Object Detection Control Module	√	√	√		√	
2014	Chevrolet	Lumina	Right Side Object Detection Control Module	√	√	√		√	
2014	Chevrolet	Lumina	Radio	√	√	√	√	√	
2014	Chevrolet	Lumina	Radio Controls	√	√	√	√	√	0247
2014	Chevrolet	Lumina	Parking Assist Control Module	√	√	√	√	√	0247
2014	Chevrolet	Lumina	Parking Brake Control Module	√	√	√	√	√	0229

2014	Chevrolet	Malibu	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139 0133 0210 0383 0098 0096 0094 0216 0130 0143 0265 0147 0237 0045 0393 0043 0135 0128 0173 0066 0258 0213 0212 0020 076D
2014	Chevrolet	Malibu	Transmission Control Module	√	√	√	√	√	0017 0036 0020 0084
2014	Chevrolet	Malibu	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2014	Chevrolet	Malibu	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Chevrolet	Malibu	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0160 0203 0150
2014	Chevrolet	Malibu	Instrument Cluster	√	√	√	√	√	0247
2014	Chevrolet	Malibu	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Chevrolet	Malibu	Suspension Control Module	√	√	√	√	√	
2014	Chevrolet	Malibu	Battery Energy Control Module	√			√		
2014	Chevrolet	Malibu	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Chevrolet	Malibu	Steering Column Lock Control Module	√	√	√	√		
2014	Chevrolet	Malibu	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Chevrolet	Malibu	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Chevrolet	Malibu	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Malibu	Frontview Camera Module	√	√	√	√	√	0205 0049
2014	Chevrolet	Malibu	Passenger Presence Module	√	√	√	√		0057
2014	Chevrolet	Malibu	Keyless Entry Control Module	√	√	√	√	√	
2014	Chevrolet	Malibu	Headlamp Control Module	√	√	√	√	√	0195
2014	Chevrolet	Malibu	Mobile Telephone Control Module	√	√	√	√	√	0247
2014	Chevrolet	Malibu	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2014	Chevrolet	Malibu	Parking Brake Control Module	√	√	√	√	√	0229
2014	Chevrolet	Malibu	Front Seat Heating Control Module	√	√	√	√	√	
2014	Chevrolet	Malibu	Left Side Object Detection Control Module	√	√	√		√	
2014	Chevrolet	Malibu	Parking Assist Control Module	√	√	√	√	√	0247
2014	Chevrolet	Malibu	Seat Memory Control Module	√	√	√	√	√	0310
2014	Chevrolet	Malibu	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2014	Chevrolet	Malibu	Radio	√	√	√	√	√	
2014	Chevrolet	Malibu	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2014	Chevrolet	Malibu	Drive Motor Control Module	√	√	√	√		
2014	Chevrolet	Malibu	Rear Seat Heating Control Module	√	√	√	√	√	
2014	Chevrolet	Malibu	Fuel Injector Control Module	√	√	√	√	√	
2014	Chevrolet	Malibu	Multimedia Player Interface Module	√	√	√	√		0247
2014	Chevrolet	N300	Engine Control Module	√	√	√	√	√	0069 0087 079C

2014	Chevrolet	N300	Electronic Brake Control Module	√	√	√	√	√	
2014	Chevrolet	N300	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2014	Chevrolet	Onix	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139
2014	Chevrolet	Onix	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Chevrolet	Onix	Electronic Brake Control Module	√	√	√	√	√	0090
2014	Chevrolet	Onix	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2014	Chevrolet	Onix	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	Chevrolet	Onix	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2014	Chevrolet	Onix	Instrument Cluster	√	√	√	√	√	0247
2014	Chevrolet	Onix	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Chevrolet	Onix	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Onix	Radio	√	√	√	√	√	
2014	Chevrolet	Onix	Parking Assist Control Module	√	√	√	√	√	0247
2014	Chevrolet	Optra	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2014	Chevrolet	Optra	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Chevrolet	Optra	Electronic Brake Control Module	√	√	√	√	√	
2014	Chevrolet	Optra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2014	Chevrolet	Optra	Body Control Module	√	√	√	√	√	
2014	Chevrolet	Optra	Instrument Cluster	√	√	√	√	√	
2014	Chevrolet	Orlando	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006 0144 0258 0139 0098 0216 0224 0449 0130 0143 0450 0265 0147 0108 0452 0237 0044 0045 0043 0135 0453 0454 0455 0456 0212
2014	Chevrolet	Orlando	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Chevrolet	Orlando	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2014	Chevrolet	Orlando	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Chevrolet	Orlando	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	Chevrolet	Orlando	Instrument Cluster	√	√	√	√	√	0247
2014	Chevrolet	Orlando	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Chevrolet	Orlando	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Chevrolet	Orlando	Keyless Entry Control Module	√	√	√	√	√	
2014	Chevrolet	Orlando	Front Seat Heating Control Module	√	√	√	√	√	
2014	Chevrolet	Orlando	Parking Assist Control Module	√	√	√	√	√	0247
2014	Chevrolet	Orlando	Rear Seat Heating Control Module	√	√	√	√	√	

2014	Chevrolet	Orlando	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Chevrolet	Orlando	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Orlando	Power Steering Control Module	√	√	√	√		0081 0080 0089
2014	Chevrolet	Orlando	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2014	Chevrolet	Orlando	Mobile Telephone Control Module	√	√	√	√	√	0247
2014	Chevrolet	Orlando	Radio	√	√	√	√	√	
2014	Chevrolet	Orlando	Multimedia Player Interface Module	√	√	√	√		0247
2014	Chevrolet	Orlando	Fuel Injector Control Module	√	√	√	√	√	
2014	Chevrolet	Prisma	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139
2014	Chevrolet	Prisma	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Chevrolet	Prisma	Electronic Brake Control Module	√	√	√	√	√	0090
2014	Chevrolet	Prisma	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2014	Chevrolet	Prisma	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	Chevrolet	Prisma	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2014	Chevrolet	Prisma	Instrument Cluster	√	√	√	√	√	0247
2014	Chevrolet	Prisma	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Chevrolet	Prisma	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Prisma	Radio	√	√	√	√	√	
2014	Chevrolet	Prisma	Parking Assist Control Module	√	√	√	√	√	0247
2014	Chevrolet	S10	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139 0210 0224 0130 0222 0060 0044 0045 0097 0081 0080 0089
2014	Chevrolet	S10	Transmission Control Module	√	√	√	√	√	0016
2014	Chevrolet	S10	Electronic Brake Control Module	√	√	√	√	√	0090 0112
2014	Chevrolet	S10	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Chevrolet	S10	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160 0159 0199 0239 0161 0162 0163 0164 0165 0156 0167 0168 0222
2014	Chevrolet	S10	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2014	Chevrolet	S10	Instrument Cluster	√	√	√	√	√	0247
2014	Chevrolet	S10	Transfer Case Control Module	√	√	√	√	√	0037
2014	Chevrolet	S10	Trailer Interface Control Module	√	√	√	√	√	0247
2014	Chevrolet	S10	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Chevrolet	S10	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	S10	Parking Assist Control Module	√	√	√	√	√	0247
2014	Chevrolet	S10	Radio	√	√	√	√	√	

2014	Chevrolet	Sail	Engine Control Module	√	√	√	√	√	0087 0209 0217 0133 0210 0098 0096 0094 0216 0143 0265 0173
2014	Chevrolet	Sail	Transmission Control Module	√	√	√	√	√	0200 0157 0153 0136
2014	Chevrolet	Sail	Electronic Brake Control Module	√	√	√	√	√	
2014	Chevrolet	Sail	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√		0064 0040 0063 0039 0227 0172 0062 0038
2014	Chevrolet	Sail	Keyless Entry Control Module						0204
2014	Chevrolet	Savana	Engine Control Module	√	√	√	√	√	0209 0132 0067 0086 0217 0258 0156 0263 0237 0210 0115 0058 0042 0044 0088 0219 0073 0072 0070 0071 0117 0118 0119 0120 0240 0178 0180 0182 0184 0186 0188 0190 0192 0138 0137 0179 0181 0183 0185 0187
2014	Chevrolet	Savana	Transmission Control Module	√	√	√	√	√	0016
2014	Chevrolet	Savana	Electronic Brake Control Module	√	√	√	√	√	0225 0111
2014	Chevrolet	Savana	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√		0172 0261
2014	Chevrolet	Savana	Body Control Module	√	√	√	√	√	0263 0261
2014	Chevrolet	Savana	Theft Deterrent Module	√	√	√	√		
2014	Chevrolet	Savana	Instrument Cluster	√	√	√	√	√	
2014	Chevrolet	Savana	Passenger Presence Module	√	√	√	√		0057
2014	Chevrolet	Savana	Rollover Sensor Module	√	√	√	√		0172
2014	Chevrolet	Savana	Chime Alarm Control Module	√	√	√		√	
2014	Chevrolet	Savana	Radio	√	√	√	√	√	
2014	Chevrolet	Savana	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	Chevrolet	Savana	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Chevrolet	Savana	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	Chevrolet	Savana	Parking Assist Control Module	√	√	√	√	√	0247
2014	Chevrolet	Savana	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Chevrolet	Savana	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2014	Chevrolet	Savana	Auxiliary Heater Control Module	√	√	√	√	√	

2014	Chevrolet	Silverado	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0139 0237 0210 0115 0058 0042 0044 0088 0219 0073 0072 0070 0071 0117 0118 0119 0120 0240 0178 0180 0182 0184 0186 0188 0190 0192 0138 0137 0179 0181 0183 0185 0187 0189 0191 0193 0232 0220 0156 0076 0020
2014	Chevrolet	Silverado	Transmission Control Module	√	√	√	√	√	0016 0019
2014	Chevrolet	Silverado	Electronic Brake Control Module	√	√	√	√	√	0225 0111 0090 0277
2014	Chevrolet	Silverado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261 0134 0111
2014	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0263 0261 0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0203 0201 0208 0206 0083 0160 0233 0150
2014	Chevrolet	Silverado	Theft Deterrent Module	√	√	√	√	√	
2014	Chevrolet	Silverado	Instrument Cluster	√	√	√	√	√	0247
2014	Chevrolet	Silverado	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2014	Chevrolet	Silverado	HVAC Controls	√	√	√	√	√	
2014	Chevrolet	Silverado	Transfer Case Control Module	√	√	√	√	√	0037
2014	Chevrolet	Silverado	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Chevrolet	Silverado	Trailer Brake Control Module	√	√	√	√	√	
2014	Chevrolet	Silverado	Radio	√	√	√	√	√	0226 0150
2014	Chevrolet	Silverado	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	Chevrolet	Silverado	Passenger Presence Module	√	√	√	√	√	0057
2014	Chevrolet	Silverado	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	Chevrolet	Silverado	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2014	Chevrolet	Silverado	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 0009
2014	Chevrolet	Silverado	Seat Memory Control Module	√	√	√	√	√	
2014	Chevrolet	Silverado	Parking Assist Control Module	√	√	√	√	√	0247 0271
2014	Chevrolet	Silverado	Personal Audio Link Control Module	√	√	√	√	√	0231
2014	Chevrolet	Silverado	Amplifier	√	√	√	√	√	
2014	Chevrolet	Silverado	Driver Door Switch Panel Control Module	√	√	√	√	√	
2014	Chevrolet	Silverado	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2014	Chevrolet	Silverado	Rear Audio Control Module	√	√	√	√	√	
2014	Chevrolet	Silverado	Chime Alarm Control Module	√	√	√	√	√	

2014	Chevrolet	Silverado	Suspension Control Module	√	√	√	√	√	0245
2014	Chevrolet	Silverado	Fuel Injector Control Module	√	√	√	√	√	
2014	Chevrolet	Silverado	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Chevrolet	Silverado	Power Steering Control Module	√	√	√	√	√	0150
2014	Chevrolet	Silverado	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2014	Chevrolet	Silverado	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2014	Chevrolet	Silverado	Parking Brake Control Module	√	√	√	√	√	0229
2014	Chevrolet	Silverado	Human Machine Interface Control Module	√	√	√	√	√	0150
2014	Chevrolet	Silverado	Radio Controls	√	√	√	√		0241
2014	Chevrolet	Silverado	Media Disc Player	√	√	√	√	√	
2014	Chevrolet	Silverado	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Sonic	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139 0020 0066 076D 0213 0006 0144 0258 0133 0210 0383 0098 0096 0094 0216 0130 0143 0265 0147 0237 0045 0393 0043 0135 0128
2014	Chevrolet	Sonic	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Chevrolet	Sonic	Electronic Brake Control Module	√	√	√	√	√	0090
2014	Chevrolet	Sonic	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Chevrolet	Sonic	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	Chevrolet	Sonic	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2014	Chevrolet	Sonic	Instrument Cluster	√	√	√	√	√	0247
2014	Chevrolet	Sonic	HVAC Control Module	√	√	√	√	√	
2014	Chevrolet	Sonic	Passenger Presence Module	√	√	√	√		0057
2014	Chevrolet	Sonic	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Chevrolet	Sonic	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Chevrolet	Sonic	Fuel Injector Control Module	√			√	√	
2014	Chevrolet	Sonic	Parking Assist Control Module	√	√	√	√	√	0247
2014	Chevrolet	Sonic	Frontview Camera Module	√	√	√	√	√	0205 0049
2014	Chevrolet	Sonic	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Chevrolet	Sonic	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Sonic	Front Seat Heating Control Module	√	√	√	√	√	
2014	Chevrolet	Sonic	Power Steering Control Module	√	√	√	√		0207
2014	Chevrolet	Sonic	Radio	√	√	√	√	√	
2014	Chevrolet	Spark	Engine Control Module	√	√	√	√	√	0069 0087 0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006 0144 0258 0132 0147 0140 0705

2014	Chevrolet	Spark	Transmission Control Module	√	√	√	√	√	0016 0017
2014	Chevrolet	Spark	Electronic Brake Control Module	√	√	√	√	√	0090
2014	Chevrolet	Spark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Chevrolet	Spark	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	Chevrolet	Spark	Instrument Cluster	√	√	√	√	√	0247
2014	Chevrolet	Spark	Keyless Entry Control Module				√		
2014	Chevrolet	Spark	Passenger Presence Module	√	√	√	√	√	0057
2014	Chevrolet	Spark	Fuel Injector Control Module	√	√	√	√	√	
2014	Chevrolet	Spark	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Chevrolet	Spark	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Spark	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Chevrolet	Spark	Power Steering Control Module	√	√	√	√		0089
2014	Chevrolet	Spark	Radio	√	√	√	√	√	
2014	Chevrolet	Spark EV	Engine Control Module	√	√	√	√	√	0258
2014	Chevrolet	Spark EV	Electronic Brake Control Module	√	√	√	√	√	0263 0371 0111
2014	Chevrolet	Spark EV	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2014	Chevrolet	Spark EV	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0160 0232 0150
2014	Chevrolet	Spark EV	Instrument Cluster	√	√	√	√	√	0247
2014	Chevrolet	Spark EV	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Chevrolet	Spark EV	Hybrid Powertrain Control Module	√	√	√	√	√	
2014	Chevrolet	Spark EV	Drive Motor Control Module	√	√	√	√		
2014	Chevrolet	Spark EV	Electric A/C Compressor Control Module	√					
2014	Chevrolet	Spark EV	Battery Charger Control Module	√			√		
2014	Chevrolet	Spark EV	Coolant Heater Control Module	√	√	√			
2014	Chevrolet	Spark EV	Hybrid Powertrain Control Module 2	√	√	√	√	√	0125 0124 0262 0079 0122 0123 0127
2014	Chevrolet	Spark EV	Battery Energy Control Module	√			√		
2014	Chevrolet	Spark EV	DC Charging Control Module	√			√		
2014	Chevrolet	Spark EV	Auxiliary Transmission Fluid Pump	√	√	√	√		
2014	Chevrolet	Spark EV	Keyless Entry Control Module	√	√	√	√	√	
2014	Chevrolet	Spark EV	Passenger Presence Module	√	√	√	√	√	0057
2014	Chevrolet	Spark EV	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2014	Chevrolet	Spark EV	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Chevrolet	Spark EV	Power Steering Control Module	√	√	√	√		0089
2014	Chevrolet	Spark EV	Radio	√	√	√	√	√	
2014	Chevrolet	Spark EV	Parking Brake Control Module	√	√	√	√	√	0229



2014	Chevrolet	Spin	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139 0133 0210 0383 0098 0096 0094 0216 0130 0143 0265 0147 0237 0045 0393 0043 0135 0128 0172
2014	Chevrolet	Spin	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Chevrolet	Spin	Electronic Brake Control Module	√	√	√	√	√	0090
2014	Chevrolet	Spin	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Chevrolet	Spin	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	Chevrolet	Spin	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2014	Chevrolet	Spin	Instrument Cluster	√	√	√	√	√	0247
2014	Chevrolet	Spin	HVAC Control Module	√	√	√	√	√	
2014	Chevrolet	Spin	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Chevrolet	Spin	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Spin	Parking Assist Control Module	√	√	√	√	√	0247
2014	Chevrolet	Spin	Radio	√	√	√	√	√	
2014	Chevrolet	SS	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0258
2014	Chevrolet	SS	Transmission Control Module	√	√	√	√	√	0016
2014	Chevrolet	SS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2014	Chevrolet	SS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2014	Chevrolet	SS	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0003 0156 0002 0158
2014	Chevrolet	SS	Instrument Cluster	√	√	√	√	√	0247 0145
2014	Chevrolet	SS	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Chevrolet	SS	HVAC Controls	√	√	√	√	√	
2014	Chevrolet	SS	Head-Up Display Module	√	√	√	√	√	
2014	Chevrolet	SS	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Chevrolet	SS	Headlamp Control Module	√	√	√	√	√	0195
2014	Chevrolet	SS	Keyless Entry Control Module	√	√	√	√	√	
2014	Chevrolet	SS	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Chevrolet	SS	Trailer Interface Control Module	√	√	√	√	√	0247
2014	Chevrolet	SS	Passenger Presence Module	√	√	√	√		0057
2014	Chevrolet	SS	Power Steering Control Module	√	√	√	√		0081
2014	Chevrolet	SS	Frontview Camera Module	√	√	√	√	√	0205 0049
2014	Chevrolet	SS	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	SS	Seat Memory Control Module - Driver	√	√	√	√	√	0310

2014	Chevrolet	SS	Left Side Object Detection Control Module	√	√	√		√	
2014	Chevrolet	SS	Right Side Object Detection Control Module	√	√	√		√	
2014	Chevrolet	SS	Parking Assist Control Module	√	√	√	√	√	0247
2014	Chevrolet	SS	Radio	√	√	√	√	√	
2014	Chevrolet	SS	Radio Controls	√	√	√	√	√	0247
2014	Chevrolet	SS	Parking Brake Control Module	√	√	√	√	√	0229
2014	Chevrolet	Suburban	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0258
2014	Chevrolet	Suburban	Transmission Control Module	√	√	√	√	√	0016
2014	Chevrolet	Suburban	Electronic Brake Control Module	√	√	√	√	√	0225 0111
2014	Chevrolet	Suburban	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2014	Chevrolet	Suburban	Body Control Module	√	√	√	√	√	0263 0261
2014	Chevrolet	Suburban	Theft Deterrent Module	√	√	√	√		
2014	Chevrolet	Suburban	Instrument Cluster	√	√	√	√	√	
2014	Chevrolet	Suburban	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2014	Chevrolet	Suburban	Liftgate Control Module	√	√	√	√		0146
2014	Chevrolet	Suburban	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Chevrolet	Suburban	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	Chevrolet	Suburban	Passenger Presence Module	√	√	√	√		
2014	Chevrolet	Suburban	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	Chevrolet	Suburban	Transfer Case Control Module	√	√	√	√	√	0037
2014	Chevrolet	Suburban	Chassis Control Module	√	√	√	√	√	0217
2014	Chevrolet	Suburban	Auxiliary Body Control Module	√	√	√	√	√	0050
2014	Chevrolet	Suburban	Left Side Object Detection Control Module	√	√	√	√	√	
2014	Chevrolet	Suburban	Parking Assist Control Module	√	√	√	√	√	
2014	Chevrolet	Suburban	Rear Seat Heating Control Module	√	√	√	√	√	
2014	Chevrolet	Suburban	Right Side Object Detection Control Module	√	√	√	√	√	
2014	Chevrolet	Suburban	Seat Memory Control Module	√	√	√	√	√	
2014	Chevrolet	Suburban	Driver Door Switch Panel Control Module	√	√	√	√	√	
2014	Chevrolet	Suburban	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2014	Chevrolet	Suburban	Radio	√	√	√	√	√	
2014	Chevrolet	Suburban	Personal Audio Link Control Module	√	√	√			0231
2014	Chevrolet	Suburban	Amplifier	√	√	√	√		
2014	Chevrolet	Suburban	Rear Audio Control Module	√	√	√	√		
2014	Chevrolet	Suburban	Suspension Control Module	√	√	√	√	√	0245
2014	Chevrolet	Suburban	Assist Step Control Module	√	√	√	√	√	
2014	Chevrolet	Suburban	Parking Brake Control Module	√	√	√	√	√	0229
2014	Chevrolet	Tahoe	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0258
2014	Chevrolet	Tahoe	Transmission Control Module	√	√	√	√	√	0016
2014	Chevrolet	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0225 0111

2014	Chevrolet	Tahoe	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2014	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0263 0261
2014	Chevrolet	Tahoe	Theft Deterrent Module	√	√	√	√	√	
2014	Chevrolet	Tahoe	Instrument Cluster	√	√	√	√	√	
2014	Chevrolet	Tahoe	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2014	Chevrolet	Tahoe	Transfer Case Control Module	√	√	√	√	√	0037
2014	Chevrolet	Tahoe	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	Chevrolet	Tahoe	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Chevrolet	Tahoe	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	Chevrolet	Tahoe	Passenger Presence Module	√	√	√	√	√	
2014	Chevrolet	Tahoe	Chassis Control Module	√	√	√	√	√	0217
2014	Chevrolet	Tahoe	Radio	√	√	√	√	√	
2014	Chevrolet	Tahoe	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2014	Chevrolet	Tahoe	Auxiliary Body Control Module	√	√	√	√	√	0050
2014	Chevrolet	Tahoe	Left Side Object Detection Control Module	√	√	√	√	√	
2014	Chevrolet	Tahoe	Parking Assist Control Module	√	√	√	√	√	
2014	Chevrolet	Tahoe	Rear Seat Heating Control Module	√	√	√	√	√	
2014	Chevrolet	Tahoe	Right Side Object Detection Control Module	√	√	√	√	√	
2014	Chevrolet	Tahoe	Seat Memory Control Module	√	√	√	√	√	
2014	Chevrolet	Tahoe	Driver Door Switch Panel Control Module	√	√	√	√	√	
2014	Chevrolet	Tahoe	Personal Audio Link Control Module	√	√	√	√	√	0231
2014	Chevrolet	Tahoe	Amplifier	√	√	√	√	√	
2014	Chevrolet	Tahoe	Rear Audio Control Module	√	√	√	√	√	
2014	Chevrolet	Tahoe	Liftgate Control Module	√	√	√	√	√	0146
2014	Chevrolet	Tahoe	Suspension Control Module	√	√	√	√	√	0245
2014	Chevrolet	Tahoe	Assist Step Control Module	√	√	√	√	√	
2014	Chevrolet	Tahoe	Parking Brake Control Module	√	√	√	√	√	0229
2014	Chevrolet	Tavera	Engine Control Module	√	√	√	√	√	
2014	Chevrolet	Tracker	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006 0144 0258 0139 0210 0222 0224 0130 0147 0060 0044 0045 0097 0068 0043 0173 0128
2014	Chevrolet	Tracker	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Chevrolet	Tracker	Electronic Brake Control Module	√	√	√	√	√	0090
2014	Chevrolet	Tracker	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2014	Chevrolet	Tracker	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	Chevrolet	Tracker	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	

2014	Chevrolet	Tracker	Instrument Cluster	√	√	√	√	√	0247
2014	Chevrolet	Tracker	HVAC Control Module	√	√	√	√	√	
2014	Chevrolet	Tracker	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2014	Chevrolet	Tracker	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Chevrolet	Tracker	Passenger Presence Module	√	√	√	√	√	0057
2014	Chevrolet	Tracker	Front Seat Heating Control Module	√	√	√	√	√	
2014	Chevrolet	Tracker	Parking Assist Control Module	√	√	√	√	√	0247
2014	Chevrolet	Tracker	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Tracker	Frontview Camera Module	√	√	√	√	√	0205 0049
2014	Chevrolet	Tracker	Power Steering Control Module	√	√	√	√		0207
2014	Chevrolet	Tracker	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2014	Chevrolet	Tracker	Radio	√	√	√	√	√	
2014	Chevrolet	Trailblazer	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0222 0060 0044 0045 0086 0097 0084 0043 0173 0209 0132 0067 0156 0315 0328
2014	Chevrolet	Trailblazer	Transmission Control Module	√	√	√	√	√	0016
2014	Chevrolet	Trailblazer	Electronic Brake Control Module	√	√	√	√	√	0090 0112
2014	Chevrolet	Trailblazer	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Chevrolet	Trailblazer	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0082 0160 0322 0150
2014	Chevrolet	Trailblazer	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2014	Chevrolet	Trailblazer	Instrument Cluster	√	√	√	√	√	0247
2014	Chevrolet	Trailblazer	Transfer Case Control Module	√	√	√	√	√	0037
2014	Chevrolet	Trailblazer	Trailer Interface Control Module	√	√	√	√	√	0247
2014	Chevrolet	Trailblazer	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Chevrolet	Trailblazer	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Trailblazer	Parking Assist Control Module	√	√	√	√	√	0247
2014	Chevrolet	Traverse	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0214
2014	Chevrolet	Traverse	Transmission Control Module	√	√	√	√	√	0016
2014	Chevrolet	Traverse	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2014	Chevrolet	Traverse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2014	Chevrolet	Traverse	Body Control Module	√	√	√	√	√	0263 0261
2014	Chevrolet	Traverse	Theft Deterrent Module	√	√	√	√		
2014	Chevrolet	Traverse	Instrument Cluster	√	√	√	√	√	
2014	Chevrolet	Traverse	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2014	Chevrolet	Traverse	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2014	Chevrolet	Traverse	Digital Radio Receiver Control Module	√	√	√	√	√	

2014	Chevrolet	Traverse	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Chevrolet	Traverse	Liftgate Control Module	√	√	√	√		0146
2014	Chevrolet	Traverse	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	Chevrolet	Traverse	Radio	√	√	√	√	√	
2014	Chevrolet	Traverse	Passenger Presence Module	√	√	√	√		0057
2014	Chevrolet	Traverse	Left Side Object Detection Control Module	√	√	√		√	
2014	Chevrolet	Traverse	Parking Assist Control Module	√	√	√	√	√	0247
2014	Chevrolet	Traverse	Right Side Object Detection Control Module	√	√	√		√	
2014	Chevrolet	Traverse	Seat Memory Control Module	√	√	√	√	√	
2014	Chevrolet	Traverse	Rear Audio Control Module	√	√	√	√		
2014	Chevrolet	Traverse	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2014	Chevrolet	Traverse	Driver Door Switch Panel Control Module	√	√	√	√	√	
2014	Chevrolet	Traverse	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Chevrolet	Traverse	Frontview Camera Module	√	√	√	√	√	0205 0196
2014	Chevrolet	Traverse	Personal Audio Link Control Module	√	√	√			0231
2014	Chevrolet	Traverse	Front Seat Heating Control Module	√	√	√	√		
2014	Chevrolet	Trax	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006 0144 0258 0139 0210 0222 0224 0130 0147 0060 0044 0045 0097 0068 0043 0173 0128
2014	Chevrolet	Trax	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Chevrolet	Trax	Electronic Brake Control Module	√	√	√	√	√	0090
2014	Chevrolet	Trax	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2014	Chevrolet	Trax	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	Chevrolet	Trax	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2014	Chevrolet	Trax	Instrument Cluster	√	√	√	√	√	0247
2014	Chevrolet	Trax	HVAC Control Module	√	√	√	√	√	
2014	Chevrolet	Trax	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Chevrolet	Trax	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Chevrolet	Trax	Passenger Presence Module	√	√	√	√		0057
2014	Chevrolet	Trax	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Trax	Frontview Camera Module	√	√	√	√	√	0205 0049
2014	Chevrolet	Trax	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2014	Chevrolet	Trax	Power Steering Control Module	√	√	√	√		0207
2014	Chevrolet	Trax	Radio	√	√	√	√	√	
2014	Chevrolet	Trax	Front Seat Heating Control Module	√	√	√	√	√	
2014	Chevrolet	Trax	Parking Assist Control Module	√	√	√	√	√	0247

2014	Chevrolet	Trax	Fuel Injector Control Module	√			√	√	
2014	Chevrolet	Volt	Engine Control Module	√	√	√	√	√	0209 0132 0067 0086 0217 0176
2014	Chevrolet	Volt	Transmission Control Module	√	√	√	√	√	
2014	Chevrolet	Volt	Electronic Brake Control Module	√	√	√	√	√	0263 0371 0111
2014	Chevrolet	Volt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2014	Chevrolet	Volt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0160 0232 0150
2014	Chevrolet	Volt	Instrument Cluster	√	√	√	√	√	0247
2014	Chevrolet	Volt	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Chevrolet	Volt	Hybrid Powertrain Control Module	√	√	√	√	√	
2014	Chevrolet	Volt	Drive Motor Control Module 1	√	√	√	√		
2014	Chevrolet	Volt	Drive Motor Control Module 2	√	√	√	√		
2014	Chevrolet	Volt	Auxiliary Transmission Fluid Pump	√	√	√	√		
2014	Chevrolet	Volt	Battery Charger Control Module	√			√		
2014	Chevrolet	Volt	Battery Energy Control Module	√			√		
2014	Chevrolet	Volt	Electric A/C Compressor Control Module	√					
2014	Chevrolet	Volt	Coolant Heater Control Module	√	√	√			
2014	Chevrolet	Volt	Hybrid Powertrain Control Module 2	√	√	√	√	√	0124 0125 0056 0218 0122 0123 0127
2014	Chevrolet	Volt	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	Chevrolet	Volt	Parking Brake Control Module	√	√	√	√	√	0229
2014	Chevrolet	Volt	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Chevrolet	Volt	Steering Column Lock Control Module	√	√	√	√		
2014	Chevrolet	Volt	Keyless Entry Control Module	√	√	√	√	√	
2014	Chevrolet	Volt	Passenger Presence Module	√	√	√	√		0057
2014	Chevrolet	Volt	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Chevrolet	Volt	Frontview Camera Module	√	√	√	√	√	0205 0049
2014	Chevrolet	Volt	Power Steering Control Module	√	√	√	√		0081 0080 0089
2014	Chevrolet	Volt	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2014	Chevrolet	Volt	Radio	√	√	√	√	√	
2014	Chevrolet	Volt	Front Seat Heating Control Module	√	√	√	√	√	
2014	Chevrolet	Volt	Parking Assist Control Module	√	√	√	√	√	0247
2014	Daewoo	Alpheon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2014	Daewoo	Alpheon	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Daewoo	Alpheon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2014	Daewoo	Alpheon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134

2014	Daewoo	Alpheon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0150 0232 0150
2014	Daewoo	Alpheon	Instrument Cluster	√	√	√	√	√	0247
2014	Daewoo	Alpheon	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Daewoo	Alpheon	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2014	Daewoo	Alpheon	Drive Motor Control Module	√	√	√	√		
2014	Daewoo	Alpheon	Battery Energy Control Module	√			√		
2014	Daewoo	Alpheon	Headlamp Control Module	√	√	√	√	√	0195
2014	Daewoo	Alpheon	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Daewoo	Alpheon	Keyless Entry Control Module	√	√	√	√	√	
2014	Daewoo	Alpheon	Parking Brake Control Module	√	√	√	√	√	0229
2014	Daewoo	Alpheon	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Daewoo	Alpheon	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Daewoo	Alpheon	Suspension Control Module	√	√	√	√	√	
2014	Daewoo	Alpheon	Power Steering Control Module	√	√	√	√	√	0089 0081 0080
2014	Daewoo	Alpheon	Front Seat Heating Control Module	√	√	√	√	√	
2014	Daewoo	Alpheon	Parking Assist Control Module	√	√	√	√	√	0247
2014	Daewoo	Alpheon	Rear Seat Heating Control Module	√	√	√	√	√	
2014	Daewoo	Alpheon	Seat Memory Control Module	√	√	√	√	√	0310
2014	Daewoo	Alpheon	Radio	√	√	√	√	√	
2014	Daewoo	Alpheon	Rear Audio Control Module	√	√	√	√	√	
2014	Daewoo	Alpheon	Mobile Telephone Control Module	√	√	√	√	√	0247
2014	Daewoo	Alpheon	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2014	Daewoo	Gentra	Engine Control Module	√	√	√	√	√	0209 0156 0147 0217
2014	Daewoo	Gentra	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Daewoo	Gentra	Electronic Brake Control Module	√	√	√	√	√	
2014	Daewoo	Gentra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2014	Daewoo	Gentra	Fuel Injector Control Module	√	√	√	√	√	
2014	Daewoo	Gentra	Variable Power Steering Control Module				√	√	
2014	GMC	Acadia	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0214
2014	GMC	Acadia	Transmission Control Module	√	√	√	√	√	0016
2014	GMC	Acadia	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2014	GMC	Acadia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2014	GMC	Acadia	Body Control Module	√	√	√	√	√	0263 0261
2014	GMC	Acadia	Theft Deterrent Module	√	√	√	√		
2014	GMC	Acadia	Instrument Cluster	√	√	√	√	√	
2014	GMC	Acadia	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2014	GMC	Acadia	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2014	GMC	Acadia	Head-Up Display Module	√	√	√	√	√	

2014	GMC	Acadia	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	GMC	Acadia	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	GMC	Acadia	Liftgate Control Module	√	√	√	√		0146
2014	GMC	Acadia	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	GMC	Acadia	Radio	√	√	√	√	√	
2014	GMC	Acadia	Passenger Presence Module	√	√	√	√		0057
2014	GMC	Acadia	Parking Assist Control Module	√	√	√	√	√	0247
2014	GMC	Acadia	Right Side Object Detection Control Module	√	√	√		√	
2014	GMC	Acadia	Seat Memory Control Module	√	√	√	√	√	
2014	GMC	Acadia	Left Side Object Detection Control Module	√	√	√		√	
2014	GMC	Acadia	Rear Audio Control Module	√	√	√	√		
2014	GMC	Acadia	Driver Door Switch Panel Control Module	√	√	√	√	√	
2014	GMC	Acadia	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2014	GMC	Acadia	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	GMC	Acadia	Frontview Camera Module	√	√	√	√	√	0205 0196
2014	GMC	Acadia	Personal Audio Link Control Module	√	√	√			0231
2014	GMC	Acadia	Front Seat Heating Control Module	√	√	√	√		
2014	GMC	Savana	Engine Control Module	√	√	√	√	√	0209 0132 0067 0086 0217 0258 0156 0263 0237 0210 0115 0058 0042 0044 0088 0219 0073 0072 0070 0071 0117 0118 0119 0120 0240 0178 0180 0182 0184 0186 0188 0190 0192 0138 0137 0179 0181 0183 0185 0187
2014	GMC	Savana	Transmission Control Module	√	√	√	√	√	0016
2014	GMC	Savana	Electronic Brake Control Module	√	√	√	√	√	0225 0111
2014	GMC	Savana	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√		0172 0261
2014	GMC	Savana	Body Control Module	√	√	√	√	√	0263 0261
2014	GMC	Savana	Theft Deterrent Module	√	√	√	√		
2014	GMC	Savana	Instrument Cluster	√	√	√	√	√	
2014	GMC	Savana	Passenger Presence Module	√	√	√	√		0057
2014	GMC	Savana	Rollover Sensor Module	√	√	√	√		0172
2014	GMC	Savana	Chime Alarm Control Module	√	√	√		√	
2014	GMC	Savana	Radio	√	√	√	√	√	
2014	GMC	Savana	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	GMC	Savana	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	GMC	Savana	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	GMC	Savana	Parking Assist Control Module	√	√	√	√	√	0247



2014	GMC	Savana	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	GMC	Savana	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2014	GMC	Savana	Auxiliary Heater Control Module	√	√	√	√	√	
2014	GMC	Sierra	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2014	GMC	Sierra	Transmission Control Module	√	√	√	√	√	0016
2014	GMC	Sierra	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2014	GMC	Sierra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2014	GMC	Sierra	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0160 0233 0150
2014	GMC	Sierra	Instrument Cluster	√	√	√	√	√	0247
2014	GMC	Sierra	HVAC Control Module	√	√	√	√	√	0007 0129
2014	GMC	Sierra	HVAC Controls	√	√	√	√	√	
2014	GMC	Sierra	Transfer Case Control Module	√	√	√	√	√	0037
2014	GMC	Sierra	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	GMC	Sierra	Passenger Presence Module	√	√	√	√	√	0057
2014	GMC	Sierra	Power Steering Control Module	√	√	√	√	√	0150
2014	GMC	Sierra	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2014	GMC	Sierra	Parking Assist Control Module	√	√	√	√	√	0247 0271
2014	GMC	Sierra	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2014	GMC	Sierra	Parking Brake Control Module	√	√	√	√	√	0229
2014	GMC	Sierra	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	GMC	Sierra	Radio	√	√	√	√	√	0226 0150
2014	GMC	Sierra	Human Machine Interface Control Module	√	√	√	√	√	0150
2014	GMC	Sierra	Media Disc Player	√	√	√	√	√	
2014	GMC	Sierra	Amplifier	√	√	√	√		
2014	GMC	Sierra	Radio Controls	√	√	√	√		0241
2014	GMC	Sierra	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	GMC	Sierra HD	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0139 0237 0210 0115 0058 0042 0044 0088 0219 0073 0072 0070 0071 0117 0118 0119 0120 0240 0178 0180 0182 0184 0186 0188 0190 0192 0138 0137 0179 0181 0183 0185 0187
2014	GMC	Sierra HD	Transmission Control Module	√	√	√	√	√	0016 0019

2014	GMC	Sierra HD	Electronic Brake Control Module	√	√	√	√	√	0111
2014	GMC	Sierra HD	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2014	GMC	Sierra HD	Body Control Module	√	√	√	√	√	0263 0261
2014	GMC	Sierra HD	Theft Deterrent Module	√	√	√	√	√	
2014	GMC	Sierra HD	Instrument Cluster	√	√	√	√	√	
2014	GMC	Sierra HD	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2014	GMC	Sierra HD	Transfer Case Control Module	√	√	√	√	√	0037
2014	GMC	Sierra HD	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	GMC	Sierra HD	Trailer Brake Control Module	√	√	√	√	√	
2014	GMC	Sierra HD	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	GMC	Sierra HD	Radio	√	√	√	√	√	
2014	GMC	Sierra HD	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	GMC	Sierra HD	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2014	GMC	Sierra HD	Parking Assist Control Module	√	√	√	√	√	
2014	GMC	Sierra HD	Seat Memory Control Module	√	√	√	√	√	
2014	GMC	Sierra HD	Personal Audio Link Control Module	√	√	√	√	√	0231
2014	GMC	Sierra HD	Amplifier	√	√	√	√	√	
2014	GMC	Sierra HD	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2014	GMC	Sierra HD	Driver Door Switch Panel Control Module	√	√	√	√	√	
2014	GMC	Sierra HD	Rear Audio Control Module	√	√	√	√	√	
2014	GMC	Sierra HD	Suspension Control Module	√	√	√	√	√	0245
2014	GMC	Sierra HD	Fuel Injector Control Module	√	√	√	√	√	
2014	GMC	Sierra HD	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 0009
2014	GMC	Sierra HD	Parking Brake Control Module	√	√	√	√	√	0229
2014	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2014	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2014	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2014	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	GMC	Terrain	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0247
2014	GMC	Terrain	HVAC Control Module	√	√	√	√	√	0007 0129
2014	GMC	Terrain	Multi-Axis Acceleration Sensor Module	√	√	√	√	√	0112 0111
2014	GMC	Terrain	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2014	GMC	Terrain	Steering Wheel Angle Sensor Module	√	√	√	√	√	0093 0090
2014	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146
2014	GMC	Terrain	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2014	GMC	Terrain	Passenger Presence Module	√	√	√	√	√	0057

2014	GMC	Terrain	Front Seat Heating Control Module	√	√	√	√	√	
2014	GMC	Terrain	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2014	GMC	Terrain	Left Side Object Detection Control Module	√	√	√		√	
2014	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0247
2014	GMC	Terrain	Right Side Object Detection Control Module	√	√	√		√	
2014	GMC	Terrain	Seat Memory Control Module	√	√	√	√	√	0310
2014	GMC	Terrain	Radio	√	√	√	√	√	
2014	GMC	Yukon	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0258
2014	GMC	Yukon	Transmission Control Module	√	√	√	√	√	0016
2014	GMC	Yukon	Electronic Brake Control Module	√	√	√	√	√	0225 0111
2014	GMC	Yukon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2014	GMC	Yukon	Body Control Module	√	√	√	√	√	0263 0261
2014	GMC	Yukon	Theft Deterrent Module	√	√	√	√		
2014	GMC	Yukon	Instrument Cluster	√	√	√	√	√	
2014	GMC	Yukon	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2014	GMC	Yukon	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	GMC	Yukon	Transfer Case Control Module	√	√	√	√	√	0037
2014	GMC	Yukon	Liftgate Control Module	√	√	√	√		0146
2014	GMC	Yukon	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	GMC	Yukon	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	GMC	Yukon	Passenger Presence Module	√	√	√	√		
2014	GMC	Yukon	Chassis Control Module	√	√	√	√	√	0217
2014	GMC	Yukon	Auxiliary Body Control Module	√	√	√	√	√	0050
2014	GMC	Yukon	Left Side Object Detection Control Module	√	√	√	√	√	
2014	GMC	Yukon	Parking Assist Control Module	√	√	√	√	√	
2014	GMC	Yukon	Rear Seat Heating Control Module	√	√	√	√	√	
2014	GMC	Yukon	Right Side Object Detection Control Module	√	√	√	√	√	
2014	GMC	Yukon	Seat Memory Control Module	√	√	√	√	√	
2014	GMC	Yukon	Radio	√	√	√	√	√	
2014	GMC	Yukon	Driver Door Switch Panel Control Module	√	√	√	√	√	
2014	GMC	Yukon	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2014	GMC	Yukon	Amplifier	√	√	√	√		
2014	GMC	Yukon	Personal Audio Link Control Module	√	√	√			0231
2014	GMC	Yukon	Rear Audio Control Module	√	√	√	√		
2014	GMC	Yukon	Suspension Control Module	√	√	√	√	√	0245
2014	GMC	Yukon	Assist Step Control Module	√	√	√	√	√	
2014	GMC	Yukon	Parking Brake Control Module	√	√	√	√	√	0229
2014	GMC	Yukon XL	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0258
2014	GMC	Yukon XL	Transmission Control Module	√	√	√	√	√	0016

2014	GMC	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0225 0111
2014	GMC	Yukon XL	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2014	GMC	Yukon XL	Body Control Module	√	√	√	√	√	0263 0261
2014	GMC	Yukon XL	Theft Deterrent Module	√	√	√	√	√	
2014	GMC	Yukon XL	Instrument Cluster	√	√	√	√	√	
2014	GMC	Yukon XL	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2014	GMC	Yukon XL	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	GMC	Yukon XL	Passenger Presence Module	√	√	√	√	√	
2014	GMC	Yukon XL	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	GMC	Yukon XL	Auxiliary Body Control Module	√	√	√	√	√	0050
2014	GMC	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0037
2014	GMC	Yukon XL	Chassis Control Module	√	√	√	√	√	0217
2014	GMC	Yukon XL	Left Side Object Detection Control Module	√	√	√	√	√	
2014	GMC	Yukon XL	Parking Assist Control Module	√	√	√	√	√	
2014	GMC	Yukon XL	Rear Seat Heating Control Module	√	√	√	√	√	
2014	GMC	Yukon XL	Right Side Object Detection Control Module	√	√	√	√	√	
2014	GMC	Yukon XL	Seat Memory Control Module	√	√	√	√	√	
2014	GMC	Yukon XL	Driver Door Switch Panel Control Module	√	√	√	√	√	
2014	GMC	Yukon XL	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2014	GMC	Yukon XL	Radio	√	√	√	√	√	
2014	GMC	Yukon XL	Personal Audio Link Control Module	√	√	√			0231
2014	GMC	Yukon XL	Amplifier	√	√	√	√		
2014	GMC	Yukon XL	Rear Audio Control Module	√	√	√	√		
2014	GMC	Yukon XL	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	GMC	Yukon XL	Liftgate Control Module	√	√	√	√		0146
2014	GMC	Yukon XL	Suspension Control Module	√	√	√	√	√	0245
2014	GMC	Yukon XL	Assist Step Control Module	√	√	√	√	√	
2014	GMC	Yukon XL	Parking Brake Control Module	√	√	√	√	√	0229
2014	Holden	Barina	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006
2014	Holden	Barina	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Holden	Barina	Electronic Brake Control Module	√	√	√	√	√	0090
2014	Holden	Barina	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Holden	Barina	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	Holden	Barina	Instrument Cluster	√	√	√	√	√	0247
2014	Holden	Barina	HVAC Control Module	√	√	√	√	√	
2014	Holden	Barina	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Holden	Barina	Parking Assist Control Module	√	√	√	√	√	0247
2014	Holden	Barina	Front Seat Heating Control Module	√	√	√	√	√	

2014	Holden	Barina	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Holden	Barina	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Holden	Barina	Power Steering Control Module	√	√	√	√		0207
2014	Holden	Barina	Radio	√	√	√	√	√	
2014	Holden	Barina Spark	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139
2014	Holden	Barina Spark	Transmission Control Module	√	√	√	√	√	0016
2014	Holden	Barina Spark	Electronic Brake Control Module	√	√	√	√	√	0090
2014	Holden	Barina Spark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Holden	Barina Spark	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	Holden	Barina Spark	Instrument Cluster	√	√	√	√	√	0247
2014	Holden	Barina Spark	Keyless Entry Control Module				√		
2014	Holden	Barina Spark	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Holden	Barina Spark	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Holden	Barina Spark	Power Steering Control Module	√	√	√	√		0089
2014	Holden	Barina Spark	Radio	√	√	√	√	√	
2014	Holden	Caprice	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0006
2014	Holden	Caprice	Transmission Control Module	√	√	√	√	√	0016
2014	Holden	Caprice	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2014	Holden	Caprice	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2014	Holden	Caprice	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0207 0156 0209 0132
2014	Holden	Caprice	Instrument Cluster	√	√	√	√	√	0247 0145
2014	Holden	Caprice	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Holden	Caprice	HVAC Controls	√	√	√	√	√	
2014	Holden	Caprice	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Holden	Caprice	Steering Column Lock Control Module	√	√	√	√		
2014	Holden	Caprice	Parking Assist Control Module	√	√	√	√	√	0247
2014	Holden	Caprice	Keyless Entry Control Module	√	√	√	√	√	
2014	Holden	Caprice	Left Side Object Detection Control Module	√	√	√		√	
2014	Holden	Caprice	Right Side Object Detection Control Module	√	√	√		√	
2014	Holden	Caprice	Seat Memory Control Module - Driver	√	√	√	√	√	
2014	Holden	Caprice	Radio	√	√	√	√	√	
2014	Holden	Caprice	Radio Controls	√	√	√	√	√	0247
2014	Holden	Caprice	Head-Up Display Module	√	√	√	√	√	
2014	Holden	Caprice	Headlamp Control Module	√	√	√	√	√	0195
2014	Holden	Caprice	Suspension Control Module	√	√	√	√	√	0245
2014	Holden	Caprice	Frontview Camera Module	√	√	√	√	√	0205 0049

2014	Holden	Caprice	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Holden	Caprice	Trailer Interface Control Module	√	√	√	√	√	0247
2014	Holden	Caprice	Fuel Injector Control Module	√			√	√	
2014	Holden	Caprice	Power Steering Control Module	√	√	√	√		0081
2014	Holden	Caprice	Parking Brake Control Module	√	√	√	√	√	0229
2014	Holden	Captiva 5	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0156 0086 0217 0213 0258 0212 0098 0216 0224 0449 0130 0143 0450 0265 0147 0108 0452 0237 0044 0045 0043 0135 0453 0454
2014	Holden	Captiva 5	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Holden	Captiva 5	Electronic Brake Control Module	√	√	√	√	√	0090
2014	Holden	Captiva 5	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2014	Holden	Captiva 5	Body Control Module	√	√	√	√	√	0242 0263 0261
2014	Holden	Captiva 5	Theft Deterrent Module	√	√	√	√		
2014	Holden	Captiva 5	Instrument Cluster	√	√	√	√	√	
2014	Holden	Captiva 5	HVAC Control Module	√	√	√		√	
2014	Holden	Captiva 5	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Holden	Captiva 5	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2014	Holden	Captiva 5	Mobile Telephone Control Module	√	√	√		√	0247 0065 0249 0246
2014	Holden	Captiva 5	Radio	√	√	√	√	√	0170 07B4 0247 0246 0065 0470 07B5
2014	Holden	Captiva 5	Headlamp Control Module	√	√	√	√	√	0195 0065
2014	Holden	Captiva 5	Auxiliary Body Control Module	√	√	√	√	√	0050
2014	Holden	Captiva 5	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	Holden	Captiva 5	Parking Brake Control Module	√	√	√	√	√	0229
2014	Holden	Captiva 5	Parking Assist Control Module	√	√	√	√	√	
2014	Holden	Captiva 5	Variable Power Steering Control Module	√				√	
2014	Holden	Captiva 5	Info Display Module	√	√	√	√	√	0170 0467 0468 0247 0246 0065 0249 07B3
2014	Holden	Captiva 7	Engine Control Module	√	√	√	√	√	0156 0209 0098 0216 0224 0449 0130 0143 0450 0265 0147 0108 0452 0237 0044 0045 0086 0043 0135 0453 0454 0455 0456 0263 0132 0067 0217 0213 0006 0131 0258
2014	Holden	Captiva 7	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Holden	Captiva 7	Electronic Brake Control Module	√	√	√	√	√	0090 0111
2014	Holden	Captiva 7	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261

2014	Holden	Captiva 7	Body Control Module	√	√	√	√	√	0242 0263 0261
2014	Holden	Captiva 7	Theft Deterrent Module	√	√	√	√		
2014	Holden	Captiva 7	Instrument Cluster	√	√	√	√	√	
2014	Holden	Captiva 7	HVAC Control Module	√	√	√		√	
2014	Holden	Captiva 7	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Holden	Captiva 7	Auxiliary Body Control Module	√	√	√	√	√	0050
2014	Holden	Captiva 7	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2014	Holden	Captiva 7	Remote Control Door Lock Receiver	√	√	√	√	√	0110 0160 0159 079B 0233 0204 0239 0161 0162 0163 0164
2014	Holden	Captiva 7	Headlamp Control Module	√	√	√	√	√	0195 0065
2014	Holden	Captiva 7	Variable Power Steering Control Module					√	
2014	Holden	Captiva 7	Parking Brake Control Module	√	√	√	√	√	0229
2014	Holden	Colorado	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0222 0060 0044 0045 0086 0097 0084 0043
2014	Holden	Colorado	Transmission Control Module	√	√	√	√	√	0016
2014	Holden	Colorado	Electronic Brake Control Module	√	√	√	√	√	0090 0112
2014	Holden	Colorado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Holden	Colorado	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0082 0150 0232 0150
2014	Holden	Colorado	Instrument Cluster	√	√	√	√	√	0247
2014	Holden	Colorado	Transfer Case Control Module	√	√	√	√	√	0037
2014	Holden	Colorado	Trailer Interface Control Module	√	√	√	√	√	0247
2014	Holden	Colorado	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Holden	Colorado	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Holden	Colorado	Radio	√	√	√	√	√	
2014	Holden	Colorado	Parking Assist Control Module	√	√	√	√	√	0247
2014	Holden	Colorado 7	Engine Control Module	√	√	√	√	√	0263 0210 0224 0130 0222 0060 0044 0045 0086 0097 0084 0043
2014	Holden	Colorado 7	Transmission Control Module	√	√	√	√	√	0016
2014	Holden	Colorado 7	Electronic Brake Control Module	√	√	√	√	√	0090 0112
2014	Holden	Colorado 7	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Holden	Colorado 7	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0082 0150 0232 0150
2014	Holden	Colorado 7	Instrument Cluster	√	√	√	√	√	0247
2014	Holden	Colorado 7	Transfer Case Control Module	√	√	√	√	√	0037

2014	Holden	Colorado 7	Trailer Interface Control Module	√	√	√	√	√	0247
2014	Holden	Colorado 7	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Holden	Colorado 7	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Holden	Colorado 7	Parking Assist Control Module	√	√	√	√	√	0247
2014	Holden	Colorado 7	Radio	√	√	√	√	√	
2014	Holden	Commodore	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258 0212 0006 0131
2014	Holden	Commodore	Transmission Control Module	√	√	√	√	√	0016
2014	Holden	Commodore	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2014	Holden	Commodore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2014	Holden	Commodore	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0160 0232 0150
2014	Holden	Commodore	Instrument Cluster	√	√	√	√	√	0247 0145
2014	Holden	Commodore	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Holden	Commodore	HVAC Controls	√	√	√	√	√	
2014	Holden	Commodore	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Holden	Commodore	Steering Column Lock Control Module	√	√	√	√		
2014	Holden	Commodore	Parking Assist Control Module	√	√	√	√	√	0247
2014	Holden	Commodore	Trailer Interface Control Module	√	√	√	√	√	0247
2014	Holden	Commodore	Power Steering Control Module	√	√	√	√		0081
2014	Holden	Commodore	Headlamp Control Module	√	√	√	√	√	0195
2014	Holden	Commodore	Fuel Injector Control Module	√			√	√	
2014	Holden	Commodore	Keyless Entry Control Module	√	√	√	√	√	
2014	Holden	Commodore	Left Side Object Detection Control Module	√	√	√		√	
2014	Holden	Commodore	Right Side Object Detection Control Module	√	√	√		√	
2014	Holden	Commodore	Seat Memory Control Module - Driver	√	√	√	√	√	
2014	Holden	Commodore	Radio	√	√	√	√	√	
2014	Holden	Commodore	Head-Up Display Module	√	√	√	√	√	
2014	Holden	Commodore	Liftgate Control Module	√	√	√	√	√	
2014	Holden	Commodore	Radio Controls	√	√	√	√	√	0247
2014	Holden	Commodore	Frontview Camera Module	√	√	√	√	√	0205 0049
2014	Holden	Commodore	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Holden	Commodore	Suspension Control Module	√	√	√	√	√	0245
2014	Holden	Commodore	Parking Brake Control Module	√	√	√	√	√	0229



2014	Holden	Cruze	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0139 0020 0066 076D 0213 0006 0144 0258 0098 0216 0224 0449 0130 0143 0450 0265 0147 0108 0452 0237 0044 0045 0043 0135 0453
2014	Holden	Cruze	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Holden	Cruze	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2014	Holden	Cruze	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Holden	Cruze	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	Holden	Cruze	Instrument Cluster	√	√	√	√	√	0247
2014	Holden	Cruze	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Holden	Cruze	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Holden	Cruze	Front Seat Heating Control Module	√	√	√	√	√	
2014	Holden	Cruze	Parking Assist Control Module	√	√	√	√	√	0247
2014	Holden	Cruze	Keyless Entry Control Module	√	√	√	√	√	
2014	Holden	Cruze	Steering Column Lock Control Module	√	√	√	√	√	
2014	Holden	Cruze	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2014	Holden	Cruze	Steering Wheel Angle Sensor Module	√	√	√	√	√	0093 0090
2014	Holden	Cruze	Multi-Axis Acceleration Sensor Module	√	√	√	√	√	0112 0111
2014	Holden	Cruze	Mobile Telephone Control Module	√	√	√	√	√	0247
2014	Holden	Cruze	Trailer Interface Control Module	√	√	√	√	√	0247
2014	Holden	Cruze	Radio	√	√	√	√	√	
2014	Holden	Cruze	Multimedia Player Interface Module	√	√	√	√	√	0247
2014	Holden	Malibu	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006 0144 0258 0139 0133 0210 0383 0098 0096 0094 0216 0130 0143 0265 0147 0237 0045 0393 0043 0135 0128
2014	Holden	Malibu	Transmission Control Module	√	√	√	√	√	0017 0036 0020 0084
2014	Holden	Malibu	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2014	Holden	Malibu	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	Holden	Malibu	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0156 0232 0158
2014	Holden	Malibu	Instrument Cluster	√	√	√	√	√	0247
2014	Holden	Malibu	HVAC Control Module	√	√	√	√	√	0007 0129

2014	Holden	Malibu	Suspension Control Module	√	√	√	√	√	
2014	Holden	Malibu	Power Steering Control Module	√	√	√	√	√	0081 0080 0089
2014	Holden	Malibu	Steering Column Lock Control Module	√	√	√	√		
2014	Holden	Malibu	Headlamp Control Module	√	√	√	√	√	0195
2014	Holden	Malibu	Keyless Entry Control Module	√	√	√	√	√	
2014	Holden	Malibu	Radio	√	√	√	√	√	
2014	Holden	Malibu	Multimedia Player Interface Module	√	√	√	√		0247
2014	Holden	Malibu	Parking Brake Control Module	√	√	√	√	√	0229
2014	Holden	Malibu	Front Seat Heating Control Module	√	√	√	√	√	
2014	Holden	Malibu	Parking Assist Control Module	√	√	√	√	√	0247
2014	Holden	Malibu	Rear Seat Heating Control Module	√	√	√	√	√	
2014	Holden	Malibu	Seat Memory Control Module	√	√	√	√	√	0310
2014	Holden	Malibu	Left Side Object Detection Control Module	√	√	√		√	
2014	Holden	Malibu	Mobile Telephone Control Module	√	√	√	√	√	0247
2014	Holden	Malibu	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	Holden	Malibu	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Holden	Malibu	Frontview Camera Module	√	√	√	√	√	0205 0049
2014	Holden	Malibu	Trailer Interface Control Module	√	√	√	√	√	0247
2014	Holden	Trax	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0066 076D 0086 0213 0217 0006
2014	Holden	Trax	Transmission Control Module	√	√	√	√	√	0017 0036
2014	Holden	Trax	Electronic Brake Control Module	√	√	√	√	√	0090
2014	Holden	Trax	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2014	Holden	Trax	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	Holden	Trax	Instrument Cluster	√	√	√	√	√	0247
2014	Holden	Trax	HVAC Control Module	√	√	√	√	√	
2014	Holden	Trax	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Holden	Trax	Rear Differential Clutch Control Module	√	√	√	√		0003 075B
2014	Holden	Trax	Power Steering Control Module	√	√	√	√		0207
2014	Holden	Trax	Radio	√	√	√	√	√	
2014	Holden	Trax	Front Seat Heating Control Module	√	√	√	√	√	
2014	Holden	Trax	Parking Assist Control Module	√	√	√	√	√	0247
2014	Holden	Trax	Trailer Interface Control Module	√	√	√	√	√	0247
2014	Holden	Volt	Engine Control Module	√	√	√	√	√	0209 0132 0067 0086 0217 0176
2014	Holden	Volt	Transmission Control Module	√	√	√	√	√	
2014	Holden	Volt	Electronic Brake Control Module	√	√	√	√	√	0263 0371 0111
2014	Holden	Volt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2014	Holden	Volt	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0150 0232 0150
2014	Holden	Volt	Instrument Cluster	√	√	√	√	√	0247
2014	Holden	Volt	HVAC Control Module	√	√	√	√	√	0007 0129
2014	Holden	Volt	Electric A/C Compressor Control Module	√					
2014	Holden	Volt	Battery Charger Control Module	√			√		
2014	Holden	Volt	Battery Energy Control Module	√			√		
2014	Holden	Volt	Coolant Heater Control Module	√	√	√			
2014	Holden	Volt	Hybrid Powertrain Control Module 2	√	√	√	√	√	0124 0125 0056 0218 0122 0123 0127
2014	Holden	Volt	Hybrid Powertrain Control Module	√	√	√	√	√	
2014	Holden	Volt	Drive Motor Control Module 1	√	√	√	√		
2014	Holden	Volt	Drive Motor Control Module 2	√	√	√	√		
2014	Holden	Volt	Auxiliary Transmission Fluid Pump	√	√	√	√		
2014	Holden	Volt	Telematics Communication Interface Control Module	√	√	√	√		
2014	Holden	Volt	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	Holden	Volt	Steering Column Lock Control Module	√	√	√	√		
2014	Holden	Volt	Keyless Entry Control Module	√	√	√	√	√	
2014	Holden	Volt	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	Holden	Volt	Frontview Camera Module	√	√	√	√	√	0205 0049
2014	Holden	Volt	Power Steering Control Module	√	√	√	√		0081 0080 0089
2014	Holden	Volt	Radio	√	√	√	√	√	
2014	Holden	Volt	Front Seat Heating Control Module	√	√	√	√	√	
2014	Holden	Volt	Parking Assist Control Module	√	√	√	√	√	0247
2014	Holden	Volt	Parking Brake Control Module	√	√	√	√	√	0229
2013	Buick	Encore	Transmission Control Module	√	√	√	√	√	0017
2013	Buick	Encore	Instrument Cluster	√	√	√	√	√	0301
2013	Buick	Encore	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Buick	Encore	Front Seat Heating Control Module	√	√	√	√	√	
2013	Buick	Encore	Parking Assist Control Module	√	√	√	√	√	0301
2013	Buick	Encore	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2013	Buick	Encore	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Buick	Encore	Engine Control Module	√	√	√	√	√	0263 0323 0305 0020 0306 0067 0217 0337
2013	Buick	Encore	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Buick	Encore	Passenger Presence Module	√	√	√	√		0322
2013	Buick	Encore	Electronic Brake Control Module	√	√	√	√	√	0090
2013	Buick	Encore	Multi-Axis Acceleration Sensor Module	√	√	√			
2013	Buick	Encore	Power Steering Control Module	√	√	√	√		

2013	Buick	Encore	Steering Wheel Angle Sensor Module	√	√	√			
2013	Buick	Encore	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Buick	Encore	Rear Differential Clutch Control Module	√	√	√	√	√	
2013	Buick	Encore	Radio	√	√	√	√	√	
2013	Buick	Encore	Frontview Camera Module	√	√	√	√	√	0205 0196
2013	Buick	Encore	Seat Memory Control Module	√	√	√	√	√	0310
2013	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0305 0306 0067 0308 0217 0309
2013	Buick	LaCrosse	Fuel Injector Control Module	√	√	√	√	√	
2013	Buick	LaCrosse	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2013	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0020 0106
2013	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	
2013	Buick	LaCrosse	Drive Motor Control Module	√	√	√	√		
2013	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2013	Buick	LaCrosse	Parking Brake Control Module	√	√	√	√	√	0316
2013	Buick	LaCrosse	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2013	Buick	LaCrosse	Power Steering Control Module	√	√	√	√		
2013	Buick	LaCrosse	Steering Wheel Angle Sensor Module	√	√	√			
2013	Buick	LaCrosse	Suension Control Module	√	√	√	√	√	
2013	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2013	Buick	LaCrosse	Passenger Presence Module	√	√	√	√		0322
2013	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0301
2013	Buick	LaCrosse	Head-Up Dilay Module	√	√	√	√	√	
2013	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2013	Buick	LaCrosse	Radio	√	√	√	√	√	
2013	Buick	LaCrosse	Multimedia Player Interface Module	√	√	√	√		
2013	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Buick	LaCrosse	Seat Memory Control Module	√	√	√	√	√	0310
2013	Buick	LaCrosse	Front Seat Heating Control Module	√	√	√	√	√	
2013	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2013	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0301
2013	Buick	LaCrosse	Steering Column Lock Control Module	√	√	√	√		
2013	Buick	Regal	Engine Control Module	√	√	√	√	√	0305 0306 0067 0308 0217 0309
2013	Buick	Regal	Fuel Injector Control Module	√	√	√	√	√	
2013	Buick	Regal	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Buick	Regal	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2013	Buick	Regal	Transmission Control Module	√	√	√	√	√	0016

2013	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	
2013	Buick	Regal	Drive Motor Control Module	√	√	√	√		
2013	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2013	Buick	Regal	Parking Brake Control Module	√	√	√	√	√	0316
2013	Buick	Regal	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Buick	Regal	Power Steering Control Module	√	√	√	√		
2013	Buick	Regal	Steering Wheel Angle Sensor Module	√	√	√			
2013	Buick	Regal	Suension Control Module	√	√	√	√	√	
2013	Buick	Regal	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2013	Buick	Regal	Passenger Presence Module	√	√	√	√		0322
2013	Buick	Regal	Instrument Cluster	√	√	√	√	√	0301
2013	Buick	Regal	Radio	√	√	√	√	√	
2013	Buick	Regal	Multimedia Player Interface Module	√	√	√	√		
2013	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Buick	Regal	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Buick	Verano	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Buick	Verano	Transmission Control Module	√	√	√	√	√	0020 0106
2013	Buick	Verano	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2013	Buick	Verano	Power Steering Control Module	√	√	√	√		
2013	Buick	Verano	Instrument Cluster	√	√	√	√	√	0301
2013	Buick	Verano	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Buick	Verano	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Buick	Verano	Front Seat Heating Control Module	√	√	√	√	√	
2013	Buick	Verano	Parking Assist Control Module	√	√	√	√	√	0301
2013	Buick	Verano	Left Side Object Detection Control Module	√	√	√		√	
2013	Buick	Verano	Right Side Object Detection Control Module	√	√	√		√	
2013	Buick	Verano	Parking Brake Control Module	√	√	√	√	√	0316
2013	Buick	Verano	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2013	Buick	Verano	Passenger Presence Module	√	√	√	√		0322
2013	Buick	Verano	Keyless Entry Control Module	√	√	√	√	√	
2013	Buick	Verano	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Buick	Verano	Radio	√	√	√	√	√	
2013	Buick	Verano	Multimedia Player Interface Module	√	√	√	√		
2013	Buick	Verano	Engine Control Module	√	√	√	√	√	0323 0305 0306 0067 0066 0308 0217 0309
2013	Buick	Verano	Steering Wheel Angle Sensor Module	√	√	√			
2013	Buick	Verano	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Cadillac	ATS	Engine Control Module	√	√	√	√	√	0263 0305 0306 0067 0308 0217 0309

2013	Cadillac	ATS	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Cadillac	ATS	Transmission Control Module	√	√	√	√	√	0016
2013	Cadillac	ATS	Transfer Case Control Module	√	√	√	√	√	0099 0100
2013	Cadillac	ATS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0111
2013	Cadillac	ATS	Parking Brake Control Module	√	√	√	√	√	0316
2013	Cadillac	ATS	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Cadillac	ATS	Power Steering Control Module	√	√	√	√		0080
2013	Cadillac	ATS	Steering Wheel Angle Sensor Module	√	√	√			
2013	Cadillac	ATS	Suension Control Module	√	√	√	√	√	0114 0198 0198 0245
2013	Cadillac	ATS	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Cadillac	ATS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172 0172 0111 0111 0111 0111 0111
2013	Cadillac	ATS	Passenger Presence Module	√	√	√	√		0322
2013	Cadillac	ATS	Instrument Cluster	√	√	√	√	√	0301
2013	Cadillac	ATS	Headlamp Control Module	√	√	√	√	√	0195
2013	Cadillac	ATS	Radio	√	√	√	√	√	0226 0150
2013	Cadillac	ATS	Amplifier	√	√	√	√		
2013	Cadillac	ATS	Human Machine Interface Control Module	√	√	√	√	√	0150
2013	Cadillac	ATS	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Cadillac	ATS	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Cadillac	ATS	Seat Memory Control Module	√	√	√	√	√	0310
2013	Cadillac	ATS	Keyless Entry Control Module	√	√	√	√	√	
2013	Cadillac	ATS	Parking Assist Control Module	√	√	√	√	√	0301
2013	Cadillac	ATS	Steering Column Lock Control Module	√	√	√	√		
2013	Cadillac	ATS	Left Front Short Range Radar Sensor Module	√	√	√	√		
2013	Cadillac	ATS	Right Front Short Range Radar Sensor Module	√	√	√	√		
2013	Cadillac	ATS	Rear Short Range Radar Sensor Module	√	√	√	√		
2013	Cadillac	ATS	Left Side Object Detection Control Module	√	√	√		√	
2013	Cadillac	ATS	Right Side Object Detection Control Module	√	√	√		√	
2013	Cadillac	ATS	Trailer Interface Control Module	√	√	√	√	√	0301
2013	Cadillac	ATS	Frontview Camera Module	√	√	√	√	√	0205 0196
2013	Cadillac	ATS	Long Range Radar Sensor Module	√	√	√	√		0340
2013	Cadillac	ATS	Active Safety Control Module	√	√	√	√	√	
2013	Cadillac	SRX	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2013	Cadillac	SRX	Transmission Control Module	√	√	√	√	√	0016
2013	Cadillac	SRX	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2013	Cadillac	SRX	Parking Brake Control Module	√	√	√	√	√	0316
2013	Cadillac	SRX	Instrument Cluster	√	√	√	√	√	0301
2013	Cadillac	SRX	Headlamp Control Module	√	√	√	√	√	
2013	Cadillac	SRX	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259

2013	Cadillac	SRX	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Cadillac	SRX	Seat Memory Control Module	√	√	√	√	√	0310
2013	Cadillac	SRX	Rear Seat Heating Control Module	√	√	√	√	√	
2013	Cadillac	SRX	Parking Assist Control Module	√	√	√	√	√	0301
2013	Cadillac	SRX	Steering Column Lock Control Module	√	√	√	√		
2013	Cadillac	SRX	Left Side Object Detection Control Module	√	√	√		√	
2013	Cadillac	SRX	Right Side Object Detection Control Module	√	√	√		√	
2013	Cadillac	SRX	Trailer Interface Control Module	√	√	√	√	√	0301
2013	Cadillac	SRX	Liftgate Control Module	√	√	√	√	√	0146
2013	Cadillac	SRX	Radio	√	√	√	√	√	0226 0150
2013	Cadillac	SRX	Amplifier	√	√	√	√		
2013	Cadillac	SRX	Human Machine Interface Control Module	√	√	√	√	√	0150
2013	Cadillac	SRX	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2013	Cadillac	SRX	Passenger Presence Module	√	√	√	√		0322
2013	Cadillac	SRX	Keyless Entry Control Module	√	√	√	√	√	
2013	Cadillac	SRX	Rear Differential Clutch Control Module	√	√	√	√	√	
2013	Cadillac	SRX	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Cadillac	SRX	Frontview Camera Module	√	√	√	√	√	0205 0196
2013	Cadillac	SRX	Multi-Axis Acceleration Sensor Module	√	√	√			
2013	Cadillac	SRX	Steering Wheel Angle Sensor Module	√	√	√			
2013	Cadillac	SRX	Suension Control Module	√	√	√	√	√	
2013	Cadillac	SRX	Long Range Radar Sensor Module	√	√	√	√		0340
2013	Cadillac	SRX	Media Disc Player	√	√	√	√	√	
2013	Cadillac	SRX	Left Front Short Range Radar Sensor Module	√	√	√	√		
2013	Cadillac	SRX	Right Front Short Range Radar Sensor Module	√	√	√	√		
2013	Cadillac	SRX	Rear Short Range Radar Sensor Module	√	√	√	√		
2013	Cadillac	XTS	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2013	Cadillac	XTS	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Cadillac	XTS	Transmission Control Module	√	√	√	√	√	0016
2013	Cadillac	XTS	Rear Differential Clutch Control Module	√	√	√	√	√	
2013	Cadillac	XTS	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2013	Cadillac	XTS	Parking Brake Control Module	√	√	√	√	√	0316
2013	Cadillac	XTS	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Cadillac	XTS	Power Steering Control Module	√	√	√	√		
2013	Cadillac	XTS	Steering Wheel Angle Sensor Module	√	√	√			
2013	Cadillac	XTS	Suension Control Module	√	√	√	√	√	0114 0198 0198 0245
2013	Cadillac	XTS	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Cadillac	XTS	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172 0172 0111 0111 0111 0111 0111

2013	Cadillac	XTS	Passenger Presence Module	√	√	√	√		0322
2013	Cadillac	XTS	Instrument Cluster	√	√	√	√	√	0301
2013	Cadillac	XTS	Headlamp Control Module	√	√	√	√	√	0195
2013	Cadillac	XTS	Radio	√	√	√	√	√	0226 0150
2013	Cadillac	XTS	Amplifier	√	√	√	√		
2013	Cadillac	XTS	Human Machine Interface Control Module	√	√	√	√	√	0150
2013	Cadillac	XTS	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Cadillac	XTS	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Cadillac	XTS	Seat Memory Control Module	√	√	√	√	√	0310
2013	Cadillac	XTS	Keyless Entry Control Module	√	√	√	√	√	
2013	Cadillac	XTS	Parking Assist Control Module	√	√	√	√	√	0301
2013	Cadillac	XTS	Frontview Camera Module	√	√	√	√	√	0205 0196
2013	Cadillac	XTS	Long Range Radar Sensor Module	√	√	√	√		0340
2013	Cadillac	XTS	Left Front Short Range Radar Sensor Module	√	√	√	√		
2013	Chevrolet	Beat	Engine Control Module	√	√	√	√	√	0305 0323 0147 0217
2013	Chevrolet	Beat	Fuel Injector Control Module	√	√	√	√	√	
2013	Chevrolet	Beat	Transmission Control Module	√	√	√	√	√	
2013	Chevrolet	Beat	Electronic Brake Control Module	√	√	√	√	√	0090
2013	Chevrolet	Beat	Instrument Cluster	√	√	√	√	√	
2013	Chevrolet	Beat	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2013	Chevrolet	Beat	Power Steering Control Module	√	√	√	√		
2013	Chevrolet	Beat	Steering Wheel Angle Sensor Module	√	√	√			
2013	Chevrolet	Beat	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Chevrolet	Camaro	Engine Control Module	√	√	√	√	√	0323 0305 0306 0067 0263 0308 0217 0309
2013	Chevrolet	Camaro	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Chevrolet	Camaro	Transmission Control Module	√	√	√	√	√	0016
2013	Chevrolet	Camaro	Electronic Brake Control Module	√	√	√	√	√	0090 0225
2013	Chevrolet	Camaro	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Chevrolet	Camaro	Power Steering Control Module	√	√	√	√		0092
2013	Chevrolet	Camaro	Steering Wheel Angle Sensor Module	√	√	√			
2013	Chevrolet	Camaro	Suension Control Module	√	√	√	√	√	0245
2013	Chevrolet	Camaro	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Chevrolet	Camaro	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2013	Chevrolet	Camaro	Passenger Presence Module	√	√	√	√		0322
2013	Chevrolet	Camaro	Instrument Cluster	√	√	√	√	√	0301
2013	Chevrolet	Camaro	Head-Up Dilay Module	√	√	√	√	√	
2013	Chevrolet	Camaro	Auxiliary Gage Module	√	√	√	√	√	
2013	Chevrolet	Camaro	Headlamp Control Module	√	√	√	√	√	0195
2013	Chevrolet	Camaro	Radio	√	√	√	√	√	
2013	Chevrolet	Camaro	Multimedia Player Interface Module	√	√	√	√		



2013	Chevrolet	Camaro	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2013	Chevrolet	Camaro	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Chevrolet	Camaro	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Chevrolet	Camaro	Front Seat Heating Control Module	√	√	√	√	√	
2013	Chevrolet	Camaro	Folding Top Control Module	√	√	√	√	√	
2013	Chevrolet	Caprice	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2013	Chevrolet	Caprice	Transmission Control Module	√	√	√	√	√	0016
2013	Chevrolet	Cobalt	Engine Control Module	√	√	√	√	√	0263 0323 0305 0020 0306 0067 0217 0337
2013	Chevrolet	Cobalt	Transmission Control Module	√	√	√	√	√	0017
2013	Chevrolet	Cobalt	Electronic Brake Control Module	√	√	√	√	√	0090
2013	Chevrolet	Cobalt	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Chevrolet	Cobalt	Steering Wheel Angle Sensor Module	√	√	√			
2013	Chevrolet	Cobalt	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Chevrolet	Cobalt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2013	Chevrolet	Cobalt	Instrument Cluster	√	√	√	√	√	0301
2013	Chevrolet	Cobalt	Radio	√	√	√	√	√	
2013	Chevrolet	Cobalt	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2013	Chevrolet	Cobalt	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Chevrolet	Colorado	Engine Control Module	√	√	√	√	√	0305 0306 0067 0323 0263 0308 0217 0309
2013	Chevrolet	Colorado	Transmission Control Module	√	√	√	√	√	0016
2013	Chevrolet	Colorado	Transfer Case Control Module	√	√	√	√	√	0037
2013	Chevrolet	Colorado	Electronic Brake Control Module	√	√	√	√	√	0090 0112
2013	Chevrolet	Colorado	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Chevrolet	Colorado	Steering Wheel Angle Sensor Module	√	√	√			
2013	Chevrolet	Colorado	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Chevrolet	Colorado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2013	Chevrolet	Colorado	Instrument Cluster	√	√	√	√	√	0301
2013	Chevrolet	Colorado	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2013	Chevrolet	Cruze	Engine Control Module	√	√	√	√	√	0263 0323 0305 0020 0306 0067 0217 0337
2013	Chevrolet	Cruze	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Chevrolet	Cruze	Transmission Control Module	√	√	√	√	√	0017
2013	Chevrolet	Cruze	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2013	Chevrolet	Cruze	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Chevrolet	Cruze	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080

2013	Chevrolet	Cruze	Steering Wheel Angle Sensor Module	√	√	√			
2013	Chevrolet	Cruze	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Chevrolet	Cruze	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2013	Chevrolet	Cruze	Passenger Presence Module	√	√	√	√		0322
2013	Chevrolet	Cruze	Instrument Cluster	√	√	√	√	√	0301
2013	Chevrolet	Cruze	Trailer Interface Control Module	√	√	√	√	√	0301
2013	Chevrolet	Cruze	Radio	√	√	√	√	√	
2013	Chevrolet	Cruze	Multimedia Player Interface Module	√	√	√	√		
2013	Chevrolet	Cruze	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2013	Chevrolet	Cruze	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2013	Chevrolet	Cruze	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Chevrolet	Cruze	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Chevrolet	Cruze	Front Seat Heating Control Module	√	√	√	√	√	
2013	Chevrolet	Cruze	Keyless Entry Control Module	√	√	√	√	√	
2013	Chevrolet	Cruze	Parking Assist Control Module	√	√	√	√	√	
2013	Chevrolet	Cruze	Steering Column Lock Control Module	√	√	√	√		
2013	Chevrolet	Cruze	Left Side Object Detection Control Module	√	√	√		√	
2013	Chevrolet	Cruze	Right Side Object Detection Control Module	√	√	√		√	
2013	Chevrolet	Cruze	Digital Radio Receiver Control Module	√	√	√	√	√	0301
2013	Chevrolet	Enjoy	Engine Control Module	√	√	√	√	√	0382 0173 0066 0461 0308 0106
2013	Chevrolet	Enjoy	Electronic Brake Control Module	√	√	√	√	√	
2013	Chevrolet	Enjoy	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√		
2013	Chevrolet	Enjoy	Instrument Cluster		√	√			
2013	Chevrolet	Equinox	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2013	Chevrolet	Equinox	Transmission Control Module	√	√	√	√	√	0016
2013	Chevrolet	Equinox	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2013	Chevrolet	Equinox	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2013	Chevrolet	Equinox	Power Steering Control Module	√	√	√	√		
2013	Chevrolet	Equinox	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2013	Chevrolet	Equinox	Passenger Presence Module	√	√	√	√		0322
2013	Chevrolet	Equinox	Instrument Cluster	√	√	√	√	√	0301
2013	Chevrolet	Equinox	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Chevrolet	Equinox	Liftgate Control Module	√	√	√	√	√	0146
2013	Chevrolet	Equinox	Radio	√	√	√	√	√	
2013	Chevrolet	Equinox	Seat Memory Control Module	√	√	√	√	√	0310
2013	Chevrolet	Equinox	Front Seat Heating Control Module	√	√	√	√	√	
2013	Chevrolet	Equinox	Parking Assist Control Module	√	√	√	√	√	0301
2013	Chevrolet	Equinox	Left Side Object Detection Control Module	√	√	√		√	

2013	Chevrolet	Equinox	Right Side Object Detection Control Module	√	√	√		√	
2013	Chevrolet	Equinox	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Chevrolet	Equinox	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Chevrolet	Equinox	Frontview Camera Module	√	√	√	√	√	0205 0196
2013	Chevrolet	Equinox	Rear Audio Control Module	√	√	√	√	√	
2013	Chevrolet	Equinox	Multi-Axis Acceleration Sensor Module	√	√	√			
2013	Chevrolet	Malibu	Engine Control Module	√	√	√	√	√	0305 0306 0067 0308 0217 0309
2013	Chevrolet	Malibu	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Chevrolet	Malibu	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2013	Chevrolet	Malibu	Transmission Control Module	√	√	√	√	√	0020 0106
2013	Chevrolet	Malibu	Drive Motor Control Module	√	√	√	√		
2013	Chevrolet	Malibu	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2013	Chevrolet	Malibu	Parking Brake Control Module	√	√	√	√	√	0316
2013	Chevrolet	Malibu	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Chevrolet	Malibu	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2013	Chevrolet	Malibu	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2013	Chevrolet	Malibu	Suension Control Module	√	√	√	√	√	
2013	Chevrolet	Malibu	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Chevrolet	Malibu	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2013	Chevrolet	Malibu	Passenger Presence Module	√	√	√	√		0322
2013	Chevrolet	Malibu	Instrument Cluster	√	√	√	√	√	0301
2013	Chevrolet	Malibu	Headlamp Control Module	√	√	√	√	√	
2013	Chevrolet	Malibu	Radio	√	√	√	√	√	
2013	Chevrolet	Malibu	Digital Radio Receiver Control Module	√	√	√	√	√	0301
2013	Chevrolet	Malibu	Multimedia Player Interface Module	√	√	√	√		
2013	Chevrolet	Malibu	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2013	Chevrolet	Malibu	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Chevrolet	Malibu	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Chevrolet	Malibu	Seat Memory Control Module	√	√	√	√	√	0310
2013	Chevrolet	Malibu	Front Seat Heating Control Module	√	√	√	√	√	
2013	Chevrolet	Malibu	Rear Seat Heating Control Module	√	√	√	√	√	
2013	Chevrolet	Malibu	Keyless Entry Control Module	√	√	√	√	√	
2013	Chevrolet	Malibu	Parking Assist Control Module	√	√	√	√	√	0301
2013	Chevrolet	Malibu	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2013	Chevrolet	Malibu	Steering Column Lock Control Module	√	√	√	√		
2013	Chevrolet	Malibu	Battery Energy Control Module	√			√		
2013	Chevrolet	Malibu	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2013	Chevrolet	Malibu	Fuel Injector Control Module	√	√	√	√	√	

2013	Chevrolet	N300	Engine Control Module	√	√	√	√	√	0374 0375 0255
2013	Chevrolet	N300	Electronic Brake Control Module	√	√	√	√	√	
2013	Chevrolet	N300	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2013	Chevrolet	Onix	Transmission Control Module	√	√	√	√	√	0017
2013	Chevrolet	Onix	Instrument Cluster	√	√	√	√	√	0301
2013	Chevrolet	Onix	Parking Assist Control Module	√	√	√	√	√	
2013	Chevrolet	Onix	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172 0172 0111 0111 0111 0111 0111
2013	Chevrolet	Onix	Engine Control Module	√	√	√	√	√	0323 0305 0306 0067 0263 0308 0217
2013	Chevrolet	Onix	Radio	√	√	√	√	√	
2013	Chevrolet	Onix	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Chevrolet	Onix	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Chevrolet	Onix	Electronic Brake Control Module	√	√	√	√	√	0090
2013	Chevrolet	Onix	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2013	Chevrolet	Onix	Steering Wheel Angle Sensor Module	√	√	√			
2013	Chevrolet	Orlando	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2013	Chevrolet	Orlando	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Chevrolet	Orlando	Transmission Control Module	√	√	√	√	√	0017
2013	Chevrolet	Orlando	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2013	Chevrolet	Orlando	Parking Brake Control Module	√	√	√	√	√	0316
2013	Chevrolet	Orlando	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2013	Chevrolet	Orlando	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2013	Chevrolet	Orlando	Instrument Cluster	√	√	√	√	√	0301
2013	Chevrolet	Orlando	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Chevrolet	Orlando	Front Seat Heating Control Module	√	√	√	√	√	
2013	Chevrolet	Orlando	Parking Assist Control Module	√	√	√	√	√	0301
2013	Chevrolet	Orlando	Keyless Entry Control Module	√	√	√	√	√	
2013	Chevrolet	Orlando	Radio	√	√	√	√	√	
2013	Chevrolet	Orlando	Multimedia Player Interface Module	√	√	√	√		
2013	Chevrolet	Orlando	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2013	Chevrolet	Orlando	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Chevrolet	Orlando	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Chevrolet	Orlando	Steering Wheel Angle Sensor Module	√	√	√			
2013	Chevrolet	Orlando	Fuel Injector Control Module	√	√	√	√	√	
2013	Chevrolet	Orlando	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Chevrolet	Orlando	Digital Radio Receiver Control Module	√	√	√	√	√	0301

2013	Chevrolet	Prisma	Engine Control Module	√	√	√	√	√	0323 0305 0306 0067 0263 0308 0217
2013	Chevrolet	Prisma	Transmission Control Module	√	√	√	√	√	0017
2013	Chevrolet	Prisma	Electronic Brake Control Module	√	√	√	√	√	0090
2013	Chevrolet	Prisma	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Chevrolet	Prisma	Steering Wheel Angle Sensor Module	√	√	√			
2013	Chevrolet	Prisma	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Chevrolet	Prisma	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172 0172 0111 0111 0111 0111 0111
2013	Chevrolet	Prisma	Instrument Cluster	√	√	√	√	√	0301
2013	Chevrolet	Prisma	Radio	√	√	√	√	√	
2013	Chevrolet	Prisma	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2013	Chevrolet	Prisma	Parking Assist Control Module	√	√	√	√	√	0301
2013	Chevrolet	S10	Engine Control Module	√	√	√	√	√	0484 0387
2013	Chevrolet	S10	Transmission Control Module	√	√	√	√	√	0016
2013	Chevrolet	S10	Transfer Case Control Module	√	√	√	√	√	0037
2013	Chevrolet	S10	Electronic Brake Control Module	√	√	√	√	√	0090
2013	Chevrolet	S10	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0112 0111 0111
2013	Chevrolet	S10	Steering Wheel Angle Sensor Module	√	√	√			
2013	Chevrolet	S10	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Chevrolet	S10	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2013	Chevrolet	S10	Instrument Cluster	√	√	√	√	√	
2013	Chevrolet	S10	Trailer Interface Control Module	√	√	√	√	√	
2013	Chevrolet	S10	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2013	Chevrolet	Sail	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√		0064 0040 0063 0039 0227 0064 0040 0063 0039 0172 0177
2013	Chevrolet	Sail	Keyless Entry Control Module				√		
2013	Chevrolet	Sail	Engine Control Module	√	√	√	√	√	0133 0382 0098 0096 0094 0387 0143 0265
2013	Chevrolet	Sail	Transmission Control Module	√	√	√	√	√	0479 0480 0153 0136
2013	Chevrolet	Sail	Electronic Brake Control Module	√	√	√	√	√	
2013	Chevrolet	Sonic	Engine Control Module	√	√	√	√	√	0263 0323 0305 0020 0306 0067 0217 0337
2013	Chevrolet	Sonic	Fuel Injector Control Module	√			√	√	
2013	Chevrolet	Sonic	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Chevrolet	Sonic	Transmission Control Module	√	√	√	√	√	0017
2013	Chevrolet	Sonic	Electronic Brake Control Module	√	√	√	√	√	0090

2013	Chevrolet	Sonic	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Chevrolet	Sonic	Power Steering Control Module	√	√	√	√		
2013	Chevrolet	Sonic	Steering Wheel Angle Sensor Module	√	√	√			
2013	Chevrolet	Sonic	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Chevrolet	Sonic	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2013	Chevrolet	Sonic	Passenger Presence Module	√	√	√	√		0322
2013	Chevrolet	Sonic	Instrument Cluster	√	√	√	√	√	0301
2013	Chevrolet	Sonic	Radio	√	√	√	√	√	
2013	Chevrolet	Sonic	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Chevrolet	Sonic	HVAC Control Module	√	√	√	√	√	
2013	Chevrolet	Sonic	Front Seat Heating Control Module	√	√	√	√	√	
2013	Chevrolet	Sonic	Parking Assist Control Module	√	√	√	√	√	0301
2013	Chevrolet	Sonic	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2013	Chevrolet	in	Engine Control Module	√	√	√	√	√	0133 0133 0323 0382 0382 0383 0098 0098 0096 0096 0094 0094 0387 0387 0130 0143 0265 0265 0147 0147 0391 0391 0392 0308 0393 0393 0394 0135 0128 0173 0173
2013	Chevrolet	in	Transmission Control Module	√	√	√	√	√	0017
2013	Chevrolet	in	Electronic Brake Control Module	√	√	√	√	√	0090
2013	Chevrolet	in	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Chevrolet	in	Steering Wheel Angle Sensor Module	√	√	√			
2013	Chevrolet	in	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Chevrolet	in	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2013	Chevrolet	in	Instrument Cluster	√	√	√	√	√	0301
2013	Chevrolet	in	Radio	√	√	√	√	√	
2013	Chevrolet	in	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2013	Chevrolet	in	HVAC Control Module	√	√	√	√	√	
2013	Chevrolet	in	Parking Assist Control Module	√	√	√	√	√	0301
2013	Chevrolet	Tavera	Engine Control Module	√	√	√	√	√	
2013	Chevrolet	Tracker	Transmission Control Module	√	√	√	√	√	0017
2013	Chevrolet	Tracker	Instrument Cluster	√	√	√	√	√	0301
2013	Chevrolet	Tracker	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Chevrolet	Tracker	Front Seat Heating Control Module	√	√	√	√	√	
2013	Chevrolet	Tracker	Parking Assist Control Module	√	√	√	√	√	0301
2013	Chevrolet	Tracker	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172

2013	Chevrolet	Tracker	Passenger Presence Module	√	√	√	√		0322
2013	Chevrolet	Tracker	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Chevrolet	Tracker	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2013	Chevrolet	Tracker	Engine Control Module	√	√	√	√	√	0263 0323 0305 0020 0306 0067 0217 0337
2013	Chevrolet	Tracker	Radio	√	√	√	√	√	
2013	Chevrolet	Tracker	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Chevrolet	Tracker	Rear Differential Clutch Control Module	√	√	√	√	√	
2013	Chevrolet	Tracker	HVAC Control Module	√	√	√	√	√	
2013	Chevrolet	Tracker	Electronic Brake Control Module	√	√	√	√	√	0090
2013	Chevrolet	Tracker	Power Steering Control Module	√	√	√	√		
2013	Chevrolet	Tracker	Steering Wheel Angle Sensor Module	√	√	√			
2013	Chevrolet	Tracker	Frontview Camera Module	√	√	√	√	√	0205 0447
2013	Chevrolet	Trailblazer	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2013	Chevrolet	Trailblazer	Transmission Control Module	√	√	√	√	√	0016
2013	Chevrolet	Trailblazer	Transfer Case Control Module	√	√	√	√	√	0037
2013	Chevrolet	Trailblazer	Electronic Brake Control Module	√	√	√	√	√	0090 0112
2013	Chevrolet	Trailblazer	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Chevrolet	Trailblazer	Steering Wheel Angle Sensor Module	√	√	√			
2013	Chevrolet	Trailblazer	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Chevrolet	Trailblazer	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2013	Chevrolet	Trailblazer	Instrument Cluster	√	√	√	√	√	0301
2013	Chevrolet	Trailblazer	Trailer Interface Control Module	√	√	√	√	√	0301
2013	Chevrolet	Trailblazer	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2013	Chevrolet	Trailblazer	Parking Assist Control Module	√	√	√	√	√	0301
2013	Chevrolet	Trax	Transmission Control Module	√	√	√	√	√	0017
2013	Chevrolet	Trax	Instrument Cluster	√	√	√	√	√	0301
2013	Chevrolet	Trax	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Chevrolet	Trax	Front Seat Heating Control Module	√	√	√	√	√	
2013	Chevrolet	Trax	Parking Assist Control Module	√	√	√	√	√	0301
2013	Chevrolet	Trax	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2013	Chevrolet	Trax	Passenger Presence Module	√	√	√	√		0322
2013	Chevrolet	Trax	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Chevrolet	Trax	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Chevrolet	Trax	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	

2013	Chevrolet	Trax	Engine Control Module	√	√	√	√	√	0263 0323 0305 0020 0306 0067 0217 0337
2013	Chevrolet	Trax	Radio	√	√	√	√	√	
2013	Chevrolet	Trax	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Chevrolet	Trax	Rear Differential Clutch Control Module	√	√	√	√	√	
2013	Chevrolet	Trax	HVAC Control Module	√	√	√	√	√	
2013	Chevrolet	Trax	Electronic Brake Control Module	√	√	√	√	√	0090
2013	Chevrolet	Trax	Power Steering Control Module	√	√	√	√		
2013	Chevrolet	Trax	Steering Wheel Angle Sensor Module	√	√	√			
2013	Chevrolet	Trax	Frontview Camera Module	√	√	√	√	√	0205 0447
2013	Chevrolet	Volt	Engine Control Module	√	√	√	√	√	0305 0306 0067 0308 0217 0176
2013	Chevrolet	Volt	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Chevrolet	Volt	Hybrid Powertrain Control Module	√	√	√	√	√	
2013	Chevrolet	Volt	Transmission Control Module	√	√	√	√	√	
2013	Chevrolet	Volt	Drive Motor Control Module 1	√	√	√	√		
2013	Chevrolet	Volt	Drive Motor Control Module 2	√	√	√	√		
2013	Chevrolet	Volt	Auxiliary Transmission Fluid Pump	√	√	√	√		
2013	Chevrolet	Volt	Electronic Brake Control Module	√	√	√	√	√	0371 0111 0111 0111
2013	Chevrolet	Volt	Parking Brake Control Module	√	√	√	√	√	0316
2013	Chevrolet	Volt	Multi-Axis Acceleration Sensor Module	√	√	√			
2013	Chevrolet	Volt	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2013	Chevrolet	Volt	Steering Wheel Angle Sensor Module	√	√	√			
2013	Chevrolet	Volt	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Chevrolet	Volt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2013	Chevrolet	Volt	Passenger Presence Module	√	√	√	√		0322
2013	Chevrolet	Volt	Instrument Cluster	√	√	√	√	√	0301 0301
2013	Chevrolet	Volt	Radio	√	√	√	√	√	
2013	Chevrolet	Volt	Digital Radio Receiver Control Module	√	√	√	√	√	0301
2013	Chevrolet	Volt	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2013	Chevrolet	Volt	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	Chevrolet	Volt	Electric A/C Compressor Control Module	√					
2013	Chevrolet	Volt	Coolant Heater Control Module	√	√	√			
2013	Chevrolet	Volt	Front Seat Heating Control Module	√	√	√	√	√	
2013	Chevrolet	Volt	Keyless Entry Control Module	√	√	√	√	√	
2013	Chevrolet	Volt	Parking Assist Control Module	√	√	√	√	√	0301
2013	Chevrolet	Volt	Steering Column Lock Control Module	√	√	√	√		
2013	Chevrolet	Volt	Battery Charger Control Module	√			√		
2013	Chevrolet	Volt	Hybrid Powertrain Control Module 2	√	√	√	√	√	0362 0363 0364 0365 0366 0367 0368
2013	Chevrolet	Volt	Battery Energy Control Module	√			√		



2013	Chevrolet	Volt	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Chevrolet	Volt	Multimedia Player Interface Module	√	√	√	√		
2013	Chevrolet	Volt	Frontview Camera Module	√	√	√	√	√	0205 0196
2013	Alpheon	Alpheon	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2013	Alpheon	Alpheon	Transmission Control Module	√	√	√	√	√	0017
2013	Alpheon	Alpheon	Drive Motor Control Module	√	√	√	√		
2013	Alpheon	Alpheon	Instrument Cluster	√	√	√	√	√	0301
2013	Alpheon	Alpheon	Seat Memory Control Module	√	√	√	√	√	0310
2013	Alpheon	Alpheon	Front Seat Heating Control Module	√	√	√	√	√	
2013	Alpheon	Alpheon	Rear Seat Heating Control Module	√	√	√	√	√	
2013	Alpheon	Alpheon	Parking Assist Control Module	√	√	√	√	√	0301
2013	Alpheon	Alpheon	Battery Energy Control Module	√			√		
2013	Alpheon	Alpheon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2013	Alpheon	Alpheon	Keyless Entry Control Module	√	√	√	√	√	
2013	Alpheon	Alpheon	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2013	Alpheon	Alpheon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0111
2013	Alpheon	Alpheon	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Alpheon	Alpheon	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Alpheon	Alpheon	Suspension Control Module	√	√	√	√	√	
2013	Alpheon	Alpheon	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2013	Alpheon	Alpheon	Radio	√	√	√	√	√	
2013	Alpheon	Alpheon	Rear Audio Control Module	√	√	√	√	√	
2013	Alpheon	Alpheon	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Alpheon	Alpheon	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2013	Alpheon	Alpheon	Steering Wheel Angle Sensor Module	√	√	√			
2013	Alpheon	Alpheon	Frontview Camera Module	√	√	√	√	√	0205 0447
2013	Alpheon	Alpheon	Parking Brake Control Module	√	√	√	√	√	0316
2013	Alpheon	Alpheon	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Alpheon	Alpheon	Headlamp Control Module	√	√	√	√	√	0195
2013	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2013	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0016
2013	GMC	Terrain	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2013	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2013	GMC	Terrain	Power Steering Control Module	√	√	√	√		
2013	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2013	GMC	Terrain	Passenger Presence Module	√	√	√	√		0322
2013	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0301
2013	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146

2013	GMC	Terrain	Front Seat Heating Control Module	√	√	√	√	√	
2013	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0301
2013	GMC	Terrain	Left Side Object Detection Control Module	√	√	√		√	
2013	GMC	Terrain	Right Side Object Detection Control Module	√	√	√		√	
2013	GMC	Terrain	Radio	√	√	√	√	√	
2013	GMC	Terrain	Seat Memory Control Module	√	√	√	√	√	0310
2013	GMC	Terrain	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	GMC	Terrain	HVAC Control Module	√	√	√	√	√	0311 0129
2013	GMC	Terrain	Frontview Camera Module	√	√	√	√	√	0205 0196
2013	GMC	Terrain	Multi-Axis Acceleration Sensor Module	√	√	√			
2013	Holden	Barina	Engine Control Module	√	√	√	√	√	0323 0305 0306 0067 0263 0308 0217
2013	Holden	Barina	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Holden	Barina	Transmission Control Module	√	√	√	√	√	0017
2013	Holden	Barina	Electronic Brake Control Module	√	√	√	√	√	0090
2013	Holden	Barina	Instrument Cluster	√	√	√	√	√	0301
2013	Holden	Barina	Parking Assist Control Module	√	√	√	√	√	0301
2013	Holden	Barina	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2013	Holden	Barina	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Holden	Barina	Power Steering Control Module	√	√	√	√		
2013	Holden	Barina	Steering Wheel Angle Sensor Module	√	√	√			
2013	Holden	Barina	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Holden	Barina	Radio	√	√	√	√	√	
2013	Holden	Barina	HVAC Control Module	√	√	√	√	√	
2013	Holden	Barina	Front Seat Heating Control Module	√	√	√	√	√	
2013	Holden	Barina ark	Electronic Brake Control Module	√	√	√	√	√	0090
2013	Holden	Barina ark	Instrument Cluster	√	√	√	√	√	
2013	Holden	Barina ark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2013	Holden	Barina ark	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Holden	Barina ark	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Holden	Barina ark	Engine Control Module	√	√	√	√	√	0323 0305 0306 0067 0263 0308 0217
2013	Holden	Barina ark	Transmission Control Module	√	√	√	√	√	0016
2013	Holden	Barina ark	Power Steering Control Module	√	√	√	√		
2013	Holden	Barina ark	Steering Wheel Angle Sensor Module	√	√	√			
2013	Holden	Barina ark	Radio	√	√	√	√	√	
2013	Holden	Captiva 5	Transmission Control Module	√	√	√	√	√	0017
2013	Holden	Captiva 5	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2013	Holden	Captiva 5	Instrument Cluster	√	√	√	√	√	

2013	Holden	Captiva 5	HVAC Control Module	√	√	√		√	
2013	Holden	Captiva 5	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2013	Holden	Captiva 5	Electronic Brake Control Module	√	√	√	√	√	0090
2013	Holden	Captiva 5	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0332
2013	Holden	Captiva 5	Info Dilay Module	√	√	√	√	√	0170 0170 0170 0170 0467 0468 0301 0301 0246 0246 0246 0246
2013	Holden	Captiva 5	Radio	√	√	√	√	√	0170 0170 0170 0170 0065 0065 0065 0065
2013	Holden	Captiva 5	Body Control Module	√	√	√	√	√	0243 0263
2013	Holden	Captiva 5	Mobile Telephone Control Module	√	√	√		√	
2013	Holden	Captiva 5	Headlamp Control Module	√	√	√	√	√	0195 0065
2013	Holden	Captiva 5	Auxiliary Body Control Module	√	√	√	√	√	0050
2013	Holden	Captiva 5	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0298
2013	Holden	Captiva 5	Theft Deterrent Module	√	√	√	√		
2013	Holden	Captiva 5	Parking Brake Control Module	√	√	√	√	√	0316
2013	Holden	Captiva 5	Parking Assist Control Module	√	√	√	√	√	
2013	Holden	Captiva 5	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Holden	Captiva 7	Transmission Control Module	√	√	√	√	√	0017
2013	Holden	Captiva 7	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2013	Holden	Captiva 7	Instrument Cluster	√	√	√	√	√	
2013	Holden	Captiva 7	Auxiliary Body Control Module	√	√	√	√	√	0050
2013	Holden	Captiva 7	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0298
2013	Holden	Captiva 7	Body Control Module	√	√	√	√	√	0243 0263 0332
2013	Holden	Captiva 7	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172 0332
2013	Holden	Captiva 7	Theft Deterrent Module	√	√	√	√		
2013	Holden	Captiva 7	Engine Control Module	√	√	√	√	√	0323 0305 0098 0387 0224 0449 0130 0143 0450 0265 0147 0108 0452 0391 0401 0392 0308 0394 0135 0453 0454 0455 0456
2013	Holden	Captiva 7	Electronic Brake Control Module	√	√	√	√	√	0090 0111
2013	Holden	Captiva 7	HVAC Control Module	√	√	√		√	
2013	Holden	Captiva 7	Mobile Telephone Control Module	√	√	√	√	√	0301
2013	Holden	Captiva 7	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Holden	Captiva 7	Headlamp Control Module	√	√	√	√	√	0195 0065
2013	Holden	Captiva 7	Parking Brake Control Module	√	√	√	√	√	0316
2013	Holden	Colorado	Engine Control Module	√	√	√	√	√	0305 0306 0067 0323 0263 0308 0217 0309

2013	Holden	Colorado	Transmission Control Module	√	√	√	√	√	0016
2013	Holden	Colorado	Transfer Case Control Module	√	√	√	√	√	0037
2013	Holden	Colorado	Electronic Brake Control Module	√	√	√	√	√	0090 0112
2013	Holden	Colorado	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Holden	Colorado	Steering Wheel Angle Sensor Module	√	√	√			
2013	Holden	Colorado	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Holden	Colorado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2013	Holden	Colorado	Instrument Cluster	√	√	√	√	√	0301
2013	Holden	Colorado	Trailer Interface Control Module	√	√	√	√	√	0301
2013	Holden	Colorado	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2013	Holden	Colorado 7	Transmission Control Module	√	√	√	√	√	0016
2013	Holden	Colorado 7	Transfer Case Control Module	√	√	√	√	√	0037
2013	Holden	Colorado 7	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Holden	Colorado 7	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2013	Holden	Colorado 7	Electronic Brake Control Module	√	√	√	√	√	0090 0112
2013	Holden	Colorado 7	Engine Control Module	√	√	√	√	√	0484 0387
2013	Holden	Colorado 7	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Holden	Colorado 7	Steering Wheel Angle Sensor Module	√	√	√			
2013	Holden	Colorado 7	Instrument Cluster	√	√	√	√	√	0301
2013	Holden	Colorado 7	Trailer Interface Control Module	√	√	√	√	√	0301
2013	Holden	Colorado 7	Parking Assist Control Module	√	√	√	√	√	0301
2013	Holden	Cruze	Engine Control Module	√	√	√	√	√	0263 0323 0305 0020 0306 0067 0217 0337
2013	Holden	Cruze	Transmission Control Module	√	√	√	√	√	0017
2013	Holden	Cruze	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2013	Holden	Cruze	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Holden	Cruze	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2013	Holden	Cruze	Steering Wheel Angle Sensor Module	√	√	√			
2013	Holden	Cruze	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Holden	Cruze	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2013	Holden	Cruze	Instrument Cluster	√	√	√	√	√	0301
2013	Holden	Cruze	Trailer Interface Control Module	√	√	√	√	√	0301
2013	Holden	Cruze	Radio	√	√	√	√	√	
2013	Holden	Cruze	Multimedia Player Interface Module	√	√	√	√		
2013	Holden	Cruze	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2013	Holden	Cruze	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Holden	Cruze	Front Seat Heating Control Module	√	√	√	√	√	
2013	Holden	Cruze	Keyless Entry Control Module	√	√	√	√	√	

2013	Holden	Cruze	Parking Assist Control Module	√	√	√	√	√	
2013	Holden	Cruze	Steering Column Lock Control Module	√	√	√	√		
2013	Holden	Cruze	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2013	Holden	Malibu	Transmission Control Module	√	√	√	√	√	0017
2013	Holden	Malibu	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Holden	Malibu	Instrument Cluster	√	√	√	√	√	0301
2013	Holden	Malibu	Seat Memory Control Module	√	√	√	√	√	0310
2013	Holden	Malibu	Front Seat Heating Control Module	√	√	√	√	√	
2013	Holden	Malibu	Rear Seat Heating Control Module	√	√	√	√	√	
2013	Holden	Malibu	Parking Assist Control Module	√	√	√	√	√	0301
2013	Holden	Malibu	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2013	Holden	Malibu	Keyless Entry Control Module	√	√	√	√	√	
2013	Holden	Malibu	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Holden	Malibu	Engine Control Module	√	√	√	√	√	0133 0133 0323 0382 0382 0383 0098 0098 0096 0096 0094 0094 0387 0387 0130 0143 0265 0265 0147 0147 0391 0391 0392 0308 0393 0393 0394 0135 0128 0173 0173
2013	Holden	Malibu	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2013	Holden	Malibu	Steering Column Lock Control Module	√	√	√	√		
2013	Holden	Malibu	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0111
2013	Holden	Malibu	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2013	Holden	Malibu	Steering Wheel Angle Sensor Module	√	√	√			
2013	Holden	Malibu	Frontview Camera Module	√	√	√	√	√	0205 0447
2013	Holden	Malibu	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2013	Holden	Malibu	Headlamp Control Module	√	√	√	√	√	0195
2013	Holden	Malibu	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2013	Holden	Malibu	Suension Control Module	√	√	√	√	√	
2013	Holden	Volt	Engine Control Module	√	√	√	√	√	0305 0306 0067 0308 0217 0176
2013	Holden	Volt	Fuel Pump Control Module	√	√	√	√	√	0217
2013	Holden	Volt	Hybrid Powertrain Control Module	√	√	√	√	√	
2013	Holden	Volt	Transmission Control Module	√	√	√	√	√	
2013	Holden	Volt	Drive Motor Control Module 1	√	√	√	√		
2013	Holden	Volt	Drive Motor Control Module 2	√	√	√	√		
2013	Holden	Volt	Auxiliary Transmission Fluid Pump	√	√	√	√		
2013	Holden	Volt	Multi-Axis Acceleration Sensor Module	√	√	√			

2013	Holden	Volt	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2013	Holden	Volt	Steering Wheel Angle Sensor Module	√	√	√			
2013	Holden	Volt	Instrument Cluster	√	√	√	√	√	0301
2013	Holden	Volt	Telematics Communication Interface Control Module	√	√	√	√		
2013	Holden	Volt	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2013	Holden	Volt	Electric A/C Compressor Control Module	√					
2013	Holden	Volt	Coolant Heater Control Module	√	√	√			
2013	Holden	Volt	Steering Column Lock Control Module	√	√	√	√		
2013	Holden	Volt	Battery Charger Control Module	√			√		
2013	Holden	Volt	Hybrid Powertrain Control Module 2	√	√	√	√	√	0362 0363 0364 0365 0366 0367 0368
2013	Holden	Volt	Battery Energy Control Module	√			√		
2013	Holden	Volt	Keyless Entry Control Module	√	√	√	√	√	
2013	Holden	Volt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2013	Holden	Volt	HVAC Control Module	√	√	√	√	√	0311 0129
2013	Holden	Volt	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	Holden	Volt	Parking Assist Control Module	√	√	√	√	√	0301
2013	Holden	Volt	Front Seat Heating Control Module	√	√	√	√	√	
2013	Holden	Volt	Radio	√	√	√	√	√	
2013	Holden	Volt	Frontview Camera Module	√	√	√	√	√	0205 0196
2013	Holden	Volt	Electronic Brake Control Module	√	√	√	√	√	0371 0111 0111 0111
2013	Cadillac	CTS	Engine Control Module	√	√	√	√	√	0493
2013	Cadillac	CTS	Fuel Pump Control Module	√	√	√	√	√	
2013	Cadillac	CTS	Transmission control module		√	√	√	√	
2013	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	0493
2013	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	
2013	Cadillac	CTS	Liftgate module	√	√	√	√	√	
2013	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2013	Cadillac	CTS	Passenger presence system	√	√	√	√	√	
2013	Cadillac	CTS	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Cadillac	CTS	Body Control Module	√	√	√	√	√	0498
2013	Cadillac	CTS	Body Control Module	√	√	√	√	√	0499 0497
2013	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2013	Cadillac	CTS	Park assist module	√	√	√	√	√	
2013	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0500
2013	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√	√	0501
2013	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	0502
2013	Cadillac	CTS	Driver door switch	√	√	√	√	√	
2013	Cadillac	CTS	Passenger door switch	√	√	√	√	√	
2013	Cadillac	CTS	Radio	√	√	√	√	√	0503

2013	Cadillac	CTS	TV antenna module	√	√	√	√		0504 0505
2013	Cadillac	CTS	Right side object detection module	√	√	√	√		
2013	Cadillac	CTS	Left side object detection module	√	√	√	√	√	0494 0495 0496
2013	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Cadillac	CTS	Park Brake Control Module	√	√	√	√	√	
2013	Cadillac	CTS	Electronic suspension control		√	√	√	√	
2013	Chevrolet	Aveo Classic	Engine Control Module	√	√	√	√	√	0507
2013	Chevrolet	Aveo Classic	Transmission control module	√	√	√	√	√	0493
2013	Chevrolet	Aveo Classic	Supplemental inflatable restraint	√	√	√	√	√	
2013	Chevrolet	Aveo Classic	Immobilizer	√	√	√	√	√	0508
2013	Chevrolet	Aveo Classic	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Sonic	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Sonic	Transmission control module	√	√	√	√	√	0507
2013	Chevrolet	Sonic	Immobilizer						0508
2013	Chevrolet	Sonic	Supplemental inflatable restraint	√	√	√	√	√	
2013	Chevrolet	Sonic	Tire pressure monitor	√	√	√	√		0510 0511
2013	Chevrolet	Sonic	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Caprice PPV	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Caprice PPV	Transmission control module		√	√	√	√	
2013	Chevrolet	Caprice PPV	Fuel Pump Control Module	√	√	√	√	√	0493
2013	Chevrolet	Caprice PPV	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Caprice PPV	HVAC Control Module	√	√	√	√	√	
2013	Chevrolet	Caprice PPV	Radio	√	√	√	√	√	
2013	Chevrolet	Caprice PPV	Passenger presence system	√	√	√	√		0512
2013	Chevrolet	Caprice PPV	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Caprice PPV	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Caprice PPV	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Caprice PPV	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Caprice PPV	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Corvette	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Corvette	Exhaust flow control module	√	√	√	√	√	
2013	Chevrolet	Corvette	Transmission control module	√	√	√	√	√	0493
2013	Chevrolet	Corvette	Fuel Pump Control Module	√	√	√	√	√	0493
2013	Chevrolet	Corvette	Body Control Module	√	√	√	√	√	0515
2013	Chevrolet	Corvette	Digital radio receiver	√	√	√	√		0516
2013	Chevrolet	Corvette	Vehicle comm. interface module	√	√	√	√	√	0495
2013	Chevrolet	Corvette	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Corvette	Head up display	√	√	√	√	√	
2013	Chevrolet	Corvette	Steering column lock module	√	√	√	√	√	
2013	Chevrolet	Corvette	Passenger presence system		√	√			0517

2013	Chevrolet	Corvette	Remote control door lock receiver	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2013	Chevrolet	Corvette	Supplemental inflatable restraint	√	√	√	√	√	0515
2013	Chevrolet	Corvette	Driver position module	√	√	√	√	√	0522
2013	Chevrolet	Corvette	Folding top module	√	√	√	√	√	
2013	Chevrolet	Corvette	HVAC Control Module	√	√	√	√	√	0500 0523
2013	Chevrolet	Corvette	CD changer	√	√	√	√		
2013	Chevrolet	Corvette	Driver door switch	√	√	√	√		
2013	Chevrolet	Corvette	Driver door module	√	√	√	√	√	
2013	Chevrolet	Corvette	Passenger door module	√	√	√	√	√	
2013	Chevrolet	Corvette	Radio	√	√	√	√		0524 0525
2013	Chevrolet	Corvette	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Corvette	Electronic suspension control	√	√	√	√	√	
2013	Chevrolet	Impala	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Impala	Fuel Pump Control Module	√	√	√	√	√	
2013	Chevrolet	Impala	Transmission control module	√	√	√	√	√	0493
2013	Chevrolet	Impala	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Impala	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Impala	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Impala	Passenger presence system	√	√	√	√	√	
2013	Chevrolet	Impala	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Impala	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Impala	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Impala	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Impala	Heated seat module	√	√	√	√		
2013	Chevrolet	Impala	Radio	√	√	√	√	√	
2013	Chevrolet	Impala	HVAC Control Module	√	√	√	√	√	0500
2013	Chevrolet	Impala	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Others	Immobilizer						0508
2013	Chevrolet	Others	Supplemental inflatable restraint	√	√	√	√	√	0508
2013	Chevrolet	Others	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Others	Transmission control module	√	√	√	√	√	
2013	Chevrolet	Others	Engine Control Module	√	√	√	√	√	0507
2013	Buick	Enclave - AWD	Engine Control Module	√	√	√	√	√	0493
2013	Buick	Enclave - AWD	Transmission control module		√	√	√	√	
2013	Buick	Enclave - AWD	Fuel Pump Control Module	√	√	√	√	√	
2013	Buick	Enclave - AWD	Digital radio receiver	√	√	√	√	√	
2013	Buick	Enclave - AWD	Liftgate module	√	√	√	√	√	
2013	Buick	Enclave - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	Buick	Enclave - AWD	Instrument panel cluster	√	√	√	√	√	
2013	Buick	Enclave - AWD	Memory seat module	√	√	√	√	√	



2013	Buick	Enclave - AWD	Park assist module	√	√	√	√		
2013	Buick	Enclave - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Buick	Enclave - AWD	Rear HVAC/RSA	√	√	√	√	√	
2013	Buick	Enclave - AWD	Headlamp Control Module	√	√	√			
2013	Buick	Enclave - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Buick	Enclave - AWD	Driver door switch	√	√	√	√	√	0527
2013	Buick	Enclave - AWD	Passenger door switch	√	√	√	√	√	0527
2013	Buick	Enclave - AWD	Personal audio link module	√	√	√			0528 0529
2013	Buick	Enclave - AWD	Radio	√	√	√	√	√	
2013	Buick	Enclave - AWD	Passenger presence system	√	√	√	√	√	
2013	Buick	Enclave - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Buick	Enclave - AWD	Theft Deterrent Module	√	√	√	√		
2013	Buick	Enclave - AWD	Body Control Module	√	√	√	√	√	0499 0497
2013	Buick	Enclave - AWD	Left side object detection module	√	√	√		√	
2013	Buick	Enclave - AWD	Right side object detection module	√	√	√		√	
2013	Buick	Enclave - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Buick	Enclave - AWD	Rear drive system	√	√	√	√	√	0530
2013	Buick	Enclave - FWD	Engine Control Module	√	√	√	√	√	0493
2013	Buick	Enclave - FWD	Transmission control module	√	√	√	√	√	
2013	Buick	Enclave - FWD	Fuel Pump Control Module	√	√	√	√	√	
2013	Buick	Enclave - FWD	Digital radio receiver	√	√	√	√	√	
2013	Buick	Enclave - FWD	Liftgate module	√	√	√	√	√	
2013	Buick	Enclave - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	Buick	Enclave - FWD	Instrument panel cluster	√	√	√	√	√	
2013	Buick	Enclave - FWD	Memory seat module	√	√	√	√	√	
2013	Buick	Enclave - FWD	Park assist module	√	√	√	√		
2013	Buick	Enclave - FWD	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Buick	Enclave - FWD	Rear HVAC/RSA	√	√	√	√	√	
2013	Buick	Enclave - FWD	Headlamp Control Module	√	√	√			
2013	Buick	Enclave - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Buick	Enclave - FWD	Driver door switch	√	√	√	√	√	0527
2013	Buick	Enclave - FWD	Passenger door switch	√	√	√	√	√	0527
2013	Buick	Enclave - FWD	Personal audio link module	√	√	√			0528 0529
2013	Buick	Enclave - FWD	Radio	√	√	√	√	√	
2013	Buick	Enclave - FWD	Passenger presence system	√	√	√	√	√	
2013	Buick	Enclave - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Buick	Enclave - FWD	Theft Deterrent Module	√	√	√	√		
2013	Buick	Enclave - FWD	Body Control Module	√	√	√	√	√	0499 0497
2013	Buick	Enclave - FWD	Left side object detection module	√	√	√		√	
2013	Buick	Enclave - FWD	Right side object detection module	√	√	√		√	
2013	Buick	Enclave - FWD	Electronic Brake Control Module	√	√	√	√	√	0506

2013	Buick	Enclave - FWD	Rear drive system	√	√	√	√	√	0530
2013	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2013	Cadillac	Escalade	Transmission control module		√	√	√	√	
2013	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	
2013	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2013	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2013	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2013	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2013	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2013	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2013	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2013	Cadillac	Escalade	Inside rear view mirror module	√	√	√	√	√	
2013	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2013	Cadillac	Escalade	Park assist module	√	√	√	√		
2013	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2013	Cadillac	Escalade	Right side object detection module	√	√	√	√		
2013	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2013	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2013	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2013	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2013	Cadillac	Escalade	Personal audio link module						0529
2013	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0499 0497
2013	Cadillac	Escalade	Radio	√	√	√	√	√	
2013	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	
2013	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Cadillac	Escalade	Electronic suspension control	√	√	√	√	√	0532
2013	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2013	Cadillac	Escalade	Transmission control module		√	√	√	√	
2013	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	
2013	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2013	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2013	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2013	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2013	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		

2013	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2013	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2013	Cadillac	Escalade	Inside rear view mirror module	√	√	√	√	√	
2013	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2013	Cadillac	Escalade	Park assist module	√	√	√	√		
2013	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2013	Cadillac	Escalade	Right side object detection module	√	√	√	√		
2013	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2013	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2013	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2013	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2013	Cadillac	Escalade	Personal audio link module						0529
2013	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0499 0497
2013	Cadillac	Escalade	Radio	√	√	√	√	√	
2013	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	
2013	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Cadillac	Escalade	Electronic suspension control	√	√	√	√	√	0532
2013	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2013	Cadillac	Escalade Hybrid	Transmission control module		√	√	√	√	
2013	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Accessory power module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2013	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2013	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2013	Cadillac	Escalade Hybrid	A/C compressor control module	√	√	√	√		
2013	Cadillac	Escalade Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Assist step controller	√	√	√	√	√	0531
2013	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√			
2013	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2013	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√		
2013	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		
2013	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	

2013	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Personal audio link module						0529
2013	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0499 0497
2013	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2013	Cadillac	Escalade Hybrid	Electronic suension control	√	√	√	√	√	0532
2013	Cadillac	Escalade Hybrid	Power steering control module	√	√	√	√	√	0536
2013	Cadillac	Escalade Hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2013	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2013	Cadillac	Escalade Hybrid	Transmission control module		√	√	√	√	
2013	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Accessory power module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2013	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2013	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2013	Cadillac	Escalade Hybrid	A/C compressor control module	√	√	√	√		
2013	Cadillac	Escalade Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Assist step controller	√	√	√	√	√	0531
2013	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√			
2013	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2013	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√		
2013	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		
2013	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	Personal audio link module						0529
2013	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0499 0497
2013	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2013	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	

2013	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2013	Cadillac	Escalade Hybrid	Electronic suension control	√	√	√	√	√	0532
2013	Cadillac	Escalade Hybrid	Power steering control module	√	√	√	√	√	0536
2013	Cadillac	Escalade Hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Avalanche - 2WD	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Avalanche - 2WD	Transmission control module		√	√	√	√	
2013	Chevrolet	Avalanche - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2013	Chevrolet	Avalanche - 2WD	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Avalanche - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Avalanche - 2WD	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	0498
2013	Chevrolet	Avalanche - 2WD	Passenger presence system	√	√	√	√		
2013	Chevrolet	Avalanche - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Avalanche - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Avalanche - 2WD	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Avalanche - 2WD	Assist step controller	√	√	√	√	√	0531
2013	Chevrolet	Avalanche - 2WD	Memory seat module	√	√	√	√	√	
2013	Chevrolet	Avalanche - 2WD	Rear heated seat module	√	√	√	√		
2013	Chevrolet	Avalanche - 2WD	Park assist module	√	√	√	√		
2013	Chevrolet	Avalanche - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Chevrolet	Avalanche - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Avalanche - 2WD	Amplifier (bose)	√	√	√	√	√	
2013	Chevrolet	Avalanche - 2WD	Driver door switch	√	√	√	√	√	
2013	Chevrolet	Avalanche - 2WD	Passenger door switch	√	√	√	√	√	
2013	Chevrolet	Avalanche - 2WD	Personal audio link module						0529
2013	Chevrolet	Avalanche - 2WD	Radio	√	√	√	√	√	
2013	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Avalanche - 2WD	Navigation radio	√	√	√	√	√	0529
2013	Chevrolet	Avalanche - 2WD	FPCM with trailer brake control	√	√	√	√	√	
2013	Chevrolet	Avalanche - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Avalanche - 2WD	Electronic suension control	√	√	√	√	√	0532
2013	Chevrolet	Avalanche - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2013	Chevrolet	Avalanche - 2WD	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Avalanche - 2WD	Transmission control module		√	√	√	√	
2013	Chevrolet	Avalanche - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2013	Chevrolet	Avalanche - 2WD	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Avalanche - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Avalanche - 2WD	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	0498
2013	Chevrolet	Avalanche - 2WD	Passenger presence system	√	√	√	√		
2013	Chevrolet	Avalanche - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159

2013	Chevrolet	Avalanche - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Avalanche - 2WD	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Avalanche - 2WD	Assist step controller	√	√	√	√	√	0531
2013	Chevrolet	Avalanche - 2WD	Memory seat module	√	√	√	√	√	
2013	Chevrolet	Avalanche - 2WD	Rear heated seat module	√	√	√	√		
2013	Chevrolet	Avalanche - 2WD	Park assist module	√	√	√	√		
2013	Chevrolet	Avalanche - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Chevrolet	Avalanche - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Avalanche - 2WD	Amplifier (bose)	√	√	√	√	√	
2013	Chevrolet	Avalanche - 2WD	Driver door switch	√	√	√	√	√	
2013	Chevrolet	Avalanche - 2WD	Passenger door switch	√	√	√	√	√	
2013	Chevrolet	Avalanche - 2WD	Personal audio link module						0529
2013	Chevrolet	Avalanche - 2WD	Radio	√	√	√	√	√	
2013	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Avalanche - 2WD	Navigation radio	√	√	√	√	√	0529
2013	Chevrolet	Avalanche - 2WD	FPCM with trailer brake control	√	√	√	√	√	
2013	Chevrolet	Avalanche - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Avalanche - 2WD	Electronic suspension control	√	√	√	√	√	0532
2013	Chevrolet	Avalanche - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2013	Chevrolet	Avalanche - 4WD	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Avalanche - 4WD	Transmission control module		√	√	√	√	
2013	Chevrolet	Avalanche - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2013	Chevrolet	Avalanche - 4WD	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Avalanche - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Avalanche - 4WD	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	0498
2013	Chevrolet	Avalanche - 4WD	Passenger presence system	√	√	√	√		
2013	Chevrolet	Avalanche - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Avalanche - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Avalanche - 4WD	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Avalanche - 4WD	Assist step controller	√	√	√	√	√	0531
2013	Chevrolet	Avalanche - 4WD	Memory seat module	√	√	√	√	√	
2013	Chevrolet	Avalanche - 4WD	Rear heated seat module	√	√	√	√		
2013	Chevrolet	Avalanche - 4WD	Park assist module	√	√	√	√		
2013	Chevrolet	Avalanche - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Chevrolet	Avalanche - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Avalanche - 4WD	Amplifier (bose)	√	√	√	√	√	
2013	Chevrolet	Avalanche - 4WD	Driver door switch	√	√	√	√	√	
2013	Chevrolet	Avalanche - 4WD	Passenger door switch	√	√	√	√	√	
2013	Chevrolet	Avalanche - 4WD	Personal audio link module						0529
2013	Chevrolet	Avalanche - 4WD	Radio	√	√	√	√	√	

2013	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Avalanche - 4WD	Navigation radio	√	√	√	√	√	0529
2013	Chevrolet	Avalanche - 4WD	FPCM with trailer brake control	√	√	√	√	√	
2013	Chevrolet	Avalanche - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Avalanche - 4WD	Electronic suension control	√	√	√	√	√	0532
2013	Chevrolet	Avalanche - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2013	Chevrolet	Avalanche - 4WD	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Avalanche - 4WD	Transmission control module		√	√	√	√	
2013	Chevrolet	Avalanche - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2013	Chevrolet	Avalanche - 4WD	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Avalanche - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Avalanche - 4WD	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	0498
2013	Chevrolet	Avalanche - 4WD	Passenger presence system	√	√	√	√		
2013	Chevrolet	Avalanche - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Avalanche - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Avalanche - 4WD	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Avalanche - 4WD	Assist step controller	√	√	√	√	√	0531
2013	Chevrolet	Avalanche - 4WD	Memory seat module	√	√	√	√	√	
2013	Chevrolet	Avalanche - 4WD	Rear heated seat module	√	√	√	√		
2013	Chevrolet	Avalanche - 4WD	Park assist module	√	√	√	√		
2013	Chevrolet	Avalanche - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Chevrolet	Avalanche - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Avalanche - 4WD	Amplifier (bose)	√	√	√	√	√	
2013	Chevrolet	Avalanche - 4WD	Driver door switch	√	√	√	√	√	
2013	Chevrolet	Avalanche - 4WD	Passenger door switch	√	√	√	√	√	
2013	Chevrolet	Avalanche - 4WD	Personal audio link module						0529
2013	Chevrolet	Avalanche - 4WD	Radio	√	√	√	√	√	
2013	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Avalanche - 4WD	Navigation radio	√	√	√	√	√	0529
2013	Chevrolet	Avalanche - 4WD	FPCM with trailer brake control	√	√	√	√	√	
2013	Chevrolet	Avalanche - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Avalanche - 4WD	Electronic suension control	√	√	√	√	√	0532
2013	Chevrolet	Avalanche - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2013	Chevrolet	Captiva ort	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Captiva ort	Transmission control module	√	√	√	√	√	0493
2013	Chevrolet	Captiva ort	Rear drive system	√	√	√	√	√	0530
2013	Chevrolet	Captiva ort	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Captiva ort	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	Chevrolet	Captiva ort	Telematic veh. locate and immo.	√	√	√	√		
2013	Chevrolet	Captiva ort	Instrument panel cluster	√	√	√	√	√	

2013	Chevrolet	Captiva ort	Heated seat module	√	√	√	√		
2013	Chevrolet	Captiva ort	Park assist module	√	√	√	√		
2013	Chevrolet	Captiva ort	HVAC Control Module	√	√	√	√	√	0500
2013	Chevrolet	Captiva ort	Passenger presence system	√	√	√	√		0537
2013	Chevrolet	Captiva ort	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Captiva ort	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Captiva ort	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Captiva ort	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Captiva ort	Radio	√	√	√	√	√	
2013	Chevrolet	Captiva ort	Electronic Brake Control Module	√	√	√	√	√	
2013	Chevrolet	Captiva ort	Park Brake Control Module	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 2WD	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Cheyenne - 2WD	Transmission control module	√	√	√	√	√	0493
2013	Chevrolet	Cheyenne - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2013	Chevrolet	Cheyenne - 2WD	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Cheyenne - 2WD	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 2WD	Body Control Module	√	√	√	√	√	0498
2013	Chevrolet	Cheyenne - 2WD	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Cheyenne - 2WD	Passenger presence system	√	√	√	√		
2013	Chevrolet	Cheyenne - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Cheyenne - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Cheyenne - 2WD	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Cheyenne - 2WD	Rear heated seat module	√	√	√	√		
2013	Chevrolet	Cheyenne - 2WD	Park assist module	√	√	√	√		
2013	Chevrolet	Cheyenne - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 2WD	Amplifier (bose)	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 2WD	Driver door switch	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 2WD	Passenger door switch	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 2WD	Personal audio link module	√	√	√	√	√	0528
2013	Chevrolet	Cheyenne - 2WD	Trailer brake control module	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Cheyenne - 2WD	Electronic suspension control	√	√	√	√	√	0532
2013	Chevrolet	Cheyenne - 2WD	FPCM with trailer brake control	√	√	√	√	√	0506
2013	Chevrolet	Cheyenne - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2013	Chevrolet	Cheyenne - 2WD	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Cheyenne - 2WD	Transmission control module	√	√	√	√	√	0493
2013	Chevrolet	Cheyenne - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2013	Chevrolet	Cheyenne - 2WD	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Cheyenne - 2WD	Instrument panel cluster	√	√	√	√	√	



2013	Chevrolet	Cheyenne - 2WD	Body Control Module	√	√	√	√	√	0498
2013	Chevrolet	Cheyenne - 2WD	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Cheyenne - 2WD	Passenger presence system	√	√	√	√		
2013	Chevrolet	Cheyenne - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Cheyenne - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Cheyenne - 2WD	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Cheyenne - 2WD	Rear heated seat module	√	√	√	√		
2013	Chevrolet	Cheyenne - 2WD	Park assist module	√	√	√	√		
2013	Chevrolet	Cheyenne - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 2WD	Amplifier (bose)	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 2WD	Driver door switch	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 2WD	Passenger door switch	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 2WD	Personal audio link module	√	√	√	√	√	0528
2013	Chevrolet	Cheyenne - 2WD	Trailer brake control module	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Cheyenne - 2WD	Electronic suension control	√	√	√	√	√	0532
2013	Chevrolet	Cheyenne - 2WD	FPCM with trailer brake control	√	√	√	√	√	0506
2013	Chevrolet	Cheyenne - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2013	Chevrolet	Cheyenne - 4WD	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Cheyenne - 4WD	Transmission control module	√	√	√	√	√	0493
2013	Chevrolet	Cheyenne - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2013	Chevrolet	Cheyenne - 4WD	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Cheyenne - 4WD	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 4WD	Body Control Module	√	√	√	√	√	0498
2013	Chevrolet	Cheyenne - 4WD	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Cheyenne - 4WD	Passenger presence system	√	√	√	√		
2013	Chevrolet	Cheyenne - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Cheyenne - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Cheyenne - 4WD	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Cheyenne - 4WD	Rear heated seat module	√	√	√	√		
2013	Chevrolet	Cheyenne - 4WD	Park assist module	√	√	√	√		
2013	Chevrolet	Cheyenne - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 4WD	Amplifier (bose)	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 4WD	Driver door switch	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 4WD	Passenger door switch	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 4WD	Personal audio link module	√	√	√	√	√	0528
2013	Chevrolet	Cheyenne - 4WD	Trailer brake control module	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Cheyenne - 4WD	Electronic suension control	√	√	√	√	√	0532
2013	Chevrolet	Cheyenne - 4WD	FPCM with trailer brake control	√	√	√	√	√	0506

2013	Chevrolet	Cheyenne - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2013	Chevrolet	Cheyenne - 4WD	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Cheyenne - 4WD	Transmission control module	√	√	√	√	√	0493
2013	Chevrolet	Cheyenne - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2013	Chevrolet	Cheyenne - 4WD	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Cheyenne - 4WD	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 4WD	Body Control Module	√	√	√	√	√	0498
2013	Chevrolet	Cheyenne - 4WD	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Cheyenne - 4WD	Passenger presence system	√	√	√	√		
2013	Chevrolet	Cheyenne - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Cheyenne - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Cheyenne - 4WD	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Cheyenne - 4WD	Rear heated seat module	√	√	√	√		
2013	Chevrolet	Cheyenne - 4WD	Park assist module	√	√	√	√		
2013	Chevrolet	Cheyenne - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 4WD	Amplifier (bose)	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 4WD	Driver door switch	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 4WD	Passenger door switch	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 4WD	Personal audio link module	√	√	√	√	√	0528
2013	Chevrolet	Cheyenne - 4WD	Trailer brake control module	√	√	√	√	√	
2013	Chevrolet	Cheyenne - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Cheyenne - 4WD	Electronic suspension control	√	√	√	√	√	0532
2013	Chevrolet	Cheyenne - 4WD	FPCM with trailer brake control	√	√	√	√	√	0506
2013	Chevrolet	Cheyenne - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2013	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Express	Transmission control module	√	√	√	√	√	0493
2013	Chevrolet	Express	Fuel Pump Control Module	√	√	√	√	√	0493
2013	Chevrolet	Express	Auxiliary Heater Control Module	√	√	√	√	√	0539 0088 0540 0540
2013	Chevrolet	Express	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Express	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Express	Rollover sensor	√	√	√	√		0541
2013	Chevrolet	Express	Park assist module	√	√	√	√		
2013	Chevrolet	Express	Radio	√	√	√	√	√	
2013	Chevrolet	Express	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Express	Passenger presence system	√	√	√	√		0517
2013	Chevrolet	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Express	Theft Deterrent Module	√	√	√	√	√	0494 0495
2013	Chevrolet	Express	Navigation radio	√	√	√	√	√	

2013	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Express	Transmission control module	√	√	√	√	√	0493
2013	Chevrolet	Express	Fuel Pump Control Module	√	√	√	√	√	0493
2013	Chevrolet	Express	Auxiliary Heater Control Module	√	√	√	√	√	0539 0088 0540 0540
2013	Chevrolet	Express	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Express	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Express	Rollover sensor	√	√	√	√		0541
2013	Chevrolet	Express	Park assist module	√	√	√	√		
2013	Chevrolet	Express	Radio	√	√	√	√	√	
2013	Chevrolet	Express	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Express	Passenger presence system	√	√	√	√		0517
2013	Chevrolet	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Express	Theft Deterrent Module	√	√	√	√	√	0494 0495
2013	Chevrolet	Express	Navigation radio	√	√	√	√	√	
2013	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Express	Transmission control module	√	√	√	√	√	0493
2013	Chevrolet	Express	Fuel Pump Control Module	√	√	√	√	√	0493
2013	Chevrolet	Express	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Express	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Express	Rollover sensor	√	√	√	√		0541
2013	Chevrolet	Express	Park assist module	√	√	√	√		
2013	Chevrolet	Express	Radio	√	√	√	√	√	
2013	Chevrolet	Express	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Express	Passenger presence system	√	√	√	√		0517
2013	Chevrolet	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Express	Theft Deterrent Module	√	√	√	√	√	0494 0495
2013	Chevrolet	Express	Navigation radio	√	√	√	√	√	
2013	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Express	Transmission control module	√	√	√	√	√	0493
2013	Chevrolet	Express	Fuel Pump Control Module	√	√	√	√	√	0493
2013	Chevrolet	Express	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Express	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Express	Rollover sensor	√	√	√	√		0541

2013	Chevrolet	Express	Park assist module	√	√	√	√		
2013	Chevrolet	Express	Radio	√	√	√	√	√	
2013	Chevrolet	Express	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Express	Passenger presence system	√	√	√	√		0517
2013	Chevrolet	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Express	Theft Deterrent Module	√	√	√	√	√	0494 0495
2013	Chevrolet	Express	Navigation radio	√	√	√	√	√	
2013	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Silverado	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Silverado	Transmission control module	√	√	√	√	√	0493
2013	Chevrolet	Silverado	Fuel Pump Control Module	√	√	√	√	√	0493
2013	Chevrolet	Silverado	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Silverado	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Silverado	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0498
2013	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Silverado	Passenger presence system	√	√	√	√		
2013	Chevrolet	Silverado	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Silverado	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Silverado	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Silverado	Memory seat module	√	√	√	√	√	
2013	Chevrolet	Silverado	Rear heated seat module	√	√	√	√		
2013	Chevrolet	Silverado	Park assist module	√	√	√	√		
2013	Chevrolet	Silverado	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Chevrolet	Silverado	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Silverado	Amplifier (bose)	√	√	√	√	√	
2013	Chevrolet	Silverado	Driver door switch	√	√	√	√	√	
2013	Chevrolet	Silverado	Passenger door switch	√	√	√	√	√	
2013	Chevrolet	Silverado	Personal audio link module						0529
2013	Chevrolet	Silverado	Radio	√	√	√	√	√	0528
2013	Chevrolet	Silverado	Navigation radio	√	√	√	√	√	0529
2013	Chevrolet	Silverado	Trailer brake control module	√	√	√	√	√	
2013	Chevrolet	Silverado	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Silverado	Electronic suension control	√	√	√	√	√	0532
2013	Chevrolet	Silverado	FPCM with trailer brake control	√	√	√	√	√	0506
2013	Chevrolet	Silverado	Transfer Case Control Module	√	√	√	√	√	0493
2013	Chevrolet	Silverado	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Silverado	Transmission control module	√	√	√	√	√	0493
2013	Chevrolet	Silverado	Fuel Pump Control Module	√	√	√	√	√	0493
2013	Chevrolet	Silverado	Digital radio receiver	√	√	√	√	√	

2013	Chevrolet	Silverado	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Silverado	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0498
2013	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Silverado	Passenger presence system	√	√	√	√		
2013	Chevrolet	Silverado	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Silverado	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Silverado	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Silverado	Memory seat module	√	√	√	√	√	
2013	Chevrolet	Silverado	Rear heated seat module	√	√	√	√		
2013	Chevrolet	Silverado	Park assist module	√	√	√	√		
2013	Chevrolet	Silverado	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Chevrolet	Silverado	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Silverado	Amplifier (bose)	√	√	√	√	√	
2013	Chevrolet	Silverado	Driver door switch	√	√	√	√	√	
2013	Chevrolet	Silverado	Passenger door switch	√	√	√	√	√	
2013	Chevrolet	Silverado	Personal audio link module						0529
2013	Chevrolet	Silverado	Radio	√	√	√	√	√	0528
2013	Chevrolet	Silverado	Navigation radio	√	√	√	√	√	0529
2013	Chevrolet	Silverado	Trailer brake control module	√	√	√	√	√	
2013	Chevrolet	Silverado	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Silverado	Electronic suension control	√	√	√	√	√	0532
2013	Chevrolet	Silverado	FPCM with trailer brake control	√	√	√	√	√	0506
2013	Chevrolet	Silverado	Transfer Case Control Module	√	√	√	√	√	0493
2013	Chevrolet	Silverado Hybrid	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Silverado Hybrid	Transmission control module		√	√	√	√	
2013	Chevrolet	Silverado Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2013	Chevrolet	Silverado Hybrid	Accessory power module	√	√	√	√	√	
2013	Chevrolet	Silverado Hybrid	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Silverado Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Silverado Hybrid	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Silverado Hybrid	Body Control Module	√	√	√	√	√	0498
2013	Chevrolet	Silverado Hybrid	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Silverado Hybrid	Passenger presence system	√	√	√	√		
2013	Chevrolet	Silverado Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Silverado Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Silverado Hybrid	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Silverado Hybrid	A/C compressor control module	√	√	√	√		
2013	Chevrolet	Silverado Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2013	Chevrolet	Silverado Hybrid	Heated seat module	√	√	√	√		
2013	Chevrolet	Silverado Hybrid	Rear heated seat module	√	√	√	√		

2013	Chevrolet	Silverado Hybrid	Park assist module	√	√	√	√		
2013	Chevrolet	Silverado Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Chevrolet	Silverado Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Silverado Hybrid	Amplifier (bose)	√	√	√	√	√	
2013	Chevrolet	Silverado Hybrid	Driver door switch	√	√	√	√	√	
2013	Chevrolet	Silverado Hybrid	Passenger door switch	√	√	√	√	√	
2013	Chevrolet	Silverado Hybrid	Personal audio link module						0529
2013	Chevrolet	Silverado Hybrid	Radio	√	√	√	√	√	0528
2013	Chevrolet	Silverado Hybrid	Navigation radio	√	√	√	√	√	0529
2013	Chevrolet	Silverado Hybrid	FPCM with trailer brake control	√	√	√	√	√	
2013	Chevrolet	Silverado Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2013	Chevrolet	Silverado Hybrid	Electronic suension control	√	√	√	√	√	0532
2013	Chevrolet	Silverado Hybrid	Power steering control module	√	√	√	√	√	0536
2013	Chevrolet	Silverado Hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Silverado Hybrid	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Silverado Hybrid	Transmission control module		√	√	√	√	
2013	Chevrolet	Silverado Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2013	Chevrolet	Silverado Hybrid	Accessory power module	√	√	√	√	√	
2013	Chevrolet	Silverado Hybrid	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Silverado Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Silverado Hybrid	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Silverado Hybrid	Body Control Module	√	√	√	√	√	0498
2013	Chevrolet	Silverado Hybrid	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Silverado Hybrid	Passenger presence system	√	√	√	√		
2013	Chevrolet	Silverado Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Silverado Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Silverado Hybrid	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Silverado Hybrid	A/C compressor control module	√	√	√	√		
2013	Chevrolet	Silverado Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2013	Chevrolet	Silverado Hybrid	Heated seat module	√	√	√	√		
2013	Chevrolet	Silverado Hybrid	Rear heated seat module	√	√	√	√		
2013	Chevrolet	Silverado Hybrid	Park assist module	√	√	√	√		
2013	Chevrolet	Silverado Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Chevrolet	Silverado Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Silverado Hybrid	Amplifier (bose)	√	√	√	√	√	
2013	Chevrolet	Silverado Hybrid	Driver door switch	√	√	√	√	√	
2013	Chevrolet	Silverado Hybrid	Passenger door switch	√	√	√	√	√	
2013	Chevrolet	Silverado Hybrid	Personal audio link module						0529
2013	Chevrolet	Silverado Hybrid	Radio	√	√	√	√	√	0528
2013	Chevrolet	Silverado Hybrid	Navigation radio	√	√	√	√	√	0529
2013	Chevrolet	Silverado Hybrid	FPCM with trailer brake control	√	√	√	√	√	

2013	Chevrolet	Silverado Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2013	Chevrolet	Silverado Hybrid	Electronic suension control	√	√	√	√	√	0532
2013	Chevrolet	Silverado Hybrid	Power steering control module	√	√	√	√	√	0536
2013	Chevrolet	Silverado Hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Suburban - 2WD	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Suburban - 2WD	Transmission control module		√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2013	Chevrolet	Suburban - 2WD	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Liftgate module	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Suburban - 2WD	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	0498
2013	Chevrolet	Suburban - 2WD	Passenger presence system	√	√	√	√		
2013	Chevrolet	Suburban - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Suburban - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Suburban - 2WD	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Suburban - 2WD	Assist step controller	√	√	√	√	√	0531
2013	Chevrolet	Suburban - 2WD	Memory seat module	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Rear heated seat module	√	√	√	√		
2013	Chevrolet	Suburban - 2WD	Park assist module	√	√	√	√		
2013	Chevrolet	Suburban - 2WD	Left side object detection module	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Right side object detection module	√	√	√	√		
2013	Chevrolet	Suburban - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Chevrolet	Suburban - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Amplifier (bose)	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Driver door switch	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Passenger door switch	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Personal audio link module						0529
2013	Chevrolet	Suburban - 2WD	Radio	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Suburban - 2WD	Navigation radio	√	√	√	√	√	0529
2013	Chevrolet	Suburban - 2WD	FPCM with trailer brake control	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Suburban - 2WD	Electronic suension control	√	√	√	√	√	0532
2013	Chevrolet	Suburban - 2WD	Trailer brake control module	√	√	√	√	√	0506
2013	Chevrolet	Suburban - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2013	Chevrolet	Suburban - 2WD	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Suburban - 2WD	Transmission control module		√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2013	Chevrolet	Suburban - 2WD	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Liftgate module	√	√	√	√	√	



2013	Chevrolet	Suburban - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Suburban - 2WD	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	0498
2013	Chevrolet	Suburban - 2WD	Passenger presence system	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Suburban - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Suburban - 2WD	Theft Deterrent Module	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Assist step controller	√	√	√	√	√	0531
2013	Chevrolet	Suburban - 2WD	Memory seat module	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Rear heated seat module	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Park assist module	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Left side object detection module	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Right side object detection module	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Chevrolet	Suburban - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Amplifier (bose)	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Driver door switch	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Passenger door switch	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Personal audio link module						0529
2013	Chevrolet	Suburban - 2WD	Radio	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Suburban - 2WD	Navigation radio	√	√	√	√	√	0529
2013	Chevrolet	Suburban - 2WD	FPCM with trailer brake control	√	√	√	√	√	
2013	Chevrolet	Suburban - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Suburban - 2WD	Electronic suspension control	√	√	√	√	√	0532
2013	Chevrolet	Suburban - 2WD	Trailer brake control module	√	√	√	√	√	0506
2013	Chevrolet	Suburban - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2013	Chevrolet	Suburban - 4WD	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Suburban - 4WD	Transmission control module		√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2013	Chevrolet	Suburban - 4WD	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Liftgate module	√	√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Suburban - 4WD	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	0498
2013	Chevrolet	Suburban - 4WD	Passenger presence system	√	√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Suburban - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Suburban - 4WD	Theft Deterrent Module	√	√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Assist step controller	√	√	√	√	√	0531
2013	Chevrolet	Suburban - 4WD	Memory seat module	√	√	√	√	√	



2013	Chevrolet	Suburban - 4WD	Rear heated seat module	√	√	√	√		
2013	Chevrolet	Suburban - 4WD	Park assist module	√	√	√	√		
2013	Chevrolet	Suburban - 4WD	Left side object detection module	√	√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Right side object detection module	√	√	√	√		
2013	Chevrolet	Suburban - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Chevrolet	Suburban - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Amplifier (bose)	√	√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Driver door switch	√	√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Passenger door switch	√	√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Personal audio link module						0529
2013	Chevrolet	Suburban - 4WD	Radio	√	√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Suburban - 4WD	Navigation radio	√	√	√	√	√	0529
2013	Chevrolet	Suburban - 4WD	FPCM with trailer brake control	√	√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Suburban - 4WD	Electronic suension control	√	√	√	√	√	0532
2013	Chevrolet	Suburban - 4WD	Trailer brake control module	√	√	√	√	√	0506
2013	Chevrolet	Suburban - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2013	Chevrolet	Suburban - 4WD	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Suburban - 4WD	Transmission control module		√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2013	Chevrolet	Suburban - 4WD	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Liftgate module	√	√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Suburban - 4WD	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	0498
2013	Chevrolet	Suburban - 4WD	Passenger presence system	√	√	√	√		
2013	Chevrolet	Suburban - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Suburban - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Suburban - 4WD	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Suburban - 4WD	Assist step controller	√	√	√	√	√	0531
2013	Chevrolet	Suburban - 4WD	Memory seat module	√	√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Rear heated seat module	√	√	√	√		
2013	Chevrolet	Suburban - 4WD	Park assist module	√	√	√	√		
2013	Chevrolet	Suburban - 4WD	Left side object detection module	√	√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Right side object detection module	√	√	√	√		
2013	Chevrolet	Suburban - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Chevrolet	Suburban - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Amplifier (bose)	√	√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Driver door switch	√	√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Passenger door switch	√	√	√	√	√	

2013	Chevrolet	Suburban - 4WD	Personal audio link module						0529
2013	Chevrolet	Suburban - 4WD	Radio	√	√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Suburban - 4WD	Navigation radio	√	√	√	√	√	0529
2013	Chevrolet	Suburban - 4WD	FPCM with trailer brake control	√	√	√	√	√	
2013	Chevrolet	Suburban - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Suburban - 4WD	Electronic suension control	√	√	√	√	√	0532
2013	Chevrolet	Suburban - 4WD	Trailer brake control module	√	√	√	√	√	0506
2013	Chevrolet	Suburban - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2013	Chevrolet	Tahoe	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Tahoe	Transmission control module		√	√	√	√	
2013	Chevrolet	Tahoe	Fuel Pump Control Module	√	√	√	√	√	
2013	Chevrolet	Tahoe	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Tahoe	Liftgate module	√	√	√	√	√	
2013	Chevrolet	Tahoe	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Tahoe	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0498
2013	Chevrolet	Tahoe	Passenger presence system	√	√	√	√		
2013	Chevrolet	Tahoe	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Tahoe	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Tahoe	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Tahoe	Assist step controller	√	√	√	√	√	0531
2013	Chevrolet	Tahoe	Memory seat module	√	√	√	√	√	
2013	Chevrolet	Tahoe	Rear heated seat module	√	√	√	√		
2013	Chevrolet	Tahoe	Park assist module	√	√	√	√		
2013	Chevrolet	Tahoe	Left side object detection module	√	√	√	√	√	
2013	Chevrolet	Tahoe	Right side object detection module	√	√	√	√		
2013	Chevrolet	Tahoe	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Chevrolet	Tahoe	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Tahoe	Amplifier (bose)	√	√	√	√	√	
2013	Chevrolet	Tahoe	Driver door switch	√	√	√	√	√	
2013	Chevrolet	Tahoe	Passenger door switch	√	√	√	√	√	
2013	Chevrolet	Tahoe	Personal audio link module						0529
2013	Chevrolet	Tahoe	Radio	√	√	√	√	√	
2013	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Tahoe	Navigation radio	√	√	√	√	√	0529
2013	Chevrolet	Tahoe	FPCM with trailer brake control	√	√	√	√	√	
2013	Chevrolet	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Tahoe	Electronic suension control	√	√	√	√	√	0532
2013	Chevrolet	Tahoe	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Tahoe	Transmission control module		√	√	√	√	

2013	Chevrolet	Tahoe	Fuel Pump Control Module	√	√	√	√	√	
2013	Chevrolet	Tahoe	Accessory power module	√	√	√	√	√	
2013	Chevrolet	Tahoe	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Tahoe	Liftgate module	√	√	√	√	√	
2013	Chevrolet	Tahoe	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Tahoe	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0498
2013	Chevrolet	Tahoe	Passenger presence system	√	√	√	√		
2013	Chevrolet	Tahoe	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Tahoe	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Tahoe	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Tahoe	A/C compressor control module	√	√	√	√		
2013	Chevrolet	Tahoe	Serial Data Gateway Module	√	√	√	√	√	
2013	Chevrolet	Tahoe	Heated seat module	√	√	√	√		
2013	Chevrolet	Tahoe	Rear heated seat module	√	√	√	√		
2013	Chevrolet	Tahoe	Park assist module	√	√	√	√		
2013	Chevrolet	Tahoe	Left side object detection module	√	√	√	√	√	
2013	Chevrolet	Tahoe	Right side object detection module	√	√	√	√		
2013	Chevrolet	Tahoe	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Chevrolet	Tahoe	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Tahoe	Amplifier (bose)	√	√	√	√	√	
2013	Chevrolet	Tahoe	Driver door switch	√	√	√	√	√	
2013	Chevrolet	Tahoe	Passenger door switch	√	√	√	√	√	
2013	Chevrolet	Tahoe	Personal audio link module						0529
2013	Chevrolet	Tahoe	Radio	√	√	√	√	√	
2013	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Tahoe	Navigation radio	√	√	√	√	√	0529
2013	Chevrolet	Tahoe	FPCM with trailer brake control	√	√	√	√	√	
2013	Chevrolet	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2013	Chevrolet	Tahoe	Electronic suspension control	√	√	√	√	√	0532
2013	Chevrolet	Tahoe	Power steering control module	√	√	√	√	√	0536
2013	Chevrolet	Tahoe	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Tahoe	Transmission control module		√	√	√	√	
2013	Chevrolet	Tahoe	Transfer Case Control Module	√	√	√	√	√	
2013	Chevrolet	Tahoe	Fuel Pump Control Module	√	√	√	√	√	0493
2013	Chevrolet	Tahoe	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Tahoe	Liftgate module	√	√	√	√	√	
2013	Chevrolet	Tahoe	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Tahoe	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0498
2013	Chevrolet	Tahoe	Passenger presence system	√	√	√	√		

2013	Chevrolet	Tahoe	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Tahoe	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Tahoe	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Tahoe	Assist step controller	√	√	√	√	√	0531
2013	Chevrolet	Tahoe	Memory seat module	√	√	√	√	√	
2013	Chevrolet	Tahoe	Rear heated seat module	√	√	√	√		
2013	Chevrolet	Tahoe	Park assist module	√	√	√	√		
2013	Chevrolet	Tahoe	Left side object detection module	√	√	√	√	√	
2013	Chevrolet	Tahoe	Right side object detection module	√	√	√	√		
2013	Chevrolet	Tahoe	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Chevrolet	Tahoe	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Tahoe	Amplifier (bose)	√	√	√	√	√	
2013	Chevrolet	Tahoe	Driver door switch	√	√	√	√	√	
2013	Chevrolet	Tahoe	Passenger door switch	√	√	√	√	√	
2013	Chevrolet	Tahoe	Personal audio link module						0529
2013	Chevrolet	Tahoe	Radio	√	√	√	√	√	
2013	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Tahoe	Navigation radio	√	√	√	√	√	0529
2013	Chevrolet	Tahoe	FPCM with trailer brake control	√	√	√	√	√	
2013	Chevrolet	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Tahoe	Electronic suension control	√	√	√	√	√	0532
2013	Chevrolet	Tahoe	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Tahoe	Transmission control module		√	√	√	√	
2013	Chevrolet	Tahoe	Transfer Case Control Module	√	√	√	√	√	
2013	Chevrolet	Tahoe	Fuel Pump Control Module	√	√	√	√	√	
2013	Chevrolet	Tahoe	Accessory power module	√	√	√	√	√	
2013	Chevrolet	Tahoe	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Tahoe	Liftgate module	√	√	√	√	√	
2013	Chevrolet	Tahoe	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Tahoe	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0498
2013	Chevrolet	Tahoe	Passenger presence system	√	√	√	√		
2013	Chevrolet	Tahoe	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Tahoe	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Tahoe	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Tahoe	A/C compressor control module	√	√	√	√		
2013	Chevrolet	Tahoe	Serial Data Gateway Module	√	√	√	√	√	
2013	Chevrolet	Tahoe	Heated seat module	√	√	√	√		
2013	Chevrolet	Tahoe	Rear heated seat module	√	√	√	√		
2013	Chevrolet	Tahoe	Park assist module	√	√	√	√		
2013	Chevrolet	Tahoe	Left side object detection module	√	√	√	√	√	

2013	Chevrolet	Tahoe	Right side object detection module	√	√	√	√		
2013	Chevrolet	Tahoe	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Chevrolet	Tahoe	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Tahoe	Amplifier (bose)	√	√	√	√	√	
2013	Chevrolet	Tahoe	Driver door switch	√	√	√	√	√	
2013	Chevrolet	Tahoe	Passenger door switch	√	√	√	√	√	
2013	Chevrolet	Tahoe	Personal audio link module						0529
2013	Chevrolet	Tahoe	Radio	√	√	√	√	√	
2013	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Tahoe	Navigation radio	√	√	√	√	√	0529
2013	Chevrolet	Tahoe	FPCM with trailer brake control	√	√	√	√	√	
2013	Chevrolet	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2013	Chevrolet	Tahoe	Electronic suension control	√	√	√	√	√	0532
2013	Chevrolet	Tahoe	Power steering control module	√	√	√	√	√	0536
2013	Chevrolet	Tahoe hybrid	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Tahoe hybrid	Transmission control module		√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Transfer Case Control Module	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Fuel Pump Control Module	√	√	√	√	√	0493
2013	Chevrolet	Tahoe hybrid	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Liftgate module	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Tahoe hybrid	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Body Control Module	√	√	√	√	√	0498
2013	Chevrolet	Tahoe hybrid	Passenger presence system	√	√	√	√		
2013	Chevrolet	Tahoe hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Tahoe hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Tahoe hybrid	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Tahoe hybrid	Assist step controller	√	√	√	√	√	0531
2013	Chevrolet	Tahoe hybrid	Memory seat module	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Rear heated seat module	√	√	√	√		
2013	Chevrolet	Tahoe hybrid	Park assist module	√	√	√	√		
2013	Chevrolet	Tahoe hybrid	Left side object detection module	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Right side object detection module	√	√	√	√		
2013	Chevrolet	Tahoe hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Chevrolet	Tahoe hybrid	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Amplifier (bose)	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Driver door switch	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Passenger door switch	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Personal audio link module						0529
2013	Chevrolet	Tahoe hybrid	Radio	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Body Control Module	√	√	√	√	√	0499 0497

2013	Chevrolet	Tahoe hybrid	Navigation radio	√	√	√	√	√	0529
2013	Chevrolet	Tahoe hybrid	FPCM with trailer brake control	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Tahoe hybrid	Electronic suension control	√	√	√	√	√	0532
2013	Chevrolet	Tahoe hybrid	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Tahoe hybrid	Transmission control module		√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Transfer Case Control Module	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Fuel Pump Control Module	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Accessory power module	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Liftgate module	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	Chevrolet	Tahoe hybrid	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Body Control Module	√	√	√	√	√	0498
2013	Chevrolet	Tahoe hybrid	Passenger presence system	√	√	√	√		
2013	Chevrolet	Tahoe hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Tahoe hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Tahoe hybrid	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Tahoe hybrid	A/C compressor control module	√	√	√	√		
2013	Chevrolet	Tahoe hybrid	Serial Data Gateway Module	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Heated seat module	√	√	√	√		
2013	Chevrolet	Tahoe hybrid	Rear heated seat module	√	√	√	√		
2013	Chevrolet	Tahoe hybrid	Park assist module	√	√	√	√		
2013	Chevrolet	Tahoe hybrid	Left side object detection module	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Right side object detection module	√	√	√	√		
2013	Chevrolet	Tahoe hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Chevrolet	Tahoe hybrid	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Amplifier (bose)	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Driver door switch	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Passenger door switch	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Personal audio link module						0529
2013	Chevrolet	Tahoe hybrid	Radio	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Tahoe hybrid	Navigation radio	√	√	√	√	√	0529
2013	Chevrolet	Tahoe hybrid	FPCM with trailer brake control	√	√	√	√	√	
2013	Chevrolet	Tahoe hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2013	Chevrolet	Tahoe hybrid	Electronic suension control	√	√	√	√	√	0532
2013	Chevrolet	Tahoe hybrid	Power steering control module	√	√	√	√	√	0536
2013	Chevrolet	Traverse - AWD	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Traverse - AWD	Transmission control module		√	√	√	√	
2013	Chevrolet	Traverse - AWD	Fuel Pump Control Module	√	√	√	√	√	

2013	Chevrolet	Traverse - AWD	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Traverse - AWD	Liftgate module	√	√	√	√	√	
2013	Chevrolet	Traverse - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	Chevrolet	Traverse - AWD	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Traverse - AWD	Memory seat module	√	√	√	√	√	
2013	Chevrolet	Traverse - AWD	Park assist module	√	√	√	√	√	
2013	Chevrolet	Traverse - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Chevrolet	Traverse - AWD	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Traverse - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Traverse - AWD	Driver door switch	√	√	√	√	√	0527
2013	Chevrolet	Traverse - AWD	Passenger door switch	√	√	√	√	√	0527
2013	Chevrolet	Traverse - AWD	Personal audio link module	√	√	√			0528 0529
2013	Chevrolet	Traverse - AWD	Radio	√	√	√	√	√	
2013	Chevrolet	Traverse - AWD	Passenger presence system	√	√	√	√	√	
2013	Chevrolet	Traverse - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Traverse - AWD	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Traverse - AWD	Body Control Module	√	√	√	√	√	0499 0497
2013	Chevrolet	Traverse - AWD	Left side object detection module	√	√	√		√	
2013	Chevrolet	Traverse - AWD	Right side object detection module	√	√	√	√	√	0494 0495
2013	Chevrolet	Traverse - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Traverse - AWD	Rear drive system	√	√	√	√	√	0530
2013	Chevrolet	Traverse - FWD	Engine Control Module	√	√	√	√	√	0493
2013	Chevrolet	Traverse - FWD	Transmission control module		√	√	√	√	
2013	Chevrolet	Traverse - FWD	Fuel Pump Control Module	√	√	√	√	√	
2013	Chevrolet	Traverse - FWD	Digital radio receiver	√	√	√	√	√	
2013	Chevrolet	Traverse - FWD	Liftgate module	√	√	√	√	√	
2013	Chevrolet	Traverse - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	Chevrolet	Traverse - FWD	Instrument panel cluster	√	√	√	√	√	
2013	Chevrolet	Traverse - FWD	Memory seat module	√	√	√	√	√	
2013	Chevrolet	Traverse - FWD	Park assist module	√	√	√	√		
2013	Chevrolet	Traverse - FWD	HVAC Control Module	√	√	√	√	√	0500 0526
2013	Chevrolet	Traverse - FWD	Rear HVAC/RSA	√	√	√	√	√	
2013	Chevrolet	Traverse - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	Chevrolet	Traverse - FWD	Driver door switch	√	√	√	√	√	0527
2013	Chevrolet	Traverse - FWD	Passenger door switch	√	√	√	√	√	0527
2013	Chevrolet	Traverse - FWD	Personal audio link module	√	√	√			0528 0529
2013	Chevrolet	Traverse - FWD	Radio	√	√	√	√	√	
2013	Chevrolet	Traverse - FWD	Passenger presence system	√	√	√	√	√	
2013	Chevrolet	Traverse - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	Chevrolet	Traverse - FWD	Theft Deterrent Module	√	√	√	√		
2013	Chevrolet	Traverse - FWD	Body Control Module	√	√	√	√	√	0499 0497

2013	Chevrolet	Traverse - FWD	Left side object detection module	√	√	√	√	√	
2013	Chevrolet	Traverse - FWD	Right side object detection module	√	√	√	√	√	0494 0495
2013	Chevrolet	Traverse - FWD	Electronic Brake Control Module	√	√	√	√	√	0506
2013	Chevrolet	Traverse - FWD	Rear drive system	√	√	√	√	√	0530
2013	GMC truck	Acadia - 2WD	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Acadia - 2WD	Transmission control module		√	√	√	√	
2013	GMC truck	Acadia - 2WD	Fuel Pump Control Module	√	√	√	√	√	
2013	GMC truck	Acadia - 2WD	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Acadia - 2WD	Liftgate module	√	√	√	√	√	
2013	GMC truck	Acadia - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	GMC truck	Acadia - 2WD	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Acadia - 2WD	Head up dilay	√	√	√	√		
2013	GMC truck	Acadia - 2WD	Memory seat module	√	√	√	√	√	
2013	GMC truck	Acadia - 2WD	Park assist module	√	√	√	√		
2013	GMC truck	Acadia - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Acadia - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2013	GMC truck	Acadia - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Acadia - 2WD	Driver door switch	√	√	√	√	√	0527
2013	GMC truck	Acadia - 2WD	Passenger door switch	√	√	√	√	√	0527
2013	GMC truck	Acadia - 2WD	Personal audio link module	√	√	√			0528 0529
2013	GMC truck	Acadia - 2WD	Radio	√	√	√	√	√	
2013	GMC truck	Acadia - 2WD	Passenger presence system	√	√	√	√	√	
2013	GMC truck	Acadia - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Acadia - 2WD	Theft Deterrent Module	√	√	√	√		
2013	GMC truck	Acadia - 2WD	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Acadia - 2WD	Left side object detection module	√	√	√		√	
2013	GMC truck	Acadia - 2WD	Right side object detection module	√	√	√	√	√	0494 0495
2013	GMC truck	Acadia - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Acadia - 4WD	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Acadia - 4WD	Transmission control module		√	√	√	√	
2013	GMC truck	Acadia - 4WD	Fuel Pump Control Module	√	√	√	√	√	
2013	GMC truck	Acadia - 4WD	Rear drive system	√	√	√	√		0530
2013	GMC truck	Acadia - 4WD	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Acadia - 4WD	Liftgate module	√	√	√	√	√	
2013	GMC truck	Acadia - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	GMC truck	Acadia - 4WD	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Acadia - 4WD	Head up dilay	√	√	√	√		
2013	GMC truck	Acadia - 4WD	Memory seat module	√	√	√	√	√	
2013	GMC truck	Acadia - 4WD	Park assist module	√	√	√	√		
2013	GMC truck	Acadia - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Acadia - 4WD	Rear HVAC/RSA	√	√	√	√	√	



2013	GMC truck	Acadia - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Acadia - 4WD	Driver door switch	√	√	√	√	√	0527
2013	GMC truck	Acadia - 4WD	Passenger door switch	√	√	√	√	√	0527
2013	GMC truck	Acadia - 4WD	Personal audio link module	√	√	√			0528 0529
2013	GMC truck	Acadia - 4WD	Radio	√	√	√	√	√	
2013	GMC truck	Acadia - 4WD	Passenger presence system	√	√	√	√	√	
2013	GMC truck	Acadia - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Acadia - 4WD	Theft Deterrent Module	√	√	√	√		
2013	GMC truck	Acadia - 4WD	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Acadia - 4WD	Left side object detection module	√	√	√		√	
2013	GMC truck	Acadia - 4WD	Right side object detection module	√	√	√	√	√	0494 0495
2013	GMC truck	Acadia - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2013	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2013	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0088 0540 0540
2013	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2013	GMC truck	Savana	Park assist module	√	√	√	√		
2013	GMC truck	Savana	Radio	√	√	√	√	√	
2013	GMC truck	Savana	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Savana	Passenger presence system	√	√	√	√		0517
2013	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Savana	Theft Deterrent Module	√	√	√	√	√	0494 0495
2013	GMC truck	Savana	Navigation radio	√	√	√	√	√	
2013	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2013	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2013	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0088 0540 0540
2013	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2013	GMC truck	Savana	Park assist module	√	√	√	√		
2013	GMC truck	Savana	Radio	√	√	√	√	√	
2013	GMC truck	Savana	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Savana	Passenger presence system	√	√	√	√		0517

2013	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Savana	Theft Deterrent Module	√	√	√	√	√	0494 0495
2013	GMC truck	Savana	Navigation radio	√	√	√	√	√	
2013	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2013	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2013	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2013	GMC truck	Savana	Park assist module	√	√	√	√		
2013	GMC truck	Savana	Radio	√	√	√	√	√	
2013	GMC truck	Savana	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Savana	Passenger presence system	√	√	√	√		0517
2013	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Savana	Theft Deterrent Module	√	√	√	√	√	0494 0495
2013	GMC truck	Savana	Navigation radio	√	√	√	√	√	
2013	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2013	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2013	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2013	GMC truck	Savana	Park assist module	√	√	√	√		
2013	GMC truck	Savana	Radio	√	√	√	√	√	
2013	GMC truck	Savana	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Savana	Passenger presence system	√	√	√	√		0517
2013	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Savana	Theft Deterrent Module	√	√	√	√	√	0494 0495
2013	GMC truck	Savana	Navigation radio	√	√	√	√	√	
2013	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Sierra	Transmission control module	√	√	√	√	√	0493
2013	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2013	GMC truck	Sierra	Digital radio receiver	√	√	√	√	√	

2013	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0498
2013	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Sierra	Passenger presence system	√	√	√	√		
2013	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√		
2013	GMC truck	Sierra	Memory seat module	√	√	√	√	√	
2013	GMC truck	Sierra	Rear heated seat module	√	√	√	√		
2013	GMC truck	Sierra	Park assist module	√	√	√	√		
2013	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	
2013	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	
2013	GMC truck	Sierra	Driver door switch	√	√	√	√	√	
2013	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	
2013	GMC truck	Sierra	Personal audio link module						0529
2013	GMC truck	Sierra	Radio	√	√	√	√	√	0528
2013	GMC truck	Sierra	Navigation radio	√	√	√	√	√	0529
2013	GMC truck	Sierra	Trailer brake control module	√	√	√	√	√	
2013	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Sierra	Electronic suension control	√	√	√	√	√	0532
2013	GMC truck	Sierra	FPCM with trailer brake control	√	√	√	√	√	0506
2013	GMC truck	Sierra	Transfer Case Control Module	√	√	√	√	√	0493
2013	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Sierra	Transmission control module	√	√	√	√	√	0493
2013	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2013	GMC truck	Sierra	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0498
2013	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Sierra	Passenger presence system	√	√	√	√		
2013	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√		
2013	GMC truck	Sierra	Memory seat module	√	√	√	√	√	
2013	GMC truck	Sierra	Rear heated seat module	√	√	√	√		
2013	GMC truck	Sierra	Park assist module	√	√	√	√		
2013	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	

2013	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	
2013	GMC truck	Sierra	Driver door switch	√	√	√	√	√	
2013	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	
2013	GMC truck	Sierra	Personal audio link module						0529
2013	GMC truck	Sierra	Radio	√	√	√	√	√	0528
2013	GMC truck	Sierra	Navigation radio	√	√	√	√	√	0529
2013	GMC truck	Sierra	Trailer brake control module	√	√	√	√	√	
2013	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Sierra	Electronic suension control	√	√	√	√	√	0532
2013	GMC truck	Sierra	FPCM with trailer brake control	√	√	√	√	√	0506
2013	GMC truck	Sierra	Transfer Case Control Module	√	√	√	√	√	0493
2013	GMC truck	Sierra Hybrid	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Sierra Hybrid	Transmission control module		√	√	√	√	
2013	GMC truck	Sierra Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Accessory power module	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Sierra Hybrid	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0498
2013	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Sierra Hybrid	Passenger presence system	√	√	√	√		
2013	GMC truck	Sierra Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Sierra Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Sierra Hybrid	Theft Deterrent Module	√	√	√	√		
2013	GMC truck	Sierra Hybrid	A/C compressor control module	√	√	√	√		
2013	GMC truck	Sierra Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Heated seat module	√	√	√	√		
2013	GMC truck	Sierra Hybrid	Rear heated seat module	√	√	√	√		
2013	GMC truck	Sierra Hybrid	Park assist module	√	√	√	√		
2013	GMC truck	Sierra Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Sierra Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Amplifier (bose)	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Driver door switch	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Passenger door switch	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Personal audio link module						0529
2013	GMC truck	Sierra Hybrid	Radio	√	√	√	√	√	0528
2013	GMC truck	Sierra Hybrid	Navigation radio	√	√	√	√	√	0529
2013	GMC truck	Sierra Hybrid	FPCM with trailer brake control	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2013	GMC truck	Sierra Hybrid	Electronic suension control	√	√	√	√	√	0532
2013	GMC truck	Sierra Hybrid	Power steering control module	√	√	√	√	√	0536

2013	GMC truck	Sierra Hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Sierra Hybrid	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Sierra Hybrid	Transmission control module		√	√	√	√	
2013	GMC truck	Sierra Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Accessory power module	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Sierra Hybrid	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0498
2013	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Sierra Hybrid	Passenger presence system	√	√	√	√		
2013	GMC truck	Sierra Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Sierra Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Sierra Hybrid	Theft Deterrent Module	√	√	√	√		
2013	GMC truck	Sierra Hybrid	A/C compressor control module	√	√	√	√		
2013	GMC truck	Sierra Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Heated seat module	√	√	√	√		
2013	GMC truck	Sierra Hybrid	Rear heated seat module	√	√	√	√		
2013	GMC truck	Sierra Hybrid	Park assist module	√	√	√	√		
2013	GMC truck	Sierra Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Sierra Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Amplifier (bose)	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Driver door switch	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Passenger door switch	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Personal audio link module						0529
2013	GMC truck	Sierra Hybrid	Radio	√	√	√	√	√	0528
2013	GMC truck	Sierra Hybrid	Navigation radio	√	√	√	√	√	0529
2013	GMC truck	Sierra Hybrid	FPCM with trailer brake control	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2013	GMC truck	Sierra Hybrid	Electronic suspension control	√	√	√	√	√	0532
2013	GMC truck	Sierra Hybrid	Power steering control module	√	√	√	√	√	0536
2013	GMC truck	Sierra Hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Yukon	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Yukon	Liftgate module	√	√	√	√	√	
2013	GMC truck	Yukon	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Yukon	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0498
2013	GMC truck	Yukon	Passenger presence system	√	√	√	√		
2013	GMC truck	Yukon	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Yukon	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Yukon	Theft Deterrent Module	√	√	√	√		

2013	GMC truck	Yukon	Assist step controller	√	√	√	√	√	0531
2013	GMC truck	Yukon	Memory seat module	√	√	√	√	√	
2013	GMC truck	Yukon	Rear heated seat module	√	√	√	√		
2013	GMC truck	Yukon	Park assist module	√	√	√	√		
2013	GMC truck	Yukon	Left side object detection module	√	√	√	√	√	
2013	GMC truck	Yukon	Right side object detection module	√	√	√	√		
2013	GMC truck	Yukon	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Yukon	Rear HVAC/RSA	√	√	√	√	√	
2013	GMC truck	Yukon	Amplifier (bose)	√	√	√	√	√	
2013	GMC truck	Yukon	Driver door switch	√	√	√	√	√	
2013	GMC truck	Yukon	Passenger door switch	√	√	√	√	√	
2013	GMC truck	Yukon	Personal audio link module						0529
2013	GMC truck	Yukon	Radio	√	√	√	√	√	
2013	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Yukon	Navigation radio	√	√	√	√	√	0529
2013	GMC truck	Yukon	FPCM with trailer brake control	√	√	√	√	√	
2013	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Yukon	Electronic suension control	√	√	√	√	√	0532
2013	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon	Transmission control module		√	√	√	√	
2013	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Yukon	Liftgate module	√	√	√	√	√	
2013	GMC truck	Yukon	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Yukon	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0498
2013	GMC truck	Yukon	Passenger presence system	√	√	√	√		
2013	GMC truck	Yukon	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Yukon	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Yukon	Theft Deterrent Module	√	√	√	√		
2013	GMC truck	Yukon	Assist step controller	√	√	√	√	√	0531
2013	GMC truck	Yukon	Memory seat module	√	√	√	√	√	
2013	GMC truck	Yukon	Rear heated seat module	√	√	√	√		
2013	GMC truck	Yukon	Park assist module	√	√	√	√		
2013	GMC truck	Yukon	Left side object detection module	√	√	√	√	√	
2013	GMC truck	Yukon	Right side object detection module	√	√	√	√		
2013	GMC truck	Yukon	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Yukon	Rear HVAC/RSA	√	√	√	√	√	
2013	GMC truck	Yukon	Amplifier (bose)	√	√	√	√	√	
2013	GMC truck	Yukon	Driver door switch	√	√	√	√	√	

2013	GMC truck	Yukon	Passenger door switch	√	√	√	√	√	
2013	GMC truck	Yukon	Personal audio link module						0529
2013	GMC truck	Yukon	Radio	√	√	√	√	√	
2013	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Yukon	Navigation radio	√	√	√	√	√	0529
2013	GMC truck	Yukon	FPCM with trailer brake control	√	√	√	√	√	
2013	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Yukon	Electronic suspension control	√	√	√	√	√	0532
2013	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon	Transmission control module		√	√	√	√	
2013	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon hybrid	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon hybrid	Transmission control module		√	√	√	√	
2013	GMC truck	Yukon hybrid	Fuel Pump Control Module	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Accessory power module	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Liftgate module	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Yukon hybrid	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0498
2013	GMC truck	Yukon hybrid	Passenger presence system	√	√	√	√		
2013	GMC truck	Yukon hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Yukon hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Yukon hybrid	Theft Deterrent Module	√	√	√	√		
2013	GMC truck	Yukon hybrid	A/C compressor control module	√	√	√	√		
2013	GMC truck	Yukon hybrid	Serial Data Gateway Module	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Assist step controller	√	√	√	√	√	0531
2013	GMC truck	Yukon hybrid	Heated seat module	√	√	√	√		
2013	GMC truck	Yukon hybrid	Rear heated seat module	√	√	√	√		
2013	GMC truck	Yukon hybrid	Park assist module	√	√	√	√		
2013	GMC truck	Yukon hybrid	Left side object detection module	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Right side object detection module	√	√	√	√		
2013	GMC truck	Yukon hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Yukon hybrid	Rear HVAC/RSA	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Amplifier (bose)	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Driver door switch	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Passenger door switch	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Personal audio link module						0529
2013	GMC truck	Yukon hybrid	Radio	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0499 0497

2013	GMC truck	Yukon hybrid	Navigation radio	√	√	√	√	√	0529
2013	GMC truck	Yukon hybrid	FPCM with trailer brake control	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2013	GMC truck	Yukon hybrid	Electronic suension control	√	√	√	√	√	0532
2013	GMC truck	Yukon hybrid	Power steering control module	√	√	√	√	√	0536
2013	GMC truck	Yukon hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Yukon hybrid	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon hybrid	Transmission control module		√	√	√	√	
2013	GMC truck	Yukon hybrid	Fuel Pump Control Module	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Accessory power module	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Liftgate module	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Yukon hybrid	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0498
2013	GMC truck	Yukon hybrid	Passenger presence system	√	√	√	√		
2013	GMC truck	Yukon hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Yukon hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Yukon hybrid	Theft Deterrent Module	√	√	√	√		
2013	GMC truck	Yukon hybrid	A/C compressor control module	√	√	√	√		
2013	GMC truck	Yukon hybrid	Serial Data Gateway Module	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Assist step controller	√	√	√	√	√	0531
2013	GMC truck	Yukon hybrid	Heated seat module	√	√	√	√		
2013	GMC truck	Yukon hybrid	Rear heated seat module	√	√	√	√		
2013	GMC truck	Yukon hybrid	Park assist module	√	√	√	√		
2013	GMC truck	Yukon hybrid	Left side object detection module	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Right side object detection module	√	√	√	√		
2013	GMC truck	Yukon hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Yukon hybrid	Rear HVAC/RSA	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Amplifier (bose)	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Driver door switch	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Passenger door switch	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Personal audio link module						0529
2013	GMC truck	Yukon hybrid	Radio	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Yukon hybrid	Navigation radio	√	√	√	√	√	0529
2013	GMC truck	Yukon hybrid	FPCM with trailer brake control	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2013	GMC truck	Yukon hybrid	Electronic suension control	√	√	√	√	√	0532
2013	GMC truck	Yukon hybrid	Power steering control module	√	√	√	√	√	0536
2013	GMC truck	Yukon hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496



2013	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon XL	Transmission control module		√	√	√	√	
2013	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon XL	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Yukon XL	Liftgate module	√	√	√	√	√	
2013	GMC truck	Yukon XL	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Yukon XL	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0498
2013	GMC truck	Yukon XL	Passenger presence system	√	√	√	√		
2013	GMC truck	Yukon XL	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Yukon XL	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Yukon XL	Theft Deterrent Module	√	√	√	√		
2013	GMC truck	Yukon XL	Assist step controller	√	√	√	√	√	0531
2013	GMC truck	Yukon XL	Memory seat module	√	√	√	√	√	
2013	GMC truck	Yukon XL	Rear heated seat module	√	√	√	√		
2013	GMC truck	Yukon XL	Park assist module	√	√	√	√		
2013	GMC truck	Yukon XL	Left side object detection module	√	√	√	√	√	
2013	GMC truck	Yukon XL	Right side object detection module	√	√	√	√		
2013	GMC truck	Yukon XL	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Yukon XL	Rear HVAC/RSA	√	√	√	√	√	
2013	GMC truck	Yukon XL	Amplifier (bose)	√	√	√	√	√	
2013	GMC truck	Yukon XL	Driver door switch	√	√	√	√	√	
2013	GMC truck	Yukon XL	Passenger door switch	√	√	√	√	√	
2013	GMC truck	Yukon XL	Personal audio link module						0529
2013	GMC truck	Yukon XL	Radio	√	√	√	√	√	
2013	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Yukon XL	Navigation radio	√	√	√	√	√	0529
2013	GMC truck	Yukon XL	FPCM with trailer brake control	√	√	√	√	√	
2013	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Yukon XL	Electronic suspension control	√	√	√	√	√	0532
2013	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√	√	0506
2013	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon XL	Transmission control module		√	√	√	√	
2013	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon XL	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Yukon XL	Liftgate module	√	√	√	√	√	
2013	GMC truck	Yukon XL	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Yukon XL	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0498
2013	GMC truck	Yukon XL	Passenger presence system	√	√	√	√		

2013	GMC truck	Yukon XL	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Yukon XL	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Yukon XL	Theft Deterrent Module	√	√	√	√		
2013	GMC truck	Yukon XL	Assist step controller	√	√	√	√	√	0531
2013	GMC truck	Yukon XL	Memory seat module	√	√	√	√	√	
2013	GMC truck	Yukon XL	Rear heated seat module	√	√	√	√		
2013	GMC truck	Yukon XL	Park assist module	√	√	√	√		
2013	GMC truck	Yukon XL	Left side object detection module	√	√	√	√	√	
2013	GMC truck	Yukon XL	Right side object detection module	√	√	√	√		
2013	GMC truck	Yukon XL	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Yukon XL	Rear HVAC/RSA	√	√	√	√	√	
2013	GMC truck	Yukon XL	Amplifier (bose)	√	√	√	√	√	
2013	GMC truck	Yukon XL	Driver door switch	√	√	√	√	√	
2013	GMC truck	Yukon XL	Passenger door switch	√	√	√	√	√	
2013	GMC truck	Yukon XL	Personal audio link module						0529
2013	GMC truck	Yukon XL	Radio	√	√	√	√	√	
2013	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Yukon XL	Navigation radio	√	√	√	√	√	0529
2013	GMC truck	Yukon XL	FPCM with trailer brake control	√	√	√	√	√	
2013	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Yukon XL	Electronic suension control	√	√	√	√	√	0532
2013	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√	√	0506
2013	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493
2012	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0323 0308 0217 0309
2012	Buick	LaCrosse	Fuel Injector Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2012	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0016
2012	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Drive Motor Control Module	√	√	√	√		
2012	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2012	Buick	LaCrosse	Parking Brake Control Module	√	√	√	√	√	0316
2012	Buick	LaCrosse	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Buick	LaCrosse	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2012	Buick	LaCrosse	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2012	Buick	LaCrosse	Suension Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2012	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2012	Buick	LaCrosse	Passenger Presence Module	√	√	√	√		0322
2012	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0301

2012	Buick	LaCrosse	Head-Up Dilay Module	√	√	√	√	√	
2012	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Radio	√	√	√	√	√	
2012	Buick	LaCrosse	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2012	Buick	LaCrosse	Multimedia Player Interface Module	√	√	√	√		
2012	Buick	LaCrosse	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2012	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2012	Buick	LaCrosse	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2012	Buick	LaCrosse	Seat Memory Control Module	√	√	√	√	√	0310
2012	Buick	LaCrosse	Front Seat Heating Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Rear Seat Heating Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0301
2012	Buick	LaCrosse	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2012	Buick	LaCrosse	Steering Column Lock Control Module	√	√	√	√		
2012	Buick	LaCrosse	Battery Energy Control Module	√			√		
2012	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√	√	√	
2012	Buick	LaCrosse	Right Side Object Detection Control Module	√	√	√	√	√	
2012	Buick	Regal	Engine Control Module	√	√	√	√	√	0323 0308 0217 0309
2012	Buick	Regal	Fuel Injector Control Module	√	√	√	√	√	
2012	Buick	Regal	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Buick	Regal	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2012	Buick	Regal	Transmission Control Module	√	√	√	√	√	0016
2012	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	
2012	Buick	Regal	Drive Motor Control Module	√	√	√	√		
2012	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2012	Buick	Regal	Parking Brake Control Module	√	√	√	√	√	0316
2012	Buick	Regal	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Buick	Regal	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2012	Buick	Regal	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2012	Buick	Regal	Suension Control Module	√	√	√	√	√	
2012	Buick	Regal	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2012	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2012	Buick	Regal	Passenger Presence Module	√	√	√	√		0322
2012	Buick	Regal	Instrument Cluster	√	√	√	√	√	0301
2012	Buick	Regal	Head-Up Dilay Module	√	√	√	√	√	
2012	Buick	Regal	Headlamp Control Module	√	√	√	√	√	
2012	Buick	Regal	Radio	√	√	√	√	√	
2012	Buick	Regal	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2012	Buick	Regal	Multimedia Player Interface Module	√	√	√	√		

2012	Buick	Regal	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2012	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2012	Buick	Regal	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2012	Buick	Regal	Seat Memory Control Module	√	√	√	√	√	0310
2012	Buick	Regal	Front Seat Heating Control Module	√	√	√	√	√	
2012	Buick	Regal	Rear Seat Heating Control Module	√	√	√	√	√	
2012	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	
2012	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0301
2012	Buick	Regal	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2012	Buick	Regal	Steering Column Lock Control Module	√	√	√	√		
2012	Buick	Regal	Battery Energy Control Module	√			√		
2012	Buick	Regal	Left Side Object Detection Control Module	√	√	√	√	√	
2012	Buick	Regal	Right Side Object Detection Control Module	√	√	√	√	√	
2012	Buick	Verano	Engine Control Module	√	√	√	√	√	0323 0305 0306 0067 0263 0308 0217
2012	Buick	Verano	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Buick	Verano	Transmission Control Module	√	√	√	√	√	0017
2012	Buick	Verano	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2012	Buick	Verano	Parking Brake Control Module	√	√	√	√	√	0316
2012	Buick	Verano	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Buick	Verano	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2012	Buick	Verano	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2012	Buick	Verano	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2012	Buick	Verano	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2012	Buick	Verano	Passenger Presence Module	√	√	√	√		0322
2012	Buick	Verano	Instrument Cluster	√	√	√	√	√	
2012	Buick	Verano	Headlamp Control Module	√	√	√	√	√	
2012	Buick	Verano	Radio	√	√	√	√	√	
2012	Buick	Verano	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2012	Buick	Verano	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2012	Buick	Verano	Front Seat Heating Control Module	√	√	√	√	√	
2012	Buick	Verano	Keyless Entry Control Module	√	√	√	√	√	
2012	Buick	Verano	Parking Assist Control Module	√	√	√	√	√	0301
2012	Cadillac	SRX	Engine Control Module	√	√	√	√	√	0067 0308 0217 0309
2012	Cadillac	SRX	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Cadillac	SRX	Transmission Control Module	√	√	√	√	√	0020 0106
2012	Cadillac	SRX	Rear Differential Clutch Control Module	√	√	√	√	√	
2012	Cadillac	SRX	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2012	Cadillac	SRX	Parking Brake Control Module	√	√	√	√	√	0316
2012	Cadillac	SRX	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Cadillac	SRX	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090

2012	Cadillac	SRX	Suension Control Module	√	√	√	√	√	
2012	Cadillac	SRX	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2012	Cadillac	SRX	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2012	Cadillac	SRX	Passenger Presence Module	√	√	√	√		0322
2012	Cadillac	SRX	Instrument Cluster	√	√	√	√	√	0301
2012	Cadillac	SRX	Headlamp Control Module	√	√	√	√	√	
2012	Cadillac	SRX	Trailer Interface Control Module	√	√	√	√	√	0301
2012	Cadillac	SRX	Radio	√	√	√	√	√	
2012	Cadillac	SRX	Rear Audio Control Module	√	√	√	√	√	
2012	Cadillac	SRX	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2012	Cadillac	SRX	Multimedia Player Interface Module	√	√	√	√		
2012	Cadillac	SRX	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2012	Cadillac	SRX	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2012	Cadillac	SRX	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2012	Cadillac	SRX	Liftgate Control Module	√	√	√	√	√	0146
2012	Cadillac	SRX	Seat Memory Control Module	√	√	√	√	√	0310
2012	Cadillac	SRX	Front Seat Heating Control Module	√	√	√	√	√	
2012	Cadillac	SRX	Rear Seat Heating Control Module	√	√	√	√	√	
2012	Cadillac	SRX	Keyless Entry Control Module	√	√	√	√	√	
2012	Cadillac	SRX	Parking Assist Control Module	√	√	√	√	√	0301
2012	Cadillac	SRX	Steering Column Lock Control Module	√	√	√	√		
2012	Cadillac	XTS	Radio	√	√	√	√	√	0226 0150
2012	Cadillac	XTS	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0417 0418 0419 0420
2012	Cadillac	XTS	Transmission Control Module	√	√	√	√	√	
2012	Cadillac	XTS	Human Machine Interface Control Module	√	√	√	√	√	0150
2012	Cadillac	XTS	Parking Assist Control Module	√	√	√	√	√	0271
2012	Cadillac	XTS	Video Processing Control Module	√	√	√	√	√	
2012	Cadillac	XTS	Seat Memory Control Module - Left Rear	√	√	√	√	√	
2012	Cadillac	XTS	Seat Memory Control Module - Right Rear	√	√	√	√	√	
2012	Cadillac	XTS	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2012	Cadillac	XTS	Engine Control Module	√	√	√	√	√	0391 0382 0115 0399 0400 0401 0308 0088 0219 0073 0405 0070 0071 0408 0118 0410 0120 0309 0240 0178 0180 0182 0184 0417 0418 0419 0420 0138 0137 0423 0424 0425 0426 0427 0428 0429
2012	Cadillac	XTS	Instrument Cluster	√	√	√	√	√	

2012	Cadillac	XTS	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297
2012	Cadillac	XTS	HVAC Control Module	√	√	√	√	√	0129
2012	Cadillac	XTS	HVAC Controls	√	√	√	√	√	0344
2012	Cadillac	XTS	Keyless Entry Control Module	√	√	√	√	√	
2012	Cadillac	XTS	Rear Blower Module	√	√	√	√	√	0485 0486 0487 0488 0489 0490 0491
2012	Cadillac	XTS	Radio Controls	√	√	√	√		0344
2012	Cadillac	XTS	Left Side Object Detection Control Module	√	√	√		√	
2012	Cadillac	XTS	Right Side Object Detection Control Module	√	√	√		√	
2012	Cadillac	XTS	Suension Control Module	√	√	√	√	√	
2012	Cadillac	XTS	Amplifier	√	√	√	√		
2012	Chevrolet	Aveo	Engine Control Module	√	√	√	√	√	0323 0305
2012	Chevrolet	Aveo	Fuel Injector Control Module	√			√	√	
2012	Chevrolet	Aveo	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Chevrolet	Aveo	Transmission Control Module	√	√	√	√	√	0017
2012	Chevrolet	Aveo	Electronic Brake Control Module	√	√	√	√	√	0090
2012	Chevrolet	Aveo	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Chevrolet	Aveo	Electric Power Steering Control Module	√	√	√	√		
2012	Chevrolet	Aveo	Steering Wheel Angle Sensor Module	√	√	√			
2012	Chevrolet	Aveo	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2012	Chevrolet	Aveo	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2012	Chevrolet	Aveo	Passenger Presence Module	√	√	√	√		0322
2012	Chevrolet	Aveo	Instrument Cluster	√	√	√	√	√	0301
2012	Chevrolet	Aveo	Radio	√	√	√	√	√	
2012	Chevrolet	Aveo	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2012	Chevrolet	Aveo	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2012	Chevrolet	Aveo	Front Seat Heating Control Module	√	√	√	√	√	
2012	Chevrolet	Aveo	Parking Assist Control Module	√	√	√	√	√	0301
2012	Chevrolet	Beat	Engine Control Module	√	√	√	√	√	0133 0133 0323 0383 0096 0096 0130 0143 0265 0265 0147 0147 0098 0098 0387 0387 0382 0382 0391 0391 0094 0094 0392 0308 0393 0393 0394 0394 0135 0128 0173 0173
2012	Chevrolet	Beat	Fuel Injector Control Module	√	√	√	√	√	
2012	Chevrolet	Beat	Transmission Control Module	√	√	√	√	√	
2012	Chevrolet	Beat	Electronic Brake Control Module	√	√	√	√	√	0090
2012	Chevrolet	Beat	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111

2012	Chevrolet	Beat	Electric Power Steering Control Module	√	√	√	√		
2012	Chevrolet	Beat	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2012	Chevrolet	Beat	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2012	Chevrolet	Beat	Passenger Presence Module	√	√	√	√	√	0322
2012	Chevrolet	Beat	Instrument Cluster	√	√	√	√	√	
2012	Chevrolet	Camaro	Engine Control Module	√	√	√	√	√	0323 0308 0217 0309
2012	Chevrolet	Camaro	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Chevrolet	Camaro	Transmission Control Module	√	√	√	√	√	0016
2012	Chevrolet	Camaro	Electronic Brake Control Module	√	√	√	√	√	0090 0225
2012	Chevrolet	Camaro	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Chevrolet	Camaro	Power Steering Control Module	√	√	√	√		
2012	Chevrolet	Camaro	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2012	Chevrolet	Camaro	Suension Control Module	√	√	√	√	√	
2012	Chevrolet	Camaro	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2012	Chevrolet	Camaro	Auxiliary Gage Module	√	√	√	√	√	
2012	Chevrolet	Camaro	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2012	Chevrolet	Camaro	Passenger Presence Module	√	√	√	√		0322
2012	Chevrolet	Camaro	Instrument Cluster	√	√	√	√	√	0301
2012	Chevrolet	Camaro	Head-Up Dilay Module	√	√	√	√	√	
2012	Chevrolet	Camaro	Headlamp Control Module	√	√	√	√	√	0195
2012	Chevrolet	Camaro	Radio	√	√	√	√	√	
2012	Chevrolet	Camaro	Multimedia Player Interface Module	√	√	√	√		
2012	Chevrolet	Camaro	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2012	Chevrolet	Camaro	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2012	Chevrolet	Camaro	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2012	Chevrolet	Camaro	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2012	Chevrolet	Camaro	Front Seat Heating Control Module	√	√	√	√	√	
2012	Chevrolet	Camaro	Folding Top Control Module	√	√	√	√	√	
2012	Chevrolet	Camaro	Parking Assist Control Module	√	√	√	√	√	
2012	Chevrolet	Caprice	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2012	Chevrolet	Caprice	Transmission Control Module	√	√	√	√	√	0016
2012	Chevrolet	Captiva	Engine Control Module	√	√	√	√	√	0263 0305 0306 0067 0323 0308 0217 0337
2012	Chevrolet	Captiva	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Chevrolet	Captiva	Transmission Control Module	√	√	√	√	√	0017
2012	Chevrolet	Captiva	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2012	Chevrolet	Captiva	Electronic Brake Control Module	√	√	√	√	√	0090 0111
2012	Chevrolet	Captiva	Parking Brake Control Module	√	√	√	√	√	0316
2012	Chevrolet	Captiva	Body Control Module	√	√	√	√	√	0243 0263 0332

2012	Chevrolet	Captiva	Auxiliary Body Control Module	√	√	√	√	√	0050
2012	Chevrolet	Captiva	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172 0332
2012	Chevrolet	Captiva	Instrument Cluster	√	√	√	√	√	
2012	Chevrolet	Captiva	Headlamp Control Module	√	√	√	√	√	0195 0065
2012	Chevrolet	Captiva	Radio	√	√	√	√	√	0170 0492 0468 0467
2012	Chevrolet	Captiva	Mobile Telephone Control Module	√	√	√	√	√	0301
2012	Chevrolet	Captiva	HVAC Control Module	√	√	√		√	
2012	Chevrolet	Captiva	Info Dilay Module	√	√	√			
2012	Chevrolet	Captiva	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0298
2012	Chevrolet	Captiva	Parking Assist Control Module	√	√	√	√	√	
2012	Chevrolet	Captiva	Theft Deterrent Module	√	√	√	√		
2012	Chevrolet	Cobalt	Engine Control Module	√	√	√	√	√	0323 0305
2012	Chevrolet	Cobalt	Fuel Injector Control Module	√			√	√	
2012	Chevrolet	Cobalt	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Chevrolet	Cobalt	Transmission Control Module	√	√	√	√	√	0017
2012	Chevrolet	Cobalt	Electronic Brake Control Module	√	√	√	√	√	0090
2012	Chevrolet	Cobalt	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Chevrolet	Cobalt	Electric Power Steering Control Module	√	√	√	√		
2012	Chevrolet	Cobalt	Steering Wheel Angle Sensor Module	√	√	√			
2012	Chevrolet	Cobalt	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2012	Chevrolet	Cobalt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2012	Chevrolet	Cobalt	Passenger Presence Module	√	√	√	√		0322
2012	Chevrolet	Cobalt	Instrument Cluster	√	√	√	√	√	0301
2012	Chevrolet	Cobalt	Radio	√	√	√	√	√	
2012	Chevrolet	Cobalt	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2012	Chevrolet	Cobalt	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2012	Chevrolet	Cobalt	Front Seat Heating Control Module	√	√	√	√	√	
2012	Chevrolet	Cobalt	Parking Assist Control Module	√	√	√	√	√	0301
2012	Chevrolet	Colorado	Engine Control Module	√	√	√	√	√	0484 0387
2012	Chevrolet	Colorado	Transmission Control Module	√	√	√	√	√	0016
2012	Chevrolet	Colorado	Transfer Case Control Module	√	√	√	√	√	0037
2012	Chevrolet	Colorado	Electronic Brake Control Module	√	√	√	√	√	0090
2012	Chevrolet	Colorado	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0112 0111 0111
2012	Chevrolet	Colorado	Steering Wheel Angle Sensor Module	√	√	√			
2012	Chevrolet	Colorado	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2012	Chevrolet	Colorado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2012	Chevrolet	Colorado	Instrument Cluster	√	√	√	√	√	
2012	Chevrolet	Colorado	Trailer Interface Control Module	√	√	√	√	√	



2012	Chevrolet	Colorado	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2012	Chevrolet	Cruze	Engine Control Module	√	√	√	√	√	0308 0217
2012	Chevrolet	Cruze	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Chevrolet	Cruze	Transmission Control Module	√	√	√	√	√	0017
2012	Chevrolet	Cruze	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2012	Chevrolet	Cruze	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Chevrolet	Cruze	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2012	Chevrolet	Cruze	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2012	Chevrolet	Cruze	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2012	Chevrolet	Cruze	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2012	Chevrolet	Cruze	Passenger Presence Module	√	√	√	√		0322
2012	Chevrolet	Cruze	Instrument Cluster	√	√	√	√	√	0301
2012	Chevrolet	Cruze	Trailer Interface Control Module	√	√	√	√	√	0301
2012	Chevrolet	Cruze	Radio	√	√	√	√	√	
2012	Chevrolet	Cruze	Multimedia Player Interface Module	√	√	√	√		
2012	Chevrolet	Cruze	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2012	Chevrolet	Cruze	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2012	Chevrolet	Cruze	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2012	Chevrolet	Cruze	Front Seat Heating Control Module	√	√	√	√	√	
2012	Chevrolet	Cruze	Keyless Entry Control Module	√	√	√	√	√	
2012	Chevrolet	Cruze	Parking Assist Control Module	√	√	√	√	√	
2012	Chevrolet	Cruze	Steering Column Lock Control Module	√	√	√	√		
2012	Chevrolet	Enjoy	Engine Control Module	√	√	√	√	√	
2012	Chevrolet	Enjoy	Electronic Brake Control Module	√	√	√	√	√	
2012	Chevrolet	Enjoy	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√		
2012	Chevrolet	Equinox	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2012	Chevrolet	Equinox	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Chevrolet	Equinox	Transmission Control Module	√	√	√	√	√	0016
2012	Chevrolet	Equinox	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2012	Chevrolet	Equinox	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2012	Chevrolet	Equinox	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Chevrolet	Equinox	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2012	Chevrolet	Equinox	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2012	Chevrolet	Equinox	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2012	Chevrolet	Equinox	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2012	Chevrolet	Equinox	Passenger Presence Module	√	√	√	√		0322
2012	Chevrolet	Equinox	Instrument Cluster	√	√	√	√	√	0301
2012	Chevrolet	Equinox	Radio	√	√	√	√	√	

2012	Chevrolet	Equinox	Multimedia Player Interface Module	√	√	√	√		
2012	Chevrolet	Equinox	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2012	Chevrolet	Equinox	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2012	Chevrolet	Equinox	Liftgate Control Module	√	√	√	√	√	0146
2012	Chevrolet	Equinox	Seat Memory Control Module	√	√	√	√	√	0310
2012	Chevrolet	Equinox	Front Seat Heating Control Module	√	√	√	√	√	
2012	Chevrolet	Equinox	Parking Assist Control Module	√	√	√	√	√	0301
2012	Chevrolet	Equinox	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2012	Chevrolet	Equinox	Frontview Camera Module	√	√	√	√	√	0205 0196
2012	Chevrolet	Malibu	Engine Control Module	√	√	√	√	√	0323 0308 0217 0309
2012	Chevrolet	Malibu	Fuel Injector Control Module	√	√	√	√	√	
2012	Chevrolet	Malibu	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Chevrolet	Malibu	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2012	Chevrolet	Malibu	Transmission Control Module	√	√	√	√	√	0016
2012	Chevrolet	Malibu	Rear Differential Clutch Control Module	√	√	√	√	√	
2012	Chevrolet	Malibu	Drive Motor Control Module	√	√	√	√		
2012	Chevrolet	Malibu	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2012	Chevrolet	Malibu	Parking Brake Control Module	√	√	√	√	√	0316
2012	Chevrolet	Malibu	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Chevrolet	Malibu	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2012	Chevrolet	Malibu	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2012	Chevrolet	Malibu	Suension Control Module	√	√	√	√	√	
2012	Chevrolet	Malibu	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2012	Chevrolet	Malibu	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2012	Chevrolet	Malibu	Passenger Presence Module	√	√	√	√		0322
2012	Chevrolet	Malibu	Instrument Cluster	√	√	√	√	√	0301
2012	Chevrolet	Malibu	Head-Up Dilay Module	√	√	√	√	√	
2012	Chevrolet	Malibu	Headlamp Control Module	√	√	√	√	√	
2012	Chevrolet	Malibu	Radio	√	√	√	√	√	
2012	Chevrolet	Malibu	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2012	Chevrolet	Malibu	Multimedia Player Interface Module	√	√	√	√		
2012	Chevrolet	Malibu	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2012	Chevrolet	Malibu	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2012	Chevrolet	Malibu	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2012	Chevrolet	Malibu	Seat Memory Control Module	√	√	√	√	√	0310
2012	Chevrolet	Malibu	Front Seat Heating Control Module	√	√	√	√	√	
2012	Chevrolet	Malibu	Rear Seat Heating Control Module	√	√	√	√	√	
2012	Chevrolet	Malibu	Keyless Entry Control Module	√	√	√	√	√	
2012	Chevrolet	Malibu	Parking Assist Control Module	√	√	√	√	√	0301
2012	Chevrolet	Malibu	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447

2012	Chevrolet	Malibu	Steering Column Lock Control Module	√	√	√	√		
2012	Chevrolet	Malibu	Battery Energy Control Module	√			√		
2012	Chevrolet	Malibu	Left Side Object Detection Control Module	√	√	√	√	√	
2012	Chevrolet	Malibu	Right Side Object Detection Control Module	√	√	√	√	√	
2012	Chevrolet	Orlando	Engine Control Module	√	√	√	√	√	0308 0217
2012	Chevrolet	Orlando	Fuel Injector Control Module	√	√	√	√	√	
2012	Chevrolet	Orlando	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Chevrolet	Orlando	Transmission Control Module	√	√	√	√	√	0017
2012	Chevrolet	Orlando	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2012	Chevrolet	Orlando	Parking Brake Control Module	√	√	√	√	√	0316
2012	Chevrolet	Orlando	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Chevrolet	Orlando	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2012	Chevrolet	Orlando	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2012	Chevrolet	Orlando	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2012	Chevrolet	Orlando	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2012	Chevrolet	Orlando	Instrument Cluster	√	√	√	√	√	0301
2012	Chevrolet	Orlando	Trailer Interface Control Module	√	√	√	√	√	0301
2012	Chevrolet	Orlando	Radio	√	√	√	√	√	
2012	Chevrolet	Orlando	Multimedia Player Interface Module	√	√	√	√		
2012	Chevrolet	Orlando	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2012	Chevrolet	Orlando	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2012	Chevrolet	Orlando	Front Seat Heating Control Module	√	√	√	√	√	
2012	Chevrolet	Orlando	Keyless Entry Control Module	√	√	√	√	√	
2012	Chevrolet	Orlando	Parking Assist Control Module	√	√	√	√	√	0301
2012	Chevrolet	Orlando	Steering Column Lock Control Module	√	√	√	√		
2012	Chevrolet	S10	Engine Control Module	√	√	√	√	√	0484 0387
2012	Chevrolet	S10	Transmission Control Module	√	√	√	√	√	0016
2012	Chevrolet	S10	Transfer Case Control Module	√	√	√	√	√	0037
2012	Chevrolet	S10	Electronic Brake Control Module	√	√	√	√	√	0090
2012	Chevrolet	S10	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0112 0111 0111
2012	Chevrolet	S10	Steering Wheel Angle Sensor Module	√	√	√			
2012	Chevrolet	S10	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2012	Chevrolet	S10	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2012	Chevrolet	S10	Instrument Cluster	√	√	√	√	√	
2012	Chevrolet	S10	Trailer Interface Control Module	√	√	√	√	√	
2012	Chevrolet	S10	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2012	Chevrolet	Sail	Engine Control Module	√	√	√	√	√	
2012	Chevrolet	Sail	Transmission Control Module	√	√	√	√	√	0479 0480 0153 0136
2012	Chevrolet	Sail	Electronic Brake Control Module	√	√	√	√	√	

2012	Chevrolet	Sail	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√		0064 0040 0063 0039 0227 0064 0040 0063 0039 0172 0177
2012	Chevrolet	Sail	Keyless Entry Control Module				√		
2012	Chevrolet	Sonic	Engine Control Module	√	√	√	√	√	0323 0305
2012	Chevrolet	Sonic	Fuel Injector Control Module	√			√	√	
2012	Chevrolet	Sonic	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Chevrolet	Sonic	Transmission Control Module	√	√	√	√	√	0017
2012	Chevrolet	Sonic	Electronic Brake Control Module	√	√	√	√	√	0090
2012	Chevrolet	Sonic	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Chevrolet	Sonic	Electric Power Steering Control Module	√	√	√	√		
2012	Chevrolet	Sonic	Steering Wheel Angle Sensor Module	√	√	√			
2012	Chevrolet	Sonic	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2012	Chevrolet	Sonic	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2012	Chevrolet	Sonic	Passenger Presence Module	√	√	√	√		0322
2012	Chevrolet	Sonic	Instrument Cluster	√	√	√	√	√	0301
2012	Chevrolet	Sonic	Radio	√	√	√	√	√	
2012	Chevrolet	Sonic	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2012	Chevrolet	Sonic	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2012	Chevrolet	Sonic	Front Seat Heating Control Module	√	√	√	√	√	
2012	Chevrolet	Sonic	Parking Assist Control Module	√	√	√	√	√	0301
2012	Chevrolet	ark	Engine Control Module	√	√	√	√	√	0133 0133 0323 0383 0096 0096 0130 0143 0265 0265 0147 0147 0098 0098 0387 0387 0382 0382 0391 0391 0094 0094 0392 0308 0393 0393 0394 0394 0135 0128 0173 0173
2012	Chevrolet	ark	Fuel Injector Control Module	√	√	√	√	√	
2012	Chevrolet	ark	Transmission Control Module	√	√	√	√	√	
2012	Chevrolet	ark	Electronic Brake Control Module	√	√	√	√	√	0090
2012	Chevrolet	ark	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Chevrolet	ark	Electric Power Steering Control Module	√	√	√	√		
2012	Chevrolet	ark	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2012	Chevrolet	ark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2012	Chevrolet	ark	Passenger Presence Module	√	√	√	√	√	0322
2012	Chevrolet	ark	Instrument Cluster	√	√	√	√	√	
2012	Chevrolet	Tavera	Engine Control Module	√	√	√	√	√	
2012	Chevrolet	Volt	Engine Control Module	√	√	√	√	√	0305 0306 0067 0308 0217 0176

2012	Chevrolet	Volt	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Chevrolet	Volt	Hybrid Powertrain Control Module	√	√	√	√	√	
2012	Chevrolet	Volt	Transmission Control Module	√	√	√	√	√	
2012	Chevrolet	Volt	Drive Motor Control Module 1	√	√	√	√		
2012	Chevrolet	Volt	Drive Motor Control Module 2	√	√	√	√		
2012	Chevrolet	Volt	Auxiliary Transmission Fluid Pump	√	√	√	√		
2012	Chevrolet	Volt	Electronic Brake Control Module	√	√	√	√	√	0371 0111 0111 0111
2012	Chevrolet	Volt	Parking Brake Control Module	√	√	√	√	√	0316
2012	Chevrolet	Volt	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Chevrolet	Volt	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2012	Chevrolet	Volt	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2012	Chevrolet	Volt	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2012	Chevrolet	Volt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2012	Chevrolet	Volt	Passenger Presence Module	√	√	√	√		0322
2012	Chevrolet	Volt	Instrument Cluster	√	√	√	√	√	0301
2012	Chevrolet	Volt	Radio	√	√	√	√	√	
2012	Chevrolet	Volt	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2012	Chevrolet	Volt	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2012	Chevrolet	Volt	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2012	Chevrolet	Volt	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2012	Chevrolet	Volt	Electric A/C Compressor Control Module	√					
2012	Chevrolet	Volt	Coolant Heater Control Module	√	√	√			
2012	Chevrolet	Volt	Front Seat Heating Control Module	√	√	√	√	√	
2012	Chevrolet	Volt	Keyless Entry Control Module	√	√	√	√	√	
2012	Chevrolet	Volt	Parking Assist Control Module	√	√	√	√	√	0301
2012	Chevrolet	Volt	Steering Column Lock Control Module	√	√	√	√		
2012	Chevrolet	Volt	Battery Charger Control Module	√			√		
2012	Chevrolet	Volt	Hybrid Powertrain Control Module 2	√	√	√	√	√	0362 0363 0364 0365 0366 0367 0368
2012	Chevrolet	Volt	Battery Energy Control Module	√			√		
2012	Alpheon	Alpheon	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2012	Alpheon	Alpheon	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Alpheon	Alpheon	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2012	Alpheon	Alpheon	Transmission Control Module	√	√	√	√	√	0017
2012	Alpheon	Alpheon	Drive Motor Control Module	√	√	√	√		
2012	Alpheon	Alpheon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2012	Alpheon	Alpheon	Parking Brake Control Module	√	√	√	√	√	0316
2012	Alpheon	Alpheon	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Alpheon	Alpheon	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2012	Alpheon	Alpheon	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090

2012	Alpheon	Alpheon	Suension Control Module	√	√	√	√	√	
2012	Alpheon	Alpheon	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2012	Alpheon	Alpheon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2012	Alpheon	Alpheon	Instrument Cluster	√	√	√	√	√	0301
2012	Alpheon	Alpheon	Headlamp Control Module	√	√	√	√	√	0195
2012	Alpheon	Alpheon	Radio	√	√	√	√	√	
2012	Alpheon	Alpheon	Rear Audio Control Module	√	√	√	√	√	
2012	Alpheon	Alpheon	Multimedia Player Interface Module	√	√	√	√		
2012	Alpheon	Alpheon	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2012	Alpheon	Alpheon	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2012	Alpheon	Alpheon	Seat Memory Control Module	√	√	√	√	√	0310
2012	Alpheon	Alpheon	Front Seat Heating Control Module	√	√	√	√	√	
2012	Alpheon	Alpheon	Rear Seat Heating Control Module	√	√	√	√	√	
2012	Alpheon	Alpheon	Keyless Entry Control Module	√	√	√	√	√	
2012	Alpheon	Alpheon	Parking Assist Control Module	√	√	√	√	√	0301
2012	Alpheon	Alpheon	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2012	Alpheon	Alpheon	Battery Energy Control Module	√			√		
2012	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2012	GMC	Terrain	Fuel Pump Control Module	√	√	√	√	√	0217
2012	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0016
2012	GMC	Terrain	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2012	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2012	GMC	Terrain	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2012	GMC	Terrain	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2012	GMC	Terrain	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2012	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2012	GMC	Terrain	Passenger Presence Module	√	√	√	√		0322
2012	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0301
2012	GMC	Terrain	Radio	√	√	√	√	√	
2012	GMC	Terrain	Multimedia Player Interface Module	√	√	√	√		
2012	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2012	GMC	Terrain	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2012	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146
2012	GMC	Terrain	Seat Memory Control Module	√	√	√	√	√	0310
2012	GMC	Terrain	Front Seat Heating Control Module	√	√	√	√	√	
2012	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0301
2012	GMC	Terrain	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2012	GMC	Terrain	Frontview Camera Module	√	√	√	√	√	0205 0196

2012	Holden	Barina	Engine Control Module	√	√	√	√	√	0323 0305
2012	Holden	Barina	Fuel Injector Control Module	√			√	√	
2012	Holden	Barina	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Holden	Barina	Transmission Control Module	√	√	√	√	√	0017
2012	Holden	Barina	Electronic Brake Control Module	√	√	√	√	√	0090
2012	Holden	Barina	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Holden	Barina	Electric Power Steering Control Module	√	√	√	√		
2012	Holden	Barina	Steering Wheel Angle Sensor Module	√	√	√			
2012	Holden	Barina	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2012	Holden	Barina	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2012	Holden	Barina	Passenger Presence Module	√	√	√	√		0322
2012	Holden	Barina	Instrument Cluster	√	√	√	√	√	0301
2012	Holden	Barina	Radio	√	√	√	√	√	
2012	Holden	Barina	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2012	Holden	Barina	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2012	Holden	Barina	Front Seat Heating Control Module	√	√	√	√	√	
2012	Holden	Barina	Parking Assist Control Module	√	√	√	√	√	0301
2012	Holden	Barina ark	Engine Control Module	√	√	√	√	√	0133 0133 0323 0383 0096 0096 0130 0143 0265 0265 0147 0147 0098 0098 0387 0387 0382 0382 0391 0391 0094 0094 0392 0308 0393 0393 0394 0394 0135 0128 0173 0173
2012	Holden	Barina ark	Fuel Injector Control Module	√	√	√	√	√	
2012	Holden	Barina ark	Transmission Control Module	√	√	√	√	√	
2012	Holden	Barina ark	Electronic Brake Control Module	√	√	√	√	√	0090
2012	Holden	Barina ark	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Holden	Barina ark	Electric Power Steering Control Module	√	√	√	√		
2012	Holden	Barina ark	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2012	Holden	Barina ark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2012	Holden	Barina ark	Passenger Presence Module	√	√	√	√	√	0322
2012	Holden	Barina ark	Instrument Cluster	√	√	√	√	√	
2012	Holden	Captiva 5	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2012	Holden	Captiva 5	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Holden	Captiva 5	Transmission Control Module	√	√	√	√	√	0248
2012	Holden	Captiva 5	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2012	Holden	Captiva 5	Electronic Brake Control Module	√	√	√	√	√	0090
2012	Holden	Captiva 5	Parking Brake Control Module	√	√	√	√	√	0316

2012	Holden	Captiva 5	Body Control Module	√	√	√	√	√	0243 0263
2012	Holden	Captiva 5	Auxiliary Body Control Module	√	√	√	√	√	0050
2012	Holden	Captiva 5	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0332
2012	Holden	Captiva 5	Headlamp Control Module	√	√	√	√	√	0195 0065
2012	Holden	Captiva 5	Radio	√	√	√	√	√	0170 0170 0170 0170 0065 0065 0065 0065
2012	Holden	Captiva 5	Mobile Telephone Control Module	√	√	√		√	
2012	Holden	Captiva 5	HVAC Control Module	√	√	√		√	
2012	Holden	Captiva 5	Info Dilay Module	√	√	√	√	√	0170 0170 0170 0170 0467 0468 0301 0301 0246 0246 0246 0246
2012	Holden	Captiva 5	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0298
2012	Holden	Captiva 5	Parking Assist Control Module	√	√	√	√	√	
2012	Holden	Captiva 5	Theft Deterrent Module	√	√	√	√		
2012	Holden	Captiva 5	Instrument Cluster	√	√	√	√	√	
2012	Holden	Captiva 7	Engine Control Module	√	√	√	√	√	0263 0305 0306 0067 0323 0308 0217 0337
2012	Holden	Captiva 7	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Holden	Captiva 7	Transmission Control Module	√	√	√	√	√	0017
2012	Holden	Captiva 7	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2012	Holden	Captiva 7	Electronic Brake Control Module	√	√	√	√	√	0090 0111
2012	Holden	Captiva 7	Parking Brake Control Module	√	√	√	√	√	0316
2012	Holden	Captiva 7	Body Control Module	√	√	√	√	√	0243 0263 0332
2012	Holden	Captiva 7	Auxiliary Body Control Module	√	√	√	√	√	0050
2012	Holden	Captiva 7	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172 0332
2012	Holden	Captiva 7	Instrument Cluster	√	√	√	√	√	
2012	Holden	Captiva 7	Headlamp Control Module	√	√	√	√	√	0195 0065
2012	Holden	Captiva 7	Radio	√	√	√	√	√	0170 0492 0468 0467
2012	Holden	Captiva 7	Mobile Telephone Control Module	√	√	√	√	√	0301
2012	Holden	Captiva 7	HVAC Control Module	√	√	√		√	
2012	Holden	Captiva 7	Info Dilay Module	√	√	√			
2012	Holden	Captiva 7	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0298
2012	Holden	Captiva 7	Parking Assist Control Module	√	√	√	√	√	
2012	Holden	Captiva 7	Theft Deterrent Module	√	√	√	√		
2012	Holden	Colorado	Engine Control Module	√	√	√	√	√	0484 0387
2012	Holden	Colorado	Transmission Control Module	√	√	√	√	√	0016
2012	Holden	Colorado	Transfer Case Control Module	√	√	√	√	√	0037
2012	Holden	Colorado	Electronic Brake Control Module	√	√	√	√	√	0090
2012	Holden	Colorado	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0112 0111 0111
2012	Holden	Colorado	Steering Wheel Angle Sensor Module	√	√	√			



2012	Holden	Colorado	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2012	Holden	Colorado	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2012	Holden	Colorado	Instrument Cluster	√	√	√	√	√	
2012	Holden	Colorado	Trailer Interface Control Module	√	√	√	√	√	
2012	Holden	Colorado	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2012	Holden	Cruze	Engine Control Module	√	√	√	√	√	0308 0217
2012	Holden	Cruze	Fuel Pump Control Module	√	√	√	√	√	0217
2012	Holden	Cruze	Transmission Control Module	√	√	√	√	√	0017
2012	Holden	Cruze	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2012	Holden	Cruze	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	Holden	Cruze	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2012	Holden	Cruze	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2012	Holden	Cruze	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2012	Holden	Cruze	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2012	Holden	Cruze	Passenger Presence Module	√	√	√	√		0322
2012	Holden	Cruze	Instrument Cluster	√	√	√	√	√	0301
2012	Holden	Cruze	Trailer Interface Control Module	√	√	√	√	√	0301
2012	Holden	Cruze	Radio	√	√	√	√	√	
2012	Holden	Cruze	Multimedia Player Interface Module	√	√	√	√		
2012	Holden	Cruze	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2012	Holden	Cruze	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2012	Holden	Cruze	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2012	Holden	Cruze	Front Seat Heating Control Module	√	√	√	√	√	
2012	Holden	Cruze	Keyless Entry Control Module	√	√	√	√	√	
2012	Holden	Cruze	Parking Assist Control Module	√	√	√	√	√	
2012	Holden	Cruze	Steering Column Lock Control Module	√	√	√	√		
2012	Cadillac	CTS	Fuel Pump Control Module	√	√	√	√	√	
2012	Cadillac	CTS	Engine Control Module	√	√	√	√	√	0493
2012	Cadillac	CTS	Transmission control module		√	√	√	√	
2012	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	0493
2012	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	0502
2012	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	
2012	Cadillac	CTS	Liftgate module	√	√	√	√	√	
2012	Cadillac	CTS	TV antenna module	√	√	√	√		0504 0505
2012	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2012	Cadillac	CTS	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Cadillac	CTS	Passenger presence system	√	√	√	√	√	
2012	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0500

2012	Cadillac	CTS	Body Control Module	√	√	√	√	√	0498
2012	Cadillac	CTS	Body Control Module	√	√	√	√	√	0499 0497
2012	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2012	Cadillac	CTS	Park assist module	√	√	√	√	√	
2012	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√	√	0501
2012	Cadillac	CTS	Driver door switch	√	√	√	√	√	
2012	Cadillac	CTS	Passenger door switch	√	√	√	√	√	
2012	Cadillac	CTS	Radio	√	√	√	√	√	0503
2012	Cadillac	CTS	Left side object detection module	√	√	√	√	√	
2012	Cadillac	CTS	Right side object detection module	√	√	√	√	√	0502
2012	Cadillac	CTS	Park Brake Control Module	√	√	√	√	√	
2012	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Cadillac	CTS	Electronic suspension control		√	√	√	√	
2012	Chevrolet	Aveo Classic	Engine Control Module	√	√	√	√	√	0507
2012	Chevrolet	Aveo Classic	Transmission control module	√	√	√	√	√	0493
2012	Chevrolet	Aveo Classic	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Chevrolet	Aveo Classic	Immobilizer						0508
2012	Chevrolet	Aveo Classic	Supplemental inflatable restraint	√	√	√	√	√	0494 0495 0496
2012	Chevrolet	Aveo Classic	Tire pressure monitor	√	√	√	√		0510 0511
2012	Chevrolet	Aveo Classic	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet	(1)Aveo	Transmission control module	√	√	√	√	√	
2012	Chevrolet	(1)Aveo	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet	(1)Aveo	Immobilizer						0508
2012	Chevrolet	(1)Aveo	Supplemental inflatable restraint	√	√	√	√	√	0508
2012	Chevrolet	(1)Aveo	Tire pressure monitor	√	√	√	√		0510 0511
2012	Chevrolet	(1)Aveo	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet	Chevrolet	Transmission control module	√	√	√	√	√	
2012	Chevrolet	Chevrolet	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet	Chevrolet	Immobilizer	√	√	√	√		0544 0545
2012	Chevrolet	Corvette	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet	Corvette	Transmission control module		√	√	√	√	
2012	Chevrolet	Corvette	Exhaust flow control module	√	√	√	√	√	0493
2012	Chevrolet	Corvette	Fuel Pump Control Module	√	√	√	√	√	0493
2012	Chevrolet	Corvette	CD changer	√	√	√	√		
2012	Chevrolet	Corvette	Digital radio receiver	√	√	√	√		0516
2012	Chevrolet	Corvette	Vehicle comm. interface module	√	√	√	√	√	0495
2012	Chevrolet	Corvette	Instrument panel cluster	√	√	√	√	√	
2012	Chevrolet	Corvette	Head up display	√	√	√	√	√	
2012	Chevrolet	Corvette	Passenger presence system		√	√			0517
2012	Chevrolet	Corvette	Supplemental inflatable restraint	√	√	√	√	√	0515
2012	Chevrolet	Corvette	Driver door switch	√	√	√	√		

2012	Chevrolet	Corvette	Driver door module	√	√	√	√	√	
2012	Chevrolet	Corvette	Passenger door module	√	√	√	√	√	
2012	Chevrolet	Corvette	Remote control door lock receiver	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2012	Chevrolet	Corvette	HVAC Control Module	√	√	√	√	√	0500 0523
2012	Chevrolet	Corvette	Steering column lock module	√	√	√	√	√	
2012	Chevrolet	Corvette	Body Control Module	√	√	√	√	√	0515
2012	Chevrolet	Corvette	Radio	√	√	√	√		0524 0525
2012	Chevrolet	Corvette	Driver position module	√	√	√	√	√	0522
2012	Chevrolet	Corvette	Folding top module	√	√	√	√	√	0546
2012	Chevrolet	Corvette	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet	Corvette	Electronic suspension control	√	√	√	√	√	
2012	Chevrolet	Impala	Transmission control module		√	√	√	√	
2012	Chevrolet	Impala	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet	Impala	Fuel Pump Control Module	√	√	√	√	√	0493
2012	Chevrolet	Impala	Digital radio receiver	√	√	√	√	√	
2012	Chevrolet	Impala	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Chevrolet	Impala	Instrument panel cluster	√	√	√	√	√	
2012	Chevrolet	Impala	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Chevrolet	Impala	Passenger presence system	√	√	√	√	√	
2012	Chevrolet	Impala	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Chevrolet	Impala	Theft Deterrent Module	√	√	√	√		
2012	Chevrolet	Impala	Body Control Module	√	√	√	√	√	0499 0497
2012	Chevrolet	Impala	Radio	√	√	√	√	√	
2012	Chevrolet	Impala	Heated seat module	√	√	√	√		
2012	Chevrolet	Impala	HVAC Control Module	√	√	√	√	√	0500
2012	Chevrolet	Impala	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet	(1)Malibu	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet	(1)Malibu	Transmission control module	√	√	√	√	√	0493
2012	Chevrolet	(1)Malibu	Digital radio receiver	√	√	√	√	√	
2012	Chevrolet	(1)Malibu	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	Chevrolet	(1)Malibu	Instrument panel cluster	√	√	√	√	√	0547
2012	Chevrolet	(1)Malibu	Supplemental inflatable restraint	√	√	√	√	√	0515
2012	Chevrolet	(1)Malibu	Passenger presence system		√	√			
2012	Chevrolet	(1)Malibu	Body Control Module	√	√	√	√	√	0500 0515 0548
2012	Chevrolet	(1)Malibu	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Chevrolet	(1)Malibu	Theft Deterrent Module	√	√	√	√		
2012	Chevrolet	(1)Malibu	HVAC Control Module	√	√	√	√	√	
2012	Chevrolet	(1)Malibu	Radio	√	√	√	√	√	0525
2012	Chevrolet	(1)Malibu	Personal audio link module	√	√	√			0528
2012	Chevrolet	(1)Malibu	Electronic Brake Control Module	√	√	√	√	√	0506

2012	Chevrolet	(1)Malibu	Power steering control module	√	√	√	√	√	0506
2012	Chevrolet	Matiz Classic	Transmission control module	√	√	√	√	√	
2012	Chevrolet	Matiz Classic	Engine Control Module	√	√	√	√	√	0507
2012	Chevrolet	Matiz Classic	Supplemental inflatable restraint	√	√	√	√		
2012	Chevrolet	Matiz Classic	Immobilizer						0508
2012	Chevrolet	Matiz Classic	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet	Optra	Engine Control Module	√	√	√	√	√	0509
2012	Chevrolet	Optra	Transmission control module	√	√	√	√	√	0509
2012	Chevrolet	Optra	Supplemental inflatable restraint	√	√	√	√	√	
2012	Chevrolet	Optra	Immobilizer						0508
2012	Chevrolet	Optra	Tire pressure monitor	√	√	√	√		0510 0511
2012	Chevrolet	Optra	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet	Matiz	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet	Matiz	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet	Matiz	Transmission control module	√	√	√	√	√	0493
2012	Chevrolet	Matiz	Instrument panel cluster	√	√	√	√	√	
2012	Chevrolet	Matiz	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Chevrolet	Matiz	Passenger presence system	√	√	√	√		0512
2012	Chevrolet	Matiz	HVAC Control Module	√	√	√	√	√	
2012	Chevrolet	Matiz	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Chevrolet	Matiz	Theft Deterrent Module	√	√	√	√		
2012	Chevrolet	Matiz	Body Control Module	√	√	√	√	√	0499 0497
2012	Chevrolet	Matiz	Radio	√	√	√	√	√	
2012	Chevrolet	Matiz	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet	Caprice Police	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet	Caprice Police	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet	Caprice Police	Transmission control module	√	√	√	√	√	0493
2012	Chevrolet	Caprice Police	Instrument panel cluster	√	√	√	√	√	
2012	Chevrolet	Caprice Police	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Chevrolet	Caprice Police	Passenger presence system	√	√	√	√		0512
2012	Chevrolet	Caprice Police	HVAC Control Module	√	√	√	√	√	
2012	Chevrolet	Caprice Police	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Chevrolet	Caprice Police	Theft Deterrent Module	√	√	√	√		
2012	Chevrolet	Caprice Police	Body Control Module	√	√	√	√	√	0499 0497
2012	Chevrolet	Caprice Police	Radio	√	√	√	√	√	
2012	Chevrolet	Caprice Police	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet	ark Classic	Transmission control module	√	√	√	√	√	
2012	Chevrolet	ark Classic	Engine Control Module	√	√	√	√	√	0507
2012	Chevrolet	ark Classic	Supplemental inflatable restraint	√	√	√	√		
2012	Chevrolet	ark Classic	Immobilizer						0508
2012	Chevrolet	ark Classic	Electronic Brake Control Module	√	√	√	√	√	0506

2012	Chevrolet	Others	Supplemental inflatable restraint	√	√	√	√	√	
2012	Chevrolet	Others	Immobilizer						0508
2012	Chevrolet	Others	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet	Others	Power steering control module	√	√	√	√	√	
2012	Chevrolet	Others	Tire pressure monitor	√	√	√	√	√	0510 0511
2012	Chevrolet	Others	Engine Control Module		√	√	√	√	0493
2012	Chevrolet	Others	Transmission control module	√	√	√	√	√	
2012	Holden	Others	Supplemental inflatable restraint	√	√	√	√	√	
2012	Holden	Others	Immobilizer						0508
2012	Holden	Others	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Holden	Others	Power steering control module	√	√	√	√	√	
2012	Holden	Others	Tire pressure monitor	√	√	√	√	√	0510 0511
2012	Holden	Others	Engine Control Module		√	√	√	√	0493
2012	Holden	Others	Transmission control module	√	√	√	√	√	
2012	Buick	Enclave - AWD	Engine Control Module	√	√	√	√	√	0493
2012	Buick	Enclave - AWD	Fuel Pump Control Module	√	√	√	√	√	
2012	Buick	Enclave - AWD	Transmission control module		√	√	√	√	
2012	Buick	Enclave - AWD	Digital radio receiver	√	√	√	√	√	
2012	Buick	Enclave - AWD	Headlamp Control Module	√	√	√			
2012	Buick	Enclave - AWD	Liftgate module	√	√	√	√	√	
2012	Buick	Enclave - AWD	Rear HVAC/RSA	√	√	√	√	√	
2012	Buick	Enclave - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	Buick	Enclave - AWD	Instrument panel cluster	√	√	√	√	√	
2012	Buick	Enclave - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Buick	Enclave - AWD	Passenger presence system	√	√	√	√	√	
2012	Buick	Enclave - AWD	Driver door switch	√	√	√	√	√	0527
2012	Buick	Enclave - AWD	Passenger door switch	√	√	√	√	√	0527
2012	Buick	Enclave - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Buick	Enclave - AWD	Theft Deterrent Module	√	√	√	√		
2012	Buick	Enclave - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Buick	Enclave - AWD	Body Control Module	√	√	√	√	√	0499 0497
2012	Buick	Enclave - AWD	Radio	√	√	√	√	√	
2012	Buick	Enclave - AWD	Personal audio link module	√	√	√			0528 0529
2012	Buick	Enclave - AWD	Memory seat module	√	√	√	√	√	
2012	Buick	Enclave - AWD	Park assist module	√	√	√	√		
2012	Buick	Enclave - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Buick	Enclave - AWD	Rear drive system	√	√	√	√	√	0530
2012	Buick	Enclave - FWD	Engine Control Module	√	√	√	√	√	0493
2012	Buick	Enclave - FWD	Fuel Pump Control Module	√	√	√	√	√	
2012	Buick	Enclave - FWD	Transmission control module		√	√	√	√	
2012	Buick	Enclave - FWD	Digital radio receiver	√	√	√	√	√	

2012	Buick	Enclave - FWD	Headlamp Control Module	√	√	√			
2012	Buick	Enclave - FWD	Liftgate module	√	√	√	√	√	
2012	Buick	Enclave - FWD	Rear HVAC/RSA	√	√	√	√	√	
2012	Buick	Enclave - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	Buick	Enclave - FWD	Instrument panel cluster	√	√	√	√	√	
2012	Buick	Enclave - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Buick	Enclave - FWD	Passenger presence system	√	√	√	√	√	
2012	Buick	Enclave - FWD	Driver door switch	√	√	√	√	√	0527
2012	Buick	Enclave - FWD	Passenger door switch	√	√	√	√	√	0527
2012	Buick	Enclave - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Buick	Enclave - FWD	Theft Deterrent Module	√	√	√	√		
2012	Buick	Enclave - FWD	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Buick	Enclave - FWD	Body Control Module	√	√	√	√	√	0499 0497
2012	Buick	Enclave - FWD	Radio	√	√	√	√	√	
2012	Buick	Enclave - FWD	Personal audio link module	√	√	√			0528 0529
2012	Buick	Enclave - FWD	Memory seat module	√	√	√	√	√	
2012	Buick	Enclave - FWD	Park assist module	√	√	√	√		
2012	Buick	Enclave - FWD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Buick	Enclave - FWD	Rear drive system	√	√	√	√	√	0530
2012	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2012	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	
2012	Cadillac	Escalade	Transmission control module	√	√	√	√	√	0493
2012	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2012	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2012	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2012	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2012	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2012	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2012	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2012	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2012	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2012	Cadillac	Escalade	Inside rear view mirror module	√	√	√	√	√	
2012	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2012	Cadillac	Escalade	Park assist module	√	√	√	√		
2012	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2012	Cadillac	Escalade	Right side object detection module	√	√	√	√		
2012	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0499 0497

2012	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2012	Cadillac	Escalade	Personal audio link module	√	√	√			0528
2012	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2012	Cadillac	Escalade	Radio	√	√	√	√	√	
2012	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	
2012	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Cadillac	Escalade	Electronic suension control	√	√	√	√	√	0532
2012	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2012	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	
2012	Cadillac	Escalade	Transmission control module		√	√	√	√	
2012	Cadillac	Escalade	Accessory power module	√	√	√	√	√	
2012	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2012	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2012	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2012	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2012	Cadillac	Escalade	A/C compressor control module	√	√	√	√		
2012	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2012	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2012	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2012	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2012	Cadillac	Escalade	Inside rear view mirror module	√	√	√			
2012	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2012	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2012	Cadillac	Escalade	Park assist module	√	√	√	√		
2012	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2012	Cadillac	Escalade	Right side object detection module	√	√	√	√		
2012	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0499 0497
2012	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2012	Cadillac	Escalade	Serial Data Gateway Module	√	√	√	√	√	
2012	Cadillac	Escalade	Personal audio link module	√	√	√			0528
2012	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2012	Cadillac	Escalade	Radio	√	√	√	√	√	
2012	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	
2012	Cadillac	Escalade	Electronic suension control	√	√	√	√	√	0532
2012	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2012	Cadillac	Escalade	Power steering control module	√	√	√	√	√	0536
2012	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493

2012	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	
2012	Cadillac	Escalade	Transmission control module	√	√	√	√	√	0493
2012	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2012	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2012	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2012	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2012	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2012	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2012	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2012	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2012	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2012	Cadillac	Escalade	Inside rear view mirror module	√	√	√	√	√	
2012	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2012	Cadillac	Escalade	Park assist module	√	√	√	√		
2012	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2012	Cadillac	Escalade	Right side object detection module	√	√	√	√		
2012	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0499 0497
2012	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2012	Cadillac	Escalade	Personal audio link module	√	√	√			0528
2012	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2012	Cadillac	Escalade	Radio	√	√	√	√	√	
2012	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	
2012	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Cadillac	Escalade	Electronic suspension control	√	√	√	√	√	0532
2012	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2012	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	
2012	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	
2012	Cadillac	Escalade	Transmission control module		√	√	√	√	
2012	Cadillac	Escalade	Accessory power module	√	√	√	√	√	
2012	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2012	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2012	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2012	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2012	Cadillac	Escalade	A/C compressor control module	√	√	√	√		
2012	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Cadillac	Escalade	Passenger presence system	√	√	√	√		



2012	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2012	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2012	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2012	Cadillac	Escalade	Inside rear view mirror module	√	√	√			
2012	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2012	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2012	Cadillac	Escalade	Park assist module	√	√	√	√		
2012	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2012	Cadillac	Escalade	Right side object detection module	√	√	√	√		
2012	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0499 0497
2012	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2012	Cadillac	Escalade	Serial Data Gateway Module	√	√	√	√	√	
2012	Cadillac	Escalade	Personal audio link module	√	√	√			0528
2012	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2012	Cadillac	Escalade	Radio	√	√	√	√	√	
2012	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	
2012	Cadillac	Escalade	Electronic suspension control	√	√	√	√	√	0532
2012	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2012	Cadillac	Escalade	Power steering control module	√	√	√	√	√	0536
2012	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2012	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Transmission control module	√	√	√	√	√	0493
2012	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	

2012	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0499 0497
2012	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2012	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528
2012	Cadillac	Escalade Hybrid	Assist step controller	√	√	√	√	√	0531
2012	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Cadillac	Escalade Hybrid	Electronic suension control	√	√	√	√	√	0532
2012	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2012	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Transmission control module		√	√	√	√	
2012	Cadillac	Escalade Hybrid	Accessory power module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	A/C compressor control module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√			
2012	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0499 0497
2012	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2012	Cadillac	Escalade Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528
2012	Cadillac	Escalade Hybrid	Assist step controller	√	√	√	√	√	0531
2012	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Electronic suension control	√	√	√	√	√	0532
2012	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535

2012	Cadillac	Escalade Hybrid	Power steering control module	√	√	√	√	√	0536
2012	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2012	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Transmission control module	√	√	√	√	√	0493
2012	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0499 0497
2012	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2012	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528
2012	Cadillac	Escalade Hybrid	Assist step controller	√	√	√	√	√	0531
2012	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Cadillac	Escalade Hybrid	Electronic suspension control	√	√	√	√	√	0532
2012	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2012	Cadillac	Escalade Hybrid	Transfer Case Control Module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Transmission control module		√	√	√	√	
2012	Cadillac	Escalade Hybrid	Accessory power module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	A/C compressor control module	√	√	√	√		

2012	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√			
2012	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		
2012	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0499 0497
2012	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2012	Cadillac	Escalade Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528
2012	Cadillac	Escalade Hybrid	Assist step controller	√	√	√	√	√	0531
2012	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	
2012	Cadillac	Escalade Hybrid	Electronic suension control	√	√	√	√	√	0532
2012	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2012	Cadillac	Escalade Hybrid	Power steering control module	√	√	√	√	√	0536
2012	Chevrolet truck	Avalanche - 2WD	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Avalanche - 2WD	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Avalanche - 2WD	Transmission control module	√	√	√	√	√	0493
2012	Chevrolet truck	Avalanche - 2WD	FPCM with trailer brake control	√	√	√	√	√	
2012	Chevrolet truck	Avalanche - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Avalanche - 2WD	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Avalanche - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Avalanche - 2WD	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Avalanche - 2WD	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Avalanche - 2WD	Transmission control module	√	√	√	√	√	0493
2012	Chevrolet truck	Avalanche - 2WD	FPCM with trailer brake control	√	√	√	√	√	
2012	Chevrolet truck	Avalanche - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Avalanche - 2WD	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Avalanche - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Avalanche - 4WD	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Avalanche - 4WD	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Avalanche - 4WD	Transmission control module	√	√	√	√	√	0493
2012	Chevrolet truck	Avalanche - 4WD	FPCM with trailer brake control	√	√	√	√	√	

2012	Chevrolet truck	Avalanche - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Avalanche - 4WD	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Avalanche - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Avalanche - 4WD	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Avalanche - 4WD	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Avalanche - 4WD	Transmission control module	√	√	√	√	√	0493
2012	Chevrolet truck	Avalanche - 4WD	FPCM with trailer brake control	√	√	√	√	√	
2012	Chevrolet truck	Avalanche - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Avalanche - 4WD	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Avalanche - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	N200	Engine Control Module	√	√	√	√	√	0507
2012	Chevrolet truck	N200	Supplemental inflatable restraint	√	√	√	√		
2012	Chevrolet truck	N200	Electronic Brake Control Module		√	√	√	√	0506
2012	Chevrolet truck	N300	Engine Control Module	√	√	√	√	√	0507
2012	Chevrolet truck	N300	Supplemental inflatable restraint	√	√	√	√		
2012	Chevrolet truck	N300	Electronic Brake Control Module		√	√	√	√	0506
2012	Chevrolet truck	Captiva ort(VIN L)	Transmission control module		√	√	√	√	
2012	Chevrolet truck	Captiva ort(VIN L)	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Captiva ort(VIN L)	Fuel Pump Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Captiva ort(VIN L)	Rear drive system	√	√	√	√	√	0530
2012	Chevrolet truck	Captiva ort(VIN L)	Instrument panel cluster	√	√	√	√	√	
2012	Chevrolet truck	Captiva ort(VIN L)	Passenger presence system	√	√	√	√		0537
2012	Chevrolet truck	Captiva ort(VIN L)	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Chevrolet truck	Captiva ort(VIN L)	Digital radio receiver	√	√	√	√	√	
2012	Chevrolet truck	Captiva ort(VIN L)	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	Chevrolet truck	Captiva ort(VIN L)	HVAC Control Module	√	√	√	√	√	0500
2012	Chevrolet truck	Captiva ort(VIN L)	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Chevrolet truck	Captiva ort(VIN L)	Theft Deterrent Module	√	√	√	√		
2012	Chevrolet truck	Captiva ort(VIN L)	Body Control Module	√	√	√	√	√	0499 0497
2012	Chevrolet truck	Captiva ort(VIN L)	Radio	√	√	√	√	√	
2012	Chevrolet truck	Captiva ort(VIN L)	Electronic Brake Control Module	√	√	√	√	√	
2012	Chevrolet truck	Captiva ort(VIN L)	Park Brake Control Module	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 2WD	Transmission control module		√	√	√	√	
2012	Chevrolet truck	Cheyenne - 2WD	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Cheyenne - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Cheyenne - 2WD	Amplifier (bose)	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 2WD	Digital radio receiver	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Chevrolet truck	Cheyenne - 2WD	Instrument panel cluster	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497

2012	Chevrolet truck	Cheyenne - 2WD	Passenger presence system	√	√	√	√		
2012	Chevrolet truck	Cheyenne - 2WD	Driver door switch	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 2WD	Passenger door switch	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Chevrolet truck	Cheyenne - 2WD	Theft Deterrent Module	√	√	√	√		
2012	Chevrolet truck	Cheyenne - 2WD	Rear heated seat module	√	√	√	√		
2012	Chevrolet truck	Cheyenne - 2WD	Park assist module	√	√	√	√		
2012	Chevrolet truck	Cheyenne - 2WD	Body Control Module	√	√	√	√	√	0499 0497
2012	Chevrolet truck	Cheyenne - 2WD	Body Control Module	√	√	√	√	√	0498
2012	Chevrolet truck	Cheyenne - 2WD	Personal audio link module	√	√	√			0528
2012	Chevrolet truck	Cheyenne - 2WD	Trailer brake control module	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 2WD	Electronic suspension control	√	√	√	√	√	0532
2012	Chevrolet truck	Cheyenne - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Cheyenne - 2WD	FPCM with trailer brake control	√	√	√	√	√	0532
2012	Chevrolet truck	Cheyenne - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Cheyenne - 2WD	Transmission control module		√	√	√	√	
2012	Chevrolet truck	Cheyenne - 2WD	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Cheyenne - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Cheyenne - 2WD	Amplifier (bose)	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 2WD	Digital radio receiver	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Chevrolet truck	Cheyenne - 2WD	Instrument panel cluster	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Chevrolet truck	Cheyenne - 2WD	Passenger presence system	√	√	√	√		
2012	Chevrolet truck	Cheyenne - 2WD	Driver door switch	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 2WD	Passenger door switch	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Chevrolet truck	Cheyenne - 2WD	Theft Deterrent Module	√	√	√	√		
2012	Chevrolet truck	Cheyenne - 2WD	Rear heated seat module	√	√	√	√		
2012	Chevrolet truck	Cheyenne - 2WD	Park assist module	√	√	√	√		
2012	Chevrolet truck	Cheyenne - 2WD	Body Control Module	√	√	√	√	√	0499 0497
2012	Chevrolet truck	Cheyenne - 2WD	Body Control Module	√	√	√	√	√	0498
2012	Chevrolet truck	Cheyenne - 2WD	Personal audio link module	√	√	√			0528
2012	Chevrolet truck	Cheyenne - 2WD	Trailer brake control module	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 2WD	Electronic suspension control	√	√	√	√	√	0532
2012	Chevrolet truck	Cheyenne - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Cheyenne - 2WD	FPCM with trailer brake control	√	√	√	√	√	0532
2012	Chevrolet truck	Cheyenne - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Cheyenne - 4WD	Transmission control module		√	√	√	√	
2012	Chevrolet truck	Cheyenne - 4WD	Engine Control Module	√	√	√	√	√	0493

2012	Chevrolet truck	Cheyenne - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Cheyenne - 4WD	Amplifier (bose)	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 4WD	Digital radio receiver	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Chevrolet truck	Cheyenne - 4WD	Instrument panel cluster	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Chevrolet truck	Cheyenne - 4WD	Passenger presence system	√	√	√	√		
2012	Chevrolet truck	Cheyenne - 4WD	Driver door switch	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 4WD	Passenger door switch	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Chevrolet truck	Cheyenne - 4WD	Theft Deterrent Module	√	√	√	√		
2012	Chevrolet truck	Cheyenne - 4WD	Rear heated seat module	√	√	√	√		
2012	Chevrolet truck	Cheyenne - 4WD	Park assist module	√	√	√	√		
2012	Chevrolet truck	Cheyenne - 4WD	Body Control Module	√	√	√	√	√	0499 0497
2012	Chevrolet truck	Cheyenne - 4WD	Body Control Module	√	√	√	√	√	0498
2012	Chevrolet truck	Cheyenne - 4WD	Personal audio link module	√	√	√			0528
2012	Chevrolet truck	Cheyenne - 4WD	Trailer brake control module	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 4WD	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Cheyenne - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Cheyenne - 4WD	FPCM with trailer brake control	√	√	√	√	√	0532
2012	Chevrolet truck	Cheyenne - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Cheyenne - 4WD	Transmission control module		√	√	√	√	
2012	Chevrolet truck	Cheyenne - 4WD	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Cheyenne - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Cheyenne - 4WD	Amplifier (bose)	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 4WD	Digital radio receiver	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2012	Chevrolet truck	Cheyenne - 4WD	Instrument panel cluster	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Chevrolet truck	Cheyenne - 4WD	Passenger presence system	√	√	√	√		
2012	Chevrolet truck	Cheyenne - 4WD	Driver door switch	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 4WD	Passenger door switch	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Chevrolet truck	Cheyenne - 4WD	Theft Deterrent Module	√	√	√	√		
2012	Chevrolet truck	Cheyenne - 4WD	Rear heated seat module	√	√	√	√		
2012	Chevrolet truck	Cheyenne - 4WD	Park assist module	√	√	√	√		
2012	Chevrolet truck	Cheyenne - 4WD	Body Control Module	√	√	√	√	√	0499 0497
2012	Chevrolet truck	Cheyenne - 4WD	Body Control Module	√	√	√	√	√	0498
2012	Chevrolet truck	Cheyenne - 4WD	Personal audio link module	√	√	√			0528



2012	Chevrolet truck	Cheyenne - 4WD	Trailer brake control module	√	√	√	√	√	
2012	Chevrolet truck	Cheyenne - 4WD	Electronic suspension control	√	√	√	√	√	0532
2012	Chevrolet truck	Cheyenne - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Cheyenne - 4WD	FPCM with trailer brake control	√	√	√	√	√	0532
2012	Chevrolet truck	Cheyenne - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Colorado Pickup - 2WD	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Colorado Pickup - 2WD	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Colorado Pickup - 2WD	Transmission control module	√	√	√	√	√	0493
2012	Chevrolet truck	Colorado Pickup - 2WD	Digital radio receiver	√	√	√	√	√	0516
2012	Chevrolet truck	Colorado Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0495
2012	Chevrolet truck	Colorado Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2012	Chevrolet truck	Colorado Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2012	Chevrolet truck	Colorado Pickup - 2WD	Passenger presence system		√	√			0517
2012	Chevrolet truck	Colorado Pickup - 2WD	Theft Deterrent Module	√	√	√	√		0170
2012	Chevrolet truck	Colorado Pickup - 2WD	Generator battery control module	√	√	√	√	√	
2012	Chevrolet truck	Colorado Pickup - 2WD	Personal audio link module	√	√	√			0528
2012	Chevrolet truck	Colorado Pickup - 2WD	Radio	√	√	√	√		
2012	Chevrolet truck	Colorado Pickup - 2WD	Body Control Module	√	√	√	√	√	0550 0159
2012	Chevrolet truck	Colorado Pickup - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Colorado Pickup - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Colorado Pickup - 4WD	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Colorado Pickup - 4WD	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Colorado Pickup - 4WD	Transmission control module	√	√	√	√	√	0493
2012	Chevrolet truck	Colorado Pickup - 4WD	Digital radio receiver	√	√	√	√	√	0516
2012	Chevrolet truck	Colorado Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0495
2012	Chevrolet truck	Colorado Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2012	Chevrolet truck	Colorado Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2012	Chevrolet truck	Colorado Pickup - 4WD	Passenger presence system		√	√			0517
2012	Chevrolet truck	Colorado Pickup - 4WD	Theft Deterrent Module	√	√	√	√		0170
2012	Chevrolet truck	Colorado Pickup - 4WD	Generator battery control module	√	√	√	√	√	
2012	Chevrolet truck	Colorado Pickup - 4WD	Personal audio link module	√	√	√			0528
2012	Chevrolet truck	Colorado Pickup - 4WD	Radio	√	√	√	√		
2012	Chevrolet truck	Colorado Pickup - 4WD	Body Control Module	√	√	√	√	√	0550 0159
2012	Chevrolet truck	Colorado Pickup - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Colorado Pickup - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Express	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Express	Transmission control module	√	√	√	√	√	0493
2012	Chevrolet truck	Express	Fuel Pump Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Express	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2012	Chevrolet truck	Express	Digital radio receiver	√	√	√	√	√	
2012	Chevrolet truck	Express	Vehicle comm. interface module	√	√	√	√	√	0494 0495



2012	Chevrolet truck	Express	Instrument panel cluster	√	√	√	√	√	
2012	Chevrolet truck	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Chevrolet truck	Express	Passenger presence system	√	√	√	√		0517
2012	Chevrolet truck	Express	Rollover sensor	√	√	√	√		0541
2012	Chevrolet truck	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Chevrolet truck	Express	Theft Deterrent Module	√	√	√	√		
2012	Chevrolet truck	Express	Body Control Module	√	√	√	√	√	0499 0497
2012	Chevrolet truck	Express	Radio	√	√	√	√	√	
2012	Chevrolet truck	Express	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Express	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Express	Transmission control module	√	√	√	√	√	0493
2012	Chevrolet truck	Express	Fuel Pump Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Express	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2012	Chevrolet truck	Express	Digital radio receiver	√	√	√	√	√	
2012	Chevrolet truck	Express	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	Chevrolet truck	Express	Instrument panel cluster	√	√	√	√	√	
2012	Chevrolet truck	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Chevrolet truck	Express	Passenger presence system	√	√	√	√		0517
2012	Chevrolet truck	Express	Rollover sensor	√	√	√	√		0541
2012	Chevrolet truck	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Chevrolet truck	Express	Theft Deterrent Module	√	√	√	√		
2012	Chevrolet truck	Express	Body Control Module	√	√	√	√	√	0499 0497
2012	Chevrolet truck	Express	Radio	√	√	√	√	√	
2012	Chevrolet truck	Express	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Express	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Express	Transmission control module	√	√	√	√	√	0493
2012	Chevrolet truck	Express	Fuel Pump Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Express	Digital radio receiver	√	√	√	√	√	
2012	Chevrolet truck	Express	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	Chevrolet truck	Express	Instrument panel cluster	√	√	√	√	√	
2012	Chevrolet truck	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Chevrolet truck	Express	Passenger presence system	√	√	√	√		0517
2012	Chevrolet truck	Express	Rollover sensor	√	√	√	√		0541
2012	Chevrolet truck	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Chevrolet truck	Express	Theft Deterrent Module	√	√	√	√		
2012	Chevrolet truck	Express	Body Control Module	√	√	√	√	√	0499 0497
2012	Chevrolet truck	Express	Radio	√	√	√	√	√	
2012	Chevrolet truck	Express	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Express	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Express	Transmission control module	√	√	√	√	√	0493
2012	Chevrolet truck	Express	Fuel Pump Control Module	√	√	√	√	√	0493

2012	Chevrolet truck	Express	Digital radio receiver	√	√	√	√	√	
2012	Chevrolet truck	Express	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	Chevrolet truck	Express	Instrument panel cluster	√	√	√	√	√	
2012	Chevrolet truck	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Chevrolet truck	Express	Passenger presence system	√	√	√	√		0517
2012	Chevrolet truck	Express	Rollover sensor	√	√	√	√		0541
2012	Chevrolet truck	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Chevrolet truck	Express	Theft Deterrent Module	√	√	√	√		
2012	Chevrolet truck	Express	Body Control Module	√	√	√	√	√	0499 0497
2012	Chevrolet truck	Express	Radio	√	√	√	√	√	
2012	Chevrolet truck	Express	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Silverado	Transmission control module		√	√	√	√	
2012	Chevrolet truck	Silverado	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Silverado	Fuel Pump Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Silverado	Trailer brake control module	√	√	√	√	√	
2012	Chevrolet truck	Silverado	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Silverado	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Silverado	FPCM with trailer brake control	√	√	√	√	√	0532
2012	Chevrolet truck	Silverado	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Silverado	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Silverado	Transmission control module		√	√	√	√	
2012	Chevrolet truck	Silverado	Accessory power module	√	√	√	√	√	
2012	Chevrolet truck	Silverado	FPCM with trailer brake control	√	√	√	√	√	
2012	Chevrolet truck	Silverado	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Silverado	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2012	Chevrolet truck	Silverado	Power steering control module	√	√	√	√	√	0536
2012	Chevrolet truck	Silverado	Transmission control module		√	√	√	√	
2012	Chevrolet truck	Silverado	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Silverado	Transfer Case Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Silverado	Fuel Pump Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Silverado	Trailer brake control module	√	√	√	√	√	
2012	Chevrolet truck	Silverado	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Silverado	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Silverado	FPCM with trailer brake control	√	√	√	√	√	0532
2012	Chevrolet truck	Silverado	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Silverado	Transfer Case Control Module	√	√	√	√	√	
2012	Chevrolet truck	Silverado	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Silverado	Transmission control module		√	√	√	√	
2012	Chevrolet truck	Silverado	Accessory power module	√	√	√	√	√	
2012	Chevrolet truck	Silverado	FPCM with trailer brake control	√	√	√	√	√	
2012	Chevrolet truck	Silverado	Electronic suension control	√	√	√	√	√	0532

2012	Chevrolet truck	Silverado	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2012	Chevrolet truck	Silverado	Power steering control module	√	√	√	√	√	0536
2012	Chevrolet truck	Silverado Hybrid	Transmission control module		√	√	√	√	
2012	Chevrolet truck	Silverado Hybrid	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Silverado Hybrid	Fuel Pump Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Silverado Hybrid	Trailer brake control module	√	√	√	√	√	
2012	Chevrolet truck	Silverado Hybrid	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Silverado Hybrid	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Silverado Hybrid	FPCM with trailer brake control	√	√	√	√	√	0532
2012	Chevrolet truck	Silverado Hybrid	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Silverado Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Silverado Hybrid	Transmission control module		√	√	√	√	
2012	Chevrolet truck	Silverado Hybrid	Accessory power module	√	√	√	√	√	
2012	Chevrolet truck	Silverado Hybrid	FPCM with trailer brake control	√	√	√	√	√	
2012	Chevrolet truck	Silverado Hybrid	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Silverado Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2012	Chevrolet truck	Silverado Hybrid	Power steering control module	√	√	√	√	√	0536
2012	Chevrolet truck	Silverado Hybrid	Transmission control module		√	√	√	√	
2012	Chevrolet truck	Silverado Hybrid	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Silverado Hybrid	Transfer Case Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Silverado Hybrid	Fuel Pump Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Silverado Hybrid	Trailer brake control module	√	√	√	√	√	
2012	Chevrolet truck	Silverado Hybrid	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Silverado Hybrid	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Silverado Hybrid	FPCM with trailer brake control	√	√	√	√	√	0532
2012	Chevrolet truck	Silverado Hybrid	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Silverado Hybrid	Transfer Case Control Module	√	√	√	√	√	
2012	Chevrolet truck	Silverado Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Silverado Hybrid	Transmission control module		√	√	√	√	
2012	Chevrolet truck	Silverado Hybrid	Accessory power module	√	√	√	√	√	
2012	Chevrolet truck	Silverado Hybrid	FPCM with trailer brake control	√	√	√	√	√	
2012	Chevrolet truck	Silverado Hybrid	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Silverado Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2012	Chevrolet truck	Silverado Hybrid	Power steering control module	√	√	√	√	√	0536
2012	Chevrolet truck	Suburban - 2WD	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Suburban - 2WD	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Suburban - 2WD	Transmission control module	√	√	√	√	√	0493
2012	Chevrolet truck	Suburban - 2WD	FPCM with trailer brake control	√	√	√	√	√	
2012	Chevrolet truck	Suburban - 2WD	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Suburban - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Suburban - 2WD	Trailer brake control module	√	√	√	√	√	0532

2012	Chevrolet truck	Suburban - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Suburban - 2WD	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Suburban - 2WD	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Suburban - 2WD	Transmission control module	√	√	√	√	√	0493
2012	Chevrolet truck	Suburban - 2WD	FPCM with trailer brake control	√	√	√	√	√	
2012	Chevrolet truck	Suburban - 2WD	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Suburban - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Suburban - 2WD	Trailer brake control module	√	√	√	√	√	0532
2012	Chevrolet truck	Suburban - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Suburban - 4WD	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Suburban - 4WD	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Suburban - 4WD	Transmission control module	√	√	√	√	√	0493
2012	Chevrolet truck	Suburban - 4WD	FPCM with trailer brake control	√	√	√	√	√	
2012	Chevrolet truck	Suburban - 4WD	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Suburban - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Suburban - 4WD	Trailer brake control module	√	√	√	√	√	0532
2012	Chevrolet truck	Suburban - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Suburban - 4WD	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Suburban - 4WD	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Suburban - 4WD	Transmission control module	√	√	√	√	√	0493
2012	Chevrolet truck	Suburban - 4WD	FPCM with trailer brake control	√	√	√	√	√	
2012	Chevrolet truck	Suburban - 4WD	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Suburban - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Suburban - 4WD	Trailer brake control module	√	√	√	√	√	0532
2012	Chevrolet truck	Suburban - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Tahoe	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Tahoe	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Tahoe	Transmission control module		√	√	√	√	
2012	Chevrolet truck	Tahoe	FPCM with trailer brake control	√	√	√	√	√	
2012	Chevrolet truck	Tahoe	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Tahoe	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Tahoe	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Tahoe	Transmission control module		√	√	√	√	
2012	Chevrolet truck	Tahoe	Accessory power module	√	√	√	√	√	
2012	Chevrolet truck	Tahoe	FPCM with trailer brake control	√	√	√	√	√	
2012	Chevrolet truck	Tahoe	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2012	Chevrolet truck	Tahoe	Power steering control module	√	√	√	√	√	0536
2012	Chevrolet truck	Tahoe	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Tahoe	Transfer Case Control Module	√	√	√	√	√	

2012	Chevrolet truck	Tahoe	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Tahoe	Transmission control module	√	√	√	√	√	0493
2012	Chevrolet truck	Tahoe	FPCM with trailer brake control	√	√	√	√	√	
2012	Chevrolet truck	Tahoe	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Tahoe	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Tahoe	Transfer Case Control Module	√	√	√	√	√	
2012	Chevrolet truck	Tahoe	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Tahoe	Transmission control module		√	√	√	√	
2012	Chevrolet truck	Tahoe	Accessory power module	√	√	√	√	√	
2012	Chevrolet truck	Tahoe	FPCM with trailer brake control	√	√	√	√	√	
2012	Chevrolet truck	Tahoe	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2012	Chevrolet truck	Tahoe	Power steering control module	√	√	√	√	√	0536
2012	Chevrolet truck	Tahoe hybrid	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Tahoe hybrid	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Tahoe hybrid	Transmission control module		√	√	√	√	
2012	Chevrolet truck	Tahoe hybrid	FPCM with trailer brake control	√	√	√	√	√	
2012	Chevrolet truck	Tahoe hybrid	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Tahoe hybrid	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Tahoe hybrid	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Tahoe hybrid	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Tahoe hybrid	Transmission control module		√	√	√	√	
2012	Chevrolet truck	Tahoe hybrid	Accessory power module	√	√	√	√	√	
2012	Chevrolet truck	Tahoe hybrid	FPCM with trailer brake control	√	√	√	√	√	
2012	Chevrolet truck	Tahoe hybrid	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Tahoe hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2012	Chevrolet truck	Tahoe hybrid	Power steering control module	√	√	√	√	√	0536
2012	Chevrolet truck	Tahoe hybrid	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Tahoe hybrid	Transfer Case Control Module	√	√	√	√	√	
2012	Chevrolet truck	Tahoe hybrid	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Tahoe hybrid	Transmission control module	√	√	√	√	√	0493
2012	Chevrolet truck	Tahoe hybrid	FPCM with trailer brake control	√	√	√	√	√	
2012	Chevrolet truck	Tahoe hybrid	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Tahoe hybrid	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Tahoe hybrid	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Tahoe hybrid	Transfer Case Control Module	√	√	√	√	√	
2012	Chevrolet truck	Tahoe hybrid	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Tahoe hybrid	Transmission control module		√	√	√	√	
2012	Chevrolet truck	Tahoe hybrid	Accessory power module		√	√	√	√	
2012	Chevrolet truck	Tahoe hybrid	FPCM with trailer brake control	√	√	√	√	√	

2012	Chevrolet truck	Tahoe hybrid	Electronic suension control	√	√	√	√	√	0532
2012	Chevrolet truck	Tahoe hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2012	Chevrolet truck	Tahoe hybrid	Power steering control module	√	√	√	√	√	0536
2012	Chevrolet truck	Traverse - AWD	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Traverse - AWD	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Traverse - AWD	Transmission control module		√	√	√	√	
2012	Chevrolet truck	Traverse - AWD	Digital radio receiver	√	√	√	√	√	
2012	Chevrolet truck	Traverse - AWD	Liftgate module	√	√	√	√	√	
2012	Chevrolet truck	Traverse - AWD	Rear HVAC/RSA	√	√	√	√	√	
2012	Chevrolet truck	Traverse - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	Chevrolet truck	Traverse - AWD	Instrument panel cluster	√	√	√	√	√	
2012	Chevrolet truck	Traverse - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Chevrolet truck	Traverse - AWD	Passenger presence system	√	√	√	√	√	
2012	Chevrolet truck	Traverse - AWD	Driver door switch	√	√	√	√	√	0527
2012	Chevrolet truck	Traverse - AWD	Passenger door switch	√	√	√	√	√	0527
2012	Chevrolet truck	Traverse - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Chevrolet truck	Traverse - AWD	Theft Deterrent Module	√	√	√	√		
2012	Chevrolet truck	Traverse - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Chevrolet truck	Traverse - AWD	Body Control Module	√	√	√	√	√	0499 0497
2012	Chevrolet truck	Traverse - AWD	Radio	√	√	√	√	√	
2012	Chevrolet truck	Traverse - AWD	Personal audio link module	√	√	√			0528 0529
2012	Chevrolet truck	Traverse - AWD	Memory seat module	√	√	√	√	√	
2012	Chevrolet truck	Traverse - AWD	Park assist module	√	√	√	√	√	0494 0495
2012	Chevrolet truck	Traverse - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Traverse - AWD	Rear drive system	√	√	√	√	√	0530
2012	Chevrolet truck	Traverse - FWD	Engine Control Module	√	√	√	√	√	0493
2012	Chevrolet truck	Traverse - FWD	Fuel Pump Control Module	√	√	√	√	√	
2012	Chevrolet truck	Traverse - FWD	Transmission control module		√	√	√	√	
2012	Chevrolet truck	Traverse - FWD	Digital radio receiver	√	√	√	√	√	
2012	Chevrolet truck	Traverse - FWD	Liftgate module	√	√	√	√	√	
2012	Chevrolet truck	Traverse - FWD	Rear HVAC/RSA	√	√	√	√	√	
2012	Chevrolet truck	Traverse - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	Chevrolet truck	Traverse - FWD	Instrument panel cluster	√	√	√	√	√	
2012	Chevrolet truck	Traverse - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	Chevrolet truck	Traverse - FWD	Passenger presence system	√	√	√	√	√	
2012	Chevrolet truck	Traverse - FWD	Driver door switch	√	√	√	√	√	0527
2012	Chevrolet truck	Traverse - FWD	Passenger door switch	√	√	√	√	√	0527
2012	Chevrolet truck	Traverse - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	Chevrolet truck	Traverse - FWD	Theft Deterrent Module	√	√	√	√		
2012	Chevrolet truck	Traverse - FWD	HVAC Control Module	√	√	√	√	√	0500 0526
2012	Chevrolet truck	Traverse - FWD	Body Control Module	√	√	√	√	√	0499 0497

2012	Chevrolet truck	Traverse - FWD	Radio	√	√	√	√	√	
2012	Chevrolet truck	Traverse - FWD	Personal audio link module	√	√	√			0528 0529
2012	Chevrolet truck	Traverse - FWD	Memory seat module	√	√	√	√	√	
2012	Chevrolet truck	Traverse - FWD	Park assist module	√	√	√	√	√	0494 0495
2012	Chevrolet truck	Traverse - FWD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	Chevrolet truck	Traverse - FWD	Rear drive system	√	√	√	√	√	0530
2012	GMC truck	Acadia - 2WD	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Acadia - 2WD	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Acadia - 2WD	Transmission control module		√	√	√	√	
2012	GMC truck	Acadia - 2WD	Digital radio receiver	√	√	√	√	√	
2012	GMC truck	Acadia - 2WD	Liftgate module	√	√	√	√	√	
2012	GMC truck	Acadia - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2012	GMC truck	Acadia - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	GMC truck	Acadia - 2WD	Head up dilay	√	√	√	√		
2012	GMC truck	Acadia - 2WD	Instrument panel cluster	√	√	√	√	√	
2012	GMC truck	Acadia - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	GMC truck	Acadia - 2WD	Passenger presence system	√	√	√	√	√	
2012	GMC truck	Acadia - 2WD	Driver door switch	√	√	√	√	√	0527
2012	GMC truck	Acadia - 2WD	Passenger door switch	√	√	√	√	√	0527
2012	GMC truck	Acadia - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	GMC truck	Acadia - 2WD	Theft Deterrent Module	√	√	√	√		
2012	GMC truck	Acadia - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2012	GMC truck	Acadia - 2WD	Body Control Module	√	√	√	√	√	0499 0497
2012	GMC truck	Acadia - 2WD	Radio	√	√	√	√	√	
2012	GMC truck	Acadia - 2WD	Personal audio link module	√	√	√			0528 0529
2012	GMC truck	Acadia - 2WD	Memory seat module	√	√	√	√	√	
2012	GMC truck	Acadia - 2WD	Park assist module	√	√	√	√	√	0494 0495
2012	GMC truck	Acadia - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Acadia - 2WD	Rear drive system	√	√	√	√	√	0530
2012	GMC truck	Acadia - 4WD	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Acadia - 4WD	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Acadia - 4WD	Transmission control module		√	√	√	√	
2012	GMC truck	Acadia - 4WD	Digital radio receiver	√	√	√	√	√	
2012	GMC truck	Acadia - 4WD	Liftgate module	√	√	√	√	√	
2012	GMC truck	Acadia - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2012	GMC truck	Acadia - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	GMC truck	Acadia - 4WD	Head up dilay	√	√	√	√		
2012	GMC truck	Acadia - 4WD	Instrument panel cluster	√	√	√	√	√	
2012	GMC truck	Acadia - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	GMC truck	Acadia - 4WD	Passenger presence system	√	√	√	√	√	
2012	GMC truck	Acadia - 4WD	Driver door switch	√	√	√	√	√	0527



2012	GMC truck	Acadia - 4WD	Passenger door switch	√	√	√	√	√	0527
2012	GMC truck	Acadia - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	GMC truck	Acadia - 4WD	Theft Deterrent Module	√	√	√	√		
2012	GMC truck	Acadia - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2012	GMC truck	Acadia - 4WD	Body Control Module	√	√	√	√	√	0499 0497
2012	GMC truck	Acadia - 4WD	Radio	√	√	√	√	√	
2012	GMC truck	Acadia - 4WD	Personal audio link module	√	√	√			0528 0529
2012	GMC truck	Acadia - 4WD	Memory seat module	√	√	√	√	√	
2012	GMC truck	Acadia - 4WD	Park assist module	√	√	√	√	√	0494 0495
2012	GMC truck	Acadia - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Acadia - 4WD	Rear drive system	√	√	√	√	√	0530
2012	GMC truck	Canyon Pickup - 2WD	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Canyon Pickup - 2WD	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Canyon Pickup - 2WD	Transmission control module	√	√	√	√	√	0493
2012	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√	√	0516
2012	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0495
2012	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2012	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2012	GMC truck	Canyon Pickup - 2WD	Passenger presence system		√	√			0517
2012	GMC truck	Canyon Pickup - 2WD	Theft Deterrent Module	√	√	√	√		0170
2012	GMC truck	Canyon Pickup - 2WD	Generator battery control module	√	√	√	√	√	
2012	GMC truck	Canyon Pickup - 2WD	Personal audio link module	√	√	√			0528
2012	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2012	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550 0159
2012	GMC truck	Canyon Pickup - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2012	GMC truck	Canyon Pickup - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2012	GMC truck	Canyon Pickup - 4WD	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Canyon Pickup - 4WD	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Canyon Pickup - 4WD	Transmission control module	√	√	√	√	√	0493
2012	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√	√	0516
2012	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0495
2012	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2012	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2012	GMC truck	Canyon Pickup - 4WD	Passenger presence system		√	√			0517
2012	GMC truck	Canyon Pickup - 4WD	Theft Deterrent Module	√	√	√	√		0170
2012	GMC truck	Canyon Pickup - 4WD	Generator battery control module	√	√	√	√	√	
2012	GMC truck	Canyon Pickup - 4WD	Personal audio link module	√	√	√			0528
2012	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2012	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550 0159
2012	GMC truck	Canyon Pickup - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2012	GMC truck	Canyon Pickup - 4WD	Transfer Case Control Module	√	√	√	√	√	0493



2012	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2012	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2012	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2012	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2012	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2012	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	GMC truck	Savana	Passenger presence system	√	√	√	√		0517
2012	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2012	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2012	GMC truck	Savana	Body Control Module	√	√	√	√	√	0499 0497
2012	GMC truck	Savana	Radio	√	√	√	√	√	
2012	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2012	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2012	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2012	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2012	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2012	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	GMC truck	Savana	Passenger presence system	√	√	√	√		0517
2012	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2012	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2012	GMC truck	Savana	Body Control Module	√	√	√	√	√	0499 0497
2012	GMC truck	Savana	Radio	√	√	√	√	√	
2012	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2012	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2012	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2012	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2012	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	GMC truck	Savana	Passenger presence system	√	√	√	√		0517
2012	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2012	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		

2012	GMC truck	Savana	Body Control Module	√	√	√	√	√	0499 0497
2012	GMC truck	Savana	Radio	√	√	√	√	√	
2012	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2012	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2012	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2012	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2012	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	GMC truck	Savana	Passenger presence system	√	√	√	√		0517
2012	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2012	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2012	GMC truck	Savana	Body Control Module	√	√	√	√	√	0499 0497
2012	GMC truck	Savana	Radio	√	√	√	√	√	
2012	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Sierra	Transmission control module	√	√	√	√	√	
2012	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2012	GMC truck	Sierra	Trailer brake control module	√	√	√	√	√	
2012	GMC truck	Sierra	Electronic suspension control	√	√	√	√	√	0532
2012	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Sierra	FPCM with trailer brake control	√	√	√	√	√	0532
2012	GMC truck	Sierra	Transfer Case Control Module	√	√	√	√	√	0493
2012	GMC truck	Sierra	Transmission control module		√	√	√	√	
2012	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2012	GMC truck	Sierra	Trailer brake control module	√	√	√	√	√	
2012	GMC truck	Sierra	Electronic suspension control	√	√	√	√	√	0532
2012	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Sierra	FPCM with trailer brake control	√	√	√	√	√	0532
2012	GMC truck	Sierra	Transfer Case Control Module	√	√	√	√	√	0493
2012	GMC truck	Sierra Hybrid	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Sierra Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Sierra Hybrid	Transmission control module		√	√	√	√	
2012	GMC truck	Sierra Hybrid	Accessory power module	√	√	√	√	√	
2012	GMC truck	Sierra Hybrid	FPCM with trailer brake control	√	√	√	√	√	
2012	GMC truck	Sierra Hybrid	Electronic suspension control	√	√	√	√	√	0532
2012	GMC truck	Sierra Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2012	GMC truck	Sierra Hybrid	Power steering control module	√	√	√	√	√	0536

2012	GMC truck	Sierra Hybrid	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Sierra Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Sierra Hybrid	Transmission control module		√	√	√	√	
2012	GMC truck	Sierra Hybrid	Accessory power module	√	√	√	√	√	
2012	GMC truck	Sierra Hybrid	FPCM with trailer brake control	√	√	√	√	√	
2012	GMC truck	Sierra Hybrid	Electronic suension control	√	√	√	√	√	0532
2012	GMC truck	Sierra Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2012	GMC truck	Sierra Hybrid	Power steering control module	√	√	√	√	√	0536
2012	GMC truck	Yukon	FPCM with trailer brake control	√	√	√	√	√	
2012	GMC truck	Yukon	Electronic suension control	√	√	√	√	√	0532
2012	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Yukon	Transmission control module	√	√	√	√	√	0493
2012	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2012	GMC truck	Yukon	FPCM with trailer brake control	√	√	√	√	√	
2012	GMC truck	Yukon	Electronic suension control	√	√	√	√	√	0532
2012	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Yukon	Transmission control module	√	√	√	√	√	0493
2012	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2012	GMC truck	Yukon hybrid	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Yukon hybrid	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Yukon hybrid	Transmission control module		√	√	√	√	
2012	GMC truck	Yukon hybrid	Accessory power module	√	√	√	√	√	
2012	GMC truck	Yukon hybrid	FPCM with trailer brake control	√	√	√	√	√	
2012	GMC truck	Yukon hybrid	Electronic suension control	√	√	√	√	√	0532
2012	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2012	GMC truck	Yukon hybrid	Power steering control module	√	√	√	√	√	0536
2012	GMC truck	Yukon hybrid	Transfer Case Control Module	√	√	√	√	√	0532
2012	GMC truck	Yukon hybrid	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Yukon hybrid	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Yukon hybrid	Transmission control module		√	√	√	√	
2012	GMC truck	Yukon hybrid	Accessory power module	√	√	√	√	√	
2012	GMC truck	Yukon hybrid	FPCM with trailer brake control	√	√	√	√	√	
2012	GMC truck	Yukon hybrid	Electronic suension control	√	√	√	√	√	0532
2012	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2012	GMC truck	Yukon hybrid	Power steering control module	√	√	√	√	√	0536
2012	GMC truck	Yukon hybrid	Transfer Case Control Module	√	√	√	√	√	0532
2012	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493

2012	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Yukon XL	Transmission control module	√	√	√	√	√	0493
2012	GMC truck	Yukon XL	FPCM with trailer brake control	√	√	√	√	√	
2012	GMC truck	Yukon XL	Electronic suension control	√	√	√	√	√	0532
2012	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√	√	0532
2012	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493
2012	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Yukon XL	Transmission control module	√	√	√	√	√	0493
2012	GMC truck	Yukon XL	FPCM with trailer brake control	√	√	√	√	√	
2012	GMC truck	Yukon XL	Electronic suension control	√	√	√	√	√	0532
2012	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√	√	0532
2012	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493
2011	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0323 0308 0217 0309
2011	Buick	LaCrosse	Fuel Injector Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Fuel Pump Control Module	√	√	√	√	√	0217
2011	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2011	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0016
2011	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Drive Motor Control Module	√	√	√	√		
2011	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2011	Buick	LaCrosse	Parking Brake Control Module	√	√	√	√	√	0316
2011	Buick	LaCrosse	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2011	Buick	LaCrosse	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2011	Buick	LaCrosse	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2011	Buick	LaCrosse	Suension Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2011	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2011	Buick	LaCrosse	Passenger Presence Module	√	√	√	√		0322
2011	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0301
2011	Buick	LaCrosse	Head-Up Dilay Module	√	√	√	√	√	
2011	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Radio	√	√	√	√	√	
2011	Buick	LaCrosse	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2011	Buick	LaCrosse	Multimedia Player Interface Module	√	√	√	√		
2011	Buick	LaCrosse	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2011	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2011	Buick	LaCrosse	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129

2011	Buick	LaCrosse	Seat Memory Control Module	√	√	√	√	√	0310
2011	Buick	LaCrosse	Front Seat Heating Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Rear Seat Heating Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0301
2011	Buick	LaCrosse	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2011	Buick	LaCrosse	Steering Column Lock Control Module	√	√	√	√		
2011	Buick	LaCrosse	Battery Energy Control Module	√			√		
2011	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√	√	√	
2011	Buick	LaCrosse	Right Side Object Detection Control Module	√	√	√	√	√	
2011	Buick	Regal	Engine Control Module	√	√	√	√	√	0323 0308 0217 0309
2011	Buick	Regal	Fuel Injector Control Module	√	√	√	√	√	
2011	Buick	Regal	Fuel Pump Control Module	√	√	√	√	√	0217
2011	Buick	Regal	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2011	Buick	Regal	Transmission Control Module	√	√	√	√	√	0016
2011	Buick	Regal	Rear Differential Clutch Control Module	√	√	√	√	√	
2011	Buick	Regal	Drive Motor Control Module	√	√	√	√		
2011	Buick	Regal	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2011	Buick	Regal	Parking Brake Control Module	√	√	√	√	√	0316
2011	Buick	Regal	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2011	Buick	Regal	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2011	Buick	Regal	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2011	Buick	Regal	Suension Control Module	√	√	√	√	√	
2011	Buick	Regal	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2011	Buick	Regal	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2011	Buick	Regal	Passenger Presence Module	√	√	√	√		0322
2011	Buick	Regal	Instrument Cluster	√	√	√	√	√	0301
2011	Buick	Regal	Head-Up Dilay Module	√	√	√	√	√	
2011	Buick	Regal	Headlamp Control Module	√	√	√	√	√	
2011	Buick	Regal	Radio	√	√	√	√	√	
2011	Buick	Regal	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2011	Buick	Regal	Multimedia Player Interface Module	√	√	√	√		
2011	Buick	Regal	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2011	Buick	Regal	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2011	Buick	Regal	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2011	Buick	Regal	Seat Memory Control Module	√	√	√	√	√	0310
2011	Buick	Regal	Front Seat Heating Control Module	√	√	√	√	√	
2011	Buick	Regal	Rear Seat Heating Control Module	√	√	√	√	√	
2011	Buick	Regal	Keyless Entry Control Module	√	√	√	√	√	
2011	Buick	Regal	Parking Assist Control Module	√	√	√	√	√	0301

2011	Buick	Regal	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2011	Buick	Regal	Steering Column Lock Control Module	√	√	√	√		
2011	Buick	Regal	Battery Energy Control Module	√			√		
2011	Buick	Regal	Left Side Object Detection Control Module	√	√	√	√	√	
2011	Buick	Regal	Right Side Object Detection Control Module	√	√	√	√	√	
2011	Cadillac	SRX	Engine Control Module	√	√	√	√	√	0067 0308 0217 0309
2011	Cadillac	SRX	Fuel Pump Control Module	√	√	√	√	√	0217
2011	Cadillac	SRX	Transmission Control Module	√	√	√	√	√	0020 0106
2011	Cadillac	SRX	Rear Differential Clutch Control Module	√	√	√	√	√	
2011	Cadillac	SRX	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2011	Cadillac	SRX	Parking Brake Control Module	√	√	√	√	√	0316
2011	Cadillac	SRX	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2011	Cadillac	SRX	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2011	Cadillac	SRX	Suension Control Module	√	√	√	√	√	
2011	Cadillac	SRX	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2011	Cadillac	SRX	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2011	Cadillac	SRX	Passenger Presence Module	√	√	√	√		0322
2011	Cadillac	SRX	Instrument Cluster	√	√	√	√	√	0301
2011	Cadillac	SRX	Headlamp Control Module	√	√	√	√	√	
2011	Cadillac	SRX	Trailer Interface Control Module	√	√	√	√	√	0301
2011	Cadillac	SRX	Radio	√	√	√	√	√	
2011	Cadillac	SRX	Rear Audio Control Module	√	√	√	√	√	
2011	Cadillac	SRX	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2011	Cadillac	SRX	Multimedia Player Interface Module	√	√	√	√		
2011	Cadillac	SRX	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2011	Cadillac	SRX	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2011	Cadillac	SRX	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2011	Cadillac	SRX	Liftgate Control Module	√	√	√	√	√	0146
2011	Cadillac	SRX	Seat Memory Control Module	√	√	√	√	√	0310
2011	Cadillac	SRX	Front Seat Heating Control Module	√	√	√	√	√	
2011	Cadillac	SRX	Rear Seat Heating Control Module	√	√	√	√	√	
2011	Cadillac	SRX	Keyless Entry Control Module	√	√	√	√	√	
2011	Cadillac	SRX	Parking Assist Control Module	√	√	√	√	√	0301
2011	Cadillac	SRX	Steering Column Lock Control Module	√	√	√	√		
2011	Chevrolet	Beat	Engine Control Module	√	√	√	√	√	0133 0133 0323 0383 0096 0096 0130 0143 0265 0265 0147 0147 0098 0098 0387 0387 0382 0382 0391 0391 0094 0094 0392 0308 0393 0393 0394 0394 0135 0128 0173 0173

2011	Chevrolet	Beat	Fuel Injector Control Module	√	√	√	√	√	
2011	Chevrolet	Beat	Transmission Control Module	√	√	√	√	√	
2011	Chevrolet	Beat	Electronic Brake Control Module	√	√	√	√	√	0090
2011	Chevrolet	Beat	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2011	Chevrolet	Beat	Electric Power Steering Control Module	√	√	√	√		
2011	Chevrolet	Beat	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2011	Chevrolet	Beat	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2011	Chevrolet	Beat	Passenger Presence Module	√	√	√	√	√	0322
2011	Chevrolet	Beat	Instrument Cluster	√	√	√	√	√	
2011	Chevrolet	Camaro	Engine Control Module	√	√	√	√	√	0323 0308 0217 0309
2011	Chevrolet	Camaro	Fuel Pump Control Module	√	√	√	√	√	0217
2011	Chevrolet	Camaro	Transmission Control Module	√	√	√	√	√	0016
2011	Chevrolet	Camaro	Electronic Brake Control Module	√	√	√	√	√	0090 0225
2011	Chevrolet	Camaro	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2011	Chevrolet	Camaro	Power Steering Control Module	√	√	√	√		
2011	Chevrolet	Camaro	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2011	Chevrolet	Camaro	Suension Control Module	√	√	√	√	√	
2011	Chevrolet	Camaro	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2011	Chevrolet	Camaro	Auxiliary Gage Module	√	√	√	√	√	
2011	Chevrolet	Camaro	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2011	Chevrolet	Camaro	Passenger Presence Module	√	√	√	√		0322
2011	Chevrolet	Camaro	Instrument Cluster	√	√	√	√	√	0301
2011	Chevrolet	Camaro	Head-Up Dilay Module	√	√	√	√	√	
2011	Chevrolet	Camaro	Headlamp Control Module	√	√	√	√	√	0195
2011	Chevrolet	Camaro	Radio	√	√	√	√	√	
2011	Chevrolet	Camaro	Multimedia Player Interface Module	√	√	√	√		
2011	Chevrolet	Camaro	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	
2011	Chevrolet	Camaro	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2011	Chevrolet	Camaro	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2011	Chevrolet	Camaro	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2011	Chevrolet	Camaro	Front Seat Heating Control Module	√	√	√	√	√	
2011	Chevrolet	Camaro	Folding Top Control Module	√	√	√	√	√	
2011	Chevrolet	Camaro	Parking Assist Control Module	√	√	√	√	√	
2011	Chevrolet	Captiva	Engine Control Module	√	√	√	√	√	0263 0305 0306 0067 0323 0308 0217 0337
2011	Chevrolet	Captiva	Fuel Pump Control Module	√	√	√	√	√	0217
2011	Chevrolet	Captiva	Transmission Control Module	√	√	√	√	√	0017
2011	Chevrolet	Captiva	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2011	Chevrolet	Captiva	Electronic Brake Control Module	√	√	√	√	√	0090 0111
2011	Chevrolet	Captiva	Parking Brake Control Module	√	√	√	√	√	0316

2011	Chevrolet	Captiva	Body Control Module	√	√	√	√	√	0243 0263 0332
2011	Chevrolet	Captiva	Auxiliary Body Control Module	√	√	√	√	√	0050
2011	Chevrolet	Captiva	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172 0332
2011	Chevrolet	Captiva	Instrument Cluster	√	√	√	√	√	
2011	Chevrolet	Captiva	Headlamp Control Module	√	√	√	√	√	0195 0065
2011	Chevrolet	Captiva	Radio	√	√	√	√	√	0170 0492 0468 0467
2011	Chevrolet	Captiva	Mobile Telephone Control Module	√	√	√	√	√	0301
2011	Chevrolet	Captiva	HVAC Control Module	√	√	√		√	
2011	Chevrolet	Captiva	Info Dilay Module	√	√	√			
2011	Chevrolet	Captiva	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0298
2011	Chevrolet	Captiva	Parking Assist Control Module	√	√	√	√	√	
2011	Chevrolet	Captiva	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Cruze	Engine Control Module	√	√	√	√	√	0308 0217
2011	Chevrolet	Cruze	Fuel Pump Control Module	√	√	√	√	√	0217
2011	Chevrolet	Cruze	Transmission Control Module	√	√	√	√	√	0017
2011	Chevrolet	Cruze	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2011	Chevrolet	Cruze	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2011	Chevrolet	Cruze	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2011	Chevrolet	Cruze	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2011	Chevrolet	Cruze	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2011	Chevrolet	Cruze	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2011	Chevrolet	Cruze	Passenger Presence Module	√	√	√	√		0322
2011	Chevrolet	Cruze	Instrument Cluster	√	√	√	√	√	0301
2011	Chevrolet	Cruze	Trailer Interface Control Module	√	√	√	√	√	0301
2011	Chevrolet	Cruze	Radio	√	√	√	√	√	
2011	Chevrolet	Cruze	Multimedia Player Interface Module	√	√	√	√		
2011	Chevrolet	Cruze	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2011	Chevrolet	Cruze	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2011	Chevrolet	Cruze	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2011	Chevrolet	Cruze	Front Seat Heating Control Module	√	√	√	√	√	
2011	Chevrolet	Cruze	Keyless Entry Control Module	√	√	√	√	√	
2011	Chevrolet	Cruze	Parking Assist Control Module	√	√	√	√	√	
2011	Chevrolet	Cruze	Steering Column Lock Control Module	√	√	√	√		
2011	Chevrolet	Equinox	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2011	Chevrolet	Equinox	Fuel Pump Control Module	√	√	√	√	√	0217
2011	Chevrolet	Equinox	Transmission Control Module	√	√	√	√	√	0016
2011	Chevrolet	Equinox	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2011	Chevrolet	Equinox	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2011	Chevrolet	Equinox	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111



2011	Chevrolet	Equinox	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2011	Chevrolet	Equinox	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2011	Chevrolet	Equinox	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2011	Chevrolet	Equinox	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2011	Chevrolet	Equinox	Passenger Presence Module	√	√	√	√		0322
2011	Chevrolet	Equinox	Instrument Cluster	√	√	√	√	√	0301
2011	Chevrolet	Equinox	Radio	√	√	√	√	√	
2011	Chevrolet	Equinox	Multimedia Player Interface Module	√	√	√	√		
2011	Chevrolet	Equinox	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2011	Chevrolet	Equinox	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2011	Chevrolet	Equinox	Liftgate Control Module	√	√	√	√	√	0146
2011	Chevrolet	Equinox	Seat Memory Control Module	√	√	√	√	√	0310
2011	Chevrolet	Equinox	Front Seat Heating Control Module	√	√	√	√	√	
2011	Chevrolet	Equinox	Parking Assist Control Module	√	√	√	√	√	0301
2011	Chevrolet	Equinox	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2011	Chevrolet	Equinox	Frontview Camera Module	√	√	√	√	√	0205 0196
2011	Chevrolet	Orlando	Engine Control Module	√	√	√	√	√	0308 0217
2011	Chevrolet	Orlando	Fuel Injector Control Module	√	√	√	√	√	
2011	Chevrolet	Orlando	Fuel Pump Control Module	√	√	√	√	√	0217
2011	Chevrolet	Orlando	Transmission Control Module	√	√	√	√	√	0017
2011	Chevrolet	Orlando	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2011	Chevrolet	Orlando	Parking Brake Control Module	√	√	√	√	√	0316
2011	Chevrolet	Orlando	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2011	Chevrolet	Orlando	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2011	Chevrolet	Orlando	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2011	Chevrolet	Orlando	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2011	Chevrolet	Orlando	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2011	Chevrolet	Orlando	Instrument Cluster	√	√	√	√	√	0301
2011	Chevrolet	Orlando	Trailer Interface Control Module	√	√	√	√	√	0301
2011	Chevrolet	Orlando	Radio	√	√	√	√	√	
2011	Chevrolet	Orlando	Multimedia Player Interface Module	√	√	√	√		
2011	Chevrolet	Orlando	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2011	Chevrolet	Orlando	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2011	Chevrolet	Orlando	Front Seat Heating Control Module	√	√	√	√	√	
2011	Chevrolet	Orlando	Keyless Entry Control Module	√	√	√	√	√	
2011	Chevrolet	Orlando	Parking Assist Control Module	√	√	√	√	√	0301
2011	Chevrolet	Orlando	Steering Column Lock Control Module	√	√	√	√		
2011	Chevrolet	Sail	Engine Control Module	√	√	√	√	√	
2011	Chevrolet	Sail	Transmission Control Module	√	√	√	√	√	0479 0480 0153 0136
2011	Chevrolet	Sail	Electronic Brake Control Module	√	√	√	√	√	

2011	Chevrolet	Sail	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√		0064 0040 0063 0039 0227 0064 0040 0063 0039 0172 0177
2011	Chevrolet	Sail	Keyless Entry Control Module				√		
2011	Chevrolet	ark	Engine Control Module	√	√	√	√	√	0133 0133 0323 0383 0096 0096 0130 0143 0265 0265 0147 0147 0098 0098 0387 0387 0382 0382 0391 0391 0094 0094 0392 0308 0393 0393 0394 0394 0135 0128 0173 0173
2011	Chevrolet	ark	Fuel Injector Control Module	√	√	√	√	√	
2011	Chevrolet	ark	Transmission Control Module	√	√	√	√	√	
2011	Chevrolet	ark	Electronic Brake Control Module	√	√	√	√	√	0090
2011	Chevrolet	ark	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2011	Chevrolet	ark	Electric Power Steering Control Module	√	√	√	√		
2011	Chevrolet	ark	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2011	Chevrolet	ark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2011	Chevrolet	ark	Passenger Presence Module	√	√	√	√	√	0322
2011	Chevrolet	ark	Instrument Cluster	√	√	√	√	√	
2011	Chevrolet	Tavera	Engine Control Module	√	√	√	√	√	
2011	Chevrolet	Volt	Engine Control Module	√	√	√	√	√	0305 0306 0067 0308 0217 0176
2011	Chevrolet	Volt	Fuel Pump Control Module	√	√	√	√	√	0217
2011	Chevrolet	Volt	Hybrid Powertrain Control Module	√	√	√	√	√	
2011	Chevrolet	Volt	Transmission Control Module	√	√	√	√	√	
2011	Chevrolet	Volt	Drive Motor Control Module 1	√	√	√	√		
2011	Chevrolet	Volt	Drive Motor Control Module 2	√	√	√	√		
2011	Chevrolet	Volt	Auxiliary Transmission Fluid Pump	√	√	√	√		
2011	Chevrolet	Volt	Electronic Brake Control Module	√	√	√	√	√	0371 0111 0111 0111
2011	Chevrolet	Volt	Parking Brake Control Module	√	√	√	√	√	0316
2011	Chevrolet	Volt	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2011	Chevrolet	Volt	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2011	Chevrolet	Volt	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2011	Chevrolet	Volt	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2011	Chevrolet	Volt	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2011	Chevrolet	Volt	Passenger Presence Module	√	√	√	√		0322
2011	Chevrolet	Volt	Instrument Cluster	√	√	√	√	√	0301
2011	Chevrolet	Volt	Radio	√	√	√	√	√	
2011	Chevrolet	Volt	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2011	Chevrolet	Volt	Mobile Telephone Control Module	√	√	√	√	√	0301 0301

2011	Chevrolet	Volt	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2011	Chevrolet	Volt	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2011	Chevrolet	Volt	Electric A/C Compressor Control Module	√					
2011	Chevrolet	Volt	Coolant Heater Control Module	√	√	√			
2011	Chevrolet	Volt	Front Seat Heating Control Module	√	√	√	√	√	
2011	Chevrolet	Volt	Keyless Entry Control Module	√	√	√	√	√	
2011	Chevrolet	Volt	Parking Assist Control Module	√	√	√	√	√	0301
2011	Chevrolet	Volt	Steering Column Lock Control Module	√	√	√	√		
2011	Chevrolet	Volt	Battery Charger Control Module	√			√		
2011	Chevrolet	Volt	Hybrid Powertrain Control Module 2	√	√	√	√	√	0362 0363 0364 0365 0366 0367 0368
2011	Chevrolet	Volt	Battery Energy Control Module	√			√		
2011	Alpheon	Alpheon	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2011	Alpheon	Alpheon	Fuel Pump Control Module	√	√	√	√	√	0217
2011	Alpheon	Alpheon	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2011	Alpheon	Alpheon	Transmission Control Module	√	√	√	√	√	0017
2011	Alpheon	Alpheon	Drive Motor Control Module	√	√	√	√		
2011	Alpheon	Alpheon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2011	Alpheon	Alpheon	Parking Brake Control Module	√	√	√	√	√	0316
2011	Alpheon	Alpheon	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2011	Alpheon	Alpheon	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2011	Alpheon	Alpheon	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2011	Alpheon	Alpheon	Suension Control Module	√	√	√	√	√	
2011	Alpheon	Alpheon	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2011	Alpheon	Alpheon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2011	Alpheon	Alpheon	Instrument Cluster	√	√	√	√	√	0301
2011	Alpheon	Alpheon	Headlamp Control Module	√	√	√	√	√	0195
2011	Alpheon	Alpheon	Radio	√	√	√	√	√	
2011	Alpheon	Alpheon	Rear Audio Control Module	√	√	√	√	√	
2011	Alpheon	Alpheon	Multimedia Player Interface Module	√	√	√	√		
2011	Alpheon	Alpheon	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2011	Alpheon	Alpheon	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2011	Alpheon	Alpheon	Seat Memory Control Module	√	√	√	√	√	0310
2011	Alpheon	Alpheon	Front Seat Heating Control Module	√	√	√	√	√	
2011	Alpheon	Alpheon	Rear Seat Heating Control Module	√	√	√	√	√	
2011	Alpheon	Alpheon	Keyless Entry Control Module	√	√	√	√	√	
2011	Alpheon	Alpheon	Parking Assist Control Module	√	√	√	√	√	0301
2011	Alpheon	Alpheon	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2011	Alpheon	Alpheon	Battery Energy Control Module	√			√		

2011	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2011	GMC	Terrain	Fuel Pump Control Module	√	√	√	√	√	0217
2011	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0016
2011	GMC	Terrain	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2011	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2011	GMC	Terrain	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2011	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2011	GMC	Terrain	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2011	GMC	Terrain	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2011	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2011	GMC	Terrain	Passenger Presence Module	√	√	√	√		0322
2011	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0301
2011	GMC	Terrain	Radio	√	√	√	√	√	
2011	GMC	Terrain	Multimedia Player Interface Module	√	√	√	√		
2011	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2011	GMC	Terrain	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2011	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146
2011	GMC	Terrain	Seat Memory Control Module	√	√	√	√	√	0310
2011	GMC	Terrain	Front Seat Heating Control Module	√	√	√	√	√	
2011	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0301
2011	GMC	Terrain	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2011	GMC	Terrain	Frontview Camera Module	√	√	√	√	√	0205 0196
2011	Holden	Barina ark	Engine Control Module	√	√	√	√	√	0133 0133 0323 0383 0096 0096 0130 0143 0265 0265 0147 0147 0098 0098 0387 0387 0382 0382 0391 0391 0094 0094 0392 0308 0393 0393 0394 0394 0135 0128 0173 0173
2011	Holden	Barina ark	Fuel Injector Control Module	√	√	√	√	√	
2011	Holden	Barina ark	Transmission Control Module	√	√	√	√	√	
2011	Holden	Barina ark	Electronic Brake Control Module	√	√	√	√	√	0090
2011	Holden	Barina ark	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2011	Holden	Barina ark	Electric Power Steering Control Module	√	√	√	√		
2011	Holden	Barina ark	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2011	Holden	Barina ark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2011	Holden	Barina ark	Passenger Presence Module	√	√	√	√	√	0322
2011	Holden	Barina ark	Instrument Cluster	√	√	√	√	√	
2011	Holden	Captiva 5	Engine Control Module	√	√	√	√	√	0263 0305 0306 0067 0323 0308 0217 0337

2011	Holden	Captiva 5	Fuel Pump Control Module	√	√	√	√	√	0217
2011	Holden	Captiva 5	Transmission Control Module	√	√	√	√	√	0017
2011	Holden	Captiva 5	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2011	Holden	Captiva 5	Electronic Brake Control Module	√	√	√	√	√	0090 0111
2011	Holden	Captiva 5	Parking Brake Control Module	√	√	√	√	√	0316
2011	Holden	Captiva 5	Body Control Module	√	√	√	√	√	0243 0263 0332
2011	Holden	Captiva 5	Auxiliary Body Control Module	√	√	√	√	√	0050
2011	Holden	Captiva 5	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172 0332
2011	Holden	Captiva 5	Instrument Cluster	√	√	√	√	√	
2011	Holden	Captiva 5	Headlamp Control Module	√	√	√	√	√	0195 0065
2011	Holden	Captiva 5	Radio	√	√	√	√	√	0170 0492 0468 0467
2011	Holden	Captiva 5	Mobile Telephone Control Module	√	√	√	√	√	0301
2011	Holden	Captiva 5	HVAC Control Module	√	√	√		√	
2011	Holden	Captiva 5	Info Dilay Module	√	√	√			
2011	Holden	Captiva 5	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0298
2011	Holden	Captiva 5	Parking Assist Control Module	√	√	√	√	√	
2011	Holden	Captiva 5	Theft Deterrent Module	√	√	√	√		
2011	Holden	Captiva 7	Engine Control Module	√	√	√	√	√	0263 0305 0306 0067 0323 0308 0217 0337
2011	Holden	Captiva 7	Fuel Pump Control Module	√	√	√	√	√	0217
2011	Holden	Captiva 7	Transmission Control Module	√	√	√	√	√	0017
2011	Holden	Captiva 7	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2011	Holden	Captiva 7	Electronic Brake Control Module	√	√	√	√	√	0090 0111
2011	Holden	Captiva 7	Parking Brake Control Module	√	√	√	√	√	0316
2011	Holden	Captiva 7	Body Control Module	√	√	√	√	√	0243 0263 0332
2011	Holden	Captiva 7	Auxiliary Body Control Module	√	√	√	√	√	0050
2011	Holden	Captiva 7	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172 0332
2011	Holden	Captiva 7	Instrument Cluster	√	√	√	√	√	
2011	Holden	Captiva 7	Headlamp Control Module	√	√	√	√	√	0195 0065
2011	Holden	Captiva 7	Radio	√	√	√	√	√	0170 0492 0468 0467
2011	Holden	Captiva 7	Mobile Telephone Control Module	√	√	√	√	√	0301
2011	Holden	Captiva 7	HVAC Control Module	√	√	√		√	
2011	Holden	Captiva 7	Info Dilay Module	√	√	√			
2011	Holden	Captiva 7	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0298
2011	Holden	Captiva 7	Parking Assist Control Module	√	√	√	√	√	
2011	Holden	Captiva 7	Theft Deterrent Module	√	√	√	√		
2011	Holden	Cruze	Engine Control Module	√	√	√	√	√	0308 0217
2011	Holden	Cruze	Fuel Pump Control Module	√	√	√	√	√	0217
2011	Holden	Cruze	Transmission Control Module	√	√	√	√	√	0017
2011	Holden	Cruze	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111

2011	Holden	Cruze	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2011	Holden	Cruze	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2011	Holden	Cruze	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2011	Holden	Cruze	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2011	Holden	Cruze	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2011	Holden	Cruze	Passenger Presence Module	√	√	√	√		0322
2011	Holden	Cruze	Instrument Cluster	√	√	√	√	√	0301
2011	Holden	Cruze	Trailer Interface Control Module	√	√	√	√	√	0301
2011	Holden	Cruze	Radio	√	√	√	√	√	
2011	Holden	Cruze	Multimedia Player Interface Module	√	√	√	√		
2011	Holden	Cruze	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2011	Holden	Cruze	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2011	Holden	Cruze	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2011	Holden	Cruze	Front Seat Heating Control Module	√	√	√	√	√	
2011	Holden	Cruze	Keyless Entry Control Module	√	√	√	√	√	
2011	Holden	Cruze	Parking Assist Control Module	√	√	√	√	√	
2011	Holden	Cruze	Steering Column Lock Control Module	√	√	√	√		
2011	Buick	Lucerne	Transmission control module	√	√	√	√	√	
2011	Buick	Lucerne	Engine Control Module	√	√	√	√	√	0493
2011	Buick	Lucerne	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Buick	Lucerne	Radio	√	√	√	√	√	
2011	Buick	Lucerne	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Buick	Lucerne	Theft Deterrent Module	√	√	√	√		
2011	Buick	Lucerne	Left side object detection module	√	√	√	√	√	
2011	Buick	Lucerne	Memory seat module	√	√	√	√	√	
2011	Buick	Lucerne	Park assist module	√	√	√	√		
2011	Buick	Lucerne	Right side object detection module	√	√	√	√		
2011	Buick	Lucerne	Veh direction alert alarm warn mod	√	√	√	√	√	
2011	Buick	Lucerne	Passenger presence system	√	√	√	√		0517
2011	Buick	Lucerne	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Buick	Lucerne	HVAC Control Module	√	√	√	√	√	
2011	Buick	Lucerne	Digital radio receiver	√	√	√	√	√	
2011	Buick	Lucerne	Driver door switch	√	√	√	√	√	
2011	Buick	Lucerne	Passenger door switch	√	√	√	√	√	
2011	Buick	Lucerne	Body Control Module	√	√	√	√	√	0499 0497
2011	Buick	Lucerne	Instrument panel cluster	√	√	√	√	√	0494 0495 0496
2011	Buick	Lucerne	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Buick	Lucerne	Electronic suspension control	√	√	√	√	√	
2011	Cadillac	CTS	Engine Control Module	√	√	√	√	√	
2011	Cadillac	CTS	Fuel Pump Control Module	√	√	√	√	√	

2011	Cadillac	CTS	Transmission control module		√	√	√	√	
2011	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	0493
2011	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Cadillac	CTS	Body Control Module	√	√	√	√	√	0498
2011	Cadillac	CTS	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2011	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√	√	0501
2011	Cadillac	CTS	Passenger presence system	√	√	√	√	√	
2011	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2011	Cadillac	CTS	Park assist module	√	√	√	√	√	
2011	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0500
2011	Cadillac	CTS	Driver door switch	√	√	√	√	√	
2011	Cadillac	CTS	Passenger door switch	√	√	√	√	√	
2011	Cadillac	CTS	Radio	√	√	√	√	√	0503
2011	Cadillac	CTS	TV antenna module	√	√	√	√		0504 0505
2011	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	0502
2011	Cadillac	CTS	Liftgate module	√	√	√	√	√	
2011	Cadillac	CTS	Body Control Module	√	√	√	√	√	0499 0497
2011	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	0494 0495 0496
2011	Cadillac	CTS	Park Brake Control Module	√	√	√	√	√	
2011	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Cadillac	CTS	Electronic suspension control		√	√	√	√	
2011	Cadillac	DTS	Transmission control module		√	√	√	√	
2011	Cadillac	DTS	Engine Control Module	√	√	√	√	√	0493
2011	Cadillac	DTS	Instrument panel cluster	√	√	√	√	√	
2011	Cadillac	DTS	Amplifier (bose)	√	√	√	√	√	
2011	Cadillac	DTS	Digital radio receiver	√	√	√	√	√	
2011	Cadillac	DTS	Body Control Module	√	√	√	√	√	0499 0497
2011	Cadillac	DTS	Radio	√	√	√	√	√	
2011	Cadillac	DTS	TV antenna module	√	√	√	√		0504 0505
2011	Cadillac	DTS	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Cadillac	DTS	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Cadillac	DTS	Theft Deterrent Module	√	√	√	√		
2011	Cadillac	DTS	Passenger presence system	√	√	√	√		0517
2011	Cadillac	DTS	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Cadillac	DTS	Driver position module	√	√	√	√	√	
2011	Cadillac	DTS	Inside rear view mirror module	√	√	√			
2011	Cadillac	DTS	Left side object detection module	√	√	√	√	√	
2011	Cadillac	DTS	Rear heated seat module	√	√	√	√		
2011	Cadillac	DTS	Right side object detection module	√	√	√	√		
2011	Cadillac	DTS	Park assist module	√	√	√	√	√	

2011	Cadillac	DTS	Veh direction alert alarm warn mod	√	√	√	√	√	
2011	Cadillac	DTS	HVAC Control Module	√	√	√	√	√	
2011	Cadillac	DTS	Distance sensing cruise control	√	√	√	√	√	
2011	Cadillac	DTS	Driver door switch	√	√	√	√	√	0527
2011	Cadillac	DTS	Passenger door switch	√	√	√	√	√	0527
2011	Cadillac	DTS	Aux. HVAC control module	√	√	√	√	√	0527
2011	Cadillac	DTS	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Cadillac	DTS	Electronic suension control	√	√	√	√	√	
2011	Cadillac	STS	Engine Control Module	√	√	√	√	√	
2011	Cadillac	STS	Transmission control module		√	√	√	√	
2011	Cadillac	STS	Amplifier (bose)		√	√	√	√	
2011	Cadillac	STS	Digital radio receiver	√	√	√	√	√	0516
2011	Cadillac	STS	Headlamp Control Module	√	√	√	√	√	
2011	Cadillac	STS	Instrument panel module	√	√	√	√	√	0551
2011	Cadillac	STS	Radio	√	√	√	√		0552 0525
2011	Cadillac	STS	Rear integration module	√	√	√	√	√	
2011	Cadillac	STS	Head up dilay	√	√	√	√	√	
2011	Cadillac	STS	Instrument panel cluster	√	√	√	√	√	0553 0554
2011	Cadillac	STS	Remote control door lock receiver	√	√	√	√	√	0513 0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519
2011	Cadillac	STS	Passenger presence system		√	√			
2011	Cadillac	STS	Supplemental inflatable restraint	√	√	√	√	√	0559
2011	Cadillac	STS	Driver position module	√	√	√	√	√	
2011	Cadillac	STS	Left side object detection module	√	√	√	√	√	
2011	Cadillac	STS	Right side object detection module	√	√	√	√		
2011	Cadillac	STS	Veh direction alert alarm warn mod	√	√	√	√	√	
2011	Cadillac	STS	Distance sensing cruise control	√	√	√	√	√	
2011	Cadillac	STS	HVAC Control Module	√	√	√	√	√	
2011	Cadillac	STS	Driver door module	√	√	√	√	√	0560
2011	Cadillac	STS	Driver door switch	√	√	√	√		
2011	Cadillac	STS	Left rear door module	√	√	√	√	√	0560
2011	Cadillac	STS	Passenger door module	√	√	√	√	√	0560
2011	Cadillac	STS	Right rear door module	√	√	√	√	√	0560
2011	Cadillac	STS	TV antenna module	√	√	√	√		
2011	Cadillac	STS	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	Cadillac	STS	Navigation radio	√	√	√	√	√	0561
2011	Cadillac	STS	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Cadillac	STS	Electronic suension control	√	√	√	√	√	
2011	Chevrolet	Aveo	Engine Control Module	√	√	√	√	√	0507
2011	Chevrolet	Aveo	Transmission control module	√	√	√	√	√	0493



2011	Chevrolet	Aveo	Immobilizer						0508
2011	Chevrolet	Aveo	Supplemental inflatable restraint	√	√	√	√	√	0508
2011	Chevrolet	Aveo	Tire pressure monitor	√	√	√	√		0510 0511
2011	Chevrolet	Aveo	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Aveo	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Aveo	Radio	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Aveo	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Aveo	Passenger presence system	√	√	√	√		0517
2011	Chevrolet	Aveo	Instrument panel cluster	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Aveo	Engine Control Module	√	√	√	√	√	0507
2011	Chevrolet	Aveo	Transmission control module	√	√	√	√	√	0493
2011	Chevrolet	Aveo	Immobilizer						0508
2011	Chevrolet	Aveo	Supplemental inflatable restraint	√	√	√	√	√	0508
2011	Chevrolet	Aveo	Tire pressure monitor	√	√	√	√		0510 0511
2011	Chevrolet	Aveo	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Aveo	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Aveo	Radio	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Aveo	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Aveo	Passenger presence system	√	√	√	√		0517
2011	Chevrolet	Aveo	Instrument panel cluster	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Caprice Police	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Caprice Police	Transmission control module		√	√	√	√	
2011	Chevrolet	Caprice Police	Fuel Pump Control Module	√	√	√	√	√	
2011	Chevrolet	Caprice Police	Passenger presence system	√	√	√	√		0512
2011	Chevrolet	Caprice Police	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Caprice Police	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Caprice Police	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Caprice Police	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Caprice Police	Body Control Module	√	√	√	√	√	0499 0497
2011	Chevrolet	Caprice Police	Radio	√	√	√	√	√	
2011	Chevrolet	Caprice Police	HVAC Control Module	√	√	√	√	√	
2011	Chevrolet	Caprice Police	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Chevrolet	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Chevrolet	Transmission control module	√	√	√	√	√	0493
2011	Chevrolet	Chevrolet	Immobilizer	√	√	√	√		0544 0545
2011	Chevrolet	Corvette	Transmission control module		√	√	√	√	
2011	Chevrolet	Corvette	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Corvette	Exhaust flow control module	√	√	√	√	√	0493
2011	Chevrolet	Corvette	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Chevrolet	Corvette	CD changer	√	√	√	√		
2011	Chevrolet	Corvette	Digital radio receiver	√	√	√	√		0516

2011	Chevrolet	Corvette	Radio	√	√	√	√		0524 0525
2011	Chevrolet	Corvette	Head up display	√	√	√	√	√	
2011	Chevrolet	Corvette	Remote control door lock receiver	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2011	Chevrolet	Corvette	Vehicle comm. interface module	√	√	√	√	√	0495
2011	Chevrolet	Corvette	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Corvette	Passenger presence system		√	√			0517
2011	Chevrolet	Corvette	Supplemental inflatable restraint	√	√	√	√	√	0515
2011	Chevrolet	Corvette	Steering column lock module	√	√	√	√	√	
2011	Chevrolet	Corvette	Driver position module	√	√	√	√	√	0522
2011	Chevrolet	Corvette	Folding top module	√	√	√	√	√	
2011	Chevrolet	Corvette	HVAC Control Module	√	√	√	√	√	0500 0523
2011	Chevrolet	Corvette	Driver door module	√	√	√	√	√	
2011	Chevrolet	Corvette	Driver door switch	√	√	√	√		
2011	Chevrolet	Corvette	Passenger door module	√	√	√	√	√	
2011	Chevrolet	Corvette	Body Control Module	√	√	√	√	√	0515
2011	Chevrolet	Corvette	Navigation radio	√	√	√	√		0525
2011	Chevrolet	Corvette	Personal audio link module	√	√	√	√	√	0528
2011	Chevrolet	Corvette	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Corvette	Electronic suspension control	√	√	√	√	√	
2011	Chevrolet	Epica	Transmission control module	√	√	√	√	√	
2011	Chevrolet	Epica	Engine Control Module	√	√	√	√	√	0509
2011	Chevrolet	Epica	Supplemental inflatable restraint	√	√	√	√	√	
2011	Chevrolet	Epica	ISU	√	√	√	√	√	
2011	Chevrolet	Epica	Electronic Brake Control Module	√	√	√	√	√	0509
2011	Chevrolet	Impala	Transmission control module		√	√	√	√	
2011	Chevrolet	Impala	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Impala	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Impala	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Impala	Radio	√	√	√	√	√	
2011	Chevrolet	Impala	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Impala	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Impala	Passenger presence system	√	√	√	√	√	
2011	Chevrolet	Impala	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Impala	Heated seat module	√	√	√	√		
2011	Chevrolet	Impala	Body Control Module	√	√	√	√	√	0499 0497
2011	Chevrolet	Impala	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Impala	HVAC Control Module	√	√	√	√	√	0500
2011	Chevrolet	Impala	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Malibu	Transmission control module		√	√	√	√	
2011	Chevrolet	Malibu	Engine Control Module	√	√	√	√	√	0493

2011	Chevrolet	Malibu	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	Chevrolet	Malibu	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Malibu	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Malibu	Body Control Module	√	√	√	√	√	0500 0515 0548
2011	Chevrolet	Malibu	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Malibu	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Malibu	Passenger presence system		√	√			
2011	Chevrolet	Malibu	Supplemental inflatable restraint	√	√	√	√	√	0515
2011	Chevrolet	Malibu	HVAC Control Module	√	√	√	√	√	
2011	Chevrolet	Malibu	Personal audio link module	√	√	√			0528
2011	Chevrolet	Malibu	Radio	√	√	√	√	√	0525
2011	Chevrolet	Malibu	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Malibu	Power steering control module	√	√	√	√	√	0506
2011	Chevrolet	Optra	Engine Control Module	√	√	√	√	√	0507
2011	Chevrolet	Optra	Transmission control module	√	√	√	√	√	0493
2011	Chevrolet	Optra	Immobilizer						0508
2011	Chevrolet	Optra	Supplemental inflatable restraint	√	√	√	√	√	
2011	Chevrolet	Optra	Tire pressure monitor	√	√	√	√		0510 0511
2011	Chevrolet	Optra	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	ark Classic	Transmission control module	√	√	√	√	√	
2011	Chevrolet	ark Classic	Engine Control Module	√	√	√	√	√	0507
2011	Chevrolet	ark Classic	Immobilizer						0508
2011	Chevrolet	ark Classic	Supplemental inflatable restraint	√	√	√	√		
2011	Chevrolet	ark Classic	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Others	Immobilizer						0508
2011	Chevrolet	Others	Supplemental inflatable restraint	√	√	√	√	√	
2011	Chevrolet	Others	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Others	Power steering control module	√	√	√	√	√	
2011	Chevrolet	Others	Transmission control module	√	√	√	√	√	
2011	Chevrolet	Others	Engine Control Module		√	√	√	√	0493
2011	Alpheon	Damas	Transmission control module	√	√	√	√	√	
2011	Alpheon	Damas	Engine Control Module	√	√	√	√	√	0507
2011	Alpheon	Labo	Transmission control module	√	√	√	√	√	
2011	Alpheon	Labo	Engine Control Module	√	√	√	√	√	0507
2011	Alpheon	Others	Engine Control Module	√	√	√	√	√	
2011	Alpheon	Others	Transmission control module	√	√	√	√	√	0493
2011	Alpheon	Others	Supplemental inflatable restraint	√	√	√	√	√	
2011	Alpheon	Others	ISU	√	√	√	√	√	0493
2011	Alpheon	Others	Immobilizer	√	√	√	√	√	0508
2011	Alpheon	Others	Electronic Brake Control Module	√	√	√	√	√	0493
2011	Alpheon	Others	Tire pressure monitor	√	√	√	√	√	0510 0511

2011	Holden	Others	Engine Control Module	√	√	√	√	√	
2011	Holden	Others	Transmission control module	√	√	√	√	√	0493
2011	Holden	Others	Supplemental inflatable restraint	√	√	√	√	√	
2011	Holden	Others	ISU	√	√	√	√	√	0493
2011	Holden	Others	Immobilizer	√	√	√	√	√	0508
2011	Holden	Others	Electronic Brake Control Module	√	√	√	√	√	0493
2011	Holden	Others	Tire pressure monitor	√	√	√	√	√	0510 0511
2011	Buick	Enclave - AWD	Transmission control module		√	√	√	√	
2011	Buick	Enclave - AWD	Engine Control Module	√	√	√	√	√	
2011	Buick	Enclave - AWD	Fuel Pump Control Module	√	√	√	√	√	
2011	Buick	Enclave - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	Buick	Enclave - AWD	Digital radio receiver	√	√	√	√	√	
2011	Buick	Enclave - AWD	Body Control Module						0499 0497
2011	Buick	Enclave - AWD	Headlamp Control Module	√	√	√			
2011	Buick	Enclave - AWD	Liftgate module	√	√	√	√	√	
2011	Buick	Enclave - AWD	Personal audio link module	√	√	√			0528 0529
2011	Buick	Enclave - AWD	Radio	√	√	√	√	√	
2011	Buick	Enclave - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Buick	Enclave - AWD	Theft Deterrent Module	√	√	√	√		
2011	Buick	Enclave - AWD	Instrument panel cluster	√	√	√	√	√	
2011	Buick	Enclave - AWD	Memory seat module	√	√	√	√	√	
2011	Buick	Enclave - AWD	Park assist module	√	√	√	√		
2011	Buick	Enclave - AWD	Passenger presence system	√	√	√	√	√	
2011	Buick	Enclave - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Buick	Enclave - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Buick	Enclave - AWD	Driver door switch	√	√	√	√	√	0527
2011	Buick	Enclave - AWD	Passenger door switch	√	√	√	√	√	0527
2011	Buick	Enclave - AWD	Rear HVAC/RSA	√	√	√	√	√	
2011	Buick	Enclave - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Buick	Enclave - AWD	Rear drive system	√	√	√	√	√	0530
2011	Buick	Enclave - FWD	Transmission control module		√	√	√	√	
2011	Buick	Enclave - FWD	Engine Control Module	√	√	√	√	√	
2011	Buick	Enclave - FWD	Fuel Pump Control Module	√	√	√	√	√	
2011	Buick	Enclave - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	Buick	Enclave - FWD	Digital radio receiver	√	√	√	√	√	
2011	Buick	Enclave - FWD	Body Control Module						0499 0497
2011	Buick	Enclave - FWD	Headlamp Control Module	√	√	√			
2011	Buick	Enclave - FWD	Liftgate module	√	√	√	√	√	
2011	Buick	Enclave - FWD	Personal audio link module	√	√	√			0528 0529
2011	Buick	Enclave - FWD	Radio	√	√	√	√	√	
2011	Buick	Enclave - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159

2011	Buick	Enclave - FWD	Theft Deterrent Module	√	√	√	√		
2011	Buick	Enclave - FWD	Instrument panel cluster	√	√	√	√	√	
2011	Buick	Enclave - FWD	Memory seat module	√	√	√	√	√	
2011	Buick	Enclave - FWD	Park assist module	√	√	√	√		
2011	Buick	Enclave - FWD	Passenger presence system	√	√	√	√	√	
2011	Buick	Enclave - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Buick	Enclave - FWD	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Buick	Enclave - FWD	Driver door switch	√	√	√	√	√	0527
2011	Buick	Enclave - FWD	Passenger door switch	√	√	√	√	√	0527
2011	Buick	Enclave - FWD	Rear HVAC/RSA	√	√	√	√	√	
2011	Buick	Enclave - FWD	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Buick	Enclave - FWD	Rear drive system	√	√	√	√	√	0530
2011	Cadillac	Escalade	Transmission control module		√	√	√	√	
2011	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2011	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Cadillac	Escalade	Digital radio receiver	√	√	√	√	√	
2011	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2011	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2011	Cadillac	Escalade	Personal audio link module	√	√	√			0528
2011	Cadillac	Escalade	Radio	√	√	√	√	√	
2011	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2011	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2011	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2011	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2011	Cadillac	Escalade	Inside rear view mirror module	√	√	√	√	√	
2011	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2011	Cadillac	Escalade	Park assist module	√	√	√	√		
2011	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2011	Cadillac	Escalade	Right side object detection module	√	√	√	√		
2011	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2011	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2011	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2011	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0497
2011	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2011	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2011	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Cadillac	Escalade	Electronic suspension control	√	√	√	√	√	0532

2011	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	0506
2011	Cadillac	Escalade	Transmission control module		√	√	√	√	
2011	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2011	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Cadillac	Escalade	Digital radio receiver	√	√	√	√	√	
2011	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2011	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2011	Cadillac	Escalade	Personal audio link module	√	√	√			0528
2011	Cadillac	Escalade	Radio	√	√	√	√	√	
2011	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2011	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2011	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2011	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2011	Cadillac	Escalade	Inside rear view mirror module	√	√	√	√	√	
2011	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2011	Cadillac	Escalade	Park assist module	√	√	√	√		
2011	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2011	Cadillac	Escalade	Right side object detection module	√	√	√	√		
2011	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2011	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2011	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2011	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0497
2011	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2011	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2011	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Cadillac	Escalade	Electronic suspension control	√	√	√	√	√	0532
2011	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	0506
2011	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2011	Cadillac	Escalade Hybrid	Accessory power module	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Transmission control module		√	√	√	√	
2011	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Cadillac	Escalade Hybrid	Digital radio receiver	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2011	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528
2011	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	

2011	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√			
2011	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Assist step controller	√	√	√	√	√	0531
2011	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Cadillac	Escalade Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0497
2011	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	A/C compressor control module	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Power steering control module		√	√	√		0536
2011	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2011	Cadillac	Escalade Hybrid	Electronic suspension control	√	√	√	√	√	0532
2011	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	0536
2011	Cadillac	Escalade Hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2011	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2011	Cadillac	Escalade Hybrid	Accessory power module	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Transmission control module		√	√	√	√	
2011	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Cadillac	Escalade Hybrid	Digital radio receiver	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2011	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528
2011	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√			

2011	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Assist step controller	√	√	√	√	√	0531
2011	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Cadillac	Escalade Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0497
2011	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2011	Cadillac	Escalade Hybrid	A/C compressor control module	√	√	√	√		
2011	Cadillac	Escalade Hybrid	Power steering control module		√	√	√		0536
2011	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2011	Cadillac	Escalade Hybrid	Electronic suension control	√	√	√	√	√	0532
2011	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	0536
2011	Cadillac	Escalade Hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2011	Cadillac	Hearse	Engine Control Module	√	√	√	√	√	0493
2011	Cadillac	Hearse	Transmission control module		√	√	√	√	
2011	Cadillac	Hearse	Digital radio receiver	√	√	√	√	√	
2011	Cadillac	Hearse	Driver door switch	√	√	√	√	√	
2011	Cadillac	Hearse	Passenger door switch	√	√	√	√	√	
2011	Cadillac	Hearse	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Cadillac	Hearse	Theft Deterrent Module	√	√	√	√		
2011	Cadillac	Hearse	Instrument panel cluster	√	√	√	√	√	
2011	Cadillac	Hearse	Driver position module	√	√	√	√	√	
2011	Cadillac	Hearse	Rear heated seat module	√	√	√	√		
2011	Cadillac	Hearse	Passenger presence system	√	√	√	√		0512
2011	Cadillac	Hearse	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Cadillac	Hearse	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Cadillac	Hearse	HVAC Control Module	√	√	√	√	√	
2011	Cadillac	Hearse	Body Control Module	√	√	√	√	√	0499 0497
2011	Cadillac	Hearse	Amplifier (bose)	√	√	√	√	√	
2011	Cadillac	Hearse	Radio	√	√	√	√	√	
2011	Cadillac	Hearse	Air suension control module	√	√	√	√	√	
2011	Cadillac	Hearse	Electronic Brake Control Module	√	√	√	√		0506
2011	Cadillac	Limousine	Engine Control Module	√	√	√	√	√	0493
2011	Cadillac	Limousine	Transmission control module		√	√	√	√	
2011	Cadillac	Limousine	Digital radio receiver	√	√	√	√	√	



2011	Cadillac	Limousine	Driver door switch	√	√	√	√	√	
2011	Cadillac	Limousine	Passenger door switch	√	√	√	√	√	
2011	Cadillac	Limousine	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Cadillac	Limousine	Theft Deterrent Module	√	√	√	√		
2011	Cadillac	Limousine	Instrument panel cluster	√	√	√	√	√	
2011	Cadillac	Limousine	Driver position module	√	√	√	√	√	
2011	Cadillac	Limousine	Rear heated seat module	√	√	√	√		
2011	Cadillac	Limousine	Passenger presence system	√	√	√	√		0512
2011	Cadillac	Limousine	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Cadillac	Limousine	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Cadillac	Limousine	HVAC Control Module	√	√	√	√	√	
2011	Cadillac	Limousine	Aux. HVAC control module	√			√	√	
2011	Cadillac	Limousine	Body Control Module	√	√	√	√	√	0499 0497
2011	Cadillac	Limousine	Amplifier (bose)	√	√	√	√	√	
2011	Cadillac	Limousine	Radio	√	√	√	√	√	
2011	Cadillac	Limousine	Air suspension control module	√	√	√	√	√	
2011	Cadillac	Limousine	Electronic Brake Control Module	√	√	√	√		0506
2011	Chevrolet	Avalanche - 2WD	Transmission control module		√	√	√	√	
2011	Chevrolet	Avalanche - 2WD	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Avalanche - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Chevrolet	Avalanche - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Avalanche - 2WD	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Avalanche - 2WD	Amplifier (bose)	√	√	√	√	√	
2011	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	0498
2011	Chevrolet	Avalanche - 2WD	Personal audio link module	√	√	√			0528
2011	Chevrolet	Avalanche - 2WD	Radio	√	√	√	√	√	
2011	Chevrolet	Avalanche - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2011	Chevrolet	Avalanche - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Avalanche - 2WD	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Avalanche - 2WD	Passenger presence system	√	√	√	√		
2011	Chevrolet	Avalanche - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Avalanche - 2WD	Memory seat module	√	√	√	√	√	
2011	Chevrolet	Avalanche - 2WD	Rear heated seat module	√	√	√	√		
2011	Chevrolet	Avalanche - 2WD	Park assist module	√	√	√	√		
2011	Chevrolet	Avalanche - 2WD	Assist step controller	√	√	√	√	√	0531
2011	Chevrolet	Avalanche - 2WD	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Avalanche - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Chevrolet	Avalanche - 2WD	Driver door switch	√	√	√	√	√	
2011	Chevrolet	Avalanche - 2WD	Passenger door switch	√	√	√	√	√	
2011	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Avalanche - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506

2011	Chevrolet	Avalanche - 2WD	Electronic suspension control	√	√	√	√	√	0532
2011	Chevrolet	Avalanche - 2WD	FPCM with trailer brake control	√	√	√	√	√	0506
2011	Chevrolet	Avalanche - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2011	Chevrolet	Avalanche - 2WD	Transmission control module		√	√	√	√	
2011	Chevrolet	Avalanche - 2WD	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Avalanche - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Chevrolet	Avalanche - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Avalanche - 2WD	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Avalanche - 2WD	Amplifier (bose)	√	√	√	√	√	
2011	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	0498
2011	Chevrolet	Avalanche - 2WD	Personal audio link module	√	√	√			0528
2011	Chevrolet	Avalanche - 2WD	Radio	√	√	√	√	√	
2011	Chevrolet	Avalanche - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2011	Chevrolet	Avalanche - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Avalanche - 2WD	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Avalanche - 2WD	Passenger presence system	√	√	√	√		
2011	Chevrolet	Avalanche - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Avalanche - 2WD	Memory seat module	√	√	√	√	√	
2011	Chevrolet	Avalanche - 2WD	Rear heated seat module	√	√	√	√		
2011	Chevrolet	Avalanche - 2WD	Park assist module	√	√	√	√		
2011	Chevrolet	Avalanche - 2WD	Assist step controller	√	√	√	√	√	0531
2011	Chevrolet	Avalanche - 2WD	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Avalanche - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Chevrolet	Avalanche - 2WD	Driver door switch	√	√	√	√	√	
2011	Chevrolet	Avalanche - 2WD	Passenger door switch	√	√	√	√	√	
2011	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Avalanche - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Avalanche - 2WD	Electronic suspension control	√	√	√	√	√	0532
2011	Chevrolet	Avalanche - 2WD	FPCM with trailer brake control	√	√	√	√	√	0506
2011	Chevrolet	Avalanche - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2011	Chevrolet	Avalanche - 4WD	Transmission control module		√	√	√	√	
2011	Chevrolet	Avalanche - 4WD	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Avalanche - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Chevrolet	Avalanche - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Avalanche - 4WD	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Avalanche - 4WD	Amplifier (bose)	√	√	√	√	√	
2011	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	0498
2011	Chevrolet	Avalanche - 4WD	Personal audio link module	√	√	√			0528
2011	Chevrolet	Avalanche - 4WD	Radio	√	√	√	√	√	
2011	Chevrolet	Avalanche - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2011	Chevrolet	Avalanche - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159

2011	Chevrolet	Avalanche - 4WD	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Avalanche - 4WD	Passenger presence system	√	√	√	√		
2011	Chevrolet	Avalanche - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Avalanche - 4WD	Memory seat module	√	√	√	√	√	
2011	Chevrolet	Avalanche - 4WD	Rear heated seat module	√	√	√	√		
2011	Chevrolet	Avalanche - 4WD	Park assist module	√	√	√	√		
2011	Chevrolet	Avalanche - 4WD	Assist step controller	√	√	√	√	√	0531
2011	Chevrolet	Avalanche - 4WD	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Avalanche - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Chevrolet	Avalanche - 4WD	Driver door switch	√	√	√	√	√	
2011	Chevrolet	Avalanche - 4WD	Passenger door switch	√	√	√	√	√	
2011	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Avalanche - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Avalanche - 4WD	Electronic suension control	√	√	√	√	√	0532
2011	Chevrolet	Avalanche - 4WD	FPCM with trailer brake control	√	√	√	√	√	0506
2011	Chevrolet	Avalanche - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2011	Chevrolet	Avalanche - 4WD	Transmission control module	√	√	√	√	√	
2011	Chevrolet	Avalanche - 4WD	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Avalanche - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Chevrolet	Avalanche - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Avalanche - 4WD	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Avalanche - 4WD	Amplifier (bose)	√	√	√	√	√	
2011	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	0498
2011	Chevrolet	Avalanche - 4WD	Personal audio link module	√	√	√			0528
2011	Chevrolet	Avalanche - 4WD	Radio	√	√	√	√	√	
2011	Chevrolet	Avalanche - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2011	Chevrolet	Avalanche - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Avalanche - 4WD	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Avalanche - 4WD	Passenger presence system	√	√	√	√		
2011	Chevrolet	Avalanche - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Avalanche - 4WD	Memory seat module	√	√	√	√	√	
2011	Chevrolet	Avalanche - 4WD	Rear heated seat module	√	√	√	√		
2011	Chevrolet	Avalanche - 4WD	Park assist module	√	√	√	√		
2011	Chevrolet	Avalanche - 4WD	Assist step controller	√	√	√	√	√	0531
2011	Chevrolet	Avalanche - 4WD	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Avalanche - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Chevrolet	Avalanche - 4WD	Driver door switch	√	√	√	√	√	
2011	Chevrolet	Avalanche - 4WD	Passenger door switch	√	√	√	√	√	
2011	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Avalanche - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Avalanche - 4WD	Electronic suension control	√	√	√	√	√	0532

2011	Chevrolet	Avalanche - 4WD	FPCM with trailer brake control	√	√	√	√	√	0506
2011	Chevrolet	Avalanche - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2011	Chevrolet	N200	Engine Control Module	√	√	√	√	√	0507
2011	Chevrolet	N200	Supplemental inflatable restraint	√	√	√	√		
2011	Chevrolet	N200	Electronic Brake Control Module		√	√	√	√	0506
2011	Chevrolet	N300	Engine Control Module	√	√	√	√	√	0507
2011	Chevrolet	N300	Supplemental inflatable restraint	√	√	√	√		
2011	Chevrolet	N300	Electronic Brake Control Module		√	√	√	√	0506
2011	Chevrolet	Captiva	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Captiva	Transmission control module		√	√	√	√	
2011	Chevrolet	Captiva	Rear drive system	√	√	√	√	√	0530
2011	Chevrolet	Captiva	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Captiva	Body Control Module	√	√	√	√	√	
2011	Chevrolet	Captiva	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Captiva	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Captiva	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Captiva	HVAC Control Module	√	√	√		√	
2011	Chevrolet	Captiva	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Captiva	Electronic Brake Control Module	√	√	√	√	√	
2011	Chevrolet	Captiva ort	Transmission control module		√	√	√	√	
2011	Chevrolet	Captiva ort	Engine Control Module	√	√	√	√	√	
2011	Chevrolet	Captiva ort	Fuel Pump Control Module	√	√	√	√	√	
2011	Chevrolet	Captiva ort	Rear drive system	√	√	√	√	√	0530
2011	Chevrolet	Captiva ort	Body Control Module	√	√	√	√	√	0499 0497
2011	Chevrolet	Captiva ort	Radio	√	√	√	√	√	
2011	Chevrolet	Captiva ort	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Captiva ort	HVAC Control Module	√	√	√	√	√	0500
2011	Chevrolet	Captiva ort	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Captiva ort	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Captiva ort	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Captiva ort	Passenger presence system	√	√	√	√		0537
2011	Chevrolet	Captiva ort	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	Chevrolet	Captiva ort	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Captiva ort	Electronic Brake Control Module	√	√	√	√	√	
2011	Chevrolet	Captiva ort	Park Brake Control Module	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 2WD	Transmission control module		√	√	√	√	
2011	Chevrolet	Cheyenne - 2WD	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Cheyenne - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Chevrolet	Cheyenne - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Cheyenne - 2WD	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 2WD	Amplifier (bose)	√	√	√	√	√	

2011	Chevrolet	Cheyenne - 2WD	Body Control Module	√	√	√	√	√	0498
2011	Chevrolet	Cheyenne - 2WD	Chime	√	√	√		√	
2011	Chevrolet	Cheyenne - 2WD	Personal audio link module	√	√	√			0528
2011	Chevrolet	Cheyenne - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Cheyenne - 2WD	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Cheyenne - 2WD	Passenger presence system	√	√	√	√		
2011	Chevrolet	Cheyenne - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Cheyenne - 2WD	Rear heated seat module	√	√	√	√		
2011	Chevrolet	Cheyenne - 2WD	Park assist module	√	√	√	√		
2011	Chevrolet	Cheyenne - 2WD	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 2WD	Driver door switch	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 2WD	Passenger door switch	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 2WD	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Cheyenne - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Cheyenne - 2WD	Electronic suension control	√	√	√	√	√	0532
2011	Chevrolet	Cheyenne - 2WD	FPCM with trailer brake control	√	√	√	√	√	0506
2011	Chevrolet	Cheyenne - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2011	Chevrolet	Cheyenne - 2WD	Transmission control module	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 2WD	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Cheyenne - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Chevrolet	Cheyenne - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Cheyenne - 2WD	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 2WD	Amplifier (bose)	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 2WD	Body Control Module	√	√	√	√	√	0498
2011	Chevrolet	Cheyenne - 2WD	Chime	√	√	√		√	
2011	Chevrolet	Cheyenne - 2WD	Personal audio link module	√	√	√			0528
2011	Chevrolet	Cheyenne - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Cheyenne - 2WD	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Cheyenne - 2WD	Passenger presence system	√	√	√	√		
2011	Chevrolet	Cheyenne - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Cheyenne - 2WD	Rear heated seat module	√	√	√	√		
2011	Chevrolet	Cheyenne - 2WD	Park assist module	√	√	√	√		
2011	Chevrolet	Cheyenne - 2WD	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 2WD	Driver door switch	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 2WD	Passenger door switch	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 2WD	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Cheyenne - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Cheyenne - 2WD	Electronic suension control	√	√	√	√	√	0532
2011	Chevrolet	Cheyenne - 2WD	FPCM with trailer brake control	√	√	√	√	√	0506

2011	Chevrolet	Cheyenne - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2011	Chevrolet	Cheyenne - 4WD	Transmission control module		√	√	√	√	
2011	Chevrolet	Cheyenne - 4WD	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Cheyenne - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Chevrolet	Cheyenne - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Cheyenne - 4WD	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 4WD	Amplifier (bose)	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 4WD	Body Control Module	√	√	√	√	√	0498
2011	Chevrolet	Cheyenne - 4WD	Chime	√	√	√		√	
2011	Chevrolet	Cheyenne - 4WD	Personal audio link module	√	√	√			0528
2011	Chevrolet	Cheyenne - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Cheyenne - 4WD	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Cheyenne - 4WD	Passenger presence system	√	√	√	√		
2011	Chevrolet	Cheyenne - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Cheyenne - 4WD	Rear heated seat module	√	√	√	√		
2011	Chevrolet	Cheyenne - 4WD	Park assist module	√	√	√	√		
2011	Chevrolet	Cheyenne - 4WD	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 4WD	Driver door switch	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 4WD	Passenger door switch	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 4WD	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Cheyenne - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Cheyenne - 4WD	Electronic suspension control	√	√	√	√	√	0532
2011	Chevrolet	Cheyenne - 4WD	FPCM with trailer brake control	√	√	√	√	√	0506
2011	Chevrolet	Cheyenne - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2011	Chevrolet	Cheyenne - 4WD	Transmission control module		√	√	√	√	
2011	Chevrolet	Cheyenne - 4WD	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Cheyenne - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Chevrolet	Cheyenne - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Cheyenne - 4WD	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 4WD	Amplifier (bose)	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 4WD	Body Control Module	√	√	√	√	√	0498
2011	Chevrolet	Cheyenne - 4WD	Chime	√	√	√		√	
2011	Chevrolet	Cheyenne - 4WD	Personal audio link module	√	√	√			0528
2011	Chevrolet	Cheyenne - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Cheyenne - 4WD	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Cheyenne - 4WD	Passenger presence system	√	√	√	√		
2011	Chevrolet	Cheyenne - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Cheyenne - 4WD	Rear heated seat module	√	√	√	√		
2011	Chevrolet	Cheyenne - 4WD	Park assist module	√	√	√	√		

2011	Chevrolet	Cheyenne - 4WD	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 4WD	Driver door switch	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 4WD	Passenger door switch	√	√	√	√	√	
2011	Chevrolet	Cheyenne - 4WD	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Cheyenne - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Cheyenne - 4WD	Electronic suspension control	√	√	√	√	√	0532
2011	Chevrolet	Cheyenne - 4WD	FPCM with trailer brake control	√	√	√	√	√	0506
2011	Chevrolet	Cheyenne - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2011	Chevrolet	Colorado Pickup - 2WD	Transmission control module		√	√	√	√	
2011	Chevrolet	Colorado Pickup - 2WD	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Colorado Pickup - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Chevrolet	Colorado Pickup - 2WD	Digital radio receiver	√	√	√	√	√	0516
2011	Chevrolet	Colorado Pickup - 2WD	Body Control Module	√	√	√	√	√	0550 0159
2011	Chevrolet	Colorado Pickup - 2WD	Personal audio link module	√	√	√			0528
2011	Chevrolet	Colorado Pickup - 2WD	Radio	√	√	√	√		
2011	Chevrolet	Colorado Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0495
2011	Chevrolet	Colorado Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Colorado Pickup - 2WD	Theft Deterrent Module	√	√	√	√		0170
2011	Chevrolet	Colorado Pickup - 2WD	Passenger presence system		√	√			0517
2011	Chevrolet	Colorado Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2011	Chevrolet	Colorado Pickup - 2WD	Generator battery control module	√	√	√	√	√	0516
2011	Chevrolet	Colorado Pickup - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2011	Chevrolet	Colorado Pickup - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2011	Chevrolet	Colorado Pickup - 4WD	Transmission control module		√	√	√	√	
2011	Chevrolet	Colorado Pickup - 4WD	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Colorado Pickup - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Chevrolet	Colorado Pickup - 4WD	Digital radio receiver	√	√	√	√	√	0516
2011	Chevrolet	Colorado Pickup - 4WD	Body Control Module	√	√	√	√	√	0550 0159
2011	Chevrolet	Colorado Pickup - 4WD	Personal audio link module	√	√	√			0528
2011	Chevrolet	Colorado Pickup - 4WD	Radio	√	√	√	√		
2011	Chevrolet	Colorado Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0495
2011	Chevrolet	Colorado Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Colorado Pickup - 4WD	Theft Deterrent Module	√	√	√	√		0170
2011	Chevrolet	Colorado Pickup - 4WD	Passenger presence system		√	√			0517
2011	Chevrolet	Colorado Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2011	Chevrolet	Colorado Pickup - 4WD	Generator battery control module	√	√	√	√	√	0516
2011	Chevrolet	Colorado Pickup - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2011	Chevrolet	Colorado Pickup - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2011	Chevrolet	Express	Transmission control module		√	√	√	√	
2011	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Express	Fuel Pump Control Module	√	√	√	√	√	0493

2011	Chevrolet	Express	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2011	Chevrolet	Express	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	Chevrolet	Express	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Express	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Express	Radio	√	√	√	√	√	
2011	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Express	Passenger presence system	√	√	√	√		0517
2011	Chevrolet	Express	Rollover sensor	√	√	√	√		0541
2011	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Express	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Express	Transmission control module		√	√	√	√	
2011	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Express	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Chevrolet	Express	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2011	Chevrolet	Express	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	Chevrolet	Express	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Express	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Express	Radio	√	√	√	√	√	
2011	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Express	Passenger presence system	√	√	√	√		0517
2011	Chevrolet	Express	Rollover sensor	√	√	√	√		0541
2011	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Express	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Express	Transmission control module	√	√	√	√	√	0493
2011	Chevrolet	Express	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Chevrolet	Express	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	Chevrolet	Express	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Express	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Express	Radio	√	√	√	√	√	
2011	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Express	Passenger presence system	√	√	√	√		0517
2011	Chevrolet	Express	Rollover sensor	√	√	√	√		0541
2011	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Express	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0506



2011	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Express	Transmission control module	√	√	√	√	√	0493
2011	Chevrolet	Express	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Chevrolet	Express	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	Chevrolet	Express	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Express	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Express	Radio	√	√	√	√	√	
2011	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Express	Passenger presence system	√	√	√	√		0517
2011	Chevrolet	Express	Rollover sensor	√	√	√	√		0541
2011	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Express	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	HHR	Transmission control module	√	√	√	√	√	
2011	Chevrolet	HHR	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	HHR	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	Chevrolet	HHR	Body Control Module	√	√	√	√	√	0515
2011	Chevrolet	HHR	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	HHR	Personal audio link module	√	√	√			0528
2011	Chevrolet	HHR	Radio	√	√	√	√	√	
2011	Chevrolet	HHR	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	HHR	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	HHR	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	HHR	Passenger presence system		√	√			
2011	Chevrolet	HHR	Supplemental inflatable restraint	√	√	√	√	√	0515
2011	Chevrolet	HHR	Electronic Brake Control Module	√	√	√	√	√	
2011	Chevrolet	HHR	Power steering control module	√	√	√	√	√	
2011	Chevrolet	HHR panel	Transmission control module		√	√	√	√	
2011	Chevrolet	HHR panel	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	HHR panel	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	Chevrolet	HHR panel	Body Control Module	√	√	√	√	√	0515
2011	Chevrolet	HHR panel	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	HHR panel	Personal audio link module	√	√	√			0528
2011	Chevrolet	HHR panel	Radio	√	√	√	√	√	
2011	Chevrolet	HHR panel	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	HHR panel	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	HHR panel	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	HHR panel	Passenger presence system		√	√			
2011	Chevrolet	HHR panel	Supplemental inflatable restraint	√	√	√	√	√	0515
2011	Chevrolet	HHR panel	Electronic Brake Control Module	√	√	√	√	√	

2011	Chevrolet	HHR panel	Power steering control module	√	√	√	√	√	
2011	Chevrolet	Silverado	Transmission control module		√	√	√	√	
2011	Chevrolet	Silverado	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Silverado	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Chevrolet	Silverado	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Silverado	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Silverado	Amplifier (bose)	√	√	√	√	√	
2011	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0498
2011	Chevrolet	Silverado	Personal audio link module	√	√	√			0528
2011	Chevrolet	Silverado	Radio	√	√	√	√	√	
2011	Chevrolet	Silverado	Rear HVAC/RSA	√	√	√	√	√	
2011	Chevrolet	Silverado	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Silverado	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Silverado	Passenger presence system	√	√	√	√		
2011	Chevrolet	Silverado	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Silverado	Memory seat module	√	√	√	√	√	
2011	Chevrolet	Silverado	Rear heated seat module	√	√	√	√		
2011	Chevrolet	Silverado	Park assist module	√	√	√	√		
2011	Chevrolet	Silverado	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Silverado	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Chevrolet	Silverado	Driver door switch	√	√	√	√	√	
2011	Chevrolet	Silverado	Passenger door switch	√	√	√	√	√	
2011	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Silverado	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Silverado	Electronic suspension control	√	√	√	√	√	0532
2011	Chevrolet	Silverado	Trailer brake control module	√	√	√	√	√	0506
2011	Chevrolet	Silverado	FPCM with trailer brake control	√	√	√	√	√	0506
2011	Chevrolet	Silverado	Transfer Case Control Module	√	√	√	√	√	0493
2011	Chevrolet	Silverado	Transmission control module		√	√	√	√	
2011	Chevrolet	Silverado	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Silverado	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Chevrolet	Silverado	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Silverado	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Silverado	Amplifier (bose)	√	√	√	√	√	
2011	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0498
2011	Chevrolet	Silverado	Personal audio link module	√	√	√			0528
2011	Chevrolet	Silverado	Radio	√	√	√	√	√	
2011	Chevrolet	Silverado	Rear HVAC/RSA	√	√	√	√	√	
2011	Chevrolet	Silverado	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Silverado	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Silverado	Passenger presence system	√	√	√	√		

2011	Chevrolet	Silverado	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Silverado	Memory seat module	√	√	√	√	√	
2011	Chevrolet	Silverado	Rear heated seat module	√	√	√	√		
2011	Chevrolet	Silverado	Park assist module	√	√	√	√		
2011	Chevrolet	Silverado	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Silverado	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Chevrolet	Silverado	Driver door switch	√	√	√	√	√	
2011	Chevrolet	Silverado	Passenger door switch	√	√	√	√	√	
2011	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Silverado	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Silverado	Electronic suspension control	√	√	√	√	√	0532
2011	Chevrolet	Silverado	Trailer brake control module	√	√	√	√	√	0506
2011	Chevrolet	Silverado	FPCM with trailer brake control	√	√	√	√	√	0506
2011	Chevrolet	Silverado	Transfer Case Control Module	√	√	√	√	√	0493
2011	Chevrolet	Silverado Hybrid	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Silverado Hybrid	Accessory power module	√	√	√	√	√	
2011	Chevrolet	Silverado Hybrid	Transmission control module	√	√	√	√	√	
2011	Chevrolet	Silverado Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2011	Chevrolet	Silverado Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Silverado Hybrid	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Silverado Hybrid	Amplifier (bose)	√	√	√	√	√	
2011	Chevrolet	Silverado Hybrid	Body Control Module	√	√	√	√	√	0498
2011	Chevrolet	Silverado Hybrid	Personal audio link module	√	√	√			0528
2011	Chevrolet	Silverado Hybrid	Radio	√	√	√	√	√	
2011	Chevrolet	Silverado Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2011	Chevrolet	Silverado Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Silverado Hybrid	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Silverado Hybrid	Passenger presence system	√	√	√	√		
2011	Chevrolet	Silverado Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Silverado Hybrid	Heated seat module	√	√	√	√		
2011	Chevrolet	Silverado Hybrid	Rear heated seat module	√	√	√	√		
2011	Chevrolet	Silverado Hybrid	Park assist module	√	√	√	√		
2011	Chevrolet	Silverado Hybrid	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Silverado Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Chevrolet	Silverado Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2011	Chevrolet	Silverado Hybrid	Driver door switch	√	√	√	√	√	
2011	Chevrolet	Silverado Hybrid	Passenger door switch	√	√	√	√	√	
2011	Chevrolet	Silverado Hybrid	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Silverado Hybrid	A/C compressor control module	√	√	√	√		
2011	Chevrolet	Silverado Hybrid	Power steering control module		√	√	√		0536
2011	Chevrolet	Silverado Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535

2011	Chevrolet	Silverado Hybrid	Electronic suension control	√	√	√	√	√	0532
2011	Chevrolet	Silverado Hybrid	FPCM with trailer brake control	√	√	√	√	√	0536
2011	Chevrolet	Silverado Hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Silverado Hybrid	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Silverado Hybrid	Accessory power module	√	√	√	√	√	
2011	Chevrolet	Silverado Hybrid	Transmission control module		√	√	√	√	
2011	Chevrolet	Silverado Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2011	Chevrolet	Silverado Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Silverado Hybrid	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Silverado Hybrid	Amplifier (bose)	√	√	√	√	√	
2011	Chevrolet	Silverado Hybrid	Body Control Module	√	√	√	√	√	0498
2011	Chevrolet	Silverado Hybrid	Personal audio link module	√	√	√			0528
2011	Chevrolet	Silverado Hybrid	Radio	√	√	√	√	√	
2011	Chevrolet	Silverado Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2011	Chevrolet	Silverado Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Silverado Hybrid	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Silverado Hybrid	Passenger presence system	√	√	√	√		
2011	Chevrolet	Silverado Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Silverado Hybrid	Heated seat module	√	√	√	√		
2011	Chevrolet	Silverado Hybrid	Rear heated seat module	√	√	√	√		
2011	Chevrolet	Silverado Hybrid	Park assist module	√	√	√	√		
2011	Chevrolet	Silverado Hybrid	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Silverado Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Chevrolet	Silverado Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2011	Chevrolet	Silverado Hybrid	Driver door switch	√	√	√	√	√	
2011	Chevrolet	Silverado Hybrid	Passenger door switch	√	√	√	√	√	
2011	Chevrolet	Silverado Hybrid	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Silverado Hybrid	A/C compressor control module	√	√	√	√		
2011	Chevrolet	Silverado Hybrid	Power steering control module		√	√	√		0536
2011	Chevrolet	Silverado Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2011	Chevrolet	Silverado Hybrid	Electronic suension control	√	√	√	√	√	0532
2011	Chevrolet	Silverado Hybrid	FPCM with trailer brake control	√	√	√	√	√	0536
2011	Chevrolet	Silverado Hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Suburban - 2WD	Transmission control module		√	√	√	√	
2011	Chevrolet	Suburban - 2WD	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Suburban - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Chevrolet	Suburban - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Suburban - 2WD	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Suburban - 2WD	Amplifier (bose)	√	√	√	√	√	
2011	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	0498
2011	Chevrolet	Suburban - 2WD	Personal audio link module	√	√	√			0528

2011	Chevrolet	Suburban - 2WD	Radio	√	√	√	√	√	
2011	Chevrolet	Suburban - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2011	Chevrolet	Suburban - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Suburban - 2WD	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Suburban - 2WD	Passenger presence system	√	√	√	√		
2011	Chevrolet	Suburban - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Suburban - 2WD	Memory seat module	√	√	√	√	√	
2011	Chevrolet	Suburban - 2WD	Rear heated seat module	√	√	√	√		
2011	Chevrolet	Suburban - 2WD	Park assist module	√	√	√	√		
2011	Chevrolet	Suburban - 2WD	Left side object detection module	√	√	√	√	√	
2011	Chevrolet	Suburban - 2WD	Right side object detection module	√	√	√	√		
2011	Chevrolet	Suburban - 2WD	Assist step controller	√	√	√	√	√	0531
2011	Chevrolet	Suburban - 2WD	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Suburban - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Chevrolet	Suburban - 2WD	Liftgate module	√	√	√	√	√	
2011	Chevrolet	Suburban - 2WD	Driver door switch	√	√	√	√	√	
2011	Chevrolet	Suburban - 2WD	Passenger door switch	√	√	√	√	√	
2011	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Suburban - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Suburban - 2WD	Electronic suspension control	√	√	√	√	√	0532
2011	Chevrolet	Suburban - 2WD	FPCM with trailer brake control	√	√	√	√	√	0506
2011	Chevrolet	Suburban - 2WD	Trailer brake control module	√	√	√	√	√	0506
2011	Chevrolet	Suburban - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2011	Chevrolet	Suburban - 2WD	Transmission control module		√	√	√	√	
2011	Chevrolet	Suburban - 2WD	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Suburban - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Chevrolet	Suburban - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Suburban - 2WD	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Suburban - 2WD	Amplifier (bose)	√	√	√	√	√	
2011	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	0498
2011	Chevrolet	Suburban - 2WD	Personal audio link module	√	√	√			0528
2011	Chevrolet	Suburban - 2WD	Radio	√	√	√	√	√	
2011	Chevrolet	Suburban - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2011	Chevrolet	Suburban - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Suburban - 2WD	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Suburban - 2WD	Passenger presence system	√	√	√	√		
2011	Chevrolet	Suburban - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Suburban - 2WD	Memory seat module	√	√	√	√	√	
2011	Chevrolet	Suburban - 2WD	Rear heated seat module	√	√	√	√		
2011	Chevrolet	Suburban - 2WD	Park assist module	√	√	√	√		
2011	Chevrolet	Suburban - 2WD	Left side object detection module	√	√	√	√	√	

2011	Chevrolet	Suburban - 2WD	Right side object detection module	√	√	√	√		
2011	Chevrolet	Suburban - 2WD	Assist step controller	√	√	√	√	√	0531
2011	Chevrolet	Suburban - 2WD	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Suburban - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Chevrolet	Suburban - 2WD	Liftgate module	√	√	√	√	√	
2011	Chevrolet	Suburban - 2WD	Driver door switch	√	√	√	√	√	
2011	Chevrolet	Suburban - 2WD	Passenger door switch	√	√	√	√	√	
2011	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Suburban - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Suburban - 2WD	Electronic suension control	√	√	√	√	√	0532
2011	Chevrolet	Suburban - 2WD	FPCM with trailer brake control	√	√	√	√	√	0506
2011	Chevrolet	Suburban - 2WD	Trailer brake control module	√	√	√	√	√	0506
2011	Chevrolet	Suburban - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2011	Chevrolet	Suburban - 4WD	Transmission control module		√	√	√	√	
2011	Chevrolet	Suburban - 4WD	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Suburban - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Chevrolet	Suburban - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Suburban - 4WD	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Suburban - 4WD	Amplifier (bose)	√	√	√	√	√	
2011	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	0498
2011	Chevrolet	Suburban - 4WD	Personal audio link module	√	√	√			0528
2011	Chevrolet	Suburban - 4WD	Radio	√	√	√	√	√	
2011	Chevrolet	Suburban - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2011	Chevrolet	Suburban - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Suburban - 4WD	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Suburban - 4WD	Passenger presence system	√	√	√	√		
2011	Chevrolet	Suburban - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Suburban - 4WD	Memory seat module	√	√	√	√	√	
2011	Chevrolet	Suburban - 4WD	Rear heated seat module	√	√	√	√		
2011	Chevrolet	Suburban - 4WD	Park assist module	√	√	√	√		
2011	Chevrolet	Suburban - 4WD	Left side object detection module	√	√	√	√	√	
2011	Chevrolet	Suburban - 4WD	Right side object detection module	√	√	√	√		
2011	Chevrolet	Suburban - 4WD	Assist step controller	√	√	√	√	√	0531
2011	Chevrolet	Suburban - 4WD	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Suburban - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Chevrolet	Suburban - 4WD	Liftgate module	√	√	√	√	√	
2011	Chevrolet	Suburban - 4WD	Driver door switch	√	√	√	√	√	
2011	Chevrolet	Suburban - 4WD	Passenger door switch	√	√	√	√	√	
2011	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Suburban - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Suburban - 4WD	Electronic suension control	√	√	√	√	√	0532

2011	Chevrolet	Suburban - 4WD	FPCM with trailer brake control	√	√	√	√	√	0506
2011	Chevrolet	Suburban - 4WD	Trailer brake control module	√	√	√	√	√	0506
2011	Chevrolet	Suburban - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2011	Chevrolet	Suburban - 4WD	Transmission control module		√	√	√	√	
2011	Chevrolet	Suburban - 4WD	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Suburban - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2011	Chevrolet	Suburban - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Suburban - 4WD	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Suburban - 4WD	Amplifier (bose)	√	√	√	√	√	
2011	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	0498
2011	Chevrolet	Suburban - 4WD	Personal audio link module	√	√	√			0528
2011	Chevrolet	Suburban - 4WD	Radio	√	√	√	√	√	
2011	Chevrolet	Suburban - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2011	Chevrolet	Suburban - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Suburban - 4WD	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Suburban - 4WD	Passenger presence system	√	√	√	√		
2011	Chevrolet	Suburban - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Suburban - 4WD	Memory seat module	√	√	√	√	√	
2011	Chevrolet	Suburban - 4WD	Rear heated seat module	√	√	√	√		
2011	Chevrolet	Suburban - 4WD	Park assist module	√	√	√	√		
2011	Chevrolet	Suburban - 4WD	Left side object detection module	√	√	√	√	√	
2011	Chevrolet	Suburban - 4WD	Right side object detection module	√	√	√	√		
2011	Chevrolet	Suburban - 4WD	Assist step controller	√	√	√	√	√	0531
2011	Chevrolet	Suburban - 4WD	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Suburban - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Chevrolet	Suburban - 4WD	Liftgate module	√	√	√	√	√	
2011	Chevrolet	Suburban - 4WD	Driver door switch	√	√	√	√	√	
2011	Chevrolet	Suburban - 4WD	Passenger door switch	√	√	√	√	√	
2011	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Suburban - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Suburban - 4WD	Electronic suspension control	√	√	√	√	√	0532
2011	Chevrolet	Suburban - 4WD	FPCM with trailer brake control	√	√	√	√	√	0506
2011	Chevrolet	Suburban - 4WD	Trailer brake control module	√	√	√	√	√	0506
2011	Chevrolet	Suburban - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2011	Chevrolet	Tahoe	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Tahoe	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Tahoe	Amplifier (bose)	√	√	√	√	√	
2011	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0498
2011	Chevrolet	Tahoe	Personal audio link module	√	√	√			0528
2011	Chevrolet	Tahoe	Radio	√	√	√	√	√	
2011	Chevrolet	Tahoe	Rear HVAC/RSA	√	√	√	√	√	

2011	Chevrolet	Tahoe	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Tahoe	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Tahoe	Passenger presence system	√	√	√	√		
2011	Chevrolet	Tahoe	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Tahoe	Memory seat module	√	√	√	√	√	
2011	Chevrolet	Tahoe	Rear heated seat module	√	√	√	√		
2011	Chevrolet	Tahoe	Park assist module	√	√	√	√		
2011	Chevrolet	Tahoe	Left side object detection module	√	√	√	√	√	
2011	Chevrolet	Tahoe	Right side object detection module	√	√	√	√		
2011	Chevrolet	Tahoe	Assist step controller	√	√	√	√	√	0531
2011	Chevrolet	Tahoe	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Tahoe	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Chevrolet	Tahoe	Liftgate module	√	√	√	√	√	
2011	Chevrolet	Tahoe	Driver door switch	√	√	√	√	√	
2011	Chevrolet	Tahoe	Passenger door switch	√	√	√	√	√	
2011	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Tahoe	Electronic suspension control	√	√	√	√	√	0532
2011	Chevrolet	Tahoe	FPCM with trailer brake control	√	√	√	√	√	0506
2011	Chevrolet	Tahoe	Transmission control module		√	√	√	√	
2011	Chevrolet	Tahoe	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Tahoe	Fuel Pump Control Module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Tahoe	Transfer Case Control Module	√	√	√	√	√	0493
2011	Chevrolet	Tahoe	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Tahoe	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Tahoe	Amplifier (bose)	√	√	√	√	√	
2011	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0498
2011	Chevrolet	Tahoe	Personal audio link module	√	√	√			0528
2011	Chevrolet	Tahoe	Radio	√	√	√	√	√	
2011	Chevrolet	Tahoe	Rear HVAC/RSA	√	√	√	√	√	
2011	Chevrolet	Tahoe	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Tahoe	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Tahoe	Passenger presence system	√	√	√	√		
2011	Chevrolet	Tahoe	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Tahoe	Memory seat module	√	√	√	√	√	
2011	Chevrolet	Tahoe	Rear heated seat module	√	√	√	√		
2011	Chevrolet	Tahoe	Park assist module	√	√	√	√		
2011	Chevrolet	Tahoe	Left side object detection module	√	√	√	√	√	
2011	Chevrolet	Tahoe	Right side object detection module	√	√	√	√		
2011	Chevrolet	Tahoe	Assist step controller	√	√	√	√	√	0531
2011	Chevrolet	Tahoe	Instrument panel cluster	√	√	√	√	√	



2011	Chevrolet	Tahoe	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Chevrolet	Tahoe	Liftgate module	√	√	√	√	√	
2011	Chevrolet	Tahoe	Driver door switch	√	√	√	√	√	
2011	Chevrolet	Tahoe	Passenger door switch	√	√	√	√	√	
2011	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Tahoe	Electronic suension control	√	√	√	√	√	0532
2011	Chevrolet	Tahoe	FPCM with trailer brake control	√	√	√	√	√	0506
2011	Chevrolet	Tahoe	Transmission control module		√	√	√	√	
2011	Chevrolet	Tahoe	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Tahoe	Fuel Pump Control Module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Tahoe	Transfer Case Control Module	√	√	√	√	√	0493
2011	Chevrolet	Tahoe hybrid	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Tahoe hybrid	Accessory power module	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Transmission control module		√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Fuel Pump Control Module	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Tahoe hybrid	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Amplifier (bose)	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Body Control Module	√	√	√	√	√	0498
2011	Chevrolet	Tahoe hybrid	Personal audio link module	√	√	√			0528
2011	Chevrolet	Tahoe hybrid	Radio	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Rear HVAC/RSA	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Tahoe hybrid	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Tahoe hybrid	Passenger presence system	√	√	√	√		
2011	Chevrolet	Tahoe hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Tahoe hybrid	Heated seat module	√	√	√	√		
2011	Chevrolet	Tahoe hybrid	Rear heated seat module	√	√	√	√		
2011	Chevrolet	Tahoe hybrid	Park assist module	√	√	√	√		
2011	Chevrolet	Tahoe hybrid	Left side object detection module	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Right side object detection module	√	√	√	√		
2011	Chevrolet	Tahoe hybrid	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Chevrolet	Tahoe hybrid	Serial Data Gateway Module	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Liftgate module	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Driver door switch	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Passenger door switch	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Tahoe hybrid	A/C compressor control module	√	√	√	√		
2011	Chevrolet	Tahoe hybrid	Power steering control module		√	√	√		0536

2011	Chevrolet	Tahoe hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2011	Chevrolet	Tahoe hybrid	Electronic suension control	√	√	√	√	√	0532
2011	Chevrolet	Tahoe hybrid	FPCM with trailer brake control	√	√	√	√	√	0536
2011	Chevrolet	Tahoe hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Tahoe hybrid	Engine Control Module	√	√	√	√	√	0493
2011	Chevrolet	Tahoe hybrid	Accessory power module	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Transmission control module		√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Fuel Pump Control Module	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Tahoe hybrid	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Amplifier (bose)	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Body Control Module	√	√	√	√	√	0498
2011	Chevrolet	Tahoe hybrid	Personal audio link module	√	√	√			0528
2011	Chevrolet	Tahoe hybrid	Radio	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Rear HVAC/RSA	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Tahoe hybrid	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Tahoe hybrid	Passenger presence system	√	√	√	√		
2011	Chevrolet	Tahoe hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Tahoe hybrid	Heated seat module	√	√	√	√		
2011	Chevrolet	Tahoe hybrid	Rear heated seat module	√	√	√	√		
2011	Chevrolet	Tahoe hybrid	Park assist module	√	√	√	√		
2011	Chevrolet	Tahoe hybrid	Left side object detection module	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Right side object detection module	√	√	√	√		
2011	Chevrolet	Tahoe hybrid	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Chevrolet	Tahoe hybrid	Serial Data Gateway Module	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Liftgate module	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Driver door switch	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Passenger door switch	√	√	√	√	√	
2011	Chevrolet	Tahoe hybrid	Body Control Module	√	√	√	√	√	0497
2011	Chevrolet	Tahoe hybrid	A/C compressor control module	√	√	√	√		
2011	Chevrolet	Tahoe hybrid	Power steering control module		√	√	√		0536
2011	Chevrolet	Tahoe hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2011	Chevrolet	Tahoe hybrid	Electronic suension control	√	√	√	√	√	0532
2011	Chevrolet	Tahoe hybrid	FPCM with trailer brake control	√	√	√	√	√	0536
2011	Chevrolet	Tahoe hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2011	Chevrolet	Traverse - AWD	Transmission control module		√	√	√	√	
2011	Chevrolet	Traverse - AWD	Engine Control Module	√	√	√	√	√	
2011	Chevrolet	Traverse - AWD	Fuel Pump Control Module	√	√	√	√	√	
2011	Chevrolet	Traverse - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495

2011	Chevrolet	Traverse - AWD	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Traverse - AWD	Body Control Module						0499 0497
2011	Chevrolet	Traverse - AWD	Liftgate module	√	√	√	√	√	
2011	Chevrolet	Traverse - AWD	Personal audio link module	√	√	√			0528 0529
2011	Chevrolet	Traverse - AWD	Radio	√	√	√	√	√	
2011	Chevrolet	Traverse - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Traverse - AWD	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Traverse - AWD	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Traverse - AWD	Memory seat module	√	√	√	√	√	
2011	Chevrolet	Traverse - AWD	Park assist module	√	√	√	√		
2011	Chevrolet	Traverse - AWD	Passenger presence system	√	√	√	√	√	
2011	Chevrolet	Traverse - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Traverse - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Chevrolet	Traverse - AWD	Driver door switch	√	√	√	√	√	0527
2011	Chevrolet	Traverse - AWD	Passenger door switch	√	√	√	√	√	0527
2011	Chevrolet	Traverse - AWD	Rear HVAC/RSA	√	√	√	√	√	0494 0495
2011	Chevrolet	Traverse - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Traverse - AWD	Rear drive system	√	√	√	√	√	0530
2011	Chevrolet	Traverse - FWD	Transmission control module		√	√	√	√	
2011	Chevrolet	Traverse - FWD	Engine Control Module	√	√	√	√	√	
2011	Chevrolet	Traverse - FWD	Fuel Pump Control Module	√	√	√	√	√	
2011	Chevrolet	Traverse - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	Chevrolet	Traverse - FWD	Digital radio receiver	√	√	√	√	√	
2011	Chevrolet	Traverse - FWD	Body Control Module						0499 0497
2011	Chevrolet	Traverse - FWD	Liftgate module	√	√	√	√	√	
2011	Chevrolet	Traverse - FWD	Personal audio link module	√	√	√			0528 0529
2011	Chevrolet	Traverse - FWD	Radio	√	√	√	√	√	
2011	Chevrolet	Traverse - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	Chevrolet	Traverse - FWD	Theft Deterrent Module	√	√	√	√		
2011	Chevrolet	Traverse - FWD	Instrument panel cluster	√	√	√	√	√	
2011	Chevrolet	Traverse - FWD	Memory seat module	√	√	√	√	√	
2011	Chevrolet	Traverse - FWD	Park assist module	√	√	√	√		
2011	Chevrolet	Traverse - FWD	Passenger presence system	√	√	√	√	√	
2011	Chevrolet	Traverse - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	Chevrolet	Traverse - FWD	HVAC Control Module	√	√	√	√	√	0500 0526
2011	Chevrolet	Traverse - FWD	Driver door switch	√	√	√	√	√	0527
2011	Chevrolet	Traverse - FWD	Passenger door switch	√	√	√	√	√	0527
2011	Chevrolet	Traverse - FWD	Rear HVAC/RSA	√	√	√	√	√	0494 0495
2011	Chevrolet	Traverse - FWD	Electronic Brake Control Module	√	√	√	√	√	0506
2011	Chevrolet	Traverse - FWD	Rear drive system	√	√	√	√	√	0530
2011	GMC truck	Acadia - 2WD	Transmission control module		√	√	√	√	

2011	GMC truck	Acadia - 2WD	Engine Control Module	√	√	√	√	√	
2011	GMC truck	Acadia - 2WD	Fuel Pump Control Module	√	√	√	√	√	
2011	GMC truck	Acadia - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	GMC truck	Acadia - 2WD	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Acadia - 2WD	Body Control Module						0499 0497
2011	GMC truck	Acadia - 2WD	Liftgate module	√	√	√	√	√	
2011	GMC truck	Acadia - 2WD	Personal audio link module	√	√	√			0528 0529
2011	GMC truck	Acadia - 2WD	Radio	√	√	√	√	√	
2011	GMC truck	Acadia - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Acadia - 2WD	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Acadia - 2WD	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Acadia - 2WD	Memory seat module	√	√	√	√	√	
2011	GMC truck	Acadia - 2WD	Park assist module	√	√	√	√		
2011	GMC truck	Acadia - 2WD	Passenger presence system	√	√	√	√	√	
2011	GMC truck	Acadia - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Acadia - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2011	GMC truck	Acadia - 2WD	Driver door switch	√	√	√	√	√	0527
2011	GMC truck	Acadia - 2WD	Passenger door switch	√	√	√	√	√	0527
2011	GMC truck	Acadia - 2WD	Head up dilay	√	√	√	√		
2011	GMC truck	Acadia - 2WD	Rear HVAC/RSA	√	√	√	√	√	0494 0495
2011	GMC truck	Acadia - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Acadia - 2WD	Rear drive system	√	√	√	√	√	0530
2011	GMC truck	Acadia - 4WD	Transmission control module		√	√	√	√	
2011	GMC truck	Acadia - 4WD	Engine Control Module	√	√	√	√	√	
2011	GMC truck	Acadia - 4WD	Fuel Pump Control Module	√	√	√	√	√	
2011	GMC truck	Acadia - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	GMC truck	Acadia - 4WD	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Acadia - 4WD	Body Control Module						0499 0497
2011	GMC truck	Acadia - 4WD	Liftgate module	√	√	√	√	√	
2011	GMC truck	Acadia - 4WD	Personal audio link module	√	√	√			0528 0529
2011	GMC truck	Acadia - 4WD	Radio	√	√	√	√	√	
2011	GMC truck	Acadia - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Acadia - 4WD	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Acadia - 4WD	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Acadia - 4WD	Memory seat module	√	√	√	√	√	
2011	GMC truck	Acadia - 4WD	Park assist module	√	√	√	√		
2011	GMC truck	Acadia - 4WD	Passenger presence system	√	√	√	√	√	
2011	GMC truck	Acadia - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Acadia - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2011	GMC truck	Acadia - 4WD	Driver door switch	√	√	√	√	√	0527
2011	GMC truck	Acadia - 4WD	Passenger door switch	√	√	√	√	√	0527

2011	GMC truck	Acadia - 4WD	Head up dilay	√	√	√	√		
2011	GMC truck	Acadia - 4WD	Rear HVAC/RSA	√	√	√	√	√	0494 0495
2011	GMC truck	Acadia - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Acadia - 4WD	Rear drive system	√	√	√	√	√	0530
2011	GMC truck	Canyon Pickup - 2WD	Transmission control module		√	√	√	√	
2011	GMC truck	Canyon Pickup - 2WD	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Canyon Pickup - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√	√	0516
2011	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550 0159
2011	GMC truck	Canyon Pickup - 2WD	Personal audio link module	√	√	√			0528
2011	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2011	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0495
2011	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Canyon Pickup - 2WD	Theft Deterrent Module	√	√	√	√		0170
2011	GMC truck	Canyon Pickup - 2WD	Passenger presence system		√	√			0517
2011	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2011	GMC truck	Canyon Pickup - 2WD	Generator battery control module	√	√	√	√	√	0516
2011	GMC truck	Canyon Pickup - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2011	GMC truck	Canyon Pickup - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2011	GMC truck	Canyon Pickup - 4WD	Transmission control module		√	√	√	√	
2011	GMC truck	Canyon Pickup - 4WD	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Canyon Pickup - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√	√	0516
2011	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550 0159
2011	GMC truck	Canyon Pickup - 4WD	Personal audio link module	√	√	√			0528
2011	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2011	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0495
2011	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Canyon Pickup - 4WD	Theft Deterrent Module	√	√	√	√		0170
2011	GMC truck	Canyon Pickup - 4WD	Passenger presence system		√	√			0517
2011	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2011	GMC truck	Canyon Pickup - 4WD	Generator battery control module	√	√	√	√	√	0516
2011	GMC truck	Canyon Pickup - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2011	GMC truck	Canyon Pickup - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2011	GMC truck	Savana	Transmission control module		√	√	√	√	
2011	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2011	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497

2011	GMC truck	Savana	Radio	√	√	√	√	√	
2011	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Savana	Passenger presence system	√	√	√	√		0517
2011	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2011	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Savana	Transmission control module		√	√	√	√	
2011	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2011	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Savana	Radio	√	√	√	√	√	
2011	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Savana	Passenger presence system	√	√	√	√		0517
2011	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2011	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2011	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Savana	Radio	√	√	√	√	√	
2011	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Savana	Passenger presence system	√	√	√	√		0517
2011	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2011	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2011	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495

2011	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Savana	Radio	√	√	√	√	√	
2011	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Savana	Passenger presence system	√	√	√	√		0517
2011	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2011	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Sierra	Transmission control module		√	√	√	√	
2011	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Sierra	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	
2011	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0498
2011	GMC truck	Sierra	Personal audio link module	√	√	√			0528
2011	GMC truck	Sierra	Radio	√	√	√	√	√	
2011	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	
2011	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Sierra	Passenger presence system	√	√	√	√		
2011	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Sierra	Memory seat module	√	√	√	√	√	
2011	GMC truck	Sierra	Rear heated seat module	√	√	√	√		
2011	GMC truck	Sierra	Park assist module	√	√	√	√		
2011	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2011	GMC truck	Sierra	Driver door switch	√	√	√	√	√	
2011	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	
2011	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Sierra	Electronic suspension control	√	√	√	√	√	0532
2011	GMC truck	Sierra	Trailer brake control module	√	√	√	√	√	0506
2011	GMC truck	Sierra	FPCM with trailer brake control	√	√	√	√	√	0506
2011	GMC truck	Sierra	Transfer Case Control Module	√	√	√	√	√	0493
2011	GMC truck	Sierra	Transmission control module		√	√	√	√	
2011	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496

2011	GMC truck	Sierra	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	
2011	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0498
2011	GMC truck	Sierra	Personal audio link module	√	√	√			0528
2011	GMC truck	Sierra	Radio	√	√	√	√	√	
2011	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	
2011	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Sierra	Passenger presence system	√	√	√	√		
2011	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Sierra	Memory seat module	√	√	√	√	√	
2011	GMC truck	Sierra	Rear heated seat module	√	√	√	√		
2011	GMC truck	Sierra	Park assist module	√	√	√	√		
2011	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2011	GMC truck	Sierra	Driver door switch	√	√	√	√	√	
2011	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	
2011	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Sierra	Electronic suspension control	√	√	√	√	√	0532
2011	GMC truck	Sierra	Trailer brake control module	√	√	√	√	√	0506
2011	GMC truck	Sierra	FPCM with trailer brake control	√	√	√	√	√	0506
2011	GMC truck	Sierra	Transfer Case Control Module	√	√	√	√	√	0493
2011	GMC truck	Sierra Hybrid	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Sierra Hybrid	Accessory power module	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Transmission control module		√	√	√	√	
2011	GMC truck	Sierra Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Sierra Hybrid	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Amplifier (bose)	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0498
2011	GMC truck	Sierra Hybrid	Personal audio link module	√	√	√			0528
2011	GMC truck	Sierra Hybrid	Radio	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Sierra Hybrid	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Sierra Hybrid	Passenger presence system	√	√	√	√		
2011	GMC truck	Sierra Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Sierra Hybrid	Heated seat module	√	√	√	√		
2011	GMC truck	Sierra Hybrid	Rear heated seat module	√	√	√	√		
2011	GMC truck	Sierra Hybrid	Park assist module	√	√	√	√		



2011	GMC truck	Sierra Hybrid	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2011	GMC truck	Sierra Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Driver door switch	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Passenger door switch	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Sierra Hybrid	A/C compressor control module	√	√	√	√		
2011	GMC truck	Sierra Hybrid	Power steering control module		√	√	√		0536
2011	GMC truck	Sierra Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2011	GMC truck	Sierra Hybrid	Electronic suension control	√	√	√	√	√	0532
2011	GMC truck	Sierra Hybrid	FPCM with trailer brake control	√	√	√	√	√	0536
2011	GMC truck	Sierra Hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Sierra Hybrid	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Sierra Hybrid	Accessory power module	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Transmission control module		√	√	√	√	
2011	GMC truck	Sierra Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Sierra Hybrid	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Amplifier (bose)	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0498
2011	GMC truck	Sierra Hybrid	Personal audio link module	√	√	√			0528
2011	GMC truck	Sierra Hybrid	Radio	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Sierra Hybrid	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Sierra Hybrid	Passenger presence system	√	√	√	√		
2011	GMC truck	Sierra Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Sierra Hybrid	Heated seat module	√	√	√	√		
2011	GMC truck	Sierra Hybrid	Rear heated seat module	√	√	√	√		
2011	GMC truck	Sierra Hybrid	Park assist module	√	√	√	√		
2011	GMC truck	Sierra Hybrid	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2011	GMC truck	Sierra Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Driver door switch	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Passenger door switch	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Sierra Hybrid	A/C compressor control module	√	√	√	√		
2011	GMC truck	Sierra Hybrid	Power steering control module		√	√	√		0536
2011	GMC truck	Sierra Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2011	GMC truck	Sierra Hybrid	Electronic suension control	√	√	√	√	√	0532
2011	GMC truck	Sierra Hybrid	FPCM with trailer brake control	√	√	√	√	√	0536

2011	GMC truck	Sierra Hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Yukon	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Yukon	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Yukon	Amplifier (bose)	√	√	√	√	√	
2011	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0498
2011	GMC truck	Yukon	Personal audio link module	√	√	√			0528
2011	GMC truck	Yukon	Radio	√	√	√	√	√	
2011	GMC truck	Yukon	Rear HVAC/RSA	√	√	√	√	√	
2011	GMC truck	Yukon	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Yukon	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Yukon	Passenger presence system	√	√	√	√		
2011	GMC truck	Yukon	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Yukon	Memory seat module	√	√	√	√	√	
2011	GMC truck	Yukon	Rear heated seat module	√	√	√	√		
2011	GMC truck	Yukon	Park assist module	√	√	√	√		
2011	GMC truck	Yukon	Left side object detection module	√	√	√	√	√	
2011	GMC truck	Yukon	Right side object detection module	√	√	√	√		
2011	GMC truck	Yukon	Assist step controller	√	√	√	√	√	0531
2011	GMC truck	Yukon	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Yukon	HVAC Control Module	√	√	√	√	√	0500 0526
2011	GMC truck	Yukon	Liftgate module	√	√	√	√	√	
2011	GMC truck	Yukon	Driver door switch	√	√	√	√	√	
2011	GMC truck	Yukon	Passenger door switch	√	√	√	√	√	
2011	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Yukon	Electronic suspension control	√	√	√	√	√	0532
2011	GMC truck	Yukon	FPCM with trailer brake control	√	√	√	√	√	0506
2011	GMC truck	Yukon	Transmission control module		√	√	√	√	
2011	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Yukon	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Yukon	Amplifier (bose)	√	√	√	√	√	
2011	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0498
2011	GMC truck	Yukon	Personal audio link module	√	√	√			0528
2011	GMC truck	Yukon	Radio	√	√	√	√	√	
2011	GMC truck	Yukon	Rear HVAC/RSA	√	√	√	√	√	
2011	GMC truck	Yukon	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Yukon	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Yukon	Passenger presence system	√	√	√	√		

2011	GMC truck	Yukon	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Yukon	Memory seat module	√	√	√	√	√	
2011	GMC truck	Yukon	Rear heated seat module	√	√	√	√		
2011	GMC truck	Yukon	Park assist module	√	√	√	√		
2011	GMC truck	Yukon	Left side object detection module	√	√	√	√	√	
2011	GMC truck	Yukon	Right side object detection module	√	√	√	√		
2011	GMC truck	Yukon	Assist step controller	√	√	√	√	√	0531
2011	GMC truck	Yukon	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Yukon	HVAC Control Module	√	√	√	√	√	0500 0526
2011	GMC truck	Yukon	Liftgate module	√	√	√	√	√	
2011	GMC truck	Yukon	Driver door switch	√	√	√	√	√	
2011	GMC truck	Yukon	Passenger door switch	√	√	√	√	√	
2011	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Yukon	Electronic suspension control	√	√	√	√	√	0532
2011	GMC truck	Yukon	FPCM with trailer brake control	√	√	√	√	√	0506
2011	GMC truck	Yukon	Transmission control module	√	√	√	√	√	
2011	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon hybrid	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon hybrid	Accessory power module	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Transmission control module		√	√	√	√	
2011	GMC truck	Yukon hybrid	Fuel Pump Control Module	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Yukon hybrid	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Amplifier (bose)	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0498
2011	GMC truck	Yukon hybrid	Personal audio link module	√	√	√			0528
2011	GMC truck	Yukon hybrid	Radio	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Rear HVAC/RSA	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Yukon hybrid	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Passenger presence system	√	√	√	√		
2011	GMC truck	Yukon hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Yukon hybrid	Heated seat module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Rear heated seat module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Park assist module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Left side object detection module	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Right side object detection module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Assist step controller	√	√	√	√	√	0531

2011	GMC truck	Yukon hybrid	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2011	GMC truck	Yukon hybrid	Serial Data Gateway Module	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Liftgate module	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Driver door switch	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Passenger door switch	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Yukon hybrid	A/C compressor control module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Power steering control module		√	√	√		0536
2011	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2011	GMC truck	Yukon hybrid	Electronic suension control	√	√	√	√	√	0532
2011	GMC truck	Yukon hybrid	FPCM with trailer brake control	√	√	√	√	√	0536
2011	GMC truck	Yukon hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Yukon hybrid	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon hybrid	Accessory power module	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Transmission control module		√	√	√	√	
2011	GMC truck	Yukon hybrid	Fuel Pump Control Module	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Yukon hybrid	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Amplifier (bose)	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0498
2011	GMC truck	Yukon hybrid	Personal audio link module	√	√	√			0528
2011	GMC truck	Yukon hybrid	Radio	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Rear HVAC/RSA	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Yukon hybrid	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Passenger presence system	√	√	√	√		
2011	GMC truck	Yukon hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Yukon hybrid	Heated seat module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Rear heated seat module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Park assist module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Left side object detection module	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Right side object detection module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Assist step controller	√	√	√	√	√	0531
2011	GMC truck	Yukon hybrid	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2011	GMC truck	Yukon hybrid	Serial Data Gateway Module	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Liftgate module	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Driver door switch	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Passenger door switch	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0497

2011	GMC truck	Yukon hybrid	A/C compressor control module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Power steering control module		√	√	√		0536
2011	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2011	GMC truck	Yukon hybrid	Electronic suension control	√	√	√	√	√	0532
2011	GMC truck	Yukon hybrid	FPCM with trailer brake control	√	√	√	√	√	0536
2011	GMC truck	Yukon hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Yukon XL	Transmission control module		√	√	√	√	
2011	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon XL	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Yukon XL	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Yukon XL	Amplifier (bose)	√	√	√	√	√	
2011	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0498
2011	GMC truck	Yukon XL	Personal audio link module	√	√	√			0528
2011	GMC truck	Yukon XL	Radio	√	√	√	√	√	
2011	GMC truck	Yukon XL	Rear HVAC/RSA	√	√	√	√	√	
2011	GMC truck	Yukon XL	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Yukon XL	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Yukon XL	Passenger presence system	√	√	√	√		
2011	GMC truck	Yukon XL	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Yukon XL	Memory seat module	√	√	√	√	√	
2011	GMC truck	Yukon XL	Rear heated seat module	√	√	√	√		
2011	GMC truck	Yukon XL	Park assist module	√	√	√	√		
2011	GMC truck	Yukon XL	Left side object detection module	√	√	√	√	√	
2011	GMC truck	Yukon XL	Right side object detection module	√	√	√	√		
2011	GMC truck	Yukon XL	Assist step controller	√	√	√	√	√	0531
2011	GMC truck	Yukon XL	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Yukon XL	HVAC Control Module	√	√	√	√	√	0500 0526
2011	GMC truck	Yukon XL	Liftgate module	√	√	√	√	√	
2011	GMC truck	Yukon XL	Driver door switch	√	√	√	√	√	
2011	GMC truck	Yukon XL	Passenger door switch	√	√	√	√	√	
2011	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Yukon XL	Electronic suension control	√	√	√	√	√	0532
2011	GMC truck	Yukon XL	FPCM with trailer brake control	√	√	√	√	√	0506
2011	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√	√	0506
2011	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon XL	Transmission control module		√	√	√	√	
2011	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon XL	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496

2011	GMC truck	Yukon XL	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Yukon XL	Amplifier (bose)	√	√	√	√	√	
2011	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0498
2011	GMC truck	Yukon XL	Personal audio link module	√	√	√			0528
2011	GMC truck	Yukon XL	Radio	√	√	√	√	√	
2011	GMC truck	Yukon XL	Rear HVAC/RSA	√	√	√	√	√	
2011	GMC truck	Yukon XL	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Yukon XL	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Yukon XL	Passenger presence system	√	√	√	√		
2011	GMC truck	Yukon XL	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Yukon XL	Memory seat module	√	√	√	√	√	
2011	GMC truck	Yukon XL	Rear heated seat module	√	√	√	√		
2011	GMC truck	Yukon XL	Park assist module	√	√	√	√		
2011	GMC truck	Yukon XL	Left side object detection module	√	√	√	√	√	
2011	GMC truck	Yukon XL	Right side object detection module	√	√	√	√		
2011	GMC truck	Yukon XL	Assist step controller	√	√	√	√	√	0531
2011	GMC truck	Yukon XL	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Yukon XL	HVAC Control Module	√	√	√	√	√	0500 0526
2011	GMC truck	Yukon XL	Liftgate module	√	√	√	√	√	
2011	GMC truck	Yukon XL	Driver door switch	√	√	√	√	√	
2011	GMC truck	Yukon XL	Passenger door switch	√	√	√	√	√	
2011	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Yukon XL	Electronic suspension control	√	√	√	√	√	0532
2011	GMC truck	Yukon XL	FPCM with trailer brake control	√	√	√	√	√	0506
2011	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√	√	0506
2011	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493
2010	Buick	Allure	Engine Control Module	√	√	√	√	√	0323 0308 0217 0309
2010	Buick	Allure	Fuel Injector Control Module	√	√	√	√	√	
2010	Buick	Allure	Fuel Pump Control Module	√	√	√	√	√	0217
2010	Buick	Allure	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2010	Buick	Allure	Transmission Control Module	√	√	√	√	√	0016
2010	Buick	Allure	Rear Differential Clutch Control Module	√	√	√	√	√	
2010	Buick	Allure	Drive Motor Control Module	√	√	√	√		
2010	Buick	Allure	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2010	Buick	Allure	Parking Brake Control Module	√	√	√	√	√	0316
2010	Buick	Allure	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2010	Buick	Allure	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2010	Buick	Allure	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2010	Buick	Allure	Suspension Control Module	√	√	√	√	√	

2010	Buick	Allure	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2010	Buick	Allure	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2010	Buick	Allure	Passenger Presence Module	√	√	√	√	√	0322
2010	Buick	Allure	Instrument Cluster	√	√	√	√	√	0301
2010	Buick	Allure	Head-Up Dilay Module	√	√	√	√	√	
2010	Buick	Allure	Headlamp Control Module	√	√	√	√	√	
2010	Buick	Allure	Radio	√	√	√	√	√	
2010	Buick	Allure	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2010	Buick	Allure	Multimedia Player Interface Module	√	√	√	√	√	
2010	Buick	Allure	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2010	Buick	Allure	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2010	Buick	Allure	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2010	Buick	Allure	Seat Memory Control Module	√	√	√	√	√	0310
2010	Buick	Allure	Front Seat Heating Control Module	√	√	√	√	√	
2010	Buick	Allure	Rear Seat Heating Control Module	√	√	√	√	√	
2010	Buick	Allure	Keyless Entry Control Module	√	√	√	√	√	
2010	Buick	Allure	Parking Assist Control Module	√	√	√	√	√	0301
2010	Buick	Allure	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2010	Buick	Allure	Steering Column Lock Control Module	√	√	√	√	√	
2010	Buick	Allure	Battery Energy Control Module	√			√		
2010	Buick	Allure	Left Side Object Detection Control Module	√	√	√	√	√	
2010	Buick	Allure	Right Side Object Detection Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0323 0308 0217 0309
2010	Buick	LaCrosse	Fuel Injector Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Fuel Pump Control Module	√	√	√	√	√	0217
2010	Buick	LaCrosse	Hybrid Powertrain Control Module	√	√	√	√	√	0263
2010	Buick	LaCrosse	Transmission Control Module	√	√	√	√	√	0016
2010	Buick	LaCrosse	Rear Differential Clutch Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Drive Motor Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2010	Buick	LaCrosse	Parking Brake Control Module	√	√	√	√	√	0316
2010	Buick	LaCrosse	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2010	Buick	LaCrosse	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2010	Buick	LaCrosse	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2010	Buick	LaCrosse	Suension Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2010	Buick	LaCrosse	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2010	Buick	LaCrosse	Passenger Presence Module	√	√	√	√	√	0322
2010	Buick	LaCrosse	Instrument Cluster	√	√	√	√	√	0301
2010	Buick	LaCrosse	Head-Up Dilay Module	√	√	√	√	√	

2010	Buick	LaCrosse	Headlamp Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Radio	√	√	√	√	√	
2010	Buick	LaCrosse	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2010	Buick	LaCrosse	Multimedia Player Interface Module	√	√	√	√		
2010	Buick	LaCrosse	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2010	Buick	LaCrosse	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2010	Buick	LaCrosse	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2010	Buick	LaCrosse	Seat Memory Control Module	√	√	√	√	√	0310
2010	Buick	LaCrosse	Front Seat Heating Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Rear Seat Heating Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Keyless Entry Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Parking Assist Control Module	√	√	√	√	√	0301
2010	Buick	LaCrosse	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2010	Buick	LaCrosse	Steering Column Lock Control Module	√	√	√	√		
2010	Buick	LaCrosse	Battery Energy Control Module	√			√		
2010	Buick	LaCrosse	Left Side Object Detection Control Module	√	√	√	√	√	
2010	Buick	LaCrosse	Right Side Object Detection Control Module	√	√	√	√	√	
2010	Cadillac	SRX	Engine Control Module	√	√	√	√	√	0067 0308 0217 0309
2010	Cadillac	SRX	Fuel Pump Control Module	√	√	√	√	√	0217
2010	Cadillac	SRX	Transmission Control Module	√	√	√	√	√	0020 0106
2010	Cadillac	SRX	Rear Differential Clutch Control Module	√	√	√	√	√	
2010	Cadillac	SRX	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2010	Cadillac	SRX	Parking Brake Control Module	√	√	√	√	√	0316
2010	Cadillac	SRX	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2010	Cadillac	SRX	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2010	Cadillac	SRX	Suension Control Module	√	√	√	√	√	
2010	Cadillac	SRX	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2010	Cadillac	SRX	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2010	Cadillac	SRX	Passenger Presence Module	√	√	√	√		0322
2010	Cadillac	SRX	Instrument Cluster	√	√	√	√	√	0301
2010	Cadillac	SRX	Headlamp Control Module	√	√	√	√	√	
2010	Cadillac	SRX	Trailer Interface Control Module	√	√	√	√	√	0301
2010	Cadillac	SRX	Radio	√	√	√	√	√	
2010	Cadillac	SRX	Rear Audio Control Module	√	√	√	√	√	
2010	Cadillac	SRX	Digital Radio Receiver Control Module	√	√	√	√	√	0301 0301
2010	Cadillac	SRX	Multimedia Player Interface Module	√	√	√	√		
2010	Cadillac	SRX	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2010	Cadillac	SRX	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2010	Cadillac	SRX	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2010	Cadillac	SRX	Liftgate Control Module	√	√	√	√	√	0146



2010	Cadillac	SRX	Seat Memory Control Module	√	√	√	√	√	0310
2010	Cadillac	SRX	Front Seat Heating Control Module	√	√	√	√	√	
2010	Cadillac	SRX	Rear Seat Heating Control Module	√	√	√	√	√	
2010	Cadillac	SRX	Keyless Entry Control Module	√	√	√	√	√	
2010	Cadillac	SRX	Parking Assist Control Module	√	√	√	√	√	0301
2010	Cadillac	SRX	Steering Column Lock Control Module	√	√	√	√		
2010	Chevrolet	Beat	Engine Control Module	√	√	√	√	√	0133 0133 0323 0383 0096 0096 0130 0143 0265 0265 0147 0147 0098 0098 0387 0387 0382 0382 0391 0391 0094 0094 0392 0308 0393 0393 0394 0394 0135 0128 0173 0173
2010	Chevrolet	Beat	Fuel Injector Control Module	√	√	√	√	√	
2010	Chevrolet	Beat	Transmission Control Module	√	√	√	√	√	
2010	Chevrolet	Beat	Electronic Brake Control Module	√	√	√	√	√	0090
2010	Chevrolet	Beat	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2010	Chevrolet	Beat	Electric Power Steering Control Module	√	√	√	√		
2010	Chevrolet	Beat	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2010	Chevrolet	Beat	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2010	Chevrolet	Beat	Passenger Presence Module	√	√	√	√	√	0322
2010	Chevrolet	Beat	Instrument Cluster	√	√	√	√	√	
2010	Chevrolet	Camaro	Engine Control Module	√	√	√	√	√	0323 0308 0217 0309
2010	Chevrolet	Camaro	Fuel Pump Control Module	√	√	√	√	√	0217
2010	Chevrolet	Camaro	Transmission Control Module	√	√	√	√	√	0016
2010	Chevrolet	Camaro	Electronic Brake Control Module	√	√	√	√	√	0090 0225
2010	Chevrolet	Camaro	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2010	Chevrolet	Camaro	Power Steering Control Module	√	√	√	√		
2010	Chevrolet	Camaro	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2010	Chevrolet	Camaro	Suension Control Module	√	√	√	√	√	
2010	Chevrolet	Camaro	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2010	Chevrolet	Camaro	Auxiliary Gage Module	√	√	√	√	√	
2010	Chevrolet	Camaro	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172
2010	Chevrolet	Camaro	Passenger Presence Module	√	√	√	√		0322
2010	Chevrolet	Camaro	Instrument Cluster	√	√	√	√	√	0301
2010	Chevrolet	Camaro	Head-Up Dilay Module	√	√	√	√	√	
2010	Chevrolet	Camaro	Headlamp Control Module	√	√	√	√	√	0195
2010	Chevrolet	Camaro	Radio	√	√	√	√	√	
2010	Chevrolet	Camaro	Multimedia Player Interface Module	√	√	√	√		
2010	Chevrolet	Camaro	Telematic Vehicle Localization and Immobilization Control Module	√	√	√	√	√	

2010	Chevrolet	Camaro	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2010	Chevrolet	Camaro	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2010	Chevrolet	Camaro	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2010	Chevrolet	Camaro	Front Seat Heating Control Module	√	√	√	√	√	
2010	Chevrolet	Camaro	Folding Top Control Module	√	√	√	√	√	
2010	Chevrolet	Camaro	Parking Assist Control Module	√	√	√	√	√	
2010	Chevrolet	Cruze	Engine Control Module	√	√	√	√	√	0308 0217
2010	Chevrolet	Cruze	Fuel Pump Control Module	√	√	√	√	√	0217
2010	Chevrolet	Cruze	Transmission Control Module	√	√	√	√	√	0017
2010	Chevrolet	Cruze	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2010	Chevrolet	Cruze	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2010	Chevrolet	Cruze	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2010	Chevrolet	Cruze	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2010	Chevrolet	Cruze	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2010	Chevrolet	Cruze	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2010	Chevrolet	Cruze	Passenger Presence Module	√	√	√	√		0322
2010	Chevrolet	Cruze	Instrument Cluster	√	√	√	√	√	0301
2010	Chevrolet	Cruze	Trailer Interface Control Module	√	√	√	√	√	0301
2010	Chevrolet	Cruze	Radio	√	√	√	√	√	
2010	Chevrolet	Cruze	Multimedia Player Interface Module	√	√	√	√		
2010	Chevrolet	Cruze	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2010	Chevrolet	Cruze	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2010	Chevrolet	Cruze	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2010	Chevrolet	Cruze	Front Seat Heating Control Module	√	√	√	√	√	
2010	Chevrolet	Cruze	Keyless Entry Control Module	√	√	√	√	√	
2010	Chevrolet	Cruze	Parking Assist Control Module	√	√	√	√	√	
2010	Chevrolet	Cruze	Steering Column Lock Control Module	√	√	√	√		
2010	Chevrolet	Equinox	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2010	Chevrolet	Equinox	Fuel Pump Control Module	√	√	√	√	√	0217
2010	Chevrolet	Equinox	Transmission Control Module	√	√	√	√	√	0016
2010	Chevrolet	Equinox	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2010	Chevrolet	Equinox	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2010	Chevrolet	Equinox	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2010	Chevrolet	Equinox	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2010	Chevrolet	Equinox	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2010	Chevrolet	Equinox	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2010	Chevrolet	Equinox	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2010	Chevrolet	Equinox	Passenger Presence Module	√	√	√	√		0322
2010	Chevrolet	Equinox	Instrument Cluster	√	√	√	√	√	0301

2010	Chevrolet	Equinox	Radio	√	√	√	√	√	
2010	Chevrolet	Equinox	Multimedia Player Interface Module	√	√	√	√		
2010	Chevrolet	Equinox	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2010	Chevrolet	Equinox	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2010	Chevrolet	Equinox	Liftgate Control Module	√	√	√	√	√	0146
2010	Chevrolet	Equinox	Seat Memory Control Module	√	√	√	√	√	0310
2010	Chevrolet	Equinox	Front Seat Heating Control Module	√	√	√	√	√	
2010	Chevrolet	Equinox	Parking Assist Control Module	√	√	√	√	√	0301
2010	Chevrolet	Equinox	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2010	Chevrolet	Equinox	Frontview Camera Module	√	√	√	√	√	0205 0196
2010	Chevrolet	Sail	Engine Control Module	√	√	√	√	√	
2010	Chevrolet	Sail	Transmission Control Module	√	√	√	√	√	0479 0480 0153 0136
2010	Chevrolet	Sail	Electronic Brake Control Module	√	√	√	√	√	
2010	Chevrolet	Sail	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√		0064 0040 0063 0039 0227 0064 0040 0063 0039 0172 0177
2010	Chevrolet	Sail	Keyless Entry Control Module				√		
2010	Chevrolet	ark	Engine Control Module	√	√	√	√	√	0133 0133 0323 0383 0096 0096 0130 0143 0265 0265 0147 0147 0098 0098 0387 0387 0382 0382 0391 0391 0094 0094 0392 0308 0393 0393 0394 0394 0135 0128 0173 0173
2010	Chevrolet	ark	Fuel Injector Control Module	√	√	√	√	√	
2010	Chevrolet	ark	Transmission Control Module	√	√	√	√	√	
2010	Chevrolet	ark	Electronic Brake Control Module	√	√	√	√	√	0090
2010	Chevrolet	ark	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2010	Chevrolet	ark	Electric Power Steering Control Module	√	√	√	√		
2010	Chevrolet	ark	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2010	Chevrolet	ark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2010	Chevrolet	ark	Passenger Presence Module	√	√	√	√	√	0322
2010	Chevrolet	ark	Instrument Cluster	√	√	√	√	√	
2010	Alpheon	Lacetti	Engine Control Module	√	√	√	√	√	0308 0217
2010	Alpheon	Lacetti	Fuel Pump Control Module	√	√	√	√	√	0217
2010	Alpheon	Lacetti	Transmission Control Module	√	√	√	√	√	0017
2010	Alpheon	Lacetti	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2010	Alpheon	Lacetti	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2010	Alpheon	Lacetti	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2010	Alpheon	Lacetti	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2010	Alpheon	Lacetti	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159

2010	Alpheon	Lacetti	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2010	Alpheon	Lacetti	Passenger Presence Module	√	√	√	√		0322
2010	Alpheon	Lacetti	Instrument Cluster	√	√	√	√	√	0301
2010	Alpheon	Lacetti	Trailer Interface Control Module	√	√	√	√	√	0301
2010	Alpheon	Lacetti	Radio	√	√	√	√	√	
2010	Alpheon	Lacetti	Multimedia Player Interface Module	√	√	√	√		
2010	Alpheon	Lacetti	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2010	Alpheon	Lacetti	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2010	Alpheon	Lacetti	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2010	Alpheon	Lacetti	Front Seat Heating Control Module	√	√	√	√	√	
2010	Alpheon	Lacetti	Keyless Entry Control Module	√	√	√	√	√	
2010	Alpheon	Lacetti	Parking Assist Control Module	√	√	√	√	√	
2010	Alpheon	Lacetti	Steering Column Lock Control Module	√	√	√	√		
2010	Alpheon	Matiz	Engine Control Module	√	√	√	√	√	0133 0133 0323 0383 0096 0096 0130 0143 0265 0265 0147 0147 0098 0098 0387 0387 0382 0382 0391 0391 0094 0094 0392 0308 0393 0393 0394 0394 0135 0128 0173 0173
2010	Alpheon	Matiz	Fuel Injector Control Module	√	√	√	√	√	
2010	Alpheon	Matiz	Transmission Control Module	√	√	√	√	√	
2010	Alpheon	Matiz	Electronic Brake Control Module	√	√	√	√	√	0090
2010	Alpheon	Matiz	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2010	Alpheon	Matiz	Electric Power Steering Control Module	√	√	√	√		
2010	Alpheon	Matiz	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2010	Alpheon	Matiz	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2010	Alpheon	Matiz	Passenger Presence Module	√	√	√	√	√	0322
2010	Alpheon	Matiz	Instrument Cluster	√	√	√	√	√	
2010	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2010	GMC	Terrain	Fuel Pump Control Module	√	√	√	√	√	0217
2010	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0016
2010	GMC	Terrain	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2010	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2010	GMC	Terrain	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2010	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2010	GMC	Terrain	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2010	GMC	Terrain	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2010	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2010	GMC	Terrain	Passenger Presence Module	√	√	√	√		0322

2010	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0301
2010	GMC	Terrain	Radio	√	√	√	√	√	
2010	GMC	Terrain	Multimedia Player Interface Module	√	√	√	√		
2010	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2010	GMC	Terrain	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2010	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146
2010	GMC	Terrain	Seat Memory Control Module	√	√	√	√	√	0310
2010	GMC	Terrain	Front Seat Heating Control Module	√	√	√	√	√	
2010	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0301
2010	GMC	Terrain	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2010	GMC	Terrain	Frontview Camera Module	√	√	√	√	√	0205 0196
2010	Holden	Barina ark	Engine Control Module	√	√	√	√	√	0133 0133 0323 0383 0096 0096 0130 0143 0265 0265 0147 0147 0098 0098 0387 0387 0382 0382 0391 0391 0094 0094 0392 0308 0393 0393 0394 0394 0135 0128 0173 0173
2010	Holden	Barina ark	Fuel Injector Control Module	√	√	√	√	√	
2010	Holden	Barina ark	Transmission Control Module	√	√	√	√	√	
2010	Holden	Barina ark	Electronic Brake Control Module	√	√	√	√	√	0090
2010	Holden	Barina ark	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2010	Holden	Barina ark	Electric Power Steering Control Module	√	√	√	√		
2010	Holden	Barina ark	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2010	Holden	Barina ark	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	
2010	Holden	Barina ark	Passenger Presence Module	√	√	√	√	√	0322
2010	Holden	Barina ark	Instrument Cluster	√	√	√	√	√	
2010	Holden	Cruze	Engine Control Module	√	√	√	√	√	0308 0217
2010	Holden	Cruze	Fuel Pump Control Module	√	√	√	√	√	0217
2010	Holden	Cruze	Transmission Control Module	√	√	√	√	√	0017
2010	Holden	Cruze	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2010	Holden	Cruze	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2010	Holden	Cruze	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2010	Holden	Cruze	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2010	Holden	Cruze	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2010	Holden	Cruze	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2010	Holden	Cruze	Passenger Presence Module	√	√	√	√		0322
2010	Holden	Cruze	Instrument Cluster	√	√	√	√	√	0301
2010	Holden	Cruze	Trailer Interface Control Module	√	√	√	√	√	0301
2010	Holden	Cruze	Radio	√	√	√	√	√	
2010	Holden	Cruze	Multimedia Player Interface Module	√	√	√	√		

2010	Holden	Cruze	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2010	Holden	Cruze	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2010	Holden	Cruze	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2010	Holden	Cruze	Front Seat Heating Control Module	√	√	√	√	√	
2010	Holden	Cruze	Keyless Entry Control Module	√	√	√	√	√	
2010	Holden	Cruze	Parking Assist Control Module	√	√	√	√	√	
2010	Holden	Cruze	Steering Column Lock Control Module	√	√	√	√		
2010	Buick	Lucerne	Transmission control module		√	√	√	√	
2010	Buick	Lucerne	Engine Control Module	√	√	√	√	√	0493
2010	Buick	Lucerne	Digital radio receiver	√	√	√	√	√	
2010	Buick	Lucerne	Radio	√	√	√	√	√	
2010	Buick	Lucerne	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Buick	Lucerne	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Buick	Lucerne	Veh direction alert alarm warn mod	√	√	√	√	√	
2010	Buick	Lucerne	Passenger presence system	√	√	√	√		0512
2010	Buick	Lucerne	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Buick	Lucerne	Left side object detection module	√	√	√	√	√	
2010	Buick	Lucerne	Memory seat module	√	√	√	√	√	
2010	Buick	Lucerne	Park assist module	√	√	√	√	√	
2010	Buick	Lucerne	Right side object detection module	√	√	√	√		
2010	Buick	Lucerne	Theft Deterrent Module	√	√	√	√		
2010	Buick	Lucerne	Instrument panel cluster	√	√	√	√	√	
2010	Buick	Lucerne	HVAC Control Module	√	√	√	√	√	
2010	Buick	Lucerne	Driver door switch	√	√	√	√	√	
2010	Buick	Lucerne	Passenger door switch	√	√	√	√	√	
2010	Buick	Lucerne	Body Control Module	√	√	√	√	√	0499 0497
2010	Buick	Lucerne	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Buick	Lucerne	Electronic suspension control	√	√	√	√	√	
2010	Cadillac	CTS	Transmission control module		√	√	√	√	
2010	Cadillac	CTS	Fuel Pump Control Module	√	√	√	√	√	
2010	Cadillac	CTS	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	0493
2010	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	0502
2010	Cadillac	CTS	Radio	√	√	√	√	√	0503
2010	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	CTS	TV antenna module	√	√	√	√		0504 0505
2010	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2010	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	
2010	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√	√	0501
2010	Cadillac	CTS	Passenger presence system	√	√	√	√	√	
2010	Cadillac	CTS	Supplemental inflatable restraint	√	√	√	√	√	0497

2010	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0500
2010	Cadillac	CTS	Body Control Module	√	√	√	√	√	0498
2010	Cadillac	CTS	Driver door switch	√	√	√	√	√	
2010	Cadillac	CTS	Passenger door switch	√	√	√	√	√	
2010	Cadillac	CTS	Liftgate module	√	√	√	√	√	
2010	Cadillac	CTS	Body Control Module	√	√	√	√	√	0499 0497
2010	Cadillac	CTS	Park assist module	√	√	√	√	√	0502
2010	Cadillac	CTS	Park Brake Control Module	√	√	√	√	√	
2010	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Cadillac	CTS	Electronic suspension control		√	√	√	√	
2010	Cadillac	DTS	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	DTS	Transmission control module		√	√	√	√	
2010	Cadillac	DTS	Amplifier (bose)	√	√	√	√	√	
2010	Cadillac	DTS	Digital radio receiver	√	√	√	√	√	
2010	Cadillac	DTS	Radio	√	√	√	√	√	
2010	Cadillac	DTS	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	DTS	TV antenna module	√	√	√	√		0504 0505
2010	Cadillac	DTS	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Cadillac	DTS	Veh direction alert alarm warn mod	√	√	√	√	√	
2010	Cadillac	DTS	Passenger presence system	√	√	√	√		0512
2010	Cadillac	DTS	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Cadillac	DTS	Distance sensing cruise control	√	√	√	√	√	
2010	Cadillac	DTS	Driver position module	√	√	√	√	√	
2010	Cadillac	DTS	Inside rear view mirror module	√	√	√			
2010	Cadillac	DTS	Left side object detection module	√	√	√	√	√	
2010	Cadillac	DTS	Rear heated seat module	√	√	√	√		
2010	Cadillac	DTS	Right side object detection module	√	√	√	√		
2010	Cadillac	DTS	Park assist module	√	√	√	√	√	
2010	Cadillac	DTS	Theft Deterrent Module	√	√	√	√		
2010	Cadillac	DTS	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	DTS	HVAC Control Module	√	√	√	√	√	
2010	Cadillac	DTS	Driver door switch	√	√	√	√	√	0527
2010	Cadillac	DTS	Passenger door switch	√	√	√	√	√	0527
2010	Cadillac	DTS	Body Control Module	√	√	√	√	√	0499 0497
2010	Cadillac	DTS	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Cadillac	DTS	Electronic suspension control	√	√	√	√	√	
2010	Cadillac	STS	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	STS	Transmission control module	√	√	√	√	√	
2010	Cadillac	STS	Amplifier (bose)		√	√	√	√	
2010	Cadillac	STS	Digital radio receiver	√	√	√	√	√	0516

2010	Cadillac	STS	Radio	√	√	√	√		0552 0525
2010	Cadillac	STS	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Cadillac	STS	TV antenna module	√	√	√	√		
2010	Cadillac	STS	Remote control door lock receiver	√	√	√	√	√	0513 0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519
2010	Cadillac	STS	Veh direction alert alarm warn mod	√	√	√	√	√	
2010	Cadillac	STS	Passenger presence system		√	√			
2010	Cadillac	STS	Supplemental inflatable restraint	√	√	√	√	√	0559
2010	Cadillac	STS	Head up dilay	√	√	√	√	√	
2010	Cadillac	STS	Headlamp Control Module	√	√	√	√	√	
2010	Cadillac	STS	Driver position module	√	√	√	√	√	
2010	Cadillac	STS	Left side object detection module	√	√	√	√	√	
2010	Cadillac	STS	Right side object detection module	√	√	√	√		
2010	Cadillac	STS	Instrument panel cluster	√	√	√	√	√	0553 0554
2010	Cadillac	STS	Driver door module	√	√	√	√	√	0560
2010	Cadillac	STS	Driver door switch	√	√	√	√		
2010	Cadillac	STS	Instrument panel module	√	√	√	√	√	0551
2010	Cadillac	STS	Left rear door module	√	√	√	√	√	0560
2010	Cadillac	STS	Passenger door module	√	√	√	√	√	0560
2010	Cadillac	STS	Right rear door module	√	√	√	√	√	0560
2010	Cadillac	STS	Rear integration module	√	√	√	√	√	
2010	Cadillac	STS	Distance sensing cruise control	√	√	√	√	√	
2010	Cadillac	STS	HVAC Control Module	√	√	√	√	√	
2010	Cadillac	STS	Steering column lock module	√	√	√	√	√	0516
2010	Cadillac	STS	Navigation radio	√	√	√	√	√	0561
2010	Cadillac	STS	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Cadillac	STS	Electronic suension control	√	√	√	√	√	
2010	Cadillac	STS	Power steering control module		√	√	√		0563 0564
2010	Cadillac	STS	Vehicle stability control module	√	√	√	√	√	0506
2010	Chevrolet	Aveo	Engine Control Module	√	√	√	√	√	0507
2010	Chevrolet	Aveo	Transmission control module	√	√	√	√	√	0493
2010	Chevrolet	Aveo	Supplemental inflatable restraint	√	√	√	√	√	
2010	Chevrolet	Aveo	Immobilizer	√	√	√	√	√	0508
2010	Chevrolet	Aveo	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Aveo	Tire pressure monitor	√	√	√	√		0510 0511
2010	Chevrolet	Aveo	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Aveo	Transmission control module	√	√	√	√	√	0493
2010	Chevrolet	Aveo	Supplemental inflatable restraint	√	√	√	√	√	
2010	Chevrolet	Aveo	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Aveo	Immobilizer	√	√	√	√	√	0508



2010	Chevrolet	Aveo	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Aveo	Radio	√	√	√			
2010	Chevrolet	Aveo	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Aveo	Passenger presence system	√	√	√	√	√	0537
2010	Chevrolet	Aveo	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Aveo	Tire pressure monitor	√	√	√	√		0510 0511
2010	Chevrolet	Cobalt	Transmission control module		√	√	√	√	
2010	Chevrolet	Cobalt	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Cobalt	Body Control Module	√	√	√	√	√	0515
2010	Chevrolet	Cobalt	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Cobalt	Personal audio link module	√	√	√			0528
2010	Chevrolet	Cobalt	Radio	√	√	√	√	√	
2010	Chevrolet	Cobalt	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Cobalt	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Cobalt	Passenger presence system		√	√			
2010	Chevrolet	Cobalt	Supplemental inflatable restraint	√	√	√	√	√	0515
2010	Chevrolet	Cobalt	Driver information center	√	√	√	√	√	
2010	Chevrolet	Cobalt	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Chevrolet	Cobalt	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Cobalt	Electronic Brake Control Module	√	√	√	√	√	
2010	Chevrolet	Cobalt	Power steering control module	√	√	√	√	√	
2010	Chevrolet	Chevrolet	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Chevrolet	Transmission control module	√	√	√	√	√	0493
2010	Chevrolet	Chevrolet	Immobilizer	√	√	√	√		0544 0545
2010	Chevrolet	Corvette	Transmission control module		√	√	√	√	
2010	Chevrolet	Corvette	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Corvette	Exhaust flow control module	√	√	√	√	√	0493
2010	Chevrolet	Corvette	Fuel Pump Control Module	√	√	√	√	√	
2010	Chevrolet	Corvette	CD changer	√	√	√	√		
2010	Chevrolet	Corvette	Digital radio receiver	√	√	√	√		0516
2010	Chevrolet	Corvette	Radio	√	√	√	√		0524 0525
2010	Chevrolet	Corvette	Vehicle comm. interface module	√	√	√	√	√	0494 0565 0495
2010	Chevrolet	Corvette	Remote control door lock receiver	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2010	Chevrolet	Corvette	Head up display	√	√	√	√	√	
2010	Chevrolet	Corvette	Passenger presence system		√	√			0512
2010	Chevrolet	Corvette	Supplemental inflatable restraint	√	√	√	√	√	0515
2010	Chevrolet	Corvette	Steering column lock module	√	√	√	√	√	
2010	Chevrolet	Corvette	Driver position module	√	√	√	√	√	0522
2010	Chevrolet	Corvette	Folding top module	√	√	√	√	√	
2010	Chevrolet	Corvette	Instrument panel cluster	√	√	√	√	√	

2010	Chevrolet	Corvette	HVAC Control Module	√	√	√	√	√	0500 0523
2010	Chevrolet	Corvette	Body Control Module	√	√	√	√	√	0515
2010	Chevrolet	Corvette	Driver door module	√	√	√	√	√	
2010	Chevrolet	Corvette	Driver door switch	√	√	√	√		
2010	Chevrolet	Corvette	Passenger door module	√	√	√	√	√	0516
2010	Chevrolet	Corvette	Navigation radio	√	√	√	√		0525
2010	Chevrolet	Corvette	Personal audio link module	√	√	√	√	√	0528
2010	Chevrolet	Corvette	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Corvette	Electronic suspension control	√	√	√	√	√	
2010	Chevrolet	Epica	Engine Control Module	√	√	√	√	√	0509
2010	Chevrolet	Epica	Transmission control module	√	√	√	√	√	0509
2010	Chevrolet	Epica	Supplemental inflatable restraint	√	√	√	√	√	
2010	Chevrolet	Epica	ISU	√	√	√	√	√	
2010	Chevrolet	Epica	Electronic Brake Control Module	√	√	√	√	√	0509
2010	Chevrolet	Impala	Transmission control module	√	√	√	√	√	
2010	Chevrolet	Impala	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Impala	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Impala	Radio	√	√	√	√	√	
2010	Chevrolet	Impala	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Impala	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Impala	Passenger presence system	√	√	√	√	√	
2010	Chevrolet	Impala	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Impala	Heated seat module	√	√	√	√		
2010	Chevrolet	Impala	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Impala	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Impala	Body Control Module	√	√	√	√	√	0499 0497
2010	Chevrolet	Impala	HVAC Control Module	√	√	√	√	√	0500
2010	Chevrolet	Impala	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Malibu	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Malibu	Transmission control module	√	√	√	√	√	0493
2010	Chevrolet	Malibu	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Malibu	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Chevrolet	Malibu	Personal audio link module	√	√	√			0528
2010	Chevrolet	Malibu	Radio	√	√	√	√	√	0525
2010	Chevrolet	Malibu	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Malibu	Passenger presence system		√	√			
2010	Chevrolet	Malibu	Supplemental inflatable restraint	√	√	√	√	√	0515
2010	Chevrolet	Malibu	Body Control Module	√	√	√	√	√	0500 0515 0548
2010	Chevrolet	Malibu	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Malibu	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Malibu	HVAC Control Module	√	√	√	√	√	0547

2010	Chevrolet	Malibu	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Malibu	Power steering control module	√	√	√	√	√	0506
2010	Chevrolet	Malibu hybrid	Starter/Generator Control Modul				√	√	
2010	Chevrolet	Malibu hybrid	Battery Energy Control Module				√	√	
2010	Chevrolet	Malibu hybrid	Transmission control module		√	√	√	√	
2010	Chevrolet	Malibu hybrid	Engine Control Module	√	√	√	√	√	0566 0567 0493
2010	Chevrolet	Malibu hybrid	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Malibu hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Chevrolet	Malibu hybrid	Personal audio link module	√	√	√			0528
2010	Chevrolet	Malibu hybrid	Radio	√	√	√	√	√	0525
2010	Chevrolet	Malibu hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Malibu hybrid	Passenger presence system		√	√			
2010	Chevrolet	Malibu hybrid	Supplemental inflatable restraint	√	√	√	√	√	0515
2010	Chevrolet	Malibu hybrid	Body Control Module	√	√	√	√	√	0500 0515 0548
2010	Chevrolet	Malibu hybrid	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Malibu hybrid	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Malibu hybrid	HVAC Control Module	√	√	√	√	√	0547
2010	Chevrolet	Malibu hybrid	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Malibu hybrid	Power steering control module	√	√	√	√	√	
2010	Chevrolet	Optra	Engine Control Module	√	√	√	√	√	0507
2010	Chevrolet	Optra	Transmission control module	√	√	√	√	√	0493
2010	Chevrolet	Optra	Supplemental inflatable restraint	√	√	√	√	√	
2010	Chevrolet	Optra	Immobilizer						0508
2010	Chevrolet	Optra	Tire pressure monitor	√	√	√	√		0510 0511
2010	Chevrolet	Optra	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	ark Classic	Transmission control module	√	√	√	√	√	
2010	Chevrolet	ark Classic	Engine Control Module	√	√	√	√	√	0507
2010	Chevrolet	ark Classic	Supplemental inflatable restraint	√	√	√	√		
2010	Chevrolet	ark Classic	Immobilizer						0508
2010	Chevrolet	ark Classic	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Others	Supplemental inflatable restraint	√	√	√	√	√	
2010	Chevrolet	Others	Immobilizer						0508
2010	Pontiac	G3	Transmission control module	√	√	√	√	√	
2010	Pontiac	G3	Engine Control Module	√	√	√	√	√	0493
2010	Pontiac	G3	Supplemental inflatable restraint	√	√	√	√	√	
2010	Pontiac	G3	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Pontiac	G3	Immobilizer	√	√	√	√	√	0508
2010	Pontiac	G3	Instrument panel cluster	√	√	√	√	√	
2010	Pontiac	G3	Radio	√	√	√			
2010	Pontiac	G3	Theft Deterrent Module	√	√	√	√		
2010	Pontiac	G3	Passenger presence system	√	√	√	√	√	0537

2010	Pontiac	G3	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Pontiac	G3	Tire pressure monitor	√	√	√	√		0510 0511
2010	Pontiac	G5	Engine Control Module	√	√	√	√	√	
2010	Pontiac	G5	Transmission control module	√	√	√	√	√	0493
2010	Pontiac	G5	Body Control Module	√	√	√	√	√	0515
2010	Pontiac	G5	Digital radio receiver	√	√	√	√	√	
2010	Pontiac	G5	Personal audio link module	√	√	√			0528
2010	Pontiac	G5	Radio	√	√	√	√	√	
2010	Pontiac	G5	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Pontiac	G5	Theft Deterrent Module	√	√	√	√		
2010	Pontiac	G5	Passenger presence system		√	√			
2010	Pontiac	G5	Supplemental inflatable restraint	√	√	√	√	√	0515
2010	Pontiac	G5	Driver information center	√	√	√	√	√	
2010	Pontiac	G5	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Pontiac	G5	Instrument panel cluster	√	√	√	√	√	
2010	Pontiac	G5	Electronic Brake Control Module	√	√	√	√	√	
2010	Pontiac	G5	Power steering control module	√	√	√	√	√	
2010	Pontiac	G6	Engine Control Module	√	√	√	√	√	0493
2010	Pontiac	G6	Transmission control module	√	√	√	√	√	0493
2010	Pontiac	G6	Digital radio receiver	√	√	√	√	√	
2010	Pontiac	G6	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Pontiac	G6	Personal audio link module	√	√	√			0528
2010	Pontiac	G6	Radio	√	√	√	√	√	0525
2010	Pontiac	G6	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Pontiac	G6	Passenger presence system		√	√			
2010	Pontiac	G6	Supplemental inflatable restraint	√	√	√	√	√	0515
2010	Pontiac	G6	Body Control Module	√	√	√	√	√	0500 0515
2010	Pontiac	G6	Folding top module	√	√	√	√	√	
2010	Pontiac	G6	Theft Deterrent Module	√	√	√	√		
2010	Pontiac	G6	Instrument panel cluster	√	√	√	√	√	
2010	Pontiac	G6	HVAC Control Module	√	√	√	√	√	
2010	Pontiac	G6	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Pontiac	G6	Power steering control module	√	√	√	√	√	
2010	Pontiac	Solstice	Engine Control Module	√	√	√	√	√	
2010	Pontiac	Solstice	Transmission control module	√	√	√	√	√	0493
2010	Pontiac	Solstice	Digital radio receiver	√	√	√	√	√	
2010	Pontiac	Solstice	Personal audio link module	√	√	√			0528
2010	Pontiac	Solstice	Radio	√	√	√	√	√	0525
2010	Pontiac	Solstice	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Pontiac	Solstice	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Pontiac	Solstice	Body Control Module	√	√	√	√	√	0515

2010	Pontiac	Solstice	Theft Deterrent Module	√	√	√	√		
2010	Pontiac	Solstice	Passenger presence system		√	√			
2010	Pontiac	Solstice	Supplemental inflatable restraint	√	√	√	√	√	0515
2010	Pontiac	Solstice	Instrument panel cluster	√	√	√	√	√	
2010	Pontiac	Solstice	Electronic Brake Control Module	√	√	√	√	√	
2010	Pontiac	Vibe - AWD	Powertrain control module	√	√	√	√	√	
2010	Pontiac	Vibe - AWD	Engine Control Module	√	√	√	√	√	
2010	Pontiac	Vibe - AWD	Serial data gateway (if equipped)				√		
2010	Pontiac	Vibe - AWD	Body Control Module		√	√	√	√	
2010	Pontiac	Vibe - AWD	Theft Deterrent Module				√	√	
2010	Pontiac	Vibe - AWD	Immobilizer		√	√	√		0568
2010	Pontiac	Vibe - AWD	Digital radio receiver	√	√	√	√		
2010	Pontiac	Vibe - AWD	Radio	√	√	√	√	√	
2010	Pontiac	Vibe - AWD	Veh. interface module	√	√	√	√	√	
2010	Pontiac	Vibe - AWD	Instrument panel cluster		√	√	√	√	0569
2010	Pontiac	Vibe - AWD	HVAC Control Module		√	√	√	√	
2010	Pontiac	Vibe - AWD	Supplemental inflatable restraint		√	√	√		
2010	Pontiac	Vibe - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Pontiac	Vibe - AWD	Tire pressure monitor	√			√		0570
2010	Pontiac	Vibe - AWD	Electronic Brake Control Module		√	√	√	√	0506
2010	Pontiac	Vibe - AWD	Power steering control module		√	√	√		0536
2010	Pontiac	Vibe - FWD	Powertrain control module	√	√	√	√	√	
2010	Pontiac	Vibe - FWD	Engine Control Module	√	√	√	√	√	
2010	Pontiac	Vibe - FWD	Serial data gateway (if equipped)				√		
2010	Pontiac	Vibe - FWD	Body Control Module		√	√	√	√	
2010	Pontiac	Vibe - FWD	Theft Deterrent Module				√	√	
2010	Pontiac	Vibe - FWD	Immobilizer		√	√	√		0568
2010	Pontiac	Vibe - FWD	Digital radio receiver	√	√	√	√		
2010	Pontiac	Vibe - FWD	Radio	√	√	√	√	√	
2010	Pontiac	Vibe - FWD	Veh. interface module	√	√	√	√	√	
2010	Pontiac	Vibe - FWD	Instrument panel cluster		√	√	√	√	0569
2010	Pontiac	Vibe - FWD	HVAC Control Module		√	√	√	√	
2010	Pontiac	Vibe - FWD	Supplemental inflatable restraint		√	√	√		
2010	Pontiac	Vibe - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Pontiac	Vibe - FWD	Tire pressure monitor	√			√		0570
2010	Pontiac	Vibe - FWD	Electronic Brake Control Module		√	√	√	√	0506
2010	Pontiac	Vibe - FWD	Power steering control module		√	√	√		0536
2010	Pontiac	Others	Supplemental inflatable restraint	√	√	√	√		
2010	Pontiac	Others	Immobilizer						0508
2010	Pontiac	Others	Engine Control Module	√	√	√	√	√	0507
2010	Saturn	SKY	Engine Control Module	√	√	√	√	√	

2010	Saturn	SKY	Transmission control module	√	√	√	√	√	0493
2010	Saturn	SKY	Digital radio receiver	√	√	√	√	√	
2010	Saturn	SKY	Personal audio link module	√	√	√			0528
2010	Saturn	SKY	Radio	√	√	√	√	√	0525
2010	Saturn	SKY	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Saturn	SKY	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Saturn	SKY	Body Control Module	√	√	√	√	√	0515
2010	Saturn	SKY	Theft Deterrent Module	√	√	√	√		
2010	Saturn	SKY	Passenger presence system		√	√			
2010	Saturn	SKY	Supplemental inflatable restraint	√	√	√	√	√	0515
2010	Saturn	SKY	Instrument panel cluster	√	√	√	√	√	
2010	Saturn	SKY	Electronic Brake Control Module	√	√	√	√	√	
2010	Saturn	Aura	Engine Control Module	√	√	√	√	√	0493
2010	Saturn	Aura	Transmission control module	√	√	√	√	√	0493
2010	Saturn	Aura	Digital radio receiver	√	√	√	√	√	
2010	Saturn	Aura	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Saturn	Aura	Personal audio link module	√	√	√			0528
2010	Saturn	Aura	Radio	√	√	√	√	√	0525
2010	Saturn	Aura	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Saturn	Aura	Passenger presence system		√	√			
2010	Saturn	Aura	Supplemental inflatable restraint	√	√	√	√	√	0515
2010	Saturn	Aura	Body Control Module	√	√	√	√	√	0500 0515
2010	Saturn	Aura	Theft Deterrent Module	√	√	√	√		
2010	Saturn	Aura	Instrument panel cluster	√	√	√	√	√	
2010	Saturn	Aura	HVAC Control Module	√	√	√	√	√	0547
2010	Saturn	Aura	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Saturn	Aura	Power steering control module	√	√	√	√	√	
2010	Saturn	Aura hybrid	Digital radio receiver	√	√	√	√	√	
2010	Saturn	Aura hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Saturn	Aura hybrid	Personal audio link module	√	√	√			0528
2010	Saturn	Aura hybrid	Radio	√	√	√	√	√	0525
2010	Saturn	Aura hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Saturn	Aura hybrid	Passenger presence system		√	√			
2010	Saturn	Aura hybrid	Supplemental inflatable restraint	√	√	√	√	√	0515
2010	Saturn	Aura hybrid	Body Control Module	√	√	√	√	√	0500 0515
2010	Saturn	Aura hybrid	Theft Deterrent Module	√	√	√	√		
2010	Saturn	Aura hybrid	Instrument panel cluster	√	√	√	√	√	
2010	Saturn	Aura hybrid	HVAC Control Module	√	√	√	√	√	0547
2010	Saturn	Aura hybrid	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Saturn	Aura hybrid	Power steering control module	√	√	√	√	√	
2010	Alpheon	Damas	Transmission control module	√	√	√	√	√	

2010	Alpheon	Damas	Engine Control Module	√	√	√	√	√	0507
2010	Alpheon	Damas	Transmission control module	√	√	√	√	√	
2010	Alpheon	Damas	Engine Control Module	√	√	√	√	√	0507
2010	Alpheon	Labo	Transmission control module	√	√	√	√	√	
2010	Alpheon	Labo	Engine Control Module	√	√	√	√	√	0507
2010	Alpheon	Labo	Transmission control module	√	√	√	√	√	
2010	Alpheon	Labo	Engine Control Module	√	√	√	√	√	0507
2010	Alpheon	Others	Transmission control module	√	√	√	√	√	
2010	Alpheon	Others	Engine Control Module	√	√	√	√	√	0507
2010	Alpheon	Others	Supplemental inflatable restraint	√	√	√	√		
2010	Alpheon	Others	Immobilizer	√	√	√	√	√	0508
2010	Alpheon	Others	ISU	√	√	√	√	√	
2010	Alpheon	Kalos	Engine Control Module	√	√	√	√	√	0507
2010	Alpheon	Kalos	Transmission control module	√	√	√	√	√	0507
2010	Alpheon	Kalos	Supplemental inflatable restraint	√	√	√	√	√	
2010	Alpheon	Kalos	Immobilizer	√	√	√	√	√	0508
2010	Alpheon	Gentra	Engine Control Module	√	√	√	√	√	0493
2010	Alpheon	Gentra	Transmission control module	√	√	√	√	√	0493
2010	Alpheon	Gentra	Supplemental inflatable restraint	√	√	√	√	√	
2010	Alpheon	Gentra	Immobilizer	√	√	√	√	√	0508
2010	Holden	Others	Engine Control Module	√	√	√	√	√	0509
2010	Holden	Others	Transmission control module	√	√	√	√	√	0509
2010	Holden	Others	Supplemental inflatable restraint	√	√	√	√	√	
2010	Holden	Others	ISU	√	√	√	√	√	
2010	Holden	Others	Electronic Brake Control Module	√	√	√	√	√	0493
2010	Holden	Others	Immobilizer						0508
2010	Holden	Others	Tire pressure monitor	√	√	√	√	√	0510 0511
2010	Buick	Enclave - AWD	Transmission control module		√	√	√	√	
2010	Buick	Enclave - AWD	Fuel Pump Control Module	√	√	√	√	√	
2010	Buick	Enclave - AWD	Engine Control Module	√	√	√	√	√	
2010	Buick	Enclave - AWD	Digital radio receiver	√	√	√	√	√	
2010	Buick	Enclave - AWD	Radio	√	√	√	√	√	
2010	Buick	Enclave - AWD	Rear HVAC/RSA	√	√	√	√	√	
2010	Buick	Enclave - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Buick	Enclave - AWD	Headlamp Control Module	√	√	√			
2010	Buick	Enclave - AWD	Personal audio link module	√	√	√			0528 0529
2010	Buick	Enclave - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Buick	Enclave - AWD	Passenger presence system	√	√	√	√	√	
2010	Buick	Enclave - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Buick	Enclave - AWD	Memory seat module	√	√	√	√	√	
2010	Buick	Enclave - AWD	Park assist module	√	√	√	√		

2010	Buick	Enclave - AWD	Theft Deterrent Module	√	√	√	√		
2010	Buick	Enclave - AWD	Instrument panel cluster	√	√	√	√	√	
2010	Buick	Enclave - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Buick	Enclave - AWD	Driver door switch	√	√	√	√	√	0527
2010	Buick	Enclave - AWD	Passenger door switch	√	√	√	√	√	0527
2010	Buick	Enclave - AWD	Body Control Module	√	√	√	√	√	0499 0497
2010	Buick	Enclave - AWD	Liftgate module	√	√	√	√	√	
2010	Buick	Enclave - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Buick	Enclave - AWD	Rear drive system	√	√	√	√	√	0530
2010	Buick	Enclave - FWD	Transmission control module		√	√	√	√	
2010	Buick	Enclave - FWD	Fuel Pump Control Module	√	√	√	√	√	
2010	Buick	Enclave - FWD	Engine Control Module	√	√	√	√	√	
2010	Buick	Enclave - FWD	Digital radio receiver	√	√	√	√	√	
2010	Buick	Enclave - FWD	Radio	√	√	√	√	√	
2010	Buick	Enclave - FWD	Rear HVAC/RSA	√	√	√	√	√	
2010	Buick	Enclave - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Buick	Enclave - FWD	Headlamp Control Module	√	√	√			
2010	Buick	Enclave - FWD	Personal audio link module	√	√	√			0528 0529
2010	Buick	Enclave - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Buick	Enclave - FWD	Passenger presence system	√	√	√	√	√	
2010	Buick	Enclave - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Buick	Enclave - FWD	Memory seat module	√	√	√	√	√	
2010	Buick	Enclave - FWD	Park assist module	√	√	√	√		
2010	Buick	Enclave - FWD	Theft Deterrent Module	√	√	√	√		
2010	Buick	Enclave - FWD	Instrument panel cluster	√	√	√	√	√	
2010	Buick	Enclave - FWD	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Buick	Enclave - FWD	Driver door switch	√	√	√	√	√	0527
2010	Buick	Enclave - FWD	Passenger door switch	√	√	√	√	√	0527
2010	Buick	Enclave - FWD	Body Control Module	√	√	√	√	√	0499 0497
2010	Buick	Enclave - FWD	Liftgate module	√	√	√	√	√	
2010	Buick	Enclave - FWD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Buick	Enclave - FWD	Rear drive system	√	√	√	√	√	0530
2010	Cadillac	Escalade	Transmission control module		√	√	√	√	
2010	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade	Digital radio receiver	√	√	√	√	√	
2010	Cadillac	Escalade	Personal audio link module	√	√	√			0528
2010	Cadillac	Escalade	Radio	√	√	√	√	√	
2010	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2010	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2010	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159



2010	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2010	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2010	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Cadillac	Escalade	Park assist module	√	√	√	√		
2010	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2010	Cadillac	Escalade	Inside rear view mirror module	√	√	√	√	√	
2010	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2010	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2010	Cadillac	Escalade	Right side object detection module	√	√	√	√		0529
2010	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2010	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2010	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2010	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0497
2010	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2010	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2010	Cadillac	Escalade	Electronic suspension control	√	√	√	√	√	0532
2010	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Cadillac	Escalade	Accessory power module	√	√	√	√	√	
2010	Cadillac	Escalade	Transmission control module		√	√	√	√	
2010	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	
2010	Cadillac	Escalade	Digital radio receiver	√	√	√	√	√	
2010	Cadillac	Escalade	Personal audio link module	√	√	√			0528
2010	Cadillac	Escalade	Radio	√	√	√	√	√	
2010	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2010	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2010	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Cadillac	Escalade	A/C compressor control module	√	√	√	√		
2010	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2010	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2010	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Cadillac	Escalade	Park assist module	√	√	√	√		
2010	Cadillac	Escalade	Inside rear view mirror module	√	√	√			
2010	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2010	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2010	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2010	Cadillac	Escalade	Right side object detection module	√	√	√	√		0529

2010	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2010	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2010	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0497
2010	Cadillac	Escalade	Serial Data Gateway Module	√	√	√	√	√	
2010	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2010	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2010	Cadillac	Escalade	Electronic suension control	√	√	√	√	√	0532
2010	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	Cadillac	Escalade	Power steering control module		√	√	√		0536
2010	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	Cadillac	Escalade	Transmission control module		√	√	√	√	
2010	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade	Digital radio receiver	√	√	√	√	√	
2010	Cadillac	Escalade	Personal audio link module	√	√	√			0528
2010	Cadillac	Escalade	Radio	√	√	√	√	√	
2010	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2010	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2010	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2010	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2010	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Cadillac	Escalade	Park assist module	√	√	√	√		
2010	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2010	Cadillac	Escalade	Inside rear view mirror module	√	√	√	√	√	
2010	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2010	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2010	Cadillac	Escalade	Right side object detection module	√	√	√	√		0529
2010	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2010	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2010	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2010	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0497
2010	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2010	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2010	Cadillac	Escalade	Electronic suension control	√	√	√	√	√	0532

2010	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Cadillac	Escalade	Accessory power module	√	√	√	√	√	
2010	Cadillac	Escalade	Transfer Case Control Module	√	√	√	√	√	
2010	Cadillac	Escalade	Transmission control module		√	√	√	√	
2010	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	
2010	Cadillac	Escalade	Digital radio receiver	√	√	√	√	√	
2010	Cadillac	Escalade	Personal audio link module	√	√	√			0528
2010	Cadillac	Escalade	Radio	√	√	√	√	√	
2010	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2010	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	
2010	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Cadillac	Escalade	A/C compressor control module	√	√	√	√		
2010	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2010	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2010	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Cadillac	Escalade	Park assist module	√	√	√	√		
2010	Cadillac	Escalade	Inside rear view mirror module	√	√	√			
2010	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2010	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2010	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2010	Cadillac	Escalade	Right side object detection module	√	√	√	√		0529
2010	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2010	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2010	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0497
2010	Cadillac	Escalade	Serial Data Gateway Module	√	√	√	√	√	
2010	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2010	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2010	Cadillac	Escalade	Electronic suspension control	√	√	√	√	√	0532
2010	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	Cadillac	Escalade	Power steering control module		√	√	√		0536
2010	Cadillac	Escalade	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	Cadillac	Escalade Hybrid	Transmission control module		√	√	√	√	
2010	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade Hybrid	Digital radio receiver	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528

2010	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		0529
2010	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Assist step controller	√	√	√	√	√	0531
2010	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2010	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0497
2010	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Electronic suspension control	√	√	√	√	√	0532
2010	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Cadillac	Escalade Hybrid	Accessory power module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Transmission control module		√	√	√	√	
2010	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Digital radio receiver	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528
2010	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Cadillac	Escalade Hybrid	A/C compressor control module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√			

2010	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		0529
2010	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2010	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0497
2010	Cadillac	Escalade Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Electronic suspension control	√	√	√	√	√	0532
2010	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	Cadillac	Escalade Hybrid	Power steering control module	√	√	√	√		0536
2010	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	Cadillac	Escalade Hybrid	Transmission control module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade Hybrid	Digital radio receiver	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528
2010	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		0529
2010	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Assist step controller	√	√	√	√	√	0531
2010	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2010	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0497

2010	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Electronic suension control	√	√	√	√	√	0532
2010	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Cadillac	Escalade Hybrid	Accessory power module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Transfer Case Control Module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Transmission control module		√	√	√	√	
2010	Cadillac	Escalade Hybrid	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	Escalade Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Digital radio receiver	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528
2010	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Cadillac	Escalade Hybrid	A/C compressor control module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√			
2010	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2010	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		0529
2010	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2010	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0497
2010	Cadillac	Escalade Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2010	Cadillac	Escalade Hybrid	Electronic suension control	√	√	√	√	√	0532
2010	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	Cadillac	Escalade Hybrid	Power steering control module		√	√	√		0536
2010	Cadillac	Escalade Hybrid	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	Cadillac	Hearse	Amplifier (bose)	√	√	√	√	√	

2010	Cadillac	Hearse	Digital radio receiver	√	√	√	√	√	
2010	Cadillac	Hearse	Radio	√	√	√	√	√	
2010	Cadillac	Hearse	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	Hearse	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Cadillac	Hearse	Passenger presence system	√	√	√	√		0512
2010	Cadillac	Hearse	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Cadillac	Hearse	Driver position module	√	√	√	√	√	
2010	Cadillac	Hearse	Rear heated seat module	√	√	√	√		
2010	Cadillac	Hearse	Theft Deterrent Module	√	√	√	√		
2010	Cadillac	Hearse	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	Hearse	HVAC Control Module	√	√	√	√	√	
2010	Cadillac	Hearse	Body Control Module	√	√	√	√	√	0499 0497
2010	Cadillac	Hearse	Driver door switch	√	√	√	√	√	
2010	Cadillac	Hearse	Passenger door switch	√	√	√	√	√	
2010	Cadillac	Hearse	Air suspension control module	√	√	√	√	√	
2010	Cadillac	Hearse	Electronic Brake Control Module	√	√	√	√		0506
2010	Cadillac	Hearse	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	Hearse	Transmission control module		√	√	√	√	
2010	Cadillac	Limousine	Amplifier (bose)	√	√	√	√	√	
2010	Cadillac	Limousine	Digital radio receiver	√	√	√	√	√	
2010	Cadillac	Limousine	Radio	√	√	√	√	√	
2010	Cadillac	Limousine	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Cadillac	Limousine	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Cadillac	Limousine	Passenger presence system	√	√	√	√		0512
2010	Cadillac	Limousine	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Cadillac	Limousine	Driver position module	√	√	√	√	√	
2010	Cadillac	Limousine	Rear heated seat module	√	√	√	√		
2010	Cadillac	Limousine	Theft Deterrent Module	√	√	√	√		
2010	Cadillac	Limousine	Instrument panel cluster	√	√	√	√	√	
2010	Cadillac	Limousine	HVAC Control Module	√	√	√	√	√	
2010	Cadillac	Limousine	Aux. HVAC control module	√			√	√	
2010	Cadillac	Limousine	Body Control Module	√	√	√	√	√	0499 0497
2010	Cadillac	Limousine	Driver door switch	√	√	√	√	√	
2010	Cadillac	Limousine	Passenger door switch	√	√	√	√	√	
2010	Cadillac	Limousine	Air suspension control module	√	√	√	√	√	
2010	Cadillac	Limousine	Electronic Brake Control Module	√	√	√	√		0506
2010	Cadillac	Limousine	Engine Control Module	√	√	√	√	√	0493
2010	Cadillac	Limousine	Transmission control module		√	√	√	√	
2010	Chevrolet	Avalanche - 2WD	Transmission control module		√	√	√	√	
2010	Chevrolet	Avalanche - 2WD	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Avalanche - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493

2010	Chevrolet	Avalanche - 2WD	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Avalanche - 2WD	Personal audio link module	√	√	√			0528
2010	Chevrolet	Avalanche - 2WD	Radio	√	√	√	√	√	
2010	Chevrolet	Avalanche - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Avalanche - 2WD	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Avalanche - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Avalanche - 2WD	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Avalanche - 2WD	Passenger presence system	√	√	√	√		
2010	Chevrolet	Avalanche - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Avalanche - 2WD	Park assist module	√	√	√	√		
2010	Chevrolet	Avalanche - 2WD	Memory seat module	√	√	√	√	√	
2010	Chevrolet	Avalanche - 2WD	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Avalanche - 2WD	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Avalanche - 2WD	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Avalanche - 2WD	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Avalanche - 2WD	Assist step controller	√	√	√	√	√	0531
2010	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Avalanche - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Avalanche - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Avalanche - 2WD	Electronic suension control	√	√	√	√	√	0532
2010	Chevrolet	Avalanche - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Avalanche - 2WD	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Chevrolet	Avalanche - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2010	Chevrolet	Avalanche - 2WD	Transmission control module		√	√	√	√	
2010	Chevrolet	Avalanche - 2WD	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Avalanche - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Avalanche - 2WD	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Avalanche - 2WD	Personal audio link module	√	√	√			0528
2010	Chevrolet	Avalanche - 2WD	Radio	√	√	√	√	√	
2010	Chevrolet	Avalanche - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Avalanche - 2WD	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Avalanche - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Avalanche - 2WD	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Avalanche - 2WD	Passenger presence system	√	√	√	√		
2010	Chevrolet	Avalanche - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Avalanche - 2WD	Park assist module	√	√	√	√		
2010	Chevrolet	Avalanche - 2WD	Memory seat module	√	√	√	√	√	
2010	Chevrolet	Avalanche - 2WD	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Avalanche - 2WD	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Avalanche - 2WD	Driver door switch	√	√	√	√	√	



2010	Chevrolet	Avalanche - 2WD	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Avalanche - 2WD	Assist step controller	√	√	√	√	√	0531
2010	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Avalanche - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Avalanche - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Avalanche - 2WD	Electronic suension control	√	√	√	√	√	0532
2010	Chevrolet	Avalanche - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Avalanche - 2WD	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Chevrolet	Avalanche - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2010	Chevrolet	Avalanche - 4WD	Transmission control module		√	√	√	√	
2010	Chevrolet	Avalanche - 4WD	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Avalanche - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Avalanche - 4WD	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Avalanche - 4WD	Personal audio link module	√	√	√			0528
2010	Chevrolet	Avalanche - 4WD	Radio	√	√	√	√	√	
2010	Chevrolet	Avalanche - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Avalanche - 4WD	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Avalanche - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Avalanche - 4WD	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Avalanche - 4WD	Passenger presence system	√	√	√	√		
2010	Chevrolet	Avalanche - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Avalanche - 4WD	Park assist module	√	√	√	√		
2010	Chevrolet	Avalanche - 4WD	Memory seat module	√	√	√	√	√	
2010	Chevrolet	Avalanche - 4WD	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Avalanche - 4WD	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Avalanche - 4WD	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Avalanche - 4WD	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Avalanche - 4WD	Assist step controller	√	√	√	√	√	0531
2010	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Avalanche - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Avalanche - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Avalanche - 4WD	Electronic suension control	√	√	√	√	√	0532
2010	Chevrolet	Avalanche - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Avalanche - 4WD	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Chevrolet	Avalanche - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2010	Chevrolet	Avalanche - 4WD	Transmission control module		√	√	√	√	
2010	Chevrolet	Avalanche - 4WD	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Avalanche - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Avalanche - 4WD	Digital radio receiver	√	√	√	√	√	

2010	Chevrolet	Avalanche - 4WD	Personal audio link module	√	√	√			0528
2010	Chevrolet	Avalanche - 4WD	Radio	√	√	√	√	√	
2010	Chevrolet	Avalanche - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Avalanche - 4WD	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Avalanche - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Avalanche - 4WD	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Avalanche - 4WD	Passenger presence system	√	√	√	√		
2010	Chevrolet	Avalanche - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Avalanche - 4WD	Park assist module	√	√	√	√		
2010	Chevrolet	Avalanche - 4WD	Memory seat module	√	√	√	√	√	
2010	Chevrolet	Avalanche - 4WD	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Avalanche - 4WD	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Avalanche - 4WD	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Avalanche - 4WD	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Avalanche - 4WD	Assist step controller	√	√	√	√	√	0531
2010	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Avalanche - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Avalanche - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Avalanche - 4WD	Electronic suension control	√	√	√	√	√	0532
2010	Chevrolet	Avalanche - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Avalanche - 4WD	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Chevrolet	Avalanche - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2010	Chevrolet	Captiva	Engine Control Module	√	√	√	√	√	0509
2010	Chevrolet	Captiva	Transmission control module	√	√	√	√	√	0509
2010	Chevrolet	Captiva	Rear drive system	√	√	√	√	√	0530
2010	Chevrolet	Captiva	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Captiva	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Captiva	Body Control Module	√	√	√	√	√	
2010	Chevrolet	Captiva	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Captiva	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Captiva	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Captiva	HVAC Control Module	√	√	√		√	
2010	Chevrolet	Captiva	Electronic Brake Control Module	√	√	√	√	√	
2010	Chevrolet	Captiva ort	Transmission control module		√	√	√	√	
2010	Chevrolet	Captiva ort	Fuel Pump Control Module	√	√	√	√	√	
2010	Chevrolet	Captiva ort	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Captiva ort	Rear drive system	√	√	√	√	√	0530
2010	Chevrolet	Captiva ort	Radio	√	√	√	√	√	
2010	Chevrolet	Captiva ort	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Captiva ort	Rollover sensor	√	√	√	√		0541

2010	Chevrolet	Captiva ort	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Captiva ort	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Captiva ort	Passenger presence system	√	√	√	√		0537
2010	Chevrolet	Captiva ort	HVAC Control Module	√	√	√	√	√	0500
2010	Chevrolet	Captiva ort	Body Control Module	√	√	√	√	√	0499 0497
2010	Chevrolet	Captiva ort	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Captiva ort	Electronic Brake Control Module	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 2WD	Transmission control module		√	√	√	√	
2010	Chevrolet	Cheyenne - 2WD	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Cheyenne - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Cheyenne - 2WD	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 2WD	Personal audio link module	√	√	√			0528
2010	Chevrolet	Cheyenne - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 2WD	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Cheyenne - 2WD	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Cheyenne - 2WD	Passenger presence system	√	√	√	√		
2010	Chevrolet	Cheyenne - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Cheyenne - 2WD	Park assist module	√	√	√	√		
2010	Chevrolet	Cheyenne - 2WD	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Cheyenne - 2WD	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 2WD	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 2WD	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 2WD	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Cheyenne - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Cheyenne - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Cheyenne - 2WD	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Chevrolet	Cheyenne - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2010	Chevrolet	Cheyenne - 2WD	Transmission control module		√	√	√	√	
2010	Chevrolet	Cheyenne - 2WD	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Cheyenne - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Cheyenne - 2WD	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 2WD	Personal audio link module	√	√	√			0528
2010	Chevrolet	Cheyenne - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 2WD	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Cheyenne - 2WD	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Cheyenne - 2WD	Passenger presence system	√	√	√	√		
2010	Chevrolet	Cheyenne - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Cheyenne - 2WD	Park assist module	√	√	√	√		
2010	Chevrolet	Cheyenne - 2WD	Rear heated seat module	√	√	√	√		

2010	Chevrolet	Cheyenne - 2WD	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 2WD	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 2WD	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 2WD	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Cheyenne - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Cheyenne - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Cheyenne - 2WD	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Chevrolet	Cheyenne - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2010	Chevrolet	Cheyenne - 4WD	Transmission control module		√	√	√	√	
2010	Chevrolet	Cheyenne - 4WD	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Cheyenne - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Cheyenne - 4WD	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 4WD	Personal audio link module	√	√	√			0528
2010	Chevrolet	Cheyenne - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 4WD	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Cheyenne - 4WD	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Cheyenne - 4WD	Passenger presence system	√	√	√	√		
2010	Chevrolet	Cheyenne - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Cheyenne - 4WD	Park assist module	√	√	√	√		
2010	Chevrolet	Cheyenne - 4WD	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Cheyenne - 4WD	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 4WD	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 4WD	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 4WD	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Cheyenne - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Cheyenne - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Cheyenne - 4WD	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Chevrolet	Cheyenne - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2010	Chevrolet	Cheyenne - 4WD	Transmission control module		√	√	√	√	
2010	Chevrolet	Cheyenne - 4WD	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Cheyenne - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Cheyenne - 4WD	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 4WD	Personal audio link module	√	√	√			0528
2010	Chevrolet	Cheyenne - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 4WD	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Cheyenne - 4WD	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Cheyenne - 4WD	Passenger presence system	√	√	√	√		
2010	Chevrolet	Cheyenne - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Cheyenne - 4WD	Park assist module	√	√	√	√		

2010	Chevrolet	Cheyenne - 4WD	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Cheyenne - 4WD	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 4WD	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 4WD	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Cheyenne - 4WD	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Cheyenne - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Cheyenne - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Cheyenne - 4WD	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Chevrolet	Cheyenne - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2010	Chevrolet	Colorado Pickup - 2WD	Transmission control module		√	√	√	√	
2010	Chevrolet	Colorado Pickup - 2WD	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Colorado Pickup - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Colorado Pickup - 2WD	Digital radio receiver	√	√	√	√	√	0516
2010	Chevrolet	Colorado Pickup - 2WD	Radio	√	√	√	√		
2010	Chevrolet	Colorado Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2010	Chevrolet	Colorado Pickup - 2WD	Generator battery control module	√	√	√	√	√	
2010	Chevrolet	Colorado Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2010	Chevrolet	Colorado Pickup - 2WD	Passenger presence system		√	√			0512
2010	Chevrolet	Colorado Pickup - 2WD	Body Control Module	√	√	√	√	√	0550 0159
2010	Chevrolet	Colorado Pickup - 2WD	Theft Deterrent Module	√	√	√	√		0170
2010	Chevrolet	Colorado Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Colorado Pickup - 2WD	Personal audio link module	√	√	√	√	√	0528
2010	Chevrolet	Colorado Pickup - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2010	Chevrolet	Colorado Pickup - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2010	Chevrolet	Colorado Pickup - 4WD	Transmission control module		√	√	√	√	
2010	Chevrolet	Colorado Pickup - 4WD	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Colorado Pickup - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Colorado Pickup - 4WD	Digital radio receiver	√	√	√	√	√	0516
2010	Chevrolet	Colorado Pickup - 4WD	Radio	√	√	√	√		
2010	Chevrolet	Colorado Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2010	Chevrolet	Colorado Pickup - 4WD	Generator battery control module	√	√	√	√	√	
2010	Chevrolet	Colorado Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2010	Chevrolet	Colorado Pickup - 4WD	Passenger presence system		√	√			0512
2010	Chevrolet	Colorado Pickup - 4WD	Body Control Module	√	√	√	√	√	0550 0159
2010	Chevrolet	Colorado Pickup - 4WD	Theft Deterrent Module	√	√	√	√		0170
2010	Chevrolet	Colorado Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Colorado Pickup - 4WD	Personal audio link module	√	√	√	√	√	0528
2010	Chevrolet	Colorado Pickup - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2010	Chevrolet	Colorado Pickup - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2010	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Express	Transmission control module	√	√	√	√	√	0493

2010	Chevrolet	Express	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Express	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2010	Chevrolet	Express	Radio	√	√	√	√	√	
2010	Chevrolet	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Express	Passenger presence system	√	√	√	√		0537
2010	Chevrolet	Express	Rollover sensor	√	√	√	√		0541
2010	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Express	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Express	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Express	Transmission control module	√	√	√	√	√	0493
2010	Chevrolet	Express	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Express	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2010	Chevrolet	Express	Radio	√	√	√	√	√	
2010	Chevrolet	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Express	Passenger presence system	√	√	√	√		0537
2010	Chevrolet	Express	Rollover sensor	√	√	√	√		0541
2010	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Express	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Express	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Express	Transmission control module		√	√	√	√	
2010	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Express	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Express	Radio	√	√	√	√	√	
2010	Chevrolet	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Express	Passenger presence system	√	√	√	√		0537
2010	Chevrolet	Express	Rollover sensor	√	√	√	√		0541
2010	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Express	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Express	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Express	Transmission control module		√	√	√	√	
2010	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Express	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Express	Radio	√	√	√	√	√	
2010	Chevrolet	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159

2010	Chevrolet	Express	Passenger presence system	√	√	√	√		0537
2010	Chevrolet	Express	Rollover sensor	√	√	√	√		0541
2010	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Express	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Express	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	HHR	Transmission control module		√	√	√	√	
2010	Chevrolet	HHR	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	HHR	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	HHR	Personal audio link module	√	√	√			0528
2010	Chevrolet	HHR	Radio	√	√	√	√	√	
2010	Chevrolet	HHR	Body Control Module	√	√	√	√	√	0515
2010	Chevrolet	HHR	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	HHR	Passenger presence system		√	√			
2010	Chevrolet	HHR	Supplemental inflatable restraint	√	√	√	√	√	0515
2010	Chevrolet	HHR	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	HHR	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	HHR	Driver information center	√	√	√	√	√	
2010	Chevrolet	HHR	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	HHR	Electronic Brake Control Module	√	√	√	√	√	
2010	Chevrolet	HHR	Power steering control module	√	√	√	√	√	
2010	Chevrolet	HHR panel	Transmission control module		√	√	√	√	
2010	Chevrolet	HHR panel	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	HHR panel	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	HHR panel	Personal audio link module	√	√	√			0528
2010	Chevrolet	HHR panel	Radio	√	√	√	√	√	
2010	Chevrolet	HHR panel	Body Control Module	√	√	√	√	√	0515
2010	Chevrolet	HHR panel	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	HHR panel	Passenger presence system		√	√			
2010	Chevrolet	HHR panel	Supplemental inflatable restraint	√	√	√	√	√	0515
2010	Chevrolet	HHR panel	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	HHR panel	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	HHR panel	Driver information center	√	√	√	√	√	
2010	Chevrolet	HHR panel	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	HHR panel	Electronic Brake Control Module	√	√	√	√	√	
2010	Chevrolet	HHR panel	Power steering control module	√	√	√	√	√	
2010	Chevrolet	Silverado	Transmission control module		√	√	√	√	
2010	Chevrolet	Silverado	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Silverado	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Silverado	Digital radio receiver	√	√	√	√	√	

2010	Chevrolet	Silverado	Personal audio link module	√	√	√			0528
2010	Chevrolet	Silverado	Radio	√	√	√	√	√	
2010	Chevrolet	Silverado	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Silverado	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Silverado	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Silverado	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Silverado	Passenger presence system	√	√	√	√		
2010	Chevrolet	Silverado	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Silverado	Park assist module	√	√	√	√		
2010	Chevrolet	Silverado	Memory seat module	√	√	√	√	√	
2010	Chevrolet	Silverado	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Silverado	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Silverado	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Silverado	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Silverado	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Silverado	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Silverado	Trailer brake control module	√	√	√	√	√	
2010	Chevrolet	Silverado	Electronic suension control	√	√	√	√	√	0532
2010	Chevrolet	Silverado	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Silverado	FPCM with trailer brake control	√	√	√	√	√	0532
2010	Chevrolet	Silverado	Accessory power module	√	√	√	√	√	
2010	Chevrolet	Silverado	Transmission control module		√	√	√	√	
2010	Chevrolet	Silverado	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Silverado	Fuel Pump Control Module	√	√	√	√	√	
2010	Chevrolet	Silverado	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Silverado	Personal audio link module	√	√	√			0528
2010	Chevrolet	Silverado	Radio	√	√	√	√	√	
2010	Chevrolet	Silverado	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Silverado	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Silverado	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Silverado	A/C compressor control module	√	√	√	√		
2010	Chevrolet	Silverado	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Silverado	Passenger presence system	√	√	√	√		
2010	Chevrolet	Silverado	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Silverado	Park assist module	√	√	√	√		
2010	Chevrolet	Silverado	Heated seat module	√	√	√	√		
2010	Chevrolet	Silverado	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Silverado	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Silverado	Driver door switch	√	√	√	√	√	



2010	Chevrolet	Silverado	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Silverado	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Silverado	Serial Data Gateway Module	√	√	√	√	√	
2010	Chevrolet	Silverado	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Silverado	Electronic suension control	√	√	√	√	√	0532
2010	Chevrolet	Silverado	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	Chevrolet	Silverado	Power steering control module		√	√	√		0536
2010	Chevrolet	Silverado	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	Chevrolet	Silverado	Transmission control module		√	√	√	√	
2010	Chevrolet	Silverado	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Silverado	Transfer Case Control Module	√	√	√	√	√	0493
2010	Chevrolet	Silverado	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Silverado	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Silverado	Personal audio link module	√	√	√			0528
2010	Chevrolet	Silverado	Radio	√	√	√	√	√	
2010	Chevrolet	Silverado	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Silverado	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Silverado	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Silverado	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Silverado	Passenger presence system	√	√	√	√		
2010	Chevrolet	Silverado	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Silverado	Park assist module	√	√	√	√		
2010	Chevrolet	Silverado	Memory seat module	√	√	√	√	√	
2010	Chevrolet	Silverado	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Silverado	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Silverado	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Silverado	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Silverado	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Silverado	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Silverado	Trailer brake control module	√	√	√	√	√	
2010	Chevrolet	Silverado	Electronic suension control	√	√	√	√	√	0532
2010	Chevrolet	Silverado	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Silverado	FPCM with trailer brake control	√	√	√	√	√	0532
2010	Chevrolet	Silverado	Accessory power module	√	√	√	√	√	
2010	Chevrolet	Silverado	Transfer Case Control Module	√	√	√	√	√	
2010	Chevrolet	Silverado	Transmission control module		√	√	√	√	
2010	Chevrolet	Silverado	Engine Control Module	√	√	√	√	√	0493

2010	Chevrolet	Silverado	Fuel Pump Control Module	√	√	√	√	√	
2010	Chevrolet	Silverado	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Silverado	Personal audio link module	√	√	√			0528
2010	Chevrolet	Silverado	Radio	√	√	√	√	√	
2010	Chevrolet	Silverado	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Silverado	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Silverado	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Silverado	A/C compressor control module	√	√	√	√		
2010	Chevrolet	Silverado	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Silverado	Passenger presence system	√	√	√	√		
2010	Chevrolet	Silverado	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Silverado	Park assist module	√	√	√	√		
2010	Chevrolet	Silverado	Heated seat module	√	√	√	√		
2010	Chevrolet	Silverado	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Silverado	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Silverado	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Silverado	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Silverado	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Silverado	Serial Data Gateway Module	√	√	√	√	√	
2010	Chevrolet	Silverado	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Silverado	Electronic suspension control	√	√	√	√	√	0532
2010	Chevrolet	Silverado	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	Chevrolet	Silverado	Power steering control module		√	√	√		0536
2010	Chevrolet	Silverado	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	Chevrolet	Silverado Hybrid	Transmission control module		√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Silverado Hybrid	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Silverado Hybrid	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Personal audio link module	√	√	√			0528
2010	Chevrolet	Silverado Hybrid	Radio	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Silverado Hybrid	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Silverado Hybrid	Passenger presence system	√	√	√	√		
2010	Chevrolet	Silverado Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Silverado Hybrid	Park assist module	√	√	√	√		
2010	Chevrolet	Silverado Hybrid	Memory seat module	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Rear heated seat module	√	√	√	√		

2010	Chevrolet	Silverado Hybrid	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Silverado Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Silverado Hybrid	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Silverado Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Silverado Hybrid	Trailer brake control module	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Electronic suension control	√	√	√	√	√	0532
2010	Chevrolet	Silverado Hybrid	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Silverado Hybrid	FPCM with trailer brake control	√	√	√	√	√	0532
2010	Chevrolet	Silverado Hybrid	Accessory power module	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Transmission control module		√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Silverado Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Personal audio link module	√	√	√			0528
2010	Chevrolet	Silverado Hybrid	Radio	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Silverado Hybrid	A/C compressor control module	√	√	√	√		
2010	Chevrolet	Silverado Hybrid	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Silverado Hybrid	Passenger presence system	√	√	√	√		
2010	Chevrolet	Silverado Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Silverado Hybrid	Park assist module	√	√	√	√		
2010	Chevrolet	Silverado Hybrid	Heated seat module	√	√	√	√		
2010	Chevrolet	Silverado Hybrid	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Silverado Hybrid	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Silverado Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Silverado Hybrid	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Silverado Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Silverado Hybrid	Electronic suension control	√	√	√	√	√	0532
2010	Chevrolet	Silverado Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	Chevrolet	Silverado Hybrid	Power steering control module		√	√	√		0536
2010	Chevrolet	Silverado Hybrid	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	Chevrolet	Silverado Hybrid	Transmission control module		√	√	√	√	

2010	Chevrolet	Silverado Hybrid	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Silverado Hybrid	Transfer Case Control Module	√	√	√	√	√	0493
2010	Chevrolet	Silverado Hybrid	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Silverado Hybrid	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Personal audio link module	√	√	√			0528
2010	Chevrolet	Silverado Hybrid	Radio	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Silverado Hybrid	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Silverado Hybrid	Passenger presence system	√	√	√	√		
2010	Chevrolet	Silverado Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Silverado Hybrid	Park assist module	√	√	√	√		
2010	Chevrolet	Silverado Hybrid	Memory seat module	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Silverado Hybrid	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Silverado Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Silverado Hybrid	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Silverado Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Silverado Hybrid	Trailer brake control module	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Electronic suspension control	√	√	√	√	√	0532
2010	Chevrolet	Silverado Hybrid	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Silverado Hybrid	FPCM with trailer brake control	√	√	√	√	√	0532
2010	Chevrolet	Silverado Hybrid	Accessory power module	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Transfer Case Control Module	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Transmission control module		√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Silverado Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Personal audio link module	√	√	√			0528
2010	Chevrolet	Silverado Hybrid	Radio	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Silverado Hybrid	A/C compressor control module	√	√	√	√		
2010	Chevrolet	Silverado Hybrid	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Silverado Hybrid	Passenger presence system	√	√	√	√		
2010	Chevrolet	Silverado Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497

2010	Chevrolet	Silverado Hybrid	Park assist module	√	√	√	√		
2010	Chevrolet	Silverado Hybrid	Heated seat module	√	√	√	√		
2010	Chevrolet	Silverado Hybrid	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Silverado Hybrid	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Silverado Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Silverado Hybrid	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Silverado Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2010	Chevrolet	Silverado Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Silverado Hybrid	Electronic suension control	√	√	√	√	√	0532
2010	Chevrolet	Silverado Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	Chevrolet	Silverado Hybrid	Power steering control module		√	√	√		0536
2010	Chevrolet	Silverado Hybrid	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	Chevrolet	Suburban - 2WD	Transmission control module		√	√	√	√	
2010	Chevrolet	Suburban - 2WD	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Suburban - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Suburban - 2WD	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Suburban - 2WD	Personal audio link module	√	√	√			0528
2010	Chevrolet	Suburban - 2WD	Radio	√	√	√	√	√	
2010	Chevrolet	Suburban - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Suburban - 2WD	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Suburban - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Suburban - 2WD	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Suburban - 2WD	Passenger presence system	√	√	√	√		
2010	Chevrolet	Suburban - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Suburban - 2WD	Park assist module	√	√	√	√		
2010	Chevrolet	Suburban - 2WD	Memory seat module	√	√	√	√	√	
2010	Chevrolet	Suburban - 2WD	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Suburban - 2WD	Left side object detection module	√	√	√	√	√	
2010	Chevrolet	Suburban - 2WD	Right side object detection module	√	√	√	√		
2010	Chevrolet	Suburban - 2WD	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Suburban - 2WD	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Suburban - 2WD	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Suburban - 2WD	Assist step controller	√	√	√	√	√	0531
2010	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Suburban - 2WD	Liftgate module	√	√	√	√	√	
2010	Chevrolet	Suburban - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Suburban - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496

2010	Chevrolet	Suburban - 2WD	Electronic suspension control	√	√	√	√	√	0532
2010	Chevrolet	Suburban - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Suburban - 2WD	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Chevrolet	Suburban - 2WD	Trailer brake control module	√	√	√	√	√	0506
2010	Chevrolet	Suburban - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2010	Chevrolet	Suburban - 2WD	Transmission control module		√	√	√	√	
2010	Chevrolet	Suburban - 2WD	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Suburban - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Suburban - 2WD	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Suburban - 2WD	Personal audio link module	√	√	√			0528
2010	Chevrolet	Suburban - 2WD	Radio	√	√	√	√	√	
2010	Chevrolet	Suburban - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Suburban - 2WD	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Suburban - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Suburban - 2WD	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Suburban - 2WD	Passenger presence system	√	√	√	√		
2010	Chevrolet	Suburban - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Suburban - 2WD	Park assist module	√	√	√	√		
2010	Chevrolet	Suburban - 2WD	Memory seat module	√	√	√	√	√	
2010	Chevrolet	Suburban - 2WD	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Suburban - 2WD	Left side object detection module	√	√	√	√	√	
2010	Chevrolet	Suburban - 2WD	Right side object detection module	√	√	√	√		
2010	Chevrolet	Suburban - 2WD	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Suburban - 2WD	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Suburban - 2WD	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Suburban - 2WD	Assist step controller	√	√	√	√	√	0531
2010	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Suburban - 2WD	Liftgate module	√	√	√	√	√	
2010	Chevrolet	Suburban - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Suburban - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Suburban - 2WD	Electronic suspension control	√	√	√	√	√	0532
2010	Chevrolet	Suburban - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Suburban - 2WD	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Chevrolet	Suburban - 2WD	Trailer brake control module	√	√	√	√	√	0506
2010	Chevrolet	Suburban - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2010	Chevrolet	Suburban - 4WD	Transmission control module		√	√	√	√	
2010	Chevrolet	Suburban - 4WD	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Suburban - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Suburban - 4WD	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Suburban - 4WD	Personal audio link module	√	√	√			0528

2010	Chevrolet	Suburban - 4WD	Radio	√	√	√	√	√	
2010	Chevrolet	Suburban - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Suburban - 4WD	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Suburban - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Suburban - 4WD	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Suburban - 4WD	Passenger presence system	√	√	√	√		
2010	Chevrolet	Suburban - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Suburban - 4WD	Park assist module	√	√	√	√		
2010	Chevrolet	Suburban - 4WD	Memory seat module	√	√	√	√	√	
2010	Chevrolet	Suburban - 4WD	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Suburban - 4WD	Left side object detection module	√	√	√	√	√	
2010	Chevrolet	Suburban - 4WD	Right side object detection module	√	√	√	√		
2010	Chevrolet	Suburban - 4WD	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Suburban - 4WD	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Suburban - 4WD	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Suburban - 4WD	Assist step controller	√	√	√	√	√	0531
2010	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Suburban - 4WD	Liftgate module	√	√	√	√	√	
2010	Chevrolet	Suburban - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Suburban - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Suburban - 4WD	Electronic suspension control	√	√	√	√	√	0532
2010	Chevrolet	Suburban - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Suburban - 4WD	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Chevrolet	Suburban - 4WD	Trailer brake control module	√	√	√	√	√	0506
2010	Chevrolet	Suburban - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2010	Chevrolet	Suburban - 4WD	Transmission control module		√	√	√	√	
2010	Chevrolet	Suburban - 4WD	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Suburban - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Suburban - 4WD	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Suburban - 4WD	Personal audio link module	√	√	√			0528
2010	Chevrolet	Suburban - 4WD	Radio	√	√	√	√	√	
2010	Chevrolet	Suburban - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Suburban - 4WD	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Suburban - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Suburban - 4WD	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Suburban - 4WD	Passenger presence system	√	√	√	√		
2010	Chevrolet	Suburban - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Suburban - 4WD	Park assist module	√	√	√	√		
2010	Chevrolet	Suburban - 4WD	Memory seat module	√	√	√	√	√	
2010	Chevrolet	Suburban - 4WD	Rear heated seat module	√	√	√	√		

2010	Chevrolet	Suburban - 4WD	Left side object detection module	√	√	√	√	√	
2010	Chevrolet	Suburban - 4WD	Right side object detection module	√	√	√	√		
2010	Chevrolet	Suburban - 4WD	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Suburban - 4WD	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Suburban - 4WD	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Suburban - 4WD	Assist step controller	√	√	√	√	√	0531
2010	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Suburban - 4WD	Liftgate module	√	√	√	√	√	
2010	Chevrolet	Suburban - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Suburban - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Suburban - 4WD	Electronic suspension control	√	√	√	√	√	0532
2010	Chevrolet	Suburban - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Suburban - 4WD	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Chevrolet	Suburban - 4WD	Trailer brake control module	√	√	√	√	√	0506
2010	Chevrolet	Suburban - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2010	Chevrolet	Tahoe	Transmission control module	√	√	√	√	√	
2010	Chevrolet	Tahoe	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Tahoe	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Tahoe	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Tahoe	Personal audio link module	√	√	√			0528
2010	Chevrolet	Tahoe	Radio	√	√	√	√	√	
2010	Chevrolet	Tahoe	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Tahoe	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Tahoe	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Tahoe	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Tahoe	Passenger presence system	√	√	√	√		
2010	Chevrolet	Tahoe	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Tahoe	Park assist module	√	√	√	√		
2010	Chevrolet	Tahoe	Memory seat module	√	√	√	√	√	
2010	Chevrolet	Tahoe	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Tahoe	Left side object detection module	√	√	√	√	√	
2010	Chevrolet	Tahoe	Right side object detection module	√	√	√	√		
2010	Chevrolet	Tahoe	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Tahoe	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Tahoe	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Tahoe	Assist step controller	√	√	√	√	√	0531
2010	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Tahoe	Liftgate module	√	√	√	√	√	
2010	Chevrolet	Tahoe	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0497



2010	Chevrolet	Tahoe	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Tahoe	Electronic suension control	√	√	√	√	√	0532
2010	Chevrolet	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Tahoe	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Chevrolet	Tahoe	Accessory power module	√	√	√	√	√	
2010	Chevrolet	Tahoe	Transmission control module		√	√	√	√	
2010	Chevrolet	Tahoe	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Tahoe	Fuel Pump Control Module	√	√	√	√	√	
2010	Chevrolet	Tahoe	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Tahoe	Personal audio link module	√	√	√			0528
2010	Chevrolet	Tahoe	Radio	√	√	√	√	√	
2010	Chevrolet	Tahoe	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Tahoe	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Tahoe	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Tahoe	A/C compressor control module	√	√	√	√		
2010	Chevrolet	Tahoe	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Tahoe	Passenger presence system	√	√	√	√		
2010	Chevrolet	Tahoe	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Tahoe	Park assist module	√	√	√	√		
2010	Chevrolet	Tahoe	Heated seat module	√	√	√	√		
2010	Chevrolet	Tahoe	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Tahoe	Left side object detection module	√	√	√	√	√	
2010	Chevrolet	Tahoe	Right side object detection module	√	√	√	√		
2010	Chevrolet	Tahoe	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Tahoe	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Tahoe	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Tahoe	Liftgate module	√	√	√	√	√	
2010	Chevrolet	Tahoe	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Tahoe	Serial Data Gateway Module	√	√	√	√	√	
2010	Chevrolet	Tahoe	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Tahoe	Electronic suension control	√	√	√	√	√	0532
2010	Chevrolet	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	Chevrolet	Tahoe	Power steering control module		√	√	√		0536
2010	Chevrolet	Tahoe	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	Chevrolet	Tahoe	Transmission control module		√	√	√	√	
2010	Chevrolet	Tahoe	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Tahoe	Transfer Case Control Module	√	√	√	√	√	
2010	Chevrolet	Tahoe	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Tahoe	Digital radio receiver	√	√	√	√	√	

2010	Chevrolet	Tahoe	Personal audio link module	√	√	√			0528
2010	Chevrolet	Tahoe	Radio	√	√	√	√	√	
2010	Chevrolet	Tahoe	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Tahoe	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Tahoe	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Tahoe	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Tahoe	Passenger presence system	√	√	√	√		
2010	Chevrolet	Tahoe	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Tahoe	Park assist module	√	√	√	√		
2010	Chevrolet	Tahoe	Memory seat module	√	√	√	√	√	
2010	Chevrolet	Tahoe	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Tahoe	Left side object detection module	√	√	√	√	√	
2010	Chevrolet	Tahoe	Right side object detection module	√	√	√	√		
2010	Chevrolet	Tahoe	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Tahoe	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Tahoe	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Tahoe	Assist step controller	√	√	√	√	√	0531
2010	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Tahoe	Liftgate module	√	√	√	√	√	
2010	Chevrolet	Tahoe	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Tahoe	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Tahoe	Electronic suspension control	√	√	√	√	√	0532
2010	Chevrolet	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Tahoe	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Chevrolet	Tahoe	Accessory power module	√	√	√	√	√	
2010	Chevrolet	Tahoe	Transfer Case Control Module	√	√	√	√	√	
2010	Chevrolet	Tahoe	Transmission control module		√	√	√	√	
2010	Chevrolet	Tahoe	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Tahoe	Fuel Pump Control Module	√	√	√	√	√	
2010	Chevrolet	Tahoe	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Tahoe	Personal audio link module	√	√	√			0528
2010	Chevrolet	Tahoe	Radio	√	√	√	√	√	
2010	Chevrolet	Tahoe	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Tahoe	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Tahoe	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Tahoe	A/C compressor control module	√	√	√	√		
2010	Chevrolet	Tahoe	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Tahoe	Passenger presence system	√	√	√	√		
2010	Chevrolet	Tahoe	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Tahoe	Park assist module	√	√	√	√		

2010	Chevrolet	Tahoe	Heated seat module	√	√	√	√		
2010	Chevrolet	Tahoe	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Tahoe	Left side object detection module	√	√	√	√	√	
2010	Chevrolet	Tahoe	Right side object detection module	√	√	√	√		
2010	Chevrolet	Tahoe	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Tahoe	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Tahoe	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Tahoe	Liftgate module	√	√	√	√	√	
2010	Chevrolet	Tahoe	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Tahoe	Serial Data Gateway Module	√	√	√	√	√	
2010	Chevrolet	Tahoe	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Tahoe	Electronic suspension control	√	√	√	√	√	0532
2010	Chevrolet	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	Chevrolet	Tahoe	Power steering control module	√	√	√	√		0536
2010	Chevrolet	Tahoe	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	Chevrolet	Tahoe hybrid	Transmission control module	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Tahoe hybrid	Fuel Pump Control Module	√	√	√	√	√	0493
2010	Chevrolet	Tahoe hybrid	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Personal audio link module	√	√	√			0528
2010	Chevrolet	Tahoe hybrid	Radio	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Tahoe hybrid	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Passenger presence system	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Tahoe hybrid	Park assist module	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Memory seat module	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Left side object detection module	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Right side object detection module	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Assist step controller	√	√	√	√	√	0531
2010	Chevrolet	Tahoe hybrid	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Tahoe hybrid	Liftgate module	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	HVAC Control Module	√	√	√	√	√	0500 0526

2010	Chevrolet	Tahoe hybrid	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Tahoe hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Tahoe hybrid	Electronic suension control	√	√	√	√	√	0532
2010	Chevrolet	Tahoe hybrid	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Tahoe hybrid	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Chevrolet	Tahoe hybrid	Accessory power module	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Transmission control module		√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Tahoe hybrid	Fuel Pump Control Module	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Personal audio link module	√	√	√			0528
2010	Chevrolet	Tahoe hybrid	Radio	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Tahoe hybrid	A/C compressor control module	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Passenger presence system	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Tahoe hybrid	Park assist module	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Heated seat module	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Left side object detection module	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Right side object detection module	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Tahoe hybrid	Liftgate module	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Tahoe hybrid	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Tahoe hybrid	Serial Data Gateway Module	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Tahoe hybrid	Electronic suension control	√	√	√	√	√	0532
2010	Chevrolet	Tahoe hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	Chevrolet	Tahoe hybrid	Power steering control module		√	√	√		0536
2010	Chevrolet	Tahoe hybrid	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	Chevrolet	Tahoe hybrid	Transmission control module		√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Tahoe hybrid	Transfer Case Control Module	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Fuel Pump Control Module	√	√	√	√	√	0493

2010	Chevrolet	Tahoe hybrid	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Personal audio link module	√	√	√			0528
2010	Chevrolet	Tahoe hybrid	Radio	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Tahoe hybrid	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Passenger presence system	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Tahoe hybrid	Park assist module	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Memory seat module	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Left side object detection module	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Right side object detection module	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Assist step controller	√	√	√	√	√	0531
2010	Chevrolet	Tahoe hybrid	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Tahoe hybrid	Liftgate module	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Tahoe hybrid	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Tahoe hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Tahoe hybrid	Electronic suspension control	√	√	√	√	√	0532
2010	Chevrolet	Tahoe hybrid	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Tahoe hybrid	FPCM with trailer brake control	√	√	√	√	√	0506
2010	Chevrolet	Tahoe hybrid	Accessory power module	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Transfer Case Control Module	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Transmission control module		√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Engine Control Module	√	√	√	√	√	0493
2010	Chevrolet	Tahoe hybrid	Fuel Pump Control Module	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Personal audio link module	√	√	√			0528
2010	Chevrolet	Tahoe hybrid	Radio	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Amplifier (bose)	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Tahoe hybrid	A/C compressor control module	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Passenger presence system	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497

2010	Chevrolet	Tahoe hybrid	Park assist module	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Heated seat module	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Rear heated seat module	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Left side object detection module	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Right side object detection module	√	√	√	√		
2010	Chevrolet	Tahoe hybrid	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Driver door switch	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Passenger door switch	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Body Control Module	√	√	√	√	√	0498
2010	Chevrolet	Tahoe hybrid	Liftgate module	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Tahoe hybrid	Body Control Module	√	√	√	√	√	0497
2010	Chevrolet	Tahoe hybrid	Serial Data Gateway Module	√	√	√	√	√	
2010	Chevrolet	Tahoe hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Chevrolet	Tahoe hybrid	Electronic suension control	√	√	√	√	√	0532
2010	Chevrolet	Tahoe hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	Chevrolet	Tahoe hybrid	Power steering control module	√	√	√	√		0536
2010	Chevrolet	Tahoe hybrid	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	Chevrolet	Traverse - AWD	Transmission control module	√	√	√	√	√	
2010	Chevrolet	Traverse - AWD	Fuel Pump Control Module	√	√	√	√	√	
2010	Chevrolet	Traverse - AWD	Engine Control Module	√	√	√	√	√	
2010	Chevrolet	Traverse - AWD	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Traverse - AWD	Radio	√	√	√	√	√	
2010	Chevrolet	Traverse - AWD	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Traverse - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Chevrolet	Traverse - AWD	Personal audio link module	√	√	√			0528 0529
2010	Chevrolet	Traverse - AWD	Passenger presence system	√	√	√	√	√	
2010	Chevrolet	Traverse - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Traverse - AWD	Memory seat module	√	√	√	√	√	
2010	Chevrolet	Traverse - AWD	Park assist module	√	√	√	√		
2010	Chevrolet	Traverse - AWD	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Traverse - AWD	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Traverse - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Traverse - AWD	Driver door switch	√	√	√	√	√	0527
2010	Chevrolet	Traverse - AWD	Passenger door switch	√	√	√	√	√	0527
2010	Chevrolet	Traverse - AWD	Body Control Module	√	√	√	√	√	0499 0497
2010	Chevrolet	Traverse - AWD	Liftgate module	√	√	√	√	√	
2010	Chevrolet	Traverse - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Traverse - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Traverse - AWD	Rear drive system	√	√	√	√	√	0530
2010	Chevrolet	Traverse - FWD	Transmission control module		√	√	√	√	

2010	Chevrolet	Traverse - FWD	Fuel Pump Control Module	√	√	√	√	√	
2010	Chevrolet	Traverse - FWD	Engine Control Module	√	√	√	√	√	
2010	Chevrolet	Traverse - FWD	Digital radio receiver	√	√	√	√	√	
2010	Chevrolet	Traverse - FWD	Radio	√	√	√	√	√	
2010	Chevrolet	Traverse - FWD	Rear HVAC/RSA	√	√	√	√	√	
2010	Chevrolet	Traverse - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Chevrolet	Traverse - FWD	Personal audio link module	√	√	√			0528 0529
2010	Chevrolet	Traverse - FWD	Passenger presence system	√	√	√	√	√	
2010	Chevrolet	Traverse - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Chevrolet	Traverse - FWD	Memory seat module	√	√	√	√	√	
2010	Chevrolet	Traverse - FWD	Park assist module	√	√	√	√		
2010	Chevrolet	Traverse - FWD	Theft Deterrent Module	√	√	√	√		
2010	Chevrolet	Traverse - FWD	Instrument panel cluster	√	√	√	√	√	
2010	Chevrolet	Traverse - FWD	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Chevrolet	Traverse - FWD	Driver door switch	√	√	√	√	√	0527
2010	Chevrolet	Traverse - FWD	Passenger door switch	√	√	√	√	√	0527
2010	Chevrolet	Traverse - FWD	Body Control Module	√	√	√	√	√	0499 0497
2010	Chevrolet	Traverse - FWD	Liftgate module	√	√	√	√	√	
2010	Chevrolet	Traverse - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Chevrolet	Traverse - FWD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Chevrolet	Traverse - FWD	Rear drive system	√	√	√	√	√	0530
2010	GMC truck	Acadia - 2WD	Transmission control module		√	√	√	√	
2010	GMC truck	Acadia - 2WD	Fuel Pump Control Module	√	√	√	√	√	
2010	GMC truck	Acadia - 2WD	Engine Control Module	√	√	√	√	√	
2010	GMC truck	Acadia - 2WD	Digital radio receiver	√	√	√	√	√	
2010	GMC truck	Acadia - 2WD	Radio	√	√	√	√	√	
2010	GMC truck	Acadia - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Acadia - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	GMC truck	Acadia - 2WD	Head up dilay	√	√	√	√		
2010	GMC truck	Acadia - 2WD	Personal audio link module	√	√	√			0528 0529
2010	GMC truck	Acadia - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Acadia - 2WD	Passenger presence system	√	√	√	√	√	
2010	GMC truck	Acadia - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Acadia - 2WD	Memory seat module	√	√	√	√	√	
2010	GMC truck	Acadia - 2WD	Park assist module	√	√	√	√		
2010	GMC truck	Acadia - 2WD	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Acadia - 2WD	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Acadia - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Acadia - 2WD	Driver door switch	√	√	√	√	√	0527
2010	GMC truck	Acadia - 2WD	Passenger door switch	√	√	√	√	√	0527
2010	GMC truck	Acadia - 2WD	Body Control Module	√	√	√	√	√	0499 0497

2010	GMC truck	Acadia - 2WD	Liftgate module	√	√	√	√	√	
2010	GMC truck	Acadia - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	GMC truck	Acadia - 2WD	Rear drive system	√	√	√	√	√	0530
2010	GMC truck	Acadia - 4WD	Transmission control module		√	√	√	√	
2010	GMC truck	Acadia - 4WD	Fuel Pump Control Module	√	√	√	√	√	
2010	GMC truck	Acadia - 4WD	Engine Control Module	√	√	√	√	√	
2010	GMC truck	Acadia - 4WD	Digital radio receiver	√	√	√	√	√	
2010	GMC truck	Acadia - 4WD	Radio	√	√	√	√	√	
2010	GMC truck	Acadia - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Acadia - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	GMC truck	Acadia - 4WD	Head up dilay	√	√	√	√		
2010	GMC truck	Acadia - 4WD	Personal audio link module	√	√	√			0528 0529
2010	GMC truck	Acadia - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Acadia - 4WD	Passenger presence system	√	√	√	√	√	
2010	GMC truck	Acadia - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Acadia - 4WD	Memory seat module	√	√	√	√	√	
2010	GMC truck	Acadia - 4WD	Park assist module	√	√	√	√		
2010	GMC truck	Acadia - 4WD	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Acadia - 4WD	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Acadia - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Acadia - 4WD	Driver door switch	√	√	√	√	√	0527
2010	GMC truck	Acadia - 4WD	Passenger door switch	√	√	√	√	√	0527
2010	GMC truck	Acadia - 4WD	Body Control Module	√	√	√	√	√	0499 0497
2010	GMC truck	Acadia - 4WD	Liftgate module	√	√	√	√	√	
2010	GMC truck	Acadia - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	GMC truck	Acadia - 4WD	Rear drive system	√	√	√	√	√	0530
2010	GMC truck	Canyon Pickup - 2WD	Transmission control module		√	√	√	√	
2010	GMC truck	Canyon Pickup - 2WD	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Canyon Pickup - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√	√	0516
2010	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2010	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2010	GMC truck	Canyon Pickup - 2WD	Generator battery control module	√	√	√	√	√	
2010	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2010	GMC truck	Canyon Pickup - 2WD	Passenger presence system		√	√			0512
2010	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550 0159
2010	GMC truck	Canyon Pickup - 2WD	Theft Deterrent Module	√	√	√	√		0170
2010	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Canyon Pickup - 2WD	Personal audio link module	√	√	√	√	√	0528
2010	GMC truck	Canyon Pickup - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2010	GMC truck	Canyon Pickup - 2WD	Transfer Case Control Module	√	√	√	√	√	0493



2010	GMC truck	Canyon Pickup - 4WD	Transmission control module		√	√	√	√	
2010	GMC truck	Canyon Pickup - 4WD	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Canyon Pickup - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√	√	0516
2010	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2010	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2010	GMC truck	Canyon Pickup - 4WD	Generator battery control module	√	√	√	√	√	
2010	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2010	GMC truck	Canyon Pickup - 4WD	Passenger presence system		√	√			0512
2010	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550 0159
2010	GMC truck	Canyon Pickup - 4WD	Theft Deterrent Module	√	√	√	√		0170
2010	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Canyon Pickup - 4WD	Personal audio link module	√	√	√	√	√	0528
2010	GMC truck	Canyon Pickup - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2010	GMC truck	Canyon Pickup - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2010	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2010	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2010	GMC truck	Savana	Radio	√	√	√	√	√	
2010	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Savana	Passenger presence system	√	√	√	√		0537
2010	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2010	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2010	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2010	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2010	GMC truck	Savana	Radio	√	√	√	√	√	
2010	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Savana	Passenger presence system	√	√	√	√		0537
2010	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2010	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506

2010	GMC truck	Savana	Transmission control module		√	√	√	√	
2010	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Savana	Radio	√	√	√	√	√	
2010	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Savana	Passenger presence system	√	√	√	√		0537
2010	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2010	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2010	GMC truck	Savana	Transmission control module		√	√	√	√	
2010	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Savana	Radio	√	√	√	√	√	
2010	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Savana	Passenger presence system	√	√	√	√		0537
2010	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2010	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2010	GMC truck	Sierra	Transmission control module		√	√	√	√	
2010	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Sierra	Digital radio receiver	√	√	√	√	√	
2010	GMC truck	Sierra	Personal audio link module	√	√	√			0528
2010	GMC truck	Sierra	Radio	√	√	√	√	√	
2010	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	
2010	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Sierra	Passenger presence system	√	√	√	√		
2010	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Sierra	Park assist module	√	√	√	√		
2010	GMC truck	Sierra	Memory seat module	√	√	√	√	√	
2010	GMC truck	Sierra	Rear heated seat module	√	√	√	√		
2010	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Sierra	Driver door switch	√	√	√	√	√	

2010	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	
2010	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0498
2010	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	GMC truck	Sierra	Trailer brake control module	√	√	√	√	√	
2010	GMC truck	Sierra	Electronic suension control	√	√	√	√	√	0532
2010	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2010	GMC truck	Sierra	FPCM with trailer brake control	√	√	√	√	√	0532
2010	GMC truck	Sierra	Accessory power module	√	√	√	√	√	
2010	GMC truck	Sierra	Transmission control module		√	√	√	√	
2010	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	
2010	GMC truck	Sierra	Digital radio receiver	√	√	√	√	√	
2010	GMC truck	Sierra	Personal audio link module	√	√	√			0528
2010	GMC truck	Sierra	Radio	√	√	√	√	√	
2010	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	
2010	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Sierra	A/C compressor control module	√	√	√	√		
2010	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Sierra	Passenger presence system	√	√	√	√		
2010	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Sierra	Park assist module	√	√	√	√		
2010	GMC truck	Sierra	Heated seat module	√	√	√	√		
2010	GMC truck	Sierra	Rear heated seat module	√	√	√	√		
2010	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Sierra	Driver door switch	√	√	√	√	√	
2010	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	
2010	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0498
2010	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Sierra	Serial Data Gateway Module	√	√	√	√	√	
2010	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	GMC truck	Sierra	Electronic suension control	√	√	√	√	√	0532
2010	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	GMC truck	Sierra	Power steering control module		√	√	√		0536
2010	GMC truck	Sierra	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	GMC truck	Sierra	Transmission control module		√	√	√	√	
2010	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Sierra	Transfer Case Control Module	√	√	√	√	√	0493

2010	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Sierra	Digital radio receiver	√	√	√	√	√	
2010	GMC truck	Sierra	Personal audio link module	√	√	√			0528
2010	GMC truck	Sierra	Radio	√	√	√	√	√	
2010	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	
2010	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Sierra	Passenger presence system	√	√	√	√		
2010	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Sierra	Park assist module	√	√	√	√		
2010	GMC truck	Sierra	Memory seat module	√	√	√	√	√	
2010	GMC truck	Sierra	Rear heated seat module	√	√	√	√		
2010	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Sierra	Driver door switch	√	√	√	√	√	
2010	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	
2010	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0498
2010	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	GMC truck	Sierra	Trailer brake control module	√	√	√	√	√	
2010	GMC truck	Sierra	Electronic suspension control	√	√	√	√	√	0532
2010	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2010	GMC truck	Sierra	FPCM with trailer brake control	√	√	√	√	√	0532
2010	GMC truck	Sierra	Accessory power module	√	√	√	√	√	
2010	GMC truck	Sierra	Transfer Case Control Module	√	√	√	√	√	
2010	GMC truck	Sierra	Transmission control module		√	√	√	√	
2010	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	
2010	GMC truck	Sierra	Digital radio receiver	√	√	√	√	√	
2010	GMC truck	Sierra	Personal audio link module	√	√	√			0528
2010	GMC truck	Sierra	Radio	√	√	√	√	√	
2010	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	
2010	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Sierra	A/C compressor control module	√	√	√	√		
2010	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Sierra	Passenger presence system	√	√	√	√		
2010	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Sierra	Park assist module	√	√	√	√		
2010	GMC truck	Sierra	Heated seat module	√	√	√	√		

2010	GMC truck	Sierra	Rear heated seat module	√	√	√	√		
2010	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Sierra	Driver door switch	√	√	√	√	√	
2010	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	
2010	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0498
2010	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Sierra	Serial Data Gateway Module	√	√	√	√	√	
2010	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	GMC truck	Sierra	Electronic suension control	√	√	√	√	√	0532
2010	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	GMC truck	Sierra	Power steering control module		√	√	√		0536
2010	GMC truck	Sierra	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	GMC truck	Yukon	Transmission control module		√	√	√	√	
2010	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon	Digital radio receiver	√	√	√	√	√	
2010	GMC truck	Yukon	Personal audio link module	√	√	√			0528
2010	GMC truck	Yukon	Radio	√	√	√	√	√	
2010	GMC truck	Yukon	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Yukon	Amplifier (bose)	√	√	√	√	√	
2010	GMC truck	Yukon	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Yukon	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Yukon	Passenger presence system	√	√	√	√		
2010	GMC truck	Yukon	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Yukon	Park assist module	√	√	√	√		
2010	GMC truck	Yukon	Memory seat module	√	√	√	√	√	
2010	GMC truck	Yukon	Rear heated seat module	√	√	√	√		
2010	GMC truck	Yukon	Left side object detection module	√	√	√	√	√	
2010	GMC truck	Yukon	Right side object detection module	√	√	√	√		
2010	GMC truck	Yukon	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Yukon	Driver door switch	√	√	√	√	√	
2010	GMC truck	Yukon	Passenger door switch	√	√	√	√	√	
2010	GMC truck	Yukon	Assist step controller	√	√	√	√	√	0531
2010	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0498
2010	GMC truck	Yukon	Liftgate module	√	√	√	√	√	
2010	GMC truck	Yukon	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Yukon	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	GMC truck	Yukon	Electronic suension control	√	√	√	√	√	0532
2010	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506

2010	GMC truck	Yukon	FPCM with trailer brake control	√	√	√	√	√	0506
2010	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon	Transmission control module		√	√	√	√	
2010	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon	Digital radio receiver	√	√	√	√	√	
2010	GMC truck	Yukon	Personal audio link module	√	√	√			0528
2010	GMC truck	Yukon	Radio	√	√	√	√	√	
2010	GMC truck	Yukon	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Yukon	Amplifier (bose)	√	√	√	√	√	
2010	GMC truck	Yukon	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Yukon	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Yukon	Passenger presence system	√	√	√	√		
2010	GMC truck	Yukon	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Yukon	Park assist module	√	√	√	√		
2010	GMC truck	Yukon	Memory seat module	√	√	√	√	√	
2010	GMC truck	Yukon	Rear heated seat module	√	√	√	√		
2010	GMC truck	Yukon	Left side object detection module	√	√	√	√	√	
2010	GMC truck	Yukon	Right side object detection module	√	√	√	√		
2010	GMC truck	Yukon	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Yukon	Driver door switch	√	√	√	√	√	
2010	GMC truck	Yukon	Passenger door switch	√	√	√	√	√	
2010	GMC truck	Yukon	Assist step controller	√	√	√	√	√	0531
2010	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0498
2010	GMC truck	Yukon	Liftgate module	√	√	√	√	√	
2010	GMC truck	Yukon	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Yukon	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	GMC truck	Yukon	Electronic suspension control	√	√	√	√	√	0532
2010	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506
2010	GMC truck	Yukon	FPCM with trailer brake control	√	√	√	√	√	0506
2010	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon hybrid	Accessory power module	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Transmission control module		√	√	√	√	
2010	GMC truck	Yukon hybrid	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon hybrid	Fuel Pump Control Module	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Digital radio receiver	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Personal audio link module	√	√	√			0528
2010	GMC truck	Yukon hybrid	Radio	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Amplifier (bose)	√	√	√	√	√	

2010	GMC truck	Yukon hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Yukon hybrid	A/C compressor control module	√	√	√	√		
2010	GMC truck	Yukon hybrid	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Yukon hybrid	Passenger presence system	√	√	√	√		
2010	GMC truck	Yukon hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Yukon hybrid	Park assist module	√	√	√	√		
2010	GMC truck	Yukon hybrid	Heated seat module	√	√	√	√		
2010	GMC truck	Yukon hybrid	Rear heated seat module	√	√	√	√		
2010	GMC truck	Yukon hybrid	Left side object detection module	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Right side object detection module	√	√	√	√		
2010	GMC truck	Yukon hybrid	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Driver door switch	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Passenger door switch	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0498
2010	GMC truck	Yukon hybrid	Liftgate module	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Yukon hybrid	Serial Data Gateway Module	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	GMC truck	Yukon hybrid	Electronic suspension control	√	√	√	√	√	0532
2010	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	GMC truck	Yukon hybrid	Power steering control module		√	√	√		0536
2010	GMC truck	Yukon hybrid	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	GMC truck	Yukon hybrid	Transfer Case Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon hybrid	Accessory power module	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Transmission control module		√	√	√	√	
2010	GMC truck	Yukon hybrid	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon hybrid	Fuel Pump Control Module	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Digital radio receiver	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Personal audio link module	√	√	√			0528
2010	GMC truck	Yukon hybrid	Radio	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Amplifier (bose)	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Yukon hybrid	A/C compressor control module	√	√	√	√		
2010	GMC truck	Yukon hybrid	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Yukon hybrid	Passenger presence system	√	√	√	√		
2010	GMC truck	Yukon hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Yukon hybrid	Park assist module	√	√	√	√		
2010	GMC truck	Yukon hybrid	Heated seat module	√	√	√	√		
2010	GMC truck	Yukon hybrid	Rear heated seat module	√	√	√	√		

2010	GMC truck	Yukon hybrid	Left side object detection module	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Right side object detection module	√	√	√	√		
2010	GMC truck	Yukon hybrid	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Driver door switch	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Passenger door switch	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0498
2010	GMC truck	Yukon hybrid	Liftgate module	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Yukon hybrid	Serial Data Gateway Module	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	GMC truck	Yukon hybrid	Electronic suension control	√	√	√	√	√	0532
2010	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	GMC truck	Yukon hybrid	Power steering control module		√	√	√		0536
2010	GMC truck	Yukon hybrid	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	GMC truck	Yukon hybrid	Transfer Case Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon XL	Transmission control module		√	√	√	√	
2010	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon XL	Digital radio receiver	√	√	√	√	√	
2010	GMC truck	Yukon XL	Personal audio link module	√	√	√			0528
2010	GMC truck	Yukon XL	Radio	√	√	√	√	√	
2010	GMC truck	Yukon XL	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Yukon XL	Amplifier (bose)	√	√	√	√	√	
2010	GMC truck	Yukon XL	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Yukon XL	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Yukon XL	Passenger presence system	√	√	√	√		
2010	GMC truck	Yukon XL	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Yukon XL	Park assist module	√	√	√	√		
2010	GMC truck	Yukon XL	Memory seat module	√	√	√	√	√	
2010	GMC truck	Yukon XL	Rear heated seat module	√	√	√	√		
2010	GMC truck	Yukon XL	Left side object detection module	√	√	√	√	√	
2010	GMC truck	Yukon XL	Right side object detection module	√	√	√	√		
2010	GMC truck	Yukon XL	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Yukon XL	Driver door switch	√	√	√	√	√	
2010	GMC truck	Yukon XL	Passenger door switch	√	√	√	√	√	
2010	GMC truck	Yukon XL	Assist step controller	√	√	√	√	√	0531
2010	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0498
2010	GMC truck	Yukon XL	Liftgate module	√	√	√	√	√	
2010	GMC truck	Yukon XL	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0497



2010	GMC truck	Yukon XL	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	GMC truck	Yukon XL	Electronic suension control	√	√	√	√	√	0532
2010	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2010	GMC truck	Yukon XL	FPCM with trailer brake control	√	√	√	√	√	0506
2010	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√	√	0506
2010	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon XL	Transmission control module		√	√	√	√	
2010	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon XL	Digital radio receiver	√	√	√	√	√	
2010	GMC truck	Yukon XL	Personal audio link module	√	√	√			0528
2010	GMC truck	Yukon XL	Radio	√	√	√	√	√	
2010	GMC truck	Yukon XL	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Yukon XL	Amplifier (bose)	√	√	√	√	√	
2010	GMC truck	Yukon XL	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Yukon XL	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Yukon XL	Passenger presence system	√	√	√	√		
2010	GMC truck	Yukon XL	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Yukon XL	Park assist module	√	√	√	√		
2010	GMC truck	Yukon XL	Memory seat module	√	√	√	√	√	
2010	GMC truck	Yukon XL	Rear heated seat module	√	√	√	√		
2010	GMC truck	Yukon XL	Left side object detection module	√	√	√	√	√	
2010	GMC truck	Yukon XL	Right side object detection module	√	√	√	√		
2010	GMC truck	Yukon XL	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Yukon XL	Driver door switch	√	√	√	√	√	
2010	GMC truck	Yukon XL	Passenger door switch	√	√	√	√	√	
2010	GMC truck	Yukon XL	Assist step controller	√	√	√	√	√	0531
2010	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0498
2010	GMC truck	Yukon XL	Liftgate module	√	√	√	√	√	
2010	GMC truck	Yukon XL	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Yukon XL	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	GMC truck	Yukon XL	Electronic suension control	√	√	√	√	√	0532
2010	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2010	GMC truck	Yukon XL	FPCM with trailer brake control	√	√	√	√	√	0506
2010	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√	√	0506
2010	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493
2010	GMC truck	Others	Park assist module	√	√	√	√		
2010	GMC truck	Others	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Others	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Others	Body Control Module	√	√	√	√	√	0497

2010	GMC truck	Others	Body Control Module	√	√	√	√	√	
2010	GMC truck	Others	Headlamp Control Module	√	√	√	√	√	
2010	GMC truck	Others	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Others	Front delay interface module	√	√	√			
2010	GMC truck	Others	Radio	√	√	√	√	√	
2010	GMC truck	Others	HVAC Control Module	√	√	√	√	√	0497
2010	GMC truck	Others	Electronic Brake Control Module	√	√	√	√	√	
2010	GMC truck	Others	Engine Control Module	√	√	√	√	√	0562
2010	GMC truck	Others	Transmission control module	√	√	√	√	√	0562
2010	GMC truck	Others	Rear drive system	√	√	√	√	√	0530
2010	Saturn	OUTLOOK - AWD	Transmission control module		√	√	√	√	
2010	Saturn	OUTLOOK - AWD	Fuel Pump Control Module	√	√	√	√	√	
2010	Saturn	OUTLOOK - AWD	Engine Control Module	√	√	√	√	√	
2010	Saturn	OUTLOOK - AWD	Digital radio receiver	√	√	√	√	√	
2010	Saturn	OUTLOOK - AWD	Radio	√	√	√	√	√	
2010	Saturn	OUTLOOK - AWD	Rear HVAC/RSA	√	√	√	√	√	
2010	Saturn	OUTLOOK - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Saturn	OUTLOOK - AWD	Personal audio link module	√	√	√			0528 0529
2010	Saturn	OUTLOOK - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Saturn	OUTLOOK - AWD	Passenger presence system	√	√	√	√	√	
2010	Saturn	OUTLOOK - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Saturn	OUTLOOK - AWD	Memory seat module	√	√	√	√	√	
2010	Saturn	OUTLOOK - AWD	Park assist module	√	√	√	√		
2010	Saturn	OUTLOOK - AWD	Theft Deterrent Module	√	√	√	√		
2010	Saturn	OUTLOOK - AWD	Instrument panel cluster	√	√	√	√	√	
2010	Saturn	OUTLOOK - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Saturn	OUTLOOK - AWD	Driver door switch	√	√	√	√	√	0527
2010	Saturn	OUTLOOK - AWD	Passenger door switch	√	√	√	√	√	0527
2010	Saturn	OUTLOOK - AWD	Body Control Module	√	√	√	√	√	0499 0497
2010	Saturn	OUTLOOK - AWD	Liftgate module	√	√	√	√	√	
2010	Saturn	OUTLOOK - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Saturn	OUTLOOK - AWD	Rear drive system	√	√	√	√	√	0530
2010	Saturn	OUTLOOK - 2WD	Transmission control module		√	√	√	√	
2010	Saturn	OUTLOOK - 2WD	Fuel Pump Control Module	√	√	√	√	√	
2010	Saturn	OUTLOOK - 2WD	Engine Control Module	√	√	√	√	√	
2010	Saturn	OUTLOOK - 2WD	Digital radio receiver	√	√	√	√	√	
2010	Saturn	OUTLOOK - 2WD	Radio	√	√	√	√	√	
2010	Saturn	OUTLOOK - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2010	Saturn	OUTLOOK - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	Saturn	OUTLOOK - 2WD	Personal audio link module	√	√	√			0528 0529
2010	Saturn	OUTLOOK - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159

2010	Saturn	OUTLOOK - 2WD	Passenger presence system	√	√	√	√	√	
2010	Saturn	OUTLOOK - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Saturn	OUTLOOK - 2WD	Memory seat module	√	√	√	√	√	
2010	Saturn	OUTLOOK - 2WD	Park assist module	√	√	√	√	√	
2010	Saturn	OUTLOOK - 2WD	Theft Deterrent Module	√	√	√	√	√	
2010	Saturn	OUTLOOK - 2WD	Instrument panel cluster	√	√	√	√	√	
2010	Saturn	OUTLOOK - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Saturn	OUTLOOK - 2WD	Driver door switch	√	√	√	√	√	0527
2010	Saturn	OUTLOOK - 2WD	Passenger door switch	√	√	√	√	√	0527
2010	Saturn	OUTLOOK - 2WD	Body Control Module	√	√	√	√	√	0499 0497
2010	Saturn	OUTLOOK - 2WD	Liftgate module	√	√	√	√	√	
2010	Saturn	OUTLOOK - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Saturn	OUTLOOK - 2WD	Rear drive system	√	√	√	√	√	0530
2010	Saturn	VUE - AWD	Transmission control module		√	√	√	√	
2010	Saturn	VUE - AWD	Fuel Pump Control Module	√	√	√	√	√	
2010	Saturn	VUE - AWD	Engine Control Module	√	√	√	√	√	0493
2010	Saturn	VUE - AWD	Rear drive system	√	√	√	√	√	0530
2010	Saturn	VUE - AWD	Digital radio receiver	√	√	√	√	√	
2010	Saturn	VUE - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Saturn	VUE - AWD	Radio	√	√	√	√	√	
2010	Saturn	VUE - AWD	Theft Deterrent Module	√	√	√	√	√	
2010	Saturn	VUE - AWD	Rollover sensor	√	√	√	√	√	0541
2010	Saturn	VUE - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Saturn	VUE - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Saturn	VUE - AWD	Passenger presence system	√	√	√	√	√	0537
2010	Saturn	VUE - AWD	HVAC Control Module	√	√	√	√	√	0500
2010	Saturn	VUE - AWD	Body Control Module	√	√	√	√	√	0499 0497
2010	Saturn	VUE - AWD	Instrument panel cluster	√	√	√	√	√	
2010	Saturn	VUE - AWD	Electronic Brake Control Module	√	√	√	√	√	
2010	Saturn	VUE - FWD	Transmission control module		√	√	√	√	
2010	Saturn	VUE - FWD	Fuel Pump Control Module	√	√	√	√	√	
2010	Saturn	VUE - FWD	Engine Control Module	√	√	√	√	√	0493
2010	Saturn	VUE - FWD	Digital radio receiver	√	√	√	√	√	
2010	Saturn	VUE - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Saturn	VUE - FWD	Radio	√	√	√	√	√	
2010	Saturn	VUE - FWD	Theft Deterrent Module	√	√	√	√	√	
2010	Saturn	VUE - FWD	Rollover sensor	√	√	√	√	√	0541
2010	Saturn	VUE - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Saturn	VUE - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Saturn	VUE - FWD	Passenger presence system	√	√	√	√	√	0537
2010	Saturn	VUE - FWD	HVAC Control Module	√	√	√	√	√	0500

2010	Saturn	VUE - FWD	Body Control Module	√	√	√	√	√	0499 0497
2010	Saturn	VUE - FWD	Instrument panel cluster	√	√	√	√	√	
2010	Saturn	VUE - FWD	Electronic Brake Control Module	√	√	√	√	√	
2010	Hummer	H2	Transmission control module		√	√	√	√	
2010	Hummer	H2	Fuel Pump Control Module	√	√	√	√	√	
2010	Hummer	H2	Transfer Case Control Module	√	√	√	√	√	
2010	Hummer	H2	Engine Control Module	√	√	√	√	√	0493
2010	Hummer	H2	Amplifier (bose)	√	√	√	√	√	0502
2010	Hummer	H2	Digital radio receiver	√	√	√	√	√	
2010	Hummer	H2	Personal audio link module	√	√	√			0528
2010	Hummer	H2	Radio	√	√	√	√	√	
2010	Hummer	H2	Rear HVAC/RSA	√	√	√	√	√	
2010	Hummer	H2	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	Hummer	H2	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Hummer	H2	Theft Deterrent Module	√	√	√	√		
2010	Hummer	H2	Rollover sensor	√	√	√	√		0541
2010	Hummer	H2	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Hummer	H2	Memory seat module	√	√	√	√	√	
2010	Hummer	H2	Rear heated seat module	√	√	√	√		
2010	Hummer	H2	Instrument panel cluster	√	√	√	√	√	
2010	Hummer	H2	Driver door switch	√	√	√	√	√	
2010	Hummer	H2	Passenger door switch	√	√	√	√	√	
2010	Hummer	H2	HVAC Control Module	√	√	√	√	√	0500 0526
2010	Hummer	H2	Body Control Module	√	√	√	√	√	0497
2010	Hummer	H2	Air suspension control module	√	√	√	√	√	
2010	Hummer	H2	Electronic Brake Control Module	√	√	√	√	√	0506
2010	Hummer	H3	Transmission control module		√	√	√	√	
2010	Hummer	H3	Engine Control Module	√	√	√	√	√	0493
2010	Hummer	H3	Fuel Pump Control Module	√	√	√	√	√	
2010	Hummer	H3	Transfer Case Control Module	√	√	√	√	√	0493
2010	Hummer	H3	Digital radio receiver	√	√	√	√	√	0516
2010	Hummer	H3	Personal audio link module	√	√	√			0528
2010	Hummer	H3	Radio	√	√	√	√	√	0572 0524
2010	Hummer	H3	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2010	Hummer	H3	Generator battery control module	√	√	√	√	√	
2010	Hummer	H3	Passenger presence system		√	√			0512
2010	Hummer	H3	Supplemental inflatable restraint	√	√	√	√	√	0515
2010	Hummer	H3	Body Control Module	√	√	√	√	√	0550 0159
2010	Hummer	H3	Instrument panel cluster	√	√	√	√	√	
2010	Hummer	H3	Theft Deterrent Module	√	√	√	√	√	0170
2010	Hummer	H3	Navigation radio	√	√	√	√	√	0525

2010	Hummer	H3	Electronic Brake Control Module	√	√	√	√	√	
2010	Holden	Captiva	Engine Control Module	√	√	√	√	√	0509
2010	Holden	Captiva	Transmission control module	√	√	√	√	√	0509
2010	Holden	Captiva	Rear drive system	√	√	√	√	√	0530
2010	Holden	Captiva	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Holden	Captiva	Body Control Module	√	√	√	√	√	0497
2010	Holden	Captiva	Body Control Module	√	√	√	√	√	
2010	Holden	Captiva	Theft Deterrent Module	√	√	√	√		
2010	Holden	Captiva	Instrument panel cluster	√	√	√	√	√	
2010	Holden	Captiva	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Holden	Captiva	HVAC Control Module	√	√	√		√	
2010	Holden	Captiva	Electronic Brake Control Module	√	√	√	√	√	
2010	Holden	Captiva Maxx	Engine Control Module	√	√	√	√	√	0509
2010	Holden	Captiva Maxx	Rear drive system	√	√	√	√	√	0530
2010	Holden	Captiva Maxx	Transmission control module	√	√	√	√	√	0530
2010	Holden	Captiva Maxx	Park assist module	√	√	√	√		
2010	Holden	Captiva Maxx	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	Holden	Captiva Maxx	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	Holden	Captiva Maxx	Body Control Module	√	√	√	√	√	0497
2010	Holden	Captiva Maxx	Body Control Module	√	√	√	√	√	
2010	Holden	Captiva Maxx	Headlamp Control Module	√	√	√	√	√	
2010	Holden	Captiva Maxx	Instrument panel cluster	√	√	√	√	√	
2010	Holden	Captiva Maxx	Front dilay interface module	√	√	√			
2010	Holden	Captiva Maxx	Radio	√	√	√	√	√	
2010	Holden	Captiva Maxx	HVAC Control Module	√	√	√		√	
2010	Holden	Captiva Maxx	Theft Deterrent Module	√	√	√	√	√	0497
2010	Holden	Captiva Maxx	Electronic Brake Control Module	√	√	√	√	√	
2009	Alpheon	Lacetti	Engine Control Module	√	√	√	√	√	0308 0217
2009	Alpheon	Lacetti	Fuel Pump Control Module	√	√	√	√	√	0217
2009	Alpheon	Lacetti	Transmission Control Module	√	√	√	√	√	0017
2009	Alpheon	Lacetti	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2009	Alpheon	Lacetti	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2009	Alpheon	Lacetti	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2009	Alpheon	Lacetti	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2009	Alpheon	Lacetti	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2009	Alpheon	Lacetti	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2009	Alpheon	Lacetti	Passenger Presence Module	√	√	√	√		0322
2009	Alpheon	Lacetti	Instrument Cluster	√	√	√	√	√	0301
2009	Alpheon	Lacetti	Trailer Interface Control Module	√	√	√	√	√	0301
2009	Alpheon	Lacetti	Radio	√	√	√	√	√	

2009	Alpheon	Lacetti	Multimedia Player Interface Module	√	√	√	√		
2009	Alpheon	Lacetti	Mobile Telephone Control Module	√	√	√	√	√	0301 0301
2009	Alpheon	Lacetti	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2009	Alpheon	Lacetti	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2009	Alpheon	Lacetti	Front Seat Heating Control Module	√	√	√	√	√	
2009	Alpheon	Lacetti	Keyless Entry Control Module	√	√	√	√	√	
2009	Alpheon	Lacetti	Parking Assist Control Module	√	√	√	√	√	
2009	Alpheon	Lacetti	Steering Column Lock Control Module	√	√	√	√		
2009	Buick	LaCrosse	Powertrain control module	√	√	√	√	√	0493
2009	Buick	LaCrosse	Transmission control module		√	√	√	√	
2009	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	0493
2009	Buick	LaCrosse	Remote control door lock receiver	√	√	√	√	√	0159
2009	Buick	LaCrosse	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Buick	LaCrosse	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0552
2009	Buick	LaCrosse	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	Buick	LaCrosse	Digital radio receiver	√	√	√	√	√	0516
2009	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0499
2009	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0500
2009	Buick	LaCrosse	Instrument panel cluster	√	√	√	√	√	0159
2009	Buick	LaCrosse	Electronic Brake Control Module		√	√	√	√	0506
2009	Buick	LaCrosse (Allure in Canada)	Powertrain control module	√	√	√	√	√	0493
2009	Buick	LaCrosse (Allure in Canada)	Transmission control module		√	√	√	√	
2009	Buick	LaCrosse (Allure in Canada)	Engine Control Module	√	√	√	√	√	0493
2009	Buick	LaCrosse (Allure in Canada)	Remote control door lock receiver	√	√	√	√	√	0159
2009	Buick	LaCrosse (Allure in Canada)	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Buick	LaCrosse (Allure in Canada)	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0552
2009	Buick	LaCrosse (Allure in Canada)	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	Buick	LaCrosse (Allure in Canada)	Digital radio receiver	√	√	√	√	√	0516
2009	Buick	LaCrosse (Allure in Canada)	Body Control Module	√	√	√	√	√	0499
2009	Buick	LaCrosse (Allure in Canada)	HVAC Control Module	√	√	√	√	√	0500
2009	Buick	LaCrosse (Allure in Canada)	Instrument panel cluster	√	√	√	√	√	0159
2009	Buick	LaCrosse (Allure in Canada)	Electronic Brake Control Module		√	√	√	√	0506
2009	Buick	Lucerne	Transmission control module		√	√	√	√	
2009	Buick	Lucerne	Engine Control Module	√	√	√	√	√	0493
2009	Buick	Lucerne	Passenger presence system	√	√	√	√		0512
2009	Buick	Lucerne	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Buick	Lucerne	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Buick	Lucerne	Theft Deterrent Module	√	√	√	√		
2009	Buick	Lucerne	Radio	√	√	√	√	√	
2009	Buick	Lucerne	Digital radio receiver	√	√	√	√	√	

2009	Buick	Lucerne	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Buick	Lucerne	Veh direction alert alarm warn mod	√	√	√	√	√	
2009	Buick	Lucerne	Left side object detection module	√	√	√	√	√	
2009	Buick	Lucerne	Memory seat module	√	√	√	√	√	
2009	Buick	Lucerne	Park assist module	√	√	√	√	√	
2009	Buick	Lucerne	Right side object detection module	√	√	√	√	√	
2009	Buick	Lucerne	Instrument panel cluster	√	√	√	√	√	
2009	Buick	Lucerne	HVAC Control Module	√	√	√	√	√	
2009	Buick	Lucerne	Driver door switch	√	√	√	√	√	
2009	Buick	Lucerne	Passenger door switch	√	√	√	√	√	
2009	Buick	Lucerne	Body Control Module	√	√	√	√	√	0499 0497
2009	Buick	Lucerne	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Buick	Lucerne	Electronic suension control	√	√	√	√	√	
2009	Buick	Others	Immobilizer						0508
2009	Buick	Others	Engine Control Module	√	√	√	√	√	
2009	Buick	Others	Transmission control module	√	√	√	√	√	
2009	Cadillac	CTS	Transmission control module		√	√	√	√	
2009	Cadillac	CTS	Engine Control Module	√	√	√	√	√	
2009	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	0493
2009	Cadillac	CTS	Fuel Pump Control Module	√	√	√	√	√	0493
2009	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√	√	0501
2009	Cadillac	CTS	Passenger presence system	√	√	√	√	√	
2009	Cadillac	CTS	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	0502
2009	Cadillac	CTS	Radio	√	√	√	√	√	0503
2009	Cadillac	CTS	TV antenna module	√	√	√	√		0504 0505
2009	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	
2009	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2009	Cadillac	CTS	Park assist module	√	√	√	√	√	
2009	Cadillac	CTS	Body Control Module	√	√	√	√	√	0499 0497
2009	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0500
2009	Cadillac	CTS	Body Control Module	√	√	√	√	√	0498
2009	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2009	Cadillac	CTS	Driver door switch	√	√	√	√	√	
2009	Cadillac	CTS	Passenger door switch	√	√	√	√	√	
2009	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Cadillac	CTS	Park Brake Control Module	√	√	√	√	√	
2009	Cadillac	CTS	Electronic suension control		√	√	√	√	
2009	Cadillac	DTS	Engine Control Module	√	√	√	√	√	0493
2009	Cadillac	DTS	Transmission control module		√	√	√	√	

2009	Cadillac	DTS	Passenger presence system	√	√	√	√		0512
2009	Cadillac	DTS	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Cadillac	DTS	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Cadillac	DTS	Theft Deterrent Module	√	√	√	√		
2009	Cadillac	DTS	Radio	√	√	√	√	√	
2009	Cadillac	DTS	TV antenna module	√	√	√	√		0504 0505
2009	Cadillac	DTS	Amplifier (bose)	√	√	√	√	√	
2009	Cadillac	DTS	Digital radio receiver	√	√	√	√	√	
2009	Cadillac	DTS	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Cadillac	DTS	Veh direction alert alarm warn mod	√	√	√	√	√	
2009	Cadillac	DTS	Driver position module	√	√	√	√	√	
2009	Cadillac	DTS	Inside rear view mirror module	√	√	√			
2009	Cadillac	DTS	Left side object detection module	√	√	√	√	√	
2009	Cadillac	DTS	Rear heated seat module	√	√	√	√		
2009	Cadillac	DTS	Right side object detection module	√	√	√	√		
2009	Cadillac	DTS	Park assist module	√	√	√	√	√	
2009	Cadillac	DTS	Instrument panel cluster	√	√	√	√	√	
2009	Cadillac	DTS	Body Control Module	√	√	√	√	√	0499 0497
2009	Cadillac	DTS	Distance sensing cruise control	√	√	√	√	√	
2009	Cadillac	DTS	HVAC Control Module	√	√	√	√	√	
2009	Cadillac	DTS	Driver door switch	√	√	√	√	√	0527
2009	Cadillac	DTS	Passenger door switch	√	√	√	√	√	0527
2009	Cadillac	DTS	Aux. HVAC control module	√	√	√	√	√	0527
2009	Cadillac	DTS	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Cadillac	DTS	Electronic suspension control	√	√	√	√	√	
2009	Cadillac	STS	Transmission control module		√	√	√	√	
2009	Cadillac	STS	Engine Control Module	√	√	√	√	√	0493
2009	Cadillac	STS	Passenger presence system		√	√			
2009	Cadillac	STS	Remote control door lock receiver	√	√	√	√	√	0513 0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519
2009	Cadillac	STS	Supplemental inflatable restraint	√	√	√	√	√	0559
2009	Cadillac	STS	Amplifier (bose)		√	√	√	√	
2009	Cadillac	STS	Radio	√	√	√	√		0552 0525
2009	Cadillac	STS	TV antenna module	√	√	√	√		
2009	Cadillac	STS	Digital radio receiver	√	√	√	√	√	0516
2009	Cadillac	STS	Headlamp Control Module	√	√	√	√	√	
2009	Cadillac	STS	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Cadillac	STS	Veh direction alert alarm warn mod	√	√	√	√	√	
2009	Cadillac	STS	Driver position module	√	√	√	√	√	
2009	Cadillac	STS	Left side object detection module	√	√	√	√	√	



2009	Cadillac	STS	Right side object detection module	√	√	√	√		
2009	Cadillac	STS	Steering column lock module	√	√	√	√	√	
2009	Cadillac	STS	Instrument panel cluster	√	√	√	√	√	0553 0554
2009	Cadillac	STS	Head up dilay	√	√	√	√	√	
2009	Cadillac	STS	Distance sensing cruise control	√	√	√	√	√	
2009	Cadillac	STS	HVAC Control Module	√	√	√	√	√	
2009	Cadillac	STS	Driver door module	√	√	√	√	√	0560
2009	Cadillac	STS	Driver door switch	√	√	√	√		
2009	Cadillac	STS	Instrument panel module	√	√	√	√	√	0551
2009	Cadillac	STS	Left rear door module	√	√	√	√	√	0560
2009	Cadillac	STS	Passenger door module	√	√	√	√	√	0560
2009	Cadillac	STS	Right rear door module	√	√	√	√	√	0560
2009	Cadillac	STS	Rear integration module	√	√	√	√	√	0513 0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519
2009	Cadillac	STS	Navigation radio	√	√	√	√	√	0561
2009	Cadillac	STS	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Cadillac	STS	Electronic suension control	√	√	√	√	√	
2009	Cadillac	STS	Vehicle stability control module	√	√	√	√	√	
2009	Cadillac	STS	Power steering control module	√	√	√	√	√	0563 0564
2009	Cadillac	XLR	Engine Control Module	√	√	√	√	√	0493
2009	Cadillac	XLR	Transmission control module	√	√	√	√	√	0493
2009	Cadillac	XLR	Exhaust flow control module	√	√	√	√	√	
2009	Cadillac	XLR	Passenger presence system		√	√			0512
2009	Cadillac	XLR	Remote control door lock receiver	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2009	Cadillac	XLR	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Cadillac	XLR	CD changer	√	√	√			
2009	Cadillac	XLR	Navigation radio	√	√	√	√		0525
2009	Cadillac	XLR	Vehicle comm. interface module	√	√	√	√	√	0494 0565 0495
2009	Cadillac	XLR	Amplifier (bose)	√	√	√	√	√	
2009	Cadillac	XLR	Digital radio receiver	√	√	√	√		0516
2009	Cadillac	XLR	Headlamp Control Module	√	√	√	√	√	
2009	Cadillac	XLR	Body Control Module	√	√	√	√	√	0515
2009	Cadillac	XLR	Driver position module	√	√	√	√	√	0522
2009	Cadillac	XLR	Folding top module	√	√	√	√	√	
2009	Cadillac	XLR	Steering column lock module	√	√	√	√	√	
2009	Cadillac	XLR	Instrument panel cluster	√	√	√	√	√	
2009	Cadillac	XLR	Head up dilay	√	√	√	√	√	
2009	Cadillac	XLR	Distance sensing cruise control	√	√	√	√	√	
2009	Cadillac	XLR	HVAC Control Module	√	√	√	√	√	0500
2009	Cadillac	XLR	Driver door module	√	√	√	√	√	

2009	Cadillac	XLR	Driver door switch	√	√	√	√		
2009	Cadillac	XLR	Passenger door module	√	√	√	√	√	
2009	Cadillac	XLR	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Cadillac	XLR	Electronic suension control	√	√	√	√	√	
2009	Cadillac	SLS	Vehicle comm. interface module	√	√	√	√	√	0494
2009	Cadillac	SLS	Radio	√	√	√	√	√	
2009	Cadillac	SLS	Passenger presence system		√	√			
2009	Cadillac	SLS	Driver position module	√	√	√	√	√	
2009	Cadillac	SLS	Driver door module	√	√	√	√	√	
2009	Cadillac	SLS	Driver door switch	√	√	√	√		
2009	Cadillac	SLS	Headlamp Control Module	√	√	√	√		
2009	Cadillac	SLS	Instrument panel module	√	√	√	√	√	0551
2009	Cadillac	SLS	Left rear door module	√	√	√	√	√	0560
2009	Cadillac	SLS	Passenger door module	√	√	√	√	√	0560
2009	Cadillac	SLS	Rear integration module	√	√	√	√	√	
2009	Cadillac	SLS	Right rear door module	√	√	√	√	√	0560
2009	Cadillac	SLS	Supplemental inflatable restraint	√	√	√	√	√	0559
2009	Cadillac	SLS	HVAC Control Module	√	√	√	√	√	
2009	Cadillac	SLS	Instrument panel cluster	√	√	√	√	√	0580
2009	Cadillac	SLS	TV antenna module	√	√	√	√		
2009	Cadillac	SLS	Amplifier (bose)		√	√	√	√	
2009	Cadillac	SLS	Remote control door lock receiver	√	√	√	√	√	0513 0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519
2009	Cadillac	SLS	Rear HVAC/RSA	√	√	√	√	√	
2009	Cadillac	SLS	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Cadillac	SLS	Electronic suension control	√	√	√	√	√	
2009	Cadillac	SLS	Transmission control module	√	√	√	√	√	
2009	Cadillac	SLS	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Aveo	Engine Control Module	√	√	√	√	√	0507
2009	Chevrolet	Aveo	Transmission control module	√	√	√	√	√	0507
2009	Chevrolet	Aveo	Immobilizer						0508
2009	Chevrolet	Aveo	Supplemental inflatable restraint	√	√	√	√	√	0508
2009	Chevrolet	Aveo	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Aveo	Tire pressure monitor	√	√	√	√	√	0510 0511
2009	Chevrolet	Aveo	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Chevrolet	Aveo	Instrument panel cluster	√	√	√	√	√	0494 0495
2009	Chevrolet	Aveo	Radio	√	√	√			
2009	Chevrolet	Aveo	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Aveo	Passenger presence system	√	√	√	√	√	0537
2009	Chevrolet	Aveo	Engine Control Module		√	√	√	√	0493

2009	Chevrolet	Aveo	Transmission control module	√	√	√	√	√	0493
2009	Chevrolet	Aveo	Supplemental inflatable restraint	√	√	√	√	√	
2009	Chevrolet	Aveo	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Chevrolet	Aveo	Immobilizer						0508
2009	Chevrolet	Aveo	Instrument panel cluster	√	√	√	√	√	0494 0495
2009	Chevrolet	Aveo	Radio	√	√	√			
2009	Chevrolet	Aveo	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Aveo	Passenger presence system	√	√	√	√	√	0537
2009	Chevrolet	Aveo	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Aveo	Tire pressure monitor	√	√	√	√		0510 0511
2009	Chevrolet	Chevrolet	Transmission control module	√	√	√	√	√	
2009	Chevrolet	Chevrolet	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Chevrolet	Immobilizer	√	√	√	√		0544 0545
2009	Chevrolet	Cobalt	Transmission control module		√	√	√	√	
2009	Chevrolet	Cobalt	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Cobalt	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Cobalt	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Chevrolet	Cobalt	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Cobalt	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Cobalt	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Chevrolet	Cobalt	Body Control Module	√	√	√	√	√	0515
2009	Chevrolet	Cobalt	Radio	√	√	√	√	√	
2009	Chevrolet	Cobalt	Personal audio link module	√	√	√			0528
2009	Chevrolet	Cobalt	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Cobalt	Passenger presence system		√	√			
2009	Chevrolet	Cobalt	Driver information center	√	√	√	√	√	
2009	Chevrolet	Cobalt	Electronic Brake Control Module	√	√	√	√	√	
2009	Chevrolet	Cobalt	Power steering control module	√	√	√	√	√	
2009	Chevrolet	Corvette	Fuel Pump Control Module	√	√	√	√	√	
2009	Chevrolet	Corvette	Exhaust flow control module	√	√	√	√	√	
2009	Chevrolet	Corvette	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Corvette	Transmission control module	√	√	√	√	√	0493
2009	Chevrolet	Corvette	Passenger presence system		√	√			0512
2009	Chevrolet	Corvette	Remote control door lock receiver	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2009	Chevrolet	Corvette	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Chevrolet	Corvette	CD changer	√	√	√	√		
2009	Chevrolet	Corvette	Radio	√	√	√	√		0524 0525
2009	Chevrolet	Corvette	Vehicle comm. interface module	√	√	√	√	√	0494 0565 0495
2009	Chevrolet	Corvette	Digital radio receiver	√	√	√	√		0516
2009	Chevrolet	Corvette	Body Control Module	√	√	√	√	√	0515

2009	Chevrolet	Corvette	Steering column lock module	√	√	√	√	√	
2009	Chevrolet	Corvette	Driver position module	√	√	√	√	√	0522
2009	Chevrolet	Corvette	Folding top module	√	√	√	√	√	
2009	Chevrolet	Corvette	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Corvette	Head up display	√	√	√	√	√	
2009	Chevrolet	Corvette	HVAC Control Module	√	√	√	√	√	0500 0523
2009	Chevrolet	Corvette	Driver door module	√	√	√	√	√	
2009	Chevrolet	Corvette	Driver door switch	√	√	√	√		
2009	Chevrolet	Corvette	Passenger door module	√	√	√	√	√	0512
2009	Chevrolet	Corvette	Navigation radio	√	√	√	√	√	0525
2009	Chevrolet	Corvette	Personal audio link module	√	√	√			0528
2009	Chevrolet	Corvette	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Corvette	Electronic suspension control	√	√	√	√	√	
2009	Chevrolet	Epica	Transmission control module	√	√	√	√	√	
2009	Chevrolet	Epica	Engine Control Module	√	√	√	√	√	0509
2009	Chevrolet	Epica	Supplemental inflatable restraint	√	√	√	√	√	
2009	Chevrolet	Epica	ISU	√	√	√	√	√	
2009	Chevrolet	Epica	Electronic Brake Control Module	√	√	√	√	√	0507
2009	Chevrolet	Impala	Transmission control module	√	√	√	√	√	
2009	Chevrolet	Impala	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Impala	Passenger presence system	√	√	√	√	√	
2009	Chevrolet	Impala	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Impala	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Impala	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Impala	Radio	√	√	√	√	√	
2009	Chevrolet	Impala	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Chevrolet	Impala	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Impala	Heated seat module	√	√	√	√		
2009	Chevrolet	Impala	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Impala	Body Control Module	√	√	√	√	√	0499 0497
2009	Chevrolet	Impala	HVAC Control Module	√	√	√	√	√	0500
2009	Chevrolet	Impala	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Malibu	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Malibu	Transmission control module	√	√	√	√	√	0493
2009	Chevrolet	Malibu	Passenger presence system		√	√			
2009	Chevrolet	Malibu	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Malibu	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Chevrolet	Malibu	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Malibu	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Malibu	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Chevrolet	Malibu	Instrument panel cluster	√	√	√	√	√	

2009	Chevrolet	Malibu	Body Control Module	√	√	√	√	√	0500 0515
2009	Chevrolet	Malibu	Radio	√	√	√	√	√	0525
2009	Chevrolet	Malibu	Personal audio link module	√	√	√			0528
2009	Chevrolet	Malibu	HVAC Control Module	√	√	√	√	√	0547
2009	Chevrolet	Malibu	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Malibu	Power steering control module	√	√	√	√	√	0506
2009	Chevrolet	Malibu hybrid	Passenger presence system		√	√			
2009	Chevrolet	Malibu hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Malibu hybrid	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Chevrolet	Malibu hybrid	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Malibu hybrid	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Malibu hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Chevrolet	Malibu hybrid	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Malibu hybrid	Body Control Module	√	√	√	√	√	0500 0515
2009	Chevrolet	Malibu hybrid	Radio	√	√	√	√	√	0525
2009	Chevrolet	Malibu hybrid	Personal audio link module	√	√	√			0528
2009	Chevrolet	Malibu hybrid	HVAC Control Module	√	√	√	√	√	0547
2009	Chevrolet	Malibu hybrid	Power steering control module	√	√	√	√	√	
2009	Chevrolet	Malibu hybrid	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Optra	Engine Control Module	√	√	√	√	√	0507
2009	Chevrolet	Optra	Transmission control module	√	√	√	√	√	0507
2009	Chevrolet	Optra	Immobilizer						0508
2009	Chevrolet	Optra	Tire pressure monitor	√	√	√	√		0510 0511
2009	Chevrolet	Optra	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Optra - Mexico	Engine Control Module	√	√	√	√	√	0507
2009	Chevrolet	Optra - Mexico	Transmission control module	√	√	√	√	√	0507
2009	Chevrolet	Optra - Mexico	Immobilizer						0508
2009	Chevrolet	Optra - Mexico	Tire pressure monitor	√	√	√	√		0510 0511
2009	Chevrolet	Optra - Mexico	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	ark	Transmission control module	√	√	√	√	√	
2009	Chevrolet	ark	Engine Control Module	√	√	√	√	√	0507
2009	Chevrolet	ark	Supplemental inflatable restraint	√	√	√	√		
2009	Chevrolet	ark	Immobilizer						0508
2009	Chevrolet	ark	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Others	Immobilizer						0508
2009	Chevrolet	Others	Engine Control Module		√	√	√	√	0493
2009	Chevrolet	Others	Transmission control module	√	√	√	√	√	0493
2009	Chevrolet	Others	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Chevrolet	Others	Supplemental inflatable restraint	√	√	√	√	√	0494 0495
2009	Chevrolet	Others	Instrument panel cluster	√	√	√	√	√	0494 0495
2009	Chevrolet	Others	Radio	√	√	√			

2009	Chevrolet	Others	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Others	Passenger presence system	√	√	√	√	√	0537
2009	Pontiac	G3	Engine Control Module	√	√	√	√	√	0493
2009	Pontiac	G3	Transmission control module	√	√	√	√	√	0493
2009	Pontiac	G3	Instrument panel cluster	√	√	√	√	√	
2009	Pontiac	G3	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Pontiac	G3	Radio	√	√	√			
2009	Pontiac	G3	Theft Deterrent Module	√	√	√	√		
2009	Pontiac	G3	Passenger presence system	√	√	√	√		0537
2009	Pontiac	G3	Supplemental inflatable restraint	√	√	√	√	√	0494 0495
2009	Pontiac	G3	Immobilizer	√	√	√	√	√	0508
2009	Pontiac	G3	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Pontiac	G3	Tire pressure monitor	√	√	√	√		0510 0511
2009	Pontiac	G5	Transmission control module		√	√	√	√	
2009	Pontiac	G5	Engine Control Module	√	√	√	√	√	0493
2009	Pontiac	G5	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Pontiac	G5	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Pontiac	G5	Theft Deterrent Module	√	√	√	√		
2009	Pontiac	G5	Digital radio receiver	√	√	√	√	√	
2009	Pontiac	G5	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Pontiac	G5	Body Control Module	√	√	√	√	√	0515
2009	Pontiac	G5	Radio	√	√	√	√	√	
2009	Pontiac	G5	Personal audio link module	√	√	√			0528
2009	Pontiac	G5	Instrument panel cluster	√	√	√	√	√	
2009	Pontiac	G5	Passenger presence system		√	√			
2009	Pontiac	G5	Driver information center	√	√	√	√	√	
2009	Pontiac	G5	Electronic Brake Control Module	√	√	√	√	√	
2009	Pontiac	G5	Power steering control module	√	√	√	√	√	
2009	Pontiac	G6	Engine Control Module	√	√	√	√	√	0493
2009	Pontiac	G6	Transmission control module	√	√	√	√	√	0493
2009	Pontiac	G6	Passenger presence system		√	√			
2009	Pontiac	G6	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Pontiac	G6	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Pontiac	G6	Theft Deterrent Module	√	√	√	√		
2009	Pontiac	G6	Digital radio receiver	√	√	√	√	√	
2009	Pontiac	G6	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Pontiac	G6	Folding top module	√	√	√	√	√	
2009	Pontiac	G6	Body Control Module	√	√	√	√	√	0500 0515
2009	Pontiac	G6	HVAC Control Module	√	√	√	√	√	
2009	Pontiac	G6	Radio	√	√	√	√	√	0525
2009	Pontiac	G6	Instrument panel cluster	√	√	√	√	√	

2009	Pontiac	G6	Personal audio link module	√	√	√	√	√	0528
2009	Pontiac	G6	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Pontiac	G6	Power steering control module	√	√	√	√	√	
2009	Pontiac	G8	Engine Control Module	√	√	√	√	√	
2009	Pontiac	G8	Transmission control module	√	√	√	√	√	0493
2009	Pontiac	G8	Digital radio receiver	√	√	√	√	√	
2009	Pontiac	G8	Body Control Module	√	√	√	√	√	0499 0497
2009	Pontiac	G8	Passenger presence system	√	√	√	√		0512
2009	Pontiac	G8	HVAC Control Module	√	√	√	√	√	
2009	Pontiac	G8	Instrument panel cluster	√	√	√	√	√	
2009	Pontiac	G8	Personal audio link module	√	√	√			0528
2009	Pontiac	G8	Radio	√	√	√	√	√	
2009	Pontiac	G8	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Pontiac	G8	Driver Information Display	√	√	√	√	√	0583
2009	Pontiac	G8	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Pontiac	G8	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Pontiac	G8	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Pontiac	Matiz	Transmission control module	√	√	√	√	√	
2009	Pontiac	Matiz	Engine Control Module	√	√	√	√	√	0507
2009	Pontiac	Matiz	Supplemental inflatable restraint	√	√	√	√		
2009	Pontiac	Matiz	Immobilizer						0508
2009	Pontiac	Matiz	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Pontiac	Solstice	Transmission control module	√	√	√	√	√	
2009	Pontiac	Solstice	Engine Control Module	√	√	√	√	√	0493
2009	Pontiac	Solstice	Passenger presence system		√	√			
2009	Pontiac	Solstice	Remote control door lock receiver	√	√	√	√	√	0513 0521 0159
2009	Pontiac	Solstice	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Pontiac	Solstice	Theft Deterrent Module	√	√	√	√		
2009	Pontiac	Solstice	Radio	√	√	√	√	√	0525
2009	Pontiac	Solstice	Personal audio link module	√	√	√			0528
2009	Pontiac	Solstice	Digital radio receiver	√	√	√	√	√	
2009	Pontiac	Solstice	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Pontiac	Solstice	Body Control Module	√	√	√	√	√	0515
2009	Pontiac	Solstice	Instrument panel cluster	√	√	√	√	√	
2009	Pontiac	Solstice	Electronic Brake Control Module	√	√	√	√	√	
2009	Pontiac	Vibe - AWD	Powertrain control module	√	√	√	√	√	
2009	Pontiac	Vibe - AWD	Engine Control Module	√	√	√	√	√	
2009	Pontiac	Vibe - AWD	Supplemental inflatable restraint		√	√	√		
2009	Pontiac	Vibe - AWD	Immobilizer		√	√	√		0568
2009	Pontiac	Vibe - AWD	Theft Deterrent Module				√	√	
2009	Pontiac	Vibe - AWD	Body Control Module		√	√	√	√	

2009	Pontiac	Vibe - AWD	Serial data gateway (if equipped)				√		
2009	Pontiac	Vibe - AWD	HVAC Control Module		√	√	√	√	
2009	Pontiac	Vibe - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Pontiac	Vibe - AWD	Digital radio receiver	√	√	√	√		
2009	Pontiac	Vibe - AWD	Radio	√	√	√	√	√	
2009	Pontiac	Vibe - AWD	Instrument panel cluster		√	√	√	√	0569
2009	Pontiac	Vibe - AWD	Veh. interface module	√	√	√	√	√	0569
2009	Pontiac	Vibe - AWD	Electronic Brake Control Module		√	√	√	√	0506
2009	Pontiac	Vibe - AWD	Tire pressure monitor	√			√		0570
2009	Pontiac	Vibe - AWD	Power steering control module		√	√	√		0536
2009	Pontiac	Vibe - FWD	Powertrain control module	√	√	√	√	√	
2009	Pontiac	Vibe - FWD	Engine Control Module	√	√	√	√	√	
2009	Pontiac	Vibe - FWD	Supplemental inflatable restraint		√	√	√		
2009	Pontiac	Vibe - FWD	Immobilizer		√	√	√		0568
2009	Pontiac	Vibe - FWD	Theft Deterrent Module				√	√	
2009	Pontiac	Vibe - FWD	Body Control Module		√	√	√	√	
2009	Pontiac	Vibe - FWD	Serial data gateway (if equipped)				√		
2009	Pontiac	Vibe - FWD	HVAC Control Module		√	√	√	√	
2009	Pontiac	Vibe - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Pontiac	Vibe - FWD	Digital radio receiver	√	√	√	√		
2009	Pontiac	Vibe - FWD	Radio	√	√	√	√	√	
2009	Pontiac	Vibe - FWD	Instrument panel cluster		√	√	√	√	0569
2009	Pontiac	Vibe - FWD	Veh. interface module	√	√	√	√	√	0569
2009	Pontiac	Vibe - FWD	Electronic Brake Control Module		√	√	√	√	0506
2009	Pontiac	Vibe - FWD	Tire pressure monitor	√			√		0570
2009	Pontiac	Vibe - FWD	Power steering control module		√	√	√		0536
2009	Pontiac	Wave	Engine Control Module	√	√	√	√	√	0493
2009	Pontiac	Wave	Transmission control module	√	√	√	√	√	0493
2009	Pontiac	Wave	Instrument panel cluster	√	√	√	√	√	
2009	Pontiac	Wave	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Pontiac	Wave	Radio	√	√	√			
2009	Pontiac	Wave	Theft Deterrent Module	√	√	√	√		
2009	Pontiac	Wave	Passenger presence system	√	√	√	√		0537
2009	Pontiac	Wave	Supplemental inflatable restraint	√	√	√	√	√	0494 0495
2009	Pontiac	Wave	Immobilizer	√	√	√	√	√	0508
2009	Pontiac	Wave	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Pontiac	Wave	Tire pressure monitor	√	√	√	√		0510 0511
2009	Saturn	AURA	Engine Control Module	√	√	√	√	√	0493
2009	Saturn	AURA	Transmission control module	√	√	√	√	√	0493
2009	Saturn	AURA	Passenger presence system		√	√			
2009	Saturn	AURA	Remote control door lock receiver	√	√	√	√	√	0513 0159



2009	Saturn	AURA	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Saturn	AURA	Theft Deterrent Module	√	√	√	√		
2009	Saturn	AURA	Digital radio receiver	√	√	√	√	√	
2009	Saturn	AURA	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Saturn	AURA	Instrument panel cluster	√	√	√	√	√	
2009	Saturn	AURA	Body Control Module	√	√	√	√	√	0500 0515
2009	Saturn	AURA	Radio	√	√	√	√	√	0525
2009	Saturn	AURA	Personal audio link module	√	√	√			0528
2009	Saturn	AURA	HVAC Control Module	√	√	√	√	√	0547
2009	Saturn	AURA	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Saturn	AURA	Power steering control module	√	√	√	√	√	
2009	Saturn	AURA	Passenger presence system		√	√			
2009	Saturn	AURA	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Saturn	AURA	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Saturn	AURA	Theft Deterrent Module	√	√	√	√		
2009	Saturn	AURA	Digital radio receiver	√	√	√	√	√	
2009	Saturn	AURA	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Saturn	AURA	Instrument panel cluster	√	√	√	√	√	
2009	Saturn	AURA	Body Control Module	√	√	√	√	√	0500 0515
2009	Saturn	AURA	Radio	√	√	√	√	√	0525
2009	Saturn	AURA	Personal audio link module	√	√	√			0528
2009	Saturn	AURA	HVAC Control Module	√	√	√	√	√	0547
2009	Saturn	AURA	Power steering control module	√	√	√	√	√	
2009	Saturn	AURA	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Saturn	AURA	Transmission control module		√	√	√	√	
2009	Saturn	AURA	Battery Energy Control Module				√	√	
2009	Saturn	AURA	Starter/Generator Control Modul				√	√	
2009	Saturn	AURA	Engine Control Module	√	√	√	√	√	0566 0567 0493
2009	Saturn	Sky	Transmission control module	√	√	√	√	√	
2009	Saturn	Sky	Engine Control Module	√	√	√	√	√	0493
2009	Saturn	Sky	Passenger presence system		√	√			
2009	Saturn	Sky	Remote control door lock receiver	√	√	√	√	√	0513 0521 0159
2009	Saturn	Sky	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Saturn	Sky	Theft Deterrent Module	√	√	√	√		
2009	Saturn	Sky	Radio	√	√	√	√	√	0525
2009	Saturn	Sky	Personal audio link module	√	√	√			0528
2009	Saturn	Sky	Digital radio receiver	√	√	√	√	√	
2009	Saturn	Sky	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Saturn	Sky	Body Control Module	√	√	√	√	√	0515
2009	Saturn	Sky	Instrument panel cluster	√	√	√	√	√	
2009	Saturn	Sky	Electronic Brake Control Module	√	√	√	√	√	

2009	Alpheon	Damas	Transmission control module	√	√	√	√	√	
2009	Alpheon	Damas	Engine Control Module	√	√	√	√	√	0507
2009	Alpheon	Labo	Transmission control module	√	√	√	√	√	
2009	Alpheon	Labo	Engine Control Module	√	√	√	√	√	0507
2009	Alpheon	Others	Engine Control Module	√	√	√	√	√	0507
2009	Alpheon	Others	Supplemental inflatable restraint	√	√	√	√		
2009	Alpheon	Others	Immobilizer						0508
2009	Alpheon	Others	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Alpheon	Others	Transmission control module	√	√	√	√	√	0493
2009	Alpheon	Others	ISU	√	√	√	√	√	
2009	Alpheon	Kalos	Engine Control Module	√	√	√	√	√	0507
2009	Alpheon	Kalos	Transmission control module	√	√	√	√	√	0507
2009	Alpheon	Kalos	Immobilizer						0508
2009	Alpheon	Kalos	Supplemental inflatable restraint	√	√	√	√	√	0508
2009	Alpheon	Gentra	Engine Control Module	√	√	√	√	√	0493
2009	Alpheon	Gentra	Transmission control module	√	√	√	√	√	0493
2009	Alpheon	Gentra	Immobilizer						0508
2009	Alpheon	Gentra	Supplemental inflatable restraint	√	√	√	√	√	0508
2009	Buick	Enclave - AWD	Transmission control module		√	√	√	√	
2009	Buick	Enclave - AWD	Engine Control Module	√	√	√	√	√	
2009	Buick	Enclave - AWD	Passenger presence system	√	√	√	√	√	
2009	Buick	Enclave - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Buick	Enclave - AWD	Rollover sensor	√	√	√	√		0541
2009	Buick	Enclave - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Buick	Enclave - AWD	Theft Deterrent Module	√	√	√	√		
2009	Buick	Enclave - AWD	Personal audio link module	√	√	√			0528 0529
2009	Buick	Enclave - AWD	Radio	√	√	√	√	√	
2009	Buick	Enclave - AWD	Digital radio receiver	√	√	√	√	√	
2009	Buick	Enclave - AWD	Headlamp Control Module	√	√	√			
2009	Buick	Enclave - AWD	Rear HVAC/RSA	√	√	√	√	√	
2009	Buick	Enclave - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Buick	Enclave - AWD	Memory seat module	√	√	√	√	√	
2009	Buick	Enclave - AWD	Park assist module	√	√	√	√	√	
2009	Buick	Enclave - AWD	Liftgate module	√	√	√	√	√	
2009	Buick	Enclave - AWD	Instrument panel cluster	√	√	√	√	√	
2009	Buick	Enclave - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Buick	Enclave - AWD	Body Control Module	√	√	√	√	√	0499 0497
2009	Buick	Enclave - AWD	Driver door switch	√	√	√	√	√	0527
2009	Buick	Enclave - AWD	Passenger door switch	√	√	√	√	√	0527
2009	Buick	Enclave - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Buick	Enclave - AWD	Rear drive system	√	√	√	√	√	0530

2009	Buick	Enclave - FWD	Transmission control module		√	√	√	√	
2009	Buick	Enclave - FWD	Engine Control Module	√	√	√	√	√	
2009	Buick	Enclave - FWD	Passenger presence system	√	√	√	√	√	
2009	Buick	Enclave - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Buick	Enclave - FWD	Rollover sensor	√	√	√	√		0541
2009	Buick	Enclave - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Buick	Enclave - FWD	Theft Deterrent Module	√	√	√	√		
2009	Buick	Enclave - FWD	Personal audio link module	√	√	√			0528 0529
2009	Buick	Enclave - FWD	Radio	√	√	√	√	√	
2009	Buick	Enclave - FWD	Digital radio receiver	√	√	√	√	√	
2009	Buick	Enclave - FWD	Headlamp Control Module	√	√	√			
2009	Buick	Enclave - FWD	Rear HVAC/RSA	√	√	√	√	√	
2009	Buick	Enclave - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Buick	Enclave - FWD	Memory seat module	√	√	√	√	√	
2009	Buick	Enclave - FWD	Park assist module	√	√	√	√	√	
2009	Buick	Enclave - FWD	Liftgate module	√	√	√	√	√	
2009	Buick	Enclave - FWD	Instrument panel cluster	√	√	√	√	√	
2009	Buick	Enclave - FWD	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Buick	Enclave - FWD	Body Control Module	√	√	√	√	√	0499 0497
2009	Buick	Enclave - FWD	Driver door switch	√	√	√	√	√	0527
2009	Buick	Enclave - FWD	Passenger door switch	√	√	√	√	√	0527
2009	Buick	Enclave - FWD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Buick	Enclave - FWD	Rear drive system	√	√	√	√	√	0530
2009	Cadillac	Escalade	Transmission control module		√	√	√	√	
2009	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2009	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	
2009	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Cadillac	Escalade	Rollover sensor	√	√	√	√		0541
2009	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2009	Cadillac	Escalade	Digital radio receiver	√	√	√	√	√	
2009	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2009	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Cadillac	Escalade	Inside rear view mirror module	√	√	√			
2009	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2009	Cadillac	Escalade	Park assist module	√	√	√	√	√	
2009	Cadillac	Escalade	Personal audio link module	√	√	√			0528
2009	Cadillac	Escalade	Radio	√	√	√	√	√	
2009	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2009	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2009	Cadillac	Escalade	Right side object detection module	√	√	√	√		

2009	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2009	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2009	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2009	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0497
2009	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2009	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2009	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	0529
2009	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2009	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	
2009	Cadillac	Escalade	Electronic suspension control	√	√	√	√	√	0532
2009	Cadillac	Escalade	Trailer brake control module	√	√	√	√	√	
2009	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Cadillac	Escalade	Transmission control module		√	√	√	√	
2009	Cadillac	Escalade	Engine Control Module	√	√	√	√	√	0493
2009	Cadillac	Escalade	Fuel Pump Control Module	√	√	√	√	√	
2009	Cadillac	Escalade	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Cadillac	Escalade	Rollover sensor	√	√	√	√		0541
2009	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Cadillac	Escalade	Theft Deterrent Module	√	√	√	√		
2009	Cadillac	Escalade	Digital radio receiver	√	√	√	√	√	
2009	Cadillac	Escalade	Rear HVAC/RSA	√	√	√	√	√	
2009	Cadillac	Escalade	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Cadillac	Escalade	Inside rear view mirror module	√	√	√			
2009	Cadillac	Escalade	Rear heated seat module	√	√	√	√		
2009	Cadillac	Escalade	Park assist module	√	√	√	√	√	
2009	Cadillac	Escalade	Personal audio link module	√	√	√			0528
2009	Cadillac	Escalade	Radio	√	√	√	√	√	
2009	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2009	Cadillac	Escalade	Left side object detection module	√	√	√	√	√	
2009	Cadillac	Escalade	Right side object detection module	√	√	√	√		
2009	Cadillac	Escalade	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Cadillac	Escalade	Assist step controller	√	√	√	√	√	0531
2009	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0498
2009	Cadillac	Escalade	Liftgate module	√	√	√	√	√	
2009	Cadillac	Escalade	Body Control Module	√	√	√	√	√	0497
2009	Cadillac	Escalade	Memory seat module	√	√	√	√	√	
2009	Cadillac	Escalade	Passenger presence system	√	√	√	√		
2009	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	0529
2009	Cadillac	Escalade	Driver door switch	√	√	√	√	√	
2009	Cadillac	Escalade	Passenger door switch	√	√	√	√	√	

2009	Cadillac	Escalade	Electronic suension control	√	√	√	√	√	0532
2009	Cadillac	Escalade	Trailer brake control module	√	√	√	√	√	
2009	Cadillac	Escalade	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Cadillac	Escalade Hybrid	Rollover sensor	√	√	√	√		0541
2009	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2009	Cadillac	Escalade Hybrid	Digital radio receiver	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√			
2009	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		
2009	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528
2009	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		
2009	Cadillac	Escalade Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	A/C compressor control module	√	√	√	√		
2009	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2009	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0497
2009	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2009	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Electronic suension control	√	√	√	√	√	0532
2009	Cadillac	Escalade Hybrid	Trailer brake control module	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2009	Cadillac	Escalade Hybrid	Power steering control module	√	√	√	√	√	0536
2009	Cadillac	Escalade Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Cadillac	Escalade Hybrid	Rollover sensor	√	√	√	√		0541
2009	Cadillac	Escalade Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Cadillac	Escalade Hybrid	Theft Deterrent Module	√	√	√	√		
2009	Cadillac	Escalade Hybrid	Digital radio receiver	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Inside rear view mirror module	√	√	√			
2009	Cadillac	Escalade Hybrid	Rear heated seat module	√	√	√	√		

2009	Cadillac	Escalade Hybrid	Park assist module	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Personal audio link module	√	√	√			0528
2009	Cadillac	Escalade Hybrid	Radio	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Instrument panel cluster	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Left side object detection module	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Right side object detection module	√	√	√	√		
2009	Cadillac	Escalade Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	A/C compressor control module	√	√	√	√		
2009	Cadillac	Escalade Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0498
2009	Cadillac	Escalade Hybrid	Liftgate module	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Body Control Module	√	√	√	√	√	0497
2009	Cadillac	Escalade Hybrid	Passenger presence system	√	√	√	√		
2009	Cadillac	Escalade Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Cadillac	Escalade Hybrid	Amplifier (bose)	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Memory seat module	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Driver door switch	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Passenger door switch	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Electronic suension control	√	√	√	√	√	0532
2009	Cadillac	Escalade Hybrid	Trailer brake control module	√	√	√	√	√	
2009	Cadillac	Escalade Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2009	Cadillac	Escalade Hybrid	Power steering control module	√	√	√	√	√	0536
2009	Cadillac	SRX	Engine Control Module	√	√	√	√	√	0493
2009	Cadillac	SRX	Transmission control module	√	√	√	√	√	
2009	Cadillac	SRX	Passenger presence system	√	√	√	√		0537
2009	Cadillac	SRX	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Cadillac	SRX	Rollover sensor	√	√	√	√		0541
2009	Cadillac	SRX	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Cadillac	SRX	Theft Deterrent Module	√	√	√	√		
2009	Cadillac	SRX	TV antenna module	√	√	√	√		0504 0505
2009	Cadillac	SRX	Radio	√	√	√	√	√	
2009	Cadillac	SRX	Amplifier (bose)	√	√	√	√	√	
2009	Cadillac	SRX	Digital radio receiver	√	√	√	√	√	
2009	Cadillac	SRX	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2009	Cadillac	SRX	Rear HVAC/RSA	√	√	√	√	√	
2009	Cadillac	SRX	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Cadillac	SRX	Memory seat module	√	√	√	√	√	
2009	Cadillac	SRX	Rear seat module	√	√	√	√	√	
2009	Cadillac	SRX	Park assist module	√	√	√	√	√	
2009	Cadillac	SRX	Instrument panel cluster	√	√	√	√	√	
2009	Cadillac	SRX	Body Control Module	√	√	√	√	√	0499 0497

2009	Cadillac	SRX	HVAC Control Module	√	√	√	√	√	
2009	Cadillac	SRX	Body Control Module	√	√	√	√	√	0498
2009	Cadillac	SRX	Driver door switch	√	√	√	√	√	0527
2009	Cadillac	SRX	Passenger door switch	√	√	√	√	√	0527
2009	Cadillac	SRX	Liftgate module	√	√	√	√	√	
2009	Cadillac	SRX	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Cadillac	SRX	Electronic suension control		√	√	√	√	
2009	Cadillac	Hearse	Engine Control Module	√	√	√	√	√	0493
2009	Cadillac	Hearse	Transmission control module		√	√	√	√	
2009	Cadillac	Hearse	Radio	√	√	√	√	√	
2009	Cadillac	Hearse	Passenger presence system	√	√	√	√		0512
2009	Cadillac	Hearse	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Cadillac	Hearse	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Cadillac	Hearse	Theft Deterrent Module	√	√	√	√		
2009	Cadillac	Hearse	Amplifier (bose)	√	√	√	√	√	
2009	Cadillac	Hearse	Digital radio receiver	√	√	√	√	√	
2009	Cadillac	Hearse	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Cadillac	Hearse	Driver position module	√	√	√	√	√	
2009	Cadillac	Hearse	Rear heated seat module	√	√	√	√		
2009	Cadillac	Hearse	Body Control Module	√	√	√	√	√	0499 0497
2009	Cadillac	Hearse	Instrument panel cluster	√	√	√	√	√	
2009	Cadillac	Hearse	HVAC Control Module	√	√	√	√	√	
2009	Cadillac	Hearse	Driver door switch	√	√	√	√	√	
2009	Cadillac	Hearse	Passenger door switch	√	√	√	√	√	
2009	Cadillac	Hearse	Air suension control module	√	√	√	√	√	
2009	Cadillac	Hearse	Electronic Brake Control Module	√	√	√	√		0506
2009	Cadillac	Limousine	Engine Control Module	√	√	√	√	√	0493
2009	Cadillac	Limousine	Transmission control module		√	√	√	√	
2009	Cadillac	Limousine	Radio	√	√	√	√	√	
2009	Cadillac	Limousine	Passenger presence system	√	√	√	√		0512
2009	Cadillac	Limousine	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Cadillac	Limousine	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Cadillac	Limousine	Theft Deterrent Module	√	√	√	√		
2009	Cadillac	Limousine	Amplifier (bose)	√	√	√	√	√	
2009	Cadillac	Limousine	Digital radio receiver	√	√	√	√	√	
2009	Cadillac	Limousine	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Cadillac	Limousine	Driver position module	√	√	√	√	√	
2009	Cadillac	Limousine	Rear heated seat module	√	√	√	√		
2009	Cadillac	Limousine	Body Control Module	√	√	√	√	√	0499 0497
2009	Cadillac	Limousine	Instrument panel cluster	√	√	√	√	√	
2009	Cadillac	Limousine	HVAC Control Module	√	√	√	√	√	

2009	Cadillac	Limousine	Aux. HVAC control module	√			√	√	
2009	Cadillac	Limousine	Driver door switch	√	√	√	√	√	
2009	Cadillac	Limousine	Passenger door switch	√	√	√	√	√	
2009	Cadillac	Limousine	Air suspension control module	√	√	√	√	√	
2009	Cadillac	Limousine	Electronic Brake Control Module	√	√	√	√		0506
2009	Chevrolet	Avalanche - 2WD	Fuel Pump Control Module	√	√	√	√	√	
2009	Chevrolet	Avalanche - 2WD	Transmission control module		√	√	√	√	
2009	Chevrolet	Avalanche - 2WD	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Avalanche - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Avalanche - 2WD	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Avalanche - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Avalanche - 2WD	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Avalanche - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Chevrolet	Avalanche - 2WD	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Avalanche - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2009	Chevrolet	Avalanche - 2WD	Memory seat module	√	√	√	√	√	
2009	Chevrolet	Avalanche - 2WD	Rear heated seat module	√	√	√	√		
2009	Chevrolet	Avalanche - 2WD	Park assist module	√	√	√	√	√	
2009	Chevrolet	Avalanche - 2WD	Personal audio link module	√	√	√			0528
2009	Chevrolet	Avalanche - 2WD	Radio	√	√	√	√	√	
2009	Chevrolet	Avalanche - 2WD	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Avalanche - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Chevrolet	Avalanche - 2WD	Assist step controller	√	√	√	√	√	0531
2009	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	0498
2009	Chevrolet	Avalanche - 2WD	Driver door switch	√	√	√	√	√	
2009	Chevrolet	Avalanche - 2WD	Passenger door switch	√	√	√	√	√	
2009	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	0497
2009	Chevrolet	Avalanche - 2WD	Passenger presence system	√	√	√	√		
2009	Chevrolet	Avalanche - 2WD	Amplifier (bose)	√	√	√	√	√	0513 0159
2009	Chevrolet	Avalanche - 2WD	Electronic suspension control	√	√	√	√	√	0532
2009	Chevrolet	Avalanche - 2WD	Trailer brake control module	√	√	√	√	√	
2009	Chevrolet	Avalanche - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Avalanche - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	Chevrolet	Avalanche - 2WD	Fuel Pump Control Module	√	√	√	√	√	
2009	Chevrolet	Avalanche - 2WD	Transmission control module		√	√	√	√	
2009	Chevrolet	Avalanche - 2WD	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Avalanche - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Avalanche - 2WD	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Avalanche - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Avalanche - 2WD	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Avalanche - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496



2009	Chevrolet	Avalanche - 2WD	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Avalanche - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2009	Chevrolet	Avalanche - 2WD	Memory seat module	√	√	√	√	√	
2009	Chevrolet	Avalanche - 2WD	Rear heated seat module	√	√	√	√		
2009	Chevrolet	Avalanche - 2WD	Park assist module	√	√	√	√	√	
2009	Chevrolet	Avalanche - 2WD	Personal audio link module	√	√	√			0528
2009	Chevrolet	Avalanche - 2WD	Radio	√	√	√	√	√	
2009	Chevrolet	Avalanche - 2WD	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Avalanche - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Chevrolet	Avalanche - 2WD	Assist step controller	√	√	√	√	√	0531
2009	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	0498
2009	Chevrolet	Avalanche - 2WD	Driver door switch	√	√	√	√	√	
2009	Chevrolet	Avalanche - 2WD	Passenger door switch	√	√	√	√	√	
2009	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	0497
2009	Chevrolet	Avalanche - 2WD	Passenger presence system	√	√	√	√		
2009	Chevrolet	Avalanche - 2WD	Amplifier (bose)	√	√	√	√	√	0513 0159
2009	Chevrolet	Avalanche - 2WD	Electronic suspension control	√	√	√	√	√	0532
2009	Chevrolet	Avalanche - 2WD	Trailer brake control module	√	√	√	√	√	
2009	Chevrolet	Avalanche - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Avalanche - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	Chevrolet	Avalanche - 4WD	Fuel Pump Control Module	√	√	√	√	√	
2009	Chevrolet	Avalanche - 4WD	Transmission control module		√	√	√	√	
2009	Chevrolet	Avalanche - 4WD	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Avalanche - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Avalanche - 4WD	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Avalanche - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Avalanche - 4WD	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Avalanche - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Chevrolet	Avalanche - 4WD	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Avalanche - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2009	Chevrolet	Avalanche - 4WD	Memory seat module	√	√	√	√	√	
2009	Chevrolet	Avalanche - 4WD	Rear heated seat module	√	√	√	√		
2009	Chevrolet	Avalanche - 4WD	Park assist module	√	√	√	√	√	
2009	Chevrolet	Avalanche - 4WD	Personal audio link module	√	√	√			0528
2009	Chevrolet	Avalanche - 4WD	Radio	√	√	√	√	√	
2009	Chevrolet	Avalanche - 4WD	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Avalanche - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Chevrolet	Avalanche - 4WD	Assist step controller	√	√	√	√	√	0531
2009	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	0498
2009	Chevrolet	Avalanche - 4WD	Driver door switch	√	√	√	√	√	
2009	Chevrolet	Avalanche - 4WD	Passenger door switch	√	√	√	√	√	

2009	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	0497
2009	Chevrolet	Avalanche - 4WD	Passenger presence system	√	√	√	√		
2009	Chevrolet	Avalanche - 4WD	Amplifier (bose)	√	√	√	√	√	0513 0159
2009	Chevrolet	Avalanche - 4WD	Electronic suspension control	√	√	√	√	√	0532
2009	Chevrolet	Avalanche - 4WD	Trailer brake control module	√	√	√	√	√	
2009	Chevrolet	Avalanche - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Avalanche - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	Chevrolet	Avalanche - 4WD	Fuel Pump Control Module	√	√	√	√	√	
2009	Chevrolet	Avalanche - 4WD	Transmission control module		√	√	√	√	
2009	Chevrolet	Avalanche - 4WD	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Avalanche - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Avalanche - 4WD	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Avalanche - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Avalanche - 4WD	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Avalanche - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Chevrolet	Avalanche - 4WD	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Avalanche - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2009	Chevrolet	Avalanche - 4WD	Memory seat module	√	√	√	√	√	
2009	Chevrolet	Avalanche - 4WD	Rear heated seat module	√	√	√	√		
2009	Chevrolet	Avalanche - 4WD	Park assist module	√	√	√	√	√	
2009	Chevrolet	Avalanche - 4WD	Personal audio link module	√	√	√			0528
2009	Chevrolet	Avalanche - 4WD	Radio	√	√	√	√	√	
2009	Chevrolet	Avalanche - 4WD	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Avalanche - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Chevrolet	Avalanche - 4WD	Assist step controller	√	√	√	√	√	0531
2009	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	0498
2009	Chevrolet	Avalanche - 4WD	Driver door switch	√	√	√	√	√	
2009	Chevrolet	Avalanche - 4WD	Passenger door switch	√	√	√	√	√	
2009	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	0497
2009	Chevrolet	Avalanche - 4WD	Passenger presence system	√	√	√	√		
2009	Chevrolet	Avalanche - 4WD	Amplifier (bose)	√	√	√	√	√	0513 0159
2009	Chevrolet	Avalanche - 4WD	Electronic suspension control	√	√	√	√	√	0532
2009	Chevrolet	Avalanche - 4WD	Trailer brake control module	√	√	√	√	√	
2009	Chevrolet	Avalanche - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Avalanche - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	Chevrolet	Captiva	Transmission control module	√	√	√	√	√	
2009	Chevrolet	Captiva	Engine Control Module	√	√	√	√	√	0509
2009	Chevrolet	Captiva	Rear drive system	√	√	√	√	√	0530
2009	Chevrolet	Captiva	HVAC Control Module	√	√	√		√	
2009	Chevrolet	Captiva	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Captiva	Body Control Module	√	√	√	√	√	0497

2009	Chevrolet	Captiva	Body Control Module	√	√	√	√	√	
2009	Chevrolet	Captiva	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Captiva	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Captiva	Theft Deterrent Module	√	√	√	√	√	0497
2009	Chevrolet	Captiva	Electronic Brake Control Module	√	√	√	√	√	
2009	Chevrolet	Captiva ort	Transmission control module		√	√	√	√	
2009	Chevrolet	Captiva ort	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Captiva ort	Rear drive system	√	√	√	√	√	0530
2009	Chevrolet	Captiva ort	Radio	√	√	√	√	√	
2009	Chevrolet	Captiva ort	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Captiva ort	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Captiva ort	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Captiva ort	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Captiva ort	Body Control Module	√	√	√	√	√	0497
2009	Chevrolet	Captiva ort	HVAC Control Module	√	√	√	√	√	0500
2009	Chevrolet	Captiva ort	Passenger presence system	√	√	√	√		0537
2009	Chevrolet	Captiva ort	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Captiva ort	Electronic Brake Control Module	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 2WD	Transmission control module		√	√	√	√	
2009	Chevrolet	Cheyenne - 2WD	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Cheyenne - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2009	Chevrolet	Cheyenne - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Cheyenne - 2WD	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Cheyenne - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Cheyenne - 2WD	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Cheyenne - 2WD	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 2WD	Rear heated seat module	√	√	√	√		
2009	Chevrolet	Cheyenne - 2WD	Park assist module	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 2WD	Personal audio link module	√	√	√			0528
2009	Chevrolet	Cheyenne - 2WD	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 2WD	Body Control Module	√	√	√	√	√	0498
2009	Chevrolet	Cheyenne - 2WD	Driver door switch	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 2WD	Passenger door switch	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 2WD	Passenger presence system	√	√	√	√		
2009	Chevrolet	Cheyenne - 2WD	Amplifier (bose)	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 2WD	Trailer brake control module	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Cheyenne - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	Chevrolet	Cheyenne - 2WD	Transmission control module		√	√	√	√	
2009	Chevrolet	Cheyenne - 2WD	Engine Control Module	√	√	√	√	√	0493

2009	Chevrolet	Cheyenne - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2009	Chevrolet	Cheyenne - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Cheyenne - 2WD	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Cheyenne - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Cheyenne - 2WD	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Cheyenne - 2WD	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 2WD	Rear heated seat module	√	√	√	√		
2009	Chevrolet	Cheyenne - 2WD	Park assist module	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 2WD	Personal audio link module	√	√	√			0528
2009	Chevrolet	Cheyenne - 2WD	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 2WD	Body Control Module	√	√	√	√	√	0498
2009	Chevrolet	Cheyenne - 2WD	Driver door switch	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 2WD	Passenger door switch	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 2WD	Passenger presence system	√	√	√	√		
2009	Chevrolet	Cheyenne - 2WD	Amplifier (bose)	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 2WD	Trailer brake control module	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Cheyenne - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	Chevrolet	Cheyenne - 4WD	Transmission control module		√	√	√	√	
2009	Chevrolet	Cheyenne - 4WD	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Cheyenne - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2009	Chevrolet	Cheyenne - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Cheyenne - 4WD	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Cheyenne - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Cheyenne - 4WD	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Cheyenne - 4WD	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 4WD	Rear heated seat module	√	√	√	√		
2009	Chevrolet	Cheyenne - 4WD	Park assist module	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 4WD	Personal audio link module	√	√	√			0528
2009	Chevrolet	Cheyenne - 4WD	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 4WD	Body Control Module	√	√	√	√	√	0498
2009	Chevrolet	Cheyenne - 4WD	Driver door switch	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 4WD	Passenger door switch	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 4WD	Passenger presence system	√	√	√	√		
2009	Chevrolet	Cheyenne - 4WD	Amplifier (bose)	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 4WD	Trailer brake control module	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Cheyenne - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	Chevrolet	Cheyenne - 4WD	Transmission control module		√	√	√	√	

2009	Chevrolet	Cheyenne - 4WD	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Cheyenne - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2009	Chevrolet	Cheyenne - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Cheyenne - 4WD	Rollover sensor	√	√	√	√	√	0541
2009	Chevrolet	Cheyenne - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Cheyenne - 4WD	Theft Deterrent Module	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 4WD	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 4WD	Rear heated seat module	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 4WD	Park assist module	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 4WD	Personal audio link module	√	√	√	√	√	0528
2009	Chevrolet	Cheyenne - 4WD	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 4WD	Body Control Module	√	√	√	√	√	0498
2009	Chevrolet	Cheyenne - 4WD	Driver door switch	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 4WD	Passenger door switch	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 4WD	Passenger presence system	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 4WD	Amplifier (bose)	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 4WD	Trailer brake control module	√	√	√	√	√	
2009	Chevrolet	Cheyenne - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Cheyenne - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	Chevrolet	Colorado	Transmission control module		√	√	√	√	
2009	Chevrolet	Colorado	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Colorado	Fuel Pump Control Module	√	√	√	√	√	0493
2009	Chevrolet	Colorado	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Chevrolet	Colorado	Theft Deterrent Module	√	√	√	√	√	0170
2009	Chevrolet	Colorado	Radio	√	√	√	√	√	
2009	Chevrolet	Colorado	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	Chevrolet	Colorado	Digital radio receiver	√	√	√	√	√	0516
2009	Chevrolet	Colorado	Body Control Module	√	√	√	√	√	0550 0159
2009	Chevrolet	Colorado	Generator battery control module	√	√	√	√	√	
2009	Chevrolet	Colorado	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Colorado	Passenger presence system	√	√	√	√	√	0512
2009	Chevrolet	Colorado	Electronic Brake Control Module	√	√	√	√	√	0515
2009	Chevrolet	Colorado	Transmission control module		√	√	√	√	
2009	Chevrolet	Colorado	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Colorado	Fuel Pump Control Module	√	√	√	√	√	0493
2009	Chevrolet	Colorado	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Chevrolet	Colorado	Theft Deterrent Module	√	√	√	√	√	0170
2009	Chevrolet	Colorado	Radio	√	√	√	√	√	
2009	Chevrolet	Colorado	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	Chevrolet	Colorado	Digital radio receiver	√	√	√	√	√	0516

2009	Chevrolet	Colorado	Body Control Module	√	√	√	√	√	0550 0159
2009	Chevrolet	Colorado	Generator battery control module	√	√	√	√	√	
2009	Chevrolet	Colorado	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Colorado	Passenger presence system	√	√	√	√	√	0512
2009	Chevrolet	Colorado	Electronic Brake Control Module	√	√	√	√	√	0515
2009	Chevrolet	Equinox	Transmission control module		√	√	√	√	
2009	Chevrolet	Equinox	Engine Control Module	√	√	√	√	√	
2009	Chevrolet	Equinox	Rear drive system	√	√	√	√	√	0530
2009	Chevrolet	Equinox	Radio	√	√	√	√	√	
2009	Chevrolet	Equinox	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Equinox	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0585
2009	Chevrolet	Equinox	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Equinox	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Equinox	Body Control Module	√	√	√	√	√	0499 0497
2009	Chevrolet	Equinox	Passenger presence system	√	√	√	√		0537
2009	Chevrolet	Equinox	Heated seat module	√	√	√	√		
2009	Chevrolet	Equinox	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Equinox	HVAC Control Module	√	√	√	√	√	0500
2009	Chevrolet	Equinox	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Equinox	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Equinox	Power steering control module		√	√	√		
2009	Chevrolet	Equinox	Electronic Brake Control Module	√	√	√	√	√	
2009	Chevrolet	Express	Transmission control module		√	√	√	√	
2009	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Express	Fuel Pump Control Module	√	√	√	√	√	0493
2009	Chevrolet	Express	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2009	Chevrolet	Express	Radio	√	√	√	√	√	
2009	Chevrolet	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Express	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Express	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Express	Body Control Module	√	√	√	√	√	0497
2009	Chevrolet	Express	Passenger presence system	√	√	√	√		0537
2009	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Express	Transmission control module		√	√	√	√	
2009	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Express	Fuel Pump Control Module	√	√	√	√	√	0493
2009	Chevrolet	Express	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2009	Chevrolet	Express	Radio	√	√	√	√	√	
2009	Chevrolet	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159

2009	Chevrolet	Express	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Express	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Express	Body Control Module	√	√	√	√	√	0497
2009	Chevrolet	Express	Passenger presence system	√	√	√	√		0537
2009	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Express	Transmission control module		√	√	√	√	
2009	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Express	Fuel Pump Control Module	√	√	√	√	√	0493
2009	Chevrolet	Express	Radio	√	√	√	√	√	
2009	Chevrolet	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Express	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Express	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Express	Body Control Module	√	√	√	√	√	0497
2009	Chevrolet	Express	Passenger presence system	√	√	√	√		0537
2009	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Express	Transmission control module		√	√	√	√	
2009	Chevrolet	Express	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Express	Fuel Pump Control Module	√	√	√	√	√	0493
2009	Chevrolet	Express	Radio	√	√	√	√	√	
2009	Chevrolet	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Express	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Express	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Express	Body Control Module	√	√	√	√	√	0497
2009	Chevrolet	Express	Passenger presence system	√	√	√	√		0537
2009	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	HHR	Transmission control module		√	√	√	√	
2009	Chevrolet	HHR	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	HHR	Radio	√	√	√	√	√	
2009	Chevrolet	HHR	Personal audio link module	√	√	√			0528
2009	Chevrolet	HHR	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	HHR	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Chevrolet	HHR	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	HHR	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	HHR	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	HHR	Vehicle comm. interface module	√	√	√	√	√	0494 0495

2009	Chevrolet	HHR	Body Control Module	√	√	√	√	√	0515
2009	Chevrolet	HHR	Passenger presence system		√	√			
2009	Chevrolet	HHR	Driver information center	√	√	√	√	√	
2009	Chevrolet	HHR	Electronic Brake Control Module	√	√	√	√	√	
2009	Chevrolet	HHR	Power steering control module	√	√	√	√	√	
2009	Chevrolet	HHR panel	Transmission control module		√	√	√	√	
2009	Chevrolet	HHR panel	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	HHR panel	Radio	√	√	√	√	√	
2009	Chevrolet	HHR panel	Personal audio link module	√	√	√			0528
2009	Chevrolet	HHR panel	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	HHR panel	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Chevrolet	HHR panel	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	HHR panel	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	HHR panel	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Chevrolet	HHR panel	Body Control Module	√	√	√	√	√	0515
2009	Chevrolet	HHR panel	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	HHR panel	Passenger presence system		√	√			
2009	Chevrolet	HHR panel	Driver information center	√	√	√	√	√	
2009	Chevrolet	HHR panel	Electronic Brake Control Module	√	√	√	√	√	
2009	Chevrolet	HHR panel	Power steering control module	√	√	√	√	√	
2009	Chevrolet	Silverado	Transmission control module		√	√	√	√	
2009	Chevrolet	Silverado	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Silverado	Fuel Pump Control Module	√	√	√	√	√	0493
2009	Chevrolet	Silverado	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Silverado	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Silverado	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Silverado	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Silverado	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Chevrolet	Silverado	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Silverado	Rear HVAC/RSA	√	√	√	√	√	
2009	Chevrolet	Silverado	Memory seat module	√	√	√	√	√	
2009	Chevrolet	Silverado	Rear heated seat module	√	√	√	√		
2009	Chevrolet	Silverado	Park assist module	√	√	√	√	√	
2009	Chevrolet	Silverado	Personal audio link module	√	√	√			0528
2009	Chevrolet	Silverado	Radio	√	√	√	√	√	
2009	Chevrolet	Silverado	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Silverado	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0498
2009	Chevrolet	Silverado	Driver door switch	√	√	√	√	√	
2009	Chevrolet	Silverado	Passenger door switch	√	√	√	√	√	
2009	Chevrolet	Silverado	Passenger presence system	√	√	√	√		



2009	Chevrolet	Silverado	Amplifier (bose)	√	√	√	√	√	
2009	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0497
2009	Chevrolet	Silverado	Electronic suension control	√	√	√	√	√	0532
2009	Chevrolet	Silverado	Trailer brake control module	√	√	√	√	√	
2009	Chevrolet	Silverado	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Silverado	Transfer Case Control Module	√	√	√	√	√	0493
2009	Chevrolet	Silverado	Transmission control module		√	√	√	√	
2009	Chevrolet	Silverado	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Silverado	Fuel Pump Control Module	√	√	√	√	√	0493
2009	Chevrolet	Silverado	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Silverado	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Silverado	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Silverado	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Silverado	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Chevrolet	Silverado	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Silverado	Rear HVAC/RSA	√	√	√	√	√	
2009	Chevrolet	Silverado	Memory seat module	√	√	√	√	√	
2009	Chevrolet	Silverado	Rear heated seat module	√	√	√	√		
2009	Chevrolet	Silverado	Park assist module	√	√	√	√	√	
2009	Chevrolet	Silverado	Personal audio link module	√	√	√			0528
2009	Chevrolet	Silverado	Radio	√	√	√	√	√	
2009	Chevrolet	Silverado	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Silverado	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0498
2009	Chevrolet	Silverado	Driver door switch	√	√	√	√	√	
2009	Chevrolet	Silverado	Passenger door switch	√	√	√	√	√	
2009	Chevrolet	Silverado	Passenger presence system	√	√	√	√		
2009	Chevrolet	Silverado	Amplifier (bose)	√	√	√	√	√	
2009	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0497
2009	Chevrolet	Silverado	Electronic suension control	√	√	√	√	√	0532
2009	Chevrolet	Silverado	Trailer brake control module	√	√	√	√	√	
2009	Chevrolet	Silverado	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Silverado	Transfer Case Control Module	√	√	√	√	√	0493
2009	Chevrolet	Silverado Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Silverado Hybrid	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Silverado Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Silverado Hybrid	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Silverado Hybrid	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Memory seat module	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Rear heated seat module	√	√	√	√		

2009	Chevrolet	Silverado Hybrid	Park assist module	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Personal audio link module	√	√	√			0528
2009	Chevrolet	Silverado Hybrid	Radio	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	A/C compressor control module	√	√	√	√		
2009	Chevrolet	Silverado Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Chevrolet	Silverado Hybrid	Body Control Module	√	√	√	√	√	0498
2009	Chevrolet	Silverado Hybrid	Driver door switch	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Passenger door switch	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Passenger presence system	√	√	√	√		
2009	Chevrolet	Silverado Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Chevrolet	Silverado Hybrid	Amplifier (bose)	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Body Control Module	√	√	√	√	√	0497
2009	Chevrolet	Silverado Hybrid	Electronic suspension control	√	√	√	√	√	0532
2009	Chevrolet	Silverado Hybrid	Trailer brake control module	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2009	Chevrolet	Silverado Hybrid	Power steering control module	√	√	√	√	√	0536
2009	Chevrolet	Silverado Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Transmission control module		√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Accessory power module	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Silverado Hybrid	Transfer Case Control Module	√	√	√	√	√	0493
2009	Chevrolet	Silverado Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Silverado Hybrid	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Silverado Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Silverado Hybrid	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Silverado Hybrid	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Memory seat module	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Rear heated seat module	√	√	√	√		
2009	Chevrolet	Silverado Hybrid	Park assist module	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Personal audio link module	√	√	√			0528
2009	Chevrolet	Silverado Hybrid	Radio	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	A/C compressor control module	√	√	√	√		
2009	Chevrolet	Silverado Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Chevrolet	Silverado Hybrid	Body Control Module	√	√	√	√	√	0498
2009	Chevrolet	Silverado Hybrid	Driver door switch	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Passenger door switch	√	√	√	√	√	

2009	Chevrolet	Silverado Hybrid	Passenger presence system	√	√	√	√		
2009	Chevrolet	Silverado Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Chevrolet	Silverado Hybrid	Amplifier (bose)	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Body Control Module	√	√	√	√	√	0497
2009	Chevrolet	Silverado Hybrid	Electronic suension control	√	√	√	√	√	0532
2009	Chevrolet	Silverado Hybrid	Trailer brake control module	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2009	Chevrolet	Silverado Hybrid	Power steering control module	√	√	√	√	√	0536
2009	Chevrolet	Silverado Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Transmission control module		√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Accessory power module	√	√	√	√	√	
2009	Chevrolet	Silverado Hybrid	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Silverado Hybrid	Transfer Case Control Module	√	√	√	√	√	0493
2009	Chevrolet	Suburban - 2WD	Fuel Pump Control Module	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Transmission control module		√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Suburban - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Suburban - 2WD	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Suburban - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Suburban - 2WD	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Suburban - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Chevrolet	Suburban - 2WD	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Memory seat module	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Rear heated seat module	√	√	√	√		
2009	Chevrolet	Suburban - 2WD	Park assist module	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Personal audio link module	√	√	√			0528
2009	Chevrolet	Suburban - 2WD	Radio	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Left side object detection module	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Right side object detection module	√	√	√	√		
2009	Chevrolet	Suburban - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Chevrolet	Suburban - 2WD	Assist step controller	√	√	√	√	√	0531
2009	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	0498
2009	Chevrolet	Suburban - 2WD	Driver door switch	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Liftgate module	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Passenger door switch	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	0497
2009	Chevrolet	Suburban - 2WD	Passenger presence system	√	√	√	√		
2009	Chevrolet	Suburban - 2WD	Amplifier (bose)	√	√	√	√	√	0513 0159
2009	Chevrolet	Suburban - 2WD	Electronic suension control	√	√	√	√	√	0532

2009	Chevrolet	Suburban - 2WD	Trailer brake control module	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Suburban - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	Chevrolet	Suburban - 2WD	Fuel Pump Control Module	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Transmission control module		√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Suburban - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Suburban - 2WD	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Suburban - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Suburban - 2WD	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Suburban - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Chevrolet	Suburban - 2WD	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Memory seat module	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Rear heated seat module	√	√	√	√		
2009	Chevrolet	Suburban - 2WD	Park assist module	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Personal audio link module	√	√	√			0528
2009	Chevrolet	Suburban - 2WD	Radio	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Left side object detection module	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Right side object detection module	√	√	√	√		
2009	Chevrolet	Suburban - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Chevrolet	Suburban - 2WD	Assist step controller	√	√	√	√	√	0531
2009	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	0498
2009	Chevrolet	Suburban - 2WD	Driver door switch	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Liftgate module	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Passenger door switch	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	0497
2009	Chevrolet	Suburban - 2WD	Passenger presence system	√	√	√	√		
2009	Chevrolet	Suburban - 2WD	Amplifier (bose)	√	√	√	√	√	0513 0159
2009	Chevrolet	Suburban - 2WD	Electronic suspension control	√	√	√	√	√	0532
2009	Chevrolet	Suburban - 2WD	Trailer brake control module	√	√	√	√	√	
2009	Chevrolet	Suburban - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Suburban - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	Chevrolet	Suburban - 4WD	Fuel Pump Control Module	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Transmission control module		√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Suburban - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Suburban - 4WD	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Suburban - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Suburban - 4WD	Theft Deterrent Module	√	√	√	√		

2009	Chevrolet	Suburban - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Chevrolet	Suburban - 4WD	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Memory seat module	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Rear heated seat module	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Park assist module	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Personal audio link module	√	√	√			0528
2009	Chevrolet	Suburban - 4WD	Radio	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Left side object detection module	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Right side object detection module	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Chevrolet	Suburban - 4WD	Assist step controller	√	√	√	√	√	0531
2009	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	0498
2009	Chevrolet	Suburban - 4WD	Driver door switch	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Liftgate module	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Passenger door switch	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	0497
2009	Chevrolet	Suburban - 4WD	Passenger presence system	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Amplifier (bose)	√	√	√	√	√	0513 0159
2009	Chevrolet	Suburban - 4WD	Electronic suspension control	√	√	√	√	√	0532
2009	Chevrolet	Suburban - 4WD	Trailer brake control module	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Suburban - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	Chevrolet	Suburban - 4WD	Fuel Pump Control Module	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Transmission control module		√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Suburban - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Suburban - 4WD	Rollover sensor	√	√	√	√	√	0541
2009	Chevrolet	Suburban - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Suburban - 4WD	Theft Deterrent Module	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Chevrolet	Suburban - 4WD	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Memory seat module	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Rear heated seat module	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Park assist module	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Personal audio link module	√	√	√			0528
2009	Chevrolet	Suburban - 4WD	Radio	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Left side object detection module	√	√	√	√	√	

2009	Chevrolet	Suburban - 4WD	Right side object detection module	√	√	√	√		
2009	Chevrolet	Suburban - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Chevrolet	Suburban - 4WD	Assist step controller	√	√	√	√	√	0531
2009	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	0498
2009	Chevrolet	Suburban - 4WD	Driver door switch	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Liftgate module	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Passenger door switch	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	0497
2009	Chevrolet	Suburban - 4WD	Passenger presence system	√	√	√	√		
2009	Chevrolet	Suburban - 4WD	Amplifier (bose)	√	√	√	√	√	0513 0159
2009	Chevrolet	Suburban - 4WD	Electronic suspension control	√	√	√	√	√	0532
2009	Chevrolet	Suburban - 4WD	Trailer brake control module	√	√	√	√	√	
2009	Chevrolet	Suburban - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Suburban - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	Chevrolet	Tahoe	Fuel Pump Control Module	√	√	√	√	√	
2009	Chevrolet	Tahoe	Transmission control module		√	√	√	√	
2009	Chevrolet	Tahoe	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Tahoe	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Tahoe	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Tahoe	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Tahoe	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Tahoe	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Chevrolet	Tahoe	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Tahoe	Rear HVAC/RSA	√	√	√	√	√	
2009	Chevrolet	Tahoe	Memory seat module	√	√	√	√	√	
2009	Chevrolet	Tahoe	Rear heated seat module	√	√	√	√		
2009	Chevrolet	Tahoe	Park assist module	√	√	√	√	√	
2009	Chevrolet	Tahoe	Personal audio link module	√	√	√			0528
2009	Chevrolet	Tahoe	Radio	√	√	√	√	√	
2009	Chevrolet	Tahoe	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Tahoe	Left side object detection module	√	√	√	√	√	
2009	Chevrolet	Tahoe	Right side object detection module	√	√	√	√		
2009	Chevrolet	Tahoe	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Chevrolet	Tahoe	Assist step controller	√	√	√	√	√	0531
2009	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0498
2009	Chevrolet	Tahoe	Driver door switch	√	√	√	√	√	
2009	Chevrolet	Tahoe	Liftgate module	√	√	√	√	√	
2009	Chevrolet	Tahoe	Passenger door switch	√	√	√	√	√	
2009	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0497
2009	Chevrolet	Tahoe	Passenger presence system	√	√	√	√		
2009	Chevrolet	Tahoe	Amplifier (bose)	√	√	√	√	√	0513 0159

2009	Chevrolet	Tahoe	Electronic suspension control	√	√	√	√	√	0532
2009	Chevrolet	Tahoe	Trailer brake control module	√	√	√	√	√	
2009	Chevrolet	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Tahoe	Transfer Case Control Module	√	√	√	√	√	0493
2009	Chevrolet	Tahoe	Fuel Pump Control Module	√	√	√	√	√	
2009	Chevrolet	Tahoe	Transmission control module		√	√	√	√	
2009	Chevrolet	Tahoe	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Tahoe	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Tahoe	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Tahoe	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Tahoe	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Tahoe	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Chevrolet	Tahoe	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Tahoe	Rear HVAC/RSA	√	√	√	√	√	
2009	Chevrolet	Tahoe	Memory seat module	√	√	√	√	√	
2009	Chevrolet	Tahoe	Rear heated seat module	√	√	√	√		
2009	Chevrolet	Tahoe	Park assist module	√	√	√	√	√	
2009	Chevrolet	Tahoe	Personal audio link module	√	√	√			0528
2009	Chevrolet	Tahoe	Radio	√	√	√	√	√	
2009	Chevrolet	Tahoe	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Tahoe	Left side object detection module	√	√	√	√	√	
2009	Chevrolet	Tahoe	Right side object detection module	√	√	√	√		
2009	Chevrolet	Tahoe	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Chevrolet	Tahoe	Assist step controller	√	√	√	√	√	0531
2009	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0498
2009	Chevrolet	Tahoe	Driver door switch	√	√	√	√	√	
2009	Chevrolet	Tahoe	Liftgate module	√	√	√	√	√	
2009	Chevrolet	Tahoe	Passenger door switch	√	√	√	√	√	
2009	Chevrolet	Tahoe	Body Control Module	√	√	√	√	√	0497
2009	Chevrolet	Tahoe	Passenger presence system	√	√	√	√		
2009	Chevrolet	Tahoe	Amplifier (bose)	√	√	√	√	√	0513 0159
2009	Chevrolet	Tahoe	Electronic suspension control	√	√	√	√	√	0532
2009	Chevrolet	Tahoe	Trailer brake control module	√	√	√	√	√	
2009	Chevrolet	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Tahoe	Transfer Case Control Module	√	√	√	√	√	0493
2009	Chevrolet	Tahoe hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Tahoe hybrid	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Tahoe hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Tahoe hybrid	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Tahoe hybrid	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Tahoe hybrid	Rear HVAC/RSA	√	√	√	√	√	

2009	Chevrolet	Tahoe hybrid	Rear heated seat module	√	√	√	√		
2009	Chevrolet	Tahoe hybrid	Park assist module	√	√	√	√	√	
2009	Chevrolet	Tahoe hybrid	Personal audio link module	√	√	√			0528
2009	Chevrolet	Tahoe hybrid	Radio	√	√	√	√	√	
2009	Chevrolet	Tahoe hybrid	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Tahoe hybrid	Left side object detection module	√	√	√	√	√	
2009	Chevrolet	Tahoe hybrid	Right side object detection module	√	√	√	√		
2009	Chevrolet	Tahoe hybrid	Serial Data Gateway Module	√	√	√	√	√	
2009	Chevrolet	Tahoe hybrid	A/C compressor control module	√	√	√	√		
2009	Chevrolet	Tahoe hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Chevrolet	Tahoe hybrid	Body Control Module	√	√	√	√	√	0498
2009	Chevrolet	Tahoe hybrid	Driver door switch	√	√	√	√	√	
2009	Chevrolet	Tahoe hybrid	Liftgate module	√	√	√	√	√	
2009	Chevrolet	Tahoe hybrid	Passenger door switch	√	√	√	√	√	
2009	Chevrolet	Tahoe hybrid	Heated seat module	√	√	√	√		
2009	Chevrolet	Tahoe hybrid	Body Control Module	√	√	√	√	√	0497
2009	Chevrolet	Tahoe hybrid	Passenger presence system	√	√	√	√		
2009	Chevrolet	Tahoe hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Chevrolet	Tahoe hybrid	Amplifier (bose)	√	√	√	√	√	
2009	Chevrolet	Tahoe hybrid	Electronic suspension control	√	√	√	√	√	0532
2009	Chevrolet	Tahoe hybrid	Trailer brake control module	√	√	√	√	√	
2009	Chevrolet	Tahoe hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2009	Chevrolet	Tahoe hybrid	Power steering control module	√	√	√	√	√	0536
2009	Chevrolet	Tahoe hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Tahoe hybrid	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Tahoe hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Tahoe hybrid	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Tahoe hybrid	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Tahoe hybrid	Rear HVAC/RSA	√	√	√	√	√	
2009	Chevrolet	Tahoe hybrid	Rear heated seat module	√	√	√	√		
2009	Chevrolet	Tahoe hybrid	Park assist module	√	√	√	√	√	
2009	Chevrolet	Tahoe hybrid	Personal audio link module	√	√	√			0528
2009	Chevrolet	Tahoe hybrid	Radio	√	√	√	√	√	
2009	Chevrolet	Tahoe hybrid	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Tahoe hybrid	Left side object detection module	√	√	√	√	√	
2009	Chevrolet	Tahoe hybrid	Right side object detection module	√	√	√	√		
2009	Chevrolet	Tahoe hybrid	Serial Data Gateway Module	√	√	√	√	√	
2009	Chevrolet	Tahoe hybrid	A/C compressor control module	√	√	√	√		
2009	Chevrolet	Tahoe hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Chevrolet	Tahoe hybrid	Body Control Module	√	√	√	√	√	0498
2009	Chevrolet	Tahoe hybrid	Driver door switch	√	√	√	√	√	



2009	Chevrolet	Tahoe hybrid	Liftgate module	√	√	√	√	√	
2009	Chevrolet	Tahoe hybrid	Passenger door switch	√	√	√	√	√	
2009	Chevrolet	Tahoe hybrid	Heated seat module	√	√	√	√		
2009	Chevrolet	Tahoe hybrid	Body Control Module	√	√	√	√	√	0497
2009	Chevrolet	Tahoe hybrid	Passenger presence system	√	√	√	√		
2009	Chevrolet	Tahoe hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Chevrolet	Tahoe hybrid	Amplifier (bose)	√	√	√	√	√	
2009	Chevrolet	Tahoe hybrid	Electronic suspension control	√	√	√	√	√	0532
2009	Chevrolet	Tahoe hybrid	Trailer brake control module	√	√	√	√	√	
2009	Chevrolet	Tahoe hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2009	Chevrolet	Tahoe hybrid	Power steering control module	√	√	√	√	√	0536
2009	Chevrolet	TrailBlazer - 2WD	Transmission control module		√	√	√	√	
2009	Chevrolet	TrailBlazer - 2WD	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	TrailBlazer - 2WD	Supplemental inflatable restraint	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 2WD	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	TrailBlazer - 2WD	Radio	√	√	√	√		
2009	Chevrolet	TrailBlazer - 2WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	Chevrolet	TrailBlazer - 2WD	Digital radio receiver	√	√	√	√	√	0516
2009	Chevrolet	TrailBlazer - 2WD	Disc player and video delay	√	√	√			
2009	Chevrolet	TrailBlazer - 2WD	Rear seat audio	√	√	√	√		
2009	Chevrolet	TrailBlazer - 2WD	Generator battery control module	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 2WD	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 2WD	Body Control Module	√	√	√	√	√	0550
2009	Chevrolet	TrailBlazer - 2WD	Driver door module	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 2WD	Driver seat module	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 2WD	HVAC Control Module	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 2WD	Liftgate module	√	√	√	√	√	0159
2009	Chevrolet	TrailBlazer - 2WD	Passenger door module	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 2WD	Passenger presence system	√	√	√	√	√	0512
2009	Chevrolet	TrailBlazer - 2WD	Navigation radio	√	√	√	√	√	0525
2009	Chevrolet	TrailBlazer - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2009	Chevrolet	TrailBlazer - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	Chevrolet	TrailBlazer - 2WD	Transmission control module		√	√	√	√	
2009	Chevrolet	TrailBlazer - 2WD	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	TrailBlazer - 2WD	Supplemental inflatable restraint	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 2WD	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	TrailBlazer - 2WD	Radio	√	√	√	√		
2009	Chevrolet	TrailBlazer - 2WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	Chevrolet	TrailBlazer - 2WD	Digital radio receiver	√	√	√	√	√	0516
2009	Chevrolet	TrailBlazer - 2WD	Disc player and video delay	√	√	√			
2009	Chevrolet	TrailBlazer - 2WD	Rear seat audio	√	√	√	√		

2009	Chevrolet	TrailBlazer - 2WD	Generator battery control module	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 2WD	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 2WD	Body Control Module	√	√	√	√	√	0550
2009	Chevrolet	TrailBlazer - 2WD	Driver door module	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 2WD	Driver seat module	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 2WD	HVAC Control Module	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 2WD	Liftgate module	√	√	√	√	√	0159
2009	Chevrolet	TrailBlazer - 2WD	Passenger door module	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 2WD	Passenger presence system	√	√	√	√	√	0512
2009	Chevrolet	TrailBlazer - 2WD	Navigation radio	√	√	√	√	√	0525
2009	Chevrolet	TrailBlazer - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2009	Chevrolet	TrailBlazer - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	Chevrolet	TrailBlazer - 4WD	Transmission control module		√	√	√	√	
2009	Chevrolet	TrailBlazer - 4WD	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	TrailBlazer - 4WD	Supplemental inflatable restraint	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 4WD	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	TrailBlazer - 4WD	Radio	√	√	√	√		
2009	Chevrolet	TrailBlazer - 4WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	Chevrolet	TrailBlazer - 4WD	Digital radio receiver	√	√	√	√	√	0516
2009	Chevrolet	TrailBlazer - 4WD	Disc player and video delay	√	√	√			
2009	Chevrolet	TrailBlazer - 4WD	Rear seat audio	√	√	√	√		
2009	Chevrolet	TrailBlazer - 4WD	Generator battery control module	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 4WD	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 4WD	Body Control Module	√	√	√	√	√	0550
2009	Chevrolet	TrailBlazer - 4WD	Driver door module	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 4WD	Driver seat module	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 4WD	HVAC Control Module	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 4WD	Liftgate module	√	√	√	√	√	0159
2009	Chevrolet	TrailBlazer - 4WD	Passenger door module	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 4WD	Passenger presence system	√	√	√	√	√	0512
2009	Chevrolet	TrailBlazer - 4WD	Navigation radio	√	√	√	√	√	0525
2009	Chevrolet	TrailBlazer - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2009	Chevrolet	TrailBlazer - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	Chevrolet	TrailBlazer - 4WD	Transmission control module		√	√	√	√	
2009	Chevrolet	TrailBlazer - 4WD	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	TrailBlazer - 4WD	Supplemental inflatable restraint	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 4WD	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	TrailBlazer - 4WD	Radio	√	√	√	√		
2009	Chevrolet	TrailBlazer - 4WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	Chevrolet	TrailBlazer - 4WD	Digital radio receiver	√	√	√	√	√	0516
2009	Chevrolet	TrailBlazer - 4WD	Disc player and video delay	√	√	√			

2009	Chevrolet	TrailBlazer - 4WD	Rear seat audio	√	√	√	√		
2009	Chevrolet	TrailBlazer - 4WD	Generator battery control module	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 4WD	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 4WD	Body Control Module	√	√	√	√	√	0550
2009	Chevrolet	TrailBlazer - 4WD	Driver door module	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 4WD	Driver seat module	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 4WD	HVAC Control Module	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 4WD	Liftgate module	√	√	√	√	√	0159
2009	Chevrolet	TrailBlazer - 4WD	Passenger door module	√	√	√	√	√	
2009	Chevrolet	TrailBlazer - 4WD	Passenger presence system	√	√	√	√	√	0512
2009	Chevrolet	TrailBlazer - 4WD	Navigation radio	√	√	√	√	√	0525
2009	Chevrolet	TrailBlazer - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2009	Chevrolet	TrailBlazer - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	Chevrolet	Traverse - AWD	Transmission control module		√	√	√	√	
2009	Chevrolet	Traverse - AWD	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Traverse - AWD	Rear drive system	√	√	√	√	√	0530
2009	Chevrolet	Traverse - AWD	Passenger presence system	√	√	√	√	√	
2009	Chevrolet	Traverse - AWD	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Traverse - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Traverse - AWD	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Traverse - AWD	Personal audio link module	√	√	√			0528 0529
2009	Chevrolet	Traverse - AWD	Radio	√	√	√	√	√	
2009	Chevrolet	Traverse - AWD	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Traverse - AWD	Rear HVAC/RSA	√	√	√	√	√	
2009	Chevrolet	Traverse - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Chevrolet	Traverse - AWD	Memory seat module	√	√	√	√	√	
2009	Chevrolet	Traverse - AWD	Park assist module	√	√	√	√	√	
2009	Chevrolet	Traverse - AWD	Liftgate module	√	√	√	√	√	
2009	Chevrolet	Traverse - AWD	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Traverse - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Chevrolet	Traverse - AWD	Body Control Module	√	√	√	√	√	0499 0497
2009	Chevrolet	Traverse - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Traverse - AWD	Driver door switch	√	√	√	√	√	0527
2009	Chevrolet	Traverse - AWD	Passenger door switch	√	√	√	√	√	0527
2009	Chevrolet	Traverse - AWD	Disc player and video delay	√	√	√	√	√	0565 0495
2009	Chevrolet	Traverse - AWD	Left power sliding door module	√	√	√	√	√	
2009	Chevrolet	Traverse - AWD	Right power sliding door module	√	√	√	√	√	0512
2009	Chevrolet	Traverse - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Traverse - FWD	Transmission control module		√	√	√	√	
2009	Chevrolet	Traverse - FWD	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Traverse - FWD	Rear drive system	√	√	√	√	√	0530

2009	Chevrolet	Traverse - FWD	Passenger presence system	√	√	√	√	√	
2009	Chevrolet	Traverse - FWD	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Traverse - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Traverse - FWD	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Traverse - FWD	Personal audio link module	√	√	√			0528 0529
2009	Chevrolet	Traverse - FWD	Radio	√	√	√	√	√	
2009	Chevrolet	Traverse - FWD	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Traverse - FWD	Rear HVAC/RSA	√	√	√	√	√	
2009	Chevrolet	Traverse - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Chevrolet	Traverse - FWD	Memory seat module	√	√	√	√	√	
2009	Chevrolet	Traverse - FWD	Park assist module	√	√	√	√	√	
2009	Chevrolet	Traverse - FWD	Liftgate module	√	√	√	√	√	
2009	Chevrolet	Traverse - FWD	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Traverse - FWD	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Chevrolet	Traverse - FWD	Body Control Module	√	√	√	√	√	0499 0497
2009	Chevrolet	Traverse - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Traverse - FWD	Driver door switch	√	√	√	√	√	0527
2009	Chevrolet	Traverse - FWD	Passenger door switch	√	√	√	√	√	0527
2009	Chevrolet	Traverse - FWD	Disc player and video dilay	√	√	√	√	√	0565 0495
2009	Chevrolet	Traverse - FWD	Left power sliding door module	√	√	√	√	√	
2009	Chevrolet	Traverse - FWD	Right power sliding door module	√	√	√	√	√	0512
2009	Chevrolet	Traverse - FWD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Chevrolet	Uplander	Rear drive system	√	√	√	√	√	0530
2009	Chevrolet	Uplander	Engine Control Module	√	√	√	√	√	
2009	Chevrolet	Uplander	Passenger presence system	√	√	√	√	√	
2009	Chevrolet	Uplander	Rollover sensor	√	√	√	√		0541
2009	Chevrolet	Uplander	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Chevrolet	Uplander	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Uplander	Personal audio link module	√	√	√			0528 0529
2009	Chevrolet	Uplander	Radio	√	√	√	√	√	
2009	Chevrolet	Uplander	Digital radio receiver	√	√	√	√	√	
2009	Chevrolet	Uplander	Rear HVAC/RSA	√	√	√	√	√	
2009	Chevrolet	Uplander	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Chevrolet	Uplander	Memory seat module	√	√	√	√	√	
2009	Chevrolet	Uplander	Park assist module	√	√	√	√	√	
2009	Chevrolet	Uplander	Liftgate module	√	√	√	√	√	
2009	Chevrolet	Uplander	Instrument panel cluster	√	√	√	√	√	
2009	Chevrolet	Uplander	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Chevrolet	Uplander	Body Control Module	√	√	√	√	√	0499 0497
2009	Chevrolet	Uplander	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Chevrolet	Uplander	Driver door switch	√	√	√	√	√	0527

2009	Chevrolet	Uplander	Passenger door switch	√	√	√	√	√	0527
2009	Chevrolet	Uplander	Disc player and video dilay	√	√	√	√	√	0565 0495
2009	Chevrolet	Uplander	Left power sliding door module	√	√	√	√	√	
2009	Chevrolet	Uplander	Right power sliding door module	√	√	√	√	√	0512
2009	Chevrolet	Uplander	Electronic Brake Control Module		√	√	√	√	0506
2009	Chevrolet	Uplander	Transmission control module	√	√	√	√	√	0493
2009	Chevrolet	Uplander Ext.	Transmission control module		√	√	√	√	
2009	Chevrolet	Uplander Ext.	Engine Control Module	√	√	√	√	√	0493
2009	Chevrolet	Uplander Ext.	Passenger presence system		√	√			0512
2009	Chevrolet	Uplander Ext.	Remote control door lock receiver	√	√	√	√	√	0159
2009	Chevrolet	Uplander Ext.	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Chevrolet	Uplander Ext.	Radio	√	√	√	√		0586 0587 0525
2009	Chevrolet	Uplander Ext.	Digital radio receiver	√	√	√	√	√	0516
2009	Chevrolet	Uplander Ext.	Disc player and video dilay	√	√	√			
2009	Chevrolet	Uplander Ext.	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	Chevrolet	Uplander Ext.	Body Control Module	√	√	√	√	√	0499
2009	Chevrolet	Uplander Ext.	HVAC Control Module	√	√	√	√	√	
2009	Chevrolet	Uplander Ext.	Left power sliding door module	√	√	√	√	√	
2009	Chevrolet	Uplander Ext.	Right power sliding door module	√	√	√	√	√	
2009	Chevrolet	Uplander Ext.	Instrument panel cluster	√	√	√	√	√	0512
2009	Chevrolet	Uplander Ext.	Electronic Brake Control Module		√	√	√	√	0506
2009	Chevrolet	Uplander Ext.	Rear drive system	√	√	√	√	√	0530
2009	Chevrolet	Uplander Ext.	Rollover sensor	√	√	√	√	√	0541
2009	Chevrolet	Uplander Ext.	Theft Deterrent Module	√	√	√	√		
2009	Chevrolet	Uplander Ext.	Personal audio link module	√	√	√	√	√	0528 0529
2009	Chevrolet	Uplander Ext.	Rear HVAC/RSA	√	√	√	√	√	0494 0495
2009	Chevrolet	Uplander Ext.	Memory seat module	√	√	√	√	√	
2009	Chevrolet	Uplander Ext.	Park assist module	√	√	√	√	√	
2009	Chevrolet	Uplander Ext.	Liftgate module	√	√	√	√	√	0500 0526
2009	Chevrolet	Uplander Ext.	Driver door switch	√	√	√	√	√	0527
2009	Chevrolet	Uplander Ext.	Passenger door switch	√	√	√	√	√	0527
2009	GMC truck	Acadia - 2WD	Transmission control module		√	√	√	√	
2009	GMC truck	Acadia - 2WD	Engine Control Module	√	√	√	√	√	
2009	GMC truck	Acadia - 2WD	Passenger presence system	√	√	√	√	√	
2009	GMC truck	Acadia - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Acadia - 2WD	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Acadia - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Acadia - 2WD	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Acadia - 2WD	Personal audio link module	√	√	√			0528 0529
2009	GMC truck	Acadia - 2WD	Radio	√	√	√	√	√	
2009	GMC truck	Acadia - 2WD	Digital radio receiver	√	√	√	√	√	

2009	GMC truck	Acadia - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2009	GMC truck	Acadia - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	GMC truck	Acadia - 2WD	Memory seat module	√	√	√	√	√	
2009	GMC truck	Acadia - 2WD	Park assist module	√	√	√	√	√	
2009	GMC truck	Acadia - 2WD	Liftgate module	√	√	√	√	√	
2009	GMC truck	Acadia - 2WD	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Acadia - 2WD	Head up dilay	√	√	√	√		
2009	GMC truck	Acadia - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2009	GMC truck	Acadia - 2WD	Body Control Module	√	√	√	√	√	0499 0497
2009	GMC truck	Acadia - 2WD	Driver door switch	√	√	√	√	√	0527
2009	GMC truck	Acadia - 2WD	Passenger door switch	√	√	√	√	√	0527
2009	GMC truck	Acadia - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Acadia - 2WD	Rear drive system	√	√	√	√	√	0530
2009	GMC truck	Acadia - 4WD	Transmission control module		√	√	√	√	
2009	GMC truck	Acadia - 4WD	Engine Control Module	√	√	√	√	√	
2009	GMC truck	Acadia - 4WD	Passenger presence system	√	√	√	√	√	
2009	GMC truck	Acadia - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Acadia - 4WD	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Acadia - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Acadia - 4WD	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Acadia - 4WD	Personal audio link module	√	√	√			0528 0529
2009	GMC truck	Acadia - 4WD	Radio	√	√	√	√	√	
2009	GMC truck	Acadia - 4WD	Digital radio receiver	√	√	√	√	√	
2009	GMC truck	Acadia - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2009	GMC truck	Acadia - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	GMC truck	Acadia - 4WD	Memory seat module	√	√	√	√	√	
2009	GMC truck	Acadia - 4WD	Park assist module	√	√	√	√	√	
2009	GMC truck	Acadia - 4WD	Liftgate module	√	√	√	√	√	
2009	GMC truck	Acadia - 4WD	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Acadia - 4WD	Head up dilay	√	√	√	√		
2009	GMC truck	Acadia - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2009	GMC truck	Acadia - 4WD	Body Control Module	√	√	√	√	√	0499 0497
2009	GMC truck	Acadia - 4WD	Driver door switch	√	√	√	√	√	0527
2009	GMC truck	Acadia - 4WD	Passenger door switch	√	√	√	√	√	0527
2009	GMC truck	Acadia - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Acadia - 4WD	Rear drive system	√	√	√	√	√	0530
2009	GMC truck	Canyon Pickup - 2WD	Transmission control module		√	√	√	√	
2009	GMC truck	Canyon Pickup - 2WD	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	GMC truck	Canyon Pickup - 2WD	Theft Deterrent Module	√	√	√	√		0170

2009	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2009	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√	√	0516
2009	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550 0159
2009	GMC truck	Canyon Pickup - 2WD	Generator battery control module	√	√	√	√	√	
2009	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Canyon Pickup - 2WD	Passenger presence system	√	√	√	√	√	0512
2009	GMC truck	Canyon Pickup - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 2WD	Transmission control module		√	√	√	√	
2009	GMC truck	Canyon Pickup - 2WD	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	GMC truck	Canyon Pickup - 2WD	Theft Deterrent Module	√	√	√	√		0170
2009	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2009	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√	√	0516
2009	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550 0159
2009	GMC truck	Canyon Pickup - 2WD	Generator battery control module	√	√	√	√	√	
2009	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Canyon Pickup - 2WD	Passenger presence system	√	√	√	√	√	0512
2009	GMC truck	Canyon Pickup - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 4WD	Transmission control module		√	√	√	√	
2009	GMC truck	Canyon Pickup - 4WD	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	GMC truck	Canyon Pickup - 4WD	Theft Deterrent Module	√	√	√	√		0170
2009	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2009	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√	√	0516
2009	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550 0159
2009	GMC truck	Canyon Pickup - 4WD	Generator battery control module	√	√	√	√	√	
2009	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Canyon Pickup - 4WD	Passenger presence system	√	√	√	√	√	0512
2009	GMC truck	Canyon Pickup - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 4WD	Transmission control module		√	√	√	√	
2009	GMC truck	Canyon Pickup - 4WD	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515



2009	GMC truck	Canyon Pickup - 4WD	Theft Deterrent Module	√	√	√	√		0170
2009	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2009	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√	√	0516
2009	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550 0159
2009	GMC truck	Canyon Pickup - 4WD	Generator battery control module	√	√	√	√	√	
2009	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Canyon Pickup - 4WD	Passenger presence system	√	√	√	√	√	0512
2009	GMC truck	Canyon Pickup - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 2WD	Transmission control module		√	√	√	√	
2009	GMC truck	Envoy - 2WD	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 2WD	Supplemental inflatable restraint	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Envoy - 2WD	Radio	√	√	√	√		
2009	GMC truck	Envoy - 2WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	GMC truck	Envoy - 2WD	Digital radio receiver	√	√	√	√	√	0516
2009	GMC truck	Envoy - 2WD	Disc player and video delay	√	√	√			
2009	GMC truck	Envoy - 2WD	Rear seat audio	√	√	√	√		
2009	GMC truck	Envoy - 2WD	Generator battery control module	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	Body Control Module	√	√	√	√	√	0550
2009	GMC truck	Envoy - 2WD	Driver door module	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	Driver seat module	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	HVAC Control Module	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	Liftgate module	√	√	√	√	√	0159
2009	GMC truck	Envoy - 2WD	Passenger door module	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	Passenger presence system	√	√	√	√	√	0512
2009	GMC truck	Envoy - 2WD	Navigation radio	√	√	√	√	√	0525
2009	GMC truck	Envoy - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 2WD	Transmission control module		√	√	√	√	
2009	GMC truck	Envoy - 2WD	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 2WD	Supplemental inflatable restraint	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Envoy - 2WD	Radio	√	√	√	√		
2009	GMC truck	Envoy - 2WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	GMC truck	Envoy - 2WD	Digital radio receiver	√	√	√	√	√	0516
2009	GMC truck	Envoy - 2WD	Disc player and video delay	√	√	√			
2009	GMC truck	Envoy - 2WD	Rear seat audio	√	√	√	√		
2009	GMC truck	Envoy - 2WD	Generator battery control module	√	√	√	√	√	



2009	GMC truck	Envoy - 2WD	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	Body Control Module	√	√	√	√	√	0550
2009	GMC truck	Envoy - 2WD	Driver door module	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	Driver seat module	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	HVAC Control Module	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	Liftgate module	√	√	√	√	√	0159
2009	GMC truck	Envoy - 2WD	Passenger door module	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	Passenger presence system	√	√	√	√	√	0512
2009	GMC truck	Envoy - 2WD	Navigation radio	√	√	√	√	√	0525
2009	GMC truck	Envoy - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 4WD	Transmission control module		√	√	√	√	
2009	GMC truck	Envoy - 4WD	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 4WD	Supplemental inflatable restraint	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Envoy - 4WD	Radio	√	√	√	√		
2009	GMC truck	Envoy - 4WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	GMC truck	Envoy - 4WD	Digital radio receiver	√	√	√	√	√	0516
2009	GMC truck	Envoy - 4WD	Disc player and video delay	√	√	√			
2009	GMC truck	Envoy - 4WD	Rear seat audio	√	√	√	√		
2009	GMC truck	Envoy - 4WD	Generator battery control module	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	Body Control Module	√	√	√	√	√	0550
2009	GMC truck	Envoy - 4WD	Driver door module	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	Driver seat module	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	HVAC Control Module	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	Liftgate module	√	√	√	√	√	0159
2009	GMC truck	Envoy - 4WD	Passenger door module	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	Passenger presence system	√	√	√	√	√	0512
2009	GMC truck	Envoy - 4WD	Navigation radio	√	√	√	√	√	0525
2009	GMC truck	Envoy - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 4WD	Transmission control module		√	√	√	√	
2009	GMC truck	Envoy - 4WD	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 4WD	Supplemental inflatable restraint	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Envoy - 4WD	Radio	√	√	√	√		
2009	GMC truck	Envoy - 4WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	GMC truck	Envoy - 4WD	Digital radio receiver	√	√	√	√	√	0516
2009	GMC truck	Envoy - 4WD	Disc player and video delay	√	√	√			
2009	GMC truck	Envoy - 4WD	Rear seat audio	√	√	√	√		

2009	GMC truck	Envoy - 4WD	Generator battery control module	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	Body Control Module	√	√	√	√	√	0550
2009	GMC truck	Envoy - 4WD	Driver door module	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	Driver seat module	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	HVAC Control Module	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	Liftgate module	√	√	√	√	√	0159
2009	GMC truck	Envoy - 4WD	Passenger door module	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	Passenger presence system	√	√	√	√	√	0512
2009	GMC truck	Envoy - 4WD	Navigation radio	√	√	√	√	√	0525
2009	GMC truck	Envoy - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Savana	Transmission control module		√	√	√	√	
2009	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2009	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2009	GMC truck	Savana	Radio	√	√	√	√	√	
2009	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Savana	Passenger presence system	√	√	√	√		0537
2009	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Savana	Transmission control module		√	√	√	√	
2009	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2009	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2009	GMC truck	Savana	Radio	√	√	√	√	√	
2009	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Savana	Passenger presence system	√	√	√	√		0537
2009	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Savana	Transmission control module		√	√	√	√	
2009	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493

2009	GMC truck	Savana	Radio	√	√	√	√	√	
2009	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Savana	Passenger presence system	√	√	√	√		0537
2009	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Savana	Transmission control module		√	√	√	√	
2009	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2009	GMC truck	Savana	Radio	√	√	√	√	√	
2009	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Savana	Passenger presence system	√	√	√	√		0537
2009	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Sierra	Transmission control module		√	√	√	√	
2009	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2009	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Sierra	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	GMC truck	Sierra	Digital radio receiver	√	√	√	√	√	
2009	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	
2009	GMC truck	Sierra	Memory seat module	√	√	√	√	√	
2009	GMC truck	Sierra	Rear heated seat module	√	√	√	√		
2009	GMC truck	Sierra	Park assist module	√	√	√	√	√	
2009	GMC truck	Sierra	Personal audio link module	√	√	√			0528
2009	GMC truck	Sierra	Radio	√	√	√	√	√	
2009	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2009	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0498
2009	GMC truck	Sierra	Driver door switch	√	√	√	√	√	
2009	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	

2009	GMC truck	Sierra	Passenger presence system	√	√	√	√		
2009	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	
2009	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Sierra	Electronic suension control	√	√	√	√	√	0532
2009	GMC truck	Sierra	Trailer brake control module	√	√	√	√	√	
2009	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Sierra	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Sierra	Transmission control module		√	√	√	√	
2009	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2009	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Sierra	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	GMC truck	Sierra	Digital radio receiver	√	√	√	√	√	
2009	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	
2009	GMC truck	Sierra	Memory seat module	√	√	√	√	√	
2009	GMC truck	Sierra	Rear heated seat module	√	√	√	√		
2009	GMC truck	Sierra	Park assist module	√	√	√	√	√	
2009	GMC truck	Sierra	Personal audio link module	√	√	√			0528
2009	GMC truck	Sierra	Radio	√	√	√	√	√	
2009	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2009	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0498
2009	GMC truck	Sierra	Driver door switch	√	√	√	√	√	
2009	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	
2009	GMC truck	Sierra	Passenger presence system	√	√	√	√		
2009	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	
2009	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Sierra	Electronic suension control	√	√	√	√	√	0532
2009	GMC truck	Sierra	Trailer brake control module	√	√	√	√	√	
2009	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Sierra	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Sierra Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Sierra Hybrid	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Sierra Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Sierra Hybrid	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Sierra Hybrid	Digital radio receiver	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Memory seat module	√	√	√	√	√	

2009	GMC truck	Sierra Hybrid	Rear heated seat module	√	√	√	√		
2009	GMC truck	Sierra Hybrid	Park assist module	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Personal audio link module	√	√	√			0528
2009	GMC truck	Sierra Hybrid	Radio	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	A/C compressor control module	√	√	√	√		
2009	GMC truck	Sierra Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2009	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0498
2009	GMC truck	Sierra Hybrid	Driver door switch	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Passenger door switch	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Passenger presence system	√	√	√	√		
2009	GMC truck	Sierra Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	GMC truck	Sierra Hybrid	Amplifier (bose)	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Sierra Hybrid	Electronic suension control	√	√	√	√	√	0532
2009	GMC truck	Sierra Hybrid	Trailer brake control module	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2009	GMC truck	Sierra Hybrid	Power steering control module	√	√	√	√	√	0536
2009	GMC truck	Sierra Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Sierra Hybrid	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Sierra Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Sierra Hybrid	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Sierra Hybrid	Digital radio receiver	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Memory seat module	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Rear heated seat module	√	√	√	√		
2009	GMC truck	Sierra Hybrid	Park assist module	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Personal audio link module	√	√	√			0528
2009	GMC truck	Sierra Hybrid	Radio	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	A/C compressor control module	√	√	√	√		
2009	GMC truck	Sierra Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2009	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0498
2009	GMC truck	Sierra Hybrid	Driver door switch	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Passenger door switch	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Passenger presence system	√	√	√	√		
2009	GMC truck	Sierra Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	GMC truck	Sierra Hybrid	Amplifier (bose)	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0497

2009	GMC truck	Sierra Hybrid	Electronic suspension control	√	√	√	√	√	0532
2009	GMC truck	Sierra Hybrid	Trailer brake control module	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2009	GMC truck	Sierra Hybrid	Power steering control module	√	√	√	√	√	0536
2009	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	
2009	GMC truck	Yukon	Transmission control module		√	√	√	√	
2009	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Yukon	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Yukon	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Yukon	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Yukon	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Yukon	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	GMC truck	Yukon	Digital radio receiver	√	√	√	√	√	
2009	GMC truck	Yukon	Rear HVAC/RSA	√	√	√	√	√	
2009	GMC truck	Yukon	Rear heated seat module	√	√	√	√		
2009	GMC truck	Yukon	Park assist module	√	√	√	√	√	
2009	GMC truck	Yukon	Personal audio link module	√	√	√			0528
2009	GMC truck	Yukon	Radio	√	√	√	√	√	
2009	GMC truck	Yukon	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Yukon	Left side object detection module	√	√	√	√	√	
2009	GMC truck	Yukon	Right side object detection module	√	√	√	√		
2009	GMC truck	Yukon	HVAC Control Module	√	√	√	√	√	0500 0526
2009	GMC truck	Yukon	Assist step controller	√	√	√	√	√	0531
2009	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0498
2009	GMC truck	Yukon	Driver door switch	√	√	√	√	√	
2009	GMC truck	Yukon	Liftgate module	√	√	√	√	√	
2009	GMC truck	Yukon	Passenger door switch	√	√	√	√	√	
2009	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Yukon	Memory seat module	√	√	√	√	√	
2009	GMC truck	Yukon	Passenger presence system	√	√	√	√		
2009	GMC truck	Yukon	Amplifier (bose)	√	√	√	√	√	0513 0159
2009	GMC truck	Yukon	Electronic suspension control	√	√	√	√	√	0532
2009	GMC truck	Yukon	Trailer brake control module	√	√	√	√	√	
2009	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	
2009	GMC truck	Yukon	Transmission control module		√	√	√	√	
2009	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Yukon	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Yukon	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Yukon	Supplemental inflatable restraint	√	√	√	√	√	0497

2009	GMC truck	Yukon	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Yukon	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	GMC truck	Yukon	Digital radio receiver	√	√	√	√	√	
2009	GMC truck	Yukon	Rear HVAC/RSA	√	√	√	√	√	
2009	GMC truck	Yukon	Rear heated seat module	√	√	√	√		
2009	GMC truck	Yukon	Park assist module	√	√	√	√	√	
2009	GMC truck	Yukon	Personal audio link module	√	√	√			0528
2009	GMC truck	Yukon	Radio	√	√	√	√	√	
2009	GMC truck	Yukon	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Yukon	Left side object detection module	√	√	√	√	√	
2009	GMC truck	Yukon	Right side object detection module	√	√	√	√		
2009	GMC truck	Yukon	HVAC Control Module	√	√	√	√	√	0500 0526
2009	GMC truck	Yukon	Assist step controller	√	√	√	√	√	0531
2009	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0498
2009	GMC truck	Yukon	Driver door switch	√	√	√	√	√	
2009	GMC truck	Yukon	Liftgate module	√	√	√	√	√	
2009	GMC truck	Yukon	Passenger door switch	√	√	√	√	√	
2009	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Yukon	Memory seat module	√	√	√	√	√	
2009	GMC truck	Yukon	Passenger presence system	√	√	√	√		
2009	GMC truck	Yukon	Amplifier (bose)	√	√	√	√	√	0513 0159
2009	GMC truck	Yukon	Electronic suspension control	√	√	√	√	√	0532
2009	GMC truck	Yukon	Trailer brake control module	√	√	√	√	√	
2009	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Yukon hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Yukon hybrid	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Yukon hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Yukon hybrid	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Yukon hybrid	Digital radio receiver	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Rear HVAC/RSA	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Rear heated seat module	√	√	√	√		
2009	GMC truck	Yukon hybrid	Park assist module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Personal audio link module	√	√	√			0528
2009	GMC truck	Yukon hybrid	Radio	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Left side object detection module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Right side object detection module	√	√	√	√		
2009	GMC truck	Yukon hybrid	Serial Data Gateway Module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	A/C compressor control module	√	√	√	√		
2009	GMC truck	Yukon hybrid	HVAC Control Module	√	√	√	√	√	0500 0526

2009	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0498
2009	GMC truck	Yukon hybrid	Driver door switch	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Liftgate module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Passenger door switch	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Heated seat module	√	√	√	√		
2009	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Yukon hybrid	Passenger presence system	√	√	√	√		
2009	GMC truck	Yukon hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	GMC truck	Yukon hybrid	Amplifier (bose)	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Electronic suspension control	√	√	√	√	√	0532
2009	GMC truck	Yukon hybrid	Trailer brake control module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2009	GMC truck	Yukon hybrid	Power steering control module	√	√	√	√	√	0536
2009	GMC truck	Yukon hybrid	Fuel Pump Control Module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Transmission control module		√	√	√	√	
2009	GMC truck	Yukon hybrid	Accessory power module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Yukon hybrid	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Yukon hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Yukon hybrid	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Yukon hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Yukon hybrid	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Yukon hybrid	Digital radio receiver	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Rear HVAC/RSA	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Rear heated seat module	√	√	√	√		
2009	GMC truck	Yukon hybrid	Park assist module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Personal audio link module	√	√	√			0528
2009	GMC truck	Yukon hybrid	Radio	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Left side object detection module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Right side object detection module	√	√	√	√		
2009	GMC truck	Yukon hybrid	Serial Data Gateway Module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	A/C compressor control module	√	√	√	√		
2009	GMC truck	Yukon hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2009	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0498
2009	GMC truck	Yukon hybrid	Driver door switch	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Liftgate module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Passenger door switch	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Heated seat module	√	√	√	√		
2009	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Yukon hybrid	Passenger presence system	√	√	√	√		



2009	GMC truck	Yukon hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	GMC truck	Yukon hybrid	Amplifier (bose)	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Electronic suension control	√	√	√	√	√	0532
2009	GMC truck	Yukon hybrid	Trailer brake control module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2009	GMC truck	Yukon hybrid	Power steering control module	√	√	√	√	√	0536
2009	GMC truck	Yukon hybrid	Fuel Pump Control Module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Transmission control module		√	√	√	√	
2009	GMC truck	Yukon hybrid	Accessory power module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Yukon hybrid	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Yukon XL	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Yukon XL	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Yukon XL	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Yukon XL	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Yukon XL	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	GMC truck	Yukon XL	Digital radio receiver	√	√	√	√	√	
2009	GMC truck	Yukon XL	Rear HVAC/RSA	√	√	√	√	√	
2009	GMC truck	Yukon XL	Rear heated seat module	√	√	√	√		
2009	GMC truck	Yukon XL	Park assist module	√	√	√	√	√	
2009	GMC truck	Yukon XL	Personal audio link module	√	√	√			0528
2009	GMC truck	Yukon XL	Radio	√	√	√	√	√	
2009	GMC truck	Yukon XL	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Yukon XL	Left side object detection module	√	√	√	√	√	
2009	GMC truck	Yukon XL	Right side object detection module	√	√	√	√		
2009	GMC truck	Yukon XL	HVAC Control Module	√	√	√	√	√	0500 0526
2009	GMC truck	Yukon XL	Assist step controller	√	√	√	√	√	0531
2009	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0498
2009	GMC truck	Yukon XL	Driver door switch	√	√	√	√	√	
2009	GMC truck	Yukon XL	Liftgate module	√	√	√	√	√	
2009	GMC truck	Yukon XL	Passenger door switch	√	√	√	√	√	
2009	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Yukon XL	Passenger presence system	√	√	√	√		
2009	GMC truck	Yukon XL	Amplifier (bose)	√	√	√	√	√	
2009	GMC truck	Yukon XL	Memory seat module	√	√	√	√	√	0513 0159
2009	GMC truck	Yukon XL	Electronic suension control	√	√	√	√	√	0532
2009	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√	√	
2009	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	
2009	GMC truck	Yukon XL	Transmission control module		√	√	√	√	
2009	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493

2009	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Yukon XL	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Yukon XL	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Yukon XL	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Yukon XL	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Yukon XL	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	GMC truck	Yukon XL	Digital radio receiver	√	√	√	√	√	
2009	GMC truck	Yukon XL	Rear HVAC/RSA	√	√	√	√	√	
2009	GMC truck	Yukon XL	Rear heated seat module	√	√	√	√		
2009	GMC truck	Yukon XL	Park assist module	√	√	√	√	√	
2009	GMC truck	Yukon XL	Personal audio link module	√	√	√			0528
2009	GMC truck	Yukon XL	Radio	√	√	√	√	√	
2009	GMC truck	Yukon XL	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Yukon XL	Left side object detection module	√	√	√	√	√	
2009	GMC truck	Yukon XL	Right side object detection module	√	√	√	√		
2009	GMC truck	Yukon XL	HVAC Control Module	√	√	√	√	√	0500 0526
2009	GMC truck	Yukon XL	Assist step controller	√	√	√	√	√	0531
2009	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0498
2009	GMC truck	Yukon XL	Driver door switch	√	√	√	√	√	
2009	GMC truck	Yukon XL	Liftgate module	√	√	√	√	√	
2009	GMC truck	Yukon XL	Passenger door switch	√	√	√	√	√	
2009	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Yukon XL	Passenger presence system	√	√	√	√		
2009	GMC truck	Yukon XL	Amplifier (bose)	√	√	√	√	√	
2009	GMC truck	Yukon XL	Memory seat module	√	√	√	√	√	0513 0159
2009	GMC truck	Yukon XL	Electronic suspension control	√	√	√	√	√	0532
2009	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√	√	
2009	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	
2009	GMC truck	Yukon XL	Transmission control module		√	√	√	√	
2009	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Others	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Others	Front dilay interface module	√	√	√			
2009	GMC truck	Others	HVAC Control Module	√	√	√		√	
2009	GMC truck	Others	Radio	√	√	√	√	√	
2009	GMC truck	Others	Body Control Module	√	√	√	√	√	
2009	GMC truck	Others	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Others	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Others	Headlamp Control Module	√	√	√	√	√	
2009	GMC truck	Others	Park assist module	√	√	√	√		

2009	GMC truck	Others	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Others	Theft Deterrent Module	√	√	√	√	√	0497
2009	GMC truck	Others	Electronic Brake Control Module	√	√	√	√	√	
2009	GMC truck	Others	Transmission control module	√	√	√	√	√	
2009	GMC truck	Others	Engine Control Module	√	√	√	√	√	0562
2009	GMC truck	Others	Rear drive system	√	√	√	√	√	0530
2009	Pontiac	Montana SV6	Transmission control module		√	√	√	√	
2009	Pontiac	Montana SV6	Engine Control Module	√	√	√	√	√	0493
2009	Pontiac	Montana SV6	Passenger presence system		√	√			0512
2009	Pontiac	Montana SV6	Remote control door lock receiver	√	√	√	√	√	0159
2009	Pontiac	Montana SV6	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Pontiac	Montana SV6	Radio	√	√	√	√		0586 0587 0525
2009	Pontiac	Montana SV6	Digital radio receiver	√	√	√	√	√	0516
2009	Pontiac	Montana SV6	Disc player and video dilay	√	√	√			
2009	Pontiac	Montana SV6	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	Pontiac	Montana SV6	Body Control Module	√	√	√	√	√	0499
2009	Pontiac	Montana SV6	HVAC Control Module	√	√	√	√	√	
2009	Pontiac	Montana SV6	Left power sliding door module	√	√	√	√	√	
2009	Pontiac	Montana SV6	Right power sliding door module	√	√	√	√	√	
2009	Pontiac	Montana SV6	Instrument panel cluster	√	√	√	√	√	0512
2009	Pontiac	Montana SV6	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Pontiac	Montana SV6 Ext.	Transmission control module		√	√	√	√	
2009	Pontiac	Montana SV6 Ext.	Engine Control Module	√	√	√	√	√	0493
2009	Pontiac	Montana SV6 Ext.	Passenger presence system		√	√			0512
2009	Pontiac	Montana SV6 Ext.	Remote control door lock receiver	√	√	√	√	√	0159
2009	Pontiac	Montana SV6 Ext.	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Pontiac	Montana SV6 Ext.	Radio	√	√	√	√		0586 0587 0525
2009	Pontiac	Montana SV6 Ext.	Digital radio receiver	√	√	√	√	√	0516
2009	Pontiac	Montana SV6 Ext.	Disc player and video dilay	√	√	√			
2009	Pontiac	Montana SV6 Ext.	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	Pontiac	Montana SV6 Ext.	Body Control Module	√	√	√	√	√	0499
2009	Pontiac	Montana SV6 Ext.	HVAC Control Module	√	√	√	√	√	
2009	Pontiac	Montana SV6 Ext.	Left power sliding door module	√	√	√	√	√	
2009	Pontiac	Montana SV6 Ext.	Right power sliding door module	√	√	√	√	√	
2009	Pontiac	Montana SV6 Ext.	Instrument panel cluster	√	√	√	√	√	0512
2009	Pontiac	Montana SV6 Ext.	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Pontiac	Torrent	Transmission control module		√	√	√	√	
2009	Pontiac	Torrent	Engine Control Module	√	√	√	√	√	0493
2009	Pontiac	Torrent	Rear drive system	√	√	√	√	√	0530
2009	Pontiac	Torrent	Radio	√	√	√	√	√	
2009	Pontiac	Torrent	Digital radio receiver	√	√	√	√	√	

2009	Pontiac	Torrent	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0585
2009	Pontiac	Torrent	Rollover sensor	√	√	√	√		0541
2009	Pontiac	Torrent	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Pontiac	Torrent	Body Control Module	√	√	√	√	√	0499 0497
2009	Pontiac	Torrent	Passenger presence system	√	√	√	√		0537
2009	Pontiac	Torrent	Heated seat module	√	√	√	√		
2009	Pontiac	Torrent	Instrument panel cluster	√	√	√	√	√	
2009	Pontiac	Torrent	HVAC Control Module	√	√	√	√	√	0500
2009	Pontiac	Torrent	Theft Deterrent Module	√	√	√	√		
2009	Pontiac	Torrent	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Pontiac	Torrent	Power steering control module		√	√	√		
2009	Pontiac	Torrent	Electronic Brake Control Module	√	√	√	√	√	
2009	Saturn	OUTLOOK - AWD	Transmission control module		√	√	√	√	
2009	Saturn	OUTLOOK - AWD	Engine Control Module	√	√	√	√	√	
2009	Saturn	OUTLOOK - AWD	Passenger presence system	√	√	√	√	√	
2009	Saturn	OUTLOOK - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Saturn	OUTLOOK - AWD	Rollover sensor	√	√	√	√		0541
2009	Saturn	OUTLOOK - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Saturn	OUTLOOK - AWD	Theft Deterrent Module	√	√	√	√		
2009	Saturn	OUTLOOK - AWD	Personal audio link module	√	√	√			0528 0529
2009	Saturn	OUTLOOK - AWD	Radio	√	√	√	√	√	
2009	Saturn	OUTLOOK - AWD	Digital radio receiver	√	√	√	√	√	
2009	Saturn	OUTLOOK - AWD	Rear HVAC/RSA	√	√	√	√	√	
2009	Saturn	OUTLOOK - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Saturn	OUTLOOK - AWD	Memory seat module	√	√	√	√	√	
2009	Saturn	OUTLOOK - AWD	Park assist module	√	√	√	√	√	
2009	Saturn	OUTLOOK - AWD	Liftgate module	√	√	√	√	√	
2009	Saturn	OUTLOOK - AWD	Instrument panel cluster	√	√	√	√	√	
2009	Saturn	OUTLOOK - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Saturn	OUTLOOK - AWD	Body Control Module	√	√	√	√	√	0499 0497
2009	Saturn	OUTLOOK - AWD	Driver door switch	√	√	√	√	√	0527
2009	Saturn	OUTLOOK - AWD	Passenger door switch	√	√	√	√	√	0527
2009	Saturn	OUTLOOK - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Saturn	OUTLOOK - 2WD	Rear drive system	√	√	√	√	√	0530
2009	Saturn	OUTLOOK - 2WD	Engine Control Module	√	√	√	√	√	
2009	Saturn	OUTLOOK - 2WD	Passenger presence system	√	√	√	√	√	
2009	Saturn	OUTLOOK - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Saturn	OUTLOOK - 2WD	Rollover sensor	√	√	√	√		0541
2009	Saturn	OUTLOOK - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Saturn	OUTLOOK - 2WD	Theft Deterrent Module	√	√	√	√		
2009	Saturn	OUTLOOK - 2WD	Personal audio link module	√	√	√			0528 0529

2009	Saturn	OUTLOOK - 2WD	Radio	√	√	√	√	√	
2009	Saturn	OUTLOOK - 2WD	Digital radio receiver	√	√	√	√	√	
2009	Saturn	OUTLOOK - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2009	Saturn	OUTLOOK - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Saturn	OUTLOOK - 2WD	Memory seat module	√	√	√	√	√	
2009	Saturn	OUTLOOK - 2WD	Park assist module	√	√	√	√	√	
2009	Saturn	OUTLOOK - 2WD	Liftgate module	√	√	√	√	√	
2009	Saturn	OUTLOOK - 2WD	Instrument panel cluster	√	√	√	√	√	
2009	Saturn	OUTLOOK - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Saturn	OUTLOOK - 2WD	Body Control Module	√	√	√	√	√	0499 0497
2009	Saturn	OUTLOOK - 2WD	Driver door switch	√	√	√	√	√	0527
2009	Saturn	OUTLOOK - 2WD	Passenger door switch	√	√	√	√	√	0527
2009	Saturn	OUTLOOK - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Saturn	VUE	Transmission control module		√	√	√	√	
2009	Saturn	VUE	Fuel Pump Control Module	√	√	√	√	√	
2009	Saturn	VUE	Engine Control Module	√	√	√	√	√	0493
2009	Saturn	VUE	Rear drive system	√	√	√	√	√	0530
2009	Saturn	VUE	Radio	√	√	√	√	√	
2009	Saturn	VUE	Digital radio receiver	√	√	√	√	√	
2009	Saturn	VUE	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Saturn	VUE	Instrument panel cluster	√	√	√	√	√	
2009	Saturn	VUE	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Saturn	VUE	Theft Deterrent Module	√	√	√	√		
2009	Saturn	VUE	Rollover sensor	√	√	√	√		0541
2009	Saturn	VUE	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Saturn	VUE	HVAC Control Module	√	√	√	√	√	0500
2009	Saturn	VUE	Passenger presence system	√	√	√	√		0537
2009	Saturn	VUE	Body Control Module	√	√	√	√	√	0499 0497
2009	Saturn	VUE	Electronic Brake Control Module	√	√	√	√	√	
2009	Saturn	VUE hybrid	Transmission control module		√	√	√	√	
2009	Saturn	VUE hybrid	Fuel Pump Control Module	√	√	√	√	√	
2009	Saturn	VUE hybrid	Engine Control Module	√	√	√	√	√	0566 0567 0493
2009	Saturn	VUE hybrid	Battery Energy Control Module				√	√	
2009	Saturn	VUE hybrid	Starter/Generator Control Modul	√	√	√	√	√	
2009	Saturn	VUE hybrid	Accessory power module	√	√	√	√	√	
2009	Saturn	VUE hybrid	Radio	√	√	√	√	√	
2009	Saturn	VUE hybrid	Digital radio receiver	√	√	√	√	√	
2009	Saturn	VUE hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Saturn	VUE hybrid	Theft Deterrent Module	√	√	√	√		
2009	Saturn	VUE hybrid	Rollover sensor	√	√	√	√		0541
2009	Saturn	VUE hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159

2009	Saturn	VUE hybrid	HVAC Control Module	√	√	√	√	√	0500
2009	Saturn	VUE hybrid	Passenger presence system	√	√	√	√		0537
2009	Saturn	VUE hybrid	Instrument panel cluster	√	√	√	√	√	
2009	Saturn	VUE hybrid	Body Control Module	√	√	√	√	√	0499 0497
2009	Saturn	VUE hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	Saturn	VUE hybrid	A/C compressor control module	√	√	√	√	√	0537
2009	Saturn	VUE hybrid	Serial Data Gateway Module	√	√	√	√	√	0494 0495
2009	Saturn	VUE hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2009	Hummer	H2	Fuel Pump Control Module	√	√	√	√	√	
2009	Hummer	H2	Transfer Case Control Module	√	√	√	√	√	
2009	Hummer	H2	Transmission control module		√	√	√	√	
2009	Hummer	H2	Engine Control Module	√	√	√	√	√	0493
2009	Hummer	H2	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Hummer	H2	Rollover sensor	√	√	√	√		0541
2009	Hummer	H2	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Hummer	H2	Theft Deterrent Module	√	√	√	√		
2009	Hummer	H2	Amplifier (bose)	√	√	√	√	√	0502
2009	Hummer	H2	Digital radio receiver	√	√	√	√	√	
2009	Hummer	H2	Rear HVAC/RSA	√	√	√	√	√	
2009	Hummer	H2	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	Hummer	H2	Memory seat module	√	√	√	√	√	
2009	Hummer	H2	Rear heated seat module	√	√	√	√		
2009	Hummer	H2	Personal audio link module	√	√	√			0528
2009	Hummer	H2	Radio	√	√	√	√	√	
2009	Hummer	H2	Instrument panel cluster	√	√	√	√	√	
2009	Hummer	H2	Body Control Module	√	√	√	√	√	0497
2009	Hummer	H2	HVAC Control Module	√	√	√	√	√	0500 0526
2009	Hummer	H2	Driver door switch	√	√	√	√	√	
2009	Hummer	H2	Passenger door switch	√	√	√	√	√	
2009	Hummer	H2	Electronic Brake Control Module	√	√	√	√	√	0506
2009	Hummer	H2	Air suspension control module	√	√	√	√	√	
2009	Hummer	H3	Engine Control Module	√	√	√	√	√	0493
2009	Hummer	H3	Fuel Pump Control Module	√	√	√	√	√	
2009	Hummer	H3	Transmission control module		√	√	√	√	
2009	Hummer	H3	Transfer Case Control Module	√	√	√	√	√	0493
2009	Hummer	H3	Radio	√	√	√	√	√	0572 0524
2009	Hummer	H3	Passenger presence system		√	√			0512
2009	Hummer	H3	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	Hummer	H3	Theft Deterrent Module	√	√	√	√		0170
2009	Hummer	H3	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	Hummer	H3	Digital radio receiver	√	√	√	√	√	0516

2009	Hummer	H3	Body Control Module	√	√	√	√	√	0550 0159
2009	Hummer	H3	Instrument panel cluster	√	√	√	√	√	
2009	Hummer	H3	Generator battery control module	√	√	√	√	√	
2009	Hummer	H3	Personal audio link module	√	√	√			0528
2009	Hummer	H3	Navigation radio	√	√	√	√	√	0525
2009	Hummer	H3	Electronic Brake Control Module	√	√	√	√	√	0493
2009	SAAB	Saab 9-7x	Transmission control module		√	√	√	√	
2009	SAAB	Saab 9-7x	Engine Control Module	√	√	√	√	√	0493
2009	SAAB	Saab 9-7x	Transfer Case Control Module	√	√	√	√	√	0493
2009	SAAB	Saab 9-7x	Passenger presence system		√	√			0512
2009	SAAB	Saab 9-7x	Supplemental inflatable restraint	√	√	√	√	√	
2009	SAAB	Saab 9-7x	Theft Deterrent Module	√	√	√	√		
2009	SAAB	Saab 9-7x	Radio	√	√	√	√	√	0572 0524
2009	SAAB	Saab 9-7x	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	SAAB	Saab 9-7x	Digital radio receiver	√	√	√	√	√	0516
2009	SAAB	Saab 9-7x	Disc player and video delay	√	√	√			
2009	SAAB	Saab 9-7x	Rear seat audio	√	√	√	√		
2009	SAAB	Saab 9-7x	Generator battery control module	√	√	√	√	√	
2009	SAAB	Saab 9-7x	Instrument panel cluster	√	√	√	√	√	
2009	SAAB	Saab 9-7x	Body Control Module	√	√	√	√	√	0550
2009	SAAB	Saab 9-7x	Driver door module	√	√	√	√	√	
2009	SAAB	Saab 9-7x	Driver seat module	√	√	√	√	√	
2009	SAAB	Saab 9-7x	HVAC Control Module	√	√	√	√	√	
2009	SAAB	Saab 9-7x	Liftgate module	√	√	√	√	√	0159
2009	SAAB	Saab 9-7x	Passenger door module	√	√	√	√	√	0512
2009	SAAB	Saab 9-7x	Navigation radio	√	√	√	√	√	0525
2009	SAAB	Saab 9-7x	Electronic Brake Control Module	√	√	√	√	√	
2009	Holden	Captiva	Engine Control Module	√	√	√	√	√	0562
2009	Holden	Captiva	Transmission control module	√	√	√	√	√	0562
2009	Holden	Captiva	Rear drive system	√	√	√	√	√	0530
2009	Holden	Captiva	HVAC Control Module	√	√	√		√	
2009	Holden	Captiva	Instrument panel cluster	√	√	√	√	√	
2009	Holden	Captiva	Body Control Module	√	√	√	√	√	0497
2009	Holden	Captiva	Body Control Module	√	√	√	√	√	
2009	Holden	Captiva	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Holden	Captiva	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Holden	Captiva	Theft Deterrent Module	√	√	√	√	√	0497
2009	Holden	Captiva	Electronic Brake Control Module	√	√	√	√	√	
2009	Holden	Captiva Maxx	Transmission control module	√	√	√	√	√	
2009	Holden	Captiva Maxx	Engine Control Module	√	√	√	√	√	
2009	Holden	Captiva Maxx	Rear drive system	√	√	√	√	√	0530

2009	Holden	Captiva Maxx	Instrument panel cluster	√	√	√	√	√	
2009	Holden	Captiva Maxx	Front dilay interface module	√	√	√			
2009	Holden	Captiva Maxx	HVAC Control Module	√	√	√		√	
2009	Holden	Captiva Maxx	Radio	√	√	√	√	√	
2009	Holden	Captiva Maxx	Body Control Module	√	√	√	√	√	
2009	Holden	Captiva Maxx	Body Control Module	√	√	√	√	√	0497
2009	Holden	Captiva Maxx	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	Holden	Captiva Maxx	Headlamp Control Module	√	√	√	√	√	
2009	Holden	Captiva Maxx	Park assist module	√	√	√	√		
2009	Holden	Captiva Maxx	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	Holden	Captiva Maxx	Theft Deterrent Module	√	√	√	√	√	0497
2009	Holden	Captiva Maxx	Electronic Brake Control Module	√	√	√	√	√	
2008	Buick	LaCrosse	Powertrain control module	√	√	√	√	√	0493
2008	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	
2008	Buick	LaCrosse	Transmission control module	√	√	√	√	√	0493
2008	Buick	LaCrosse	Remote control door lock receiver	√	√	√	√	√	0159
2008	Buick	LaCrosse	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0499
2008	Buick	LaCrosse	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0552
2008	Buick	LaCrosse	Digital radio receiver	√	√	√	√		0516
2008	Buick	LaCrosse	Vehicle comm. interface module	√	√	√	√	√	0565 0495 0585
2008	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0500
2008	Buick	LaCrosse	Instrument panel cluster	√	√	√	√	√	0159
2008	Buick	LaCrosse	Electronic Brake Control Module		√	√	√	√	0506
2008	Buick	LaCrosse (Allure in Canada)	Powertrain control module	√	√	√	√	√	0493
2008	Buick	LaCrosse (Allure in Canada)	Engine Control Module	√	√	√	√	√	
2008	Buick	LaCrosse (Allure in Canada)	Transmission control module	√	√	√	√	√	0493
2008	Buick	LaCrosse (Allure in Canada)	Remote control door lock receiver	√	√	√	√	√	0159
2008	Buick	LaCrosse (Allure in Canada)	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Buick	LaCrosse (Allure in Canada)	Body Control Module	√	√	√	√	√	0499
2008	Buick	LaCrosse (Allure in Canada)	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0552
2008	Buick	LaCrosse (Allure in Canada)	Digital radio receiver	√	√	√	√		0516
2008	Buick	LaCrosse (Allure in Canada)	Vehicle comm. interface module	√	√	√	√	√	0565 0495 0585
2008	Buick	LaCrosse (Allure in Canada)	HVAC Control Module	√	√	√	√	√	0500
2008	Buick	LaCrosse (Allure in Canada)	Instrument panel cluster	√	√	√	√	√	0159
2008	Buick	LaCrosse (Allure in Canada)	Electronic Brake Control Module		√	√	√	√	0506
2008	Buick	Lucerne	Powertrain control module	√	√	√	√	√	0493
2008	Buick	Lucerne	Engine Control Module	√	√	√	√	√	0493
2008	Buick	Lucerne	Transmission control module	√	√	√	√	√	0493
2008	Buick	Lucerne	Passenger presence system	√	√	√	√		0512



2008	Buick	Lucerne	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Buick	Lucerne	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Buick	Lucerne	Theft Deterrent Module	√	√	√	√		
2008	Buick	Lucerne	Radio	√	√	√	√	√	
2008	Buick	Lucerne	Veh direction alert alarm warn mod	√	√	√	√	√	
2008	Buick	Lucerne	Digital radio receiver	√	√	√	√		
2008	Buick	Lucerne	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Buick	Lucerne	HVAC Control Module	√	√	√	√	√	
2008	Buick	Lucerne	Body Control Module	√	√	√	√	√	0499 0497
2008	Buick	Lucerne	Left side object detection module	√	√	√	√	√	
2008	Buick	Lucerne	Right side object detection module	√	√	√	√		
2008	Buick	Lucerne	Memory seat module	√	√	√	√	√	
2008	Buick	Lucerne	Park assist module	√	√	√	√	√	
2008	Buick	Lucerne	Instrument panel cluster	√	√	√	√	√	
2008	Buick	Lucerne	Driver door switch	√	√	√	√	√	
2008	Buick	Lucerne	Passenger door switch	√	√	√	√	√	0512
2008	Buick	Lucerne	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Buick	Lucerne	Electronic suension control	√	√	√	√	√	
2008	Buick	Others	Immobilizer						0508
2008	Buick	Others	Engine Control Module	√	√	√	√	√	0507
2008	Buick	Others	Transmission control module	√	√	√	√	√	0493
2008	Cadillac	SLS	Engine Control Module	√	√	√	√	√	
2008	Cadillac	SLS	Transmission control module	√	√	√	√	√	0493
2008	Cadillac	SLS	Radio	√	√	√	√	√	
2008	Cadillac	SLS	HVAC Control Module	√	√	√	√	√	
2008	Cadillac	SLS	Rear HVAC/RSA	√	√	√	√	√	
2008	Cadillac	SLS	Amplifier (bose)		√	√	√	√	
2008	Cadillac	SLS	Remote control door lock receiver	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2008	Cadillac	SLS	TV antenna module	√	√	√	√		
2008	Cadillac	SLS	Passenger presence system		√	√			
2008	Cadillac	SLS	Driver position module	√	√	√	√	√	
2008	Cadillac	SLS	Driver door module	√	√	√	√	√	
2008	Cadillac	SLS	Driver door switch	√	√	√	√		
2008	Cadillac	SLS	Headlamp Control Module	√	√	√	√		
2008	Cadillac	SLS	Instrument panel module	√	√	√	√	√	0551
2008	Cadillac	SLS	Left rear door module	√	√	√	√	√	0560
2008	Cadillac	SLS	Passenger door module	√	√	√	√	√	0560
2008	Cadillac	SLS	Rear integration module	√	√	√	√	√	
2008	Cadillac	SLS	Right rear door module	√	√	√	√	√	0560

2008	Cadillac	SLS	Supplemental inflatable restraint	√	√	√	√	√	0559
2008	Cadillac	SLS	Instrument panel cluster	√	√	√	√	√	0580
2008	Cadillac	SLS	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Cadillac	SLS	Electronic suension control	√	√	√	√	√	
2008	Cadillac	CTS	Transmission control module		√	√	√	√	
2008	Cadillac	CTS	Engine Control Module	√	√	√	√	√	
2008	Cadillac	CTS	Transfer Case Control Module	√	√	√	√	√	
2008	Cadillac	CTS	Passenger presence system	√	√	√	√		0537
2008	Cadillac	CTS	Pedestrian Impact Detection Module	√	√	√	√	√	0501
2008	Cadillac	CTS	Headlamp Control Module	√	√	√	√	√	
2008	Cadillac	CTS	TV antenna module	√	√	√	√		0504 0505
2008	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2008	Cadillac	CTS	HVAC Control Module	√	√	√	√	√	0500
2008	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2008	Cadillac	CTS	Radio	√	√	√	√	√	
2008	Cadillac	CTS	Body Control Module	√	√	√	√	√	0499 0497
2008	Cadillac	CTS	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Cadillac	CTS	Park assist module	√	√	√	√	√	
2008	Cadillac	CTS	Memory seat module	√	√	√	√	√	0503
2008	Cadillac	CTS	Body Control Module	√	√	√	√	√	0498
2008	Cadillac	CTS	Infotainment faceplate module	√					
2008	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0585
2008	Cadillac	CTS	Driver door switch	√	√	√	√	√	
2008	Cadillac	CTS	Passenger door switch	√	√	√	√	√	
2008	Cadillac	CTS	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Cadillac	DTS	Engine Control Module	√	√	√	√	√	0493
2008	Cadillac	DTS	Transmission control module		√	√	√	√	
2008	Cadillac	DTS	Passenger presence system	√	√	√	√		0512
2008	Cadillac	DTS	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Cadillac	DTS	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Cadillac	DTS	Theft Deterrent Module	√	√	√	√		
2008	Cadillac	DTS	Amplifier (bose)	√	√	√	√	√	
2008	Cadillac	DTS	Radio	√	√	√	√	√	
2008	Cadillac	DTS	TV antenna module	√	√	√	√		0504 0505
2008	Cadillac	DTS	Veh direction alert alarm warn mod	√	√	√	√	√	
2008	Cadillac	DTS	Body Control Module	√	√	√	√	√	0499 0497
2008	Cadillac	DTS	Digital radio receiver	√	√	√	√		
2008	Cadillac	DTS	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Cadillac	DTS	HVAC Control Module	√	√	√	√	√	
2008	Cadillac	DTS	Left side object detection module	√	√	√	√	√	
2008	Cadillac	DTS	Right side object detection module	√	√	√	√		

2008	Cadillac	DTS	Driver position module	√	√	√	√	√	
2008	Cadillac	DTS	Inside rear view mirror module	√	√	√			
2008	Cadillac	DTS	Rear heated seat module	√	√	√	√		
2008	Cadillac	DTS	Park assist module	√	√	√	√	√	
2008	Cadillac	DTS	Distance sensing cruise control	√	√	√	√	√	
2008	Cadillac	DTS	Instrument panel cluster	√	√	√	√	√	
2008	Cadillac	DTS	Driver door switch	√	√	√	√	√	0527
2008	Cadillac	DTS	Passenger door switch	√	√	√	√	√	0527
2008	Cadillac	DTS	Aux. HVAC control module	√	√	√	√	√	0527
2008	Cadillac	DTS	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Cadillac	DTS	Electronic suspension control	√	√	√	√	√	
2008	Cadillac	STS	Transmission control module		√	√	√	√	
2008	Cadillac	STS	Engine Control Module	√	√	√	√	√	0493
2008	Cadillac	STS	Passenger presence system		√	√			
2008	Cadillac	STS	Remote control door lock receiver	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2008	Cadillac	STS	Supplemental inflatable restraint	√	√	√	√	√	0559
2008	Cadillac	STS	Amplifier (bose)		√	√	√	√	
2008	Cadillac	STS	Radio	√	√	√	√		0552 0525
2008	Cadillac	STS	TV antenna module	√	√	√	√		
2008	Cadillac	STS	Veh direction alert alarm warn mod	√	√	√	√	√	
2008	Cadillac	STS	Digital radio receiver	√	√	√	√		0516
2008	Cadillac	STS	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Cadillac	STS	Head up display	√	√	√	√	√	
2008	Cadillac	STS	HVAC Control Module	√	√	√	√	√	
2008	Cadillac	STS	Headlamp Control Module	√	√	√	√	√	
2008	Cadillac	STS	Driver position module	√	√	√	√	√	
2008	Cadillac	STS	Steering column lock module	√	√	√	√	√	
2008	Cadillac	STS	Distance sensing cruise control	√	√	√	√	√	
2008	Cadillac	STS	Left side object detection module	√	√	√	√	√	
2008	Cadillac	STS	Right side object detection module	√	√	√	√		
2008	Cadillac	STS	Instrument panel cluster	√	√	√	√	√	
2008	Cadillac	STS	Instrument panel module	√	√	√	√	√	0551
2008	Cadillac	STS	Driver door module	√	√	√	√	√	0560
2008	Cadillac	STS	Driver door switch	√	√	√	√		
2008	Cadillac	STS	Left rear door module	√	√	√	√	√	0560
2008	Cadillac	STS	Passenger door module	√	√	√	√	√	0560
2008	Cadillac	STS	Right rear door module	√	√	√	√	√	0560
2008	Cadillac	STS	Rear integration module	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520

2008	Cadillac	STS	Navigation radio	√	√	√	√	√	0561
2008	Cadillac	STS	Power steering control module		√	√	√		0563 0564
2008	Cadillac	STS	Electronic suension control	√	√	√	√	√	
2008	Cadillac	STS	Vehicle stability control module					√	
2008	Cadillac	STS	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Cadillac	XLR	Transmission control module		√	√	√	√	
2008	Cadillac	XLR	Engine Control Module	√	√	√	√	√	0493
2008	Cadillac	XLR	Exhaust flow control module	√	√	√	√	√	
2008	Cadillac	XLR	Passenger presence system		√	√			0512
2008	Cadillac	XLR	Remote control door lock receiver	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2008	Cadillac	XLR	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Cadillac	XLR	Amplifier (bose)	√	√	√	√	√	
2008	Cadillac	XLR	CD changer	√	√	√			
2008	Cadillac	XLR	Navigation radio	√	√	√	√		0525
2008	Cadillac	XLR	Body Control Module	√	√	√	√	√	0515
2008	Cadillac	XLR	HVAC Control Module	√	√	√	√	√	0500
2008	Cadillac	XLR	Headlamp Control Module	√	√	√	√	√	
2008	Cadillac	XLR	Digital radio receiver	√	√	√	√		0516
2008	Cadillac	XLR	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Cadillac	XLR	Head up dilay	√	√	√	√	√	
2008	Cadillac	XLR	Driver position module	√	√	√	√	√	0522
2008	Cadillac	XLR	Folding top module	√	√	√	√	√	
2008	Cadillac	XLR	Steering column lock module	√	√	√	√	√	
2008	Cadillac	XLR	Distance sensing cruise control	√	√	√	√	√	
2008	Cadillac	XLR	Instrument panel cluster	√	√	√	√	√	
2008	Cadillac	XLR	Driver door module	√	√	√	√	√	
2008	Cadillac	XLR	Passenger door module	√	√	√	√	√	
2008	Cadillac	XLR	Driver door switch	√	√	√	√		
2008	Cadillac	XLR	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Cadillac	XLR	Electronic suension control	√	√	√	√	√	
2008	Chevrolet	Aveo	Engine Control Module	√	√	√	√	√	0507
2008	Chevrolet	Aveo	Transmission control module	√	√	√	√	√	0507
2008	Chevrolet	Aveo	Immobilizer						0508
2008	Chevrolet	Aveo	Supplemental inflatable restraint	√	√	√	√	√	0508
2008	Chevrolet	Aveo	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet	Aveo	Tire pressure monitor	√	√	√	√	√	0510 0511
2008	Chevrolet	Aveo	Passenger presence system	√	√	√	√	√	0537
2008	Chevrolet	Chevrolet	Transmission control module	√	√	√	√	√	
2008	Chevrolet	Chevrolet	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet	Chevrolet	Immobilizer	√	√	√	√		0544 0545

2008	Chevrolet	Cobalt	Transmission control module		√	√	√	√	
2008	Chevrolet	Cobalt	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet	Cobalt	Passenger presence system		√	√			
2008	Chevrolet	Cobalt	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Chevrolet	Cobalt	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet	Cobalt	Body Control Module	√	√	√	√	√	0515
2008	Chevrolet	Cobalt	Digital radio receiver	√	√	√	√		
2008	Chevrolet	Cobalt	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet	Cobalt	Personal audio link module	√	√	√			0528
2008	Chevrolet	Cobalt	Radio	√	√	√	√	√	
2008	Chevrolet	Cobalt	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet	Cobalt	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet	Cobalt	Power steering control module		√	√	√		
2008	Chevrolet	Cobalt	Electronic Brake Control Module	√	√	√	√	√	
2008	Chevrolet	Corvette	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet	Corvette	Transmission control module		√	√	√	√	
2008	Chevrolet	Corvette	Exhaust flow control module	√	√	√	√	√	0493
2008	Chevrolet	Corvette	Passenger presence system		√	√			0512
2008	Chevrolet	Corvette	Remote control door lock receiver	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2008	Chevrolet	Corvette	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Chevrolet	Corvette	CD changer	√	√	√	√		
2008	Chevrolet	Corvette	Body Control Module	√	√	√	√	√	0515
2008	Chevrolet	Corvette	Digital radio receiver	√	√	√	√		0516
2008	Chevrolet	Corvette	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet	Corvette	Head up display	√	√	√	√	√	
2008	Chevrolet	Corvette	HVAC Control Module	√	√	√	√	√	0500 0523
2008	Chevrolet	Corvette	Radio	√	√	√	√		0524 0525
2008	Chevrolet	Corvette	Steering column lock module	√	√	√	√	√	
2008	Chevrolet	Corvette	Driver position module	√	√	√	√	√	0522
2008	Chevrolet	Corvette	Folding top module	√	√	√	√	√	
2008	Chevrolet	Corvette	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet	Corvette	Driver door module	√	√	√	√	√	
2008	Chevrolet	Corvette	Driver door switch	√	√	√	√		
2008	Chevrolet	Corvette	Passenger door module	√	√	√	√	√	0512
2008	Chevrolet	Corvette	Navigation radio	√	√	√	√	√	0525
2008	Chevrolet	Corvette	Personal audio link module	√	√	√			0528
2008	Chevrolet	Corvette	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet	Corvette	Electronic suspension control	√	√	√	√	√	
2008	Chevrolet	Epica	Engine Control Module	√	√	√	√	√	0509
2008	Chevrolet	Epica	Transmission control module	√	√	√	√	√	0509

2008	Chevrolet	Epica	ISU	√	√	√	√	√	
2008	Chevrolet	Epica	Supplemental inflatable restraint	√	√	√	√	√	
2008	Chevrolet	Epica	Electronic Brake Control Module	√	√	√	√	√	0507
2008	Chevrolet	Impala	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet	Impala	Transmission control module	√	√	√	√	√	0493
2008	Chevrolet	Impala	Passenger presence system	√	√	√	√		0512
2008	Chevrolet	Impala	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet	Impala	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet	Impala	Radio	√	√	√	√	√	
2008	Chevrolet	Impala	Heated seat module	√	√	√	√		
2008	Chevrolet	Impala	Digital radio receiver	√	√	√	√		
2008	Chevrolet	Impala	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet	Impala	Body Control Module	√	√	√	√	√	0499 0497
2008	Chevrolet	Impala	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet	Impala	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet	Impala	HVAC Control Module	√	√	√	√	√	0500
2008	Chevrolet	Impala	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet	Joy	Transmission control module	√	√	√	√	√	
2008	Chevrolet	Joy	Engine Control Module	√	√	√	√	√	0507
2008	Chevrolet	Joy	Immobilizer						0508
2008	Chevrolet	Joy	Supplemental inflatable restraint	√	√	√	√		
2008	Chevrolet	Joy	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet	Malibu	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet	Malibu	Transmission control module	√	√	√	√	√	0493
2008	Chevrolet	Malibu	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Chevrolet	Malibu	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet	Malibu	Passenger presence system		√	√			
2008	Chevrolet	Malibu	Personal audio link module	√	√	√			0528
2008	Chevrolet	Malibu	Radio	√	√	√	√	√	0525
2008	Chevrolet	Malibu	Digital radio receiver	√	√	√	√		
2008	Chevrolet	Malibu	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet	Malibu	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet	Malibu	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet	Malibu	HVAC Control Module	√	√	√	√	√	
2008	Chevrolet	Malibu	Body Control Module	√	√	√	√	√	0500 0515
2008	Chevrolet	Malibu	Power steering control module	√	√	√	√	√	
2008	Chevrolet	Malibu	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet	Malibu Classic	Transmission control module		√	√	√	√	
2008	Chevrolet	Malibu Classic	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet	Malibu Classic	Body Control Module	√	√	√	√	√	0500 0515
2008	Chevrolet	Malibu Classic	Supplemental inflatable restraint	√	√	√	√	√	0515

2008	Chevrolet	Malibu Classic	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet	Malibu Classic	Passenger presence system		√	√			
2008	Chevrolet	Malibu Classic	Disc player and video delay	√	√	√	√		
2008	Chevrolet	Malibu Classic	Radio	√	√	√	√	√	0594 0595 0525
2008	Chevrolet	Malibu Classic	Digital radio receiver	√	√	√	√		
2008	Chevrolet	Malibu Classic	HVAC Control Module	√	√	√	√	√	
2008	Chevrolet	Malibu Classic	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet	Malibu Classic	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet	Malibu Classic	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet	Malibu Classic	Power steering control module	√	√	√	√	√	0596
2008	Chevrolet	Malibu hybrid	Transmission control module		√	√	√	√	
2008	Chevrolet	Malibu hybrid	Engine Control Module	√	√	√	√	√	0566 0567 0493
2008	Chevrolet	Malibu hybrid	Battery Energy Control Module				√	√	
2008	Chevrolet	Malibu hybrid	Starter/Generator Control Modul				√	√	
2008	Chevrolet	Malibu hybrid	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Chevrolet	Malibu hybrid	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet	Malibu hybrid	Passenger presence system		√	√			
2008	Chevrolet	Malibu hybrid	Personal audio link module	√	√	√			0528
2008	Chevrolet	Malibu hybrid	Radio	√	√	√	√	√	0525
2008	Chevrolet	Malibu hybrid	Digital radio receiver	√	√	√	√		
2008	Chevrolet	Malibu hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet	Malibu hybrid	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet	Malibu hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet	Malibu hybrid	HVAC Control Module	√	√	√	√	√	
2008	Chevrolet	Malibu hybrid	Body Control Module	√	√	√	√	√	0500 0515
2008	Chevrolet	Malibu hybrid	Power steering control module	√	√	√	√	√	
2008	Chevrolet	Malibu hybrid	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet	Optra	Engine Control Module	√	√	√	√	√	0507
2008	Chevrolet	Optra	Transmission control module	√	√	√	√	√	0507
2008	Chevrolet	Optra	Immobilizer						0508
2008	Chevrolet	Optra	Tire pressure monitor	√	√	√	√		0510 0511
2008	Chevrolet	Optra	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet	Optra - Mexico	Engine Control Module	√	√	√	√	√	0507
2008	Chevrolet	Optra - Mexico	Transmission control module	√	√	√	√	√	0507
2008	Chevrolet	Optra - Mexico	Immobilizer						0508
2008	Chevrolet	Optra - Mexico	Tire pressure monitor	√	√	√	√		0510 0511
2008	Chevrolet	Optra - Mexico	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet	ark	Transmission control module	√	√	√	√	√	
2008	Chevrolet	ark	Engine Control Module	√	√	√	√	√	0507
2008	Chevrolet	ark	Immobilizer						0508
2008	Chevrolet	ark	Supplemental inflatable restraint	√	√	√	√		

2008	Chevrolet	ark	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet	Vivant	Engine Control Module	√	√	√	√	√	0507
2008	Chevrolet	Vivant	Transmission control module	√	√	√	√	√	0493
2008	Chevrolet	Vivant	Immobilizer						0508
2008	Chevrolet	Vivant	Supplemental inflatable restraint	√	√	√	√		
2008	Chevrolet	Vivant	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet	Others	Immobilizer						0508
2008	Chevrolet	Others	Engine Control Module		√	√	√	√	0493
2008	Chevrolet	Others	Transmission control module	√	√	√	√	√	0493
2008	Pontiac	G3	Engine Control Module	√	√	√	√	√	0507
2008	Pontiac	G3	Transmission control module	√	√	√	√	√	0507
2008	Pontiac	G3	Immobilizer						0508
2008	Pontiac	G3	Supplemental inflatable restraint	√	√	√	√	√	0508
2008	Pontiac	G3	Passenger presence system	√	√	√	√	√	0537
2008	Pontiac	G3	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Pontiac	G3	Tire pressure monitor	√	√	√	√		0510 0511
2008	Pontiac	G5	Transmission control module		√	√	√	√	
2008	Pontiac	G5	Engine Control Module	√	√	√	√	√	0493
2008	Pontiac	G5	Passenger presence system		√	√			
2008	Pontiac	G5	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Pontiac	G5	Theft Deterrent Module	√	√	√	√		
2008	Pontiac	G5	Body Control Module	√	√	√	√	√	0515
2008	Pontiac	G5	Digital radio receiver	√	√	√	√		
2008	Pontiac	G5	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Pontiac	G5	Personal audio link module	√	√	√			0528
2008	Pontiac	G5	Radio	√	√	√	√	√	
2008	Pontiac	G5	Instrument panel cluster	√	√	√	√	√	
2008	Pontiac	G5	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Pontiac	G5	Power steering control module		√	√	√		
2008	Pontiac	G5	Electronic Brake Control Module	√	√	√	√	√	
2008	Pontiac	G6	Transmission control module		√	√	√	√	
2008	Pontiac	G6	Engine Control Module	√	√	√	√	√	0493
2008	Pontiac	G6	Body Control Module	√	√	√	√	√	0500 0515
2008	Pontiac	G6	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Pontiac	G6	Theft Deterrent Module	√	√	√	√		
2008	Pontiac	G6	Passenger presence system		√	√			
2008	Pontiac	G6	Radio	√	√	√	√	√	0581 0582 0525
2008	Pontiac	G6	Digital radio receiver	√	√	√	√		
2008	Pontiac	G6	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Pontiac	G6	HVAC Control Module	√	√	√	√	√	
2008	Pontiac	G6	Instrument panel cluster	√	√	√	√	√	



2008	Pontiac	G6	Folding top module	√	√	√	√	√	
2008	Pontiac	G6	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Pontiac	G6	Power steering control module	√	√	√	√	√	
2008	Pontiac	G6	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Pontiac	G8	Engine Control Module	√	√	√	√	√	
2008	Pontiac	G8	Transmission control module	√	√	√	√	√	0493
2008	Pontiac	G8	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Pontiac	G8	Body Control Module	√	√	√	√	√	0499 0497
2008	Pontiac	G8	Instrument panel cluster	√	√	√	√	√	
2008	Pontiac	G8	Passenger presence system	√	√	√	√		0512
2008	Pontiac	G8	Radio	√	√	√	√	√	
2008	Pontiac	G8	HVAC Control Module	√	√	√	√	√	
2008	Pontiac	G8	Driver Information Display	√	√	√	√	√	0583
2008	Pontiac	G8	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Pontiac	G8	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Pontiac	G8	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Pontiac	Grand Prix	Engine Control Module	√	√	√	√	√	0493
2008	Pontiac	Grand Prix	Transmission control module		√	√	√	√	
2008	Pontiac	Grand Prix	Powertrain control module	√	√	√	√	√	0493
2008	Pontiac	Grand Prix	Remote control door lock receiver	√	√	√	√	√	0159
2008	Pontiac	Grand Prix	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Pontiac	Grand Prix	Navigation radio	√	√	√	√	√	0525 0572 0524
2008	Pontiac	Grand Prix	Body Control Module	√	√	√	√	√	0499
2008	Pontiac	Grand Prix	Head up display		√	√			
2008	Pontiac	Grand Prix	Digital radio receiver	√	√	√	√		0516
2008	Pontiac	Grand Prix	Vehicle comm. interface module	√	√	√	√	√	0565 0495 0585
2008	Pontiac	Grand Prix	HVAC Control Module	√	√	√	√	√	0500
2008	Pontiac	Grand Prix	Instrument panel cluster	√	√	√	√	√	
2008	Pontiac	Grand Prix	Driver information center	√	√	√	√	√	0159
2008	Pontiac	Grand Prix	Electronic Brake Control Module		√	√	√	√	0506
2008	Pontiac	Solstice	Transmission control module	√	√	√	√	√	
2008	Pontiac	Solstice	Engine Control Module	√	√	√	√	√	0493
2008	Pontiac	Solstice	Passenger presence system		√	√			
2008	Pontiac	Solstice	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Pontiac	Solstice	Theft Deterrent Module	√	√	√	√		
2008	Pontiac	Solstice	Remote control door lock receiver	√	√	√	√	√	0513 0521 0159
2008	Pontiac	Solstice	Body Control Module	√	√	√	√	√	0515
2008	Pontiac	Solstice	Digital radio receiver	√	√	√	√		
2008	Pontiac	Solstice	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Pontiac	Solstice	Personal audio link module	√	√	√			0528
2008	Pontiac	Solstice	Radio	√	√	√	√	√	0525

2008	Pontiac	Solstice	Instrument panel cluster	√	√	√	√	√	
2008	Pontiac	Solstice	Electronic Brake Control Module	√	√	√	√	√	
2008	Pontiac	Vibe - FWD	Powertrain control module	√	√	√	√	√	
2008	Pontiac	Vibe - FWD	Engine Control Module	√	√	√	√	√	
2008	Pontiac	Vibe - FWD	Digital radio receiver	√	√	√	√		0516
2008	Pontiac	Vibe - FWD	Immobilizer		√	√	√		0568
2008	Pontiac	Vibe - FWD	Supplemental inflatable restraint		√	√	√		
2008	Pontiac	Vibe - FWD	Radio		√	√	√	√	0572
2008	Pontiac	Vibe - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Pontiac	Vibe - FWD	Tire pressure monitor	√			√		0570
2008	Pontiac	Vibe - FWD	Electronic Brake Control Module	√	√	√	√	√	0597
2008	Pontiac	Wave	Engine Control Module		√	√	√	√	0493
2008	Pontiac	Wave	Transmission control module	√	√	√	√	√	0493
2008	Pontiac	Wave	Immobilizer						0508
2008	Pontiac	Wave	Supplemental inflatable restraint	√	√	√	√	√	0508
2008	Pontiac	Wave	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Pontiac	Wave	Tire pressure monitor	√	√	√	√		0510 0511
2008	Saturn	AURA	Transmission control module		√	√	√	√	
2008	Saturn	AURA	Engine Control Module	√	√	√	√	√	0493
2008	Saturn	AURA	Body Control Module	√	√	√	√	√	0500 0515
2008	Saturn	AURA	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Saturn	AURA	Theft Deterrent Module	√	√	√	√		
2008	Saturn	AURA	Passenger presence system		√	√			
2008	Saturn	AURA	Personal audio link module	√	√	√			0528
2008	Saturn	AURA	Radio	√	√	√	√	√	0525
2008	Saturn	AURA	Digital radio receiver	√	√	√	√		
2008	Saturn	AURA	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Saturn	AURA	HVAC Control Module	√	√	√	√	√	
2008	Saturn	AURA	Instrument panel cluster	√	√	√	√	√	
2008	Saturn	AURA	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Saturn	AURA	Power steering control module	√	√	√	√	√	
2008	Saturn	AURA	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Saturn	AURA	Body Control Module	√	√	√	√	√	0500 0515
2008	Saturn	AURA	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Saturn	AURA	Theft Deterrent Module	√	√	√	√		
2008	Saturn	AURA	Passenger presence system		√	√			
2008	Saturn	AURA	Personal audio link module	√	√	√			0528
2008	Saturn	AURA	Radio	√	√	√	√	√	0525
2008	Saturn	AURA	Digital radio receiver	√	√	√	√		
2008	Saturn	AURA	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Saturn	AURA	HVAC Control Module	√	√	√	√	√	

2008	Saturn	AURA	Instrument panel cluster	√	√	√	√	√	
2008	Saturn	AURA	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Saturn	AURA	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Saturn	AURA	Power steering control module	√	√	√	√	√	
2008	Saturn	AURA	Engine Control Module	√	√	√	√	√	0566 0567 0493
2008	Saturn	AURA	Starter/Generator Control Modul				√	√	
2008	Saturn	AURA	Battery Energy Control Module				√	√	
2008	Saturn	AURA	Transmission control module		√	√	√	√	
2008	Saturn	Sky	Transmission control module	√	√	√	√	√	
2008	Saturn	Sky	Engine Control Module	√	√	√	√	√	0493
2008	Saturn	Sky	Passenger presence system		√	√			
2008	Saturn	Sky	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Saturn	Sky	Theft Deterrent Module	√	√	√	√		
2008	Saturn	Sky	Remote control door lock receiver	√	√	√	√	√	0513 0521 0159
2008	Saturn	Sky	Body Control Module	√	√	√	√	√	0598 0515
2008	Saturn	Sky	Digital radio receiver	√	√	√	√		
2008	Saturn	Sky	Personal audio link module	√	√	√			0528
2008	Saturn	Sky	Radio	√	√	√	√	√	0525
2008	Saturn	Sky	Instrument panel cluster	√	√	√	√	√	
2008	Saturn	Sky	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Saturn	Sky	Electronic Brake Control Module	√	√	√	√	√	
2008	Alpheon	4	Transmission control module	√	√	√	√	√	
2008	Alpheon	4	Engine Control Module	√	√	√	√	√	0507
2008	Alpheon	4	Transmission control module	√	√	√	√	√	
2008	Alpheon	4	Engine Control Module	√	√	√	√	√	0507
2008	Alpheon	B	Transmission control module	√	√	√	√	√	
2008	Alpheon	B	Engine Control Module	√	√	√	√	√	0507
2008	Alpheon	B	Transmission control module	√	√	√	√	√	
2008	Alpheon	B	Engine Control Module	√	√	√	√	√	0507
2008	Alpheon	M	Transmission control module	√	√	√	√	√	
2008	Alpheon	M	Engine Control Module	√	√	√	√	√	
2008	Alpheon	M	Passenger presence system		√	√			
2008	Alpheon	M	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Alpheon	M	Theft Deterrent Module	√	√	√	√		
2008	Alpheon	M	Remote control door lock receiver	√	√	√	√	√	0513 0521 0159
2008	Alpheon	M	Digital radio receiver	√	√	√	√		
2008	Alpheon	M	Radio	√	√	√	√	√	0525
2008	Alpheon	M	Instrument panel cluster	√	√	√	√	√	
2008	Alpheon	M	Electronic Brake Control Module	√	√	√	√	√	
2008	Alpheon	M	Engine Control Module	√	√	√	√	√	
2008	Alpheon	M	Transmission control module		√	√	√	√	

2008	Buick	Enclave - AWD	Engine Control Module	√	√	√	√	√	0493
2008	Buick	Enclave - AWD	Transmission control module		√	√	√	√	
2008	Buick	Enclave - AWD	Passenger presence system	√	√	√	√		0537
2008	Buick	Enclave - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Buick	Enclave - AWD	Rollover sensor	√	√	√	√		0541
2008	Buick	Enclave - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Buick	Enclave - AWD	Theft Deterrent Module	√	√	√	√		
2008	Buick	Enclave - AWD	Memory seat module	√	√	√	√	√	
2008	Buick	Enclave - AWD	Park assist module	√	√	√	√	√	
2008	Buick	Enclave - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Buick	Enclave - AWD	Digital radio receiver	√	√	√	√		
2008	Buick	Enclave - AWD	Radio	√	√	√	√	√	
2008	Buick	Enclave - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Buick	Enclave - AWD	Body Control Module						0499 0497
2008	Buick	Enclave - AWD	Rear HVAC/RSA	√	√	√	√	√	
2008	Buick	Enclave - AWD	Personal audio link module	√	√	√			0528 0529
2008	Buick	Enclave - AWD	Driver door switch	√	√	√	√	√	0527
2008	Buick	Enclave - AWD	Passenger door switch	√	√	√	√	√	0527
2008	Buick	Enclave - AWD	Instrument panel cluster					√	
2008	Buick	Enclave - AWD	Headlamp Control Module	√	√	√	√	√	
2008	Buick	Enclave - AWD	Liftgate module	√	√	√	√	√	
2008	Buick	Enclave - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Buick	Enclave - AWD	Rear drive system	√	√	√	√	√	0530
2008	Buick	Enclave - FWD	Engine Control Module	√	√	√	√	√	0493
2008	Buick	Enclave - FWD	Rear drive system	√	√	√	√	√	0530
2008	Buick	Enclave - FWD	Passenger presence system	√	√	√	√		0537
2008	Buick	Enclave - FWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Buick	Enclave - FWD	Rollover sensor	√	√	√	√		0541
2008	Buick	Enclave - FWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Buick	Enclave - FWD	Theft Deterrent Module	√	√	√	√		
2008	Buick	Enclave - FWD	Memory seat module	√	√	√	√	√	
2008	Buick	Enclave - FWD	Park assist module	√	√	√	√	√	
2008	Buick	Enclave - FWD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Buick	Enclave - FWD	Digital radio receiver	√	√	√	√		
2008	Buick	Enclave - FWD	Radio	√	√	√	√	√	
2008	Buick	Enclave - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Buick	Enclave - FWD	Body Control Module						0499 0497
2008	Buick	Enclave - FWD	Rear HVAC/RSA	√	√	√	√	√	
2008	Buick	Enclave - FWD	Personal audio link module	√	√	√			0528 0529
2008	Buick	Enclave - FWD	Driver door switch	√	√	√	√	√	0527
2008	Buick	Enclave - FWD	Passenger door switch	√	√	√	√	√	0527

2008	Buick	Enclave - FWD	Instrument panel cluster					√	
2008	Buick	Enclave - FWD	Headlamp Control Module	√	√	√	√	√	
2008	Buick	Enclave - FWD	Liftgate module	√	√	√	√	√	
2008	Buick	Enclave - FWD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Cadillac	Hearse	Engine Control Module	√	√	√	√	√	0493
2008	Cadillac	Hearse	Transmission control module		√	√	√	√	
2008	Cadillac	Hearse	Passenger presence system	√	√	√	√		0512
2008	Cadillac	Hearse	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Cadillac	Hearse	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Cadillac	Hearse	Theft Deterrent Module	√	√	√	√		
2008	Cadillac	Hearse	Amplifier (bose)	√	√	√	√	√	
2008	Cadillac	Hearse	Radio	√	√	√	√	√	
2008	Cadillac	Hearse	Instrument panel cluster	√	√	√	√	√	
2008	Cadillac	Hearse	Digital radio receiver	√	√	√	√		
2008	Cadillac	Hearse	HVAC Control Module	√	√	√	√	√	
2008	Cadillac	Hearse	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Cadillac	Hearse	Driver position module	√	√	√	√	√	
2008	Cadillac	Hearse	Rear heated seat module	√	√	√	√		
2008	Cadillac	Hearse	Body Control Module	√	√	√	√	√	0499 0497
2008	Cadillac	Hearse	Driver door switch	√	√	√	√	√	
2008	Cadillac	Hearse	Passenger door switch	√	√	√	√	√	
2008	Cadillac	Hearse	Air suspension control module	√	√	√	√	√	
2008	Cadillac	Hearse	Electronic Brake Control Module	√	√	√	√		0506
2008	Cadillac	Limousine	Engine Control Module	√	√	√	√	√	0493
2008	Cadillac	Limousine	Transmission control module		√	√	√	√	
2008	Cadillac	Limousine	Passenger presence system	√	√	√	√		0512
2008	Cadillac	Limousine	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Cadillac	Limousine	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Cadillac	Limousine	Theft Deterrent Module	√	√	√	√		
2008	Cadillac	Limousine	Amplifier (bose)	√	√	√	√	√	
2008	Cadillac	Limousine	Radio	√	√	√	√	√	
2008	Cadillac	Limousine	Instrument panel cluster	√	√	√	√	√	
2008	Cadillac	Limousine	Digital radio receiver	√	√	√	√		
2008	Cadillac	Limousine	HVAC Control Module	√	√	√	√	√	
2008	Cadillac	Limousine	Aux. HVAC control module	√			√	√	
2008	Cadillac	Limousine	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Cadillac	Limousine	Driver position module	√	√	√	√	√	
2008	Cadillac	Limousine	Rear heated seat module	√	√	√	√		
2008	Cadillac	Limousine	Body Control Module	√	√	√	√	√	0499 0497
2008	Cadillac	Limousine	Driver door switch	√	√	√	√	√	
2008	Cadillac	Limousine	Passenger door switch	√	√	√	√	√	

2008	Cadillac	Limousine	Air suspension control module	√	√	√	√	√	
2008	Cadillac	Limousine	Electronic Brake Control Module	√	√	√	√		0506
2008	Cadillac	Escalade - 2WD	Transmission control module		√	√	√	√	
2008	Cadillac	Escalade - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	Cadillac	Escalade - 2WD	Fuel Pump Control Module	√	√	√	√	√	
2008	Cadillac	Escalade - 2WD	Passenger presence system	√	√	√	√		0512
2008	Cadillac	Escalade - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Cadillac	Escalade - 2WD	Rollover sensor	√	√	√	√		0541
2008	Cadillac	Escalade - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Cadillac	Escalade - 2WD	Theft Deterrent Module	√	√	√	√		
2008	Cadillac	Escalade - 2WD	Body Control Module	√	√	√	√	√	0497
2008	Cadillac	Escalade - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Cadillac	Escalade - 2WD	Amplifier (bose)	√	√	√	√	√	
2008	Cadillac	Escalade - 2WD	Digital radio receiver	√	√	√	√		
2008	Cadillac	Escalade - 2WD	Radio	√	√	√	√	√	
2008	Cadillac	Escalade - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Cadillac	Escalade - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	Cadillac	Escalade - 2WD	Memory seat module	√	√	√	√	√	
2008	Cadillac	Escalade - 2WD	Inside rear view mirror module	√	√	√			
2008	Cadillac	Escalade - 2WD	Rear heated seat module	√	√	√	√		
2008	Cadillac	Escalade - 2WD	Park assist module	√	√	√	√	√	
2008	Cadillac	Escalade - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2008	Cadillac	Escalade - 2WD	Personal audio link module	√	√	√			0528
2008	Cadillac	Escalade - 2WD	Passenger door switch	√	√	√	√	√	
2008	Cadillac	Escalade - 2WD	Driver door switch	√	√	√	√	√	
2008	Cadillac	Escalade - 2WD	Assist step controller	√	√	√	√	√	0531
2008	Cadillac	Escalade - 2WD	Body Control Module	√	√	√	√	√	0498
2008	Cadillac	Escalade - 2WD	Liftgate module	√	√	√	√	√	0529
2008	Cadillac	Escalade - 2WD	Electronic suspension control	√	√	√	√	√	0532
2008	Cadillac	Escalade - 2WD	Trailer brake control module	√	√	√	√		
2008	Cadillac	Escalade - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Cadillac	Escalade - AWD	Transmission control module		√	√	√	√	
2008	Cadillac	Escalade - AWD	Engine Control Module	√	√	√	√	√	0493
2008	Cadillac	Escalade - AWD	Fuel Pump Control Module	√	√	√	√	√	
2008	Cadillac	Escalade - AWD	Passenger presence system	√	√	√	√		0512
2008	Cadillac	Escalade - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Cadillac	Escalade - AWD	Rollover sensor	√	√	√	√		0541
2008	Cadillac	Escalade - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Cadillac	Escalade - AWD	Theft Deterrent Module	√	√	√	√		
2008	Cadillac	Escalade - AWD	Body Control Module	√	√	√	√	√	0497
2008	Cadillac	Escalade - AWD	HVAC Control Module	√	√	√	√	√	0500 0526

2008	Cadillac	Escalade - AWD	Amplifier (bose)	√	√	√	√	√	
2008	Cadillac	Escalade - AWD	Digital radio receiver	√	√	√	√		
2008	Cadillac	Escalade - AWD	Radio	√	√	√	√	√	
2008	Cadillac	Escalade - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Cadillac	Escalade - AWD	Instrument panel cluster	√	√	√	√	√	
2008	Cadillac	Escalade - AWD	Memory seat module	√	√	√	√	√	
2008	Cadillac	Escalade - AWD	Inside rear view mirror module	√	√	√			
2008	Cadillac	Escalade - AWD	Rear heated seat module	√	√	√	√		
2008	Cadillac	Escalade - AWD	Park assist module	√	√	√	√	√	
2008	Cadillac	Escalade - AWD	Rear HVAC/RSA	√	√	√	√	√	
2008	Cadillac	Escalade - AWD	Personal audio link module	√	√	√			0528
2008	Cadillac	Escalade - AWD	Passenger door switch	√	√	√	√	√	
2008	Cadillac	Escalade - AWD	Driver door switch	√	√	√	√	√	
2008	Cadillac	Escalade - AWD	Assist step controller	√	√	√	√	√	0531
2008	Cadillac	Escalade - AWD	Body Control Module	√	√	√	√	√	0498
2008	Cadillac	Escalade - AWD	Liftgate module	√	√	√	√	√	0529
2008	Cadillac	Escalade - AWD	Electronic suension control	√	√	√	√	√	0532
2008	Cadillac	Escalade - AWD	Trailer brake control module	√	√	√	√		
2008	Cadillac	Escalade - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Cadillac	Escalade ESV	Transmission control module		√	√	√	√	
2008	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0493
2008	Cadillac	Escalade ESV	Fuel Pump Control Module	√	√	√	√	√	
2008	Cadillac	Escalade ESV	Passenger presence system	√	√	√	√		0512
2008	Cadillac	Escalade ESV	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Cadillac	Escalade ESV	Rollover sensor	√	√	√	√		0541
2008	Cadillac	Escalade ESV	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Cadillac	Escalade ESV	Theft Deterrent Module	√	√	√	√		
2008	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0497
2008	Cadillac	Escalade ESV	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Cadillac	Escalade ESV	Amplifier (bose)	√	√	√	√	√	
2008	Cadillac	Escalade ESV	Digital radio receiver	√	√	√	√		
2008	Cadillac	Escalade ESV	Radio	√	√	√	√	√	
2008	Cadillac	Escalade ESV	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Cadillac	Escalade ESV	Instrument panel cluster	√	√	√	√	√	
2008	Cadillac	Escalade ESV	Memory seat module	√	√	√	√	√	
2008	Cadillac	Escalade ESV	Inside rear view mirror module	√	√	√			
2008	Cadillac	Escalade ESV	Rear heated seat module	√	√	√	√		
2008	Cadillac	Escalade ESV	Park assist module	√	√	√	√	√	
2008	Cadillac	Escalade ESV	Rear HVAC/RSA	√	√	√	√	√	
2008	Cadillac	Escalade ESV	Personal audio link module	√	√	√			0528
2008	Cadillac	Escalade ESV	Passenger door switch	√	√	√	√	√	

2008	Cadillac	Escalade ESV	Driver door switch	√	√	√	√	√	
2008	Cadillac	Escalade ESV	Assist step controller	√	√	√	√	√	0531
2008	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0498
2008	Cadillac	Escalade ESV	Liftgate module	√	√	√	√	√	0529
2008	Cadillac	Escalade ESV	Electronic suension control	√	√	√	√	√	0532
2008	Cadillac	Escalade ESV	Trailer brake control module	√	√	√	√		
2008	Cadillac	Escalade ESV	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Cadillac	Escalade EXT	Transmission control module		√	√	√	√	
2008	Cadillac	Escalade EXT	Engine Control Module	√	√	√	√	√	0493
2008	Cadillac	Escalade EXT	Fuel Pump Control Module	√	√	√	√	√	
2008	Cadillac	Escalade EXT	Passenger presence system	√	√	√	√		0512
2008	Cadillac	Escalade EXT	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Cadillac	Escalade EXT	Rollover sensor	√	√	√	√		0541
2008	Cadillac	Escalade EXT	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Cadillac	Escalade EXT	Theft Deterrent Module	√	√	√	√		
2008	Cadillac	Escalade EXT	Body Control Module	√	√	√	√	√	0497
2008	Cadillac	Escalade EXT	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Cadillac	Escalade EXT	Amplifier (bose)	√	√	√	√	√	
2008	Cadillac	Escalade EXT	Digital radio receiver	√	√	√	√		
2008	Cadillac	Escalade EXT	Radio	√	√	√	√	√	
2008	Cadillac	Escalade EXT	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Cadillac	Escalade EXT	Instrument panel cluster	√	√	√	√	√	
2008	Cadillac	Escalade EXT	Memory seat module	√	√	√	√	√	
2008	Cadillac	Escalade EXT	Inside rear view mirror module	√	√	√			
2008	Cadillac	Escalade EXT	Rear heated seat module	√	√	√	√		
2008	Cadillac	Escalade EXT	Park assist module	√	√	√	√	√	
2008	Cadillac	Escalade EXT	Rear HVAC/RSA	√	√	√	√	√	
2008	Cadillac	Escalade EXT	Personal audio link module	√	√	√			0528
2008	Cadillac	Escalade EXT	Passenger door switch	√	√	√	√	√	
2008	Cadillac	Escalade EXT	Driver door switch	√	√	√	√	√	
2008	Cadillac	Escalade EXT	Assist step controller	√	√	√	√	√	0531
2008	Cadillac	Escalade EXT	Body Control Module	√	√	√	√	√	0498
2008	Cadillac	Escalade EXT	Liftgate module	√	√	√	√	√	0529
2008	Cadillac	Escalade EXT	Electronic suension control	√	√	√	√	√	0532
2008	Cadillac	Escalade EXT	Trailer brake control module	√	√	√	√		
2008	Cadillac	Escalade EXT	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Cadillac	SRX	Transmission control module		√	√	√	√	
2008	Cadillac	SRX	Engine Control Module	√	√	√	√	√	0493
2008	Cadillac	SRX	Passenger presence system	√	√	√	√		0537
2008	Cadillac	SRX	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Cadillac	SRX	Rollover sensor	√	√	√	√		0541



2008	Cadillac	SRX	Theft Deterrent Module	√	√	√	√		
2008	Cadillac	SRX	TV antenna module	√	√	√	√		0504 0505
2008	Cadillac	SRX	Radio	√	√	√	√	√	
2008	Cadillac	SRX	Rear HVAC/RSA	√	√	√	√	√	
2008	Cadillac	SRX	Amplifier (bose)	√	√	√	√	√	
2008	Cadillac	SRX	Digital radio receiver	√	√	√	√		
2008	Cadillac	SRX	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Cadillac	SRX	Body Control Module	√	√	√	√	√	0499 0497
2008	Cadillac	SRX	HVAC Control Module	√	√	√	√	√	
2008	Cadillac	SRX	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2008	Cadillac	SRX	Memory seat module	√	√	√	√	√	
2008	Cadillac	SRX	Rear seat module	√	√	√	√	√	
2008	Cadillac	SRX	Park assist module	√	√	√	√	√	
2008	Cadillac	SRX	Instrument panel cluster	√	√	√	√	√	
2008	Cadillac	SRX	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Cadillac	SRX	Body Control Module	√	√	√	√	√	0498
2008	Cadillac	SRX	Driver door switch	√	√	√	√	√	0527
2008	Cadillac	SRX	Passenger door switch	√	√	√	√	√	0527
2008	Cadillac	SRX	Liftgate module	√	√	√	√	√	
2008	Cadillac	SRX	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Cadillac	SRX	Electronic suension control		√	√	√	√	
2008	Chevrolet truck	Avalanche - 2WD	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Avalanche - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Avalanche - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Avalanche - 2WD	Passenger presence system	√	√	√	√		0512
2008	Chevrolet truck	Avalanche - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Avalanche - 2WD	Rollover sensor	√	√	√	√		0541
2008	Chevrolet truck	Avalanche - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Avalanche - 2WD	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	Avalanche - 2WD	Body Control Module	√	√	√	√	√	0497
2008	Chevrolet truck	Avalanche - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Chevrolet truck	Avalanche - 2WD	Amplifier (bose)	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 2WD	Digital radio receiver	√	√	√	√		
2008	Chevrolet truck	Avalanche - 2WD	Radio	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	Avalanche - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 2WD	Memory seat module	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 2WD	Rear heated seat module	√	√	√	√		
2008	Chevrolet truck	Avalanche - 2WD	Park assist module	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 2WD	Personal audio link module	√	√	√			0528

2008	Chevrolet truck	Avalanche - 2WD	Assist step controller	√	√	√	√	√	0531
2008	Chevrolet truck	Avalanche - 2WD	Body Control Module	√	√	√	√	√	0498
2008	Chevrolet truck	Avalanche - 2WD	Driver door switch	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 2WD	Passenger door switch	√	√	√	√	√	0512
2008	Chevrolet truck	Avalanche - 2WD	Electronic suension control	√	√	√	√	√	0532
2008	Chevrolet truck	Avalanche - 2WD	Trailer brake control module	√	√	√	√		
2008	Chevrolet truck	Avalanche - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet truck	Avalanche - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Avalanche - 2WD	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Avalanche - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Avalanche - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Avalanche - 2WD	Passenger presence system	√	√	√	√		0512
2008	Chevrolet truck	Avalanche - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Avalanche - 2WD	Rollover sensor	√	√	√	√		0541
2008	Chevrolet truck	Avalanche - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Avalanche - 2WD	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	Avalanche - 2WD	Body Control Module	√	√	√	√	√	0497
2008	Chevrolet truck	Avalanche - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Chevrolet truck	Avalanche - 2WD	Amplifier (bose)	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 2WD	Digital radio receiver	√	√	√	√		
2008	Chevrolet truck	Avalanche - 2WD	Radio	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	Avalanche - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 2WD	Memory seat module	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 2WD	Rear heated seat module	√	√	√	√		
2008	Chevrolet truck	Avalanche - 2WD	Park assist module	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 2WD	Personal audio link module	√	√	√			0528
2008	Chevrolet truck	Avalanche - 2WD	Assist step controller	√	√	√	√	√	0531
2008	Chevrolet truck	Avalanche - 2WD	Body Control Module	√	√	√	√	√	0498
2008	Chevrolet truck	Avalanche - 2WD	Driver door switch	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 2WD	Passenger door switch	√	√	√	√	√	0512
2008	Chevrolet truck	Avalanche - 2WD	Electronic suension control	√	√	√	√	√	0532
2008	Chevrolet truck	Avalanche - 2WD	Trailer brake control module	√	√	√	√		
2008	Chevrolet truck	Avalanche - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet truck	Avalanche - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Avalanche - 4WD	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Avalanche - 4WD	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Avalanche - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Avalanche - 4WD	Passenger presence system	√	√	√	√		0512
2008	Chevrolet truck	Avalanche - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159

2008	Chevrolet truck	Avalanche - 4WD	Rollover sensor	√	√	√	√		0541
2008	Chevrolet truck	Avalanche - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Avalanche - 4WD	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	Avalanche - 4WD	Body Control Module	√	√	√	√	√	0497
2008	Chevrolet truck	Avalanche - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Chevrolet truck	Avalanche - 4WD	Amplifier (bose)	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 4WD	Digital radio receiver	√	√	√	√		
2008	Chevrolet truck	Avalanche - 4WD	Radio	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	Avalanche - 4WD	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 4WD	Memory seat module	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 4WD	Rear heated seat module	√	√	√	√		
2008	Chevrolet truck	Avalanche - 4WD	Park assist module	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 4WD	Personal audio link module	√	√	√			0528
2008	Chevrolet truck	Avalanche - 4WD	Assist step controller	√	√	√	√	√	0531
2008	Chevrolet truck	Avalanche - 4WD	Body Control Module	√	√	√	√	√	0498
2008	Chevrolet truck	Avalanche - 4WD	Driver door switch	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 4WD	Passenger door switch	√	√	√	√	√	0512
2008	Chevrolet truck	Avalanche - 4WD	Electronic suspension control	√	√	√	√	√	0532
2008	Chevrolet truck	Avalanche - 4WD	Trailer brake control module	√	√	√	√		
2008	Chevrolet truck	Avalanche - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet truck	Avalanche - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Avalanche - 4WD	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Avalanche - 4WD	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Avalanche - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Avalanche - 4WD	Passenger presence system	√	√	√	√		0512
2008	Chevrolet truck	Avalanche - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Avalanche - 4WD	Rollover sensor	√	√	√	√		0541
2008	Chevrolet truck	Avalanche - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Avalanche - 4WD	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	Avalanche - 4WD	Body Control Module	√	√	√	√	√	0497
2008	Chevrolet truck	Avalanche - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Chevrolet truck	Avalanche - 4WD	Amplifier (bose)	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 4WD	Digital radio receiver	√	√	√	√		
2008	Chevrolet truck	Avalanche - 4WD	Radio	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	Avalanche - 4WD	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 4WD	Memory seat module	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 4WD	Rear heated seat module	√	√	√	√		
2008	Chevrolet truck	Avalanche - 4WD	Park assist module	√	√	√	√	√	

2008	Chevrolet truck	Avalanche - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 4WD	Personal audio link module	√	√	√			0528
2008	Chevrolet truck	Avalanche - 4WD	Assist step controller	√	√	√	√	√	0531
2008	Chevrolet truck	Avalanche - 4WD	Body Control Module	√	√	√	√	√	0498
2008	Chevrolet truck	Avalanche - 4WD	Driver door switch	√	√	√	√	√	
2008	Chevrolet truck	Avalanche - 4WD	Passenger door switch	√	√	√	√	√	0512
2008	Chevrolet truck	Avalanche - 4WD	Electronic suspension control	√	√	√	√	√	0532
2008	Chevrolet truck	Avalanche - 4WD	Trailer brake control module	√	√	√	√		
2008	Chevrolet truck	Avalanche - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet truck	Avalanche - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Captiva	Engine Control Module	√	√	√	√	√	0509
2008	Chevrolet truck	Captiva	Transmission control module	√	√	√	√	√	0509
2008	Chevrolet truck	Captiva	Rear drive system	√	√	√	√	√	0530
2008	Chevrolet truck	Captiva	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Captiva	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	Captiva	HVAC Control Module	√	√	√		√	
2008	Chevrolet truck	Captiva	Body Control Module	√	√	√	√	√	0497
2008	Chevrolet truck	Captiva	Body Control Module	√	√	√	√	√	
2008	Chevrolet truck	Captiva	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Captiva	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Captiva	Electronic Brake Control Module	√	√	√	√	√	
2008	Chevrolet truck	Captiva ort	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Captiva ort	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Captiva ort	Rear drive system	√	√	√	√	√	0530
2008	Chevrolet truck	Captiva ort	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Captiva ort	Digital radio receiver	√	√	√	√		
2008	Chevrolet truck	Captiva ort	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	Captiva ort	Radio	√	√	√	√	√	
2008	Chevrolet truck	Captiva ort	Rollover sensor	√	√	√	√		0541
2008	Chevrolet truck	Captiva ort	Passenger presence system	√	√	√	√		0537
2008	Chevrolet truck	Captiva ort	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Captiva ort	Body Control Module	√	√	√	√	√	0497
2008	Chevrolet truck	Captiva ort	HVAC Control Module	√	√	√	√	√	0500
2008	Chevrolet truck	Captiva ort	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Captiva ort	Electronic Brake Control Module	√	√	√	√	√	
2008	Chevrolet truck	Colorado	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Colorado	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Colorado	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Chevrolet truck	Colorado	Passenger presence system		√	√			0512
2008	Chevrolet truck	Colorado	Body Control Module	√	√	√	√	√	0550 0159
2008	Chevrolet truck	Colorado	Digital radio receiver	√	√	√	√		0516

2008	Chevrolet truck	Colorado	Radio	√	√	√	√		
2008	Chevrolet truck	Colorado	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	Colorado	Theft Deterrent Module	√	√	√	√		0170
2008	Chevrolet truck	Colorado	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Colorado	Generator battery control module	√	√	√	√	√	0515
2008	Chevrolet truck	Colorado	Electronic Brake Control Module	√	√	√	√	√	
2008	Chevrolet truck	Colorado	Transfer Case Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Colorado	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Colorado	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Colorado	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Chevrolet truck	Colorado	Passenger presence system		√	√			0512
2008	Chevrolet truck	Colorado	Body Control Module	√	√	√	√	√	0550 0159
2008	Chevrolet truck	Colorado	Digital radio receiver	√	√	√	√		0516
2008	Chevrolet truck	Colorado	Radio	√	√	√	√		
2008	Chevrolet truck	Colorado	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	Colorado	Theft Deterrent Module	√	√	√	√		0170
2008	Chevrolet truck	Colorado	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Colorado	Generator battery control module	√	√	√	√	√	0515
2008	Chevrolet truck	Colorado	Electronic Brake Control Module	√	√	√	√	√	
2008	Chevrolet truck	Colorado	Transfer Case Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Colorado	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Colorado	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Colorado	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Chevrolet truck	Colorado	Passenger presence system		√	√			0512
2008	Chevrolet truck	Colorado	Body Control Module	√	√	√	√	√	0550 0159
2008	Chevrolet truck	Colorado	Digital radio receiver	√	√	√	√		0516
2008	Chevrolet truck	Colorado	Radio	√	√	√	√		
2008	Chevrolet truck	Colorado	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	Colorado	Theft Deterrent Module	√	√	√	√		0170
2008	Chevrolet truck	Colorado	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Colorado	Generator battery control module	√	√	√	√	√	0515
2008	Chevrolet truck	Colorado	Electronic Brake Control Module	√	√	√	√	√	
2008	Chevrolet truck	Colorado	Transfer Case Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Colorado	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Colorado	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Colorado	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Chevrolet truck	Colorado	Passenger presence system		√	√			0512
2008	Chevrolet truck	Colorado	Body Control Module	√	√	√	√	√	0550 0159
2008	Chevrolet truck	Colorado	Digital radio receiver	√	√	√	√		0516
2008	Chevrolet truck	Colorado	Radio	√	√	√	√		
2008	Chevrolet truck	Colorado	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495

2008	Chevrolet truck	Colorado	Theft Deterrent Module	√	√	√	√		0170
2008	Chevrolet truck	Colorado	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Colorado	Generator battery control module	√	√	√	√	√	0515
2008	Chevrolet truck	Colorado	Electronic Brake Control Module	√	√	√	√	√	
2008	Chevrolet truck	Colorado	Transfer Case Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Equinox	Engine Control Module	√	√	√	√	√	
2008	Chevrolet truck	Equinox	Transmission control module	√	√	√	√	√	
2008	Chevrolet truck	Equinox	Rear drive system	√	√	√	√	√	0530
2008	Chevrolet truck	Equinox	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	Equinox	Digital radio receiver	√	√	√	√		
2008	Chevrolet truck	Equinox	Rollover sensor	√	√	√	√		0541
2008	Chevrolet truck	Equinox	Body Control Module	√	√	√	√	√	0499 0497
2008	Chevrolet truck	Equinox	Passenger presence system	√	√	√	√		0537
2008	Chevrolet truck	Equinox	Heated seat module	√	√	√	√		
2008	Chevrolet truck	Equinox	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Equinox	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Equinox	Radio	√	√	√	√	√	
2008	Chevrolet truck	Equinox	HVAC Control Module	√	√	√	√	√	0500
2008	Chevrolet truck	Equinox	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Equinox	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	Equinox	Power steering control module		√	√	√		
2008	Chevrolet truck	Equinox	Electronic Brake Control Module	√	√	√	√	√	
2008	Chevrolet truck	Express	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Express	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Express	Fuel Pump Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Express	Auxiliary Heater Control Module	√	√	√	√	√	0539 0571 0540 0540
2008	Chevrolet truck	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Express	Rollover sensor	√	√	√	√		0541
2008	Chevrolet truck	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Express	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	Express	Radio	√	√	√	√	√	
2008	Chevrolet truck	Express	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Express	Body Control Module	√	√	√	√	√	0497
2008	Chevrolet truck	Express	Passenger presence system	√	√	√	√		0537
2008	Chevrolet truck	Express	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet truck	Express	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Express	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Express	Fuel Pump Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Express	Auxiliary Heater Control Module	√	√	√	√	√	0539 0571 0540 0540
2008	Chevrolet truck	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Express	Rollover sensor	√	√	√	√		0541

2008	Chevrolet truck	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Express	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	Express	Radio	√	√	√	√	√	
2008	Chevrolet truck	Express	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Express	Body Control Module	√	√	√	√	√	0497
2008	Chevrolet truck	Express	Passenger presence system	√	√	√	√		0537
2008	Chevrolet truck	Express	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet truck	Express	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Express	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Express	Fuel Pump Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Express	Rollover sensor	√	√	√	√		0541
2008	Chevrolet truck	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Express	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	Express	Radio	√	√	√	√	√	
2008	Chevrolet truck	Express	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Express	Body Control Module	√	√	√	√	√	0497
2008	Chevrolet truck	Express	Passenger presence system	√	√	√	√		0537
2008	Chevrolet truck	Express	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet truck	Express	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Express	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Express	Fuel Pump Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Express	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Express	Rollover sensor	√	√	√	√		0541
2008	Chevrolet truck	Express	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Express	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	Express	Radio	√	√	√	√	√	
2008	Chevrolet truck	Express	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Express	Body Control Module	√	√	√	√	√	0497
2008	Chevrolet truck	Express	Passenger presence system	√	√	√	√		0537
2008	Chevrolet truck	Express	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet truck	Tracker	Powertrain control module	√	√	√	√	√	
2008	Chevrolet truck	Tracker	Electronic Brake Control Module	√	√	√	√		0599
2008	Chevrolet truck	HHR	Transmission control module		√	√	√	√	
2008	Chevrolet truck	HHR	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	HHR	Passenger presence system		√	√			
2008	Chevrolet truck	HHR	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Chevrolet truck	HHR	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	HHR	Personal audio link module	√	√	√			0528
2008	Chevrolet truck	HHR	Body Control Module	√	√	√	√	√	0515
2008	Chevrolet truck	HHR	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495



2008	Chevrolet truck	HHR	Digital radio receiver	√	√	√	√		
2008	Chevrolet truck	HHR	Radio	√	√	√	√	√	
2008	Chevrolet truck	HHR	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	HHR	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	HHR	Electronic Brake Control Module	√	√	√	√	√	
2008	Chevrolet truck	HHR	Power steering control module	√	√	√	√	√	
2008	Chevrolet truck	HHR panel	Transmission control module		√	√	√	√	
2008	Chevrolet truck	HHR panel	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	HHR panel	Passenger presence system		√	√			
2008	Chevrolet truck	HHR panel	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Chevrolet truck	HHR panel	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	HHR panel	Personal audio link module	√	√	√			0528
2008	Chevrolet truck	HHR panel	Body Control Module	√	√	√	√	√	0515
2008	Chevrolet truck	HHR panel	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	HHR panel	Digital radio receiver	√	√	√	√		
2008	Chevrolet truck	HHR panel	Radio	√	√	√	√	√	
2008	Chevrolet truck	HHR panel	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	HHR panel	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	HHR panel	Electronic Brake Control Module	√	√	√	√	√	
2008	Chevrolet truck	HHR panel	Power steering control module	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 2WD	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Silverado - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Silverado - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Silverado - 2WD	Passenger presence system	√	√	√	√		0512
2008	Chevrolet truck	Silverado - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Silverado - 2WD	Rollover sensor	√	√	√	√		0541
2008	Chevrolet truck	Silverado - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Silverado - 2WD	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	Silverado - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Chevrolet truck	Silverado - 2WD	Amplifier (bose)	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 2WD	Digital radio receiver	√	√	√	√		
2008	Chevrolet truck	Silverado - 2WD	Radio	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	Silverado - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 2WD	Memory seat module	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 2WD	Rear heated seat module	√	√	√	√		
2008	Chevrolet truck	Silverado - 2WD	Park assist module	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 2WD	Personal audio link module	√	√	√			0528
2008	Chevrolet truck	Silverado - 2WD	Body Control Module	√	√	√	√	√	0498
2008	Chevrolet truck	Silverado - 2WD	Body Control Module	√	√	√	√	√	0497



2008	Chevrolet truck	Silverado - 2WD	Driver door switch	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 2WD	Passenger door switch	√	√	√	√	√	0512
2008	Chevrolet truck	Silverado - 2WD	Electronic suension control	√	√	√	√	√	0532
2008	Chevrolet truck	Silverado - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet truck	Silverado - 2WD	Trailer brake control module	√	√	√	√	√	0532
2008	Chevrolet truck	Silverado - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Silverado - 2WD	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Silverado - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Silverado - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Silverado - 2WD	Passenger presence system	√	√	√	√		0512
2008	Chevrolet truck	Silverado - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Silverado - 2WD	Rollover sensor	√	√	√	√		0541
2008	Chevrolet truck	Silverado - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Silverado - 2WD	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	Silverado - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Chevrolet truck	Silverado - 2WD	Amplifier (bose)	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 2WD	Digital radio receiver	√	√	√	√		
2008	Chevrolet truck	Silverado - 2WD	Radio	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	Silverado - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 2WD	Memory seat module	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 2WD	Rear heated seat module	√	√	√	√		
2008	Chevrolet truck	Silverado - 2WD	Park assist module	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 2WD	Personal audio link module	√	√	√			0528
2008	Chevrolet truck	Silverado - 2WD	Body Control Module	√	√	√	√	√	0498
2008	Chevrolet truck	Silverado - 2WD	Body Control Module	√	√	√	√	√	0497
2008	Chevrolet truck	Silverado - 2WD	Driver door switch	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 2WD	Passenger door switch	√	√	√	√	√	0512
2008	Chevrolet truck	Silverado - 2WD	Electronic suension control	√	√	√	√	√	0532
2008	Chevrolet truck	Silverado - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet truck	Silverado - 2WD	Trailer brake control module	√	√	√	√	√	0532
2008	Chevrolet truck	Silverado - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Silverado - 4WD	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Silverado - 4WD	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Silverado - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Silverado - 4WD	Passenger presence system	√	√	√	√		0512
2008	Chevrolet truck	Silverado - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Silverado - 4WD	Rollover sensor	√	√	√	√		0541
2008	Chevrolet truck	Silverado - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Silverado - 4WD	Theft Deterrent Module	√	√	√	√		

2008	Chevrolet truck	Silverado - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Chevrolet truck	Silverado - 4WD	Amplifier (bose)	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 4WD	Digital radio receiver	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 4WD	Radio	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	Silverado - 4WD	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 4WD	Memory seat module	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 4WD	Rear heated seat module	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 4WD	Park assist module	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 4WD	Personal audio link module	√	√	√	√	√	0528
2008	Chevrolet truck	Silverado - 4WD	Body Control Module	√	√	√	√	√	0498
2008	Chevrolet truck	Silverado - 4WD	Body Control Module	√	√	√	√	√	0497
2008	Chevrolet truck	Silverado - 4WD	Driver door switch	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 4WD	Passenger door switch	√	√	√	√	√	0512
2008	Chevrolet truck	Silverado - 4WD	Electronic suension control	√	√	√	√	√	0532
2008	Chevrolet truck	Silverado - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet truck	Silverado - 4WD	Trailer brake control module	√	√	√	√	√	0532
2008	Chevrolet truck	Silverado - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Silverado - 4WD	Transmission control module	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 4WD	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Silverado - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Silverado - 4WD	Passenger presence system	√	√	√	√	√	0512
2008	Chevrolet truck	Silverado - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Silverado - 4WD	Rollover sensor	√	√	√	√	√	0541
2008	Chevrolet truck	Silverado - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Silverado - 4WD	Theft Deterrent Module	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Chevrolet truck	Silverado - 4WD	Amplifier (bose)	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 4WD	Digital radio receiver	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 4WD	Radio	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	Silverado - 4WD	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 4WD	Memory seat module	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 4WD	Rear heated seat module	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 4WD	Park assist module	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2008	Chevrolet truck	Silverado - 4WD	Personal audio link module	√	√	√	√	√	0528
2008	Chevrolet truck	Silverado - 4WD	Body Control Module	√	√	√	√	√	0498
2008	Chevrolet truck	Silverado - 4WD	Body Control Module	√	√	√	√	√	0497
2008	Chevrolet truck	Silverado - 4WD	Driver door switch	√	√	√	√	√	

2008	Chevrolet truck	Silverado - 4WD	Passenger door switch	√	√	√	√	√	0512
2008	Chevrolet truck	Silverado - 4WD	Electronic suension control	√	√	√	√	√	0532
2008	Chevrolet truck	Silverado - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet truck	Silverado - 4WD	Trailer brake control module	√	√	√	√	√	0532
2008	Chevrolet truck	Silverado - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Suburban - 2WD	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Suburban - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Suburban - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Suburban - 2WD	Passenger presence system	√	√	√	√		0512
2008	Chevrolet truck	Suburban - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Suburban - 2WD	Rollover sensor	√	√	√	√		0541
2008	Chevrolet truck	Suburban - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Suburban - 2WD	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	Suburban - 2WD	Body Control Module	√	√	√	√	√	0497
2008	Chevrolet truck	Suburban - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Chevrolet truck	Suburban - 2WD	Amplifier (bose)	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 2WD	Digital radio receiver	√	√	√	√		
2008	Chevrolet truck	Suburban - 2WD	Radio	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	Suburban - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 2WD	Memory seat module	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 2WD	Rear heated seat module	√	√	√	√		
2008	Chevrolet truck	Suburban - 2WD	Park assist module	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 2WD	Personal audio link module	√	√	√			0528
2008	Chevrolet truck	Suburban - 2WD	Assist step controller	√	√	√	√	√	0531
2008	Chevrolet truck	Suburban - 2WD	Body Control Module	√	√	√	√	√	0498
2008	Chevrolet truck	Suburban - 2WD	Liftgate module	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 2WD	Driver door switch	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 2WD	Passenger door switch	√	√	√	√	√	0512
2008	Chevrolet truck	Suburban - 2WD	Electronic suension control	√	√	√	√	√	0532
2008	Chevrolet truck	Suburban - 2WD	Trailer brake control module	√	√	√	√		
2008	Chevrolet truck	Suburban - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet truck	Suburban - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Suburban - 2WD	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Suburban - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Suburban - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Suburban - 2WD	Passenger presence system	√	√	√	√		0512
2008	Chevrolet truck	Suburban - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Suburban - 2WD	Rollover sensor	√	√	√	√		0541
2008	Chevrolet truck	Suburban - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497

2008	Chevrolet truck	Suburban - 2WD	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	Suburban - 2WD	Body Control Module	√	√	√	√	√	0497
2008	Chevrolet truck	Suburban - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Chevrolet truck	Suburban - 2WD	Amplifier (bose)	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 2WD	Digital radio receiver	√	√	√	√		
2008	Chevrolet truck	Suburban - 2WD	Radio	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	Suburban - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 2WD	Memory seat module	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 2WD	Rear heated seat module	√	√	√	√		
2008	Chevrolet truck	Suburban - 2WD	Park assist module	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 2WD	Personal audio link module	√	√	√			0528
2008	Chevrolet truck	Suburban - 2WD	Assist step controller	√	√	√	√	√	0531
2008	Chevrolet truck	Suburban - 2WD	Body Control Module	√	√	√	√	√	0498
2008	Chevrolet truck	Suburban - 2WD	Liftgate module	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 2WD	Driver door switch	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 2WD	Passenger door switch	√	√	√	√	√	0512
2008	Chevrolet truck	Suburban - 2WD	Electronic suspension control	√	√	√	√	√	0532
2008	Chevrolet truck	Suburban - 2WD	Trailer brake control module	√	√	√	√		
2008	Chevrolet truck	Suburban - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet truck	Suburban - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Suburban - 4WD	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Suburban - 4WD	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Suburban - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Suburban - 4WD	Passenger presence system	√	√	√	√		0512
2008	Chevrolet truck	Suburban - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Suburban - 4WD	Rollover sensor	√	√	√	√		0541
2008	Chevrolet truck	Suburban - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Suburban - 4WD	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	Suburban - 4WD	Body Control Module	√	√	√	√	√	0497
2008	Chevrolet truck	Suburban - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Chevrolet truck	Suburban - 4WD	Amplifier (bose)	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 4WD	Digital radio receiver	√	√	√	√		
2008	Chevrolet truck	Suburban - 4WD	Radio	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	Suburban - 4WD	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 4WD	Memory seat module	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 4WD	Rear heated seat module	√	√	√	√		
2008	Chevrolet truck	Suburban - 4WD	Park assist module	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 4WD	Rear HVAC/RSA	√	√	√	√	√	

2008	Chevrolet truck	Suburban - 4WD	Personal audio link module	√	√	√			0528
2008	Chevrolet truck	Suburban - 4WD	Assist step controller	√	√	√	√	√	0531
2008	Chevrolet truck	Suburban - 4WD	Body Control Module	√	√	√	√	√	0498
2008	Chevrolet truck	Suburban - 4WD	Liftgate module	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 4WD	Driver door switch	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 4WD	Passenger door switch	√	√	√	√	√	0512
2008	Chevrolet truck	Suburban - 4WD	Electronic suension control	√	√	√	√	√	0532
2008	Chevrolet truck	Suburban - 4WD	Trailer brake control module	√	√	√	√		
2008	Chevrolet truck	Suburban - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet truck	Suburban - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Suburban - 4WD	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Suburban - 4WD	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Suburban - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Suburban - 4WD	Passenger presence system	√	√	√	√		0512
2008	Chevrolet truck	Suburban - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Suburban - 4WD	Rollover sensor	√	√	√	√		0541
2008	Chevrolet truck	Suburban - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Suburban - 4WD	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	Suburban - 4WD	Body Control Module	√	√	√	√	√	0497
2008	Chevrolet truck	Suburban - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Chevrolet truck	Suburban - 4WD	Amplifier (bose)	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 4WD	Digital radio receiver	√	√	√	√		
2008	Chevrolet truck	Suburban - 4WD	Radio	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	Suburban - 4WD	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 4WD	Memory seat module	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 4WD	Rear heated seat module	√	√	√	√		
2008	Chevrolet truck	Suburban - 4WD	Park assist module	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 4WD	Personal audio link module	√	√	√			0528
2008	Chevrolet truck	Suburban - 4WD	Assist step controller	√	√	√	√	√	0531
2008	Chevrolet truck	Suburban - 4WD	Body Control Module	√	√	√	√	√	0498
2008	Chevrolet truck	Suburban - 4WD	Liftgate module	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 4WD	Driver door switch	√	√	√	√	√	
2008	Chevrolet truck	Suburban - 4WD	Passenger door switch	√	√	√	√	√	0512
2008	Chevrolet truck	Suburban - 4WD	Electronic suension control	√	√	√	√	√	0532
2008	Chevrolet truck	Suburban - 4WD	Trailer brake control module	√	√	√	√		
2008	Chevrolet truck	Suburban - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet truck	Suburban - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Tahoe	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Tahoe	Engine Control Module	√	√	√	√	√	0493

2008	Chevrolet truck	Tahoe	Fuel Pump Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Tahoe	Passenger presence system	√	√	√	√		0512
2008	Chevrolet truck	Tahoe	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Tahoe	Rollover sensor	√	√	√	√		0541
2008	Chevrolet truck	Tahoe	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Tahoe	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	Tahoe	Body Control Module	√	√	√	√	√	0497
2008	Chevrolet truck	Tahoe	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Chevrolet truck	Tahoe	Amplifier (bose)	√	√	√	√	√	
2008	Chevrolet truck	Tahoe	Digital radio receiver	√	√	√	√		
2008	Chevrolet truck	Tahoe	Radio	√	√	√	√	√	
2008	Chevrolet truck	Tahoe	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	Tahoe	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Tahoe	Memory seat module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe	Rear heated seat module	√	√	√	√		
2008	Chevrolet truck	Tahoe	Park assist module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe	Rear HVAC/RSA	√	√	√	√	√	
2008	Chevrolet truck	Tahoe	Personal audio link module	√	√	√			0528
2008	Chevrolet truck	Tahoe	Assist step controller	√	√	√	√	√	0531
2008	Chevrolet truck	Tahoe	Body Control Module	√	√	√	√	√	0498
2008	Chevrolet truck	Tahoe	Liftgate module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe	Driver door switch	√	√	√	√	√	
2008	Chevrolet truck	Tahoe	Passenger door switch	√	√	√	√	√	0512
2008	Chevrolet truck	Tahoe	Electronic suspension control	√	√	√	√	√	0532
2008	Chevrolet truck	Tahoe	Trailer brake control module	√	√	√	√		
2008	Chevrolet truck	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet truck	Tahoe	Transfer Case Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Tahoe	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Tahoe	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Tahoe	Fuel Pump Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Tahoe	Passenger presence system	√	√	√	√		0512
2008	Chevrolet truck	Tahoe	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Tahoe	Rollover sensor	√	√	√	√		0541
2008	Chevrolet truck	Tahoe	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Tahoe	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	Tahoe	Body Control Module	√	√	√	√	√	0497
2008	Chevrolet truck	Tahoe	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Chevrolet truck	Tahoe	Amplifier (bose)	√	√	√	√	√	
2008	Chevrolet truck	Tahoe	Digital radio receiver	√	√	√	√		
2008	Chevrolet truck	Tahoe	Radio	√	√	√	√	√	
2008	Chevrolet truck	Tahoe	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495

2008	Chevrolet truck	Tahoe	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Tahoe	Memory seat module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe	Rear heated seat module	√	√	√	√		
2008	Chevrolet truck	Tahoe	Park assist module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe	Rear HVAC/RSA	√	√	√	√	√	
2008	Chevrolet truck	Tahoe	Personal audio link module	√	√	√			0528
2008	Chevrolet truck	Tahoe	Assist step controller	√	√	√	√	√	0531
2008	Chevrolet truck	Tahoe	Body Control Module	√	√	√	√	√	0498
2008	Chevrolet truck	Tahoe	Liftgate module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe	Driver door switch	√	√	√	√	√	
2008	Chevrolet truck	Tahoe	Passenger door switch	√	√	√	√	√	0512
2008	Chevrolet truck	Tahoe	Electronic suspension control	√	√	√	√	√	0532
2008	Chevrolet truck	Tahoe	Trailer brake control module	√	√	√	√		
2008	Chevrolet truck	Tahoe	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet truck	Tahoe	Transfer Case Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Tahoe hybrid	Passenger presence system	√	√	√	√		0512
2008	Chevrolet truck	Tahoe hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Tahoe hybrid	Rollover sensor	√	√	√	√		0541
2008	Chevrolet truck	Tahoe hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Tahoe hybrid	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	Tahoe hybrid	A/C compressor control module	√	√	√	√		
2008	Chevrolet truck	Tahoe hybrid	Serial Data Gateway Module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Body Control Module	√	√	√	√	√	0497
2008	Chevrolet truck	Tahoe hybrid	Amplifier (bose)	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Digital radio receiver	√	√	√	√		
2008	Chevrolet truck	Tahoe hybrid	Radio	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	Tahoe hybrid	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Memory seat module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Rear heated seat module	√	√	√	√		
2008	Chevrolet truck	Tahoe hybrid	Park assist module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Rear HVAC/RSA	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Personal audio link module	√	√	√			0528
2008	Chevrolet truck	Tahoe hybrid	Body Control Module	√	√	√	√	√	0498
2008	Chevrolet truck	Tahoe hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Chevrolet truck	Tahoe hybrid	Liftgate module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Driver door switch	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Passenger door switch	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Power steering control module		√	√	√		0536
2008	Chevrolet truck	Tahoe hybrid	Electronic suspension control	√	√	√	√	√	0532
2008	Chevrolet truck	Tahoe hybrid	Trailer brake control module	√	√	√	√		



2008	Chevrolet truck	Tahoe hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2008	Chevrolet truck	Tahoe hybrid	Accessory power module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Fuel Pump Control Module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Tahoe hybrid	Passenger presence system	√	√	√	√		0512
2008	Chevrolet truck	Tahoe hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Tahoe hybrid	Rollover sensor	√	√	√	√		0541
2008	Chevrolet truck	Tahoe hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Tahoe hybrid	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	Tahoe hybrid	Body Control Module	√	√	√	√	√	0497
2008	Chevrolet truck	Tahoe hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Chevrolet truck	Tahoe hybrid	Amplifier (bose)	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Digital radio receiver	√	√	√	√		
2008	Chevrolet truck	Tahoe hybrid	Radio	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	Tahoe hybrid	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Memory seat module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Rear heated seat module	√	√	√	√		
2008	Chevrolet truck	Tahoe hybrid	Park assist module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Rear HVAC/RSA	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Personal audio link module	√	√	√			0528
2008	Chevrolet truck	Tahoe hybrid	Assist step controller	√	√	√	√	√	0531
2008	Chevrolet truck	Tahoe hybrid	Body Control Module	√	√	√	√	√	0498
2008	Chevrolet truck	Tahoe hybrid	Liftgate module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Driver door switch	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Passenger door switch	√	√	√	√	√	0512
2008	Chevrolet truck	Tahoe hybrid	Electronic suspension control	√	√	√	√	√	0532
2008	Chevrolet truck	Tahoe hybrid	Trailer brake control module	√	√	√	√		
2008	Chevrolet truck	Tahoe hybrid	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet truck	Tahoe hybrid	Passenger presence system	√	√	√	√		0512
2008	Chevrolet truck	Tahoe hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Tahoe hybrid	Rollover sensor	√	√	√	√		0541
2008	Chevrolet truck	Tahoe hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Tahoe hybrid	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	Tahoe hybrid	A/C compressor control module	√	√	√	√		
2008	Chevrolet truck	Tahoe hybrid	Serial Data Gateway Module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Body Control Module	√	√	√	√	√	0497
2008	Chevrolet truck	Tahoe hybrid	Amplifier (bose)	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Digital radio receiver	√	√	√	√		
2008	Chevrolet truck	Tahoe hybrid	Radio	√	√	√	√	√	



2008	Chevrolet truck	Tahoe hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	Tahoe hybrid	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Memory seat module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Rear heated seat module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Park assist module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Rear HVAC/RSA	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Personal audio link module	√	√	√			0528
2008	Chevrolet truck	Tahoe hybrid	Body Control Module	√	√	√	√	√	0498
2008	Chevrolet truck	Tahoe hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Chevrolet truck	Tahoe hybrid	Liftgate module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Driver door switch	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Passenger door switch	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Power steering control module		√	√	√		0536
2008	Chevrolet truck	Tahoe hybrid	Electronic suspension control	√	√	√	√	√	0532
2008	Chevrolet truck	Tahoe hybrid	Trailer brake control module	√	√	√	√		
2008	Chevrolet truck	Tahoe hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2008	Chevrolet truck	Tahoe hybrid	Accessory power module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Transfer Case Control Module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Transmission control module		√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Fuel Pump Control Module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Tahoe hybrid	Passenger presence system	√	√	√	√		0512
2008	Chevrolet truck	Tahoe hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Chevrolet truck	Tahoe hybrid	Rollover sensor	√	√	√	√		0541
2008	Chevrolet truck	Tahoe hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Chevrolet truck	Tahoe hybrid	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	Tahoe hybrid	Body Control Module	√	√	√	√	√	0497
2008	Chevrolet truck	Tahoe hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Chevrolet truck	Tahoe hybrid	Amplifier (bose)	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Digital radio receiver	√	√	√	√		
2008	Chevrolet truck	Tahoe hybrid	Radio	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	Tahoe hybrid	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Memory seat module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Rear heated seat module	√	√	√	√		
2008	Chevrolet truck	Tahoe hybrid	Park assist module	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Rear HVAC/RSA	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Personal audio link module	√	√	√			0528
2008	Chevrolet truck	Tahoe hybrid	Assist step controller	√	√	√	√	√	0531
2008	Chevrolet truck	Tahoe hybrid	Body Control Module	√	√	√	√	√	0498
2008	Chevrolet truck	Tahoe hybrid	Liftgate module	√	√	√	√	√	

2008	Chevrolet truck	Tahoe hybrid	Driver door switch	√	√	√	√	√	
2008	Chevrolet truck	Tahoe hybrid	Passenger door switch	√	√	√	√	√	0512
2008	Chevrolet truck	Tahoe hybrid	Electronic suension control	√	√	√	√	√	0532
2008	Chevrolet truck	Tahoe hybrid	Trailer brake control module	√	√	√	√		
2008	Chevrolet truck	Tahoe hybrid	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet truck	TrailBlazer - 2WD	Transmission control module		√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	TrailBlazer - 2WD	Supplemental inflatable restraint	√	√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 2WD	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	TrailBlazer - 2WD	Passenger presence system		√	√			0512
2008	Chevrolet truck	TrailBlazer - 2WD	Digital radio receiver	√	√	√	√		0516
2008	Chevrolet truck	TrailBlazer - 2WD	Disc player and video dilay	√	√	√			
2008	Chevrolet truck	TrailBlazer - 2WD	Radio	√	√	√	√		
2008	Chevrolet truck	TrailBlazer - 2WD	Rear seat audio	√	√	√	√		
2008	Chevrolet truck	TrailBlazer - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	TrailBlazer - 2WD	Generator battery control module	√	√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 2WD	Body Control Module	√	√	√	√	√	0550
2008	Chevrolet truck	TrailBlazer - 2WD	Driver door module	√	√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 2WD	Passenger door module	√	√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 2WD	Liftgate module	√	√	√	√	√	0159
2008	Chevrolet truck	TrailBlazer - 2WD	Driver seat module	√	√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 2WD	HVAC Control Module	√	√	√	√	√	0512
2008	Chevrolet truck	TrailBlazer - 2WD	Navigation radio	√	√	√	√	√	0525
2008	Chevrolet truck	TrailBlazer - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	TrailBlazer - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	TrailBlazer - 2WD	Transmission control module		√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	TrailBlazer - 2WD	Supplemental inflatable restraint	√	√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 2WD	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	TrailBlazer - 2WD	Passenger presence system		√	√			0512
2008	Chevrolet truck	TrailBlazer - 2WD	Digital radio receiver	√	√	√	√		0516
2008	Chevrolet truck	TrailBlazer - 2WD	Disc player and video dilay	√	√	√			
2008	Chevrolet truck	TrailBlazer - 2WD	Radio	√	√	√	√		
2008	Chevrolet truck	TrailBlazer - 2WD	Rear seat audio	√	√	√	√		
2008	Chevrolet truck	TrailBlazer - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	TrailBlazer - 2WD	Generator battery control module	√	√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 2WD	Body Control Module	√	√	√	√	√	0550
2008	Chevrolet truck	TrailBlazer - 2WD	Driver door module	√	√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 2WD	Passenger door module	√	√	√	√	√	

2008	Chevrolet truck	TrailBlazer - 2WD	Liftgate module	√	√	√	√	√	0159
2008	Chevrolet truck	TrailBlazer - 2WD	Driver seat module	√	√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 2WD	HVAC Control Module	√	√	√	√	√	0512
2008	Chevrolet truck	TrailBlazer - 2WD	Navigation radio	√	√	√	√	√	0525
2008	Chevrolet truck	TrailBlazer - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	TrailBlazer - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	TrailBlazer - 4WD	Transmission control module		√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 4WD	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	TrailBlazer - 4WD	Supplemental inflatable restraint	√	√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 4WD	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	TrailBlazer - 4WD	Passenger presence system		√	√			0512
2008	Chevrolet truck	TrailBlazer - 4WD	Digital radio receiver	√	√	√	√		0516
2008	Chevrolet truck	TrailBlazer - 4WD	Disc player and video delay	√	√	√			
2008	Chevrolet truck	TrailBlazer - 4WD	Radio	√	√	√	√		
2008	Chevrolet truck	TrailBlazer - 4WD	Rear seat audio	√	√	√	√		
2008	Chevrolet truck	TrailBlazer - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	TrailBlazer - 4WD	Generator battery control module	√	√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 4WD	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 4WD	Body Control Module	√	√	√	√	√	0550
2008	Chevrolet truck	TrailBlazer - 4WD	Driver door module	√	√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 4WD	Passenger door module	√	√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 4WD	Liftgate module	√	√	√	√	√	0159
2008	Chevrolet truck	TrailBlazer - 4WD	Driver seat module	√	√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 4WD	HVAC Control Module	√	√	√	√	√	0512
2008	Chevrolet truck	TrailBlazer - 4WD	Navigation radio	√	√	√	√	√	0525
2008	Chevrolet truck	TrailBlazer - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	TrailBlazer - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	TrailBlazer - 4WD	Transmission control module		√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 4WD	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	TrailBlazer - 4WD	Supplemental inflatable restraint	√	√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 4WD	Theft Deterrent Module	√	√	√	√		
2008	Chevrolet truck	TrailBlazer - 4WD	Passenger presence system		√	√			0512
2008	Chevrolet truck	TrailBlazer - 4WD	Digital radio receiver	√	√	√	√		0516
2008	Chevrolet truck	TrailBlazer - 4WD	Disc player and video delay	√	√	√			
2008	Chevrolet truck	TrailBlazer - 4WD	Radio	√	√	√	√		
2008	Chevrolet truck	TrailBlazer - 4WD	Rear seat audio	√	√	√	√		
2008	Chevrolet truck	TrailBlazer - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Chevrolet truck	TrailBlazer - 4WD	Generator battery control module	√	√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 4WD	Instrument panel cluster	√	√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 4WD	Body Control Module	√	√	√	√	√	0550
2008	Chevrolet truck	TrailBlazer - 4WD	Driver door module	√	√	√	√	√	

2008	Chevrolet truck	TrailBlazer - 4WD	Passenger door module	√	√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 4WD	Liftgate module	√	√	√	√	√	0159
2008	Chevrolet truck	TrailBlazer - 4WD	Driver seat module	√	√	√	√	√	
2008	Chevrolet truck	TrailBlazer - 4WD	HVAC Control Module	√	√	√	√	√	0512
2008	Chevrolet truck	TrailBlazer - 4WD	Navigation radio	√	√	√	√	√	0525
2008	Chevrolet truck	TrailBlazer - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	TrailBlazer - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Uplander	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Uplander	Transmission control module	√	√	√	√	√	0493
2008	Chevrolet truck	Uplander	Remote control door lock receiver	√	√	√	√	√	0159
2008	Chevrolet truck	Uplander	Passenger presence system		√	√			0512
2008	Chevrolet truck	Uplander	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Chevrolet truck	Uplander	Body Control Module	√	√	√	√	√	0499
2008	Chevrolet truck	Uplander	Digital radio receiver	√	√	√	√		0516
2008	Chevrolet truck	Uplander	Disc player and video delay	√	√	√			
2008	Chevrolet truck	Uplander	Radio	√	√	√	√		0586 0587 0525
2008	Chevrolet truck	Uplander	HVAC Control Module	√	√	√	√	√	
2008	Chevrolet truck	Uplander	Left power sliding door module	√	√	√	√	√	
2008	Chevrolet truck	Uplander	Right power sliding door module	√	√	√	√	√	
2008	Chevrolet truck	Uplander	Vehicle comm. interface module	√	√	√	√	√	0565 0495 0585
2008	Chevrolet truck	Uplander	Navigation radio	√	√	√	√	√	0525
2008	Chevrolet truck	Uplander	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Chevrolet truck	Uplander Ext.	Engine Control Module	√	√	√	√	√	0493
2008	Chevrolet truck	Uplander Ext.	Transmission control module	√	√	√	√	√	0493
2008	Chevrolet truck	Uplander Ext.	Remote control door lock receiver	√	√	√	√	√	0159
2008	Chevrolet truck	Uplander Ext.	Passenger presence system		√	√			0512
2008	Chevrolet truck	Uplander Ext.	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Chevrolet truck	Uplander Ext.	Body Control Module	√	√	√	√	√	0499
2008	Chevrolet truck	Uplander Ext.	Digital radio receiver	√	√	√	√		0516
2008	Chevrolet truck	Uplander Ext.	Disc player and video delay	√	√	√			
2008	Chevrolet truck	Uplander Ext.	Radio	√	√	√	√		0586 0587 0525
2008	Chevrolet truck	Uplander Ext.	HVAC Control Module	√	√	√	√	√	
2008	Chevrolet truck	Uplander Ext.	Left power sliding door module	√	√	√	√	√	
2008	Chevrolet truck	Uplander Ext.	Right power sliding door module	√	√	√	√	√	
2008	Chevrolet truck	Uplander Ext.	Vehicle comm. interface module	√	√	√	√	√	0565 0495 0585
2008	Chevrolet truck	Uplander Ext.	Navigation radio	√	√	√	√	√	0525
2008	Chevrolet truck	Uplander Ext.	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Acadia - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Acadia - 2WD	Transmission control module		√	√	√	√	
2008	GMC truck	Acadia - 2WD	Passenger presence system	√	√	√	√		0537
2008	GMC truck	Acadia - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159

2008	GMC truck	Acadia - 2WD	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Acadia - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Acadia - 2WD	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Acadia - 2WD	Head up dilay	√	√	√	√		
2008	GMC truck	Acadia - 2WD	Memory seat module	√	√	√	√	√	
2008	GMC truck	Acadia - 2WD	Park assist module	√	√	√	√	√	
2008	GMC truck	Acadia - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Acadia - 2WD	Digital radio receiver	√	√	√	√		
2008	GMC truck	Acadia - 2WD	Radio	√	√	√	√	√	
2008	GMC truck	Acadia - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Acadia - 2WD	Body Control Module						0499 0497
2008	GMC truck	Acadia - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Acadia - 2WD	Personal audio link module	√	√	√			0528 0529
2008	GMC truck	Acadia - 2WD	Driver door switch	√	√	√	√	√	0527
2008	GMC truck	Acadia - 2WD	Passenger door switch	√	√	√	√	√	0527
2008	GMC truck	Acadia - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Acadia - 2WD	Liftgate module	√	√	√	√	√	0537
2008	GMC truck	Acadia - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Acadia - 2WD	Rear drive system	√	√	√	√	√	0530
2008	GMC truck	Acadia - 4WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Acadia - 4WD	Transmission control module		√	√	√	√	
2008	GMC truck	Acadia - 4WD	Passenger presence system	√	√	√	√		0537
2008	GMC truck	Acadia - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Acadia - 4WD	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Acadia - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Acadia - 4WD	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Acadia - 4WD	Head up dilay	√	√	√	√		
2008	GMC truck	Acadia - 4WD	Memory seat module	√	√	√	√	√	
2008	GMC truck	Acadia - 4WD	Park assist module	√	√	√	√	√	
2008	GMC truck	Acadia - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Acadia - 4WD	Digital radio receiver	√	√	√	√		
2008	GMC truck	Acadia - 4WD	Radio	√	√	√	√	√	
2008	GMC truck	Acadia - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Acadia - 4WD	Body Control Module						0499 0497
2008	GMC truck	Acadia - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Acadia - 4WD	Personal audio link module	√	√	√			0528 0529
2008	GMC truck	Acadia - 4WD	Driver door switch	√	√	√	√	√	0527
2008	GMC truck	Acadia - 4WD	Passenger door switch	√	√	√	√	√	0527
2008	GMC truck	Acadia - 4WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Acadia - 4WD	Liftgate module	√	√	√	√	√	0537
2008	GMC truck	Acadia - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506

2008	GMC truck	Acadia - 4WD	Rear drive system	√	√	√	√	√	0530
2008	GMC truck	Canyon Pickup - 2WD	Transmission control module		√	√	√	√	
2008	GMC truck	Canyon Pickup - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	GMC truck	Canyon Pickup - 2WD	Passenger presence system		√	√			0512
2008	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550 0159
2008	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2008	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2008	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Canyon Pickup - 2WD	Theft Deterrent Module	√	√	√	√		0170
2008	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Canyon Pickup - 2WD	Generator battery control module	√	√	√	√	√	0515
2008	GMC truck	Canyon Pickup - 2WD	Electronic Brake Control Module	√	√	√	√	√	
2008	GMC truck	Canyon Pickup - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Canyon Pickup - 2WD	Transmission control module		√	√	√	√	
2008	GMC truck	Canyon Pickup - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	GMC truck	Canyon Pickup - 2WD	Passenger presence system		√	√			0512
2008	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550 0159
2008	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2008	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2008	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Canyon Pickup - 2WD	Theft Deterrent Module	√	√	√	√		0170
2008	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Canyon Pickup - 2WD	Generator battery control module	√	√	√	√	√	0515
2008	GMC truck	Canyon Pickup - 2WD	Electronic Brake Control Module	√	√	√	√	√	
2008	GMC truck	Canyon Pickup - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Canyon Pickup - 4WD	Transmission control module		√	√	√	√	
2008	GMC truck	Canyon Pickup - 4WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	GMC truck	Canyon Pickup - 4WD	Passenger presence system		√	√			0512
2008	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550 0159
2008	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2008	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2008	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Canyon Pickup - 4WD	Theft Deterrent Module	√	√	√	√		0170
2008	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Canyon Pickup - 4WD	Generator battery control module	√	√	√	√	√	0515
2008	GMC truck	Canyon Pickup - 4WD	Electronic Brake Control Module	√	√	√	√	√	
2008	GMC truck	Canyon Pickup - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Canyon Pickup - 4WD	Transmission control module		√	√	√	√	

2008	GMC truck	Canyon Pickup - 4WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	GMC truck	Canyon Pickup - 4WD	Passenger presence system		√	√			0512
2008	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550 0159
2008	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2008	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2008	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Canyon Pickup - 4WD	Theft Deterrent Module	√	√	√	√		0170
2008	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Canyon Pickup - 4WD	Generator battery control module	√	√	√	√	√	0515
2008	GMC truck	Canyon Pickup - 4WD	Electronic Brake Control Module	√	√	√	√	√	
2008	GMC truck	Canyon Pickup - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 2WD	Transmission control module		√	√	√	√	
2008	GMC truck	Envoy - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 2WD	Supplemental inflatable restraint	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Envoy - 2WD	Passenger presence system		√	√			0512
2008	GMC truck	Envoy - 2WD	Digital radio receiver	√	√	√	√		0516
2008	GMC truck	Envoy - 2WD	Disc player and video dilay	√	√	√			
2008	GMC truck	Envoy - 2WD	Radio	√	√	√	√		
2008	GMC truck	Envoy - 2WD	Rear seat audio	√	√	√	√		
2008	GMC truck	Envoy - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Envoy - 2WD	Generator battery control module	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	Body Control Module	√	√	√	√	√	0550
2008	GMC truck	Envoy - 2WD	Driver door module	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	Passenger door module	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	Liftgate module	√	√	√	√	√	0159
2008	GMC truck	Envoy - 2WD	Driver seat module	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	HVAC Control Module	√	√	√	√	√	0512
2008	GMC truck	Envoy - 2WD	Navigation radio	√	√	√	√	√	0525
2008	GMC truck	Envoy - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 2WD	Transmission control module		√	√	√	√	
2008	GMC truck	Envoy - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 2WD	Supplemental inflatable restraint	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Envoy - 2WD	Passenger presence system		√	√			0512
2008	GMC truck	Envoy - 2WD	Digital radio receiver	√	√	√	√		0516
2008	GMC truck	Envoy - 2WD	Disc player and video dilay	√	√	√			
2008	GMC truck	Envoy - 2WD	Radio	√	√	√	√		



2008	GMC truck	Envoy - 2WD	Rear seat audio	√	√	√	√		
2008	GMC truck	Envoy - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Envoy - 2WD	Generator battery control module	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	Body Control Module	√	√	√	√	√	0550
2008	GMC truck	Envoy - 2WD	Driver door module	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	Passenger door module	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	Liftgate module	√	√	√	√	√	0159
2008	GMC truck	Envoy - 2WD	Driver seat module	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	HVAC Control Module	√	√	√	√	√	0512
2008	GMC truck	Envoy - 2WD	Navigation radio	√	√	√	√	√	0525
2008	GMC truck	Envoy - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 4WD	Transmission control module		√	√	√	√	
2008	GMC truck	Envoy - 4WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 4WD	Supplemental inflatable restraint	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Envoy - 4WD	Passenger presence system		√	√			0512
2008	GMC truck	Envoy - 4WD	Digital radio receiver	√	√	√	√		0516
2008	GMC truck	Envoy - 4WD	Disc player and video dilay	√	√	√			
2008	GMC truck	Envoy - 4WD	Radio	√	√	√	√		
2008	GMC truck	Envoy - 4WD	Rear seat audio	√	√	√	√		
2008	GMC truck	Envoy - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Envoy - 4WD	Generator battery control module	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	Body Control Module	√	√	√	√	√	0550
2008	GMC truck	Envoy - 4WD	Driver door module	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	Passenger door module	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	Liftgate module	√	√	√	√	√	0159
2008	GMC truck	Envoy - 4WD	Driver seat module	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	HVAC Control Module	√	√	√	√	√	0512
2008	GMC truck	Envoy - 4WD	Navigation radio	√	√	√	√	√	0525
2008	GMC truck	Envoy - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 4WD	Transmission control module		√	√	√	√	
2008	GMC truck	Envoy - 4WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 4WD	Supplemental inflatable restraint	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Envoy - 4WD	Passenger presence system		√	√			0512
2008	GMC truck	Envoy - 4WD	Digital radio receiver	√	√	√	√		0516
2008	GMC truck	Envoy - 4WD	Disc player and video dilay	√	√	√			



2008	GMC truck	Envoy - 4WD	Radio	√	√	√	√		
2008	GMC truck	Envoy - 4WD	Rear seat audio	√	√	√	√		
2008	GMC truck	Envoy - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Envoy - 4WD	Generator battery control module	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	Body Control Module	√	√	√	√	√	0550
2008	GMC truck	Envoy - 4WD	Driver door module	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	Passenger door module	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	Liftgate module	√	√	√	√	√	0159
2008	GMC truck	Envoy - 4WD	Driver seat module	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	HVAC Control Module	√	√	√	√	√	0512
2008	GMC truck	Envoy - 4WD	Navigation radio	√	√	√	√	√	0525
2008	GMC truck	Envoy - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Savana	Transmission control module		√	√	√	√	
2008	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0571 0540 0540
2008	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Savana	Radio	√	√	√	√	√	
2008	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Savana	Passenger presence system	√	√	√	√		0537
2008	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Savana	Transmission control module		√	√	√	√	
2008	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0571 0540 0540
2008	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Savana	Radio	√	√	√	√	√	
2008	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Savana	Passenger presence system	√	√	√	√		0537
2008	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Savana	Transmission control module		√	√	√	√	

2008	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Savana	Rollover sensor	√	√	√	√	√	0541
2008	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Savana	Theft Deterrent Module	√	√	√	√	√	
2008	GMC truck	Savana	Radio	√	√	√	√	√	
2008	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Savana	Passenger presence system	√	√	√	√	√	0537
2008	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Savana	Transmission control module		√	√	√	√	
2008	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Savana	Rollover sensor	√	√	√	√	√	0541
2008	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Savana	Theft Deterrent Module	√	√	√	√	√	
2008	GMC truck	Savana	Radio	√	√	√	√	√	
2008	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Savana	Passenger presence system	√	√	√	√	√	0537
2008	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Sierra - 2WD	Transmission control module		√	√	√	√	
2008	GMC truck	Sierra - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra - 2WD	Passenger presence system	√	√	√	√	√	0512
2008	GMC truck	Sierra - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Sierra - 2WD	Rollover sensor	√	√	√	√	√	0541
2008	GMC truck	Sierra - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Sierra - 2WD	Theft Deterrent Module	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Sierra - 2WD	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Digital radio receiver	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Radio	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Sierra - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Memory seat module	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Rear heated seat module	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Park assist module	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Rear HVAC/RSA	√	√	√	√	√	

2008	GMC truck	Sierra - 2WD	Personal audio link module	√	√	√			0528
2008	GMC truck	Sierra - 2WD	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Sierra - 2WD	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Sierra - 2WD	Driver door switch	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Passenger door switch	√	√	√	√	√	0512
2008	GMC truck	Sierra - 2WD	Electronic suension control	√	√	√	√	√	0532
2008	GMC truck	Sierra - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Sierra - 2WD	Trailer brake control module	√	√	√	√	√	0532
2008	GMC truck	Sierra - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra - 2WD	Transmission control module		√	√	√	√	
2008	GMC truck	Sierra - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra - 2WD	Passenger presence system	√	√	√	√		0512
2008	GMC truck	Sierra - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Sierra - 2WD	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Sierra - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Sierra - 2WD	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Sierra - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Sierra - 2WD	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Digital radio receiver	√	√	√	√		
2008	GMC truck	Sierra - 2WD	Radio	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Sierra - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Memory seat module	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Rear heated seat module	√	√	√	√		
2008	GMC truck	Sierra - 2WD	Park assist module	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Personal audio link module	√	√	√			0528
2008	GMC truck	Sierra - 2WD	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Sierra - 2WD	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Sierra - 2WD	Driver door switch	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Passenger door switch	√	√	√	√	√	0512
2008	GMC truck	Sierra - 2WD	Electronic suension control	√	√	√	√	√	0532
2008	GMC truck	Sierra - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Sierra - 2WD	Trailer brake control module	√	√	√	√	√	0532
2008	GMC truck	Sierra - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra - 4WD	Transmission control module		√	√	√	√	
2008	GMC truck	Sierra - 4WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra - 4WD	Passenger presence system	√	√	√	√		0512
2008	GMC truck	Sierra - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159

2008	GMC truck	Sierra - 4WD	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Sierra - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Sierra - 4WD	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Sierra - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Sierra - 4WD	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Digital radio receiver	√	√	√	√		
2008	GMC truck	Sierra - 4WD	Radio	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Sierra - 4WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Memory seat module	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Rear heated seat module	√	√	√	√		
2008	GMC truck	Sierra - 4WD	Park assist module	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Personal audio link module	√	√	√			0528
2008	GMC truck	Sierra - 4WD	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Sierra - 4WD	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Sierra - 4WD	Driver door switch	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Passenger door switch	√	√	√	√	√	0512
2008	GMC truck	Sierra - 4WD	Electronic suspension control	√	√	√	√	√	0532
2008	GMC truck	Sierra - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Sierra - 4WD	Trailer brake control module	√	√	√	√	√	0532
2008	GMC truck	Sierra - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra - 4WD	Transmission control module		√	√	√	√	
2008	GMC truck	Sierra - 4WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra - 4WD	Passenger presence system	√	√	√	√		0512
2008	GMC truck	Sierra - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Sierra - 4WD	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Sierra - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Sierra - 4WD	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Sierra - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Sierra - 4WD	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Digital radio receiver	√	√	√	√		
2008	GMC truck	Sierra - 4WD	Radio	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Sierra - 4WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Memory seat module	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Rear heated seat module	√	√	√	√		
2008	GMC truck	Sierra - 4WD	Park assist module	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Personal audio link module	√	√	√			0528

2008	GMC truck	Sierra - 4WD	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Sierra - 4WD	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Sierra - 4WD	Driver door switch	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Passenger door switch	√	√	√	√	√	0512
2008	GMC truck	Sierra - 4WD	Electronic suspension control	√	√	√	√	√	0532
2008	GMC truck	Sierra - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Sierra - 4WD	Trailer brake control module	√	√	√	√	√	0532
2008	GMC truck	Sierra - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra Denali - 2WD	Transmission control module		√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra Denali - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra Denali - 2WD	Passenger presence system	√	√	√	√		0512
2008	GMC truck	Sierra Denali - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Sierra Denali - 2WD	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Sierra Denali - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Sierra Denali - 2WD	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Sierra Denali - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Sierra Denali - 2WD	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Digital radio receiver	√	√	√	√		
2008	GMC truck	Sierra Denali - 2WD	Radio	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Sierra Denali - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Memory seat module	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Rear heated seat module	√	√	√	√		
2008	GMC truck	Sierra Denali - 2WD	Park assist module	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Personal audio link module	√	√	√			0528
2008	GMC truck	Sierra Denali - 2WD	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Sierra Denali - 2WD	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Sierra Denali - 2WD	Driver door switch	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Passenger door switch	√	√	√	√	√	0512
2008	GMC truck	Sierra Denali - 2WD	Electronic suspension control	√	√	√	√	√	0532
2008	GMC truck	Sierra Denali - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Sierra Denali - 2WD	Trailer brake control module	√	√	√	√	√	0532
2008	GMC truck	Sierra Denali - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra Denali - 2WD	Transmission control module		√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra Denali - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra Denali - 2WD	Passenger presence system	√	√	√	√		0512
2008	GMC truck	Sierra Denali - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Sierra Denali - 2WD	Rollover sensor	√	√	√	√		0541

2008	GMC truck	Sierra Denali - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Sierra Denali - 2WD	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Sierra Denali - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Sierra Denali - 2WD	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Digital radio receiver	√	√	√	√		
2008	GMC truck	Sierra Denali - 2WD	Radio	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Sierra Denali - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Memory seat module	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Rear heated seat module	√	√	√	√		
2008	GMC truck	Sierra Denali - 2WD	Park assist module	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Personal audio link module	√	√	√			0528
2008	GMC truck	Sierra Denali - 2WD	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Sierra Denali - 2WD	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Sierra Denali - 2WD	Driver door switch	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Passenger door switch	√	√	√	√	√	0512
2008	GMC truck	Sierra Denali - 2WD	Electronic suspension control	√	√	√	√	√	0532
2008	GMC truck	Sierra Denali - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Sierra Denali - 2WD	Trailer brake control module	√	√	√	√	√	0532
2008	GMC truck	Sierra Denali - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Yukon	Passenger presence system	√	√	√	√		0512
2008	GMC truck	Yukon	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Yukon	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Yukon	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Yukon	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Yukon	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Yukon	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Yukon	Digital radio receiver	√	√	√	√		
2008	GMC truck	Yukon	Radio	√	√	√	√	√	
2008	GMC truck	Yukon	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Yukon	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Yukon	Memory seat module	√	√	√	√	√	
2008	GMC truck	Yukon	Rear heated seat module	√	√	√	√		
2008	GMC truck	Yukon	Park assist module	√	√	√	√	√	
2008	GMC truck	Yukon	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Yukon	Personal audio link module	√	√	√			0528
2008	GMC truck	Yukon	Assist step controller	√	√	√	√	√	0531
2008	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Yukon	Liftgate module	√	√	√	√	√	

2008	GMC truck	Yukon	Driver door switch	√	√	√	√	√	
2008	GMC truck	Yukon	Passenger door switch	√	√	√	√	√	0512
2008	GMC truck	Yukon	Electronic suension control	√	√	√	√	√	0532
2008	GMC truck	Yukon	Trailer brake control module	√	√	√	√		
2008	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Yukon	Transmission control module		√	√	√	√	
2008	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Yukon	Passenger presence system	√	√	√	√		0512
2008	GMC truck	Yukon	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Yukon	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Yukon	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Yukon	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Yukon	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Yukon	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Yukon	Digital radio receiver	√	√	√	√		
2008	GMC truck	Yukon	Radio	√	√	√	√	√	
2008	GMC truck	Yukon	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Yukon	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Yukon	Memory seat module	√	√	√	√	√	
2008	GMC truck	Yukon	Rear heated seat module	√	√	√	√		
2008	GMC truck	Yukon	Park assist module	√	√	√	√	√	
2008	GMC truck	Yukon	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Yukon	Personal audio link module	√	√	√			0528
2008	GMC truck	Yukon	Assist step controller	√	√	√	√	√	0531
2008	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Yukon	Liftgate module	√	√	√	√	√	
2008	GMC truck	Yukon	Driver door switch	√	√	√	√	√	
2008	GMC truck	Yukon	Passenger door switch	√	√	√	√	√	0512
2008	GMC truck	Yukon	Electronic suension control	√	√	√	√	√	0532
2008	GMC truck	Yukon	Trailer brake control module	√	√	√	√		
2008	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Yukon	Transmission control module		√	√	√	√	
2008	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Yukon hybrid	Passenger presence system	√	√	√	√		0512
2008	GMC truck	Yukon hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Yukon hybrid	Rollover sensor	√	√	√	√		0541



2008	GMC truck	Yukon hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Yukon hybrid	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Yukon hybrid	A/C compressor control module	√	√	√	√		
2008	GMC truck	Yukon hybrid	Serial Data Gateway Module	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Yukon hybrid	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Digital radio receiver	√	√	√	√		
2008	GMC truck	Yukon hybrid	Radio	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Yukon hybrid	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Memory seat module	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Rear heated seat module	√	√	√	√		
2008	GMC truck	Yukon hybrid	Park assist module	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Personal audio link module	√	√	√			0528
2008	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Yukon hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Yukon hybrid	Liftgate module	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Driver door switch	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Passenger door switch	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Power steering control module		√	√	√		0536
2008	GMC truck	Yukon hybrid	Electronic suension control	√	√	√	√	√	0532
2008	GMC truck	Yukon hybrid	Trailer brake control module	√	√	√	√		
2008	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2008	GMC truck	Yukon hybrid	Passenger presence system	√	√	√	√		0512
2008	GMC truck	Yukon hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Yukon hybrid	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Yukon hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Yukon hybrid	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Yukon hybrid	A/C compressor control module	√	√	√	√		
2008	GMC truck	Yukon hybrid	Serial Data Gateway Module	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Yukon hybrid	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Digital radio receiver	√	√	√	√		
2008	GMC truck	Yukon hybrid	Radio	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Yukon hybrid	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Memory seat module	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Rear heated seat module	√	√	√	√		
2008	GMC truck	Yukon hybrid	Park assist module	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Rear HVAC/RSA	√	√	√	√	√	



2008	GMC truck	Yukon hybrid	Personal audio link module	√	√	√			0528
2008	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Yukon hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Yukon hybrid	Liftgate module	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Driver door switch	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Passenger door switch	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Power steering control module		√	√	√		0536
2008	GMC truck	Yukon hybrid	Electronic suension control	√	√	√	√	√	0532
2008	GMC truck	Yukon hybrid	Trailer brake control module	√	√	√	√		
2008	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2008	GMC truck	Yukon XL	Transmission control module		√	√	√	√	
2008	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Yukon XL	Passenger presence system	√	√	√	√		0512
2008	GMC truck	Yukon XL	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Yukon XL	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Yukon XL	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Yukon XL	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Yukon XL	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Yukon XL	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Yukon XL	Digital radio receiver	√	√	√	√		
2008	GMC truck	Yukon XL	Radio	√	√	√	√	√	
2008	GMC truck	Yukon XL	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Yukon XL	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Yukon XL	Memory seat module	√	√	√	√	√	
2008	GMC truck	Yukon XL	Rear heated seat module	√	√	√	√		
2008	GMC truck	Yukon XL	Park assist module	√	√	√	√	√	
2008	GMC truck	Yukon XL	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Yukon XL	Personal audio link module	√	√	√			0528
2008	GMC truck	Yukon XL	Assist step controller	√	√	√	√	√	0531
2008	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Yukon XL	Liftgate module	√	√	√	√	√	
2008	GMC truck	Yukon XL	Driver door switch	√	√	√	√	√	
2008	GMC truck	Yukon XL	Passenger door switch	√	√	√	√	√	0512
2008	GMC truck	Yukon XL	Electronic suension control	√	√	√	√	√	0532
2008	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√		
2008	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Yukon XL	Transmission control module		√	√	√	√	
2008	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493

2008	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Yukon XL	Passenger presence system	√	√	√	√		0512
2008	GMC truck	Yukon XL	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Yukon XL	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Yukon XL	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Yukon XL	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Yukon XL	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Yukon XL	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Yukon XL	Digital radio receiver	√	√	√	√		
2008	GMC truck	Yukon XL	Radio	√	√	√	√	√	
2008	GMC truck	Yukon XL	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Yukon XL	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Yukon XL	Memory seat module	√	√	√	√	√	
2008	GMC truck	Yukon XL	Rear heated seat module	√	√	√	√		
2008	GMC truck	Yukon XL	Park assist module	√	√	√	√	√	
2008	GMC truck	Yukon XL	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Yukon XL	Personal audio link module	√	√	√			0528
2008	GMC truck	Yukon XL	Assist step controller	√	√	√	√	√	0531
2008	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Yukon XL	Liftgate module	√	√	√	√	√	
2008	GMC truck	Yukon XL	Driver door switch	√	√	√	√	√	
2008	GMC truck	Yukon XL	Passenger door switch	√	√	√	√	√	0512
2008	GMC truck	Yukon XL	Electronic suspension control	√	√	√	√	√	0532
2008	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√		
2008	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Others	Engine Control Module	√	√	√	√	√	0562
2008	GMC truck	Others	Transmission control module	√	√	√	√	√	0562
2008	GMC truck	Others	Rear drive system	√	√	√	√	√	0530
2008	GMC truck	Others	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Others	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Others	Body Control Module	√	√	√	√	√	
2008	GMC truck	Others	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Others	Headlamp Control Module	√	√	√	√	√	
2008	GMC truck	Others	Park assist module	√	√	√	√		
2008	GMC truck	Others	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Others	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Others	HVAC Control Module	√	√	√		√	
2008	GMC truck	Others	Radio	√	√	√	√	√	
2008	GMC truck	Others	Front delay interface module	√	√	√	√	√	0497

2008	GMC truck	Others	Electronic Brake Control Module	√	√	√	√	√	
2008	Pontiac	Montana SV6	Engine Control Module	√	√	√	√	√	0493
2008	Pontiac	Montana SV6	Transmission control module	√	√	√	√	√	0493
2008	Pontiac	Montana SV6	Remote control door lock receiver	√	√	√	√	√	0159
2008	Pontiac	Montana SV6	Passenger presence system		√	√			0512
2008	Pontiac	Montana SV6	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Pontiac	Montana SV6	Body Control Module	√	√	√	√	√	0499
2008	Pontiac	Montana SV6	Digital radio receiver	√	√	√	√		0516
2008	Pontiac	Montana SV6	Disc player and video delay	√	√	√			
2008	Pontiac	Montana SV6	Radio	√	√	√	√		0586 0587 0525
2008	Pontiac	Montana SV6	HVAC Control Module	√	√	√	√	√	
2008	Pontiac	Montana SV6	Left power sliding door module	√	√	√	√	√	
2008	Pontiac	Montana SV6	Right power sliding door module	√	√	√	√	√	
2008	Pontiac	Montana SV6	Vehicle comm. interface module	√	√	√	√	√	0565 0495 0585
2008	Pontiac	Montana SV6	Navigation radio	√	√	√	√	√	0525
2008	Pontiac	Montana SV6	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Pontiac	Montana SV6 Ext.	Engine Control Module	√	√	√	√	√	0493
2008	Pontiac	Montana SV6 Ext.	Transmission control module	√	√	√	√	√	0493
2008	Pontiac	Montana SV6 Ext.	Remote control door lock receiver	√	√	√	√	√	0159
2008	Pontiac	Montana SV6 Ext.	Passenger presence system		√	√			0512
2008	Pontiac	Montana SV6 Ext.	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Pontiac	Montana SV6 Ext.	Body Control Module	√	√	√	√	√	0499
2008	Pontiac	Montana SV6 Ext.	Digital radio receiver	√	√	√	√		0516
2008	Pontiac	Montana SV6 Ext.	Disc player and video delay	√	√	√			
2008	Pontiac	Montana SV6 Ext.	Radio	√	√	√	√		0586 0587 0525
2008	Pontiac	Montana SV6 Ext.	HVAC Control Module	√	√	√	√	√	
2008	Pontiac	Montana SV6 Ext.	Left power sliding door module	√	√	√	√	√	
2008	Pontiac	Montana SV6 Ext.	Right power sliding door module	√	√	√	√	√	
2008	Pontiac	Montana SV6 Ext.	Vehicle comm. interface module	√	√	√	√	√	0565 0495 0585
2008	Pontiac	Montana SV6 Ext.	Navigation radio	√	√	√	√	√	0525
2008	Pontiac	Montana SV6 Ext.	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Pontiac	Torrent	Transmission control module		√	√	√	√	
2008	Pontiac	Torrent	Engine Control Module	√	√	√	√	√	0493
2008	Pontiac	Torrent	Rear drive system	√	√	√	√	√	0530
2008	Pontiac	Torrent	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Pontiac	Torrent	Digital radio receiver	√	√	√	√		
2008	Pontiac	Torrent	Rollover sensor	√	√	√	√		0541
2008	Pontiac	Torrent	Body Control Module	√	√	√	√	√	0499 0497
2008	Pontiac	Torrent	Instrument panel cluster	√	√	√	√	√	
2008	Pontiac	Torrent	Passenger presence system	√	√	√	√		0537
2008	Pontiac	Torrent	Heated seat module	√	√	√	√		

2008	Pontiac	Torrent	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Pontiac	Torrent	Radio	√	√	√	√	√	
2008	Pontiac	Torrent	HVAC Control Module	√	√	√	√	√	0500
2008	Pontiac	Torrent	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Pontiac	Torrent	Theft Deterrent Module	√	√	√	√		
2008	Pontiac	Torrent	Power steering control module		√	√	√		
2008	Pontiac	Torrent	Electronic Brake Control Module	√	√	√	√	√	
2008	Saturn	OUTLOOK - AWD	Engine Control Module	√	√	√	√	√	0493
2008	Saturn	OUTLOOK - AWD	Transmission control module		√	√	√	√	
2008	Saturn	OUTLOOK - AWD	Passenger presence system	√	√	√	√		0537
2008	Saturn	OUTLOOK - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Saturn	OUTLOOK - AWD	Rollover sensor	√	√	√	√		0541
2008	Saturn	OUTLOOK - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Saturn	OUTLOOK - AWD	Theft Deterrent Module	√	√	√	√		
2008	Saturn	OUTLOOK - AWD	Memory seat module	√	√	√	√	√	
2008	Saturn	OUTLOOK - AWD	Park assist module	√	√	√	√	√	
2008	Saturn	OUTLOOK - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Saturn	OUTLOOK - AWD	Digital radio receiver	√	√	√	√		
2008	Saturn	OUTLOOK - AWD	Radio	√	√	√	√	√	
2008	Saturn	OUTLOOK - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Saturn	OUTLOOK - AWD	Body Control Module						0499 0497
2008	Saturn	OUTLOOK - AWD	Rear HVAC/RSA	√	√	√	√	√	
2008	Saturn	OUTLOOK - AWD	Personal audio link module	√	√	√			0528 0529
2008	Saturn	OUTLOOK - AWD	Driver door switch	√	√	√	√	√	0527
2008	Saturn	OUTLOOK - AWD	Passenger door switch	√	√	√	√	√	0527
2008	Saturn	OUTLOOK - AWD	Instrument panel cluster	√	√	√	√	√	
2008	Saturn	OUTLOOK - AWD	Liftgate module	√	√	√	√	√	0537
2008	Saturn	OUTLOOK - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Saturn	OUTLOOK - AWD	Rear drive system	√	√	√	√	√	0530
2008	Saturn	OUTLOOK - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	Saturn	OUTLOOK - 2WD	Transmission control module		√	√	√	√	
2008	Saturn	OUTLOOK - 2WD	Passenger presence system	√	√	√	√		0537
2008	Saturn	OUTLOOK - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Saturn	OUTLOOK - 2WD	Rollover sensor	√	√	√	√		0541
2008	Saturn	OUTLOOK - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Saturn	OUTLOOK - 2WD	Theft Deterrent Module	√	√	√	√		
2008	Saturn	OUTLOOK - 2WD	Memory seat module	√	√	√	√	√	
2008	Saturn	OUTLOOK - 2WD	Park assist module	√	√	√	√	√	
2008	Saturn	OUTLOOK - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Saturn	OUTLOOK - 2WD	Digital radio receiver	√	√	√	√		
2008	Saturn	OUTLOOK - 2WD	Radio	√	√	√	√	√	

2008	Saturn	OUTLOOK - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Saturn	OUTLOOK - 2WD	Body Control Module						0499 0497
2008	Saturn	OUTLOOK - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2008	Saturn	OUTLOOK - 2WD	Personal audio link module	√	√	√			0528 0529
2008	Saturn	OUTLOOK - 2WD	Driver door switch	√	√	√	√	√	0527
2008	Saturn	OUTLOOK - 2WD	Passenger door switch	√	√	√	√	√	0527
2008	Saturn	OUTLOOK - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	Saturn	OUTLOOK - 2WD	Liftgate module	√	√	√	√	√	0537
2008	Saturn	OUTLOOK - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Saturn	OUTLOOK - 2WD	Rear drive system	√	√	√	√	√	0530
2008	Saturn	VUE	Transmission control module		√	√	√	√	
2008	Saturn	VUE	Fuel Pump Control Module	√	√	√	√	√	
2008	Saturn	VUE	Engine Control Module	√	√	√	√	√	0493
2008	Saturn	VUE	Rear drive system	√	√	√	√	√	0530
2008	Saturn	VUE	Instrument panel cluster	√	√	√	√	√	
2008	Saturn	VUE	Digital radio receiver	√	√	√	√		
2008	Saturn	VUE	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Saturn	VUE	Theft Deterrent Module	√	√	√	√		
2008	Saturn	VUE	Radio	√	√	√	√	√	
2008	Saturn	VUE	Rollover sensor	√	√	√	√		0541
2008	Saturn	VUE	Passenger presence system	√	√	√	√		0537
2008	Saturn	VUE	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Saturn	VUE	Body Control Module	√	√	√	√	√	0497
2008	Saturn	VUE	HVAC Control Module	√	√	√	√	√	0500
2008	Saturn	VUE	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Saturn	VUE	Power steering control module		√	√	√		
2008	Saturn	VUE	Electronic Brake Control Module	√	√	√	√	√	
2008	Saturn	VUE	Engine Control Module	√	√	√	√	√	0566 0567 0493
2008	Saturn	VUE	Battery Energy Control Module				√	√	
2008	Saturn	VUE	Starter/Generator Control Modul				√	√	
2008	Saturn	VUE	Transmission control module		√	√	√	√	
2008	Saturn	VUE	Fuel Pump Control Module	√	√	√	√	√	
2008	Saturn	VUE	Digital radio receiver	√	√	√	√		
2008	Saturn	VUE	Theft Deterrent Module	√	√	√	√		
2008	Saturn	VUE	Radio	√	√	√	√	√	
2008	Saturn	VUE	Rollover sensor	√	√	√	√		0541
2008	Saturn	VUE	Passenger presence system	√	√	√	√		0537
2008	Saturn	VUE	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Saturn	VUE	Body Control Module	√	√	√	√	√	0497
2008	Saturn	VUE	HVAC Control Module	√	√	√	√	√	0500
2008	Saturn	VUE	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495

2008	Saturn	VUE	Instrument panel cluster	√	√	√	√	√	
2008	Saturn	VUE	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Saturn	VUE	Power steering control module		√	√	√		
2008	Saturn	VUE	Electronic Brake Control Module	√	√	√	√	√	
2008	Saturn	VUE hybrid	Transmission control module		√	√	√	√	
2008	Saturn	VUE hybrid	Fuel Pump Control Module	√	√	√	√	√	
2008	Saturn	VUE hybrid	Engine Control Module	√	√	√	√	√	0493
2008	Saturn	VUE hybrid	Rear drive system	√	√	√	√	√	0530
2008	Saturn	VUE hybrid	Instrument panel cluster	√	√	√	√	√	
2008	Saturn	VUE hybrid	Digital radio receiver	√	√	√	√		
2008	Saturn	VUE hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Saturn	VUE hybrid	Theft Deterrent Module	√	√	√	√		
2008	Saturn	VUE hybrid	Radio	√	√	√	√	√	
2008	Saturn	VUE hybrid	Rollover sensor	√	√	√	√		0541
2008	Saturn	VUE hybrid	Passenger presence system	√	√	√	√		0537
2008	Saturn	VUE hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Saturn	VUE hybrid	Body Control Module	√	√	√	√	√	0497
2008	Saturn	VUE hybrid	HVAC Control Module	√	√	√	√	√	0500
2008	Saturn	VUE hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Saturn	VUE hybrid	Power steering control module		√	√	√		
2008	Saturn	VUE hybrid	Electronic Brake Control Module	√	√	√	√	√	
2008	Saturn	VUE hybrid	Engine Control Module	√	√	√	√	√	0566 0567 0493
2008	Saturn	VUE hybrid	Battery Energy Control Module				√	√	
2008	Saturn	VUE hybrid	Starter/Generator Control Modul				√	√	
2008	Saturn	VUE hybrid	Transmission control module		√	√	√	√	
2008	Saturn	VUE hybrid	Fuel Pump Control Module	√	√	√	√	√	
2008	Saturn	VUE hybrid	Digital radio receiver	√	√	√	√		
2008	Saturn	VUE hybrid	Theft Deterrent Module	√	√	√	√		
2008	Saturn	VUE hybrid	Radio	√	√	√	√	√	
2008	Saturn	VUE hybrid	Rollover sensor	√	√	√	√		0541
2008	Saturn	VUE hybrid	Passenger presence system	√	√	√	√		0537
2008	Saturn	VUE hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Saturn	VUE hybrid	Body Control Module	√	√	√	√	√	0497
2008	Saturn	VUE hybrid	HVAC Control Module	√	√	√	√	√	0500
2008	Saturn	VUE hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Saturn	VUE hybrid	Instrument panel cluster	√	√	√	√	√	
2008	Saturn	VUE hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Saturn	VUE hybrid	Power steering control module		√	√	√		
2008	Saturn	VUE hybrid	Electronic Brake Control Module	√	√	√	√	√	
2008	Hummer	H2	Transmission control module		√	√	√	√	
2008	Hummer	H2	Transfer Case Control Module	√	√	√	√	√	

2008	Hummer	H2	Engine Control Module	√	√	√	√	√	0493
2008	Hummer	H2	Fuel Pump Control Module	√	√	√	√	√	
2008	Hummer	H2	Rollover sensor	√	√	√	√		0541
2008	Hummer	H2	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Hummer	H2	Theft Deterrent Module	√	√	√	√		
2008	Hummer	H2	Amplifier (bose)	√	√	√	√	√	
2008	Hummer	H2	Digital radio receiver	√	√	√	√		
2008	Hummer	H2	Radio	√	√	√	√	√	
2008	Hummer	H2	Instrument panel cluster	√	√	√	√	√	
2008	Hummer	H2	Vehicle comm. interface module	√	√	√	√	√	0494 0565 0495 0585
2008	Hummer	H2	Memory seat module	√	√	√	√	√	
2008	Hummer	H2	Rear heated seat module	√	√	√	√		
2008	Hummer	H2	Rear HVAC/RSA	√	√	√	√	√	
2008	Hummer	H2	Personal audio link module	√	√	√			0528
2008	Hummer	H2	HVAC Control Module	√	√	√	√	√	0500 0526
2008	Hummer	H2	Body Control Module	√	√	√	√	√	0497
2008	Hummer	H2	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Hummer	H2	Driver door switch	√	√	√	√	√	
2008	Hummer	H2	Passenger door switch	√	√	√	√	√	
2008	Hummer	H2	Electronic Brake Control Module	√	√	√	√	√	0506
2008	Hummer	H2	Air suspension control module	√	√	√	√	√	
2008	Hummer	H3	Transmission control module		√	√	√	√	
2008	Hummer	H3	Transfer Case Control Module	√	√	√	√	√	
2008	Hummer	H3	Engine Control Module	√	√	√	√	√	0493
2008	Hummer	H3	Passenger presence system		√	√			0512
2008	Hummer	H3	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	Hummer	H3	Theft Deterrent Module	√	√	√	√		0170
2008	Hummer	H3	Body Control Module	√	√	√	√	√	0550 0159
2008	Hummer	H3	Digital radio receiver	√	√	√	√		0516
2008	Hummer	H3	Radio	√	√	√	√	√	0572 0524
2008	Hummer	H3	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	Hummer	H3	Instrument panel cluster	√	√	√	√	√	
2008	Hummer	H3	Generator battery control module	√	√	√	√	√	
2008	Hummer	H3	Personal audio link module	√	√	√	√	√	0528
2008	Hummer	H3	Navigation radio	√	√	√	√	√	0525
2008	Hummer	H3	Electronic Brake Control Module	√	√	√	√	√	0493
2008	SAAB	Saab 9-7x	Transmission control module		√	√	√	√	
2008	SAAB	Saab 9-7x	Engine Control Module	√	√	√	√	√	0493
2008	SAAB	Saab 9-7x	Transfer Case Control Module	√	√	√	√	√	0493
2008	SAAB	Saab 9-7x	Passenger presence system		√	√			0512
2008	SAAB	Saab 9-7x	Supplemental inflatable restraint	√	√	√	√	√	

2008	SAAB	Saab 9-7x	Theft Deterrent Module	√	√	√	√		
2008	SAAB	Saab 9-7x	Digital radio receiver	√	√	√	√		0516
2008	SAAB	Saab 9-7x	Disc player and video delay	√	√	√			
2008	SAAB	Saab 9-7x	Radio	√	√	√	√	√	0572 0524
2008	SAAB	Saab 9-7x	Rear seat audio	√	√	√	√		
2008	SAAB	Saab 9-7x	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	SAAB	Saab 9-7x	Generator battery control module	√	√	√	√	√	
2008	SAAB	Saab 9-7x	Instrument panel cluster	√	√	√	√	√	
2008	SAAB	Saab 9-7x	Body Control Module	√	√	√	√	√	0550
2008	SAAB	Saab 9-7x	Driver door module	√	√	√	√	√	
2008	SAAB	Saab 9-7x	Passenger door module	√	√	√	√	√	
2008	SAAB	Saab 9-7x	Liftgate module	√	√	√	√	√	0159
2008	SAAB	Saab 9-7x	Driver seat module	√	√	√	√	√	
2008	SAAB	Saab 9-7x	HVAC Control Module	√	√	√	√	√	0512
2008	SAAB	Saab 9-7x	Navigation radio	√	√	√	√	√	0525
2008	SAAB	Saab 9-7x	Electronic Brake Control Module	√	√	√	√	√	
2008	Holden	Captiva	Engine Control Module	√	√	√	√	√	
2008	Holden	Captiva	Transmission control module	√	√	√	√	√	
2008	Holden	Captiva	Rear drive system	√	√	√	√	√	0530
2008	Holden	Captiva	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Holden	Captiva	Theft Deterrent Module	√	√	√	√		
2008	Holden	Captiva	HVAC Control Module	√	√	√		√	
2008	Holden	Captiva	Body Control Module	√	√	√	√	√	0497
2008	Holden	Captiva	Body Control Module	√	√	√	√	√	
2008	Holden	Captiva	Instrument panel cluster	√	√	√	√	√	
2008	Holden	Captiva	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Holden	Captiva	Electronic Brake Control Module	√	√	√	√	√	
2008	Holden	Captiva Maxx	Engine Control Module	√	√	√	√	√	
2008	Holden	Captiva Maxx	Transmission control module	√	√	√	√	√	
2008	Holden	Captiva Maxx	Rear drive system	√	√	√	√	√	0530
2008	Holden	Captiva Maxx	Instrument panel cluster	√	√	√	√	√	
2008	Holden	Captiva Maxx	Body Control Module	√	√	√	√	√	0497
2008	Holden	Captiva Maxx	Body Control Module	√	√	√	√	√	
2008	Holden	Captiva Maxx	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	Holden	Captiva Maxx	Headlamp Control Module	√	√	√	√	√	
2008	Holden	Captiva Maxx	Park assist module	√	√	√	√		
2008	Holden	Captiva Maxx	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	Holden	Captiva Maxx	Theft Deterrent Module	√	√	√	√		
2008	Holden	Captiva Maxx	HVAC Control Module	√	√	√		√	
2008	Holden	Captiva Maxx	Radio	√	√	√	√	√	
2008	Holden	Captiva Maxx	Front delay interface module	√	√	√	√	√	0497



2008	Holden	Captiva Maxx	Electronic Brake Control Module	√	√	√	√	√	
2007	Buick	LaCrosse	Powertrain control module	√	√	√	√	√	
2007	Buick	LaCrosse	Transmission control module		√	√	√	√	
2007	Buick	LaCrosse	Engine Control Module	√	√	√	√	√	
2007	Buick	LaCrosse	Remote control door lock receiver	√	√	√	√	√	0159
2007	Buick	LaCrosse	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Buick	LaCrosse	Digital radio receiver	√	√	√	√		0516
2007	Buick	LaCrosse	Body Control Module	√	√	√	√	√	0499
2007	Buick	LaCrosse	Instrument panel cluster	√	√	√	√	√	
2007	Buick	LaCrosse	HVAC Control Module	√	√	√	√	√	0500
2007	Buick	LaCrosse	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0552
2007	Buick	LaCrosse	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Buick	LaCrosse	Electronic Brake Control Module				√		0506
2007	Buick	LaCrosse (Allure in Canada)	Powertrain control module	√	√	√	√	√	
2007	Buick	LaCrosse (Allure in Canada)	Transmission control module		√	√	√	√	
2007	Buick	LaCrosse (Allure in Canada)	Engine Control Module	√	√	√	√	√	
2007	Buick	LaCrosse (Allure in Canada)	Remote control door lock receiver	√	√	√	√	√	0159
2007	Buick	LaCrosse (Allure in Canada)	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Buick	LaCrosse (Allure in Canada)	Digital radio receiver	√	√	√	√		0516
2007	Buick	LaCrosse (Allure in Canada)	Body Control Module	√	√	√	√	√	0499
2007	Buick	LaCrosse (Allure in Canada)	Instrument panel cluster	√	√	√	√	√	
2007	Buick	LaCrosse (Allure in Canada)	HVAC Control Module	√	√	√	√	√	0500
2007	Buick	LaCrosse (Allure in Canada)	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0552
2007	Buick	LaCrosse (Allure in Canada)	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Buick	LaCrosse (Allure in Canada)	Electronic Brake Control Module				√		0506
2007	Buick	Lucerne	Powertrain control module	√	√	√	√	√	0493
2007	Buick	Lucerne	Transmission control module		√	√	√	√	
2007	Buick	Lucerne	Engine Control Module	√	√	√	√	√	0493
2007	Buick	Lucerne	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Buick	Lucerne	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Buick	Lucerne	Theft Deterrent Module	√	√	√	√		
2007	Buick	Lucerne	Passenger presence system	√	√	√	√		0512
2007	Buick	Lucerne	Digital radio receiver	√	√	√	√		
2007	Buick	Lucerne	Radio	√	√	√	√	√	
2007	Buick	Lucerne	Body Control Module	√	√	√	√	√	0499 0497
2007	Buick	Lucerne	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Buick	Lucerne	HVAC Control Module	√	√	√	√	√	
2007	Buick	Lucerne	Driver door switch	√	√	√	√	√	
2007	Buick	Lucerne	Passenger door switch	√	√	√	√	√	
2007	Buick	Lucerne	Instrument panel cluster	√	√	√	√	√	

2007	Buick	Lucerne	Memory seat module	√	√	√	√	√	
2007	Buick	Lucerne	Park assist module	√	√	√	√	√	0513 0159
2007	Buick	Lucerne	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Buick	Lucerne	Electronic suension control	√	√	√	√	√	
2007	Cadillac	DTS	Transmission control module		√	√	√	√	
2007	Cadillac	DTS	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	DTS	Passenger presence system	√	√	√	√		0512
2007	Cadillac	DTS	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Cadillac	DTS	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Cadillac	DTS	Theft Deterrent Module	√	√	√	√		
2007	Cadillac	DTS	Digital radio receiver	√	√	√	√		
2007	Cadillac	DTS	Amplifier (bose)	√	√	√	√	√	0603
2007	Cadillac	DTS	Radio	√	√	√	√	√	
2007	Cadillac	DTS	TV antenna module	√	√	√	√		0504 0505
2007	Cadillac	DTS	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	DTS	HVAC Control Module	√	√	√	√	√	
2007	Cadillac	DTS	Body Control Module	√	√	√	√	√	0499 0497
2007	Cadillac	DTS	Driver door switch	√	√	√	√	√	
2007	Cadillac	DTS	Passenger door switch	√	√	√	√	√	
2007	Cadillac	DTS	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	DTS	Driver position module	√	√	√	√	√	
2007	Cadillac	DTS	Park assist module	√	√	√	√	√	
2007	Cadillac	DTS	Rear heated seat module	√	√	√	√		
2007	Cadillac	DTS	Inside rear view mirror module	√	√	√			
2007	Cadillac	DTS	Distance sensing cruise control	√	√	√	√	√	0512
2007	Cadillac	DTS	Aux. HVAC control module	√	√	√	√	√	0499 0497
2007	Cadillac	DTS	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Cadillac	DTS	Electronic suension control	√	√	√	√	√	
2007	Cadillac	CTS	Transmission control module	√	√	√	√	√	
2007	Cadillac	CTS	Engine Control Module	√	√	√	√	√	
2007	Cadillac	CTS	Passenger presence system		√	√			
2007	Cadillac	CTS	Dash integration module	√	√	√	√	√	0604 0605
2007	Cadillac	CTS	Theft Deterrent Module	√	√	√	√		
2007	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2007	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2007	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2007	Cadillac	CTS	Radio	√	√	√	√		0524
2007	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2007	Cadillac	CTS	Climate control panel	√	√	√	√	√	

2007	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2007	Cadillac	CTS	Driver door switch	√	√	√	√		0609 0609 0609 0609
2007	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2007	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2007	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2007	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	CTS	Memory seat module	√	√	√	√	√	0610 0611 0612 0613
2007	Cadillac	CTS	Remote control door lock receiver	√	√	√	√	√	0629
2007	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2007	Cadillac	CTS	Transmission control module	√	√	√	√	√	
2007	Cadillac	CTS	Engine Control Module	√	√	√	√	√	
2007	Cadillac	CTS	Passenger presence system		√	√			
2007	Cadillac	CTS	Dash integration module	√	√	√	√	√	0604 0605
2007	Cadillac	CTS	Theft Deterrent Module	√	√	√	√		
2007	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2007	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2007	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2007	Cadillac	CTS	Radio	√	√	√	√		0524
2007	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2007	Cadillac	CTS	Climate control panel	√	√	√	√	√	
2007	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2007	Cadillac	CTS	Driver door switch	√	√	√	√		
2007	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2007	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2007	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2007	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	CTS	Memory seat module	√	√	√	√	√	0610 0611 0612 0613
2007	Cadillac	CTS	Remote control door lock receiver	√	√	√	√	√	0629
2007	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2007	Cadillac	CTS	Transmission control module	√	√	√	√	√	
2007	Cadillac	CTS	Engine Control Module	√	√	√	√	√	
2007	Cadillac	CTS	Passenger presence system		√	√			
2007	Cadillac	CTS	Dash integration module	√	√	√	√	√	0604 0605
2007	Cadillac	CTS	Theft Deterrent Module	√	√	√	√		
2007	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2007	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2007	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	

2007	Cadillac	CTS	Radio	√	√	√	√		0524
2007	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2007	Cadillac	CTS	Climate control panel	√	√	√	√	√	
2007	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2007	Cadillac	CTS	Driver door switch	√	√	√	√		
2007	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2007	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2007	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2007	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	CTS	Memory seat module	√	√	√	√	√	0610 0611 0612 0613
2007	Cadillac	CTS	Remote control door lock receiver	√	√	√	√	√	0629
2007	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2007	Cadillac	CTS	Passenger presence system		√	√			
2007	Cadillac	CTS	Dash integration module	√	√	√	√	√	0604 0605
2007	Cadillac	CTS	Theft Deterrent Module	√	√	√	√		
2007	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2007	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2007	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2007	Cadillac	CTS	Radio	√	√	√	√		0524
2007	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2007	Cadillac	CTS	Climate control panel	√	√	√	√	√	
2007	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2007	Cadillac	CTS	Driver door switch	√	√	√	√		
2007	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2007	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2007	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2007	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	CTS	Memory seat module	√	√	√	√	√	0610 0611 0612 0613
2007	Cadillac	CTS	Remote control door lock receiver	√	√	√	√	√	0629
2007	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2007	Cadillac	CTS	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	STS	Transmission control module		√	√	√	√	
2007	Cadillac	STS	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	STS	Passenger presence system		√	√			
2007	Cadillac	STS	Remote control door lock receiver	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2007	Cadillac	STS	Supplemental inflatable restraint	√	√	√	√	√	0559
2007	Cadillac	STS	Digital radio receiver	√	√	√	√		0516

2007	Cadillac	STS	Headlamp Control Module	√	√	√	√	√	
2007	Cadillac	STS	Instrument panel module	√	√	√	√	√	0630 0551
2007	Cadillac	STS	Radio	√	√	√	√		0552 0525
2007	Cadillac	STS	TV antenna module	√	√	√	√		
2007	Cadillac	STS	Amplifier (bose)		√	√	√	√	
2007	Cadillac	STS	Driver door module	√	√	√	√	√	0560
2007	Cadillac	STS	Driver door switch	√	√	√	√		
2007	Cadillac	STS	Passenger door module	√	√	√	√	√	0560
2007	Cadillac	STS	Left rear door module	√	√	√	√	√	0560
2007	Cadillac	STS	Right rear door module	√	√	√	√	√	0560
2007	Cadillac	STS	HVAC Control Module	√	√	√	√	√	
2007	Cadillac	STS	Rear integration module	√	√	√	√	√	
2007	Cadillac	STS	Instrument panel cluster	√	√	√	√	√	0560
2007	Cadillac	STS	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	STS	Driver position module	√	√	√	√	√	
2007	Cadillac	STS	Steering column lock module	√	√	√	√	√	
2007	Cadillac	STS	Distance sensing cruise control	√	√	√	√	√	
2007	Cadillac	STS	Head up dilay	√	√	√	√	√	
2007	Cadillac	STS	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Cadillac	STS	Electronic suension control	√	√	√	√	√	
2007	Cadillac	STS	Transmission control module	√	√	√	√	√	
2007	Cadillac	STS	Engine Control Module	√	√	√	√	√	
2007	Cadillac	STS	Passenger presence system		√	√			
2007	Cadillac	STS	Remote control door lock receiver	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2007	Cadillac	STS	Supplemental inflatable restraint	√	√	√	√	√	0559
2007	Cadillac	STS	Digital radio receiver	√	√	√	√		0516
2007	Cadillac	STS	Headlamp Control Module	√	√	√	√	√	
2007	Cadillac	STS	Instrument panel module	√	√	√	√	√	0630 0551
2007	Cadillac	STS	Radio	√	√	√	√		0552 0525
2007	Cadillac	STS	TV antenna module	√	√	√	√		
2007	Cadillac	STS	Amplifier (bose)		√	√	√	√	
2007	Cadillac	STS	Driver door module	√	√	√	√	√	0560
2007	Cadillac	STS	Driver door switch	√	√	√	√		
2007	Cadillac	STS	Passenger door module	√	√	√	√	√	0560
2007	Cadillac	STS	Left rear door module	√	√	√	√	√	0560
2007	Cadillac	STS	Right rear door module	√	√	√	√	√	0560
2007	Cadillac	STS	HVAC Control Module	√	√	√	√	√	
2007	Cadillac	STS	Rear integration module	√	√	√	√	√	
2007	Cadillac	STS	Instrument panel cluster	√	√	√	√	√	0560

2007	Cadillac	STS	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	STS	Driver position module	√	√	√	√	√	
2007	Cadillac	STS	Steering column lock module	√	√	√	√	√	
2007	Cadillac	STS	Distance sensing cruise control	√	√	√	√	√	
2007	Cadillac	STS	Head up dilay	√	√	√	√	√	
2007	Cadillac	STS	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Cadillac	STS	Electronic suension control	√	√	√	√	√	
2007	Cadillac	STS	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	STS	Transmission control module		√	√	√	√	
2007	Cadillac	STS	Passenger presence system		√	√			
2007	Cadillac	STS	Supplemental inflatable restraint	√	√	√	√	√	0559
2007	Cadillac	STS	Remote control door lock receiver	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2007	Cadillac	STS	Digital radio receiver	√	√	√	√		0516
2007	Cadillac	STS	Headlamp Control Module	√	√	√	√	√	
2007	Cadillac	STS	Instrument panel module	√	√	√	√	√	0630 0551
2007	Cadillac	STS	Radio	√	√	√	√		0552 0525
2007	Cadillac	STS	TV antenna module	√	√	√	√		
2007	Cadillac	STS	Amplifier (bose)		√	√	√	√	
2007	Cadillac	STS	HVAC Control Module	√	√	√	√	√	
2007	Cadillac	STS	Driver door module	√	√	√	√	√	0560
2007	Cadillac	STS	Driver door switch	√	√	√	√		
2007	Cadillac	STS	Passenger door module	√	√	√	√	√	0560
2007	Cadillac	STS	Left rear door module	√	√	√	√	√	0560
2007	Cadillac	STS	Right rear door module	√	√	√	√	√	0560
2007	Cadillac	STS	Rear integration module	√	√	√	√	√	
2007	Cadillac	STS	Instrument panel cluster	√	√	√	√	√	0560
2007	Cadillac	STS	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	STS	Driver position module	√	√	√	√	√	
2007	Cadillac	STS	Steering column lock module	√	√	√	√	√	
2007	Cadillac	STS	Distance sensing cruise control	√	√	√	√	√	
2007	Cadillac	STS	Head up dilay	√	√	√	√	√	
2007	Cadillac	STS	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Cadillac	STS	Electronic suension control	√	√	√	√	√	
2007	Cadillac	XLR	Transmission control module		√	√	√	√	
2007	Cadillac	XLR	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	XLR	Exhaust flow control module	√	√	√	√	√	
2007	Cadillac	XLR	Passenger presence system		√	√			0512
2007	Cadillac	XLR	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Cadillac	XLR	Remote control door lock receiver	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519

2007	Cadillac	XLR	Digital radio receiver	√	√	√	√		0516
2007	Cadillac	XLR	Headlamp Control Module	√	√	√	√	√	
2007	Cadillac	XLR	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	XLR	HVAC Control Module	√	√	√	√	√	0500
2007	Cadillac	XLR	Driver door module	√	√	√	√	√	
2007	Cadillac	XLR	Driver door switch	√	√	√	√		
2007	Cadillac	XLR	Passenger door module	√	√	√	√	√	
2007	Cadillac	XLR	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	XLR	Driver position module	√	√	√	√	√	0522
2007	Cadillac	XLR	Folding top module	√	√	√	√	√	
2007	Cadillac	XLR	CD changer	√	√	√			
2007	Cadillac	XLR	Navigation radio	√	√	√	√		0525
2007	Cadillac	XLR	Body Control Module	√	√	√	√	√	0551 0515
2007	Cadillac	XLR	Head up dilay	√	√	√	√	√	
2007	Cadillac	XLR	Distance sensing cruise control	√	√	√	√	√	
2007	Cadillac	XLR	Steering column lock module	√	√	√	√	√	
2007	Cadillac	XLR	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	XLR	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Cadillac	XLR	Electronic suension control	√	√	√	√	√	
2007	Cadillac	XLR	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	XLR	Transmission control module		√	√	√	√	
2007	Cadillac	XLR	Exhaust flow control module	√	√	√	√	√	
2007	Cadillac	XLR	Passenger presence system		√	√			0512
2007	Cadillac	XLR	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Cadillac	XLR	Remote control door lock receiver	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2007	Cadillac	XLR	Digital radio receiver	√	√	√	√		0516
2007	Cadillac	XLR	Headlamp Control Module	√	√	√	√	√	
2007	Cadillac	XLR	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	XLR	HVAC Control Module	√	√	√	√	√	0500
2007	Cadillac	XLR	Driver door module	√	√	√	√	√	
2007	Cadillac	XLR	Driver door switch	√	√	√	√		
2007	Cadillac	XLR	Passenger door module	√	√	√	√	√	
2007	Cadillac	XLR	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	XLR	Driver position module	√	√	√	√	√	0522
2007	Cadillac	XLR	Folding top module	√	√	√	√	√	
2007	Cadillac	XLR	CD changer	√	√	√			
2007	Cadillac	XLR	Navigation radio	√	√	√	√		0525
2007	Cadillac	XLR	Body Control Module	√	√	√	√	√	0551 0515
2007	Cadillac	XLR	Head up dilay	√	√	√	√	√	
2007	Cadillac	XLR	Distance sensing cruise control	√	√	√	√	√	

2007	Cadillac	XLR	Steering column lock module	√	√	√	√	√	
2007	Cadillac	XLR	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	XLR	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Cadillac	XLR	Electronic suension control	√	√	√	√	√	
2007	Chevrolet	Aveo	Engine Control Module	√	√	√	√	√	0507
2007	Chevrolet	Aveo	Transmission control module	√	√	√	√	√	0493
2007	Chevrolet	Aveo	Supplemental inflatable restraint	√	√	√	√	√	
2007	Chevrolet	Aveo	Immobilizer	√	√	√	√	√	0508
2007	Chevrolet	Aveo	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Aveo HB	Engine Control Module	√	√	√	√	√	0507
2007	Chevrolet	Aveo HB	Transmission control module	√	√	√	√	√	0493
2007	Chevrolet	Aveo HB	Supplemental inflatable restraint	√	√	√	√	√	
2007	Chevrolet	Aveo HB	Immobilizer	√	√	√	√	√	0508
2007	Chevrolet	Aveo HB	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Chevrolet	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Chevrolet	Transmission control module	√	√	√	√	√	0493
2007	Chevrolet	Chevrolet	Immobilizer	√	√	√	√		0544 0545
2007	Chevrolet	Cobalt	Transmission control module		√	√	√	√	
2007	Chevrolet	Cobalt	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Cobalt	Powertrain control module		√	√	√	√	
2007	Chevrolet	Cobalt	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Cobalt	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Chevrolet	Cobalt	Passenger presence system		√	√			
2007	Chevrolet	Cobalt	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Cobalt	Radio	√	√	√	√	√	
2007	Chevrolet	Cobalt	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Cobalt	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Cobalt	Body Control Module	√	√	√	√	√	0515
2007	Chevrolet	Cobalt	Personal audio link module	√	√	√			0528
2007	Chevrolet	Cobalt	Remote control door lock receiver	√	√	√	√	√	
2007	Chevrolet	Cobalt	Electronic Brake Control Module	√	√	√	√	√	
2007	Chevrolet	Cobalt	Power steering control module		√	√	√		
2007	Chevrolet	Corvette	Transmission control module		√	√	√	√	
2007	Chevrolet	Corvette	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Corvette	Exhaust flow control module	√	√	√	√	√	0493
2007	Chevrolet	Corvette	Passenger presence system		√	√			0512
2007	Chevrolet	Corvette	Remote control door lock receiver	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2007	Chevrolet	Corvette	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Chevrolet	Corvette	Digital radio receiver	√	√	√	√		0516
2007	Chevrolet	Corvette	HVAC Control Module	√	√	√	√	√	0500 0523



2007	Chevrolet	Corvette	Driver door module	√	√	√	√	√	
2007	Chevrolet	Corvette	Driver door switch	√	√	√	√		
2007	Chevrolet	Corvette	Passenger door module	√	√	√	√	√	
2007	Chevrolet	Corvette	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Corvette	Body Control Module	√	√	√	√	√	0515
2007	Chevrolet	Corvette	CD changer	√	√	√	√		
2007	Chevrolet	Corvette	Radio	√	√	√	√	√	0524
2007	Chevrolet	Corvette	Driver position module	√	√	√	√	√	0522
2007	Chevrolet	Corvette	Folding top module	√	√	√	√	√	
2007	Chevrolet	Corvette	Head up display	√	√	√	√	√	
2007	Chevrolet	Corvette	Steering column lock module	√	√	√	√	√	
2007	Chevrolet	Corvette	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Corvette	Navigation radio	√	√	√	√	√	0525
2007	Chevrolet	Corvette	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Corvette	Electronic suspension control	√	√	√	√	√	
2007	Chevrolet	Impala	Transmission control module	√	√	√	√	√	
2007	Chevrolet	Impala	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Impala	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Impala	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Impala	Passenger presence system	√	√	√	√		0512
2007	Chevrolet	Impala	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Impala	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Impala	Radio	√	√	√	√	√	
2007	Chevrolet	Impala	Body Control Module	√	√	√	√	√	0499 0497
2007	Chevrolet	Impala	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Impala	Heated seat module	√	√	√	√		
2007	Chevrolet	Impala	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Impala	HVAC Control Module	√	√	√	√	√	0500
2007	Chevrolet	Impala	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Impala	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Impala	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Impala	Passenger presence system	√	√	√	√		0512
2007	Chevrolet	Impala	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Impala	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Impala	Radio	√	√	√	√	√	
2007	Chevrolet	Impala	Body Control Module	√	√	√	√	√	0499 0497
2007	Chevrolet	Impala	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Impala	Heated seat module	√	√	√	√		
2007	Chevrolet	Impala	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Impala	HVAC Control Module	√	√	√	√	√	0500
2007	Chevrolet	Impala	Electronic Brake Control Module	√	√	√	√	√	0506

2007	Chevrolet	Impala	Transmission control module		√	√	√	√	
2007	Chevrolet	Impala	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Impala	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Impala	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Impala	Passenger presence system	√	√	√	√		0512
2007	Chevrolet	Impala	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Impala	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Impala	Radio	√	√	√	√	√	
2007	Chevrolet	Impala	Body Control Module	√	√	√	√	√	0499 0497
2007	Chevrolet	Impala	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Impala	Heated seat module	√	√	√	√		
2007	Chevrolet	Impala	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Impala	HVAC Control Module	√	√	√	√	√	0500
2007	Chevrolet	Impala	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Impala	Transmission control module		√	√	√	√	
2007	Chevrolet	Impala	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Impala	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Impala	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Impala	Passenger presence system	√	√	√	√		0512
2007	Chevrolet	Impala	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Impala	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Impala	Radio	√	√	√	√	√	
2007	Chevrolet	Impala	Body Control Module	√	√	√	√	√	0499 0497
2007	Chevrolet	Impala	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Impala	Heated seat module	√	√	√	√		
2007	Chevrolet	Impala	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Impala	HVAC Control Module	√	√	√	√	√	0500
2007	Chevrolet	Impala	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Impala	Transmission control module		√	√	√	√	
2007	Chevrolet	Impala	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Impala	Transmission control module		√	√	√	√	
2007	Chevrolet	Impala	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Impala	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Impala	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Impala	Passenger presence system	√	√	√	√		0512
2007	Chevrolet	Impala	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Impala	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Impala	Radio	√	√	√	√	√	
2007	Chevrolet	Impala	Body Control Module	√	√	√	√	√	0499 0497
2007	Chevrolet	Impala	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Impala	Heated seat module	√	√	√	√		

2007	Chevrolet	Impala	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Impala	HVAC Control Module	√	√	√	√	√	0500
2007	Chevrolet	Impala	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Impala	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Impala	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Impala	Passenger presence system	√	√	√	√		0512
2007	Chevrolet	Impala	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Impala	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Impala	Radio	√	√	√	√	√	
2007	Chevrolet	Impala	Body Control Module	√	√	√	√	√	0499 0497
2007	Chevrolet	Impala	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Impala	Heated seat module	√	√	√	√		
2007	Chevrolet	Impala	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Impala	HVAC Control Module	√	√	√	√	√	0500
2007	Chevrolet	Impala	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Impala	Transmission control module		√	√	√	√	
2007	Chevrolet	Impala	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Malibu	Transmission control module		√	√	√	√	
2007	Chevrolet	Malibu	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Malibu	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Chevrolet	Malibu	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Malibu	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Malibu	Disc player and video delay	√	√	√	√		
2007	Chevrolet	Malibu	Radio	√	√	√	√	√	0594 0595 0525
2007	Chevrolet	Malibu	Body Control Module	√	√	√	√	√	0500 0515
2007	Chevrolet	Malibu	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Malibu	HVAC Control Module	√	√	√	√	√	
2007	Chevrolet	Malibu	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Malibu	Remote control door lock receiver	√	√	√	√	√	0521
2007	Chevrolet	Malibu	Passenger presence system	√	√	√	√	√	0515
2007	Chevrolet	Malibu	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Malibu	Power steering control module	√	√	√	√	√	0596
2007	Chevrolet	Monte Carlo	Transmission control module		√	√	√	√	
2007	Chevrolet	Monte Carlo	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Monte Carlo	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Monte Carlo	Radio	√	√	√	√	√	
2007	Chevrolet	Monte Carlo	Body Control Module	√	√	√	√	√	0499 0497
2007	Chevrolet	Monte Carlo	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Monte Carlo	Heated seat module	√	√	√	√		
2007	Chevrolet	Monte Carlo	HVAC Control Module	√	√	√	√	√	0500
2007	Chevrolet	Monte Carlo	Instrument panel cluster	√	√	√	√	√	

2007	Chevrolet	Monte Carlo	Passenger presence system	√	√	√	√		0512
2007	Chevrolet	Monte Carlo	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Monte Carlo	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Monte Carlo	Theft Deterrent Module	√	√	√	√	√	0499 0497
2007	Chevrolet	Monte Carlo	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Monte Carlo	Transmission control module		√	√	√	√	
2007	Chevrolet	Monte Carlo	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Monte Carlo	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Monte Carlo	Radio	√	√	√	√	√	
2007	Chevrolet	Monte Carlo	Body Control Module	√	√	√	√	√	0499 0497
2007	Chevrolet	Monte Carlo	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Monte Carlo	Heated seat module	√	√	√	√		
2007	Chevrolet	Monte Carlo	HVAC Control Module	√	√	√	√	√	0500
2007	Chevrolet	Monte Carlo	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Monte Carlo	Passenger presence system	√	√	√	√		0512
2007	Chevrolet	Monte Carlo	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Monte Carlo	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Monte Carlo	Theft Deterrent Module	√	√	√	√	√	0499 0497
2007	Chevrolet	Monte Carlo	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Monte Carlo	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Monte Carlo	Radio	√	√	√	√	√	
2007	Chevrolet	Monte Carlo	Body Control Module	√	√	√	√	√	0499 0497
2007	Chevrolet	Monte Carlo	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Monte Carlo	Heated seat module	√	√	√	√		
2007	Chevrolet	Monte Carlo	HVAC Control Module	√	√	√	√	√	0500
2007	Chevrolet	Monte Carlo	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Monte Carlo	Passenger presence system	√	√	√	√		0512
2007	Chevrolet	Monte Carlo	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Monte Carlo	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Monte Carlo	Theft Deterrent Module	√	√	√	√	√	0499 0497
2007	Chevrolet	Monte Carlo	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Monte Carlo	Transmission control module		√	√	√	√	
2007	Chevrolet	Monte Carlo	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Optra	Engine Control Module	√	√	√	√	√	0507
2007	Chevrolet	Optra	Transmission control module	√	√	√	√	√	0493
2007	Chevrolet	Optra	Immobilizer						0508
2007	Chevrolet	Optra	Tire pressure monitor	√	√	√	√		0510 0511
2007	Chevrolet	Optra	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Optra - Mexico	Engine Control Module	√	√	√	√	√	0507
2007	Chevrolet	Optra - Mexico	Transmission control module	√	√	√	√	√	0493
2007	Chevrolet	Optra - Mexico	Immobilizer						0508

2007	Chevrolet	Optra - Mexico	Tire pressure monitor	√	√	√	√		0510 0511
2007	Chevrolet	Optra - Mexico	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	ark	Engine Control Module	√	√	√	√	√	0507
2007	Chevrolet	ark	Transmission control module	√	√	√	√	√	0507
2007	Chevrolet	ark	Immobilizer						0508
2007	Chevrolet	ark	Supplemental inflatable restraint	√	√	√	√		
2007	Chevrolet	ark	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Vivant	Engine Control Module	√	√	√	√	√	0507
2007	Chevrolet	Vivant	Transmission control module	√	√	√	√	√	0493
2007	Chevrolet	Vivant	Supplemental inflatable restraint	√	√	√	√		
2007	Chevrolet	Vivant	Immobilizer						0508
2007	Chevrolet	Vivant	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Others	Immobilizer						0508
2007	Chevrolet	Others	ISU	√	√	√	√	√	
2007	Chevrolet	Others	Supplemental inflatable restraint	√	√	√	√	√	
2007	Chevrolet	Others	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Others	Transmission control module	√	√	√	√	√	
2007	Chevrolet	Others	Engine Control Module	√	√	√	√	√	0493
2007	Pontiac	G3	Engine Control Module		√	√			
2007	Pontiac	G3	Transmission control module	√	√	√	√	√	0493
2007	Pontiac	G3	Supplemental inflatable restraint	√	√	√	√	√	
2007	Pontiac	G3	Immobilizer	√	√	√	√	√	0508
2007	Pontiac	G3	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Pontiac	G5	Transmission control module		√	√	√	√	
2007	Pontiac	G5	Engine Control Module	√	√	√	√	√	0493
2007	Pontiac	G5	Theft Deterrent Module	√	√	√	√		
2007	Pontiac	G5	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Pontiac	G5	Passenger presence system		√	√			
2007	Pontiac	G5	Digital radio receiver	√	√	√	√		
2007	Pontiac	G5	Radio	√	√	√	√	√	
2007	Pontiac	G5	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Pontiac	G5	Instrument panel cluster	√	√	√	√	√	
2007	Pontiac	G5	Body Control Module	√	√	√	√	√	0515
2007	Pontiac	G5	Personal audio link module	√	√	√			0528
2007	Pontiac	G5	Remote control door lock receiver	√	√	√	√	√	
2007	Pontiac	G5	Electronic Brake Control Module	√	√	√	√	√	
2007	Pontiac	G5	Power steering control module		√	√	√		
2007	Pontiac	G6	Transmission control module		√	√	√	√	
2007	Pontiac	G6	Engine Control Module	√	√	√	√	√	0493
2007	Pontiac	G6	Passenger presence system		√	√			
2007	Pontiac	G6	Supplemental inflatable restraint	√	√	√	√	√	0515

2007	Pontiac	G6	Theft Deterrent Module	√	√	√	√		
2007	Pontiac	G6	Digital radio receiver	√	√	√	√		
2007	Pontiac	G6	Instrument panel cluster	√	√	√	√	√	
2007	Pontiac	G6	Body Control Module	√	√	√	√	√	0500 0515
2007	Pontiac	G6	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Pontiac	G6	Radio	√	√	√	√	√	0581 0582 0525
2007	Pontiac	G6	Folding top module	√	√	√	√	√	
2007	Pontiac	G6	Remote control door lock receiver	√	√	√	√	√	
2007	Pontiac	G6	HVAC Control Module	√	√	√	√	√	0515
2007	Pontiac	G6	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Pontiac	G6	Power steering control module	√	√	√	√	√	0596
2007	Pontiac	Grand Prix	Transmission control module		√	√	√	√	
2007	Pontiac	Grand Prix	Engine Control Module	√	√	√	√	√	0493
2007	Pontiac	Grand Prix	Powertrain control module	√	√	√	√	√	
2007	Pontiac	Grand Prix	Digital radio receiver	√	√	√	√		0516
2007	Pontiac	Grand Prix	Remote control door lock receiver	√	√	√	√	√	0159
2007	Pontiac	Grand Prix	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Pontiac	Grand Prix	Body Control Module	√	√	√	√	√	0499
2007	Pontiac	Grand Prix	Instrument panel cluster	√	√	√	√	√	
2007	Pontiac	Grand Prix	HVAC Control Module	√	√	√	√	√	0500
2007	Pontiac	Grand Prix	Driver information center		√	√	√	√	
2007	Pontiac	Grand Prix	Navigation radio	√	√	√	√	√	0525 0572 0524
2007	Pontiac	Grand Prix	Head up display		√	√			
2007	Pontiac	Grand Prix	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Pontiac	Grand Prix	Electronic Brake Control Module		√	√	√	√	0506
2007	Pontiac	Matiz	Transmission control module	√	√	√	√	√	
2007	Pontiac	Matiz	Engine Control Module	√	√	√	√	√	0493
2007	Pontiac	Matiz	Passenger presence system		√	√			
2007	Pontiac	Matiz	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Pontiac	Matiz	Theft Deterrent Module	√	√	√	√		
2007	Pontiac	Matiz	Digital radio receiver	√	√	√	√		
2007	Pontiac	Matiz	Remote control door lock receiver	√	√	√	√	√	0521
2007	Pontiac	Matiz	Radio	√	√	√	√	√	0525
2007	Pontiac	Matiz	Instrument panel cluster	√	√	√	√	√	
2007	Pontiac	Matiz	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Pontiac	Matiz	Body Control Module	√	√	√	√	√	0515
2007	Pontiac	Matiz	Personal audio link module	√	√	√			0528
2007	Pontiac	Matiz	Electronic Brake Control Module	√	√	√	√	√	
2007	Pontiac	Solstice	Transmission control module	√	√	√	√	√	
2007	Pontiac	Solstice	Engine Control Module	√	√	√	√	√	0493
2007	Pontiac	Solstice	Passenger presence system		√	√			

2007	Pontiac	Solstice	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Pontiac	Solstice	Theft Deterrent Module	√	√	√	√		
2007	Pontiac	Solstice	Digital radio receiver	√	√	√	√		
2007	Pontiac	Solstice	Remote control door lock receiver	√	√	√	√	√	0521
2007	Pontiac	Solstice	Radio	√	√	√	√	√	0525
2007	Pontiac	Solstice	Instrument panel cluster	√	√	√	√	√	
2007	Pontiac	Solstice	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Pontiac	Solstice	Body Control Module	√	√	√	√	√	0515
2007	Pontiac	Solstice	Personal audio link module	√	√	√			0528
2007	Pontiac	Solstice	Electronic Brake Control Module	√	√	√	√	√	
2007	Pontiac	Vibe - FWD	Digital radio receiver	√	√	√	√		0516
2007	Pontiac	Vibe - FWD	Supplemental inflatable restraint		√	√	√		
2007	Pontiac	Vibe - FWD	Radio		√	√	√	√	0572
2007	Pontiac	Vibe - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Pontiac	Vibe - FWD	Electronic Brake Control Module		√	√	√	√	0597
2007	Pontiac	Wave	Engine Control Module		√	√			
2007	Pontiac	Wave	Transmission control module	√	√	√	√	√	0493
2007	Pontiac	Wave	Supplemental inflatable restraint	√	√	√	√	√	
2007	Pontiac	Wave	Immobilizer	√	√	√	√	√	0508
2007	Pontiac	Wave	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Saturn	AURA	Transmission control module		√	√	√	√	
2007	Saturn	AURA	Engine Control Module	√	√	√	√	√	0493
2007	Saturn	AURA	Passenger presence system		√	√			
2007	Saturn	AURA	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Saturn	AURA	Theft Deterrent Module	√	√	√	√		
2007	Saturn	AURA	Digital radio receiver	√	√	√	√		
2007	Saturn	AURA	Radio	√	√	√	√	√	0525
2007	Saturn	AURA	Body Control Module	√	√	√	√	√	0500 0515
2007	Saturn	AURA	HVAC Control Module	√	√	√	√	√	
2007	Saturn	AURA	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Saturn	AURA	Instrument panel cluster	√	√	√	√	√	
2007	Saturn	AURA	Personal audio link module	√	√	√			0528
2007	Saturn	AURA	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Saturn	AURA	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Saturn	AURA	Passenger presence system		√	√			
2007	Saturn	AURA	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Saturn	AURA	Theft Deterrent Module	√	√	√	√		
2007	Saturn	AURA	Digital radio receiver	√	√	√	√		
2007	Saturn	AURA	Radio	√	√	√	√	√	0525
2007	Saturn	AURA	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Saturn	AURA	Personal audio link module	√	√	√			0528

2007	Saturn	AURA	HVAC Control Module	√	√	√	√	√	
2007	Saturn	AURA	Instrument panel cluster	√	√	√	√	√	
2007	Saturn	AURA	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Saturn	AURA	Body Control Module	√	√	√	√	√	0500 0515
2007	Saturn	AURA	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Saturn	AURA	Power steering control module	√	√	√	√	√	
2007	Saturn	AURA	Engine Control Module	√	√	√	√	√	0566 0567 0493
2007	Saturn	AURA	Battery Energy Control Module				√	√	
2007	Saturn	AURA	Starter/Generator Control Modul				√	√	
2007	Saturn	AURA	Transmission control module		√	√	√	√	
2007	Saturn	ION	Transmission control module		√	√	√	√	
2007	Saturn	ION	Engine Control Module	√	√	√	√	√	0493
2007	Saturn	ION	Powertrain control module		√	√	√	√	
2007	Saturn	ION	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Saturn	ION	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Saturn	ION	Digital radio receiver	√	√	√	√		
2007	Saturn	ION	Radio	√	√	√	√	√	0551
2007	Saturn	ION	Instrument panel cluster	√	√	√	√	√	
2007	Saturn	ION	Body Control Module	√	√	√	√	√	0633 0634 0635
2007	Saturn	ION	Electronic Brake Control Module		√	√	√	√	0506
2007	Saturn	ION	Power steering control module		√	√	√		
2007	Saturn	SKY	Transmission control module	√	√	√	√	√	
2007	Saturn	SKY	Engine Control Module	√	√	√	√	√	0493
2007	Saturn	SKY	Passenger presence system		√	√			
2007	Saturn	SKY	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Saturn	SKY	Theft Deterrent Module	√	√	√	√		
2007	Saturn	SKY	Digital radio receiver	√	√	√	√		
2007	Saturn	SKY	Remote control door lock receiver	√	√	√	√	√	0521
2007	Saturn	SKY	Radio	√	√	√	√	√	0525
2007	Saturn	SKY	Instrument panel cluster	√	√	√	√	√	
2007	Saturn	SKY	Body Control Module	√	√	√	√	√	0598 0515
2007	Saturn	SKY	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Saturn	SKY	Personal audio link module	√	√	√			0528
2007	Saturn	SKY	Electronic Brake Control Module	√	√	√	√	√	
2007	Buick	Rainier	Powertrain control module		√	√	√	√	
2007	Buick	Rainier	Transmission control module		√	√	√	√	
2007	Buick	Rainier	Engine Control Module	√	√	√	√	√	0493
2007	Buick	Rainier	Supplemental inflatable restraint	√	√	√	√	√	
2007	Buick	Rainier	Disc player and video dilay	√	√	√			
2007	Buick	Rainier	Radio	√	√	√	√		
2007	Buick	Rainier	Rear seat audio	√	√	√	√		



2007	Buick	Rainier	Digital radio receiver	√	√	√	√		0516
2007	Buick	Rainier	Instrument panel cluster	√	√	√	√	√	
2007	Buick	Rainier	Generator battery control module	√	√	√	√	√	
2007	Buick	Rainier	Body Control Module	√	√	√	√	√	0550
2007	Buick	Rainier	Driver door module	√	√	√	√	√	
2007	Buick	Rainier	Driver seat module	√	√	√	√	√	
2007	Buick	Rainier	HVAC Control Module	√	√	√	√	√	
2007	Buick	Rainier	Passenger door module	√	√	√	√	√	
2007	Buick	Rainier	Liftgate module	√	√	√	√	√	0159
2007	Buick	Rainier	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Buick	Rainier	Passenger presence system	√	√	√	√	√	0512
2007	Buick	Rainier	Navigation radio	√	√	√	√	√	0525
2007	Buick	Rainier	Electronic Brake Control Module	√	√	√	√	√	
2007	Buick	Rainier	Transfer Case Control Module	√	√	√	√	√	0493
2007	Buick	Rendezvous - FWD	Powertrain control module	√	√	√	√	√	
2007	Buick	Rendezvous - FWD	Passenger presence system		√	√			0512
2007	Buick	Rendezvous - FWD	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Buick	Rendezvous - FWD	Theft Deterrent Module	√	√	√	√		
2007	Buick	Rendezvous - FWD	Digital radio receiver	√	√	√	√		0516
2007	Buick	Rendezvous - FWD	Disc player and video delay	√	√	√			
2007	Buick	Rendezvous - FWD	Radio	√	√	√	√	√	0573 0572 0574 0524
2007	Buick	Rendezvous - FWD	HVAC Control Module	√	√	√	√	√	
2007	Buick	Rendezvous - FWD	Instrument panel cluster	√	√	√	√	√	
2007	Buick	Rendezvous - FWD	Body Control Module	√	√	√	√	√	0628 0637 0614 0515
2007	Buick	Rendezvous - FWD	Head up display	√	√	√	√		
2007	Buick	Rendezvous - FWD	Memory seat module		√	√	√	√	
2007	Buick	Rendezvous - FWD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Buick	Rendezvous - FWD	Electronic Brake Control Module		√	√	√	√	0506
2007	Buick	Terraza	Transmission control module		√	√	√	√	
2007	Buick	Terraza	Engine Control Module	√	√	√	√	√	0493
2007	Buick	Terraza	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Buick	Terraza	Mobile digital media		√	√			
2007	Buick	Terraza	Radio	√	√	√	√	√	0587 0524 0525
2007	Buick	Terraza	Disc player and video delay	√	√	√			
2007	Buick	Terraza	Body Control Module	√	√	√	√	√	0499
2007	Buick	Terraza	Left power sliding door module	√	√	√	√	√	
2007	Buick	Terraza	Right power sliding door module	√	√	√	√	√	
2007	Buick	Terraza	Memory seat module	√	√	√	√	√	
2007	Buick	Terraza	HVAC Control Module	√	√	√	√	√	
2007	Buick	Terraza	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Buick	Terraza	Digital radio receiver	√	√	√	√		0516

2007	Buick	Terraza	Passenger presence system	√	√	√	√	√	0512
2007	Buick	Terraza	Navigation radio	√	√	√	√	√	0525
2007	Buick	Terraza	Electronic Brake Control Module		√	√	√	√	0506
2007	Buick	Terraza Ext.	Transmission control module		√	√	√	√	
2007	Buick	Terraza Ext.	Engine Control Module	√	√	√	√	√	0493
2007	Buick	Terraza Ext.	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Buick	Terraza Ext.	Mobile digital media		√	√			
2007	Buick	Terraza Ext.	Radio	√	√	√	√	√	0587 0524 0525
2007	Buick	Terraza Ext.	Disc player and video dilay	√	√	√			
2007	Buick	Terraza Ext.	Body Control Module	√	√	√	√	√	0499
2007	Buick	Terraza Ext.	Left power sliding door module	√	√	√	√	√	
2007	Buick	Terraza Ext.	Right power sliding door module	√	√	√	√	√	
2007	Buick	Terraza Ext.	Memory seat module	√	√	√	√	√	
2007	Buick	Terraza Ext.	HVAC Control Module	√	√	√	√	√	
2007	Buick	Terraza Ext.	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Buick	Terraza Ext.	Digital radio receiver	√	√	√	√		0516
2007	Buick	Terraza Ext.	Passenger presence system	√	√	√	√	√	0512
2007	Buick	Terraza Ext.	Navigation radio	√	√	√	√	√	0525
2007	Buick	Terraza Ext.	Electronic Brake Control Module		√	√	√	√	0506
2007	Cadillac	Hearse	Transmission control module		√	√	√	√	
2007	Cadillac	Hearse	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	Hearse	Passenger presence system	√	√	√	√		0512
2007	Cadillac	Hearse	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Cadillac	Hearse	Theft Deterrent Module	√	√	√	√		
2007	Cadillac	Hearse	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Cadillac	Hearse	Digital radio receiver	√	√	√	√		
2007	Cadillac	Hearse	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	Hearse	Radio	√	√	√	√	√	
2007	Cadillac	Hearse	Body Control Module	√	√	√	√	√	0499 0497
2007	Cadillac	Hearse	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	Hearse	HVAC Control Module	√	√	√	√	√	
2007	Cadillac	Hearse	Driver door switch	√	√	√	√	√	
2007	Cadillac	Hearse	Passenger door switch	√	√	√	√	√	
2007	Cadillac	Hearse	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	Hearse	Driver position module	√	√	√	√	√	
2007	Cadillac	Hearse	Rear heated seat module	√	√	√	√		
2007	Cadillac	Hearse	Inside rear view mirror module	√	√	√			
2007	Cadillac	Hearse	Electronic Brake Control Module	√	√	√	√		0506
2007	Cadillac	Hearse	Air suension control module	√	√	√	√	√	
2007	Cadillac	Limousine	Transmission control module		√	√	√	√	
2007	Cadillac	Limousine	Engine Control Module	√	√	√	√	√	0493

2007	Cadillac	Limousine	Passenger presence system	√	√	√	√		0512
2007	Cadillac	Limousine	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Cadillac	Limousine	Theft Deterrent Module	√	√	√	√		
2007	Cadillac	Limousine	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Cadillac	Limousine	Digital radio receiver	√	√	√	√		
2007	Cadillac	Limousine	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	Limousine	Radio	√	√	√	√	√	
2007	Cadillac	Limousine	Body Control Module	√	√	√	√	√	0499 0497
2007	Cadillac	Limousine	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	Limousine	HVAC Control Module	√	√	√	√	√	
2007	Cadillac	Limousine	Aux. HVAC control module	√			√	√	
2007	Cadillac	Limousine	Driver door switch	√	√	√	√	√	
2007	Cadillac	Limousine	Passenger door switch	√	√	√	√	√	
2007	Cadillac	Limousine	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	Limousine	Driver position module	√	√	√	√	√	
2007	Cadillac	Limousine	Rear heated seat module	√	√	√	√		
2007	Cadillac	Limousine	Inside rear view mirror module	√	√	√			
2007	Cadillac	Limousine	Electronic Brake Control Module	√	√	√	√		0506
2007	Cadillac	Limousine	Air suspension control module	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	Escalade - 2WD	Transmission control module		√	√	√	√	
2007	Cadillac	Escalade - 2WD	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	Driver door switch	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	Passenger door switch	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	Digital radio receiver	√	√	√	√		
2007	Cadillac	Escalade - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	Theft Deterrent Module	√	√	√	√		
2007	Cadillac	Escalade - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Cadillac	Escalade - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Cadillac	Escalade - 2WD	Passenger presence system	√	√	√	√		0512
2007	Cadillac	Escalade - 2WD	Inside rear view mirror module	√	√	√			
2007	Cadillac	Escalade - 2WD	Park assist module	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	Memory seat module	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	Rear heated seat module	√	√	√	√		
2007	Cadillac	Escalade - 2WD	Body Control Module	√	√	√	√	√	0497
2007	Cadillac	Escalade - 2WD	Rollover sensor	√	√	√	√		0541
2007	Cadillac	Escalade - 2WD	Body Control Module	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	Assist step controller	√	√	√	√	√	0531
2007	Cadillac	Escalade - 2WD	Radio	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526

2007	Cadillac	Escalade - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	Escalade - 2WD	Personal audio link module	√	√	√			0528
2007	Cadillac	Escalade - 2WD	Liftgate module	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	Electronic suension control	√	√	√	√	√	
2007	Cadillac	Escalade - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Cadillac	Escalade - AWD	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	Escalade - AWD	Transmission control module		√	√	√	√	
2007	Cadillac	Escalade - AWD	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	Escalade - AWD	Driver door switch	√	√	√	√	√	
2007	Cadillac	Escalade - AWD	Passenger door switch	√	√	√	√	√	
2007	Cadillac	Escalade - AWD	Digital radio receiver	√	√	√	√		
2007	Cadillac	Escalade - AWD	Rear HVAC/RSA	√	√	√	√	√	
2007	Cadillac	Escalade - AWD	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	Escalade - AWD	Theft Deterrent Module	√	√	√	√		
2007	Cadillac	Escalade - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Cadillac	Escalade - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Cadillac	Escalade - AWD	Passenger presence system	√	√	√	√		0512
2007	Cadillac	Escalade - AWD	Inside rear view mirror module	√	√	√			
2007	Cadillac	Escalade - AWD	Park assist module	√	√	√	√	√	
2007	Cadillac	Escalade - AWD	Memory seat module	√	√	√	√	√	
2007	Cadillac	Escalade - AWD	Rear heated seat module	√	√	√	√		
2007	Cadillac	Escalade - AWD	Body Control Module	√	√	√	√	√	0497
2007	Cadillac	Escalade - AWD	Rollover sensor	√	√	√	√		0541
2007	Cadillac	Escalade - AWD	Body Control Module	√	√	√	√	√	
2007	Cadillac	Escalade - AWD	Assist step controller	√	√	√	√	√	0531
2007	Cadillac	Escalade - AWD	Radio	√	√	√	√	√	
2007	Cadillac	Escalade - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Cadillac	Escalade - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	Escalade - AWD	Personal audio link module	√	√	√			0528
2007	Cadillac	Escalade - AWD	Liftgate module	√	√	√	√	√	
2007	Cadillac	Escalade - AWD	Electronic suension control	√	√	√	√	√	
2007	Cadillac	Escalade - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Cadillac	Escalade ESV	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	Escalade ESV	Transmission control module		√	√	√	√	
2007	Cadillac	Escalade ESV	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	Escalade ESV	Driver door switch	√	√	√	√	√	
2007	Cadillac	Escalade ESV	Passenger door switch	√	√	√	√	√	
2007	Cadillac	Escalade ESV	Digital radio receiver	√	√	√	√		
2007	Cadillac	Escalade ESV	Rear HVAC/RSA	√	√	√	√	√	
2007	Cadillac	Escalade ESV	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	Escalade ESV	Theft Deterrent Module	√	√	√	√		

2007	Cadillac	Escalade ESV	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Cadillac	Escalade ESV	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Cadillac	Escalade ESV	Passenger presence system	√	√	√	√		0512
2007	Cadillac	Escalade ESV	Inside rear view mirror module	√	√	√			
2007	Cadillac	Escalade ESV	Park assist module	√	√	√	√	√	
2007	Cadillac	Escalade ESV	Memory seat module	√	√	√	√	√	
2007	Cadillac	Escalade ESV	Rear heated seat module	√	√	√	√		
2007	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	0497
2007	Cadillac	Escalade ESV	Rollover sensor	√	√	√	√		0541
2007	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	
2007	Cadillac	Escalade ESV	Assist step controller	√	√	√	√	√	0531
2007	Cadillac	Escalade ESV	Radio	√	√	√	√	√	
2007	Cadillac	Escalade ESV	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Cadillac	Escalade ESV	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	Escalade ESV	Personal audio link module	√	√	√			0528
2007	Cadillac	Escalade ESV	Liftgate module	√	√	√	√	√	
2007	Cadillac	Escalade ESV	Electronic suension control	√	√	√	√	√	
2007	Cadillac	Escalade ESV	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Cadillac	Escalade EXT	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	Escalade EXT	Transmission control module		√	√	√	√	
2007	Cadillac	Escalade EXT	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	Escalade EXT	Driver door switch	√	√	√	√	√	
2007	Cadillac	Escalade EXT	Passenger door switch	√	√	√	√	√	
2007	Cadillac	Escalade EXT	Digital radio receiver	√	√	√	√		
2007	Cadillac	Escalade EXT	Rear HVAC/RSA	√	√	√	√	√	
2007	Cadillac	Escalade EXT	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	Escalade EXT	Theft Deterrent Module	√	√	√	√		
2007	Cadillac	Escalade EXT	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Cadillac	Escalade EXT	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Cadillac	Escalade EXT	Passenger presence system	√	√	√	√		0512
2007	Cadillac	Escalade EXT	Inside rear view mirror module	√	√	√			
2007	Cadillac	Escalade EXT	Park assist module	√	√	√	√	√	
2007	Cadillac	Escalade EXT	Memory seat module	√	√	√	√	√	
2007	Cadillac	Escalade EXT	Rear heated seat module	√	√	√	√		
2007	Cadillac	Escalade EXT	Body Control Module	√	√	√	√	√	0497
2007	Cadillac	Escalade EXT	Rollover sensor	√	√	√	√		0541
2007	Cadillac	Escalade EXT	Body Control Module	√	√	√	√	√	
2007	Cadillac	Escalade EXT	Assist step controller	√	√	√	√	√	0531
2007	Cadillac	Escalade EXT	Radio	√	√	√	√	√	
2007	Cadillac	Escalade EXT	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Cadillac	Escalade EXT	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495

2007	Cadillac	Escalade EXT	Personal audio link module	√	√	√			0528
2007	Cadillac	Escalade EXT	Liftgate module	√	√	√	√	√	
2007	Cadillac	Escalade EXT	Electronic suspension control	√	√	√	√	√	
2007	Cadillac	Escalade EXT	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Cadillac	SRX	Transmission control module	√	√	√	√	√	
2007	Cadillac	SRX	Engine Control Module	√	√	√	√	√	0493
2007	Cadillac	SRX	Passenger presence system	√	√	√	√		0537
2007	Cadillac	SRX	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Cadillac	SRX	Rollover sensor	√	√	√	√		0541
2007	Cadillac	SRX	Theft Deterrent Module	√	√	√	√		
2007	Cadillac	SRX	Amplifier (bose)	√	√	√	√	√	
2007	Cadillac	SRX	Digital radio receiver	√	√	√	√		
2007	Cadillac	SRX	Radio	√	√	√	√	√	
2007	Cadillac	SRX	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2007	Cadillac	SRX	TV antenna module	√	√	√	√		0504 0505
2007	Cadillac	SRX	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Cadillac	SRX	Rear HVAC/RSA	√	√	√	√	√	
2007	Cadillac	SRX	HVAC Control Module	√	√	√	√	√	
2007	Cadillac	SRX	Memory seat module	√	√	√	√	√	
2007	Cadillac	SRX	Rear seat module	√	√	√	√	√	
2007	Cadillac	SRX	Instrument panel cluster	√	√	√	√	√	
2007	Cadillac	SRX	Driver door switch	√	√	√	√	√	
2007	Cadillac	SRX	Passenger door switch	√	√	√	√	√	
2007	Cadillac	SRX	Body Control Module	√	√	√	√	√	0499 0497
2007	Cadillac	SRX	Park assist module	√	√	√	√	√	
2007	Cadillac	SRX	Body Control Module	√	√	√	√	√	0498
2007	Cadillac	SRX	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Cadillac	SRX	Liftgate module	√	√	√	√	√	
2007	Cadillac	SRX	Electronic suspension control		√	√	√	√	
2007	Cadillac	SRX	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Avalanche - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Avalanche - 2WD	Transmission control module	√	√	√	√	√	0493
2007	Chevrolet	Avalanche - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Chevrolet	Avalanche - 2WD	Amplifier (bose)	√	√	√	√	√	
2007	Chevrolet	Avalanche - 2WD	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Avalanche - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	Chevrolet	Avalanche - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Avalanche - 2WD	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Avalanche - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Avalanche - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Avalanche - 2WD	Passenger presence system	√	√	√	√		0512

2007	Chevrolet	Avalanche - 2WD	Park assist module	√	√	√	√	√	
2007	Chevrolet	Avalanche - 2WD	Memory seat module	√	√	√	√	√	
2007	Chevrolet	Avalanche - 2WD	Rear heated seat module	√	√	√	√		
2007	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	0497
2007	Chevrolet	Avalanche - 2WD	Rollover sensor	√	√	√	√		0541
2007	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	
2007	Chevrolet	Avalanche - 2WD	Assist step controller	√	√	√	√	√	0531
2007	Chevrolet	Avalanche - 2WD	Radio	√	√	√	√	√	
2007	Chevrolet	Avalanche - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Avalanche - 2WD	Personal audio link module	√	√	√			0528
2007	Chevrolet	Avalanche - 2WD	Driver door switch	√	√	√	√	√	
2007	Chevrolet	Avalanche - 2WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	Chevrolet	Avalanche - 2WD	Electronic suspension control	√	√	√	√	√	
2007	Chevrolet	Avalanche - 2WD	Trailer brake control module	√	√	√	√		
2007	Chevrolet	Avalanche - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Avalanche - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	Chevrolet	Avalanche - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Avalanche - 2WD	Transmission control module	√	√	√	√	√	0493
2007	Chevrolet	Avalanche - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Chevrolet	Avalanche - 2WD	Amplifier (bose)	√	√	√	√	√	
2007	Chevrolet	Avalanche - 2WD	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Avalanche - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	Chevrolet	Avalanche - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Avalanche - 2WD	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Avalanche - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Avalanche - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Avalanche - 2WD	Passenger presence system	√	√	√	√		0512
2007	Chevrolet	Avalanche - 2WD	Park assist module	√	√	√	√	√	
2007	Chevrolet	Avalanche - 2WD	Memory seat module	√	√	√	√	√	
2007	Chevrolet	Avalanche - 2WD	Rear heated seat module	√	√	√	√		
2007	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	0497
2007	Chevrolet	Avalanche - 2WD	Rollover sensor	√	√	√	√		0541
2007	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	
2007	Chevrolet	Avalanche - 2WD	Assist step controller	√	√	√	√	√	0531
2007	Chevrolet	Avalanche - 2WD	Radio	√	√	√	√	√	
2007	Chevrolet	Avalanche - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Avalanche - 2WD	Personal audio link module	√	√	√			0528
2007	Chevrolet	Avalanche - 2WD	Driver door switch	√	√	√	√	√	
2007	Chevrolet	Avalanche - 2WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	Chevrolet	Avalanche - 2WD	Electronic suspension control	√	√	√	√	√	
2007	Chevrolet	Avalanche - 2WD	Trailer brake control module	√	√	√	√		

2007	Chevrolet	Avalanche - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Avalanche - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	Chevrolet	Avalanche - 4WD	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Avalanche - 4WD	Transmission control module	√	√	√	√	√	0493
2007	Chevrolet	Avalanche - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Chevrolet	Avalanche - 4WD	Amplifier (bose)	√	√	√	√	√	
2007	Chevrolet	Avalanche - 4WD	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Avalanche - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2007	Chevrolet	Avalanche - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Avalanche - 4WD	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Avalanche - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Avalanche - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Avalanche - 4WD	Passenger presence system	√	√	√	√		0512
2007	Chevrolet	Avalanche - 4WD	Park assist module	√	√	√	√	√	
2007	Chevrolet	Avalanche - 4WD	Memory seat module	√	√	√	√	√	
2007	Chevrolet	Avalanche - 4WD	Rear heated seat module	√	√	√	√		
2007	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	0497
2007	Chevrolet	Avalanche - 4WD	Rollover sensor	√	√	√	√		0541
2007	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	
2007	Chevrolet	Avalanche - 4WD	Assist step controller	√	√	√	√	√	0531
2007	Chevrolet	Avalanche - 4WD	Radio	√	√	√	√	√	
2007	Chevrolet	Avalanche - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Avalanche - 4WD	Personal audio link module	√	√	√			0528
2007	Chevrolet	Avalanche - 4WD	Driver door switch	√	√	√	√	√	
2007	Chevrolet	Avalanche - 4WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	Chevrolet	Avalanche - 4WD	Electronic suspension control	√	√	√	√	√	
2007	Chevrolet	Avalanche - 4WD	Trailer brake control module	√	√	√	√		
2007	Chevrolet	Avalanche - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Avalanche - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	Chevrolet	Avalanche - 4WD	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Avalanche - 4WD	Transmission control module	√	√	√	√	√	0493
2007	Chevrolet	Avalanche - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Chevrolet	Avalanche - 4WD	Amplifier (bose)	√	√	√	√	√	
2007	Chevrolet	Avalanche - 4WD	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Avalanche - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2007	Chevrolet	Avalanche - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Avalanche - 4WD	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Avalanche - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Avalanche - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Avalanche - 4WD	Passenger presence system	√	√	√	√		0512
2007	Chevrolet	Avalanche - 4WD	Park assist module	√	√	√	√	√	



2007	Chevrolet	Avalanche - 4WD	Memory seat module	√	√	√	√	√	
2007	Chevrolet	Avalanche - 4WD	Rear heated seat module	√	√	√	√		
2007	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	0497
2007	Chevrolet	Avalanche - 4WD	Rollover sensor	√	√	√	√		0541
2007	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	
2007	Chevrolet	Avalanche - 4WD	Assist step controller	√	√	√	√	√	0531
2007	Chevrolet	Avalanche - 4WD	Radio	√	√	√	√	√	
2007	Chevrolet	Avalanche - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Avalanche - 4WD	Personal audio link module	√	√	√			0528
2007	Chevrolet	Avalanche - 4WD	Driver door switch	√	√	√	√	√	
2007	Chevrolet	Avalanche - 4WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	Chevrolet	Avalanche - 4WD	Electronic suspension control	√	√	√	√	√	
2007	Chevrolet	Avalanche - 4WD	Trailer brake control module	√	√	√	√		
2007	Chevrolet	Avalanche - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Avalanche - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	Chevrolet	Captiva	Transmission control module	√	√	√	√	√	
2007	Chevrolet	Captiva	Engine Control Module	√	√	√	√	√	0509
2007	Chevrolet	Captiva	Rear drive system	√	√	√	√	√	0530
2007	Chevrolet	Captiva	HVAC Control Module	√	√	√		√	
2007	Chevrolet	Captiva	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Captiva	Body Control Module	√	√	√	√	√	0497
2007	Chevrolet	Captiva	Body Control Module	√	√	√	√	√	
2007	Chevrolet	Captiva	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Captiva	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Captiva	Theft Deterrent Module	√	√	√	√	√	0497
2007	Chevrolet	Captiva	Electronic Brake Control Module	√	√	√	√	√	
2007	Chevrolet	Colorado Pickup - 2WD	Powertrain control module		√	√	√	√	0638
2007	Chevrolet	Colorado Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2007	Chevrolet	Colorado Pickup - 2WD	Radio	√	√	√	√		
2007	Chevrolet	Colorado Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Chevrolet	Colorado Pickup - 2WD	Generator battery control module	√	√	√	√	√	
2007	Chevrolet	Colorado Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Colorado Pickup - 2WD	Body Control Module	√	√	√	√	√	0550 0159
2007	Chevrolet	Colorado Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Colorado Pickup - 2WD	Passenger presence system	√	√	√	√	√	0512
2007	Chevrolet	Colorado Pickup - 2WD	Electronic Brake Control Module	√	√	√	√	√	
2007	Chevrolet	Colorado Pickup - 2WD	Transfer Case Control Module	√	√	√	√	√	0638
2007	Chevrolet	Colorado Pickup - 2WD	Powertrain control module		√	√	√	√	0638
2007	Chevrolet	Colorado Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2007	Chevrolet	Colorado Pickup - 2WD	Radio	√	√	√	√		
2007	Chevrolet	Colorado Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515

2007	Chevrolet	Colorado Pickup - 2WD	Generator battery control module	√	√	√	√	√	
2007	Chevrolet	Colorado Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Colorado Pickup - 2WD	Body Control Module	√	√	√	√	√	0550 0159
2007	Chevrolet	Colorado Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Colorado Pickup - 2WD	Passenger presence system	√	√	√	√	√	0512
2007	Chevrolet	Colorado Pickup - 2WD	Electronic Brake Control Module	√	√	√	√	√	
2007	Chevrolet	Colorado Pickup - 2WD	Transfer Case Control Module	√	√	√	√	√	0638
2007	Chevrolet	Colorado Pickup - 4WD	Powertrain control module		√	√	√	√	0638
2007	Chevrolet	Colorado Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2007	Chevrolet	Colorado Pickup - 4WD	Radio	√	√	√	√		
2007	Chevrolet	Colorado Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Chevrolet	Colorado Pickup - 4WD	Generator battery control module	√	√	√	√	√	
2007	Chevrolet	Colorado Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Colorado Pickup - 4WD	Body Control Module	√	√	√	√	√	0550 0159
2007	Chevrolet	Colorado Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Colorado Pickup - 4WD	Passenger presence system	√	√	√	√	√	0512
2007	Chevrolet	Colorado Pickup - 4WD	Electronic Brake Control Module	√	√	√	√	√	
2007	Chevrolet	Colorado Pickup - 4WD	Transfer Case Control Module	√	√	√	√	√	0638
2007	Chevrolet	Colorado Pickup - 4WD	Powertrain control module		√	√	√	√	0638
2007	Chevrolet	Colorado Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2007	Chevrolet	Colorado Pickup - 4WD	Radio	√	√	√	√		
2007	Chevrolet	Colorado Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Chevrolet	Colorado Pickup - 4WD	Generator battery control module	√	√	√	√	√	
2007	Chevrolet	Colorado Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Colorado Pickup - 4WD	Body Control Module	√	√	√	√	√	0550 0159
2007	Chevrolet	Colorado Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Colorado Pickup - 4WD	Passenger presence system	√	√	√	√	√	0512
2007	Chevrolet	Colorado Pickup - 4WD	Electronic Brake Control Module	√	√	√	√	√	
2007	Chevrolet	Colorado Pickup - 4WD	Transfer Case Control Module	√	√	√	√	√	0638
2007	Chevrolet	Equinox	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Equinox	Rear drive system	√	√	√	√		0530
2007	Chevrolet	Equinox	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Equinox	Radio	√	√	√	√	√	
2007	Chevrolet	Equinox	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Equinox	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Equinox	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Equinox	Body Control Module	√	√	√	√	√	0499 0497
2007	Chevrolet	Equinox	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Equinox	Heated seat module	√	√	√	√		
2007	Chevrolet	Equinox	Passenger presence system	√	√	√	√		0537
2007	Chevrolet	Equinox	Instrument panel cluster	√	√	√	√	√	

2007	Chevrolet	Equinox	Rollover sensor	√	√	√	√		0541
2007	Chevrolet	Equinox	HVAC Control Module	√	√	√	√	√	0500
2007	Chevrolet	Equinox	Power steering control module		√	√	√		
2007	Chevrolet	Equinox	Electronic Brake Control Module	√	√	√	√	√	
2007	Chevrolet	Express	Powertrain control module		√	√	√	√	0638
2007	Chevrolet	Express	Transmission control module		√	√	√	√	
2007	Chevrolet	Express	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2007	Chevrolet	Express	Radio	√	√	√	√		
2007	Chevrolet	Express	Multifunction alarm module	√	√	√	√	√	
2007	Chevrolet	Express	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Express	Passenger presence system		√	√			
2007	Chevrolet	Express	Remote control door lock receiver	√	√	√	√	√	
2007	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	
2007	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Express	Body Control Module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	
2007	Chevrolet	Express	Powertrain control module		√	√	√	√	0638
2007	Chevrolet	Express	Transmission control module		√	√	√	√	
2007	Chevrolet	Express	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2007	Chevrolet	Express	Radio	√	√	√	√		
2007	Chevrolet	Express	Multifunction alarm module	√	√	√	√	√	
2007	Chevrolet	Express	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Express	Passenger presence system		√	√			
2007	Chevrolet	Express	Remote control door lock receiver	√	√	√	√	√	
2007	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	
2007	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Express	Body Control Module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	
2007	Chevrolet	Express	Powertrain control module		√	√	√	√	
2007	Chevrolet	Express	Radio	√	√	√	√		
2007	Chevrolet	Express	Multifunction alarm module	√	√	√	√	√	
2007	Chevrolet	Express	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Express	Passenger presence system		√	√			
2007	Chevrolet	Express	Remote control door lock receiver	√	√	√	√	√	
2007	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	
2007	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Express	Body Control Module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	
2007	Chevrolet	Express	Powertrain control module		√	√	√	√	
2007	Chevrolet	Express	Radio	√	√	√	√		
2007	Chevrolet	Express	Multifunction alarm module	√	√	√	√	√	

2007	Chevrolet	Express	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Express	Passenger presence system		√	√			
2007	Chevrolet	Express	Remote control door lock receiver	√	√	√	√	√	
2007	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	
2007	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Express	Body Control Module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Express	Electronic Brake Control Module	√	√	√	√	√	
2007	Chevrolet	HHR	Transmission control module		√	√	√	√	
2007	Chevrolet	HHR	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	HHR	Passenger presence system		√	√			
2007	Chevrolet	HHR	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Chevrolet	HHR	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	HHR	Digital radio receiver	√	√	√	√		
2007	Chevrolet	HHR	Radio	√	√	√	√	√	
2007	Chevrolet	HHR	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	HHR	Body Control Module	√	√	√	√	√	0515
2007	Chevrolet	HHR	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	HHR	Personal audio link module	√	√	√			0528
2007	Chevrolet	HHR	Remote control door lock receiver	√	√	√	√	√	
2007	Chevrolet	HHR	Electronic Brake Control Module	√	√	√	√	√	
2007	Chevrolet	HHR	Power steering control module		√	√	√		
2007	Chevrolet	Silverado	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Silverado	Transmission control module	√	√	√	√	√	0493
2007	Chevrolet	Silverado	Fuel Pump Control Module	√	√	√	√	√	0493
2007	Chevrolet	Silverado	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Chevrolet	Silverado	Amplifier (bose)	√	√	√	√	√	
2007	Chevrolet	Silverado	Radio	√	√	√	√	√	
2007	Chevrolet	Silverado	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Silverado	Rear HVAC/RSA	√	√	√	√	√	
2007	Chevrolet	Silverado	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Silverado	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Silverado	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Silverado	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Silverado	Passenger presence system	√	√	√	√		0512
2007	Chevrolet	Silverado	Park assist module	√	√	√	√	√	
2007	Chevrolet	Silverado	Memory seat module	√	√	√	√	√	
2007	Chevrolet	Silverado	Rear heated seat module	√	√	√	√		
2007	Chevrolet	Silverado	Rollover sensor	√	√	√	√		0541
2007	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	
2007	Chevrolet	Silverado	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Silverado	Personal audio link module	√	√	√			0528

2007	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0497
2007	Chevrolet	Silverado	Driver door switch	√	√	√	√	√	
2007	Chevrolet	Silverado	Passenger door switch	√	√	√	√	√	0513 0159
2007	Chevrolet	Silverado	Electronic suension control	√	√	√	√	√	
2007	Chevrolet	Silverado	Trailer brake control module	√	√	√	√		
2007	Chevrolet	Silverado	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Silverado	Powertrain control module		√	√	√	√	0638
2007	Chevrolet	Silverado	Amplifier (bose)	√	√	√	√	√	0631
2007	Chevrolet	Silverado	CD changer	√	√	√			
2007	Chevrolet	Silverado	Chime	√	√	√	√	√	
2007	Chevrolet	Silverado	Digital radio receiver	√	√	√	√		0516
2007	Chevrolet	Silverado	Disc player and video dilay	√	√	√			
2007	Chevrolet	Silverado	Radio	√	√	√	√		
2007	Chevrolet	Silverado	Rear seat audio	√	√	√	√		
2007	Chevrolet	Silverado	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Silverado	Passenger presence system		√	√			0512
2007	Chevrolet	Silverado	Supplemental inflatable restraint	√	√	√	√	√	0639
2007	Chevrolet	Silverado	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Silverado	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	
2007	Chevrolet	Silverado	Generator battery control module	√	√	√	√	√	
2007	Chevrolet	Silverado	Driver door module	√	√	√	√	√	
2007	Chevrolet	Silverado	Driver seat module	√	√	√	√	√	
2007	Chevrolet	Silverado	Rear aux. climate module	√	√	√	√	√	
2007	Chevrolet	Silverado	Rear HVAC	√	√	√	√		
2007	Chevrolet	Silverado	HVAC Control Module	√	√	√	√	√	
2007	Chevrolet	Silverado	Passenger door module	√	√	√	√	√	0159
2007	Chevrolet	Silverado	Navigation radio	√	√	√	√	√	0525
2007	Chevrolet	Silverado	ABS	√	√	√	√	√	
2007	Chevrolet	Silverado	EHPS (parallel hybrid)	√	√	√	√	√	
2007	Chevrolet	Silverado	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Silverado	Transmission control module		√	√	√	√	
2007	Chevrolet	Silverado	Transfer Case Control Module	√	√	√	√	√	0493
2007	Chevrolet	Silverado	Fuel Pump Control Module	√	√	√	√	√	0493
2007	Chevrolet	Silverado	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Chevrolet	Silverado	Amplifier (bose)	√	√	√	√	√	
2007	Chevrolet	Silverado	Radio	√	√	√	√	√	
2007	Chevrolet	Silverado	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Silverado	Rear HVAC/RSA	√	√	√	√	√	
2007	Chevrolet	Silverado	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Silverado	Theft Deterrent Module	√	√	√	√		

2007	Chevrolet	Silverado	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Silverado	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Silverado	Passenger presence system	√	√	√	√		0512
2007	Chevrolet	Silverado	Park assist module	√	√	√	√	√	
2007	Chevrolet	Silverado	Memory seat module	√	√	√	√	√	
2007	Chevrolet	Silverado	Rear heated seat module	√	√	√	√		
2007	Chevrolet	Silverado	Rollover sensor	√	√	√	√		0541
2007	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	
2007	Chevrolet	Silverado	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Silverado	Personal audio link module	√	√	√			0528
2007	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	0497
2007	Chevrolet	Silverado	Driver door switch	√	√	√	√	√	
2007	Chevrolet	Silverado	Passenger door switch	√	√	√	√	√	0513 0159
2007	Chevrolet	Silverado	Electronic suspension control	√	√	√	√	√	
2007	Chevrolet	Silverado	Trailer brake control module	√	√	√	√		
2007	Chevrolet	Silverado	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Silverado	Powertrain control module		√	√	√	√	0638
2007	Chevrolet	Silverado	Transfer Case Control Module		√	√	√	√	0638
2007	Chevrolet	Silverado	Amplifier (bose)	√	√	√	√	√	0631
2007	Chevrolet	Silverado	CD changer	√	√	√			
2007	Chevrolet	Silverado	Chime	√	√	√	√	√	
2007	Chevrolet	Silverado	Digital radio receiver	√	√	√	√		0516
2007	Chevrolet	Silverado	Disc player and video delay	√	√	√			
2007	Chevrolet	Silverado	Radio	√	√	√	√		
2007	Chevrolet	Silverado	Rear seat audio	√	√	√	√		
2007	Chevrolet	Silverado	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Silverado	Passenger presence system		√	√			0512
2007	Chevrolet	Silverado	Supplemental inflatable restraint	√	√	√	√	√	0639
2007	Chevrolet	Silverado	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Silverado	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Silverado	Body Control Module	√	√	√	√	√	
2007	Chevrolet	Silverado	Generator battery control module	√	√	√	√	√	
2007	Chevrolet	Silverado	Driver door module	√	√	√	√	√	
2007	Chevrolet	Silverado	Driver seat module	√	√	√	√	√	
2007	Chevrolet	Silverado	Rear aux. climate module	√	√	√	√	√	
2007	Chevrolet	Silverado	Rear HVAC	√	√	√	√		
2007	Chevrolet	Silverado	HVAC Control Module	√	√	√	√	√	
2007	Chevrolet	Silverado	Passenger door module	√	√	√	√	√	0159
2007	Chevrolet	Silverado	Navigation radio	√	√	√	√	√	0525
2007	Chevrolet	Silverado	ABS	√	√	√	√	√	
2007	Chevrolet	Silverado	EHPS (parallel hybrid)	√	√	√	√	√	

2007	Chevrolet	Silverado Classic	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Silverado Classic	Transmission control module		√	√	√	√	
2007	Chevrolet	Silverado Classic	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Chevrolet	Silverado Classic	Amplifier (bose)	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Radio	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Silverado Classic	Rear HVAC/RSA	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Silverado Classic	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Silverado Classic	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Silverado Classic	Passenger presence system	√	√	√	√		0512
2007	Chevrolet	Silverado Classic	Park assist module	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Memory seat module	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Rear heated seat module	√	√	√	√		
2007	Chevrolet	Silverado Classic	Rollover sensor	√	√	√	√		0541
2007	Chevrolet	Silverado Classic	Body Control Module	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Silverado Classic	Personal audio link module	√	√	√			0528
2007	Chevrolet	Silverado Classic	Body Control Module	√	√	√	√	√	0497
2007	Chevrolet	Silverado Classic	Driver door switch	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Passenger door switch	√	√	√	√	√	0513 0159
2007	Chevrolet	Silverado Classic	Electronic suspension control	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Trailer brake control module	√	√	√	√		
2007	Chevrolet	Silverado Classic	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Silverado Classic	Powertrain control module		√	√	√	√	0638
2007	Chevrolet	Silverado Classic	Battery Energy Control Module		√	√	√	√	
2007	Chevrolet	Silverado Classic	Transmission control module		√	√	√	√	
2007	Chevrolet	Silverado Classic	Engine Control Module	√	√	√	√	√	0539 0540 0540
2007	Chevrolet	Silverado Classic	Amplifier (bose)	√	√	√	√	√	0631
2007	Chevrolet	Silverado Classic	CD changer	√	√	√			
2007	Chevrolet	Silverado Classic	Chime	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Digital radio receiver	√	√	√	√		0516
2007	Chevrolet	Silverado Classic	Disc player and video delay	√	√	√			
2007	Chevrolet	Silverado Classic	Radio	√	√	√	√		
2007	Chevrolet	Silverado Classic	Rear seat audio	√	√	√	√		
2007	Chevrolet	Silverado Classic	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Silverado Classic	Passenger presence system		√	√			0512
2007	Chevrolet	Silverado Classic	Supplemental inflatable restraint	√	√	√	√	√	0639
2007	Chevrolet	Silverado Classic	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Silverado Classic	Instrument panel cluster	√	√	√	√	√	

2007	Chevrolet	Silverado Classic	Body Control Module	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Generator battery control module	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Driver door module	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Driver seat module	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Rear aux. climate module	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Rear HVAC	√	√	√	√		
2007	Chevrolet	Silverado Classic	HVAC Control Module	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Passenger door module	√	√	√	√	√	0159
2007	Chevrolet	Silverado Classic	Navigation radio	√	√	√	√	√	0525
2007	Chevrolet	Silverado Classic	ABS	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	EHPS (parallel hybrid)	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Silverado Classic	Transmission control module		√	√	√	√	
2007	Chevrolet	Silverado Classic	Transfer Case Control Module	√	√	√	√	√	0493
2007	Chevrolet	Silverado Classic	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Chevrolet	Silverado Classic	Amplifier (bose)	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Radio	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Silverado Classic	Rear HVAC/RSA	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Silverado Classic	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Silverado Classic	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Silverado Classic	Passenger presence system	√	√	√	√		0512
2007	Chevrolet	Silverado Classic	Park assist module	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Memory seat module	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Rear heated seat module	√	√	√	√		
2007	Chevrolet	Silverado Classic	Rollover sensor	√	√	√	√		0541
2007	Chevrolet	Silverado Classic	Body Control Module	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Silverado Classic	Personal audio link module	√	√	√			0528
2007	Chevrolet	Silverado Classic	Body Control Module	√	√	√	√	√	0497
2007	Chevrolet	Silverado Classic	Driver door switch	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Passenger door switch	√	√	√	√	√	0513 0159
2007	Chevrolet	Silverado Classic	Electronic suspension control	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Trailer brake control module	√	√	√	√		
2007	Chevrolet	Silverado Classic	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Silverado Classic	Powertrain control module		√	√	√	√	0638
2007	Chevrolet	Silverado Classic	Transfer Case Control Module		√	√	√	√	0638
2007	Chevrolet	Silverado Classic	Battery Energy Control Module		√	√	√	√	
2007	Chevrolet	Silverado Classic	Transmission control module		√	√	√	√	



2007	Chevrolet	Silverado Classic	Engine Control Module	√	√	√	√	√	0539 0540 0540
2007	Chevrolet	Silverado Classic	Amplifier (bose)	√	√	√	√	√	0631
2007	Chevrolet	Silverado Classic	CD changer	√	√	√			
2007	Chevrolet	Silverado Classic	Chime	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Digital radio receiver	√	√	√	√		0516
2007	Chevrolet	Silverado Classic	Disc player and video delay	√	√	√			
2007	Chevrolet	Silverado Classic	Radio	√	√	√	√		
2007	Chevrolet	Silverado Classic	Rear seat audio	√	√	√	√		
2007	Chevrolet	Silverado Classic	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Silverado Classic	Passenger presence system		√	√			0512
2007	Chevrolet	Silverado Classic	Supplemental inflatable restraint	√	√	√	√	√	0639
2007	Chevrolet	Silverado Classic	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Silverado Classic	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Body Control Module	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Generator battery control module	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Driver door module	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Driver seat module	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Rear aux. climate module	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Rear HVAC	√	√	√	√		
2007	Chevrolet	Silverado Classic	HVAC Control Module	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	Passenger door module	√	√	√	√	√	0159
2007	Chevrolet	Silverado Classic	Navigation radio	√	√	√	√	√	0525
2007	Chevrolet	Silverado Classic	ABS	√	√	√	√	√	
2007	Chevrolet	Silverado Classic	EHPS (parallel hybrid)	√	√	√	√	√	
2007	Chevrolet	Suburban - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Suburban - 2WD	Transmission control module	√	√	√	√	√	0493
2007	Chevrolet	Suburban - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Chevrolet	Suburban - 2WD	Amplifier (bose)	√	√	√	√	√	
2007	Chevrolet	Suburban - 2WD	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Suburban - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	Chevrolet	Suburban - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Suburban - 2WD	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Suburban - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Suburban - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Suburban - 2WD	Passenger presence system	√	√	√	√		0512
2007	Chevrolet	Suburban - 2WD	Park assist module	√	√	√	√	√	
2007	Chevrolet	Suburban - 2WD	Memory seat module	√	√	√	√	√	
2007	Chevrolet	Suburban - 2WD	Rear heated seat module	√	√	√	√		
2007	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	0497
2007	Chevrolet	Suburban - 2WD	Rollover sensor	√	√	√	√		0541
2007	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	

2007	Chevrolet	Suburban - 2WD	Assist step controller	√	√	√	√	√	0531
2007	Chevrolet	Suburban - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Suburban - 2WD	Radio	√	√	√	√	√	
2007	Chevrolet	Suburban - 2WD	Personal audio link module	√	√	√			0528
2007	Chevrolet	Suburban - 2WD	Liftgate module	√	√	√	√	√	
2007	Chevrolet	Suburban - 2WD	Driver door switch	√	√	√	√	√	
2007	Chevrolet	Suburban - 2WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	Chevrolet	Suburban - 2WD	Electronic suension control	√	√	√	√	√	
2007	Chevrolet	Suburban - 2WD	Trailer brake control module	√	√	√	√		
2007	Chevrolet	Suburban - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Suburban - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	Chevrolet	Suburban - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Suburban - 2WD	Transmission control module	√	√	√	√	√	0493
2007	Chevrolet	Suburban - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Chevrolet	Suburban - 2WD	Amplifier (bose)	√	√	√	√	√	
2007	Chevrolet	Suburban - 2WD	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Suburban - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	Chevrolet	Suburban - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Suburban - 2WD	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Suburban - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Suburban - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Suburban - 2WD	Passenger presence system	√	√	√	√		0512
2007	Chevrolet	Suburban - 2WD	Park assist module	√	√	√	√	√	
2007	Chevrolet	Suburban - 2WD	Memory seat module	√	√	√	√	√	
2007	Chevrolet	Suburban - 2WD	Rear heated seat module	√	√	√	√		
2007	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	0497
2007	Chevrolet	Suburban - 2WD	Rollover sensor	√	√	√	√		0541
2007	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	
2007	Chevrolet	Suburban - 2WD	Assist step controller	√	√	√	√	√	0531
2007	Chevrolet	Suburban - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Suburban - 2WD	Radio	√	√	√	√	√	
2007	Chevrolet	Suburban - 2WD	Personal audio link module	√	√	√			0528
2007	Chevrolet	Suburban - 2WD	Liftgate module	√	√	√	√	√	
2007	Chevrolet	Suburban - 2WD	Driver door switch	√	√	√	√	√	
2007	Chevrolet	Suburban - 2WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	Chevrolet	Suburban - 2WD	Electronic suension control	√	√	√	√	√	
2007	Chevrolet	Suburban - 2WD	Trailer brake control module	√	√	√	√		
2007	Chevrolet	Suburban - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Suburban - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	Chevrolet	Suburban - 4WD	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Suburban - 4WD	Transmission control module	√	√	√	√	√	0493

2007	Chevrolet	Suburban - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Chevrolet	Suburban - 4WD	Amplifier (bose)	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Digital radio receiver	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Theft Deterrent Module	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Suburban - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Suburban - 4WD	Passenger presence system	√	√	√	√	√	0512
2007	Chevrolet	Suburban - 4WD	Park assist module	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Memory seat module	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Rear heated seat module	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	0497
2007	Chevrolet	Suburban - 4WD	Rollover sensor	√	√	√	√	√	0541
2007	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Assist step controller	√	√	√	√	√	0531
2007	Chevrolet	Suburban - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Suburban - 4WD	Radio	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Personal audio link module	√	√	√	√	√	0528
2007	Chevrolet	Suburban - 4WD	Liftgate module	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Driver door switch	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	Chevrolet	Suburban - 4WD	Electronic suspension control	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Trailer brake control module	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Suburban - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	Chevrolet	Suburban - 4WD	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Suburban - 4WD	Transmission control module	√	√	√	√	√	0493
2007	Chevrolet	Suburban - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Chevrolet	Suburban - 4WD	Amplifier (bose)	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Digital radio receiver	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Theft Deterrent Module	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Suburban - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Suburban - 4WD	Passenger presence system	√	√	√	√	√	0512
2007	Chevrolet	Suburban - 4WD	Park assist module	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Memory seat module	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Rear heated seat module	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	0497

2007	Chevrolet	Suburban - 4WD	Rollover sensor	√	√	√	√		0541
2007	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Assist step controller	√	√	√	√	√	0531
2007	Chevrolet	Suburban - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Suburban - 4WD	Radio	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Personal audio link module	√	√	√			0528
2007	Chevrolet	Suburban - 4WD	Liftgate module	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Driver door switch	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	Chevrolet	Suburban - 4WD	Electronic suension control	√	√	√	√	√	
2007	Chevrolet	Suburban - 4WD	Trailer brake control module	√	√	√	√		
2007	Chevrolet	Suburban - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Suburban - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	Chevrolet	Tahoe - 2WD	Transmission control module		√	√	√	√	
2007	Chevrolet	Tahoe - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Tahoe - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Chevrolet	Tahoe - 2WD	Amplifier (bose)	√	√	√	√	√	
2007	Chevrolet	Tahoe - 2WD	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Tahoe - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	Chevrolet	Tahoe - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Tahoe - 2WD	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Tahoe - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Tahoe - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Tahoe - 2WD	Passenger presence system	√	√	√	√		0512
2007	Chevrolet	Tahoe - 2WD	Park assist module	√	√	√	√	√	
2007	Chevrolet	Tahoe - 2WD	Memory seat module	√	√	√	√	√	
2007	Chevrolet	Tahoe - 2WD	Rear heated seat module	√	√	√	√		
2007	Chevrolet	Tahoe - 2WD	Body Control Module	√	√	√	√	√	0497
2007	Chevrolet	Tahoe - 2WD	Rollover sensor	√	√	√	√		0541
2007	Chevrolet	Tahoe - 2WD	Body Control Module	√	√	√	√	√	
2007	Chevrolet	Tahoe - 2WD	Assist step controller	√	√	√	√	√	0531
2007	Chevrolet	Tahoe - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Tahoe - 2WD	Radio	√	√	√	√	√	
2007	Chevrolet	Tahoe - 2WD	Personal audio link module	√	√	√			0528
2007	Chevrolet	Tahoe - 2WD	Liftgate module	√	√	√	√	√	
2007	Chevrolet	Tahoe - 2WD	Driver door switch	√	√	√	√	√	
2007	Chevrolet	Tahoe - 2WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	Chevrolet	Tahoe - 2WD	Electronic suension control	√	√	√	√	√	
2007	Chevrolet	Tahoe - 2WD	Trailer brake control module	√	√	√	√		
2007	Chevrolet	Tahoe - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Tahoe - 2WD	Transfer Case Control Module	√	√	√	√	√	0493

2007	Chevrolet	Tahoe - 2WD	Transmission control module		√	√	√	√	
2007	Chevrolet	Tahoe - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Tahoe - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Chevrolet	Tahoe - 2WD	Amplifier (bose)	√	√	√	√	√	
2007	Chevrolet	Tahoe - 2WD	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Tahoe - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	Chevrolet	Tahoe - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Tahoe - 2WD	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Tahoe - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Tahoe - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Tahoe - 2WD	Passenger presence system	√	√	√	√		0512
2007	Chevrolet	Tahoe - 2WD	Park assist module	√	√	√	√	√	
2007	Chevrolet	Tahoe - 2WD	Memory seat module	√	√	√	√	√	
2007	Chevrolet	Tahoe - 2WD	Rear heated seat module	√	√	√	√		
2007	Chevrolet	Tahoe - 2WD	Body Control Module	√	√	√	√	√	0497
2007	Chevrolet	Tahoe - 2WD	Rollover sensor	√	√	√	√		0541
2007	Chevrolet	Tahoe - 2WD	Body Control Module	√	√	√	√	√	
2007	Chevrolet	Tahoe - 2WD	Assist step controller	√	√	√	√	√	0531
2007	Chevrolet	Tahoe - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Tahoe - 2WD	Radio	√	√	√	√	√	
2007	Chevrolet	Tahoe - 2WD	Personal audio link module	√	√	√			0528
2007	Chevrolet	Tahoe - 2WD	Liftgate module	√	√	√	√	√	
2007	Chevrolet	Tahoe - 2WD	Driver door switch	√	√	√	√	√	
2007	Chevrolet	Tahoe - 2WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	Chevrolet	Tahoe - 2WD	Electronic suspension control	√	√	√	√	√	
2007	Chevrolet	Tahoe - 2WD	Trailer brake control module	√	√	√	√		
2007	Chevrolet	Tahoe - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Tahoe - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	Chevrolet	Tahoe - 4WD	Transmission control module		√	√	√	√	
2007	Chevrolet	Tahoe - 4WD	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Tahoe - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Chevrolet	Tahoe - 4WD	Amplifier (bose)	√	√	√	√	√	
2007	Chevrolet	Tahoe - 4WD	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Tahoe - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2007	Chevrolet	Tahoe - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Tahoe - 4WD	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Tahoe - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Tahoe - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Tahoe - 4WD	Passenger presence system	√	√	√	√		0512
2007	Chevrolet	Tahoe - 4WD	Park assist module	√	√	√	√	√	
2007	Chevrolet	Tahoe - 4WD	Memory seat module	√	√	√	√	√	

2007	Chevrolet	Tahoe - 4WD	Rear heated seat module	√	√	√	√		
2007	Chevrolet	Tahoe - 4WD	Body Control Module	√	√	√	√	√	0497
2007	Chevrolet	Tahoe - 4WD	Rollover sensor	√	√	√	√		0541
2007	Chevrolet	Tahoe - 4WD	Body Control Module	√	√	√	√	√	
2007	Chevrolet	Tahoe - 4WD	Assist step controller	√	√	√	√	√	0531
2007	Chevrolet	Tahoe - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Tahoe - 4WD	Radio	√	√	√	√	√	
2007	Chevrolet	Tahoe - 4WD	Personal audio link module	√	√	√			0528
2007	Chevrolet	Tahoe - 4WD	Liftgate module	√	√	√	√	√	
2007	Chevrolet	Tahoe - 4WD	Driver door switch	√	√	√	√	√	
2007	Chevrolet	Tahoe - 4WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	Chevrolet	Tahoe - 4WD	Electronic suspension control	√	√	√	√	√	
2007	Chevrolet	Tahoe - 4WD	Trailer brake control module	√	√	√	√		
2007	Chevrolet	Tahoe - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Tahoe - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	Chevrolet	Tahoe - 4WD	Transmission control module	√	√	√	√	√	
2007	Chevrolet	Tahoe - 4WD	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Tahoe - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Chevrolet	Tahoe - 4WD	Amplifier (bose)	√	√	√	√	√	
2007	Chevrolet	Tahoe - 4WD	Digital radio receiver	√	√	√	√		
2007	Chevrolet	Tahoe - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2007	Chevrolet	Tahoe - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	Tahoe - 4WD	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	Tahoe - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Chevrolet	Tahoe - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Chevrolet	Tahoe - 4WD	Passenger presence system	√	√	√	√		0512
2007	Chevrolet	Tahoe - 4WD	Park assist module	√	√	√	√	√	
2007	Chevrolet	Tahoe - 4WD	Memory seat module	√	√	√	√	√	
2007	Chevrolet	Tahoe - 4WD	Rear heated seat module	√	√	√	√		
2007	Chevrolet	Tahoe - 4WD	Body Control Module	√	√	√	√	√	0497
2007	Chevrolet	Tahoe - 4WD	Rollover sensor	√	√	√	√		0541
2007	Chevrolet	Tahoe - 4WD	Body Control Module	√	√	√	√	√	
2007	Chevrolet	Tahoe - 4WD	Assist step controller	√	√	√	√	√	0531
2007	Chevrolet	Tahoe - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Tahoe - 4WD	Radio	√	√	√	√	√	
2007	Chevrolet	Tahoe - 4WD	Personal audio link module	√	√	√			0528
2007	Chevrolet	Tahoe - 4WD	Liftgate module	√	√	√	√	√	
2007	Chevrolet	Tahoe - 4WD	Driver door switch	√	√	√	√	√	
2007	Chevrolet	Tahoe - 4WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	Chevrolet	Tahoe - 4WD	Electronic suspension control	√	√	√	√	√	
2007	Chevrolet	Tahoe - 4WD	Trailer brake control module	√	√	√	√		

2007	Chevrolet	Tahoe - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Tahoe - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	Chevrolet	TrailBlazer - 2WD	Powertrain control module		√	√	√	√	
2007	Chevrolet	TrailBlazer - 2WD	Transmission control module		√	√	√	√	
2007	Chevrolet	TrailBlazer - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	TrailBlazer - 2WD	Supplemental inflatable restraint	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 2WD	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	TrailBlazer - 2WD	Disc player and video dilay	√	√	√			
2007	Chevrolet	TrailBlazer - 2WD	Radio	√	√	√	√		
2007	Chevrolet	TrailBlazer - 2WD	Rear seat audio	√	√	√	√		
2007	Chevrolet	TrailBlazer - 2WD	Digital radio receiver	√	√	√	√		0516
2007	Chevrolet	TrailBlazer - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 2WD	Generator battery control module	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 2WD	Body Control Module	√	√	√	√	√	0550
2007	Chevrolet	TrailBlazer - 2WD	Driver door module	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 2WD	Driver seat module	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 2WD	HVAC Control Module	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 2WD	Passenger door module	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 2WD	Liftgate module	√	√	√	√	√	0159
2007	Chevrolet	TrailBlazer - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	TrailBlazer - 2WD	Passenger presence system	√	√	√	√	√	0512
2007	Chevrolet	TrailBlazer - 2WD	Navigation radio	√	√	√	√	√	0525
2007	Chevrolet	TrailBlazer - 2WD	Electronic Brake Control Module	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	Chevrolet	TrailBlazer - 2WD	Powertrain control module		√	√	√	√	
2007	Chevrolet	TrailBlazer - 2WD	Transmission control module		√	√	√	√	
2007	Chevrolet	TrailBlazer - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	TrailBlazer - 2WD	Supplemental inflatable restraint	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 2WD	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	TrailBlazer - 2WD	Disc player and video dilay	√	√	√			
2007	Chevrolet	TrailBlazer - 2WD	Radio	√	√	√	√		
2007	Chevrolet	TrailBlazer - 2WD	Rear seat audio	√	√	√	√		
2007	Chevrolet	TrailBlazer - 2WD	Digital radio receiver	√	√	√	√		0516
2007	Chevrolet	TrailBlazer - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 2WD	Generator battery control module	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 2WD	Body Control Module	√	√	√	√	√	0550
2007	Chevrolet	TrailBlazer - 2WD	Driver door module	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 2WD	Driver seat module	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 2WD	HVAC Control Module	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 2WD	Passenger door module	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 2WD	Liftgate module	√	√	√	√	√	0159

2007	Chevrolet	TrailBlazer - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	TrailBlazer - 2WD	Passenger presence system	√	√	√	√	√	0512
2007	Chevrolet	TrailBlazer - 2WD	Navigation radio	√	√	√	√	√	0525
2007	Chevrolet	TrailBlazer - 2WD	Electronic Brake Control Module	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	Chevrolet	TrailBlazer - 4WD	Powertrain control module		√	√	√	√	
2007	Chevrolet	TrailBlazer - 4WD	Transmission control module		√	√	√	√	
2007	Chevrolet	TrailBlazer - 4WD	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	TrailBlazer - 4WD	Supplemental inflatable restraint	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 4WD	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	TrailBlazer - 4WD	Disc player and video delay	√	√	√			
2007	Chevrolet	TrailBlazer - 4WD	Radio	√	√	√	√		
2007	Chevrolet	TrailBlazer - 4WD	Rear seat audio	√	√	√	√		
2007	Chevrolet	TrailBlazer - 4WD	Digital radio receiver	√	√	√	√		0516
2007	Chevrolet	TrailBlazer - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 4WD	Generator battery control module	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 4WD	Body Control Module	√	√	√	√	√	0550
2007	Chevrolet	TrailBlazer - 4WD	Driver door module	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 4WD	Driver seat module	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 4WD	HVAC Control Module	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 4WD	Passenger door module	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 4WD	Liftgate module	√	√	√	√	√	0159
2007	Chevrolet	TrailBlazer - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	TrailBlazer - 4WD	Passenger presence system	√	√	√	√	√	0512
2007	Chevrolet	TrailBlazer - 4WD	Navigation radio	√	√	√	√	√	0525
2007	Chevrolet	TrailBlazer - 4WD	Electronic Brake Control Module	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	Chevrolet	TrailBlazer - 4WD	Powertrain control module		√	√	√	√	
2007	Chevrolet	TrailBlazer - 4WD	Transmission control module		√	√	√	√	
2007	Chevrolet	TrailBlazer - 4WD	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	TrailBlazer - 4WD	Supplemental inflatable restraint	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 4WD	Theft Deterrent Module	√	√	√	√		
2007	Chevrolet	TrailBlazer - 4WD	Disc player and video delay	√	√	√			
2007	Chevrolet	TrailBlazer - 4WD	Radio	√	√	√	√		
2007	Chevrolet	TrailBlazer - 4WD	Rear seat audio	√	√	√	√		
2007	Chevrolet	TrailBlazer - 4WD	Digital radio receiver	√	√	√	√		0516
2007	Chevrolet	TrailBlazer - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 4WD	Generator battery control module	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 4WD	Body Control Module	√	√	√	√	√	0550
2007	Chevrolet	TrailBlazer - 4WD	Driver door module	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 4WD	Driver seat module	√	√	√	√	√	



2007	Chevrolet	TrailBlazer - 4WD	HVAC Control Module	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 4WD	Passenger door module	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 4WD	Liftgate module	√	√	√	√	√	0159
2007	Chevrolet	TrailBlazer - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	TrailBlazer - 4WD	Passenger presence system	√	√	√	√	√	0512
2007	Chevrolet	TrailBlazer - 4WD	Navigation radio	√	√	√	√	√	0525
2007	Chevrolet	TrailBlazer - 4WD	Electronic Brake Control Module	√	√	√	√	√	
2007	Chevrolet	TrailBlazer - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	Chevrolet	Uplander	Transmission control module		√	√	√	√	
2007	Chevrolet	Uplander	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Uplander	Passenger presence system		√	√			0512
2007	Chevrolet	Uplander	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Chevrolet	Uplander	Mobile digital media		√	√			
2007	Chevrolet	Uplander	Radio	√	√	√	√	√	0587 0524 0525
2007	Chevrolet	Uplander	Disc player and video dilay	√	√	√			
2007	Chevrolet	Uplander	Body Control Module	√	√	√	√	√	0499
2007	Chevrolet	Uplander	Left power sliding door module	√	√	√	√	√	
2007	Chevrolet	Uplander	Right power sliding door module	√	√	√	√	√	
2007	Chevrolet	Uplander	HVAC Control Module	√	√	√	√	√	
2007	Chevrolet	Uplander	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Uplander	Digital radio receiver	√	√	√	√	√	0516
2007	Chevrolet	Uplander	Navigation radio	√	√	√	√	√	0525
2007	Chevrolet	Uplander	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Uplander Ext.	Transmission control module		√	√	√	√	
2007	Chevrolet	Uplander Ext.	Engine Control Module	√	√	√	√	√	0493
2007	Chevrolet	Uplander Ext.	Passenger presence system		√	√			0512
2007	Chevrolet	Uplander Ext.	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Chevrolet	Uplander Ext.	Mobile digital media		√	√			
2007	Chevrolet	Uplander Ext.	Radio	√	√	√	√	√	0587 0524 0525
2007	Chevrolet	Uplander Ext.	Disc player and video dilay	√	√	√			
2007	Chevrolet	Uplander Ext.	Body Control Module	√	√	√	√	√	0499
2007	Chevrolet	Uplander Ext.	Left power sliding door module	√	√	√	√	√	
2007	Chevrolet	Uplander Ext.	Right power sliding door module	√	√	√	√	√	
2007	Chevrolet	Uplander Ext.	HVAC Control Module	√	√	√	√	√	
2007	Chevrolet	Uplander Ext.	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Chevrolet	Uplander Ext.	Digital radio receiver	√	√	√	√	√	0516
2007	Chevrolet	Uplander Ext.	Navigation radio	√	√	√	√	√	0525
2007	Chevrolet	Uplander Ext.	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Chevrolet	Others	Electronic Brake Control Module	√	√	√	√		0599
2007	Chevrolet	Others	Powertrain control module	√	√	√	√	√	0599
2007	Chevrolet	Others	Passenger presence system		√	√			0512

2007	Chevrolet	Others	Supplemental inflatable restraint	√	√	√	√	√	0639
2007	Chevrolet	Others	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Acadia - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Acadia - 2WD	Transmission control module		√	√	√	√	
2007	GMC truck	Acadia - 2WD	Digital radio receiver	√	√	√	√		
2007	GMC truck	Acadia - 2WD	Radio	√	√	√	√	√	
2007	GMC truck	Acadia - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Acadia - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Acadia - 2WD	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Acadia - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Acadia - 2WD	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Acadia - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Acadia - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Acadia - 2WD	Body Control Module						0499 0497
2007	GMC truck	Acadia - 2WD	Passenger presence system	√	√	√	√		0537
2007	GMC truck	Acadia - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Acadia - 2WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Acadia - 2WD	Park assist module	√	√	√	√	√	
2007	GMC truck	Acadia - 2WD	Head up dilay	√	√	√	√		
2007	GMC truck	Acadia - 2WD	Driver door switch	√	√	√	√	√	0527
2007	GMC truck	Acadia - 2WD	Passenger door switch	√	√	√	√	√	0527
2007	GMC truck	Acadia - 2WD	Liftgate module	√	√	√	√	√	0541
2007	GMC truck	Acadia - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Acadia - 2WD	Rear drive system	√	√	√	√	√	0530
2007	GMC truck	Acadia - 4WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Acadia - 4WD	Transmission control module		√	√	√	√	
2007	GMC truck	Acadia - 4WD	Digital radio receiver	√	√	√	√		
2007	GMC truck	Acadia - 4WD	Radio	√	√	√	√	√	
2007	GMC truck	Acadia - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Acadia - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Acadia - 4WD	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Acadia - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Acadia - 4WD	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Acadia - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Acadia - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Acadia - 4WD	Body Control Module						0499 0497
2007	GMC truck	Acadia - 4WD	Passenger presence system	√	√	√	√		0537
2007	GMC truck	Acadia - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Acadia - 4WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Acadia - 4WD	Park assist module	√	√	√	√	√	
2007	GMC truck	Acadia - 4WD	Head up dilay	√	√	√	√		

2007	GMC truck	Acadia - 4WD	Driver door switch	√	√	√	√	√	0527
2007	GMC truck	Acadia - 4WD	Passenger door switch	√	√	√	√	√	0527
2007	GMC truck	Acadia - 4WD	Liftgate module	√	√	√	√	√	0541
2007	GMC truck	Acadia - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Acadia - 4WD	Rear drive system	√	√	√	√	√	0530
2007	GMC truck	Canyon Pickup - 2WD	Powertrain control module		√	√	√	√	0638
2007	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2007	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2007	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	GMC truck	Canyon Pickup - 2WD	Generator battery control module	√	√	√	√	√	
2007	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550 0159
2007	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Canyon Pickup - 2WD	Passenger presence system	√	√	√	√	√	0512
2007	GMC truck	Canyon Pickup - 2WD	Electronic Brake Control Module	√	√	√	√	√	0638
2007	GMC truck	Canyon Pickup - 2WD	Transfer Case Control Module	√	√	√	√	√	0516
2007	GMC truck	Canyon Pickup - 2WD	Powertrain control module		√	√	√	√	0638
2007	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2007	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2007	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	GMC truck	Canyon Pickup - 2WD	Generator battery control module	√	√	√	√	√	
2007	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550 0159
2007	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Canyon Pickup - 2WD	Passenger presence system	√	√	√	√	√	0512
2007	GMC truck	Canyon Pickup - 2WD	Electronic Brake Control Module	√	√	√	√	√	0638
2007	GMC truck	Canyon Pickup - 2WD	Transfer Case Control Module	√	√	√	√	√	0516
2007	GMC truck	Canyon Pickup - 4WD	Powertrain control module		√	√	√	√	0638
2007	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2007	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2007	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	GMC truck	Canyon Pickup - 4WD	Generator battery control module	√	√	√	√	√	
2007	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550 0159
2007	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Canyon Pickup - 4WD	Passenger presence system	√	√	√	√	√	0512
2007	GMC truck	Canyon Pickup - 4WD	Electronic Brake Control Module	√	√	√	√	√	0638
2007	GMC truck	Canyon Pickup - 4WD	Transfer Case Control Module	√	√	√	√	√	0516
2007	GMC truck	Canyon Pickup - 4WD	Powertrain control module		√	√	√	√	0638
2007	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2007	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		

2007	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	GMC truck	Canyon Pickup - 4WD	Generator battery control module	√	√	√	√	√	
2007	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550 0159
2007	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Canyon Pickup - 4WD	Passenger presence system	√	√	√	√	√	0512
2007	GMC truck	Canyon Pickup - 4WD	Electronic Brake Control Module	√	√	√	√	√	0638
2007	GMC truck	Canyon Pickup - 4WD	Transfer Case Control Module	√	√	√	√	√	0516
2007	GMC truck	Envoy - 2WD	Powertrain control module		√	√	√	√	
2007	GMC truck	Envoy - 2WD	Transmission control module		√	√	√	√	
2007	GMC truck	Envoy - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Envoy - 2WD	Supplemental inflatable restraint	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Disc player and video delay	√	√	√			
2007	GMC truck	Envoy - 2WD	Radio	√	√	√	√		
2007	GMC truck	Envoy - 2WD	Rear seat audio	√	√	√	√		
2007	GMC truck	Envoy - 2WD	Digital radio receiver	√	√	√	√		0516
2007	GMC truck	Envoy - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Generator battery control module	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Body Control Module	√	√	√	√	√	0550
2007	GMC truck	Envoy - 2WD	Driver door module	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Driver seat module	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	HVAC Control Module	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Passenger door module	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Liftgate module	√	√	√	√	√	0159
2007	GMC truck	Envoy - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Envoy - 2WD	Passenger presence system	√	√	√	√	√	0512
2007	GMC truck	Envoy - 2WD	Navigation radio	√	√	√	√	√	0525
2007	GMC truck	Envoy - 2WD	Electronic Brake Control Module	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Envoy - 2WD	Powertrain control module		√	√	√	√	
2007	GMC truck	Envoy - 2WD	Transmission control module		√	√	√	√	
2007	GMC truck	Envoy - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Envoy - 2WD	Supplemental inflatable restraint	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Disc player and video delay	√	√	√			
2007	GMC truck	Envoy - 2WD	Radio	√	√	√	√		
2007	GMC truck	Envoy - 2WD	Rear seat audio	√	√	√	√		
2007	GMC truck	Envoy - 2WD	Digital radio receiver	√	√	√	√		0516
2007	GMC truck	Envoy - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Generator battery control module	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Body Control Module	√	√	√	√	√	0550
2007	GMC truck	Envoy - 2WD	Driver door module	√	√	√	√	√	

2007	GMC truck	Envoy - 2WD	Driver seat module	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	HVAC Control Module	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Passenger door module	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Liftgate module	√	√	√	√	√	0159
2007	GMC truck	Envoy - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Envoy - 2WD	Passenger presence system	√	√	√	√	√	0512
2007	GMC truck	Envoy - 2WD	Navigation radio	√	√	√	√	√	0525
2007	GMC truck	Envoy - 2WD	Electronic Brake Control Module	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Envoy - 4WD	Powertrain control module		√	√	√	√	
2007	GMC truck	Envoy - 4WD	Transmission control module		√	√	√	√	
2007	GMC truck	Envoy - 4WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Envoy - 4WD	Supplemental inflatable restraint	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Disc player and video delay	√	√	√			
2007	GMC truck	Envoy - 4WD	Radio	√	√	√	√		
2007	GMC truck	Envoy - 4WD	Rear seat audio	√	√	√	√		
2007	GMC truck	Envoy - 4WD	Digital radio receiver	√	√	√	√		0516
2007	GMC truck	Envoy - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Generator battery control module	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Body Control Module	√	√	√	√	√	0550
2007	GMC truck	Envoy - 4WD	Driver door module	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Driver seat module	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	HVAC Control Module	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Passenger door module	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Liftgate module	√	√	√	√	√	0159
2007	GMC truck	Envoy - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Envoy - 4WD	Passenger presence system	√	√	√	√	√	0512
2007	GMC truck	Envoy - 4WD	Navigation radio	√	√	√	√	√	0525
2007	GMC truck	Envoy - 4WD	Electronic Brake Control Module	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Envoy - 4WD	Powertrain control module		√	√	√	√	
2007	GMC truck	Envoy - 4WD	Transmission control module		√	√	√	√	
2007	GMC truck	Envoy - 4WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Envoy - 4WD	Supplemental inflatable restraint	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Disc player and video delay	√	√	√			
2007	GMC truck	Envoy - 4WD	Radio	√	√	√	√		
2007	GMC truck	Envoy - 4WD	Rear seat audio	√	√	√	√		
2007	GMC truck	Envoy - 4WD	Digital radio receiver	√	√	√	√		0516
2007	GMC truck	Envoy - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Generator battery control module	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Body Control Module	√	√	√	√	√	0550

2007	GMC truck	Envoy - 4WD	Driver door module	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Driver seat module	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	HVAC Control Module	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Passenger door module	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Liftgate module	√	√	√	√	√	0159
2007	GMC truck	Envoy - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Envoy - 4WD	Passenger presence system	√	√	√	√	√	0512
2007	GMC truck	Envoy - 4WD	Navigation radio	√	√	√	√	√	0525
2007	GMC truck	Envoy - 4WD	Electronic Brake Control Module	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Savana	Powertrain control module		√	√	√	√	0638
2007	GMC truck	Savana	Transmission control module		√	√	√	√	
2007	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2007	GMC truck	Savana	Radio	√	√	√	√	√	
2007	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2007	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Savana	Passenger presence system		√	√			
2007	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	
2007	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	
2007	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Savana	Body Control Module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	
2007	GMC truck	Savana	Powertrain control module		√	√	√	√	0638
2007	GMC truck	Savana	Transmission control module		√	√	√	√	
2007	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2007	GMC truck	Savana	Radio	√	√	√	√	√	
2007	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2007	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Savana	Passenger presence system		√	√			
2007	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	
2007	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	
2007	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Savana	Body Control Module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	
2007	GMC truck	Savana	Powertrain control module		√	√	√	√	
2007	GMC truck	Savana	Radio	√	√	√	√	√	
2007	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2007	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Savana	Passenger presence system		√	√			
2007	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	
2007	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	

2007	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Savana	Body Control Module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	
2007	GMC truck	Savana	Powertrain control module		√	√	√	√	
2007	GMC truck	Savana	Radio	√	√	√	√		
2007	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2007	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Savana	Passenger presence system		√	√			
2007	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	
2007	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	
2007	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Savana	Body Control Module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	
2007	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra	Transmission control module	√	√	√	√	√	0493
2007	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Sierra	Radio	√	√	√	√	√	
2007	GMC truck	Sierra	Digital radio receiver	√	√	√	√		
2007	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Sierra	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Sierra	Park assist module	√	√	√	√	√	
2007	GMC truck	Sierra	Memory seat module	√	√	√	√	√	
2007	GMC truck	Sierra	Rear heated seat module	√	√	√	√		
2007	GMC truck	Sierra	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Sierra	Body Control Module	√	√	√	√	√	
2007	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Sierra	Personal audio link module	√	√	√			0528
2007	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Sierra	Driver door switch	√	√	√	√	√	
2007	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra	Electronic suspension control	√	√	√	√	√	
2007	GMC truck	Sierra	Trailer brake control module	√	√	√	√		
2007	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Sierra	Powertrain control module		√	√	√	√	0638
2007	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	0631



2007	GMC truck	Sierra	CD changer	√	√	√			
2007	GMC truck	Sierra	Chime	√	√	√	√	√	
2007	GMC truck	Sierra	Digital radio receiver	√	√	√	√		0516
2007	GMC truck	Sierra	Disc player and video delay	√	√	√			
2007	GMC truck	Sierra	Radio	√	√	√	√		
2007	GMC truck	Sierra	Rear seat audio	√	√	√	√		
2007	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Sierra	Passenger presence system		√	√			0512
2007	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0639
2007	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra	Body Control Module	√	√	√	√	√	
2007	GMC truck	Sierra	Generator battery control module	√	√	√	√	√	
2007	GMC truck	Sierra	Driver door module	√	√	√	√	√	
2007	GMC truck	Sierra	Driver seat module	√	√	√	√	√	
2007	GMC truck	Sierra	Rear aux. climate module	√	√	√	√	√	
2007	GMC truck	Sierra	Rear HVAC	√	√	√	√		
2007	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	
2007	GMC truck	Sierra	Passenger door module	√	√	√	√	√	0159
2007	GMC truck	Sierra	Navigation radio	√	√	√	√	√	0525
2007	GMC truck	Sierra	ABS	√	√	√	√	√	
2007	GMC truck	Sierra	EHPS (parallel hybrid)	√	√	√	√	√	
2007	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra	Transmission control module		√	√	√	√	
2007	GMC truck	Sierra	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Sierra	Radio	√	√	√	√	√	
2007	GMC truck	Sierra	Digital radio receiver	√	√	√	√		
2007	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Sierra	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Sierra	Park assist module	√	√	√	√	√	
2007	GMC truck	Sierra	Memory seat module	√	√	√	√	√	
2007	GMC truck	Sierra	Rear heated seat module	√	√	√	√		
2007	GMC truck	Sierra	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Sierra	Body Control Module	√	√	√	√	√	
2007	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495



2007	GMC truck	Sierra	Personal audio link module	√	√	√			0528
2007	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Sierra	Driver door switch	√	√	√	√	√	
2007	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra	Electronic suension control	√	√	√	√	√	
2007	GMC truck	Sierra	Trailer brake control module	√	√	√	√		
2007	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Sierra	Powertrain control module		√	√	√	√	0638
2007	GMC truck	Sierra	Transfer Case Control Module		√	√	√	√	0638
2007	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	0631
2007	GMC truck	Sierra	CD changer	√	√	√			
2007	GMC truck	Sierra	Chime	√	√	√	√	√	
2007	GMC truck	Sierra	Digital radio receiver	√	√	√	√		0516
2007	GMC truck	Sierra	Disc player and video dilay	√	√	√			
2007	GMC truck	Sierra	Radio	√	√	√	√		
2007	GMC truck	Sierra	Rear seat audio	√	√	√	√		
2007	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Sierra	Passenger presence system		√	√			0512
2007	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0639
2007	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra	Body Control Module	√	√	√	√	√	
2007	GMC truck	Sierra	Generator battery control module	√	√	√	√	√	
2007	GMC truck	Sierra	Driver door module	√	√	√	√	√	
2007	GMC truck	Sierra	Driver seat module	√	√	√	√	√	
2007	GMC truck	Sierra	Rear aux. climate module	√	√	√	√	√	
2007	GMC truck	Sierra	Rear HVAC	√	√	√	√		
2007	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	
2007	GMC truck	Sierra	Passenger door module	√	√	√	√	√	0159
2007	GMC truck	Sierra	Navigation radio	√	√	√	√	√	0525
2007	GMC truck	Sierra	ABS	√	√	√	√	√	
2007	GMC truck	Sierra	EHPS (parallel hybrid)	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Classic	Transmission control module	√	√	√	√	√	0539 0571 0540 0540
2007	GMC truck	Sierra Classic	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Sierra Classic	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Radio	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Digital radio receiver	√	√	√	√		
2007	GMC truck	Sierra Classic	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Sierra Classic	Remote control door lock receiver	√	√	√	√	√	0513 0159

2007	GMC truck	Sierra Classic	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Sierra Classic	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Sierra Classic	Park assist module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Memory seat module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Rear heated seat module	√	√	√	√		
2007	GMC truck	Sierra Classic	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Sierra Classic	Body Control Module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Sierra Classic	Personal audio link module	√	√	√			0528
2007	GMC truck	Sierra Classic	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Sierra Classic	Driver door switch	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra Classic	Electronic suspension control	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Trailer brake control module	√	√	√	√		
2007	GMC truck	Sierra Classic	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Sierra Classic	Powertrain control module		√	√	√	√	0638
2007	GMC truck	Sierra Classic	Battery Energy Control Module		√	√	√	√	
2007	GMC truck	Sierra Classic	Transmission control module		√	√	√	√	
2007	GMC truck	Sierra Classic	Engine Control Module	√	√	√	√	√	0539 0540 0540
2007	GMC truck	Sierra Classic	Amplifier (bose)	√	√	√	√	√	0631
2007	GMC truck	Sierra Classic	CD changer	√	√	√			
2007	GMC truck	Sierra Classic	Chime	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Digital radio receiver	√	√	√	√		0516
2007	GMC truck	Sierra Classic	Disc player and video delay	√	√	√			
2007	GMC truck	Sierra Classic	Radio	√	√	√	√		
2007	GMC truck	Sierra Classic	Rear seat audio	√	√	√	√		
2007	GMC truck	Sierra Classic	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Sierra Classic	Passenger presence system		√	√			0512
2007	GMC truck	Sierra Classic	Supplemental inflatable restraint	√	√	√	√	√	0639
2007	GMC truck	Sierra Classic	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Body Control Module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Generator battery control module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Driver door module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Driver seat module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Rear aux. climate module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Rear HVAC	√	√	√	√		
2007	GMC truck	Sierra Classic	HVAC Control Module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Passenger door module	√	√	√	√	√	0159
2007	GMC truck	Sierra Classic	Navigation radio	√	√	√	√	√	0525
2007	GMC truck	Sierra Classic	ABS	√	√	√	√	√	
2007	GMC truck	Sierra Classic	EHPS (parallel hybrid)	√	√	√	√	√	

2007	GMC truck	Sierra Classic	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Classic	Transmission control module		√	√	√	√	
2007	GMC truck	Sierra Classic	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Classic	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Sierra Classic	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Radio	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Digital radio receiver	√	√	√	√		
2007	GMC truck	Sierra Classic	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Sierra Classic	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra Classic	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Sierra Classic	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Sierra Classic	Park assist module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Memory seat module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Rear heated seat module	√	√	√	√		
2007	GMC truck	Sierra Classic	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Sierra Classic	Body Control Module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Sierra Classic	Personal audio link module	√	√	√			0528
2007	GMC truck	Sierra Classic	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Sierra Classic	Driver door switch	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra Classic	Electronic suspension control	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Trailer brake control module	√	√	√	√		
2007	GMC truck	Sierra Classic	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Sierra Classic	Powertrain control module		√	√	√	√	0638
2007	GMC truck	Sierra Classic	Transfer Case Control Module		√	√	√	√	0638
2007	GMC truck	Sierra Classic	Battery Energy Control Module		√	√	√	√	
2007	GMC truck	Sierra Classic	Transmission control module		√	√	√	√	
2007	GMC truck	Sierra Classic	Engine Control Module	√	√	√	√	√	0539 0540 0540
2007	GMC truck	Sierra Classic	Amplifier (bose)	√	√	√	√	√	0631
2007	GMC truck	Sierra Classic	CD changer	√	√	√			
2007	GMC truck	Sierra Classic	Chime	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Digital radio receiver	√	√	√	√		0516
2007	GMC truck	Sierra Classic	Disc player and video delay	√	√	√			
2007	GMC truck	Sierra Classic	Radio	√	√	√	√		
2007	GMC truck	Sierra Classic	Rear seat audio	√	√	√	√		
2007	GMC truck	Sierra Classic	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Sierra Classic	Passenger presence system		√	√			0512
2007	GMC truck	Sierra Classic	Supplemental inflatable restraint	√	√	√	√	√	0639

2007	GMC truck	Sierra Classic	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Body Control Module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Generator battery control module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Driver door module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Driver seat module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Rear aux. climate module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Rear HVAC	√	√	√	√		
2007	GMC truck	Sierra Classic	HVAC Control Module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Passenger door module	√	√	√	√	√	0159
2007	GMC truck	Sierra Classic	Navigation radio	√	√	√	√	√	0525
2007	GMC truck	Sierra Classic	ABS	√	√	√	√	√	
2007	GMC truck	Sierra Classic	EHPS (parallel hybrid)	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali - 2WD	Transmission control module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Sierra Denali - 2WD	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Radio	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Digital radio receiver	√	√	√	√		
2007	GMC truck	Sierra Denali - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Sierra Denali - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra Denali - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Sierra Denali - 2WD	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Sierra Denali - 2WD	Park assist module	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Rear heated seat module	√	√	√	√		
2007	GMC truck	Sierra Denali - 2WD	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Sierra Denali - 2WD	Body Control Module	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Sierra Denali - 2WD	Personal audio link module	√	√	√			0528
2007	GMC truck	Sierra Denali - 2WD	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Sierra Denali - 2WD	Driver door switch	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra Denali - 2WD	Electronic suspension control	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Trailer brake control module	√	√	√	√		
2007	GMC truck	Sierra Denali - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Sierra Denali - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali - 2WD	Transmission control module	√	√	√	√	√	0493

2007	GMC truck	Sierra Denali - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Sierra Denali - 2WD	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Radio	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Digital radio receiver	√	√	√	√		
2007	GMC truck	Sierra Denali - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Sierra Denali - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra Denali - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Sierra Denali - 2WD	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Sierra Denali - 2WD	Park assist module	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Rear heated seat module	√	√	√	√		
2007	GMC truck	Sierra Denali - 2WD	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Sierra Denali - 2WD	Body Control Module	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Sierra Denali - 2WD	Personal audio link module	√	√	√			0528
2007	GMC truck	Sierra Denali - 2WD	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Sierra Denali - 2WD	Driver door switch	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra Denali - 2WD	Electronic suspension control	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Trailer brake control module	√	√	√	√		
2007	GMC truck	Sierra Denali - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Sierra Denali - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali Classic	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali Classic	Transmission control module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali Classic	Fuel Pump Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali Classic	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Sierra Denali Classic	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Radio	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Digital radio receiver	√	√	√	√		
2007	GMC truck	Sierra Denali Classic	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Sierra Denali Classic	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra Denali Classic	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Sierra Denali Classic	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Sierra Denali Classic	Park assist module	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Memory seat module	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Rear heated seat module	√	√	√	√		

2007	GMC truck	Sierra Denali Classic	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Sierra Denali Classic	Body Control Module	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Sierra Denali Classic	Personal audio link module	√	√	√			0528
2007	GMC truck	Sierra Denali Classic	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Sierra Denali Classic	Driver door switch	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra Denali Classic	Electronic suension control	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Trailer brake control module	√	√	√	√		
2007	GMC truck	Sierra Denali Classic	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Sierra Denali Classic	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali Classic	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali Classic	Transmission control module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali Classic	Fuel Pump Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali Classic	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Sierra Denali Classic	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Radio	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Digital radio receiver	√	√	√	√		
2007	GMC truck	Sierra Denali Classic	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Sierra Denali Classic	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra Denali Classic	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Sierra Denali Classic	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Sierra Denali Classic	Park assist module	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Memory seat module	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Rear heated seat module	√	√	√	√		
2007	GMC truck	Sierra Denali Classic	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Sierra Denali Classic	Body Control Module	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Sierra Denali Classic	Personal audio link module	√	√	√			0528
2007	GMC truck	Sierra Denali Classic	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Sierra Denali Classic	Driver door switch	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra Denali Classic	Electronic suension control	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Trailer brake control module	√	√	√	√		
2007	GMC truck	Sierra Denali Classic	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Sierra Denali Classic	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon - 2WD	Transmission control module		√	√	√	√	
2007	GMC truck	Yukon - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526

2007	GMC truck	Yukon - 2WD	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Digital radio receiver	√	√	√	√		
2007	GMC truck	Yukon - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Yukon - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Yukon - 2WD	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Yukon - 2WD	Park assist module	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Rear heated seat module	√	√	√	√		
2007	GMC truck	Yukon - 2WD	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Yukon - 2WD	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Yukon - 2WD	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon - 2WD	Radio	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Personal audio link module	√	√	√			0528
2007	GMC truck	Yukon - 2WD	Liftgate module	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Driver door switch	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon - 2WD	Electronic suspension control	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Trailer brake control module	√	√	√	√		
2007	GMC truck	Yukon - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Yukon - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon - 2WD	Transmission control module		√	√	√	√	
2007	GMC truck	Yukon - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Yukon - 2WD	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Digital radio receiver	√	√	√	√		
2007	GMC truck	Yukon - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Yukon - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Yukon - 2WD	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Yukon - 2WD	Park assist module	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Rear heated seat module	√	√	√	√		
2007	GMC truck	Yukon - 2WD	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Yukon - 2WD	Rollover sensor	√	√	√	√		0541



2007	GMC truck	Yukon - 2WD	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon - 2WD	Radio	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Personal audio link module	√	√	√			0528
2007	GMC truck	Yukon - 2WD	Liftgate module	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Driver door switch	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon - 2WD	Electronic suension control	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Trailer brake control module	√	√	√	√		
2007	GMC truck	Yukon - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Yukon - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon - 4WD	Transmission control module		√	√	√	√	
2007	GMC truck	Yukon - 4WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Yukon - 4WD	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Digital radio receiver	√	√	√	√		
2007	GMC truck	Yukon - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Yukon - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Yukon - 4WD	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Yukon - 4WD	Park assist module	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Rear heated seat module	√	√	√	√		
2007	GMC truck	Yukon - 4WD	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Yukon - 4WD	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Yukon - 4WD	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon - 4WD	Radio	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Personal audio link module	√	√	√			0528
2007	GMC truck	Yukon - 4WD	Liftgate module	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Driver door switch	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon - 4WD	Electronic suension control	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Trailer brake control module	√	√	√	√		
2007	GMC truck	Yukon - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Yukon - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon - 4WD	Transmission control module		√	√	√	√	



2007	GMC truck	Yukon - 4WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Yukon - 4WD	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Digital radio receiver	√	√	√	√		
2007	GMC truck	Yukon - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Yukon - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Yukon - 4WD	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Yukon - 4WD	Park assist module	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Rear heated seat module	√	√	√	√		
2007	GMC truck	Yukon - 4WD	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Yukon - 4WD	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Yukon - 4WD	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon - 4WD	Radio	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Personal audio link module	√	√	√			0528
2007	GMC truck	Yukon - 4WD	Liftgate module	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Driver door switch	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon - 4WD	Electronic suspension control	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Trailer brake control module	√	√	√	√		
2007	GMC truck	Yukon - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Yukon - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon Denali	Transmission control module		√	√	√	√	
2007	GMC truck	Yukon Denali	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon Denali	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Yukon Denali	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Digital radio receiver	√	√	√	√		
2007	GMC truck	Yukon Denali	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Yukon Denali	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon Denali	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Yukon Denali	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Yukon Denali	Park assist module	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Memory seat module	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Rear heated seat module	√	√	√	√		

2007	GMC truck	Yukon Denali	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Yukon Denali	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Yukon Denali	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon Denali	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon Denali	Radio	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Personal audio link module	√	√	√			0528
2007	GMC truck	Yukon Denali	Liftgate module	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Driver door switch	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon Denali	Electronic suension control	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Trailer brake control module	√	√	√	√		
2007	GMC truck	Yukon Denali	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Yukon Denali	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon Denali	Transmission control module		√	√	√	√	
2007	GMC truck	Yukon Denali	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon Denali	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Yukon Denali	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Digital radio receiver	√	√	√	√		
2007	GMC truck	Yukon Denali	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Yukon Denali	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon Denali	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Yukon Denali	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Yukon Denali	Park assist module	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Memory seat module	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Rear heated seat module	√	√	√	√		
2007	GMC truck	Yukon Denali	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Yukon Denali	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Yukon Denali	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon Denali	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon Denali	Radio	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Personal audio link module	√	√	√			0528
2007	GMC truck	Yukon Denali	Liftgate module	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Driver door switch	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon Denali	Electronic suension control	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Trailer brake control module	√	√	√	√		
2007	GMC truck	Yukon Denali	Electronic Brake Control Module	√	√	√	√	√	0506

2007	GMC truck	Yukon Denali	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 2WD	Transmission control module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Yukon XL - 2WD	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Digital radio receiver	√	√	√	√		
2007	GMC truck	Yukon XL - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Yukon XL - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon XL - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Yukon XL - 2WD	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Yukon XL - 2WD	Park assist module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Rear heated seat module	√	√	√	√		
2007	GMC truck	Yukon XL - 2WD	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Yukon XL - 2WD	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Yukon XL - 2WD	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon XL - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon XL - 2WD	Radio	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Personal audio link module	√	√	√			0528
2007	GMC truck	Yukon XL - 2WD	Liftgate module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Driver door switch	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon XL - 2WD	Electronic suspension control	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Trailer brake control module	√	√	√	√		
2007	GMC truck	Yukon XL - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Yukon XL - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 2WD	Transmission control module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Yukon XL - 2WD	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Digital radio receiver	√	√	√	√		
2007	GMC truck	Yukon XL - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Yukon XL - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon XL - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Yukon XL - 2WD	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Yukon XL - 2WD	Park assist module	√	√	√	√	√	

2007	GMC truck	Yukon XL - 2WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Rear heated seat module	√	√	√	√		
2007	GMC truck	Yukon XL - 2WD	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Yukon XL - 2WD	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Yukon XL - 2WD	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon XL - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon XL - 2WD	Radio	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Personal audio link module	√	√	√			0528
2007	GMC truck	Yukon XL - 2WD	Liftgate module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Driver door switch	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon XL - 2WD	Electronic suension control	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Trailer brake control module	√	√	√	√		
2007	GMC truck	Yukon XL - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Yukon XL - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 4WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 4WD	Transmission control module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Yukon XL - 4WD	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Digital radio receiver	√	√	√	√		
2007	GMC truck	Yukon XL - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Yukon XL - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon XL - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Yukon XL - 4WD	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Yukon XL - 4WD	Park assist module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Rear heated seat module	√	√	√	√		
2007	GMC truck	Yukon XL - 4WD	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Yukon XL - 4WD	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Yukon XL - 4WD	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon XL - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon XL - 4WD	Radio	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Personal audio link module	√	√	√			0528
2007	GMC truck	Yukon XL - 4WD	Liftgate module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Driver door switch	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon XL - 4WD	Electronic suension control	√	√	√	√	√	

2007	GMC truck	Yukon XL - 4WD	Trailer brake control module	√	√	√	√		
2007	GMC truck	Yukon XL - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Yukon XL - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 4WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 4WD	Transmission control module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Yukon XL - 4WD	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Digital radio receiver	√	√	√	√		
2007	GMC truck	Yukon XL - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Yukon XL - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon XL - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Yukon XL - 4WD	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Yukon XL - 4WD	Park assist module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Rear heated seat module	√	√	√	√		
2007	GMC truck	Yukon XL - 4WD	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Yukon XL - 4WD	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Yukon XL - 4WD	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon XL - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon XL - 4WD	Radio	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Personal audio link module	√	√	√			0528
2007	GMC truck	Yukon XL - 4WD	Liftgate module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Driver door switch	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon XL - 4WD	Electronic suspension control	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Trailer brake control module	√	√	√	√		
2007	GMC truck	Yukon XL - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Yukon XL - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL Denali	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL Denali	Transmission control module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL Denali	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Yukon XL Denali	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Digital radio receiver	√	√	√	√		
2007	GMC truck	Yukon XL Denali	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Yukon XL Denali	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon XL Denali	Supplemental inflatable restraint	√	√	√	√	√	0497

2007	GMC truck	Yukon XL Denali	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Yukon XL Denali	Park assist module	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Memory seat module	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Rear heated seat module	√	√	√	√		
2007	GMC truck	Yukon XL Denali	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Yukon XL Denali	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Yukon XL Denali	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon XL Denali	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon XL Denali	Radio	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Personal audio link module	√	√	√			0528
2007	GMC truck	Yukon XL Denali	Liftgate module	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Driver door switch	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon XL Denali	Electronic suspension control	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Trailer brake control module	√	√	√	√		
2007	GMC truck	Yukon XL Denali	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Yukon XL Denali	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL Denali	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL Denali	Transmission control module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL Denali	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Yukon XL Denali	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Digital radio receiver	√	√	√	√		
2007	GMC truck	Yukon XL Denali	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Yukon XL Denali	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon XL Denali	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Yukon XL Denali	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Yukon XL Denali	Park assist module	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Memory seat module	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Rear heated seat module	√	√	√	√		
2007	GMC truck	Yukon XL Denali	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Yukon XL Denali	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Yukon XL Denali	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon XL Denali	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon XL Denali	Radio	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Personal audio link module	√	√	√			0528
2007	GMC truck	Yukon XL Denali	Liftgate module	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Driver door switch	√	√	√	√	√	

2007	GMC truck	Yukon XL Denali	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon XL Denali	Electronic suension control	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Trailer brake control module	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Yukon XL Denali	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Others	Passenger presence system		√	√			0512
2007	GMC truck	Others	Supplemental inflatable restraint	√	√	√	√	√	0639
2007	Pontiac	Montana SV6	Transmission control module		√	√	√	√	
2007	Pontiac	Montana SV6	Engine Control Module	√	√	√	√	√	0493
2007	Pontiac	Montana SV6	Passenger presence system		√	√			0512
2007	Pontiac	Montana SV6	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Pontiac	Montana SV6	Mobile digital media		√	√			
2007	Pontiac	Montana SV6	Radio	√	√	√	√	√	0587 0524 0525
2007	Pontiac	Montana SV6	Disc player and video dilay	√	√	√			
2007	Pontiac	Montana SV6	Body Control Module	√	√	√	√	√	0499
2007	Pontiac	Montana SV6	Left power sliding door module	√	√	√	√	√	
2007	Pontiac	Montana SV6	Right power sliding door module	√	√	√	√	√	
2007	Pontiac	Montana SV6	HVAC Control Module	√	√	√	√	√	
2007	Pontiac	Montana SV6	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Pontiac	Montana SV6	Digital radio receiver	√	√	√	√	√	0516
2007	Pontiac	Montana SV6	Navigation radio	√	√	√	√	√	0525
2007	Pontiac	Montana SV6	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Pontiac	Montana SV6 Ext.	Transmission control module		√	√	√	√	
2007	Pontiac	Montana SV6 Ext.	Engine Control Module	√	√	√	√	√	0493
2007	Pontiac	Montana SV6 Ext.	Passenger presence system		√	√			0512
2007	Pontiac	Montana SV6 Ext.	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Pontiac	Montana SV6 Ext.	Mobile digital media		√	√			
2007	Pontiac	Montana SV6 Ext.	Radio	√	√	√	√	√	0587 0524 0525
2007	Pontiac	Montana SV6 Ext.	Disc player and video dilay	√	√	√			
2007	Pontiac	Montana SV6 Ext.	Body Control Module	√	√	√	√	√	0499
2007	Pontiac	Montana SV6 Ext.	Left power sliding door module	√	√	√	√	√	
2007	Pontiac	Montana SV6 Ext.	Right power sliding door module	√	√	√	√	√	
2007	Pontiac	Montana SV6 Ext.	HVAC Control Module	√	√	√	√	√	
2007	Pontiac	Montana SV6 Ext.	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Pontiac	Montana SV6 Ext.	Digital radio receiver	√	√	√	√	√	0516
2007	Pontiac	Montana SV6 Ext.	Navigation radio	√	√	√	√	√	0525
2007	Pontiac	Montana SV6 Ext.	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Pontiac	Torrent	Engine Control Module	√	√	√	√	√	0493
2007	Pontiac	Torrent	Rear drive system	√	√	√	√		0530
2007	Pontiac	Torrent	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Pontiac	Torrent	Radio	√	√	√	√	√	



2007	Pontiac	Torrent	Digital radio receiver	√	√	√	√		
2007	Pontiac	Torrent	Theft Deterrent Module	√	√	√	√		
2007	Pontiac	Torrent	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Pontiac	Torrent	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Pontiac	Torrent	Heated seat module	√	√	√	√		
2007	Pontiac	Torrent	Instrument panel cluster	√	√	√	√	√	
2007	Pontiac	Torrent	Passenger presence system	√	√	√	√		0537
2007	Pontiac	Torrent	Rollover sensor	√	√	√	√		0541
2007	Pontiac	Torrent	Body Control Module	√	√	√	√	√	0499 0497
2007	Pontiac	Torrent	HVAC Control Module	√	√	√	√	√	0500
2007	Pontiac	Torrent	Power steering control module		√	√	√		
2007	Pontiac	Torrent	Electronic Brake Control Module	√	√	√	√	√	
2007	Saturn	OUTLOOK - AWD	Engine Control Module	√	√	√	√	√	0493
2007	Saturn	OUTLOOK - AWD	Transmission control module		√	√	√	√	
2007	Saturn	OUTLOOK - AWD	Digital radio receiver	√	√	√	√		
2007	Saturn	OUTLOOK - AWD	Radio	√	√	√	√	√	
2007	Saturn	OUTLOOK - AWD	Rear HVAC/RSA	√	√	√	√	√	
2007	Saturn	OUTLOOK - AWD	Instrument panel cluster	√	√	√	√	√	
2007	Saturn	OUTLOOK - AWD	Rollover sensor	√	√	√	√		0541
2007	Saturn	OUTLOOK - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Saturn	OUTLOOK - AWD	Theft Deterrent Module	√	√	√	√		
2007	Saturn	OUTLOOK - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Saturn	OUTLOOK - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Saturn	OUTLOOK - AWD	Body Control Module						0499 0497
2007	Saturn	OUTLOOK - AWD	Passenger presence system	√	√	√	√		0537
2007	Saturn	OUTLOOK - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Saturn	OUTLOOK - AWD	Memory seat module	√	√	√	√	√	
2007	Saturn	OUTLOOK - AWD	Park assist module	√	√	√	√	√	
2007	Saturn	OUTLOOK - AWD	Driver door switch	√	√	√	√	√	0527
2007	Saturn	OUTLOOK - AWD	Passenger door switch	√	√	√	√	√	0527
2007	Saturn	OUTLOOK - AWD	Liftgate module	√	√	√	√	√	0541
2007	Saturn	OUTLOOK - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Saturn	OUTLOOK - AWD	Engine Control Module	√	√	√	√	√	0493
2007	Saturn	OUTLOOK - AWD	Rear drive system	√	√	√	√	√	0530
2007	Saturn	OUTLOOK - AWD	Digital radio receiver	√	√	√	√		
2007	Saturn	OUTLOOK - AWD	Radio	√	√	√	√	√	
2007	Saturn	OUTLOOK - AWD	Rear HVAC/RSA	√	√	√	√	√	
2007	Saturn	OUTLOOK - AWD	Instrument panel cluster	√	√	√	√	√	
2007	Saturn	OUTLOOK - AWD	Rollover sensor	√	√	√	√		0541
2007	Saturn	OUTLOOK - AWD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Saturn	OUTLOOK - AWD	Theft Deterrent Module	√	√	√	√		



2007	Saturn	OUTLOOK - AWD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Saturn	OUTLOOK - AWD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Saturn	OUTLOOK - AWD	Body Control Module						0499 0497
2007	Saturn	OUTLOOK - AWD	Passenger presence system	√	√	√	√		0537
2007	Saturn	OUTLOOK - AWD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Saturn	OUTLOOK - AWD	Memory seat module	√	√	√	√	√	
2007	Saturn	OUTLOOK - AWD	Park assist module	√	√	√	√	√	
2007	Saturn	OUTLOOK - AWD	Driver door switch	√	√	√	√	√	0527
2007	Saturn	OUTLOOK - AWD	Passenger door switch	√	√	√	√	√	0527
2007	Saturn	OUTLOOK - AWD	Liftgate module	√	√	√	√	√	0541
2007	Saturn	OUTLOOK - AWD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Saturn	OUTLOOK - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	Saturn	OUTLOOK - 2WD	Transmission control module		√	√	√	√	
2007	Saturn	OUTLOOK - 2WD	Digital radio receiver	√	√	√	√		
2007	Saturn	OUTLOOK - 2WD	Radio	√	√	√	√	√	
2007	Saturn	OUTLOOK - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	Saturn	OUTLOOK - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	Saturn	OUTLOOK - 2WD	Rollover sensor	√	√	√	√		0541
2007	Saturn	OUTLOOK - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Saturn	OUTLOOK - 2WD	Theft Deterrent Module	√	√	√	√		
2007	Saturn	OUTLOOK - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Saturn	OUTLOOK - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Saturn	OUTLOOK - 2WD	Body Control Module						0499 0497
2007	Saturn	OUTLOOK - 2WD	Passenger presence system	√	√	√	√		0537
2007	Saturn	OUTLOOK - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Saturn	OUTLOOK - 2WD	Memory seat module	√	√	√	√	√	
2007	Saturn	OUTLOOK - 2WD	Park assist module	√	√	√	√	√	
2007	Saturn	OUTLOOK - 2WD	Driver door switch	√	√	√	√	√	0527
2007	Saturn	OUTLOOK - 2WD	Passenger door switch	√	√	√	√	√	0527
2007	Saturn	OUTLOOK - 2WD	Liftgate module	√	√	√	√	√	0541
2007	Saturn	OUTLOOK - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Saturn	OUTLOOK - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	Saturn	OUTLOOK - 2WD	Rear drive system	√	√	√	√	√	0530
2007	Saturn	OUTLOOK - 2WD	Digital radio receiver	√	√	√	√		
2007	Saturn	OUTLOOK - 2WD	Radio	√	√	√	√	√	
2007	Saturn	OUTLOOK - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	Saturn	OUTLOOK - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	Saturn	OUTLOOK - 2WD	Rollover sensor	√	√	√	√		0541
2007	Saturn	OUTLOOK - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Saturn	OUTLOOK - 2WD	Theft Deterrent Module	√	√	√	√		
2007	Saturn	OUTLOOK - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497

2007	Saturn	OUTLOOK - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Saturn	OUTLOOK - 2WD	Body Control Module						0499 0497
2007	Saturn	OUTLOOK - 2WD	Passenger presence system	√	√	√	√		0537
2007	Saturn	OUTLOOK - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	Saturn	OUTLOOK - 2WD	Memory seat module	√	√	√	√	√	
2007	Saturn	OUTLOOK - 2WD	Park assist module	√	√	√	√	√	
2007	Saturn	OUTLOOK - 2WD	Driver door switch	√	√	√	√	√	0527
2007	Saturn	OUTLOOK - 2WD	Passenger door switch	√	√	√	√	√	0527
2007	Saturn	OUTLOOK - 2WD	Liftgate module	√	√	√	√	√	0541
2007	Saturn	OUTLOOK - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	Saturn	Relay	Transmission control module		√	√	√	√	
2007	Saturn	Relay	Engine Control Module	√	√	√	√	√	0493
2007	Saturn	Relay	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Saturn	Relay	Mobile digital media		√	√			
2007	Saturn	Relay	Radio	√	√	√	√	√	0587 0524 0525
2007	Saturn	Relay	Disc player and video delay	√	√	√			
2007	Saturn	Relay	Body Control Module	√	√	√	√	√	0499
2007	Saturn	Relay	Left power sliding door module	√	√	√	√	√	
2007	Saturn	Relay	Right power sliding door module	√	√	√	√	√	
2007	Saturn	Relay	HVAC Control Module	√	√	√	√	√	
2007	Saturn	Relay	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Saturn	Relay	Digital radio receiver	√	√	√	√		0516
2007	Saturn	Relay	Passenger presence system	√	√	√	√	√	0512
2007	Saturn	Relay	Navigation radio	√	√	√	√	√	0525
2007	Saturn	Relay	Electronic Brake Control Module		√	√	√	√	0506
2007	Saturn	VUE	Engine Control Module	√	√	√	√	√	0493
2007	Saturn	VUE	Transmission control module	√	√	√	√	√	0493
2007	Saturn	VUE	Powertrain control module	√	√	√	√	√	
2007	Saturn	VUE	Supplemental inflatable restraint	√	√	√	√	√	
2007	Saturn	VUE	Digital radio receiver	√	√	√			
2007	Saturn	VUE	Radio	√	√	√	√	√	0551
2007	Saturn	VUE	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Saturn	VUE	Instrument panel cluster	√				√	
2007	Saturn	VUE	Body Control Module	√	√	√	√	√	0633 0640 0634 0635
2007	Saturn	VUE	Electronic Brake Control Module		√	√	√	√	
2007	Saturn	VUE	Power steering control module		√	√	√		
2007	Saturn	VUE	Engine Control Module	√	√	√	√	√	0566 0567 0493
2007	Saturn	VUE	Battery Energy Control Module				√	√	
2007	Saturn	VUE	Starter/Generator Control Modul				√	√	
2007	Saturn	VUE	Transmission control module		√	√	√	√	
2007	Saturn	VUE	Supplemental inflatable restraint	√	√	√	√	√	

2007	Saturn	VUE	Digital radio receiver	√	√	√			
2007	Saturn	VUE	Radio	√	√	√	√	√	0551
2007	Saturn	VUE	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Saturn	VUE	Instrument panel cluster	√				√	
2007	Saturn	VUE	Body Control Module	√	√	√	√	√	0633 0640 0634 0635
2007	Saturn	VUE	Power steering control module		√	√	√		
2007	Saturn	VUE	Electronic Brake Control Module		√	√	√	√	0506
2007	Saturn	VUE hybrid	Engine Control Module	√	√	√	√	√	0493
2007	Saturn	VUE hybrid	Transmission control module	√	√	√	√	√	0493
2007	Saturn	VUE hybrid	Powertrain control module	√	√	√	√	√	
2007	Saturn	VUE hybrid	Supplemental inflatable restraint	√	√	√	√	√	
2007	Saturn	VUE hybrid	Digital radio receiver	√	√	√			
2007	Saturn	VUE hybrid	Radio	√	√	√	√	√	0551
2007	Saturn	VUE hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Saturn	VUE hybrid	Instrument panel cluster	√				√	
2007	Saturn	VUE hybrid	Body Control Module	√	√	√	√	√	0633 0640 0634 0635
2007	Saturn	VUE hybrid	Electronic Brake Control Module		√	√	√	√	
2007	Saturn	VUE hybrid	Power steering control module		√	√	√		
2007	Saturn	VUE hybrid	Engine Control Module	√	√	√	√	√	0566 0567 0493
2007	Saturn	VUE hybrid	Battery Energy Control Module				√	√	
2007	Saturn	VUE hybrid	Starter/Generator Control Modul				√	√	
2007	Saturn	VUE hybrid	Transmission control module		√	√	√	√	
2007	Saturn	VUE hybrid	Supplemental inflatable restraint	√	√	√	√	√	
2007	Saturn	VUE hybrid	Digital radio receiver	√	√	√			
2007	Saturn	VUE hybrid	Radio	√	√	√	√	√	0551
2007	Saturn	VUE hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Saturn	VUE hybrid	Instrument panel cluster	√				√	
2007	Saturn	VUE hybrid	Body Control Module	√	√	√	√	√	0633 0640 0634 0635
2007	Saturn	VUE hybrid	Power steering control module		√	√	√		
2007	Saturn	VUE hybrid	Electronic Brake Control Module		√	√	√	√	0506
2007	Hummer	H2	Powertrain control module				√	√	
2007	Hummer	H2	Transfer Case Control Module		√	√	√	√	
2007	Hummer	H2	Amplifier (bose)	√	√	√	√	√	
2007	Hummer	H2	Digital radio receiver	√	√	√	√		0516
2007	Hummer	H2	Radio	√	√	√	√		
2007	Hummer	H2	Rear seat audio	√	√	√	√		
2007	Hummer	H2	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Hummer	H2	Instrument panel cluster	√	√	√	√	√	
2007	Hummer	H2	Body Control Module	√	√	√	√	√	
2007	Hummer	H2	Driver door module	√	√	√	√	√	
2007	Hummer	H2	Driver seat module	√	√	√	√	√	

2007	Hummer	H2	HVAC Control Module	√	√	√	√	√	
2007	Hummer	H2	Passenger door module	√	√	√	√	√	0159
2007	Hummer	H2	Supplemental inflatable restraint	√	√	√	√	√	0639
2007	Hummer	H2	Navigation radio	√	√	√	√	√	0525
2007	Hummer	H2	Air suension	√	√	√	√	√	
2007	Hummer	H2	ABS		√	√	√	√	0641
2007	Hummer	H3	Powertrain control module				√	√	
2007	Hummer	H3	Transfer Case Control Module		√	√	√	√	0638
2007	Hummer	H3	Passenger presence system		√	√			0512
2007	Hummer	H3	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	Hummer	H3	Radio	√	√	√	√	√	0572 0524
2007	Hummer	H3	Digital radio receiver	√	√	√	√		0516
2007	Hummer	H3	Generator battery control module	√	√	√	√	√	
2007	Hummer	H3	Instrument panel cluster	√	√	√	√	√	
2007	Hummer	H3	Body Control Module	√	√	√	√	√	0550 0159
2007	Hummer	H3	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Hummer	H3	Personal audio link module	√	√	√	√	√	0528
2007	Hummer	H3	Navigation radio	√	√	√	√	√	0525
2007	Hummer	H3	Electronic Brake Control Module	√	√	√	√	√	0638
2007	Saab	Saab 9-7x	Powertrain control module		√	√	√	√	
2007	Saab	Saab 9-7x	Transfer Case Control Module		√	√	√	√	
2007	Saab	Saab 9-7x	Transmission control module		√	√	√	√	
2007	Saab	Saab 9-7x	Engine Control Module	√	√	√	√	√	0493
2007	Saab	Saab 9-7x	Passenger presence system		√	√			0512
2007	Saab	Saab 9-7x	Supplemental inflatable restraint	√	√	√	√	√	
2007	Saab	Saab 9-7x	Theft Deterrent Module	√	√	√	√		
2007	Saab	Saab 9-7x	Disc player and video dilay	√	√	√			
2007	Saab	Saab 9-7x	Rear seat audio	√	√	√	√		
2007	Saab	Saab 9-7x	Digital radio receiver	√	√	√	√		0516
2007	Saab	Saab 9-7x	Radio	√	√	√	√	√	0572 0524
2007	Saab	Saab 9-7x	Instrument panel cluster	√	√	√	√	√	
2007	Saab	Saab 9-7x	Generator battery control module	√	√	√	√	√	
2007	Saab	Saab 9-7x	Body Control Module	√	√	√	√	√	0550
2007	Saab	Saab 9-7x	Driver door module	√	√	√	√	√	
2007	Saab	Saab 9-7x	Driver seat module	√	√	√	√	√	
2007	Saab	Saab 9-7x	HVAC Control Module	√	√	√	√	√	
2007	Saab	Saab 9-7x	Passenger door module	√	√	√	√	√	
2007	Saab	Saab 9-7x	Liftgate module	√	√	√	√	√	0159
2007	Saab	Saab 9-7x	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	Saab	Saab 9-7x	Navigation radio	√	√	√	√	√	0525
2007	Saab	Saab 9-7x	Electronic Brake Control Module	√	√	√	√	√	

2007	Holden	Captiva	HVAC Control Module	√	√	√	√	√	
2007	Holden	Captiva	Instrument panel cluster	√	√	√	√	√	
2007	Holden	Captiva	Body Control Module	√	√	√	√	√	0497
2007	Holden	Captiva	Body Control Module	√	√	√	√	√	
2007	Holden	Captiva	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Holden	Captiva	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Holden	Captiva	Theft Deterrent Module	√	√	√	√	√	0497
2007	Holden	Captiva Maxx	HVAC Control Module	√	√	√		√	
2007	Holden	Captiva Maxx	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	Holden	Captiva Maxx	Theft Deterrent Module	√	√	√	√		
2007	Holden	Captiva Maxx	Front dilay interface module	√	√	√			
2007	Holden	Captiva Maxx	Instrument panel cluster		√	√	√	√	
2007	Holden	Captiva Maxx	Headlamp Control Module	√	√	√	√	√	
2007	Holden	Captiva Maxx	Park assist module	√	√	√	√		
2007	Holden	Captiva Maxx	Body Control Module	√	√	√	√	√	0497
2007	Holden	Captiva Maxx	Body Control Module	√	√	√	√	√	
2007	Holden	Captiva Maxx	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	Holden	Captiva Maxx	Radio	√	√	√	√	√	0513 0159
2007	Holden	Captiva Maxx	Electronic Brake Control Module	√	√	√	√	√	
2007	Holden	Captiva Maxx	Engine Control Module	√	√	√	√	√	
2007	Holden	Captiva Maxx	Transmission control module	√	√	√	√	√	
2007	Holden	Captiva Maxx	Rear drive system	√	√	√	√	√	0530
2006	Buick	LaCrosse	HVAC systems - manual	√	√	√	√	√	0499
2006	Buick	LaCrosse	HVAC systems - automatic	√	√	√	√	√	0500
2006	Buick	LaCrosse	Antilock Braking System	√	√	√	√	√	0506
2006	Buick	LaCrosse	Engine controls		√	√	√	√	
2006	Buick	LaCrosse	Engine cooling		√	√	√	√	
2006	Buick	LaCrosse	Engine electrical	√	√	√	√	√	0499
2006	Buick	LaCrosse	Shift lock control	√	√	√	√	√	0499
2006	Buick	LaCrosse	Automatic transaxle	√	√	√	√	√	0499
2006	Buick	LaCrosse	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Buick	LaCrosse	Cruise Control	√	√	√	√	√	
2006	Buick	LaCrosse	Entertainment	√	√	√	√	√	0516
2006	Buick	LaCrosse	Horns	√	√	√	√	√	0499
2006	Buick	LaCrosse	Instrument panel	√	√	√	√	√	
2006	Buick	LaCrosse	Keyless entry	√	√	√	√	√	0499
2006	Buick	LaCrosse	Lighting systems	√	√	√	√	√	0499
2006	Buick	LaCrosse	Seats	√	√	√	√	√	0499
2006	Buick	LaCrosse	Stationary windows	√	√	√	√	√	0499
2006	Buick	LaCrosse	Theft deterrent	√	√	√	√	√	0499
2006	Buick	LaCrosse	Wipers/washer systems	√	√	√	√	√	0499

2006	Buick	LaCrosse	Seat belts	√	√	√	√	√	0639 0515
2006	Buick	LaCrosse	SIR	√	√	√	√	√	0639 0515
2006	Buick	LaCrosse (Allure in Canada)	HVAC systems - manual	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	HVAC systems - automatic	√	√	√	√	√	0500
2006	Buick	LaCrosse (Allure in Canada)	Antilock Braking System	√	√	√	√	√	0506
2006	Buick	LaCrosse (Allure in Canada)	Engine controls		√	√	√	√	
2006	Buick	LaCrosse (Allure in Canada)	Engine cooling		√	√	√	√	
2006	Buick	LaCrosse (Allure in Canada)	Engine electrical	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Shift lock control	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Automatic transaxle	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Buick	LaCrosse (Allure in Canada)	Cruise Control	√	√	√	√	√	
2006	Buick	LaCrosse (Allure in Canada)	Entertainment	√	√	√	√	√	0516
2006	Buick	LaCrosse (Allure in Canada)	Horns	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Instrument panel	√	√	√	√	√	
2006	Buick	LaCrosse (Allure in Canada)	Keyless entry	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Lighting systems	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Seats	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Stationary windows	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Theft deterrent	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Wipers/washer systems	√	√	√	√	√	0499
2006	Buick	LaCrosse (Allure in Canada)	Seat belts	√	√	√	√	√	0639 0515
2006	Buick	LaCrosse (Allure in Canada)	SIR	√	√	√	√	√	0639 0515
2006	Buick	Lucerne	HVAC systems - automatic	√	√	√	√	√	
2006	Buick	Lucerne	HVAC systems - manual	√	√	√	√	√	0493
2006	Buick	Lucerne	Steering	√	√	√	√		
2006	Buick	Lucerne	Suension		√	√	√	√	
2006	Buick	Lucerne	Antilock Braking System	√	√	√	√	√	0493
2006	Buick	Lucerne	Hydraulic brakes	√	√	√			
2006	Buick	Lucerne	Park brake	√	√	√	√	√	0506
2006	Buick	Lucerne	Engine controls	√	√	√	√	√	0493
2006	Buick	Lucerne	Engine cooling	√	√	√	√	√	0493
2006	Buick	Lucerne	Engine electrical	√	√	√	√	√	0493
2006	Buick	Lucerne	Shift lock control	√	√	√	√		
2006	Buick	Lucerne	Automatic transaxle	√	√	√	√	√	
2006	Buick	Lucerne	Body rear end	√	√	√	√		
2006	Buick	Lucerne	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Buick	Lucerne	Cruise Control	√	√	√	√	√	0493
2006	Buick	Lucerne	Door	√	√	√	√	√	
2006	Buick	Lucerne	Entertainment	√	√	√	√	√	
2006	Buick	Lucerne	Horns	√	√	√	√		

2006	Buick	Lucerne	Instrument panel	√	√	√	√	√	0493
2006	Buick	Lucerne	Keyless entry	√	√	√	√	√	0493
2006	Buick	Lucerne	Lighting systems	√	√	√	√		
2006	Buick	Lucerne	Body Control Module	√	√	√	√		
2006	Buick	Lucerne	Seats	√	√	√	√	√	
2006	Buick	Lucerne	Stationary windows	√	√	√	√		
2006	Buick	Lucerne	Theft deterrent	√	√	√	√	√	0493
2006	Buick	Lucerne	Wipers/washer systems	√	√	√	√		
2006	Buick	Lucerne	Rear parking assist	√	√	√	√	√	0494 0591 0565 0495
2006	Buick	Lucerne	Seat belts	√	√	√	√	√	0497
2006	Buick	Lucerne	SIR	√	√	√	√	√	0497
2006	Buick	Others	Powertrain	√	√	√	√	√	0493
2006	Buick	Others	Electronic Brake Control Module	√	√	√	√	√	0506
2006	Cadillac	CTS	Powertrain	√	√	√	√	√	
2006	Cadillac	CTS	Vehicle theft deterrent	√	√	√	√		
2006	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2006	Cadillac	CTS	Driver door switch	√	√	√	√		0609 0609 0609 0609
2006	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2006	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2006	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2006	Cadillac	CTS	Passenger presence system		√	√			
2006	Cadillac	CTS	Remote function actuation	√	√	√	√	√	
2006	Cadillac	CTS	Climate control panel	√	√	√	√	√	
2006	Cadillac	CTS	Dash integration module	√	√	√	√	√	0610 0611 0612 0613
2006	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2006	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2006	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2006	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2006	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2006	Cadillac	CTS	Radio	√	√	√	√		0524
2006	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2006	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2006	Cadillac	CTS	Tire pressure monitor		√	√	√	√	0629
2006	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2006	Cadillac	CTS	Powertrain	√	√	√	√	√	
2006	Cadillac	CTS	Vehicle theft deterrent	√	√	√	√		
2006	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2006	Cadillac	CTS	Driver door switch	√	√	√	√		
2006	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2006	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608

2006	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2006	Cadillac	CTS	Passenger presence system		√	√			
2006	Cadillac	CTS	Remote function actuation	√	√	√	√	√	
2006	Cadillac	CTS	Climate control panel	√	√	√	√	√	
2006	Cadillac	CTS	Dash integration module	√	√	√	√	√	0610 0611 0612 0613
2006	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2006	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2006	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2006	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2006	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2006	Cadillac	CTS	Radio	√	√	√	√		0524
2006	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2006	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2006	Cadillac	CTS	Tire pressure monitor		√	√	√	√	0629
2006	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2006	Cadillac	CTS	Powertrain	√	√	√	√	√	
2006	Cadillac	CTS	Vehicle theft deterrent	√	√	√	√		
2006	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2006	Cadillac	CTS	Driver door switch	√	√	√	√		
2006	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2006	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2006	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2006	Cadillac	CTS	Passenger presence system		√	√			
2006	Cadillac	CTS	Remote function actuation	√	√	√	√	√	
2006	Cadillac	CTS	Climate control panel	√	√	√	√	√	
2006	Cadillac	CTS	Dash integration module	√	√	√	√	√	0610 0611 0612 0613
2006	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2006	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2006	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2006	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2006	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2006	Cadillac	CTS	Radio	√	√	√	√		0524
2006	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2006	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2006	Cadillac	CTS	Tire pressure monitor		√	√	√	√	0629
2006	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2006	Cadillac	CTS	Powertrain	√	√	√	√	√	0493
2006	Cadillac	CTS	Vehicle theft deterrent	√	√	√	√		
2006	Cadillac	CTS	Driver door module	√	√	√	√	√	0608



2006	Cadillac	CTS	Driver door switch	√	√	√	√		
2006	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2006	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2006	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2006	Cadillac	CTS	Passenger presence system		√	√			
2006	Cadillac	CTS	Remote function actuation	√	√	√	√	√	
2006	Cadillac	CTS	Climate control panel	√	√	√	√	√	
2006	Cadillac	CTS	Dash integration module	√	√	√	√	√	0610 0611 0612 0613
2006	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2006	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2006	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2006	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2006	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2006	Cadillac	CTS	Radio	√	√	√	√		0524
2006	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2006	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2006	Cadillac	CTS	Tire pressure monitor		√	√	√	√	0629
2006	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2006	Cadillac	DTS	HVAC systems - automatic	√	√	√	√	√	0493
2006	Cadillac	DTS	Steering wheel and column	√	√	√	√	√	
2006	Cadillac	DTS	Tire pressure monitoring	√	√	√	√	√	0513 0159
2006	Cadillac	DTS	Electronic suspension control (ESC)		√	√	√	√	
2006	Cadillac	DTS	Antilock Braking System	√	√	√	√	√	0493
2006	Cadillac	DTS	Hydraulic brakes	√	√	√			
2006	Cadillac	DTS	Park brake	√	√	√	√		
2006	Cadillac	DTS	Engine controls	√	√	√	√	√	0493
2006	Cadillac	DTS	Engine cooling	√	√	√	√	√	0493
2006	Cadillac	DTS	Engine electrical	√	√	√	√	√	0493
2006	Cadillac	DTS	Shift lock control	√	√	√	√		
2006	Cadillac	DTS	Automatic transaxle	√	√	√	√	√	
2006	Cadillac	DTS	Body rear end	√	√	√	√		
2006	Cadillac	DTS	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Cadillac	DTS	Cruise Control	√	√	√	√	√	0493
2006	Cadillac	DTS	Door	√	√	√	√	√	
2006	Cadillac	DTS	Entertainment	√	√	√	√	√	0603
2006	Cadillac	DTS	Horns	√	√	√	√		
2006	Cadillac	DTS	Instrument panel	√	√	√	√	√	0493
2006	Cadillac	DTS	Keyless entry	√	√	√	√	√	0513 0159
2006	Cadillac	DTS	Lighting systems	√	√	√	√		
2006	Cadillac	DTS	Body Control Module	√	√	√	√		

2006	Cadillac	DTS	Seats	√	√	√	√	√	
2006	Cadillac	DTS	Stationary windows	√	√	√	√		
2006	Cadillac	DTS	Theft deterrent	√	√	√	√	√	0493
2006	Cadillac	DTS	Wipers/washer systems	√	√	√	√		
2006	Cadillac	DTS	Rear parking assist	√	√	√	√	√	
2006	Cadillac	DTS	Seat belts	√	√	√	√	√	0497
2006	Cadillac	DTS	SIR	√	√	√	√	√	0497
2006	Cadillac	STS	Shift lock control	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Automatic transmission	√	√	√	√	√	
2006	Cadillac	STS	HVAC systems - automatic	√	√	√	√	√	0493
2006	Cadillac	STS	Variable effort steering		√	√	√		
2006	Cadillac	STS	Steering wheel and column	√	√	√	√	√	0551
2006	Cadillac	STS	Electronic suspension control (ESC)		√	√	√	√	
2006	Cadillac	STS	Antilock Braking System	√	√	√	√	√	0493
2006	Cadillac	STS	Hydraulic brakes		√	√	√		
2006	Cadillac	STS	Park brake	√	√	√	√	√	
2006	Cadillac	STS	Engine controls	√	√	√	√	√	0493
2006	Cadillac	STS	Engine cooling	√	√	√	√	√	0493
2006	Cadillac	STS	Engine electrical	√	√	√	√	√	0559
2006	Cadillac	STS	Body rear end	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Cadillac	STS	Cruise Control	√	√	√	√	√	0493
2006	Cadillac	STS	Door	√	√	√	√	√	0560
2006	Cadillac	STS	Entertainment	√	√	√	√	√	0516
2006	Cadillac	STS	Horns	√	√	√	√	√	
2006	Cadillac	STS	Instrument panel	√	√	√	√	√	0493
2006	Cadillac	STS	Keyless entry	√	√	√	√	√	0551
2006	Cadillac	STS	Lighting systems	√	√	√	√	√	0551
2006	Cadillac	STS	Seats	√	√	√	√	√	
2006	Cadillac	STS	Stationary windows	√	√	√	√	√	
2006	Cadillac	STS	Theft deterrent	√	√	√	√	√	0493
2006	Cadillac	STS	Wipers/washer systems	√	√	√	√	√	0551
2006	Cadillac	STS	Rear parking assist	√	√	√	√	√	
2006	Cadillac	STS	Seat belts	√	√	√	√	√	0559
2006	Cadillac	STS	SIR	√	√	√	√	√	0559
2006	Cadillac	STS	HVAC systems - automatic	√	√	√	√	√	0493
2006	Cadillac	STS	Variable effort steering		√	√	√		
2006	Cadillac	STS	Steering wheel and column	√	√	√	√	√	0551

2006	Cadillac	STS	Tire pressure monitoring	√	√	√	√	√	0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520 0558
2006	Cadillac	STS	Electronic suspension control (ESC)		√	√	√	√	
2006	Cadillac	STS	Antilock Braking System	√	√	√	√	√	0493
2006	Cadillac	STS	Hydraulic brakes		√	√	√	√	
2006	Cadillac	STS	Park brake	√	√	√	√	√	
2006	Cadillac	STS	Engine controls	√	√	√	√	√	0493
2006	Cadillac	STS	Engine cooling	√	√	√	√	√	0493
2006	Cadillac	STS	Engine electrical	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Shift lock control	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Automatic transmission	√	√	√	√	√	
2006	Cadillac	STS	Body rear end	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Cadillac	STS	Cruise Control	√	√	√	√	√	0551
2006	Cadillac	STS	Door	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Entertainment	√	√	√	√	√	0516
2006	Cadillac	STS	Horns	√	√	√	√	√	
2006	Cadillac	STS	Instrument panel	√	√	√	√	√	0551
2006	Cadillac	STS	Keyless entry	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Lighting systems	√	√	√	√	√	0551
2006	Cadillac	STS	Seats	√	√	√	√	√	
2006	Cadillac	STS	Stationary windows	√	√	√	√	√	
2006	Cadillac	STS	Theft deterrent	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Wipers/washer systems	√	√	√	√	√	0551
2006	Cadillac	STS	Rear parking assist	√	√	√	√	√	
2006	Cadillac	STS	Seat belts	√	√	√	√	√	0559
2006	Cadillac	STS	SIR	√	√	√	√	√	0559
2006	Cadillac	STS	Variable effort steering		√	√	√		
2006	Cadillac	STS	Steering wheel and column	√	√	√	√	√	0551

2006	Cadillac	STS	Tire pressure monitoring	√	√	√	√	√	0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520 0558
2006	Cadillac	STS	Electronic suspension control (ESC)		√	√	√	√	
2006	Cadillac	STS	Seat belts	√	√	√	√	√	0559
2006	Cadillac	STS	SIR	√	√	√	√	√	0559
2006	Cadillac	STS	HVAC systems - automatic	√	√	√	√	√	
2006	Cadillac	STS	Antilock Braking System	√	√	√	√	√	0506
2006	Cadillac	STS	Hydraulic brakes		√	√	√	√	
2006	Cadillac	STS	Park brake	√	√	√	√	√	
2006	Cadillac	STS	Engine controls	√	√	√	√	√	
2006	Cadillac	STS	Engine cooling	√	√	√	√	√	
2006	Cadillac	STS	Engine electrical	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Shift lock control	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Automatic transmission	√	√	√	√	√	
2006	Cadillac	STS	Body rear end	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Cadillac	STS	Cruise Control	√	√	√	√	√	0551
2006	Cadillac	STS	Door	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Entertainment	√	√	√	√	√	0516
2006	Cadillac	STS	Horns	√	√	√	√	√	
2006	Cadillac	STS	Instrument panel	√	√	√	√	√	0551
2006	Cadillac	STS	Keyless entry	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Lighting systems	√	√	√	√	√	0551
2006	Cadillac	STS	Seats	√	√	√	√	√	
2006	Cadillac	STS	Stationary windows	√	√	√	√	√	
2006	Cadillac	STS	Theft deterrent	√	√	√	√	√	0555 0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520
2006	Cadillac	STS	Wipers/washer systems	√	√	√	√	√	0551
2006	Cadillac	STS	Rear parking assist	√	√	√	√	√	
2006	Cadillac	XLR	HVAC systems - automatic	√	√	√	√	√	0493

2006	Cadillac	XLR	Variable effort steering		√	√	√		
2006	Cadillac	XLR	Steering wheel and column		√	√	√	√	
2006	Cadillac	XLR	Tire pressure monitoring	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Electronic suension control (ESC)		√	√	√	√	
2006	Cadillac	XLR	Antilock Braking System	√	√	√	√	√	0493
2006	Cadillac	XLR	Hydraulic brakes		√	√	√	√	
2006	Cadillac	XLR	Park brake		√	√	√	√	
2006	Cadillac	XLR	Engine exhaust	√	√	√	√	√	
2006	Cadillac	XLR	Engine controls	√	√	√	√	√	0493
2006	Cadillac	XLR	Engine cooling	√	√	√	√	√	0493
2006	Cadillac	XLR	Engine electrical	√	√	√	√	√	0493
2006	Cadillac	XLR	Shift lock control	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Automatic transmission	√	√	√	√	√	
2006	Cadillac	XLR	Body rear end	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Cadillac	XLR	Cruise Control	√	√	√	√	√	0493
2006	Cadillac	XLR	Door	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Entertainment	√	√	√	√	√	0516
2006	Cadillac	XLR	Horns		√	√	√	√	
2006	Cadillac	XLR	Instrument panel	√	√	√	√	√	0493
2006	Cadillac	XLR	Keyless entry	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Lighting systems	√	√	√	√	√	
2006	Cadillac	XLR	Roof	√	√	√	√	√	
2006	Cadillac	XLR	Seats	√	√	√	√	√	0522 0646
2006	Cadillac	XLR	Theft deterrent	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Wipers/washer systems		√	√	√	√	
2006	Cadillac	XLR	Seat belts	√	√	√	√	√	0515
2006	Cadillac	XLR	SIR	√	√	√	√	√	0515
2006	Cadillac	XLR	HVAC systems - automatic	√	√	√	√	√	0493
2006	Cadillac	XLR	Variable effort steering		√	√	√		
2006	Cadillac	XLR	Steering wheel and column		√	√	√	√	
2006	Cadillac	XLR	Tire pressure monitoring	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Electronic suension control (ESC)		√	√	√	√	
2006	Cadillac	XLR	Antilock Braking System	√	√	√	√	√	0493
2006	Cadillac	XLR	Hydraulic brakes		√	√	√	√	

2006	Cadillac	XLR	Park brake		√	√	√	√	
2006	Cadillac	XLR	Engine exhaust	√	√	√	√	√	
2006	Cadillac	XLR	Engine controls	√	√	√	√	√	0493
2006	Cadillac	XLR	Engine cooling	√	√	√	√	√	0493
2006	Cadillac	XLR	Engine electrical	√	√	√	√	√	0493
2006	Cadillac	XLR	Shift lock control	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Automatic transmission	√	√	√	√	√	
2006	Cadillac	XLR	Body rear end	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Cadillac	XLR	Cruise Control	√	√	√	√	√	0493
2006	Cadillac	XLR	Door	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Entertainment	√	√	√	√	√	0516
2006	Cadillac	XLR	Horns		√	√	√	√	
2006	Cadillac	XLR	Instrument panel		√	√	√	√	
2006	Cadillac	XLR	Keyless entry	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Lighting systems	√	√	√	√	√	
2006	Cadillac	XLR	Roof	√	√	√	√	√	
2006	Cadillac	XLR	Seats	√	√	√	√	√	0522 0646
2006	Cadillac	XLR	Theft deterrent	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Cadillac	XLR	Wipers/washer systems		√	√	√	√	
2006	Cadillac	XLR	Seat belts	√	√	√	√	√	0515
2006	Cadillac	XLR	SIR	√	√	√	√	√	0515
2006	Chevrolet	Aveo	Powertrain	√	√	√	√	√	0507
2006	Chevrolet	Aveo	Supplemental inflatable restraint	√	√	√	√	√	
2006	Chevrolet	Aveo	Chassis	√	√	√	√	√	0506
2006	Chevrolet	Chevrolet	Powertrain	√	√	√	√	√	0493
2006	Chevrolet	Chevrolet	Immobilizer	√	√	√	√		0544 0545
2006	Chevrolet	Cobalt	HVAC systems - manual	√	√	√	√	√	0493
2006	Chevrolet	Cobalt	Power steering system		√	√	√		
2006	Chevrolet	Cobalt	Antilock Braking System	√	√	√	√	√	0493
2006	Chevrolet	Cobalt	Park brake	√	√	√			
2006	Chevrolet	Cobalt	Engine controls	√	√	√	√	√	0493
2006	Chevrolet	Cobalt	Engine cooling	√	√	√	√	√	0493
2006	Chevrolet	Cobalt	Engine electrical	√	√	√	√	√	0515
2006	Chevrolet	Cobalt	Shift lock control	√	√	√	√	√	0515
2006	Chevrolet	Cobalt	Automatic transaxle	√	√	√	√	√	
2006	Chevrolet	Cobalt	Cellular communication	√	√	√	√	√	0647 0585

2006	Chevrolet	Cobalt	Cruise Control	√	√	√	√	√	0493
2006	Chevrolet	Cobalt	Entertainment	√	√	√	√	√	
2006	Chevrolet	Cobalt	Horns	√	√	√	√	√	0515
2006	Chevrolet	Cobalt	Instrument panel	√	√	√	√	√	0493
2006	Chevrolet	Cobalt	Keyless entry	√	√	√	√	√	0515
2006	Chevrolet	Cobalt	Lighting systems	√	√	√	√	√	0515
2006	Chevrolet	Cobalt	Stationary windows	√	√	√	√	√	0515
2006	Chevrolet	Cobalt	Theft deterrent	√	√	√	√	√	0515
2006	Chevrolet	Cobalt	Seat belts	√	√	√	√	√	0515
2006	Chevrolet	Cobalt	SIR	√	√	√	√	√	0515
2006	Chevrolet	Corvette	HVAC systems - automatic	√	√	√	√	√	0500 0523
2006	Chevrolet	Corvette	Variable effort steering		√	√	√		
2006	Chevrolet	Corvette	Steering wheel and column	√	√	√	√	√	
2006	Chevrolet	Corvette	Tire pressure monitoring	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Chevrolet	Corvette	Electronic suspension control (ESC)		√	√	√	√	
2006	Chevrolet	Corvette	Antilock Braking System	√	√	√	√	√	0493
2006	Chevrolet	Corvette	Hydraulic brakes		√	√	√	√	
2006	Chevrolet	Corvette	Engine exhaust	√	√	√	√	√	
2006	Chevrolet	Corvette	Engine controls	√	√	√	√	√	0493
2006	Chevrolet	Corvette	Engine cooling	√	√	√	√	√	0493
2006	Chevrolet	Corvette	Engine electrical	√	√	√	√	√	0493
2006	Chevrolet	Corvette	Shift lock control	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Chevrolet	Corvette	Automatic transmission	√	√	√	√	√	
2006	Chevrolet	Corvette	Body rear end	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Chevrolet	Corvette	Cellular communication	√	√	√	√	√	0647 0585
2006	Chevrolet	Corvette	Cruise Control	√	√	√	√	√	0493
2006	Chevrolet	Corvette	Door	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Chevrolet	Corvette	Entertainment	√	√	√	√	√	0516
2006	Chevrolet	Corvette	Horns	√	√	√	√	√	
2006	Chevrolet	Corvette	Instrument panel	√	√	√	√	√	0493
2006	Chevrolet	Corvette	Keyless entry	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2006	Chevrolet	Corvette	Lighting systems	√	√	√	√	√	
2006	Chevrolet	Corvette	Navigation System	√	√	√	√		0525
2006	Chevrolet	Corvette	Roof	√	√	√	√	√	
2006	Chevrolet	Corvette	Seats	√	√	√	√	√	0522
2006	Chevrolet	Corvette	Theft deterrent	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519

2006	Chevrolet	Corvette	Wipers/washer systems	√	√	√	√	√	
2006	Chevrolet	Corvette	Seat belts	√	√	√	√	√	0515
2006	Chevrolet	Corvette	SIR	√	√	√	√	√	0512
2006	Chevrolet	Epica	Powertrain	√	√	√	√	√	0493
2006	Chevrolet	Epica	ISU		√	√	√	√	
2006	Chevrolet	Epica	Supplemental inflatable restraint	√	√	√	√	√	
2006	Chevrolet	Epica	Antilock Braking System	√	√	√	√	√	0506
2006	Chevrolet	Impala	HVAC systems - manual	√	√	√	√	√	0493
2006	Chevrolet	Impala	Steering wheel and column	√	√	√	√		
2006	Chevrolet	Impala	Tire pressure monitoring	√	√	√	√	√	0513 0159
2006	Chevrolet	Impala	Antilock Braking System	√	√	√	√	√	0493
2006	Chevrolet	Impala	Hydraulic brakes	√	√	√			
2006	Chevrolet	Impala	Park brake	√	√	√	√		
2006	Chevrolet	Impala	Engine controls	√	√	√	√	√	0493
2006	Chevrolet	Impala	Engine cooling	√	√	√	√	√	0493
2006	Chevrolet	Impala	Engine electrical	√	√	√	√	√	0493
2006	Chevrolet	Impala	Shift lock control	√	√	√	√		
2006	Chevrolet	Impala	Automatic transaxle	√	√	√	√	√	
2006	Chevrolet	Impala	Body rear end	√	√	√	√		
2006	Chevrolet	Impala	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Chevrolet	Impala	Cruise Control	√	√	√	√	√	0493
2006	Chevrolet	Impala	Door	√	√	√	√		
2006	Chevrolet	Impala	Entertainment	√	√	√	√	√	
2006	Chevrolet	Impala	Horns	√	√	√	√		
2006	Chevrolet	Impala	Instrument panel	√	√	√	√	√	0493
2006	Chevrolet	Impala	Keyless entry	√	√	√	√	√	0513 0159
2006	Chevrolet	Impala	Lighting systems	√	√	√	√		
2006	Chevrolet	Impala	Instrument panel cluster	√	√	√			
2006	Chevrolet	Impala	Body Control Module	√	√	√	√		
2006	Chevrolet	Impala	Seats	√	√	√	√	√	
2006	Chevrolet	Impala	Stationary windows	√	√	√	√	√	
2006	Chevrolet	Impala	Theft deterrent	√	√	√	√	√	0493
2006	Chevrolet	Impala	Wipers/washer systems	√	√	√	√		
2006	Chevrolet	Impala	Seat belts	√	√	√	√	√	0497
2006	Chevrolet	Impala	SIR	√	√	√	√	√	0497
2006	Chevrolet	Impala	HVAC systems - manual	√	√	√	√	√	0493
2006	Chevrolet	Impala	Steering wheel and column	√	√	√	√		
2006	Chevrolet	Impala	Tire pressure monitoring	√	√	√	√	√	0513 0159
2006	Chevrolet	Impala	Antilock Braking System	√	√	√	√	√	0493
2006	Chevrolet	Impala	Hydraulic brakes	√	√	√			
2006	Chevrolet	Impala	Park brake	√	√	√	√		



2006	Chevrolet	Impala	Engine controls	√	√	√	√	√	0493
2006	Chevrolet	Impala	Engine cooling	√	√	√	√	√	0493
2006	Chevrolet	Impala	Engine electrical	√	√	√	√	√	0493
2006	Chevrolet	Impala	Shift lock control	√	√	√	√		
2006	Chevrolet	Impala	Automatic transaxle	√	√	√	√	√	
2006	Chevrolet	Impala	Body rear end	√	√	√	√		
2006	Chevrolet	Impala	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Chevrolet	Impala	Cruise Control	√	√	√	√	√	0493
2006	Chevrolet	Impala	Door	√	√	√	√		
2006	Chevrolet	Impala	Entertainment	√	√	√	√	√	
2006	Chevrolet	Impala	Horns	√	√	√	√		
2006	Chevrolet	Impala	Instrument panel	√	√	√	√	√	0493
2006	Chevrolet	Impala	Keyless entry	√	√	√	√	√	0513 0159
2006	Chevrolet	Impala	Lighting systems	√	√	√	√		
2006	Chevrolet	Impala	Instrument panel cluster	√	√	√			
2006	Chevrolet	Impala	Body Control Module	√	√	√	√		
2006	Chevrolet	Impala	Seats	√	√	√	√	√	
2006	Chevrolet	Impala	Stationary windows	√	√	√	√	√	
2006	Chevrolet	Impala	Theft deterrent	√	√	√	√	√	0493
2006	Chevrolet	Impala	Wipers/washer systems	√	√	√	√		
2006	Chevrolet	Impala	Seat belts	√	√	√	√	√	0497
2006	Chevrolet	Impala	SIR	√	√	√	√	√	0497
2006	Chevrolet	Impala	HVAC systems - manual	√	√	√	√	√	0493
2006	Chevrolet	Impala	Steering wheel and column	√	√	√	√		
2006	Chevrolet	Impala	Tire pressure monitoring	√	√	√	√	√	0513 0159
2006	Chevrolet	Impala	Antilock Braking System	√	√	√	√	√	0493
2006	Chevrolet	Impala	Hydraulic brakes	√	√	√			
2006	Chevrolet	Impala	Park brake	√	√	√	√		
2006	Chevrolet	Impala	Engine controls	√	√	√	√	√	0493
2006	Chevrolet	Impala	Engine cooling	√	√	√	√	√	0493
2006	Chevrolet	Impala	Engine electrical	√	√	√	√	√	0493
2006	Chevrolet	Impala	Shift lock control	√	√	√	√		
2006	Chevrolet	Impala	Automatic transaxle	√	√	√	√	√	
2006	Chevrolet	Impala	Body rear end	√	√	√	√		
2006	Chevrolet	Impala	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Chevrolet	Impala	Cruise Control	√	√	√	√	√	0493
2006	Chevrolet	Impala	Door	√	√	√	√		
2006	Chevrolet	Impala	Entertainment	√	√	√	√	√	
2006	Chevrolet	Impala	Horns	√	√	√	√		
2006	Chevrolet	Impala	Instrument panel	√	√	√	√	√	0493
2006	Chevrolet	Impala	Keyless entry	√	√	√	√	√	0513 0159

2006	Chevrolet	Impala	Lighting systems	√	√	√	√		
2006	Chevrolet	Impala	Instrument panel cluster	√	√	√			
2006	Chevrolet	Impala	Body Control Module	√	√	√	√		
2006	Chevrolet	Impala	Seats	√	√	√	√	√	
2006	Chevrolet	Impala	Stationary windows	√	√	√	√	√	
2006	Chevrolet	Impala	Theft deterrent	√	√	√	√	√	0493
2006	Chevrolet	Impala	Wipers/washer systems	√	√	√	√		
2006	Chevrolet	Impala	Seat belts	√	√	√	√	√	0497
2006	Chevrolet	Impala	SIR	√	√	√	√	√	0497
2006	Chevrolet	Impala	HVAC systems - manual	√	√	√	√	√	0493
2006	Chevrolet	Impala	Steering wheel and column	√	√	√	√		
2006	Chevrolet	Impala	Tire pressure monitoring	√	√	√	√	√	0513 0159
2006	Chevrolet	Impala	Antilock Braking System	√	√	√	√	√	0493
2006	Chevrolet	Impala	Hydraulic brakes	√	√	√			
2006	Chevrolet	Impala	Park brake	√	√	√	√		
2006	Chevrolet	Impala	Engine controls	√	√	√	√	√	0493
2006	Chevrolet	Impala	Engine cooling	√	√	√	√	√	0493
2006	Chevrolet	Impala	Engine electrical	√	√	√	√	√	0493
2006	Chevrolet	Impala	Shift lock control	√	√	√	√		
2006	Chevrolet	Impala	Automatic transaxle	√	√	√	√	√	
2006	Chevrolet	Impala	Body rear end	√	√	√	√		
2006	Chevrolet	Impala	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Chevrolet	Impala	Cruise Control	√	√	√	√	√	0493
2006	Chevrolet	Impala	Door	√	√	√	√		
2006	Chevrolet	Impala	Entertainment	√	√	√	√	√	
2006	Chevrolet	Impala	Horns	√	√	√	√		
2006	Chevrolet	Impala	Instrument panel	√	√	√	√	√	0493
2006	Chevrolet	Impala	Keyless entry	√	√	√	√	√	0513 0159
2006	Chevrolet	Impala	Lighting systems	√	√	√	√		
2006	Chevrolet	Impala	Instrument panel cluster	√	√	√			
2006	Chevrolet	Impala	Body Control Module	√	√	√	√		
2006	Chevrolet	Impala	Seats	√	√	√	√	√	
2006	Chevrolet	Impala	Stationary windows	√	√	√	√	√	
2006	Chevrolet	Impala	Theft deterrent	√	√	√	√	√	0493
2006	Chevrolet	Impala	Wipers/washer systems	√	√	√	√		
2006	Chevrolet	Impala	Seat belts	√	√	√	√	√	0497
2006	Chevrolet	Impala	SIR	√	√	√	√	√	0497
2006	Chevrolet	Impala	HVAC systems - manual	√	√	√	√	√	0493
2006	Chevrolet	Impala	Steering wheel and column	√	√	√	√		
2006	Chevrolet	Impala	Tire pressure monitoring	√	√	√	√	√	0513 0159
2006	Chevrolet	Impala	Antilock Braking System	√	√	√	√	√	0493

2006	Chevrolet	Impala	Hydraulic brakes	√	√	√			
2006	Chevrolet	Impala	Park brake	√	√	√	√		
2006	Chevrolet	Impala	Engine controls	√	√	√	√	√	0493
2006	Chevrolet	Impala	Engine cooling	√	√	√	√	√	0493
2006	Chevrolet	Impala	Engine electrical	√	√	√	√	√	0493
2006	Chevrolet	Impala	Shift lock control	√	√	√	√		
2006	Chevrolet	Impala	Automatic transaxle	√	√	√	√	√	
2006	Chevrolet	Impala	Body rear end	√	√	√	√		
2006	Chevrolet	Impala	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Chevrolet	Impala	Cruise Control	√	√	√	√	√	0493
2006	Chevrolet	Impala	Door	√	√	√	√		
2006	Chevrolet	Impala	Entertainment	√	√	√	√	√	
2006	Chevrolet	Impala	Horns	√	√	√	√		
2006	Chevrolet	Impala	Instrument panel	√	√	√	√	√	0493
2006	Chevrolet	Impala	Keyless entry	√	√	√	√	√	0513 0159
2006	Chevrolet	Impala	Lighting systems	√	√	√	√		
2006	Chevrolet	Impala	Instrument panel cluster	√	√	√			
2006	Chevrolet	Impala	Body Control Module	√	√	√	√		
2006	Chevrolet	Impala	Seats	√	√	√	√	√	
2006	Chevrolet	Impala	Stationary windows	√	√	√	√	√	
2006	Chevrolet	Impala	Theft deterrent	√	√	√	√	√	0493
2006	Chevrolet	Impala	Wipers/washer systems	√	√	√	√		
2006	Chevrolet	Impala	Seat belts	√	√	√	√	√	0497
2006	Chevrolet	Impala	SIR	√	√	√	√	√	0497
2006	Chevrolet	Impala	HVAC systems - manual	√	√	√	√	√	0493
2006	Chevrolet	Impala	Steering wheel and column	√	√	√	√		
2006	Chevrolet	Impala	Tire pressure monitoring	√	√	√	√	√	0513 0159
2006	Chevrolet	Impala	Antilock Braking System	√	√	√	√	√	0493
2006	Chevrolet	Impala	Hydraulic brakes	√	√	√			
2006	Chevrolet	Impala	Park brake	√	√	√	√		
2006	Chevrolet	Impala	Engine controls	√	√	√	√	√	0493
2006	Chevrolet	Impala	Engine cooling	√	√	√	√	√	0493
2006	Chevrolet	Impala	Engine electrical	√	√	√	√	√	0493
2006	Chevrolet	Impala	Shift lock control	√	√	√	√		
2006	Chevrolet	Impala	Automatic transaxle	√	√	√	√	√	
2006	Chevrolet	Impala	Body rear end	√	√	√	√		
2006	Chevrolet	Impala	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Chevrolet	Impala	Cruise Control	√	√	√	√	√	0493
2006	Chevrolet	Impala	Door	√	√	√	√		
2006	Chevrolet	Impala	Entertainment	√	√	√	√	√	
2006	Chevrolet	Impala	Horns	√	√	√	√		

2006	Chevrolet	Impala	Instrument panel	√	√	√	√	√	0493
2006	Chevrolet	Impala	Keyless entry	√	√	√	√	√	0513 0159
2006	Chevrolet	Impala	Lighting systems	√	√	√	√		
2006	Chevrolet	Impala	Instrument panel cluster	√	√	√			
2006	Chevrolet	Impala	Body Control Module	√	√	√	√		
2006	Chevrolet	Impala	Seats	√	√	√	√	√	
2006	Chevrolet	Impala	Stationary windows	√	√	√	√	√	
2006	Chevrolet	Impala	Theft deterrent	√	√	√	√	√	0493
2006	Chevrolet	Impala	Wipers/washer systems	√	√	√	√		
2006	Chevrolet	Impala	Seat belts	√	√	√	√	√	0497
2006	Chevrolet	Impala	SIR	√	√	√	√	√	0497
2006	Chevrolet	Malibu	HVAC systems - automatic	√	√	√	√	√	
2006	Chevrolet	Malibu	HVAC systems - manual	√	√	√	√	√	0493
2006	Chevrolet	Malibu	Power steering system		√	√	√	√	0596
2006	Chevrolet	Malibu	Antilock Braking System	√	√	√	√	√	0493
2006	Chevrolet	Malibu	Park brake	√	√	√	√	√	0515
2006	Chevrolet	Malibu	Engine controls	√	√	√	√	√	0493
2006	Chevrolet	Malibu	Engine cooling	√	√	√	√	√	0493
2006	Chevrolet	Malibu	Engine electrical	√	√	√	√	√	0493
2006	Chevrolet	Malibu	Shift lock control	√	√	√	√	√	0515
2006	Chevrolet	Malibu	Automatic transaxle	√	√	√	√	√	0515
2006	Chevrolet	Malibu	Body rear end	√	√	√	√	√	0515
2006	Chevrolet	Malibu	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Chevrolet	Malibu	Cruise Control	√	√	√	√	√	0493
2006	Chevrolet	Malibu	Door	√	√	√	√	√	0515
2006	Chevrolet	Malibu	Entertainment	√	√	√	√	√	0594 0595 0525
2006	Chevrolet	Malibu	Horns	√	√	√	√	√	0515
2006	Chevrolet	Malibu	Instrument panel	√	√	√	√	√	0493
2006	Chevrolet	Malibu	Keyless entry	√	√	√	√	√	0493
2006	Chevrolet	Malibu	Lighting systems	√	√	√	√	√	0515
2006	Chevrolet	Malibu	Stationary windows	√	√	√	√	√	0515
2006	Chevrolet	Malibu	Theft deterrent	√	√	√	√	√	0493
2006	Chevrolet	Malibu	Wipers/washer systems	√	√	√	√	√	0515
2006	Chevrolet	Malibu	Adjustable pedals	√	√	√	√	√	0515
2006	Chevrolet	Malibu	Seat belts	√	√	√	√	√	0515
2006	Chevrolet	Malibu	SIR	√	√	√	√	√	0515
2006	Chevrolet	Monte Carlo	HVAC systems - automatic	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	HVAC systems - manual	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Tire pressure monitoring	√	√	√	√	√	0513 0159
2006	Chevrolet	Monte Carlo	Antilock Braking System	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Hydraulic brakes	√	√	√			

2006	Chevrolet	Monte Carlo	Park brake	√	√	√	√		
2006	Chevrolet	Monte Carlo	Engine controls	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Engine cooling	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Engine electrical	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Shift lock control	√	√	√	√		
2006	Chevrolet	Monte Carlo	Automatic transaxle	√	√	√	√	√	
2006	Chevrolet	Monte Carlo	Body rear end	√	√	√	√		
2006	Chevrolet	Monte Carlo	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Chevrolet	Monte Carlo	Cruise Control	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Door	√	√	√	√		
2006	Chevrolet	Monte Carlo	Entertainment	√	√	√	√	√	
2006	Chevrolet	Monte Carlo	Horns	√	√	√	√		
2006	Chevrolet	Monte Carlo	Instrument panel	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Keyless entry	√	√	√	√	√	0513 0159
2006	Chevrolet	Monte Carlo	Lighting systems	√	√	√	√		
2006	Chevrolet	Monte Carlo	Instrument panel cluster	√	√	√			
2006	Chevrolet	Monte Carlo	Body Control Module	√	√	√	√		
2006	Chevrolet	Monte Carlo	Seats	√	√	√	√	√	
2006	Chevrolet	Monte Carlo	Stationary windows	√	√	√	√	√	
2006	Chevrolet	Monte Carlo	Theft deterrent	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Wipers/washer systems	√	√	√	√		
2006	Chevrolet	Monte Carlo	Seat belts	√	√	√	√	√	0497
2006	Chevrolet	Monte Carlo	SIR	√	√	√	√	√	0497
2006	Chevrolet	Monte Carlo	HVAC systems - automatic	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	HVAC systems - manual	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Tire pressure monitoring	√	√	√	√	√	0513 0159
2006	Chevrolet	Monte Carlo	Antilock Braking System	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Hydraulic brakes	√	√	√			
2006	Chevrolet	Monte Carlo	Park brake	√	√	√	√		
2006	Chevrolet	Monte Carlo	Engine controls	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Engine cooling	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Engine electrical	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Shift lock control	√	√	√	√		
2006	Chevrolet	Monte Carlo	Automatic transaxle	√	√	√	√	√	
2006	Chevrolet	Monte Carlo	Body rear end	√	√	√	√		
2006	Chevrolet	Monte Carlo	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Chevrolet	Monte Carlo	Cruise Control	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Door	√	√	√	√		
2006	Chevrolet	Monte Carlo	Entertainment	√	√	√	√	√	
2006	Chevrolet	Monte Carlo	Horns	√	√	√	√		
2006	Chevrolet	Monte Carlo	Instrument panel	√	√	√	√	√	0493

2006	Chevrolet	Monte Carlo	Keyless entry	√	√	√	√	√	0513 0159
2006	Chevrolet	Monte Carlo	Lighting systems	√	√	√	√		
2006	Chevrolet	Monte Carlo	Instrument panel cluster	√	√	√			
2006	Chevrolet	Monte Carlo	Body Control Module	√	√	√	√		
2006	Chevrolet	Monte Carlo	Seats	√	√	√	√	√	
2006	Chevrolet	Monte Carlo	Stationary windows	√	√	√	√	√	
2006	Chevrolet	Monte Carlo	Theft deterrent	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Wipers/washer systems	√	√	√	√		
2006	Chevrolet	Monte Carlo	Seat belts	√	√	√	√	√	0497
2006	Chevrolet	Monte Carlo	SIR	√	√	√	√	√	0497
2006	Chevrolet	Monte Carlo	HVAC systems - automatic	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	HVAC systems - manual	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Tire pressure monitoring	√	√	√	√	√	0513 0159
2006	Chevrolet	Monte Carlo	Antilock Braking System	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Hydraulic brakes	√	√	√			
2006	Chevrolet	Monte Carlo	Park brake	√	√	√	√		
2006	Chevrolet	Monte Carlo	Engine controls	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Engine cooling	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Engine electrical	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Shift lock control	√	√	√	√		
2006	Chevrolet	Monte Carlo	Automatic transaxle	√	√	√	√	√	
2006	Chevrolet	Monte Carlo	Body rear end	√	√	√	√		
2006	Chevrolet	Monte Carlo	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Chevrolet	Monte Carlo	Cruise Control	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Door	√	√	√	√		
2006	Chevrolet	Monte Carlo	Entertainment	√	√	√	√	√	
2006	Chevrolet	Monte Carlo	Horns	√	√	√	√		
2006	Chevrolet	Monte Carlo	Instrument panel	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Keyless entry	√	√	√	√	√	0513 0159
2006	Chevrolet	Monte Carlo	Lighting systems	√	√	√	√		
2006	Chevrolet	Monte Carlo	Instrument panel cluster	√	√	√			
2006	Chevrolet	Monte Carlo	Body Control Module	√	√	√	√		
2006	Chevrolet	Monte Carlo	Seats	√	√	√	√	√	
2006	Chevrolet	Monte Carlo	Stationary windows	√	√	√	√	√	
2006	Chevrolet	Monte Carlo	Theft deterrent	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Wipers/washer systems	√	√	√	√		
2006	Chevrolet	Monte Carlo	Seat belts	√	√	√	√	√	0497
2006	Chevrolet	Monte Carlo	SIR	√	√	√	√	√	0497
2006	Chevrolet	Monte Carlo	HVAC systems - automatic	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	HVAC systems - manual	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Tire pressure monitoring	√	√	√	√	√	0513 0159

2006	Chevrolet	Monte Carlo	Antilock Braking System	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Hydraulic brakes	√	√	√			
2006	Chevrolet	Monte Carlo	Park brake	√	√	√	√		
2006	Chevrolet	Monte Carlo	Engine controls	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Engine cooling	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Engine electrical	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Shift lock control	√	√	√	√		
2006	Chevrolet	Monte Carlo	Automatic transaxle	√	√	√	√	√	
2006	Chevrolet	Monte Carlo	Body rear end	√	√	√	√		
2006	Chevrolet	Monte Carlo	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Chevrolet	Monte Carlo	Cruise Control	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Door	√	√	√	√		
2006	Chevrolet	Monte Carlo	Entertainment	√	√	√	√	√	
2006	Chevrolet	Monte Carlo	Horns	√	√	√	√		
2006	Chevrolet	Monte Carlo	Instrument panel	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Keyless entry	√	√	√	√	√	0513 0159
2006	Chevrolet	Monte Carlo	Lighting systems	√	√	√	√		
2006	Chevrolet	Monte Carlo	Instrument panel cluster	√	√	√			
2006	Chevrolet	Monte Carlo	Body Control Module	√	√	√	√		
2006	Chevrolet	Monte Carlo	Seats	√	√	√	√	√	
2006	Chevrolet	Monte Carlo	Stationary windows	√	√	√	√	√	
2006	Chevrolet	Monte Carlo	Theft deterrent	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Wipers/washer systems	√	√	√	√		
2006	Chevrolet	Monte Carlo	Seat belts	√	√	√	√	√	0497
2006	Chevrolet	Monte Carlo	SIR	√	√	√	√	√	0497
2006	Chevrolet	Monte Carlo	HVAC systems - automatic	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	HVAC systems - manual	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Tire pressure monitoring	√	√	√	√	√	0513 0159
2006	Chevrolet	Monte Carlo	Antilock Braking System	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Hydraulic brakes	√	√	√			
2006	Chevrolet	Monte Carlo	Park brake	√	√	√	√		
2006	Chevrolet	Monte Carlo	Engine controls	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Engine cooling	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Engine electrical	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Shift lock control	√	√	√	√		
2006	Chevrolet	Monte Carlo	Automatic transaxle	√	√	√	√	√	
2006	Chevrolet	Monte Carlo	Body rear end	√	√	√	√		
2006	Chevrolet	Monte Carlo	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Chevrolet	Monte Carlo	Cruise Control	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Door	√	√	√	√		
2006	Chevrolet	Monte Carlo	Entertainment	√	√	√	√	√	

2006	Chevrolet	Monte Carlo	Horns	√	√	√	√		
2006	Chevrolet	Monte Carlo	Instrument panel	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Keyless entry	√	√	√	√	√	0513 0159
2006	Chevrolet	Monte Carlo	Lighting systems	√	√	√	√		
2006	Chevrolet	Monte Carlo	Instrument panel cluster	√	√	√			
2006	Chevrolet	Monte Carlo	Body Control Module	√	√	√	√		
2006	Chevrolet	Monte Carlo	Seats	√	√	√	√	√	
2006	Chevrolet	Monte Carlo	Stationary windows	√	√	√	√	√	
2006	Chevrolet	Monte Carlo	Theft deterrent	√	√	√	√	√	0493
2006	Chevrolet	Monte Carlo	Wipers/washer systems	√	√	√	√		
2006	Chevrolet	Monte Carlo	Seat belts	√	√	√	√	√	0497
2006	Chevrolet	Monte Carlo	SIR	√	√	√	√	√	0497
2006	Chevrolet	Optra	Powertrain	√	√	√	√	√	0507
2006	Chevrolet	Optra	Supplemental inflatable restraint	√	√	√	√	√	
2006	Chevrolet	Optra	Electronic Brake Control Module	√	√	√	√	√	0506
2006	Chevrolet	Optra - Mexico	Powertrain	√	√	√	√	√	0507
2006	Chevrolet	Optra - Mexico	Supplemental inflatable restraint	√	√	√	√	√	
2006	Chevrolet	Optra - Mexico	Electronic Brake Control Module	√	√	√	√	√	0506
2006	Chevrolet	Vivant	Powertrain	√	√	√	√	√	0507
2006	Chevrolet	Vivant	Supplemental inflatable restraint		√	√	√		
2006	Chevrolet	Vivant	Chassis	√	√	√	√	√	0506
2006	Chevrolet	Others	Supplemental inflatable restraint	√	√	√	√	√	
2006	Chevrolet	Others	Powertrain	√	√	√	√	√	0507
2006	Chevrolet	Others	Antilock Braking System	√	√	√	√	√	0506
2006	Pontiac	G6	HVAC systems - automatic	√	√	√	√	√	
2006	Pontiac	G6	HVAC systems - manual	√	√	√	√	√	0493
2006	Pontiac	G6	Power steering system		√	√	√	√	0596
2006	Pontiac	G6	Antilock Braking System	√	√	√	√	√	0506
2006	Pontiac	G6	Park brake	√	√	√	√	√	0515
2006	Pontiac	G6	Engine controls	√	√	√	√	√	0493
2006	Pontiac	G6	Engine cooling	√	√	√	√	√	0493
2006	Pontiac	G6	Engine electrical	√	√	√	√	√	0515
2006	Pontiac	G6	Shift lock control	√	√	√	√	√	0515
2006	Pontiac	G6	Automatic transaxle	√	√	√	√	√	0515
2006	Pontiac	G6	Body rear end	√	√	√	√	√	0515
2006	Pontiac	G6	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Pontiac	G6	Cruise Control	√	√	√	√	√	0515
2006	Pontiac	G6	Door	√	√	√	√	√	0515
2006	Pontiac	G6	Entertainment	√	√	√	√	√	0581 0582 0525
2006	Pontiac	G6	Horns	√	√	√	√	√	0515
2006	Pontiac	G6	Instrument panel	√	√	√	√	√	0493



2006	Pontiac	G6	Lighting systems	√	√	√	√	√	0515
2006	Pontiac	G6	Roof	√	√	√	√	√	
2006	Pontiac	G6	Stationary windows	√	√	√	√	√	0515
2006	Pontiac	G6	Theft deterrent	√	√	√	√	√	0515
2006	Pontiac	G6	Wipers/washer systems	√	√	√	√	√	0515
2006	Pontiac	G6	Adjustable pedals	√	√	√	√	√	0515
2006	Pontiac	G6	Keyless entry	√	√	√	√	√	0493
2006	Pontiac	G6	Seat belts	√	√	√	√	√	0515
2006	Pontiac	G6	SIR	√	√	√	√	√	0515
2006	Pontiac	GTO	Powertrain	√	√	√	√	√	0493
2006	Pontiac	GTO	Supplemental inflatable restraint		√	√			
2006	Pontiac	GTO	ABS/TCS	√	√	√	√	√	0562
2006	Pontiac	Grand Prix	HVAC systems - manual	√	√	√	√	√	0499
2006	Pontiac	Grand Prix	HVAC systems - automatic	√	√	√	√	√	0500
2006	Pontiac	Grand Prix	Antilock Braking System	√	√	√	√	√	0493
2006	Pontiac	Grand Prix	Engine controls	√	√	√	√	√	0499
2006	Pontiac	Grand Prix	Engine cooling	√	√	√	√	√	0493
2006	Pontiac	Grand Prix	Engine electrical	√	√	√	√	√	0499
2006	Pontiac	Grand Prix	Shift lock control	√	√	√	√	√	0499
2006	Pontiac	Grand Prix	Automatic transaxle	√	√	√	√	√	0499
2006	Pontiac	Grand Prix	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Pontiac	Grand Prix	Cruise Control	√	√	√	√	√	0493
2006	Pontiac	Grand Prix	Entertainment	√	√	√	√	√	0516
2006	Pontiac	Grand Prix	Horns	√	√	√	√	√	0499
2006	Pontiac	Grand Prix	Instrument panel	√	√	√	√	√	0493
2006	Pontiac	Grand Prix	Keyless entry	√	√	√	√	√	0499
2006	Pontiac	Grand Prix	Lighting systems	√	√	√	√	√	0499
2006	Pontiac	Grand Prix	Stationary windows	√	√	√	√	√	0499
2006	Pontiac	Grand Prix	Theft deterrent	√	√	√	√	√	0499
2006	Pontiac	Grand Prix	Wipers/washer systems	√	√	√	√	√	0499
2006	Pontiac	Grand Prix	Seat belts	√	√	√	√	√	0639 0515
2006	Pontiac	Grand Prix	SIR	√	√	√	√	√	0639 0515
2006	Pontiac	Solstice	HVAC systems - manual	√	√	√	√	√	0515
2006	Pontiac	Solstice	Antilock Braking System	√	√	√	√	√	0515
2006	Pontiac	Solstice	Park brake	√	√	√	√	√	0515
2006	Pontiac	Solstice	Engine controls	√	√	√	√	√	0493
2006	Pontiac	Solstice	Engine cooling	√	√	√	√	√	0493
2006	Pontiac	Solstice	Engine electrical	√	√	√	√	√	0515
2006	Pontiac	Solstice	Shift lock control	√	√	√	√	√	0515
2006	Pontiac	Solstice	Automatic transmission	√	√	√	√	√	
2006	Pontiac	Solstice	Body rear end	√	√	√	√	√	0515

2006	Pontiac	Solstice	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Pontiac	Solstice	Cruise Control	√	√	√	√	√	0515
2006	Pontiac	Solstice	Door	√	√	√	√	√	0515
2006	Pontiac	Solstice	Entertainment	√	√	√	√	√	0525
2006	Pontiac	Solstice	Horns	√	√	√	√	√	0515
2006	Pontiac	Solstice	Instrument panel	√	√	√	√	√	0515
2006	Pontiac	Solstice	Keyless entry	√	√	√	√	√	0515
2006	Pontiac	Solstice	Lighting systems	√	√	√	√	√	0515
2006	Pontiac	Solstice	Body Control Module	√	√	√	√	√	0515
2006	Pontiac	Solstice	Stationary windows	√	√	√	√	√	0515
2006	Pontiac	Solstice	Theft deterrent	√	√	√	√	√	0515
2006	Pontiac	Solstice	Wipers/washer systems	√	√	√	√	√	0515
2006	Pontiac	Solstice	Seat belts	√	√	√	√	√	0515
2006	Pontiac	Solstice	SIR	√	√	√	√	√	0515
2006	Pontiac	Pursuit	HVAC systems - manual	√	√	√	√	√	0493
2006	Pontiac	Pursuit	Power steering system		√	√	√		
2006	Pontiac	Pursuit	Antilock Braking System	√	√	√	√	√	0493
2006	Pontiac	Pursuit	Park brake	√	√	√			
2006	Pontiac	Pursuit	Engine controls	√	√	√	√	√	0493
2006	Pontiac	Pursuit	Engine cooling	√	√	√	√	√	0493
2006	Pontiac	Pursuit	Engine electrical	√	√	√	√	√	0515
2006	Pontiac	Pursuit	Shift lock control	√	√	√	√	√	0515
2006	Pontiac	Pursuit	Automatic transaxle	√	√	√	√	√	
2006	Pontiac	Pursuit	Cellular communication	√	√	√	√	√	0647 0585
2006	Pontiac	Pursuit	Cruise Control	√	√	√	√	√	0493
2006	Pontiac	Pursuit	Entertainment	√	√	√	√	√	
2006	Pontiac	Pursuit	Horns	√	√	√	√	√	0515
2006	Pontiac	Pursuit	Instrument panel	√	√	√	√	√	0493
2006	Pontiac	Pursuit	Keyless entry	√	√	√	√	√	0515
2006	Pontiac	Pursuit	Lighting systems	√	√	√	√	√	0515
2006	Pontiac	Pursuit	Stationary windows	√	√	√	√	√	0515
2006	Pontiac	Pursuit	Theft deterrent	√	√	√	√	√	0515
2006	Pontiac	Pursuit	Seat belts	√	√	√	√	√	0515
2006	Pontiac	Pursuit	SIR	√	√	√	√	√	0515
2006	Pontiac	Vibe - AWD	Digital radio receiver	√	√	√	√		0516
2006	Pontiac	Vibe - AWD	Radio		√	√	√	√	0572
2006	Pontiac	Vibe - AWD	Supplemental inflatable restraint		√	√	√		
2006	Pontiac	Vibe - AWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Pontiac	Vibe - AWD	Chassis		√	√	√	√	0597
2006	Pontiac	Vibe - FWD	Digital radio receiver	√	√	√	√		0516
2006	Pontiac	Vibe - FWD	Radio		√	√	√	√	0572

2006	Pontiac	Vibe - FWD	Supplemental inflatable restraint		√	√	√		
2006	Pontiac	Vibe - FWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Pontiac	Vibe - FWD	Chassis		√	√	√	√	0597
2006	Pontiac	Wave	Powertrain	√	√	√	√	√	0493
2006	Pontiac	Wave	Supplemental inflatable restraint	√	√	√	√	√	
2006	Pontiac	Wave	Chassis	√	√	√	√	√	0506
2006	Pontiac	Others	Antilock Braking System	√	√	√	√	√	0506
2006	Pontiac	Others	Powertrain	√	√	√	√	√	0507
2006	Pontiac	Others	Supplemental inflatable restraint		√	√	√		
2006	Saturn	ION	Powertrain	√	√	√	√	√	0493
2006	Saturn	ION	Digital radio receiver	√	√	√	√		
2006	Saturn	ION	Supplemental inflatable restraint	√	√	√	√	√	0515
2006	Saturn	ION	Body Control Module	√	√	√	√	√	0633 0634 0635
2006	Saturn	ION	Radio	√	√	√	√	√	0551
2006	Saturn	ION	Instrument panel cluster	√	√	√	√	√	
2006	Saturn	ION	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Saturn	ION	Antilock Braking System		√	√	√	√	0506
2006	Buick	Rainier	Powertrain	√	√	√	√	√	0493
2006	Buick	Rainier	Disc player and video delay	√	√	√			
2006	Buick	Rainier	Digital radio receiver	√	√	√	√		0516
2006	Buick	Rainier	Radio	√	√	√	√		
2006	Buick	Rainier	Rear seat audio	√	√	√	√		
2006	Buick	Rainier	Body Control Module	√	√	√	√	√	0550
2006	Buick	Rainier	Instrument panel cluster	√	√	√	√	√	
2006	Buick	Rainier	Driver door module	√	√	√	√	√	
2006	Buick	Rainier	Driver seat module	√	√	√	√	√	
2006	Buick	Rainier	Heating and air conditioning	√	√	√	√	√	
2006	Buick	Rainier	Lift gate module	√	√	√	√	√	
2006	Buick	Rainier	Passenger door module	√	√	√	√	√	
2006	Buick	Rainier	Passenger presence system		√	√			0512
2006	Buick	Rainier	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Buick	Rainier	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	Buick	Rainier	Navigation radio	√	√	√	√	√	0525
2006	Buick	Rainier	ABS/TCS/VSES	√	√	√	√	√	0493
2006	Buick	Rainier - 2WD	Powertrain	√	√	√	√	√	0493
2006	Buick	Rainier - 2WD	Disc player and video delay	√	√	√			
2006	Buick	Rainier - 2WD	Digital radio receiver	√	√	√	√		0516
2006	Buick	Rainier - 2WD	Radio	√	√	√	√		
2006	Buick	Rainier - 2WD	Rear seat audio	√	√	√	√		
2006	Buick	Rainier - 2WD	Body Control Module	√	√	√	√	√	0550
2006	Buick	Rainier - 2WD	Instrument panel cluster	√	√	√	√	√	

2006	Buick	Rainier - 2WD	Driver door module	√	√	√	√	√	
2006	Buick	Rainier - 2WD	Driver seat module	√	√	√	√	√	
2006	Buick	Rainier - 2WD	Heating and air conditioning	√	√	√	√	√	
2006	Buick	Rainier - 2WD	Lift gate module	√	√	√	√	√	
2006	Buick	Rainier - 2WD	Passenger door module	√	√	√	√	√	
2006	Buick	Rainier - 2WD	Passenger presence system		√	√			0512
2006	Buick	Rainier - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Buick	Rainier - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	Buick	Rainier - 2WD	Navigation radio	√	√	√	√	√	0525
2006	Buick	Rainier - 2WD	ABS/TCS/VSES	√	√	√	√	√	0493
2006	Buick	Rendezvous - AWD	Powertrain	√	√	√	√	√	
2006	Buick	Rendezvous - AWD	Radio	√	√	√	√	√	0573 0574 0636 0572
2006	Buick	Rendezvous - AWD	Disc player and video dilay	√	√	√			
2006	Buick	Rendezvous - AWD	Digital radio receiver	√	√	√	√		0516
2006	Buick	Rendezvous - AWD	Navigation radio	√	√	√	√	√	0525
2006	Buick	Rendezvous - AWD	Vehicle theft deterrent	√	√	√	√		
2006	Buick	Rendezvous - AWD	Passenger presence system		√	√			0512
2006	Buick	Rendezvous - AWD	Body Control Module		√	√	√	√	0560 0515 0628 0637
2006	Buick	Rendezvous - AWD	Head up dilay		√	√	√		
2006	Buick	Rendezvous - AWD	Instrument panel cluster		√	√	√	√	
2006	Buick	Rendezvous - AWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Buick	Rendezvous - AWD	Supplemental inflatable restraint	√	√	√	√	√	0515
2006	Buick	Rendezvous - AWD	Memory seat module	√	√	√	√	√	0573 0574 0636 0572
2006	Buick	Rendezvous - AWD	Chassis	√	√	√	√	√	0506
2006	Buick	Rendezvous - FWD	Powertrain	√	√	√	√	√	
2006	Buick	Rendezvous - FWD	Radio	√	√	√	√	√	0573 0574 0636 0572
2006	Buick	Rendezvous - FWD	Disc player and video dilay	√	√	√			
2006	Buick	Rendezvous - FWD	Digital radio receiver	√	√	√	√		0516
2006	Buick	Rendezvous - FWD	Navigation radio	√	√	√	√	√	0525
2006	Buick	Rendezvous - FWD	Vehicle theft deterrent	√	√	√	√		
2006	Buick	Rendezvous - FWD	Passenger presence system		√	√			0512
2006	Buick	Rendezvous - FWD	Body Control Module		√	√	√	√	0560 0515 0628 0637
2006	Buick	Rendezvous - FWD	Head up dilay		√	√	√		
2006	Buick	Rendezvous - FWD	Instrument panel cluster		√	√	√	√	
2006	Buick	Rendezvous - FWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Buick	Rendezvous - FWD	Supplemental inflatable restraint	√	√	√	√	√	0515
2006	Buick	Rendezvous - FWD	Memory seat module	√	√	√	√	√	0573 0574 0636 0572
2006	Buick	Rendezvous - FWD	Chassis	√	√	√	√	√	0506
2006	Buick	Terraza	HVAC systems - manual	√	√	√	√	√	0499
2006	Buick	Terraza	Antilock Braking System	√	√	√	√	√	0506
2006	Buick	Terraza	Engine controls	√	√	√	√	√	0493

2006	Buick	Terraza	Engine cooling	√	√	√	√	√	0493
2006	Buick	Terraza	Engine electrical	√	√	√	√	√	0499
2006	Buick	Terraza	Shift lock control	√	√	√	√	√	0499
2006	Buick	Terraza	Automatic transaxle	√	√	√	√	√	0499
2006	Buick	Terraza	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Buick	Terraza	Cruise Control	√	√	√	√	√	0493
2006	Buick	Terraza	Door	√	√	√	√	√	
2006	Buick	Terraza	Entertainment	√	√	√	√	√	0516
2006	Buick	Terraza	Horns	√	√	√	√	√	0499
2006	Buick	Terraza	Instrument panel	√	√	√	√	√	0499
2006	Buick	Terraza	Lighting systems	√	√	√	√	√	0499
2006	Buick	Terraza	Navigation System	√	√	√	√	√	0525
2006	Buick	Terraza	Seats	√	√	√	√	√	
2006	Buick	Terraza	Stationary windows	√	√	√	√	√	
2006	Buick	Terraza	Theft deterrent	√	√	√	√	√	0499
2006	Buick	Terraza	Wipers/washer systems	√	√	√	√	√	0499
2006	Buick	Terraza	Keyless entry	√	√	√	√	√	0499
2006	Buick	Terraza	Seat belts	√	√	√	√	√	0639 0515
2006	Buick	Terraza	SIR	√	√	√	√	√	0639 0515
2006	Buick	Terraza - 4WD	HVAC systems - manual	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Antilock Braking System	√	√	√	√	√	0506
2006	Buick	Terraza - 4WD	Engine controls		√	√	√	√	
2006	Buick	Terraza - 4WD	Engine cooling		√	√	√	√	
2006	Buick	Terraza - 4WD	Engine electrical	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Shift lock control	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Automatic transaxle	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Buick	Terraza - 4WD	Cruise Control	√	√	√	√	√	0493
2006	Buick	Terraza - 4WD	Door	√	√	√	√	√	
2006	Buick	Terraza - 4WD	Entertainment	√	√	√	√	√	0516
2006	Buick	Terraza - 4WD	Horns	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Instrument panel	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Keyless entry	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Lighting systems	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Navigation System	√	√	√	√	√	0525
2006	Buick	Terraza - 4WD	Seats	√	√	√	√	√	
2006	Buick	Terraza - 4WD	Stationary windows	√	√	√	√	√	
2006	Buick	Terraza - 4WD	Theft deterrent	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Wipers/washer systems	√	√	√	√	√	0499
2006	Buick	Terraza - 4WD	Seat belts	√	√	√	√	√	0639 0515
2006	Buick	Terraza - 4WD	SIR	√	√	√	√	√	0639 0515

2006	Buick	Terraza Ext.	HVAC systems - manual	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Antilock Braking System	√	√	√	√	√	0506
2006	Buick	Terraza Ext.	Engine controls		√	√	√	√	
2006	Buick	Terraza Ext.	Engine cooling		√	√	√	√	
2006	Buick	Terraza Ext.	Engine electrical	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Shift lock control	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Automatic transaxle	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Buick	Terraza Ext.	Cruise Control	√	√	√	√	√	0493
2006	Buick	Terraza Ext.	Door	√	√	√	√	√	
2006	Buick	Terraza Ext.	Entertainment	√	√	√	√	√	0516
2006	Buick	Terraza Ext.	Horns	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Instrument panel	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Keyless entry	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Lighting systems	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Navigation System	√	√	√	√	√	0525
2006	Buick	Terraza Ext.	Seats	√	√	√	√	√	
2006	Buick	Terraza Ext.	Stationary windows	√	√	√	√	√	
2006	Buick	Terraza Ext.	Theft deterrent	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Wipers/washer systems	√	√	√	√	√	0499
2006	Buick	Terraza Ext.	Seat belts	√	√	√	√	√	0639 0515
2006	Buick	Terraza Ext.	SIR	√	√	√	√	√	0639 0515
2006	Cadillac	Escalade - 2WD	Powertrain	√	√	√	√	√	
2006	Cadillac	Escalade - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2006	Cadillac	Escalade - 2WD	CD changer	√	√	√			
2006	Cadillac	Escalade - 2WD	Chime	√	√	√	√	√	
2006	Cadillac	Escalade - 2WD	Disc player and video dilay	√	√	√			
2006	Cadillac	Escalade - 2WD	Digital radio receiver	√	√	√	√		0516
2006	Cadillac	Escalade - 2WD	Radio	√	√	√	√		
2006	Cadillac	Escalade - 2WD	Rear seat audio	√	√	√	√		
2006	Cadillac	Escalade - 2WD	Driver door module	√	√	√	√	√	
2006	Cadillac	Escalade - 2WD	Heating and air conditioning	√	√	√	√	√	
2006	Cadillac	Escalade - 2WD	Passenger door module	√	√	√	√	√	
2006	Cadillac	Escalade - 2WD	Rear HVAC	√	√	√	√		
2006	Cadillac	Escalade - 2WD	Generator battery control module	√	√	√	√	√	
2006	Cadillac	Escalade - 2WD	Driver seat module	√	√	√	√	√	
2006	Cadillac	Escalade - 2WD	Rear aux. climate module	√	√	√	√	√	
2006	Cadillac	Escalade - 2WD	Instrument panel cluster	√	√	√	√	√	
2006	Cadillac	Escalade - 2WD	Body Control Module	√	√	√	√	√	
2006	Cadillac	Escalade - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	Cadillac	Escalade - 2WD	Passenger presence system		√	√			0512

2006	Cadillac	Escalade - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Cadillac	Escalade - 2WD	Navigation radio	√	√	√	√	√	0525
2006	Cadillac	Escalade - 2WD	Traction assist (if equipped)		√	√	√	√	
2006	Cadillac	Escalade - 2WD	ABS	√	√	√	√	√	
2006	Cadillac	Escalade - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2006	Cadillac	Escalade - 2WD	Tire pressure monitor	√	√	√	√	√	0159
2006	Cadillac	Escalade - AWD	Powertrain	√	√	√	√	√	
2006	Cadillac	Escalade - AWD	Amplifier (bose)	√	√	√	√	√	0631
2006	Cadillac	Escalade - AWD	CD changer	√	√	√			
2006	Cadillac	Escalade - AWD	Chime	√	√	√	√	√	
2006	Cadillac	Escalade - AWD	Disc player and video delay	√	√	√			
2006	Cadillac	Escalade - AWD	Digital radio receiver	√	√	√	√		0516
2006	Cadillac	Escalade - AWD	Radio	√	√	√	√		
2006	Cadillac	Escalade - AWD	Rear seat audio	√	√	√	√		
2006	Cadillac	Escalade - AWD	Driver door module	√	√	√	√	√	
2006	Cadillac	Escalade - AWD	Heating and air conditioning	√	√	√	√	√	
2006	Cadillac	Escalade - AWD	Passenger door module	√	√	√	√	√	
2006	Cadillac	Escalade - AWD	Rear HVAC	√	√	√	√		
2006	Cadillac	Escalade - AWD	Generator battery control module	√	√	√	√	√	
2006	Cadillac	Escalade - AWD	Driver seat module	√	√	√	√	√	
2006	Cadillac	Escalade - AWD	Rear aux. climate module	√	√	√	√	√	
2006	Cadillac	Escalade - AWD	Instrument panel cluster	√	√	√	√	√	
2006	Cadillac	Escalade - AWD	Body Control Module	√	√	√	√	√	
2006	Cadillac	Escalade - AWD	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	Cadillac	Escalade - AWD	Passenger presence system		√	√			0512
2006	Cadillac	Escalade - AWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Cadillac	Escalade - AWD	Navigation radio	√	√	√	√	√	0525
2006	Cadillac	Escalade - AWD	Traction assist (if equipped)		√	√	√	√	
2006	Cadillac	Escalade - AWD	ABS	√	√	√	√	√	
2006	Cadillac	Escalade - AWD	ESC (if equipped)	√	√	√	√	√	0648
2006	Cadillac	Escalade - AWD	Tire pressure monitor	√	√	√	√	√	0159
2006	Cadillac	Escalade ESV	Powertrain	√	√	√	√	√	
2006	Cadillac	Escalade ESV	Amplifier (bose)	√	√	√	√	√	0631
2006	Cadillac	Escalade ESV	CD changer	√	√	√			
2006	Cadillac	Escalade ESV	Chime	√	√	√	√	√	
2006	Cadillac	Escalade ESV	Disc player and video delay	√	√	√			
2006	Cadillac	Escalade ESV	Digital radio receiver	√	√	√	√		0516
2006	Cadillac	Escalade ESV	Radio	√	√	√	√		
2006	Cadillac	Escalade ESV	Rear seat audio	√	√	√	√		
2006	Cadillac	Escalade ESV	Driver door module	√	√	√	√	√	
2006	Cadillac	Escalade ESV	Heating and air conditioning	√	√	√	√	√	

2006	Cadillac	Escalade ESV	Passenger door module	√	√	√	√	√	
2006	Cadillac	Escalade ESV	Rear HVAC	√	√	√	√		
2006	Cadillac	Escalade ESV	Generator battery control module	√	√	√	√	√	
2006	Cadillac	Escalade ESV	Driver seat module	√	√	√	√	√	
2006	Cadillac	Escalade ESV	Rear aux. climate module	√	√	√	√	√	
2006	Cadillac	Escalade ESV	Instrument panel cluster	√	√	√	√	√	
2006	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	
2006	Cadillac	Escalade ESV	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	Cadillac	Escalade ESV	Passenger presence system		√	√			0512
2006	Cadillac	Escalade ESV	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Cadillac	Escalade ESV	Navigation radio	√	√	√	√	√	0525
2006	Cadillac	Escalade ESV	Traction assist (if equipped)		√	√	√	√	
2006	Cadillac	Escalade ESV	ABS	√	√	√	√	√	
2006	Cadillac	Escalade ESV	ESC (if equipped)	√	√	√	√	√	0648
2006	Cadillac	Escalade ESV	Tire pressure monitor	√	√	√	√	√	0159
2006	Cadillac	Escalade EXT	Powertrain	√	√	√	√	√	
2006	Cadillac	Escalade EXT	Amplifier (bose)	√	√	√	√	√	0631
2006	Cadillac	Escalade EXT	CD changer	√	√	√			
2006	Cadillac	Escalade EXT	Chime	√	√	√	√	√	
2006	Cadillac	Escalade EXT	Disc player and video dilay	√	√	√			
2006	Cadillac	Escalade EXT	Digital radio receiver	√	√	√	√		0516
2006	Cadillac	Escalade EXT	Radio	√	√	√	√		
2006	Cadillac	Escalade EXT	Rear seat audio	√	√	√	√		
2006	Cadillac	Escalade EXT	Driver door module	√	√	√	√	√	
2006	Cadillac	Escalade EXT	Heating and air conditioning	√	√	√	√	√	
2006	Cadillac	Escalade EXT	Passenger door module	√	√	√	√	√	
2006	Cadillac	Escalade EXT	Rear HVAC	√	√	√	√		
2006	Cadillac	Escalade EXT	Generator battery control module	√	√	√	√	√	
2006	Cadillac	Escalade EXT	Driver seat module	√	√	√	√	√	
2006	Cadillac	Escalade EXT	Rear aux. climate module	√	√	√	√	√	
2006	Cadillac	Escalade EXT	Instrument panel cluster	√	√	√	√	√	
2006	Cadillac	Escalade EXT	Body Control Module	√	√	√	√	√	
2006	Cadillac	Escalade EXT	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	Cadillac	Escalade EXT	Passenger presence system		√	√			0512
2006	Cadillac	Escalade EXT	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Cadillac	Escalade EXT	Navigation radio	√	√	√	√	√	0525
2006	Cadillac	Escalade EXT	Traction assist (if equipped)		√	√	√	√	
2006	Cadillac	Escalade EXT	ABS	√	√	√	√	√	
2006	Cadillac	Escalade EXT	ESC (if equipped)	√	√	√	√	√	0648
2006	Cadillac	Escalade EXT	Tire pressure monitor	√	√	√	√	√	0159
2006	Cadillac	SRX	Powertrain	√	√	√	√	√	0493



2006	Cadillac	SRX	Digital radio receiver	√	√	√	√		0516
2006	Cadillac	SRX	Amplifier (bose)	√	√	√	√	√	
2006	Cadillac	SRX	Amplifier (delco)	√	√	√	√	√	
2006	Cadillac	SRX	CD changer	√					
2006	Cadillac	SRX	Disc player and video dilay	√	√	√			
2006	Cadillac	SRX	Radio	√	√	√	√		0649 0650 0651 0586 0587 0652 0653 0654 0655 0608 0525 0525
2006	Cadillac	SRX	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2006	Cadillac	SRX	Remote function actuation	√	√	√	√	√	0656
2006	Cadillac	SRX	Vehicle theft deterrent	√	√	√	√		
2006	Cadillac	SRX	Dash integration module	√	√	√	√	√	0604 0605
2006	Cadillac	SRX	Driver door module	√	√	√	√	√	0609 0609 0609 0609
2006	Cadillac	SRX	Driver door switch	√	√	√	√		
2006	Cadillac	SRX	Left rear door module	√	√	√	√	√	
2006	Cadillac	SRX	Passenger door module	√	√	√	√	√	0608
2006	Cadillac	SRX	Right rear door module	√	√	√	√	√	
2006	Cadillac	SRX	Climate control panel	√	√	√	√	√	0614 0615 0616 0618 0619 0610 0620 0611 0621 0612 0622 0623 0624 0625 0626 0627
2006	Cadillac	SRX	Personalization	√	√	√	√	√	
2006	Cadillac	SRX	Memory seat module	√	√	√	√	√	
2006	Cadillac	SRX	Rear seat module	√	√	√	√	√	
2006	Cadillac	SRX	Instrument panel cluster	√	√	√	√	√	
2006	Cadillac	SRX	Liftgate module	√	√	√	√	√	
2006	Cadillac	SRX	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Cadillac	SRX	Navigation radio	√	√	√	√	√	0658
2006	Cadillac	SRX	Tire pressure monitor		√	√	√	√	0629
2006	Cadillac	SRX	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2006	Cadillac	SRX	Electronic suension control	√	√	√	√	√	
2006	Cadillac	Hearse	HVAC systems - automatic	√	√	√	√	√	0493
2006	Cadillac	Hearse	Steering	√	√	√	√		
2006	Cadillac	Hearse	Tire pressure monitoring	√	√	√	√	√	0513 0159
2006	Cadillac	Hearse	Air suension	√	√	√	√	√	
2006	Cadillac	Hearse	Antilock Braking System	√	√	√	√	√	0506
2006	Cadillac	Hearse	Hydraulic brakes	√	√	√			
2006	Cadillac	Hearse	Park brake	√	√	√	√		
2006	Cadillac	Hearse	Engine controls	√	√	√	√	√	0493
2006	Cadillac	Hearse	Engine cooling	√	√	√	√	√	0493
2006	Cadillac	Hearse	Engine electrical	√	√	√	√	√	0493
2006	Cadillac	Hearse	Shift lock control	√	√	√	√		

2006	Cadillac	Hearse	Automatic transaxle	√	√	√	√	√	
2006	Cadillac	Hearse	Body rear end	√	√	√	√		
2006	Cadillac	Hearse	Cellular communication	√	√	√	√	√	0494 0591 0495 0585
2006	Cadillac	Hearse	Cruise Control	√	√	√	√	√	0493
2006	Cadillac	Hearse	Door	√	√	√	√	√	
2006	Cadillac	Hearse	Entertainment	√	√	√	√	√	
2006	Cadillac	Hearse	Horns	√	√	√	√		
2006	Cadillac	Hearse	Instrument panel	√	√	√	√	√	0493
2006	Cadillac	Hearse	Keyless entry	√	√	√	√	√	0513 0159
2006	Cadillac	Hearse	Lighting systems	√	√	√	√		
2006	Cadillac	Hearse	Body Control Module	√	√	√	√		
2006	Cadillac	Hearse	Seats	√	√	√	√	√	
2006	Cadillac	Hearse	Stationary windows	√	√	√	√		
2006	Cadillac	Hearse	Theft deterrent	√	√	√	√	√	0493
2006	Cadillac	Hearse	Wipers/washer systems	√	√	√	√		
2006	Cadillac	Hearse	Seat belts	√	√	√	√	√	0497
2006	Cadillac	Hearse	SIR	√	√	√	√	√	0497
2006	Cadillac	Limousine	HVAC systems - automatic	√	√	√	√	√	0493
2006	Cadillac	Limousine	Steering	√	√	√	√		
2006	Cadillac	Limousine	Tire pressure monitoring	√	√	√	√	√	0513 0159
2006	Cadillac	Limousine	Air suension	√	√	√	√	√	
2006	Cadillac	Limousine	Antilock Braking System	√	√	√	√	√	0506
2006	Cadillac	Limousine	Hydraulic brakes	√	√	√			
2006	Cadillac	Limousine	Park brake	√	√	√	√		
2006	Cadillac	Limousine	Engine controls	√	√	√	√	√	0493
2006	Cadillac	Limousine	Engine cooling	√	√	√	√	√	0493
2006	Cadillac	Limousine	Engine electrical	√	√	√	√	√	0493
2006	Cadillac	Limousine	Shift lock control	√	√	√	√		
2006	Cadillac	Limousine	Automatic transaxle	√	√	√	√	√	
2006	Cadillac	Limousine	Body rear end	√	√	√	√		
2006	Cadillac	Limousine	Cellular communication	√	√	√	√	√	0494 0591 0495 0585
2006	Cadillac	Limousine	Cruise Control	√	√	√	√	√	0493
2006	Cadillac	Limousine	Door	√	√	√	√	√	
2006	Cadillac	Limousine	Entertainment	√	√	√	√	√	
2006	Cadillac	Limousine	Horns	√	√	√	√		
2006	Cadillac	Limousine	Instrument panel	√	√	√	√	√	0493
2006	Cadillac	Limousine	Keyless entry	√	√	√	√	√	0513 0159
2006	Cadillac	Limousine	Lighting systems	√	√	√	√		
2006	Cadillac	Limousine	Body Control Module	√	√	√	√		
2006	Cadillac	Limousine	Seats	√	√	√	√	√	
2006	Cadillac	Limousine	Stationary windows	√	√	√	√		

2006	Cadillac	Limousine	Theft deterrent	√	√	√	√	√	0493
2006	Cadillac	Limousine	Wipers/washer systems	√	√	√	√		
2006	Cadillac	Limousine	Seat belts	√	√	√	√	√	0497
2006	Cadillac	Limousine	SIR	√	√	√	√	√	0497
2006	Chevrolet	Avalanche - 2WD	Powertrain	√	√	√	√	√	
2006	Chevrolet	Avalanche - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2006	Chevrolet	Avalanche - 2WD	CD changer	√	√	√			
2006	Chevrolet	Avalanche - 2WD	Chime	√	√	√	√	√	
2006	Chevrolet	Avalanche - 2WD	Disc player and video dilay	√	√	√			
2006	Chevrolet	Avalanche - 2WD	Digital radio receiver	√	√	√	√		0516
2006	Chevrolet	Avalanche - 2WD	Radio	√	√	√	√		
2006	Chevrolet	Avalanche - 2WD	Rear seat audio	√	√	√	√		
2006	Chevrolet	Avalanche - 2WD	Driver door module	√	√	√	√	√	
2006	Chevrolet	Avalanche - 2WD	Heating and air conditioning	√	√	√	√	√	
2006	Chevrolet	Avalanche - 2WD	Passenger door module	√	√	√	√	√	
2006	Chevrolet	Avalanche - 2WD	Rear HVAC	√	√	√	√		
2006	Chevrolet	Avalanche - 2WD	Generator battery control module	√	√	√	√	√	
2006	Chevrolet	Avalanche - 2WD	Driver seat module	√	√	√	√	√	
2006	Chevrolet	Avalanche - 2WD	Rear aux. climate module	√	√	√	√	√	
2006	Chevrolet	Avalanche - 2WD	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	
2006	Chevrolet	Avalanche - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	Chevrolet	Avalanche - 2WD	Vehicle theft deterrent	√	√	√	√		
2006	Chevrolet	Avalanche - 2WD	Passenger presence system		√	√			0512
2006	Chevrolet	Avalanche - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Chevrolet	Avalanche - 2WD	Navigation radio	√	√	√	√	√	0525
2006	Chevrolet	Avalanche - 2WD	Traction assist (if equipped)		√	√	√	√	
2006	Chevrolet	Avalanche - 2WD	ABS	√	√	√	√	√	
2006	Chevrolet	Avalanche - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2006	Chevrolet	Avalanche - 2WD	Tire pressure monitor	√	√	√	√	√	0159
2006	Chevrolet	Avalanche - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	Chevrolet	Avalanche - 4WD	Powertrain	√	√	√	√	√	
2006	Chevrolet	Avalanche - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2006	Chevrolet	Avalanche - 4WD	CD changer	√	√	√			
2006	Chevrolet	Avalanche - 4WD	Chime	√	√	√	√	√	
2006	Chevrolet	Avalanche - 4WD	Disc player and video dilay	√	√	√			
2006	Chevrolet	Avalanche - 4WD	Digital radio receiver	√	√	√	√		0516
2006	Chevrolet	Avalanche - 4WD	Radio	√	√	√	√		
2006	Chevrolet	Avalanche - 4WD	Rear seat audio	√	√	√	√		
2006	Chevrolet	Avalanche - 4WD	Driver door module	√	√	√	√	√	
2006	Chevrolet	Avalanche - 4WD	Heating and air conditioning	√	√	√	√	√	

2006	Chevrolet	Avalanche - 4WD	Passenger door module	√	√	√	√	√	
2006	Chevrolet	Avalanche - 4WD	Rear HVAC	√	√	√	√		
2006	Chevrolet	Avalanche - 4WD	Generator battery control module	√	√	√	√	√	
2006	Chevrolet	Avalanche - 4WD	Driver seat module	√	√	√	√	√	
2006	Chevrolet	Avalanche - 4WD	Rear aux. climate module	√	√	√	√	√	
2006	Chevrolet	Avalanche - 4WD	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	
2006	Chevrolet	Avalanche - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	Chevrolet	Avalanche - 4WD	Vehicle theft deterrent	√	√	√	√		
2006	Chevrolet	Avalanche - 4WD	Passenger presence system		√	√			0512
2006	Chevrolet	Avalanche - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Chevrolet	Avalanche - 4WD	Navigation radio	√	√	√	√	√	0525
2006	Chevrolet	Avalanche - 4WD	Traction assist (if equipped)		√	√	√	√	
2006	Chevrolet	Avalanche - 4WD	ABS	√	√	√	√	√	
2006	Chevrolet	Avalanche - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2006	Chevrolet	Avalanche - 4WD	Tire pressure monitor	√	√	√	√	√	0159
2006	Chevrolet	Avalanche - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	Chevrolet	Colorado Pickup - 2WD	Powertrain	√	√	√	√	√	
2006	Chevrolet	Colorado Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2006	Chevrolet	Colorado Pickup - 2WD	Radio	√	√	√	√		
2006	Chevrolet	Colorado Pickup - 2WD	Passenger presence system		√	√			0512
2006	Chevrolet	Colorado Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	Colorado Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Chevrolet	Colorado Pickup - 2WD	Body Control Module	√	√	√	√	√	0550
2006	Chevrolet	Colorado Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2006	Chevrolet	Colorado Pickup - 2WD	ABS	√	√	√	√	√	0516
2006	Chevrolet	Colorado Pickup - 2WD	Powertrain	√	√	√	√	√	
2006	Chevrolet	Colorado Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2006	Chevrolet	Colorado Pickup - 2WD	Radio	√	√	√	√		
2006	Chevrolet	Colorado Pickup - 2WD	Passenger presence system		√	√			0512
2006	Chevrolet	Colorado Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	Colorado Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Chevrolet	Colorado Pickup - 2WD	Body Control Module	√	√	√	√	√	0550
2006	Chevrolet	Colorado Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2006	Chevrolet	Colorado Pickup - 2WD	ABS	√	√	√	√	√	0516
2006	Chevrolet	Colorado Pickup - 4WD	Powertrain	√	√	√	√	√	
2006	Chevrolet	Colorado Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2006	Chevrolet	Colorado Pickup - 4WD	Radio	√	√	√	√		
2006	Chevrolet	Colorado Pickup - 4WD	Passenger presence system		√	√			0512
2006	Chevrolet	Colorado Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	Colorado Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585

2006	Chevrolet	Colorado Pickup - 4WD	Body Control Module	√	√	√	√	√	0550
2006	Chevrolet	Colorado Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2006	Chevrolet	Colorado Pickup - 4WD	ABS	√	√	√	√	√	0516
2006	Chevrolet	Colorado Pickup - 4WD	Powertrain	√	√	√	√	√	
2006	Chevrolet	Colorado Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2006	Chevrolet	Colorado Pickup - 4WD	Radio	√	√	√	√		
2006	Chevrolet	Colorado Pickup - 4WD	Passenger presence system		√	√			0512
2006	Chevrolet	Colorado Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	Colorado Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Chevrolet	Colorado Pickup - 4WD	Body Control Module	√	√	√	√	√	0550
2006	Chevrolet	Colorado Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2006	Chevrolet	Colorado Pickup - 4WD	ABS	√	√	√	√	√	0516
2006	Chevrolet	Equinox	Powertrain	√	√	√	√	√	0493
2006	Chevrolet	Equinox	Digital radio receiver	√	√	√	√		0516
2006	Chevrolet	Equinox	Instrument panel cluster	√				√	
2006	Chevrolet	Equinox	Radio	√	√	√	√	√	0573 0578 0579 0572 0552 0525
2006	Chevrolet	Equinox	Body Control Module	√	√	√	√	√	0633 0640 0634 0635
2006	Chevrolet	Equinox	Supplemental inflatable restraint	√	√	√	√		0531 0515
2006	Chevrolet	Equinox	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2006	Chevrolet	Equinox	Electric power steering		√	√	√	√	
2006	Chevrolet	Equinox	Antilock Braking System	√	√	√	√	√	0506
2006	Chevrolet	Express	Powertrain	√	√	√	√	√	0638
2006	Chevrolet	Express	Multifunction alarm module	√	√	√	√	√	
2006	Chevrolet	Express	Radio	√	√	√	√		
2006	Chevrolet	Express	Passenger presence system		√	√			
2006	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	0531
2006	Chevrolet	Express	Remote function actuation	√	√	√	√	√	
2006	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	Express	Body Control Module	√	√	√	√	√	
2006	Chevrolet	Express	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Chevrolet	Express	ABS	√	√	√	√	√	
2006	Chevrolet	Express	Powertrain	√	√	√	√	√	0638
2006	Chevrolet	Express	Multifunction alarm module	√	√	√	√	√	
2006	Chevrolet	Express	Radio	√	√	√	√		
2006	Chevrolet	Express	Passenger presence system		√	√			
2006	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	0531
2006	Chevrolet	Express	Remote function actuation	√	√	√	√	√	
2006	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	Express	Body Control Module	√	√	√	√	√	
2006	Chevrolet	Express	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585

2006	Chevrolet	Express	ABS	√	√	√	√	√	
2006	Chevrolet	Express	Powertrain	√	√	√	√	√	
2006	Chevrolet	Express	Multifunction alarm module	√	√	√	√	√	
2006	Chevrolet	Express	Radio	√	√	√	√		
2006	Chevrolet	Express	Passenger presence system		√	√			
2006	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	0531
2006	Chevrolet	Express	Remote function actuation	√	√	√	√	√	
2006	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	Express	Body Control Module	√	√	√	√	√	
2006	Chevrolet	Express	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Chevrolet	Express	ABS	√	√	√	√	√	
2006	Chevrolet	Express	Powertrain	√	√	√	√	√	
2006	Chevrolet	Express	Multifunction alarm module	√	√	√	√	√	
2006	Chevrolet	Express	Radio	√	√	√	√		
2006	Chevrolet	Express	Passenger presence system		√	√			
2006	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√	√	0531
2006	Chevrolet	Express	Remote function actuation	√	√	√	√	√	
2006	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	Express	Body Control Module	√	√	√	√	√	
2006	Chevrolet	Express	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Chevrolet	Express	ABS	√	√	√	√	√	
2006	Chevrolet	HHR	HVAC systems - manual	√	√	√	√	√	0493
2006	Chevrolet	HHR	Power steering system		√	√	√		
2006	Chevrolet	HHR	Antilock Braking System	√	√	√	√	√	0493
2006	Chevrolet	HHR	Park brake	√	√	√	√	√	0515
2006	Chevrolet	HHR	Engine controls	√	√	√	√	√	0493
2006	Chevrolet	HHR	Engine cooling	√	√	√	√	√	0493
2006	Chevrolet	HHR	Engine electrical	√	√	√	√	√	0493
2006	Chevrolet	HHR	Shift lock control	√	√	√	√	√	0515
2006	Chevrolet	HHR	Automatic transaxle	√	√	√	√	√	
2006	Chevrolet	HHR	Cellular communication	√	√	√	√	√	0494 0591 0565 0495
2006	Chevrolet	HHR	Cruise Control	√	√	√	√	√	0493
2006	Chevrolet	HHR	Entertainment	√	√	√	√	√	0528
2006	Chevrolet	HHR	Horns	√	√	√	√	√	0515
2006	Chevrolet	HHR	Instrument panel	√	√	√	√	√	0493
2006	Chevrolet	HHR	Keyless entry	√	√	√	√	√	0515
2006	Chevrolet	HHR	Lighting systems	√	√	√	√	√	0515
2006	Chevrolet	HHR	Theft deterrent	√	√	√	√	√	0515
2006	Chevrolet	HHR	Wipers/washer systems	√	√	√	√	√	0515
2006	Chevrolet	HHR	Seat belts	√	√	√	√	√	0515
2006	Chevrolet	HHR	SIR	√	√	√	√	√	0515

2006	Chevrolet	K Silverado - 4WD	Powertrain	√	√	√	√	√	0638
2006	Chevrolet	K Silverado - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2006	Chevrolet	K Silverado - 4WD	CD changer	√	√	√			
2006	Chevrolet	K Silverado - 4WD	Chime	√	√	√	√	√	
2006	Chevrolet	K Silverado - 4WD	Disc player and video dilay	√	√	√			
2006	Chevrolet	K Silverado - 4WD	Digital radio receiver	√	√	√	√		0516
2006	Chevrolet	K Silverado - 4WD	Radio	√	√	√	√		
2006	Chevrolet	K Silverado - 4WD	Rear seat audio	√	√	√	√		
2006	Chevrolet	K Silverado - 4WD	Driver door module	√	√	√	√	√	
2006	Chevrolet	K Silverado - 4WD	Heating and air conditioning	√	√	√	√	√	
2006	Chevrolet	K Silverado - 4WD	Passenger door module	√	√	√	√	√	
2006	Chevrolet	K Silverado - 4WD	Rear HVAC	√	√	√	√		
2006	Chevrolet	K Silverado - 4WD	Generator battery control module	√	√	√	√	√	
2006	Chevrolet	K Silverado - 4WD	Driver seat module	√	√	√	√	√	
2006	Chevrolet	K Silverado - 4WD	Rear aux. climate module	√	√	√	√	√	
2006	Chevrolet	K Silverado - 4WD	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	K Silverado - 4WD	Body Control Module	√	√	√	√	√	
2006	Chevrolet	K Silverado - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	Chevrolet	K Silverado - 4WD	Vehicle theft deterrent	√	√	√	√		
2006	Chevrolet	K Silverado - 4WD	Passenger presence system		√	√			0512
2006	Chevrolet	K Silverado - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Chevrolet	K Silverado - 4WD	Navigation radio	√	√	√	√	√	0525
2006	Chevrolet	K Silverado - 4WD	Traction assist (if equipped)		√	√	√	√	
2006	Chevrolet	K Silverado - 4WD	ABS	√	√	√	√	√	
2006	Chevrolet	K Silverado - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2006	Chevrolet	K Silverado - 4WD	Tire pressure monitor	√	√	√	√	√	0159
2006	Chevrolet	K Silverado - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	Chevrolet	K Silverado - 4WD (CNG)	Powertrain	√	√	√	√	√	
2006	Chevrolet	K Silverado - 4WD (CNG)	Amplifier (bose)	√	√	√	√	√	0631
2006	Chevrolet	K Silverado - 4WD (CNG)	CD changer	√	√	√			
2006	Chevrolet	K Silverado - 4WD (CNG)	Chime	√	√	√	√	√	
2006	Chevrolet	K Silverado - 4WD (CNG)	Disc player and video dilay	√	√	√			
2006	Chevrolet	K Silverado - 4WD (CNG)	Digital radio receiver	√	√	√	√		0516
2006	Chevrolet	K Silverado - 4WD (CNG)	Radio	√	√	√	√		
2006	Chevrolet	K Silverado - 4WD (CNG)	Rear seat audio	√	√	√	√		
2006	Chevrolet	K Silverado - 4WD (CNG)	Driver door module	√	√	√	√	√	
2006	Chevrolet	K Silverado - 4WD (CNG)	Heating and air conditioning	√	√	√	√	√	
2006	Chevrolet	K Silverado - 4WD (CNG)	Passenger door module	√	√	√	√	√	
2006	Chevrolet	K Silverado - 4WD (CNG)	Rear HVAC	√	√	√	√		
2006	Chevrolet	K Silverado - 4WD (CNG)	Generator battery control module	√	√	√	√	√	
2006	Chevrolet	K Silverado - 4WD (CNG)	Driver seat module	√	√	√	√	√	

2006	Chevrolet	K Silverado - 4WD (CNG)	Rear aux. climate module	√	√	√	√	√	
2006	Chevrolet	K Silverado - 4WD (CNG)	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	K Silverado - 4WD (CNG)	Body Control Module	√	√	√	√	√	
2006	Chevrolet	K Silverado - 4WD (CNG)	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	Chevrolet	K Silverado - 4WD (CNG)	Vehicle theft deterrent	√	√	√	√		
2006	Chevrolet	K Silverado - 4WD (CNG)	Passenger presence system		√	√			0512
2006	Chevrolet	K Silverado - 4WD (CNG)	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Chevrolet	K Silverado - 4WD (CNG)	Navigation radio	√	√	√	√	√	0525
2006	Chevrolet	K Silverado - 4WD (CNG)	Traction assist (if equipped)		√	√	√	√	
2006	Chevrolet	K Silverado - 4WD (CNG)	ABS	√	√	√	√	√	
2006	Chevrolet	K Silverado - 4WD (CNG)	ESC (if equipped)	√	√	√	√	√	0648
2006	Chevrolet	K Silverado - 4WD (CNG)	Tire pressure monitor	√	√	√	√	√	0159
2006	Chevrolet	K Silverado - 4WD (CNG)	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	Chevrolet	SSR	Powertrain	√	√	√	√	√	0493
2006	Chevrolet	SSR	Radio	√	√	√	√		
2006	Chevrolet	SSR	Amplifier (bose)	√	√	√	√	√	
2006	Chevrolet	SSR	Driver seat module	√	√	√	√	√	
2006	Chevrolet	SSR	Roof and door module	√	√	√	√	√	
2006	Chevrolet	SSR	Supplemental inflatable restraint	√	√	√	√	√	
2006	Chevrolet	SSR	Remote function actuation	√	√	√	√	√	
2006	Chevrolet	SSR	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	SSR	Body Control Module	√	√	√	√	√	
2006	Chevrolet	SSR	Traction assist (if equipped)		√	√	√	√	
2006	Chevrolet	SSR	4WAL 3 sensor		√	√	√	√	
2006	Chevrolet	Suburban - 2WD	Powertrain	√	√	√	√	√	
2006	Chevrolet	Suburban - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2006	Chevrolet	Suburban - 2WD	CD changer	√	√	√			
2006	Chevrolet	Suburban - 2WD	Chime	√	√	√	√	√	
2006	Chevrolet	Suburban - 2WD	Disc player and video dilay	√	√	√			
2006	Chevrolet	Suburban - 2WD	Digital radio receiver	√	√	√	√		0516
2006	Chevrolet	Suburban - 2WD	Radio	√	√	√	√		
2006	Chevrolet	Suburban - 2WD	Rear seat audio	√	√	√	√		
2006	Chevrolet	Suburban - 2WD	Driver door module	√	√	√	√	√	
2006	Chevrolet	Suburban - 2WD	Heating and air conditioning	√	√	√	√	√	
2006	Chevrolet	Suburban - 2WD	Passenger door module	√	√	√	√	√	
2006	Chevrolet	Suburban - 2WD	Rear HVAC	√	√	√	√		
2006	Chevrolet	Suburban - 2WD	Generator battery control module	√	√	√	√	√	
2006	Chevrolet	Suburban - 2WD	Driver seat module	√	√	√	√	√	
2006	Chevrolet	Suburban - 2WD	Rear aux. climate module	√	√	√	√	√	
2006	Chevrolet	Suburban - 2WD	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	



2006	Chevrolet	Suburban - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	Chevrolet	Suburban - 2WD	Vehicle theft deterrent	√	√	√	√		
2006	Chevrolet	Suburban - 2WD	Passenger presence system		√	√			0512
2006	Chevrolet	Suburban - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Chevrolet	Suburban - 2WD	Navigation radio	√	√	√	√	√	0525
2006	Chevrolet	Suburban - 2WD	Traction assist (if equipped)		√	√	√	√	
2006	Chevrolet	Suburban - 2WD	ABS	√	√	√	√	√	
2006	Chevrolet	Suburban - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2006	Chevrolet	Suburban - 2WD	Tire pressure monitor	√	√	√	√	√	0159
2006	Chevrolet	Suburban - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	Chevrolet	Suburban - 4WD	Powertrain	√	√	√	√	√	
2006	Chevrolet	Suburban - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2006	Chevrolet	Suburban - 4WD	CD changer	√	√	√			
2006	Chevrolet	Suburban - 4WD	Chime	√	√	√	√	√	
2006	Chevrolet	Suburban - 4WD	Disc player and video dilay	√	√	√			
2006	Chevrolet	Suburban - 4WD	Digital radio receiver	√	√	√	√		0516
2006	Chevrolet	Suburban - 4WD	Radio	√	√	√	√		
2006	Chevrolet	Suburban - 4WD	Rear seat audio	√	√	√	√		
2006	Chevrolet	Suburban - 4WD	Driver door module	√	√	√	√	√	
2006	Chevrolet	Suburban - 4WD	Heating and air conditioning	√	√	√	√	√	
2006	Chevrolet	Suburban - 4WD	Passenger door module	√	√	√	√	√	
2006	Chevrolet	Suburban - 4WD	Rear HVAC	√	√	√	√		
2006	Chevrolet	Suburban - 4WD	Generator battery control module	√	√	√	√	√	
2006	Chevrolet	Suburban - 4WD	Driver seat module	√	√	√	√	√	
2006	Chevrolet	Suburban - 4WD	Rear aux. climate module	√	√	√	√	√	
2006	Chevrolet	Suburban - 4WD	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	
2006	Chevrolet	Suburban - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	Chevrolet	Suburban - 4WD	Vehicle theft deterrent	√	√	√	√		
2006	Chevrolet	Suburban - 4WD	Passenger presence system		√	√			0512
2006	Chevrolet	Suburban - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Chevrolet	Suburban - 4WD	Navigation radio	√	√	√	√	√	0525
2006	Chevrolet	Suburban - 4WD	Traction assist (if equipped)		√	√	√	√	
2006	Chevrolet	Suburban - 4WD	ABS	√	√	√	√	√	
2006	Chevrolet	Suburban - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2006	Chevrolet	Suburban - 4WD	Tire pressure monitor	√	√	√	√	√	0159
2006	Chevrolet	Suburban - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	Chevrolet	Tahoe - 2WD	Powertrain	√	√	√	√	√	
2006	Chevrolet	Tahoe - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2006	Chevrolet	Tahoe - 2WD	CD changer	√	√	√			
2006	Chevrolet	Tahoe - 2WD	Chime	√	√	√	√	√	

2006	Chevrolet	Tahoe - 2WD	Disc player and video dilay	√	√	√			
2006	Chevrolet	Tahoe - 2WD	Digital radio receiver	√	√	√	√		0516
2006	Chevrolet	Tahoe - 2WD	Radio	√	√	√	√		
2006	Chevrolet	Tahoe - 2WD	Rear seat audio	√	√	√	√		
2006	Chevrolet	Tahoe - 2WD	Driver door module	√	√	√	√	√	
2006	Chevrolet	Tahoe - 2WD	Heating and air conditioning	√	√	√	√	√	
2006	Chevrolet	Tahoe - 2WD	Passenger door module	√	√	√	√	√	
2006	Chevrolet	Tahoe - 2WD	Rear HVAC	√	√	√	√		
2006	Chevrolet	Tahoe - 2WD	Generator battery control module	√	√	√	√	√	
2006	Chevrolet	Tahoe - 2WD	Driver seat module	√	√	√	√	√	
2006	Chevrolet	Tahoe - 2WD	Rear aux. climate module	√	√	√	√	√	
2006	Chevrolet	Tahoe - 2WD	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	Tahoe - 2WD	Body Control Module	√	√	√	√	√	
2006	Chevrolet	Tahoe - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	Chevrolet	Tahoe - 2WD	Vehicle theft deterrent	√	√	√	√		
2006	Chevrolet	Tahoe - 2WD	Passenger presence system		√	√			0512
2006	Chevrolet	Tahoe - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Chevrolet	Tahoe - 2WD	Navigation radio	√	√	√	√	√	0525
2006	Chevrolet	Tahoe - 2WD	Traction assist (if equipped)		√	√	√	√	
2006	Chevrolet	Tahoe - 2WD	ABS	√	√	√	√	√	
2006	Chevrolet	Tahoe - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2006	Chevrolet	Tahoe - 2WD	Tire pressure monitor	√	√	√	√	√	0159
2006	Chevrolet	Tahoe - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	Chevrolet	Tahoe - 4WD	Powertrain	√	√	√	√	√	
2006	Chevrolet	Tahoe - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2006	Chevrolet	Tahoe - 4WD	CD changer	√	√	√			
2006	Chevrolet	Tahoe - 4WD	Chime	√	√	√	√	√	
2006	Chevrolet	Tahoe - 4WD	Disc player and video dilay	√	√	√			
2006	Chevrolet	Tahoe - 4WD	Digital radio receiver	√	√	√	√		0516
2006	Chevrolet	Tahoe - 4WD	Radio	√	√	√	√		
2006	Chevrolet	Tahoe - 4WD	Rear seat audio	√	√	√	√		
2006	Chevrolet	Tahoe - 4WD	Driver door module	√	√	√	√	√	
2006	Chevrolet	Tahoe - 4WD	Heating and air conditioning	√	√	√	√	√	
2006	Chevrolet	Tahoe - 4WD	Passenger door module	√	√	√	√	√	
2006	Chevrolet	Tahoe - 4WD	Rear HVAC	√	√	√	√		
2006	Chevrolet	Tahoe - 4WD	Generator battery control module	√	√	√	√	√	
2006	Chevrolet	Tahoe - 4WD	Driver seat module	√	√	√	√	√	
2006	Chevrolet	Tahoe - 4WD	Rear aux. climate module	√	√	√	√	√	
2006	Chevrolet	Tahoe - 4WD	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	Tahoe - 4WD	Body Control Module	√	√	√	√	√	
2006	Chevrolet	Tahoe - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0639

2006	Chevrolet	Tahoe - 4WD	Vehicle theft deterrent	√	√	√	√		
2006	Chevrolet	Tahoe - 4WD	Passenger presence system		√	√			0512
2006	Chevrolet	Tahoe - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Chevrolet	Tahoe - 4WD	Navigation radio	√	√	√	√	√	0525
2006	Chevrolet	Tahoe - 4WD	Traction assist (if equipped)		√	√	√	√	
2006	Chevrolet	Tahoe - 4WD	ABS	√	√	√	√	√	
2006	Chevrolet	Tahoe - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2006	Chevrolet	Tahoe - 4WD	Tire pressure monitor	√	√	√	√	√	0159
2006	Chevrolet	Tahoe - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	Chevrolet	TrailBlazer	Powertrain	√	√	√	√	√	0493
2006	Chevrolet	TrailBlazer	Disc player and video delay	√	√	√			
2006	Chevrolet	TrailBlazer	Digital radio receiver	√	√	√	√		0516
2006	Chevrolet	TrailBlazer	Radio	√	√	√	√		
2006	Chevrolet	TrailBlazer	Rear seat audio	√	√	√	√		
2006	Chevrolet	TrailBlazer	Body Control Module	√	√	√	√	√	0550
2006	Chevrolet	TrailBlazer	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Driver door module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Driver seat module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Heating and air conditioning	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Lift gate module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Passenger door module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Passenger presence system		√	√			0512
2006	Chevrolet	TrailBlazer	Vehicle theft deterrent	√	√	√	√		
2006	Chevrolet	TrailBlazer	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Chevrolet	TrailBlazer	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	Chevrolet	TrailBlazer	Navigation radio	√	√	√	√	√	0525
2006	Chevrolet	TrailBlazer	ABS/TCS/VSES	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Tire pressure monitor		√	√	√	√	0159
2006	Chevrolet	TrailBlazer	Powertrain	√	√	√	√	√	0493
2006	Chevrolet	TrailBlazer	Disc player and video delay	√	√	√			
2006	Chevrolet	TrailBlazer	Digital radio receiver	√	√	√	√		0516
2006	Chevrolet	TrailBlazer	Radio	√	√	√	√		
2006	Chevrolet	TrailBlazer	Rear seat audio	√	√	√	√		
2006	Chevrolet	TrailBlazer	Body Control Module	√	√	√	√	√	0550
2006	Chevrolet	TrailBlazer	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Driver door module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Driver seat module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Heating and air conditioning	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Lift gate module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Passenger door module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Rear HVAC/RSA	√	√	√	√	√	

2006	Chevrolet	TrailBlazer	Passenger presence system		√	√			0512
2006	Chevrolet	TrailBlazer	Vehicle theft deterrent	√	√	√	√		
2006	Chevrolet	TrailBlazer	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Chevrolet	TrailBlazer	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	Chevrolet	TrailBlazer	Rear HVAC	√	√	√	√	√	0512
2006	Chevrolet	TrailBlazer	Navigation radio	√	√	√	√	√	0525
2006	Chevrolet	TrailBlazer	ABS/TCS/VSES	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Powertrain	√	√	√	√	√	0493
2006	Chevrolet	TrailBlazer	Disc player and video dilay	√	√	√			
2006	Chevrolet	TrailBlazer	Digital radio receiver	√	√	√	√		0516
2006	Chevrolet	TrailBlazer	Radio	√	√	√	√		
2006	Chevrolet	TrailBlazer	Rear seat audio	√	√	√	√		
2006	Chevrolet	TrailBlazer	Body Control Module	√	√	√	√	√	0550
2006	Chevrolet	TrailBlazer	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Driver door module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Driver seat module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Heating and air conditioning	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Lift gate module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Passenger door module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Passenger presence system		√	√			0512
2006	Chevrolet	TrailBlazer	Vehicle theft deterrent	√	√	√	√		
2006	Chevrolet	TrailBlazer	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Chevrolet	TrailBlazer	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	Chevrolet	TrailBlazer	Navigation radio	√	√	√	√	√	0525
2006	Chevrolet	TrailBlazer	ABS/TCS/VSES	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Tire pressure monitor		√	√	√	√	0159
2006	Chevrolet	TrailBlazer	Powertrain	√	√	√	√	√	0493
2006	Chevrolet	TrailBlazer	Disc player and video dilay	√	√	√			
2006	Chevrolet	TrailBlazer	Digital radio receiver	√	√	√	√		0516
2006	Chevrolet	TrailBlazer	Radio	√	√	√	√		
2006	Chevrolet	TrailBlazer	Rear seat audio	√	√	√	√		
2006	Chevrolet	TrailBlazer	Body Control Module	√	√	√	√	√	0550
2006	Chevrolet	TrailBlazer	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Driver door module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Driver seat module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Heating and air conditioning	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Lift gate module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Passenger door module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Rear HVAC/RSA	√	√	√	√	√	
2006	Chevrolet	TrailBlazer	Passenger presence system		√	√			0512
2006	Chevrolet	TrailBlazer	Vehicle theft deterrent	√	√	√	√		

2006	Chevrolet	TrailBlazer	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Chevrolet	TrailBlazer	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	Chevrolet	TrailBlazer	Rear HVAC	√	√	√	√	√	0512
2006	Chevrolet	TrailBlazer	Navigation radio	√	√	√	√	√	0525
2006	Chevrolet	TrailBlazer	ABS/TCS/VSES	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Powertrain	√	√	√	√	√	0493
2006	Chevrolet	TrailBlazer EXT	Disc player and video dilay	√	√	√			
2006	Chevrolet	TrailBlazer EXT	Digital radio receiver	√	√	√	√		0516
2006	Chevrolet	TrailBlazer EXT	Radio	√	√	√	√		
2006	Chevrolet	TrailBlazer EXT	Rear seat audio	√	√	√	√		
2006	Chevrolet	TrailBlazer EXT	Body Control Module	√	√	√	√	√	0550
2006	Chevrolet	TrailBlazer EXT	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Driver door module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Driver seat module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Heating and air conditioning	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Lift gate module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Passenger door module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Passenger presence system		√	√			0512
2006	Chevrolet	TrailBlazer EXT	Vehicle theft deterrent	√	√	√	√		
2006	Chevrolet	TrailBlazer EXT	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Chevrolet	TrailBlazer EXT	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	Chevrolet	TrailBlazer EXT	Navigation radio	√	√	√	√	√	0525
2006	Chevrolet	TrailBlazer EXT	ABS/TCS/VSES	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Tire pressure monitor		√	√	√	√	0159
2006	Chevrolet	TrailBlazer EXT	Powertrain	√	√	√	√	√	0493
2006	Chevrolet	TrailBlazer EXT	Disc player and video dilay	√	√	√			
2006	Chevrolet	TrailBlazer EXT	Digital radio receiver	√	√	√	√		0516
2006	Chevrolet	TrailBlazer EXT	Radio	√	√	√	√		
2006	Chevrolet	TrailBlazer EXT	Rear seat audio	√	√	√	√		
2006	Chevrolet	TrailBlazer EXT	Body Control Module	√	√	√	√	√	0550
2006	Chevrolet	TrailBlazer EXT	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Driver door module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Driver seat module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Heating and air conditioning	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Lift gate module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Passenger door module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Rear HVAC/RSA	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Passenger presence system		√	√			0512
2006	Chevrolet	TrailBlazer EXT	Vehicle theft deterrent	√	√	√	√		
2006	Chevrolet	TrailBlazer EXT	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Chevrolet	TrailBlazer EXT	Supplemental inflatable restraint	√	√	√	√	√	0516

2006	Chevrolet	TrailBlazer EXT	Rear HVAC	√	√	√	√	√	0512
2006	Chevrolet	TrailBlazer EXT	Navigation radio	√	√	√	√	√	0525
2006	Chevrolet	TrailBlazer EXT	ABS/TCS/VSES	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Powertrain	√	√	√	√	√	0493
2006	Chevrolet	TrailBlazer EXT	Disc player and video dilay	√	√	√			
2006	Chevrolet	TrailBlazer EXT	Digital radio receiver	√	√	√	√		0516
2006	Chevrolet	TrailBlazer EXT	Radio	√	√	√	√		
2006	Chevrolet	TrailBlazer EXT	Rear seat audio	√	√	√	√		
2006	Chevrolet	TrailBlazer EXT	Body Control Module	√	√	√	√	√	0550
2006	Chevrolet	TrailBlazer EXT	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Driver door module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Driver seat module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Heating and air conditioning	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Lift gate module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Passenger door module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Passenger presence system		√	√			0512
2006	Chevrolet	TrailBlazer EXT	Vehicle theft deterrent	√	√	√	√		
2006	Chevrolet	TrailBlazer EXT	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Chevrolet	TrailBlazer EXT	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	Chevrolet	TrailBlazer EXT	Navigation radio	√	√	√	√	√	0525
2006	Chevrolet	TrailBlazer EXT	ABS/TCS/VSES	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Tire pressure monitor		√	√	√	√	0159
2006	Chevrolet	TrailBlazer EXT	Powertrain	√	√	√	√	√	0493
2006	Chevrolet	TrailBlazer EXT	Disc player and video dilay	√	√	√			
2006	Chevrolet	TrailBlazer EXT	Digital radio receiver	√	√	√	√		0516
2006	Chevrolet	TrailBlazer EXT	Radio	√	√	√	√		
2006	Chevrolet	TrailBlazer EXT	Rear seat audio	√	√	√	√		
2006	Chevrolet	TrailBlazer EXT	Body Control Module	√	√	√	√	√	0550
2006	Chevrolet	TrailBlazer EXT	Instrument panel cluster	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Driver door module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Driver seat module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Heating and air conditioning	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Lift gate module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Passenger door module	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Rear HVAC/RSA	√	√	√	√	√	
2006	Chevrolet	TrailBlazer EXT	Passenger presence system		√	√			0512
2006	Chevrolet	TrailBlazer EXT	Vehicle theft deterrent	√	√	√	√		
2006	Chevrolet	TrailBlazer EXT	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Chevrolet	TrailBlazer EXT	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	Chevrolet	TrailBlazer EXT	Rear HVAC	√	√	√	√	√	0512
2006	Chevrolet	TrailBlazer EXT	Navigation radio	√	√	√	√	√	0525

2006	Chevrolet	TrailBlazer EXT	ABS/TCS/VSES	√	√	√	√	√	
2006	Chevrolet	Uplander	HVAC systems - manual	√	√	√	√	√	0499
2006	Chevrolet	Uplander	Antilock Braking System	√	√	√	√	√	0506
2006	Chevrolet	Uplander	Engine controls	√	√	√	√	√	0493
2006	Chevrolet	Uplander	Engine cooling	√	√	√	√	√	0493
2006	Chevrolet	Uplander	Engine electrical	√	√	√	√	√	0499
2006	Chevrolet	Uplander	Shift lock control	√	√	√	√	√	0499
2006	Chevrolet	Uplander	Automatic transaxle	√	√	√	√	√	0499
2006	Chevrolet	Uplander	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Chevrolet	Uplander	Cruise Control	√	√	√	√	√	0493
2006	Chevrolet	Uplander	Door	√	√	√	√	√	
2006	Chevrolet	Uplander	Entertainment	√	√	√	√	√	0516
2006	Chevrolet	Uplander	Horns	√	√	√	√	√	0499
2006	Chevrolet	Uplander	Instrument panel	√	√	√	√	√	0499
2006	Chevrolet	Uplander	Lighting systems	√	√	√	√	√	0499
2006	Chevrolet	Uplander	Navigation System	√	√	√	√	√	0525
2006	Chevrolet	Uplander	Stationary windows	√	√	√	√	√	
2006	Chevrolet	Uplander	Theft deterrent	√	√	√	√	√	0499
2006	Chevrolet	Uplander	Wipers/washer systems	√	√	√	√	√	0499
2006	Chevrolet	Uplander	Keyless entry	√	√	√	√	√	0499
2006	Chevrolet	Uplander	Seat belts	√	√	√	√	√	0639 0515
2006	Chevrolet	Uplander	SIR	√	√	√	√	√	0639 0515
2006	Chevrolet	Uplander - 4WD	HVAC systems - manual	√	√	√	√	√	0499
2006	Chevrolet	Uplander - 4WD	Antilock Braking System	√	√	√	√	√	0506
2006	Chevrolet	Uplander - 4WD	Engine controls		√	√	√	√	
2006	Chevrolet	Uplander - 4WD	Engine cooling		√	√	√	√	
2006	Chevrolet	Uplander - 4WD	Engine electrical	√	√	√	√	√	0499
2006	Chevrolet	Uplander - 4WD	Shift lock control	√	√	√	√	√	0499
2006	Chevrolet	Uplander - 4WD	Automatic transaxle	√	√	√	√	√	0499
2006	Chevrolet	Uplander - 4WD	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Chevrolet	Uplander - 4WD	Cruise Control	√	√	√	√	√	0493
2006	Chevrolet	Uplander - 4WD	Door	√	√	√	√	√	
2006	Chevrolet	Uplander - 4WD	Entertainment	√	√	√	√	√	0516
2006	Chevrolet	Uplander - 4WD	Horns	√	√	√	√	√	0499
2006	Chevrolet	Uplander - 4WD	Instrument panel	√	√	√	√	√	0499
2006	Chevrolet	Uplander - 4WD	Keyless entry	√	√	√	√	√	0499
2006	Chevrolet	Uplander - 4WD	Lighting systems	√	√	√	√	√	0499
2006	Chevrolet	Uplander - 4WD	Navigation System	√	√	√	√	√	0525
2006	Chevrolet	Uplander - 4WD	Stationary windows	√	√	√	√	√	
2006	Chevrolet	Uplander - 4WD	Theft deterrent	√	√	√	√	√	0499
2006	Chevrolet	Uplander - 4WD	Wipers/washer systems	√	√	√	√	√	0499

2006	Chevrolet	Uplander - 4WD	Seat belts	√	√	√	√	√	0639 0515
2006	Chevrolet	Uplander - 4WD	SIR	√	√	√	√	√	0639 0515
2006	Chevrolet	Uplander Ext.	HVAC systems - manual	√	√	√	√	√	0499
2006	Chevrolet	Uplander Ext.	Antilock Braking System	√	√	√	√	√	0506
2006	Chevrolet	Uplander Ext.	Engine controls		√	√	√	√	
2006	Chevrolet	Uplander Ext.	Engine cooling		√	√	√	√	
2006	Chevrolet	Uplander Ext.	Engine electrical	√	√	√	√	√	0499
2006	Chevrolet	Uplander Ext.	Shift lock control	√	√	√	√	√	0499
2006	Chevrolet	Uplander Ext.	Automatic transaxle	√	√	√	√	√	0499
2006	Chevrolet	Uplander Ext.	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Chevrolet	Uplander Ext.	Cruise Control	√	√	√	√	√	0493
2006	Chevrolet	Uplander Ext.	Door	√	√	√	√	√	
2006	Chevrolet	Uplander Ext.	Entertainment	√	√	√	√	√	0516
2006	Chevrolet	Uplander Ext.	Horns	√	√	√	√	√	0499
2006	Chevrolet	Uplander Ext.	Instrument panel	√	√	√	√	√	0499
2006	Chevrolet	Uplander Ext.	Keyless entry	√	√	√	√	√	0499
2006	Chevrolet	Uplander Ext.	Lighting systems	√	√	√	√	√	0499
2006	Chevrolet	Uplander Ext.	Navigation System	√	√	√	√	√	0525
2006	Chevrolet	Uplander Ext.	Stationary windows	√	√	√	√	√	
2006	Chevrolet	Uplander Ext.	Theft deterrent	√	√	√	√	√	0499
2006	Chevrolet	Uplander Ext.	Wipers/washer systems	√	√	√	√	√	0499
2006	Chevrolet	Uplander Ext.	Seat belts	√	√	√	√	√	0639 0515
2006	Chevrolet	Uplander Ext.	SIR	√	√	√	√	√	0639 0515
2006	Chevrolet	Others	Powertrain	√	√	√	√	√	
2006	Chevrolet	Others	Chassis	√	√	√	√		0599
2006	GMC truck	Canyon Pickup - 2WD	Powertrain	√	√	√	√	√	
2006	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2006	GMC truck	Canyon Pickup - 2WD	Passenger presence system		√	√			0512
2006	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550
2006	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2006	GMC truck	Canyon Pickup - 2WD	ABS	√	√	√	√	√	0516
2006	GMC truck	Canyon Pickup - 2WD	Powertrain	√	√	√	√	√	
2006	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2006	GMC truck	Canyon Pickup - 2WD	Passenger presence system		√	√			0512
2006	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550



2006	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2006	GMC truck	Canyon Pickup - 2WD	ABS	√	√	√	√	√	0516
2006	GMC truck	Canyon Pickup - 4WD	Powertrain	√	√	√	√	√	
2006	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2006	GMC truck	Canyon Pickup - 4WD	Passenger presence system		√	√			0512
2006	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550
2006	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2006	GMC truck	Canyon Pickup - 4WD	ABS	√	√	√	√	√	0516
2006	GMC truck	Canyon Pickup - 4WD	Powertrain	√	√	√	√	√	
2006	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2006	GMC truck	Canyon Pickup - 4WD	Passenger presence system		√	√			0512
2006	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550
2006	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2006	GMC truck	Canyon Pickup - 4WD	ABS	√	√	√	√	√	0516
2006	GMC truck	Envoy	Powertrain	√	√	√	√	√	0493
2006	GMC truck	Envoy	Disc player and video dilay	√	√	√			
2006	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Envoy	Radio	√	√	√	√		
2006	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2006	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2006	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2006	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2006	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Envoy	Lift gate module	√	√	√	√	√	
2006	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2006	GMC truck	Envoy	Passenger presence system		√	√			0512
2006	GMC truck	Envoy	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Envoy	ABS/TCS/VSES	√	√	√	√	√	
2006	GMC truck	Envoy	Powertrain	√	√	√	√	√	0493
2006	GMC truck	Envoy	Disc player and video dilay	√	√	√			
2006	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Envoy	Radio	√	√	√	√		

2006	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2006	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2006	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2006	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2006	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Envoy	Lift gate module	√	√	√	√	√	
2006	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2006	GMC truck	Envoy	Rear HVAC/RSA	√	√	√	√	√	
2006	GMC truck	Envoy	Passenger presence system		√	√			0512
2006	GMC truck	Envoy	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	GMC truck	Envoy	Rear HVAC	√	√	√	√	√	0512
2006	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Envoy	ABS/TCS/VSES	√	√	√	√	√	
2006	GMC truck	Envoy	Powertrain	√	√	√	√	√	0493
2006	GMC truck	Envoy	Disc player and video dilay	√	√	√			
2006	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Envoy	Radio	√	√	√	√		
2006	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2006	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2006	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2006	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2006	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Envoy	Lift gate module	√	√	√	√	√	
2006	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2006	GMC truck	Envoy	Passenger presence system		√	√			0512
2006	GMC truck	Envoy	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Envoy	ABS/TCS/VSES	√	√	√	√	√	
2006	GMC truck	Envoy	Powertrain	√	√	√	√	√	0493
2006	GMC truck	Envoy	Disc player and video dilay	√	√	√			
2006	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Envoy	Radio	√	√	√	√		
2006	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2006	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2006	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2006	GMC truck	Envoy	Driver seat module	√	√	√	√	√	

2006	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Envoy	Lift gate module	√	√	√	√	√	
2006	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2006	GMC truck	Envoy	Rear HVAC/RSA	√	√	√	√	√	
2006	GMC truck	Envoy	Passenger presence system		√	√			0512
2006	GMC truck	Envoy	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	GMC truck	Envoy	Rear HVAC	√	√	√	√	√	0512
2006	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Envoy	ABS/TCS/VSES	√	√	√	√	√	
2006	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	0493
2006	GMC truck	Envoy XL	Disc player and video dilay	√	√	√			
2006	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Envoy XL	Radio	√	√	√	√		
2006	GMC truck	Envoy XL	Rear seat audio	√	√	√	√		
2006	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2006	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Passenger presence system		√	√			0512
2006	GMC truck	Envoy XL	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Envoy XL	ABS/TCS/VSES	√	√	√	√	√	
2006	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	0493
2006	GMC truck	Envoy XL	Disc player and video dilay	√	√	√			
2006	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Envoy XL	Radio	√	√	√	√		
2006	GMC truck	Envoy XL	Rear seat audio	√	√	√	√		
2006	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2006	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Rear HVAC/RSA	√	√	√	√	√	
2006	GMC truck	Envoy XL	Passenger presence system		√	√			0512

2006	GMC truck	Envoy XL	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	GMC truck	Envoy XL	Rear HVAC	√	√	√	√	√	0512
2006	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Envoy XL	ABS/TCS/VSES	√	√	√	√	√	
2006	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	0493
2006	GMC truck	Envoy XL	Disc player and video dilay	√	√	√			
2006	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Envoy XL	Radio	√	√	√	√		
2006	GMC truck	Envoy XL	Rear seat audio	√	√	√	√		
2006	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2006	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Passenger presence system	√	√	√			0512
2006	GMC truck	Envoy XL	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Envoy XL	ABS/TCS/VSES	√	√	√	√	√	
2006	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	0493
2006	GMC truck	Envoy XL	Disc player and video dilay	√	√	√			
2006	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Envoy XL	Radio	√	√	√	√		
2006	GMC truck	Envoy XL	Rear seat audio	√	√	√	√		
2006	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2006	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Rear HVAC/RSA	√	√	√	√	√	
2006	GMC truck	Envoy XL	Passenger presence system		√	√			0512
2006	GMC truck	Envoy XL	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	GMC truck	Envoy XL	Rear HVAC	√	√	√	√	√	0512
2006	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Envoy XL	ABS/TCS/VSES	√	√	√	√	√	

2006	GMC truck	GMC C-Series - 2WD	Powertrain	√	√	√	√	√	0638
2006	GMC truck	GMC C-Series - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2006	GMC truck	GMC C-Series - 2WD	CD changer	√	√	√			
2006	GMC truck	GMC C-Series - 2WD	Chime	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD	Disc player and video dilay	√	√	√			
2006	GMC truck	GMC C-Series - 2WD	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	GMC C-Series - 2WD	Radio	√	√	√	√		
2006	GMC truck	GMC C-Series - 2WD	Rear seat audio	√	√	√	√		
2006	GMC truck	GMC C-Series - 2WD	Driver door module	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD	Passenger door module	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD	Rear HVAC	√	√	√	√		
2006	GMC truck	GMC C-Series - 2WD	Generator battery control module	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD	Driver seat module	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD	Rear aux. climate module	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD	Body Control Module	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	GMC truck	GMC C-Series - 2WD	Passenger presence system		√	√			0512
2006	GMC truck	GMC C-Series - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	GMC C-Series - 2WD	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	GMC C-Series - 2WD	Traction assist (if equipped)		√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD	ABS	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2006	GMC truck	GMC C-Series - 2WD	Tire pressure monitor	√	√	√	√	√	0159
2006	GMC truck	GMC C-Series - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	GMC truck	GMC C-Series - 2WD (CNG)	Powertrain	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD (CNG)	Amplifier (bose)	√	√	√	√	√	0631
2006	GMC truck	GMC C-Series - 2WD (CNG)	CD changer	√	√	√			
2006	GMC truck	GMC C-Series - 2WD (CNG)	Chime	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD (CNG)	Disc player and video dilay	√	√	√			
2006	GMC truck	GMC C-Series - 2WD (CNG)	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	GMC C-Series - 2WD (CNG)	Radio	√	√	√	√		
2006	GMC truck	GMC C-Series - 2WD (CNG)	Rear seat audio	√	√	√	√		
2006	GMC truck	GMC C-Series - 2WD (CNG)	Driver door module	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD (CNG)	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD (CNG)	Passenger door module	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD (CNG)	Rear HVAC	√	√	√	√		
2006	GMC truck	GMC C-Series - 2WD (CNG)	Generator battery control module	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD (CNG)	Driver seat module	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD (CNG)	Rear aux. climate module	√	√	√	√	√	

2006	GMC truck	GMC C-Series - 2WD (CNG)	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD (CNG)	Body Control Module	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD (CNG)	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	GMC truck	GMC C-Series - 2WD (CNG)	Passenger presence system		√	√			0512
2006	GMC truck	GMC C-Series - 2WD (CNG)	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	GMC C-Series - 2WD (CNG)	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	GMC C-Series - 2WD (CNG)	Traction assist (if equipped)		√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD (CNG)	ABS	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD (CNG)	ESC (if equipped)	√	√	√	√	√	0648
2006	GMC truck	GMC C-Series - 2WD (CNG)	Tire pressure monitor	√	√	√	√	√	0159
2006	GMC truck	GMC C-Series - 2WD (CNG)	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	GMC truck	GMC K Sierra - 4WD	Powertrain	√	√	√	√	√	0638
2006	GMC truck	GMC K Sierra - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2006	GMC truck	GMC K Sierra - 4WD	CD changer	√	√	√			
2006	GMC truck	GMC K Sierra - 4WD	Chime	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD	Disc player and video dilay	√	√	√			
2006	GMC truck	GMC K Sierra - 4WD	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	GMC K Sierra - 4WD	Radio	√	√	√	√		
2006	GMC truck	GMC K Sierra - 4WD	Rear seat audio	√	√	√	√		
2006	GMC truck	GMC K Sierra - 4WD	Driver door module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD	Passenger door module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD	Rear HVAC	√	√	√	√		
2006	GMC truck	GMC K Sierra - 4WD	Generator battery control module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD	Driver seat module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD	Rear aux. climate module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD	Body Control Module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	GMC truck	GMC K Sierra - 4WD	Passenger presence system		√	√			0512
2006	GMC truck	GMC K Sierra - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	GMC K Sierra - 4WD	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	GMC K Sierra - 4WD	Traction assist (if equipped)		√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD	ABS	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2006	GMC truck	GMC K Sierra - 4WD	Tire pressure monitor	√	√	√	√	√	0159
2006	GMC truck	GMC K Sierra - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Powertrain	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Amplifier (bose)	√	√	√	√	√	0631
2006	GMC truck	GMC K Sierra - 4WD (CNG)	CD changer	√	√	√			
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Chime	√	√	√	√	√	

2006	GMC truck	GMC K Sierra - 4WD (CNG)	Disc player and video dilay	√	√	√			
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Radio	√	√	√	√		
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Rear seat audio	√	√	√	√		
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Driver door module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Passenger door module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Rear HVAC	√	√	√	√		
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Generator battery control module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Driver seat module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Rear aux. climate module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Body Control Module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Passenger presence system		√	√			0512
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Traction assist (if equipped)		√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD (CNG)	ABS	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD (CNG)	ESC (if equipped)	√	√	√	√	√	0648
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Tire pressure monitor	√	√	√	√	√	0159
2006	GMC truck	GMC K Sierra - 4WD (CNG)	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	GMC truck	GMC Sierra Denali	Powertrain	√	√	√	√	√	0638
2006	GMC truck	GMC Sierra Denali	Amplifier (bose)	√	√	√	√	√	0631
2006	GMC truck	GMC Sierra Denali	CD changer	√	√	√			
2006	GMC truck	GMC Sierra Denali	Chime	√	√	√	√	√	
2006	GMC truck	GMC Sierra Denali	Disc player and video dilay	√	√	√			
2006	GMC truck	GMC Sierra Denali	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	GMC Sierra Denali	Radio	√	√	√	√		
2006	GMC truck	GMC Sierra Denali	Rear seat audio	√	√	√	√		
2006	GMC truck	GMC Sierra Denali	Driver door module	√	√	√	√	√	
2006	GMC truck	GMC Sierra Denali	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	GMC Sierra Denali	Passenger door module	√	√	√	√	√	
2006	GMC truck	GMC Sierra Denali	Rear HVAC	√	√	√	√		
2006	GMC truck	GMC Sierra Denali	Generator battery control module	√	√	√	√	√	
2006	GMC truck	GMC Sierra Denali	Driver seat module	√	√	√	√	√	
2006	GMC truck	GMC Sierra Denali	Rear aux. climate module	√	√	√	√	√	
2006	GMC truck	GMC Sierra Denali	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	GMC Sierra Denali	Body Control Module	√	√	√	√	√	
2006	GMC truck	GMC Sierra Denali	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	GMC truck	GMC Sierra Denali	Passenger presence system		√	√			0512



2006	GMC truck	GMC Sierra Denali	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	GMC Sierra Denali	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	GMC Sierra Denali	Traction assist (if equipped)		√	√	√	√	
2006	GMC truck	GMC Sierra Denali	ABS	√	√	√	√	√	
2006	GMC truck	GMC Sierra Denali	ESC (if equipped)	√	√	√	√	√	0648
2006	GMC truck	GMC Sierra Denali	Tire pressure monitor	√	√	√	√	√	0159
2006	GMC truck	GMC Sierra Denali	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	GMC truck	Savana	Powertrain	√	√	√	√	√	0638
2006	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2006	GMC truck	Savana	Radio	√	√	√	√		
2006	GMC truck	Savana	Passenger presence system		√	√			
2006	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0531
2006	GMC truck	Savana	Remote function actuation	√	√	√	√	√	
2006	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Savana	Body Control Module	√	√	√	√	√	
2006	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Savana	ABS	√	√	√	√	√	
2006	GMC truck	Savana	Powertrain	√	√	√	√	√	0638
2006	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2006	GMC truck	Savana	Radio	√	√	√	√		
2006	GMC truck	Savana	Passenger presence system		√	√			
2006	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0531
2006	GMC truck	Savana	Remote function actuation	√	√	√	√	√	
2006	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Savana	Body Control Module	√	√	√	√	√	
2006	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Savana	ABS	√	√	√	√	√	
2006	GMC truck	Savana	Powertrain	√	√	√	√	√	
2006	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2006	GMC truck	Savana	Radio	√	√	√	√		
2006	GMC truck	Savana	Passenger presence system		√	√			
2006	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0531
2006	GMC truck	Savana	Remote function actuation	√	√	√	√	√	
2006	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Savana	Body Control Module	√	√	√	√	√	
2006	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Savana	ABS	√	√	√	√	√	
2006	GMC truck	Savana	Powertrain	√	√	√	√	√	
2006	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2006	GMC truck	Savana	Radio	√	√	√	√		
2006	GMC truck	Savana	Passenger presence system		√	√			



2006	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0531
2006	GMC truck	Savana	Remote function actuation	√	√	√	√	√	
2006	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Savana	Body Control Module	√	√	√	√	√	
2006	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Savana	ABS	√	√	√	√	√	
2006	GMC truck	Yukon - 2WD	Powertrain	√	√	√	√	√	
2006	GMC truck	Yukon - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2006	GMC truck	Yukon - 2WD	CD changer	√	√	√			
2006	GMC truck	Yukon - 2WD	Chime	√	√	√	√	√	
2006	GMC truck	Yukon - 2WD	Disc player and video dilay	√	√	√			
2006	GMC truck	Yukon - 2WD	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Yukon - 2WD	Radio	√	√	√	√		
2006	GMC truck	Yukon - 2WD	Rear seat audio	√	√	√	√		
2006	GMC truck	Yukon - 2WD	Driver door module	√	√	√	√	√	
2006	GMC truck	Yukon - 2WD	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Yukon - 2WD	Passenger door module	√	√	√	√	√	
2006	GMC truck	Yukon - 2WD	Rear HVAC	√	√	√	√		
2006	GMC truck	Yukon - 2WD	Generator battery control module	√	√	√	√	√	
2006	GMC truck	Yukon - 2WD	Driver seat module	√	√	√	√	√	
2006	GMC truck	Yukon - 2WD	Rear aux. climate module	√	√	√	√	√	
2006	GMC truck	Yukon - 2WD	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Yukon - 2WD	Body Control Module	√	√	√	√	√	
2006	GMC truck	Yukon - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	GMC truck	Yukon - 2WD	Passenger presence system		√	√			0512
2006	GMC truck	Yukon - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Yukon - 2WD	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Yukon - 2WD	Traction assist (if equipped)		√	√	√	√	
2006	GMC truck	Yukon - 2WD	ABS	√	√	√	√	√	
2006	GMC truck	Yukon - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2006	GMC truck	Yukon - 2WD	Tire pressure monitor	√	√	√	√	√	0159
2006	GMC truck	Yukon - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	GMC truck	Yukon - 4WD	Powertrain	√	√	√	√	√	
2006	GMC truck	Yukon - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2006	GMC truck	Yukon - 4WD	CD changer	√	√	√			
2006	GMC truck	Yukon - 4WD	Chime	√	√	√	√	√	
2006	GMC truck	Yukon - 4WD	Disc player and video dilay	√	√	√			
2006	GMC truck	Yukon - 4WD	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Yukon - 4WD	Radio	√	√	√	√		
2006	GMC truck	Yukon - 4WD	Rear seat audio	√	√	√	√		
2006	GMC truck	Yukon - 4WD	Driver door module	√	√	√	√	√	

2006	GMC truck	Yukon - 4WD	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Yukon - 4WD	Passenger door module	√	√	√	√	√	
2006	GMC truck	Yukon - 4WD	Rear HVAC	√	√	√	√		
2006	GMC truck	Yukon - 4WD	Generator battery control module	√	√	√	√	√	
2006	GMC truck	Yukon - 4WD	Driver seat module	√	√	√	√	√	
2006	GMC truck	Yukon - 4WD	Rear aux. climate module	√	√	√	√	√	
2006	GMC truck	Yukon - 4WD	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Yukon - 4WD	Body Control Module	√	√	√	√	√	
2006	GMC truck	Yukon - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	GMC truck	Yukon - 4WD	Passenger presence system		√	√			0512
2006	GMC truck	Yukon - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Yukon - 4WD	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Yukon - 4WD	Traction assist (if equipped)		√	√	√	√	
2006	GMC truck	Yukon - 4WD	ABS	√	√	√	√	√	
2006	GMC truck	Yukon - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2006	GMC truck	Yukon - 4WD	Tire pressure monitor	√	√	√	√	√	0159
2006	GMC truck	Yukon - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	GMC truck	Yukon Denali	Powertrain	√	√	√	√	√	
2006	GMC truck	Yukon Denali	Amplifier (bose)	√	√	√	√	√	0631
2006	GMC truck	Yukon Denali	CD changer	√	√	√			
2006	GMC truck	Yukon Denali	Chime	√	√	√	√	√	
2006	GMC truck	Yukon Denali	Disc player and video delay	√	√	√			
2006	GMC truck	Yukon Denali	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Yukon Denali	Radio	√	√	√	√		
2006	GMC truck	Yukon Denali	Rear seat audio	√	√	√	√		
2006	GMC truck	Yukon Denali	Driver door module	√	√	√	√	√	
2006	GMC truck	Yukon Denali	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Yukon Denali	Passenger door module	√	√	√	√	√	
2006	GMC truck	Yukon Denali	Rear HVAC	√	√	√	√		
2006	GMC truck	Yukon Denali	Generator battery control module	√	√	√	√	√	
2006	GMC truck	Yukon Denali	Driver seat module	√	√	√	√	√	
2006	GMC truck	Yukon Denali	Rear aux. climate module	√	√	√	√	√	
2006	GMC truck	Yukon Denali	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Yukon Denali	Body Control Module	√	√	√	√	√	
2006	GMC truck	Yukon Denali	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	GMC truck	Yukon Denali	Passenger presence system		√	√			0512
2006	GMC truck	Yukon Denali	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Yukon Denali	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Yukon Denali	Traction assist (if equipped)		√	√	√	√	
2006	GMC truck	Yukon Denali	ABS	√	√	√	√	√	
2006	GMC truck	Yukon Denali	ESC (if equipped)	√	√	√	√	√	0648

2006	GMC truck	Yukon Denali	Tire pressure monitor	√	√	√	√	√	0159
2006	GMC truck	Yukon Denali	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	GMC truck	Yukon XL - 2WD	Powertrain	√	√	√	√	√	
2006	GMC truck	Yukon XL - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2006	GMC truck	Yukon XL - 2WD	CD changer	√	√	√			
2006	GMC truck	Yukon XL - 2WD	Chime	√	√	√	√	√	
2006	GMC truck	Yukon XL - 2WD	Disc player and video dilay	√	√	√			
2006	GMC truck	Yukon XL - 2WD	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Yukon XL - 2WD	Radio	√	√	√	√		
2006	GMC truck	Yukon XL - 2WD	Rear seat audio	√	√	√	√		
2006	GMC truck	Yukon XL - 2WD	Driver door module	√	√	√	√	√	
2006	GMC truck	Yukon XL - 2WD	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Yukon XL - 2WD	Passenger door module	√	√	√	√	√	
2006	GMC truck	Yukon XL - 2WD	Rear HVAC	√	√	√	√		
2006	GMC truck	Yukon XL - 2WD	Generator battery control module	√	√	√	√	√	
2006	GMC truck	Yukon XL - 2WD	Driver seat module	√	√	√	√	√	
2006	GMC truck	Yukon XL - 2WD	Rear aux. climate module	√	√	√	√	√	
2006	GMC truck	Yukon XL - 2WD	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Yukon XL - 2WD	Body Control Module	√	√	√	√	√	
2006	GMC truck	Yukon XL - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	GMC truck	Yukon XL - 2WD	Passenger presence system		√	√			0512
2006	GMC truck	Yukon XL - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Yukon XL - 2WD	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Yukon XL - 2WD	Traction assist (if equipped)		√	√	√	√	
2006	GMC truck	Yukon XL - 2WD	ABS	√	√	√	√	√	
2006	GMC truck	Yukon XL - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2006	GMC truck	Yukon XL - 2WD	Tire pressure monitor	√	√	√	√	√	0159
2006	GMC truck	Yukon XL - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	GMC truck	Yukon XL - 4WD	Powertrain	√	√	√	√	√	
2006	GMC truck	Yukon XL - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2006	GMC truck	Yukon XL - 4WD	CD changer	√	√	√			
2006	GMC truck	Yukon XL - 4WD	Chime	√	√	√	√	√	
2006	GMC truck	Yukon XL - 4WD	Disc player and video dilay	√	√	√			
2006	GMC truck	Yukon XL - 4WD	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Yukon XL - 4WD	Radio	√	√	√	√		
2006	GMC truck	Yukon XL - 4WD	Rear seat audio	√	√	√	√		
2006	GMC truck	Yukon XL - 4WD	Driver door module	√	√	√	√	√	
2006	GMC truck	Yukon XL - 4WD	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Yukon XL - 4WD	Passenger door module	√	√	√	√	√	
2006	GMC truck	Yukon XL - 4WD	Rear HVAC	√	√	√	√		
2006	GMC truck	Yukon XL - 4WD	Generator battery control module	√	√	√	√	√	

2006	GMC truck	Yukon XL - 4WD	Driver seat module	√	√	√	√	√	
2006	GMC truck	Yukon XL - 4WD	Rear aux. climate module	√	√	√	√	√	
2006	GMC truck	Yukon XL - 4WD	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Yukon XL - 4WD	Body Control Module	√	√	√	√	√	
2006	GMC truck	Yukon XL - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	GMC truck	Yukon XL - 4WD	Passenger presence system		√	√			0512
2006	GMC truck	Yukon XL - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Yukon XL - 4WD	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Yukon XL - 4WD	Traction assist (if equipped)		√	√	√	√	
2006	GMC truck	Yukon XL - 4WD	ABS	√	√	√	√	√	
2006	GMC truck	Yukon XL - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2006	GMC truck	Yukon XL - 4WD	Tire pressure monitor	√	√	√	√	√	0159
2006	GMC truck	Yukon XL - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	GMC truck	Yukon XL Denali	Powertrain	√	√	√	√	√	
2006	GMC truck	Yukon XL Denali	Amplifier (bose)	√	√	√	√	√	0631
2006	GMC truck	Yukon XL Denali	CD changer	√	√	√			
2006	GMC truck	Yukon XL Denali	Chime	√	√	√	√	√	
2006	GMC truck	Yukon XL Denali	Disc player and video delay	√	√	√			
2006	GMC truck	Yukon XL Denali	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Yukon XL Denali	Radio	√	√	√	√		
2006	GMC truck	Yukon XL Denali	Rear seat audio	√	√	√	√		
2006	GMC truck	Yukon XL Denali	Driver door module	√	√	√	√	√	
2006	GMC truck	Yukon XL Denali	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Yukon XL Denali	Passenger door module	√	√	√	√	√	
2006	GMC truck	Yukon XL Denali	Rear HVAC	√	√	√	√		
2006	GMC truck	Yukon XL Denali	Generator battery control module	√	√	√	√	√	
2006	GMC truck	Yukon XL Denali	Driver seat module	√	√	√	√	√	
2006	GMC truck	Yukon XL Denali	Rear aux. climate module	√	√	√	√	√	
2006	GMC truck	Yukon XL Denali	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Yukon XL Denali	Body Control Module	√	√	√	√	√	
2006	GMC truck	Yukon XL Denali	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	GMC truck	Yukon XL Denali	Passenger presence system		√	√			0512
2006	GMC truck	Yukon XL Denali	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Yukon XL Denali	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Yukon XL Denali	Traction assist (if equipped)		√	√	√	√	
2006	GMC truck	Yukon XL Denali	ABS	√	√	√	√	√	
2006	GMC truck	Yukon XL Denali	ESC (if equipped)	√	√	√	√	√	0648
2006	GMC truck	Yukon XL Denali	Tire pressure monitor	√	√	√	√	√	0159
2006	GMC truck	Yukon XL Denali	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	Pontiac	Montana SV6	HVAC systems - manual	√	√	√	√	√	0499
2006	Pontiac	Montana SV6	Antilock Braking System	√	√	√	√	√	0506

2006	Pontiac	Montana SV6	Engine controls		√	√	√	√	
2006	Pontiac	Montana SV6	Engine cooling		√	√	√	√	
2006	Pontiac	Montana SV6	Engine electrical	√	√	√	√	√	0499
2006	Pontiac	Montana SV6	Shift lock control	√	√	√	√	√	0499
2006	Pontiac	Montana SV6	Automatic transaxle	√	√	√	√	√	0499
2006	Pontiac	Montana SV6	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Pontiac	Montana SV6	Cruise Control	√	√	√	√	√	0493
2006	Pontiac	Montana SV6	Door	√	√	√	√	√	
2006	Pontiac	Montana SV6	Entertainment	√	√	√	√	√	0516
2006	Pontiac	Montana SV6	Horns	√	√	√	√	√	0499
2006	Pontiac	Montana SV6	Instrument panel	√	√	√	√	√	0499
2006	Pontiac	Montana SV6	Keyless entry	√	√	√	√	√	0499
2006	Pontiac	Montana SV6	Lighting systems	√	√	√	√	√	0499
2006	Pontiac	Montana SV6	Navigation System	√	√	√	√	√	0525
2006	Pontiac	Montana SV6	Stationary windows	√	√	√	√	√	
2006	Pontiac	Montana SV6	Theft deterrent	√	√	√	√	√	0499
2006	Pontiac	Montana SV6	Wipers/washer systems	√	√	√	√	√	0499
2006	Pontiac	Montana SV6	Seat belts	√	√	√	√	√	0639 0515
2006	Pontiac	Montana SV6	SIR	√	√	√	√	√	0639 0515
2006	Pontiac	Montana SV6 - AWD	HVAC systems - manual	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 - AWD	Antilock Braking System	√	√	√	√	√	0506
2006	Pontiac	Montana SV6 - AWD	Engine controls		√	√	√	√	
2006	Pontiac	Montana SV6 - AWD	Engine cooling		√	√	√	√	
2006	Pontiac	Montana SV6 - AWD	Engine electrical	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 - AWD	Shift lock control	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 - AWD	Automatic transaxle	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 - AWD	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Pontiac	Montana SV6 - AWD	Cruise Control	√	√	√	√	√	0493
2006	Pontiac	Montana SV6 - AWD	Door	√	√	√	√	√	
2006	Pontiac	Montana SV6 - AWD	Entertainment	√	√	√	√	√	0516
2006	Pontiac	Montana SV6 - AWD	Horns	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 - AWD	Instrument panel	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 - AWD	Keyless entry	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 - AWD	Lighting systems	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 - AWD	Navigation System	√	√	√	√	√	0525
2006	Pontiac	Montana SV6 - AWD	Stationary windows	√	√	√	√	√	
2006	Pontiac	Montana SV6 - AWD	Theft deterrent	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 - AWD	Wipers/washer systems	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 - AWD	Seat belts	√	√	√	√	√	0639 0515
2006	Pontiac	Montana SV6 - AWD	SIR	√	√	√	√	√	0639 0515
2006	Pontiac	Montana SV6 Ext.	HVAC systems - manual	√	√	√	√	√	0499

2006	Pontiac	Montana SV6 Ext.	Antilock Braking System	√	√	√	√	√	0506
2006	Pontiac	Montana SV6 Ext.	Engine controls		√	√	√	√	
2006	Pontiac	Montana SV6 Ext.	Engine cooling		√	√	√	√	
2006	Pontiac	Montana SV6 Ext.	Engine electrical	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 Ext.	Shift lock control	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 Ext.	Automatic transaxle	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 Ext.	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Pontiac	Montana SV6 Ext.	Cruise Control	√	√	√	√	√	0493
2006	Pontiac	Montana SV6 Ext.	Door	√	√	√	√	√	
2006	Pontiac	Montana SV6 Ext.	Entertainment	√	√	√	√	√	0516
2006	Pontiac	Montana SV6 Ext.	Horns	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 Ext.	Instrument panel	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 Ext.	Keyless entry	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 Ext.	Lighting systems	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 Ext.	Navigation System	√	√	√	√	√	0525
2006	Pontiac	Montana SV6 Ext.	Stationary windows	√	√	√	√	√	
2006	Pontiac	Montana SV6 Ext.	Theft deterrent	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 Ext.	Wipers/washer systems	√	√	√	√	√	0499
2006	Pontiac	Montana SV6 Ext.	Seat belts	√	√	√	√	√	0639 0515
2006	Pontiac	Montana SV6 Ext.	SIR	√	√	√	√	√	0639 0515
2006	Pontiac	Torrent	Powertrain	√	√	√	√	√	0493
2006	Pontiac	Torrent	Digital radio receiver	√	√	√	√		0516
2006	Pontiac	Torrent	Instrument panel cluster	√				√	
2006	Pontiac	Torrent	Radio	√	√	√	√	√	0573 0578 0579 0572 0552 0525
2006	Pontiac	Torrent	Body Control Module	√	√	√	√	√	0633 0640 0634 0635
2006	Pontiac	Torrent	Supplemental inflatable restraint	√	√	√	√		0531
2006	Pontiac	Torrent	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2006	Pontiac	Torrent	Electric power steering		√	√	√	√	
2006	Pontiac	Torrent	Antilock Braking System	√	√	√	√	√	0506
2006	Saturn	RELAY	HVAC systems - manual	√	√	√	√	√	0499
2006	Saturn	RELAY	Antilock Braking System	√	√	√	√	√	0506
2006	Saturn	RELAY	Engine controls		√	√	√	√	
2006	Saturn	RELAY	Engine cooling		√	√	√	√	
2006	Saturn	RELAY	Engine electrical	√	√	√	√	√	0499
2006	Saturn	RELAY	Shift lock control	√	√	√	√	√	0499
2006	Saturn	RELAY	Automatic transaxle	√	√	√	√	√	0499
2006	Saturn	RELAY	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Saturn	RELAY	Cruise Control	√	√	√	√	√	0493
2006	Saturn	RELAY	Door	√	√	√	√	√	
2006	Saturn	RELAY	Entertainment	√	√	√	√	√	0516

2006	Saturn	RELAY	Horns	√	√	√	√	√	0499
2006	Saturn	RELAY	Instrument panel	√	√	√	√	√	0499
2006	Saturn	RELAY	Keyless entry	√	√	√	√	√	0499
2006	Saturn	RELAY	Lighting systems	√	√	√	√	√	0499
2006	Saturn	RELAY	Navigation System	√	√	√	√	√	0525
2006	Saturn	RELAY	Stationary windows	√	√	√	√	√	
2006	Saturn	RELAY	Theft deterrent	√	√	√	√	√	0499
2006	Saturn	RELAY	Wipers/washer systems	√	√	√	√	√	0499
2006	Saturn	RELAY	Seat belts	√	√	√	√	√	0639 0515
2006	Saturn	RELAY	SIR	√	√	√	√	√	0639 0515
2006	Saturn	RELAY - AWD	HVAC systems - manual	√	√	√	√	√	0499
2006	Saturn	RELAY - AWD	Antilock Braking System	√	√	√	√	√	0506
2006	Saturn	RELAY - AWD	Engine controls		√	√	√	√	
2006	Saturn	RELAY - AWD	Engine cooling		√	√	√	√	
2006	Saturn	RELAY - AWD	Engine electrical	√	√	√	√	√	0499
2006	Saturn	RELAY - AWD	Shift lock control	√	√	√	√	√	0499
2006	Saturn	RELAY - AWD	Automatic transaxle	√	√	√	√	√	0499
2006	Saturn	RELAY - AWD	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Saturn	RELAY - AWD	Cruise Control	√	√	√	√	√	0493
2006	Saturn	RELAY - AWD	Door	√	√	√	√	√	
2006	Saturn	RELAY - AWD	Entertainment	√	√	√	√	√	0516
2006	Saturn	RELAY - AWD	Horns	√	√	√	√	√	0499
2006	Saturn	RELAY - AWD	Instrument panel	√	√	√	√	√	0499
2006	Saturn	RELAY - AWD	Keyless entry	√	√	√	√	√	0499
2006	Saturn	RELAY - AWD	Lighting systems	√	√	√	√	√	0499
2006	Saturn	RELAY - AWD	Navigation System	√	√	√	√	√	0525
2006	Saturn	RELAY - AWD	Stationary windows	√	√	√	√	√	
2006	Saturn	RELAY - AWD	Theft deterrent	√	√	√	√	√	0499
2006	Saturn	RELAY - AWD	Wipers/washer systems	√	√	√	√	√	0499
2006	Saturn	RELAY - AWD	Seat belts	√	√	√	√	√	0639 0515
2006	Saturn	RELAY - AWD	SIR	√	√	√	√	√	0639 0515
2006	Saturn	RELAY Ext.	HVAC systems - manual	√	√	√	√	√	0499
2006	Saturn	RELAY Ext.	Antilock Braking System	√	√	√	√	√	0506
2006	Saturn	RELAY Ext.	Engine controls		√	√	√	√	
2006	Saturn	RELAY Ext.	Engine cooling		√	√	√	√	
2006	Saturn	RELAY Ext.	Engine electrical	√	√	√	√	√	0499
2006	Saturn	RELAY Ext.	Shift lock control	√	√	√	√	√	0499
2006	Saturn	RELAY Ext.	Automatic transaxle	√	√	√	√	√	0499
2006	Saturn	RELAY Ext.	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	Saturn	RELAY Ext.	Cruise Control	√	√	√	√	√	0493
2006	Saturn	RELAY Ext.	Door	√	√	√	√	√	

2006	Saturn	RELAY Ext.	Entertainment	√	√	√	√	√	0516
2006	Saturn	RELAY Ext.	Horns	√	√	√	√	√	0499
2006	Saturn	RELAY Ext.	Instrument panel	√	√	√	√	√	0499
2006	Saturn	RELAY Ext.	Keyless entry	√	√	√	√	√	0499
2006	Saturn	RELAY Ext.	Lighting systems	√	√	√	√	√	0499
2006	Saturn	RELAY Ext.	Navigation System	√	√	√	√	√	0525
2006	Saturn	RELAY Ext.	Stationary windows	√	√	√	√	√	
2006	Saturn	RELAY Ext.	Theft deterrent	√	√	√	√	√	0499
2006	Saturn	RELAY Ext.	Wipers/washer systems	√	√	√	√	√	0499
2006	Saturn	RELAY Ext.	Seat belts	√	√	√	√	√	0639 0515
2006	Saturn	RELAY Ext.	SIR	√	√	√	√	√	0639 0515
2006	Saturn	VUE - AWD	Powertrain	√	√	√	√	√	0493
2006	Saturn	VUE - AWD	Digital radio receiver	√	√	√	√		
2006	Saturn	VUE - AWD	Instrument panel cluster	√				√	
2006	Saturn	VUE - AWD	Radio	√	√	√	√	√	0551
2006	Saturn	VUE - AWD	Body Control Module	√	√	√	√	√	0633 0640 0634 0635
2006	Saturn	VUE - AWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Saturn	VUE - AWD	Supplemental inflatable restraint	√	√	√	√	√	
2006	Saturn	VUE - AWD	Antilock Braking System		√	√	√	√	
2006	Saturn	VUE - FWD	Powertrain	√	√	√	√	√	0493
2006	Saturn	VUE - FWD	Digital radio receiver	√	√	√	√		
2006	Saturn	VUE - FWD	Instrument panel cluster	√				√	
2006	Saturn	VUE - FWD	Radio	√	√	√	√	√	0551
2006	Saturn	VUE - FWD	Body Control Module	√	√	√	√	√	0633 0640 0634 0635
2006	Saturn	VUE - FWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Saturn	VUE - FWD	Supplemental inflatable restraint	√	√	√	√	√	
2006	Saturn	VUE - FWD	Antilock Braking System		√	√	√	√	
2006	HUMMER	H2	Powertrain	√	√	√	√	√	
2006	HUMMER	H2	Digital radio receiver	√	√	√	√		0516
2006	HUMMER	H2	Radio	√	√	√	√		
2006	HUMMER	H2	Rear seat audio	√	√	√	√		
2006	HUMMER	H2	Driver door module	√	√	√	√	√	
2006	HUMMER	H2	Heating and air conditioning	√	√	√	√	√	
2006	HUMMER	H2	Passenger door module	√	√	√	√	√	
2006	HUMMER	H2	Driver seat module	√	√	√	√	√	
2006	HUMMER	H2	Instrument panel cluster	√	√	√	√	√	
2006	HUMMER	H2	Body Control Module	√	√	√	√	√	
2006	HUMMER	H2	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	HUMMER	H2	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	HUMMER	H2	Navigation radio	√	√	√	√	√	0525
2006	HUMMER	H2	Air suension	√	√	√	√	√	



2006	HUMMER	H2	ABS		√	√	√	√	
2006	HUMMER	H3	HVAC systems - manual	√	√	√	√	√	
2006	HUMMER	H3	Tire pressure monitoring	√	√	√	√	√	0159
2006	HUMMER	H3	Driveline/axle		√	√	√	√	
2006	HUMMER	H3	Antilock Braking System	√	√	√	√	√	
2006	HUMMER	H3	Park brake	√	√	√	√	√	
2006	HUMMER	H3	Engine controls		√	√	√	√	
2006	HUMMER	H3	Engine cooling		√	√	√	√	
2006	HUMMER	H3	Engine electrical		√	√	√	√	
2006	HUMMER	H3	Shift lock control	√	√	√	√	√	
2006	HUMMER	H3	Automatic transmission		√	√	√	√	
2006	HUMMER	H3	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2006	HUMMER	H3	Cruise Control		√	√	√	√	
2006	HUMMER	H3	Door	√	√	√	√	√	0550
2006	HUMMER	H3	Entertainment	√	√	√	√	√	0516
2006	HUMMER	H3	Instrument panel	√	√	√	√	√	0550
2006	HUMMER	H3	Keyless entry	√	√	√	√	√	0550
2006	HUMMER	H3	Lighting systems	√	√	√	√	√	0550
2006	HUMMER	H3	Navigation System	√	√	√	√	√	0525
2006	HUMMER	H3	Stationary windows	√	√	√	√	√	0550
2006	HUMMER	H3	Theft deterrent	√	√	√	√	√	0550
2006	HUMMER	H3	Wipers/washer systems	√	√	√	√	√	0550
2006	HUMMER	H3	Seat belts	√	√	√	√	√	
2006	HUMMER	H3	SIR	√	√	√	√	√	0515
2006	Saab	Saab 9-7x	Powertrain	√	√	√	√	√	0493
2006	Saab	Saab 9-7x	Disc player and video dilay	√	√	√			
2006	Saab	Saab 9-7x	Digital radio receiver	√	√	√	√		0516
2006	Saab	Saab 9-7x	Rear seat audio	√	√	√	√		
2006	Saab	Saab 9-7x	Body Control Module	√	√	√	√	√	0550
2006	Saab	Saab 9-7x	Instrument panel cluster	√	√	√	√	√	
2006	Saab	Saab 9-7x	Driver door module	√	√	√	√	√	
2006	Saab	Saab 9-7x	Driver seat module	√	√	√	√	√	
2006	Saab	Saab 9-7x	Heating and air conditioning	√	√	√	√	√	
2006	Saab	Saab 9-7x	Lift gate module	√	√	√	√	√	
2006	Saab	Saab 9-7x	Passenger door module	√	√	√	√	√	
2006	Saab	Saab 9-7x	Radio	√	√	√	√	√	0572 0636 0524
2006	Saab	Saab 9-7x	Vehicle theft deterrent	√	√	√	√		
2006	Saab	Saab 9-7x	Passenger presence system		√	√			0512
2006	Saab	Saab 9-7x	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	Saab	Saab 9-7x	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	Saab	Saab 9-7x	Navigation radio	√	√	√	√	√	0525

2006	Saab	Saab 9-7x	ABS/TCS/VSES	√	√	√	√	√	
2005	Buick	Century	Powertrain	√	√	√	√	√	
2005	Buick	Century	Supplemental inflatable restraint	√	√	√	√		
2005	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0628
2005	Buick	Century	Radio		√	√	√	√	0573 0636 0572
2005	Buick	Century	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2005	Buick	Century	Heating and air conditioning		√	√	√	√	
2005	Buick	Century	Chassis	√	√	√	√	√	0506
2005	Buick	LaCrosse	HVAC systems - manual		√	√	√	√	
2005	Buick	LaCrosse	HVAC systems - automatic	√	√	√	√	√	0500
2005	Buick	LaCrosse	Brakes	√	√	√	√	√	0506
2005	Buick	LaCrosse	Engine controls		√	√	√	√	
2005	Buick	LaCrosse	Engine cooling		√	√	√	√	
2005	Buick	LaCrosse	Engine electrical	√	√	√	√	√	0515
2005	Buick	LaCrosse	Shift lock control	√	√	√	√	√	0499
2005	Buick	LaCrosse	Automatic transaxle	√	√	√	√	√	0499
2005	Buick	LaCrosse	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Buick	LaCrosse	Cruise Control		√	√	√	√	
2005	Buick	LaCrosse	Entertainment	√	√	√	√	√	0516
2005	Buick	LaCrosse	Horns	√	√	√	√	√	0499
2005	Buick	LaCrosse	Instrument panel	√	√	√	√	√	0663
2005	Buick	LaCrosse	Keyless entry	√	√	√	√	√	0499
2005	Buick	LaCrosse	Lighting systems	√	√	√	√	√	0499
2005	Buick	LaCrosse	Seats	√	√	√	√	√	0499
2005	Buick	LaCrosse	Stationary windows	√	√	√	√	√	0499
2005	Buick	LaCrosse	Theft deterrent	√	√	√	√	√	0499
2005	Buick	LaCrosse	Wipers/washer systems	√	√	√	√	√	0499
2005	Buick	LaCrosse	Seat belts	√	√	√	√		0515
2005	Buick	LaCrosse	SIR	√	√	√	√		0515
2005	Buick	LaCrosse (Allure in Canada)	HVAC systems - manual		√	√	√	√	
2005	Buick	LaCrosse (Allure in Canada)	HVAC systems - automatic	√	√	√	√	√	0500
2005	Buick	LaCrosse (Allure in Canada)	Brakes	√	√	√	√	√	0506
2005	Buick	LaCrosse (Allure in Canada)	Engine controls		√	√	√	√	
2005	Buick	LaCrosse (Allure in Canada)	Engine cooling		√	√	√	√	
2005	Buick	LaCrosse (Allure in Canada)	Engine electrical	√	√	√	√	√	0515
2005	Buick	LaCrosse (Allure in Canada)	Shift lock control	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Automatic transaxle	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Buick	LaCrosse (Allure in Canada)	Cruise Control		√	√	√	√	
2005	Buick	LaCrosse (Allure in Canada)	Entertainment	√	√	√	√	√	0516
2005	Buick	LaCrosse (Allure in Canada)	Horns	√	√	√	√	√	0499

2005	Buick	LaCrosse (Allure in Canada)	Instrument panel	√	√	√	√	√	0663
2005	Buick	LaCrosse (Allure in Canada)	Keyless entry	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Lighting systems	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Seats	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Stationary windows	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Theft deterrent	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Wipers/washer systems	√	√	√	√	√	0499
2005	Buick	LaCrosse (Allure in Canada)	Seat belts	√	√	√	√		0515
2005	Buick	LaCrosse (Allure in Canada)	SIR	√	√	√	√		0515
2005	Buick	LeSabre	Powertrain	√	√	√	√	√	
2005	Buick	LeSabre	Dash integration module	√	√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604
2005	Buick	LeSabre	Head up dilay	√	√	√	√	√	
2005	Buick	LeSabre	Rear integration module	√	√	√	√	√	
2005	Buick	LeSabre	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Buick	LeSabre	Driver door module	√	√	√	√	√	
2005	Buick	LeSabre	CD changer	√	√	√	√		
2005	Buick	LeSabre	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636
2005	Buick	LeSabre	Digital radio receiver	√	√	√	√		0516
2005	Buick	LeSabre	Supplemental inflatable restraint	√	√	√	√		0605
2005	Buick	LeSabre	Remote function actuation	√	√	√	√	√	
2005	Buick	LeSabre	Vehicle theft deterrent	√	√	√	√		
2005	Buick	LeSabre	Instrument panel cluster	√	√	√	√	√	0651 0650
2005	Buick	LeSabre	Climate control panel	√	√	√	√	√	
2005	Buick	LeSabre	Instrument panel module	√	√	√	√	√	0630 0667
2005	Buick	LeSabre	DRP/ABS/TIM		√	√	√	√	0506
2005	Buick	LeSabre	Powertrain	√	√	√	√	√	
2005	Buick	LeSabre	Dash integration module	√	√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604
2005	Buick	LeSabre	Head up dilay	√	√	√	√	√	
2005	Buick	LeSabre	Rear integration module	√	√	√	√	√	
2005	Buick	LeSabre	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Buick	LeSabre	Driver door module	√	√	√	√	√	
2005	Buick	LeSabre	CD changer	√	√	√	√		
2005	Buick	LeSabre	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636
2005	Buick	LeSabre	Memory seat module	√	√	√	√	√	
2005	Buick	LeSabre	Digital radio receiver	√	√	√	√		0516
2005	Buick	LeSabre	Supplemental inflatable restraint	√	√	√	√		0605
2005	Buick	LeSabre	Remote function actuation	√	√	√	√	√	
2005	Buick	LeSabre	Vehicle theft deterrent	√	√	√	√		

2005	Buick	LeSabre	Instrument panel cluster	√	√	√	√	√	0651 0650
2005	Buick	LeSabre	Climate control panel	√	√	√	√	√	
2005	Buick	LeSabre	Instrument panel module	√	√	√	√	√	0630 0667
2005	Buick	LeSabre	DRP/ABS/TIM		√	√	√	√	0506
2005	Buick	Park Avenue	Powertrain	√	√	√	√	√	
2005	Buick	Park Avenue	Body Control Module	√	√	√	√	√	0614 0668 0550
2005	Buick	Park Avenue	Memory seat module	√	√	√	√	√	0669
2005	Buick	Park Avenue	Driver door module	√	√	√	√	√	
2005	Buick	Park Avenue	Supplemental inflatable restraint	√	√	√	√		0515
2005	Buick	Park Avenue	Remote function actuation	√			√	√	
2005	Buick	Park Avenue	Vehicle theft deterrent		√	√	√		
2005	Buick	Park Avenue	Heating and air conditioning	√	√	√	√	√	0630
2005	Buick	Park Avenue	Vehicle comm. interface module	√	√	√	√		0647 0585
2005	Buick	Park Avenue	DRP/ABS/TIM		√	√	√	√	0506
2005	Cadillac	CTS	Powertrain	√	√	√	√	√	
2005	Cadillac	CTS	Dash integration module	√	√	√	√	√	0614 0615 0616 0617 0618 0619 0620 0621 0622 0623 0624 0625
2005	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2005	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2005	Cadillac	CTS	Driver door switch	√	√	√	√		0609 0609 0609 0609
2005	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2005	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2005	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2005	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2005	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2005	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2005	Cadillac	CTS	Radio	√	√	√	√		0606 0586 0587 0578 0579 0607 0525 0525
2005	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2005	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2005	Cadillac	CTS	Remote function actuation	√	√	√	√	√	
2005	Cadillac	CTS	Vehicle theft deterrent	√	√	√	√		
2005	Cadillac	CTS	Passenger presence system		√	√			
2005	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2005	Cadillac	CTS	Climate control panel	√	√	√	√	√	0524
2005	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2005	Cadillac	CTS	Powertrain	√	√	√	√	√	
2005	Cadillac	CTS	Dash integration module	√	√	√	√	√	0614 0615 0616 0617 0618 0619 0620 0621 0622 0623 0624 0625

2005	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2005	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2005	Cadillac	CTS	Driver door switch	√	√	√	√		
2005	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2005	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2005	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2005	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2005	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2005	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2005	Cadillac	CTS	Radio	√	√	√	√		0606 0586 0587 0578 0579 0607 0525 0525
2005	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2005	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2005	Cadillac	CTS	Remote function actuation	√	√	√	√	√	
2005	Cadillac	CTS	Vehicle theft deterrent	√	√	√	√		
2005	Cadillac	CTS	Passenger presence system		√	√			
2005	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2005	Cadillac	CTS	Climate control panel	√	√	√	√	√	0524
2005	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2005	Cadillac	CTS	Powertrain	√	√	√	√	√	
2005	Cadillac	CTS	Dash integration module	√	√	√	√	√	0614 0615 0616 0617 0618 0619 0620 0621 0622 0623 0624 0625
2005	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2005	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2005	Cadillac	CTS	Driver door switch	√	√	√	√		
2005	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2005	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2005	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2005	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2005	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2005	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2005	Cadillac	CTS	Radio	√	√	√	√		0606 0586 0587 0578 0579 0607 0525 0525
2005	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2005	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2005	Cadillac	CTS	Remote function actuation	√	√	√	√	√	
2005	Cadillac	CTS	Vehicle theft deterrent	√	√	√	√		
2005	Cadillac	CTS	Passenger presence system		√	√			
2005	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	

2005	Cadillac	CTS	Climate control panel	√	√	√	√	√	0524
2005	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2005	Cadillac	CTS	Dash integration module	√	√	√	√	√	0614 0615 0616 0617 0618 0619 0620 0621 0622 0623 0624 0625
2005	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2005	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2005	Cadillac	CTS	Driver door switch	√	√	√	√		
2005	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2005	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2005	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2005	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2005	Cadillac	CTS	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2005	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2005	Cadillac	CTS	Radio	√	√	√	√		0606 0586 0587 0578 0579 0607 0525 0525
2005	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2005	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2005	Cadillac	CTS	Remote function actuation	√	√	√	√	√	
2005	Cadillac	CTS	Vehicle theft deterrent	√	√	√	√		
2005	Cadillac	CTS	Passenger presence system		√	√			
2005	Cadillac	CTS	Instrument panel cluster	√	√	√	√	√	
2005	Cadillac	CTS	Climate control panel	√	√	√	√	√	0604 0605
2005	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2005	Cadillac	CTS	Tire pressure monitor		√	√	√	√	0629
2005	Cadillac	CTS	Powertrain	√	√	√	√	√	
2005	Cadillac	Deville	Powertrain	√	√	√	√	√	
2005	Cadillac	Deville	Dash integration module		√	√	√	√	0614 0664 0615 0619 0670 0628
2005	Cadillac	Deville	Personalization		√	√	√	√	
2005	Cadillac	Deville	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Cadillac	Deville	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	Deville	CD changer	√	√	√	√		
2005	Cadillac	Deville	Memory seat module		√	√	√	√	
2005	Cadillac	Deville	Driver door switch	√	√	√	√		
2005	Cadillac	Deville	Driver door module	√	√	√	√	√	
2005	Cadillac	Deville	Passenger door module	√	√	√	√	√	
2005	Cadillac	Deville	Left rear door module	√	√	√	√	√	
2005	Cadillac	Deville	Right rear door module	√	√	√	√	√	
2005	Cadillac	Deville	Amplifier (delco)		√	√	√	√	
2005	Cadillac	Deville	Navigation radio	√	√	√	√		0658

2005	Cadillac	Deville	Radio	√	√	√	√	√	0671 0578 0579 0525
2005	Cadillac	Deville	Remote function actuation	√	√	√	√	√	0672
2005	Cadillac	Deville	Vehicle theft deterrent		√	√	√		
2005	Cadillac	Deville	Instrument panel cluster		√	√	√	√	0651 0650 0673 0586
2005	Cadillac	Deville	Instrument panel module		√	√	√	√	0630 0667
2005	Cadillac	Deville	Rear climate control panel		√	√	√	√	
2005	Cadillac	Deville	eed sensitive steering		√	√	√		
2005	Cadillac	DHS	Powertrain	√	√	√	√	√	
2005	Cadillac	DHS	Dash integration module		√	√	√	√	0614 0664 0615 0619 0670 0628
2005	Cadillac	DHS	Personalization		√	√	√	√	
2005	Cadillac	DHS	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Cadillac	DHS	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	DHS	CD changer	√	√	√	√		
2005	Cadillac	DHS	Memory seat module		√	√	√	√	
2005	Cadillac	DHS	Driver door switch	√	√	√	√		
2005	Cadillac	DHS	Driver door module	√	√	√	√	√	
2005	Cadillac	DHS	Passenger door module	√	√	√	√	√	
2005	Cadillac	DHS	Left rear door module	√	√	√	√	√	
2005	Cadillac	DHS	Right rear door module	√	√	√	√	√	
2005	Cadillac	DHS	Amplifier (bose)		√	√	√	√	
2005	Cadillac	DHS	Navigation radio	√	√	√	√		0658
2005	Cadillac	DHS	Radio	√	√	√	√	√	0671 0578 0579 0525
2005	Cadillac	DHS	Remote function actuation	√	√	√	√	√	0672
2005	Cadillac	DHS	Vehicle theft deterrent		√	√	√		
2005	Cadillac	DHS	Instrument panel cluster		√	√	√	√	0651 0650 0673 0586
2005	Cadillac	DHS	Instrument panel module		√	√	√	√	0630 0667
2005	Cadillac	DHS	Rear climate control panel		√	√	√	√	
2005	Cadillac	DHS	eed sensitive steering		√	√	√		
2005	Cadillac	DTS	Powertrain	√	√	√	√	√	
2005	Cadillac	DTS	Dash integration module		√	√	√	√	0614 0664 0615 0619 0670 0628
2005	Cadillac	DTS	Personalization		√	√	√	√	
2005	Cadillac	DTS	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Cadillac	DTS	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	DTS	CD changer	√	√	√	√		
2005	Cadillac	DTS	Memory seat module		√	√	√	√	
2005	Cadillac	DTS	Driver door switch	√	√	√	√		
2005	Cadillac	DTS	Driver door module	√	√	√	√	√	
2005	Cadillac	DTS	Passenger door module	√	√	√	√	√	
2005	Cadillac	DTS	Left rear door module	√	√	√	√	√	
2005	Cadillac	DTS	Right rear door module	√	√	√	√	√	

2005	Cadillac	DTS	Amplifier (bose)		√	√	√	√	
2005	Cadillac	DTS	Navigation radio	√	√	√	√		0658
2005	Cadillac	DTS	Radio	√	√	√	√	√	0671 0578 0579 0525
2005	Cadillac	DTS	Remote function actuation	√	√	√	√	√	0672
2005	Cadillac	DTS	Vehicle theft deterrent		√	√	√		
2005	Cadillac	DTS	Instrument panel cluster		√	√	√	√	0651 0650 0673 0586
2005	Cadillac	DTS	Instrument panel module		√	√	√	√	0630 0667
2005	Cadillac	DTS	Rear climate control panel		√	√	√	√	
2005	Cadillac	DTS	eed sensitive steering		√	√	√		
2005	Cadillac	STS	HVAC systems - automatic	√	√	√	√	√	0493
2005	Cadillac	STS	Variable effort steering		√	√	√		
2005	Cadillac	STS	Steering wheel and column	√	√	√	√	√	0551
2005	Cadillac	STS	Tire pressure monitoring	√	√	√	√	√	0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520 0558
2005	Cadillac	STS	Electronic suension control (ESC)		√	√	√	√	
2005	Cadillac	STS	Antilock Braking System	√	√	√	√	√	0506
2005	Cadillac	STS	Hydraulic brakes		√	√	√	√	
2005	Cadillac	STS	Park brake	√	√	√	√	√	
2005	Cadillac	STS	Engine controls	√	√	√	√	√	0493
2005	Cadillac	STS	Engine cooling	√	√	√	√	√	0493
2005	Cadillac	STS	Engine electrical	√	√	√	√	√	0551
2005	Cadillac	STS	Shift lock control	√	√	√	√	√	0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520 0558
2005	Cadillac	STS	Automatic transmission	√	√	√	√	√	
2005	Cadillac	STS	Body rear end	√	√	√	√	√	0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520 0558
2005	Cadillac	STS	Cellular communication	√	√	√	√	√	0647
2005	Cadillac	STS	Cruise Control	√	√	√	√	√	0551
2005	Cadillac	STS	Door	√	√	√	√	√	0560
2005	Cadillac	STS	Entertainment	√	√	√	√	√	0561 0525 0525
2005	Cadillac	STS	Horns	√	√	√	√	√	
2005	Cadillac	STS	Instrument panel	√	√	√	√	√	0551
2005	Cadillac	STS	Keyless entry	√	√	√	√	√	0551
2005	Cadillac	STS	Lighting systems	√	√	√	√	√	0551
2005	Cadillac	STS	Driver position module		√	√	√		
2005	Cadillac	STS	Seats	√	√	√	√	√	
2005	Cadillac	STS	Stationary windows	√	√	√	√	√	
2005	Cadillac	STS	Theft deterrent	√	√	√	√	√	0551
2005	Cadillac	STS	Wipers/washer systems	√	√	√	√	√	0551



2005	Cadillac	STS	Rear parking assist	√	√	√	√	√	
2005	Cadillac	STS	Seat belts	√	√	√	√		0559
2005	Cadillac	STS	SIR	√	√	√	√		0559
2005	Cadillac	STS	Variable effort steering		√	√	√		
2005	Cadillac	STS	Steering wheel and column	√	√	√	√	√	0551
2005	Cadillac	STS	Tire pressure monitoring	√	√	√	√	√	0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520 0558
2005	Cadillac	STS	Electronic suension control (ESC)		√	√	√	√	
2005	Cadillac	STS	Shift lock control	√	√	√	√	√	0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520 0558
2005	Cadillac	STS	Automatic transmission	√	√	√	√	√	0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520 0558
2005	Cadillac	STS	Body rear end	√	√	√	√	√	0518 0556 0557 0519 0520 0558 0518 0556 0557 0519 0520 0558
2005	Cadillac	STS	Cellular communication	√	√	√	√	√	0647
2005	Cadillac	STS	Door	√	√	√	√	√	0560
2005	Cadillac	STS	Entertainment	√	√	√	√	√	0561 0525 0525
2005	Cadillac	STS	Horns	√	√	√	√	√	
2005	Cadillac	STS	Keyless entry	√	√	√	√	√	0551
2005	Cadillac	STS	Lighting systems	√	√	√	√	√	0551
2005	Cadillac	STS	Driver position module		√	√	√		
2005	Cadillac	STS	Seats	√	√	√	√	√	
2005	Cadillac	STS	Stationary windows	√	√	√	√	√	
2005	Cadillac	STS	Wipers/washer systems	√	√	√	√	√	0551
2005	Cadillac	STS	Rear parking assist	√	√	√	√	√	
2005	Cadillac	STS	Cruise Control	√	√	√	√	√	0551
2005	Cadillac	STS	Instrument panel	√	√	√	√	√	0551
2005	Cadillac	STS	Theft deterrent	√	√	√	√	√	0551
2005	Cadillac	STS	Seat belts	√	√	√	√		0559
2005	Cadillac	STS	SIR	√	√	√	√		0559
2005	Cadillac	STS	HVAC systems - automatic	√	√	√	√	√	
2005	Cadillac	STS	Antilock Braking System	√	√	√	√	√	0506
2005	Cadillac	STS	Hydraulic brakes		√	√	√	√	
2005	Cadillac	STS	Park brake	√	√	√	√	√	
2005	Cadillac	STS	Engine controls	√	√	√	√	√	
2005	Cadillac	STS	Engine cooling	√	√	√	√	√	
2005	Cadillac	STS	Engine electrical	√	√	√	√	√	0551
2005	Cadillac	XLR	HVAC systems - automatic	√	√	√	√	√	0500 0493

2005	Cadillac	XLR	Variable effort steering		√	√	√		
2005	Cadillac	XLR	Steering wheel and column		√	√	√	√	
2005	Cadillac	XLR	Tire pressure monitoring	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2005	Cadillac	XLR	Electronic suspension control (ESC)		√	√	√	√	
2005	Cadillac	XLR	Antilock Braking System	√	√	√	√	√	0506 0493
2005	Cadillac	XLR	Hydraulic brakes		√	√	√	√	
2005	Cadillac	XLR	Park brake		√	√	√	√	
2005	Cadillac	XLR	Engine controls	√	√	√	√	√	0493
2005	Cadillac	XLR	Engine cooling	√	√	√	√	√	0493
2005	Cadillac	XLR	Engine electrical	√	√	√	√	√	0493
2005	Cadillac	XLR	Shift lock control	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2005	Cadillac	XLR	Automatic transmission	√	√	√	√	√	
2005	Cadillac	XLR	Body rear end	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2005	Cadillac	XLR	Cellular communication	√	√	√	√	√	0647 0585
2005	Cadillac	XLR	Cruise Control	√	√	√	√	√	0493
2005	Cadillac	XLR	Door	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2005	Cadillac	XLR	Entertainment	√	√	√	√	√	0516
2005	Cadillac	XLR	Horns		√	√	√	√	
2005	Cadillac	XLR	Instrument panel	√	√	√	√	√	0493
2005	Cadillac	XLR	Keyless entry	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2005	Cadillac	XLR	Lighting systems	√	√	√	√	√	
2005	Cadillac	XLR	Navigation System		√	√	√		0525
2005	Cadillac	XLR	Roof	√	√	√	√	√	
2005	Cadillac	XLR	Seats	√	√	√	√	√	0522 0646
2005	Cadillac	XLR	Theft deterrent	√	√	√	√	√	0493
2005	Cadillac	XLR	Wipers/washer systems		√	√	√	√	
2005	Cadillac	XLR	Seat belts	√	√	√	√	√	0515
2005	Cadillac	XLR	SIR	√	√	√	√	√	0515
2005	Chevrolet	Aveo	Powertrain	√	√	√	√	√	0493
2005	Chevrolet	Aveo	Chassis	√	√	√	√	√	0506
2005	Chevrolet	Cavalier	Powertrain	√	√	√	√	√	
2005	Chevrolet	Cavalier	Onstar	√	√	√	√	√	0647 0585
2005	Chevrolet	Cavalier	Radio		√	√	√	√	0675
2005	Chevrolet	Cavalier	Body Control Module	√	√	√	√	√	0633
2005	Chevrolet	Cavalier	Supplemental inflatable restraint	√	√	√	√		0515
2005	Chevrolet	Cavalier	Digital radio receiver	√	√	√	√		0516
2005	Chevrolet	Cavalier	Chassis	√	√	√	√	√	0506

2005	Chevrolet	Classic	Powertrain	√	√	√	√	√	
2005	Chevrolet	Classic	Radio		√	√	√	√	
2005	Chevrolet	Classic	Supplemental inflatable restraint	√	√	√	√		
2005	Chevrolet	Classic	Body Control Module	√	√	√	√	√	0633
2005	Chevrolet	Classic	Remote function actuation	√	√	√	√	√	
2005	Chevrolet	Classic	Chassis	√	√	√	√	√	0506
2005	Chevrolet	Cobalt	HVAC systems - manual	√	√	√	√	√	0515
2005	Chevrolet	Cobalt	Power steering system		√	√	√		
2005	Chevrolet	Cobalt	Antilock Braking System	√	√	√	√	√	0506
2005	Chevrolet	Cobalt	Park brake	√	√	√	√	√	0515
2005	Chevrolet	Cobalt	Engine controls	√	√	√	√	√	0493
2005	Chevrolet	Cobalt	Engine cooling	√	√	√	√	√	0493
2005	Chevrolet	Cobalt	Engine electrical	√	√	√	√	√	0515
2005	Chevrolet	Cobalt	Shift lock control	√	√	√	√	√	0515
2005	Chevrolet	Cobalt	Automatic transaxle	√	√	√	√	√	
2005	Chevrolet	Cobalt	Body rear end	√	√	√	√	√	0515
2005	Chevrolet	Cobalt	Cellular communication	√	√	√	√	√	0647 0585
2005	Chevrolet	Cobalt	Cruise Control	√	√	√	√	√	0515
2005	Chevrolet	Cobalt	Entertainment	√	√	√	√	√	0516
2005	Chevrolet	Cobalt	Horns	√	√	√	√	√	0515
2005	Chevrolet	Cobalt	Instrument panel	√	√	√	√	√	0515
2005	Chevrolet	Cobalt	Keyless entry	√	√	√	√	√	0515
2005	Chevrolet	Cobalt	Lighting systems	√	√	√	√	√	0515
2005	Chevrolet	Cobalt	Body Control Module	√	√	√	√	√	0515
2005	Chevrolet	Cobalt	Stationary windows	√	√	√	√	√	0515
2005	Chevrolet	Cobalt	Theft deterrent	√	√	√	√	√	0515
2005	Chevrolet	Cobalt	Wipers/washer systems	√	√	√	√	√	0515
2005	Chevrolet	Cobalt	Seat belts	√	√	√	√	√	0515
2005	Chevrolet	Cobalt	SIR	√	√	√	√		0515
2005	Chevrolet	Corvette	HVAC systems - automatic	√	√	√	√	√	0500
2005	Chevrolet	Corvette	Variable effort steering		√	√	√		
2005	Chevrolet	Corvette	Steering wheel and column	√	√	√	√	√	0676
2005	Chevrolet	Corvette	Tire pressure monitoring	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2005	Chevrolet	Corvette	Electronic suension control (ESC)		√	√	√	√	
2005	Chevrolet	Corvette	Antilock Braking System	√	√	√	√	√	0506
2005	Chevrolet	Corvette	Hydraulic brakes		√	√	√	√	
2005	Chevrolet	Corvette	Park brake	√	√	√	√	√	
2005	Chevrolet	Corvette	Engine controls	√	√	√	√	√	0493
2005	Chevrolet	Corvette	Engine cooling	√	√	√	√	√	0493
2005	Chevrolet	Corvette	Engine electrical	√	√	√	√	√	0493

2005	Chevrolet	Corvette	Shift lock control	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2005	Chevrolet	Corvette	Automatic transmission	√	√	√	√	√	
2005	Chevrolet	Corvette	Body rear end	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2005	Chevrolet	Corvette	Cellular communication	√	√	√	√	√	0647 0585
2005	Chevrolet	Corvette	Cruise Control	√	√	√	√	√	0493
2005	Chevrolet	Corvette	Door	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2005	Chevrolet	Corvette	Entertainment	√	√	√	√	√	0516
2005	Chevrolet	Corvette	Horns	√	√	√	√	√	
2005	Chevrolet	Corvette	Instrument panel	√	√	√	√	√	0493
2005	Chevrolet	Corvette	Keyless entry	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2005	Chevrolet	Corvette	Lighting systems	√	√	√	√	√	
2005	Chevrolet	Corvette	Navigation System	√	√	√	√		0525
2005	Chevrolet	Corvette	Roof	√	√	√	√	√	0631
2005	Chevrolet	Corvette	Seats	√	√	√	√	√	0522 0646
2005	Chevrolet	Corvette	Theft deterrent	√	√	√	√	√	0518 0519 0520 0518 0519 0520 0518 0519
2005	Chevrolet	Corvette	Wipers/washer systems	√	√	√	√	√	
2005	Chevrolet	Corvette	Seat belts	√	√	√	√	√	0515
2005	Chevrolet	Corvette	SIR	√	√	√	√	√	0515
2005	Chevrolet	Epica	Powertrain	√	√	√	√	√	0493
2005	Chevrolet	Epica	ISU		√	√	√	√	
2005	Chevrolet	Epica	Antilock Braking System	√	√	√	√	√	0506
2005	Chevrolet	Impala	Powertrain	√	√	√	√	√	
2005	Chevrolet	Impala	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	Impala	Supplemental inflatable restraint	√	√	√	√		
2005	Chevrolet	Impala	Radio		√	√	√	√	0572 0573 0574
2005	Chevrolet	Impala	Digital radio receiver	√	√	√	√		0516
2005	Chevrolet	Impala	Driver information center		√	√			
2005	Chevrolet	Impala	Body Control Module		√	√	√	√	0515 0628 0614
2005	Chevrolet	Impala	Heating and air conditioning		√	√			
2005	Chevrolet	Impala	Chassis	√	√	√	√	√	0506
2005	Chevrolet	Malibu	HVAC systems - manual		√	√	√	√	
2005	Chevrolet	Malibu	HVAC systems - automatic	√	√	√	√	√	
2005	Chevrolet	Malibu	Power steering system		√	√	√	√	0596
2005	Chevrolet	Malibu	Antilock Braking System	√	√	√	√	√	0506
2005	Chevrolet	Malibu	Hydraulic brakes		√	√	√		
2005	Chevrolet	Malibu	Engine controls	√	√	√	√	√	0493
2005	Chevrolet	Malibu	Engine cooling		√	√	√	√	

2005	Chevrolet	Malibu	Engine electrical	√	√	√	√	√	0515
2005	Chevrolet	Malibu	Shift lock control		√	√	√		
2005	Chevrolet	Malibu	Automatic transaxle		√	√	√	√	
2005	Chevrolet	Malibu	Body rear end		√	√	√	√	
2005	Chevrolet	Malibu	Cellular communication	√	√	√	√	√	0647
2005	Chevrolet	Malibu	Cruise Control		√	√	√		
2005	Chevrolet	Malibu	Door		√	√	√	√	
2005	Chevrolet	Malibu	Entertainment	√	√	√	√	√	0516
2005	Chevrolet	Malibu	Instrument panel	√	√	√	√	√	
2005	Chevrolet	Malibu	Keyless entry		√	√	√		
2005	Chevrolet	Malibu	Lighting systems		√	√	√	√	
2005	Chevrolet	Malibu	Stationary windows		√	√	√	√	
2005	Chevrolet	Malibu	Theft deterrent	√	√	√	√	√	
2005	Chevrolet	Malibu	Wipers/washer systems		√	√	√	√	
2005	Chevrolet	Malibu	Adjustable pedals		√	√	√	√	
2005	Chevrolet	Malibu	Seat belts	√	√	√	√	√	0515
2005	Chevrolet	Malibu	SIR	√	√	√	√	√	0515
2005	Chevrolet	Monte Carlo	Powertrain	√	√	√	√	√	
2005	Chevrolet	Monte Carlo	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	Monte Carlo	Supplemental inflatable restraint	√	√	√	√		
2005	Chevrolet	Monte Carlo	Radio		√	√	√	√	0572 0573 0574
2005	Chevrolet	Monte Carlo	Digital radio receiver	√	√	√	√		0516
2005	Chevrolet	Monte Carlo	Driver information center		√	√			
2005	Chevrolet	Monte Carlo	Body Control Module		√	√	√	√	0515 0628 0614
2005	Chevrolet	Monte Carlo	Heating and air conditioning		√	√			
2005	Chevrolet	Monte Carlo	Chassis	√	√	√	√	√	0506
2005	Chevrolet	Optra	Powertrain	√	√	√	√	√	0507
2005	Chevrolet	Optra	Antilock Braking System	√	√	√	√	√	0506
2005	Chevrolet	ark	Powertrain	√	√	√	√	√	
2005	Chevrolet	ark	Chassis	√	√	√	√	√	
2005	Chevrolet	Vivant	Powertrain	√	√	√	√	√	0507
2005	Chevrolet	Vivant	Supplemental inflatable restraint		√	√	√		
2005	Chevrolet	Vivant	Chassis	√	√	√	√	√	0506
2005	Chevrolet	Monza	Powertrain	√	√	√	√	√	0493
2005	Chevrolet	Chevrolet	Powertrain	√	√	√	√	√	0493
2005	Chevrolet	Others	Powertrain	√	√	√	√	√	0493
2005	Chevrolet	Others	Antilock Braking System	√	√	√	√	√	0506
2005	Chevrolet	Others	ISU	√	√	√	√	√	
2005	Pontiac	Bonneville	Powertrain	√	√	√	√	√	
2005	Pontiac	Bonneville	Dash integration module	√	√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604

2005	Pontiac	Bonneville	Head up dilay	√	√	√	√	√	
2005	Pontiac	Bonneville	Rear integration module	√	√	√	√	√	
2005	Pontiac	Bonneville	Driver door module	√	√	√	√	√	
2005	Pontiac	Bonneville	CD changer	√	√	√	√		
2005	Pontiac	Bonneville	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636
2005	Pontiac	Bonneville	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Pontiac	Bonneville	Digital radio receiver	√	√	√	√		0516
2005	Pontiac	Bonneville	Supplemental inflatable restraint	√	√	√	√		0605
2005	Pontiac	Bonneville	Remote function actuation	√	√	√	√	√	
2005	Pontiac	Bonneville	Vehicle theft deterrent	√	√	√	√		0677
2005	Pontiac	Bonneville	Instrument panel cluster	√	√	√	√	√	
2005	Pontiac	Bonneville	Climate control panel	√	√	√	√	√	
2005	Pontiac	Bonneville	Instrument panel module	√	√	√	√	√	0630 0667
2005	Pontiac	Bonneville	DRP/ABS/TIM		√	√	√	√	0506
2005	Pontiac	Bonneville	Powertrain	√	√	√	√	√	
2005	Pontiac	Bonneville	Dash integration module	√	√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604
2005	Pontiac	Bonneville	Head up dilay	√	√	√	√	√	
2005	Pontiac	Bonneville	Rear integration module	√	√	√	√	√	
2005	Pontiac	Bonneville	Driver door module	√	√	√	√	√	
2005	Pontiac	Bonneville	CD changer	√	√	√	√		
2005	Pontiac	Bonneville	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636
2005	Pontiac	Bonneville	Memory seat module	√	√	√	√	√	
2005	Pontiac	Bonneville	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Pontiac	Bonneville	Digital radio receiver	√	√	√	√		0516
2005	Pontiac	Bonneville	Supplemental inflatable restraint	√	√	√	√		0605
2005	Pontiac	Bonneville	Remote function actuation	√	√	√	√	√	
2005	Pontiac	Bonneville	Vehicle theft deterrent	√	√	√	√		0677
2005	Pontiac	Bonneville	Instrument panel cluster	√	√	√	√	√	
2005	Pontiac	Bonneville	Climate control panel	√	√	√	√	√	
2005	Pontiac	Bonneville	Instrument panel module	√	√	√	√	√	0630 0667
2005	Pontiac	Bonneville	DRP/ABS/TIM		√	√	√	√	0506
2005	Pontiac	Bonneville	Powertrain	√	√	√	√	√	
2005	Pontiac	Bonneville	Dash integration module		√	√			0614 0664 0615 0619 0665 0666 0618 0604
2005	Pontiac	Bonneville	Head up dilay	√	√	√	√	√	
2005	Pontiac	Bonneville	Rear integration module	√	√	√	√	√	0678
2005	Pontiac	Bonneville	Driver door module	√	√	√	√	√	
2005	Pontiac	Bonneville	CD changer	√	√	√	√		

2005	Pontiac	Bonneville	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636
2005	Pontiac	Bonneville	Memory seat module	√	√	√	√	√	
2005	Pontiac	Bonneville	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Pontiac	Bonneville	Digital radio receiver	√	√	√	√		0516
2005	Pontiac	Bonneville	Supplemental inflatable restraint	√	√	√	√		0605
2005	Pontiac	Bonneville	Remote function actuation	√	√	√	√	√	
2005	Pontiac	Bonneville	Vehicle theft deterrent	√	√	√	√		0677
2005	Pontiac	Bonneville	Instrument panel cluster	√	√	√	√	√	
2005	Pontiac	Bonneville	Climate control panel	√	√	√	√	√	
2005	Pontiac	Bonneville	Instrument panel module	√	√	√	√	√	0630 0667
2005	Pontiac	Bonneville	DRP/ABS/TIM		√	√	√	√	0506
2005	Pontiac	Bonneville	Magna steer		√	√	√		
2005	Pontiac	G6	HVAC systems - manual		√	√	√	√	
2005	Pontiac	G6	Power steering system		√	√	√	√	0596
2005	Pontiac	G6	Antilock Braking System	√	√	√	√	√	0506
2005	Pontiac	G6	Hydraulic brakes		√	√	√		
2005	Pontiac	G6	Engine controls	√	√	√	√	√	0493
2005	Pontiac	G6	Engine cooling		√	√	√	√	
2005	Pontiac	G6	Engine electrical	√	√	√	√	√	0515
2005	Pontiac	G6	Shift lock control		√	√	√		
2005	Pontiac	G6	Automatic transaxle		√	√	√	√	
2005	Pontiac	G6	Body rear end		√	√	√	√	
2005	Pontiac	G6	Cellular communication	√	√	√	√	√	0647
2005	Pontiac	G6	Cruise Control		√	√	√		
2005	Pontiac	G6	Door		√	√	√	√	
2005	Pontiac	G6	Entertainment	√	√	√	√	√	0516
2005	Pontiac	G6	Instrument panel	√	√	√	√	√	
2005	Pontiac	G6	Keyless entry		√	√	√		
2005	Pontiac	G6	Lighting systems		√	√	√	√	
2005	Pontiac	G6	Stationary windows		√	√	√	√	
2005	Pontiac	G6	Theft deterrent	√	√	√	√	√	
2005	Pontiac	G6	Wipers/washer systems		√	√	√	√	
2005	Pontiac	G6	Adjustable pedals		√	√	√	√	
2005	Pontiac	G6	Seat belts	√	√	√	√	√	0515
2005	Pontiac	G6	SIR	√	√	√	√	√	0515
2005	Pontiac	GTO	Powertrain	√	√	√	√	√	0493
2005	Pontiac	GTO	Supplemental inflatable restraint		√	√			
2005	Pontiac	GTO	ABS/TCS	√	√	√	√	√	0562
2005	Pontiac	Grand Am	Powertrain	√	√	√	√	√	
2005	Pontiac	Grand Am	Radio		√	√	√	√	0675

2005	Pontiac	Grand Am	Digital radio receiver	√	√	√	√		0516
2005	Pontiac	Grand Am	Supplemental inflatable restraint	√	√	√	√		
2005	Pontiac	Grand Am	Body Control Module	√	√	√	√	√	0633
2005	Pontiac	Grand Am	Remote function actuation	√	√	√	√	√	
2005	Pontiac	Grand Am	Chassis	√	√	√	√	√	0506
2005	Pontiac	Grand Prix	HVAC systems - manual	√	√	√	√	√	0499
2005	Pontiac	Grand Prix	HVAC systems - automatic	√	√	√	√	√	0500
2005	Pontiac	Grand Prix	Brakes	√	√	√	√	√	0506
2005	Pontiac	Grand Prix	Engine controls	√	√	√	√	√	0499
2005	Pontiac	Grand Prix	Engine cooling	√	√	√	√	√	0493
2005	Pontiac	Grand Prix	Engine electrical	√	√	√	√	√	0515
2005	Pontiac	Grand Prix	Shift lock control	√	√	√	√	√	0499
2005	Pontiac	Grand Prix	Automatic transaxle	√	√	√	√	√	0499
2005	Pontiac	Grand Prix	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Grand Prix	Cruise Control	√	√	√	√	√	0493
2005	Pontiac	Grand Prix	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Grand Prix	Horns	√	√	√	√	√	0499
2005	Pontiac	Grand Prix	Instrument panel	√	√	√	√	√	0493
2005	Pontiac	Grand Prix	Keyless entry	√	√	√	√	√	0499
2005	Pontiac	Grand Prix	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Grand Prix	Navigation System	√	√	√	√		0525
2005	Pontiac	Grand Prix	Seats	√	√	√	√	√	0499
2005	Pontiac	Grand Prix	Stationary windows	√	√	√	√	√	0499
2005	Pontiac	Grand Prix	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Grand Prix	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Grand Prix	Seat belts	√	√	√	√		0515
2005	Pontiac	Grand Prix	SIR	√	√	√	√		0515
2005	Pontiac	Matiz	Powertrain	√	√	√	√	√	
2005	Pontiac	Matiz	Chassis	√	√	√	√	√	
2005	Pontiac	Pursuit	HVAC systems - manual	√	√	√	√	√	0493
2005	Pontiac	Pursuit	Power steering system		√	√	√		
2005	Pontiac	Pursuit	Antilock Braking System	√	√	√	√	√	0506
2005	Pontiac	Pursuit	Park brake	√	√	√	√	√	0515
2005	Pontiac	Pursuit	Engine controls	√	√	√	√	√	0493
2005	Pontiac	Pursuit	Engine cooling	√	√	√	√	√	0493
2005	Pontiac	Pursuit	Engine electrical	√	√	√	√	√	0515
2005	Pontiac	Pursuit	Shift lock control	√	√	√	√	√	0515
2005	Pontiac	Pursuit	Automatic transaxle	√	√	√	√	√	
2005	Pontiac	Pursuit	Body rear end	√	√	√	√	√	0515
2005	Pontiac	Pursuit	Cellular communication	√	√	√	√	√	0647 0585
2005	Pontiac	Pursuit	Cruise Control	√	√	√	√	√	0493



2005	Pontiac	Pursuit	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Pursuit	Horns	√	√	√	√	√	0515
2005	Pontiac	Pursuit	Instrument panel	√	√	√	√	√	0493
2005	Pontiac	Pursuit	Keyless entry	√	√	√	√	√	0515
2005	Pontiac	Pursuit	Lighting systems	√	√	√	√	√	0515
2005	Pontiac	Pursuit	Body Control Module	√	√	√	√	√	0515
2005	Pontiac	Pursuit	Stationary windows	√	√	√	√	√	0515
2005	Pontiac	Pursuit	Wipers/washer systems	√	√	√	√	√	0515
2005	Pontiac	Pursuit	Theft deterrent	√	√	√	√	√	0515
2005	Pontiac	Pursuit	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Pursuit	SIR	√	√	√	√		0515
2005	Pontiac	Sunfire	Powertrain	√	√	√	√	√	
2005	Pontiac	Sunfire	Onstar	√	√	√	√	√	0647 0585
2005	Pontiac	Sunfire	Radio		√	√	√	√	0675
2005	Pontiac	Sunfire	Supplemental inflatable restraint	√	√	√	√		0515
2005	Pontiac	Sunfire	Digital radio receiver	√	√	√	√		0516
2005	Pontiac	Sunfire	Body Control Module	√	√	√	√	√	0633
2005	Pontiac	Sunfire	Chassis	√	√	√	√	√	0506
2005	Pontiac	Vibe - AWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Pontiac	Vibe - AWD	Digital radio receiver	√	√	√	√		0516
2005	Pontiac	Vibe - AWD	Cruise Control		√	√	√	√	0572
2005	Pontiac	Vibe - AWD	Chassis		√	√	√	√	0597
2005	Pontiac	Vibe - FWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Pontiac	Vibe - FWD	Digital radio receiver	√	√	√	√		0516
2005	Pontiac	Vibe - FWD	Cruise Control		√	√	√	√	0572
2005	Pontiac	Vibe - FWD	Chassis		√	√	√	√	0597
2005	Pontiac	Wave	Powertrain	√	√	√	√	√	0493
2005	Pontiac	Wave	Chassis	√	√	√	√	√	0506
2005	Saturn	ION	Powertrain	√	√	√	√	√	0493
2005	Saturn	ION	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Saturn	ION	Digital radio receiver	√	√	√	√		0516
2005	Saturn	ION	Radio		√	√	√	√	0524 0551
2005	Saturn	ION	Supplemental inflatable restraint	√	√	√	√		0515
2005	Saturn	ION	Instrument panel cluster	√	√	√	√	√	
2005	Saturn	ION	Body Control Module	√	√	√	√	√	0633 0634 0635
2005	Saturn	ION	Antilock Braking System		√	√	√	√	0506
2005	Saturn	L300/LW300	Powertrain	√	√	√	√	√	
2005	Saturn	L300/LW300	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Saturn	L300/LW300	Supplemental inflatable restraint	√	√	√	√		
2005	Saturn	L300/LW300	Auto. HVAC	√	√	√	√	√	
2005	Saturn	L300/LW300	Body Control Module	√	√	√	√	√	0633 0640 0634 0635

2005	Saturn	L300/LW300	Chassis		√	√	√	√	
2005	Buick	Rainier	Powertrain	√	√	√	√	√	0493
2005	Buick	Rainier	Digital radio receiver	√	√	√	√		0516
2005	Buick	Rainier	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Buick	Rainier	Radio	√	√	√	√		
2005	Buick	Rainier	Disc player and video dilay	√	√	√			
2005	Buick	Rainier	Passenger presence system		√	√			0512
2005	Buick	Rainier	Instrument panel cluster	√	√	√	√	√	
2005	Buick	Rainier	Driver door module	√	√	√	√	√	
2005	Buick	Rainier	Driver seat module	√	√	√	√	√	
2005	Buick	Rainier	Heating and air conditioning	√	√	√	√	√	
2005	Buick	Rainier	Lift gate module	√	√	√	√	√	
2005	Buick	Rainier	Passenger door module	√	√	√	√	√	
2005	Buick	Rainier	Rear seat audio	√	√	√	√		
2005	Buick	Rainier	Body Control Module	√	√	√	√	√	0550
2005	Buick	Rainier	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	Buick	Rainier	Navigation radio	√	√	√	√	√	0525
2005	Buick	Rainier	ABS	√	√	√	√	√	
2005	Buick	Rainier	4WAL 3 sensor	√	√	√	√	√	0493
2005	Buick	Rainier - 2WD	Powertrain	√	√	√	√	√	0493
2005	Buick	Rainier - 2WD	Digital radio receiver	√	√	√	√		0516
2005	Buick	Rainier - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Buick	Rainier - 2WD	Radio	√	√	√	√		
2005	Buick	Rainier - 2WD	Disc player and video dilay	√	√	√			
2005	Buick	Rainier - 2WD	Passenger presence system		√	√			0512
2005	Buick	Rainier - 2WD	Instrument panel cluster	√	√	√	√	√	
2005	Buick	Rainier - 2WD	Driver door module	√	√	√	√	√	
2005	Buick	Rainier - 2WD	Driver seat module	√	√	√	√	√	
2005	Buick	Rainier - 2WD	Heating and air conditioning	√	√	√	√	√	
2005	Buick	Rainier - 2WD	Lift gate module	√	√	√	√	√	
2005	Buick	Rainier - 2WD	Passenger door module	√	√	√	√	√	
2005	Buick	Rainier - 2WD	Rear seat audio	√	√	√	√		
2005	Buick	Rainier - 2WD	Body Control Module	√	√	√	√	√	0550
2005	Buick	Rainier - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	Buick	Rainier - 2WD	Navigation radio	√	√	√	√	√	0525
2005	Buick	Rainier - 2WD	ABS	√	√	√	√	√	
2005	Buick	Rainier - 2WD	4WAL 3 sensor	√	√	√	√	√	0493
2005	Buick	Rendezvous - AWD	Powertrain	√	√	√	√	√	
2005	Buick	Rendezvous - AWD	Disc player and video dilay	√	√	√			
2005	Buick	Rendezvous - AWD	Digital radio receiver	√	√	√	√		0516
2005	Buick	Rendezvous - AWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585

2005	Buick	Rendezvous - AWD	Radio						0524
2005	Buick	Rendezvous - AWD	Heating and air conditioning		√	√	√	√	
2005	Buick	Rendezvous - AWD	Vehicle theft deterrent		√	√	√		
2005	Buick	Rendezvous - AWD	Passenger presence system		√	√			0512
2005	Buick	Rendezvous - AWD	Head up dilay		√	√	√		
2005	Buick	Rendezvous - AWD	Memory seat module		√	√	√	√	
2005	Buick	Rendezvous - AWD	Instrument panel cluster		√	√	√	√	
2005	Buick	Rendezvous - AWD	Body Control Module	√	√	√	√	√	0560 0515 0628 0614
2005	Buick	Rendezvous - AWD	Navigation radio	√	√	√	√	√	0525
2005	Buick	Rendezvous - AWD	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	Buick	Rendezvous - AWD	Chassis	√	√	√	√	√	0506
2005	Buick	Rendezvous - FWD	Powertrain	√	√	√	√	√	
2005	Buick	Rendezvous - FWD	Disc player and video dilay	√	√	√			
2005	Buick	Rendezvous - FWD	Digital radio receiver	√	√	√	√		0516
2005	Buick	Rendezvous - FWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Buick	Rendezvous - FWD	Radio						0524
2005	Buick	Rendezvous - FWD	Heating and air conditioning		√	√	√	√	
2005	Buick	Rendezvous - FWD	Vehicle theft deterrent		√	√	√		
2005	Buick	Rendezvous - FWD	Passenger presence system		√	√			0512
2005	Buick	Rendezvous - FWD	Head up dilay		√	√	√		
2005	Buick	Rendezvous - FWD	Memory seat module		√	√	√	√	
2005	Buick	Rendezvous - FWD	Instrument panel cluster		√	√	√	√	
2005	Buick	Rendezvous - FWD	Body Control Module	√	√	√	√	√	0560 0515 0628 0614
2005	Buick	Rendezvous - FWD	Navigation radio	√	√	√	√	√	0525
2005	Buick	Rendezvous - FWD	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	Buick	Rendezvous - FWD	Chassis	√	√	√	√	√	0506
2005	Buick	Terraza	HVAC	√	√	√	√	√	0499
2005	Buick	Terraza	Brakes		√	√	√	√	0506
2005	Buick	Terraza	Engine controls		√	√	√	√	
2005	Buick	Terraza	Engine cooling		√	√	√	√	
2005	Buick	Terraza	Engine electrical	√	√	√	√	√	0499
2005	Buick	Terraza	Shift lock control	√	√	√	√	√	0499
2005	Buick	Terraza	Automatic transaxle		√	√	√	√	
2005	Buick	Terraza	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Buick	Terraza	Cruise Control		√	√	√	√	
2005	Buick	Terraza	Door	√	√	√	√	√	
2005	Buick	Terraza	Entertainment	√	√	√	√	√	0516
2005	Buick	Terraza	Horns	√	√	√	√	√	0499
2005	Buick	Terraza	Instrument panel	√	√	√	√	√	0499
2005	Buick	Terraza	Keyless entry	√	√	√	√	√	0499
2005	Buick	Terraza	Lighting systems	√	√	√	√	√	0499

2005	Buick	Terraza	Navigation System	√	√	√	√	√	0525
2005	Buick	Terraza	Seats	√	√	√	√	√	
2005	Buick	Terraza	Stationary windows	√	√	√	√	√	
2005	Buick	Terraza	Theft deterrent	√	√	√	√	√	0499
2005	Buick	Terraza	Wipers/washer systems	√	√	√	√	√	0499
2005	Buick	Terraza	Seat belts	√	√	√	√	√	0515
2005	Buick	Terraza	SIR	√	√	√	√	√	0512
2005	Buick	Terraza - 4WD	HVAC	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Brakes		√	√	√	√	0506
2005	Buick	Terraza - 4WD	Engine controls		√	√	√	√	
2005	Buick	Terraza - 4WD	Engine cooling		√	√	√	√	
2005	Buick	Terraza - 4WD	Engine electrical	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Shift lock control	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Automatic transaxle		√	√	√	√	
2005	Buick	Terraza - 4WD	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Buick	Terraza - 4WD	Cruise Control		√	√	√	√	
2005	Buick	Terraza - 4WD	Door	√	√	√	√	√	
2005	Buick	Terraza - 4WD	Entertainment	√	√	√	√	√	0516
2005	Buick	Terraza - 4WD	Horns	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Instrument panel	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Keyless entry	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Lighting systems	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Navigation System	√	√	√	√	√	0525
2005	Buick	Terraza - 4WD	Seats	√	√	√	√	√	
2005	Buick	Terraza - 4WD	Stationary windows	√	√	√	√	√	
2005	Buick	Terraza - 4WD	Theft deterrent	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Wipers/washer systems	√	√	√	√	√	0499
2005	Buick	Terraza - 4WD	Seat belts	√	√	√	√	√	0515
2005	Buick	Terraza - 4WD	SIR	√	√	√	√	√	0512
2005	Buick	Terraza Ext.	HVAC	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Brakes		√	√	√	√	0506
2005	Buick	Terraza Ext.	Engine controls		√	√	√	√	
2005	Buick	Terraza Ext.	Engine cooling		√	√	√	√	
2005	Buick	Terraza Ext.	Engine electrical	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Shift lock control	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Automatic transaxle		√	√	√	√	
2005	Buick	Terraza Ext.	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Buick	Terraza Ext.	Cruise Control		√	√	√	√	
2005	Buick	Terraza Ext.	Door	√	√	√	√	√	
2005	Buick	Terraza Ext.	Entertainment	√	√	√	√	√	0516
2005	Buick	Terraza Ext.	Horns	√	√	√	√	√	0499

2005	Buick	Terraza Ext.	Instrument panel	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Keyless entry	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Lighting systems	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Navigation System	√	√	√	√	√	0525
2005	Buick	Terraza Ext.	Seats	√	√	√	√	√	
2005	Buick	Terraza Ext.	Stationary windows	√	√	√	√	√	
2005	Buick	Terraza Ext.	Theft deterrent	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Wipers/washer systems	√	√	√	√	√	0499
2005	Buick	Terraza Ext.	Seat belts	√	√	√	√	√	0515
2005	Buick	Terraza Ext.	SIR	√	√	√	√	√	0512
2005	Cadillac	Escalade - 2WD	Powertrain	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2005	Cadillac	Escalade - 2WD	CD changer	√	√	√			
2005	Cadillac	Escalade - 2WD	Chime	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	Escalade - 2WD	Radio	√	√	√	√		
2005	Cadillac	Escalade - 2WD	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	Cadillac	Escalade - 2WD	Disc player and video dilay	√	√	√			
2005	Cadillac	Escalade - 2WD	Passenger presence system		√	√			0512
2005	Cadillac	Escalade - 2WD	Instrument panel cluster	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	Driver door module	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	Passenger door module	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	Body Control Module	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	Driver seat module	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	Heating and air conditioning	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	Rear aux. climate module	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	Rear HVAC	√	√	√	√		
2005	Cadillac	Escalade - 2WD	Rear seat audio	√	√	√	√		
2005	Cadillac	Escalade - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Cadillac	Escalade - 2WD	Generator battery control module	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	Remote function actuation	√	√	√	√	√	0631
2005	Cadillac	Escalade - 2WD	Navigation radio	√	√	√	√	√	0525
2005	Cadillac	Escalade - 2WD	Traction assist (if equipped)		√	√	√	√	
2005	Cadillac	Escalade - 2WD	ABS	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	Rear wheel steering	√	√	√	√	√	
2005	Cadillac	Escalade - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2005	Cadillac	Escalade - 2WD	Tire pressure monitor	√	√	√	√	√	0159
2005	Cadillac	Escalade - AWD	Powertrain	√	√	√	√	√	
2005	Cadillac	Escalade - AWD	Amplifier (bose)	√	√	√	√	√	0631
2005	Cadillac	Escalade - AWD	CD changer	√	√	√			
2005	Cadillac	Escalade - AWD	Chime	√	√	√	√	√	

2005	Cadillac	Escalade - AWD	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	Escalade - AWD	Radio	√	√	√	√		
2005	Cadillac	Escalade - AWD	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	Cadillac	Escalade - AWD	Disc player and video delay	√	√	√			
2005	Cadillac	Escalade - AWD	Passenger presence system		√	√			0512
2005	Cadillac	Escalade - AWD	Instrument panel cluster	√	√	√	√	√	
2005	Cadillac	Escalade - AWD	Driver door module	√	√	√	√	√	
2005	Cadillac	Escalade - AWD	Passenger door module	√	√	√	√	√	
2005	Cadillac	Escalade - AWD	Body Control Module	√	√	√	√	√	
2005	Cadillac	Escalade - AWD	Driver seat module	√	√	√	√	√	
2005	Cadillac	Escalade - AWD	Heating and air conditioning	√	√	√	√	√	
2005	Cadillac	Escalade - AWD	Rear aux. climate module	√	√	√	√	√	
2005	Cadillac	Escalade - AWD	Rear HVAC	√	√	√	√		
2005	Cadillac	Escalade - AWD	Rear seat audio	√	√	√	√		
2005	Cadillac	Escalade - AWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Cadillac	Escalade - AWD	Generator battery control module	√	√	√	√	√	
2005	Cadillac	Escalade - AWD	Remote function actuation	√	√	√	√	√	0631
2005	Cadillac	Escalade - AWD	Navigation radio	√	√	√	√	√	0525
2005	Cadillac	Escalade - AWD	Traction assist (if equipped)		√	√	√	√	
2005	Cadillac	Escalade - AWD	ABS	√	√	√	√	√	
2005	Cadillac	Escalade - AWD	Rear wheel steering	√	√	√	√	√	
2005	Cadillac	Escalade - AWD	ESC (if equipped)	√	√	√	√	√	0648
2005	Cadillac	Escalade - AWD	Tire pressure monitor	√	√	√	√	√	0159
2005	Cadillac	Escalade ESV	Powertrain	√	√	√	√	√	
2005	Cadillac	Escalade ESV	Amplifier (bose)	√	√	√	√	√	0631
2005	Cadillac	Escalade ESV	CD changer	√	√	√			
2005	Cadillac	Escalade ESV	Chime	√	√	√	√	√	
2005	Cadillac	Escalade ESV	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	Escalade ESV	Radio	√	√	√	√		
2005	Cadillac	Escalade ESV	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	Cadillac	Escalade ESV	Disc player and video delay	√	√	√			
2005	Cadillac	Escalade ESV	Passenger presence system		√	√			0512
2005	Cadillac	Escalade ESV	Instrument panel cluster	√	√	√	√	√	
2005	Cadillac	Escalade ESV	Driver door module	√	√	√	√	√	
2005	Cadillac	Escalade ESV	Passenger door module	√	√	√	√	√	
2005	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	
2005	Cadillac	Escalade ESV	Driver seat module	√	√	√	√	√	
2005	Cadillac	Escalade ESV	Heating and air conditioning	√	√	√	√	√	
2005	Cadillac	Escalade ESV	Rear aux. climate module	√	√	√	√	√	
2005	Cadillac	Escalade ESV	Rear HVAC	√	√	√	√		
2005	Cadillac	Escalade ESV	Rear seat audio	√	√	√	√		

2005	Cadillac	Escalade ESV	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Cadillac	Escalade ESV	Generator battery control module	√	√	√	√	√	
2005	Cadillac	Escalade ESV	Remote function actuation	√	√	√	√	√	0631
2005	Cadillac	Escalade ESV	Navigation radio	√	√	√	√	√	0525
2005	Cadillac	Escalade ESV	Traction assist (if equipped)		√	√	√	√	
2005	Cadillac	Escalade ESV	ABS	√	√	√	√	√	
2005	Cadillac	Escalade ESV	Rear wheel steering	√	√	√	√	√	
2005	Cadillac	Escalade ESV	ESC (if equipped)	√	√	√	√	√	0648
2005	Cadillac	Escalade ESV	Tire pressure monitor	√	√	√	√	√	0159
2005	Cadillac	Escalade EXT	Powertrain	√	√	√	√	√	
2005	Cadillac	Escalade EXT	Amplifier (bose)	√	√	√	√	√	0631
2005	Cadillac	Escalade EXT	CD changer	√	√	√			
2005	Cadillac	Escalade EXT	Chime	√	√	√	√	√	
2005	Cadillac	Escalade EXT	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	Escalade EXT	Radio	√	√	√	√		
2005	Cadillac	Escalade EXT	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	Cadillac	Escalade EXT	Disc player and video dilay	√	√	√			
2005	Cadillac	Escalade EXT	Passenger presence system		√	√			0512
2005	Cadillac	Escalade EXT	Instrument panel cluster	√	√	√	√	√	
2005	Cadillac	Escalade EXT	Driver door module	√	√	√	√	√	
2005	Cadillac	Escalade EXT	Passenger door module	√	√	√	√	√	
2005	Cadillac	Escalade EXT	Body Control Module	√	√	√	√	√	
2005	Cadillac	Escalade EXT	Driver seat module	√	√	√	√	√	
2005	Cadillac	Escalade EXT	Heating and air conditioning	√	√	√	√	√	
2005	Cadillac	Escalade EXT	Rear aux. climate module	√	√	√	√	√	
2005	Cadillac	Escalade EXT	Rear HVAC	√	√	√	√		
2005	Cadillac	Escalade EXT	Rear seat audio	√	√	√	√		
2005	Cadillac	Escalade EXT	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Cadillac	Escalade EXT	Generator battery control module	√	√	√	√	√	
2005	Cadillac	Escalade EXT	Remote function actuation	√	√	√	√	√	0631
2005	Cadillac	Escalade EXT	Navigation radio	√	√	√	√	√	0525
2005	Cadillac	Escalade EXT	Traction assist (if equipped)		√	√	√	√	
2005	Cadillac	Escalade EXT	ABS	√	√	√	√	√	
2005	Cadillac	Escalade EXT	Rear wheel steering	√	√	√	√	√	
2005	Cadillac	Escalade EXT	ESC (if equipped)	√	√	√	√	√	0648
2005	Cadillac	Escalade EXT	Tire pressure monitor	√	√	√	√	√	0159
2005	Cadillac	SRX	Powertrain	√	√	√	√	√	0493
2005	Cadillac	SRX	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2005	Cadillac	SRX	Disc player and video dilay	√	√	√			
2005	Cadillac	SRX	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	SRX	Vehicle comm. interface module	√	√	√	√	√	0647 0585

2005	Cadillac	SRX	Radio	√	√	√	√		0649 0650 0651 0586 0587 0652 0653 0654 0655 0608 0525 0525
2005	Cadillac	SRX	TV antenna module	√	√	√	√	√	
2005	Cadillac	SRX	Amplifier (delco)	√	√	√	√	√	
2005	Cadillac	SRX	Amplifier (bose)	√	√	√	√	√	
2005	Cadillac	SRX	CD changer	√					
2005	Cadillac	SRX	Driver door module	√	√	√	√	√	0609 0609 0609 0609
2005	Cadillac	SRX	Driver door switch	√	√	√	√		
2005	Cadillac	SRX	Left rear door module	√	√	√	√	√	
2005	Cadillac	SRX	Passenger door module	√	√	√	√	√	0608
2005	Cadillac	SRX	Right rear door module	√	√	√	√	√	
2005	Cadillac	SRX	Dash integration module	√	√	√	√	√	0614 0615 0616 0618 0619 0610 0620 0611 0621 0612 0622 0623 0624 0625 0626 0627
2005	Cadillac	SRX	Personalization	√	√	√	√	√	
2005	Cadillac	SRX	Remote function actuation	√	√	√	√	√	
2005	Cadillac	SRX	Vehicle theft deterrent	√	√	√	√		
2005	Cadillac	SRX	Memory seat module	√	√	√	√	√	
2005	Cadillac	SRX	Rear seat module	√	√	√	√	√	
2005	Cadillac	SRX	Instrument panel cluster	√	√	√	√	√	
2005	Cadillac	SRX	Climate control panel	√	√	√	√	√	0604 0605
2005	Cadillac	SRX	Tire pressure monitor		√	√	√	√	0629
2005	Cadillac	SRX	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2005	Cadillac	SRX	Electronic suspension control	√	√	√	√	√	
2005	Cadillac	Hearse	Powertrain	√	√	√	√	√	
2005	Cadillac	Hearse	Driver door module	√	√	√	√	√	
2005	Cadillac	Hearse	Driver door switch	√	√	√	√		
2005	Cadillac	Hearse	Passenger door module	√	√	√	√	√	
2005	Cadillac	Hearse	Rear integration module				√		
2005	Cadillac	Hearse	Dash integration module		√	√	√	√	0614 0615 0619 0628
2005	Cadillac	Hearse	Remote function actuation	√	√	√	√	√	
2005	Cadillac	Hearse	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	Hearse	Vehicle theft deterrent		√	√	√		
2005	Cadillac	Hearse	Amplifier (delco)	√	√	√	√	√	0671 0578 0579 0525
2005	Cadillac	Hearse	Instrument panel module		√	√	√	√	0630 0667
2005	Cadillac	Hearse	Instrument panel cluster		√	√	√	√	0651 0650 0673 0586
2005	Cadillac	Hearse	Tire pressure monitor		√	√	√		0159 0680 0681
2005	Cadillac	Hearse	DRP/ABS/TCS		√	√	√	√	
2005	Cadillac	Limousine	Powertrain	√	√	√	√	√	
2005	Cadillac	Limousine	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585



2005	Cadillac	Limousine	Driver door module	√	√	√	√	√	
2005	Cadillac	Limousine	Driver door switch	√	√	√	√		
2005	Cadillac	Limousine	Left mid door module	√	√	√	√	√	
2005	Cadillac	Limousine	Left rear door module	√	√	√	√	√	
2005	Cadillac	Limousine	Passenger door module	√	√	√	√	√	
2005	Cadillac	Limousine	Right mid door module	√	√	√	√	√	
2005	Cadillac	Limousine	Right rear door module	√	√	√	√	√	
2005	Cadillac	Limousine	Rear integration module				√	√	
2005	Cadillac	Limousine	Dash integration module		√	√	√	√	0614 0615 0619 0628
2005	Cadillac	Limousine	Remote function actuation	√	√	√	√	√	
2005	Cadillac	Limousine	Digital radio receiver	√	√	√	√		0516
2005	Cadillac	Limousine	Vehicle theft deterrent		√	√	√		
2005	Cadillac	Limousine	Amplifier (delco)		√	√	√		
2005	Cadillac	Limousine	Navigation radio	√	√	√	√	√	0658
2005	Cadillac	Limousine	Rear climate control panel		√	√	√	√	
2005	Cadillac	Limousine	Instrument panel module		√	√	√	√	0630 0667
2005	Cadillac	Limousine	Instrument panel cluster		√	√	√	√	0651 0650 0673 0586
2005	Cadillac	Limousine	Tire pressure monitor		√	√	√		0159 0680 0681
2005	Cadillac	Limousine	DRP/ABS/TCS		√	√	√	√	
2005	Chevrolet	Astro - 2WD	Powertrain	√	√	√	√	√	0638
2005	Chevrolet	Astro - 2WD	Instrument panel cluster		√	√	√	√	
2005	Chevrolet	Astro - 2WD	Body Control Module		√	√	√	√	
2005	Chevrolet	Astro - 2WD	Supplemental inflatable restraint	√	√	√	√		
2005	Chevrolet	Astro - 2WD	4WAL 3 sensor		√	√	√	√	
2005	Chevrolet	Astro - 2WD	Powertrain	√	√	√	√	√	0638
2005	Chevrolet	Astro - 2WD	Instrument panel cluster		√	√	√	√	
2005	Chevrolet	Astro - 2WD	Body Control Module		√	√	√	√	
2005	Chevrolet	Astro - 2WD	Supplemental inflatable restraint	√	√	√	√		
2005	Chevrolet	Astro - 2WD	4WAL 3 sensor		√	√	√	√	
2005	Chevrolet	Astro - 4WD	Powertrain	√	√	√	√	√	0638
2005	Chevrolet	Astro - 4WD	Instrument panel cluster		√	√	√	√	
2005	Chevrolet	Astro - 4WD	Body Control Module		√	√	√	√	
2005	Chevrolet	Astro - 4WD	Supplemental inflatable restraint	√	√	√	√		
2005	Chevrolet	Astro - 4WD	4WAL 3 sensor		√	√	√	√	
2005	Chevrolet	Astro - 4WD	Powertrain	√	√	√	√	√	0638
2005	Chevrolet	Astro - 4WD	Instrument panel cluster		√	√	√	√	
2005	Chevrolet	Astro - 4WD	Body Control Module		√	√	√	√	
2005	Chevrolet	Astro - 4WD	Supplemental inflatable restraint	√	√	√	√		
2005	Chevrolet	Astro - 4WD	4WAL 3 sensor		√	√	√	√	
2005	Chevrolet	Avalanche - 2WD	Powertrain	√	√	√	√	√	0661
2005	Chevrolet	Avalanche - 2WD	Amplifier (bose)	√	√	√	√	√	0631

2005	Chevrolet	Avalanche - 2WD	CD changer	√	√	√			
2005	Chevrolet	Avalanche - 2WD	Chime	√	√	√	√	√	
2005	Chevrolet	Avalanche - 2WD	Digital radio receiver	√	√	√	√		0516
2005	Chevrolet	Avalanche - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	Avalanche - 2WD	Radio	√	√	√	√		
2005	Chevrolet	Avalanche - 2WD	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	Chevrolet	Avalanche - 2WD	Disc player and video delay	√	√	√			
2005	Chevrolet	Avalanche - 2WD	Passenger presence system		√	√			0512
2005	Chevrolet	Avalanche - 2WD	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	Avalanche - 2WD	Driver door module	√	√	√	√	√	
2005	Chevrolet	Avalanche - 2WD	Passenger door module	√	√	√	√	√	
2005	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	
2005	Chevrolet	Avalanche - 2WD	Driver seat module	√	√	√	√	√	
2005	Chevrolet	Avalanche - 2WD	Heating and air conditioning	√	√	√	√	√	
2005	Chevrolet	Avalanche - 2WD	Rear aux. climate module	√	√	√	√	√	
2005	Chevrolet	Avalanche - 2WD	Rear HVAC	√	√	√	√		
2005	Chevrolet	Avalanche - 2WD	Rear seat audio	√	√	√	√		
2005	Chevrolet	Avalanche - 2WD	Generator battery control module	√	√	√	√	√	
2005	Chevrolet	Avalanche - 2WD	Vehicle theft deterrent	√	√	√	√	√	0631
2005	Chevrolet	Avalanche - 2WD	Navigation radio	√	√	√	√	√	0525
2005	Chevrolet	Avalanche - 2WD	Traction assist (if equipped)		√	√	√	√	
2005	Chevrolet	Avalanche - 2WD	ABS	√	√	√	√	√	
2005	Chevrolet	Avalanche - 2WD	Rear wheel steering	√	√	√	√	√	
2005	Chevrolet	Avalanche - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2005	Chevrolet	Avalanche - 2WD	Tire pressure monitor	√	√	√	√	√	0159
2005	Chevrolet	Avalanche - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2005	Chevrolet	Avalanche - 4WD	Powertrain	√	√	√	√	√	0661
2005	Chevrolet	Avalanche - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2005	Chevrolet	Avalanche - 4WD	CD changer	√	√	√			
2005	Chevrolet	Avalanche - 4WD	Chime	√	√	√	√	√	
2005	Chevrolet	Avalanche - 4WD	Digital radio receiver	√	√	√	√		0516
2005	Chevrolet	Avalanche - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	Avalanche - 4WD	Radio	√	√	√	√		
2005	Chevrolet	Avalanche - 4WD	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	Chevrolet	Avalanche - 4WD	Disc player and video delay	√	√	√			
2005	Chevrolet	Avalanche - 4WD	Passenger presence system		√	√			0512
2005	Chevrolet	Avalanche - 4WD	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	Avalanche - 4WD	Driver door module	√	√	√	√	√	
2005	Chevrolet	Avalanche - 4WD	Passenger door module	√	√	√	√	√	
2005	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	
2005	Chevrolet	Avalanche - 4WD	Driver seat module	√	√	√	√	√	

2005	Chevrolet	Avalanche - 4WD	Heating and air conditioning	√	√	√	√	√	
2005	Chevrolet	Avalanche - 4WD	Rear aux. climate module	√	√	√	√	√	
2005	Chevrolet	Avalanche - 4WD	Rear HVAC	√	√	√	√		
2005	Chevrolet	Avalanche - 4WD	Rear seat audio	√	√	√	√		
2005	Chevrolet	Avalanche - 4WD	Generator battery control module	√	√	√	√	√	
2005	Chevrolet	Avalanche - 4WD	Vehicle theft deterrent	√	√	√	√	√	0631
2005	Chevrolet	Avalanche - 4WD	Navigation radio	√	√	√	√	√	0525
2005	Chevrolet	Avalanche - 4WD	Traction assist (if equipped)		√	√	√	√	
2005	Chevrolet	Avalanche - 4WD	ABS	√	√	√	√	√	
2005	Chevrolet	Avalanche - 4WD	Rear wheel steering	√	√	√	√	√	
2005	Chevrolet	Avalanche - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2005	Chevrolet	Avalanche - 4WD	Tire pressure monitor	√	√	√	√	√	0159
2005	Chevrolet	Avalanche - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2005	Chevrolet	Blazer - 2WD	Powertrain	√	√	√	√	√	0638
2005	Chevrolet	Blazer - 2WD	Radio	√	√	√	√		
2005	Chevrolet	Blazer - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2005	Chevrolet	Blazer - 2WD	Instrument panel cluster		√	√	√	√	
2005	Chevrolet	Blazer - 2WD	Body Control Module		√	√	√	√	
2005	Chevrolet	Blazer - 2WD	Heating and air conditioning	√	√	√	√	√	
2005	Chevrolet	Blazer - 2WD	Memory seat module	√	√	√	√	√	0531
2005	Chevrolet	Blazer - 2WD	Traction assist (if equipped)		√	√	√	√	
2005	Chevrolet	Blazer - 2WD	4WAL 3 sensor	√	√	√	√	√	0638
2005	Chevrolet	Blazer - 2WD	Powertrain	√	√	√	√	√	0638
2005	Chevrolet	Blazer - 2WD	Radio	√	√	√	√		
2005	Chevrolet	Blazer - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2005	Chevrolet	Blazer - 2WD	Instrument panel cluster		√	√	√	√	
2005	Chevrolet	Blazer - 2WD	Body Control Module		√	√	√	√	
2005	Chevrolet	Blazer - 2WD	Heating and air conditioning	√	√	√	√	√	
2005	Chevrolet	Blazer - 2WD	Memory seat module	√	√	√	√	√	0531
2005	Chevrolet	Blazer - 2WD	Traction assist (if equipped)		√	√	√	√	
2005	Chevrolet	Blazer - 2WD	4WAL 3 sensor	√	√	√	√	√	0638
2005	Chevrolet	Blazer - 4WD	Powertrain	√	√	√	√	√	0638
2005	Chevrolet	Blazer - 4WD	Radio	√	√	√	√		
2005	Chevrolet	Blazer - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2005	Chevrolet	Blazer - 4WD	Instrument panel cluster		√	√	√	√	
2005	Chevrolet	Blazer - 4WD	Body Control Module		√	√	√	√	
2005	Chevrolet	Blazer - 4WD	Heating and air conditioning	√	√	√	√	√	
2005	Chevrolet	Blazer - 4WD	Memory seat module	√	√	√	√	√	0531
2005	Chevrolet	Blazer - 4WD	Traction assist (if equipped)		√	√	√	√	
2005	Chevrolet	Blazer - 4WD	4WAL 3 sensor	√	√	√	√	√	0638
2005	Chevrolet	Blazer - 4WD	Powertrain	√	√	√	√	√	0638

2005	Chevrolet	Blazer - 4WD	Radio	√	√	√	√		
2005	Chevrolet	Blazer - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2005	Chevrolet	Blazer - 4WD	Instrument panel cluster		√	√	√	√	
2005	Chevrolet	Blazer - 4WD	Body Control Module		√	√	√	√	
2005	Chevrolet	Blazer - 4WD	Heating and air conditioning	√	√	√	√	√	
2005	Chevrolet	Blazer - 4WD	Memory seat module	√	√	√	√	√	0531
2005	Chevrolet	Blazer - 4WD	Traction assist (if equipped)		√	√	√	√	
2005	Chevrolet	Blazer - 4WD	4WAL 3 sensor	√	√	√	√	√	0638
2005	Chevrolet	C Cab/Chassis HD (GMT	Powertrain	√	√	√	√	√	0661
2005	Chevrolet	C Cab/Chassis HD (GMT	Amplifier (bose)	√	√	√	√	√	0631
2005	Chevrolet	C Cab/Chassis HD (GMT	CD changer	√	√	√			
2005	Chevrolet	C Cab/Chassis HD (GMT	Chime	√	√	√	√	√	
2005	Chevrolet	C Cab/Chassis HD (GMT	Digital radio receiver	√	√	√	√		0516
2005	Chevrolet	C Cab/Chassis HD (GMT	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	C Cab/Chassis HD (GMT	Radio	√	√	√	√		
2005	Chevrolet	C Cab/Chassis HD (GMT	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	Chevrolet	C Cab/Chassis HD (GMT	Disc player and video dilay	√	√	√			
2005	Chevrolet	C Cab/Chassis HD (GMT	Passenger presence system		√	√			0512
2005	Chevrolet	C Cab/Chassis HD (GMT	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	C Cab/Chassis HD (GMT	Driver door module	√	√	√	√	√	
2005	Chevrolet	C Cab/Chassis HD (GMT	Passenger door module	√	√	√	√	√	
2005	Chevrolet	C Cab/Chassis HD (GMT	Body Control Module	√	√	√	√	√	
2005	Chevrolet	C Cab/Chassis HD (GMT	Driver seat module	√	√	√	√	√	
2005	Chevrolet	C Cab/Chassis HD (GMT	Heating and air conditioning	√	√	√	√	√	
2005	Chevrolet	C Cab/Chassis HD (GMT	Rear aux. climate module	√	√	√	√	√	
2005	Chevrolet	C Cab/Chassis HD (GMT	Rear HVAC	√	√	√	√		
2005	Chevrolet	C Cab/Chassis HD (GMT	Rear seat audio	√	√	√	√		
2005	Chevrolet	C Cab/Chassis HD (GMT	Generator battery control module	√	√	√	√	√	
2005	Chevrolet	C Cab/Chassis HD (GMT	Vehicle theft deterrent	√	√	√	√	√	0631
2005	Chevrolet	C Cab/Chassis HD (GMT	Navigation radio	√	√	√	√	√	0525
2005	Chevrolet	C Cab/Chassis HD (GMT	Traction assist (if equipped)		√	√	√	√	
2005	Chevrolet	C Cab/Chassis HD (GMT	ABS	√	√	√	√	√	
2005	Chevrolet	C Cab/Chassis HD (GMT	Rear wheel steering	√	√	√	√	√	
2005	Chevrolet	C Cab/Chassis HD (GMT	ESC (if equipped)	√	√	√	√	√	0648
2005	Chevrolet	C Cab/Chassis HD (GMT	Tire pressure monitor	√	√	√	√	√	0159
2005	Chevrolet	C Cab/Chassis HD (GMT	EHPS (parallel hybrid)	√	√	√	√	√	0648
2005	Chevrolet	C Silverado - 2WD	Powertrain	√	√	√	√	√	0638
2005	Chevrolet	C Silverado - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2005	Chevrolet	C Silverado - 2WD	CD changer	√	√	√			
2005	Chevrolet	C Silverado - 2WD	Chime	√	√	√	√	√	
2005	Chevrolet	C Silverado - 2WD	Digital radio receiver	√	√	√	√		0516

2005	Chevrolet	C Silverado - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	C Silverado - 2WD	Radio	√	√	√	√		
2005	Chevrolet	C Silverado - 2WD	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	Chevrolet	C Silverado - 2WD	Disc player and video delay	√	√	√			
2005	Chevrolet	C Silverado - 2WD	Passenger presence system		√	√			0512
2005	Chevrolet	C Silverado - 2WD	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	C Silverado - 2WD	Driver door module	√	√	√	√	√	
2005	Chevrolet	C Silverado - 2WD	Passenger door module	√	√	√	√	√	
2005	Chevrolet	C Silverado - 2WD	Body Control Module	√	√	√	√	√	
2005	Chevrolet	C Silverado - 2WD	Driver seat module	√	√	√	√	√	
2005	Chevrolet	C Silverado - 2WD	Heating and air conditioning	√	√	√	√	√	
2005	Chevrolet	C Silverado - 2WD	Rear aux. climate module	√	√	√	√	√	
2005	Chevrolet	C Silverado - 2WD	Rear HVAC	√	√	√	√		
2005	Chevrolet	C Silverado - 2WD	Rear seat audio	√	√	√	√		
2005	Chevrolet	C Silverado - 2WD	Generator battery control module	√	√	√	√	√	
2005	Chevrolet	C Silverado - 2WD	Vehicle theft deterrent	√	√	√	√	√	0631
2005	Chevrolet	C Silverado - 2WD	Navigation radio	√	√	√	√	√	0525
2005	Chevrolet	C Silverado - 2WD	Traction assist (if equipped)		√	√	√	√	
2005	Chevrolet	C Silverado - 2WD	ABS	√	√	√	√	√	
2005	Chevrolet	C Silverado - 2WD	Rear wheel steering	√	√	√	√	√	
2005	Chevrolet	C Silverado - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2005	Chevrolet	C Silverado - 2WD	Tire pressure monitor	√	√	√	√	√	0159
2005	Chevrolet	C Silverado - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2005	Chevrolet	C Silverado - 2WD (CNG)	Powertrain	√	√	√	√	√	
2005	Chevrolet	C Silverado - 2WD (CNG)	Amplifier (bose)	√	√	√	√	√	0631
2005	Chevrolet	C Silverado - 2WD (CNG)	CD changer	√	√	√			
2005	Chevrolet	C Silverado - 2WD (CNG)	Chime	√	√	√	√	√	
2005	Chevrolet	C Silverado - 2WD (CNG)	Digital radio receiver	√	√	√	√		0516
2005	Chevrolet	C Silverado - 2WD (CNG)	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	C Silverado - 2WD (CNG)	Radio	√	√	√	√		
2005	Chevrolet	C Silverado - 2WD (CNG)	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	Chevrolet	C Silverado - 2WD (CNG)	Disc player and video delay	√	√	√			
2005	Chevrolet	C Silverado - 2WD (CNG)	Passenger presence system		√	√			0512
2005	Chevrolet	C Silverado - 2WD (CNG)	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	C Silverado - 2WD (CNG)	Driver door module	√	√	√	√	√	
2005	Chevrolet	C Silverado - 2WD (CNG)	Passenger door module	√	√	√	√	√	
2005	Chevrolet	C Silverado - 2WD (CNG)	Body Control Module	√	√	√	√	√	
2005	Chevrolet	C Silverado - 2WD (CNG)	Driver seat module	√	√	√	√	√	
2005	Chevrolet	C Silverado - 2WD (CNG)	Heating and air conditioning	√	√	√	√	√	
2005	Chevrolet	C Silverado - 2WD (CNG)	Rear aux. climate module	√	√	√	√	√	
2005	Chevrolet	C Silverado - 2WD (CNG)	Rear HVAC	√	√	√	√		

2005	Chevrolet	C Silverado - 2WD (CNG)	Rear seat audio	√	√	√	√		
2005	Chevrolet	C Silverado - 2WD (CNG)	Generator battery control module	√	√	√	√	√	
2005	Chevrolet	C Silverado - 2WD (CNG)	Vehicle theft deterrent	√	√	√	√	√	0631
2005	Chevrolet	C Silverado - 2WD (CNG)	Navigation radio	√	√	√	√	√	0525
2005	Chevrolet	C Silverado - 2WD (CNG)	Traction assist (if equipped)		√	√	√	√	
2005	Chevrolet	C Silverado - 2WD (CNG)	ABS	√	√	√	√	√	
2005	Chevrolet	C Silverado - 2WD (CNG)	Rear wheel steering	√	√	√	√	√	
2005	Chevrolet	C Silverado - 2WD (CNG)	ESC (if equipped)	√	√	√	√	√	0648
2005	Chevrolet	C Silverado - 2WD (CNG)	Tire pressure monitor	√	√	√	√	√	0159
2005	Chevrolet	C Silverado - 2WD (CNG)	EHPS (parallel hybrid)	√	√	√	√	√	0648
2005	Chevrolet	Colorado Pickup - 2WD	Powertrain	√	√	√	√	√	
2005	Chevrolet	Colorado Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2005	Chevrolet	Colorado Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	Colorado Pickup - 2WD	Radio	√	√	√	√		
2005	Chevrolet	Colorado Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	Colorado Pickup - 2WD	Body Control Module	√	√	√	√	√	0550
2005	Chevrolet	Colorado Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	Chevrolet	Colorado Pickup - 2WD	ABS	√	√	√	√	√	0516
2005	Chevrolet	Colorado Pickup - 2WD	Powertrain	√	√	√	√	√	
2005	Chevrolet	Colorado Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2005	Chevrolet	Colorado Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	Colorado Pickup - 2WD	Radio	√	√	√	√		
2005	Chevrolet	Colorado Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	Colorado Pickup - 2WD	Body Control Module	√	√	√	√	√	0550
2005	Chevrolet	Colorado Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	Chevrolet	Colorado Pickup - 2WD	ABS	√	√	√	√	√	0516
2005	Chevrolet	Colorado Pickup - 4WD	Powertrain	√	√	√	√	√	
2005	Chevrolet	Colorado Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2005	Chevrolet	Colorado Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	Colorado Pickup - 4WD	Radio	√	√	√	√		
2005	Chevrolet	Colorado Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	Colorado Pickup - 4WD	Body Control Module	√	√	√	√	√	0550
2005	Chevrolet	Colorado Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	Chevrolet	Colorado Pickup - 4WD	ABS	√	√	√	√	√	0516
2005	Chevrolet	Colorado Pickup - 4WD	Powertrain	√	√	√	√	√	
2005	Chevrolet	Colorado Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2005	Chevrolet	Colorado Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	Colorado Pickup - 4WD	Radio	√	√	√	√		
2005	Chevrolet	Colorado Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	Colorado Pickup - 4WD	Body Control Module	√	√	√	√	√	0550
2005	Chevrolet	Colorado Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515

2005	Chevrolet	Colorado Pickup - 4WD	ABS	√	√	√	√	√	0516
2005	Chevrolet	Equinox	Powertrain	√	√	√	√	√	0493
2005	Chevrolet	Equinox	Instrument panel cluster	√				√	
2005	Chevrolet	Equinox	Supplemental inflatable restraint	√	√	√	√		
2005	Chevrolet	Equinox	Body Control Module	√	√	√	√	√	0633 0640 0634 0635
2005	Chevrolet	Equinox	Radio	√	√	√	√	√	0573 0578 0579 0572 0552 0525
2005	Chevrolet	Equinox	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2005	Chevrolet	Equinox	Digital radio receiver	√	√	√	√		0516
2005	Chevrolet	Equinox	Electric power steering		√	√	√	√	
2005	Chevrolet	Equinox	Antilock Braking System	√	√	√	√	√	0506
2005	Chevrolet	Express	Powertrain	√	√	√	√	√	0638
2005	Chevrolet	Express	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	Express	Radio	√	√	√	√		
2005	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√		0531
2005	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	Express	Body Control Module	√	√	√	√	√	
2005	Chevrolet	Express	Remote function actuation	√	√	√	√	√	
2005	Chevrolet	Express	Multifunction alarm module	√	√	√	√	√	0602
2005	Chevrolet	Express	ABS	√	√	√	√	√	
2005	Chevrolet	Express	Powertrain	√	√	√	√	√	0638
2005	Chevrolet	Express	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	Express	Radio	√	√	√	√		
2005	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√		0531
2005	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	Express	Body Control Module	√	√	√	√	√	
2005	Chevrolet	Express	Remote function actuation	√	√	√	√	√	
2005	Chevrolet	Express	Multifunction alarm module	√	√	√	√	√	0602
2005	Chevrolet	Express	ABS	√	√	√	√	√	
2005	Chevrolet	Express	Powertrain	√	√	√	√	√	
2005	Chevrolet	Express	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	Express	Radio	√	√	√	√		
2005	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√		0531
2005	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	Express	Body Control Module	√	√	√	√	√	
2005	Chevrolet	Express	Remote function actuation	√	√	√	√	√	
2005	Chevrolet	Express	Multifunction alarm module	√	√	√	√	√	0602
2005	Chevrolet	Express	ABS	√	√	√	√	√	
2005	Chevrolet	Express	Powertrain	√	√	√	√	√	
2005	Chevrolet	Express	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	Express	Radio	√	√	√	√		

2005	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√		0531
2005	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	Express	Body Control Module	√	√	√	√	√	
2005	Chevrolet	Express	Remote function actuation	√	√	√	√	√	
2005	Chevrolet	Express	Multifunction alarm module	√	√	√	√	√	0602
2005	Chevrolet	Express	ABS	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD	Powertrain	√	√	√	√	√	0638
2005	Chevrolet	K Silverado - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2005	Chevrolet	K Silverado - 4WD	CD changer	√	√	√			
2005	Chevrolet	K Silverado - 4WD	Chime	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD	Digital radio receiver	√	√	√	√		0516
2005	Chevrolet	K Silverado - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	K Silverado - 4WD	Radio	√	√	√	√		
2005	Chevrolet	K Silverado - 4WD	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	Chevrolet	K Silverado - 4WD	Disc player and video dilay	√	√	√			
2005	Chevrolet	K Silverado - 4WD	Passenger presence system		√	√			0512
2005	Chevrolet	K Silverado - 4WD	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD	Driver door module	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD	Passenger door module	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD	Body Control Module	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD	Driver seat module	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD	Heating and air conditioning	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD	Rear aux. climate module	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD	Rear HVAC	√	√	√	√		
2005	Chevrolet	K Silverado - 4WD	Rear seat audio	√	√	√	√		
2005	Chevrolet	K Silverado - 4WD	Generator battery control module	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD	Vehicle theft deterrent	√	√	√	√	√	0631
2005	Chevrolet	K Silverado - 4WD	Navigation radio	√	√	√	√	√	0525
2005	Chevrolet	K Silverado - 4WD	Traction assist (if equipped)		√	√	√	√	
2005	Chevrolet	K Silverado - 4WD	ABS	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD	Rear wheel steering	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2005	Chevrolet	K Silverado - 4WD	Tire pressure monitor	√	√	√	√	√	0159
2005	Chevrolet	K Silverado - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2005	Chevrolet	K Silverado - 4WD (CNG)	Powertrain	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD (CNG)	Amplifier (bose)	√	√	√	√	√	0631
2005	Chevrolet	K Silverado - 4WD (CNG)	CD changer	√	√	√			
2005	Chevrolet	K Silverado - 4WD (CNG)	Chime	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD (CNG)	Digital radio receiver	√	√	√	√		0516
2005	Chevrolet	K Silverado - 4WD (CNG)	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	K Silverado - 4WD (CNG)	Radio	√	√	√	√		



2005	Chevrolet	K Silverado - 4WD (CNG)	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	Chevrolet	K Silverado - 4WD (CNG)	Disc player and video dilay	√	√	√			
2005	Chevrolet	K Silverado - 4WD (CNG)	Passenger presence system		√	√			0512
2005	Chevrolet	K Silverado - 4WD (CNG)	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD (CNG)	Driver door module	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD (CNG)	Passenger door module	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD (CNG)	Body Control Module	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD (CNG)	Driver seat module	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD (CNG)	Heating and air conditioning	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD (CNG)	Rear aux. climate module	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD (CNG)	Rear HVAC	√	√	√	√		
2005	Chevrolet	K Silverado - 4WD (CNG)	Rear seat audio	√	√	√	√		
2005	Chevrolet	K Silverado - 4WD (CNG)	Generator battery control module	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD (CNG)	Vehicle theft deterrent	√	√	√	√	√	0631
2005	Chevrolet	K Silverado - 4WD (CNG)	Navigation radio	√	√	√	√	√	0525
2005	Chevrolet	K Silverado - 4WD (CNG)	Traction assist (if equipped)		√	√	√	√	
2005	Chevrolet	K Silverado - 4WD (CNG)	ABS	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD (CNG)	Rear wheel steering	√	√	√	√	√	
2005	Chevrolet	K Silverado - 4WD (CNG)	ESC (if equipped)	√	√	√	√	√	0648
2005	Chevrolet	K Silverado - 4WD (CNG)	Tire pressure monitor	√	√	√	√	√	0159
2005	Chevrolet	K Silverado - 4WD (CNG)	EHPS (parallel hybrid)	√	√	√	√	√	0648
2005	Chevrolet	SSR	Powertrain	√	√	√	√	√	0493
2005	Chevrolet	SSR	Radio	√	√	√	√		
2005	Chevrolet	SSR	Supplemental inflatable restraint	√	√	√	√		0531
2005	Chevrolet	SSR	Roof and door module	√	√	√	√	√	
2005	Chevrolet	SSR	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	SSR	Body Control Module	√	√	√	√	√	
2005	Chevrolet	SSR	Driver seat module	√	√	√	√	√	
2005	Chevrolet	SSR	Remote function actuation	√	√	√	√	√	
2005	Chevrolet	SSR	Amplifier (bose)	√	√	√	√	√	
2005	Chevrolet	SSR	Traction assist (if equipped)		√	√	√	√	
2005	Chevrolet	SSR	4WAL 3 sensor		√	√	√	√	
2005	Chevrolet	Suburban - 2WD	Powertrain	√	√	√	√	√	0661
2005	Chevrolet	Suburban - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2005	Chevrolet	Suburban - 2WD	CD changer	√	√	√			
2005	Chevrolet	Suburban - 2WD	Chime	√	√	√	√	√	
2005	Chevrolet	Suburban - 2WD	Digital radio receiver	√	√	√	√		0516
2005	Chevrolet	Suburban - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	Suburban - 2WD	Radio	√	√	√	√		
2005	Chevrolet	Suburban - 2WD	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	Chevrolet	Suburban - 2WD	Disc player and video dilay	√	√	√			

2005	Chevrolet	Suburban - 2WD	Passenger presence system		√	√			0512
2005	Chevrolet	Suburban - 2WD	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	Suburban - 2WD	Driver door module	√	√	√	√	√	
2005	Chevrolet	Suburban - 2WD	Passenger door module	√	√	√	√	√	
2005	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	
2005	Chevrolet	Suburban - 2WD	Driver seat module	√	√	√	√	√	
2005	Chevrolet	Suburban - 2WD	Heating and air conditioning	√	√	√	√	√	
2005	Chevrolet	Suburban - 2WD	Rear aux. climate module	√	√	√	√	√	
2005	Chevrolet	Suburban - 2WD	Rear HVAC	√	√	√	√		
2005	Chevrolet	Suburban - 2WD	Rear seat audio	√	√	√	√		
2005	Chevrolet	Suburban - 2WD	Generator battery control module	√	√	√	√	√	
2005	Chevrolet	Suburban - 2WD	Vehicle theft deterrent	√	√	√	√	√	0631
2005	Chevrolet	Suburban - 2WD	Navigation radio	√	√	√	√	√	0525
2005	Chevrolet	Suburban - 2WD	Traction assist (if equipped)		√	√	√	√	
2005	Chevrolet	Suburban - 2WD	ABS	√	√	√	√	√	
2005	Chevrolet	Suburban - 2WD	Rear wheel steering	√	√	√	√	√	
2005	Chevrolet	Suburban - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2005	Chevrolet	Suburban - 2WD	Tire pressure monitor	√	√	√	√	√	0159
2005	Chevrolet	Suburban - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2005	Chevrolet	Suburban - 4WD	Powertrain	√	√	√	√	√	0661
2005	Chevrolet	Suburban - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2005	Chevrolet	Suburban - 4WD	CD changer	√	√	√			
2005	Chevrolet	Suburban - 4WD	Chime	√	√	√	√	√	
2005	Chevrolet	Suburban - 4WD	Digital radio receiver	√	√	√	√		0516
2005	Chevrolet	Suburban - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	Suburban - 4WD	Radio	√	√	√	√		
2005	Chevrolet	Suburban - 4WD	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	Chevrolet	Suburban - 4WD	Disc player and video dilay	√	√	√			
2005	Chevrolet	Suburban - 4WD	Passenger presence system		√	√			0512
2005	Chevrolet	Suburban - 4WD	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	Suburban - 4WD	Driver door module	√	√	√	√	√	
2005	Chevrolet	Suburban - 4WD	Passenger door module	√	√	√	√	√	
2005	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	
2005	Chevrolet	Suburban - 4WD	Driver seat module	√	√	√	√	√	
2005	Chevrolet	Suburban - 4WD	Heating and air conditioning	√	√	√	√	√	
2005	Chevrolet	Suburban - 4WD	Rear aux. climate module	√	√	√	√	√	
2005	Chevrolet	Suburban - 4WD	Rear HVAC	√	√	√	√		
2005	Chevrolet	Suburban - 4WD	Rear seat audio	√	√	√	√		
2005	Chevrolet	Suburban - 4WD	Generator battery control module	√	√	√	√	√	
2005	Chevrolet	Suburban - 4WD	Vehicle theft deterrent	√	√	√	√	√	0631
2005	Chevrolet	Suburban - 4WD	Navigation radio	√	√	√	√	√	0525

2005	Chevrolet	Suburban - 4WD	Traction assist (if equipped)		√	√	√	√	
2005	Chevrolet	Suburban - 4WD	ABS	√	√	√	√	√	
2005	Chevrolet	Suburban - 4WD	Rear wheel steering	√	√	√	√	√	
2005	Chevrolet	Suburban - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2005	Chevrolet	Suburban - 4WD	Tire pressure monitor	√	√	√	√	√	0159
2005	Chevrolet	Suburban - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2005	Chevrolet	Tahoe - 2WD	Powertrain	√	√	√	√	√	
2005	Chevrolet	Tahoe - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2005	Chevrolet	Tahoe - 2WD	CD changer	√	√	√			
2005	Chevrolet	Tahoe - 2WD	Chime	√	√	√	√	√	
2005	Chevrolet	Tahoe - 2WD	Digital radio receiver	√	√	√	√		0516
2005	Chevrolet	Tahoe - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	Tahoe - 2WD	Radio	√	√	√	√		
2005	Chevrolet	Tahoe - 2WD	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	Chevrolet	Tahoe - 2WD	Disc player and video dilay	√	√	√			
2005	Chevrolet	Tahoe - 2WD	Passenger presence system		√	√			0512
2005	Chevrolet	Tahoe - 2WD	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	Tahoe - 2WD	Driver door module	√	√	√	√	√	
2005	Chevrolet	Tahoe - 2WD	Passenger door module	√	√	√	√	√	
2005	Chevrolet	Tahoe - 2WD	Body Control Module	√	√	√	√	√	
2005	Chevrolet	Tahoe - 2WD	Driver seat module	√	√	√	√	√	
2005	Chevrolet	Tahoe - 2WD	Heating and air conditioning	√	√	√	√	√	
2005	Chevrolet	Tahoe - 2WD	Rear aux. climate module	√	√	√	√	√	
2005	Chevrolet	Tahoe - 2WD	Rear HVAC	√	√	√	√		
2005	Chevrolet	Tahoe - 2WD	Rear seat audio	√	√	√	√		
2005	Chevrolet	Tahoe - 2WD	Generator battery control module	√	√	√	√	√	
2005	Chevrolet	Tahoe - 2WD	Vehicle theft deterrent	√	√	√	√	√	0631
2005	Chevrolet	Tahoe - 2WD	Navigation radio	√	√	√	√	√	0525
2005	Chevrolet	Tahoe - 2WD	Traction assist (if equipped)		√	√	√	√	
2005	Chevrolet	Tahoe - 2WD	ABS	√	√	√	√	√	
2005	Chevrolet	Tahoe - 2WD	Rear wheel steering	√	√	√	√	√	
2005	Chevrolet	Tahoe - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2005	Chevrolet	Tahoe - 2WD	Tire pressure monitor	√	√	√	√	√	0159
2005	Chevrolet	Tahoe - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2005	Chevrolet	Tahoe - 4WD	Powertrain	√	√	√	√	√	
2005	Chevrolet	Tahoe - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2005	Chevrolet	Tahoe - 4WD	CD changer	√	√	√			
2005	Chevrolet	Tahoe - 4WD	Chime	√	√	√	√	√	
2005	Chevrolet	Tahoe - 4WD	Digital radio receiver	√	√	√	√		0516
2005	Chevrolet	Tahoe - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	Tahoe - 4WD	Radio	√	√	√	√		

2005	Chevrolet	Tahoe - 4WD	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	Chevrolet	Tahoe - 4WD	Disc player and video delay	√	√	√			
2005	Chevrolet	Tahoe - 4WD	Passenger presence system		√	√			0512
2005	Chevrolet	Tahoe - 4WD	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	Tahoe - 4WD	Driver door module	√	√	√	√	√	
2005	Chevrolet	Tahoe - 4WD	Passenger door module	√	√	√	√	√	
2005	Chevrolet	Tahoe - 4WD	Body Control Module	√	√	√	√	√	
2005	Chevrolet	Tahoe - 4WD	Driver seat module	√	√	√	√	√	
2005	Chevrolet	Tahoe - 4WD	Heating and air conditioning	√	√	√	√	√	
2005	Chevrolet	Tahoe - 4WD	Rear aux. climate module	√	√	√	√	√	
2005	Chevrolet	Tahoe - 4WD	Rear HVAC	√	√	√	√		
2005	Chevrolet	Tahoe - 4WD	Rear seat audio	√	√	√	√		
2005	Chevrolet	Tahoe - 4WD	Generator battery control module	√	√	√	√	√	
2005	Chevrolet	Tahoe - 4WD	Vehicle theft deterrent	√	√	√	√	√	0631
2005	Chevrolet	Tahoe - 4WD	Navigation radio	√	√	√	√	√	0525
2005	Chevrolet	Tahoe - 4WD	Traction assist (if equipped)		√	√	√	√	
2005	Chevrolet	Tahoe - 4WD	ABS	√	√	√	√	√	
2005	Chevrolet	Tahoe - 4WD	Rear wheel steering	√	√	√	√	√	
2005	Chevrolet	Tahoe - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2005	Chevrolet	Tahoe - 4WD	Tire pressure monitor	√	√	√	√	√	0159
2005	Chevrolet	Tahoe - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2005	Chevrolet	TrailBlazer	Powertrain	√	√	√	√	√	
2005	Chevrolet	TrailBlazer	Digital radio receiver	√	√	√	√		0516
2005	Chevrolet	TrailBlazer	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	TrailBlazer	Radio	√	√	√	√		
2005	Chevrolet	TrailBlazer	Disc player and video delay	√	√	√			
2005	Chevrolet	TrailBlazer	Passenger presence system		√	√			0512
2005	Chevrolet	TrailBlazer	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	TrailBlazer	Driver door module	√	√	√	√	√	
2005	Chevrolet	TrailBlazer	Driver seat module	√	√	√	√	√	
2005	Chevrolet	TrailBlazer	Heating and air conditioning	√	√	√	√	√	
2005	Chevrolet	TrailBlazer	Lift gate module	√	√	√	√	√	
2005	Chevrolet	TrailBlazer	Passenger door module	√	√	√	√	√	
2005	Chevrolet	TrailBlazer	Rear seat audio	√	√	√	√		
2005	Chevrolet	TrailBlazer	Body Control Module	√	√	√	√	√	0550
2005	Chevrolet	TrailBlazer	Vehicle theft deterrent	√	√	√	√	√	0550
2005	Chevrolet	TrailBlazer	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	Chevrolet	TrailBlazer	Navigation radio	√	√	√	√	√	0525
2005	Chevrolet	TrailBlazer	ABS	√	√	√	√	√	
2005	Chevrolet	TrailBlazer	4WAL 3 sensor	√	√	√	√	√	0516
2005	Chevrolet	TrailBlazer	Powertrain	√	√	√	√	√	

2005	Chevrolet	TrailBlazer	Digital radio receiver	√	√	√	√		0516
2005	Chevrolet	TrailBlazer	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	TrailBlazer	Radio	√	√	√	√		
2005	Chevrolet	TrailBlazer	Disc player and video dilay	√	√	√			
2005	Chevrolet	TrailBlazer	Passenger presence system		√	√			0512
2005	Chevrolet	TrailBlazer	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	TrailBlazer	Driver door module	√	√	√	√	√	
2005	Chevrolet	TrailBlazer	Driver seat module	√	√	√	√	√	
2005	Chevrolet	TrailBlazer	Heating and air conditioning	√	√	√	√	√	
2005	Chevrolet	TrailBlazer	Lift gate module	√	√	√	√	√	
2005	Chevrolet	TrailBlazer	Passenger door module	√	√	√	√	√	
2005	Chevrolet	TrailBlazer	Rear seat audio	√	√	√	√		
2005	Chevrolet	TrailBlazer	Body Control Module	√	√	√	√	√	0550
2005	Chevrolet	TrailBlazer	Vehicle theft deterrent	√	√	√	√	√	0550
2005	Chevrolet	TrailBlazer	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	Chevrolet	TrailBlazer	Navigation radio	√	√	√	√	√	0525
2005	Chevrolet	TrailBlazer	ABS	√	√	√	√	√	
2005	Chevrolet	TrailBlazer	4WAL 3 sensor	√	√	√	√	√	0516
2005	Chevrolet	TrailBlazer EXT	Powertrain	√	√	√	√	√	0493
2005	Chevrolet	TrailBlazer EXT	Digital radio receiver	√	√	√	√		0516
2005	Chevrolet	TrailBlazer EXT	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	TrailBlazer EXT	Radio	√	√	√	√		
2005	Chevrolet	TrailBlazer EXT	Disc player and video dilay	√	√	√			
2005	Chevrolet	TrailBlazer EXT	Passenger presence system		√	√			0512
2005	Chevrolet	TrailBlazer EXT	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	TrailBlazer EXT	Driver door module	√	√	√	√	√	
2005	Chevrolet	TrailBlazer EXT	Driver seat module	√	√	√	√	√	
2005	Chevrolet	TrailBlazer EXT	Heating and air conditioning	√	√	√	√	√	
2005	Chevrolet	TrailBlazer EXT	Lift gate module	√	√	√	√	√	
2005	Chevrolet	TrailBlazer EXT	Passenger door module	√	√	√	√	√	
2005	Chevrolet	TrailBlazer EXT	Rear HVAC/RSA	√	√	√	√	√	
2005	Chevrolet	TrailBlazer EXT	Rear seat audio	√	√	√	√		
2005	Chevrolet	TrailBlazer EXT	Body Control Module	√	√	√	√	√	0550
2005	Chevrolet	TrailBlazer EXT	Vehicle theft deterrent	√	√	√	√	√	0550
2005	Chevrolet	TrailBlazer EXT	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	Chevrolet	TrailBlazer EXT	Rear HVAC	√	√	√	√	√	0550
2005	Chevrolet	TrailBlazer EXT	Navigation radio	√	√	√	√	√	0525
2005	Chevrolet	TrailBlazer EXT	ABS	√	√	√	√	√	
2005	Chevrolet	TrailBlazer EXT	4WAL 3 sensor	√	√	√	√	√	0493
2005	Chevrolet	TrailBlazer EXT	Powertrain	√	√	√	√	√	0493
2005	Chevrolet	TrailBlazer EXT	Digital radio receiver	√	√	√	√		0516

2005	Chevrolet	TrailBlazer EXT	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Chevrolet	TrailBlazer EXT	Radio	√	√	√	√		
2005	Chevrolet	TrailBlazer EXT	Disc player and video delay	√	√	√			
2005	Chevrolet	TrailBlazer EXT	Passenger presence system		√	√			0512
2005	Chevrolet	TrailBlazer EXT	Instrument panel cluster	√	√	√	√	√	
2005	Chevrolet	TrailBlazer EXT	Driver door module	√	√	√	√	√	
2005	Chevrolet	TrailBlazer EXT	Driver seat module	√	√	√	√	√	
2005	Chevrolet	TrailBlazer EXT	Heating and air conditioning	√	√	√	√	√	
2005	Chevrolet	TrailBlazer EXT	Lift gate module	√	√	√	√	√	
2005	Chevrolet	TrailBlazer EXT	Passenger door module	√	√	√	√	√	
2005	Chevrolet	TrailBlazer EXT	Rear HVAC/RSA	√	√	√	√	√	
2005	Chevrolet	TrailBlazer EXT	Rear seat audio	√	√	√	√		
2005	Chevrolet	TrailBlazer EXT	Body Control Module	√	√	√	√	√	0550
2005	Chevrolet	TrailBlazer EXT	Vehicle theft deterrent	√	√	√	√	√	0550
2005	Chevrolet	TrailBlazer EXT	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	Chevrolet	TrailBlazer EXT	Rear HVAC	√	√	√	√	√	0550
2005	Chevrolet	TrailBlazer EXT	Navigation radio	√	√	√	√	√	0525
2005	Chevrolet	TrailBlazer EXT	ABS	√	√	√	√	√	
2005	Chevrolet	TrailBlazer EXT	4WAL 3 sensor	√	√	√	√	√	0493
2005	Chevrolet	Blazer	Radio	√	√	√	√		
2005	Chevrolet	Blazer	Supplemental inflatable restraint	√	√	√	√		0531
2005	Chevrolet	Blazer	Instrument panel cluster		√	√	√	√	
2005	Chevrolet	Blazer	Body Control Module		√	√	√	√	
2005	Chevrolet	Blazer	Heating and air conditioning	√	√	√	√	√	
2005	Chevrolet	Blazer	Memory seat module	√	√	√	√	√	0531
2005	Chevrolet	Blazer	Traction assist (if equipped)		√	√	√	√	
2005	Chevrolet	Blazer	4WAL 3 sensor	√	√	√	√	√	0531
2005	Chevrolet	Blazer	Radio	√	√	√	√		
2005	Chevrolet	Blazer	Supplemental inflatable restraint	√	√	√	√		0531
2005	Chevrolet	Blazer	Instrument panel cluster		√	√	√	√	
2005	Chevrolet	Blazer	Body Control Module		√	√	√	√	
2005	Chevrolet	Blazer	Heating and air conditioning	√	√	√	√	√	
2005	Chevrolet	Blazer	Memory seat module	√	√	√	√	√	0531
2005	Chevrolet	Blazer	Traction assist (if equipped)		√	√	√	√	
2005	Chevrolet	Blazer	4WAL 3 sensor	√	√	√	√	√	0531
2005	Chevrolet	Uplander	HVAC	√	√	√	√	√	0499
2005	Chevrolet	Uplander	Brakes		√	√	√	√	0506
2005	Chevrolet	Uplander	Engine controls		√	√	√	√	
2005	Chevrolet	Uplander	Engine cooling		√	√	√	√	
2005	Chevrolet	Uplander	Engine electrical	√	√	√	√	√	0499
2005	Chevrolet	Uplander	Shift lock control	√	√	√	√	√	0499

2005	Chevrolet	Uplander	Automatic transaxle		√	√	√	√	
2005	Chevrolet	Uplander	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Chevrolet	Uplander	Cruise Control		√	√	√	√	
2005	Chevrolet	Uplander	Door	√	√	√	√	√	
2005	Chevrolet	Uplander	Entertainment	√	√	√	√	√	0516
2005	Chevrolet	Uplander	Horns	√	√	√	√	√	0499
2005	Chevrolet	Uplander	Instrument panel	√	√	√	√	√	0499
2005	Chevrolet	Uplander	Keyless entry	√	√	√	√	√	0499
2005	Chevrolet	Uplander	Lighting systems	√	√	√	√	√	0499
2005	Chevrolet	Uplander	Navigation System	√	√	√	√	√	0525
2005	Chevrolet	Uplander	Stationary windows	√	√	√	√	√	
2005	Chevrolet	Uplander	Theft deterrent	√	√	√	√	√	0499
2005	Chevrolet	Uplander	Wipers/washer systems	√	√	√	√	√	0499
2005	Chevrolet	Uplander	Seat belts	√	√	√	√	√	0515
2005	Chevrolet	Uplander	SIR	√	√	√	√	√	0512
2005	Chevrolet	Uplander	HVAC	√	√	√	√	√	0499
2005	Chevrolet	Uplander	Brakes		√	√	√	√	0506
2005	Chevrolet	Uplander	Engine controls		√	√	√	√	
2005	Chevrolet	Uplander	Engine cooling		√	√	√	√	
2005	Chevrolet	Uplander	Engine electrical	√	√	√	√	√	0499
2005	Chevrolet	Uplander	Shift lock control	√	√	√	√	√	0499
2005	Chevrolet	Uplander	Automatic transaxle		√	√	√	√	
2005	Chevrolet	Uplander	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Chevrolet	Uplander	Cruise Control		√	√	√	√	
2005	Chevrolet	Uplander	Door	√	√	√	√	√	
2005	Chevrolet	Uplander	Entertainment	√	√	√	√	√	0516
2005	Chevrolet	Uplander	Horns	√	√	√	√	√	0499
2005	Chevrolet	Uplander	Instrument panel	√	√	√	√	√	0499
2005	Chevrolet	Uplander	Keyless entry	√	√	√	√	√	0499
2005	Chevrolet	Uplander	Lighting systems	√	√	√	√	√	0499
2005	Chevrolet	Uplander	Navigation System	√	√	√	√	√	0525
2005	Chevrolet	Uplander	Stationary windows	√	√	√	√	√	
2005	Chevrolet	Uplander	Theft deterrent	√	√	√	√	√	0499
2005	Chevrolet	Uplander	Wipers/washer systems	√	√	√	√	√	0499
2005	Chevrolet	Uplander	Seat belts	√	√	√	√	√	0515
2005	Chevrolet	Uplander	SIR	√	√	√	√	√	0512
2005	Chevrolet	Uplander - 4WD	HVAC	√	√	√	√	√	0499
2005	Chevrolet	Uplander - 4WD	Brakes		√	√	√	√	0506
2005	Chevrolet	Uplander - 4WD	Engine controls		√	√	√	√	
2005	Chevrolet	Uplander - 4WD	Engine cooling		√	√	√	√	
2005	Chevrolet	Uplander - 4WD	Engine electrical	√	√	√	√	√	0499

2005	Chevrolet	Uplander - 4WD	Shift lock control	√	√	√	√	√	0499
2005	Chevrolet	Uplander - 4WD	Automatic transaxle		√	√	√	√	
2005	Chevrolet	Uplander - 4WD	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Chevrolet	Uplander - 4WD	Cruise Control		√	√	√	√	
2005	Chevrolet	Uplander - 4WD	Door	√	√	√	√	√	
2005	Chevrolet	Uplander - 4WD	Entertainment	√	√	√	√	√	0516
2005	Chevrolet	Uplander - 4WD	Horns	√	√	√	√	√	0499
2005	Chevrolet	Uplander - 4WD	Instrument panel	√	√	√	√	√	0499
2005	Chevrolet	Uplander - 4WD	Keyless entry	√	√	√	√	√	0499
2005	Chevrolet	Uplander - 4WD	Lighting systems	√	√	√	√	√	0499
2005	Chevrolet	Uplander - 4WD	Navigation System	√	√	√	√	√	0525
2005	Chevrolet	Uplander - 4WD	Stationary windows	√	√	√	√	√	
2005	Chevrolet	Uplander - 4WD	Theft deterrent	√	√	√	√	√	0499
2005	Chevrolet	Uplander - 4WD	Wipers/washer systems	√	√	√	√	√	0499
2005	Chevrolet	Uplander - 4WD	Seat belts	√	√	√	√	√	0515
2005	Chevrolet	Uplander - 4WD	SIR	√	√	√	√	√	0512
2005	Chevrolet	Uplander - 4WD	HVAC	√	√	√	√	√	0499
2005	Chevrolet	Uplander - 4WD	Brakes		√	√	√	√	0506
2005	Chevrolet	Uplander - 4WD	Engine controls		√	√	√	√	
2005	Chevrolet	Uplander - 4WD	Engine cooling		√	√	√	√	
2005	Chevrolet	Uplander - 4WD	Engine electrical	√	√	√	√	√	0499
2005	Chevrolet	Uplander - 4WD	Shift lock control	√	√	√	√	√	0499
2005	Chevrolet	Uplander - 4WD	Automatic transaxle		√	√	√	√	
2005	Chevrolet	Uplander - 4WD	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Chevrolet	Uplander - 4WD	Cruise Control		√	√	√	√	
2005	Chevrolet	Uplander - 4WD	Door	√	√	√	√	√	
2005	Chevrolet	Uplander - 4WD	Entertainment	√	√	√	√	√	0516
2005	Chevrolet	Uplander - 4WD	Horns	√	√	√	√	√	0499
2005	Chevrolet	Uplander - 4WD	Instrument panel	√	√	√	√	√	0499
2005	Chevrolet	Uplander - 4WD	Keyless entry	√	√	√	√	√	0499
2005	Chevrolet	Uplander - 4WD	Lighting systems	√	√	√	√	√	0499
2005	Chevrolet	Uplander - 4WD	Navigation System	√	√	√	√	√	0525
2005	Chevrolet	Uplander - 4WD	Stationary windows	√	√	√	√	√	
2005	Chevrolet	Uplander - 4WD	Theft deterrent	√	√	√	√	√	0499
2005	Chevrolet	Uplander - 4WD	Wipers/washer systems	√	√	√	√	√	0499
2005	Chevrolet	Uplander - 4WD	Seat belts	√	√	√	√	√	0515
2005	Chevrolet	Uplander - 4WD	SIR	√	√	√	√	√	0512
2005	Chevrolet	Uplander Ext.	HVAC	√	√	√	√	√	0499
2005	Chevrolet	Uplander Ext.	Brakes		√	√	√	√	0506
2005	Chevrolet	Uplander Ext.	Engine controls		√	√	√	√	
2005	Chevrolet	Uplander Ext.	Engine cooling		√	√	√	√	



2005	Chevrolet	Uplander Ext.	Engine electrical	√	√	√	√	√	0499
2005	Chevrolet	Uplander Ext.	Shift lock control	√	√	√	√	√	0499
2005	Chevrolet	Uplander Ext.	Automatic transaxle		√	√	√	√	
2005	Chevrolet	Uplander Ext.	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Chevrolet	Uplander Ext.	Cruise Control		√	√	√	√	
2005	Chevrolet	Uplander Ext.	Door	√	√	√	√	√	
2005	Chevrolet	Uplander Ext.	Entertainment	√	√	√	√	√	0516
2005	Chevrolet	Uplander Ext.	Horns	√	√	√	√	√	0499
2005	Chevrolet	Uplander Ext.	Instrument panel	√	√	√	√	√	0499
2005	Chevrolet	Uplander Ext.	Keyless entry	√	√	√	√	√	0499
2005	Chevrolet	Uplander Ext.	Lighting systems	√	√	√	√	√	0499
2005	Chevrolet	Uplander Ext.	Navigation System	√	√	√	√	√	0525
2005	Chevrolet	Uplander Ext.	Stationary windows	√	√	√	√	√	
2005	Chevrolet	Uplander Ext.	Theft deterrent	√	√	√	√	√	0499
2005	Chevrolet	Uplander Ext.	Wipers/washer systems	√	√	√	√	√	0499
2005	Chevrolet	Uplander Ext.	Seat belts	√	√	√	√	√	0515
2005	Chevrolet	Uplander Ext.	SIR	√	√	√	√	√	0512
2005	Chevrolet	Uplander Ext.	HVAC	√	√	√	√	√	0499
2005	Chevrolet	Uplander Ext.	Brakes		√	√	√	√	0506
2005	Chevrolet	Uplander Ext.	Engine controls		√	√	√	√	
2005	Chevrolet	Uplander Ext.	Engine cooling		√	√	√	√	
2005	Chevrolet	Uplander Ext.	Engine electrical	√	√	√	√	√	0499
2005	Chevrolet	Uplander Ext.	Shift lock control	√	√	√	√	√	0499
2005	Chevrolet	Uplander Ext.	Automatic transaxle		√	√	√	√	
2005	Chevrolet	Uplander Ext.	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Chevrolet	Uplander Ext.	Cruise Control		√	√	√	√	
2005	Chevrolet	Uplander Ext.	Door	√	√	√	√	√	
2005	Chevrolet	Uplander Ext.	Entertainment	√	√	√	√	√	0516
2005	Chevrolet	Uplander Ext.	Horns	√	√	√	√	√	0499
2005	Chevrolet	Uplander Ext.	Instrument panel	√	√	√	√	√	0499
2005	Chevrolet	Uplander Ext.	Keyless entry	√	√	√	√	√	0499
2005	Chevrolet	Uplander Ext.	Lighting systems	√	√	√	√	√	0499
2005	Chevrolet	Uplander Ext.	Navigation System	√	√	√	√	√	0525
2005	Chevrolet	Uplander Ext.	Stationary windows	√	√	√	√	√	
2005	Chevrolet	Uplander Ext.	Theft deterrent	√	√	√	√	√	0499
2005	Chevrolet	Uplander Ext.	Wipers/washer systems	√	√	√	√	√	0499
2005	Chevrolet	Uplander Ext.	Seat belts	√	√	√	√	√	0515
2005	Chevrolet	Uplander Ext.	SIR	√	√	√	√	√	0512
2005	Chevrolet	Venture	Powertrain	√	√	√	√	√	
2005	Chevrolet	Venture	Digital radio receiver	√	√	√	√		0516
2005	Chevrolet	Venture	Vehicle comm. interface module	√	√	√	√	√	0647 0585

2005	Chevrolet	Venture	Vehicle theft deterrent		√	√	√		
2005	Chevrolet	Venture	Driver information center		√	√			
2005	Chevrolet	Venture	Instrument panel cluster		√	√	√	√	0682 0628
2005	Chevrolet	Venture	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636 0572 0552 0572 0524
2005	Chevrolet	Venture	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	Chevrolet	Venture	Chassis	√	√	√	√	√	0506
2005	Chevrolet	Venture	HVAC	√	√	√	√	√	0499
2005	Chevrolet	Venture	Brakes		√	√	√	√	0506
2005	Chevrolet	Venture	Engine controls		√	√	√	√	
2005	Chevrolet	Venture	Engine cooling		√	√	√	√	
2005	Chevrolet	Venture	Engine electrical	√	√	√	√	√	0499
2005	Chevrolet	Venture	Shift lock control	√	√	√	√	√	0499
2005	Chevrolet	Venture	Automatic transaxle		√	√	√	√	
2005	Chevrolet	Venture	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Chevrolet	Venture	Cruise Control		√	√	√	√	
2005	Chevrolet	Venture	Door	√	√	√	√	√	
2005	Chevrolet	Venture	Entertainment	√	√	√	√	√	0516
2005	Chevrolet	Venture	Horns	√	√	√	√	√	0499
2005	Chevrolet	Venture	Instrument panel	√	√	√	√	√	0499
2005	Chevrolet	Venture	Keyless entry	√	√	√	√	√	0499
2005	Chevrolet	Venture	Lighting systems	√	√	√	√	√	0499
2005	Chevrolet	Venture	Navigation System	√	√	√	√	√	0525
2005	Chevrolet	Venture	Stationary windows	√	√	√	√	√	
2005	Chevrolet	Venture	Theft deterrent	√	√	√	√	√	0499
2005	Chevrolet	Venture	Wipers/washer systems	√	√	√	√	√	0499
2005	Chevrolet	Venture	Seat belts	√	√	√	√	√	0515
2005	Chevrolet	Venture	SIR	√	√	√	√	√	0512
2005	Chevrolet	Venture	Powertrain	√	√	√	√	√	
2005	Chevrolet	Venture	Digital radio receiver	√	√	√	√		0516
2005	Chevrolet	Venture	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2005	Chevrolet	Venture	Vehicle theft deterrent		√	√	√		
2005	Chevrolet	Venture	Driver information center		√	√			
2005	Chevrolet	Venture	Instrument panel cluster		√	√	√	√	0682 0628
2005	Chevrolet	Venture	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636 0572 0552 0572 0524
2005	Chevrolet	Venture	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	Chevrolet	Venture	Chassis	√	√	√	√	√	0506
2005	Chevrolet	Venture	HVAC	√	√	√	√	√	0499
2005	Chevrolet	Venture	Brakes		√	√	√	√	0506

2005	Chevrolet	Venture	Engine controls		√	√	√	√	
2005	Chevrolet	Venture	Engine cooling		√	√	√	√	
2005	Chevrolet	Venture	Engine electrical	√	√	√	√	√	0499
2005	Chevrolet	Venture	Shift lock control	√	√	√	√	√	0499
2005	Chevrolet	Venture	Automatic transaxle		√	√	√	√	
2005	Chevrolet	Venture	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Chevrolet	Venture	Cruise Control		√	√	√	√	
2005	Chevrolet	Venture	Door	√	√	√	√	√	
2005	Chevrolet	Venture	Entertainment	√	√	√	√	√	0516
2005	Chevrolet	Venture	Horns	√	√	√	√	√	0499
2005	Chevrolet	Venture	Instrument panel	√	√	√	√	√	0499
2005	Chevrolet	Venture	Keyless entry	√	√	√	√	√	0499
2005	Chevrolet	Venture	Lighting systems	√	√	√	√	√	0499
2005	Chevrolet	Venture	Navigation System	√	√	√	√	√	0525
2005	Chevrolet	Venture	Stationary windows	√	√	√	√	√	
2005	Chevrolet	Venture	Theft deterrent	√	√	√	√	√	0499
2005	Chevrolet	Venture	Wipers/washer systems	√	√	√	√	√	0499
2005	Chevrolet	Venture	Seat belts	√	√	√	√	√	0515
2005	Chevrolet	Venture	SIR	√	√	√	√	√	0512
2005	Chevrolet	Venture - 4WD	HVAC	√	√	√	√	√	0499
2005	Chevrolet	Venture - 4WD	Brakes		√	√	√	√	0506
2005	Chevrolet	Venture - 4WD	Engine controls		√	√	√	√	
2005	Chevrolet	Venture - 4WD	Engine cooling		√	√	√	√	
2005	Chevrolet	Venture - 4WD	Engine electrical	√	√	√	√	√	0499
2005	Chevrolet	Venture - 4WD	Shift lock control	√	√	√	√	√	0499
2005	Chevrolet	Venture - 4WD	Automatic transaxle		√	√	√	√	
2005	Chevrolet	Venture - 4WD	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Chevrolet	Venture - 4WD	Cruise Control		√	√	√	√	
2005	Chevrolet	Venture - 4WD	Door	√	√	√	√	√	
2005	Chevrolet	Venture - 4WD	Entertainment	√	√	√	√	√	0516
2005	Chevrolet	Venture - 4WD	Horns	√	√	√	√	√	0499
2005	Chevrolet	Venture - 4WD	Instrument panel	√	√	√	√	√	0499
2005	Chevrolet	Venture - 4WD	Keyless entry	√	√	√	√	√	0499
2005	Chevrolet	Venture - 4WD	Lighting systems	√	√	√	√	√	0499
2005	Chevrolet	Venture - 4WD	Navigation System	√	√	√	√	√	0525
2005	Chevrolet	Venture - 4WD	Stationary windows	√	√	√	√	√	
2005	Chevrolet	Venture - 4WD	Theft deterrent	√	√	√	√	√	0499
2005	Chevrolet	Venture - 4WD	Wipers/washer systems	√	√	√	√	√	0499
2005	Chevrolet	Venture - 4WD	Seat belts	√	√	√	√	√	0515
2005	Chevrolet	Venture - 4WD	SIR	√	√	√	√	√	0512
2005	Chevrolet	Venture Ext.	HVAC	√	√	√	√	√	0499

2005	Chevrolet	Venture Ext.	Brakes		√	√	√	√	0506
2005	Chevrolet	Venture Ext.	Engine controls		√	√	√	√	
2005	Chevrolet	Venture Ext.	Engine cooling		√	√	√	√	
2005	Chevrolet	Venture Ext.	Engine electrical	√	√	√	√	√	0499
2005	Chevrolet	Venture Ext.	Shift lock control	√	√	√	√	√	0499
2005	Chevrolet	Venture Ext.	Automatic transaxle		√	√	√	√	
2005	Chevrolet	Venture Ext.	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Chevrolet	Venture Ext.	Cruise Control		√	√	√	√	
2005	Chevrolet	Venture Ext.	Door	√	√	√	√	√	
2005	Chevrolet	Venture Ext.	Entertainment	√	√	√	√	√	0516
2005	Chevrolet	Venture Ext.	Horns	√	√	√	√	√	0499
2005	Chevrolet	Venture Ext.	Instrument panel	√	√	√	√	√	0499
2005	Chevrolet	Venture Ext.	Keyless entry	√	√	√	√	√	0499
2005	Chevrolet	Venture Ext.	Lighting systems	√	√	√	√	√	0499
2005	Chevrolet	Venture Ext.	Navigation System	√	√	√	√	√	0525
2005	Chevrolet	Venture Ext.	Stationary windows	√	√	√	√	√	
2005	Chevrolet	Venture Ext.	Theft deterrent	√	√	√	√	√	0499
2005	Chevrolet	Venture Ext.	Wipers/washer systems	√	√	√	√	√	0499
2005	Chevrolet	Venture Ext.	Seat belts	√	√	√	√	√	0515
2005	Chevrolet	Venture Ext.	SIR	√	√	√	√	√	0512
2005	Chevrolet	Others	Powertrain	√	√	√	√	√	
2005	GMC truck	Canyon Pickup - 2WD	Powertrain	√	√	√	√	√	
2005	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2005	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	GMC truck	Canyon Pickup - 2WD	ABS	√	√	√	√	√	0516
2005	GMC truck	Canyon Pickup - 2WD	Powertrain	√	√	√	√	√	
2005	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2005	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	GMC truck	Canyon Pickup - 2WD	ABS	√	√	√	√	√	0516
2005	GMC truck	Canyon Pickup - 4WD	Powertrain	√	√	√	√	√	
2005	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		

2005	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	GMC truck	Canyon Pickup - 4WD	ABS	√	√	√	√	√	0516
2005	GMC truck	Canyon Pickup - 4WD	Powertrain	√	√	√	√	√	
2005	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2005	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	GMC truck	Canyon Pickup - 4WD	ABS	√	√	√	√	√	0516
2005	GMC truck	Envoy	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy	Radio	√	√	√	√		
2005	GMC truck	Envoy	Disc player and video delay	√	√	√			
2005	GMC truck	Envoy	Passenger presence system		√	√			0512
2005	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy	Lift gate module	√	√	√	√	√	
2005	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy	ABS	√	√	√	√	√	
2005	GMC truck	Envoy	4WAL 3 sensor		√	√	√	√	
2005	GMC truck	Envoy	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy	Radio	√	√	√	√		
2005	GMC truck	Envoy	Disc player and video delay	√	√	√			
2005	GMC truck	Envoy	Passenger presence system		√	√			0512
2005	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy	Lift gate module	√	√	√	√	√	

2005	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy	Rear HVAC/RSA	√	√	√	√	√	
2005	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy	Rear HVAC	√	√	√	√	√	0550
2005	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy	ABS	√	√	√	√	√	
2005	GMC truck	Envoy	4WAL 3 sensor		√	√	√	√	
2005	GMC truck	Envoy	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy	Radio	√	√	√	√		
2005	GMC truck	Envoy	Passenger presence system		√	√			0512
2005	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy	End gate module	√	√	√	√	√	
2005	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy	Power roof module	√	√	√	√	√	
2005	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy	ABS	√	√	√	√	√	
2005	GMC truck	Envoy	4WAL 3 sensor		√	√	√	√	
2005	GMC truck	Envoy	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy	Radio	√	√	√	√		
2005	GMC truck	Envoy	Disc player and video delay	√	√	√			
2005	GMC truck	Envoy	Passenger presence system		√	√			0512
2005	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy	Lift gate module	√	√	√	√	√	
2005	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550

2005	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy	ABS	√	√	√	√	√	
2005	GMC truck	Envoy	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy	Radio	√	√	√	√		
2005	GMC truck	Envoy	Disc player and video delay	√	√	√			
2005	GMC truck	Envoy	Passenger presence system		√	√			0512
2005	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy	Lift gate module	√	√	√	√	√	
2005	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy	Rear HVAC/RSA	√	√	√	√	√	
2005	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy	Rear HVAC	√	√	√	√	√	0550
2005	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy	ABS	√	√	√	√	√	
2005	GMC truck	Envoy	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy	Radio	√	√	√	√		
2005	GMC truck	Envoy	Passenger presence system		√	√			0512
2005	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy	End gate module	√	√	√	√	√	
2005	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy	Power roof module	√	√	√	√	√	
2005	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy	ABS	√	√	√	√	√	
2005	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516

2005	GMC truck	Envoy XL	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy XL	Radio	√	√	√	√		
2005	GMC truck	Envoy XL	Disc player and video dilay	√	√	√			
2005	GMC truck	Envoy XL	Passenger presence system		√	√			0512
2005	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy XL	ABS	√	√	√	√	√	
2005	GMC truck	Envoy XL	4WAL 3 sensor		√	√	√	√	
2005	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy XL	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy XL	Radio	√	√	√	√		
2005	GMC truck	Envoy XL	Disc player and video dilay	√	√	√			
2005	GMC truck	Envoy XL	Passenger presence system		√	√			0512
2005	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Rear HVAC/RSA	√	√	√	√	√	
2005	GMC truck	Envoy XL	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy XL	Rear HVAC	√	√	√	√	√	0550
2005	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy XL	ABS	√	√	√	√	√	
2005	GMC truck	Envoy XL	4WAL 3 sensor		√	√	√	√	
2005	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy XL	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy XL	Radio	√	√	√	√		
2005	GMC truck	Envoy XL	Disc player and video dilay	√	√	√			



2005	GMC truck	Envoy XL	Passenger presence system		√	√			0512
2005	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy XL	ABS	√	√	√	√	√	
2005	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy XL	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy XL	Radio	√	√	√	√		
2005	GMC truck	Envoy XL	Disc player and video dilay	√	√	√			
2005	GMC truck	Envoy XL	Passenger presence system	√	√	√			0512
2005	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Rear HVAC/RSA	√	√	√	√	√	
2005	GMC truck	Envoy XL	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy XL	Rear HVAC	√	√	√	√	√	0550
2005	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy XL	ABS	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy XUV	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy XUV	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy XUV	Radio	√	√	√	√		
2005	GMC truck	Envoy XUV	Disc player and video dilay	√	√	√			
2005	GMC truck	Envoy XUV	Passenger presence system		√	√			0512
2005	GMC truck	Envoy XUV	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Heating and air conditioning	√	√	√	√	√	

2005	GMC truck	Envoy XUV	Lift gate module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy XUV	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy XUV	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy XUV	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy XUV	ABS	√	√	√	√	√	
2005	GMC truck	Envoy XUV	4WAL 3 sensor		√	√	√	√	
2005	GMC truck	Envoy XUV	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy XUV	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy XUV	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy XUV	Radio	√	√	√	√		
2005	GMC truck	Envoy XUV	Passenger presence system		√	√			0512
2005	GMC truck	Envoy XUV	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy XUV	End gate module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Power roof module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy XUV	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy XUV	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy XUV	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy XUV	ABS	√	√	√	√	√	
2005	GMC truck	Envoy XUV	4WAL 3 sensor		√	√	√	√	
2005	GMC truck	Envoy XUV	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy XUV	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy XUV	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy XUV	Radio	√	√	√	√		
2005	GMC truck	Envoy XUV	Disc player and video dilay	√	√	√			
2005	GMC truck	Envoy XUV	Passenger presence system		√	√			0512
2005	GMC truck	Envoy XUV	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Lift gate module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy XUV	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy XUV	Supplemental inflatable restraint	√	√	√	√	√	0516

2005	GMC truck	Envoy XUV	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy XUV	ABS	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy XUV	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy XUV	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy XUV	Radio	√	√	√	√		
2005	GMC truck	Envoy XUV	Passenger presence system		√	√			0512
2005	GMC truck	Envoy XUV	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy XUV	End gate module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Power roof module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy XUV	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy XUV	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy XUV	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy XUV	ABS	√	√	√	√	√	
2005	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	0638
2005	GMC truck	Jimmy - 2WD	Radio	√	√	√	√		
2005	GMC truck	Jimmy - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2005	GMC truck	Jimmy - 2WD	Instrument panel cluster		√	√	√	√	
2005	GMC truck	Jimmy - 2WD	Body Control Module		√	√	√	√	
2005	GMC truck	Jimmy - 2WD	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Jimmy - 2WD	Memory seat module	√	√	√	√	√	0531
2005	GMC truck	Jimmy - 2WD	Traction assist (if equipped)		√	√	√	√	
2005	GMC truck	Jimmy - 2WD	4WAL 3 sensor	√	√	√	√	√	0638
2005	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	0638
2005	GMC truck	Jimmy - 2WD	Radio	√	√	√	√		
2005	GMC truck	Jimmy - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2005	GMC truck	Jimmy - 2WD	Instrument panel cluster		√	√	√	√	
2005	GMC truck	Jimmy - 2WD	Body Control Module		√	√	√	√	
2005	GMC truck	Jimmy - 2WD	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Jimmy - 2WD	Memory seat module	√	√	√	√	√	0531
2005	GMC truck	Jimmy - 2WD	Traction assist (if equipped)		√	√	√	√	
2005	GMC truck	Jimmy - 2WD	4WAL 3 sensor	√	√	√	√	√	0638
2005	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	0638
2005	GMC truck	Jimmy - 4WD	Radio	√	√	√	√		
2005	GMC truck	Jimmy - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2005	GMC truck	Jimmy - 4WD	Instrument panel cluster		√	√	√	√	

2005	GMC truck	Jimmy - 4WD	Body Control Module		√	√	√	√	
2005	GMC truck	Jimmy - 4WD	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Jimmy - 4WD	Memory seat module	√	√	√	√	√	0531
2005	GMC truck	Jimmy - 4WD	Traction assist (if equipped)		√	√	√	√	
2005	GMC truck	Jimmy - 4WD	4WAL 3 sensor	√	√	√	√	√	0638
2005	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	0638
2005	GMC truck	Jimmy - 4WD	Radio	√	√	√	√		
2005	GMC truck	Jimmy - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2005	GMC truck	Jimmy - 4WD	Instrument panel cluster		√	√	√	√	
2005	GMC truck	Jimmy - 4WD	Body Control Module		√	√	√	√	
2005	GMC truck	Jimmy - 4WD	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Jimmy - 4WD	Memory seat module	√	√	√	√	√	0531
2005	GMC truck	Jimmy - 4WD	Traction assist (if equipped)		√	√	√	√	
2005	GMC truck	Jimmy - 4WD	4WAL 3 sensor	√	√	√	√	√	0638
2005	GMC truck	Safari - 2WD	Powertrain	√	√	√	√	√	0638
2005	GMC truck	Safari - 2WD	Instrument panel cluster		√	√	√	√	
2005	GMC truck	Safari - 2WD	Body Control Module		√	√	√	√	
2005	GMC truck	Safari - 2WD	Supplemental inflatable restraint	√	√	√	√		
2005	GMC truck	Safari - 2WD	4WAL 3 sensor	√	√	√	√	√	0638
2005	GMC truck	Safari - 4WD	Powertrain	√	√	√	√	√	0638
2005	GMC truck	Safari - 4WD	Instrument panel cluster		√	√	√	√	
2005	GMC truck	Safari - 4WD	Body Control Module		√	√	√	√	
2005	GMC truck	Safari - 4WD	Supplemental inflatable restraint	√	√	√	√		
2005	GMC truck	Safari - 4WD	4WAL 3 sensor	√	√	√	√	√	0638
2005	GMC truck	Savana	Powertrain	√	√	√	√	√	0638
2005	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Savana	Radio	√	√	√	√		
2005	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√		0531
2005	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Savana	Body Control Module	√	√	√	√	√	
2005	GMC truck	Savana	Remote function actuation	√	√	√	√	√	
2005	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	0602
2005	GMC truck	Savana	ABS	√	√	√	√	√	
2005	GMC truck	Savana	Powertrain	√	√	√	√	√	0638
2005	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Savana	Radio	√	√	√	√		
2005	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√		0531
2005	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Savana	Body Control Module	√	√	√	√	√	
2005	GMC truck	Savana	Remote function actuation	√	√	√	√	√	
2005	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	0602

2005	GMC truck	Savana	ABS	√	√	√	√	√	
2005	GMC truck	Savana	Powertrain	√	√	√	√	√	
2005	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Savana	Radio	√	√	√	√		
2005	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√		0531
2005	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Savana	Body Control Module	√	√	√	√	√	
2005	GMC truck	Savana	Remote function actuation	√	√	√	√	√	
2005	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	0602
2005	GMC truck	Savana	ABS	√	√	√	√	√	
2005	GMC truck	Savana	Powertrain	√	√	√	√	√	
2005	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Savana	Radio	√	√	√	√		
2005	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√		0531
2005	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Savana	Body Control Module	√	√	√	√	√	
2005	GMC truck	Savana	Remote function actuation	√	√	√	√	√	
2005	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	0602
2005	GMC truck	Savana	ABS	√	√	√	√	√	
2005	GMC truck	Sonoma	Powertrain	√	√	√	√	√	0638
2005	GMC truck	Sonoma	Radio	√	√	√	√		
2005	GMC truck	Sonoma	Supplemental inflatable restraint	√	√	√	√		0531
2005	GMC truck	Sonoma	Instrument panel cluster		√	√	√	√	
2005	GMC truck	Sonoma	Body Control Module	√	√	√	√	√	0531
2005	GMC truck	Sonoma	Traction assist (if equipped)		√	√	√	√	
2005	GMC truck	Sonoma	4WAL 3 sensor	√	√	√	√	√	0638
2005	GMC truck	Sonoma	Powertrain	√	√	√	√	√	0638
2005	GMC truck	Sonoma	Radio	√	√	√	√		
2005	GMC truck	Sonoma	Supplemental inflatable restraint	√	√	√	√		0531
2005	GMC truck	Sonoma	Instrument panel cluster		√	√	√	√	
2005	GMC truck	Sonoma	Body Control Module	√	√	√	√	√	0531
2005	GMC truck	Sonoma	Traction assist (if equipped)		√	√	√	√	
2005	GMC truck	Sonoma	4WAL 3 sensor	√	√	√	√	√	0638
2005	GMC truck	Yukon - 2WD	Powertrain	√	√	√	√	√	
2005	GMC truck	Yukon - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2005	GMC truck	Yukon - 2WD	CD changer	√	√	√			
2005	GMC truck	Yukon - 2WD	Chime	√	√	√	√	√	
2005	GMC truck	Yukon - 2WD	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Yukon - 2WD	Radio	√	√	√	√		
2005	GMC truck	Yukon - 2WD	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	GMC truck	Yukon - 2WD	Disc player and video dilay	√	√	√			

2005	GMC truck	Yukon - 2WD	Passenger presence system		√	√			0512
2005	GMC truck	Yukon - 2WD	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Yukon - 2WD	Driver door module	√	√	√	√	√	
2005	GMC truck	Yukon - 2WD	Passenger door module	√	√	√	√	√	
2005	GMC truck	Yukon - 2WD	Body Control Module	√	√	√	√	√	
2005	GMC truck	Yukon - 2WD	Driver seat module	√	√	√	√	√	
2005	GMC truck	Yukon - 2WD	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Yukon - 2WD	Rear aux. climate module	√	√	√	√	√	
2005	GMC truck	Yukon - 2WD	Rear HVAC	√	√	√	√		
2005	GMC truck	Yukon - 2WD	Rear seat audio	√	√	√	√		
2005	GMC truck	Yukon - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Yukon - 2WD	Generator battery control module	√	√	√	√	√	0631
2005	GMC truck	Yukon - 2WD	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Yukon - 2WD	Traction assist (if equipped)		√	√	√	√	
2005	GMC truck	Yukon - 2WD	ABS	√	√	√	√	√	
2005	GMC truck	Yukon - 2WD	Rear wheel steering	√	√	√	√	√	
2005	GMC truck	Yukon - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2005	GMC truck	Yukon - 2WD	Tire pressure monitor	√	√	√	√	√	0159
2005	GMC truck	Yukon - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2005	GMC truck	Yukon - 4WD	Powertrain	√	√	√	√	√	
2005	GMC truck	Yukon - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2005	GMC truck	Yukon - 4WD	CD changer	√	√	√			
2005	GMC truck	Yukon - 4WD	Chime	√	√	√	√	√	
2005	GMC truck	Yukon - 4WD	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Yukon - 4WD	Radio	√	√	√	√		
2005	GMC truck	Yukon - 4WD	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	GMC truck	Yukon - 4WD	Disc player and video dilay	√	√	√			
2005	GMC truck	Yukon - 4WD	Passenger presence system		√	√			0512
2005	GMC truck	Yukon - 4WD	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Yukon - 4WD	Driver door module	√	√	√	√	√	
2005	GMC truck	Yukon - 4WD	Passenger door module	√	√	√	√	√	
2005	GMC truck	Yukon - 4WD	Body Control Module	√	√	√	√	√	
2005	GMC truck	Yukon - 4WD	Driver seat module	√	√	√	√	√	
2005	GMC truck	Yukon - 4WD	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Yukon - 4WD	Rear aux. climate module	√	√	√	√	√	
2005	GMC truck	Yukon - 4WD	Rear HVAC	√	√	√	√		
2005	GMC truck	Yukon - 4WD	Rear seat audio	√	√	√	√		
2005	GMC truck	Yukon - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Yukon - 4WD	Generator battery control module	√	√	√	√	√	0631
2005	GMC truck	Yukon - 4WD	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Yukon - 4WD	Traction assist (if equipped)		√	√	√	√	

2005	GMC truck	Yukon - 4WD	ABS	√	√	√	√	√	
2005	GMC truck	Yukon - 4WD	Rear wheel steering	√	√	√	√	√	
2005	GMC truck	Yukon - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2005	GMC truck	Yukon - 4WD	Tire pressure monitor	√	√	√	√	√	0159
2005	GMC truck	Yukon - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2005	GMC truck	Yukon Denali	Powertrain	√	√	√	√	√	
2005	GMC truck	Yukon Denali	Amplifier (bose)	√	√	√	√	√	0631
2005	GMC truck	Yukon Denali	CD changer	√	√	√			
2005	GMC truck	Yukon Denali	Chime	√	√	√	√	√	
2005	GMC truck	Yukon Denali	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Yukon Denali	Radio	√	√	√	√		
2005	GMC truck	Yukon Denali	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	GMC truck	Yukon Denali	Disc player and video delay	√	√	√			
2005	GMC truck	Yukon Denali	Passenger presence system		√	√			0512
2005	GMC truck	Yukon Denali	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Yukon Denali	Driver door module	√	√	√	√	√	
2005	GMC truck	Yukon Denali	Passenger door module	√	√	√	√	√	
2005	GMC truck	Yukon Denali	Body Control Module	√	√	√	√	√	
2005	GMC truck	Yukon Denali	Driver seat module	√	√	√	√	√	
2005	GMC truck	Yukon Denali	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Yukon Denali	Rear aux. climate module	√	√	√	√	√	
2005	GMC truck	Yukon Denali	Rear HVAC	√	√	√	√		
2005	GMC truck	Yukon Denali	Rear seat audio	√	√	√	√		
2005	GMC truck	Yukon Denali	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Yukon Denali	Generator battery control module	√	√	√	√	√	0631
2005	GMC truck	Yukon Denali	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Yukon Denali	Traction assist (if equipped)		√	√	√	√	
2005	GMC truck	Yukon Denali	ABS	√	√	√	√	√	
2005	GMC truck	Yukon Denali	Rear wheel steering	√	√	√	√	√	
2005	GMC truck	Yukon Denali	ESC (if equipped)	√	√	√	√	√	0648
2005	GMC truck	Yukon Denali	Tire pressure monitor	√	√	√	√	√	0159
2005	GMC truck	Yukon Denali	EHPS (parallel hybrid)	√	√	√	√	√	0648
2005	GMC truck	Yukon XL - 2WD	Powertrain	√	√	√	√	√	0661
2005	GMC truck	Yukon XL - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2005	GMC truck	Yukon XL - 2WD	CD changer	√	√	√			
2005	GMC truck	Yukon XL - 2WD	Chime	√	√	√	√	√	
2005	GMC truck	Yukon XL - 2WD	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Yukon XL - 2WD	Radio	√	√	√	√		
2005	GMC truck	Yukon XL - 2WD	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	GMC truck	Yukon XL - 2WD	Disc player and video delay	√	√	√			
2005	GMC truck	Yukon XL - 2WD	Passenger presence system		√	√			0512

2005	GMC truck	Yukon XL - 2WD	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Yukon XL - 2WD	Driver door module	√	√	√	√	√	
2005	GMC truck	Yukon XL - 2WD	Passenger door module	√	√	√	√	√	
2005	GMC truck	Yukon XL - 2WD	Body Control Module	√	√	√	√	√	
2005	GMC truck	Yukon XL - 2WD	Driver seat module	√	√	√	√	√	
2005	GMC truck	Yukon XL - 2WD	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Yukon XL - 2WD	Rear aux. climate module	√	√	√	√	√	
2005	GMC truck	Yukon XL - 2WD	Rear HVAC	√	√	√	√		
2005	GMC truck	Yukon XL - 2WD	Rear seat audio	√	√	√	√		
2005	GMC truck	Yukon XL - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Yukon XL - 2WD	Generator battery control module	√	√	√	√	√	0631
2005	GMC truck	Yukon XL - 2WD	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Yukon XL - 2WD	Traction assist (if equipped)		√	√	√	√	
2005	GMC truck	Yukon XL - 2WD	ABS	√	√	√	√	√	
2005	GMC truck	Yukon XL - 2WD	Rear wheel steering	√	√	√	√	√	
2005	GMC truck	Yukon XL - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2005	GMC truck	Yukon XL - 2WD	Tire pressure monitor	√	√	√	√	√	0159
2005	GMC truck	Yukon XL - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2005	GMC truck	Yukon XL - 4WD	Powertrain	√	√	√	√	√	0661
2005	GMC truck	Yukon XL - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2005	GMC truck	Yukon XL - 4WD	CD changer	√	√	√			
2005	GMC truck	Yukon XL - 4WD	Chime	√	√	√	√	√	
2005	GMC truck	Yukon XL - 4WD	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Yukon XL - 4WD	Radio	√	√	√	√		
2005	GMC truck	Yukon XL - 4WD	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	GMC truck	Yukon XL - 4WD	Disc player and video dilay	√	√	√			
2005	GMC truck	Yukon XL - 4WD	Passenger presence system		√	√			0512
2005	GMC truck	Yukon XL - 4WD	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Yukon XL - 4WD	Driver door module	√	√	√	√	√	
2005	GMC truck	Yukon XL - 4WD	Passenger door module	√	√	√	√	√	
2005	GMC truck	Yukon XL - 4WD	Body Control Module	√	√	√	√	√	
2005	GMC truck	Yukon XL - 4WD	Driver seat module	√	√	√	√	√	
2005	GMC truck	Yukon XL - 4WD	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Yukon XL - 4WD	Rear aux. climate module	√	√	√	√	√	
2005	GMC truck	Yukon XL - 4WD	Rear HVAC	√	√	√	√		
2005	GMC truck	Yukon XL - 4WD	Rear seat audio	√	√	√	√		
2005	GMC truck	Yukon XL - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Yukon XL - 4WD	Generator battery control module	√	√	√	√	√	0631
2005	GMC truck	Yukon XL - 4WD	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Yukon XL - 4WD	Traction assist (if equipped)		√	√	√	√	
2005	GMC truck	Yukon XL - 4WD	ABS	√	√	√	√	√	



2005	GMC truck	Yukon XL - 4WD	Rear wheel steering	√	√	√	√	√	
2005	GMC truck	Yukon XL - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2005	GMC truck	Yukon XL - 4WD	Tire pressure monitor	√	√	√	√	√	0159
2005	GMC truck	Yukon XL - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2005	GMC truck	Yukon XL Denali	Powertrain	√	√	√	√	√	
2005	GMC truck	Yukon XL Denali	Amplifier (bose)	√	√	√	√	√	0631
2005	GMC truck	Yukon XL Denali	CD changer	√	√	√			
2005	GMC truck	Yukon XL Denali	Chime	√	√	√	√	√	
2005	GMC truck	Yukon XL Denali	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Yukon XL Denali	Radio	√	√	√	√		
2005	GMC truck	Yukon XL Denali	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	GMC truck	Yukon XL Denali	Disc player and video dilay	√	√	√			
2005	GMC truck	Yukon XL Denali	Passenger presence system		√	√			0512
2005	GMC truck	Yukon XL Denali	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Yukon XL Denali	Driver door module	√	√	√	√	√	
2005	GMC truck	Yukon XL Denali	Passenger door module	√	√	√	√	√	
2005	GMC truck	Yukon XL Denali	Body Control Module	√	√	√	√	√	
2005	GMC truck	Yukon XL Denali	Driver seat module	√	√	√	√	√	
2005	GMC truck	Yukon XL Denali	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Yukon XL Denali	Rear aux. climate module	√	√	√	√	√	
2005	GMC truck	Yukon XL Denali	Rear HVAC	√	√	√	√		
2005	GMC truck	Yukon XL Denali	Rear seat audio	√	√	√	√		
2005	GMC truck	Yukon XL Denali	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Yukon XL Denali	Generator battery control module	√	√	√	√	√	0631
2005	GMC truck	Yukon XL Denali	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Yukon XL Denali	Traction assist (if equipped)		√	√	√	√	
2005	GMC truck	Yukon XL Denali	ABS	√	√	√	√	√	
2005	GMC truck	Yukon XL Denali	Rear wheel steering	√	√	√	√	√	
2005	GMC truck	Yukon XL Denali	ESC (if equipped)	√	√	√	√	√	0648
2005	GMC truck	Yukon XL Denali	Tire pressure monitor	√	√	√	√	√	0159
2005	GMC truck	Yukon XL Denali	EHPS (parallel hybrid)	√	√	√	√	√	0648
2005	Pontiac	Aztek - AWD	Powertrain	√	√	√	√	√	
2005	Pontiac	Aztek - AWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Pontiac	Aztek - AWD	Disc player and video dilay	√	√	√			
2005	Pontiac	Aztek - AWD	Digital radio receiver	√	√	√	√		0516
2005	Pontiac	Aztek - AWD	Radio					√	
2005	Pontiac	Aztek - AWD	Vehicle theft deterrent		√	√	√		
2005	Pontiac	Aztek - AWD	Passenger presence system		√	√			0512
2005	Pontiac	Aztek - AWD	Head up dilay		√	√	√		
2005	Pontiac	Aztek - AWD	Instrument panel cluster		√	√	√	√	
2005	Pontiac	Aztek - AWD	Body Control Module	√	√	√	√	√	0560 0515 0628 0614

2005	Pontiac	Aztek - AWD	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	Pontiac	Aztek - AWD	Chassis	√	√	√	√	√	0506
2005	Pontiac	Aztek - FWD	Powertrain	√	√	√	√	√	
2005	Pontiac	Aztek - FWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Pontiac	Aztek - FWD	Disc player and video delay	√	√	√			
2005	Pontiac	Aztek - FWD	Digital radio receiver	√	√	√	√		0516
2005	Pontiac	Aztek - FWD	Radio					√	
2005	Pontiac	Aztek - FWD	Vehicle theft deterrent		√	√	√		
2005	Pontiac	Aztek - FWD	Passenger presence system		√	√			0512
2005	Pontiac	Aztek - FWD	Head up delay		√	√	√		
2005	Pontiac	Aztek - FWD	Instrument panel cluster		√	√	√	√	
2005	Pontiac	Aztek - FWD	Body Control Module	√	√	√	√	√	0560 0515 0628 0614
2005	Pontiac	Aztek - FWD	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	Pontiac	Aztek - FWD	Chassis	√	√	√	√	√	0506
2005	Pontiac	Montana	HVAC	√	√	√	√	√	0499
2005	Pontiac	Montana	Brakes		√	√	√	√	0506
2005	Pontiac	Montana	Engine controls		√	√	√	√	
2005	Pontiac	Montana	Engine cooling		√	√	√	√	
2005	Pontiac	Montana	Engine electrical	√	√	√	√	√	0499
2005	Pontiac	Montana	Shift lock control	√	√	√	√	√	0499
2005	Pontiac	Montana	Automatic transaxle		√	√	√	√	
2005	Pontiac	Montana	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Montana	Cruise Control		√	√	√	√	
2005	Pontiac	Montana	Door	√	√	√	√	√	
2005	Pontiac	Montana	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Montana	Horns	√	√	√	√	√	0499
2005	Pontiac	Montana	Instrument panel	√	√	√	√	√	0499
2005	Pontiac	Montana	Keyless entry	√	√	√	√	√	0499
2005	Pontiac	Montana	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Montana	Navigation System	√	√	√	√	√	0525
2005	Pontiac	Montana	Stationary windows	√	√	√	√	√	
2005	Pontiac	Montana	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Montana	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Montana	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Montana	SIR	√	√	√	√	√	0512
2005	Pontiac	Montana - 4WD	HVAC	√	√	√	√	√	0499
2005	Pontiac	Montana - 4WD	Brakes		√	√	√	√	0506
2005	Pontiac	Montana - 4WD	Engine controls		√	√	√	√	
2005	Pontiac	Montana - 4WD	Engine cooling		√	√	√	√	
2005	Pontiac	Montana - 4WD	Engine electrical	√	√	√	√	√	0499
2005	Pontiac	Montana - 4WD	Shift lock control	√	√	√	√	√	0499

2005	Pontiac	Montana - 4WD	Automatic transaxle		√	√	√	√	
2005	Pontiac	Montana - 4WD	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Montana - 4WD	Cruise Control		√	√	√	√	
2005	Pontiac	Montana - 4WD	Door	√	√	√	√	√	
2005	Pontiac	Montana - 4WD	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Montana - 4WD	Horns	√	√	√	√	√	0499
2005	Pontiac	Montana - 4WD	Instrument panel	√	√	√	√	√	0499
2005	Pontiac	Montana - 4WD	Keyless entry	√	√	√	√	√	0499
2005	Pontiac	Montana - 4WD	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Montana - 4WD	Navigation System	√	√	√	√	√	0525
2005	Pontiac	Montana - 4WD	Stationary windows	√	√	√	√	√	
2005	Pontiac	Montana - 4WD	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Montana - 4WD	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Montana - 4WD	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Montana - 4WD	SIR	√	√	√	√	√	0512
2005	Pontiac	Montana SV6	HVAC	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Brakes		√	√	√	√	0506
2005	Pontiac	Montana SV6	Engine controls		√	√	√	√	
2005	Pontiac	Montana SV6	Engine cooling		√	√	√	√	
2005	Pontiac	Montana SV6	Engine electrical	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Shift lock control	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Automatic transaxle		√	√	√	√	
2005	Pontiac	Montana SV6	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Montana SV6	Cruise Control		√	√	√	√	
2005	Pontiac	Montana SV6	Door	√	√	√	√	√	
2005	Pontiac	Montana SV6	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Montana SV6	Horns	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Instrument panel	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Keyless entry	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Navigation System	√	√	√	√	√	0525
2005	Pontiac	Montana SV6	Stationary windows	√	√	√	√	√	
2005	Pontiac	Montana SV6	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Montana SV6	SIR	√	√	√	√	√	0512
2005	Pontiac	Montana SV6	HVAC	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Brakes		√	√	√	√	0506
2005	Pontiac	Montana SV6	Engine controls		√	√	√	√	
2005	Pontiac	Montana SV6	Engine cooling		√	√	√	√	
2005	Pontiac	Montana SV6	Engine electrical	√	√	√	√	√	0499

2005	Pontiac	Montana SV6	Shift lock control	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Automatic transaxle		√	√	√	√	
2005	Pontiac	Montana SV6	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Montana SV6	Cruise Control		√	√	√	√	
2005	Pontiac	Montana SV6	Door	√	√	√	√	√	
2005	Pontiac	Montana SV6	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Montana SV6	Horns	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Instrument panel	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Keyless entry	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Navigation System	√	√	√	√	√	0525
2005	Pontiac	Montana SV6	Stationary windows	√	√	√	√	√	
2005	Pontiac	Montana SV6	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Montana SV6	SIR	√	√	√	√	√	0512
2005	Pontiac	Montana SV6	Powertrain	√	√	√	√	√	
2005	Pontiac	Montana SV6	Digital radio receiver	√	√	√	√		0516
2005	Pontiac	Montana SV6	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2005	Pontiac	Montana SV6	Vehicle theft deterrent		√	√	√		
2005	Pontiac	Montana SV6	Driver information center		√	√			
2005	Pontiac	Montana SV6	Instrument panel cluster		√	√	√	√	0682 0628
2005	Pontiac	Montana SV6	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636 0572 0552 0572 0524
2005	Pontiac	Montana SV6	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	Pontiac	Montana SV6	Chassis	√	√	√	√	√	0506
2005	Pontiac	Montana SV6	HVAC	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Brakes		√	√	√	√	0506
2005	Pontiac	Montana SV6	Engine controls		√	√	√	√	
2005	Pontiac	Montana SV6	Engine cooling		√	√	√	√	
2005	Pontiac	Montana SV6	Engine electrical	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Shift lock control	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Automatic transaxle		√	√	√	√	
2005	Pontiac	Montana SV6	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Montana SV6	Cruise Control		√	√	√	√	
2005	Pontiac	Montana SV6	Door	√	√	√	√	√	
2005	Pontiac	Montana SV6	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Montana SV6	Horns	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Instrument panel	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Keyless entry	√	√	√	√	√	0499

2005	Pontiac	Montana SV6	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Navigation System	√	√	√	√	√	0525
2005	Pontiac	Montana SV6	Stationary windows	√	√	√	√	√	
2005	Pontiac	Montana SV6	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Montana SV6	SIR	√	√	√	√	√	0512
2005	Pontiac	Montana SV6 - AWD	HVAC	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Brakes		√	√	√	√	0506
2005	Pontiac	Montana SV6 - AWD	Engine controls		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Engine cooling		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Engine electrical	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Shift lock control	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Automatic transaxle		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Montana SV6 - AWD	Cruise Control		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Door	√	√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Montana SV6 - AWD	Horns	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Instrument panel	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Keyless entry	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Navigation System	√	√	√	√	√	0525
2005	Pontiac	Montana SV6 - AWD	Stationary windows	√	√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Montana SV6 - AWD	SIR	√	√	√	√	√	0512
2005	Pontiac	Montana SV6 - AWD	HVAC	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Brakes		√	√	√	√	0506
2005	Pontiac	Montana SV6 - AWD	Engine controls		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Engine cooling		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Engine electrical	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Shift lock control	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Automatic transaxle		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Montana SV6 - AWD	Cruise Control		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Door	√	√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Montana SV6 - AWD	Horns	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Instrument panel	√	√	√	√	√	0499

2005	Pontiac	Montana SV6 - AWD	Keyless entry	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Navigation System	√	√	√	√	√	0525
2005	Pontiac	Montana SV6 - AWD	Stationary windows	√	√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Montana SV6 - AWD	SIR	√	√	√	√	√	0512
2005	Pontiac	Montana SV6 - AWD	Powertrain	√	√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Digital radio receiver	√	√	√	√		0516
2005	Pontiac	Montana SV6 - AWD	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2005	Pontiac	Montana SV6 - AWD	Vehicle theft deterrent		√	√	√		
2005	Pontiac	Montana SV6 - AWD	Driver information center		√	√			
2005	Pontiac	Montana SV6 - AWD	Instrument panel cluster		√	√	√	√	0682 0628
2005	Pontiac	Montana SV6 - AWD	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636 0572 0552 0572 0524
2005	Pontiac	Montana SV6 - AWD	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	Pontiac	Montana SV6 - AWD	Chassis	√	√	√	√	√	0506
2005	Pontiac	Montana SV6 - AWD	HVAC	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Brakes		√	√	√	√	0506
2005	Pontiac	Montana SV6 - AWD	Engine controls		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Engine cooling		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Engine electrical	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Shift lock control	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Automatic transaxle		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Montana SV6 - AWD	Cruise Control		√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Door	√	√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Montana SV6 - AWD	Horns	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Instrument panel	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Keyless entry	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Navigation System	√	√	√	√	√	0525
2005	Pontiac	Montana SV6 - AWD	Stationary windows	√	√	√	√	√	
2005	Pontiac	Montana SV6 - AWD	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 - AWD	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Montana SV6 - AWD	SIR	√	√	√	√	√	0512
2005	Pontiac	Montana SV6 Ext.	HVAC	√	√	√	√	√	0499

2005	Pontiac	Montana SV6 Ext.	Brakes		√	√	√	√	0506
2005	Pontiac	Montana SV6 Ext.	Engine controls		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Engine cooling		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Engine electrical	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Shift lock control	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Automatic transaxle		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Montana SV6 Ext.	Cruise Control		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Door	√	√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Montana SV6 Ext.	Horns	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Instrument panel	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Keyless entry	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Navigation System	√	√	√	√	√	0525
2005	Pontiac	Montana SV6 Ext.	Stationary windows	√	√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Montana SV6 Ext.	SIR	√	√	√	√	√	0512
2005	Pontiac	Montana SV6 Ext.	HVAC	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Brakes		√	√	√	√	0506
2005	Pontiac	Montana SV6 Ext.	Engine controls		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Engine cooling		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Engine electrical	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Shift lock control	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Automatic transaxle		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Montana SV6 Ext.	Cruise Control		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Door	√	√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Montana SV6 Ext.	Horns	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Instrument panel	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Keyless entry	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Navigation System	√	√	√	√	√	0525
2005	Pontiac	Montana SV6 Ext.	Stationary windows	√	√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Montana SV6 Ext.	SIR	√	√	√	√	√	0512

2005	Pontiac	Montana SV6 Ext.	Powertrain	√	√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Digital radio receiver	√	√	√	√		0516
2005	Pontiac	Montana SV6 Ext.	Vehicle comm. interface module	√	√	√	√	√	0647 0585
2005	Pontiac	Montana SV6 Ext.	Vehicle theft deterrent		√	√	√		
2005	Pontiac	Montana SV6 Ext.	Driver information center		√	√			
2005	Pontiac	Montana SV6 Ext.	Instrument panel cluster		√	√	√	√	0682 0628
2005	Pontiac	Montana SV6 Ext.	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636 0572 0552 0572 0524
2005	Pontiac	Montana SV6 Ext.	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	Pontiac	Montana SV6 Ext.	Chassis	√	√	√	√	√	0506
2005	Pontiac	Montana SV6 Ext.	HVAC	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Brakes		√	√	√	√	0506
2005	Pontiac	Montana SV6 Ext.	Engine controls		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Engine cooling		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Engine electrical	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Shift lock control	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Automatic transaxle		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Pontiac	Montana SV6 Ext.	Cruise Control		√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Door	√	√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Entertainment	√	√	√	√	√	0516
2005	Pontiac	Montana SV6 Ext.	Horns	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Instrument panel	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Keyless entry	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Lighting systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Navigation System	√	√	√	√	√	0525
2005	Pontiac	Montana SV6 Ext.	Stationary windows	√	√	√	√	√	
2005	Pontiac	Montana SV6 Ext.	Theft deterrent	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Wipers/washer systems	√	√	√	√	√	0499
2005	Pontiac	Montana SV6 Ext.	Seat belts	√	√	√	√	√	0515
2005	Pontiac	Montana SV6 Ext.	SIR	√	√	√	√	√	0512
2005	Saturn	Relay	HVAC	√	√	√	√	√	0499
2005	Saturn	Relay	Brakes		√	√	√	√	0506
2005	Saturn	Relay	Engine controls		√	√	√	√	
2005	Saturn	Relay	Engine cooling		√	√	√	√	
2005	Saturn	Relay	Engine electrical	√	√	√	√	√	0499
2005	Saturn	Relay	Shift lock control	√	√	√	√	√	0499
2005	Saturn	Relay	Automatic transaxle		√	√	√	√	
2005	Saturn	Relay	Cellular communication	√	√	√	√	√	0494 0591 0565 0585
2005	Saturn	Relay	Cruise Control		√	√	√	√	



2005	Saturn	Relay	Door	√	√	√	√	√	
2005	Saturn	Relay	Entertainment	√	√	√	√	√	0516
2005	Saturn	Relay	Horns	√	√	√	√	√	0499
2005	Saturn	Relay	Instrument panel	√	√	√	√	√	0499
2005	Saturn	Relay	Keyless entry	√	√	√	√	√	0499
2005	Saturn	Relay	Lighting systems	√	√	√	√	√	0499
2005	Saturn	Relay	Navigation System	√	√	√	√	√	0525
2005	Saturn	Relay	Stationary windows	√	√	√	√	√	
2005	Saturn	Relay	Theft deterrent	√	√	√	√	√	0499
2005	Saturn	Relay	Wipers/washer systems	√	√	√	√	√	0499
2005	Saturn	Relay	Seat belts	√	√	√	√	√	0515
2005	Saturn	Relay	SIR	√	√	√	√	√	0512
2005	Saturn	VUE - AWD	Powertrain	√	√	√	√	√	0493
2005	Saturn	VUE - AWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Saturn	VUE - AWD	Digital radio receiver	√	√	√	√		
2005	Saturn	VUE - AWD	Radio		√	√	√	√	0524 0551
2005	Saturn	VUE - AWD	Body Control Module	√	√	√	√	√	0633 0640 0634 0635
2005	Saturn	VUE - AWD	Supplemental inflatable restraint	√	√	√	√	√	
2005	Saturn	VUE - AWD	Antilock Braking System		√	√	√	√	
2005	Saturn	VUE - FWD	Powertrain	√	√	√	√	√	0493
2005	Saturn	VUE - FWD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	Saturn	VUE - FWD	Digital radio receiver	√	√	√	√		
2005	Saturn	VUE - FWD	Radio		√	√	√	√	0524 0551
2005	Saturn	VUE - FWD	Body Control Module	√	√	√	√	√	0633 0640 0634 0635
2005	Saturn	VUE - FWD	Supplemental inflatable restraint	√	√	√	√	√	
2005	Saturn	VUE - FWD	Antilock Braking System		√	√	√	√	
2005	Hummer	H2	Powertrain	√	√	√	√	√	
2005	Hummer	H2	Digital radio receiver	√	√	√	√		0516
2005	Hummer	H2	Radio	√	√	√	√		
2005	Hummer	H2	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	Hummer	H2	Instrument panel cluster	√	√	√	√	√	
2005	Hummer	H2	Heating and air conditioning	√	√	√	√	√	
2005	Hummer	H2	Passenger door module	√	√	√	√	√	
2005	Hummer	H2	Body Control Module	√	√	√	√	√	
2005	Hummer	H2	Driver seat module	√	√	√	√	√	
2005	Hummer	H2	Rear seat audio	√	√	√	√		
2005	Hummer	H2	Driver door module	√	√	√	√	√	
2005	Hummer	H2	GPS communication module	√	√	√	√	√	0516
2005	Hummer	H2	Navigation radio	√	√	√	√	√	0525
2005	Hummer	H2	Air suension	√	√	√	√	√	
2005	Hummer	H2	ABS		√	√	√	√	0641

2005	SAAB	Saab 9-7x	Powertrain	√	√	√	√	√	0493
2005	SAAB	Saab 9-7x	Digital radio receiver	√	√	√	√		0516
2005	SAAB	Saab 9-7x	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	SAAB	Saab 9-7x	Disc player and video dilay	√	√	√			
2005	SAAB	Saab 9-7x	Instrument panel cluster	√	√	√	√	√	
2005	SAAB	Saab 9-7x	Driver door module	√	√	√	√	√	
2005	SAAB	Saab 9-7x	Driver seat module	√	√	√	√	√	
2005	SAAB	Saab 9-7x	Lift gate module	√	√	√	√	√	
2005	SAAB	Saab 9-7x	Passenger door module	√	√	√	√	√	
2005	SAAB	Saab 9-7x	Rear seat audio	√	√	√	√		
2005	SAAB	Saab 9-7x	Heating and air conditioning	√	√	√	√	√	
2005	SAAB	Saab 9-7x	Radio	√	√	√	√	√	0572 0524
2005	SAAB	Saab 9-7x	Body Control Module	√	√	√	√	√	0550
2005	SAAB	Saab 9-7x	Vehicle theft deterrent	√	√	√	√		
2005	SAAB	Saab 9-7x	Passenger presence system		√	√			0512
2005	SAAB	Saab 9-7x	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	SAAB	Saab 9-7x	ABS	√	√	√	√	√	
2004	Buick	Century	Powertrain	√	√	√	√	√	
2004	Buick	Century	Onstar	√	√	√	√	√	0647 0683
2004	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0628 0573 0636 0572
2004	Buick	Century	Supplemental inflatable restraint		√	√	√		0515
2004	Buick	Century	Chassis	√	√	√	√	√	0506
2004	Buick	LeSabre	Powertrain	√	√	√	√	√	
2004	Buick	LeSabre	Onstar	√	√	√	√	√	0647 0683
2004	Buick	LeSabre	Digital radio receiver	√	√	√	√		0516
2004	Buick	LeSabre	CD changer	√	√	√	√		
2004	Buick	LeSabre	Climate control panel		√	√			
2004	Buick	LeSabre	Dash integration module		√	√			0614 0664 0615 0619 0665 0666 0618 0604
2004	Buick	LeSabre	Driver door module	√	√	√	√	√	
2004	Buick	LeSabre	Head up dilay		√	√		√	
2004	Buick	LeSabre	Instrument panel module		√	√			0630 0667
2004	Buick	LeSabre	Rear integration module		√	√			
2004	Buick	LeSabre	Remote function actuation	√	√	√	√	√	
2004	Buick	LeSabre	Instrument panel cluster		√	√		√	
2004	Buick	LeSabre	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636
2004	Buick	LeSabre	Vehicle theft deterrent	√	√	√	√	√	
2004	Buick	LeSabre	Supplemental inflatable restraint	√	√	√	√	√	0604
2004	Buick	LeSabre	DRP/ABS/TIM		√	√	√	√	0506
2004	Buick	LeSabre	Powertrain	√	√	√	√	√	

2004	Buick	LeSabre	Onstar	√	√	√	√	√	0647 0683
2004	Buick	LeSabre	Digital radio receiver	√	√	√	√		0516
2004	Buick	LeSabre	CD changer	√	√	√	√		
2004	Buick	LeSabre	Climate control panel		√	√			
2004	Buick	LeSabre	Dash integration module		√	√			0614 0664 0615 0619 0665 0666 0618 0604
2004	Buick	LeSabre	Driver door module	√	√	√	√	√	
2004	Buick	LeSabre	Head up delay		√	√		√	
2004	Buick	LeSabre	Instrument panel module		√	√			0630 0667
2004	Buick	LeSabre	Memory seat module	√	√	√	√	√	
2004	Buick	LeSabre	Rear integration module		√	√			
2004	Buick	LeSabre	Remote function actuation	√	√	√	√	√	
2004	Buick	LeSabre	Instrument panel cluster		√	√		√	
2004	Buick	LeSabre	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636
2004	Buick	LeSabre	Vehicle theft deterrent	√	√	√	√	√	
2004	Buick	LeSabre	Supplemental inflatable restraint	√	√	√	√	√	0604
2004	Buick	LeSabre	DRP/ABS/TIM		√	√	√	√	0506
2004	Buick	Park Avenue	Powertrain	√	√	√	√	√	
2004	Buick	Park Avenue	Onstar	√	√	√	√	√	0647 0495 0683
2004	Buick	Park Avenue	Driver door module	√	√	√	√	√	
2004	Buick	Park Avenue	Memory seat module	√	√	√	√	√	0669
2004	Buick	Park Avenue	Heating and air conditioning	√	√	√	√	√	0630
2004	Buick	Park Avenue	Remote function actuation	√			√	√	
2004	Buick	Park Avenue	Body Control Module	√	√	√	√	√	0614 0668 0550
2004	Buick	Park Avenue	Cellular telephone	√	√	√	√		0684
2004	Buick	Park Avenue	Instrument panel cluster	√	√	√	√	√	0550 0550
2004	Buick	Park Avenue	Vehicle theft deterrent		√	√	√		
2004	Buick	Park Avenue	DRP/ABS/TIM		√	√	√	√	0506
2004	Buick	Regal	Powertrain	√	√	√	√	√	
2004	Buick	Regal	Onstar	√	√	√	√	√	0647 0683
2004	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0628 0573 0636 0572
2004	Buick	Regal	Supplemental inflatable restraint		√	√	√		0515
2004	Buick	Regal	Chassis	√	√	√	√	√	0506
2004	Cadillac	CTS	Powertrain	√	√	√	√	√	
2004	Cadillac	CTS	Onstar	√	√	√	√	√	0647 0683
2004	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2004	Cadillac	CTS	Dash integration module	√	√	√	√	√	0610 0611 0612
2004	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2004	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	

2004	Cadillac	CTS	Climate control panel	√	√	√	√	√	0614 0615 0616 0617 0618 0619 0620 0621 0622 0623 0624 0625
2004	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2004	Cadillac	CTS	Driver door switch	√	√	√	√		
2004	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2004	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2004	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2004	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2004	Cadillac	CTS	Instrument panel cluster		√	√			
2004	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2004	Cadillac	CTS	Remote function actuation	√	√	√	√	√	
2004	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2004	Cadillac	CTS	Vehicle theft deterrent	√	√	√	√		
2004	Cadillac	CTS	Radio	√	√	√	√	√	0606 0586 0587 0578 0579 0607 0525 0525
2004	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2004	Cadillac	CTS	Powertrain	√	√	√	√	√	
2004	Cadillac	CTS	Onstar	√	√	√	√	√	0647 0683
2004	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2004	Cadillac	CTS	Dash integration module	√	√	√	√	√	0610 0611 0612
2004	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2004	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2004	Cadillac	CTS	Climate control panel	√	√	√	√	√	0614 0615 0616 0617 0618 0619 0620 0621 0622 0623 0624 0625
2004	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2004	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2004	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2004	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2004	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2004	Cadillac	CTS	Instrument panel cluster		√	√			
2004	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2004	Cadillac	CTS	Remote function actuation	√	√	√	√	√	
2004	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2004	Cadillac	CTS	Vehicle theft deterrent	√	√	√	√		
2004	Cadillac	CTS	Radio	√	√	√	√	√	0606 0586 0587 0578 0579 0607 0525 0525
2004	Cadillac	CTS	Driver door switch	√	√	√	√	√	0604 0605
2004	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2004	Cadillac	CTS	Onstar	√	√	√	√	√	0647 0683
2004	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516

2004	Cadillac	CTS	Dash integration module	√	√	√	√	√	0610 0611 0612
2004	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	
2004	Cadillac	CTS	Amplifier (delco)	√	√	√	√	√	
2004	Cadillac	CTS	Climate control panel	√	√	√	√	√	0614 0615 0616 0617 0618 0619 0620 0621 0622 0623 0624 0625
2004	Cadillac	CTS	Driver door module	√	√	√	√	√	0608
2004	Cadillac	CTS	Left rear door module	√	√	√	√	√	
2004	Cadillac	CTS	Passenger door module	√	√	√	√	√	0608
2004	Cadillac	CTS	Right rear door module	√	√	√	√	√	
2004	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2004	Cadillac	CTS	Instrument panel cluster		√	√			
2004	Cadillac	CTS	Memory seat module	√	√	√	√	√	
2004	Cadillac	CTS	Remote function actuation	√	√	√	√	√	
2004	Cadillac	CTS	TV antenna module	√	√	√	√	√	
2004	Cadillac	CTS	Vehicle theft deterrent	√	√	√	√		
2004	Cadillac	CTS	Radio	√	√	√	√	√	0606 0586 0587 0578 0579 0607 0525 0525
2004	Cadillac	CTS	Driver door switch	√	√	√	√	√	0604 0605
2004	Cadillac	CTS	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2004	Cadillac	CTS	Tire pressure monitor		√	√	√	√	0629
2004	Cadillac	CTS	Powertrain	√	√	√	√	√	
2004	Cadillac	Deville	Powertrain	√	√	√	√	√	
2004	Cadillac	Deville	Memory seat module					√	
2004	Cadillac	Deville	Onstar	√	√	√	√	√	0647 0683
2004	Cadillac	Deville	Digital radio receiver	√	√	√	√		0516
2004	Cadillac	Deville	Navigation radio	√	√	√	√		0658
2004	Cadillac	Deville	Amplifier (delco)		√	√	√	√	
2004	Cadillac	Deville	CD changer	√	√	√	√		
2004	Cadillac	Deville	Dash integration module		√	√			0664 0615 0670 0628
2004	Cadillac	Deville	Instrument panel module		√	√			0630
2004	Cadillac	Deville	Rear climate control panel		√	√			
2004	Cadillac	Deville	Remote function actuation		√	√	√	√	0672
2004	Cadillac	Deville	Vehicle theft deterrent		√	√	√		
2004	Cadillac	Deville	Radio		√	√		√	0671 0578 0579 0525
2004	Cadillac	Deville	Instrument panel cluster		√	√	√	√	0586
2004	Cadillac	Deville	Driver door module	√	√	√	√	√	
2004	Cadillac	Deville	Rear integration module		√	√			
2004	Cadillac	Deville	Personalization		√	√	√	√	0630 0667
2004	Cadillac	Deville	Right rear door module	√	√	√	√	√	
2004	Cadillac	Deville	Left rear door module	√	√	√	√	√	
2004	Cadillac	Deville	Passenger door module	√	√	√	√	√	

2004	Cadillac	Deville	Driver door switch	√	√	√	√		0604 0605
2004	Cadillac	Deville	eed sensitive steering		√	√	√		
2004	Cadillac	DHS	Powertrain	√	√	√	√	√	
2004	Cadillac	DHS	Onstar	√	√	√	√	√	0647 0683
2004	Cadillac	DHS	Digital radio receiver	√	√	√	√		0516
2004	Cadillac	DHS	Navigation radio	√	√	√	√		0658
2004	Cadillac	DHS	CD changer	√	√	√	√		
2004	Cadillac	DHS	Dash integration module		√	√			0664 0615 0670 0628
2004	Cadillac	DHS	Instrument panel cluster				√		0608
2004	Cadillac	DHS	Instrument panel module		√	√			0630
2004	Cadillac	DHS	Rear climate control panel		√	√			
2004	Cadillac	DHS	Remote function actuation		√	√	√	√	0672
2004	Cadillac	DHS	Vehicle theft deterrent		√	√	√		
2004	Cadillac	DHS	Radio		√	√	√	√	0671 0578 0579 0525
2004	Cadillac	DHS	Amplifier (bose)		√	√	√	√	
2004	Cadillac	DHS	Memory seat module		√	√	√	√	0618
2004	Cadillac	DHS	Driver door module	√	√	√	√	√	
2004	Cadillac	DHS	Rear integration module		√	√			
2004	Cadillac	DHS	Personalization		√	√	√	√	0630 0667
2004	Cadillac	DHS	Right rear door module	√	√	√	√	√	
2004	Cadillac	DHS	Left rear door module	√	√	√	√	√	
2004	Cadillac	DHS	Passenger door module	√	√	√	√	√	
2004	Cadillac	DHS	Driver door switch	√	√	√	√		0604 0605
2004	Cadillac	DHS	eed sensitive steering		√	√	√		
2004	Cadillac	DTS	Powertrain	√	√	√	√	√	
2004	Cadillac	DTS	Onstar	√	√	√	√	√	0647 0683
2004	Cadillac	DTS	Digital radio receiver	√	√	√	√		0516
2004	Cadillac	DTS	Navigation radio	√	√	√	√		0658
2004	Cadillac	DTS	CD changer	√	√	√	√		
2004	Cadillac	DTS	Dash integration module		√	√			0664 0615 0670 0628
2004	Cadillac	DTS	Instrument panel cluster				√		0608
2004	Cadillac	DTS	Instrument panel module		√	√			0630
2004	Cadillac	DTS	Rear climate control panel		√	√			
2004	Cadillac	DTS	Remote function actuation		√	√	√	√	0672
2004	Cadillac	DTS	Vehicle theft deterrent		√	√	√		
2004	Cadillac	DTS	Radio		√	√	√	√	0671 0578 0579 0525
2004	Cadillac	DTS	Amplifier (bose)		√	√	√	√	
2004	Cadillac	DTS	Memory seat module		√	√	√	√	0618
2004	Cadillac	DTS	Driver door module	√	√	√	√	√	
2004	Cadillac	DTS	Rear integration module		√	√			
2004	Cadillac	DTS	Personalization		√	√	√	√	0630 0667

2004	Cadillac	DTS	Right rear door module	√	√	√	√	√	
2004	Cadillac	DTS	Left rear door module	√	√	√	√	√	
2004	Cadillac	DTS	Passenger door module	√	√	√	√	√	
2004	Cadillac	DTS	Driver door switch	√	√	√	√		0604 0605
2004	Cadillac	DTS	eed sensitive steering		√	√	√		
2004	Cadillac	Seville	Powertrain	√	√	√	√	√	
2004	Cadillac	Seville	Onstar	√	√	√	√	√	0647 0683
2004	Cadillac	Seville	Digital radio receiver	√	√	√	√		0516
2004	Cadillac	Seville	Instrument panel module		√	√	√	√	
2004	Cadillac	Seville	Dash integration module		√	√	√	√	0614 0617 0686 0687
2004	Cadillac	Seville	Navigation radio	√	√	√	√		0658
2004	Cadillac	Seville	Amplifier (delco)		√	√	√	√	
2004	Cadillac	Seville	CD changer	√	√	√	√		0664 0615 0670 0628
2004	Cadillac	Seville	Driver door module		√	√	√	√	
2004	Cadillac	Seville	Instrument panel cluster		√	√	√		0608
2004	Cadillac	Seville	Remote function actuation		√	√	√	√	0672
2004	Cadillac	Seville	Vehicle theft deterrent		√	√	√		
2004	Cadillac	Seville	Radio		√	√	√	√	0671 0578 0579 0525
2004	Cadillac	Seville	Memory seat module		√	√	√	√	
2004	Cadillac	Seville	Amplifier (bose)		√	√	√	√	
2004	Cadillac	Seville	Rear integration module		√	√	√	√	0674
2004	Cadillac	Seville	eed sensitive steering		√	√	√		
2004	Cadillac	Seville	Powertrain	√	√	√	√	√	
2004	Cadillac	Seville	Onstar	√	√	√	√	√	0647 0683
2004	Cadillac	Seville	Digital radio receiver	√	√	√	√		0516
2004	Cadillac	Seville	Instrument panel module		√	√	√	√	
2004	Cadillac	Seville	Dash integration module		√	√	√	√	0614 0617 0686 0687
2004	Cadillac	Seville	Navigation radio	√	√	√	√		0658
2004	Cadillac	Seville	Amplifier (delco)		√	√	√	√	
2004	Cadillac	Seville	CD changer	√	√	√	√		0664 0615 0670 0628
2004	Cadillac	Seville	Driver door module		√	√	√	√	
2004	Cadillac	Seville	Instrument panel cluster		√	√	√		0608
2004	Cadillac	Seville	Remote function actuation		√	√	√	√	0672
2004	Cadillac	Seville	Vehicle theft deterrent		√	√	√		
2004	Cadillac	Seville	Radio		√	√	√	√	0671 0578 0579 0525
2004	Cadillac	Seville	Memory seat module		√	√	√	√	
2004	Cadillac	Seville	Amplifier (bose)		√	√	√	√	
2004	Cadillac	Seville	Rear integration module		√	√	√	√	0674
2004	Cadillac	Seville	eed sensitive steering		√	√	√		
2004	Cadillac	XLR	HVAC systems - automatic	√	√	√	√	√	0500 0493
2004	Cadillac	XLR	Variable effort steering		√	√	√	√	

2004	Cadillac	XLR	Steering wheel and column		√	√	√	√	
2004	Cadillac	XLR	Tire pressure monitoring	√	√	√	√	√	0521
2004	Cadillac	XLR	Electronic suspension control (ESC)		√	√	√	√	
2004	Cadillac	XLR	Antilock Braking System	√	√	√	√	√	0506 0493
2004	Cadillac	XLR	Hydraulic brakes		√	√	√	√	
2004	Cadillac	XLR	Park brake		√	√	√	√	
2004	Cadillac	XLR	Engine controls	√	√	√	√	√	0493
2004	Cadillac	XLR	Engine cooling	√	√	√	√	√	0493
2004	Cadillac	XLR	Engine electrical	√	√	√	√	√	0493
2004	Cadillac	XLR	Shift lock control	√	√	√	√	√	0521
2004	Cadillac	XLR	Automatic transmission	√	√	√	√	√	
2004	Cadillac	XLR	Body rear end	√	√	√	√	√	0521
2004	Cadillac	XLR	Cellular communication	√	√	√	√	√	0647 0585
2004	Cadillac	XLR	Cruise Control	√	√	√	√	√	0493
2004	Cadillac	XLR	Door	√	√	√	√	√	0521
2004	Cadillac	XLR	Entertainment	√	√	√	√	√	0525
2004	Cadillac	XLR	Horns		√	√	√	√	
2004	Cadillac	XLR	Instrument panel	√	√	√	√	√	0493
2004	Cadillac	XLR	Keyless entry		√	√	√	√	0521
2004	Cadillac	XLR	Lighting systems		√	√	√	√	
2004	Cadillac	XLR	Navigation System		√	√	√		0525
2004	Cadillac	XLR	Roof		√	√	√	√	
2004	Cadillac	XLR	Seats		√	√	√	√	0522 0646
2004	Cadillac	XLR	Theft deterrent	√	√	√	√	√	0493
2004	Cadillac	XLR	Wipers/washer systems		√	√	√	√	
2004	Cadillac	XLR	Seat belts				√	√	0515
2004	Cadillac	XLR	SIR				√	√	0515
2004	Chevrolet	Aveo	Powertrain	√	√	√	√	√	0493
2004	Chevrolet	Aveo	Antilock Braking System	√	√	√	√	√	0506
2004	Chevrolet	Aveo	Chassis	√	√	√	√	√	0506
2004	Chevrolet	U100	Powertrain	√	√	√	√	√	0493
2004	Chevrolet	U100	Chassis	√	√	√	√	√	0506
2004	Chevrolet	Alero (export)	Powertrain	√	√	√	√	√	
2004	Chevrolet	Alero (export)	Body Control Module	√	√	√	√	√	0675
2004	Chevrolet	Alero (export)	Chassis	√	√	√	√	√	0506
2004	Chevrolet	Cavalier	Powertrain	√	√	√	√	√	
2004	Chevrolet	Cavalier	Body Control Module	√	√	√	√		
2004	Chevrolet	Cavalier	Digital radio receiver	√	√	√	√		0516
2004	Chevrolet	Cavalier	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	Cavalier	Radio		√	√	√		0515
2004	Chevrolet	Cavalier	Chassis	√	√	√	√	√	0506



2004	Chevrolet	Cavalier (CNG)	Powertrain	√	√	√	√	√	
2004	Chevrolet	Cavalier (CNG)	Body Control Module	√	√	√	√		
2004	Chevrolet	Cavalier (CNG)	Digital radio receiver	√	√	√	√		0516
2004	Chevrolet	Cavalier (CNG)	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	Cavalier (CNG)	Radio		√	√	√		0515
2004	Chevrolet	Cavalier (CNG)	Chassis	√	√	√	√	√	0506
2004	Chevrolet	Classic	Powertrain	√	√	√	√	√	
2004	Chevrolet	Classic	Body Control Module	√	√	√		√	0633
2004	Chevrolet	Classic	Remote function actuation		√	√	√	√	
2004	Chevrolet	Classic	Radio	√	√	√	√	√	
2004	Chevrolet	Classic	Chassis	√	√	√	√	√	0506
2004	Chevrolet	Corvette	Powertrain	√	√	√	√	√	
2004	Chevrolet	Corvette	Body Control Module		√	√	√	√	0673
2004	Chevrolet	Corvette	Supplemental inflatable restraint		√	√	√	√	0673
2004	Chevrolet	Corvette	ABS/TCS	√	√	√	√	√	
2004	Chevrolet	Corvette	RTD	√	√	√	√	√	
2004	Chevrolet	Epica	Powertrain	√	√	√	√	√	0493
2004	Chevrolet	Epica	ISU		√	√	√	√	
2004	Chevrolet	Epica	Antilock Braking System	√	√	√	√	√	0506
2004	Chevrolet	Impala	Powertrain	√	√	√	√	√	
2004	Chevrolet	Impala	Body Control Module		√	√	√	√	0690 0515 0628 0614 0580 0572 0573 0574
2004	Chevrolet	Impala	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	Impala	Digital radio receiver	√	√	√	√		0516
2004	Chevrolet	Impala	Supplemental inflatable restraint		√	√			
2004	Chevrolet	Impala	Heating and air conditioning		√	√			
2004	Chevrolet	Impala	Chassis	√	√	√	√	√	0506
2004	Chevrolet	Malibu	HVAC systems - automatic	√	√	√	√	√	
2004	Chevrolet	Malibu	HVAC systems - manual	√	√	√	√	√	
2004	Chevrolet	Malibu	Power steering system		√	√	√	√	0596
2004	Chevrolet	Malibu	Antilock Braking System	√	√	√	√	√	0506
2004	Chevrolet	Malibu	Hydraulic brakes	√	√	√	√	√	0506
2004	Chevrolet	Malibu	Engine controls		√	√	√	√	
2004	Chevrolet	Malibu	Engine cooling		√	√	√	√	
2004	Chevrolet	Malibu	Engine electrical	√	√	√	√	√	
2004	Chevrolet	Malibu	Shift lock control		√	√	√		
2004	Chevrolet	Malibu	Automatic transmission		√	√	√	√	
2004	Chevrolet	Malibu	Body rear end		√	√	√	√	
2004	Chevrolet	Malibu	Cellular communication	√	√	√	√	√	0647
2004	Chevrolet	Malibu	Cruise Control		√	√	√		
2004	Chevrolet	Malibu	Door		√	√	√	√	

2004	Chevrolet	Malibu	Entertainment	√	√	√	√	√	0516
2004	Chevrolet	Malibu	Instrument panel	√	√	√	√	√	
2004	Chevrolet	Malibu	Keyless entry		√	√	√		
2004	Chevrolet	Malibu	Lighting systems		√	√	√	√	
2004	Chevrolet	Malibu	Stationary windows		√	√	√	√	
2004	Chevrolet	Malibu	Theft deterrent		√	√	√	√	
2004	Chevrolet	Malibu	Wipers/washer systems		√	√	√	√	
2004	Chevrolet	Malibu	Adjustable pedals	√	√	√	√	√	0647
2004	Chevrolet	Malibu	Seat belts	√	√	√	√	√	0515
2004	Chevrolet	Malibu	SIR	√	√	√	√	√	0515
2004	Chevrolet	Monte Carlo	Powertrain	√	√	√	√	√	
2004	Chevrolet	Monte Carlo	Body Control Module		√	√	√	√	0690 0515 0628 0614 0580 0572 0573 0574
2004	Chevrolet	Monte Carlo	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	Monte Carlo	Digital radio receiver	√	√	√	√		0516
2004	Chevrolet	Monte Carlo	Supplemental inflatable restraint		√	√			
2004	Chevrolet	Monte Carlo	Heating and air conditioning		√	√			
2004	Chevrolet	Monte Carlo	Chassis	√	√	√	√	√	0506
2004	Chevrolet	Optra	Powertrain	√	√	√	√	√	0493
2004	Chevrolet	Optra	Antilock Braking System	√	√	√	√	√	0506
2004	Chevrolet	ark	Powertrain	√	√	√	√	√	
2004	Chevrolet	ark	Chassis	√	√	√	√	√	
2004	Chevrolet	Others	Powertrain	√	√	√	√	√	0493
2004	Chevrolet	Others	Antilock Braking System	√	√	√	√	√	0506
2004	Chevrolet	Others	ISU	√	√	√	√	√	
2004	Chevrolet	Monza	Powertrain	√	√	√	√	√	0493
2004	Oldsmobile	Alero	Powertrain	√	√	√	√	√	
2004	Oldsmobile	Alero	Instrument panel cluster	√			√		
2004	Oldsmobile	Alero	Body Control Module	√	√	√	√	√	0633 0675
2004	Oldsmobile	Alero	Radio		√	√	√		
2004	Oldsmobile	Alero	Remote function actuation		√	√	√	√	
2004	Oldsmobile	Alero	Chassis	√	√	√	√	√	0506
2004	Pontiac	Bonneville	Powertrain	√	√	√	√	√	
2004	Pontiac	Bonneville	Onstar	√	√	√	√	√	0647 0683
2004	Pontiac	Bonneville	Digital radio receiver	√	√	√	√		0516
2004	Pontiac	Bonneville	CD changer	√	√	√	√		
2004	Pontiac	Bonneville	Climate control panel		√	√			
2004	Pontiac	Bonneville	Dash integration module		√	√			0614 0664 0615 0619 0665 0666 0618 0604
2004	Pontiac	Bonneville	Head up display		√	√		√	
2004	Pontiac	Bonneville	Instrument panel cluster	√			√		
2004	Pontiac	Bonneville	Instrument panel module		√	√			0630 0667

2004	Pontiac	Bonneville	Rear integration module		√	√			
2004	Pontiac	Bonneville	Remote function actuation	√	√	√	√	√	
2004	Pontiac	Bonneville	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636
2004	Pontiac	Bonneville	Driver door module	√	√	√	√	√	
2004	Pontiac	Bonneville	Vehicle theft deterrent	√	√	√	√	√	0677
2004	Pontiac	Bonneville	Supplemental inflatable restraint	√	√	√	√	√	0604
2004	Pontiac	Bonneville	DRP/ABS/TIM		√	√	√	√	0506
2004	Pontiac	Bonneville	Powertrain	√	√	√	√	√	
2004	Pontiac	Bonneville	Onstar	√	√	√	√	√	0647 0683
2004	Pontiac	Bonneville	Digital radio receiver	√	√	√	√		0516
2004	Pontiac	Bonneville	CD changer	√	√	√	√		
2004	Pontiac	Bonneville	Climate control panel		√	√			
2004	Pontiac	Bonneville	Dash integration module		√	√			0614 0664 0615 0619 0665 0666 0618 0604
2004	Pontiac	Bonneville	Head up dilay		√	√		√	
2004	Pontiac	Bonneville	Instrument panel module		√	√			0630 0667
2004	Pontiac	Bonneville	Rear integration module		√	√			
2004	Pontiac	Bonneville	Remote function actuation	√	√	√	√	√	
2004	Pontiac	Bonneville	Instrument panel cluster	√	√	√	√	√	
2004	Pontiac	Bonneville	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636
2004	Pontiac	Bonneville	Driver door module	√	√	√	√	√	
2004	Pontiac	Bonneville	Vehicle theft deterrent	√	√	√	√		0677
2004	Pontiac	Bonneville	Memory seat module	√	√	√	√	√	
2004	Pontiac	Bonneville	Supplemental inflatable restraint	√	√	√	√	√	0604
2004	Pontiac	Bonneville	DRP/ABS/TIM		√	√	√	√	0506
2004	Pontiac	Bonneville	Powertrain	√	√	√	√	√	
2004	Pontiac	Bonneville	Onstar	√	√	√	√	√	0647 0683
2004	Pontiac	Bonneville	Digital radio receiver	√	√	√	√		0516
2004	Pontiac	Bonneville	CD changer	√	√	√	√		
2004	Pontiac	Bonneville	Climate control panel		√	√			
2004	Pontiac	Bonneville	Dash integration module		√	√			0614 0664 0615 0619 0665 0666 0618 0604
2004	Pontiac	Bonneville	Head up dilay		√	√		√	
2004	Pontiac	Bonneville	Instrument panel module		√	√			0630 0667
2004	Pontiac	Bonneville	Rear integration module		√	√			
2004	Pontiac	Bonneville	Remote function actuation	√	√	√	√	√	
2004	Pontiac	Bonneville	Instrument panel cluster		√	√		√	
2004	Pontiac	Bonneville	Radio	√	√	√	√	√	0573 0574 0575 0576 0577 0578 0579 0636
2004	Pontiac	Bonneville	Driver door module	√	√	√	√	√	0678

2004	Pontiac	Bonneville	Vehicle theft deterrent	√	√	√	√		0677
2004	Pontiac	Bonneville	Memory seat module	√	√	√	√	√	0628
2004	Pontiac	Bonneville	Supplemental inflatable restraint	√	√	√	√	√	0604
2004	Pontiac	Bonneville	DRP/ABS/TIM		√	√	√	√	0506
2004	Pontiac	Bonneville	Magna steer		√	√	√		
2004	Pontiac	GTO	Powertrain	√	√	√	√	√	
2004	Pontiac	GTO	Supplemental inflatable restraint		√	√			
2004	Pontiac	Grand Am	Powertrain	√	√	√	√	√	
2004	Pontiac	Grand Am	Body Control Module	√	√	√	√	√	0633 0675
2004	Pontiac	Grand Am	Instrument panel cluster	√			√		
2004	Pontiac	Grand Am	Radio				√		
2004	Pontiac	Grand Am	Digital radio receiver	√	√	√	√		0516
2004	Pontiac	Grand Am	Remote function actuation		√	√	√	√	
2004	Pontiac	Grand Am	Chassis	√	√	√	√	√	0506
2004	Pontiac	Grand Prix	Powertrain	√	√	√	√	√	
2004	Pontiac	Grand Prix	Onstar	√	√	√	√	√	0647 0683
2004	Pontiac	Grand Prix	Body Control Module		√	√	√	√	0690 0572 0524
2004	Pontiac	Grand Prix	Digital radio receiver	√	√	√	√		0516
2004	Pontiac	Grand Prix	Supplemental inflatable restraint	√	√	√	√		0515
2004	Pontiac	Grand Prix	Driver information center	√	√	√	√	√	0515 0637 0628 0499
2004	Pontiac	Grand Prix	Heating and air conditioning					√	0630
2004	Pontiac	Grand Prix	Chassis		√	√	√	√	0506
2004	Pontiac	Matiz	Powertrain	√	√	√	√	√	
2004	Pontiac	Matiz	Chassis	√	√	√	√	√	
2004	Pontiac	Sunfire	Powertrain	√	√	√	√	√	
2004	Pontiac	Sunfire	Body Control Module	√	√	√	√		
2004	Pontiac	Sunfire	Digital radio receiver	√	√	√	√		0516
2004	Pontiac	Sunfire	Onstar	√	√	√	√	√	0647 0683
2004	Pontiac	Sunfire	Radio		√	√	√		0515
2004	Pontiac	Sunfire	Chassis	√	√	√	√	√	0506
2004	Pontiac	Vibe - AWD	Cruise Control		√	√	√	√	0572
2004	Pontiac	Vibe - AWD	Digital radio receiver	√	√	√	√		0516 0516
2004	Pontiac	Vibe - AWD	Chassis		√	√	√	√	
2004	Pontiac	Vibe - FWD	Cruise Control		√	√	√	√	0572
2004	Pontiac	Vibe - FWD	Digital radio receiver	√	√	√	√		0516 0516
2004	Pontiac	Vibe - FWD	Chassis		√	√	√	√	
2004	Buick	Rainier	Powertrain	√	√	√	√	√	
2004	Buick	Rainier	Onstar	√	√	√	√	√	0647 0683
2004	Buick	Rainier	Digital radio receiver	√	√	√	√		0516
2004	Buick	Rainier	Body Control Module	√	√	√	√	√	0550
2004	Buick	Rainier	Instrument panel cluster	√	√	√	√	√	

2004	Buick	Rainier	Driver door module	√	√	√	√	√	
2004	Buick	Rainier	Passenger door module	√	√	√	√	√	
2004	Buick	Rainier	Driver seat module	√	√	√	√	√	
2004	Buick	Rainier	Heating and air conditioning	√	√	√	√	√	
2004	Buick	Rainier	Supplemental inflatable restraint	√	√	√	√		0531
2004	Buick	Rainier	Amplifier (bose)	√	√	√	√	√	
2004	Buick	Rainier	Radio	√	√	√	√		0524
2004	Buick	Rainier	Rear seat audio	√	√	√	√		
2004	Buick	Rainier	Lift gate module	√	√	√	√	√	
2004	Buick	Rainier	Rear seat entertainment	√	√	√	√	√	0550
2004	Buick	Rainier	Navigation radio	√	√	√	√	√	0525
2004	Buick	Rainier	ABS	√	√	√	√	√	
2004	Buick	Rainier	4WAL 3 sensor	√	√	√	√	√	0647 0683
2004	Buick	Rainier - 2WD	Powertrain	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Onstar	√	√	√	√	√	0647 0683
2004	Buick	Rainier - 2WD	Digital radio receiver	√	√	√	√		0516
2004	Buick	Rainier - 2WD	Body Control Module	√	√	√	√	√	0550
2004	Buick	Rainier - 2WD	Instrument panel cluster	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Driver door module	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Passenger door module	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Driver seat module	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Heating and air conditioning	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	Buick	Rainier - 2WD	Amplifier (bose)	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Radio	√	√	√	√		0524
2004	Buick	Rainier - 2WD	Rear seat audio	√	√	√	√		
2004	Buick	Rainier - 2WD	Lift gate module	√	√	√	√	√	
2004	Buick	Rainier - 2WD	Rear seat entertainment	√	√	√	√	√	0550
2004	Buick	Rainier - 2WD	Navigation radio	√	√	√	√	√	0525
2004	Buick	Rainier - 2WD	ABS	√	√	√	√	√	
2004	Buick	Rainier - 2WD	4WAL 3 sensor	√	√	√	√	√	0647 0683
2004	Buick	Rendezvous - AWD	Powertrain	√	√	√	√	√	
2004	Buick	Rendezvous - AWD	Onstar	√	√	√	√	√	0647 0683
2004	Buick	Rendezvous - AWD	Digital radio receiver	√	√	√	√		0516
2004	Buick	Rendezvous - AWD	Body Control Module		√	√	√	√	0560 0515 0628 0614 0573 0574 0636 0572
2004	Buick	Rendezvous - AWD	Navigation radio	√	√	√	√		0525
2004	Buick	Rendezvous - AWD	Supplemental inflatable restraint		√	√	√		
2004	Buick	Rendezvous - AWD	Vehicle theft deterrent		√	√	√		
2004	Buick	Rendezvous - AWD	Rear seat entertainment	√	√	√			
2004	Buick	Rendezvous - AWD	Head up display		√	√			

2004	Buick	Rendezvous - AWD	Radio	√	√	√	√	√	0573 0574 0636 0572
2004	Buick	Rendezvous - AWD	Chassis	√	√	√	√	√	0506
2004	Buick	Rendezvous - FWD	Powertrain	√	√	√	√	√	
2004	Buick	Rendezvous - FWD	Onstar	√	√	√	√	√	0647 0683
2004	Buick	Rendezvous - FWD	Digital radio receiver	√	√	√	√		0516
2004	Buick	Rendezvous - FWD	Body Control Module		√	√	√	√	0560 0515 0628 0614 0573 0574 0636 0572
2004	Buick	Rendezvous - FWD	Navigation radio	√	√	√	√		0525
2004	Buick	Rendezvous - FWD	Supplemental inflatable restraint		√	√	√		
2004	Buick	Rendezvous - FWD	Vehicle theft deterrent		√	√	√		
2004	Buick	Rendezvous - FWD	Rear seat entertainment	√	√	√			
2004	Buick	Rendezvous - FWD	Head up display		√	√			
2004	Buick	Rendezvous - FWD	Radio	√	√	√	√	√	0573 0574 0636 0572
2004	Buick	Rendezvous - FWD	Chassis	√	√	√	√	√	0506
2004	Cadillac	Escalade	Powertrain	√	√	√	√	√	
2004	Cadillac	Escalade	Digital radio receiver	√	√	√	√		0516
2004	Cadillac	Escalade	Body Control Module	√	√	√	√	√	
2004	Cadillac	Escalade	Instrument panel cluster	√	√	√	√	√	
2004	Cadillac	Escalade	Passenger presence system		√	√			0512
2004	Cadillac	Escalade	Amplifier (bose)	√	√	√	√	√	0631
2004	Cadillac	Escalade	Chime	√	√	√	√	√	
2004	Cadillac	Escalade	Passenger door module	√	√	√	√	√	
2004	Cadillac	Escalade	Driver door module	√	√	√	√	√	
2004	Cadillac	Escalade	Onstar	√	√	√	√	√	0647 0683
2004	Cadillac	Escalade	Driver seat module	√	√	√	√	√	
2004	Cadillac	Escalade	Rear HVAC	√	√	√	√		
2004	Cadillac	Escalade	Heating and air conditioning	√	√	√	√	√	
2004	Cadillac	Escalade	Supplemental inflatable restraint	√	√	√	√		0531
2004	Cadillac	Escalade	CD changer	√	√	√			
2004	Cadillac	Escalade	Radio	√	√	√	√		
2004	Cadillac	Escalade	Rear seat entertainment	√	√	√			
2004	Cadillac	Escalade	Rear seat audio	√	√	√	√		
2004	Cadillac	Escalade	Rear aux. climate module	√	√	√	√	√	0516
2004	Cadillac	Escalade	Navigation radio	√	√	√	√	√	0525
2004	Cadillac	Escalade	Rear wheel steering	√	√	√	√	√	
2004	Cadillac	Escalade	ABS	√	√	√	√	√	
2004	Cadillac	Escalade	ESC (if equipped)	√	√	√	√	√	0648
2004	Cadillac	Escalade	Tire pressure monitor		√	√	√	√	0159
2004	Cadillac	Escalade	Traction assist (if equipped)	√	√	√	√	√	0648
2004	Cadillac	SRX	Powertrain	√	√	√	√	√	0493
2004	Cadillac	SRX	Onstar	√	√	√	√	√	0647 0683

2004	Cadillac	SRX	Digital radio receiver	√	√	√	√		0516
2004	Cadillac	SRX	Amplifier (bose)	√	√	√	√		
2004	Cadillac	SRX	Amplifier (delco)	√	√	√	√	√	
2004	Cadillac	SRX	Climate control panel	√	√	√	√	√	
2004	Cadillac	SRX	Dash integration module	√	√	√	√	√	0614 0615 0616 0618 0619 0620 0621 0622 0623 0624 0625 0626
2004	Cadillac	SRX	Driver door module	√	√	√	√	√	0608
2004	Cadillac	SRX	Driver door switch	√	√	√	√		
2004	Cadillac	SRX	Left rear door module	√	√	√	√	√	
2004	Cadillac	SRX	Right rear door module	√	√	√	√	√	
2004	Cadillac	SRX	Passenger door module	√	√	√	√	√	0608
2004	Cadillac	SRX	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2004	Cadillac	SRX	Memory seat module	√	√	√	√	√	
2004	Cadillac	SRX	Instrument panel cluster	√	√	√	√	√	
2004	Cadillac	SRX	Radio	√	√	√	√		0649 0650 0651 0586 0587 0652 0653 0654 0655 0608 0525 0525
2004	Cadillac	SRX	Remote function actuation	√	√	√	√	√	0610 0611 0612
2004	Cadillac	SRX	Rear seat module	√	√	√	√	√	
2004	Cadillac	SRX	TV antenna module	√	√	√	√	√	
2004	Cadillac	SRX	Vehicle theft deterrent	√	√	√	√		0609 0609 0609 0609
2004	Cadillac	SRX	Disc player and video dilay	√	√	√			
2004	Cadillac	SRX	CD changer	√	√	√	√	√	0604 0605
2004	Cadillac	SRX	Navigation radio	√	√	√	√	√	0658
2004	Cadillac	SRX	DRP/ABS/TCS/VSES	√	√	√	√	√	0506
2004	Cadillac	SRX	Electronic suension control	√	√	√	√	√	
2004	Cadillac	SRX	Tire pressure monitor		√	√	√	√	0629
2004	Cadillac	Incomplete(Hearse)	Powertrain	√	√	√	√	√	
2004	Cadillac	Incomplete(Hearse)	Amplifier (delco)		√	√	√	√	0618 0619 0604 0628 0650 0586 0630 0667 0671 0578 0579 0525
2004	Cadillac	Incomplete(Hearse)	Rear integration module		√	√	√	√	0628 0671 0578 0579 0525 0691 0692
2004	Cadillac	Incomplete(Hearse)	Driver door module	√	√	√	√	√	
2004	Cadillac	Incomplete(Hearse)	Passenger door module	√	√	√	√	√	
2004	Cadillac	Incomplete(Hearse)	Driver door switch	√	√	√	√	√	
2004	Cadillac	Incomplete(Hearse)	DRP/ABS/TCS		√	√	√	√	
2004	Cadillac	Incomplete(Hearse)	Tire pressure monitor		√	√	√		0159 0680 0681
2004	Cadillac	Incomplete(Limousine)	Powertrain	√	√	√	√	√	
2004	Cadillac	Incomplete(Limousine)	Onstar	√	√	√	√	√	0647 0683

2004	Cadillac	Incomplete(Limousine)	Amplifier (delco)		√	√	√	√	0618 0619 0604 0628 0650 0586 0630 0667 0671 0578 0579 0525
2004	Cadillac	Incomplete(Limousine)	Navigation radio	√	√	√	√	√	0658
2004	Cadillac	Incomplete(Limousine)	Driver door module	√	√	√	√	√	
2004	Cadillac	Incomplete(Limousine)	Passenger door module	√	√	√	√	√	
2004	Cadillac	Incomplete(Limousine)	Driver door switch	√	√	√	√	√	
2004	Cadillac	Incomplete(Limousine)	Left rear door module	√	√	√	√	√	
2004	Cadillac	Incomplete(Limousine)	Right rear door module	√	√	√	√	√	
2004	Cadillac	Incomplete(Limousine)	Left mid door module	√	√	√	√	√	
2004	Cadillac	Incomplete(Limousine)	Right mid door module	√	√	√	√	√	
2004	Cadillac	Incomplete(Limousine)	Rear climate control panel		√	√	√	√	
2004	Cadillac	Incomplete(Limousine)	DRP/ABS/TCS		√	√	√	√	
2004	Cadillac	Incomplete(Limousine)	Tire pressure monitor		√	√	√	√	0159 0680 0681
2004	Chevrolet	Astro - 2WD	Powertrain	√	√	√	√	√	0638
2004	Chevrolet	Astro - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0531
2004	Chevrolet	Astro - 2WD	Body Control Module		√	√	√	√	
2004	Chevrolet	Astro - 2WD	Instrument panel cluster		√	√	√	√	
2004	Chevrolet	Astro - 2WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	Chevrolet	Astro - 4WD	Powertrain	√	√	√	√	√	0638
2004	Chevrolet	Astro - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0531
2004	Chevrolet	Astro - 4WD	Body Control Module		√	√	√	√	
2004	Chevrolet	Astro - 4WD	Instrument panel cluster		√	√	√	√	
2004	Chevrolet	Astro - 4WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	Chevrolet	Avalanche - 2WD	Powertrain	√	√	√	√	√	0661
2004	Chevrolet	Avalanche - 2WD	Digital radio receiver	√	√	√	√	√	0516
2004	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	
2004	Chevrolet	Avalanche - 2WD	Instrument panel cluster	√	√	√	√	√	
2004	Chevrolet	Avalanche - 2WD	Passenger presence system		√	√			0512
2004	Chevrolet	Avalanche - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2004	Chevrolet	Avalanche - 2WD	Chime	√	√	√	√	√	
2004	Chevrolet	Avalanche - 2WD	Passenger door module	√	√	√	√	√	
2004	Chevrolet	Avalanche - 2WD	Driver door module	√	√	√	√	√	
2004	Chevrolet	Avalanche - 2WD	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	Avalanche - 2WD	Driver seat module	√	√	√	√	√	
2004	Chevrolet	Avalanche - 2WD	Rear HVAC	√	√	√	√	√	
2004	Chevrolet	Avalanche - 2WD	Heating and air conditioning	√	√	√	√	√	
2004	Chevrolet	Avalanche - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0531
2004	Chevrolet	Avalanche - 2WD	CD changer	√	√	√			
2004	Chevrolet	Avalanche - 2WD	Radio	√	√	√	√		
2004	Chevrolet	Avalanche - 2WD	Rear seat entertainment	√	√	√			



2004	Chevrolet	Avalanche - 2WD	Rear seat audio	√	√	√	√		
2004	Chevrolet	Avalanche - 2WD	Rear aux. climate module	√	√	√	√	√	
2004	Chevrolet	Avalanche - 2WD	Vehicle theft deterrent	√	√	√	√	√	0516
2004	Chevrolet	Avalanche - 2WD	Navigation radio	√	√	√	√	√	0525
2004	Chevrolet	Avalanche - 2WD	Rear wheel steering	√	√	√	√	√	
2004	Chevrolet	Avalanche - 2WD	ABS	√	√	√	√	√	
2004	Chevrolet	Avalanche - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2004	Chevrolet	Avalanche - 2WD	Tire pressure monitor		√	√	√	√	0159
2004	Chevrolet	Avalanche - 2WD	Traction assist (if equipped)	√	√	√	√	√	0648
2004	Chevrolet	Avalanche - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	Chevrolet	Avalanche - 4WD	Powertrain	√	√	√	√	√	0661
2004	Chevrolet	Avalanche - 4WD	Digital radio receiver	√	√	√	√		0516
2004	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	
2004	Chevrolet	Avalanche - 4WD	Instrument panel cluster	√	√	√	√	√	
2004	Chevrolet	Avalanche - 4WD	Passenger presence system		√	√			0512
2004	Chevrolet	Avalanche - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2004	Chevrolet	Avalanche - 4WD	Chime	√	√	√	√	√	
2004	Chevrolet	Avalanche - 4WD	Passenger door module	√	√	√	√	√	
2004	Chevrolet	Avalanche - 4WD	Driver door module	√	√	√	√	√	
2004	Chevrolet	Avalanche - 4WD	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	Avalanche - 4WD	Driver seat module	√	√	√	√	√	
2004	Chevrolet	Avalanche - 4WD	Rear HVAC	√	√	√	√		
2004	Chevrolet	Avalanche - 4WD	Heating and air conditioning	√	√	√	√	√	
2004	Chevrolet	Avalanche - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	Avalanche - 4WD	CD changer	√	√	√			
2004	Chevrolet	Avalanche - 4WD	Radio	√	√	√	√		
2004	Chevrolet	Avalanche - 4WD	Rear seat entertainment	√	√	√			
2004	Chevrolet	Avalanche - 4WD	Rear seat audio	√	√	√	√		
2004	Chevrolet	Avalanche - 4WD	Rear aux. climate module	√	√	√	√	√	
2004	Chevrolet	Avalanche - 4WD	Vehicle theft deterrent	√	√	√	√	√	0516
2004	Chevrolet	Avalanche - 4WD	Navigation radio	√	√	√	√	√	0525
2004	Chevrolet	Avalanche - 4WD	Rear wheel steering	√	√	√	√	√	
2004	Chevrolet	Avalanche - 4WD	ABS	√	√	√	√	√	
2004	Chevrolet	Avalanche - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2004	Chevrolet	Avalanche - 4WD	Tire pressure monitor		√	√	√	√	0159
2004	Chevrolet	Avalanche - 4WD	Traction assist (if equipped)	√	√	√	√	√	0648
2004	Chevrolet	Avalanche - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	Chevrolet	Blazer - 2WD	Powertrain	√	√	√	√	√	0638
2004	Chevrolet	Blazer - 2WD	Heating and air conditioning	√	√	√	√	√	
2004	Chevrolet	Blazer - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	Blazer - 2WD	Memory seat module	√	√	√	√		

2004	Chevrolet	Blazer - 2WD	Instrument panel cluster		√	√	√	√	
2004	Chevrolet	Blazer - 2WD	Body Control Module		√	√	√	√	
2004	Chevrolet	Blazer - 2WD	Radio	√	√	√	√	√	0531
2004	Chevrolet	Blazer - 2WD	Traction assist (if equipped)		√	√	√	√	
2004	Chevrolet	Blazer - 2WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	Chevrolet	Blazer - 2WD	Powertrain	√	√	√	√	√	0638
2004	Chevrolet	Blazer - 2WD	Heating and air conditioning	√	√	√	√	√	
2004	Chevrolet	Blazer - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	Blazer - 2WD	Memory seat module	√	√	√	√		
2004	Chevrolet	Blazer - 2WD	Instrument panel cluster		√	√	√	√	
2004	Chevrolet	Blazer - 2WD	Body Control Module		√	√	√	√	
2004	Chevrolet	Blazer - 2WD	Radio	√	√	√	√	√	0531
2004	Chevrolet	Blazer - 2WD	Traction assist (if equipped)		√	√	√	√	
2004	Chevrolet	Blazer - 2WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	Chevrolet	Blazer - 4WD	Powertrain	√	√	√	√	√	0638
2004	Chevrolet	Blazer - 4WD	Heating and air conditioning	√	√	√	√	√	
2004	Chevrolet	Blazer - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	Blazer - 4WD	Memory seat module	√	√	√	√		
2004	Chevrolet	Blazer - 4WD	Instrument panel cluster		√	√	√	√	
2004	Chevrolet	Blazer - 4WD	Body Control Module		√	√	√	√	
2004	Chevrolet	Blazer - 4WD	Radio	√	√	√	√	√	0531
2004	Chevrolet	Blazer - 4WD	Traction assist (if equipped)		√	√	√	√	
2004	Chevrolet	Blazer - 4WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	Chevrolet	Blazer - 4WD	Powertrain	√	√	√	√	√	0638
2004	Chevrolet	Blazer - 4WD	Heating and air conditioning	√	√	√	√	√	
2004	Chevrolet	Blazer - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	Blazer - 4WD	Memory seat module	√	√	√	√		
2004	Chevrolet	Blazer - 4WD	Instrument panel cluster		√	√	√	√	
2004	Chevrolet	Blazer - 4WD	Body Control Module		√	√	√	√	
2004	Chevrolet	Blazer - 4WD	Radio	√	√	√	√	√	0531
2004	Chevrolet	Blazer - 4WD	Traction assist (if equipped)		√	√	√	√	
2004	Chevrolet	Blazer - 4WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	Chevrolet	C Cab/Chassis HD (GMT)	Powertrain	√	√	√	√	√	0661
2004	Chevrolet	C Cab/Chassis HD (GMT)	Digital radio receiver	√	√	√	√		0516
2004	Chevrolet	C Cab/Chassis HD (GMT)	Body Control Module	√	√	√	√	√	
2004	Chevrolet	C Cab/Chassis HD (GMT)	Instrument panel cluster	√	√	√	√	√	
2004	Chevrolet	C Cab/Chassis HD (GMT)	Passenger presence system		√	√			0512
2004	Chevrolet	C Cab/Chassis HD (GMT)	Amplifier (bose)	√	√	√	√	√	0631
2004	Chevrolet	C Cab/Chassis HD (GMT)	Chime	√	√	√	√	√	
2004	Chevrolet	C Cab/Chassis HD (GMT)	Passenger door module	√	√	√	√	√	
2004	Chevrolet	C Cab/Chassis HD (GMT)	Driver door module	√	√	√	√	√	

2004	Chevrolet	C Cab/Chassis HD (GMT	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	C Cab/Chassis HD (GMT	Driver seat module	√	√	√	√	√	
2004	Chevrolet	C Cab/Chassis HD (GMT	Rear HVAC	√	√	√	√		
2004	Chevrolet	C Cab/Chassis HD (GMT	Heating and air conditioning	√	√	√	√	√	
2004	Chevrolet	C Cab/Chassis HD (GMT	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	C Cab/Chassis HD (GMT	CD changer	√	√	√			
2004	Chevrolet	C Cab/Chassis HD (GMT	Radio	√	√	√	√		
2004	Chevrolet	C Cab/Chassis HD (GMT	Rear seat entertainment	√	√	√			
2004	Chevrolet	C Cab/Chassis HD (GMT	Rear seat audio	√	√	√	√		
2004	Chevrolet	C Cab/Chassis HD (GMT	Rear aux. climate module	√	√	√	√	√	
2004	Chevrolet	C Cab/Chassis HD (GMT	Vehicle theft deterrent	√	√	√	√	√	0516
2004	Chevrolet	C Cab/Chassis HD (GMT	Navigation radio	√	√	√	√	√	0525
2004	Chevrolet	C Cab/Chassis HD (GMT	Rear wheel steering	√	√	√	√	√	
2004	Chevrolet	C Cab/Chassis HD (GMT	ABS	√	√	√	√	√	
2004	Chevrolet	C Cab/Chassis HD (GMT	ESC (if equipped)	√	√	√	√	√	0648
2004	Chevrolet	C Cab/Chassis HD (GMT	Tire pressure monitor		√	√	√	√	0159
2004	Chevrolet	C Cab/Chassis HD (GMT	Traction assist (if equipped)	√	√	√	√	√	0648
2004	Chevrolet	C Cab/Chassis HD (GMT	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	Chevrolet	C Silverado - 2WD	Powertrain	√	√	√	√	√	0638
2004	Chevrolet	C Silverado - 2WD	Digital radio receiver	√	√	√	√		0516
2004	Chevrolet	C Silverado - 2WD	Body Control Module	√	√	√	√	√	
2004	Chevrolet	C Silverado - 2WD	Instrument panel cluster	√	√	√	√	√	
2004	Chevrolet	C Silverado - 2WD	Passenger presence system		√	√			0512
2004	Chevrolet	C Silverado - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2004	Chevrolet	C Silverado - 2WD	Chime	√	√	√	√	√	
2004	Chevrolet	C Silverado - 2WD	Passenger door module	√	√	√	√	√	
2004	Chevrolet	C Silverado - 2WD	Driver door module	√	√	√	√	√	
2004	Chevrolet	C Silverado - 2WD	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	C Silverado - 2WD	Driver seat module	√	√	√	√	√	
2004	Chevrolet	C Silverado - 2WD	Rear HVAC	√	√	√	√		
2004	Chevrolet	C Silverado - 2WD	Heating and air conditioning	√	√	√	√	√	
2004	Chevrolet	C Silverado - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	C Silverado - 2WD	CD changer	√	√	√			
2004	Chevrolet	C Silverado - 2WD	Radio	√	√	√	√		
2004	Chevrolet	C Silverado - 2WD	Rear seat entertainment	√	√	√			
2004	Chevrolet	C Silverado - 2WD	Rear seat audio	√	√	√	√		
2004	Chevrolet	C Silverado - 2WD	Rear aux. climate module	√	√	√	√	√	
2004	Chevrolet	C Silverado - 2WD	Vehicle theft deterrent	√	√	√	√	√	0516
2004	Chevrolet	C Silverado - 2WD	Navigation radio	√	√	√	√	√	0525
2004	Chevrolet	C Silverado - 2WD	Rear wheel steering	√	√	√	√	√	
2004	Chevrolet	C Silverado - 2WD	ABS	√	√	√	√	√	

2004	Chevrolet	C Silverado - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2004	Chevrolet	C Silverado - 2WD	Tire pressure monitor		√	√	√	√	0159
2004	Chevrolet	C Silverado - 2WD	Traction assist (if equipped)	√	√	√	√	√	0648
2004	Chevrolet	C Silverado - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	Chevrolet	C Silverado - 2WD (CNG)	Powertrain	√	√	√	√	√	
2004	Chevrolet	C Silverado - 2WD (CNG)	Digital radio receiver	√	√	√	√		0516
2004	Chevrolet	C Silverado - 2WD (CNG)	Body Control Module	√	√	√	√	√	
2004	Chevrolet	C Silverado - 2WD (CNG)	Instrument panel cluster	√	√	√	√	√	
2004	Chevrolet	C Silverado - 2WD (CNG)	Passenger presence system		√	√			0512
2004	Chevrolet	C Silverado - 2WD (CNG)	Amplifier (bose)	√	√	√	√	√	0631
2004	Chevrolet	C Silverado - 2WD (CNG)	Chime	√	√	√	√	√	
2004	Chevrolet	C Silverado - 2WD (CNG)	Passenger door module	√	√	√	√	√	
2004	Chevrolet	C Silverado - 2WD (CNG)	Driver door module	√	√	√	√	√	
2004	Chevrolet	C Silverado - 2WD (CNG)	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	C Silverado - 2WD (CNG)	Driver seat module	√	√	√	√	√	
2004	Chevrolet	C Silverado - 2WD (CNG)	Rear HVAC	√	√	√	√		
2004	Chevrolet	C Silverado - 2WD (CNG)	Heating and air conditioning	√	√	√	√	√	
2004	Chevrolet	C Silverado - 2WD (CNG)	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	C Silverado - 2WD (CNG)	CD changer	√	√	√			
2004	Chevrolet	C Silverado - 2WD (CNG)	Radio	√	√	√	√		
2004	Chevrolet	C Silverado - 2WD (CNG)	Rear seat entertainment	√	√	√			
2004	Chevrolet	C Silverado - 2WD (CNG)	Rear seat audio	√	√	√	√		
2004	Chevrolet	C Silverado - 2WD (CNG)	Rear aux. climate module	√	√	√	√	√	
2004	Chevrolet	C Silverado - 2WD (CNG)	Vehicle theft deterrent	√	√	√	√	√	0516
2004	Chevrolet	C Silverado - 2WD (CNG)	Navigation radio	√	√	√	√	√	0525
2004	Chevrolet	C Silverado - 2WD (CNG)	Rear wheel steering	√	√	√	√	√	
2004	Chevrolet	C Silverado - 2WD (CNG)	ABS	√	√	√	√	√	
2004	Chevrolet	C Silverado - 2WD (CNG)	ESC (if equipped)	√	√	√	√	√	0648
2004	Chevrolet	C Silverado - 2WD (CNG)	Tire pressure monitor		√	√	√	√	0159
2004	Chevrolet	C Silverado - 2WD (CNG)	Traction assist (if equipped)	√	√	√	√	√	0648
2004	Chevrolet	C Silverado - 2WD (CNG)	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	Chevrolet	Colorado Pickup - 2WD	Powertrain	√	√	√	√	√	
2004	Chevrolet	Colorado Pickup - 2WD	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	Colorado Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	0600
2004	Chevrolet	Colorado Pickup - 2WD	Radio	√	√	√	√		
2004	Chevrolet	Colorado Pickup - 2WD	Body Control Module	√	√	√	√	√	0550
2004	Chevrolet	Colorado Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2004	Chevrolet	Colorado Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2004	Chevrolet	Colorado Pickup - 2WD	ABS	√	√	√	√	√	0647 0683
2004	Chevrolet	Colorado Pickup - 2WD	Powertrain	√	√	√	√	√	
2004	Chevrolet	Colorado Pickup - 2WD	Onstar	√	√	√	√	√	0647 0683

2004	Chevrolet	Colorado Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	0600
2004	Chevrolet	Colorado Pickup - 2WD	Radio	√	√	√	√		
2004	Chevrolet	Colorado Pickup - 2WD	Body Control Module	√	√	√	√	√	0550
2004	Chevrolet	Colorado Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2004	Chevrolet	Colorado Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2004	Chevrolet	Colorado Pickup - 2WD	ABS	√	√	√	√	√	0647 0683
2004	Chevrolet	Colorado Pickup - 4WD	Powertrain	√	√	√	√	√	
2004	Chevrolet	Colorado Pickup - 4WD	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	Colorado Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	0600
2004	Chevrolet	Colorado Pickup - 4WD	Radio	√	√	√	√		
2004	Chevrolet	Colorado Pickup - 4WD	Body Control Module	√	√	√	√	√	0550
2004	Chevrolet	Colorado Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2004	Chevrolet	Colorado Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2004	Chevrolet	Colorado Pickup - 4WD	ABS	√	√	√	√	√	0647 0683
2004	Chevrolet	Colorado Pickup - 4WD	Powertrain	√	√	√	√	√	
2004	Chevrolet	Colorado Pickup - 4WD	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	Colorado Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	0600
2004	Chevrolet	Colorado Pickup - 4WD	Radio	√	√	√	√		
2004	Chevrolet	Colorado Pickup - 4WD	Body Control Module	√	√	√	√	√	0550
2004	Chevrolet	Colorado Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2004	Chevrolet	Colorado Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2004	Chevrolet	Colorado Pickup - 4WD	ABS	√	√	√	√	√	0647 0683
2004	Chevrolet	Express	Powertrain	√	√	√	√	√	0638
2004	Chevrolet	Express	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	Express	Body Control Module	√	√	√	√	√	
2004	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2004	Chevrolet	Express	Remote function actuation	√	√	√	√	√	
2004	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	Express	Multifunction alarm module	√	√	√	√	√	
2004	Chevrolet	Express	Radio	√	√	√	√	√	0647 0683
2004	Chevrolet	Express	ABS	√	√	√	√	√	
2004	Chevrolet	Express	Powertrain	√	√	√	√	√	0638
2004	Chevrolet	Express	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2004	Chevrolet	Express	Body Control Module	√	√	√	√	√	
2004	Chevrolet	Express	Remote function actuation	√	√	√	√	√	
2004	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	Express	Multifunction alarm module	√	√	√	√	√	
2004	Chevrolet	Express	Radio	√	√	√	√	√	0647 0683
2004	Chevrolet	Express	ABS	√	√	√	√	√	
2004	Chevrolet	Express	Powertrain	√	√	√	√	√	

2004	Chevrolet	Express	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	Express	Body Control Module	√	√	√	√	√	
2004	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2004	Chevrolet	Express	Remote function actuation	√	√	√	√	√	
2004	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	Express	Multifunction alarm module	√	√	√	√	√	
2004	Chevrolet	Express	Radio	√	√	√	√	√	0647 0683
2004	Chevrolet	Express	ABS	√	√	√	√	√	
2004	Chevrolet	Express	Powertrain	√	√	√	√	√	
2004	Chevrolet	Express	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	Express	Instrument panel cluster	√	√	√	√	√	
2004	Chevrolet	Express	Body Control Module	√	√	√	√	√	
2004	Chevrolet	Express	Remote function actuation	√	√	√	√	√	
2004	Chevrolet	Express	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	Express	Multifunction alarm module	√	√	√	√	√	
2004	Chevrolet	Express	Radio	√	√	√	√	√	0647 0683
2004	Chevrolet	Express	ABS	√	√	√	√	√	
2004	Chevrolet	K Silverado - 4WD	Powertrain	√	√	√	√	√	0638
2004	Chevrolet	K Silverado - 4WD	Digital radio receiver	√	√	√	√		0516
2004	Chevrolet	K Silverado - 4WD	Body Control Module	√	√	√	√	√	
2004	Chevrolet	K Silverado - 4WD	Instrument panel cluster	√	√	√	√	√	
2004	Chevrolet	K Silverado - 4WD	Passenger presence system		√	√			0512
2004	Chevrolet	K Silverado - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2004	Chevrolet	K Silverado - 4WD	Chime	√	√	√	√	√	
2004	Chevrolet	K Silverado - 4WD	Passenger door module	√	√	√	√	√	
2004	Chevrolet	K Silverado - 4WD	Driver door module	√	√	√	√	√	
2004	Chevrolet	K Silverado - 4WD	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	K Silverado - 4WD	Driver seat module	√	√	√	√	√	
2004	Chevrolet	K Silverado - 4WD	Rear HVAC	√	√	√	√		
2004	Chevrolet	K Silverado - 4WD	Heating and air conditioning	√	√	√	√	√	
2004	Chevrolet	K Silverado - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	K Silverado - 4WD	CD changer	√	√	√			
2004	Chevrolet	K Silverado - 4WD	Radio	√	√	√	√		
2004	Chevrolet	K Silverado - 4WD	Rear seat entertainment	√	√	√			
2004	Chevrolet	K Silverado - 4WD	Rear seat audio	√	√	√	√		
2004	Chevrolet	K Silverado - 4WD	Rear aux. climate module	√	√	√	√	√	
2004	Chevrolet	K Silverado - 4WD	Vehicle theft deterrent	√	√	√	√	√	0516
2004	Chevrolet	K Silverado - 4WD	Navigation radio	√	√	√	√	√	0525
2004	Chevrolet	K Silverado - 4WD	Rear wheel steering	√	√	√	√	√	
2004	Chevrolet	K Silverado - 4WD	ABS	√	√	√	√	√	
2004	Chevrolet	K Silverado - 4WD	ESC (if equipped)	√	√	√	√	√	0648

2004	Chevrolet	K Silverado - 4WD	Tire pressure monitor		√	√	√	√	0159
2004	Chevrolet	K Silverado - 4WD	Traction assist (if equipped)	√	√	√	√	√	0648
2004	Chevrolet	K Silverado - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	Chevrolet	K Silverado - 4WD (CNG)	Powertrain	√	√	√	√	√	
2004	Chevrolet	K Silverado - 4WD (CNG)	Digital radio receiver	√	√	√	√	√	0516
2004	Chevrolet	K Silverado - 4WD (CNG)	Body Control Module	√	√	√	√	√	
2004	Chevrolet	K Silverado - 4WD (CNG)	Instrument panel cluster	√	√	√	√	√	
2004	Chevrolet	K Silverado - 4WD (CNG)	Passenger presence system		√	√			0512
2004	Chevrolet	K Silverado - 4WD (CNG)	Amplifier (bose)	√	√	√	√	√	0631
2004	Chevrolet	K Silverado - 4WD (CNG)	Chime	√	√	√	√	√	
2004	Chevrolet	K Silverado - 4WD (CNG)	Passenger door module	√	√	√	√	√	
2004	Chevrolet	K Silverado - 4WD (CNG)	Driver door module	√	√	√	√	√	
2004	Chevrolet	K Silverado - 4WD (CNG)	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	K Silverado - 4WD (CNG)	Driver seat module	√	√	√	√	√	
2004	Chevrolet	K Silverado - 4WD (CNG)	Rear HVAC	√	√	√	√		
2004	Chevrolet	K Silverado - 4WD (CNG)	Heating and air conditioning	√	√	√	√	√	
2004	Chevrolet	K Silverado - 4WD (CNG)	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	K Silverado - 4WD (CNG)	CD changer	√	√	√			
2004	Chevrolet	K Silverado - 4WD (CNG)	Radio	√	√	√	√		
2004	Chevrolet	K Silverado - 4WD (CNG)	Rear seat entertainment	√	√	√			
2004	Chevrolet	K Silverado - 4WD (CNG)	Rear seat audio	√	√	√	√		
2004	Chevrolet	K Silverado - 4WD (CNG)	Rear aux. climate module	√	√	√	√	√	
2004	Chevrolet	K Silverado - 4WD (CNG)	Vehicle theft deterrent	√	√	√	√	√	0516
2004	Chevrolet	K Silverado - 4WD (CNG)	Navigation radio	√	√	√	√	√	0525
2004	Chevrolet	K Silverado - 4WD (CNG)	Rear wheel steering	√	√	√	√	√	
2004	Chevrolet	K Silverado - 4WD (CNG)	ABS	√	√	√	√	√	
2004	Chevrolet	K Silverado - 4WD (CNG)	ESC (if equipped)	√	√	√	√	√	0648
2004	Chevrolet	K Silverado - 4WD (CNG)	Tire pressure monitor		√	√	√	√	0159
2004	Chevrolet	K Silverado - 4WD (CNG)	Traction assist (if equipped)	√	√	√	√	√	0648
2004	Chevrolet	K Silverado - 4WD (CNG)	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	Chevrolet	S10 Pickup - 2WD	Powertrain	√	√	√	√	√	0638
2004	Chevrolet	S10 Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	S10 Pickup - 2WD	Instrument panel cluster		√	√	√	√	
2004	Chevrolet	S10 Pickup - 2WD	Body Control Module		√	√	√	√	
2004	Chevrolet	S10 Pickup - 2WD	Radio	√	√	√	√	√	0531
2004	Chevrolet	S10 Pickup - 2WD	Traction assist (if equipped)		√	√	√	√	
2004	Chevrolet	S10 Pickup - 2WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	Chevrolet	S10 Pickup - 2WD	Powertrain	√	√	√	√	√	0638
2004	Chevrolet	S10 Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	S10 Pickup - 2WD	Instrument panel cluster		√	√	√	√	
2004	Chevrolet	S10 Pickup - 2WD	Body Control Module		√	√	√	√	

2004	Chevrolet	S10 Pickup - 2WD	Radio	√	√	√	√	√	0531
2004	Chevrolet	S10 Pickup - 2WD	Traction assist (if equipped)		√	√	√	√	
2004	Chevrolet	S10 Pickup - 2WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	Chevrolet	S10 Pickup - 4WD	Powertrain	√	√	√	√	√	0638
2004	Chevrolet	S10 Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	S10 Pickup - 4WD	Instrument panel cluster		√	√	√	√	
2004	Chevrolet	S10 Pickup - 4WD	Body Control Module		√	√	√	√	
2004	Chevrolet	S10 Pickup - 4WD	Radio	√	√	√	√	√	0531
2004	Chevrolet	S10 Pickup - 4WD	Traction assist (if equipped)		√	√	√	√	
2004	Chevrolet	S10 Pickup - 4WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	Chevrolet	S10 Pickup - 4WD	Powertrain	√	√	√	√	√	0638
2004	Chevrolet	S10 Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	S10 Pickup - 4WD	Instrument panel cluster		√	√	√	√	
2004	Chevrolet	S10 Pickup - 4WD	Body Control Module		√	√	√	√	
2004	Chevrolet	S10 Pickup - 4WD	Radio	√	√	√	√	√	0531
2004	Chevrolet	S10 Pickup - 4WD	Traction assist (if equipped)		√	√	√	√	
2004	Chevrolet	S10 Pickup - 4WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	Chevrolet	SSR	Powertrain	√	√	√	√	√	
2004	Chevrolet	SSR	Driver seat module	√	√	√	√	√	
2004	Chevrolet	SSR	Roof and door module	√	√	√	√	√	
2004	Chevrolet	SSR	Amplifier (bose)	√	√	√	√	√	
2004	Chevrolet	SSR	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	SSR	Radio	√	√	√	√		0524
2004	Chevrolet	SSR	Instrument panel cluster	√	√	√	√	√	
2004	Chevrolet	SSR	Body Control Module	√	√	√	√	√	
2004	Chevrolet	SSR	Remote function actuation	√	√	√	√	√	
2004	Chevrolet	SSR	Traction assist (if equipped)		√	√	√	√	
2004	Chevrolet	SSR	4WAL 3 sensor		√	√	√	√	
2004	Chevrolet	Suburban - 2WD	Powertrain	√	√	√	√	√	0661
2004	Chevrolet	Suburban - 2WD	Digital radio receiver	√	√	√	√		0516
2004	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	
2004	Chevrolet	Suburban - 2WD	Instrument panel cluster	√	√	√	√	√	
2004	Chevrolet	Suburban - 2WD	Passenger presence system		√	√			0512
2004	Chevrolet	Suburban - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2004	Chevrolet	Suburban - 2WD	Chime	√	√	√	√	√	
2004	Chevrolet	Suburban - 2WD	Passenger door module	√	√	√	√	√	
2004	Chevrolet	Suburban - 2WD	Driver door module	√	√	√	√	√	
2004	Chevrolet	Suburban - 2WD	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	Suburban - 2WD	Driver seat module	√	√	√	√	√	
2004	Chevrolet	Suburban - 2WD	Rear HVAC	√	√	√	√		
2004	Chevrolet	Suburban - 2WD	Heating and air conditioning	√	√	√	√	√	



2004	Chevrolet	Suburban - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	Suburban - 2WD	CD changer	√	√	√			
2004	Chevrolet	Suburban - 2WD	Radio	√	√	√	√		
2004	Chevrolet	Suburban - 2WD	Rear seat entertainment	√	√	√			
2004	Chevrolet	Suburban - 2WD	Rear seat audio	√	√	√	√		
2004	Chevrolet	Suburban - 2WD	Rear aux. climate module	√	√	√	√	√	
2004	Chevrolet	Suburban - 2WD	Vehicle theft deterrent	√	√	√	√	√	0516
2004	Chevrolet	Suburban - 2WD	Navigation radio	√	√	√	√	√	0525
2004	Chevrolet	Suburban - 2WD	Rear wheel steering	√	√	√	√	√	
2004	Chevrolet	Suburban - 2WD	ABS	√	√	√	√	√	
2004	Chevrolet	Suburban - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2004	Chevrolet	Suburban - 2WD	Tire pressure monitor		√	√	√	√	0159
2004	Chevrolet	Suburban - 2WD	Traction assist (if equipped)	√	√	√	√	√	0648
2004	Chevrolet	Suburban - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	Chevrolet	Suburban - 4WD	Powertrain	√	√	√	√	√	0661
2004	Chevrolet	Suburban - 4WD	Digital radio receiver	√	√	√	√		0516
2004	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	
2004	Chevrolet	Suburban - 4WD	Instrument panel cluster	√	√	√	√	√	
2004	Chevrolet	Suburban - 4WD	Passenger presence system		√	√			0512
2004	Chevrolet	Suburban - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2004	Chevrolet	Suburban - 4WD	Chime	√	√	√	√	√	
2004	Chevrolet	Suburban - 4WD	Passenger door module	√	√	√	√	√	
2004	Chevrolet	Suburban - 4WD	Driver door module	√	√	√	√	√	
2004	Chevrolet	Suburban - 4WD	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	Suburban - 4WD	Driver seat module	√	√	√	√	√	
2004	Chevrolet	Suburban - 4WD	Rear HVAC	√	√	√	√		
2004	Chevrolet	Suburban - 4WD	Heating and air conditioning	√	√	√	√	√	
2004	Chevrolet	Suburban - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	Suburban - 4WD	CD changer	√	√	√			
2004	Chevrolet	Suburban - 4WD	Radio	√	√	√	√		
2004	Chevrolet	Suburban - 4WD	Rear seat entertainment	√	√	√			
2004	Chevrolet	Suburban - 4WD	Rear seat audio	√	√	√	√		
2004	Chevrolet	Suburban - 4WD	Rear aux. climate module	√	√	√	√	√	
2004	Chevrolet	Suburban - 4WD	Vehicle theft deterrent	√	√	√	√	√	0516
2004	Chevrolet	Suburban - 4WD	Navigation radio	√	√	√	√	√	0525
2004	Chevrolet	Suburban - 4WD	Rear wheel steering	√	√	√	√	√	
2004	Chevrolet	Suburban - 4WD	ABS	√	√	√	√	√	
2004	Chevrolet	Suburban - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2004	Chevrolet	Suburban - 4WD	Tire pressure monitor		√	√	√	√	0159
2004	Chevrolet	Suburban - 4WD	Traction assist (if equipped)	√	√	√	√	√	0648
2004	Chevrolet	Suburban - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648

2004	Chevrolet	Tahoe - 2WD	Powertrain	√	√	√	√	√	
2004	Chevrolet	Tahoe - 2WD	Digital radio receiver	√	√	√	√		0516
2004	Chevrolet	Tahoe - 2WD	Body Control Module	√	√	√	√	√	
2004	Chevrolet	Tahoe - 2WD	Instrument panel cluster	√	√	√	√	√	
2004	Chevrolet	Tahoe - 2WD	Passenger presence system		√	√			0512
2004	Chevrolet	Tahoe - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2004	Chevrolet	Tahoe - 2WD	Chime	√	√	√	√	√	
2004	Chevrolet	Tahoe - 2WD	Passenger door module	√	√	√	√	√	
2004	Chevrolet	Tahoe - 2WD	Driver door module	√	√	√	√	√	
2004	Chevrolet	Tahoe - 2WD	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	Tahoe - 2WD	Driver seat module	√	√	√	√	√	
2004	Chevrolet	Tahoe - 2WD	Rear HVAC	√	√	√	√		
2004	Chevrolet	Tahoe - 2WD	Heating and air conditioning	√	√	√	√	√	
2004	Chevrolet	Tahoe - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	Tahoe - 2WD	CD changer	√	√	√			
2004	Chevrolet	Tahoe - 2WD	Radio	√	√	√	√		
2004	Chevrolet	Tahoe - 2WD	Rear seat entertainment	√	√	√			
2004	Chevrolet	Tahoe - 2WD	Rear seat audio	√	√	√	√		
2004	Chevrolet	Tahoe - 2WD	Rear aux. climate module	√	√	√	√	√	
2004	Chevrolet	Tahoe - 2WD	Vehicle theft deterrent	√	√	√	√	√	0516
2004	Chevrolet	Tahoe - 2WD	Navigation radio	√	√	√	√	√	0525
2004	Chevrolet	Tahoe - 2WD	Rear wheel steering	√	√	√	√	√	
2004	Chevrolet	Tahoe - 2WD	ABS	√	√	√	√	√	
2004	Chevrolet	Tahoe - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2004	Chevrolet	Tahoe - 2WD	Tire pressure monitor		√	√	√	√	0159
2004	Chevrolet	Tahoe - 2WD	Traction assist (if equipped)	√	√	√	√	√	0648
2004	Chevrolet	Tahoe - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	Chevrolet	Tahoe - 4WD	Powertrain	√	√	√	√	√	
2004	Chevrolet	Tahoe - 4WD	Digital radio receiver	√	√	√	√		0516
2004	Chevrolet	Tahoe - 4WD	Body Control Module	√	√	√	√	√	
2004	Chevrolet	Tahoe - 4WD	Instrument panel cluster	√	√	√	√	√	
2004	Chevrolet	Tahoe - 4WD	Passenger presence system		√	√			0512
2004	Chevrolet	Tahoe - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2004	Chevrolet	Tahoe - 4WD	Chime	√	√	√	√	√	
2004	Chevrolet	Tahoe - 4WD	Passenger door module	√	√	√	√	√	
2004	Chevrolet	Tahoe - 4WD	Driver door module	√	√	√	√	√	
2004	Chevrolet	Tahoe - 4WD	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	Tahoe - 4WD	Driver seat module	√	√	√	√	√	
2004	Chevrolet	Tahoe - 4WD	Rear HVAC	√	√	√	√		
2004	Chevrolet	Tahoe - 4WD	Heating and air conditioning	√	√	√	√	√	
2004	Chevrolet	Tahoe - 4WD	Supplemental inflatable restraint	√	√	√	√		0531

2004	Chevrolet	Tahoe - 4WD	CD changer	√	√	√			
2004	Chevrolet	Tahoe - 4WD	Radio	√	√	√	√		
2004	Chevrolet	Tahoe - 4WD	Rear seat entertainment	√	√	√			
2004	Chevrolet	Tahoe - 4WD	Rear seat audio	√	√	√	√		
2004	Chevrolet	Tahoe - 4WD	Rear aux. climate module	√	√	√	√	√	
2004	Chevrolet	Tahoe - 4WD	Vehicle theft deterrent	√	√	√	√	√	0516
2004	Chevrolet	Tahoe - 4WD	Navigation radio	√	√	√	√	√	0525
2004	Chevrolet	Tahoe - 4WD	Rear wheel steering	√	√	√	√	√	
2004	Chevrolet	Tahoe - 4WD	ABS	√	√	√	√	√	
2004	Chevrolet	Tahoe - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2004	Chevrolet	Tahoe - 4WD	Tire pressure monitor		√	√	√	√	0159
2004	Chevrolet	Tahoe - 4WD	Traction assist (if equipped)	√	√	√	√	√	0648
2004	Chevrolet	Tahoe - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	Chevrolet	Tracker - 2WD	Powertrain	√	√	√	√	√	
2004	Chevrolet	Tracker - 2WD	Supplemental inflatable restraint		√	√	√		
2004	Chevrolet	Tracker - 2WD	Chassis	√	√	√	√	√	0506
2004	Chevrolet	Tracker - 4WD	Powertrain	√	√	√	√	√	
2004	Chevrolet	Tracker - 4WD	Supplemental inflatable restraint		√	√	√		
2004	Chevrolet	Tracker - 4WD	Chassis	√	√	√	√	√	0506
2004	Chevrolet	TrailBlazer	Powertrain	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	TrailBlazer	Digital radio receiver	√	√	√	√		0516
2004	Chevrolet	TrailBlazer	Body Control Module	√	√	√	√	√	0550
2004	Chevrolet	TrailBlazer	Instrument panel cluster	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Driver door module	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Passenger door module	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Driver seat module	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Heating and air conditioning	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	TrailBlazer	Amplifier (bose)	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Radio	√	√	√	√		0524
2004	Chevrolet	TrailBlazer	Rear seat audio	√	√	√	√		
2004	Chevrolet	TrailBlazer	Lift gate module	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Rear seat entertainment	√	√	√			
2004	Chevrolet	TrailBlazer	Vehicle theft deterrent	√	√	√	√	√	0550
2004	Chevrolet	TrailBlazer	Navigation radio	√	√	√	√	√	0525
2004	Chevrolet	TrailBlazer	ABS	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	4WAL 3 sensor	√	√	√	√	√	0647 0683
2004	Chevrolet	TrailBlazer	Powertrain	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	TrailBlazer	Digital radio receiver	√	√	√	√		0516

2004	Chevrolet	TrailBlazer	Body Control Module	√	√	√	√	√	0550
2004	Chevrolet	TrailBlazer	Instrument panel cluster	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Driver door module	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Passenger door module	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Driver seat module	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Heating and air conditioning	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	TrailBlazer	Amplifier (bose)	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Radio	√	√	√	√		0524
2004	Chevrolet	TrailBlazer	Rear seat audio	√	√	√	√		
2004	Chevrolet	TrailBlazer	Lift gate module	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Rear seat entertainment	√	√	√			
2004	Chevrolet	TrailBlazer	Vehicle theft deterrent	√	√	√	√	√	0550
2004	Chevrolet	TrailBlazer	Navigation radio	√	√	√	√	√	0525
2004	Chevrolet	TrailBlazer	ABS	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	4WAL 3 sensor	√	√	√	√	√	0647 0683
2004	Chevrolet	TrailBlazer	Heating and air conditioning	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	TrailBlazer	Memory seat module	√	√	√	√		
2004	Chevrolet	TrailBlazer	Instrument panel cluster		√	√	√	√	
2004	Chevrolet	TrailBlazer	Body Control Module		√	√	√	√	
2004	Chevrolet	TrailBlazer	Radio	√	√	√	√	√	0531
2004	Chevrolet	TrailBlazer	4WAL 3 sensor		√	√	√	√	
2004	Chevrolet	TrailBlazer	Powertrain	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	TrailBlazer	Digital radio receiver	√	√	√	√		0516
2004	Chevrolet	TrailBlazer	Body Control Module	√	√	√	√	√	0550
2004	Chevrolet	TrailBlazer	Instrument panel cluster	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Driver door module	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Passenger door module	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Driver seat module	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Heating and air conditioning	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	TrailBlazer	Amplifier (bose)	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Radio	√	√	√	√		0524
2004	Chevrolet	TrailBlazer	Rear HVAC/RSA	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Lift gate module	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	Rear seat entertainment	√	√	√			
2004	Chevrolet	TrailBlazer	Vehicle theft deterrent	√	√	√	√	√	0550
2004	Chevrolet	TrailBlazer	Rear HVAC	√	√	√	√	√	0550
2004	Chevrolet	TrailBlazer	Navigation radio	√	√	√	√	√	0525

2004	Chevrolet	TrailBlazer	ABS	√	√	√	√	√	
2004	Chevrolet	TrailBlazer	4WAL 3 sensor	√	√	√	√	√	0647 0683
2004	Chevrolet	TrailBlazer EXT	Powertrain	√	√	√	√	√	
2004	Chevrolet	TrailBlazer EXT	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	TrailBlazer EXT	Digital radio receiver	√	√	√	√		0516
2004	Chevrolet	TrailBlazer EXT	Body Control Module	√	√	√	√	√	0550
2004	Chevrolet	TrailBlazer EXT	Instrument panel cluster	√	√	√	√	√	
2004	Chevrolet	TrailBlazer EXT	Driver door module	√	√	√	√	√	
2004	Chevrolet	TrailBlazer EXT	Passenger door module	√	√	√	√	√	
2004	Chevrolet	TrailBlazer EXT	Driver seat module	√	√	√	√	√	
2004	Chevrolet	TrailBlazer EXT	Heating and air conditioning	√	√	√	√	√	
2004	Chevrolet	TrailBlazer EXT	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	TrailBlazer EXT	Amplifier (bose)	√	√	√	√	√	
2004	Chevrolet	TrailBlazer EXT	Radio	√	√	√	√		0524
2004	Chevrolet	TrailBlazer EXT	Rear HVAC/RSA	√	√	√	√	√	
2004	Chevrolet	TrailBlazer EXT	Lift gate module	√	√	√	√	√	
2004	Chevrolet	TrailBlazer EXT	Rear seat entertainment	√	√	√			
2004	Chevrolet	TrailBlazer EXT	Vehicle theft deterrent	√	√	√	√	√	0550
2004	Chevrolet	TrailBlazer EXT	Rear HVAC	√	√	√	√	√	0550
2004	Chevrolet	TrailBlazer EXT	Navigation radio	√	√	√	√	√	0525
2004	Chevrolet	TrailBlazer EXT	ABS	√	√	√	√	√	
2004	Chevrolet	TrailBlazer EXT	4WAL 3 sensor	√	√	√	√	√	0647 0683
2004	Chevrolet	TrailBlazer EXT	Powertrain	√	√	√	√	√	
2004	Chevrolet	TrailBlazer EXT	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	TrailBlazer EXT	Digital radio receiver	√	√	√	√		0516
2004	Chevrolet	TrailBlazer EXT	Body Control Module	√	√	√	√	√	0550
2004	Chevrolet	TrailBlazer EXT	Instrument panel cluster	√	√	√	√	√	
2004	Chevrolet	TrailBlazer EXT	Driver door module	√	√	√	√	√	
2004	Chevrolet	TrailBlazer EXT	Passenger door module	√	√	√	√	√	
2004	Chevrolet	TrailBlazer EXT	Driver seat module	√	√	√	√	√	
2004	Chevrolet	TrailBlazer EXT	Heating and air conditioning	√	√	√	√	√	
2004	Chevrolet	TrailBlazer EXT	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	TrailBlazer EXT	Amplifier (bose)	√	√	√	√	√	
2004	Chevrolet	TrailBlazer EXT	Radio	√	√	√	√		0524
2004	Chevrolet	TrailBlazer EXT	Rear HVAC/RSA	√	√	√	√	√	
2004	Chevrolet	TrailBlazer EXT	Lift gate module	√	√	√	√	√	
2004	Chevrolet	TrailBlazer EXT	Rear seat entertainment	√	√	√			
2004	Chevrolet	TrailBlazer EXT	Vehicle theft deterrent	√	√	√	√	√	0550
2004	Chevrolet	TrailBlazer EXT	Rear HVAC	√	√	√	√	√	0550
2004	Chevrolet	TrailBlazer EXT	Navigation radio	√	√	√	√	√	0525
2004	Chevrolet	TrailBlazer EXT	ABS	√	√	√	√	√	

2004	Chevrolet	TrailBlazer EXT	4WAL 3 sensor	√	√	√	√	√	0647 0683
2004	Chevrolet	Blazer	Heating and air conditioning	√	√	√	√	√	
2004	Chevrolet	Blazer	Supplemental inflatable restraint	√	√	√	√		0531
2004	Chevrolet	Blazer	Memory seat module	√	√	√	√		
2004	Chevrolet	Blazer	Instrument panel cluster		√	√	√	√	
2004	Chevrolet	Blazer	Body Control Module		√	√	√	√	
2004	Chevrolet	Blazer	Radio	√	√	√	√	√	0531
2004	Chevrolet	Blazer	Traction assist (if equipped)		√	√	√	√	
2004	Chevrolet	Blazer	4WAL 3 sensor		√	√	√	√	
2004	Chevrolet	Venture	Powertrain	√	√	√	√	√	
2004	Chevrolet	Venture	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	Venture	Supplemental inflatable restraint		√	√	√		
2004	Chevrolet	Venture	Driver information center		√	√	√	√	0682 0628 0573 0574
2004	Chevrolet	Venture	Digital radio receiver	√	√	√	√		0516
2004	Chevrolet	Venture	Radio	√	√	√	√	√	0524
2004	Chevrolet	Venture	Chassis	√	√	√	√	√	0506
2004	Chevrolet	Vivant	Powertrain	√	√	√	√	√	
2004	Chevrolet	Vivant	Onstar	√	√	√	√	√	0647 0683
2004	Chevrolet	Vivant	Supplemental inflatable restraint		√	√	√		
2004	Chevrolet	Vivant	Driver information center		√	√	√	√	0682 0628 0573 0574
2004	Chevrolet	Vivant	Digital radio receiver	√	√	√	√		0516
2004	Chevrolet	Vivant	Radio	√	√	√	√	√	0524
2004	Chevrolet	Vivant	Chassis	√	√	√	√	√	0506
2004	Chevrolet	Others	Chassis	√	√	√	√	√	0506
2004	GMC truck	Canyon Pickup - 2WD	Powertrain	√	√	√	√	√	
2004	GMC truck	Canyon Pickup - 2WD	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	0600
2004	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2004	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2004	GMC truck	Canyon Pickup - 2WD	ABS	√	√	√	√	√	0647 0683
2004	GMC truck	Canyon Pickup - 2WD	Powertrain	√	√	√	√	√	
2004	GMC truck	Canyon Pickup - 2WD	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	0600
2004	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2004	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2004	GMC truck	Canyon Pickup - 2WD	ABS	√	√	√	√	√	0647 0683
2004	GMC truck	Canyon Pickup - 4WD	Powertrain	√	√	√	√	√	

2004	GMC truck	Canyon Pickup - 4WD	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	0600
2004	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2004	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2004	GMC truck	Canyon Pickup - 4WD	ABS	√	√	√	√	√	0647 0683
2004	GMC truck	Canyon Pickup - 4WD	Powertrain	√	√	√	√	√	
2004	GMC truck	Canyon Pickup - 4WD	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	0600
2004	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2004	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2004	GMC truck	Canyon Pickup - 4WD	ABS	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy	Radio	√	√	√	√		0524
2004	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2004	GMC truck	Envoy	Lift gate module	√	√	√	√	√	
2004	GMC truck	Envoy	Rear seat entertainment	√	√	√	√	√	0550
2004	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy	ABS	√	√	√	√	√	
2004	GMC truck	Envoy	4WAL 3 sensor		√	√	√	√	
2004	GMC truck	Envoy	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy	Driver seat module	√	√	√	√	√	

2004	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy	Radio	√	√	√	√		0524
2004	GMC truck	Envoy	Rear HVAC/RSA	√	√	√	√	√	
2004	GMC truck	Envoy	Lift gate module	√	√	√	√	√	
2004	GMC truck	Envoy	Rear seat entertainment	√	√	√	√	√	0550
2004	GMC truck	Envoy	Rear HVAC	√	√	√	√	√	0550
2004	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy	ABS	√	√	√	√	√	
2004	GMC truck	Envoy	4WAL 3 sensor		√	√	√	√	
2004	GMC truck	Envoy	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy	End gate module	√	√	√	√	√	
2004	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy	Power roof module	√	√	√	√	√	
2004	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy	Radio	√	√	√	√		0524
2004	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2004	GMC truck	Envoy	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy	ABS	√	√	√	√	√	
2004	GMC truck	Envoy	4WAL 3 sensor		√	√	√	√	
2004	GMC truck	Envoy	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy	Radio	√	√	√	√		0524



2004	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2004	GMC truck	Envoy	Lift gate module	√	√	√	√	√	
2004	GMC truck	Envoy	Rear seat entertainment	√	√	√	√	√	0550
2004	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy	ABS	√	√	√	√	√	
2004	GMC truck	Envoy	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy	Radio	√	√	√	√		0524
2004	GMC truck	Envoy	Rear HVAC/RSA	√	√	√	√	√	
2004	GMC truck	Envoy	Lift gate module	√	√	√	√	√	
2004	GMC truck	Envoy	Rear seat entertainment	√	√	√	√	√	0550
2004	GMC truck	Envoy	Rear HVAC	√	√	√	√	√	0550
2004	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy	ABS	√	√	√	√	√	
2004	GMC truck	Envoy	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy	End gate module	√	√	√	√	√	
2004	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy	Power roof module	√	√	√	√	√	
2004	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy	Radio	√	√	√	√		0524
2004	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2004	GMC truck	Envoy	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy	ABS	√	√	√	√	√	
2004	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	

2004	GMC truck	Envoy XL	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy XL	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy XL	Radio	√	√	√	√		0524
2004	GMC truck	Envoy XL	Rear seat audio	√	√	√	√		
2004	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Rear seat entertainment	√	√	√	√	√	0550
2004	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy XL	ABS	√	√	√	√	√	
2004	GMC truck	Envoy XL	4WAL 3 sensor	√	√	√	√	√	
2004	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy XL	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy XL	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy XL	Radio	√	√	√	√		0524
2004	GMC truck	Envoy XL	Rear HVAC/RSA	√	√	√	√	√	
2004	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Rear seat entertainment	√	√	√	√	√	0550
2004	GMC truck	Envoy XL	Rear HVAC	√	√	√	√	√	0550
2004	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy XL	ABS	√	√	√	√	√	
2004	GMC truck	Envoy XL	4WAL 3 sensor	√	√	√	√	√	
2004	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy XL	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	

2004	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy XL	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy XL	Radio	√	√	√	√		0524
2004	GMC truck	Envoy XL	Rear seat audio	√	√	√	√		
2004	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Rear seat entertainment	√	√	√	√	√	0550
2004	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy XL	ABS	√	√	√	√	√	
2004	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy XL	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy XL	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy XL	Radio	√	√	√	√		0524
2004	GMC truck	Envoy XL	Rear HVAC/RSA	√	√	√	√	√	
2004	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Rear seat entertainment	√	√	√	√	√	0550
2004	GMC truck	Envoy XL	Rear HVAC	√	√	√	√	√	0550
2004	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy XL	ABS	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy XUV	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy XUV	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy XUV	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy XUV	Amplifier (bose)	√	√	√	√	√	

2004	GMC truck	Envoy XUV	Radio	√	√	√	√		0524
2004	GMC truck	Envoy XUV	Rear seat audio	√	√	√	√		
2004	GMC truck	Envoy XUV	Lift gate module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Rear seat entertainment	√	√	√	√	√	0550
2004	GMC truck	Envoy XUV	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy XUV	ABS	√	√	√	√	√	
2004	GMC truck	Envoy XUV	4WAL 3 sensor		√	√	√	√	
2004	GMC truck	Envoy XUV	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy XUV	End gate module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy XUV	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Power roof module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy XUV	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Radio	√	√	√	√		0524
2004	GMC truck	Envoy XUV	Rear seat audio	√	√	√	√		
2004	GMC truck	Envoy XUV	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy XUV	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy XUV	ABS	√	√	√	√	√	
2004	GMC truck	Envoy XUV	4WAL 3 sensor		√	√	√	√	
2004	GMC truck	Envoy XUV	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy XUV	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy XUV	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy XUV	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy XUV	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Radio	√	√	√	√		0524
2004	GMC truck	Envoy XUV	Rear seat audio	√	√	√	√		
2004	GMC truck	Envoy XUV	Lift gate module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Rear seat entertainment	√	√	√	√	√	0550
2004	GMC truck	Envoy XUV	Navigation radio	√	√	√	√	√	0525

2004	GMC truck	Envoy XUV	ABS	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy XUV	End gate module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy XUV	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Power roof module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy XUV	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Radio	√	√	√	√		0524
2004	GMC truck	Envoy XUV	Rear seat audio	√	√	√	√		
2004	GMC truck	Envoy XUV	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy XUV	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy XUV	ABS	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD	Powertrain	√	√	√	√	√	0638
2004	GMC truck	GMC C-Series - 2WD	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	GMC C-Series - 2WD	Body Control Module	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD	Passenger presence system		√	√			0512
2004	GMC truck	GMC C-Series - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2004	GMC truck	GMC C-Series - 2WD	Chime	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD	Passenger door module	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD	Driver door module	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	GMC C-Series - 2WD	Driver seat module	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD	Rear HVAC	√	√	√	√		
2004	GMC truck	GMC C-Series - 2WD	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	GMC C-Series - 2WD	CD changer	√	√	√			
2004	GMC truck	GMC C-Series - 2WD	Radio	√	√	√	√		
2004	GMC truck	GMC C-Series - 2WD	Rear seat entertainment	√	√	√			
2004	GMC truck	GMC C-Series - 2WD	Rear seat audio	√	√	√	√		
2004	GMC truck	GMC C-Series - 2WD	Rear aux. climate module	√	√	√	√	√	0516
2004	GMC truck	GMC C-Series - 2WD	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	GMC C-Series - 2WD	Rear wheel steering	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD	ABS	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD	ESC (if equipped)	√	√	√	√	√	0648

2004	GMC truck	GMC C-Series - 2WD	Tire pressure monitor		√	√	√	√	0159
2004	GMC truck	GMC C-Series - 2WD	Traction assist (if equipped)	√	√	√	√	√	0648
2004	GMC truck	GMC C-Series - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	GMC truck	GMC C-Series - 2WD (CNG)	Powertrain	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD (CNG)	Digital radio receiver	√	√	√	√	√	0516
2004	GMC truck	GMC C-Series - 2WD (CNG)	Body Control Module	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD (CNG)	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD (CNG)	Passenger presence system		√	√			0512
2004	GMC truck	GMC C-Series - 2WD (CNG)	Amplifier (bose)	√	√	√	√	√	0631
2004	GMC truck	GMC C-Series - 2WD (CNG)	Chime	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD (CNG)	Passenger door module	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD (CNG)	Driver door module	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD (CNG)	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	GMC C-Series - 2WD (CNG)	Driver seat module	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD (CNG)	Rear HVAC	√	√	√	√		
2004	GMC truck	GMC C-Series - 2WD (CNG)	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD (CNG)	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	GMC C-Series - 2WD (CNG)	CD changer	√	√	√			
2004	GMC truck	GMC C-Series - 2WD (CNG)	Radio	√	√	√	√		
2004	GMC truck	GMC C-Series - 2WD (CNG)	Rear seat entertainment	√	√	√			
2004	GMC truck	GMC C-Series - 2WD (CNG)	Rear seat audio	√	√	√	√		
2004	GMC truck	GMC C-Series - 2WD (CNG)	Rear aux. climate module	√	√	√	√	√	0516
2004	GMC truck	GMC C-Series - 2WD (CNG)	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	GMC C-Series - 2WD (CNG)	Rear wheel steering	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD (CNG)	ABS	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD (CNG)	ESC (if equipped)	√	√	√	√	√	0648
2004	GMC truck	GMC C-Series - 2WD (CNG)	Tire pressure monitor		√	√	√	√	0159
2004	GMC truck	GMC C-Series - 2WD (CNG)	Traction assist (if equipped)	√	√	√	√	√	0648
2004	GMC truck	GMC C-Series - 2WD (CNG)	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	GMC truck	GMC K Sierra - 4WD	Powertrain	√	√	√	√	√	0638
2004	GMC truck	GMC K Sierra - 4WD	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	GMC K Sierra - 4WD	Body Control Module	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD	Passenger presence system		√	√			0512
2004	GMC truck	GMC K Sierra - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2004	GMC truck	GMC K Sierra - 4WD	Chime	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD	Passenger door module	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD	Driver door module	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	GMC K Sierra - 4WD	Driver seat module	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD	Rear HVAC	√	√	√	√		

2004	GMC truck	GMC K Sierra - 4WD	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	GMC K Sierra - 4WD	CD changer	√	√	√			
2004	GMC truck	GMC K Sierra - 4WD	Radio	√	√	√	√		
2004	GMC truck	GMC K Sierra - 4WD	Rear seat entertainment	√	√	√			
2004	GMC truck	GMC K Sierra - 4WD	Rear seat audio	√	√	√	√		
2004	GMC truck	GMC K Sierra - 4WD	Rear aux. climate module	√	√	√	√	√	0516
2004	GMC truck	GMC K Sierra - 4WD	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	GMC K Sierra - 4WD	Rear wheel steering	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD	ABS	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2004	GMC truck	GMC K Sierra - 4WD	Tire pressure monitor		√	√	√	√	0159
2004	GMC truck	GMC K Sierra - 4WD	Traction assist (if equipped)	√	√	√	√	√	0648
2004	GMC truck	GMC K Sierra - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Powertrain	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Body Control Module	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Passenger presence system		√	√			0512
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Amplifier (bose)	√	√	√	√	√	0631
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Chime	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Passenger door module	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Driver door module	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Driver seat module	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Rear HVAC	√	√	√	√		
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	GMC K Sierra - 4WD (CNG)	CD changer	√	√	√			
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Radio	√	√	√	√		
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Rear seat entertainment	√	√	√			
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Rear seat audio	√	√	√	√		
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Rear aux. climate module	√	√	√	√	√	0516
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Rear wheel steering	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD (CNG)	ABS	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD (CNG)	ESC (if equipped)	√	√	√	√	√	0648
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Tire pressure monitor		√	√	√	√	0159
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Traction assist (if equipped)	√	√	√	√	√	0648
2004	GMC truck	GMC K Sierra - 4WD (CNG)	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	GMC truck	GMC Sierra Denali	Powertrain	√	√	√	√	√	

2004	GMC truck	GMC Sierra Denali	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	GMC Sierra Denali	Body Control Module	√	√	√	√	√	
2004	GMC truck	GMC Sierra Denali	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	GMC Sierra Denali	Passenger presence system		√	√			0512
2004	GMC truck	GMC Sierra Denali	Amplifier (bose)	√	√	√	√	√	0631
2004	GMC truck	GMC Sierra Denali	Chime	√	√	√	√	√	
2004	GMC truck	GMC Sierra Denali	Passenger door module	√	√	√	√	√	
2004	GMC truck	GMC Sierra Denali	Driver door module	√	√	√	√	√	
2004	GMC truck	GMC Sierra Denali	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	GMC Sierra Denali	Driver seat module	√	√	√	√	√	
2004	GMC truck	GMC Sierra Denali	Rear HVAC	√	√	√	√		
2004	GMC truck	GMC Sierra Denali	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	GMC Sierra Denali	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	GMC Sierra Denali	CD changer	√	√	√			
2004	GMC truck	GMC Sierra Denali	Radio	√	√	√	√		
2004	GMC truck	GMC Sierra Denali	Rear seat entertainment	√	√	√			
2004	GMC truck	GMC Sierra Denali	Rear seat audio	√	√	√	√		
2004	GMC truck	GMC Sierra Denali	Rear aux. climate module	√	√	√	√	√	0516
2004	GMC truck	GMC Sierra Denali	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	GMC Sierra Denali	Rear wheel steering	√	√	√	√	√	
2004	GMC truck	GMC Sierra Denali	ABS	√	√	√	√	√	
2004	GMC truck	GMC Sierra Denali	ESC (if equipped)	√	√	√	√	√	0648
2004	GMC truck	GMC Sierra Denali	Tire pressure monitor		√	√	√	√	0159
2004	GMC truck	GMC Sierra Denali	Traction assist (if equipped)	√	√	√	√	√	0648
2004	GMC truck	GMC Sierra Denali	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	0638
2004	GMC truck	Jimmy - 2WD	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Jimmy - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Jimmy - 2WD	Memory seat module	√	√	√	√		
2004	GMC truck	Jimmy - 2WD	Instrument panel cluster		√	√	√	√	
2004	GMC truck	Jimmy - 2WD	Body Control Module		√	√	√	√	
2004	GMC truck	Jimmy - 2WD	Radio	√	√	√	√	√	0531
2004	GMC truck	Jimmy - 2WD	Traction assist (if equipped)		√	√	√	√	
2004	GMC truck	Jimmy - 2WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	0638
2004	GMC truck	Jimmy - 2WD	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Jimmy - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Jimmy - 2WD	Memory seat module	√	√	√	√		
2004	GMC truck	Jimmy - 2WD	Instrument panel cluster		√	√	√	√	
2004	GMC truck	Jimmy - 2WD	Body Control Module		√	√	√	√	
2004	GMC truck	Jimmy - 2WD	Radio	√	√	√	√	√	0531



2004	GMC truck	Jimmy - 2WD	Traction assist (if equipped)		√	√	√	√	
2004	GMC truck	Jimmy - 2WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	0638
2004	GMC truck	Jimmy - 4WD	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Jimmy - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Jimmy - 4WD	Memory seat module	√	√	√	√		
2004	GMC truck	Jimmy - 4WD	Instrument panel cluster		√	√	√	√	
2004	GMC truck	Jimmy - 4WD	Body Control Module		√	√	√	√	
2004	GMC truck	Jimmy - 4WD	Radio	√	√	√	√	√	0531
2004	GMC truck	Jimmy - 4WD	Traction assist (if equipped)		√	√	√	√	
2004	GMC truck	Jimmy - 4WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	0638
2004	GMC truck	Jimmy - 4WD	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Jimmy - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Jimmy - 4WD	Memory seat module	√	√	√	√		
2004	GMC truck	Jimmy - 4WD	Instrument panel cluster		√	√	√	√	
2004	GMC truck	Jimmy - 4WD	Body Control Module		√	√	√	√	
2004	GMC truck	Jimmy - 4WD	Radio	√	√	√	√	√	0531
2004	GMC truck	Jimmy - 4WD	Traction assist (if equipped)		√	√	√	√	
2004	GMC truck	Jimmy - 4WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	GMC truck	Safari - 2WD	Powertrain	√	√	√	√	√	0638
2004	GMC truck	Safari - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Safari - 2WD	Body Control Module		√	√	√	√	
2004	GMC truck	Safari - 2WD	Instrument panel cluster		√	√	√	√	
2004	GMC truck	Safari - 2WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	GMC truck	Safari - 4WD	Powertrain	√	√	√	√	√	0638
2004	GMC truck	Safari - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Safari - 4WD	Body Control Module		√	√	√	√	
2004	GMC truck	Safari - 4WD	Instrument panel cluster		√	√	√	√	
2004	GMC truck	Safari - 4WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	GMC truck	Savana	Powertrain	√	√	√	√	√	0638
2004	GMC truck	Savana	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Savana	Body Control Module	√	√	√	√	√	
2004	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Savana	Remote function actuation	√	√	√	√	√	
2004	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2004	GMC truck	Savana	Radio	√	√	√	√	√	0647 0683
2004	GMC truck	Savana	ABS	√	√	√	√	√	
2004	GMC truck	Savana	Powertrain	√	√	√	√	√	0638
2004	GMC truck	Savana	Onstar	√	√	√	√	√	0647 0683

2004	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Savana	Body Control Module	√	√	√	√	√	
2004	GMC truck	Savana	Remote function actuation	√	√	√	√	√	
2004	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2004	GMC truck	Savana	Radio	√	√	√	√	√	0647 0683
2004	GMC truck	Savana	ABS	√	√	√	√	√	
2004	GMC truck	Savana	Powertrain	√	√	√	√	√	
2004	GMC truck	Savana	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Savana	Body Control Module	√	√	√	√	√	
2004	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Savana	Remote function actuation	√	√	√	√	√	
2004	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2004	GMC truck	Savana	Radio	√	√	√	√	√	0647 0683
2004	GMC truck	Savana	ABS	√	√	√	√	√	
2004	GMC truck	Savana	Powertrain	√	√	√	√	√	
2004	GMC truck	Savana	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Savana	Body Control Module	√	√	√	√	√	
2004	GMC truck	Savana	Remote function actuation	√	√	√	√	√	
2004	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2004	GMC truck	Savana	Radio	√	√	√	√	√	0647 0683
2004	GMC truck	Savana	ABS	√	√	√	√	√	
2004	GMC truck	Sonoma Pickup - 2WD	Powertrain	√	√	√	√	√	0638
2004	GMC truck	Sonoma Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Sonoma Pickup - 2WD	Instrument panel cluster		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 2WD	Body Control Module		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 2WD	Radio	√	√	√	√	√	0531
2004	GMC truck	Sonoma Pickup - 2WD	Traction assist (if equipped)		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 2WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	GMC truck	Sonoma Pickup - 2WD	Powertrain	√	√	√	√	√	0638
2004	GMC truck	Sonoma Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Sonoma Pickup - 2WD	Instrument panel cluster		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 2WD	Body Control Module		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 2WD	Radio	√	√	√	√	√	0531
2004	GMC truck	Sonoma Pickup - 2WD	Traction assist (if equipped)		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 2WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	GMC truck	Sonoma Pickup - 4WD	Powertrain	√	√	√	√	√	0638
2004	GMC truck	Sonoma Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√		0531

2004	GMC truck	Sonoma Pickup - 4WD	Instrument panel cluster		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 4WD	Body Control Module		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 4WD	Radio	√	√	√	√	√	0531
2004	GMC truck	Sonoma Pickup - 4WD	Traction assist (if equipped)		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 4WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	GMC truck	Sonoma Pickup - 4WD	Powertrain	√	√	√	√	√	0638
2004	GMC truck	Sonoma Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Sonoma Pickup - 4WD	Instrument panel cluster		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 4WD	Body Control Module		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 4WD	Radio	√	√	√	√	√	0531
2004	GMC truck	Sonoma Pickup - 4WD	Traction assist (if equipped)		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 4WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	GMC truck	Yukon - 2WD	Powertrain	√	√	√	√	√	
2004	GMC truck	Yukon - 2WD	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Yukon - 2WD	Body Control Module	√	√	√	√	√	
2004	GMC truck	Yukon - 2WD	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Yukon - 2WD	Passenger presence system		√	√			0512
2004	GMC truck	Yukon - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2004	GMC truck	Yukon - 2WD	Chime	√	√	√	√	√	
2004	GMC truck	Yukon - 2WD	Passenger door module	√	√	√	√	√	
2004	GMC truck	Yukon - 2WD	Driver door module	√	√	√	√	√	
2004	GMC truck	Yukon - 2WD	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Yukon - 2WD	Driver seat module	√	√	√	√	√	
2004	GMC truck	Yukon - 2WD	Rear HVAC	√	√	√	√		
2004	GMC truck	Yukon - 2WD	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Yukon - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Yukon - 2WD	CD changer	√	√	√			
2004	GMC truck	Yukon - 2WD	Radio	√	√	√	√		
2004	GMC truck	Yukon - 2WD	Rear seat entertainment	√	√	√			
2004	GMC truck	Yukon - 2WD	Rear seat audio	√	√	√	√		
2004	GMC truck	Yukon - 2WD	Rear aux. climate module	√	√	√	√	√	0516
2004	GMC truck	Yukon - 2WD	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Yukon - 2WD	Rear wheel steering	√	√	√	√	√	
2004	GMC truck	Yukon - 2WD	ABS	√	√	√	√	√	
2004	GMC truck	Yukon - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2004	GMC truck	Yukon - 2WD	Tire pressure monitor		√	√	√	√	0159
2004	GMC truck	Yukon - 2WD	Traction assist (if equipped)	√	√	√	√	√	0648
2004	GMC truck	Yukon - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	GMC truck	Yukon - 4WD	Powertrain	√	√	√	√	√	
2004	GMC truck	Yukon - 4WD	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Yukon - 4WD	Body Control Module	√	√	√	√	√	

2004	GMC truck	Yukon - 4WD	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Yukon - 4WD	Passenger presence system		√	√			0512
2004	GMC truck	Yukon - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2004	GMC truck	Yukon - 4WD	Chime	√	√	√	√	√	
2004	GMC truck	Yukon - 4WD	Passenger door module	√	√	√	√	√	
2004	GMC truck	Yukon - 4WD	Driver door module	√	√	√	√	√	
2004	GMC truck	Yukon - 4WD	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Yukon - 4WD	Driver seat module	√	√	√	√	√	
2004	GMC truck	Yukon - 4WD	Rear HVAC	√	√	√	√		
2004	GMC truck	Yukon - 4WD	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Yukon - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Yukon - 4WD	CD changer	√	√	√			
2004	GMC truck	Yukon - 4WD	Radio	√	√	√	√		
2004	GMC truck	Yukon - 4WD	Rear seat entertainment	√	√	√			
2004	GMC truck	Yukon - 4WD	Rear seat audio	√	√	√	√		
2004	GMC truck	Yukon - 4WD	Rear aux. climate module	√	√	√	√	√	0516
2004	GMC truck	Yukon - 4WD	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Yukon - 4WD	Rear wheel steering	√	√	√	√	√	
2004	GMC truck	Yukon - 4WD	ABS	√	√	√	√	√	
2004	GMC truck	Yukon - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2004	GMC truck	Yukon - 4WD	Tire pressure monitor		√	√	√	√	0159
2004	GMC truck	Yukon - 4WD	Traction assist (if equipped)	√	√	√	√	√	0648
2004	GMC truck	Yukon - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	GMC truck	Yukon Denali	Powertrain	√	√	√	√	√	
2004	GMC truck	Yukon Denali	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Yukon Denali	Body Control Module	√	√	√	√	√	
2004	GMC truck	Yukon Denali	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Yukon Denali	Passenger presence system		√	√			0512
2004	GMC truck	Yukon Denali	Amplifier (bose)	√	√	√	√	√	0631
2004	GMC truck	Yukon Denali	Chime	√	√	√	√	√	
2004	GMC truck	Yukon Denali	Passenger door module	√	√	√	√	√	
2004	GMC truck	Yukon Denali	Driver door module	√	√	√	√	√	
2004	GMC truck	Yukon Denali	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Yukon Denali	Driver seat module	√	√	√	√	√	
2004	GMC truck	Yukon Denali	Rear HVAC	√	√	√	√		
2004	GMC truck	Yukon Denali	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Yukon Denali	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Yukon Denali	CD changer	√	√	√			
2004	GMC truck	Yukon Denali	Radio	√	√	√	√		
2004	GMC truck	Yukon Denali	Rear seat entertainment	√	√	√			
2004	GMC truck	Yukon Denali	Rear seat audio	√	√	√	√		

2004	GMC truck	Yukon Denali	Rear aux. climate module	√	√	√	√	√	0516
2004	GMC truck	Yukon Denali	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Yukon Denali	Rear wheel steering	√	√	√	√	√	
2004	GMC truck	Yukon Denali	ABS	√	√	√	√	√	
2004	GMC truck	Yukon Denali	ESC (if equipped)	√	√	√	√	√	0648
2004	GMC truck	Yukon Denali	Tire pressure monitor		√	√	√	√	0159
2004	GMC truck	Yukon Denali	Traction assist (if equipped)	√	√	√	√	√	0648
2004	GMC truck	Yukon Denali	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	GMC truck	Yukon XL - 2WD	Powertrain	√	√	√	√	√	0661
2004	GMC truck	Yukon XL - 2WD	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Yukon XL - 2WD	Body Control Module	√	√	√	√	√	
2004	GMC truck	Yukon XL - 2WD	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Yukon XL - 2WD	Passenger presence system		√	√			0512
2004	GMC truck	Yukon XL - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2004	GMC truck	Yukon XL - 2WD	Chime	√	√	√	√	√	
2004	GMC truck	Yukon XL - 2WD	Passenger door module	√	√	√	√	√	
2004	GMC truck	Yukon XL - 2WD	Driver door module	√	√	√	√	√	
2004	GMC truck	Yukon XL - 2WD	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Yukon XL - 2WD	Driver seat module	√	√	√	√	√	
2004	GMC truck	Yukon XL - 2WD	Rear HVAC	√	√	√	√		
2004	GMC truck	Yukon XL - 2WD	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Yukon XL - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Yukon XL - 2WD	CD changer	√	√	√			
2004	GMC truck	Yukon XL - 2WD	Radio	√	√	√	√		
2004	GMC truck	Yukon XL - 2WD	Rear seat entertainment	√	√	√			
2004	GMC truck	Yukon XL - 2WD	Rear seat audio	√	√	√	√		
2004	GMC truck	Yukon XL - 2WD	Rear aux. climate module	√	√	√	√	√	0516
2004	GMC truck	Yukon XL - 2WD	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Yukon XL - 2WD	Rear wheel steering	√	√	√	√	√	
2004	GMC truck	Yukon XL - 2WD	ABS	√	√	√	√	√	
2004	GMC truck	Yukon XL - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2004	GMC truck	Yukon XL - 2WD	Tire pressure monitor		√	√	√	√	0159
2004	GMC truck	Yukon XL - 2WD	Traction assist (if equipped)	√	√	√	√	√	0648
2004	GMC truck	Yukon XL - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	GMC truck	Yukon XL - 4WD	Powertrain	√	√	√	√	√	0661
2004	GMC truck	Yukon XL - 4WD	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Yukon XL - 4WD	Body Control Module	√	√	√	√	√	
2004	GMC truck	Yukon XL - 4WD	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Yukon XL - 4WD	Passenger presence system		√	√			0512
2004	GMC truck	Yukon XL - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2004	GMC truck	Yukon XL - 4WD	Chime	√	√	√	√	√	

2004	GMC truck	Yukon XL - 4WD	Passenger door module	√	√	√	√	√	
2004	GMC truck	Yukon XL - 4WD	Driver door module	√	√	√	√	√	
2004	GMC truck	Yukon XL - 4WD	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Yukon XL - 4WD	Driver seat module	√	√	√	√	√	
2004	GMC truck	Yukon XL - 4WD	Rear HVAC	√	√	√	√		
2004	GMC truck	Yukon XL - 4WD	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Yukon XL - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Yukon XL - 4WD	CD changer	√	√	√			
2004	GMC truck	Yukon XL - 4WD	Radio	√	√	√	√		
2004	GMC truck	Yukon XL - 4WD	Rear seat entertainment	√	√	√			
2004	GMC truck	Yukon XL - 4WD	Rear seat audio	√	√	√	√		
2004	GMC truck	Yukon XL - 4WD	Rear aux. climate module	√	√	√	√	√	0516
2004	GMC truck	Yukon XL - 4WD	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Yukon XL - 4WD	Rear wheel steering	√	√	√	√	√	
2004	GMC truck	Yukon XL - 4WD	ABS	√	√	√	√	√	
2004	GMC truck	Yukon XL - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2004	GMC truck	Yukon XL - 4WD	Tire pressure monitor	√	√	√	√	√	0159
2004	GMC truck	Yukon XL - 4WD	Traction assist (if equipped)	√	√	√	√	√	0648
2004	GMC truck	Yukon XL - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	Oldsmobile	Bravada	Powertrain	√	√	√	√	√	
2004	Oldsmobile	Bravada	Onstar	√	√	√	√	√	0647 0683
2004	Oldsmobile	Bravada	Digital radio receiver	√	√	√	√		0516
2004	Oldsmobile	Bravada	Body Control Module	√	√	√	√	√	0550
2004	Oldsmobile	Bravada	Instrument panel cluster	√	√	√	√	√	
2004	Oldsmobile	Bravada	Driver door module	√	√	√	√	√	
2004	Oldsmobile	Bravada	Passenger door module	√	√	√	√	√	
2004	Oldsmobile	Bravada	Driver seat module	√	√	√	√	√	
2004	Oldsmobile	Bravada	Heating and air conditioning	√	√	√	√	√	
2004	Oldsmobile	Bravada	Supplemental inflatable restraint	√	√	√	√		0531
2004	Oldsmobile	Bravada	Amplifier (bose)	√	√	√	√	√	
2004	Oldsmobile	Bravada	Radio	√	√	√	√		0524
2004	Oldsmobile	Bravada	Rear seat audio	√	√	√	√		
2004	Oldsmobile	Bravada	Lift gate module	√	√	√	√	√	
2004	Oldsmobile	Bravada	Rear seat entertainment	√	√	√	√	√	0550
2004	Oldsmobile	Bravada	ABS	√	√	√	√	√	
2004	Oldsmobile	Bravada	4WAL 3 sensor	√	√	√	√	√	0647 0683
2004	Oldsmobile	Bravada - 2WD	Powertrain	√	√	√	√	√	
2004	Oldsmobile	Bravada - 2WD	Onstar	√	√	√	√	√	0647 0683
2004	Oldsmobile	Bravada - 2WD	Digital radio receiver	√	√	√	√		0516
2004	Oldsmobile	Bravada - 2WD	Body Control Module	√	√	√	√	√	0550
2004	Oldsmobile	Bravada - 2WD	Instrument panel cluster	√	√	√	√	√	

2004	Oldsmobile	Bravada - 2WD	Driver door module	√	√	√	√	√	
2004	Oldsmobile	Bravada - 2WD	Passenger door module	√	√	√	√	√	
2004	Oldsmobile	Bravada - 2WD	Driver seat module	√	√	√	√	√	
2004	Oldsmobile	Bravada - 2WD	Heating and air conditioning	√	√	√	√	√	
2004	Oldsmobile	Bravada - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	Oldsmobile	Bravada - 2WD	Amplifier (bose)	√	√	√	√	√	
2004	Oldsmobile	Bravada - 2WD	Radio	√	√	√	√		0524
2004	Oldsmobile	Bravada - 2WD	Rear seat audio	√	√	√	√		
2004	Oldsmobile	Bravada - 2WD	Lift gate module	√	√	√	√	√	
2004	Oldsmobile	Bravada - 2WD	Rear seat entertainment	√	√	√	√	√	0550
2004	Oldsmobile	Bravada - 2WD	ABS	√	√	√	√	√	
2004	Oldsmobile	Bravada - 2WD	4WAL 3 sensor	√	√	√	√	√	0647 0683
2004	Oldsmobile	Silhouette	Powertrain	√	√	√	√	√	
2004	Oldsmobile	Silhouette	Onstar	√	√	√	√	√	0647 0683
2004	Oldsmobile	Silhouette	Driver information center		√	√	√	√	0682 0628 0573 0574
2004	Oldsmobile	Silhouette	Memory seat module		√	√	√	√	
2004	Oldsmobile	Silhouette	Digital radio receiver	√	√	√	√		0516
2004	Oldsmobile	Silhouette	Supplemental inflatable restraint		√	√	√		
2004	Oldsmobile	Silhouette	Radio	√	√	√	√	√	0524
2004	Oldsmobile	Silhouette	Chassis	√	√	√	√	√	0506
2004	Pontiac	Aztek - AWD	Powertrain	√	√	√	√	√	
2004	Pontiac	Aztek - AWD	Onstar	√	√	√	√	√	0647 0683
2004	Pontiac	Aztek - AWD	Digital radio receiver	√	√	√	√		0516
2004	Pontiac	Aztek - AWD	Body Control Module		√	√	√	√	0560 0515 0628 0614 0573 0574 0636 0572
2004	Pontiac	Aztek - AWD	Supplemental inflatable restraint		√	√	√		
2004	Pontiac	Aztek - AWD	Vehicle theft deterrent		√	√	√		
2004	Pontiac	Aztek - AWD	Rear seat entertainment	√	√	√			
2004	Pontiac	Aztek - AWD	Head up dilay		√	√			
2004	Pontiac	Aztek - AWD	Radio		√	√	√	√	0573 0574 0636 0572
2004	Pontiac	Aztek - AWD	Chassis	√	√	√	√	√	0506
2004	Pontiac	Aztek - FWD	Powertrain	√	√	√	√	√	
2004	Pontiac	Aztek - FWD	Onstar	√	√	√	√	√	0647 0683
2004	Pontiac	Aztek - FWD	Digital radio receiver	√	√	√	√		0516
2004	Pontiac	Aztek - FWD	Body Control Module		√	√	√	√	0560 0515 0628 0614 0573 0574 0636 0572
2004	Pontiac	Aztek - FWD	Supplemental inflatable restraint		√	√	√		
2004	Pontiac	Aztek - FWD	Vehicle theft deterrent		√	√	√		
2004	Pontiac	Aztek - FWD	Rear seat entertainment	√	√	√			
2004	Pontiac	Aztek - FWD	Head up dilay		√	√			
2004	Pontiac	Aztek - FWD	Radio		√	√	√	√	0573 0574 0636 0572
2004	Pontiac	Aztek - FWD	Chassis	√	√	√	√	√	0506

2004	Pontiac	Montana	Powertrain	√	√	√	√	√	
2004	Pontiac	Montana	Onstar	√	√	√	√	√	0647 0683 0683
2004	Pontiac	Montana	Supplemental inflatable restraint		√	√	√		
2004	Pontiac	Montana	Driver information center		√	√	√	√	0682 0628 0573 0574
2004	Pontiac	Montana	Digital radio receiver	√	√	√	√		0516
2004	Pontiac	Montana	Radio	√	√	√	√	√	0524
2004	Pontiac	Montana	Chassis	√	√	√	√	√	0506
2004	Pontiac	Montana - 4WD	Powertrain	√	√	√	√	√	
2004	Pontiac	Montana - 4WD	Onstar	√	√	√	√	√	0647 0683 0683
2004	Pontiac	Montana - 4WD	Supplemental inflatable restraint		√	√	√		
2004	Pontiac	Montana - 4WD	Driver information center		√	√	√	√	0682 0628 0573 0574
2004	Pontiac	Montana - 4WD	Digital radio receiver	√	√	√	√		0516
2004	Pontiac	Montana - 4WD	Radio	√	√	√	√	√	0524
2004	Pontiac	Montana - 4WD	Chassis	√	√	√	√	√	0506
2004	Pontiac	Montana Ext.	Powertrain	√	√	√	√	√	
2004	Pontiac	Montana Ext.	Onstar	√	√	√	√	√	0647 0683 0683
2004	Pontiac	Montana Ext.	Supplemental inflatable restraint		√	√	√		
2004	Pontiac	Montana Ext.	Driver information center		√	√	√	√	0682 0628 0573 0574
2004	Pontiac	Montana Ext.	Digital radio receiver	√	√	√	√		0516
2004	Pontiac	Montana Ext.	Radio	√	√	√	√	√	0524
2004	Pontiac	Montana Ext.	Chassis	√	√	√	√	√	0506
2004	Hummer	H2	Powertrain	√	√	√	√	√	
2004	Hummer	H2	Onstar	√	√	√	√	√	0647 0683
2004	Hummer	H2	Digital radio receiver	√	√	√	√		0516
2004	Hummer	H2	Body Control Module	√	√	√	√	√	
2004	Hummer	H2	Passenger door module	√	√	√	√	√	
2004	Hummer	H2	Driver door module	√	√	√	√	√	
2004	Hummer	H2	Driver seat module	√	√	√	√	√	
2004	Hummer	H2	Amplifier (bose)	√	√	√	√	√	
2004	Hummer	H2	Supplemental inflatable restraint	√	√	√	√		0531
2004	Hummer	H2	Radio	√	√	√	√		0524
2004	Hummer	H2	Rear seat audio	√	√	√	√		
2004	Hummer	H2	Heating and air conditioning	√	√	√	√	√	
2004	Hummer	H2	Instrument panel cluster	√	√	√	√	√	0647 0683
2004	Hummer	H2	Navigation radio	√	√	√	√	√	0525
2004	Hummer	H2	Air suension	√	√	√	√	√	
2004	Hummer	H2	ABS		√	√	√	√	0641
2003	Buick	Century	Powertrain	√	√	√	√	√	0493
2003	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0690 0628
2003	Buick	Century	Onstar	√	√	√	√	√	0647 0683
2003	Buick	Century	Supplemental inflatable restraint		√	√	√		0515



2003	Buick	Century	Chassis	√	√	√	√	√	0506
2003	Buick	LeSabre	Powertrain	√	√	√	√	√	0493
2003	Buick	LeSabre	Dash integration module				√	√	0651 0650 0573 0574 0575 0576 0577 0578 0579 0636 0572 0552
2003	Buick	LeSabre	CD changer		√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604
2003	Buick	LeSabre	Climate control panel		√	√	√	√	
2003	Buick	LeSabre	Instrument panel module		√	√	√	√	0630 0667
2003	Buick	LeSabre	Onstar	√	√	√	√	√	0647 0683
2003	Buick	LeSabre	Digital radio receiver	√	√	√	√		0516
2003	Buick	LeSabre	Remote function actuation		√	√		√	
2003	Buick	LeSabre	Supplemental inflatable restraint		√	√			
2003	Buick	LeSabre	Vehicle theft deterrent		√	√	√	√	0651 0650 0573 0574 0575 0576 0577 0578 0579 0636 0572 0552
2003	Buick	LeSabre	Memory seat module	√	√	√	√	√	0647 0683
2003	Buick	LeSabre	Rear integration module		√	√	√	√	
2003	Buick	LeSabre	DRP/ABS/TIM		√	√	√	√	0506
2003	Buick	Park Avenue	Powertrain	√	√	√	√	√	0493
2003	Buick	Park Avenue	Body Control Module		√	√	√	√	0614 0668 0684 0630
2003	Buick	Park Avenue	Onstar	√	√	√	√		0647 0683
2003	Buick	Park Avenue	Personalization		√	√	√	√	0550 0550
2003	Buick	Park Avenue	Vehicle theft deterrent		√	√			
2003	Buick	Park Avenue	DRP/ABS/TIM		√	√	√	√	0506
2003	Buick	Regal	Powertrain	√	√	√	√	√	0493
2003	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0690 0628
2003	Buick	Regal	Onstar	√	√	√	√	√	0647 0683
2003	Buick	Regal	Supplemental inflatable restraint		√	√	√		0515
2003	Buick	Regal	Chassis	√	√	√	√	√	0506
2003	Cadillac	CTS	Powertrain	√	√	√	√	√	
2003	Cadillac	CTS	Amplifier (bose)	√	√	√	√	√	0614 0615 0616 0617 0618 0619 0610 0620 0611 0621 0612 0622 0623 0624 0625 0626
2003	Cadillac	CTS	Radio	√			√		0606 0586 0587 0578 0579 0607 0525 0525
2003	Cadillac	CTS	Lt. headlamp leveling mod.	√	√	√	√	√	0584 0584
2003	Cadillac	CTS	Onstar	√	√	√	√	√	0647 0683
2003	Cadillac	CTS	Rear integration module	√	√	√	√	√	
2003	Cadillac	CTS	Vehicle theft deterrent		√	√			
2003	Cadillac	CTS	Remote function actuation		√	√		√	

2003	Cadillac	CTS	Digital radio receiver	√	√	√	√		0516
2003	Cadillac	CTS	Dash integration module	√	√	√	√	√	0604 0605
2003	Cadillac	CTS	DRP/ABS/TCS	√	√	√	√	√	0506
2003	Cadillac	CTS	VES	√	√	√	√	√	0506
2003	Cadillac	Deville	Powertrain	√	√	√	√	√	
2003	Cadillac	Deville	Dash integration module		√	√	√	√	0614 0615 0619 0586 0630 0667
2003	Cadillac	Deville	CD changer		√	√	√	√	0670 0670 0628 0651 0650 0673 0614
2003	Cadillac	Deville	Instrument panel cluster				√		
2003	Cadillac	Deville	Amplifier (delco)		√	√	√	√	
2003	Cadillac	Deville	Radio		√	√		√	0525
2003	Cadillac	Deville	Memory seat module					√	
2003	Cadillac	Deville	Onstar	√	√	√	√	√	0647 0683
2003	Cadillac	Deville	Digital radio receiver	√	√	√	√		0516
2003	Cadillac	Deville	Navigation radio	√	√	√	√		0658
2003	Cadillac	Deville	Remote function actuation		√	√		√	0672
2003	Cadillac	Deville	Vehicle theft deterrent		√	√			0685
2003	Cadillac	Deville	Driver door switch	√	√	√	√		
2003	Cadillac	Deville	Left rear door module	√	√	√	√	√	
2003	Cadillac	Deville	Right rear door module	√	√	√	√	√	
2003	Cadillac	Deville	Driver door module	√	√	√	√	√	
2003	Cadillac	Deville	Passenger door module	√	√	√	√		0604 0605
2003	Cadillac	Deville	Speed sensitive steering		√	√	√		
2003	Cadillac	DHS	Powertrain	√	√	√	√	√	
2003	Cadillac	DHS	Dash integration module		√	√	√	√	0614 0615 0619 0586 0630 0667
2003	Cadillac	DHS	Amplifier (bose)		√	√	√	√	
2003	Cadillac	DHS	CD changer		√	√	√	√	0670 0670 0628 0651 0650 0673 0614
2003	Cadillac	DHS	Instrument panel cluster				√		0608
2003	Cadillac	DHS	Radio		√	√		√	0525
2003	Cadillac	DHS	Onstar	√	√	√	√	√	0647 0683
2003	Cadillac	DHS	Digital radio receiver	√	√	√	√		0516
2003	Cadillac	DHS	Navigation radio	√	√	√	√		0658
2003	Cadillac	DHS	Remote function actuation		√	√		√	0672
2003	Cadillac	DHS	Vehicle theft deterrent		√	√			0685
2003	Cadillac	DHS	Driver door switch	√	√	√	√		
2003	Cadillac	DHS	Left rear door module	√	√	√	√	√	
2003	Cadillac	DHS	Right rear door module	√	√	√	√	√	
2003	Cadillac	DHS	Driver door module	√	√	√	√	√	
2003	Cadillac	DHS	Passenger door module	√	√	√	√		0604 0605

2003	Cadillac	DHS	eed sensitive steering		√	√	√		
2003	Cadillac	DTS	Powertrain	√	√	√	√	√	
2003	Cadillac	DTS	Dash integration module		√	√	√	√	0614 0615 0619 0586 0630 0667
2003	Cadillac	DTS	Amplifier (bose)		√	√	√	√	
2003	Cadillac	DTS	CD changer		√	√	√	√	0670 0670 0628 0651 0650 0673 0614
2003	Cadillac	DTS	Instrument panel cluster				√		0608
2003	Cadillac	DTS	Radio		√	√		√	0525
2003	Cadillac	DTS	Onstar	√	√	√	√	√	0647 0683
2003	Cadillac	DTS	Digital radio receiver	√	√	√	√		0516
2003	Cadillac	DTS	Navigation radio	√	√	√	√		0658
2003	Cadillac	DTS	Remote function actuation		√	√		√	0672
2003	Cadillac	DTS	Vehicle theft deterrent		√	√			0685
2003	Cadillac	DTS	Driver door switch	√	√	√	√		
2003	Cadillac	DTS	Left rear door module	√	√	√	√	√	
2003	Cadillac	DTS	Right rear door module	√	√	√	√	√	
2003	Cadillac	DTS	Driver door module	√	√	√	√	√	
2003	Cadillac	DTS	Passenger door module	√	√	√	√		0604 0605
2003	Cadillac	DTS	eed sensitive steering		√	√	√		
2003	Cadillac	Seville	Powertrain	√	√	√	√	√	
2003	Cadillac	Seville	Amplifier (bose)		√	√	√	√	0614 0615 0617 0686 0687 0685 0586 0630
2003	Cadillac	Seville	CD changer		√	√	√	√	0670 0670 0628 0651 0650 0673 0614
2003	Cadillac	Seville	Amplifier (delco)		√	√	√	√	
2003	Cadillac	Seville	Instrument panel cluster				√		0608
2003	Cadillac	Seville	Memory seat module		√	√	√	√	
2003	Cadillac	Seville	Radio		√	√		√	0525
2003	Cadillac	Seville	Onstar	√	√	√	√	√	0647 0683
2003	Cadillac	Seville	Digital radio receiver	√	√	√	√		0516
2003	Cadillac	Seville	Navigation radio	√	√	√	√		0658
2003	Cadillac	Seville	Dash integration module						0664
2003	Cadillac	Seville	Remote function actuation		√	√	√	√	0672
2003	Cadillac	Seville	Vehicle theft deterrent	√	√	√	√	√	0614 0615 0617 0686 0687 0685 0586 0630
2003	Cadillac	Seville	eed sensitive steering		√	√	√		
2003	Chevrolet	Alero (export)	Powertrain	√	√	√	√	√	0493
2003	Chevrolet	Alero (export)	Body Control Module	√	√	√	√	√	0675
2003	Chevrolet	Alero (export)	Radio		√	√	√		
2003	Chevrolet	Alero (export)	Vehicle theft deterrent		√	√	√		
2003	Chevrolet	Alero (export)	Chassis	√	√	√	√	√	0506

2003	Chevrolet	Cavalier	Powertrain	√	√	√	√	√	
2003	Chevrolet	Cavalier	Digital radio receiver	√	√	√	√		0516
2003	Chevrolet	Cavalier	Body Control Module	√	√	√	√	√	0633 0675
2003	Chevrolet	Cavalier	Radio				√		
2003	Chevrolet	Cavalier	Onstar	√	√	√	√	√	0647 0683
2003	Chevrolet	Cavalier	Chassis	√	√	√	√	√	0506
2003	Chevrolet	Cavalier (CNG)	Powertrain	√	√	√	√	√	
2003	Chevrolet	Cavalier (CNG)	Digital radio receiver	√	√	√	√		0516
2003	Chevrolet	Cavalier (CNG)	Body Control Module	√	√	√	√	√	0633 0675
2003	Chevrolet	Cavalier (CNG)	Radio				√		
2003	Chevrolet	Cavalier (CNG)	Onstar	√	√	√	√	√	0647 0683
2003	Chevrolet	Cavalier (CNG)	Chassis	√	√	√	√	√	0506
2003	Chevrolet	Optra	Powertrain	√	√	√	√	√	0493
2003	Chevrolet	Corvette	Powertrain	√	√	√	√	√	
2003	Chevrolet	Corvette	Body Control Module		√	√	√	√	0688
2003	Chevrolet	Corvette	Remote function actuation		√	√			0673
2003	Chevrolet	Corvette	Supplemental inflatable restraint		√	√	√	√	0688
2003	Chevrolet	Corvette	ABS/TCS	√	√	√	√	√	
2003	Chevrolet	Corvette	RTD	√	√	√	√	√	
2003	Chevrolet	Impala	Powertrain	√	√	√	√	√	0493
2003	Chevrolet	Impala	Body Control Module		√	√	√	√	0515 0628 0614 0580 0572 0573 0574
2003	Chevrolet	Impala	Onstar	√	√	√	√	√	0647 0683
2003	Chevrolet	Impala	Digital radio receiver	√	√	√	√		0516
2003	Chevrolet	Impala	Supplemental inflatable restraint	√	√	√	√	√	0515 0628 0614 0580 0572 0573 0574
2003	Chevrolet	Impala	Chassis		√	√		√	0506
2003	Chevrolet	Malibu	Powertrain	√	√	√	√	√	0493
2003	Chevrolet	Malibu	Body Control Module	√	√	√	√	√	0633
2003	Chevrolet	Malibu	Radio				√		
2003	Chevrolet	Malibu	Remote function actuation		√	√	√	√	
2003	Chevrolet	Malibu	Chassis	√	√	√	√	√	0506
2003	Chevrolet	Monte Carlo	Powertrain	√	√	√	√	√	0493
2003	Chevrolet	Monte Carlo	Body Control Module		√	√	√	√	0515 0628 0614 0580 0572 0573 0574
2003	Chevrolet	Monte Carlo	Onstar	√	√	√	√	√	0647 0683
2003	Chevrolet	Monte Carlo	Digital radio receiver	√	√	√	√		0516
2003	Chevrolet	Monte Carlo	Supplemental inflatable restraint	√	√	√	√	√	0515 0628 0614 0580 0572 0573 0574
2003	Chevrolet	Monte Carlo	Chassis		√	√		√	0506
2003	Chevrolet	Others	Powertrain	√	√	√	√	√	
2003	Chevrolet	Others	ISU		√	√	√	√	

2003	Chevrolet	Others	Antilock Braking System	√	√	√	√	√	0506
2003	Chevrolet	Others	Chassis	√	√	√	√	√	0506
2003	Oldsmobile	Alero	Powertrain	√	√	√	√	√	0493
2003	Oldsmobile	Alero	Body Control Module	√	√	√		√	0633
2003	Oldsmobile	Alero	Radio	√	√	√	√	√	0675
2003	Oldsmobile	Alero	Instrument panel cluster	√			√		
2003	Oldsmobile	Alero	Onstar	√	√	√	√	√	0647 0683
2003	Oldsmobile	Alero	Digital radio receiver	√	√	√	√		0516
2003	Oldsmobile	Alero	Remote function actuation		√	√	√	√	
2003	Oldsmobile	Alero	Chassis	√	√	√	√	√	0506
2003	Oldsmobile	Aurora	Powertrain	√	√	√	√	√	
2003	Oldsmobile	Aurora	CD changer		√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604 0628 0630 0667 0573 0574 0575 0576 0577 0578 0579 0572 0552 0525 0573 0574 0575 0576 0577 0578 0579 0636 0572 0552 0693
2003	Oldsmobile	Aurora	Memory seat module		√	√	√	√	
2003	Oldsmobile	Aurora	Onstar	√	√	√	√	√	0647 0683
2003	Oldsmobile	Aurora	Remote function actuation		√	√		√	
2003	Oldsmobile	Aurora	Supplemental inflatable restraint		√	√			
2003	Oldsmobile	Aurora	Vehicle theft deterrent		√	√			0677
2003	Oldsmobile	Aurora	Rear integration module		√	√	√	√	
2003	Oldsmobile	Aurora	DRP/ABS/TIM		√	√	√	√	0506
2003	Pontiac	Bonneville	Powertrain	√	√	√	√	√	0493
2003	Pontiac	Bonneville	Instrument panel cluster				√		
2003	Pontiac	Bonneville	Dash integration module				√	√	0573 0574 0575 0576 0577 0578 0579 0636
2003	Pontiac	Bonneville	CD changer		√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604
2003	Pontiac	Bonneville	Instrument panel module		√	√	√	√	0630 0667
2003	Pontiac	Bonneville	Digital radio receiver	√	√	√	√		0516
2003	Pontiac	Bonneville	Onstar	√	√	√	√	√	0647 0683
2003	Pontiac	Bonneville	Supplemental inflatable restraint		√	√			
2003	Pontiac	Bonneville	Vehicle theft deterrent		√	√	√	√	0677
2003	Pontiac	Bonneville	Climate control panel	√	√	√	√	√	0516
2003	Pontiac	Bonneville	Remote function actuation		√	√	√	√	0677
2003	Pontiac	Bonneville	Rear integration module	√	√	√	√	√	0678
2003	Pontiac	Bonneville	DRP/ABS/TIM		√	√	√	√	0506
2003	Pontiac	Grand Am	Powertrain	√	√	√	√	√	0493
2003	Pontiac	Grand Am	Body Control Module	√	√	√		√	0633

2003	Pontiac	Grand Am	Radio	√	√	√	√	√	0675
2003	Pontiac	Grand Am	Instrument panel cluster	√			√		
2003	Pontiac	Grand Am	Onstar	√	√	√	√	√	0647 0683
2003	Pontiac	Grand Am	Digital radio receiver	√	√	√	√		0516
2003	Pontiac	Grand Am	Remote function actuation		√	√	√	√	
2003	Pontiac	Grand Am	Chassis	√	√	√	√	√	0506
2003	Pontiac	Grand Prix	Powertrain	√	√	√	√	√	0493
2003	Pontiac	Grand Prix	Vehicle theft deterrent				√		
2003	Pontiac	Grand Prix	Onstar	√	√	√	√		0647 0683
2003	Pontiac	Grand Prix	Supplemental inflatable restraint		√	√	√		
2003	Pontiac	Grand Am	Powertrain	√	√	√	√	√	0493
2003	Pontiac	Grand Am	Body Control Module	√	√	√		√	0633
2003	Pontiac	Grand Am	Radio	√	√	√	√	√	0675
2003	Pontiac	Grand Am	Instrument panel cluster	√			√		
2003	Pontiac	Grand Am	Onstar	√	√	√	√	√	0647 0683
2003	Pontiac	Grand Am	Digital radio receiver	√	√	√	√		0516
2003	Pontiac	Grand Am	Remote function actuation		√	√	√	√	
2003	Pontiac	Grand Am	Chassis	√	√	√	√	√	0506
2003	Pontiac	Sunfire	Powertrain	√	√	√	√	√	
2003	Pontiac	Sunfire	Radio				√		
2003	Pontiac	Sunfire	Body Control Module	√	√	√	√	√	0633 0675
2003	Pontiac	Sunfire	Onstar	√	√	√	√	√	0647 0683
2003	Pontiac	Sunfire	Digital radio receiver	√	√	√	√		0516
2003	Pontiac	Sunfire	Chassis	√	√	√	√	√	0506
2003	Pontiac	Vibe - AWD	Cruise Control		√	√			
2003	Pontiac	Vibe - AWD	Chassis		√	√	√	√	
2003	Pontiac	Vibe - FWD	Cruise Control		√	√			
2003	Pontiac	Vibe - FWD	Chassis		√	√	√	√	
2003	Pontiac	Others	Powertrain	√	√	√	√	√	
2003	Pontiac	Others	Chassis	√	√	√	√	√	
2003	Buick	Rendezvous - AWD	Powertrain	√	√	√	√	√	0493
2003	Buick	Rendezvous - AWD	Body Control Module		√	√	√	√	0560 0515 0628 0614 0573 0574 0636 0572
2003	Buick	Rendezvous - AWD	Onstar	√	√	√	√	√	0647 0683
2003	Buick	Rendezvous - AWD	Digital radio receiver	√	√	√	√	√	0516
2003	Buick	Rendezvous - AWD	Vehicle theft deterrent		√	√			
2003	Buick	Rendezvous - AWD	Supplemental inflatable restraint		√	√	√		
2003	Buick	Rendezvous - AWD	Rear seat entertainment	√	√	√	√	√	0560 0515 0628 0614 0573 0574 0636 0572
2003	Buick	Rendezvous - AWD	Chassis		√	√	√	√	0506
2003	Buick	Rendezvous - FWD	Powertrain	√	√	√	√	√	0493

2003	Buick	Rendezvous - FWD	Body Control Module		√	√	√	√	0560 0515 0628 0614 0573 0574 0636 0572
2003	Buick	Rendezvous - FWD	Onstar	√	√	√	√	√	0647 0683
2003	Buick	Rendezvous - FWD	Digital radio receiver	√	√	√	√	√	0516
2003	Buick	Rendezvous - FWD	Vehicle theft deterrent		√	√			
2003	Buick	Rendezvous - FWD	Supplemental inflatable restraint		√	√	√		
2003	Buick	Rendezvous - FWD	Rear seat entertainment	√	√	√	√	√	0560 0515 0628 0614 0573 0574 0636 0572
2003	Buick	Rendezvous - FWD	Chassis		√	√	√	√	0506
2003	Cadillac	Escalade - 2WD	Powertrain	√	√	√	√	√	
2003	Cadillac	Escalade - 2WD	Body Control Module	√	√	√	√	√	
2003	Cadillac	Escalade - 2WD	Heating and air conditioning	√	√	√	√	√	
2003	Cadillac	Escalade - 2WD	Radio				√		
2003	Cadillac	Escalade - 2WD	Supplemental inflatable restraint		√	√			0531
2003	Cadillac	Escalade - 2WD	Onstar	√	√	√	√	√	0647 0683
2003	Cadillac	Escalade - 2WD	Digital radio receiver	√	√	√	√		0516
2003	Cadillac	Escalade - 2WD	Instrument panel cluster	√	√	√	√	√	
2003	Cadillac	Escalade - 2WD	Rear seat entertainment	√	√	√			
2003	Cadillac	Escalade - 2WD	Passenger presence system	√	√	√	√	√	0512
2003	Cadillac	Escalade - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2003	Cadillac	Escalade - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2003	Cadillac	Escalade - 2WD	ABS	√	√	√	√	√	
2003	Cadillac	Escalade - 2WD	Traction assist (if equipped)	√	√	√	√	√	0648
2003	Cadillac	Escalade - AWD	Powertrain	√	√	√	√	√	
2003	Cadillac	Escalade - AWD	Body Control Module	√	√	√	√	√	
2003	Cadillac	Escalade - AWD	Heating and air conditioning	√	√	√	√	√	
2003	Cadillac	Escalade - AWD	Radio				√		
2003	Cadillac	Escalade - AWD	Supplemental inflatable restraint		√	√			0531
2003	Cadillac	Escalade - AWD	Onstar	√	√	√	√	√	0647 0683
2003	Cadillac	Escalade - AWD	Digital radio receiver	√	√	√	√		0516
2003	Cadillac	Escalade - AWD	Instrument panel cluster	√	√	√	√	√	
2003	Cadillac	Escalade - AWD	Rear seat entertainment	√	√	√			
2003	Cadillac	Escalade - AWD	Passenger presence system	√	√	√	√	√	0512
2003	Cadillac	Escalade - AWD	Amplifier (bose)	√	√	√	√	√	0631
2003	Cadillac	Escalade - AWD	ESC (if equipped)	√	√	√	√	√	0648
2003	Cadillac	Escalade - AWD	ABS	√	√	√	√	√	
2003	Cadillac	Escalade - AWD	Traction assist (if equipped)	√	√	√	√	√	0648
2003	Cadillac	Escalade ESV	Powertrain	√	√	√	√	√	
2003	Cadillac	Escalade ESV	Body Control Module	√	√	√	√	√	
2003	Cadillac	Escalade ESV	Heating and air conditioning	√	√	√	√	√	
2003	Cadillac	Escalade ESV	Radio				√		
2003	Cadillac	Escalade ESV	Supplemental inflatable restraint		√	√			0531

2003	Cadillac	Escalade ESV	Onstar	√	√	√	√	√	0647 0683
2003	Cadillac	Escalade ESV	Digital radio receiver	√	√	√	√		0516
2003	Cadillac	Escalade ESV	Instrument panel cluster	√	√	√	√	√	
2003	Cadillac	Escalade ESV	Rear seat entertainment	√	√	√			
2003	Cadillac	Escalade ESV	Passenger presence system	√	√	√	√	√	0512
2003	Cadillac	Escalade ESV	Amplifier (bose)	√	√	√	√	√	0631
2003	Cadillac	Escalade ESV	ESC (if equipped)	√	√	√	√	√	0648
2003	Cadillac	Escalade ESV	ABS	√	√	√	√	√	
2003	Cadillac	Escalade ESV	Traction assist (if equipped)	√	√	√	√	√	0648
2003	Cadillac	Escalade EXT	Powertrain	√	√	√	√	√	
2003	Cadillac	Escalade EXT	Body Control Module	√	√	√	√	√	
2003	Cadillac	Escalade EXT	Heating and air conditioning	√	√	√	√	√	
2003	Cadillac	Escalade EXT	Radio				√		
2003	Cadillac	Escalade EXT	Supplemental inflatable restraint		√	√			0531
2003	Cadillac	Escalade EXT	Onstar	√	√	√	√	√	0647 0683
2003	Cadillac	Escalade EXT	Digital radio receiver	√	√	√	√		0516
2003	Cadillac	Escalade EXT	Instrument panel cluster	√	√	√	√	√	
2003	Cadillac	Escalade EXT	Rear seat entertainment	√	√	√			
2003	Cadillac	Escalade EXT	Passenger presence system	√	√	√	√	√	0512
2003	Cadillac	Escalade EXT	Amplifier (bose)	√	√	√	√	√	0631
2003	Cadillac	Escalade EXT	ESC (if equipped)	√	√	√	√	√	0648
2003	Cadillac	Escalade EXT	ABS	√	√	√	√	√	
2003	Cadillac	Escalade EXT	Traction assist (if equipped)	√	√	√	√	√	0648
2003	Cadillac	Incomplete	Amplifier (delco)		√	√	√	√	0664 0618 0619 0628 0650 0586 0630 0667 0671 0578 0579 0525
2003	Cadillac	Incomplete	Rear integration module				√		
2003	Cadillac	Incomplete	Vehicle theft deterrent		√	√			0691 0692
2003	Cadillac	Incomplete	Dash integration module		√	√			0604 0605
2003	Cadillac	Incomplete	Remote function actuation		√	√		√	
2003	Cadillac	Incomplete	Driver door module	√	√	√	√	√	
2003	Cadillac	Incomplete	Driver door switch	√	√	√	√		
2003	Cadillac	Incomplete	Passenger door module	√	√	√	√	√	0664 0618 0619 0628 0650 0586 0630 0667 0671 0578 0579 0525
2003	Cadillac	Incomplete	Rear climate control panel		√	√	√	√	
2003	Cadillac	Incomplete	Onstar	√	√	√	√	√	0647 0683
2003	Cadillac	Incomplete	Left mid door module	√	√	√	√	√	
2003	Cadillac	Incomplete	Left rear door module	√	√	√	√	√	
2003	Cadillac	Incomplete	Right mid door module	√	√	√	√	√	
2003	Cadillac	Incomplete	Right rear door module	√	√	√	√	√	
2003	Cadillac	Incomplete	DRP/ABS/TCS		√	√	√	√	



2003	Cadillac	Incomplete	Powertrain	√	√	√	√	√	0493
2003	Chevrolet	Astro - 2WD	Powertrain	√	√	√	√	√	0638
2003	Chevrolet	Astro - 2WD	Body Control Module		√	√	√	√	
2003	Chevrolet	Astro - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2003	Chevrolet	Astro - 2WD	Instrument panel cluster					√	0531
2003	Chevrolet	Astro - 2WD	4WAL 3 sensor		√	√	√	√	
2003	Chevrolet	Astro - 4WD	Powertrain	√	√	√	√	√	0638
2003	Chevrolet	Astro - 4WD	Body Control Module		√	√	√	√	
2003	Chevrolet	Astro - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2003	Chevrolet	Astro - 4WD	Instrument panel cluster					√	0531
2003	Chevrolet	Astro - 4WD	4WAL 3 sensor		√	√	√	√	
2003	Chevrolet	Avalanche - 2WD	Powertrain	√	√	√	√	√	
2003	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	
2003	Chevrolet	Avalanche - 2WD	Heating and air conditioning	√	√	√	√	√	
2003	Chevrolet	Avalanche - 2WD	Radio				√		
2003	Chevrolet	Avalanche - 2WD	Supplemental inflatable restraint		√	√			0531
2003	Chevrolet	Avalanche - 2WD	Onstar	√	√	√	√	√	0647 0683
2003	Chevrolet	Avalanche - 2WD	Digital radio receiver	√	√	√	√		0516
2003	Chevrolet	Avalanche - 2WD	Instrument panel cluster	√	√	√	√	√	
2003	Chevrolet	Avalanche - 2WD	Vehicle theft deterrent	√	√	√	√		
2003	Chevrolet	Avalanche - 2WD	Rear seat entertainment	√	√	√			
2003	Chevrolet	Avalanche - 2WD	Passenger presence system	√	√	√	√	√	0512
2003	Chevrolet	Avalanche - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2003	Chevrolet	Avalanche - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2003	Chevrolet	Avalanche - 2WD	ABS	√	√	√	√	√	
2003	Chevrolet	Avalanche - 2WD	Traction assist (if equipped)	√	√	√	√	√	0648
2003	Chevrolet	Avalanche - 4WD	Powertrain	√	√	√	√	√	0571
2003	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	
2003	Chevrolet	Avalanche - 4WD	Heating and air conditioning	√	√	√	√	√	
2003	Chevrolet	Avalanche - 4WD	Radio				√		
2003	Chevrolet	Avalanche - 4WD	Supplemental inflatable restraint		√	√			0531
2003	Chevrolet	Avalanche - 4WD	Onstar	√	√	√	√	√	0647 0683
2003	Chevrolet	Avalanche - 4WD	Digital radio receiver	√	√	√	√		0516
2003	Chevrolet	Avalanche - 4WD	Instrument panel cluster	√	√	√	√	√	
2003	Chevrolet	Avalanche - 4WD	Vehicle theft deterrent	√	√	√	√		
2003	Chevrolet	Avalanche - 4WD	Rear seat entertainment	√	√	√			
2003	Chevrolet	Avalanche - 4WD	Passenger presence system	√	√	√	√	√	0512
2003	Chevrolet	Avalanche - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2003	Chevrolet	Avalanche - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2003	Chevrolet	Avalanche - 4WD	ABS	√	√	√	√	√	
2003	Chevrolet	Avalanche - 4WD	Traction assist (if equipped)	√	√	√	√	√	0648

2003	Chevrolet	Blazer - 2WD	Powertrain	√	√	√	√	√	0638
2003	Chevrolet	Blazer - 2WD	Body Control Module		√	√	√	√	0524
2003	Chevrolet	Blazer - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2003	Chevrolet	Blazer - 2WD	4WAL 3 sensor		√	√	√	√	
2003	Chevrolet	Blazer - 2WD	Traction assist (if equipped)		√	√	√	√	
2003	Chevrolet	Blazer - 4WD	Powertrain	√	√	√	√	√	0638
2003	Chevrolet	Blazer - 4WD	Body Control Module		√	√	√	√	0524
2003	Chevrolet	Blazer - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2003	Chevrolet	Blazer - 4WD	4WAL 3 sensor		√	√	√	√	
2003	Chevrolet	Blazer - 4WD	Traction assist (if equipped)		√	√	√	√	
2003	Chevrolet	Blazer - 4WD - RHD	Powertrain	√	√	√	√	√	0638
2003	Chevrolet	Blazer - 4WD - RHD	Body Control Module		√	√	√	√	0524
2003	Chevrolet	Blazer - 4WD - RHD	Supplemental inflatable restraint		√	√			0531
2003	Chevrolet	Blazer - 4WD - RHD	4WAL 3 sensor		√	√	√	√	
2003	Chevrolet	Blazer - 4WD - RHD	Traction assist (if equipped)		√	√	√	√	
2003	Chevrolet	C Silverado - 2WD	Powertrain	√	√	√	√	√	0638
2003	Chevrolet	C Silverado - 2WD	Body Control Module	√	√	√	√	√	
2003	Chevrolet	C Silverado - 2WD	Heating and air conditioning	√	√	√	√	√	
2003	Chevrolet	C Silverado - 2WD	Radio				√		
2003	Chevrolet	C Silverado - 2WD	Supplemental inflatable restraint		√	√			0531
2003	Chevrolet	C Silverado - 2WD	Onstar	√	√	√	√	√	0647 0683
2003	Chevrolet	C Silverado - 2WD	Digital radio receiver	√	√	√	√		0516
2003	Chevrolet	C Silverado - 2WD	Instrument panel cluster	√	√	√	√	√	
2003	Chevrolet	C Silverado - 2WD	Vehicle theft deterrent	√	√	√	√		
2003	Chevrolet	C Silverado - 2WD	Rear seat entertainment	√	√	√			
2003	Chevrolet	C Silverado - 2WD	Passenger presence system	√	√	√	√	√	0512
2003	Chevrolet	C Silverado - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2003	Chevrolet	C Silverado - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2003	Chevrolet	C Silverado - 2WD	ABS	√	√	√	√	√	
2003	Chevrolet	C Silverado - 2WD	Traction assist (if equipped)	√	√	√	√	√	0648
2003	Chevrolet	C Silverado - 2WD (CNG)	Powertrain	√	√	√	√	√	
2003	Chevrolet	C Silverado - 2WD (CNG)	Body Control Module	√	√	√	√	√	
2003	Chevrolet	C Silverado - 2WD (CNG)	Heating and air conditioning	√	√	√	√	√	
2003	Chevrolet	C Silverado - 2WD (CNG)	Radio				√		
2003	Chevrolet	C Silverado - 2WD (CNG)	Supplemental inflatable restraint		√	√			0531
2003	Chevrolet	C Silverado - 2WD (CNG)	Onstar	√	√	√	√	√	0647 0683
2003	Chevrolet	C Silverado - 2WD (CNG)	Digital radio receiver	√	√	√	√		0516
2003	Chevrolet	C Silverado - 2WD (CNG)	Instrument panel cluster	√	√	√	√	√	
2003	Chevrolet	C Silverado - 2WD (CNG)	Vehicle theft deterrent	√	√	√	√		
2003	Chevrolet	C Silverado - 2WD (CNG)	Rear seat entertainment	√	√	√			
2003	Chevrolet	C Silverado - 2WD (CNG)	Passenger presence system	√	√	√	√	√	0512

2003	Chevrolet	C Silverado - 2WD (CNG)	Amplifier (bose)	√	√	√	√	√	0631
2003	Chevrolet	C Silverado - 2WD (CNG)	ESC (if equipped)	√	√	√	√	√	0648
2003	Chevrolet	C Silverado - 2WD (CNG)	ABS	√	√	√	√	√	
2003	Chevrolet	C Silverado - 2WD (CNG)	Traction assist (if equipped)	√	√	√	√	√	0648
2003	Chevrolet	Express (CNG)	Powertrain	√	√	√	√	√	
2003	Chevrolet	Express (CNG)	Body Control Module	√	√	√	√	√	
2003	Chevrolet	Express (CNG)	Supplemental inflatable restraint						0531
2003	Chevrolet	Express (CNG)	Onstar	√	√	√	√	√	0647 0683
2003	Chevrolet	Express (CNG)	ABS	√	√	√	√	√	
2003	Chevrolet	Express - 2WD	Powertrain	√	√	√	√	√	0638
2003	Chevrolet	Express - 2WD	Body Control Module	√	√	√	√	√	
2003	Chevrolet	Express - 2WD	Supplemental inflatable restraint						0531
2003	Chevrolet	Express - 2WD	Onstar	√	√	√	√	√	0647 0683
2003	Chevrolet	Express - 2WD	ABS	√	√	√	√	√	
2003	Chevrolet	Express - AWD	Powertrain	√	√	√	√	√	0638
2003	Chevrolet	Express - AWD	Body Control Module	√	√	√	√	√	
2003	Chevrolet	Express - AWD	Supplemental inflatable restraint						0531
2003	Chevrolet	Express - AWD	Onstar	√	√	√	√	√	0647 0683
2003	Chevrolet	Express - AWD	ABS	√	√	√	√	√	
2003	Chevrolet	K Silverado - 4WD	Powertrain	√	√	√	√	√	0638
2003	Chevrolet	K Silverado - 4WD	Body Control Module	√	√	√	√	√	
2003	Chevrolet	K Silverado - 4WD	Heating and air conditioning	√	√	√	√	√	
2003	Chevrolet	K Silverado - 4WD	Radio				√		
2003	Chevrolet	K Silverado - 4WD	Supplemental inflatable restraint		√	√			0531
2003	Chevrolet	K Silverado - 4WD	Onstar	√	√	√	√	√	0647 0683
2003	Chevrolet	K Silverado - 4WD	Digital radio receiver	√	√	√	√		0516
2003	Chevrolet	K Silverado - 4WD	Instrument panel cluster	√	√	√	√	√	
2003	Chevrolet	K Silverado - 4WD	Vehicle theft deterrent	√	√	√	√		
2003	Chevrolet	K Silverado - 4WD	Rear seat entertainment	√	√	√			
2003	Chevrolet	K Silverado - 4WD	Passenger presence system	√	√	√	√	√	0512
2003	Chevrolet	K Silverado - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2003	Chevrolet	K Silverado - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2003	Chevrolet	K Silverado - 4WD	ABS	√	√	√	√	√	
2003	Chevrolet	K Silverado - 4WD	Traction assist (if equipped)	√	√	√	√	√	0648
2003	Chevrolet	K Silverado - 4WD (CNG)	Powertrain	√	√	√	√	√	
2003	Chevrolet	K Silverado - 4WD (CNG)	Body Control Module	√	√	√	√	√	
2003	Chevrolet	K Silverado - 4WD (CNG)	Heating and air conditioning	√	√	√	√	√	
2003	Chevrolet	K Silverado - 4WD (CNG)	Radio				√		
2003	Chevrolet	K Silverado - 4WD (CNG)	Supplemental inflatable restraint		√	√			0531
2003	Chevrolet	K Silverado - 4WD (CNG)	Onstar	√	√	√	√	√	0647 0683
2003	Chevrolet	K Silverado - 4WD (CNG)	Digital radio receiver	√	√	√	√		0516

2003	Chevrolet	K Silverado - 4WD (CNG)	Instrument panel cluster	√	√	√	√	√	
2003	Chevrolet	K Silverado - 4WD (CNG)	Vehicle theft deterrent	√	√	√	√		
2003	Chevrolet	K Silverado - 4WD (CNG)	Rear seat entertainment	√	√	√			
2003	Chevrolet	K Silverado - 4WD (CNG)	Passenger presence system	√	√	√	√	√	0512
2003	Chevrolet	K Silverado - 4WD (CNG)	Amplifier (bose)	√	√	√	√	√	0631
2003	Chevrolet	K Silverado - 4WD (CNG)	ESC (if equipped)	√	√	√	√	√	0648
2003	Chevrolet	K Silverado - 4WD (CNG)	ABS	√	√	√	√	√	
2003	Chevrolet	K Silverado - 4WD (CNG)	Traction assist (if equipped)	√	√	√	√	√	0648
2003	Chevrolet	S10 Pickup - 2WD	Powertrain	√	√	√	√	√	0638
2003	Chevrolet	S10 Pickup - 2WD	Body Control Module		√	√	√	√	0524
2003	Chevrolet	S10 Pickup - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2003	Chevrolet	S10 Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
2003	Chevrolet	S10 Pickup - 2WD	Traction assist (if equipped)		√	√	√	√	
2003	Chevrolet	S10 Pickup - 4WD	Powertrain	√	√	√	√	√	0638
2003	Chevrolet	S10 Pickup - 4WD	Body Control Module		√	√	√	√	0524
2003	Chevrolet	S10 Pickup - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2003	Chevrolet	S10 Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
2003	Chevrolet	S10 Pickup - 4WD	Traction assist (if equipped)		√	√	√	√	
2003	Chevrolet	SSR	Powertrain	√	√	√	√	√	
2003	Chevrolet	SSR	Amplifier (bose)	√	√	√	√	√	
2003	Chevrolet	SSR	Supplemental inflatable restraint		√	√			0531
2003	Chevrolet	SSR	4WAL 3 sensor		√	√	√	√	
2003	Chevrolet	SSR	Traction assist (if equipped)		√	√	√	√	
2003	Chevrolet	Suburban - 2WD	Powertrain	√	√	√	√	√	0571
2003	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	
2003	Chevrolet	Suburban - 2WD	Heating and air conditioning	√	√	√	√	√	
2003	Chevrolet	Suburban - 2WD	Radio				√		
2003	Chevrolet	Suburban - 2WD	Supplemental inflatable restraint		√	√			0531
2003	Chevrolet	Suburban - 2WD	Onstar	√	√	√	√	√	0647 0683
2003	Chevrolet	Suburban - 2WD	Digital radio receiver	√	√	√	√		0516
2003	Chevrolet	Suburban - 2WD	Instrument panel cluster	√	√	√	√	√	
2003	Chevrolet	Suburban - 2WD	Vehicle theft deterrent	√	√	√	√		
2003	Chevrolet	Suburban - 2WD	Rear seat entertainment	√	√	√			
2003	Chevrolet	Suburban - 2WD	Passenger presence system	√	√	√	√	√	0512
2003	Chevrolet	Suburban - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2003	Chevrolet	Suburban - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2003	Chevrolet	Suburban - 2WD	ABS	√	√	√	√	√	
2003	Chevrolet	Suburban - 2WD	Traction assist (if equipped)	√	√	√	√	√	0648
2003	Chevrolet	Suburban - 4WD	Powertrain	√	√	√	√	√	0571
2003	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	
2003	Chevrolet	Suburban - 4WD	Heating and air conditioning	√	√	√	√	√	

2003	Chevrolet	Suburban - 4WD	Radio				√		
2003	Chevrolet	Suburban - 4WD	Supplemental inflatable restraint		√	√			0531
2003	Chevrolet	Suburban - 4WD	Onstar	√	√	√	√	√	0647 0683
2003	Chevrolet	Suburban - 4WD	Digital radio receiver	√	√	√	√		0516
2003	Chevrolet	Suburban - 4WD	Instrument panel cluster	√	√	√	√	√	
2003	Chevrolet	Suburban - 4WD	Vehicle theft deterrent	√	√	√	√		
2003	Chevrolet	Suburban - 4WD	Rear seat entertainment	√	√	√			
2003	Chevrolet	Suburban - 4WD	Passenger presence system	√	√	√	√	√	0512
2003	Chevrolet	Suburban - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2003	Chevrolet	Suburban - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2003	Chevrolet	Suburban - 4WD	ABS	√	√	√	√	√	
2003	Chevrolet	Suburban - 4WD	Traction assist (if equipped)	√	√	√	√	√	0648
2003	Chevrolet	Tahoe - 2WD	Powertrain	√	√	√	√	√	
2003	Chevrolet	Tahoe - 2WD	Body Control Module	√	√	√	√	√	
2003	Chevrolet	Tahoe - 2WD	Heating and air conditioning	√	√	√	√	√	
2003	Chevrolet	Tahoe - 2WD	Radio				√		
2003	Chevrolet	Tahoe - 2WD	Supplemental inflatable restraint		√	√			0531
2003	Chevrolet	Tahoe - 2WD	Onstar	√	√	√	√	√	0647 0683
2003	Chevrolet	Tahoe - 2WD	Digital radio receiver	√	√	√	√		0516
2003	Chevrolet	Tahoe - 2WD	Instrument panel cluster	√	√	√	√	√	
2003	Chevrolet	Tahoe - 2WD	Vehicle theft deterrent	√	√	√	√		
2003	Chevrolet	Tahoe - 2WD	Rear seat entertainment	√	√	√			
2003	Chevrolet	Tahoe - 2WD	Passenger presence system	√	√	√	√	√	0512
2003	Chevrolet	Tahoe - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2003	Chevrolet	Tahoe - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2003	Chevrolet	Tahoe - 2WD	ABS	√	√	√	√	√	
2003	Chevrolet	Tahoe - 2WD	Traction assist (if equipped)	√	√	√	√	√	0648
2003	Chevrolet	Tahoe - 4WD	Powertrain	√	√	√	√	√	
2003	Chevrolet	Tahoe - 4WD	Body Control Module	√	√	√	√	√	
2003	Chevrolet	Tahoe - 4WD	Heating and air conditioning	√	√	√	√	√	
2003	Chevrolet	Tahoe - 4WD	Radio				√		
2003	Chevrolet	Tahoe - 4WD	Supplemental inflatable restraint		√	√			0531
2003	Chevrolet	Tahoe - 4WD	Onstar	√	√	√	√	√	0647 0683
2003	Chevrolet	Tahoe - 4WD	Digital radio receiver	√	√	√	√		0516
2003	Chevrolet	Tahoe - 4WD	Instrument panel cluster	√	√	√	√	√	
2003	Chevrolet	Tahoe - 4WD	Vehicle theft deterrent	√	√	√	√		
2003	Chevrolet	Tahoe - 4WD	Rear seat entertainment	√	√	√			
2003	Chevrolet	Tahoe - 4WD	Passenger presence system	√	√	√	√	√	0512
2003	Chevrolet	Tahoe - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2003	Chevrolet	Tahoe - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2003	Chevrolet	Tahoe - 4WD	ABS	√	√	√	√	√	

2003	Chevrolet	Tahoe - 4WD	Traction assist (if equipped)	√	√	√	√	√	0648
2003	Chevrolet	Tracker - 2WD	Powertrain	√	√	√	√	√	
2003	Chevrolet	Tracker - 2WD	Supplemental inflatable restraint		√	√	√		
2003	Chevrolet	Tracker - 2WD	Chassis	√	√	√	√	√	0506
2003	Chevrolet	Tracker - 4WD	Powertrain	√	√	√	√	√	
2003	Chevrolet	Tracker - 4WD	Supplemental inflatable restraint		√	√	√		
2003	Chevrolet	Tracker - 4WD	Chassis	√	√	√	√	√	0506
2003	Chevrolet	TrailBlazer - 2WD	Powertrain	√	√	√	√	√	
2003	Chevrolet	TrailBlazer - 2WD	Amplifier (bose)	√	√	√	√	√	
2003	Chevrolet	TrailBlazer - 2WD	Rear seat audio				√		
2003	Chevrolet	TrailBlazer - 2WD	Heating and air conditioning				√	√	
2003	Chevrolet	TrailBlazer - 2WD	Supplemental inflatable restraint		√	√			0531
2003	Chevrolet	TrailBlazer - 2WD	Onstar	√	√	√	√	√	0647 0683
2003	Chevrolet	TrailBlazer - 2WD	Vehicle theft deterrent	√	√	√	√		
2003	Chevrolet	TrailBlazer - 2WD	Radio		√	√	√		
2003	Chevrolet	TrailBlazer - 2WD	Body Control Module	√	√	√	√	√	0550
2003	Chevrolet	TrailBlazer - 2WD	Rear HVAC/RSA	√	√	√	√	√	0531
2003	Chevrolet	TrailBlazer - 2WD	4WAL 3 sensor		√	√	√	√	
2003	Chevrolet	TrailBlazer - 2WD	Traction assist (if equipped)		√	√	√	√	
2003	Chevrolet	TrailBlazer - 4WD	Powertrain	√	√	√	√	√	
2003	Chevrolet	TrailBlazer - 4WD	Amplifier (bose)	√	√	√	√	√	
2003	Chevrolet	TrailBlazer - 4WD	Rear seat audio				√		
2003	Chevrolet	TrailBlazer - 4WD	Heating and air conditioning				√	√	
2003	Chevrolet	TrailBlazer - 4WD	Supplemental inflatable restraint		√	√			0531
2003	Chevrolet	TrailBlazer - 4WD	Onstar	√	√	√	√	√	0647 0683
2003	Chevrolet	TrailBlazer - 4WD	Vehicle theft deterrent	√	√	√	√		
2003	Chevrolet	TrailBlazer - 4WD	Radio		√	√	√		
2003	Chevrolet	TrailBlazer - 4WD	Body Control Module	√	√	√	√	√	0550
2003	Chevrolet	TrailBlazer - 4WD	Rear HVAC/RSA	√	√	√	√	√	0531
2003	Chevrolet	TrailBlazer - 4WD	4WAL 3 sensor		√	√	√	√	
2003	Chevrolet	TrailBlazer - 4WD	Traction assist (if equipped)		√	√	√	√	
2003	Chevrolet	Venture	Powertrain	√	√	√	√	√	0493
2003	Chevrolet	Venture	Onstar	√	√	√	√	√	0647 0683
2003	Chevrolet	Venture	Driver information center		√	√	√	√	0682 0628 0573 0574
2003	Chevrolet	Venture	Radio				√		
2003	Chevrolet	Venture	Supplemental inflatable restraint	√	√	√	√	√	0524
2003	Chevrolet	Venture	Chassis	√	√	√	√	√	0506
2003	GMC truck	Envoy - 2WD	Powertrain	√	√	√	√	√	
2003	GMC truck	Envoy - 2WD	Amplifier (bose)	√	√	√	√	√	
2003	GMC truck	Envoy - 2WD	Rear seat audio				√		
2003	GMC truck	Envoy - 2WD	Heating and air conditioning				√	√	

2003	GMC truck	Envoy - 2WD	Supplemental inflatable restraint		√	√			0531
2003	GMC truck	Envoy - 2WD	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	Envoy - 2WD	Radio		√	√	√		
2003	GMC truck	Envoy - 2WD	Body Control Module	√	√	√	√	√	0550
2003	GMC truck	Envoy - 2WD	Rear HVAC/RSA	√	√	√	√	√	0531
2003	GMC truck	Envoy - 2WD	4WAL 3 sensor		√	√	√	√	
2003	GMC truck	Envoy - 2WD	Traction assist (if equipped)		√	√	√	√	
2003	GMC truck	Envoy - 4WD	Powertrain	√	√	√	√	√	
2003	GMC truck	Envoy - 4WD	Amplifier (bose)	√	√	√	√	√	
2003	GMC truck	Envoy - 4WD	Rear seat audio				√		
2003	GMC truck	Envoy - 4WD	Heating and air conditioning				√	√	
2003	GMC truck	Envoy - 4WD	Supplemental inflatable restraint		√	√			0531
2003	GMC truck	Envoy - 4WD	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	Envoy - 4WD	Radio		√	√	√		
2003	GMC truck	Envoy - 4WD	Body Control Module	√	√	√	√	√	0550
2003	GMC truck	Envoy - 4WD	Rear HVAC/RSA	√	√	√	√	√	0531
2003	GMC truck	Envoy - 4WD	4WAL 3 sensor		√	√	√	√	
2003	GMC truck	Envoy - 4WD	Traction assist (if equipped)		√	√	√	√	
2003	GMC truck	GMC C-Series - 2WD	Powertrain	√	√	√	√	√	0638
2003	GMC truck	GMC C-Series - 2WD	Body Control Module	√	√	√	√	√	
2003	GMC truck	GMC C-Series - 2WD	Heating and air conditioning	√	√	√	√	√	
2003	GMC truck	GMC C-Series - 2WD	Radio				√		
2003	GMC truck	GMC C-Series - 2WD	Supplemental inflatable restraint		√	√			0531
2003	GMC truck	GMC C-Series - 2WD	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	GMC C-Series - 2WD	Digital radio receiver	√	√	√	√		0516
2003	GMC truck	GMC C-Series - 2WD	Instrument panel cluster	√	√	√	√	√	
2003	GMC truck	GMC C-Series - 2WD	Rear seat entertainment	√	√	√			
2003	GMC truck	GMC C-Series - 2WD	Passenger presence system	√	√	√	√	√	0512
2003	GMC truck	GMC C-Series - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2003	GMC truck	GMC C-Series - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2003	GMC truck	GMC C-Series - 2WD	ABS	√	√	√	√	√	
2003	GMC truck	GMC C-Series - 2WD	Traction assist (if equipped)	√	√	√	√	√	0648
2003	GMC truck	GMC C-Series - 2WD (CNG)	Powertrain	√	√	√	√	√	
2003	GMC truck	GMC C-Series - 2WD (CNG)	Body Control Module	√	√	√	√	√	
2003	GMC truck	GMC C-Series - 2WD (CNG)	Heating and air conditioning	√	√	√	√	√	
2003	GMC truck	GMC C-Series - 2WD (CNG)	Radio				√		
2003	GMC truck	GMC C-Series - 2WD (CNG)	Supplemental inflatable restraint		√	√			0531
2003	GMC truck	GMC C-Series - 2WD (CNG)	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	GMC C-Series - 2WD (CNG)	Digital radio receiver	√	√	√	√		0516
2003	GMC truck	GMC C-Series - 2WD (CNG)	Instrument panel cluster	√	√	√	√	√	
2003	GMC truck	GMC C-Series - 2WD (CNG)	Rear seat entertainment	√	√	√			



2003	GMC truck	GMC C-Series - 2WD (CNG)	Passenger presence system	√	√	√	√	√	0512
2003	GMC truck	GMC C-Series - 2WD (CNG)	Amplifier (bose)	√	√	√	√	√	0631
2003	GMC truck	GMC C-Series - 2WD (CNG)	ESC (if equipped)	√	√	√	√	√	0648
2003	GMC truck	GMC C-Series - 2WD (CNG)	ABS	√	√	√	√	√	
2003	GMC truck	GMC C-Series - 2WD (CNG)	Traction assist (if equipped)	√	√	√	√	√	0648
2003	GMC truck	GMC K Sierra - 4WD	Powertrain	√	√	√	√	√	0638
2003	GMC truck	GMC K Sierra - 4WD	Body Control Module	√	√	√	√	√	
2003	GMC truck	GMC K Sierra - 4WD	Heating and air conditioning	√	√	√	√	√	
2003	GMC truck	GMC K Sierra - 4WD	Radio				√		
2003	GMC truck	GMC K Sierra - 4WD	Supplemental inflatable restraint		√	√			0531
2003	GMC truck	GMC K Sierra - 4WD	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	GMC K Sierra - 4WD	Digital radio receiver	√	√	√	√		0516
2003	GMC truck	GMC K Sierra - 4WD	Instrument panel cluster	√	√	√	√	√	
2003	GMC truck	GMC K Sierra - 4WD	Rear seat entertainment	√	√	√			
2003	GMC truck	GMC K Sierra - 4WD	Passenger presence system	√	√	√	√	√	0512
2003	GMC truck	GMC K Sierra - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2003	GMC truck	GMC K Sierra - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2003	GMC truck	GMC K Sierra - 4WD	ABS	√	√	√	√	√	
2003	GMC truck	GMC K Sierra - 4WD	Traction assist (if equipped)	√	√	√	√	√	0648
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Powertrain	√	√	√	√	√	
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Body Control Module	√	√	√	√	√	
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Heating and air conditioning	√	√	√	√	√	
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Radio				√		
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Supplemental inflatable restraint		√	√			0531
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Digital radio receiver	√	√	√	√		0516
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Instrument panel cluster	√	√	√	√	√	
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Rear seat entertainment	√	√	√			
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Passenger presence system	√	√	√	√	√	0512
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Amplifier (bose)	√	√	√	√	√	0631
2003	GMC truck	GMC K Sierra - 4WD (CNG)	ESC (if equipped)	√	√	√	√	√	0648
2003	GMC truck	GMC K Sierra - 4WD (CNG)	ABS	√	√	√	√	√	
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Traction assist (if equipped)	√	√	√	√	√	0648
2003	GMC truck	GMC Sierra Denali	Powertrain	√	√	√	√	√	
2003	GMC truck	GMC Sierra Denali	Body Control Module	√	√	√	√	√	
2003	GMC truck	GMC Sierra Denali	Heating and air conditioning	√	√	√	√	√	
2003	GMC truck	GMC Sierra Denali	Radio				√		
2003	GMC truck	GMC Sierra Denali	Supplemental inflatable restraint		√	√			0531
2003	GMC truck	GMC Sierra Denali	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	GMC Sierra Denali	Digital radio receiver	√	√	√	√		0516
2003	GMC truck	GMC Sierra Denali	Instrument panel cluster	√	√	√	√	√	



2003	GMC truck	GMC Sierra Denali	Rear seat entertainment	√	√	√			
2003	GMC truck	GMC Sierra Denali	Passenger presence system	√	√	√	√	√	0512
2003	GMC truck	GMC Sierra Denali	Amplifier (bose)	√	√	√	√	√	0631
2003	GMC truck	GMC Sierra Denali	ESC (if equipped)	√	√	√	√	√	0648
2003	GMC truck	GMC Sierra Denali	ABS	√	√	√	√	√	
2003	GMC truck	GMC Sierra Denali	Traction assist (if equipped)	√	√	√	√	√	0648
2003	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	0638
2003	GMC truck	Jimmy - 2WD	Body Control Module		√	√	√	√	0524
2003	GMC truck	Jimmy - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2003	GMC truck	Jimmy - 2WD	4WAL 3 sensor		√	√	√	√	
2003	GMC truck	Jimmy - 2WD	Traction assist (if equipped)		√	√	√	√	
2003	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	0638
2003	GMC truck	Jimmy - 4WD	Body Control Module		√	√	√	√	0524
2003	GMC truck	Jimmy - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2003	GMC truck	Jimmy - 4WD	4WAL 3 sensor		√	√	√	√	
2003	GMC truck	Jimmy - 4WD	Traction assist (if equipped)		√	√	√	√	
2003	GMC truck	Safari - 2WD	Powertrain	√	√	√	√	√	0638
2003	GMC truck	Safari - 2WD	Body Control Module		√	√	√	√	
2003	GMC truck	Safari - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2003	GMC truck	Safari - 2WD	Instrument panel cluster					√	0531
2003	GMC truck	Safari - 2WD	4WAL 3 sensor		√	√	√	√	
2003	GMC truck	Safari - 4WD	Powertrain	√	√	√	√	√	0638
2003	GMC truck	Safari - 4WD	Body Control Module		√	√	√	√	
2003	GMC truck	Safari - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2003	GMC truck	Safari - 4WD	Instrument panel cluster					√	0531
2003	GMC truck	Safari - 4WD	4WAL 3 sensor		√	√	√	√	
2003	GMC truck	Savana (CNG)	Powertrain	√	√	√	√	√	
2003	GMC truck	Savana (CNG)	Body Control Module	√	√	√	√	√	
2003	GMC truck	Savana (CNG)	Supplemental inflatable restraint						0531
2003	GMC truck	Savana (CNG)	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	Savana (CNG)	ABS	√	√	√	√	√	
2003	GMC truck	Savana - 2WD	Powertrain	√	√	√	√	√	0638
2003	GMC truck	Savana - 2WD	Body Control Module	√	√	√	√	√	
2003	GMC truck	Savana - 2WD	Supplemental inflatable restraint						0531
2003	GMC truck	Savana - 2WD	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	Savana - 2WD	ABS	√	√	√	√	√	
2003	GMC truck	Savana - AWD	Powertrain	√	√	√	√	√	0638
2003	GMC truck	Savana - AWD	Body Control Module	√	√	√	√	√	
2003	GMC truck	Savana - AWD	Supplemental inflatable restraint						0531
2003	GMC truck	Savana - AWD	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	Savana - AWD	ABS	√	√	√	√	√	

2003	GMC truck	Sonoma Pickup - 2WD	Powertrain	√	√	√	√	√	0638
2003	GMC truck	Sonoma Pickup - 2WD	Body Control Module		√	√	√	√	0524
2003	GMC truck	Sonoma Pickup - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2003	GMC truck	Sonoma Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
2003	GMC truck	Sonoma Pickup - 2WD	Traction assist (if equipped)		√	√	√	√	
2003	GMC truck	Sonoma Pickup - 4WD	Powertrain	√	√	√	√	√	0638
2003	GMC truck	Sonoma Pickup - 4WD	Body Control Module		√	√	√	√	0524
2003	GMC truck	Sonoma Pickup - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2003	GMC truck	Sonoma Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
2003	GMC truck	Sonoma Pickup - 4WD	Traction assist (if equipped)		√	√	√	√	
2003	GMC truck	Yukon - 2WD	Powertrain	√	√	√	√	√	
2003	GMC truck	Yukon - 2WD	Body Control Module	√	√	√	√	√	
2003	GMC truck	Yukon - 2WD	Heating and air conditioning	√	√	√	√	√	
2003	GMC truck	Yukon - 2WD	Radio				√		
2003	GMC truck	Yukon - 2WD	Supplemental inflatable restraint		√	√			0531
2003	GMC truck	Yukon - 2WD	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	Yukon - 2WD	Digital radio receiver	√	√	√	√		0516
2003	GMC truck	Yukon - 2WD	Instrument panel cluster	√	√	√	√	√	
2003	GMC truck	Yukon - 2WD	Rear seat entertainment	√	√	√			
2003	GMC truck	Yukon - 2WD	Passenger presence system	√	√	√	√	√	0512
2003	GMC truck	Yukon - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2003	GMC truck	Yukon - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2003	GMC truck	Yukon - 2WD	ABS	√	√	√	√	√	
2003	GMC truck	Yukon - 2WD	Traction assist (if equipped)	√	√	√	√	√	0648
2003	GMC truck	Yukon - 4WD	Powertrain	√	√	√	√	√	
2003	GMC truck	Yukon - 4WD	Body Control Module	√	√	√	√	√	
2003	GMC truck	Yukon - 4WD	Heating and air conditioning	√	√	√	√	√	
2003	GMC truck	Yukon - 4WD	Radio				√		
2003	GMC truck	Yukon - 4WD	Supplemental inflatable restraint		√	√			0531
2003	GMC truck	Yukon - 4WD	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	Yukon - 4WD	Digital radio receiver	√	√	√	√		0516
2003	GMC truck	Yukon - 4WD	Instrument panel cluster	√	√	√	√	√	
2003	GMC truck	Yukon - 4WD	Rear seat entertainment	√	√	√			
2003	GMC truck	Yukon - 4WD	Passenger presence system	√	√	√	√	√	0512
2003	GMC truck	Yukon - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2003	GMC truck	Yukon - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2003	GMC truck	Yukon - 4WD	ABS	√	√	√	√	√	
2003	GMC truck	Yukon - 4WD	Traction assist (if equipped)	√	√	√	√	√	0648
2003	GMC truck	Yukon Denali	Powertrain	√	√	√	√	√	
2003	GMC truck	Yukon Denali	Body Control Module	√	√	√	√	√	
2003	GMC truck	Yukon Denali	Heating and air conditioning	√	√	√	√	√	

2003	GMC truck	Yukon Denali	Radio				√		
2003	GMC truck	Yukon Denali	Supplemental inflatable restraint		√	√			0531
2003	GMC truck	Yukon Denali	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	Yukon Denali	Digital radio receiver	√	√	√	√		0516
2003	GMC truck	Yukon Denali	Instrument panel cluster	√	√	√	√	√	
2003	GMC truck	Yukon Denali	Rear seat entertainment	√	√	√			
2003	GMC truck	Yukon Denali	Passenger presence system	√	√	√	√	√	0512
2003	GMC truck	Yukon Denali	Amplifier (bose)	√	√	√	√	√	0631
2003	GMC truck	Yukon Denali	ESC (if equipped)	√	√	√	√	√	0648
2003	GMC truck	Yukon Denali	ABS	√	√	√	√	√	
2003	GMC truck	Yukon Denali	Traction assist (if equipped)	√	√	√	√	√	0648
2003	GMC truck	Yukon XL - 2WD	Powertrain	√	√	√	√	√	0571
2003	GMC truck	Yukon XL - 2WD	Body Control Module	√	√	√	√	√	
2003	GMC truck	Yukon XL - 2WD	Heating and air conditioning	√	√	√	√	√	
2003	GMC truck	Yukon XL - 2WD	Radio				√		
2003	GMC truck	Yukon XL - 2WD	Supplemental inflatable restraint		√	√			0531
2003	GMC truck	Yukon XL - 2WD	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	Yukon XL - 2WD	Digital radio receiver	√	√	√	√		0516
2003	GMC truck	Yukon XL - 2WD	Instrument panel cluster	√	√	√	√	√	
2003	GMC truck	Yukon XL - 2WD	Rear seat entertainment	√	√	√			
2003	GMC truck	Yukon XL - 2WD	Passenger presence system	√	√	√	√	√	0512
2003	GMC truck	Yukon XL - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2003	GMC truck	Yukon XL - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2003	GMC truck	Yukon XL - 2WD	ABS	√	√	√	√	√	
2003	GMC truck	Yukon XL - 2WD	Traction assist (if equipped)	√	√	√	√	√	0648
2003	GMC truck	Yukon XL - 4WD	Powertrain	√	√	√	√	√	
2003	GMC truck	Yukon XL - 4WD	Body Control Module	√	√	√	√	√	
2003	GMC truck	Yukon XL - 4WD	Heating and air conditioning	√	√	√	√	√	
2003	GMC truck	Yukon XL - 4WD	Radio				√		
2003	GMC truck	Yukon XL - 4WD	Supplemental inflatable restraint		√	√			0531
2003	GMC truck	Yukon XL - 4WD	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	Yukon XL - 4WD	Digital radio receiver	√	√	√	√		0516
2003	GMC truck	Yukon XL - 4WD	Instrument panel cluster	√	√	√	√	√	
2003	GMC truck	Yukon XL - 4WD	Rear seat entertainment	√	√	√			
2003	GMC truck	Yukon XL - 4WD	Passenger presence system	√	√	√	√	√	0512
2003	GMC truck	Yukon XL - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2003	GMC truck	Yukon XL - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2003	GMC truck	Yukon XL - 4WD	ABS	√	√	√	√	√	
2003	GMC truck	Yukon XL - 4WD	Traction assist (if equipped)	√	√	√	√	√	0648
2003	Isuzu	Ascender - 4WD	Powertrain	√	√	√	√	√	
2003	Isuzu	Ascender - 4WD	Body Control Module		√	√	√	√	0524

2003	Isuzu	Ascender - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2003	Isuzu	Ascender - 4WD	4WAL 3 sensor		√	√	√	√	
2003	Isuzu	Ascender - 4WD	Traction assist (if equipped)		√	√	√	√	
2003	Oldsmobile	Bravada	Powertrain	√	√	√	√	√	
2003	Oldsmobile	Bravada	Amplifier (bose)	√	√	√	√	√	
2003	Oldsmobile	Bravada	Rear seat audio				√		
2003	Oldsmobile	Bravada	Heating and air conditioning				√	√	
2003	Oldsmobile	Bravada	Supplemental inflatable restraint		√	√			0531
2003	Oldsmobile	Bravada	Onstar	√	√	√	√	√	0647 0683
2003	Oldsmobile	Bravada	Radio		√	√	√		
2003	Oldsmobile	Bravada	Body Control Module	√	√	√	√	√	0550
2003	Oldsmobile	Bravada	4WAL 3 sensor		√	√	√	√	
2003	Oldsmobile	Bravada	Traction assist (if equipped)		√	√	√	√	
2003	Oldsmobile	Bravada - 2WD	Powertrain	√	√	√	√	√	
2003	Oldsmobile	Bravada - 2WD	Amplifier (bose)	√	√	√	√	√	
2003	Oldsmobile	Bravada - 2WD	Rear seat audio				√		
2003	Oldsmobile	Bravada - 2WD	Heating and air conditioning				√	√	
2003	Oldsmobile	Bravada - 2WD	Supplemental inflatable restraint		√	√			0531
2003	Oldsmobile	Bravada - 2WD	Onstar	√	√	√	√	√	0647 0683
2003	Oldsmobile	Bravada - 2WD	Radio		√	√	√		
2003	Oldsmobile	Bravada - 2WD	Body Control Module	√	√	√	√	√	0550
2003	Oldsmobile	Bravada - 2WD	4WAL 3 sensor		√	√	√	√	
2003	Oldsmobile	Bravada - 2WD	Traction assist (if equipped)		√	√	√	√	
2003	Oldsmobile	Silhouette	Driver information center		√	√	√	√	0682 0628 0573 0574
2003	Oldsmobile	Silhouette	Memory seat module		√	√	√	√	
2003	Oldsmobile	Silhouette	Radio				√		
2003	Oldsmobile	Silhouette	Onstar	√	√	√	√	√	0647 0683
2003	Oldsmobile	Silhouette	Supplemental inflatable restraint	√	√	√	√	√	0524
2003	Oldsmobile	Silhouette	Chassis	√	√	√	√	√	0506
2003	Oldsmobile	Silhouette	Powertrain	√	√	√	√	√	0493
2003	Pontiac	Aztek - AWD	Powertrain	√	√	√	√	√	0493
2003	Pontiac	Aztek - AWD	Body Control Module		√	√	√	√	0637
2003	Pontiac	Aztek - AWD	Onstar	√	√	√	√	√	0647 0683
2003	Pontiac	Aztek - AWD	Digital radio receiver	√	√	√	√	√	0516
2003	Pontiac	Aztek - AWD	Vehicle theft deterrent		√	√			
2003	Pontiac	Aztek - AWD	Supplemental inflatable restraint		√	√	√		
2003	Pontiac	Aztek - AWD	Rear seat entertainment	√	√	√	√	√	0637
2003	Pontiac	Aztek - AWD	Chassis		√	√	√	√	0506
2003	Pontiac	Aztek - FWD	Powertrain	√	√	√	√	√	0493
2003	Pontiac	Aztek - FWD	Body Control Module		√	√	√	√	0637
2003	Pontiac	Aztek - FWD	Onstar	√	√	√	√	√	0647 0683

2003	Pontiac	Aztek - FWD	Digital radio receiver	√	√	√	√	√	0516
2003	Pontiac	Aztek - FWD	Vehicle theft deterrent		√	√			
2003	Pontiac	Aztek - FWD	Supplemental inflatable restraint		√	√	√		
2003	Pontiac	Aztek - FWD	Rear seat entertainment	√	√	√	√	√	0637
2003	Pontiac	Aztek - FWD	Chassis		√	√	√	√	0506
2003	Pontiac	Montana	Powertrain	√	√	√	√	√	0493
2003	Pontiac	Montana	Onstar	√	√	√	√	√	0647 0683
2003	Pontiac	Montana	Driver information center		√	√	√	√	0682 0628 0573 0574
2003	Pontiac	Montana	Radio				√		
2003	Pontiac	Montana	Supplemental inflatable restraint	√	√	√	√	√	0524
2003	Pontiac	Montana	Chassis	√	√	√	√	√	0506
2003	Hummer	H2	Powertrain	√	√	√	√	√	
2003	Hummer	H2	Body Control Module	√	√	√	√	√	
2003	Hummer	H2	Amplifier (bose)	√	√	√	√	√	
2003	Hummer	H2	Supplemental inflatable restraint		√	√			
2003	Hummer	H2	Onstar	√	√	√	√	√	0647 0683
2003	Hummer	H2	Digital radio receiver	√	√	√	√		0516
2003	Hummer	H2	Instrument panel cluster	√	√	√	√	√	
2003	Hummer	H2	ABS	√	√	√	√	√	
2002	Buick	Century	Powertrain	√	√	√	√	√	0493
2002	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0690 0628
2002	Buick	Century	Onstar	√	√	√	√	√	0647 0683
2002	Buick	Century	Supplemental inflatable restraint		√	√	√		0515
2002	Buick	Century	Chassis	√	√	√	√	√	0506
2002	Buick	Lesabre	Powertrain	√	√	√	√	√	0493
2002	Buick	Lesabre	Dash integration module				√	√	0651 0650
2002	Buick	Lesabre	CD changer		√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604
2002	Buick	Lesabre	Instrument panel module		√	√	√	√	0630 0667
2002	Buick	Lesabre	Radio				√		0573 0574 0575 0576 0577 0694 0695 0578 0579 0636 0572 0552
2002	Buick	Lesabre	Onstar	√	√	√	√		0647 0683
2002	Buick	Lesabre	Remote function actuation		√	√		√	
2002	Buick	Lesabre	Supplemental inflatable restraint		√	√			
2002	Buick	Lesabre	Vehicle theft deterrent		√	√	√	√	0651 0650
2002	Buick	Lesabre	Memory seat module	√	√	√	√	√	0573 0574 0575 0576 0577 0694 0695 0578 0579 0636 0572 0552
2002	Buick	Lesabre	Rear integration module		√	√	√	√	
2002	Buick	Lesabre	DRP/ABS/TIM		√	√	√	√	0506
2002	Buick	Park Avenue	Powertrain	√	√	√	√	√	0493

2002	Buick	Park Avenue	Body Control Module		√	√	√	√	0614 0668 0684 0630
2002	Buick	Park Avenue	Onstar	√	√	√	√		0647 0683
2002	Buick	Park Avenue	Personalization		√	√	√	√	0550 0550
2002	Buick	Park Avenue	Vehicle theft deterrent		√	√			
2002	Buick	Park Avenue	DRP/ABS/TIM		√	√	√	√	0506
2002	Buick	Regal	Powertrain	√	√	√	√	√	0493
2002	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0690 0628
2002	Buick	Regal	Onstar	√	√	√	√	√	0647 0683
2002	Buick	Regal	Supplemental inflatable restraint		√	√	√		0515
2002	Buick	Regal	Chassis	√	√	√	√	√	0506
2002	Cadillac	Deville	Powertrain	√	√	√	√	√	
2002	Cadillac	Deville	Dash integration module		√	√	√	√	0614 0615 0619 0696 0586 0630 0667
2002	Cadillac	Deville	CD changer		√	√	√	√	0670 0670 0628 0651 0650 0673 0614 0672
2002	Cadillac	Deville	Instrument panel cluster				√		
2002	Cadillac	Deville	Amplifier (delco)		√	√	√	√	
2002	Cadillac	Deville	Memory seat module		√	√	√	√	
2002	Cadillac	Deville	Onstar	√	√	√	√	√	0647 0683
2002	Cadillac	Deville	Digital radio receiver	√	√	√	√		0664
2002	Cadillac	Deville	Remote function actuation		√	√		√	
2002	Cadillac	Deville	Vehicle theft deterrent		√	√			
2002	Cadillac	Deville	Driver door switch	√	√	√	√		
2002	Cadillac	Deville	Left rear door module	√	√	√	√	√	
2002	Cadillac	Deville	Right rear door module	√	√	√	√	√	
2002	Cadillac	Deville	Driver door module	√	√	√	√	√	
2002	Cadillac	Deville	Passenger door module	√	√	√	√		0685
2002	Cadillac	Deville	Tire pressure monitor		√	√	√		
2002	Cadillac	Deville	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2002	Cadillac	Deville	Speed sensitive steering		√	√	√		
2002	Cadillac	Deville	Electronic suspension control	√	√	√	√	√	
2002	Cadillac	DHS	Powertrain	√	√	√	√	√	
2002	Cadillac	DHS	Dash integration module		√	√	√	√	0614 0615 0619 0696 0586 0630 0667
2002	Cadillac	DHS	Amplifier (bose)		√	√	√	√	
2002	Cadillac	DHS	CD changer		√	√	√	√	0670 0670 0628 0651 0650 0673 0614 0672
2002	Cadillac	DHS	Instrument panel cluster	√	√	√	√		0608 0658
2002	Cadillac	DHS	Memory seat module		√	√	√	√	
2002	Cadillac	DHS	Onstar	√	√	√	√	√	0647 0683
2002	Cadillac	DHS	Digital radio receiver	√	√	√	√		0664
2002	Cadillac	DHS	Remote function actuation		√	√		√	

2002	Cadillac	DHS	Vehicle theft deterrent		√	√			
2002	Cadillac	DHS	Driver door switch	√	√	√	√		
2002	Cadillac	DHS	Left rear door module	√	√	√	√	√	
2002	Cadillac	DHS	Right rear door module	√	√	√	√	√	
2002	Cadillac	DHS	Driver door module	√	√	√	√	√	
2002	Cadillac	DHS	Passenger door module	√	√	√	√		0685
2002	Cadillac	DHS	Tire pressure monitor		√	√	√		
2002	Cadillac	DHS	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2002	Cadillac	DHS	eed sensitive steering		√	√	√		
2002	Cadillac	DHS	Electronic suension control	√	√	√	√	√	
2002	Cadillac	DTS	Powertrain	√	√	√	√	√	
2002	Cadillac	DTS	Dash integration module		√	√	√	√	0614 0615 0619 0696 0586 0630 0667
2002	Cadillac	DTS	Amplifier (bose)		√	√	√	√	
2002	Cadillac	DTS	CD changer		√	√	√	√	0670 0670 0628 0651 0650 0673 0614 0672
2002	Cadillac	DTS	Instrument panel cluster	√	√	√	√		0608 0658
2002	Cadillac	DTS	Memory seat module		√	√	√	√	0674
2002	Cadillac	DTS	Onstar	√	√	√	√	√	0647 0683
2002	Cadillac	DTS	Digital radio receiver	√	√	√	√		0664
2002	Cadillac	DTS	Remote function actuation		√	√		√	
2002	Cadillac	DTS	Vehicle theft deterrent		√	√			
2002	Cadillac	DTS	Driver door switch	√	√	√	√		
2002	Cadillac	DTS	Left rear door module	√	√	√	√	√	
2002	Cadillac	DTS	Right rear door module	√	√	√	√	√	
2002	Cadillac	DTS	Driver door module	√	√	√	√	√	
2002	Cadillac	DTS	Passenger door module	√	√	√	√		0685
2002	Cadillac	DTS	Tire pressure monitor		√	√	√		
2002	Cadillac	DTS	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2002	Cadillac	DTS	eed sensitive steering		√	√	√		
2002	Cadillac	DTS	Electronic suension control	√	√	√	√	√	
2002	Cadillac	Eldorado	Powertrain	√	√	√	√	√	
2002	Cadillac	Eldorado	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682 0525
2002	Cadillac	Eldorado	Radio		√	√	√	√	0702
2002	Cadillac	Eldorado	Onstar	√	√	√	√		0647 0683
2002	Cadillac	Eldorado	Remote function actuation		√	√		√	
2002	Cadillac	Eldorado	Supplemental inflatable restraint		√	√			
2002	Cadillac	Eldorado	Delco/Xtool ABS/TCS		√	√		√	0641 0506
2002	Cadillac	Eldorado	Magna steer		√	√			
2002	Cadillac	Seville	Powertrain	√	√	√	√	√	

2002	Cadillac	Seville	Amplifier (bose)		√	√	√	√	0614 0615 0617 0686 0687 0685 0586
2002	Cadillac	Seville	CD changer		√	√	√	√	0670 0670 0628 0651 0650 0673 0614 0672
2002	Cadillac	Seville	Amplifier (delco)		√	√	√	√	
2002	Cadillac	Seville	Instrument panel cluster	√	√	√	√		0608 0658
2002	Cadillac	Seville	Memory seat module		√	√	√	√	0674
2002	Cadillac	Seville	Onstar	√	√	√	√	√	0647 0683
2002	Cadillac	Seville	Digital radio receiver	√	√	√	√		
2002	Cadillac	Seville	Dash integration module						0664
2002	Cadillac	Seville	Remote function actuation		√	√	√	√	0604 0605
2002	Cadillac	Seville	Vehicle theft deterrent	√	√	√	√	√	0614 0615 0617 0686 0687 0685 0586
2002	Cadillac	Seville	Tire pressure monitor		√	√	√		
2002	Cadillac	Seville	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2002	Cadillac	Seville	eed sensitive steering		√	√	√		
2002	Cadillac	Seville	Electronic suension control	√	√	√	√	√	
2002	Chevrolet	Alero (export)	Powertrain	√	√	√	√	√	0493
2002	Chevrolet	Alero (export)	Body Control Module	√	√	√		√	0633
2002	Chevrolet	Alero (export)	Radio	√	√	√	√	√	0675
2002	Chevrolet	Alero (export)	Vehicle theft deterrent		√	√	√		
2002	Chevrolet	Alero (export)	Chassis	√	√	√	√	√	0506
2002	Chevrolet	Camaro	Powertrain	√	√	√	√	√	0493
2002	Chevrolet	Camaro	Instrument panel cluster		√	√	√	√	0682
2002	Chevrolet	Camaro	Supplemental inflatable restraint		√	√	√	√	0682
2002	Chevrolet	Camaro	Chassis		√	√	√	√	0506
2002	Chevrolet	Cavalier	Powertrain	√	√	√	√	√	
2002	Chevrolet	Cavalier	Radio				√		
2002	Chevrolet	Cavalier	Body Control Module	√	√	√	√	√	0633 0675
2002	Chevrolet	Cavalier	Chassis	√	√	√	√	√	0506
2002	Chevrolet	Cavalier (CNG)	Powertrain	√	√	√	√	√	
2002	Chevrolet	Cavalier (CNG)	Radio				√		
2002	Chevrolet	Cavalier (CNG)	Body Control Module	√	√	√	√	√	0633 0675
2002	Chevrolet	Cavalier (CNG)	Chassis	√	√	√	√	√	0506
2002	Chevrolet	Corvette	Powertrain	√	√	√	√	√	
2002	Chevrolet	Corvette	Body Control Module		√	√	√	√	0688
2002	Chevrolet	Corvette	Remote function actuation		√	√			0673
2002	Chevrolet	Corvette	Supplemental inflatable restraint		√	√	√	√	0688
2002	Chevrolet	Corvette	ABS/TCS	√	√	√	√	√	
2002	Chevrolet	Corvette	RTD	√	√	√	√	√	
2002	Chevrolet	Impala	Powertrain	√	√	√	√	√	0493
2002	Chevrolet	Impala	Radio				√		



2002	Chevrolet	Impala	Body Control Module		√	√	√	√	0515 0628 0614 0580 0572 0573 0574 0703
2002	Chevrolet	Impala	Onstar	√	√	√	√	√	0647 0683
2002	Chevrolet	Impala	Supplemental inflatable restraint	√	√	√	√	√	0515 0628 0614 0580 0572 0573 0574 0703
2002	Chevrolet	Impala	Chassis	√	√	√		√	0506
2002	Chevrolet	Malibu	Powertrain	√	√	√	√	√	0493
2002	Chevrolet	Malibu	Body Control Module	√	√	√		√	0633
2002	Chevrolet	Malibu	Radio	√			√	√	
2002	Chevrolet	Malibu	Remote function actuation		√	√	√	√	
2002	Chevrolet	Malibu	Chassis	√	√	√	√	√	0506
2002	Chevrolet	Lumina	Powertrain	√	√	√	√	√	0493
2002	Chevrolet	Monte Carlo	Powertrain	√	√	√	√	√	0493
2002	Chevrolet	Monte Carlo	Radio				√		
2002	Chevrolet	Monte Carlo	Body Control Module		√	√	√	√	0515 0628 0614 0580 0572 0573 0574 0703
2002	Chevrolet	Monte Carlo	Onstar	√	√	√	√	√	0647 0683
2002	Chevrolet	Monte Carlo	Supplemental inflatable restraint	√	√	√	√	√	0515 0628 0614 0580 0572 0573 0574 0703
2002	Chevrolet	Monte Carlo	Chassis	√	√	√		√	0506
2002	Chevrolet	Prizm	Supplemental inflatable restraint		√	√			
2002	Oldsmobile	Alero	Powertrain	√	√	√	√	√	0493
2002	Oldsmobile	Alero	Body Control Module	√	√	√		√	0633
2002	Oldsmobile	Alero	Radio	√	√	√	√	√	0675
2002	Oldsmobile	Alero	Instrument panel cluster				√		
2002	Oldsmobile	Alero	Onstar	√	√	√	√	√	0647 0683
2002	Oldsmobile	Alero	Remote function actuation		√	√	√	√	
2002	Oldsmobile	Alero	Chassis	√	√	√	√	√	0506
2002	Oldsmobile	Aurora	Powertrain	√	√	√	√	√	
2002	Oldsmobile	Aurora	CD changer		√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604 0628 0630 0667 0573 0574 0575 0576 0577 0694 0695 0578 0579 0572 0552 0525 0573 0574 0575 0576 0577 0694 0695 0578 0579 0636 0572 0552 0693
2002	Oldsmobile	Aurora	Memory seat module		√	√	√	√	
2002	Oldsmobile	Aurora	Onstar	√	√	√	√		0647 0683
2002	Oldsmobile	Aurora	Remote function actuation		√	√		√	
2002	Oldsmobile	Aurora	Supplemental inflatable restraint		√	√			
2002	Oldsmobile	Aurora	Vehicle theft deterrent		√	√			0677

2002	Oldsmobile	Aurora	Rear integration module		√	√	√	√	
2002	Oldsmobile	Aurora	DRP/ABS/TIM		√	√	√	√	0506
2002	Oldsmobile	Intrigue	Powertrain	√	√	√	√	√	
2002	Oldsmobile	Intrigue	Body Control Module		√	√	√	√	0662 0690 0628 0572 0574 0525
2002	Oldsmobile	Intrigue	Onstar	√	√	√	√	√	0647 0683
2002	Oldsmobile	Intrigue	Supplemental inflatable restraint		√	√	√	√	0515
2002	Oldsmobile	Intrigue	Chassis		√	√	√	√	0704
2002	Pontiac	Bonneville	Powertrain	√	√	√	√	√	0493
2002	Pontiac	Bonneville	Instrument panel cluster				√		
2002	Pontiac	Bonneville	Dash integration module				√	√	0573 0574 0575 0576 0577 0694 0695 0578 0579 0636 0572 0552
2002	Pontiac	Bonneville	CD changer		√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604
2002	Pontiac	Bonneville	Instrument panel module		√	√	√	√	0630 0667
2002	Pontiac	Bonneville	Onstar	√	√	√	√		0647 0683
2002	Pontiac	Bonneville	Supplemental inflatable restraint		√	√			
2002	Pontiac	Bonneville	Vehicle theft deterrent		√	√	√	√	0677
2002	Pontiac	Bonneville	Climate control panel	√	√	√	√	√	0647 0683
2002	Pontiac	Bonneville	Remote function actuation		√	√	√	√	0677
2002	Pontiac	Bonneville	Rear integration module	√	√	√	√	√	0678
2002	Pontiac	Bonneville	DRP/ABS/TIM		√	√	√	√	0506
2002	Pontiac	FireBird	Powertrain	√	√	√	√	√	0493
2002	Pontiac	FireBird	Instrument panel cluster		√	√	√	√	0682
2002	Pontiac	FireBird	Supplemental inflatable restraint		√	√	√	√	0682
2002	Pontiac	FireBird	Chassis		√	√	√	√	0506
2002	Pontiac	Grand Am	Powertrain	√	√	√	√	√	0493
2002	Pontiac	Grand Am	Body Control Module	√	√	√		√	0633
2002	Pontiac	Grand Am	Radio	√	√	√	√	√	0675
2002	Pontiac	Grand Am	Instrument panel cluster				√		
2002	Pontiac	Grand Am	Onstar	√	√	√	√	√	0647 0683
2002	Pontiac	Grand Am	Remote function actuation		√	√	√	√	
2002	Pontiac	Grand Am	Chassis	√	√	√	√	√	0506
2002	Pontiac	Grand Prix	Powertrain	√	√	√	√	√	0493
2002	Pontiac	Grand Prix	Onstar	√	√	√	√		0647 0683
2002	Pontiac	Grand Prix	Supplemental inflatable restraint		√	√	√		
2002	Pontiac	Grand Prix	Vehicle theft deterrent		√	√	√		
2002	Pontiac	Sunfire	Powertrain	√	√	√	√	√	
2002	Pontiac	Sunfire	Radio				√		
2002	Pontiac	Sunfire	Body Control Module	√	√	√	√	√	0633 0675
2002	Pontiac	Sunfire	Chassis	√	√	√	√	√	0506

2002	Buick	Rendezvous - AWD	Powertrain	√	√	√	√	√	0493
2002	Buick	Rendezvous - AWD	Body Control Module		√	√	√	√	0560 0515 0628 0614 0705 0573 0574 0636
2002	Buick	Rendezvous - AWD	Onstar	√	√	√	√		0647 0683
2002	Buick	Rendezvous - AWD	Supplemental inflatable restraint		√	√			
2002	Buick	Rendezvous - AWD	Vehicle theft deterrent	√	√	√	√	√	0560 0515 0628 0614 0705 0573 0574 0636
2002	Buick	Rendezvous - AWD	Chassis		√	√	√	√	0506
2002	Buick	Rendezvous - FWD	Powertrain	√	√	√	√	√	0493
2002	Buick	Rendezvous - FWD	Body Control Module		√	√	√	√	0560 0515 0628 0614 0705 0573 0574 0636
2002	Buick	Rendezvous - FWD	Onstar	√	√	√	√		0647 0683
2002	Buick	Rendezvous - FWD	Supplemental inflatable restraint		√	√			
2002	Buick	Rendezvous - FWD	Vehicle theft deterrent	√	√	√	√	√	0560 0515 0628 0614 0705 0573 0574 0636
2002	Buick	Rendezvous - FWD	Chassis		√	√	√	√	0506
2002	Cadillac	Escalade - 2WD	Powertrain	√	√	√	√	√	
2002	Cadillac	Escalade - 2WD	Body Control Module	√	√	√	√	√	0523
2002	Cadillac	Escalade - 2WD	Memory mirror module		√	√	√	√	
2002	Cadillac	Escalade - 2WD	Supplemental inflatable restraint		√	√	√		0531
2002	Cadillac	Escalade - 2WD	Onstar	√	√	√	√	√	0647 0683
2002	Cadillac	Escalade - 2WD	RTD (autoride) / EVO		√	√	√	√	
2002	Cadillac	Escalade - 2WD	4WAL 3 sensor		√	√	√	√	0648
2002	Cadillac	Escalade - 2WD	VSES (if equipped)		√	√	√	√	0648
2002	Cadillac	Escalade - AWD	Powertrain	√	√	√	√	√	
2002	Cadillac	Escalade - AWD	Body Control Module	√	√	√	√	√	0523
2002	Cadillac	Escalade - AWD	Memory mirror module		√	√	√	√	
2002	Cadillac	Escalade - AWD	Supplemental inflatable restraint		√	√	√		0531
2002	Cadillac	Escalade - AWD	Onstar	√	√	√	√	√	0647 0683
2002	Cadillac	Escalade - AWD	RTD (autoride) / EVO		√	√	√	√	
2002	Cadillac	Escalade - AWD	4WAL 3 sensor		√	√	√	√	0648
2002	Cadillac	Escalade - AWD	VSES (if equipped)		√	√	√	√	0648
2002	Cadillac	Escalade EXT	Powertrain	√	√	√	√	√	
2002	Cadillac	Escalade EXT	Body Control Module	√	√	√	√	√	0523
2002	Cadillac	Escalade EXT	Memory mirror module		√	√	√	√	
2002	Cadillac	Escalade EXT	Supplemental inflatable restraint		√	√	√		0531
2002	Cadillac	Escalade EXT	Onstar	√	√	√	√	√	0647 0683
2002	Cadillac	Escalade EXT	RTD (autoride) / EVO		√	√	√	√	
2002	Cadillac	Escalade EXT	4WAL 3 sensor		√	√	√	√	0648
2002	Cadillac	Escalade EXT	VSES (if equipped)		√	√	√	√	0648
2002	Cadillac	Incomplete	Powertrain	√	√	√	√	√	0493

2002	Cadillac	Incomplete	Amplifier (delco)		√	√	√	√	0664 0618 0619 0628 0650 0586 0630 0667 0671 0578 0579 0525
2002	Cadillac	Incomplete	Rear integration module				√		
2002	Cadillac	Incomplete	Remote function actuation		√	√		√	
2002	Cadillac	Incomplete	Dash integration module		√	√			0604 0605
2002	Cadillac	Incomplete	Vehicle theft deterrent		√	√			0691
2002	Cadillac	Incomplete	Driver door module	√	√	√	√	√	
2002	Cadillac	Incomplete	Driver door switch	√	√	√	√		
2002	Cadillac	Incomplete	Passenger door module	√	√	√	√	√	0664 0618 0619 0628 0650 0586 0630 0667 0671 0578 0579 0525
2002	Cadillac	Incomplete	Rear climate control panel		√	√	√	√	
2002	Cadillac	Incomplete	Onstar	√	√	√	√	√	0647 0683
2002	Cadillac	Incomplete	Left mid door module	√	√	√	√	√	
2002	Cadillac	Incomplete	Left rear door module	√	√	√	√	√	
2002	Cadillac	Incomplete	Right mid door module	√	√	√	√	√	
2002	Cadillac	Incomplete	Right rear door module	√	√	√	√	√	
2002	Cadillac	Incomplete	DRP/ABS/TCS		√	√	√	√	
2002	Chevrolet	Astro - 2WD	Powertrain	√	√	√	√	√	0638
2002	Chevrolet	Astro - 2WD	Body Control Module		√	√	√	√	
2002	Chevrolet	Astro - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2002	Chevrolet	Astro - 2WD	Instrument panel cluster		√	√		√	0531
2002	Chevrolet	Astro - 2WD	4WAL 3 sensor		√	√	√	√	
2002	Chevrolet	Astro - 4WD	Powertrain	√	√	√	√	√	0638
2002	Chevrolet	Astro - 4WD	Body Control Module		√	√	√	√	
2002	Chevrolet	Astro - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2002	Chevrolet	Astro - 4WD	Instrument panel cluster		√	√		√	0531
2002	Chevrolet	Astro - 4WD	4WAL 3 sensor		√	√	√	√	
2002	Chevrolet	Avalanche - 2WD	Powertrain	√	√	√	√	√	0571
2002	Chevrolet	Avalanche - 2WD	Body Control Module	√	√	√	√	√	0523
2002	Chevrolet	Avalanche - 2WD	Memory mirror module		√	√	√	√	
2002	Chevrolet	Avalanche - 2WD	Supplemental inflatable restraint		√	√	√		0531
2002	Chevrolet	Avalanche - 2WD	Onstar	√	√	√	√		0647 0683
2002	Chevrolet	Avalanche - 2WD	Vehicle theft deterrent	√	√	√	√	√	0523
2002	Chevrolet	Avalanche - 2WD	RTD (autoride) / EVO		√	√	√	√	
2002	Chevrolet	Avalanche - 2WD	4WAL 3 sensor		√	√	√	√	0648
2002	Chevrolet	Avalanche - 2WD	VSES (if equipped)		√	√	√	√	0648
2002	Chevrolet	Avalanche - 4WD	Powertrain	√	√	√	√	√	0571
2002	Chevrolet	Avalanche - 4WD	Body Control Module	√	√	√	√	√	0523
2002	Chevrolet	Avalanche - 4WD	Memory mirror module		√	√	√	√	
2002	Chevrolet	Avalanche - 4WD	Supplemental inflatable restraint		√	√	√		0531

2002	Chevrolet	Avalanche - 4WD	Onstar	√	√	√	√		0647 0683
2002	Chevrolet	Avalanche - 4WD	Vehicle theft deterrent	√	√	√	√	√	0523
2002	Chevrolet	Avalanche - 4WD	RTD (autoride) / EVO		√	√	√	√	
2002	Chevrolet	Avalanche - 4WD	4WAL 3 sensor		√	√	√	√	0648
2002	Chevrolet	Avalanche - 4WD	VSES (if equipped)		√	√	√	√	0648
2002	Chevrolet	Blazer - 2WD	Powertrain	√	√	√	√	√	0638
2002	Chevrolet	Blazer - 2WD	Amplifier (bose)	√	√	√	√	√	0550
2002	Chevrolet	Blazer - 2WD	Rear seat audio				√		
2002	Chevrolet	Blazer - 2WD	Heating and air conditioning				√	√	
2002	Chevrolet	Blazer - 2WD	Supplemental inflatable restraint		√	√			0531
2002	Chevrolet	Blazer - 2WD	Onstar	√	√	√	√	√	0647 0683
2002	Chevrolet	Blazer - 2WD	Radio	√	√	√	√	√	0550
2002	Chevrolet	Blazer - 2WD	4WAL 3 sensor		√	√	√	√	
2002	Chevrolet	Blazer - 2WD	Traction assist (if equipped)		√	√	√	√	
2002	Chevrolet	Blazer - 4WD	Powertrain	√	√	√	√	√	0638
2002	Chevrolet	Blazer - 4WD	Amplifier (bose)	√	√	√	√	√	0550
2002	Chevrolet	Blazer - 4WD	Rear seat audio				√		
2002	Chevrolet	Blazer - 4WD	Heating and air conditioning				√	√	
2002	Chevrolet	Blazer - 4WD	Supplemental inflatable restraint		√	√			0531
2002	Chevrolet	Blazer - 4WD	Onstar	√	√	√	√	√	0647 0683
2002	Chevrolet	Blazer - 4WD	Radio	√	√	√	√	√	0550
2002	Chevrolet	Blazer - 4WD	4WAL 3 sensor		√	√	√	√	
2002	Chevrolet	Blazer - 4WD	Traction assist (if equipped)		√	√	√	√	
2002	Chevrolet	Blazer - 4WD - RHD	Powertrain	√	√	√	√	√	0638
2002	Chevrolet	Blazer - 4WD - RHD	Amplifier (bose)	√	√	√	√	√	0550
2002	Chevrolet	Blazer - 4WD - RHD	Rear seat audio				√		
2002	Chevrolet	Blazer - 4WD - RHD	Heating and air conditioning				√	√	
2002	Chevrolet	Blazer - 4WD - RHD	Supplemental inflatable restraint		√	√			0531
2002	Chevrolet	Blazer - 4WD - RHD	Onstar	√	√	√	√	√	0647 0683
2002	Chevrolet	Blazer - 4WD - RHD	Radio	√	√	√	√	√	0550
2002	Chevrolet	Blazer - 4WD - RHD	4WAL 3 sensor		√	√	√	√	
2002	Chevrolet	Blazer - 4WD - RHD	Traction assist (if equipped)		√	√	√	√	
2002	Chevrolet	C Cab/Chassis HD (GMT)	Powertrain	√	√	√	√	√	0571
2002	Chevrolet	C Cab/Chassis HD (GMT)	Body Control Module	√	√	√	√	√	0523
2002	Chevrolet	C Cab/Chassis HD (GMT)	Memory mirror module		√	√	√	√	
2002	Chevrolet	C Cab/Chassis HD (GMT)	Supplemental inflatable restraint		√	√	√		0531
2002	Chevrolet	C Cab/Chassis HD (GMT)	Onstar	√	√	√	√		0647 0683
2002	Chevrolet	C Cab/Chassis HD (GMT)	Vehicle theft deterrent	√	√	√	√	√	0523
2002	Chevrolet	C Cab/Chassis HD (GMT)	RTD (autoride) / EVO		√	√	√	√	
2002	Chevrolet	C Cab/Chassis HD (GMT)	4WAL 3 sensor		√	√	√	√	0648
2002	Chevrolet	C Cab/Chassis HD (GMT)	VSES (if equipped)		√	√	√	√	0648

2002	Chevrolet	C Silverado - 2WD	Powertrain	√	√	√	√	√	0638
2002	Chevrolet	C Silverado - 2WD	Body Control Module	√	√	√	√	√	0523
2002	Chevrolet	C Silverado - 2WD	Memory mirror module		√	√	√	√	
2002	Chevrolet	C Silverado - 2WD	Supplemental inflatable restraint		√	√	√		0531
2002	Chevrolet	C Silverado - 2WD	Onstar	√	√	√	√		0647 0683
2002	Chevrolet	C Silverado - 2WD	Vehicle theft deterrent	√	√	√	√	√	0523
2002	Chevrolet	C Silverado - 2WD	RTD (autoride) / EVO		√	√	√	√	
2002	Chevrolet	C Silverado - 2WD	4WAL 3 sensor		√	√	√	√	0648
2002	Chevrolet	C Silverado - 2WD	VSES (if equipped)		√	√	√	√	0648
2002	Chevrolet	C Silverado - 2WD (CNG)	Powertrain	√	√	√	√	√	
2002	Chevrolet	C Silverado - 2WD (CNG)	Body Control Module	√	√	√	√	√	0523
2002	Chevrolet	C Silverado - 2WD (CNG)	Memory mirror module		√	√	√	√	
2002	Chevrolet	C Silverado - 2WD (CNG)	Supplemental inflatable restraint		√	√	√		0531
2002	Chevrolet	C Silverado - 2WD (CNG)	Onstar	√	√	√	√		0647 0683
2002	Chevrolet	C Silverado - 2WD (CNG)	Vehicle theft deterrent	√	√	√	√	√	0523
2002	Chevrolet	C Silverado - 2WD (CNG)	RTD (autoride) / EVO		√	√	√	√	
2002	Chevrolet	C Silverado - 2WD (CNG)	4WAL 3 sensor		√	√	√	√	0648
2002	Chevrolet	C Silverado - 2WD (CNG)	VSES (if equipped)		√	√	√	√	0648
2002	Chevrolet	Express (CNG)	Powertrain	√	√	√	√	√	
2002	Chevrolet	Express (CNG)	Immobilizer		√	√	√	√	0706 0707 0708 0709 0710 0524
2002	Chevrolet	Express (CNG)	Supplemental inflatable restraint		√	√	√		0531
2002	Chevrolet	Express - 2WD	Powertrain	√	√	√	√	√	0638
2002	Chevrolet	Express - 2WD	Immobilizer		√	√	√	√	0706 0707 0708 0709 0710 0524
2002	Chevrolet	Express - 2WD	Supplemental inflatable restraint		√	√	√		0531
2002	Chevrolet	K Silverado - 4WD	Powertrain	√	√	√	√	√	0638
2002	Chevrolet	K Silverado - 4WD	Body Control Module	√	√	√	√	√	0523
2002	Chevrolet	K Silverado - 4WD	Memory mirror module		√	√	√	√	
2002	Chevrolet	K Silverado - 4WD	Supplemental inflatable restraint		√	√	√		0531
2002	Chevrolet	K Silverado - 4WD	Onstar	√	√	√	√		0647 0683
2002	Chevrolet	K Silverado - 4WD	Vehicle theft deterrent	√	√	√	√	√	0523
2002	Chevrolet	K Silverado - 4WD	RTD (autoride) / EVO		√	√	√	√	
2002	Chevrolet	K Silverado - 4WD	4WAL 3 sensor		√	√	√	√	0648
2002	Chevrolet	K Silverado - 4WD	VSES (if equipped)		√	√	√	√	0648
2002	Chevrolet	K Silverado - 4WD (CNG)	Powertrain	√	√	√	√	√	
2002	Chevrolet	K Silverado - 4WD (CNG)	Body Control Module	√	√	√	√	√	0523
2002	Chevrolet	K Silverado - 4WD (CNG)	Memory mirror module		√	√	√	√	
2002	Chevrolet	K Silverado - 4WD (CNG)	Supplemental inflatable restraint		√	√	√		0531
2002	Chevrolet	K Silverado - 4WD (CNG)	Onstar	√	√	√	√		0647 0683
2002	Chevrolet	K Silverado - 4WD (CNG)	Vehicle theft deterrent	√	√	√	√	√	0523
2002	Chevrolet	K Silverado - 4WD (CNG)	RTD (autoride) / EVO		√	√	√	√	

2002	Chevrolet	K Silverado - 4WD (CNG)	4WAL 3 sensor		√	√	√	√	0648
2002	Chevrolet	K Silverado - 4WD (CNG)	VSES (if equipped)		√	√	√	√	0648
2002	Chevrolet	S10 Pickup - 2WD	Powertrain	√	√	√	√	√	0638
2002	Chevrolet	S10 Pickup - 2WD	Body Control Module		√	√	√	√	0524
2002	Chevrolet	S10 Pickup - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2002	Chevrolet	S10 Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
2002	Chevrolet	S10 Pickup - 2WD	Traction assist (if equipped)		√	√	√	√	
2002	Chevrolet	S10 Pickup - 4WD	Powertrain	√	√	√	√	√	0638
2002	Chevrolet	S10 Pickup - 4WD	Body Control Module		√	√	√	√	0524
2002	Chevrolet	S10 Pickup - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2002	Chevrolet	S10 Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
2002	Chevrolet	S10 Pickup - 4WD	Traction assist (if equipped)		√	√	√	√	
2002	Chevrolet	Suburban - 2WD	Powertrain	√	√	√	√	√	0571
2002	Chevrolet	Suburban - 2WD	Body Control Module	√	√	√	√	√	0523
2002	Chevrolet	Suburban - 2WD	Memory mirror module		√	√	√	√	
2002	Chevrolet	Suburban - 2WD	Supplemental inflatable restraint		√	√	√		0531
2002	Chevrolet	Suburban - 2WD	Onstar	√	√	√	√		0647 0683
2002	Chevrolet	Suburban - 2WD	Vehicle theft deterrent	√	√	√	√	√	0523
2002	Chevrolet	Suburban - 2WD	RTD (autoride) / EVO		√	√	√	√	
2002	Chevrolet	Suburban - 2WD	4WAL 3 sensor		√	√	√	√	0648
2002	Chevrolet	Suburban - 2WD	VSES (if equipped)		√	√	√	√	0648
2002	Chevrolet	Suburban - 4WD	Powertrain	√	√	√	√	√	0571
2002	Chevrolet	Suburban - 4WD	Body Control Module	√	√	√	√	√	0523
2002	Chevrolet	Suburban - 4WD	Memory mirror module		√	√	√	√	
2002	Chevrolet	Suburban - 4WD	Supplemental inflatable restraint		√	√	√		0531
2002	Chevrolet	Suburban - 4WD	Onstar	√	√	√	√		0647 0683
2002	Chevrolet	Suburban - 4WD	Vehicle theft deterrent	√	√	√	√	√	0523
2002	Chevrolet	Suburban - 4WD	RTD (autoride) / EVO		√	√	√	√	
2002	Chevrolet	Suburban - 4WD	4WAL 3 sensor		√	√	√	√	0648
2002	Chevrolet	Suburban - 4WD	VSES (if equipped)		√	√	√	√	0648
2002	Chevrolet	Tahoe - 2WD	Powertrain	√	√	√	√	√	
2002	Chevrolet	Tahoe - 2WD	Body Control Module	√	√	√	√	√	0523
2002	Chevrolet	Tahoe - 2WD	Memory mirror module		√	√	√	√	
2002	Chevrolet	Tahoe - 2WD	Supplemental inflatable restraint		√	√	√		0531
2002	Chevrolet	Tahoe - 2WD	Onstar	√	√	√	√		0647 0683
2002	Chevrolet	Tahoe - 2WD	Vehicle theft deterrent	√	√	√	√	√	0523
2002	Chevrolet	Tahoe - 2WD	RTD (autoride) / EVO		√	√	√	√	
2002	Chevrolet	Tahoe - 2WD	4WAL 3 sensor		√	√	√	√	0648
2002	Chevrolet	Tahoe - 2WD	VSES (if equipped)		√	√	√	√	0648
2002	Chevrolet	Tahoe - 4WD	Powertrain	√	√	√	√	√	
2002	Chevrolet	Tahoe - 4WD	Body Control Module	√	√	√	√	√	0523

2002	Chevrolet	Tahoe - 4WD	Memory mirror module		√	√	√	√	
2002	Chevrolet	Tahoe - 4WD	Supplemental inflatable restraint		√	√	√		0531
2002	Chevrolet	Tahoe - 4WD	Onstar	√	√	√	√		0647 0683
2002	Chevrolet	Tahoe - 4WD	Vehicle theft deterrent	√	√	√	√	√	0523
2002	Chevrolet	Tahoe - 4WD	RTD (autoride) / EVO		√	√	√	√	
2002	Chevrolet	Tahoe - 4WD	4WAL 3 sensor		√	√	√	√	0648
2002	Chevrolet	Tahoe - 4WD	VSES (if equipped)		√	√	√	√	0648
2002	Chevrolet	Tracker - 2WD	Powertrain	√	√	√	√	√	
2002	Chevrolet	Tracker - 2WD	Supplemental inflatable restraint		√	√	√		
2002	Chevrolet	Tracker - 2WD	Chassis	√	√	√	√	√	0506
2002	Chevrolet	Tracker - 4WD	Powertrain	√	√	√	√	√	
2002	Chevrolet	Tracker - 4WD	Supplemental inflatable restraint		√	√	√		
2002	Chevrolet	Tracker - 4WD	Chassis	√	√	√	√	√	0506
2002	Chevrolet	TrailBlazer - 2WD	Powertrain	√	√	√	√	√	
2002	Chevrolet	TrailBlazer - 2WD	Amplifier (bose)	√	√	√	√	√	0550
2002	Chevrolet	TrailBlazer - 2WD	Rear seat audio				√		
2002	Chevrolet	TrailBlazer - 2WD	Heating and air conditioning				√	√	
2002	Chevrolet	TrailBlazer - 2WD	Supplemental inflatable restraint		√	√			0531
2002	Chevrolet	TrailBlazer - 2WD	Onstar	√	√	√	√	√	0647 0683
2002	Chevrolet	TrailBlazer - 2WD	Vehicle theft deterrent	√	√	√	√		
2002	Chevrolet	TrailBlazer - 2WD	Radio	√	√	√	√	√	0550
2002	Chevrolet	TrailBlazer - 2WD	Rear HVAC/RSA	√	√	√	√	√	0531
2002	Chevrolet	TrailBlazer - 2WD	4WAL 3 sensor		√	√	√	√	
2002	Chevrolet	TrailBlazer - 2WD	Traction assist (if equipped)		√	√	√	√	
2002	Chevrolet	TrailBlazer - 4WD	Powertrain	√	√	√	√	√	
2002	Chevrolet	TrailBlazer - 4WD	Amplifier (bose)	√	√	√	√	√	0550
2002	Chevrolet	TrailBlazer - 4WD	Rear seat audio				√		
2002	Chevrolet	TrailBlazer - 4WD	Heating and air conditioning				√	√	
2002	Chevrolet	TrailBlazer - 4WD	Supplemental inflatable restraint		√	√			0531
2002	Chevrolet	TrailBlazer - 4WD	Onstar	√	√	√	√	√	0647 0683
2002	Chevrolet	TrailBlazer - 4WD	Vehicle theft deterrent	√	√	√	√		
2002	Chevrolet	TrailBlazer - 4WD	Radio	√	√	√	√	√	0550
2002	Chevrolet	TrailBlazer - 4WD	Rear HVAC/RSA	√	√	√	√	√	0531
2002	Chevrolet	TrailBlazer - 4WD	4WAL 3 sensor		√	√	√	√	
2002	Chevrolet	TrailBlazer - 4WD	Traction assist (if equipped)		√	√	√	√	
2002	Chevrolet	Venture	Powertrain	√	√	√	√	√	0493
2002	Chevrolet	Venture	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524
2002	Chevrolet	Venture	Radio				√		
2002	Chevrolet	Venture	Onstar	√	√	√	√		0647 0683
2002	Chevrolet	Venture	Supplemental inflatable restraint	√	√	√	√	√	0682 0628 0573 0574 0572 0524



2002	Chevrolet	Venture	Chassis	√	√	√	√	√	0506
2002	GMC truck	Envoy - 2WD	Powertrain	√	√	√	√	√	
2002	GMC truck	Envoy - 2WD	Amplifier (bose)	√	√	√	√	√	0550
2002	GMC truck	Envoy - 2WD	Rear seat audio				√		
2002	GMC truck	Envoy - 2WD	Heating and air conditioning				√	√	
2002	GMC truck	Envoy - 2WD	Supplemental inflatable restraint		√	√			0531
2002	GMC truck	Envoy - 2WD	Onstar	√	√	√	√	√	0647 0683
2002	GMC truck	Envoy - 2WD	Radio	√	√	√	√	√	0550
2002	GMC truck	Envoy - 2WD	Rear HVAC/RSA	√	√	√	√	√	0531
2002	GMC truck	Envoy - 2WD	4WAL 3 sensor		√	√	√	√	
2002	GMC truck	Envoy - 2WD	Traction assist (if equipped)		√	√	√	√	
2002	GMC truck	Envoy - 4WD	Powertrain	√	√	√	√	√	
2002	GMC truck	Envoy - 4WD	Amplifier (bose)	√	√	√	√	√	0550
2002	GMC truck	Envoy - 4WD	Rear seat audio				√		
2002	GMC truck	Envoy - 4WD	Heating and air conditioning				√	√	
2002	GMC truck	Envoy - 4WD	Supplemental inflatable restraint		√	√			0531
2002	GMC truck	Envoy - 4WD	Onstar	√	√	√	√	√	0647 0683
2002	GMC truck	Envoy - 4WD	Radio	√	√	√	√	√	0550
2002	GMC truck	Envoy - 4WD	Rear HVAC/RSA	√	√	√	√	√	0531
2002	GMC truck	Envoy - 4WD	4WAL 3 sensor		√	√	√	√	
2002	GMC truck	Envoy - 4WD	Traction assist (if equipped)		√	√	√	√	
2002	GMC truck	GMC C Cab/Chassis HD (GMT 400)	Powertrain	√	√	√	√	√	0571
2002	GMC truck	GMC C Cab/Chassis HD (GMT 400)	Body Control Module	√	√	√	√	√	0523
2002	GMC truck	GMC C Cab/Chassis HD (GMT 400)	Memory mirror module		√	√	√	√	
2002	GMC truck	GMC C Cab/Chassis HD (GMT 400)	Supplemental inflatable restraint		√	√	√		0531
2002	GMC truck	GMC C Cab/Chassis HD (GMT 400)	Onstar	√	√	√	√	√	0647 0683
2002	GMC truck	GMC C Cab/Chassis HD (GMT 400)	RTD (autoride) / EVO		√	√	√	√	
2002	GMC truck	GMC C Cab/Chassis HD (GMT 400)	4WAL 3 sensor		√	√	√	√	0648
2002	GMC truck	GMC C Cab/Chassis HD (GMT 400)	VSES (if equipped)		√	√	√	√	0648
2002	GMC truck	GMC C-Series - 2WD	Powertrain	√	√	√	√	√	0638
2002	GMC truck	GMC C-Series - 2WD	Body Control Module	√	√	√	√	√	0523
2002	GMC truck	GMC C-Series - 2WD	Memory mirror module		√	√	√	√	
2002	GMC truck	GMC C-Series - 2WD	Supplemental inflatable restraint		√	√	√		0531
2002	GMC truck	GMC C-Series - 2WD	Onstar	√	√	√	√	√	0647 0683

2002	GMC truck	GMC C-Series - 2WD	RTD (autoride) / EVO		√	√	√	√	
2002	GMC truck	GMC C-Series - 2WD	4WAL 3 sensor		√	√	√	√	0648
2002	GMC truck	GMC C-Series - 2WD	VSES (if equipped)		√	√	√	√	0648
2002	GMC truck	GMC C-Series - 2WD (CNG)	Powertrain	√	√	√	√	√	0493
2002	GMC truck	GMC C-Series - 2WD (CNG)	Body Control Module	√	√	√	√	√	0523
2002	GMC truck	GMC C-Series - 2WD (CNG)	Memory mirror module		√	√	√	√	
2002	GMC truck	GMC C-Series - 2WD (CNG)	Supplemental inflatable restraint		√	√	√		0531
2002	GMC truck	GMC C-Series - 2WD (CNG)	Onstar	√	√	√	√	√	0647 0683
2002	GMC truck	GMC C-Series - 2WD (CNG)	RTD (autoride) / EVO		√	√	√	√	
2002	GMC truck	GMC C-Series - 2WD (CNG)	4WAL 3 sensor		√	√	√	√	0648
2002	GMC truck	GMC C-Series - 2WD (CNG)	VSES (if equipped)		√	√	√	√	0648
2002	GMC truck	GMC K Sierra - 4WD	Powertrain	√	√	√	√	√	0638
2002	GMC truck	GMC K Sierra - 4WD	Body Control Module	√	√	√	√	√	0523
2002	GMC truck	GMC K Sierra - 4WD	Memory mirror module		√	√	√	√	
2002	GMC truck	GMC K Sierra - 4WD	Supplemental inflatable restraint		√	√	√		0531
2002	GMC truck	GMC K Sierra - 4WD	Onstar	√	√	√	√	√	0647 0683
2002	GMC truck	GMC K Sierra - 4WD	RTD (autoride) / EVO		√	√	√	√	
2002	GMC truck	GMC K Sierra - 4WD	4WAL 3 sensor		√	√	√	√	0648
2002	GMC truck	GMC K Sierra - 4WD	VSES (if equipped)		√	√	√	√	0648
2002	GMC truck	GMC K Sierra - 4WD (CNG)	Powertrain	√	√	√	√	√	
2002	GMC truck	GMC K Sierra - 4WD (CNG)	Body Control Module	√	√	√	√	√	0523
2002	GMC truck	GMC K Sierra - 4WD (CNG)	Memory mirror module		√	√	√	√	
2002	GMC truck	GMC K Sierra - 4WD (CNG)	Supplemental inflatable restraint		√	√	√		0531
2002	GMC truck	GMC K Sierra - 4WD (CNG)	Onstar	√	√	√	√	√	0647 0683
2002	GMC truck	GMC K Sierra - 4WD (CNG)	RTD (autoride) / EVO		√	√	√	√	
2002	GMC truck	GMC K Sierra - 4WD (CNG)	4WAL 3 sensor		√	√	√	√	0648
2002	GMC truck	GMC K Sierra - 4WD (CNG)	VSES (if equipped)		√	√	√	√	0648
2002	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	0638
2002	GMC truck	Jimmy - 2WD	Body Control Module		√	√	√	√	0524
2002	GMC truck	Jimmy - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2002	GMC truck	Jimmy - 2WD	4WAL 3 sensor		√	√	√	√	
2002	GMC truck	Jimmy - 2WD	Traction assist (if equipped)		√	√	√	√	
2002	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	0638
2002	GMC truck	Jimmy - 4WD	Body Control Module		√	√	√	√	0524
2002	GMC truck	Jimmy - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2002	GMC truck	Jimmy - 4WD	4WAL 3 sensor		√	√	√	√	
2002	GMC truck	Jimmy - 4WD	Traction assist (if equipped)		√	√	√	√	
2002	GMC truck	Safari - 2WD	Powertrain	√	√	√	√	√	0638
2002	GMC truck	Safari - 2WD	Body Control Module		√	√	√	√	
2002	GMC truck	Safari - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2002	GMC truck	Safari - 2WD	Instrument panel cluster		√	√		√	0531

2002	GMC truck	Safari - 2WD	4WAL 3 sensor		√	√	√	√	
2002	GMC truck	Safari - 4WD	Powertrain	√	√	√	√	√	0638
2002	GMC truck	Safari - 4WD	Body Control Module		√	√	√	√	
2002	GMC truck	Safari - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2002	GMC truck	Safari - 4WD	Instrument panel cluster		√	√		√	0531
2002	GMC truck	Safari - 4WD	4WAL 3 sensor		√	√	√	√	
2002	GMC truck	Savana (CNG)	Powertrain	√	√	√	√	√	
2002	GMC truck	Savana (CNG)	Immobilizer		√	√	√	√	0706 0707 0708 0709 0710 0524
2002	GMC truck	Savana (CNG)	Supplemental inflatable restraint		√	√	√		0531
2002	GMC truck	Savana - 2WD	Powertrain	√	√	√	√	√	0638
2002	GMC truck	Savana - 2WD	Immobilizer		√	√	√	√	0706 0707 0708 0709 0710 0524
2002	GMC truck	Savana - 2WD	Supplemental inflatable restraint		√	√	√		0531
2002	GMC truck	Sonoma Pickup - 2WD	Powertrain	√	√	√	√	√	0638
2002	GMC truck	Sonoma Pickup - 2WD	Body Control Module		√	√	√	√	0524
2002	GMC truck	Sonoma Pickup - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2002	GMC truck	Sonoma Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
2002	GMC truck	Sonoma Pickup - 2WD	Traction assist (if equipped)		√	√	√	√	
2002	GMC truck	Sonoma Pickup - 4WD	Powertrain	√	√	√	√	√	0638
2002	GMC truck	Sonoma Pickup - 4WD	Body Control Module		√	√	√	√	0524
2002	GMC truck	Sonoma Pickup - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2002	GMC truck	Sonoma Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
2002	GMC truck	Sonoma Pickup - 4WD	Traction assist (if equipped)		√	√	√	√	
2002	GMC truck	Yukon - 2WD	Powertrain	√	√	√	√	√	
2002	GMC truck	Yukon - 2WD	Body Control Module	√	√	√	√	√	0523
2002	GMC truck	Yukon - 2WD	Memory mirror module		√	√	√	√	
2002	GMC truck	Yukon - 2WD	Supplemental inflatable restraint		√	√	√		0531
2002	GMC truck	Yukon - 2WD	Onstar	√	√	√	√	√	0647 0683
2002	GMC truck	Yukon - 2WD	RTD (autoride) / EVO		√	√	√	√	
2002	GMC truck	Yukon - 2WD	4WAL 3 sensor		√	√	√	√	0648
2002	GMC truck	Yukon - 2WD	VSES (if equipped)		√	√	√	√	0648
2002	GMC truck	Yukon - 4WD	Powertrain	√	√	√	√	√	
2002	GMC truck	Yukon - 4WD	Body Control Module	√	√	√	√	√	0523
2002	GMC truck	Yukon - 4WD	Memory mirror module		√	√	√	√	
2002	GMC truck	Yukon - 4WD	Supplemental inflatable restraint		√	√	√		0531
2002	GMC truck	Yukon - 4WD	Onstar	√	√	√	√	√	0647 0683
2002	GMC truck	Yukon - 4WD	RTD (autoride) / EVO		√	√	√	√	
2002	GMC truck	Yukon - 4WD	4WAL 3 sensor		√	√	√	√	0648
2002	GMC truck	Yukon - 4WD	VSES (if equipped)		√	√	√	√	0648
2002	GMC truck	Yukon Denali	Powertrain	√	√	√	√	√	
2002	GMC truck	Yukon Denali	Body Control Module	√	√	√	√	√	0523

2002	GMC truck	Yukon Denali	Memory mirror module		√	√	√	√	
2002	GMC truck	Yukon Denali	Supplemental inflatable restraint		√	√	√		0531
2002	GMC truck	Yukon Denali	Onstar	√	√	√	√	√	0647 0683
2002	GMC truck	Yukon Denali	RTD (autoride) / EVO		√	√	√	√	
2002	GMC truck	Yukon Denali	4WAL 3 sensor		√	√	√	√	0648
2002	GMC truck	Yukon Denali	VSES (if equipped)		√	√	√	√	0648
2002	GMC truck	Yukon XL - 2WD	Powertrain	√	√	√	√	√	0571
2002	GMC truck	Yukon XL - 2WD	Body Control Module	√	√	√	√	√	0523
2002	GMC truck	Yukon XL - 2WD	Memory mirror module		√	√	√	√	
2002	GMC truck	Yukon XL - 2WD	Supplemental inflatable restraint		√	√	√		0531
2002	GMC truck	Yukon XL - 2WD	Onstar	√	√	√	√	√	0647 0683
2002	GMC truck	Yukon XL - 2WD	RTD (autoride) / EVO		√	√	√	√	
2002	GMC truck	Yukon XL - 2WD	4WAL 3 sensor		√	√	√	√	0648
2002	GMC truck	Yukon XL - 2WD	VSES (if equipped)		√	√	√	√	0648
2002	GMC truck	Yukon XL - 4WD	Powertrain	√	√	√	√	√	0571
2002	GMC truck	Yukon XL - 4WD	Body Control Module	√	√	√	√	√	0523
2002	GMC truck	Yukon XL - 4WD	Memory mirror module		√	√	√	√	
2002	GMC truck	Yukon XL - 4WD	Supplemental inflatable restraint		√	√	√		0531
2002	GMC truck	Yukon XL - 4WD	Onstar	√	√	√	√	√	0647 0683
2002	GMC truck	Yukon XL - 4WD	RTD (autoride) / EVO		√	√	√	√	
2002	GMC truck	Yukon XL - 4WD	4WAL 3 sensor		√	√	√	√	0648
2002	GMC truck	Yukon XL - 4WD	VSES (if equipped)		√	√	√	√	0648
2002	Oldsmobile	Bravada	Powertrain	√	√	√	√	√	
2002	Oldsmobile	Bravada	Amplifier (bose)	√	√	√	√	√	0550
2002	Oldsmobile	Bravada	Rear seat audio				√		
2002	Oldsmobile	Bravada	Heating and air conditioning				√	√	
2002	Oldsmobile	Bravada	Supplemental inflatable restraint		√	√			0531
2002	Oldsmobile	Bravada	Onstar	√	√	√	√	√	0647 0683
2002	Oldsmobile	Bravada	Radio	√	√	√	√	√	0550
2002	Oldsmobile	Bravada	4WAL 3 sensor		√	√	√	√	
2002	Oldsmobile	Bravada	Traction assist (if equipped)		√	√	√	√	
2002	Oldsmobile	Bravada - 2WD	Powertrain	√	√	√	√	√	
2002	Oldsmobile	Bravada - 2WD	Amplifier (bose)	√	√	√	√	√	0550
2002	Oldsmobile	Bravada - 2WD	Rear seat audio				√		
2002	Oldsmobile	Bravada - 2WD	Heating and air conditioning				√	√	
2002	Oldsmobile	Bravada - 2WD	Supplemental inflatable restraint		√	√			0531
2002	Oldsmobile	Bravada - 2WD	Onstar	√	√	√	√	√	0647 0683
2002	Oldsmobile	Bravada - 2WD	Radio	√	√	√	√	√	0550
2002	Oldsmobile	Bravada - 2WD	4WAL 3 sensor		√	√	√	√	
2002	Oldsmobile	Bravada - 2WD	Traction assist (if equipped)		√	√	√	√	
2002	Oldsmobile	Silhouette	Powertrain	√	√	√	√	√	0493

2002	Oldsmobile	Silhouette	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524
2002	Oldsmobile	Silhouette	Memory seat module		√	√	√	√	
2002	Oldsmobile	Silhouette	Radio				√		
2002	Oldsmobile	Silhouette	Onstar	√	√	√	√		0647 0683
2002	Oldsmobile	Silhouette	Supplemental inflatable restraint	√	√	√	√	√	0682 0628 0573 0574 0572 0524
2002	Oldsmobile	Silhouette	Chassis	√	√	√	√	√	0506
2002	Pontiac	Aztek - AWD	Powertrain	√	√	√	√	√	0493
2002	Pontiac	Aztek - AWD	Body Control Module		√	√	√	√	0637
2002	Pontiac	Aztek - AWD	Onstar	√	√	√	√		0647 0683
2002	Pontiac	Aztek - AWD	Supplemental inflatable restraint		√	√			
2002	Pontiac	Aztek - AWD	Vehicle theft deterrent	√	√	√	√	√	0637
2002	Pontiac	Aztek - AWD	Chassis		√	√	√	√	0506
2002	Pontiac	Aztek - FWD	Powertrain	√	√	√	√	√	0493
2002	Pontiac	Aztek - FWD	Body Control Module		√	√	√	√	0637
2002	Pontiac	Aztek - FWD	Onstar	√	√	√	√		0647 0683
2002	Pontiac	Aztek - FWD	Supplemental inflatable restraint		√	√			
2002	Pontiac	Aztek - FWD	Vehicle theft deterrent	√	√	√	√	√	0637
2002	Pontiac	Aztek - FWD	Chassis		√	√	√	√	0506
2002	Pontiac	Montana	Powertrain	√	√	√	√	√	0493
2002	Pontiac	Montana	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524
2002	Pontiac	Montana	Radio				√		
2002	Pontiac	Montana	Onstar	√	√	√	√		0647 0683
2002	Pontiac	Montana	Supplemental inflatable restraint	√	√	√	√	√	0682 0628 0573 0574 0572 0524
2002	Pontiac	Montana	Chassis	√	√	√	√	√	0506
2001	Buick	Century	Powertrain	√	√	√	√	√	0493
2001	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0690
2001	Buick	Century	Onstar	√	√	√	√		0683
2001	Buick	Century	Supplemental inflatable restraint		√	√	√		0515
2001	Buick	Century	Chassis	√	√	√	√	√	0506
2001	Buick	Lesabre	Powertrain	√	√	√	√	√	0493
2001	Buick	Lesabre	Dash integration module				√	√	0650 0574 0576
2001	Buick	Lesabre	CD changer		√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604
2001	Buick	Lesabre	Instrument panel module		√	√	√	√	0630 0667
2001	Buick	Lesabre	Radio						0525
2001	Buick	Lesabre	Onstar	√	√	√	√		0683
2001	Buick	Lesabre	Vehicle theft deterrent		√	√			
2001	Buick	Lesabre	Supplemental inflatable restraint		√	√			

2001	Buick	Lesabre	Remote function actuation		√	√	√	√	0650 0574 0576
2001	Buick	Lesabre	Climate control panel	√	√	√	√	√	0525
2001	Buick	Lesabre	Rear integration module		√	√	√	√	
2001	Buick	Lesabre	DRP/ABS/TIM		√	√	√	√	0506
2001	Buick	Park Avenue	Powertrain	√	√	√	√	√	0493
2001	Buick	Park Avenue	Body Control Module		√	√	√	√	0614 0668 0684 0630
2001	Buick	Park Avenue	Onstar	√	√	√	√		0683
2001	Buick	Park Avenue	Vehicle theft deterrent		√	√			
2001	Buick	Park Avenue	Personalization		√	√	√	√	0550 0550
2001	Buick	Park Avenue	DRP/ABS/TIM		√	√	√	√	0506
2001	Buick	Regal	Powertrain	√	√	√	√	√	0493
2001	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0690
2001	Buick	Regal	Onstar	√	√	√	√		0683
2001	Buick	Regal	Supplemental inflatable restraint		√	√	√		0515
2001	Buick	Regal	Chassis	√	√	√	√	√	0506
2001	Cadillac	Catera	Powertrain	√	√	√	√	√	
2001	Cadillac	Catera	Body Control Module		√	√	√	√	0711 0628
2001	Cadillac	Catera	Radio		√	√	√	√	0671 0578 0579 0525
2001	Cadillac	Catera	Cellular telephone						0684
2001	Cadillac	Catera	Onstar	√	√	√	√		0683
2001	Cadillac	Catera	ABS		√	√	√	√	
2001	Cadillac	Deville	Powertrain	√	√	√	√	√	
2001	Cadillac	Deville	Dash integration module		√	√	√	√	0614 0664 0615 0619 0696 0712 0586 0630
2001	Cadillac	Deville	Cellular telephone		√	√	√	√	0628 0651 0650 0673 0614 0672
2001	Cadillac	Deville	Instrument panel cluster				√		
2001	Cadillac	Deville	Amplifier (delco)		√	√	√	√	
2001	Cadillac	Deville	Memory seat module		√	√	√	√	
2001	Cadillac	Deville	Onstar	√	√	√	√		0683
2001	Cadillac	Deville	Vehicle theft deterrent		√	√			
2001	Cadillac	Deville	Remote function actuation		√	√		√	0685
2001	Cadillac	Deville	Left rear door module	√	√	√	√	√	
2001	Cadillac	Deville	Right rear door module	√	√	√	√	√	
2001	Cadillac	Deville	Driver door switch	√	√	√	√		
2001	Cadillac	Deville	Driver door module	√	√	√	√	√	
2001	Cadillac	Deville	Passenger door module	√	√	√	√		0604 0605
2001	Cadillac	Deville	Tire pressure monitor		√	√	√		
2001	Cadillac	Deville	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2001	Cadillac	Deville	eed sensitive steering		√	√	√		
2001	Cadillac	Deville	CVRSS/ALC		√	√	√	√	
2001	Cadillac	DHS	Powertrain	√	√	√	√	√	

2001	Cadillac	DHS	Dash integration module		√	√	√	√	0614 0664 0615 0619 0696 0712 0586 0630
2001	Cadillac	DHS	Amplifier (bose)		√	√	√	√	0713
2001	Cadillac	DHS	Cellular telephone		√	√	√	√	0628 0651 0650 0673 0614 0672
2001	Cadillac	DHS	Instrument panel cluster		√	√	√	√	0608 0578 0579 0658
2001	Cadillac	DHS	Memory seat module		√	√	√	√	
2001	Cadillac	DHS	Onstar	√	√	√	√		0683
2001	Cadillac	DHS	Vehicle theft deterrent		√	√			
2001	Cadillac	DHS	Remote function actuation		√	√		√	0685
2001	Cadillac	DHS	Left rear door module	√	√	√	√	√	
2001	Cadillac	DHS	Right rear door module	√	√	√	√	√	
2001	Cadillac	DHS	Driver door switch	√	√	√	√		
2001	Cadillac	DHS	Driver door module	√	√	√	√	√	
2001	Cadillac	DHS	Passenger door module	√	√	√	√		0604 0605
2001	Cadillac	DHS	Tire pressure monitor		√	√	√		
2001	Cadillac	DHS	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2001	Cadillac	DHS	eed sensitive steering		√	√	√		
2001	Cadillac	DHS	CVRSS/ALC		√	√	√	√	
2001	Cadillac	DTS	Powertrain	√	√	√	√	√	
2001	Cadillac	DTS	Dash integration module		√	√	√	√	0614 0664 0615 0619 0696 0712 0586 0630
2001	Cadillac	DTS	Amplifier (bose)		√	√	√	√	0713
2001	Cadillac	DTS	Cellular telephone		√	√	√	√	0628 0651 0650 0673 0614 0672
2001	Cadillac	DTS	Instrument panel cluster		√	√	√	√	0608 0578 0579 0658
2001	Cadillac	DTS	Memory seat module		√	√	√	√	0674
2001	Cadillac	DTS	Onstar	√	√	√	√		0683
2001	Cadillac	DTS	Vehicle theft deterrent		√	√			
2001	Cadillac	DTS	Remote function actuation		√	√		√	0685
2001	Cadillac	DTS	Left rear door module	√	√	√	√	√	
2001	Cadillac	DTS	Right rear door module	√	√	√	√	√	
2001	Cadillac	DTS	Driver door switch	√	√	√	√		
2001	Cadillac	DTS	Driver door module	√	√	√	√	√	
2001	Cadillac	DTS	Passenger door module	√	√	√	√		0604 0605
2001	Cadillac	DTS	Tire pressure monitor		√	√	√		
2001	Cadillac	DTS	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2001	Cadillac	DTS	eed sensitive steering		√	√	√		
2001	Cadillac	DTS	CVRSS/ALC		√	√	√	√	
2001	Cadillac	Eldorado	Powertrain	√	√	√	√	√	
2001	Cadillac	Eldorado	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682

2001	Cadillac	Eldorado	Radio		√	√	√	√	0702 0525
2001	Cadillac	Eldorado	Onstar	√	√	√	√		0683
2001	Cadillac	Eldorado	Remote function actuation		√	√		√	
2001	Cadillac	Eldorado	Supplemental inflatable restraint		√	√			
2001	Cadillac	Eldorado	Delco/Xtool ABS/TCS		√	√		√	0641 0506
2001	Cadillac	Eldorado	Magna steer		√	√			
2001	Cadillac	Seville	Powertrain	√	√	√	√	√	
2001	Cadillac	Seville	Amplifier (bose)		√	√	√	√	0614 0664 0615 0617 0686 0687 0685 0712
2001	Cadillac	Seville	Cellular telephone		√	√	√	√	0628 0651 0650 0673 0614 0672
2001	Cadillac	Seville	Instrument panel cluster		√	√	√	√	0608 0578 0579 0658
2001	Cadillac	Seville	Amplifier (delco)		√	√	√	√	
2001	Cadillac	Seville	Memory seat module		√	√	√	√	0674
2001	Cadillac	Seville	Onstar	√	√	√	√		0683
2001	Cadillac	Seville	Vehicle theft deterrent		√	√			
2001	Cadillac	Seville	Remote function actuation		√	√		√	
2001	Cadillac	Seville	Dash integration module	√	√	√	√	√	0604 0605
2001	Cadillac	Seville	Tire pressure monitor		√	√	√		
2001	Cadillac	Seville	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2001	Cadillac	Seville	eed sensitive steering		√	√	√		
2001	Cadillac	Seville	CVRSS/ALC		√	√	√	√	
2001	Chevrolet	Alero (export)	Powertrain	√	√	√	√	√	0493
2001	Chevrolet	Alero (export)	Body Control Module	√	√	√		√	0633 0525
2001	Chevrolet	Alero (export)	Radio	√	√	√	√	√	0675
2001	Chevrolet	Alero (export)	Vehicle theft deterrent		√	√	√		
2001	Chevrolet	Alero (export)	Chassis	√	√	√	√	√	0506
2001	Chevrolet	Camaro	Powertrain	√	√	√	√	√	0493
2001	Chevrolet	Camaro	Instrument panel cluster		√	√	√	√	0682
2001	Chevrolet	Camaro	Supplemental inflatable restraint		√	√	√	√	0682
2001	Chevrolet	Camaro	Chassis		√	√	√	√	0506
2001	Chevrolet	Cavalier	Powertrain	√	√	√	√	√	
2001	Chevrolet	Cavalier	Radio				√		
2001	Chevrolet	Cavalier	Body Control Module	√	√	√	√	√	0633 0525 0675
2001	Chevrolet	Cavalier	Chassis	√	√	√	√	√	0506
2001	Chevrolet	Cavalier (CNG)	Powertrain	√	√	√	√	√	
2001	Chevrolet	Cavalier (CNG)	Radio				√		
2001	Chevrolet	Cavalier (CNG)	Body Control Module	√	√	√	√	√	0633 0525 0675
2001	Chevrolet	Cavalier (CNG)	Chassis	√	√	√	√	√	0506
2001	Chevrolet	Corvette	Powertrain	√	√	√	√	√	
2001	Chevrolet	Corvette	Body Control Module		√	√	√	√	
2001	Chevrolet	Corvette	Supplemental inflatable restraint		√	√	√		0688



2001	Chevrolet	Corvette	Remote function actuation		√	√	√	√	0673
2001	Chevrolet	Corvette	ABS/TCS	√	√	√	√	√	
2001	Chevrolet	Corvette	RTD	√	√	√	√	√	
2001	Chevrolet	Impala	Powertrain	√	√	√	√	√	0493
2001	Chevrolet	Impala	Radio				√		
2001	Chevrolet	Impala	Body Control Module		√	√	√	√	0515 0628 0614 0580 0572 0573 0574 0703
2001	Chevrolet	Impala	Onstar	√	√	√	√		0683
2001	Chevrolet	Impala	Supplemental inflatable restraint	√	√	√	√	√	0515 0628 0614 0580 0572 0573 0574 0703
2001	Chevrolet	Impala	Chassis	√	√	√		√	0506
2001	Chevrolet	Lumina	Powertrain	√	√	√	√	√	0493
2001	Chevrolet	Malibu	Powertrain	√	√	√	√	√	0493
2001	Chevrolet	Malibu	Body Control Module	√	√	√		√	0633 0525
2001	Chevrolet	Malibu	Radio	√			√	√	
2001	Chevrolet	Malibu	Remote function actuation		√	√	√	√	
2001	Chevrolet	Malibu	Chassis	√	√	√	√	√	0506
2001	Chevrolet	Monte Carlo	Powertrain	√	√	√	√	√	0493
2001	Chevrolet	Monte Carlo	Radio				√		
2001	Chevrolet	Monte Carlo	Body Control Module		√	√	√	√	0515 0628 0614 0580 0572 0573 0574 0703
2001	Chevrolet	Monte Carlo	Onstar	√	√	√	√		0683
2001	Chevrolet	Monte Carlo	Supplemental inflatable restraint	√	√	√	√	√	0515 0628 0614 0580 0572 0573 0574 0703
2001	Chevrolet	Monte Carlo	Chassis	√	√	√		√	0506
2001	Chevrolet	Prizm	Supplemental inflatable restraint		√	√			
2001	Oldsmobile	Alero	Powertrain	√	√	√	√	√	0493
2001	Oldsmobile	Alero	Body Control Module	√	√	√		√	0633 0525
2001	Oldsmobile	Alero	Radio	√	√	√	√	√	0675
2001	Oldsmobile	Alero	Instrument panel cluster				√		
2001	Oldsmobile	Alero	Remote function actuation		√	√	√	√	
2001	Oldsmobile	Alero	Chassis	√	√	√	√	√	0506
2001	Oldsmobile	Aurora	Powertrain	√	√	√	√	√	
2001	Oldsmobile	Aurora	CD changer		√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604 0628 0630 0667 0573 0574 0575 0576 0577 0694 0695 0578 0579 0636 0573 0553 0603
2001	Oldsmobile	Aurora	Memory seat module		√	√	√	√	
2001	Oldsmobile	Aurora	Supplemental inflatable restraint		√	√	√		
2001	Oldsmobile	Aurora	Remote function actuation		√	√	√	√	
2001	Oldsmobile	Aurora	Onstar	√	√	√	√		0683

2001	Oldsmobile	Aurora	Vehicle theft deterrent		√	√			0677
2001	Oldsmobile	Aurora	Rear integration module		√	√	√	√	
2001	Oldsmobile	Aurora	DRP/ABS/TIM		√	√	√	√	0506
2001	Oldsmobile	Intrigue	Powertrain	√	√	√	√	√	
2001	Oldsmobile	Intrigue	Body Control Module		√	√	√	√	0662 0690
2001	Oldsmobile	Intrigue	Onstar	√	√	√	√		0683
2001	Oldsmobile	Intrigue	Supplemental inflatable restraint		√	√	√		0515
2001	Oldsmobile	Intrigue	Chassis		√	√	√	√	0704
2001	Pontiac	Bonneville	Powertrain	√	√	√	√	√	0493
2001	Pontiac	Bonneville	Dash integration module				√	√	0714 0573 0574 0575 0576 0577 0694 0695 0578 0579 0636 0572
2001	Pontiac	Bonneville	Instrument panel cluster				√		
2001	Pontiac	Bonneville	CD changer		√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604
2001	Pontiac	Bonneville	Instrument panel module		√	√	√	√	0630 0667
2001	Pontiac	Bonneville	Onstar	√	√	√	√		0683
2001	Pontiac	Bonneville	Supplemental inflatable restraint		√	√			
2001	Pontiac	Bonneville	Vehicle theft deterrent		√	√	√	√	0677
2001	Pontiac	Bonneville	Climate control panel	√	√	√	√	√	0683
2001	Pontiac	Bonneville	Remote function actuation		√	√	√	√	0714 0573 0574 0575 0576 0577 0694 0695 0578 0579 0636 0572
2001	Pontiac	Bonneville	Rear integration module	√	√	√	√	√	0678
2001	Pontiac	Bonneville	DRP/ABS/TIM		√	√	√	√	0506
2001	Pontiac	FireBird	Powertrain	√	√	√	√	√	0493
2001	Pontiac	FireBird	Instrument panel cluster		√	√	√	√	0682
2001	Pontiac	FireBird	Supplemental inflatable restraint		√	√	√	√	0682
2001	Pontiac	FireBird	Chassis		√	√	√	√	0506
2001	Pontiac	Grand Am	Powertrain	√	√	√	√	√	0493
2001	Pontiac	Grand Am	Body Control Module	√	√	√		√	0633 0525
2001	Pontiac	Grand Am	Radio	√	√	√	√	√	0675
2001	Pontiac	Grand Am	Instrument panel cluster				√		
2001	Pontiac	Grand Am	Remote function actuation		√	√	√	√	
2001	Pontiac	Grand Am	Chassis	√	√	√	√	√	0506
2001	Pontiac	Grand Prix	Powertrain	√	√	√	√	√	0493
2001	Pontiac	Grand Prix	Vehicle theft deterrent		√	√	√		
2001	Pontiac	Grand Prix	Onstar	√	√	√	√		0683
2001	Pontiac	Grand Prix	Supplemental inflatable restraint		√	√	√		
2001	Pontiac	Sunfire	Powertrain	√	√	√	√	√	
2001	Pontiac	Sunfire	Radio				√		
2001	Pontiac	Sunfire	Body Control Module	√	√	√	√	√	0633 0525 0675

2001	Pontiac	Sunfire	Chassis	√	√	√	√	√	0506
2001	Cadillac	Incomplete	Powertrain	√	√	√	√	√	0493
2001	Cadillac	Incomplete	Amplifier (delco)		√	√	√	√	0664 0618 0619 0628 0650 0586 0630 0667 0671 0578 0579 0525
2001	Cadillac	Incomplete	Rear integration module				√		
2001	Cadillac	Incomplete	Remote function actuation		√	√		√	
2001	Cadillac	Incomplete	Dash integration module		√	√			0604 0605
2001	Cadillac	Incomplete	Vehicle theft deterrent		√	√			0691
2001	Cadillac	Incomplete	Driver door module	√	√	√	√	√	
2001	Cadillac	Incomplete	Driver door switch	√	√	√	√		
2001	Cadillac	Incomplete	Passenger door module	√	√	√	√	√	0664 0618 0619 0628 0650 0586 0630 0667 0671 0578 0579 0525
2001	Cadillac	Incomplete	Rear climate control panel		√	√	√	√	
2001	Cadillac	Incomplete	Onstar	√	√	√	√	√	0683
2001	Cadillac	Incomplete	Left mid door module	√	√	√	√	√	
2001	Cadillac	Incomplete	Left rear door module	√	√	√	√	√	
2001	Cadillac	Incomplete	Right mid door module	√	√	√	√	√	
2001	Cadillac	Incomplete	Right rear door module	√	√	√	√	√	
2001	Cadillac	Incomplete	DRP/ABS/TCS		√	√	√	√	
2001	Chevrolet	Astro - 2WD	Powertrain	√	√	√	√	√	0638
2001	Chevrolet	Astro - 2WD	Supplemental inflatable restraint		√	√	√		
2001	Chevrolet	Astro - 2WD	Body Control Module		√	√	√	√	
2001	Chevrolet	Astro - 2WD	Instrument panel cluster					√	
2001	Chevrolet	Astro - 2WD	4WAL 3 sensor		√	√	√	√	
2001	Chevrolet	Astro - 4WD	Powertrain	√	√	√	√	√	0638
2001	Chevrolet	Astro - 4WD	Supplemental inflatable restraint		√	√	√		
2001	Chevrolet	Astro - 4WD	Body Control Module		√	√	√	√	
2001	Chevrolet	Astro - 4WD	Instrument panel cluster					√	
2001	Chevrolet	Astro - 4WD	4WAL 3 sensor		√	√	√	√	
2001	Chevrolet	Blazer - 2WD	Powertrain	√	√	√	√	√	0638
2001	Chevrolet	Blazer - 2WD	Supplemental inflatable restraint		√	√	√		
2001	Chevrolet	Blazer - 2WD	Body Control Module		√	√	√	√	
2001	Chevrolet	Blazer - 2WD	Onstar	√	√	√	√	√	0683
2001	Chevrolet	Blazer - 2WD	4WAL 3 sensor		√	√	√	√	
2001	Chevrolet	Blazer - 4WD	Powertrain	√	√	√	√	√	0638
2001	Chevrolet	Blazer - 4WD	Supplemental inflatable restraint		√	√	√		
2001	Chevrolet	Blazer - 4WD	Body Control Module		√	√	√	√	
2001	Chevrolet	Blazer - 4WD	Onstar	√	√	√	√	√	0683
2001	Chevrolet	Blazer - 4WD	4WAL 3 sensor		√	√	√	√	
2001	Chevrolet	Blazer - 4WD - RHD	Powertrain	√	√	√	√	√	0638

2001	Chevrolet	Blazer - 4WD - RHD	Supplemental inflatable restraint		√	√	√		
2001	Chevrolet	Blazer - 4WD - RHD	Body Control Module		√	√	√	√	
2001	Chevrolet	Blazer - 4WD - RHD	Onstar	√	√	√	√	√	0683
2001	Chevrolet	Blazer - 4WD - RHD	4WAL 3 sensor		√	√	√	√	
2001	Chevrolet	C Cab/Chassis HD (GMT)	Powertrain	√	√	√	√	√	0571
2001	Chevrolet	C Cab/Chassis HD (GMT)	Supplemental inflatable restraint		√	√	√		
2001	Chevrolet	C Cab/Chassis HD (GMT)	Passlock		√	√	√	√	
2001	Chevrolet	C Cab/Chassis HD (GMT)	Onstar	√	√	√	√	√	0683
2001	Chevrolet	C Cab/Chassis HD (GMT)	RTD (autoride) / EVO		√	√	√	√	
2001	Chevrolet	C Cab/Chassis HD (GMT)	4WAL 3 sensor		√	√	√	√	
2001	Chevrolet	C Silverado - 2WD	Powertrain	√	√	√	√	√	0638
2001	Chevrolet	C Silverado - 2WD	Supplemental inflatable restraint		√	√	√		
2001	Chevrolet	C Silverado - 2WD	Passlock		√	√	√	√	
2001	Chevrolet	C Silverado - 2WD	Onstar	√	√	√	√		0683
2001	Chevrolet	C Silverado - 2WD	RTD (autoride) / EVO		√	√	√	√	
2001	Chevrolet	C Silverado - 2WD	4WAL 3 sensor		√	√	√	√	
2001	Chevrolet	Express (CNG)	Powertrain	√	√	√	√	√	
2001	Chevrolet	Express (CNG)	Supplemental inflatable restraint		√	√	√		
2001	Chevrolet	Express (CNG)	Immobilizer		√	√	√	√	0706 0707 0708 0709 0710 0524
2001	Chevrolet	Express - 2WD	Powertrain	√	√	√	√	√	0638
2001	Chevrolet	Express - 2WD	Supplemental inflatable restraint		√	√	√		
2001	Chevrolet	Express - 2WD	Immobilizer		√	√	√	√	0706 0707 0708 0709 0710 0524
2001	Chevrolet	K Silverado - 4WD	Powertrain	√	√	√	√	√	0638
2001	Chevrolet	K Silverado - 4WD	Supplemental inflatable restraint		√	√	√		
2001	Chevrolet	K Silverado - 4WD	Passlock		√	√	√	√	
2001	Chevrolet	K Silverado - 4WD	Onstar	√	√	√	√		0683
2001	Chevrolet	K Silverado - 4WD	RTD (autoride) / EVO		√	√	√	√	
2001	Chevrolet	K Silverado - 4WD	4WAL 3 sensor		√	√	√	√	
2001	Chevrolet	S10 Pickup - 2WD	Powertrain	√	√	√	√	√	0638
2001	Chevrolet	S10 Pickup - 2WD	Supplemental inflatable restraint		√	√	√		
2001	Chevrolet	S10 Pickup - 2WD	Body Control Module		√	√	√	√	
2001	Chevrolet	S10 Pickup - 2WD	Onstar	√	√	√	√	√	0683
2001	Chevrolet	S10 Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
2001	Chevrolet	S10 Pickup - 4WD	Powertrain	√	√	√	√	√	0638
2001	Chevrolet	S10 Pickup - 4WD	Supplemental inflatable restraint		√	√	√		
2001	Chevrolet	S10 Pickup - 4WD	Body Control Module		√	√	√	√	
2001	Chevrolet	S10 Pickup - 4WD	Onstar	√	√	√	√	√	0683
2001	Chevrolet	S10 Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
2001	Chevrolet	Suburban - 2WD	Powertrain	√	√	√	√	√	0571
2001	Chevrolet	Suburban - 2WD	Supplemental inflatable restraint		√	√	√		

2001	Chevrolet	Suburban - 2WD	Passlock		√	√	√	√	
2001	Chevrolet	Suburban - 2WD	Onstar	√	√	√	√	√	0683
2001	Chevrolet	Suburban - 2WD	RTD (autoride) / EVO		√	√	√	√	
2001	Chevrolet	Suburban - 2WD	4WAL 3 sensor		√	√	√	√	
2001	Chevrolet	Suburban - 4WD	Powertrain	√	√	√	√	√	0571
2001	Chevrolet	Suburban - 4WD	Supplemental inflatable restraint		√	√	√		
2001	Chevrolet	Suburban - 4WD	Passlock		√	√	√	√	
2001	Chevrolet	Suburban - 4WD	Onstar	√	√	√	√	√	0683
2001	Chevrolet	Suburban - 4WD	RTD (autoride) / EVO		√	√	√	√	
2001	Chevrolet	Suburban - 4WD	4WAL 3 sensor		√	√	√	√	
2001	Chevrolet	Tahoe - 2WD	Powertrain	√	√	√	√	√	
2001	Chevrolet	Tahoe - 2WD	Supplemental inflatable restraint		√	√	√		
2001	Chevrolet	Tahoe - 2WD	Passlock		√	√	√	√	
2001	Chevrolet	Tahoe - 2WD	Onstar	√	√	√	√	√	0683
2001	Chevrolet	Tahoe - 2WD	RTD (autoride) / EVO		√	√	√	√	
2001	Chevrolet	Tahoe - 2WD	4WAL 3 sensor		√	√	√	√	
2001	Chevrolet	Tahoe - 4WD	Powertrain	√	√	√	√	√	
2001	Chevrolet	Tahoe - 4WD	Supplemental inflatable restraint		√	√	√		
2001	Chevrolet	Tahoe - 4WD	Passlock		√	√	√	√	
2001	Chevrolet	Tahoe - 4WD	Onstar	√	√	√	√	√	0683
2001	Chevrolet	Tahoe - 4WD	RTD (autoride) / EVO		√	√	√	√	
2001	Chevrolet	Tahoe - 4WD	4WAL 3 sensor		√	√	√	√	
2001	Chevrolet	Tracker - 2WD	Powertrain	√	√	√	√	√	
2001	Chevrolet	Tracker - 2WD	Supplemental inflatable restraint		√	√	√		
2001	Chevrolet	Tracker - 2WD	Chassis	√	√	√	√	√	0506
2001	Chevrolet	Tracker - 4WD	Powertrain	√	√	√	√	√	
2001	Chevrolet	Tracker - 4WD	Supplemental inflatable restraint		√	√	√		
2001	Chevrolet	Tracker - 4WD	Chassis	√	√	√	√	√	0506
2001	Chevrolet	Venture	Powertrain	√	√	√	√	√	0493
2001	Chevrolet	Venture	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524
2001	Chevrolet	Venture	Vehicle theft deterrent		√	√	√		
2001	Chevrolet	Venture	Radio				√		
2001	Chevrolet	Venture	Supplemental inflatable restraint		√	√	√		
2001	Chevrolet	Venture	Onstar	√	√	√	√		0683
2001	Chevrolet	Venture	Chassis	√	√	√	√	√	0506
2001	Chevrolet	Venture Ext.	Powertrain	√	√	√	√	√	0493
2001	Chevrolet	Venture Ext.	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524
2001	Chevrolet	Venture Ext.	Vehicle theft deterrent		√	√	√		
2001	Chevrolet	Venture Ext.	Radio				√		
2001	Chevrolet	Venture Ext.	Supplemental inflatable restraint		√	√	√		

2001	Chevrolet	Venture Ext.	Onstar	√	√	√	√		0683
2001	Chevrolet	Venture Ext.	Chassis	√	√	√	√	√	0506
2001	Chevrolet	Others	Radio				√		
2001	Chevrolet	Others	Onstar	√	√	√	√		0683
2001	Chevrolet	Others	Supplemental inflatable restraint		√	√	√		
2001	Chevrolet	Others	Vehicle theft deterrent		√	√	√		
2001	Chevrolet	Others	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524
2001	Chevrolet	Others	Chassis	√	√	√	√	√	0506
2001	GMC truck	Envoy - 4WD	Powertrain	√	√	√	√	√	0493
2001	GMC truck	Envoy - 4WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Envoy - 4WD	Body Control Module		√	√	√	√	
2001	GMC truck	Envoy - 4WD	Onstar	√	√	√	√	√	0683
2001	GMC truck	Envoy - 4WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	GMC C Cab/Chassis HD (GMT 400)	Powertrain	√	√	√	√	√	0571
2001	GMC truck	GMC C Cab/Chassis HD (GMT 400)	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	GMC C Cab/Chassis HD (GMT 400)	Passlock		√	√	√	√	
2001	GMC truck	GMC C Cab/Chassis HD (GMT 400)	Onstar	√	√	√	√	√	0683
2001	GMC truck	GMC C Cab/Chassis HD (GMT 400)	RTD (autoride) / EVO		√	√	√	√	
2001	GMC truck	GMC C Cab/Chassis HD (GMT 400)	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	GMC C-Series - 2WD	Powertrain	√	√	√	√	√	0638
2001	GMC truck	GMC C-Series - 2WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	GMC C-Series - 2WD	Passlock		√	√	√	√	
2001	GMC truck	GMC C-Series - 2WD	Onstar	√	√	√	√	√	0683
2001	GMC truck	GMC C-Series - 2WD	RTD (autoride) / EVO		√	√	√	√	
2001	GMC truck	GMC C-Series - 2WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	GMC K Sierra - 4WD	Powertrain	√	√	√	√	√	0638
2001	GMC truck	GMC K Sierra - 4WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	GMC K Sierra - 4WD	Passlock		√	√	√	√	
2001	GMC truck	GMC K Sierra - 4WD	Onstar	√	√	√	√	√	0683
2001	GMC truck	GMC K Sierra - 4WD	RTD (autoride) / EVO		√	√	√	√	
2001	GMC truck	GMC K Sierra - 4WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	0638
2001	GMC truck	Jimmy - 2WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Jimmy - 2WD	Body Control Module		√	√	√	√	
2001	GMC truck	Jimmy - 2WD	Onstar	√	√	√	√	√	0683

2001	GMC truck	Jimmy - 2WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	0638
2001	GMC truck	Jimmy - 4WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Jimmy - 4WD	Body Control Module		√	√	√	√	
2001	GMC truck	Jimmy - 4WD	Onstar	√	√	√	√	√	0683
2001	GMC truck	Jimmy - 4WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	Safari - 2WD	Powertrain	√	√	√	√	√	0638
2001	GMC truck	Safari - 2WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Safari - 2WD	Body Control Module		√	√	√	√	
2001	GMC truck	Safari - 2WD	Instrument panel cluster					√	
2001	GMC truck	Safari - 2WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	Safari - 4WD	Powertrain	√	√	√	√	√	0638
2001	GMC truck	Safari - 4WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Safari - 4WD	Body Control Module		√	√	√	√	
2001	GMC truck	Safari - 4WD	Instrument panel cluster					√	
2001	GMC truck	Safari - 4WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	Savana - 2WD	Powertrain	√	√	√	√	√	0638
2001	GMC truck	Savana - 2WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Savana - 2WD	Immobilizer		√	√	√	√	0706 0707 0708 0709 0710 0524
2001	GMC truck	Sonoma Pickup - 2WD	Powertrain	√	√	√	√	√	0638
2001	GMC truck	Sonoma Pickup - 2WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Sonoma Pickup - 2WD	Body Control Module		√	√	√	√	
2001	GMC truck	Sonoma Pickup - 2WD	Onstar	√	√	√	√	√	0683
2001	GMC truck	Sonoma Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	Sonoma Pickup - 4WD	Powertrain	√	√	√	√	√	0638
2001	GMC truck	Sonoma Pickup - 4WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Sonoma Pickup - 4WD	Body Control Module		√	√	√	√	
2001	GMC truck	Sonoma Pickup - 4WD	Onstar	√	√	√	√	√	0683
2001	GMC truck	Sonoma Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	Yukon - 2WD	Powertrain	√	√	√	√	√	
2001	GMC truck	Yukon - 2WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Yukon - 2WD	Passlock		√	√	√	√	
2001	GMC truck	Yukon - 2WD	Onstar	√	√	√	√	√	0683
2001	GMC truck	Yukon - 2WD	RTD (autoride) / EVO		√	√	√	√	
2001	GMC truck	Yukon - 2WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	Yukon - 4WD	Powertrain	√	√	√	√	√	
2001	GMC truck	Yukon - 4WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Yukon - 4WD	Passlock		√	√	√	√	
2001	GMC truck	Yukon - 4WD	Onstar	√	√	√	√	√	0683
2001	GMC truck	Yukon - 4WD	RTD (autoride) / EVO		√	√	√	√	

2001	GMC truck	Yukon - 4WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	Yukon Denali	Powertrain	√	√	√	√	√	
2001	GMC truck	Yukon Denali	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Yukon Denali	Passlock		√	√	√	√	
2001	GMC truck	Yukon Denali	Onstar	√	√	√	√	√	0683
2001	GMC truck	Yukon Denali	RTD (autoride) / EVO		√	√	√	√	
2001	GMC truck	Yukon Denali	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	Yukon XL - 2WD	Powertrain	√	√	√	√	√	0571
2001	GMC truck	Yukon XL - 2WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Yukon XL - 2WD	Passlock		√	√	√	√	
2001	GMC truck	Yukon XL - 2WD	Onstar	√	√	√	√	√	0683
2001	GMC truck	Yukon XL - 2WD	RTD (autoride) / EVO		√	√	√	√	
2001	GMC truck	Yukon XL - 2WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	Yukon XL - 4WD	Powertrain	√	√	√	√	√	0571
2001	GMC truck	Yukon XL - 4WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Yukon XL - 4WD	Passlock		√	√	√	√	
2001	GMC truck	Yukon XL - 4WD	Onstar	√	√	√	√	√	0683
2001	GMC truck	Yukon XL - 4WD	RTD (autoride) / EVO		√	√	√	√	
2001	GMC truck	Yukon XL - 4WD	4WAL 3 sensor		√	√	√	√	
2001	Oldsmobile	Bravada	Powertrain	√	√	√	√	√	0638
2001	Oldsmobile	Bravada	Supplemental inflatable restraint		√	√	√		
2001	Oldsmobile	Bravada	Body Control Module		√	√	√	√	
2001	Oldsmobile	Bravada	Onstar	√	√	√	√	√	0683
2001	Oldsmobile	Bravada	4WAL 3 sensor		√	√	√	√	
2001	Oldsmobile	Others	Radio				√		
2001	Oldsmobile	Others	Memory seat module		√	√	√	√	
2001	Oldsmobile	Others	Onstar	√	√	√	√		0683
2001	Oldsmobile	Others	Supplemental inflatable restraint		√	√	√		
2001	Oldsmobile	Others	Vehicle theft deterrent		√	√	√		
2001	Oldsmobile	Others	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524
2001	Oldsmobile	Others	Chassis	√	√	√	√	√	0506
2001	Pontiac	Aztek - AWD	Powertrain	√	√	√	√	√	0493
2001	Pontiac	Aztek - AWD	Body Control Module		√	√	√	√	0637
2001	Pontiac	Aztek - AWD	Onstar	√	√	√	√		0683
2001	Pontiac	Aztek - AWD	Supplemental inflatable restraint		√	√			
2001	Pontiac	Aztek - AWD	Vehicle theft deterrent	√	√	√	√	√	0637
2001	Pontiac	Aztek - AWD	Chassis		√	√	√	√	0506
2001	Pontiac	Aztek - FWD	Powertrain	√	√	√	√	√	0493
2001	Pontiac	Aztek - FWD	Body Control Module		√	√	√	√	0637
2001	Pontiac	Aztek - FWD	Onstar	√	√	√	√		0683



2001	Pontiac	Aztek - FWD	Supplemental inflatable restraint		√	√			
2001	Pontiac	Aztek - FWD	Vehicle theft deterrent	√	√	√	√	√	0637
2001	Pontiac	Aztek - FWD	Chassis		√	√	√	√	0506
2001	Pontiac	Montana	Powertrain	√	√	√	√	√	0493
2001	Pontiac	Montana	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524
2001	Pontiac	Montana	Vehicle theft deterrent		√	√	√		
2001	Pontiac	Montana	Radio				√		
2001	Pontiac	Montana	Supplemental inflatable restraint		√	√	√		
2001	Pontiac	Montana	Onstar	√	√	√	√		0683
2001	Pontiac	Montana	Chassis	√	√	√	√	√	0506
2001	Pontiac	Montana Ext.	Powertrain	√	√	√	√	√	0493
2001	Pontiac	Montana Ext.	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524
2001	Pontiac	Montana Ext.	Vehicle theft deterrent		√	√	√		
2001	Pontiac	Montana Ext.	Radio				√		
2001	Pontiac	Montana Ext.	Supplemental inflatable restraint		√	√	√		
2001	Pontiac	Montana Ext.	Onstar	√	√	√	√		0683
2001	Pontiac	Montana Ext.	Chassis	√	√	√	√	√	0506
2001	Pontiac	Others	Radio				√		
2001	Pontiac	Others	Onstar	√	√	√	√		0683
2001	Pontiac	Others	Supplemental inflatable restraint		√	√	√		
2001	Pontiac	Others	Vehicle theft deterrent		√	√	√		
2001	Pontiac	Others	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524
2001	Pontiac	Others	Chassis	√	√	√	√	√	0506
2001	Pontiac	Others	Powertrain	√	√	√	√	√	
2000	Buick	Century	Powertrain	√	√	√	√	√	0493
2000	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0690
2000	Buick	Century	Onstar	√	√	√	√		0683
2000	Buick	Century	Supplemental inflatable restraint		√	√	√		0515
2000	Buick	Century	Chassis	√	√	√		√	0506
2000	Buick	Lesabre	Powertrain	√	√	√	√	√	0493
2000	Buick	Lesabre	Dash integration module		√	√	√	√	0650 0574 0576
2000	Buick	Lesabre	CD changer		√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604 0628 0604 0691
2000	Buick	Lesabre	Instrument panel module		√	√	√	√	0630 0667
2000	Buick	Lesabre	Radio						0525
2000	Buick	Lesabre	Onstar	√	√	√	√	√	0683
2000	Buick	Lesabre	Climate control panel	√	√	√	√	√	0525
2000	Buick	Lesabre	Rear integration module		√	√	√	√	

2000	Buick	Lesabre	DRP/ABS/TIM		√	√	√	√	0506
2000	Buick	Park Avenue	Powertrain	√	√	√	√	√	0493
2000	Buick	Park Avenue	Body Control Module		√	√	√	√	0614 0668 0684 0630 0531 0692
2000	Buick	Park Avenue	Onstar	√	√	√	√		0683
2000	Buick	Park Avenue	DRP/ABS/TIM		√	√	√	√	0506
2000	Buick	Regal	Powertrain	√	√	√	√	√	0493
2000	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0690
2000	Buick	Regal	Onstar	√	√	√	√		0683
2000	Buick	Regal	Supplemental inflatable restraint		√	√	√		0515
2000	Buick	Regal	Chassis	√	√	√		√	0506
2000	Cadillac	Catera	Powertrain	√	√	√	√	√	
2000	Cadillac	Catera	Body Control Module		√	√	√	√	0711 0628
2000	Cadillac	Catera	Radio		√	√	√	√	0671 0578 0579 0525
2000	Cadillac	Catera	Cellular telephone						0684
2000	Cadillac	Catera	Onstar	√	√	√	√		0683
2000	Cadillac	Catera	ABS		√	√	√	√	
2000	Cadillac	Deville	Powertrain	√	√	√	√	√	
2000	Cadillac	Deville	Dash integration module		√	√	√	√	0614 0664 0615 0619 0696 0712 0586 0630
2000	Cadillac	Deville	Cellular telephone		√	√	√	√	0628 0651 0650 0614 0671 0578 0579 0525
2000	Cadillac	Deville	Instrument panel cluster				√		
2000	Cadillac	Deville	Memory seat module		√	√	√	√	
2000	Cadillac	Deville	Amplifier (delco)		√	√	√	√	0618
2000	Cadillac	Deville	Onstar	√	√	√	√		0683
2000	Cadillac	Deville	Left rear door module	√	√	√	√	√	
2000	Cadillac	Deville	Passenger door module	√	√	√	√	√	
2000	Cadillac	Deville	Right rear door module	√	√	√	√	√	
2000	Cadillac	Deville	Driver door module	√	√	√	√	√	
2000	Cadillac	Deville	Driver door switch	√	√	√	√		
2000	Cadillac	Deville	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2000	Cadillac	Deville	eed sensitive steering		√	√	√		
2000	Cadillac	Deville	CVRSS/ALC		√	√	√	√	
2000	Cadillac	DHS	Powertrain	√	√	√	√	√	
2000	Cadillac	DHS	Dash integration module		√	√	√	√	0614 0664 0615 0619 0696 0712 0586 0630
2000	Cadillac	DHS	Amplifier (bose)		√	√	√	√	0713
2000	Cadillac	DHS	Cellular telephone		√	√	√	√	0628 0651 0650 0614 0671 0578 0579 0525
2000	Cadillac	DHS	Instrument panel cluster		√	√	√	√	0608 0578 0579 0658
2000	Cadillac	DHS	Memory seat module		√	√	√	√	0618

2000	Cadillac	DHS	Onstar	√	√	√	√		0683
2000	Cadillac	DHS	Left rear door module	√	√	√	√	√	
2000	Cadillac	DHS	Passenger door module	√	√	√	√	√	
2000	Cadillac	DHS	Right rear door module	√	√	√	√	√	
2000	Cadillac	DHS	Driver door module	√	√	√	√	√	
2000	Cadillac	DHS	Driver door switch	√	√	√	√		
2000	Cadillac	DHS	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2000	Cadillac	DHS	eed sensitive steering		√	√	√		
2000	Cadillac	DHS	CVRSS/ALC		√	√	√	√	
2000	Cadillac	DTS	Powertrain	√	√	√	√	√	
2000	Cadillac	DTS	Dash integration module		√	√	√	√	0614 0664 0615 0619 0696 0712 0586 0630
2000	Cadillac	DTS	Amplifier (bose)		√	√	√	√	0713
2000	Cadillac	DTS	Cellular telephone		√	√	√	√	0628 0651 0650 0614 0671 0578 0579 0525
2000	Cadillac	DTS	Instrument panel cluster		√	√	√	√	0608 0578 0579 0658
2000	Cadillac	DTS	Memory seat module		√	√	√	√	0618
2000	Cadillac	DTS	Onstar	√	√	√	√		0683
2000	Cadillac	DTS	Left rear door module	√	√	√	√	√	
2000	Cadillac	DTS	Passenger door module	√	√	√	√	√	
2000	Cadillac	DTS	Right rear door module	√	√	√	√	√	
2000	Cadillac	DTS	Driver door module	√	√	√	√	√	
2000	Cadillac	DTS	Driver door switch	√	√	√	√		
2000	Cadillac	DTS	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2000	Cadillac	DTS	eed sensitive steering		√	√	√		
2000	Cadillac	DTS	CVRSS/ALC		√	√	√	√	
2000	Cadillac	Eldorado	Powertrain	√	√	√	√	√	
2000	Cadillac	Eldorado	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
2000	Cadillac	Eldorado	Radio		√	√	√	√	0702 0525
2000	Cadillac	Eldorado	Onstar	√	√	√	√		0683
2000	Cadillac	Eldorado	Delco/Xtool ABS/TCS		√	√		√	0641 0506
2000	Cadillac	Eldorado	Magna steer		√	√			
2000	Cadillac	Seville	Powertrain	√	√	√	√	√	
2000	Cadillac	Seville	Amplifier (bose)		√	√	√	√	0614 0664 0615 0617 0686 0687 0685 0712
2000	Cadillac	Seville	Cellular telephone		√	√	√	√	0628 0651 0650 0614 0671 0578 0579 0525
2000	Cadillac	Seville	Instrument panel cluster		√	√	√	√	0608 0578 0579 0658
2000	Cadillac	Seville	Amplifier (delco)		√	√	√	√	
2000	Cadillac	Seville	Memory seat module		√	√	√	√	0674
2000	Cadillac	Seville	Onstar	√	√	√	√		0683

2000	Cadillac	Seville	Dash integration module	√	√	√	√	√	0604 0605
2000	Cadillac	Seville	DRP/ABS/TCS/VSES/BLW		√	√	√	√	
2000	Cadillac	Seville	eed sensitive steering		√	√	√	√	
2000	Cadillac	Seville	CVRSS/ALC		√	√	√	√	
2000	Chevrolet	Alero (export)	Powertrain	√	√	√	√	√	0493
2000	Chevrolet	Alero (export)	Body Control Module	√	√	√	√	√	0691
2000	Chevrolet	Alero (export)	Chassis		√	√	√	√	
2000	Chevrolet	Camaro	Powertrain	√	√	√	√	√	0493
2000	Chevrolet	Camaro	Instrument panel cluster		√	√	√	√	0682
2000	Chevrolet	Camaro	Supplemental inflatable restraint		√	√	√	√	0682
2000	Chevrolet	Camaro	Chassis		√	√	√	√	0506
2000	Chevrolet	Cavalier	Powertrain	√	√	√	√	√	
2000	Chevrolet	Cavalier	Radio				√		
2000	Chevrolet	Cavalier	Body Control Module	√	√	√	√	√	0633 0525 0675
2000	Chevrolet	Cavalier	Chassis	√	√	√	√	√	0506
2000	Chevrolet	Cavalier (CNG)	Powertrain	√	√	√	√	√	
2000	Chevrolet	Cavalier (CNG)	Radio				√		
2000	Chevrolet	Cavalier (CNG)	Body Control Module	√	√	√	√	√	0633 0525 0675
2000	Chevrolet	Cavalier (CNG)	Chassis	√	√	√	√	√	0506
2000	Chevrolet	Corvette	Powertrain	√	√	√	√	√	
2000	Chevrolet	Corvette	Body Control Module		√	√	√	√	0688
2000	Chevrolet	Corvette	Supplemental inflatable restraint		√	√	√	√	0688
2000	Chevrolet	Corvette	Abs/tcs/magna steer	√	√	√	√	√	
2000	Chevrolet	Corvette	RTD	√	√	√	√	√	
2000	Chevrolet	Impala	Powertrain	√	√	√	√	√	0493
2000	Chevrolet	Impala	Body Control Module		√	√	√	√	0515 0628 0614 0580 0572 0573 0574
2000	Chevrolet	Impala	Radio				√		
2000	Chevrolet	Impala	Onstar	√	√	√	√	√	0683
2000	Chevrolet	Impala	Chassis	√	√	√		√	0506
2000	Chevrolet	Lumina	Powertrain	√	√	√	√	√	0493
2000	Chevrolet	Malibu	Powertrain	√	√	√	√	√	0493
2000	Chevrolet	Malibu	Body Control Module	√	√	√	√	√	
2000	Chevrolet	Malibu	Chassis		√	√	√	√	
2000	Chevrolet	Monte Carlo	Powertrain	√	√	√	√	√	0493
2000	Chevrolet	Monte Carlo	Body Control Module		√	√	√	√	0515 0628 0614 0580 0572 0573 0574
2000	Chevrolet	Monte Carlo	Radio				√		
2000	Chevrolet	Monte Carlo	Onstar	√	√	√	√	√	0683
2000	Chevrolet	Monte Carlo	Chassis	√	√	√		√	0506
2000	Chevrolet	Prizm	Supplemental inflatable restraint		√	√			
2000	Oldsmobile	Alero	Powertrain	√	√	√	√	√	0493

2000	Oldsmobile	Alero	Body Control Module	√	√	√	√	√	
2000	Oldsmobile	Alero	Entertainment & comfort bus		√	√	√	√	
2000	Oldsmobile	Alero	Chassis		√	√	√	√	
2000	Oldsmobile	Intrigue	Powertrain	√	√	√	√	√	
2000	Oldsmobile	Intrigue	Body Control Module		√	√	√	√	0662 0690
2000	Oldsmobile	Intrigue	Onstar	√	√	√	√		0683
2000	Oldsmobile	Intrigue	Supplemental inflatable restraint		√	√	√		0515
2000	Oldsmobile	Intrigue	Chassis		√	√	√	√	0715
2000	Pontiac	Bonneville	Powertrain	√	√	√	√	√	0493
2000	Pontiac	Bonneville	Dash integration module				√	√	0714 0573 0574 0575 0576 0577 0694 0695 0578 0579 0636 0572
2000	Pontiac	Bonneville	Instrument panel cluster				√		
2000	Pontiac	Bonneville	CD changer		√	√	√	√	0614 0664 0615 0619 0665 0666 0618 0604 0628 0604 0691
2000	Pontiac	Bonneville	Instrument panel module		√	√	√	√	0630 0667
2000	Pontiac	Bonneville	Onstar	√	√	√	√	√	0683
2000	Pontiac	Bonneville	Climate control panel	√	√	√	√	√	0683
2000	Pontiac	Bonneville	Rear integration module	√	√	√	√	√	0678
2000	Pontiac	Bonneville	DRP/ABS/TIM		√	√	√	√	0506
2000	Pontiac	FireBird	Powertrain	√	√	√	√	√	0493
2000	Pontiac	FireBird	Instrument panel cluster		√	√	√	√	0682
2000	Pontiac	FireBird	Supplemental inflatable restraint		√	√	√	√	0682
2000	Pontiac	FireBird	Chassis		√	√	√	√	0506
2000	Pontiac	Grand Am	Powertrain	√	√	√	√	√	0493
2000	Pontiac	Grand Am	Body Control Module	√	√	√	√	√	
2000	Pontiac	Grand Am	Instrument panel cluster		√	√	√		
2000	Pontiac	Grand Am	Chassis		√	√	√	√	
2000	Pontiac	Grand Prix	Powertrain	√	√	√	√	√	0493
2000	Pontiac	Grand Prix	Vehicle theft deterrent		√	√	√		0692
2000	Pontiac	Grand Prix	Onstar	√	√	√	√		0683
2000	Pontiac	Grand Prix	Supplemental inflatable restraint		√	√	√		
2000	Pontiac	Sunfire	Powertrain	√	√	√	√	√	
2000	Pontiac	Sunfire	Radio				√		
2000	Pontiac	Sunfire	Body Control Module	√	√	√	√	√	0633 0525 0675
2000	Pontiac	Sunfire	Chassis	√	√	√	√	√	0506
2000	Cadillac	Escalade - AWD	Powertrain	√	√	√	√	√	
2000	Cadillac	Escalade - AWD	Passlock		√	√	√	√	
2000	Cadillac	Escalade - AWD	Memory seat module		√	√			
2000	Cadillac	Escalade - AWD	Onstar (VS-3B)		√	√	√		
2000	Cadillac	Escalade - AWD	Onstar		√	√	√		0683

2000	Cadillac	Escalade - AWD	Supplemental inflatable restraint		√	√	√	√	0531
2000	Cadillac	Escalade - AWD	RTD (autoride) / EVO		√	√	√	√	
2000	Cadillac	Escalade - AWD	4WAL 3 sensor		√	√	√	√	
2000	Cadillac	Hearse	Powertrain	√	√	√	√	√	0493
2000	Cadillac	Hearse	Amplifier (delco)		√	√	√	√	0664 0618 0619 0604 0628 0650 0586 0630 0667 0671 0578 0579 0525 0605 0691 0692
2000	Cadillac	Hearse	Rear integration module				√		
2000	Cadillac	Hearse	Driver door module	√	√	√	√	√	
2000	Cadillac	Hearse	Passenger door module	√	√	√	√		
2000	Cadillac	Hearse	Driver door switch	√	√	√	√		
2000	Cadillac	Hearse	DRP/ABS/TCS		√	√	√	√	
2000	Cadillac	Limousine	Powertrain	√	√	√	√	√	0493
2000	Cadillac	Limousine	Amplifier (delco)		√	√	√	√	0664 0618 0619 0604 0628 0650 0586 0630 0667 0671 0578 0579 0525 0605 0691 0692
2000	Cadillac	Limousine	Rear climate control panel		√	√	√	√	
2000	Cadillac	Limousine	Onstar	√	√	√	√	√	0683
2000	Cadillac	Limousine	Driver door module	√	√	√	√	√	
2000	Cadillac	Limousine	Passenger door module	√	√	√	√		
2000	Cadillac	Limousine	Driver door switch	√	√	√	√		
2000	Cadillac	Limousine	Left mid door module	√	√	√	√	√	
2000	Cadillac	Limousine	Left rear door module	√	√	√	√	√	
2000	Cadillac	Limousine	Right mid door module	√	√	√	√	√	
2000	Cadillac	Limousine	Right rear door module	√	√	√	√	√	
2000	Cadillac	Limousine	DRP/ABS/TCS		√	√	√	√	
2000	Chevrolet	Astro - 2WD	Powertrain	√	√	√	√	√	
2000	Chevrolet	Astro - 2WD	Body Control Module		√	√	√	√	
2000	Chevrolet	Astro - 2WD	Instrument panel cluster					√	
2000	Chevrolet	Astro - 2WD	4WAL 3 sensor		√	√	√	√	
2000	Chevrolet	Astro - 4WD	Powertrain	√	√	√	√	√	
2000	Chevrolet	Astro - 4WD	Body Control Module		√	√	√	√	
2000	Chevrolet	Astro - 4WD	Instrument panel cluster					√	
2000	Chevrolet	Astro - 4WD	4WAL 3 sensor		√	√	√	√	
2000	Chevrolet	Blazer - 2WD	Powertrain	√	√	√	√	√	
2000	Chevrolet	Blazer - 2WD	Body Control Module		√	√	√	√	
2000	Chevrolet	Blazer - 2WD	Onstar	√	√	√	√	√	0683
2000	Chevrolet	Blazer - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0531
2000	Chevrolet	Blazer - 2WD	4WAL 3 sensor		√	√	√	√	
2000	Chevrolet	Blazer - 4WD	Powertrain	√	√	√	√	√	

2000	Chevrolet	Blazer - 4WD	Body Control Module		√	√	√	√	
2000	Chevrolet	Blazer - 4WD	Onstar	√	√	√	√		0683
2000	Chevrolet	Blazer - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0531
2000	Chevrolet	Blazer - 4WD	4WAL 3 sensor		√	√	√	√	
2000	Chevrolet	Blazer - 4WD - RHD	Powertrain	√	√	√	√	√	
2000	Chevrolet	Blazer - 4WD - RHD	Body Control Module		√	√	√	√	
2000	Chevrolet	Blazer - 4WD - RHD	Onstar	√	√	√	√		0683
2000	Chevrolet	Blazer - 4WD - RHD	Supplemental inflatable restraint	√	√	√	√	√	0531
2000	Chevrolet	Blazer - 4WD - RHD	4WAL 3 sensor		√	√	√	√	
2000	Chevrolet	C Pickup - 2WD	Powertrain	√	√	√	√	√	
2000	Chevrolet	C Pickup - 2WD	Passlock		√	√	√	√	
2000	Chevrolet	C Pickup - 2WD	Memory seat module		√	√			
2000	Chevrolet	C Pickup - 2WD	Onstar (VS-3B)		√	√	√		
2000	Chevrolet	C Pickup - 2WD	Onstar		√	√	√		0683
2000	Chevrolet	C Pickup - 2WD	Supplemental inflatable restraint						0531
2000	Chevrolet	C Pickup - 2WD	RTD (autoride) / EVO		√	√	√	√	
2000	Chevrolet	C Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
2000	Chevrolet	C Pickup - 2WD (CNG)	Powertrain	√	√	√	√	√	
2000	Chevrolet	C Pickup - 2WD (CNG)	Passlock		√	√	√	√	
2000	Chevrolet	C Pickup - 2WD (CNG)	Memory seat module		√	√			
2000	Chevrolet	C Pickup - 2WD (CNG)	Onstar (VS-3B)		√	√	√		
2000	Chevrolet	C Pickup - 2WD (CNG)	Onstar		√	√	√		0683
2000	Chevrolet	C Pickup - 2WD (CNG)	Supplemental inflatable restraint						0531
2000	Chevrolet	C Pickup - 2WD (CNG)	RTD (autoride) / EVO		√	√	√	√	
2000	Chevrolet	C Pickup - 2WD (CNG)	4WAL 3 sensor		√	√	√	√	
2000	Chevrolet	C Silverado - 2WD	Powertrain	√	√	√	√	√	
2000	Chevrolet	C Silverado - 2WD	Passlock		√	√	√	√	
2000	Chevrolet	C Silverado - 2WD	Memory seat module		√	√			
2000	Chevrolet	C Silverado - 2WD	Onstar (VS-3B)		√	√	√		
2000	Chevrolet	C Silverado - 2WD	Onstar		√	√	√		0683
2000	Chevrolet	C Silverado - 2WD	Supplemental inflatable restraint						0531
2000	Chevrolet	C Silverado - 2WD	RTD (autoride) / EVO		√	√	√	√	
2000	Chevrolet	C Silverado - 2WD	4WAL 3 sensor		√	√	√	√	
2000	Chevrolet	Express - 2WD	Powertrain	√	√	√	√	√	
2000	Chevrolet	Express - 2WD	Immobilizer		√	√	√	√	0706 0707 0708 0709
2000	Chevrolet	K Pickup - 4WD	Powertrain	√	√	√	√	√	
2000	Chevrolet	K Pickup - 4WD	Passlock		√	√	√	√	
2000	Chevrolet	K Pickup - 4WD	Memory seat module		√	√			
2000	Chevrolet	K Pickup - 4WD	Onstar (VS-3B)		√	√	√		
2000	Chevrolet	K Pickup - 4WD	Onstar		√	√	√		0683
2000	Chevrolet	K Pickup - 4WD	Supplemental inflatable restraint						0531

2000	Chevrolet	K Pickup - 4WD	RTD (autoride) / EVO		√	√	√	√	
2000	Chevrolet	K Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
2000	Chevrolet	K Pickup - 4WD (CNG)	Powertrain	√	√	√	√	√	
2000	Chevrolet	K Pickup - 4WD (CNG)	Passlock		√	√	√	√	
2000	Chevrolet	K Pickup - 4WD (CNG)	Memory seat module		√	√			
2000	Chevrolet	K Pickup - 4WD (CNG)	Onstar (VS-3B)		√	√	√		
2000	Chevrolet	K Pickup - 4WD (CNG)	Onstar		√	√	√		0683
2000	Chevrolet	K Pickup - 4WD (CNG)	Supplemental inflatable restraint						0531
2000	Chevrolet	K Pickup - 4WD (CNG)	RTD (autoride) / EVO		√	√	√	√	
2000	Chevrolet	K Pickup - 4WD (CNG)	4WAL 3 sensor		√	√	√	√	
2000	Chevrolet	K Silverado - 4WD	Powertrain	√	√	√	√	√	
2000	Chevrolet	K Silverado - 4WD	Passlock		√	√	√	√	
2000	Chevrolet	K Silverado - 4WD	Memory seat module		√	√			
2000	Chevrolet	K Silverado - 4WD	Onstar (VS-3B)		√	√	√		
2000	Chevrolet	K Silverado - 4WD	Onstar		√	√	√		0683
2000	Chevrolet	K Silverado - 4WD	Supplemental inflatable restraint						0531
2000	Chevrolet	K Silverado - 4WD	RTD (autoride) / EVO		√	√	√	√	
2000	Chevrolet	K Silverado - 4WD	4WAL 3 sensor		√	√	√	√	
2000	Chevrolet	S10 Pickup - 2WD	Powertrain	√	√	√	√	√	
2000	Chevrolet	S10 Pickup - 2WD	Body Control Module		√	√	√	√	
2000	Chevrolet	S10 Pickup - 2WD	Onstar	√	√	√	√		0683
2000	Chevrolet	S10 Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0531
2000	Chevrolet	S10 Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
2000	Chevrolet	S10 Pickup - 4WD	Powertrain	√	√	√	√	√	
2000	Chevrolet	S10 Pickup - 4WD	Body Control Module		√	√	√	√	
2000	Chevrolet	S10 Pickup - 4WD	Onstar	√	√	√	√		0683
2000	Chevrolet	S10 Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0531
2000	Chevrolet	S10 Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
2000	Chevrolet	Suburban - 2WD	Powertrain	√	√	√	√	√	
2000	Chevrolet	Suburban - 2WD	Passlock		√	√	√	√	
2000	Chevrolet	Suburban - 2WD	Memory seat module		√	√			
2000	Chevrolet	Suburban - 2WD	Onstar (VS-3B)		√	√	√		
2000	Chevrolet	Suburban - 2WD	Onstar		√	√	√		0683
2000	Chevrolet	Suburban - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2000	Chevrolet	Suburban - 2WD	RTD (autoride) / EVO		√	√	√	√	
2000	Chevrolet	Suburban - 2WD	4WAL 3 sensor		√	√	√	√	
2000	Chevrolet	Suburban - 4WD	Powertrain	√	√	√	√	√	
2000	Chevrolet	Suburban - 4WD	Passlock		√	√	√	√	
2000	Chevrolet	Suburban - 4WD	Memory seat module		√	√			
2000	Chevrolet	Suburban - 4WD	Onstar (VS-3B)		√	√	√		
2000	Chevrolet	Suburban - 4WD	Onstar		√	√	√		0683



2000	Chevrolet	Suburban - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2000	Chevrolet	Suburban - 4WD	RTD (autoride) / EVO		√	√	√	√	
2000	Chevrolet	Suburban - 4WD	4WAL 3 sensor		√	√	√	√	
2000	Chevrolet	Tahoe - 2WD	Powertrain	√	√	√	√	√	
2000	Chevrolet	Tahoe - 2WD	Passlock		√	√	√	√	
2000	Chevrolet	Tahoe - 2WD	Memory seat module		√	√			
2000	Chevrolet	Tahoe - 2WD	Onstar (VS-3B)		√	√	√		
2000	Chevrolet	Tahoe - 2WD	Onstar		√	√	√		0683
2000	Chevrolet	Tahoe - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2000	Chevrolet	Tahoe - 2WD	RTD (autoride) / EVO		√	√	√	√	
2000	Chevrolet	Tahoe - 2WD	4WAL 3 sensor		√	√	√	√	
2000	Chevrolet	Tahoe - 4WD	Powertrain	√	√	√	√	√	
2000	Chevrolet	Tahoe - 4WD	Passlock		√	√	√	√	
2000	Chevrolet	Tahoe - 4WD	Memory seat module		√	√			
2000	Chevrolet	Tahoe - 4WD	Onstar (VS-3B)		√	√	√		
2000	Chevrolet	Tahoe - 4WD	Onstar		√	√	√		0683
2000	Chevrolet	Tahoe - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2000	Chevrolet	Tahoe - 4WD	RTD (autoride) / EVO		√	√	√	√	
2000	Chevrolet	Tahoe - 4WD	4WAL 3 sensor		√	√	√	√	
2000	Chevrolet	Tahoe Limited	Powertrain	√	√	√	√	√	
2000	Chevrolet	Tahoe Limited	Passlock		√	√	√	√	
2000	Chevrolet	Tahoe Limited	Memory seat module		√	√			
2000	Chevrolet	Tahoe Limited	Onstar (VS-3B)		√	√	√		
2000	Chevrolet	Tahoe Limited	Onstar		√	√	√		0683
2000	Chevrolet	Tahoe Limited	Supplemental inflatable restraint		√	√	√	√	0531
2000	Chevrolet	Tahoe Limited	RTD (autoride) / EVO		√	√	√	√	
2000	Chevrolet	Tahoe Limited	4WAL 3 sensor		√	√	√	√	
2000	Chevrolet	Tahoe Z71	Powertrain	√	√	√	√	√	
2000	Chevrolet	Tahoe Z71	Passlock		√	√	√	√	
2000	Chevrolet	Tahoe Z71	Memory seat module		√	√			
2000	Chevrolet	Tahoe Z71	Onstar (VS-3B)		√	√	√		
2000	Chevrolet	Tahoe Z71	Onstar		√	√	√		0683
2000	Chevrolet	Tahoe Z71	Supplemental inflatable restraint		√	√	√	√	0531
2000	Chevrolet	Tahoe Z71	RTD (autoride) / EVO		√	√	√	√	
2000	Chevrolet	Tahoe Z71	4WAL 3 sensor		√	√	√	√	
2000	Chevrolet	Tracker - 2WD	Powertrain	√	√	√	√	√	
2000	Chevrolet	Tracker - 2WD	Supplemental inflatable restraint		√	√	√		
2000	Chevrolet	Tracker - 2WD	Body Control Module		√	√	√	√	
2000	Chevrolet	Tracker - 2WD	Chassis	√	√	√	√	√	0506
2000	Chevrolet	Tracker - 2WD	4WAL 3 sensor	√	√	√	√	√	0506
2000	Chevrolet	Tracker - 4WD	Powertrain	√	√	√	√	√	

2000	Chevrolet	Tracker - 4WD	Supplemental inflatable restraint		√	√	√		
2000	Chevrolet	Tracker - 4WD	Body Control Module		√	√	√	√	
2000	Chevrolet	Tracker - 4WD	Chassis	√	√	√	√	√	0506
2000	Chevrolet	Tracker - 4WD	4WAL 3 sensor	√	√	√	√	√	0506
2000	Chevrolet	Trans ort (Export)	Powertrain	√	√	√	√	√	0493
2000	Chevrolet	Trans ort (Export)	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524 0692
2000	Chevrolet	Trans ort (Export)	Supplemental inflatable restraint		√	√	√		
2000	Chevrolet	Trans ort (Export)	Radio				√		
2000	Chevrolet	Trans ort (Export)	Onstar	√	√	√	√		0683
2000	Chevrolet	Trans ort (Export)	Chassis	√	√	√	√	√	0506
2000	Chevrolet	Venture	Powertrain	√	√	√	√	√	0493
2000	Chevrolet	Venture	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524 0692
2000	Chevrolet	Venture	Supplemental inflatable restraint		√	√	√		
2000	Chevrolet	Venture	Radio				√		
2000	Chevrolet	Venture	Onstar	√	√	√	√	√	0683
2000	Chevrolet	Venture	Chassis	√	√	√	√	√	0506
2000	Chevrolet	Others	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524 0692
2000	Chevrolet	Others	Radio				√		
2000	Chevrolet	Others	Onstar	√	√	√	√		0683
2000	GMC truck	Envoy - 4WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Envoy - 4WD	Body Control Module		√	√	√	√	
2000	GMC truck	Envoy - 4WD	Onstar	√	√	√	√		0683
2000	GMC truck	Envoy - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0531
2000	GMC truck	Envoy - 4WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	GMC C Pickup - 2WD	Powertrain	√	√	√	√	√	
2000	GMC truck	GMC C Pickup - 2WD	Passlock		√	√	√	√	
2000	GMC truck	GMC C Pickup - 2WD	Memory seat module		√	√			
2000	GMC truck	GMC C Pickup - 2WD	Onstar (VS-3B)		√	√	√		
2000	GMC truck	GMC C Pickup - 2WD	Onstar		√	√	√		0683
2000	GMC truck	GMC C Pickup - 2WD	Supplemental inflatable restraint						0531
2000	GMC truck	GMC C Pickup - 2WD	RTD (autoride) / EVO		√	√	√	√	
2000	GMC truck	GMC C Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	GMC C Pickup - 2WD	Powertrain	√	√	√	√	√	
2000	GMC truck	GMC C Pickup - 2WD	Passlock		√	√	√	√	
2000	GMC truck	GMC C Pickup - 2WD	Memory seat module		√	√			
2000	GMC truck	GMC C Pickup - 2WD	Onstar (VS-3B)		√	√	√		
2000	GMC truck	GMC C Pickup - 2WD	Onstar		√	√	√		0683
2000	GMC truck	GMC C Pickup - 2WD	Supplemental inflatable restraint						0531
2000	GMC truck	GMC C Pickup - 2WD	RTD (autoride) / EVO		√	√	√	√	

2000	GMC truck	GMC C Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	GMC C-Series - 2WD	Powertrain	√	√	√	√	√	
2000	GMC truck	GMC C-Series - 2WD	Passlock		√	√	√	√	
2000	GMC truck	GMC C-Series - 2WD	Memory seat module		√	√			
2000	GMC truck	GMC C-Series - 2WD	Onstar (VS-3B)		√	√	√		
2000	GMC truck	GMC C-Series - 2WD	Onstar		√	√	√		0683
2000	GMC truck	GMC C-Series - 2WD	Supplemental inflatable restraint						0531
2000	GMC truck	GMC C-Series - 2WD	RTD (autoride) / EVO		√	√	√	√	
2000	GMC truck	GMC C-Series - 2WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	GMC K Pickup - 4WD	Powertrain	√	√	√	√	√	
2000	GMC truck	GMC K Pickup - 4WD	Passlock		√	√	√	√	
2000	GMC truck	GMC K Pickup - 4WD	Memory seat module		√	√			
2000	GMC truck	GMC K Pickup - 4WD	Onstar (VS-3B)		√	√	√		
2000	GMC truck	GMC K Pickup - 4WD	Onstar		√	√	√		0683
2000	GMC truck	GMC K Pickup - 4WD	Supplemental inflatable restraint						0531
2000	GMC truck	GMC K Pickup - 4WD	RTD (autoride) / EVO		√	√	√	√	
2000	GMC truck	GMC K Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	GMC K Pickup - 4WD	Powertrain	√	√	√	√	√	
2000	GMC truck	GMC K Pickup - 4WD	Passlock		√	√	√	√	
2000	GMC truck	GMC K Pickup - 4WD	Memory seat module		√	√			
2000	GMC truck	GMC K Pickup - 4WD	Onstar (VS-3B)		√	√	√		
2000	GMC truck	GMC K Pickup - 4WD	Onstar		√	√	√		0683
2000	GMC truck	GMC K Pickup - 4WD	Supplemental inflatable restraint						0531
2000	GMC truck	GMC K Pickup - 4WD	RTD (autoride) / EVO		√	√	√	√	
2000	GMC truck	GMC K Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	GMC K Sierra - 4WD	Powertrain	√	√	√	√	√	
2000	GMC truck	GMC K Sierra - 4WD	Passlock		√	√	√	√	
2000	GMC truck	GMC K Sierra - 4WD	Memory seat module		√	√			
2000	GMC truck	GMC K Sierra - 4WD	Onstar (VS-3B)		√	√	√		
2000	GMC truck	GMC K Sierra - 4WD	Onstar		√	√	√		0683
2000	GMC truck	GMC K Sierra - 4WD	Supplemental inflatable restraint						0531
2000	GMC truck	GMC K Sierra - 4WD	RTD (autoride) / EVO		√	√	√	√	
2000	GMC truck	GMC K Sierra - 4WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Jimmy - 2WD	Body Control Module		√	√	√	√	
2000	GMC truck	Jimmy - 2WD	Onstar	√	√	√	√		0683
2000	GMC truck	Jimmy - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0531
2000	GMC truck	Jimmy - 2WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Jimmy - 4WD	Body Control Module		√	√	√	√	
2000	GMC truck	Jimmy - 4WD	Onstar	√	√	√	√		0683

2000	GMC truck	Jimmy - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0531
2000	GMC truck	Jimmy - 4WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	Safari - 2WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Safari - 2WD	Body Control Module		√	√	√	√	
2000	GMC truck	Safari - 2WD	Instrument panel cluster					√	
2000	GMC truck	Safari - 2WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	Safari - 4WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Safari - 4WD	Body Control Module		√	√	√	√	
2000	GMC truck	Safari - 4WD	Instrument panel cluster					√	
2000	GMC truck	Safari - 4WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	Savana - 2WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Savana - 2WD	Immobilizer		√	√	√	√	0706 0707 0708 0709
2000	GMC truck	Sonoma Pickup - 2WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Sonoma Pickup - 2WD	Body Control Module		√	√	√	√	
2000	GMC truck	Sonoma Pickup - 2WD	Onstar	√	√	√	√		0683
2000	GMC truck	Sonoma Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0531
2000	GMC truck	Sonoma Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	Sonoma Pickup - 4WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Sonoma Pickup - 4WD	Body Control Module		√	√	√	√	
2000	GMC truck	Sonoma Pickup - 4WD	Onstar	√	√	√	√		0683
2000	GMC truck	Sonoma Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0531
2000	GMC truck	Sonoma Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	Yukon - 2WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Yukon - 2WD	Passlock		√	√	√	√	
2000	GMC truck	Yukon - 2WD	Memory seat module		√	√			
2000	GMC truck	Yukon - 2WD	Onstar (VS-3B)		√	√	√		
2000	GMC truck	Yukon - 2WD	Onstar		√	√	√		0683
2000	GMC truck	Yukon - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2000	GMC truck	Yukon - 2WD	RTD (autoride) / EVO		√	√	√	√	
2000	GMC truck	Yukon - 2WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	Yukon - 4WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Yukon - 4WD	Passlock		√	√	√	√	
2000	GMC truck	Yukon - 4WD	Memory seat module		√	√			
2000	GMC truck	Yukon - 4WD	Onstar (VS-3B)		√	√	√		
2000	GMC truck	Yukon - 4WD	Onstar		√	√	√		0683
2000	GMC truck	Yukon - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2000	GMC truck	Yukon - 4WD	RTD (autoride) / EVO		√	√	√	√	
2000	GMC truck	Yukon - 4WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	Yukon Denali	Powertrain	√	√	√	√	√	
2000	GMC truck	Yukon Denali	Passlock		√	√	√	√	
2000	GMC truck	Yukon Denali	Memory seat module		√	√			

2000	GMC truck	Yukon Denali	Onstar (VS-3B)		√	√	√		
2000	GMC truck	Yukon Denali	Onstar		√	√	√		0683
2000	GMC truck	Yukon Denali	Supplemental inflatable restraint		√	√	√	√	0531
2000	GMC truck	Yukon Denali	RTD (autoride) / EVO		√	√	√	√	
2000	GMC truck	Yukon Denali	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	Yukon XL - 2WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Yukon XL - 2WD	Passlock		√	√	√	√	
2000	GMC truck	Yukon XL - 2WD	Memory seat module		√	√			
2000	GMC truck	Yukon XL - 2WD	Onstar (VS-3B)		√	√	√		
2000	GMC truck	Yukon XL - 2WD	Onstar		√	√	√		0683
2000	GMC truck	Yukon XL - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2000	GMC truck	Yukon XL - 2WD	RTD (autoride) / EVO		√	√	√	√	
2000	GMC truck	Yukon XL - 2WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	Yukon XL - 4WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Yukon XL - 4WD	Passlock		√	√	√	√	
2000	GMC truck	Yukon XL - 4WD	Memory seat module		√	√			
2000	GMC truck	Yukon XL - 4WD	Onstar (VS-3B)		√	√	√		
2000	GMC truck	Yukon XL - 4WD	Onstar		√	√	√		0683
2000	GMC truck	Yukon XL - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2000	GMC truck	Yukon XL - 4WD	RTD (autoride) / EVO		√	√	√	√	
2000	GMC truck	Yukon XL - 4WD	4WAL 3 sensor		√	√	√	√	
2000	Isuzu	S/T Isuzu - 2WD	Powertrain	√	√	√	√	√	
2000	Isuzu	S/T Isuzu - 2WD	Body Control Module		√	√	√	√	
2000	Isuzu	S/T Isuzu - 2WD	Onstar	√	√	√	√		0683
2000	Isuzu	S/T Isuzu - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0531
2000	Isuzu	S/T Isuzu - 2WD	4WAL 3 sensor		√	√	√	√	
2000	Isuzu	S/T Isuzu - 4WD	Powertrain	√	√	√	√	√	
2000	Isuzu	S/T Isuzu - 4WD	Body Control Module		√	√	√	√	
2000	Isuzu	S/T Isuzu - 4WD	Onstar	√	√	√	√		0683
2000	Isuzu	S/T Isuzu - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0531
2000	Isuzu	S/T Isuzu - 4WD	4WAL 3 sensor		√	√	√	√	
2000	Oldsmobile	Bravada	Powertrain	√	√	√	√	√	
2000	Oldsmobile	Bravada	Body Control Module		√	√	√	√	
2000	Oldsmobile	Bravada	Onstar	√	√	√	√		0683
2000	Oldsmobile	Bravada	Supplemental inflatable restraint	√	√	√	√	√	0531
2000	Oldsmobile	Bravada	4WAL 3 sensor		√	√	√	√	
2000	Oldsmobile	Silhouette	Powertrain	√	√	√	√	√	0493
2000	Oldsmobile	Silhouette	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524 0692
2000	Oldsmobile	Silhouette	Supplemental inflatable restraint		√	√	√		
2000	Oldsmobile	Silhouette	Radio				√		

2000	Oldsmobile	Silhouette	Onstar	√	√	√	√		0683
2000	Oldsmobile	Silhouette	Chassis	√	√	√	√	√	0506
2000	Oldsmobile	Silhouette Ext.	Powertrain	√	√	√	√	√	0493
2000	Oldsmobile	Silhouette Ext.	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524 0692
2000	Oldsmobile	Silhouette Ext.	Supplemental inflatable restraint		√	√	√		
2000	Oldsmobile	Silhouette Ext.	Radio				√		
2000	Oldsmobile	Silhouette Ext.	Onstar	√	√	√	√		0683
2000	Oldsmobile	Silhouette Ext.	Chassis	√	√	√	√	√	0506
2000	Oldsmobile	Others	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524 0692
2000	Oldsmobile	Others	Radio				√		
2000	Oldsmobile	Others	Onstar	√	√	√	√		0683
2000	Pontiac	Montana	Powertrain	√	√	√	√	√	0493
2000	Pontiac	Montana	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524 0692
2000	Pontiac	Montana	Supplemental inflatable restraint		√	√	√		
2000	Pontiac	Montana	Radio				√		
2000	Pontiac	Montana	Onstar	√	√	√	√	√	0683
2000	Pontiac	Montana	Chassis	√	√	√	√	√	0506
2000	Pontiac	Others	Driver information center		√	√	√	√	0682 0628 0573 0574 0572 0524 0692
2000	Pontiac	Others	Radio				√		
2000	Pontiac	Others	Onstar	√	√	√	√		0683
2000	Pontiac	Others	Powertrain	√	√	√	√	√	
1999	Buick	Century	Powertrain	√	√	√	√	√	0493
1999	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0690 0628
1999	Buick	Century	Onstar		√	√	√		0683
1999	Buick	Century	Onstar (VS-3B)		√	√	√		
1999	Buick	Century	Supplemental inflatable restraint		√	√	√		0515
1999	Buick	Century	Chassis	√	√	√		√	0506
1999	Buick	Lesabre	Powertrain	√	√	√	√	√	0493
1999	Buick	Lesabre	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1999	Buick	Lesabre	Onstar		√	√	√		0683
1999	Buick	Lesabre	Onstar (VS-3B)		√	√	√		
1999	Buick	Lesabre	Remote function actuation		√	√	√	√	0711 0716 0717 0718 0719 0720 0721 0722
1999	Buick	Lesabre	ABS		√	√		√	0641 0506
1999	Buick	Park Avenue	Powertrain	√	√	√	√	√	0493
1999	Buick	Park Avenue	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692

1999	Buick	Park Avenue	Onstar		√	√	√		0683
1999	Buick	Park Avenue	Onstar (VS-3B)		√	√	√		
1999	Buick	Park Avenue	ABS		√	√		√	0641 0506
1999	Buick	Regal	Powertrain	√	√	√	√	√	0493
1999	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0690 0628
1999	Buick	Regal	Onstar		√	√	√		0683
1999	Buick	Regal	Onstar (VS-3B)		√	√	√		
1999	Buick	Regal	Supplemental inflatable restraint		√	√	√	√	0515
1999	Buick	Regal	Chassis	√	√	√		√	0506
1999	Buick	Riviera	Powertrain	√	√	√	√	√	0493
1999	Buick	Riviera	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1999	Buick	Riviera	Onstar		√	√	√		0683
1999	Buick	Riviera	Onstar (VS-3B)		√	√	√		
1999	Cadillac	Catera	Powertrain	√	√	√	√	√	0723
1999	Cadillac	Catera	Remote function actuator		√	√	√		
1999	Cadillac	Catera	Body Control Module				√		0628
1999	Cadillac	Catera	BCM/RFA		√	√		√	0711
1999	Cadillac	Catera	Radio		√	√	√	√	0671 0525
1999	Cadillac	Catera	Onstar (VS-3B)		√	√	√		
1999	Cadillac	Catera	Cellular telephone		√	√	√		0684
1999	Cadillac	Catera	Onstar		√	√	√	√	0683
1999	Cadillac	Catera	ABS		√	√	√	√	
1999	Cadillac	Deville	Powertrain	√	√	√	√	√	0723
1999	Cadillac	Deville	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1999	Cadillac	Deville	Radio		√	√	√	√	0702 0525
1999	Cadillac	Deville	Onstar		√	√	√		0683
1999	Cadillac	Deville	Onstar (VS-3B)		√	√	√		
1999	Cadillac	Deville	Cellular telephone		√	√	√	√	0697 0698 0699 0700 0701 0682
1999	Cadillac	Deville	Delco/Xtool ABS/TCS		√	√		√	0641 0506
1999	Cadillac	Deville	Magna steer		√	√			
1999	Cadillac	Deville	ABS/TCS BLW ICCS2		√	√		√	0641 0506
1999	Cadillac	Eldorado	Powertrain	√	√	√	√	√	0723
1999	Cadillac	Eldorado	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1999	Cadillac	Eldorado	Radio		√	√	√	√	0702 0525
1999	Cadillac	Eldorado	Onstar		√	√	√		0683
1999	Cadillac	Eldorado	Onstar (VS-3B)		√	√	√		
1999	Cadillac	Eldorado	Delco/Xtool ABS/TCS		√	√		√	0641 0506
1999	Cadillac	Eldorado	Magna steer		√	√			

1999	Cadillac	Seville	Powertrain	√	√	√	√	√	0723
1999	Cadillac	Seville	Cellular telephone		√	√	√		
1999	Cadillac	Seville	Amplifier (bose)		√	√	√	√	0614 0664 0615 0617 0686 0687 0604 0685 0628 0651 0725 0586 0671 0671 0587 0525
1999	Cadillac	Seville	Memory seat module		√	√	√	√	
1999	Cadillac	Seville	Remote function actuation		√	√	√		0727
1999	Cadillac	Seville	Onstar		√	√	√		0683
1999	Cadillac	Seville	Onstar (VS-3B)		√	√	√	√	0614 0664 0615 0617 0686 0687 0604 0685 0628 0651 0725 0586 0671 0671 0587 0525
1999	Cadillac	Seville	ABS/TCS BLW ICCS2		√	√		√	0641 0506
1999	Chevrolet	Camaro	Powertrain	√	√	√	√	√	0493
1999	Chevrolet	Camaro	Instrument panel cluster				√	√	0682
1999	Chevrolet	Camaro	Entertainment & comfort bus		√	√			
1999	Chevrolet	Camaro	Supplemental inflatable restraint		√	√	√	√	0682
1999	Chevrolet	Camaro	Chassis		√	√	√	√	0506
1999	Chevrolet	Cavalier	Powertrain	√	√	√	√	√	
1999	Chevrolet	Cavalier (CNG)	Powertrain	√	√	√	√	√	
1999	Chevrolet	Corvette	Powertrain	√	√	√	√	√	
1999	Chevrolet	Corvette	Body Control Module		√	√	√	√	0688 0600
1999	Chevrolet	Corvette	Left door control module					√	
1999	Chevrolet	Corvette	Supplemental inflatable restraint		√	√	√	√	0688 0600
1999	Chevrolet	Corvette	Abs/tcs/magna steer	√	√	√	√	√	
1999	Chevrolet	Corvette	CVRTD	√	√	√	√	√	
1999	Chevrolet	Lumina	Powertrain	√	√	√	√	√	0493
1999	Chevrolet	Lumina	Onstar		√	√	√		0683
1999	Chevrolet	Lumina	Onstar (VS-3B)		√	√	√		
1999	Chevrolet	Malibu	Powertrain	√	√	√	√	√	0493
1999	Chevrolet	Malibu	Body function controller		√	√	√	√	
1999	Chevrolet	Malibu	Chassis		√	√	√	√	
1999	Chevrolet	Monte Carlo	Powertrain	√	√	√	√	√	0493
1999	Chevrolet	Monte Carlo	Onstar		√	√	√		0683
1999	Chevrolet	Monte Carlo	Onstar (VS-3B)		√	√	√		
1999	Chevrolet	Prizm	Supplemental inflatable restraint		√	√	√		
1999	Oldsmobile	Alero	Powertrain	√	√	√	√	√	0493
1999	Oldsmobile	Alero	Body function controller		√	√	√	√	
1999	Oldsmobile	Alero	Vehicle theft deterrent		√	√	√	√	0691
1999	Oldsmobile	Alero	Chassis		√	√	√	√	
1999	Oldsmobile	Aurora	Powertrain	√	√	√	√	√	0724 0723



1999	Oldsmobile	Aurora	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1999	Oldsmobile	Aurora	Onstar		√	√	√		0683
1999	Oldsmobile	Aurora	Onstar (VS-3B)		√	√	√		
1999	Oldsmobile	Cutlass	Powertrain	√	√	√	√	√	0493
1999	Oldsmobile	Cutlass	Body function controller		√	√	√	√	
1999	Oldsmobile	Cutlass	Vehicle theft deterrent		√	√	√	√	0691
1999	Oldsmobile	Cutlass	Chassis		√	√	√	√	
1999	Oldsmobile	Eighty eight	Powertrain	√	√	√	√	√	0493
1999	Oldsmobile	Eighty eight	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1999	Oldsmobile	Eighty eight	Onstar		√	√	√		0683
1999	Oldsmobile	Eighty eight	Onstar (VS-3B)		√	√	√		
1999	Oldsmobile	Eighty eight	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1999	Oldsmobile	Eighty eight	ABS		√	√		√	0641 0506
1999	Oldsmobile	Intrigue	Powertrain	√	√	√	√	√	0493
1999	Oldsmobile	Intrigue	Body Control Module		√	√	√	√	0662 0690
1999	Oldsmobile	Intrigue	Chassis					√	
1999	Pontiac	Bonneville	Powertrain	√	√	√	√	√	0493
1999	Pontiac	Bonneville	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1999	Pontiac	Bonneville	Onstar		√	√	√		0683
1999	Pontiac	Bonneville	Onstar (VS-3B)		√	√	√		
1999	Pontiac	Bonneville	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1999	Pontiac	Bonneville	ABS		√	√		√	0641 0506
1999	Pontiac	FireBird	Powertrain	√	√	√	√	√	0493
1999	Pontiac	FireBird	Instrument panel cluster				√	√	0682
1999	Pontiac	FireBird	Entertainment & comfort bus		√	√			
1999	Pontiac	FireBird	Supplemental inflatable restraint		√	√	√	√	0682
1999	Pontiac	FireBird	Chassis		√	√	√	√	0506
1999	Pontiac	Grand Am	Powertrain	√	√	√	√	√	0493
1999	Pontiac	Grand Am	Body function controller		√	√	√	√	
1999	Pontiac	Grand Am	Vehicle theft deterrent		√	√	√		0691
1999	Pontiac	Grand Am	Chassis		√	√	√	√	
1999	Pontiac	Grand Prix	Powertrain	√	√	√	√	√	0493
1999	Pontiac	Grand Prix	Supplemental inflatable restraint		√	√	√		
1999	Pontiac	Sunfire	Powertrain	√	√	√	√	√	
1999	Cadillac	Escalade - AWD	Powertrain	√	√	√	√	√	
1999	Cadillac	Escalade - AWD	Passlock		√	√	√	√	
1999	Cadillac	Escalade - AWD	Onstar		√	√	√		0683

1999	Cadillac	Escalade - AWD	Onstar (VS-3B)		√	√	√	√	0683
1999	Cadillac	Escalade - AWD	Electronic variable orifice		√	√	√		
1999	Cadillac	Escalade - AWD	4WAL 3 sensor		√	√	√	√	
1999	Cadillac	Hearse	Powertrain	√	√	√	√	√	0493
1999	Cadillac	Hearse	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1999	Cadillac	Hearse	Radio						0702
1999	Cadillac	Hearse	Delco/Xtool ABS/TCS		√	√		√	0641 0506
1999	Cadillac	Limousine	Powertrain	√	√	√	√	√	0493
1999	Cadillac	Limousine	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1999	Cadillac	Limousine	Radio						0702
1999	Cadillac	Limousine	Delco/Xtool ABS/TCS		√	√		√	0641 0506
1999	Chevrolet	Astro - 2WD	Powertrain	√	√	√	√	√	
1999	Chevrolet	Astro - 2WD	Passlock		√	√	√	√	
1999	Chevrolet	Astro - 2WD	4WAL 3 sensor		√	√	√	√	
1999	Chevrolet	Astro - 4WD	Powertrain	√	√	√	√	√	
1999	Chevrolet	Astro - 4WD	Passlock		√	√	√	√	
1999	Chevrolet	Astro - 4WD	4WAL 3 sensor		√	√	√	√	
1999	Chevrolet	Blazer - 2WD	Powertrain	√	√	√	√	√	
1999	Chevrolet	Blazer - 2WD	Heating and air conditioning		√	√	√	√	
1999	Chevrolet	Blazer - 2WD	Body Control Module		√	√	√	√	
1999	Chevrolet	Blazer - 2WD	Onstar		√	√	√		0683
1999	Chevrolet	Blazer - 2WD	Onstar (VS-3B)		√	√	√	√	0683
1999	Chevrolet	Blazer - 2WD	4WAL 3 sensor		√	√	√	√	
1999	Chevrolet	Blazer - 4WD	Powertrain	√	√	√	√	√	
1999	Chevrolet	Blazer - 4WD	Heating and air conditioning		√	√	√	√	
1999	Chevrolet	Blazer - 4WD	Body Control Module		√	√	√	√	
1999	Chevrolet	Blazer - 4WD	Onstar		√	√	√		0683
1999	Chevrolet	Blazer - 4WD	Onstar (VS-3B)		√	√	√	√	0683
1999	Chevrolet	Blazer - 4WD	4WAL 3 sensor		√	√	√	√	
1999	Chevrolet	Blazer - 4WD - RHD	Powertrain	√	√	√	√	√	
1999	Chevrolet	Blazer - 4WD - RHD	Heating and air conditioning		√	√	√	√	
1999	Chevrolet	Blazer - 4WD - RHD	Body Control Module		√	√	√	√	
1999	Chevrolet	Blazer - 4WD - RHD	Onstar		√	√	√		0683
1999	Chevrolet	Blazer - 4WD - RHD	Onstar (VS-3B)		√	√	√	√	0683
1999	Chevrolet	Blazer - 4WD - RHD	4WAL 3 sensor		√	√	√	√	
1999	Chevrolet	C Pickup - 2WD	Powertrain	√	√	√	√	√	
1999	Chevrolet	C Pickup - 2WD	Passlock		√	√	√	√	
1999	Chevrolet	C Pickup - 2WD	Onstar		√	√	√		0683
1999	Chevrolet	C Pickup - 2WD	Onstar (VS-3B)		√	√	√		
1999	Chevrolet	C Pickup - 2WD	Electronic variable orifice		√	√	√		

1999	Chevrolet	C Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
1999	Chevrolet	C Pickup - 2WD (CNG)	Powertrain	√	√	√	√	√	
1999	Chevrolet	C Pickup - 2WD (CNG)	Passlock		√	√	√	√	
1999	Chevrolet	C Pickup - 2WD (CNG)	Onstar		√	√	√		0683
1999	Chevrolet	C Pickup - 2WD (CNG)	Onstar (VS-3B)		√	√	√		
1999	Chevrolet	C Pickup - 2WD (CNG)	Electronic variable orifice		√	√	√		
1999	Chevrolet	C Pickup - 2WD (CNG)	4WAL 3 sensor		√	√	√	√	
1999	Chevrolet	Express - 2WD	Powertrain	√	√	√	√	√	
1999	Chevrolet	Express - 2WD	Passlock		√	√	√	√	
1999	Chevrolet	Express - 2WD	Immobilizer		√	√	√	√	0706 0707 0708 0709
1999	Chevrolet	K Pickup - 4WD	Powertrain	√	√	√	√	√	
1999	Chevrolet	K Pickup - 4WD	Passlock		√	√	√	√	
1999	Chevrolet	K Pickup - 4WD	Onstar		√	√	√		0683
1999	Chevrolet	K Pickup - 4WD	Onstar (VS-3B)		√	√	√		
1999	Chevrolet	K Pickup - 4WD	Electronic variable orifice		√	√	√		
1999	Chevrolet	K Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
1999	Chevrolet	K Pickup - 4WD (CNG)	Powertrain	√	√	√	√	√	
1999	Chevrolet	K Pickup - 4WD (CNG)	Passlock		√	√	√	√	
1999	Chevrolet	K Pickup - 4WD (CNG)	Onstar		√	√	√		0683
1999	Chevrolet	K Pickup - 4WD (CNG)	Onstar (VS-3B)		√	√	√		
1999	Chevrolet	K Pickup - 4WD (CNG)	Electronic variable orifice		√	√	√		
1999	Chevrolet	K Pickup - 4WD (CNG)	4WAL 3 sensor		√	√	√	√	
1999	Chevrolet	K Silverado - 4WD	Powertrain	√	√	√	√	√	
1999	Chevrolet	K Silverado - 4WD	Passlock		√	√	√	√	
1999	Chevrolet	K Silverado - 4WD	Onstar		√	√	√		0683
1999	Chevrolet	K Silverado - 4WD	Onstar (VS-3B)		√	√	√		
1999	Chevrolet	K Silverado - 4WD	Electronic variable orifice		√	√	√		
1999	Chevrolet	K Silverado - 4WD	4WAL 3 sensor		√	√	√	√	
1999	Chevrolet	S10 Pickup - 2WD	Powertrain	√	√	√	√	√	
1999	Chevrolet	S10 Pickup - 2WD	Heating and air conditioning		√	√	√	√	
1999	Chevrolet	S10 Pickup - 2WD	Body Control Module		√	√	√	√	
1999	Chevrolet	S10 Pickup - 2WD	Onstar		√	√	√		0683
1999	Chevrolet	S10 Pickup - 2WD	Onstar (VS-3B)		√	√	√	√	0683
1999	Chevrolet	S10 Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
1999	Chevrolet	S10 Pickup - 4WD	Powertrain	√	√	√	√	√	
1999	Chevrolet	S10 Pickup - 4WD	Heating and air conditioning		√	√	√	√	
1999	Chevrolet	S10 Pickup - 4WD	Body Control Module		√	√	√	√	
1999	Chevrolet	S10 Pickup - 4WD	Onstar		√	√	√		0683
1999	Chevrolet	S10 Pickup - 4WD	Onstar (VS-3B)		√	√	√	√	0683
1999	Chevrolet	S10 Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
1999	Chevrolet	Suburban - 2WD	Powertrain	√	√	√	√	√	

1999	Chevrolet	Suburban - 2WD	Passlock		√	√	√	√	
1999	Chevrolet	Suburban - 2WD	Onstar		√	√	√		0683
1999	Chevrolet	Suburban - 2WD	Onstar (VS-3B)		√	√	√	√	0683
1999	Chevrolet	Suburban - 2WD	Electronic variable orifice		√	√	√		
1999	Chevrolet	Suburban - 2WD	4WAL 3 sensor	√	√	√	√	√	
1999	Chevrolet	Suburban - 4WD	Powertrain	√	√	√	√	√	
1999	Chevrolet	Suburban - 4WD	Passlock		√	√	√	√	
1999	Chevrolet	Suburban - 4WD	Onstar		√	√	√		0683
1999	Chevrolet	Suburban - 4WD	Onstar (VS-3B)		√	√	√	√	0683
1999	Chevrolet	Suburban - 4WD	Electronic variable orifice		√	√	√		
1999	Chevrolet	Suburban - 4WD	4WAL 3 sensor		√	√	√	√	
1999	Chevrolet	Suburban 4WD - RHD	Powertrain	√	√	√	√	√	
1999	Chevrolet	Suburban 4WD - RHD	Passlock		√	√	√	√	
1999	Chevrolet	Suburban 4WD - RHD	Onstar		√	√	√		0683
1999	Chevrolet	Suburban 4WD - RHD	Onstar (VS-3B)		√	√	√		
1999	Chevrolet	Suburban 4WD - RHD	Electronic variable orifice		√	√	√		
1999	Chevrolet	Suburban 4WD - RHD	4WAL 3 sensor		√	√	√	√	
1999	Chevrolet	Tahoe - 2WD	Powertrain	√	√	√	√	√	
1999	Chevrolet	Tahoe - 2WD	Passlock		√	√	√	√	
1999	Chevrolet	Tahoe - 2WD	Onstar		√	√	√		0683
1999	Chevrolet	Tahoe - 2WD	Onstar (VS-3B)		√	√	√	√	0683
1999	Chevrolet	Tahoe - 2WD	Electronic variable orifice		√	√	√		
1999	Chevrolet	Tahoe - 2WD	4WAL 3 sensor		√	√	√	√	
1999	Chevrolet	Tahoe - 4WD	Powertrain	√	√	√	√	√	
1999	Chevrolet	Tahoe - 4WD	Passlock		√	√	√	√	
1999	Chevrolet	Tahoe - 4WD	Onstar		√	√	√		0683
1999	Chevrolet	Tahoe - 4WD	Onstar (VS-3B)		√	√	√	√	0683
1999	Chevrolet	Tahoe - 4WD	Electronic variable orifice		√	√	√		
1999	Chevrolet	Tahoe - 4WD	4WAL 3 sensor		√	√	√	√	
1999	Chevrolet	Tahoe 4WD - RHD	Powertrain	√	√	√	√	√	
1999	Chevrolet	Tahoe 4WD - RHD	Passlock		√	√	√	√	
1999	Chevrolet	Tahoe 4WD - RHD	Onstar		√	√	√		0683
1999	Chevrolet	Tahoe 4WD - RHD	Onstar (VS-3B)		√	√	√		
1999	Chevrolet	Tahoe 4WD - RHD	Electronic variable orifice		√	√	√		
1999	Chevrolet	Tahoe 4WD - RHD	4WAL 3 sensor		√	√	√	√	
1999	Chevrolet	Tracker - 2WD	Powertrain	√	√	√	√	√	
1999	Chevrolet	Tracker - 2WD	Supplemental inflatable restraint		√	√	√		
1999	Chevrolet	Tracker - 2WD	Chassis	√	√	√	√	√	0506
1999	Chevrolet	Tracker - 4WD	Powertrain	√	√	√	√	√	
1999	Chevrolet	Tracker - 4WD	Supplemental inflatable restraint		√	√	√		
1999	Chevrolet	Tracker - 4WD	Chassis	√	√	√	√	√	0506

1999	Chevrolet	Venture	Powertrain	√	√	√	√	√	0493
1999	Chevrolet	Venture	Entertainment & comfort bus		√	√	√		
1999	Chevrolet	Venture	Onstar		√	√	√		0683
1999	Chevrolet	Venture	Onstar (VS-3B)		√	√	√		
1999	Chevrolet	Venture Ext.	Powertrain	√	√	√	√	√	0493
1999	Chevrolet	Venture Ext.	Entertainment & comfort bus		√	√	√		
1999	Chevrolet	Venture Ext.	Onstar		√	√	√		0683
1999	Chevrolet	Venture Ext.	Onstar (VS-3B)		√	√	√		
1999	GMC truck	Envoy - 4WD	Powertrain	√	√	√	√	√	
1999	GMC truck	Envoy - 4WD	Heating and air conditioning		√	√	√	√	
1999	GMC truck	Envoy - 4WD	Body Control Module		√	√	√	√	
1999	GMC truck	Envoy - 4WD	Onstar		√	√	√		0683
1999	GMC truck	Envoy - 4WD	Onstar (VS-3B)		√	√	√	√	0683
1999	GMC truck	Envoy - 4WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	GMC C Pickup - 2WD	Powertrain	√	√	√	√	√	
1999	GMC truck	GMC C Pickup - 2WD	Passlock		√	√	√	√	
1999	GMC truck	GMC C Pickup - 2WD	Onstar		√	√	√		0683
1999	GMC truck	GMC C Pickup - 2WD	Onstar (VS-3B)		√	√	√		
1999	GMC truck	GMC C Pickup - 2WD	Electronic variable orifice		√	√	√		
1999	GMC truck	GMC C Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	GMC C Pickup - 2WD	Powertrain	√	√	√	√	√	
1999	GMC truck	GMC C Pickup - 2WD	Passlock		√	√	√	√	
1999	GMC truck	GMC C Pickup - 2WD	Onstar		√	√	√		0683
1999	GMC truck	GMC C Pickup - 2WD	Onstar (VS-3B)		√	√	√		
1999	GMC truck	GMC C Pickup - 2WD	Electronic variable orifice		√	√	√		
1999	GMC truck	GMC C Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	GMC C-Series - 2WD	Powertrain	√	√	√	√	√	
1999	GMC truck	GMC C-Series - 2WD	Passlock		√	√	√	√	
1999	GMC truck	GMC C-Series - 2WD	Onstar		√	√	√		0683
1999	GMC truck	GMC C-Series - 2WD	Onstar (VS-3B)		√	√	√		
1999	GMC truck	GMC C-Series - 2WD	Electronic variable orifice		√	√	√		
1999	GMC truck	GMC C-Series - 2WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	GMC K Pickup - 4WD	Powertrain	√	√	√	√	√	
1999	GMC truck	GMC K Pickup - 4WD	Passlock		√	√	√	√	
1999	GMC truck	GMC K Pickup - 4WD	Onstar		√	√	√		0683
1999	GMC truck	GMC K Pickup - 4WD	Onstar (VS-3B)		√	√	√		
1999	GMC truck	GMC K Pickup - 4WD	Electronic variable orifice		√	√	√		
1999	GMC truck	GMC K Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	GMC K Pickup - 4WD	Powertrain	√	√	√	√	√	
1999	GMC truck	GMC K Pickup - 4WD	Passlock		√	√	√	√	
1999	GMC truck	GMC K Pickup - 4WD	Onstar		√	√	√		0683

1999	GMC truck	GMC K Pickup - 4WD	Onstar (VS-3B)		√	√	√		
1999	GMC truck	GMC K Pickup - 4WD	Electronic variable orifice		√	√	√		
1999	GMC truck	GMC K Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	GMC K Sierra - 4WD	Powertrain	√	√	√	√	√	
1999	GMC truck	GMC K Sierra - 4WD	Passlock		√	√	√	√	
1999	GMC truck	GMC K Sierra - 4WD	Onstar		√	√	√		0683
1999	GMC truck	GMC K Sierra - 4WD	Onstar (VS-3B)		√	√	√		
1999	GMC truck	GMC K Sierra - 4WD	Electronic variable orifice		√	√	√		
1999	GMC truck	GMC K Sierra - 4WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	GMC Suburban - 2WD	Powertrain	√	√	√	√	√	
1999	GMC truck	GMC Suburban - 2WD	Passlock		√	√	√	√	
1999	GMC truck	GMC Suburban - 2WD	Onstar		√	√	√		0683
1999	GMC truck	GMC Suburban - 2WD	Onstar (VS-3B)		√	√	√	√	0683
1999	GMC truck	GMC Suburban - 2WD	Electronic variable orifice		√	√	√		
1999	GMC truck	GMC Suburban - 2WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	GMC Suburban - 4WD	Powertrain	√	√	√	√	√	
1999	GMC truck	GMC Suburban - 4WD	Passlock		√	√	√	√	
1999	GMC truck	GMC Suburban - 4WD	Onstar		√	√	√		0683
1999	GMC truck	GMC Suburban - 4WD	Onstar (VS-3B)		√	√	√	√	0683
1999	GMC truck	GMC Suburban - 4WD	Electronic variable orifice		√	√	√		
1999	GMC truck	GMC Suburban - 4WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	
1999	GMC truck	Jimmy - 2WD	Heating and air conditioning		√	√	√	√	
1999	GMC truck	Jimmy - 2WD	Body Control Module		√	√	√	√	
1999	GMC truck	Jimmy - 2WD	Onstar		√	√	√		0683
1999	GMC truck	Jimmy - 2WD	Onstar (VS-3B)		√	√	√	√	0683
1999	GMC truck	Jimmy - 2WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	
1999	GMC truck	Jimmy - 4WD	Heating and air conditioning		√	√	√	√	
1999	GMC truck	Jimmy - 4WD	Body Control Module		√	√	√	√	
1999	GMC truck	Jimmy - 4WD	Onstar		√	√	√		0683
1999	GMC truck	Jimmy - 4WD	Onstar (VS-3B)		√	√	√	√	0683
1999	GMC truck	Jimmy - 4WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	Safari - 2WD	Powertrain	√	√	√	√	√	
1999	GMC truck	Safari - 2WD	Passlock		√	√	√	√	
1999	GMC truck	Safari - 2WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	Safari - 4WD	Powertrain	√	√	√	√	√	
1999	GMC truck	Safari - 4WD	Passlock		√	√	√	√	
1999	GMC truck	Safari - 4WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	Savana - 2WD	Powertrain	√	√	√	√	√	
1999	GMC truck	Savana - 2WD	Passlock		√	√	√	√	

1999	GMC truck	Savana - 2WD	Immobilizer		√	√	√	√	0706 0707 0708 0709
1999	GMC truck	Sonoma Pickup - 2WD	Powertrain	√	√	√	√	√	
1999	GMC truck	Sonoma Pickup - 2WD	Heating and air conditioning		√	√	√	√	
1999	GMC truck	Sonoma Pickup - 2WD	Body Control Module		√	√	√	√	
1999	GMC truck	Sonoma Pickup - 2WD	Onstar		√	√	√		0683
1999	GMC truck	Sonoma Pickup - 2WD	Onstar (VS-3B)		√	√	√	√	0683
1999	GMC truck	Sonoma Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	Sonoma Pickup - 4WD	Powertrain	√	√	√	√	√	
1999	GMC truck	Sonoma Pickup - 4WD	Heating and air conditioning		√	√	√	√	
1999	GMC truck	Sonoma Pickup - 4WD	Body Control Module		√	√	√	√	
1999	GMC truck	Sonoma Pickup - 4WD	Onstar		√	√	√		0683
1999	GMC truck	Sonoma Pickup - 4WD	Onstar (VS-3B)		√	√	√	√	0683
1999	GMC truck	Sonoma Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	Yukon - 2WD	Powertrain	√	√	√	√	√	
1999	GMC truck	Yukon - 2WD	Passlock		√	√	√	√	
1999	GMC truck	Yukon - 2WD	Onstar		√	√	√		0683
1999	GMC truck	Yukon - 2WD	Onstar (VS-3B)		√	√	√	√	0683
1999	GMC truck	Yukon - 2WD	Electronic variable orifice		√	√	√		
1999	GMC truck	Yukon - 2WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	Yukon - 4WD	Powertrain	√	√	√	√	√	
1999	GMC truck	Yukon - 4WD	Passlock		√	√	√	√	
1999	GMC truck	Yukon - 4WD	Onstar		√	√	√		0683
1999	GMC truck	Yukon - 4WD	Onstar (VS-3B)		√	√	√	√	0683
1999	GMC truck	Yukon - 4WD	Electronic variable orifice		√	√	√		
1999	GMC truck	Yukon - 4WD	4WAL 3 sensor		√	√	√	√	
1999	Isuzu	S/T Isuzu - 2WD	Powertrain	√	√	√	√	√	
1999	Isuzu	S/T Isuzu - 2WD	Heating and air conditioning		√	√	√	√	
1999	Isuzu	S/T Isuzu - 2WD	Body Control Module		√	√	√	√	
1999	Isuzu	S/T Isuzu - 2WD	Onstar		√	√	√		0683
1999	Isuzu	S/T Isuzu - 2WD	Onstar (VS-3B)		√	√	√	√	0683
1999	Isuzu	S/T Isuzu - 2WD	4WAL 3 sensor		√	√	√	√	
1999	Isuzu	S/T Isuzu - 4WD	Powertrain	√	√	√	√	√	
1999	Isuzu	S/T Isuzu - 4WD	Heating and air conditioning		√	√	√	√	
1999	Isuzu	S/T Isuzu - 4WD	Body Control Module		√	√	√	√	
1999	Isuzu	S/T Isuzu - 4WD	Onstar		√	√	√		0683
1999	Isuzu	S/T Isuzu - 4WD	Onstar (VS-3B)		√	√	√	√	0683
1999	Isuzu	S/T Isuzu - 4WD	4WAL 3 sensor		√	√	√	√	
1999	Oldsmobile	Bravada	Powertrain	√	√	√	√	√	
1999	Oldsmobile	Bravada	Heating and air conditioning		√	√	√	√	
1999	Oldsmobile	Bravada	Body Control Module		√	√	√	√	
1999	Oldsmobile	Bravada	Onstar		√	√	√		0683

1999	Oldsmobile	Bravada	Onstar (VS-3B)		√	√	√	√	0683
1999	Oldsmobile	Bravada	4WAL 3 sensor		√	√	√	√	
1999	Oldsmobile	Silhouette	Powertrain	√	√	√	√	√	0493
1999	Oldsmobile	Silhouette	Entertainment & comfort bus		√	√	√		
1999	Oldsmobile	Silhouette	Onstar		√	√	√		0683
1999	Oldsmobile	Silhouette	Onstar (VS-3B)		√	√	√		
1999	Oldsmobile	Silhouette Ext.	Powertrain	√	√	√	√	√	0493
1999	Oldsmobile	Silhouette Ext.	Entertainment & comfort bus		√	√	√		
1999	Oldsmobile	Silhouette Ext.	Onstar		√	√	√		0683
1999	Oldsmobile	Silhouette Ext.	Onstar (VS-3B)		√	√	√		
1999	Pontiac	Montana	Powertrain	√	√	√	√	√	0493
1999	Pontiac	Montana	Entertainment & comfort bus		√	√	√		
1999	Pontiac	Montana	Onstar		√	√	√		0683
1999	Pontiac	Montana	Onstar (VS-3B)		√	√	√		
1999	Pontiac	Montana Ext.	Powertrain	√	√	√	√	√	0493
1999	Pontiac	Montana Ext.	Entertainment & comfort bus		√	√	√		
1999	Pontiac	Montana Ext.	Onstar		√	√	√		0683
1999	Pontiac	Montana Ext.	Onstar (VS-3B)		√	√	√		
1998	Buick	Century	Powertrain	√	√	√	√	√	0493
1998	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0690
1998	Buick	Century	Onstar		√	√	√		0683
1998	Buick	Century	Chassis		√	√		√	
1998	Buick	Lesabre	Powertrain	√	√	√	√	√	0493
1998	Buick	Lesabre	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1998	Buick	Lesabre	Onstar		√	√	√		0683
1998	Buick	Lesabre	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1998	Buick	Lesabre	Entertainment & comfort bus		√	√	√	√	0683
1998	Buick	Lesabre	ABS		√	√		√	0641 0506
1998	Buick	Park Avenue	Powertrain	√	√	√	√	√	0493
1998	Buick	Park Avenue	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1998	Buick	Park Avenue	Onstar		√	√	√		0683
1998	Buick	Park Avenue	ABS		√	√		√	0641 0506
1998	Buick	Regal	Powertrain	√	√	√	√	√	0493
1998	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0690
1998	Buick	Regal	Onstar		√	√	√		0683
1998	Buick	Regal	Chassis		√	√		√	
1998	Buick	Riviera	Powertrain	√	√	√	√	√	0493
1998	Buick	Riviera	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722



1998	Buick	Riviera	Onstar		√	√	√		0683
1998	Buick	Skylark	Powertrain	√	√	√	√	√	0493
1998	Buick	Skylark	Chassis		√	√	√	√	
1998	Cadillac	Catera	Powertrain	√	√	√	√	√	
1998	Cadillac	Catera	Remote function actuator		√	√	√		
1998	Cadillac	Catera	Body Control Module		√	√	√	√	0711 0628
1998	Cadillac	Catera	Radio		√	√	√	√	0525
1998	Cadillac	Catera	Immobilizer					√	
1998	Cadillac	Catera	Cellular telephone		√	√	√		0684
1998	Cadillac	Catera	Onstar		√	√	√		0683
1998	Cadillac	Catera	ABS		√	√	√	√	
1998	Cadillac	Deville	Powertrain	√	√	√	√	√	0724 0723
1998	Cadillac	Deville	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1998	Cadillac	Deville	Radio		√	√	√	√	0702 0525
1998	Cadillac	Deville	Onstar		√	√	√		0683
1998	Cadillac	Deville	Cellular telephone		√	√	√	√	0697 0698 0699 0700 0701 0682
1998	Cadillac	Deville	ABS/TCS BLW ICCS2		√	√		√	0641 0506
1998	Cadillac	Eldorado	Powertrain	√	√	√	√	√	0724 0723
1998	Cadillac	Eldorado	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1998	Cadillac	Eldorado	Radio		√	√	√	√	0702 0525
1998	Cadillac	Eldorado	Onstar		√	√	√		0683
1998	Cadillac	Seville	Powertrain	√	√	√	√	√	0723
1998	Cadillac	Seville	Cellular telephone		√	√			
1998	Cadillac	Seville	Amplifier (bose)		√	√	√	√	0614 0664 0615 0617 0686 0687 0604 0685 0628 0651 0725 0586 0671 0671 0587 0525
1998	Cadillac	Seville	Memory seat module		√	√	√	√	
1998	Cadillac	Seville	Remote function actuation		√	√	√		0727
1998	Cadillac	Seville	Onstar		√	√	√	√	0683
1998	Cadillac	Seville	ABS/TCS BLW ICCS2		√	√		√	0641 0506
1998	Chevrolet	Camaro	Powertrain	√	√	√	√	√	0493
1998	Chevrolet	Cavalier	Powertrain	√	√	√	√	√	
1998	Chevrolet	Corvette	Powertrain	√	√	√	√	√	
1998	Chevrolet	Corvette	Body Control Module		√	√	√	√	0688
1998	Chevrolet	Corvette	Abs/tcs/magna steer	√	√	√	√	√	
1998	Chevrolet	Corvette	CVRTD	√	√	√	√	√	
1998	Chevrolet	Lumina	Powertrain	√	√	√	√	√	0493
1998	Chevrolet	Lumina	Onstar		√	√	√		0683

1998	Chevrolet	Malibu	Powertrain	√	√	√	√	√	0493
1998	Chevrolet	Malibu	Body function controller		√	√	√	√	
1998	Chevrolet	Malibu	Chassis		√	√	√	√	
1998	Chevrolet	Monte Carlo	Powertrain	√	√	√	√	√	0493
1998	Chevrolet	Monte Carlo	Onstar		√	√	√	√	0683
1998	Chevrolet	Prizm	Supplemental inflatable restraint		√	√			
1998	Oldsmobile	Achieva	Powertrain	√	√	√	√	√	0493
1998	Oldsmobile	Achieva	Chassis		√	√	√	√	
1998	Oldsmobile	Aurora	Powertrain	√	√	√	√	√	0724 0723
1998	Oldsmobile	Aurora	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1998	Oldsmobile	Aurora	Onstar		√	√	√		0683
1998	Oldsmobile	Cutlass	Powertrain	√	√	√	√	√	0493
1998	Oldsmobile	Cutlass	Body function controller		√	√	√	√	
1998	Oldsmobile	Cutlass	Chassis		√	√	√	√	
1998	Oldsmobile	Eighty eight	Powertrain	√	√	√	√	√	0493
1998	Oldsmobile	Eighty eight	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1998	Oldsmobile	Eighty eight	Onstar		√	√	√		0683
1998	Oldsmobile	Eighty eight	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1998	Oldsmobile	Eighty eight	ABS		√	√		√	0641 0506
1998	Oldsmobile	Intrigue	Powertrain	√	√	√	√	√	0493
1998	Oldsmobile	Intrigue	Body Control Module		√	√	√	√	0662 0690
1998	Oldsmobile	Intrigue	Chassis					√	
1998	Oldsmobile	LSS	Powertrain	√	√	√	√	√	0493
1998	Oldsmobile	LSS	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1998	Oldsmobile	LSS	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1998	Oldsmobile	LSS	Onstar		√	√	√		0683
1998	Oldsmobile	LSS	ABS		√	√		√	0641 0506
1998	Pontiac	Bonneville	Powertrain	√	√	√	√	√	0493
1998	Pontiac	Bonneville	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1998	Pontiac	Bonneville	Onstar		√	√	√		0683
1998	Pontiac	Bonneville	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1998	Pontiac	Bonneville	ABS		√	√		√	0641 0506
1998	Pontiac	FireBird	Powertrain	√	√	√	√	√	0493
1998	Pontiac	Grand Am	Powertrain	√	√	√	√	√	0493
1998	Pontiac	Grand Am	Chassis		√	√	√	√	

1998	Pontiac	Grand Prix	Powertrain	√	√	√	√	√	0493
1998	Pontiac	Sunfire	Powertrain	√	√	√	√	√	
1998	Cadillac	Hearse	Powertrain	√	√	√	√	√	0493
1998	Cadillac	Hearse	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1998	Cadillac	Hearse	Radio						0702
1998	Cadillac	Hearse	Delco/Xtool ABS/TCS		√	√		√	0641 0506
1998	Cadillac	Limousine	Powertrain	√	√	√	√	√	0493
1998	Cadillac	Limousine	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1998	Cadillac	Limousine	Radio						0702
1998	Cadillac	Limousine	Delco/Xtool ABS/TCS		√	√		√	0641 0506
1998	Chevrolet	Astro - 2WD	Powertrain	√	√	√	√	√	
1998	Chevrolet	Astro - 2WD	Passlock		√	√	√	√	
1998	Chevrolet	Astro - 2WD	Electronic variable orifice		√	√	√		
1998	Chevrolet	Astro - 4WD	Powertrain	√	√	√	√	√	
1998	Chevrolet	Astro - 4WD	Passlock		√	√	√	√	
1998	Chevrolet	Astro - 4WD	Electronic variable orifice		√	√	√		
1998	Chevrolet	Blazer - 2WD	Powertrain	√	√	√	√	√	
1998	Chevrolet	Blazer - 2WD	Heating and air conditioning		√	√	√	√	
1998	Chevrolet	Blazer - 2WD	Body Control Module		√	√	√	√	
1998	Chevrolet	Blazer - 2WD	Onstar		√	√	√	√	0683
1998	Chevrolet	Blazer - 2WD	4WAL 3 sensor		√	√	√	√	
1998	Chevrolet	Blazer - 4WD	Powertrain	√	√	√	√	√	
1998	Chevrolet	Blazer - 4WD	Heating and air conditioning		√	√	√	√	
1998	Chevrolet	Blazer - 4WD	Body Control Module		√	√	√	√	
1998	Chevrolet	Blazer - 4WD	Onstar		√	√	√	√	0683
1998	Chevrolet	Blazer - 4WD	4WAL 3 sensor		√	√	√	√	
1998	Chevrolet	C Pickup - 2WD	Powertrain	√	√	√	√	√	
1998	Chevrolet	C Pickup - 2WD	Passlock		√	√	√	√	
1998	Chevrolet	C Pickup - 2WD	Onstar		√	√	√		0683
1998	Chevrolet	C Pickup - 2WD	Electronic variable orifice		√	√	√		
1998	Chevrolet	C Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
1998	Chevrolet	C Pickup - 2WD (CNG)	Powertrain	√	√	√	√	√	
1998	Chevrolet	C Pickup - 2WD (CNG)	Passlock		√	√	√	√	
1998	Chevrolet	C Pickup - 2WD (CNG)	Onstar		√	√	√		0683
1998	Chevrolet	C Pickup - 2WD (CNG)	Electronic variable orifice		√	√	√		
1998	Chevrolet	C Pickup - 2WD (CNG)	4WAL 3 sensor		√	√	√	√	
1998	Chevrolet	Express - 2WD	Powertrain	√	√	√	√	√	
1998	Chevrolet	Express - 2WD	Passlock		√	√	√	√	
1998	Chevrolet	Express - 2WD	Immobilizer		√	√	√	√	0706 0707 0708 0709
1998	Chevrolet	Express - 2WD	Electronic variable orifice		√	√	√		

1998	Chevrolet	K Pickup - 4WD	Powertrain	√	√	√	√	√	
1998	Chevrolet	K Pickup - 4WD	Passlock		√	√	√	√	
1998	Chevrolet	K Pickup - 4WD	Onstar		√	√	√		0683
1998	Chevrolet	K Pickup - 4WD	Electronic variable orifice		√	√	√		
1998	Chevrolet	K Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
1998	Chevrolet	S10 Pickup - 2WD	Powertrain	√	√	√	√	√	
1998	Chevrolet	S10 Pickup - 2WD	Heating and air conditioning		√	√	√	√	
1998	Chevrolet	S10 Pickup - 2WD	Body Control Module		√	√	√	√	
1998	Chevrolet	S10 Pickup - 2WD	Onstar		√	√	√	√	0683
1998	Chevrolet	S10 Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
1998	Chevrolet	S10 Pickup - 4WD	Powertrain	√	√	√	√	√	
1998	Chevrolet	S10 Pickup - 4WD	Heating and air conditioning		√	√	√	√	
1998	Chevrolet	S10 Pickup - 4WD	Body Control Module		√	√	√	√	
1998	Chevrolet	S10 Pickup - 4WD	Onstar		√	√	√	√	0683
1998	Chevrolet	S10 Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
1998	Chevrolet	Suburban - 2WD	Powertrain	√	√	√	√	√	
1998	Chevrolet	Suburban - 2WD	Passlock		√	√	√	√	
1998	Chevrolet	Suburban - 2WD	Onstar		√	√	√	√	0683
1998	Chevrolet	Suburban - 2WD	Electronic variable orifice		√	√	√		
1998	Chevrolet	Suburban - 2WD	4WAL 3 sensor		√	√	√	√	
1998	Chevrolet	Suburban - 4WD	Powertrain	√	√	√	√	√	
1998	Chevrolet	Suburban - 4WD	Passlock		√	√	√	√	
1998	Chevrolet	Suburban - 4WD	Onstar		√	√	√	√	0683
1998	Chevrolet	Suburban - 4WD	Electronic variable orifice		√	√	√		
1998	Chevrolet	Suburban - 4WD	4WAL 3 sensor		√	√	√	√	
1998	Chevrolet	Suburban 4WD - RHD	Powertrain	√	√	√	√	√	
1998	Chevrolet	Suburban 4WD - RHD	Passlock		√	√	√	√	
1998	Chevrolet	Suburban 4WD - RHD	Onstar		√	√	√		0683
1998	Chevrolet	Suburban 4WD - RHD	Electronic variable orifice		√	√	√		
1998	Chevrolet	Suburban 4WD - RHD	4WAL 3 sensor		√	√	√	√	
1998	Chevrolet	Tahoe - 2WD	Powertrain	√	√	√	√	√	
1998	Chevrolet	Tahoe - 2WD	Passlock		√	√	√	√	
1998	Chevrolet	Tahoe - 2WD	Onstar		√	√	√	√	0683
1998	Chevrolet	Tahoe - 2WD	Electronic variable orifice		√	√	√		
1998	Chevrolet	Tahoe - 2WD	4WAL 3 sensor		√	√	√	√	
1998	Chevrolet	Tahoe - 4WD	Powertrain	√	√	√	√	√	
1998	Chevrolet	Tahoe - 4WD	Passlock		√	√	√	√	
1998	Chevrolet	Tahoe - 4WD	Onstar		√	√	√	√	0683
1998	Chevrolet	Tahoe - 4WD	Electronic variable orifice		√	√	√		
1998	Chevrolet	Tahoe - 4WD	4WAL 3 sensor		√	√	√	√	
1998	Chevrolet	Tahoe 4WD - RHD	Powertrain	√	√	√	√	√	

1998	Chevrolet	Tahoe 4WD - RHD	Passlock		√	√	√	√	
1998	Chevrolet	Tahoe 4WD - RHD	Onstar		√	√	√		0683
1998	Chevrolet	Tahoe 4WD - RHD	Electronic variable orifice		√	√	√		
1998	Chevrolet	Tahoe 4WD - RHD	4WAL 3 sensor		√	√	√	√	
1998	Chevrolet	Tracker - 2WD	Supplemental inflatable restraint		√	√			
1998	Chevrolet	Tracker - 2WD	Body Control Module		√	√	√	√	
1998	Chevrolet	Tracker - 2WD	4WAL 3 sensor		√	√	√	√	
1998	Chevrolet	Tracker - 4WD	Supplemental inflatable restraint		√	√			
1998	Chevrolet	Tracker - 4WD	Body Control Module		√	√	√	√	
1998	Chevrolet	Tracker - 4WD	4WAL 3 sensor		√	√	√	√	
1998	Chevrolet	Trans ort (Export)	Powertrain	√	√	√	√	√	0493
1998	Chevrolet	Trans ort (Export)	Onstar		√	√	√		0683
1998	Chevrolet	Venture	Powertrain	√	√	√	√	√	0493
1998	Chevrolet	Venture	Onstar		√	√	√		0683
1998	Chevrolet	Venture Ext.	Powertrain	√	√	√	√	√	0493
1998	Chevrolet	Venture Ext.	Onstar		√	√	√		0683
1998	GMC truck	GMC C Pickup - 2WD	Powertrain	√	√	√	√	√	
1998	GMC truck	GMC C Pickup - 2WD	Passlock		√	√	√	√	
1998	GMC truck	GMC C Pickup - 2WD	Onstar		√	√	√	√	0683
1998	GMC truck	GMC C Pickup - 2WD	Electronic variable orifice		√	√	√		
1998	GMC truck	GMC C Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
1998	GMC truck	GMC C Pickup - 2WD	Powertrain	√	√	√	√	√	
1998	GMC truck	GMC C Pickup - 2WD	Passlock		√	√	√	√	
1998	GMC truck	GMC C Pickup - 2WD	Onstar		√	√	√		0683
1998	GMC truck	GMC C Pickup - 2WD	Electronic variable orifice		√	√	√		
1998	GMC truck	GMC C Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
1998	GMC truck	GMC K Pickup - 4WD	Powertrain	√	√	√	√	√	
1998	GMC truck	GMC K Pickup - 4WD	Passlock		√	√	√	√	
1998	GMC truck	GMC K Pickup - 4WD	Onstar		√	√	√		0683
1998	GMC truck	GMC K Pickup - 4WD	Electronic variable orifice		√	√	√		
1998	GMC truck	GMC K Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
1998	GMC truck	GMC Suburban - 2WD	Powertrain	√	√	√	√	√	
1998	GMC truck	GMC Suburban - 2WD	Passlock		√	√	√	√	
1998	GMC truck	GMC Suburban - 2WD	Onstar		√	√	√	√	0683
1998	GMC truck	GMC Suburban - 2WD	Electronic variable orifice		√	√	√		
1998	GMC truck	GMC Suburban - 2WD	4WAL 3 sensor		√	√	√	√	
1998	GMC truck	GMC Suburban - 4WD	Powertrain	√	√	√	√	√	
1998	GMC truck	GMC Suburban - 4WD	Passlock		√	√	√	√	
1998	GMC truck	GMC Suburban - 4WD	Onstar		√	√	√	√	0683
1998	GMC truck	GMC Suburban - 4WD	Electronic variable orifice		√	√	√		
1998	GMC truck	GMC Suburban - 4WD	4WAL 3 sensor		√	√	√	√	

1998	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	
1998	GMC truck	Jimmy - 2WD	Heating and air conditioning		√	√	√	√	
1998	GMC truck	Jimmy - 2WD	Body Control Module		√	√	√	√	
1998	GMC truck	Jimmy - 2WD	Onstar		√	√	√	√	0683
1998	GMC truck	Jimmy - 2WD	4WAL 3 sensor		√	√	√	√	
1998	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	
1998	GMC truck	Jimmy - 4WD	Heating and air conditioning		√	√	√	√	
1998	GMC truck	Jimmy - 4WD	Body Control Module		√	√	√	√	
1998	GMC truck	Jimmy - 4WD	Onstar		√	√	√	√	0683
1998	GMC truck	Jimmy - 4WD	4WAL 3 sensor		√	√	√	√	
1998	GMC truck	Safari - 2WD	Powertrain	√	√	√	√	√	
1998	GMC truck	Safari - 2WD	Passlock		√	√	√	√	
1998	GMC truck	Safari - 2WD	Electronic variable orifice		√	√	√		
1998	GMC truck	Safari - 4WD	Powertrain	√	√	√	√	√	
1998	GMC truck	Safari - 4WD	Passlock		√	√	√	√	
1998	GMC truck	Safari - 4WD	Electronic variable orifice		√	√	√		
1998	GMC truck	Savana - 2WD	Powertrain	√	√	√	√	√	
1998	GMC truck	Savana - 2WD	Passlock		√	√	√	√	
1998	GMC truck	Savana - 2WD	Immobilizer		√	√	√	√	0706 0707 0708 0709
1998	GMC truck	Savana - 2WD	Electronic variable orifice		√	√	√		
1998	GMC truck	Sonoma Pickup - 2WD	Powertrain	√	√	√	√	√	
1998	GMC truck	Sonoma Pickup - 2WD	Heating and air conditioning		√	√	√	√	
1998	GMC truck	Sonoma Pickup - 2WD	Body Control Module		√	√	√	√	
1998	GMC truck	Sonoma Pickup - 2WD	Onstar		√	√	√	√	0683
1998	GMC truck	Sonoma Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
1998	GMC truck	Sonoma Pickup - 4WD	Powertrain	√	√	√	√	√	
1998	GMC truck	Sonoma Pickup - 4WD	Heating and air conditioning		√	√	√	√	
1998	GMC truck	Sonoma Pickup - 4WD	Body Control Module		√	√	√	√	
1998	GMC truck	Sonoma Pickup - 4WD	Onstar		√	√	√	√	0683
1998	GMC truck	Sonoma Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
1998	GMC truck	Yukon - 2WD	Powertrain	√	√	√	√	√	
1998	GMC truck	Yukon - 2WD	Passlock		√	√	√	√	
1998	GMC truck	Yukon - 2WD	Onstar		√	√	√	√	0683
1998	GMC truck	Yukon - 2WD	Electronic variable orifice		√	√	√		
1998	GMC truck	Yukon - 2WD	4WAL 3 sensor		√	√	√	√	
1998	GMC truck	Yukon - 4WD	Powertrain	√	√	√	√	√	
1998	GMC truck	Yukon - 4WD	Passlock		√	√	√	√	
1998	GMC truck	Yukon - 4WD	Onstar		√	√	√	√	0683
1998	GMC truck	Yukon - 4WD	Electronic variable orifice		√	√	√		
1998	GMC truck	Yukon - 4WD	4WAL 3 sensor		√	√	√	√	
1998	Isuzu	S/T Isuzu - 2WD	Powertrain	√	√	√	√	√	

1998	Isuzu	S/T Isuzu - 2WD	Heating and air conditioning		√	√	√	√	
1998	Isuzu	S/T Isuzu - 2WD	Body Control Module		√	√	√	√	
1998	Isuzu	S/T Isuzu - 2WD	Onstar		√	√	√	√	0683
1998	Isuzu	S/T Isuzu - 2WD	4WAL 3 sensor		√	√	√	√	
1998	Isuzu	S/T Isuzu - 4WD	Powertrain	√	√	√	√	√	
1998	Isuzu	S/T Isuzu - 4WD	Heating and air conditioning		√	√	√	√	
1998	Isuzu	S/T Isuzu - 4WD	Body Control Module		√	√	√	√	
1998	Isuzu	S/T Isuzu - 4WD	Onstar		√	√	√	√	0683
1998	Isuzu	S/T Isuzu - 4WD	4WAL 3 sensor		√	√	√	√	
1998	Oldsmobile	Bravada	Powertrain	√	√	√	√	√	
1998	Oldsmobile	Bravada	Heating and air conditioning		√	√	√	√	
1998	Oldsmobile	Bravada	Body Control Module		√	√	√	√	
1998	Oldsmobile	Bravada	Onstar		√	√	√	√	0683
1998	Oldsmobile	Bravada	4WAL 3 sensor		√	√	√	√	
1998	Oldsmobile	Silhouette	Powertrain	√	√	√	√	√	0493
1998	Oldsmobile	Silhouette	Onstar		√	√	√		0683
1998	Oldsmobile	Silhouette Ext.	Powertrain	√	√	√	√	√	0493
1998	Oldsmobile	Silhouette Ext.	Onstar		√	√	√		0683
1998	Pontiac	Sun Runner - 2WD (Canada)	Powertrain	√	√	√	√	√	0493
1998	Pontiac	Sun Runner - 2WD (Canada)	Supplemental inflatable restraint		√	√			
1998	Pontiac	Sun Runner - 2WD (Canada)	Body Control Module		√	√	√	√	
1998	Pontiac	Sun Runner - 2WD (Canada)	4WAL 3 sensor		√	√	√	√	
1998	Pontiac	Sun Runner - 4WD (Canada)	Powertrain	√	√	√	√	√	0493
1998	Pontiac	Sun Runner - 4WD (Canada)	Supplemental inflatable restraint		√	√			
1998	Pontiac	Sun Runner - 4WD (Canada)	Body Control Module		√	√	√	√	
1998	Pontiac	Sun Runner - 4WD (Canada)	4WAL 3 sensor		√	√	√	√	
1998	Pontiac	Trans sport	Powertrain	√	√	√	√	√	0493
1998	Pontiac	Trans sport	Onstar		√	√	√		0683
1998	Pontiac	Trans ort Ext.	Powertrain	√	√	√	√	√	0493
1998	Pontiac	Trans ort Ext.	Onstar		√	√	√		0683
1997	Buick	Century	Powertrain	√	√	√	√	√	0493
1997	Buick	Century	Body Control Module		√	√	√	√	0614 0662 0690
1997	Buick	Lesabre	Powertrain	√	√	√	√	√	0493
1997	Buick	Lesabre	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1997	Buick	Lesabre	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1997	Buick	Lesabre	ABS		√	√		√	0641 0506
1997	Buick	Park Avenue	Powertrain	√	√	√	√	√	0493
1997	Buick	Park Avenue	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1997	Buick	Park Avenue	ABS		√	√		√	0641 0506

1997	Buick	Regal	Powertrain	√	√	√	√	√	0493
1997	Buick	Regal	Body Control Module		√	√	√	√	0614 0662 0690
1997	Buick	Riviera	Powertrain	√	√	√	√	√	0493
1997	Buick	Riviera	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1997	Buick	Skylark	Powertrain	√	√	√	√	√	0493
1997	Cadillac	Concours	Powertrain	√	√	√	√	√	0723
1997	Cadillac	Concours	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1997	Cadillac	Concours	Radio				√		
1997	Cadillac	Concours	Cellular telephone		√	√	√	√	0702
1997	Cadillac	Concours	Magna steer		√	√			
1997	Cadillac	Concours	ABS		√	√		√	0641 0506
1997	Cadillac	Deville	Powertrain	√	√	√	√	√	0723
1997	Cadillac	Deville	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1997	Cadillac	Deville	Radio				√		
1997	Cadillac	Deville	Cellular telephone		√	√	√	√	0702
1997	Cadillac	Deville	Magna steer		√	√			
1997	Cadillac	Deville	ABS		√	√		√	0641 0506
1997	Cadillac	Eldorado	Powertrain	√	√	√	√	√	0723
1997	Cadillac	Eldorado	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1997	Cadillac	Eldorado	Radio				√		
1997	Cadillac	Eldorado	Cellular telephone		√	√	√	√	0702
1997	Cadillac	Eldorado	Magna steer		√	√			
1997	Cadillac	Eldorado	ABS		√	√		√	0641 0506
1997	Cadillac	Seville	Powertrain	√	√	√	√	√	0723
1997	Cadillac	Seville	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682
1997	Cadillac	Seville	Radio				√		
1997	Cadillac	Seville	Cellular telephone		√	√	√	√	0702
1997	Cadillac	Seville	Magna steer		√	√			
1997	Cadillac	Seville	ABS		√	√		√	0641 0506
1997	Chevrolet	Camaro	Powertrain	√	√	√	√	√	0493
1997	Chevrolet	Cavalier	Powertrain	√	√	√	√	√	
1997	Chevrolet	Corvette	Powertrain	√	√	√	√	√	
1997	Chevrolet	Corvette	Body Control Module		√	√	√	√	0688 0600
1997	Chevrolet	Corvette	Abs/tcs/magna steer	√	√	√	√	√	0641
1997	Chevrolet	Lumina	Powertrain	√	√	√	√	√	0493
1997	Chevrolet	Malibu	Powertrain	√	√	√	√	√	0493
1997	Chevrolet	Malibu	Body function controller		√	√	√	√	



1997	Chevrolet	Monte Carlo	Powertrain	√	√	√	√	√	0493
1997	Oldsmobile	Achieva	Powertrain	√	√	√	√	√	0493
1997	Oldsmobile	Aurora	Powertrain	√	√	√	√	√	0724 0723
1997	Oldsmobile	Aurora	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1997	Oldsmobile	Cutlass	Powertrain	√	√	√	√	√	0493
1997	Oldsmobile	Cutlass	Body function controller		√	√	√	√	
1997	Oldsmobile	Cutlass Supreme	Powertrain	√	√	√	√	√	0493
1997	Oldsmobile	Eighty eight	Powertrain	√	√	√	√	√	0493
1997	Oldsmobile	Eighty eight	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1997	Oldsmobile	Eighty eight	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1997	Oldsmobile	Eighty eight	ABS		√	√		√	0641 0506
1997	Pontiac	Bonneville	Powertrain	√	√	√	√	√	0493
1997	Pontiac	Bonneville	Body Control Module		√	√	√	√	0614 0668 0550 0684 0550 0531 0692
1997	Pontiac	Bonneville	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1997	Pontiac	Bonneville	ABS		√	√		√	0641 0506
1997	Pontiac	FireBird	Powertrain	√	√	√	√	√	0493
1997	Pontiac	Grand Am	Powertrain	√	√	√	√	√	0493
1997	Pontiac	Grand Prix	Powertrain	√	√	√	√	√	0493
1997	Pontiac	Sunfire	Powertrain	√	√	√	√	√	
1997	Cadillac	Hearse	Powertrain	√	√	√	√	√	0493
1997	Cadillac	Hearse	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682 0702
1997	Cadillac	Hearse	Radio				√	√	
1997	Cadillac	Hearse	Delco/Xtool ABS/TCS		√	√		√	0641 0506
1997	Cadillac	Limousine	Powertrain	√	√	√	√	√	0493
1997	Cadillac	Limousine	Body Control Module		√	√	√	√	0684 0697 0698 0699 0700 0701 0682 0702
1997	Cadillac	Limousine	Radio				√	√	
1997	Cadillac	Limousine	Delco/Xtool ABS/TCS		√	√		√	0641 0506
1997	Chevrolet	Astro - 2WD	Powertrain	√	√	√	√	√	
1997	Chevrolet	Astro - 2WD	Electronic variable orifice		√	√	√	√	
1997	Chevrolet	Astro - 4WD	Powertrain	√	√	√	√	√	
1997	Chevrolet	Astro - 4WD	Electronic variable orifice		√	√	√	√	
1997	Chevrolet	Blazer - 2WD	Powertrain	√	√	√	√	√	
1997	Chevrolet	Blazer - 4WD	Powertrain	√	√	√	√	√	
1997	Chevrolet	C Pickup - 2WD	Powertrain	√	√	√	√	√	
1997	Chevrolet	C Pickup - 2WD	Electronic variable orifice		√	√	√	√	

1997	Chevrolet	C Pickup - 2WD (CNG)	Powertrain	√	√	√	√	√	
1997	Chevrolet	C Pickup - 2WD (CNG)	Electronic variable orifice		√	√	√	√	
1997	Chevrolet	Export Express	Powertrain	√	√	√	√	√	
1997	Chevrolet	Export Express	Electronic variable orifice		√	√	√	√	
1997	Chevrolet	Express - 2WD	Powertrain	√	√	√	√	√	
1997	Chevrolet	Express - 2WD	Electronic variable orifice		√	√	√	√	
1997	Chevrolet	K Pickup - 4WD	Powertrain	√	√	√	√	√	
1997	Chevrolet	K Pickup - 4WD	Electronic variable orifice		√	√	√	√	
1997	Chevrolet	S10 Pickup - 2WD	Powertrain	√	√	√	√	√	
1997	Chevrolet	S10 Pickup - 4WD	Powertrain	√	√	√	√	√	
1997	Chevrolet	Suburban - 2WD	Powertrain	√	√	√	√	√	
1997	Chevrolet	Suburban - 2WD	Electronic variable orifice		√	√	√	√	
1997	Chevrolet	Suburban - 4WD	Powertrain	√	√	√	√	√	
1997	Chevrolet	Suburban - 4WD	Electronic variable orifice		√	√	√	√	
1997	Chevrolet	Tahoe - 2WD	Powertrain	√	√	√	√	√	
1997	Chevrolet	Tahoe - 2WD	Electronic variable orifice		√	√	√	√	
1997	Chevrolet	Tahoe - 4WD	Powertrain	√	√	√	√	√	
1997	Chevrolet	Tahoe - 4WD	Electronic variable orifice		√	√	√	√	
1997	Chevrolet	Venture	Powertrain	√	√	√	√	√	0493
1997	Chevrolet	Venture Ext.	Powertrain	√	√	√	√	√	0493
1997	GMC truck	Export Savana	Powertrain	√	√	√	√	√	
1997	GMC truck	Export Savana	Electronic variable orifice		√	√	√	√	
1997	GMC truck	GMC C Pickup - 2WD	Powertrain	√	√	√	√	√	
1997	GMC truck	GMC C Pickup - 2WD	Electronic variable orifice		√	√	√	√	
1997	GMC truck	GMC C Pickup - 2WD	Powertrain	√	√	√	√	√	
1997	GMC truck	GMC C Pickup - 2WD	Electronic variable orifice		√	√	√	√	
1997	GMC truck	GMC K Pickup - 4WD	Powertrain	√	√	√	√	√	
1997	GMC truck	GMC K Pickup - 4WD	Electronic variable orifice		√	√	√	√	
1997	GMC truck	GMC Suburban - 2WD	Powertrain	√	√	√	√	√	
1997	GMC truck	GMC Suburban - 2WD	Electronic variable orifice		√	√	√	√	
1997	GMC truck	GMC Suburban - 4WD	Powertrain	√	√	√	√	√	
1997	GMC truck	GMC Suburban - 4WD	Electronic variable orifice		√	√	√	√	
1997	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	
1997	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	
1997	GMC truck	Safari - 2WD	Powertrain	√	√	√	√	√	
1997	GMC truck	Safari - 2WD	Electronic variable orifice		√	√	√	√	
1997	GMC truck	Safari - 4WD	Powertrain	√	√	√	√	√	
1997	GMC truck	Safari - 4WD	Electronic variable orifice		√	√	√	√	
1997	GMC truck	Savana - 2WD	Powertrain	√	√	√	√	√	
1997	GMC truck	Savana - 2WD	Electronic variable orifice		√	√	√	√	
1997	GMC truck	Sonoma Pickup - 2WD	Powertrain	√	√	√	√	√	

1997	GMC truck	Sonoma Pickup - 4WD	Powertrain	√	√	√	√	√	
1997	GMC truck	Yukon - 2WD	Powertrain	√	√	√	√	√	
1997	GMC truck	Yukon - 2WD	Electronic variable orifice		√	√	√	√	
1997	GMC truck	Yukon - 4WD	Powertrain	√	√	√	√	√	
1997	GMC truck	Yukon - 4WD	Electronic variable orifice		√	√	√	√	
1997	Isuzu	S/T Isuzu - 2WD	Powertrain	√	√	√	√	√	
1997	Oldsmobile	Bravada	Powertrain	√	√	√	√	√	
1997	Oldsmobile	Silhouette	Powertrain	√	√	√	√	√	0493
1997	Oldsmobile	Silhouette Ext.	Powertrain	√	√	√	√	√	0493
1997	Pontiac	Trans sport	Powertrain	√	√	√	√	√	0493
1997	Pontiac	Trans ort Ext.	Powertrain	√	√	√	√	√	0493
1997	Opel	Sintra	Powertrain	√	√	√	√	√	0493
1996	Buick	Century	Powertrain	√	√	√	√	√	
1996	Buick	Lesabre	Powertrain	√	√	√	√	√	
1996	Buick	Lesabre	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1996	Buick	Park Avenue	Powertrain	√	√	√	√	√	
1996	Buick	Park Avenue	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1996	Buick	Regal	Powertrain	√	√	√	√	√	
1996	Buick	Riviera	Powertrain	√	√	√	√	√	
1996	Buick	Riviera	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1996	Buick	Roadmaster	Powertrain	√	√	√	√	√	
1996	Buick	Skylark	Powertrain	√	√	√	√	√	
1996	Cadillac	Concours	Powertrain	√	√	√	√	√	0724
1996	Cadillac	Concours	Body Control Module		√	√	√	√	0698 0701
1996	Cadillac	Concours	Radio		√	√	√	√	0698 0701
1996	Cadillac	Concours	CVRSS/ALC		√	√	√	√	
1996	Cadillac	Deville	Powertrain	√	√	√	√	√	0724
1996	Cadillac	Deville	Body Control Module		√	√	√	√	0698 0701
1996	Cadillac	Deville	Radio		√	√	√	√	0698 0701
1996	Cadillac	Deville	CVRSS/ALC		√	√	√	√	
1996	Cadillac	Eldorado	Powertrain	√	√	√	√	√	0724
1996	Cadillac	Eldorado	Body Control Module		√	√	√	√	0698 0701
1996	Cadillac	Eldorado	Radio		√	√	√	√	0698 0701
1996	Cadillac	Eldorado	CVRSS/ALC		√	√	√	√	
1996	Cadillac	Fleetwood	Powertrain	√	√	√	√	√	
1996	Cadillac	Seville	Powertrain	√	√	√	√	√	0724
1996	Cadillac	Seville	Body Control Module		√	√	√	√	0698 0701
1996	Cadillac	Seville	Radio		√	√	√	√	0698 0701
1996	Cadillac	Seville	CVRSS/ALC		√	√	√	√	

1996	Chevrolet	Beretta	Powertrain	√	√	√	√	√	
1996	Chevrolet	Camaro	Powertrain	√	√	√	√	√	
1996	Chevrolet	Caprice	Powertrain	√	√	√	√	√	
1996	Chevrolet	Cavalier	Powertrain	√	√	√	√	√	
1996	Chevrolet	Corsica	Powertrain	√	√	√	√	√	
1996	Chevrolet	Corvette	Powertrain	√	√	√	√	√	
1996	Chevrolet	Impala	Powertrain	√	√	√	√	√	
1996	Chevrolet	Lumina	Powertrain	√	√	√	√	√	
1996	Chevrolet	Monte Carlo	Powertrain	√	√	√	√	√	
1996	Geo	Prizm	Powertrain		√	√		√	
1996	Oldsmobile	Achieva	Powertrain	√	√	√	√	√	
1996	Oldsmobile	Aurora	Powertrain	√	√	√	√	√	0724
1996	Oldsmobile	Aurora	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1996	Oldsmobile	Cutlass Ciera	Powertrain	√	√	√	√	√	
1996	Oldsmobile	Cutlass Supreme	Powertrain	√	√	√	√	√	
1996	Oldsmobile	Eighty eight	Powertrain	√	√	√	√	√	
1996	Oldsmobile	Eighty eight	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1996	Pontiac	Bonneville	Powertrain	√	√	√	√	√	
1996	Pontiac	Bonneville	Remote function actuation				√	√	0711 0716 0717 0718 0719 0720 0721 0722
1996	Pontiac	FireBird	Powertrain	√	√	√	√	√	
1996	Pontiac	Grand Am	Powertrain	√	√	√	√	√	
1996	Pontiac	Grand Prix	Powertrain	√	√	√	√	√	
1996	Pontiac	Sunfire	Powertrain	√	√	√	√	√	
1996	Chevrolet truck	Astro - 2WD	Powertrain	√	√	√	√	√	
1996	Chevrolet truck	Astro - 4WD	Powertrain	√	√	√	√	√	
1996	Chevrolet truck	Blazer - 2WD	Powertrain	√	√	√	√	√	
1996	Chevrolet truck	Blazer - 2WD	VCM 4WAL				√	√	
1996	Chevrolet truck	Blazer - 4WD	Powertrain	√	√	√	√	√	
1996	Chevrolet truck	Blazer - 4WD	VCM 4WAL				√	√	
1996	Chevrolet truck	C Pickup - 2WD	Powertrain	√	√	√	√	√	
1996	Chevrolet truck	G Van	Powertrain	√	√	√	√	√	
1996	Chevrolet truck	K Pickup - 4WD	Powertrain	√	√	√	√	√	
1996	Chevrolet truck	Lumina	Powertrain	√	√	√	√	√	
1996	Chevrolet truck	S10 Pickup - 2WD	Powertrain	√	√	√	√	√	
1996	Chevrolet truck	S10 Pickup - 2WD	VCM 4WAL				√	√	
1996	Chevrolet truck	S10 Pickup - 4WD	Powertrain	√	√	√	√	√	
1996	Chevrolet truck	S10 Pickup - 4WD	VCM 4WAL				√	√	
1996	Chevrolet truck	Suburban - 2WD	Powertrain	√	√	√	√	√	
1996	Chevrolet truck	Suburban - 4WD	Powertrain	√	√	√	√	√	

1996	Chevrolet truck	Tahoe - 2WD	Powertrain	√	√	√	√	√	
1996	Chevrolet truck	Tahoe - 4WD	Powertrain	√	√	√	√	√	
1996	GMC truck	GMC C Pickup - 2WD	Powertrain	√	√	√	√	√	
1996	GMC truck	GMC G Van	Powertrain	√	√	√	√	√	
1996	GMC truck	GMC K Pickup - 4WD	Powertrain	√	√	√	√	√	
1996	GMC truck	GMC Suburban - 2WD	Powertrain	√	√	√	√	√	
1996	GMC truck	GMC Suburban - 4WD	Powertrain	√	√	√	√	√	
1996	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	
1996	GMC truck	Jimmy - 2WD	VCM 4WAL				√	√	
1996	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	
1996	GMC truck	Jimmy - 4WD	VCM 4WAL				√	√	
1996	GMC truck	Safari - 2WD	Powertrain	√	√	√	√	√	
1996	GMC truck	Safari - 4WD	Powertrain	√	√	√	√	√	
1996	GMC truck	Sonoma Pickup - 2WD	Powertrain	√	√	√	√	√	
1996	GMC truck	Sonoma Pickup - 2WD	VCM 4WAL				√	√	
1996	GMC truck	Sonoma Pickup - 4WD	Powertrain	√	√	√	√	√	
1996	GMC truck	Sonoma Pickup - 4WD	VCM 4WAL				√	√	
1996	GMC truck	Yukon - 2WD	Powertrain	√	√	√	√	√	
1996	GMC truck	Yukon - 4WD	Powertrain	√	√	√	√	√	
1996	Oldsmobile	Bravada	Powertrain	√	√	√	√	√	
1996	Oldsmobile	Bravada	VCM 4WAL				√	√	
1996	Pontiac	Trans ort	Powertrain	√	√	√	√	√	

# Special Functions List

No.	Functions Name
SP0000	1-2 Shift Adapt Data
SP0001	14V Power Module
SP0002	ABS Motor
SP0003	AWD Disabled-by-Malfunction Counter Reset
SP0004	B237D Easy Entry Seat Position Sensor - Driver Learn
SP0005	B237P Easy Entry Seat Position Sensor - Passenger Learn
SP0006	HO2S Heater Resistance Learned Values Reset
SP0007	HVAC Actuators Learn
SP0008	MOST Bus Diagnostic Starting Point
SP0009	PTO Operation Mode
SP0010	WLAN Service Set Identifier (SSID) Reset
SP0011	WLAN Password Reset
SP0012	Backup Battery Test
SP0013	Backup Park Lock Actuator Disarming
SP0014	Transmission Range Control Module Range Motor Position Learn
SP0015	Transmission Learn Data
SP0016	Transmission Adaptive Pressure Reset
SP0017	Transmission Service Fast Learn
SP0018	Transmission Adaptive Torque Reset
SP0019	Transmission Adaptive Values Learn
SP0020	Gear Selector -N- Position Learn
SP0021	Transmission Solenoid Valves Calibration Preset
SP0022	Shift Transmission Gear
SP0023	Transmission Clutch 1 Return Spring Learn
SP0024	Transmission Clutch 1 Volume Learn
SP0025	Transmission Clutch 2 Return Spring Learn
SP0026	Transmission Clutch 2 Volume Learn
SP0027	Transmission Clutch 3 Return Spring Learn

SP0028	Transmission Clutch 3 Volume Learn
SP0029	Transmission Clutch 4 Return Spring Learn
SP0030	Transmission Clutch 4 Volume Learn
SP0031	Transmission Clutch 5 Return Spring Learn
SP0032	Transmission Clutch 5 Volume Learn
SP0033	Transmission Clutch Learn Status
SP0034	Transmission Adaptive Pressure Reset
SP0035	Transmission Learn
SP0036	Transmission Oil Life Reset
SP0037	Range Actuator Learn
SP0038	Manual Door Locks (-AU3)(-AU4) Without Seat Belt Pretensioner (-A70)
SP0039	Electric Door Locks (AU3) Without Seat Belt Pretensioner (-A70)
SP0040	Automatic Electric Door Locks (AU4) Without Seat Belt Pretensioner (-A70)
SP0041	Retained Accessory Power
SP0042	DPF/Catalyst 2 Reset
SP0043	DPF Service Regeneration
SP0044	DPF Pressure Sensor Reset
SP0045	DPF Reset
SP0046	Lane Departure Warning Indicator
SP0047	Distance Sensing Cruise Control Module
SP0048	Vehicle Health Data Upload
SP0049	Vehicle Direction Camera Learn
SP0050	Vehicle Inclination Sensor
SP0051	VIN Digits 10-17 Right Headlamp High Beam Control Module
SP0052	VIN Digits 10-17 Left Headlamp High Beam Control Module
SP0053	Vehicle Model
SP0054	Content Theft - Exterior Lamp Flash
SP0055	Content Theft - Horn Chirp / Door Key Cylinder Disarming
SP0056	Passenger Compartment Heater Coolant Control Solenoid Valve Learn
SP0057	Passenger Presence Sensor Learn
SP0058	Catalyst 1 Reset
SP0059	Catalyst Test

SP0060	Catalyst Reset
SP0061	BARO Sensor Reset
SP0062	Manual Door Locks (-AU3)(-AU4) With Seat Belt Pretensioner (A70)
SP0063	Electric Door Locks (AU3) With Seat Belt Pretensioner (A70)
SP0064	Automatic Electric Door Locks (AU4) With Seat Belt Pretensioner (A70)
SP0065	Code Index
SP0066	Idle Speed Adjustment
SP0067	Idle Learn
SP0068	Idle Air Control Reset
SP0069	Idle Speed Control Reset
SP0070	NOx Sensor 1 Reset
SP0071	NOx Sensor 2 Reset
SP0072	NOx Catalyst Reductant Loading Reset
SP0073	NOx Catalyst Reset
SP0074	NOx Adsorber Catalyst Data Reset
SP0075	NOx Adsorber Catalyst Reset
SP0076	Gear Position Sensor Learn
SP0077	Gear Selector -N- Position Learn
SP0078	Backup Park Lock Actuator Arming
SP0079	EV Range Reset
SP0080	Power Steering Softstops Learn
SP0081	Power Steering Softstops Reset
SP0082	Power Steering Pressure Sensor Learn
SP0083	Read LIN Bus Device ID Information
SP0084	Learned Values Reset
SP0085	Engine Oil Type Setup
SP0086	Engine Oil Life Reset
SP0087	ECM Reset
SP0088	Engine Serial Number
SP0089	Steering Wheel Angle Sensor Centering
SP0090	Steering Wheel Angle Sensor Learn
SP0091	Steering Wheel Angle Sensor Learn



SP0092	Steering Wheel Angle Sensor Centering
SP0093	Steering Wheel Angle Sensor Reset
SP0094	Flywheel Learn
SP0095	Exhaust Flow Control Valve Learn
SP0096	Exhaust Gas Temperature Sensor Learn
SP0097	Exhaust Gas Temperature Sensor Reset
SP0098	EGR Valve Learn
SP0099	Transfer Case Clutch Identifier
SP0100	Transfer Case Clutch Overtemperature Counter Reset
SP0101	Assist Step Motor Learn
SP0102	Reset PTO Inhibit and Disengage History
SP0103	Power Steering Softstops Reset
SP0104	Steering Wheel Angle Sensor Reset
SP0105	Reset Functions
SP0106	Learned Values Reset
SP0107	Copy and Restore Tire Pressure Monitoring Information
SP0108	High Pressure Fuel Pump Learn
SP0109	High Pressure Fuel Correction Reset
SP0110	Personalization
SP0111	Yaw Rate Sensor Learn
SP0112	Yaw Rate Sensor Reset
SP0113	Rear Differential Clutch Service Calibration Setup
SP0114	Rear Suspension Position Sensor Trim Height
SP0115	Ambient Air Temperature Calculation Reset
SP0116	Ambient Air Temperature Instant Update
SP0117	Reductant Fluid Tank Level Reset
SP0118	Reductant Injector Reset
SP0119	Reductant System Data Reset
SP0120	Reductant System Reset
SP0121	Restore Factory Settings
SP0122	Hybrid/EV Battery Contactor Open Reasons Reset
SP0123	Hybrid/EV Battery Pack Charging Adaptive Learn Reset

SP0124	Hybrid/EV Battery Pack Coolant Control Solenoid Valve Learn
SP0125	Hybrid/EV Battery Pack Capacity Learn
SP0126	Hybrid/EV Battery Pack Capacity Reset
SP0127	Hybrid/EV Battery Pack Data Reset
SP0128	Calculated Fuel Economy Setup
SP0129	HVAC Afterblow Configuration
SP0130	HO2S Learn
SP0131	HO2S Learned Values Reset
SP0132	HO2S Heater Learn
SP0133	APP Learn
SP0134	Reset High Voltage Disable Request After Crash Event Detected
SP0135	Inspection/Maintenance Data
SP0136	Depressurize System
SP0137	Copy Injector Flow Identifiers from ECM to Glow Plug Control Module
SP0138	Copy Injector Flow Identifiers from Glow Plug Control Module to ECM
SP0139	Throttle Body Idle Air Flow Compensation Reset
SP0140	Throttle Position Learn
SP0141	Throttle Actuator Reset
SP0142	Panic Alarm
SP0143	Intake Air Flow Valve Learn
SP0144	Intake System Learned Values Reset
SP0145	Speedometer Calibration
SP0146	Liftgate Maximum Open Position Learn
SP0147	Neutral Position Sensor Learn
SP0148	A/C Compressor Speed
SP0149	A/C Indicator
SP0150	Control Module Reset
SP0151	Control Module Self-Test
SP0152	Control Module Self-Test
SP0153	Clutch Purge
SP0154	Excessive Clutch Slip Data Reset
SP0155	Clutch Control Module/Rear Drive System Matching Identification Setup

SP0156	Clutch Pedal Position Learn
SP0157	Clutch Position Learn
SP0158	Odometer Setup
SP0159	Tire Type/Pressure Selection
SP0160	Tire Pressure Sensors Learn
SP0161	Key Fob 1
SP0162	Key Fob 2
SP0163	Key Fob 3
SP0164	Key Fob 4
SP0165	Key Fob 5
SP0166	Key Fob 6
SP0167	Key Fob 7
SP0168	Key Fob 8
SP0169	Hands-Free Liftgate Sensor Control Module Calibration
SP0170	Module Setup
SP0171	Exhaust Aftertreatment Fuel Injector Reset
SP0172	Configure New Module
SP0173	Injector Flow Rate Programming
SP0174	Yaw Rate Sensor Reset
SP0175	Yaw Rate Sensor Learn
SP0176	Average Fuel Age Reset
SP0177	Enable Deployment Loops
SP0178	Cylinder 1 Injector Flow Identifier
SP0179	Cylinder 1 Fuel Injector Correction Value Reset
SP0180	Cylinder 2 Injector Flow Identifier
SP0181	Cylinder 2 Fuel Injector Correction Value Reset
SP0182	Cylinder 3 Injector Flow Identifier
SP0183	Cylinder 3 Fuel Injector Correction Value Reset
SP0184	Cylinder 4 Injector Flow Identifier
SP0185	Cylinder 4 Fuel Injector Correction Value Reset
SP0186	Cylinder 5 Injector Flow Identifier
SP0187	Cylinder 5 Fuel Injector Correction Value Reset

SP0188	Cylinder 6 Injector Flow Identifier
SP0189	Cylinder 6 Fuel Injector Correction Value Reset
SP0190	Cylinder 7 Injector Flow Identifier
SP0191	Cylinder 7 Fuel Injector Correction Value Reset
SP0192	Cylinder 8 Injector Flow Identifier
SP0193	Cylinder 8 Fuel Injector Correction Value Reset
SP0194	Cylinder Deactivation Exhaust Flow Control Valve Learn
SP0195	Headlamp Leveling Sensor Learn
SP0196	Frontview Camera Learn
SP0197	Frontview Camera Learn
SP0198	Front Suspension Position Sensor Trim Height
SP0199	Erase/Program All Key Fobs
SP0200	Clear Transmission Counters
SP0201	Clear Passenger Window Learned Values
SP0202	Clear Secured High Voltage DTCs
SP0203	Clear Driver Window Learned Values
SP0204	Erase All Key Fobs
SP0205	Clear Disable History Data
SP0206	Clear Right Rear Window Learned Values
SP0207	Clear Active Pull Compensation Learned Limits
SP0208	Clear Left Rear Window Learned Values
SP0209	Crankshaft Position Variation Learn
SP0210	Crankshaft Position Reluctor Ring Learn
SP0211	Cancel Camera Learn
SP0212	Fuel Pump Trim Reset
SP0213	Fuel Composition Reset
SP0214	Fuel Rail Pressure Relief Valve Learned Values Reset
SP0215	Fuel Rail Pressure Sensor Reset
SP0216	Fuel Rail Pressure Sensor or Fuel Rail Learn
SP0217	Fuel Trim Reset
SP0218	Fuel Economy Reset
SP0219	Fuel Filter Life Reset

SP0220	Fuel Injector Correction Value Preset
SP0221	Fuel Injection Small Quantity Data Reset
SP0222	Fuel Injection Small Quantity Learn
SP0223	Fuel Trim Reset
SP0224	Fuel Pressure Regulator Learn
SP0225	Brake Pressure Sensor Calibration
SP0226	Erase Valet Mode Code
SP0227	Manual Door Locks (-AU3) (-AU4)
SP0228	Manual Service Disconnect Fuse Life Reset
SP0229	Park Brake Calibration
SP0230	Data Display
SP0231	Digital Radio Receiver Control Module
SP0232	All Cylinders Fuel Injector Correction Value Reset
SP0233	Tire Pressure Sensor Signal Reset
SP0234	Tire Pressure Selection
SP0235	Add/Replace Key Fobs
SP0236	Stop/Start Capacitor State of Health Reset
SP0237	Turbocharger Learn
SP0238	Turbocharger Learned Values Reset
SP0239	Next Available Slot
SP0240	Display ECM and Glow Plug Control Module Injector Flow Identifiers
SP0241	Info Display/Infotainment Faceplate Reset
SP0242	Battery Sensor Module Learn
SP0243	Battery Sensor Module Learn
SP0244	Energy Storage Capacitor Learn
SP0245	Suspension Position Sensor Trim Height
SP0246	Option Configuration
SP0247	CAN Bus Configuration Learn
SP0248	Transmission Adaptive Values Learn
SP0249	VIN Learn
SP0250	Power Steering Softstops Learn
SP0251	Learn Functions

SP0252	Throttle Position Learn
SP0253	Inlet Solenoid Valves Learn
SP0254	Liftgate Maximum Open Position Learn
SP0255	CO Adjust
SP0256	Calculated Fuel Economy Setup
SP0257	Glow Plug Learn
SP0258	Remote Vehicle Start Disable History Reset
SP0259	Remote Vehicle Speed Limiting Reset
SP0260	Long Range Radar Sensor Module Learn
SP0261	Setup SDM Part Number in BCM
SP0262	DC Charging Disabled Reset
SP0263	Brake Pedal Position Sensor Learn
SP0264	Brake Hydraulics Sensors Learn
SP0265	MAF Sensor Learn
SP0266	Reset History Buffer
SP0267	Reset Teen Driver Key PIN
SP0268	Reset Event Records
SP0269	Reset Manufacturer Enable Counter
SP0270	Proactive Alerts
SP0271	Parking Assist Sensor Learn
SP0272	Park Brake Reset
SP0273	Steering Gear Learned Values Reset
SP0274	Steering Gear Replacement Procedure
SP0275	Assembly Plant Mode
SP0276	Automatic Braking Active Signal
SP0277	Adaptive Pressure Control Learn
SP0278	Longitudinal Acceleration Sensor Reset
SP0279	Assembly Plant Emission and Fuel Economy Test
SP0280	Brake Pedal Position Sensor Learn
SP0281	Headlamp Leveling Sensor Learn
SP0282	Erase/Program All Key Fobs
SP0283	Next Available Slot

SP0284	Key Fob 1
SP0285	Key Fob 2
SP0286	Key Fob 3
SP0287	Key Fob 4
SP0288	Key Fob 5
SP0289	Key Fob 6
SP0290	Key Fob 7
SP0291	Key Fob 8
SP0292	Battery Sensor Module Learn
SP0293	Clear Driver Window Learned Values
SP0294	Clear Passenger Window Learned Values
SP0295	Clear Left Rear Window Learned Values
SP0296	Clear Right Rear Window Learned Values
SP0297	Read LIN Bus Device ID Information
SP0298	Tire Pressure Sensors Learn
SP0299	Tire Pressure Sensor Signal Reset
SP0300	Tire Type/Pressure Selection
SP0301	CAN Bus Configuration Learn
SP0302	Transmission Service Fast Learn
SP0303	Configure New Module
SP0304	Fuel Trim Reset
SP0305	Crankshaft Position Variation Learn
SP0306	HO2S Heater Learn
SP0307	Idle Learn
SP0308	Engine Oil Life Reset
SP0309	Remote Vehicle Start Disable History Reset
SP0310	Adjustable Pedals Softstops Learn
SP0311	HVAC Actuators Learn
SP0312	HVAC Afterblow Configuration
SP0313	Brake Pressure Sensor Calibration
SP0314	Steering Wheel Angle Sensor Learn
SP0315	Yaw Rate Sensor Learn

SP0316	Park Brake Calibration
SP0317	Suspension Position Sensor Trim Height
SP0318	Remote Vehicle Speed Limiting Reset
SP0319	Vehicle Health Data Upload
SP0320	WLAN Password Reset
SP0321	WLAN Service Set Identifier (SSID) Reset
SP0322	Passenger Presence Sensor Learn
SP0323	Clutch Pedal Position Learn
SP0324	Neutral Position Sensor Learn
SP0325	Fuel Pump Trim Reset
SP0326	Steering Wheel Angle Sensor Centering
SP0327	Transmission Adaptive Pressure Reset
SP0328	Liftgate Maximum Open Position Learn
SP0329	Clear Disable History Data
SP0330	Frontview Camera Learn
SP0331	Ambient Air Temperature Instant Update
SP0332	Setup SDM Part Number in BCM
SP0333	Erase All Key Fobs
SP0334	Clutch Control Module/Rear Drive System Matching Identification Setup
SP0335	Digital Radio Receiver Control Module
SP0336	Gear Selector -N- Position Learn
SP0337	Fuel Composition Reset
SP0338	Stop/Start Capacitor State of Health Reset
SP0339	AWD Disabled-by-Malfunction Counter Reset
SP0340	Long Range Radar Sensor Module Learn
SP0341	Hands-Free Liftgate Sensor Control Module Calibration
SP0342	Erase Valet Mode Code
SP0343	Control Module Reset
SP0344	Info Display/Infotainment Faceplate Reset
SP0345	Exhaust Flow Control Valve Learn
SP0346	Cylinder Deactivation Exhaust Flow Control Valve Learn
SP0347	Distance Sensing Cruise Control Module



SP0348	Adaptive Pressure Control Learn
SP0349	Yaw Rate Sensor Reset
SP0350	Gear Position Sensor Learn
SP0351	Transfer Case Clutch Identifier
SP0352	Transfer Case Clutch Overtemperature Counter Reset
SP0353	Vehicle Model
SP0354	Power Steering Softstops Learn
SP0355	Rear Suspension Position Sensor Trim Height
SP0356	Front Suspension Position Sensor Trim Height
SP0357	Reset History Buffer
SP0358	Rear Differential Clutch Service Calibration Setup
SP0359	Range Actuator Learn
SP0360	Parking Assist Sensor Learn
SP0361	Learned Values Reset
SP0362	Hybrid/EV Battery Pack Coolant Control Solenoid Valve Learn
SP0363	Hybrid/EV Battery Pack Capacity Learn
SP0364	Passenger Compartment Heater Coolant Control Solenoid Valve Learn
SP0365	Fuel Economy Reset
SP0366	Hybrid/EV Battery Contactor Open Reasons Reset
SP0367	Hybrid/EV Battery Pack Charging Adaptive Learn Reset
SP0368	Hybrid/EV Battery Pack Data Reset
SP0369	Manual Service Disconnect Fuse Life Reset
SP0370	Average Fuel Age Reset
SP0371	Electronic Brake Control Module Learn
SP0372	Steering Wheel Angle Sensor Reset
SP0373	Fuel Rail Pressure Relief Valve Learned Values Reset
SP0374	Idle Speed Control Reset
SP0375	ECM Reset
SP0376	Speedometer Calibration
SP0377	Retained Accessory Power
SP0378	Throttle Position Learn
SP0379	Automatic Braking Active Signal

SP0380	Transmission Oil Life Reset
SP0381	APP Learn
SP0382	Crankshaft Position Reluctor Ring Learn
SP0383	DPF Pressure Sensor Learn
SP0384	EGR Valve Learn
SP0385	Exhaust Gas Temperature Sensor Learn
SP0386	Flywheel Learn
SP0387	Fuel Rail Pressure Sensor or Fuel Rail Learn
SP0388	HO2S Learn
SP0389	Intake Air Flow Valve Learn
SP0390	MAF Sensor Learn
SP0391	Turbocharger Learn
SP0392	DPF Reset
SP0393	Glow Plug Control Module Reset
SP0394	DPF Service Regeneration
SP0395	Inspection/Maintenance Data
SP0396	Calculated Fuel Economy Setup
SP0397	Injector Flow Rate Programming
SP0398	Ambient Air Temperature Calculation Reset
SP0399	Catalyst 1 Reset
SP0400	DPF/Catalyst 2 Reset
SP0401	DPF Pressure Sensor Reset
SP0402	Engine Serial Number
SP0403	Fuel Filter Life Reset
SP0404	NOx Catalyst Reset
SP0405	NOx Catalyst Reductant Loading Reset
SP0406	NOx Sensor 1 Reset
SP0407	NOx Sensor 2 Reset
SP0408	Reductant Fluid Tank Level Reset
SP0409	Reductant Injector Reset
SP0410	Reductant System Data Reset
SP0411	Reductant System Reset

SP0412	Display ECM and Glow Plug Control Module Injector Flow Identifiers
SP0413	Cylinder 1 Injector Flow Identifier
SP0414	Cylinder 2 Injector Flow Identifier
SP0415	Cylinder 3 Injector Flow Identifier
SP0416	Cylinder 4 Injector Flow Identifier
SP0417	Cylinder 5 Injector Flow Identifier
SP0418	Cylinder 6 Injector Flow Identifier
SP0419	Cylinder 7 Injector Flow Identifier
SP0420	Cylinder 8 Injector Flow Identifier
SP0421	Copy Injector Flow Identifiers from Glow Plug Control Module to ECM
SP0422	Copy Injector Flow Identifiers from ECM to Glow Plow Control Module
SP0423	Cylinder 1 Fuel Injector Correction Value Reset
SP0424	Cylinder 2 Fuel Injector Correction Value Reset
SP0425	Cylinder 3 Fuel Injector Correction Value Reset
SP0426	Cylinder 4 Fuel Injector Correction Value Reset
SP0427	Cylinder 5 Fuel Injector Correction Value Reset
SP0428	Cylinder 6 Fuel Injector Correction Value Reset
SP0429	Cylinder 7 Fuel Injector Correction Value Reset
SP0430	Cylinder 8 Fuel Injector Correction Value Reset
SP0431	All Cylinders Fuel Injector Correction Value Reset
SP0432	Fuel Injector Correction Value Preset
SP0433	Glow Plug Learn
SP0434	CO Adjust
SP0435	Clear Secured High Voltage DTCs
SP0436	On-Board Jump Assist Counter Reset
SP0437	Reset PTO Inhibit and Disengage History
SP0438	Restore Factory Settings
SP0439	DC Charging Disabled Reset
SP0440	EV Range Reset
SP0441	Idle Speed Adjustment
SP0442	Transmission Adaptive Torque Reset
SP0443	Fuel Rail Pressure Sensor Reset

SP0444	Power Steering Softstops Reset
SP0445	Transmission Adaptive Values Learn
SP0446	Turbocharger Learned Values Reset
SP0447	Vehicle Direction Camera Learn
SP0448	Fuel Pressure Regulator Learn
SP0449	Fuel Pressure Regulator Fast Learn
SP0450	Intake Manifold Runner Control Valve Learn
SP0451	High Pressure Fuel Pump Learn
SP0452	Boost Pressure Sensor Learn
SP0453	Cylinder 1 Injector
SP0454	Cylinder 2 Injector
SP0455	Cylinder 3 Injector
SP0456	Cylinder 4 Injector
SP0457	Vehicle Inclination Sensor
SP0458	Code Index
SP0459	Fuel Injection Small Quantity Data Reset
SP0460	Fuel Injection Small Quantity Learn
SP0461	Catalyst Reset
SP0462	Exhaust Gas Temperature Sensor Reset
SP0463	Idle Air Control Reset
SP0464	Throttle Actuator Reset
SP0465	Preferred Roaming List Update
SP0466	Module Setup
SP0467	Not Linked
SP0468	Linked
SP0469	Option Configuration
SP0470	Audio Code Index
SP0471	Personalization
SP0472	Total Fuel Consumed Reset
SP0473	Automatic Electric Door Locks (AU4) With Seat Belt Pretensioner (A70)
SP0474	Automatic Electric Door Locks (AU4) Without Seat Belt Pretensioner (-A70)
SP0475	Electric Door Locks (AU3) With Seat Belt Pretensioner (A70)

SP0476	Electric Door Locks (AU3) Without Seat Belt Pretensioner (-A70)
SP0477	Manual Door Locks (-AU3) (-AU4)
SP0478	Enable Deployment Loops
SP0479	Clear Transmission Counters
SP0480	Clutch Position Learn
SP0481	Clutch Purge
SP0482	Depressurize System
SP0483	Transmission Learn
SP0484	Fuel Injector Learn
SP0485	Low Speed Target Pressure
SP0486	High Speed Target Pressure
SP0487	Minimum Telltale Pressure
SP0488	Safe Tellale Pressure
SP0489	Low Speed Threshold
SP0490	High Speed Threshold
SP0491	Setup Module DTCs
SP0492	Reset
SP0493	Crankshaft pos. variation learn
SP0494	PRL update
SP0495	Set language
SP0496	Stolen vehicle slowdown clear
SP0497	Setup SDM primary key in BCM
SP0498	Inclination sensor enable
SP0499	BPP sensor calibration
SP0500	Afterblow option
SP0501	Data recorder
SP0502	Audiopilot test
SP0503	Eject
SP0504	TV region lockout
SP0505	TV region select
SP0506	Automated bleed
SP0507	CO adjust (leaded fuel only)

SP0508	Change to neutral mode
SP0509	DPF reset replace ECM
SP0510	Learn sensor location
SP0511	Learn sen loc with tire press tool
SP0512	Re-zero passenger presence system
SP0513	Copy and paste TPM information
SP0514	Tire type/pressure selection
SP0515	Setup SDM part number in BCM
SP0516	DRR setup
SP0517	Passenger presence sensor learn
SP0518	Auto. door unlock
SP0519	Key fob in veh. warning
SP0520	Passive door lock
SP0521	Setup new RCDLR
SP0522	Column calibration
SP0523	Setup new HVAC
SP0524	Radio setup
SP0525	VIN relearn
SP0526	HVAC ambient temp. disp.
SP0527	Power window motor programming
SP0528	Digital radio receiver
SP0529	Radio RPO selection
SP0530	CCM RDS matching ID
SP0531	Clear manufacturer enable counter
SP0532	Bump stop
SP0533	Acceleration sensor reset
SP0534	BMC prim. piston pos. relearn
SP0535	EBCM relearn
SP0536	Steering pos./torque sensor cal.
SP0537	Preload passenger presence system
SP0538	Engine serial number
SP0539	Capture & restore data

SP0540	Injector flow rate programming
SP0541	Setup new ROS
SP0542	PTO options
SP0543	ECM PTO options
SP0544	Reset ECM
SP0545	Reset immobilizer
SP0546	Reset vehicle build settings
SP0547	Middle east speed bias (UC2)
SP0548	Brazil units (CV2)
SP0549	Module setup
SP0550	Setup SDM serial number in BCM
SP0551	Program VIN
SP0552	Tuner calibration
SP0553	Navigation option
SP0554	Transmission type
SP0555	Disable/enable secure car
SP0556	Auto. door unlock trigger
SP0557	Delayed locking
SP0558	Passive door unlock
SP0559	Setup SDM part number in IPM
SP0560	Disable dtc(s)
SP0561	Bluetooth
SP0562	System configuration
SP0563	PSCM calibration procedure
SP0564	New actuator setup procedure
SP0565	Program phone number
SP0566	Hybrid batt. charge hrs.
SP0567	Hybrid batt. discharge amp hrs.
SP0568	Erase transponder-keys
SP0569	Seat belt chime
SP0570	Learn tire pressure sensors
SP0571	Engine shutdown

SP0572	Country code
SP0573	Chime level
SP0574	Loud chime volume
SP0575	Loud amp chime volume
SP0576	Normal chime volume
SP0577	Normal amp chime volume
SP0578	AM pass A stopping
SP0579	FM pass A stopping
SP0580	IPC setup
SP0581	U85
SP0582	UZ6
SP0583	Driver info. display option
SP0584	Calibrate module
SP0585	VCIM setup
SP0586	Optional modules
SP0587	Region code options
SP0588	New tire/wheel base/booster info.
SP0589	Setup SDM part number in IPC
SP0590	Setup SDM serial number in IPC
SP0591	Acquisition setting
SP0592	Step 1
SP0593	Step 2
SP0594	North america
SP0595	Middle east
SP0596	Steering tuning selection
SP0597	Yaw rate sensor recalibration
SP0598	BCM copy and flash
SP0599	Reduction of pressure drive
SP0600	IPC recalibration
SP0601	Injector flow rates
SP0602	Vehicle speed limit
SP0603	Navigation voice



SP0604	Setup SDM serial number in DIM
SP0605	Setup SDM part number in DIM
SP0606	LONG WAVE
SP0607	Traffic seek
SP0608	Vehicle type
SP0609	Door zone module VIN relearn
SP0610	Intrusion sensor step 1
SP0611	Inclination sensor step 1
SP0612	Alarm siren module step 1
SP0613	Tap shift
SP0614	Point of sale
SP0615	Miscellaneous options 2
SP0616	Variable effort steering
SP0617	Right hand drive
SP0618	Personalization option
SP0619	Universal theft deterrent
SP0620	Intrusion sensor step 2
SP0621	Inclination sensor step 2
SP0622	Alarm siren module step 2
SP0623	Twilight sentinel
SP0624	Front fog lamp type
SP0625	DRL option
SP0626	Perimeter lighting
SP0627	TPM option enable
SP0628	New VIN
SP0629	Tire rotation procedure
SP0630	Afterblow
SP0631	Recalibration
SP0632	Accessory wheel size setup
SP0633	Clear memory and program all fobs
SP0634	CTD operation
SP0635	Fob feedback

SP0636	Theftlock LED
SP0637	Option configuration
SP0638	Fuel injector balance
SP0639	Buckle up reminder
SP0640	Pre-alarm option
SP0641	Solenoid test
SP0642	Cruise control options
SP0643	Exhaust brake options
SP0644	Gear down protection options
SP0645	Oil capacity options
SP0646	DPM setup
SP0647	Preferred system setting
SP0648	ALC trimset
SP0649	Dimming delay
SP0650	Export ID
SP0651	Language
SP0652	AM distant
SP0653	AM local
SP0654	FM distant
SP0655	FM local
SP0656	Fob button hold time
SP0657	Electronic suspension control
SP0658	Nav. radio theft
SP0659	Oil life monitor
SP0660	Axle ratio
SP0661	Fast learn adapt. process
SP0662	BCM reprogramming
SP0663	Setup IPC
SP0664	Miscellaneous options 1
SP0665	Automatic/manual HVAC options
SP0666	Magna steer option
SP0667	Temperature offset

SP0668	Load management option
SP0669	Disable belt tower dtc's
SP0670	Navigation radio present
SP0671	Military or standard time
SP0672	Tire pressure warning
SP0673	Tire pressure monitor
SP0674	Performance shift
SP0675	Key fob personalization
SP0676	SCLM setup
SP0677	DTC mask
SP0678	Accessory inflator
SP0679	Middle east region mode
SP0680	Tire rotation/sensor replacement
SP0681	Setup RFA
SP0682	Synchronize IPC and SIR
SP0683	Setup new onstar
SP0684	Electronic serial number
SP0685	Update HVAC calcs. in DIM
SP0686	LH drvr. personalization
SP0687	RH drvr. personalization
SP0688	BCM RPO reprogram
SP0689	Twilight sentinel reprogram
SP0690	Seed and key relearn
SP0691	Setup new VTD module
SP0692	Export option
SP0693	Valet lockout
SP0694	Compact disc
SP0695	Cellular telephone
SP0696	A/C compressor calibration
SP0697	Option A
SP0698	Option B
SP0699	Option C

SP0700	Option D
SP0701	Option E
SP0702	VIN information
SP0703	Bass frequency response
SP0704	Steering angle sensor centering
SP0705	Heater recalibration
SP0706	Door lock
SP0707	Door unlock
SP0708	Door jamb switch
SP0709	Brake pedal
SP0710	Ignition switch
SP0711	Option no. 0
SP0712	HVAC recal. download
SP0713	TV present
SP0714	Bose display
SP0715	Isolation valve test
SP0716	Option no. 1
SP0717	Fob 1 option 2
SP0718	Fob 1 option 3
SP0719	Fob 2 option 1
SP0720	Fob 2 option 2
SP0721	Fob 2 option 3
SP0722	Option no. 2
SP0723	Service spark retard reset
SP0724	Odometer reset
SP0725	Gauge setup
SP0726	Synchronize TTM and MSM
SP0727	Synchronize MSM and TTM
SP0728	Remove/reset module
SP0729	Vehicle dynamic sensor offset calibration
SP0730	Clear Proximity Detection Disable Reason
SP0731	Engine air filter monitor settings

SP0732	Transmission overtemperature counter reset
SP0733	Reset buffer history instruction
SP0734	Transmission clutch read in
SP0735	Vehicle dynamic sensor 1 and 2 offset calibration
SP0736	Read the starting point of the brake system piston pressure rise
SP0737	Reading of brake system plunger motor position sensor
SP0738	Read brake pedal stroke sensor
SP0739	Front axle brake pad life monitoring reset
SP0740	Rear axle brake pad life monitoring reset
SP0741	Configuration/reset function
SP0742	Trailer tire pressure sensor read in manually
SP0743	Steering wheel angle sensor offset calibration
SP0744	Read in longitudinal acceleration sensor
SP0745	Regeneration of diesel particulate filters
SP0746	Injector correction reset
SP0747	Capture information
SP0748	Copy and restore data
SP0749	Gear actuator correction read
SP0750	4WD high-low gear low-speed actuator clutch read-in
SP0751	Distance sensing constant speed control module
SP0752	Engine speed/throttle
SP0753	Rear Gate Driver Information Center Message Reset
SP0754	Headlamp Leveling System Suspension Trim Position Learn
SP0755	Backup Battery Timer Reset
SP0756	Engine Air Filter Life Reset
SP0757	Fuel Pump Driver Control Module Configuration
SP0758	Vehicle Dynamic Sensor Offset Calibration
SP0759	Clear Approach Detection Disabled Reasons
SP075A	All Cameras Alignment Learn
SP075B	Rear Drive Clutch Service Calibration Setup
SP075C	Transmission Overtemperature Counter Reset
SP075D	Engine Block Coolant Valve Position Learn

SP075E	Engine Coolant Control Valve Learn
SP075F	Engine Coolant Flow Control Valve Learn
SP0760	Turbocharger Wastegate Learn
SP0761	Engine Coolant Pump Data Reset
SP0762	Heater Core Coolant Temperature Sensor Reset
SP0763	Particulate Filter Reset
SP0764	Particulate Filter Pressure Sensor Reset
SP0765	Engine Air Filter Monitor Setup
SP0766	Steering Wheel Angle Sensor Offset Calibration
SP0767	Brake System Plunger Motor Position Sensor Learn
SP0768	Brake System Plunger Pressure Rise Starting Point Learn
SP0769	License Compliance Materials Download Error Counter Reset
SP076A	Transmission Control Module Reset
SP076B	Exhaust Control Valve Learn
SP076C	Air Cleaner Monitor Setup
SP076D	Barometric Pressure Sensor Reset
SP076E	Fuel Pump Power Control Module Configuration
SP076F	Correction Angle Reset
SP0770	Cylinder Deactivation Exhaust Control Valve Learn
SP0771	Longitudinal Acceleration Sensor Learn
SP0772	Clear Short Range Radar Sensor Vehicle Position
SP0773	Variable Exhaust Flow Control Valve Learn
SP0774	Vehicle Longitudinal Accelerometer Sensor Learn
SP0775	Heated Oxygen Sensor Heater Resistance Learned Values Reset
SP0776	Range Actuator Correlation Learn
SP0777	Engine Block Coolant Control Valve Position Learn
SP0778	Turbocharger/Supercharger Boost Control Initial Position Learn
SP0779	Catalytic Converter Reset
SP077A	High Pressure Fuel Variable Reset
SP077B	Nitrogen Oxides Catalytic Converter Reductant Loading Reset
SP077C	Nitrogen Oxides Catalytic Converter Reset
SP077D	Nitrogen Oxides Sensor Reset

SP077E	Display ECM Injector Flow Identifiers
SP077F	Cylinder 1 Fuel Injector Flow Identifier
SP0780	Cylinder 2 Fuel Injector Flow Identifier
SP0781	Cylinder 3 Fuel Injector Flow Identifier
SP0782	Cylinder 4 Fuel Injector Flow Identifier
SP0783	Cylinder 5 Fuel Injector Flow Identifier
SP0784	Cylinder 6 Fuel Injector Flow Identifier
SP0785	Left Front Air Spring Inflate
SP0786	Right Front Air Spring Inflate
SP0787	Left Rear Air Spring Inflate
SP0788	Right Rear Air Spring Inflate
SP0789	Left Front Suspension Position Sensor Trim Height
SP078A	Right Front Suspension Position Sensor Trim Height
SP078B	Left Rear Suspension Position Sensor Trim Height
SP078C	Right Rear Suspension Position Sensor Trim Height
SP078D	Level Vehicle to Target Height
SP078E	Brake Pedal Travel Sensor Learn
SP078F	Front Axle Brake Pad Life Monitoring Reset
SP0790	Rear Axle Brake Pad Life Monitoring Reset
SP0791	Turbocharger Vane Position Learn
SP0792	Fuel Injection Small Quantity Learning Odometer Reset
SP0793	Theft Deterrent Relearn
SP0794	Vehicle Dynamic Sensors 1 and 2 Offset Calibration
SP0795	Transmission Clutch 6 Volume Learn
SP0796	Transmission Clutch 6 Return Spring Learn
SP0797	Service Cleaning Procedure
SP0798	Hydraulic System Leak Test
SP0799	Park Brake Pad Life Monitoring Reset
SP079A	Crankshaft Position Reluctor Ring Learned Values Reset
SP079B	Copy Tire Pressure Monitoring Information
SP079C	CO Adjustment
SP079D	Tire Pressure Sensors Manual Learn

SP079E	Flexible Fuel Reset
SP079F	Steering Performance Calibration
SP07A0	Powertrain Compartment Cover Full Open Height Reset
SP07A1	Powertrain Compartment Cover Cycle Counts Reset
SP07A2	Powertrain Compartment Cover Hold Open Counter Reset
SP07A3	Powertrain Compartment Cover Obstacle Counter Reset
SP07A4	Powertrain Compartment Cover Zone Counter Reset
SP07A5	Powertrain Compartment Cover Drive Unit Learn
SP07A6	4WD Low Range Actuator Clutch Learn
SP07A7	Theft Deterrent Relearn VIN Reset
SP07A8	Radio Favorites Reset
SP07A9	Turbocharger Boost Control Initial Position Learn
SP07AA	Fuel System Adaptation Reset
SP07AB	Power Take-Off Operation Mode Settings
SP07AC	Copy and Restore Data
SP07AD	Trailer Tire Pressure Sensor Manual Learn
SP07AE	Clear All Vehicle DTCs
SP07AF	Stop/Start Capacitor Control Module State of Health Reset
SP07B0	Vehicle Variant
SP07B1	Hydraulic Clutch Bleed
SP07B2	Engine Coolant Bypass Valve Position Learn
SP07B3	Set Time and Date
SP07B4	Remove/Reset Module
SP07B5	Temperature Code Index
SP07B6	EGR Cooler Run Time Counter Reset
SP07B7	Rear Differential Clutch Learn Command
SP07B8	Rear Differential Functional Test Command
SP07B9	Drive Motor Position Sensor Offset Reset
SP07BA	Hybrid/Electric Vehicle Battery Pack Capacity Fast Learn
SP07BB	Hybrid/Electric Vehicle Battery Contactor Open Reason History Reset
SP07BC	Hybrid/Electric Vehicle Battery DC Charging Disabled Reset
SP07BD	Hybrid/Electric Vehicle Battery Interface Control Module Over Temperature Reset



SP07BE	Hybrid/Electric Vehicle Battery Interface Control Module Voltage Sensor Circuits High - Low Reset
SP07BF	Hybrid/Electric Vehicle Range Reset
SP07C0	System Isolation / Impact Sensor Fault - Hybrid/Electric Vehicle Battery System Reset
SP07C1	14 Volt Power Module - Rail Overvoltage Exposure Reset
SP07C2	Air Conditioning Electric Compressor - Rail Overvoltage Exposure Reset
SP07C3	Battery Charger Control Module - Rail Overvoltage Exposure Reset
SP07C4	Drive Motor Control Module - Rail Overvoltage Exposure Reset
SP07C5	Drive Motor Control Module 2 - Rail Overvoltage Exposure Reset
SP07C6	Drive Motor Control Module 3 - Rail Overvoltage Exposure Reset
SP07C7	Hybrid/Electric Vehicle Coolant Heater - Rail Overvoltage Exposure Reset
SP07C8	Power Steering Active Pull/Drift Compensation Learn
SP07C9	Particulate Filter Reset Bank 2
SP07CA	Hydraulic System Flush Procedure
SP07CB	Transmission Service Diagnostic Test
SP07CC	Camshaft Position Actuator Learn
SP07CD	Clutch Energy Level History Counter Reset
SP07CE	Timing Belt Life Reset
SP07CF	Reset Camera Alignment Learned Values
SP07D0	Battery Charger Control Module 2 - Rail Overvoltage Exposure Reset
SP07D1	Restore Power Takeoff Factory Settings
SP07D2	Reset Power Takeoff Inhibit and Disengage History