



# Shenzhen Xtooltech Co., Ltd

## GMC Function List V13.40

### Tips and Instructions:

The programming function only supports H6PRO, H6PRO Master Edition products.

\* This feature is new.

√ This feature is supported.

This feature is not supported.

※ This feature is partially supported.

Year	Make	Model Series	System Name	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Actuation Test	Special Functions
2024	GMC	Canyon	Transmission Control Module	√	√	√	√	√	SP0017,SP0033
2024	GMC	Canyon	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	GMC	Canyon	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	GMC	Canyon	Chassis Control Module - Auxiliary	√	√	√	√	√	
2024	GMC	Canyon	Transfer Case Control Module	√	√	√	√	√	SP0037,SP0099,SP0100,SP0776
2024	GMC	Hummer	Brake System Control Module	√	√	√	√	√	SP0768,SP0229,SP0225,SP078E,SP0767,SP0758,SP0090,SP078F,SP0790
2024	GMC	Hummer	Restraints Control Module	√	√	√	√	√	SP0758,SP0134
2024	GMC	Hummer	Body Control Module	√	√	√	√	√	SP0263,SP0226,SP0754,SP0007,SP0129,SP0267
2024	GMC	Hummer	Instrument Panel Cluster Control Module	√	√	√	√	√	
2024	GMC	Hummer	Serial Data Gateway Module	√	√	√			
2024	GMC	Hummer	Drive Motor Control Module 2	√	√	√	√	√	SP07B9
2024	GMC	Hummer	Drive Motor Control Module 3	√	√	√	√		SP07B9
2024	GMC	Hummer	Drive Motor Control Module	√	√	√	√	√	SP07B9,SP0258
2024	GMC	Hummer	Hybrid/EV Powertrain Control Module 1		√	√			
2024	GMC	Hummer	Audio Amplifier	√	√	√	√		
2024	GMC	Hummer	Automated Driving Mapping Module	√	√	√	√	√	
2024	GMC	Hummer	Frontview Camera - Windshield	√	√	√	√		SP0196
2024	GMC	Hummer	Heater and Air Conditioning Auxiliary Control	√	√	√			
2024	GMC	Hummer	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2024	GMC	Hummer	Radio	√	√	√	√	√	SP0269,SP0769
2024	GMC	Hummer	Lighting Control Module	√	√	√	√	√	
2024	GMC	Hummer	Parking Assist Control Module	√	√	√	√	√	
2024	GMC	Hummer	Gear Shift Control Module	√					
2024	GMC	Hummer	Trailer Lamp Control Module	√	√	√	√	√	
2024	GMC	Hummer	Video Processing Module	√	√	√	√		

2024	GMC	Hummer	Wireless Accessory Charging Module	√	√	√	√		
2024	GMC	Hummer	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	GMC	Hummer	Powertrain Compartment Cover Module	√	√	√	√	√	SP07A0,SP07A1,SP07A2,SP07A3,SP07A4,SP07
2024	GMC	Hummer	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	GMC	Hummer	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	GMC	Hummer	Near Field Communication Module	√	√	√	√		
2024	GMC	Hummer	Restraints Occupant Classification System Module - Passenger	√	√	√	√		SP0057
2024	GMC	Hummer	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	GMC	Hummer	Driver Monitoring System Control Module	√	√	√	√		
2024	GMC	Hummer	Image Processing Module 1 - Processor 1	√	√	√	√		
2024	GMC	Hummer	Image Processing Module 1 - Processor 2	√	√	√			SP0758
2024	GMC	Hummer	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	GMC	Hummer	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	GMC	Hummer	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	GMC	Hummer	Short Range Radar Sensor - Right Rear	√	√	√			SP0772
2024	GMC	Hummer	Battery Energy Control Module	√	√	√	√	√	SP07BA,SP0115,SP07B B,SP07BC,SP07BD,SP07BE,SP0123,SP07BF,SP07C0,SP07C1,SP07C2,SP07C3,SP07D0,SP07C4,SP07C5,SP07C6,SP07C7
2024	GMC	Hummer	Battery Energy Control Module 2	√	√	√			
2024	GMC	Hummer	Chassis Control Module - Auxiliary	√	√	√	√	√	
2024	GMC	Hummer	Rear Wheel Steering Control Module	√	√	√	√		
2024	GMC	Hummer	Power Steering Control Module 2	√	√	√	√		
2024	GMC	Hummer	Power Steering Control Module	√	√	√	√		SP0089
2024	GMC	Hummer	Automatic Level Control Module	√	√	√	√	√	SP0785,SP0786,SP0787,SP0788,SP0789,SP078A,SP078B,SP078C,SP078D
2024	GMC	Hummer	Front Side Door Access Control Module - Right	√	√	√	√	√	
2024	GMC	Hummer	Rear Side Door Access Control Module - Left	√	√	√	√	√	
2024	GMC	Hummer	Rear Side Door Access Control Module - Right	√	√	√	√	√	
2024	GMC	Hummer	Suspension Control Module	√	√	√	√	√	

2024	GMC	Sierra	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP075E, SP0760,SP076C,SP0115, SP076D,SP0761,SP0086, SP076E,SP0212,SP0217, SP0006,SP0144,SP0258, SP0139,SP0085,SP0775, SP07A9,SP0779,SP0171, SP0097,SP0221,SP077B, SP077C,SP077D,SP0763 ,SP0764,SP0117,SP0119, SP07D1,SP07D2,SP0150 ,SP0246,SP077E,SP0178 ,SP0180,SP0182,SP0184, SP0186,SP0188,SP0190,
2024	GMC	Sierra	Transmission Control Module	√	√	√	√	√	SP0017,SP0033,SP0016
2024	GMC	Sierra	Brake System Control Module	√	√	√	√	√	SP0768,SP0229,SP0225, SP078E,SP0767,SP0758, SP0090,SP078F,SP0790
2024	GMC	Sierra	Electronic Brake Control Module	√	√	√	√	√	
2024	GMC	Sierra	Restraints Control Module	√	√	√	√	√	SP0758,SP0134
2024	GMC	Sierra	Body Control Module	√	√	√	√	√	SP0263,SP0226,SP0754, SP0007,SP0129,SP0267
2024	GMC	Sierra	Instrument Panel Cluster Control Module	√	√	√	√	√	
2024	GMC	Sierra	Serial Data Gateway Module	√	√	√			
2024	GMC	Sierra	Audio Amplifier	√	√	√	√		
2024	GMC	Sierra	Frontview Camera - Windshield	√	√	√	√		SP0196
2024	GMC	Sierra	Radio	√	√	√	√	√	SP0269,SP0769,SP07A7, SP07A8
2024	GMC	Sierra	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	GMC	Sierra	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2024	GMC	Sierra	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	GMC	Sierra	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	GMC	Sierra	Running Board Control Module	√	√	√	√	√	
2024	GMC	Sierra	Trailer Lamp Control Module	√	√	√	√	√	
2024	GMC	Sierra	Video Processing Module	√	√	√	√		
2024	GMC	Sierra	Wireless Accessory Charging Module	√	√	√	√		
2024	GMC	Sierra	Steering Column Lock Control Module	√	√	√	√		
2024	GMC	Sierra	Side Obstacle Detection Control Module - Left	√	√	√			
2024	GMC	Sierra	Side Obstacle Detection Control Module - Right	√	√	√			
2024	GMC	Sierra	Lighting Control Module	√	√	√	√	√	
2024	GMC	Sierra	Parking Assist Control Module	√	√	√	√	√	
2024	GMC	Sierra	Restraints Occupant Classification System Module - Passenger	√	√	√	√		SP0057

2024	GMC	Sierra	Glow Plug Control Module	√	√	√	√	√	SP0178,SP0180,SP0182, SP0184,SP0186,SP0188, SP0190,SP0192,SP0257
2024	GMC	Sierra	Chassis Control Module - Auxiliary	√	√	√	√	√	
2024	GMC	Sierra	Transfer Case Control Module	√	√	√	√	√	SP0037,SP0099,SP0100, SP0776
2024	GMC	Sierra	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	SP0266
2024	GMC	Sierra	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	SP0266
2024	GMC	Sierra	Automated Driving Mapping Module	√	√	√	√	√	
2024	GMC	Sierra	Video Display - Right Front Seat Back	√	√	√			
2024	GMC	Sierra	Power Steering Control Module	√	√	√	√		SP0089
2024	GMC	Sierra	Suspension Control Module	√	√	√	√	√	
2024	GMC	Sierra	Image Processing Module 1 - Processor 2	√	√	√			SP0758
2024	GMC	Sierra	Image Processing Module 1 - Processor 1	√	√	√	√		
2024	GMC	Sierra	Image Processing Module	√	√	√	√		
2024	GMC	Sierra	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	GMC	Sierra	Driver Monitoring System Control Module	√	√	√			
2024	GMC	Sierra	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	GMC	Sierra	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	GMC	Sierra	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	GMC	Sierra	Short Range Radar Sensor - Right Rear	√	√	√			SP0772
2024	GMC	Sierra	Gear Shift Control Module	√					
2024	GMC	Sierra	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2024	GMC	Sierra	Special Purpose Vehicle Module	√	√	√			
2024	GMC	Terrain	Engine Control Module	√	√	√	√	√	SP0263,SP0156,SP0209, SP0132,SP0147,SP076C, SP0115,SP0086,SP0085, SP0154,SP0213,SP0212, SP0217,SP0006,SP0144, SP0764,SP0763,SP0258, SP0130
2024	GMC	Terrain	Transmission Control Module	√	√	√	√	√	SP0017
2024	GMC	Terrain	Brake System Control Module	√	√	√	√	√	SP0766,SP0758,SP0767, SP0768,SP0229
2024	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	SP0172,SP0134,SP0111, SP0758
2024	GMC	Terrain	Body Control Module	√	√	√	√	√	SP0199,SP0239,SP0161, SP0162,SP0163,SP0164, SP0165,SP0166,SP0167, SP0168,SP0242,SP0263, SP0203,SP0201,SP0208, SP0206,SP0083,SP0267, SP0160,SP0233,SP0159

2024	GMC	Terrain	HVAC Control Module	√	√	√	√	√	SP0007,SP0129
2024	GMC	Terrain	HVAC Controls	√	√	√	√		
2024	GMC	Terrain	Headlamp Control Module	√	√	√	√	√	SP0195
2024	GMC	Terrain	Headlamp High Beam Control Module	√	√	√	√	√	SP0247
2024	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	SP0146,SP0169
2024	GMC	Terrain	Seat Memory Control Module - Driver	√	√	√	√	√	
2024	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	SP0755
2024	GMC	Terrain	Rear Drive Control Module	√	√	√	√	√	SP0003
2024	GMC	Terrain	Video Processing Control Module	√	√	√	√	√	
2024	GMC	Terrain	Frontview Camera - Windshield	√	√	√	√		SP0196,SP0084
2024	GMC	Terrain	Keyless Entry Control Module	√	√	√	√	√	
2024	GMC	Terrain	Passenger Presence Module	√	√	√	√	√	SP0057
2024	GMC	Terrain	Amplifier	√	√	√	√		
2024	GMC	Terrain	Radio	√	√	√	√	√	SP0150,SP0226,SP0269, SP0793,SP0267
2024	GMC	Terrain	Power Steering Control Module	√	√	√	√		SP0081,SP0080,SP0089
2024	GMC	Yukon	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP075E, SP0760,SP076C,SP0115, SP076D,SP0761,SP0086, SP076E,SP0212,SP0217, SP0006,SP0144,SP0258, SP0139,SP0085,SP0775
2024	GMC	Yukon	Transmission Control Module	√	√	√	√	√	SP0017,SP0033,SP0016
2024	GMC	Yukon	Brake System Control Module	√	√	√	√	√	SP0768,SP0229,SP0225, SP078E,SP0767,SP0758, SP0090,SP078F,SP0790
2024	GMC	Yukon	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	GMC	Yukon	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	GMC	Yukon	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	GMC	Yukon	Chassis Control Module - Auxiliary	√	√	√	√		
2024	GMC	Yukon	Transfer Case Control Module	√	√	√	√	√	SP0037,SP0099,SP0100, SP0776
2024	GMC	Yukon	Automatic Level Control Module	√	√	√	√	√	SP0785,SP0786,SP0787, SP0788,SP0789,SP078A, SP078B,SP078C,SP078D
2024	GMC	Yukon	Suspension Control Module	√	√	√	√	√	
2024	GMC	Yukon	Power Steering Control Module	√	√	√	√		SP0089
2024	GMC	Yukon	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	GMC	Yukon	Image Processing Module 1 - Processor 1	√	√	√	√		SP0758,SP0766
2024	GMC	Yukon	Image Processing Module 1 - Processor 2	√	√	√	√		SP07CF
2024	GMC	Yukon	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	GMC	Yukon	Short Range Radar Sensor - Left Rear	√	√	√			SP0772

2024	GMC	Yukon	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	GMC	Yukon	Short Range Radar Sensor - Right Rear	√	√	√			SP0772
2024	GMC	Yukon XL	Engine Control Module	√	√	√	√	√	SP0263,SP0209,SP076C, SP0115,SP0086,SP0085, SP076E,SP0212,SP0217, SP0775,SP0258,SP0139
2024	GMC	Yukon XL	Transmission Control Module	√	√	√	√	√	SP0017,SP0033,SP0016
2024	GMC	Yukon XL	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2024	GMC	Yukon XL	Rear Gate Module	√	√	√	√	√	SP0146,SP0753
2024	GMC	Yukon XL	Telematics Control Module	√	√	√	√		SP0270,SP0755
2024	GMC	Yukon XL	Chassis Control Module - Auxiliary	√	√	√	√		
2024	GMC	Yukon XL	Forward Range Radar Sensor - Long Range	√	√	√	√		SP0260
2024	GMC	Yukon XL	Image Processing Module 1 - Processor 2	√	√	√	√		SP07CF
2024	GMC	Yukon XL	Image Processing Module 1 - Processor 1	√	√	√	√		SP0758,SP0766
2024	GMC	Yukon XL	Short Range Radar Sensor - Left Front	√	√	√			SP0772
2024	GMC	Yukon XL	Short Range Radar Sensor - Left Rear	√	√	√			SP0772
2024	GMC	Yukon XL	Short Range Radar Sensor - Right Front	√	√	√			SP0772
2024	GMC	Yukon XL	Short Range Radar Sensor - Right Rear	√	√	√			SP0772
2024	GMC	Savana	Engine Control Module	√	√	√	√	√	SP0263,SP0156,SP0209, SP0757,SP0076,SP0020, SP0132,SP0067,SP0086, SP0154,SP0212,SP0214, SP0217,SP0258,SP076C, SP0115,SP0088,SP0006, SP0131,SP0130
2024	GMC	Savana	Transmission Control Module	√	√	√	√	√	SP0016,SP0033,SP0024, SP0026,SP0028,SP0030, SP0032,SP0023,SP0025, SP0027,SP0029,SP0031, SP0015
2024	GMC	Savana	Electronic Brake Control Module	√	√	√	√	√	SP0225,SP0111,SP0277, SP0090
2024	GMC	Savana	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	SP0172,SP0261
2024	GMC	Savana	Body Control Module	√	√	√	√	√	SP0263,SP0261
2024	GMC	Savana	Theft Deterrent Module	√	√	√	√		
2024	GMC	Savana	Instrument Cluster	√	√	√	√	√	
2024	GMC	Savana	Remote Control Door Lock Receiver	√	√	√	√	√	SP0204,SP0239,SP0161, SP0162,SP0163,SP0164, SP0159,SP0160,SP079B,
2024	GMC	Savana	Telematics Communication Interface Control Module	√	√	√	√	√	SP0259,SP0048,SP0011, SP0010
2024	GMC	Savana	Frontview Camera - Windshield	√	√	√	√		SP0196
2024	GMC	Savana	Side Obstacle Detection Control Module - Right	√	√	√		√	
2024	GMC	Savana	Side Obstacle Detection Control Module - Left	√	√	√		√	

2024	GMC	Savana	Parking Assist Control Module	√	√	√	√	√	SP0247
2024	GMC	Savana	Steering Wheel Angle Sensor Module	√	√	√			SP0093,SP0090,SP0084
2024	GMC	Savana	Multi-Axis Acceleration Sensor Module	√	√	√			SP0112,SP0111
2023	GMC	Acadia	Engine Control Module	√	√	√	√	√	0209 075E 0760 076C 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0138 0756
2023	GMC	Acadia	Transmission Control Module	√	√	√	√	√	0017
2023	GMC	Acadia	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2023	GMC	Acadia	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2023	GMC	Acadia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	GMC	Acadia	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	GMC	Acadia	Instrument Cluster	√	√	√	√	√	0247
2023	GMC	Acadia	HVAC Control Module	√	√	√	√	√	0007 0129
2023	GMC	Acadia	HVAC Controls	√	√	√	√		
2023	GMC	Acadia	Liftgate Control Module	√	√	√	√	√	0146 0169
2023	GMC	Acadia	Seat Memory Control Module - Driver	√	√	√	√	√	
2023	GMC	Acadia	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	GMC	Acadia	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	GMC	Acadia	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	GMC	Acadia	Serial Data Gateway Module - Processor 1	√	√	√			
2023	GMC	Acadia	Serial Data Gateway Module - Processor 2	√	√	√			
2023	GMC	Acadia	Amplifier	√	√	√	√		
2023	GMC	Acadia	Radio	√	√	√	√	√	0150 0226 0269 0793
2023	GMC	Acadia	Parking Assist Control Module	√	√	√	√	√	0247
2023	GMC	Acadia	Video Processing Control Module	√	√	√	√	√	
2023	GMC	Acadia	Rear Drive Control Module	√	√	√	√	√	0003
2023	GMC	Acadia	Active Safety Control Module	√	√	√	√		
2023	GMC	Acadia	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	GMC	Acadia	Frontview Camera - Windshield	√	√	√	√		0196
2023	GMC	Acadia	Keyless Entry Control Module	√	√	√	√	√	0759
2023	GMC	Acadia	Passenger Presence Module	√	√	√	√	√	0057
2023	GMC	Acadia	Power Steering Control Module	√	√	√	√		0089 0084
2023	GMC	Acadia	Suspension Control Module	√	√	√	√	√	
2023	GMC	Acadia	Steering Column Lock Control Module	√	√	√	√		

2023	GMC	Canyon	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2023	GMC	Canyon	Restraints Control Module	√	√	√	√	√	0758 0134
2023	GMC	Canyon	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	GMC	Canyon	Serial Data Gateway Module	√	√	√			
2023	GMC	Canyon	Telematics Control Module	√	√	√	√		0270 0755
2023	GMC	Canyon	Trailer Lamp Control Module	√	√	√	√	√	
2023	GMC	Canyon	Video Processing Module	√	√	√	√		
2023	GMC	Canyon	Wireless Accessory Charging Module	√	√	√	√		
2023	GMC	Canyon	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	GMC	Canyon	Side Obstacle Detection Control Module - Left	√	√	√			
2023	GMC	Canyon	Side Obstacle Detection Control Module - Right	√	√	√			
2023	GMC	Canyon	Parking Assist Control Module	√	√	√	√	√	
2023	GMC	Canyon	Lighting Control Module	√	√	√	√	√	
2023	GMC	Canyon	Audio Amplifier	√	√	√	√		
2023	GMC	Canyon	Frontview Camera - Windshield	√	√	√	√		0196
2023	GMC	Canyon	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	GMC	Canyon	Radio	√	√	√	√	√	07A8
2023	GMC	Canyon	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	GMC	Canyon	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2023	GMC	Canyon	Chassis Control Module - Auxiliary	√	√	√	√	√	
2023	GMC	Hummer	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2023	GMC	Hummer	Restraints Control Module	√	√	√	√	√	0758 0134
2023	GMC	Hummer	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	GMC	Hummer	Instrument Panel Cluster Control Module	√	√	√	√	√	
2023	GMC	Hummer	Serial Data Gateway Module	√	√	√			
2023	GMC	Hummer	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	GMC	Hummer	Powertrain Compartment Cover Module	√	√	√	√	√	07A0 07A1 07A2 07A3 07A4 07A5
2023	GMC	Hummer	Telematics Control Module	√	√	√	√		0270 0755
2023	GMC	Hummer	Chassis Control Module - Auxiliary	√	√	√	√	√	
2023	GMC	Hummer	Trailer Lamp Control Module	√	√	√	√	√	
2023	GMC	Hummer	Video Processing Module	√	√	√	√		
2023	GMC	Hummer	Wireless Accessory Charging Module	√	√	√	√		
2023	GMC	Hummer	Heater and Air Conditioning Auxiliary Control	√	√	√			
2023	GMC	Hummer	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	GMC	Hummer	Radio	√	√	√	√	√	0269 0769



2023	GMC	Hummer	Rear Gate Module	√	√	√	√	√	0146 0753
2023	GMC	Hummer	Frontview Camera - Windshield	√	√	√	√		0196
2023	GMC	Hummer	Drive Motor Control Module 3	√	√	√	√		07B9
2023	GMC	Hummer	Drive Motor Control Module 2	√	√	√	√	√	07B9
2023	GMC	Hummer	Drive Motor Control Module	√	√	√	√	√	07B9 0258
2023	GMC	Hummer	Parking Assist Control Module	√	√	√	√	√	
2023	GMC	Hummer	Lighting Control Module	√	√	√	√	√	
2023	GMC	Hummer	Gear Shift Control Module	√					
2023	GMC	Hummer	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	GMC	Hummer	Driver Monitoring System Control Module	√	√	√			
2023	GMC	Hummer	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	GMC	Hummer	Image Processing Module 1 - Processor 1	√	√	√	√		
2023	GMC	Hummer	Image Processing Module 1 - Processor 2	√	√	√			0758
2023	GMC	Hummer	Short Range Radar Sensor - Left Front	√	√	√			0772
2023	GMC	Hummer	Short Range Radar Sensor - Right Front	√	√	√			0772
2023	GMC	Hummer	Short Range Radar Sensor - Left Rear	√	√	√			0772
2023	GMC	Hummer	Short Range Radar Sensor - Right Rear	√	√	√			0772
2023	GMC	Hummer	Battery Energy Control Module	√	√	√	√	√	07BA 0115 07BB 07BC 07BD 07BE 0123 07BF 07C0 07C1 07C2 07C3 07C4 07C5 07C6 07C7
2023	GMC	Hummer	Battery Energy Control Module 2	√	√	√			
2023	GMC	Hummer	Audio Amplifier	√	√	√	√		
2023	GMC	Hummer	Automated Driving Mapping Module	√	√	√	√	√	
2023	GMC	Hummer	Near Field Communication Module	√	√	√	√		
2023	GMC	Hummer	Rear Wheel Steering Control Module	√	√	√	√		
2023	GMC	Hummer	Power Steering Control Module	√	√	√	√		0089
2023	GMC	Hummer	Electronic Suspension Control Module	√	√	√	√	√	0198
2023	GMC	Hummer	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2023	GMC	Hummer	Power Steering Control Module 2	√	√	√	√		
2023	GMC	Savana	Engine Control Module	√	√	√	√	√	0263 0156 0209 0757 0076 0020 0132 0067 0086 0154 0212 0214 0217 0258 076C 0115 0088 0086 0131 0132
2023	GMC	Savana	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2023	GMC	Savana	Electronic Brake Control Module	√	√	√	√	√	0225 0111 0277 0090
2023	GMC	Savana	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261

2023	GMC	Savana	Body Control Module	√	√	√	√	√	0263 0261
2023	GMC	Savana	Theft Deterrent Module	√	√	√	√		
2023	GMC	Savana	Instrument Cluster	√	√	√	√	√	
2023	GMC	Savana	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2023	GMC	Savana	Parking Assist Control Module	√	√	√	√	√	0247
2023	GMC	Savana	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	GMC	Savana	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	GMC	Savana	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2023	GMC	Savana	Frontview Camera - Windshield	√	√	√	√		0196
2023	GMC	Savana	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2023	GMC	Savana	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2023	GMC	Sierra	Engine Control Module	√	√	√	√	√	0263 0209 075E 0760 076C 0115 076D 0761 0086 076E 0212 0217 0006 0144 0258 0139 075F 0778 0779 0085 0097 0219 0221 0757 077A 077B 077C 077D 0764 0763 0117 0119 077E 077F 0780 0781 0782 0783 0784 0775 0263 0209 07A9 076C 0115 076D 0058 079A 0045 0044 0086 0088 0097 0219 0221 0792 0757 07AA 0217 0073 0072 0070 0071 0117 0118 0119 0258 077E 0178 0180 0182 0184 0186 0188 0190 0192 0017 0033 0016 0016 0033 0017
2023	GMC	Sierra	Transmission Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2023	GMC	Sierra	Brake System Control Module	√	√	√	√	√	0225 0090 0771 0277 078F 0790
2023	GMC	Sierra	Electronic Brake Control Module	√	√	√	√	√	0172 0134 0111 0758
2023	GMC	Sierra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0758 0134
2023	GMC	Sierra	Restraints Control Module	√	√	√	√	√	

2023	GMC	Sierra	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267 0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0222 0150
2023	GMC	Sierra	Instrument Panel Cluster Control Module	√	√	√	√	√	
2023	GMC	Sierra	Instrument Cluster	√	√	√	√	√	0247
2023	GMC	Sierra	HVAC Control Module	√	√	√	√	√	0007 0129
2023	GMC	Sierra	Serial Data Gateway Module	√	√	√			
2023	GMC	Sierra	Rear Gate Module	√	√	√	√	√	0146 0753
2023	GMC	Sierra	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 07AB 0009 07AC
2023	GMC	Sierra	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2023	GMC	Sierra	Seat Memory Control Module - Driver	√	√	√	√	√	
2023	GMC	Sierra	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	GMC	Sierra	Video Processing Control Module	√	√	√	√	√	
2023	GMC	Sierra	Assist Step Control Module	√	√	√	√	√	
2023	GMC	Sierra	Trailer Lighting Control Module	√	√	√	√	√	
2023	GMC	Sierra	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776 0037 0776 07A6 0099
2023	GMC	Sierra	Parking Assist Control Module	√	√	√	√	√	0247
2023	GMC	Sierra	Serial Data Gateway Module - Processor 1	√	√	√			
2023	GMC	Sierra	Serial Data Gateway Module - Processor 2	√	√	√			
2023	GMC	Sierra	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	GMC	Sierra	Side Obstacle Detection Control Module - Right	√	√	√		√	
2023	GMC	Sierra	Steering Column Lock Control Module	√	√	√	√		
2023	GMC	Sierra	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2023	GMC	Sierra	Frontview Camera - Windshield	√	√	√	√	√	0196 0205 0196 075A
2023	GMC	Sierra	Keyless Entry Control Module	√	√	√	√	√	
2023	GMC	Sierra	Passenger Presence Module	√	√	√	√	√	0057
2023	GMC	Sierra	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2023	GMC	Sierra	Amplifier	√	√	√	√		
2023	GMC	Sierra	Radio	√	√	√	√	√	0269 0769 07A7 07A8 0150 0226 0269 0267
2023	GMC	Sierra	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2023	GMC	Sierra	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	GMC	Sierra	Telematics Control Module	√	√	√	√		0270 0755
2023	GMC	Sierra	Audio Amplifier	√	√	√	√		
2023	GMC	Sierra	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	GMC	Sierra	Running Board Control Module	√	√	√	√	√	

2023	GMC	Sierra	Trailer Lamp Control Module	√	√	√	√	√	
2023	GMC	Sierra	Video Processing Module	√	√	√	√		
2023	GMC	Sierra	Wireless Accessory Charging Module	√	√	√	√		
2023	GMC	Sierra	Automated Driving Mapping Module	√	√	√	√	√	
2023	GMC	Sierra	Video Display - Right Front Seat Back	√	√	√			
2023	GMC	Sierra	Lighting Control Module	√	√	√	√	√	
2023	GMC	Sierra	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2023	GMC	Sierra	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	GMC	Sierra	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2023	GMC	Sierra	Driver Monitoring System Control Module	√	√	√			
2023	GMC	Sierra	Image Processing Module	√	√	√	√		
2023	GMC	Sierra	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	GMC	Sierra	Image Processing Module 1 - Processor 1	√	√	√	√		
2023	GMC	Sierra	Image Processing Module 1 - Processor 2	√	√	√			0758
2023	GMC	Sierra	Short Range Radar Sensor - Left Front	√	√	√			0772
2023	GMC	Sierra	Short Range Radar Sensor - Left Rear	√	√	√			0772
2023	GMC	Sierra	Short Range Radar Sensor - Right Front	√	√	√			0772
2023	GMC	Sierra	Short Range Radar Sensor - Right Rear	√	√	√			0772
2023	GMC	Sierra	Power Steering Control Module	√	√	√	√		0089
2023	GMC	Sierra	Electronic Suspension Control Module	√	√	√	√	√	0198
2023	GMC	Sierra	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2023	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0147 076C 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0764 0763 0258 0130
2023	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0017
2023	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0229 0111
2023	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2023	GMC	Terrain	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2023	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0247
2023	GMC	Terrain	HVAC Control Module	√	√	√	√	√	0007 0129
2023	GMC	Terrain	HVAC Controls	√	√	√	√		
2023	GMC	Terrain	Headlamp Control Module	√	√	√	√	√	0195
2023	GMC	Terrain	Headlamp High Beam Control Module	√	√	√	√	√	0247
2023	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146 0169
2023	GMC	Terrain	Seat Memory Control Module - Driver	√	√	√	√	√	

2023	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2023	GMC	Terrain	Side Obstacle Detection Control Module - Left	√	√	√		√	
2023	GMC	Terrain	Rear Drive Control Module	√	√	√	√	√	0003
2023	GMC	Terrain	Video Processing Control Module	√	√	√	√	√	
2023	GMC	Terrain	Serial Data Gateway Module - Processor 1	√	√	√			
2023	GMC	Terrain	Serial Data Gateway Module - Processor 2	√	√	√			
2023	GMC	Terrain	Amplifier	√	√	√	√		
2023	GMC	Terrain	Radio	√	√	√	√	√	0150 0226 0269 0793
2023	GMC	Terrain	Head-Up Display Module	√	√	√	√	√	
2023	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0247 0271
2023	GMC	Terrain	Steering Column Lock Control Module	√	√	√	√		
2023	GMC	Terrain	Keyless Entry Control Module	√	√	√	√	√	
2023	GMC	Terrain	Passenger Presence Module	√	√	√	√	√	0057
2023	GMC	Terrain	Frontview Camera - Windshield	√	√	√	√		0196 0084
2023	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0080 0089
2023	GMC	Yukon	Engine Control Module	√	√	√	√	√	0263 0209 075E 075F 0778 076C 0115 076D 0779 0086 0085 0097 0221 0757 077A 077B 077C 077D 0764 0763 0117 0119 0258 07CE 077E 077F 0780 0781 0782 0783 0784 076E 0212 0217 0775 0139
2023	GMC	Yukon	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2023	GMC	Yukon	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2023	GMC	Yukon	Restraints Control Module	√	√	√	√	√	0758 0134
2023	GMC	Yukon	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	GMC	Yukon	Instrument Panel Cluster Control Module	√	√	√	√	√	
2023	GMC	Yukon	Serial Data Gateway Module	√	√	√			
2023	GMC	Yukon	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	GMC	Yukon	Rear Gate Module	√	√	√	√	√	0146 0753
2023	GMC	Yukon	Telematics Control Module	√	√	√	√		0270 0755
2023	GMC	Yukon	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2023	GMC	Yukon	Audio Amplifier	√	√	√	√		
2023	GMC	Yukon	Heater and Air Conditioning Auxiliary Control	√	√	√			
2023	GMC	Yukon	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	GMC	Yukon	Radio	√	√	√	√	√	0269 0769
2023	GMC	Yukon	Video Display - Right Front Seat Back	√	√	√			
2023	GMC	Yukon	Frontview Camera - Windshield	√	√	√	√		0196
2023	GMC	Yukon	Chassis Control Module - Auxiliary	√	√	√	√	√	

2023	GMC	Yukon	Wireless Accessory Charging Module	√	√	√	√		
2023	GMC	Yukon	Video Processing Module	√	√	√	√		
2023	GMC	Yukon	Running Board Control Module	√	√	√	√	√	
2023	GMC	Yukon	Trailer Lamp Control Module	√	√	√	√	√	
2023	GMC	Yukon	Differential Control Module	√	√	√	√	√	07B7 07B8
2023	GMC	Yukon	Gear Shift Control Module	√					
2023	GMC	Yukon	Parking Assist Control Module	√	√	√	√	√	
2023	GMC	Yukon	Side Obstacle Detection Control Module - Left	√	√	√			
2023	GMC	Yukon	Side Obstacle Detection Control Module - Right	√	√	√			
2023	GMC	Yukon	Steering Column Lock Control Module	√	√	√	√		
2023	GMC	Yukon	Lighting Control Module	√	√	√	√	√	
2023	GMC	Yukon	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	GMC	Yukon	Image Processing Module	√	√	√	√		
2023	GMC	Yukon	Short Range Radar Sensor - Left Front	√	√	√			0772
2023	GMC	Yukon	Short Range Radar Sensor - Left Rear	√	√	√			0772
2023	GMC	Yukon	Short Range Radar Sensor - Right Front	√	√	√			0772
2023	GMC	Yukon	Short Range Radar Sensor - Right Rear	√	√	√			0772
2023	GMC	Yukon	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2023	GMC	Yukon	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2023	GMC	Yukon	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2023	GMC	Yukon	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2023	GMC	Yukon	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2023	GMC	Yukon	Electronic Suspension Control Module	√	√	√	√	√	0198
2023	GMC	Yukon	Power Steering Control Module	√	√	√	√		0089
2023	GMC	Yukon XL	Engine Control Module	√	√	√	√	√	0263 0209 075E 075F 0778 076C 0115 076D 0779 0086 0085 0097 0221 0757 077A 077B 077C 077D 0764 0763 0117 0119 0258 07CE 077E 077F 0780 0781 0782 0783 0784 076E 0212 0217 0775 0139
2023	GMC	Yukon XL	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2023	GMC	Yukon XL	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2023	GMC	Yukon XL	Restraints Control Module	√	√	√	√	√	0758 0134
2023	GMC	Yukon XL	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2023	GMC	Yukon XL	Instrument Panel Cluster Control Module	√	√	√	√	√	

2023	GMC	Yukon XL	Serial Data Gateway Module	√	√	√			
2023	GMC	Yukon XL	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2023	GMC	Yukon XL	Rear Gate Module	√	√	√	√	√	0146 0753
2023	GMC	Yukon XL	Telematics Control Module	√	√	√	√		0270 0755
2023	GMC	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2023	GMC	Yukon XL	Audio Amplifier	√	√	√	√		
2023	GMC	Yukon XL	Heater and Air Conditioning Auxiliary Control	√	√	√			
2023	GMC	Yukon XL	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2023	GMC	Yukon XL	Radio	√	√	√	√	√	0269 0769
2023	GMC	Yukon XL	Video Display - Right Front Seat Back	√	√	√			
2023	GMC	Yukon XL	Frontview Camera - Windshield	√	√	√	√		0196
2023	GMC	Yukon XL	Chassis Control Module - Auxiliary	√	√	√	√	√	
2023	GMC	Yukon XL	Wireless Accessory Charging Module	√	√	√	√		
2023	GMC	Yukon XL	Video Processing Module	√	√	√	√		
2023	GMC	Yukon XL	Running Board Control Module	√	√	√	√	√	
2023	GMC	Yukon XL	Trailer Lamp Control Module	√	√	√	√	√	
2023	GMC	Yukon XL	Differential Control Module	√	√	√	√	√	07B7 07B8
2023	GMC	Yukon XL	Side Obstacle Detection Control Module - Left	√	√	√			
2023	GMC	Yukon XL	Side Obstacle Detection Control Module - Right	√	√	√			
2023	GMC	Yukon XL	Parking Assist Control Module	√	√	√	√	√	
2023	GMC	Yukon XL	Gear Shift Control Module	√					
2023	GMC	Yukon XL	Lighting Control Module	√	√	√	√	√	
2023	GMC	Yukon XL	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2023	GMC	Yukon XL	Image Processing Module	√	√	√	√		
2023	GMC	Yukon XL	Short Range Radar Sensor - Left Front	√	√	√			0772
2023	GMC	Yukon XL	Short Range Radar Sensor - Left Rear	√	√	√			0772
2023	GMC	Yukon XL	Short Range Radar Sensor - Right Front	√	√	√			0772
2023	GMC	Yukon XL	Short Range Radar Sensor - Right Rear	√	√	√			0772
2023	GMC	Yukon XL	Passenger Seat Adjuster Memory Module	√	√	√	√	√	
2023	GMC	Yukon XL	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2023	GMC	Yukon XL	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2023	GMC	Yukon XL	Steering Column Lock Control Module	√	√	√	√		
2023	GMC	Yukon XL	Power Steering Control Module	√	√	√	√		0089
2023	GMC	Yukon XL	Electronic Suspension Control Module	√	√	√	√	√	0198
2023	GMC	Yukon XL	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D

2022	GMC	Acadia	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 0156 0020 0132 0067 0154 0213 0214 0756
2022	GMC	Acadia	Transmission Control Module	√	√	√	√	√	0017
2022	GMC	Acadia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	GMC	Acadia	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0158
2022	GMC	Acadia	Instrument Cluster	√	√	√	√	√	0247
2022	GMC	Acadia	HVAC Control Module	√	√	√	√	√	0007 0129
2022	GMC	Acadia	HVAC Controls	√	√	√	√		
2022	GMC	Acadia	Liftgate Control Module	√	√	√	√	√	0146 0169
2022	GMC	Acadia	Seat Memory Control Module - Driver	√	√	√	√	√	
2022	GMC	Acadia	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	GMC	Acadia	Amplifier	√	√	√	√		
2022	GMC	Acadia	Radio	√	√	√	√	√	0150 0226 0269 0267
2022	GMC	Acadia	Video Processing Control Module	√	√	√	√	√	
2022	GMC	Acadia	Parking Assist Control Module	√	√	√	√	√	0247
2022	GMC	Acadia	Serial Data Gateway Module - Processor 1	√	√	√			
2022	GMC	Acadia	Serial Data Gateway Module - Processor 2	√	√	√			
2022	GMC	Acadia	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	GMC	Acadia	Side Obstacle Detection Control Module - Right	√	√	√		√	
2022	GMC	Acadia	Steering Column Lock Control Module	√	√	√	√		
2022	GMC	Acadia	Keyless Entry Control Module	√	√	√	√	√	0759
2022	GMC	Acadia	Passenger Presence Module	√	√	√	√	√	0057
2022	GMC	Acadia	Active Safety Control Module	√	√	√	√		
2022	GMC	Acadia	Frontview Camera - Windshield	√	√	√	√		0196
2022	GMC	Acadia	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	GMC	Acadia	Rear Drive Control Module	√	√	√	√	√	0003



2022	GMC	Canyon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 076C 076D 0060 079A 0044 0045 0097 0171 0219 0792 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0756 0085
2022	GMC	Canyon	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2022	GMC	Canyon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2022	GMC	Canyon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2022	GMC	Canyon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	GMC	Canyon	Instrument Cluster	√	√	√	√	√	0247
2022	GMC	Canyon	HVAC Control Module	√	√	√	√	√	0007 0129
2022	GMC	Canyon	HVAC Controls	√	√	√	√		
2022	GMC	Canyon	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	GMC	Canyon	Amplifier	√	√	√	√		
2022	GMC	Canyon	Radio	√	√	√	√	√	0150 0226 0269 0267
2022	GMC	Canyon	Parking Assist Control Module	√	√	√	√	√	0247
2022	GMC	Canyon	Serial Data Gateway Module - Processor 1	√	√	√			
2022	GMC	Canyon	Serial Data Gateway Module - Processor 2	√	√	√			
2022	GMC	Canyon	Passenger Presence Module	√	√	√	√	√	0057
2022	GMC	Canyon	Frontview Camera - Windshield	√	√	√	√	√	0196
2022	GMC	Canyon	Transfer Case Control Module	√	√	√	√	√	0037
2022	GMC	Canyon	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2022	GMC	Canyon	Power Steering Control Module	√	√	√	√		0093 0090
2022	GMC	Hummer	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2022	GMC	Hummer	Restraints Control Module	√	√	√	√	√	0758 0134
2022	GMC	Hummer	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2022	GMC	Hummer	Instrument Panel Cluster Control Module	√	√	√	√	√	
2022	GMC	Hummer	Serial Data Gateway Module	√	√	√			
2022	GMC	Hummer	Telematics Control Module	√	√	√	√		0270
2022	GMC	Hummer	Driver Seat Adjuster Memory Module	√	√	√	√	√	

2022	GMC	Hummer	Chassis Control Module - Auxiliary						
2022	GMC	Hummer	Wireless Accessory Charging Module	√	√	√	√		
2022	GMC	Hummer	Audio Amplifier	√	√	√	√		
2022	GMC	Hummer	Automated Driving Mapping Module	√	√	√	√	√	
2022	GMC	Hummer	Heater and Air Conditioning Auxiliary Control	√	√	√			
2022	GMC	Hummer	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2022	GMC	Hummer	Radio	√	√	√	√	√	0269 0769
2022	GMC	Hummer	Parking Assist Control Module	√	√	√	√	√	
2022	GMC	Hummer	Lighting Control Module	√	√	√	√	√	
2022	GMC	Hummer	Video Processing Module	√	√	√			
2022	GMC	Hummer	Trailer Lamp Control Module	√	√	√	√	√	
2022	GMC	Hummer	UHF Short Range Low Energy Remote Control Access Transceiver	√	√	√	√		
2022	GMC	Hummer	Powertrain Compartment Cover Module	√	√	√	√	√	07A0 07A1 07A2 07A3 07A4 07A5
2022	GMC	Hummer	Steering Column Lock Control Module	√	√	√	√		
2022	GMC	Hummer	Drive Motor Control Module 1		√	√		√	
2022	GMC	Hummer	Image Processing Module 1 - Processor 1	√	√	√	√		
2022	GMC	Hummer	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2022	GMC	Hummer	Image Processing Module 1 - Processor 2	√	√	√			0758
2022	GMC	Hummer	Frontview Camera - Windshield	√	√	√	√		0196
2022	GMC	Hummer	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	GMC	Hummer	Driver Monitoring System Control Module	√	√	√			
2022	GMC	Hummer	Short Range Radar Sensor - Left Front	√	√	√			0772
2022	GMC	Hummer	Short Range Radar Sensor - Left Rear	√	√	√			0772
2022	GMC	Hummer	Short Range Radar Sensor - Right Front	√	√	√			0772
2022	GMC	Hummer	Short Range Radar Sensor - Right Rear	√	√	√			0772
2022	GMC	Hummer	Gear Shift Control Module	√					
2022	GMC	Hummer	Drive Motor Control Module 2		√	√		√	
2022	GMC	Hummer	Drive Motor Control Module 3		√	√		√	
2022	GMC	Hummer	Battery Energy Control Module 1		√	√		√	
2022	GMC	Hummer	Battery Energy Control Module 2		√	√		√	
2022	GMC	Hummer	Electronic Suspension Control Module	√	√	√	√	√	0198
2022	GMC	Hummer	Power Steering Control Module	√	√	√	√		0089
2022	GMC	Hummer	Rear Wheel Steering Control Module	√	√	√			
2022	GMC	Hummer	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D

2022	GMC	Savana	Engine Control Module	√	√	√	√	√	0263 0209 076C 0115 076D 0060 079A 0044 0045 0086 0097 0171 0219 0792 0217 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0156 0076 0020 0132 0067 0154 0212 0214 0258 0757 0006
2022	GMC	Savana	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2022	GMC	Savana	Electronic Brake Control Module	√	√	√	√	√	0225 0111 0277 0090
2022	GMC	Savana	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2022	GMC	Savana	Body Control Module	√	√	√	√	√	0263 0261
2022	GMC	Savana	Theft Deterrent Module	√	√	√	√		
2022	GMC	Savana	Instrument Cluster	√	√	√	√	√	
2022	GMC	Savana	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2022	GMC	Savana	Radio	√	√	√	√	√	
2022	GMC	Savana	Parking Assist Control Module	√	√	√	√	√	0247
2022	GMC	Savana	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	GMC	Savana	Side Obstacle Detection Control Module - Right	√	√	√		√	
2022	GMC	Savana	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2022	GMC	Savana	Frontview Camera - Windshield	√	√	√	√		0196
2022	GMC	Savana	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2022	GMC	Savana	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2022	GMC	Sierra	Engine Control Module	√	√	√	√	√	0263 0209 076C 0115 0086 0217 0006 0131 0258 0139 0067 0212 07A9 076D 0058 079A 0045 0044 0088 0097 0219 0221 0792 0757 07AA 0073 0072 0070 0071 0117 0118 0119 077E 0178 0180 0182 0184 0186 0188 0190
2022	GMC	Sierra	Transmission Control Module	√	√	√	√	√	0016 0033 0017
2022	GMC	Sierra	Brake System Control Module	√	√	√	√	√	0229 0225 0090 0758 0767 0768 078E 078F
2022	GMC	Sierra	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0771 0277 078F 0790
2022	GMC	Sierra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2022	GMC	Sierra	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	GMC	Sierra	Instrument Cluster	√	√	√	√	√	0247
2022	GMC	Sierra	Transfer Case Control Module	√	√	√	√	√	0037 0776 07A6 0099
2022	GMC	Sierra	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2022	GMC	Sierra	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 07AB 0009 07AC
2022	GMC	Sierra	Rear Gate Module	√	√	√	√		
2022	GMC	Sierra	Audio Amplifier	√	√	√	√		
2022	GMC	Sierra	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2022	GMC	Sierra	Radio	√	√	√	√	√	0769 0269
2022	GMC	Sierra	Trailer Lighting Control Module	√	√	√	√	√	
2022	GMC	Sierra	Video Processing Control Module	√	√	√	√	√	
2022	GMC	Sierra	Parking Assist Control Module	√	√	√	√	√	0247
2022	GMC	Sierra	Serial Data Gateway Module - Processor 1	√	√	√			
2022	GMC	Sierra	Serial Data Gateway Module - Processor 2	√	√	√			
2022	GMC	Sierra	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	GMC	Sierra	Side Obstacle Detection Control Module - Right	√	√	√		√	
2022	GMC	Sierra	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2022	GMC	Sierra	Steering Column Lock Control Module	√	√	√	√		
2022	GMC	Sierra	Keyless Entry Control Module	√	√	√	√	√	
2022	GMC	Sierra	Passenger Presence Module	√	√	√	√	√	0057
2022	GMC	Sierra	Assist Step Control Module	√	√	√	√	√	
2022	GMC	Sierra	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A 0084
2022	GMC	Sierra	Seat Memory Control Module - Driver	√	√	√	√	√	
2022	GMC	Sierra	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	GMC	Sierra	Power Steering Control Module	√	√	√	√		0089 0084 0273 0082
2022	GMC	Sierra	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2022	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0114 0250 0130
2022	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0017
2022	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0229 0111
2022	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2022	GMC	Terrain	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2022	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0247
2022	GMC	Terrain	HVAC Control Module	√	√	√	√	√	0007 0129
2022	GMC	Terrain	HVAC Controls	√	√	√	√		
2022	GMC	Terrain	Serial Data Gateway Module	√	√	√			
2022	GMC	Terrain	Headlamp Control Module	√	√	√	√	√	0195
2022	GMC	Terrain	Headlamp High Beam Control Module	√	√	√	√	√	0247
2022	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146 0169
2022	GMC	Terrain	Seat Memory Control Module - Driver	√	√	√	√	√	
2022	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2022	GMC	Terrain	Amplifier	√	√	√	√		
2022	GMC	Terrain	Radio	√	√	√	√	√	0150 0226 0269 0267
2022	GMC	Terrain	Video Processing Control Module	√	√	√	√	√	
2022	GMC	Terrain	Head-Up Display Module	√	√	√	√	√	
2022	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0247 0271
2022	GMC	Terrain	Side Obstacle Detection Control Module - Left	√	√	√		√	
2022	GMC	Terrain	Steering Column Lock Control Module	√	√	√	√		
2022	GMC	Terrain	Keyless Entry Control Module	√	√	√	√	√	
2022	GMC	Terrain	Passenger Presence Module	√	√	√	√	√	0057
2022	GMC	Terrain	Frontview Camera - Windshield	√	√	√	√		0196 0084
2022	GMC	Terrain	Rear Drive Control Module	√	√	√	√	√	0003
2022	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0080 0089
2022	GMC	Yukon	Engine Control Module	√	√	√	√	√	0263 0209 0774 076C 0115 0086 0085 0757 0212 0217 0775 0258 0139 0777 075E 075F 0778 076D 0779 0097 0221 077A 077B 077C 077D 0764 0763 0117 0119 077E 077F 0780 0781 0782 0783 0784
2022	GMC	Yukon	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2022	GMC	Yukon	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2022	GMC	Yukon	Restraints Control Module	√	√	√	√	√	0758 0134
2022	GMC	Yukon	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2022	GMC	Yukon	Instrument Panel Cluster Control Module	√	√	√	√	√	
2022	GMC	Yukon	Serial Data Gateway Module	√	√	√			

2022	GMC	Yukon	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2022	GMC	Yukon	Telematics Control Module	√	√	√	√		0270
2022	GMC	Yukon	Radio	√	√	√	√	√	0769
2022	GMC	Yukon	Audio Amplifier	√	√	√	√		
2022	GMC	Yukon	Video Display - Right Front Seat Back	√	√	√			
2022	GMC	Yukon	Heater and Air Conditioning Auxiliary Control	√	√	√			
2022	GMC	Yukon	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2022	GMC	Yukon	Running Board Control Module	√	√	√	√	√	
2022	GMC	Yukon	Trailer Lamp Control Module	√	√	√	√	√	
2022	GMC	Yukon	Video Processing Module	√	√	√			
2022	GMC	Yukon	Wireless Accessory Charging Module	√	√	√	√		
2022	GMC	Yukon	Rear Gate Module	√	√	√	√		0753
2022	GMC	Yukon	Frontview Camera - Windshield	√	√	√	√		0196
2022	GMC	Yukon	Image Processing Module	√	√	√	√		
2022	GMC	Yukon	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	GMC	Yukon	Short Range Radar Sensor - Left Front	√	√	√			0772
2022	GMC	Yukon	Short Range Radar Sensor - Left Rear	√	√	√			0772
2022	GMC	Yukon	Short Range Radar Sensor - Right Front	√	√	√			0772
2022	GMC	Yukon	Short Range Radar Sensor - Right Rear	√	√	√			0772
2022	GMC	Yukon	Gear Shift Control Module	√					
2022	GMC	Yukon	Lighting Control Module	√	√	√	√	√	
2022	GMC	Yukon	Parking Assist Control Module	√	√	√	√	√	
2022	GMC	Yukon	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2022	GMC	Yukon	Side Obstacle Detection Control Module - Right	√	√	√			
2022	GMC	Yukon	Steering Column Lock Control Module	√	√	√	√		
2022	GMC	Yukon	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2022	GMC	Yukon	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2022	GMC	Yukon	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2022	GMC	Yukon	Chassis Control Module - Auxiliary	√	√	√	√		
2022	GMC	Yukon	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2022	GMC	Yukon	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2022	GMC	Yukon	Electronic Suspension Control Module	√	√	√	√	√	0198
2022	GMC	Yukon	Power Steering Control Module	√	√	√	√		0089

2022	GMC	Yukon XL	Engine Control Module	√	√	√	√	√	0263 0209 0774 076C 0115 0086 0085 0757 0212 0217 0775 0258 0139 0777 075E 075F 0778 076D 0779 0097 0221 077A 077B 077C 077D 0764 0763 0117 0119 077E 077F 0780 0781 0782 0783 0784
2022	GMC	Yukon XL	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2022	GMC	Yukon XL	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2022	GMC	Yukon XL	Restraints Control Module	√	√	√	√	√	0758 0134
2022	GMC	Yukon XL	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2022	GMC	Yukon XL	Instrument Panel Cluster Control Module	√	√	√	√	√	
2022	GMC	Yukon XL	Serial Data Gateway Module	√	√	√			
2022	GMC	Yukon XL	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2022	GMC	Yukon XL	Telematics Control Module	√	√	√	√		0270
2022	GMC	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2022	GMC	Yukon XL	Audio Amplifier	√	√	√	√		
2022	GMC	Yukon XL	Heater and Air Conditioning Auxiliary Control	√	√	√			
2022	GMC	Yukon XL	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2022	GMC	Yukon XL	Radio	√	√	√	√	√	0769
2022	GMC	Yukon XL	Video Display - Right Front Seat Back	√	√	√			
2022	GMC	Yukon XL	Running Board Control Module	√	√	√	√	√	
2022	GMC	Yukon XL	Trailer Lamp Control Module	√	√	√	√	√	
2022	GMC	Yukon XL	Video Processing Module	√	√	√			
2022	GMC	Yukon XL	Wireless Accessory Charging Module	√	√	√	√		
2022	GMC	Yukon XL	Rear Gate Module	√	√	√	√		0753
2022	GMC	Yukon XL	Frontview Camera - Windshield	√	√	√	√		0196
2022	GMC	Yukon XL	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2022	GMC	Yukon XL	Image Processing Module	√	√	√	√		
2022	GMC	Yukon XL	Short Range Radar Sensor - Left Rear	√	√	√			0772
2022	GMC	Yukon XL	Short Range Radar Sensor - Left Front	√	√	√			0772
2022	GMC	Yukon XL	Short Range Radar Sensor - Right Front	√	√	√			0772
2022	GMC	Yukon XL	Short Range Radar Sensor - Right Rear	√	√	√			0772
2022	GMC	Yukon XL	Gear Shift Control Module	√					
2022	GMC	Yukon XL	Parking Assist Control Module	√	√	√	√	√	
2022	GMC	Yukon XL	Lighting Control Module	√	√	√	√	√	
2022	GMC	Yukon XL	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2022	GMC	Yukon XL	Side Obstacle Detection Control Module - Right	√	√	√			
2022	GMC	Yukon XL	Steering Column Lock Control Module	√	√	√	√		

2022	GMC	Yukon XL	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2022	GMC	Yukon XL	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266
2022	GMC	Yukon XL	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2022	GMC	Yukon XL	Chassis Control Module - Auxiliary	√	√	√	√		
2022	GMC	Yukon XL	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2022	GMC	Yukon XL	Electronic Suspension Control Module	√	√	√	√	√	0198
2022	GMC	Yukon XL	Power Steering Control Module	√	√	√	√		0089
2021	GMC	Acadia	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 0156 0020 0132 0067 0154 0213 0214 0756
2021	GMC	Acadia	Transmission Control Module	√	√	√	√	√	0017
2021	GMC	Acadia	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2021	GMC	Acadia	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2021	GMC	Acadia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	GMC	Acadia	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0159
2021	GMC	Acadia	Instrument Cluster	√	√	√	√	√	0247
2021	GMC	Acadia	HVAC Control Module	√	√	√	√	√	0007 0129
2021	GMC	Acadia	HVAC Controls	√	√	√	√		
2021	GMC	Acadia	Liftgate Control Module	√	√	√	√	√	0146 0169
2021	GMC	Acadia	Seat Memory Control Module - Driver	√	√	√	√	√	
2021	GMC	Acadia	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	GMC	Acadia	Video Processing Control Module	√	√	√	√	√	
2021	GMC	Acadia	Parking Assist Control Module	√	√	√	√	√	0247
2021	GMC	Acadia	Serial Data Gateway Module - Processor 1	√	√	√			
2021	GMC	Acadia	Serial Data Gateway Module - Processor 2	√	√	√			
2021	GMC	Acadia	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	GMC	Acadia	Steering Column Lock Control Module	√	√	√	√		
2021	GMC	Acadia	Keyless Entry Control Module	√	√	√	√	√	0759
2021	GMC	Acadia	Passenger Presence Module	√	√	√	√	√	0057
2021	GMC	Acadia	Active Safety Control Module	√	√	√	√		
2021	GMC	Acadia	Forward Range Radar Sensor - Long Range	√	√	√	√		0260



2021	GMC	Acadia	Frontview Camera - Windshield	√	√	√	√		0196
2021	GMC	Acadia	Power Steering Control Module	√	√	√	√		0089 0084
2021	GMC	Acadia	Suspension Control Module	√	√	√	√	√	
2021	GMC	Acadia	Rear Drive Control Module	√	√	√	√	√	0003
2021	GMC	Acadia	Radio	√	√	√	√	√	0150 0226 0269 0267
2021	GMC	Acadia	Amplifier	√	√	√	√		
2021	GMC	Acadia	Side Obstacle Detection Control Module - Right	√	√	√		√	
2021	GMC	Canyon	Engine Control Module	√	√	√	√	√	0263 0209 0115 0756 0086 0085 0757 0217 0258 0139 0006 076C 076D 0060 079A 0044 0045 0097 0171 0219 0792 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0156 0020 0132 0067 0154
2021	GMC	Canyon	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2021	GMC	Canyon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2021	GMC	Canyon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	GMC	Canyon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	GMC	Canyon	Instrument Cluster	√	√	√	√	√	0247
2021	GMC	Canyon	HVAC Control Module	√	√	√	√	√	0007 0129
2021	GMC	Canyon	HVAC Controls	√	√	√	√	√	
2021	GMC	Canyon	Parking Assist Control Module	√	√	√	√	√	0247
2021	GMC	Canyon	Passenger Presence Module	√	√	√	√	√	0057
2021	GMC	Canyon	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	GMC	Canyon	Amplifier	√	√	√	√		
2021	GMC	Canyon	Radio	√	√	√	√	√	0150 0226 0269 0267
2021	GMC	Canyon	Frontview Camera - Windshield	√	√	√	√	√	0196
2021	GMC	Canyon	Power Steering Control Module	√	√	√	√		0093 0090
2021	GMC	Canyon	Transfer Case Control Module	√	√	√	√	√	0037
2021	GMC	Canyon	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2021	GMC	Canyon	Serial Data Gateway Module - Processor 1	√	√	√			
2021	GMC	Canyon	Serial Data Gateway Module - Processor 2	√	√	√			

2021	GMC	Savana	Engine Control Module	√	√	√	√	√	0263 0209 076C 0115 076D 0060 079A 0044 0045 0086 0097 0171 0219 0792 0217 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0156 0076 0020 0132 0067 0154 0212 0214 0258 0757 0006
2021	GMC	Savana	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2021	GMC	Savana	Electronic Brake Control Module	√	√	√	√	√	0225 0111 0277 0090
2021	GMC	Savana	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2021	GMC	Savana	Body Control Module	√	√	√	√	√	0263 0261
2021	GMC	Savana	Theft Deterrent Module	√	√	√	√		
2021	GMC	Savana	Instrument Cluster	√	√	√	√	√	
2021	GMC	Savana	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2021	GMC	Savana	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2021	GMC	Savana	Parking Assist Control Module	√	√	√	√	√	0247
2021	GMC	Savana	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	GMC	Savana	Side Obstacle Detection Control Module - Right	√	√	√		√	
2021	GMC	Savana	Frontview Camera - Windshield	√	√	√	√		0196
2021	GMC	Savana	Radio	√	√	√	√	√	
2021	GMC	Savana	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2021	GMC	Sierra	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 075F 0216 07A9 076C 076D 0058 0097 0219 0221 0792 0215 077A 0073 0072 0070 0071 0117 0119 077E 0178 0180 0182 0184 0186 0188 0246 0131 0067 079A 0045 0044 0088 07AA 0118
2021	GMC	Sierra	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031

2021	GMC	Sierra	Brake System Control Module	√	√	√	√	√	0229 0225 0090 0758 0767 0768 078E 078F
2021	GMC	Sierra	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0771 0277 078F 0790
2021	GMC	Sierra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	GMC	Sierra	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	GMC	Sierra	Instrument Cluster	√	√	√	√	√	0247
2021	GMC	Sierra	HVAC Control Module	√	√	√	√	√	0007 0129
2021	GMC	Sierra	HVAC Controls	√	√	√	√		
2021	GMC	Sierra	Power Steering Control Module	√	√	√	√		0089 0084 0273 0082
2021	GMC	Sierra	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2021	GMC	Sierra	Suspension Control Module	√	√	√	√	√	
2021	GMC	Sierra	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2021	GMC	Sierra	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 07AB 0009 07AC
2021	GMC	Sierra	Assist Step Control Module	√	√	√	√	√	
2021	GMC	Sierra	Trailer Lighting Control Module	√	√	√	√	√	
2021	GMC	Sierra	Parking Assist Control Module	√	√	√	√	√	0247
2021	GMC	Sierra	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	GMC	Sierra	Side Obstacle Detection Control Module - Right	√	√	√		√	
2021	GMC	Sierra	Serial Data Gateway Module - Processor 1	√	√	√			
2021	GMC	Sierra	Serial Data Gateway Module - Processor 2	√	√	√			
2021	GMC	Sierra	Steering Column Lock Control Module	√	√	√	√		
2021	GMC	Sierra	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2021	GMC	Sierra	Video Processing Control Module	√	√	√	√	√	
2021	GMC	Sierra	Keyless Entry Control Module	√	√	√	√	√	
2021	GMC	Sierra	Passenger Presence Module	√	√	√	√	√	0057
2021	GMC	Sierra	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A 0084
2021	GMC	Sierra	Rear Gate Module	√	√	√	√		
2021	GMC	Sierra	Seat Memory Control Module - Driver	√	√	√	√	√	
2021	GMC	Sierra	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	GMC	Sierra	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2021	GMC	Sierra	Transfer Case Control Module	√	√	√	√	√	0037 0776 07A6 0099
2021	GMC	Sierra	Radio	√	√	√	√	√	0150 0226 0269 0267
2021	GMC	Sierra	Amplifier	√	√	√	√		

2021	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 075D 075E 0760 0761 0757 0764 0762
2021	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0017
2021	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0229 0111
2021	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2021	GMC	Terrain	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2021	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0247
2021	GMC	Terrain	HVAC Control Module	√	√	√	√	√	0007 0129
2021	GMC	Terrain	HVAC Controls	√	√	√	√		
2021	GMC	Terrain	Serial Data Gateway Module	√	√	√			
2021	GMC	Terrain	Video Processing Control Module	√	√	√	√	√	
2021	GMC	Terrain	Headlamp Control Module	√	√	√	√	√	0195
2021	GMC	Terrain	Headlamp High Beam Control Module	√	√	√	√	√	0247
2021	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146 0169
2021	GMC	Terrain	Seat Memory Control Module - Driver	√	√	√	√	√	
2021	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2021	GMC	Terrain	Frontview Camera - Windshield	√	√	√	√		0196 0084
2021	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0080 0089
2021	GMC	Terrain	Keyless Entry Control Module	√	√	√	√	√	
2021	GMC	Terrain	Passenger Presence Module	√	√	√	√	√	0057
2021	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0247 0271
2021	GMC	Terrain	Steering Column Lock Control Module	√	√	√	√		
2021	GMC	Terrain	Side Obstacle Detection Control Module - Left	√	√	√		√	
2021	GMC	Terrain	Head-Up Display Module	√	√	√	√	√	
2021	GMC	Terrain	Radio	√	√	√	√	√	0150 0226 0269 0267
2021	GMC	Terrain	Amplifier	√	√	√	√		
2021	GMC	Terrain	Rear Drive Control Module	√	√	√	√	√	0003

2021	GMC	Yukon	Engine Control Module	√	√	√	√	√	0263 0209 0777 075E 075F 0778 076C 0115 076D 0779 0086 0085 0097 0221 077A 077B 077C 077D 0764 0763 0117 0119 0258 077E 077F 0780 0781 0782 0783 0784 0774 0757 0212 0217 0775 0139
2021	GMC	Yukon	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2021	GMC	Yukon	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2021	GMC	Yukon	Restraints Control Module	√	√	√	√	√	0758 0134
2021	GMC	Yukon	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2021	GMC	Yukon	Instrument Panel Cluster Control Module	√	√	√	√	√	
2021	GMC	Yukon	Serial Data Gateway Module	√	√	√			
2021	GMC	Yukon	Video Processing Module	√	√	√			
2021	GMC	Yukon	Electronic Suspension Control Module	√	√	√	√	√	0198
2021	GMC	Yukon	Power Steering Control Module	√	√	√	√		0089
2021	GMC	Yukon	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2021	GMC	Yukon	Wireless Accessory Charging Module	√	√	√	√		
2021	GMC	Yukon	Gear Shift Control Module	√					
2021	GMC	Yukon	Lighting Control Module	√	√	√	√	√	
2021	GMC	Yukon	Parking Assist Control Module	√	√	√	√	√	
2021	GMC	Yukon	Trailer Lamp Control Module	√	√	√	√	√	
2021	GMC	Yukon	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2021	GMC	Yukon	Rear Gate Module	√	√	√	√		0753
2021	GMC	Yukon	Image Processing Module	√	√	√	√		
2021	GMC	Yukon	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	GMC	Yukon	Frontview Camera - Windshield	√	√	√	√		0196
2021	GMC	Yukon	Audio Amplifier	√	√	√	√		
2021	GMC	Yukon	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2021	GMC	Yukon	Radio	√	√	√	√	√	0269 0769 07A7 07A8
2021	GMC	Yukon	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2021	GMC	Yukon	Running Board Control Module	√	√	√	√	√	
2021	GMC	Yukon	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2021	GMC	Yukon	Side Obstacle Detection Control Module - Right	√	√	√			
2021	GMC	Yukon	Steering Column Lock Control Module	√	√	√	√		
2021	GMC	Yukon	Chassis Control Module - Auxiliary	√	√	√	√		
2021	GMC	Yukon	Video Display - Right Front Seat Back	√	√	√			

2021	GMC	Yukon	Short Range Radar Sensor - Left Front	√	√	√			0772
2021	GMC	Yukon	Short Range Radar Sensor - Left Rear	√	√	√			0772
2021	GMC	Yukon	Short Range Radar Sensor - Right Front	√	√	√			0772
2021	GMC	Yukon	Short Range Radar Sensor - Right Rear	√	√	√			0772
2021	GMC	Yukon	Differential Control Module	√	√	√	√	√	
2021	GMC	Yukon	Heater and Air Conditioning Auxiliary Control	√	√	√			
2021	GMC	Yukon	Radio Controls	√	√	√	√		
2021	GMC	Yukon	Telematics Control Module	√	√	√	√		0270
2021	GMC	Yukon	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2021	GMC	Yukon XL	Engine Control Module	√	√	√	√	√	0263 0209 0777 075E 075F 0778 076C 0115 076D 0779 0086 0085 0097 0221 077A 077B 077C 077D 0764 0763 0117 0119 0258 077E 077F 0780 0781 0782 0783 0784 0774 0757 0212 0217 0775 0139
2021	GMC	Yukon XL	Transmission Control Module	√	√	√	√	√	0017 0033 0016
2021	GMC	Yukon XL	Brake System Control Module	√	√	√	√	√	0768 0229 0225 078E 0767 0758 0090 078F
2021	GMC	Yukon XL	Restraints Control Module	√	√	√	√	√	0758 0134
2021	GMC	Yukon XL	Body Control Module	√	√	√	√	√	0263 0226 0754 0007 0129 0267
2021	GMC	Yukon XL	Instrument Panel Cluster Control Module	√	√	√	√	√	
2021	GMC	Yukon XL	Serial Data Gateway Module	√	√	√			
2021	GMC	Yukon XL	Wireless Accessory Charging Module	√	√	√	√		
2021	GMC	Yukon XL	Video Processing Module	√	√	√			
2021	GMC	Yukon XL	Trailer Lamp Control Module	√	√	√	√	√	
2021	GMC	Yukon XL	Driver Seat Adjuster Memory Module	√	√	√	√	√	
2021	GMC	Yukon XL	Rear Gate Module	√	√	√	√		0753
2021	GMC	Yukon XL	Automatic Level Control Module	√	√	√	√	√	0785 0786 0787 0788 0789 078A 078B 078C 0245 078D
2021	GMC	Yukon XL	Electronic Suspension Control Module	√	√	√	√	√	0198
2021	GMC	Yukon XL	Power Steering Control Module	√	√	√	√		0089
2021	GMC	Yukon XL	Frontview Camera - Windshield	√	√	√	√		0196
2021	GMC	Yukon XL	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2021	GMC	Yukon XL	Image Processing Module	√	√	√	√		
2021	GMC	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0037 0100 0776
2021	GMC	Yukon XL	Running Board Control Module	√	√	√	√	√	
2021	GMC	Yukon XL	Front Seat Belt Retractor Motor - Left	√	√	√	√	√	0266

2021	GMC	Yukon XL	Front Seat Belt Retractor Motor - Right	√	√	√	√	√	0266
2021	GMC	Yukon XL	Lighting Control Module	√	√	√	√	√	
2021	GMC	Yukon XL	Side Obstacle Detection Control Module - Left	√	√	√	√		076F
2021	GMC	Yukon XL	Side Obstacle Detection Control Module - Right	√	√	√			
2021	GMC	Yukon XL	Steering Column Lock Control Module	√	√	√	√		
2021	GMC	Yukon XL	Parking Assist Control Module	√	√	√	√	√	
2021	GMC	Yukon XL	Gear Shift Control Module	√					
2021	GMC	Yukon XL	Chassis Control Module - Auxiliary	√	√	√	√		
2021	GMC	Yukon XL	Radio	√	√	√	√	√	0269 0769 07A7 07A8
2021	GMC	Yukon XL	Heater and Air Conditioning User Interface Control -	√	√	√	√		
2021	GMC	Yukon XL	Video Display - Right Front Seat Back	√	√	√			
2021	GMC	Yukon XL	Short Range Radar Sensor - Left Front	√	√	√			0772
2021	GMC	Yukon XL	Short Range Radar Sensor - Left Rear	√	√	√			0772
2021	GMC	Yukon XL	Short Range Radar Sensor - Right Front	√	√	√			0772
2021	GMC	Yukon XL	Short Range Radar Sensor - Right Rear	√	√	√			0772
2021	GMC	Yukon XL	Differential Control Module	√	√	√	√	√	
2021	GMC	Yukon XL	Heater and Air Conditioning Auxiliary Control	√	√	√			
2021	GMC	Yukon XL	Radio Controls	√	√	√	√		
2021	GMC	Yukon XL	Telematics Control Module	√	√	√	√		0270
2021	GMC	Yukon XL	Restraints Occupant Classification System Module - Passenger	√	√	√	√		0057
2021	GMC	Yukon XL	Audio Amplifier	√	√	√	√		
2020	GMC	Acadia	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 0156 0020 0132 0067 0154 0213 0214 0756 0236
2020	GMC	Acadia	Transmission Control Module	√	√	√	√	√	0017
2020	GMC	Acadia	Brake System Control Module	√	√	√	√	√	0090 0758 0768 0767 078E 0225 0229 078F
2020	GMC	Acadia	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2020	GMC	Acadia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	GMC	Acadia	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	GMC	Acadia	Instrument Cluster	√	√	√	√	√	0247
2020	GMC	Acadia	HVAC Control Module	√	√	√	√	√	0007 0129
2020	GMC	Acadia	HVAC Controls	√	√	√	√	√	
2020	GMC	Acadia	Video Processing Control Module	√	√	√	√	√	

2020	GMC	Acadia	Serial Data Gateway Module - Processor 1	√	√	√			
2020	GMC	Acadia	Serial Data Gateway Module - Processor 2	√	√	√			
2020	GMC	Acadia	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	GMC	Acadia	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	GMC	Acadia	Parking Assist Control Module	√	√	√	√	√	0247
2020	GMC	Acadia	Side Object Sensor Module - Left	√	√	√		√	
2020	GMC	Acadia	Steering Column Lock Control Module	√	√	√	√		
2020	GMC	Acadia	Active Safety Control Module	√	√	√	√		
2020	GMC	Acadia	Frontview Camera - Windshield	√	√	√	√		0196
2020	GMC	Acadia	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	GMC	Acadia	Power Steering Control Module	√	√	√	√		0089 0084
2020	GMC	Acadia	Suspension Control Module	√	√	√	√	√	
2020	GMC	Acadia	Keyless Entry Control Module	√	√	√	√	√	0759
2020	GMC	Acadia	Passenger Presence Module	√	√	√	√	√	0057
2020	GMC	Acadia	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	GMC	Acadia	Amplifier	√	√	√	√		
2020	GMC	Acadia	Radio	√	√	√	√	√	0150 0226 0269 0267
2020	GMC	Acadia	Rear Drive Control Module	√	√	√	√	√	0003
2020	GMC	Canyon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0006 0756 0085 0236 076C 076D 0060 079A 0044 0045 0097 0171 0219 0792 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180
2020	GMC	Canyon	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2020	GMC	Canyon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2020	GMC	Canyon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	GMC	Canyon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	GMC	Canyon	Instrument Cluster	√	√	√	√	√	0247
2020	GMC	Canyon	HVAC Control Module	√	√	√	√	√	0007 0129
2020	GMC	Canyon	HVAC Controls	√	√	√	√	√	
2020	GMC	Canyon	Serial Data Gateway Module	√	√	√			
2020	GMC	Canyon	Trailer Lighting Control Module	√	√	√	√	√	0247



2020	GMC	Canyon	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	GMC	Canyon	Power Steering Control Module	√	√	√	√		0093 0090
2020	GMC	Canyon	Frontview Camera - Windshield	√	√	√	√	√	0196
2020	GMC	Canyon	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2020	GMC	Canyon	Transfer Case Control Module	√	√	√	√	√	0037
2020	GMC	Canyon	Amplifier	√	√	√	√		
2020	GMC	Canyon	Radio	√	√	√	√	√	0150 0226 0269 0267
2020	GMC	Canyon	Passenger Presence Module	√	√	√	√	√	0057
2020	GMC	Canyon	Parking Assist Control Module	√	√	√	√	√	0247
2020	GMC	Savana	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0212 0214 0217 0258 0088 0139 076C 0115 076D 0060 079A 0044 0045 0097 0171 0219 0792 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184
2020	GMC	Savana	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2020	GMC	Savana	Electronic Brake Control Module	√	√	√	√	√	0225 0111 0277 0090
2020	GMC	Savana	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2020	GMC	Savana	Body Control Module	√	√	√	√	√	0263 0261
2020	GMC	Savana	Theft Deterrent Module	√	√	√	√		
2020	GMC	Savana	Instrument Cluster	√	√	√	√	√	
2020	GMC	Savana	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	GMC	Savana	Frontview Camera - Windshield	√	√	√	√		0196
2020	GMC	Savana	Side Object Sensor Module - Left	√	√	√		√	
2020	GMC	Savana	Side Object Sensor Module - Right	√	√	√		√	
2020	GMC	Savana	Parking Assist Control Module	√	√	√	√	√	0247
2020	GMC	Savana	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2020	GMC	Savana	Digital Radio Receiver Control Module	√	√	√	√	√	0247
2020	GMC	Savana	Radio	√	√	√	√	√	
2020	GMC	Savana	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2020	GMC	Savana	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2020	GMC	Savana	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111

2020	GMC	Sierra	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 076C 0131 0067 07A9 076D 0058 079A 0045 0044 0088 0097 0219 0221 0792 07AA 0073 0072 0070 0071 0117 0118 0119 077E 0178 0180 0182 0184 0186 0188 0190 0192 0246 0214 075F
2020	GMC	Sierra	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2020	GMC	Sierra	Brake System Control Module	√	√	√	√	√	0229 0225 0090 0758 0767 0768 078E 078F
2020	GMC	Sierra	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0771 0277 078F 0790
2020	GMC	Sierra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	GMC	Sierra	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	GMC	Sierra	Instrument Cluster	√	√	√	√	√	0247
2020	GMC	Sierra	HVAC Control Module	√	√	√	√	√	0007 0129
2020	GMC	Sierra	HVAC Controls	√	√	√	√	√	
2020	GMC	Sierra	Trailer Lighting Control Module	√	√	√	√	√	
2020	GMC	Sierra	Parking Assist Control Module	√	√	√	√	√	0247
2020	GMC	Sierra	Steering Column Lock Control Module	√	√	√	√		
2020	GMC	Sierra	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2020	GMC	Sierra	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A 0084
2020	GMC	Sierra	Keyless Entry Control Module	√	√	√	√	√	
2020	GMC	Sierra	Passenger Presence Module	√	√	√	√	√	0057
2020	GMC	Sierra	Transfer Case Control Module	√	√	√	√	√	0037 0776 07A6 0099
2020	GMC	Sierra	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2020	GMC	Sierra	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 07AB 0009 07AC
2020	GMC	Sierra	Power Steering Control Module	√	√	√	√		0089 0084 0273 0082
2020	GMC	Sierra	Suspension Control Module	√	√	√	√	√	

2020	GMC	Sierra	Serial Data Gateway Module - Processor 1	√	√	√			
2020	GMC	Sierra	Serial Data Gateway Module - Processor 2	√	√	√			
2020	GMC	Sierra	Video Processing Control Module	√	√	√	√	√	
2020	GMC	Sierra	Rear Gate Module	√	√	√	√		
2020	GMC	Sierra	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	GMC	Sierra	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	GMC	Sierra	Amplifier	√	√	√	√		
2020	GMC	Sierra	Radio	√	√	√	√	√	0150 0226 0269 0267
2020	GMC	Sierra	Forward Range Radar Sensor - Long Range	√	√	√	√		0260
2020	GMC	Sierra	Side Object Sensor Module - Left	√	√	√		√	
2020	GMC	Sierra	Side Object Sensor Module - Right	√	√	√		√	
2020	GMC	Sierra	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2020	GMC	Sierra	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2020	GMC	Sierra	Assist Step Control Module	√	√	√	√	√	
2020	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0076 0147 0236 0222 076D 079A 0044 0045 0171 0219 0792 0109 0074 0075 0072 0073 0070 0071 0119 0117 077E
2020	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0017 0036
2020	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0229 0111
2020	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	GMC	Terrain	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0247
2020	GMC	Terrain	HVAC Control Module	√	√	√	√	√	0007 0129
2020	GMC	Terrain	HVAC Controls	√	√	√	√	√	
2020	GMC	Terrain	Serial Data Gateway Module	√	√	√			
2020	GMC	Terrain	Video Processing Control Module	√	√	√	√	√	
2020	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2020	GMC	Terrain	Keyless Entry Control Module	√	√	√	√	√	
2020	GMC	Terrain	Passenger Presence Module	√	√	√	√	√	0057
2020	GMC	Terrain	Frontview Camera - Windshield	√	√	√	√		0196 0084

2020	GMC	Terrain	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	GMC	Terrain	Headlamp Control Module	√	√	√	√	√	0195
2020	GMC	Terrain	Headlamp High Beam Control Module	√	√	√	√	√	0247
2020	GMC	Terrain	Amplifier	√	√	√	√		
2020	GMC	Terrain	Radio Controls	√	√	√	√		0241
2020	GMC	Terrain	Radio	√	√	√	√	√	0150 0226 0269 0267
2020	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0080 0089
2020	GMC	Terrain	Side Object Sensor Module - Left	√	√	√		√	
2020	GMC	Terrain	Rear Drive Control Module	√	√	√	√	√	0003
2020	GMC	Terrain	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2020	GMC	Yukon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2020	GMC	Yukon	Transmission Control Module	√	√	√	√	√	0016 0017
2020	GMC	Yukon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2020	GMC	Yukon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	GMC	Yukon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	GMC	Yukon	Instrument Cluster	√	√	√	√	√	0247
2020	GMC	Yukon	HVAC Control Module	√	√	√	√	√	0007 0129
2020	GMC	Yukon	HVAC Controls	√	√	√	√	√	
2020	GMC	Yukon	Serial Data Gateway Module	√	√	√			
2020	GMC	Yukon	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	GMC	Yukon	Video Processing Control Module	√	√	√	√	√	
2020	GMC	Yukon	Power Steering Control Module	√	√	√	√	√	0150
2020	GMC	Yukon	Suspension Control Module	√	√	√	√	√	0245
2020	GMC	Yukon	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	GMC	Yukon	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	GMC	Yukon	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	GMC	Yukon	Keyless Entry Control Module	√	√	√	√	√	0759
2020	GMC	Yukon	Passenger Presence Module	√	√	√	√	√	0057
2020	GMC	Yukon	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2020	GMC	Yukon	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2020	GMC	Yukon	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	GMC	Yukon	Side Object Sensor Module - Left	√	√	√		√	
2020	GMC	Yukon	Side Object Sensor Module - Right	√	√	√		√	
2020	GMC	Yukon	Steering Column Lock Control Module	√	√	√	√		
2020	GMC	Yukon	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2020	GMC	Yukon	Active Safety Control Module	√	√	√	√	√	

2020	GMC	Yukon	Frontview Camera - Windshield	√	√	√	√		0196 075A
2020	GMC	Yukon	Distance Sensing Cruise Control Module	√	√	√	√		0047
2020	GMC	Yukon	Parking Brake Control Module	√	√	√	√	√	0229
2020	GMC	Yukon	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	GMC	Yukon	Seat Memory Control Module - Passenger	√	√	√	√	√	
2020	GMC	Yukon	Assist Step Control Module	√	√	√	√	√	
2020	GMC	Yukon	Amplifier	√	√	√	√		
2020	GMC	Yukon	Human Machine Interface Control Module	√	√	√	√	√	0150
2020	GMC	Yukon	Media Disc Player	√	√	√	√	√	
2020	GMC	Yukon	Radio	√	√	√	√	√	0226 0150
2020	GMC	Yukon	Radio Controls	√	√	√	√		0241
2020	GMC	Yukon	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2020	GMC	Yukon	Transfer Case Control Module	√	√	√	√	√	0037
2020	GMC	Yukon XL	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2020	GMC	Yukon XL	Transmission Control Module	√	√	√	√	√	0016 0017
2020	GMC	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2020	GMC	Yukon XL	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2020	GMC	Yukon XL	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2020	GMC	Yukon XL	Instrument Cluster	√	√	√	√	√	0247
2020	GMC	Yukon XL	HVAC Control Module	√	√	√	√	√	0007 0129
2020	GMC	Yukon XL	HVAC Controls	√	√	√	√	√	
2020	GMC	Yukon XL	Serial Data Gateway Module	√	√	√			
2020	GMC	Yukon XL	Trailer Lighting Control Module	√	√	√	√	√	0247
2020	GMC	Yukon XL	Video Processing Control Module	√	√	√	√	√	
2020	GMC	Yukon XL	Power Steering Control Module	√	√	√	√	√	0150
2020	GMC	Yukon XL	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2020	GMC	Yukon XL	Suspension Control Module	√	√	√	√	√	0245
2020	GMC	Yukon XL	Liftgate Control Module	√	√	√	√	√	0146 0169
2020	GMC	Yukon XL	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2020	GMC	Yukon XL	Passenger Presence Module	√	√	√	√		
2020	GMC	Yukon XL	Keyless Entry Control Module	√	√	√	√	√	0759
2020	GMC	Yukon XL	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2020	GMC	Yukon XL	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2020	GMC	Yukon XL	Parking Assist Control Module	√	√	√	√	√	0247 0271
2020	GMC	Yukon XL	Side Object Sensor Module - Left	√	√	√		√	
2020	GMC	Yukon XL	Side Object Sensor Module - Right	√	√	√		√	

2020	GMC	Yukon XL	Steering Column Lock Control Module	√	√	√	√		
2020	GMC	Yukon XL	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2020	GMC	Yukon XL	Active Safety Control Module	√	√	√	√	√	
2020	GMC	Yukon XL	Distance Sensing Cruise Control Module	√	√	√	√		0047
2020	GMC	Yukon XL	Frontview Camera - Windshield	√	√	√	√		0196 075A
2020	GMC	Yukon XL	Parking Brake Control Module	√	√	√	√	√	0229
2020	GMC	Yukon XL	Seat Memory Control Module - Driver	√	√	√	√	√	
2020	GMC	Yukon XL	Seat Memory Control Module - Passenger	√	√	√	√	√	
2020	GMC	Yukon XL	Assist Step Control Module	√	√	√	√	√	
2020	GMC	Yukon XL	Amplifier	√	√	√	√		
2020	GMC	Yukon XL	Human Machine Interface Control Module	√	√	√	√	√	0150
2020	GMC	Yukon XL	Media Disc Player	√	√	√	√	√	
2020	GMC	Yukon XL	Radio	√	√	√	√	√	0226 0150
2020	GMC	Yukon XL	Radio Controls	√	√	√	√		0241
2020	GMC	Yukon XL	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2020	GMC	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0037
2019	GMC	Acadia	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0006 0756 0005 0006
2019	GMC	Acadia	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2019	GMC	Acadia	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2019	GMC	Acadia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	GMC	Acadia	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	GMC	Acadia	Instrument Cluster	√	√	√	√	√	0247
2019	GMC	Acadia	HVAC Control Module	√	√	√	√	√	0007 0129
2019	GMC	Acadia	HVAC Controls	√	√	√	√	√	
2019	GMC	Acadia	Serial Data Gateway Module	√	√	√			
2019	GMC	Acadia	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	GMC	Acadia	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	GMC	Acadia	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	GMC	Acadia	Frontview Camera - Windshield	√	√	√	√		0196
2019	GMC	Acadia	Active Safety Control Module	√	√	√	√		
2019	GMC	Acadia	Long Range Radar Sensor Module	√	√	√	√		0260
2019	GMC	Acadia	Left Front Short Range Radar Sensor Module	√	√	√			
2019	GMC	Acadia	Right Front Short Range Radar Sensor Module	√	√	√			
2019	GMC	Acadia	Rear Short Range Radar Sensor Module	√	√	√			
2019	GMC	Acadia	Parking Assist Control Module	√	√	√	√	√	0247 0271

2019	GMC	Acadia	Left Side Object Detection Control Module	√	√	√	√	√	
2019	GMC	Acadia	Amplifier	√	√	√	√	√	
2019	GMC	Acadia	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	GMC	Acadia	Radio Controls	√	√	√	√	√	0241
2019	GMC	Acadia	Radio	√	√	√	√	√	0226 0150
2019	GMC	Acadia	Keyless Entry Control Module	√	√	√	√	√	
2019	GMC	Acadia	Passenger Presence Module	√	√	√	√	√	0057
2019	GMC	Acadia	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	GMC	Acadia	Power Steering Control Module	√	√	√	√	√	0089 0084
2019	GMC	Acadia	Suspension Control Module	√	√	√	√	√	
2019	GMC	Acadia	Video Processing Control Module	√	√	√	√	√	
2019	GMC	Acadia	Steering Column Lock Control Module	√	√	√	√	√	
2019	GMC	Canyon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0006 0756 0085 0236 076D 0060 079A 0044 0045 0097 0171 0219 0792 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182
2019	GMC	Canyon	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2019	GMC	Canyon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2019	GMC	Canyon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	GMC	Canyon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233
2019	GMC	Canyon	Instrument Cluster	√	√	√	√	√	0150 0247
2019	GMC	Canyon	HVAC Control Module	√	√	√	√	√	0007 0129
2019	GMC	Canyon	HVAC Controls	√	√	√	√	√	
2019	GMC	Canyon	Serial Data Gateway Module	√	√	√	√	√	
2019	GMC	Canyon	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2019	GMC	Canyon	Frontview Camera - Windshield	√	√	√	√	√	0196
2019	GMC	Canyon	Power Steering Control Module	√	√	√	√	√	0093 0090
2019	GMC	Canyon	Passenger Presence Module	√	√	√	√	√	0057
2019	GMC	Canyon	Amplifier	√	√	√	√	√	
2019	GMC	Canyon	Radio	√	√	√	√	√	0150 0226 0269 0267
2019	GMC	Canyon	Transfer Case Control Module	√	√	√	√	√	0037

2019	GMC	Canyon	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2019	GMC	Canyon	Parking Assist Control Module	√	√	√	√	√	0247
2019	GMC	Savana	Engine Control Module	√	√	√	√	√	0263 0209 0115 076D 0060 079A 0044 0045 0086 0097 0171 0219 0792 0217 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0156 0076 0020 0132 0067 0154 0212 0214
2019	GMC	Savana	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2019	GMC	Savana	Electronic Brake Control Module	√	√	√	√	√	0225 0111 0277 0090
2019	GMC	Savana	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2019	GMC	Savana	Body Control Module	√	√	√	√	√	0263 0261
2019	GMC	Savana	Theft Deterrent Module	√	√	√	√		
2019	GMC	Savana	Instrument Cluster	√	√	√	√	√	
2019	GMC	Savana	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	GMC	Savana	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2019	GMC	Savana	Parking Assist Control Module	√	√	√	√	√	0247
2019	GMC	Savana	Left Side Object Detection Control Module	√	√	√		√	
2019	GMC	Savana	Right Side Object Detection Control Module	√	√	√		√	
2019	GMC	Savana	Auxiliary Heater Control Module	√	√	√	√	√	
2019	GMC	Savana	Radio	√	√	√	√	√	
2019	GMC	Savana	Digital Radio Receiver Control Module	√	√	√	√	√	
2019	GMC	Savana	Chime Alarm Control Module	√	√	√		√	
2019	GMC	Savana	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2019	GMC	Savana	Frontview Camera - Windshield	√	√	√	√		0196
2019	GMC	Savana	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2019	GMC	Savana	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111



2019	GMC	Sierra	Engine Control Module	√	√	√	√	√	0209 075D 075E 0760 0115 0263 0761 0086 0085 0757 0212 0217 0006 0144 0764 0763 0258 0139 075F 0216 07A9 076C 076D 0058 0097 0219 0221 0792 0215 077A 0073 0072 0070 0071 0117 0119 077E 0178 0180 0182 0184 0186 0188 0246 0131 0067 0156 0076 0020 0132 0154 0791
2019	GMC	Sierra	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017 0016 0795 0796 0019
2019	GMC	Sierra	Brake System Control Module	√	√	√	√	√	0229 0225 0090 0758 0767 0768 078E 078F
2019	GMC	Sierra	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2019	GMC	Sierra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	GMC	Sierra	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	GMC	Sierra	Instrument Cluster	√	√	√	√	√	0247
2019	GMC	Sierra	HVAC Control Module	√	√	√	√	√	0007 0129
2019	GMC	Sierra	HVAC Controls	√	√	√	√	√	
2019	GMC	Sierra	Serial Data Gateway Module	√	√	√			
2019	GMC	Sierra	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2019	GMC	Sierra	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 07AB 0009 07AC
2019	GMC	Sierra	Telematics Communication Interface Control Module	√	√	√	√	√	0755 0259 0048 0011
2019	GMC	Sierra	Power Steering Control Module	√	√	√	√	√	0089 0084 0150 0273 0082 0274
2019	GMC	Sierra	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2019	GMC	Sierra	Suspension Control Module	√	√	√	√	√	0245
2019	GMC	Sierra	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	GMC	Sierra	Passenger Presence Module	√	√	√	√	√	0057
2019	GMC	Sierra	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	GMC	Sierra	Frontview Camera - Windshield	√	√	√	√	√	0205 0196 075A 0084

2019	GMC	Sierra	Transfer Case Control Module	√	√	√	√	√	0037
2019	GMC	Sierra	Radio	√	√	√	√	√	0150 0226 0269 0267
2019	GMC	Sierra	Amplifier	√	√	√	√		
2019	GMC	Sierra	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	GMC	Sierra	Media Disc Player	√	√	√	√	√	
2019	GMC	Sierra	Radio Controls	√	√	√	√		0241
2019	GMC	Sierra	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2019	GMC	Sierra	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2019	GMC	Sierra	Assist Step Control Module	√	√	√	√	√	
2019	GMC	Sierra	Keyless Entry Control Module	√	√	√	√	√	
2019	GMC	Sierra	Video Processing Control Module	√	√	√	√	√	
2019	GMC	Sierra	Trailer Lighting Control Module	√	√	√	√	√	
2019	GMC	Sierra	Left Side Object Detection Control Module	√	√	√		√	
2019	GMC	Sierra	Right Side Object Detection Control Module	√	√	√		√	
2019	GMC	Sierra	Trailer Tire Pressure Indicator Module	√	√	√	√		07AD
2019	GMC	Sierra	Steering Column Lock Control Module	√	√	√	√		
2019	GMC	Sierra	Serial Data Gateway Module - Processor 1	√	√	√			
2019	GMC	Sierra	Serial Data Gateway Module - Processor 2	√	√	√			
2019	GMC	Sierra	Rear Gate Module	√	√	√	√		
2019	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0222 076D 0060 079A 0044 0045 0097 0171 0219 0792 0109 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184
2019	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0017 0036
2019	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0229 0111
2019	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	GMC	Terrain	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0247
2019	GMC	Terrain	HVAC Control Module	√	√	√	√	√	0007 0129
2019	GMC	Terrain	HVAC Controls	√	√	√	√	√	
2019	GMC	Terrain	Serial Data Gateway Module	√	√	√			
2019	GMC	Terrain	Left Side Object Detection Control Module	√	√	√		√	

2019	GMC	Terrain	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2019	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0080 0089
2019	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	GMC	Terrain	Amplifier	√	√	√	√		
2019	GMC	Terrain	Radio Controls	√	√	√	√		0241
2019	GMC	Terrain	Navigation Control Module	√	√	√	√	√	
2019	GMC	Terrain	Radio	√	√	√	√	√	0150 0226 0269 0267
2019	GMC	Terrain	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2019	GMC	Terrain	Headlamp Control Module	√	√	√	√	√	0195
2019	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0755
2019	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	GMC	Terrain	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	GMC	Terrain	Frontview Camera - Windshield	√	√	√	√		0196 0084
2019	GMC	Terrain	Video Processing Control Module	√	√	√	√	√	
2019	GMC	Terrain	Long Range Radar Sensor Module	√	√	√	√		0260
2019	GMC	Terrain	Passenger Presence Module	√	√	√	√	√	0057
2019	GMC	Terrain	Keyless Entry Control Module	√	√	√	√	√	0759
2019	GMC	Terrain	Steering Column Lock Control Module	√	√	√	√		
2019	GMC	Terrain	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2019	GMC	Terrain	Headlamp High Beam Control Module	√	√	√	√	√	0247
2019	GMC	Terrain	Chassis Control Module	√	√	√	√	√	0014 0078
2019	GMC	Yukon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2019	GMC	Yukon	Transmission Control Module	√	√	√	√	√	0016 0017
2019	GMC	Yukon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2019	GMC	Yukon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	GMC	Yukon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	GMC	Yukon	Instrument Cluster	√	√	√	√	√	0247
2019	GMC	Yukon	HVAC Control Module	√	√	√	√	√	0007 0129
2019	GMC	Yukon	HVAC Controls	√	√	√	√	√	
2019	GMC	Yukon	Serial Data Gateway Module	√	√	√			
2019	GMC	Yukon	Steering Column Lock Control Module	√	√	√	√		
2019	GMC	Yukon	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	GMC	Yukon	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	GMC	Yukon	Power Steering Control Module	√	√	√	√	√	0150
2019	GMC	Yukon	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	GMC	Yukon	Suspension Control Module	√	√	√	√	√	0245

2019	GMC	Yukon	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	GMC	Yukon	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	GMC	Yukon	Trailer Lighting Control Module	√	√	√	√	√	0247
2019	GMC	Yukon	Passenger Presence Module	√	√	√	√	√	0057
2019	GMC	Yukon	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2019	GMC	Yukon	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2019	GMC	Yukon	Keyless Entry Control Module	√	√	√	√	√	0759
2019	GMC	Yukon	Video Processing Control Module	√	√	√	√	√	
2019	GMC	Yukon	Active Safety Control Module	√	√	√	√	√	
2019	GMC	Yukon	Frontview Camera - Windshield	√	√	√	√		0196 075A
2019	GMC	Yukon	Left Front Short Range Radar Sensor Module	√	√	√			
2019	GMC	Yukon	Left Rear Radar Short Range Sensor Module	√	√	√			
2019	GMC	Yukon	Right Front Short Range Radar Sensor Module	√	√	√			
2019	GMC	Yukon	Right Rear Short Range Radar Sensor Module	√	√	√			
2019	GMC	Yukon	Distance Sensing Cruise Control Module	√	√	√	√		0047
2019	GMC	Yukon	Left Side Object Detection Control Module	√	√	√		√	
2019	GMC	Yukon	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	GMC	Yukon	Parking Brake Control Module	√	√	√	√	√	0229
2019	GMC	Yukon	Amplifier	√	√	√	√		
2019	GMC	Yukon	Assist Step Control Module	√	√	√	√	√	
2019	GMC	Yukon	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	GMC	Yukon	Media Disc Player	√	√	√	√	√	
2019	GMC	Yukon	Radio	√	√	√	√	√	0226 0150
2019	GMC	Yukon	Radio Controls	√	√	√	√		0241
2019	GMC	Yukon	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2019	GMC	Yukon	Transfer Case Control Module	√	√	√	√	√	0037
2019	GMC	Yukon	Right Side Object Detection Control Module	√	√	√		√	
2019	GMC	Yukon XL	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2019	GMC	Yukon XL	Transmission Control Module	√	√	√	√	√	0016 0017
2019	GMC	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2019	GMC	Yukon XL	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2019	GMC	Yukon XL	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2019	GMC	Yukon XL	Instrument Cluster	√	√	√	√	√	0247
2019	GMC	Yukon XL	HVAC Control Module	√	√	√	√	√	0007 0129
2019	GMC	Yukon XL	HVAC Controls	√	√	√	√	√	
2019	GMC	Yukon XL	Serial Data Gateway Module	√	√	√			

2019	GMC	Yukon XL	Steering Column Lock Control Module	√	√	√	√		
2019	GMC	Yukon XL	Liftgate Control Module	√	√	√	√	√	0146 0169
2019	GMC	Yukon XL	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2019	GMC	Yukon XL	Power Steering Control Module	√	√	√	√	√	0150
2019	GMC	Yukon XL	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2019	GMC	Yukon XL	Suspension Control Module	√	√	√	√	√	0245
2019	GMC	Yukon XL	Seat Memory Control Module - Driver	√	√	√	√	√	
2019	GMC	Yukon XL	Seat Memory Control Module - Passenger	√	√	√	√	√	
2019	GMC	Yukon XL	Trailer Lighting Control Module	√	√	√	√	√	0247
2019	GMC	Yukon XL	Passenger Presence Module	√	√	√	√		
2019	GMC	Yukon XL	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2019	GMC	Yukon XL	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2019	GMC	Yukon XL	Keyless Entry Control Module	√	√	√	√	√	0759
2019	GMC	Yukon XL	Video Processing Control Module	√	√	√	√	√	
2019	GMC	Yukon XL	Active Safety Control Module	√	√	√	√	√	
2019	GMC	Yukon XL	Frontview Camera - Windshield	√	√	√	√		0196 075A
2019	GMC	Yukon XL	Left Front Short Range Radar Sensor Module	√	√	√			
2019	GMC	Yukon XL	Left Rear Radar Short Range Sensor Module	√	√	√			
2019	GMC	Yukon XL	Right Front Short Range Radar Sensor Module	√	√	√			
2019	GMC	Yukon XL	Right Rear Short Range Radar Sensor Module	√	√	√			
2019	GMC	Yukon XL	Distance Sensing Cruise Control Module	√	√	√	√		0047
2019	GMC	Yukon XL	Left Side Object Detection Control Module	√	√	√		√	
2019	GMC	Yukon XL	Parking Assist Control Module	√	√	√	√	√	0247 0271
2019	GMC	Yukon XL	Parking Brake Control Module	√	√	√	√	√	0229
2019	GMC	Yukon XL	Amplifier	√	√	√	√		
2019	GMC	Yukon XL	Human Machine Interface Control Module	√	√	√	√	√	0150
2019	GMC	Yukon XL	Assist Step Control Module	√	√	√	√	√	
2019	GMC	Yukon XL	Media Disc Player	√	√	√	√	√	
2019	GMC	Yukon XL	Radio	√	√	√	√	√	0226 0150
2019	GMC	Yukon XL	Radio Controls	√	√	√	√		0241
2019	GMC	Yukon XL	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2019	GMC	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0037
2019	GMC	Yukon XL	Right Side Object Detection Control Module	√	√	√		√	
2018	GMC	Acadia	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 0006 0756 0005 0006
2018	GMC	Acadia	Transmission Control Module	√	√	√	√	√	0016 0017 0036
2018	GMC	Acadia	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2018	GMC	Acadia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758

2018	GMC	Acadia	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	GMC	Acadia	Instrument Cluster	√	√	√	√	√	0247
2018	GMC	Acadia	HVAC Control Module	√	√	√	√	√	0007 0129
2018	GMC	Acadia	HVAC Controls	√	√	√	√	√	
2018	GMC	Acadia	Serial Data Gateway Module	√	√	√			
2018	GMC	Acadia	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	GMC	Acadia	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	GMC	Acadia	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	GMC	Acadia	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	GMC	Acadia	Left Side Object Detection Control Module	√	√	√		√	
2018	GMC	Acadia	Keyless Entry Control Module	√	√	√	√	√	
2018	GMC	Acadia	Passenger Presence Module	√	√	√	√	√	0057
2018	GMC	Acadia	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2018	GMC	Acadia	Active Safety Control Module	√	√	√	√		
2018	GMC	Acadia	Frontview Camera Module	√	√	√	√		0196
2018	GMC	Acadia	Left Front Short Range Radar Sensor Module	√	√	√			
2018	GMC	Acadia	Right Front Short Range Radar Sensor Module	√	√	√			
2018	GMC	Acadia	Rear Short Range Radar Sensor Module	√	√	√			
2018	GMC	Acadia	Video Processing Control Module	√	√	√	√	√	
2018	GMC	Acadia	Long Range Radar Sensor Module	√	√	√	√		0260
2018	GMC	Acadia	Amplifier	√	√	√	√		
2018	GMC	Acadia	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	GMC	Acadia	Radio Controls	√	√	√	√		0241
2018	GMC	Acadia	Media Disc Player	√	√	√	√	√	
2018	GMC	Acadia	Radio	√	√	√	√	√	0226 0150
2018	GMC	Acadia	Power Steering Control Module	√	√	√	√		0089 0084
2018	GMC	Acadia	Suspension Control Module	√	√	√	√	√	
2018	GMC	Canyon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 076D 0060 079A 0044 0045 0097 0171 0219 0792 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0006 0756 0085

2018	GMC	Canyon	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2018	GMC	Canyon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2018	GMC	Canyon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	GMC	Canyon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	GMC	Canyon	Instrument Cluster	√	√	√	√	√	0247
2018	GMC	Canyon	HVAC Control Module	√	√	√	√	√	0007 0129
2018	GMC	Canyon	HVAC Controls	√	√	√	√	√	
2018	GMC	Canyon	Serial Data Gateway Module	√	√	√			
2018	GMC	Canyon	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	GMC	Canyon	Frontview Camera Module	√	√	√	√	√	0205 0196
2018	GMC	Canyon	Passenger Presence Module	√	√	√	√	√	0057
2018	GMC	Canyon	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	GMC	Canyon	Transfer Case Control Module	√	√	√	√	√	0037
2018	GMC	Canyon	Radio	√	√	√	√	√	0226 0150
2018	GMC	Canyon	Amplifier	√	√	√	√		
2018	GMC	Canyon	Radio Controls	√	√	√	√		0241
2018	GMC	Canyon	Power Steering Control Module	√	√	√	√		0093 0090
2018	GMC	Canyon	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2018	GMC	Savana	Engine Control Module	√	√	√	√	√	0263 0209 0115 076D 0060 079A 0044 0045 0086 0097 0171 0219 0792 0217 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0156 0076 0020 0132 0067 0154 0212 0214
2018	GMC	Savana	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2018	GMC	Savana	Electronic Brake Control Module	√	√	√	√	√	0225 0111 0277 0090
2018	GMC	Savana	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2018	GMC	Savana	Body Control Module	√	√	√	√	√	0263 0261
2018	GMC	Savana	Theft Deterrent Module	√	√	√	√		
2018	GMC	Savana	Instrument Cluster	√	√	√	√	√	
2018	GMC	Savana	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2018	GMC	Savana	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010

2018	GMC	Savana	Parking Assist Control Module	√	√	√	√	√	0247
2018	GMC	Savana	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2018	GMC	Savana	Auxiliary Heater Control Module	√	√	√	√	√	
2018	GMC	Savana	Radio	√	√	√	√	√	
2018	GMC	Savana	Chime Alarm Control Module	√	√	√		√	
2018	GMC	Savana	Digital Radio Receiver Control Module	√	√	√	√	√	
2018	GMC	Savana	Left Side Object Detection Control Module	√	√	√		√	
2018	GMC	Savana	Right Side Object Detection Control Module	√	√	√		√	
2018	GMC	Savana	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2018	GMC	Savana	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2018	GMC	Sierra	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131 0258 0139 0212 0214 0791 0115 076D 0058 079A 0045 0044 0088 0097 0219 0221 07AA 0073 0072 0070 0071 0117 0119 077E 0178 0180 0182 0184 0186
2018	GMC	Sierra	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2018	GMC	Sierra	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2018	GMC	Sierra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	GMC	Sierra	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	GMC	Sierra	Instrument Cluster	√	√	√	√	√	0247
2018	GMC	Sierra	HVAC Control Module	√	√	√	√	√	0007 0129
2018	GMC	Sierra	HVAC Controls	√	√	√	√	√	
2018	GMC	Sierra	Serial Data Gateway Module	√	√	√			
2018	GMC	Sierra	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	GMC	Sierra	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	GMC	Sierra	Hybrid Powertrain Control Module 2	√	√	√	√	√	0202 0218
2018	GMC	Sierra	Hybrid Powertrain Control Module	√	√	√	√	√	0436 0263
2018	GMC	Sierra	Passenger Presence Module	√	√	√	√	√	0057
2018	GMC	Sierra	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 07AB 0009 07AC



2018	GMC	Sierra	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2018	GMC	Sierra	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	GMC	Sierra	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	GMC	Sierra	Transfer Case Control Module	√	√	√	√	√	0037
2018	GMC	Sierra	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2018	GMC	Sierra	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2018	GMC	Sierra	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2018	GMC	Sierra	Power Steering Control Module	√	√	√	√	√	0150 0084 0273 0082
2018	GMC	Sierra	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2018	GMC	Sierra	Suspension Control Module	√	√	√	√	√	0245
2018	GMC	Sierra	Amplifier	√	√	√	√		
2018	GMC	Sierra	Assist Step Control Module	√	√	√	√	√	
2018	GMC	Sierra	Radio Controls	√	√	√	√		0241
2018	GMC	Sierra	Media Disc Player	√	√	√	√	√	
2018	GMC	Sierra	Radio	√	√	√	√	√	0226 0150
2018	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0085 0154 0213 0221 0212 0214 0217 0006 0144 0258 0139 0222 076D 0060 079A 0044 0045 0097 0171 0219 0792 0109 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184
2018	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0017 0036
2018	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0229 0111
2018	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	GMC	Terrain	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0247
2018	GMC	Terrain	HVAC Control Module	√	√	√	√	√	0007 0129
2018	GMC	Terrain	HVAC Controls	√	√	√	√	√	
2018	GMC	Terrain	Serial Data Gateway Module	√	√	√			
2018	GMC	Terrain	Radio	√	√	√	√	√	0150 0226 0269 0267
2018	GMC	Terrain	Amplifier	√	√	√	√		
2018	GMC	Terrain	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	GMC	Terrain	Frontview Camera Module	√	√	√	√	√	0247 0205 0196 075A

2018	GMC	Terrain	Headlamp Control Module	√	√	√	√	√	0195
2018	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	GMC	Terrain	Left Side Object Detection Control Module	√	√	√		√	
2018	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	GMC	Terrain	Keyless Entry Control Module	√	√	√	√	√	
2018	GMC	Terrain	Passenger Presence Module	√	√	√	√	√	0057
2018	GMC	Terrain	Steering Column Lock Control Module	√	√	√	√		
2018	GMC	Terrain	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	GMC	Terrain	Video Processing Control Module	√	√	√	√	√	
2018	GMC	Terrain	Active Safety Control Module	√	√	√	√	√	
2018	GMC	Terrain	Long Range Radar Sensor Module	√	√	√	√		0260
2018	GMC	Terrain	Radio Controls	√	√	√	√		0241
2018	GMC	Terrain	Navigation Control Module	√	√	√	√	√	
2018	GMC	Terrain	Pedestrian Alert Sound Control Module	√	√	√	√	√	
2018	GMC	Terrain	Transmission Range Control Module	√	√	√	√		0014 0078 0013
2018	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0080 0089
2018	GMC	Terrain	Rear Differential Clutch Control Module	√	√	√	√	√	0003
2018	GMC	Terrain	Chassis Control Module	√	√	√	√	√	0014 0078
2018	GMC	Yukon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2018	GMC	Yukon	Transmission Control Module	√	√	√	√	√	0016 0017
2018	GMC	Yukon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2018	GMC	Yukon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	GMC	Yukon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	GMC	Yukon	Instrument Cluster	√	√	√	√	√	0247
2018	GMC	Yukon	HVAC Control Module	√	√	√	√	√	0007 0129
2018	GMC	Yukon	HVAC Controls	√	√	√	√	√	
2018	GMC	Yukon	Serial Data Gateway Module	√	√	√			
2018	GMC	Yukon	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	GMC	Yukon	Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	GMC	Yukon	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	GMC	Yukon	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2018	GMC	Yukon	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2018	GMC	Yukon	Passenger Presence Module	√	√	√	√	√	0057
2018	GMC	Yukon	Keyless Entry Control Module	√	√	√	√	√	
2018	GMC	Yukon	Steering Column Lock Control Module	√	√	√	√		

2018	GMC	Yukon	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	GMC	Yukon	Left Side Object Detection Control Module	√	√	√		√	
2018	GMC	Yukon	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	GMC	Yukon	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	GMC	Yukon	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2018	GMC	Yukon	Transfer Case Control Module	√	√	√	√	√	0037
2018	GMC	Yukon	Power Steering Control Module	√	√	√	√	√	0150
2018	GMC	Yukon	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	GMC	Yukon	Suspension Control Module	√	√	√	√	√	0245
2018	GMC	Yukon	Left Front Short Range Radar Sensor Module	√	√	√			
2018	GMC	Yukon	Left Rear Radar Short Range Sensor Module	√	√	√			
2018	GMC	Yukon	Right Rear Short Range Radar Sensor Module	√	√	√			
2018	GMC	Yukon	Right Front Short Range Radar Sensor Module	√	√	√			
2018	GMC	Yukon	Active Safety Control Module	√	√	√	√	√	
2018	GMC	Yukon	Video Processing Control Module	√	√	√	√	√	
2018	GMC	Yukon	Distance Sensing Cruise Control Module	√	√	√	√		0047
2018	GMC	Yukon	Frontview Camera Module	√	√	√	√		0196
2018	GMC	Yukon	Amplifier	√	√	√	√		
2018	GMC	Yukon	Assist Step Control Module	√	√	√	√	√	
2018	GMC	Yukon	Radio Controls	√	√	√	√		0241
2018	GMC	Yukon	Media Disc Player	√	√	√	√	√	
2018	GMC	Yukon	Radio	√	√	√	√	√	0226 0150
2018	GMC	Yukon	Parking Brake Control Module	√	√	√	√	√	0229
2018	GMC	Yukon	Liftgate Control Module	√	√	√	√	√	0146 0169
2018	GMC	Yukon XL	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2018	GMC	Yukon XL	Transmission Control Module	√	√	√	√	√	0016 0017
2018	GMC	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2018	GMC	Yukon XL	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2018	GMC	Yukon XL	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2018	GMC	Yukon XL	Instrument Cluster	√	√	√	√	√	0247
2018	GMC	Yukon XL	HVAC Control Module	√	√	√	√	√	0007 0129
2018	GMC	Yukon XL	HVAC Controls	√	√	√	√	√	
2018	GMC	Yukon XL	Serial Data Gateway Module	√	√	√			
2018	GMC	Yukon XL	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2018	GMC	Yukon XL	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2018	GMC	Yukon XL	Seat Memory Control Module - Passenger	√	√	√	√	√	

2018	GMC	Yukon XL	Keyless Entry Control Module	√	√	√	√	√	
2018	GMC	Yukon XL	Seat Belt Retractor Motor Module - Left	√	√	√	√	√	0266
2018	GMC	Yukon XL	Seat Belt Retractor Motor Module - Right	√	√	√	√	√	0266
2018	GMC	Yukon XL	Passenger Presence Module	√	√	√	√		
2018	GMC	Yukon XL	Steering Column Lock Control Module	√	√	√	√		
2018	GMC	Yukon XL	Human Machine Interface Control Module	√	√	√	√	√	0150
2018	GMC	Yukon XL	Trailer Lighting Control Module	√	√	√	√	√	0247
2018	GMC	Yukon XL	Left Side Object Detection Control Module	√	√	√		√	
2018	GMC	Yukon XL	Parking Assist Control Module	√	√	√	√	√	0247 0271
2018	GMC	Yukon XL	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2018	GMC	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0037
2018	GMC	Yukon XL	Power Steering Control Module	√	√	√	√	√	0150
2018	GMC	Yukon XL	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2018	GMC	Yukon XL	Suspension Control Module	√	√	√	√	√	0245
2018	GMC	Yukon XL	Left Front Short Range Radar Sensor Module	√	√	√			
2018	GMC	Yukon XL	Left Rear Radar Short Range Sensor Module	√	√	√			
2018	GMC	Yukon XL	Right Front Short Range Radar Sensor Module	√	√	√			
2018	GMC	Yukon XL	Right Rear Short Range Radar Sensor Module	√	√	√			
2018	GMC	Yukon XL	Active Safety Control Module	√	√	√	√	√	
2018	GMC	Yukon XL	Video Processing Control Module	√	√	√	√	√	
2018	GMC	Yukon XL	Distance Sensing Cruise Control Module	√	√	√	√		0047
2018	GMC	Yukon XL	Frontview Camera Module	√	√	√	√		0196
2018	GMC	Yukon XL	Amplifier	√	√	√	√		
2018	GMC	Yukon XL	Assist Step Control Module	√	√	√	√	√	
2018	GMC	Yukon XL	Radio Controls	√	√	√	√		0241
2018	GMC	Yukon XL	Media Disc Player	√	√	√	√	√	
2018	GMC	Yukon XL	Radio	√	√	√	√	√	0226 0150
2018	GMC	Yukon XL	Parking Brake Control Module	√	√	√	√	√	0229
2018	GMC	Yukon XL	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	GMC	Acadia	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0212 0156 0020 0115 0154 0213 0214 0139 0006 0256 0085 0236
2017	GMC	Acadia	Transmission Control Module	√	√	√	√	√	0016 0017 0036
2017	GMC	Acadia	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111 0277
2017	GMC	Acadia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261 0134 0111
2017	GMC	Acadia	Body Control Module	√	√	√	√	√	0263 0261 0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0203 0201 0208 0206 0083 0267 0160 0222 0150
2017	GMC	Acadia	Theft Deterrent Module	√	√	√	√		

2017	GMC	Acadia	Instrument Cluster	√	√	√	√	√	0247
2017	GMC	Acadia	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2017	GMC	Acadia	HVAC Controls	√	√	√	√	√	
2017	GMC	Acadia	Serial Data Gateway Module	√	√	√			
2017	GMC	Acadia	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	GMC	Acadia	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	GMC	Acadia	Long Range Radar Sensor Module	√	√	√	√		0260
2017	GMC	Acadia	Left Front Short Range Radar Sensor Module	√	√	√			
2017	GMC	Acadia	Right Front Short Range Radar Sensor Module	√	√	√			
2017	GMC	Acadia	Rear Short Range Radar Sensor Module	√	√	√			
2017	GMC	Acadia	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	GMC	Acadia	Suspension Control Module	√	√	√	√	√	
2017	GMC	Acadia	Power Steering Control Module	√	√	√	√		0089 0084
2017	GMC	Acadia	Chassis Control Module	√	√	√	√	√	0014 0078
2017	GMC	Acadia	Rear Differential Clutch Control Module	√	√	√	√	√	0155 0003
2017	GMC	Acadia	Passenger Presence Module	√	√	√	√	√	0057
2017	GMC	Acadia	Keyless Entry Control Module	√	√	√	√	√	
2017	GMC	Acadia	Amplifier	√	√	√	√		
2017	GMC	Acadia	Radio Controls	√	√	√	√		0241
2017	GMC	Acadia	Radio	√	√	√	√	√	0226 0150
2017	GMC	Acadia	Media Disc Player	√	√	√	√	√	
2017	GMC	Acadia	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	GMC	Acadia	Active Safety Control Module	√	√	√	√		
2017	GMC	Acadia	Frontview Camera Module	√	√	√	√	√	0205 0196
2017	GMC	Acadia	Left Side Object Detection Control Module	√	√	√		√	
2017	GMC	Acadia	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	GMC	Acadia	Video Processing Control Module	√	√	√	√	√	
2017	GMC	Acadia	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2017	GMC	Acadia	Driver Door Switch Panel Control Module	√	√	√	√	√	
2017	GMC	Acadia	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2017	GMC	Acadia	Personal Audio Link Control Module	√	√	√			0231
2017	GMC	Acadia	Rear Audio Control Module	√	√	√	√		
2017	GMC	Acadia	Right Side Object Detection Control Module	√	√	√		√	
2017	GMC	Acadia	Seat Memory Control Module	√	√	√	√	√	
2017	GMC	Acadia	Digital Radio Receiver Control Module	√	√	√	√	√	
2017	GMC	Acadia	Head-Up Display Module	√	√	√	√	√	

2017	GMC	Canyon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0020 0132 0067 0115 0086 0154 0213 0214 0217 0258 0139 076D 0060 079A 0044 0045 0097 0171 0219 0792 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0006 0756 0085
2017	GMC	Canyon	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2017	GMC	Canyon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2017	GMC	Canyon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	GMC	Canyon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	GMC	Canyon	Instrument Cluster	√	√	√	√	√	0247
2017	GMC	Canyon	HVAC Control Module	√	√	√	√	√	0007 0129
2017	GMC	Canyon	HVAC Controls	√	√	√	√	√	
2017	GMC	Canyon	Serial Data Gateway Module	√	√	√			
2017	GMC	Canyon	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	GMC	Canyon	Frontview Camera Module	√	√	√	√	√	0205 0196
2017	GMC	Canyon	Transfer Case Control Module	√	√	√	√	√	0037
2017	GMC	Canyon	Passenger Presence Module	√	√	√	√	√	0057
2017	GMC	Canyon	Amplifier	√	√	√	√		
2017	GMC	Canyon	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	GMC	Canyon	Radio Controls	√	√	√	√		0241
2017	GMC	Canyon	Radio	√	√	√	√	√	0226 0150
2017	GMC	Canyon	Power Steering Control Module	√	√	√	√		0093 0090
2017	GMC	Canyon	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245

2017	GMC	Savana	Engine Control Module	√	√	√	√	√	0263 0209 0115 076D 0060 079A 0044 0045 0086 0097 0171 0219 0792 0217 0084 0074 0075 0072 0073 0070 0071 0119 0117 077E 0178 0180 0182 0184 0132 0067 0258 0139 0237 0210 0058 0042 0088 0118 0120 0240 0186 0188 0190 0192 0138 0137 0179 0181 0183 0185 0187 0189
2017	GMC	Savana	Transmission Control Module	√	√	√	√	√	0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031 0017
2017	GMC	Savana	Electronic Brake Control Module	√	√	√	√	√	0225 0111
2017	GMC	Savana	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2017	GMC	Savana	Body Control Module	√	√	√	√	√	0263 0261
2017	GMC	Savana	Theft Deterrent Module	√	√	√	√	√	
2017	GMC	Savana	Instrument Cluster	√	√	√	√	√	
2017	GMC	Savana	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	GMC	Savana	Radio	√	√	√	√	√	
2017	GMC	Savana	Chime Alarm Control Module	√	√	√	√	√	
2017	GMC	Savana	Digital Radio Receiver Control Module	√	√	√	√	√	
2017	GMC	Savana	Parking Assist Control Module	√	√	√	√	√	0247
2017	GMC	Savana	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2017	GMC	Savana	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2017	GMC	Savana	Auxiliary Heater Control Module	√	√	√	√	√	
2017	GMC	Savana	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2017	GMC	Sierra	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131 0258 0212 0214 0139 0791 0115 076D 0058 079A 0045 0044 0088 0097 0219 0221 07AA 0073 0072 0070 0071 0117 0119 077E 0178 0180 0182 0184 0186

2017	GMC	Sierra	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2017	GMC	Sierra	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2017	GMC	Sierra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	GMC	Sierra	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	GMC	Sierra	Instrument Cluster	√	√	√	√	√	0247
2017	GMC	Sierra	HVAC Control Module	√	√	√	√	√	0007 0129
2017	GMC	Sierra	HVAC Controls	√	√	√	√	√	
2017	GMC	Sierra	Serial Data Gateway Module	√	√	√			
2017	GMC	Sierra	Hybrid Powertrain Control Module	√	√	√	√	√	0436 0263
2017	GMC	Sierra	Hybrid Powertrain Control Module 2	√	√	√	√	√	0202 0218
2017	GMC	Sierra	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	GMC	Sierra	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2017	GMC	Sierra	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	GMC	Sierra	Trailer Interface Control Module	√	√	√	√	√	0247
2017	GMC	Sierra	Passenger Presence Module	√	√	√	√	√	0057
2017	GMC	Sierra	Amplifier	√	√	√	√		
2017	GMC	Sierra	Assist Step Control Module	√	√	√	√	√	
2017	GMC	Sierra	Human Machine Interface Control Module	√	√	√	√	√	0150
2017	GMC	Sierra	Radio Controls	√	√	√	√		0241
2017	GMC	Sierra	Media Disc Player	√	√	√	√	√	
2017	GMC	Sierra	Radio	√	√	√	√	√	0226 0150
2017	GMC	Sierra	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	GMC	Sierra	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2017	GMC	Sierra	Transfer Case Control Module	√	√	√	√	√	0037
2017	GMC	Sierra	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	GMC	Sierra	Power Steering Control Module	√	√	√	√	√	0150 0084 0273 0082
2017	GMC	Sierra	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2017	GMC	Sierra	Suspension Control Module	√	√	√	√	√	0245
2017	GMC	Sierra	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2017	GMC	Sierra	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 07AB 0009 07AC
2017	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2017	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2017	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111



2017	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2017	GMC	Terrain	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2017	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0247
2017	GMC	Terrain	HVAC Control Module	√	√	√	√	√	0007 0129
2017	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0247
2017	GMC	Terrain	Passenger Presence Module	√	√	√	√	√	0057
2017	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	GMC	Terrain	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2017	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0080 0089
2017	GMC	Terrain	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	GMC	Terrain	Front Seat Heating Control Module	√	√	√	√	√	
2017	GMC	Terrain	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2017	GMC	Terrain	Left Side Object Detection Control Module	√	√	√		√	
2017	GMC	Terrain	Right Side Object Detection Control Module	√	√	√		√	
2017	GMC	Terrain	Seat Memory Control Module	√	√	√	√	√	0310
2017	GMC	Terrain	Radio	√	√	√	√	√	
2017	GMC	Terrain	Rear Differential Clutch Control Module	√	√	√	√		0155
2017	GMC	Yukon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2017	GMC	Yukon	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2017	GMC	Yukon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2017	GMC	Yukon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	GMC	Yukon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2017	GMC	Yukon	Instrument Cluster	√	√	√	√	√	0247
2017	GMC	Yukon	HVAC Control Module	√	√	√	√	√	0007 0129
2017	GMC	Yukon	HVAC Controls	√	√	√	√	√	
2017	GMC	Yukon	Serial Data Gateway Module	√	√	√			
2017	GMC	Yukon	Steering Column Lock Control Module	√	√	√	√		
2017	GMC	Yukon	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	GMC	Yukon	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	GMC	Yukon	Amplifier	√	√	√	√		
2017	GMC	Yukon	Assist Step Control Module	√	√	√	√	√	
2017	GMC	Yukon	Human Machine Interface Control Module	√	√	√	√	√	0150

2017	GMC	Yukon	Radio Controls	√	√	√	√		0241
2017	GMC	Yukon	Media Disc Player	√	√	√	√	√	
2017	GMC	Yukon	Rear Audio Control Module	√	√	√	√	√	
2017	GMC	Yukon	Radio	√	√	√	√	√	0226 0150
2017	GMC	Yukon	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	GMC	Yukon	Left Side Object Detection Control Module	√	√	√		√	
2017	GMC	Yukon	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	GMC	Yukon	Seat Memory Control Module - Passenger	√	√	√	√	√	
2017	GMC	Yukon	Keyless Entry Control Module	√	√	√	√	√	
2017	GMC	Yukon	Passenger Presence Module	√	√	√	√	√	0057
2017	GMC	Yukon	Distance Sensing Cruise Control Module	√	√	√	√		0047
2017	GMC	Yukon	Video Processing Control Module	√	√	√	√	√	
2017	GMC	Yukon	Frontview Camera Module	√	√	√	√		0196
2017	GMC	Yukon	Power Steering Control Module	√	√	√	√	√	0150
2017	GMC	Yukon	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	GMC	Yukon	Suspension Control Module	√	√	√	√	√	0245
2017	GMC	Yukon	Parking Brake Control Module	√	√	√	√	√	0229
2017	GMC	Yukon	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2017	GMC	Yukon	Transfer Case Control Module	√	√	√	√	√	0037
2017	GMC	Yukon XL	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2017	GMC	Yukon XL	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2017	GMC	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2017	GMC	Yukon XL	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2017	GMC	Yukon XL	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233
2017	GMC	Yukon XL	Instrument Cluster	√	√	√	√	√	0150 0247
2017	GMC	Yukon XL	HVAC Control Module	√	√	√	√	√	0007 0129
2017	GMC	Yukon XL	HVAC Controls	√	√	√	√	√	
2017	GMC	Yukon XL	Serial Data Gateway Module	√	√	√			
2017	GMC	Yukon XL	Steering Column Lock Control Module	√	√	√	√		
2017	GMC	Yukon XL	Liftgate Control Module	√	√	√	√	√	0146 0169
2017	GMC	Yukon XL	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2017	GMC	Yukon XL	Amplifier	√	√	√	√		
2017	GMC	Yukon XL	Assist Step Control Module	√	√	√	√	√	
2017	GMC	Yukon XL	Human Machine Interface Control Module	√	√	√	√	√	0150

2017	GMC	Yukon XL	Radio Controls	√	√	√	√		0241
2017	GMC	Yukon XL	Media Disc Player	√	√	√	√	√	
2017	GMC	Yukon XL	Rear Audio Control Module	√	√	√	√	√	
2017	GMC	Yukon XL	Radio	√	√	√	√	√	0226 0150
2017	GMC	Yukon XL	Parking Assist Control Module	√	√	√	√	√	0247 0271
2017	GMC	Yukon XL	Left Side Object Detection Control Module	√	√	√		√	
2017	GMC	Yukon XL	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2017	GMC	Yukon XL	Seat Memory Control Module - Passenger	√	√	√	√	√	
2017	GMC	Yukon XL	Keyless Entry Control Module	√	√	√	√	√	
2017	GMC	Yukon XL	Passenger Presence Module	√	√	√	√	√	0057
2017	GMC	Yukon XL	Video Processing Control Module	√	√	√	√	√	
2017	GMC	Yukon XL	Distance Sensing Cruise Control Module	√	√	√	√		0047
2017	GMC	Yukon XL	Frontview Camera Module	√	√	√	√		0196
2017	GMC	Yukon XL	Power Steering Control Module	√	√	√	√	√	0150
2017	GMC	Yukon XL	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2017	GMC	Yukon XL	Suspension Control Module	√	√	√	√	√	0245
2017	GMC	Yukon XL	Parking Brake Control Module	√	√	√	√	√	0229
2017	GMC	Yukon XL	Chassis Control Module - Auxiliary	√	√	√	√	√	0217 0095 0194 0245
2017	GMC	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0037
2016	GMC	Acadia	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0212
2016	GMC	Acadia	Transmission Control Module	√	√	√	√	√	0016
2016	GMC	Acadia	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2016	GMC	Acadia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2016	GMC	Acadia	Body Control Module	√	√	√	√	√	0263 0261
2016	GMC	Acadia	Theft Deterrent Module	√	√	√	√		
2016	GMC	Acadia	Instrument Cluster	√	√	√	√	√	
2016	GMC	Acadia	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2016	GMC	Acadia	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	GMC	Acadia	Head-Up Display Module	√	√	√	√	√	
2016	GMC	Acadia	Digital Radio Receiver Control Module	√	√	√	√	√	
2016	GMC	Acadia	Liftgate Control Module	√	√	√	√		0146
2016	GMC	Acadia	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2016	GMC	Acadia	Frontview Camera Module	√	√	√	√	√	0205 0196
2016	GMC	Acadia	Left Side Object Detection Control Module	√	√	√		√	
2016	GMC	Acadia	Parking Assist Control Module	√	√	√	√	√	0247
2016	GMC	Acadia	Right Side Object Detection Control Module	√	√	√		√	
2016	GMC	Acadia	Seat Memory Control Module	√	√	√	√	√	
2016	GMC	Acadia	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2016	GMC	Acadia	Passenger Presence Module	√	√	√	√		0057
2016	GMC	Acadia	Driver Door Switch Panel Control Module	√	√	√	√	√	

2016	GMC	Acadia	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2016	GMC	Acadia	Personal Audio Link Control Module	√	√	√			0231
2016	GMC	Acadia	Radio	√	√	√	√	√	
2016	GMC	Acadia	Rear Audio Control Module	√	√	√	√		
2016	GMC	Canyon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0147 0086 0217 0258 0222 0115 076D 0060 0044 0045 0097 0171 0219 0084 0074 0075 0072 0073 0119 0117 0118 0120 0178 0180 0182 0184 0066
2016	GMC	Canyon	Transmission Control Module	√	√	√	√	√	0016
2016	GMC	Canyon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2016	GMC	Canyon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2016	GMC	Canyon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0033 0150
2016	GMC	Canyon	Instrument Cluster	√	√	√	√	√	0247
2016	GMC	Canyon	HVAC Control Module	√	√	√	√	√	0007 0129
2016	GMC	Canyon	HVAC Controls	√	√	√	√	√	
2016	GMC	Canyon	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	GMC	Canyon	Frontview Camera Module	√	√	√	√	√	0205 0196
2016	GMC	Canyon	Passenger Presence Module	√	√	√	√	√	0057
2016	GMC	Canyon	Amplifier	√	√	√	√		
2016	GMC	Canyon	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	GMC	Canyon	Radio	√	√	√	√	√	0226 0150
2016	GMC	Canyon	Power Steering Control Module	√	√	√	√		0093 0090
2016	GMC	Canyon	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	GMC	Canyon	Trailer Interface Control Module	√	√	√	√	√	0247
2016	GMC	Canyon	Transfer Case Control Module	√	√	√	√	√	0037
2016	GMC	Canyon	Radio Controls	√	√	√	√		0241
2016	GMC	Savana	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0139 0237 0210 0115 0058 0042 0044 0088 0219 0073 0072 0070 0071 0117 0118 0119 0120 0240 0178 0180 0182 0184 0186 0188 0190 0192 0138 0137 0179 0181 0183 0185 0187
2016	GMC	Savana	Transmission Control Module	√	√	√	√	√	0016

2016	GMC	Savana	Electronic Brake Control Module	√	√	√	√	√	0225 0111
2016	GMC	Savana	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2016	GMC	Savana	Body Control Module	√	√	√	√	√	0263 0261
2016	GMC	Savana	Theft Deterrent Module	√	√	√	√	√	
2016	GMC	Savana	Instrument Cluster	√	√	√	√	√	
2016	GMC	Savana	Auxiliary Heater Control Module	√	√	√	√	√	
2016	GMC	Savana	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2016	GMC	Savana	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	GMC	Savana	Digital Radio Receiver Control Module	√	√	√	√	√	
2016	GMC	Savana	Parking Assist Control Module	√	√	√	√	√	0247
2016	GMC	Savana	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2016	GMC	Savana	Radio	√	√	√	√	√	
2016	GMC	Savana	Chime Alarm Control Module	√	√	√		√	
2016	GMC	Savana	Fuel Injector Control Module		√	√			
2016	GMC	Sierra	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131 0258 0212 0214 0139 0237 0210 0115 0058 0042 0044 0088 0219 0073 0072 0070 0071 0117 0118 0119 0120 0240 0178 0180 0182 0184 0186 0188 0190 0192 0138 0137 0179 0181 0183 0185 0187
2016	GMC	Sierra	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2016	GMC	Sierra	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2016	GMC	Sierra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	GMC	Sierra	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	GMC	Sierra	Instrument Cluster	√	√	√	√	√	0247
2016	GMC	Sierra	HVAC Control Module	√	√	√	√	√	0007 0129
2016	GMC	Sierra	HVAC Controls	√	√	√	√	√	
2016	GMC	Sierra	Hybrid Powertrain Control Module 2	√	√	√	√	√	0202 0218

2016	GMC	Sierra	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2016	GMC	Sierra	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 0009
2016	GMC	Sierra	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	GMC	Sierra	Hybrid Powertrain Control Module	√	√	√	√	√	0436 0263
2016	GMC	Sierra	Fuel Injector Control Module	√	√	√	√	√	
2016	GMC	Sierra	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	GMC	Sierra	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	GMC	Sierra	Passenger Presence Module	√	√	√	√	√	0057
2016	GMC	Sierra	Transfer Case Control Module	√	√	√	√	√	0037
2016	GMC	Sierra	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	GMC	Sierra	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	GMC	Sierra	Distance Sensing Cruise Control Module	√	√	√	√		0047
2016	GMC	Sierra	Power Steering Control Module	√	√	√	√	√	0150 0084 0273 0082
2016	GMC	Sierra	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2016	GMC	Sierra	Suspension Control Module	√	√	√	√	√	0245
2016	GMC	Sierra	Parking Brake Control Module	√	√	√	√	√	0229
2016	GMC	Sierra	Amplifier	√	√	√	√		
2016	GMC	Sierra	Assist Step Control Module	√	√	√	√	√	
2016	GMC	Sierra	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	GMC	Sierra	Radio Controls	√	√	√	√		0241
2016	GMC	Sierra	Media Disc Player	√	√	√	√	√	
2016	GMC	Sierra	Radio	√	√	√	√	√	0226 0150
2016	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2016	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2016	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2016	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2016	GMC	Terrain	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2016	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0247
2016	GMC	Terrain	HVAC Control Module	√	√	√	√	√	0007 0129
2016	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0259
2016	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146 0169
2016	GMC	Terrain	Rear Differential Clutch Control Module	√	√	√	√		0155
2016	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0247
2016	GMC	Terrain	Radio	√	√	√	√	√	
2016	GMC	Terrain	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2016	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0080 0089
2016	GMC	Terrain	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	GMC	Terrain	Passenger Presence Module	√	√	√	√		0057
2016	GMC	Terrain	Front Seat Heating Control Module	√	√	√	√	√	

2016	GMC	Terrain	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2016	GMC	Terrain	Left Side Object Detection Control Module	√	√	√		√	
2016	GMC	Terrain	Right Side Object Detection Control Module	√	√	√		√	
2016	GMC	Terrain	Seat Memory Control Module	√	√	√	√	√	0310
2016	GMC	Yukon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2016	GMC	Yukon	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2016	GMC	Yukon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2016	GMC	Yukon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	GMC	Yukon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	GMC	Yukon	Instrument Cluster	√	√	√	√	√	0247
2016	GMC	Yukon	HVAC Control Module	√	√	√	√	√	0007 0129
2016	GMC	Yukon	HVAC Controls	√	√	√	√	√	
2016	GMC	Yukon	Steering Column Lock Control Module	√	√	√	√	√	
2016	GMC	Yukon	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	GMC	Yukon	Liftgate Control Module	√	√	√	√	√	0146 0169
2016	GMC	Yukon	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	GMC	Yukon	Frontview Camera Module	√	√	√	√	√	0196
2016	GMC	Yukon	Left Side Object Detection Control Module	√	√	√		√	
2016	GMC	Yukon	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	GMC	Yukon	Passenger Presence Module	√	√	√	√	√	0057
2016	GMC	Yukon	Keyless Entry Control Module	√	√	√	√	√	
2016	GMC	Yukon	Transfer Case Control Module	√	√	√	√	√	0037
2016	GMC	Yukon	Amplifier	√	√	√	√	√	
2016	GMC	Yukon	Assist Step Control Module	√	√	√	√	√	
2016	GMC	Yukon	Media Disc Player	√	√	√	√	√	
2016	GMC	Yukon	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	GMC	Yukon	Radio Controls	√	√	√	√		0241
2016	GMC	Yukon	Radio	√	√	√	√	√	0226 0150
2016	GMC	Yukon	Power Steering Control Module	√	√	√	√	√	0150
2016	GMC	Yukon	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2016	GMC	Yukon	Suspension Control Module	√	√	√	√	√	0245
2016	GMC	Yukon	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	GMC	Yukon	Distance Sensing Cruise Control Module	√	√	√	√		0047
2016	GMC	Yukon	Parking Brake Control Module	√	√	√	√	√	0229

2016	GMC	Yukon	Seat Memory Control Module - Passenger	√	√	√	√	√	
2016	GMC	Yukon XL	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2016	GMC	Yukon XL	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2016	GMC	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2016	GMC	Yukon XL	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2016	GMC	Yukon XL	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0083 0267 0160 0233 0150
2016	GMC	Yukon XL	Instrument Cluster	√	√	√	√	√	0247
2016	GMC	Yukon XL	HVAC Control Module	√	√	√	√	√	0007 0129
2016	GMC	Yukon XL	HVAC Controls	√	√	√	√	√	
2016	GMC	Yukon XL	Steering Column Lock Control Module	√	√	√	√	√	
2016	GMC	Yukon XL	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2016	GMC	Yukon XL	Liftgate Control Module	√	√	√	√	√	0146 0169
2016	GMC	Yukon XL	Parking Assist Control Module	√	√	√	√	√	0247 0271
2016	GMC	Yukon XL	Frontview Camera Module	√	√	√	√	√	0196
2016	GMC	Yukon XL	Left Side Object Detection Control Module	√	√	√	√	√	
2016	GMC	Yukon XL	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2016	GMC	Yukon XL	Keyless Entry Control Module	√	√	√	√	√	
2016	GMC	Yukon XL	Passenger Presence Module	√	√	√	√	√	0057
2016	GMC	Yukon XL	Amplifier	√	√	√	√	√	
2016	GMC	Yukon XL	Assist Step Control Module	√	√	√	√	√	
2016	GMC	Yukon XL	Media Disc Player	√	√	√	√	√	
2016	GMC	Yukon XL	Human Machine Interface Control Module	√	√	√	√	√	0150
2016	GMC	Yukon XL	Radio Controls	√	√	√	√	√	0241
2016	GMC	Yukon XL	Radio	√	√	√	√	√	0226 0150
2016	GMC	Yukon XL	Power Steering Control Module	√	√	√	√	√	0150
2016	GMC	Yukon XL	Suspension Control Module	√	√	√	√	√	0245
2016	GMC	Yukon XL	Steering Wheel Angle Sensor Module	√	√	√	√	√	0093 0090
2016	GMC	Yukon XL	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2016	GMC	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0037
2016	GMC	Yukon XL	Distance Sensing Cruise Control Module	√	√	√	√	√	0047
2016	GMC	Yukon XL	Parking Brake Control Module	√	√	√	√	√	0229
2016	GMC	Yukon XL	Seat Memory Control Module - Passenger	√	√	√	√	√	
2015	GMC	Acadia	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0212



2015	GMC	Acadia	Transmission Control Module	√	√	√	√	√	0016
2015	GMC	Acadia	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2015	GMC	Acadia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2015	GMC	Acadia	Body Control Module	√	√	√	√	√	0263 0261
2015	GMC	Acadia	Theft Deterrent Module	√	√	√	√		
2015	GMC	Acadia	Instrument Cluster	√	√	√	√	√	
2015	GMC	Acadia	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2015	GMC	Acadia	Liftgate Control Module	√	√	√	√		0146
2015	GMC	Acadia	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	GMC	Acadia	Digital Radio Receiver Control Module	√	√	√	√	√	
2015	GMC	Acadia	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2015	GMC	Acadia	Front Seat Heating Control Module	√	√	√	√		
2015	GMC	Acadia	Frontview Camera Module	√	√	√	√	√	0205 0196
2015	GMC	Acadia	Left Side Object Detection Control Module	√	√	√		√	
2015	GMC	Acadia	Parking Assist Control Module	√	√	√	√	√	0247
2015	GMC	Acadia	Right Side Object Detection Control Module	√	√	√		√	
2015	GMC	Acadia	Seat Memory Control Module	√	√	√	√	√	
2015	GMC	Acadia	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2015	GMC	Acadia	Passenger Presence Module	√	√	√	√		0057
2015	GMC	Acadia	Radio	√	√	√	√	√	
2015	GMC	Acadia	Rear Audio Control Module	√	√	√	√		
2015	GMC	Acadia	Personal Audio Link Control Module	√	√	√			0231
2015	GMC	Acadia	Driver Door Switch Panel Control Module	√	√	√	√	√	
2015	GMC	Acadia	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2015	GMC	Acadia	Head-Up Display Module	√	√	√	√	√	
2015	GMC	Canyon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0147 0086 0217
2015	GMC	Canyon	Transmission Control Module	√	√	√	√	√	0016
2015	GMC	Canyon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2015	GMC	Canyon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111 0758
2015	GMC	Canyon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0168 0233 0158
2015	GMC	Canyon	Instrument Cluster	√	√	√	√	√	0247
2015	GMC	Canyon	HVAC Control Module	√	√	√	√	√	0007 0129
2015	GMC	Canyon	Telematics Communication Interface Control Module	√	√	√	√	√	0259 0048 0011 0010
2015	GMC	Canyon	Passenger Presence Module	√	√	√	√	√	0057
2015	GMC	Canyon	Parking Assist Control Module	√	√	√	√	√	0247
2015	GMC	Canyon	Power Steering Control Module	√	√	√	√		0093 0090
2015	GMC	Canyon	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245

2015	GMC	Canyon	Transfer Case Control Module	√	√	√	√	√	0037
2015	GMC	Canyon	Frontview Camera Module	√	√	√	√	√	0205 0196 075A
2015	GMC	Canyon	Amplifier	√	√	√	√		
2015	GMC	Canyon	Radio	√	√	√	√	√	0226 0150
2015	GMC	Canyon	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	GMC	Savana	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0258 0237 0210 0115 0058 0042 0044 0088 0219 0073 0072 0070 0071 0117 0118 0119 0120 0240 0178 0180 0182 0184 0186 0188 0190 0192 0138 0137 0179 0181 0183 0185 0187
2015	GMC	Savana	Transmission Control Module	√	√	√	√	√	0016
2015	GMC	Savana	Electronic Brake Control Module	√	√	√	√	√	0225 0111
2015	GMC	Savana	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√		0172 0261
2015	GMC	Savana	Body Control Module	√	√	√	√	√	0263 0261
2015	GMC	Savana	Theft Deterrent Module	√	√	√	√		
2015	GMC	Savana	Instrument Cluster	√	√	√	√	√	
2015	GMC	Savana	Digital Radio Receiver Control Module	√	√	√	√	√	
2015	GMC	Savana	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	GMC	Savana	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2015	GMC	Savana	Auxiliary Heater Control Module	√	√	√	√	√	
2015	GMC	Savana	Parking Assist Control Module	√	√	√	√	√	0247
2015	GMC	Savana	Rollover Sensor Module	√	√	√	√		0172
2015	GMC	Savana	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2015	GMC	Savana	Radio	√	√	√	√	√	
2015	GMC	Sierra	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131 0258 0139 0237 0210 0115 0058 0042 0044 0088 0219 0073 0072 0070 0071 0117 0118 0119 0120 0240 0178 0180 0182 0184 0186 0188 0190 0192 0138 0137 0179 0181 0183 0185 0187 0189 0191
2015	GMC	Sierra	Transmission Control Module	√	√	√	√	√	0016 0019

2015	GMC	Sierra	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2015	GMC	Sierra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	GMC	Sierra	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0232 0150
2015	GMC	Sierra	Instrument Cluster	√	√	√	√	√	0247
2015	GMC	Sierra	HVAC Control Module	√	√	√	√	√	0007 0129
2015	GMC	Sierra	HVAC Controls	√	√	√	√	√	
2015	GMC	Sierra	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	GMC	Sierra	Transfer Case Control Module	√	√	√	√	√	0037
2015	GMC	Sierra	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	GMC	Sierra	Power Steering Control Module	√	√	√	√	√	0150
2015	GMC	Sierra	Suspension Control Module	√	√	√	√	√	0245
2015	GMC	Sierra	Steering Wheel Angle Sensor Module	√	√	√			0093 0090 0084
2015	GMC	Sierra	Passenger Presence Module	√	√	√	√	√	0057
2015	GMC	Sierra	Fuel Injector Control Module	√	√	√	√	√	
2015	GMC	Sierra	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	GMC	Sierra	Parking Assist Control Module	√	√	√	√	√	0247 0271
2015	GMC	Sierra	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	GMC	Sierra	Distance Sensing Cruise Control Module	√	√	√	√	√	0047
2015	GMC	Sierra	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2015	GMC	Sierra	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 0009
2015	GMC	Sierra	Amplifier	√	√	√	√		
2015	GMC	Sierra	Media Disc Player	√	√	√	√	√	
2015	GMC	Sierra	Radio	√	√	√	√	√	0226 0150
2015	GMC	Sierra	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	GMC	Sierra	Radio Controls	√	√	√	√		0241
2015	GMC	Sierra	Parking Brake Control Module	√	√	√	√	√	0229
2015	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2015	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2015	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2015	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2015	GMC	Terrain	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2015	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0247
2015	GMC	Terrain	HVAC Control Module	√	√	√	√	√	0007 0129
2015	GMC	Terrain	Liftgate Control Module	√	√	√	√		0146
2015	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0259
2015	GMC	Terrain	Rear Differential Clutch Control Module	√	√	√	√		0155

2015	GMC	Terrain	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2015	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0080 0089
2015	GMC	Terrain	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	GMC	Terrain	Radio	√	√	√	√	√	
2015	GMC	Terrain	Passenger Presence Module	√	√	√	√		0057
2015	GMC	Terrain	Front Seat Heating Control Module	√	√	√	√	√	
2015	GMC	Terrain	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	GMC	Terrain	Left Side Object Detection Control Module	√	√	√		√	
2015	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0247
2015	GMC	Terrain	Right Side Object Detection Control Module	√	√	√		√	
2015	GMC	Terrain	Seat Memory Control Module	√	√	√	√	√	0310
2015	GMC	Yukon	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2015	GMC	Yukon	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2015	GMC	Yukon	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2015	GMC	Yukon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	GMC	Yukon	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0002 0150 0333 0150
2015	GMC	Yukon	Instrument Cluster	√	√	√	√	√	0247
2015	GMC	Yukon	HVAC Control Module	√	√	√	√	√	0007 0129
2015	GMC	Yukon	HVAC Controls	√	√	√	√	√	
2015	GMC	Yukon	Hybrid Powertrain Control Module	√	√	√	√	√	
2015	GMC	Yukon	Transfer Case Control Module	√	√	√	√	√	0037
2015	GMC	Yukon	Drive Motor Control Module 1	√			√		
2015	GMC	Yukon	Drive Motor Control Module 2	√			√		
2015	GMC	Yukon	Auxiliary Transmission Fluid Pump	√	√	√	√		
2015	GMC	Yukon	Battery Energy Control Module	√			√		
2015	GMC	Yukon	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	GMC	Yukon	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	GMC	Yukon	Passenger Presence Module	√	√	√	√	√	0057
2015	GMC	Yukon	Keyless Entry Control Module	√	√	√	√	√	
2015	GMC	Yukon	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	GMC	Yukon	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2015	GMC	Yukon	Power Steering Control Module	√	√	√	√	√	0150
2015	GMC	Yukon	Suspension Control Module	√	√	√	√	√	0245
2015	GMC	Yukon	Steering Column Lock Control Module	√	√	√	√		
2015	GMC	Yukon	Amplifier	√	√	√	√		

2015	GMC	Yukon	Radio Controls	√	√	√	√		0241
2015	GMC	Yukon	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	GMC	Yukon	Media Disc Player	√	√	√	√	√	
2015	GMC	Yukon	Radio	√	√	√	√	√	0226 0150
2015	GMC	Yukon	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	GMC	Yukon	Left Side Object Detection Control Module	√	√	√		√	
2015	GMC	Yukon	Parking Assist Control Module	√	√	√	√	√	0247 0271
2015	GMC	Yukon	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	GMC	Yukon	Liftgate Control Module	√	√	√	√	√	0146 0169
2015	GMC	Yukon	Distance Sensing Cruise Control Module	√	√	√	√		0047
2015	GMC	Yukon	Assist Step Control Module	√	√	√	√	√	
2015	GMC	Yukon	Parking Brake Control Module	√	√	√	√	√	0229
2015	GMC	Yukon XL	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2015	GMC	Yukon XL	Transmission Control Module	√	√	√	√	√	0016 0033 0024 0026 0028 0030 0032 0023 0025 0027 0029 0031
2015	GMC	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2015	GMC	Yukon XL	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2015	GMC	Yukon XL	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0150 0232 0150
2015	GMC	Yukon XL	Instrument Cluster	√	√	√	√	√	0247
2015	GMC	Yukon XL	HVAC Control Module	√	√	√	√	√	0007 0129
2015	GMC	Yukon XL	HVAC Controls	√	√	√	√	√	
2015	GMC	Yukon XL	Chassis Control Module	√	√	√	√	√	0217 0095 0194 0245
2015	GMC	Yukon XL	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2015	GMC	Yukon XL	Passenger Presence Module	√	√	√	√	√	0057
2015	GMC	Yukon XL	Keyless Entry Control Module	√	√	√	√	√	
2015	GMC	Yukon XL	Multi-Axis Acceleration Sensor Module	√	√	√			0111
2015	GMC	Yukon XL	Power Steering Control Module	√	√	√	√	√	0150
2015	GMC	Yukon XL	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2015	GMC	Yukon XL	Suspension Control Module	√	√	√	√	√	0245
2015	GMC	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0037
2015	GMC	Yukon XL	Steering Column Lock Control Module	√	√	√	√		
2015	GMC	Yukon XL	Amplifier	√	√	√	√		
2015	GMC	Yukon XL	Radio Controls	√	√	√	√		0241
2015	GMC	Yukon XL	Human Machine Interface Control Module	√	√	√	√	√	0150
2015	GMC	Yukon XL	Media Disc Player	√	√	√	√	√	
2015	GMC	Yukon XL	Radio	√	√	√	√	√	0226 0150

2015	GMC	Yukon XL	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2015	GMC	Yukon XL	Left Side Object Detection Control Module	√	√	√		√	
2015	GMC	Yukon XL	Parking Assist Control Module	√	√	√	√	√	0247 0271
2015	GMC	Yukon XL	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2015	GMC	Yukon XL	Liftgate Control Module	√	√	√	√	√	0146 0169
2015	GMC	Yukon XL	Distance Sensing Cruise Control Module	√	√	√	√		0047
2015	GMC	Yukon XL	Assist Step Control Module	√	√	√	√	√	
2015	GMC	Yukon XL	Parking Brake Control Module	√	√	√	√	√	0229
2014	GMC	Acadia	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0214
2014	GMC	Acadia	Transmission Control Module	√	√	√	√	√	0016
2014	GMC	Acadia	Electronic Brake Control Module	√	√	√	√	√	0090 0225 0111
2014	GMC	Acadia	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2014	GMC	Acadia	Body Control Module	√	√	√	√	√	0263 0261
2014	GMC	Acadia	Theft Deterrent Module	√	√	√	√		
2014	GMC	Acadia	Instrument Cluster	√	√	√	√	√	
2014	GMC	Acadia	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2014	GMC	Acadia	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2014	GMC	Acadia	Head-Up Display Module	√	√	√	√	√	
2014	GMC	Acadia	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	GMC	Acadia	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	GMC	Acadia	Liftgate Control Module	√	√	√	√		0146
2014	GMC	Acadia	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	GMC	Acadia	Radio	√	√	√	√	√	
2014	GMC	Acadia	Passenger Presence Module	√	√	√	√		0057
2014	GMC	Acadia	Parking Assist Control Module	√	√	√	√	√	0247
2014	GMC	Acadia	Right Side Object Detection Control Module	√	√	√		√	
2014	GMC	Acadia	Seat Memory Control Module	√	√	√	√	√	
2014	GMC	Acadia	Left Side Object Detection Control Module	√	√	√		√	
2014	GMC	Acadia	Rear Audio Control Module	√	√	√	√		
2014	GMC	Acadia	Driver Door Switch Panel Control Module	√	√	√	√	√	
2014	GMC	Acadia	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2014	GMC	Acadia	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	GMC	Acadia	Frontview Camera Module	√	√	√	√	√	0205 0196
2014	GMC	Acadia	Personal Audio Link Control Module	√	√	√			0231
2014	GMC	Acadia	Front Seat Heating Control Module	√	√	√	√		

2014	GMC	Savana	Engine Control Module	√	√	√	√	√	0209 0132 0067 0086 0217 0258 0156 0263 0237 0210 0115 0058 0042 0044 0088 0219 0073 0072 0070 0071 0117 0118 0119 0120 0240 0178 0180 0182 0184 0186 0188 0190 0192 0138 0137 0179 0181 0183 0185 0187
2014	GMC	Savana	Transmission Control Module	√	√	√	√	√	0016
2014	GMC	Savana	Electronic Brake Control Module	√	√	√	√	√	0225 0111
2014	GMC	Savana	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√		0172 0261
2014	GMC	Savana	Body Control Module	√	√	√	√	√	0263 0261
2014	GMC	Savana	Theft Deterrent Module	√	√	√	√		
2014	GMC	Savana	Instrument Cluster	√	√	√	√	√	
2014	GMC	Savana	Passenger Presence Module	√	√	√	√		0057
2014	GMC	Savana	Rollover Sensor Module	√	√	√	√		0172
2014	GMC	Savana	Chime Alarm Control Module	√	√	√		√	
2014	GMC	Savana	Radio	√	√	√	√	√	
2014	GMC	Savana	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	GMC	Savana	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	GMC	Savana	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	GMC	Savana	Parking Assist Control Module	√	√	√	√	√	0247
2014	GMC	Savana	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	GMC	Savana	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2014	GMC	Savana	Auxiliary Heater Control Module	√	√	√	√	√	
2014	GMC	Sierra	Engine Control Module	√	√	√	√	√	0263 0156 0209 0076 0020 0132 0067 0086 0154 0217 0006 0131
2014	GMC	Sierra	Transmission Control Module	√	√	√	√	√	0016
2014	GMC	Sierra	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111 0277
2014	GMC	Sierra	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134 0111
2014	GMC	Sierra	Body Control Module	√	√	√	√	√	0199 0239 0161 0162 0163 0164 0165 0166 0167 0168 0242 0263 0203 0201 0208 0206 0202 0150 0232 0150
2014	GMC	Sierra	Instrument Cluster	√	√	√	√	√	0247
2014	GMC	Sierra	HVAC Control Module	√	√	√	√	√	0007 0129
2014	GMC	Sierra	HVAC Controls	√	√	√	√	√	
2014	GMC	Sierra	Transfer Case Control Module	√	√	√	√	√	0037

2014	GMC	Sierra	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	GMC	Sierra	Passenger Presence Module	√	√	√	√	√	0057
2014	GMC	Sierra	Power Steering Control Module	√	√	√	√	√	0150
2014	GMC	Sierra	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2014	GMC	Sierra	Parking Assist Control Module	√	√	√	√	√	0247 0271
2014	GMC	Sierra	Seat Memory Control Module - Driver	√	√	√	√	√	0310
2014	GMC	Sierra	Parking Brake Control Module	√	√	√	√	√	0229
2014	GMC	Sierra	Chassis Control Module	√	√	√	√	√	0217 0095 0194
2014	GMC	Sierra	Radio	√	√	√	√	√	0226 0150
2014	GMC	Sierra	Human Machine Interface Control Module	√	√	√	√	√	0150
2014	GMC	Sierra	Media Disc Player	√	√	√	√	√	
2014	GMC	Sierra	Amplifier	√	√	√	√		
2014	GMC	Sierra	Radio Controls	√	√	√	√		0241
2014	GMC	Sierra	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	GMC	Sierra HD	Engine Control Module	√	√	√	√	√	0263 0209 0132 0067 0086 0217 0258 0139 0237 0210 0115 0058 0042 0044 0088 0219 0073 0072 0070 0071 0117 0118 0119 0120 0240 0178 0180 0182 0184 0186 0188 0190 0192 0138 0137 0179 0181 0183 0185 0187
2014	GMC	Sierra HD	Transmission Control Module	√	√	√	√	√	0016 0019
2014	GMC	Sierra HD	Electronic Brake Control Module	√	√	√	√	√	0111
2014	GMC	Sierra HD	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2014	GMC	Sierra HD	Body Control Module	√	√	√	√	√	0263 0261
2014	GMC	Sierra HD	Theft Deterrent Module	√	√	√	√		
2014	GMC	Sierra HD	Instrument Cluster	√	√	√	√	√	
2014	GMC	Sierra HD	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2014	GMC	Sierra HD	Transfer Case Control Module	√	√	√	√	√	0037
2014	GMC	Sierra HD	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	GMC	Sierra HD	Trailer Brake Control Module	√	√	√	√	√	
2014	GMC	Sierra HD	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	GMC	Sierra HD	Radio	√	√	√	√	√	
2014	GMC	Sierra HD	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	GMC	Sierra HD	Glow Plug Control Module	√	√	√	√	√	0178 0180 0182 0184 0186 0188 0190 0192
2014	GMC	Sierra HD	Parking Assist Control Module	√	√	√	√	√	
2014	GMC	Sierra HD	Seat Memory Control Module	√	√	√	√	√	
2014	GMC	Sierra HD	Personal Audio Link Control Module	√	√	√			0231



2014	GMC	Sierra HD	Amplifier	√	√	√	√		
2014	GMC	Sierra HD	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2014	GMC	Sierra HD	Driver Door Switch Panel Control Module	√	√	√	√	√	
2014	GMC	Sierra HD	Rear Audio Control Module	√	√	√	√		
2014	GMC	Sierra HD	Suspension Control Module	√	√	√	√	√	0245
2014	GMC	Sierra HD	Fuel Injector Control Module	√	√	√	√	√	
2014	GMC	Sierra HD	Power Take-Off Control Module	√	√	√	√	√	0102 0121 0110 0009
2014	GMC	Sierra HD	Parking Brake Control Module	√	√	√	√	√	0229
2014	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0156 0209 0132 0067 0086 0217 0258
2014	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0017 0036 0016
2014	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2014	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0134
2014	GMC	Terrain	Body Control Module	√	√	√	√	√	0242 0263 0203 0201 0208 0206 0083 0160
2014	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0247
2014	GMC	Terrain	HVAC Control Module	√	√	√	√	√	0007 0129
2014	GMC	Terrain	Multi-Axis Acceleration Sensor Module	√	√	√			0112 0111
2014	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0080 0089
2014	GMC	Terrain	Steering Wheel Angle Sensor Module	√	√	√			0093 0090
2014	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	GMC	Terrain	Liftgate Control Module	√	√	√	√		0146
2014	GMC	Terrain	Rear Differential Clutch Control Module	√	√	√	√		0155
2014	GMC	Terrain	Passenger Presence Module	√	√	√	√		0057
2014	GMC	Terrain	Front Seat Heating Control Module	√	√	√	√	√	
2014	GMC	Terrain	Frontview Camera Module	√	√	√	√	√	0196 0205 075A
2014	GMC	Terrain	Left Side Object Detection Control Module	√	√	√		√	
2014	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0247
2014	GMC	Terrain	Right Side Object Detection Control Module	√	√	√		√	
2014	GMC	Terrain	Seat Memory Control Module	√	√	√	√	√	0310
2014	GMC	Terrain	Radio	√	√	√	√	√	
2014	GMC	Yukon	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0258
2014	GMC	Yukon	Transmission Control Module	√	√	√	√	√	0016
2014	GMC	Yukon	Electronic Brake Control Module	√	√	√	√	√	0225 0111
2014	GMC	Yukon	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2014	GMC	Yukon	Body Control Module	√	√	√	√	√	0263 0261
2014	GMC	Yukon	Theft Deterrent Module	√	√	√	√		
2014	GMC	Yukon	Instrument Cluster	√	√	√	√	√	
2014	GMC	Yukon	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2014	GMC	Yukon	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160

2014	GMC	Yukon	Transfer Case Control Module	√	√	√	√	√	0037
2014	GMC	Yukon	Liftgate Control Module	√	√	√	√		0146
2014	GMC	Yukon	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	GMC	Yukon	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	GMC	Yukon	Passenger Presence Module	√	√	√	√		
2014	GMC	Yukon	Chassis Control Module	√	√	√	√	√	0217
2014	GMC	Yukon	Auxiliary Body Control Module	√	√	√	√	√	0050
2014	GMC	Yukon	Left Side Object Detection Control Module	√	√	√	√	√	
2014	GMC	Yukon	Parking Assist Control Module	√	√	√	√	√	
2014	GMC	Yukon	Rear Seat Heating Control Module	√	√	√	√	√	
2014	GMC	Yukon	Right Side Object Detection Control Module	√	√	√	√	√	
2014	GMC	Yukon	Seat Memory Control Module	√	√	√	√	√	
2014	GMC	Yukon	Radio	√	√	√	√	√	
2014	GMC	Yukon	Driver Door Switch Panel Control Module	√	√	√	√	√	
2014	GMC	Yukon	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2014	GMC	Yukon	Amplifier	√	√	√	√		
2014	GMC	Yukon	Personal Audio Link Control Module	√	√	√			0231
2014	GMC	Yukon	Rear Audio Control Module	√	√	√	√		
2014	GMC	Yukon	Suspension Control Module	√	√	√	√	√	0245
2014	GMC	Yukon	Assist Step Control Module	√	√	√	√	√	
2014	GMC	Yukon	Parking Brake Control Module	√	√	√	√	√	0229
2014	GMC	Yukon XL	Engine Control Module	√	√	√	√	√	0156 0209 0132 0067 0263 0086 0217 0258
2014	GMC	Yukon XL	Transmission Control Module	√	√	√	√	√	0016
2014	GMC	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0225 0111
2014	GMC	Yukon XL	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0261
2014	GMC	Yukon XL	Body Control Module	√	√	√	√	√	0263 0261
2014	GMC	Yukon XL	Theft Deterrent Module	√	√	√	√		
2014	GMC	Yukon XL	Instrument Cluster	√	√	√	√	√	
2014	GMC	Yukon XL	HVAC Control Module	√	√	√	√	√	0116 0007 0129
2014	GMC	Yukon XL	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259 0048 0011
2014	GMC	Yukon XL	Passenger Presence Module	√	√	√	√		
2014	GMC	Yukon XL	Remote Control Door Lock Receiver	√	√	√	√	√	0204 0239 0161 0162 0163 0164 0159 0160
2014	GMC	Yukon XL	Auxiliary Body Control Module	√	√	√	√	√	0050
2014	GMC	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0037
2014	GMC	Yukon XL	Chassis Control Module	√	√	√	√	√	0217
2014	GMC	Yukon XL	Left Side Object Detection Control Module	√	√	√	√	√	
2014	GMC	Yukon XL	Parking Assist Control Module	√	√	√	√	√	
2014	GMC	Yukon XL	Rear Seat Heating Control Module	√	√	√	√	√	
2014	GMC	Yukon XL	Right Side Object Detection Control Module	√	√	√	√	√	
2014	GMC	Yukon XL	Seat Memory Control Module	√	√	√	√	√	

2014	GMC	Yukon XL	Driver Door Switch Panel Control Module	√	√	√	√	√	
2014	GMC	Yukon XL	Passenger Door Switch Panel Control Module	√	√	√	√	√	
2014	GMC	Yukon XL	Radio	√	√	√	√	√	
2014	GMC	Yukon XL	Personal Audio Link Control Module	√	√	√			0231
2014	GMC	Yukon XL	Amplifier	√	√	√	√		
2014	GMC	Yukon XL	Rear Audio Control Module	√	√	√	√		
2014	GMC	Yukon XL	Digital Radio Receiver Control Module	√	√	√	√	√	
2014	GMC	Yukon XL	Liftgate Control Module	√	√	√	√		0146
2014	GMC	Yukon XL	Suspension Control Module	√	√	√	√	√	0245
2014	GMC	Yukon XL	Assist Step Control Module	√	√	√	√	√	
2014	GMC	Yukon XL	Parking Brake Control Module	√	√	√	√	√	0229
2013	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2013	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0016
2013	GMC	Terrain	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2013	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2013	GMC	Terrain	Power Steering Control Module	√	√	√	√		
2013	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2013	GMC	Terrain	Passenger Presence Module	√	√	√	√		0322
2013	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0301
2013	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2013	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146
2013	GMC	Terrain	Front Seat Heating Control Module	√	√	√	√	√	
2013	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0301
2013	GMC	Terrain	Left Side Object Detection Control Module	√	√	√		√	
2013	GMC	Terrain	Right Side Object Detection Control Module	√	√	√		√	
2013	GMC	Terrain	Radio	√	√	√	√	√	
2013	GMC	Terrain	Seat Memory Control Module	√	√	√	√	√	0310
2013	GMC	Terrain	Body Control Module	√	√	√	√	√	0243 0263 0203 0201 0208 0206 0297 0298
2013	GMC	Terrain	HVAC Control Module	√	√	√	√	√	0311 0129
2013	GMC	Terrain	Frontview Camera Module	√	√	√	√	√	0205 0196
2013	GMC	Terrain	Multi-Axis Acceleration Sensor Module	√	√	√			
2013	GMC truck	Acadia - 2WD	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Acadia - 2WD	Transmission control module		√	√	√	√	
2013	GMC truck	Acadia - 2WD	Fuel Pump Control Module	√	√	√	√	√	
2013	GMC truck	Acadia - 2WD	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Acadia - 2WD	Liftgate module	√	√	√	√	√	
2013	GMC truck	Acadia - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	GMC truck	Acadia - 2WD	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Acadia - 2WD	Head up dilay	√	√	√	√		
2013	GMC truck	Acadia - 2WD	Memory seat module	√	√	√	√	√	

2013	GMC truck	Acadia - 2WD	Park assist module	√	√	√	√		
2013	GMC truck	Acadia - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Acadia - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2013	GMC truck	Acadia - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Acadia - 2WD	Driver door switch	√	√	√	√	√	0527
2013	GMC truck	Acadia - 2WD	Passenger door switch	√	√	√	√	√	0527
2013	GMC truck	Acadia - 2WD	Personal audio link module	√	√	√			0528 0529
2013	GMC truck	Acadia - 2WD	Radio	√	√	√	√	√	
2013	GMC truck	Acadia - 2WD	Passenger presence system	√	√	√	√	√	
2013	GMC truck	Acadia - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Acadia - 2WD	Theft Deterrent Module	√	√	√	√		
2013	GMC truck	Acadia - 2WD	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Acadia - 2WD	Left side object detection module	√	√	√		√	
2013	GMC truck	Acadia - 2WD	Right side object detection module	√	√	√	√	√	0494 0495
2013	GMC truck	Acadia - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Acadia - 4WD	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Acadia - 4WD	Transmission control module		√	√	√	√	
2013	GMC truck	Acadia - 4WD	Fuel Pump Control Module	√	√	√	√	√	
2013	GMC truck	Acadia - 4WD	Rear drive system	√	√	√	√		0530
2013	GMC truck	Acadia - 4WD	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Acadia - 4WD	Liftgate module	√	√	√	√	√	
2013	GMC truck	Acadia - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	GMC truck	Acadia - 4WD	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Acadia - 4WD	Head up display	√	√	√	√		
2013	GMC truck	Acadia - 4WD	Memory seat module	√	√	√	√	√	
2013	GMC truck	Acadia - 4WD	Park assist module	√	√	√	√		
2013	GMC truck	Acadia - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Acadia - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2013	GMC truck	Acadia - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Acadia - 4WD	Driver door switch	√	√	√	√	√	0527
2013	GMC truck	Acadia - 4WD	Passenger door switch	√	√	√	√	√	0527
2013	GMC truck	Acadia - 4WD	Personal audio link module	√	√	√			0528 0529
2013	GMC truck	Acadia - 4WD	Radio	√	√	√	√	√	
2013	GMC truck	Acadia - 4WD	Passenger presence system	√	√	√	√	√	
2013	GMC truck	Acadia - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Acadia - 4WD	Theft Deterrent Module	√	√	√	√		
2013	GMC truck	Acadia - 4WD	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Acadia - 4WD	Left side object detection module	√	√	√		√	
2013	GMC truck	Acadia - 4WD	Right side object detection module	√	√	√	√	√	0494 0495
2013	GMC truck	Acadia - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493

2013	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2013	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2013	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0088 0540 0540
2013	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2013	GMC truck	Savana	Park assist module	√	√	√	√		
2013	GMC truck	Savana	Radio	√	√	√	√	√	
2013	GMC truck	Savana	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Savana	Passenger presence system	√	√	√	√		0517
2013	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Savana	Theft Deterrent Module	√	√	√	√	√	0494 0495
2013	GMC truck	Savana	Navigation radio	√	√	√	√	√	
2013	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2013	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2013	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0088 0540 0540
2013	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2013	GMC truck	Savana	Park assist module	√	√	√	√		
2013	GMC truck	Savana	Radio	√	√	√	√	√	
2013	GMC truck	Savana	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Savana	Passenger presence system	√	√	√	√		0517
2013	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Savana	Theft Deterrent Module	√	√	√	√	√	0494 0495
2013	GMC truck	Savana	Navigation radio	√	√	√	√	√	
2013	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2013	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2013	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2013	GMC truck	Savana	Park assist module	√	√	√	√		

2013	GMC truck	Savana	Radio	√	√	√	√	√	
2013	GMC truck	Savana	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Savana	Passenger presence system	√	√	√	√		0517
2013	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Savana	Theft Deterrent Module	√	√	√	√	√	0494 0495
2013	GMC truck	Savana	Navigation radio	√	√	√	√	√	
2013	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2013	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2013	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2013	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2013	GMC truck	Savana	Park assist module	√	√	√	√		
2013	GMC truck	Savana	Radio	√	√	√	√	√	
2013	GMC truck	Savana	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Savana	Passenger presence system	√	√	√	√		0517
2013	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Savana	Theft Deterrent Module	√	√	√	√	√	0494 0495
2013	GMC truck	Savana	Navigation radio	√	√	√	√	√	
2013	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Sierra	Transmission control module	√	√	√	√	√	0493
2013	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2013	GMC truck	Sierra	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0498
2013	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Sierra	Passenger presence system	√	√	√	√		
2013	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√		
2013	GMC truck	Sierra	Memory seat module	√	√	√	√	√	
2013	GMC truck	Sierra	Rear heated seat module	√	√	√	√		
2013	GMC truck	Sierra	Park assist module	√	√	√	√		
2013	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	

2013	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	
2013	GMC truck	Sierra	Driver door switch	√	√	√	√	√	
2013	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	
2013	GMC truck	Sierra	Personal audio link module						0529
2013	GMC truck	Sierra	Radio	√	√	√	√	√	0528
2013	GMC truck	Sierra	Navigation radio	√	√	√	√	√	0529
2013	GMC truck	Sierra	Trailer brake control module	√	√	√	√	√	
2013	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Sierra	Electronic suension control	√	√	√	√	√	0532
2013	GMC truck	Sierra	FPCM with trailer brake control	√	√	√	√	√	0506
2013	GMC truck	Sierra	Transfer Case Control Module	√	√	√	√	√	0493
2013	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Sierra	Transmission control module	√	√	√	√	√	0493
2013	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2013	GMC truck	Sierra	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0498
2013	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Sierra	Passenger presence system	√	√	√	√		
2013	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√		
2013	GMC truck	Sierra	Memory seat module	√	√	√	√	√	
2013	GMC truck	Sierra	Rear heated seat module	√	√	√	√		
2013	GMC truck	Sierra	Park assist module	√	√	√	√		
2013	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	
2013	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	
2013	GMC truck	Sierra	Driver door switch	√	√	√	√	√	
2013	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	
2013	GMC truck	Sierra	Personal audio link module						0529
2013	GMC truck	Sierra	Radio	√	√	√	√	√	0528
2013	GMC truck	Sierra	Navigation radio	√	√	√	√	√	0529
2013	GMC truck	Sierra	Trailer brake control module	√	√	√	√	√	
2013	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Sierra	Electronic suension control	√	√	√	√	√	0532
2013	GMC truck	Sierra	FPCM with trailer brake control	√	√	√	√	√	0506
2013	GMC truck	Sierra	Transfer Case Control Module	√	√	√	√	√	0493
2013	GMC truck	Sierra Hybrid	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Sierra Hybrid	Transmission control module		√	√	√	√	

2013	GMC truck	Sierra Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Accessory power module	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Sierra Hybrid	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0498
2013	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Sierra Hybrid	Passenger presence system	√	√	√	√		
2013	GMC truck	Sierra Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Sierra Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Sierra Hybrid	Theft Deterrent Module	√	√	√	√		
2013	GMC truck	Sierra Hybrid	A/C compressor control module	√	√	√	√		
2013	GMC truck	Sierra Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Heated seat module	√	√	√	√		
2013	GMC truck	Sierra Hybrid	Rear heated seat module	√	√	√	√		
2013	GMC truck	Sierra Hybrid	Park assist module	√	√	√	√		
2013	GMC truck	Sierra Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Sierra Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Amplifier (bose)	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Driver door switch	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Passenger door switch	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Personal audio link module						0529
2013	GMC truck	Sierra Hybrid	Radio	√	√	√	√	√	0528
2013	GMC truck	Sierra Hybrid	Navigation radio	√	√	√	√	√	0529
2013	GMC truck	Sierra Hybrid	FPCM with trailer brake control	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2013	GMC truck	Sierra Hybrid	Electronic suspension control	√	√	√	√	√	0532
2013	GMC truck	Sierra Hybrid	Power steering control module	√	√	√	√	√	0536
2013	GMC truck	Sierra Hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Sierra Hybrid	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Sierra Hybrid	Transmission control module		√	√	√	√	
2013	GMC truck	Sierra Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Accessory power module	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Sierra Hybrid	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0498
2013	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Sierra Hybrid	Passenger presence system	√	√	√	√		
2013	GMC truck	Sierra Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Sierra Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497



2013	GMC truck	Sierra Hybrid	Theft Deterrent Module	√	√	√	√		
2013	GMC truck	Sierra Hybrid	A/C compressor control module	√	√	√	√		
2013	GMC truck	Sierra Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Heated seat module	√	√	√	√		
2013	GMC truck	Sierra Hybrid	Rear heated seat module	√	√	√	√		
2013	GMC truck	Sierra Hybrid	Park assist module	√	√	√	√		
2013	GMC truck	Sierra Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Sierra Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Amplifier (bose)	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Driver door switch	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Passenger door switch	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Personal audio link module						0529
2013	GMC truck	Sierra Hybrid	Radio	√	√	√	√	√	0528
2013	GMC truck	Sierra Hybrid	Navigation radio	√	√	√	√	√	0529
2013	GMC truck	Sierra Hybrid	FPCM with trailer brake control	√	√	√	√	√	
2013	GMC truck	Sierra Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2013	GMC truck	Sierra Hybrid	Electronic suension control	√	√	√	√	√	0532
2013	GMC truck	Sierra Hybrid	Power steering control module	√	√	√	√	√	0536
2013	GMC truck	Sierra Hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Yukon	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Yukon	Liftgate module	√	√	√	√	√	
2013	GMC truck	Yukon	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Yukon	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0498
2013	GMC truck	Yukon	Passenger presence system	√	√	√	√		
2013	GMC truck	Yukon	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Yukon	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Yukon	Theft Deterrent Module	√	√	√	√		
2013	GMC truck	Yukon	Assist step controller	√	√	√	√	√	0531
2013	GMC truck	Yukon	Memory seat module	√	√	√	√	√	
2013	GMC truck	Yukon	Rear heated seat module	√	√	√	√		
2013	GMC truck	Yukon	Park assist module	√	√	√	√		
2013	GMC truck	Yukon	Left side object detection module	√	√	√	√	√	
2013	GMC truck	Yukon	Right side object detection module	√	√	√	√		
2013	GMC truck	Yukon	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Yukon	Rear HVAC/RSA	√	√	√	√	√	
2013	GMC truck	Yukon	Amplifier (bose)	√	√	√	√	√	
2013	GMC truck	Yukon	Driver door switch	√	√	√	√	√	
2013	GMC truck	Yukon	Passenger door switch	√	√	√	√	√	
2013	GMC truck	Yukon	Personal audio link module						0529
2013	GMC truck	Yukon	Radio	√	√	√	√	√	

2013	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Yukon	Navigation radio	√	√	√	√	√	0529
2013	GMC truck	Yukon	FPCM with trailer brake control	√	√	√	√	√	
2013	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Yukon	Electronic suension control	√	√	√	√	√	0532
2013	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon	Transmission control module		√	√	√	√	
2013	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Yukon	Liftgate module	√	√	√	√	√	
2013	GMC truck	Yukon	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Yukon	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0498
2013	GMC truck	Yukon	Passenger presence system	√	√	√	√		
2013	GMC truck	Yukon	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Yukon	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Yukon	Theft Deterrent Module	√	√	√	√		
2013	GMC truck	Yukon	Assist step controller	√	√	√	√	√	0531
2013	GMC truck	Yukon	Memory seat module	√	√	√	√	√	
2013	GMC truck	Yukon	Rear heated seat module	√	√	√	√		
2013	GMC truck	Yukon	Park assist module	√	√	√	√		
2013	GMC truck	Yukon	Left side object detection module	√	√	√	√	√	
2013	GMC truck	Yukon	Right side object detection module	√	√	√	√		
2013	GMC truck	Yukon	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Yukon	Rear HVAC/RSA	√	√	√	√	√	
2013	GMC truck	Yukon	Amplifier (bose)	√	√	√	√	√	
2013	GMC truck	Yukon	Driver door switch	√	√	√	√	√	
2013	GMC truck	Yukon	Passenger door switch	√	√	√	√	√	
2013	GMC truck	Yukon	Personal audio link module						0529
2013	GMC truck	Yukon	Radio	√	√	√	√	√	
2013	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Yukon	Navigation radio	√	√	√	√	√	0529
2013	GMC truck	Yukon	FPCM with trailer brake control	√	√	√	√	√	
2013	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Yukon	Electronic suension control	√	√	√	√	√	0532
2013	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon	Transmission control module		√	√	√	√	
2013	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon hybrid	Engine Control Module	√	√	√	√	√	0493

2013	GMC truck	Yukon hybrid	Transmission control module		√	√	√	√	
2013	GMC truck	Yukon hybrid	Fuel Pump Control Module	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Accessory power module	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Liftgate module	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Yukon hybrid	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0498
2013	GMC truck	Yukon hybrid	Passenger presence system	√	√	√	√		
2013	GMC truck	Yukon hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Yukon hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Yukon hybrid	Theft Deterrent Module	√	√	√	√		
2013	GMC truck	Yukon hybrid	A/C compressor control module	√	√	√	√		
2013	GMC truck	Yukon hybrid	Serial Data Gateway Module	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Assist step controller	√	√	√	√	√	0531
2013	GMC truck	Yukon hybrid	Heated seat module	√	√	√	√		
2013	GMC truck	Yukon hybrid	Rear heated seat module	√	√	√	√		
2013	GMC truck	Yukon hybrid	Park assist module	√	√	√	√		
2013	GMC truck	Yukon hybrid	Left side object detection module	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Right side object detection module	√	√	√	√		
2013	GMC truck	Yukon hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Yukon hybrid	Rear HVAC/RSA	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Amplifier (bose)	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Driver door switch	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Passenger door switch	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Personal audio link module						0529
2013	GMC truck	Yukon hybrid	Radio	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Yukon hybrid	Navigation radio	√	√	√	√	√	0529
2013	GMC truck	Yukon hybrid	FPCM with trailer brake control	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2013	GMC truck	Yukon hybrid	Electronic suspension control	√	√	√	√	√	0532
2013	GMC truck	Yukon hybrid	Power steering control module	√	√	√	√	√	0536
2013	GMC truck	Yukon hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Yukon hybrid	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon hybrid	Transmission control module		√	√	√	√	
2013	GMC truck	Yukon hybrid	Fuel Pump Control Module	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Accessory power module	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Liftgate module	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496

2013	GMC truck	Yukon hybrid	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0498
2013	GMC truck	Yukon hybrid	Passenger presence system	√	√	√	√		
2013	GMC truck	Yukon hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Yukon hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Yukon hybrid	Theft Deterrent Module	√	√	√	√		
2013	GMC truck	Yukon hybrid	A/C compressor control module	√	√	√	√		
2013	GMC truck	Yukon hybrid	Serial Data Gateway Module	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Assist step controller	√	√	√	√	√	0531
2013	GMC truck	Yukon hybrid	Heated seat module	√	√	√	√		
2013	GMC truck	Yukon hybrid	Rear heated seat module	√	√	√	√		
2013	GMC truck	Yukon hybrid	Park assist module	√	√	√	√		
2013	GMC truck	Yukon hybrid	Left side object detection module	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Right side object detection module	√	√	√	√		
2013	GMC truck	Yukon hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Yukon hybrid	Rear HVAC/RSA	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Amplifier (bose)	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Driver door switch	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Passenger door switch	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Personal audio link module						0529
2013	GMC truck	Yukon hybrid	Radio	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Yukon hybrid	Navigation radio	√	√	√	√	√	0529
2013	GMC truck	Yukon hybrid	FPCM with trailer brake control	√	√	√	√	√	
2013	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2013	GMC truck	Yukon hybrid	Electronic suspension control	√	√	√	√	√	0532
2013	GMC truck	Yukon hybrid	Power steering control module	√	√	√	√	√	0536
2013	GMC truck	Yukon hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon XL	Transmission control module		√	√	√	√	
2013	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon XL	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Yukon XL	Liftgate module	√	√	√	√	√	
2013	GMC truck	Yukon XL	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Yukon XL	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0498
2013	GMC truck	Yukon XL	Passenger presence system	√	√	√	√		
2013	GMC truck	Yukon XL	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Yukon XL	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Yukon XL	Theft Deterrent Module	√	√	√	√		
2013	GMC truck	Yukon XL	Assist step controller	√	√	√	√	√	0531

2013	GMC truck	Yukon XL	Memory seat module	√	√	√	√	√	
2013	GMC truck	Yukon XL	Rear heated seat module	√	√	√	√		
2013	GMC truck	Yukon XL	Park assist module	√	√	√	√		
2013	GMC truck	Yukon XL	Left side object detection module	√	√	√	√	√	
2013	GMC truck	Yukon XL	Right side object detection module	√	√	√	√		
2013	GMC truck	Yukon XL	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Yukon XL	Rear HVAC/RSA	√	√	√	√	√	
2013	GMC truck	Yukon XL	Amplifier (bose)	√	√	√	√	√	
2013	GMC truck	Yukon XL	Driver door switch	√	√	√	√	√	
2013	GMC truck	Yukon XL	Passenger door switch	√	√	√	√	√	
2013	GMC truck	Yukon XL	Personal audio link module						0529
2013	GMC truck	Yukon XL	Radio	√	√	√	√	√	
2013	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Yukon XL	Navigation radio	√	√	√	√	√	0529
2013	GMC truck	Yukon XL	FPCM with trailer brake control	√	√	√	√	√	
2013	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Yukon XL	Electronic suension control	√	√	√	√	√	0532
2013	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√	√	0506
2013	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon XL	Transmission control module		√	√	√	√	
2013	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	0493
2013	GMC truck	Yukon XL	Digital radio receiver	√	√	√	√	√	
2013	GMC truck	Yukon XL	Liftgate module	√	√	√	√	√	
2013	GMC truck	Yukon XL	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2013	GMC truck	Yukon XL	Instrument panel cluster	√	√	√	√	√	
2013	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0498
2013	GMC truck	Yukon XL	Passenger presence system	√	√	√	√		
2013	GMC truck	Yukon XL	Remote control door lock receiver	√	√	√	√	√	0513 0159
2013	GMC truck	Yukon XL	Supplemental inflatable restraint	√	√	√	√	√	0497
2013	GMC truck	Yukon XL	Theft Deterrent Module	√	√	√	√		
2013	GMC truck	Yukon XL	Assist step controller	√	√	√	√	√	0531
2013	GMC truck	Yukon XL	Memory seat module	√	√	√	√	√	
2013	GMC truck	Yukon XL	Rear heated seat module	√	√	√	√		
2013	GMC truck	Yukon XL	Park assist module	√	√	√	√		
2013	GMC truck	Yukon XL	Left side object detection module	√	√	√	√	√	
2013	GMC truck	Yukon XL	Right side object detection module	√	√	√	√		
2013	GMC truck	Yukon XL	HVAC Control Module	√	√	√	√	√	0500 0526
2013	GMC truck	Yukon XL	Rear HVAC/RSA	√	√	√	√	√	
2013	GMC truck	Yukon XL	Amplifier (bose)	√	√	√	√	√	
2013	GMC truck	Yukon XL	Driver door switch	√	√	√	√	√	

2013	GMC truck	Yukon XL	Passenger door switch	√	√	√	√	√	
2013	GMC truck	Yukon XL	Personal audio link module						0529
2013	GMC truck	Yukon XL	Radio	√	√	√	√	√	
2013	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0499 0497
2013	GMC truck	Yukon XL	Navigation radio	√	√	√	√	√	0529
2013	GMC truck	Yukon XL	FPCM with trailer brake control	√	√	√	√	√	
2013	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2013	GMC truck	Yukon XL	Electronic suension control	√	√	√	√	√	0532
2013	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√	√	0506
2013	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493
2012	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2012	GMC	Terrain	Fuel Pump Control Module	√	√	√	√	√	0217
2012	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0016
2012	GMC	Terrain	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2012	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2012	GMC	Terrain	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2012	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2012	GMC	Terrain	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2012	GMC	Terrain	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2012	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2012	GMC	Terrain	Passenger Presence Module	√	√	√	√		0322
2012	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0301
2012	GMC	Terrain	Radio	√	√	√	√	√	
2012	GMC	Terrain	Multimedia Player Interface Module	√	√	√	√		
2012	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2012	GMC	Terrain	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2012	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146
2012	GMC	Terrain	Seat Memory Control Module	√	√	√	√	√	0310
2012	GMC	Terrain	Front Seat Heating Control Module	√	√	√	√	√	
2012	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0301
2012	GMC	Terrain	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2012	GMC	Terrain	Frontview Camera Module	√	√	√	√	√	0205 0196
2012	GMC truck	Acadia - 2WD	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Acadia - 2WD	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Acadia - 2WD	Transmission control module		√	√	√	√	
2012	GMC truck	Acadia - 2WD	Digital radio receiver	√	√	√	√	√	
2012	GMC truck	Acadia - 2WD	Liftgate module	√	√	√	√	√	
2012	GMC truck	Acadia - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2012	GMC truck	Acadia - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	GMC truck	Acadia - 2WD	Head up dilay	√	√	√	√		

2012	GMC truck	Acadia - 2WD	Instrument panel cluster	√	√	√	√	√	
2012	GMC truck	Acadia - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	GMC truck	Acadia - 2WD	Passenger presence system	√	√	√	√	√	
2012	GMC truck	Acadia - 2WD	Driver door switch	√	√	√	√	√	0527
2012	GMC truck	Acadia - 2WD	Passenger door switch	√	√	√	√	√	0527
2012	GMC truck	Acadia - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	GMC truck	Acadia - 2WD	Theft Deterrent Module	√	√	√	√		
2012	GMC truck	Acadia - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2012	GMC truck	Acadia - 2WD	Body Control Module	√	√	√	√	√	0499 0497
2012	GMC truck	Acadia - 2WD	Radio	√	√	√	√	√	
2012	GMC truck	Acadia - 2WD	Personal audio link module	√	√	√			0528 0529
2012	GMC truck	Acadia - 2WD	Memory seat module	√	√	√	√	√	
2012	GMC truck	Acadia - 2WD	Park assist module	√	√	√	√	√	0494 0495
2012	GMC truck	Acadia - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Acadia - 2WD	Rear drive system	√	√	√	√	√	0530
2012	GMC truck	Acadia - 4WD	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Acadia - 4WD	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Acadia - 4WD	Transmission control module		√	√	√	√	
2012	GMC truck	Acadia - 4WD	Digital radio receiver	√	√	√	√	√	
2012	GMC truck	Acadia - 4WD	Liftgate module	√	√	√	√	√	
2012	GMC truck	Acadia - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2012	GMC truck	Acadia - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	GMC truck	Acadia - 4WD	Head up display	√	√	√	√		
2012	GMC truck	Acadia - 4WD	Instrument panel cluster	√	√	√	√	√	
2012	GMC truck	Acadia - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	GMC truck	Acadia - 4WD	Passenger presence system	√	√	√	√	√	
2012	GMC truck	Acadia - 4WD	Driver door switch	√	√	√	√	√	0527
2012	GMC truck	Acadia - 4WD	Passenger door switch	√	√	√	√	√	0527
2012	GMC truck	Acadia - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	GMC truck	Acadia - 4WD	Theft Deterrent Module	√	√	√	√		
2012	GMC truck	Acadia - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2012	GMC truck	Acadia - 4WD	Body Control Module	√	√	√	√	√	0499 0497
2012	GMC truck	Acadia - 4WD	Radio	√	√	√	√	√	
2012	GMC truck	Acadia - 4WD	Personal audio link module	√	√	√			0528 0529
2012	GMC truck	Acadia - 4WD	Memory seat module	√	√	√	√	√	
2012	GMC truck	Acadia - 4WD	Park assist module	√	√	√	√	√	0494 0495
2012	GMC truck	Acadia - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Acadia - 4WD	Rear drive system	√	√	√	√	√	0530
2012	GMC truck	Canyon Pickup - 2WD	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Canyon Pickup - 2WD	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Canyon Pickup - 2WD	Transmission control module	√	√	√	√	√	0493



2012	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√	√	0516
2012	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0495
2012	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2012	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2012	GMC truck	Canyon Pickup - 2WD	Passenger presence system		√	√			0517
2012	GMC truck	Canyon Pickup - 2WD	Theft Deterrent Module	√	√	√	√		0170
2012	GMC truck	Canyon Pickup - 2WD	Generator battery control module	√	√	√	√	√	
2012	GMC truck	Canyon Pickup - 2WD	Personal audio link module	√	√	√			0528
2012	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2012	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550 0159
2012	GMC truck	Canyon Pickup - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2012	GMC truck	Canyon Pickup - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2012	GMC truck	Canyon Pickup - 4WD	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Canyon Pickup - 4WD	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Canyon Pickup - 4WD	Transmission control module	√	√	√	√	√	0493
2012	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√	√	0516
2012	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0495
2012	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2012	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2012	GMC truck	Canyon Pickup - 4WD	Passenger presence system		√	√			0517
2012	GMC truck	Canyon Pickup - 4WD	Theft Deterrent Module	√	√	√	√		0170
2012	GMC truck	Canyon Pickup - 4WD	Generator battery control module	√	√	√	√	√	
2012	GMC truck	Canyon Pickup - 4WD	Personal audio link module	√	√	√			0528
2012	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2012	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550 0159
2012	GMC truck	Canyon Pickup - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2012	GMC truck	Canyon Pickup - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2012	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2012	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2012	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2012	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2012	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2012	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	GMC truck	Savana	Passenger presence system	√	√	√	√		0517
2012	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2012	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2012	GMC truck	Savana	Body Control Module	√	√	√	√	√	0499 0497
2012	GMC truck	Savana	Radio	√	√	√	√	√	



2012	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2012	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2012	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2012	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2012	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2012	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	GMC truck	Savana	Passenger presence system	√	√	√	√		0517
2012	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2012	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2012	GMC truck	Savana	Body Control Module	√	√	√	√	√	0499 0497
2012	GMC truck	Savana	Radio	√	√	√	√	√	
2012	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2012	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2012	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2012	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2012	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	GMC truck	Savana	Passenger presence system	√	√	√	√		0517
2012	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2012	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2012	GMC truck	Savana	Body Control Module	√	√	√	√	√	0499 0497
2012	GMC truck	Savana	Radio	√	√	√	√	√	
2012	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2012	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2012	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2012	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2012	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2012	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2012	GMC truck	Savana	Passenger presence system	√	√	√	√		0517
2012	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2012	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2012	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		

2012	GMC truck	Savana	Body Control Module	√	√	√	√	√	0499 0497
2012	GMC truck	Savana	Radio	√	√	√	√	√	
2012	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Sierra	Transmission control module		√	√	√	√	
2012	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2012	GMC truck	Sierra	Trailer brake control module	√	√	√	√	√	
2012	GMC truck	Sierra	Electronic suension control	√	√	√	√	√	0532
2012	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Sierra	FPCM with trailer brake control	√	√	√	√	√	0532
2012	GMC truck	Sierra	Transfer Case Control Module	√	√	√	√	√	0493
2012	GMC truck	Sierra	Transmission control module		√	√	√	√	
2012	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2012	GMC truck	Sierra	Trailer brake control module	√	√	√	√	√	
2012	GMC truck	Sierra	Electronic suension control	√	√	√	√	√	0532
2012	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Sierra	FPCM with trailer brake control	√	√	√	√	√	0532
2012	GMC truck	Sierra	Transfer Case Control Module	√	√	√	√	√	0493
2012	GMC truck	Sierra Hybrid	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Sierra Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Sierra Hybrid	Transmission control module		√	√	√	√	
2012	GMC truck	Sierra Hybrid	Accessory power module	√	√	√	√	√	
2012	GMC truck	Sierra Hybrid	FPCM with trailer brake control	√	√	√	√	√	
2012	GMC truck	Sierra Hybrid	Electronic suension control	√	√	√	√	√	0532
2012	GMC truck	Sierra Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2012	GMC truck	Sierra Hybrid	Power steering control module	√	√	√	√	√	0536
2012	GMC truck	Sierra Hybrid	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Sierra Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Sierra Hybrid	Transmission control module		√	√	√	√	
2012	GMC truck	Sierra Hybrid	Accessory power module	√	√	√	√	√	
2012	GMC truck	Sierra Hybrid	FPCM with trailer brake control	√	√	√	√	√	
2012	GMC truck	Sierra Hybrid	Electronic suension control	√	√	√	√	√	0532
2012	GMC truck	Sierra Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2012	GMC truck	Sierra Hybrid	Power steering control module	√	√	√	√	√	0536
2012	GMC truck	Yukon	FPCM with trailer brake control	√	√	√	√	√	
2012	GMC truck	Yukon	Electronic suension control	√	√	√	√	√	0532
2012	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Yukon	Transmission control module	√	√	√	√	√	0493

2012	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2012	GMC truck	Yukon	FPCM with trailer brake control	√	√	√	√	√	
2012	GMC truck	Yukon	Electronic suension control	√	√	√	√	√	0532
2012	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Yukon	Transmission control module	√	√	√	√	√	0493
2012	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2012	GMC truck	Yukon hybrid	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Yukon hybrid	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Yukon hybrid	Transmission control module		√	√	√	√	
2012	GMC truck	Yukon hybrid	Accessory power module	√	√	√	√	√	
2012	GMC truck	Yukon hybrid	FPCM with trailer brake control	√	√	√	√	√	
2012	GMC truck	Yukon hybrid	Electronic suension control	√	√	√	√	√	0532
2012	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2012	GMC truck	Yukon hybrid	Power steering control module	√	√	√	√	√	0536
2012	GMC truck	Yukon hybrid	Transfer Case Control Module	√	√	√	√	√	0532
2012	GMC truck	Yukon hybrid	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Yukon hybrid	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Yukon hybrid	Transmission control module		√	√	√	√	
2012	GMC truck	Yukon hybrid	Accessory power module	√	√	√	√	√	
2012	GMC truck	Yukon hybrid	FPCM with trailer brake control	√	√	√	√	√	
2012	GMC truck	Yukon hybrid	Electronic suension control	√	√	√	√	√	0532
2012	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2012	GMC truck	Yukon hybrid	Power steering control module	√	√	√	√	√	0536
2012	GMC truck	Yukon hybrid	Transfer Case Control Module	√	√	√	√	√	0532
2012	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Yukon XL	Transmission control module	√	√	√	√	√	0493
2012	GMC truck	Yukon XL	FPCM with trailer brake control	√	√	√	√	√	
2012	GMC truck	Yukon XL	Electronic suension control	√	√	√	√	√	0532
2012	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√	√	0532
2012	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493
2012	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493
2012	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	
2012	GMC truck	Yukon XL	Transmission control module	√	√	√	√	√	0493
2012	GMC truck	Yukon XL	FPCM with trailer brake control	√	√	√	√	√	
2012	GMC truck	Yukon XL	Electronic suension control	√	√	√	√	√	0532
2012	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2012	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√	√	0532

2012	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493
2011	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2011	GMC	Terrain	Fuel Pump Control Module	√	√	√	√	√	0217
2011	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0016
2011	GMC	Terrain	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2011	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2011	GMC	Terrain	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2011	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2011	GMC	Terrain	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2011	GMC	Terrain	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2011	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2011	GMC	Terrain	Passenger Presence Module	√	√	√	√		0322
2011	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0301
2011	GMC	Terrain	Radio	√	√	√	√	√	
2011	GMC	Terrain	Multimedia Player Interface Module	√	√	√	√		
2011	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2011	GMC	Terrain	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2011	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146
2011	GMC	Terrain	Seat Memory Control Module	√	√	√	√	√	0310
2011	GMC	Terrain	Front Seat Heating Control Module	√	√	√	√	√	
2011	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0301
2011	GMC	Terrain	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2011	GMC	Terrain	Frontview Camera Module	√	√	√	√	√	0205 0196
2011	GMC truck	Acadia - 2WD	Transmission control module		√	√	√	√	
2011	GMC truck	Acadia - 2WD	Engine Control Module	√	√	√	√	√	
2011	GMC truck	Acadia - 2WD	Fuel Pump Control Module	√	√	√	√	√	
2011	GMC truck	Acadia - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	GMC truck	Acadia - 2WD	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Acadia - 2WD	Body Control Module						0499 0497
2011	GMC truck	Acadia - 2WD	Liftgate module	√	√	√	√	√	
2011	GMC truck	Acadia - 2WD	Personal audio link module	√	√	√			0528 0529
2011	GMC truck	Acadia - 2WD	Radio	√	√	√	√	√	
2011	GMC truck	Acadia - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Acadia - 2WD	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Acadia - 2WD	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Acadia - 2WD	Memory seat module	√	√	√	√	√	
2011	GMC truck	Acadia - 2WD	Park assist module	√	√	√	√		
2011	GMC truck	Acadia - 2WD	Passenger presence system	√	√	√	√	√	
2011	GMC truck	Acadia - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Acadia - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526

2011	GMC truck	Acadia - 2WD	Driver door switch	√	√	√	√	√	0527
2011	GMC truck	Acadia - 2WD	Passenger door switch	√	√	√	√	√	0527
2011	GMC truck	Acadia - 2WD	Head up dilay	√	√	√	√		
2011	GMC truck	Acadia - 2WD	Rear HVAC/RSA	√	√	√	√	√	0494 0495
2011	GMC truck	Acadia - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Acadia - 2WD	Rear drive system	√	√	√	√	√	0530
2011	GMC truck	Acadia - 4WD	Transmission control module		√	√	√	√	
2011	GMC truck	Acadia - 4WD	Engine Control Module	√	√	√	√	√	
2011	GMC truck	Acadia - 4WD	Fuel Pump Control Module	√	√	√	√	√	
2011	GMC truck	Acadia - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	GMC truck	Acadia - 4WD	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Acadia - 4WD	Body Control Module						0499 0497
2011	GMC truck	Acadia - 4WD	Liftgate module	√	√	√	√	√	
2011	GMC truck	Acadia - 4WD	Personal audio link module	√	√	√			0528 0529
2011	GMC truck	Acadia - 4WD	Radio	√	√	√	√	√	
2011	GMC truck	Acadia - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Acadia - 4WD	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Acadia - 4WD	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Acadia - 4WD	Memory seat module	√	√	√	√	√	
2011	GMC truck	Acadia - 4WD	Park assist module	√	√	√	√		
2011	GMC truck	Acadia - 4WD	Passenger presence system	√	√	√	√	√	
2011	GMC truck	Acadia - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Acadia - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2011	GMC truck	Acadia - 4WD	Driver door switch	√	√	√	√	√	0527
2011	GMC truck	Acadia - 4WD	Passenger door switch	√	√	√	√	√	0527
2011	GMC truck	Acadia - 4WD	Head up dilay	√	√	√	√		
2011	GMC truck	Acadia - 4WD	Rear HVAC/RSA	√	√	√	√	√	0494 0495
2011	GMC truck	Acadia - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Acadia - 4WD	Rear drive system	√	√	√	√	√	0530
2011	GMC truck	Canyon Pickup - 2WD	Transmission control module		√	√	√	√	
2011	GMC truck	Canyon Pickup - 2WD	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Canyon Pickup - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√	√	0516
2011	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550 0159
2011	GMC truck	Canyon Pickup - 2WD	Personal audio link module	√	√	√			0528
2011	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2011	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0495
2011	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Canyon Pickup - 2WD	Theft Deterrent Module	√	√	√	√		0170
2011	GMC truck	Canyon Pickup - 2WD	Passenger presence system		√	√			0517
2011	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515

2011	GMC truck	Canyon Pickup - 2WD	Generator battery control module	√	√	√	√	√	0516
2011	GMC truck	Canyon Pickup - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2011	GMC truck	Canyon Pickup - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2011	GMC truck	Canyon Pickup - 4WD	Transmission control module		√	√	√	√	
2011	GMC truck	Canyon Pickup - 4WD	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Canyon Pickup - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√	√	0516
2011	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550 0159
2011	GMC truck	Canyon Pickup - 4WD	Personal audio link module	√	√	√			0528
2011	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2011	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0495
2011	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Canyon Pickup - 4WD	Theft Deterrent Module	√	√	√	√		0170
2011	GMC truck	Canyon Pickup - 4WD	Passenger presence system		√	√			0517
2011	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2011	GMC truck	Canyon Pickup - 4WD	Generator battery control module	√	√	√	√	√	0516
2011	GMC truck	Canyon Pickup - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2011	GMC truck	Canyon Pickup - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2011	GMC truck	Savana	Transmission control module		√	√	√	√	
2011	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2011	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Savana	Radio	√	√	√	√	√	
2011	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Savana	Passenger presence system	√	√	√	√		0517
2011	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2011	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Savana	Transmission control module		√	√	√	√	
2011	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2011	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Savana	Radio	√	√	√	√	√	

2011	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Savana	Passenger presence system	√	√	√	√		0517
2011	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2011	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2011	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Savana	Radio	√	√	√	√	√	
2011	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Savana	Passenger presence system	√	√	√	√		0517
2011	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2011	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2011	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2011	GMC truck	Savana	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Savana	Radio	√	√	√	√	√	
2011	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Savana	Passenger presence system	√	√	√	√		0517
2011	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2011	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Sierra	Transmission control module		√	√	√	√	
2011	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Sierra	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	

2011	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0498
2011	GMC truck	Sierra	Personal audio link module	√	√	√			0528
2011	GMC truck	Sierra	Radio	√	√	√	√	√	
2011	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	
2011	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Sierra	Passenger presence system	√	√	√	√		
2011	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Sierra	Memory seat module	√	√	√	√	√	
2011	GMC truck	Sierra	Rear heated seat module	√	√	√	√		
2011	GMC truck	Sierra	Park assist module	√	√	√	√		
2011	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2011	GMC truck	Sierra	Driver door switch	√	√	√	√	√	
2011	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	
2011	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Sierra	Electronic suension control	√	√	√	√	√	0532
2011	GMC truck	Sierra	Trailer brake control module	√	√	√	√	√	0506
2011	GMC truck	Sierra	FPCM with trailer brake control	√	√	√	√	√	0506
2011	GMC truck	Sierra	Transfer Case Control Module	√	√	√	√	√	0493
2011	GMC truck	Sierra	Transmission control module		√	√	√	√	
2011	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Sierra	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	
2011	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0498
2011	GMC truck	Sierra	Personal audio link module	√	√	√			0528
2011	GMC truck	Sierra	Radio	√	√	√	√	√	
2011	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	
2011	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Sierra	Passenger presence system	√	√	√	√		
2011	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Sierra	Memory seat module	√	√	√	√	√	
2011	GMC truck	Sierra	Rear heated seat module	√	√	√	√		
2011	GMC truck	Sierra	Park assist module	√	√	√	√		
2011	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2011	GMC truck	Sierra	Driver door switch	√	√	√	√	√	



2011	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	
2011	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Sierra	Electronic suension control	√	√	√	√	√	0532
2011	GMC truck	Sierra	Trailer brake control module	√	√	√	√	√	0506
2011	GMC truck	Sierra	FPCM with trailer brake control	√	√	√	√	√	0506
2011	GMC truck	Sierra	Transfer Case Control Module	√	√	√	√	√	0493
2011	GMC truck	Sierra Hybrid	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Sierra Hybrid	Accessory power module	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Transmission control module		√	√	√	√	
2011	GMC truck	Sierra Hybrid	Fuel Pump Control Module	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Sierra Hybrid	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Amplifier (bose)	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0498
2011	GMC truck	Sierra Hybrid	Personal audio link module	√	√	√			0528
2011	GMC truck	Sierra Hybrid	Radio	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Sierra Hybrid	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Sierra Hybrid	Passenger presence system	√	√	√	√		
2011	GMC truck	Sierra Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Sierra Hybrid	Heated seat module	√	√	√	√		
2011	GMC truck	Sierra Hybrid	Rear heated seat module	√	√	√	√		
2011	GMC truck	Sierra Hybrid	Park assist module	√	√	√	√		
2011	GMC truck	Sierra Hybrid	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2011	GMC truck	Sierra Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Driver door switch	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Passenger door switch	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Sierra Hybrid	A/C compressor control module	√	√	√	√		
2011	GMC truck	Sierra Hybrid	Power steering control module		√	√	√		0536
2011	GMC truck	Sierra Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2011	GMC truck	Sierra Hybrid	Electronic suension control	√	√	√	√	√	0532
2011	GMC truck	Sierra Hybrid	FPCM with trailer brake control	√	√	√	√	√	0536
2011	GMC truck	Sierra Hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Sierra Hybrid	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Sierra Hybrid	Accessory power module	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Transmission control module		√	√	√	√	
2011	GMC truck	Sierra Hybrid	Fuel Pump Control Module	√	√	√	√	√	

2011	GMC truck	Sierra Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Sierra Hybrid	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Amplifier (bose)	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0498
2011	GMC truck	Sierra Hybrid	Personal audio link module	√	√	√			0528
2011	GMC truck	Sierra Hybrid	Radio	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Sierra Hybrid	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Sierra Hybrid	Passenger presence system	√	√	√	√		
2011	GMC truck	Sierra Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Sierra Hybrid	Heated seat module	√	√	√	√		
2011	GMC truck	Sierra Hybrid	Rear heated seat module	√	√	√	√		
2011	GMC truck	Sierra Hybrid	Park assist module	√	√	√	√		
2011	GMC truck	Sierra Hybrid	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2011	GMC truck	Sierra Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Driver door switch	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Passenger door switch	√	√	√	√	√	
2011	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Sierra Hybrid	A/C compressor control module	√	√	√	√		
2011	GMC truck	Sierra Hybrid	Power steering control module		√	√	√		0536
2011	GMC truck	Sierra Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2011	GMC truck	Sierra Hybrid	Electronic suspension control	√	√	√	√	√	0532
2011	GMC truck	Sierra Hybrid	FPCM with trailer brake control	√	√	√	√	√	0536
2011	GMC truck	Sierra Hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Yukon	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Yukon	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Yukon	Amplifier (bose)	√	√	√	√	√	
2011	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0498
2011	GMC truck	Yukon	Personal audio link module	√	√	√			0528
2011	GMC truck	Yukon	Radio	√	√	√	√	√	
2011	GMC truck	Yukon	Rear HVAC/RSA	√	√	√	√	√	
2011	GMC truck	Yukon	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Yukon	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Yukon	Passenger presence system	√	√	√	√		
2011	GMC truck	Yukon	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Yukon	Memory seat module	√	√	√	√	√	
2011	GMC truck	Yukon	Rear heated seat module	√	√	√	√		
2011	GMC truck	Yukon	Park assist module	√	√	√	√		
2011	GMC truck	Yukon	Left side object detection module	√	√	√	√	√	

2011	GMC truck	Yukon	Right side object detection module	√	√	√	√		
2011	GMC truck	Yukon	Assist step controller	√	√	√	√	√	0531
2011	GMC truck	Yukon	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Yukon	HVAC Control Module	√	√	√	√	√	0500 0526
2011	GMC truck	Yukon	Liftgate module	√	√	√	√	√	
2011	GMC truck	Yukon	Driver door switch	√	√	√	√	√	
2011	GMC truck	Yukon	Passenger door switch	√	√	√	√	√	
2011	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Yukon	Electronic suension control	√	√	√	√	√	0532
2011	GMC truck	Yukon	FPCM with trailer brake control	√	√	√	√	√	0506
2011	GMC truck	Yukon	Transmission control module		√	√	√	√	
2011	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Yukon	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Yukon	Amplifier (bose)	√	√	√	√	√	
2011	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0498
2011	GMC truck	Yukon	Personal audio link module	√	√	√			0528
2011	GMC truck	Yukon	Radio	√	√	√	√	√	
2011	GMC truck	Yukon	Rear HVAC/RSA	√	√	√	√	√	
2011	GMC truck	Yukon	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Yukon	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Yukon	Passenger presence system	√	√	√	√		
2011	GMC truck	Yukon	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Yukon	Memory seat module	√	√	√	√	√	
2011	GMC truck	Yukon	Rear heated seat module	√	√	√	√		
2011	GMC truck	Yukon	Park assist module	√	√	√	√		
2011	GMC truck	Yukon	Left side object detection module	√	√	√	√	√	
2011	GMC truck	Yukon	Right side object detection module	√	√	√	√		
2011	GMC truck	Yukon	Assist step controller	√	√	√	√	√	0531
2011	GMC truck	Yukon	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Yukon	HVAC Control Module	√	√	√	√	√	0500 0526
2011	GMC truck	Yukon	Liftgate module	√	√	√	√	√	
2011	GMC truck	Yukon	Driver door switch	√	√	√	√	√	
2011	GMC truck	Yukon	Passenger door switch	√	√	√	√	√	
2011	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Yukon	Electronic suension control	√	√	√	√	√	0532
2011	GMC truck	Yukon	FPCM with trailer brake control	√	√	√	√	√	0506

2011	GMC truck	Yukon	Transmission control module		√	√	√	√	
2011	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon hybrid	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon hybrid	Accessory power module	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Transmission control module		√	√	√	√	
2011	GMC truck	Yukon hybrid	Fuel Pump Control Module	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Yukon hybrid	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Amplifier (bose)	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0498
2011	GMC truck	Yukon hybrid	Personal audio link module	√	√	√			0528
2011	GMC truck	Yukon hybrid	Radio	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Rear HVAC/RSA	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Yukon hybrid	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Passenger presence system	√	√	√	√		
2011	GMC truck	Yukon hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Yukon hybrid	Heated seat module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Rear heated seat module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Park assist module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Left side object detection module	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Right side object detection module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Assist step controller	√	√	√	√	√	0531
2011	GMC truck	Yukon hybrid	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2011	GMC truck	Yukon hybrid	Serial Data Gateway Module	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Liftgate module	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Driver door switch	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Passenger door switch	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Yukon hybrid	A/C compressor control module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Power steering control module		√	√	√		0536
2011	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2011	GMC truck	Yukon hybrid	Electronic suension control	√	√	√	√	√	0532
2011	GMC truck	Yukon hybrid	FPCM with trailer brake control	√	√	√	√	√	0536
2011	GMC truck	Yukon hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Yukon hybrid	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon hybrid	Accessory power module	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Transmission control module		√	√	√	√	

2011	GMC truck	Yukon hybrid	Fuel Pump Control Module	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Yukon hybrid	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Amplifier (bose)	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0498
2011	GMC truck	Yukon hybrid	Personal audio link module	√	√	√			0528
2011	GMC truck	Yukon hybrid	Radio	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Rear HVAC/RSA	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Yukon hybrid	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Passenger presence system	√	√	√	√		
2011	GMC truck	Yukon hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Yukon hybrid	Heated seat module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Rear heated seat module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Park assist module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Left side object detection module	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Right side object detection module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Assist step controller	√	√	√	√	√	0531
2011	GMC truck	Yukon hybrid	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2011	GMC truck	Yukon hybrid	Serial Data Gateway Module	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Liftgate module	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Driver door switch	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Passenger door switch	√	√	√	√	√	
2011	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Yukon hybrid	A/C compressor control module	√	√	√	√		
2011	GMC truck	Yukon hybrid	Power steering control module		√	√	√		0536
2011	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2011	GMC truck	Yukon hybrid	Electronic suspension control	√	√	√	√	√	0532
2011	GMC truck	Yukon hybrid	FPCM with trailer brake control	√	√	√	√	√	0536
2011	GMC truck	Yukon hybrid	Transfer Case Control Module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Yukon XL	Transmission control module		√	√	√	√	
2011	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon XL	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Yukon XL	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Yukon XL	Amplifier (bose)	√	√	√	√	√	
2011	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0498
2011	GMC truck	Yukon XL	Personal audio link module	√	√	√			0528
2011	GMC truck	Yukon XL	Radio	√	√	√	√	√	
2011	GMC truck	Yukon XL	Rear HVAC/RSA	√	√	√	√	√	

2011	GMC truck	Yukon XL	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Yukon XL	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Yukon XL	Passenger presence system	√	√	√	√		
2011	GMC truck	Yukon XL	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Yukon XL	Memory seat module	√	√	√	√	√	
2011	GMC truck	Yukon XL	Rear heated seat module	√	√	√	√		
2011	GMC truck	Yukon XL	Park assist module	√	√	√	√		
2011	GMC truck	Yukon XL	Left side object detection module	√	√	√	√	√	
2011	GMC truck	Yukon XL	Right side object detection module	√	√	√	√		
2011	GMC truck	Yukon XL	Assist step controller	√	√	√	√	√	0531
2011	GMC truck	Yukon XL	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Yukon XL	HVAC Control Module	√	√	√	√	√	0500 0526
2011	GMC truck	Yukon XL	Liftgate module	√	√	√	√	√	
2011	GMC truck	Yukon XL	Driver door switch	√	√	√	√	√	
2011	GMC truck	Yukon XL	Passenger door switch	√	√	√	√	√	
2011	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Yukon XL	Electronic suension control	√	√	√	√	√	0532
2011	GMC truck	Yukon XL	FPCM with trailer brake control	√	√	√	√	√	0506
2011	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√	√	0506
2011	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon XL	Transmission control module		√	√	√	√	
2011	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	0493
2011	GMC truck	Yukon XL	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2011	GMC truck	Yukon XL	Digital radio receiver	√	√	√	√	√	
2011	GMC truck	Yukon XL	Amplifier (bose)	√	√	√	√	√	
2011	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0498
2011	GMC truck	Yukon XL	Personal audio link module	√	√	√			0528
2011	GMC truck	Yukon XL	Radio	√	√	√	√	√	
2011	GMC truck	Yukon XL	Rear HVAC/RSA	√	√	√	√	√	
2011	GMC truck	Yukon XL	Remote control door lock receiver	√	√	√	√	√	0513 0159
2011	GMC truck	Yukon XL	Theft Deterrent Module	√	√	√	√		
2011	GMC truck	Yukon XL	Passenger presence system	√	√	√	√		
2011	GMC truck	Yukon XL	Supplemental inflatable restraint	√	√	√	√	√	0497
2011	GMC truck	Yukon XL	Memory seat module	√	√	√	√	√	
2011	GMC truck	Yukon XL	Rear heated seat module	√	√	√	√		
2011	GMC truck	Yukon XL	Park assist module	√	√	√	√		
2011	GMC truck	Yukon XL	Left side object detection module	√	√	√	√	√	
2011	GMC truck	Yukon XL	Right side object detection module	√	√	√	√		
2011	GMC truck	Yukon XL	Assist step controller	√	√	√	√	√	0531

2011	GMC truck	Yukon XL	Instrument panel cluster	√	√	√	√	√	
2011	GMC truck	Yukon XL	HVAC Control Module	√	√	√	√	√	0500 0526
2011	GMC truck	Yukon XL	Liftgate module	√	√	√	√	√	
2011	GMC truck	Yukon XL	Driver door switch	√	√	√	√	√	
2011	GMC truck	Yukon XL	Passenger door switch	√	√	√	√	√	
2011	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0497
2011	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2011	GMC truck	Yukon XL	Electronic suension control	√	√	√	√	√	0532
2011	GMC truck	Yukon XL	FPCM with trailer brake control	√	√	√	√	√	0506
2011	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√	√	0506
2011	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493
2010	GMC	Terrain	Engine Control Module	√	√	√	√	√	0263 0323 0305 0306 0067 0308 0217 0309
2010	GMC	Terrain	Fuel Pump Control Module	√	√	√	√	√	0217
2010	GMC	Terrain	Transmission Control Module	√	√	√	√	√	0016
2010	GMC	Terrain	Rear Differential Clutch Control Module	√	√	√	√	√	0155
2010	GMC	Terrain	Electronic Brake Control Module	√	√	√	√	√	0225 0090 0111
2010	GMC	Terrain	Multi-Axis Acceleration Sensor Module	√	√	√			0111 0111
2010	GMC	Terrain	Power Steering Control Module	√	√	√	√		0081 0081 0080 0080
2010	GMC	Terrain	Steering Wheel Angle Sensor Module	√	√	√			0093 0093 0090 0090
2010	GMC	Terrain	Body Control Module	√	√	√	√	√	0263 0203 0201 0208 0206 0297 0298 0159
2010	GMC	Terrain	Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0172 0172
2010	GMC	Terrain	Passenger Presence Module	√	√	√	√		0322
2010	GMC	Terrain	Instrument Cluster	√	√	√	√	√	0301
2010	GMC	Terrain	Radio	√	√	√	√	√	
2010	GMC	Terrain	Multimedia Player Interface Module	√	√	√	√		
2010	GMC	Terrain	Telematics Communication Interface Control Module	√	√	√	√	√	0465 0259
2010	GMC	Terrain	Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0311 0129
2010	GMC	Terrain	Liftgate Control Module	√	√	√	√	√	0146
2010	GMC	Terrain	Seat Memory Control Module	√	√	√	√	√	0310
2010	GMC	Terrain	Front Seat Heating Control Module	√	√	√	√	√	
2010	GMC	Terrain	Parking Assist Control Module	√	√	√	√	√	0301
2010	GMC	Terrain	Vehicle Direction Camera Control Module	√	√	√	√	√	0205 0447
2010	GMC	Terrain	Frontview Camera Module	√	√	√	√	√	0205 0196
2010	GMC truck	Acadia - 2WD	Transmission control module		√	√	√	√	
2010	GMC truck	Acadia - 2WD	Fuel Pump Control Module	√	√	√	√	√	
2010	GMC truck	Acadia - 2WD	Engine Control Module	√	√	√	√	√	
2010	GMC truck	Acadia - 2WD	Digital radio receiver	√	√	√	√	√	
2010	GMC truck	Acadia - 2WD	Radio	√	√	√	√	√	
2010	GMC truck	Acadia - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Acadia - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495

2010	GMC truck	Acadia - 2WD	Head up dilay	√	√	√	√		
2010	GMC truck	Acadia - 2WD	Personal audio link module	√	√	√			0528 0529
2010	GMC truck	Acadia - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Acadia - 2WD	Passenger presence system	√	√	√	√	√	
2010	GMC truck	Acadia - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Acadia - 2WD	Memory seat module	√	√	√	√	√	
2010	GMC truck	Acadia - 2WD	Park assist module	√	√	√	√		
2010	GMC truck	Acadia - 2WD	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Acadia - 2WD	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Acadia - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Acadia - 2WD	Driver door switch	√	√	√	√	√	0527
2010	GMC truck	Acadia - 2WD	Passenger door switch	√	√	√	√	√	0527
2010	GMC truck	Acadia - 2WD	Body Control Module	√	√	√	√	√	0499 0497
2010	GMC truck	Acadia - 2WD	Liftgate module	√	√	√	√	√	
2010	GMC truck	Acadia - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	GMC truck	Acadia - 2WD	Rear drive system	√	√	√	√	√	0530
2010	GMC truck	Acadia - 4WD	Transmission control module		√	√	√	√	
2010	GMC truck	Acadia - 4WD	Fuel Pump Control Module	√	√	√	√	√	
2010	GMC truck	Acadia - 4WD	Engine Control Module	√	√	√	√	√	
2010	GMC truck	Acadia - 4WD	Digital radio receiver	√	√	√	√	√	
2010	GMC truck	Acadia - 4WD	Radio	√	√	√	√	√	
2010	GMC truck	Acadia - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Acadia - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2010	GMC truck	Acadia - 4WD	Head up dilay	√	√	√	√		
2010	GMC truck	Acadia - 4WD	Personal audio link module	√	√	√			0528 0529
2010	GMC truck	Acadia - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Acadia - 4WD	Passenger presence system	√	√	√	√	√	
2010	GMC truck	Acadia - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Acadia - 4WD	Memory seat module	√	√	√	√	√	
2010	GMC truck	Acadia - 4WD	Park assist module	√	√	√	√		
2010	GMC truck	Acadia - 4WD	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Acadia - 4WD	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Acadia - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Acadia - 4WD	Driver door switch	√	√	√	√	√	0527
2010	GMC truck	Acadia - 4WD	Passenger door switch	√	√	√	√	√	0527
2010	GMC truck	Acadia - 4WD	Body Control Module	√	√	√	√	√	0499 0497
2010	GMC truck	Acadia - 4WD	Liftgate module	√	√	√	√	√	
2010	GMC truck	Acadia - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2010	GMC truck	Acadia - 4WD	Rear drive system	√	√	√	√	√	0530
2010	GMC truck	Canyon Pickup - 2WD	Transmission control module		√	√	√	√	
2010	GMC truck	Canyon Pickup - 2WD	Engine Control Module	√	√	√	√	√	0493



2010	GMC truck	Canyon Pickup - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√	√	0516
2010	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2010	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2010	GMC truck	Canyon Pickup - 2WD	Generator battery control module	√	√	√	√	√	
2010	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2010	GMC truck	Canyon Pickup - 2WD	Passenger presence system		√	√			0512
2010	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550 0159
2010	GMC truck	Canyon Pickup - 2WD	Theft Deterrent Module	√	√	√	√		0170
2010	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Canyon Pickup - 2WD	Personal audio link module	√	√	√	√	√	0528
2010	GMC truck	Canyon Pickup - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2010	GMC truck	Canyon Pickup - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2010	GMC truck	Canyon Pickup - 4WD	Transmission control module		√	√	√	√	
2010	GMC truck	Canyon Pickup - 4WD	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Canyon Pickup - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√	√	0516
2010	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2010	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2010	GMC truck	Canyon Pickup - 4WD	Generator battery control module	√	√	√	√	√	
2010	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2010	GMC truck	Canyon Pickup - 4WD	Passenger presence system		√	√			0512
2010	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550 0159
2010	GMC truck	Canyon Pickup - 4WD	Theft Deterrent Module	√	√	√	√		0170
2010	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Canyon Pickup - 4WD	Personal audio link module	√	√	√	√	√	0528
2010	GMC truck	Canyon Pickup - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2010	GMC truck	Canyon Pickup - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2010	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2010	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2010	GMC truck	Savana	Radio	√	√	√	√	√	
2010	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Savana	Passenger presence system	√	√	√	√		0537
2010	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2010	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506

2010	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Savana	Transmission control module	√	√	√	√	√	0493
2010	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2010	GMC truck	Savana	Radio	√	√	√	√	√	
2010	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Savana	Passenger presence system	√	√	√	√		0537
2010	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2010	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2010	GMC truck	Savana	Transmission control module		√	√	√	√	
2010	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Savana	Radio	√	√	√	√	√	
2010	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Savana	Passenger presence system	√	√	√	√		0537
2010	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2010	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2010	GMC truck	Savana	Transmission control module		√	√	√	√	
2010	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Savana	Radio	√	√	√	√	√	
2010	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Savana	Passenger presence system	√	√	√	√		0537
2010	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2010	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2010	GMC truck	Sierra	Transmission control module		√	√	√	√	
2010	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Sierra	Digital radio receiver	√	√	√	√	√	

2010	GMC truck	Sierra	Personal audio link module	√	√	√			0528
2010	GMC truck	Sierra	Radio	√	√	√	√	√	
2010	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	
2010	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Sierra	Passenger presence system	√	√	√	√		
2010	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Sierra	Park assist module	√	√	√	√		
2010	GMC truck	Sierra	Memory seat module	√	√	√	√	√	
2010	GMC truck	Sierra	Rear heated seat module	√	√	√	√		
2010	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Sierra	Driver door switch	√	√	√	√	√	
2010	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	
2010	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0498
2010	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	GMC truck	Sierra	Trailer brake control module	√	√	√	√	√	
2010	GMC truck	Sierra	Electronic suension control	√	√	√	√	√	0532
2010	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2010	GMC truck	Sierra	FPCM with trailer brake control	√	√	√	√	√	0532
2010	GMC truck	Sierra	Accessory power module	√	√	√	√	√	
2010	GMC truck	Sierra	Transmission control module		√	√	√	√	
2010	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	
2010	GMC truck	Sierra	Digital radio receiver	√	√	√	√	√	
2010	GMC truck	Sierra	Personal audio link module	√	√	√			0528
2010	GMC truck	Sierra	Radio	√	√	√	√	√	
2010	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	
2010	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Sierra	A/C compressor control module	√	√	√	√		
2010	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Sierra	Passenger presence system	√	√	√	√		
2010	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Sierra	Park assist module	√	√	√	√		
2010	GMC truck	Sierra	Heated seat module	√	√	√	√		
2010	GMC truck	Sierra	Rear heated seat module	√	√	√	√		
2010	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Sierra	Driver door switch	√	√	√	√	√	

2010	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	
2010	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0498
2010	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Sierra	Serial Data Gateway Module	√	√	√	√	√	
2010	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	GMC truck	Sierra	Electronic suension control	√	√	√	√	√	0532
2010	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	GMC truck	Sierra	Power steering control module		√	√	√		0536
2010	GMC truck	Sierra	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	GMC truck	Sierra	Transmission control module		√	√	√	√	
2010	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Sierra	Transfer Case Control Module	√	√	√	√	√	0493
2010	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Sierra	Digital radio receiver	√	√	√	√	√	
2010	GMC truck	Sierra	Personal audio link module	√	√	√			0528
2010	GMC truck	Sierra	Radio	√	√	√	√	√	
2010	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	
2010	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Sierra	Passenger presence system	√	√	√	√		
2010	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Sierra	Park assist module	√	√	√	√		
2010	GMC truck	Sierra	Memory seat module	√	√	√	√	√	
2010	GMC truck	Sierra	Rear heated seat module	√	√	√	√		
2010	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Sierra	Driver door switch	√	√	√	√	√	
2010	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	
2010	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0498
2010	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	GMC truck	Sierra	Trailer brake control module	√	√	√	√	√	
2010	GMC truck	Sierra	Electronic suension control	√	√	√	√	√	0532
2010	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2010	GMC truck	Sierra	FPCM with trailer brake control	√	√	√	√	√	0532
2010	GMC truck	Sierra	Accessory power module	√	√	√	√	√	
2010	GMC truck	Sierra	Transfer Case Control Module	√	√	√	√	√	
2010	GMC truck	Sierra	Transmission control module		√	√	√	√	
2010	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493

2010	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	
2010	GMC truck	Sierra	Digital radio receiver	√	√	√	√	√	
2010	GMC truck	Sierra	Personal audio link module	√	√	√			0528
2010	GMC truck	Sierra	Radio	√	√	√	√	√	
2010	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	
2010	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Sierra	A/C compressor control module	√	√	√	√		
2010	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Sierra	Passenger presence system	√	√	√	√		
2010	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Sierra	Park assist module	√	√	√	√		
2010	GMC truck	Sierra	Heated seat module	√	√	√	√		
2010	GMC truck	Sierra	Rear heated seat module	√	√	√	√		
2010	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Sierra	Driver door switch	√	√	√	√	√	
2010	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	
2010	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0498
2010	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Sierra	Serial Data Gateway Module	√	√	√	√	√	
2010	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	GMC truck	Sierra	Electronic suspension control	√	√	√	√	√	0532
2010	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	GMC truck	Sierra	Power steering control module		√	√	√		0536
2010	GMC truck	Sierra	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	GMC truck	Yukon	Transmission control module		√	√	√	√	
2010	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon	Digital radio receiver	√	√	√	√	√	
2010	GMC truck	Yukon	Personal audio link module	√	√	√			0528
2010	GMC truck	Yukon	Radio	√	√	√	√	√	
2010	GMC truck	Yukon	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Yukon	Amplifier (bose)	√	√	√	√	√	
2010	GMC truck	Yukon	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Yukon	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Yukon	Passenger presence system	√	√	√	√		
2010	GMC truck	Yukon	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Yukon	Park assist module	√	√	√	√		
2010	GMC truck	Yukon	Memory seat module	√	√	√	√	√	
2010	GMC truck	Yukon	Rear heated seat module	√	√	√	√		

2010	GMC truck	Yukon	Left side object detection module	√	√	√	√	√	
2010	GMC truck	Yukon	Right side object detection module	√	√	√	√		
2010	GMC truck	Yukon	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Yukon	Driver door switch	√	√	√	√	√	
2010	GMC truck	Yukon	Passenger door switch	√	√	√	√	√	
2010	GMC truck	Yukon	Assist step controller	√	√	√	√	√	0531
2010	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0498
2010	GMC truck	Yukon	Liftgate module	√	√	√	√	√	
2010	GMC truck	Yukon	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Yukon	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	GMC truck	Yukon	Electronic suspension control	√	√	√	√	√	0532
2010	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506
2010	GMC truck	Yukon	FPCM with trailer brake control	√	√	√	√	√	0506
2010	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon	Transmission control module	√	√	√	√	√	
2010	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon	Digital radio receiver	√	√	√	√	√	
2010	GMC truck	Yukon	Personal audio link module	√	√	√			0528
2010	GMC truck	Yukon	Radio	√	√	√	√	√	
2010	GMC truck	Yukon	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Yukon	Amplifier (bose)	√	√	√	√	√	
2010	GMC truck	Yukon	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Yukon	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Yukon	Passenger presence system	√	√	√	√		
2010	GMC truck	Yukon	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Yukon	Park assist module	√	√	√	√		
2010	GMC truck	Yukon	Memory seat module	√	√	√	√	√	
2010	GMC truck	Yukon	Rear heated seat module	√	√	√	√		
2010	GMC truck	Yukon	Left side object detection module	√	√	√	√	√	
2010	GMC truck	Yukon	Right side object detection module	√	√	√	√		
2010	GMC truck	Yukon	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Yukon	Driver door switch	√	√	√	√	√	
2010	GMC truck	Yukon	Passenger door switch	√	√	√	√	√	
2010	GMC truck	Yukon	Assist step controller	√	√	√	√	√	0531
2010	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0498
2010	GMC truck	Yukon	Liftgate module	√	√	√	√	√	
2010	GMC truck	Yukon	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Yukon	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496

2010	GMC truck	Yukon	Electronic suension control	√	√	√	√	√	0532
2010	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506
2010	GMC truck	Yukon	FPCM with trailer brake control	√	√	√	√	√	0506
2010	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon hybrid	Accessory power module	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Transmission control module		√	√	√	√	
2010	GMC truck	Yukon hybrid	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon hybrid	Fuel Pump Control Module	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Digital radio receiver	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Personal audio link module	√	√	√			0528
2010	GMC truck	Yukon hybrid	Radio	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Amplifier (bose)	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Yukon hybrid	A/C compressor control module	√	√	√	√		
2010	GMC truck	Yukon hybrid	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Yukon hybrid	Passenger presence system	√	√	√	√		
2010	GMC truck	Yukon hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Yukon hybrid	Park assist module	√	√	√	√		
2010	GMC truck	Yukon hybrid	Heated seat module	√	√	√	√		
2010	GMC truck	Yukon hybrid	Rear heated seat module	√	√	√	√		
2010	GMC truck	Yukon hybrid	Left side object detection module	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Right side object detection module	√	√	√	√		
2010	GMC truck	Yukon hybrid	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Driver door switch	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Passenger door switch	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0498
2010	GMC truck	Yukon hybrid	Liftgate module	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Yukon hybrid	Serial Data Gateway Module	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	GMC truck	Yukon hybrid	Electronic suension control	√	√	√	√	√	0532
2010	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	GMC truck	Yukon hybrid	Power steering control module		√	√	√		0536
2010	GMC truck	Yukon hybrid	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	GMC truck	Yukon hybrid	Transfer Case Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon hybrid	Accessory power module	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Transmission control module		√	√	√	√	
2010	GMC truck	Yukon hybrid	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon hybrid	Fuel Pump Control Module	√	√	√	√	√	

2010	GMC truck	Yukon hybrid	Digital radio receiver	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Personal audio link module	√	√	√			0528
2010	GMC truck	Yukon hybrid	Radio	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Amplifier (bose)	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Yukon hybrid	A/C compressor control module	√	√	√	√		
2010	GMC truck	Yukon hybrid	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Yukon hybrid	Passenger presence system	√	√	√	√		
2010	GMC truck	Yukon hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Yukon hybrid	Park assist module	√	√	√	√		
2010	GMC truck	Yukon hybrid	Heated seat module	√	√	√	√		
2010	GMC truck	Yukon hybrid	Rear heated seat module	√	√	√	√		
2010	GMC truck	Yukon hybrid	Left side object detection module	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Right side object detection module	√	√	√	√		
2010	GMC truck	Yukon hybrid	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Driver door switch	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Passenger door switch	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0498
2010	GMC truck	Yukon hybrid	Liftgate module	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Yukon hybrid	Serial Data Gateway Module	√	√	√	√	√	
2010	GMC truck	Yukon hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	GMC truck	Yukon hybrid	Electronic suspension control	√	√	√	√	√	0532
2010	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2010	GMC truck	Yukon hybrid	Power steering control module		√	√	√		0536
2010	GMC truck	Yukon hybrid	FPCM with trailer brake control	√	√	√	√	√	0533 0533 0534 0535
2010	GMC truck	Yukon hybrid	Transfer Case Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon XL	Transmission control module		√	√	√	√	
2010	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon XL	Digital radio receiver	√	√	√	√	√	
2010	GMC truck	Yukon XL	Personal audio link module	√	√	√			0528
2010	GMC truck	Yukon XL	Radio	√	√	√	√	√	
2010	GMC truck	Yukon XL	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Yukon XL	Amplifier (bose)	√	√	√	√	√	
2010	GMC truck	Yukon XL	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Yukon XL	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Yukon XL	Passenger presence system	√	√	√	√		
2010	GMC truck	Yukon XL	Supplemental inflatable restraint	√	√	√	√	√	0497



2010	GMC truck	Yukon XL	Park assist module	√	√	√	√		
2010	GMC truck	Yukon XL	Memory seat module	√	√	√	√	√	
2010	GMC truck	Yukon XL	Rear heated seat module	√	√	√	√		
2010	GMC truck	Yukon XL	Left side object detection module	√	√	√	√	√	
2010	GMC truck	Yukon XL	Right side object detection module	√	√	√	√		
2010	GMC truck	Yukon XL	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Yukon XL	Driver door switch	√	√	√	√	√	
2010	GMC truck	Yukon XL	Passenger door switch	√	√	√	√	√	
2010	GMC truck	Yukon XL	Assist step controller	√	√	√	√	√	0531
2010	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0498
2010	GMC truck	Yukon XL	Liftgate module	√	√	√	√	√	
2010	GMC truck	Yukon XL	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Yukon XL	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	GMC truck	Yukon XL	Electronic suension control	√	√	√	√	√	0532
2010	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2010	GMC truck	Yukon XL	FPCM with trailer brake control	√	√	√	√	√	0506
2010	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√	√	0506
2010	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon XL	Transmission control module		√	√	√	√	
2010	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	0493
2010	GMC truck	Yukon XL	Digital radio receiver	√	√	√	√	√	
2010	GMC truck	Yukon XL	Personal audio link module	√	√	√			0528
2010	GMC truck	Yukon XL	Radio	√	√	√	√	√	
2010	GMC truck	Yukon XL	Rear HVAC/RSA	√	√	√	√	√	
2010	GMC truck	Yukon XL	Amplifier (bose)	√	√	√	√	√	
2010	GMC truck	Yukon XL	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Yukon XL	Theft Deterrent Module	√	√	√	√		
2010	GMC truck	Yukon XL	Passenger presence system	√	√	√	√		
2010	GMC truck	Yukon XL	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Yukon XL	Park assist module	√	√	√	√		
2010	GMC truck	Yukon XL	Memory seat module	√	√	√	√	√	
2010	GMC truck	Yukon XL	Rear heated seat module	√	√	√	√		
2010	GMC truck	Yukon XL	Left side object detection module	√	√	√	√	√	
2010	GMC truck	Yukon XL	Right side object detection module	√	√	√	√		
2010	GMC truck	Yukon XL	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Yukon XL	Driver door switch	√	√	√	√	√	
2010	GMC truck	Yukon XL	Passenger door switch	√	√	√	√	√	
2010	GMC truck	Yukon XL	Assist step controller	√	√	√	√	√	0531
2010	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0498

2010	GMC truck	Yukon XL	Liftgate module	√	√	√	√	√	
2010	GMC truck	Yukon XL	HVAC Control Module	√	√	√	√	√	0500 0526
2010	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Yukon XL	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2010	GMC truck	Yukon XL	Electronic suension control	√	√	√	√	√	0532
2010	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2010	GMC truck	Yukon XL	FPCM with trailer brake control	√	√	√	√	√	0506
2010	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√	√	0506
2010	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493
2010	GMC truck	Others	Park assist module	√	√	√	√		
2010	GMC truck	Others	Supplemental inflatable restraint	√	√	√	√	√	0497
2010	GMC truck	Others	Remote control door lock receiver	√	√	√	√	√	0513 0159
2010	GMC truck	Others	Body Control Module	√	√	√	√	√	0497
2010	GMC truck	Others	Body Control Module	√	√	√	√	√	
2010	GMC truck	Others	Headlamp Control Module	√	√	√	√	√	
2010	GMC truck	Others	Instrument panel cluster	√	√	√	√	√	
2010	GMC truck	Others	Front dilay interface module	√	√	√			
2010	GMC truck	Others	Radio	√	√	√	√	√	
2010	GMC truck	Others	HVAC Control Module	√	√	√	√	√	0497
2010	GMC truck	Others	Electronic Brake Control Module	√	√	√	√	√	
2010	GMC truck	Others	Engine Control Module	√	√	√	√	√	0562
2010	GMC truck	Others	Transmission control module	√	√	√	√	√	0562
2010	GMC truck	Others	Rear drive system	√	√	√	√	√	0530
2009	GMC truck	Acadia - 2WD	Transmission control module		√	√	√	√	
2009	GMC truck	Acadia - 2WD	Engine Control Module	√	√	√	√	√	
2009	GMC truck	Acadia - 2WD	Passenger presence system	√	√	√	√	√	
2009	GMC truck	Acadia - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Acadia - 2WD	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Acadia - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Acadia - 2WD	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Acadia - 2WD	Personal audio link module	√	√	√			0528 0529
2009	GMC truck	Acadia - 2WD	Radio	√	√	√	√	√	
2009	GMC truck	Acadia - 2WD	Digital radio receiver	√	√	√	√	√	
2009	GMC truck	Acadia - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2009	GMC truck	Acadia - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	GMC truck	Acadia - 2WD	Memory seat module	√	√	√	√	√	
2009	GMC truck	Acadia - 2WD	Park assist module	√	√	√	√	√	
2009	GMC truck	Acadia - 2WD	Liftgate module	√	√	√	√	√	
2009	GMC truck	Acadia - 2WD	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Acadia - 2WD	Head up dilay	√	√	√	√		
2009	GMC truck	Acadia - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526

2009	GMC truck	Acadia - 2WD	Body Control Module	√	√	√	√	√	0499 0497
2009	GMC truck	Acadia - 2WD	Driver door switch	√	√	√	√	√	0527
2009	GMC truck	Acadia - 2WD	Passenger door switch	√	√	√	√	√	0527
2009	GMC truck	Acadia - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Acadia - 2WD	Rear drive system	√	√	√	√	√	0530
2009	GMC truck	Acadia - 4WD	Transmission control module		√	√	√	√	
2009	GMC truck	Acadia - 4WD	Engine Control Module	√	√	√	√	√	
2009	GMC truck	Acadia - 4WD	Passenger presence system	√	√	√	√	√	
2009	GMC truck	Acadia - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Acadia - 4WD	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Acadia - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Acadia - 4WD	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Acadia - 4WD	Personal audio link module	√	√	√			0528 0529
2009	GMC truck	Acadia - 4WD	Radio	√	√	√	√	√	
2009	GMC truck	Acadia - 4WD	Digital radio receiver	√	√	√	√	√	
2009	GMC truck	Acadia - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2009	GMC truck	Acadia - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	GMC truck	Acadia - 4WD	Memory seat module	√	√	√	√	√	
2009	GMC truck	Acadia - 4WD	Park assist module	√	√	√	√	√	
2009	GMC truck	Acadia - 4WD	Liftgate module	√	√	√	√	√	
2009	GMC truck	Acadia - 4WD	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Acadia - 4WD	Head up display	√	√	√	√		
2009	GMC truck	Acadia - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2009	GMC truck	Acadia - 4WD	Body Control Module	√	√	√	√	√	0499 0497
2009	GMC truck	Acadia - 4WD	Driver door switch	√	√	√	√	√	0527
2009	GMC truck	Acadia - 4WD	Passenger door switch	√	√	√	√	√	0527
2009	GMC truck	Acadia - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Acadia - 4WD	Rear drive system	√	√	√	√	√	0530
2009	GMC truck	Canyon Pickup - 2WD	Transmission control module		√	√	√	√	
2009	GMC truck	Canyon Pickup - 2WD	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	GMC truck	Canyon Pickup - 2WD	Theft Deterrent Module	√	√	√	√		0170
2009	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2009	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√	√	0516
2009	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550 0159
2009	GMC truck	Canyon Pickup - 2WD	Generator battery control module	√	√	√	√	√	
2009	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Canyon Pickup - 2WD	Passenger presence system	√	√	√	√	√	0512
2009	GMC truck	Canyon Pickup - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493

2009	GMC truck	Canyon Pickup - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 2WD	Transmission control module		√	√	√	√	
2009	GMC truck	Canyon Pickup - 2WD	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	GMC truck	Canyon Pickup - 2WD	Theft Deterrent Module	√	√	√	√		0170
2009	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2009	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√	√	0516
2009	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550 0159
2009	GMC truck	Canyon Pickup - 2WD	Generator battery control module	√	√	√	√	√	
2009	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Canyon Pickup - 2WD	Passenger presence system	√	√	√	√	√	0512
2009	GMC truck	Canyon Pickup - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 4WD	Transmission control module		√	√	√	√	
2009	GMC truck	Canyon Pickup - 4WD	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	GMC truck	Canyon Pickup - 4WD	Theft Deterrent Module	√	√	√	√		0170
2009	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2009	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√	√	0516
2009	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550 0159
2009	GMC truck	Canyon Pickup - 4WD	Generator battery control module	√	√	√	√	√	
2009	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Canyon Pickup - 4WD	Passenger presence system	√	√	√	√	√	0512
2009	GMC truck	Canyon Pickup - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 4WD	Transmission control module		√	√	√	√	
2009	GMC truck	Canyon Pickup - 4WD	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2009	GMC truck	Canyon Pickup - 4WD	Theft Deterrent Module	√	√	√	√		0170
2009	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2009	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√	√	0516
2009	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550 0159
2009	GMC truck	Canyon Pickup - 4WD	Generator battery control module	√	√	√	√	√	
2009	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Canyon Pickup - 4WD	Passenger presence system	√	√	√	√	√	0512

2009	GMC truck	Canyon Pickup - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2009	GMC truck	Canyon Pickup - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 2WD	Transmission control module		√	√	√	√	
2009	GMC truck	Envoy - 2WD	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 2WD	Supplemental inflatable restraint	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Envoy - 2WD	Radio	√	√	√	√		
2009	GMC truck	Envoy - 2WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	GMC truck	Envoy - 2WD	Digital radio receiver	√	√	√	√	√	0516
2009	GMC truck	Envoy - 2WD	Disc player and video dilay	√	√	√			
2009	GMC truck	Envoy - 2WD	Rear seat audio	√	√	√	√		
2009	GMC truck	Envoy - 2WD	Generator battery control module	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	Body Control Module	√	√	√	√	√	0550
2009	GMC truck	Envoy - 2WD	Driver door module	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	Driver seat module	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	HVAC Control Module	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	Liftgate module	√	√	√	√	√	0159
2009	GMC truck	Envoy - 2WD	Passenger door module	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	Passenger presence system	√	√	√	√	√	0512
2009	GMC truck	Envoy - 2WD	Navigation radio	√	√	√	√	√	0525
2009	GMC truck	Envoy - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 2WD	Transmission control module		√	√	√	√	
2009	GMC truck	Envoy - 2WD	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 2WD	Supplemental inflatable restraint	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Envoy - 2WD	Radio	√	√	√	√		
2009	GMC truck	Envoy - 2WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	GMC truck	Envoy - 2WD	Digital radio receiver	√	√	√	√	√	0516
2009	GMC truck	Envoy - 2WD	Disc player and video dilay	√	√	√			
2009	GMC truck	Envoy - 2WD	Rear seat audio	√	√	√	√		
2009	GMC truck	Envoy - 2WD	Generator battery control module	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	Body Control Module	√	√	√	√	√	0550
2009	GMC truck	Envoy - 2WD	Driver door module	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	Driver seat module	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	HVAC Control Module	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	Liftgate module	√	√	√	√	√	0159
2009	GMC truck	Envoy - 2WD	Passenger door module	√	√	√	√	√	
2009	GMC truck	Envoy - 2WD	Passenger presence system	√	√	√	√	√	0512

2009	GMC truck	Envoy - 2WD	Navigation radio	√	√	√	√	√	0525
2009	GMC truck	Envoy - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 4WD	Transmission control module		√	√	√	√	
2009	GMC truck	Envoy - 4WD	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 4WD	Supplemental inflatable restraint	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Envoy - 4WD	Radio	√	√	√	√		
2009	GMC truck	Envoy - 4WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	GMC truck	Envoy - 4WD	Digital radio receiver	√	√	√	√	√	0516
2009	GMC truck	Envoy - 4WD	Disc player and video delay	√	√	√			
2009	GMC truck	Envoy - 4WD	Rear seat audio	√	√	√	√		
2009	GMC truck	Envoy - 4WD	Generator battery control module	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	Body Control Module	√	√	√	√	√	0550
2009	GMC truck	Envoy - 4WD	Driver door module	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	Driver seat module	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	HVAC Control Module	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	Liftgate module	√	√	√	√	√	0159
2009	GMC truck	Envoy - 4WD	Passenger door module	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	Passenger presence system	√	√	√	√	√	0512
2009	GMC truck	Envoy - 4WD	Navigation radio	√	√	√	√	√	0525
2009	GMC truck	Envoy - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 4WD	Transmission control module		√	√	√	√	
2009	GMC truck	Envoy - 4WD	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 4WD	Supplemental inflatable restraint	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Envoy - 4WD	Radio	√	√	√	√		
2009	GMC truck	Envoy - 4WD	Vehicle comm. interface module	√	√	√	√	√	0565 0495
2009	GMC truck	Envoy - 4WD	Digital radio receiver	√	√	√	√	√	0516
2009	GMC truck	Envoy - 4WD	Disc player and video delay	√	√	√			
2009	GMC truck	Envoy - 4WD	Rear seat audio	√	√	√	√		
2009	GMC truck	Envoy - 4WD	Generator battery control module	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	Body Control Module	√	√	√	√	√	0550
2009	GMC truck	Envoy - 4WD	Driver door module	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	Driver seat module	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	HVAC Control Module	√	√	√	√	√	
2009	GMC truck	Envoy - 4WD	Liftgate module	√	√	√	√	√	0159
2009	GMC truck	Envoy - 4WD	Passenger door module	√	√	√	√	√	

2009	GMC truck	Envoy - 4WD	Passenger presence system	√	√	√	√	√	0512
2009	GMC truck	Envoy - 4WD	Navigation radio	√	√	√	√	√	0525
2009	GMC truck	Envoy - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2009	GMC truck	Envoy - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Savana	Transmission control module		√	√	√	√	
2009	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2009	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2009	GMC truck	Savana	Radio	√	√	√	√	√	
2009	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Savana	Passenger presence system	√	√	√	√		0537
2009	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Savana	Transmission control module		√	√	√	√	
2009	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2009	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2009	GMC truck	Savana	Radio	√	√	√	√	√	
2009	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Savana	Passenger presence system	√	√	√	√		0537
2009	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Savana	Transmission control module		√	√	√	√	
2009	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2009	GMC truck	Savana	Radio	√	√	√	√	√	
2009	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Savana	Passenger presence system	√	√	√	√		0537
2009	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	



2009	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Savana	Transmission control module		√	√	√	√	
2009	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2009	GMC truck	Savana	Radio	√	√	√	√	√	
2009	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Savana	Passenger presence system	√	√	√	√		0537
2009	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Sierra	Transmission control module		√	√	√	√	
2009	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2009	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Sierra	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	GMC truck	Sierra	Digital radio receiver	√	√	√	√	√	
2009	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	
2009	GMC truck	Sierra	Memory seat module	√	√	√	√	√	
2009	GMC truck	Sierra	Rear heated seat module	√	√	√	√		
2009	GMC truck	Sierra	Park assist module	√	√	√	√	√	
2009	GMC truck	Sierra	Personal audio link module	√	√	√			0528
2009	GMC truck	Sierra	Radio	√	√	√	√	√	
2009	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2009	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0498
2009	GMC truck	Sierra	Driver door switch	√	√	√	√	√	
2009	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	
2009	GMC truck	Sierra	Passenger presence system	√	√	√	√		
2009	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	
2009	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Sierra	Electronic suspension control	√	√	√	√	√	0532
2009	GMC truck	Sierra	Trailer brake control module	√	√	√	√	√	
2009	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Sierra	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Sierra	Transmission control module		√	√	√	√	



2009	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2009	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Sierra	Rollover sensor	√	√	√	√	√	0541
2009	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√	√	
2009	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	GMC truck	Sierra	Digital radio receiver	√	√	√	√	√	
2009	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	
2009	GMC truck	Sierra	Memory seat module	√	√	√	√	√	
2009	GMC truck	Sierra	Rear heated seat module	√	√	√	√	√	
2009	GMC truck	Sierra	Park assist module	√	√	√	√	√	
2009	GMC truck	Sierra	Personal audio link module	√	√	√	√	√	0528
2009	GMC truck	Sierra	Radio	√	√	√	√	√	
2009	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2009	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0498
2009	GMC truck	Sierra	Driver door switch	√	√	√	√	√	
2009	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	
2009	GMC truck	Sierra	Passenger presence system	√	√	√	√	√	
2009	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	
2009	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Sierra	Electronic suspension control	√	√	√	√	√	0532
2009	GMC truck	Sierra	Trailer brake control module	√	√	√	√	√	
2009	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Sierra	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Sierra Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Sierra Hybrid	Rollover sensor	√	√	√	√	√	0541
2009	GMC truck	Sierra Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Sierra Hybrid	Theft Deterrent Module	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Digital radio receiver	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Memory seat module	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Rear heated seat module	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Park assist module	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Personal audio link module	√	√	√	√	√	0528
2009	GMC truck	Sierra Hybrid	Radio	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	A/C compressor control module	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526

2009	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0498
2009	GMC truck	Sierra Hybrid	Driver door switch	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Passenger door switch	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Passenger presence system	√	√	√	√		
2009	GMC truck	Sierra Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	GMC truck	Sierra Hybrid	Amplifier (bose)	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Sierra Hybrid	Electronic suension control	√	√	√	√	√	0532
2009	GMC truck	Sierra Hybrid	Trailer brake control module	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2009	GMC truck	Sierra Hybrid	Power steering control module	√	√	√	√	√	0536
2009	GMC truck	Sierra Hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Sierra Hybrid	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Sierra Hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Sierra Hybrid	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Sierra Hybrid	Digital radio receiver	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Rear HVAC/RSA	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Memory seat module	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Rear heated seat module	√	√	√	√		
2009	GMC truck	Sierra Hybrid	Park assist module	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Personal audio link module	√	√	√			0528
2009	GMC truck	Sierra Hybrid	Radio	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Serial Data Gateway Module	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	A/C compressor control module	√	√	√	√		
2009	GMC truck	Sierra Hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2009	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0498
2009	GMC truck	Sierra Hybrid	Driver door switch	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Passenger door switch	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Passenger presence system	√	√	√	√		
2009	GMC truck	Sierra Hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	GMC truck	Sierra Hybrid	Amplifier (bose)	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Sierra Hybrid	Electronic suension control	√	√	√	√	√	0532
2009	GMC truck	Sierra Hybrid	Trailer brake control module	√	√	√	√	√	
2009	GMC truck	Sierra Hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2009	GMC truck	Sierra Hybrid	Power steering control module	√	√	√	√	√	0536
2009	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	
2009	GMC truck	Yukon	Transmission control module		√	√	√	√	
2009	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Yukon	Remote control door lock receiver	√	√	√	√	√	0513 0159

2009	GMC truck	Yukon	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Yukon	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Yukon	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Yukon	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	GMC truck	Yukon	Digital radio receiver	√	√	√	√	√	
2009	GMC truck	Yukon	Rear HVAC/RSA	√	√	√	√	√	
2009	GMC truck	Yukon	Rear heated seat module	√	√	√	√		
2009	GMC truck	Yukon	Park assist module	√	√	√	√	√	
2009	GMC truck	Yukon	Personal audio link module	√	√	√			0528
2009	GMC truck	Yukon	Radio	√	√	√	√	√	
2009	GMC truck	Yukon	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Yukon	Left side object detection module	√	√	√	√	√	
2009	GMC truck	Yukon	Right side object detection module	√	√	√	√		
2009	GMC truck	Yukon	HVAC Control Module	√	√	√	√	√	0500 0526
2009	GMC truck	Yukon	Assist step controller	√	√	√	√	√	0531
2009	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0498
2009	GMC truck	Yukon	Driver door switch	√	√	√	√	√	
2009	GMC truck	Yukon	Liftgate module	√	√	√	√	√	
2009	GMC truck	Yukon	Passenger door switch	√	√	√	√	√	
2009	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Yukon	Memory seat module	√	√	√	√	√	
2009	GMC truck	Yukon	Passenger presence system	√	√	√	√		
2009	GMC truck	Yukon	Amplifier (bose)	√	√	√	√	√	0513 0159
2009	GMC truck	Yukon	Electronic suspension control	√	√	√	√	√	0532
2009	GMC truck	Yukon	Trailer brake control module	√	√	√	√	√	
2009	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	
2009	GMC truck	Yukon	Transmission control module		√	√	√	√	
2009	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Yukon	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Yukon	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Yukon	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Yukon	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Yukon	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	GMC truck	Yukon	Digital radio receiver	√	√	√	√	√	
2009	GMC truck	Yukon	Rear HVAC/RSA	√	√	√	√	√	
2009	GMC truck	Yukon	Rear heated seat module	√	√	√	√		
2009	GMC truck	Yukon	Park assist module	√	√	√	√	√	
2009	GMC truck	Yukon	Personal audio link module	√	√	√			0528
2009	GMC truck	Yukon	Radio	√	√	√	√	√	

2009	GMC truck	Yukon	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Yukon	Left side object detection module	√	√	√	√	√	
2009	GMC truck	Yukon	Right side object detection module	√	√	√	√		
2009	GMC truck	Yukon	HVAC Control Module	√	√	√	√	√	0500 0526
2009	GMC truck	Yukon	Assist step controller	√	√	√	√	√	0531
2009	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0498
2009	GMC truck	Yukon	Driver door switch	√	√	√	√	√	
2009	GMC truck	Yukon	Liftgate module	√	√	√	√	√	
2009	GMC truck	Yukon	Passenger door switch	√	√	√	√	√	
2009	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Yukon	Memory seat module	√	√	√	√	√	
2009	GMC truck	Yukon	Passenger presence system	√	√	√	√		
2009	GMC truck	Yukon	Amplifier (bose)	√	√	√	√	√	0513 0159
2009	GMC truck	Yukon	Electronic suspension control	√	√	√	√	√	0532
2009	GMC truck	Yukon	Trailer brake control module	√	√	√	√	√	
2009	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Yukon hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Yukon hybrid	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Yukon hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Yukon hybrid	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Yukon hybrid	Digital radio receiver	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Rear HVAC/RSA	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Rear heated seat module	√	√	√	√		
2009	GMC truck	Yukon hybrid	Park assist module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Personal audio link module	√	√	√			0528
2009	GMC truck	Yukon hybrid	Radio	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Left side object detection module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Right side object detection module	√	√	√	√		
2009	GMC truck	Yukon hybrid	Serial Data Gateway Module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	A/C compressor control module	√	√	√	√		
2009	GMC truck	Yukon hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2009	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0498
2009	GMC truck	Yukon hybrid	Driver door switch	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Liftgate module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Passenger door switch	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Heated seat module	√	√	√	√		
2009	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Yukon hybrid	Passenger presence system	√	√	√	√		
2009	GMC truck	Yukon hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495

2009	GMC truck	Yukon hybrid	Amplifier (bose)	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Electronic suension control	√	√	√	√	√	0532
2009	GMC truck	Yukon hybrid	Trailer brake control module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2009	GMC truck	Yukon hybrid	Power steering control module	√	√	√	√	√	0536
2009	GMC truck	Yukon hybrid	Fuel Pump Control Module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Transmission control module		√	√	√	√	
2009	GMC truck	Yukon hybrid	Accessory power module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Yukon hybrid	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Yukon hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Yukon hybrid	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Yukon hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Yukon hybrid	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Yukon hybrid	Digital radio receiver	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Rear HVAC/RSA	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Rear heated seat module	√	√	√	√		
2009	GMC truck	Yukon hybrid	Park assist module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Personal audio link module	√	√	√			0528
2009	GMC truck	Yukon hybrid	Radio	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Left side object detection module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Right side object detection module	√	√	√	√		
2009	GMC truck	Yukon hybrid	Serial Data Gateway Module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	A/C compressor control module	√	√	√	√		
2009	GMC truck	Yukon hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2009	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0498
2009	GMC truck	Yukon hybrid	Driver door switch	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Liftgate module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Passenger door switch	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Heated seat module	√	√	√	√		
2009	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Yukon hybrid	Passenger presence system	√	√	√	√		
2009	GMC truck	Yukon hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0495
2009	GMC truck	Yukon hybrid	Amplifier (bose)	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Electronic suension control	√	√	√	√	√	0532
2009	GMC truck	Yukon hybrid	Trailer brake control module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2009	GMC truck	Yukon hybrid	Power steering control module	√	√	√	√	√	0536
2009	GMC truck	Yukon hybrid	Fuel Pump Control Module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Transmission control module		√	√	√	√	

2009	GMC truck	Yukon hybrid	Accessory power module	√	√	√	√	√	
2009	GMC truck	Yukon hybrid	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Yukon hybrid	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Yukon XL	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Yukon XL	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Yukon XL	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Yukon XL	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Yukon XL	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	GMC truck	Yukon XL	Digital radio receiver	√	√	√	√	√	
2009	GMC truck	Yukon XL	Rear HVAC/RSA	√	√	√	√	√	
2009	GMC truck	Yukon XL	Rear heated seat module	√	√	√	√		
2009	GMC truck	Yukon XL	Park assist module	√	√	√	√	√	
2009	GMC truck	Yukon XL	Personal audio link module	√	√	√			0528
2009	GMC truck	Yukon XL	Radio	√	√	√	√	√	
2009	GMC truck	Yukon XL	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Yukon XL	Left side object detection module	√	√	√	√	√	
2009	GMC truck	Yukon XL	Right side object detection module	√	√	√	√		
2009	GMC truck	Yukon XL	HVAC Control Module	√	√	√	√	√	0500 0526
2009	GMC truck	Yukon XL	Assist step controller	√	√	√	√	√	0531
2009	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0498
2009	GMC truck	Yukon XL	Driver door switch	√	√	√	√	√	
2009	GMC truck	Yukon XL	Liftgate module	√	√	√	√	√	
2009	GMC truck	Yukon XL	Passenger door switch	√	√	√	√	√	
2009	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Yukon XL	Passenger presence system	√	√	√	√		
2009	GMC truck	Yukon XL	Amplifier (bose)	√	√	√	√	√	
2009	GMC truck	Yukon XL	Memory seat module	√	√	√	√	√	0513 0159
2009	GMC truck	Yukon XL	Electronic suspension control	√	√	√	√	√	0532
2009	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√	√	
2009	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	
2009	GMC truck	Yukon XL	Transmission control module		√	√	√	√	
2009	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Yukon XL	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Yukon XL	Rollover sensor	√	√	√	√		0541
2009	GMC truck	Yukon XL	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Yukon XL	Theft Deterrent Module	√	√	√	√		
2009	GMC truck	Yukon XL	Vehicle comm. interface module	√	√	√	√	√	0494 0495 0496
2009	GMC truck	Yukon XL	Digital radio receiver	√	√	√	√	√	
2009	GMC truck	Yukon XL	Rear HVAC/RSA	√	√	√	√	√	

2009	GMC truck	Yukon XL	Rear heated seat module	√	√	√	√		
2009	GMC truck	Yukon XL	Park assist module	√	√	√	√	√	
2009	GMC truck	Yukon XL	Personal audio link module	√	√	√			0528
2009	GMC truck	Yukon XL	Radio	√	√	√	√	√	
2009	GMC truck	Yukon XL	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Yukon XL	Left side object detection module	√	√	√	√	√	
2009	GMC truck	Yukon XL	Right side object detection module	√	√	√	√		
2009	GMC truck	Yukon XL	HVAC Control Module	√	√	√	√	√	0500 0526
2009	GMC truck	Yukon XL	Assist step controller	√	√	√	√	√	0531
2009	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0498
2009	GMC truck	Yukon XL	Driver door switch	√	√	√	√	√	
2009	GMC truck	Yukon XL	Liftgate module	√	√	√	√	√	
2009	GMC truck	Yukon XL	Passenger door switch	√	√	√	√	√	
2009	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Yukon XL	Passenger presence system	√	√	√	√		
2009	GMC truck	Yukon XL	Amplifier (bose)	√	√	√	√	√	
2009	GMC truck	Yukon XL	Memory seat module	√	√	√	√	√	0513 0159
2009	GMC truck	Yukon XL	Electronic suension control	√	√	√	√	√	0532
2009	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√	√	
2009	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2009	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	
2009	GMC truck	Yukon XL	Transmission control module		√	√	√	√	
2009	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493
2009	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493
2009	GMC truck	Others	Instrument panel cluster	√	√	√	√	√	
2009	GMC truck	Others	Front dilay interface module	√	√	√			
2009	GMC truck	Others	HVAC Control Module	√	√	√		√	
2009	GMC truck	Others	Radio	√	√	√	√	√	
2009	GMC truck	Others	Body Control Module	√	√	√	√	√	
2009	GMC truck	Others	Body Control Module	√	√	√	√	√	0497
2009	GMC truck	Others	Supplemental inflatable restraint	√	√	√	√	√	0497
2009	GMC truck	Others	Headlamp Control Module	√	√	√	√	√	
2009	GMC truck	Others	Park assist module	√	√	√	√		
2009	GMC truck	Others	Remote control door lock receiver	√	√	√	√	√	0513 0159
2009	GMC truck	Others	Theft Deterrent Module	√	√	√	√	√	0497
2009	GMC truck	Others	Electronic Brake Control Module	√	√	√	√	√	
2009	GMC truck	Others	Transmission control module	√	√	√	√	√	
2009	GMC truck	Others	Engine Control Module	√	√	√	√	√	0562
2009	GMC truck	Others	Rear drive system	√	√	√	√	√	0530
2008	GMC truck	Acadia - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Acadia - 2WD	Transmission control module		√	√	√	√	

2008	GMC truck	Acadia - 2WD	Passenger presence system	√	√	√	√		0537
2008	GMC truck	Acadia - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Acadia - 2WD	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Acadia - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Acadia - 2WD	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Acadia - 2WD	Head up dilay	√	√	√	√		
2008	GMC truck	Acadia - 2WD	Memory seat module	√	√	√	√	√	
2008	GMC truck	Acadia - 2WD	Park assist module	√	√	√	√	√	
2008	GMC truck	Acadia - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Acadia - 2WD	Digital radio receiver	√	√	√	√		
2008	GMC truck	Acadia - 2WD	Radio	√	√	√	√	√	
2008	GMC truck	Acadia - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Acadia - 2WD	Body Control Module						0499 0497
2008	GMC truck	Acadia - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Acadia - 2WD	Personal audio link module	√	√	√			0528 0529
2008	GMC truck	Acadia - 2WD	Driver door switch	√	√	√	√	√	0527
2008	GMC truck	Acadia - 2WD	Passenger door switch	√	√	√	√	√	0527
2008	GMC truck	Acadia - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Acadia - 2WD	Liftgate module	√	√	√	√	√	0537
2008	GMC truck	Acadia - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Acadia - 2WD	Rear drive system	√	√	√	√	√	0530
2008	GMC truck	Acadia - 4WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Acadia - 4WD	Transmission control module		√	√	√	√	
2008	GMC truck	Acadia - 4WD	Passenger presence system	√	√	√	√		0537
2008	GMC truck	Acadia - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Acadia - 4WD	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Acadia - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Acadia - 4WD	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Acadia - 4WD	Head up dilay	√	√	√	√		
2008	GMC truck	Acadia - 4WD	Memory seat module	√	√	√	√	√	
2008	GMC truck	Acadia - 4WD	Park assist module	√	√	√	√	√	
2008	GMC truck	Acadia - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Acadia - 4WD	Digital radio receiver	√	√	√	√		
2008	GMC truck	Acadia - 4WD	Radio	√	√	√	√	√	
2008	GMC truck	Acadia - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Acadia - 4WD	Body Control Module						0499 0497
2008	GMC truck	Acadia - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Acadia - 4WD	Personal audio link module	√	√	√			0528 0529
2008	GMC truck	Acadia - 4WD	Driver door switch	√	√	√	√	√	0527
2008	GMC truck	Acadia - 4WD	Passenger door switch	√	√	√	√	√	0527
2008	GMC truck	Acadia - 4WD	Instrument panel cluster	√	√	√	√	√	



2008	GMC truck	Acadia - 4WD	Liftgate module	√	√	√	√	√	0537
2008	GMC truck	Acadia - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Acadia - 4WD	Rear drive system	√	√	√	√	√	0530
2008	GMC truck	Canyon Pickup - 2WD	Transmission control module		√	√	√	√	
2008	GMC truck	Canyon Pickup - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	GMC truck	Canyon Pickup - 2WD	Passenger presence system		√	√			0512
2008	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550 0159
2008	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2008	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2008	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Canyon Pickup - 2WD	Theft Deterrent Module	√	√	√	√		0170
2008	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Canyon Pickup - 2WD	Generator battery control module	√	√	√	√	√	0515
2008	GMC truck	Canyon Pickup - 2WD	Electronic Brake Control Module	√	√	√	√	√	
2008	GMC truck	Canyon Pickup - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Canyon Pickup - 2WD	Transmission control module		√	√	√	√	
2008	GMC truck	Canyon Pickup - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	GMC truck	Canyon Pickup - 2WD	Passenger presence system		√	√			0512
2008	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550 0159
2008	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2008	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2008	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Canyon Pickup - 2WD	Theft Deterrent Module	√	√	√	√		0170
2008	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Canyon Pickup - 2WD	Generator battery control module	√	√	√	√	√	0515
2008	GMC truck	Canyon Pickup - 2WD	Electronic Brake Control Module	√	√	√	√	√	
2008	GMC truck	Canyon Pickup - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Canyon Pickup - 4WD	Transmission control module		√	√	√	√	
2008	GMC truck	Canyon Pickup - 4WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	GMC truck	Canyon Pickup - 4WD	Passenger presence system		√	√			0512
2008	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550 0159
2008	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2008	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2008	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Canyon Pickup - 4WD	Theft Deterrent Module	√	√	√	√		0170
2008	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Canyon Pickup - 4WD	Generator battery control module	√	√	√	√	√	0515
2008	GMC truck	Canyon Pickup - 4WD	Electronic Brake Control Module	√	√	√	√	√	

2008	GMC truck	Canyon Pickup - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Canyon Pickup - 4WD	Transmission control module		√	√	√	√	
2008	GMC truck	Canyon Pickup - 4WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2008	GMC truck	Canyon Pickup - 4WD	Passenger presence system		√	√			0512
2008	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550 0159
2008	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2008	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2008	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Canyon Pickup - 4WD	Theft Deterrent Module	√	√	√	√		0170
2008	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Canyon Pickup - 4WD	Generator battery control module	√	√	√	√	√	0515
2008	GMC truck	Canyon Pickup - 4WD	Electronic Brake Control Module	√	√	√	√	√	
2008	GMC truck	Canyon Pickup - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 2WD	Transmission control module		√	√	√	√	
2008	GMC truck	Envoy - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 2WD	Supplemental inflatable restraint	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Envoy - 2WD	Passenger presence system		√	√			0512
2008	GMC truck	Envoy - 2WD	Digital radio receiver	√	√	√	√		0516
2008	GMC truck	Envoy - 2WD	Disc player and video dilay	√	√	√			
2008	GMC truck	Envoy - 2WD	Radio	√	√	√	√		
2008	GMC truck	Envoy - 2WD	Rear seat audio	√	√	√	√		
2008	GMC truck	Envoy - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Envoy - 2WD	Generator battery control module	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	Body Control Module	√	√	√	√	√	0550
2008	GMC truck	Envoy - 2WD	Driver door module	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	Passenger door module	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	Liftgate module	√	√	√	√	√	0159
2008	GMC truck	Envoy - 2WD	Driver seat module	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	HVAC Control Module	√	√	√	√	√	0512
2008	GMC truck	Envoy - 2WD	Navigation radio	√	√	√	√	√	0525
2008	GMC truck	Envoy - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 2WD	Transmission control module		√	√	√	√	
2008	GMC truck	Envoy - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 2WD	Supplemental inflatable restraint	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Envoy - 2WD	Passenger presence system		√	√			0512
2008	GMC truck	Envoy - 2WD	Digital radio receiver	√	√	√	√		0516

2008	GMC truck	Envoy - 2WD	Disc player and video dilay	√	√	√			
2008	GMC truck	Envoy - 2WD	Radio	√	√	√	√		
2008	GMC truck	Envoy - 2WD	Rear seat audio	√	√	√	√		
2008	GMC truck	Envoy - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Envoy - 2WD	Generator battery control module	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	Body Control Module	√	√	√	√	√	0550
2008	GMC truck	Envoy - 2WD	Driver door module	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	Passenger door module	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	Liftgate module	√	√	√	√	√	0159
2008	GMC truck	Envoy - 2WD	Driver seat module	√	√	√	√	√	
2008	GMC truck	Envoy - 2WD	HVAC Control Module	√	√	√	√	√	0512
2008	GMC truck	Envoy - 2WD	Navigation radio	√	√	√	√	√	0525
2008	GMC truck	Envoy - 2WD	Electronic Brake Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 4WD	Transmission control module		√	√	√	√	
2008	GMC truck	Envoy - 4WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 4WD	Supplemental inflatable restraint	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Envoy - 4WD	Passenger presence system		√	√			0512
2008	GMC truck	Envoy - 4WD	Digital radio receiver	√	√	√	√		0516
2008	GMC truck	Envoy - 4WD	Disc player and video dilay	√	√	√			
2008	GMC truck	Envoy - 4WD	Radio	√	√	√	√		
2008	GMC truck	Envoy - 4WD	Rear seat audio	√	√	√	√		
2008	GMC truck	Envoy - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Envoy - 4WD	Generator battery control module	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	Body Control Module	√	√	√	√	√	0550
2008	GMC truck	Envoy - 4WD	Driver door module	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	Passenger door module	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	Liftgate module	√	√	√	√	√	0159
2008	GMC truck	Envoy - 4WD	Driver seat module	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	HVAC Control Module	√	√	√	√	√	0512
2008	GMC truck	Envoy - 4WD	Navigation radio	√	√	√	√	√	0525
2008	GMC truck	Envoy - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 4WD	Transmission control module		√	√	√	√	
2008	GMC truck	Envoy - 4WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 4WD	Supplemental inflatable restraint	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Envoy - 4WD	Passenger presence system		√	√			0512

2008	GMC truck	Envoy - 4WD	Digital radio receiver	√	√	√	√		0516
2008	GMC truck	Envoy - 4WD	Disc player and video delay	√	√	√			
2008	GMC truck	Envoy - 4WD	Radio	√	√	√	√		
2008	GMC truck	Envoy - 4WD	Rear seat audio	√	√	√	√		
2008	GMC truck	Envoy - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Envoy - 4WD	Generator battery control module	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	Body Control Module	√	√	√	√	√	0550
2008	GMC truck	Envoy - 4WD	Driver door module	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	Passenger door module	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	Liftgate module	√	√	√	√	√	0159
2008	GMC truck	Envoy - 4WD	Driver seat module	√	√	√	√	√	
2008	GMC truck	Envoy - 4WD	HVAC Control Module	√	√	√	√	√	0512
2008	GMC truck	Envoy - 4WD	Navigation radio	√	√	√	√	√	0525
2008	GMC truck	Envoy - 4WD	Electronic Brake Control Module	√	√	√	√	√	0493
2008	GMC truck	Envoy - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Savana	Transmission control module		√	√	√	√	
2008	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0571 0540 0540
2008	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Savana	Radio	√	√	√	√	√	
2008	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Savana	Passenger presence system	√	√	√	√		0537
2008	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Savana	Transmission control module		√	√	√	√	
2008	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0571 0540 0540
2008	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Savana	Radio	√	√	√	√	√	
2008	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Savana	Passenger presence system	√	√	√	√		0537

2008	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Savana	Transmission control module		√	√	√	√	
2008	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Savana	Radio	√	√	√	√	√	
2008	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Savana	Passenger presence system	√	√	√	√		0537
2008	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Savana	Transmission control module		√	√	√	√	
2008	GMC truck	Savana	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Savana	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Savana	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Savana	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Savana	Radio	√	√	√	√	√	
2008	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Savana	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Savana	Passenger presence system	√	√	√	√		0537
2008	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Sierra - 2WD	Transmission control module		√	√	√	√	
2008	GMC truck	Sierra - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra - 2WD	Passenger presence system	√	√	√	√		0512
2008	GMC truck	Sierra - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Sierra - 2WD	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Sierra - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Sierra - 2WD	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Sierra - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Sierra - 2WD	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Digital radio receiver	√	√	√	√		
2008	GMC truck	Sierra - 2WD	Radio	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Sierra - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Memory seat module	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Rear heated seat module	√	√	√	√		

2008	GMC truck	Sierra - 2WD	Park assist module	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Personal audio link module	√	√	√			0528
2008	GMC truck	Sierra - 2WD	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Sierra - 2WD	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Sierra - 2WD	Driver door switch	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Passenger door switch	√	√	√	√	√	0512
2008	GMC truck	Sierra - 2WD	Electronic suension control	√	√	√	√	√	0532
2008	GMC truck	Sierra - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Sierra - 2WD	Trailer brake control module	√	√	√	√	√	0532
2008	GMC truck	Sierra - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra - 2WD	Transmission control module		√	√	√	√	
2008	GMC truck	Sierra - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra - 2WD	Passenger presence system	√	√	√	√		0512
2008	GMC truck	Sierra - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Sierra - 2WD	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Sierra - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Sierra - 2WD	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Sierra - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Sierra - 2WD	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Digital radio receiver	√	√	√	√		
2008	GMC truck	Sierra - 2WD	Radio	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Sierra - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Memory seat module	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Rear heated seat module	√	√	√	√		
2008	GMC truck	Sierra - 2WD	Park assist module	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Personal audio link module	√	√	√			0528
2008	GMC truck	Sierra - 2WD	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Sierra - 2WD	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Sierra - 2WD	Driver door switch	√	√	√	√	√	
2008	GMC truck	Sierra - 2WD	Passenger door switch	√	√	√	√	√	0512
2008	GMC truck	Sierra - 2WD	Electronic suension control	√	√	√	√	√	0532
2008	GMC truck	Sierra - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Sierra - 2WD	Trailer brake control module	√	√	√	√	√	0532
2008	GMC truck	Sierra - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra - 4WD	Transmission control module		√	√	√	√	
2008	GMC truck	Sierra - 4WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493

2008	GMC truck	Sierra - 4WD	Passenger presence system	√	√	√	√		0512
2008	GMC truck	Sierra - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Sierra - 4WD	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Sierra - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Sierra - 4WD	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Sierra - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Sierra - 4WD	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Digital radio receiver	√	√	√	√		
2008	GMC truck	Sierra - 4WD	Radio	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Sierra - 4WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Memory seat module	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Rear heated seat module	√	√	√	√		
2008	GMC truck	Sierra - 4WD	Park assist module	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Personal audio link module	√	√	√			0528
2008	GMC truck	Sierra - 4WD	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Sierra - 4WD	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Sierra - 4WD	Driver door switch	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Passenger door switch	√	√	√	√	√	0512
2008	GMC truck	Sierra - 4WD	Electronic suspension control	√	√	√	√	√	0532
2008	GMC truck	Sierra - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Sierra - 4WD	Trailer brake control module	√	√	√	√	√	0532
2008	GMC truck	Sierra - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra - 4WD	Transmission control module		√	√	√	√	
2008	GMC truck	Sierra - 4WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra - 4WD	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra - 4WD	Passenger presence system	√	√	√	√		0512
2008	GMC truck	Sierra - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Sierra - 4WD	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Sierra - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Sierra - 4WD	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Sierra - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Sierra - 4WD	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Digital radio receiver	√	√	√	√		
2008	GMC truck	Sierra - 4WD	Radio	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Sierra - 4WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Memory seat module	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Rear heated seat module	√	√	√	√		
2008	GMC truck	Sierra - 4WD	Park assist module	√	√	√	√	√	



2008	GMC truck	Sierra - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Personal audio link module	√	√	√			0528
2008	GMC truck	Sierra - 4WD	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Sierra - 4WD	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Sierra - 4WD	Driver door switch	√	√	√	√	√	
2008	GMC truck	Sierra - 4WD	Passenger door switch	√	√	√	√	√	0512
2008	GMC truck	Sierra - 4WD	Electronic suension control	√	√	√	√	√	0532
2008	GMC truck	Sierra - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Sierra - 4WD	Trailer brake control module	√	√	√	√	√	0532
2008	GMC truck	Sierra - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra Denali - 2WD	Transmission control module		√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra Denali - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra Denali - 2WD	Passenger presence system	√	√	√	√		0512
2008	GMC truck	Sierra Denali - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Sierra Denali - 2WD	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Sierra Denali - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Sierra Denali - 2WD	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Sierra Denali - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Sierra Denali - 2WD	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Digital radio receiver	√	√	√	√		
2008	GMC truck	Sierra Denali - 2WD	Radio	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Sierra Denali - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Memory seat module	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Rear heated seat module	√	√	√	√		
2008	GMC truck	Sierra Denali - 2WD	Park assist module	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Personal audio link module	√	√	√			0528
2008	GMC truck	Sierra Denali - 2WD	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Sierra Denali - 2WD	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Sierra Denali - 2WD	Driver door switch	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Passenger door switch	√	√	√	√	√	0512
2008	GMC truck	Sierra Denali - 2WD	Electronic suension control	√	√	√	√	√	0532
2008	GMC truck	Sierra Denali - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Sierra Denali - 2WD	Trailer brake control module	√	√	√	√	√	0532
2008	GMC truck	Sierra Denali - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra Denali - 2WD	Transmission control module		√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra Denali - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Sierra Denali - 2WD	Passenger presence system	√	√	√	√		0512



2008	GMC truck	Sierra Denali - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Sierra Denali - 2WD	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Sierra Denali - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Sierra Denali - 2WD	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Sierra Denali - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Sierra Denali - 2WD	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Digital radio receiver	√	√	√	√		
2008	GMC truck	Sierra Denali - 2WD	Radio	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Sierra Denali - 2WD	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Memory seat module	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Rear heated seat module	√	√	√	√		
2008	GMC truck	Sierra Denali - 2WD	Park assist module	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Personal audio link module	√	√	√			0528
2008	GMC truck	Sierra Denali - 2WD	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Sierra Denali - 2WD	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Sierra Denali - 2WD	Driver door switch	√	√	√	√	√	
2008	GMC truck	Sierra Denali - 2WD	Passenger door switch	√	√	√	√	√	0512
2008	GMC truck	Sierra Denali - 2WD	Electronic suspension control	√	√	√	√	√	0532
2008	GMC truck	Sierra Denali - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Sierra Denali - 2WD	Trailer brake control module	√	√	√	√	√	0532
2008	GMC truck	Sierra Denali - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Yukon	Passenger presence system	√	√	√	√		0512
2008	GMC truck	Yukon	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Yukon	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Yukon	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Yukon	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Yukon	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Yukon	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Yukon	Digital radio receiver	√	√	√	√		
2008	GMC truck	Yukon	Radio	√	√	√	√	√	
2008	GMC truck	Yukon	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Yukon	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Yukon	Memory seat module	√	√	√	√	√	
2008	GMC truck	Yukon	Rear heated seat module	√	√	√	√		
2008	GMC truck	Yukon	Park assist module	√	√	√	√	√	
2008	GMC truck	Yukon	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Yukon	Personal audio link module	√	√	√			0528
2008	GMC truck	Yukon	Assist step controller	√	√	√	√	√	0531

2008	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Yukon	Liftgate module	√	√	√	√	√	
2008	GMC truck	Yukon	Driver door switch	√	√	√	√	√	
2008	GMC truck	Yukon	Passenger door switch	√	√	√	√	√	0512
2008	GMC truck	Yukon	Electronic suension control	√	√	√	√	√	0532
2008	GMC truck	Yukon	Trailer brake control module	√	√	√	√		
2008	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Yukon	Transmission control module		√	√	√	√	
2008	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Yukon	Passenger presence system	√	√	√	√		0512
2008	GMC truck	Yukon	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Yukon	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Yukon	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Yukon	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Yukon	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Yukon	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Yukon	Digital radio receiver	√	√	√	√		
2008	GMC truck	Yukon	Radio	√	√	√	√	√	
2008	GMC truck	Yukon	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Yukon	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Yukon	Memory seat module	√	√	√	√	√	
2008	GMC truck	Yukon	Rear heated seat module	√	√	√	√		
2008	GMC truck	Yukon	Park assist module	√	√	√	√	√	
2008	GMC truck	Yukon	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Yukon	Personal audio link module	√	√	√			0528
2008	GMC truck	Yukon	Assist step controller	√	√	√	√	√	0531
2008	GMC truck	Yukon	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Yukon	Liftgate module	√	√	√	√	√	
2008	GMC truck	Yukon	Driver door switch	√	√	√	√	√	
2008	GMC truck	Yukon	Passenger door switch	√	√	√	√	√	0512
2008	GMC truck	Yukon	Electronic suension control	√	√	√	√	√	0532
2008	GMC truck	Yukon	Trailer brake control module	√	√	√	√		
2008	GMC truck	Yukon	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Yukon	Transmission control module		√	√	√	√	
2008	GMC truck	Yukon	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Yukon	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Yukon	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Yukon hybrid	Passenger presence system	√	√	√	√		0512

2008	GMC truck	Yukon hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Yukon hybrid	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Yukon hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Yukon hybrid	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Yukon hybrid	A/C compressor control module	√	√	√	√		
2008	GMC truck	Yukon hybrid	Serial Data Gateway Module	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Yukon hybrid	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Digital radio receiver	√	√	√	√		
2008	GMC truck	Yukon hybrid	Radio	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Yukon hybrid	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Memory seat module	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Rear heated seat module	√	√	√	√		
2008	GMC truck	Yukon hybrid	Park assist module	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Personal audio link module	√	√	√			0528
2008	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Yukon hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Yukon hybrid	Liftgate module	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Driver door switch	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Passenger door switch	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Power steering control module		√	√	√		0536
2008	GMC truck	Yukon hybrid	Electronic suspension control	√	√	√	√	√	0532
2008	GMC truck	Yukon hybrid	Trailer brake control module	√	√	√	√		
2008	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2008	GMC truck	Yukon hybrid	Passenger presence system	√	√	√	√		0512
2008	GMC truck	Yukon hybrid	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Yukon hybrid	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Yukon hybrid	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Yukon hybrid	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Yukon hybrid	A/C compressor control module	√	√	√	√		
2008	GMC truck	Yukon hybrid	Serial Data Gateway Module	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Yukon hybrid	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Digital radio receiver	√	√	√	√		
2008	GMC truck	Yukon hybrid	Radio	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Yukon hybrid	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Memory seat module	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Rear heated seat module	√	√	√	√		

2008	GMC truck	Yukon hybrid	Park assist module	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Personal audio link module	√	√	√			0528
2008	GMC truck	Yukon hybrid	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Yukon hybrid	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Yukon hybrid	Liftgate module	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Driver door switch	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Passenger door switch	√	√	√	√	√	
2008	GMC truck	Yukon hybrid	Power steering control module		√	√	√		0536
2008	GMC truck	Yukon hybrid	Electronic suension control	√	√	√	√	√	0532
2008	GMC truck	Yukon hybrid	Trailer brake control module	√	√	√	√		
2008	GMC truck	Yukon hybrid	Electronic Brake Control Module	√	√	√	√	√	0533 0533 0534 0535
2008	GMC truck	Yukon XL	Transmission control module		√	√	√	√	
2008	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Yukon XL	Passenger presence system	√	√	√	√		0512
2008	GMC truck	Yukon XL	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Yukon XL	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Yukon XL	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Yukon XL	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Yukon XL	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Yukon XL	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Yukon XL	Digital radio receiver	√	√	√	√		
2008	GMC truck	Yukon XL	Radio	√	√	√	√	√	
2008	GMC truck	Yukon XL	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Yukon XL	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Yukon XL	Memory seat module	√	√	√	√	√	
2008	GMC truck	Yukon XL	Rear heated seat module	√	√	√	√		
2008	GMC truck	Yukon XL	Park assist module	√	√	√	√	√	
2008	GMC truck	Yukon XL	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Yukon XL	Personal audio link module	√	√	√			0528
2008	GMC truck	Yukon XL	Assist step controller	√	√	√	√	√	0531
2008	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Yukon XL	Liftgate module	√	√	√	√	√	
2008	GMC truck	Yukon XL	Driver door switch	√	√	√	√	√	
2008	GMC truck	Yukon XL	Passenger door switch	√	√	√	√	√	0512
2008	GMC truck	Yukon XL	Electronic suension control	√	√	√	√	√	0532
2008	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√		
2008	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493

2008	GMC truck	Yukon XL	Transmission control module		√	√	√	√	
2008	GMC truck	Yukon XL	Engine Control Module	√	√	√	√	√	0493
2008	GMC truck	Yukon XL	Fuel Pump Control Module	√	√	√	√	√	0493
2008	GMC truck	Yukon XL	Passenger presence system	√	√	√	√		0512
2008	GMC truck	Yukon XL	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Yukon XL	Rollover sensor	√	√	√	√		0541
2008	GMC truck	Yukon XL	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Yukon XL	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Yukon XL	HVAC Control Module	√	√	√	√	√	0500 0526
2008	GMC truck	Yukon XL	Amplifier (bose)	√	√	√	√	√	
2008	GMC truck	Yukon XL	Digital radio receiver	√	√	√	√		
2008	GMC truck	Yukon XL	Radio	√	√	√	√	√	
2008	GMC truck	Yukon XL	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2008	GMC truck	Yukon XL	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Yukon XL	Memory seat module	√	√	√	√	√	
2008	GMC truck	Yukon XL	Rear heated seat module	√	√	√	√		
2008	GMC truck	Yukon XL	Park assist module	√	√	√	√	√	
2008	GMC truck	Yukon XL	Rear HVAC/RSA	√	√	√	√	√	
2008	GMC truck	Yukon XL	Personal audio link module	√	√	√			0528
2008	GMC truck	Yukon XL	Assist step controller	√	√	√	√	√	0531
2008	GMC truck	Yukon XL	Body Control Module	√	√	√	√	√	0498
2008	GMC truck	Yukon XL	Liftgate module	√	√	√	√	√	
2008	GMC truck	Yukon XL	Driver door switch	√	√	√	√	√	
2008	GMC truck	Yukon XL	Passenger door switch	√	√	√	√	√	0512
2008	GMC truck	Yukon XL	Electronic suspension control	√	√	√	√	√	0532
2008	GMC truck	Yukon XL	Trailer brake control module	√	√	√	√		
2008	GMC truck	Yukon XL	Electronic Brake Control Module	√	√	√	√	√	0506
2008	GMC truck	Yukon XL	Transfer Case Control Module	√	√	√	√	√	0493
2008	GMC truck	Others	Engine Control Module	√	√	√	√	√	0562
2008	GMC truck	Others	Transmission control module	√	√	√	√	√	0562
2008	GMC truck	Others	Rear drive system	√	√	√	√	√	0530
2008	GMC truck	Others	Instrument panel cluster	√	√	√	√	√	
2008	GMC truck	Others	Body Control Module	√	√	√	√	√	0497
2008	GMC truck	Others	Body Control Module	√	√	√	√	√	
2008	GMC truck	Others	Supplemental inflatable restraint	√	√	√	√	√	0497
2008	GMC truck	Others	Headlamp Control Module	√	√	√	√	√	
2008	GMC truck	Others	Park assist module	√	√	√	√		
2008	GMC truck	Others	Remote control door lock receiver	√	√	√	√	√	0513 0159
2008	GMC truck	Others	Theft Deterrent Module	√	√	√	√		
2008	GMC truck	Others	HVAC Control Module	√	√	√		√	

2008	GMC truck	Others	Radio	√	√	√	√	√	
2008	GMC truck	Others	Front dilay interface module	√	√	√	√	√	0497
2008	GMC truck	Others	Electronic Brake Control Module	√	√	√	√	√	
2007	GMC truck	Acadia - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Acadia - 2WD	Transmission control module		√	√	√	√	
2007	GMC truck	Acadia - 2WD	Digital radio receiver	√	√	√	√		
2007	GMC truck	Acadia - 2WD	Radio	√	√	√	√	√	
2007	GMC truck	Acadia - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Acadia - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Acadia - 2WD	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Acadia - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Acadia - 2WD	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Acadia - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Acadia - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Acadia - 2WD	Body Control Module						0499 0497
2007	GMC truck	Acadia - 2WD	Passenger presence system	√	√	√	√		0537
2007	GMC truck	Acadia - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Acadia - 2WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Acadia - 2WD	Park assist module	√	√	√	√	√	
2007	GMC truck	Acadia - 2WD	Head up dilay	√	√	√	√		
2007	GMC truck	Acadia - 2WD	Driver door switch	√	√	√	√	√	0527
2007	GMC truck	Acadia - 2WD	Passenger door switch	√	√	√	√	√	0527
2007	GMC truck	Acadia - 2WD	Liftgate module	√	√	√	√	√	0541
2007	GMC truck	Acadia - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Acadia - 2WD	Rear drive system	√	√	√	√	√	0530
2007	GMC truck	Acadia - 4WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Acadia - 4WD	Transmission control module		√	√	√	√	
2007	GMC truck	Acadia - 4WD	Digital radio receiver	√	√	√	√		
2007	GMC truck	Acadia - 4WD	Radio	√	√	√	√	√	
2007	GMC truck	Acadia - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Acadia - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Acadia - 4WD	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Acadia - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Acadia - 4WD	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Acadia - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Acadia - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Acadia - 4WD	Body Control Module						0499 0497
2007	GMC truck	Acadia - 4WD	Passenger presence system	√	√	√	√		0537
2007	GMC truck	Acadia - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Acadia - 4WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Acadia - 4WD	Park assist module	√	√	√	√	√	

2007	GMC truck	Acadia - 4WD	Head up display	√	√	√	√		
2007	GMC truck	Acadia - 4WD	Driver door switch	√	√	√	√	√	0527
2007	GMC truck	Acadia - 4WD	Passenger door switch	√	√	√	√	√	0527
2007	GMC truck	Acadia - 4WD	Liftgate module	√	√	√	√	√	0541
2007	GMC truck	Acadia - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Acadia - 4WD	Rear drive system	√	√	√	√	√	0530
2007	GMC truck	Canyon Pickup - 2WD	Powertrain control module		√	√	√	√	0638
2007	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2007	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2007	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	GMC truck	Canyon Pickup - 2WD	Generator battery control module	√	√	√	√	√	
2007	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550 0159
2007	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Canyon Pickup - 2WD	Passenger presence system	√	√	√	√	√	0512
2007	GMC truck	Canyon Pickup - 2WD	Electronic Brake Control Module	√	√	√	√	√	0638
2007	GMC truck	Canyon Pickup - 2WD	Transfer Case Control Module	√	√	√	√	√	0516
2007	GMC truck	Canyon Pickup - 2WD	Powertrain control module		√	√	√	√	0638
2007	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2007	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2007	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	GMC truck	Canyon Pickup - 2WD	Generator battery control module	√	√	√	√	√	
2007	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550 0159
2007	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Canyon Pickup - 2WD	Passenger presence system	√	√	√	√	√	0512
2007	GMC truck	Canyon Pickup - 2WD	Electronic Brake Control Module	√	√	√	√	√	0638
2007	GMC truck	Canyon Pickup - 2WD	Transfer Case Control Module	√	√	√	√	√	0516
2007	GMC truck	Canyon Pickup - 4WD	Powertrain control module		√	√	√	√	0638
2007	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2007	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2007	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	GMC truck	Canyon Pickup - 4WD	Generator battery control module	√	√	√	√	√	
2007	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550 0159
2007	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Canyon Pickup - 4WD	Passenger presence system	√	√	√	√	√	0512
2007	GMC truck	Canyon Pickup - 4WD	Electronic Brake Control Module	√	√	√	√	√	0638
2007	GMC truck	Canyon Pickup - 4WD	Transfer Case Control Module	√	√	√	√	√	0516
2007	GMC truck	Canyon Pickup - 4WD	Powertrain control module		√	√	√	√	0638
2007	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√		0516



2007	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2007	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2007	GMC truck	Canyon Pickup - 4WD	Generator battery control module	√	√	√	√	√	
2007	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550 0159
2007	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Canyon Pickup - 4WD	Passenger presence system	√	√	√	√	√	0512
2007	GMC truck	Canyon Pickup - 4WD	Electronic Brake Control Module	√	√	√	√	√	0638
2007	GMC truck	Canyon Pickup - 4WD	Transfer Case Control Module	√	√	√	√	√	0516
2007	GMC truck	Envoy - 2WD	Powertrain control module		√	√	√	√	
2007	GMC truck	Envoy - 2WD	Transmission control module		√	√	√	√	
2007	GMC truck	Envoy - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Envoy - 2WD	Supplemental inflatable restraint	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Disc player and video delay	√	√	√			
2007	GMC truck	Envoy - 2WD	Radio	√	√	√	√		
2007	GMC truck	Envoy - 2WD	Rear seat audio	√	√	√	√		
2007	GMC truck	Envoy - 2WD	Digital radio receiver	√	√	√	√		0516
2007	GMC truck	Envoy - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Generator battery control module	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Body Control Module	√	√	√	√	√	0550
2007	GMC truck	Envoy - 2WD	Driver door module	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Driver seat module	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	HVAC Control Module	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Passenger door module	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Liftgate module	√	√	√	√	√	0159
2007	GMC truck	Envoy - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Envoy - 2WD	Passenger presence system	√	√	√	√	√	0512
2007	GMC truck	Envoy - 2WD	Navigation radio	√	√	√	√	√	0525
2007	GMC truck	Envoy - 2WD	Electronic Brake Control Module	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Envoy - 2WD	Powertrain control module		√	√	√	√	
2007	GMC truck	Envoy - 2WD	Transmission control module		√	√	√	√	
2007	GMC truck	Envoy - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Envoy - 2WD	Supplemental inflatable restraint	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Disc player and video delay	√	√	√			
2007	GMC truck	Envoy - 2WD	Radio	√	√	√	√		
2007	GMC truck	Envoy - 2WD	Rear seat audio	√	√	√	√		
2007	GMC truck	Envoy - 2WD	Digital radio receiver	√	√	√	√		0516
2007	GMC truck	Envoy - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Generator battery control module	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Body Control Module	√	√	√	√	√	0550



2007	GMC truck	Envoy - 2WD	Driver door module	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Driver seat module	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	HVAC Control Module	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Passenger door module	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Liftgate module	√	√	√	√	√	0159
2007	GMC truck	Envoy - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Envoy - 2WD	Passenger presence system	√	√	√	√	√	0512
2007	GMC truck	Envoy - 2WD	Navigation radio	√	√	√	√	√	0525
2007	GMC truck	Envoy - 2WD	Electronic Brake Control Module	√	√	√	√	√	
2007	GMC truck	Envoy - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Envoy - 4WD	Powertrain control module		√	√	√	√	
2007	GMC truck	Envoy - 4WD	Transmission control module		√	√	√	√	
2007	GMC truck	Envoy - 4WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Envoy - 4WD	Supplemental inflatable restraint	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Disc player and video delay	√	√	√			
2007	GMC truck	Envoy - 4WD	Radio	√	√	√	√		
2007	GMC truck	Envoy - 4WD	Rear seat audio	√	√	√	√		
2007	GMC truck	Envoy - 4WD	Digital radio receiver	√	√	√	√		0516
2007	GMC truck	Envoy - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Generator battery control module	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Body Control Module	√	√	√	√	√	0550
2007	GMC truck	Envoy - 4WD	Driver door module	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Driver seat module	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	HVAC Control Module	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Passenger door module	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Liftgate module	√	√	√	√	√	0159
2007	GMC truck	Envoy - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Envoy - 4WD	Passenger presence system	√	√	√	√	√	0512
2007	GMC truck	Envoy - 4WD	Navigation radio	√	√	√	√	√	0525
2007	GMC truck	Envoy - 4WD	Electronic Brake Control Module	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Envoy - 4WD	Powertrain control module		√	√	√	√	
2007	GMC truck	Envoy - 4WD	Transmission control module		√	√	√	√	
2007	GMC truck	Envoy - 4WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Envoy - 4WD	Supplemental inflatable restraint	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Disc player and video delay	√	√	√			
2007	GMC truck	Envoy - 4WD	Radio	√	√	√	√		
2007	GMC truck	Envoy - 4WD	Rear seat audio	√	√	√	√		
2007	GMC truck	Envoy - 4WD	Digital radio receiver	√	√	√	√		0516
2007	GMC truck	Envoy - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Generator battery control module	√	√	√	√	√	

2007	GMC truck	Envoy - 4WD	Body Control Module	√	√	√	√	√	0550
2007	GMC truck	Envoy - 4WD	Driver door module	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Driver seat module	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	HVAC Control Module	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Passenger door module	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Liftgate module	√	√	√	√	√	0159
2007	GMC truck	Envoy - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Envoy - 4WD	Passenger presence system	√	√	√	√	√	0512
2007	GMC truck	Envoy - 4WD	Navigation radio	√	√	√	√	√	0525
2007	GMC truck	Envoy - 4WD	Electronic Brake Control Module	√	√	√	√	√	
2007	GMC truck	Envoy - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Savana	Powertrain control module		√	√	√	√	0638
2007	GMC truck	Savana	Transmission control module		√	√	√	√	
2007	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2007	GMC truck	Savana	Radio	√	√	√	√	√	
2007	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2007	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Savana	Passenger presence system		√	√			
2007	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	
2007	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	
2007	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Savana	Body Control Module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	
2007	GMC truck	Savana	Powertrain control module		√	√	√	√	0638
2007	GMC truck	Savana	Transmission control module		√	√	√	√	
2007	GMC truck	Savana	Auxiliary Heater Control Module	√	√	√	√	√	0539 0540 0540
2007	GMC truck	Savana	Radio	√	√	√	√	√	
2007	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2007	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Savana	Passenger presence system		√	√			
2007	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	
2007	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	
2007	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Savana	Body Control Module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	
2007	GMC truck	Savana	Powertrain control module		√	√	√	√	
2007	GMC truck	Savana	Radio	√	√	√	√	√	
2007	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2007	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Savana	Passenger presence system		√	√			
2007	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	

2007	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	
2007	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Savana	Body Control Module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	
2007	GMC truck	Savana	Powertrain control module		√	√	√	√	
2007	GMC truck	Savana	Radio	√	√	√	√		
2007	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2007	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Savana	Passenger presence system		√	√			
2007	GMC truck	Savana	Remote control door lock receiver	√	√	√	√	√	
2007	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	
2007	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Savana	Body Control Module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Savana	Electronic Brake Control Module	√	√	√	√	√	
2007	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra	Transmission control module	√	√	√	√	√	0493
2007	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Sierra	Radio	√	√	√	√	√	
2007	GMC truck	Sierra	Digital radio receiver	√	√	√	√		
2007	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Sierra	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Sierra	Park assist module	√	√	√	√	√	
2007	GMC truck	Sierra	Memory seat module	√	√	√	√	√	
2007	GMC truck	Sierra	Rear heated seat module	√	√	√	√		
2007	GMC truck	Sierra	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Sierra	Body Control Module	√	√	√	√	√	
2007	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Sierra	Personal audio link module	√	√	√			0528
2007	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Sierra	Driver door switch	√	√	√	√	√	
2007	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra	Electronic suspension control	√	√	√	√	√	
2007	GMC truck	Sierra	Trailer brake control module	√	√	√	√		
2007	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Sierra	Powertrain control module		√	√	√	√	0638

2007	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	0631
2007	GMC truck	Sierra	CD changer	√	√	√			
2007	GMC truck	Sierra	Chime	√	√	√	√	√	
2007	GMC truck	Sierra	Digital radio receiver	√	√	√	√		0516
2007	GMC truck	Sierra	Disc player and video delay	√	√	√			
2007	GMC truck	Sierra	Radio	√	√	√	√		
2007	GMC truck	Sierra	Rear seat audio	√	√	√	√		
2007	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Sierra	Passenger presence system		√	√			0512
2007	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0639
2007	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra	Body Control Module	√	√	√	√	√	
2007	GMC truck	Sierra	Generator battery control module	√	√	√	√	√	
2007	GMC truck	Sierra	Driver door module	√	√	√	√	√	
2007	GMC truck	Sierra	Driver seat module	√	√	√	√	√	
2007	GMC truck	Sierra	Rear aux. climate module	√	√	√	√	√	
2007	GMC truck	Sierra	Rear HVAC	√	√	√	√		
2007	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	
2007	GMC truck	Sierra	Passenger door module	√	√	√	√	√	0159
2007	GMC truck	Sierra	Navigation radio	√	√	√	√	√	0525
2007	GMC truck	Sierra	ABS	√	√	√	√	√	
2007	GMC truck	Sierra	EHPS (parallel hybrid)	√	√	√	√	√	
2007	GMC truck	Sierra	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra	Transmission control module		√	√	√	√	
2007	GMC truck	Sierra	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra	Fuel Pump Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Sierra	Radio	√	√	√	√	√	
2007	GMC truck	Sierra	Digital radio receiver	√	√	√	√		
2007	GMC truck	Sierra	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Sierra	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Sierra	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Sierra	Park assist module	√	√	√	√	√	
2007	GMC truck	Sierra	Memory seat module	√	√	√	√	√	
2007	GMC truck	Sierra	Rear heated seat module	√	√	√	√		
2007	GMC truck	Sierra	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Sierra	Body Control Module	√	√	√	√	√	

2007	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Sierra	Personal audio link module	√	√	√			0528
2007	GMC truck	Sierra	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Sierra	Driver door switch	√	√	√	√	√	
2007	GMC truck	Sierra	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra	Electronic suspension control	√	√	√	√	√	
2007	GMC truck	Sierra	Trailer brake control module	√	√	√	√		
2007	GMC truck	Sierra	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Sierra	Powertrain control module		√	√	√	√	0638
2007	GMC truck	Sierra	Transfer Case Control Module		√	√	√	√	0638
2007	GMC truck	Sierra	Amplifier (bose)	√	√	√	√	√	0631
2007	GMC truck	Sierra	CD changer	√	√	√			
2007	GMC truck	Sierra	Chime	√	√	√	√	√	
2007	GMC truck	Sierra	Digital radio receiver	√	√	√	√		0516
2007	GMC truck	Sierra	Disc player and video delay	√	√	√			
2007	GMC truck	Sierra	Radio	√	√	√	√		
2007	GMC truck	Sierra	Rear seat audio	√	√	√	√		
2007	GMC truck	Sierra	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Sierra	Passenger presence system		√	√			0512
2007	GMC truck	Sierra	Supplemental inflatable restraint	√	√	√	√	√	0639
2007	GMC truck	Sierra	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra	Body Control Module	√	√	√	√	√	
2007	GMC truck	Sierra	Generator battery control module	√	√	√	√	√	
2007	GMC truck	Sierra	Driver door module	√	√	√	√	√	
2007	GMC truck	Sierra	Driver seat module	√	√	√	√	√	
2007	GMC truck	Sierra	Rear aux. climate module	√	√	√	√	√	
2007	GMC truck	Sierra	Rear HVAC	√	√	√	√		
2007	GMC truck	Sierra	HVAC Control Module	√	√	√	√	√	
2007	GMC truck	Sierra	Passenger door module	√	√	√	√	√	0159
2007	GMC truck	Sierra	Navigation radio	√	√	√	√	√	0525
2007	GMC truck	Sierra	ABS	√	√	√	√	√	
2007	GMC truck	Sierra	EHPS (parallel hybrid)	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Classic	Transmission control module	√	√	√	√	√	0539 0571 0540 0540
2007	GMC truck	Sierra Classic	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Sierra Classic	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Radio	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Digital radio receiver	√	√	√	√		
2007	GMC truck	Sierra Classic	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Theft Deterrent Module	√	√	√	√		

2007	GMC truck	Sierra Classic	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra Classic	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Sierra Classic	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Sierra Classic	Park assist module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Memory seat module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Rear heated seat module	√	√	√	√		
2007	GMC truck	Sierra Classic	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Sierra Classic	Body Control Module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Sierra Classic	Personal audio link module	√	√	√			0528
2007	GMC truck	Sierra Classic	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Sierra Classic	Driver door switch	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra Classic	Electronic suspension control	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Trailer brake control module	√	√	√	√		
2007	GMC truck	Sierra Classic	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Sierra Classic	Powertrain control module		√	√	√	√	0638
2007	GMC truck	Sierra Classic	Battery Energy Control Module		√	√	√	√	
2007	GMC truck	Sierra Classic	Transmission control module		√	√	√	√	
2007	GMC truck	Sierra Classic	Engine Control Module	√	√	√	√	√	0539 0540 0540
2007	GMC truck	Sierra Classic	Amplifier (bose)	√	√	√	√	√	0631
2007	GMC truck	Sierra Classic	CD changer	√	√	√			
2007	GMC truck	Sierra Classic	Chime	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Digital radio receiver	√	√	√	√		0516
2007	GMC truck	Sierra Classic	Disc player and video delay	√	√	√			
2007	GMC truck	Sierra Classic	Radio	√	√	√	√		
2007	GMC truck	Sierra Classic	Rear seat audio	√	√	√	√		
2007	GMC truck	Sierra Classic	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Sierra Classic	Passenger presence system		√	√			0512
2007	GMC truck	Sierra Classic	Supplemental inflatable restraint	√	√	√	√	√	0639
2007	GMC truck	Sierra Classic	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Body Control Module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Generator battery control module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Driver door module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Driver seat module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Rear aux. climate module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Rear HVAC	√	√	√	√		
2007	GMC truck	Sierra Classic	HVAC Control Module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Passenger door module	√	√	√	√	√	0159
2007	GMC truck	Sierra Classic	Navigation radio	√	√	√	√	√	0525
2007	GMC truck	Sierra Classic	ABS	√	√	√	√	√	

2007	GMC truck	Sierra Classic	EHPS (parallel hybrid)	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Classic	Transmission control module		√	√	√	√	
2007	GMC truck	Sierra Classic	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Classic	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Sierra Classic	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Radio	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Digital radio receiver	√	√	√	√		
2007	GMC truck	Sierra Classic	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Sierra Classic	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra Classic	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Sierra Classic	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Sierra Classic	Park assist module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Memory seat module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Rear heated seat module	√	√	√	√		
2007	GMC truck	Sierra Classic	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Sierra Classic	Body Control Module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Sierra Classic	Personal audio link module	√	√	√			0528
2007	GMC truck	Sierra Classic	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Sierra Classic	Driver door switch	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra Classic	Electronic suspension control	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Trailer brake control module	√	√	√	√		
2007	GMC truck	Sierra Classic	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Sierra Classic	Powertrain control module		√	√	√	√	0638
2007	GMC truck	Sierra Classic	Transfer Case Control Module		√	√	√	√	0638
2007	GMC truck	Sierra Classic	Battery Energy Control Module		√	√	√	√	
2007	GMC truck	Sierra Classic	Transmission control module		√	√	√	√	
2007	GMC truck	Sierra Classic	Engine Control Module	√	√	√	√	√	0539 0540 0540
2007	GMC truck	Sierra Classic	Amplifier (bose)	√	√	√	√	√	0631
2007	GMC truck	Sierra Classic	CD changer	√	√	√			
2007	GMC truck	Sierra Classic	Chime	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Digital radio receiver	√	√	√	√		0516
2007	GMC truck	Sierra Classic	Disc player and video delay	√	√	√			
2007	GMC truck	Sierra Classic	Radio	√	√	√	√		
2007	GMC truck	Sierra Classic	Rear seat audio	√	√	√	√		
2007	GMC truck	Sierra Classic	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Sierra Classic	Passenger presence system		√	√			0512

2007	GMC truck	Sierra Classic	Supplemental inflatable restraint	√	√	√	√	√	0639
2007	GMC truck	Sierra Classic	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Body Control Module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Generator battery control module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Driver door module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Driver seat module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Rear aux. climate module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Rear HVAC	√	√	√	√		
2007	GMC truck	Sierra Classic	HVAC Control Module	√	√	√	√	√	
2007	GMC truck	Sierra Classic	Passenger door module	√	√	√	√	√	0159
2007	GMC truck	Sierra Classic	Navigation radio	√	√	√	√	√	0525
2007	GMC truck	Sierra Classic	ABS	√	√	√	√	√	
2007	GMC truck	Sierra Classic	EHPS (parallel hybrid)	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali - 2WD	Transmission control module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Sierra Denali - 2WD	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Radio	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Digital radio receiver	√	√	√	√		
2007	GMC truck	Sierra Denali - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Sierra Denali - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra Denali - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Sierra Denali - 2WD	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Sierra Denali - 2WD	Park assist module	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Rear heated seat module	√	√	√	√		
2007	GMC truck	Sierra Denali - 2WD	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Sierra Denali - 2WD	Body Control Module	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Sierra Denali - 2WD	Personal audio link module	√	√	√			0528
2007	GMC truck	Sierra Denali - 2WD	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Sierra Denali - 2WD	Driver door switch	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra Denali - 2WD	Electronic suspension control	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Trailer brake control module	√	√	√	√		
2007	GMC truck	Sierra Denali - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Sierra Denali - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali - 2WD	Engine Control Module	√	√	√	√	√	0493



2007	GMC truck	Sierra Denali - 2WD	Transmission control module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali - 2WD	Fuel Pump Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Sierra Denali - 2WD	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Radio	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Digital radio receiver	√	√	√	√		
2007	GMC truck	Sierra Denali - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Sierra Denali - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra Denali - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Sierra Denali - 2WD	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Sierra Denali - 2WD	Park assist module	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Rear heated seat module	√	√	√	√		
2007	GMC truck	Sierra Denali - 2WD	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Sierra Denali - 2WD	Body Control Module	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Sierra Denali - 2WD	Personal audio link module	√	√	√			0528
2007	GMC truck	Sierra Denali - 2WD	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Sierra Denali - 2WD	Driver door switch	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra Denali - 2WD	Electronic suspension control	√	√	√	√	√	
2007	GMC truck	Sierra Denali - 2WD	Trailer brake control module	√	√	√	√		
2007	GMC truck	Sierra Denali - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Sierra Denali - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali Classic	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali Classic	Transmission control module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali Classic	Fuel Pump Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali Classic	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Sierra Denali Classic	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Radio	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Digital radio receiver	√	√	√	√		
2007	GMC truck	Sierra Denali Classic	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Sierra Denali Classic	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra Denali Classic	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Sierra Denali Classic	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Sierra Denali Classic	Park assist module	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Memory seat module	√	√	√	√	√	

2007	GMC truck	Sierra Denali Classic	Rear heated seat module	√	√	√	√		
2007	GMC truck	Sierra Denali Classic	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Sierra Denali Classic	Body Control Module	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Sierra Denali Classic	Personal audio link module	√	√	√			0528
2007	GMC truck	Sierra Denali Classic	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Sierra Denali Classic	Driver door switch	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra Denali Classic	Electronic suension control	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Trailer brake control module	√	√	√	√		
2007	GMC truck	Sierra Denali Classic	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Sierra Denali Classic	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali Classic	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali Classic	Transmission control module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali Classic	Fuel Pump Control Module	√	√	√	√	√	0493
2007	GMC truck	Sierra Denali Classic	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Sierra Denali Classic	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Radio	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Digital radio receiver	√	√	√	√		
2007	GMC truck	Sierra Denali Classic	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Sierra Denali Classic	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra Denali Classic	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Sierra Denali Classic	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Sierra Denali Classic	Park assist module	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Memory seat module	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Rear heated seat module	√	√	√	√		
2007	GMC truck	Sierra Denali Classic	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Sierra Denali Classic	Body Control Module	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Sierra Denali Classic	Personal audio link module	√	√	√			0528
2007	GMC truck	Sierra Denali Classic	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Sierra Denali Classic	Driver door switch	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Sierra Denali Classic	Electronic suension control	√	√	√	√	√	
2007	GMC truck	Sierra Denali Classic	Trailer brake control module	√	√	√	√		
2007	GMC truck	Sierra Denali Classic	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Sierra Denali Classic	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon - 2WD	Transmission control module		√	√	√	√	
2007	GMC truck	Yukon - 2WD	Engine Control Module	√	√	√	√	√	0493

2007	GMC truck	Yukon - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Yukon - 2WD	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Digital radio receiver	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Theft Deterrent Module	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Yukon - 2WD	Passenger presence system	√	√	√	√	√	0512
2007	GMC truck	Yukon - 2WD	Park assist module	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Rear heated seat module	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Yukon - 2WD	Rollover sensor	√	√	√	√	√	0541
2007	GMC truck	Yukon - 2WD	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon - 2WD	Radio	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Personal audio link module	√	√	√	√	√	0528
2007	GMC truck	Yukon - 2WD	Liftgate module	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Driver door switch	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon - 2WD	Electronic suspension control	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Trailer brake control module	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Yukon - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon - 2WD	Transmission control module		√	√	√	√	
2007	GMC truck	Yukon - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Yukon - 2WD	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Digital radio receiver	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Theft Deterrent Module	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Yukon - 2WD	Passenger presence system	√	√	√	√	√	0512
2007	GMC truck	Yukon - 2WD	Park assist module	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Rear heated seat module	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Body Control Module	√	√	√	√	√	0497

2007	GMC truck	Yukon - 2WD	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Yukon - 2WD	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon - 2WD	Radio	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Personal audio link module	√	√	√			0528
2007	GMC truck	Yukon - 2WD	Liftgate module	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Driver door switch	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon - 2WD	Electronic suension control	√	√	√	√	√	
2007	GMC truck	Yukon - 2WD	Trailer brake control module	√	√	√	√		
2007	GMC truck	Yukon - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Yukon - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon - 4WD	Transmission control module		√	√	√	√	
2007	GMC truck	Yukon - 4WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Yukon - 4WD	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Digital radio receiver	√	√	√	√		
2007	GMC truck	Yukon - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Yukon - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Yukon - 4WD	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Yukon - 4WD	Park assist module	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Rear heated seat module	√	√	√	√		
2007	GMC truck	Yukon - 4WD	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Yukon - 4WD	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Yukon - 4WD	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon - 4WD	Radio	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Personal audio link module	√	√	√			0528
2007	GMC truck	Yukon - 4WD	Liftgate module	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Driver door switch	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon - 4WD	Electronic suension control	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Trailer brake control module	√	√	√	√		
2007	GMC truck	Yukon - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Yukon - 4WD	Transfer Case Control Module	√	√	√	√	√	0493

2007	GMC truck	Yukon - 4WD	Transmission control module		√	√	√	√	
2007	GMC truck	Yukon - 4WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Yukon - 4WD	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Digital radio receiver	√	√	√	√		
2007	GMC truck	Yukon - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Yukon - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Yukon - 4WD	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Yukon - 4WD	Park assist module	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Rear heated seat module	√	√	√	√		
2007	GMC truck	Yukon - 4WD	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Yukon - 4WD	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Yukon - 4WD	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon - 4WD	Radio	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Personal audio link module	√	√	√			0528
2007	GMC truck	Yukon - 4WD	Liftgate module	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Driver door switch	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon - 4WD	Electronic suspension control	√	√	√	√	√	
2007	GMC truck	Yukon - 4WD	Trailer brake control module	√	√	√	√		
2007	GMC truck	Yukon - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Yukon - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon Denali	Transmission control module		√	√	√	√	
2007	GMC truck	Yukon Denali	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon Denali	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Yukon Denali	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Digital radio receiver	√	√	√	√		
2007	GMC truck	Yukon Denali	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Yukon Denali	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon Denali	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Yukon Denali	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Yukon Denali	Park assist module	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Memory seat module	√	√	√	√	√	

2007	GMC truck	Yukon Denali	Rear heated seat module	√	√	√	√		
2007	GMC truck	Yukon Denali	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Yukon Denali	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Yukon Denali	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon Denali	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon Denali	Radio	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Personal audio link module	√	√	√			0528
2007	GMC truck	Yukon Denali	Liftgate module	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Driver door switch	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon Denali	Electronic suension control	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Trailer brake control module	√	√	√	√		
2007	GMC truck	Yukon Denali	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Yukon Denali	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon Denali	Transmission control module	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon Denali	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Yukon Denali	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Digital radio receiver	√	√	√	√		
2007	GMC truck	Yukon Denali	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Yukon Denali	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon Denali	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Yukon Denali	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Yukon Denali	Park assist module	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Memory seat module	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Rear heated seat module	√	√	√	√		
2007	GMC truck	Yukon Denali	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Yukon Denali	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Yukon Denali	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon Denali	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon Denali	Radio	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Personal audio link module	√	√	√			0528
2007	GMC truck	Yukon Denali	Liftgate module	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Driver door switch	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon Denali	Electronic suension control	√	√	√	√	√	
2007	GMC truck	Yukon Denali	Trailer brake control module	√	√	√	√		

2007	GMC truck	Yukon Denali	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Yukon Denali	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 2WD	Transmission control module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Yukon XL - 2WD	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Digital radio receiver	√	√	√	√		
2007	GMC truck	Yukon XL - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Yukon XL - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon XL - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Yukon XL - 2WD	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Yukon XL - 2WD	Park assist module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Rear heated seat module	√	√	√	√		
2007	GMC truck	Yukon XL - 2WD	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Yukon XL - 2WD	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Yukon XL - 2WD	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon XL - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon XL - 2WD	Radio	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Personal audio link module	√	√	√			0528
2007	GMC truck	Yukon XL - 2WD	Liftgate module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Driver door switch	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon XL - 2WD	Electronic suspension control	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Trailer brake control module	√	√	√	√		
2007	GMC truck	Yukon XL - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Yukon XL - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 2WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 2WD	Transmission control module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 2WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Yukon XL - 2WD	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Digital radio receiver	√	√	√	√		
2007	GMC truck	Yukon XL - 2WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Yukon XL - 2WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon XL - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Yukon XL - 2WD	Passenger presence system	√	√	√	√		0512



2007	GMC truck	Yukon XL - 2WD	Park assist module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Rear heated seat module	√	√	√	√		
2007	GMC truck	Yukon XL - 2WD	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Yukon XL - 2WD	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Yukon XL - 2WD	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon XL - 2WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon XL - 2WD	Radio	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Personal audio link module	√	√	√			0528
2007	GMC truck	Yukon XL - 2WD	Liftgate module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Driver door switch	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon XL - 2WD	Electronic suspension control	√	√	√	√	√	
2007	GMC truck	Yukon XL - 2WD	Trailer brake control module	√	√	√	√		
2007	GMC truck	Yukon XL - 2WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Yukon XL - 2WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 4WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 4WD	Transmission control module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Yukon XL - 4WD	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Digital radio receiver	√	√	√	√		
2007	GMC truck	Yukon XL - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Yukon XL - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon XL - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Yukon XL - 4WD	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Yukon XL - 4WD	Park assist module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Rear heated seat module	√	√	√	√		
2007	GMC truck	Yukon XL - 4WD	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Yukon XL - 4WD	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Yukon XL - 4WD	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon XL - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon XL - 4WD	Radio	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Personal audio link module	√	√	√			0528
2007	GMC truck	Yukon XL - 4WD	Liftgate module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Driver door switch	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Passenger door switch	√	√	√	√	√	0513 0159



2007	GMC truck	Yukon XL - 4WD	Electronic suspension control	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Trailer brake control module	√	√	√	√		
2007	GMC truck	Yukon XL - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Yukon XL - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 4WD	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 4WD	Transmission control module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL - 4WD	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Yukon XL - 4WD	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Digital radio receiver	√	√	√	√		
2007	GMC truck	Yukon XL - 4WD	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Yukon XL - 4WD	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon XL - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Yukon XL - 4WD	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Yukon XL - 4WD	Park assist module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Memory seat module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Rear heated seat module	√	√	√	√		
2007	GMC truck	Yukon XL - 4WD	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Yukon XL - 4WD	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Yukon XL - 4WD	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon XL - 4WD	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon XL - 4WD	Radio	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Personal audio link module	√	√	√			0528
2007	GMC truck	Yukon XL - 4WD	Liftgate module	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Driver door switch	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon XL - 4WD	Electronic suspension control	√	√	√	√	√	
2007	GMC truck	Yukon XL - 4WD	Trailer brake control module	√	√	√	√		
2007	GMC truck	Yukon XL - 4WD	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Yukon XL - 4WD	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL Denali	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL Denali	Transmission control module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL Denali	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Yukon XL Denali	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Digital radio receiver	√	√	√	√		
2007	GMC truck	Yukon XL Denali	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Yukon XL Denali	Remote control door lock receiver	√	√	√	√	√	0513 0159

2007	GMC truck	Yukon XL Denali	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Yukon XL Denali	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Yukon XL Denali	Park assist module	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Memory seat module	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Rear heated seat module	√	√	√	√		
2007	GMC truck	Yukon XL Denali	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Yukon XL Denali	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Yukon XL Denali	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon XL Denali	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon XL Denali	Radio	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Personal audio link module	√	√	√			0528
2007	GMC truck	Yukon XL Denali	Liftgate module	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Driver door switch	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon XL Denali	Electronic suspension control	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Trailer brake control module	√	√	√	√		
2007	GMC truck	Yukon XL Denali	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Yukon XL Denali	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL Denali	Engine Control Module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL Denali	Transmission control module	√	√	√	√	√	0493
2007	GMC truck	Yukon XL Denali	HVAC Control Module	√	√	√	√	√	0500 0526
2007	GMC truck	Yukon XL Denali	Amplifier (bose)	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Digital radio receiver	√	√	√	√		
2007	GMC truck	Yukon XL Denali	Rear HVAC/RSA	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Instrument panel cluster	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Theft Deterrent Module	√	√	√	√		
2007	GMC truck	Yukon XL Denali	Remote control door lock receiver	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon XL Denali	Supplemental inflatable restraint	√	√	√	√	√	0497
2007	GMC truck	Yukon XL Denali	Passenger presence system	√	√	√	√		0512
2007	GMC truck	Yukon XL Denali	Park assist module	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Memory seat module	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Rear heated seat module	√	√	√	√		
2007	GMC truck	Yukon XL Denali	Body Control Module	√	√	√	√	√	0497
2007	GMC truck	Yukon XL Denali	Rollover sensor	√	√	√	√		0541
2007	GMC truck	Yukon XL Denali	Body Control Module	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Assist step controller	√	√	√	√	√	0531
2007	GMC truck	Yukon XL Denali	Vehicle comm. interface module	√	√	√	√	√	0494 0591 0565 0495
2007	GMC truck	Yukon XL Denali	Radio	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Personal audio link module	√	√	√			0528
2007	GMC truck	Yukon XL Denali	Liftgate module	√	√	√	√	√	

2007	GMC truck	Yukon XL Denali	Driver door switch	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Passenger door switch	√	√	√	√	√	0513 0159
2007	GMC truck	Yukon XL Denali	Electronic suension control	√	√	√	√	√	
2007	GMC truck	Yukon XL Denali	Trailer brake control module	√	√	√	√		
2007	GMC truck	Yukon XL Denali	Electronic Brake Control Module	√	√	√	√	√	0506
2007	GMC truck	Yukon XL Denali	Transfer Case Control Module	√	√	√	√	√	0493
2007	GMC truck	Others	Passenger presence system		√	√			0512
2007	GMC truck	Others	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	GMC truck	Canyon Pickup - 2WD	Powertrain	√	√	√	√	√	
2006	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2006	GMC truck	Canyon Pickup - 2WD	Passenger presence system		√	√			0512
2006	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550
2006	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2006	GMC truck	Canyon Pickup - 2WD	ABS	√	√	√	√	√	0516
2006	GMC truck	Canyon Pickup - 2WD	Powertrain	√	√	√	√	√	
2006	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2006	GMC truck	Canyon Pickup - 2WD	Passenger presence system		√	√			0512
2006	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550
2006	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2006	GMC truck	Canyon Pickup - 2WD	ABS	√	√	√	√	√	0516
2006	GMC truck	Canyon Pickup - 4WD	Powertrain	√	√	√	√	√	
2006	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2006	GMC truck	Canyon Pickup - 4WD	Passenger presence system		√	√			0512
2006	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550
2006	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2006	GMC truck	Canyon Pickup - 4WD	ABS	√	√	√	√	√	0516
2006	GMC truck	Canyon Pickup - 4WD	Powertrain	√	√	√	√	√	
2006	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2006	GMC truck	Canyon Pickup - 4WD	Passenger presence system		√	√			0512
2006	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585

2006	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550
2006	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2006	GMC truck	Canyon Pickup - 4WD	ABS	√	√	√	√	√	0516
2006	GMC truck	Envoy	Powertrain	√	√	√	√	√	0493
2006	GMC truck	Envoy	Disc player and video dilay	√	√	√			
2006	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Envoy	Radio	√	√	√	√		
2006	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2006	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2006	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2006	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2006	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Envoy	Lift gate module	√	√	√	√	√	
2006	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2006	GMC truck	Envoy	Passenger presence system		√	√			0512
2006	GMC truck	Envoy	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Envoy	ABS/TCS/VSES	√	√	√	√	√	
2006	GMC truck	Envoy	Powertrain	√	√	√	√	√	0493
2006	GMC truck	Envoy	Disc player and video dilay	√	√	√			
2006	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Envoy	Radio	√	√	√	√		
2006	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2006	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2006	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2006	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2006	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Envoy	Lift gate module	√	√	√	√	√	
2006	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2006	GMC truck	Envoy	Rear HVAC/RSA	√	√	√	√	√	
2006	GMC truck	Envoy	Passenger presence system		√	√			0512
2006	GMC truck	Envoy	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	GMC truck	Envoy	Rear HVAC	√	√	√	√	√	0512
2006	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Envoy	ABS/TCS/VSES	√	√	√	√	√	
2006	GMC truck	Envoy	Powertrain	√	√	√	√	√	0493
2006	GMC truck	Envoy	Disc player and video dilay	√	√	√			

2006	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Envoy	Radio	√	√	√	√		
2006	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2006	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2006	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2006	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2006	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Envoy	Lift gate module	√	√	√	√	√	
2006	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2006	GMC truck	Envoy	Passenger presence system		√	√			0512
2006	GMC truck	Envoy	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Envoy	ABS/TCS/VSES	√	√	√	√	√	
2006	GMC truck	Envoy	Powertrain	√	√	√	√	√	0493
2006	GMC truck	Envoy	Disc player and video dilay	√	√	√			
2006	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Envoy	Radio	√	√	√	√		
2006	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2006	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2006	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2006	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2006	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Envoy	Lift gate module	√	√	√	√	√	
2006	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2006	GMC truck	Envoy	Rear HVAC/RSA	√	√	√	√	√	
2006	GMC truck	Envoy	Passenger presence system		√	√			0512
2006	GMC truck	Envoy	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	GMC truck	Envoy	Rear HVAC	√	√	√	√	√	0512
2006	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Envoy	ABS/TCS/VSES	√	√	√	√	√	
2006	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	0493
2006	GMC truck	Envoy XL	Disc player and video dilay	√	√	√			
2006	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Envoy XL	Radio	√	√	√	√		
2006	GMC truck	Envoy XL	Rear seat audio	√	√	√	√		
2006	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2006	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	

2006	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Passenger presence system		√	√			0512
2006	GMC truck	Envoy XL	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Envoy XL	ABS/TCS/VSES	√	√	√	√	√	
2006	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	0493
2006	GMC truck	Envoy XL	Disc player and video dilay	√	√	√			
2006	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Envoy XL	Radio	√	√	√	√		
2006	GMC truck	Envoy XL	Rear seat audio	√	√	√	√		
2006	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2006	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Rear HVAC/RSA	√	√	√	√	√	
2006	GMC truck	Envoy XL	Passenger presence system		√	√			0512
2006	GMC truck	Envoy XL	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	GMC truck	Envoy XL	Rear HVAC	√	√	√	√	√	0512
2006	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Envoy XL	ABS/TCS/VSES	√	√	√	√	√	
2006	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	0493
2006	GMC truck	Envoy XL	Disc player and video dilay	√	√	√			
2006	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Envoy XL	Radio	√	√	√	√		
2006	GMC truck	Envoy XL	Rear seat audio	√	√	√	√		
2006	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2006	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	

2006	GMC truck	Envoy XL	Passenger presence system		√	√			0512
2006	GMC truck	Envoy XL	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Envoy XL	ABS/TCS/VSES	√	√	√	√	√	
2006	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	0493
2006	GMC truck	Envoy XL	Disc player and video dilay	√	√	√			
2006	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Envoy XL	Radio	√	√	√	√		
2006	GMC truck	Envoy XL	Rear seat audio	√	√	√	√		
2006	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2006	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	
2006	GMC truck	Envoy XL	Rear HVAC/RSA	√	√	√	√	√	
2006	GMC truck	Envoy XL	Passenger presence system		√	√			0512
2006	GMC truck	Envoy XL	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√	√	0516
2006	GMC truck	Envoy XL	Rear HVAC	√	√	√	√	√	0512
2006	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Envoy XL	ABS/TCS/VSES	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD	Powertrain	√	√	√	√	√	0638
2006	GMC truck	GMC C-Series - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2006	GMC truck	GMC C-Series - 2WD	CD changer	√	√	√			
2006	GMC truck	GMC C-Series - 2WD	Chime	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD	Disc player and video dilay	√	√	√			
2006	GMC truck	GMC C-Series - 2WD	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	GMC C-Series - 2WD	Radio	√	√	√	√		
2006	GMC truck	GMC C-Series - 2WD	Rear seat audio	√	√	√	√		
2006	GMC truck	GMC C-Series - 2WD	Driver door module	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD	Passenger door module	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD	Rear HVAC	√	√	√	√		
2006	GMC truck	GMC C-Series - 2WD	Generator battery control module	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD	Driver seat module	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD	Rear aux. climate module	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD	Body Control Module	√	√	√	√	√	



2006	GMC truck	GMC C-Series - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	GMC truck	GMC C-Series - 2WD	Passenger presence system		√	√			0512
2006	GMC truck	GMC C-Series - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	GMC C-Series - 2WD	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	GMC C-Series - 2WD	Traction assist (if equipped)		√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD	ABS	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2006	GMC truck	GMC C-Series - 2WD	Tire pressure monitor	√	√	√	√	√	0159
2006	GMC truck	GMC C-Series - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	GMC truck	GMC C-Series - 2WD (CNG)	Powertrain	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD (CNG)	Amplifier (bose)	√	√	√	√	√	0631
2006	GMC truck	GMC C-Series - 2WD (CNG)	CD changer	√	√	√			
2006	GMC truck	GMC C-Series - 2WD (CNG)	Chime	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD (CNG)	Disc player and video dilay	√	√	√			
2006	GMC truck	GMC C-Series - 2WD (CNG)	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	GMC C-Series - 2WD (CNG)	Radio	√	√	√	√		
2006	GMC truck	GMC C-Series - 2WD (CNG)	Rear seat audio	√	√	√	√		
2006	GMC truck	GMC C-Series - 2WD (CNG)	Driver door module	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD (CNG)	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD (CNG)	Passenger door module	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD (CNG)	Rear HVAC	√	√	√	√		
2006	GMC truck	GMC C-Series - 2WD (CNG)	Generator battery control module	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD (CNG)	Driver seat module	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD (CNG)	Rear aux. climate module	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD (CNG)	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD (CNG)	Body Control Module	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD (CNG)	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	GMC truck	GMC C-Series - 2WD (CNG)	Passenger presence system		√	√			0512
2006	GMC truck	GMC C-Series - 2WD (CNG)	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	GMC C-Series - 2WD (CNG)	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	GMC C-Series - 2WD (CNG)	Traction assist (if equipped)		√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD (CNG)	ABS	√	√	√	√	√	
2006	GMC truck	GMC C-Series - 2WD (CNG)	ESC (if equipped)	√	√	√	√	√	0648
2006	GMC truck	GMC C-Series - 2WD (CNG)	Tire pressure monitor	√	√	√	√	√	0159
2006	GMC truck	GMC C-Series - 2WD (CNG)	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	GMC truck	GMC K Sierra - 4WD	Powertrain	√	√	√	√	√	0638
2006	GMC truck	GMC K Sierra - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2006	GMC truck	GMC K Sierra - 4WD	CD changer	√	√	√			
2006	GMC truck	GMC K Sierra - 4WD	Chime	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD	Disc player and video dilay	√	√	√			
2006	GMC truck	GMC K Sierra - 4WD	Digital radio receiver	√	√	√	√		0516



2006	GMC truck	GMC K Sierra - 4WD	Radio	√	√	√	√		
2006	GMC truck	GMC K Sierra - 4WD	Rear seat audio	√	√	√	√		
2006	GMC truck	GMC K Sierra - 4WD	Driver door module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD	Passenger door module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD	Rear HVAC	√	√	√	√		
2006	GMC truck	GMC K Sierra - 4WD	Generator battery control module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD	Driver seat module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD	Rear aux. climate module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD	Body Control Module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	GMC truck	GMC K Sierra - 4WD	Passenger presence system		√	√			0512
2006	GMC truck	GMC K Sierra - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	GMC K Sierra - 4WD	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	GMC K Sierra - 4WD	Traction assist (if equipped)		√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD	ABS	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2006	GMC truck	GMC K Sierra - 4WD	Tire pressure monitor	√	√	√	√	√	0159
2006	GMC truck	GMC K Sierra - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Powertrain	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Amplifier (bose)	√	√	√	√	√	0631
2006	GMC truck	GMC K Sierra - 4WD (CNG)	CD changer	√	√	√			
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Chime	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Disc player and video dilay	√	√	√			
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Radio	√	√	√	√		
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Rear seat audio	√	√	√	√		
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Driver door module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Passenger door module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Rear HVAC	√	√	√	√		
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Generator battery control module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Driver seat module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Rear aux. climate module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Body Control Module	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Passenger presence system		√	√			0512
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Navigation radio	√	√	√	√	√	0525

2006	GMC truck	GMC K Sierra - 4WD (CNG)	Traction assist (if equipped)		√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD (CNG)	ABS	√	√	√	√	√	
2006	GMC truck	GMC K Sierra - 4WD (CNG)	ESC (if equipped)	√	√	√	√	√	0648
2006	GMC truck	GMC K Sierra - 4WD (CNG)	Tire pressure monitor	√	√	√	√	√	0159
2006	GMC truck	GMC K Sierra - 4WD (CNG)	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	GMC truck	GMC Sierra Denali	Powertrain	√	√	√	√	√	0638
2006	GMC truck	GMC Sierra Denali	Amplifier (bose)	√	√	√	√	√	0631
2006	GMC truck	GMC Sierra Denali	CD changer	√	√	√			
2006	GMC truck	GMC Sierra Denali	Chime	√	√	√	√	√	
2006	GMC truck	GMC Sierra Denali	Disc player and video dilay	√	√	√			
2006	GMC truck	GMC Sierra Denali	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	GMC Sierra Denali	Radio	√	√	√	√		
2006	GMC truck	GMC Sierra Denali	Rear seat audio	√	√	√	√		
2006	GMC truck	GMC Sierra Denali	Driver door module	√	√	√	√	√	
2006	GMC truck	GMC Sierra Denali	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	GMC Sierra Denali	Passenger door module	√	√	√	√	√	
2006	GMC truck	GMC Sierra Denali	Rear HVAC	√	√	√	√		
2006	GMC truck	GMC Sierra Denali	Generator battery control module	√	√	√	√	√	
2006	GMC truck	GMC Sierra Denali	Driver seat module	√	√	√	√	√	
2006	GMC truck	GMC Sierra Denali	Rear aux. climate module	√	√	√	√	√	
2006	GMC truck	GMC Sierra Denali	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	GMC Sierra Denali	Body Control Module	√	√	√	√	√	
2006	GMC truck	GMC Sierra Denali	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	GMC truck	GMC Sierra Denali	Passenger presence system		√	√			0512
2006	GMC truck	GMC Sierra Denali	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	GMC Sierra Denali	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	GMC Sierra Denali	Traction assist (if equipped)		√	√	√	√	
2006	GMC truck	GMC Sierra Denali	ABS	√	√	√	√	√	
2006	GMC truck	GMC Sierra Denali	ESC (if equipped)	√	√	√	√	√	0648
2006	GMC truck	GMC Sierra Denali	Tire pressure monitor	√	√	√	√	√	0159
2006	GMC truck	GMC Sierra Denali	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	GMC truck	Savana	Powertrain	√	√	√	√	√	0638
2006	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2006	GMC truck	Savana	Radio	√	√	√	√		
2006	GMC truck	Savana	Passenger presence system		√	√			
2006	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0531
2006	GMC truck	Savana	Remote function actuation	√	√	√	√	√	
2006	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Savana	Body Control Module	√	√	√	√	√	
2006	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Savana	ABS	√	√	√	√	√	

2006	GMC truck	Savana	Powertrain	√	√	√	√	√	0638
2006	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2006	GMC truck	Savana	Radio	√	√	√	√		
2006	GMC truck	Savana	Passenger presence system		√	√			
2006	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0531
2006	GMC truck	Savana	Remote function actuation	√	√	√	√	√	
2006	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Savana	Body Control Module	√	√	√	√	√	
2006	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Savana	ABS	√	√	√	√	√	
2006	GMC truck	Savana	Powertrain	√	√	√	√	√	
2006	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2006	GMC truck	Savana	Radio	√	√	√	√		
2006	GMC truck	Savana	Passenger presence system		√	√			
2006	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0531
2006	GMC truck	Savana	Remote function actuation	√	√	√	√	√	
2006	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Savana	Body Control Module	√	√	√	√	√	
2006	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Savana	ABS	√	√	√	√	√	
2006	GMC truck	Savana	Powertrain	√	√	√	√	√	
2006	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2006	GMC truck	Savana	Radio	√	√	√	√		
2006	GMC truck	Savana	Passenger presence system		√	√			
2006	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0531
2006	GMC truck	Savana	Remote function actuation	√	√	√	√	√	
2006	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Savana	Body Control Module	√	√	√	√	√	
2006	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Savana	ABS	√	√	√	√	√	
2006	GMC truck	Yukon - 2WD	Powertrain	√	√	√	√	√	
2006	GMC truck	Yukon - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2006	GMC truck	Yukon - 2WD	CD changer	√	√	√			
2006	GMC truck	Yukon - 2WD	Chime	√	√	√	√	√	
2006	GMC truck	Yukon - 2WD	Disc player and video dilay	√	√	√			
2006	GMC truck	Yukon - 2WD	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Yukon - 2WD	Radio	√	√	√	√		
2006	GMC truck	Yukon - 2WD	Rear seat audio	√	√	√	√		
2006	GMC truck	Yukon - 2WD	Driver door module	√	√	√	√	√	
2006	GMC truck	Yukon - 2WD	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Yukon - 2WD	Passenger door module	√	√	√	√	√	

2006	GMC truck	Yukon - 2WD	Rear HVAC	√	√	√	√		
2006	GMC truck	Yukon - 2WD	Generator battery control module	√	√	√	√	√	
2006	GMC truck	Yukon - 2WD	Driver seat module	√	√	√	√	√	
2006	GMC truck	Yukon - 2WD	Rear aux. climate module	√	√	√	√	√	
2006	GMC truck	Yukon - 2WD	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Yukon - 2WD	Body Control Module	√	√	√	√	√	
2006	GMC truck	Yukon - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	GMC truck	Yukon - 2WD	Passenger presence system		√	√			0512
2006	GMC truck	Yukon - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Yukon - 2WD	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Yukon - 2WD	Traction assist (if equipped)		√	√	√	√	
2006	GMC truck	Yukon - 2WD	ABS	√	√	√	√	√	
2006	GMC truck	Yukon - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2006	GMC truck	Yukon - 2WD	Tire pressure monitor	√	√	√	√	√	0159
2006	GMC truck	Yukon - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	GMC truck	Yukon - 4WD	Powertrain	√	√	√	√	√	
2006	GMC truck	Yukon - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2006	GMC truck	Yukon - 4WD	CD changer	√	√	√			
2006	GMC truck	Yukon - 4WD	Chime	√	√	√	√	√	
2006	GMC truck	Yukon - 4WD	Disc player and video dilay	√	√	√			
2006	GMC truck	Yukon - 4WD	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Yukon - 4WD	Radio	√	√	√	√		
2006	GMC truck	Yukon - 4WD	Rear seat audio	√	√	√	√		
2006	GMC truck	Yukon - 4WD	Driver door module	√	√	√	√	√	
2006	GMC truck	Yukon - 4WD	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Yukon - 4WD	Passenger door module	√	√	√	√	√	
2006	GMC truck	Yukon - 4WD	Rear HVAC	√	√	√	√		
2006	GMC truck	Yukon - 4WD	Generator battery control module	√	√	√	√	√	
2006	GMC truck	Yukon - 4WD	Driver seat module	√	√	√	√	√	
2006	GMC truck	Yukon - 4WD	Rear aux. climate module	√	√	√	√	√	
2006	GMC truck	Yukon - 4WD	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Yukon - 4WD	Body Control Module	√	√	√	√	√	
2006	GMC truck	Yukon - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	GMC truck	Yukon - 4WD	Passenger presence system		√	√			0512
2006	GMC truck	Yukon - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Yukon - 4WD	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Yukon - 4WD	Traction assist (if equipped)		√	√	√	√	
2006	GMC truck	Yukon - 4WD	ABS	√	√	√	√	√	
2006	GMC truck	Yukon - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2006	GMC truck	Yukon - 4WD	Tire pressure monitor	√	√	√	√	√	0159
2006	GMC truck	Yukon - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648

2006	GMC truck	Yukon Denali	Powertrain	√	√	√	√	√	
2006	GMC truck	Yukon Denali	Amplifier (bose)	√	√	√	√	√	0631
2006	GMC truck	Yukon Denali	CD changer	√	√	√			
2006	GMC truck	Yukon Denali	Chime	√	√	√	√	√	
2006	GMC truck	Yukon Denali	Disc player and video dilay	√	√	√			
2006	GMC truck	Yukon Denali	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Yukon Denali	Radio	√	√	√	√		
2006	GMC truck	Yukon Denali	Rear seat audio	√	√	√	√		
2006	GMC truck	Yukon Denali	Driver door module	√	√	√	√	√	
2006	GMC truck	Yukon Denali	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Yukon Denali	Passenger door module	√	√	√	√	√	
2006	GMC truck	Yukon Denali	Rear HVAC	√	√	√	√		
2006	GMC truck	Yukon Denali	Generator battery control module	√	√	√	√	√	
2006	GMC truck	Yukon Denali	Driver seat module	√	√	√	√	√	
2006	GMC truck	Yukon Denali	Rear aux. climate module	√	√	√	√	√	
2006	GMC truck	Yukon Denali	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Yukon Denali	Body Control Module	√	√	√	√	√	
2006	GMC truck	Yukon Denali	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	GMC truck	Yukon Denali	Passenger presence system		√	√			0512
2006	GMC truck	Yukon Denali	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Yukon Denali	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Yukon Denali	Traction assist (if equipped)		√	√	√	√	
2006	GMC truck	Yukon Denali	ABS	√	√	√	√	√	
2006	GMC truck	Yukon Denali	ESC (if equipped)	√	√	√	√	√	0648
2006	GMC truck	Yukon Denali	Tire pressure monitor	√	√	√	√	√	0159
2006	GMC truck	Yukon Denali	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	GMC truck	Yukon XL - 2WD	Powertrain	√	√	√	√	√	
2006	GMC truck	Yukon XL - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2006	GMC truck	Yukon XL - 2WD	CD changer	√	√	√			
2006	GMC truck	Yukon XL - 2WD	Chime	√	√	√	√	√	
2006	GMC truck	Yukon XL - 2WD	Disc player and video dilay	√	√	√			
2006	GMC truck	Yukon XL - 2WD	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Yukon XL - 2WD	Radio	√	√	√	√		
2006	GMC truck	Yukon XL - 2WD	Rear seat audio	√	√	√	√		
2006	GMC truck	Yukon XL - 2WD	Driver door module	√	√	√	√	√	
2006	GMC truck	Yukon XL - 2WD	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Yukon XL - 2WD	Passenger door module	√	√	√	√	√	
2006	GMC truck	Yukon XL - 2WD	Rear HVAC	√	√	√	√		
2006	GMC truck	Yukon XL - 2WD	Generator battery control module	√	√	√	√	√	
2006	GMC truck	Yukon XL - 2WD	Driver seat module	√	√	√	√	√	
2006	GMC truck	Yukon XL - 2WD	Rear aux. climate module	√	√	√	√	√	

2006	GMC truck	Yukon XL - 2WD	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Yukon XL - 2WD	Body Control Module	√	√	√	√	√	
2006	GMC truck	Yukon XL - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	GMC truck	Yukon XL - 2WD	Passenger presence system		√	√			0512
2006	GMC truck	Yukon XL - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Yukon XL - 2WD	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Yukon XL - 2WD	Traction assist (if equipped)		√	√	√	√	
2006	GMC truck	Yukon XL - 2WD	ABS	√	√	√	√	√	
2006	GMC truck	Yukon XL - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2006	GMC truck	Yukon XL - 2WD	Tire pressure monitor	√	√	√	√	√	0159
2006	GMC truck	Yukon XL - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	GMC truck	Yukon XL - 4WD	Powertrain	√	√	√	√	√	
2006	GMC truck	Yukon XL - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2006	GMC truck	Yukon XL - 4WD	CD changer	√	√	√			
2006	GMC truck	Yukon XL - 4WD	Chime	√	√	√	√	√	
2006	GMC truck	Yukon XL - 4WD	Disc player and video delay	√	√	√			
2006	GMC truck	Yukon XL - 4WD	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Yukon XL - 4WD	Radio	√	√	√	√		
2006	GMC truck	Yukon XL - 4WD	Rear seat audio	√	√	√	√		
2006	GMC truck	Yukon XL - 4WD	Driver door module	√	√	√	√	√	
2006	GMC truck	Yukon XL - 4WD	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Yukon XL - 4WD	Passenger door module	√	√	√	√	√	
2006	GMC truck	Yukon XL - 4WD	Rear HVAC	√	√	√	√		
2006	GMC truck	Yukon XL - 4WD	Generator battery control module	√	√	√	√	√	
2006	GMC truck	Yukon XL - 4WD	Driver seat module	√	√	√	√	√	
2006	GMC truck	Yukon XL - 4WD	Rear aux. climate module	√	√	√	√	√	
2006	GMC truck	Yukon XL - 4WD	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Yukon XL - 4WD	Body Control Module	√	√	√	√	√	
2006	GMC truck	Yukon XL - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	GMC truck	Yukon XL - 4WD	Passenger presence system		√	√			0512
2006	GMC truck	Yukon XL - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Yukon XL - 4WD	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Yukon XL - 4WD	Traction assist (if equipped)		√	√	√	√	
2006	GMC truck	Yukon XL - 4WD	ABS	√	√	√	√	√	
2006	GMC truck	Yukon XL - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2006	GMC truck	Yukon XL - 4WD	Tire pressure monitor	√	√	√	√	√	0159
2006	GMC truck	Yukon XL - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2006	GMC truck	Yukon XL Denali	Powertrain	√	√	√	√	√	
2006	GMC truck	Yukon XL Denali	Amplifier (bose)	√	√	√	√	√	0631
2006	GMC truck	Yukon XL Denali	CD changer	√	√	√			
2006	GMC truck	Yukon XL Denali	Chime	√	√	√	√	√	

2006	GMC truck	Yukon XL Denali	Disc player and video delay	√	√	√			
2006	GMC truck	Yukon XL Denali	Digital radio receiver	√	√	√	√		0516
2006	GMC truck	Yukon XL Denali	Radio	√	√	√	√		
2006	GMC truck	Yukon XL Denali	Rear seat audio	√	√	√	√		
2006	GMC truck	Yukon XL Denali	Driver door module	√	√	√	√	√	
2006	GMC truck	Yukon XL Denali	Heating and air conditioning	√	√	√	√	√	
2006	GMC truck	Yukon XL Denali	Passenger door module	√	√	√	√	√	
2006	GMC truck	Yukon XL Denali	Rear HVAC	√	√	√	√		
2006	GMC truck	Yukon XL Denali	Generator battery control module	√	√	√	√	√	
2006	GMC truck	Yukon XL Denali	Driver seat module	√	√	√	√	√	
2006	GMC truck	Yukon XL Denali	Rear aux. climate module	√	√	√	√	√	
2006	GMC truck	Yukon XL Denali	Instrument panel cluster	√	√	√	√	√	
2006	GMC truck	Yukon XL Denali	Body Control Module	√	√	√	√	√	
2006	GMC truck	Yukon XL Denali	Supplemental inflatable restraint	√	√	√	√	√	0639
2006	GMC truck	Yukon XL Denali	Passenger presence system		√	√			0512
2006	GMC truck	Yukon XL Denali	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2006	GMC truck	Yukon XL Denali	Navigation radio	√	√	√	√	√	0525
2006	GMC truck	Yukon XL Denali	Traction assist (if equipped)		√	√	√	√	
2006	GMC truck	Yukon XL Denali	ABS	√	√	√	√	√	
2006	GMC truck	Yukon XL Denali	ESC (if equipped)	√	√	√	√	√	0648
2006	GMC truck	Yukon XL Denali	Tire pressure monitor	√	√	√	√	√	0159
2006	GMC truck	Yukon XL Denali	EHPS (parallel hybrid)	√	√	√	√	√	0648
2005	GMC truck	Canyon Pickup - 2WD	Powertrain	√	√	√	√	√	
2005	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2005	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	GMC truck	Canyon Pickup - 2WD	ABS	√	√	√	√	√	0516
2005	GMC truck	Canyon Pickup - 2WD	Powertrain	√	√	√	√	√	
2005	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Canyon Pickup - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2005	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	GMC truck	Canyon Pickup - 2WD	ABS	√	√	√	√	√	0516
2005	GMC truck	Canyon Pickup - 4WD	Powertrain	√	√	√	√	√	
2005	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585



2005	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2005	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	GMC truck	Canyon Pickup - 4WD	ABS	√	√	√	√	√	0516
2005	GMC truck	Canyon Pickup - 4WD	Powertrain	√	√	√	√	√	
2005	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Canyon Pickup - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2005	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2005	GMC truck	Canyon Pickup - 4WD	ABS	√	√	√	√	√	0516
2005	GMC truck	Envoy	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy	Radio	√	√	√	√		
2005	GMC truck	Envoy	Disc player and video delay	√	√	√			
2005	GMC truck	Envoy	Passenger presence system		√	√			0512
2005	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy	Lift gate module	√	√	√	√	√	
2005	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy	ABS	√	√	√	√	√	
2005	GMC truck	Envoy	4WAL 3 sensor		√	√	√	√	
2005	GMC truck	Envoy	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy	Radio	√	√	√	√		
2005	GMC truck	Envoy	Disc player and video delay	√	√	√			
2005	GMC truck	Envoy	Passenger presence system		√	√			0512
2005	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	



2005	GMC truck	Envoy	Lift gate module	√	√	√	√	√	
2005	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy	Rear HVAC/RSA	√	√	√	√	√	
2005	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy	Rear HVAC	√	√	√	√	√	0550
2005	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy	ABS	√	√	√	√	√	
2005	GMC truck	Envoy	4WAL 3 sensor		√	√	√	√	
2005	GMC truck	Envoy	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy	Radio	√	√	√	√		
2005	GMC truck	Envoy	Passenger presence system		√	√			0512
2005	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy	End gate module	√	√	√	√	√	
2005	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy	Power roof module	√	√	√	√	√	
2005	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy	ABS	√	√	√	√	√	
2005	GMC truck	Envoy	4WAL 3 sensor		√	√	√	√	
2005	GMC truck	Envoy	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy	Radio	√	√	√	√		
2005	GMC truck	Envoy	Disc player and video dilay	√	√	√			
2005	GMC truck	Envoy	Passenger presence system		√	√			0512
2005	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy	Lift gate module	√	√	√	√	√	
2005	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy	Rear seat audio	√	√	√	√		

2005	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy	ABS	√	√	√	√	√	
2005	GMC truck	Envoy	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy	Radio	√	√	√	√		
2005	GMC truck	Envoy	Disc player and video delay	√	√	√			
2005	GMC truck	Envoy	Passenger presence system		√	√			0512
2005	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy	Lift gate module	√	√	√	√	√	
2005	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy	Rear HVAC/RSA	√	√	√	√	√	
2005	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy	Rear HVAC	√	√	√	√	√	0550
2005	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy	ABS	√	√	√	√	√	
2005	GMC truck	Envoy	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy	Radio	√	√	√	√		
2005	GMC truck	Envoy	Passenger presence system		√	√			0512
2005	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy	End gate module	√	√	√	√	√	
2005	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy	Power roof module	√	√	√	√	√	
2005	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy	ABS	√	√	√	√	√	
2005	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	0493

2005	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy XL	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy XL	Radio	√	√	√	√		
2005	GMC truck	Envoy XL	Disc player and video dilay	√	√	√			
2005	GMC truck	Envoy XL	Passenger presence system		√	√			0512
2005	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy XL	ABS	√	√	√	√	√	
2005	GMC truck	Envoy XL	4WAL 3 sensor		√	√	√	√	
2005	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy XL	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy XL	Radio	√	√	√	√		
2005	GMC truck	Envoy XL	Disc player and video dilay	√	√	√			
2005	GMC truck	Envoy XL	Passenger presence system		√	√			0512
2005	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Rear HVAC/RSA	√	√	√	√	√	
2005	GMC truck	Envoy XL	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy XL	Rear HVAC	√	√	√	√	√	0550
2005	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy XL	ABS	√	√	√	√	√	
2005	GMC truck	Envoy XL	4WAL 3 sensor		√	√	√	√	
2005	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy XL	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy XL	Radio	√	√	√	√		

2005	GMC truck	Envoy XL	Disc player and video delay	√	√	√			
2005	GMC truck	Envoy XL	Passenger presence system		√	√			0512
2005	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy XL	ABS	√	√	√	√	√	
2005	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy XL	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy XL	Radio	√	√	√	√		
2005	GMC truck	Envoy XL	Disc player and video delay	√	√	√			
2005	GMC truck	Envoy XL	Passenger presence system		√	√			0512
2005	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy XL	Rear HVAC/RSA	√	√	√	√	√	
2005	GMC truck	Envoy XL	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy XL	Rear HVAC	√	√	√	√	√	0550
2005	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy XL	ABS	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy XUV	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy XUV	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy XUV	Radio	√	√	√	√		
2005	GMC truck	Envoy XUV	Disc player and video delay	√	√	√			
2005	GMC truck	Envoy XUV	Passenger presence system		√	√			0512
2005	GMC truck	Envoy XUV	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Driver seat module	√	√	√	√	√	

2005	GMC truck	Envoy XUV	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Lift gate module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy XUV	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy XUV	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy XUV	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy XUV	ABS	√	√	√	√	√	
2005	GMC truck	Envoy XUV	4WAL 3 sensor		√	√	√	√	
2005	GMC truck	Envoy XUV	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy XUV	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy XUV	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy XUV	Radio	√	√	√	√		
2005	GMC truck	Envoy XUV	Passenger presence system		√	√			0512
2005	GMC truck	Envoy XUV	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy XUV	End gate module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Power roof module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy XUV	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy XUV	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy XUV	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy XUV	ABS	√	√	√	√	√	
2005	GMC truck	Envoy XUV	4WAL 3 sensor		√	√	√	√	
2005	GMC truck	Envoy XUV	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy XUV	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy XUV	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy XUV	Radio	√	√	√	√		
2005	GMC truck	Envoy XUV	Disc player and video delay	√	√	√			
2005	GMC truck	Envoy XUV	Passenger presence system		√	√			0512
2005	GMC truck	Envoy XUV	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Lift gate module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy XUV	Body Control Module	√	√	√	√	√	0550

2005	GMC truck	Envoy XUV	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy XUV	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy XUV	ABS	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Powertrain	√	√	√	√	√	0493
2005	GMC truck	Envoy XUV	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Envoy XUV	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Envoy XUV	Radio	√	√	√	√		
2005	GMC truck	Envoy XUV	Passenger presence system		√	√			0512
2005	GMC truck	Envoy XUV	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Envoy XUV	End gate module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Driver door module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Driver seat module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Passenger door module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Power roof module	√	√	√	√	√	
2005	GMC truck	Envoy XUV	Rear seat audio	√	√	√	√		
2005	GMC truck	Envoy XUV	Body Control Module	√	√	√	√	√	0550
2005	GMC truck	Envoy XUV	Supplemental inflatable restraint	√	√	√	√	√	0516
2005	GMC truck	Envoy XUV	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Envoy XUV	ABS	√	√	√	√	√	
2005	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	0638
2005	GMC truck	Jimmy - 2WD	Radio	√	√	√	√		
2005	GMC truck	Jimmy - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2005	GMC truck	Jimmy - 2WD	Instrument panel cluster		√	√	√	√	
2005	GMC truck	Jimmy - 2WD	Body Control Module		√	√	√	√	
2005	GMC truck	Jimmy - 2WD	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Jimmy - 2WD	Memory seat module	√	√	√	√	√	0531
2005	GMC truck	Jimmy - 2WD	Traction assist (if equipped)		√	√	√	√	
2005	GMC truck	Jimmy - 2WD	4WAL 3 sensor	√	√	√	√	√	0638
2005	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	0638
2005	GMC truck	Jimmy - 2WD	Radio	√	√	√	√		
2005	GMC truck	Jimmy - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2005	GMC truck	Jimmy - 2WD	Instrument panel cluster		√	√	√	√	
2005	GMC truck	Jimmy - 2WD	Body Control Module		√	√	√	√	
2005	GMC truck	Jimmy - 2WD	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Jimmy - 2WD	Memory seat module	√	√	√	√	√	0531
2005	GMC truck	Jimmy - 2WD	Traction assist (if equipped)		√	√	√	√	
2005	GMC truck	Jimmy - 2WD	4WAL 3 sensor	√	√	√	√	√	0638
2005	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	0638
2005	GMC truck	Jimmy - 4WD	Radio	√	√	√	√		
2005	GMC truck	Jimmy - 4WD	Supplemental inflatable restraint	√	√	√	√		0531

2005	GMC truck	Jimmy - 4WD	Instrument panel cluster		√	√	√	√	
2005	GMC truck	Jimmy - 4WD	Body Control Module		√	√	√	√	
2005	GMC truck	Jimmy - 4WD	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Jimmy - 4WD	Memory seat module	√	√	√	√	√	0531
2005	GMC truck	Jimmy - 4WD	Traction assist (if equipped)		√	√	√	√	
2005	GMC truck	Jimmy - 4WD	4WAL 3 sensor	√	√	√	√	√	0638
2005	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	0638
2005	GMC truck	Jimmy - 4WD	Radio	√	√	√	√		
2005	GMC truck	Jimmy - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2005	GMC truck	Jimmy - 4WD	Instrument panel cluster		√	√	√	√	
2005	GMC truck	Jimmy - 4WD	Body Control Module		√	√	√	√	
2005	GMC truck	Jimmy - 4WD	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Jimmy - 4WD	Memory seat module	√	√	√	√	√	0531
2005	GMC truck	Jimmy - 4WD	Traction assist (if equipped)		√	√	√	√	
2005	GMC truck	Jimmy - 4WD	4WAL 3 sensor	√	√	√	√	√	0638
2005	GMC truck	Safari - 2WD	Powertrain	√	√	√	√	√	0638
2005	GMC truck	Safari - 2WD	Instrument panel cluster		√	√	√	√	
2005	GMC truck	Safari - 2WD	Body Control Module		√	√	√	√	
2005	GMC truck	Safari - 2WD	Supplemental inflatable restraint	√	√	√	√		
2005	GMC truck	Safari - 2WD	4WAL 3 sensor	√	√	√	√	√	0638
2005	GMC truck	Safari - 4WD	Powertrain	√	√	√	√	√	0638
2005	GMC truck	Safari - 4WD	Instrument panel cluster		√	√	√	√	
2005	GMC truck	Safari - 4WD	Body Control Module		√	√	√	√	
2005	GMC truck	Safari - 4WD	Supplemental inflatable restraint	√	√	√	√		
2005	GMC truck	Safari - 4WD	4WAL 3 sensor	√	√	√	√	√	0638
2005	GMC truck	Savana	Powertrain	√	√	√	√	√	0638
2005	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Savana	Radio	√	√	√	√		
2005	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√		0531
2005	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Savana	Body Control Module	√	√	√	√	√	
2005	GMC truck	Savana	Remote function actuation	√	√	√	√	√	
2005	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	0602
2005	GMC truck	Savana	ABS	√	√	√	√	√	
2005	GMC truck	Savana	Powertrain	√	√	√	√	√	0638
2005	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Savana	Radio	√	√	√	√		
2005	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√		0531
2005	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Savana	Body Control Module	√	√	√	√	√	
2005	GMC truck	Savana	Remote function actuation	√	√	√	√	√	

2005	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	0602
2005	GMC truck	Savana	ABS	√	√	√	√	√	
2005	GMC truck	Savana	Powertrain	√	√	√	√	√	
2005	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Savana	Radio	√	√	√	√		
2005	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√		0531
2005	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Savana	Body Control Module	√	√	√	√	√	
2005	GMC truck	Savana	Remote function actuation	√	√	√	√	√	
2005	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	0602
2005	GMC truck	Savana	ABS	√	√	√	√	√	
2005	GMC truck	Savana	Powertrain	√	√	√	√	√	
2005	GMC truck	Savana	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Savana	Radio	√	√	√	√		
2005	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√		0531
2005	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Savana	Body Control Module	√	√	√	√	√	
2005	GMC truck	Savana	Remote function actuation	√	√	√	√	√	
2005	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	0602
2005	GMC truck	Savana	ABS	√	√	√	√	√	
2005	GMC truck	Sonoma	Powertrain	√	√	√	√	√	0638
2005	GMC truck	Sonoma	Radio	√	√	√	√		
2005	GMC truck	Sonoma	Supplemental inflatable restraint	√	√	√	√		0531
2005	GMC truck	Sonoma	Instrument panel cluster		√	√	√	√	
2005	GMC truck	Sonoma	Body Control Module	√	√	√	√	√	0531
2005	GMC truck	Sonoma	Traction assist (if equipped)		√	√	√	√	
2005	GMC truck	Sonoma	4WAL 3 sensor	√	√	√	√	√	0638
2005	GMC truck	Sonoma	Powertrain	√	√	√	√	√	0638
2005	GMC truck	Sonoma	Radio	√	√	√	√		
2005	GMC truck	Sonoma	Supplemental inflatable restraint	√	√	√	√		0531
2005	GMC truck	Sonoma	Instrument panel cluster		√	√	√	√	
2005	GMC truck	Sonoma	Body Control Module	√	√	√	√	√	0531
2005	GMC truck	Sonoma	Traction assist (if equipped)		√	√	√	√	
2005	GMC truck	Sonoma	4WAL 3 sensor	√	√	√	√	√	0638
2005	GMC truck	Yukon - 2WD	Powertrain	√	√	√	√	√	
2005	GMC truck	Yukon - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2005	GMC truck	Yukon - 2WD	CD changer	√	√	√			
2005	GMC truck	Yukon - 2WD	Chime	√	√	√	√	√	
2005	GMC truck	Yukon - 2WD	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Yukon - 2WD	Radio	√	√	√	√		
2005	GMC truck	Yukon - 2WD	Supplemental inflatable restraint	√	√	√	√		0531 0639



2005	GMC truck	Yukon - 2WD	Disc player and video dilay	√	√	√			
2005	GMC truck	Yukon - 2WD	Passenger presence system		√	√			0512
2005	GMC truck	Yukon - 2WD	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Yukon - 2WD	Driver door module	√	√	√	√	√	
2005	GMC truck	Yukon - 2WD	Passenger door module	√	√	√	√	√	
2005	GMC truck	Yukon - 2WD	Body Control Module	√	√	√	√	√	
2005	GMC truck	Yukon - 2WD	Driver seat module	√	√	√	√	√	
2005	GMC truck	Yukon - 2WD	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Yukon - 2WD	Rear aux. climate module	√	√	√	√	√	
2005	GMC truck	Yukon - 2WD	Rear HVAC	√	√	√	√		
2005	GMC truck	Yukon - 2WD	Rear seat audio	√	√	√	√		
2005	GMC truck	Yukon - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Yukon - 2WD	Generator battery control module	√	√	√	√	√	0631
2005	GMC truck	Yukon - 2WD	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Yukon - 2WD	Traction assist (if equipped)		√	√	√	√	
2005	GMC truck	Yukon - 2WD	ABS	√	√	√	√	√	
2005	GMC truck	Yukon - 2WD	Rear wheel steering	√	√	√	√	√	
2005	GMC truck	Yukon - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2005	GMC truck	Yukon - 2WD	Tire pressure monitor	√	√	√	√	√	0159
2005	GMC truck	Yukon - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2005	GMC truck	Yukon - 4WD	Powertrain	√	√	√	√	√	
2005	GMC truck	Yukon - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2005	GMC truck	Yukon - 4WD	CD changer	√	√	√			
2005	GMC truck	Yukon - 4WD	Chime	√	√	√	√	√	
2005	GMC truck	Yukon - 4WD	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Yukon - 4WD	Radio	√	√	√	√		
2005	GMC truck	Yukon - 4WD	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	GMC truck	Yukon - 4WD	Disc player and video dilay	√	√	√			
2005	GMC truck	Yukon - 4WD	Passenger presence system		√	√			0512
2005	GMC truck	Yukon - 4WD	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Yukon - 4WD	Driver door module	√	√	√	√	√	
2005	GMC truck	Yukon - 4WD	Passenger door module	√	√	√	√	√	
2005	GMC truck	Yukon - 4WD	Body Control Module	√	√	√	√	√	
2005	GMC truck	Yukon - 4WD	Driver seat module	√	√	√	√	√	
2005	GMC truck	Yukon - 4WD	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Yukon - 4WD	Rear aux. climate module	√	√	√	√	√	
2005	GMC truck	Yukon - 4WD	Rear HVAC	√	√	√	√		
2005	GMC truck	Yukon - 4WD	Rear seat audio	√	√	√	√		
2005	GMC truck	Yukon - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Yukon - 4WD	Generator battery control module	√	√	√	√	√	0631
2005	GMC truck	Yukon - 4WD	Navigation radio	√	√	√	√	√	0525

2005	GMC truck	Yukon - 4WD	Traction assist (if equipped)		√	√	√	√	
2005	GMC truck	Yukon - 4WD	ABS	√	√	√	√	√	
2005	GMC truck	Yukon - 4WD	Rear wheel steering	√	√	√	√	√	
2005	GMC truck	Yukon - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2005	GMC truck	Yukon - 4WD	Tire pressure monitor	√	√	√	√	√	0159
2005	GMC truck	Yukon - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2005	GMC truck	Yukon Denali	Powertrain	√	√	√	√	√	
2005	GMC truck	Yukon Denali	Amplifier (bose)	√	√	√	√	√	0631
2005	GMC truck	Yukon Denali	CD changer	√	√	√			
2005	GMC truck	Yukon Denali	Chime	√	√	√	√	√	
2005	GMC truck	Yukon Denali	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Yukon Denali	Radio	√	√	√	√		
2005	GMC truck	Yukon Denali	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	GMC truck	Yukon Denali	Disc player and video delay	√	√	√			
2005	GMC truck	Yukon Denali	Passenger presence system		√	√			0512
2005	GMC truck	Yukon Denali	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Yukon Denali	Driver door module	√	√	√	√	√	
2005	GMC truck	Yukon Denali	Passenger door module	√	√	√	√	√	
2005	GMC truck	Yukon Denali	Body Control Module	√	√	√	√	√	
2005	GMC truck	Yukon Denali	Driver seat module	√	√	√	√	√	
2005	GMC truck	Yukon Denali	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Yukon Denali	Rear aux. climate module	√	√	√	√	√	
2005	GMC truck	Yukon Denali	Rear HVAC	√	√	√	√		
2005	GMC truck	Yukon Denali	Rear seat audio	√	√	√	√		
2005	GMC truck	Yukon Denali	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Yukon Denali	Generator battery control module	√	√	√	√	√	0631
2005	GMC truck	Yukon Denali	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Yukon Denali	Traction assist (if equipped)		√	√	√	√	
2005	GMC truck	Yukon Denali	ABS	√	√	√	√	√	
2005	GMC truck	Yukon Denali	Rear wheel steering	√	√	√	√	√	
2005	GMC truck	Yukon Denali	ESC (if equipped)	√	√	√	√	√	0648
2005	GMC truck	Yukon Denali	Tire pressure monitor	√	√	√	√	√	0159
2005	GMC truck	Yukon Denali	EHPS (parallel hybrid)	√	√	√	√	√	0648
2005	GMC truck	Yukon XL - 2WD	Powertrain	√	√	√	√	√	0661
2005	GMC truck	Yukon XL - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2005	GMC truck	Yukon XL - 2WD	CD changer	√	√	√			
2005	GMC truck	Yukon XL - 2WD	Chime	√	√	√	√	√	
2005	GMC truck	Yukon XL - 2WD	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Yukon XL - 2WD	Radio	√	√	√	√		
2005	GMC truck	Yukon XL - 2WD	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	GMC truck	Yukon XL - 2WD	Disc player and video delay	√	√	√			

2005	GMC truck	Yukon XL - 2WD	Passenger presence system		√	√			0512
2005	GMC truck	Yukon XL - 2WD	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Yukon XL - 2WD	Driver door module	√	√	√	√	√	
2005	GMC truck	Yukon XL - 2WD	Passenger door module	√	√	√	√	√	
2005	GMC truck	Yukon XL - 2WD	Body Control Module	√	√	√	√	√	
2005	GMC truck	Yukon XL - 2WD	Driver seat module	√	√	√	√	√	
2005	GMC truck	Yukon XL - 2WD	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Yukon XL - 2WD	Rear aux. climate module	√	√	√	√	√	
2005	GMC truck	Yukon XL - 2WD	Rear HVAC	√	√	√	√		
2005	GMC truck	Yukon XL - 2WD	Rear seat audio	√	√	√	√		
2005	GMC truck	Yukon XL - 2WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Yukon XL - 2WD	Generator battery control module	√	√	√	√	√	0631
2005	GMC truck	Yukon XL - 2WD	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Yukon XL - 2WD	Traction assist (if equipped)		√	√	√	√	
2005	GMC truck	Yukon XL - 2WD	ABS	√	√	√	√	√	
2005	GMC truck	Yukon XL - 2WD	Rear wheel steering	√	√	√	√	√	
2005	GMC truck	Yukon XL - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2005	GMC truck	Yukon XL - 2WD	Tire pressure monitor	√	√	√	√	√	0159
2005	GMC truck	Yukon XL - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2005	GMC truck	Yukon XL - 4WD	Powertrain	√	√	√	√	√	0661
2005	GMC truck	Yukon XL - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2005	GMC truck	Yukon XL - 4WD	CD changer	√	√	√			
2005	GMC truck	Yukon XL - 4WD	Chime	√	√	√	√	√	
2005	GMC truck	Yukon XL - 4WD	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Yukon XL - 4WD	Radio	√	√	√	√		
2005	GMC truck	Yukon XL - 4WD	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	GMC truck	Yukon XL - 4WD	Disc player and video dilay	√	√	√			
2005	GMC truck	Yukon XL - 4WD	Passenger presence system		√	√			0512
2005	GMC truck	Yukon XL - 4WD	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Yukon XL - 4WD	Driver door module	√	√	√	√	√	
2005	GMC truck	Yukon XL - 4WD	Passenger door module	√	√	√	√	√	
2005	GMC truck	Yukon XL - 4WD	Body Control Module	√	√	√	√	√	
2005	GMC truck	Yukon XL - 4WD	Driver seat module	√	√	√	√	√	
2005	GMC truck	Yukon XL - 4WD	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Yukon XL - 4WD	Rear aux. climate module	√	√	√	√	√	
2005	GMC truck	Yukon XL - 4WD	Rear HVAC	√	√	√	√		
2005	GMC truck	Yukon XL - 4WD	Rear seat audio	√	√	√	√		
2005	GMC truck	Yukon XL - 4WD	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Yukon XL - 4WD	Generator battery control module	√	√	√	√	√	0631
2005	GMC truck	Yukon XL - 4WD	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Yukon XL - 4WD	Traction assist (if equipped)		√	√	√	√	

2005	GMC truck	Yukon XL - 4WD	ABS	√	√	√	√	√	
2005	GMC truck	Yukon XL - 4WD	Rear wheel steering	√	√	√	√	√	
2005	GMC truck	Yukon XL - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2005	GMC truck	Yukon XL - 4WD	Tire pressure monitor	√	√	√	√	√	0159
2005	GMC truck	Yukon XL - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2005	GMC truck	Yukon XL Denali	Powertrain	√	√	√	√	√	
2005	GMC truck	Yukon XL Denali	Amplifier (bose)	√	√	√	√	√	0631
2005	GMC truck	Yukon XL Denali	CD changer	√	√	√			
2005	GMC truck	Yukon XL Denali	Chime	√	√	√	√	√	
2005	GMC truck	Yukon XL Denali	Digital radio receiver	√	√	√	√		0516
2005	GMC truck	Yukon XL Denali	Radio	√	√	√	√		
2005	GMC truck	Yukon XL Denali	Supplemental inflatable restraint	√	√	√	√		0531 0639
2005	GMC truck	Yukon XL Denali	Disc player and video delay	√	√	√			
2005	GMC truck	Yukon XL Denali	Passenger presence system		√	√			0512
2005	GMC truck	Yukon XL Denali	Instrument panel cluster	√	√	√	√	√	
2005	GMC truck	Yukon XL Denali	Driver door module	√	√	√	√	√	
2005	GMC truck	Yukon XL Denali	Passenger door module	√	√	√	√	√	
2005	GMC truck	Yukon XL Denali	Body Control Module	√	√	√	√	√	
2005	GMC truck	Yukon XL Denali	Driver seat module	√	√	√	√	√	
2005	GMC truck	Yukon XL Denali	Heating and air conditioning	√	√	√	√	√	
2005	GMC truck	Yukon XL Denali	Rear aux. climate module	√	√	√	√	√	
2005	GMC truck	Yukon XL Denali	Rear HVAC	√	√	√	√		
2005	GMC truck	Yukon XL Denali	Rear seat audio	√	√	√	√		
2005	GMC truck	Yukon XL Denali	Vehicle comm. interface module	√	√	√	√	√	0591 0494 0565 0585
2005	GMC truck	Yukon XL Denali	Generator battery control module	√	√	√	√	√	0631
2005	GMC truck	Yukon XL Denali	Navigation radio	√	√	√	√	√	0525
2005	GMC truck	Yukon XL Denali	Traction assist (if equipped)		√	√	√	√	
2005	GMC truck	Yukon XL Denali	ABS	√	√	√	√	√	
2005	GMC truck	Yukon XL Denali	Rear wheel steering	√	√	√	√	√	
2005	GMC truck	Yukon XL Denali	ESC (if equipped)	√	√	√	√	√	0648
2005	GMC truck	Yukon XL Denali	Tire pressure monitor	√	√	√	√	√	0159
2005	GMC truck	Yukon XL Denali	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	GMC truck	Canyon Pickup - 2WD	Powertrain	√	√	√	√	√	
2004	GMC truck	Canyon Pickup - 2WD	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	0600
2004	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2004	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2004	GMC truck	Canyon Pickup - 2WD	ABS	√	√	√	√	√	0647 0683
2004	GMC truck	Canyon Pickup - 2WD	Powertrain	√	√	√	√	√	

2004	GMC truck	Canyon Pickup - 2WD	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Canyon Pickup - 2WD	Instrument panel cluster	√	√	√	√	√	0600
2004	GMC truck	Canyon Pickup - 2WD	Radio	√	√	√	√		
2004	GMC truck	Canyon Pickup - 2WD	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Canyon Pickup - 2WD	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Canyon Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2004	GMC truck	Canyon Pickup - 2WD	ABS	√	√	√	√	√	0647 0683
2004	GMC truck	Canyon Pickup - 4WD	Powertrain	√	√	√	√	√	
2004	GMC truck	Canyon Pickup - 4WD	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	0600
2004	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2004	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2004	GMC truck	Canyon Pickup - 4WD	ABS	√	√	√	√	√	0647 0683
2004	GMC truck	Canyon Pickup - 4WD	Powertrain	√	√	√	√	√	
2004	GMC truck	Canyon Pickup - 4WD	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Canyon Pickup - 4WD	Instrument panel cluster	√	√	√	√	√	0600
2004	GMC truck	Canyon Pickup - 4WD	Radio	√	√	√	√		
2004	GMC truck	Canyon Pickup - 4WD	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Canyon Pickup - 4WD	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Canyon Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0515
2004	GMC truck	Canyon Pickup - 4WD	ABS	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy	Radio	√	√	√	√		0524
2004	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2004	GMC truck	Envoy	Lift gate module	√	√	√	√	√	
2004	GMC truck	Envoy	Rear seat entertainment	√	√	√	√	√	0550
2004	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy	ABS	√	√	√	√	√	
2004	GMC truck	Envoy	4WAL 3 sensor		√	√	√	√	

2004	GMC truck	Envoy	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy	Digital radio receiver	√	√	√	√	√	0516
2004	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√	√	0531
2004	GMC truck	Envoy	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy	Radio	√	√	√	√	√	0524
2004	GMC truck	Envoy	Rear HVAC/RSA	√	√	√	√	√	
2004	GMC truck	Envoy	Lift gate module	√	√	√	√	√	
2004	GMC truck	Envoy	Rear seat entertainment	√	√	√	√	√	0550
2004	GMC truck	Envoy	Rear HVAC	√	√	√	√	√	0550
2004	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy	ABS	√	√	√	√	√	
2004	GMC truck	Envoy	4WAL 3 sensor	√	√	√	√	√	
2004	GMC truck	Envoy	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy	Digital radio receiver	√	√	√	√	√	0516
2004	GMC truck	Envoy	End gate module	√	√	√	√	√	
2004	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy	Power roof module	√	√	√	√	√	
2004	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√	√	0531
2004	GMC truck	Envoy	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy	Radio	√	√	√	√	√	0524
2004	GMC truck	Envoy	Rear seat audio	√	√	√	√	√	
2004	GMC truck	Envoy	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy	ABS	√	√	√	√	√	
2004	GMC truck	Envoy	4WAL 3 sensor	√	√	√	√	√	
2004	GMC truck	Envoy	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy	Digital radio receiver	√	√	√	√	√	0516
2004	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550

2004	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy	Radio	√	√	√	√		0524
2004	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2004	GMC truck	Envoy	Lift gate module	√	√	√	√	√	
2004	GMC truck	Envoy	Rear seat entertainment	√	√	√	√	√	0550
2004	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy	ABS	√	√	√	√	√	
2004	GMC truck	Envoy	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy	Radio	√	√	√	√		0524
2004	GMC truck	Envoy	Rear HVAC/RSA	√	√	√	√	√	
2004	GMC truck	Envoy	Lift gate module	√	√	√	√	√	
2004	GMC truck	Envoy	Rear seat entertainment	√	√	√	√	√	0550
2004	GMC truck	Envoy	Rear HVAC	√	√	√	√	√	0550
2004	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy	ABS	√	√	√	√	√	
2004	GMC truck	Envoy	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy	End gate module	√	√	√	√	√	
2004	GMC truck	Envoy	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy	Power roof module	√	√	√	√	√	

2004	GMC truck	Envoy	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy	Radio	√	√	√	√		0524
2004	GMC truck	Envoy	Rear seat audio	√	√	√	√		
2004	GMC truck	Envoy	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy	ABS	√	√	√	√	√	
2004	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy XL	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy XL	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy XL	Radio	√	√	√	√		0524
2004	GMC truck	Envoy XL	Rear seat audio	√	√	√	√		
2004	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Rear seat entertainment	√	√	√	√	√	0550
2004	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy XL	ABS	√	√	√	√	√	
2004	GMC truck	Envoy XL	4WAL 3 sensor		√	√	√	√	
2004	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy XL	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy XL	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy XL	Radio	√	√	√	√		0524
2004	GMC truck	Envoy XL	Rear HVAC/RSA	√	√	√	√	√	
2004	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Rear seat entertainment	√	√	√	√	√	0550
2004	GMC truck	Envoy XL	Rear HVAC	√	√	√	√	√	0550



2004	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy XL	ABS	√	√	√	√	√	
2004	GMC truck	Envoy XL	4WAL 3 sensor		√	√	√	√	
2004	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy XL	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy XL	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy XL	Radio	√	√	√	√		0524
2004	GMC truck	Envoy XL	Rear seat audio	√	√	√	√		
2004	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Rear seat entertainment	√	√	√	√	√	0550
2004	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy XL	ABS	√	√	√	√	√	
2004	GMC truck	Envoy XL	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy XL	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy XL	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy XL	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy XL	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy XL	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy XL	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy XL	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy XL	Radio	√	√	√	√		0524
2004	GMC truck	Envoy XL	Rear HVAC/RSA	√	√	√	√	√	
2004	GMC truck	Envoy XL	Lift gate module	√	√	√	√	√	
2004	GMC truck	Envoy XL	Rear seat entertainment	√	√	√	√	√	0550
2004	GMC truck	Envoy XL	Rear HVAC	√	√	√	√	√	0550
2004	GMC truck	Envoy XL	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy XL	ABS	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy XUV	Digital radio receiver	√	√	√	√		0516

2004	GMC truck	Envoy XUV	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy XUV	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy XUV	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Radio	√	√	√	√		0524
2004	GMC truck	Envoy XUV	Rear seat audio	√	√	√	√		
2004	GMC truck	Envoy XUV	Lift gate module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Rear seat entertainment	√	√	√	√	√	0550
2004	GMC truck	Envoy XUV	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy XUV	ABS	√	√	√	√	√	
2004	GMC truck	Envoy XUV	4WAL 3 sensor		√	√	√	√	
2004	GMC truck	Envoy XUV	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy XUV	End gate module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy XUV	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Power roof module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy XUV	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Radio	√	√	√	√		0524
2004	GMC truck	Envoy XUV	Rear seat audio	√	√	√	√		
2004	GMC truck	Envoy XUV	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy XUV	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy XUV	ABS	√	√	√	√	√	
2004	GMC truck	Envoy XUV	4WAL 3 sensor		√	√	√	√	
2004	GMC truck	Envoy XUV	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy XUV	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy XUV	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy XUV	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Driver seat module	√	√	√	√	√	

2004	GMC truck	Envoy XUV	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy XUV	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Radio	√	√	√	√		0524
2004	GMC truck	Envoy XUV	Rear seat audio	√	√	√	√		
2004	GMC truck	Envoy XUV	Lift gate module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Rear seat entertainment	√	√	√	√	√	0550
2004	GMC truck	Envoy XUV	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy XUV	ABS	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Powertrain	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Envoy XUV	End gate module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Body Control Module	√	√	√	√	√	0550
2004	GMC truck	Envoy XUV	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Driver door module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Passenger door module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Driver seat module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Power roof module	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Envoy XUV	Amplifier (bose)	√	√	√	√	√	
2004	GMC truck	Envoy XUV	Radio	√	√	√	√		0524
2004	GMC truck	Envoy XUV	Rear seat audio	√	√	√	√		
2004	GMC truck	Envoy XUV	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Envoy XUV	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Envoy XUV	ABS	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD	Powertrain	√	√	√	√	√	0638
2004	GMC truck	GMC C-Series - 2WD	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	GMC C-Series - 2WD	Body Control Module	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD	Passenger presence system		√	√			0512
2004	GMC truck	GMC C-Series - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2004	GMC truck	GMC C-Series - 2WD	Chime	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD	Passenger door module	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD	Driver door module	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	GMC C-Series - 2WD	Driver seat module	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD	Rear HVAC	√	√	√	√		
2004	GMC truck	GMC C-Series - 2WD	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	GMC C-Series - 2WD	CD changer	√	√	√			

2004	GMC truck	GMC C-Series - 2WD	Radio	√	√	√	√		
2004	GMC truck	GMC C-Series - 2WD	Rear seat entertainment	√	√	√			
2004	GMC truck	GMC C-Series - 2WD	Rear seat audio	√	√	√	√		
2004	GMC truck	GMC C-Series - 2WD	Rear aux. climate module	√	√	√	√	√	0516
2004	GMC truck	GMC C-Series - 2WD	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	GMC C-Series - 2WD	Rear wheel steering	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD	ABS	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2004	GMC truck	GMC C-Series - 2WD	Tire pressure monitor		√	√	√	√	0159
2004	GMC truck	GMC C-Series - 2WD	Traction assist (if equipped)	√	√	√	√	√	0648
2004	GMC truck	GMC C-Series - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	GMC truck	GMC C-Series - 2WD (CNG)	Powertrain	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD (CNG)	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	GMC C-Series - 2WD (CNG)	Body Control Module	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD (CNG)	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD (CNG)	Passenger presence system		√	√			0512
2004	GMC truck	GMC C-Series - 2WD (CNG)	Amplifier (bose)	√	√	√	√	√	0631
2004	GMC truck	GMC C-Series - 2WD (CNG)	Chime	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD (CNG)	Passenger door module	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD (CNG)	Driver door module	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD (CNG)	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	GMC C-Series - 2WD (CNG)	Driver seat module	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD (CNG)	Rear HVAC	√	√	√	√		
2004	GMC truck	GMC C-Series - 2WD (CNG)	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD (CNG)	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	GMC C-Series - 2WD (CNG)	CD changer	√	√	√			
2004	GMC truck	GMC C-Series - 2WD (CNG)	Radio	√	√	√	√		
2004	GMC truck	GMC C-Series - 2WD (CNG)	Rear seat entertainment	√	√	√			
2004	GMC truck	GMC C-Series - 2WD (CNG)	Rear seat audio	√	√	√	√		
2004	GMC truck	GMC C-Series - 2WD (CNG)	Rear aux. climate module	√	√	√	√	√	0516
2004	GMC truck	GMC C-Series - 2WD (CNG)	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	GMC C-Series - 2WD (CNG)	Rear wheel steering	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD (CNG)	ABS	√	√	√	√	√	
2004	GMC truck	GMC C-Series - 2WD (CNG)	ESC (if equipped)	√	√	√	√	√	0648
2004	GMC truck	GMC C-Series - 2WD (CNG)	Tire pressure monitor		√	√	√	√	0159
2004	GMC truck	GMC C-Series - 2WD (CNG)	Traction assist (if equipped)	√	√	√	√	√	0648
2004	GMC truck	GMC C-Series - 2WD (CNG)	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	GMC truck	GMC K Sierra - 4WD	Powertrain	√	√	√	√	√	0638
2004	GMC truck	GMC K Sierra - 4WD	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	GMC K Sierra - 4WD	Body Control Module	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD	Instrument panel cluster	√	√	√	√	√	

2004	GMC truck	GMC K Sierra - 4WD	Passenger presence system		√	√			0512
2004	GMC truck	GMC K Sierra - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2004	GMC truck	GMC K Sierra - 4WD	Chime	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD	Passenger door module	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD	Driver door module	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	GMC K Sierra - 4WD	Driver seat module	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD	Rear HVAC	√	√	√	√		
2004	GMC truck	GMC K Sierra - 4WD	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	GMC K Sierra - 4WD	CD changer	√	√	√			
2004	GMC truck	GMC K Sierra - 4WD	Radio	√	√	√	√		
2004	GMC truck	GMC K Sierra - 4WD	Rear seat entertainment	√	√	√			
2004	GMC truck	GMC K Sierra - 4WD	Rear seat audio	√	√	√	√		
2004	GMC truck	GMC K Sierra - 4WD	Rear aux. climate module	√	√	√	√	√	0516
2004	GMC truck	GMC K Sierra - 4WD	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	GMC K Sierra - 4WD	Rear wheel steering	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD	ABS	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2004	GMC truck	GMC K Sierra - 4WD	Tire pressure monitor		√	√	√	√	0159
2004	GMC truck	GMC K Sierra - 4WD	Traction assist (if equipped)	√	√	√	√	√	0648
2004	GMC truck	GMC K Sierra - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Powertrain	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Body Control Module	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Passenger presence system		√	√			0512
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Amplifier (bose)	√	√	√	√	√	0631
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Chime	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Passenger door module	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Driver door module	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Driver seat module	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Rear HVAC	√	√	√	√		
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	GMC K Sierra - 4WD (CNG)	CD changer	√	√	√			
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Radio	√	√	√	√		
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Rear seat entertainment	√	√	√			
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Rear seat audio	√	√	√	√		
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Rear aux. climate module	√	√	√	√	√	0516

2004	GMC truck	GMC K Sierra - 4WD (CNG)	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Rear wheel steering	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD (CNG)	ABS	√	√	√	√	√	
2004	GMC truck	GMC K Sierra - 4WD (CNG)	ESC (if equipped)	√	√	√	√	√	0648
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Tire pressure monitor		√	√	√	√	0159
2004	GMC truck	GMC K Sierra - 4WD (CNG)	Traction assist (if equipped)	√	√	√	√	√	0648
2004	GMC truck	GMC K Sierra - 4WD (CNG)	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	GMC truck	GMC Sierra Denali	Powertrain	√	√	√	√	√	
2004	GMC truck	GMC Sierra Denali	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	GMC Sierra Denali	Body Control Module	√	√	√	√	√	
2004	GMC truck	GMC Sierra Denali	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	GMC Sierra Denali	Passenger presence system		√	√			0512
2004	GMC truck	GMC Sierra Denali	Amplifier (bose)	√	√	√	√	√	0631
2004	GMC truck	GMC Sierra Denali	Chime	√	√	√	√	√	
2004	GMC truck	GMC Sierra Denali	Passenger door module	√	√	√	√	√	
2004	GMC truck	GMC Sierra Denali	Driver door module	√	√	√	√	√	
2004	GMC truck	GMC Sierra Denali	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	GMC Sierra Denali	Driver seat module	√	√	√	√	√	
2004	GMC truck	GMC Sierra Denali	Rear HVAC	√	√	√	√		
2004	GMC truck	GMC Sierra Denali	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	GMC Sierra Denali	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	GMC Sierra Denali	CD changer	√	√	√			
2004	GMC truck	GMC Sierra Denali	Radio	√	√	√	√		
2004	GMC truck	GMC Sierra Denali	Rear seat entertainment	√	√	√			
2004	GMC truck	GMC Sierra Denali	Rear seat audio	√	√	√	√		
2004	GMC truck	GMC Sierra Denali	Rear aux. climate module	√	√	√	√	√	0516
2004	GMC truck	GMC Sierra Denali	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	GMC Sierra Denali	Rear wheel steering	√	√	√	√	√	
2004	GMC truck	GMC Sierra Denali	ABS	√	√	√	√	√	
2004	GMC truck	GMC Sierra Denali	ESC (if equipped)	√	√	√	√	√	0648
2004	GMC truck	GMC Sierra Denali	Tire pressure monitor		√	√	√	√	0159
2004	GMC truck	GMC Sierra Denali	Traction assist (if equipped)	√	√	√	√	√	0648
2004	GMC truck	GMC Sierra Denali	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	0638
2004	GMC truck	Jimmy - 2WD	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Jimmy - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Jimmy - 2WD	Memory seat module	√	√	√	√		
2004	GMC truck	Jimmy - 2WD	Instrument panel cluster		√	√	√	√	
2004	GMC truck	Jimmy - 2WD	Body Control Module		√	√	√	√	
2004	GMC truck	Jimmy - 2WD	Radio	√	√	√	√	√	0531
2004	GMC truck	Jimmy - 2WD	Traction assist (if equipped)		√	√	√	√	

2004	GMC truck	Jimmy - 2WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	0638
2004	GMC truck	Jimmy - 2WD	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Jimmy - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Jimmy - 2WD	Memory seat module	√	√	√	√		
2004	GMC truck	Jimmy - 2WD	Instrument panel cluster		√	√	√	√	
2004	GMC truck	Jimmy - 2WD	Body Control Module		√	√	√	√	
2004	GMC truck	Jimmy - 2WD	Radio	√	√	√	√	√	0531
2004	GMC truck	Jimmy - 2WD	Traction assist (if equipped)		√	√	√	√	
2004	GMC truck	Jimmy - 2WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	0638
2004	GMC truck	Jimmy - 4WD	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Jimmy - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Jimmy - 4WD	Memory seat module	√	√	√	√		
2004	GMC truck	Jimmy - 4WD	Instrument panel cluster		√	√	√	√	
2004	GMC truck	Jimmy - 4WD	Body Control Module		√	√	√	√	
2004	GMC truck	Jimmy - 4WD	Radio	√	√	√	√	√	0531
2004	GMC truck	Jimmy - 4WD	Traction assist (if equipped)		√	√	√	√	
2004	GMC truck	Jimmy - 4WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	0638
2004	GMC truck	Jimmy - 4WD	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Jimmy - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Jimmy - 4WD	Memory seat module	√	√	√	√		
2004	GMC truck	Jimmy - 4WD	Instrument panel cluster		√	√	√	√	
2004	GMC truck	Jimmy - 4WD	Body Control Module		√	√	√	√	
2004	GMC truck	Jimmy - 4WD	Radio	√	√	√	√	√	0531
2004	GMC truck	Jimmy - 4WD	Traction assist (if equipped)		√	√	√	√	
2004	GMC truck	Jimmy - 4WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	GMC truck	Safari - 2WD	Powertrain	√	√	√	√	√	0638
2004	GMC truck	Safari - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Safari - 2WD	Body Control Module		√	√	√	√	
2004	GMC truck	Safari - 2WD	Instrument panel cluster		√	√	√	√	
2004	GMC truck	Safari - 2WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	GMC truck	Safari - 4WD	Powertrain	√	√	√	√	√	0638
2004	GMC truck	Safari - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Safari - 4WD	Body Control Module		√	√	√	√	
2004	GMC truck	Safari - 4WD	Instrument panel cluster		√	√	√	√	
2004	GMC truck	Safari - 4WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	GMC truck	Savana	Powertrain	√	√	√	√	√	0638
2004	GMC truck	Savana	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Savana	Body Control Module	√	√	√	√	√	



2004	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Savana	Remote function actuation	√	√	√	√	√	
2004	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0531
2004	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2004	GMC truck	Savana	Radio	√	√	√	√	√	0647 0683
2004	GMC truck	Savana	ABS	√	√	√	√	√	
2004	GMC truck	Savana	Powertrain	√	√	√	√	√	0638
2004	GMC truck	Savana	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Savana	Body Control Module	√	√	√	√	√	
2004	GMC truck	Savana	Remote function actuation	√	√	√	√	√	
2004	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0531
2004	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2004	GMC truck	Savana	Radio	√	√	√	√	√	0647 0683
2004	GMC truck	Savana	ABS	√	√	√	√	√	
2004	GMC truck	Savana	Powertrain	√	√	√	√	√	
2004	GMC truck	Savana	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Savana	Body Control Module	√	√	√	√	√	
2004	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Savana	Remote function actuation	√	√	√	√	√	
2004	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0531
2004	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2004	GMC truck	Savana	Radio	√	√	√	√	√	0647 0683
2004	GMC truck	Savana	ABS	√	√	√	√	√	
2004	GMC truck	Savana	Powertrain	√	√	√	√	√	
2004	GMC truck	Savana	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Savana	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Savana	Body Control Module	√	√	√	√	√	
2004	GMC truck	Savana	Remote function actuation	√	√	√	√	√	
2004	GMC truck	Savana	Supplemental inflatable restraint	√	√	√	√	√	0531
2004	GMC truck	Savana	Multifunction alarm module	√	√	√	√	√	
2004	GMC truck	Savana	Radio	√	√	√	√	√	0647 0683
2004	GMC truck	Savana	ABS	√	√	√	√	√	
2004	GMC truck	Sonoma Pickup - 2WD	Powertrain	√	√	√	√	√	0638
2004	GMC truck	Sonoma Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0531
2004	GMC truck	Sonoma Pickup - 2WD	Instrument panel cluster		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 2WD	Body Control Module		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 2WD	Radio	√	√	√	√	√	0531
2004	GMC truck	Sonoma Pickup - 2WD	Traction assist (if equipped)		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 2WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	GMC truck	Sonoma Pickup - 2WD	Powertrain	√	√	√	√	√	0638



2004	GMC truck	Sonoma Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Sonoma Pickup - 2WD	Instrument panel cluster		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 2WD	Body Control Module		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 2WD	Radio	√	√	√	√	√	0531
2004	GMC truck	Sonoma Pickup - 2WD	Traction assist (if equipped)		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 2WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	GMC truck	Sonoma Pickup - 4WD	Powertrain	√	√	√	√	√	0638
2004	GMC truck	Sonoma Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Sonoma Pickup - 4WD	Instrument panel cluster		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 4WD	Body Control Module		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 4WD	Radio	√	√	√	√	√	0531
2004	GMC truck	Sonoma Pickup - 4WD	Traction assist (if equipped)		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 4WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	GMC truck	Sonoma Pickup - 4WD	Powertrain	√	√	√	√	√	0638
2004	GMC truck	Sonoma Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Sonoma Pickup - 4WD	Instrument panel cluster		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 4WD	Body Control Module		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 4WD	Radio	√	√	√	√	√	0531
2004	GMC truck	Sonoma Pickup - 4WD	Traction assist (if equipped)		√	√	√	√	
2004	GMC truck	Sonoma Pickup - 4WD	4WAL 3 sensor	√	√	√	√	√	0638
2004	GMC truck	Yukon - 2WD	Powertrain	√	√	√	√	√	
2004	GMC truck	Yukon - 2WD	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Yukon - 2WD	Body Control Module	√	√	√	√	√	
2004	GMC truck	Yukon - 2WD	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Yukon - 2WD	Passenger presence system		√	√			0512
2004	GMC truck	Yukon - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2004	GMC truck	Yukon - 2WD	Chime	√	√	√	√	√	
2004	GMC truck	Yukon - 2WD	Passenger door module	√	√	√	√	√	
2004	GMC truck	Yukon - 2WD	Driver door module	√	√	√	√	√	
2004	GMC truck	Yukon - 2WD	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Yukon - 2WD	Driver seat module	√	√	√	√	√	
2004	GMC truck	Yukon - 2WD	Rear HVAC	√	√	√	√		
2004	GMC truck	Yukon - 2WD	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Yukon - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Yukon - 2WD	CD changer	√	√	√			
2004	GMC truck	Yukon - 2WD	Radio	√	√	√	√		
2004	GMC truck	Yukon - 2WD	Rear seat entertainment	√	√	√			
2004	GMC truck	Yukon - 2WD	Rear seat audio	√	√	√	√		
2004	GMC truck	Yukon - 2WD	Rear aux. climate module	√	√	√	√	√	0516
2004	GMC truck	Yukon - 2WD	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Yukon - 2WD	Rear wheel steering	√	√	√	√	√	

2004	GMC truck	Yukon - 2WD	ABS	√	√	√	√	√	
2004	GMC truck	Yukon - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2004	GMC truck	Yukon - 2WD	Tire pressure monitor		√	√	√	√	0159
2004	GMC truck	Yukon - 2WD	Traction assist (if equipped)	√	√	√	√	√	0648
2004	GMC truck	Yukon - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	GMC truck	Yukon - 4WD	Powertrain	√	√	√	√	√	
2004	GMC truck	Yukon - 4WD	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Yukon - 4WD	Body Control Module	√	√	√	√	√	
2004	GMC truck	Yukon - 4WD	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Yukon - 4WD	Passenger presence system		√	√			0512
2004	GMC truck	Yukon - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2004	GMC truck	Yukon - 4WD	Chime	√	√	√	√	√	
2004	GMC truck	Yukon - 4WD	Passenger door module	√	√	√	√	√	
2004	GMC truck	Yukon - 4WD	Driver door module	√	√	√	√	√	
2004	GMC truck	Yukon - 4WD	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Yukon - 4WD	Driver seat module	√	√	√	√	√	
2004	GMC truck	Yukon - 4WD	Rear HVAC	√	√	√	√		
2004	GMC truck	Yukon - 4WD	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Yukon - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Yukon - 4WD	CD changer	√	√	√			
2004	GMC truck	Yukon - 4WD	Radio	√	√	√	√		
2004	GMC truck	Yukon - 4WD	Rear seat entertainment	√	√	√			
2004	GMC truck	Yukon - 4WD	Rear seat audio	√	√	√	√		
2004	GMC truck	Yukon - 4WD	Rear aux. climate module	√	√	√	√	√	0516
2004	GMC truck	Yukon - 4WD	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Yukon - 4WD	Rear wheel steering	√	√	√	√	√	
2004	GMC truck	Yukon - 4WD	ABS	√	√	√	√	√	
2004	GMC truck	Yukon - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2004	GMC truck	Yukon - 4WD	Tire pressure monitor		√	√	√	√	0159
2004	GMC truck	Yukon - 4WD	Traction assist (if equipped)	√	√	√	√	√	0648
2004	GMC truck	Yukon - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	GMC truck	Yukon Denali	Powertrain	√	√	√	√	√	
2004	GMC truck	Yukon Denali	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Yukon Denali	Body Control Module	√	√	√	√	√	
2004	GMC truck	Yukon Denali	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Yukon Denali	Passenger presence system		√	√			0512
2004	GMC truck	Yukon Denali	Amplifier (bose)	√	√	√	√	√	0631
2004	GMC truck	Yukon Denali	Chime	√	√	√	√	√	
2004	GMC truck	Yukon Denali	Passenger door module	√	√	√	√	√	
2004	GMC truck	Yukon Denali	Driver door module	√	√	√	√	√	
2004	GMC truck	Yukon Denali	Onstar	√	√	√	√	√	0647 0683

2004	GMC truck	Yukon Denali	Driver seat module	√	√	√	√	√	
2004	GMC truck	Yukon Denali	Rear HVAC	√	√	√	√		
2004	GMC truck	Yukon Denali	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Yukon Denali	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Yukon Denali	CD changer	√	√	√			
2004	GMC truck	Yukon Denali	Radio	√	√	√	√		
2004	GMC truck	Yukon Denali	Rear seat entertainment	√	√	√			
2004	GMC truck	Yukon Denali	Rear seat audio	√	√	√	√		
2004	GMC truck	Yukon Denali	Rear aux. climate module	√	√	√	√	√	0516
2004	GMC truck	Yukon Denali	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Yukon Denali	Rear wheel steering	√	√	√	√	√	
2004	GMC truck	Yukon Denali	ABS	√	√	√	√	√	
2004	GMC truck	Yukon Denali	ESC (if equipped)	√	√	√	√	√	0648
2004	GMC truck	Yukon Denali	Tire pressure monitor		√	√	√	√	0159
2004	GMC truck	Yukon Denali	Traction assist (if equipped)	√	√	√	√	√	0648
2004	GMC truck	Yukon Denali	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	GMC truck	Yukon XL - 2WD	Powertrain	√	√	√	√	√	0661
2004	GMC truck	Yukon XL - 2WD	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Yukon XL - 2WD	Body Control Module	√	√	√	√	√	
2004	GMC truck	Yukon XL - 2WD	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Yukon XL - 2WD	Passenger presence system		√	√			0512
2004	GMC truck	Yukon XL - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2004	GMC truck	Yukon XL - 2WD	Chime	√	√	√	√	√	
2004	GMC truck	Yukon XL - 2WD	Passenger door module	√	√	√	√	√	
2004	GMC truck	Yukon XL - 2WD	Driver door module	√	√	√	√	√	
2004	GMC truck	Yukon XL - 2WD	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Yukon XL - 2WD	Driver seat module	√	√	√	√	√	
2004	GMC truck	Yukon XL - 2WD	Rear HVAC	√	√	√	√		
2004	GMC truck	Yukon XL - 2WD	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Yukon XL - 2WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Yukon XL - 2WD	CD changer	√	√	√			
2004	GMC truck	Yukon XL - 2WD	Radio	√	√	√	√		
2004	GMC truck	Yukon XL - 2WD	Rear seat entertainment	√	√	√			
2004	GMC truck	Yukon XL - 2WD	Rear seat audio	√	√	√	√		
2004	GMC truck	Yukon XL - 2WD	Rear aux. climate module	√	√	√	√	√	0516
2004	GMC truck	Yukon XL - 2WD	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Yukon XL - 2WD	Rear wheel steering	√	√	√	√	√	
2004	GMC truck	Yukon XL - 2WD	ABS	√	√	√	√	√	
2004	GMC truck	Yukon XL - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2004	GMC truck	Yukon XL - 2WD	Tire pressure monitor		√	√	√	√	0159
2004	GMC truck	Yukon XL - 2WD	Traction assist (if equipped)	√	√	√	√	√	0648

2004	GMC truck	Yukon XL - 2WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2004	GMC truck	Yukon XL - 4WD	Powertrain	√	√	√	√	√	0661
2004	GMC truck	Yukon XL - 4WD	Digital radio receiver	√	√	√	√		0516
2004	GMC truck	Yukon XL - 4WD	Body Control Module	√	√	√	√	√	
2004	GMC truck	Yukon XL - 4WD	Instrument panel cluster	√	√	√	√	√	
2004	GMC truck	Yukon XL - 4WD	Passenger presence system		√	√			0512
2004	GMC truck	Yukon XL - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2004	GMC truck	Yukon XL - 4WD	Chime	√	√	√	√	√	
2004	GMC truck	Yukon XL - 4WD	Passenger door module	√	√	√	√	√	
2004	GMC truck	Yukon XL - 4WD	Driver door module	√	√	√	√	√	
2004	GMC truck	Yukon XL - 4WD	Onstar	√	√	√	√	√	0647 0683
2004	GMC truck	Yukon XL - 4WD	Driver seat module	√	√	√	√	√	
2004	GMC truck	Yukon XL - 4WD	Rear HVAC	√	√	√	√		
2004	GMC truck	Yukon XL - 4WD	Heating and air conditioning	√	√	√	√	√	
2004	GMC truck	Yukon XL - 4WD	Supplemental inflatable restraint	√	√	√	√		0531
2004	GMC truck	Yukon XL - 4WD	CD changer	√	√	√			
2004	GMC truck	Yukon XL - 4WD	Radio	√	√	√	√		
2004	GMC truck	Yukon XL - 4WD	Rear seat entertainment	√	√	√			
2004	GMC truck	Yukon XL - 4WD	Rear seat audio	√	√	√	√		
2004	GMC truck	Yukon XL - 4WD	Rear aux. climate module	√	√	√	√	√	0516
2004	GMC truck	Yukon XL - 4WD	Navigation radio	√	√	√	√	√	0525
2004	GMC truck	Yukon XL - 4WD	Rear wheel steering	√	√	√	√	√	
2004	GMC truck	Yukon XL - 4WD	ABS	√	√	√	√	√	
2004	GMC truck	Yukon XL - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2004	GMC truck	Yukon XL - 4WD	Tire pressure monitor		√	√	√	√	0159
2004	GMC truck	Yukon XL - 4WD	Traction assist (if equipped)	√	√	√	√	√	0648
2004	GMC truck	Yukon XL - 4WD	EHPS (parallel hybrid)	√	√	√	√	√	0648
2003	GMC truck	Envoy - 2WD	Powertrain	√	√	√	√	√	
2003	GMC truck	Envoy - 2WD	Amplifier (bose)	√	√	√	√	√	
2003	GMC truck	Envoy - 2WD	Rear seat audio				√		
2003	GMC truck	Envoy - 2WD	Heating and air conditioning				√	√	
2003	GMC truck	Envoy - 2WD	Supplemental inflatable restraint		√	√			0531
2003	GMC truck	Envoy - 2WD	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	Envoy - 2WD	Radio		√	√	√		
2003	GMC truck	Envoy - 2WD	Body Control Module	√	√	√	√	√	0550
2003	GMC truck	Envoy - 2WD	Rear HVAC/RSA	√	√	√	√	√	0531
2003	GMC truck	Envoy - 2WD	4WAL 3 sensor		√	√	√	√	
2003	GMC truck	Envoy - 2WD	Traction assist (if equipped)		√	√	√	√	
2003	GMC truck	Envoy - 4WD	Powertrain	√	√	√	√	√	
2003	GMC truck	Envoy - 4WD	Amplifier (bose)	√	√	√	√	√	
2003	GMC truck	Envoy - 4WD	Rear seat audio				√		

2003	GMC truck	Envoy - 4WD	Heating and air conditioning				√	√	
2003	GMC truck	Envoy - 4WD	Supplemental inflatable restraint		√	√			0531
2003	GMC truck	Envoy - 4WD	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	Envoy - 4WD	Radio		√	√	√		
2003	GMC truck	Envoy - 4WD	Body Control Module	√	√	√	√	√	0550
2003	GMC truck	Envoy - 4WD	Rear HVAC/RSA	√	√	√	√	√	0531
2003	GMC truck	Envoy - 4WD	4WAL 3 sensor		√	√	√	√	
2003	GMC truck	Envoy - 4WD	Traction assist (if equipped)		√	√	√	√	
2003	GMC truck	GMC C-Series - 2WD	Powertrain	√	√	√	√	√	0638
2003	GMC truck	GMC C-Series - 2WD	Body Control Module	√	√	√	√	√	
2003	GMC truck	GMC C-Series - 2WD	Heating and air conditioning	√	√	√	√	√	
2003	GMC truck	GMC C-Series - 2WD	Radio				√		
2003	GMC truck	GMC C-Series - 2WD	Supplemental inflatable restraint		√	√			0531
2003	GMC truck	GMC C-Series - 2WD	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	GMC C-Series - 2WD	Digital radio receiver	√	√	√	√		0516
2003	GMC truck	GMC C-Series - 2WD	Instrument panel cluster	√	√	√	√	√	
2003	GMC truck	GMC C-Series - 2WD	Rear seat entertainment	√	√	√			
2003	GMC truck	GMC C-Series - 2WD	Passenger presence system	√	√	√	√	√	0512
2003	GMC truck	GMC C-Series - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2003	GMC truck	GMC C-Series - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2003	GMC truck	GMC C-Series - 2WD	ABS	√	√	√	√	√	
2003	GMC truck	GMC C-Series - 2WD	Traction assist (if equipped)	√	√	√	√	√	0648
2003	GMC truck	GMC C-Series - 2WD (CNG)	Powertrain	√	√	√	√	√	
2003	GMC truck	GMC C-Series - 2WD (CNG)	Body Control Module	√	√	√	√	√	
2003	GMC truck	GMC C-Series - 2WD (CNG)	Heating and air conditioning	√	√	√	√	√	
2003	GMC truck	GMC C-Series - 2WD (CNG)	Radio				√		
2003	GMC truck	GMC C-Series - 2WD (CNG)	Supplemental inflatable restraint		√	√			0531
2003	GMC truck	GMC C-Series - 2WD (CNG)	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	GMC C-Series - 2WD (CNG)	Digital radio receiver	√	√	√	√		0516
2003	GMC truck	GMC C-Series - 2WD (CNG)	Instrument panel cluster	√	√	√	√	√	
2003	GMC truck	GMC C-Series - 2WD (CNG)	Rear seat entertainment	√	√	√			
2003	GMC truck	GMC C-Series - 2WD (CNG)	Passenger presence system	√	√	√	√	√	0512
2003	GMC truck	GMC C-Series - 2WD (CNG)	Amplifier (bose)	√	√	√	√	√	0631
2003	GMC truck	GMC C-Series - 2WD (CNG)	ESC (if equipped)	√	√	√	√	√	0648
2003	GMC truck	GMC C-Series - 2WD (CNG)	ABS	√	√	√	√	√	
2003	GMC truck	GMC C-Series - 2WD (CNG)	Traction assist (if equipped)	√	√	√	√	√	0648
2003	GMC truck	GMC K Sierra - 4WD	Powertrain	√	√	√	√	√	0638
2003	GMC truck	GMC K Sierra - 4WD	Body Control Module	√	√	√	√	√	
2003	GMC truck	GMC K Sierra - 4WD	Heating and air conditioning	√	√	√	√	√	
2003	GMC truck	GMC K Sierra - 4WD	Radio				√		
2003	GMC truck	GMC K Sierra - 4WD	Supplemental inflatable restraint		√	√			0531

2003	GMC truck	GMC K Sierra - 4WD	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	GMC K Sierra - 4WD	Digital radio receiver	√	√	√	√		0516
2003	GMC truck	GMC K Sierra - 4WD	Instrument panel cluster	√	√	√	√	√	
2003	GMC truck	GMC K Sierra - 4WD	Rear seat entertainment	√	√	√			
2003	GMC truck	GMC K Sierra - 4WD	Passenger presence system	√	√	√	√	√	0512
2003	GMC truck	GMC K Sierra - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2003	GMC truck	GMC K Sierra - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2003	GMC truck	GMC K Sierra - 4WD	ABS	√	√	√	√	√	
2003	GMC truck	GMC K Sierra - 4WD	Traction assist (if equipped)	√	√	√	√	√	0648
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Powertrain	√	√	√	√	√	
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Body Control Module	√	√	√	√	√	
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Heating and air conditioning	√	√	√	√	√	
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Radio				√		
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Supplemental inflatable restraint		√	√			0531
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Digital radio receiver	√	√	√	√		0516
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Instrument panel cluster	√	√	√	√	√	
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Rear seat entertainment	√	√	√			
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Passenger presence system	√	√	√	√	√	0512
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Amplifier (bose)	√	√	√	√	√	0631
2003	GMC truck	GMC K Sierra - 4WD (CNG)	ESC (if equipped)	√	√	√	√	√	0648
2003	GMC truck	GMC K Sierra - 4WD (CNG)	ABS	√	√	√	√	√	
2003	GMC truck	GMC K Sierra - 4WD (CNG)	Traction assist (if equipped)	√	√	√	√	√	0648
2003	GMC truck	GMC Sierra Denali	Powertrain	√	√	√	√	√	
2003	GMC truck	GMC Sierra Denali	Body Control Module	√	√	√	√	√	
2003	GMC truck	GMC Sierra Denali	Heating and air conditioning	√	√	√	√	√	
2003	GMC truck	GMC Sierra Denali	Radio				√		
2003	GMC truck	GMC Sierra Denali	Supplemental inflatable restraint		√	√			0531
2003	GMC truck	GMC Sierra Denali	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	GMC Sierra Denali	Digital radio receiver	√	√	√	√		0516
2003	GMC truck	GMC Sierra Denali	Instrument panel cluster	√	√	√	√	√	
2003	GMC truck	GMC Sierra Denali	Rear seat entertainment	√	√	√			
2003	GMC truck	GMC Sierra Denali	Passenger presence system	√	√	√	√	√	0512
2003	GMC truck	GMC Sierra Denali	Amplifier (bose)	√	√	√	√	√	0631
2003	GMC truck	GMC Sierra Denali	ESC (if equipped)	√	√	√	√	√	0648
2003	GMC truck	GMC Sierra Denali	ABS	√	√	√	√	√	
2003	GMC truck	GMC Sierra Denali	Traction assist (if equipped)	√	√	√	√	√	0648
2003	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	0638
2003	GMC truck	Jimmy - 2WD	Body Control Module		√	√	√	√	0524
2003	GMC truck	Jimmy - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2003	GMC truck	Jimmy - 2WD	4WAL 3 sensor		√	√	√	√	

2003	GMC truck	Jimmy - 2WD	Traction assist (if equipped)		√	√	√	√	
2003	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	0638
2003	GMC truck	Jimmy - 4WD	Body Control Module		√	√	√	√	0524
2003	GMC truck	Jimmy - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2003	GMC truck	Jimmy - 4WD	4WAL 3 sensor		√	√	√	√	
2003	GMC truck	Jimmy - 4WD	Traction assist (if equipped)		√	√	√	√	
2003	GMC truck	Safari - 2WD	Powertrain	√	√	√	√	√	0638
2003	GMC truck	Safari - 2WD	Body Control Module		√	√	√	√	
2003	GMC truck	Safari - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2003	GMC truck	Safari - 2WD	Instrument panel cluster					√	0531
2003	GMC truck	Safari - 2WD	4WAL 3 sensor		√	√	√	√	
2003	GMC truck	Safari - 4WD	Powertrain	√	√	√	√	√	0638
2003	GMC truck	Safari - 4WD	Body Control Module		√	√	√	√	
2003	GMC truck	Safari - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2003	GMC truck	Safari - 4WD	Instrument panel cluster					√	0531
2003	GMC truck	Safari - 4WD	4WAL 3 sensor		√	√	√	√	
2003	GMC truck	Savana (CNG)	Powertrain	√	√	√	√	√	
2003	GMC truck	Savana (CNG)	Body Control Module	√	√	√	√	√	
2003	GMC truck	Savana (CNG)	Supplemental inflatable restraint						0531
2003	GMC truck	Savana (CNG)	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	Savana (CNG)	ABS	√	√	√	√	√	
2003	GMC truck	Savana - 2WD	Powertrain	√	√	√	√	√	0638
2003	GMC truck	Savana - 2WD	Body Control Module	√	√	√	√	√	
2003	GMC truck	Savana - 2WD	Supplemental inflatable restraint						0531
2003	GMC truck	Savana - 2WD	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	Savana - 2WD	ABS	√	√	√	√	√	
2003	GMC truck	Savana - AWD	Powertrain	√	√	√	√	√	0638
2003	GMC truck	Savana - AWD	Body Control Module	√	√	√	√	√	
2003	GMC truck	Savana - AWD	Supplemental inflatable restraint						0531
2003	GMC truck	Savana - AWD	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	Savana - AWD	ABS	√	√	√	√	√	
2003	GMC truck	Sonoma Pickup - 2WD	Powertrain	√	√	√	√	√	0638
2003	GMC truck	Sonoma Pickup - 2WD	Body Control Module		√	√	√	√	0524
2003	GMC truck	Sonoma Pickup - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2003	GMC truck	Sonoma Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
2003	GMC truck	Sonoma Pickup - 2WD	Traction assist (if equipped)		√	√	√	√	
2003	GMC truck	Sonoma Pickup - 4WD	Powertrain	√	√	√	√	√	0638
2003	GMC truck	Sonoma Pickup - 4WD	Body Control Module		√	√	√	√	0524
2003	GMC truck	Sonoma Pickup - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2003	GMC truck	Sonoma Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
2003	GMC truck	Sonoma Pickup - 4WD	Traction assist (if equipped)		√	√	√	√	



2003	GMC truck	Yukon - 2WD	Powertrain	√	√	√	√	√	
2003	GMC truck	Yukon - 2WD	Body Control Module	√	√	√	√	√	
2003	GMC truck	Yukon - 2WD	Heating and air conditioning	√	√	√	√	√	
2003	GMC truck	Yukon - 2WD	Radio				√		
2003	GMC truck	Yukon - 2WD	Supplemental inflatable restraint		√	√			0531
2003	GMC truck	Yukon - 2WD	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	Yukon - 2WD	Digital radio receiver	√	√	√	√		0516
2003	GMC truck	Yukon - 2WD	Instrument panel cluster	√	√	√	√	√	
2003	GMC truck	Yukon - 2WD	Rear seat entertainment	√	√	√			
2003	GMC truck	Yukon - 2WD	Passenger presence system	√	√	√	√	√	0512
2003	GMC truck	Yukon - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2003	GMC truck	Yukon - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2003	GMC truck	Yukon - 2WD	ABS	√	√	√	√	√	
2003	GMC truck	Yukon - 2WD	Traction assist (if equipped)	√	√	√	√	√	0648
2003	GMC truck	Yukon - 4WD	Powertrain	√	√	√	√	√	
2003	GMC truck	Yukon - 4WD	Body Control Module	√	√	√	√	√	
2003	GMC truck	Yukon - 4WD	Heating and air conditioning	√	√	√	√	√	
2003	GMC truck	Yukon - 4WD	Radio				√		
2003	GMC truck	Yukon - 4WD	Supplemental inflatable restraint		√	√			0531
2003	GMC truck	Yukon - 4WD	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	Yukon - 4WD	Digital radio receiver	√	√	√	√		0516
2003	GMC truck	Yukon - 4WD	Instrument panel cluster	√	√	√	√	√	
2003	GMC truck	Yukon - 4WD	Rear seat entertainment	√	√	√			
2003	GMC truck	Yukon - 4WD	Passenger presence system	√	√	√	√	√	0512
2003	GMC truck	Yukon - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2003	GMC truck	Yukon - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2003	GMC truck	Yukon - 4WD	ABS	√	√	√	√	√	
2003	GMC truck	Yukon - 4WD	Traction assist (if equipped)	√	√	√	√	√	0648
2003	GMC truck	Yukon Denali	Powertrain	√	√	√	√	√	
2003	GMC truck	Yukon Denali	Body Control Module	√	√	√	√	√	
2003	GMC truck	Yukon Denali	Heating and air conditioning	√	√	√	√	√	
2003	GMC truck	Yukon Denali	Radio				√		
2003	GMC truck	Yukon Denali	Supplemental inflatable restraint		√	√			0531
2003	GMC truck	Yukon Denali	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	Yukon Denali	Digital radio receiver	√	√	√	√		0516
2003	GMC truck	Yukon Denali	Instrument panel cluster	√	√	√	√	√	
2003	GMC truck	Yukon Denali	Rear seat entertainment	√	√	√			
2003	GMC truck	Yukon Denali	Passenger presence system	√	√	√	√	√	0512
2003	GMC truck	Yukon Denali	Amplifier (bose)	√	√	√	√	√	0631
2003	GMC truck	Yukon Denali	ESC (if equipped)	√	√	√	√	√	0648
2003	GMC truck	Yukon Denali	ABS	√	√	√	√	√	



2003	GMC truck	Yukon Denali	Traction assist (if equipped)	√	√	√	√	√	0648
2003	GMC truck	Yukon XL - 2WD	Powertrain	√	√	√	√	√	0571
2003	GMC truck	Yukon XL - 2WD	Body Control Module	√	√	√	√	√	
2003	GMC truck	Yukon XL - 2WD	Heating and air conditioning	√	√	√	√	√	
2003	GMC truck	Yukon XL - 2WD	Radio				√		
2003	GMC truck	Yukon XL - 2WD	Supplemental inflatable restraint		√	√			0531
2003	GMC truck	Yukon XL - 2WD	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	Yukon XL - 2WD	Digital radio receiver	√	√	√	√		0516
2003	GMC truck	Yukon XL - 2WD	Instrument panel cluster	√	√	√	√	√	
2003	GMC truck	Yukon XL - 2WD	Rear seat entertainment	√	√	√			
2003	GMC truck	Yukon XL - 2WD	Passenger presence system	√	√	√	√	√	0512
2003	GMC truck	Yukon XL - 2WD	Amplifier (bose)	√	√	√	√	√	0631
2003	GMC truck	Yukon XL - 2WD	ESC (if equipped)	√	√	√	√	√	0648
2003	GMC truck	Yukon XL - 2WD	ABS	√	√	√	√	√	
2003	GMC truck	Yukon XL - 2WD	Traction assist (if equipped)	√	√	√	√	√	0648
2003	GMC truck	Yukon XL - 4WD	Powertrain	√	√	√	√	√	
2003	GMC truck	Yukon XL - 4WD	Body Control Module	√	√	√	√	√	
2003	GMC truck	Yukon XL - 4WD	Heating and air conditioning	√	√	√	√	√	
2003	GMC truck	Yukon XL - 4WD	Radio				√		
2003	GMC truck	Yukon XL - 4WD	Supplemental inflatable restraint		√	√			0531
2003	GMC truck	Yukon XL - 4WD	Onstar	√	√	√	√	√	0647 0683
2003	GMC truck	Yukon XL - 4WD	Digital radio receiver	√	√	√	√		0516
2003	GMC truck	Yukon XL - 4WD	Instrument panel cluster	√	√	√	√	√	
2003	GMC truck	Yukon XL - 4WD	Rear seat entertainment	√	√	√			
2003	GMC truck	Yukon XL - 4WD	Passenger presence system	√	√	√	√	√	0512
2003	GMC truck	Yukon XL - 4WD	Amplifier (bose)	√	√	√	√	√	0631
2003	GMC truck	Yukon XL - 4WD	ESC (if equipped)	√	√	√	√	√	0648
2003	GMC truck	Yukon XL - 4WD	ABS	√	√	√	√	√	
2003	GMC truck	Yukon XL - 4WD	Traction assist (if equipped)	√	√	√	√	√	0648
2002	GMC truck	Envoy - 2WD	Powertrain	√	√	√	√	√	
2002	GMC truck	Envoy - 2WD	Amplifier (bose)	√	√	√	√	√	0550
2002	GMC truck	Envoy - 2WD	Rear seat audio				√		
2002	GMC truck	Envoy - 2WD	Heating and air conditioning				√	√	
2002	GMC truck	Envoy - 2WD	Supplemental inflatable restraint		√	√			0531
2002	GMC truck	Envoy - 2WD	Onstar	√	√	√	√	√	0647 0683
2002	GMC truck	Envoy - 2WD	Radio	√	√	√	√	√	0550
2002	GMC truck	Envoy - 2WD	Rear HVAC/RSA	√	√	√	√	√	0531
2002	GMC truck	Envoy - 2WD	4WAL 3 sensor		√	√	√	√	
2002	GMC truck	Envoy - 2WD	Traction assist (if equipped)		√	√	√	√	
2002	GMC truck	Envoy - 4WD	Powertrain	√	√	√	√	√	
2002	GMC truck	Envoy - 4WD	Amplifier (bose)	√	√	√	√	√	0550

2002	GMC truck	Envoy - 4WD	Rear seat audio				√		
2002	GMC truck	Envoy - 4WD	Heating and air conditioning				√	√	
2002	GMC truck	Envoy - 4WD	Supplemental inflatable restraint		√	√			0531
2002	GMC truck	Envoy - 4WD	Onstar	√	√	√	√	√	0647 0683
2002	GMC truck	Envoy - 4WD	Radio	√	√	√	√	√	0550
2002	GMC truck	Envoy - 4WD	Rear HVAC/RSA	√	√	√	√	√	0531
2002	GMC truck	Envoy - 4WD	4WAL 3 sensor		√	√	√	√	
2002	GMC truck	Envoy - 4WD	Traction assist (if equipped)		√	√	√	√	
2002	GMC truck	GMC C Cab/Chassis HD (GMT 400)	Powertrain	√	√	√	√	√	0571
2002	GMC truck	GMC C Cab/Chassis HD (GMT 400)	Body Control Module	√	√	√	√	√	0523
2002	GMC truck	GMC C Cab/Chassis HD (GMT 400)	Memory mirror module		√	√	√	√	
2002	GMC truck	GMC C Cab/Chassis HD (GMT 400)	Supplemental inflatable restraint		√	√	√		0531
2002	GMC truck	GMC C Cab/Chassis HD (GMT 400)	Onstar	√	√	√	√	√	0647 0683
2002	GMC truck	GMC C Cab/Chassis HD (GMT 400)	RTD (autoride) / EVO		√	√	√	√	
2002	GMC truck	GMC C Cab/Chassis HD (GMT 400)	4WAL 3 sensor		√	√	√	√	0648
2002	GMC truck	GMC C Cab/Chassis HD (GMT 400)	VSES (if equipped)		√	√	√	√	0648
2002	GMC truck	GMC C-Series - 2WD	Powertrain	√	√	√	√	√	0638
2002	GMC truck	GMC C-Series - 2WD	Body Control Module	√	√	√	√	√	0523
2002	GMC truck	GMC C-Series - 2WD	Memory mirror module		√	√	√	√	
2002	GMC truck	GMC C-Series - 2WD	Supplemental inflatable restraint		√	√	√		0531
2002	GMC truck	GMC C-Series - 2WD	Onstar	√	√	√	√	√	0647 0683
2002	GMC truck	GMC C-Series - 2WD	RTD (autoride) / EVO		√	√	√	√	
2002	GMC truck	GMC C-Series - 2WD	4WAL 3 sensor		√	√	√	√	0648
2002	GMC truck	GMC C-Series - 2WD	VSES (if equipped)		√	√	√	√	0648
2002	GMC truck	GMC C-Series - 2WD (CNG)	Powertrain	√	√	√	√	√	0493
2002	GMC truck	GMC C-Series - 2WD (CNG)	Body Control Module	√	√	√	√	√	0523
2002	GMC truck	GMC C-Series - 2WD (CNG)	Memory mirror module		√	√	√	√	
2002	GMC truck	GMC C-Series - 2WD (CNG)	Supplemental inflatable restraint		√	√	√		0531
2002	GMC truck	GMC C-Series - 2WD (CNG)	Onstar	√	√	√	√	√	0647 0683
2002	GMC truck	GMC C-Series - 2WD (CNG)	RTD (autoride) / EVO		√	√	√	√	
2002	GMC truck	GMC C-Series - 2WD (CNG)	4WAL 3 sensor		√	√	√	√	0648
2002	GMC truck	GMC C-Series - 2WD (CNG)	VSES (if equipped)		√	√	√	√	0648
2002	GMC truck	GMC K Sierra - 4WD	Powertrain	√	√	√	√	√	0638
2002	GMC truck	GMC K Sierra - 4WD	Body Control Module	√	√	√	√	√	0523

2002	GMC truck	GMC K Sierra - 4WD	Memory mirror module		√	√	√	√	
2002	GMC truck	GMC K Sierra - 4WD	Supplemental inflatable restraint		√	√	√		0531
2002	GMC truck	GMC K Sierra - 4WD	Onstar	√	√	√	√	√	0647 0683
2002	GMC truck	GMC K Sierra - 4WD	RTD (autoride) / EVO		√	√	√	√	
2002	GMC truck	GMC K Sierra - 4WD	4WAL 3 sensor		√	√	√	√	0648
2002	GMC truck	GMC K Sierra - 4WD	VSES (if equipped)		√	√	√	√	0648
2002	GMC truck	GMC K Sierra - 4WD (CNG)	Powertrain	√	√	√	√	√	
2002	GMC truck	GMC K Sierra - 4WD (CNG)	Body Control Module	√	√	√	√	√	0523
2002	GMC truck	GMC K Sierra - 4WD (CNG)	Memory mirror module		√	√	√	√	
2002	GMC truck	GMC K Sierra - 4WD (CNG)	Supplemental inflatable restraint		√	√	√		0531
2002	GMC truck	GMC K Sierra - 4WD (CNG)	Onstar	√	√	√	√	√	0647 0683
2002	GMC truck	GMC K Sierra - 4WD (CNG)	RTD (autoride) / EVO		√	√	√	√	
2002	GMC truck	GMC K Sierra - 4WD (CNG)	4WAL 3 sensor		√	√	√	√	0648
2002	GMC truck	GMC K Sierra - 4WD (CNG)	VSES (if equipped)		√	√	√	√	0648
2002	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	0638
2002	GMC truck	Jimmy - 2WD	Body Control Module		√	√	√	√	0524
2002	GMC truck	Jimmy - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2002	GMC truck	Jimmy - 2WD	4WAL 3 sensor		√	√	√	√	
2002	GMC truck	Jimmy - 2WD	Traction assist (if equipped)		√	√	√	√	
2002	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	0638
2002	GMC truck	Jimmy - 4WD	Body Control Module		√	√	√	√	0524
2002	GMC truck	Jimmy - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2002	GMC truck	Jimmy - 4WD	4WAL 3 sensor		√	√	√	√	
2002	GMC truck	Jimmy - 4WD	Traction assist (if equipped)		√	√	√	√	
2002	GMC truck	Safari - 2WD	Powertrain	√	√	√	√	√	0638
2002	GMC truck	Safari - 2WD	Body Control Module		√	√	√	√	
2002	GMC truck	Safari - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2002	GMC truck	Safari - 2WD	Instrument panel cluster		√	√		√	0531
2002	GMC truck	Safari - 2WD	4WAL 3 sensor		√	√	√	√	
2002	GMC truck	Safari - 4WD	Powertrain	√	√	√	√	√	0638
2002	GMC truck	Safari - 4WD	Body Control Module		√	√	√	√	
2002	GMC truck	Safari - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2002	GMC truck	Safari - 4WD	Instrument panel cluster		√	√		√	0531
2002	GMC truck	Safari - 4WD	4WAL 3 sensor		√	√	√	√	
2002	GMC truck	Savana (CNG)	Powertrain	√	√	√	√	√	
2002	GMC truck	Savana (CNG)	Immobilizer		√	√	√	√	0706 0707 0708 0709 0710 0524
2002	GMC truck	Savana (CNG)	Supplemental inflatable restraint		√	√	√		0531
2002	GMC truck	Savana - 2WD	Powertrain	√	√	√	√	√	0638
2002	GMC truck	Savana - 2WD	Immobilizer		√	√	√	√	0706 0707 0708 0709 0710 0524
2002	GMC truck	Savana - 2WD	Supplemental inflatable restraint		√	√	√		0531

2002	GMC truck	Sonoma Pickup - 2WD	Powertrain	√	√	√	√	√	0638
2002	GMC truck	Sonoma Pickup - 2WD	Body Control Module		√	√	√	√	0524
2002	GMC truck	Sonoma Pickup - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2002	GMC truck	Sonoma Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
2002	GMC truck	Sonoma Pickup - 2WD	Traction assist (if equipped)		√	√	√	√	
2002	GMC truck	Sonoma Pickup - 4WD	Powertrain	√	√	√	√	√	0638
2002	GMC truck	Sonoma Pickup - 4WD	Body Control Module		√	√	√	√	0524
2002	GMC truck	Sonoma Pickup - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2002	GMC truck	Sonoma Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
2002	GMC truck	Sonoma Pickup - 4WD	Traction assist (if equipped)		√	√	√	√	
2002	GMC truck	Yukon - 2WD	Powertrain	√	√	√	√	√	
2002	GMC truck	Yukon - 2WD	Body Control Module	√	√	√	√	√	0523
2002	GMC truck	Yukon - 2WD	Memory mirror module		√	√	√	√	
2002	GMC truck	Yukon - 2WD	Supplemental inflatable restraint		√	√	√		0531
2002	GMC truck	Yukon - 2WD	Onstar	√	√	√	√	√	0647 0683
2002	GMC truck	Yukon - 2WD	RTD (autoride) / EVO		√	√	√	√	
2002	GMC truck	Yukon - 2WD	4WAL 3 sensor		√	√	√	√	0648
2002	GMC truck	Yukon - 2WD	VSES (if equipped)		√	√	√	√	0648
2002	GMC truck	Yukon - 4WD	Powertrain	√	√	√	√	√	
2002	GMC truck	Yukon - 4WD	Body Control Module	√	√	√	√	√	0523
2002	GMC truck	Yukon - 4WD	Memory mirror module		√	√	√	√	
2002	GMC truck	Yukon - 4WD	Supplemental inflatable restraint		√	√	√		0531
2002	GMC truck	Yukon - 4WD	Onstar	√	√	√	√	√	0647 0683
2002	GMC truck	Yukon - 4WD	RTD (autoride) / EVO		√	√	√	√	
2002	GMC truck	Yukon - 4WD	4WAL 3 sensor		√	√	√	√	0648
2002	GMC truck	Yukon - 4WD	VSES (if equipped)		√	√	√	√	0648
2002	GMC truck	Yukon Denali	Powertrain	√	√	√	√	√	
2002	GMC truck	Yukon Denali	Body Control Module	√	√	√	√	√	0523
2002	GMC truck	Yukon Denali	Memory mirror module		√	√	√	√	
2002	GMC truck	Yukon Denali	Supplemental inflatable restraint		√	√	√		0531
2002	GMC truck	Yukon Denali	Onstar	√	√	√	√	√	0647 0683
2002	GMC truck	Yukon Denali	RTD (autoride) / EVO		√	√	√	√	
2002	GMC truck	Yukon Denali	4WAL 3 sensor		√	√	√	√	0648
2002	GMC truck	Yukon Denali	VSES (if equipped)		√	√	√	√	0648
2002	GMC truck	Yukon XL - 2WD	Powertrain	√	√	√	√	√	0571
2002	GMC truck	Yukon XL - 2WD	Body Control Module	√	√	√	√	√	0523
2002	GMC truck	Yukon XL - 2WD	Memory mirror module		√	√	√	√	
2002	GMC truck	Yukon XL - 2WD	Supplemental inflatable restraint		√	√	√		0531
2002	GMC truck	Yukon XL - 2WD	Onstar	√	√	√	√	√	0647 0683
2002	GMC truck	Yukon XL - 2WD	RTD (autoride) / EVO		√	√	√	√	
2002	GMC truck	Yukon XL - 2WD	4WAL 3 sensor		√	√	√	√	0648

2002	GMC truck	Yukon XL - 2WD	VSES (if equipped)		√	√	√	√	0648
2002	GMC truck	Yukon XL - 4WD	Powertrain	√	√	√	√	√	0571
2002	GMC truck	Yukon XL - 4WD	Body Control Module	√	√	√	√	√	0523
2002	GMC truck	Yukon XL - 4WD	Memory mirror module		√	√	√	√	
2002	GMC truck	Yukon XL - 4WD	Supplemental inflatable restraint		√	√	√		0531
2002	GMC truck	Yukon XL - 4WD	Onstar	√	√	√	√	√	0647 0683
2002	GMC truck	Yukon XL - 4WD	RTD (autoride) / EVO		√	√	√	√	
2002	GMC truck	Yukon XL - 4WD	4WAL 3 sensor		√	√	√	√	0648
2002	GMC truck	Yukon XL - 4WD	VSES (if equipped)		√	√	√	√	0648
2001	GMC truck	Envoy - 4WD	Powertrain	√	√	√	√	√	0493
2001	GMC truck	Envoy - 4WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Envoy - 4WD	Body Control Module		√	√	√	√	
2001	GMC truck	Envoy - 4WD	Onstar	√	√	√	√	√	0683
2001	GMC truck	Envoy - 4WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	GMC C Cab/Chassis HD (GMT 400)	Powertrain	√	√	√	√	√	0571
2001	GMC truck	GMC C Cab/Chassis HD (GMT 400)	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	GMC C Cab/Chassis HD (GMT 400)	Passlock		√	√	√	√	
2001	GMC truck	GMC C Cab/Chassis HD (GMT 400)	Onstar	√	√	√	√	√	0683
2001	GMC truck	GMC C Cab/Chassis HD (GMT 400)	RTD (autoride) / EVO		√	√	√	√	
2001	GMC truck	GMC C Cab/Chassis HD (GMT 400)	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	GMC C-Series - 2WD	Powertrain	√	√	√	√	√	0638
2001	GMC truck	GMC C-Series - 2WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	GMC C-Series - 2WD	Passlock		√	√	√	√	
2001	GMC truck	GMC C-Series - 2WD	Onstar	√	√	√	√	√	0683
2001	GMC truck	GMC C-Series - 2WD	RTD (autoride) / EVO		√	√	√	√	
2001	GMC truck	GMC C-Series - 2WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	GMC K Sierra - 4WD	Powertrain	√	√	√	√	√	0638
2001	GMC truck	GMC K Sierra - 4WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	GMC K Sierra - 4WD	Passlock		√	√	√	√	
2001	GMC truck	GMC K Sierra - 4WD	Onstar	√	√	√	√	√	0683
2001	GMC truck	GMC K Sierra - 4WD	RTD (autoride) / EVO		√	√	√	√	
2001	GMC truck	GMC K Sierra - 4WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	0638
2001	GMC truck	Jimmy - 2WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Jimmy - 2WD	Body Control Module		√	√	√	√	
2001	GMC truck	Jimmy - 2WD	Onstar	√	√	√	√	√	0683

2001	GMC truck	Jimmy - 2WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	0638
2001	GMC truck	Jimmy - 4WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Jimmy - 4WD	Body Control Module		√	√	√	√	
2001	GMC truck	Jimmy - 4WD	Onstar	√	√	√	√	√	0683
2001	GMC truck	Jimmy - 4WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	Safari - 2WD	Powertrain	√	√	√	√	√	0638
2001	GMC truck	Safari - 2WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Safari - 2WD	Body Control Module		√	√	√	√	
2001	GMC truck	Safari - 2WD	Instrument panel cluster					√	
2001	GMC truck	Safari - 2WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	Safari - 4WD	Powertrain	√	√	√	√	√	0638
2001	GMC truck	Safari - 4WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Safari - 4WD	Body Control Module		√	√	√	√	
2001	GMC truck	Safari - 4WD	Instrument panel cluster					√	
2001	GMC truck	Safari - 4WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	Savana - 2WD	Powertrain	√	√	√	√	√	0638
2001	GMC truck	Savana - 2WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Savana - 2WD	Immobilizer		√	√	√	√	0706 0707 0708 0709 0710 0524
2001	GMC truck	Sonoma Pickup - 2WD	Powertrain	√	√	√	√	√	0638
2001	GMC truck	Sonoma Pickup - 2WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Sonoma Pickup - 2WD	Body Control Module		√	√	√	√	
2001	GMC truck	Sonoma Pickup - 2WD	Onstar	√	√	√	√	√	0683
2001	GMC truck	Sonoma Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	Sonoma Pickup - 4WD	Powertrain	√	√	√	√	√	0638
2001	GMC truck	Sonoma Pickup - 4WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Sonoma Pickup - 4WD	Body Control Module		√	√	√	√	
2001	GMC truck	Sonoma Pickup - 4WD	Onstar	√	√	√	√	√	0683
2001	GMC truck	Sonoma Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	Yukon - 2WD	Powertrain	√	√	√	√	√	
2001	GMC truck	Yukon - 2WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Yukon - 2WD	Passlock		√	√	√	√	
2001	GMC truck	Yukon - 2WD	Onstar	√	√	√	√	√	0683
2001	GMC truck	Yukon - 2WD	RTD (autoride) / EVO		√	√	√	√	
2001	GMC truck	Yukon - 2WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	Yukon - 4WD	Powertrain	√	√	√	√	√	
2001	GMC truck	Yukon - 4WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Yukon - 4WD	Passlock		√	√	√	√	
2001	GMC truck	Yukon - 4WD	Onstar	√	√	√	√	√	0683
2001	GMC truck	Yukon - 4WD	RTD (autoride) / EVO		√	√	√	√	

2001	GMC truck	Yukon - 4WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	Yukon Denali	Powertrain	√	√	√	√	√	
2001	GMC truck	Yukon Denali	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Yukon Denali	Passlock		√	√	√	√	
2001	GMC truck	Yukon Denali	Onstar	√	√	√	√	√	0683
2001	GMC truck	Yukon Denali	RTD (autoride) / EVO		√	√	√	√	
2001	GMC truck	Yukon Denali	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	Yukon XL - 2WD	Powertrain	√	√	√	√	√	0571
2001	GMC truck	Yukon XL - 2WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Yukon XL - 2WD	Passlock		√	√	√	√	
2001	GMC truck	Yukon XL - 2WD	Onstar	√	√	√	√	√	0683
2001	GMC truck	Yukon XL - 2WD	RTD (autoride) / EVO		√	√	√	√	
2001	GMC truck	Yukon XL - 2WD	4WAL 3 sensor		√	√	√	√	
2001	GMC truck	Yukon XL - 4WD	Powertrain	√	√	√	√	√	0571
2001	GMC truck	Yukon XL - 4WD	Supplemental inflatable restraint		√	√	√		
2001	GMC truck	Yukon XL - 4WD	Passlock		√	√	√	√	
2001	GMC truck	Yukon XL - 4WD	Onstar	√	√	√	√	√	0683
2001	GMC truck	Yukon XL - 4WD	RTD (autoride) / EVO		√	√	√	√	
2001	GMC truck	Yukon XL - 4WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	Envoy - 4WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Envoy - 4WD	Body Control Module		√	√	√	√	
2000	GMC truck	Envoy - 4WD	Onstar	√	√	√	√		0683
2000	GMC truck	Envoy - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0531
2000	GMC truck	Envoy - 4WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	GMC C Pickup - 2WD	Powertrain	√	√	√	√	√	
2000	GMC truck	GMC C Pickup - 2WD	Passlock		√	√	√	√	
2000	GMC truck	GMC C Pickup - 2WD	Memory seat module		√	√			
2000	GMC truck	GMC C Pickup - 2WD	Onstar (VS-3B)		√	√	√		
2000	GMC truck	GMC C Pickup - 2WD	Onstar		√	√	√		0683
2000	GMC truck	GMC C Pickup - 2WD	Supplemental inflatable restraint						0531
2000	GMC truck	GMC C Pickup - 2WD	RTD (autoride) / EVO		√	√	√	√	
2000	GMC truck	GMC C Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	GMC C Pickup - 2WD	Powertrain	√	√	√	√	√	
2000	GMC truck	GMC C Pickup - 2WD	Passlock		√	√	√	√	
2000	GMC truck	GMC C Pickup - 2WD	Memory seat module		√	√			
2000	GMC truck	GMC C Pickup - 2WD	Onstar (VS-3B)		√	√	√		
2000	GMC truck	GMC C Pickup - 2WD	Onstar		√	√	√		0683
2000	GMC truck	GMC C Pickup - 2WD	Supplemental inflatable restraint						0531
2000	GMC truck	GMC C Pickup - 2WD	RTD (autoride) / EVO		√	√	√	√	
2000	GMC truck	GMC C Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	GMC C-Series - 2WD	Powertrain	√	√	√	√	√	

2000	GMC truck	GMC C-Series - 2WD	Passlock		√	√	√	√	
2000	GMC truck	GMC C-Series - 2WD	Memory seat module		√	√			
2000	GMC truck	GMC C-Series - 2WD	Onstar (VS-3B)		√	√	√		
2000	GMC truck	GMC C-Series - 2WD	Onstar		√	√	√		0683
2000	GMC truck	GMC C-Series - 2WD	Supplemental inflatable restraint						0531
2000	GMC truck	GMC C-Series - 2WD	RTD (autoride) / EVO		√	√	√	√	
2000	GMC truck	GMC C-Series - 2WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	GMC K Pickup - 4WD	Powertrain	√	√	√	√	√	
2000	GMC truck	GMC K Pickup - 4WD	Passlock		√	√	√	√	
2000	GMC truck	GMC K Pickup - 4WD	Memory seat module		√	√			
2000	GMC truck	GMC K Pickup - 4WD	Onstar (VS-3B)		√	√	√		
2000	GMC truck	GMC K Pickup - 4WD	Onstar		√	√	√		0683
2000	GMC truck	GMC K Pickup - 4WD	Supplemental inflatable restraint						0531
2000	GMC truck	GMC K Pickup - 4WD	RTD (autoride) / EVO		√	√	√	√	
2000	GMC truck	GMC K Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	GMC K Pickup - 4WD	Powertrain	√	√	√	√	√	
2000	GMC truck	GMC K Pickup - 4WD	Passlock		√	√	√	√	
2000	GMC truck	GMC K Pickup - 4WD	Memory seat module		√	√			
2000	GMC truck	GMC K Pickup - 4WD	Onstar (VS-3B)		√	√	√		
2000	GMC truck	GMC K Pickup - 4WD	Onstar		√	√	√		0683
2000	GMC truck	GMC K Pickup - 4WD	Supplemental inflatable restraint						0531
2000	GMC truck	GMC K Pickup - 4WD	RTD (autoride) / EVO		√	√	√	√	
2000	GMC truck	GMC K Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	GMC K Sierra - 4WD	Powertrain	√	√	√	√	√	
2000	GMC truck	GMC K Sierra - 4WD	Passlock		√	√	√	√	
2000	GMC truck	GMC K Sierra - 4WD	Memory seat module		√	√			
2000	GMC truck	GMC K Sierra - 4WD	Onstar (VS-3B)		√	√	√		
2000	GMC truck	GMC K Sierra - 4WD	Onstar		√	√	√		0683
2000	GMC truck	GMC K Sierra - 4WD	Supplemental inflatable restraint						0531
2000	GMC truck	GMC K Sierra - 4WD	RTD (autoride) / EVO		√	√	√	√	
2000	GMC truck	GMC K Sierra - 4WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Jimmy - 2WD	Body Control Module		√	√	√	√	
2000	GMC truck	Jimmy - 2WD	Onstar	√	√	√	√		0683
2000	GMC truck	Jimmy - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0531
2000	GMC truck	Jimmy - 2WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Jimmy - 4WD	Body Control Module		√	√	√	√	
2000	GMC truck	Jimmy - 4WD	Onstar	√	√	√	√		0683
2000	GMC truck	Jimmy - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0531
2000	GMC truck	Jimmy - 4WD	4WAL 3 sensor		√	√	√	√	



2000	GMC truck	Safari - 2WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Safari - 2WD	Body Control Module		√	√	√	√	
2000	GMC truck	Safari - 2WD	Instrument panel cluster					√	
2000	GMC truck	Safari - 2WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	Safari - 4WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Safari - 4WD	Body Control Module		√	√	√	√	
2000	GMC truck	Safari - 4WD	Instrument panel cluster					√	
2000	GMC truck	Safari - 4WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	Savana - 2WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Savana - 2WD	Immobilizer		√	√	√	√	0706 0707 0708 0709
2000	GMC truck	Sonoma Pickup - 2WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Sonoma Pickup - 2WD	Body Control Module		√	√	√	√	
2000	GMC truck	Sonoma Pickup - 2WD	Onstar	√	√	√	√		0683
2000	GMC truck	Sonoma Pickup - 2WD	Supplemental inflatable restraint	√	√	√	√	√	0531
2000	GMC truck	Sonoma Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	Sonoma Pickup - 4WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Sonoma Pickup - 4WD	Body Control Module		√	√	√	√	
2000	GMC truck	Sonoma Pickup - 4WD	Onstar	√	√	√	√		0683
2000	GMC truck	Sonoma Pickup - 4WD	Supplemental inflatable restraint	√	√	√	√	√	0531
2000	GMC truck	Sonoma Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	Yukon - 2WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Yukon - 2WD	Passlock		√	√	√	√	
2000	GMC truck	Yukon - 2WD	Memory seat module		√	√			
2000	GMC truck	Yukon - 2WD	Onstar (VS-3B)		√	√	√		
2000	GMC truck	Yukon - 2WD	Onstar		√	√	√		0683
2000	GMC truck	Yukon - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2000	GMC truck	Yukon - 2WD	RTD (autoride) / EVO		√	√	√	√	
2000	GMC truck	Yukon - 2WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	Yukon - 4WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Yukon - 4WD	Passlock		√	√	√	√	
2000	GMC truck	Yukon - 4WD	Memory seat module		√	√			
2000	GMC truck	Yukon - 4WD	Onstar (VS-3B)		√	√	√		
2000	GMC truck	Yukon - 4WD	Onstar		√	√	√		0683
2000	GMC truck	Yukon - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2000	GMC truck	Yukon - 4WD	RTD (autoride) / EVO		√	√	√	√	
2000	GMC truck	Yukon - 4WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	Yukon Denali	Powertrain	√	√	√	√	√	
2000	GMC truck	Yukon Denali	Passlock		√	√	√	√	
2000	GMC truck	Yukon Denali	Memory seat module		√	√			
2000	GMC truck	Yukon Denali	Onstar (VS-3B)		√	√	√		
2000	GMC truck	Yukon Denali	Onstar		√	√	√		0683

2000	GMC truck	Yukon Denali	Supplemental inflatable restraint		√	√	√	√	0531
2000	GMC truck	Yukon Denali	RTD (autoride) / EVO		√	√	√	√	
2000	GMC truck	Yukon Denali	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	Yukon XL - 2WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Yukon XL - 2WD	Passlock		√	√	√	√	
2000	GMC truck	Yukon XL - 2WD	Memory seat module		√	√			
2000	GMC truck	Yukon XL - 2WD	Onstar (VS-3B)		√	√	√		
2000	GMC truck	Yukon XL - 2WD	Onstar		√	√	√		0683
2000	GMC truck	Yukon XL - 2WD	Supplemental inflatable restraint		√	√	√	√	0531
2000	GMC truck	Yukon XL - 2WD	RTD (autoride) / EVO		√	√	√	√	
2000	GMC truck	Yukon XL - 2WD	4WAL 3 sensor		√	√	√	√	
2000	GMC truck	Yukon XL - 4WD	Powertrain	√	√	√	√	√	
2000	GMC truck	Yukon XL - 4WD	Passlock		√	√	√	√	
2000	GMC truck	Yukon XL - 4WD	Memory seat module		√	√			
2000	GMC truck	Yukon XL - 4WD	Onstar (VS-3B)		√	√	√		
2000	GMC truck	Yukon XL - 4WD	Onstar		√	√	√		0683
2000	GMC truck	Yukon XL - 4WD	Supplemental inflatable restraint		√	√	√	√	0531
2000	GMC truck	Yukon XL - 4WD	RTD (autoride) / EVO		√	√	√	√	
2000	GMC truck	Yukon XL - 4WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	Envoy - 4WD	Powertrain	√	√	√	√	√	
1999	GMC truck	Envoy - 4WD	Heating and air conditioning		√	√	√	√	
1999	GMC truck	Envoy - 4WD	Body Control Module		√	√	√	√	
1999	GMC truck	Envoy - 4WD	Onstar		√	√	√		0683
1999	GMC truck	Envoy - 4WD	Onstar (VS-3B)		√	√	√	√	0683
1999	GMC truck	Envoy - 4WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	GMC C Pickup - 2WD	Powertrain	√	√	√	√	√	
1999	GMC truck	GMC C Pickup - 2WD	Passlock		√	√	√	√	
1999	GMC truck	GMC C Pickup - 2WD	Onstar		√	√	√		0683
1999	GMC truck	GMC C Pickup - 2WD	Onstar (VS-3B)		√	√	√		
1999	GMC truck	GMC C Pickup - 2WD	Electronic variable orifice		√	√	√		
1999	GMC truck	GMC C Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	GMC C Pickup - 2WD	Powertrain	√	√	√	√	√	
1999	GMC truck	GMC C Pickup - 2WD	Passlock		√	√	√	√	
1999	GMC truck	GMC C Pickup - 2WD	Onstar		√	√	√		0683
1999	GMC truck	GMC C Pickup - 2WD	Onstar (VS-3B)		√	√	√		
1999	GMC truck	GMC C Pickup - 2WD	Electronic variable orifice		√	√	√		
1999	GMC truck	GMC C Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	GMC C-Series - 2WD	Powertrain	√	√	√	√	√	
1999	GMC truck	GMC C-Series - 2WD	Passlock		√	√	√	√	
1999	GMC truck	GMC C-Series - 2WD	Onstar		√	√	√		0683
1999	GMC truck	GMC C-Series - 2WD	Onstar (VS-3B)		√	√	√		

1999	GMC truck	GMC C-Series - 2WD	Electronic variable orifice		√	√	√		
1999	GMC truck	GMC C-Series - 2WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	GMC K Pickup - 4WD	Powertrain	√	√	√	√	√	
1999	GMC truck	GMC K Pickup - 4WD	Passlock		√	√	√	√	
1999	GMC truck	GMC K Pickup - 4WD	Onstar		√	√	√		0683
1999	GMC truck	GMC K Pickup - 4WD	Onstar (VS-3B)		√	√	√		
1999	GMC truck	GMC K Pickup - 4WD	Electronic variable orifice		√	√	√		
1999	GMC truck	GMC K Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	GMC K Pickup - 4WD	Powertrain	√	√	√	√	√	
1999	GMC truck	GMC K Pickup - 4WD	Passlock		√	√	√	√	
1999	GMC truck	GMC K Pickup - 4WD	Onstar		√	√	√		0683
1999	GMC truck	GMC K Pickup - 4WD	Onstar (VS-3B)		√	√	√		
1999	GMC truck	GMC K Pickup - 4WD	Electronic variable orifice		√	√	√		
1999	GMC truck	GMC K Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	GMC K Sierra - 4WD	Powertrain	√	√	√	√	√	
1999	GMC truck	GMC K Sierra - 4WD	Passlock		√	√	√	√	
1999	GMC truck	GMC K Sierra - 4WD	Onstar		√	√	√		0683
1999	GMC truck	GMC K Sierra - 4WD	Onstar (VS-3B)		√	√	√		
1999	GMC truck	GMC K Sierra - 4WD	Electronic variable orifice		√	√	√		
1999	GMC truck	GMC K Sierra - 4WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	GMC Suburban - 2WD	Powertrain	√	√	√	√	√	
1999	GMC truck	GMC Suburban - 2WD	Passlock		√	√	√	√	
1999	GMC truck	GMC Suburban - 2WD	Onstar		√	√	√		0683
1999	GMC truck	GMC Suburban - 2WD	Onstar (VS-3B)		√	√	√	√	0683
1999	GMC truck	GMC Suburban - 2WD	Electronic variable orifice		√	√	√		
1999	GMC truck	GMC Suburban - 2WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	GMC Suburban - 4WD	Powertrain	√	√	√	√	√	
1999	GMC truck	GMC Suburban - 4WD	Passlock		√	√	√	√	
1999	GMC truck	GMC Suburban - 4WD	Onstar		√	√	√		0683
1999	GMC truck	GMC Suburban - 4WD	Onstar (VS-3B)		√	√	√	√	0683
1999	GMC truck	GMC Suburban - 4WD	Electronic variable orifice		√	√	√		
1999	GMC truck	GMC Suburban - 4WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	
1999	GMC truck	Jimmy - 2WD	Heating and air conditioning		√	√	√	√	
1999	GMC truck	Jimmy - 2WD	Body Control Module		√	√	√	√	
1999	GMC truck	Jimmy - 2WD	Onstar		√	√	√		0683
1999	GMC truck	Jimmy - 2WD	Onstar (VS-3B)		√	√	√	√	0683
1999	GMC truck	Jimmy - 2WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	
1999	GMC truck	Jimmy - 4WD	Heating and air conditioning		√	√	√	√	
1999	GMC truck	Jimmy - 4WD	Body Control Module		√	√	√	√	

1999	GMC truck	Jimmy - 4WD	Onstar		√	√	√		0683
1999	GMC truck	Jimmy - 4WD	Onstar (VS-3B)		√	√	√	√	0683
1999	GMC truck	Jimmy - 4WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	Safari - 2WD	Powertrain	√	√	√	√	√	
1999	GMC truck	Safari - 2WD	Passlock		√	√	√	√	
1999	GMC truck	Safari - 2WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	Safari - 4WD	Powertrain	√	√	√	√	√	
1999	GMC truck	Safari - 4WD	Passlock		√	√	√	√	
1999	GMC truck	Safari - 4WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	Savana - 2WD	Powertrain	√	√	√	√	√	
1999	GMC truck	Savana - 2WD	Passlock		√	√	√	√	
1999	GMC truck	Savana - 2WD	Immobilizer		√	√	√	√	0706 0707 0708 0709
1999	GMC truck	Sonoma Pickup - 2WD	Powertrain	√	√	√	√	√	
1999	GMC truck	Sonoma Pickup - 2WD	Heating and air conditioning		√	√	√	√	
1999	GMC truck	Sonoma Pickup - 2WD	Body Control Module		√	√	√	√	
1999	GMC truck	Sonoma Pickup - 2WD	Onstar		√	√	√		0683
1999	GMC truck	Sonoma Pickup - 2WD	Onstar (VS-3B)		√	√	√	√	0683
1999	GMC truck	Sonoma Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	Sonoma Pickup - 4WD	Powertrain	√	√	√	√	√	
1999	GMC truck	Sonoma Pickup - 4WD	Heating and air conditioning		√	√	√	√	
1999	GMC truck	Sonoma Pickup - 4WD	Body Control Module		√	√	√	√	
1999	GMC truck	Sonoma Pickup - 4WD	Onstar		√	√	√		0683
1999	GMC truck	Sonoma Pickup - 4WD	Onstar (VS-3B)		√	√	√	√	0683
1999	GMC truck	Sonoma Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	Yukon - 2WD	Powertrain	√	√	√	√	√	
1999	GMC truck	Yukon - 2WD	Passlock		√	√	√	√	
1999	GMC truck	Yukon - 2WD	Onstar		√	√	√		0683
1999	GMC truck	Yukon - 2WD	Onstar (VS-3B)		√	√	√	√	0683
1999	GMC truck	Yukon - 2WD	Electronic variable orifice		√	√	√		
1999	GMC truck	Yukon - 2WD	4WAL 3 sensor		√	√	√	√	
1999	GMC truck	Yukon - 4WD	Powertrain	√	√	√	√	√	
1999	GMC truck	Yukon - 4WD	Passlock		√	√	√	√	
1999	GMC truck	Yukon - 4WD	Onstar		√	√	√		0683
1999	GMC truck	Yukon - 4WD	Onstar (VS-3B)		√	√	√	√	0683
1999	GMC truck	Yukon - 4WD	Electronic variable orifice		√	√	√		
1999	GMC truck	Yukon - 4WD	4WAL 3 sensor		√	√	√	√	
1998	GMC truck	GMC C Pickup - 2WD	Powertrain	√	√	√	√	√	
1998	GMC truck	GMC C Pickup - 2WD	Passlock		√	√	√	√	
1998	GMC truck	GMC C Pickup - 2WD	Onstar		√	√	√	√	0683
1998	GMC truck	GMC C Pickup - 2WD	Electronic variable orifice		√	√	√		
1998	GMC truck	GMC C Pickup - 2WD	4WAL 3 sensor		√	√	√	√	

1998	GMC truck	GMC C Pickup - 2WD	Powertrain	√	√	√	√	√	
1998	GMC truck	GMC C Pickup - 2WD	Passlock		√	√	√	√	
1998	GMC truck	GMC C Pickup - 2WD	Onstar		√	√	√		0683
1998	GMC truck	GMC C Pickup - 2WD	Electronic variable orifice		√	√	√		
1998	GMC truck	GMC C Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
1998	GMC truck	GMC K Pickup - 4WD	Powertrain	√	√	√	√	√	
1998	GMC truck	GMC K Pickup - 4WD	Passlock		√	√	√	√	
1998	GMC truck	GMC K Pickup - 4WD	Onstar		√	√	√		0683
1998	GMC truck	GMC K Pickup - 4WD	Electronic variable orifice		√	√	√		
1998	GMC truck	GMC K Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
1998	GMC truck	GMC Suburban - 2WD	Powertrain	√	√	√	√	√	
1998	GMC truck	GMC Suburban - 2WD	Passlock		√	√	√	√	
1998	GMC truck	GMC Suburban - 2WD	Onstar		√	√	√	√	0683
1998	GMC truck	GMC Suburban - 2WD	Electronic variable orifice		√	√	√		
1998	GMC truck	GMC Suburban - 2WD	4WAL 3 sensor		√	√	√	√	
1998	GMC truck	GMC Suburban - 4WD	Powertrain	√	√	√	√	√	
1998	GMC truck	GMC Suburban - 4WD	Passlock		√	√	√	√	
1998	GMC truck	GMC Suburban - 4WD	Onstar		√	√	√	√	0683
1998	GMC truck	GMC Suburban - 4WD	Electronic variable orifice		√	√	√		
1998	GMC truck	GMC Suburban - 4WD	4WAL 3 sensor		√	√	√	√	
1998	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	
1998	GMC truck	Jimmy - 2WD	Heating and air conditioning		√	√	√	√	
1998	GMC truck	Jimmy - 2WD	Body Control Module		√	√	√	√	
1998	GMC truck	Jimmy - 2WD	Onstar		√	√	√	√	0683
1998	GMC truck	Jimmy - 2WD	4WAL 3 sensor		√	√	√	√	
1998	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	
1998	GMC truck	Jimmy - 4WD	Heating and air conditioning		√	√	√	√	
1998	GMC truck	Jimmy - 4WD	Body Control Module		√	√	√	√	
1998	GMC truck	Jimmy - 4WD	Onstar		√	√	√	√	0683
1998	GMC truck	Jimmy - 4WD	4WAL 3 sensor		√	√	√	√	
1998	GMC truck	Safari - 2WD	Powertrain	√	√	√	√	√	
1998	GMC truck	Safari - 2WD	Passlock		√	√	√	√	
1998	GMC truck	Safari - 2WD	Electronic variable orifice		√	√	√		
1998	GMC truck	Safari - 4WD	Powertrain	√	√	√	√	√	
1998	GMC truck	Safari - 4WD	Passlock		√	√	√	√	
1998	GMC truck	Safari - 4WD	Electronic variable orifice		√	√	√		
1998	GMC truck	Savana - 2WD	Powertrain	√	√	√	√	√	
1998	GMC truck	Savana - 2WD	Passlock		√	√	√	√	
1998	GMC truck	Savana - 2WD	Immobilizer		√	√	√	√	0706 0707 0708 0709
1998	GMC truck	Savana - 2WD	Electronic variable orifice		√	√	√		
1998	GMC truck	Sonoma Pickup - 2WD	Powertrain	√	√	√	√	√	

1998	GMC truck	Sonoma Pickup - 2WD	Heating and air conditioning		√	√	√	√	
1998	GMC truck	Sonoma Pickup - 2WD	Body Control Module		√	√	√	√	
1998	GMC truck	Sonoma Pickup - 2WD	Onstar		√	√	√	√	0683
1998	GMC truck	Sonoma Pickup - 2WD	4WAL 3 sensor		√	√	√	√	
1998	GMC truck	Sonoma Pickup - 4WD	Powertrain	√	√	√	√	√	
1998	GMC truck	Sonoma Pickup - 4WD	Heating and air conditioning		√	√	√	√	
1998	GMC truck	Sonoma Pickup - 4WD	Body Control Module		√	√	√	√	
1998	GMC truck	Sonoma Pickup - 4WD	Onstar		√	√	√	√	0683
1998	GMC truck	Sonoma Pickup - 4WD	4WAL 3 sensor		√	√	√	√	
1998	GMC truck	Yukon - 2WD	Powertrain	√	√	√	√	√	
1998	GMC truck	Yukon - 2WD	Passlock		√	√	√	√	
1998	GMC truck	Yukon - 2WD	Onstar		√	√	√	√	0683
1998	GMC truck	Yukon - 2WD	Electronic variable orifice		√	√	√		
1998	GMC truck	Yukon - 2WD	4WAL 3 sensor		√	√	√	√	
1998	GMC truck	Yukon - 4WD	Powertrain	√	√	√	√	√	
1998	GMC truck	Yukon - 4WD	Passlock		√	√	√	√	
1998	GMC truck	Yukon - 4WD	Onstar		√	√	√	√	0683
1998	GMC truck	Yukon - 4WD	Electronic variable orifice		√	√	√		
1998	GMC truck	Yukon - 4WD	4WAL 3 sensor		√	√	√	√	
1997	GMC truck	Export Savana	Powertrain	√	√	√	√	√	
1997	GMC truck	Export Savana	Electronic variable orifice		√	√	√	√	
1997	GMC truck	GMC C Pickup - 2WD	Powertrain	√	√	√	√	√	
1997	GMC truck	GMC C Pickup - 2WD	Electronic variable orifice		√	√	√	√	
1997	GMC truck	GMC C Pickup - 2WD	Powertrain	√	√	√	√	√	
1997	GMC truck	GMC C Pickup - 2WD	Electronic variable orifice		√	√	√	√	
1997	GMC truck	GMC K Pickup - 4WD	Powertrain	√	√	√	√	√	
1997	GMC truck	GMC K Pickup - 4WD	Electronic variable orifice		√	√	√	√	
1997	GMC truck	GMC Suburban - 2WD	Powertrain	√	√	√	√	√	
1997	GMC truck	GMC Suburban - 2WD	Electronic variable orifice		√	√	√	√	
1997	GMC truck	GMC Suburban - 4WD	Powertrain	√	√	√	√	√	
1997	GMC truck	GMC Suburban - 4WD	Electronic variable orifice		√	√	√	√	
1997	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	
1997	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	
1997	GMC truck	Safari - 2WD	Powertrain	√	√	√	√	√	
1997	GMC truck	Safari - 2WD	Electronic variable orifice		√	√	√	√	
1997	GMC truck	Safari - 4WD	Powertrain	√	√	√	√	√	
1997	GMC truck	Safari - 4WD	Electronic variable orifice		√	√	√	√	
1997	GMC truck	Savana - 2WD	Powertrain	√	√	√	√	√	
1997	GMC truck	Savana - 2WD	Electronic variable orifice		√	√	√	√	
1997	GMC truck	Sonoma Pickup - 2WD	Powertrain	√	√	√	√	√	
1997	GMC truck	Sonoma Pickup - 4WD	Powertrain	√	√	√	√	√	

1997	GMC truck	Yukon - 2WD	Powertrain	√	√	√	√	√	
1997	GMC truck	Yukon - 2WD	Electronic variable orifice		√	√	√	√	
1997	GMC truck	Yukon - 4WD	Powertrain	√	√	√	√	√	
1997	GMC truck	Yukon - 4WD	Electronic variable orifice		√	√	√	√	
1996	GMC truck	GMC C Pickup - 2WD	Powertrain	√	√	√	√	√	
1996	GMC truck	GMC G Van	Powertrain	√	√	√	√	√	
1996	GMC truck	GMC K Pickup - 4WD	Powertrain	√	√	√	√	√	
1996	GMC truck	GMC Suburban - 2WD	Powertrain	√	√	√	√	√	
1996	GMC truck	GMC Suburban - 4WD	Powertrain	√	√	√	√	√	
1996	GMC truck	Jimmy - 2WD	Powertrain	√	√	√	√	√	
1996	GMC truck	Jimmy - 2WD	VCM 4WAL				√	√	
1996	GMC truck	Jimmy - 4WD	Powertrain	√	√	√	√	√	
1996	GMC truck	Jimmy - 4WD	VCM 4WAL				√	√	
1996	GMC truck	Safari - 2WD	Powertrain	√	√	√	√	√	
1996	GMC truck	Safari - 4WD	Powertrain	√	√	√	√	√	
1996	GMC truck	Sonoma Pickup - 2WD	Powertrain	√	√	√	√	√	
1996	GMC truck	Sonoma Pickup - 2WD	VCM 4WAL				√	√	
1996	GMC truck	Sonoma Pickup - 4WD	Powertrain	√	√	√	√	√	
1996	GMC truck	Sonoma Pickup - 4WD	VCM 4WAL				√	√	
1996	GMC truck	Yukon - 2WD	Powertrain	√	√	√	√	√	
1996	GMC truck	Yukon - 4WD	Powertrain	√	√	√	√	√	

# Special Functions List

No.	Functions Name
SP0000	1-2 Shift Adapt Data
SP0001	14V Power Module
SP0002	ABS Motor
SP0003	AWD Disabled-by-Malfunction Counter Reset
SP0004	B237D Easy Entry Seat Position Sensor - Driver Learn
SP0005	B237P Easy Entry Seat Position Sensor - Passenger Learn
SP0006	HO2S Heater Resistance Learned Values Reset
SP0007	HVAC Actuators Learn
SP0008	MOST Bus Diagnostic Starting Point
SP0009	PTO Operation Mode
SP0010	WLAN Service Set Identifier (SSID) Reset
SP0011	WLAN Password Reset
SP0012	Backup Battery Test
SP0013	Backup Park Lock Actuator Disarming
SP0014	Transmission Range Control Module Range Motor Position Learn
SP0015	Transmission Learn Data
SP0016	Transmission Adaptive Pressure Reset
SP0017	Transmission Service Fast Learn
SP0018	Transmission Adaptive Torque Reset
SP0019	Transmission Adaptive Values Learn
SP0020	Gear Selector -N- Position Learn
SP0021	Transmission Solenoid Valves Calibration Preset
SP0022	Shift Transmission Gear
SP0023	Transmission Clutch 1 Return Spring Learn
SP0024	Transmission Clutch 1 Volume Learn
SP0025	Transmission Clutch 2 Return Spring Learn
SP0026	Transmission Clutch 2 Volume Learn
SP0027	Transmission Clutch 3 Return Spring Learn



SP0028	Transmission Clutch 3 Volume Learn
SP0029	Transmission Clutch 4 Return Spring Learn
SP0030	Transmission Clutch 4 Volume Learn
SP0031	Transmission Clutch 5 Return Spring Learn
SP0032	Transmission Clutch 5 Volume Learn
SP0033	Transmission Clutch Learn Status
SP0034	Transmission Adaptive Pressure Reset
SP0035	Transmission Learn
SP0036	Transmission Oil Life Reset
SP0037	Range Actuator Learn
SP0038	Manual Door Locks (-AU3)(-AU4) Without Seat Belt Pretensioner (-A70)
SP0039	Electric Door Locks (AU3) Without Seat Belt Pretensioner (-A70)
SP0040	Automatic Electric Door Locks (AU4) Without Seat Belt Pretensioner (-A70)
SP0041	Retained Accessory Power
SP0042	DPF/Catalyst 2 Reset
SP0043	DPF Service Regeneration
SP0044	DPF Pressure Sensor Reset
SP0045	DPF Reset
SP0046	Lane Departure Warning Indicator
SP0047	Distance Sensing Cruise Control Module
SP0048	Vehicle Health Data Upload
SP0049	Vehicle Direction Camera Learn
SP0050	Vehicle Inclination Sensor
SP0051	VIN Digits 10-17 Right Headlamp High Beam Control Module
SP0052	VIN Digits 10-17 Left Headlamp High Beam Control Module
SP0053	Vehicle Model
SP0054	Content Theft - Exterior Lamp Flash
SP0055	Content Theft - Horn Chirp / Door Key Cylinder Disarming
SP0056	Passenger Compartment Heater Coolant Control Solenoid Valve Learn
SP0057	Passenger Presence Sensor Learn
SP0058	Catalyst 1 Reset
SP0059	Catalyst Test

SP0060	Catalyst Reset
SP0061	BARO Sensor Reset
SP0062	Manual Door Locks (-AU3)(-AU4) With Seat Belt Pretensioner (A70)
SP0063	Electric Door Locks (AU3) With Seat Belt Pretensioner (A70)
SP0064	Automatic Electric Door Locks (AU4) With Seat Belt Pretensioner (A70)
SP0065	Code Index
SP0066	Idle Speed Adjustment
SP0067	Idle Learn
SP0068	Idle Air Control Reset
SP0069	Idle Speed Control Reset
SP0070	NOx Sensor 1 Reset
SP0071	NOx Sensor 2 Reset
SP0072	NOx Catalyst Reductant Loading Reset
SP0073	NOx Catalyst Reset
SP0074	NOx Adsorber Catalyst Data Reset
SP0075	NOx Adsorber Catalyst Reset
SP0076	Gear Position Sensor Learn
SP0077	Gear Selector -N- Position Learn
SP0078	Backup Park Lock Actuator Arming
SP0079	EV Range Reset
SP0080	Power Steering Softstops Learn
SP0081	Power Steering Softstops Reset
SP0082	Power Steering Pressure Sensor Learn
SP0083	Read LIN Bus Device ID Information
SP0084	Learned Values Reset
SP0085	Engine Oil Type Setup
SP0086	Engine Oil Life Reset
SP0087	ECM Reset
SP0088	Engine Serial Number
SP0089	Steering Wheel Angle Sensor Centering
SP0090	Steering Wheel Angle Sensor Learn
SP0091	Steering Wheel Angle Sensor Learn

SP0092	Steering Wheel Angle Sensor Centering
SP0093	Steering Wheel Angle Sensor Reset
SP0094	Flywheel Learn
SP0095	Exhaust Flow Control Valve Learn
SP0096	Exhaust Gas Temperature Sensor Learn
SP0097	Exhaust Gas Temperature Sensor Reset
SP0098	EGR Valve Learn
SP0099	Transfer Case Clutch Identifier
SP0100	Transfer Case Clutch Overtemperature Counter Reset
SP0101	Assist Step Motor Learn
SP0102	Reset PTO Inhibit and Disengage History
SP0103	Power Steering Softstops Reset
SP0104	Steering Wheel Angle Sensor Reset
SP0105	Reset Functions
SP0106	Learned Values Reset
SP0107	Copy and Restore Tire Pressure Monitoring Information
SP0108	High Pressure Fuel Pump Learn
SP0109	High Pressure Fuel Correction Reset
SP0110	Personalization
SP0111	Yaw Rate Sensor Learn
SP0112	Yaw Rate Sensor Reset
SP0113	Rear Differential Clutch Service Calibration Setup
SP0114	Rear Suspension Position Sensor Trim Height
SP0115	Ambient Air Temperature Calculation Reset
SP0116	Ambient Air Temperature Instant Update
SP0117	Reductant Fluid Tank Level Reset
SP0118	Reductant Injector Reset
SP0119	Reductant System Data Reset
SP0120	Reductant System Reset
SP0121	Restore Factory Settings
SP0122	Hybrid/EV Battery Contactor Open Reasons Reset
SP0123	Hybrid/EV Battery Pack Charging Adaptive Learn Reset

SP0124	Hybrid/EV Battery Pack Coolant Control Solenoid Valve Learn
SP0125	Hybrid/EV Battery Pack Capacity Learn
SP0126	Hybrid/EV Battery Pack Capacity Reset
SP0127	Hybrid/EV Battery Pack Data Reset
SP0128	Calculated Fuel Economy Setup
SP0129	HVAC Afterblow Configuration
SP0130	HO2S Learn
SP0131	HO2S Learned Values Reset
SP0132	HO2S Heater Learn
SP0133	APP Learn
SP0134	Reset High Voltage Disable Request After Crash Event Detected
SP0135	Inspection/Maintenance Data
SP0136	Depressurize System
SP0137	Copy Injector Flow Identifiers from ECM to Glow Plug Control Module
SP0138	Copy Injector Flow Identifiers from Glow Plug Control Module to ECM
SP0139	Throttle Body Idle Air Flow Compensation Reset
SP0140	Throttle Position Learn
SP0141	Throttle Actuator Reset
SP0142	Panic Alarm
SP0143	Intake Air Flow Valve Learn
SP0144	Intake System Learned Values Reset
SP0145	Speedometer Calibration
SP0146	Liftgate Maximum Open Position Learn
SP0147	Neutral Position Sensor Learn
SP0148	A/C Compressor Speed
SP0149	A/C Indicator
SP0150	Control Module Reset
SP0151	Control Module Self-Test
SP0152	Control Module Self-Test
SP0153	Clutch Purge
SP0154	Excessive Clutch Slip Data Reset
SP0155	Clutch Control Module/Rear Drive System Matching Identification Setup

SP0156	Clutch Pedal Position Learn
SP0157	Clutch Position Learn
SP0158	Odometer Setup
SP0159	Tire Type/Pressure Selection
SP0160	Tire Pressure Sensors Learn
SP0161	Key Fob 1
SP0162	Key Fob 2
SP0163	Key Fob 3
SP0164	Key Fob 4
SP0165	Key Fob 5
SP0166	Key Fob 6
SP0167	Key Fob 7
SP0168	Key Fob 8
SP0169	Hands-Free Liftgate Sensor Control Module Calibration
SP0170	Module Setup
SP0171	Exhaust Aftertreatment Fuel Injector Reset
SP0172	Configure New Module
SP0173	Injector Flow Rate Programming
SP0174	Yaw Rate Sensor Reset
SP0175	Yaw Rate Sensor Learn
SP0176	Average Fuel Age Reset
SP0177	Enable Deployment Loops
SP0178	Cylinder 1 Injector Flow Identifier
SP0179	Cylinder 1 Fuel Injector Correction Value Reset
SP0180	Cylinder 2 Injector Flow Identifier
SP0181	Cylinder 2 Fuel Injector Correction Value Reset
SP0182	Cylinder 3 Injector Flow Identifier
SP0183	Cylinder 3 Fuel Injector Correction Value Reset
SP0184	Cylinder 4 Injector Flow Identifier
SP0185	Cylinder 4 Fuel Injector Correction Value Reset
SP0186	Cylinder 5 Injector Flow Identifier
SP0187	Cylinder 5 Fuel Injector Correction Value Reset

SP0188	Cylinder 6 Injector Flow Identifier
SP0189	Cylinder 6 Fuel Injector Correction Value Reset
SP0190	Cylinder 7 Injector Flow Identifier
SP0191	Cylinder 7 Fuel Injector Correction Value Reset
SP0192	Cylinder 8 Injector Flow Identifier
SP0193	Cylinder 8 Fuel Injector Correction Value Reset
SP0194	Cylinder Deactivation Exhaust Flow Control Valve Learn
SP0195	Headlamp Leveling Sensor Learn
SP0196	Frontview Camera Learn
SP0197	Frontview Camera Learn
SP0198	Front Suspension Position Sensor Trim Height
SP0199	Erase/Program All Key Fobs
SP0200	Clear Transmission Counters
SP0201	Clear Passenger Window Learned Values
SP0202	Clear Secured High Voltage DTCs
SP0203	Clear Driver Window Learned Values
SP0204	Erase All Key Fobs
SP0205	Clear Disable History Data
SP0206	Clear Right Rear Window Learned Values
SP0207	Clear Active Pull Compensation Learned Limits
SP0208	Clear Left Rear Window Learned Values
SP0209	Crankshaft Position Variation Learn
SP0210	Crankshaft Position Reluctor Ring Learn
SP0211	Cancel Camera Learn
SP0212	Fuel Pump Trim Reset
SP0213	Fuel Composition Reset
SP0214	Fuel Rail Pressure Relief Valve Learned Values Reset
SP0215	Fuel Rail Pressure Sensor Reset
SP0216	Fuel Rail Pressure Sensor or Fuel Rail Learn
SP0217	Fuel Trim Reset
SP0218	Fuel Economy Reset
SP0219	Fuel Filter Life Reset

SP0220	Fuel Injector Correction Value Preset
SP0221	Fuel Injection Small Quantity Data Reset
SP0222	Fuel Injection Small Quantity Learn
SP0223	Fuel Trim Reset
SP0224	Fuel Pressure Regulator Learn
SP0225	Brake Pressure Sensor Calibration
SP0226	Erase Valet Mode Code
SP0227	Manual Door Locks (-AU3) (-AU4)
SP0228	Manual Service Disconnect Fuse Life Reset
SP0229	Park Brake Calibration
SP0230	Data Display
SP0231	Digital Radio Receiver Control Module
SP0232	All Cylinders Fuel Injector Correction Value Reset
SP0233	Tire Pressure Sensor Signal Reset
SP0234	Tire Pressure Selection
SP0235	Add/Replace Key Fobs
SP0236	Stop/Start Capacitor State of Health Reset
SP0237	Turbocharger Learn
SP0238	Turbocharger Learned Values Reset
SP0239	Next Available Slot
SP0240	Display ECM and Glow Plug Control Module Injector Flow Identifiers
SP0241	Info Display/Infotainment Faceplate Reset
SP0242	Battery Sensor Module Learn
SP0243	Battery Sensor Module Learn
SP0244	Energy Storage Capacitor Learn
SP0245	Suspension Position Sensor Trim Height
SP0246	Option Configuration
SP0247	CAN Bus Configuration Learn
SP0248	Transmission Adaptive Values Learn
SP0249	VIN Learn
SP0250	Power Steering Softstops Learn
SP0251	Learn Functions

SP0252	Throttle Position Learn
SP0253	Inlet Solenoid Valves Learn
SP0254	Liftgate Maximum Open Position Learn
SP0255	CO Adjust
SP0256	Calculated Fuel Economy Setup
SP0257	Glow Plug Learn
SP0258	Remote Vehicle Start Disable History Reset
SP0259	Remote Vehicle Speed Limiting Reset
SP0260	Long Range Radar Sensor Module Learn
SP0261	Setup SDM Part Number in BCM
SP0262	DC Charging Disabled Reset
SP0263	Brake Pedal Position Sensor Learn
SP0264	Brake Hydraulics Sensors Learn
SP0265	MAF Sensor Learn
SP0266	Reset History Buffer
SP0267	Reset Teen Driver Key PIN
SP0268	Reset Event Records
SP0269	Reset Manufacturer Enable Counter
SP0270	Proactive Alerts
SP0271	Parking Assist Sensor Learn
SP0272	Park Brake Reset
SP0273	Steering Gear Learned Values Reset
SP0274	Steering Gear Replacement Procedure
SP0275	Assembly Plant Mode
SP0276	Automatic Braking Active Signal
SP0277	Adaptive Pressure Control Learn
SP0278	Longitudinal Acceleration Sensor Reset
SP0279	Assembly Plant Emission and Fuel Economy Test
SP0280	Brake Pedal Position Sensor Learn
SP0281	Headlamp Leveling Sensor Learn
SP0282	Erase/Program All Key Fobs
SP0283	Next Available Slot



SP0284	Key Fob 1
SP0285	Key Fob 2
SP0286	Key Fob 3
SP0287	Key Fob 4
SP0288	Key Fob 5
SP0289	Key Fob 6
SP0290	Key Fob 7
SP0291	Key Fob 8
SP0292	Battery Sensor Module Learn
SP0293	Clear Driver Window Learned Values
SP0294	Clear Passenger Window Learned Values
SP0295	Clear Left Rear Window Learned Values
SP0296	Clear Right Rear Window Learned Values
SP0297	Read LIN Bus Device ID Information
SP0298	Tire Pressure Sensors Learn
SP0299	Tire Pressure Sensor Signal Reset
SP0300	Tire Type/Pressure Selection
SP0301	CAN Bus Configuration Learn
SP0302	Transmission Service Fast Learn
SP0303	Configure New Module
SP0304	Fuel Trim Reset
SP0305	Crankshaft Position Variation Learn
SP0306	HO2S Heater Learn
SP0307	Idle Learn
SP0308	Engine Oil Life Reset
SP0309	Remote Vehicle Start Disable History Reset
SP0310	Adjustable Pedals Softstops Learn
SP0311	HVAC Actuators Learn
SP0312	HVAC Afterblow Configuration
SP0313	Brake Pressure Sensor Calibration
SP0314	Steering Wheel Angle Sensor Learn
SP0315	Yaw Rate Sensor Learn

SP0316	Park Brake Calibration
SP0317	Suspension Position Sensor Trim Height
SP0318	Remote Vehicle Speed Limiting Reset
SP0319	Vehicle Health Data Upload
SP0320	WLAN Password Reset
SP0321	WLAN Service Set Identifier (SSID) Reset
SP0322	Passenger Presence Sensor Learn
SP0323	Clutch Pedal Position Learn
SP0324	Neutral Position Sensor Learn
SP0325	Fuel Pump Trim Reset
SP0326	Steering Wheel Angle Sensor Centering
SP0327	Transmission Adaptive Pressure Reset
SP0328	Liftgate Maximum Open Position Learn
SP0329	Clear Disable History Data
SP0330	Frontview Camera Learn
SP0331	Ambient Air Temperature Instant Update
SP0332	Setup SDM Part Number in BCM
SP0333	Erase All Key Fobs
SP0334	Clutch Control Module/Rear Drive System Matching Identification Setup
SP0335	Digital Radio Receiver Control Module
SP0336	Gear Selector -N- Position Learn
SP0337	Fuel Composition Reset
SP0338	Stop/Start Capacitor State of Health Reset
SP0339	AWD Disabled-by-Malfunction Counter Reset
SP0340	Long Range Radar Sensor Module Learn
SP0341	Hands-Free Liftgate Sensor Control Module Calibration
SP0342	Erase Valet Mode Code
SP0343	Control Module Reset
SP0344	Info Display/Infotainment Faceplate Reset
SP0345	Exhaust Flow Control Valve Learn
SP0346	Cylinder Deactivation Exhaust Flow Control Valve Learn
SP0347	Distance Sensing Cruise Control Module

SP0348	Adaptive Pressure Control Learn
SP0349	Yaw Rate Sensor Reset
SP0350	Gear Position Sensor Learn
SP0351	Transfer Case Clutch Identifier
SP0352	Transfer Case Clutch Overtemperature Counter Reset
SP0353	Vehicle Model
SP0354	Power Steering Softstops Learn
SP0355	Rear Suspension Position Sensor Trim Height
SP0356	Front Suspension Position Sensor Trim Height
SP0357	Reset History Buffer
SP0358	Rear Differential Clutch Service Calibration Setup
SP0359	Range Actuator Learn
SP0360	Parking Assist Sensor Learn
SP0361	Learned Values Reset
SP0362	Hybrid/EV Battery Pack Coolant Control Solenoid Valve Learn
SP0363	Hybrid/EV Battery Pack Capacity Learn
SP0364	Passenger Compartment Heater Coolant Control Solenoid Valve Learn
SP0365	Fuel Economy Reset
SP0366	Hybrid/EV Battery Contactor Open Reasons Reset
SP0367	Hybrid/EV Battery Pack Charging Adaptive Learn Reset
SP0368	Hybrid/EV Battery Pack Data Reset
SP0369	Manual Service Disconnect Fuse Life Reset
SP0370	Average Fuel Age Reset
SP0371	Electronic Brake Control Module Learn
SP0372	Steering Wheel Angle Sensor Reset
SP0373	Fuel Rail Pressure Relief Valve Learned Values Reset
SP0374	Idle Speed Control Reset
SP0375	ECM Reset
SP0376	Speedometer Calibration
SP0377	Retained Accessory Power
SP0378	Throttle Position Learn
SP0379	Automatic Braking Active Signal

SP0380	Transmission Oil Life Reset
SP0381	APP Learn
SP0382	Crankshaft Position Reluctor Ring Learn
SP0383	DPF Pressure Sensor Learn
SP0384	EGR Valve Learn
SP0385	Exhaust Gas Temperature Sensor Learn
SP0386	Flywheel Learn
SP0387	Fuel Rail Pressure Sensor or Fuel Rail Learn
SP0388	HO2S Learn
SP0389	Intake Air Flow Valve Learn
SP0390	MAF Sensor Learn
SP0391	Turbocharger Learn
SP0392	DPF Reset
SP0393	Glow Plug Control Module Reset
SP0394	DPF Service Regeneration
SP0395	Inspection/Maintenance Data
SP0396	Calculated Fuel Economy Setup
SP0397	Injector Flow Rate Programming
SP0398	Ambient Air Temperature Calculation Reset
SP0399	Catalyst 1 Reset
SP0400	DPF/Catalyst 2 Reset
SP0401	DPF Pressure Sensor Reset
SP0402	Engine Serial Number
SP0403	Fuel Filter Life Reset
SP0404	NOx Catalyst Reset
SP0405	NOx Catalyst Reductant Loading Reset
SP0406	NOx Sensor 1 Reset
SP0407	NOx Sensor 2 Reset
SP0408	Reductant Fluid Tank Level Reset
SP0409	Reductant Injector Reset
SP0410	Reductant System Data Reset
SP0411	Reductant System Reset

SP0412	Display ECM and Glow Plug Control Module Injector Flow Identifiers
SP0413	Cylinder 1 Injector Flow Identifier
SP0414	Cylinder 2 Injector Flow Identifier
SP0415	Cylinder 3 Injector Flow Identifier
SP0416	Cylinder 4 Injector Flow Identifier
SP0417	Cylinder 5 Injector Flow Identifier
SP0418	Cylinder 6 Injector Flow Identifier
SP0419	Cylinder 7 Injector Flow Identifier
SP0420	Cylinder 8 Injector Flow Identifier
SP0421	Copy Injector Flow Identifiers from Glow Plug Control Module to ECM
SP0422	Copy Injector Flow Identifiers from ECM to Glow Plug Control Module
SP0423	Cylinder 1 Fuel Injector Correction Value Reset
SP0424	Cylinder 2 Fuel Injector Correction Value Reset
SP0425	Cylinder 3 Fuel Injector Correction Value Reset
SP0426	Cylinder 4 Fuel Injector Correction Value Reset
SP0427	Cylinder 5 Fuel Injector Correction Value Reset
SP0428	Cylinder 6 Fuel Injector Correction Value Reset
SP0429	Cylinder 7 Fuel Injector Correction Value Reset
SP0430	Cylinder 8 Fuel Injector Correction Value Reset
SP0431	All Cylinders Fuel Injector Correction Value Reset
SP0432	Fuel Injector Correction Value Preset
SP0433	Glow Plug Learn
SP0434	CO Adjust
SP0435	Clear Secured High Voltage DTCs
SP0436	On-Board Jump Assist Counter Reset
SP0437	Reset PTO Inhibit and Disengage History
SP0438	Restore Factory Settings
SP0439	DC Charging Disabled Reset
SP0440	EV Range Reset
SP0441	Idle Speed Adjustment
SP0442	Transmission Adaptive Torque Reset
SP0443	Fuel Rail Pressure Sensor Reset

SP0444	Power Steering Softstops Reset
SP0445	Transmission Adaptive Values Learn
SP0446	Turbocharger Learned Values Reset
SP0447	Vehicle Direction Camera Learn
SP0448	Fuel Pressure Regulator Learn
SP0449	Fuel Pressure Regulator Fast Learn
SP0450	Intake Manifold Runner Control Valve Learn
SP0451	High Pressure Fuel Pump Learn
SP0452	Boost Pressure Sensor Learn
SP0453	Cylinder 1 Injector
SP0454	Cylinder 2 Injector
SP0455	Cylinder 3 Injector
SP0456	Cylinder 4 Injector
SP0457	Vehicle Inclination Sensor
SP0458	Code Index
SP0459	Fuel Injection Small Quantity Data Reset
SP0460	Fuel Injection Small Quantity Learn
SP0461	Catalyst Reset
SP0462	Exhaust Gas Temperature Sensor Reset
SP0463	Idle Air Control Reset
SP0464	Throttle Actuator Reset
SP0465	Preferred Roaming List Update
SP0466	Module Setup
SP0467	Not Linked
SP0468	Linked
SP0469	Option Configuration
SP0470	Audio Code Index
SP0471	Personalization
SP0472	Total Fuel Consumed Reset
SP0473	Automatic Electric Door Locks (AU4) With Seat Belt Pretensioner (A70)
SP0474	Automatic Electric Door Locks (AU4) Without Seat Belt Pretensioner (-A70)
SP0475	Electric Door Locks (AU3) With Seat Belt Pretensioner (A70)

SP0476	Electric Door Locks (AU3) Without Seat Belt Pretensioner (-A70)
SP0477	Manual Door Locks (-AU3) (-AU4)
SP0478	Enable Deployment Loops
SP0479	Clear Transmission Counters
SP0480	Clutch Position Learn
SP0481	Clutch Purge
SP0482	Depressurize System
SP0483	Transmission Learn
SP0484	Fuel Injector Learn
SP0485	Low Speed Target Pressure
SP0486	High Speed Target Pressure
SP0487	Minimum Telltale Pressure
SP0488	Safe Tellale Pressure
SP0489	Low Speed Threshold
SP0490	High Speed Threshold
SP0491	Setup Module DTCs
SP0492	Reset
SP0493	Crankshaft pos. variation learn
SP0494	PRL update
SP0495	Set language
SP0496	Stolen vehicle slowdown clear
SP0497	Setup SDM primary key in BCM
SP0498	Inclination sensor enable
SP0499	BPP sensor calibration
SP0500	Afterblow option
SP0501	Data recorder
SP0502	Audiopilot test
SP0503	Eject
SP0504	TV region lockout
SP0505	TV region select
SP0506	Automated bleed
SP0507	CO adjust (leaded fuel only)

SP0508	Change to neutral mode
SP0509	DPF reset replace ECM
SP0510	Learn sensor location
SP0511	Learn sen loc with tire press tool
SP0512	Re-zero passenger presence system
SP0513	Copy and paste TPM information
SP0514	Tire type/pressure selection
SP0515	Setup SDM part number in BCM
SP0516	DRR setup
SP0517	Passenger presence sensor learn
SP0518	Auto. door unlock
SP0519	Key fob in veh. warning
SP0520	Passive door lock
SP0521	Setup new RCDLR
SP0522	Column calibration
SP0523	Setup new HVAC
SP0524	Radio setup
SP0525	VIN relearn
SP0526	HVAC ambient temp. disp.
SP0527	Power window motor programming
SP0528	Digital radio receiver
SP0529	Radio RPO selection
SP0530	CCM RDS matching ID
SP0531	Clear manufacturer enable counter
SP0532	Bump stop
SP0533	Acceleration sensor reset
SP0534	BMC prim. piston pos. relearn
SP0535	EBCM relearn
SP0536	Steering pos./torque sensor cal.
SP0537	Preload passenger presence system
SP0538	Engine serial number
SP0539	Capture & restore data



SP0540	Injector flow rate programming
SP0541	Setup new ROS
SP0542	PTO options
SP0543	ECM PTO options
SP0544	Reset ECM
SP0545	Reset immobilizer
SP0546	Reset vehicle build settings
SP0547	Middle east speed bias (UC2)
SP0548	Brazil units (CV2)
SP0549	Module setup
SP0550	Setup SDM serial number in BCM
SP0551	Program VIN
SP0552	Tuner calibration
SP0553	Navigation option
SP0554	Transmission type
SP0555	Disable/enable secure car
SP0556	Auto. door unlock trigger
SP0557	Delayed locking
SP0558	Passive door unlock
SP0559	Setup SDM part number in IPM
SP0560	Disable dtc(s)
SP0561	Bluetooth
SP0562	System configuration
SP0563	PSCM calibration procedure
SP0564	New actuator setup procedure
SP0565	Program phone number
SP0566	Hybrid batt. charge hrs.
SP0567	Hybrid batt. discharge amp hrs.
SP0568	Erase transponder-keys
SP0569	Seat belt chime
SP0570	Learn tire pressure sensors
SP0571	Engine shutdown

SP0572	Country code
SP0573	Chime level
SP0574	Loud chime volume
SP0575	Loud amp chime volume
SP0576	Normal chime volume
SP0577	Normal amp chime volume
SP0578	AM pass A stopping
SP0579	FM pass A stopping
SP0580	IPC setup
SP0581	U85
SP0582	UZ6
SP0583	Driver info. display option
SP0584	Calibrate module
SP0585	VCIM setup
SP0586	Optional modules
SP0587	Region code options
SP0588	New tire/wheel base/booster info.
SP0589	Setup SDM part number in IPC
SP0590	Setup SDM serial number in IPC
SP0591	Acquisition setting
SP0592	Step 1
SP0593	Step 2
SP0594	North america
SP0595	Middle east
SP0596	Steering tuning selection
SP0597	Yaw rate sensor recalibration
SP0598	BCM copy and flash
SP0599	Reduction of pressure drive
SP0600	IPC recalibration
SP0601	Injector flow rates
SP0602	Vehicle speed limit
SP0603	Navigation voice

SP0604	Setup SDM serial number in DIM
SP0605	Setup SDM part number in DIM
SP0606	LONG WAVE
SP0607	Traffic seek
SP0608	Vehicle type
SP0609	Door zone module VIN relearn
SP0610	Intrusion sensor step 1
SP0611	Inclination sensor step 1
SP0612	Alarm siren module step 1
SP0613	Tap shift
SP0614	Point of sale
SP0615	Miscellaneous options 2
SP0616	Variable effort steering
SP0617	Right hand drive
SP0618	Personalization option
SP0619	Universal theft deterrent
SP0620	Intrusion sensor step 2
SP0621	Inclination sensor step 2
SP0622	Alarm siren module step 2
SP0623	Twilight sentinel
SP0624	Front fog lamp type
SP0625	DRL option
SP0626	Perimeter lighting
SP0627	TPM option enable
SP0628	New VIN
SP0629	Tire rotation procedure
SP0630	Afterblow
SP0631	Recalibration
SP0632	Accessory wheel size setup
SP0633	Clear memory and program all fobs
SP0634	CTD operation
SP0635	Fob feedback

SP0636	Theftlock LED
SP0637	Option configuration
SP0638	Fuel injector balance
SP0639	Buckle up reminder
SP0640	Pre-alarm option
SP0641	Solenoid test
SP0642	Cruise control options
SP0643	Exhaust brake options
SP0644	Gear down protection options
SP0645	Oil capacity options
SP0646	DPM setup
SP0647	Preferred system setting
SP0648	ALC trimset
SP0649	Dimming delay
SP0650	Export ID
SP0651	Language
SP0652	AM distant
SP0653	AM local
SP0654	FM distant
SP0655	FM local
SP0656	Fob button hold time
SP0657	Electronic suspension control
SP0658	Nav. radio theft
SP0659	Oil life monitor
SP0660	Axle ratio
SP0661	Fast learn adapt. process
SP0662	BCM reprogramming
SP0663	Setup IPC
SP0664	Miscellaneous options 1
SP0665	Automatic/manual HVAC options
SP0666	Magna steer option
SP0667	Temperature offset

SP0668	Load management option
SP0669	Disable belt tower dtc's
SP0670	Navigation radio present
SP0671	Military or standard time
SP0672	Tire pressure warning
SP0673	Tire pressure monitor
SP0674	Performance shift
SP0675	Key fob personalization
SP0676	SCLM setup
SP0677	DTC mask
SP0678	Accessory inflator
SP0679	Middle east region mode
SP0680	Tire rotation/sensor replacement
SP0681	Setup RFA
SP0682	Synchronize IPC and SIR
SP0683	Setup new onstar
SP0684	Electronic serial number
SP0685	Update HVAC calcs. in DIM
SP0686	LH drvr. personalization
SP0687	RH drvr. personalization
SP0688	BCM RPO reprogram
SP0689	Twilight sentinel reprogram
SP0690	Seed and key relearn
SP0691	Setup new VTD module
SP0692	Export option
SP0693	Valet lockout
SP0694	Compact disc
SP0695	Cellular telephone
SP0696	A/C compressor calibration
SP0697	Option A
SP0698	Option B
SP0699	Option C

SP0700	Option D
SP0701	Option E
SP0702	VIN information
SP0703	Bass frequency response
SP0704	Steering angle sensor centering
SP0705	Heater recalibration
SP0706	Door lock
SP0707	Door unlock
SP0708	Door jamb switch
SP0709	Brake pedal
SP0710	Ignition switch
SP0711	Option no. 0
SP0712	HVAC recal. download
SP0713	TV present
SP0714	Bose display
SP0715	Isolation valve test
SP0716	Option no. 1
SP0717	Fob 1 option 2
SP0718	Fob 1 option 3
SP0719	Fob 2 option 1
SP0720	Fob 2 option 2
SP0721	Fob 2 option 3
SP0722	Option no. 2
SP0723	Service spark retard reset
SP0724	Odometer reset
SP0725	Gauge setup
SP0726	Synchronize TTM and MSM
SP0727	Synchronize MSM and TTM
SP0728	Remove/reset module
SP0729	Vehicle dynamic sensor offset calibration
SP0730	Clear Proximity Detection Disable Reason
SP0731	Engine air filter monitor settings

SP0732	Transmission overtemperature counter reset
SP0733	Reset buffer history instruction
SP0734	Transmission clutch read in
SP0735	Vehicle dynamic sensor 1 and 2 offset calibration
SP0736	Read the starting point of the brake system piston pressure rise
SP0737	Reading of brake system plunger motor position sensor
SP0738	Read brake pedal stroke sensor
SP0739	Front axle brake pad life monitoring reset
SP0740	Rear axle brake pad life monitoring reset
SP0741	Configuration/reset function
SP0742	Trailer tire pressure sensor read in manually
SP0743	Steering wheel angle sensor offset calibration
SP0744	Read in longitudinal acceleration sensor
SP0745	Regeneration of diesel particulate filters
SP0746	Injector correction reset
SP0747	Capture information
SP0748	Copy and restore data
SP0749	Gear actuator correction read
SP0750	4WD high-low gear low-speed actuator clutch read-in
SP0751	Distance sensing constant speed control module
SP0752	Engine speed/throttle
SP0753	Rear Gate Driver Information Center Message Reset
SP0754	Headlamp Leveling System Suspension Trim Position Learn
SP0755	Backup Battery Timer Reset
SP0756	Engine Air Filter Life Reset
SP0757	Fuel Pump Driver Control Module Configuration
SP0758	Vehicle Dynamic Sensor Offset Calibration
SP0759	Clear Approach Detection Disabled Reasons
SP075A	All Cameras Alignment Learn
SP075B	Rear Drive Clutch Service Calibration Setup
SP075C	Transmission Overtemperature Counter Reset
SP075D	Engine Block Coolant Valve Position Learn

SP075E	Engine Coolant Control Valve Learn
SP075F	Engine Coolant Flow Control Valve Learn
SP0760	Turbocharger Wastegate Learn
SP0761	Engine Coolant Pump Data Reset
SP0762	Heater Core Coolant Temperature Sensor Reset
SP0763	Particulate Filter Reset
SP0764	Particulate Filter Pressure Sensor Reset
SP0765	Engine Air Filter Monitor Setup
SP0766	Steering Wheel Angle Sensor Offset Calibration
SP0767	Brake System Plunger Motor Position Sensor Learn
SP0768	Brake System Plunger Pressure Rise Starting Point Learn
SP0769	License Compliance Materials Download Error Counter Reset
SP076A	Transmission Control Module Reset
SP076B	Exhaust Control Valve Learn
SP076C	Air Cleaner Monitor Setup
SP076D	Barometric Pressure Sensor Reset
SP076E	Fuel Pump Power Control Module Configuration
SP076F	Correction Angle Reset
SP0770	Cylinder Deactivation Exhaust Control Valve Learn
SP0771	Longitudinal Acceleration Sensor Learn
SP0772	Clear Short Range Radar Sensor Vehicle Position
SP0773	Variable Exhaust Flow Control Valve Learn
SP0774	Vehicle Longitudinal Accelerometer Sensor Learn
SP0775	Heated Oxygen Sensor Heater Resistance Learned Values Reset
SP0776	Range Actuator Correlation Learn
SP0777	Engine Block Coolant Control Valve Position Learn
SP0778	Turbocharger/Supercharger Boost Control Initial Position Learn
SP0779	Catalytic Converter Reset
SP077A	High Pressure Fuel Variable Reset
SP077B	Nitrogen Oxides Catalytic Converter Reductant Loading Reset
SP077C	Nitrogen Oxides Catalytic Converter Reset
SP077D	Nitrogen Oxides Sensor Reset



SP077E	Display ECM Injector Flow Identifiers
SP077F	Cylinder 1 Fuel Injector Flow Identifier
SP0780	Cylinder 2 Fuel Injector Flow Identifier
SP0781	Cylinder 3 Fuel Injector Flow Identifier
SP0782	Cylinder 4 Fuel Injector Flow Identifier
SP0783	Cylinder 5 Fuel Injector Flow Identifier
SP0784	Cylinder 6 Fuel Injector Flow Identifier
SP0785	Left Front Air Spring Inflate
SP0786	Right Front Air Spring Inflate
SP0787	Left Rear Air Spring Inflate
SP0788	Right Rear Air Spring Inflate
SP0789	Left Front Suspension Position Sensor Trim Height
SP078A	Right Front Suspension Position Sensor Trim Height
SP078B	Left Rear Suspension Position Sensor Trim Height
SP078C	Right Rear Suspension Position Sensor Trim Height
SP078D	Level Vehicle to Target Height
SP078E	Brake Pedal Travel Sensor Learn
SP078F	Front Axle Brake Pad Life Monitoring Reset
SP0790	Rear Axle Brake Pad Life Monitoring Reset
SP0791	Turbocharger Vane Position Learn
SP0792	Fuel Injection Small Quantity Learning Odometer Reset
SP0793	Theft Deterrent Relearn
SP0794	Vehicle Dynamic Sensors 1 and 2 Offset Calibration
SP0795	Transmission Clutch 6 Volume Learn
SP0796	Transmission Clutch 6 Return Spring Learn
SP0797	Service Cleaning Procedure
SP0798	Hydraulic System Leak Test
SP0799	Park Brake Pad Life Monitoring Reset
SP079A	Crankshaft Position Reluctor Ring Learned Values Reset
SP079B	Copy Tire Pressure Monitoring Information
SP079C	CO Adjustment
SP079D	Tire Pressure Sensors Manual Learn

SP079E	Flexible Fuel Reset
SP079F	Steering Performance Calibration
SP07A0	Powertrain Compartment Cover Full Open Height Reset
SP07A1	Powertrain Compartment Cover Cycle Counts Reset
SP07A2	Powertrain Compartment Cover Hold Open Counter Reset
SP07A3	Powertrain Compartment Cover Obstacle Counter Reset
SP07A4	Powertrain Compartment Cover Zone Counter Reset
SP07A5	Powertrain Compartment Cover Drive Unit Learn
SP07A6	4WD Low Range Actuator Clutch Learn
SP07A7	Theft Deterrent Relearn VIN Reset
SP07A8	Radio Favorites Reset
SP07A9	Turbocharger Boost Control Initial Position Learn
SP07AA	Fuel System Adaptation Reset
SP07AB	Power Take-Off Operation Mode Settings
SP07AC	Copy and Restore Data
SP07AD	Trailer Tire Pressure Sensor Manual Learn
SP07AE	Clear All Vehicle DTCs
SP07AF	Stop/Start Capacitor Control Module State of Health Reset
SP07B0	Vehicle Variant
SP07B1	Hydraulic Clutch Bleed
SP07B2	Engine Coolant Bypass Valve Position Learn
SP07B3	Set Time and Date
SP07B4	Remove/Reset Module
SP07B5	Temperature Code Index
SP07B6	EGR Cooler Run Time Counter Reset
SP07B7	Rear Differential Clutch Learn Command
SP07B8	Rear Differential Functional Test Command
SP07B9	Drive Motor Position Sensor Offset Reset
SP07BA	Hybrid/Electric Vehicle Battery Pack Capacity Fast Learn
SP07BB	Hybrid/Electric Vehicle Battery Contactor Open Reason History Reset
SP07BC	Hybrid/Electric Vehicle Battery DC Charging Disabled Reset
SP07BD	Hybrid/Electric Vehicle Battery Interface Control Module Over Temperature Reset

SP07BE	Hybrid/Electric Vehicle Battery Interface Control Module Voltage Sensor Circuits High - Low Reset
SP07BF	Hybrid/Electric Vehicle Range Reset
SP07C0	System Isolation / Impact Sensor Fault - Hybrid/Electric Vehicle Battery System Reset
SP07C1	14 Volt Power Module - Rail Overvoltage Exposure Reset
SP07C2	Air Conditioning Electric Compressor - Rail Overvoltage Exposure Reset
SP07C3	Battery Charger Control Module - Rail Overvoltage Exposure Reset
SP07C4	Drive Motor Control Module - Rail Overvoltage Exposure Reset
SP07C5	Drive Motor Control Module 2 - Rail Overvoltage Exposure Reset
SP07C6	Drive Motor Control Module 3 - Rail Overvoltage Exposure Reset
SP07C7	Hybrid/Electric Vehicle Coolant Heater - Rail Overvoltage Exposure Reset
SP07C8	Power Steering Active Pull/Drift Compensation Learn
SP07C9	Particulate Filter Reset Bank 2
SP07CA	Hydraulic System Flush Procedure
SP07CB	Transmission Service Diagnostic Test
SP07CC	Camshaft Position Actuator Learn
SP07CD	Clutch Energy Level History Counter Reset
SP07CE	Timing Belt Life Reset
SP07CF	Reset Camera Alignment Learned Values
SP07D0	Battery Charger Control Module 2 - Rail Overvoltage Exposure Reset
SP07D1	Restore Power Takeoff Factory Settings
SP07D2	Reset Power Takeoff Inhibit and Disengage History