



GAC MOTOR Function List V9.10

Tips and Instructions:

The programming function only supports H6PRO, H6PRO Master Edition products.

- * This feature is new.
- ✓ This feature is supported.
- This feature is not supported.
- ※ This feature is partially supported.

Model	System Name	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Read Freeze Frame	Actuation Test	Special Functions
GQCQ/M6 PRO	Engine Control Module (EMS)	✓	✓	✓	✓		✓	
GQCQ/M6 PRO	Automatic transmission (AT)	✓	✓	✓	✓			SP2318, SP2319, SP2320, SP2321, SP2322
GQCQ/M6 PRO	Brake Control System (BCS)	✓	✓	✓	✓			SP2287, SP2288, SP2289, SP2290, SP2291, SP2292, SP2293, SP2294
GQCQ/M6 PRO	Supplementary Security System (SRS)	✓	✓	✓	✓		✓	SP2285, SP2286
GQCQ/M6 PRO	Body Control Module (BCM)	✓	✓	✓	✓		✓	SP2308
GQCQ/M6 PRO	Electric Power Steering (EPS)	✓	✓	✓	✓			SP2313, SP2314
GQCQ/M6 PRO	Combination Meter (ICM)	✓	✓	✓	✓		✓	SP2300, SP2301
GQCQ/M6 PRO	Front Air Conditioning System (HVAC)	✓	✓	✓	✓			SP2309
GQCQ/M6 PRO	Air Conditioning Control Panel (HCP)	✓	✓	✓	✓			SP2327
GQCQ/M6 PRO	Rear control panel (RCP)	✓	✓	✓	✓		✓	SP2326
GQCQ/M6 PRO	Intelligent Keyless Start (PEPS)	✓	✓	✓	✓		✓	SP2299
GQCQ/M6 PRO	Independent gateway (GWM)	✓	✓	✓	✓			SP2298
GQCQ/M6 PRO	Remote control system (TBOX)	✓	✓	✓	✓			SP2302, SP2303, SP2304, SP2305, SP2306, SP2307
GQCQ/M6 PRO	Surround View System (SVM)	✓	✓	✓	✓			SP2310, SP2311
GQCQ/M6 PRO	Shift lever module (GSM)	✓	✓	✓	✓		✓	SP2295
GQCQ/M6 PRO	Medium Range Radar Module (MRR)	✓	✓	✓	✓			SP2296, SP2297
GQCQ/M6 PRO	Reversing Assist System (RPA)	✓	✓	✓	✓			SP2312
GQCQ/M6 PRO	Intelligent Front Camera (IFC)	✓	✓	✓	✓			SP2315, SP2316
GQCQ/M6 PRO	Wireless charging module (WCM)	✓	✓	✓	✓			SP2317
GQCQ/M6 PRO	Heated and ventilated front seats (HVSM)	✓	✓	✓	✓		✓	SP2323
GQCQ/M6 PRO	Intelligent central control host (IHU1)	✓	✓	✓	✓		✓	SP2324
GQCQ/M6 PRO	Intelligent central control host (IHU2)	✓	✓	✓	✓		✓	SP2325
GQCQ/M6 PRO	Headlight Control System (AFS)	✓	✓	✓	✓		✓	SP2283, SP2284
GQCQ/M6 PRO	Electronic Toll Collection System (ETC)	✓	✓	✓	✓			SP2328
GQCQ/GS4 PLUS	Engine Control Module (EMS1)	✓	✓	✓	✓		✓	SP2329
GQCQ/GS4 PLUS	Engine Control Module (EMS2)	✓	✓	✓	✓		✓	SP2330
GQCQ/GS4 PLUS	Automatic transmission (AT)	✓	✓	✓	✓		✓	SP2365, SP2366, SP2367
GQCQ/GS4 PLUS	Brake Control System (BCS)	✓	✓	✓	✓		✓	SP2333, SP2334, SP2335, SP2336, SP2337, SP2338, SP2339, SP2340, SP2341
GQCQ/GS4 PLUS	Supplementary Security System (SRS)	✓	✓	✓	✓		✓	SP2331, SP2332
GQCQ/GS4 PLUS	Body Control Module (BCM)	✓	✓	✓	✓		✓	SP2355
GQCQ/GS4 PLUS	Electric Power Steering (EPS)	✓	✓	✓	✓			SP2361
GQCQ/GS4 PLUS	Combination Meter (ICM)	✓	✓	✓	✓		✓	SP2353, SP2354
GQCQ/GS4 PLUS	Front Air Conditioning System (HVAC)	✓	✓	✓	✓			SP2356
GQCQ/GS4 PLUS	Air Conditioning Control Panel (HCP)	✓	✓	✓	✓		✓	SP2347
GQCQ/GS4 PLUS	Front Control Panel (FCP)	✓	✓	✓	✓		✓	SP2358
GQCQ/GS4 PLUS	Intelligent Keyless Start (PEPS)	✓	✓	✓	✓		✓	SP2348
GQCQ/GS4 PLUS	Independent gateway (GWM)	✓	✓	✓	✓			SP2345, SP2346
GQCQ/GS4 PLUS	Remote control system (TBOX)	✓	✓	✓	✓		✓	
GQCQ/GS4 PLUS	Intelligent central control host (IHU1)	✓	✓	✓	✓			SP2349, SP2350
GQCQ/GS4 PLUS	Intelligent central control host (IHU2)	✓	✓	✓	✓		✓	SP2351, SP2352
GQCQ/GS4 PLUS	Electric Back Door (PLGM)	✓	✓	✓	✓		✓	SP2357
GQCQ/GS4 PLUS	Shift lever module (GSM)	✓	✓	✓	✓			SP2342
GQCQ/GS4 PLUS	Medium Range Radar Module (MRR)	✓	✓	✓	✓			SP2343, SP2344
GQCQ/GS4 PLUS	Reversing Assist System (RPA1)	✓	✓	✓	✓			SP2359
GQCQ/GS4 PLUS	Reversing Assist System (RPA2)	✓	✓	✓	✓			SP2360
GQCQ/GS4 PLUS	Intelligent Front Camera (IFC)	✓	✓	✓	✓			SP2362, SP2363
GQCQ/GS4 PLUS	Wireless charging module (WCM)	✓	✓	✓	✓			SP2364
GQCQ/GS4 PLUS	Heated seat module (HVSM)	✓	✓	✓	✓		✓	SP2368
GQCQ/GS4 PLUS	Seat Memory Module (MSM)	✓	✓	✓	✓		✓	SP2369
GQCQ/GS4 PLUS	P gear controller (PCU)	✓	✓	✓	✓			SP2370
GQCQ/GS4 PLUS	Main blind spot monitoring module (MBSD)	✓	✓	✓	✓			SP2371, SP2372, SP2373
GQCQ/GS4 PLUS	Slave Blind Spot Monitoring Module (SBSD)	✓	✓	✓	✓			SP2374, SP2375, SP2376
GQCQ/GS4 PLUS	Electronic Toll Collection System (ETC)	✓	✓	✓	✓			SP2377
GQCQ/GS4 PLUS	Cockpit Monitoring System (DMS)	✓	✓	✓	✓			SP2378
GQCQ/GS4 PLUS	Surround View System (SVM)	✓	✓	✓	✓			SP2379
GQCQ/GS3 POWER	Engine Control Module (EMS1)	✓	✓	✓	✓		✓	SP2380
GQCQ/GS3 POWER	Engine Control Module (EMS2)	✓	✓	✓	✓		✓	SP2381
GQCQ/GS3 POWER	Automatic transmission (AT1)	✓	✓	✓	✓		✓	SP2404, SP2405, SP2406, SP2407, SP2408, SP2409
GQCQ/GS3 POWER	Automatic transmission (AT2)	✓	✓	✓	✓			SP2410, SP2411, SP2412, SP2413, SP2414, SP2415
GQCQ/GS3 POWER	Automatic transmission (AT3)	✓	✓	✓	✓			SP2416, SP2417, SP2418, SP2419, SP2420, SP2421
GQCQ/GS3 POWER	Brake Control System (BCS1)	✓	✓	✓	✓			SP2384, SP2385, SP2386, SP2387, SP2388, SP2389, SP2390, SP2391, SP2392
GQCQ/GS3 POWER	Brake Control System (BCS2)	✓	✓	✓	✓		✓	SP2393, SP2394, SP2395, SP2396, SP2397, SP2398, SP2399, SP2400, SP2401

GQCQ/GS3 POWER	Supplementary Security System (SRS)	√	√	√	√			SP2382, SP2383
GQCQ/GS3 POWER	Body Control Module (BCM)	√	√	√	√		√	SP2435
GQCQ/GS3 POWER	Electric Power Steering (EPS)	√	√	√	√			SP2422, SP2423
GQCQ/GS3 POWER	Combination Meter (ICM)	√	√	√	√		√	SP2433, SP2434
GQCQ/GS3 POWER	Front Air Conditioning System (HVAC1)	√	√	√	√			SP2431
GQCQ/GS3 POWER	Front Air Conditioning System (HVAC2)	√	√	√	√			SP2432
GQCQ/GS3 POWER	Air Conditioning Control Panel (HCP)	√	√	√	√		√	SP2438
GQCQ/GS3 POWER	Intelligent Keyless Start (PEPS)	√	√	√	√		√	SP2436
GQCQ/GS3 POWER	Independent gateway (GWM)	√	√	√	√			SP2403
GQCQ/GS3 POWER	Electronic steering column lock (ESCL)	√	√	√	√			
GQCQ/GS3 POWER	Remote control system (TBOX)	√	√	√	√			
GQCQ/GS3 POWER	Reversing Assist System (RPA)	√	√	√	√			SP2424
GQCQ/GS3 POWER	Intelligent Front Camera (IFC)	√	√	√	√			SP2425, SP2426
GQCQ/GS3 POWER	Shift lever module (GSM)	√	√	√	√			SP2402
GQCQ/GS3 POWER	Entertainment System (CD1)	√	√	√	√		√	SP2427, SP2428
GQCQ/GS3 POWER	Entertainment System (CD2)	√	√	√	√		√	SP2429, SP2430
GQCQ/GS3 POWER	Heated seat module (HVSM)	√	√	√	√		√	SP2437
GQCQ/GA4 2021	Engine Control Module (EMS)	√	√	√	√		√	
GQCQ/GA4 2021	Automatic transmission (AT)	√	√	√	√			SP2452, SP2453, SP2454, SP2455, SP2456
GQCQ/GA4 2021	Brake Control System (BCS)	√	√	√	√		√	SP2441, SP2442, SP2443, SP2444, SP2445, SP2446, SP2447, SP2448, SP2449
GQCQ/GA4 2021	Supplementary Security System (SRS)	√	√	√	√		√	SP2439, SP2440
GQCQ/GA4 2021	Body Control Module (BCM)	√	√	√	√		√	SP2468, SP2469
GQCQ/GA4 2021	Electric Power Steering (EPS)	√	√	√	√			SP2457, SP2458
GQCQ/GA4 2021	Combination Meter (ICM)	√	√	√	√		√	SP2465, SP2466
GQCQ/GA4 2021	Front Air Conditioning System (HVAC)	√	√	√	√		√	SP2464
GQCQ/GA4 2021	Front Control Panel (FCP)	√	√	√	√		√	SP2471
GQCQ/GA4 2021	Intelligent Keyless Start (PEPS)	√	√	√	√		√	SP2470
GQCQ/GA4 2021	Independent gateway (GWM)	√	√	√	√			SP2451
GQCQ/GA4 2021	Remote control system (TBOX)	√	√	√	√		√	SP2467
GQCQ/GA4 2021	Electronic steering column lock (ESCL)	√	√	√	√		√	
GQCQ/GA4 2021	Shift lever module (GSM)	√	√	√	√			SP2450
GQCQ/GA4 2021	Surround View System (SVM)	√	√	√	√			SP2459, SP2460
GQCQ/GA4 2021	Reversing Assist System (RPA)	√	√	√	√			SP2461
GQCQ/GA4 2021	Entertainment System (CD)	√	√	√	√		√	SP2462, SP2463
GQCQ/GA4 2021	Heated seat module (HVSM)	√	√	√	√		√	
GQCQ/Shadow Leopard	Engine Control Module (EMS)	√	√	√	√			SP2472, SP2473, SP2474
GQCQ/Shadow Leopard	Automatic transmission (AT1)	√	√	√	√			SP2488, SP2489, SP2490, SP2491, SP2492
GQCQ/Shadow Leopard	Automatic transmission (AT2)	√	√	√	√			SP2493, SP2494, SP2495, SP2496, SP2497, SP2498, SP2499
GQCQ/Shadow Leopard	Brake Control System (BCS)	√	√	√	√		√	SP2475, SP2476, SP2477, SP2478, SP2479, SP2480, SP2481, SP2482
GQCQ/Shadow Leopard	Supplementary Security System (SRS)	√	√	√	√		√	
GQCQ/Shadow Leopard	Integrated Body Control Module (IBCM)	√	√	√	√		√	SP2534, SP2535
GQCQ/Shadow Leopard	Electric Power Steering (EPS)	√	√	√	√			SP2504, SP2505, SP2506
GQCQ/Shadow Leopard	Combination Meter (ICM)	√	√	√	√			SP2523
GQCQ/Shadow Leopard	Front Air Conditioning System (HVAC)	√	√	√	√		√	SP2522
GQCQ/Shadow Leopard	Air Conditioning Control Panel (HCP)	√	√	√	√		√	SP2530
GQCQ/Shadow Leopard	Independent gateway (GWM)	√	√	√	√			SP2484
GQCQ/Shadow Leopard	Remote control system (TBOX)	√	√	√	√			
GQCQ/Shadow Leopard	Medium Range Radar Module (MRR)	√	√	√	√			SP2485, SP2486, SP2487
GQCQ/Shadow Leopard	Surround View System (SVM)	√	√	√	√			SP2500, SP2501
GQCQ/Shadow Leopard	Ambient Light (IAL)	√	√	√	√		√	SP2502, SP2503
GQCQ/Shadow Leopard	Shift lever module (GSM)	√	√	√	√			SP2483
GQCQ/Shadow Leopard	Reversing Assist System (RPA)	√	√	√	√			SP2507
GQCQ/Shadow Leopard	Driver Condition Monitoring System (DMS)	√	√	√	√			SP2508
GQCQ/Shadow Leopard	From the blind spot monitoring module (MBSM)	√	√	√	√			SP2509, SP2510, SP2511
GQCQ/Shadow Leopard	Main blind spot monitoring module (SBSM)	√	√	√	√			SP2512, SP2513, SP2514
GQCQ/Shadow Leopard	Intelligent Front Camera (IFC)	√	√	√	√			SP2515, SP2516, SP2517
GQCQ/Shadow Leopard	Intelligent central control host (IHU1)	√	√	√	√		√	SP2518, SP2519
GQCQ/Shadow Leopard	Intelligent central control host (IHU2)	√	√	√	√		√	SP2520, SP2521
GQCQ/Shadow Leopard	P gear controller (PCU)	√	√	√	√		√	SP2524, SP2525
GQCQ/Shadow Leopard	Wireless charging module (WCM)	√	√	√	√			SP2526
GQCQ/Shadow Leopard	Seat Control Module (SCM)	√	√	√	√			SP2527, SP2528
GQCQ/Shadow Leopard	Heated seat module (HVSM)	√	√	√	√		√	SP2529
GQCQ/Shadow Leopard	Left front door control module (FLDCM)	√	√	√	√		√	SP2531
GQCQ/Shadow Leopard	Right front door control module (FRDCM)	√	√	√	√			SP2532
GQCQ/Shadow Leopard	Electronic Toll Collection System (ETC)	√	√	√	√			SP2533
GQCQ/Shadow Leopard	Smart Bluetooth Module (SBM)	√	√	√	√			
GQCQ/GS4 2022	Engine Control Module (EMS)	√	√	√	√		√	
GQCQ/GS4 2022	Automatic transmission (AT1)	√	√	√	√		√	SP2560, SP2561
GQCQ/GS4 2022	Automatic transmission (AT2)	√	√	√	√			SP2562, SP2563
GQCQ/GS4 2022	Brake Control System (BCS)	√	√	√	√		√	SP2538, SP2539, SP2540, SP2541, SP2542, SP2543, SP2544, SP2545, SP2546, SP2547
GQCQ/GS4 2022	Supplementary Security System (SRS)	√	√	√	√		√	SP2537
GQCQ/GS4 2022	Body Control Module (BCM)	√	√	√	√		√	SP2553
GQCQ/GS4 2022	Electric Power Steering (EPS)	√	√	√	√			
GQCQ/GS4 2022	Combination Meter (ICM)	√	√	√	√		√	SP2550
GQCQ/GS4 2022	Front Air Conditioning System (HVAC)	√	√	√	√		√	
GQCQ/GS4 2022	Air Conditioning Control Panel (HCP)	√	√	√	√		√	
GQCQ/GS4 2022	Front Control Panel (FCP)	√	√	√	√		√	
GQCQ/GS4 2022	Intelligent Keyless Start (PEPS)	√	√	√	√		√	SP2549
GQCQ/GS4 2022	Independent gateway (GWM)	√	√	√	√			
GQCQ/GS4 2022	Entertainment System (CD1)	√	√	√	√		√	

GQCQ/GS4 2022	Entertainment System (CD2)	√	√	√	√	√	
GQCQ/GS4 2022	Remote control system (TBOX)	√	√	√	√	√	SP2551, SP2552
GQCQ/GS4 2022	Shift lever module (GSM)	√	√	√	√		
GQCQ/GS4 2022	Medium Range Radar Module (MRR)	√	√	√	√		SP2548
GQCQ/GS4 2022	Electric Back Door (PLGM)	√	√	√	√	√	SP2554, SP2555, SP2556, SP2557
GQCQ/GS4 2022	Surround View System (SVM)	√	√	√	√		SP2558
GQCQ/GS4 2022	Reversing Assist System (RPA)	√	√	√	√		
GQCQ/GS4 2022	Intelligent Front Camera (IFC)	√	√	√	√		SP2559
GQCQ/GS4 2022	Cockpit Monitoring System (DMS)	√	√	√	√		
GQCQ/GS4 2022	Heated seat module (HVSM)	√	√	√	√	√	
GQCQ/GS4 2022	Smart Bluetooth Module (SBM)	√	√	√	√		
GQCQ/New Trumpchi M8	Engine Control Module (EMS)	√	√	√	√	√	
GQCQ/New Trumpchi M8	Automatic transmission (AT)	√	√	√	√	√	SP2606, SP2607, SP2608
GQCQ/New Trumpchi M8	Brake Control System (BCS)	√	√	√	√	√	SP2568, SP2569, SP2570, SP2571, SP2572, SP2573, SP2574, SP2575, SP2576
GQCQ/New Trumpchi M8	Supplementary Security System (SRS)	√	√	√	√	√	SP2566, SP2567
GQCQ/New Trumpchi M8	Body Control Module (BCM)	√	√	√	√	√	SP2584
GQCQ/New Trumpchi M8	Electric Power Steering (EPS)	√	√	√	√		SP2602
GQCQ/New Trumpchi M8	Combination Meter (ICM)	√	√	√	√	√	SP2582, SP2583
GQCQ/New Trumpchi M8	Front Air Conditioning System (HVAC)	√	√	√	√	√	SP2585, SP2586, SP2587
GQCQ/New Trumpchi M8	Front Control Panel (FCP)	√	√	√	√	√	SP2590
GQCQ/New Trumpchi M8	Rear control panel (RCP)	√	√	√	√	√	SP2623
GQCQ/New Trumpchi M8	Intelligent Keyless Start (PEPS)	√	√	√	√	√	SP2581
GQCQ/New Trumpchi M8	Independent gateway (GWM)	√	√	√	√		SP2580
GQCQ/New Trumpchi M8	Remote control system (TBOX)	√	√	√	√	√	
GQCQ/New Trumpchi M8	Electric Back Door (PLGM)	√	√	√	√	√	SP2588, SP2589
GQCQ/New Trumpchi M8	Surround View System (SVM)	√	√	√	√		SP2591, SP2592
GQCQ/New Trumpchi M8	Reversing Assist System (RPA)	√	√	√	√		SP2593
GQCQ/New Trumpchi M8	Headlight Control System (AFS)	√	√	√	√	√	SP2564, SP2565
GQCQ/New Trumpchi M8	Integrated automatic parking assist (FAPA)	√	√	√	√		SP2594, SP2595
GQCQ/New Trumpchi M8	Right rear radar (MBSD)	√	√	√	√		SP2596, SP2597, SP2598
GQCQ/New Trumpchi M8	Left rear radar (SBSD)	√	√	√	√		SP2599, SP2600, SP2601
GQCQ/New Trumpchi M8	Shift lever module (GSM)	√	√	√	√		SP2577
GQCQ/New Trumpchi M8	Medium Range Radar Module (MRR)	√	√	√	√		SP2578, SP2579
GQCQ/New Trumpchi M8	Intelligent Front Camera (IFC)	√	√	√	√		SP2603, SP2604
GQCQ/New Trumpchi M8	Wireless charging module (WCM)	√	√	√	√		SP2605
GQCQ/New Trumpchi M8	Heated and ventilated front seats (HVSM)	√	√	√	√	√	SP2609
GQCQ/New Trumpchi M8	Heated Ventilation of Rear Seats (HVSMR)	√	√	√	√	√	SP2622
GQCQ/New Trumpchi M8	Seat Memory Module (MSM)	√	√	√	√	√	SP2610
GQCQ/New Trumpchi M8	P gear controller (ACM)	√	√	√	√		SP2611
GQCQ/New Trumpchi M8	Front audio control system (CD1)	√	√	√	√	√	SP2612, SP2613
GQCQ/New Trumpchi M8	Front audio control system (CD2)	√	√	√	√	√	SP2614, SP2615
GQCQ/New Trumpchi M8	Rear Audio Control System (ACUR)	√	√	√	√	√	SP2616
GQCQ/New Trumpchi M8	External power amplifier (AMP)	√	√	√	√	√	SP2617
GQCQ/New Trumpchi M8	Left electric sliding door (PSDL)	√	√	√	√		SP2618
GQCQ/New Trumpchi M8	Right electric sliding door (PSDR)	√	√	√	√		SP2619
GQCQ/New Trumpchi M8	Ambient Light Module (IAL)	√	√	√	√	√	SP2620, SP2621
GQCQ/GS8S	Engine Control Module (EMS)	√	√	√	√	√	
GQCQ/GS8S	Automatic transmission (AT)	√	√	√	√		SP2119, SP2120, SP2121
GQCQ/GS8S	Brake Control System (BCS)	√	√	√	√	√	SP2108, SP2109, SP2110, SP2111, SP2112, SP2113, SP2114, SP2115, SP2116
GQCQ/GS8S	Supplementary Security System (SRS)	√	√	√	√	√	SP2106, SP2107
GQCQ/GS8S	Body Control Module (BCM)	√	√	√	√	√	SP2133
GQCQ/GS8S	Electric Power Steering (EPS)	√	√	√	√		SP2124
GQCQ/GS8S	Combination Meter (ICM)	√	√	√	√	√	SP2131, SP2132
GQCQ/GS8S	Intelligent Keyless Start (PEPS)	√	√	√	√	√	SP2134
GQCQ/GS8S	Front Air Conditioning System (HVAC)	√	√	√	√	√	SP2130
GQCQ/GS8S	Independent gateway (GWM)	√	√	√	√		SP2118
GQCQ/GS8S	Shift lever module (GSM)	√	√	√	√		SP2117
GQCQ/GS8S	Headlight Control System (AFS)	√	√	√	√	√	SP2122, SP2123
GQCQ/GS8S	Surround View System (SVM)	√	√	√	√		SP2125, SP2126
GQCQ/GS8S	Wireless charging module (WCM)	√	√	√	√		SP2127
GQCQ/GS8S	Entertainment System (CD1)	√	√	√	√	√	SP2128
GQCQ/GS8S	Entertainment System (CD2)	√	√	√	√	√	SP2129
GQCQ/GS8S	Remote control system (TBOX)	√	√	√	√		
GQCQ/GS8S	Front Control Panel (FCP)	√	√	√	√	√	SP2135
GQCQ/GS8S	Seat Memory Module (MSM)	√	√	√	√	√	SP2136
GQCQ/GS8S	Heated seat module (HVSM)	√	√	√	√	√	SP2137
GQCQ/GS8S	Ambient Light (IAL)	√	√	√	√		SP2138, SP2139
GQCQ/GS8S	Electric Back Door (PLGM)	√	√	√	√	√	SP2140, SP2141
GQCQ/GS8S	Reversing Assist System (RPA)	√	√	√	√		SP2142
GQCQ/New Trumpchi G8S	Engine Control Module (EMS)	√	√	√	√	√	
GQCQ/New Trumpchi G8S	Automatic transmission (AT)	√	√	√	√	√	SP2158, SP2159, SP2160
GQCQ/New Trumpchi G8S	Brake Control System (BCS)	√	√	√	√	√	SP2145, SP2146, SP2147, SP2148, SP2149, SP2150, SP2151, SP2152
GQCQ/New Trumpchi G8S	Supplementary Security System (SRS)	√	√	√	√		SP2143, SP2144
GQCQ/New Trumpchi G8S	Body Control Module (BCM)	√	√	√	√	√	SP2183, SP2184
GQCQ/New Trumpchi G8S	Electric Power Steering (EPS)	√	√	√	√		SP2169
GQCQ/New Trumpchi G8S	Combination Meter (ICM)	√	√	√	√	√	SP2181
GQCQ/New Trumpchi G8S	Intelligent Keyless Start (PEPS)	√	√	√	√	√	SP2185

GQCQ/New Trumpchi GA8	Front Air Conditioning System (HVAC)	√	√	√	√		√	SP2180
GQCQ/New Trumpchi GA8	Air Conditioning Control Panel (HCP)	√	√	√	√		√	SP2190
GQCQ/New Trumpchi GA8	Independent gateway (GWM)	√	√	√	√			SP2154
GQCQ/New Trumpchi GA8	Shift lever module (GSM)	√	√	√	√			SP2153
GQCQ/New Trumpchi GA8	Medium Range Radar Module (MRR)	√	√	√	√			SP2155, SP2156, SP2157
GQCQ/New Trumpchi GA8	Headlight Control System (AFS)	√	√	√	√		√	SP2161, SP2162
GQCQ/New Trumpchi GA8	Main blind spot monitoring module (MBSD)	√	√	√	√			SP2163, SP2164, SP2165
GQCQ/New Trumpchi GA8	Slave Blind Spot Monitoring Module (SBSD)	√	√	√	√			SP2166, SP2167, SP2168
GQCQ/New Trumpchi GA8	Surround View System (SVM)	√	√	√	√			SP2170, SP2171
GQCQ/New Trumpchi GA8	Reversing Assist System (RPA1)	√	√	√	√			SP2172
GQCQ/New Trumpchi GA8	Reversing Assist System (RPA2)	√	√	√	√			SP2173
GQCQ/New Trumpchi GA8	Wireless charging module (WCM)	√	√	√	√			SP2174
GQCQ/New Trumpchi GA8	Intelligent Front Camera (IFC)	√	√	√	√			SP2175, SP2176
GQCQ/New Trumpchi GA8	Entertainment System (CD1)	√	√	√	√			SP2178
GQCQ/New Trumpchi GA8	Entertainment System (CD2)	√	√	√	√		√	SP2179
GQCQ/New Trumpchi GA8	Remote control system (TBOX)	√	√	√	√			SP2182
GQCQ/New Trumpchi GA8	Front Control Panel (FCP)	√	√	√	√		√	SP2186
GQCQ/New Trumpchi GA8	Seat memory module (MSM1)	√	√	√	√		√	SP2187
GQCQ/New Trumpchi GA8	Seat memory module (MSM2)	√	√	√	√		√	SP2188
GQCQ/New Trumpchi GA8	Heated seat module (HVSM)	√	√	√	√		√	SP2189
GQCQ/New Trumpchi GA8	Rear control panel (RCP)	√	√	√	√		√	SP2191
GQCQ/New Trumpchi GA8	External power amplifier (AMP)	√	√	√	√		√	SP2192
GQCQ/GM6	Engine Control Module (EMS)	√	√	√	√		√	SP0000, SP0001
GQCQ/GM6	Automatic transmission (AT)	√	√	√	√		√	SP0039, SP0040, SP0041
GQCQ/GM6	Brake Control System (BCS)	√	√	√	√			SP0003, SP0004, SP0005, SP0006, SP0007, SP0008, SP0009, SP0010, SP0011
GQCQ/GM6	Supplementary Security System (SRS)	√	√	√	√		√	SP0002
GQCQ/GM6	Body Control Module (BCM)	√	√	√	√		√	SP0028
GQCQ/GM6	Electric Power Steering (EPS)	√	√	√	√			SP0037, SP0038
GQCQ/GM6	Combination Meter (ICM)	√	√	√	√		√	SP0020, SP0021
GQCQ/GM6	Intelligent Keyless Start (PEPS)	√	√	√	√		√	SP0016, SP0017
GQCQ/GM6	Front Air Conditioning System (HVAC)	√	√	√	√		√	SP0029
GQCQ/GM6	Air Conditioning Control Panel (HCP)	√	√	√	√		√	SP0030
GQCQ/GM6	Rear control panel (RCP)	√	√	√	√		√	SP0031
GQCQ/GM6	Independent gateway (GWM)	√	√	√	√			SP0012
GQCQ/GM6	Electronic steering column lock (ESCL)	√	√	√	√			SP0015
GQCQ/GM6	Entertainment System (CD)	√	√	√	√			SP0018
GQCQ/GM6	Shift lever module (GSM)	√	√	√	√		√	
GQCQ/GM6	Headlight Control System (AFS)	√	√	√	√		√	SP0013, SP0014
GQCQ/GM6	Remote control system (TBOX)	√	√	√	√		√	SP0022, SP0023, SP0024, SP0025, SP0026, SP0027
GQCQ/GM6	Wireless charging module (WCM)	√	√	√	√		√	SP0032
GQCQ/GM6	Heated seat module (HVSM)	√	√	√	√		√	SP0033
GQCQ/GM6	Surround View System (SVM)	√	√	√	√			SP0034, SP0035
GQCQ/GM6	Parking Assist System (RPA)	√	√	√	√			SP0036
GQCQ/GM8	Engine Control Module (EMS)	√	√	√	√		√	SP0798, SP0799
GQCQ/GM8	Automatic transmission (AT)	√	√	√	√		√	SP0779, SP0780, SP0781
GQCQ/GM8	Brake Control System (BCS)	√	√	√	√		√	SP0786, SP0787, SP0788, SP0789, SP0790, SP0791, SP0792, SP0793
GQCQ/GM8	Supplementary Security System (SRS)	√	√	√	√		√	SP0784
GQCQ/GM8	Body Control Module (BCM)	√	√	√	√		√	SP0826
GQCQ/GM8	Electric Power Steering (EPS)	√	√	√	√			SP0810
GQCQ/GM8	Combination Meter (ICM)	√	√	√	√		√	SP0813, SP0814
GQCQ/GM8	Intelligent Keyless Start (PEPS)	√	√	√	√		√	SP0829, SP0830
GQCQ/GM8	Front Air Conditioning System (HVAC)	√	√	√	√		√	SP0828
GQCQ/GM8	Rear Air Conditioning System (RHVAC)	√	√	√	√		√	SP0827
GQCQ/GM8	Air Conditioning Control Panel (HCP)	√	√	√	√		√	SP0823
GQCQ/GM8	Rear control panel (RCP)	√	√	√	√		√	SP0824
GQCQ/GM8	Front Control Panel (FCP)	√	√	√	√		√	SP0825
GQCQ/GM8	Tire Pressure Monitoring System (TPMS)	√	√	√	√			SP0775, SP0776
GQCQ/GM8	Heated seat module (HVSM)	√	√	√	√		√	SP0773
GQCQ/GM8	Rear seat heating module (HVSMR)	√	√	√	√			SP0785
GQCQ/GM8	Seat Memory Module (MSM)	√	√	√	√			SP0774
GQCQ/GM8	Headlight Control System (AFS)	√	√	√	√		√	SP0777, SP0778
GQCQ/GM8	Electric Back Door (PLGM)	√	√	√	√		√	SP0783
GQCQ/GM8	Shift lever module (GSM)	√	√	√	√		√	SP0794
GQCQ/GM8	Medium Range Radar Module (MRR)	√	√	√	√			SP0795

GQCQ/GM8	Parking Assist System (RPA)	✓	✓	✓	✓			SP0802, SP0803, SP0804, SP0805
GQCQ/GM8	Parking Assist System (APA)	✓	✓	✓	✓			SP0806
GQCQ/GM8	Surround View System (SVM)	✓	✓	✓	✓			SP0809
GQCQ/GM8	Intelligent Front Camera (IFC)	✓	✓	✓	✓			
GQCQ/GM8	Rear Audio Control System (ACUR)	✓	✓	✓	✓			SP0811
GQCQ/GM8	Wireless charging module (WCM)	✓	✓	✓	✓	✓		SP0812
GQCQ/GM8	Remote control system (TBOX)	✓	✓	✓	✓	✓		SP0815, SP0816, SP0817, SP0818, SP0819, SP0820
GQCQ/GM8	Ambient Light (IAL)	✓	✓	✓	✓			SP0821, SP0822
GQCQ/GM8	Left electric sliding door (PSDL)	✓	✓	✓	✓			SP0831
GQCQ/GM8	Right electric sliding door (PSDR)	✓	✓	✓	✓			SP0832
GQCQ/GM8	Front Audio Control System (CD)	✓	✓	✓	✓	✓		SP0833
GQCQ/GM8	External power amplifier (AMP)	✓	✓	✓	✓			
GQCQ/GM8-2020 models	Engine Control Module (EMS)	✓	✓	✓	✓	✓		SP0798, SP0799
GQCQ/GM8-2020 models	Automatic transmission (AT)	✓	✓	✓	✓	✓		SP0779, SP0780, SP0781
GQCQ/GM8-2020 models	Brake Control System (BCS)	✓	✓	✓	✓	✓		SP0786, SP0787, SP0788, SP0789, SP0790, SP0791, SP0792, SP0793
GQCQ/GM8-2020 models	Supplementary Security System (SRS)	✓	✓	✓	✓	✓		SP0784
GQCQ/GM8-2020 models	Body Control Module (BCM)	✓	✓	✓	✓	✓		SP0826
GQCQ/GM8-2020 models	Electric Power Steering (EPS)	✓	✓	✓	✓			SP0810
GQCQ/GM8-2020 models	Combination Meter (ICM)	✓	✓	✓	✓	✓		SP0813, SP0814
GQCQ/GM8-2020 models	Intelligent Keyless Start (PEPS)	✓	✓	✓	✓	✓		SP0829, SP0830
GQCQ/GM8-2020 models	Front Air Conditioning System (HVAC)	✓	✓	✓	✓	✓		SP0828
GQCQ/GM8-2020 models	Rear Air Conditioning System (RHVAC)	✓	✓	✓	✓	✓		SP0827
GQCQ/GM8-2020 models	Air Conditioning Control Panel (HCP)	✓	✓	✓	✓	✓		SP0823
GQCQ/GM8-2020 models	Rear control panel (RCP)	✓	✓	✓	✓	✓		SP0824
GQCQ/GM8-2020 models	Front Control Panel (FCP)	✓	✓	✓	✓	✓		SP0825
GQCQ/GM8-2020 models	Tire Pressure Monitoring System (TPMS)	✓	✓	✓	✓			SP0775, SP0776
GQCQ/GM8-2020 models	Independent gateway (GWM)	✓	✓	✓	✓			SP0801
GQCQ/GM8-2020 models	Heated seat module (HVSM)	✓	✓	✓	✓	✓		SP0773
GQCQ/GM8-2020 models	Rear seat heating module (HVSMR)	✓	✓	✓	✓			SP0785
GQCQ/GM8-2020 models	Seat Memory Module (MSM)	✓	✓	✓	✓			SP0774
GQCQ/GM8-2020 models	Headlight Control System (AFS)	✓	✓	✓	✓	✓		SP0777, SP0778
GQCQ/GM8-2020 models	Electric Back Door (PLGM)	✓	✓	✓	✓	✓		SP0783
GQCQ/GM8-2020 models	Shift lever module (GSM)	✓	✓	✓	✓	✓		SP0794
GQCQ/GM8-2020 models	Medium Range Radar Module (MRR)	✓	✓	✓	✓	✓		SP0795
GQCQ/GM8-2020 models	Parking Assist System (RPA)	✓	✓	✓	✓			SP0802, SP0803, SP0804, SP0805
GQCQ/GM8-2020 models	Parking Assist System (APA)	✓	✓	✓	✓			SP0806
GQCQ/GM8-2020 models	Surround View System (SVM)	✓	✓	✓	✓			SP0809
GQCQ/GM8-2020 models	Intelligent Front Camera (IFC)	✓	✓	✓	✓			
GQCQ/GM8-2020 models	Rear Audio Control System (ACUR)	✓	✓	✓	✓			SP0811
GQCQ/GM8-2020 models	Wireless charging module (WCM)	✓	✓	✓	✓	✓		SP0812
GQCQ/GM8-2020 models	Remote control system (TBOX)	✓	✓	✓	✓	✓		SP0815, SP0816, SP0817, SP0818, SP0819, SP0820
GQCQ/GM8-2020 models	Ambient Light (IAL)	✓	✓	✓	✓			SP0821, SP0822
GQCQ/GM8-2020 models	Left electric sliding door (PSDL)	✓	✓	✓	✓			SP0831
GQCQ/GM8-2020 models	Right electric sliding door (PSDR)	✓	✓	✓	✓			SP0832
GQCQ/GM8-2020 models	Front Audio Control System (CD)	✓	✓	✓	✓	✓		SP0833
GQCQ/GM8-2020 models	External power amplifier (AMP)	✓	✓	✓	✓			
GQCQ/GS3	Engine Control Module (EMS)	✓	✓	✓	✓	✓		SP0672
GQCQ/GS3	Automatic transmission (TCU)	✓	✓	✓	✓	✓		SP0665, SP0666, SP0667
GQCQ/GS3	Brake Control System (BCS)	✓	✓	✓	✓			SP0637, SP0638, SP0639, SP0640
GQCQ/GS3	Supplementary Security System (SRS)	✓	✓	✓	✓	✓		SP0633
GQCQ/GS3	Body Control Module (BCM)	✓	✓	✓	✓	✓		SP0608, SP0609
GQCQ/GS3	Electric Power Steering (EPS)	✓	✓	✓	✓			SP0614, SP0615, SP0616
GQCQ/GS3	Combination Meter (ICM)	✓	✓	✓	✓	✓		SP0629, SP0630
GQCQ/GS3	Intelligent Keyless Start (PEPS)	✓	✓	✓	✓	✓		SP0631, SP0632
GQCQ/GS3	Air Conditioning System (HVAC)	✓	✓	✓	✓	✓		SP0636
GQCQ/GS3	Front Control Panel (FCP)	✓	✓	✓	✓	✓		SP0618
GQCQ/GS3	Air Conditioning Control Panel (HCP)	✓	✓	✓	✓	✓		SP0635
GQCQ/GS3	Electronic Parking (EPB)	✓	✓	✓	✓			SP0641, SP0642, SP0643, SP0644, SP0645, SP0646, SP0647
GQCQ/GS3	Independent gateway (GWM)	✓	✓	✓	✓			SP0659
GQCQ/GS3	Heated seat module (HVSM)	✓	✓	✓	✓	✓		SP0607
GQCQ/GS3	Entertainment System (CD)	✓	✓	✓	✓	✓		SP0612
GQCQ/GS3	Wireless charging module (WCM)	✓	✓	✓	✓	✓		SP0634
GQCQ/GS3	Reversing Assist System (RPA)	✓	✓	✓	✓			SP0648
GQCQ/GS3	Electronic steering column lock (ESCL)	✓	✓	✓	✓			SP0649
GQCQ/GS3	Multi-function display (MFS)	✓	✓	✓	✓			SP0650
GQCQ/GS3	Remote control system (TBOX)	✓	✓	✓	✓	✓		SP0651, SP0652, SP0653, SP0654, SP0655, SP0656, SP0657, SP0658
GQCQ/GS3	Surround View System (SVM)	✓	✓	✓	✓			SP0660, SP0661
GQCQ/GS3	Shift lever module (GSML)	✓	✓	✓	✓			
GQCQ/GS3	Low Speed Sound System (AVAS)	✓	✓	✓	✓	✓		SP0679
GQCQ/GS4	Engine Control Module (EMS)	✓	✓	✓	✓	✓		SP0174, SP0175, SP0176, SP0177
GQCQ/GS4	Automatic transmission (AT)	✓	✓	✓	✓	✓		SP0352, SP0353, SP0354
GQCQ/GS4	Brake Control System (BCS)	✓	✓	✓	✓			SP0165, SP0166, SP0167, SP0168, SP0169, SP0170, SP0171, SP0172
GQCQ/GS4	Supplementary Security System (SRS)	✓	✓	✓	✓	✓		SP0179
GQCQ/GS4	Body Control Module (BCM)	✓	✓	✓	✓	✓		SP0143, SP0144
GQCQ/GS4	Electric Power Steering (EPS)	✓	✓	✓	✓			SP0178
GQCQ/GS4	Combination Meter (ICM)	✓	✓	✓	✓	✓		SP0151, SP0152
GQCQ/GS4	Intelligent Keyless Start (PEPS)	✓	✓	✓	✓	✓		SP0153, SP0154

GQCQ/GS4	Air Conditioning System (HVAC)	√	√	√	√		√	SP0150
GQCQ/GS4	Air Conditioning Control Panel (HCP)	√	√	√	√		√	SP0149
GQCQ/GS4	Front Control Panel (FCP)	√	√	√	√		√	SP0148
GQCQ/GS4	Tire Pressure Monitoring System (TPMS)	√	√	√	√			SP0180, SP0181
GQCQ/GS4	Heated seat module (HVSM)	√	√	√	√		√	SP0142
GQCQ/GS4	Entertainment System (CD)	√	√	√	√		√	SP0145
GQCQ/GS4	Reversing Assist System (RPA)	√	√	√	√			SP0155
GQCQ/GS4	Remote control system (TBOX)	√	√	√	√		√	SP0156, SP0157, SP0158, SP0159, SP0160, SP0161
GQCQ/GS4	Headlight Control System (AFS)	√	√	√	√		√	SP0163, SP0164
GQCQ/GS4	Torque Management Module (TMM)	√	√	√	√			SP0182
GQCQ/GS4	Panoramic Parking System (SVM)	√	√	√	√			SP0183
GQCQ/GS4	Shift lever module (GSM)	√	√	√	√		√	
GQCQ/GS4	Smart start-stop system (SSU)	√	√	√	√			SP0191
GQCQ/The second generation Trumpchi GS4	Engine Control Module (EMS)	√	√	√	√		√	
GQCQ/The second generation Trumpchi GS4	Automatic transmission (AT)	√	√	√	√		√	SP0484, SP0485, SP0486
GQCQ/The second generation Trumpchi GS4	Brake Control System (BCS)	√	√	√	√		√	SP0427, SP0428, SP0429, SP0430, SP0431, SP0432, SP0433, SP0434, SP0435, SP0436, SP0437, SP0438
GQCQ/The second generation Trumpchi GS4	Supplementary Security System (SRS)	√	√	√	√		√	SP0426
GQCQ/The second generation Trumpchi GS4	Body Control Module (BCM)	√	√	√	√		√	SP0466, SP0467
GQCQ/The second generation Trumpchi GS4	Electric Power Steering (EPS)	√	√	√	√			SP0482
GQCQ/The second generation Trumpchi GS4	Combination Meter (ICM)	√	√	√	√		√	SP0463, SP0464
GQCQ/The second generation Trumpchi GS4	Intelligent Keyless Start (PEPS)	√	√	√	√		√	SP0458, SP0459
GQCQ/The second generation Trumpchi GS4	Front Air Conditioning System (HVAC)	√	√	√	√		√	SP0468
GQCQ/The second generation Trumpchi GS4	Air Conditioning Control Panel (HCP)	√	√	√	√		√	SP0457
GQCQ/The second generation Trumpchi GS4	Front Control Panel (FCP)	√	√	√	√		√	SP0475
GQCQ/The second generation Trumpchi GS4	Independent gateway (GWM)	√	√	√	√			SP0455
GQCQ/The second generation Trumpchi GS4	Shift lever module (GSM)	√	√	√	√		√	SP0451
GQCQ/The second generation Trumpchi GS4	Medium Range Radar Module (MRR)	√	√	√	√			SP0453, SP0454
GQCQ/The second generation Trumpchi GS4	Entertainment System (CD)	√	√	√	√		√	SP0460
GQCQ/The second generation Trumpchi GS4	Remote control system (TBOX)	√	√	√	√		√	SP0465
GQCQ/The second generation Trumpchi GS4	Electric Back Door (PLGM)	√	√	√	√		√	SP0470, SP0471, SP0472, SP0473, SP0474
GQCQ/The second generation Trumpchi GS4	Headlight Control System (AFS)	√	√	√	√		√	SP0424, SP0425
GQCQ/The second generation Trumpchi GS4	Surround View System (SVM)	√	√	√	√			SP0476, SP0477
GQCQ/The second generation Trumpchi GS4	Reversing Assist System (RPA)	√	√	√	√			SP0478, SP0479, SP0480, SP0481
GQCQ/The second generation Trumpchi GS4	Intelligent Front Camera (IFC)	√	√	√	√			
GQCQ/The second generation Trumpchi GS4	Wireless charging module (WCM)	√	√	√	√			SP0483
GQCQ/The second generation Trumpchi GS4	Four-wheel drive system (TMM)	√	√	√	√			
GQCQ/The second generation Trumpchi GS4	Heated seat module (HVSM)	√	√	√	√		√	SP0496
GQCQ/The second generation Trumpchi GS4	Seat Memory Module (MSM)	√	√	√	√		√	SP0497

GQCQ/The second generation Trumpchi GS4	Smart Bluetooth Module (SBM)	√	√	√	√			
GQCQ/The second generation Trumpchi GS4	All Terrain Switch (ATSS)	√	√	√	√			
GQCQ/The second generation Trumpchi GS4	Low Speed Sound System (AVAS)	√	√	√	√		√	
GQCQ/The second generation Trumpchi GS4	Seat Control Module (SCM)	√	√	√	√		√	
GQCQ/GS4 Coupe	Engine Control Module (EMS)	√	√	√	√		√	
GQCQ/GS4 Coupe	Automatic transmission (AT)	√	√	√	√		√	SP0484, SP0485, SP0486
GQCQ/GS4 Coupe	Brake Control System (BCS)	√	√	√	√		√	SP0427, SP0428, SP0429, SP0430, SP0431, SP0432, SP0433, SP0434, SP0435, SP0436, SP0437, SP0438
GQCQ/GS4 Coupe	Supplementary Security System (SRS)	√	√	√	√		√	SP0426
GQCQ/GS4 Coupe	Body Control Module (BCM)	√	√	√	√		√	SP0466, SP0467
GQCQ/GS4 Coupe	Electric Power Steering (EPS)	√	√	√	√			SP0482
GQCQ/GS4 Coupe	Combination Meter (ICM)	√	√	√	√		√	SP0463, SP0464
GQCQ/GS4 Coupe	Intelligent Keyless Start (PEPS)	√	√	√	√		√	SP0458, SP0459
GQCQ/GS4 Coupe	Front Air Conditioning System (HVAC)	√	√	√	√		√	SP0468
GQCQ/GS4 Coupe	Air Conditioning Control Panel (HCP)	√	√	√	√		√	SP0457
GQCQ/GS4 Coupe	Front Control Panel (FCP)	√	√	√	√		√	SP0475
GQCQ/GS4 Coupe	Independent gateway (GWM)	√	√	√	√			SP0455
GQCQ/GS4 Coupe	Shift lever module (GSM)	√	√	√	√		√	SP0451
GQCQ/GS4 Coupe	Medium Range Radar Module (MRR)	√	√	√	√			SP0453, SP0454
GQCQ/GS4 Coupe	Entertainment System (CD)	√	√	√	√		√	SP0460
GQCQ/GS4 Coupe	Remote control system (TBOX)	√	√	√	√		√	SP0465
GQCQ/GS4 Coupe	Electric Back Door (PLGM)	√	√	√	√		√	SP0470, SP0471, SP0472, SP0473, SP0474
GQCQ/GS4 Coupe	Headlight Control System (AFS)	√	√	√	√		√	SP0424, SP0425
GQCQ/GS4 Coupe	Surround View System (SVM)	√	√	√	√			SP0476, SP0477
GQCQ/GS4 Coupe	Reversing Assist System (RPA)	√	√	√	√			SP0478, SP0479, SP0480, SP0481
GQCQ/GS4 Coupe	Intelligent Front Camera (IFC)	√	√	√	√			
GQCQ/GS4 Coupe	Wireless charging module (WCM)	√	√	√	√			SP0483
GQCQ/GS4 Coupe	Four-wheel drive system (TMM)	√	√	√	√			
GQCQ/GS4 Coupe	Heated seat module (HVSM)	√	√	√	√		√	SP0496
GQCQ/GS4 Coupe	Seat Memory Module (MSM)	√	√	√	√		√	SP0497
GQCQ/GS4 Coupe	Smart Bluetooth Module (SBM)	√	√	√	√			
GQCQ/GS4 Coupe	All Terrain Switch (ATSS)	√	√	√	√			
GQCQ/GS4 Coupe	Low Speed Sound System (AVAS)	√	√	√	√		√	
GQCQ/GS4 Coupe	Seat Control Module (SCM)	√	√	√	√		√	
GQCQ/GS4 2018	Engine Control Module (EMS)	√	√	√	√		√	SP0362, SP0363, SP0364
GQCQ/GS4 2018	Automatic transmission (AT)	√	√	√	√		√	SP0352, SP0353, SP0354
GQCQ/GS4 2018	Brake Control System (BCS)	√	√	√	√			SP0339, SP0340, SP0341, SP0342, SP0343, SP0344, SP0345, SP0346
GQCQ/GS4 2018	Supplementary Security System (SRS)	√	√	√	√		√	SP0338
GQCQ/GS4 2018	Body Control Module (BCM)	√	√	√	√		√	
GQCQ/GS4 2018	Electric Power Steering (EPS)	√	√	√	√			SP0373, SP0374, SP0375
GQCQ/GS4 2018	Combination Meter (ICM)	√	√	√	√		√	SP0371
GQCQ/GS4 2018	Intelligent Keyless Start (PEPS)	√	√	√	√		√	SP0372
GQCQ/GS4 2018	Air Conditioning System (HVAC)	√	√	√	√		√	
GQCQ/GS4 2018	Air Conditioning Control Panel (HCP)	√	√	√	√		√	
GQCQ/GS4 2018	Tire Pressure Monitoring System (TPMS)	√	√	√	√			SP0347, SP0348
GQCQ/GS4 2018	Independent gateway (GWM)	√	√	√	√			SP0366
GQCQ/GS4 2018	Heated seat module (HVSM)	√	√	√	√		√	SP0337
GQCQ/GS4 2018	Torque Management Module (TMM)	√	√	√	√			SP0349
GQCQ/GS4 2018	Headlight Control System (AFS)	√	√	√	√		√	SP0350, SP0351
GQCQ/GS4 2018	Shift lever module (GSM)	√	√	√	√		√	SP0361
GQCQ/GS4 2018	Surround View System (SVM)	√	√	√	√			SP0367, SP0368
GQCQ/GS4 2018	Reversing Assist System (RPA)	√	√	√	√			SP0369
GQCQ/GS4 2018	Wireless charging module (WCM)	√	√	√	√		√	SP0370
GQCQ/GS4 2018	Entertainment System (CD)	√	√	√	√		√	
GQCQ/GS5 (GS5 Speed Bo)	Engine Control Module (EMS)	√	√	√	√		√	SP0894, SP0895, SP0896
GQCQ/GS5 (GS5 Speed Bo)	Automatic transmission (AT)	√	√	√	√			SP0929
GQCQ/GS5 (GS5 Speed Bo)	Brake Control System (BCS)	√	√	√	√			SP0884, SP0885, SP0886, SP0887
GQCQ/GS5 (GS5 Speed Bo)	Supplementary Security System (SRS)	√	√	√	√			SP0917
GQCQ/GS5 (GS5 Speed Bo)	Body Control Module (BCM)	√	√	√	√		√	SP0883
GQCQ/GS5 (GS5 Speed Bo)	Combination Meter (ICM)	√	√	√	√		√	SP0910, SP0911
GQCQ/GS5 (GS5 Speed Bo)	Intelligent Keyless Start (PEPS)	√	√	√	√		√	SP0914, SP0915
GQCQ/GS5 (GS5 Speed Bo)	Air Conditioning System (HVAC)	√	√	√	√		√	SP0909
GQCQ/GS5 (GS5 Speed Bo)	Tire Pressure Monitoring System (TPMS)	√	√	√	√			SP0927, SP0928
GQCQ/GS5 (GS5 Speed Bo)	Electronic Parking (EPB)	√	√	√	√		√	SP0900, SP0901, SP0902, SP0903, SP0904, SP0905
GQCQ/GS5 (GS5 Speed Bo)	Blind Spot Monitoring System (BSD)	√	√	√	√			SP0888

GQCQ/GS5 (GS5 Speed Bo)	Entertainment System (CD)	✓	✓	✓	✓		✓	SP0889
GQCQ/GS5 (GS5 Speed Bo)	Front Collision Warning System (FCW)	✓	✓	✓	✓			SP0908
GQCQ/GS5 (GS5 Speed Bo)	Lane Wandering System (LDW)	✓	✓	✓	✓			SP0912, SP0913
GQCQ/GS5 (GS5 Speed Bo)	Reversing Assist System (RPA)	✓	✓	✓	✓		✓	SP0916
GQCQ/GS5 (GS5 Speed Bo)	Panoramic Parking System (SVM)	✓	✓	✓	✓			SP0918, SP0919
GQCQ/GS5 (GS5 Speed Bo)	Headlight Control System (AFS)	✓	✓	✓	✓		✓	SP0881, SP0882
GQCQ/GS5 (GS5 Speed Bo)	Remote control system (TBOX)	✓	✓	✓	✓			SP0920, SP0921, SP0922, SP0923, SP0924, SP0925
GQCQ/GS5 (GS5 Speed Bo)	Torque Management Module (TMM)	✓	✓	✓	✓			SP0926
GQCQ/GS5 (GS5 Speed Bo)	Shift lever module (GSM)	✓	✓	✓	✓		✓	
GQCQ/GS5 2019 models	Engine Control Module (EMS)	✓	✓	✓	✓		✓	SP0062, SP0063
GQCQ/GS5 2019 models	Automatic transmission (AT)	✓	✓	✓	✓		✓	SP0083, SP0084, SP0085
GQCQ/GS5 2019 models	Brake Control System (BCS)	✓	✓	✓	✓			SP0053, SP0054, SP0055, SP0056, SP0057, SP0058, SP0059, SP0060
GQCQ/GS5 2019 models	Supplementary Security System (SRS)	✓	✓	✓	✓		✓	SP0051, SP0052
GQCQ/GS5 2019 models	Body Control Module (BCM)	✓	✓	✓	✓		✓	SP0087, SP0088, SP0089
GQCQ/GS5 2019 models	Electric Power Steering (EPS)	✓	✓	✓	✓			SP0068, SP0069
GQCQ/GS5 2019 models	Combination Meter (ICM)	✓	✓	✓	✓		✓	SP0071, SP0072
GQCQ/GS5 2019 models	Intelligent Keyless Start (PEPS)	✓	✓	✓	✓		✓	SP0076, SP0077
GQCQ/GS5 2019 models	Front Air Conditioning System (HVAC)	✓	✓	✓	✓		✓	SP0082
GQCQ/GS5 2019 models	Air Conditioning Control Panel (HCP)	✓	✓	✓	✓		✓	SP1048
GQCQ/GS5 2019 models	Front Control Panel (FCP)	✓	✓	✓	✓		✓	SP0080
GQCQ/GS5 2019 models	Independent gateway (GWM)	✓	✓	✓	✓			SP0064
GQCQ/GS5 2019 models	Shift lever module (GSM)	✓	✓	✓	✓			
GQCQ/GS5 2019 models	Actuator gear controller (PCU)	✓	✓	✓	✓			
GQCQ/GS5 2019 models	Surround View System (SVM)	✓	✓	✓	✓			SP0065, SP0066
GQCQ/GS5 2019 models	Intelligent Front Camera (IFC)	✓	✓	✓	✓			
GQCQ/GS5 2019 models	Wireless charging module (WCM)	✓	✓	✓	✓		✓	SP0067
GQCQ/GS5 2019 models	Remote control system (TBOX)	✓	✓	✓	✓		✓	SP0070
GQCQ/GS5 2019 models	Entertainment System (CD)	✓	✓	✓	✓		✓	SP0073
GQCQ/GS5 2019 models	Electric Back Door (PLGM)	✓	✓	✓	✓		✓	SP0078, SP0079
GQCQ/GS5 2019 models	Heated seat module (HVSM)	✓	✓	✓	✓		✓	SP0048
GQCQ/GS5 2019 models	Medium Range Radar Module (MRR)	✓	✓	✓	✓			SP0049, SP0050
GQCQ/GS5 2019 models	Seat Memory Module (MSM)	✓	✓	✓	✓		✓	SP0086
GQCQ/GS5 2019 models	Reversing Assist System (RPA)	✓	✓	✓	✓			SP0090
GQCQ/GS5 2019 models	Main blind spot monitoring module (MBSM)	✓	✓	✓	✓		✓	SP0091, SP0092, SP0093
GQCQ/GS5 2019 models	Slave Blind Spot Monitoring Module (SBSM)	✓	✓	✓	✓		✓	SP0094
GQCQ/GS7	Engine Control Module (EMS)	✓	✓	✓	✓		✓	
GQCQ/GS7	Automatic transmission (AT)	✓	✓	✓	✓		✓	SP0333, SP0334
GQCQ/GS7	Brake Control System (BCS)	✓	✓	✓	✓			SP0280, SP0281, SP0282, SP0283, SP0284, SP0285, SP0286, SP0287, SP0288
GQCQ/GS7	Supplementary Security System (SRS)	✓	✓	✓	✓		✓	SP0314
GQCQ/GS7	Body Control Module (BCM)	✓	✓	✓	✓		✓	SP0278
GQCQ/GS7	Electric Power Steering (EPS)	✓	✓	✓	✓			SP0295
GQCQ/GS7	Combination Meter (ICM)	✓	✓	✓	✓		✓	SP0302, SP0303
GQCQ/GS7	Intelligent Keyless Start (PEPS)	✓	✓	✓	✓		✓	SP0307, SP0308
GQCQ/GS7	Front Air Conditioning System (HVAC)	✓	✓	✓	✓		✓	SP0299
GQCQ/GS7	Rear Air Conditioning System (RHVAC)	✓	✓	✓	✓		✓	SP0328
GQCQ/GS7	Front Control Panel (FCP)	✓	✓	✓	✓		✓	SP0296
GQCQ/GS7	Air Conditioning Control Panel (RCP)	✓	✓	✓	✓		✓	SP0298
GQCQ/GS7	Tire Pressure Monitoring System (TPMS)	✓	✓	✓	✓			SP0325, SP0326
GQCQ/GS7	Independent gateway (GWM)	✓	✓	✓	✓			SP0297
GQCQ/GS7	Four-wheel drive system (TMM)	✓	✓	✓	✓			SP0324
GQCQ/GS7	Heated seat module (HVSM)	✓	✓	✓	✓		✓	SP0276
GQCQ/GS7	Seat Memory Module (MSM)	✓	✓	✓	✓		✓	SP0277
GQCQ/GS7	Entertainment System (CD)	✓	✓	✓	✓		✓	SP0289
GQCQ/GS7	Shift lever module (GSM)	✓	✓	✓	✓		✓	
GQCQ/GS7	Headlight Control System (AFS)	✓	✓	✓	✓		✓	SP0300, SP0301
GQCQ/GS7	Intelligent Front Camera (IFC)	✓	✓	✓	✓			SP0304
GQCQ/GS7	Medium Range Radar Module (MRR)	✓	✓	✓	✓			SP0305, SP0306
GQCQ/GS7	Parking Assist System (RPA)	✓	✓	✓	✓			SP0309, SP0310, SP0311, SP0312
GQCQ/GS7	Parking Assist System (APA)	✓	✓	✓	✓			SP0313
GQCQ/GS7	Surround View System (SVM)	✓	✓	✓	✓			SP0317
GQCQ/GS7	Remote control system (TBOX)	✓	✓	✓	✓		✓	SP0318, SP0319, SP0320, SP0321, SP0322, SP0323
GQCQ/GS7	Electric Back Door (PLGM)	✓	✓	✓	✓		✓	SP0327
GQCQ/GS7	Wireless charging module (WCM)	✓	✓	✓	✓		✓	SP0329
GQCQ/GS7	Ambient Light (IAL)	✓	✓	✓	✓		✓	SP0330, SP0331
GQCQ/GS7	All Terrain Switch (ATSS)	✓	✓	✓	✓		✓	SP0332
GQCQ/GS7-2019 models	Engine Control Module (EMS)	✓	✓	✓	✓		✓	
GQCQ/GS7-2019 models	Automatic transmission (AT)	✓	✓	✓	✓		✓	SP0333, SP0334
GQCQ/GS7-2019 models	Brake Control System (BCS)	✓	✓	✓	✓			SP0280, SP0281, SP0282, SP0283, SP0284, SP0285, SP0286, SP0287, SP0288
GQCQ/GS7-2019 models	Supplementary Security System (SRS)	✓	✓	✓	✓		✓	SP0314
GQCQ/GS7-2019 models	Body Control Module (BCM)	✓	✓	✓	✓		✓	SP0278
GQCQ/GS7-2019 models	Electric Power Steering (EPS)	✓	✓	✓	✓			SP0295
GQCQ/GS7-2019 models	Combination Meter (ICM)	✓	✓	✓	✓		✓	SP0302, SP0303
GQCQ/GS7-2019 models	Intelligent Keyless Start (PEPS)	✓	✓	✓	✓		✓	SP0307, SP0308
GQCQ/GS7-2019 models	Front Air Conditioning System (HVAC)	✓	✓	✓	✓		✓	SP0299

GQCG/GS7-2019 models	Rear Air Conditioning System (RHVAC)	✓	✓	✓	✓	✓	SP0328
GQCG/GS7-2019 models	Front Control Panel (FCP)	✓	✓	✓	✓	✓	SP0296
GQCG/GS7-2019 models	Air Conditioning Control Panel (RCP)	✓	✓	✓	✓	✓	SP0298
GQCG/GS7-2019 models	Tire Pressure Monitoring System (TPMS)	✓	✓	✓	✓	✓	SP0325, SP0326
GQCG/GS7-2019 models	Independent gateway (GWM)	✓	✓	✓	✓	✓	SP0297
GQCG/GS7-2019 models	Four-wheel drive system (TMM)	✓	✓	✓	✓	✓	SP0324
GQCG/GS7-2019 models	Heated seat module (HVSM)	✓	✓	✓	✓	✓	SP0276
GQCG/GS7-2019 models	Seat Memory Module (MSM)	✓	✓	✓	✓	✓	SP0277
GQCG/GS7-2019 models	Entertainment System (CD)	✓	✓	✓	✓	✓	SP0289
GQCG/GS7-2019 models	Shift lever module (GSM)	✓	✓	✓	✓	✓	
GQCG/GS7-2019 models	Headlight Control System (AFS)	✓	✓	✓	✓	✓	SP0300, SP0301
GQCG/GS7-2019 models	Intelligent Front Camera (IFC)	✓	✓	✓	✓	✓	SP0304
GQCG/GS7-2019 models	Medium Range Radar Module (MRR)	✓	✓	✓	✓	✓	SP0305, SP0306
GQCG/GS7-2019 models	Parking Assist System (RPA)	✓	✓	✓	✓	✓	SP0309, SP0310, SP0311, SP0312
GQCG/GS7-2019 models	Parking Assist System (APA)	✓	✓	✓	✓	✓	SP0313
GQCG/GS7-2019 models	Surround View System (SVM)	✓	✓	✓	✓	✓	SP0317
GQCG/GS7-2019 models	Remote control system (TBOX)	✓	✓	✓	✓	✓	SP0318, SP0319, SP0320, SP0321, SP0322, SP0323
GQCG/GS7-2019 models	Electric Back Door (PLGM)	✓	✓	✓	✓	✓	SP0327
GQCG/GS7-2019 models	Wireless charging module (WCM)	✓	✓	✓	✓	✓	SP0329
GQCG/GS7-2019 models	Ambient Light (IAL)	✓	✓	✓	✓	✓	SP0330, SP0331
GQCG/GS7-2019 models	All Terrain Switch (ATSS)	✓	✓	✓	✓	✓	SP0332
GQCG/GS8	Engine Control Module (EMS)	✓	✓	✓	✓	✓	
GQCG/GS8	Automatic transmission (AT)	✓	✓	✓	✓	✓	SP0333, SP0334
GQCG/GS8	Brake Control System (BCS)	✓	✓	✓	✓	✓	SP0280, SP0281, SP0282, SP0283, SP0284, SP0285, SP0286, SP0287, SP0288
GQCG/GS8	Supplementary Security System (SRS)	✓	✓	✓	✓	✓	SP0314
GQCG/GS8	Body Control Module (BCM)	✓	✓	✓	✓	✓	SP0278
GQCG/GS8	Electric Power Steering (EPS)	✓	✓	✓	✓	✓	SP0295
GQCG/GS8	Combination Meter (ICM)	✓	✓	✓	✓	✓	SP0302, SP0303
GQCG/GS8	Intelligent Keyless Start (PEPS)	✓	✓	✓	✓	✓	SP0307, SP0308
GQCG/GS8	Front Air Conditioning System (HVAC)	✓	✓	✓	✓	✓	SP0299
GQCG/GS8	Rear Air Conditioning System (RHVAC)	✓	✓	✓	✓	✓	SP0328
GQCG/GS8	Front Control Panel (FCP)	✓	✓	✓	✓	✓	SP0296
GQCG/GS8	Air Conditioning Control Panel (RCP)	✓	✓	✓	✓	✓	SP0298
GQCG/GS8	Tire Pressure Monitoring System (TPMS)	✓	✓	✓	✓	✓	SP0325, SP0326
GQCG/GS8	Independent gateway (GWM)	✓	✓	✓	✓	✓	SP0297
GQCG/GS8	Four-wheel drive system (TMM)	✓	✓	✓	✓	✓	SP0324
GQCG/GS8	Heated seat module (HVSM)	✓	✓	✓	✓	✓	SP0276
GQCG/GS8	Seat Memory Module (MSM)	✓	✓	✓	✓	✓	SP0277
GQCG/GS8	Entertainment System (CD)	✓	✓	✓	✓	✓	SP0289
GQCG/GS8	Shift lever module (GSM)	✓	✓	✓	✓	✓	
GQCG/GS8	Headlight Control System (AFS)	✓	✓	✓	✓	✓	SP0300, SP0301
GQCG/GS8	Intelligent Front Camera (IFC)	✓	✓	✓	✓	✓	SP0304
GQCG/GS8	Medium Range Radar Module (MRR)	✓	✓	✓	✓	✓	SP0305, SP0306
GQCG/GS8	Parking Assist System (RPA)	✓	✓	✓	✓	✓	SP0309, SP0310, SP0311, SP0312
GQCG/GS8	Parking Assist System (APA)	✓	✓	✓	✓	✓	SP0313
GQCG/GS8	Surround View System (SVM)	✓	✓	✓	✓	✓	SP0317
GQCG/GS8	Remote control system (TBOX)	✓	✓	✓	✓	✓	SP0318, SP0319, SP0320, SP0321, SP0322, SP0323
GQCG/GS8	Electric Back Door (PLGM)	✓	✓	✓	✓	✓	SP0327
GQCG/GS8	Wireless charging module (WCM)	✓	✓	✓	✓	✓	SP0329
GQCG/GS8	Ambient Light (IAL)	✓	✓	✓	✓	✓	SP0330, SP0331
GQCG/GS8	All Terrain Switch (ATSS)	✓	✓	✓	✓	✓	SP0332
GQCG/GS8 2020	Engine Control Module (EMS)	✓	✓	✓	✓	✓	SP0498
GQCG/GS8 2020	Automatic transmission (AT)	✓	✓	✓	✓	✓	SP0542, SP0543, SP0544
GQCG/GS8 2020	Brake Control System (BCS)	✓	✓	✓	✓	✓	SP0502, SP0503, SP0504, SP0505, SP0506, SP0507, SP0508, SP0509
GQCG/GS8 2020	Supplementary Security System (SRS)	✓	✓	✓	✓	✓	SP0501
GQCG/GS8 2020	Body Control Module (BCM)	✓	✓	✓	✓	✓	SP0523, SP0524
GQCG/GS8 2020	Electric Power Steering (EPS)	✓	✓	✓	✓	✓	SP0537
GQCG/GS8 2020	Combination Meter (ICM)	✓	✓	✓	✓	✓	SP0520, SP0521
GQCG/GS8 2020	Intelligent Keyless Start (PEPS)	✓	✓	✓	✓	✓	SP0515, SP0516
GQCG/GS8 2020	Front Air Conditioning System (HVAC)	✓	✓	✓	✓	✓	SP0525
GQCG/GS8 2020	Front Control Panel (FCP)	✓	✓	✓	✓	✓	SP0529
GQCG/GS8 2020	Rear control panel (RCP)	✓	✓	✓	✓	✓	SP0526
GQCG/GS8 2020	Independent gateway (GWM)	✓	✓	✓	✓	✓	SP0512
GQCG/GS8 2020	Four-wheel drive system (TMM)	✓	✓	✓	✓	✓	SP0510
GQCG/GS8 2020	Shift lever module (GSM)	✓	✓	✓	✓	✓	SP0511
GQCG/GS8 2020	Medium Range Radar Module (MRR)	✓	✓	✓	✓	✓	SP0513, SP0514
GQCG/GS8 2020	Entertainment System (CD)	✓	✓	✓	✓	✓	SP0517
GQCG/GS8 2020	Headlight Control System (AFS)	✓	✓	✓	✓	✓	SP0499, SP0500
GQCG/GS8 2020	Remote control system (TBOX)	✓	✓	✓	✓	✓	SP0522
GQCG/GS8 2020	Electric Back Door (PLGM)	✓	✓	✓	✓	✓	SP0527, SP0528
GQCG/GS8 2020	Seat Memory Module (MSM)	✓	✓	✓	✓	✓	SP0530
GQCG/GS8 2020	Ambient Light (IAL)	✓	✓	✓	✓	✓	SP0531, SP0532
GQCG/GS8 2020	Heated seat module (HVSM)	✓	✓	✓	✓	✓	SP0533
GQCG/GS8 2020	All Terrain Switch (ATSS)	✓	✓	✓	✓	✓	SP0534
GQCG/GS8 2020	Surround View System (SVM)	✓	✓	✓	✓	✓	SP0535, SP0536
GQCG/GS8 2020	Reversing Assist System (RPA)	✓	✓	✓	✓	✓	
GQCG/GS8 2020	Intelligent Front Camera (IFC)	✓	✓	✓	✓	✓	
GQCG/GS8 2020	Main blind spot monitoring module (MBSD)	✓	✓	✓	✓	✓	SP0538
GQCG/GS8 2020	Slave Blind Spot Monitoring Module (SBSD)	✓	✓	✓	✓	✓	SP0539
GQCG/GS8 2020	Wireless charging module (WCM)	✓	✓	✓	✓	✓	SP0540
GQCG/GS8 2020	External power amplifier (AMP)	✓	✓	✓	✓	✓	SP0541
GQCG/GA3 (GA3S horizon)	Engine Control Module (EMS)	✓	✓	✓	✓	✓	

GQCQ/GA3 horizon)	(GA3S	Automatic transmission (AT)	✓	✓	✓	✓	✓	SP0962
GQCQ/GA3 horizon)	(GA3S	Brake Control System (BCS)	✓	✓	✓	✓		SP0952, SP0953, SP0954, SP0955
GQCQ/GA3 horizon)	(GA3S	Supplementary Security System (SRS)	✓	✓	✓	✓	✓	SP0959
GQCQ/GA3 horizon)	(GA3S	Body Control Module (BCM)	✓	✓	✓	✓	✓	SP0936
GQCQ/GA3 horizon)	(GA3S	Electric Power Steering (EPS)	✓	✓	✓	✓		SP0957, SP0958
GQCQ/GA3 horizon)	(GA3S	Combination Meter (ICM)	✓	✓	✓	✓	✓	SP0941, SP0942
GQCQ/GA3 horizon)	(GA3S	Intelligent Keyless Start (PEPS)	✓	✓	✓	✓	✓	SP0943, SP0944
GQCQ/GA3 horizon)	(GA3S	Air Conditioning System (HVAC)	✓	✓	✓	✓	✓	SP0940
GQCQ/GA3 horizon)	(GA3S	Tire Pressure Monitoring System (TPMS)	✓	✓	✓	✓		SP0960, SP0961
GQCQ/GA3 horizon)	(GA3S	Entertainment System (CD)	✓	✓	✓	✓	✓	SP0939
GQCQ/GA3 horizon)	(GA3S	Reversing Assist System (RPA)	✓	✓	✓	✓	✓	SP0945
GQCQ/GA3 horizon)	(GA3S	Remote control system (TBOX)	✓	✓	✓	✓	✓	SP0946, SP0947, SP0948, SP0949, SP0950, SP0951
GQCQ/GA4		Engine Control Module (EMS)	✓	✓	✓	✓	✓	SP0112, SP0113, SP0114
GQCQ/GA4		Automatic transmission (AT)	✓	✓	✓	✓	✓	SP0136, SP0137, SP0138
GQCQ/GA4		Brake Control System (BCS)	✓	✓	✓	✓		SP0108, SP0109, SP0110, SP0111
GQCQ/GA4		Supplementary Security System (SRS)	✓	✓	✓	✓	✓	SP0105
GQCQ/GA4		Body Control Module (BCM)	✓	✓	✓	✓	✓	SP0134
GQCQ/GA4		Electric Power Steering (EPS)	✓	✓	✓	✓		SP0106
GQCQ/GA4		Combination Meter (ICM)	✓	✓	✓	✓	✓	SP0123, SP0124
GQCQ/GA4		Intelligent Keyless Start (PEPS)	✓	✓	✓	✓	✓	SP0103, SP0104
GQCQ/GA4		Air Conditioning System (HVAC)	✓	✓	✓	✓	✓	SP0135
GQCQ/GA4		Air Conditioning Control Panel (HCP)	✓	✓	✓	✓	✓	SP0132
GQCQ/GA4		Front Control Panel (FCP)	✓	✓	✓	✓	✓	SP0133
GQCQ/GA4		Tire Pressure Monitoring System (TPMS)	✓	✓	✓	✓		SP0116, SP0117
GQCQ/GA4		Electronic Parking (EPB)	✓	✓	✓	✓		SP0096, SP0097, SP0098, SP0099, SP0100, SP0101, SP0102
GQCQ/GA4		Independent gateway (GWM)	✓	✓	✓	✓		SP0118
GQCQ/GA4		Heated seat module (HVSM)	✓	✓	✓	✓	✓	SP0095
GQCQ/GA4		Electronic steering column lock (ESCL)	✓	✓	✓	✓		SP0107
GQCQ/GA4		Reversing Assist System (RPA)	✓	✓	✓	✓		SP0119
GQCQ/GA4		Surround View System (SVM)	✓	✓	✓	✓		SP0120, SP0121
GQCQ/GA4		Wireless charging module (WCM)	✓	✓	✓	✓	✓	SP0122
GQCQ/GA4		Remote control system (TBOX)	✓	✓	✓	✓	✓	SP0125, SP0126, SP0127, SP0128, SP0129, SP0130
GQCQ/GA4		Entertainment System (CD)	✓	✓	✓	✓	✓	SP0131
GQCQ/GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML		Engine Control Module (EMS)	✓	✓	✓	✓	✓	SP0847, SP0848, SP0849
GQCQ/GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML		Automatic transmission (AT)	✓	✓	✓	✓	✓	SP0837
GQCQ/GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML		Brake Control System (BCS)	✓	✓	✓	✓		SP0839, SP0840, SP0841, SP0842, SP0843
GQCQ/GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML		Supplementary Security System (SRS)	✓	✓	✓	✓		SP0854
GQCQ/GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML		Body Control Module (BCM)	✓	✓	✓	✓	✓	SP0838
GQCQ/GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML		Combination Meter (ICM)	✓	✓	✓	✓	✓	SP0851, SP0852
GQCQ/GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML		Air Conditioning System (HVAC)	✓	✓	✓	✓	✓	SP0850
GQCQ/GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML		Entertainment System (CD)	✓	✓	✓	✓	✓	SP0844
GQCQ/GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML		Headlight Control System (AFS)	✓	✓	✓	✓	✓	SP0835, SP0836
GQCQ/GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML		Reversing Assist System (RPA)	✓	✓	✓	✓	✓	SP0853
GQCQ/GA5 2.0 DCVVT\1.8 T\1.6T		Engine Control Module (EMS)	✓	✓	✓	✓	✓	SP0869, SP0870, SP0871, SP0872
GQCQ/GA5 2.0 DCVVT\1.8 T\1.6T		Automatic transmission (AT)	✓	✓	✓	✓	✓	SP0861

Special Functions List

No.	Functions Name	System Name
SP0000	Store image data to EEPROM	GM6/Engine Control Module (EMS)
SP0001	Replace ECU	GM6/Engine Control Module (EMS)
SP0002	Replace ECU	GM6/Supplementary Security System (SRS)
SP0003	EPB enables calipers on both sides	GM6/Brake Control System (BCS)
SP0004	EPB exits maintenance mode	GM6/Brake Control System (BCS)
SP0005	Replace the brake pads	GM6/Brake Control System (BCS)
SP0006	Release the calipers on both sides	GM6/Brake Control System (BCS)
SP0007	Calibration of yaw angle sensor	GM6/Brake Control System (BCS)
SP0008	Exhaust and drainage filling	GM6/Brake Control System (BCS)
SP0009	Rotation sensor calibration	GM6/Brake Control System (BCS)
SP0010	Replace ECU	GM6/Brake Control System (BCS)
SP0011	Assembly inspection	GM6/Brake Control System (BCS)
SP0012	Replace ECU	GM6/Independent gateway (GWM)
SP0013	AFS zero calibration	GM6/Headlight Control System (AFS)
SP0014	Replace ECU	GM6/Headlight Control System (AFS)
SP0015	Replace ECU	GM6/Electronic steering column lock (ESCL)
SP0016	Replace ECU	GM6/Intelligent Keyless Start (PEPS)
SP0017	Antenna self-test	GM6/Intelligent Keyless Start (PEPS)
SP0018	Replace ECU	GM6/Entertainment System (CD)
SP0020	Replace ECU	GM6/Combination Meter (ICM)
SP0021	Initialization of mileage value	GM6/Combination Meter (ICM)
SP0022	Replace ECU	GM6/Remote control system (TBOX)
SP0023	Write APN	GM6/Remote control system (TBOX)
SP0024	Write B-CALL number	GM6/Remote control system (TBOX)
SP0025	Write E-CALL number	GM6/Remote control system (TBOX)
SP0026	Write IP address	GM6/Remote control system (TBOX)
SP0027	Write port number	GM6/Remote control system (TBOX)
SP0028	Replace ECU	GM6/Body Control Module (BCM)
SP0029	Replace ECU	GM6/Front Air Conditioning System (HVAC)
SP0030	Replace ECU	GM6/Air Conditioning Control Panel (HCP)
SP0031	Replace ECU	GM6/Rear control panel (RCP)
SP0032	Replace ECU	GM6/Wireless charging module (WCM)
SP0033	Replace ECU	GM6/Heated seat module (HVSM)
SP0034	SVM panoramic parking system calibration	GM6/Surround View System (SVM)
SP0035	Replace ECU	GM6/Surround View System (SVM)
SP0036	Replace ECU	GM6/Parking Assist System (RPA)
SP0037	PDC torque compensation value reset	GM6/Electric Power Steering (EPS)
SP0038	Replace ECU	GM6/Electric Power Steering (EPS)
SP0039	6AT Neutral self-learning	GM6/Automatic transmission (AT)
SP0040	6AT automatic gearbox clear neutral self-learning	GM6/Automatic transmission (AT)
SP0041	Replace ECU	GM6/Automatic transmission (AT)
SP0048	Replace ECU	GS5 2019 models/Heated seat module (HVSM)
SP0049	MRR calibration	GS5 2019 models/Medium Range Radar Module (MRR)
SP0050	Replace ECU	GS5 2019 models/Medium Range Radar Module (MRR)
SP0051	Replace ECU	GS5 2019 models/Supplementary Security System (SRS)
SP0052	Read SRS (airbag) collision information	GS5 2019 models/Supplementary Security System (SRS)
SP0053	EPB enables calipers on both sides	GS5 2019 models/Brake Control System (BCS)
SP0054	EPB exits maintenance mode	GS5 2019 models/Brake Control System (BCS)
SP0055	Replace the brake pads	GS5 2019 models/Brake Control System (BCS)
SP0056	Release the calipers on both sides	GS5 2019 models/Brake Control System (BCS)
SP0057	Calibration of yaw angle sensor	GS5 2019 models/Brake Control System (BCS)
SP0058	Exhaust and drainage filling	GS5 2019 models/Brake Control System (BCS)
SP0059	Rotation sensor calibration	GS5 2019 models/Brake Control System (BCS)
SP0060	Replace ECU	GS5 2019 models/Brake Control System (BCS)
SP0062	Replace ECU	GS5 2019 models/Engine Control Module (EMS)
SP0063	Replace low-voltage battery	GS5 2019 models/Engine Control Module (EMS)
SP0064	Replace ECU	GS5 2019 models/Independent gateway (GWM)
SP0065	SVM panoramic parking system calibration	GS5 2019 models/Surround View System (SVM)
SP0066	Replace ECU	GS5 2019 models/Surround View System (SVM)
SP0067	Replace ECU	GS5 2019 models/Wireless charging module (WCM)
SP0068	PDC torque compensation value reset	GS5 2019 models/Electric Power Steering (EPS)
SP0069	Replace ECU	GS5 2019 models/Electric Power Steering (EPS)
SP0070	Replace ECU	GS5 2019 models/Remote control system (TBOX)
SP0071	Replace ECU	GS5 2019 models/Combination Meter (ICM)

SP0072	Initialization of mileage value	GS5 2019 models/Combination Meter (ICM)
SP0073	Replace ECU	GS5 2019 models/Entertainment System (CD)
SP0076	Replace ECU	GS5 2019 models/Intelligent Keyless Start (PEPS)
SP0077	Antenna self-test	GS5 2019 models/Intelligent Keyless Start (PEPS)
SP0078	PLGM position learning	GS5 2019 models/Electric Back Door (PLGM)
SP0079	Replace ECU	GS5 2019 models/Electric Back Door (PLGM)
SP0080	Replace ECU	GS5 2019 models/Front Control Panel (FCP)
SP0082	Replace ECU	GS5 2019 models/Front Air Conditioning System (HVAC)
SP0083	6AT Neutral self-learning	GS5 2019 models/Automatic transmission (AT)
SP0084	6AT automatic gearbox clear neutral self-learning	GS5 2019 models/Automatic transmission (AT)
SP0085	Replace ECU	GS5 2019 models/Automatic transmission (AT)
SP0086	Replace ECU	GS5 2019 models/Seat Memory Module (MSM)
SP0087	Replace ECU	GS5 2019 models/Body Control Module (BCM)
SP0088	Tire pressure sensor calibration	GS5 2019 models/Body Control Module (BCM)
SP0089	Personalized configuration	GS5 2019 models/Body Control Module (BCM)
SP0090	Replace ECU	GS5 2019 models/Reversing Assist System (RPA)
SP0091	BSD calibration result check	GS5 2019 models/Main blind spot monitoring module (MBSD)
SP0092	BSD calibration routine	GS5 2019 models/Main blind spot monitoring module (MBSD)
SP0093	Replace ECU	GS5 2019 models/Main blind spot monitoring module (MBSD)
SP0094	Replace ECU	GS5 2019 models/Slave Blind Spot Monitoring Module (SBSD)
SP0095	Replace ECU	GA4/Heated seat module (HVSM)
SP0096	EPB enables calipers on both sides	GA4/Electronic Parking (EPB)
SP0097	EPB exits maintenance mode	GA4/Electronic Parking (EPB)
SP0098	Replace the brake pads	GA4/Electronic Parking (EPB)
SP0099	Caliper initialization	GA4/Electronic Parking (EPB)
SP0100	Release the calipers on both sides	GA4/Electronic Parking (EPB)
SP0101	Longitudinal acceleration sensor calibration	GA4/Electronic Parking (EPB)
SP0102	Replace ECU	GA4/Electronic Parking (EPB)
SP0103	Replace ECU	GA4/Intelligent Keyless Start (PEPS)
SP0104	Antenna self-test	GA4/Intelligent Keyless Start (PEPS)
SP0105	Replace ECU	GA4/Supplementary Security System (SRS)
SP0106	Replace ECU	GA4/Electric Power Steering (EPS)
SP0107	Replace ECU	GA4/Electronic steering column lock (ESCL)
SP0108	Replace ECU	GA4/Brake Control System (BCS)
SP0109	Calibration of yaw angle sensor	GA4/Brake Control System (BCS)
SP0110	Exhaust and drainage filling	GA4/Brake Control System (BCS)
SP0111	Rotation sensor calibration	GA4/Brake Control System (BCS)
SP0112	EMS tooth information learning	GA4/Engine Control Module (EMS)
SP0113	Replace ECU	GA4/Engine Control Module (EMS)
SP0114	Replace low voltage battery	GA4/Engine Control Module (EMS)
SP0116	Replace ECU	GA4/Tire Pressure Monitoring System (TPMS)
SP0117	Tire pressure sensor calibration	GA4/Tire Pressure Monitoring System (TPMS)
SP0118	Replace ECU	GA4/Independent gateway (GWM)
SP0119	Replace ECU	GA4/Reversing Assist System (RPA)
SP0120	SVM panoramic parking system calibration	GA4/Surround View System (SVM)
SP0121	Replace ECU	GA4/Surround View System (SVM)
SP0122	Replace ECU	GA4/Wireless charging module (WCM)
SP0123	Replace ECU	GA4/Combination Meter (ICM)
SP0124	Initialization of mileage value	GA4/Combination Meter (ICM)
SP0125	Replace ECU	GA4/Remote control system (TBOX)
SP0126	Write APN	GA4/Remote control system (TBOX)
SP0127	Write B-CALL number	GA4/Remote control system (TBOX)
SP0128	Write E-CALL number	GA4/Remote control system (TBOX)
SP0129	Write IP address	GA4/Remote control system (TBOX)
SP0130	Write port number	GA4/Remote control system (TBOX)
SP0131	Replace ECU	GA4/Entertainment System (CD)
SP0132	Replace ECU	GA4/Air Conditioning Control Panel (HCP)
SP0133	Replace ECU	GA4/Front Control Panel (FCP)
SP0134	Replace ECU	GA4/Body Control Module (BCM)
SP0135	Replace ECU	GA4/Air Conditioning System (HVAC)
SP0136	Neutral self-learning	GA4/Automatic transmission (AT)
SP0137	Automatic gearbox clear neutral self-learning	GA4/Automatic transmission (AT)
SP0138	Replace ECU	GA4/Automatic transmission (AT)
SP0142	Replace ECU	GS4/Heated seat module (HVSM)

SP0143	Replace ECU	GS4/Body Control Module (BCM)
SP0144	Sunroof initialization (manual method)	GS4/Body Control Module (BCM)
SP0145	Replace ECU	GS4/Entertainment System (CD)
SP0148	Replace ECU	GS4/Front Control Panel (FCP)
SP0149	Replace ECU	GS4/Air Conditioning Control Panel (HCP)
SP0150	Replace ECU	GS4/Air Conditioning System (HVAC)
SP0151	Replace ECU	GS4/Combination Meter (ICM)
SP0152	Initialization of mileage value	GS4/Combination Meter (ICM)
SP0153	Replace ECU	GS4/Intelligent Keyless Start (PEPS)
SP0154	Antenna self-test	GS4/Intelligent Keyless Start (PEPS)
SP0155	Replace ECU	GS4/Reversing Assist System (RPA)
SP0156	Replace ECU	GS4/Remote control system (TBOX)
SP0157	Write APN	GS4/Remote control system (TBOX)
SP0158	Write B-CALL number	GS4/Remote control system (TBOX)
SP0159	Write E-CALL number	GS4/Remote control system (TBOX)
SP0160	Write IP address	GS4/Remote control system (TBOX)
SP0161	Write port number	GS4/Remote control system (TBOX)
SP0163	AFS zero calibration	GS4/Headlight Control System (AFS)
SP0164	Replace AFS (headlight adjustment module)	GS4/Headlight Control System (AFS)
SP0165	EPB control-replace brake pads	GS4/Brake Control System (BCS)
SP0166	EPB Control-Release	GS4/Brake Control System (BCS)
SP0167	EPB control-exit complete release	GS4/Brake Control System (BCS)
SP0168	EPB control-parking	GS4/Brake Control System (BCS)
SP0169	Replace ECU	GS4/Brake Control System (BCS)
SP0170	Calibration of yaw angle sensor	GS4/Brake Control System (BCS)
SP0171	Exhaust and drainage filling	GS4/Brake Control System (BCS)
SP0172	Rotation sensor calibration	GS4/Brake Control System (BCS)
SP0174	Replace ECU	GS4/Engine Control Module (EMS)
SP0175	Store image data to EEPROM	GS4/Engine Control Module (EMS)
SP0176	Engine start counter is cleared	GS4/Engine Control Module (EMS)
SP0177	Start and stop to replace the battery	GS4/Engine Control Module (EMS)
SP0178	Replace ECU	GS4/Electric Power Steering (EPS)
SP0179	Replace ECU	GS4/Supplementary Security System (SRS)
SP0180	Replace tire pressure detection system	GS4/Tire Pressure Monitoring System (TPMS)
SP0181	Tire pressure sensor calibration	GS4/Tire Pressure Monitoring System (TPMS)
SP0182	Replace ECU	GS4/Torque Management Module (TMM)
SP0183	Replace ECU	GS4/Panoramic Parking System (SVM)
SP0191	Replace ECU	GS4/Smart start-stop system (SSU)
SP0192	Replace ECU	GS4 EV/Heated seat module (HVS)
SP0194	Replace ECU	GS4 EV/Brake Control System (BCS)
SP0195	Calibration of yaw angle sensor	GS4 EV/Brake Control System (BCS)
SP0196	Exhaust and drainage filling	GS4 EV/Brake Control System (BCS)
SP0197	Rotation sensor calibration	GS4 EV/Brake Control System (BCS)
SP0198	Replace ECU	GS4 EV/Electronic Parking (EPB)
SP0199	Self-learning for parking agencies	GS4 EV/Electronic Parking (EPB)
SP0200	Longitudinal acceleration sensor calibration	GS4 EV/Electronic Parking (EPB)
SP0201	EPB enables calipers on both sides	GS4 EV/Electronic Parking (EPB)
SP0202	EPB exits maintenance mode	GS4 EV/Electronic Parking (EPB)
SP0203	Replace the brake pads	GS4 EV/Electronic Parking (EPB)
SP0204	Caliper initialization	GS4 EV/Electronic Parking (EPB)
SP0205	Release the calipers on both sides	GS4 EV/Electronic Parking (EPB)
SP0207	Replace ECU	GS4 EV/Independent gateway (GWM)
SP0209	Replace ECU	GS4 EV/Supplementary Security System (SRS)
SP0210	Replace ECU	GS4 EV/Tire Pressure Monitoring System (TPMS)
SP0211	Tire pressure sensor calibration	GS4 EV/Tire Pressure Monitoring System (TPMS)
SP0213	Replace ECU	GS4 EV/Battery Management System (BMS)
SP0215	Replace ECU	GS4 EV/Charging Control System (OBC)
SP0217	Replace ECU	GS4 EV/Motor Controller (DCU)
SP0229	Replace ECU	GS4 EV/Vehicle Control System (VCU)
SP0230	Replace ECU	GS4 EV/Body Control Module (BCM)
SP0233	Replace ECU	GS4 EV/Entertainment System (CD)
SP0236	Replace ECU	GS4 EV/Air Conditioning Control Panel (HCP)
SP0238	Replace ECU	GS4 EV/Air Conditioning System (HVAC)
SP0239	Coolant exhaust	GS4 EV/Air Conditioning System (HVAC)
SP0241	Replace ECU	GS4 EV/Combination Meter (ICM)
SP0242	Initialization of mileage value	GS4 EV/Combination Meter (ICM)
SP0244	Replace ECU	GS4 EV/Intelligent Keyless Start (PEPS)
SP0245	Antenna self-test	GS4 EV/Intelligent Keyless Start (PEPS)
SP0246	Rotation sensor calibration	GS4 EV/Intelligent Keyless Start (PEPS)
SP0248	Replace ECU	GS4 EV/Reversing Assist System (RPA)
SP0249	Replace ECU	GS4 EV/Reversing Assist System (RPA)

SP0250	Replace ECU	GS4 EV/Remote control system (TBOX)
SP0251	Write APN	GS4 EV/Remote control system (TBOX)
SP0252	Write B-CALL number	GS4 EV/Remote control system (TBOX)
SP0253	Write E-CALL number	GS4 EV/Remote control system (TBOX)
SP0254	Write IP address	GS4 EV/Remote control system (TBOX)
SP0255	Write port number	GS4 EV/Remote control system (TBOX)
SP0256	Write serial number	GS4 EV/Remote control system (TBOX)
SP0257	Serial number reset	GS4 EV/Remote control system (TBOX)
SP0259	Replace ECU	GS4 EV/Electric Power Steering (EPS)
SP0260	Replace ECU	GS4 EV/Low Speed Sound System (AVAS)
SP0261	TGW refresh recovery	GS4 EV/Temperature Control Gateway (TGW)
SP0262	AFS zero calibration	GS4 EV/Headlight Control System (AFS)
SP0263	Replace ECU	GS4 EV/Headlight Control System (AFS)
SP0264	Replace ECU	GS4 PHEV/Electronic Gear Shift Controller (PGCU)
SP0266	Replace ECU	GS4 PHEV/Lane Wandering System (LDW)
SP0267	Store image data to EEPROM	GS4 PHEV/Engine Control Module (EMS)
SP0268	Replace ECU	GS4 PHEV/Engine Control Module (EMS)
SP0269	GMC system self-test	GS4 PHEV/Coupling Controller (CCU)
SP0270	Replace ECU	GS4 PHEV/Coupling Controller (CCU)
SP0271	Replace ECU	GS4 PHEV/Low pressure oil pump motor (OPC)
SP0272	Replace ECU	GS4 PHEV/Panoramic Parking System (SVM)
SP0273	Replace ECU	GS4 PHEV/Front Control Panel (FCP)
SP0274	Replace ECU	GS4 EV/P file controller (PCU)
SP0275	Replace ECU	GS4 EV/Direct Current Converter (DCDC)
SP0276	Replace ECU	GS7/Heated seat module (HVSM)
SP0277	Replace ECU	GS7/Seat Memory Module (MSM)
SP0278	Replace ECU	GS7/Body Control Module (BCM)
SP0280	EPB enables calipers on both sides	GS7/Brake Control System (BCS)
SP0281	EPB exits maintenance mode	GS7/Brake Control System (BCS)
SP0282	Replace ECU	GS7/Brake Control System (BCS)
SP0283	Replace the brake pads	GS7/Brake Control System (BCS)
SP0284	Calibration of yaw angle sensor	GS7/Brake Control System (BCS)
SP0285	Caliper initialization	GS7/Brake Control System (BCS)
SP0286	Exhaust and drainage filling	GS7/Brake Control System (BCS)
SP0287	Release the calipers on both sides	GS7/Brake Control System (BCS)
SP0288	Rotation sensor calibration	GS7/Brake Control System (BCS)
SP0289	Replace ECU	GS7/Entertainment System (CD)
SP0295	Replace ECU	GS7/Electric Power Steering (EPS)
SP0296	Replace ECU	GS7/Front Control Panel (FCP)
SP0297	Replace ECU	GS7/Independent gateway (GWM)
SP0298	Replace ECU	GS7/Air Conditioning Control Panel (RCP)
SP0299	Replace ECU	GS7/Front Air Conditioning System (HVAC)
SP0300	AFS zero calibration	GS7/Headlight Control System (AFS)
SP0301	Replace ECU	GS7/Headlight Control System (AFS)
SP0302	Replace ECU	GS7/Combination Meter (ICM)
SP0303	Initialization of mileage value	GS7/Combination Meter (ICM)
SP0304	Replace ECU	GS7/Intelligent Front Camera (IFC)
SP0305	MRR calibration	GS7/Medium Range Radar Module (MRR)
SP0306	Replace ECU	GS7/Medium Range Radar Module (MRR)
SP0307	Replace ECU	GS7/Intelligent Keyless Start (PEPS)
SP0308	Antenna self-test	GS7/Intelligent Keyless Start (PEPS)
SP0309	Button LED test	GS7/Parking Assist System (RPA)
SP0310	Alarm LED test	GS7/Parking Assist System (RPA)
SP0311	Replace ECU	GS7/Parking Assist System (RPA)
SP0312	Static ECU test	GS7/Parking Assist System (RPA)
SP0313	Replace ECU	GS7/Parking Assist System (APA)
SP0314	Replace ECU	GS7/Supplementary Security System (SRS)
SP0317	Replace ECU	GS7/Surround View System (SVM)
SP0318	Replace ECU	GS7/Remote control system (TBOX)
SP0319	Write APN	GS7/Remote control system (TBOX)
SP0320	Write B-CALL number	GS7/Remote control system (TBOX)
SP0321	Write E-CALL number	GS7/Remote control system (TBOX)
SP0322	Write IP address	GS7/Remote control system (TBOX)
SP0323	Write port number	GS7/Remote control system (TBOX)
SP0324	Replace ECU	GS7/Four-wheel drive system (TMM)
SP0325	Replace ECU	GS7/Tire Pressure Monitoring System (TPMS)
SP0326	Tire pressure sensor calibration	GS7/Tire Pressure Monitoring System (TPMS)
SP0327	Replace ECU	GS7/Electric Back Door (PLGM)
SP0328	Replace ECU	GS7/Rear Air Conditioning System (RHVAC)
SP0329	Replace ECU	GS7/Wireless charging module (WCM)

SP0330	Replace ECU	GS7/Ambient Light (IAL)
SP0331	Automatically assign LIN node ID	GS7/Ambient Light (IAL)
SP0332	Replace ECU	GS7/All Terrain Switch (ATSS)
SP0333	6AT Neutral self-learning	GS7/Automatic transmission (AT)
SP0334	Replace ECU	GS7/Automatic transmission (AT)
SP0337	Replace ECU	GS4 2018/Heated seat module (HVSM)
SP0338	Replace ECU	GS4 2018/Supplementary Security System (SRS)
SP0339	EPB enables calipers on both sides	GS4 2018/Brake Control System (BCS)
SP0340	EPB exits maintenance mode	GS4 2018/Brake Control System (BCS)
SP0341	Replace ECU	GS4 2018/Brake Control System (BCS)
SP0342	Replace the brake pads	GS4 2018/Brake Control System (BCS)
SP0343	Calibration of yaw angle sensor	GS4 2018/Brake Control System (BCS)
SP0344	Exhaust and drainage filling	GS4 2018/Brake Control System (BCS)
SP0345	Release the calipers on both sides	GS4 2018/Brake Control System (BCS)
SP0346	Rotation sensor calibration	GS4 2018/Brake Control System (BCS)
SP0347	Replace ECU	GS4 2018/Tire Pressure Monitoring System (TPMS)
SP0348	Tire pressure sensor calibration	GS4 2018/Tire Pressure Monitoring System (TPMS)
SP0349	Replace ECU	GS4 2018/Torque Management Module (TMM)
SP0350	AFS zero calibration	GS4 2018/Headlight Control System (AFS)
SP0351	Replace ECU	GS4 2018/Headlight Control System (AFS)
SP0352	6AT automatic gearbox clear neutral self-learning	GS4/Automatic transmission (AT)
SP0353	6AT Neutral self-learning	GS4/Automatic transmission (AT)
SP0354	Replace ECU	GS4/Automatic transmission (AT)
SP0361	Replace ECU	GS4 2018/Shift lever module (GSM)
SP0362	EMS tooth information learning	GS4 2018/Engine Control Module (EMS)
SP0363	Replace ECU	GS4 2018/Engine Control Module (EMS)
SP0364	Replace low voltage battery	GS4 2018/Engine Control Module (EMS)
SP0366	Replace ECU	GS4 2018/Independent gateway (GWM)
SP0367	SVM panoramic parking system calibration	GS4 2018/Surround View System (SVM)
SP0368	Replace ECU	GS4 2018/Surround View System (SVM)
SP0369	Replace ECU	GS4 2018/Reversing Assist System (RPA)
SP0370	Replace ECU	GS4 2018/Wireless charging module (WCM)
SP0371	Initialization of mileage value	GS4 2018/Combination Meter (ICM)
SP0372	Antenna self-test	GS4 2018/Intelligent Keyless Start (PEPS)
SP0373	EPS zero calibration	GS4 2018/Electric Power Steering (EPS)
SP0374	PDC torque compensation value reset	GS4 2018/Electric Power Steering (EPS)
SP0375	Replace ECU	GS4 2018/Electric Power Steering (EPS)
SP0376	Replace ECU	GA6 2019/Engine Control Module (EMS)
SP0377	Replace ECU	GA6 2019/Supplementary Security System (SRS)
SP0378	EPB enables calipers on both sides	GA6 2019/Brake Control System (BCS)
SP0379	EPB exits maintenance mode	GA6 2019/Brake Control System (BCS)
SP0380	Replace the brake pads	GA6 2019/Brake Control System (BCS)
SP0381	Release the calipers on both sides	GA6 2019/Brake Control System (BCS)
SP0382	Replace ECU	GA6 2019/Brake Control System (BCS)
SP0383	Calibration of yaw angle sensor	GA6 2019/Brake Control System (BCS)
SP0384	Exhaust and drainage filling	GA6 2019/Brake Control System (BCS)
SP0385	Rotation sensor calibration	GA6 2019/Brake Control System (BCS)
SP0386	Replace ECU	GA6 2019/Shift lever module (GSM)
SP0387	Replace ECU	GA6 2019/Independent gateway (GWM)
SP0388	MRR calibration	GA6 2019/Medium Range Radar Module (MRR)
SP0389	Replace ECU	GA6 2019/Medium Range Radar Module (MRR)
SP0390	Replace ECU	GA6 2019/Intelligent Keyless Start (PEPS)
SP0391	Antenna self-test	GA6 2019/Intelligent Keyless Start (PEPS)
SP0392	Replace ECU	GA6 2019/Entertainment System (CD)
SP0395	Replace ECU	GA6 2019/Combination Meter (ICM)
SP0396	Initialization of mileage value	GA6 2019/Combination Meter (ICM)
SP0397	Replace ECU	GA6 2019/Remote control system (TBOX)
SP0398	Write APN	GA6 2019/Remote control system (TBOX)
SP0399	Write B-CALL number	GA6 2019/Remote control system (TBOX)
SP0400	Write E-CALL number	GA6 2019/Remote control system (TBOX)
SP0401	Write IP address	GA6 2019/Remote control system (TBOX)
SP0402	Write port number	GA6 2019/Remote control system (TBOX)
SP0403	Replace ECU	GA6 2019/Body Control Module (BCM)
SP0404	Tire pressure sensor calibration	GA6 2019/Body Control Module (BCM)
SP0405	Replace ECU	GA6 2019/Front Air Conditioning System (HVAC)
SP0406	Replace ECU	GA6 2019/Air Conditioning Control Panel (HCP)
SP0407	Replace ECU	GA6 2019/Rear control panel (RCP)
SP0408	Replace ECU	GA6 2019/Front Control Panel (FCP)
SP0409	Replace ECU	GA6 2019/Wireless charging module (WCM)

SP0410	Replace ECU	GA6 2019/Seat Memory Module (MSM)
SP0411	Replace ECU	GA6 2019/Ambient Light (IAL)
SP0412	Replace ECU	GA6 2019/Heated seat module (HVSM)
SP0413	SVM panoramic parking system calibration	GA6 2019/Surround View System (SVM)
SP0414	Replace ECU	GA6 2019/Surround View System (SVM)
SP0415	Replace ECU	GA6 2019/Electric Power Steering (EPS)
SP0416	BSD calibration result check	GA6 2019/Main blind spot monitoring module (MBSD)
SP0417	BSD calibration routine	GA6 2019/Main blind spot monitoring module (MBSD)
SP0418	Replace ECU	GA6 2019/Main blind spot monitoring module (MBSD)
SP0419	Replace ECU	GA6 2019/Slave Blind Spot Monitoring Module (SBSD)
SP0420	Replace ECU	GA6 2019/External power amplifier (AMP)
SP0421	Replace ECU	GA6 2019/Automatic transmission (AT)
SP0422	Neutral self-learning	GA6 2019/Automatic transmission (AT)
SP0423	Automatic gearbox clear neutral self-learning	GA6 2019/Automatic transmission (AT)
SP0424	AFS (headlight adjustment system) zero point calibration	The second generation Trumpchi GS4/Headlight Control System (AFS)
SP0425	Replace ECU	The second generation Trumpchi GS4/Headlight Control System (AFS)
SP0426	Replace ECU	The second generation Trumpchi GS4/Supplementary Security System (SRS)
SP0427	Electronic parking (EPB) enables calipers on both sides	The second generation Trumpchi GS4/Brake Control System (BCS)
SP0428	Electronic parking (EPB) handbrake automatic pull up function setting-off	The second generation Trumpchi GS4/Brake Control System (BCS)
SP0429	Electronic parking (EPB) handbrake automatic pull up function setting-on	The second generation Trumpchi GS4/Brake Control System (BCS)
SP0430	Electronic parking (EPB) exits maintenance mode	The second generation Trumpchi GS4/Brake Control System (BCS)
SP0431	Replace ECU	The second generation Trumpchi GS4/Brake Control System (BCS)
SP0432	Replace the brake pads	The second generation Trumpchi GS4/Brake Control System (BCS)
SP0433	Calibration of yaw angle sensor	The second generation Trumpchi GS4/Brake Control System (BCS)
SP0434	Exhaust and drainage filling	The second generation Trumpchi GS4/Brake Control System (BCS)
SP0435	Release the calipers on both sides	The second generation Trumpchi GS4/Brake Control System (BCS)
SP0436	Rotation sensor calibration	The second generation Trumpchi GS4/Brake Control System (BCS)
SP0437	BCS assembly inspection	The second generation Trumpchi GS4/Brake Control System (BCS)
SP0438	BCS zero calibration	The second generation Trumpchi GS4/Brake Control System (BCS)
SP0451	Replace ECU	The second generation Trumpchi GS4/Shift lever module (GSM)
SP0453	MRR calibration	The second generation Trumpchi GS4/Medium Range Radar Module (MRR)
SP0454	Replace ECU	The second generation Trumpchi GS4/Medium Range Radar Module (MRR)
SP0455	Replace ECU	The second generation Trumpchi GS4/Independent gateway (GWM)
SP0457	Replace ECU	The second generation Trumpchi GS4/Air Conditioning Control Panel (HCP)
SP0458	Replace ECU	The second generation Trumpchi GS4/Intelligent Keyless Start (PEPS)
SP0459	Antenna self-test	The second generation Trumpchi GS4/Intelligent Keyless Start (PEPS)
SP0460	Replace ECU	The second generation Trumpchi GS4/Entertainment System (CD)
SP0463	Replace ECU	The second generation Trumpchi GS4/Combination Meter (ICM)
SP0464	Initialization of mileage value	The second generation Trumpchi GS4/Combination Meter (ICM)
SP0465	Replace ECU	The second generation Trumpchi GS4/Remote control system (TBOX)

SP0466	Replace ECU	The second generation Trumpchi GS4/Body Control Module (BCM)
SP0467	Tire pressure sensor calibration	The second generation Trumpchi GS4/Body Control Module (BCM)
SP0468	Replace ECU	The second generation Trumpchi GS4/Front Air Conditioning System (HVAC)
SP0470	Position learning of electric back door (PLGM)	The second generation Trumpchi GS4/Electric Back Door (PLGM)
SP0471	Replace ECU	The second generation Trumpchi GS4/Electric Back Door (PLGM)
SP0472	Basic lock unlock	The second generation Trumpchi GS4/Electric Back Door (PLGM)
SP0473	Self-priming lock release of tailgate	The second generation Trumpchi GS4/Electric Back Door (PLGM)
SP0474	Self-priming lock of tailgate	The second generation Trumpchi GS4/Electric Back Door (PLGM)
SP0475	Replace ECU	The second generation Trumpchi GS4/Front Control Panel (FCP)
SP0476	SVM panoramic parking system calibration	The second generation Trumpchi GS4/Surround View System (SVM)
SP0477	Replace ECU	The second generation Trumpchi GS4/Surround View System (SVM)
SP0478	Button LED test	The second generation Trumpchi GS4/Reversing Assist System (RPA)
SP0479	Alarm LED test	The second generation Trumpchi GS4/Reversing Assist System (RPA)
SP0480	Replace ECU	The second generation Trumpchi GS4/Reversing Assist System (RPA)
SP0481	Static ECU test	The second generation Trumpchi GS4/Reversing Assist System (RPA)
SP0482	Replace ECU	The second generation Trumpchi GS4/Electric Power Steering (EPS)
SP0483	Replace ECU	The second generation Trumpchi GS4/Wireless charging module (WCM)
SP0484	Replace ECU	The second generation Trumpchi GS4/Automatic transmission (AT)
SP0485	Automatic gearbox clear neutral self-learning	The second generation Trumpchi GS4/Automatic transmission (AT)
SP0486	6AT Neutral self-learning	The second generation Trumpchi GS4/Automatic transmission (AT)
SP0496	Replace ECU	The second generation Trumpchi GS4/Heated seat module (HVSM)
SP0497	Replace ECU	The second generation Trumpchi GS4/Seat Memory Module (MSM)
SP0498	Replace ECU	GS8 2020/Engine Control Module (EMS)
SP0499	AFS zero calibration	GS8 2020/Headlight Control System (AFS)
SP0500	Replace ECU	GS8 2020/Headlight Control System (AFS)
SP0501	Replace ECU	GS8 2020/Supplementary Security System (SRS)
SP0502	EPB enables calipers on both sides	GS8 2020/Brake Control System (BCS)
SP0503	EPB exits maintenance mode	GS8 2020/Brake Control System (BCS)
SP0504	Replace the brake pads	GS8 2020/Brake Control System (BCS)
SP0505	Release the calipers on both sides	GS8 2020/Brake Control System (BCS)
SP0506	Replace ECU	GS8 2020/Brake Control System (BCS)
SP0507	Calibration of yaw angle sensor	GS8 2020/Brake Control System (BCS)
SP0508	Exhaust and drainage filling	GS8 2020/Brake Control System (BCS)
SP0509	Rotation sensor calibration	GS8 2020/Brake Control System (BCS)
SP0510	Replace ECU	GS8 2020/Four-wheel drive system (TMM)
SP0511	Replace ECU	GS8 2020/Shift lever module (GSM)
SP0512	Replace ECU	GS8 2020/Independent gateway (GWM)
SP0513	MRR calibration	GS8 2020/Medium Range Radar Module (MRR)
SP0514	Replace ECU	GS8 2020/Medium Range Radar Module (MRR)
SP0515	Replace ECU	GS8 2020/Intelligent Keyless Start (PEPS)
SP0516	Antenna self-test	GS8 2020/Intelligent Keyless Start (PEPS)
SP0517	Replace ECU	GS8 2020/Entertainment System (CD)
SP0520	Replace ECU	GS8 2020/Combination Meter (ICM)
SP0521	Initialization of mileage value	GS8 2020/Combination Meter (ICM)
SP0522	Replace ECU	GS8 2020/Remote control system (TBOX)
SP0523	Replace ECU	GS8 2020/Body Control Module (BCM)
SP0524	Tire pressure sensor calibration	GS8 2020/Body Control Module (BCM)
SP0525	Replace ECU	GS8 2020/Front Air Conditioning System (HVAC)
SP0526	Replace ECU	GS8 2020/Rear control panel (RCP)

SP0527	Replace ECU	GS8 2020/Electric Back Door (PLGM)
SP0528	PLGM position learning	GS8 2020/Electric Back Door (PLGM)
SP0529	Replace ECU	GS8 2020/Front Control Panel (FCP)
SP0530	Replace ECU	GS8 2020/Seat Memory Module (MSM)
SP0531	Replace ECU	GS8 2020/Ambient Light (IAL)
SP0532	Automatically assign LIN node ID	GS8 2020/Ambient Light (IAL)
SP0533	Replace ECU	GS8 2020/Heated seat module (HVSM)
SP0534	Replace ECU	GS8 2020/All Terrain Switch (ATSS)
SP0535	SVM panoramic parking system calibration	GS8 2020/Surround View System (SVM)
SP0536	Replace ECU	GS8 2020/Surround View System (SVM)
SP0537	Replace ECU	GS8 2020/Electric Power Steering (EPS)
SP0538	Replace ECU	GS8 2020/Main blind spot monitoring module (MBSD)
SP0539	Replace ECU	GS8 2020/Slave Blind Spot Monitoring Module (SBSD)
SP0540	Replace ECU	GS8 2020/Wireless charging module (WCM)
SP0541	Replace ECU	GS8 2020/External power amplifier (AMP)
SP0542	6AT Neutral self-learning	GS8 2020/Automatic transmission (AT)
SP0543	Replace ECU	GS8 2020/Automatic transmission (AT)
SP0544	Automatic gearbox clear neutral self-learning	GS8 2020/Automatic transmission (AT)
SP0545	EPS zero calibration	GA3S PHEV/Electric Power Steering (EPS)
SP0546	Replace ECU	GA3S PHEV/Electric Power Steering (EPS)
SP0547	Replace ECU	GA3S PHEV/Lane Wandering System (LDW)
SP0548	Replace ECU	GA3S PHEV/Panoramic Parking System (SVM)
SP0549	Replace ECU	GA3S PHEV/Body Control Module (BCM)
SP0550	Replace ECU	GA3S PHEV/Entertainment System (CD)
SP0551	Write phone number-B CALL	GA3S PHEV/Entertainment System (CD)
SP0552	Write phone number-E CALL	GA3S PHEV/Entertainment System (CD)
SP0553	Replace ECU	GA3S PHEV/Air Conditioning Control Panel (HCP)
SP0554	Replace ECU	GA3S PHEV/Air Conditioning System (HVAC)
SP0555	Coolant exhaust	GA3S PHEV/Air Conditioning System (HVAC)
SP0556	Replace ECU	GA3S PHEV/Combination Meter (ICM)
SP0557	Initialization of mileage value	GA3S PHEV/Combination Meter (ICM)
SP0558	Replace ECU	GA3S PHEV/Intelligent Keyless Start (PEPS)
SP0559	Antenna self-test	GA3S PHEV/Intelligent Keyless Start (PEPS)
SP0560	Replace ECU	GA3S PHEV/Reversing Assist System (RPA)
SP0561	Replace ECU	GA3S PHEV/Remote control system (TBOX)
SP0562	Write APN	GA3S PHEV/Remote control system (TBOX)
SP0563	Write B-CALL number	GA3S PHEV/Remote control system (TBOX)
SP0564	Write E-CALL number	GA3S PHEV/Remote control system (TBOX)
SP0565	Write IP address	GA3S PHEV/Remote control system (TBOX)
SP0566	Write port number	GA3S PHEV/Remote control system (TBOX)
SP0567	Write serial number	GA3S PHEV/Remote control system (TBOX)
SP0568	Serial number reset	GA3S PHEV/Remote control system (TBOX)
SP0569	Replace ECU	GA3S PHEV/Battery Management System (BMS)
SP0570	Replace ECU	GA3S PHEV/Charging Control System (OBC)
SP0571	GMC system self-test	GA3S PHEV/Coupling Controller (CCU)
SP0572	Replace ECU	GA3S PHEV/Coupling Controller (CCU)
SP0573	Replace ECU	GA3S PHEV/Motor Controller (DCU)
SP0574	Replace ECU	GA3S PHEV/Low pressure oil pump motor (OPC)
SP0575	VCU write vacuum pump cumulative time	GA3S PHEV/Vehicle Control System (VCU)
SP0576	Electric vacuum pump test	GA3S PHEV/Vehicle Control System (VCU)
SP0577	Engine idle speed control test	GA3S PHEV/Vehicle Control System (VCU)
SP0578	Fan test	GA3S PHEV/Vehicle Control System (VCU)
SP0579	Replace ECU	GA3S PHEV/Vehicle Control System (VCU)
SP0580	Forced high voltage power down test	GA3S PHEV/Vehicle Control System (VCU)
SP0581	Clear the cumulative time of the vacuum pump	GA3S PHEV/Vehicle Control System (VCU)
SP0582	All charging indicator test	GA3S PHEV/Vehicle Control System (VCU)
SP0583	Temperature control system self-test	GA3S PHEV/Vehicle Control System (VCU)
SP0584	Brake pedal position sensor zero position self-learning test	GA3S PHEV/Vehicle Control System (VCU)
SP0585	Replace ECU	GA3S PHEV/Brake Control System (BCS)
SP0586	Calibration of yaw angle sensor	GA3S PHEV/Brake Control System (BCS)
SP0587	Exhaust and drainage filling	GA3S PHEV/Brake Control System (BCS)
SP0588	Rotation sensor calibration	GA3S PHEV/Brake Control System (BCS)
SP0589	Store image data to EEPROM	GA3S PHEV/Engine Control Module (EMS)
SP0590	Replace ECU	GA3S PHEV/Engine Control Module (EMS)
SP0591	EPB enables calipers on both sides	GA3S PHEV/Electronic Parking (EPB)
SP0592	EPB exits maintenance mode	GA3S PHEV/Electronic Parking (EPB)
SP0593	Replace the brake pads	GA3S PHEV/Electronic Parking (EPB)
SP0594	Caliper initialization	GA3S PHEV/Electronic Parking (EPB)

SP0595	Release the calipers on both sides	GA3S PHEV/Electronic Parking (EPB)
SP0596	Replace ECU	GA3S PHEV/Electronic Parking (EPB)
SP0597	Self-learning for parking agencies	GA3S PHEV/Electronic Parking (EPB)
SP0598	Longitudinal acceleration sensor calibration	GA3S PHEV/Electronic Parking (EPB)
SP0599	Replace ECU	GA3S PHEV/Independent gateway (GWM)
SP0600	Replace ECU	GA3S PHEV/Electronic Gear Shift Controller (PGCU)
SP0601	Replace ECU	GA3S PHEV/Supplementary Security System (SRS)
SP0602	Replace ECU	GA3S PHEV/Tire Pressure Monitoring System (TPMS)
SP0603	Tire pressure sensor calibration	GA3S PHEV/Tire Pressure Monitoring System (TPMS)
SP0604	Replace ECU	GA3S PHEV/Intelligent Multimedia Host (AVNT)
SP0605	Replace ECU	GA3S PHEV/Low Speed Sound System (AVAS)
SP0606	TGW refresh recovery	GA3S PHEV/High-speed temperature control gateway (TGW)
SP0607	Replace ECU	GS3/Heated seat module (HVSM)
SP0608	Replace ECU	GS3/Body Control Module (BCM)
SP0609	Tire pressure sensor calibration	GS3/Body Control Module (BCM)
SP0612	Replace ECU	GS3/Entertainment System (CD)
SP0614	EPS zero calibration	GS3/Electric Power Steering (EPS)
SP0615	PDC torque compensation value reset	GS3/Electric Power Steering (EPS)
SP0616	Replace ECU	GS3/Electric Power Steering (EPS)
SP0618	Replace ECU	GS3/Front Control Panel (FCP)
SP0619	VCU write vacuum pump cumulative time	GE3/Vehicle Control System (VCU)
SP0620	Electric vacuum pump test	GE3/Vehicle Control System (VCU)
SP0621	Engine idle speed control test	GE3/Vehicle Control System (VCU)
SP0622	Fan test	GE3/Vehicle Control System (VCU)
SP0623	Replace ECU	GE3/Vehicle Control System (VCU)
SP0624	Forced high voltage power down test	GE3/Vehicle Control System (VCU)
SP0625	Clear the cumulative time of the vacuum pump	GE3/Vehicle Control System (VCU)
SP0626	All charging indicator test	GE3/Vehicle Control System (VCU)
SP0627	Temperature control system self-test	GE3/Vehicle Control System (VCU)
SP0628	Brake pedal position sensor zero position self-learning test	GE3/Vehicle Control System (VCU)
SP0629	Replace ECU	GS3/Combination Meter (ICM)
SP0630	Initialization of mileage value	GS3/Combination Meter (ICM)
SP0631	Replace ECU	GS3/Intelligent Keyless Start (PEPS)
SP0632	Antenna self-test	GS3/Intelligent Keyless Start (PEPS)
SP0633	Replace ECU	GS3/Supplementary Security System (SRS)
SP0634	Replace ECU	GS3/Wireless charging module (WCM)
SP0635	Replace ECU	GS3/Air Conditioning Control Panel (HCP)
SP0636	Replace ECU	GS3/Air Conditioning System (HVAC)
SP0637	Replace ECU	GS3/Brake Control System (BCS)
SP0638	Calibration of yaw angle sensor	GS3/Brake Control System (BCS)
SP0639	Exhaust and drainage filling	GS3/Brake Control System (BCS)
SP0640	Rotation sensor calibration	GS3/Brake Control System (BCS)
SP0641	Replace ECU	GS3/Electronic Parking (EPB)
SP0642	EPB enables calipers on both sides	GS3/Electronic Parking (EPB)
SP0643	EPB exits maintenance mode	GS3/Electronic Parking (EPB)
SP0644	Replace the brake pads	GS3/Electronic Parking (EPB)
SP0645	Caliper initialization	GS3/Electronic Parking (EPB)
SP0646	Release the calipers on both sides	GS3/Electronic Parking (EPB)
SP0647	Longitudinal acceleration sensor calibration	GS3/Electronic Parking (EPB)
SP0648	Replace ECU	GS3/Reversing Assist System (RPA)
SP0649	Replace ECU	GS3/Electronic steering column lock (ESCL)
SP0650	Replace ECU	GS3/Multi-function display (MFS)
SP0651	Replace ECU	GS3/Remote control system (TBOX)
SP0652	Write APN	GS3/Remote control system (TBOX)
SP0653	Write B-CALL number	GS3/Remote control system (TBOX)
SP0654	Write E-CALL number	GS3/Remote control system (TBOX)
SP0655	Write IP address	GS3/Remote control system (TBOX)
SP0656	Write port number	GS3/Remote control system (TBOX)
SP0657	Write serial number	GS3/Remote control system (TBOX)
SP0658	Serial number reset	GS3/Remote control system (TBOX)
SP0659	Replace ECU	GS3/Independent gateway (GWM)
SP0660	SVM panoramic parking system calibration	GS3/Surround View System (SVM)
SP0661	Replace ECU	GS3/Surround View System (SVM)
SP0662	Gear position self-learning	GE3/Shift lever module (GSM)
SP0663	Replace ECU	GE3/Shift lever module (GSM)
SP0664	Replace ECU	GE3/P file controller (PCU)

SP0665	6AT Neutral self-learning	GS3/Automatic transmission (TCU)
SP0666	6AT automatic gearbox clear neutral self-learning	GS3/Automatic transmission (TCU)
SP0667	Replace ECU	GS3/Automatic transmission (TCU)
SP0672	Replace ECU	GS3/Engine Control Module (EMS)
SP0675	Replace ECU	GE3/Battery Management System (BMS)
SP0677	Replace ECU	GE3/Motor Controller (DCU)
SP0678	Replace ECU	GE3/Direct Current Converter (DCDC)
SP0679	Replace ECU	GS3/Low Speed Sound System (AVAS)
SP0680	Replace ECU	GA6/Heated seat module (HVSM)
SP0681	Replace ECU	GA6/Body Control Module (BCM)
SP0682	Replace the brake pads	GA6/Electronic Parking (EPB)
SP0683	EPB exits maintenance mode	GA6/Electronic Parking (EPB)
SP0684	EPB enables calipers on both sides	GA6/Electronic Parking (EPB)
SP0685	Release the calipers on both sides	GA6/Electronic Parking (EPB)
SP0686	Replace ECU	GA6/Electronic Parking (EPB)
SP0687	Replace ECU	GA6/Brake Control System (BCS)
SP0688	Calibration of yaw angle sensor	GA6/Brake Control System (BCS)
SP0689	Exhaust and drainage filling	GA6/Brake Control System (BCS)
SP0690	Rotation sensor calibration	GA6/Brake Control System (BCS)
SP0691	Replace ECU	GA6/Blind Spot Monitoring System (BSD)
SP0692	Replace ECU	GA6/Entertainment System (CD)
SP0695	Store image data to EEPROM	GA6/Engine Control Module (EMS)
SP0696	Engine start counter is cleared	GA6/Engine Control Module (EMS)
SP0697	Replace ECU	GA6/Engine Control Module (EMS)
SP0698	Replace ECU	GA6/Front Control Panel (FCP)
SP0699	FCW calibration	GA6/Front Collision Warning System (FCW)
SP0700	Replace ECU	GA6/Air Conditioning System (HVAC)
SP0701	Replace ECU	GA6/Combination Meter (ICM)
SP0702	Initialization of mileage value	GA6/Combination Meter (ICM)
SP0703	LDW dynamic calibration	GA6/Lane Wandering System (LDW)
SP0704	Replace ECU	GA6/Lane Wandering System (LDW)
SP0705	Replace ECU	GA6/Seat Memory Module (MSM)
SP0706	Replace ECU	GA6/Intelligent Keyless Start (PEPS)
SP0707	Antenna self-test	GA6/Intelligent Keyless Start (PEPS)
SP0708	Replace ECU	GA6/Reversing Assist System (RPA)
SP0709	Replace ECU	GA6/Supplementary Security System (SRS)
SP0710	Replace ECU	GA6/Smart start-stop system (SSU)
SP0711	SVM panoramic parking system calibration	GA6/Panoramic Parking System (SVM)
SP0712	Replace ECU	GA6/Panoramic Parking System (SVM)
SP0713	Replace ECU	GA6/Tire Pressure Monitoring System (TPMS)
SP0714	Tire pressure sensor calibration	GA6/Tire Pressure Monitoring System (TPMS)
SP0715	Replace ECU	GA6/Remote control system (TBOX)
SP0716	Write APN	GA6/Remote control system (TBOX)
SP0717	Write B-CALL number	GA6/Remote control system (TBOX)
SP0718	Write E-CALL number	GA6/Remote control system (TBOX)
SP0719	Write IP address	GA6/Remote control system (TBOX)
SP0720	Write port number	GA6/Remote control system (TBOX)
SP0721	Replace ECU	GA6/Dual clutch gearbox (TCU)
SP0722	6AT Neutral self-learning	GA6/Dual clutch gearbox (TCU)
SP0723	EOL offline fast self-learning	GA6/Dual clutch gearbox (TCU)
SP0724	Self-learning of double-clutch junction	GA6/Dual clutch gearbox (TCU)
SP0725	New actuator test	GA6/Dual clutch gearbox (TCU)
SP0726	Hydraulic circuit exhaust	GA6/Dual clutch gearbox (TCU)
SP0727	Hydraulic circuit pressure relief	GA6/Dual clutch gearbox (TCU)
SP0728	SVM panoramic parking system calibration	GE3 530 2020 models/Surround View System (SVM)
SP0729	Replace ECU	GE3 530 2020 models/Surround View System (SVM)
SP0730	Replace ECU	GE3 530 2020 models/Reversing Assist System (RPA)
SP0731	Replace ECU	GE3 530 2020 models/Wireless charging module (WCM)
SP0732	Replace ECU	GE3 530 2020 models/Remote control system (TBOX)
SP0733	Replace ECU	GE3 530 2020 models/Entertainment System (CD)
SP0736	Replace ECU	GE3 530 2020 models/Combination Meter (ICM)
SP0737	Initialization of mileage value	GE3 530 2020 models/Combination Meter (ICM)
SP0738	Replace ECU	GE3 530 2020 models/Air Conditioning Control Panel (HCP)
SP0739	Replace ECU	GE3 530 2020 models/Air Conditioning System (HVAC)
SP0740	Replace ECU	GE3 530 2020 models/Body Control Module (BCM)
SP0741	Tire pressure sensor calibration	GE3 530 2020 models/Body Control Module (BCM)

SP0742	Replace ECU	GE3 530 2020 models/Intelligent Keyless Start (PEPS)
SP0743	Antenna self-test	GE3 530 2020 models/Intelligent Keyless Start (PEPS)
SP0744	Replace ECU	GE3 530 2020 models/Heated seat module (HVSM)
SP0745	Replace ECU	GE3 530 2020 models/Low Speed Sound System (AVAS)
SP0746	Replace ECU	GE3 530 2020 models/Supplementary Security System (SRS)
SP0747	Replace ECU	GE3 530 2020 models/Brake Control System (BCS)
SP0748	Calibration of yaw angle sensor	GE3 530 2020 models/Brake Control System (BCS)
SP0749	Exhaust and drainage filling	GE3 530 2020 models/Brake Control System (BCS)
SP0750	Rotation sensor calibration	GE3 530 2020 models/Brake Control System (BCS)
SP0751	Replace ECU	GE3 530 2020 models/Independent gateway (GWM)
SP0752	Replace ECU	GE3 530 2020 models/Electric Power Steering (EPS)
SP0753	EPB enables calipers on both sides	GE3 530 2020 models/Electronic Parking (EPB)
SP0754	EPB exits maintenance mode	GE3 530 2020 models/Electronic Parking (EPB)
SP0755	Replace ECU	GE3 530 2020 models/Electronic Parking (EPB)
SP0756	Replace the brake pads	GE3 530 2020 models/Electronic Parking (EPB)
SP0757	Caliper initialization	GE3 530 2020 models/Electronic Parking (EPB)
SP0758	Release the calipers on both sides	GE3 530 2020 models/Electronic Parking (EPB)
SP0759	Replace ECU	GE3 530 2020 models/Electronic steering column lock (ESCL)
SP0760	Replace ECU	GE3 530 2020 models/Battery Management System (BMS)
SP0761	VCU electronic lock self-test	GE3 530 2020 models/Vehicle Control System (VCU)
SP0762	VCU write vacuum pump cumulative time	GE3 530 2020 models/Vehicle Control System (VCU)
SP0763	Charge and discharge function self-test	GE3 530 2020 models/Vehicle Control System (VCU)
SP0764	Replace ECU	GE3 530 2020 models/Vehicle Control System (VCU)
SP0765	Forced high voltage power down test	GE3 530 2020 models/Vehicle Control System (VCU)
SP0766	Clear the cumulative time of the vacuum pump	GE3 530 2020 models/Vehicle Control System (VCU)
SP0767	Drive electric vacuum pump	GE3 530 2020 models/Vehicle Control System (VCU)
SP0768	Pump emptying	GE3 530 2020 models/Vehicle Control System (VCU)
SP0769	Temperature control battery loop test	GE3 530 2020 models/Vehicle Control System (VCU)
SP0770	Temperature control electric drive circuit test	GE3 530 2020 models/Vehicle Control System (VCU)
SP0771	Brake pedal position sensor zero position self-learning test	GE3 530 2020 models/Vehicle Control System (VCU)
SP0772	Replace ECU	GE3 530 2020 models/Motor Controller (DCU)
SP0773	Replace ECU	GMS/Heated seat module (HVSM)
SP0774	Replace ECU	GMS/Seat Memory Module (MSM)
SP0775	Replace ECU	GMS/Tire Pressure Monitoring System (TPMS)
SP0776	Tire pressure sensor calibration	GMS/Tire Pressure Monitoring System (TPMS)
SP0777	AFS zero calibration	GMS/Headlight Control System (AFS)
SP0778	Replace ECU	GMS/Headlight Control System (AFS)
SP0779	Replace ECU	GMS/Automatic transmission (AT)
SP0780	Neutral self-learning	GMS/Automatic transmission (AT)
SP0781	Automatic gearbox clear neutral self-learning	GMS/Automatic transmission (AT)
SP0783	Replace ECU	GMS/Electric Back Door (PLGM)
SP0784	Replace ECU	GMS/Supplementary Security System (SRS)
SP0785	Replace ECU	GMS/Rear seat heating module (HVSMR)
SP0786	EPB enables calipers on both sides	GMS/Brake Control System (BCS)
SP0787	EPB exits maintenance mode	GMS/Brake Control System (BCS)
SP0788	Replace ECU	GMS/Brake Control System (BCS)
SP0789	Replace the brake pads	GMS/Brake Control System (BCS)
SP0790	Calibration of yaw angle sensor	GMS/Brake Control System (BCS)
SP0791	Exhaust and drainage filling	GMS/Brake Control System (BCS)
SP0792	Release the calipers on both sides	GMS/Brake Control System (BCS)
SP0793	Rotation sensor calibration	GMS/Brake Control System (BCS)
SP0794	Replace ECU	GMS/Shift lever module (GSM)
SP0795	Replace ECU	GMS/Medium Range Radar Module (MRR)

SP0798	Replace ECU	GM8/Engine Control Module (EMS)
SP0799	Replace low voltage battery	GM8/Engine Control Module (EMS)
SP0801	Replace ECU	GM8-2020 models/Independent gateway (GWM)
SP0802	Button LED test	GM8/Parking Assist System (RPA)
SP0803	Alarm LED test	GM8/Parking Assist System (RPA)
SP0804	Replace ECU	GM8/Parking Assist System (RPA)
SP0805	Static ECU test	GM8/Parking Assist System (RPA)
SP0806	Replace ECU	GM8/Parking Assist System (APA)
SP0809	Replace ECU	GM8/Surround View System (SVM)
SP0810	Replace ECU	GM8/Electric Power Steering (EPS)
SP0811	Replace ECU	GM8/Rear Audio Control System (ACUR)
SP0812	Replace ECU	GM8/Wireless charging module (WCM)
SP0813	Replace ECU	GM8/Combination Meter (ICM)
SP0814	Initialization of mileage value	GM8/Combination Meter (ICM)
SP0815	Replace ECU	GM8/Remote control system (TBOX)
SP0816	Write APN	GM8/Remote control system (TBOX)
SP0817	Write B-CALL number	GM8/Remote control system (TBOX)
SP0818	Write E-CALL number	GM8/Remote control system (TBOX)
SP0819	Write IP address	GM8/Remote control system (TBOX)
SP0820	Write port number	GM8/Remote control system (TBOX)
SP0821	Replace ECU	GM8/Ambient Light (IAL)
SP0822	Automatically assign LIN node ID	GM8/Ambient Light (IAL)
SP0823	Replace ECU	GM8/Air Conditioning Control Panel (HCP)
SP0824	Replace ECU	GM8/Rear control panel (RCP)
SP0825	Replace ECU	GM8/Front Control Panel (FCP)
SP0826	Replace ECU	GM8/Body Control Module (BCM)
SP0827	Replace ECU	GM8/Rear Air Conditioning System (RHVAC)
SP0828	Replace ECU	GM8/Front Air Conditioning System (HVAC)
SP0829	Replace ECU	GM8/Intelligent Keyless Start (PEPS)
SP0830	Antenna self-test	GM8/Intelligent Keyless Start (PEPS)
SP0831	Replace ECU	GM8/Left electric sliding door (PSDL)
SP0832	Replace ECU	GM8/Right electric sliding door (PSDR)
SP0833	Replace ECU	GM8/Front Audio Control System (CD)
SP0835	AFS zero calibration	GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML/Headlight Control System (AFS)
SP0836	Replace ECU	GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML/Headlight Control System (AFS)
SP0837	Replace ECU	GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML/Automatic transmission (AT)
SP0838	Replace ECU	GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML/Body Control Module (BCM)
SP0839	Replace ECU	GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML/Brake Control System (BCS)
SP0840	Calibration of yaw angle sensor	GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML/Brake Control System (BCS)
SP0841	De-calibration of yaw angle sensor	GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML/Brake Control System (BCS)
SP0842	Exhaust and drainage filling	GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML/Brake Control System (BCS)
SP0843	Rotation sensor calibration	GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML/Brake Control System (BCS)
SP0844	Replace ECU	GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML/Entertainment System (CD)
SP0847	Store image data to EEPROM	GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML/Engine Control Module (EMS)
SP0848	Engine start counter is cleared	GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML/Engine Control Module (EMS)
SP0849	Replace ECU	GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML/Engine Control Module (EMS)
SP0850	Replace ECU	GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML/Air Conditioning System (HVAC)
SP0851	Replace ECU	GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML/Combination Meter (ICM)
SP0852	Initialization of mileage value	GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML/Combination Meter (ICM)
SP0853	Replace ECU	GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML/Reversing Assist System (RPA)
SP0854	Replace ECU	GA5 1.8 VTML Trumpchi 2.0 VTML\1.8 VTML/Supplementary Security System (SRS)
SP0859	AFS zero calibration	GA5 2.0 DCVVT\1.8 T\1.6T/Headlight Control System (AFS)

SP0860	Replace ECU	GA5 2.0 DCVVT\1.8 T\1.6T/Headlight Control System (AFS)
SP0861	Replace ECU	GA5 2.0 DCVVT\1.8 T\1.6T/Automatic transmission (AT)
SP0862	Replace ECU	GA5 2.0 DCVVT\1.8 T\1.6T/Body Control Module (BCM)
SP0863	Replace ECU	GA5 2.0 DCVVT\1.8 T\1.6T/Brake Control System (BCS)
SP0864	Calibration of yaw angle sensor	GA5 2.0 DCVVT\1.8 T\1.6T/Brake Control System (BCS)
SP0865	Exhaust and drainage filling	GA5 2.0 DCVVT\1.8 T\1.6T/Brake Control System (BCS)
SP0866	Rotation sensor calibration	GA5 2.0 DCVVT\1.8 T\1.6T/Brake Control System (BCS)
SP0867	Replace ECU	GA5 2.0 DCVVT\1.8 T\1.6T/Entertainment System (CD)
SP0869	Store image data to EEPROM	GA5 2.0 DCVVT\1.8 T\1.6T/Engine Control Module (EMS)
SP0870	Engine Control Module (EMS)	GA5 2.0 DCVVT\1.8 T\1.6T/Engine Control Module (EMS)
SP0871	Engine start counter is cleared	GA5 2.0 DCVVT\1.8 T\1.6T/Engine Control Module (EMS)
SP0872	Start to stop and replace the battery	GA5 2.0 DCVVT\1.8 T\1.6T/Engine Control Module (EMS)
SP0873	Replace ECU	GA5 2.0 DCVVT\1.8 T\1.6T/Air Conditioning System (HVAC)
SP0874	Initialization of mileage value	GA5 2.0 DCVVT\1.8 T\1.6T/Combination Meter (ICM)
SP0875	Replace ECU	GA5 2.0 DCVVT\1.8 T\1.6T/Combination Meter (ICM)
SP0876	Antenna self-test	GA5 2.0 DCVVT\1.8 T\1.6T/Intelligent Keyless Start (PEPS)
SP0877	Replace ECU	GA5 2.0 DCVVT\1.8 T\1.6T/Intelligent Keyless Start (PEPS)
SP0878	Replace ECU	GA5 2.0 DCVVT\1.8 T\1.6T/Reversing Assist System (RPA)
SP0879	Replace ECU	GA5 2.0 DCVVT\1.8 T\1.6T/Supplementary Security System (SRS)
SP0880	Replace ECU	GA5 2.0 DCVVT\1.8 T\1.6T/Tire Pressure Monitoring System (TPMS)
SP0881	AFS zero calibration	GS5 (GS5 Speed Bo)/Headlight Control System (AFS)
SP0882	Replace ECU	GS5 (GS5 Speed Bo)/Headlight Control System (AFS)
SP0883	Replace ECU	GS5 (GS5 Speed Bo)/Body Control Module (BCM)
SP0884	Replace ECU	GS5 (GS5 Speed Bo)/Brake Control System (BCS)
SP0885	Calibration of yaw angle sensor	GS5 (GS5 Speed Bo)/Brake Control System (BCS)
SP0886	Exhaust filling	GS5 (GS5 Speed Bo)/Brake Control System (BCS)
SP0887	Rotation sensor calibration	GS5 (GS5 Speed Bo)/Brake Control System (BCS)
SP0888	Replace ECU	GS5 (GS5 Speed Bo)/Blind Spot Monitoring System (BSD)
SP0889	Replace ECU	GS5 (GS5 Speed Bo)/Entertainment System (CD)
SP0894	Store image data to EEPROM	GS5 (GS5 Speed Bo)/Engine Control Module (EMS)
SP0895	Engine start counter is cleared	GS5 (GS5 Speed Bo)/Engine Control Module (EMS)
SP0896	Replace ECU	GS5 (GS5 Speed Bo)/Engine Control Module (EMS)
SP0900	EPB enables calipers on both sides	GS5 (GS5 Speed Bo)/Electronic Parking (EPB)
SP0901	EPB exits maintenance mode	GS5 (GS5 Speed Bo)/Electronic Parking (EPB)
SP0902	Replace ECU	GS5 (GS5 Speed Bo)/Electronic Parking (EPB)
SP0903	Replace the brake pads	GS5 (GS5 Speed Bo)/Electronic Parking (EPB)
SP0904	Caliper initialization	GS5 (GS5 Speed Bo)/Electronic Parking (EPB)
SP0905	Release the calipers on both sides	GS5 (GS5 Speed Bo)/Electronic Parking (EPB)
SP0908	FCW calibration	GS5 (GS5 Speed Bo)/Front Collision Warning System (FCW)
SP0909	Replace ECU	GS5 (GS5 Speed Bo)/Air Conditioning System (HVAC)
SP0910	ICM mileage value initialization	GS5 (GS5 Speed Bo)/Combination Meter (ICM)
SP0911	Replace ECU	GS5 (GS5 Speed Bo)/Combination Meter (ICM)
SP0912	LDW dynamic calibration	GS5 (GS5 Speed Bo)/Lane Wandering System (LDW)
SP0913	Replace ECU	GS5 (GS5 Speed Bo)/Lane Wandering System (LDW)
SP0914	Replace ECU	GS5 (GS5 Speed Bo)/Intelligent Keyless Start (PEPS)

SP0915	Antenna self-test	GS5 (GS5 Speed Bo)/Intelligent Keyless Start (PEPS)
SP0916	Replace ECU	GS5 (GS5 Speed Bo)/Reversing Assist System (RPA)
SP0917	Replace ECU	GS5 (GS5 Speed Bo)/Supplementary Security System (SRS)
SP0918	SVM panoramic parking system calibration	GS5 (GS5 Speed Bo)/Panoramic Parking System (SVM)
SP0919	Replace ECU	GS5 (GS5 Speed Bo)/Panoramic Parking System (SVM)
SP0920	Replace ECU	GS5 (GS5 Speed Bo)/Remote control system (TBOX)
SP0921	Write APN	GS5 (GS5 Speed Bo)/Remote control system (TBOX)
SP0922	Write B-CALL number	GS5 (GS5 Speed Bo)/Remote control system (TBOX)
SP0923	Write E-CALL number	GS5 (GS5 Speed Bo)/Remote control system (TBOX)
SP0924	Write IP address	GS5 (GS5 Speed Bo)/Remote control system (TBOX)
SP0925	Write port number	GS5 (GS5 Speed Bo)/Remote control system (TBOX)
SP0926	Replace ECU	GS5 (GS5 Speed Bo)/Torque Management Module (TMM)
SP0927	Replace ECU	GS5 (GS5 Speed Bo)/Tire Pressure Monitoring System (TPMS)
SP0928	Tire pressure sensor calibration	GS5 (GS5 Speed Bo)/Tire Pressure Monitoring System (TPMS)
SP0929	Replace ECU	GS5 (GS5 Speed Bo)/Automatic transmission (AT)
SP0936	Replace ECU	GA3 (GA3S horizon)/Body Control Module (BCM)
SP0939	Replace ECU	GA3 (GA3S horizon)/Entertainment System (CD)
SP0940	Replace ECU	GA3 (GA3S horizon)/Air Conditioning System (HVAC)
SP0941	Replace ECU	GA3 (GA3S horizon)/Combination Meter (ICM)
SP0942	Initialization of mileage value	GA3 (GA3S horizon)/Combination Meter (ICM)
SP0943	Replace ECU	GA3 (GA3S horizon)/Intelligent Keyless Start (PEPS)
SP0944	Antenna self-test	GA3 (GA3S horizon)/Intelligent Keyless Start (PEPS)
SP0945	Replace ECU	GA3 (GA3S horizon)/Reversing Assist System (RPA)
SP0946	Replace ECU	GA3 (GA3S horizon)/Remote control system (TBOX)
SP0947	Write APN	GA3 (GA3S horizon)/Remote control system (TBOX)
SP0948	Write B-CALL number	GA3 (GA3S horizon)/Remote control system (TBOX)
SP0949	Write E-CALL number	GA3 (GA3S horizon)/Remote control system (TBOX)
SP0950	Write IP address	GA3 (GA3S horizon)/Remote control system (TBOX)
SP0951	Write port number	GA3 (GA3S horizon)/Remote control system (TBOX)
SP0952	Replace ECU	GA3 (GA3S horizon)/Brake Control System (BCS)
SP0953	Calibration of yaw angle sensor	GA3 (GA3S horizon)/Brake Control System (BCS)
SP0954	Exhaust and drainage filling	GA3 (GA3S horizon)/Brake Control System (BCS)
SP0955	Rotation sensor calibration	GA3 (GA3S horizon)/Brake Control System (BCS)
SP0957	PDC torque compensation value reset	GA3 (GA3S horizon)/Electric Power Steering (EPS)
SP0958	Replace ECU	GA3 (GA3S horizon)/Electric Power Steering (EPS)
SP0959	Replace ECU	GA3 (GA3S horizon)/Supplementary Security System (SRS)
SP0960	Replace ECU	GA3 (GA3S horizon)/Tire Pressure Monitoring System (TPMS)
SP0961	Tire pressure sensor calibration	GA3 (GA3S horizon)/Tire Pressure Monitoring System (TPMS)
SP0962	Replace ECU	GA3 (GA3S horizon)/Automatic transmission (AT)
SP0999	Replace ECU	GA8/Heated seat module (HVSM)
SP1000	Replace ECU	GA8/Body Control Module (BCM)
SP1001	Replace ECU	GA8/Entertainment System (CD)

SP1002	Replace ECU	GA8/Front Control Panel (FCP)
SP1003	Replace ECU	GA8/Air Conditioning System (HVAC)
SP1004	Replace ECU	GA8/Seat Memory Module (MSM)
SP1005	Replace ECU	GA8/Combination Meter (ICM)
SP1006	Initialization of mileage value	GA8/Combination Meter (ICM)
SP1007	Replace ECU	GA8/Intelligent Keyless Start (PEPS)
SP1008	Antenna self-test	GA8/Intelligent Keyless Start (PEPS)
SP1009	Replace ECU	GA8/Rear control panel (RCP)
SP1010	Replace ECU	GA8/Reversing Assist System (RPA)
SP1011	Replace ECU	GA8/Remote control system (TBOX)
SP1012	Write APN	GA8/Remote control system (TBOX)
SP1013	Write B-CALL number	GA8/Remote control system (TBOX)
SP1014	Write E-CALL number	GA8/Remote control system (TBOX)
SP1015	Write IP address	GA8/Remote control system (TBOX)
SP1016	Write port number	GA8/Remote control system (TBOX)
SP1017	AFS zero calibration	GA8/Headlight Control System (AFS)
SP1018	Replace ECU	GA8/Headlight Control System (AFS)
SP1019	Replace ECU	GA8/Brake Control System (BCS)
SP1020	Calibration of yaw angle sensor	GA8/Brake Control System (BCS)
SP1021	Rotation sensor calibration	GA8/Brake Control System (BCS)
SP1022	Exhaust liquid exhaust filling	GA8/Brake Control System (BCS)
SP1023	Replace ECU	GA8/Blind Spot Monitoring System (BSD)
SP1024	Store image data to EEPROM	GA8/Engine Control Module (EMS)
SP1025	Replace ECU	GA8/Engine Control Module (EMS)
SP1026	Replace the brake pads	GA8/Electronic Parking (EPB)
SP1027	Exit maintenance mode	GA8/Electronic Parking (EPB)
SP1028	Release caliper	GA8/Electronic Parking (EPB)
SP1029	Activate calipers	GA8/Electronic Parking (EPB)
SP1030	Caliper initialization	GA8/Electronic Parking (EPB)
SP1031	Replace ECU	GA8/Electronic Parking (EPB)
SP1032	Longitudinal acceleration sensor calibration	GA8/Electronic Parking (EPB)
SP1033	EPS zero calibration	GA8/Electric Power Steering (EPS)
SP1034	PDC torque compensation value reset	GA8/Electric Power Steering (EPS)
SP1035	Replace ECU	GA8/Electric Power Steering (EPS)
SP1036	MRR calibration	GA8/Medium Range Radar Module (MRR)
SP1037	Replace ECU	GA8/Medium Range Radar Module (MRR)
SP1038	Replace ECU	GA8/Independent gateway (GWM)
SP1039	LDW dynamic calibration	GA8/Lane Wandering System (LDW)
SP1040	Replace ECU	GA8/Lane Wandering System (LDW)
SP1041	Replace ECU	GA8/Supplementary Security System (SRS)
SP1042	SVM panoramic parking system calibration	GA8/Panoramic Parking System (SVM)
SP1043	Replace ECU	GA8/Panoramic Parking System (SVM)
SP1044	Replace ECU	GA8/Tire Pressure Monitoring System (TPMS)
SP1045	Tire pressure sensor calibration	GA8/Tire Pressure Monitoring System (TPMS)
SP1046	6AT Neutral self-learning	GA8/Automatic transmission (AT)
SP1047	Replace ECU	GA8/Automatic transmission (AT)
SP1048	Replace ECU	GS5 2019 models/Air Conditioning Control Panel (HCP)
SP2106	Read SRS collision information	GS8S/Supplementary Security System (SRS)
SP2107	Replace ECU (airbag module)	GS8S/Supplementary Security System (SRS)
SP2108	EPB enables calipers on both sides	GS8S/Brake Control System (BCS)
SP2109	EPB release calipers on both sides	GS8S/Brake Control System (BCS)
SP2110	EPB replacement brake pads	GS8S/Brake Control System (BCS)
SP2111	EPB exits maintenance mode	GS8S/Brake Control System (BCS)
SP2112	Rotation sensor calibration	GS8S/Brake Control System (BCS)
SP2113	Calibration of yaw angle sensor	GS8S/Brake Control System (BCS)
SP2114	Exhaust liquid exhaust filling	GS8S/Brake Control System (BCS)
SP2115	BCS personalized configuration	GS8S/Brake Control System (BCS)
SP2116	Replace ECU (brake control system)	GS8S/Brake Control System (BCS)
SP2117	Replace ECU (shift lever module)	GS8S/Shift lever module (GSM)
SP2118	Replace ECU (standalone gateway)	GS8S/Independent gateway (GWM)
SP2119	Neutral self-learning	GS8S/Automatic transmission (AT)