

Brand	Model	Year	Immo Type	Key Type	Read PIN	Add Keys	All Keys Lost	Program Remote	Other Functions
JAC	Binyue			Blade key	○	○	○	/	1. Program new system 2. Replace immobiliser ECU 3. Replace engine ECU 5. Program engine VIN 6. Program immobiliser VIN 7. Reset engine ECU 8. Reset immobiliser
JAC	Jiayue A5			Blade key/Smart key	×	○	○	/	1. Replace the BCM 2. Change the EMS 3. Change the TCU 4. New system matching 5. Change the TBOX
JAC	Jiayue X4			Smart key	×	○	○	/	1. Matching anti-theft device 2. Matching engine computer 3. Match steering column lock 5. Reset immobilizer 6. Reset engine computer 7. Reset steering column lock 8. Smart box start times reset 9. Read engine status 10. Match the new system 11. Match TCU 12. Clear ESCL fault code 13. ESCL restores the initial value
JAC	Jiayue X7			Blade key/Smart key	×	○	○	/	1. Replace the BCM 2. Change the EMS 3. Change the TCU 4. New system matching 5. Change the TBOX
JAC	Jiayue X8			Smart key	×	○	○	/	1. Replace the BCM 2. Change the EMS 3. Change the TCU 4. New system matching 5. Change the TBOX
JAC	Heyue A30		MT	Blade key	○	○	○	/	1. Read the number of keys 2. Check key 3. Program immobiliser 5. Program engine ECU 6. Reset immobiliser 7. Reset engine ECU 8. Program new system
JAC	Heyue A30		CVT	Blade key	○	○	○	/	1. Read the number of keys 2. Check key 3. Program immobiliser 5. Program engine ECU 6. Reset immobiliser 7. Reset engine ECU 8. Program new system
JAC	Heyue A30		CVT	Smart key	×	○	○	/	1. Number of keys 2. Escl learn 3. Replace engine ECU
JAC	Heyue A30 GCC			Blade key	○	○	○	/	1. Read the number of keys 2. Check key 3. Program immobiliser 5. Program engine ECU 6. Reset immobiliser 7. Reset engine ECU 8. Program new system
JAC	Heyue A30 GCC			Blade key	×	○	○	/	1. Number of keys 2. Reset immobiliser 3. Replace immobiliser 5. Reset engine ECU 6. Replace engine ECU 7. Program all new systems
JAC	Heyue RS			Blade key	○	○	○	/	1. Program new system 2. Replace immobiliser ECU 3. Replace engine ECU 5. Program engine VIN 6. Program immobiliser VIN 7. Reset engine ECU 8. Reset immobiliser
JAC	Heyue RS			Blade key	○	○	○	/	1. Read the number of keys 2. Check key 3. Program immobiliser 5. Program engine ECU 6. Reset immobiliser 7. Reset engine ECU 8. Program new system
JAC	Heyue			Blade key	○	○	○	/	1. Program new system 2. Replace immobiliser ECU 3. Replace engine ECU 5. Program engine VIN 6. Program immobiliser VIN 7. Reset engine ECU 8. Reset immobiliser

JAC	Heyue			Blade key	○	○	○	/	1. Read the number of keys 2. Check key 3. Program immobiliser 5. Program engine ECU 6. Reset immobiliser 7. Reset engine ECU 8. Program new system
JAC	Tongyue			Blade key	○	○	○	/	1. Program new system 2. Replace immobiliser ECU 3. Replace engine ECU 5. Program engine VIN 6. Program immobiliser VIN 7. Reset engine ECU 8. Reset immobiliser
JAC	Tongyue			Blade key	○	○	○	/	1. Read the number of keys 2. Check key 3. Program immobiliser 5. Program engine ECU 6. Reset immobiliser 7. Reset engine ECU 8. Program new system
JAC	Yueyue			Blade key	○	○	○	/	1. Program new system 2. Replace immobiliser ECU 3. Replace engine ECU 5. Program engine VIN 6. Program immobiliser VIN 7. Reset engine ECU 8. Reset immobiliser
JAC	Yueyue			Blade key	○	○	○	/	1. Read the number of keys 2. Check key 3. Program immobiliser 5. Program engine ECU 6. Reset immobiliser 7. Reset engine ECU 8. Program new system
JAC	Xingyue			Blade key	×	○	○	/	1. Number of keys 2. Reset immobiliser 3. Replace immobiliser 5. Reset engine ECU 6. Replace engine ECU 7. Program all new systems
JAC	Xingrui			Blade key	○	○	○	/	1. Program new system 2. Replace immobiliser ECU 3. Replace engine ECU 5. Program engine VIN 6. Program immobiliser VIN 7. Reset engine ECU 8. Reset immobiliser
JAC	Xingrui			Blade key	○	○	○	/	1. Read the number of keys 2. Check key 3. Program immobiliser 5. Program engine ECU 6. Reset immobiliser 7. Reset engine ECU 8. Program new system
JAC	Xingrui			Blade key	×	○	○	/	1. Number of keys 2. Reset immobiliser 3. Replace immobiliser 5. Reset engine ECU 6. Replace engine ECU 7. Program all new systems
JAC	Sihao A5			Smart key	×	○	○	/	1. Replace the BCM 2. Change the EMS 3. Change the TCU 4. New system matching 5. Change the TBOX
JAC	Sihao X4			Smart key	×	○	○	/	1. Matching anti-theft device 2. Matching engine computer 3. Match steering column lock 5. Reset immobilizer 6. Reset engine computer 7. Reset steering column lock 8. Smart box start times reset 9. Read engine status 10. Match the new system 11. Match TCU 12. Clear ESCL fault code 13. ESCL restores the initial value
JAC	Sihao X7			Smart key	×	○	○	/	1. Replace the BCM 2. Change the EMS 3. Change the TCU 4. New system matching 5. Change the TBOX
JAC	Sihao X8			Smart key	×	○	○	/	1. Replace the BCM 2. Change the EMS 3. Change the TCU 4. New system matching 5. Change the TBOX

JAC	Sihao QX			Smart key	×	○	○	/	1. Read smart key status 2. Read engine status 3. Match Engine Computer 5. Match Body Computer 6. Match car box 7. Match engine computer and body computer
JAC	Sihao Yao			Smart key	×	○	○	/	1. Read smart key status 2. Read engine status 3. Match Engine Computer 5. Match Body Computer 6. Match car box 7. Match engine computer and body computer
JAC	Ruifeng A60			Smart key	×	○	○	/	1. Matching anti-theft device 2. Matching engine computer 3. Match steering column lock 5. Reset immobilizer 6. Reset engine computer 7. Reset steering column lock 8. Smart box start times reset 9. Read engine status 10. Match the new system 11. Match TCU 12. Clear ESCL fault code 13. ESCL restores the initial value
JAC	Ruifeng M3			Blade key	○	○	○	/	1. Read the number of keys 2. Check key 3. Program immobiliser 5. Program engine ECU 6. Reset immobiliser 7. Reset engine ECU 8. Program new system
JAC	Ruifeng M3 1.8VVT			Blade key	×	○	○	/	1. Number of keys 2. Reset immobiliser 3. Replace immobiliser 5. Reset engine ECU 6. Replace engine ECU 7. Program all new systems
JAC	Ruifeng M4	2020-		Blade key	×	○	○	/	1. Read smart key status 2. Read engine status 3. EMS write VIN 5. Match Engine Computer 6. Match anti-theft computer 7. Match New System (Overall Repair) 8. Reset engine computer 9. Reset Anti-Theft Computer
JAC	Ruifeng M4	2020-		Blade key	×	○	○	/	
JAC	Ruifeng M4	other		Blade key	×	○	○	/	1. Number of keys 2. Reset immobiliser 3. Replace immobiliser 5. Reset engine ECU 6. Replace engine ECU 7. Program all new systems
JAC	Ruifeng M5			Smart key	×	○	○	/	1. Matching anti-theft device 2. Matching engine computer 3. Match steering column lock 5. Reset immobilizer 6. Reset engine computer 7. Reset steering column lock 8. Smart box start times reset 9. Read engine status 10. Match the new system 11. Match TCU 12. Clear ESCL fault code 13. ESCL restores the initial value
JAC	Ruifeng M6			Smart key	×	○	○	/	1. Matching anti-theft device 2. Matching engine computer 3. Match steering column lock 5. Reset immobilizer 6. Reset engine computer 7. Reset steering column lock 8. Smart box start times reset 9. Read engine status 10. Match the new system 11. Match TCU 12. Clear ESCL fault code 13. ESCL restores the initial value
JAC	Ruifeng R3			Blade key	×	○	○	/	1. Number of keys 2. Reset immobiliser 3. Replace immobiliser 5. Reset engine ECU 6. Replace engine ECU 7. Program all new systems

JAC	Ruifeng R3			Smart key	×	○	○	/	1. Matching anti-theft device 2. Matching engine computer 3. Match steering column lock 5. Reset immobilizer 6. Reset engine computer 7. Reset steering column lock 8. Smart box start times reset 9. Read engine status 10. Match the new system 11. Match TCU 12. Clear ESCL fault code 13. ESCL restores the initial value
JAC	Ruifeng S2			Blade key	○	○	○	/	1. Read the number of keys 2. Check key 3. Program immobiliser 5. Program engine ECU 6. Reset immobiliser 7. Reset engine ECU 8. Program new system
JAC	Ruifeng S2			Smart key	×	○	○	/	1. Matching anti-theft device 2. Matching engine computer 3. Match steering column lock 5. Reset immobilizer 6. Reset engine computer 7. Reset steering column lock 8. Smart box start times reset 9. Read engine status 10. Match the new system 11. Match TCU 12. Clear ESCL fault code 13. ESCL restores the initial value
JAC	Ruifeng S2 mini			Blade key	×	○	○	/	1. Number of keys 2. Reset immobiliser 3. Replace immobiliser 5. Reset engine ECU 6. Replace engine ECU 7. Program all new systems
JAC	Ruifeng S3			Blade key	○	○	○	/	1. Program new system 2. Replace immobiliser ECU 3. Replace engine ECU 5. Program engine VIN 6. Program immobiliser VIN 7. Reset engine ECU 8. Reset immobiliser
JAC	Ruifeng S3			Blade key	○	○	○	/	1. Read the number of keys 2. Check key 3. Program immobiliser 5. Program engine ECU 6. Reset immobiliser 7. Reset engine ECU 8. Program new system
JAC	Ruifeng S3			Blade key	×	○	○	/	1. Number of keys 2. Reset immobiliser 3. Replace immobiliser 5. Reset engine ECU 6. Replace engine ECU 7. Program all new systems
JAC	Ruifeng S3			Smart key	×	○	○	/	1. Matching anti-theft device 2. Matching engine computer 3. Match steering column lock 5. Reset immobilizer 6. Reset engine computer 7. Reset steering column lock 8. Smart box start times reset 9. Read engine status 10. Match the new system 11. Match TCU 12. Clear ESCL fault code 13. ESCL restores the initial value
JAC	Ruifeng S3 (2019)			Blade key	×	○	○	/	1. Number of keys 2. Reset immobiliser 3. Replace immobiliser 5. Reset engine ECU 6. Replace engine ECU 7. Program all new systems

JAC	Ruifeng S3(2019)			Smart key	×	○	○	/	1. Matching anti-theft device 2. Matching engine computer 3. Match steering column lock 5. Reset immobilizer 6. Reset engine computer 7. Reset steering column lock 8. Smart box start times reset 9. Read engine status 10. Match the new system 11. Match TCU 12. Clear ESCL fault code 13. ESCL restores the initial value
JAC	Ruifeng S4			Blade key	×	○	○	/	1. Number of keys 2. Reset immobiliser 3. Replace immobiliser 5. Reset engine ECU 6. Replace engine ECU 7. Program all new systems
JAC	Ruifeng S4			Smart key	×	○	○	/	1. Matching anti-theft device 2. Matching engine computer 3. Match steering column lock 5. Reset immobilizer 6. Reset engine computer 7. Reset steering column lock 8. Smart box start times reset 9. Read engine status 10. Match the new system 11. Match TCU 12. Clear ESCL fault code 13. ESCL restores the initial value
JAC	Ruifeng S5			Blade key	○	○	○	/	1. Program new system 2. Replace immobiliser ECU 3. Replace engine ECU 5. Program engine VIN 6. Program immobiliser VIN 7. Reset engine ECU 8. Reset immobiliser
JAC	Ruifeng S5			Blade key	○	○	○	/	1. Read the number of keys 2. Check key 3. Program immobiliser 5. Program engine ECU 6. Reset immobiliser 7. Reset engine ECU 8. Program new system
JAC	Ruifeng S5			Blade key	×	○	○	/	1. Number of keys 2. Reset immobiliser 3. Replace immobiliser 5. Reset engine ECU 6. Replace engine ECU 7. Program all new systems
JAC	Ruifeng S5			Smart key	×	○	○	/	1. Matching anti-theft device 2. Matching engine computer 3. Match steering column lock 5. Reset immobilizer 6. Reset engine computer 7. Reset steering column lock 8. Smart box start times reset 9. Read engine status 10. Match the new system 11. Match TCU 12. Clear ESCL fault code 13. ESCL restores the initial value
JAC	Ruifeng S7			Blade key	×	○	○	/	1. Number of keys 2. Reset immobiliser 3. Replace immobiliser 5. Reset engine ECU 6. Replace engine ECU 7. Program all new systems
JAC	Ruifeng S7			Smart key	×	○	○	/	1. Matching anti-theft device 2. Matching engine computer 3. Match steering column lock 5. Reset immobilizer 6. Reset engine computer 7. Reset steering column lock 8. Smart box start times reset 9. Read engine status 10. Match the new system 11. Match TCU 12. Clear ESCL fault code 13. ESCL restores the initial value
JAC	iC5			Smart key	×	○	○	/	1. Replace the BCM 2. Change the EMS 3. Change the TCU 4. New system matching 5. Change the TBOX

JAC	iEV7S/iEV7T/ iEV6ES			Smart key	×	○	○	/	1. Matching anti-theft device 2. Matching engine computer 3. Match steering column lock 5. Reset immobilizer 6. Reset engine computer 7. Reset steering column lock 8. Smart box start times reset 9. Read engine status 10. Match the new system 11. Match TCU 12. Clear ESCL fault code 13. ESCL restores the initial value
JAC	T6			Blade key	○	○	○	/	1. Read the number of keys 2. Check key 3. Program immobiliser 5. Program engine ECU 6. Reset immobiliser 7. Reset engine ECU 8. Program new system
JAC	T6			Smart key	×	○	○	/	1. Matching anti-theft device 2. Matching engine computer 3. Match steering column lock 5. Reset immobilizer 6. Reset engine computer 7. Reset steering column lock 8. Smart box start times reset 9. Read engine status 10. Match the new system 11. Match TCU 12. Clear ESCL fault code 13. ESCL restores the initial value
JAC	T8			Smart key	×	○	○	/	1. Matching anti-theft device 2. Matching engine computer 3. Match steering column lock 5. Reset immobilizer 6. Reset engine computer 7. Reset steering column lock 8. Smart box start times reset 9. Read engine status 10. Match the new system 11. Match TCU 12. Clear ESCL fault code 13. ESCL restores the initial value
JAC	X200 (Mini truck)			Blade key	○	○	○	/	1. Read the number of keys 2. Check key 3. Program immobiliser 5. Program engine ECU 6. Reset immobiliser 7. Reset engine ECU 8. Program new system
JAC			10 PIN Type 1	Blade key	×	○	○	/	
JAC			10 PIN Type 2	Blade key	×	○	○	/	
JAC	Binyue		16 PIN	Blade key	×	○	○	/	
JAC	Heyue		16 PIN	Blade key	×	○	○	/	
JAC	Heyue A30 (CVT)		16 PIN	Blade key	×	○	○	/	1. Read Key Number 2. Write Vin
JAC	Heyue A30 GCC (MT/CVT)		16 PIN	Blade key	×	○	○	/	1. Read Key Number 2. Write Vin
JAC	Jiayue X4		16 PIN	Blade key	×	○	○	/	1. Write Vin
JAC	Tongyue		16 PIN	Blade key	×	○	○	/	
JAC	Xingyue		16 PIN	Blade key	×	○	○	/	
JAC	Xingrui		16 PIN	Blade key	×	○	○	/	1. Write Vin
JAC	Xingrui D20 (G6)		16 PIN	Blade key	×	○	○	/	1. Write Vin
JAC	Ruifeng M3		16 PIN	Blade key	×	○	○	/	
JAC	Ruifeng M3-1.8VVT		16 PIN	Blade key	×	○	○	/	1. Read Key Number 2. Write Vin
JAC	Ruifeng M4		16 PIN	Blade key	×	○	○	/	1. Write Vin
JAC	Ruifeng M5		16 PIN	Blade key	×	○	○	/	1. Write Vin
JAC	Ruifeng M6		16 PIN	Blade key	×	○	○	/	1. Read Key Number 2. Write Vin
JAC	Ruifeng R3		16 PIN	Blade key	×	○	○	/	1. Write Vin
JAC	Ruifeng S2		16 PIN	Blade key	×	○	○	/	1. Write Vin
JAC	Ruifeng S2 mini		16 PIN	Blade key	×	○	○	/	1. Write Vin
JAC	Ruifeng S3		16 PIN	Blade key	×	○	○	/	1. Write Vin
JAC	Ruifeng S4		16 PIN	Blade key	×	○	○	/	1. Write Vin
JAC	Ruifeng S5		16 PIN	Blade key	×	○	○	/	1. Write Vin
JAC	Ruifeng S7		16 PIN	Blade key	×	○	○	/	1. Write Vin
JAC	T6		16 PIN Old model	Blade key	×	○	○	/	
JAC	T6		16 PIN New model	Blade key	×	○	○	/	1. Read Key Number 2. Write Vin

JAC	T8		16 PIN	Blade key	×	○	○	/	1. Read Key Number 2. Write Vin
JAC	V7		16 PIN	Blade key	×	○	○	/	
JAC	Junling		16 PIN	Blade key	×	○	○	/	
JAC	Kang Ling		16 PIN	Blade key	×	○	○	/	
JAC	Shuai LingI5		16 PIN	Blade key	×	○	○	/	
JAC	A5		16 PIN	Blade key	×	○	○	/	
JAC	K5		16 PIN	Blade key	×	○	○	/	
JAC	K6		16 PIN	Blade key	×	○	○	/	
JAC	K7		16 PIN	Blade key	×	○	○	/	
JAC	V7		16 PIN	Blade key	×	○	○	/	
JAC	Old model (K line)		16 PIN	Blade key	×	○	○	/	
JAC	IEV5		16 PIN	Blade key	×	○	○	/	
JAC	IEV5S		16 PIN	Blade key	×	○	○	/	1. Read Key Number 2. Write Vin
JAC	IEV6S		16 PIN	Blade key	×	○	○	/	1. Write Vin
JAC	iEV7S/iEV7T/ iEV6ES		16 PIN	Blade key	×	○	○	/	1. Read Key Number 2. Write Vin
JAC	X200 (Mini truck)		16 PIN Old model	Blade key	×	○	○	/	
JAC	X200 (Mini truck)		16 PIN New model	Blade key	×	○	○	/	1. Read Key Number 2. Write Vin
JAC	Tricyclic remote		16 PIN	Blade key	×	○	○	/	