

Brand	Model	Year	Key Type	Read PIN	Add Keys	All Keys Lost	Program Remote	Other Functions
MAXUS	A80		Blade key	△	○	○	○	1. Read the anti-theft status 2. Read Pin 3. Programming BCM 4. Programming EMS/MCU 5. Programming EMS/MCU and BCM
MAXUS	D60		Blade key	×	○	○	○	1. Live Data 2. Programming EMS 3. Programming BCM 4. Programming complete system 5. Programming EMS 6. Set the number of remote control 7. Write body configuration information
MAXUS	D60		Smart key	△	○	○	/	1. Read Pin 2. Live Data 3. Programming PEPS 4. Programming EMS 5. Reset EMS 6. Programming ESCL 7. Programming PEPS and EMS 8. Write smart box configuration information
MAXUS	D90		Blade key	×	○	○	○	1. Live Data 2. Programming complete system 3. Programming BCM 4. Programming ECM 5. Brake pedal learning 6. Write body configuration information
MAXUS	D90		Smart key	△	○	○	/	1. Read Pin 2. Live Data 3. Programming PEPS 4. Programming EMS 5. Reset EMS 6. Programming ESCL 7. Programming PEPS and EMS 8. Write smart box configuration information
MAXUS	EG10		Blade key	×	○	○	○	1. Live Data 2. Programming complete system 3. Programming BCM 4. Programming ECM 5. Brake pedal learning 6. Write body configuration information
MAXUS	EG10		Smart key	△	○	○	/	1. Read Pin 2. Live Data 3. Programming complete system 4. Programming PEPS 5. Programming EMS 6. Reset EMS 7. Set the maximum number of keys
MAXUS	EG50		Blade key	×	○	○	○	1. Live Data 2. Programming EMS 3. Programming BCM 4. Programming complete system 5. Programming EMS 6. Set the number of remote control 7. Write body configuration information
MAXUS	EG50		Smart key	△	○	○	/	1. Read Pin 2. Live data 3. Set the maximum number of keys 4. Programming PEPS 5. Programming EMS 6. Programming EMS 7. Programming ESCL 8. Programming complete system
MAXUS	EUNIQ5		Blade key	×	○	○	○	1. Live Data 2. Programming EMS 3. Programming BCM 4. Programming complete system 5. Programming EMS 6. Set the number of remote control 7. Write body configuration information
MAXUS	EUNIQ5		Smart key	△	○	○	/	1. Read Pin 2. Live data 3. Set the maximum number of keys 4. Programming PEPS 5. Programming EMS 6. Programming EMS 7. Programming ESCL 8. Programming complete system
MAXUS	EUNIQ5 PLUG-IN		Blade key	×	○	○	○	1. Live Data 2. Programming EMS 3. Programming BCM 4. Programming complete system 5. Programming EMS 6. Set the number of remote control 7. Write body configuration information

MAXUS	EUNIQ5 PLUG-IN		Smart key	△	○	○	/	1. Read Pin 2. Live data 3. Set the maximum number of keys 4. Programming PEPS 5. Programming EMS 6. Programming EMS 7. Programming ESCL 8. Programming complete system
MAXUS	EUNIQ6		Blade key	×	○	○	○	1. Live Data 2. Programming EMS 3. Programming BCM 4. Programming complete system 5. Programming EMS 6. Set the number of remote control 7. Write body configuration information
MAXUS	EUNIQ6		Smart key	△	○	○	/	1. Read Pin 2. Live data 3. Set the maximum number of keys 4. Programming PEPS 5. Programming EMS 6. Programming EMS 7. Programming ESCL 8. Programming complete system
MAXUS	EUNIQ6 PLUG-IN		Blade key	×	○	○	○	1. Live Data 2. Programming EMS 3. Programming BCM 4. Programming complete system 5. Programming EMS 6. Set the number of remote control 7. Write body configuration information
MAXUS	EUNIQ6 PLUG-IN		Smart key	△	○	○	/	1. Read Pin 2. Live data 3. Set the maximum number of keys 4. Programming PEPS 5. Programming EMS 6. Programming EMS 7. Programming ESCL 8. Programming complete system
MAXUS	EUNIQ7		Blade key	×	○	○	○	1. Live Data 2. Programming EMS 3. Programming BCM 4. Programming complete system 5. Programming EMS 6. Set the number of remote control 7. Write body configuration information
MAXUS	EUNIQ7		Smart key	△	○	○	/	1. Read Pin 2. Live Data 3. Programming PEPS 4. Programming EMS 5. Reset EMS 6. Programming ESCL 7. Programming PEPS and EMS 8. Write smart box configuration information
MAXUS	EV30		Blade key	/	/	/	○	1. Live Data 2. Set the number of remote control
MAXUS	EV30 OVERSEAS		Blade key	/	/	/	○	1. Live Data 2. Set the number of remote control
MAXUS	EV80	-2017	Blade key	△	○	○	○	1. Read the anti-theft status 2. Read Pin 3. Programming BCM 4. Programming EMS/MCU 5. Programming EMS/MCU and BCM
MAXUS	EV80	2018-	Blade key	×	○	○	○	1. Live Data 2. Programming complete system 3. Programming BCM 4. Programming ECM 5. Brake pedal learning 6. Write body configuration information
MAXUS	EV90		Blade key	×	○	○	○	1. Live Data 2. Programming EMS 3. Programming BCM 4. Programming complete system 5. Programming EMS 6. Set the number of remote control 7. Write body configuration information
MAXUS	EV90		Smart key	△	○	○	/	1. Read Pin 2. Live Data 3. Programming PEPS 4. Programming EMS 5. Reset EMS 6. Programming ESCL 7. Programming PEPS and EMS 8. Write smart box configuration information

MAXUS	EXTENDER		Blade key	×	○	○	○	<ul style="list-style-type: none"> <li>1.Live Data</li> <li>2.Programming EMS</li> <li>3.Programming BCM</li> <li>4.Programming complete system</li> <li>5.Programming EMS</li> <li>6.Set the number of remote control</li> <li>7.Write body configuration information</li> </ul>
MAXUS	EXTENDER		Smart key	△	○	○	/	<ul style="list-style-type: none"> <li>1.Read Pin</li> <li>2.Live data</li> <li>3.Set the maximum number of keys</li> <li>4.Programming PEPS</li> <li>5.Programming EMS</li> <li>6.Programming EMS</li> <li>7.Programming ESCL</li> <li>8.Programming complete system</li> </ul>
MAXUS	FCV80		Blade key	△	○	○	○	<ul style="list-style-type: none"> <li>1.Read the anti-theft status</li> <li>2.Programming BCM</li> <li>3.Programming EMS/MCU</li> <li>4.Programming EMS/MCU and BCM</li> </ul>
MAXUS	G10	-2020	Blade key	×	○	○	○	<ul style="list-style-type: none"> <li>1.Live Data</li> <li>2.Programming complete system</li> <li>3.Programming BCM</li> <li>4.Programming ECM</li> <li>5.Brake pedal learning</li> <li>6.Write body configuration information</li> </ul>
MAXUS	G10	2020-	Blade key	×	○	○	○	<ul style="list-style-type: none"> <li>1.Live Data</li> <li>2.Programming EMS</li> <li>3.Programming BCM</li> <li>4.Programming complete system</li> <li>5.Programming EMS</li> <li>6.Set the number of remote control</li> <li>7.Write body configuration information</li> </ul>
MAXUS	G10		Smart key	△	○	○	/	<ul style="list-style-type: none"> <li>1.Read Pin</li> <li>2.Live Data</li> <li>3.Programming complete system</li> <li>4.Programming PEPS</li> <li>5.Programming EMS</li> <li>6.Reset EMS</li> <li>7.Set the maximum number of keys</li> </ul>
MAXUS	G20		Blade key	×	○	○	○	<ul style="list-style-type: none"> <li>1.Live Data</li> <li>2.Programming EMS</li> <li>3.Programming BCM</li> <li>4.Programming complete system</li> <li>5.Programming EMS</li> <li>6.Set the number of remote control</li> <li>7.Write body configuration information</li> </ul>
MAXUS	G20		Smart key	△	○	○	/	<ul style="list-style-type: none"> <li>1.Read Pin</li> <li>2.Live Data</li> <li>3.Programming PEPS</li> <li>4.Programming EMS</li> <li>5.Reset EMS</li> <li>6.Programming ESCL</li> <li>7.Programming PEPS and EMS</li> <li>8.Write smart box configuration information</li> </ul>
MAXUS	G50		Smart key	△	○	○	/	<ul style="list-style-type: none"> <li>1.Read Pin</li> <li>2.Live data</li> <li>3.Set the maximum number of keys</li> <li>4.Programming PEPS</li> <li>5.Programming EMS</li> <li>6.Programming EMS</li> <li>7.Programming ESCL</li> <li>8.Programming complete system</li> </ul>
MAXUS	G50 PLUS		Blade key	×	○	○	○	<ul style="list-style-type: none"> <li>1.Live Data</li> <li>2.Programming EMS</li> <li>3.Programming BCM</li> <li>4.Programming complete system</li> <li>5.Programming EMS</li> <li>6.Set the number of remote control</li> <li>7.Write body configuration information</li> </ul>
MAXUS	G50 PLUS		Smart key	△	○	○	/	<ul style="list-style-type: none"> <li>1.Read Pin</li> <li>2.Live Data</li> <li>3.Programming PEPS</li> <li>4.Programming EMS</li> <li>5.Reset EMS</li> <li>6.Programming ESCL</li> <li>7.Programming PEPS and EMS</li> <li>8.Write smart box configuration information</li> </ul>
MAXUS	RV63		Blade key	×	○	○	○	<ul style="list-style-type: none"> <li>1.Live Data</li> <li>2.Programming EMS</li> <li>3.Programming BCM</li> <li>4.Programming complete system</li> <li>5.Programming EMS</li> <li>6.Set the number of remote control</li> <li>7.Write body configuration information</li> </ul>

MAXUS	RV63		Smart key	△	○	○	/	1. Read Pin 2. Live Data 3. Programming PEPS 4. Programming EMS 5. Reset EMS 6. Programming ESCL 7. Programming PEPS and EMS 8. Write smart box configuration information
MAXUS	T60		Blade key	×	○	○	○	1. Live Data 2. Programming complete system 3. Programming BCM 4. Programming ECM 5. Brake pedal learning 6. Write body configuration information
MAXUS	T60		Smart key	△	○	○	/	1. Read Pin 2. Live Data 3. Programming PEPS 4. Programming EMS 5. Reset EMS 6. Programming ESCL 7. Programming PEPS and EMS 8. Write smart box configuration information
MAXUS	T70		Blade key	×	○	○	○	1. Live Data 2. Programming complete system 3. Programming BCM 4. Programming ECM 5. Brake pedal learning 6. Write body configuration information
MAXUS	T70		Smart key	△	○	○	/	1. Read Pin 2. Live Data 3. Programming PEPS 4. Programming EMS 5. Reset EMS 6. Programming ESCL 7. Programming PEPS and EMS 8. Write smart box configuration information
MAXUS	T70 EV		Blade key	×	○	○	○	1. Live Data 2. Programming complete system 3. Programming BCM 4. Programming ECM 5. Brake pedal learning 6. Write body configuration information
MAXUS	T90		Blade key	×	○	○	○	1. Live Data 2. Programming complete system 3. Programming BCM 4. Programming ECM 5. Brake pedal learning 6. Write body configuration information
MAXUS	T90		Smart key	△	○	○	/	1. Read Pin 2. Live Data 3. Programming PEPS 4. Programming EMS 5. Reset EMS 6. Programming ESCL 7. Programming PEPS and EMS 8. Write smart box configuration information
MAXUS	V80	-2017	Blade key	○	○	○	/	1. Read the anti-theft status 2. Read Pin 3. Programming BCM 4. Programming EMS/MCU 5. Programming EMS/MCU and BCM
MAXUS	V80	2018-	Blade key	×	○	○	○	1. Live Data 2. Programming complete system 3. Programming BCM 4. Programming ECM 5. Brake pedal learning 6. Write body configuration information
MAXUS	V90		Blade key	×	○	○	○	1. Live Data 2. Programming EMS 3. Programming BCM 4. Programming complete system 5. Programming EMS 6. Set the number of remote control 7. Write body configuration information
MAXUS	V90		Smart key	△	○	○	/	1. Read Pin 2. Live Data 3. Programming PEPS 4. Programming EMS 5. Reset EMS 6. Programming ESCL 7. Programming PEPS and EMS 8. Write smart box configuration information