



深圳市朗仁科技有限公司  
Shenzhen Xtooltech Co., Ltd

MAZDA FUNCTION LIST V26.92

Description: ○: All support by OBD      △: Partially support by OBD      □: All support (Disassembly)  
 ●: All support by OBD(Need accessories)      ▲: Partially support by OBD(Need accessories)      ■: Partially support (Disassembly)  
 ×: Not support      /:Unnecessary      ◎: Conditional support

Brand	Area	Model	Year	Key Type	Read PIN	Add Keys	All Keys Lost	Program Remote	Other Functions
MAZDA	China	MAZDA 2	2008-2014	Smart key	/	○	○	/	1.Live data 2.Switch ignition on 3.Program immo. and PCM 4.Erase DTC
MAZDA	China	MAZDA 2	2014-2016	Smart key	/	○	○	/	1.Switch ignition on 2.Program immo. and PCM
MAZDA	China	MAZDA 2	2017-	Smart key	/	○	○	/	1.Switch ignition on 2.Program immo. and PCM
MAZDA	China	MAZDA 2	2002-2008	Blade key	/	○	○	/	1.Number of keys
MAZDA	China	MAZDA 2	2008-2014	Blade key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	China	Mazda 3		Blade key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	China	Mazda 3		Smart key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	China	Mazda 3(CHINA)	2011-	Smart key	/	○	○	/	1.Live data 2.Switch ignition on 3.Program immo. and PCM 4.Erase DTC
MAZDA	China	Mazda 3(CHINA)	2011-	Blade key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	China	Mazda3 Axela	-2016	Smart key	/	○	○	/	1.Switch ignition on 2.Program immo. and PCM
MAZDA	China	Mazda3 Axela	2017-	Smart key	/	○	○	/	1.Switch ignition on 2.Program immo. and PCM
MAZDA	China	Mazda 5		Smart key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	China	Mazda 5		Blade key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	China	Mazda 6		Smart key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	China	Mazda 6		Blade key	/	○	○	/	1.Number of keys
MAZDA	China	Mazda6	2008-	Smart key	/	○	○	/	1.Live data 2.Switch ignition on 3.Program immo. and PCM 4.Erase DTC
MAZDA	China	Mazda6	2008-	Blade key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	China	Mazda6 Atenza	-2016	Smart key	/	○	○	/	1.Switch ignition on 2.Program immo. and PCM

MAZDA	China	Mazda6 Atenza	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	China	Mazda8		Smart key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	China	Mazda8		Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	China	Mazda CX-3	-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	China	Mazda CX-3	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	China	Mazda CX-4	-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	China	Mazda CX-4	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	China	Mazda CX-5	-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	China	Mazda CX-5	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	China	Mazda CX-7	2004-2009	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	China	Mazda CX-7	2009-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	China	Mazda CX-7	-2016	Smart key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	China	Mazda CX-7	2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	China	Mazda CX-7	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	China	Mazda CX-9	2004-2009	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	China	Mazda CX-9	2009-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	China	Mazda CX-9	-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	China	Mazda CX-9	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Africa	BT-50	2011-		/	○	○	/	1. Number of key
MAZDA	Africa	Mazda 2	2002-2008	Blade key	/	○	○	/	1. Number of keys
MAZDA	Africa	Mazda 2	2008-2014	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Africa	Mazda 2	2008-2014	Smart key	/	○	○	/	1. Live data 2. Switch ignition on 3. Program immo. and PCM 4. Erase DTC
MAZDA	Africa	Mazda 2	2014-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Africa	Mazda 2	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Africa	Mazda 3	2004-2008	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Africa	Mazda 3	2009-2013	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM

MAZDA	Africa	Mazda 3	2004-2008	Smart key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Africa	Mazda 3	2009-2013	Smart key	/	○	○	/	1. Live data 2. Switch ignition on 3. Program immo. and PCM 4. Erase DTC
MAZDA	Africa	Mazda 3	2014-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Africa	Mazda 3	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Africa	Mazda 5	-2011	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Africa	Mazda 5	2012-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Africa	Mazda 6	2002-2008	Blade key	/	○	○	/	1. Number of keys
MAZDA	Africa	Mazda 6	2008-2012	Smart key	/	○	○	/	1. Live data 2. Switch ignition on 3. Program immo. and PCM 4. Erase DTC
MAZDA	Africa	Mazda 6	2012-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Africa	Mazda 6	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Africa	Mazda CX-3	-2017	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Africa	Mazda CX-3	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Africa	Mazda CX-5	2013-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Africa	Mazda CX-5	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Africa	Mazda CX-7	2004-2009	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Africa	Mazda CX-7	2009-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Africa	Mazda CX-7	-2016	Smart key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Africa	Mazda CX-9	2004-2009	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Africa	Mazda CX-9	2009-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Africa	Mazda CX-9	2009-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Africa	Mazda CX-9	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Africa	Demio	-2001	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Africa	Demio	2002-2007	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Africa	Demio	2008-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM

MAZDA	Africa	Demio	2008-	Smart key	/	○	○	/	1.Live data 2.Switch ignition on 3.Program immo. and PCM 4.Erase DTC
MAZDA	Africa	Mx5	2005-2009	Blade key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	Africa	Mx5	2009-2015	Blade key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	Africa	Mx5	2016	Smart key	/	○	○	/	1.Switch ignition on 2.Program immo. and PCM
MAZDA	Africa	Mx5	2017-	Smart key	/	○	○	/	1.Switch ignition on 2.Program immo. and PCM
MAZDA	Africa	Premacy	2005-	Blade key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	Africa	Premacy	2005-	Smart key	/	○	○	/	1.Live data 2.Switch ignition on 3.Program immo. and PCM 4.Erase DTC
MAZDA	Africa	RX-8	2004-2009	Blade key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	Africa	RX-8	2009-	Blade key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	Africa	RX-8	2009-	Smart key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	Asia	BT-50	2011-		/	○	○	/	1.Number of key
MAZDA	Asia	Mazda 121			/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	Asia	Mazda 2	2002-2008	Blade key	/	○	○	/	1.Number of keys
MAZDA	Asia	Mazda 2	2008-2014	Blade key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	Asia	Mazda 2	2008-2014	Smart key	/	○	○	/	1.Live data 2.Switch ignition on 3.Program immo. and PCM 4.Erase DTC
MAZDA	Asia	Mazda 2	2014-2016	Smart key	/	○	○	/	1.Switch ignition on 2.Program immo. and PCM
MAZDA	Asia	Mazda 2	2017-	Smart key	/	○	○	/	1.Switch ignition on 2.Program immo. and PCM
MAZDA	Asia	Mazda 3	2004-2008	Blade key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	Asia	Mazda 3	2009-2013	Blade key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	Asia	Mazda 3	2004-2008	Smart key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	Asia	Mazda 3	2009-2013	Smart key	/	○	○	/	1.Live data 2.Switch ignition on 3.Program immo. and PCM 4.Erase DTC
MAZDA	Asia	Mazda 3	2014-2016	Smart key	/	○	○	/	1.Switch ignition on 2.Program immo. and PCM
MAZDA	Asia	Mazda 3	2017-	Smart key	/	○	○	/	1.Switch ignition on 2.Program immo. and PCM

MAZDA	Asia	Mazda 5	-2011	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Asia	Mazda 5	2012-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Asia	Mazda 6	2002-2008	Blade key	/	○	○	/	1. Number of keys
MAZDA	Asia	Mazda 6	2008-2012	Smart key	/	○	○	/	1. Live data 2. Switch ignition on 3. Program immo. and PCM 4. Erase DTC
MAZDA	Asia	Mazda 6	2012-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Asia	Mazda 6	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Asia	Mazda CX-3	2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Asia	Mazda CX-3	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Asia	Mazda CX-5	2013-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Asia	Mazda CX-5	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Asia	Mazda CX-7	2004-2009	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Asia	Mazda CX-7	2009-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Asia	Mazda CX-7	-2016	Smart key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Asia	Mazda CX-9	2004-2009	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Asia	Mazda CX-9	2009-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Asia	Mazda CX-9	2009-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Asia	Mazda CX-9	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Asia	Demio	-2001	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Asia	Demio	2002-2007	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Asia	Demio	2008-2013	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Asia	Demio	2008-2013	Smart key	/	○	○	/	1. Live data 2. Switch ignition on 3. Program immo. and PCM 4. Erase DTC
MAZDA	Asia	Demio	2014-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Asia	Demio	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Asia	Mx5	2005-2009	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM

MAZDA	Asia	Mx5	2009-2015	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Asia	Mx5	2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Asia	Mx5	2017-	Smart key	/	○	○	/	1. All smart keys lost 2. Add a smart key 3. Switch ignition on 4. Program immo. and PCM
MAZDA	Asia	Premacy	2005-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Asia	Premacy	2005-	Smart key	/	○	○	/	1. Live data 2. Switch ignition on 3. Program immo. and PCM 4. Erase DTC
MAZDA	Asia	RX-8	2004-2009	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Asia	RX-8	2009-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Asia	RX-8	2009-	Smart key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Asia	MPV	2006-2016		/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Asia	VERISA	2005-2015		/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Australia	BT-50	2011-		/	○	○	/	1. Number of key
MAZDA	Australia	Mazda 121			/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Australia	Mazda 2	2002-2008	Blade key	/	○	○	/	1. Number of keys
MAZDA	Australia	Mazda 2	2008-2014	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Australia	Mazda 2	2008-2014	Smart key	/	○	○	/	1. Live data 2. Switch ignition on 3. Program immo. and PCM 4. Erase DTC
MAZDA	Australia	Mazda 2	2014-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Australia	Mazda 2	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Australia	Mazda 3	2004-2008	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Australia	Mazda 3	2009-2013	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Australia	Mazda 3	2004-2008	Smart key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Australia	Mazda 3	2009-2013	Smart key	/	○	○	/	1. Live data 2. Switch ignition on 3. Program immo. and PCM 4. Erase DTC
MAZDA	Australia	Mazda 3	2014-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Australia	Mazda 3	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM

MAZDA	Australia	Mazda 5	-2011	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Australia	Mazda 5	2012-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Australia	Mazda 6	2002-2008	Blade key	/	○	○	/	1. Number of keys
MAZDA	Australia	Mazda 6	2008-2012	Smart key	/	○	○	/	1. Live data 2. Switch ignition on 3. Program immo. and PCM 4. Erase DTC
MAZDA	Australia	Mazda 6	2012-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Australia	Mazda 6	2017	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Australia	Mazda CX-3	2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Australia	Mazda CX-3	2017	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Australia	Mazda CX-5	2013-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Australia	Mazda CX-5	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Australia	Mazda CX-7	2004-2009	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Australia	Mazda CX-7	2009-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Australia	Mazda CX-7	-2016	Smart key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Australia	Mazda CX-9	2004-2009	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Australia	Mazda CX-9	2009-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Australia	Mazda CX-9	2009-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Australia	Mazda CX-9	2017	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Australia	Demio	-2001	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Australia	Demio	2002-2007	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Australia	Demio	2008-2013	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Australia	Demio	2008-2013	Smart key	/	○	○	/	1. Live data 2. Switch ignition on 3. Program immo. and PCM 4. Erase DTC
MAZDA	Australia	Demio	2014-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Australia	Demio	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Australia	Mx5	2005-2009	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM

MAZDA	Australia	Mx5	2009-2015	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Australia	Mx5	2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Australia	Mx5	2017	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Australia	Premacy	2005-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Australia	Premacy	2005-	Smart key	/	○	○	/	1. Live data 2. Switch ignition on 3. Program immo. and PCM 4. Erase DTC
MAZDA	Australia	RX-8	2004-2009	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Australia	RX-8	2009-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Australia	RX-8	2009-	Smart key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Europe	BT-50	2011-		/	○	○	/	1. Number of key
MAZDA	Europe	Mazda 121			/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Europe	Mazda 2	2002-2008	Blade key	/	○	○	/	1. Number of keys
MAZDA	Europe	Mazda 2	2008-2014	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Europe	Mazda 2	2008-2014	Smart key	/	○	○	/	1. Live data 2. Switch ignition on 3. Program immo. and PCM 4. Erase DTC
MAZDA	Europe	Mazda 2	2014-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Europe	Mazda 2	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Europe	Mazda 3	2004-2008	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Europe	Mazda 3	2009-2013	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Europe	Mazda 3	2004-2008	Smart key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Europe	Mazda 3	2009-2013	Smart key	/	○	○	/	1. Live data 2. Switch ignition on 3. Program immo. and PCM 4. Erase DTC
MAZDA	Europe	Mazda 3	2014-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Europe	Mazda 3	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Europe	Mazda 5	-2011	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Europe	Mazda 5	2012-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Europe	Mazda 6	2002-2008	Blade key	/	○	○	/	1. Number of keys



MAZDA	Europe	Mazda 6	2009-2013	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Europe	Mazda 6	2009-2013	Smart key	/	○	○	/	1. Live data 2. Switch ignition on 3. Program immo. and PCM 4. Erase DTC
MAZDA	Europe	Mazda 6	2014-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Europe	Mazda 6	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Europe	Mazda CX-3	-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Europe	Mazda CX-3	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Europe	Mazda CX-5	2013-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Europe	Mazda CX-5	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Europe	Mazda CX-7	2004-2009	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Europe	Mazda CX-7	2009-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Europe	Mazda CX-7	-2016	Smart key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Europe	Mazda CX-9	2004-2009	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Europe	Mazda CX-9	2009-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Europe	Mazda CX-9	-2016	Smart key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Europe	Mazda CX-9	2017	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Europe	Demio	-2001	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Europe	Demio	2002-2007	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Europe	Demio	2008-2013	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Europe	Demio	2008-2013	Smart key	/	○	○	/	1. Live data 2. Switch ignition on 3. Program immo. and PCM 4. Erase DTC
MAZDA	Europe	Demio	2014-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Europe	Demio	2017	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	Europe	Mx5	2005-2009	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Europe	Mx5	2009-2015	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Europe	Mx5	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM

MAZDA	Europe	Premacy	2005-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Europe	Premacy	2005-	Smart key	/	○	○	/	1. Live data 2. Switch ignition on 3. Program immo. and PCM 4. Erase DTC
MAZDA	Europe	RX-8	2004-2009	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Europe	RX-8	2009-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	Europe	RX-8	2009-	Smart key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	North America	Atenza	-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	North America	Atenza	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	North America	Axela	-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	North America	Axela	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	North America	B系列	1999-2000		/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	North America	B系列	-2007		/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	North America	B系列	2007-2011		/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	North America	Mazda 2	2011-2014		/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	North America	Mazda 2	2014-2016		/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	North America	Mazda 2	2017-		/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	North America	Mazda 3	2004-2010	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	North America	Mazda 3	2010-2013	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	North America	Mazda 3	2010-2013	Smart key	/	○	○	/	1. Live data 2. Switch ignition on 3. Program immo. and PCM 4. Erase DTC
MAZDA	North America	Mazda 3	2014-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	North America	Mazda 3	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	North America	Mazda 5	2006-2011		/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	North America	Mazda 5	2012-		/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	North America	Mazda 6	2003-2008	Smart key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	North America	Mazda 6	2003-2008	Blade key	/	○	○	/	1. Number of keys

MAZDA	North America	Mazda 6	2008-2013	Smart key	/	○	○	/	1.Live data 2.Switch ignition on 3.Program immo. and PCM 4.Erase DTC
MAZDA	North America	Mazda 6	2008-2013	Blade key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	North America	Mazda 6	2014-2016	Smart key	/	○	○	/	1.Switch ignition on 2.Program immo. and PCM
MAZDA	North America	Mazda 6	2017-2018	Smart key	/	○	○	/	1.Switch ignition on 2.Program immo. and PCM
MAZDA	North America	Mazda 8		Smart key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	North America	Mazda CX-3	2013-2016	Smart key	/	○	○	/	1.Switch ignition on 2.Program immo. and PCM
MAZDA	North America	Mazda CX-3	2017-	Smart key	/	○	○	/	1.Switch ignition on 2.Program immo. and PCM
MAZDA	North America	Mazda CX-4	2013-2016	Smart key	/	○	○	/	1.Switch ignition on 2.Program immo. and PCM
MAZDA	North America	Mazda CX-4	2017-	Smart key	/	○	○	/	1.Switch ignition on 2.Program immo. and PCM
MAZDA	North America	Mazda CX-5	-2016	Smart key	/	○	○	/	1.Switch ignition on 2.Program immo. and PCM
MAZDA	North America	Mazda CX-5	2017-	Smart key	/	○	○	/	1.Switch ignition on 2.Program immo. and PCM
MAZDA	North America	Mazda CX-7	2004-2008		/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	North America	Mazda CX-7	2009-2014		/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	North America	Mazda CX-9	2004-2006	Blade key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	North America	Mazda CX-9	2007-2014	Blade key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	North America	Mazda CX-9	-2016	Smart key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	North America	Mazda CX-9	2017-	Smart key	/	○	○	/	1.Switch ignition on 2.Program immo. and PCM
MAZDA	North America	Mx5	2004-2010	Blade key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	North America	Mx5	2010-2013	Blade key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	North America	Mx5	-2013	Smart key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	North America	Mx5	2014-2016	Smart key	/	○	○	/	1.Switch ignition on 2.Program immo. and PCM
MAZDA	North America	Mx5	2017-	Smart key	/	○	○	/	1.Switch ignition on 2.Program immo. and PCM
MAZDA	North America	Mx5 miata		Blade key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	North America	Mx5 miata		Smart key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	North America	RX-8		Blade key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM

MAZDA	North America	RX-8		Smart key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	North America	Speed 3	2012	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	North America	Tribute	2001-2004		/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	North America	Tribute	2005-2008		/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	North America	Tribute	2009-2011		/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	South America	BT-50	2011-		/	○	○	/	1. Number of key
MAZDA	South America	Mazda 121			/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	South America	Mazda 2	2002-2008	Blade key	/	○	○	/	1. Number of keys 2. Add a key 3. All Keys lost
MAZDA	South America	Mazda 2	2008-2014	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	South America	Mazda 2	2008-2014	Smart key	/	○	○	/	1. Live data 2. Switch ignition on 3. Program immo. and PCM 4. Erase DTC
MAZDA	South America	Mazda 2	2014-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	South America	Mazda 2	2017	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	South America	Mazda 3	2004-2008	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	South America	Mazda 3	2009-2013	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	South America	Mazda 3	2004-2008	Smart key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	South America	Mazda 3	2009-2013	Smart key	/	○	○	/	1. Live data 2. Switch ignition on 3. Program immo. and PCM 4. Erase DTC
MAZDA	South America	Mazda 3	2014-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	South America	Mazda 3	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	South America	Mazda 5	-2011	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	South America	Mazda 5	2012-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	South America	Mazda 6	2002-2008	Blade key	/	○	○	/	1. Number of keys 2. Add a key 3. All Keys lost
MAZDA	South America	Mazda 6	2008-2012	Smart key	/	○	○	/	1. Live data 2. Switch ignition on 3. Program immo. and PCM 4. Erase DTC

MAZDA	South America	Mazda 6	2012-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	South America	Mazda 6	2017	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	South America	Mazda CX-3	2016-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	South America	Mazda CX-3	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	South America	Mazda CX-5	2013-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	South America	Mazda CX-5	2017-	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	South America	Mazda CX-7	2004-2009	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	South America	Mazda CX-7	2009-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	South America	Mazda CX-7	-2016	Smart key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	South America	Mazda CX-9	2004-2009	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	South America	Mazda CX-9	2009-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	South America	Mazda CX-9	2009-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	South America	Mazda CX-9	2017	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	South America	Demio	-2001	Smart key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	South America	Demio	2002-2007	Blade key	/	○	○	/	1. Number of keys 2. Add a key 3. All Keys lost
MAZDA	South America	Demio	2008-2013	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	South America	Demio	2008-2013	Smart key	/	○	○	/	1. Live data 2. Switch ignition on 3. Program immo. and PCM 4. Erase DTC
MAZDA	South America	Demio	2014-2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	South America	Demio	2017	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	South America	Mx5	2005-2009	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	South America	Mx5	2009-2015	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM
MAZDA	South America	Mx5	2016	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	South America	Mx5	2017	Smart key	/	○	○	/	1. Switch ignition on 2. Program immo. and PCM
MAZDA	South America	Premacy	2005-	Blade key	/	○	○	/	1. Read number of keys 2. Program immo. and PCM

MAZDA	South America	Premacy	2005-	Smart key	/	○	○	/	1.Live data 2.Switch ignition on 3.Program immo. and PCM 4.Erase DTC
MAZDA	South America	RX-8	2004-2009	Blade key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	South America	RX-8	2009-		/	○	○	/	1.Read number of keys 2.Program immo. and PCM
MAZDA	South America	RX-8	2009-	Smart key	/	○	○	/	1.Read number of keys 2.Program immo. and PCM

*XTOOL*