

Brand	Model	Year	Key Type	Read PIN	Add Keys	All Keys Lost	Program Remote	Other Functions
SOUEAST	A5		Blade key	/	/	/	○	1. Remote control matching 2. Write VIN code 3. Clear key
SOUEAST	A5		Smart key	△	×	○	/	1. Key matching 2. Read ECU learning status 3. Reset EMS 4. Reset PEPS 5. Learn PEPS 6. PEPE offline learning 7. Key offline matching
SOUEAST	DX3		Blade key	△	×	○	/	1. Key matching 2. Write VIN code 3. Read ECU learning status 4. IMMO matching 5. EMS matching 6. IMMO reset 7. EMS reset 8. New system matching 9. Offline matching key
SOUEAST	DX3		Smart key	△	×	○	/	1. Key matching 2. PEPS matching 3. ESCL matching 4. EMS matching 5. New system programming 6. Read anti-theft status 7. Reset Smart Box 8. Reset the engine 9. Reset the steering column
SOUEAST	DX3		Blade key	/	/	/	○	1. Remote control matching 2. Write VIN code 3. Clear key

SOUEAST	DX3N (EV)		Blade key	△	×	○	/	<ol style="list-style-type: none"> 1. Key matching 2. Write VIN code 3. Read ECU learning status 4. IMMO matching 5. EMS matching 6. IMMO reset 7. EMS reset 8. New system matching 9. Offline matching key
SOUEAST	DX3N (EV)		Body control system	/	/	/	○	<ol style="list-style-type: none"> 1. Key learning 2. Clear key
SOUEAST	DX5		Blade key	△	×	○	/	<ol style="list-style-type: none"> 1. Key matching 2. Write VIN code 3. Read ECU learning status 4. IMMO matching 5. EMS matching 6. IMMO reset 7. EMS reset 8. New system matching 9. Offline matching key
SOUEAST	DX5		Smart key	△	×	○	/	<ol style="list-style-type: none"> 1. Key matching 2. Read ECU learning status 3. Reset EMS 4. Reset PEPS 5. Learn PEPS 6. PEPE offline learning 7. Key offline matching
SOUEAST	DX5		Blade key	/	/	/	○	<ol style="list-style-type: none"> 1. Remote control matching 2. Write VIN code 3. Clear key

SOUEAST	DX7	-2018	Smart key	△	×	○	/	<ol style="list-style-type: none"> 1. Key matching 2. PEPS matching 3. ESCL matching 4. New system programming 5. Clear ECU learning status <ol style="list-style-type: none"> 5.1. Clear ESCL learning status 5.2. Clear EMS learning status 5.3. Clear PEPS learning status 6. Offline key matching
SOUEAST	DX7	2018-	Smart key	△	×	○	/	<ol style="list-style-type: none"> 1. Key matching 2. Read ECU learning status 3. Reset EMS 4. Reset PEPS 5. Learn PEPS 6. PEPE offline learning 7. Key offline matching
SOUEAST	DX7N (EV)	2018-	Smart key	△	×	○	/	<ol style="list-style-type: none"> 1. Key matching 2. Read ECU learning status 3. Reset EMS 4. Reset PEPS 5. Learn PEPS 6. PEPE offline learning 7. Key offline matching
SOUEAST	DX9		Smart key	△	×	○	/	<ol style="list-style-type: none"> 1. Key matching 2. Read ECU learning status 3. Reset EMS 4. Reset PEPS 5. Learn PEPS 6. PEPE offline learning 7. Key offline matching

SOUEAST	Southeast V3 Ling Yue		Blade key	×	○	○	/	<ul style="list-style-type: none"> 1. Version Information 2. Read trouble code 3. Clear trouble code 4. Read data stream 5. password setting <ul style="list-style-type: none"> 5.1. password setting 5.2. Password input 6. Programming function <ul style="list-style-type: none"> 6.1. New system matching 6.2. Key matching 6.3. Key removal 6.4. Anti-theft device ECU matching 6.5. Engine ECU matching 6.6. Programming anti-theft device VIN 6.7. Programming Engine VIN 6.8. Engine ECU reset 6.9. Anti-theft device ECU reset
SOUEAST	Golan		Blade key	×	×	○	/	<ul style="list-style-type: none"> 1. Read trouble code 2. Clear trouble code 3. Read data stream 4. Key matching 5. Anti-theft device ECU reset
SOUEAST	Ling Shen		Blade key	×	×	○	/	<ul style="list-style-type: none"> 1. Read trouble code 2. Clear trouble code 3. Read data stream 4. Key matching 5. Anti-theft device ECU reset
SOUEAST	Lingshi v6		smart key	△	×	○	/	<ul style="list-style-type: none"> 1. All keys lost 2. Matching anti-theft device 3. Clear PEPS 4. Clear EMS 5. Clear ESCL 6. Read matching status

SOUEAST	Lingzhi V5		smart key	△	×	○	/	1. All keys lost 2. Matching anti-theft device 3. Clear PEPS 4. Clear EMS 5. Clear ESCL 6. Read matching status
---------	------------	--	-----------	---	---	---	---	--

XTOOL