



Shenzhen Xtooltech Co., Ltd

Lancia Function List V11.40

Tips and Instructions:

The programming function only supports H6PRO, H6PRO Master Edition products.

- * This feature is new.
- ✓ This feature is supported.
- This feature is not supported.
- ※ This feature is partially supported.

Vehicle	Model	Year/model	System	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Action Test	Special Functions
LANCIA	DEDRA	'96 1.8 16V 115 CV	Bosch 5.3 ABS	✓	✓	✓			
LANCIA	DEDRA	'96 1.8 16V 115 CV	Hitachi MPI Injection	✓	✓	✓	✓		
LANCIA	DEDRA	'96 1.8 16V 130 CV	Bosch 5.3 ABS	✓	✓	✓			
LANCIA	DEDRA	'96 1.8 16V 130 CV	Hitachi MPI Injection	✓	✓	✓	✓		
LANCIA	DEDRA	'98 1.6 16V	Bosch 5.3 ABS	✓	✓	✓			
LANCIA	DEDRA	'98 1.6 16V	Magneti Marelli IAW 49F Injection (1.6 Eng.)	✓	✓	✓	✓		
LANCIA	DELTA (111)	'96 1.6 16V	Bosch 5.3 ABS	✓	✓	✓			
LANCIA	DELTA (111)	'96 1.8 16V 115 CV	Bosch 5.3 ABS	✓	✓	✓			
LANCIA	DELTA (111)	'96 1.8 16V 115 CV	Hitachi MPI Injection	✓	✓	✓	✓		
LANCIA	DELTA (111)	'96 1.8 16V 130 CV	Bosch 5.3 ABS	✓	✓	✓			
LANCIA	DELTA (111)	'96 1.8 16V 130 CV	Hitachi MPI Injection	✓	✓	✓	✓		
LANCIA	DELTA (111)	'96 2.0 TURBO 16V	Bosch 5.3 ABS	✓	✓	✓			
LANCIA	DELTA (111)	'96 TD	Bosch 5.3 ABS	✓	✓	✓			
LANCIA	DELTA (111)	'98 1.6 16V	Bosch 5.3 ABS	✓	✓	✓			
LANCIA	DELTA (111)	'98 1.6 16V	Magneti Marelli IAW 49F Injection (1.6 Eng.)	✓	✓	✓	✓		
LANCIA	DELTA (111)	'98 1.8 16V	Bosch 5.3 ABS	✓	✓	✓			
LANCIA	DELTA (111)	'98 1.8 16V	Hitachi MPI Injection (Eng. 1.8 16V '98)	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.4 TURBO 16V	Bosch Motronic Injection Me7.9.10 CF5/EOBD (Eng. 1.4)	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.4 TURBO 16V	Injection Landi Renzo LCO2 Gas	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.4 TURBO 16V	Marelli Instrument Panel 3	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.4 TURBO 16V	Marelli Radio Navigator	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.4 TURBO 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.4 TURBO 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.4 TURBO 16V	Marelli Body Computer 8	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.4 TURBO 16V	SIEMENS Airbag 1 (Proxi)	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.4 TURBO 16V	TRW ABS ESP	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.4 TURBO 16V	TRW Lane Control Control Unit (HALF)	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.4 TURBO 16V	Denso 3 Climate Control (Two-Zone)	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.4 TURBO 16V	Driver's Seat Lear 3	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.4 TURBO 16V	Passenger's Seat Lear 3	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.4 TURBO 16V	TRW3 Electric Steering	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.4 TURBO 16V	Tyre Pressure Control TRW 2	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.4 TURBO 16V	Valeo Semi-Automatic Parking Control Unit	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.4 TURBO 16V	Valeo 2 Parking Control Unit	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.6 MJET 16V	Bosch Diese Injection EDC16C39 CF5/EOBD (1.6/1.9/2.0 Eng.)	✓	✓	✓	✓		

LANCIA	DELTA (181)	1.6 MJET 16V	Marelli SELESPEED CFC300 Automatic Gearbox	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.6 MJET 16V	Marelli Instrument Panel 3	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.6 MJET 16V	Marelli Radio Navigator	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.6 MJET 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.6 MJET 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.6 MJET 16V	Marelli Body Computer 8	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.6 MJET 16V	SIEMENS Airbag 1 (Proxi)	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.6 MJET 16V	TRW ABS ESP	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.6 MJET 16V	TRW Lane Control Control Unit (HALF)	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.6 MJET 16V	Denso 3 Climate Control (Two-Zone)	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.6 MJET 16V	Driver's Seat Lear 3	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.6 MJET 16V	Passenger's Seat Lear 3	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.6 MJET 16V	TRW3 Electric Steering	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.8 JTS TB 16V	Automatic Gearbox AISIN AF40-6	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.8 JTS TB 16V	Bosch Injection Motronic Med17.3.1 CF5/EOBD (Eng. 1.8)	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.8 JTS TB 16V	Marelli Instrument Panel 3	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.8 JTS TB 16V	Marelli Radio Navigator	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.8 JTS TB 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.8 JTS TB 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.8 JTS TB 16V	Marelli Body Computer 8	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.8 JTS TB 16V	SIEMENS Airbag 1 (Proxi)	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.8 JTS TB 16V	TRW ABS ESP	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.8 JTS TB 16V	TRW Lane Control Control Unit (HALF)	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.8 JTS TB 16V	Denso 3 Climate Control (Two-Zone)	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.8 JTS TB 16V	Driver's Seat Lear 3	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.8 JTS TB 16V	Passenger's Seat Lear 3	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.8 JTS TB 16V	TRW3 Electric Steering	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.9 MJET 16V TWINTB	Bosch Diese Injection EDC16C39 CF5/EOBD (1.6/1.9/2.0 Eng.)	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.9 MJET 16V TWINTB	Marelli Instrument Panel 3	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.9 MJET 16V TWINTB	Marelli Radio Navigator	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.9 MJET 16V TWINTB	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.9 MJET 16V TWINTB	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.9 MJET 16V TWINTB	Marelli Body Computer 8	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.9 MJET 16V TWINTB	SIEMENS Airbag 1 (Proxi)	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.9 MJET 16V TWINTB	TRW ABS ESP	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.9 MJET 16V TWINTB	TRW Lane Control Control Unit (HALF)	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.9 MJET 16V TWINTB	Denso 3 Climate Control (Two-Zone)	✓	✓	✓	✓		
LANCIA	DELTA (181)	1.9 MJET 16V TWINTB	Driver's Seat Lear 3	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.9 MJET 16V TWINTB	Passenger's Seat Lear 3	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	1.9 MJET 16V TWINTB	TRW3 Electric Steering	✓	✓	✓	✓		
LANCIA	DELTA (181)	2.0 MJET 16V	Bosch Diese Injection EDC16C39 CF5/EOBD (1.6/1.9/2.0 Eng.)	✓	✓	✓	✓		
LANCIA	DELTA (181)	2.0 MJET 16V	Marelli Instrument Panel 3	✓	✓	✓	✓		
LANCIA	DELTA (181)	2.0 MJET 16V	Marelli Radio Navigator	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	2.0 MJET 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	2.0 MJET 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	2.0 MJET 16V	Marelli Body Computer 8	✓	✓	✓	✓	✓	

LANCIA	DELTA (181)	2.0 MJET 16V	SIEMENS Airbag 1 (Proxi)	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	2.0 MJET 16V	TRW ABS ESP	✓	✓	✓	✓		
LANCIA	DELTA (181)	2.0 MJET 16V	TRW Lane Control Control Unit (HALF)	✓	✓	✓	✓		
LANCIA	DELTA (181)	2.0 MJET 16V	Denso 3 Climate Control (Two-Zone)	✓	✓	✓	✓		
LANCIA	DELTA (181)	2.0 MJET 16V	Driver's Seat Lear 3	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	2.0 MJET 16V	Passenger's Seat Lear 3	✓	✓	✓	✓	✓	
LANCIA	DELTA (181)	2.0 MJET 16V	TRW3 Electric Steering	✓	✓	✓	✓		
LANCIA	DELTA (181)	2.0 MJET 16V	Tyre Pressure Control TRW 2	✓	✓	✓	✓		
LANCIA	DELTA (181)	2.0 MJET 16V	Valeo Semi-Automatic Parking Control Unit	✓	✓	✓	✓		
LANCIA	DELTA (181)	2.0 MJET 16V	Valeo 2 Parking Control Unit	✓	✓	✓	✓		
LANCIA	FLAVIA	2013	PCM (Powertrain Control Module)	✓	✓	✓	✓		sp02543, sp02544, sp02545, sp02546, sp02547, sp02548, sp02549, sp02550, sp02551, sp02552
LANCIA	FLAVIA	2013	TCM (Transmission Control Module)	✓	✓	✓	✓	✓	
LANCIA	FLAVIA	2013	ABS (Anti Lock Brakes)	✓	✓	✓	✓		sp02553, sp02554
LANCIA	FLAVIA	2013	ORC (Occupant Restraint)	✓	✓	✓	✓		sp02555
LANCIA	FLAVIA	2013	WCM (Wireless Control)	✓	✓	✓	✓		sp02556
LANCIA	FLAVIA	2013	TIPMCGW (Central Gateway)	✓	✓	✓	✓		
LANCIA	FLAVIA	2013	SAS (Steering Angle Sensor)	✓	✓	✓	✓		
LANCIA	FLAVIA	2013	RADIO (RADIO)	✓	✓	✓	✓		
LANCIA	FLAVIA	2013	PTCM (Power Top Control Module)	✓	✓	✓	✓		
LANCIA	FLAVIA	2013	PDM (Passenger Door Module)	✓	✓	✓	✓	✓	sp02557, sp02558, sp02559, sp02560
LANCIA	FLAVIA	2013	HVAC (Heat, Ventilation And A/C)	✓	✓	✓	✓	✓	sp02561
LANCIA	FLAVIA	2013	HFM (Hands Free Module (Cell Phone))	✓	✓	✓	✓	✓	
LANCIA	FLAVIA	2013	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	
LANCIA	FLAVIA	2013	DDM (Driver Door Module)	✓	✓	✓	✓	✓	
LANCIA	FLAVIA	2013	CCN (Instrument Cluster/Cabin Compartment Node)	✓	✓	✓	✓		sp02562, sp02563, sp02564, sp02565, sp02566, sp02567
LANCIA	FLAVIA	2013	AMP (Amplifier)	✓	✓	✓	✓		
LANCIA	FLAVIA	2012	PCM (Powertrain Control Module)	✓	✓	✓	✓		sp02568, sp02569, sp02570, sp02571, sp02572, sp02573, sp02574, sp02575, sp02576, sp02577
LANCIA	FLAVIA	2012	ABS (Anti Lock Brakes)	✓	✓	✓	✓		sp02578, sp02579
LANCIA	FLAVIA	2012	ORC (Occupant Restraint)	✓	✓	✓	✓		sp02580
LANCIA	FLAVIA	2012	TIPMCGW (Central Gateway)	✓	✓	✓	✓		
LANCIA	FLAVIA	2012	WCM (Wireless Control)	✓	✓	✓	✓		sp02581
LANCIA	FLAVIA	2012	SAS (Steering Angle Sensor)	✓	✓	✓	✓		
LANCIA	FLAVIA	2012	RADIO (RADIO)	✓	✓	✓	✓		
LANCIA	FLAVIA	2012	PTCM (Power Top Control Module)	✓	✓	✓	✓		
LANCIA	FLAVIA	2012	PDM (Passenger Door Module)	✓	✓	✓	✓	✓	sp02582, sp02583, sp02584, sp02585
LANCIA	FLAVIA	2012	HVAC (Heat, Ventilation And A/C)	✓	✓	✓	✓	✓	sp02586
LANCIA	FLAVIA	2012	HFM (Hands Free Module (Cell Phone))	✓	✓	✓	✓	✓	
LANCIA	FLAVIA	2012	DDM (Driver Door Module)	✓	✓	✓	✓	✓	
LANCIA	FLAVIA	2012	CCN (Instrument Cluster/Cabin Compartment Node)	✓	✓	✓	✓		sp02587, sp02588, sp02589, sp02590, sp02591, sp02592
LANCIA	FLAVIA	2012	AMP (Amplifier)	✓	✓	✓	✓		
LANCIA	K	'98 2.4 JTD	Bosch EDC15 Diesel Injection (2.4 TD D.I. Eng.)	✓	✓	✓	✓		
LANCIA	K	'98 2.4 JTD	Bosch 5.3 ABS	✓	✓	✓	✓		
LANCIA	K	'98 2.4 JTD	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓		
LANCIA	K	'98 2.4 JTD	TRW MY 97 Air Bag (2F-2P-2L-S)	✓	✓	✓	✓		
LANCIA	K	'98 2.4 JTD	TRW MY 97 Air Bag (2F-2P-S)	✓	✓	✓	✓		
LANCIA	K	'99 2.0	Bosch Motronic ME3.1 Injection (Eng. 2.0 20V)	✓	✓	✓	✓		
LANCIA	K	'99 2.0	Bosch 5.3 ABS	✓	✓	✓	✓		
LANCIA	K	'99 2.0	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓		
LANCIA	K	'99 2.0	TRW MY 97 Air Bag (2F-2P-2L-S)	✓	✓	✓	✓		
LANCIA	K	'99 2.0	TRW MY 97 Air Bag (2F-2P-S)	✓	✓	✓	✓		
LANCIA	K	'99 2.0	TRW MY 97 Airbag (2F-2P-2L)	✓	✓	✓	✓		
LANCIA	K	'99 2.4	Bosch Motronic ME3.1 Injection (Eng. 2.0 20V)	✓	✓	✓	✓		
LANCIA	K	'99 2.4	Bosch 5.3 ABS	✓	✓	✓	✓		
LANCIA	K	'99 2.4	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓		
LANCIA	K	'99 2.4	TRW MY 97 Air Bag (2F-2P-2L-S)	✓	✓	✓	✓		
LANCIA	K	'99 2.4	TRW MY 97 Air Bag (2F-2P-S)	✓	✓	✓	✓		

LANCIA	K	'99 2.4	TRW MY 97 Airbag (2F-2P-2L)	✓	✓	✓	✓		
LANCIA	K	'99 3.0	Bosch 5.3 ABS	✓	✓	✓			
LANCIA	K	'99 3.0	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓		
LANCIA	K	'99 3.0	TRW MY 97 Air Bag (2F-2P-2L-S)	✓	✓	✓	✓		
LANCIA	K	'99 3.0	TRW MY 97 Air Bag (2F-2P-S)	✓	✓	✓	✓		
LANCIA	K	'99 3.0	TRW MY 97 Airbag (2F-2P-2L)	✓	✓	✓	✓		
LANCIA	K	2	Bosch 5.3 ABS	✓	✓	✓			
LANCIA	K	2	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓		
LANCIA	K	2	TRW MY 97 Air Bag (2F-2P-2L-S)	✓	✓	✓	✓		
LANCIA	K	2	TRW MY 97 Air Bag (2F-2P-S)	✓	✓	✓	✓		
LANCIA	K	2.0 TURBO	Bosch 5.3 ABS	✓	✓	✓			
LANCIA	K	2.0 TURBO	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓		
LANCIA	K	2.0 TURBO	TRW MY 97 Air Bag (2F-2P-2L-S)	✓	✓	✓	✓		
LANCIA	K	2.0 TURBO	TRW MY 97 Air Bag (2F-2P-S)	✓	✓	✓	✓		
LANCIA	K	2.4	Bosch 5.3 ABS	✓	✓	✓			
LANCIA	K	2.4	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓		
LANCIA	K	2.4	TRW MY 97 Air Bag (2F-2P-2L-S)	✓	✓	✓	✓		
LANCIA	K	2.4	TRW MY 97 Air Bag (2F-2P-S)	✓	✓	✓	✓		
LANCIA	K	2.4 TD	Bosch 5.3 ABS	✓	✓	✓			
LANCIA	K	2.4 TD	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓		
LANCIA	K	2.4 TD	TRW MY 97 Air Bag (2F-2P-2L-S)	✓	✓	✓	✓		
LANCIA	K	2.4 TD	TRW MY 97 Air Bag (2F-2P-S)	✓	✓	✓	✓		
LANCIA	K	3	Bosch 5.3 ABS	✓	✓	✓			
LANCIA	K	3	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓		
LANCIA	K	3	TRW MY 97 Air Bag (2F-2P-2L-S)	✓	✓	✓	✓		
LANCIA	K	3	TRW MY 97 Air Bag (2F-2P-S)	✓	✓	✓	✓		
LANCIA	LYBRA	1.6	Allied Airbag MY 97 (2F-2P-2L-2T-1)	✓	✓	✓	✓		
LANCIA	LYBRA	1.6	Allied MY 97 Air Bag (2F-2P-2L-1-S)	✓	✓	✓	✓		
LANCIA	LYBRA	1.6	Allied MY 97 Airbag (2F-2P-2L-1)	✓	✓	✓	✓		
LANCIA	LYBRA	1.6	Allied MY 97 Airbag (2F-2P-1)	✓	✓	✓	✓		
LANCIA	LYBRA	1.6	Marelli Code 2 Electronic Key	✓	✓	✓	✓		
LANCIA	LYBRA	1.6	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓		
LANCIA	LYBRA	1.6	Allied MY97 Airbag (2F-2P-1-S)	✓	✓	✓	✓		
LANCIA	LYBRA	1.6	Injection - Magneti Marelli IAW 4AF/4EF/59F/5AF Outside EEC	✓	✓	✓	✓		
LANCIA	LYBRA	1.6	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
LANCIA	LYBRA	1.6	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
LANCIA	LYBRA	1.6	Bosch 5.3 ABS	✓	✓	✓			
LANCIA	LYBRA	1.6	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓			
LANCIA	LYBRA	1.6	TRW Lucas ABS	✓	✓	✓	✓		
LANCIA	LYBRA	1.6	Magneti Marelli IAW 4AF/4EF/59F/5AF EOBD Injection	✓	✓	✓	✓		
LANCIA	LYBRA	1.6	Magneti Marelli IAW 49F Injection (1.6 Eng.)	✓	✓	✓	✓		
LANCIA	LYBRA	1.6	ESP TRW Lucas ABS	✓	✓	✓	✓		
LANCIA	LYBRA	1.8	Allied Airbag MY 97 (2F-2P-2L-2T-1)	✓	✓	✓	✓		
LANCIA	LYBRA	1.8	Allied MY 97 Air Bag (2F-2P-2L-1-S)	✓	✓	✓	✓		
LANCIA	LYBRA	1.8	Allied MY 97 Airbag (2F-2P-2L-1)	✓	✓	✓	✓		
LANCIA	LYBRA	1.8	Allied MY 97 Airbag (2F-2P-1)	✓	✓	✓	✓		
LANCIA	LYBRA	1.8	Marelli Code 2 Electronic Key	✓	✓	✓	✓		
LANCIA	LYBRA	1.8	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓		
LANCIA	LYBRA	1.8	Allied MY97 Airbag (2F-2P-1-S)	✓	✓	✓	✓		
LANCIA	LYBRA	1.8	Hitachi MPI Injection (Eng. 1.8 16V '98)	✓	✓	✓	✓		
LANCIA	LYBRA	1.8	Hitachi EOBD Injection	✓	✓	✓	✓		
LANCIA	LYBRA	1.8	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
LANCIA	LYBRA	1.8	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
LANCIA	LYBRA	1.8	Bosch 5.3 ABS	✓	✓	✓			
LANCIA	LYBRA	1.8	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓			
LANCIA	LYBRA	1.8	TRW Lucas ABS	✓	✓	✓	✓		
LANCIA	LYBRA	1.8	ESP TRW Lucas ABS	✓	✓	✓	✓		
LANCIA	LYBRA	1.9 JTD	Allied Airbag MY 97 (2F-2P-2L-2T-1)	✓	✓	✓	✓		
LANCIA	LYBRA	1.9 JTD	Allied MY 97 Air Bag (2F-2P-2L-1-S)	✓	✓	✓	✓		

LANCIA	LYBRA	1.9 JTD	Allied MY 97 Airbag (2F-2P-2L-I)	✓	✓	✓	✓		
LANCIA	LYBRA	1.9 JTD	Allied MY 97 Airbag (2F-2P-I)	✓	✓	✓	✓		
LANCIA	LYBRA	1.9 JTD	Marelli Code 2 Electronic Key	✓	✓	✓	✓		
LANCIA	LYBRA	1.9 JTD	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓		
LANCIA	LYBRA	1.9 JTD	Allied MY97 Airbag (2F-2P-I-S)	✓	✓	✓	✓		
LANCIA	LYBRA	1.9 JTD	Bosch Diesel EDC 15 Injection (1.9 TD D.I. Engine)	✓	✓	✓	✓		
LANCIA	LYBRA	1.9 JTD	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
LANCIA	LYBRA	1.9 JTD	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
LANCIA	LYBRA	1.9 JTD	Bosch EDC15 CF3/E0BD Diesel Injection (Eng. 1.9/2.4)	✓	✓	✓	✓		
LANCIA	LYBRA	1.9 JTD	Bosch 5.3 ABS	✓	✓	✓			
LANCIA	LYBRA	1.9 JTD	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓			
LANCIA	LYBRA	1.9 JTD	TRW Lucas ABS	✓	✓	✓	✓		
LANCIA	LYBRA	1.9 JTD	ESP TRW Lucas ABS	✓	✓	✓	✓		
LANCIA	LYBRA	2	Allied Airbag MY 97 (2F-2P-2L-2T-I)	✓	✓	✓	✓		
LANCIA	LYBRA	2	Allied MY 97 Air Bag (2F-2P-2L-I-S)	✓	✓	✓	✓		
LANCIA	LYBRA	2	Allied MY 97 Airbag (2F-2P-2L-I)	✓	✓	✓	✓		
LANCIA	LYBRA	2	Marelli Code 2 Electronic Key	✓	✓	✓	✓		
LANCIA	LYBRA	2	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓		
LANCIA	LYBRA	2	Allied MY97 Airbag (2F-2P-I-S)	✓	✓	✓	✓		
LANCIA	LYBRA	2	Injection-Bosch Motronic Me3.1 (Eng. 2.0/2.4 20V Outside EEC)	✓	✓	✓	✓		
LANCIA	LYBRA	2	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
LANCIA	LYBRA	2	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
LANCIA	LYBRA	2	Bosch Motronic Me3.1 E0BD Injection (Eng. 2.0/2.4 20V)	✓	✓	✓	✓		
LANCIA	LYBRA	2	Bosch 5.3 ABS	✓	✓	✓			
LANCIA	LYBRA	2	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓			
LANCIA	LYBRA	2	TRW Lucas ABS	✓	✓	✓	✓		
LANCIA	LYBRA	2	ESP TRW Lucas ABS	✓	✓	✓	✓		
LANCIA	LYBRA	2	Allied MY 97 Airbag (2F-2P-I)	✓	✓	✓	✓		
LANCIA	LYBRA	2.4 JTD	Allied Airbag MY 97 (2F-2P-2L-2T-I)	✓	✓	✓	✓		
LANCIA	LYBRA	2.4 JTD	Allied MY 97 Air Bag (2F-2P-2L-I-S)	✓	✓	✓	✓		
LANCIA	LYBRA	2.4 JTD	Allied MY 97 Airbag (2F-2P-2L-I)	✓	✓	✓	✓		
LANCIA	LYBRA	2.4 JTD	Allied MY 97 Airbag (2F-2P-I)	✓	✓	✓	✓		
LANCIA	LYBRA	2.4 JTD	Marelli Code 2 Electronic Key	✓	✓	✓	✓		
LANCIA	LYBRA	2.4 JTD	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓		
LANCIA	LYBRA	2.4 JTD	Allied MY97 Airbag (2F-2P-I-S)	✓	✓	✓	✓		
LANCIA	LYBRA	2.4 JTD	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
LANCIA	LYBRA	2.4 JTD	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
LANCIA	LYBRA	2.4 JTD	Bosch EDC15 Diesel Injection (2.4 TD D.I. Eng.)	✓	✓	✓	✓		
LANCIA	LYBRA	2.4 JTD	Bosch EDC15 CF3/E0BD Diesel Injection (Eng. 1.9/2.4)	✓	✓	✓	✓		
LANCIA	LYBRA	2.4 JTD	Bosch 5.3 ABS	✓	✓	✓			
LANCIA	LYBRA	2.4 JTD	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓			
LANCIA	LYBRA	2.4 JTD	TRW Lucas ABS	✓	✓	✓	✓		
LANCIA	LYBRA	2.4 JTD	ESP TRW Lucas ABS	✓	✓	✓	✓		
LANCIA	MUSA	1.3 JTD	Automatic Gearbox Marelli SELESPEED CFC308F	✓	✓	✓	✓		
LANCIA	MUSA	1.3 JTD	Marelli 6JF E0BD Diesel Injection (Eng. 1.3 JTD)	✓	✓	✓	✓		
LANCIA	MUSA	1.3 JTD	Marelli Automatic Gearbox SELESPEED CFC208F (1)	✓	✓	✓	✓		
LANCIA	MUSA	1.3 JTD	Marelli Diesel Injection 8DF CF5/E0BD (Eng. 1.3 JTD)	✓	✓	✓	✓		
LANCIA	MUSA	1.3 JTD	Marelli Diesel Injection 6F3 E0BD (Eng. 1.3 JTD)	✓	✓	✓	✓		
LANCIA	MUSA	1.3 JTD	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.3 JTD	Marelli Instrument Panel (ComFort)	✓	✓	✓	✓	✓	

LANCIA	MUSA	1.3 JTD	Marelli Instrument Panel (Modal)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.3 JTD	Bosch 8 ABS	✓	✓	✓	✓		
LANCIA	MUSA	1.3 JTD	Bosch 8 VDC ABS	✓	✓	✓	✓		
LANCIA	MUSA	1.3 JTD	Marelli 7 Body Computer	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.3 JTD	Marelli Body Computer 1	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.3 JTD	TRW MY 03 Airbag (2F-2P-I)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.3 JTD	TRW MY 03 Airbag (2F-2P-2T-I)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.3 JTD	TRW MY 03 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.3 JTD	Denso Climate Control 1 (Two-Zone)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.3 JTD	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.3 JTD	TRW 1 Power Steering	✓	✓	✓	✓		
LANCIA	MUSA	1.3 JTD	TRW3 Electric Steering	✓	✓	✓	✓		
LANCIA	MUSA	1.3 JTD	G.E. PROCOND Boot	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.3 JTD	G.E. PROCOND Driver's Door	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.3 JTD	Single Driver's Door G.E. PROCOND	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.3 JTD	G.E. PROCOND Passenger Door	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.3 JTD	Valeo Parking Control Unit	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.3 JTD	Single Bitron Driver's Door	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 16V	Bosch Motronic Injection Me7.9.10 CF5/EOBD (Eng. 1.4)	✓	✓	✓	✓		
LANCIA	MUSA	1.4 16V	Bosch Motronic ME7.3H4M EOBD Injection	✓	✓	✓	✓		
LANCIA	MUSA	1.4 16V	Marelli SELESPEED CFC228F Automatic Gearbox	✓	✓	✓	✓		
LANCIA	MUSA	1.4 16V	Marelli SELESPEED CFC328 Automatic Gearbox	✓	✓	✓	✓		
LANCIA	MUSA	1.4 16V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 16V	Marelli Instrument Panel (Comfort)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 16V	Marelli Instrument Panel (Modal)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 16V	Bosch 8 ABS	✓	✓	✓	✓		
LANCIA	MUSA	1.4 16V	Bosch 8 VDC ABS	✓	✓	✓	✓		
LANCIA	MUSA	1.4 16V	Marelli 7 Body Computer	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 16V	Marelli Body Computer 1	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 16V	TRW MY 03 Airbag (2F-2P-I)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 16V	TRW MY 03 Airbag (2F-2P-2T-I)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 16V	TRW MY 03 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 16V	Denso Climate Control 1 (Two-Zone)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 16V	TRW 1 Power Steering	✓	✓	✓	✓		
LANCIA	MUSA	1.4 16V	TRW3 Electric Steering	✓	✓	✓	✓		
LANCIA	MUSA	1.4 16V	G.E. PROCOND Boot	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 16V	G.E. PROCOND Driver's Door	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 16V	Single Driver's Door G.E. PROCOND	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 16V	G.E. PROCOND Passenger Door	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 16V	Valeo Parking Control Unit	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 16V	Single Bitron Driver's Door	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 8V	Injection Landi Renzo LC02 Gas	✓	✓	✓	✓		
LANCIA	MUSA	1.4 8V	Magneti Marelli Injection IAW 5SF CF4/EOBD (Eng. 1.4 8V)	✓	✓	✓	✓		
LANCIA	MUSA	1.4 8V	Magneti Marelli Injection 5SF8 / SDU CF5/EOBD LPG	✓	✓	✓	✓		
LANCIA	MUSA	1.4 8V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 8V	Marelli Instrument Panel (Comfort)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 8V	Marelli Instrument Panel (Modal)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 8V	Bosch 8 ABS	✓	✓	✓	✓		
LANCIA	MUSA	1.4 8V	Bosch 8 VDC ABS	✓	✓	✓	✓		
LANCIA	MUSA	1.4 8V	Marelli 7 Body Computer	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 8V	Marelli Body Computer 1	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 8V	TRW MY 03 Airbag (2F-2P-I)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 8V	TRW MY 03 Airbag (2F-2P-2T-I)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 8V	TRW MY 03 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 8V	Denso Climate Control 1 (Two-Zone)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 8V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 8V	TRW 1 Power Steering	✓	✓	✓	✓		

LANCIA	MUSA	1.4 8V	TRW3 Electric Steering	✓	✓	✓	✓		
LANCIA	MUSA	1.4 8V	G.E. PROCOND Boot	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 8V	G.E. PROCOND Driver's Door	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 8V	Single Driver's Door G.E. PROCOND	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 8V	G.E. PROCOND Passenger Door	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.4 8V	Valeo Parking Control Unit	✓	✓	✓	✓		
LANCIA	MUSA	1.6 MJET 16V	Bosch Diese Injection EDC16C39 CF5/EOBD (1.6/1.9/2.0 Eng)	✓	✓	✓	✓		
LANCIA	MUSA	1.6 MJET 16V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.6 MJET 16V	Marelli Instrument Panel (Comfort)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.6 MJET 16V	Marelli Instrument Panel (Modal)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.6 MJET 16V	Bosch 8 ABS	✓	✓	✓	✓		
LANCIA	MUSA	1.6 MJET 16V	Bosch 8 VDC ABS	✓	✓	✓	✓		
LANCIA	MUSA	1.6 MJET 16V	Marelli Body Computer	✓	✓	✓	✓		
LANCIA	MUSA	1.6 MJET 16V	TRW MY 03 Airbag (2F-2P-I)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.6 MJET 16V	TRW MY 03 Airbag (2F-2P-2T-I)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.6 MJET 16V	TRW MY 03 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.6 MJET 16V	Denso Climate Control 1 (Two-Zone)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.6 MJET 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.6 MJET 16V	TRW 1 Power Steering	✓	✓	✓	✓		
LANCIA	MUSA	1.6 MJET 16V	TRW3 Electric Steering	✓	✓	✓	✓		
LANCIA	MUSA	1.6 MJET 16V	G.E. PROCOND Boot	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.6 MJET 16V	G.E. PROCOND Driver's Door	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.6 MJET 16V	Single Driver's Door G.E. PROCOND	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.6 MJET 16V	G.E. PROCOND Passenger Door	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.6 MJET 16V	Valeo Parking Control Unit	✓	✓	✓	✓		
LANCIA	MUSA	1.9 JTD	Bosch EDC16C9 CF3/EOBD Diesel Injection (1.9 Eng.)	✓	✓	✓	✓		
LANCIA	MUSA	1.9 JTD	Bosch EDC16C9 CF4/EOBD Diesel Injection (1.9 Eng.)	✓	✓	✓	✓		
LANCIA	MUSA	1.9 JTD	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.9 JTD	Marelli Instrument Panel (Comfort)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.9 JTD	Marelli Instrument Panel (Modal)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.9 JTD	Bosch 8 ABS	✓	✓	✓	✓		
LANCIA	MUSA	1.9 JTD	Bosch 8 VDC ABS	✓	✓	✓	✓		
LANCIA	MUSA	1.9 JTD	Marelli 7 Body Computer	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.9 JTD	Marelli Body Computer 1	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.9 JTD	TRW MY 03 Airbag (2F-2P-I)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.9 JTD	TRW MY 03 Airbag (2F-2P-2T-I)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.9 JTD	TRW MY 03 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.9 JTD	Denso Climate Control 1 (Two-Zone)	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.9 JTD	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.9 JTD	TRW 1 Power Steering	✓	✓	✓	✓		
LANCIA	MUSA	1.9 JTD	TRW3 Electric Steering	✓	✓	✓	✓		
LANCIA	MUSA	1.9 JTD	G.E. PROCOND Boot	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.9 JTD	G.E. PROCOND Driver's Door	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.9 JTD	Single Driver's Door G.E. PROCOND	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.9 JTD	G.E. PROCOND Passenger Door	✓	✓	✓	✓	✓	
LANCIA	MUSA	1.9 JTD	Valeo Parking Control Unit	✓	✓	✓	✓		
LANCIA	MUSA	1.9 JTD	Single Bitron Driver's Door	✓	✓	✓	✓	✓	
LANCIA	PHEDRA	2.0 16V	Magneti Marelli MM4MP2 PSA Injection	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 16V	Magneti Marelli MM6LP PSA Injection	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 16V	Siemens AL4 TA2000 V PSA Automatic Gearbox	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 16V	Marelli DAV PSA Connect Control	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 16V	Marelli Odometer W. Lamps (BTO)	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 16V	Marelli PSA Connect	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 16V	Marelli PSA Instrument Panel	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 16V	Sagem Multi-Function Screen	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 16V	Bosch 5.7 ESP PSA ABS	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 16V	Bitron PSA Driver's Seat	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 16V	Clarion CD Changer	✓	✓	✓	✓		

LANCIA	PHEDRA	2.0 16V	Clarion/Philips Sound System	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 16V	Marelli PSA Climate Control	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 16V	Eaton Multi-Switch Stalk Unit (COM2000)	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 16V	Inalfa Central Sunroof	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 16V	Inalfa Front Sunroof	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 16V	Inalfa Rear Sunroof	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 16V	Marelli PSA Driver's Door	✓			✓		
LANCIA	PHEDRA	2.0 16V	Marelli PSA Passenger's Door	✓			✓		
LANCIA	PHEDRA	2.0 16V	Valeo PSA Parking Control Unit	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 16V	Valeo PSA Discharge Headlamp (LH)	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 16V	Valeo PSA Discharge Headlamp (RH)	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 16V	Texton Sliding Doors	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 JTD 16V	Bosch EDC15 PSA Diesel Injection (Eng. 16V)	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 JTD 16V	Siemens AL4 TA2000 V PSA Automatic Gearbox	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 JTD 16V	Marelli DAV PSA Connect Control	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 JTD 16V	Marelli Odometer W. Lamps (BTO)	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 JTD 16V	Marelli PSA Connect	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 JTD 16V	Marelli PSA Instrument Panel	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 JTD 16V	Sagem Multi-Function Screen	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 JTD 16V	Bosch 5.7 ESP PSA ABS	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 JTD 16V	Bitron PSA Driver's Seat	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 JTD 16V	Clarion CD Changer	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 JTD 16V	Clarion/Philips Sound System	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 JTD 16V	Marelli PSA Climate Control	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 JTD 16V	WEBASTO Heater (PSA)	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 JTD 16V	Eaton Multi-Switch Stalk Unit (COM2000)	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 JTD 16V	Inalfa Central Sunroof	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 JTD 16V	Inalfa Front Sunroof	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 JTD 16V	Inalfa Rear Sunroof	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 JTD 16V	Marelli Diesel Additive Check	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 JTD 16V	Marelli PSA Driver's Door	✓			✓		
LANCIA	PHEDRA	2.0 JTD 16V	Marelli PSA Passenger's Door	✓			✓		
LANCIA	PHEDRA	2.0 JTD 16V	Valeo PSA Parking Control Unit	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 JTD 16V	Valeo PSA Discharge Headlamp (LH)	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 JTD 16V	Valeo PSA Discharge Headlamp (RH)	✓	✓	✓	✓		
LANCIA	PHEDRA	2.0 JTD 16V	Texton Sliding Doors	✓	✓	✓	✓		
LANCIA	PHEDRA	2.2 JTD 16V	Bosch EDC15 PSA Diesel Injection (Eng. 16V)	✓	✓	✓	✓		
LANCIA	PHEDRA	2.2 JTD 16V	Marelli DAV PSA Connect Control	✓	✓	✓	✓		
LANCIA	PHEDRA	2.2 JTD 16V	Marelli Odometer W. Lamps (BTO)	✓	✓	✓	✓		
LANCIA	PHEDRA	2.2 JTD 16V	Marelli PSA Connect	✓	✓	✓	✓		
LANCIA	PHEDRA	2.2 JTD 16V	Marelli PSA Instrument Panel	✓	✓	✓	✓		
LANCIA	PHEDRA	2.2 JTD 16V	Sagem Multi-Function Screen	✓	✓	✓	✓		
LANCIA	PHEDRA	2.2 JTD 16V	Bosch 5.7 ESP PSA ABS	✓	✓	✓	✓		
LANCIA	PHEDRA	2.2 JTD 16V	Bitron PSA Driver's Seat	✓	✓	✓	✓		
LANCIA	PHEDRA	2.2 JTD 16V	Clarion CD Changer	✓	✓	✓	✓		
LANCIA	PHEDRA	2.2 JTD 16V	Clarion/Philips Sound System	✓	✓	✓	✓		
LANCIA	PHEDRA	2.2 JTD 16V	Marelli PSA Climate Control	✓	✓	✓	✓		
LANCIA	PHEDRA	2.2 JTD 16V	WEBASTO Heater (PSA)	✓	✓	✓	✓		
LANCIA	PHEDRA	2.2 JTD 16V	Eaton Multi-Switch Stalk Unit (COM2000)	✓	✓	✓	✓		
LANCIA	PHEDRA	2.2 JTD 16V	Inalfa Central Sunroof	✓	✓	✓	✓		
LANCIA	PHEDRA	2.2 JTD 16V	Inalfa Front Sunroof	✓	✓	✓	✓		
LANCIA	PHEDRA	2.2 JTD 16V	Inalfa Rear Sunroof	✓	✓	✓	✓		
LANCIA	PHEDRA	2.2 JTD 16V	Marelli Diesel Additive Check	✓	✓	✓	✓		
LANCIA	PHEDRA	2.2 JTD 16V	Marelli PSA Driver's Door	✓			✓		
LANCIA	PHEDRA	2.2 JTD 16V	Marelli PSA Passenger's Door	✓			✓		
LANCIA	PHEDRA	2.2 JTD 16V	Valeo PSA Parking Control Unit	✓	✓	✓	✓		
LANCIA	PHEDRA	2.2 JTD 16V	Valeo PSA Discharge Headlamp (LH)	✓	✓	✓	✓		
LANCIA	PHEDRA	2.2 JTD 16V	Valeo PSA Discharge Headlamp (RH)	✓	✓	✓	✓		
LANCIA	PHEDRA	2.2 JTD 16V	Texton Sliding Doors	✓	✓	✓	✓		
LANCIA	PHEDRA	3.0 V6 24V	Bosch Motronic Me7.4.6 PSA Injection	✓	✓	✓	✓		
LANCIA	PHEDRA	3.0 V6 24V	ZF 4HP20 PSA Automatic Gearbox	✓	✓	✓	✓		

LANCIA	PHEDRA	3.0 V6 24V	Marelli DAV PSA Connect Control	✓	✓	✓	✓		
LANCIA	PHEDRA	3.0 V6 24V	Marelli Odometer W. Lamps (BTO)	✓	✓	✓	✓		
LANCIA	PHEDRA	3.0 V6 24V	Marelli PSA Connect	✓	✓	✓	✓		
LANCIA	PHEDRA	3.0 V6 24V	Marelli PSA Instrument Panel	✓	✓	✓	✓		
LANCIA	PHEDRA	3.0 V6 24V	Sagem Multi-Function Screen	✓	✓	✓	✓		
LANCIA	PHEDRA	3.0 V6 24V	Bosch 5.7 ESP PSA ABS	✓	✓	✓	✓		
LANCIA	PHEDRA	3.0 V6 24V	Bitron PSA Driver's Seat	✓	✓	✓	✓		
LANCIA	PHEDRA	3.0 V6 24V	Clarion CD Changer	✓	✓	✓	✓		
LANCIA	PHEDRA	3.0 V6 24V	Clarion/Philips Sound System	✓	✓	✓	✓		
LANCIA	PHEDRA	3.0 V6 24V	Marelli PSA Climate Control	✓	✓	✓	✓		
LANCIA	PHEDRA	3.0 V6 24V	Eaton Multi-Switch Stalk Unit (COM2000)	✓	✓	✓	✓		
LANCIA	PHEDRA	3.0 V6 24V	Inalfa Central Sunroof	✓	✓	✓	✓		
LANCIA	PHEDRA	3.0 V6 24V	Inalfa Front Sunroof	✓	✓	✓	✓		
LANCIA	PHEDRA	3.0 V6 24V	Inalfa Rear Sunroof	✓	✓	✓	✓		
LANCIA	PHEDRA	3.0 V6 24V	Marelli PSA Driver's Door	✓			✓		
LANCIA	PHEDRA	3.0 V6 24V	Marelli PSA Passenger's Door	✓			✓		
LANCIA	PHEDRA	3.0 V6 24V	Valeo PSA Parking Control Unit	✓	✓	✓	✓		
LANCIA	PHEDRA	3.0 V6 24V	Valeo PSA Discharge Headlamp (LH)	✓	✓	✓	✓		
LANCIA	PHEDRA	3.0 V6 24V	Valeo PSA Discharge Headlamp (RH)	✓	✓	✓	✓		
LANCIA	PHEDRA	3.0 V6 24V	Texton Sliding Doors	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	Bosch EDC15 PSA Diesel Injection (Eng. 16V)	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	Siemens AL4 TA2000 V PSA Automatic Gearbox	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	Siemens Diesel Injection SID803 CF4/EOBD (Eng. 16V)	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	Johnson/Borg Multi-Function Screen	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	Marelli Connect PSA RT5 (CAN)	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	Siemens Diesel Injection SID803 CF4/EOBD (Eng. 16V)	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.0 JTD 16V	PSA Marelli Cluster (CAN)	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.0 JTD 16V	PSA Marelli Connect (CAN)	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.0 JTD 16V	PSA DAV Connect Command (CAN)	✓			✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	Bosch ABS 8.1 ESP PSA (CAN)	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	BOSCH/TEMIC Airbag (CAN)	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	Delphi Alarm	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	PSA Bosch ABS 8 ESP (CAN)	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	Johnson EV Body Computer (BSI CAN) 2	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	Blaupunkt Radio	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	Bosch Luminosity/Rain Sensor	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	Clarion CD Magazine (CAN)	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	HERMAN BECKER Navigator Auto Radio	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	WEBASTO Heater (PSA)	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	PSA Denso Climate Control (CAN)	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.0 JTD 16V	HPI Power Steering	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	Brose Driver's Door	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.0 JTD 16V	Brose Passenger Door	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.0 JTD 16V	Delphi Multi-Function Switch (COM2005)	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.0 JTD 16V	Delphi Multi-Switch (COM2003)	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.0 JTD 16V	Marelli Diesel Additive Control (CAN)	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	Siemens Tyre Pressure Control	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	Valeo PSA Discharge Headlamp (LH)	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	Valeo PSA Discharge Headlamp (RH)	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	Texton Sliding Doors (CAN)	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.0 JTD 16V	PSA Valeo Parking Control Unit (CAN)	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.0 JTD 16V	Inalfa Rear Sunroof (CAN)	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	Inalfa Front Sunroof (CAN)	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.0 JTD 16V	Inalfa Centre Sunroof (CAN)	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.2 JTD 16V	AISIN AM6 Automatic Gearbox	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.2 JTD 16V	Bosch Diesel Injection EDC16CP39 CF4/EOBD (2.2 Eng.)	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.2 JTD 16V	Bosch EDC15 PSA Diesel Injection (Eng. 16V)	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.2 JTD 16V	Johnson/Borg Multi-Function Screen	✓	✓	✓	✓		

LANCIA	PHEDRA (180)	2.2 JTD 16V	Marelli Connect PSA RT5 (CAN)	✓	✓	✓	✓		
LANCIA	PHEDRA (180)	2.2 JTD 16V	Siemens Diesel Injection SID803 CF4/EOBD (Eng. 16V)	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.2 JTD 16V	PSA Marelli Cluster (CAN)	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.2 JTD 16V	PSA Marelli Connect (CAN)	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.2 JTD 16V	PSA DAV Connect Command (CAN)	✓				✓	
LANCIA	PHEDRA (180)	2.2 JTD 16V	Bosch ABS 8.1 ESP PSA (CAN)	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.2 JTD 16V	BOSCH/TEMIC Airbag (CAN)	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.2 JTD 16V	Delphi Alarm	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.2 JTD 16V	PSA Bosch ABS 8 ESP (CAN)	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.2 JTD 16V	Johnson EV Body Computer (BSI CAN) 2	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.2 JTD 16V	Blaupunkt Radio	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.2 JTD 16V	Bosch Luminosity/Rain Sensor	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.2 JTD 16V	Clarion CD Magazine (CAN)	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.2 JTD 16V	HERMAN BECKER Navigator Auto Radio	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.2 JTD 16V	WEBASTO Heater (PSA)	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.2 JTD 16V	PSA Denso Climate Control (CAN)	✓	✓	✓	✓	✓	✓
LANCIA	PHEDRA (180)	2.2 JTD 16V	HPI Power Steering	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.2 JTD 16V	Brose Driver's Door	✓	✓	✓	✓	✓	✓
LANCIA	PHEDRA (180)	2.2 JTD 16V	Brose Passenger Door	✓	✓	✓	✓	✓	✓
LANCIA	PHEDRA (180)	2.2 JTD 16V	Delphi Multi-Switch (COM2003)	✓	✓	✓	✓	✓	✓
LANCIA	PHEDRA (180)	2.2 JTD 16V	Inalfa Centre Sunroof (CAN)	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.2 JTD 16V	Marelli Diesel Additive Control (CAN)	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.2 JTD 16V	Siemens Tyre Pressure Control	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.2 JTD 16V	Valeo PSA Discharge Headlamp (LH)	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.2 JTD 16V	Valeo PSA Discharge Headlamp (RH)	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.2 JTD 16V	Texton Sliding Doors (CAN)	✓	✓	✓	✓	✓	✓
LANCIA	PHEDRA (180)	2.2 JTD 16V	PSA Valeo Parking Control Unit (CAN)	✓	✓	✓	✓	✓	✓
LANCIA	PHEDRA (180)	2.2 JTD 16V	Inalfa Rear Sunroof (CAN)	✓	✓	✓	✓	✓	
LANCIA	PHEDRA (180)	2.2 JTD 16V	Inalfa Front Sunroof (CAN)	✓	✓	✓	✓	✓	
LANCIA	RENEGADE	2014	ECM (Engine Control Module)	✓	✓	✓	✓	✓	sp02593, sp02594, sp02595, sp02596, sp02597, sp02598, sp02599, sp02600, sp02601, sp02602, sp02603, sp02604, sp02605, sp02606, sp02607, sp02608, sp02609, sp02610, sp02611, sp02612, sp02613, sp02614, sp02615, sp02616
LANCIA	RENEGADE	2014	TCM (Transmission Control Module)	✓	✓	✓	✓	✓	sp02617
LANCIA	RENEGADE	2014	ABS (Anti Lock Brakes)	✓	✓	✓	✓	✓	sp02618, sp02619, sp02620
LANCIA	RENEGADE	2014	ORC (Occupant Restraint)	✓	✓	✓	✓	✓	
LANCIA	RENEGADE	2014	TTM (Trailer Tow Module)	✓	✓	✓	✓	✓	
LANCIA	RENEGADE	2014	RRM (Radio Receiver Module)	✓	✓	✓	✓	✓	sp02621, sp02622, sp02623
LANCIA	RENEGADE	2014	RFH (Radio Frequency Hub)	✓	✓	✓	✓	✓	sp02624, sp02625
LANCIA	RENEGADE	2014	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓	✓	
LANCIA	RENEGADE	2014	PCM (Powertrain Control Module)	✓	✓	✓	✓	✓	sp02626, sp02627, sp02628, sp02629, sp02630, sp02631, sp02632, sp02633, sp02634, sp02635
LANCIA	RENEGADE	2014	PAM (Parking Aid Module)	✓	✓	✓	✓	✓	sp02636, sp02637
LANCIA	RENEGADE	2014	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓	✓	
LANCIA	RENEGADE	2014	IPC (Instrument Panel Cluster)	✓	✓	✓	✓	✓	sp02638, sp02639, sp02640, sp02641, sp02642
LANCIA	RENEGADE	2014	HVAC (Heat, Ventilation And A/C)	✓	✓	✓	✓	✓	sp02643
LANCIA	RENEGADE	2014	HALF (Haptical Lane Feedback)	✓	✓	✓	✓	✓	sp02644
LANCIA	RENEGADE	2014	ETM (Entertainment Telematic Module)	✓	✓	✓	✓	✓	
LANCIA	RENEGADE	2014	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	sp02645, sp02646
LANCIA	RENEGADE	2014	ESL (Electronic Steering Lock)	✓	✓	✓	✓	✓	
LANCIA	RENEGADE	2014	EPS (Electric Power Steering)	✓	✓	✓	✓	✓	sp02647
LANCIA	RENEGADE	2014	DTCM (Drive Train Control Module)	✓	✓	✓	✓	✓	sp02648, sp02649
LANCIA	RENEGADE	2014	CSWM (Comfort Seat Wheel Module)	✓	✓	✓	✓	✓	sp02650
LANCIA	RENEGADE	2014	BCM (Body Control Module)	✓	✓	✓	✓	✓	✓
LANCIA	RENEGADE	2014	AMP (Amplifier)	✓	✓	✓	✓	✓	
LANCIA	RENEGADE	2014	ACC (Adaptive Cruise Control)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	PCM (Powertrain Control Module)	✓	✓	✓	✓	✓	sp02651, sp02652, sp02653, sp02654, sp02655, sp02656, sp02657, sp02658, sp02659, sp02660, sp02661
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	TCM (Transmission Control Module)	✓	✓	✓	✓	✓	sp02662, sp02663

LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	ABS (Anti-Lock Braking System)	✓	✓	✓	✓	✓	sp02664, sp02665
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	SRS (Supplemental Inflatable Restraint System, ORC)	✓	✓	✓	✓		sp02666
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	BCM (Body Control Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	sp02667, sp02668, sp02669, sp02670, sp02671
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	RFH (Radio Frequency Hub)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	HSM (Heated Seat Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	ICS (Integrated Center Stack)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	HVAC (Heat, Ventilation And A/C)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	Parking Electronic Module (PTS)	✓	✓	✓	✓		sp02672
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	TPM (Tire Pressure Monitor)	✓	✓	✓	✓		sp02673
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	SCCM (Steering Column Control Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	DDM (Driver Door Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	MSM (Memory Seat Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	FFCM (Forward Facing Camera Module)	✓	✓	✓	✓		sp02674
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	ADCM (Active Damping Control Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	EPS (Electric Power Steering)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	AMP (Amplifier)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	DTCM (Drive Train Control Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	IPC (Instrument Panel Cluster)	✓	✓	✓	✓	✓	sp02675
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	RADIO (RADIO)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	ACC (Adaptive Cruise Control)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	ITM (Intrusion)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓	✓	sp02676
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2022	PDM (Passenger Door Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	PCM (Powertrain Control Module)	✓	✓	✓	✓		sp02677, sp02678, sp02679, sp02680, sp02681, sp02682, sp02683, sp02684, sp02685, sp02686, sp02687
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	TCM (Transmission Control Module)	✓	✓	✓	✓		sp02688, sp02689
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	ABS (Anti-Lock Braking System)	✓	✓	✓	✓	✓	sp02690, sp02691
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	SRS (Supplemental Inflatable Restraint System, ORC)	✓	✓	✓	✓		sp02692

LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	BCM (Body Control Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	sp02693, sp02694, sp02695, sp02696, sp02697
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	RFH (Radio Frequency Hub)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	HSM (Heated Seat Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	ICS (Integrated Center Stack)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	HVAC (Heat, Ventilation And A/C)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	Parking Electronic Module(PTS)	✓	✓	✓	✓		sp02698
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	TPM (Tire Pressure Monitor)	✓	✓	✓	✓		sp02699
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	SCCM (Steering Column Control Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	DDM (Driver Door Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	MSM (Memory Seat Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	FFCM (Forward Facing Camera Module)	✓	✓	✓	✓		sp02700
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	ADCM (Active Damping Control Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	EPS (Electric Power Steering)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	AMP (Amplifier)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	DTCM (Drive Train Control Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	IPC (Instrument Panel Cluster)	✓	✓	✓	✓	✓	sp02701
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	RADIO (RADIO)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	ACC (Adaptive Cruise Control)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	ITM (Intrusion)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓	✓	sp02702
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2021	PDM (Passenger Door Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	PCM (Powertrain Control Module)	✓	✓	✓	✓		sp02703, sp02704, sp02705, sp02706, sp02707, sp02708, sp02709, sp02710, sp02711, sp02712, sp02713
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	TCM (Transmission Control Module)	✓	✓	✓	✓		sp02714, sp02715
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	ABS (Anti-Lock Braking System)	✓	✓	✓	✓	✓	sp02716, sp02717
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	SRS (Supplemental Inflatable Restraint System, ORC)	✓	✓	✓	✓		sp02718
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	BCM (Body Control Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	sp02719, sp02720, sp02721, sp02722, sp02723

LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	RFH (Radio Frequency Hub)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	HSM (Heated Seat Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	ICS (Integrated Center Stack)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	HVAC (Heat, Ventilation And A/C)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	Parking Electronic Module(PTS)	✓	✓	✓	✓		sp02724
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	TPM (Tire Pressure Monitor)	✓	✓	✓	✓		sp02725
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	SCCM (Steering Column Control Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	DDM (Driver Door Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	MSM (Memory Seat Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	FFCM (Forward Facing Camera Module)	✓	✓	✓	✓		sp02726
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	ADCM (Active Damping Control Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	EPS (Electric Power Steering)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	AMP (Amplifier)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	DTCM (Drive Train Control Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	IPC (Instrument Panel Cluster)	✓	✓	✓	✓	✓	sp02727
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	RADIO (RADIO)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	ACC (Adaptive Cruise Control)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	ITM (Intrusion)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓	✓	sp02728
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2020	PDM (Passenger Door Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	PCM (Powertrain Control Module)	✓	✓	✓	✓		sp02729, sp02730, sp02731, sp02732, sp02733, sp02734, sp02735, sp02736, sp02737, sp02738, sp02739
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	TCM (Transmission Control Module)	✓	✓	✓	✓		sp02740, sp02741
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	ABS (Anti-Lock Braking System)	✓	✓	✓	✓	✓	sp02742, sp02743
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	SRS (Supplemental Inflatable Restraint System, ORC)	✓	✓	✓	✓		sp02744
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	BCM (Body Control Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	sp02745, sp02746, sp02747, sp02748, sp02749
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	RFH (Radio Frequency Hub)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	HSM (Heated Seat Module)	✓	✓	✓	✓	✓	

LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	ICS (Integrated Center Stack)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	HVAC (Heat, Ventilation And A/C)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	Parking Electronic Module(PTS)	✓	✓	✓	✓		sp02750
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	TPM (Tire Pressure Monitor)	✓	✓	✓	✓		sp02751
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	SCCM (Steering Column Control Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	DDM (Driver Door Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	MSM (Memory Seat Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	FFCM (Forward Facing Camera Module)	✓	✓	✓	✓		sp02752
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	ADCM (Active Damping Control Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	EPS (Electric Power Steering)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	AMP (Amplifier)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	DTCM (Drive Train Control Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	IPC (Instrument Panel Cluster)	✓	✓	✓	✓	✓	sp02753
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	RADIO (RADIO)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	ACC (Adaptive Cruise Control)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	ITM (Intrusion)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓	✓	sp02754
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2019	PDM (Passenger Door Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	PCM (Powertrain Control Module)	✓	✓	✓	✓		sp02755, sp02756, sp02757, sp02758, sp02759, sp02760, sp02761, sp02762, sp02763, sp02764, sp02765
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	TCM (Transmission Control Module)	✓	✓	✓	✓		sp02766, sp02767
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	ABS (Anti-Lock Braking System)	✓	✓	✓	✓	✓	sp02768, sp02769
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	SRS (Supplemental Inflatable Restraint System, ORC)	✓	✓	✓	✓		sp02770
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	BCM (Body Control Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	sp02771, sp02772, sp02773, sp02774, sp02775
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	RFH (Radio Frequency Hub)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	HSM (Heated Seat Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	ICS (Integrated Center Stack)	✓	✓	✓	✓	✓	

LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	HVAC (Heat, Ventilation And A/C)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	Parking Electronic Module(PTS)	✓	✓	✓	✓		sp02776
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	TPM (Tire Pressure Monitor)	✓	✓	✓	✓		sp02777
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	SCCM (Steering Column Control Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	DDM (Driver Door Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	MSM (Memory Seat Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	FFCM (Forward Facing Camera Module)	✓	✓	✓	✓		sp02778
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	ADCM (Active Damping Control Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	EPS (Electric Power Steering)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	AMP (Amplifier)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	DTCM (Drive Train Control Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	IPC (Instrument Panel Cluster)	✓	✓	✓	✓	✓	sp02779
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	RADIO (RADIO)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	ACC (Adaptive Cruise Control)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	ITM (Intrusion)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓	✓	sp02780
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2018	PDM (Passenger Door Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	PCM (Powertrain Control Module)	✓	✓	✓	✓		sp02781, sp02782, sp02783, sp02784, sp02785, sp02786, sp02787, sp02788, sp02789, sp02790, sp02791
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	TCM (Transmission Control Module)	✓	✓	✓	✓		sp02792, sp02793
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	ABS (Anti-Lock Braking System)	✓	✓	✓	✓	✓	sp02794, sp02795
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	SRS (Supplemental Inflatable Restraint System, ORC)	✓	✓	✓	✓		sp02796
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	BCM (Body Control Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	sp02797, sp02798, sp02799, sp02800, sp02801
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	RFH (Radio Frequency Hub)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	HSM (Heated Seat Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓		

LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	ICS (Integrated Center Stack)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	HVAC (Heat, Ventilation And A/C)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	Parking Electronic Module(PTS)	✓	✓	✓	✓		sp02802
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	TPM (Tire Pressure Monitor)	✓	✓	✓	✓		sp02803
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	SCCM (Steering Column Control Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	DDM (Driver Door Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	MSM (Memory Seat Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	FFCM (Forward Facing Camera Module)	✓	✓	✓	✓		sp02804
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	ADCM (Active Damping Control Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	EPS (Electric Power Steering)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	AMP (Amplifier)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	DTCM (Drive Train Control Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	IPC (Instrument Panel Cluster)	✓	✓	✓	✓	✓	sp02805
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	RADIO (RADIO)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	ACC (Adaptive Cruise Control)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	ITM (Intrusion)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓	✓	sp02806
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2017	PDM (Passenger Door Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	PCM (Powertrain Control Module)	✓	✓	✓	✓		sp02807, sp02808, sp02809, sp02810, sp02811, sp02812, sp02813, sp02814, sp02815, sp02816, sp02817
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	TCM (Transmission Control Module)	✓	✓	✓	✓		sp02818, sp02819
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	ABS (Anti Lock Brakes)	✓	✓	✓	✓	✓	sp02820, sp02821
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	ORC (Occupant Restraint)	✓	✓	✓	✓		sp02822
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	TPM (Tire Pressure Monitor)	✓	✓	✓	✓		sp02823

LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	SCCM (Steering Column Control Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	RFH (Radio Frequency Hub)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	RADIO (RADIO)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	PTS (Parktronics)	✓	✓	✓	✓		sp02824
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	PDM (Passenger Door Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	MSM (Memory Seat Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	ITM (Intrusion)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	IPC (Instrument Panel Cluster)	✓	✓	✓	✓	✓	sp02825
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	ICS (Integrated Center Stack)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	HVAC (Heat, Ventilation And A/C)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	HSM (Heated Seat Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	FFCM (Forward Facing Camera Module)	✓	✓	✓	✓		sp02826
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	sp02827, sp02828, sp02829, sp02830, sp02831
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	EPS (Electric Power Steering)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	DTCM (Drive Train Control Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	DDM (Driver Door Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	BCM (Body Control Module)		✓	✓	✓	✓	✓
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	AMP (Amplifier)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓	✓	sp02832
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	ADCM (Active Damping Control Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2016	ACC (Adaptive Cruise Control)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	PCM (Powertrain Control Module)	✓	✓	✓	✓		sp02833, sp02834, sp02835, sp02836, sp02837, sp02838, sp02839, sp02840, sp02841, sp02842, sp02843

LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	TCM (Transmission Control Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	ABS (Anti Lock Brakes)	✓	✓	✓	✓	✓	sp02844, sp02845
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	ORC (Occupant Restraint)	✓	✓	✓	✓		sp02846
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	TPM (Tire Pressure Monitor)	✓	✓	✓	✓		sp02847, sp02848, sp02849, sp02850, sp02851, sp02852, sp02853, sp02854
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	SCCM (Steering Column Control Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	RFH (Radio Frequency Hub)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	RADIO (RADIO)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	PTS (Parktronics)	✓	✓	✓	✓		sp02855
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	PDM (Passenger Door Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	MSM (Memory Seat Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	ITM (Intrusion)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	IPC (Instrument Panel Cluster)	✓	✓	✓	✓	✓	sp02856
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	ICS (Integrated Center Stack)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	HVAC (Heat, Ventilation And A/C)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	HSM (Heated Seat Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	FFCM (Forward Facing Camera Module)	✓	✓	✓	✓		sp02857
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	sp02858, sp02859, sp02860, sp02861, sp02862
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	EPS (Electric Power Steering)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	DTCM (Drive Train Control Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	DDM (Driver Door Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	BCM (Body Control Module)		✓	✓	✓	✓	✓
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	AMP (Amplifier)	✓	✓	✓	✓		

LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓	✓	sp02863
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	ADCM (Active Damping Control Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2015	ACC (Adaptive Cruise Control)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	PCM (Powertrain Control Module)	✓	✓	✓	✓		sp02864, sp02865, sp02866, sp02867, sp02868, sp02869, sp02870, sp02871, sp02872, sp02873, sp02874, sp02875, sp02876
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	TCM (Transmission Control Module)	✓	✓	✓	✓		sp02877
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	ABS (Anti Lock Brakes)	✓	✓	✓	✓		sp02878, sp02879
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	ORC (Occupant Restraint)	✓	✓	✓	✓		sp02880
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	TPM (Tire Pressure Monitor)	✓	✓	✓	✓		sp02881, sp02882, sp02883, sp02884, sp02885, sp02886
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	TGW (Telematic Gateway Radio)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	SCCM (Steering Column Control Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	RFH (Radio Frequency Hub)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	PTS (Parktronics)	✓	✓	✓	✓	✓	sp02887, sp02888
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	PDM (Passenger Door Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	MSM (Memory Seat Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	ITM (Intrusion)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	IPC (Instrument Panel Cluster)	✓	✓	✓	✓		sp02889
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	ICS (Integrated Center Stack)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	HVAC (Heat, Ventilation And A/C)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	HSM (Heated Seat Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	HFM (Hands Free Module (Cell Phone))	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	EPS (Electric Power Steering)	✓	✓	✓	✓		

LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	DTCM (Drive Train Control Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	DDM (Driver Door Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	BCM (Body Control Module)		✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	AMP (Amplifier)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓	✓	sp02893
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	ADCM (Active Damping Control Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2014	ACC (Adaptive Cruise Control)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	PCM (Powertrain Control Module)	✓	✓	✓	✓	✓	sp02894, sp02895, sp02896, sp02897, sp02898, sp02899, sp02900, sp02901
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	TCM (Transmission Control Module)	✓	✓	✓	✓		sp02902
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	ABS (Anti Lock Brakes)	✓	✓	✓	✓		sp02903, sp02904
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	ORC (Occupant Restraint)	✓	✓	✓	✓		sp02905
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	TPM (Tire Pressure Monitor)	✓	✓	✓	✓		sp02906, sp02907, sp02908, sp02909, sp02910, sp02911
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	TGW (Telematic Gateway Radio)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	SCCM (Steering Column Control Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	RFH (Radio Frequency Hub)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	PTS (Parktronics)	✓	✓	✓	✓	✓	sp02912, sp02913
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	PDM (Passenger Door Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	MSM (Memory Seat Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	ITM (Intrusion)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	IPC (Instrument Panel Cluster)	✓	✓	✓	✓		sp02914
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	ICS (Integrated Center Stack)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	HVAC (Heat, Ventilation And A/C)	✓	✓	✓	✓	✓	

LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	HSM (Heated Seat Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	HFM (Hands Free Module (Cell Phone))	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	EPS (Electric Power Steering)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	DTCM (Drive Train Control Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	DDM (Driver Door Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	BCM (Body Control Module)		✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	AMP (Amplifier)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓	✓	sp02918
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	ADCM (Active Damping Control Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2013	ACC (Adaptive Cruise Control)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	PCM (Powertrain Control Module)	✓	✓	✓	✓	✓	sp02919, sp02920, sp02921, sp02922, sp02923, sp02924, sp02925, sp02926
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	TCM (Transmission Control Module)	✓	✓	✓	✓		sp02927
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	ABS (Anti Lock Brakes)	✓	✓	✓	✓		sp02928, sp02929
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	ORC (Occupant Restraint)	✓	✓	✓	✓		sp02930
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	TPM (Tire Pressure Monitor)	✓	✓	✓	✓		sp02931, sp02932, sp02933, sp02934, sp02935, sp02936
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	TGW (Telematic Gateway Radio)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	SCCM (Steering Column Control Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	RFH (Radio Frequency Hub)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	PTS (Parktronics)	✓	✓	✓	✓	✓	sp02937, sp02938
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	PDM (Passenger Door Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	MSM (Memory Seat Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	ITM (Intrusion)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	IPC (Instrument Panel Cluster)	✓	✓	✓	✓		sp02939

LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	ICS (Integrated Center Stack)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	HVAC (Heat, Ventilation And A/C)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	HSM (Heated Seat Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	HFM (Hands Free Module (Cell Phone))	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	EPS (Electric Power Steering)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	DTCM (Drive Train Control Module)	✓	✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	DDM (Driver Door Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	BSM (Blind Spot Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	BCM (Body Control Module)		✓	✓	✓	✓	
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	AMP (Amplifier)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓	✓	sp02943
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	ADCM (Active Damping Control Module)	✓	✓	✓	✓		
LANCIA	300 / MAGNUM / CHARGER (Pre-2011) / THEMA	2012	ACC (Adaptive Cruise Control)	✓	✓	✓	✓		
LANCIA	THESTIS	2.0 20V TB	Bosch Motronic Me7.3.1 EOBD Injection (2 Lambda Sensors)	✓	✓	✓	✓		
LANCIA	THESTIS	2.0 20V TB	ESP TRW Lucas ABS	✓	✓	✓	✓		
LANCIA	THESTIS	2.0 20V TB	Marelli Full Body Computer	✓	✓	✓	✓		
LANCIA	THESTIS	2.0 20V TB	Marelli Easy-Go Body Computer	✓	✓	✓	✓		
LANCIA	THESTIS	2.0 20V TB	TRW MY 99 Airbag (2F-4P-4L-2T-I-S-C)	✓	✓	✓	✓		
LANCIA	THESTIS	2.0 20V TB	TRW MY 99 Airbag (2F-4P-2L-2T-I-S-C)	✓	✓	✓	✓		
LANCIA	THESTIS	2.0 20V TB	Bitron Driving Seat	✓	✓	✓	✓		
LANCIA	THESTIS	2.0 20V TB	Bitron Passenger Seat	✓	✓	✓	✓		
LANCIA	THESTIS	2.0 20V TB	Borletti/Hella Climate Control	✓	✓	✓	✓		
LANCIA	THESTIS	2.0 20V TB	Bosch Adaptive Cruise Control	✓	✓	✓	✓		
LANCIA	THESTIS	2.0 20V TB	SAGEM Speedpro Power Steering	✓	✓	✓	✓		
LANCIA	THESTIS	2.0 20V TB	Marelli Driver's Door	✓	✓	✓	✓		
LANCIA	THESTIS	2.0 20V TB	Marelli Boot	✓	✓	✓	✓		
LANCIA	THESTIS	2.0 20V TB	Marelli Passenger Door	✓	✓	✓	✓		
LANCIA	THESTIS	2.0 20V TB	Valeo Parking Control Unit	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 20V	AISIN YLII 5 Automatic Gearbox	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 20V	Bosch Motronic Me3.1 EOBD Injection (Eng. 2.0/2.4 20V)	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 20V	ESP TRW Lucas ABS	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 20V	Marelli Full Body Computer	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 20V	Marelli Easy-Go Body Computer	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 20V	TRW MY 99 Airbag (2F-4P-4L-2T-I-S-C)	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 20V	TRW MY 99 Airbag (2F-4P-2L-2T-I-S-C)	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 20V	Bitron Driving Seat	✓	✓	✓	✓		

LANCIA	THESTIS	2.4 20V	Bitron Passenger Seat	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 20V	Borletti/Hella Climate Control	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 20V	Bosch Adaptive Cruise Control	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 20V	SAGEM Speedpro Power Steering	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 20V	Marelli Driver's Door	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 20V	Marelli Boot	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 20V	Marelli Passenger Door	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 20V	Valeo Parking Control Unit	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 10V	Bosch EDC15 CF3/EOBD Diesel Injection (Eng. 1.9/2.4)	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 10V	ESP TRW Lucas ABS	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 10V	Marelli Full Body Computer	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 10V	TRW MY 99 Airbag (2F-4P-4L-2T-I-S-C)	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 10V	TRW MY 99 Airbag (2F-4P-2L-2T-I-S-C)	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 10V	Bitron Driving Seat	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 10V	Bitron Passenger Seat	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 10V	Borletti/Hella Climate Control	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 10V	Bosch Adaptive Cruise Control	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 10V	SAGEM Speedpro Power Steering	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 10V	Marelli Driver's Door	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 10V	Marelli Boot	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 10V	Marelli Passenger Door	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 10V	Valeo Parking Control Unit	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 20V	AISIN YLII 5 Automatic Gearbox	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 20V	Bosch Diesel Injection EDC16C39 CF4/EOBD (Eng. 1.9/2.4)	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 20V	Bosch EDC16 CF3/EOBD Diesel Injection (1.9/2.4 Eng.)	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 20V	Nippon Seiki Instrument Panel (Thesis)	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 20V	ESP TRW Lucas ABS	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 20V	Marelli Full Body Computer	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 20V	TRW MY 99 Airbag (2F-4P-4L-2T-I-S-C)	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 20V	TRW MY 99 Airbag (2F-4P-2L-2T-I-S-C)	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 20V	Bitron Driving Seat	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 20V	Bitron Passenger Seat	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 20V	Borletti/Hella Climate Control	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 20V	Bosch Adaptive Cruise Control	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 20V	SAGEM Speedpro Power Steering	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 20V	Marelli Driver's Door	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 20V	Marelli Boot	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 20V	Marelli Passenger Door	✓	✓	✓	✓		
LANCIA	THESTIS	2.4 JTD 20V	Valeo Parking Control Unit	✓	✓	✓	✓		
LANCIA	THESTIS	3.0 V6 24V	AISIN YLII 5 Automatic Gearbox	✓	✓	✓	✓		
LANCIA	THESTIS	3.0 V6 24V	Bosch Motronic EOBD ME3.1 Injection (Eng. V6)	✓	✓	✓	✓		
LANCIA	THESTIS	3.0 V6 24V	Nippon Seiki Instrument Panel (Thesis)	✓	✓	✓	✓		
LANCIA	THESTIS	3.0 V6 24V	ESP TRW Lucas ABS	✓	✓	✓	✓		
LANCIA	THESTIS	3.0 V6 24V	Marelli Full Body Computer	✓	✓	✓	✓		
LANCIA	THESTIS	3.0 V6 24V	Marelli Easy-Go Body Computer	✓	✓	✓	✓		
LANCIA	THESTIS	3.0 V6 24V	TRW MY 99 Airbag (2F-4P-4L-2T-I-S-C)	✓	✓	✓	✓		
LANCIA	THESTIS	3.0 V6 24V	TRW MY 99 Airbag (2F-4P-2L-2T-I-S-C)	✓	✓	✓	✓		
LANCIA	THESTIS	3.0 V6 24V	Bitron Driving Seat	✓	✓	✓	✓		
LANCIA	THESTIS	3.0 V6 24V	Bitron Passenger Seat	✓	✓	✓	✓		
LANCIA	THESTIS	3.0 V6 24V	Borletti/Hella Climate Control	✓	✓	✓	✓		
LANCIA	THESTIS	3.0 V6 24V	Bosch Adaptive Cruise Control	✓	✓	✓	✓		
LANCIA	THESTIS	3.0 V6 24V	SAGEM Speedpro Power Steering	✓	✓	✓	✓		
LANCIA	THESTIS	3.0 V6 24V	Marelli Driver's Door	✓	✓	✓	✓		

LANCIA	THEISIS	3.0 V6 24V	Marelli Boot	✓	✓	✓	✓		
LANCIA	THEISIS	3.0 V6 24V	Marelli Passenger Door	✓	✓	✓	✓		
LANCIA	THEISIS	3.0 V6 24V	Valeo Parking Control Unit	✓	✓	✓	✓		
LANCIA	THEISIS	3.2 V6 24V	AISIN VLII 5 Automatic Gearbox	✓	✓	✓	✓		
LANCIA	THEISIS	3.2 V6 24V	Bosch Motronic Me7.3.1 E0BD Injection	✓	✓	✓	✓		
LANCIA	THEISIS	3.2 V6 24V	Injection Bosch motronic mer.3.1 Outstude	✓	✓	✓	✓		
LANCIA	THEISIS	3.2 V6 24V	Nippon Seiki Instrument Panel (Thesis)	✓	✓	✓	✓		
LANCIA	THEISIS	3.2 V6 24V	ESP TRW Lucas ABS	✓	✓	✓	✓		
LANCIA	THEISIS	3.2 V6 24V	Marelli Full Body Computer	✓	✓	✓	✓		
LANCIA	THEISIS	3.2 V6 24V	Marelli Easy-Go Body Computer	✓	✓	✓	✓		
LANCIA	THEISIS	3.2 V6 24V	TRW MY 99 Airbag (2F-4P-4L-2T-I-S-C)	✓	✓	✓	✓		
LANCIA	THEISIS	3.2 V6 24V	TRW MY 99 Airbag (2F-4P-2L-2T-I-S-C)	✓	✓	✓	✓		
LANCIA	THEISIS	3.2 V6 24V	Bitron Driving Seat	✓	✓	✓	✓		
LANCIA	THEISIS	3.2 V6 24V	Bitron Passenger Seat	✓	✓	✓	✓		
LANCIA	THEISIS	3.2 V6 24V	Borletti/Hella Climate Control	✓	✓	✓	✓		
LANCIA	THEISIS	3.2 V6 24V	Bosch Adaptive Cruise Control	✓	✓	✓	✓		
LANCIA	THEISIS	3.2 V6 24V	SAGEM Speedpro Power Steering	✓	✓	✓	✓		
LANCIA	THEISIS	3.2 V6 24V	Marelli Driver's Door	✓	✓	✓	✓		
LANCIA	THEISIS	3.2 V6 24V	Marelli Boot	✓	✓	✓	✓		
LANCIA	THEISIS	3.2 V6 24V	Marelli Passenger Door	✓	✓	✓	✓		
LANCIA	THEISIS	3.2 V6 24V	Valeo Parking Control Unit	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2016	PCM (Powertrain Control Module)	✓	✓	✓	✓	✓	sp02944, sp02945, sp02946, sp02947, sp02948
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	PCM (Powertrain Control Module)	✓	✓	✓	✓	✓	sp02949, sp02950, sp02951, sp02952, sp02953
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	DTCM (Drive Train Control Module)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	ABS (Anti Lock Brakes)	✓	✓	✓	✓		sp02954
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	ORC (Occupant Restraint)	✓	✓	✓	✓		sp02955, sp02956
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	WCM (Wireless Control)	✓	✓	✓	✓		sp02957, sp02958
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	VES2 (Second Row Screen)	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	VES3 (Last Row Screen)	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	TPM (Tire Pressure Monitor)	✓	✓	✓	✓		sp02959, sp02960, sp02961, sp02962, sp02963, sp02964, sp02965
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	TIPMGW (Central Gateway)	✓	✓	✓	✓		sp02966, sp02967, sp02968
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	SUNR (Sunroof)	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	SAS (Steering Angle Sensor)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	RADIO (RADIO)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	PTS (Parktronics)	✓	✓	✓	✓	✓	sp02969, sp02970
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	PSDMR (Power Sliding Doors (Right))	✓	✓	✓	✓		sp02971, sp02972, sp02973
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	PSDML (Power Sliding Doors (Left))	✓	✓	✓	✓		sp02974, sp02975, sp02976
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	PLGM (Power Liftgate)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	PEM (Passive Entry Module)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	MSMD (Memory Seat)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	ITM (Intrusion)	✓	✓	✓	✓		sp02977
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	HVAC (Heat, Ventilation And A/C)	✓	✓	✓	✓		sp02978
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	HSM (Heated Seat Module)	✓	✓	✓	✓		sp02979
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	HIDT (High Intensity Discharge Translator)	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	HFM (Hands Free Module (Cell Phone))	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	FSM (Fold Stow Module)	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	EPPM (Electronic Pedestrian Protection Module)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	DVD (DVD Changer)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	DMRR (Door Module Rear Right)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	DMRL (Door Module Rear Left)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	DMFR (Door Module Front Right)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	DMFL (Door Module Front Left)	✓	✓	✓	✓		

LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	CCN (Instrument Cluster/Cabin Compartment Node)	✓	✓	✓	✓		sp02980, sp02981, sp02982
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	AMP (Amplifier)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2015	AHEM (Automatic High Beam)	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	PCM (Powertrain Control Module)	✓	✓	✓	✓	✓	sp02983, sp02984, sp02985, sp02986, sp02987
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	TCM (Transmission Control Module)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	ABS (Anti Lock Brakes)	✓	✓	✓	✓		sp02988
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	ORC (Occupant Restraint)	✓	✓	✓	✓		sp02989, sp02990
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	WCM (Wireless Control)	✓	✓	✓	✓		sp02991, sp02992
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	VES2 (Second Row Screen)	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	VES3 (Last Row Screen)	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	TPM (Tire Pressure Monitor)	✓	✓	✓	✓		sp02993, sp02994, sp02995, sp02996, sp02997, sp02998, sp02999
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	TIPMCGW (Central Gateway)	✓	✓	✓	✓		sp03000, sp03001, sp03002
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	SUNR (Sunroof)	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	SAS (Steering Angle Sensor)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	RADIO (RADIO)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	PTS (Parktronics)	✓	✓	✓	✓	✓	sp03003, sp03004
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	PSDMR (Power Sliding Doors (Right))	✓	✓	✓	✓		sp03005, sp03006, sp03007
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	PSDML (Power Sliding Doors (Left))	✓	✓	✓	✓		sp03008, sp03009, sp03010
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	PLGM (Power Liftgate)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	PEM (Passive Entry Module)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	MSMD (Memory Seat)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	ITM (Intrusion)	✓	✓	✓	✓		sp03011
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	HVAC (Heat, Ventilation And A/C)	✓	✓	✓	✓		sp03012
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	HSM (Heated Seat Module)	✓	✓	✓	✓		sp03013
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	HIDT (High Intensity Discharge Translator)	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	HFM (Hands Free Module (Cell Phone))	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	FSM (Fold Stow Module)	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	EPPM (Electronic Pedestrian Protection Module)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	DVD (DVD Changer)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	DMRR (Door Module Rear Right)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	DMRL (Door Module Rear Left)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	DMFR (Door Module Front Right)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	DMFL (Door Module Front Left)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	CCN (Instrument Cluster/Cabin Compartment Node)	✓	✓	✓	✓		sp03014, sp03015, sp03016
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	AMP (Amplifier)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2014	AHEM (Automatic High Beam)	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	PCM (Powertrain Control Module)	✓	✓	✓	✓		sp03017, sp03018, sp03019, sp03020, sp03021, sp03022, sp03023, sp03024, sp03025, sp03026
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	TCM (Transmission Control Module)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	ABS (Anti Lock Brakes)	✓	✓	✓	✓		sp03027, sp03028
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	ORC (Occupant Restraint)	✓	✓	✓	✓		sp03029, sp03030
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	WCM (Wireless Control)	✓	✓	✓	✓		sp03031, sp03032
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	VES2 (Second Row Screen)	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	VES3 (Last Row Screen)	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	TPM (Tire Pressure Monitor)	✓	✓	✓	✓		sp03033, sp03034, sp03035, sp03036, sp03037, sp03038, sp03039
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	TIPMCGW (Central Gateway)	✓	✓	✓	✓		sp03040, sp03041, sp03042
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	SUNR (Sunroof)	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	SAS (Steering Angle Sensor)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	RADIO (RADIO)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	PTS (Parktronics)	✓	✓	✓	✓	✓	sp03043, sp03044
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	PSDMR (Power Sliding Doors (Right))	✓	✓	✓	✓		sp03045, sp03046, sp03047
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	PSDML (Power Sliding Doors (Left))	✓	✓	✓	✓		sp03048, sp03049, sp03050
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	PLGM (Power Liftgate)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	PEM (Passive Entry Module)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	MSMD (Memory Seat)	✓	✓	✓	✓		

LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	ITM (Intrusion)	✓	✓	✓	✓		sp03051
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	HVAC (Heat, Ventilation And A/C)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	HSM (Heated Seat Module)	✓	✓	✓	✓		sp03052
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	HIDT (High Intensity Discharge Translator)	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	HFM (Hands Free Module (Cell Phone))	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	FSM (Fold Stow Module)	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	EPPM (Electronic Pedestrian Protection Module)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	DVD (DVD Changer)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	DMRR (Door Module Rear Right)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	DMRL (Door Module Rear Left)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	DMFR (Door Module Front Right)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	DMFL (Door Module Front Left)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	CCN (Instrument Cluster/Cabin Compartment Node)	✓	✓	✓	✓		sp03053, sp03054, sp03055
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	AMP (Amplifier)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2013	AHBM (Automatic High Beam)	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	PCM (Powertrain Control Module)	✓	✓	✓	✓		sp03056, sp03057, sp03058, sp03059, sp03060, sp03061, sp03062, sp03063, sp03064, sp03065
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	TCM (Transmission Control Module)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	ABS (Anti Lock Brakes)	✓	✓	✓	✓		sp03066, sp03067
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	ORC (Occupant Restraint)	✓	✓	✓	✓		sp03068, sp03069, sp03070
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	WCM (Wireless Control)	✓	✓	✓	✓		sp03071, sp03072
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	VES2 (Second Row Screen)	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	VES3 (Last Row Screen)	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	TPM (Tire Pressure Monitor)	✓	✓	✓	✓		sp03073, sp03074, sp03075, sp03076, sp03077, sp03078, sp03079
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	TIPMCGW (Central Gateway)	✓	✓	✓	✓		sp03080, sp03081, sp03082
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	SUNR (Sunroof)	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	SAS (Steering Angle Sensor)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	RADIO (RADIO)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	PTS (Parktronics)	✓	✓	✓	✓	✓	sp03083, sp03084
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	PSDMR (Power Sliding Doors (Right))	✓	✓	✓	✓		sp03085, sp03086, sp03087
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	PSDML (Power Sliding Doors (Left))	✓	✓	✓	✓		sp03088, sp03089, sp03090
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	PLGM (Power Liftgate)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	PEM (Passive Entry Module)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	MSMD (Memory Seat)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	ITM (Intrusion)	✓	✓	✓	✓		sp03091
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	HVAC (Heat, Ventilation And A/C)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	HSM (Heated Seat Module)	✓	✓	✓	✓		sp03092
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	HIDT (High Intensity Discharge Translator)	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	HFM (Hands Free Module (Cell Phone))	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	FSM (Fold Stow Module)	✓	✓	✓	✓	✓	
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	EPPM (Electronic Pedestrian Protection Module)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	DVD (DVD Changer)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	DMRR (Door Module Rear Right)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	DMRL (Door Module Rear Left)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	DMFR (Door Module Front Right)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	DMFL (Door Module Front Left)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	CCN (Instrument Cluster/Cabin Compartment Node)	✓	✓	✓	✓		sp03093, sp03094, sp03095
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	BSM (Blind Spot Module)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	AMP (Amplifier)	✓	✓	✓	✓		
LANCIA	TOWM & COUNTRY / CARAVAN / VOYAGER	2012	AHBM (Automatic High Beam)	✓	✓	✓	✓		
LANCIA	Y	1.1	Allied MY 97 Air Bag (2F-2P-2L-S)	✓	✓	✓	✓		
LANCIA	Y	1.1	Allied MY 97 Airbag (2F-2P-2L-1)	✓	✓	✓	✓		
LANCIA	Y	1.1	Bosch 5.3 ABS	✓	✓	✓	✓		
LANCIA	Y	1.2	Allied MY 97 Air Bag (2F-2P-2L-S)	✓	✓	✓	✓		
LANCIA	Y	1.2	Allied MY 97 Airbag (2F-2P-2L-1)	✓	✓	✓	✓		
LANCIA	Y	1.2	Bosch 5.3 ABS	✓	✓	✓	✓		

LANCIA	Y	1.2 16V	Allied MY 97 Air Bag (2F-2P-2L-S)	✓	✓	✓	✓		
LANCIA	Y	1.2 16V	Allied MY 97 Airbag (2F-2P-2L-I)	✓	✓	✓	✓		
LANCIA	Y	1.2 16V	Bosch 5.3 ABS	✓	✓	✓			
LANCIA	Y	1.2 16V	Allied MY 97 Airbag (2F-2P-I)	✓	✓	✓	✓		
LANCIA	Y	1.2 16V CF3	Allied MY 97 Air Bag (2F-2P-2L-S)	✓	✓	✓	✓		
LANCIA	Y	1.2 16V CF3	Allied MY 97 Airbag (2F-2P-2L-I)	✓	✓	✓	✓		
LANCIA	Y	1.2 16V CF3	Bosch Motronic ME7.3H4 EOBD Injection	✓	✓	✓	✓		
LANCIA	Y	1.2 16V CF3	Bosch 5.3 ABS	✓	✓	✓			
LANCIA	Y	1.2 16V CF3	Allied MY 97 Airbag (2F-2P-I)	✓	✓	✓	✓		
LANCIA	Y	1.2 CF3	Allied MY 97 Air Bag (2F-2P-2L-S)	✓	✓	✓	✓		

XTOOL

Special Functions List

No.	Functions Name	System Name
sp00001	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
sp00002	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
sp00003	Brake Switch Learn	PCM (Powertrain Control Module)
sp00004	Clutch Pedal Learn	PCM (Powertrain Control Module)
sp00005	Check PCM Odometer	PCM (Powertrain Control Module)
sp00006	Emissions Rolls Test Mode	PCM (Powertrain Control Module)
sp00007	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
sp00008	Reset ECU	PCM (Powertrain Control Module)
sp00009	Reset Memory	PCM (Powertrain Control Module)
sp00010	Reset Memory	PCM (Powertrain Control Module)
sp00011	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
sp00012	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
sp00013	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
sp00014	Learn Clutches Contact Point	TCM (Transmission Control Module)
sp00015	Quick Learn	TCM (Transmission Control Module)
sp00016	ABS Static Test	ABS (Anti-Lock Braking System)
sp00017	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
sp00018	Exit Shipping Mode	BCM (Body Control Module)
sp00019	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp00020	IPC Enable Seatbelt Minder Chime	IC (Instrument Cluster)
sp00021	Reset Service Information	IC (Instrument Cluster)
sp00022	IPC Disable Seatbelt Minder Chime	IC (Instrument Cluster)
sp00023	IPC Replacement	IC (Instrument Cluster)
sp00024	RADIO Proxi Configuration	RFH (Radio Frequency Hub)
sp00025	Clear Steering Pull Compensation	EPS (Electric Power Steering)
sp00026	Initialize EPS	EPS (Electric Power Steering)
sp00027	CTM Proxi Configuration	CTM (Convergence Telematic Module)
sp00028	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
sp00029	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
sp00030	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
sp00031	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
sp00032	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00033	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00034	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00035	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00036	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp00037	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
sp00038	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
sp00039	Brake Switch Learn	PCM (Powertrain Control Module)
sp00040	Clutch Pedal Learn	PCM (Powertrain Control Module)

sp00041	Check PCM Odometer	PCM (Powertrain Control Module)
sp00042	Emissions Rolls Test Mode	PCM (Powertrain Control Module)
sp00043	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
sp00044	Reset ECU	PCM (Powertrain Control Module)
sp00045	Reset Memory	PCM (Powertrain Control Module)
sp00046	Reset Memory	PCM (Powertrain Control Module)
sp00047	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
sp00048	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
sp00049	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
sp00050	Learn Clutches Contact Point	TCM (Transmission Control Module)
sp00051	Quick Learn	TCM (Transmission Control Module)
sp00052	ABS Static Test	ABS (Anti-Lock Braking System)
sp00053	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
sp00054	Exit Shipping Mode	BCM (Body Control Module)
sp00055	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp00056	IPC Enable Seatbelt Minder Chime	IC (Instrument Cluster)
sp00057	Reset Service Information	IC (Instrument Cluster)
sp00058	IPC Disable Seatbelt Minder Chime	IC (Instrument Cluster)
sp00059	IPC Replacement	IC (Instrument Cluster)
sp00060	RADIO Proxi Configuration	RFH (Radio Frequency Hub)
sp00061	Clear Steering Pull Compensation	EPS (Electric Power Steering)
sp00062	Initialize EPS	EPS (Electric Power Steering)
sp00063	CTM Proxi Configuration	CTM (Convergence Telematic Module)
sp00064	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
sp00065	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
sp00066	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
sp00067	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
sp00068	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00069	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00070	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00071	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00072	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp00073	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
sp00074	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
sp00075	Brake Switch Learn	PCM (Powertrain Control Module)
sp00076	Clutch Pedal Learn	PCM (Powertrain Control Module)
sp00077	Check PCM Odometer	PCM (Powertrain Control Module)
sp00078	Emissions Rolls Test Mode	PCM (Powertrain Control Module)
sp00079	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
sp00080	Reset ECU	PCM (Powertrain Control Module)
sp00081	Reset Memory	PCM (Powertrain Control Module)
sp00082	Reset Memory	PCM (Powertrain Control Module)
sp00083	ECU Replacement With Value Transfer	TCM (Transmission Control Module)

sp00084	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
sp00085	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
sp00086	Learn Clutches Contact Point	TCM (Transmission Control Module)
sp00087	Quick Learn	TCM (Transmission Control Module)
sp00088	ABS Static Test	ABS (Anti-Lock Braking System)
sp00089	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
sp00090	Exit Shipping Mode	BCM (Body Control Module)
sp00091	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp00092	IPC Enable Seatbelt Minder Chime	IC (Instrument Cluster)
sp00093	Reset Service Information	IC (Instrument Cluster)
sp00094	IPC Disable Seatbelt Minder Chime	IC (Instrument Cluster)
sp00095	IPC Replacement	IC (Instrument Cluster)
sp00096	RADIO Proxi Configuration	RFH (Radio Frequency Hub)
sp00097	Clear Steering Pull Compensation	EPS (Electric Power Steering)
sp00098	Initialize EPS	EPS (Electric Power Steering)
sp00099	CTM Proxi Configuration	CTM (Convergence Telematic Module)
sp00100	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
sp00101	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
sp00102	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
sp00103	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
sp00104	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00105	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00106	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00107	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00108	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp00109	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
sp00110	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
sp00111	Brake Switch Learn	PCM (Powertrain Control Module)
sp00112	Clutch Pedal Learn	PCM (Powertrain Control Module)
sp00113	Check PCM Odometer	PCM (Powertrain Control Module)
sp00114	Emissions Rolls Test Mode	PCM (Powertrain Control Module)
sp00115	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
sp00116	Reset ECU	PCM (Powertrain Control Module)
sp00117	Reset Memory	PCM (Powertrain Control Module)
sp00118	Reset Memory	PCM (Powertrain Control Module)
sp00119	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
sp00120	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
sp00121	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
sp00122	Learn Clutches Contact Point	TCM (Transmission Control Module)
sp00123	Quick Learn	TCM (Transmission Control Module)
sp00124	ABS Static Test	ABS (Anti-Lock Braking System)
sp00125	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
sp00126	Exit Shipping Mode	BCM (Body Control Module)

sp00127	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp00128	IPC Enable Seatbelt Minder Chime	IC (Instrument Cluster)
sp00129	Reset Service Information	IC (Instrument Cluster)
sp00130	IPC Disable Seatbelt Minder Chime	IC (Instrument Cluster)
sp00131	IPC Replacement	IC (Instrument Cluster)
sp00132	RADIO Proxi Configuration	RFH (Radio Frequency Hub)
sp00133	Clear Steering Pull Compensation	EPS (Electric Power Steering)
sp00134	Initialize EPS	EPS (Electric Power Steering)
sp00135	CTM Proxi Configuration	CTM (Convergence Telematic Module)
sp00136	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
sp00137	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
sp00138	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
sp00139	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
sp00140	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00141	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00142	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00143	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00144	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp00145	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
sp00146	Brake Switch Learn	PCM (Powertrain Control Module)
sp00147	Clutch Pedal Learn	PCM (Powertrain Control Module)
sp00148	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
sp00149	Throttle Body Self Learning	PCM (Powertrain Control Module)
sp00150	Reset ECU	PCM (Powertrain Control Module)
sp00151	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
sp00152	Differential Pressure Sensor Replac.	PCM (Powertrain Control Module)
sp00153	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
sp00154	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
sp00155	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
sp00156	Learn Clutches Contact Point	TCM (Transmission Control Module)
sp00157	Quick Learn	TCM (Transmission Control Module)
sp00158	ABS Static Test	ABS (Anti-Lock Braking System)
sp00159	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
sp00160	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
sp00161	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
sp00162	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
sp00163	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
sp00164	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00165	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00166	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00167	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00168	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp00169	RADIO Proxi Configuration	RADIO (RADIO)

sp00170	IPC Enable Seatbelt Minder Chime	IC (Instrument Cluster)
sp00171	Reset Service Information	IC (Instrument Cluster)
sp00172	IPC Disable Seatbelt Minder Chime	IC (Instrument Cluster)
sp00173	IPC Replacement	IC (Instrument Cluster)
sp00174	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp00175	Clear Steering Pull Compensation	EPS (Electric Power Steering)
sp00176	Initialize EPS	EPS (Electric Power Steering)
sp00177	CTM Proxi Configuration	CTM (Convergence Telematic Module)
sp00178	Exit Shipping Mode	BCM (Body Control Module)
sp00179	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
sp00180	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
sp00181	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
sp00182	Learn Clutches Contact Point	TCM (Transmission Control Module)
sp00183	Quick Learn	TCM (Transmission Control Module)
sp00184	ABS Static Test	ABS (Anti-Lock Braking System)
sp00185	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
sp00186	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
sp00187	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
sp00188	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
sp00189	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
sp00190	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00191	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00192	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00193	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00194	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp00195	RADIO Proxi Configuration	RADIO (RADIO)
sp00196	IPC Enable Seatbelt Minder Chime	IC (Instrument Cluster)
sp00197	Reset Service Information	IC (Instrument Cluster)
sp00198	IPC Disable Seatbelt Minder Chime	IC (Instrument Cluster)
sp00199	IPC Replacement	IC (Instrument Cluster)
sp00200	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp00201	Clear Steering Pull Compensation	EPS (Electric Power Steering)
sp00202	Initialize EPS	EPS (Electric Power Steering)
sp00203	CTM Proxi Configuration	CTM (Convergence Telematic Module)
sp00204	Exit Shipping Mode	BCM (Body Control Module)
sp00205	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
sp00206	Brake Switch Learn	PCM (Powertrain Control Module)
sp00207	Clutch Pedal Learn	PCM (Powertrain Control Module)
sp00208	Check PCM Odometer	PCM (Powertrain Control Module)
sp00209	Emissions Rolls Test Mode	PCM (Powertrain Control Module)
sp00210	Clear Misfire TLC	PCM (Powertrain Control Module)
sp00211	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
sp00212	Throttle Body Self Learning	PCM (Powertrain Control Module)

sp00213	Reset ECU	PCM (Powertrain Control Module)
sp00214	Reset Memory	PCM (Powertrain Control Module)
sp00215	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
sp00216	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
sp00217	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
sp00218	Learn Clutches Contact Point	TCM (Transmission Control Module)
sp00219	Quick Learn	TCM (Transmission Control Module)
sp00220	ABS Static Test	ABS (Anti-Lock Braking System)
sp00221	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
sp00222	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
sp00223	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
sp00224	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
sp00225	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
sp00226	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00227	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00228	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00229	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00230	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp00231	RADIO Proxi Configuration	RADIO (RADIO)
sp00232	IPC Enable Seatbelt Minder Chime	IC (Instrument Cluster)
sp00233	Reset Service Information	IC (Instrument Cluster)
sp00234	IPC Disable Seatbelt Minder Chime	IC (Instrument Cluster)
sp00235	IPC Replacement	IC (Instrument Cluster)
sp00236	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp00237	Clear Steering Pull Compensation	EPS (Electric Power Steering)
sp00238	Initialize EPS	EPS (Electric Power Steering)
sp00239	CTM Proxi Configuration	CTM (Convergence Telematic Module)
sp00240	Exit Shipping Mode	BCM (Body Control Module)
sp00241	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
sp00242	Brake Switch Learn	PCM (Powertrain Control Module)
sp00243	Clutch Pedal Learn	PCM (Powertrain Control Module)
sp00244	Check PCM Odometer	PCM (Powertrain Control Module)
sp00245	Emissions Rolls Test Mode	PCM (Powertrain Control Module)
sp00246	Clear Misfire TLC	PCM (Powertrain Control Module)
sp00247	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
sp00248	Throttle Body Self Learning	PCM (Powertrain Control Module)
sp00249	Reset ECU	PCM (Powertrain Control Module)
sp00250	Reset Memory	PCM (Powertrain Control Module)
sp00251	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
sp00252	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
sp00253	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
sp00254	Learn Clutches Contact Point	TCM (Transmission Control Module)
sp00255	Quick Learn	TCM (Transmission Control Module)

sp00256	ABS Static Test	ABS (Anti-Lock Braking System)
sp00257	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
sp00258	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
sp00259	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
sp00260	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
sp00261	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
sp00262	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00263	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00264	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00265	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00266	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp00267	RADIO Proxi Configuration	RADIO (RADIO)
sp00268	IPC Enable Seatbelt Minder Chime	IC (Instrument Cluster)
sp00269	Reset Service Information	IC (Instrument Cluster)
sp00270	IPC Disable Seatbelt Minder Chime	IC (Instrument Cluster)
sp00271	IPC Replacement	IC (Instrument Cluster)
sp00272	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp00273	Clear Steering Pull Compensation	EPS (Electric Power Steering)
sp00274	Initialize EPS	EPS (Electric Power Steering)
sp00275	CTM Proxi Configuration	CTM (Convergence Telematic Module)
sp00276	Exit Shipping Mode	BCM (Body Control Module)
sp00277	Exit Shipping Mode	BCM (Body Control Module)
sp00278	IPC Enable Seatbelt Minder Chime	IC (Instrument Cluster)
sp00279	Reset Service Information	IC (Instrument Cluster)
sp00280	IPC Disable Seatbelt Minder Chime	IC (Instrument Cluster)
sp00281	IPC Replacement	IC (Instrument Cluster)
sp00282	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp00283	ABS Static Test	ABS (Anti-Lock Braking System)
sp00284	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
sp00285	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
sp00286	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
sp00287	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
sp00288	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
sp00289	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00290	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00291	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00292	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00293	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp00294	CTM Proxi Configuration	CTM (Convergence Telematic Module)
sp00295	Clear Steering Pull Compensation	EPS (Electric Power Steering)
sp00296	Initialize EPS	EPS (Electric Power Steering)
sp00297	RADIO Proxi Configuration	RFH (Radio Frequency Hub)
sp00298	Exit Shipping Mode	BCM (Body Control Module)

sp00299	IPC Enable Seatbelt Minder Chime	IC (Instrument Cluster)
sp00300	Reset Service Information	IC (Instrument Cluster)
sp00301	IPC Disable Seatbelt Minder Chime	IC (Instrument Cluster)
sp00302	IPC Replacement	IC (Instrument Cluster)
sp00303	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp00304	ABS Static Test	ABS (Anti-Lock Braking System)
sp00305	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
sp00306	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
sp00307	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
sp00308	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
sp00309	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
sp00310	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00311	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00312	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00313	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00314	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp00315	CTM Proxi Configuration	CTM (Convergence Telematic Module)
sp00316	Clear Steering Pull Compensation	EPS (Electric Power Steering)
sp00317	Initialize EPS	EPS (Electric Power Steering)
sp00318	RADIO Proxi Configuration	RFH (Radio Frequency Hub)
sp00319	Intake Manifold Replacement	ECM (Engine Control Module)
sp00320	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
sp00321	Phonic Wheel Replacement	ECM (Engine Control Module)
sp00322	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
sp00323	Neutral Signal Learn	ECM (Engine Control Module)
sp00324	Fuel Supply System Components Replacement	ECM (Engine Control Module)
sp00325	Motorized Throttle Replacement	ECM (Engine Control Module)
sp00326	Factory VIN code lock	ECM (Engine Control Module)
sp00327	Control Unit Reprogramming	ECM (Engine Control Module)
sp00328	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00329	Proxi Alignment Procedure	ECM (Engine Control Module)
sp00330	Injector/S Replacement	ECM (Engine Control Module)
sp00331	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00332	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp00333	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
sp00334	Proxi Alignment Procedure	TCM (Transmission Control Module)
sp00335	ECU Substitution	ABS (Anti-Lock Braking System)
sp00336	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp00337	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
sp00338	TPMS Reset Calibration	ABS (Anti-Lock Braking System)
sp00339	Fire Protection System Activate	BCM (Body Control Module)
sp00340	LIN Line Request Check	BCM (Body Control Module)
sp00341	Ultrasonic Sensors Check	BCM (Body Control Module)

sp00342	Reset Odometer	IC (Instrument Cluster)
sp00343	Reset Service Information	IC (Instrument Cluster)
sp00344	Last Service Date	IC (Instrument Cluster)
sp00345	Factory VIN code lock	CSWM (Comfort Seat Wheel Module)
sp00346	Factory VIN code lock	DTCM (Drive Train Control Module)
sp00347	Proxi Alignment Procedure	DTCM (Drive Train Control Module)
sp00348	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
sp00349	Factory VIN code lock	ESM (Electronic Shifter Module)
sp00350	Power Down	RRM (Radio Receiver Module)
sp00351	Power On And Disable User Inputs	RRM (Radio Receiver Module)
sp00352	Reset Parameters To Default	RRM (Radio Receiver Module)
sp00353	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp00354	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
sp00355	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
sp00356	Steering Angle Sensor	EPS (Electric Power Steering)
sp00357	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp00358	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp00359	Service Single Pole Calibration	HALF (Haptical Lane Feedback)
sp00360	Intake Manifold Replacement	ECM (Engine Control Module)
sp00361	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
sp00362	Phonic Wheel Replacement	ECM (Engine Control Module)
sp00363	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
sp00364	Neutral Signal Learn	ECM (Engine Control Module)
sp00365	Fuel Supply System Components Replacement	ECM (Engine Control Module)
sp00366	Motorized Throttle Replacement	ECM (Engine Control Module)
sp00367	Factory VIN code lock	ECM (Engine Control Module)
sp00368	Control Unit Reprogramming	ECM (Engine Control Module)
sp00369	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00370	Proxi Alignment Procedure	ECM (Engine Control Module)
sp00371	Injector/S Replacement	ECM (Engine Control Module)
sp00372	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00373	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp00374	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
sp00375	Proxi Alignment Procedure	TCM (Transmission Control Module)
sp00376	ECU Substitution	ABS (Anti-Lock Braking System)
sp00377	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp00378	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
sp00379	TPMS Reset Calibration	ABS (Anti-Lock Braking System)
sp00380	Fire Protection System Activate	BCM (Body Control Module)
sp00381	LIN Line Request Check	BCM (Body Control Module)
sp00382	Ultrasonic Sensors Check	BCM (Body Control Module)
sp00383	Reset Odometer	IC (Instrument Cluster)
sp00384	Reset Service Information	IC (Instrument Cluster)

sp00385	Last Service Date	IC (Instrument Cluster)
sp00386	Factory VIN code lock	CSWM (Comfort Seat Wheel Module)
sp00387	Factory VIN code lock	DTCM (Drive Train Control Module)
sp00388	Proxi Alignment Procedure	DTCM (Drive Train Control Module)
sp00389	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
sp00390	Factory VIN code lock	ESM (Electronic Shifter Module)
sp00391	Power Down	RRM (Radio Receiver Module)
sp00392	Power On And Disable User Inputs	RRM (Radio Receiver Module)
sp00393	Reset Parameters To Default	RRM (Radio Receiver Module)
sp00394	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp00395	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
sp00396	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
sp00397	Steering Angle Sensor	EPS (Electric Power Steering)
sp00398	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp00399	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp00400	Service Single Pole Calibration	HALF (Haptical Lane Feedback)
sp00401	Intake Manifold Replacement	ECM (Engine Control Module)
sp00402	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
sp00403	Phonic Wheel Replacement	ECM (Engine Control Module)
sp00404	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
sp00405	Neutral Signal Learn	ECM (Engine Control Module)
sp00406	Fuel Supply System Components Replacement	ECM (Engine Control Module)
sp00407	Motorized Throttle Replacement	ECM (Engine Control Module)
sp00408	Factory VIN code lock	ECM (Engine Control Module)
sp00409	Control Unit Reprogramming	ECM (Engine Control Module)
sp00410	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00411	Proxi Alignment Procedure	ECM (Engine Control Module)
sp00412	Injector/S Replacement	ECM (Engine Control Module)
sp00413	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00414	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp00415	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
sp00416	Proxi Alignment Procedure	TCM (Transmission Control Module)
sp00417	ECU Substitution	ABS (Anti-Lock Braking System)
sp00418	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp00419	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
sp00420	TPMS Reset Calibration	ABS (Anti-Lock Braking System)
sp00421	Fire Protection System Activate	BCM (Body Control Module)
sp00422	LIN Line Request Check	BCM (Body Control Module)
sp00423	Ultrasonic Sensors Check	BCM (Body Control Module)
sp00424	Reset Odometer	IC (Instrument Cluster)
sp00425	Reset Service Information	IC (Instrument Cluster)
sp00426	Last Service Date	IC (Instrument Cluster)
sp00427	Factory VIN code lock	CSWM (Comfort Seat Wheel Module)

sp00428	Factory VIN code lock	DTCM (Drive Train Control Module)
sp00429	Proxi Alignment Procedure	DTCM (Drive Train Control Module)
sp00430	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
sp00431	Factory VIN code lock	ESM (Electronic Shifter Module)
sp00432	Power Down	RRM (Radio Receiver Module)
sp00433	Power On And Disable User Inputs	RRM (Radio Receiver Module)
sp00434	Reset Parameters To Default	RRM (Radio Receiver Module)
sp00435	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp00436	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
sp00437	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
sp00438	Steering Angle Sensor	EPS (Electric Power Steering)
sp00439	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp00440	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp00441	Service Single Pole Calibration	HALF (Haptical Lane Feedback)
sp00442	Intake Manifold Replacement	ECM (Engine Control Module)
sp00443	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
sp00444	Phonic Wheel Replacement	ECM (Engine Control Module)
sp00445	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
sp00446	Neutral Signal Learn	ECM (Engine Control Module)
sp00447	Fuel Supply System Components Replacement	ECM (Engine Control Module)
sp00448	Motorized Throttle Replacement	ECM (Engine Control Module)
sp00449	Factory VIN code lock	ECM (Engine Control Module)
sp00450	Control Unit Reprogramming	ECM (Engine Control Module)
sp00451	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00452	Proxi Alignment Procedure	ECM (Engine Control Module)
sp00453	Injector/S Replacement	ECM (Engine Control Module)
sp00454	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00455	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp00456	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
sp00457	Proxi Alignment Procedure	TCM (Transmission Control Module)
sp00458	ECU Substitution	ABS (Anti-Lock Braking System)
sp00459	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp00460	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
sp00461	TPMS Reset Calibration	ABS (Anti-Lock Braking System)
sp00462	Fire Protection System Activate	BCM (Body Control Module)
sp00463	LIN Line Request Check	BCM (Body Control Module)
sp00464	Ultrasonic Sensors Check	BCM (Body Control Module)
sp00465	Reset Odometer	IC (Instrument Cluster)
sp00466	Reset Service Information	IC (Instrument Cluster)
sp00467	Last Service Date	IC (Instrument Cluster)
sp00468	Factory VIN code lock	CSWM (Comfort Seat Wheel Module)
sp00469	Factory VIN code lock	DTCM (Drive Train Control Module)
sp00470	Proxi Alignment Procedure	DTCM (Drive Train Control Module)

sp00471	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
sp00472	Factory VIN code lock	ESM (Electronic Shifter Module)
sp00473	Power Down	RRM (Radio Receiver Module)
sp00474	Power On And Disable User Inputs	RRM (Radio Receiver Module)
sp00475	Reset Parameters To Default	RRM (Radio Receiver Module)
sp00476	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp00477	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
sp00478	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
sp00479	Steering Angle Sensor	EPS (Electric Power Steering)
sp00480	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp00481	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp00482	Service Single Pole Calibration	HALF (Haptical Lane Feedback)
sp00483	Deactivation Of The Power Limitation Function	ECM (Engine Control Module)
sp00484	Motorised Throttle Replacement	ECM (Engine Control Module)
sp00485	Supercharging System Components Replacement	ECM (Engine Control Module)
sp00486	Intake Manifold Replacement	ECM (Engine Control Module)
sp00487	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
sp00488	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp00489	Phonic Wheel Replacement	ECM (Engine Control Module)
sp00490	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
sp00491	Neutral Signal Learn	ECM (Engine Control Module)
sp00492	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00493	Reset Gear Configuration	ABS (Anti-Lock Braking System)
sp00494	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp00495	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
sp00496	Steering Angle Sensor	EPS (Electric Power Steering)
sp00497	Reset Odometer	IC (Instrument Cluster)
sp00498	Reset Service Information	IC (Instrument Cluster)
sp00499	Disable Seat Belts Reminder	IC (Instrument Cluster)
sp00500	Enable Seat Belts Reminder	IC (Instrument Cluster)
sp00501	Last Service Date	IC (Instrument Cluster)
sp00502	Power Down	ETM (Entertainment Telematic Module)
sp00503	Power On And Disable User Inputs	ETM (Entertainment Telematic Module)
sp00504	Audio Video Signal Detection	ETM (Entertainment Telematic Module)
sp00505	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp00506	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp00507	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
sp00508	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
sp00509	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
sp00510	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
sp00511	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00512	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00513	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)

sp00514	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00515	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp00516	Deactivation Of The Power Limitation Function	ECM (Engine Control Module)
sp00517	Motorised Throttle Replacement	ECM (Engine Control Module)
sp00518	Supercharging System Components Replacement	ECM (Engine Control Module)
sp00519	Intake Manifold Replacement	ECM (Engine Control Module)
sp00520	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
sp00521	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp00522	Phonic Wheel Replacement	ECM (Engine Control Module)
sp00523	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
sp00524	Neutral Signal Learn	ECM (Engine Control Module)
sp00525	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00526	Reset Gear Configuration	ABS (Anti-Lock Braking System)
sp00527	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp00528	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
sp00529	Steering Angle Sensor	EPS (Electric Power Steering)
sp00530	Reset Odometer	IC (Instrument Cluster)
sp00531	Reset Service Information	IC (Instrument Cluster)
sp00532	Disable Seat Belts Reminder	IC (Instrument Cluster)
sp00533	Enable Seat Belts Reminder	IC (Instrument Cluster)
sp00534	Last Service Date	IC (Instrument Cluster)
sp00535	Power Down	ETM (Entertainment Telematic Module)
sp00536	Power On And Disable User Inputs	ETM (Entertainment Telematic Module)
sp00537	Audio Video Signal Detection	ETM (Entertainment Telematic Module)
sp00538	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp00539	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp00540	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
sp00541	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
sp00542	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
sp00543	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
sp00544	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00545	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00546	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00547	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00548	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp00549	Air-Conditioning Self Learning	ECM (Engine Control Module)
sp00550	Brake Switch Learn	ECM (Engine Control Module)
sp00551	Check PCM Odometer	ECM (Engine Control Module)
sp00552	Clear Misfire TLC	ECM (Engine Control Module)
sp00553	Reset Accelerator Pedal Adaptives	ECM (Engine Control Module)
sp00554	Reset Memory	ECM (Engine Control Module)
sp00555	Throttle Body Self Learning	ECM (Engine Control Module)
sp00556	Reset Gear Configuration	ABS (Anti-Lock Braking System)

sp00557	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp00558	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
sp00559	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
sp00560	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
sp00561	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
sp00562	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
sp00563	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00564	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00565	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00566	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00567	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp00568	Trailer Hook Presence Disabling	PAM (Parking Assistant Module)
sp00569	Trailer Hook Presence Enabling	PAM (Parking Assistant Module)
sp00570	Reset Odometer	IC (Instrument Cluster)
sp00571	Reset Service Information	IC (Instrument Cluster)
sp00572	Disable Seat Belts Reminder	IC (Instrument Cluster)
sp00573	Enable Seat Belts Reminder	IC (Instrument Cluster)
sp00574	Last Service Date	IC (Instrument Cluster)
sp00575	Power Down	ETM (Entertainment Telematic Module)
sp00576	Power On And Disable User Inputs	ETM (Entertainment Telematic Module)
sp00577	Audio Video Signal Detection	ETM (Entertainment Telematic Module)
sp00578	Steering Angle Sensor	EPS (Electric Power Steering)
sp00579	Deactivation Of The Power Limitation Function	ECM (Engine Control Module)
sp00580	Motorised Throttle Replacement	ECM (Engine Control Module)
sp00581	Supercharging System Components Replacement	ECM (Engine Control Module)
sp00582	Intake Manifold Replacement	ECM (Engine Control Module)
sp00583	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
sp00584	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp00585	Phonic Wheel Replacement	ECM (Engine Control Module)
sp00586	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
sp00587	Neutral Signal Learn	ECM (Engine Control Module)
sp00588	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00589	Reset Gear Configuration	ABS (Anti-Lock Braking System)
sp00590	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp00591	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
sp00592	Steering Angle Sensor	EPS (Electric Power Steering)
sp00593	Reset Odometer	IC (Instrument Cluster)
sp00594	Reset Service Information	IC (Instrument Cluster)
sp00595	Disable Seat Belts Reminder	IC (Instrument Cluster)
sp00596	Enable Seat Belts Reminder	IC (Instrument Cluster)
sp00597	Last Service Date	IC (Instrument Cluster)
sp00598	Power Down	ETM (Entertainment Telematic Module)
sp00599	Power On And Disable User Inputs	ETM (Entertainment Telematic Module)

sp00600	Audio Video Signal Detection	ETM (Entertainment Telematic Module)
sp00601	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp00602	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp00603	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
sp00604	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
sp00605	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
sp00606	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
sp00607	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00608	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00609	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00610	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00611	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp00612	Deactivation Of The Power Limitation Function	ECM (Engine Control Module)
sp00613	Motorised Throttle Replacement	ECM (Engine Control Module)
sp00614	Supercharging System Components Replacement	ECM (Engine Control Module)
sp00615	Intake Manifold Replacement	ECM (Engine Control Module)
sp00616	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
sp00617	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp00618	Phonic Wheel Replacement	ECM (Engine Control Module)
sp00619	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
sp00620	Neutral Signal Learn	ECM (Engine Control Module)
sp00621	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00622	Reset Gear Configuration	ABS (Anti-Lock Braking System)
sp00623	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp00624	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
sp00625	Steering Angle Sensor	EPS (Electric Power Steering)
sp00626	Reset Odometer	IC (Instrument Cluster)
sp00627	Reset Service Information	IC (Instrument Cluster)
sp00628	Disable Seat Belts Reminder	IC (Instrument Cluster)
sp00629	Enable Seat Belts Reminder	IC (Instrument Cluster)
sp00630	Last Service Date	IC (Instrument Cluster)
sp00631	Power Down	ETM (Entertainment Telematic Module)
sp00632	Power On And Disable User Inputs	ETM (Entertainment Telematic Module)
sp00633	Audio Video Signal Detection	ETM (Entertainment Telematic Module)
sp00634	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp00635	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp00636	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
sp00637	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
sp00638	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
sp00639	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
sp00640	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00641	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00642	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)

sp00643	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00644	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp00645	Air-Conditioning Self Learning	ECM (Engine Control Module)
sp00646	Brake Switch Learn	ECM (Engine Control Module)
sp00647	Check PCM Odometer	ECM (Engine Control Module)
sp00648	Clear Misfire TLC	ECM (Engine Control Module)
sp00649	Reset Accelerator Pedal Adaptives	ECM (Engine Control Module)
sp00650	Reset Memory	ECM (Engine Control Module)
sp00651	Throttle Body Self Learning	ECM (Engine Control Module)
sp00652	Reset Gear Configuration	ABS (Anti-Lock Braking System)
sp00653	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp00654	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
sp00655	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
sp00656	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
sp00657	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
sp00658	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
sp00659	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00660	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00661	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00662	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00663	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp00664	Trailer Hook Presence Disabling	PAM (Parking Assistant Module)
sp00665	Trailer Hook Presence Enabling	PAM (Parking Assistant Module)
sp00666	Reset Odometer	IC (Instrument Cluster)
sp00667	Reset Service Information	IC (Instrument Cluster)
sp00668	Disable Seat Belts Reminder	IC (Instrument Cluster)
sp00669	Enable Seat Belts Reminder	IC (Instrument Cluster)
sp00670	Last Service Date	IC (Instrument Cluster)
sp00671	Power Down	ETM (Entertainment Telematic Module)
sp00672	Power On And Disable User Inputs	ETM (Entertainment Telematic Module)
sp00673	Audio Video Signal Detection	ETM (Entertainment Telematic Module)
sp00674	Steering Angle Sensor	EPS (Electric Power Steering)
sp00675	Reset Gear Configuration	ABS (Anti-Lock Braking System)
sp00676	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp00677	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
sp00678	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
sp00679	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
sp00680	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
sp00681	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
sp00682	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00683	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00684	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00685	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)

sp00686	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp00687	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp00688	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp00689	Reset Odometer	IC (Instrument Cluster)
sp00690	Reset Service Information	IC (Instrument Cluster)
sp00691	Disable Seat Belts Reminder	IC (Instrument Cluster)
sp00692	Enable Seat Belts Reminder	IC (Instrument Cluster)
sp00693	Last Service Date	IC (Instrument Cluster)
sp00694	Power Down	ETM (Entertainment Telematic Module)
sp00695	Power On And Disable User Inputs	ETM (Entertainment Telematic Module)
sp00696	Audio Video Signal Detection	ETM (Entertainment Telematic Module)
sp00697	Steering Angle Sensor	EPS (Electric Power Steering)
sp00698	Deactivation Of The Power Limitation Function	ECM (Engine Control Module)
sp00699	Phonic Wheel Replacement	ECM (Engine Control Module)
sp00700	Motorised Throttle Replacement	ECM (Engine Control Module)
sp00701	Supercharging System Components Replacement	ECM (Engine Control Module)
sp00702	Neutral Signal Learn	ECM (Engine Control Module)
sp00703	Intake Manifold Replacement	ECM (Engine Control Module)
sp00704	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
sp00705	Clutch Pedal Learning	ECM (Engine Control Module)
sp00706	Neutral Signal Learn	ECM (Engine Control Module)
sp00707	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp00708	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00709	Tunnel Lever Replacement	TCM (Transmission Control Module)
sp00710	Levers At Wheel Replacement	TCM (Transmission Control Module)
sp00711	Pump Relay Replacement	TCM (Transmission Control Module)
sp00712	Self-Learnt Functions Reset	TCM (Transmission Control Module)
sp00713	Reset Gear Configuration	ABS (Anti-Lock Braking System)
sp00714	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp00715	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
sp00716	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
sp00717	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
sp00718	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
sp00719	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
sp00720	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00721	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00722	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00723	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp00724	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp00725	Trailer Hook Presence Disabling	PAM (Parking Assistant Module)
sp00726	Trailer Hook Presence Enabling	PAM (Parking Assistant Module)
sp00727	Reset Odometer	IC (Instrument Cluster)
sp00728	Reset Service Information	IC (Instrument Cluster)

sp00729	Disable Seat Belts Reminder	IC (Instrument Cluster)
sp00730	Enable Seat Belts Reminder	IC (Instrument Cluster)
sp00731	Last Service Date	IC (Instrument Cluster)
sp00732	Power Down	ETM (Entertainment Telematic Module)
sp00733	Power On And Disable User Inputs	ETM (Entertainment Telematic Module)
sp00734	Audio Video Signal Detection	ETM (Entertainment Telematic Module)
sp00735	Steering Angle Sensor	EPS (Electric Power Steering)
sp00736	Intake Manifold Replacement	ECM (Engine Control Module)
sp00737	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
sp00738	Phonic Wheel Replacement	ECM (Engine Control Module)
sp00739	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
sp00740	Neutral Signal Learn	ECM (Engine Control Module)
sp00741	Fuel Supply System Components Replacement	ECM (Engine Control Module)
sp00742	Motorized Throttle Replacement	ECM (Engine Control Module)
sp00743	Factory VIN code lock	ECM (Engine Control Module)
sp00744	Control Unit Reprogramming	ECM (Engine Control Module)
sp00745	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00746	Proxi Alignment Procedure	ECM (Engine Control Module)
sp00747	Injector/S Replacement	ECM (Engine Control Module)
sp00748	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00749	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp00750	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
sp00751	Proxi Alignment Procedure	TCM (Transmission Control Module)
sp00752	ECU Substitution	ABS (Anti-Lock Braking System)
sp00753	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp00754	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
sp00755	TPMS Reset Calibration	ABS (Anti-Lock Braking System)
sp00756	Fire Protection System Activate	BCM (Body Control Module)
sp00757	LIN Line Request Check	BCM (Body Control Module)
sp00758	Ultrasonic Sensors Check	BCM (Body Control Module)
sp00759	Power Down	RRM (Radio Receiver Module)
sp00760	Power On And Disable User Inputs	RRM (Radio Receiver Module)
sp00761	Reset Parameters To Default	RRM (Radio Receiver Module)
sp00762	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
sp00763	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
sp00764	Factory VIN code lock	DTCM (Drive Train Control Module)
sp00765	Proxi Alignment Procedure	DTCM (Drive Train Control Module)
sp00766	Reset Odometer	IC (Instrument Cluster)
sp00767	Reset Service Information	IC (Instrument Cluster)
sp00768	Last Service Date	IC (Instrument Cluster)
sp00769	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp00770	Steering Angle Sensor	EPS (Electric Power Steering)
sp00771	Proxi Alignment Procedure	ESM (Electronic Shifter Module)

sp00772	Factory VIN code lock	ESM (Electronic Shifter Module)
sp00773	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp00774	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp00775	Service Single Pole Calibration	HALF (Haptical Lane Feedback)
sp00776	Factory VIN code lock	CSWM (Comfort Seat Wheel Module)
sp00777	Intake Manifold Replacement	ECM (Engine Control Module)
sp00778	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
sp00779	Phonic Wheel Replacement	ECM (Engine Control Module)
sp00780	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
sp00781	Neutral Signal Learn	ECM (Engine Control Module)
sp00782	Fuel Supply System Components Replacement	ECM (Engine Control Module)
sp00783	Motorized Throttle Replacement	ECM (Engine Control Module)
sp00784	Factory VIN code lock	ECM (Engine Control Module)
sp00785	Control Unit Reprogramming	ECM (Engine Control Module)
sp00786	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00787	Proxi Alignment Procedure	ECM (Engine Control Module)
sp00788	Injector/S Replacement	ECM (Engine Control Module)
sp00789	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00790	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp00791	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
sp00792	Proxi Alignment Procedure	TCM (Transmission Control Module)
sp00793	ECU Substitution	ABS (Anti-Lock Braking System)
sp00794	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp00795	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
sp00796	TPMS Reset Calibration	ABS (Anti-Lock Braking System)
sp00797	Fire Protection System Activate	BCM (Body Control Module)
sp00798	LIN Line Request Check	BCM (Body Control Module)
sp00799	Ultrasonic Sensors Check	BCM (Body Control Module)
sp00800	Power Down	RRM (Radio Receiver Module)
sp00801	Power On And Disable User Inputs	RRM (Radio Receiver Module)
sp00802	Reset Parameters To Default	RRM (Radio Receiver Module)
sp00803	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
sp00804	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
sp00805	Factory VIN code lock	DTCM (Drive Train Control Module)
sp00806	Proxi Alignment Procedure	DTCM (Drive Train Control Module)
sp00807	Reset Odometer	IC (Instrument Cluster)
sp00808	Reset Service Information	IC (Instrument Cluster)
sp00809	Last Service Date	IC (Instrument Cluster)
sp00810	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp00811	Steering Angle Sensor	EPS (Electric Power Steering)
sp00812	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
sp00813	Factory VIN code lock	ESM (Electronic Shifter Module)
sp00814	Trailer Hook Presence Disabling	PAM (Parking Aid Module)

sp00815	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp00816	Service Single Pole Calibration	HALF (Haptical Lane Feedback)
sp00817	Factory VIN code lock	CSWM (Comfort Seat Wheel Module)
sp00818	Intake Manifold Replacement	ECM (Engine Control Module)
sp00819	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
sp00820	Phonic Wheel Replacement	ECM (Engine Control Module)
sp00821	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
sp00822	Neutral Signal Learn	ECM (Engine Control Module)
sp00823	Fuel Supply System Components Replacement	ECM (Engine Control Module)
sp00824	Motorized Throttle Replacement	ECM (Engine Control Module)
sp00825	Factory VIN code lock	ECM (Engine Control Module)
sp00826	Control Unit Reprogramming	ECM (Engine Control Module)
sp00827	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00828	Proxi Alignment Procedure	ECM (Engine Control Module)
sp00829	Injector/S Replacement	ECM (Engine Control Module)
sp00830	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00831	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp00832	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
sp00833	Proxi Alignment Procedure	TCM (Transmission Control Module)
sp00834	ECU Substitution	ABS (Anti-Lock Braking System)
sp00835	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp00836	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
sp00837	TPMS Reset Calibration	ABS (Anti-Lock Braking System)
sp00838	Fire Protection System Activate	BCM (Body Control Module)
sp00839	LIN Line Request Check	BCM (Body Control Module)
sp00840	Ultrasonic Sensors Check	BCM (Body Control Module)
sp00841	Power Down	RRM (Radio Receiver Module)
sp00842	Power On And Disable User Inputs	RRM (Radio Receiver Module)
sp00843	Reset Parameters To Default	RRM (Radio Receiver Module)
sp00844	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
sp00845	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
sp00846	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp00847	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp00848	Reset Odometer	IC (Instrument Cluster)
sp00849	Reset Service Information	IC (Instrument Cluster)
sp00850	Last Service Date	IC (Instrument Cluster)
sp00851	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp00852	Service Single Pole Calibration	HALF (Haptical Lane Feedback)
sp00853	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
sp00854	Factory VIN code lock	ESM (Electronic Shifter Module)
sp00855	Steering Angle Sensor	EPS (Electric Power Steering)
sp00856	Factory VIN code lock	DTCM (Drive Train Control Module)
sp00857	Proxi Alignment Procedure	DTCM (Drive Train Control Module)

sp00858	Factory VIN code lock	CSWM (Comfort Seat Wheel Module)
sp00859	Intake Manifold Replacement	ECM (Engine Control Module)
sp00860	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
sp00861	Phonic Wheel Replacement	ECM (Engine Control Module)
sp00862	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
sp00863	Neutral Signal Learn	ECM (Engine Control Module)
sp00864	Fuel Supply System Components Replacement	ECM (Engine Control Module)
sp00865	Motorized Throttle Replacement	ECM (Engine Control Module)
sp00866	Factory VIN code lock	ECM (Engine Control Module)
sp00867	Control Unit Reprogramming	ECM (Engine Control Module)
sp00868	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00869	Proxi Alignment Procedure	ECM (Engine Control Module)
sp00870	Injector/S Replacement	ECM (Engine Control Module)
sp00871	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00872	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp00873	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
sp00874	Proxi Alignment Procedure	TCM (Transmission Control Module)
sp00875	ECU Substitution	ABS (Anti-Lock Braking System)
sp00876	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp00877	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
sp00878	TPMS Reset Calibration	ABS (Anti-Lock Braking System)
sp00879	Fire Protection System Activate	BCM (Body Control Module)
sp00880	LIN Line Request Check	BCM (Body Control Module)
sp00881	Ultrasonic Sensors Check	BCM (Body Control Module)
sp00882	Power Down	RRM (Radio Receiver Module)
sp00883	Power On And Disable User Inputs	RRM (Radio Receiver Module)
sp00884	Reset Parameters To Default	RRM (Radio Receiver Module)
sp00885	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
sp00886	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
sp00887	Factory VIN code lock	DTCM (Drive Train Control Module)
sp00888	Proxi Alignment Procedure	DTCM (Drive Train Control Module)
sp00889	Reset Odometer	IC (Instrument Cluster)
sp00890	Reset Service Information	IC (Instrument Cluster)
sp00891	Last Service Date	IC (Instrument Cluster)
sp00892	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp00893	Steering Angle Sensor	EPS (Electric Power Steering)
sp00894	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
sp00895	Factory VIN code lock	ESM (Electronic Shifter Module)
sp00896	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp00897	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp00898	Service Single Pole Calibration	HALF (Haptical Lane Feedback)
sp00899	Factory VIN code lock	CSWM (Comfort Seat Wheel Module)
sp00900	Intake Manifold Replacement	ECM (Engine Control Module)

sp00901	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
sp00902	Phonic Wheel Replacement	ECM (Engine Control Module)
sp00903	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
sp00904	Neutral Signal Learn	ECM (Engine Control Module)
sp00905	Fuel Supply System Components Replacement	ECM (Engine Control Module)
sp00906	Motorized Throttle Replacement	ECM (Engine Control Module)
sp00907	Factory VIN code lock	ECM (Engine Control Module)
sp00908	Control Unit Reprogramming	ECM (Engine Control Module)
sp00909	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00910	Proxi Alignment Procedure	ECM (Engine Control Module)
sp00911	Injector/S Replacement	ECM (Engine Control Module)
sp00912	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00913	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp00914	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
sp00915	Proxi Alignment Procedure	TCM (Transmission Control Module)
sp00916	ECU Substitution	ABS (Anti-Lock Braking System)
sp00917	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp00918	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
sp00919	TPMS Reset Calibration	ABS (Anti-Lock Braking System)
sp00920	Fire Protection System Activate	BCM (Body Control Module)
sp00921	LIN Line Request Check	BCM (Body Control Module)
sp00922	Ultrasonic Sensors Check	BCM (Body Control Module)
sp00923	Power Down	RRM (Radio Receiver Module)
sp00924	Power On And Disable User Inputs	RRM (Radio Receiver Module)
sp00925	Reset Parameters To Default	RRM (Radio Receiver Module)
sp00926	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
sp00927	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
sp00928	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp00929	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp00930	Reset Odometer	IC (Instrument Cluster)
sp00931	Reset Service Information	IC (Instrument Cluster)
sp00932	Last Service Date	IC (Instrument Cluster)
sp00933	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp00934	Service Single Pole Calibration	HALF (Haptical Lane Feedback)
sp00935	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
sp00936	Factory VIN code lock	ESM (Electronic Shifter Module)
sp00937	Steering Angle Sensor	EPS (Electric Power Steering)
sp00938	Factory VIN code lock	DTCM (Drive Train Control Module)
sp00939	Proxi Alignment Procedure	DTCM (Drive Train Control Module)
sp00940	Factory VIN code lock	CSWM (Comfort Seat Wheel Module)
sp00941	Intake Manifold Replacement	ECM (Engine Control Module)
sp00942	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
sp00943	Phonic Wheel Replacement	ECM (Engine Control Module)

sp00944	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
sp00945	Neutral Signal Learn	ECM (Engine Control Module)
sp00946	Fuel Supply System Components Replacement	ECM (Engine Control Module)
sp00947	Motorized Throttle Replacement	ECM (Engine Control Module)
sp00948	Factory VIN code lock	ECM (Engine Control Module)
sp00949	Control Unit Reprogramming	ECM (Engine Control Module)
sp00950	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00951	Proxi Alignment Procedure	ECM (Engine Control Module)
sp00952	Injector/S Replacement	ECM (Engine Control Module)
sp00953	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00954	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp00955	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
sp00956	Proxi Alignment Procedure	TCM (Transmission Control Module)
sp00957	ECU Substitution	ABS (Anti-Lock Braking System)
sp00958	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp00959	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
sp00960	TPMS Reset Calibration	ABS (Anti-Lock Braking System)
sp00961	Fire Protection System Activate	BCM (Body Control Module)
sp00962	LIN Line Request Check	BCM (Body Control Module)
sp00963	Ultrasonic Sensors Check	BCM (Body Control Module)
sp00964	Power Down	RRM (Radio Receiver Module)
sp00965	Power On And Disable User Inputs	RRM (Radio Receiver Module)
sp00966	Reset Parameters To Default	RRM (Radio Receiver Module)
sp00967	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
sp00968	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
sp00969	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp00970	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp00971	Reset Odometer	IC (Instrument Cluster)
sp00972	Reset Service Information	IC (Instrument Cluster)
sp00973	Last Service Date	IC (Instrument Cluster)
sp00974	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp00975	Service Single Pole Calibration	HALF (Haptical Lane Feedback)
sp00976	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
sp00977	Factory VIN code lock	ESM (Electronic Shifter Module)
sp00978	Steering Angle Sensor	EPS (Electric Power Steering)
sp00979	Factory VIN code lock	DTCM (Drive Train Control Module)
sp00980	Proxi Alignment Procedure	DTCM (Drive Train Control Module)
sp00981	Factory VIN code lock	CSWM (Comfort Seat Wheel Module)
sp00982	Intake Manifold Replacement	ECM (Engine Control Module)
sp00983	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
sp00984	Phonic Wheel Replacement	ECM (Engine Control Module)
sp00985	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
sp00986	Neutral Signal Learn	ECM (Engine Control Module)

sp00987	Fuel Supply System Components Replacement	ECM (Engine Control Module)
sp00988	Motorized Throttle Replacement	ECM (Engine Control Module)
sp00989	Factory VIN code lock	ECM (Engine Control Module)
sp00990	Control Unit Reprogramming	ECM (Engine Control Module)
sp00991	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00992	Proxi Alignment Procedure	ECM (Engine Control Module)
sp00993	Injector/S Replacement	ECM (Engine Control Module)
sp00994	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp00995	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp00996	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
sp00997	Proxi Alignment Procedure	TCM (Transmission Control Module)
sp00998	ECU Substitution	ABS (Anti-Lock Braking System)
sp00999	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp01000	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
sp01001	TPMS Reset Calibration	ABS (Anti-Lock Braking System)
sp01002	Fire Protection System Activate	BCM (Body Control Module)
sp01003	LIN Line Request Check	BCM (Body Control Module)
sp01004	Ultrasonic Sensors Check	BCM (Body Control Module)
sp01005	Power Down	RRM (Radio Receiver Module)
sp01006	Power On And Disable User Inputs	RRM (Radio Receiver Module)
sp01007	Reset Parameters To Default	RRM (Radio Receiver Module)
sp01008	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
sp01009	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
sp01010	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp01011	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp01012	Reset Odometer	IC (Instrument Cluster)
sp01013	Reset Service Information	IC (Instrument Cluster)
sp01014	Last Service Date	IC (Instrument Cluster)
sp01015	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp01016	Service Single Pole Calibration	HALF (Haptical Lane Feedback)
sp01017	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
sp01018	Factory VIN code lock	ESM (Electronic Shifter Module)
sp01019	Steering Angle Sensor	EPS (Electric Power Steering)
sp01020	Factory VIN code lock	DTCM (Drive Train Control Module)
sp01021	Proxi Alignment Procedure	DTCM (Drive Train Control Module)
sp01022	Factory VIN code lock	CSWM (Comfort Seat Wheel Module)
sp01023	Deactivation Of The Power Limitation Function	ECM (Engine Control Module)
sp01024	Motorised Throttle Replacement	ECM (Engine Control Module)
sp01025	Supercharging System Components Replacement	ECM (Engine Control Module)
sp01026	Intake Manifold Replacement	ECM (Engine Control Module)
sp01027	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
sp01028	Phonic Wheel Replacement	ECM (Engine Control Module)
sp01029	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)

sp01030	Neutral Signal Learn	ECM (Engine Control Module)
sp01031	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp01032	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp01033	Tunnel Lever Replacement	TCM (Transmission Control Module)
sp01034	Levers At Wheel Replacement	TCM (Transmission Control Module)
sp01035	Pump Relay Replacement	TCM (Transmission Control Module)
sp01036	Self-Learnt Functions Reset	TCM (Transmission Control Module)
sp01037	Static Test	ABS (Anti-Lock Braking System)
sp01038	Trailer Hook Presence Disabling	PAM (Parking Assistant Module)
sp01039	Trailer Hook Presence Enabling	PAM (Parking Assistant Module)
sp01040	Reset Odometer	IC (Instrument Cluster)
sp01041	Reset Service Information	IC (Instrument Cluster)
sp01042	Disable Seat Belts Reminder	IC (Instrument Cluster)
sp01043	Enable Seat Belts Reminder	IC (Instrument Cluster)
sp01044	Last Service Date	IC (Instrument Cluster)
sp01045	Flap Actuators Learning Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp01046	Audio Video Signal Detection	ETM (Entertainment Telematic Module)
sp01047	Steering Angle Calibration	EPS (Electric Power Steering)
sp01048	ECU Restart Routine	CTM (Convergence Telematic Module)
sp01049	Fire Protection System Activate	BCM (Body Control Module)
sp01050	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
sp01051	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
sp01052	Differential Pressure Sensor Replac.	ECM (Engine Control Module)
sp01053	Oil Change	ECM (Engine Control Module)
sp01054	Injector Replacement (Per Bank)	ECM (Engine Control Module)
sp01055	Injector Codes Read	ECM (Engine Control Module)
sp01056	Rail Pressure Sensor Replacement	ECM (Engine Control Module)
sp01057	Cylinder 3 Injector Replacement	ECM (Engine Control Module)
sp01058	Cylinder 2 Injector Replacement	ECM (Engine Control Module)
sp01059	Cylinder 1 Injector Replacement	ECM (Engine Control Module)
sp01060	Neutral Signal Learn	ECM (Engine Control Module)
sp01061	Phonic Wheel Replacement	ECM (Engine Control Module)
sp01062	Replacement Lambda Sensor	ECM (Engine Control Module)
sp01063	Speed Limit Setting	ECM (Engine Control Module)
sp01064	Speed Limit Setting	ECM (Engine Control Module)
sp01065	EGR Valve Test	ECM (Engine Control Module)
sp01066	Glow Plug Preheating Circuit Test	ECM (Engine Control Module)
sp01067	Resetting Distance Travelled With Water In Diesel W.Lamp ON	ECM (Engine Control Module)
sp01068	Throttle Valve Test	ECM (Engine Control Module)
sp01069	Resetting Distance Travelled With Water Temperature Warning Lamp ON	ECM (Engine Control Module)
sp01070	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp01071	Fan Cooling Activation	ECM (Engine Control Module)
sp01072	Tunnel Lever Replacement	TCM (Transmission Control Module)

sp01073	Pump Relay Replacement	TCM (Transmission Control Module)
sp01074	Self-Learnt Functions Reset	TCM (Transmission Control Module)
sp01075	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp01076	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
sp01077	Steering Angle Sensor Calibration	ABS (Anti-Lock Braking System)
sp01078	Write Front And Rear Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
sp01079	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
sp01080	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
sp01081	ECU SERIAL NUMBER Management	TPMS (Tire Pressure Monitoring System)
sp01082	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp01083	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01084	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01085	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01086	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01087	Power Down	RADIO (RADIO)
sp01088	Power On And Disable User Inputs	RADIO (RADIO)
sp01089	Reset Parameters To Default	RADIO (RADIO)
sp01090	Trailer Hook Presence Disabling	PAM (Parking Assistant Module)
sp01091	Trailer Hook Presence Enabling	PAM (Parking Assistant Module)
sp01092	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
sp01093	Reset Odometer	IPC (Instrument Panel Cluster)
sp01094	Reset Service Information	IPC (Instrument Panel Cluster)
sp01095	Last Service Date	IPC (Instrument Panel Cluster)
sp01096	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
sp01097	Flap Actuators Learning Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp01098	Power Down	ETM (Entertainment Telematic Module)
sp01099	Power On And Disable User Inputs	ETM (Entertainment Telematic Module)
sp01100	Reset Parameters To Default	ETM (Entertainment Telematic Module)
sp01101	Audio Video Signal Detection	ETM (Entertainment Telematic Module)
sp01102	ECU Restart Routine	CTM (Convergence Telematic Module)
sp01103	Fire Protection System Activate	BCM (Body Control Module)
sp01104	Speed Limit Setting	ECM (Engine Control Module)
sp01105	Vehicle Configuration Reset	ECM (Engine Control Module)
sp01106	Reset Adaptative Parameter	ECM (Engine Control Module)
sp01107	Tunnel Lever Replacement	TCM (Transmission Control Module)
sp01108	Pump Relay Replacement	TCM (Transmission Control Module)
sp01109	Self-Learnt Functions Reset	TCM (Transmission Control Module)
sp01110	Inlet Valve Calibration	ABS (Anti-Lock Braking System)
sp01111	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp01112	Pilot Valve Calibration	ABS (Anti-Lock Braking System)
sp01113	Brake Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
sp01114	Steering Angle Sensor Calibration	ABS (Anti-Lock Braking System)
sp01115	Write Front And Rear Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)

sp01116	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
sp01117	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
sp01118	ECU SERIAL NUMBER Management	TPMS (Tire Pressure Monitoring System)
sp01119	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp01120	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01121	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01122	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01123	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01124	Trailer Hook Presence Disabling	PAM (Parking Assistant Module)
sp01125	Trailer Hook Presence Enabling	PAM (Parking Assistant Module)
sp01126	Reset Odometer	IC (Instrument Cluster)
sp01127	Reset Service Information	IC (Instrument Cluster)
sp01128	Disable Seat Belts Reminder	IC (Instrument Cluster)
sp01129	Enable Seat Belts Reminder	IC (Instrument Cluster)
sp01130	Last Service Date	IC (Instrument Cluster)
sp01131	Flap Actuators Learning Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp01132	Fire Protection System Activate	BCM (Body Control Module)
sp01133	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
sp01134	Differential Pressure Sensor Replac.	ECM (Engine Control Module)
sp01135	Oil Change	ECM (Engine Control Module)
sp01136	Rail Pressure Sensor Replacement	ECM (Engine Control Module)
sp01137	Phonic Wheel Replacement	ECM (Engine Control Module)
sp01138	Replacement Lambda Sensor	ECM (Engine Control Module)
sp01139	Injector Replacement (Per Bank)	ECM (Engine Control Module)
sp01140	Injector Codes Read	ECM (Engine Control Module)
sp01141	Cylinder 3 Injector Replacement	ECM (Engine Control Module)
sp01142	Cylinder 2 Injector Replacement	ECM (Engine Control Module)
sp01143	Cylinder 1 Injector Replacement	ECM (Engine Control Module)
sp01144	Speed Limit Setting	ECM (Engine Control Module)
sp01145	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp01146	Fan Cooling Activation	ECM (Engine Control Module)
sp01147	EGR Valve Test	ECM (Engine Control Module)
sp01148	Resetting Distance Travelled With Water In Diesel W.Lamp ON	ECM (Engine Control Module)
sp01149	Throttle Valve Test	ECM (Engine Control Module)
sp01150	Resetting Distance Travelled With Water Temperature Warning Lamp ON	ECM (Engine Control Module)
sp01151	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
sp01152	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp01153	Static Test	ABS (Anti-Lock Braking System)
sp01154	Steering Angle Sensor Calibration	ABS (Anti-Lock Braking System)
sp01155	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
sp01156	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
sp01157	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01158	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)

sp01159	ECU SERIAL NUMBER Management	TPMS (Tire Pressure Monitoring System)
sp01160	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp01161	Write Front And Rear Axle Nominal Tire Pressure	TPMS (Tire Pressure Monitoring System)
sp01162	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01163	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01164	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01165	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01166	Power Down	RADIO (RADIO)
sp01167	Power On And Disable User Inputs	RADIO (RADIO)
sp01168	Reset Parameters To Default	RADIO (RADIO)
sp01169	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp01170	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp01171	Reset Odometer	IC (Instrument Cluster)
sp01172	Reset Service Information	IC (Instrument Cluster)
sp01173	Disable Seat Belts Reminder	IC (Instrument Cluster)
sp01174	Enable Seat Belts Reminder	IC (Instrument Cluster)
sp01175	Last Service Date	IC (Instrument Cluster)
sp01176	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp01177	Power Down	ETM (Entertainment Telematic Module)
sp01178	Power On And Disable User Inputs	ETM (Entertainment Telematic Module)
sp01179	Reset Parameters To Default	ETM (Entertainment Telematic Module)
sp01180	Audio Video Signal Detection	ETM (Entertainment Telematic Module)
sp01181	Service Single Pole Calibration	HALF (Haptical Lane Feedback)
sp01182	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
sp01183	Differential Pressure Sensor Replac.	ECM (Engine Control Module)
sp01184	Oil Change	ECM (Engine Control Module)
sp01185	Rail Pressure Sensor Replacement	ECM (Engine Control Module)
sp01186	Phonic Wheel Replacement	ECM (Engine Control Module)
sp01187	Replacement Lambda Sensor	ECM (Engine Control Module)
sp01188	Injector Replacement (Per Bank)	ECM (Engine Control Module)
sp01189	Injector Codes Read	ECM (Engine Control Module)
sp01190	Cylinder 3 Injector Replacement	ECM (Engine Control Module)
sp01191	Cylinder 2 Injector Replacement	ECM (Engine Control Module)
sp01192	Cylinder 1 Injector Replacement	ECM (Engine Control Module)
sp01193	Speed Limit Setting	ECM (Engine Control Module)
sp01194	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp01195	Fan Cooling Activation	ECM (Engine Control Module)
sp01196	EGR Valve Test	ECM (Engine Control Module)
sp01197	Resetting Distance Travelled With Water In Diesel W.Lamp ON	ECM (Engine Control Module)
sp01198	Throttle Valve Test	ECM (Engine Control Module)
sp01199	Resetting Distance Travelled With Water Temperature Warning Lamp ON	ECM (Engine Control Module)
sp01200	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
sp01201	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)

sp01202	Static Test	ABS (Anti-Lock Braking System)
sp01203	Steering Angle Sensor Calibration	ABS (Anti-Lock Braking System)
sp01204	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
sp01205	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
sp01206	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01207	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01208	ECU SERIAL NUMBER Management	TPMS (Tire Pressure Monitoring System)
sp01209	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp01210	Write Front And Rear Axle Nominal Tire Pressure	TPMS (Tire Pressure Monitoring System)
sp01211	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01212	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01213	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01214	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01215	Power Down	RADIO (RADIO)
sp01216	Power On And Disable User Inputs	RADIO (RADIO)
sp01217	Reset Parameters To Default	RADIO (RADIO)
sp01218	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp01219	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp01220	Reset Odometer	IC (Instrument Cluster)
sp01221	Reset Service Information	IC (Instrument Cluster)
sp01222	Disable Seat Belts Reminder	IC (Instrument Cluster)
sp01223	Enable Seat Belts Reminder	IC (Instrument Cluster)
sp01224	Last Service Date	IC (Instrument Cluster)
sp01225	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp01226	Service Single Pole Calibration	HALF (Haptical Lane Feedback)
sp01227	Power Down	ETM (Entertainment Telematic Module)
sp01228	Power On And Disable User Inputs	ETM (Entertainment Telematic Module)
sp01229	Reset Parameters To Default	ETM (Entertainment Telematic Module)
sp01230	Audio Video Signal Detection	ETM (Entertainment Telematic Module)
sp01231	Resetting Distance Travelled With Water In Diesel W.Lamp ON	ECM (Engine Control Module)
sp01232	Resetting Distance Travelled With Water Temperature Warning Lamp ON	ECM (Engine Control Module)
sp01233	Fan Cooling Activation	ECM (Engine Control Module)
sp01234	Neutral Signal Learn	ECM (Engine Control Module)
sp01235	Injector Codes Read	ECM (Engine Control Module)
sp01236	Nox Replacement	ECM (Engine Control Module)
sp01237	Factory VIN code lock	ECM (Engine Control Module)
sp01238	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
sp01239	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
sp01240	Injector Replacement (Per Bank)	ECM (Engine Control Module)
sp01241	Cylinder 1 Injector Replacement	ECM (Engine Control Module)
sp01242	Cylinder 2 Injector Replacement	ECM (Engine Control Module)
sp01243	Cylinder 3 Injector Replacement	ECM (Engine Control Module)
sp01244	Replacement Lambda Sensor	ECM (Engine Control Module)

sp01245	Oil Change	ECM (Engine Control Module)
sp01246	Differential Pressure Sensor Replac.	ECM (Engine Control Module)
sp01247	Rail Pressure Sensor Replacement	ECM (Engine Control Module)
sp01248	Replacement Of EGR Valve	ECM (Engine Control Module)
sp01249	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
sp01250	Glow Plug Preheating Circuit Test	ECM (Engine Control Module)
sp01251	EGR Valve Test	ECM (Engine Control Module)
sp01252	EGR Low Pressure Valve Test	ECM (Engine Control Module)
sp01253	Throttle Valve Test	ECM (Engine Control Module)
sp01254	Proxi Alignment Procedure	ECM (Engine Control Module)
sp01255	Neutral Position Self Learning.	TCM (Transmission Control Module)
sp01256	Clear Self-Learning Data	TCM (Transmission Control Module)
sp01257	Gearbox Replacement	TCM (Transmission Control Module)
sp01258	Static Test	ABS (Anti-Lock Braking System)
sp01259	Power Down	RRM (Radio Receiver Module)
sp01260	Power On And Disable User Inputs	RRM (Radio Receiver Module)
sp01261	Reset Parameters To Default	RRM (Radio Receiver Module)
sp01262	Trailer Hook Presence Disabling	PAM (Parking Assistant Module)
sp01263	Trailer Hook Presence Enabling	PAM (Parking Assistant Module)
sp01264	Reset Service Information	IC (Instrument Cluster)
sp01265	Reset Odometer	IC (Instrument Cluster)
sp01266	Last Service Date	IC (Instrument Cluster)
sp01267	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp01268	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
sp01269	Factory VIN code lock	ESM (Electronic Shifter Module)
sp01270	Resetting Distance Travelled With Water In Diesel W.Lamp ON	ECM (Engine Control Module)
sp01271	Resetting Distance Travelled With Water Temperature Warning Lamp ON	ECM (Engine Control Module)
sp01272	Fan Cooling Activation	ECM (Engine Control Module)
sp01273	Neutral Signal Learn	ECM (Engine Control Module)
sp01274	Injector Codes Read	ECM (Engine Control Module)
sp01275	Nox Replacement	ECM (Engine Control Module)
sp01276	Factory VIN code lock	ECM (Engine Control Module)
sp01277	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
sp01278	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
sp01279	Injector Replacement (Per Bank)	ECM (Engine Control Module)
sp01280	Cylinder 1 Injector Replacement	ECM (Engine Control Module)
sp01281	Cylinder 2 Injector Replacement	ECM (Engine Control Module)
sp01282	Cylinder 3 Injector Replacement	ECM (Engine Control Module)
sp01283	Replacement Lambda Sensor	ECM (Engine Control Module)
sp01284	Oil Change	ECM (Engine Control Module)
sp01285	Differential Pressure Sensor Replac.	ECM (Engine Control Module)
sp01286	Rail Pressure Sensor Replacement	ECM (Engine Control Module)
sp01287	Replacement Of EGR Valve	ECM (Engine Control Module)

sp01288	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
sp01289	Glow Plug Preheating Circuit Test	ECM (Engine Control Module)
sp01290	EGR Valve Test	ECM (Engine Control Module)
sp01291	EGR Low Pressure Valve Test	ECM (Engine Control Module)
sp01292	Throttle Valve Test	ECM (Engine Control Module)
sp01293	Proxi Alignment Procedure	ECM (Engine Control Module)
sp01294	Neutral Position Self Learning.	TCM (Transmission Control Module)
sp01295	Clear Self-Learning Data	TCM (Transmission Control Module)
sp01296	Gearbox Replacement	TCM (Transmission Control Module)
sp01297	Static Test	ABS (Anti-Lock Braking System)
sp01298	Power Down	RRM (Radio Receiver Module)
sp01299	Power On And Disable User Inputs	RRM (Radio Receiver Module)
sp01300	Reset Parameters To Default	RRM (Radio Receiver Module)
sp01301	Trailer Hook Presence Disabling	PAM (Parking Assistant Module)
sp01302	Trailer Hook Presence Enabling	PAM (Parking Assistant Module)
sp01303	Reset Service Information	IC (Instrument Cluster)
sp01304	Reset Odometer	IC (Instrument Cluster)
sp01305	Last Service Date	IC (Instrument Cluster)
sp01306	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp01307	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
sp01308	Factory VIN code lock	ESM (Electronic Shifter Module)
sp01309	Resetting Distance Travelled With Water In Diesel W. Lamp ON	ECM (Engine Control Module)
sp01310	Resetting Distance Travelled With Water Temperature Warning Lamp ON	ECM (Engine Control Module)
sp01311	Fan Cooling Activation	ECM (Engine Control Module)
sp01312	Neutral Signal Learn	ECM (Engine Control Module)
sp01313	Injector Codes Read	ECM (Engine Control Module)
sp01314	Nox Replacement	ECM (Engine Control Module)
sp01315	Factory VIN code lock	ECM (Engine Control Module)
sp01316	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
sp01317	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
sp01318	Injector Replacement (Per Bank)	ECM (Engine Control Module)
sp01319	Cylinder 1 Injector Replacement	ECM (Engine Control Module)
sp01320	Cylinder 2 Injector Replacement	ECM (Engine Control Module)
sp01321	Cylinder 3 Injector Replacement	ECM (Engine Control Module)
sp01322	Replacement Lambda Sensor	ECM (Engine Control Module)
sp01323	Oil Change	ECM (Engine Control Module)
sp01324	Differential Pressure Sensor Replac.	ECM (Engine Control Module)
sp01325	Rail Pressure Sensor Replacement	ECM (Engine Control Module)
sp01326	Replacement Of EGR Valve	ECM (Engine Control Module)
sp01327	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
sp01328	Glow Plug Preheating Circuit Test	ECM (Engine Control Module)
sp01329	EGR Valve Test	ECM (Engine Control Module)
sp01330	EGR Low Pressure Valve Test	ECM (Engine Control Module)

sp01331	Throttle Valve Test	ECM (Engine Control Module)
sp01332	Proxi Alignment Procedure	ECM (Engine Control Module)
sp01333	Neutral Position Self Learning.	TCM (Transmission Control Module)
sp01334	Clear Self-Learning Data	TCM (Transmission Control Module)
sp01335	Gearbox Replacement	TCM (Transmission Control Module)
sp01336	Static Test	ABS (Anti-Lock Braking System)
sp01337	Power Down	RRM (Radio Receiver Module)
sp01338	Power On And Disable User Inputs	RRM (Radio Receiver Module)
sp01339	Reset Parameters To Default	RRM (Radio Receiver Module)
sp01340	Trailer Hook Presence Disabling	PAM (Parking Assistant Module)
sp01341	Trailer Hook Presence Enabling	PAM (Parking Assistant Module)
sp01342	Reset Service Information	IC (Instrument Cluster)
sp01343	Reset Odometer	IC (Instrument Cluster)
sp01344	Last Service Date	IC (Instrument Cluster)
sp01345	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp01346	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
sp01347	Factory VIN code lock	ESM (Electronic Shifter Module)
sp01348	Differential Pressure Sensor Replac.	ECM (Engine Control Module)
sp01349	Oil Change	ECM (Engine Control Module)
sp01350	Injector Replacement (Per Bank)	ECM (Engine Control Module)
sp01351	Injector Codes Read	ECM (Engine Control Module)
sp01352	Rail Pressure Sensor Replacement	ECM (Engine Control Module)
sp01353	Cylinder 3 Injector Replacement	ECM (Engine Control Module)
sp01354	Cylinder 2 Injector Replacement	ECM (Engine Control Module)
sp01355	Cylinder 1 Injector Replacement	ECM (Engine Control Module)
sp01356	Phonic Wheel Replacement	ECM (Engine Control Module)
sp01357	Replacement Lambda Sensor	ECM (Engine Control Module)
sp01358	Neutral Signal Learn	ECM (Engine Control Module)
sp01359	EGR Valve Test	ECM (Engine Control Module)
sp01360	Glow Plug Preheating Circuit Test	ECM (Engine Control Module)
sp01361	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp01362	Resetting Distance Travelled With Water In Diesel W.Lamp ON	ECM (Engine Control Module)
sp01363	Throttle Valve Test	ECM (Engine Control Module)
sp01364	Resetting Distance Travelled With Water Temperature Warning Lamp ON	ECM (Engine Control Module)
sp01365	Fan Cooling Activation	ECM (Engine Control Module)
sp01366	Speed Limit Setting	ECM (Engine Control Module)
sp01367	Tunnel Lever Replacement	TCM (Transmission Control Module)
sp01368	Pump Relay Replacement	TCM (Transmission Control Module)
sp01369	Self-Learnt Functions Reset	TCM (Transmission Control Module)
sp01370	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
sp01371	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp01372	Static Test	ABS (Anti-Lock Braking System)
sp01373	Trailer Hook Presence Disabling	PAM (Parking Aid Module)

sp01374	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp01375	Reset Odometer	IC (Instrument Cluster)
sp01376	Enable Seat Belts Reminder	IC (Instrument Cluster)
sp01377	Disable Seat Belts Reminder	IC (Instrument Cluster)
sp01378	ECU Restart Routine	CTM (Convergence Telematic Module)
sp01379	Differential Pressure Sensor Replac.	ECM (Engine Control Module)
sp01380	Oil Change	ECM (Engine Control Module)
sp01381	Injector Replacement (Per Bank)	ECM (Engine Control Module)
sp01382	Injector Codes Read	ECM (Engine Control Module)
sp01383	Rail Pressure Sensor Replacement	ECM (Engine Control Module)
sp01384	Cylinder 3 Injector Replacement	ECM (Engine Control Module)
sp01385	Cylinder 2 Injector Replacement	ECM (Engine Control Module)
sp01386	Cylinder 1 Injector Replacement	ECM (Engine Control Module)
sp01387	Phonic Wheel Replacement	ECM (Engine Control Module)
sp01388	Replacement Lambda Sensor	ECM (Engine Control Module)
sp01389	Neutral Signal Learn	ECM (Engine Control Module)
sp01390	EGR Valve Test	ECM (Engine Control Module)
sp01391	Glow Plug Preheating Circuit Test	ECM (Engine Control Module)
sp01392	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp01393	Resetting Distance Travelled With Water In Diesel W.Lamp ON	ECM (Engine Control Module)
sp01394	Throttle Valve Test	ECM (Engine Control Module)
sp01395	Resetting Distance Travelled With Water Temperature Warning Lamp ON	ECM (Engine Control Module)
sp01396	Fan Cooling Activation	ECM (Engine Control Module)
sp01397	Speed Limit Setting	ECM (Engine Control Module)
sp01398	Tunnel Lever Replacement	TCM (Transmission Control Module)
sp01399	Pump Relay Replacement	TCM (Transmission Control Module)
sp01400	Self-Learnt Functions Reset	TCM (Transmission Control Module)
sp01401	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
sp01402	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp01403	Static Test	ABS (Anti-Lock Braking System)
sp01404	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp01405	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp01406	Reset Odometer	IC (Instrument Cluster)
sp01407	Enable Seat Belts Reminder	IC (Instrument Cluster)
sp01408	Disable Seat Belts Reminder	IC (Instrument Cluster)
sp01409	ECU Restart Routine	CTM (Convergence Telematic Module)
sp01410	Air Flow Meter Replacement	PCM (Powertrain Control Module)
sp01411	DPF Reset Option	PCM (Powertrain Control Module)
sp01412	Lambda Sensor Replace	PCM (Powertrain Control Module)
sp01413	Reset Of Lambda Values	PCM (Powertrain Control Module)
sp01414	Reset Oil Change Indicator	PCM (Powertrain Control Module)
sp01415	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
sp01416	Service Diesel Particulate Filter Regeneration	PCM (Powertrain Control Module)

sp01417	Throttle Valve Learn	PCM (Powertrain Control Module)
sp01418	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
sp01419	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
sp01420	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
sp01421	Rollover Detection	SRS (Supplemental Inflatable Restraint System, ORC)
sp01422	Activate Driver And Passenger Head Restraint	SRS (Supplemental Inflatable Restraint System, ORC)
sp01423	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
sp01424	Actuator Calibration Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp01425	Initialize EPPM	EPPM (Electronic Pedestrian Protection Module)
sp01426	Configure License Plate Size	EPB (Electrical Parking Brake)
sp01427	System Wiring Test	EPB (Electrical Parking Brake)
sp01428	Auto Door Lock	BCM (Body Control Module)
sp01429	Program Tire Size	BCM (Body Control Module)
sp01430	Exit Shipping Mode	BCM (Body Control Module)
sp01431	Air Flow Meter Replacement	PCM (Powertrain Control Module)
sp01432	DPF Reset Option	PCM (Powertrain Control Module)
sp01433	Lambda Sensor Replace	PCM (Powertrain Control Module)
sp01434	Reset Of Lambda Values	PCM (Powertrain Control Module)
sp01435	Reset Oil Change Indicator	PCM (Powertrain Control Module)
sp01436	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
sp01437	Service Diesel Particulate Filter Regeneration	PCM (Powertrain Control Module)
sp01438	Throttle Valve Learn	PCM (Powertrain Control Module)
sp01439	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
sp01440	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
sp01441	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
sp01442	Rollover Detection	SRS (Supplemental Inflatable Restraint System, ORC)
sp01443	Activate Driver And Passenger Head Restraint	SRS (Supplemental Inflatable Restraint System, ORC)
sp01444	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01445	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01446	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01447	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01448	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
sp01449	Activate TPM High Gain Mode	TPMS (Tire Pressure Monitoring System)
sp01450	TPM Sensor Position Parameter Update	TPMS (Tire Pressure Monitoring System)
sp01451	Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp01452	Actuator Calibration Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp01453	Initialize EPPM	EPPM (Electronic Pedestrian Protection Module)
sp01454	Configure License Plate Size	EPB (Electrical Parking Brake)
sp01455	System Wiring Test	EPB (Electrical Parking Brake)
sp01456	Auto Door Lock	BCM (Body Control Module)
sp01457	Program Tire Size	BCM (Body Control Module)
sp01458	Exit Shipping Mode	BCM (Body Control Module)
sp01459	Cam Crank Relearn	PCM (Powertrain Control Module)

sp01460	Check PCM Odometer	PCM (Powertrain Control Module)
sp01461	Quicklearn (62TE)	PCM (Powertrain Control Module)
sp01462	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
sp01463	Reset Memory	PCM (Powertrain Control Module)
sp01464	Write Pinion Factor	PCM (Powertrain Control Module)
sp01465	EGR System Test	PCM (Powertrain Control Module)
sp01466	ETC Throttle Follower Test	PCM (Powertrain Control Module)
sp01467	Set Engine RPM	PCM (Powertrain Control Module)
sp01468	Shift Lever Position Test (62TE)	PCM (Powertrain Control Module)
sp01469	Shift Lever Position Test (Non-RFE)	PCM (Powertrain Control Module)
sp01470	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
sp01471	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
sp01472	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
sp01473	Rollover Detection	SRS (Supplemental Inflatable Restraint System, ORC)
sp01474	Activate Driver And Passenger Head Restraint	SRS (Supplemental Inflatable Restraint System, ORC)
sp01475	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01476	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01477	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01478	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01479	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
sp01480	Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp01481	Actuator Calibration Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp01482	Initialize EPPM	EPPM (Electronic Pedestrian Protection Module)
sp01483	Configure License Plate Size	EPB (Electrical Parking Brake)
sp01484	System Wiring Test	EPB (Electrical Parking Brake)
sp01485	Auto Door Lock	BCM (Body Control Module)
sp01486	Program Tire Size	BCM (Body Control Module)
sp01487	Exit Shipping Mode	BCM (Body Control Module)
sp01488	Air Flow Meter Replacement	PCM (Powertrain Control Module)
sp01489	DPF Reset Option	PCM (Powertrain Control Module)
sp01490	Lambda Sensor Replace	PCM (Powertrain Control Module)
sp01491	Reset Of Lambda Values	PCM (Powertrain Control Module)
sp01492	Reset Oil Change Indicator	PCM (Powertrain Control Module)
sp01493	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
sp01494	Service Diesel Particulate Filter Regeneration	PCM (Powertrain Control Module)
sp01495	Throttle Valve Learn	PCM (Powertrain Control Module)
sp01496	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
sp01497	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
sp01498	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
sp01499	Rollover Detection	SRS (Supplemental Inflatable Restraint System, ORC)
sp01500	Activate Driver And Passenger Head Restraint	SRS (Supplemental Inflatable Restraint System, ORC)
sp01501	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01502	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)

sp01503	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01504	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01505	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
sp01506	Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp01507	Actuator Calibration Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp01508	Initialize EPPM	EPPM (Electronic Pedestrian Protection Module)
sp01509	Configure License Plate Size	EPB (Electrical Parking Brake)
sp01510	System Wiring Test	EPB (Electrical Parking Brake)
sp01511	Auto Door Lock	BCM (Body Control Module)
sp01512	Program Tire Size	BCM (Body Control Module)
sp01513	Exit Shipping Mode	BCM (Body Control Module)
sp01514	Air Flow Meter Replacement	PCM (Powertrain Control Module)
sp01515	DPF Reset Option	PCM (Powertrain Control Module)
sp01516	Lambda Sensor Replace	PCM (Powertrain Control Module)
sp01517	Reset Of Lambda Values	PCM (Powertrain Control Module)
sp01518	Reset Oil Change Indicator	PCM (Powertrain Control Module)
sp01519	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
sp01520	Service Diesel Particulate Filter Regeneration	PCM (Powertrain Control Module)
sp01521	Throttle Valve Learn	PCM (Powertrain Control Module)
sp01522	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
sp01523	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
sp01524	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
sp01525	Rollover Detection	SRS (Supplemental Inflatable Restraint System, ORC)
sp01526	Activate Driver And Passenger Head Restraint	SRS (Supplemental Inflatable Restraint System, ORC)
sp01527	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01528	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01529	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01530	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01531	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
sp01532	Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp01533	Actuator Calibration Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp01534	Initialize EPPM	EPPM (Electronic Pedestrian Protection Module)
sp01535	Configure License Plate Size	EPB (Electrical Parking Brake)
sp01536	System Wiring Test	EPB (Electrical Parking Brake)
sp01537	Auto Door Lock	BCM (Body Control Module)
sp01538	Program Tire Size	BCM (Body Control Module)
sp01539	Exit Shipping Mode	BCM (Body Control Module)
sp01540	Air Flow Meter Replacement	PCM (Powertrain Control Module)
sp01541	DPF Reset Option	PCM (Powertrain Control Module)
sp01542	Lambda Sensor Replace	PCM (Powertrain Control Module)
sp01543	Reset Of Lambda Values	PCM (Powertrain Control Module)
sp01544	Reset Oil Change Indicator	PCM (Powertrain Control Module)
sp01545	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)

sp01546	Service Diesel Particulate Filter Regeneration	PCM (Powertrain Control Module)
sp01547	Throttle Valve Learn	PCM (Powertrain Control Module)
sp01548	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
sp01549	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
sp01550	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
sp01551	Rollover Detection	SRS (Supplemental Inflatable Restraint System, ORC)
sp01552	Activate Driver And Passenger Head Restraint	SRS (Supplemental Inflatable Restraint System, ORC)
sp01553	Auto Door Lock	BCM (Body Control Module)
sp01554	Program Tire Size	BCM (Body Control Module)
sp01555	Exit Shipping Mode	BCM (Body Control Module)
sp01556	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01557	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01558	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01559	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
sp01560	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
sp01561	Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
sp01562	Actuator Calibration Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp01563	Configure License Plate Size	EPB (Electrical Parking Brake)
sp01564	System Wiring Test	EPB (Electrical Parking Brake)
sp01565	Air Flow Meter Replacement	PCM (Powertrain Control Module)
sp01566	DPF Reset Option	PCM (Powertrain Control Module)
sp01567	Lambda Sensor Replace	PCM (Powertrain Control Module)
sp01568	Reset Of Lambda Values	PCM (Powertrain Control Module)
sp01569	Reset Oil Change Indicator	PCM (Powertrain Control Module)
sp01570	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
sp01571	Service Diesel Particulate Filter Regeneration	PCM (Powertrain Control Module)
sp01572	Throttle Valve Learn	PCM (Powertrain Control Module)
sp01573	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
sp01574	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
sp01575	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
sp01576	Rollover Detection	SRS (Supplemental Inflatable Restraint System, ORC)
sp01577	Activate Driver And Passenger Head Restraint	SRS (Supplemental Inflatable Restraint System, ORC)
sp01578	Auto Door Lock	BCM (Body Control Module)
sp01579	Program Tire Size	BCM (Body Control Module)
sp01580	Exit Shipping Mode	BCM (Body Control Module)
sp01581	Initialize EPPM	EPPM (Electronic Pedestrian Protection Module)
sp01582	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
sp01583	Actuator Calibration Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp01584	Configure License Plate Size	Electronic Parking(EPB)
sp01585	System Wiring Test	Electronic Parking(EPB)
sp01586	Air Flow Meter Replacement	PCM (Powertrain Control Module)
sp01587	DPF Reset Option	PCM (Powertrain Control Module)
sp01588	Lambda Sensor Replace	PCM (Powertrain Control Module)

sp01589	Reset Of Lambda Values	PCM (Powertrain Control Module)
sp01590	Reset Oil Change Indicator	PCM (Powertrain Control Module)
sp01591	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
sp01592	Service Diesel Particulate Filter Regeneration	PCM (Powertrain Control Module)
sp01593	Throttle Valve Learn	PCM (Powertrain Control Module)
sp01594	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
sp01595	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
sp01596	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
sp01597	Rollover Detection	SRS (Supplemental Inflatable Restraint System, ORC)
sp01598	Activate Driver And Passenger Head Restraint	SRS (Supplemental Inflatable Restraint System, ORC)
sp01599	ECM Proxi Alignment	ECM (Engine Control Module)
sp01600	Reset Adaptative Parameter	ECM (Engine Control Module)
sp01601	Vehicle Configuration Reset	ECM (Engine Control Module)
sp01602	Self Learning Throttle Body Activation	ECM (Engine Control Module)
sp01603	General Stop Actuator	ECM (Engine Control Module)
sp01604	Reset Functions Self Learned	TCM (Transmission Control Module)
sp01605	Disabling All Actuators	TCM (Transmission Control Module)
sp01606	Shutdown Actuators	TCM (Transmission Control Module)
sp01607	Learn Clutches Contact Point	TCM (Transmission Control Module)
sp01608	Quick Learn	TCM (Transmission Control Module)
sp01609	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
sp01610	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
sp01611	MTA Proxi Configuration	TCM (Transmission Control Module)
sp01612	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
sp01613	New Actuators	TCM (Transmission Control Module)
sp01614	Reset TPMS Calibration	ABS (Anti Lock Brakes)
sp01615	ORC Proxi Alignment	ORC (Occupant Restraint)
sp01616	Reset Parameter.	LTM (Low Telematic Module)
sp01617	Reset Parameter.	ETM (Entertainment Telematic Module)
sp01618	Reset Parameter	ETM (Entertainment Telematic Module)
sp01619	Reset Functions Self Learned	DMM (Doors Management Module)
sp01620	Disabling All Actuators	DMM (Doors Management Module)
sp01621	Shutdown Actuators	DMM (Doors Management Module)
sp01622	Learn Clutches Contact Point	DMM (Doors Management Module)
sp01623	Quick Learn	DMM (Doors Management Module)
sp01624	Hydraulic Circuit Depressurization	DMM (Doors Management Module)
sp01625	Bleed Hydraulic Circuit	DMM (Doors Management Module)
sp01626	MTA Proxi Configuration	DMM (Doors Management Module)
sp01627	ECU Replacement With Value Transfer	DMM (Doors Management Module)
sp01628	New Actuators	DMM (Doors Management Module)
sp01629	Lock Doors Command	BCM (Body Control Module)
sp01630	Wind Shield Wiper	BCM (Body Control Module)
sp01631	Rear Window Washer Command	BCM (Body Control Module)

sp01632	Unlock Doors Command	BCM (Body Control Module)
sp01633	Rear Window Wiper Command	BCM (Body Control Module)
sp01634	Siren Command	BCM (Body Control Module)
sp01635	ECM Proxi Alignment	ECM (Engine Control Module)
sp01636	Reset Adaptative Parameter	ECM (Engine Control Module)
sp01637	Vehicle Configuration Reset	ECM (Engine Control Module)
sp01638	Self Learning Throttle Body Activation	ECM (Engine Control Module)
sp01639	General Stop Actuator	ECM (Engine Control Module)
sp01640	Reset Functions Self Learned	TCM (Transmission Control Module)
sp01641	Disabling All Actuators	TCM (Transmission Control Module)
sp01642	Shutdown Actuators	TCM (Transmission Control Module)
sp01643	Learn Clutches Contact Point	TCM (Transmission Control Module)
sp01644	Quick Learn	TCM (Transmission Control Module)
sp01645	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
sp01646	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
sp01647	MTA Proxi Configuration	TCM (Transmission Control Module)
sp01648	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
sp01649	New Actuators	TCM (Transmission Control Module)
sp01650	Reset TPMS Calibration	ABS (Anti Lock Brakes)
sp01651	ORC Proxi Alignment	ORC (Occupant Restraint)
sp01652	Reset Parameter.	LTM (Low Telematic Module)
sp01653	Reset Parameter.	ETM (Entertainment Telematic Module)
sp01654	Reset Parameter	ETM (Entertainment Telematic Module)
sp01655	Reset Functions Self Learned	DMM (Doors Management Module)
sp01656	Disabling All Actuators	DMM (Doors Management Module)
sp01657	Shutdown Actuators	DMM (Doors Management Module)
sp01658	Learn Clutches Contact Point	DMM (Doors Management Module)
sp01659	Quick Learn	DMM (Doors Management Module)
sp01660	Hydraulic Circuit Depressurization	DMM (Doors Management Module)
sp01661	Bleed Hydraulic Circuit	DMM (Doors Management Module)
sp01662	MTA Proxi Configuration	DMM (Doors Management Module)
sp01663	ECU Replacement With Value Transfer	DMM (Doors Management Module)
sp01664	New Actuators	DMM (Doors Management Module)
sp01665	Lock Doors Command	BCM (Body Control Module)
sp01666	Wind Shield Wiper	BCM (Body Control Module)
sp01667	Rear Window Washer Command	BCM (Body Control Module)
sp01668	Unlock Doors Command	BCM (Body Control Module)
sp01669	Rear Window Wiper Command	BCM (Body Control Module)
sp01670	Siren Command	BCM (Body Control Module)
sp01671	ECM Proxi Alignment	ECM (Engine Control Module)
sp01672	Reset Adaptative Parameter	ECM (Engine Control Module)
sp01673	Vehicle Configuration Reset	ECM (Engine Control Module)
sp01674	Self Learning Throttle Body Activation	ECM (Engine Control Module)

sp01675	General Stop Actuator	ECM (Engine Control Module)
sp01676	Reset Functions Self Learned	TCM (Transmission Control Module)
sp01677	Disabling All Actuators	TCM (Transmission Control Module)
sp01678	Shutdown Actuators	TCM (Transmission Control Module)
sp01679	Learn Clutches Contact Point	TCM (Transmission Control Module)
sp01680	Quick Learn	TCM (Transmission Control Module)
sp01681	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
sp01682	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
sp01683	MTA Proxi Configuration	TCM (Transmission Control Module)
sp01684	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
sp01685	New Actuators	TCM (Transmission Control Module)
sp01686	Reset TPMS Calibration	ABS (Anti Lock Brakes)
sp01687	ORC Proxi Alignment	ORC (Occupant Restraint)
sp01688	Reset Parameter.	LTM (Low Telematic Module)
sp01689	Reset Parameter.	ETM (Entertainment Telematic Module)
sp01690	Reset Parameter	ETM (Entertainment Telematic Module)
sp01691	Reset Functions Self Learned	DMM (Doors Management Module)
sp01692	Disabling All Actuators	DMM (Doors Management Module)
sp01693	Shutdown Actuators	DMM (Doors Management Module)
sp01694	Learn Clutches Contact Point	DMM (Doors Management Module)
sp01695	Quick Learn	DMM (Doors Management Module)
sp01696	Hydraulic Circuit Depressurization	DMM (Doors Management Module)
sp01697	Bleed Hydraulic Circuit	DMM (Doors Management Module)
sp01698	MTA Proxi Configuration	DMM (Doors Management Module)
sp01699	ECU Replacement With Value Transfer	DMM (Doors Management Module)
sp01700	New Actuators	DMM (Doors Management Module)
sp01701	Lock Doors Command	BCM (Body Control Module)
sp01702	Wind Shield Wiper	BCM (Body Control Module)
sp01703	Rear Window Washer Command	BCM (Body Control Module)
sp01704	Unlock Doors Command	BCM (Body Control Module)
sp01705	Rear Window Wiper Command	BCM (Body Control Module)
sp01706	Siren Command	BCM (Body Control Module)
sp01707	ECM Proxi Alignment	ECM (Engine Control Module)
sp01708	Reset Adaptative Parameter	ECM (Engine Control Module)
sp01709	Vehicle Configuration Reset	ECM (Engine Control Module)
sp01710	Self Learning Throttle Body Activation	ECM (Engine Control Module)
sp01711	General Stop Actuator	ECM (Engine Control Module)
sp01712	Reset Functions Self Learned	TCM (Transmission Control Module)
sp01713	Disabling All Actuators	TCM (Transmission Control Module)
sp01714	Shutdown Actuators	TCM (Transmission Control Module)
sp01715	Learn Clutches Contact Point	TCM (Transmission Control Module)
sp01716	Quick Learn	TCM (Transmission Control Module)
sp01717	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)

sp01718	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
sp01719	MTA Proxi Configuration	TCM (Transmission Control Module)
sp01720	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
sp01721	New Actuators	TCM (Transmission Control Module)
sp01722	Reset TPMS Calibration	ABS (Anti Lock Brakes)
sp01723	ORC Proxi Alignment	ORC (Occupant Restraint)
sp01724	Reset Parameter.	LTM (Low Telematic Module)
sp01725	Reset Parameter.	ETM (Entertainment Telematic Module)
sp01726	Reset Parameter	ETM (Entertainment Telematic Module)
sp01727	Reset Functions Self Learned	DMM (Doors Management Module)
sp01728	Disabling All Actuators	DMM (Doors Management Module)
sp01729	Shutdown Actuators	DMM (Doors Management Module)
sp01730	Learn Clutches Contact Point	DMM (Doors Management Module)
sp01731	Quick Learn	DMM (Doors Management Module)
sp01732	Hydraulic Circuit Depressurization	DMM (Doors Management Module)
sp01733	Bleed Hydraulic Circuit	DMM (Doors Management Module)
sp01734	MTA Proxi Configuration	DMM (Doors Management Module)
sp01735	ECU Replacement With Value Transfer	DMM (Doors Management Module)
sp01736	New Actuators	DMM (Doors Management Module)
sp01737	Lock Doors Command	BCM (Body Control Module)
sp01738	Wind Shield Wiper	BCM (Body Control Module)
sp01739	Rear Window Washer Command	BCM (Body Control Module)
sp01740	Unlock Doors Command	BCM (Body Control Module)
sp01741	Rear Window Wiper Command	BCM (Body Control Module)
sp01742	Siren Command	BCM (Body Control Module)
sp01743	ECM Proxi Alignment	ECM (Engine Control Module)
sp01744	Reset Adaptative Parameter	ECM (Engine Control Module)
sp01745	Vehicle Configuration Reset	ECM (Engine Control Module)
sp01746	Self Learning Throttle Body Activation	ECM (Engine Control Module)
sp01747	General Stop Actuator	ECM (Engine Control Module)
sp01748	Reset Functions Self Learned	TCM (Transmission Control Module)
sp01749	Disabling All Actuators	TCM (Transmission Control Module)
sp01750	Shutdown Actuators	TCM (Transmission Control Module)
sp01751	Learn Clutches Contact Point	TCM (Transmission Control Module)
sp01752	Quick Learn	TCM (Transmission Control Module)
sp01753	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
sp01754	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
sp01755	MTA Proxi Configuration	TCM (Transmission Control Module)
sp01756	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
sp01757	New Actuators	TCM (Transmission Control Module)
sp01758	Reset TPMS Calibration	ABS (Anti Lock Brakes)
sp01759	ORC Proxi Alignment	ORC (Occupant Restraint)
sp01760	Reset Parameter.	LTM (Low Telematic Module)

sp01761	Reset Parameter.	ETM (Entertainment Telematic Module)
sp01762	Reset Parameter	ETM (Entertainment Telematic Module)
sp01763	Reset Functions Self Learned	DMM (Doors Management Module)
sp01764	Disabling All Actuators	DMM (Doors Management Module)
sp01765	Shutdown Actuators	DMM (Doors Management Module)
sp01766	Learn Clutches Contact Point	DMM (Doors Management Module)
sp01767	Quick Learn	DMM (Doors Management Module)
sp01768	Hydraulic Circuit Depressurization	DMM (Doors Management Module)
sp01769	Bleed Hydraulic Circuit	DMM (Doors Management Module)
sp01770	MTA Proxi Configuration	DMM (Doors Management Module)
sp01771	ECU Replacement With Value Transfer	DMM (Doors Management Module)
sp01772	New Actuators	DMM (Doors Management Module)
sp01773	Lock Doors Command	BCM (Body Control Module)
sp01774	Wind Shield Wiper	BCM (Body Control Module)
sp01775	Rear Window Washer Command	BCM (Body Control Module)
sp01776	Unlock Doors Command	BCM (Body Control Module)
sp01777	Rear Window Wiper Command	BCM (Body Control Module)
sp01778	Siren Command	BCM (Body Control Module)
sp01779	ECM Proxi Alignment	ECM (Engine Control Module)
sp01780	Reset Adaptative Parameter	ECM (Engine Control Module)
sp01781	Vehicle Configuration Reset	ECM (Engine Control Module)
sp01782	Self Learning Throttle Body Activation	ECM (Engine Control Module)
sp01783	General Stop Actuator	ECM (Engine Control Module)
sp01784	Reset Functions Self Learned	TCM (Transmission Control Module)
sp01785	Disabling All Actuators	TCM (Transmission Control Module)
sp01786	Shutdown Actuators	TCM (Transmission Control Module)
sp01787	Learn Clutches Contact Point	TCM (Transmission Control Module)
sp01788	Quick Learn	TCM (Transmission Control Module)
sp01789	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
sp01790	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
sp01791	MTA Proxi Configuration	TCM (Transmission Control Module)
sp01792	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
sp01793	New Actuators	TCM (Transmission Control Module)
sp01794	Reset TPMS Calibration	ABS (Anti Lock Brakes)
sp01795	ORC Proxi Alignment	ORC (Occupant Restraint)
sp01796	Reset Parameter.	LTM (Low Telematic Module)
sp01797	Reset Parameter.	ETM (Entertainment Telematic Module)
sp01798	Reset Parameter	ETM (Entertainment Telematic Module)
sp01799	Reset Functions Self Learned	DMM (Doors Management Module)
sp01800	Disabling All Actuators	DMM (Doors Management Module)
sp01801	Shutdown Actuators	DMM (Doors Management Module)
sp01802	Learn Clutches Contact Point	DMM (Doors Management Module)
sp01803	Quick Learn	DMM (Doors Management Module)

sp01804	Hydraulic Circuit Depressurization	DMM (Doors Management Module)
sp01805	Bleed Hydraulic Circuit	DMM (Doors Management Module)
sp01806	MTA Proxi Configuration	DMM (Doors Management Module)
sp01807	ECU Replacement With Value Transfer	DMM (Doors Management Module)
sp01808	New Actuators	DMM (Doors Management Module)
sp01809	Lock Doors Command	BCM (Body Control Module)
sp01810	Wind Shield Wiper	BCM (Body Control Module)
sp01811	Rear Window Washer Command	BCM (Body Control Module)
sp01812	Unlock Doors Command	BCM (Body Control Module)
sp01813	Rear Window Wiper Command	BCM (Body Control Module)
sp01814	Siren Command	BCM (Body Control Module)
sp01815	Impone AF Gasoline	ECM (Engine Control Module)
sp01816	Impone AF Learning	ECM (Engine Control Module)
sp01817	ECM Proxi Alignment	ECM (Engine Control Module)
sp01818	Vehicle Configuration Reset	ECM (Engine Control Module)
sp01819	Self Learning Throttle Body Activation	ECM (Engine Control Module)
sp01820	General Stop Actuator	ECM (Engine Control Module)
sp01821	Impone AF Alcool	ECM (Engine Control Module)
sp01822	Fuel Circuit Purge	ECM (Engine Control Module)
sp01823	Purge Fuel Circuit Reset	ECM (Engine Control Module)
sp01824	Clutch Pedal Learning	ECM (Engine Control Module)
sp01825	Reset Adaptative Parameter	ECM (Engine Control Module)
sp01826	Reset Functions Self Learned	TCM (Transmission Control Module)
sp01827	Disabling All Actuators	TCM (Transmission Control Module)
sp01828	Shutdown Actuators	TCM (Transmission Control Module)
sp01829	Learn Clutches Contact Point	TCM (Transmission Control Module)
sp01830	Quick Learn	TCM (Transmission Control Module)
sp01831	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
sp01832	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
sp01833	MTA Proxi Configuration	TCM (Transmission Control Module)
sp01834	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
sp01835	New Actuators	TCM (Transmission Control Module)
sp01836	Reset TPMS Calibration	ABS (Anti-Lock Braking System)
sp01837	ORC Proxi Alignment	SRS (Supplemental Inflatable Restraint System, ORC)
sp01838	Lock Doors Command	BCM (Body Control Module)
sp01839	Wind Shield Wiper	BCM (Body Control Module)
sp01840	Rear Window Washer Command	BCM (Body Control Module)
sp01841	Unlock Doors Command	BCM (Body Control Module)
sp01842	Rear Window Wiper Command	BCM (Body Control Module)
sp01843	Siren Command	BCM (Body Control Module)
sp01844	Reset Functions Self Learned	DMM (Doors Management Module)
sp01845	Disabling All Actuators	DMM (Doors Management Module)
sp01846	Shutdown Actuators	DMM (Doors Management Module)

sp01847	Learn Clutches Contact Point	DMM (Doors Management Module)
sp01848	Quick Learn	DMM (Doors Management Module)
sp01849	Hydraulic Circuit Depressurization	DMM (Doors Management Module)
sp01850	Bleed Hydraulic Circuit	DMM (Doors Management Module)
sp01851	MTA Proxi Configuration	DMM (Doors Management Module)
sp01852	ECU Replacement With Value Transfer	DMM (Doors Management Module)
sp01853	New Actuators	DMM (Doors Management Module)
sp01854	Impone AF Gasoline	ECM (Engine Control Module)
sp01855	Impone AF Learning	ECM (Engine Control Module)
sp01856	ECM Proxi Alignment	ECM (Engine Control Module)
sp01857	Vehicle Configuration Reset	ECM (Engine Control Module)
sp01858	Self Learning Throttle Body Activation	ECM (Engine Control Module)
sp01859	General Stop Actuator	ECM (Engine Control Module)
sp01860	Impone AF Alcool	ECM (Engine Control Module)
sp01861	Fuel Circuit Purge	ECM (Engine Control Module)
sp01862	Purge Fuel Circuit Reset	ECM (Engine Control Module)
sp01863	Clutch Pedal Learning	ECM (Engine Control Module)
sp01864	Reset Adaptative Parameter	ECM (Engine Control Module)
sp01865	Reset Functions Self Learned	TCM (Transmission Control Module)
sp01866	Disabling All Actuators	TCM (Transmission Control Module)
sp01867	Shutdown Actuators	TCM (Transmission Control Module)
sp01868	Learn Clutches Contact Point	TCM (Transmission Control Module)
sp01869	Quick Learn	TCM (Transmission Control Module)
sp01870	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
sp01871	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
sp01872	MTA Proxi Configuration	TCM (Transmission Control Module)
sp01873	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
sp01874	New Actuators	TCM (Transmission Control Module)
sp01875	Reset TPMS Calibration	ABS (Anti-Lock Braking System)
sp01876	ORC Proxi Alignment	SRS (Supplemental Inflatable Restraint System, ORC)
sp01877	Lock Doors Command	BCM (Body Control Module)
sp01878	Wind Shield Wiper	BCM (Body Control Module)
sp01879	Rear Window Washer Command	BCM (Body Control Module)
sp01880	Unlock Doors Command	BCM (Body Control Module)
sp01881	Rear Window Wiper Command	BCM (Body Control Module)
sp01882	Siren Command	BCM (Body Control Module)
sp01883	Reset Functions Self Learned	DMM (Doors Management Module)
sp01884	Disabling All Actuators	DMM (Doors Management Module)
sp01885	Shutdown Actuators	DMM (Doors Management Module)
sp01886	Learn Clutches Contact Point	DMM (Doors Management Module)
sp01887	Quick Learn	DMM (Doors Management Module)
sp01888	Hydraulic Circuit Depressurization	DMM (Doors Management Module)
sp01889	Bleed Hydraulic Circuit	DMM (Doors Management Module)

sp01890	MTA Proxi Configuration	DMM (Doors Management Module)
sp01891	ECU Replacement With Value Transfer	DMM (Doors Management Module)
sp01892	New Actuators	DMM (Doors Management Module)
sp01893	Impone AF Gasoline	ECM (Engine Control Module)
sp01894	Impone AF Learning	ECM (Engine Control Module)
sp01895	ECM Proxi Alignment	ECM (Engine Control Module)
sp01896	Vehicle Configuration Reset	ECM (Engine Control Module)
sp01897	Self Learning Throttle Body Activation	ECM (Engine Control Module)
sp01898	General Stop Actuator	ECM (Engine Control Module)
sp01899	Impone AF Alcool	ECM (Engine Control Module)
sp01900	Fuel Circuit Purge	ECM (Engine Control Module)
sp01901	Purge Fuel Circuit Reset	ECM (Engine Control Module)
sp01902	Clutch Pedal Learning	ECM (Engine Control Module)
sp01903	Reset Adaptative Parameter	ECM (Engine Control Module)
sp01904	Reset Functions Self Learned	TCM (Transmission Control Module)
sp01905	Disabling All Actuators	TCM (Transmission Control Module)
sp01906	Shutdown Actuators	TCM (Transmission Control Module)
sp01907	Learn Clutches Contact Point	TCM (Transmission Control Module)
sp01908	Quick Learn	TCM (Transmission Control Module)
sp01909	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
sp01910	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
sp01911	MTA Proxi Configuration	TCM (Transmission Control Module)
sp01912	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
sp01913	New Actuators	TCM (Transmission Control Module)
sp01914	Reset TPMS Calibration	ABS (Anti-Lock Braking System)
sp01915	ORC Proxi Alignment	SRS (Supplemental Inflatable Restraint System, ORC)
sp01916	Lock Doors Command	BCM (Body Control Module)
sp01917	Wind Shield Wiper	BCM (Body Control Module)
sp01918	Rear Window Washer Command	BCM (Body Control Module)
sp01919	Unlock Doors Command	BCM (Body Control Module)
sp01920	Rear Window Wiper Command	BCM (Body Control Module)
sp01921	Siren Command	BCM (Body Control Module)
sp01922	Reset Functions Self Learned	DMM (Doors Management Module)
sp01923	Disabling All Actuators	DMM (Doors Management Module)
sp01924	Shutdown Actuators	DMM (Doors Management Module)
sp01925	Learn Clutches Contact Point	DMM (Doors Management Module)
sp01926	Quick Learn	DMM (Doors Management Module)
sp01927	Hydraulic Circuit Depressurization	DMM (Doors Management Module)
sp01928	Bleed Hydraulic Circuit	DMM (Doors Management Module)
sp01929	MTA Proxi Configuration	DMM (Doors Management Module)
sp01930	ECU Replacement With Value Transfer	DMM (Doors Management Module)
sp01931	New Actuators	DMM (Doors Management Module)
sp01932	Impone AF Gasoline	ECM (Engine Control Module)

sp01933	Impone AF Learning	ECM (Engine Control Module)
sp01934	ECM Proxi Alignment	ECM (Engine Control Module)
sp01935	Vehicle Configuration Reset	ECM (Engine Control Module)
sp01936	Self Learning Throttle Body Activation	ECM (Engine Control Module)
sp01937	General Stop Actuator	ECM (Engine Control Module)
sp01938	Impone AF Alcool	ECM (Engine Control Module)
sp01939	Fuel Circuit Purge	ECM (Engine Control Module)
sp01940	Purge Fuel Circuit Reset	ECM (Engine Control Module)
sp01941	Clutch Pedal Learning	ECM (Engine Control Module)
sp01942	Reset Adaptative Parameter	ECM (Engine Control Module)
sp01943	Reset Functions Self Learned	TCM (Transmission Control Module)
sp01944	Disabling All Actuators	TCM (Transmission Control Module)
sp01945	Shutdown Actuators	TCM (Transmission Control Module)
sp01946	Learn Clutches Contact Point	TCM (Transmission Control Module)
sp01947	Quick Learn	TCM (Transmission Control Module)
sp01948	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
sp01949	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
sp01950	MTA Proxi Configuration	TCM (Transmission Control Module)
sp01951	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
sp01952	New Actuators	TCM (Transmission Control Module)
sp01953	Reset TPMS Calibration	ABS (Anti-Lock Braking System)
sp01954	ORC Proxi Alignment	SRS (Supplemental Inflatable Restraint System, ORC)
sp01955	Lock Doors Command	BCM (Body Control Module)
sp01956	Wind Shield Wiper	BCM (Body Control Module)
sp01957	Rear Window Washer Command	BCM (Body Control Module)
sp01958	Unlock Doors Command	BCM (Body Control Module)
sp01959	Rear Window Wiper Command	BCM (Body Control Module)
sp01960	Siren Command	BCM (Body Control Module)
sp01961	Reset Functions Self Learned	DMM (Doors Management Module)
sp01962	Disabling All Actuators	DMM (Doors Management Module)
sp01963	Shutdown Actuators	DMM (Doors Management Module)
sp01964	Learn Clutches Contact Point	DMM (Doors Management Module)
sp01965	Quick Learn	DMM (Doors Management Module)
sp01966	Hydraulic Circuit Depressurization	DMM (Doors Management Module)
sp01967	Bleed Hydraulic Circuit	DMM (Doors Management Module)
sp01968	MTA Proxi Configuration	DMM (Doors Management Module)
sp01969	ECU Replacement With Value Transfer	DMM (Doors Management Module)
sp01970	New Actuators	DMM (Doors Management Module)
sp01971	Impone AF Gasoline	ECM (Engine Control Module)
sp01972	Impone AF Learning	ECM (Engine Control Module)
sp01973	ECM Proxi Alignment	ECM (Engine Control Module)
sp01974	Vehicle Configuration Reset	ECM (Engine Control Module)
sp01975	Self Learning Throttle Body Activation	ECM (Engine Control Module)

sp01976	General Stop Actuator	ECM (Engine Control Module)
sp01977	Impone AF Alcool	ECM (Engine Control Module)
sp01978	Fuel Circuit Purge	ECM (Engine Control Module)
sp01979	Purge Fuel Circuit Reset	ECM (Engine Control Module)
sp01980	Clutch Pedal Learning	ECM (Engine Control Module)
sp01981	Reset Adaptative Parameter	ECM (Engine Control Module)
sp01982	Reset Functions Self Learned	TCM (Transmission Control Module)
sp01983	Disabling All Actuators	TCM (Transmission Control Module)
sp01984	Shutdown Actuators	TCM (Transmission Control Module)
sp01985	Learn Clutches Contact Point	TCM (Transmission Control Module)
sp01986	Quick Learn	TCM (Transmission Control Module)
sp01987	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
sp01988	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
sp01989	MTA Proxi Configuration	TCM (Transmission Control Module)
sp01990	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
sp01991	New Actuators	TCM (Transmission Control Module)
sp01992	Reset TPMS Calibration	ABS (Anti Lock Brakes)
sp01993	ORC Proxi Alignment	ORC (Occupant Restraint)
sp01994	Reset Functions Self Learned	DMM (Doors Management Module)
sp01995	Disabling All Actuators	DMM (Doors Management Module)
sp01996	Shutdown Actuators	DMM (Doors Management Module)
sp01997	Learn Clutches Contact Point	DMM (Doors Management Module)
sp01998	Quick Learn	DMM (Doors Management Module)
sp01999	Hydraulic Circuit Depressurization	DMM (Doors Management Module)
sp02000	Bleed Hydraulic Circuit	DMM (Doors Management Module)
sp02001	MTA Proxi Configuration	DMM (Doors Management Module)
sp02002	ECU Replacement With Value Transfer	DMM (Doors Management Module)
sp02003	New Actuators	DMM (Doors Management Module)
sp02004	Lock Doors Command	BCM (Body Control Module)
sp02005	Wind Shield Wiper	BCM (Body Control Module)
sp02006	Rear Window Washer Command	BCM (Body Control Module)
sp02007	Unlock Doors Command	BCM (Body Control Module)
sp02008	Rear Window Wiper Command	BCM (Body Control Module)
sp02009	Siren Command	BCM (Body Control Module)
sp02010	Deactivation Of The Power Limitation Function	ECM (Engine Control Module)
sp02011	Fan Cooling Activation	ECM (Engine Control Module)
sp02012	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp02013	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp02014	Gearbox Replacement	TCM (Transmission Control Module)
sp02015	Lever Release Solenoid Command	TCM (Transmission Control Module)
sp02016	Static Test	ABS (Anti-Lock Braking System)
sp02017	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp02018	Trailer Hook Presence Enabling	PAM (Parking Aid Module)

sp02019	Reset Odometer	IC (Instrument Cluster)
sp02020	Reset Service Information	IC (Instrument Cluster)
sp02021	Disable Seat Belts Reminder	IC (Instrument Cluster)
sp02022	Enable Seat Belts Reminder	IC (Instrument Cluster)
sp02023	Last Service Date	IC (Instrument Cluster)
sp02024	Actuator Calibration Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp02025	Fire Protection System Activate	BCM (Body Control Module)
sp02026	Deactivation Of The Power Limitation Function	ECM (Engine Control Module)
sp02027	Fan Cooling Activation	ECM (Engine Control Module)
sp02028	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
sp02029	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp02030	Gearbox Replacement	TCM (Transmission Control Module)
sp02031	Lever Release Solenoid Command	TCM (Transmission Control Module)
sp02032	Static Test	ABS (Anti-Lock Braking System)
sp02033	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp02034	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp02035	Reset Odometer	IC (Instrument Cluster)
sp02036	Reset Service Information	IC (Instrument Cluster)
sp02037	Disable Seat Belts Reminder	IC (Instrument Cluster)
sp02038	Enable Seat Belts Reminder	IC (Instrument Cluster)
sp02039	Last Service Date	IC (Instrument Cluster)
sp02040	Actuator Calibration Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp02041	Fire Protection System Activate	BCM (Body Control Module)
sp02042	Fire Protection System Activate	BCM (Body Control Module)
sp02043	Reset Adaptative Parameters	PCM (Powertrain Control Module)
sp02044	Reset Phases Front	PCM (Powertrain Control Module)
sp02045	Self Learning Throttle Body	PCM (Powertrain Control Module)
sp02046	Tunnel Lever Replacement	TCM (Transmission Control Module)
sp02047	Pump Relay Replacement	TCM (Transmission Control Module)
sp02048	Self-Learnt Functions Reset	TCM (Transmission Control Module)
sp02049	Static Test	ABS (Anti-Lock Braking System)
sp02050	Enable Tow Hook Presence	PTS (Parktronics)
sp02051	Disable Tow Hook Presence	PTS (Parktronics)
sp02052	Reset Odometer	IC (Instrument Cluster)
sp02053	Reset Service Information	IC (Instrument Cluster)
sp02054	Disable Seat Belts Reminder	IC (Instrument Cluster)
sp02055	Last Service Date	IC (Instrument Cluster)
sp02056	Enable Seat Belts Reminder	IC (Instrument Cluster)
sp02057	Flap Actuators Learning Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp02058	Injector Codes Read	ECM (Engine Control Module)
sp02059	Rail Pressure Sensor Replacement	ECM (Engine Control Module)
sp02060	Phonic Wheel Replacement	ECM (Engine Control Module)
sp02061	Replacement Lambda Sensor	ECM (Engine Control Module)

sp02062	Cylinder 1 Injector Replacement	ECM (Engine Control Module)
sp02063	Cylinder 2 Injector Replacement	ECM (Engine Control Module)
sp02064	Cylinder 3 Injector Replacement	ECM (Engine Control Module)
sp02065	Injector Replacement (Per Bank)	ECM (Engine Control Module)
sp02066	Rail Pressure Sensor And Injector/S Replacement	ECM (Engine Control Module)
sp02067	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp02068	Tunnel Lever Replacement	TCM (Transmission Control Module)
sp02069	Levers At Wheel Replacement	TCM (Transmission Control Module)
sp02070	Pump Relay Replacement	TCM (Transmission Control Module)
sp02071	Self-Learnt Functions Reset	TCM (Transmission Control Module)
sp02072	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
sp02073	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp02074	Static Test	ABS (Anti-Lock Braking System)
sp02075	Alarms Deletion	TPMS (Tire Pressure Monitoring System)
sp02076	Antenna Replacement	TPMS (Tire Pressure Monitoring System)
sp02077	Control Unit Activation	TPMS (Tire Pressure Monitoring System)
sp02078	Control Unit Deactivation	TPMS (Tire Pressure Monitoring System)
sp02079	Manual System Configuration	TPMS (Tire Pressure Monitoring System)
sp02080	Automatic Configuration Read	TPMS (Tire Pressure Monitoring System)
sp02081	Wheel Transmitters Learning	TPMS (Tire Pressure Monitoring System)
sp02082	Automatic Configuration Write	TPMS (Tire Pressure Monitoring System)
sp02083	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp02084	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp02085	Enable Seat Belts Reminder	IC (Instrument Cluster)
sp02086	Disable Seat Belts Reminder	IC (Instrument Cluster)
sp02087	Reset Odometer	IC (Instrument Cluster)
sp02088	Reset Service Information	IC (Instrument Cluster)
sp02089	Last Service Date	IC (Instrument Cluster)
sp02090	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp02091	ECU Restart Routine	CTM (Convergence Telematic Module)
sp02092	Fire Protection System Activate	BCM (Body Control Module)
sp02093	Differential Pressure Sensor Replac.	ECM (Engine Control Module)
sp02094	Oil Change	ECM (Engine Control Module)
sp02095	Injector Replacement (Per Bank)	ECM (Engine Control Module)
sp02096	Injector Codes Read	ECM (Engine Control Module)
sp02097	Rail Pressure Sensor Replacement	ECM (Engine Control Module)
sp02098	Cylinder 3 Injector Replacement	ECM (Engine Control Module)
sp02099	Cylinder 2 Injector Replacement	ECM (Engine Control Module)
sp02100	Cylinder 1 Injector Replacement	ECM (Engine Control Module)
sp02101	Phonic Wheel Replacement	ECM (Engine Control Module)
sp02102	Replacement Lambda Sensor	ECM (Engine Control Module)
sp02103	Neutral Signal Learn	ECM (Engine Control Module)
sp02104	EGR Valve Test	ECM (Engine Control Module)

sp02105	Glow Plug Preheating Circuit Test	ECM (Engine Control Module)
sp02106	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp02107	Resetting Distance Travelled With Water In Diesel W.Lamp ON	ECM (Engine Control Module)
sp02108	Throttle Valve Test	ECM (Engine Control Module)
sp02109	Resetting Distance Travelled With Water Temperature Warning Lamp ON	ECM (Engine Control Module)
sp02110	Fan Cooling Activation	ECM (Engine Control Module)
sp02111	Speed Limit Setting	ECM (Engine Control Module)
sp02112	Tunnel Lever Replacement	TCM (Transmission Control Module)
sp02113	Pump Relay Replacement	TCM (Transmission Control Module)
sp02114	Self-Learnt Functions Reset	TCM (Transmission Control Module)
sp02115	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
sp02116	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
sp02117	Static Test	ABS (Anti-Lock Braking System)
sp02118	Reset Odometer	IC (Instrument Cluster)
sp02119	Enable Seat Belts Reminder	IC (Instrument Cluster)
sp02120	Disable Seat Belts Reminder	IC (Instrument Cluster)
sp02121	ECU Restart Routine	CTM (Convergence Telematic Module)
sp02122	Trailer Hook Presence Disabling	AHM (Additional Heater Module)
sp02123	Trailer Hook Presence Enabling	AHM (Additional Heater Module)
sp02124	Fuel Circuit Purge	ECM (Engine Control Module)
sp02125	General Stop Actuator	ECM (Engine Control Module)
sp02126	Reset Adaptative Parameter	ECM (Engine Control Module)
sp02127	Reset Purge Fuel Circuit	ECM (Engine Control Module)
sp02128	Reset Phonic Wheel Tooth Learn	ECM (Engine Control Module)
sp02129	Reset Camshaft Adaptative	ECM (Engine Control Module)
sp02130	Steering Angle Sensor	EPS (Electric Power Steering)
sp02131	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
sp02132	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
sp02133	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp02134	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp02135	Reset Odometer	IPC (Instrument Panel Cluster)
sp02136	Self Learning Motors Test	HVAC (Heat, Ventilation And A/C)
sp02137	Service Single Pole Calibration	HALF (Haptical Lane Feedback)
sp02138	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
sp02139	Factory VIN code lock	ESM (Electronic Shifter Module)
sp02140	Driver Mirror Axis X Command	DMM (Doors Management Module)
sp02141	Driver Mirror Axis Y Command	DMM (Doors Management Module)
sp02142	Fire Protection System Activate	BCM (Body Control Module)
sp02143	Lock Doors Command	BCM (Body Control Module)
sp02144	Unlock Doors Command	BCM (Body Control Module)
sp02145	Check Siren	BCM (Body Control Module)
sp02146	Siren Command	BCM (Body Control Module)
sp02147	Cargo Unlock Relay	BCM (Body Control Module)

sp02148	Cargo Lock Relay	BCM (Body Control Module)
sp02149	Fuel Circuit Purge	ECM (Engine Control Module)
sp02150	General Stop Actuator	ECM (Engine Control Module)
sp02151	Reset Adaptive Parameter	ECM (Engine Control Module)
sp02152	Reset Purge Fuel Circuit	ECM (Engine Control Module)
sp02153	Reset Phonic Wheel Tooth Learn	ECM (Engine Control Module)
sp02154	Reset Camshaft Adaptive	ECM (Engine Control Module)
sp02155	Steering Angle Sensor	EPS (Electric Power Steering)
sp02156	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
sp02157	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
sp02158	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp02159	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp02160	Reset Odometer	IPC (Instrument Panel Cluster)
sp02161	Self Learning Motors Test	HVAC (Heat, Ventilation And A/C)
sp02162	Service Single Pole Calibration	HALF (Haptical Lane Feedback)
sp02163	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
sp02164	Factory VIN code lock	ESM (Electronic Shifter Module)
sp02165	Driver Mirror Axis X Command	DMM (Doors Management Module)
sp02166	Driver Mirror Axis Y Command	DMM (Doors Management Module)
sp02167	Fire Protection System Activate	BCM (Body Control Module)
sp02168	Lock Doors Command	BCM (Body Control Module)
sp02169	Unlock Doors Command	BCM (Body Control Module)
sp02170	Check Siren	BCM (Body Control Module)
sp02171	Siren Command	BCM (Body Control Module)
sp02172	Cargo Unlock Relay	BCM (Body Control Module)
sp02173	Cargo Lock Relay	BCM (Body Control Module)
sp02174	Fuel Circuit Purge	ECM (Engine Control Module)
sp02175	General Stop Actuator	ECM (Engine Control Module)
sp02176	Reset Adaptive Parameter	ECM (Engine Control Module)
sp02177	Reset Purge Fuel Circuit	ECM (Engine Control Module)
sp02178	Reset Phonic Wheel Tooth Learn	ECM (Engine Control Module)
sp02179	Reset Camshaft Adaptive	ECM (Engine Control Module)
sp02180	Steering Angle Sensor	EPS (Electric Power Steering)
sp02181	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
sp02182	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
sp02183	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp02184	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp02185	Reset Odometer	IPC (Instrument Panel Cluster)
sp02186	Self Learning Motors Test	HVAC (Heat, Ventilation And A/C)
sp02187	Service Single Pole Calibration	HALF (Haptical Lane Feedback)
sp02188	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
sp02189	Factory VIN code lock	ESM (Electronic Shifter Module)
sp02190	Driver Mirror Axis X Command	DMM (Doors Management Module)

sp02191	Driver Mirror Axis Y Command	DMM (Doors Management Module)
sp02192	Fire Protection System Activate	BCM (Body Control Module)
sp02193	Lock Doors Command	BCM (Body Control Module)
sp02194	Unlock Doors Command	BCM (Body Control Module)
sp02195	Check Siren	BCM (Body Control Module)
sp02196	Siren Command	BCM (Body Control Module)
sp02197	Cargo Unlock Relay	BCM (Body Control Module)
sp02198	Cargo Lock Relay	BCM (Body Control Module)
sp02199	Fuel Circuit Purge	ECM (Engine Control Module)
sp02200	General Stop Actuator	ECM (Engine Control Module)
sp02201	Reset Adaptive Parameter	ECM (Engine Control Module)
sp02202	Reset Purge Fuel Circuit	ECM (Engine Control Module)
sp02203	Reset Phonic Wheel Tooth Learn	ECM (Engine Control Module)
sp02204	Reset Camshaft Adaptive	ECM (Engine Control Module)
sp02205	Steering Angle Sensor	EPS (Electric Power Steering)
sp02206	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
sp02207	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
sp02208	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp02209	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp02210	Reset Odometer	IPC (Instrument Panel Cluster)
sp02211	Self Learning Motors Test	HVAC (Heat, Ventilation And A/C)
sp02212	Service Single Pole Calibration	HALF (Haptical Lane Feedback)
sp02213	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
sp02214	Factory VIN code lock	ESM (Electronic Shifter Module)
sp02215	Driver Mirror Axis X Command	DMM (Doors Management Module)
sp02216	Driver Mirror Axis Y Command	DMM (Doors Management Module)
sp02217	Fire Protection System Activate	BCM (Body Control Module)
sp02218	Lock Doors Command	BCM (Body Control Module)
sp02219	Unlock Doors Command	BCM (Body Control Module)
sp02220	Check Siren	BCM (Body Control Module)
sp02221	Siren Command	BCM (Body Control Module)
sp02222	Cargo Unlock Relay	BCM (Body Control Module)
sp02223	Cargo Lock Relay	BCM (Body Control Module)
sp02224	Fuel Circuit Purge	ECM (Engine Control Module)
sp02225	General Stop Actuator	ECM (Engine Control Module)
sp02226	Reset Adaptive Parameter	ECM (Engine Control Module)
sp02227	Reset Purge Fuel Circuit	ECM (Engine Control Module)
sp02228	Reset Phonic Wheel Tooth Learn	ECM (Engine Control Module)
sp02229	Reset Camshaft Adaptive	ECM (Engine Control Module)
sp02230	Steering Angle Sensor	EPS (Electric Power Steering)
sp02231	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
sp02232	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
sp02233	Trailer Hook Presence Disabling	PAM (Parking Aid Module)

sp02234	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp02235	Reset Odometer	IPC (Instrument Panel Cluster)
sp02236	Self Learning Motors Test	HVAC (Heat, Ventilation And A/C)
sp02237	Service Single Pole Calibration	HALF (Haptical Lane Feedback)
sp02238	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
sp02239	Factory VIN code lock	ESM (Electronic Shifter Module)
sp02240	Driver Mirror Axis X Command	DMM (Doors Management Module)
sp02241	Driver Mirror Axis Y Command	DMM (Doors Management Module)
sp02242	Fire Protection System Activate	BCM (Body Control Module)
sp02243	Lock Doors Command	BCM (Body Control Module)
sp02244	Unlock Doors Command	BCM (Body Control Module)
sp02245	Check Siren	BCM (Body Control Module)
sp02246	Siren Command	BCM (Body Control Module)
sp02247	Cargo Unlock Relay	BCM (Body Control Module)
sp02248	Cargo Lock Relay	BCM (Body Control Module)
sp02249	Fuel Circuit Purge	ECM (Engine Control Module)
sp02250	General Stop Actuator	ECM (Engine Control Module)
sp02251	Reset Adaptative Parameter	ECM (Engine Control Module)
sp02252	Reset Purge Fuel Circuit	ECM (Engine Control Module)
sp02253	Reset Phonic Wheel Tooth Learn	ECM (Engine Control Module)
sp02254	Reset Camshaft Adaptative	ECM (Engine Control Module)
sp02255	Clear Self Learning Data	TCM (Transmission Control Module)
sp02256	Neutral Position Self-Learning	TCM (Transmission Control Module)
sp02257	Exit Shipping Mode	BCM (Body Control Module)
sp02258	Lock Doors Command	BCM (Body Control Module)
sp02259	Unlock Doors Command	BCM (Body Control Module)
sp02260	Siren Command	BCM (Body Control Module)
sp02261	Fire Protection System Activate	BCM (Body Control Module)
sp02262	Reset Service Information	IC (Instrument Cluster)
sp02263	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
sp02264	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
sp02265	Service Single Pole Calibration	HALF (Haptical Lane Feedback)
sp02266	Driver Mirror Axis X Command	DMM (Doors Management Module)
sp02267	Driver Mirror Axis Y Command	DMM (Doors Management Module)
sp02268	Steering Angle Sensor	EPS (Electric Power Steering)
sp02269	Trailer Hook Presence Disabling	PAM (Parking Assistant Module)
sp02270	Trailer Hook Presence Enabling	PAM (Parking Assistant Module)
sp02271	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp02272	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
sp02273	Factory VIN code lock	ESM (Electronic Shifter Module)
sp02274	Deactivation Of The Power Limitation Function	ECM (Engine Control Module)
sp02275	Fan Cooling Activation	ECM (Engine Control Module)
sp02276	Self-Adaptive Parameters Reset	ECM (Engine Control Module)

sp02277	Self-Learnt Functions Reset	ECM (Engine Control Module)
sp02278	Gearbox Replacement	TCM (Transmission Control Module)
sp02279	Lever Release Solenoid Command	TCM (Transmission Control Module)
sp02280	Static Test	ABS (Anti-Lock Braking System)
sp02281	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
sp02282	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
sp02283	Reset Odometer	IC (Instrument Cluster)
sp02284	Reset Service Information	IC (Instrument Cluster)
sp02285	Disable Seat Belts Reminder	IC (Instrument Cluster)
sp02286	Enable Seat Belts Reminder	IC (Instrument Cluster)
sp02287	Last Service Date	IC (Instrument Cluster)
sp02288	Actuator Calibration Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
sp02289	Fire Protection System Activate	BCM (Body Control Module)
sp02290	Cam Crank Relearn	PCM (Powertrain Control Module)
sp02291	Check PCM Odometer	PCM (Powertrain Control Module)
sp02292	Quicklearn (62TE)	PCM (Powertrain Control Module)
sp02293	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
sp02294	Reset Memory	PCM (Powertrain Control Module)
sp02295	EGR System Test	PCM (Powertrain Control Module)
sp02296	ETC Throttle Follower Test	PCM (Powertrain Control Module)
sp02297	Set Engine RPM	PCM (Powertrain Control Module)
sp02298	Shift Lever Position Test (62TE)	PCM (Powertrain Control Module)
sp02299	Shift Lever Position Test (Non-RFE)	PCM (Powertrain Control Module)
sp02300	ABS Initialization	ABS (Anti Lock Brakes)
sp02301	Bleed Brakes	ABS (Anti Lock Brakes)
sp02302	Activate Driver And Passenger Head Restraint	ORC (Occupant Restraint)
sp02303	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
sp02304	Reset Odometer	PDM (Passenger Door Module)
sp02305	Reset Service Information	PDM (Passenger Door Module)
sp02306	Disable Seat Belts Reminder	PDM (Passenger Door Module)
sp02307	Enable Seat Belts Reminder	PDM (Passenger Door Module)
sp02308	Actuator Calibration Test	HVAC (Heat, Ventilation And A/C)
sp02309	Auto Door Lock	CCN (Instrument Cluster/Cabin Compartment Node)
sp02310	Auto Door Unlock	CCN (Instrument Cluster/Cabin Compartment Node)
sp02311	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
sp02312	Update Measurement Unit	CCN (Instrument Cluster/Cabin Compartment Node)
sp02313	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
sp02314	Self Test	CCN (Instrument Cluster/Cabin Compartment Node)
sp02315	Cam Crank Relearn	PCM (Powertrain Control Module)
sp02316	Check PCM Odometer	PCM (Powertrain Control Module)
sp02317	Quicklearn (62TE)	PCM (Powertrain Control Module)
sp02318	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
sp02319	Reset Memory	PCM (Powertrain Control Module)

sp02320	EGR System Test	PCM (Powertrain Control Module)
sp02321	ETC Throttle Follower Test	PCM (Powertrain Control Module)
sp02322	Set Engine RPM	PCM (Powertrain Control Module)
sp02323	Shift Lever Position Test (62TE)	PCM (Powertrain Control Module)
sp02324	Shift Lever Position Test (Non-RFE)	PCM (Powertrain Control Module)
sp02325	ABS Initialization	ABS (Anti Lock Brakes)

XTOOL