



# Shenzhen Xtooltech Co., Ltd

## Maybach Function List V21.25

### Tips and Instructions:

**The programming function only supports H6PRO, H6PRO Master ,A80Pro, A80ProMaster, NitroGT, NitroXT Edition products.**

\* This feature is new.

✓ This feature is supported.

× This feature is not supported.

※ This feature is partially supported.

Model	Model Series	Control Unit Groups	System Name	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Read Freeze Frame	Actuation Test	Special Functions	Coding	programming
GLS/GL E-Class	167	Drive	N3/40-Motor electronics "MRD1" for combustion engine "OM654"(CDI)	✓	✓	✓	✓	✓	ACT0001,ACT0005,ACT0006, ACT0321,ACT0008,ACT0009, ACT0010,ACT0322,ACT0011, ACT0012,ACT0016,ACT0018, ACT0022,ACT0023,ACT0024, ACT0026,ACT0000,ACT0338, ACT0339,ACT0340,ACT0341	SP1001,SP1000,SP1130 ,SP1125,SP1131,SP113 2,SP1133,SP1134,SP11 35,SP1136,SP1017,SP1 137,SP1138,SP1024,SP 1139,SP1140,SP1015,S P1141,SP1142,SP1143, SP1144,SP1021,SP1022 ,SP1145,SP1146	×	×
GLS/GL E-Class	167	Drive	Y3/8n4-Transmission control for 9 speed transmission(VGS)	✓	✓	✓	✓	✓	ACT0603,ACT0312,ACT0604, ACT0724,ACT0317	SP1316,SP1320,SP1321 ,SP1310,SP1360,SP131 7,SP1361,SP1305,SP13 62,SP1363,SP1364,SP1 322	×	×
GLS/GL E-Class	167	Seats and Doors	Left front door(LFD)	✓	✓	✓	✓	×	ACT0342,ACT0255,ACT0254, ACT0343,ACT0725,ACT0269, ACT0361,ACT0267,ACT0268, ACT0726,ACT0344,ACT0261, ACT0345,ACT0346,ACT0347, ACT0263,ACT0348,ACT0349, ACT0350,ACT0351,ACT0727, ACT0728,ACT0729	SP1080,SP1147,SP1148	×	×
GLS/GL E-Class	167	Seats and Doors	Right front door(DCU RF)	✓	✓	✓	✓	×	ACT0353,ACT0274,ACT0273, ACT0354,ACT0730,ACT0283, ACT0284,ACT0281,ACT0282, ACT0731,ACT0355,ACT0278, ACT0356,ACT0357,ACT0347, ACT0279,ACT0348,ACT0349, ACT0358,ACT0359,ACT0732, ACT0728,ACT0729	SP1080,SP1147,SP1148	×	×
GLS/GL E-Class	167	Seats and Doors	Left rear door(DCU LR)	✓	✓	✓	✓	×	ACT0360,ACT0361,ACT0362, ACT0363,ACT0733,ACT0698, ACT0347,ACT0364,ACT0734, ACT0366,ACT0735	SP1080,SP1147,SP1148	×	×

GLS/GL E-Class	167	Seats and Doors	Right rear door(DCU RR)	√	√	√	√	×	ACT0367,ACT0368,ACT0369,ACT0370,ACT0736,ACT0702,ACT0347,ACT0371,ACT0365,ACT0737,ACT0738,ACT0366	SP1080,SP1147,SP1148	×	×
GLS/GL E-Class	167	Body	Supplemental restraint system(SRS)	√	√	√	√	√	×	×	×	×
GLS/GL E-Class	167	Information and communication	Cellular telephone(CTEL)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Body	Electronic ignition switch(EZS)	√	√	√	√	×	ACT0372	×	×	×
GLS/GL E-Class	167	Seats and Doors	Electric seat adjustmnet Driver(ESV Driver)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Seats and Doors	Electric seat adjustmnet Driver(ESV Driver)	√	√	√	√	×	ACT0214,ACT0373,ACT0218,ACT0374,ACT0217,ACT0375,ACT0376,ACT0377	SP1075	×	×
GLS/GL E-Class	167	Seats and Doors	Electric seat adjustment Front passenger(ESA Front passenger)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Seats and Doors	Electric seat adjustment Front passenger(ESA Front passenger)	√	√	√	√	×	ACT0230,ACT0378,ACT0234,ACT0379,ACT0233,ACT0380,ACT0381,ACT0382	SP1075	×	×
GLS/GL E-Class	167	Body	Front signal acquisition and actuation module(N10/6)(SAMF)	√	√	√	√	×	ACT0739,ACT0740,ACT0741,ACT0742,ACT0344,ACT0518,ACT0743,ACT0686,ACT0744,ACT0687,ACT0745,ACT0746,ACT0747,ACT0748,ACT0476,ACT0749,ACT0750,ACT0751,ACT0752,ACT0753,ACT0754,ACT0755,ACT0756	×	×	×
GLS/GL E-Class	167	Information and communication	control unit for telematics services(HERMES)	√	√	√	√	×	×	SP1046	×	×
GLS/GL E-Class	167	Seats and Doors	Left rear electrical seat adjustment(ESE RL)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Seats and Doors	Right rear electrical seat adjustment(Right rear ESE)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Body	Rear signal acquisition and actuation module(N10/8)(SAMR)	√	√	√	√	×	ACT0757,ACT0240,ACT0758,ACT0759,ACT0760,ACT0741,ACT0761,ACT0762,ACT0763,ACT0764,ACT0765,ACT0766,ACT0767,ACT0768,ACT0769,ACT0770,ACT0771,ACT0772,ACT0773,ACT0774,ACT0775,ACT0776,ACT0777,ACT0388,ACT0387,ACT0778,ACT0779	×	×	×
GLS/GL E-Class	167	Information and communication	Mobile phone cradle(MTAS)	√	√	√	√	×	×	×	×	×

GLS/GL E-Class	167	Air conditioning	Automatic air conditioning(AAC)	√	√	√	√	×	ACT0182,ACT0428,ACT0183, ACT0780,ACT0781,ACT0204, ACT0782,ACT0003,ACT0186, ACT0190,ACT0676,ACT0783, ACT0189,ACT0784,ACT0785, ACT0188,ACT0786,ACT0787, ACT0788,ACT0674,ACT0789, ACT0673,ACT0790,ACT0791, ACT0792,ACT0793,ACT0794, ACT0795,ACT0796,ACT0797, ACT0666,ACT0667,ACT0790, ACT0791,ACT0792,ACT0793, ACT0794,ACT0795,ACT0796, ACT0797,ACT0798,ACT0799, ACT0790,ACT0791,ACT0792, ACT0793,ACT0794,ACT0795, ACT0797,ACT0663,ACT0666, ACT0667,ACT0790,ACT0791, ACT0795,ACT0796,ACT0798, ACT0799,ACT0194,ACT0658, ACT0659,ACT0660,ACT0661, ACT0664,ACT0665,ACT0800, ACT0801,ACT0802,ACT0803, ACT0804,ACT0805,ACT0806, ACT0798,ACT0799,ACT0666, ACT0667,ACT0807,ACT0808, ACT0809,ACT0810	SP1066,SP1065,SP1067 ,SP1365,SP1163	×	×
GLS/GL E-Class	167	Seats and Doors	Left front multicontour seat(MKS LF)	√	√	√	√	×	ACT0389,ACT0390,ACT0393, ACT0394,ACT0392,ACT0811	×	×	×
GLS/GL E-Class	167	Seats and Doors	Right front multicontour seat(MKS RF)	√	√	√	√	×	ACT0389,ACT0390,ACT0393, ACT0394,ACT0392,ACT0811	×	×	×
GLS/GL E-Class	167	Seats and Doors	Left rear multicontour seat(MKS LF)	√	√	√	√	×	ACT0389,ACT0812,ACT0390, ACT0392,ACT0624	×	×	×
GLS/GL E-Class	167	Seats and Doors	Left rear multicontour seat(MKS LF)	√	√	√	√	×	ACT0389,ACT0812,ACT0390, ACT0392	×	×	×
GLS/GL E-Class	167	Seats and Doors	Right rear multicontour seat(MKS RF)	√	√	√	√	×	ACT0389,ACT0812,ACT0390, ACT0392,ACT0624	×	×	×
GLS/GL E-Class	167	Seats and Doors	Right rear multicontour seat(MKS RF)	√	√	√	√	×	ACT0389,ACT0812,ACT0390, ACT0392	×	×	×
GLS/GL E-Class	167	Seats and Doors	Tailgate control(HKS)	√	√	√	√	×	ACT0172,ACT0395,ACT0173	SP1149	×	×
GLS/GL E-Class	167	Seats and Doors	Pneumatic pump for multicontour seat(PPAMKS)	√	√	√	√	×	ACT0627,ACT0813	×	×	×
GLS/GL E-Class	167	Body	Interior motion sensor(ATA)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Body	Trailer recognition(Trailer recognition module)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Body	Active bell buckle(AGS)	√	√	√	√	×	ACT0814,ACT0815,ACT0816, ACT0817	×	×	×
GLS/GL E-Class	167	Body	Control module Panoramic sliding roof(PSD)	√	√	√	√	×	ACT0818,ACT0208	SP1072	×	×
GLS/GL E-Class	167	Body	Control module Panoramic sliding roof(PSD)	√	√	√	√	×	×	×	×	×

GLS/GL E-Class	167	Body	Panoramic sliding roof(PSD)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Body	Ambiance light(AML)	√	√	√	√	×	ACT0396,ACT0397,ACT0398,ACT0399,ACT0400,ACT0401,ACT0402,ACT0403,ACT0043	SP1150	×	×
GLS/GL E-Class	167	Body	DC/DC converter(DCDC)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Driver assistance system	Outer right rear integrated radar sensor (B92/6)(IRS HRA)	√	√	√	√	×	×	SP1151,SP1152	×	×
GLS/GL E-Class	167	Driver assistance system	Outer left rear integrated radar sensor (B92/11)(IRS HLA)	√	√	√	√	×	×	SP1151,SP1152	×	×
GLS/GL E-Class	167	Information and communication	Controller unit Rear entertainment system(AVE H)	√	√	√	√	×	ACT0819,ACT0820,ACT0821,ACT0822,ACT0823	×	×	×
GLS/GL E-Class	167	Drive	Sound generator for exhaust system(SG SOGE AGA)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Body	Steering wheel electronics(LRE)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Information and communication	Touchpad(TPAD)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Information and communication	Audio or COMAND(Audio)	√	√	√	×	×	×	×	×	×
GLS/GL E-Class	167	Information and communication	Display in left rear passenger compartment(D FOL)	√	√	√	×	×	×	×	×	×
GLS/GL E-Class	167	Information and communication	Display in right rear passenger compartment(D FOR)	√	√	√	×	×	×	×	×	×
GLS/GL E-Class	167	Information and communication	Audio/COMAND display(ZAN)	√	√	√	√	×	ACT0291,ACT0206,ACT0039	×	×	×
GLS/GL E-Class	167	Body	Hand detection(HE)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Information and communication	Mobile phone cradle(MTAS)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Body	Left front reversible emergency tensioning retractor(RevETR LF)	√	√	√	√	×	ACT0209	×	×	×
GLS/GL E-Class	167	Body	Left front reversible emergency tensioning retractor(RevETR LF)	√	√	√	√	×	ACT0209	×	×	×
GLS/GL E-Class	167	Body	Right front reversible emergency tensioning retractor(RevETR RF)	√	√	√	√	×	ACT0213	×	×	×
GLS/GL E-Class	167	Body	Right front reversible emergency tensioning retractor(RevETR RF)	√	√	√	√	×	ACT0213	×	×	×
GLS/GL E-Class	167	Information and communication	Instrument cluster(IC)	√	√	√	√	×	ACT0039,ACT0404,ACT0048,ACT0210,ACT0405,ACT0406,ACT0050,ACT0407	SP1043,SP1044,SP1045	×	×
GLS/GL E-Class	167	Information and communication	Head up display(HUD)	√	√	√	√	×	ACT0210,ACT0212	SP1063	×	×
GLS/GL E-Class	167	Driver assistance system	Backup camera(RFK)	√	√	√	√	×	×	SP1153	×	×
GLS/GL E-Class	167	Driver assistance system	Augmented reality camera(KAR)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Drive	Electric differential lock(EAGGS)	√	√	√	√	×	ACT0824	SP1156	×	×

GLS/GL E-Class	167	Body	Active engine mount(AMLA)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Chassis	AMG DRIVE UNIT(AMG DRVU)	√	√	√	√	×	ACT0408,ACT0409,ACT0410,ACT0411	SP1154,SP1155,SP1156	×	×
GLS/GL E-Class	167	Body	Sound generator for electric vehicle(SOGESTAR2)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Body	Left headlamp(SG SW L)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Body	Right headlamp(SG SW R)	√	√	√	√	×	ACT0293,ACT0292,ACT0297,ACT0299,ACT0300	×	×	×
GLS/GL E-Class	167	Body	LED matrix of left front lamp unit(SG LML VL)	√	√	√	√	×	ACT0299,ACT0825,ACT0826,ACT0300	SP1089,SP1366	×	×
GLS/GL E-Class	167	Body	LED matrix of right front lamp unit(SG-LML-RF)	√	√	√	√	×	ACT0299,ACT0825,ACT0300,ACT0826	SP1367,SP1368	×	×
GLS/GL E-Class	167	Driver assistance system	Tire pressure monitor(N88)(TPM)	√	√	√	√	×	ACT0078,ACT0079,ACT0081,ACT0080	SP1053	×	×
GLS/GL E-Class	167	Driver assistance system	Multifunction camera(mono)(A40/11)(MFK)	√	√	√	√	×	ACT0181,ACT0065	SP1157	×	×
GLS/GL E-Class	167	Body	Direct current charge connection unit(DCCU)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Body	Charger(SG LG)	√	√	√	√	×	ACT0412,ACT0413,ACT0414,ACT0415,ACT0416,ACT0417	×	×	×
GLS/GL E-Class	167	Body	Hand motion sensor(GES)	√	√	√	√	×	ACT0043	×	×	×
GLS/GL E-Class	167	Seats and Doors	Electric step(ARB)	√	√	√	×	×	ACT0827	×	×	×
GLS/GL E-Class	167	Seats and Doors	Seat heating of third seat row(SIH)	√	√	√	√	×	ACT0556,ACT0557,ACT0424	×	×	×
GLS/GL E-Class	167	Body	Multifunction control unit(Multifunction control unit)	√	√	√	√	×	ACT0204	×	×	×
GLS/GL E-Class	167	Body	Battery sensor(B95)(BSN)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Body	Lithium ion battery(LIB)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Body	Lithium ion battery(LIB)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Body	Rain/light sensor(B38/2)(RGLS)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Body	Windshield wiper(FSW)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Body	Garage door opener(A67n2)(GTO)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Body	Overhead control panel(OCP)	√	√	√	√	×	ACT0418,ACT0302,ACT0304,ACT0303,ACT0419	SP1158	×	×
GLS/GL E-Class	167	Body	Anti glare interior rearview mirror(DBE)	√	√	√	√	×	×	×	×	×

GLS/GL E-Class	167	Body	N5 (Armrest heater control unit)(AH)	√	√	√	√	×	ACT0828,ACT0829,ACT0830,ACT0831,ACT0832,ACT0833,ACT0834,ACT0835,ACT0836,ACT0837,ACT0838,ACT0839,ACT0840,ACT0841,ACT0842,ACT0843,ACT0844,ACT0845,ACT0840,ACT0841,ACT0842,ACT0846,ACT0847,ACT0848,ACT0849,ACT0840,ACT0846,ACT0847,ACT0848,ACT0849,ACT0850,ACT0851,ACT0852,ACT0853,ACT0854,ACT0855,ACT0856,ACT0857,ACT0858,ACT0859,ACT0840,ACT0843,ACT0850,ACT0851,ACT0852,ACT0853,ACT0854,ACT0855,ACT0856,ACT0857,ACT0859,ACT0848,ACT0849,ACT0860	SP1159,SP1160	×	×
GLS/GL E-Class	167	Body	N25/6 (Rear passenger compartment seat heater control unit)(SIH REAR)	√	√	√	√	×	ACT0861,ACT0862,ACT0863,ACT0864,ACT0865	×	×	×
GLS/GL E-Class	167	Seats and Doors	S47/2 (Driver door switch module)(DSCV)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Seats and Doors	S47/3 (Front passenger door switch module)(DSCA)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Seats and Doors	S22 (Driver"s door seat adjustment switch)(ESV)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Seats and Doors	S23 (Front passenger door seat adjustment switch)(ESA)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Seats and Doors	S51/1 (Driver seat climate control switch group)(ACC-SWG DRIVE)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Seats and Doors	S51/2 (Front passenger seat climate control switch group)(ACC-SWG)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Seats and Doors	Left rear door(DCU LR)	√	√	√	×	×	×	×	×	×
GLS/GL E-Class	167	Seats and Doors	Right rear door(DCU RR)	√	√	√	×	×	×	×	×	×
GLS/GL E-Class	167	Seats and Doors	Right rear seat heater switch(S51/4)	√	√	√	×	×	×	×	×	×
GLS/GL E-Class	167	Seats and Doors	"Driver" seat heater(SIH FS)	√	√	√	√	×	×	SP1161,SP1162	×	×
GLS/GL E-Class	167	Seats and Doors	"Front passenger" seat heater(SIH BFS)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Seats and Doors	Seat heater in left rear passenger compartment(SIH LR)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Seats and Doors	S158/11 (Left 2nd seat row seats switch group)(SSWG LR2)	√	√	√	×	×	×	×	×	×
GLS/GL E-Class	167	Seats and Doors	S158/12 (Right 2nd seat row seats switch group)(SSWG RR2)	√	√	√	×	×	×	×	×	×

GLS/GL E-Class	167	Seats and Doors	S158/13 (Seats switch group (left load compartment))(SSWG L)	√	√	√	×	×	×	×	×	×
GLS/GL E-Class	167	Seats and Doors	S158/14 (Seats switch group (right load compartment))(SSWG R)	√	√	√	×	×	×	×	×	×
GLS/GL E-Class	167	Seats and Doors	Seat heater in right rear passenger compartment(SIH RR)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Body	Alarm siren(H3/1)(AS)	√	√	√	√	×	ACT0309,ACT0476,ACT0477	×	×	×
GLS/GL E-Class	167	Seats and Doors	Massage function of seat surface in left front seat(MFSF-LF)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Seats and Doors	Massage function of seat surface in right front seat(MFSF-RF)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Seats and Doors	Massage function in left front seat(PMCU-LF)	√	√	√	√	×	ACT0866	×	×	×
GLS/GL E-Class	167	Seats and Doors	Massage function in right front seat(PMCU-RF)	√	√	√	√	×	ACT0866	×	×	×
GLS/GL E-Class	167	Seats and Doors	Massage function in left rear seat(PMCU-LR)	√	√	√	√	×	ACT0866	×	×	×
GLS/GL E-Class	167	Seats and Doors	Massage function in left rear seat(PMCU-LR)	√	√	√	√	×	ACT0866	×	×	×
GLS/GL E-Class	167	Seats and Doors	Massage function in right rear seat(PMCU-RR)	√	√	√	√	×	ACT0866	×	×	×
GLS/GL E-Class	167	Seats and Doors	Massage function in right rear seat(PMCU-RR)	√	√	√	√	×	ACT0866	×	×	×
GLS/GL E-Class	167	Air conditioning	N61 (Windshield heater control unit)(WSH)	√	√	√	×	×	×	×	×	×
GLS/GL E-Class	167	Air conditioning	Automatic air conditioning(AAC)	√	√	√	×	×	×	×	×	×
GLS/GL E-Class	167	Air conditioning	Stationary heater(STH)	√	√	√	√	×	ACT0202	×	×	×
GLS/GL E-Class	167	Air conditioning	Automatic air conditioning(AAC)	√	√	√	×	×	×	×	×	×
GLS/GL E-Class	167	Air conditioning	Automatic air conditioning(AAC)	√	√	√	√	×	ACT0427,ACT0182,ACT0428,ACT0186,ACT0194,ACT0195,ACT0197,ACT0196,ACT0028,ACT0188	SP1065,SP1066,SP1067,SP1163,SP1164	×	×
GLS/GL E-Class	167	Air conditioning	Radio remote control of stationary heater(TSTH)	√	√	√	√	×	ACT0203,ACT0429	×	×	×
GLS/GL E-Class	167	Information and communication	Off-road operating panel(ORBF)	√	√	√	×	×	×	×	×	×
GLS/GL E-Class	167	Body	Weight sensing system(N110)(WSS)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Body	N38 (Rear switching module)(RCM)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Body	Lithium ion battery(LIB)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Seats and Doors	S51/5 (Left 3rd seat row seat heating switch)(SIH LR3)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Seats and Doors	S51/6 (Right 3rd seat row seat heating switch)(SIH RR3)	√	√	√	√	×	×	×	×	×

GLS/GL E-Class	167	Information and communication	Sound system(SOUND)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Driver assistance system	Multifunction camera(stereo)(A40/13)(MFK)	√	√	√	√	×	ACT0181,ACT0065	SP1063	×	×
GLS/GL E-Class	167	Driver assistance system	DISTRONIC(DTR)	√	√	√	√	×	×	SP1165,SP1166	×	×
GLS/GL E-Class	167	Driver assistance system	COLLISION PREVENTION ASSIST(SG AWF)	√	√	√	√	×	×	SP1063	×	×
GLS/GL E-Class	167	Driver assistance system	Radar sensors control unit(SGR)	√	√	√	√	×	ACT0430,ACT0431	SP1167,SP1168,SP1169	×	×
GLS/GL E-Class	167	Driver assistance system	PARKTRONIC(PTS)	√	√	√	√	×	ACT0432,ACT0306	SP1170	×	×
GLS/GL E-Class	167	Chassis	AIRmatic	√	√	√	√	×	ACT0867,ACT0642,ACT0868,ACT0039,ACT0167,ACT0168,ACT0169,ACT0170,ACT0869,ACT0870,ACT0871,ACT0872,ACT0873	SP1061	×	×
GLS/GL E-Class	167	Chassis	AIRmatic	√	√	√	√	×	ACT0874,ACT0875,ACT0039,ACT0167,ACT0168,ACT0169,ACT0170,ACT0869,ACT0870,ACT0871,ACT0872	SP1061	×	×
GLS/GL E-Class	167	Chassis	Adaptive damping system(N51/5)(ADS)	√	√	√	√	×	×	SP1061	×	×
GLS/GL E-Class	167	Chassis	Adaptive damping system(N51/5)(ADS)	√	√	√	√	×	×	SP1061	×	×
GLS/GL E-Class	167	Chassis	Electric power steering(ES )	√	√	√	√	×	×	SP1071	×	×
GLS/GL E-Class	167	Body	Steering column module(SCM)	√	√	√	√	×	ACT0061	×	×	×
GLS/GL E-Class	167	Drive	Transfer case(VG)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Driver assistance system	Left front short range radar(NBR LF)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Driver assistance system	Right front short range radar(NBR RF)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Driver assistance system	Right rear short-range radar(NBR RR)	√	√	√	√	×	×	SP1176	×	×
GLS/GL E-Class	167	Driver assistance system	Left rear short-range radar(NBR LR)	√	√	√	√	×	×	SP1177	×	×
GLS/GL E-Class	167	Chassis	Left front suspension strut(LWR-LF)	√	√	√	√	×	ACT0647	×	×	×
GLS/GL E-Class	167	Chassis	Left front suspension strut(LWR-LF)	√	√	√	√	×	ACT0876,ACT0877,ACT0878	×	×	×
GLS/GL E-Class	167	Chassis	Right front suspension strut(LWR-RF)	√	√	√	√	×	ACT0648	×	×	×
GLS/GL E-Class	167	Chassis	Right front suspension strut(LWR-RF)	√	√	√	√	×	ACT0876,ACT0877,ACT0878	×	×	×
GLS/GL E-Class	167	Chassis	Left rear suspension strut(EHS LR)	√	√	√	√	×	ACT0876,ACT0877,ACT0878	×	×	×
GLS/GL E-Class	167	Chassis	Right rear suspension strut(LWR-RR)	√	√	√	√	×	ACT0876,ACT0877,ACT0878	×	×	×
GLS/GL E-Class	167	Chassis	Electric stability program(N30/4)(ESP)	√	√	√	√	√	ACT0069,ACT0070,ACT0879,ACT0285,ACT0286,ACT0287,ACT0288	SP1178,SP1179,SP1180,SP1181,SP1182,SP1183,SP1369,SP1185,SP1370,SP1187	×	×

GLS/GL E-Class	167	Chassis	Electric stability program(N30/4)(ESP)	√	√	√	√	√	ACT0069,ACT0070,ACT0623,ACT0285,ACT0286,ACT0287,ACT0288	SP1178,SP1179,SP1180,SP1181,SP1182,SP1183,SP1184,SP1185,SP1370,SP1187	×	×
GLS/GL E-Class	167	Drive	Fuel pump(FSCU)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Drive	Selective catalytic reduction(SCR)	√	√	√	√	×	ACT0435,ACT0436,ACT0437,ACT0438,ACT0439,ACT0440	SP1188,SP1189	×	×
GLS/GL E-Class	167	Drive	N127 (Drivetrain control unit)(PTCU)	√	√	√	×	×	×	×	×	×
GLS/GL E-Class	167	Drive	N127 (Drivetrain control unit)(PTCU)	√	√	√	√	×	ACT0028,ACT0441,ACT0442,ACT0443,ACT0444,ACT0007,ACT0445,ACT0446,ACT0447,ACT0448,ACT0449,ACT0450,ACT0451,ACT0452,ACT0453,ACT0454,ACT0455,ACT0456,ACT0457,ACT0458,ACT0459,ACT0460,ACT0461	SP1190,SP1042,SP1025,SP1191,SP1192,SP1193,SP1194,SP1195,SP1196	×	×
GLS/GL E-Class	167	Drive	Power electronics(SG EM)	√	√	√	√	×	ACT0462,ACT0463	SP1197,SP1198,SP1199,SP1200,SP1151	×	×
GLS/GL E-Class	167	Drive	Integrated starter alternator(ISG)	√	√	√	√	×	×	SP1371	×	×
GLS/GL E-Class	167	Drive	Integrated starter alternator(ISG)	√	√	√	×	×	×	×	×	×
GLS/GL E-Class	167	Body	Battery management system(BMS)	√	√	√	√	×	ACT0464,ACT0465,ACT0466	SP1201	×	×
GLS/GL E-Class	167	Air conditioning	Automatic air conditioning(AAC)	√	√	√	√	×	×	×	×	×
GLS/GL E-Class	167	Seats and Doors	Left rear seat heater switch(S51/3)	√	√	√	×	×	×	×	×	×
GLS/GL E-Class	167	Drive	N3/10-Motor electronics "MED1775" for combustion engine "M178"(ME)	√	√	√	√	√	ACT0002,ACT0028,ACT0442,ACT0443,ACT0444,ACT0880,ACT0881,ACT0446,ACT0491,ACT0487,ACT0486,ACT0489,ACT0488,ACT0326,ACT0882,ACT0883,ACT0447,ACT0025,ACT0884,ACT0722,ACT0723,ACT0022,ACT0885,ACT0886	SP1017,SP1109,SP1110,SP1372,SP1373,SP1374,SP1112,SP1206,SP1207,SP1001,SP1191,SP1375,SP1205,SP1000	×	×
GLS/GL E-Class	167	Drive	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)	√	√	√	√	√	ACT0002,ACT0005,ACT0471,ACT0322,ACT0323,ACT0324,ACT0325,ACT0326,ACT0025,ACT0327,ACT0328,ACT0329,ACT0022,ACT0024,ACT0330,ACT0331,ACT0332,ACT0333,ACT0334	SP1108,SP1109,SP1110,SP1017,SP1111,SP1112,SP1001,SP1002,SP1004,SP1114,SP1116,SP1042,SP1113,SP1115,SP1029,SP1000	×	×
GLS/GL E-Class	167	Drive	N3/10-Motor electronics "MED41" for combustion engine "M260/M264"(ME)	√	√	√	√	√	ACT0330,ACT0003,ACT0470,ACT0323,ACT0324,ACT0333,ACT0025,ACT0328,ACT0331,ACT0332,ACT0004,ACT0005,ACT0467,ACT0002,ACT0471,ACT0329,ACT0022,ACT0325,ACT0472	SP1203,SP1117	×	×

GLS/GL E-Class	167	Drive	N3/10-Motor electronics "MRG1" for combustion engine "M256"(ME)	√	√	√	√	√	ACT0002,ACT0025,ACT0005,ACT0022,ACT0467,ACT0329,ACT0325,ACT0328,ACT0323,ACT0324,ACT0471,ACT0887,ACT0011,ACT0341	SP1001,SP1004,SP1205,SP1206,SP1207,SP1110,SP1109,SP1139,SP1017,SP1374,SP1112,SP1000	×	×
S-Class	222	Drive	N3/9-Motor electronics "CR43" for combustion engine "OM651"(CDI)	√	√	√	√	×	ACT0026,ACT0000,ACT0600,ACT0330,ACT0005,ACT0003,ACT0008,ACT0011,ACT0010,ACT0022,ACT0012,ACT0016,ACT0017,ACT0018,ACT0019,ACT0327	SP1000,SP1001,SP1003,SP1004,SP1414,SP1295,SP1296,SP1123,SP1297,SP1298,SP1299,SP1012,SP1013,SP1144,SP1015,SP1016,SP1017	×	×
S-Class	222	Drive	N3/9-Motor electronics "CDI61" for combustion engine "OM642"(CDI)	√	√	√	√	√	ACT0033,ACT0026,ACT0005,ACT0002,ACT0028,ACT0008,ACT0010,ACT0011,ACT0024,ACT0012,ACT0016,ACT0018	SP1471,SP1000,SP1001,SP1002,SP1004,SP1300,SP1135,SP1009,SP1299,SP1012,SP1013,SP1303,SP1144,SP1301,SP1302,SP1137,SP1015,SP1016,SP1020,SP1128,SP1021,SP1022,SP1023,SP1017,SP1140	×	×
S-Class	222	Drive	N3/40-Motor electronics "MRD1" for combustion engine "OM654"(CDI)	√	√	√	√	√	ACT0001,ACT0005,ACT0006,ACT0321,ACT0008,ACT0009,ACT0010,ACT0322,ACT0011,ACT0012,ACT0016,ACT0018,ACT0022,ACT0023,ACT0024,ACT0026,ACT0000,ACT0338,ACT0339,ACT0340,ACT0341	SP1001,SP1000,SP1130,SP1125,SP1131,SP1132,SP1133,SP1134,SP1135,SP1136,SP1017,SP1137,SP1138,SP1024,SP1139,SP1140,SP1015,SP1141,SP1142,SP1143,SP1144,SP1021,SP1022,SP1145,SP1146	×	×
S-Class	222	Drive	Y3/8n4-Fully integrated transmission control(IGS)	√	√	√	√	√	ACT0603,ACT0318	SP1304,SP1305,SP1306,SP1307,SP1308,SP1309,SP1237,SP1310,SP1311,SP1311,SP1312,SP1313,SP1314,SP1002,SP1315,SP1316	×	×
S-Class	222	Drive	Y3/8n4-Transmission control for 9 speed transmission(VGS)	√	√	√	√	√	ACT0603,ACT0312,ACT0604,ACT0724,ACT0317	SP1316,SP1320,SP1321,SP1310,SP1360,SP1317,SP1361,SP1305,SP1362,SP1363,SP1364,SP1322	×	×
S-Class	222	Seats and Doors	Left front door(LFD)	√	√	√	√	×	ACT1182,ACT0255,ACT0254,ACT1183,ACT0725,ACT0269,ACT0270,ACT0267,ACT0268,ACT0726,ACT0366,ACT0261,ACT1184,ACT0346,ACT0347,ACT0263,ACT0348,ACT0349,ACT0350,ACT0351,ACT1185,ACT0729,ACT0352	SP1080,SP1147,SP1148	×	×

S-Class	222	Seats and Doors	Left front door(LFD)	√	√	√	√	×	ACT0253,ACT0254,ACT0255, ACT0256,ACT0257,ACT0260, ACT0259,ACT1080,ACT0261, ACT0263,ACT0346,ACT1081, ACT0349,ACT1082,ACT0348, ACT0267,ACT0268,ACT0258, ACT0270,ACT0269,ACT0271, ACT0726	SP1080	×	×
S-Class	222	Seats and Doors	Left front door(LFD)	√	√	√	√	×	ACT0342,ACT0255,ACT0254, ACT0343,ACT0725,ACT0269, ACT0361,ACT0267,ACT0268, ACT0726,ACT0344,ACT0261, ACT0345,ACT0346,ACT0347, ACT0263,ACT0348,ACT0349, ACT0350,ACT0351,ACT0727, ACT0728,ACT0729	SP1080,SP1147,SP1148	×	×
S-Class	222	Seats and Doors	Right front door(DCU RF)	√	√	√	√	×	ACT1186,ACT0274,ACT0273, ACT1187,ACT0730,ACT0283, ACT0284,ACT0281,ACT0282, ACT0731,ACT0366,ACT0278, ACT1184,ACT0357,ACT0347, ACT0279,ACT0348,ACT0349, ACT0358,ACT0359,ACT1185, ACT0729,ACT0352	SP1080,SP1147,SP1148	×	×
S-Class	222	Seats and Doors	Right front door(DCU RF)	√	√	√	√	×	ACT0272,ACT0273,ACT0274, ACT0256,ACT0275,ACT0277, ACT0276,ACT1083,ACT0278, ACT0279,ACT0357,ACT1081, ACT0349,ACT1084,ACT0348, ACT0281,ACT0282,ACT0258, ACT0283,ACT0284,ACT0271, ACT0726	SP1080	×	×
S-Class	222	Seats and Doors	Right front door(DCU RF)	√	√	√	√	×	ACT0353,ACT0274,ACT0273, ACT0354,ACT0730,ACT0283, ACT0284,ACT0281,ACT0282, ACT0731,ACT0355,ACT0278, ACT0356,ACT0357,ACT0347, ACT0279,ACT0348,ACT0349, ACT0358,ACT0359,ACT0732, ACT0728,ACT0729	SP1080,SP1147,SP1148	×	×
S-Class	222	Seats and Doors	Left rear door(DCU LR)	√	√	√	√	×	ACT0360,ACT0361,ACT0362, ACT0363,ACT0733,ACT0698, ACT0347,ACT0364,ACT0734, ACT0737,ACT0366	SP1080,SP1147,SP1148	×	×
S-Class	222	Seats and Doors	Left rear door(DCU LR)	√	√	√	√	×	ACT0697,ACT0696,ACT1085, ACT0698,ACT1086,ACT0362, ACT0363,ACT0733,ACT0360, ACT0361,ACT0271,ACT0735	SP1080	×	×
S-Class	222	Seats and Doors	Left rear door(DCU LR)	√	√	√	√	×	ACT0360,ACT0361,ACT0362, ACT0363,ACT0733,ACT0698, ACT0347,ACT0364,ACT0734, ACT0366,ACT0735	SP1080,SP1147,SP1148	×	×

S-Class	222	Seats and Doors	Right rear door(DCU RR)	√	√	√	√	×	ACT0367,ACT0368,ACT0369,ACT0370,ACT0736,ACT0702,ACT0347,ACT0371,ACT0365,ACT0737,ACT0366	SP1080,SP1147,SP1148	×	×
S-Class	222	Seats and Doors	Right rear door(DCU RR)	√	√	√	√	×	ACT0701,ACT0700,ACT1087,ACT0702,ACT1081,ACT1088,ACT0369,ACT0370,ACT0736,ACT0367,ACT0368,ACT0738,ACT0271	SP1080	×	×
S-Class	222	Seats and Doors	Right rear door(DCU RR)	√	√	√	√	×	ACT0367,ACT0368,ACT0369,ACT0370,ACT0736,ACT0702,ACT0347,ACT0371,ACT0365,ACT0737,ACT0738,ACT0366	SP1080,SP1147,SP1148	×	×
S-Class	222	Body	Supplemental restraint system(SRS)	√	√	√	√	√	×	×	×	×
S-Class	222	Body	Supplemental restraint system(SRS)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	Electronic ignition lock(EZS)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	Electronic ignition lock(EZS)	√	√	√	√	×	ACT1079	×	×	×
S-Class	222	Seats and Doors	Electric seat adjustmnet Driver with memory function(ESV Driver)	√	√	√	√	×	ACT0214,ACT0373,ACT0218,ACT0374,ACT0217,ACT1089,ACT0375,ACT0376,ACT0377	SP1442,SP1075,SP1074	×	×
S-Class	222	Seats and Doors	Electric seat adjustment Front passenger with memory function(ESV Front passenger)	√	√	√	√	×	ACT0230,ACT0378,ACT0234,ACT0379,ACT0233,ACT1090,ACT0380,ACT0381,ACT0382	SP1442,SP1075,SP1074	×	×
S-Class	222	Body	Front signal acquisition and actuation module(N10/6)(SAMF)	√	√	√	√	×	ACT0739,ACT0740,ACT0741,ACT0742,ACT0344,ACT0518,ACT0743,ACT0686,ACT0744,ACT0687,ACT0745,ACT0746,ACT0747,ACT0748,ACT0476,ACT0749,ACT0750,ACT0751,ACT0752,ACT0753,ACT0754,ACT0755,ACT0756	×	×	×
S-Class	222	Body	Front signal acquisition and actuation module(N10/6)(SAMF)	√	√	√	√	×	ACT1091,ACT1092,ACT1093,ACT0739,ACT0740,ACT0344,ACT0518,ACT0744,ACT0743,ACT0686,ACT0687,ACT0745,ACT1094,ACT1095,ACT1096,ACT1097,ACT0925,ACT0476,ACT0751,ACT0752,ACT0753	×	×	×
S-Class	222	Body	Rear signal acquisition and actuation module(N10/8)(SAMR)	√	√	√	√	×	ACT0757,ACT0240,ACT0758,ACT0759,ACT0760,ACT0741,ACT0761,ACT0762,ACT0763,ACT0764,ACT0765,ACT0766,ACT0767,ACT0768,ACT0769,ACT0770,ACT0771,ACT0772,ACT0773,ACT0774,ACT0775,ACT0776,ACT0777,ACT0388,ACT0387,ACT0778,ACT0779	×	×	×

S-Class	222	Body	Rear signal acquisition and actuation module(N10/8)(SAMR)	√	√	√	√	×	ACT0757,ACT1098,ACT0240,ACT1099,ACT1100,ACT0907,ACT0906,ACT0761,ACT0762,ACT0764,ACT1101,ACT1102,ACT1103,ACT1104,ACT1105,ACT1106,ACT0771,ACT1107,ACT0770,ACT1108,ACT0388,ACT0775,ACT1109,ACT1110,ACT0924,ACT0778,ACT0811,ACT1111,ACT1112,ACT1113	×	×	×
S-Class	222	Seats and Doors	Left rear electrical seat adjustment(ESE_RL)	√	√	√	√	×	ACT1217,ACT1218,ACT1219,ACT1220,ACT1221,ACT1222	SP1075,SP1074	×	×
S-Class	222	Seats and Doors	Right rear electrical seat adjustment(Right rear ESE)	√	√	√	√	×	ACT1223,ACT1224,ACT1225,ACT1226,ACT1227,ACT1228,ACT1229,ACT1230	SP1075,SP1074	×	×
S-Class	222	Information and communication	Communication module "Telematics services"/Notrufsystem(KOMO[mbrace])	√	√	√	√	×	ACT0051,ACT0039,ACT0043,ACT0040,ACT0052,ACT0053,ACT0054,ACT0055,ACT0056,ACT0057	×	×	×
S-Class	222	Information and communication	control unit for telematics services(HERMES)	√	√	√	√	×	×	SP1046	×	×
S-Class	222	Information and communication	mbrace(mbrace)	√	√	√	√	×	ACT0043,ACT0058,ACT0059,ACT0039	×	×	×
S-Class	222	Information and communication	Mobile phone cradle in rear passenger compartment(MTAS FO)	√	√	√	√	×	×	×	×	×
S-Class	222	Seats and Doors	Left front multicontour seat(MKS LF)	√	√	√	√	×	ACT1197,ACT0389,ACT0812,ACT0390,ACT0393,ACT0394	×	×	×
S-Class	222	Seats and Doors	Right front multicontour seat(MKS RF)	√	√	√	√	×	ACT1197,ACT0389,ACT0812,ACT0390,ACT0393,ACT0394	×	×	×
S-Class	222	Seats and Doors	Left rear multicontour seat(MKS LF)	√	√	√	√	×	ACT0389,ACT0812,ACT0390,ACT0392	×	×	×
S-Class	222	Seats and Doors	Right rear multicontour seat(MKS RF)	√	√	√	√	×	ACT0389,ACT0812,ACT0390,ACT0392	×	×	×

S-Class	222	Air conditioning	Automatic air conditioning(AAC)	√	√	√	√	×	ACT0182,ACT0428,ACT0183,ACT0780,ACT0781,ACT0204,ACT0782,ACT0003,ACT0186,ACT0190,ACT0676,ACT0783,ACT0189,ACT0784,ACT0785,ACT0188,ACT0786,ACT0787,ACT0788,ACT0674,ACT0789,ACT0673,ACT0790,ACT0791,ACT0792,ACT0793,ACT0794,ACT0795,ACT0796,ACT0797,ACT0666,ACT0667,ACT0790,ACT0791,ACT0792,ACT0793,ACT0794,ACT0795,ACT0796,ACT0797,ACT0798,ACT0799,ACT0790,ACT0791,ACT0792,ACT0793,ACT0794,ACT0795,ACT0796,ACT0663,ACT0666,ACT0667,ACT0790,ACT0791,ACT0795,ACT0796,ACT0798,ACT0799,ACT0194,ACT0658,ACT0659,ACT0660,ACT0661,ACT0664,ACT0665,ACT0800,ACT0801,ACT0802,ACT0803,ACT0804,ACT0805,ACT0806,ACT0798,ACT0799,ACT0666,ACT0667,ACT0807,ACT0808,ACT0809,ACT0810	SP1066,SP1065,SP1067,SP1365,SP1163	×	×
S-Class	222	Air conditioning	Stationary heater(STH)	√	√	√	√	×	ACT0200,ACT0201,ACT1056,ACT1231,ACT0203	×	×	×
S-Class	222	Seats and Doors	Tailgate control(HKS)	√	√	√	√	×	ACT1114,ACT1115	SP1149	×	×
S-Class	222	Seats and Doors	Tailgate control(HKS)	√	√	√	√	×	ACT1114,ACT1048,ACT0171,ACT0173	SP1443	×	×
S-Class	222	Seats and Doors	Pneumatic pump for multicontour seat(PPAMKS)	√	√	√	√	×	ACT0627,ACT0813	×	×	×
S-Class	222	Seats and Doors	Pneumatic pump for multicontour seat(PPAMKS)	√	√	√	√	×	ACT0627,ACT0630	×	×	×
S-Class	222	Body	ATA[EDW]/tow-away protection/interior protection(ATA)	√	√	√	√	×	ACT0075,ACT0476	×	×	×
S-Class	222	Body	Trailer recognition(Trailer recognition module)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	Trailer recognition(Trailer recognition module)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	Multifunction control unit(Multifunction control unit)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	Active bell buckle(AGS)	√	√	√	√	×	ACT0814,ACT0815,ACT0816,ACT0817	×	×	×
S-Class	222	Body	Control module Panoramic sliding roof(PSD)	√	√	√	√	×	ACT0207,ACT1118,ACT1119	SP1072	×	×
S-Class	222	Driver assistance system	Control unit Camera cover(KAB)	√	√	√	√	×	ACT0310,ACT0311	×	×	×
S-Class	222	Body	MAGIC SKY CONTROL (N53)(MSC)	√	√	√	√	×	ACT0888	×	×	×

S-Class	222	Body	Ambiance light(AML)	√	√	√	√	×	ACT0396,ACT0397,ACT0398,ACT0399,ACT0400,ACT0401,ACT0402,ACT0403,ACT0043	SP1150	×	×
S-Class	222	Body	Keyless Go(KG)	√	√	√	√	×	ACT0131,ACT0132	×	×	×
S-Class	222	Body	Keyless Go(KG)	√	√	√	√	×	ACT0131,ACT0132	×	×	×
S-Class	222	Body	Overhead control panel(OCP)	√	√	√	√	×	ACT1120,ACT1121,ACT0303,ACT0302,ACT1122,ACT1123,ACT1124,ACT1125,ACT1126,ACT0476,ACT1127	SP1158	×	×
S-Class	222	Body	DC/DC converter(DCDC)	√	√	√	√	×	×	×	×	×
S-Class	222	Information and communication	mbrace(mbrace)	√	√	√	√	×	ACT0039,ACT0040,ACT0041,ACT0042,ACT0043,ACT0044	×	×	×
S-Class	222	Driver assistance system	Outer right rear integrated radar sensor (B92/6)(IRS HRA)	√	√	√	√	×	×	SP1477	×	×
S-Class	222	Driver assistance system	Outer left rear integrated radar sensor (B92/11)(IRS HLA)	√	√	√	√	×	×	SP1476	×	×
S-Class	222	Body	Steering wheel electronics(LRE)	√	√	√	√	×	×	×	×	×
S-Class	222	Information and communication	Touchpad(TPAD)	√	√	√	√	×	×	×	×	×
S-Class	222	Information and communication	Touchpad(TPAD)	√	√	√	√	×	×	×	×	×
S-Class	222	Information and communication	Audio or COMAND(A2-A40/3)(AUDIO)	√	√	√	√	×	×	×	×	×
S-Class	222	Information and communication	Audio or COMAND(A2-A40/3)(AUDIO)	√	√	√	√	×	×	×	×	×
S-Class	222	Information and communication	Audio or COMAND(A2-A40/3)(AUDIO)	√	√	√	√	×	×	×	×	×
S-Class	222	Information and communication	Audio or COMAND(A2-A40/3)(AUDIO)	√	√	√	√	×	×	×	×	×
S-Class	222	Information and communication	Audio or COMAND(A2-A40/3)(AUDIO)	√	√	√	√	×	×	×	×	×
S-Class	222	Information and communication	Audio or COMAND(A2-A40/3)(AUDIO)	√	√	√	√	×	×	×	×	×
S-Class	222	Information and communication	Audio/COMAND operating unit(COU[ZBE])	√	√	√	√	×	ACT0041,ACT1198	×	×	×
S-Class	222	Information and communication	Audio/COMAND operating unit(COU[ZBE])	√	√	√	√	×	ACT0041,ACT1198	×	×	×
S-Class	222	Information and communication	Audio/COMAND display(ZAN)	√	√	√	√	×	ACT0206,ACT0964,ACT0291,ACT0039	×	×	×
S-Class	222	Information and communication	Audio/COMAND display(ZAN)	√	√	√	√	×	ACT0090,ACT1199,ACT0291,ACT0043,ACT0039	×	×	×
S-Class	222	Information and communication	Display in left rear passenger compartment(D FOL)	√	√	√	√	×	ACT1232,ACT1233,ACT1234,ACT0039,ACT1235	SP1491,SP1347	×	×
S-Class	222	Information and communication	Display in right rear passenger compartment(D FOR)	√	√	√	√	×	ACT1232,ACT1233,ACT1234,ACT0039,ACT1235	SP1491,SP1347	×	×
S-Class	222	Information and communication	Mobile phone cradle(MTAS)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	Left front reversible emergency tensioning retractor(RevETR LF)	√	√	√	√	×	ACT0209	×	×	×

S-Class	222	Body	Right front reversible emergency tensioning retractor(RevETR RF)	√	√	√	√	×	ACT0213	×	×	×
S-Class	222	Information and communication	Instrument cluster(A1)(IC)	√	√	√	√	×	ACT0404,ACT0048,ACT0210,ACT0405,ACT0406,ACT0050,ACT0407,ACT0039	SP1043,SP1044,SP1045	×	×
S-Class	222	Information and communication	Instrument cluster(IC)	√	√	√	√	×	ACT0404,ACT0048,ACT0210,ACT0405,ACT0406,ACT0965,ACT0050,ACT0407	SP1043,SP1044,SP1045,SP1385	×	×
S-Class	222	Information and communication	Head up display(HUD)	√	√	√	√	×	ACT0210,ACT0212	SP1063	×	×
S-Class	222	Driver assistance system	Night View Assist(N101)(NSA)	√	√	√	√	×	ACT1200,ACT0695	SP1063	×	×
S-Class	222	Driver assistance system	Backup camera(RFK)	√	√	√	√	×	×	SP1153	×	×
S-Class	222	Driver assistance system	Backup camera(RFK)	√	√	√	√	×	×	×	×	×
S-Class	222	Driver assistance system	360 camera(N148)(CAMERA)	√	√	√	√	×	×	SP1342,SP1209,SP1210,SP1211,SP1212,SP1213	×	×
S-Class	222	Body	Rear control unit(SG FOND)	√	√	√	√	×	ACT1128,ACT1129,ACT0362,ACT0363,ACT0369,ACT0370,ACT0942,ACT1130,ACT0966,ACT1131,ACT1132,ACT1133,ACT1134,ACT1135	SP1444,SP1445,SP1446	×	×
S-Class	222	Information and communication	Cellular telephone(CTEL)	√	√	√	√	×	×	×	×	×
S-Class	222	Chassis	AMG DRIVE UNIT(AMG DRVU)	√	√	√	√	×	ACT0408,ACT0409,ACT0410,ACT0411	SP1154,SP1155,SP1156	×	×
S-Class	222	Body	Sound generator for electric vehicle(SOGESTAR2)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	Left headlamp(SG SW L)	√	√	√	√	×	ACT0292,ACT0293,ACT0297,ACT0298,ACT0299,ACT0300	SP1447,SP1088,SP1089,SP1090,SP1094	×	×
S-Class	222	Body	Left headlamp(SG SW L)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	Right headlamp(SG SW R)	√	√	√	√	×	ACT0292,ACT0293,ACT0297,ACT0298,ACT0299,ACT0300	SP1367,SP1096,SP1097	×	×
S-Class	222	Body	Right headlamp(SG SW R)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	LED matrix of left front lamp unit(SG LML VL)	√	√	√	√	×	ACT0299,ACT0825,ACT0826,ACT0300	SP1089,SP1366	×	×
S-Class	222	Body	LED matrix of right front lamp unit(SG-LML-RF)	√	√	√	√	×	ACT0299,ACT0825,ACT0300,ACT0826	SP1367,SP1368	×	×
S-Class	222	Driver assistance system	Tire pressure monitor(N88)(TPM)	√	√	√	√	×	ACT0078,ACT0079,ACT0081,ACT0080	SP1053	×	×
S-Class	222	Driver assistance system	Multifunction camera(mono)(A40/11)(MFK)	√	√	√	√	×	ACT0181,ACT0065	SP1157	×	×
S-Class	222	Driver assistance system	Multifunction camera(mono)(A40/11)(MFK)	√	√	√	√	×	ACT0181,ACT0065	SP1063	×	×
S-Class	222	Chassis	Electric parking brake(EFB)	√	√	√	√	×	ACT0285,ACT0286,ACT0287,ACT0288	SP1081	×	×
S-Class	222	Driver assistance system	Control unit COLLISION PREVENTION ASSIST(SG AWF)	√	√	√	√	×	ACT0594	SP1479,SP1480	×	×

S-Class	222	Driver assistance system	Control unit COLLISION PREVENTION ASSIST(SG AWF)	√	√	√	√	×	×	SP1059	×	×
S-Class	222	Drive	Haptic accelerator pedal module(HFPM)	√	√	√	√	×	ACT1139,ACT1140	×	×	×
S-Class	222	Drive	Shift module(ISM)	√	√	√	√	×	ACT0681,ACT0682,ACT0318	SP1350,SP1351,SP1448	×	×
S-Class	222	Body	Charger(SG LG)	√	√	√	√	×	ACT0412,ACT0413,ACT0414, ACT0415,ACT0622,ACT0417	×	×	×
S-Class	222	Body	Charger(SG LG)	√	√	√	√	×	ACT0412,ACT0413,ACT0414, ACT0415,ACT0416,ACT0417	×	×	×
S-Class	222	Body	DC/DC converter(DCDC)	√	√	√	√	×	×	SP1329	×	×
S-Class	222	Body	Multifunction control unit(Multifunction control unit)	√	√	√	√	×	ACT0204	×	×	×
S-Class	222	Body	Battery sensor(B95)(BSN)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	Battery sensor(B95)(BSN)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	Lithium ion battery(LIB)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	Lithium ion battery(LIB)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	Analog clock(AU)	√	√	√	×	×	×	×	×	×
S-Class	222	Body	Button group, instrument panel, driver side(DBG DRIVE)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	Button group, instrument panel, center(DBG MID)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	Rain/light sensor(B38/2)(RGLS)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	Rain/light sensor(B38/2)(RGLS)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	Windshield wiper(FSW)	√	√	√	√	×	ACT1141	×	×	×
S-Class	222	Body	Garage door opener(A67n2)(GTO)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	Garage door opener(A67n2)(GTO)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	Overhead control panel(OCP)	√	√	√	√	×	ACT1120,ACT0302,ACT1121, ACT0303,ACT0304,ACT1142	×	×	×
S-Class	222	Body	Anti glare interior rearview mirror(DBE)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	Anti glare interior rearview mirror(SAM)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	R (Actuation module, LED exterior lighting, right front)(AMLAB)	√	√	√	√	×	ACT0299,ACT0300	SP1449	×	×
S-Class	222	Body	R (Actuation module, LED exterior lighting, right front)(AMLAB)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	L (Actuation module, LED exterior lighting, left front)(AMLAB)	√	√	√	√	×	ACT0299,ACT0300	SP1450	×	×
S-Class	222	Body	L (Actuation module, LED exterior lighting, left front)(AMLAB)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	Neck heating system(N25/7)(AIRSCARF)	√	√	√	√	×	ACT1144	×	×	×

S-Class	222	Body	N5 (Armrest heater control unit)(AH)	√	√	√	√	×	ACT0828,ACT0829,ACT0830,ACT0831,ACT0832,ACT0833,ACT0834,ACT0835,ACT0836,ACT0837,ACT0838,ACT0839,ACT0840,ACT0841,ACT0842,ACT0843,ACT0844,ACT0845,ACT0840,ACT0841,ACT0842,ACT0846,ACT0847,ACT0848,ACT0849,ACT0840,ACT0846,ACT0847,ACT0848,ACT0849,ACT0850,ACT0851,ACT0852,ACT0853,ACT0854,ACT0855,ACT0856,ACT0857,ACT0858,ACT0859,ACT0840,ACT0843,ACT0850,ACT0851,ACT0852,ACT0853,ACT0854,ACT0855,ACT0856,ACT0857,ACT0859,ACT0848,ACT0849,ACT0860	SP1159,SP1160	×	×
S-Class	222	Body	N25/6 (Rear passenger compartment seat heater control unit)(SIH REAR)	√	√	√	√	×	ACT0861,ACT0862,ACT0863,ACT0864,ACT0865	×	×	×
S-Class	222	Seats and Doors	S47/2 (Driver door switch module)(DSCV)	√	√	√	×	×	×	×	×	×
S-Class	222	Seats and Doors	S22 (Driver"s door seat adjustment switch)(ESV)	√	√	√	×	×	×	×	×	×
S-Class	222	Seats and Doors	Left front door(LFD)	√	√	√	×	×	×	×	×	×
S-Class	222	Seats and Doors	S47/3 (Front passenger door switch module)(DSCA)	√	√	√	×	×	×	×	×	×
S-Class	222	Seats and Doors	S23 (Front passenger door seat adjustment switch)(ESA)	√	√	√	×	×	×	×	×	×
S-Class	222	Seats and Doors	Right front door(DCU RF)	√	√	√	×	×	×	×	×	×
S-Class	222	Seats and Doors	Left rear door(DCU LR)	√	√	√	×	×	×	×	×	×
S-Class	222	Seats and Doors	Left rear door(DCU LR)	√	√	√	×	×	×	×	×	×
S-Class	222	Seats and Doors	Right rear door(DCU RR)	√	√	√	×	×	×	×	×	×
S-Class	222	Seats and Doors	Right rear door(DCU RR)	√	√	√	×	×	×	×	×	×
S-Class	222	Seats and Doors	Right rear door(DCU RR)	√	√	√	×	×	×	×	×	×
S-Class	222	Seats and Doors	N32/23 (Driver seat lumbar support adjustment control unit)(LSE FS)	√	√	√	√	×	ACT1201,ACT1202	×	×	×
S-Class	222	Seats and Doors	"Driver" seat heater(SIH FS)	√	√	√	√	×	×	SP1161,SP1162	×	×
S-Class	222	Seats and Doors	Lumbar support "Front passenger seat"(N32/24)(BFS LSE)	√	√	√	√	×	ACT1201,ACT1202	×	×	×
S-Class	222	Seats and Doors	"Front passenger" seat heater(SIH BFS)	√	√	√	√	×	×	×	×	×
S-Class	222	Seats and Doors	Seat heater in left rear passenger compartment(SIH LR)	√	√	√	√	×	×	×	×	×
S-Class	222	Seats and Doors	Seat heater in right rear passenger compartment(SIH RR)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	Alarm siren(H3/1)(AS)	√	√	√	√	×	ACT0309,ACT0476,ACT0477	×	×	×

S-Class	222	Body	VL-Left front interior protection sensor(IRSS)	√	√	√	×	×	ACT1145	×	×	×
S-Class	222	Body	VR-Right front interior protection sensor(IRSS)	√	√	√	×	×	ACT1146	×	×	×
S-Class	222	Body	FOR-Right rear interior protection sensor(IRSS)	√	√	√	×	×	ACT1147	×	×	×
S-Class	222	Body	FOL-Left rear interior protection sensor(IRSS)	√	√	√	×	×	ACT1148	×	×	×
S-Class	222	Seats and Doors	Massage function in left front seat(PMCU-LF)	√	√	√	√	×	ACT0866	×	×	×
S-Class	222	Seats and Doors	Massage function in right front seat(PMCU-RF)	√	√	√	√	×	ACT0866	×	×	×
S-Class	222	Seats and Doors	Massage function in left rear seat(PMCU-LR)	√	√	√	√	×	ACT0866	×	×	×
S-Class	222	Seats and Doors	Massage function in right rear seat(PMCU-RR)	√	√	√	√	×	ACT0866	×	×	×
S-Class	222	Air conditioning	N61 (Windshield heater control unit)(WSH)	√	√	√	×	×	×	×	×	×
S-Class	222	Air conditioning	Automatic air conditioning(AAC)	√	√	√	×	×	×	×	×	×
S-Class	222	Air conditioning	Stationary heater(STH)	√	√	√	√	×	ACT1055,ACT0202,ACT1149	×	×	×
S-Class	222	Air conditioning	Automatic air conditioning(AAC)	√	√	√	×	×	×	×	×	×
S-Class	222	Air conditioning	Automatic air conditioning(AAC)	√	√	√	×	×	×	×	×	×
S-Class	222	Air conditioning	Radio remote control of stationary heater(TSTH)	√	√	√	√	×	ACT0203,ACT0429	×	×	×
S-Class	222	Information and communication	Telephone keypad(TEL-KB)	√	√	√	×	×	×	×	×	×
S-Class	222	Information and communication	Lower control panel(LCP)	√	√	√	×	×	×	×	×	×
S-Class	222	Body	Weight sensing system(N110)(WSS)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	N38 (Rear switching module)(RCM)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	Lithium ion battery(LIB)	√	√	√	√	×	×	×	×	×
S-Class	222	Information and communication	TV tuner (TV)	√	√	√	√	×	×	×	×	×
S-Class	222	Information and communication	TV tuner (TV)	√	√	√	√	×	×	×	×	×
S-Class	222	Information and communication	TV tuner (TV)	√	√	√	√	×	×	×	×	×
S-Class	222	Information and communication	TV tuner (TV)	√	√	√	√	×	×	×	×	×
S-Class	222	Information and communication	Sound system(SOUND)	√	√	√	√	×	×	×	×	×
S-Class	222	Information and communication	Sound system(SOUND)	√	√	√	√	×	×	×	×	×
S-Class	222	Information and communication	Controller unit Rear entertainment system(AVE H)	√	√	√	√	×	ACT0043,ACT0206,ACT1236,ACT0039,ACT0083,ACT1237,ACT1238,ACT1239,ACT1240	SP1057,SP1492	×	×
S-Class	222	Information and communication	Controller unit Rear entertainment system(AVE H)	√	√	√	√	×	ACT0043,ACT1241,ACT1242,ACT0039,ACT0083,ACT1243,ACT0103	×	×	×

S-Class	222	Information and communication	Digital radio Tuner unit(DAB)	√	√	√	√	×	ACT0198,ACT0087,ACT0199,ACT0039	×	×	×
S-Class	222	Driver assistance system	Multifunction camera(stereo)(A40/13)(MFK)	√	√	√	√	×	ACT0181,ACT0065	SP1063	×	×
S-Class	222	Driver assistance system	Multifunction camera(stereo)(A40/13)(MFK)	√	√	√	√	×	ACT0181,ACT0065	SP1063	×	×
S-Class	222	Driver assistance system	DISTRONIC(DTR)	√	√	√	√	×	×	×	×	×
S-Class	222	Driver assistance system	DISTRONIC(DTR)	√	√	√	√	×	×	SP1165,SP1166	×	×
S-Class	222	Driver assistance system	Radar sensors control unit(SGR)	√	√	√	√	×	ACT0430,ACT0431	SP1167,SP1168,SP1169	×	×
S-Class	222	Driver assistance system	Radar sensors control unit(N62/1)(SGR)	√	√	√	√	×	×	SP1167,SP1168,SP1451	×	×
S-Class	222	Driver assistance system	DISTRONIC(DTR)	√	√	√	√	×	×	×	×	×
S-Class	222	Driver assistance system	Parking system (N62)(PARK)	√	√	√	√	×	ACT0306	×	×	×
S-Class	222	Driver assistance system	PARKTRONIC(PTS)	√	√	√	√	×	ACT0432,ACT0306	SP1170	×	×
S-Class	222	Chassis	Active body control(N51/2)(ABC)	√	√	√	√	×	ACT0642,ACT0641,ACT1203,ACT1204,ACT1205,ACT1206,ACT1207,ACT1208,ACT1209,ACT1210,ACT1211,ACT1212,ACT1213	SP1481,SP1482,SP1061,SP1483,SP1484,SP1485,SP1486	×	×
S-Class	222	Chassis	Adaptive damping system(N51/5)(ADS)	√	√	√	√	×	ACT0639,ACT1150,ACT0642,ACT0641,ACT0643,ACT0644,ACT0645,ACT0646,ACT0167,ACT0168,ACT0169,ACT0170,ACT0647,ACT0648,ACT0650,ACT0649,ACT0638	SP1061,SP1344	×	×
S-Class	222	Chassis	Electric power steering(ES )	√	√	√	√	×	×	SP1071,SP1171	×	×
S-Class	222	Chassis	Electric power steering(ES )	√	√	√	√	×	×	SP1071	×	×
S-Class	222	Chassis	Electric power steering(ES )	√	√	√	√	×	×	SP1351,SP1171	×	×
S-Class	222	Body	Steering column module(N80)(SCM)	√	√	√	√	×	ACT0060,ACT0061,ACT0062,ACT0063,ACT0064,ACT0065	×	×	×
S-Class	222	Body	Steering column module(N80)(SCM)	√	√	√	√	×	ACT0060,ACT0061,ACT0062,ACT0063,ACT0064,ACT0065	×	×	×
S-Class	222	Drive	All-wheel drive(VG)	√	√	√	√	×	ACT0433,ACT0434	SP1099,SP1174	×	×
S-Class	222	Body	Fire extinguishing system and emergency fresh air system(FLANFS)	√	√	√	√	×	ACT1244,ACT1245,ACT1246,ACT1247,ACT1248,ACT1249,ACT1250,ACT1251	×	×	×
S-Class	222	Body	Mirror taximeter(STM)	√	√	√	√	×	×	×	×	×
S-Class	222	Driver assistance system	Right rear short-range radar(NBR RR)	√	√	√	√	×	×	SP1176	×	×
S-Class	222	Driver assistance system	Left rear short-range radar(NBR LR)	√	√	√	√	×	×	SP1177	×	×
S-Class	222	Chassis	Electric stability program(N30/4)(ESP)	√	√	√	√	√	ACT0069,ACT0070,ACT0623,ACT0285,ACT0286,ACT0287,ACT0288	SP1178,SP1179,SP1180,SP1181,SP1182,SP1183,SP1184,SP1185,SP1370,SP1187	×	×
S-Class	222	Chassis	Electric stability program(N30/4)(ESP)	√	√	√	√	×	ACT0623,ACT0708,ACT0069,ACT0070,ACT1214	SP1051,SP1335,SP1336,SP1393	×	×

S-Class	222	Drive	Control unit Fuel pump(FSCU)	√	√	√	√	×	ACT0252,ACT0320	×	×	×
S-Class	222	Drive	Selective catalytic reduction(SCR)	√	√	√	√	×	ACT0435,ACT0613,ACT0436,ACT0437,ACT0438,ACT0609	SP1189,SP1327,SP1188,SP1324,SP1323,SP1023	×	×
S-Class	222	Drive	Selective catalytic reduction(SCR)	√	√	√	√	×	ACT0435,ACT0436,ACT0437,ACT0438,ACT0439,ACT0440	SP1188,SP1189	×	×
S-Class	222	Drive	N127 (Drivetrain control unit)(PTCU)	√	√	√	√	×	ACT0038,ACT0028,ACT0452,ACT0451,ACT0007,ACT0445,ACT0447,ACT0442,ACT0450,ACT0449,ACT0445,ACT0448	SP1386	×	×
S-Class	222	Drive	N127 (Drivetrain control unit)(PTCU)	√	√	√	√	×	ACT0028,ACT0441,ACT0442,ACT0443,ACT0444,ACT0007,ACT0445,ACT0446,ACT0447,ACT0448,ACT0449,ACT0450,ACT0451,ACT0452,ACT0453,ACT0454,ACT0455,ACT0456,ACT0457,ACT0458,ACT0459,ACT0460,ACT0461	SP1190,SP1042,SP1025,SP1191,SP1192,SP1193,SP1194,SP1195,SP1196	×	×
S-Class	222	Drive	Power electronics(SG EM)	√	√	√	√	×	ACT1252	SP1197,SP1328,SP1329	×	×
S-Class	222	Drive	Power electronics(SG EM)	√	√	√	√	×	ACT0462,ACT0463	SP1197,SP1198,SP1199,SP1200,SP1151	×	×
S-Class	222	Drive	Integrated starter alternator(ISG)	√	√	√	√	×	×	SP1371	×	×
S-Class	222	Drive	Power electronics(SG EM)	√	√	√	√	×	ACT0462,ACT0463	SP1197,SP1328,SP1461	×	×
S-Class	222	Drive	Integrated starter alternator(ISG)	√	√	√	√	×	×	×	×	×
S-Class	222	Body	Battery management system(BMS)	√	√	√	√	×	ACT0464,ACT0465,ACT0466	SP1201	×	×
S-Class	222	Body	Battery management system(BMS)	√	√	√	√	×	ACT0787,ACT1151	SP1390,SP1197	×	×
S-Class	222	Body	Battery management system(BMS)	√	√	√	√	×	ACT1152,ACT0464,ACT0417,ACT0615	SP1201	×	×
S-Class	222	Drive	N3/10-Motor electronics "ME1778" for combustion engine "M279"(ME)	√	√	√	√	×	ACT0002,ACT0003,ACT0005,ACT0335,ACT0325,ACT0326,ACT0016,ACT0955,ACT0980,ACT0981,ACT0329,ACT0983	×	×	×
S-Class	222	Drive	N3/10-Motor electronics "MED177" for combustion engine "M276"(ME)	√	√	√	√	√	ACT0005,ACT0002,ACT0003,ACT0335,ACT0491,ACT0474,ACT0715,ACT0475,ACT0716,ACT0325,ACT0326,ACT0025,ACT0016,ACT0717,ACT0718,ACT0017,ACT0452,ACT0719,ACT0022	SP1108,SP1109,SP1017,SP1110,SP1115,SP1001,SP1462,SP1206,SP1113,SP1004,SP1357,SP1000	×	×

S-Class	222	Drive	N3/10-Motor electronics "MED1775" for combustion engine "M178"(ME)	√	√	√	√	√	ACT0002,ACT0028,ACT0442, ACT0443,ACT0444,ACT0880, ACT0881,ACT0446,ACT0491, ACT0487,ACT0486,ACT0489, ACT0488,ACT0326,ACT0882, ACT0883,ACT0447,ACT0025, ACT0884,ACT0722,ACT0723, ACT0022,ACT0885,ACT0886	SP1017,SP1109,SP1110 ,SP1372,SP1373,SP137 4,SP1112,SP1206,SP12 07,SP1001,SP1191,SP1 375,SP1205,SP1000	×	×
S-Class	222	Drive	N3/10-Motor electronics "MED177V6LA" for combustion engine "M276Turbocharger"(ME)	√	√	√	√	√	ACT0005,ACT0002,ACT0003, ACT0335,ACT0491,ACT0474, ACT0715,ACT0475,ACT0716, ACT0325,ACT0326,ACT0025, ACT0016,ACT0017,ACT0452, ACT0719,ACT0022,ACT0722, ACT0723	SP1109,SP1110,SP1108 ,SP1017,SP1372,SP137 4,SP1373,SP1112,SP12 07,SP1206,SP1113,SP1 357,SP1004,SP1001,SP 1205,SP1000	×	×
S-Class	222	Drive	N3/10-Motor electronics "MED41" for combustion engine "M260/M264"(ME)	√	√	√	√	√	ACT0330,ACT0003,ACT0470, ACT0323,ACT0324,ACT0333, ACT0025,ACT0328,ACT0331, ACT0332,ACT0004,ACT0005, ACT0467,ACT0002,ACT0471, ACT0329,ACT0022,ACT0325, ACT0472	SP1203,SP1117	×	×
S-Class	222	Drive	N3/10-Motor electronics "MRG1" for combustion engine "M256"(ME)	√	√	√	√	√	ACT0002,ACT0025,ACT0005, ACT0022,ACT0467,ACT0329, ACT0325,ACT0328,ACT0323, ACT0324,ACT0471,ACT0887, ACT0011,ACT0341	SP1001,SP1004,SP1205 ,SP1206,SP1207,SP111 0,SP1109,SP1139,SP10 17,SP1374,SP1112,SP1 000	×	×
Maybach	240	Drive	Motor electronics 2.7.1(ME SFI 2.7.1)	√	√	√	√	×	×	×	×	×
Maybach	240	Drive	Electronic transmission control(ETC)	√	√	√	√	√	ACT1042	SP1513,SP1514,SP1515 ,SP1516,SP1517,SP151 8,SP1519,SP1520,SP15 21,SP1522,SP1523,SP1 218,SP1524	×	×
Maybach	240	Drive	Electronic transmission control(ETC)	√	√	√	√	√	ACT1042	×	×	×
Maybach	240	Chassis	Electronic stability program(ESP)	√	√	√	√	×	×	×	×	×
Maybach	240	Body	Airbag(AB)	√	√	√	√	√	×	×	×	×
Maybach	240	Information and communication	Instrument cluster(ICM)	√	√	√	√	×	ACT2028,ACT0497	×	×	×
Maybach	240	Chassis	Sensotronic Brake Control(SBC)	√	√	√	√	×	×	SP1564,SP1565,SP1566 ,SP1621,SP1622,SP162 3,SP1624	×	×
Maybach	240	Chassis	Right Sensotronic Brake Control(SBC)	√	√	√	√	×	×	×	×	×
Maybach	240	Chassis	Tire pressure monitor(TPM)	√	√	√	√	×	×	×	×	×
Maybach	240	Body	Central gateway(CGW)	√	√	√	×	×	×	×	×	×
Maybach	240	Body	Electronic ignition switch(EZS)	√	√	√	√	×	×	×	×	×
Maybach	240	Drive	Electronic selector module(ESM)	√	√	√	√	×	ACT1632	×	×	×
Maybach	240	Drive	Radar sensors control unit(SGR)	√	√	√	√	×	×	×	×	×
Maybach	240	Drive	Distronic(DTR)	√	√	√	√	×	×	SP1077	×	×

Maybach	240	Drive	Distronic(DTR)	√	√	√	√	√	×	SP1077	×	×
Maybach	240	Chassis	AIRmatic	√	√	√	√	×	ACT1540,ACT1541,ACT1542,ACT1543,ACT1544,ACT1545,ACT1546,ACT1547,ACT1548,ACT0507,ACT0508,ACT0509,ACT0510,ACT0511,ACT0512,ACT1549,ACT1550,ACT1551,ACT1552,ACT0513,ACT0514,ACT1553	SP1247,SP1248	×	×
Maybach	240	Body	Weight sensing system(WSS)	√	√	√	√	×	×	×	×	×
Maybach	240	Body	Vehicle power supply control module(BNS)	√	√	√	√	×	×	×	×	×
Maybach	240	Body	Driver signal acquisition and actuation module(Dr side SAM)	√	√	√	√	×	ACT2029,ACT2030,ACT2031,ACT2032,ACT2033,ACT2034,ACT2035,ACT1476,ACT0518,ACT1564,ACT1478,ACT1514,ACT1665,ACT1658,ACT0526,ACT0572,ACT1411,ACT2036,ACT1569,ACT2037,ACT2038,ACT2039,ACT1570	×	×	×
Maybach	240	Body	Passenger-side signal acquisition and actuation module(Pass side SAM)	√	√	√	√	×	ACT2029,ACT2030,ACT2031,ACT2032,ACT2033,ACT2034,ACT2035,ACT0518,ACT2040,ACT2041,ACT2042,ACT2043,ACT2044,ACT2045,ACT1513	×	×	×
Maybach	240	Body	Rear signal acquisition and actuation module1(Rear SAM 1)	√	√	√	√	×	ACT1791,ACT1604,ACT1793,ACT1330,ACT0764,ACT1301,ACT2046,ACT2047,ACT2048,ACT2049	×	×	×
Maybach	240	Body	Rear signal acquisition and actuation module2(Rear SAM 2)	√	√	√	√	×	ACT2046,ACT2050	×	×	×
Maybach	240	Body	Special vehicle multifunction control module(MSS)	√	√	√	√	×	ACT2051,ACT1958,ACT2052,ACT2053,ACT1960,ACT1961,ACT2054,ACT2055,ACT1955,ACT2056	×	×	×
Maybach	240	Body	Front control panel(VBF)	√	√	√	√	×	ACT0520,ACT0518,ACT2057	×	×	×
Maybach	240	Body	Rear control field(HBF)	√	√	√	√	×	ACT0518,ACT2058	×	×	×
Maybach	240	Body	Remote control(Rear control field)(BCG)	√	√	√	√	×	ACT2059,ACT2060	×	×	×
Maybach	240	Information and communication	Parktronic system(PTS)	√	√	√	√	×	ACT1489,ACT1490	×	×	×
Maybach	240	Body	Overhead control panel(OCP)	√	√	√	√	×	ACT1320,ACT1755,ACT2061,ACT2062,ACT0518	×	×	×
Maybach	240	Body	Center roof node(CRN)	√	√	√	√	×	ACT2063,ACT1755,ACT2064,ACT2065	×	×	×
Maybach	240	Seats and Doors	Electric seat adjustment front left(ESA FL)	√	√	√	√	×	ACT1497,ACT2066,ACT2067,ACT1845,ACT1500,ACT1501,ACT1846,ACT1847,ACT1848,ACT0220	×	×	×

Maybach	240	Seats and Doors	Electric seat adjustment front right(ESA FR)	√	√	√	√	×	ACT1497,ACT2066,ACT2067,ACT1845,ACT1500,ACT1501,ACT1846,ACT1847,ACT1848	×	×	×
Maybach	240	Seats and Doors	Left rear electrical seat adjustment(ESA LR)	√	√	√	√	×	ACT1497,ACT1498,ACT2068,ACT2069,ACT1846,ACT1847,ACT1848	×	×	×
Maybach	240	Seats and Doors	Right rear electrical seat adjustment(ESA RR)	√	√	√	√	×	ACT1497,ACT1498,ACT2068,ACT2069,ACT1846,ACT1847,ACT1848	×	×	×
Maybach	240	Seats and Doors	Multicontour backrest front left(OSB FL)	√	√	√	√	×	ACT0543,ACT1812,ACT0544,ACT0545,ACT2070	×	×	×
Maybach	240	Seats and Doors	Multicontour backrest front right(OSB FR)	√	√	√	√	×	ACT0543,ACT1812,ACT0544,ACT0545,ACT2070	×	×	×
Maybach	240	Seats and Doors	Rear left multicontour backrest(MKL HL)	√	√	√	√	×	ACT0543,ACT1812,ACT0544,ACT0545,ACT2070	×	×	×
Maybach	240	Seats and Doors	Rear right multicontour backrest(MKL HR)	√	√	√	√	×	ACT0543,ACT1812,ACT0544,ACT0545,ACT2070	×	×	×
Maybach	240	Seats and Doors	Door control module front left(DCM FL)	√	√	√	√	×	ACT0532,ACT0534,ACT0256,ACT2071,ACT1643,ACT1448,ACT2072,ACT0536,ACT0538,ACT2073,ACT2074	×	×	×
Maybach	240	Seats and Doors	Door control module front right(DCM FR)	√	√	√	√	×	ACT0539,ACT1495,ACT0534,ACT0256,ACT0541,ACT1649,ACT1448,ACT2072,ACT0540,ACT0542,ACT2073,ACT2074	×	×	×
Maybach	240	Seats and Doors	Door control module rear left(DCM RL)	√	√	√	√	×	ACT1356,ACT2073,ACT2074,ACT1970,ACT1598,ACT1448,ACT2072	×	×	×
Maybach	240	Seats and Doors	Door control module rear right(DCM RR)	√	√	√	√	×	ACT1357,ACT2073,ACT2074,ACT1975,ACT1599,ACT1448,ACT2072	×	×	×
Maybach	240	Body	Pneumatic system equipment(PSE)	√	√	√	√	×	ACT2075,ACT1354	×	×	×
Maybach	240	Seats and Doors	Partition wall control module(PWC)	√	√	√	√	×	×	×	×	×
Maybach	240	Seats and Doors	Electric left door closing assist(ELDCA)	√	√	√	√	×	×	×	×	×
Maybach	240	Seats and Doors	Electric right door closing assist(RDCA)	√	√	√	√	×	×	×	×	×
Maybach	240	Seats and Doors	Trunk lid control(TLC)	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	Steering column module(SCM [MRM])	√	√	√	√	×	ACT1503,ACT1504	SP1077	×	×
Maybach	240	Air conditioning	Automatic air conditioning(AAC)	√	√	√	√	×	ACT1855,ACT1856,ACT1857,ACT1858,ACT2076,ACT2077,ACT1859,ACT1860,ACT2078,ACT2079,ACT0566,ACT2080,ACT0569,ACT0483,ACT0571,ACT2081	SP1259,SP1260	×	×

Maybach	240	Air conditioning	Rear air conditioning(REAR AC)	√	√	√	√	×	ACT2082,ACT2083,ACT1865,ACT1866,ACT2084,ACT2085,ACT0666,ACT0667,ACT2086,ACT2087,ACT2088,ACT2089,ACT1369,ACT0483,ACT0571,ACT1362,ACT2058,ACT2090,ACT2091,ACT2092,ACT2093,ACT1601	SP1259,SP1601	×	×
Maybach	240	Air conditioning	Stationary heater(STH)	√	√	√	√	×	ACT0576,ACT0577,ACT0578	×	×	×
Maybach	240	Air conditioning	Steering wheel heater(LRH)	√	√	√	√	×	ACT1602	×	×	×
Maybach	240	Body	Automatic headlamp range adjustment and headlamp control(HRA)	√	√	√	√	×	ACT0292	SP1258	×	×
Maybach	240	Body	System diagnosis(CAN)	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	Audio gateway (MOST network management, diagnosis gateway, radio tuner)(AGW)	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	Telecommunication for telematics services(CTEL)	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	Telecommunication for telematics services(Telephone adapter for portable CTCL)	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	Telecommunication for telematics services(CTEL)	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	AUDIO	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	COMAND or AUDIO	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	Navigation system(NAVI)	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	Voice control system(VCS)	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	TV tuner(TV)	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	TV tuner(AGW)(TV)	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	Bose sound system(SOUND)	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	Satellite radio(SDAR)	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	Mobile phone adapter with universal interface(CTEL)	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	Audio video controller(AVC)	√	√	√	√	×	ACT2094,ACT2095	×	×	×
Maybach	240	Information and communication	TV tuner(REAR)(TV)	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	TV tuner(REAR)(TV)	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	CD changer(REAR)(CDC)	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	Left headphone transmitter(KTL)	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	Right headphone transmitter(KTR)	√	√	√	√	×	×	×	×	×

Maybach	240	Information and communication	GPS box	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	Control unit(TELE AID)	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	Telematic services Emergency call(TELE AID)	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	Telematic services MB Info,Roadside assistance(USA, Canada),Tele diagnosis(ECE)(TELE AID)	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	Telematic services Stolen vehicle tracking(TELE AID)	√	√	√	√	×	×	×	×	×
Maybach	240	Information and communication	Telematic services Remote door unlocking,Remote door locking(TELE AID)	√	√	√	√	×	×	×	×	×
Maybach	240	Drive	Motor electronics 2.7.2(ME 2.7.2)	√	√	√	√	×	ACT1373,ACT0479,ACT0005,ACT0480,ACT0481,ACT1530,ACT0483,ACT0484,ACT1915,ACT0335,ACT0492	SP1214,SP1216,SP1533,SP1605,SP1531	×	×
Maybach	240	Body	Airbag(AB)	√	√	√	√	√	×	SP1245	×	×
Maybach	240	Drive	Fuel pump(FSCU)	√	√	√	√	×	×	×	×	×
Maybach	240	Drive	Motor electronics 2.7.2(ME 2.7.2)	√	√	√	√	×	ACT1373,ACT0479,ACT0005,ACT0480,ACT0481,ACT1530,ACT0483,ACT0484,ACT1915,ACT0335,ACT0492	SP1214,SP1216,SP1533,SP1605,SP1531	×	×

*XTOOL*

*XTOOL*

*XTool*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

*XTOOL*

# Actions

No.	Functions Name	System Name
ACT0000	Compression test	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0001	B76/1 (Condensation sensor for fuel filter with heating element)	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0002	M3 (Fuel pump)	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0003	M4/7 (Combustion engine and air conditioning with integrated control fan motor)	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0004	M13/7 (Transmission oil cooling coolant circulation pump)	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0005	M16/6 (Throttle valve actuator)	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0006	Actuation of component "M16/6 (Throttle valve actuator)" with automatic evaluation of the test results	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0007	M43/6 (Low temperature circuit circulation pump 1)	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0008	M55 (Intake port shutoff actuator motor)	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0009	N14/3 (Glow output stage)	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0010	R39/1 (Vent line heating element)	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0011	R48 (Coolant thermostat heating element)	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0012	Y27/9 (Exhaust gas recirculation actuator)	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0013	Actuation of component "Y27/9 (Exhaust gas recirculation actuator)" with automatic evaluation of the test results	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0014	Y31/4 (Wastegate control pressure transducer)	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0015	Y58/13 (Heat exchanger shutoff valve)	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0016	Y77/1 (Boost pressure positioner)	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)

ACT0017	Y84 (Radiator shutters actuator)	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0018	Y85 (Exhaust gas recirculation cooler bypass switchover valve)	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0019	Y93 (Boost pressure control flap pressure transducer)	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0020	Switchable engine mounts	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0021	Check contacts of components "Y123 (Left switchable engine mount)" and "Y123/1 (Right switchable engine mount)" via actuation.	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0022	Y130 (Engine oil pump valve)	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0023	Y131 (Oil spray nozzles shutoff valve)	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0024	Y133 (Coolant pump switchover valve)	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0025	Y76 (Fuel injectors)	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0026	Injector shutoff	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0027	Actuation of components "Y93 (Boost pressure control flap pressure transducer)" and "Y31/4 (Wastegate control pressure transducer)"	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0028	M4/7 (fan motor)	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
ACT0029	M16/57 (Exhaust flap controller)	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)
ACT0030	Y27/8 (Exhaust gas recirculation actuator, high pressure)	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)
ACT0031	Y27/7 (Exhaust gas recirculation actuator, low pressure)	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)
ACT0032	Y77/1 (Boost pressure regulator)	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)
ACT0033	Diagnostic glowing	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)
ACT0034	N33/2 (DPF regeneration heater booster control unit)	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)
ACT0035	Rail pressure	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)

ACT0036	A92/3 (Fuel filter module)	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)
ACT0037	F32k1 (Decoupling relay)	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)
ACT0038	Status of circuit 87	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)
ACT0039	Control unit reset	Emergency call system(E call [Europe])
ACT0040	Workshop mode	Emergency call system(E call [Europe])
ACT0041	Status LEDs	Emergency call system(E call [Europe])
ACT0042	Emergency call	Emergency call system(E call [Europe])
ACT0043	Self-test	Emergency call system(E call [Europe])
ACT0044	Speaker	Emergency call system(E call [Europe])
ACT0045	A1h1 (Warning buzzer)	Instrument cluster(IC)
ACT0046	Mechanical instrument pointers	Instrument cluster(IC)
ACT0047	A1p13 (Multifunction display)	Instrument cluster(IC)
ACT0048	Indicator lamps	Instrument cluster(IC)
ACT0049	A1e8 (Instrument illumination)	Instrument cluster(IC)
ACT0050	Segments on speedometer	Instrument cluster(IC)
ACT0051	USB interface	Communication module Telematics services(KOMO)
ACT0052	Restoration of initial authorization certificate	Communication module Telematics services(KOMO)
ACT0053	Transfer VIN to control unit "N112/2 (Telematics services communication module)".	Communication module Telematics services(KOMO)
ACT0054	Transfer certain digits of the VIN to the control unit "N112/2 (Telematics services communication module)".	Communication module Telematics services(KOMO)

ACT0055	Manufacturer default setting	Communication module Telematics services(KOMO)
ACT0056	Reset operating condition.	Communication module Telematics services(KOMO)
ACT0057	Special function	Communication module Telematics services(KOMO)
ACT0058	H4/27 (Center instrument panel speaker)	Telematic system(N123/4)(TS)
ACT0059	Muting	Telematic system(N123/4)(TS)
ACT0060	Button illumination of multifunction steering wheel	Steering column module(N80)(SCM)
ACT0061	Illumination of component "S16/13 (DIRECT SELECT lever)"	Steering column module(N80)(SCM)
ACT0062	S40/4v1 (SPEEDTRONIC light-emitting diode)	Steering column module(N80)(SCM)
ACT0063	S59/1e1 (Steering wheel heater indicator lamp)	Steering column module(N80)(SCM)
ACT0064	R22/4 (Steering wheel heater)	Steering column module(N80)(SCM)
ACT0065	M99 (Steering wheel vibration motor)	Steering column module(N80)(SCM)
ACT0066	Actuate LEDs.	AMG DRIVE UNIT(N145)(AMG DRVU)
ACT0067	LEDs of component "S192 (Transmission mode rotary switch)"	AMG DRIVE UNIT(N145)(AMG DRVU)
ACT0068	Actuate rear spoiler.	AMG DRIVE UNIT(N145)(AMG DRVU)
ACT0069	A7/3m1 (High-pressure and return flow pump)	Electronic stability program(N30/4)(ESP)
ACT0070	A7/3y11 (Left rear pressure regulating valve (pressure release))	Electronic stability program(N30/4)(ESP)
ACT0071	Unlocking of component "Navigation module"	Navigation module(A2/30)(NAV)
ACT0072	Output of test sound	Navigation module(A2/30)(NAV)
ACT0073	Measured volume level of microphone	Navigation module(A2/30)(NAV)

ACT0074	Measurement of reception field strength	Navigation module(A2/30)(NAV)
ACT0075	Self-test of control unit "ATA [EDW]/tow-away protection/interior protection"	Interior motion sensor(IMS)
ACT0076	Erase alarm sources	Interior motion sensor(IMS)
ACT0077	Actuation of components "S93/3s1 (Tow-away protection button)" and "S93/3s3 (Interior protection button)"	Interior motion sensor(IMS)
ACT0078	A69/1 (Left front tire pressure sensor)	Tire pressure monitor(N88)(TPM)
ACT0079	A69/2 (Right front tire pressure sensor)	Tire pressure monitor(N88)(TPM)
ACT0080	A69/3 (Left rear tire pressure sensor)	Tire pressure monitor(N88)(TPM)
ACT0081	A69/4 (Right rear tire pressure sensor)	Tire pressure monitor(N88)(TPM)
ACT0082	Wake-up line	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0083	Internal fan	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0084	External fan	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0085	Determination of number of receivable radio transmitters	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0086	Wiring test of radio antennas	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0087	Antenna measuring drive	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0088	Electrical self-test of microphones.	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0089	Volume level	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0090	Color display	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0091	Sample display	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0092	TV tuner	Audio or COMAND(A2-A40/3)(AUDIO)

ACT0093	AUX jack	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0094	Navigation	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0095	Display illumination	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0096	Extending/retracting the display	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0097	Backup camera	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0098	B84/3 (Reversing camera)	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0099	B84/5 (Front passenger outside mirror camera)	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0100	B84/6 (Passenger-side outside mirror backup camera)	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0101	Check CD/DVD insert and eject.	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0102	Slot for memory cardTest	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0103	TestUSB interface	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0104	Erase customer-specific data	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0105	Speaker(Development data)	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0106	Init_NTG45	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0107	Self-test of mobile phone cradle	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0108	Perform control unit reset.	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0109	Restart MOST ring.	Audio or COMAND(A2-A40/3)(AUDIO)
ACT0110	A1e52 (COLLISION PREVENTION ASSIST warning lamp)	Control unit 'COLLISION PREVENTION ASSIST'(A90)(CPA)
ACT0111	Power supply of taximeter	Multifunction control unit(Multifunction control unit)

ACT0112	Power supply (10.0A) for peripheral devices	Multifunction control unit(Multifunction control unit)
ACT0113	Power supply (5.0A) for peripheral devices	Multifunction control unit(Multifunction control unit)
ACT0114	Output "Windshield heater"	Multifunction control unit(Multifunction control unit)
ACT0115	Power supply of roof sign lamp	Multifunction control unit(Multifunction control unit)
ACT0116	Power supply for flashing lights in trunk lid or liftgate	Multifunction control unit(Multifunction control unit)
ACT0117	Power supply of two-way radio	Multifunction control unit(Multifunction control unit)
ACT0118	Output "Circuit 58"	Multifunction control unit(Multifunction control unit)
ACT0119	Output "Circuit 58d"	Multifunction control unit(Multifunction control unit)
ACT0120	Output "Circuit 15"	Multifunction control unit(Multifunction control unit)
ACT0121	Output "Status of taximeter"	Multifunction control unit(Multifunction control unit)
ACT0122	Output for indicator lamp of roof sign main switch	Multifunction control unit(Multifunction control unit)
ACT0123	Output for indicator lamp of button "Two-way radio cut-in"	Multifunction control unit(Multifunction control unit)
ACT0124	Output for indicator lamp of button "Two-way radio main switch"	Multifunction control unit(Multifunction control unit)
ACT0125	Output "Radio help call"	Multifunction control unit(Multifunction control unit)
ACT0126	Output "Seat occupied recognition"	Multifunction control unit(Multifunction control unit)
ACT0127	Output "Status of buttons for horns"	Multifunction control unit(Multifunction control unit)
ACT0128	Output "Travel distance"	Multifunction control unit(Multifunction control unit)
ACT0129	Activation Sound system	Engine sound(SG MSND)
ACT0130	Deactivation Engine sound	Engine sound(SG MSND)

ACT0131	KEYLESS GO system test	KEYLESS GO(N69/5)(KG)
ACT0132	KEYLESS-GO key search	KEYLESS GO(N69/5)(KG)
ACT0133	Actuation of fan	Sound system(SOUND)
ACT0134	Lighting	Sound system(SOUND)
ACT0135	Actuation of speakers	Sound system(SOUND)
ACT0136	H4/73 (Right door midrange speaker)	Sound system(SOUND)
ACT0137	H4/4h2 (Right rear woofer)	Sound system(SOUND)
ACT0138	H4/29 (Woofer)	Sound system(SOUND)
ACT0139	Left front speaker group	Sound system(SOUND)
ACT0140	H4/2h2 (Right front door woofer)	Sound system(SOUND)
ACT0141	H4/76 (Center instrument panel tweeter)	Sound system(SOUND)
ACT0142	H4/54 (Left rear surround speaker)	Sound system(SOUND)
ACT0143	H4/1h2 (Left front door woofer)	Sound system(SOUND)
ACT0144	Right front speaker group	Sound system(SOUND)
ACT0145	H4/57 (Right rear surround speaker)	Sound system(SOUND)
ACT0146	H4/3 (Left rear speaker)	Sound system(SOUND)
ACT0147	H4/35 (Center rear tweeter)/H4/77 (Center rear tweeter)	Sound system(SOUND)
ACT0148	H4/72 (Left door midrange speaker)	Sound system(SOUND)
ACT0149	H4/3h2 (Left rear woofer)	Sound system(SOUND)

ACT0150	H4/4 (Right rear speaker)	Sound system(SOUND)
ACT0151	1H4/29 (Woofer)-Solenoid 1	Sound system(SOUND)
ACT0152	Solenoid 2 of speaker H4/29 (Woofer)-Solenoid 2	Sound system(SOUND)
ACT0153	H4/77 (Center rear tweeter)	Sound system(SOUND)
ACT0154	H4/1h1 (Left front door tweeter)	Sound system(SOUND)
ACT0155	H4/2h1 (Right front door tweeter)	Sound system(SOUND)
ACT0156	H4/23 (Left instrument panel speaker)	Sound system(SOUND)
ACT0157	H4/24 (Right instrument panel speaker)	Sound system(SOUND)
ACT0158	Electrical self-test of speakers	Bose sound system(SOUND)
ACT0159	Control device	Bose sound system(SOUND)
ACT0160	Test of microphone for sound system	Bose sound system(SOUND)
ACT0161	H4/38 (Rear woofer)Solenoid 1	Bose sound system(SOUND)
ACT0162	H4/38 (Rear woofer)Solenoid 2	Bose sound system(SOUND)
ACT0163	H4/88 (Left door bass speaker)	Bose sound system(SOUND)
ACT0164	H4/89 (Right door bass speaker)	Bose sound system(SOUND)
ACT0165	H4/49 (Center rear speaker)	Bose sound system(SOUND)
ACT0166	Fan self-test	Bose sound system(SOUND)
ACT0167	Y51 (Left front axle damping valve unit)	Adaptive damping system(N51/5)(ADS)
ACT0168	Y52 (Right front axle damping valve unit)	Adaptive damping system(N51/5)(ADS)

ACT0169	Y53 (Left rear axle damping valve unit)	Adaptive damping system(N51/5)(ADS)
ACT0170	Y54 (Right rear axle damping valve unit)	Adaptive damping system(N51/5)(ADS)
ACT0171	M51/3m1 (Tailgate control electric motor)	Tailgate control(HKS)
ACT0172	H4/60 (Liftgate control warning buzzer)	Tailgate control(HKS)
ACT0173	Usage is only permissible in consultation with your hotline.	Tailgate control(HKS)
ACT0174	Check signal line to component "COMAND".	TV tuner (TV)
ACT0175	Check signal line to component "AVE-H".	TV tuner (TV)
ACT0176	Wiring test of TV antennas	TV tuner (TV)
ACT0177	Reception measurement for TV antennas by input of channel number	TV tuner (TV)
ACT0178	Reception measurement for TV antennas by input of frequency	TV tuner (TV)
ACT0179	Frequency of use of TV antennas	TV tuner (TV)
ACT0180	Reset	TV tuner (TV)
ACT0181	R50 (Auxiliary heater heating element)	Multifunction camera(MFK)
ACT0182	A9 (Refrigerant compressor)	Automatic air conditioning(AAC)
ACT0183	A9/5 (Electric refrigerant compressor)	Automatic air conditioning(AAC)
ACT0184	Y19/3 (Evaporator shutoff valve)	Automatic air conditioning(AAC)
ACT0185	A9y1 (Refrigerant compressor magnetic clutch)	Automatic air conditioning(AAC)
ACT0186	M13/5 (Coolant circulation pump)	Automatic air conditioning(AAC)
ACT0187	A32n1 (Blower regulator)	Automatic air conditioning(AAC)

ACT0188	R22/3 (PTC heater booster)	Automatic air conditioning(AAC)
ACT0189	N33/5 (High-voltage PTC heater)	Automatic air conditioning(AAC)
ACT0190	M91/6 (Heater circuit circulation pump)	Automatic air conditioning(AAC)
ACT0191	Rear windshield heater	Automatic air conditioning(AAC)
ACT0192	Switch and controls illumination of component "N22/7 (Automatic air conditioning control and operating unit)"	Automatic air conditioning(AAC)
ACT0193	LEDs of component "N22/7 (Automatic air conditioning control and operating unit)"	Automatic air conditioning(AAC)
ACT0194	M2/5 (Fresh air/recirculated air flap actuator motor)	Automatic air conditioning(AAC)
ACT0195	M2/4 (Central air distribution actuator motor)	Automatic air conditioning(AAC)
ACT0196	M2/6 (Left blend air flap actuator motor)	Automatic air conditioning(AAC)
ACT0197	M2/7 (Right blend air flap actuator motor)	Automatic air conditioning(AAC)
ACT0198	Reception measurement	Digital Audio Broadcasting(DAB)
ACT0199	Bit error rate	Digital Audio Broadcasting(DAB)
ACT0200	Function check	Stationary heater(STH)
ACT0201	Activation of stationary heater in test mode	Stationary heater(STH)
ACT0202	Unlock component "A6 (Stationary heater heater unit)".	Stationary heater(STH)
ACT0203	Teach in component "A8/3 (Stationary heater radio remote control transmitter)".	Stationary heater(STH)
ACT0204	Display test	Drive kit for iPhone(Drive Kit Plus)
ACT0205	HDMIInterface	Drive kit for iPhone(Drive Kit Plus)
ACT0206	Test picture display	Navigation(N125/2)(NAVI20)

ACT0207	Panoramic sliding sunroof	Control module 'Panoramic sliding roof'(A98)(PSD)
ACT0208	Roller sun blind	Control module 'Panoramic sliding roof'(A98)(PSD)
ACT0209	A76 (Left front reversible emergency tensioning retractor)	Left front reversible emergency tensioning retractor(RevETR LF)
ACT0210	Display	Head up display(HUD)
ACT0211	Display brightness	Head up display(HUD)
ACT0212	Mirror glass	Head up display(HUD)
ACT0213	A76/1 (Right front reversible emergency tensioning retractor)	Right front reversible emergency tensioning retractor(RevETR RF)
ACT0214	M27/1 (Driver seat fore/aft adjustment motor)	Electric seat adjustmnet Driver with memory function(ESV Driver)
ACT0215	M27/2 (Driver seat height adjustment motor)	Electric seat adjustmnet Driver with memory function(ESV Driver)
ACT0216	M27/3 (Driver seat inclination adjustment motor)	Electric seat adjustmnet Driver with memory function(ESV Driver)
ACT0217	M27/4 (Head restraint adjustment motor, driver seat)	Electric seat adjustmnet Driver with memory function(ESV Driver)
ACT0218	M27/5 (Driver seat backrest inclination adjustment motor)	Electric seat adjustmnet Driver with memory function(ESV Driver)
ACT0219	M27/8 (Seat adjustment motor, seat cushion length, driver seat)	Electric seat adjustmnet Driver with memory function(ESV Driver)
ACT0220	Steering column adjustment	Electric seat adjustmnet Driver with memory function(ESV Driver)
ACT0221	Test signal line of component "A2/82 (Satellite Digital Audio Radio (SDAR) antenna)".	Satellite radio(SDAR)
ACT0222	Test signal line of component "A28/11 (Multifunction antenna)".	Satellite radio(SDAR)
ACT0223	Self-test of control unit "HD radio"	Satellite radio(SDAR)
ACT0224	External feed and supply voltage	TV tuner Tuner unit(TB5)
ACT0225	Signal quality	TV tuner Tuner unit(TB5)

ACT0226	Signal level	TV tuner Tuner unit(TB5)
ACT0227	Supply voltageAntenna amplifier	TV tuner Tuner unit(TB5)
ACT0228	Signal/noise ratio	TV tuner (TV)
ACT0229	Reception field strength	TV tuner (TV)
ACT0230	M28/1 (Front passenger seat fore/aft adjustment motor)	Electric seat adjustment Front passenger with memory function(ESV Front passeng
ACT0231	M28/2 (Front passenger seat height adjustment motor)	Electric seat adjustment Front passenger with memory function(ESV Front passeng
ACT0232	M28/3 (Front passenger seat inclination adjustment motor)	Electric seat adjustment Front passenger with memory function(ESV Front passeng
ACT0233	M28/4 (Head restraint adjustment motor, front passenger seat)	Electric seat adjustment Front passenger with memory function(ESV Front passeng
ACT0234	M28/5 (Front passenger seat backrest inclination adjustment motor)	Electric seat adjustment Front passenger with memory function(ESV Front passeng
ACT0235	M28/8 (Seat adjustment motor, seat cushion length, front passenger seat)	Electric seat adjustment Front passenger with memory function(ESV Front passeng
ACT0236	Right turn signal	Trailer recognition module (N28/1)(TRM)
ACT0237	Left turn signal	Trailer recognition module (N28/1)(TRM)
ACT0238	Left taillamp	Trailer recognition module (N28/1)(TRM)
ACT0239	Right taillamp	Trailer recognition module (N28/1)(TRM)
ACT0240	Brake light	Trailer recognition module (N28/1)(TRM)
ACT0241	Rear fog light	Trailer recognition module (N28/1)(TRM)
ACT0242	Backup lamp	Trailer recognition module (N28/1)(TRM)
ACT0243	Terminal 30G "Trailer socket"	Trailer recognition module (N28/1)(TRM)
ACT0244	Indicator lamp of switch "S62/24"	Trailer recognition module (N28/1)(TRM)

ACT0245	Indicator lamp of component "A63"	Trailer recognition module (N28/1)(TRM)
ACT0246	Switch and controls illumination of switch "S62/24"	Trailer recognition module (N28/1)(TRM)
ACT0247	Unlocking of trailer hitch	Trailer recognition module (N28/1)(TRM)
ACT0248	Terminal 15G "Trailer socket"	Trailer recognition(Trailer recognition module)
ACT0249	Indicator lamp of switch "S142/2"	Trailer recognition(Trailer recognition module)
ACT0250	Switch and controls illumination of switch "S142/2"	Trailer recognition(Trailer recognition module)
ACT0251	Extension and retraction of trailer hitch	Trailer recognition(Trailer recognition module)
ACT0252	Actuation of fuel pump	Control unit Fuel pump(FSCU05)
ACT0253	Left outside mirror adjustment	Left front door(LFD)
ACT0254	Left mirror heater	Left front door(LFD)
ACT0255	Folding in/out of left outside mirror	Left front door(LFD)
ACT0256	Mirror dimming	Left front door(LFD)
ACT0257	Left memory function	Left front door(LFD)
ACT0258	Blind Spot Assist	Left front door(LFD)
ACT0259	Door handle illumination "Left front door"	Left front door(LFD)
ACT0260	Switch illumination "Left front door"	Left front door(LFD)
ACT0261	Turn signal lamp in left outside mirror	Left front door(LFD)
ACT0262	LEDs	Left front door(LFD)
ACT0263	Exit and warning lamp "Left front door"	Left front door(LFD)

ACT0264	E17/43 (Left front door ambiance illumination)	Left front door(LFD)
ACT0265	Ambient illumination	Left front door(LFD)
ACT0266	LED of switch "Rear passenger compartment seat heater"	Left front door(LFD)
ACT0267	Left front power window	Left front door(LFD)
ACT0268	Denormalization of left front power window	Left front door(LFD)
ACT0269	Central locking "Left front door"	Left front door(LFD)
ACT0270	Additional door lock "Left front door"	Left front door(LFD)
ACT0271	Start control unit reset.	Left front door(LFD)
ACT0272	Right outside mirror adjustment	Right front door(DCU RF)
ACT0273	Right mirror heater	Right front door(DCU RF)
ACT0274	Folding in/out of right outside mirror	Right front door(DCU RF)
ACT0275	Right memory function	Right front door(DCU RF)
ACT0276	Door handle illumination "Right front door"	Right front door(DCU RF)
ACT0277	Switch illumination "Right front door"	Right front door(DCU RF)
ACT0278	Turn signal lamp in right outside mirror	Right front door(DCU RF)
ACT0279	Exit and warning lamp "Right front door"	Right front door(DCU RF)
ACT0280	E17/44 (Right front door ambiance illumination)	Right front door(DCU RF)
ACT0281	Right front power window	Right front door(DCU RF)
ACT0282	Denormalization of right front power window	Right front door(DCU RF)

ACT0283	Central locking "Right front door"	Right front door(DCU RF)
ACT0284	Additional door lock "Right front door"	Right front door(DCU RF)
ACT0285	Electric parking brake	Electronic parking brake(N128)(EFB)
ACT0286	M76/1 (Left electric parking brake actuator motor)	Electronic parking brake(N128)(EFB)
ACT0287	M76/2 (Right electric parking brake actuator motor)	Electronic parking brake(N128)(EFB)
ACT0288	Move to the assembly position	Electronic parking brake(N128)(EFB)
ACT0289	Symbol illuminationA40/9 (Audio/COMAND control panel)	Audio/COMAND operating unit (A40/9)(COU)
ACT0290	Display in "SERVICE" position	Audio/COMAND display(ZAN)
ACT0291	Brightness	Audio/COMAND display(ZAN)
ACT0292	Headlamp range adjustment	Control unit 'Headlamp'(N71/1)(SG SW)
ACT0293	Active curve illumination	Control unit 'Headlamp'(N71/1)(SG SW)
ACT0294	Intelligent Light System	Control unit 'Headlamp'(N71/1)(SG SW)
ACT0295	Cornering illumination	Control unit 'Headlamp'(N71/1)(SG SW)
ACT0296	High beams	Control unit 'Headlamp'(N71/1)(SG SW)
ACT0297	Active curve illumination with steering angle	Left headlamp(SG SW L)
ACT0298	Intelligent light spread	Left headlamp(SG SW L)
ACT0299	LED exterior lights	Left headlamp(SG SW L)
ACT0300	Fan	Left headlamp(SG SW L)
ACT0301	Interior lamp	Control unit 'Overhead control panel'(OCP)

ACT0302	Reading lamps	Control unit 'Overhead control panel'(OCP)
ACT0303	Rear lamp	Control unit 'Overhead control panel'(OCP)
ACT0304	Mirror lamps of sun visors	Control unit 'Overhead control panel'(OCP)
ACT0305	Warning indicator "front parking system"	Parking system (N62)(PARK)
ACT0306	Warning indicator "rear parking system"	Parking system (N62)(PARK)
ACT0307	Actuation of function "Illumination"	DIRECT SELECT interface(N150)(DSI)
ACT0308	Y68/3 (All-wheel drive solenoid valve)	All wheel drive(VG)
ACT0309	Actuate component "H3/1 (Alarm siren)".	Alarm siren(H3/1)(AS)
ACT0310	N42 (Camera cover control unit)	Control unit Camera cover(KAB)
ACT0311	Self-test of control unit "N42 (Camera cover control unit)"	Control unit Camera cover(KAB)
ACT0312	Valve flushing	Electronic transmission control for double-plate clutch transmission(DKG)
ACT0313	Workshop test	Electronic transmission control for double-plate clutch transmission(DKG)
ACT0314	Coolant pump actuation	Electronic transmission control for double-plate clutch transmission(DKG)
ACT0315	Test of park pawl	Electronic transmission control for double-plate clutch transmission(DKG)
ACT0316	Self-test of system "Differential lock"	Electronic transmission control for double-plate clutch transmission(DKG)
ACT0317	Oil level check	Electronic transmission control for double-plate clutch transmission(DKG)
ACT0318	Shift transmission to neutral position.	Electronic transmission control for double-plate clutch transmission(DKG)
ACT0319	Tests for fault code	Electronic transmission control for double-plate clutch transmission(DKG)
ACT0320	Empty fuel tank.	Fuel pump(FSCU)

ACT0321	M16/46 (Low-pressure exhaust gas recirculation actuator motor)	N127 (Drivetrain control unit)(PTCU)
ACT0322	R39/2 (Wide open throttle operation vent line heating element)	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
ACT0323	Y49/1 (Intake camshaft solenoid)	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
ACT0324	Y49/2 (Exhaust camshaft solenoid)	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
ACT0325	Y58/1 (Purging switchover valve)	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
ACT0326	Y58/4 (Activated charcoal canister shutoff valve)	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
ACT0327	Y31/5 (Boost pressure control pressure transducer)	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
ACT0328	Y94 (Quantity control valve)	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
ACT0329	Y101 (Deceleration air switchover valve)	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
ACT0330	A1e58 (Engine diagnosis indicator lamp)	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
ACT0331	Mixture formation	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
ACT0332	Rail pressure reduction	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
ACT0333	Y49/8 (Intake camshaft valve lift switching actuator)	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
ACT0334	Exhaust gas recirculation	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
ACT0335	M44 (charge air cooler circulation pump)	Motor electronics "MED40AMG" for combustion engine "M133"(N3/10)(ME)
ACT0336	A92/3r1 (Fuel filter heater heating element)	Engine Electronics CRR2 for Internal Combustion Engine OM608(CDI)
ACT0337	Notes on actuations of component parts in other control units	Engine Electronics CRR2 for Internal Combustion Engine OM608(CDI)
ACT0338	Y100/2 (Boost pressure control pressure transducer)	N3/40-Motor electronics "MRD1" for combustion engine "OM654"(CDI)
ACT0339	Y77 (Wastegate pressure transducer)	N3/40-Motor electronics "MRD1" for combustion engine "OM654"(CDI)

ACT0340	Actuation of components "Y100/2 (Boost pressure control pressure transducer)", "Y77 (Wastegate pressure transducer)" and "Y77/1 (Boost pressure positioner)"	N3/40-Motor electronics "MRD1" for combustion engine "OM654"(CDI)
ACT0341	CAMTRONIC	N3/40-Motor electronics "MRD1" for combustion engine "OM654"(CDI)
ACT0342	Setting Mirror glass Left	Left front door(LFD)
ACT0343	Mirror dimming Left	Left front door(LFD)
ACT0344	Switch and controls illumination	Left front door(LFD)
ACT0345	Warning lamp "Blind Spot Assist"	Left front door(LFD)
ACT0346	Ambient illumination "Left outside mirror"	Left front door(LFD)
ACT0347	External door handle illumination	Left front door(LFD)
ACT0348	LED of switch "Child safety lock"	Left front door(LFD)
ACT0349	LED of switch "Mirror selection"	Left front door(LFD)
ACT0350	LED of switch "Left front seat ventilation"	Left front door(LFD)
ACT0351	LED of switch "Left front seat heater"	Left front door(LFD)
ACT0352	LED "SwitchesRefueling safety detection"	Left front door(LFD)
ACT0353	Setting Mirror glass Right	Right front door(DCU RF)
ACT0354	Mirror dimming Right	Right front door(DCU RF)
ACT0355	Switch and controls illumination Switches	Right front door(DCU RF)
ACT0356	Warning lamp Blind Spot Assist	Right front door(DCU RF)
ACT0357	Ambient illumination "Right outside mirror"	Right front door(DCU RF)
ACT0358	LED of switch "Right front seat ventilation"	Right front door(DCU RF)

ACT0359	LED of switch "Right front seat heater"	Right front door(DCU RF)
ACT0360	Central locking "Left rear door"	Left rear door(DCU LR)
ACT0361	Additional door lock "Left rear door"	Left rear door(DCU LR)
ACT0362	Left rear power window	Left rear door(DCU LR)
ACT0363	Denormalization of left rear power window	Left rear door(DCU LR)
ACT0364	LED of switch "Left rear heated seat"	Left rear door(DCU LR)
ACT0365	LED of switch "Right rear seat ventilation"	Left rear door(DCU LR)
ACT0366	Switch and controls illuminationSwitches	Left rear door(DCU LR)
ACT0367	Central locking "Right rear door"	Right rear door(DCU RR)
ACT0368	Additional door lock "Right rear door"	Right rear door(DCU RR)
ACT0369	Right rear power window	Right rear door(DCU RR)
ACT0370	Denormalization of right rear power window	Right rear door(DCU RR)
ACT0371	LED of switch "Right rear heated seat"	Right rear door(DCU RR)
ACT0372	Switch and controls illumination of component "S2/2 (Start/stop button with ECO start/stop function button)"	Electronic ignition switch(EZS)
ACT0373	M27/10 (Seat adjustment motor, seat height adjustment, driver seat)	Electric seat adjustmnet Driver(ESV Driver)
ACT0374	M27/9 (Seat inclination adjustment motor, driver seat)	Electric seat adjustmnet Driver(ESV Driver)
ACT0375	M27/8 (Seat cushion length adjustment motor, driver seat)	Electric seat adjustmnet Driver(ESV Driver)
ACT0376	M20/2 (Steering column up/down adjustment motor)	Electric seat adjustmnet Driver(ESV Driver)
ACT0377	M20/1 (Steering column in/out adjustment motor)	Electric seat adjustmnet Driver(ESV Driver)

ACT0378	M28/10 (Seat adjustment motor, seat height adjustment, front passenger seat)	Electric seat adjustment Front passenger(ESA Front passenger)
ACT0379	M28/9 (Seat inclination adjustment motor, front passenger seat)	Electric seat adjustment Front passenger(ESA Front passenger)
ACT0380	M28/8 (Seat cushion length adjustment motor, front passenger seat)	Electric seat adjustment Front passenger(ESA Front passenger)
ACT0381	M104 (Footrest adjustment actuator motor)	Electric seat adjustment Front passenger(ESA Front passenger)
ACT0382	M86 (Screen adjustment actuator motor)	Electric seat adjustment Front passenger(ESA Front passenger)
ACT0383	F152/3kG (Engine compartment circuit 15 relay)	Front signal acquisition and actuation module(Driver side SAM)
ACT0384	F152/4kM (Vehicle interior circuit 15R relay)	Front signal acquisition and actuation module(Driver side SAM)
ACT0385	F152/4kL (Rear window heater relay)	Front signal acquisition and actuation module(Driver side SAM)
ACT0386	Fanfare horn	Front signal acquisition and actuation module(Driver side SAM)
ACT0387	M35/2 (Rear camera cover motor)	Front signal acquisition and actuation module(Driver side SAM)
ACT0388	M24 (Rear window roller sun blind motor)	Front signal acquisition and actuation module(Driver side SAM)
ACT0389	Actuation of air cushion of upper lumbar support	Left front multicontour seat(MKS LF)
ACT0390	Actuation of air cushion of lower lumbar support	Left front multicontour seat(MKS LF)
ACT0391	Actuation of air cushion "Seat side bolsters of sitting surface"	Left front multicontour seat(MKS LF)
ACT0392	Actuation of air cushions in seat side bolsters	Left front multicontour seat(MKS LF)
ACT0393	Actuation of air cushion of left seat side bolster	Left front multicontour seat(MKS LF)
ACT0394	Actuation of air cushion of right seat side bolster	Left front multicontour seat(MKS LF)
ACT0395	M51/3 (Tailgate control drive unit)	Tailgate control(HKS)
ACT0396	LIN bus1:Driver door	Ambiance light(AML)

ACT0397	LIN bus2:Passenger door	Ambiance light(AML)
ACT0398	LIN bus3:Left rear door	Ambiance light(AML)
ACT0399	LIN bus4:Right rear door	Ambiance light(AML)
ACT0400	LIN bus5:Instrument cluster,Center console	Ambiance light(AML)
ACT0401	LIN bus6:Midrange speaker	Ambiance light(AML)
ACT0402	LIN bus7:Instrument panel,Footwell,Cup holder in center console	Ambiance light(AML)
ACT0403	All	Ambiance light(AML)
ACT0404	Pointer	Instrument cluster(IC)
ACT0405	H4/61 (Instrument cluster speaker)	Instrument cluster(IC)
ACT0406	Instrument illumination	Instrument cluster(IC)
ACT0407	Warning message	Instrument cluster(IC)
ACT0408	ActuatorDifferential lock	AMG DRIVE UNIT(AMG DRVU)
ACT0409	Lower control panelCenter console	AMG DRIVE UNIT(AMG DRVU)
ACT0410	N170 (Rear wing control unit)	AMG DRIVE UNIT(AMG DRVU)
ACT0411	AMGAmbient illumination	AMG DRIVE UNIT(AMG DRVU)
ACT0412	Indicator lamp "Green" of component "X58/23 (Charger feed-in socket)"	Charger(SG LG)
ACT0413	Indicator lamp "Red" of component "X58/23 (Charger feed-in socket)"	Charger(SG LG)
ACT0414	Indicator lamp "White" of component "X58/23 (Charger feed-in socket)"	Charger(SG LG)
ACT0415	Locking or unlocking of charging cable on component "X58/23 (Charger feed-in socket)"	Charger(SG LG)

ACT0416	Locking/unlocking of exterior socket flap of vehicle socket	Charger(SG LG)
ACT0417	High-voltage component lock	Charger(SG LG)
ACT0418	Interior lights	Overhead control panel(OCP)
ACT0419	Dome lampLoad compartment	Overhead control panel(OCP)
ACT0420	Left front seat heater	'Front passenger" seat heater(SIH BFS)
ACT0421	Right front seat heater	'Front passenger" seat heater(SIH BFS)
ACT0422	Left front seat ventilation	'Front passenger" seat heater(SIH BFS)
ACT0423	Right front seat ventilation	'Front passenger" seat heater(SIH BFS)
ACT0424	Enabling of function "Seat heater"	'Front passenger" seat heater(SIH BFS)
ACT0425	Counter Seat cushion	'Front passenger" seat heater(SIH BFS)
ACT0426	Counter Seat backrest	'Front passenger" seat heater(SIH BFS)
ACT0427	Blower	Automatic air conditioning(AAC)
ACT0428	A9/7y2 (Refrigerant compressor magnetic clutch)	Automatic air conditioning(AAC)
ACT0429	Erasing of all taught-in radio remote control transmitters	Radio remote control of stationary heater(TSTH)
ACT0430	S6/1s1 (Steering-Pilot button)	Radar sensors control unit(SGR)
ACT0431	S6/1s2 (Lane Keeping Assist button)	Radar sensors control unit(SGR)
ACT0432	360?camera	PARKTRONIC(PTS)
ACT0433	Self-test of system "Clutch"	All-wheel drive(VG)
ACT0434	Function test of component "Transfer case"	All-wheel drive(VG)

ACT0435	A103/2m1 (AdBlue?delivery pump)	Selective catalytic reduction(SCR)
ACT0436	A103/1r1 (AdBlue?tank heating element)	Selective catalytic reduction(SCR)
ACT0437	R7/1 (AdBlue?pressure line heating element)	Selective catalytic reduction(SCR)
ACT0438	Y129 (AdBlue?metering valve)	Selective catalytic reduction(SCR)
ACT0439	Evacuation of pressure line of system "AdBlue?"	Selective catalytic reduction(SCR)
ACT0440	Bleeding of system "AdBlue?"	Selective catalytic reduction(SCR)
ACT0441	M4/16 (Engine oil cooler fan motor)	N127 (Drivetrain control unit)(PTCU)
ACT0442	M16/53 (Left exhaust flap actuator motor)	N127 (Drivetrain control unit)(PTCU)
ACT0443	M16/54 (Right exhaust flap actuator motor)	N127 (Drivetrain control unit)(PTCU)
ACT0444	M16/55 (Center exhaust flap actuator motor)	N127 (Drivetrain control unit)(PTCU)
ACT0445	M43/7 (Low temperature circuit circulation pump 2)	N127 (Drivetrain control unit)(PTCU)
ACT0446	M43/8 (Low-temperature circuit circulation pump 3)	N127 (Drivetrain control unit)(PTCU)
ACT0447	Y73/1 (Low-temperature circuit switchover valve)	N127 (Drivetrain control unit)(PTCU)
ACT0448	Y73/2 (Low-temperature circuit switchover valve 2)	N127 (Drivetrain control unit)(PTCU)
ACT0449	Y110 (High-voltage battery cooling system expansion valve)	N127 (Drivetrain control unit)(PTCU)
ACT0450	Y140 (High-voltage battery cooling system switchover valve)	N127 (Drivetrain control unit)(PTCU)
ACT0451	M2/37 (Radiator trim flap actuator motor)	N127 (Drivetrain control unit)(PTCU)
ACT0452	M87 (Radiator shutters actuator motor)	N127 (Drivetrain control unit)(PTCU)
ACT0453	M2/38 (Upper radiator trim flap actuator motor)	N127 (Drivetrain control unit)(PTCU)

ACT0454	M2/39 (Lower radiator trim flap actuator motor)	N127 (Drivetrain control unit)(PTCU)
ACT0455	Check power consumption of component "M43/6 (Low temperature circuit circulation pump 1)" via actual value.	N127 (Drivetrain control unit)(PTCU)
ACT0456	M43/6 (Low temperature circuit circulation pump 1)(MFA2)	N127 (Drivetrain control unit)(PTCU)
ACT0457	Check power consumption of component "M43/7 (Low temperature circuit circulation pump 2)" via actual value.	N127 (Drivetrain control unit)(PTCU)
ACT0458	M43/7 (Low temperature circuit circulation pump 2)(MFA2)	N127 (Drivetrain control unit)(PTCU)
ACT0459	Check power consumption of component "M43/8 (Low-temperature circuit circulation pump 3)" via actual value.	N127 (Drivetrain control unit)(PTCU)
ACT0460	M108/1 (Engine cooling air flap left actuator motor)	N127 (Drivetrain control unit)(PTCU)
ACT0461	M108/2 (Engine cooling air flap right actuator motor)	N127 (Drivetrain control unit)(PTCU)
ACT0462	Lock high-voltage component lock.	Power electronics(SG EM)
ACT0463	Unlock high-voltage component lock.	Power electronics(SG EM)
ACT0464	Signal generator for interlock circuit	Battery management system(BMS)
ACT0465	Contactors of high-voltage battery	Battery management system(BMS)
ACT0466	Isolation measurement	Battery management system(BMS)
ACT0467	M16/7 (Boost pressure control flap actuator)	N3/10-Motor electronics "EM71" for combustion engine "M282"(ME)
ACT0468	Shift operation(CAMTRONIC)	N3/10-Motor electronics "EM71" for combustion engine "M282"(ME)
ACT0469	High fuel pressure	N3/10-Motor electronics "EM71" for combustion engine "M282"(ME)
ACT0470	M43/4 (Starter-alternator coolant pump)	N3/10-Motor electronics "MED41" for combustion engine "M260/M264"(ME)
ACT0471	M75/11 (Electric coolant pump)	N3/10-Motor electronics "MED41" for combustion engine "M260/M264"(ME)
ACT0472	Y58/2 (Partial load operation crankcase ventilation valve)	N3/10-Motor electronics "MED41" for combustion engine "M260/M264"(ME)

ACT0473	Y58/9 ((Fuel tank bleed valve))	N3/10-Motor electronics "MRG1AMGR4" for combustion engine "M139"(ME)
ACT0474	Y49/4 (Left intake camshaft solenoid)	N3/10-Motor electronics "MRG1AMGR4" for combustion engine "M139"(ME)
ACT0475	Y49/6 (Left exhaust camshaft solenoid)	N3/10-Motor electronics "MRG1AMGR4" for combustion engine "M139"(ME)
ACT0476	Erase alarm sources.	Alarm siren(H3/1)(AS)
ACT0477	Check battery of component "H3/1 (Alarm siren)".	Alarm siren(H3/1)(AS)
ACT0478	Y32 (Air pump switchover valve)M33 (electric air pump)(EURO 3	Motor electronics 9.7(ME 9.7)
ACT0479	Y62 (Fuel injectors)	Motor electronics 9.7(ME 9.7)
ACT0480	Y58/1 (Purge control valve)	Motor electronics 9.7(ME 9.7)
ACT0481	Y58/4 (Activated charcoal canister shut-off valve)	Motor electronics 9.7(ME 9.7)
ACT0482	Mixture adaptation	Motor electronics 9.7(ME 9.7)
ACT0483	M4/7 (Engine and AC electric suction fan with integrated control)	Motor electronics 9.7(ME 9.7)
ACT0484	Fuel tank leak test	Motor electronics 9.7(ME 9.7)
ACT0485	Y22/6 (variable intake manifold switchover valve)	Motor electronics 9.7(ME 9.7)
ACT0486	Y49/5 (Right camshaft intake solenoid)	Motor electronics 9.7(ME 9.7)
ACT0487	Y49/4 (Left camshaft intake solenoid)	Motor electronics 9.7(ME 9.7)
ACT0488	Y49/7 (Right camshaft exhaust solenoid)	Motor electronics 9.7(ME 9.7)
ACT0489	Y49/6 (Left camshaft exhaust solenoid)	Motor electronics 9.7(ME 9.7)
ACT0490	Y110 (Three-disk thermostat valve)	Motor electronics 9.7(ME 9.7)
ACT0491	Y16/2 (Heating system shutoff valve)	Motor electronics 9.7(ME 9.7)

ACT0492	Alternator diagnosis	Motor electronics 9.7(ME 9.7)
ACT0493	BAS Brake assist in ESP Electronic Stability Program	Electronic stability program(ESP)
ACT0494	PML speed-sensitive power steering	Electronic stability program(ESP)
ACT0495	Road test	Electronic stability program(ESP)
ACT0496	Actuation of the instrument pointer up to the maximum position	Instrument cluster(IC)
ACT0497	Actuate light warning buzzer	Instrument cluster(IC)
ACT0498	Display test images on the LCD display	Instrument cluster(IC)
ACT0499	Bulb test	Instrument cluster(IC)
ACT0500	Shift transfer case.	Transfer case(VG)
ACT0501	Gear selector switch position	Intelligent servo module(ISM)
ACT0502	Actuation of actuator motor in position P R N D	Intelligent servo module(ISM)
ACT0503	Charging of spring accumulator	Intelligent servo module(ISM)
ACT0504	Control unit back in normal mode	Intelligent servo module(ISM)
ACT0505	Move transmission into Neutral position.	Intelligent servo module(ISM)
ACT0506	Actuation of actuator motor in position P R N D	Shift module(ISM)
ACT0507	Release pressure in central reservoir.	Suspension
ACT0508	Fill central reservoir.	Suspension
ACT0509	Left front damper valves	Suspension
ACT0510	Right front damper valves	Suspension

ACT0511	Left rear damper valves	Suspension
ACT0512	Right rear damper valves	Suspension
ACT0513	Move toward calibrated level (automatic).	Suspension
ACT0514	Move toward calibrated level (manually).	Suspension
ACT0515	Rear lighting	Overhead control panel(OCP)
ACT0516	Left reading lamp	Overhead control panel(OCP)
ACT0517	Right reading lamp	Overhead control panel(OCP)
ACT0518	Switch illumination	Overhead control panel(OCP)
ACT0519	Vanity mirror illumination	Overhead control panel(OCP)
ACT0520	Function illumination	Upper control panel(UCP)
ACT0521	Terminal 58d	Rear control field(HBF)
ACT0522	Function illumination Dynamic test	Rear control field(HBF)
ACT0523	All front exterior lights	Signal acquisition and actuation module front(SAM F)
ACT0524	Windshield washer pump (Front)	Signal acquisition and actuation module front(SAM F)
ACT0525	Windshield washer pump (Rear)	Signal acquisition and actuation module front(SAM F)
ACT0526	Headlamp cleaning system	Signal acquisition and actuation module front(SAM F)
ACT0527	Terminal 15	Signal acquisition and actuation module front(SAM F)
ACT0528	Denormalize rear left power window	Signal acquisition and actuation module front(SAM F)
ACT0529	Denormalize rear right power window	Signal acquisition and actuation module front(SAM F)

ACT0530	Central locking (Left rear door)	Signal acquisition and actuation module front(SAM F)
ACT0531	Charge line to additional battery	Signal acquisition and actuation module front(SAM F)
ACT0532	Denormalizing of left front power window	Door control module front left(DCM FL)
ACT0533	Mirror lens adjustment	Door control module front left(DCM FL)
ACT0534	Mirror heater	Door control module front left(DCM FL)
ACT0535	Switch illumination (Terminal 58d)	Door control module front left(DCM FL)
ACT0536	E6/5 (Left exterior mirror turn signal lamp)	Door control module front left(DCM FL)
ACT0537	E17/3 (Left front door entry/exit lamp)	Door control module front left(DCM FL)
ACT0538	M21/1e1 (Left outside mirror ambient lamp)	Door control module front left(DCM FL)
ACT0539	Denormalizing of right front power window	Door control module front right(DCM FR)
ACT0540	E6/6 (Right exterior mirror turn signal lamp)	Door control module front right(DCM FR)
ACT0541	E17/4 (Right front door entry/exit lamp)	Door control module front right(DCM FR)
ACT0542	M21/2e1 (Right outside mirror ambient lamp)	Door control module front right(DCM FR)
ACT0543	Inflatable cushion for lateral support	Left front dynamic seat(DS LF)
ACT0544	Top inflatable cushion in lumbar region	Left front dynamic seat(DS LF)
ACT0545	Bottom inflatable cushion in lumbar region	Left front dynamic seat(DS LF)
ACT0546	Function lighting in switch S109s1 (Left front PULSE switch)	Left front dynamic seat(DS LF)
ACT0547	Function lighting in switch S109/1 (Left front DYNAMIC switch)	Left front dynamic seat(DS LF)
ACT0548	Function lighting in switch S108s1 (Right front PULSE switch)	Right front dynamic seat(DS RF)

ACT0549	Function lighting in switch S108/1 (Right front DYNAMIC switch)	Right front dynamic seat(DS RF)
ACT0550	Release actuators	Electric fold-down backrest system (3rd seat row)(ERA)
ACT0551	Actuations	Steering column module(SCM [MRM])
ACT0552	Denormalization of the rear-end door closing system	Rear end door closing control module(REDC)
ACT0553	Actuation of the rear-end door closing system	Rear end door closing control module(REDC)
ACT0554	Actuation of warning buzzer	Rear end door closing control module(REDC)
ACT0555	Actuation of switch and controls illumination	Rear end door closing control module(REDC)
ACT0556	Left seat heater	Seat heater(HS)
ACT0557	Right seat heater	Seat heater(HS)
ACT0558	Left rear heated seat	Seat heater(HS)
ACT0559	Right rear heated seat	Seat heater(HS)
ACT0560	Headlamp range adjustment of left headlamp	Xenon headlamp, left(XALWA L)
ACT0561	Headlamp range adjustment of left and right headlamps	Xenon headlamp, left(XALWA L)
ACT0562	Curve illumination of left headlamp	Xenon headlamp, left(XALWA L)
ACT0563	Curve illumination of left and right headlamps	Xenon headlamp, left(XALWA L)
ACT0564	Headlamp range adjustment of right headlamp	Xenon headlamp, right(XALWA R)
ACT0565	Curve illumination of right headlamp	Xenon headlamp, right(XALWA R)
ACT0566	M2/5 (Fresh and recirculated air flaps actuator)	Automatic air conditioning(AAC)
ACT0567	M2/12 (Rear shutoff flap positioning motor)	Automatic air conditioning(AAC)

ACT0568	M2/21 (Rear air distribution flap positioning motor)	Automatic air conditioning(AAC)
ACT0569	A32m1 (Blower motor)	Automatic air conditioning(AAC)
ACT0570	Electric suction fan	Automatic air conditioning(AAC)
ACT0571	Illumination of pushbutton control module	Automatic air conditioning(AAC)
ACT0572	AC compressor	Automatic air conditioning(AAC)
ACT0573	M13 (Heating water circulation pump)	Automatic air conditioning(AAC)
ACT0574	Closing air recirculation flap (for cleaning)	Automatic air conditioning(AAC)
ACT0575	Heated steering wheel	Steering wheel heater(LRH)
ACT0576	Switch on stationary heater (normal mode).	Stationary heater with remote control(STH)
ACT0577	Switch on stationary heater (test mode).	Stationary heater with remote control(STH)
ACT0578	Heating/Switch on ventilation in line with the request from the AC pushbutton control module.	Stationary heater with remote control(STH)
ACT0579	Selftest of control module Left rear screen	Left rear screen
ACT0580	Output of test tone(Test of headphones output)	Left rear screen
ACT0581	Display test images on the LCD display.(Left rear screen)	Left rear screen
ACT0582	Output of audio and video signal from CD/DVD drive on control unit 'Left rear screen'.	Left rear screen
ACT0583	Output of audio and video signal from AUX jack on control unit 'Left rear screen'.	Left rear screen
ACT0584	Selftest of control module Right rear screen	Right rear screen
ACT0585	Display test images on the LCD display.(Right rear screen)	Right rear screen
ACT0586	Output of audio and video signal from CD/DVD drive on control unit 'Right rear screen'.	Right rear screen

ACT0587	Output of audio and video signal from AUX jack on control unit 'Right rear screen'.	Right rear screen
ACT0588	M13/7 (Transmission oil cooler circulation pump)	Common Rail Diesel Injection(CDI 6)
ACT0589	M55 (Inlet port shutoff motor)	Common Rail Diesel Injection(CDI 6)
ACT0590	R39/1 (Vent line heater element)	Common Rail Diesel Injection(CDI 6)
ACT0591	Y27/9 (Left EGR positioner)	Common Rail Diesel Injection(CDI 6)
ACT0592	AdBlue reversing valve	Selective Catalytic Reduction(SCR)
ACT0593	AdBlue delivery pump	Selective Catalytic Reduction(SCR)
ACT0594	Heating	Selective Catalytic Reduction(SCR)
ACT0595	AdBlue metering valve	Selective Catalytic Reduction(SCR)
ACT0596	AdBlue(R) return flow	Selective Catalytic Reduction(SCR)
ACT0597	G3/2 (O2 sensor upstream of KAT)	Common Rail Diesel Injection(CDI 60LS)
ACT0598	N14/3 (Glow time output stage)	Common Rail Diesel Injection(CDI 60LS)
ACT0599	Y85 (EGR [AGR] cooler bypass flap switchover valve)	Common Rail Diesel Injection(CDI 60LS)
ACT0600	Check component "Fuel filter heater".	N3/9-Motor electronics "CR43" for combustion engine "OM651"(CDI)
ACT0601	Switchable engine mountsY123 (Left switchable engine mount)Y123/1 (Right switchable engine mount)	N3/9-Motor electronics "CDI60LS" for combustion engine "OM642"(CDI)
ACT0602	Perform diagnostic glowing.	N3/9-Motor electronics "CDI60LS" for combustion engine "OM642"(CDI)
ACT0603	Switch off incline recognition for dynamometer mode.	Y3/8n4-Fully integrated transmission control(IGS)
ACT0604	Closing of torque converter lockup clutch	Y3/8n4-Transmission control for 9 speed transmission(VGS)
ACT0605	A103/2y1 (AdBlue?switchover valve)	Selective Catalytic Reduction(SCR)

ACT0606	AdBlue?delivery pump	Selective Catalytic Reduction(SCR)
ACT0607	Dynamic test of component "A103/2m1 (AdBlue?delivery pump)"	Selective Catalytic Reduction(SCR)
ACT0608	AdBlue?return	Selective Catalytic Reduction(SCR)
ACT0609	Visual leak test	Selective Catalytic Reduction(SCR)
ACT0610	Test of AdBlue?metering amount	Selective Catalytic Reduction(SCR)
ACT0611	A103/1r2 (AdBlue?pressure line heating element)	Selective Catalytic Reduction(SCR)
ACT0612	A103/2r1 (AdBlue?delivery module heating element)	Selective Catalytic Reduction(SCR)
ACT0613	A103/2m2 (AdBlue?extraction pump)	Selective catalytic reduction(SCR)
ACT0614	Isolation measurement with open contactors-Relay "OPEN"	Battery management system(N82/2)(BMS)
ACT0615	Battery capacity/Determination of status of high-voltage battery	Battery management system(N82/2)(BMS)
ACT0616	Self-test of control unit "DVD player"	Rear audio video unit(AVE H)
ACT0617	Output of an audio and video signal from control unit "COMAND" on the displays in the rear passenger compartment	Rear audio video unit(AVE H)
ACT0618	Output of an audio and video signal from the DVD player on the displays in the rear passenger compartment	Rear audio video unit(AVE H)
ACT0619	Output of an audio and video signal from the AUX jack on the displays in the rear passenger compartment	Rear audio video unit(AVE H)
ACT0620	Actuator control	Touchpad(TPAD)
ACT0621	Calibration of touch-sensitive surface	Touchpad(TPAD)
ACT0622	Locking/unlocking of socket flap	Charger(SG LG)
ACT0623	M56 (Vacuum pump)	Regenerative braking system(N30/6)(ESP)
ACT0624	Actuation of pneumatic pump	Pneumatic pump for active multicontour seat(PPAMKS)

ACT0625	Clear fault memory	Pneumatic pump for active multicontour seat(PPAMKS)
ACT0626	Check overall system for leaktightness and compressed air supply.	Pneumatic pump for active multicontour seat(PPAMKS)
ACT0627	M40 (Multicontour seat pneumatic pump)	Pneumatic pump for multicontour seat(PPAMKS)
ACT0628	M40/1 (Dynamic multicontour seat pneumatic pump)	Pneumatic pump for multicontour seat(PPAMKS)
ACT0629	M40/1 (Active multicontour seat pneumatic pump)	Pneumatic pump for multicontour seat(PPAMKS)
ACT0630	Compressed air valveDRAINING	Pneumatic pump for multicontour seat(PPAMKS)
ACT0631	Actuation of air cushion "Seat cushion length"	Left front multicontour seat(MKS LF)
ACT0632	ActuationM25/8 (Left front multicontour seat pneumatic pump)	Left front multicontour seat(MKS LF)
ACT0633	Check compressed air line between control unit "N32/29 (Driver multicontour seat control unit)" and air cushion for kinks and blockage.	Left front multicontour seat(MKS LF)
ACT0634	Check compressed air line between control unit "N32/30 (Front passenger multicontour seat control unit)" and air cushion for kinks and blockage.	Left front multicontour seat(MKS LF)
ACT0635	360 deg C camera	360 camera(N148)(CAMERA)
ACT0636	ActuationM25/9 (Right front multicontour seat pneumatic pump)	Right front multicontour seat(MKS RF)
ACT0637	Calibration of microphone for sound system	Bose sound system(SOUND)
ACT0638	Y36/6y5 (AIRMATIC central reservoir filling valve)	Adaptive damping system(N51/5)(ADS)
ACT0639	A9/1y1 (AIRMATIC pressure relief valve)	Adaptive damping system(N51/5)(ADS)
ACT0640	K67 (AIRMATIC relay)	Adaptive damping system(N51/5)(ADS)
ACT0641	Move to calibrated vehicle level (automatically).	Adaptive damping system(N51/5)(ADS)
ACT0642	Move to calibrated vehicle level (manually).	Adaptive damping system(N51/5)(ADS)
ACT0643	Y36/6y1 (Left front level control valve)	Adaptive damping system(N51/5)(ADS)

ACT0644	Y36/6y2 (Right front level control valve)	Adaptive damping system(N51/5)(ADS)
ACT0645	Y36/6y3 (Left rear level control valve)	Adaptive damping system(N51/5)(ADS)
ACT0646	Y36/6y4 (Right rear level control valve)	Adaptive damping system(N51/5)(ADS)
ACT0647	Left front suspension strut	Adaptive damping system(N51/5)(ADS)
ACT0648	Right front suspension strut	Adaptive damping system(N51/5)(ADS)
ACT0649	Right rear suspension strut	Adaptive damping system(N51/5)(ADS)
ACT0650	Left rear suspension strut	Adaptive damping system(N51/5)(ADS)
ACT0651	F58kT (AIRmatic relay)	Adaptive damping system(N51/5)(ADS)
ACT0652	Erase fault memory.	TV tuner(TV)
ACT0653	F4kB (Rear window heater relay)	Automatic air conditioning(AAC)
ACT0654	F58kS (Wiper park position heater relay)	Automatic air conditioning(AAC)
ACT0655	N29 (Electronic blower regulator)	Automatic air conditioning(AAC)
ACT0656	N29/8 (Booster blower electronic blower controller)	Automatic air conditioning(AAC)
ACT0657	N29/2 (Rear air conditioning electronic blower regulator)	Automatic air conditioning(AAC)
ACT0658	M2/8 (Left defroster flap actuator motor)	Automatic air conditioning(AAC)
ACT0659	M2/9 (Right defroster flap actuator motor)	Automatic air conditioning(AAC)
ACT0660	M2/10 (Left footwell flap actuator motor)	Automatic air conditioning(AAC)
ACT0661	M2/11 (Right footwell flap actuator motor)	Automatic air conditioning(AAC)
ACT0662	M2/21 (Rear actuator motor blend air flap with shutoff function)	Automatic air conditioning(AAC)

ACT0663	M2/35 (Rear air distribution flap actuator motor)	Automatic air conditioning(AAC)
ACT0664	M2/12 (Left center air vent flap actuator motor)	Automatic air conditioning(AAC)
ACT0665	M2/13 (Right center air vent flap actuator motor)	Automatic air conditioning(AAC)
ACT0666	M16/33 (Left B-pillar air distribution actuator motor)	Automatic air conditioning(AAC)
ACT0667	M16/34 (Right B-pillar air distribution actuator motor)	Automatic air conditioning(AAC)
ACT0668	M2/16 (Defroster flap actuator motor)	Automatic air conditioning(AAC)
ACT0669	M2/22 (Center vent flap positioning motor)	Automatic air conditioning(AAC)
ACT0670	M2/15 (Footwell flap positioning motor)	Automatic air conditioning(AAC)
ACT0671	M2/21 (Fresh air flap actuator)	Automatic air conditioning(AAC)
ACT0672	Windshield heater	Automatic air conditioning(AAC)
ACT0673	Y19/9 (Rear air conditioning evaporator shutoff valve)	Automatic air conditioning(AAC)
ACT0674	Y19/3 (Front evaporator shutoff valve)	Automatic air conditioning(AAC)
ACT0675	Y16 (Stationary heater switchover valve)	Automatic air conditioning(AAC)
ACT0676	N18/9 (Driver side air vent ionizer)	Automatic air conditioning(AAC)
ACT0677	Test sound	Sound generator for electric vehicle(SOGESTAR2)
ACT0678	Tilting/sliding sunroof	Control module 'Sliding roof' (A98/1)(SD)
ACT0679	N83/1 (DC/DC converter control unit)	DC/DC converter(N83/1)(DDW)
ACT0680	Actuation of actuator motor in position "P R N D"	Shift module(ISM)
ACT0681	Charging of suspension fluid reservoir	Shift module(ISM)

ACT0682	Change to normal mode	Shift module(ISM)
ACT0683	Selection of drive position	Shift module(ISM)
ACT0684	Heater pads in rear passenger compartment	Rear control unit(N10/8)(REAR)
ACT0685	Left and right pop-out window	Rear control unit(N10/8)(REAR)
ACT0686	Ambiance illumination "Cockpit"	Rear control unit(N10/8)(REAR)
ACT0687	Illuminated door sill moldings	Rear control unit(N10/8)(REAR)
ACT0688	M14/7 (Liftgate central locking motor)	Rear control unit(N10/8)(REAR)
ACT0689	E40 (Liftgate ambient lamp)	Rear control unit(N10/8)(REAR)
ACT0690	S62/36e1 (Liftgate control button symbol illumination)	Rear control unit(N10/8)(REAR)
ACT0691	Code 843 (Electric EASY-ENTRY)	Rear control unit(N10/8)(REAR)
ACT0692	Third seat row can be folded forward.	Rear control unit(N10/8)(REAR)
ACT0693	B84 (Infrared camera)	Night View Assist(N101)(NSA)
ACT0694	A40/8 (Audio/COMAND display)	Night View Assist(N101)(NSA)
ACT0695	Infrared light	Night View Assist(N101)(NSA)
ACT0696	Door handle illumination "Left rear door"	Left rear door(N69/3)(DCU LR)
ACT0697	Switch illumination "Left rear door"	Left rear door(N69/3)(DCU LR)
ACT0698	Exit and warning lamp "Left rear door"	Left rear door(N69/3)(DCU LR)
ACT0699	E17/45 (Left rear door ambiance illumination)	Left rear door(N69/3)(DCU LR)
ACT0700	Door handle illumination "Right rear door"	Right rear door(N69/4)(DCU RR)

ACT0701	Switch illumination "Right rear door"	Right rear door(N69/4)(DCU RR)
ACT0702	Exit and warning lamp "Right rear door"	Right rear door(N69/4)(DCU RR)
ACT0703	E17/46 (Right rear door ambiance illumination)	Right rear door(N69/4)(DCU RR)
ACT0704	Directional control valves	Roll control(B38/2)(RC)
ACT0705	Pressure control valves	Roll control(B38/2)(RC)
ACT0706	Y86/2 (Active Roll Stabilization throttle valve)	Roll control(B38/2)(RC)
ACT0707	Y86/3 (Active roll stabilization safety valve)	Roll control(B38/2)(RC)
ACT0708	Bleeding of hydraulic system	Roll control(B38/2)(RC)
ACT0709	High-pressure test	Roll control(B38/2)(RC)
ACT0710	Vertical calibration	Roll control(B38/2)(RC)
ACT0711	Horizontal calibration	Roll control(B38/2)(RC)
ACT0712	Output of an audio and video signal from control unit "TV tuner" on the displays in the rear passenger compartment	Rear audio video unit(AVE H)
ACT0713	Actuate component "Y108 (Transfer case switchover magnet)".	Transfer case(VG)
ACT0714	Actuate component "Interaxle differential lock".	Transfer case(VG)
ACT0715	Y49/5 (Right intake camshaft solenoid)	N3/10-Motor electronics "MED177" for combustion engine "M276"(ME)
ACT0716	Y49/7 (Right exhaust camshaft solenoid)	N3/10-Motor electronics "MED177" for combustion engine "M276"(ME)
ACT0717	Y77/2 (Intake manifold resonance flap switchover valve)	N3/10-Motor electronics "MED177" for combustion engine "M276"(ME)
ACT0718	Y77/3 (Intake manifold selector drum switchover valve)	N3/10-Motor electronics "MED177" for combustion engine "M276"(ME)
ACT0719	Y93 (Exhaust flap switchover valve)	N3/10-Motor electronics "MED177" for combustion engine "M276"(ME)

ACT0720	Y137 (High-temperature/low-temperature circuit switchover valve)	N3/10-Motor electronics "MED177" for combustion engine "M276"(ME)
ACT0721	M45 (Coolant circulation pump)	N3/10-Motor electronics "MED177V6LA" for combustion engine "M276Turbochar
ACT0722	Y101/1 (Left bypass air switchover valve)	N3/10-Motor electronics "MED177V6LA" for combustion engine "M276Turbochar
ACT0723	Y101/2 (Right bypass air switchover valve)	N3/10-Motor electronics "MED177V6LA" for combustion engine "M276Turbochar
ACT0724	Flushing the wet clutch	Y3/8n4-Transmission control for 9 speed transmission(VGS)
ACT0725	Left front memory function	Left front door(LFD)
ACT0726	Left front extendable tweeter	Left front door(LFD)
ACT0727	LED "Switches Left or right seat adjustment"	Left front door(LFD)
ACT0728	LED "Switches Refueling safety detection"	Left front door(LFD)
ACT0729	LED of switch "Trailer hitch"	Left front door(LFD)
ACT0730	Right front memory function	Right front door(DCU RF)
ACT0731	Right front extendable tweeter	Right front door(DCU RF)
ACT0732	Switches Left or right seat adjustment	Right front door(DCU RF)
ACT0733	Roller sun blind for left rear door	Left rear door(DCU LR)
ACT0734	LED of switch "Left rear seat ventilation"	Left rear door(DCU LR)
ACT0735	Left rear extendible tweeter	Left rear door(DCU LR)
ACT0736	Roller sun blind for right rear door	Right rear door(DCU RR)
ACT0737	SwitchesSeat adjustmentFront passenger seat	Right rear door(DCU RR)
ACT0738	Right rear extendible tweeter	Right rear door(DCU RR)

ACT0739	E1 (Left front lamp unit)	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT0740	E2 (Right front lamp unit)	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT0741	Side-marker lamp	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT0742	Exterior light functions	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT0743	Ambiance illumination in "footwell"	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT0744	Footwell illumination	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT0745	M5/1 (Windshield washer system pump)	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT0746	NOT PRESENT	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT0747	Supply voltage to components "N59 (Perfume atomizer generator)" and "E13/1 (Glove compartment lamp)"	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT0748	K40/8kG (Engine compartment circuit 15 relay)	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT0749	Fanfare horns	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT0750	M35/1 (Front camera cover motor)	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT0751	Transport mode	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT0752	Confirmation of battery change	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT0753	Activate demo mode of exterior lights.	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT0754	Windshield wiper	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT0755	Footwell lamp	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT0756	Deep discharge protection	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT0757	Taillamps	Rear signal acquisition and actuation module(N10/8)(SAMR)

ACT0758	Rear turn signal lamps	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT0759	Actuation of function "Turn signal lamp"	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT0760	Backup lamps	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT0761	Rear fog lamp	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT0762	License plate lamps	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT0763	Only for the development department	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT0764	Trunk lamps	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT0765	E40/2 (Left trunk lid/liftgate ambient lamp and warning lamp)	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT0766	Output Illumination of component "S62/26 (Trunk lid/liftgate control button)"	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT0767	Illumination of component "S88/10 (Trunk lid emergency opening switch)"	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT0768	E17/17 (Left rear passenger compartment footwell lamp),E17/18 (Right rear passenger compartment footwell lamp)	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT0769	F152/2kU (Rear cup holder relay)	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT0770	K40/5kX (1st seat row/trunk refrigerator box and power outlet relay)	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT0771	K40/5kT (Rear window heater relay)	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT0772	Trunk lid/liftgate	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT0773	Trunk lid control	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT0774	Load compartment cover	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT0775	M14/10 (Tank cap central locking actuator)	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT0776	M6/4 (Liftgate wiper motor)	Rear signal acquisition and actuation module(N10/8)(SAMR)

ACT0777	M14/18 (Glove compartment central locking actuator motor)	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT0778	Rear seats	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT0779	Actuation of output "Circuit 15"	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT0780	A31/1 (Rear heating system valve unit)	Automatic air conditioning(AAC)
ACT0781	A32n1 (Blower regulator)/A32m1 (Blower motor)	Automatic air conditioning(AAC)
ACT0782	M2/1 (Rear passenger compartment blower motor)	Automatic air conditioning(AAC)
ACT0783	N29/8 (Booster blower electronic blower regulator)	Automatic air conditioning(AAC)
ACT0784	N59 (Perfume atomizer generator)	Automatic air conditioning(AAC)
ACT0785	N61 (Windshield heater control unit)	Automatic air conditioning(AAC)
ACT0786	Y16/5 (High-voltage PTC heater switchover valve)	Automatic air conditioning(AAC)
ACT0787	Y19/1 (High-voltage battery cooling system shutoff valve)	Automatic air conditioning(AAC)
ACT0788	Y19/2 (AC water valve)	Automatic air conditioning(AAC)
ACT0789	Actuate components "Y19/3 (Front evaporator shutoff valve)" and "Y19/9 (Rear air conditioning evaporator shutoff valve)".	Automatic air conditioning(AAC)
ACT0790	M2/8 (Left blend air flap actuator)	Automatic air conditioning(AAC)
ACT0791	M2/9 (Right blend air flap actuator)	Automatic air conditioning(AAC)
ACT0792	M2/10 (Rear blend air flap actuator motor)	Automatic air conditioning(AAC)
ACT0793	M2/11 (Left footwell vent/center air vent/side air vent and rear air vent flap actuator motor)	Automatic air conditioning(AAC)
ACT0794	M2/12 (Right footwell vent/center air vent and side air vent flap actuator motor)	Automatic air conditioning(AAC)
ACT0795	M2/13 (Fresh air/ram air/air recirculation flap actuator motor)	Automatic air conditioning(AAC)

ACT0796	M2/14 (Defroster/footwell/center air vent flap actuator motor)	Automatic air conditioning(AAC)
ACT0797	M2/15 (Defroster flap actuator motor)	Automatic air conditioning(AAC)
ACT0798	M16/11 (Left A-pillar air distribution actuator motor)	Automatic air conditioning(AAC)
ACT0799	M16/12 (Right A-pillar air distribution actuator motor)	Automatic air conditioning(AAC)
ACT0800	M2/17 (Left side air vent flap actuator motor)	Automatic air conditioning(AAC)
ACT0801	M2/18 (Right side air vent flap actuator motor)	Automatic air conditioning(AAC)
ACT0802	M2/30 (Upper left blend air flap actuator motor)	Automatic air conditioning(AAC)
ACT0803	M2/31 (Lower left blend air flap actuator motor)	Automatic air conditioning(AAC)
ACT0804	M2/32 (Upper right blend air flap actuator motor)	Automatic air conditioning(AAC)
ACT0805	M2/33 (Lower right blend air flap actuator motor)	Automatic air conditioning(AAC)
ACT0806	M2/34 (Ram air flap actuator motor)	Automatic air conditioning(AAC)
ACT0807	M16/51 (Left rear center air outlet actuator motor)	Automatic air conditioning(AAC)
ACT0808	M16/52 (Right rear center air outlet actuator motor)	Automatic air conditioning(AAC)
ACT0809	Y148 (CO2 expansion valve)	Automatic air conditioning(AAC)
ACT0810	Y148/2 (Rear passenger compartment CO2 air conditioning expansion valve)	Automatic air conditioning(AAC)
ACT0811	Pneumatic pump	Left front multicontour seat(MKS LF)
ACT0812	Actuation of air cushion of middle lumbar support	Left rear multicontour seat(MKS LF)
ACT0813	Compressed air valveVENTILATION	Pneumatic pump for multicontour seat(PPAMKS)
ACT0814	NormalizationM64/1 (Left rear seat active belt buckle motor)	Active bell buckle(AGS)

ACT0815	NormalizationM64/2 (Right rear seat active belt buckle motor)	Active bell buckle(AGS)
ACT0816	M64/1 (Left rear seat active belt buckle motor)	Active bell buckle(AGS)
ACT0817	M64/2 (Right rear seat active belt buckle motor)	Active bell buckle(AGS)
ACT0818	Panoramic sliding sunroof/Sliding roof	Control module Panoramic sliding roof(PSD)
ACT0819	Button assignment	Controller unit Rear entertainment system(AVE H)
ACT0820	Status of component "A105/6 (Tablet cradle electric controller unit)"	Controller unit Rear entertainment system(AVE H)
ACT0821	Switch component "A105/7 (Tablet PC)" on and off.	Controller unit Rear entertainment system(AVE H)
ACT0822	WAKE-UP	Controller unit Rear entertainment system(AVE H)
ACT0823	Background illumination	Controller unit Rear entertainment system(AVE H)
ACT0824	Electric differential lock	Electric differential lock(EAGGS)
ACT0825	Light distribution of LED matrix	LED matrix of left front lamp unit(SG LML VL)
ACT0826	Self-test of system "LED matrix"	LED matrix of left front lamp unit(SG LML VL)
ACT0827	N172 (Automatic running boards control unit)	Electric step(ARB)
ACT0828	Heating element for left front armrest	N5 (Armrest heater control unit)(AH)
ACT0829	Heating element for right front armrest	N5 (Armrest heater control unit)(AH)
ACT0830	Front center console armrest heating element	N5 (Armrest heater control unit)(AH)
ACT0831	Heating element for left rear armrest	N5 (Armrest heater control unit)(AH)
ACT0832	Heating element for right rear armrest	N5 (Armrest heater control unit)(AH)
ACT0833	Rear center console armrest heating element	N5 (Armrest heater control unit)(AH)

ACT0834	Heating element for left front armrest PWM signal 100%	N5 (Armrest heater control unit)(AH)
ACT0835	Heating element for right front armrest PWM signal 100%	N5 (Armrest heater control unit)(AH)
ACT0836	Front center console armrest heating element PWM signal 100%	N5 (Armrest heater control unit)(AH)
ACT0837	Heating element for left rear armrest PWM signal 100%	N5 (Armrest heater control unit)(AH)
ACT0838	Heating element for right rear armrest PWM signal 100%	N5 (Armrest heater control unit)(AH)
ACT0839	Rear center console armrest heating element PWM signal 100%	N5 (Armrest heater control unit)(AH)
ACT0840	Armrest heater for front center console	N5 (Armrest heater control unit)(AH)
ACT0841	Left front armrest heater	N5 (Armrest heater control unit)(AH)
ACT0842	Right front armrest heater	N5 (Armrest heater control unit)(AH)
ACT0843	Armrest heater for center console in the rear	N5 (Armrest heater control unit)(AH)
ACT0844	Left rear armrest heater	N5 (Armrest heater control unit)(AH)
ACT0845	Right rear armrest heater	N5 (Armrest heater control unit)(AH)
ACT0846	Armrest of left front door	N5 (Armrest heater control unit)(AH)
ACT0847	Armrest of right front door	N5 (Armrest heater control unit)(AH)
ACT0848	Armrest of left front center console	N5 (Armrest heater control unit)(AH)
ACT0849	Armrest of right front center console	N5 (Armrest heater control unit)(AH)
ACT0850	Armrest Left front door	N5 (Armrest heater control unit)(AH)
ACT0851	Door trim Left front door	N5 (Armrest heater control unit)(AH)
ACT0852	Armrest Right front door	N5 (Armrest heater control unit)(AH)

ACT0853	Door trim Right front door	N5 (Armrest heater control unit)(AH)
ACT0854	Armrest Front center console	N5 (Armrest heater control unit)(AH)
ACT0855	Armrest Left rear door	N5 (Armrest heater control unit)(AH)
ACT0856	Door trim Left rear door	N5 (Armrest heater control unit)(AH)
ACT0857	Armrest Right rear door	N5 (Armrest heater control unit)(AH)
ACT0858	Door trim Right rear door	N5 (Armrest heater control unit)(AH)
ACT0859	Armrest Center console in rear passenger compartment	N5 (Armrest heater control unit)(AH)
ACT0860	Enabling of function "Armrest heater"	N5 (Armrest heater control unit)(AH)
ACT0861	Seat heater in left rear passenger compartment	N25/6 (Rear passenger compartment seat heater control unit)(SIH REAR)
ACT0862	Seat heater in right rear passenger compartment	N25/6 (Rear passenger compartment seat heater control unit)(SIH REAR)
ACT0863	Resetting of counter "Heating capacity"Seat heater in left rear passenger compartment	N25/6 (Rear passenger compartment seat heater control unit)(SIH REAR)
ACT0864	Resetting of counter "Heating capacity"Seat heater in right rear passenger compartment	N25/6 (Rear passenger compartment seat heater control unit)(SIH REAR)
ACT0865	Enabling of function "Seat heater/seat ventilation"	N25/6 (Rear passenger compartment seat heater control unit)(SIH REAR)
ACT0866	Actuation of air cushions for massage function	Massage function in left front seat(PMCU-LF)
ACT0867	Automatic adjustment of vehicle level	AIRmatic
ACT0868	Run system test.	AIRmatic
ACT0869	Recirculate pressure to central reservoir.	AIRmatic
ACT0870	Release pressure.	AIRmatic
ACT0871	Fill suspension struts from central reservoir.	AIRmatic

ACT0872	Fill suspension struts from external gas cylinder.	AIRmatic
ACT0873	Electrohydraulic controller unit	AIRmatic
ACT0874	Automatically move to normal level.	AIRmatic
ACT0875	Actuation of vehicle level	AIRmatic
ACT0876	Function test of component "EHSE"	Left front suspension strut(LWR-LF)
ACT0877	Hydraulic unit"EHSE"EVACUATION	Left front suspension strut(LWR-LF)
ACT0878	Hydraulic unit"EHSE"FILLING	Left front suspension strut(LWR-LF)
ACT0879	M56 (Electric vacuum pump)	Electric stability program(N30/4)(ESP)
ACT0880	M16/60 (Left throttle valve actuator)	N3/10-Motor electronics "MED1775" for combustion engine "M178"(ME)
ACT0881	M16/61 (Right throttle valve actuator)	N3/10-Motor electronics "MED1775" for combustion engine "M178"(ME)
ACT0882	Y58/11 (Left purging switchover valve)	N3/10-Motor electronics "MED1775" for combustion engine "M178"(ME)
ACT0883	Y58/12 (Right purging switchover valve)	N3/10-Motor electronics "MED1775" for combustion engine "M178"(ME)
ACT0884	Y77/1 (Boost pressure control pressure transducer)	N3/10-Motor electronics "MED1775" for combustion engine "M178"(ME)
ACT0885	Y94/1 (Left quantity control valve)	N3/10-Motor electronics "MED1775" for combustion engine "M178"(ME)
ACT0886	Y94/2 (Right quantity control valve)	N3/10-Motor electronics "MED1775" for combustion engine "M178"(ME)
ACT0887	M60/1 (Electric additional compressor)	N3/10-Motor electronics "MRG1" for combustion engine "M256"(ME)
ACT0888	MAGIC SKY CONTROL	MAGIC SKY CONTROL(N53)(MSC)
ACT0889	Y10 (Speed-sensitive power steering solenoid valve)	Electric stability program(ESP)
ACT0890	Y10/1 (Power steering pump quantity control valve)	Electric stability program(ESP)

ACT0891	KEYLESS GO test of ignition key	KEYLESS GO(KG)
ACT0892	Test of the entire KEYLESS GO system	KEYLESS GO(KG)
ACT0893	Opening assists "KEYLESS GO"	KEYLESS GO(N69/5)(KG)
ACT0894	M16/22 (Air distribution flap actuator motor)	Automatic air conditioning(AAC)
ACT0895	M2/14 (Blend air flap actuator motor)	Automatic air conditioning(AAC)
ACT0896	Voltages	Driver signal acquisition and actuation module (Driver side SAM)
ACT0897	ECO start/stop function	Driver signal acquisition and actuation module (Driver side SAM)
ACT0898	Exterior illumination	Driver signal acquisition and actuation module (Driver side SAM)
ACT0899	Interior illumination	Driver signal acquisition and actuation module (Driver side SAM)
ACT0900	Air conditioning	Driver signal acquisition and actuation module (Driver side SAM)
ACT0901	Wipe and wash	Driver signal acquisition and actuation module (Driver side SAM)
ACT0902	Central lockingRear doors	Driver signal acquisition and actuation module (Driver side SAM)
ACT0903	N10/1kO (Fanfare horn relay)	Driver signal acquisition and actuation module (Driver side SAM)
ACT0904	Taillight	Rear signal acquisition and actuation module(Rear SAM)
ACT0905	Side-marker lamp/Taillight	Rear signal acquisition and actuation module(Rear SAM)
ACT0906	Rear side-marker lamps	Rear signal acquisition and actuation module(Rear SAM)
ACT0907	Backup light	Rear signal acquisition and actuation module(Rear SAM)
ACT0908	Trunk lamp	Rear signal acquisition and actuation module(Rear SAM)
ACT0909	E40 (Trunk lid ambient lamp)	Rear signal acquisition and actuation module(Rear SAM)

ACT0910	E17/27 (Trunk lid warning/ambient lamp)	Rear signal acquisition and actuation module(Rear SAM)
ACT0911	Illumination of component "S62/36 (Tailgate control button)"	Rear signal acquisition and actuation module(Rear SAM)
ACT0912	N10/2kA (Circuit 15 relay)	Rear signal acquisition and actuation module(Rear SAM)
ACT0913	Relay "Circuit 15R"	Rear signal acquisition and actuation module(Rear SAM)
ACT0914	F32k2 (No-load current cutout relay)	Rear signal acquisition and actuation module(Rear SAM)
ACT0915	M14/10 (Tank cap central locking motor)	Rear signal acquisition and actuation module(Rear SAM)
ACT0916	M14/18 (Glove compartment central locking actuator motor)/M14/19 (Stowage compartment central locking actuator motor)	Rear signal acquisition and actuation module(Rear SAM)
ACT0917	M14/31 (Liftgate lock element)	Rear signal acquisition and actuation module(Rear SAM)
ACT0918	N29/5 (Left front seat ventilation blower regulator)	Rear signal acquisition and actuation module(Rear SAM)
ACT0919	N29/6 (Right front seat ventilation blower regulator)	Rear signal acquisition and actuation module(Rear SAM)
ACT0920	R1 (Rear window heater)	Rear signal acquisition and actuation module(Rear SAM)
ACT0921	N10/2kE (Liftgate window wiper relay)	Rear signal acquisition and actuation module(Rear SAM)
ACT0922	Head restraint release in rear passenger compartment	Rear signal acquisition and actuation module(Rear SAM)
ACT0923	M24/11 (Trunk partition motor)	Rear signal acquisition and actuation module(Rear SAM)
ACT0924	Actuation of load compartment cover	Rear signal acquisition and actuation module(Rear SAM)
ACT0925	Wiper blade heater	Rear signal acquisition and actuation module(Rear SAM)
ACT0926	E3 (Left rear lamp unit)	Rear signal acquisition and actuation module(Rear SAM)
ACT0927	E4 (Right rear lamp unit)	Rear signal acquisition and actuation module(Rear SAM)
ACT0928	E3/7 (Center rear lamp unit)	Rear signal acquisition and actuation module(Rear SAM)

ACT0929	E3/6 (Rear fog lamp)	Rear signal acquisition and actuation module(Rear SAM)
ACT0930	E3/5 (Left rear additional lamp)	Rear signal acquisition and actuation module(Rear SAM)
ACT0931	E4/5 (Right rear additional lamp)	Rear signal acquisition and actuation module(Rear SAM)
ACT0932	Exterior illuminationComponents197(Only for the development department)	Rear signal acquisition and actuation module(Rear SAM)
ACT0933	Exterior illuminationFunctions view197(Only for the development department)	Rear signal acquisition and actuation module(Rear SAM)
ACT0934	Exterior illuminationComponents207 / 212(Only for the development department)	Rear signal acquisition and actuation module(Rear SAM)
ACT0935	Exterior illuminationFunctions view207 / 212(Only for the development department)	Rear signal acquisition and actuation module(Rear SAM)
ACT0936	Exterior illuminationComponents204 / 204X ohne ERT(Only for the development department)	Rear signal acquisition and actuation module(Rear SAM)
ACT0937	Exterior illuminationFunctions view204 / 204X ohne ERT(Only for the development department)	Rear signal acquisition and actuation module(Rear SAM)
ACT0938	STATICCurrentSwitches	Rear signal acquisition and actuation module(Rear SAM)
ACT0939	VIA_SAT	Rear signal acquisition and actuation module(Rear SAM)
ACT0940	Air admissionSOUND	Rear signal acquisition and actuation module(Rear SAM)
ACT0941	Characters	Rear signal acquisition and actuation module(Rear SAM)
ACT0942	M96/1 (Draft stop actuator motor)	Rear signal acquisition and actuation module (REAR SAM)
ACT0943	LED of switch "S51/4 (Right rear seat heater button)"	Left front door(LFD)
ACT0944	Switch "Roller sun blind for right rear door"	Left front door(LFD)
ACT0945	M10/5 (Left rear power window motor)	Soft top control(N52)(STC)
ACT0946	M10/6 (Right rear power window motor)	Soft top control(N52)(STC)
ACT0947	Switch illumination of Vario roof control	Soft top control(N52)(STC)

ACT0948	R lock	N15/5 (Electronic selector lever module control unit)(EWM)
ACT0949	P lock	N15/5 (Electronic selector lever module control unit)(EWM)
ACT0950	Windshield wiper FSW	Windshield wiper(FSW)
ACT0951	PARKTRONIC warning elements	Parktronic system(PTS)
ACT0952	H3/1 (Alarm siren)	Alarm siren(H3/1)(AS)
ACT0953	Actuation of components "N70s8 (Interior protection button)" and "N70s9 (Tow-away protection button)"	ATA[EDW]/tow-away protection/interior protection(ATA)
ACT0954	Self-test of control unit "Interior protection and tow-away protection"	ATA[EDW]/tow-away protection/interior protection(ATA)
ACT0955	M33 (Electric air pump)	N3/10-Motor electronics "SIM271DE20" for combustion engine "M271EVO"(ME)
ACT0956	M59 (Intake manifold swirl flap actuator motor)	N3/10-Motor electronics "SIM271DE20" for combustion engine "M271EVO"(ME)
ACT0957	Y32 (Air pump switchover valve)	N3/10-Motor electronics "SIM271DE20" for combustion engine "M271EVO"(ME)
ACT0958	Secondary air injection	N3/10-Motor electronics "SIM271DE20" for combustion engine "M271EVO"(ME)
ACT0959	Thermal management	N3/10-Motor electronics "SIM271DE20" for combustion engine "M271EVO"(ME)
ACT0960	H4/3 (Left rear door speaker)	Audio(A2)(AUDIO)
ACT0961	H4/4 (Right rear door speaker)	Audio(A2)(AUDIO)
ACT0962	Warning indicators "Parking system"	Parktronic system(PTS)
ACT0963	Underbody spoiler	N93/9 (AMG Gateway Control Unit)(AMG GW)
ACT0964	Test picture display "COMAND Online"	Audio/COMAND display(ZAN)
ACT0965	E43/49 (Upper audio/COMAND display ambiance illumination)E43/50 (Lower audio/COMAND display ambiance illumination)	Instrument cluster(IC)
ACT0966	Soft top	Soft top control(N52)(STC)

ACT0967	Actuation of left side flap	Soft top control(N52)(STC)
ACT0968	Actuation of right side flap	Soft top control(N52)(STC)
ACT0969	Actuation of soft top lock	Soft top control(N52)(STC)
ACT0970	K40/8kR (AIR BODY CONTROL relay)	Adaptive damping system(ADS)
ACT0971	A9/1y1 (AIR BODY CONTROL pressure relief valve)	Adaptive damping system(ADS)
ACT0972	Y36/6y5 (AIR BODY CONTROL central reservoir filling valve)	Adaptive damping system(ADS)
ACT0973	Left front axle	Adaptive damping system(ADS)
ACT0974	Right front axle	Adaptive damping system(ADS)
ACT0975	Left rear axle	Adaptive damping system(ADS)
ACT0976	Right rear axle	Adaptive damping system(ADS)
ACT0977	M16/3 (Front throttle valve actuator)	N3/10-Motor electronics "ME97 AMG" for combustion engine "M156"(ME)
ACT0978	M16/4 (Rear throttle valve actuator)	N3/10-Motor electronics "ME97 AMG" for combustion engine "M156"(ME)
ACT0979	Y22/6 (Intake manifold switchover valve)	N3/10-Motor electronics "ME97 AMG" for combustion engine "M156"(ME)
ACT0980	Y32/1 (Air pump 1 switchover valve)	N3/10-Motor electronics "ME97 AMG" for combustion engine "M156"(ME)
ACT0981	Y32/2 (Air pump 2 switchover valve)	N3/10-Motor electronics "ME97 AMG" for combustion engine "M156"(ME)
ACT0982	M4/1 (Oil cooler fan motor)	N3/10-Motor electronics "ME97 AMG" for combustion engine "M156"(ME)
ACT0983	Y62 (Injection valves)	N3/10-Motor electronics "ME97 AMG" for combustion engine "M156"(ME)
ACT0984	M75/7 (Rear high-voltage battery coolant pump)	H-Battery management system, rear (master)(BMS)
ACT0985	Measurement log for self-discharge of battery cells	H-Battery management system, rear (master)(BMS)

ACT0986	Function illumination "SPEEDTRONIC"	Steering column module(SCM [MRM])
ACT0987	Switchover of video signal source	AMG Performance Media(N125/2)(AMG PM)
ACT0988	A7/3y7 (Left front pressure regulating valve (pressure release))	Electronic stability program(N30/4)(ESP)
ACT0989	Perform current adjustment.	VL-Front left electrical machine(ELM)
ACT0990	Perform voltage adjustment.	VL-Front left electrical machine(ELM)
ACT0991	L20/4 (Left front electrical machine rotor position sensor)	VL-Front left electrical machine(ELM)
ACT0992	Reset of "Sensor "Voltage of high-voltage on-board electrical system"" component	VL-Front left electrical machine(ELM)
ACT0993	Check contact of component "Front left electrical machine".	VL-Front left electrical machine(ELM)
ACT0994	Reset of frequency counter "Emergency shutoff of component 'N129/4 (Left front electrical machine control unit)'"	VL-Front left electrical machine(ELM)
ACT0995	Resetting of frequency counter "Emergency shutoff due to implausible torque request"	VL-Front left electrical machine(ELM)
ACT0996	Enable CD/DVD drive.	Audio or COMAND(Audio)
ACT0997	BRIGHT	Audio or COMAND(Audio)
ACT0998	DARK	Audio or COMAND(Audio)
ACT0999	Mittel	Audio or COMAND(Audio)
ACT1000	NTG4Initial startup	Audio or COMAND(Audio)
ACT1001	L20/5 (Right front electrical machine rotor position sensor)	VR-Front right electrical machine(ELM)
ACT1002	Check contact of component "Front right electrical machine".	VR-Front right electrical machine(ELM)
ACT1003	Reset of frequency counter "Emergency shutoff of component 'N129/5 (Right front electrical machine control unit)'"	VR-Front right electrical machine(ELM)
ACT1004	N19/4 (Electric refrigerant compressor control unit)	Automatic air conditioning(AAC)

ACT1005	L20/6 (Left rear electrical machine rotor position sensor)	HL-Rear left electrical machine(ELM)
ACT1006	Check contact of component "Rear right electrical machine".	HL-Rear left electrical machine(ELM)
ACT1007	Reset of frequency counter "Emergency shutoff of component 'N129/6 (Left rear electrical machine control unit)'"	HL-Rear left electrical machine(ELM)
ACT1008	L20/7 (Right rear electrical machine rotor position sensor)	HR-Rear right electrical machine(ELM)
ACT1009	Check contact of component "A79/7 (Right rear electrical machine)".	HR-Rear right electrical machine(ELM)
ACT1010	Reset of frequency counter "Emergency shutoff of component 'N129/7 (Right rear electrical machine control unit)'"	HR-Rear right electrical machine(ELM)
ACT1011	LED of component "X58/23 (Charger feed-in socket)"	Charger(SG LG)
ACT1012	Locking of charging cable	Charger(SG LG)
ACT1013	Y139/1 (Drive coolant pump regulation valve)	MA-Drivetrain (master)(PTCU)
ACT1014	Y139/3 (High-voltage battery coolant pump regulation valve)	MA-Drivetrain (master)(PTCU)
ACT1015	Y139/9 (Climate control coolant pump regulation valve)	MA-Drivetrain (master)(PTCU)
ACT1016	Y107/9 (Shutoff valve 2)	MA-Drivetrain (master)(PTCU)
ACT1017	Shutoff valves of refrigerant circuit	MA-Drivetrain (master)(PTCU)
ACT1018	PTC heater booster	MA-Drivetrain (master)(PTCU)
ACT1019	M75/8 (Front electric drive coolant pump)	MA-Drivetrain (master)(PTCU)
ACT1020	M75/9 (Rear electric drive coolant pump)	MA-Drivetrain (master)(PTCU)
ACT1021	M4/2 (Coolant fan motor)	MA-Drivetrain (master)(PTCU)
ACT1022	Circuit 87	MA-Drivetrain (master)(PTCU)
ACT1023	Circuit 15	MA-Drivetrain (master)(PTCU)

ACT1024	M40 (Differential lock vacuum pump)	SL-Drivetrain (slave)(PTCU)
ACT1025	A13 (Electric parking brake control unit)	Electric parking brake(EPB)
ACT1026	M75/5 (Front high-voltage battery coolant pump)	V-Battery management system, front (slave)(BMS)
ACT1027	Component "Valve1"CENTER	M-Battery management system, center (master)(BMS)
ACT1028	Component "Valve2"CENTER	M-Battery management system, center (master)(BMS)
ACT1029	Component "Valve3"CENTER	M-Battery management system, center (master)(BMS)
ACT1030	M75/6 (Center high-voltage battery coolant pump)	M-Battery management system, center (master)(BMS)
ACT1031	Actuation of components "Y123 (Left switchable engine mount)" and "Y123/1 (Right switchable engine mount)"	N3/9-Motor electronics "CDI6EU5" for combustion engine "OM642"(CDI)
ACT1032	M16/5 (Throttle valve actuator)	N3/9-Motor electronics "CDI" for combustion engine "OM646"(CDI)
ACT1033	Y100/1 (Boost pressure positioner)	N3/9-Motor electronics "CDI" for combustion engine "OM646"(CDI)
ACT1034	Bleeding of high-pressure fuel circuit	N3/9-Motor electronics "CDI" for combustion engine "OM646"(CDI)
ACT1035	A1e16 (Preglow indicator lamp)	N3/9-Motor electronics "CDI" for combustion engine "OM646"(CDI)
ACT1036	Pressure drop test	N3/9-Motor electronics "CDI" for combustion engine "OM646"(CDI)
ACT1037	B2/5 (Hot film mass air flow sensor)	N3/9-Motor electronics "CDI" for combustion engine "OM646"(CDI)
ACT1038	Test of fuel system high pressure pump	N3/9-Motor electronics "CDI" for combustion engine "OM646"(CDI)
ACT1039	Test for rail pressure fluctuations	N3/9-Motor electronics "CDI" for combustion engine "OM646"(CDI)
ACT1040	Y132 (Charge air bypass flap switchover valve)	N3/9-Motor electronics "CDID2" for combustion engine "OM651"(CDI)
ACT1041	Actuation of components "Y93 (Boost pressure control flap pressure transducer)", "Y31/4 (Wastegate control pressure transducer)" and "Y132 (Charge air bypass	N3/9-Motor electronics "CDID2" for combustion engine "OM651"(CDI)
ACT1042	Test all solenoid valves.	N15/3-Transmission control for 5 speed transmission(VGS)

ACT1043	Tire pressure loss warning	Electric stability program(ESP)
ACT1044	Actuation of component "H4/31 (Exhaust system sound generator speaker)"	Sound generator for exhaust system(SG SOGE AGA)
ACT1045	Actuation of component "H4/31 (Exhaust system sound generator speaker)"Frequency range	Sound generator for exhaust system(SG SOGE AGA)
ACT1046	Power supply of peripheral devices	Multifunction control unit(Multifunction control unit)
ACT1047	Output "Two-way radio cut-in"	Multifunction control unit(Multifunction control unit)
ACT1048	M51/3 (Trunk lid control drive unit)	Trunk lid control(TLC)
ACT1049	M14/31 (Trunk lid lock element)	Trunk lid control(TLC)
ACT1050	M51/3y1 (Tailgate control magnetic clutch)	Trunk lid control(TLC)
ACT1051	M2/35 (Rear blend air flap actuator motor)	Automatic air conditioning(AAC)
ACT1052	M2/21 (Diffuser flap actuator motor)	Automatic air conditioning(AAC)
ACT1053	A6m2 (Stationary heater combustion air blower)	Stationary heater(STH)
ACT1054	A6r4 (Stationary heater glow plug/flame monitor unit)	Stationary heater(STH)
ACT1055	Y23 (Stationary heater fuel pump)	Stationary heater(STH)
ACT1056	Measurement of fuel flow rate	Stationary heater(STH)
ACT1057	Deactivation of fault interlock or overheating protection	Stationary heater(STH)
ACT1058	Deactivation of safety lock	Stationary heater(STH)
ACT1059	Automatic illumination test	Overhead control panel(OCP)
ACT1060	Indicator lamp "Trailer hitch LOCKED"	Trailer recognition module (N28/1)(TRM)
ACT1061	LED of switch "S51/3 (Left rear seat heater button)"	Left rear door(DCU LR)

ACT1062	E1m1 (Left headlamp range adjustment actuator motor)	Xenon headlamp, left(XALWA L)
ACT1063	E1m2 (Left active curve illumination actuator motor)	Xenon headlamp, left(XALWA L)
ACT1064	Headlamp range adjustment of both xenon bulbs	Xenon headlamp, left(XALWA L)
ACT1065	Active curve illumination of both xenon bulbs	Xenon headlamp, left(XALWA L)
ACT1066	Light output of xenon bulb	Xenon headlamp, left(XALWA L)
ACT1067	E1e9 (Left cornering illumination)	Xenon headlamp, left(XALWA L)
ACT1068	E2m1 (Right headlamp range adjustment actuator motor)	Xenon headlamp, right(XALWA R)
ACT1069	E2m2 (Right active curve illumination actuator motor)	Xenon headlamp, right(XALWA R)
ACT1070	E2e9 (Right cornering illumination)	Xenon headlamp, right(XALWA R)
ACT1071	Test of telephone connection	Mobile phone(CTEL)
ACT1072	Y125 (Low temperature circuit shutoff valve)	N3/10-Motor electronics "MED97" for combustion engine "M272"(ME)
ACT1073	Combustion engine AT STANDSTILL	N3/9-Motor electronics "CDI41R" for combustion engine "OM626"(CDI)
ACT1074	Combustion engine IDLING	N3/9-Motor electronics "CDI41R" for combustion engine "OM626"(CDI)
ACT1075	Y88 (Coolant thermostat shutoff valve)	N3/9-Motor electronics "CDI41R" for combustion engine "OM626"(CDI)
ACT1076	Shutoff of injection	N3/9-Motor electronics "CDI41R" for combustion engine "OM626"(CDI)
ACT1077	Rail pressure regulation	N3/9-Motor electronics "CDI41R" for combustion engine "OM626"(CDI)
ACT1078	B20 (Fuel filter element with integrated heater)	N3/9-Motor electronics "CDI41R" for combustion engine "OM626"(CDI)
ACT1079	Switch and controls illumination of component "S2/3 (KEYLESS-GO start/stop button)"	Electronic ignition lock(EZS)
ACT1080	Left front door outer door handle illumination	Left front door(LFD)

ACT1081	LED of switch "Front passenger seat adjustment"	Left front door(LFD)
ACT1082	Ambiance illumination "Left front door"	Left front door(LFD)
ACT1083	Right front door outer door handle illumination	Right front door(DCU RF)
ACT1084	Ambiance illumination "Right front door"	Right front door(DCU RF)
ACT1085	Left rear door outer door handle illumination	Left rear door(DCU LR)
ACT1086	Ambiance illumination "Left rear door"	Left rear door(DCU LR)
ACT1087	Right rear door outer door handle illumination	Right rear door(DCU RR)
ACT1088	Ambiance illumination "Right rear door"	Right rear door(DCU RR)
ACT1089	M79/1 (Driver seat head restraint inclination motor)	Electric seat adjustmnet Driver with memory function(ESV Driver)
ACT1090	M79/2 (Front passenger seat head restraint inclination motor)	Electric seat adjustment Front passenger with memory function(ESV Front passeng
ACT1091	K40/6 (Left fuse and relay module)	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT1092	K40/8 (Engine fuse and relay module)	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT1093	F32/4k2 (No-load current shutoff relay)	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT1094	M5/2 (Headlamp cleaning system pump)	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT1095	Spray nozzle heating and spray nozzle hose heater	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT1096	K40/8kM (Wiper park position heater relay)	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT1097	K40/6kD (Reserve relay)	Front signal acquisition and actuation module(N10/6)(SAMF)
ACT1098	Taillight/Brake light	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT1099	Center stop lamp	Rear signal acquisition and actuation module(N10/8)(SAMR)

ACT1100	Rear turn signal lights	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT1101	Ambient lamp and warning lamp	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT1102	(Ambiance illumination Rear)	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT1103	Illumination of component "S62/26 (Trunk lid/liftgate control button)"	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT1104	S88/10 (Trunk lid emergency opening switch)	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT1105	K40/5kS (Vehicle interior circuit 15 relay)	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT1106	K40/5kW (Circuit 15R relay)	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT1107	K40/5kU (2nd seat row cup holder and power outlet relay)	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT1108	Head restraints in rear passenger compartment	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT1109	M14/19 (Stowage compartment central locking actuator motor)	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT1110	A85/5m1 (Trunk lid lock motor)	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT1111	Rear window wiper	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT1112	Outside brake lights and taillights	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT1113	CB-Repeat teach-in process.	Rear signal acquisition and actuation module(N10/8)(SAMR)
ACT1114	H4/60 (Trunk lid/liftgate control warning buzzer)	Tailgate control(HKS)
ACT1115	M51/3m1 (Trunk lid/liftgate control electric motor)	Tailgate control(HKS)
ACT1116	Sliding roof	Panoramic sliding roof(PSD)
ACT1117	Tilting/sliding sunroof/Panoramic sliding sunroof	Panoramic sliding roof(PSD)
ACT1118	Front roller sun blind	Control module Panoramic sliding roof(PSD)

ACT1119	Rear roller sun blind	Control module Panoramic sliding roof(PSD)
ACT1120	Front interior lights	Overhead control panel(OCP)
ACT1121	Interior lights in rear passenger compartment	Overhead control panel(OCP)
ACT1122	Illumination of vanity mirrors	Overhead control panel(OCP)
ACT1123	Symbol illumination	Overhead control panel(OCP)
ACT1124	Ambiance illumination of roof	Overhead control panel(OCP)
ACT1125	Roof ventilator	Overhead control panel(OCP)
ACT1126	Self-test of system "ATA [EDW]/tow-away protection/interior protection"	Overhead control panel(OCP)
ACT1127	Delete history of function "Parking Damage Detection".	Overhead control panel(OCP)
ACT1128	Left belt extender	Rear control unit(SG FOND)
ACT1129	Right belt extender	Rear control unit(SG FOND)
ACT1130	M96/2 (Wind deflector actuator motor)	Rear control unit(SG FOND)
ACT1131	Switch illumination of soft top control	Rear control unit(SG FOND)
ACT1132	Head restraint in rear passenger compartment	Rear control unit(SG FOND)
ACT1133	Retraction of trunk partition	Rear control unit(SG FOND)
ACT1134	M47/1 (Front soft top lock motor)	Rear control unit(SG FOND)
ACT1135	Denormalization of trunk lid control	Rear control unit(SG FOND)
ACT1136	Trunk partition	Rear control unit(SG FOND)
ACT1137	H4/60 (Trunk lid control warning buzzer)	Rear control unit(SG FOND)

ACT1138	Actuator Differential lock	AMG DRIVE UNIT(AMG DRVU)
ACT1139	Generation of an actuation point at component "Haptic accelerator pedal module"	Haptic accelerator pedal module(HFPM)
ACT1140	Generation of a double pulse at component "Haptic accelerator pedal module"	Haptic accelerator pedal module(HFPM)
ACT1141	M6/1 (Wiper motor)	Windshield wiper(FSW)
ACT1142	Ambiance illumination	Overhead control panel(OCP)
ACT1143	Control unitUNLOCK	Electric seat adjustment Front passenger(ESA Front passenger)
ACT1144	N25/7 (AIRSCARF control unit)	Neck heating system(N25/7)(AIRSCARF)
ACT1145	B44/1 (Left front door interior protection sensor)	VL-Left front interior protection sensor(IRSS)
ACT1146	B44/2 (Right front door interior protection sensor)	VR-Right front interior protection sensor(IRSS)
ACT1147	B44/4 (Right rear interior protection sensor)	FOR-Right rear interior protection sensor(IRSS)
ACT1148	B44/3 (Left rear interior protection sensor)	FOL-Left rear interior protection sensor(IRSS)
ACT1149	Deactivation of production mode	Stationary heater(STH)
ACT1150	K40/8kR (AIRmatic relay)	Adaptive damping system(N51/5)(ADS)
ACT1151	Isolation measurement with open contactors	Battery management system(BMS)
ACT1152	Isolation measurement with open contactors,Relay "OPEN"	Battery management system(BMS)
ACT1153	SBC Hold	Electronic stability program(N30/4)(ESP)
ACT1154	Electric refrigerant compressor	A9/5 (Electric refrigerant compressor)(EKMK)
ACT1155	Test image	Night View Assist(N101)(NSA)
ACT1156	A10 (Left belt extender)	Rear control unit(N22/6)(REAR)

ACT1157	A11 (Right belt extender)	Rear control unit(N22/6)(REAR)
ACT1158	Denormalization of power window	Rear control unit(N22/6)(REAR)
ACT1159	Overheating protection	Rear control unit(N22/6)(REAR)
ACT1160	Illumination of switches "Power window"	Rear control unit(N22/6)(REAR)
ACT1161	LEDs of button "S84s4 (Draft stop and wind deflector button)"	Rear control unit(N22/6)(REAR)
ACT1162	M28/14 (Actuator motor for head restraint drive in rear passenger compartment)	Rear control unit(N22/6)(REAR)
ACT1163	E1e10 (Left xenon bulb with integrated ignition module)	Left xenon headlamp(E1n1)(XALWA L)
ACT1164	E2e10 (Right xenon bulb with integrated ignition module)	Right xenon headlamp(E2n1)(XALWA R)
ACT1165	Isolation measurement with closed contactors	Battery management system(N82/2)(BMS)
ACT1166	Actuate component "A100s1 (Contactor)".	Battery management system(N82/2)(BMS)
ACT1167	Actuation of air cushion "Upper lumbar support"	Active multicontour seat(N32/19)(AMKS LF)
ACT1168	Actuation of air cushion "Lower lumbar support"	Active multicontour seat(N32/19)(AMKS LF)
ACT1169	Y36/8y1 (Left rear level control valve)	Electronic level control(ELC)
ACT1170	Y36/8y2 (Right rear level control valve)	Electronic level control(ELC)
ACT1171	Fill natural gas system.	N3/10-Motor electronics "CNGCM212" for combustion engine "M271CNG"(ME)
ACT1172	Drain natural gas system.	N3/10-Motor electronics "CNGCM212" for combustion engine "M271CNG"(ME)
ACT1173	Actuation of component "Y107/2 (Gas safety shutoff valve)"	N3/10-Motor electronics "CNGCM212" for combustion engine "M271CNG"(ME)
ACT1174	Y106 (Injection valves)	N3/10-Motor electronics "CNGCM212" for combustion engine "M271CNG"(ME)
ACT1175	Operating mode	N3/10-Motor electronics "CNGCM212" for combustion engine "M271CNG"(ME)

ACT1176	Y107/1 (Gas cylinder shutoff valves)	N3/10-Motor electronics "CNGCM212" for combustion engine "M271CNG"(ME)
ACT1177	Component "Y107/1 (Gas cylinder shutoff valves)"	N3/10-Motor electronics "CNGCM212" for combustion engine "M271CNG"(ME)
ACT1178	Enable natural gas operation.	N3/10-Motor electronics "MED40CNG" for combustion engine "M270"(ME)
ACT1179	N14/2 (Glow output stage)	Motor electronics(CDI)
ACT1180	Y77/6 (Boost pressure regulator)	Motor electronics(CDI)
ACT1181	Actuation of components "Y100/2 (Boost pressure control pressure transducer)", "Y77/1 (Boost pressure positioner)" and "Y77/6 (Boost pressure regulator)"	Motor electronics(CDI)
ACT1182	SettingMirror glassLeft	Left front door(LFD)
ACT1183	Mirror dimmingLeft	Left front door(LFD)
ACT1184	Warning lampBlind Spot Assist	Left front door(LFD)
ACT1185	LED "SwitchesLeft or right seat adjustment"	Left front door(LFD)
ACT1186	SettingMirror glassRight	Right front door(DCU RF)
ACT1187	Mirror dimmingRight	Right front door(DCU RF)
ACT1188	Calibration of reversing camera	Backup camera(RFK)
ACT1189	Y36/8y3 (Left rear level control valve)	Electronic level control(ELC)
ACT1190	Y36/8y4 (Right rear level control valve)	Electronic level control(ELC)
ACT1191	Y49/3 (Exhaust camshaft adjustment solenoid)	N3/10-Motor electronics "MRG2" for combustion engine "M254"(ME)
ACT1192	Y49/8 (Intake camshaft positioner)	N3/10-Motor electronics "MRG2" for combustion engine "M254"(ME)
ACT1193	Y147/1 (Quantity control valve)	N3/10-Motor electronics "MRG2" for combustion engine "M254"(ME)
ACT1194	M43/10 (Electric coolant pump)	N3/10-Motor electronics "MRG2" for combustion engine "M254"(ME)

ACT1195	Y58 (Purge valve)	N3/10-Motor electronics "MRG2" for combustion engine "M254"(ME)
ACT1196	Y144 (Oil pressure regulation valve)	N3/10-Motor electronics "MRG2" for combustion engine "M254"(ME)
ACT1197	Actuation of air cushion in shoulder area	Left front multicontour seat(MKS LF)
ACT1198	Button illumination	Audio/COMAND operating unit(COU[ZBE])
ACT1199	Color displayCOMAND Online	Audio/COMAND display(ZAN)
ACT1200	Video on multifunction display	Night View Assist(N101)(NSA)
ACT1201	Air cushion Lower lumbar support	N32/23 (Driver seat lumbar support adjustment control unit)(LSE FS)
ACT1202	Air cushion Upper lumbar support	N32/23 (Driver seat lumbar support adjustment control unit)(LSE FS)
ACT1203	Y36/1y1 (Left front suspension strut control valve)	Active body control(N51/2)(ABC)
ACT1204	Y36/1y3 (Right front suspension strut control valve)	Active body control(N51/2)(ABC)
ACT1205	Y36/2y1 (Left rear suspension strut control valve)	Active body control(N51/2)(ABC)
ACT1206	Y36/2y3 (Right rear suspension strut control valve)	Active body control(N51/2)(ABC)
ACT1207	Y86/1 (ABC throttle valve)	Active body control(N51/2)(ABC)
ACT1208	Shutoff valves	Active body control(N51/2)(ABC)
ACT1209	Damper valves	Active body control(N51/2)(ABC)
ACT1210	LED of component "A40/9 (Audio/COMAND control panel)"	Active body control(N51/2)(ABC)
ACT1211	Cyclically alternating actuation of all suspension struts in a circular motion (rodeo)	Active body control(N51/2)(ABC)
ACT1212	Cyclically alternating actuation of front and rear suspension struts (pitch)	Active body control(N51/2)(ABC)
ACT1213	Release of system pressure	Active body control(N51/2)(ABC)

ACT1214	PRE-SAFE?system	Electric stability program(N30/4)(ESP)
ACT1215	Headlamp range adjustment of both lamps units	Left xenon headlamp(E1n1)(XALWA L)
ACT1216	Active curve lights of both lamp units	Left xenon headlamp(E1n1)(XALWA L)
ACT1217	M18/13 (Left rear seat head restraint height adjustment motor)	Left rear electrical seat adjustment(ESE_RL)
ACT1218	M18/15 (Left rear seat head restraint inclination adjustment motor)	Left rear electrical seat adjustment(ESE_RL)
ACT1219	M27/11 (Left rear seat backrest inclination adjustment motor)	Left rear electrical seat adjustment(ESE_RL)
ACT1220	M18/19 (Left rear seat cushion inclination adjustment motor)	Left rear electrical seat adjustment(ESE_RL)
ACT1221	M18/23 (Left rear seat leg rest inclination adjustment motor)	Left rear electrical seat adjustment(ESE_RL)
ACT1222	M18/25 (Left rear seat leg rest fore/aft adjustment motor)	Left rear electrical seat adjustment(ESE_RL)
ACT1223	M18/14 (Right rear seat head restraint height adjustment motor)	Right rear electrical seat adjustment(Right rear ESE)
ACT1224	M18/16 (Right rear seat head restraint inclination adjustment motor)	Right rear electrical seat adjustment(Right rear ESE)
ACT1225	M53/3 (Center rear passenger compartment head restraint adjustment motor)	Right rear electrical seat adjustment(Right rear ESE)
ACT1226	M28/11 (Right rear seat backrest inclination adjustment motor)	Right rear electrical seat adjustment(Right rear ESE)
ACT1227	M18/20 (Right rear seat cushion inclination adjustment motor)	Right rear electrical seat adjustment(Right rear ESE)
ACT1228	M18/24 (Right rear seat leg rest inclination adjustment motor)	Right rear electrical seat adjustment(Right rear ESE)
ACT1229	M18/26 (Right rear seat leg rest fore/aft adjustment motor)	Right rear electrical seat adjustment(Right rear ESE)
ACT1230	Switch and controls illumination of switch "S52/6 (Rear seat center head restraint height adjustment switch)"	Right rear electrical seat adjustment(Right rear ESE)
ACT1231	Unlock component "A6n1 (Stationary heater control unit)".	Stationary heater(STH)
ACT1232	Cabled headphones(Only for the development department)	Display in left rear passenger compartment(D FOL)

ACT1233	TestBackground illumination	Display in left rear passenger compartment(D FOL)
ACT1234	ActuationBackground illumination	Display in left rear passenger compartment(D FOL)
ACT1235	The position "LVDS" is faulty.	Display in left rear passenger compartment(D FOL)
ACT1236	{Actuation} {Button illumination} {Switch and controls illumination}	Controller unit Rear entertainment system(AVE H)
ACT1237	Self-test Handset	Controller unit Rear entertainment system(AVE H)
ACT1238	Speaker Handset	Controller unit Rear entertainment system(AVE H)
ACT1239	Microphone Handset	Controller unit Rear entertainment system(AVE H)
ACT1240	Audio and video signal lines	Controller unit Rear entertainment system(AVE H)
ACT1241	Display in left rear passenger compartment	Controller unit Rear entertainment system(AVE H)
ACT1242	Display in right rear passenger compartment	Controller unit Rear entertainment system(AVE H)
ACT1243	DVD/Blu-ray drive	Controller unit Rear entertainment system(AVE H)
ACT1244	N72/1s37 (Air recirculation mode button)	Fire extinguishing system and emergency fresh air system(FLANFS)
ACT1245	A48/4h1 (Warning buzzer)	Fire extinguishing system and emergency fresh air system(FLANFS)
ACT1246	Actuation of components "M90/1 (Left vent flap actuator motor)" and "M90/2 (Right vent flap actuator motor)"	Fire extinguishing system and emergency fresh air system(FLANFS)
ACT1247	Check cylinder pressure of emergency fresh air system.	Fire extinguishing system and emergency fresh air system(FLANFS)
ACT1248	Check cylinder pressure of fire extinguishing system.	Fire extinguishing system and emergency fresh air system(FLANFS)
ACT1249	Function illumination of component "A48/4s4 (Emergency fresh-air system/fire extinguishing system activation button)"	Fire extinguishing system and emergency fresh air system(FLANFS)
ACT1250	Function illumination of component "A48/4s6 (Emergency fresh-air system button)"	Fire extinguishing system and emergency fresh air system(FLANFS)
ACT1251	Function illumination of component "A48/4s5 (Fire extinguishing system button)"	Fire extinguishing system and emergency fresh air system(FLANFS)

ACT1252	Determination of demagnetization of electric motor	Power electronics(SG EM)
ACT1253	Actuation of component "H4/31 (Exhaust system sound generator speaker)"- Frequency range	Sound generator for exhaust system(SG SOGE AGA)
ACT1254	Actuation of air cushions in seat side bolsters Seat backrest	Left front multicontour seat(MKS LF)
ACT1255	Actuation of air cushions in seat side bolsters Seat cushion	Left front multicontour seat(MKS LF)
ACT1256	Dynamic test	Active body control(N51/2)(ABC)
ACT1257	LEDs of component "N72 (Lower control panel control unit)"	Active body control(N51/2)(ABC)
ACT1258	Release pressure in suspension struts.	Active body control(N51/2)(ABC)
ACT1259	Switch illumination "Loading aid"	Soft top control(N52)(STC)
ACT1260	M49/1 (Side flaps motor)	Soft top control(N52)(STC)
ACT1261	Actuation of trunk lid	Soft top control(N52)(STC)
ACT1262	Resetting adaptation values of component "Park pawl"	Power electronics(SG EM)
ACT1263	F58kT (Heated windshield relay)	Common powertrain controller(N127)(PTCU)
ACT1264	Y19/1 (High-voltage battery cooling shutoff valve)	Common powertrain controller(N127)(PTCU)
ACT1265	F58kM (Circuit 87C relay)	Common powertrain controller(N127)(PTCU)
ACT1266	F58kN (Terminal 87T relay)	Common powertrain controller(N127)(PTCU)
ACT1267	M2/16 (Park pawl actuator motor)	Common powertrain controller(N127)(PTCU)
ACT1268	Pre-air conditioning	Common powertrain controller(N127)(PTCU)
ACT1269	Actuation of component "Radiator shutters"	N127 (Drivetrain control unit)(PTCU)
ACT1270	Bleeding of coolant circuit	N127 (Drivetrain control unit)(PTCU)

ACT1271	PTC heater "High voltage"	N127 (Drivetrain control unit)(PTCU)
ACT1272	Actuation of component "Vacuum pump"	N127 (Drivetrain control unit)(PTCU)
ACT1273	Start enable status of component "Fuel cell system"	N127 (Drivetrain control unit)(PTCU)
ACT1274	Start enable status of component "N127 (Drivetrain control unit)"	N127 (Drivetrain control unit)(PTCU)
ACT1275	M43/12 (Left fuel cell cooling coolant pump)	N127 (Drivetrain control unit)(PTCU)
ACT1276	M75/10 (High-voltage battery coolant pump)	N127 (Drivetrain control unit)(PTCU)
ACT1277	M43/13 (Center fuel cell cooling coolant pump)	N127 (Drivetrain control unit)(PTCU)
ACT1278	Release of coolant pumps	N127 (Drivetrain control unit)(PTCU)
ACT1279	Locking of coolant pumps	N127 (Drivetrain control unit)(PTCU)
ACT1280	Y138 (High temperature coolant circuit regulation valve 1)	N127 (Drivetrain control unit)(PTCU)
ACT1281	Y85 (Low temperature coolant circuit 1 regulation valve 1)	N127 (Drivetrain control unit)(PTCU)
ACT1282	Actuate components "M51/4 (Right liftgate control drive unit)" and "M51/5 (Left liftgate control drive unit)".	Tailgate control(HKS)
ACT1283	M51/3m1 (Right liftgate control electric motor)-M51/5m1 (Left liftgate control electric motor)	Tailgate control(HKS)
ACT1284	Warning buzzer	Instrument cluster(IC)
ACT1285	Function illumination of component "S62/29 (Fire extinguishing system button)"	Fire extinguishing system and emergency fresh air system(FLANFS)
ACT1286	Function illumination of component "S62/41 (Fire extinguishing system activation button)"	Fire extinguishing system and emergency fresh air system(FLANFS)
ACT1287	H13 (Fire extinguishing system warning buzzer)	Fire extinguishing system and emergency fresh air system(FLANFS)
ACT1288	Activate air recirculation mode.	Fire extinguishing system and emergency fresh air system(FLANFS)
ACT1289	Rear passenger compartment seat heater	N10/8 (Rear passenger compartment control unit)(PCU REAR)

ACT1290	M14/7 (Rear-end door central locking motor)	N10/8 (Rear passenger compartment control unit)(PCU REAR)
ACT1291	LEDs of components "S51/3 (Left rear seat heater button)" and "S51/4 (Right rear seat heater button)"	N10/8 (Rear passenger compartment control unit)(PCU REAR)
ACT1292	LEDs of component "S51/3 (Left rear seat heater button)"	N10/8 (Rear passenger compartment control unit)(PCU REAR)
ACT1293	LEDs of component "S51/4 (Right rear seat heater button)"	N10/8 (Rear passenger compartment control unit)(PCU REAR)
ACT1294	DC/AC converter	N10/8 (Rear passenger compartment control unit)(PCU REAR)
ACT1295	Y54 (Right rear axle damper valve unit)	Adaptive damping system(N51/5)(ADS)
ACT1296	Actuator motors for headlamp range adjustment	Control unit 'Headlamp'(N71/1)(SG SW)
ACT1297	Switch status	Electric differential lock(EAGGS)
ACT1298	Light warning buzzer	Instrument cluster with maintenance interval display(ICM)
ACT1299	Gauges	Instrument cluster with maintenance interval display(ICM)
ACT1300	Automatic dimming mirror	Extended activity module(EAM)
ACT1301	Rear window defroster	Extended activity module(EAM)
ACT1302	Left front entrance lamp	Extended activity module(EAM)
ACT1303	Right front entrance lamp	Extended activity module(EAM)
ACT1304	Left rear entrance lamp	Extended activity module(EAM)
ACT1305	Right rear entrance lamp	Extended activity module(EAM)
ACT1306	Lamella roof/Sliding/tilting roof	Extended activity module(EAM)
ACT1307	F2k9 (Relay 9)(Terminal 15)	Extended activity module(EAM)
ACT1308	Wake-up cable to control module AAM	Extended activity module(EAM)

ACT1309	Open/close everything	All Activity Module(AAM)
ACT1310	Open driver door tailgate	All Activity Module(AAM)
ACT1311	Auxiliary fan	All Activity Module(AAM)
ACT1312	Interior blower	All Activity Module(AAM)
ACT1313	Circulation pump	All Activity Module(AAM)
ACT1314	Heater booster	All Activity Module(AAM)
ACT1315	Front wiper	All Activity Module(AAM)
ACT1316	Rear wiper	All Activity Module(AAM)
ACT1317	Fog lamps	All Activity Module(AAM)
ACT1318	Turn signals	All Activity Module(AAM)
ACT1319	Hazard warning display	All Activity Module(AAM)
ACT1320	Interior lighting	All Activity Module(AAM)
ACT1321	Convenience relay	All Activity Module(AAM)
ACT1322	Power windows	All Activity Module(AAM)
ACT1323	Horn	All Activity Module(AAM)
ACT1324	Alarm signal horn	All Activity Module(AAM)
ACT1325	ATA status display	All Activity Module(AAM)
ACT1326	Low beam	All Activity Module(AAM)
ACT1327	Main beam	All Activity Module(AAM)

ACT1328	Left parking lamp	All Activity Module(AAM)
ACT1329	Right parking lamp	All Activity Module(AAM)
ACT1330	License plate lights	All Activity Module(AAM)
ACT1331	Foglights	All Activity Module(AAM)
ACT1332	Rear foglight	All Activity Module(AAM)
ACT1333	Buzzer signal to control module Instrument cluster	All Activity Module(AAM)
ACT1334	Signal to hazard warning light	All Activity Module(AAM)
ACT1335	H1 (Two-tone signal system)	All Activity Module(AAM)
ACT1336	H3/1 (Alarm signal siren with additional battery)	All Activity Module(AAM)
ACT1337	S97/6e3 (ATA status indicator)	All Activity Module(AAM)
ACT1338	Signal from interior motion/towing sensor	All Activity Module(AAM)
ACT1339	Alarm signal to control module E-call	All Activity Module(AAM)
ACT1340	H3 (Alarm signal horn)	All Activity Module(AAM)
ACT1341	Front left power window	All Activity Module(AAM)
ACT1342	Front right power window	All Activity Module(AAM)
ACT1343	Left front interior light	All Activity Module(AAM)
ACT1344	Right front interior light	All Activity Module(AAM)
ACT1345	Left rear interior light	All Activity Module(AAM)
ACT1346	Right rear interior light	All Activity Module(AAM)

ACT1347	Engine fan	All Activity Module(AAM)
ACT1348	Convenience relay for seats	All Activity Module(AAM)
ACT1349	Convenience relay for windows and roof	All Activity Module(AAM)
ACT1350	F1k11 (Diesel voltage supply relay)	All Activity Module(AAM)
ACT1351	F1k12 (Circuit 15 relay)	All Activity Module(AAM)
ACT1352	F1k27 (Rear door washer pump relay)	All Activity Module(AAM)
ACT1353	LED in switch S6/1s4 (Tailgate wiper switch)	All Activity Module(AAM)
ACT1354	Central locking	All Activity Module(AAM)
ACT1355	Denormalizing of Right front power window	Lower operating panel with power window function(LCP)
ACT1356	Denormalizing of left rear power window	Lower operating panel with power window function(LCP)
ACT1357	Denormalizing of right rear power window	Lower operating panel with power window function(LCP)
ACT1358	LEDs for blower speed	Lower operating panel with power window function(LCP)
ACT1359	LEDs for blower direction	Lower operating panel with power window function(LCP)
ACT1360	Mirror housing adjustment Left	Lower operating panel with power window function(LCP)
ACT1361	Mirror housing adjustment Right	Lower operating panel with power window function(LCP)
ACT1362	Display test images on the LCD display.	COMAND
ACT1363	Output of test tone	COMAND
ACT1364	Test of fader setting	COMAND
ACT1365	Test of voice output	COMAND

ACT1366	M2/8 (Defroster flap positioning motor)	Automatic air conditioning(AAC)
ACT1367	M2/22 (Center vent flap positioning motor)/M2/6 (Blended air flap positioning motor)	Automatic air conditioning(AAC)
ACT1368	M2/5 (Fresh and recirculated air flap positioning motor)	Automatic air conditioning(AAC)
ACT1369	M2/1 (Rear blower motor)	Automatic air conditioning(AAC)
ACT1370	M13 (Heating water circulation pump)/M2/2 (Module box blower motor)	Automatic air conditioning(AAC)
ACT1371	A9 (AC compressor)	Automatic air conditioning(AAC)
ACT1372	R1 (rear window defroster)	Automatic air conditioning(AAC)
ACT1373	Y32 (Air pump switchover valve)M33 (electric air pump)	Motor electronics 2.8(ME SFI 2.8)
ACT1374	M3/1 (Intank fuel pump)	Motor electronics 2.8(ME SFI 2.8)
ACT1375	Y31/1 (EGR vacuum transducer)	Motor electronics 2.8(ME SFI 2.8)
ACT1376	Electric suction fan for engine or air conditioning	Motor electronics 2.8(ME SFI 2.8)
ACT1377	Ignition circuit shutoffT1/x (ignition coil(s))	Motor electronics 2.8(ME SFI 2.8)
ACT1378	Y2/1 (Supercharger magnetic clutch)	Motor electronics 2.8(ME SFI 2.8)
ACT1379	M44/1 (Left charge air cooler circulation pump)M44/2 (Right charge air cooler circulation pump)	Motor electronics 2.8(ME SFI 2.8)
ACT1380	M16/7 (Recirculating air flap actuator)	Motor electronics 2.8(ME SFI 2.8)
ACT1381	Actuation of exhaust gas recirculation	Common Rail Diesel Injection(CDI 2)
ACT1382	Y75 (Electric switchover valve)	Common Rail Diesel Injection(CDI 2)
ACT1383	M56(Brake booster vacuum pump)	Vacuum pump brake booster(VP)
ACT1384	Test actuation of component M3 (Fuel pump).	Common Rail Diesel Injection(CDI V)

ACT1385	Test actuation of component Y83 (Inlet port shutoff switchover valve).	Common Rail Diesel Injection(CDI V)
ACT1386	Check components Y27/9 (Left EGR positioner) and Y27/10 (Right EGR positioner) via actuation.	Common Rail Diesel Injection(CDI V)
ACT1387	Check components Y100 (Left charge pressure positioner) and Y100/1 (Right charge pressure positioner) via actuation.	Common Rail Diesel Injection(CDI V)
ACT1388	Test actuation of component M16/5 (Throttle valve actuator).	Common Rail Diesel Injection(CDI V)
ACT1389	Test actuation of component M44 (charge air cooler circulation pump).	Common Rail Diesel Injection(CDI V)
ACT1390	M16/3 (Front throttle valve actuator)M16/4 (Rear throttle valve actuator)	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)
ACT1391	M3 (Right fuel pump)M3/2 (Left fuel pump)	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)
ACT1392	R48 (Two-disk thermostat heating element)	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)
ACT1393	M45 (Engine coolant circulation pump)	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)
ACT1394	M13/9 (Power electronics circulation pump 2)	Motor electronics 17.7(ME SF 17.7)
ACT1395	Current battery capacity	Motor electronics 17.7(ME SF 17.7)
ACT1396	Automatic engine start/stop	Hybrid control unit(HSG)
ACT1397	Erasing of crash-relevant fault codes	Hybrid control unit(HSG)
ACT1398	Regenerative braking system	Hybrid control unit(HSG)
ACT1399	Y32 (Air pump switchover valve)-M33 (electric air pump)	Engine control monolith(ECM)
ACT1400	N3/18m1 (Throttle valve actuator)	Engine control monolith(ECM)
ACT1401	M4/3 (engine/AC electric suction fan)	Engine control monolith(ECM)
ACT1402	R/P locking solenoid	Gear recognition module(GRM)
ACT1403	Reversing lamp	Gear recognition module(GRM)

ACT1404	Illumination of shift indicator	Gear recognition module(GRM)
ACT1405	Refrigerant compressor	Automatic temperature control(TAC)
ACT1406	Fresh air and recirculated air flap	Automatic temperature control(TAC)
ACT1407	Blending air flap	Automatic temperature control(TAC)
ACT1408	Suction fan	Automatic temperature control(TAC)
ACT1409	PTC heater booster	Automatic temperature control(TAC)
ACT1410	PTC enable	Automatic temperature control(TAC)
ACT1411	Additional water pump	Automatic temperature control(TAC)
ACT1412	Blower stage 1	Automatic temperature control(TAC)
ACT1413	Test of compression	Common Rail Diesel Injection(CDI)
ACT1414	M3(Fuel pump)	Gasoline engine control(ME SFI)
ACT1415	M4/7(Engine and AC electric suction fan with integrated control)	Gasoline engine control(ME SFI)
ACT1416	Y58/1(Purge control valve)	Gasoline engine control(ME SFI)
ACT1417	Idle speed controller	Gasoline engine control(ME SFI)
ACT1418	Actuate light warning buzzer.	Instrument cluster(IC)
ACT1419	Move instrument pointer.	Instrument cluster(IC)
ACT1420	Bulb Test	Instrument cluster(IC)
ACT1421	Shift lock	Electronic selector module(ESM)
ACT1422	Lamella roof(Draft stop)	Overhead control panel(OCP)

ACT1423	Automatic air conditioning	Anti theft alarm system(ATA)
ACT1424	Left tail light	Trailer recognition(AHE)
ACT1425	Right tail light	Trailer recognition(AHE)
ACT1426	Stop lamp	Trailer recognition(AHE)
ACT1427	Output Two-way radio set 1	Special vehicle multifunction control module(MSS)
ACT1428	Output Two-way radio set 2	Special vehicle multifunction control module(MSS)
ACT1429	Output Rear foglight	Special vehicle multifunction control module(MSS)
ACT1430	Output Left turn signal	Special vehicle multifunction control module(MSS)
ACT1431	Output Right turn signal	Special vehicle multifunction control module(MSS)
ACT1432	Output Horn	Special vehicle multifunction control module(MSS)
ACT1433	Output Low beam	Special vehicle multifunction control module(MSS)
ACT1434	Output Terminal 15(6A)	Special vehicle multifunction control module(MSS)
ACT1435	Output Flashlights in trunk lid	Special vehicle multifunction control module(MSS)
ACT1436	Output Main beam	Special vehicle multifunction control module(MSS)
ACT1437	Output Reverse gear	Special vehicle multifunction control module(MSS)
ACT1438	Output Stop lamp	Special vehicle multifunction control module(MSS)
ACT1439	Output Side lamp	Special vehicle multifunction control module(MSS)
ACT1440	Output Terminal 30(10A)	Special vehicle multifunction control module(MSS)
ACT1441	Output Terminal 15(10A)	Special vehicle multifunction control module(MSS)

ACT1442	Denormalize power windows.	Door control module front left(DCM FL)
ACT1443	Actuation Front left power window	Door control module front left(DCM FL)
ACT1444	Mirror housing adjustment	Door control module front left(DCM FL)
ACT1445	E17/3(Left front door entrance/exit and warning lamp)	Door control module front left(DCM FL)
ACT1446	E6/5(Left exterior mirror turn signal lamp)	Door control module front left(DCM FL)
ACT1447	Function lighting	Door control module front left(DCM FL)
ACT1448	Switch illumination(Terminal 58d)	Door control module front left(DCM FL)
ACT1449	Actuation Front right power window	Door control module front right(DCM FR)
ACT1450	E17/4(Right front door entrance/exit and warning lamp)	Door control module front right(DCM FR)
ACT1451	E6/6(Right exterior mirror turn signal lamp)	Door control module front right(DCM FR)
ACT1452	Denormalizing of left rear power windows	Door control module rear left(DCM RL)
ACT1453	Actuation Rear left power window	Door control module rear left(DCM RL)
ACT1454	Denormalizing of right rear power windows.	Door control module rear right(DCM RR)
ACT1455	Actuation Rear right power window	Door control module rear right(DCM RR)
ACT1456	M3/3 (Fuel pump with fuel tank sensor)	Common Rail Diesel Injection(CDI)
ACT1457	Y100/2 (Boost pressure regulator)	Common Rail Diesel Injection(CDI)
ACT1458	Gong in instrument cluster	Vario roof(VR)
ACT1459	Auxiliary(or Aspirator) fan stages	Automatic temperature control(TAC)
ACT1460	A/C compressor electromagnetic coupling	Automatic temperature control(TAC)

ACT1461	Fresh air and recirculating air flaps	Automatic temperature control(TAC)
ACT1462	Idle speed increase	Automatic temperature control(TAC)
ACT1463	Y49(Adjustable camshaft timing solenoid)	Motor electronics(ME SFI)
ACT1464	Y58/4(Activated charcoal canister shut-off valve) , (Only valid for USA vehivles)	Motor electronics(ME SFI)
ACT1465	Secondary air valve	Motor electronics(ME SFI)
ACT1466	Roller dynamometer	Electronic stability program(ESP)
ACT1467	Y58/4 (Activated charcoal canister shut-off valve)(Only valid for USA vehicles)	Motor electronics(ME SFI)
ACT1468	Y62y1 (Cylinder 1 injector)	Motor electronics(ME SFI)
ACT1469	Y62y2 ( Cylinder 2 injector)	Motor electronics(ME SFI)
ACT1470	Y62y3 (Cylinder 3 injector)	Motor electronics(ME SFI)
ACT1471	Y62y4 (Cylinder 4 injector)	Motor electronics(ME SFI)
ACT1472	Secondary air valve-Test secondary air injection (function chain).	Motor electronics(ME SFI)
ACT1473	Exhaust flap	Motor electronics(ME SFI)
ACT1474	Actuate pointer instruments	Instrument cluster(IC)
ACT1475	Actuate warning buzzer	Instrument cluster(IC)
ACT1476	Footwell lights	Signal acquisition and actuation module front(SAM F)
ACT1477	LED fog light	Signal acquisition and actuation module front(SAM F)
ACT1478	LED Rear foglight	Signal acquisition and actuation module front(SAM F)
ACT1479	M5/1(Windshield washer fluid pump)	Signal acquisition and actuation module front(SAM F)

ACT1480	M5/2(HCS pump)	Signal acquisition and actuation module front(SAM F)
ACT1481	M6/1(wiper motor)	Signal acquisition and actuation module front(SAM F)
ACT1482	R2/1(Heated windshield washer nozzle)	Signal acquisition and actuation module front(SAM F)
ACT1483	N10/1kP(Circuit 15 relay)	Signal acquisition and actuation module front(SAM F)
ACT1484	N10/1kM(Starter circuit 50 relay)	Signal acquisition and actuation module front(SAM F)
ACT1485	N10/1kI(Fanfare horns relay)	Signal acquisition and actuation module front(SAM F)
ACT1486	N10/2kF(Circuit 15R relay 1)	Rear signal acquisition and actuation module(REAR SAM)
ACT1487	N10/2kB(Circuit 15R relay 2)	Rear signal acquisition and actuation module(REAR SAM)
ACT1488	Fuel filler cap lock	Rear signal acquisition and actuation module(REAR SAM)
ACT1489	A44/4 (PTS warning display, instrument panel center)	Parktronic system(PTS)
ACT1490	A44/3 (Rear PTS warning display)	Parktronic system(PTS)
ACT1491	Denormalize power windows	Door control module left(DCM L)
ACT1492	Mirror lens adjustment	Door control module left(DCM L)
ACT1493	Mirror housing adjustment	Door control module left(DCM L)
ACT1494	E17/3(Left door entrance/exit lamp)	Door control module left(DCM L)
ACT1495	Mirror park position	Door control module right(DCM R)
ACT1496	E17/3(Right door entrance/exit lamp)	Door control module right(DCM R)
ACT1497	Forward/back adjustment	Electric seat adjustment driver (with memory)(ESV driver)
ACT1498	Height at front	Electric seat adjustment driver (with memory)(ESV driver)

ACT1499	Height at rear	Electric seat adjustment driver (with memory)(ESV driver)
ACT1500	Backrest	Electric seat adjustment driver (with memory)(ESV driver)
ACT1501	Head restraint	Electric seat adjustment driver (with memory)(ESV driver)
ACT1502	Function illumination for variable speed limiter	Steering column module(SCM [MRM])
ACT1503	Search illumination of multifunction steering wheel	Steering column module(SCM [MRM])
ACT1504	Function illumination for steering wheel heater	Steering column module(SCM [MRM])
ACT1505	M2/16(Left and right defroster flaps actuator)	Automatic air conditioning(AAC)
ACT1506	M2/15(Left and right footwell flaps actuator)	Automatic air conditioning(AAC)
ACT1507	M2/5(Fresh and recirculated air flaps actuator)	Automatic air conditioning(AAC)
ACT1508	A32m1(Blower motor)	Automatic air conditioning(AAC)
ACT1509	Actuation of switch and control illumination	Automatic air conditioning(AAC)
ACT1510	Left head area ventilation	Seat heater(HS)
ACT1511	Right head area ventilation	Seat heater(HS)
ACT1512	M5/1 (Windshield washer fluid pump)	Signal acquisition and actuation module front(SAM F)
ACT1513	Washer nozzle and washer nozzle hose heater	Signal acquisition and actuation module front(SAM F)
ACT1514	Wipers	Signal acquisition and actuation module front(SAM F)
ACT1515	Switch illumination:Exterior lamp switch, E10/2 (Left air vent illumination),E10/1 (Center air vent illumination), E10/3 (Right air vent illumination)	Signal acquisition and actuation module front(SAM F)
ACT1516	N10/1kI (Fanfare horns relay)	Signal acquisition and actuation module front(SAM F)
ACT1517	Actuation	Trailer recognition(AHE)

ACT1518	Radio muting	Telematic system(E call [Japan])
ACT1519	Y100/1 (Right charge pressure positioner)	Common Rail Diesel Injection3(CDI 3)
ACT1520	Actuation: Headlamp range adjustment of Right headlamp	Xenon headlamp, right(XALWA R)
ACT1521	Soft top operating switch indicator lamp	Rollover bar soft top control module(RVC)
ACT1522	Rollover bar bow operating switch indicator lamp	Rollover bar soft top control module(RVC)
ACT1523	Gong	Rollover bar soft top control module(RVC)
ACT1524	Memory Mirror position	Door control module left(DCM L)
ACT1525	Exit light	Door control module left(DCM L)
ACT1526	Door interior lighting	Door control module left(DCM L)
ACT1527	Additional turn signal light in exterior mirror	Door control module left(DCM L)
ACT1528	LED Trunk lid remote release	Door control module left(DCM L)
ACT1529	Injection valves	Motor electronics(ME SFI)
ACT1530	Actuation of mixture adaptation	Motor electronics(ME SFI)
ACT1531	Alternator serial interface	Motor electronics(ME SFI)
ACT1532	Camshaft positioner 'Intake'	Motor electronics(ME SFI)
ACT1533	Camshaft positioner 'Exhaust'	Motor electronics(ME SFI)
ACT1534	Carry out compression test.	Motor electronics(ME SFI)
ACT1535	Mode	Motor electronics(ME SFI)
ACT1536	Y107/1y1 (Gas cylinder 1 shutoff valve)-Y107/1y4 (Gas cylinder 4 shutoff valve)/Y107/2 (Gas safety shutoff valve)	Motor electronics(ME SFI)

ACT1537	Check component Y107/2 (Gas safety shutoff valve).	Motor electronics(ME SFI)
ACT1538	Evacuating the gas system	Motor electronics(ME SFI)
ACT1539	Filling the gas system	Motor electronics(ME SFI)
ACT1540	Release pressure in left front suspension strut.	AIRmatic
ACT1541	Release pressure in right front suspension strut.	AIRmatic
ACT1542	Release pressure in left rear suspension strut.	AIRmatic
ACT1543	Release pressure in right rear suspension strut.	AIRmatic
ACT1544	Release pressure in the rear suspension strut.This function is needed in cases where both rear suspension struts are replaced at the same time.	AIRmatic
ACT1545	Fill left front suspension strut.	AIRmatic
ACT1546	Fill right front suspension strut.	AIRmatic
ACT1547	Fill left rear suspension strut.	AIRmatic
ACT1548	Fill right rear suspension strut.	AIRmatic
ACT1549	Y51/1 (AIRmatic valve unit, left front suspension strut)	AIRmatic
ACT1550	Y52/1 (AIRmatic valve unit, right front suspension strut)	AIRmatic
ACT1551	Y53/1 (AIRmatic valve unit, left rear suspension strut)	AIRmatic
ACT1552	Y54/1 (AIRmatic valve unit, right rear suspension strut)	AIRmatic
ACT1553	Front axle/Rear axle RAISE + LOWER	AIRmatic
ACT1554	K75 (Cutoff relay for interruptible loads)	Battery control module(BCM)
ACT1555	K57/2 (Auxiliary battery relay)	Battery control module(BCM)

ACT1556	Standing and parking lamp 'Driver's side'	Driver signal acquisition and actuation module(Dr side SAM)
ACT1557	Low beam 'Driver's side'	Driver signal acquisition and actuation module(Dr side SAM)
ACT1558	High beam 'Driver's side'	Driver signal acquisition and actuation module(Dr side SAM)
ACT1559	Fog lamp 'Driver's side'	Driver signal acquisition and actuation module(Dr side SAM)
ACT1560	Front turn signal lamp 'Driver's side'	Driver signal acquisition and actuation module(Dr side SAM)
ACT1561	Front side marker lamp 'Driver's side'	Driver signal acquisition and actuation module(Dr side SAM)
ACT1562	Front side marker lamp 'Passenger side'	Driver signal acquisition and actuation module(Dr side SAM)
ACT1563	Gear display	Driver signal acquisition and actuation module(Dr side SAM)
ACT1564	LED Fog light	Driver signal acquisition and actuation module(Dr side SAM)
ACT1565	M5/3 (Tailgate washer fluid pump)	Driver signal acquisition and actuation module(Dr side SAM)
ACT1566	M5/2 (HCS pump)	Driver signal acquisition and actuation module(Dr side SAM)
ACT1567	M16/32 (Heat exchanger shutoff motor)	Driver signal acquisition and actuation module(Dr side SAM)
ACT1568	N10/1kN (Circuit 15 relay)\nN10/1kK (Circuit 87 relay, chassis)	Driver signal acquisition and actuation module(Dr side SAM)
ACT1569	N10/1kP (Circuit 15R relay)	Driver signal acquisition and actuation module(Dr side SAM)
ACT1570	N10/1kO (FAN relay module)	Driver signal acquisition and actuation module(Dr side SAM)
ACT1571	Standing and parking lamp 'Front-passenger side'	Passenger-side signal acquisition and actuation module(Pass side SAM)
ACT1572	Low beam 'Passenger side'	Passenger-side signal acquisition and actuation module(Pass side SAM)
ACT1573	High beam 'Passenger side'	Passenger-side signal acquisition and actuation module(Pass side SAM)
ACT1574	Fog lamp 'Front-passenger side'	Passenger-side signal acquisition and actuation module(Pass side SAM)

ACT1575	Turn signal lamp 'Front-passenger side'	Passenger-side signal acquisition and actuation module(Pass side SAM)
ACT1576	Surround lamp Trunk lid	Rear signal acquisition and actuation module(REAR SAM)
ACT1577	Actuation of rear window defroster relay	Rear signal acquisition and actuation module(REAR SAM)
ACT1578	Rear blind	Rear signal acquisition and actuation module(REAR SAM)
ACT1579	Open or close the switch panel	Upper control panel(UCP)
ACT1580	Dome lamp	Overhead control panel(OCP)
ACT1581	Left front reading lamp	Overhead control panel(OCP)
ACT1582	Right front reading lamp	Overhead control panel(OCP)
ACT1583	Left rear reading lamp	Overhead control panel(OCP)
ACT1584	Right rear reading lamp	Overhead control panel(OCP)
ACT1585	Automatic interior mirror dimming	Overhead control panel(OCP)
ACT1586	Open or close central locking	Door control module front left(DCM FL)
ACT1587	Mirror housing adjustment(Special equipment)	Door control module front left(DCM FL)
ACT1588	Mirror memory(Special equipment)	Door control module front left(DCM FL)
ACT1589	Front passenger exterior mirror in park position(Special equipment)	Door control module front left(DCM FL)
ACT1590	Warning lamp	Door control module front left(DCM FL)
ACT1591	Surround lamp	Door control module front left(DCM FL)
ACT1592	LED E17/11 (Left front door inside handle illumination)	Door control module front left(DCM FL)
ACT1593	LED'Trunk lid opened'	Door control module front left(DCM FL)

ACT1594	LED'Childproof lock activated'	Door control module front left(DCM FL)
ACT1595	LED E17/12 (Right front door inside handle illumination)	Door control module front right(DCM FR)
ACT1596	LED Childproof locks	Door control module front right(DCM FR)
ACT1597	Switch illumination Terminal 58d	Door control module rear left(DCM RL)
ACT1598	E17/13 (Left rear door inside handle illumination)	Door control module rear left(DCM RL)
ACT1599	E17/14 (Right rear door inside handle illumination)	Door control module rear right(DCM RR)
ACT1600	Check component M16/32 (Heat exchanger shutoff motor).	Automatic air conditioning(AAC)
ACT1601	Check of LEDs	Automatic air conditioning(AAC)
ACT1602	R22/4(Steering wheel heater)	Steering wheel heater(LRH)
ACT1603	Loading floor automatically extendable	Loading floor automatically extendable(LAE [LAA])
ACT1604	Reversing lights	Rear end door control module(RWT)
ACT1605	Signal 'Rear-end door open'	Rear end door control module(RWT)
ACT1606	Rear-end door lock	Rear end door control module(RWT)
ACT1607	Unlock and lock central locking.	Rear end door control module(RWT)
ACT1608	Check component Y27 (Exhaust gas recirculation positioner) by means of actuation.	Common Rail Diesel Injection(USA)(CDI5)
ACT1609	Check component Y77/1 (Boost pressure regulator) by means of actuation.	Common Rail Diesel Injection(USA)(CDI5)
ACT1610	Pressure regulator valve and quantity control valve	Common Rail Diesel Injection(USA)(CDI5)
ACT1611	A1e58 (Engine diagnosis malfunction indicator lamp)	Common Rail Diesel Injection(CDID)
ACT1612	Y125 (Low temperature cooling system shutoff valve)	Motor electronics for direct injection 9.7(MED 9.7)

ACT1613	Y62(Fuel injectors)	Motor electronics 2.0(ME SFI 2.0)
ACT1614	A7/3y6 (front left solenoid valve, hold pressure)	Electronic stability program(ESP)
ACT1615	A7/3y7 (front left solenoid valve, reduce pressure)	Electronic stability program(ESP)
ACT1616	A7/3y8 (front right solenoid valve, hold pressure)	Electronic stability program(ESP)
ACT1617	A7/3y9 (front right solenoid valve, reduce pressure)	Electronic stability program(ESP)
ACT1618	A7/3y10 (rear left solenoid valve, hold pressure)	Electronic stability program(ESP)
ACT1619	A7/3y11(rear left solenoid valve, reduce pressure)	Electronic stability program(ESP)
ACT1620	A7/3y12 (rear right solenoid valve, hold pressure)	Electronic stability program(ESP)
ACT1621	A7/3y13 (rear right solenoid valve, reduce pressure)	Electronic stability program(ESP)
ACT1622	A7/3y18 (front axle switchover solenoid valve)	Electronic stability program(ESP)
ACT1623	A7/3y19 (rear axle switchover solenoid valve)	Electronic stability program(ESP)
ACT1624	A7/3y22 (front axle inlet solenoid valve)	Electronic stability program(ESP)
ACT1625	A7/3y23 (rear axle inlet solenoid valve)	Electronic stability program(ESP)
ACT1626	Control module reset	Instrument cluster with maintenance interval display(ICM)
ACT1627	Brightness of instrument lighting	Instrument cluster with maintenance interval display(ICM)
ACT1628	Test of signal transmission between A69/1 (left front tire pressure monitor sensor) and N88 (TPM [RDK] control unit)	Tire pressure monitor(TPM)
ACT1629	Test of signal transmission between A69/2 (right front tire pressure monitor sensor) and N88 (TPM [RDK] control unit)	Tire pressure monitor(TPM)
ACT1630	Test of signal transmission between A69/3 (left rear tire pressure monitor sensor) and N88 (TPM [RDK] control unit)	Tire pressure monitor(TPM)
ACT1631	Test of signal transmission between A69/4 (rear right tire pressure control wheel sensor) and N88 (TPM [RDK] control unit)	Tire pressure monitor(TPM)

ACT1632	Illumination of shift indicator	Electronic selector module(ESM)
ACT1633	Y86/1 (ABC suction restrictor valve)	Active body control(N51/2)(ABC)
ACT1634	Control and locking valve of front left suspension strut	Active body control(N51/2)(ABC)
ACT1635	Control and locking valve of front right suspension strut	Active body control(N51/2)(ABC)
ACT1636	Control and locking valve of rear left suspension strut	Active body control(N51/2)(ABC)
ACT1637	Control and locking valve of rear right suspension strut	Active body control(N51/2)(ABC)
ACT1638	Cyclic switching of control valves with maximum positive and negative current	Active body control(N51/2)(ABC)
ACT1639	Cyclically alternating actuation of left and right suspension struts (roll)	Active body control(N51/2)(ABC)
ACT1640	Actuation Power window	Door control module front left(DCM FL)
ACT1641	M21/1m3 (Mirror fold-in motor)	Door control module front left(DCM FL)
ACT1642	M21/1r1 (Mirror heater)	Door control module front left(DCM FL)
ACT1643	E17/11 (Left front door inside handle illumination)	Door control module front left(DCM FL)
ACT1644	Switch search illumination	Door control module front left(DCM FL)
ACT1645	Power locking	Door control module front left(DCM FL)
ACT1646	M21/2m3 (Mirror fold-in motor)	Door control module front right(DCM FR)
ACT1647	M21/2r1 (Mirror heater)	Door control module front right(DCM FR)
ACT1648	E17/4 (Right front door entry/exit lamp)	Door control module front right(DCM FR)
ACT1649	E17/12 (Right front door inside handle illumination)	Door control module front right(DCM FR)
ACT1650	Switch search illumination	Door control module front right(DCM FR)

ACT1651	Actuate orientation lighting.	Rear control module(RCM)
ACT1652	A44/1 (PTS warning display, instrument panel driver side)	Parktronic system(PTS)
ACT1653	A44/3 (PTS warning display, rear dome lamp)	Parktronic system(PTS)
ACT1654	Right low beam	Front left signal acquisition and actuation module(SAM FL)
ACT1655	Left front side lamp and parking lamp	Front left signal acquisition and actuation module(SAM FL)
ACT1656	Left foglamp	Front left signal acquisition and actuation module(SAM FL)
ACT1657	Left main beam	Front left signal acquisition and actuation module(SAM FL)
ACT1658	Wiper rest heater	Front left signal acquisition and actuation module(SAM FL)
ACT1659	Left low beam	Front right signal acquisition and actuation module(SAM FR)
ACT1660	Right front side light and parking light	Front right signal acquisition and actuation module(SAM FR)
ACT1661	Right fog light	Front right signal acquisition and actuation module(SAM FR)
ACT1662	Right main beam	Front right signal acquisition and actuation module(SAM FR)
ACT1663	Right front turn signal lamp	Front right signal acquisition and actuation module(SAM FR)
ACT1664	Illumination for front ashtray, spectacles compartment, storage compartment and footwell	Front right signal acquisition and actuation module(SAM FR)
ACT1665	Windshield washer pump	Front right signal acquisition and actuation module(SAM FR)
ACT1666	K40/7kP (Fanfare horns relay)	Front right signal acquisition and actuation module(SAM FR)
ACT1667	Rear screen	Rear signal acquisition and actuation module(REAR SAM)
ACT1668	Trailer lighting	Trailer recognition(AHE)
ACT1669	LED of component Trailer recognition	Trailer recognition(AHE)

ACT1670	Front makeup light, rear makeup light	Overhead control panel(OCP)
ACT1671	Unlock trunk lid	Pneumatic system equipment(PSE)
ACT1672	Deactivate the child safety lock of the rear doors.	Pneumatic system equipment(PSE)
ACT1673	Emergency opening by simulating the crash signal	Pneumatic system equipment(PSE)
ACT1674	Duo valves	Automatic air conditioning(AAC)
ACT1675	Defroster outlet flaps	Automatic air conditioning(AAC)
ACT1676	Footwell flaps	Automatic air conditioning(AAC)
ACT1677	Center outlets	Automatic air conditioning(AAC)
ACT1678	Active carbon filter flap	Automatic air conditioning(AAC)
ACT1679	Illumination of pushbutton control and of center outlets	Automatic air conditioning(AAC)
ACT1680	Blower for in-car temperature at pushbutton control module	Automatic air conditioning(AAC)
ACT1681	Normalizing of positioning motors	Automatic air conditioning(AAC)
ACT1682	Actuation of stationary heater	Automatic air conditioning(AAC)
ACT1683	All lift solenoids	Keyless Go(KG)
ACT1684	L12 (Left front door Keyless Go lift solenoid)	Keyless Go(KG)
ACT1685	L12/1 (Left rear door Keyless Go lift solenoid)	Keyless Go(KG)
ACT1686	L12/2 (Right front door Keyless Go lift solenoid)	Keyless Go(KG)
ACT1687	L12/3 (Right rear door Keyless Go lift solenoid)	Keyless Go(KG)
ACT1688	A2/38 (Keyless Go antenna, left front door)	Keyless Go(KG)

ACT1689	A2/39 (Keyless Go antenna, left rear door)	Keyless Go(KG)
ACT1690	A2/40 (Keyless Go antenna, right front door)	Keyless Go(KG)
ACT1691	A2/41 (Keyless Go antenna, right rear door)	Keyless Go(KG)
ACT1692	A2/35 (Keyless Go antenna, trunk)	Keyless Go(KG)
ACT1693	A2/31 (Keyless Go antenna, rear bumper)	Keyless Go(KG)
ACT1694	Horn contact	Special vehicle multifunction control module(MSS)
ACT1695	Taximeter	Special vehicle multifunction control module(MSS)
ACT1696	Undervoltage check	Special vehicle multifunction control module(MSS)
ACT1697	2nd battery	Special vehicle multifunction control module(MSS)
ACT1698	Jack	Special vehicle multifunction control module(MSS)
ACT1699	Roof sign	Special vehicle multifunction control module(MSS)
ACT1700	Indicator for roof sign	Special vehicle multifunction control module(MSS)
ACT1701	Radiophone	Special vehicle multifunction control module(MSS)
ACT1702	Output Terminal 15	Special vehicle multifunction control module(MSS)
ACT1703	ACTUATIONS	Headlamp range adjustment(HRA)
ACT1704	M16/22 (Up/down air distribution actuator motor)	Rear air conditioning(REAR AC)
ACT1705	Y67 (Rear air conditioning refrigerant shutoff valve)	Rear air conditioning(REAR AC)
ACT1706	A31/1m1 (circulation pump)	Rear air conditioning(REAR AC)
ACT1707	Rear lamp	Overhead control panel(OCP)

ACT1708	Left front reading lamp	Overhead control panel(OCP)
ACT1709	Automatic interior mirror dimming	Overhead control panel(OCP)
ACT1710	Actuation of mechanical instrument pointers to maximum position	Instrument cluster(IC)
ACT1711	Installation position of brake cables	Electric parking brake(EPB)
ACT1712	Operate parking brake.	Electric parking brake(EPB)
ACT1713	Test of signal transmission between A69/1 (Left front tire pressure sensor) and N88 (Tire pressure monitor control unit)	Tire pressure monitor(TPM)
ACT1714	Test of signal transmission between A69/2 (Right front tire pressure sensor) and N88 (Tire pressure monitor control unit)	Tire pressure monitor(TPM)
ACT1715	Test of signal transmission between A69/3 (Left rear tire pressure sensor) and N88 (Tire pressure monitor control unit)	Tire pressure monitor(TPM)
ACT1716	Test of signal transmission between A69/4 (Right rear tire pressure sensor) and N88 (Tire pressure monitor control unit)	Tire pressure monitor(TPM)
ACT1717	BAS Brake assist	Adaptive Brake(ABR)
ACT1718	Set the driving level.	AIRmatic
ACT1719	Empty central reservoir.	AIRmatic
ACT1720	Actuation of LED in button 'Vehicle level'	AIRmatic
ACT1721	Release of system pressure	Active body control(N51/2)(ABC)
ACT1722	SGRRadar sensors control unit	Radar sensors control unit(SGR)
ACT1723	Test image on instrument cluster display	Night View Assist(NSA)
ACT1724	Actuate component B84/2(Night View Assist camera)	Night View Assist(NSA)
ACT1725	Infrared headlamp	Night View Assist(NSA)
ACT1726	Function test(Actuation of components)	Keyless Go(KG)

ACT1727	M14/6 (Left front door central locking motor)	Keyless Go(KG)
ACT1728	M14/5 (Right front door central locking motor)	Keyless Go(KG)
ACT1729	M14/8 (CL left rear door motor)	Keyless Go(KG)
ACT1730	M14/9 (CL right rear door motor)	Keyless Go(KG)
ACT1731	AllMotors	Keyless Go(KG)
ACT1732	A2/39 (Left door Keyless Go antenna)	Keyless Go(KG)
ACT1733	A2/41 (Right door Keyless Go antenna)	Keyless Go(KG)
ACT1734	A2/60 (Keyless Go antenna center console)	Keyless Go(KG)
ACT1735	A2/61 (Keyless Go antenna, interior)	Keyless Go(KG)
ACT1736	A17/1 (Left front Keyless Go door handle)	Keyless Go(KG)
ACT1737	A17/3 (Left rear Keyless Go door handle)	Keyless Go(KG)
ACT1738	A17/2 (Right front Keyless Go door handle)	Keyless Go(KG)
ACT1739	A17/4 (Right rear Keyless Go door handle)	Keyless Go(KG)
ACT1740	AllCheck door handles using actual value.	Keyless Go(KG)
ACT1741	A2/60 (Cockpit Keyless Go antenna)/A2/61 (Keyless Go antenna, interior)	Keyless Go(KG)
ACT1742	A2/35 (Keyless Go antenna, trunk)(W221)	Keyless Go(KG)
ACT1743	In vehicle	Keyless Go(KG)
ACT1744	Trunk	Keyless Go(KG)
ACT1745	Left front door	KEYLESS GO(KG)

ACT1746	Left rear door	KEYLESS GO(KG)
ACT1747	Right front door	KEYLESS GO(KG)
ACT1748	Right rear door	KEYLESS GO(KG)
ACT1749	Key search within vehicle	KEYLESS GO(KG)
ACT1750	Key search outside vehicle	KEYLESS GO(KG)
ACT1751	Keyless Go system check	KEYLESS GO(KG)
ACT1752	Inside rearview mirror (automatically dimming)	Overhead control panel(OCP)
ACT1753	Sliding/tilting roof	Overhead control panel(OCP)
ACT1754	Panoramic sliding roof	Overhead control panel(OCP)
ACT1755	Ambiance lighting	Upper control panel(UCP)
ACT1756	N72/1e2 (ATA [EDW] function indicator)	Upper control panel(UCP)
ACT1757	N72/1s30 (STH/HB [ZUH]/residual heat button)	Upper control panel(UCP)
ACT1758	N72/1s33 (Left automatic air conditioning button)	Upper control panel(UCP)
ACT1759	N72/1s37 (Air recirculation button)	Upper control panel(UCP)
ACT1760	N72/1s38 (OFF/residual heat button)	Upper control panel(UCP)
ACT1761	N72/1s39 (Heated rear window button)	Upper control panel(UCP)
ACT1762	N72/1s42 (Right automatic air conditioning button)	Upper control panel(UCP)
ACT1763	E13/1 (Glove compartment lamp)	Upper control panel(UCP)
ACT1764	E17/15 (Right front footwell lamp),E17/16 (Left front footwell lamp)	Upper control panel(UCP)

ACT1765	A70/1 (Analog clock)	Upper control panel(UCP)
ACT1766	S6/2e1 (Automatic child seat recognition airbag OFF indicator lamp)	Upper control panel(UCP)
ACT1767	S6/2s10 (Level adjustment switch)	Upper control panel(UCP)
ACT1768	S6/2s11 (ESP OFF switch)	Upper control panel(UCP)
ACT1769	S6/2s15 (Suspension settings switch)	Upper control panel(UCP)
ACT1770	S6/2s12 (PTS OFF switch)	Upper control panel(UCP)
ACT1771	S1e4 (Exterior lamp switch illumination)	Upper control panel(UCP)
ACT1772	S1e1 (Foglamps indicator lamp)	Upper control panel(UCP)
ACT1773	S1e2 (Rear foglamp indicator lamp)	Upper control panel(UCP)
ACT1774	S1e3 (Standing lamps indicator lamp)	Upper control panel(UCP)
ACT1775	A40/9 (Front central operating unit)	Upper control panel(UCP)
ACT1776	Circuit 15R	Driver signal acquisition and actuation module(Dr side SAM)
ACT1777	Daytime running lamps	Driver signal acquisition and actuation module(Dr side SAM)
ACT1778	Parking light	Driver signal acquisition and actuation module(Dr side SAM)
ACT1779	Side lamp	Driver signal acquisition and actuation module(Dr side SAM)
ACT1780	Main beam(Bi-xenon)	Driver signal acquisition and actuation module(Dr side SAM)
ACT1781	Fog light	Driver signal acquisition and actuation module(Dr side SAM)
ACT1782	Turn signal lamp	Driver signal acquisition and actuation module(Dr side SAM)
ACT1783	Side marker lamp	Driver signal acquisition and actuation module(Dr side SAM)

ACT1784	Windshield wiper motor	Driver signal acquisition and actuation module(Dr side SAM)
ACT1785	Heating water circulation pump	Driver signal acquisition and actuation module(Dr side SAM)
ACT1786	Shutoff valve	Driver signal acquisition and actuation module(Dr side SAM)
ACT1787	Quiescent current shutoff	Driver signal acquisition and actuation module(Dr side SAM)
ACT1788	Test of additional battery	Driver signal acquisition and actuation module(Dr side SAM)
ACT1789	Taillights	Rear signal acquisition and actuation module(REAR SAM)
ACT1790	Side marker lamps	Rear signal acquisition and actuation module(REAR SAM)
ACT1791	Stop lights	Rear signal acquisition and actuation module(REAR SAM)
ACT1792	Center high-mounted stop lamp	Rear signal acquisition and actuation module(REAR SAM)
ACT1793	Turn signal lights	Rear signal acquisition and actuation module(REAR SAM)
ACT1794	Surround lamp/Warning lamp	Rear signal acquisition and actuation module(REAR SAM)
ACT1795	N10/2kM (Circuit 15 relay)	Rear signal acquisition and actuation module(REAR SAM)
ACT1796	N10/2kN (Circuit 15R relay)	Rear signal acquisition and actuation module(REAR SAM)
ACT1797	N10/2kO (Power outlet relay)	Rear signal acquisition and actuation module(REAR SAM)
ACT1798	N10/2kP (Heated rear window relay)	Rear signal acquisition and actuation module(REAR SAM)
ACT1799	Rear screen Denormalizing	Rear signal acquisition and actuation module(REAR SAM)
ACT1800	Rear screen Normalizing	Rear signal acquisition and actuation module(REAR SAM)
ACT1801	Actuation Rear screen	Rear signal acquisition and actuation module(REAR SAM)
ACT1802	Y24/11 (Rear head restraints valve block)Rear center	Rear signal acquisition and actuation module(REAR SAM)

ACT1803	M14/7 (Trunk lid CL motor)	Rear signal acquisition and actuation module(REAR SAM)
ACT1804	M14/10 (CL fuel filler flap motor)	Rear signal acquisition and actuation module(REAR SAM)
ACT1805	Internal charge transformer	Vehicle power supply control module(BNS)
ACT1806	N82/1k1 (Quiescent current cutout relay)	Vehicle power supply control module(BNS)
ACT1807	F32k1 (Coupling relay battery)	Vehicle power supply control module(BNS)
ACT1808	Consumer shutoff	Vehicle power supply control module(BNS)
ACT1809	On-board electrical system warnings	Vehicle power supply control module(BNS)
ACT1810	Indicator lamp 'Trailer hitch locked'	Trailer recognition(AHE)
ACT1811	Terminal 30G 'Trailer socket'	Trailer recognition(AHE)
ACT1812	Inflatable cushion in shoulder area	Left front dynamic seat(DS LF)
ACT1813	Left air cushion for lateral support	Left front dynamic seat(DS LF)
ACT1814	Right air cushion for lateral support	Left front dynamic seat(DS LF)
ACT1815	Lumbar top	Left front dynamic seat(DS LF)
ACT1816	Lumbar middle	Left front dynamic seat(DS LF)
ACT1817	Lumbar bottom	Left front dynamic seat(DS LF)
ACT1818	Air cushion in left upper leg area	Left front dynamic seat(DS LF)
ACT1819	Air cushion in right upper leg area	Left front dynamic seat(DS LF)
ACT1820	Air cushion for lateral support in left upper leg area	Left front dynamic seat(DS LF)
ACT1821	Air cushion for lateral support in right upper leg area	Left front dynamic seat(DS LF)

ACT1822	Air cushion for lateral support in upper leg area	Left front dynamic seat(DS LF)
ACT1823	Air cushion for massage function, row 1 (lower)	Left front dynamic seat(DS LF)
ACT1824	Air cushion for massage function, row 2	Left front dynamic seat(DS LF)
ACT1825	Air cushion for massage function, row 3	Left front dynamic seat(DS LF)
ACT1826	Air cushion for massage function, row 4	Left front dynamic seat(DS LF)
ACT1827	Air cushion for massage function, row 5	Left front dynamic seat(DS LF)
ACT1828	Air cushion for massage function, row 6	Left front dynamic seat(DS LF)
ACT1829	Air cushion for massage function, row 7 (upper)	Left front dynamic seat(DS LF)
ACT1830	Pneumatic pump for dynamic seat	Pneumatic pump for dynamic seat(DSP)
ACT1831	Power window	Door control module front left(DCM FL)
ACT1832	Mirror memory	Door control module front left(DCM FL)
ACT1833	Additional door lock	Door control module front left(DCM FL)
ACT1834	Switch illuminationTerminal 58d	Door control module front left(DCM FL)
ACT1835	E17/19 (Left front door warning light)	Door control module front left(DCM FL)
ACT1836	Door handle recess and trim strip illumination	Door control module front left(DCM FL)
ACT1837	LEDsFunction lighting	Door control module front left(DCM FL)
ACT1838	LEDsSeat heater and ventilation	Door control module front left(DCM FL)
ACT1839	LEDsBlind spot assist	Door control module front left(DCM FL)
ACT1840	E17/4 (Right front door entry/exit lamp	Door control module front right(DCM FR)

ACT1841	E17/21 (Right front door warning light)	Door control module front right(DCM FR)
ACT1842	Power windowWindow in short stroke position	Rear control module(RCM)
ACT1843	Head restraint adjustment	Rear control module(RCM)
ACT1844	Terminal 58d(Switch illumination)	Rear control module(RCM)
ACT1845	Seat cushion depth	Electric seat adjustment front left(ESA FL)
ACT1846	Seat heater	Electric seat adjustment front left(ESA FL)
ACT1847	Seat ventilation	Electric seat adjustment front left(ESA FL)
ACT1848	Seat belt wear convenience	Electric seat adjustment front left(ESA FL)
ACT1849	Footwell lightingREAR	Electric seat adjustment front left(ESA FL)
ACT1850	Lumbar support adjustment	Electric seat adjustment front left(ESA FL)
ACT1851	Test current consumption of component Seat ventilation.	Electric seat adjustment front left(ESA FL)
ACT1852	Switch illumination/Function illumination	Steering column module(SCM [MRM])
ACT1853	Denormalization and normalization of remote trunk closing	Trunk lid control(TLC)
ACT1854	PTS-Parktronic(Interior CAN bus)	Parktronic system(PTS)
ACT1855	M2/8 (Left defroster flap actuator)	Automatic air conditioning(AAC)
ACT1856	M2/9 (Right defroster flap actuator)	Automatic air conditioning(AAC)
ACT1857	M2/10 (Left footwell flap actuator)	Automatic air conditioning(AAC)
ACT1858	M2/11 (Right footwell flap actuator)	Automatic air conditioning(AAC)
ACT1859	M2/17 (Left side outlet flap actuator motor)	Automatic air conditioning(AAC)

ACT1860	M2/18 (Right side outlet flap actuator motor)	Automatic air conditioning(AAC)
ACT1861	M2/12 (Left center vent air flap actuator motor)	Automatic air conditioning(AAC)
ACT1862	M2/13 (Right center vent air flap actuator motor)	Automatic air conditioning(AAC)
ACT1863	M2/30 (Upper left blending air flap actuator motor)M2/31 (Lower left blending air flap actuator motor)	Automatic air conditioning(AAC)
ACT1864	M2/32 (Upper right blending air flap actuator motor)M2/33 (Lower right blending air flap actuator motor)	Automatic air conditioning(AAC)
ACT1865	M16/19 (Left rear center nozzle open/close actuator motor)	Automatic air conditioning(AAC)
ACT1866	M16/20 (Right rear center nozzle open/close actuator motor)	Automatic air conditioning(AAC)
ACT1867	Illumination for rotary potentiometers	Automatic air conditioning(AAC)
ACT1868	R22/3 (Heater booster)	Automatic air conditioning(AAC)
ACT1869	Heated windshield	Automatic air conditioning(AAC)
ACT1870	A31/1 (Rear heating system delivery unit)	Automatic air conditioning(AAC)
ACT1871	Operational check	Stationary heater with remote control(STH)
ACT1872	HeatingSwitch on ventilation in line with the request from the AC pushbutton control module.	Stationary heater with remote control(STH)
ACT1873	Switch on component A6r4 (Flame monitor glowpin unit).	Stationary heater with remote control(STH)
ACT1874	Switch on component A6r5 (Fuel preheating system).	Stationary heater with remote control(STH)
ACT1875	Switch on component A6m2 (combustion air blower).	Stationary heater with remote control(STH)
ACT1876	Switch on component Y16 (STH switchover valve).	Stationary heater with remote control(STH)
ACT1877	Switch on component Y23 (Stationary heater or heater booster fuel metering pump).	Stationary heater with remote control(STH)
ACT1878	Measurement of fuel delivery quantity	Stationary heater with remote control(STH)

ACT1879	Learning component A8/3 (STH radio remote control transmitter)	Stationary heater with remote control(STH)
ACT1880	Deletion of fault interlock or temperature cutoutFault interlock	Stationary heater with remote control(STH)
ACT1881	Deletion of crash interlock	Stationary heater with remote control(STH)
ACT1882	Actuation of curve illumination with vehicle at standstill	Xenon headlamp, left(XALWA L)
ACT1883	Cornering illumination, left	Xenon headlamp, left(XALWA L)
ACT1884	Cornering illumination, left and right	Xenon headlamp, left(XALWA L)
ACT1885	Move xenon bulb to removal position.	Xenon headlamp, left(XALWA L)
ACT1886	Left and right motorway spotlight	Xenon headlamp, left(XALWA L)
ACT1887	Light distribution of left headlamp	Xenon headlamp, left(XALWA L)
ACT1888	Light distribution of left and right headlamps	Xenon headlamp, left(XALWA L)
ACT1889	Left cornering light or static curve light	Xenon headlamp, left(XALWA L)
ACT1890	Left and right cornering light or static curve illumination	Xenon headlamp, left(XALWA L)
ACT1891	Cornering illumination, right	Xenon headlamp, right(XALWA R)
ACT1892	Light distribution of right headlamp	Xenon headlamp, right(XALWA R)
ACT1893	Right cornering light or static curve light	Xenon headlamp, right(XALWA R)
ACT1894	Colors	COMAND
ACT1895	Stripes	COMAND
ACT1896	TV	COMAND
ACT1897	Check of wake-up line to the MOST components	COMAND

ACT1898	Deleting customer-specific dataReset control unit 'COMAND'.	COMAND
ACT1899	Optical ring test	COMAND
ACT1900	SelftestCOMAND	COMAND
ACT1901	SelftestHandsfree system microphone	COMAND
ACT1902	Operational checksHard disk	COMAND
ACT1903	Operational checksMap reader	COMAND
ACT1904	Operational checksUSB connection	COMAND
ACT1905	Selftest of control module Tuner	Standard tuner(Tuner)
ACT1906	Microphone test for sound amplifier	Standard tuner(Tuner)
ACT1907	Tests of speakers	Standard tuner(Tuner)
ACT1908	Check of volume, balance and fader settings	Standard tuner(Tuner)
ACT1909	Guided test of speakers	Standard tuner(Tuner)
ACT1910	Selftest of control module Voice control	Voice control(VC)
ACT1911	Test of microphone group and voice volume	Voice control(VC)
ACT1912	SelftestCTEL	Mobile phone adapter with universal interface(CTEL)
ACT1913	Test of antenna amplifier	Mobile phone adapter with universal interface(CTEL)
ACT1914	Swivel of display	Central display(ZAN)
ACT1915	Y101 (Divert air switchover valve)	Motor electronics 2.7.2(ME 2.7.2)
ACT1916	M16/45ml (Right exhaust gas recirculation actuator motor)	Motor electronics for direct injection 17.7(MED 17.7)

ACT1917	M16/45m2 (Left exhaust gas recirculation actuator motor)	Motor electronics for direct injection 17.7(MED 17.7)
ACT1918	Y77/1 (Charge pressure positioner)	Motor electronics for direct injection 17.7(MED 17.7)
ACT1919	Y94/1 (Left quantity control valve)-Y94/2 (Right quantity control valve)	Motor electronics for direct injection 17.7(MED 17.7)
ACT1920	Level adjustment	AIRmatic
ACT1921	Move toward calibrated level (manually)	AIRmatic
ACT1922	Move toward calibrated level (automatic)	AIRmatic
ACT1923	Empty central reservoir	AIRmatic
ACT1924	Fill central reservoir	AIRmatic
ACT1925	E17/5 (Right rear door entry/exit lamp)	Door control module rear left(DCM RL)
ACT1926	E17/13 (Right rear door inside handle illumination)	Door control module rear left(DCM RL)
ACT1927	Cigarette lighter	Door control module rear left(DCM RL)
ACT1928	Left forward/back adjustment	Electric seat adjustment rear(ESA R)
ACT1929	Left Seat ventilation	Electric seat adjustment rear(ESA R)
ACT1930	Right forward/back adjustment	Electric seat adjustment rear(ESA R)
ACT1931	Right Seat ventilation	Electric seat adjustment rear(ESA R)
ACT1932	Engine test	Electric seat adjustment rear(ESA R)
ACT1933	Left seat cushion angle	Electric seat adjustment rear(ESA R)
ACT1934	Right seat cushion angle	Electric seat adjustment rear(ESA R)
ACT1935	Center inflatable cushion in lumbar region	Multicontour backrest rear(OSB R)

ACT1936	Function lighting in switch S104s1 (Dynamic lumbar support adjustment switch)	Multicontour backrest rear(OSB R)
ACT1937	Function lighting in switch S103s1 (Dynamic lumbar support adjustment switch)	Multicontour backrest rear(OSB R)
ACT1938	Top inflatable cushion in shoulder region	Multicontour backrest front left(OSB FL)
ACT1939	Bottom inflatable cushion in shoulder region	Multicontour backrest front left(OSB FL)
ACT1940	Function lighting in switch S109s1 (Dynamic lumbar support adjustment switch)	Multicontour backrest front left(OSB FL)
ACT1941	Function lighting in switch S108s1 (Dynamic lumbar support adjustment switch)	Multicontour backrest front right(OSB FR)
ACT1942	Function lighting in switch S108s1 (right front PULSE switch)	Right front dynamic seat(DS RF)
ACT1943	Pressure lighting in switch S108/1 (Right front DYNAMIC switch)	Right front dynamic seat(DS RF)
ACT1944	Perform overpressure run.	Pneumatic pump for dynamic seat(DSP)
ACT1945	Actuate pneumatic pump.	Pneumatic pump for dynamic seat(DSP)
ACT1946	Output Door contact	Special vehicle multifunction control module(MSS)
ACT1947	Output Terminal 58d	Special vehicle multifunction control module(MSS)
ACT1948	Output Distance	Special vehicle multifunction control module(MSS)
ACT1949	OutputTaximeter supply	Special vehicle multifunction control module(MSS)
ACT1950	Output Two-way radio connection	Special vehicle multifunction control module(MSS)
ACT1951	OutputRoof sign	Special vehicle multifunction control module(MSS)
ACT1952	OutputRoof sign inverted	Special vehicle multifunction control module(MSS)
ACT1953	Output Voltage supply of peripheral units1	Special vehicle multifunction control module(MSS)
ACT1954	Output Voltage supply of peripheral units2	Special vehicle multifunction control module(MSS)

ACT1955	Output Radio help call	Special vehicle multifunction control module(MSS)
ACT1956	Output KL15C/KL15R/KL15	Special vehicle multifunction control module(MSS)
ACT1957	Output Two-way radio set supply	Special vehicle multifunction control module(MSS)
ACT1958	Output Horn contact	Special vehicle multifunction control module(MSS)
ACT1959	Output Charging of 2nd battery	Special vehicle multifunction control module(MSS)
ACT1960	Output 2nd battery	Special vehicle multifunction control module(MSS)
ACT1961	Output Two-way radio handsfree facility	Special vehicle multifunction control module(MSS)
ACT1962	Output Reset Through	Special vehicle multifunction control module(MSS)
ACT1963	Output KL30(10A)	Special vehicle multifunction control module(MSS)
ACT1964	Output KL15(10A)	Special vehicle multifunction control module(MSS)
ACT1965	Output Communication	Special vehicle multifunction control module(MSS)
ACT1966	Output KL15(6A)	Special vehicle multifunction control module(MSS)
ACT1967	Front roller sun blindRear roller sun blind	Panoramic sliding roof(Interior CAN bus)(PSD)
ACT1968	ActuationPower window	Door control module rear left(DCM RL)
ACT1969	Childproof locks	Door control module rear left(DCM RL)
ACT1970	E17/5 (Left rear door entry/exit lamp)	Door control module rear left(DCM RL)
ACT1971	E17/20 (Left rear door warning light)	Door control module rear left(DCM RL)
ACT1972	LEDS55/1s10 (Front or rear seat adjustment selection switch)	Door control module rear left(DCM RL)
ACT1973	LEDsSeat heater	Door control module rear left(DCM RL)

ACT1974	LEDsSeat ventilation	Door control module rear left(DCM RL)
ACT1975	E17/6 (Right rear door entry/exit lamp)	Door control module rear right(DCM RR)
ACT1976	E17/22 (Right rear door warning light)	Door control module rear right(DCM RR)
ACT1977	Longitudinal adjustment and backrest adjustment	Electric seat adjustment rear(ESA R)
ACT1978	Left rear head restraint lowering	Electric seat adjustment rear(ESA R)
ACT1979	Left seat ventilation	Electric seat adjustment rear(ESA R)
ACT1980	Right rear head restraint lowering	Electric seat adjustment rear(ESA R)
ACT1981	Right seat ventilation	Electric seat adjustment rear(ESA R)
ACT1982	Left front reversible emergency tensioning retractor	Left front reversible emergency tensioning retractor(RevETR LF)
ACT1983	Right front reversible emergency tensioning retractor	Right front reversible emergency tensioning retractor(RevETR RF)
ACT1984	Selftest of control module	Rear audio video unit(AVE H)
ACT1985	Cabling test of component TV tuner	Rear audio video unit(AVE H)
ACT1986	Headphone test(Output of test tone)	Rear audio video unit(AVE H)
ACT1987	Check of AUX connections for video signals	Rear audio video unit(AVE H)
ACT1988	Selftest of control module ,	Rear audio video unit(AVE H)
ACT1989	Output of test tone(Headphone test)	Rear audio video unit(AVE H)
ACT1990	Output of audio and video signal from control unit 'COMAND' on rear monitors.	Rear audio video unit(AVE H)
ACT1991	Output of audio and video signal from control unit 'TV tuner' on rear monitors.	Rear audio video unit(AVE H)
ACT1992	Output of audio and video signal from CD/DVD drive on rear monitors.	Rear audio video unit(AVE H)

ACT1993	Output of audio and video signal from AUX jack on rear monitors.	Rear audio video unit(AVE H)
ACT1994	Window roller blind	Left center door control unit (interior Can bus)(TSG ML)
ACT1995	Seat lengthwise adjustment	Left center door control unit (interior Can bus)(TSG ML)
ACT1996	E6/7 (Left center side-marker lamp)	Left center door control unit (interior Can bus)(TSG ML)
ACT1997	E3e6 (Left side marker lamp)	Left center door control unit (interior Can bus)(TSG ML)
ACT1998	Door trim strip illumination	Left center door control unit (interior Can bus)(TSG ML)
ACT1999	E6/8 (Right center side-marker lamp)	Right center door control unit (interior Can bus)(TSG MR)
ACT2000	E4e6 (Right side marker lamp)	Right center door control unit (interior Can bus)(TSG MR)
ACT2001	Air cushion in seat cushion	Left front dynamic seat(DS LF)
ACT2002	Test of emergency tensioning retractor function	Left front reversible emergency tensioning retractor(RevETR LF)
ACT2003	Actuation of contactors	Battery management system control unit(SG BMS)
ACT2004	Actuation of component Y19/1 (High-voltage battery cooling system shutoff valve)	Battery management system control unit(SG BMS)
ACT2005	Measurement of insulation resistance with open contactors	Battery management system control unit(SG BMS)
ACT2006	Measurement of insulation resistance with closed contactors	Battery management system control unit(SG BMS)
ACT2007	Y123 (Left switchable engine mount)Y123/1 (Right switchable engine mount)Automatic evaluation of measurement results	Common Rail Diesel Injection3(CDI 3)
ACT2008	Check actuations of components Y123 (Left switchable engine mount) and Y123/1 (Right switchable engine mount).	Common Rail Diesel Injection3(CDI 3)
ACT2009	Y131 (Oil spray nozzle shutoff valve)	Common Rail Diesel Injection3(CDI 3)
ACT2010	Perform an actuation of components Y93 (Boost pressure control flap pressure transducer) and Y31/4 (Wastegate control pressure transducer).	Common Rail Diesel Injection3(CDI 3)
ACT2011	Right front turn signal light	Passenger-side signal acquisition and actuation module(Pass side SAM)

ACT2012	K40/4kP (Fanfare horns relay)	Passenger-side signal acquisition and actuation module(Pass side SAM)
ACT2013	E36 (Armrest storage compartment lighting)	Passenger-side signal acquisition and actuation module(Pass side SAM)
ACT2014	Left foglamp	Driver signal acquisition and actuation module(Dr side SAM)
ACT2015	Left front turn signal lamp	Driver signal acquisition and actuation module(Dr side SAM)
ACT2016	K40/2kB (Circuit 15 relay)	Driver signal acquisition and actuation module(Dr side SAM)
ACT2017	K40/2kC (Circuit 15R relay)	Driver signal acquisition and actuation module(Dr side SAM)
ACT2018	Wake-up cable to control module N51/2 (ABC control module)	Driver signal acquisition and actuation module(Dr side SAM)
ACT2019	Unlock trunk lid.	Pneumatic system equipment(PSE)
ACT2020	Open or close central locking.	Pneumatic system equipment(PSE)
ACT2021	Seat height	Electric seat adjustment front left(ESA FL)
ACT2022	Voltage supply of component B48(Front passenger seat occupied and child seat recognition)	Electric seat adjustment front right(ESA FR)
ACT2023	Center outlets,Diverter flap,Blending air flap:Left	Automatic air conditioning(AAC)
ACT2024	Center outlets,Diverter flap,Blending air flap:Right	Automatic air conditioning(AAC)
ACT2025	Side vent:Left	Automatic air conditioning(AAC)
ACT2026	Side vent:Right	Automatic air conditioning(AAC)
ACT2027	Heat exchanger shut-off motor	Automatic air conditioning(AAC)
ACT2028	Actuation of the mechanical instrument pointer to the maximum position	Instrument cluster(ICM)
ACT2029	Actuation of standing and parking lamps	Driver signal acquisition and actuation module(Dr side SAM)
ACT2030	Actuation of low beam	Driver signal acquisition and actuation module(Dr side SAM)

ACT2031	Actuation of high beam	Driver signal acquisition and actuation module(Dr side SAM)
ACT2032	Actuation of fog lamp	Driver signal acquisition and actuation module(Dr side SAM)
ACT2033	Actuation of turn signal lamp	Driver signal acquisition and actuation module(Dr side SAM)
ACT2034	Actuation of actuator for Xenon high beam	Driver signal acquisition and actuation module(Dr side SAM)
ACT2035	Actuation of side-marker lamp	Driver signal acquisition and actuation module(Dr side SAM)
ACT2036	N10/1kN (Circuit 15 relay)	Driver signal acquisition and actuation module(Dr side SAM)
ACT2037	Blower motor in control module box	Driver signal acquisition and actuation module(Dr side SAM)
ACT2038	Wake-up cable to control module A7/3n1 (SBC control unit)	Driver signal acquisition and actuation module(Dr side SAM)
ACT2039	Wake-up cable to control module N51 (AIRmatic with ADS control module)	Driver signal acquisition and actuation module(Dr side SAM)
ACT2040	A31/1(Rear heating system delivery unit)	Passenger-side signal acquisition and actuation module(Pass side SAM)
ACT2041	M13/5(Rear AC additional circulation pump(small))	Passenger-side signal acquisition and actuation module(Pass side SAM)
ACT2042	N10/9kN(Circuit 15 relay)Terminal 15	Passenger-side signal acquisition and actuation module(Pass side SAM)
ACT2043	N10/9kP(Circuit 15R relay)Circuit 15R	Passenger-side signal acquisition and actuation module(Pass side SAM)
ACT2044	Control unit SBC	Passenger-side signal acquisition and actuation module(Pass side SAM)
ACT2045	Relays Charge air cooler	Passenger-side signal acquisition and actuation module(Pass side SAM)
ACT2046	Stowage compartment illumination	Rear signal acquisition and actuation module1(Rear SAM 1)
ACT2047	Spotlight	Rear signal acquisition and actuation module1(Rear SAM 1)
ACT2048	A75/2 (Right side window electric curtain)	Rear signal acquisition and actuation module1(Rear SAM 1)
ACT2049	A75/3 (Partition wall electric curtain)	Rear signal acquisition and actuation module1(Rear SAM 1)

ACT2050	Relays Refrigerator box	Rear signal acquisition and actuation module2(Rear SAM 2)
ACT2051	Output Backup camera	Special vehicle multifunction control module(MSS)
ACT2052	Output KI.30	Special vehicle multifunction control module(MSS)
ACT2053	Output KI.58d	Special vehicle multifunction control module(MSS)
ACT2054	Output K1.15/KI.15R/KI.15C	Special vehicle multifunction control module(MSS)
ACT2055	Output Battery indicator	Special vehicle multifunction control module(MSS)
ACT2056	Output Head restrain, 3rd rear seat	Special vehicle multifunction control module(MSS)
ACT2057	Stationary heater	Front control panel(VBF)
ACT2058	Blower of interior temperature sensor	Rear control field(HBF)
ACT2059	Switch illumination.	Remote control(Rear control field)(BCG)
ACT2060	Blower of interior temperature sensor.	Remote control(Rear control field)(BCG)
ACT2061	SWITCH ON Left front reading lamp	Overhead control panel(OCP)
ACT2062	SWITCH ON Right front reading lamp	Overhead control panel(OCP)
ACT2063	Interior lights in rear compartment	Center roof node(CRN)
ACT2064	Rear left reading lamp	Center roof node(CRN)
ACT2065	Rear right reading lamp	Center roof node(CRN)
ACT2066	Seat Height	Electric seat adjustment front left(ESA FL)
ACT2067	Inclination	Electric seat adjustment front left(ESA FL)
ACT2068	Head restraints inclination	Left rear electrical seat adjustment(ESA LR)

ACT2069	Head restraints height adjustment	Left rear electrical seat adjustment(ESA LR)
ACT2070	Function lighting in switch S104s1 (Pulse switch)	Multicontour backrest front left(OSB FL)
ACT2071	E17/3 (Left front door entry/exit lamp	Door control module front left(DCM FL)
ACT2072	Door pocket illumination	Door control module front left(DCM FL)
ACT2073	LED Seat heater	Door control module front left(DCM FL)
ACT2074	LED Seat ventilation	Door control module front left(DCM FL)
ACT2075	Trunk lid remote release	Pneumatic system equipment(PSE)
ACT2076	Left center vent	Automatic air conditioning(AAC)
ACT2077	Right center vent	Automatic air conditioning(AAC)
ACT2078	M2/25 (Left front diffuse field flaps actuator motor)	Automatic air conditioning(AAC)
ACT2079	M2/26 (Right front diffuse field flap actuator motor)	Automatic air conditioning(AAC)
ACT2080	A32m2 (Activated charcoal filter flap adjustment motor)	Automatic air conditioning(AAC)
ACT2081	Test LCD display.	Automatic air conditioning(AAC)
ACT2082	M16/15 (Left footwell flap actuator motor)	Rear air conditioning(REAR AC)
ACT2083	M16/16 (Right footwell flap actuator motor)	Rear air conditioning(REAR AC)
ACT2084	M16/23 (Left rear center nozzle blending air flap actuator motor)	Rear air conditioning(REAR AC)
ACT2085	M16/24 (Right rear center nozzle blending air flap actuator motor)	Rear air conditioning(REAR AC)
ACT2086	M16/35 (Left rear diffuse field flap actuator motor)	Rear air conditioning(REAR AC)
ACT2087	M16/36 (Right rear diffuse field flap actuator motor)	Rear air conditioning(REAR AC)

ACT2088	M16/37 (Left B-pillar air flap open/close actuator motor)	Rear air conditioning(REAR AC)
ACT2089	M16/38 (Right B-pillar air flap open/close actuator motor)	Rear air conditioning(REAR AC)
ACT2090	M16/21 (Fresh air and recirculated air flap actuator motor)	Rear air conditioning(REAR AC)
ACT2091	Booster blowerLeft	Rear air conditioning(REAR AC)
ACT2092	Booster blowerRight	Rear air conditioning(REAR AC)
ACT2093	Windscreen heater	Rear air conditioning(REAR AC)
ACT2094	Video signal source test	Audio video controller(AVC)
ACT2095	Audio signal source test	Audio video controller(AVC)
ACT2096	Y62 (Fuel injectors cylinder1)	CNG compressed natural gas(ME SFI)
ACT2097	Y62 (Fuel injectors cylinder2)	CNG compressed natural gas(ME SFI)
ACT2098	Y62 (Fuel injectors cylinder3)	CNG compressed natural gas(ME SFI)
ACT2099	Y62 (Fuel injectors cylinder4)	CNG compressed natural gas(ME SFI)
ACT2100	Y107/1y1 (Gas cylinder 1 shutoff valve)-Y107/1y5 (Gas cylinder 5 shutoff valve)\nY107/2 (Gas safety shutoff valve)\nY107/3 (Low pressure gas shutoff	CNG compressed natural gas(ME SFI)
ACT2101	Y77/4 (Boost pressure control pressure transducer)	Motor electronics for direct injection 17.7(MED 17.7)

## Special Functions

No.	Functions Name	System Name
SP0001	AC compressor	AAC-Automatic air conditioning
SP0002	Breaking-in of refrigerant compressor	AAC-Automatic air conditioning
SP0003	Breaking-in procedure after replacement of refrigerant compressor	AAC-Automatic air conditioning
SP0004	Breaking-in of refrigerant compressor	AAC-Automatic air conditioning
SP0005	Check of the adjustment range of the actuator motors	AAC-Automatic air conditioning
SP0006	Normalization of actuator motors	AAC-Automatic air conditioning
SP0007	Normalizing of positioning motors	AAC-Automatic air conditioning
SP0008	Teach-in of actuator motors	AAC-Automatic air conditioning
SP0009	Teach-in of actuator motors after actuator motor replacement	AAC-Automatic air conditioning
SP0010	Steering variant	AB-Airbag
SP0011	Calibration of plunger travel	ABC-ABC active body control
SP0012	Initial startup with automatic takeover of settings of previous control unit	ABC-ABC active body control
SP0013	Raise and lower the suspension struts at high speed	ABC-ABC active body control
SP0014	Raise and lower the suspension struts at high speed	ABC-ABC active body control
SP0015	Raise and lower the suspension struts at low speed	ABC-ABC active body control
SP0016	Raise and lower the suspension struts at medium speed	ABC-ABC active body control
SP0017	Raise and lower the suspension struts at medium speed	ABC-ABC active body control
SP0018	Reset of calibrations	ABC-ABC active body control

SP0019	Driving test	ABR-Adaptive Brake
SP0020	Erase zero point offset error of component N49 (Steering angle sensor)	ABR-Adaptive Brake
SP0021	PML speed-sensitive power steering	ABR-Adaptive Brake
SP0022	Tyre pressure loss alarm (activated)	ABR-Adaptive Brake
SP0023	Reset of compressor operating time	ADS-Adaptive damping system
SP0024	Initial startup with automatic takeover of settings of previous control unit	AIRmatic
SP0025	Level calibration	AIRmatic
SP0026	Breaking-in procedure after replacement of refrigerant compressor	C AAC-Convenience automatic air conditioning/AAC-Automatic air conditioning/HEAT-Automatic heater
SP0027	Normalizing of positioning motors	C AAC-Convenience automatic air conditioning/AAC-Automatic air conditioning/HEAT-Automatic heater
SP0028	Teach-in of actuator motors after actuator motor replacement	C AAC-Convenience automatic air conditioning/AAC-Automatic air conditioning/HEAT-Automatic heater
SP0029	Activate fuel pump	CDI 3-Common Rail Diesel Injection3
SP0030	Adjustment of injector injection quantities	CDI 3-Common Rail Diesel Injection3
SP0031	B79/2 (Transmission neutral position sensor)	CDI 3-Common Rail Diesel Injection3
SP0032	Injector injection quantity adjustment	CDI 3-Common Rail Diesel Injection3
SP0033	Oxidation catalytic converter	CDI 3-Common Rail Diesel Injection3
SP0034	Regeneration of diesel particulate filter	CDI 3-Common Rail Diesel Injection3
SP0035	Replacement component Diesel particulate filter	CDI 3-Common Rail Diesel Injection3
SP0036	Reset of lambda values	CDI 3-Common Rail Diesel Injection3
SP0037	Reset quantity mean value adaptation data	CDI 3-Common Rail Diesel Injection3
SP0038	Resetting of contamination level of air filter	CDI 3-Common Rail Diesel Injection3

SP0039	Resetting of learned values of component 'B6/1 (Camshaft Hall sensor)'	CDI 3-Common Rail Diesel Injection3
SP0040	Teach in of throttle valve stop	CDI 3-Common Rail Diesel Injection3
SP0041	Teach-in of diesel particulate filter after replacement of control unit 'N3/9 (CDI control unit)'	CDI 3-Common Rail Diesel Injection3
SP0042	Teach-in of intake port shutoff	CDI 3-Common Rail Diesel Injection3
SP0043	Teach-in process after replacement of component 'AdBlue metering valve'	CDI 3-Common Rail Diesel Injection3
SP0044	Teach-in process after replacement of component 'B16/15 (Temperature sensor upstream of SCR catalytic converter)'	CDI 3-Common Rail Diesel Injection3
SP0045	Teach-in process after replacement of component 'Diesel particulate filter'	CDI 3-Common Rail Diesel Injection3
SP0046	Teach-in process after replacement of component 'SCR catalytic converter'	CDI 3-Common Rail Diesel Injection3
SP0047	Teach-in process after replacing NOx sensor	CDI 3-Common Rail Diesel Injection3
SP0048	Adjustment of injector injection quantities	CDI 4-Common Rail Diesel Injection
SP0049	Diesel particulate filter Configuration	CDI 4-Common Rail Diesel Injection
SP0050	Diesel particulate filter Purge control	CDI 4-Common Rail Diesel Injection
SP0051	Rapid teach-in of zero quantity calibration values	CDI 4-Common Rail Diesel Injection
SP0052	Regeneration of the diesel particulate filter while driving	CDI 4-Common Rail Diesel Injection
SP0053	Replacement component Diesel particulate filter	CDI 4-Common Rail Diesel Injection
SP0054	Reset quantity mean value adaptation data	CDI 4-Common Rail Diesel Injection
SP0055	Reset values for HFM drift compensation	CDI 4-Common Rail Diesel Injection
SP0056	Resetting air filter learned values after air filter replacement	CDI 4-Common Rail Diesel Injection
SP0057	Teach in of throttle valve stop	CDI 4-Common Rail Diesel Injection
SP0058	Activate fuel pump	CDI 6-Common Rail Diesel Injection

SP0059	Adjustment of injector injection quantities	CDI 6-Common Rail Diesel Injection
SP0060	B28/8(Differential pressure sensor (DPF))	CDI 6-Common Rail Diesel Injection
SP0061	G3/2(Oxygen sensor upstream of catalytic converter)	CDI 6-Common Rail Diesel Injection
SP0062	Quick teach-in of values of zero quantity calibration	CDI 6-Common Rail Diesel Injection
SP0063	Regeneration of diesel particulate filter	CDI 6-Common Rail Diesel Injection
SP0064	Replacement of component 'Diesel particulate filter'	CDI 6-Common Rail Diesel Injection
SP0065	Reset values of HFM drift compensation	CDI 6-Common Rail Diesel Injection
SP0066	Reset values of quantity mean value adaptation	CDI 6-Common Rail Diesel Injection
SP0067	Resetting of contamination level of air filter	CDI 6-Common Rail Diesel Injection
SP0068	Teach in of throttle valve stop	CDI 6-Common Rail Diesel Injection
SP0069	Teach in used diesel particulate filter	CDI 6-Common Rail Diesel Injection
SP0070	Y74(Pressure control valve)	CDI 6-Common Rail Diesel Injection
SP0071	Activate fuel pump	CDI 60LS-Common Rail Diesel Injection
SP0072	B16/15 (Temperature sensor upstream of SCR catalytic converter)	CDI 60LS-Common Rail Diesel Injection
SP0073	B28/8 (DPF differential pressure sensor)	CDI 60LS-Common Rail Diesel Injection
SP0074	G3/2 (Oxygen sensor upstream of catalytic converter)	CDI 60LS-Common Rail Diesel Injection
SP0075	Injector injection quantity adjustment	CDI 60LS-Common Rail Diesel Injection
SP0076	Oxidation catalytic converter	CDI 60LS-Common Rail Diesel Injection
SP0077	Quick teach-in of values of zero quantity calibration	CDI 60LS-Common Rail Diesel Injection
SP0078	Regeneration of the diesel particulate filter while driving	CDI 60LS-Common Rail Diesel Injection

SP0079	Replacing component 'Diesel particulate filter'	CDI 60LS-Common Rail Diesel Injection
SP0080	Reset values of HFM drift compensation	CDI 60LS-Common Rail Diesel Injection
SP0081	Reset values of quantity mean value adaptation	CDI 60LS-Common Rail Diesel Injection
SP0082	Resetting of contamination level of air filter	CDI 60LS-Common Rail Diesel Injection
SP0083	SCR catalytic converter	CDI 60LS-Common Rail Diesel Injection
SP0084	Teach in of throttle valve stop	CDI 60LS-Common Rail Diesel Injection
SP0085	Teach in used diesel particulate filter	CDI 60LS-Common Rail Diesel Injection
SP0086	Teach-in process after replacing Nox sensor	CDI 60LS-Common Rail Diesel Injection
SP0087	Y129 (AdBlue metering valve)	CDI 60LS-Common Rail Diesel Injection
SP0088	Y74 (Pressure regulating valve)	CDI 60LS-Common Rail Diesel Injection
SP0089	Activate fuel pump	CDI-Common Rail Diesel Injection
SP0090	Adjustment of injector injection quantities	CDI-Common Rail Diesel Injection
SP0091	Reset quantity mean value adaptation data	CDI-Common Rail Diesel Injection
SP0092	Reset values for HFM drift compensation	CDI-Common Rail Diesel Injection
SP0093	Resetting air filter learned values after air filter replacement	CDI-Common Rail Diesel Injection
SP0094	Teach-in of diesel particulate filter after replacement of engine control unit without transfer of values	CDI-Common Rail Diesel Injection
SP0095	Teach-in process after replacement of component (B28/8(Differential pressure sensor(DPF)	CDI-Common Rail Diesel Injection
SP0096	Teach-in process after replacement of component G3/1(O2 sensor downstream TWC)	CDI-Common Rail Diesel Injection
SP0097	Teach-in process after replacement of component Y100/2(Boost pressure regulator)	CDI-Common Rail Diesel Injection
SP0098	Teach-in process after replacement of component Y74(Pressure control valve)	CDI-Common Rail Diesel Injection

SP0099	Teach-in process after replacement of component diesel particulate filter	CDI-Common Rail Diesel Injection
SP0100	Teaching in the diesel particulate filter after replacing the engine control unit	CDI-Common Rail Diesel Injection
SP0101	Activate fuel pump	CDI-Motor electronics 'CR42' for combustion engine 'OM607'
SP0102	B16/15 (Temperature sensor upstream of SCR catalytic converter)	CDI-Motor electronics 'CR42' for combustion engine 'OM607'
SP0103	B79/2 (Transmission neutral position sensor)	CDI-Motor electronics 'CR42' for combustion engine 'OM607'
SP0104	Diesel particulate filter	CDI-Motor electronics 'CR42' for combustion engine 'OM607'
SP0105	G3/2(Oxygen sensor upstream of catalytic converter)	CDI-Motor electronics 'CR42' for combustion engine 'OM607'
SP0106	Injector injection quantity adjustment	CDI-Motor electronics 'CR42' for combustion engine 'OM607'
SP0107	Oxidation catalytic converter	CDI-Motor electronics 'CR42' for combustion engine 'OM607'
SP0108	Quick teach-in of values of zero quantity calibration	CDI-Motor electronics 'CR42' for combustion engine 'OM607'
SP0109	Reset values of HFM drift compensation	CDI-Motor electronics 'CR42' for combustion engine 'OM607'
SP0110	Reset values of quantity mean value adaptation	CDI-Motor electronics 'CR42' for combustion engine 'OM607'
SP0111	Resetting of contamination level of air filter	CDI-Motor electronics 'CR42' for combustion engine 'OM607'
SP0112	Teach in of throttle valve stop	CDI-Motor electronics 'CR42' for combustion engine 'OM607'
SP0113	Y129 (AdBlue metering valve)	CDI-Motor electronics 'CR42' for combustion engine 'OM607'
SP0114	Y74(Pressure control valve)	CDI-Motor electronics 'CR42' for combustion engine 'OM607'
SP0115	Y94 (Quantity control valve)	CDI-Motor electronics 'CR42' for combustion engine 'OM607'
SP0116	Activate fuel pump	CDI-Motor electronics 'CRR1' for combustion engine 'OM607'
SP0117	Injector injection quantity adjustment	CDI-Motor electronics 'CRR1' for combustion engine 'OM607'
SP0118	Regeneration of the diesel particulate filter while driving	CDI-Motor electronics 'CRR1' for combustion engine 'OM607'

SP0119	Resetting of learned values of component 'B4/6 (Rail pressure sensor)'	CDI-Motor electronics 'CRR1' for combustion engine 'OM607'
SP0120	Resetting of learned values of component 'Diesel particulate filter'	CDI-Motor electronics 'CRR1' for combustion engine 'OM607'
SP0121	Resetting of learned values of component 'Fuel system high pressure pump'	CDI-Motor electronics 'CRR1' for combustion engine 'OM607'
SP0122	Resetting of learned values of component 'G3/2 (Oxygen sensor upstream of catalytic converter)'	CDI-Motor electronics 'CRR1' for combustion engine 'OM607'
SP0123	Resetting of learned values of component 'Turbocharger'	CDI-Motor electronics 'CRR1' for combustion engine 'OM607'
SP0124	Status of teach-in processes	CDI-Motor electronics 'CRR1' for combustion engine 'OM607'
SP0125	Teach in component 'M16/57 (Exhaust flap controller)'	CDI-Motor electronics 'CRR1' for combustion engine 'OM607'
SP0126	Teach in component 'M16/6 (Throttle valve actuator)'	CDI-Motor electronics 'CRR1' for combustion engine 'OM607'
SP0127	Teach in component 'Y27/7 (Exhaust gas recirculation actuator, low pressure)'	CDI-Motor electronics 'CRR1' for combustion engine 'OM607'
SP0128	Teach in component 'Y27/8 (Exhaust gas recirculation actuator, high pressure)'	CDI-Motor electronics 'CRR1' for combustion engine 'OM607'
SP0129	Activate fuel pump	CDID-Common Rail Diesel Injection
SP0130	Injector injection quantity adjustment	CDID-Common Rail Diesel Injection
SP0131	Learning component 'Y94 (Quantity control valve)'	CDID-Common Rail Diesel Injection
SP0132	Regeneration of diesel particulate filter	CDID-Common Rail Diesel Injection
SP0133	Replacement component Diesel particulate filter	CDID-Common Rail Diesel Injection
SP0134	Reset of lambda values	CDID-Common Rail Diesel Injection
SP0135	Reset values of quantity mean value adaptation	CDID-Common Rail Diesel Injection
SP0136	Resetting of contamination level of air filter	CDID-Common Rail Diesel Injection
SP0137	Teach in of throttle valve stop	CDID-Common Rail Diesel Injection
SP0138	Teach in used diesel particulate filter	CDID-Common Rail Diesel Injection

SP0139	Teach-in of intake port shutoff	CDID-Common Rail Diesel Injection
SP0140	Initial startup	DTR-Distronic
SP0141	Calibration of control unit 'N128 (Electric parking brake control unit)'	EFB-Electronic parking brake
SP0142	Replacing brake pads	EFB-Electronic parking brake
SP0143	Reset of compressor operating time	ELC-Electronic level control
SP0144	Calibration of the torque sensor	ES-Electrical power steering
SP0145	Erase zero point offset error of component N49 (Steering angle sensor)	ESP-Electronic stability program
SP0146	Erase zero point offset error of component N49 (Steering angle sensor).	ESP-Electronic stability program
SP0147	Reset offset value of signal 'Steering angle'	ESP-Electronic stability program
SP0148	Tyre pressure loss alarm (activated)	ESP-Electronic stability program
SP0149	Adaptation values of shift 1-2	ETC-Electronic transmission control
SP0150	Adaptation values of shift 2-1	ETC-Electronic transmission control
SP0151	Adaptation values of shift 2-3	ETC-Electronic transmission control
SP0152	Adaptation values of shift 3-2	ETC-Electronic transmission control
SP0153	Adaptation values of shift 3-4	ETC-Electronic transmission control
SP0154	Adaptation values of shift 4-3	ETC-Electronic transmission control
SP0155	Adaptation values of shift 4-5	ETC-Electronic transmission control
SP0156	Adaptation values of shift 5-4	ETC-Electronic transmission control
SP0157	Adaptation values of shift 5-6	ETC-Electronic transmission control
SP0158	Adaptation values of shift 6-5	ETC-Electronic transmission control

SP0159	Adaptation values of shift 6-7	ETC-Electronic transmission control
SP0160	Adaptation values of shift 7-6	ETC-Electronic transmission control
SP0161	Display all adaptation data	ETC-Electronic transmission control
SP0162	Resetting of adaptation data	ETC-Electronic transmission control
SP0163	Resetting of adaptation data - Hydraulic brake	ETC-Electronic transmission control
SP0164	Resetting of adaptation data(Torque converter lockup clutch)	ETC-Electronic transmission control
SP0165	Reverse gear	ETC-Electronic transmission control
SP0166	Switch off solenoid valve for torque converter lockup clutch	ETC-Electronic transmission control
SP0167	Switch off the incline recognition for dynamometer mode	ETC-Electronic transmission control
SP0168	Torque converter lockup clutch	ETC-Electronic transmission control
SP0169	Y3/8s1(Selection range sensor(VGS))	ETC-Electronic transmission control
SP0170	Activate control module N26/5 (Electric steering lock control module)	EZS-Electronic ignition switch
SP0171	Switch off solenoid valve for torque converter lockup clutch	FCVT-Continuously variable automatic transmission
SP0172	N121 (Trunk lid control control unit)	HKS-Tailgate control (N121/1)
SP0173	N121/1 (Liftgate control control unit)	HKS-Tailgate control (N121/1)
SP0174	Curve illumination	HRA-Automatic headlamp range adjustment and headlamp control
SP0175	Headlamp range adjustment	HRA-Automatic headlamp range adjustment and headlamp control
SP0176	Maintenance light reset	IC-Instrument cluster
SP0177	Confirmation of general maintenance	ICM-Instrument cluster with maintenance interval display
SP0178	Maintenance light reset	ICM-Instrument cluster with maintenance interval display

SP0179	Reset general maintenance	ICM-Instrument cluster with maintenance interval display
SP0180	Activate fuel pump	ME 9.7-Motor electronics 9.7
SP0181	Correction programming of fuel quantity	ME 9.7-Motor electronics 9.7
SP0182	Correction programming of ignition	ME 9.7-Motor electronics 9.7
SP0183	Correction programming of specified idle speed in selector lever position P or N	ME 9.7-Motor electronics 9.7
SP0184	Correction programming of specified idle speed with gear range engaged	ME 9.7-Motor electronics 9.7
SP0185	Reset of cold start adaptation values	ME 9.7-Motor electronics 9.7
SP0186	Teach in of throttle valve stop	ME 9.7-Motor electronics 9.7
SP0187	Activate fuel pump	ME SFI-Motor electronics
SP0188	Correction programming of fuel quantity	ME SFI-Motor electronics
SP0189	Correction programming of ignition	ME SFI-Motor electronics
SP0190	Correction programming of specified idle speed in selector lever position P or N	ME SFI-Motor electronics
SP0191	Correction programming of specified idle speed with gear range engaged	ME SFI-Motor electronics
SP0192	Correction programming of the electric suction fan for engine or air conditioning	ME SFI-Motor electronics
SP0193	Resetting of mixture adaptation	ME SFI-Motor electronics
SP0194	Teach in component B79/2 (Transmission neutral position sensor)	ME SFI-Motor electronics
SP0195	Teach in of throttle valve stop	ME SFI-Motor electronics
SP0196	Activate fuel pump	ME-Motor electronics 'MED177AMG' for combustion engine 'M152'
SP0197	Correction programming of fuel quantity	ME-Motor electronics 'MED177AMG' for combustion engine 'M152'
SP0198	Correction programming of specified idle speed in selector lever position P or N	ME-Motor electronics 'MED177AMG' for combustion engine 'M152'

SP0199	Correction programming of specified idle speed with gear range engaged	ME-Motor electronics 'MED177AMG' for combustion engine 'M152'
SP0200	Injector injection quantity adjustment	ME-Motor electronics 'MED177AMG' for combustion engine 'M152'
SP0201	Resetting of adaptation values	ME-Motor electronics 'MED177AMG' for combustion engine 'M152'
SP0202	Teach in of throttle valve stop	ME-Motor electronics 'MED177AMG' for combustion engine 'M152'
SP0203	Activate fuel pump	ME-Motor electronics 'MED40' for combustion engine 'M270'
SP0204	Injector injection quantity adjustment	ME-Motor electronics 'MED40' for combustion engine 'M270'
SP0205	Resetting of adaptation values	ME-Motor electronics 'MED40' for combustion engine 'M270'
SP0206	Teach in of throttle valve stop	ME-Motor electronics 'MED40' for combustion engine 'M270'
SP0207	Teach-in of positions for camshafts	ME-Motor electronics 'MED40' for combustion engine 'M270'
SP0208	Activate fuel pump	ME-Motor electronics 'MED40AMG' for combustion engine 'M133'
SP0209	Correction programming of fuel quantity	ME-Motor electronics 'MED40AMG' for combustion engine 'M133'
SP0210	Correction programming of ignition	ME-Motor electronics 'MED40AMG' for combustion engine 'M133'
SP0211	Correction programming of specified idle speed in selector lever position P or N	ME-Motor electronics 'MED40AMG' for combustion engine 'M133'
SP0212	Correction programming of specified idle speed with gear range engaged	ME-Motor electronics 'MED40AMG' for combustion engine 'M133'
SP0213	Injector injection quantity adjustment	ME-Motor electronics 'MED40AMG' for combustion engine 'M133'
SP0214	Resetting of adaptation values	ME-Motor electronics 'MED40AMG' for combustion engine 'M133'
SP0215	Teach in of throttle valve stop	ME-Motor electronics 'MED40AMG' for combustion engine 'M133'
SP0216	Teach-in of positions for camshafts	ME-Motor electronics 'MED40AMG' for combustion engine 'M133'
SP0217	B79/3 (Manual transmission main shifter shaft position sensor)	ME-Motor electronics 'MED40CNG' for combustion engine 'M274'
SP0218	Correction programming of fuel quantity	ME-Motor electronics 'MED40CNG' for combustion engine 'M274'

SP0219	Correction programming of ignition	ME-Motor electronics 'MED40CNG' for combustion engine 'M274'
SP0220	Correction programming of specified idle speed	ME-Motor electronics 'MED40CNG' for combustion engine 'M274'
SP0221	Injector injection quantity adjustment	ME-Motor electronics 'MED40CNG' for combustion engine 'M274'
SP0222	Resetting of adaptation values	ME-Motor electronics 'MED40CNG' for combustion engine 'M274'
SP0223	Resetting reading of frequency counter for ethanol teach-in processes	ME-Motor electronics 'MED40CNG' for combustion engine 'M274'
SP0224	Teach in of throttle valve stop	ME-Motor electronics 'MED40CNG' for combustion engine 'M274'
SP0225	Teach-in of positions for camshafts	ME-Motor electronics 'MED40CNG' for combustion engine 'M274'
SP0226	Teaching in the ethanol proportion in the fuel	ME-Motor electronics 'MED40CNG' for combustion engine 'M274'
SP0227	Activate fuel pump	MED 17.7-Motor electronics for direct injection 17.7
SP0228	Correction programming of fuel quantity	MED 17.7-Motor electronics for direct injection 17.7
SP0229	Correction programming of specified idle speed in selector lever position P or N	MED 17.7-Motor electronics for direct injection 17.7
SP0230	Correction programming of specified idle speed with gear range engaged	MED 17.7-Motor electronics for direct injection 17.7
SP0231	Injector injection quantity adjustment	MED 17.7-Motor electronics for direct injection 17.7
SP0232	Resetting of adaptation values	MED 17.7-Motor electronics for direct injection 17.7
SP0233	Teach in of throttle valve stop	MED 17.7-Motor electronics for direct injection 17.7
SP0234	Teach-in process after replacement of the combustion engine	MED 17.7-Motor electronics for direct injection 17.7
SP0235	Activate fuel pump	MED 9.7-Motor electronics for direct injection 9.7
SP0236	Correction programming of fuel quantity	MED 9.7-Motor electronics for direct injection 9.7
SP0237	Correction programming of ignition	MED 9.7-Motor electronics for direct injection 9.7
SP0238	Correction programming of specified idle speed in selector lever position P or N	MED 9.7-Motor electronics for direct injection 9.7

SP0239	Correction programming of specified idle speed with gear range engaged	MED 9.7-Motor electronics for direct injection 9.7
SP0240	Resetting of adaptation data	MED 9.7-Motor electronics for direct injection 9.7
SP0241	Teach in of throttle valve stop	MED 9.7-Motor electronics for direct injection 9.7
SP0242	Teach-in process after replacement of the combustion engine	MED 9.7-Motor electronics for direct injection 9.7
SP0243	Activate system 'SBC'	SBC-Sensotronic Brake Control
SP0244	Response threshold of speed sensors	SBC-Sensotronic Brake Control
SP0245	System 'SBC' deactivated	SBC-Sensotronic Brake Control
SP0246	Initial startup	SCM [MRM]-Steering column module
SP0247	Resetting of operating hours counters of component 'E1(Left front lamp unit)'	SG SW L-Left headlamp
SP0248	Zero position adjustment	SG SW L-Left headlamp
SP0249	Resetting of operating hours counters of component 'E2(Right front lamp unit)'	SG SW R-Right headlamp
SP0250	Resetting of operating hours counters of component 'Xenon headlamp, left'	SG SW-Control unit 'Headlamp'
SP0251	Resetting of operating hours counters of component 'Xenon headlamp, right'	SG SW-Control unit 'Headlamp'
SP0252	Zero position adjustment	SG SW-Control unit 'Headlamp'
SP0253	Initial startup with automatic takeover of settings of previous control unit	Suspension
SP0254	Initial startup with manual settings input for new control unit/Level calibration	Suspension
SP0255	Reset compressor operating time	Suspension
SP0256	Reset of operating hours counter	XALWA L-Xenon headlamp, left
SP0257	EP:Reset of operating hours counter	XALWA R-Xenon headlamp, right
SP0258	Reset of operating hours counter	XALWA R-Xenon headlamp, right

SP0300	Road test	ABR-Adaptive Brake
SP0301	Tire pressure loss warnerActivating	ABR-Adaptive Brake
SP0302	Erase zero point offset error of component N49 (Steering angle sensor).	ABR-Adaptive Brake
SP0303	Calibration of control unit N47-5 (ESP control unit)	ABR-Adaptive Brake
SP0304	Tourist mode-Adaptation of headlamps from left-hand traffic system to right-hand traffic system or vice versa.	XALWA L-Xenon headlamp, left
SP0305	Resetting operating hours counter	XALWA L-Xenon headlamp, left
SP0306	Tourist mode-Adaptation of headlamps from left-hand traffic system to right-hand traffic system or vice versa.	XALWA L-Xenon headlamp, left
SP0307	Resetting operating hours counter	XALWA L-Xenon headlamp, left
SP0308	Tourist mode-Adaptation of headlamps from left-hand traffic system to right-hand traffic system or vice versa.	XALWA R-Xenon headlamp, right
SP0309	Resetting operating hours counter	XALWA R-Xenon headlamp, right
SP0310	Tourist mode-Adaptation of headlamps from left-hand traffic system to right-hand traffic system or vice versa.	XALWA R-Xenon headlamp, right
SP0311	Resetting operating hours counter	XALWA R-Xenon headlamp, right
SP0312	Adjustment of injector injection quantities	CDI 60LS-Common Rail Diesel Injection
SP0313	Regeneration of diesel particulate filter when driving	CDI 60LS-Common Rail Diesel Injection
SP0314	Teaching in the diesel particulate filter after replacing the engine control unit	CDI 60LS-Common Rail Diesel Injection
SP0315	Teach-in process after replacement of component Diesel particulate filter	CDI 60LS-Common Rail Diesel Injection
SP0316	Teach-in process after replacement of component SCR-Catalytic converter	CDI 60LS-Common Rail Diesel Injection
SP0317	Learning of the throttle valve stop	CDI 60LS-Common Rail Diesel Injection
SP0318	Teach-in process after replacement of component Diesel oxidation catalytic converter	CDI 60LS-Common Rail Diesel Injection
SP0319	Teach-in process after replacement of component B16/15 (Temperature sensor upstream of SCR catalytic converter)	CDI 60LS-Common Rail Diesel Injection

SP0320	Teach-in process after replacement of component B28/8 (Pressure differential sensor (DPF))	CDI 60LS-Common Rail Diesel Injection
SP0321	Teach-in process after replacement of component G3/2 (O2 sensor upstream of KAT)	CDI 60LS-Common Rail Diesel Injection
SP0322	Teach-in process after replacement of component NOx sensor	CDI 60LS-Common Rail Diesel Injection
SP0323	Teach-in process after replacement of component Y74 (Pressure control valve)	CDI 60LS-Common Rail Diesel Injection
SP0324	Teach-in process after replacement of component Y129 (AdBlue? metering valve)	CDI 60LS-Common Rail Diesel Injection
SP0325	Activate fuel pump.	CDI 60LS-Common Rail Diesel Injection
SP0326	Reset quantity mean value adaptation data.	CDI 60LS-Common Rail Diesel Injection
SP0327	Rapid teach-in of zero quantity calibration values	CDI 60LS-Common Rail Diesel Injection
SP0328	Reset values for HFM drift compensation.	CDI 60LS-Common Rail Diesel Injection
SP0329	Resetting air filter learned values after air filter replacement	CDI 60LS-Common Rail Diesel Injection
SP0330	Cancellation of limitation of engine starts(USA)/Cancellation of limitation of remaining distance	CDI 60LS-Common Rail Diesel Injection
SP0331	Reset of fault message 'Fault in AdBlue system' in instrument cluster	CDI 60LS-Common Rail Diesel Injection
SP0332	Injector injection quantity adjustment (manual input)	CDI 3-Common Rail Diesel Injection3
SP0333	Injector injection quantity adjustment (input via data scanner)	CDI 3-Common Rail Diesel Injection3
SP0334	Regeneration of diesel particulate filter	CDI 3-Common Rail Diesel Injection3
SP0335	Regeneration of diesel particulate filter when driving	CDI 3-Common Rail Diesel Injection3
SP0336	Activate fuel pump.	CDI 3-Common Rail Diesel Injection3
SP0337	Resetting air filter learned values after air filter replacement	CDI 3-Common Rail Diesel Injection3
SP0338	Teach-in process after replacement of component Diesel particulate filter	CDI 3-Common Rail Diesel Injection3
SP0339	Teaching in the diesel particulate filter after replacing the engine control unit	CDI 3-Common Rail Diesel Injection3

SP0340	Teach in component M16/6 (Throttle valve actuator).	CDI 3-Common Rail Diesel Injection3
SP0341	Teach in component M55 (Inlet port shutoff motor).	CDI 3-Common Rail Diesel Injection3
SP0342	Teach in component Y77/1 (Charge pressure positioner).	CDI 3-Common Rail Diesel Injection3
SP0343	Resetting the lambda values	CDI 3-Common Rail Diesel Injection3
SP0344	Detach the transport protection of control module ISM, personalize or activate the control module.	ISM-Shift module
SP0345	Disable key or key track.	EZS-Electronic ignition switch
SP0346	Disable key or key track with the workshop key.	EZS-Electronic ignition switch
SP0347	Once again authorize key or key track.	EZS-Electronic ignition switch
SP0348	Program replacement keys.	EZS-Electronic ignition switch
SP0349	Activate control module N73 (EIS [EZS] control unit).	EZS-Electronic ignition switch
SP0350	Test procedure for voltage comparison	SG EM-Electric motor control unit
SP0351	Test procedure for rpm comparison	SG EM-Electric motor control unit
SP0352	Normalizing of positioning motors	AAC-Automatic air conditioning
SP0353	Check of adjustment range of positioning motors	AAC-Automatic air conditioning
SP0354	Teach-in of actuator motors after actuator motor replacement	AAC-Automatic air conditioning
SP0355	Breaking-in procedure after replacement of refrigerant compressor	AAC-Automatic air conditioning
SP0356	Teach-in of rotary potentiometers for the air outlets	AAC-Automatic air conditioning
SP0357	Level calibration	AIRmatic
SP0358	Activate fuel pump.	ME SF 17.7-Motor electronics 17.7
SP0359	Learning of the throttle valve stop	ME SF 17.7-Motor electronics 17.7

SP0360	Teach in of drive authorization system	ME SF 17.7-Motor electronics 17.7
SP0361	Teach-in process after engine replacement	ME SF 17.7-Motor electronics 17.7
SP0362	Resetting of adaptation data	ME SF 17.7-Motor electronics 17.7
SP0363	Resetting the cold-start adaptation values	ME SF 17.7-Motor electronics 17.7
SP0364	Sensor rotor adaptation	ME SF 17.7-Motor electronics 17.7
SP0365	Activate fuel pump.	ME 2.7.2-Motor electronics 2.7.2
SP0366	Teach in of drive authorization system	ME 2.7.2-Motor electronics 2.7.2
SP0367	Resetting of mixture adaptation	ME 2.7.2-Motor electronics 2.7.2
SP0368	Reset lambda adaptation	ME 2.7.2-Motor electronics 2.7.2
SP0369	Default initialization	ME 2.7.2-Motor electronics 2.7.2
SP0370	Activate fuel pump.	ME 2.7.2-Motor electronics 2.7.2
SP0371	Teach in of drive authorization system	ME 2.7.2-Motor electronics 2.7.2
SP0372	Resetting of mixture adaptation	ME 2.7.2-Motor electronics 2.7.2
SP0373	Reset lambda adaptation	ME 2.7.2-Motor electronics 2.7.2
SP0374	Default initialization	ME 2.7.2-Motor electronics 2.7.2
SP0375	Activate fuel pump.	ME 9.7-Motor electronics 9.7
SP0376	Learning of the throttle valve stop	ME 9.7-Motor electronics 9.7
SP0377	Teach in of drive authorization system	ME 9.7-Motor electronics 9.7
SP0378	Teach-in process after engine replacement	ME 9.7-Motor electronics 9.7
SP0379	Resetting of adaptation data	ME 9.7-Motor electronics 9.7

SP0380	Resetting the cold-start adaptation values	ME 9.7-Motor electronics 9.7
SP0381	Sensor rotor adaptation	ME 9.7-Motor electronics 9.7
SP0382	Activate fuel pump.	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)
SP0383	Learning of the throttle valve stop	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)
SP0384	Teach in of drive authorization system	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)
SP0385	Teach-in of camshaft positions	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)
SP0386	Resetting of adaptation data	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)
SP0387	Resetting the cold-start adaptation values	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)
SP0388	Sensor rotor adaptation	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)
SP0389	Activate fuel pump.	MED 17.7-Motor electronics for direct injection 17.7
SP0390	Learning of the throttle valve stop	MED 17.7-Motor electronics for direct injection 17.7
SP0391	Teach in of drive authorization system	MED 17.7-Motor electronics for direct injection 17.7
SP0392	Teach-in process after engine replacement	MED 17.7-Motor electronics for direct injection 17.7
SP0393	Teach in ethanol portion in fuel.	MED 17.7-Motor electronics for direct injection 17.7
SP0394	Teach-in process for component M16/45 (EGR [ARF] actuator motors)	MED 17.7-Motor electronics for direct injection 17.7
SP0395	Resetting of adaptation data	MED 17.7-Motor electronics for direct injection 17.7
SP0396	Resetting the cold-start adaptation values	MED 17.7-Motor electronics for direct injection 17.7
SP0397	Resetting the reading of the counter for ethanol teach-in processes	MED 17.7-Motor electronics for direct injection 17.7
SP0398	Sensor rotor adaptation	MED 17.7-Motor electronics for direct injection 17.7
SP0399	Quick test of mixture adaptation	MED 17.7-Motor electronics for direct injection 17.7

SP0400	Enabling of engine start after crash event	MED 17.7-Motor electronics for direct injection 17.7
SP0401	Steering column module	Dr side SAM-Driver signal acquisition and actuation module
SP0402	Road test	ABR-Adaptive Brake
SP0403	Tire pressure loss warner	ABR-Adaptive Brake
SP0404	Erase zero point offset error of component Steering angle sensor.	ABR-Adaptive Brake
SP0405	Calibration of control unit ABR	ABR-Adaptive Brake
SP0406	Refill AdBlue.	SCR-Selective Catalytic Reduction
SP0407	Erasing adaptation values after replacement of AdBlue fluid	SCR-Selective Catalytic Reduction
SP0408	Teach-in process after replacement of component Y129 (AdBlue? metering valve)	SCR-Selective Catalytic Reduction
SP0409	Cancellation of limitation of engine starts-Cancellation of limitation of remaining distance	SCR-Selective Catalytic Reduction
SP0410	Reset of fault message 'Fault in AdBlue system' in instrument cluster	SCR-Selective Catalytic Reduction
SP0411	Normalizing-Rear left and right	ESA R-Electric seat adjustment rear
SP0412	Normalization of all seat adjustment motors	ESA FL-Electric seat adjustment front left
SP0413	Change standard distance of travel.	ESA FL-Electric seat adjustment front left
SP0414	Adjust end of forward range.	ESA FL-Electric seat adjustment front left

SP0415	Adjust end of forward range.	ESA FL-Electric seat adjustment front left
SP0416	Adjust beginning of rearward range	ESA FL-Electric seat adjustment front left
SP0417	Normalization of all seat adjustment motors	ESA FR-Electric seat adjustment front right
SP0418	Change standard distance of travel.	ESA FR-Electric seat adjustment front right
SP0419	Adjust end of forward range.	ESA FR-Electric seat adjustment front right
SP0420	Adjust end of forward range.	ESA FR-Electric seat adjustment front right
SP0421	Adjust beginning of rearward range	ESA FR-Electric seat adjustment front right
SP0422	Write wheel electronics identification number.	TPM-Tire pressure monitor
SP0423	Write specified tire pressure values.	TPM-Tire pressure monitor
SP0424	Initialization of power closing	DCM RL-Door control module rear left
SP0425	Initialization of power closing	DCM RR-Door control module rear right
SP0426	Initialization of power closing	DCM FL-Door control module front left
SP0427	Initialization of power closing	DCM FR-Door control module front right
SP0428	Teach-in process for anti-pinch protection function of panoramic sliding sunroofRoller sun blind	PSD-Panoramic sliding roof(Interior CAN bus)
SP0429	Performing adaptation(Wet start-off clutch (NAK))	ETC-Electronic transmission control
SP0430	Adaptation values of shift 1-2:	ETC-Electronic transmission control
SP0431	Adaptation values of shift 2-3:	ETC-Electronic transmission control
SP0432	Adaptation values of shift 3-4:	ETC-Electronic transmission control
SP0433	Adaptation values of shift 4-5:	ETC-Electronic transmission control
SP0434	Adaptation values of shift 5-6:	ETC-Electronic transmission control

SP0435	Adaptation values of shift 6-7:	ETC-Electronic transmission control
SP0436	Resetting of adaptation data	ETC-Electronic transmission control
SP0437	Adaptation values of shift 7-6:	ETC-Electronic transmission control
SP0438	Adaptation values of shift 6-5:	ETC-Electronic transmission control
SP0439	Adaptation values of shift 5-4:	ETC-Electronic transmission control
SP0440	Adaptation values of shift 4-3:	ETC-Electronic transmission control
SP0441	Adaptation values of shift 3-2:	ETC-Electronic transmission control
SP0442	Adaptation values of shift 2-1:	ETC-Electronic transmission control
SP0443	Resetting of adaptation data	ETC-Electronic transmission control
SP0444	Reverse gear	ETC-Electronic transmission control
SP0445	UPSHIFT	ETC-Electronic transmission control
SP0446	DOWNSHIFT	ETC-Electronic transmission control
SP0447	Acceleration downshifts	ETC-Electronic transmission control
SP0448	Resetting of adaptation data(Torque converter lockup clutch)	ETC-Electronic transmission control
SP0449	Adaptation via torque ranges	ETC-Electronic transmission control
SP0450	Fill time adaptation of the torque converter lockup clutch	ETC-Electronic transmission control
SP0451	Thrust-Program	ETC-Electronic transmission control
SP0452	ASSYST settings	ASSYST-Active Service System
SP0453	Re-initialization of AdBlue range	ASSYST-Active Service System
SP0454	Learning component A8/3 (STH radio remote control transmitter)	ASSYST-Active Service System

SP0455	Adaptation of the gearshifts	ETC-Electronic transmission control
SP0456	Upshifts	VGS-Fully integrated transmission control
SP0457	Downshifts	VGS-Fully integrated transmission control
SP0458	Acceleration downshifts	VGS-Fully integrated transmission control
SP0459	Standstill adaptation	VGS-Fully integrated transmission control
SP0460	Upshifts	VGS-Transmission control for 7-speed transimssion
SP0461	Downshifts	VGS-Transmission control for 7-speed transimssion
SP0462	Acceleration downshifts	VGS-Transmission control for 7-speed transimssion
SP0463	Standstill adaptation	VGS-Transmission control for 9-speed transimssion
SP0464	Adaptation procedure for torque converter lockup clutch	VGS-Transmission control for 9-speed transimssion
SP1000	Injector injection quantity adjustment	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1001	Activation of fuel pump	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1002	Teach-in of drive authorization system	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1003	Teach-in of intake port shutoff	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1004	Teach in of throttle valve stop	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1005	Teach-in process of component "B28/8 (DPF differential pressure sensor)"	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1006	Resetting of learned values of component "B6/1 (Camshaft Hall sensor)"	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1007	B79/2 (Transmission neutral position sensor)	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1008	Teach in component "Y77/1 (Boost pressure positioner)".	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1009	Quick teach-in of values of zero quantity calibration	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)

SP1010	Quick teach-in of the zero quantity calibration values at idle	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1011	Quick teach-in of the zero quantity calibration values while driving	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1012	Reset values of HFM drift compensation.	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1013	Resetting of contamination level of air filter	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1014	Oxidation catalytic converter	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1015	Teach-in of diesel particulate filter after replacement of control unit "N3/9 (CDI control unit)"	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1016	Teach-in process after replacement of component "Diesel particulate filter"	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1017	Enabling of engine start after crash event	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1018	Bleeding of high-pressure fuel circuit	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1019	Perform teach-in process for component "Y129 (AdBlue® metering valve)".	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1020	Perform teach-in process for component "B16/15 (Temperature sensor upstream of SCR catalytic converter)".	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1021	Reset learned values of components "NOx sensor upstream of SCR catalytic converter" and "NOx sensor downstream of SCR catalytic converter".	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1022	Reset learned values for AdBlue® metering.	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1023	Teach-in process after replacement of component "SCR catalytic converter"	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1024	Resetting of learned values of component "M16/46 (Low-pressure exhaust gas recirculation actuator motor)"	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1025	Teach-in process of component "B53/1 (Clutch pedal sensor)"	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1026	Resetting learned values "Exhaust gas recirculation (low pressure)"	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1027	Teach-in process after replacement of diesel particulate filter combined with NOx storage catalytic converter	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1028	Teach-in of diesel particulate filter combined with NOx storage catalytic converter after replacement of control unit "N3/9 (CDI control unit)"	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
SP1029	Status of teach-in processes	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)

SP1030	Regeneration of the diesel particulate filter while driving	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)
SP1031	Resetting of learned values of component "Fuel injectors"	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)
SP1032	Teach in component "M16/6 (Throttle valve actuator)".	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)
SP1033	Teach in component "Y27/8 (Exhaust gas recirculation actuator, high pressure)".	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)
SP1034	Teach in component "Y27/7 (Exhaust gas recirculation actuator, low pressure)".	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)
SP1035	Teach in component "M16/57 (Exhaust flap controller)".	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)
SP1036	Resetting of learned values of component "B4/6 (Rail pressure sensor)"	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)
SP1037	Resetting of learned values of component "Fuel system high pressure pump"	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)
SP1038	Resetting of learned values of component "B28/8 (Differential pressure sensor (DPF))"	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)
SP1039	Resetting of learned values of component "G3/2 (Oxygen sensor upstream of catalytic converter)"	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)
SP1040	Resetting of learned values of component "Turbocharger"	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)
SP1041	Resetting of learned values of component "Diesel particulate filter"	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)
SP1042	B79/3 (Manual transmission main shifter shaft position sensor)	Motor electronics "OM607" for combustion engine "CRR1"(N3/3)(CDI)
SP1043	Confirmation of general maintenance	Instrument cluster(IC)
SP1044	Reset general maintenance.	Instrument cluster(IC)
SP1045	Special maintenance	Instrument cluster(IC)
SP1046	Activation	Communication module 'Telematics services'/Notrufsystem(KOMO[mbrace])
SP1047	Deactivation	Communication module 'Telematics services'/Notrufsystem(KOMO[mbrace])
SP1048	Teach-in of a spare key	Electronic ignition switch(EZS)
SP1049	Activation of control unit "N73 (Electronic ignition lock control unit)"	Electronic ignition switch(EZS)

SP1050	Initial startup:ESL [ELV]	Electronic ignition switch(EZS)
SP1051	Activate function "Tire pressure loss warning".	Electronic stability program(N30/4)(ESP)
SP1052	Calibration of component "Acceleration sensor"	Electronic stability program(N30/4)(ESP)
SP1053	Write identification numbers of tire pressure sensors.	Tire pressure monitor(N88)(TPM)
SP1054	Activate comfort telephony.	Audio or COMAND(A2-A40/3)(AUDIO)
SP1055	Comfort telephony	Audio or COMAND(A2-A40/3)(AUDIO)
SP1056	Pairing:Audio or COMAND-mbrace(Internet connection)	Audio or COMAND(A2-A40/3)(AUDIO)
SP1057	Restore initial authorization certificate for VPN connection.	Audio or COMAND(A2-A40/3)(AUDIO)
SP1058	Teach-in process"Current date(GPS data)"	Audio or COMAND(A2-A40/3)(AUDIO)
SP1059	Resetting of learned values of component "A90 (COLLISION PREVENTION ASSIST controller unit)"	Control unit 'COLLISION PREVENTION ASSIST'(A90)(CPA)
SP1060	Calibration of microphone for sound system	Bose sound system(SOUND)
SP1061	Level calibration	Adaptive damping system(N51/5)(ADS)
SP1062	N121/1 (Liftgate control control unit)	Tailgate control(HKS)
SP1063	Calibration	Multifunction camera(MFK)
SP1064	Retrofitting	Multifunction camera(A40/11)(MFK)
SP1065	Normalization of actuator motors	Automatic air conditioning(AAC)
SP1066	Teach-in of actuator motors	Automatic air conditioning(AAC)
SP1067	Breaking-in of refrigerant compressor	Automatic air conditioning(AAC)
SP1068	Teach in component "A8/3 (Stationary heater radio remote control transmitter)".	Stationary heater(STH)
SP1069	Calibration of component "A91b1 (Electric power steering torque sensor)"	Electrical power steering(N68)(ES)

SP1070	Resetting the center position of the steering	Electrical power steering(N68)(ES)
SP1071	Reset of coding	Electrical power steering(N68)(ES)
SP1072	Teach-in process of anti-pinch protection	Control module 'Panoramic sliding roof'(A98)(PSD)
SP1073	Coding	Head up display(HUD)
SP1074	Normalization and adaptation	Electric seat adjustmnet Driver with memory function(ESV Driver)
SP1075	Normalization	Electric seat adjustmnet Driver with memory function(ESV Driver)
SP1076	Easy entry/exit	Electric seat adjustmnet Driver with memory function(ESV Driver)
SP1077	Initial startup	Trailer recognition module (N28/1)(TRM)
SP1078	Erasing of initialization values	Trailer recognition module (N28/1)(TRM)
SP1079	Calibration of long range radar sensor	DISTRONIC (A89)(DTR)
SP1080	Normalization of power window	Left front door(LFD)
SP1081	Calibration of control unit "N128 (Electric parking brake control unit)"	Electronic parking brake(N128)(EFB)
SP1082	Calibration of steering angle sensor	Backup camera(RFK)
SP1083	Calibration of reversing camera	Backup camera(RFK)
SP1084	Zero position adjustment	Control unit 'Headlamp'(N71/1)(SG SW)
SP1085	Resetting the operating hours counter of component "Left xenon headlamp"	Control unit 'Headlamp'(N71/1)(SG SW)
SP1086	Resetting the operating hours counter of component "Right xenon headlamp"	Control unit 'Headlamp'(N71/1)(SG SW)
SP1087	Tourist mode	Control unit 'Headlamp'(N71/1)(SG SW)
SP1088	Adjustment of headlamps via diagnosis	Left headlamp(SG SW L)
SP1089	Resetting of operating hours counters of component "E1 (Left front lamp unit)"	Left headlamp(SG SW L)

SP1090	Resetting of operating hours counters of component "E1m4 (Left front lamp unit fan motor 1)"	Left headlamp(SG SW L)
SP1091	Adaptation of codings of control units to lamp unit	Left headlamp(SG SW L)
SP1092	Adaptation of coding of control unit to lamp unit	Left headlamp(SG SW L)
SP1093	Resetting of assignment of control unit "E1n9" to vehicle side	Left headlamp(SG SW L)
SP1094	Resetting of operating hours counters of component "E1m5 (Left front lamp unit fan motor 2)"	Left headlamp(E1n9)(SG SW L)
SP1095	Resetting of operating hours counters of component "E2 (Right front headlamp unit)"	Right headlamp(SG SW R)
SP1096	Resetting of operating hours counters of component "E2m4 (Right front lamp unit fan motor 1)"	Right headlamp(SG SW R)
SP1097	Resetting of operating hours counters of component "E2m5 (Right front lamp unit fan motor 2)"	Right headlamp(SG SW R)
SP1098	Parameterization and adaptation of windshield	B38/2-Rain/light sensor(RGLS)
SP1099	Resetting the oil service data	All wheel drive(VG)
SP1100	Replacement of component "Transfer case"	All wheel drive(VG)
SP1101	Function test of component "Y68/3 (All-wheel drive solenoid valve)" while driving	All wheel drive(VG)
SP1102	Resetting of learned values of component "Y68/3 (All-wheel drive solenoid valve)"	All wheel drive(VG)
SP1103	Display of EEPROM values	Electronic transmission control for double-plate clutch transmission(DKG)
SP1104	Deactivate transport protection.	Electronic transmission control for double-plate clutch transmission(DKG)
SP1105	B28/18 (Low-pressure exhaust gas recirculation differential pressure sensor)	N127 (Drivetrain control unit)(PTCU)
SP1106	Teach in component "M16/46 (Low-pressure exhaust gas recirculation actuator motor)".	N127 (Drivetrain control unit)(PTCU)
SP1107	Teach in component "M16/57 (Exhaust flap controller actuator motor)".	N127 (Drivetrain control unit)(PTCU)
SP1108	Resetting reading of frequency counter for ethanol teach-in processes	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
SP1109	Reset of mixture adaptation values	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)

SP1110	Resetting of values for sensor rotor adaptation	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
SP1111	Resetting of learned values of component "Gasoline particulate filter"	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
SP1112	Reset learned values for diagnosis of CAN bus through control unit "N3/10 (ME-SFI [ME] control unit)".	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
SP1113	Teaching in the ethanol proportion in the fuel	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
SP1114	Teach-in of exhaust gas recirculation actuator	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
SP1115	Perform teach-in process "Sensor rotor adaptation".	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
SP1116	Teach-in of positions for camshafts	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
SP1117	Resetting of adaptation values	Motor electronics "MED40AMG" for combustion engine "M133"(N3/10)(ME)
SP1118	Adjustment of zero quantity calibration	Engine Electronics CRR2 for Internal Combustion Engine OM608(CDI)
SP1119	Resetting of learned values of component "B2/5 (Hot film mass air flow sensor)"	Engine Electronics CRR2 for Internal Combustion Engine OM608(CDI)
SP1120	Resetting of learned values of component "B175 (Temperature sensors sensor unit)"	Engine Electronics CRR2 for Internal Combustion Engine OM608(CDI)
SP1121	Resetting of learned values of component "Exhaust aftertreatment unit"	Engine Electronics CRR2 for Internal Combustion Engine OM608(CDI)
SP1122	Resetting learned values of component parts "Fuel system high pressure pump" and "Rail"	Engine Electronics CRR2 for Internal Combustion Engine OM608(CDI)
SP1123	Teach-in process of component "Y27/7 (Exhaust gas recirculation actuator, low pressure)"	Engine Electronics CRR2 for Internal Combustion Engine OM608(CDI)
SP1124	Teach-in process of component "Y27/8 (Exhaust gas recirculation actuator, high pressure)"	Engine Electronics CRR2 for Internal Combustion Engine OM608(CDI)
SP1125	Teach-in process of component "M16/6 (Throttle valve actuator)"	Engine Electronics CRR2 for Internal Combustion Engine OM608(CDI)
SP1126	Teach-in process of component "Y77/1 (Boost pressure regulator)"	Engine Electronics CRR2 for Internal Combustion Engine OM608(CDI)
SP1127	Activation of component "M3 (Fuel pump)"	Engine Electronics CRR2 for Internal Combustion Engine OM608(CDI)
SP1128	Resetting of learned values of component "Y129 (AdBlue® metering valve)"	Engine Electronics CRR2 for Internal Combustion Engine OM608(CDI)
SP1129	Resetting of learned values of component "A103 (AdBlue® pump module)"	Engine Electronics CRR2 for Internal Combustion Engine OM608(CDI)

SP1130	Teach-in process after replacement of component "B2/5 (Hot film mass air flow sensor)"	N3/40-Motor electronics "MRD1" for combustion engine "OM654"(CDI)
SP1131	Teach-in process of component "M55 (Intake port shutoff actuator motor)"	N3/40-Motor electronics "MRD1" for combustion engine "OM654"(CDI)
SP1132	Teach-in process of component "Y77/1 (Boost pressure positioner)"	N3/40-Motor electronics "MRD1" for combustion engine "OM654"(CDI)
SP1133	Teach-in process of component "M16/46 (Low-pressure exhaust gas recirculation actuator motor)"	N3/40-Motor electronics "MRD1" for combustion engine "OM654"(CDI)
SP1134	Teach-in process of component "Y27/9 (Exhaust gas recirculation actuator)"	N3/40-Motor electronics "MRD1" for combustion engine "OM654"(CDI)
SP1135	Teach-in process after replacement of component "Y74 (Pressure regulating valve)"	N3/40-Motor electronics "MRD1" for combustion engine "OM654"(CDI)
SP1136	Teach-in process after replacement of component "Y94 (Quantity control valve)"	N3/40-Motor electronics "MRD1" for combustion engine "OM654"(CDI)
SP1137	Teach-in process after replacement of component "B28/8 (DPF differential pressure sensor)"	N3/40-Motor electronics "MRD1" for combustion engine "OM654"(CDI)
SP1138	Teach-in process after replacement of component "B28/18 (Low-pressure exhaust gas recirculation differential pressure sensor)"	N3/40-Motor electronics "MRD1" for combustion engine "OM654"(CDI)
SP1139	Resetting the event memory for loss of synchronization between crankshaft and camshaft	N3/40-Motor electronics "MRD1" for combustion engine "OM654"(CDI)
SP1140	Reset learned values for diagnosis of CAN bus through control unit "N3/9 (CDI control unit)".	N3/40-Motor electronics "MRD1" for combustion engine "OM654"(CDI)
SP1141	Teach-in process after replacement of component "B19/7 (Temperature sensor upstream of catalytic converter)"	N3/40-Motor electronics "MRD1" for combustion engine "OM654"(CDI)
SP1142	Teach-in process after replacement of component "B19/9 (Temperature sensor upstream of diesel particulate filter)"	N3/40-Motor electronics "MRD1" for combustion engine "OM654"(CDI)
SP1143	Teach-in process after replacement of component "B175 (Temperature sensors sensor unit)"	N3/40-Motor electronics "MRD1" for combustion engine "OM654"(CDI)
SP1144	Teach-in process after replacement of component "Oxidation catalytic converter"	N3/40-Motor electronics "MRD1" for combustion engine "OM654"(CDI)
SP1145	Reset learned values of components "Diesel particulate filter" and "SCR catalytic converter".	N3/40-Motor electronics "MRD1" for combustion engine "OM654"(CDI)
SP1146	Teach-in process of component "Y129 (AdBlue® metering valve)"	N3/40-Motor electronics "MRD1" for combustion engine "OM654"(CDI)
SP1147	Deactivation of production mode	Left front door(LFD)
SP1148	Start control unit reset.	Left front door(LFD)
SP1149	Perform normalization of component "N121/1 (Liftgate control control unit)".	Tailgate control(HKS)

SP1150	Addressing of LIN bus participants	Ambiance light(AML)
SP1151	Writing of the VIN	Outer right rear integrated radar sensor (B92/6)(IRS HRA)
SP1152	Reset VIN.	Outer right rear integrated radar sensor (B92/6)(IRS HRA)
SP1153	Calibration with calibration aid	Backup camera(RFK)
SP1154	Teach-in processSoftware module "AMG suspension"	AMG DRIVE UNIT(AMG DRVU)
SP1155	Teach-in process of component "N170 (Rear wing control unit)"	AMG DRIVE UNIT(AMG DRVU)
SP1156	Initialization of component part "ActuatorDifferential lock"	AMG DRIVE UNIT(AMG DRVU)
SP1157	Calibration of component "A40/11 (Multifunction camera)"	Multifunction camera(mono)(A40/11)(MFK)
SP1158	Automatic illumination test	Overhead control panel(OCP)
SP1159	Control unit UNLOCK	"Front passenger" seat heater(SIH BFS)
SP1160	Control unit LOCK	"Front passenger" seat heater(SIH BFS)
SP1161	Control unitUNLOCK	"Driver" seat heater(SIH FS)
SP1162	Control unitLOCK	"Driver" seat heater(SIH FS)
SP1163	Resetting of counter "Degree of contamination of air filter"	Automatic air conditioning(AAC)
SP1164	Teach-in of sensor "B12/2 (Refrigerant pressure sensor)"	Automatic air conditioning(AAC)
SP1165	Resetting of learned values of component "B92/12 (Short and long-range radar sensor)"	DISTRONIC(DTR)
SP1166	Loading of manufacturer default settings	DISTRONIC(DTR)
SP1167	Reset of reading of frequency counter "Crash event"	Radar sensors control unit(SGR)
SP1168	Writing of vehicle identification number	Radar sensors control unit(SGR)
SP1169	Resetting of learned values of component "Mercedes-Benz Intelligent Drive"	Radar sensors control unit(SGR)

SP1170	Calibration of control unit "N62 (Parking system control unit)"	PARKTRONIC(PTS)
SP1171	Reset learned values.	Electric power steering(ES )
SP1172	Reset offset value of signal "Steering angle".	Electric power steering(ES )
SP1173	Reset adaptation values for internal friction of steering.	Electric power steering(ES )
SP1174	Calibration of component "Transfer case"	All-wheel drive(VG)
SP1175	Adaptation of clutch engagement point	All-wheel drive(VG)
SP1176	Reset learned values of component "B92/7 (Right outer rear bumper radar sensor)".	Right rear short-range radar(NBR RR)
SP1177	Reset learned values of component "B92/10 (Left outer rear bumper radar sensor)".	Left rear short-range radar(NBR LR)
SP1178	Calibration of component "Yaw rate sensor for lateral and longitudinal acceleration"	Electric stability program(ESP)
SP1179	Calibration of component "ESP® control valves"	Electric stability program(ESP)
SP1180	Calibration of component "Electric parking brake"	Electric stability program(ESP)
SP1181	Calibration of component "B37/1 (Pedal angle sensor)"	Electric stability program(ESP)
SP1182	Activation of function "Tire pressure loss warning"	Electric stability program(ESP)
SP1183	Resetting value "Clutch grip point"	Electric stability program(ESP)
SP1184	Reset wear value of component "M56 (Vacuum pump)".	Electric stability program(ESP)
SP1185	Test of component "B37/1 (Pedal angle sensor)"	Electric stability program(ESP)
SP1186	Function test of component "S9/1 (Brake light switch)"	Electric stability program(ESP)
SP1187	Activation of function "Permanent fault memory"	Electric stability program(ESP)
SP1188	Calibration of component "A103/1b5 (AdBlue® fill level sensor)"	Selective catalytic reduction(SCR)
SP1189	Resetting the calculated fill level of the AdBlue® tank	Selective catalytic reduction(SCR)

SP1190	DEF@CPC_NG_ODX_MFA2*44058**default*70630	N127 (Drivetrain control unit)(PTCU)
SP1191	Bleeding the cooling system of the low-temperature circuit	N127 (Drivetrain control unit)(PTCU)
SP1192	Filling the cooling system of the low-temperature circuit	N127 (Drivetrain control unit)(PTCU)
SP1193	TEST MODE1	N127 (Drivetrain control unit)(PTCU)
SP1194	TEST MODE2	N127 (Drivetrain control unit)(PTCU)
SP1195	B79/3 (Manual transmission main shifter shaft position sensor)Position REVERSE	N127 (Drivetrain control unit)(PTCU)
SP1196	B79/3 (Manual transmission main shifter shaft position sensor)Position Gear 5	N127 (Drivetrain control unit)(PTCU)
SP1197	Perform voltage adjustment.	Power electronics(SG EM)
SP1198	Teach-in of position sensor	Power electronics(SG EM)
SP1199	Contacting of component "Electric machine"(High voltage)	Power electronics(SG EM)
SP1200	Test of contact of electrical line of ground strap on component "DC/DC converter"	Power electronics(SG EM)
SP1201	High-voltage component lock	Battery management system(BMS)
SP1202	Teach-in process Timing chain	N3/10-Motor electronics "EM71" for combustion engine "M282"(ME)
SP1203	Teach-in processes	N3/10-Motor electronics "MED41" for combustion engine "M260/M264"(ME)
SP1204	Perform teach-in process "Sensor rotor adaptation" at vehicle standstill.	N3/10-Motor electronics "MRG1AMGR4" for combustion engine "M139"(ME)
SP1205	Perform teach-in process "Sensor rotor adaptation" during driving operation.	N3/10-Motor electronics "MRG1AMGR4" for combustion engine "M139"(ME)
SP1206	Teach-in process after replacement of the combustion engine	N3/10-Motor electronics "MRG1AMGR4" for combustion engine "M139"(ME)
SP1207	Teach-in of used fuel injectors	N3/10-Motor electronics "MRG1AMGR4" for combustion engine "M139"(ME)
SP1208	Resetting of function "CAN bus"Configuration	N3/10-Motor electronics "MRG1AMGR4" for combustion engine "M139"(ME)
SP1209	Calibration of 360° camera at front end	360 camera(N148)(CAMERA)

SP1210	Calibration of 360° camera at rear end	360 camera(N148)(CAMERA)
SP1211	Calibration of 360° camera in left outside mirror	360 camera(N148)(CAMERA)
SP1212	Calibration of 360° camera in right outside mirror	360 camera(N148)(CAMERA)
SP1213	Calibration of multiple 360° cameras	360 camera(N148)(CAMERA)
SP1214	Activate fuel pump.	Motor electronics 9.7(ME 9.7)
SP1215	Learning of the throttle valve stop	Motor electronics 9.7(ME 9.7)
SP1216	Teach in of drive authorization system	Motor electronics 9.7(ME 9.7)
SP1217	Teach-in process after engine replacement	Motor electronics 9.7(ME 9.7)
SP1218	Resetting of adaptation data	Motor electronics 9.7(ME 9.7)
SP1219	Resetting the cold-start adaptation values	Motor electronics 9.7(ME 9.7)
SP1220	Sensor rotor adaptation	Motor electronics 9.7(ME 9.7)
SP1221	Performing adaptation(Wet start-off clutch (NAK))	Electronic transmission control(ETC)
SP1222	Adaptation values of shift 1-2:	Electronic transmission control(ETC)
SP1223	Adaptation values of shift 2-3:	Electronic transmission control(ETC)
SP1224	Adaptation values of shift 3-4:	Electronic transmission control(ETC)
SP1225	Adaptation values of shift 4-5:	Electronic transmission control(ETC)
SP1226	Adaptation values of shift 5-6:	Electronic transmission control(ETC)
SP1227	Adaptation values of shift 6-7:	Electronic transmission control(ETC)
SP1228	Adaptation values of shift 7-6:	Electronic transmission control(ETC)
SP1229	Adaptation values of shift 6-5:	Electronic transmission control(ETC)

SP1230	Adaptation values of shift 5-4:	Electronic transmission control(ETC)
SP1231	Adaptation values of shift 4-3:	Electronic transmission control(ETC)
SP1232	Adaptation values of shift 3-2:	Electronic transmission control(ETC)
SP1233	Adaptation values of shift 2-1:	Electronic transmission control(ETC)
SP1234	Reverse gear	Electronic transmission control(ETC)
SP1235	UPSHIFT	Electronic transmission control(ETC)
SP1236	DOWNSHIFT	Electronic transmission control(ETC)
SP1237	Acceleration downshifts	Electronic transmission control(ETC)
SP1238	Resetting of adaptation data(Torque converter lockup clutch)	Electronic transmission control(ETC)
SP1239	Adaptation via torque ranges	Electronic transmission control(ETC)
SP1240	Fill time adaptation of the torque converter lockup clutch	Electronic transmission control(ETC)
SP1241	Thrust-Program	Electronic transmission control(ETC)
SP1242	Tire pressure loss warner(Activating)	Electronic stability program(ESP)
SP1243	Erase zero point offset error of component N49 (Steering angle sensor).	Electronic stability program(ESP)
SP1244	ABS fault Actuations/NOT ACTUATED	Electronic stability program(ESP)
SP1245	Steering variant	Airbag(AB)
SP1246	Detach the transport protection of control module ISM, personalize or activate the control module.	Shift module(ISM)
SP1247	Initial startup with automatic takeover of settings of previous control unit	Suspension
SP1248	Initial startup with manual settings input for new control unit/Level calibration	Suspension
SP1249	Reset compressor operating time	Suspension

SP1250	Normalization of panoramic sliding roof	Overhead control panel(OCP)
SP1251	Teach-in process for anti-pinch protection function of panoramic sliding sunroof	Overhead control panel(OCP)
SP1252	Maintenance light reset	Active Service System(ASSYST)
SP1253	Confirm overall maintenance	PLUS Active Service System(ASSYST PLUS)
SP1254	Reset mistakenly confirmed overall maintenance	PLUS Active Service System(ASSYST PLUS)
SP1255	Tourist mode(Symmetrical light distribution)	Xenon headlamp, left(XALWA L)
SP1256	Resetting operating hours counter	Xenon headlamp, left(XALWA L)
SP1257	EP:Reset of operating hours counter	Xenon headlamp, left(XALWA L)
SP1258	Zero position adjustment of axle or level sensors	Automatic headlamp range adjustment and headlamp control(HRA)
SP1259	Normalizing of positioning motors	Automatic air conditioning(AAC)
SP1260	Check of the adjustment range of the actuator motors	Automatic air conditioning(AAC)
SP1261	Teach-in of actuator motors after actuator motor replacement	Automatic air conditioning(AAC)
SP1262	Breaking-in procedure after replacement of refrigerant compressor	Automatic air conditioning(AAC)
SP1263	Adjustment of injector injection quantities	Common Rail Diesel Injection(CDI 6BIN5)
SP1264	Teaching in the diesel particulate filter after replacing the engine control unit	Common Rail Diesel Injection(CDI 6BIN5)
SP1265	Teach-in of diesel particulate filter after replacement of engine control unit without transfer of values	Common Rail Diesel Injection(CDI 6BIN5)
SP1266	Teach-in of SCR exhaust aftertreatment system after replacement of engine control unit without transfer of values	Common Rail Diesel Injection(CDI 6BIN5)
SP1267	Teach-in process after replacement of component Diesel particulate filter	Common Rail Diesel Injection(CDI 6BIN5)
SP1268	Teach-in process after replacement of component Diesel oxidation catalytic converter	Common Rail Diesel Injection(CDI 6BIN5)
SP1269	Teach-in process after replacement of component SCR-Catalytic converter	Common Rail Diesel Injection(CDI 6BIN5)

SP1270	Teach-in process after replacement of component B16/15 (Temperature sensor upstream of SCR catalytic converter)	Common Rail Diesel Injection(CDI 6BIN5)
SP1271	Teach-in process after replacement of component B28/8 (Pressure differential sensor (DPF))	Common Rail Diesel Injection(CDI 6BIN5)
SP1272	Teach-in process after replacement of component G3/2 (O2 sensor upstream of KAT)	Common Rail Diesel Injection(CDI 6BIN5)
SP1273	Teach-in process after replacement of component NOx sensor upstream of SCR catalytic converter	Common Rail Diesel Injection(CDI 6BIN5)
SP1274	Teach-in process after replacement of component NOx sensor downstream of SCR catalytic converter	Common Rail Diesel Injection(CDI 6BIN5)
SP1275	Teach-in process after replacement of component Y27/9 (Exhaust gas recirculation actuator)	Common Rail Diesel Injection(CDI 6BIN5)
SP1276	Teach-in process after replacement of component Y74 (Pressure control valve)	Common Rail Diesel Injection(CDI 6BIN5)
SP1277	Teach-in process after replacement of component Y129 (AdBlue metering valve)	Common Rail Diesel Injection(CDI 6BIN5)
SP1278	Activate fuel pump	Common Rail Diesel Injection(CDI 6BIN5)
SP1279	Reset quantity mean value adaptation data	Common Rail Diesel Injection(CDI 6BIN5)
SP1280	Rapid teach-in of zero quantity calibration values	Common Rail Diesel Injection(CDI 6BIN5)
SP1281	Reset values for HFM drift compensation	Common Rail Diesel Injection(CDI 6BIN5)
SP1282	Resetting AdBlue quality factor	Common Rail Diesel Injection(CDI 6BIN5)
SP1283	Resetting air filter learned values after air filter replacement	Common Rail Diesel Injection(CDI 6BIN5)
SP1284	Refill AdBlue.	Selective Catalytic Reduction(SCR)
SP1285	Erasing adaptation values after replacement of AdBlue fluid	Selective Catalytic Reduction(SCR)
SP1286	Teach-in process after replacement of component Y129 (AdBlue(R) metering valve)	Selective Catalytic Reduction(SCR)
SP1287	Cancellation of limitation of engine starts-Cancellation of limitation of remaining distance	Selective Catalytic Reduction(SCR)
SP1288	Reset of fault message 'Fault in AdBlue system' in instrument cluster	Selective Catalytic Reduction(SCR)
SP1289	Regeneration of diesel particulate filter when driving	Common Rail Diesel Injection(CDI 60LS)

SP1290	Teach-in process after replacement of component NOx sensor	Common Rail Diesel Injection(CDI 60LS)
SP1291	Reset quantity mean value adaptation data.	Common Rail Diesel Injection(CDI 60LS)
SP1292	Reset values for HFM drift compensation.	Common Rail Diesel Injection(CDI 60LS)
SP1293	Cancellation of limitation of engine starts(USA)/Cancellation of limitation of remaining distance	Common Rail Diesel Injection(CDI 60LS)
SP1294	Perform teach-in process for component "B28/8 (DPF differential pressure sensor)".	N3/9-Motor electronics "CR43" for combustion engine "OM651"(CDI)
SP1295	Teach-in process of component "B79/2 (Transmission neutral position sensor)"	N3/9-Motor electronics "CR43" for combustion engine "OM651"(CDI)
SP1296	Teach-in process of component "G3/2 (Oxygen sensor upstream of catalytic converter)"	N3/9-Motor electronics "CR43" for combustion engine "OM651"(CDI)
SP1297	Teach-in process of component "Y74 (Pressure regulating valve)"	N3/9-Motor electronics "CR43" for combustion engine "OM651"(CDI)
SP1298	Teach-in process of component "Y94 (Quantity control valve)"	N3/9-Motor electronics "CR43" for combustion engine "OM651"(CDI)
SP1299	Reset values of quantity mean value adaptation.	N3/9-Motor electronics "CR43" for combustion engine "OM651"(CDI)
SP1300	Teach-in process after replacement of component "G3/2 (Oxygen sensor upstream of catalytic converter)"	N3/9-Motor electronics "CDI60LS" for combustion engine "OM642"(CDI)
SP1301	Teach-in process after replacement of combined diesel particulate filter with oxidation catalytic converter	N3/9-Motor electronics "CDI61" for combustion engine "OM642"(CDI)
SP1302	Teach-in of combined diesel particulate filter with oxidation catalytic converter after replacement of control unit "N3/9 (CDI control unit)"	N3/9-Motor electronics "CDI61" for combustion engine "OM642"(CDI)
SP1303	Teach-in of oxidation catalytic converter after replacement of control unit "N3/9 (CDI control unit)"	N3/9-Motor electronics "CDI61" for combustion engine "OM642"(CDI)
SP1304	Adaptation of component "Torque converter lockup clutch"	Y3/8n4-Fully integrated transmission control(IGS)
SP1305	Adaptation of wet start-up clutch (NAK)	Y3/8n4-Fully integrated transmission control(IGS)
SP1306	Extended adaptation of "Wet clutch" component when driving	Y3/8n4-Fully integrated transmission control(IGS)
SP1307	Assignment of hydraulic shift elements	Y3/8n4-Fully integrated transmission control(IGS)
SP1308	Upshifts	Y3/8n4-Fully integrated transmission control(IGS)
SP1309	Downshifts	Y3/8n4-Fully integrated transmission control(IGS)

SP1310	Standstill adaptation	Y3/8n4-Fully integrated transmission control(IGS)
SP1311	Adaptation values of shift operations	Y3/8n4-Fully integrated transmission control(IGS)
SP1312	Resetting the service life data of the torque converter	Y3/8n4-Fully integrated transmission control(IGS)
SP1313	Resetting of service life data of automatic transmission	Y3/8n4-Fully integrated transmission control(IGS)
SP1314	Resetting learned values "Deceleration mode"	Y3/8n4-Fully integrated transmission control(IGS)
SP1315	Teach-in of selection range sensor	Y3/8n4-Fully integrated transmission control(IGS)
SP1316	Teach-in of position sensor of park pawl	Y3/8n4-Fully integrated transmission control(IGS)
SP1317	Adaptation procedure for torque converter lockup clutch	Y3/8n4-Transmission control for 7 speed transmission(VGS)
SP1318	Shift	Y3/8n4-Transmission control for 7 speed transmission(VGS)
SP1319	Torque converter	Y3/8n4-Transmission control for 7 speed transmission(VGS)
SP1320	Shift qualityHistory	Y3/8n4-Transmission control for 9 speed transmission(VGS)
SP1321	Resetting the service life data of the shift elements	Y3/8n4-Transmission control for 9 speed transmission(VGS)
SP1322	Resetting of learned values of component "Park pawl"	Y3/8n4-Transmission control for 9 speed transmission(VGS)
SP1323	Teach-in process after replacement of component "AdBlue® metering valve"	Selective Catalytic Reduction(SCR)
SP1324	Resetting of adaptation values-Factor for long-term adaptation of SCR exhaust aftertreatment system	Selective Catalytic Reduction(SCR)
SP1325	Resetting the adaptation values of the NOx sensors	Selective Catalytic Reduction(SCR)
SP1326	Cancellation of limitation of remaining distance	Selective Catalytic Reduction(SCR)
SP1327	Resetting adaptation values of component "A103/2m1 (AdBlue® delivery pump)"	Selective catalytic reduction(SCR)
SP1328	Reset of "L20 (Electric machine rotor position sensor)" component	Power electronics(SG EM)
SP1329	Calculation of average value for transition resistance of ground strap of component "N83/1 (DC/DC converter control unit)"	Power electronics(SG EM)

SP1330	Reactivate tire pressure loss warning.	Electronic stability program(N30/4)(ESP)
SP1331	Calibration of component "A7/3 (Traction system hydraulic unit)"	Electronic stability program(N30/4)(ESP)
SP1332	Calibration of component "B24/15 (Yaw rate sensor for lateral and longitudinal acceleration)"	Electronic stability program(N30/4)(ESP)
SP1333	Production	Electronic stability program(N30/4)(ESP)
SP1334	Calibrate separation and intake valves in component "A7/3 (Traction system hydraulic unit)".	Regenerative braking system(N30/6)(ESP)
SP1335	Teach in component "B37/1 (Pedal angle sensor)".	Regenerative braking system(N30/6)(ESP)
SP1336	Resetting the operating hours counter of component "M56 (Vacuum pump)"	Regenerative braking system(N30/6)(ESP)
SP1337	Development data	Regenerative braking system(N30/6)(ESP)
SP1338	Reset frequency counter "Emergency stop".	Radar sensors control unit(SGR)
SP1339	Initial startup of components "B29/2 (Left front bumper DISTRONIC (DTR) sensor)" and "B29/3 (Right front bumper DISTRONIC (DTR) sensor)"	Radar sensors control unit(SGR)
SP1340	Read out actual values "Offset value of component "Left front short range radar"" and "Offset value of component "Right front short range radar"".	Radar sensors control unit(SGR)
SP1341	Calibration of component "N148 (360° camera control unit)"	360 camera(N148)(CAMERA)
SP1342	Transfer of calibration values	360 camera(N148)(CAMERA)
SP1343	Special measures	360 camera(N148)(CAMERA)
SP1344	Reset of compressor operating time	Adaptive damping system(N51/5)(ADS)
SP1345	Pairing of Mercedes-Benz headphones	Display in left rear passenger compartment(D FOL)
SP1346	Pairing of other headphones(Only for the development department)	Display in left rear passenger compartment(D FOL)
SP1347	Manufacturer default setting	Display in left rear passenger compartment(D FOL)
SP1348	Currently paired headphones	Display in left rear passenger compartment(D FOL)
SP1349	Pairing of Mercedes-Benz headphones(Only for the development department)	Display in left rear passenger compartment(D FOL)

SP1350	Calibrate control unit "A80 (Intelligent servo module for DIRECT SELECT)".	Shift module(ISM)
SP1351	Variant coding reset	Shift module(ISM)
SP1352	Teach in of sensors	Roll control(B38/2)(RC)
SP1353	Calibration of component "N15/7 (Transfer case control module)"	Transfer case(VG)
SP1354	Resetting learned values of component parts "Left" and "Right" Gasoline particulate filter	N3/10-Motor electronics "MED177" for combustion engine "M276"(ME)
SP1355	Resetting of learned values of component "Gasoline particulate filter" Right	N3/10-Motor electronics "MED177" for combustion engine "M276"(ME)
SP1356	Resetting of learned values of component "Gasoline particulate filter" Left	N3/10-Motor electronics "MED177" for combustion engine "M276"(ME)
SP1357	Teach-in of exhaust gas recirculation actuators	N3/10-Motor electronics "MED177" for combustion engine "M276"(ME)
SP1358	Resetting of learned values of component "Gasoline particulate filter"Right	N3/10-Motor electronics "MED177V6LA" for combustion engine "M276Turbocharger"(ME)
SP1359	Resetting of learned values of component "Gasoline particulate filter"Left	N3/10-Motor electronics "MED177V6LA" for combustion engine "M276Turbocharger"(ME)
SP1360	Carrying out adaptation	Y3/8n4-Transmission control for 9 speed transmission(VGS)
SP1361	Fast adaptation of the component "Wet clutch(NAK)"	Y3/8n4-Transmission control for 9 speed transmission(VGS)
SP1362	Initializing of control module	Y3/8n4-Transmission control for 9 speed transmission(VGS)
SP1363	Resetting of adaptation values(Quick adaptation)	Y3/8n4-Transmission control for 9 speed transmission(VGS)
SP1364	Resetting the adaptation values(Wet clutch(NAK))	Y3/8n4-Transmission control for 9 speed transmission(VGS)
SP1365	LEFTB-pillar	Automatic air conditioning(AAC)
SP1366	Resetting the operating hours counter of component "E1m4 (Left front lamp unit fan motor 1)"	LED matrix of left front lamp unit(SG LML VL)
SP1367	Resetting of operating hours counters of component "E2 (Right front lamp unit)"	LED matrix of right front lamp unit(SG-LML-RF)
SP1368	Resetting the operating hours counter of component "E2m4 (Right front lamp unit fan motor 1)"	LED matrix of right front lamp unit(SG-LML-RF)
SP1369	Reset wear value of component "M56 (Electric vacuum pump)".	Electric stability program(N30/4)(ESP)

SP1370	Test of component "S9/1 (Brake light switch)"	Electric stability program(N30/4)(ESP)
SP1371	Teach in component "N129 (Starter-alternator control unit)".	Integrated starter alternator(ISG)
SP1372	Resetting learned values of component parts "Gasoline particulate filterLeft" and "Gasoline particulate filterRight"	N3/10-Motor electronics "MED1775" for combustion engine "M178"(ME)
SP1373	Resetting of learned values of component "Gasoline particulate filterLeft"	N3/10-Motor electronics "MED1775" for combustion engine "M178"(ME)
SP1374	Resetting of learned values of component "Gasoline particulate filterRight"	N3/10-Motor electronics "MED1775" for combustion engine "M178"(ME)
SP1375	Teach-in of throttle valve end stops of right and left throttle valve actuators	N3/10-Motor electronics "MED1775" for combustion engine "M178"(ME)
SP1376	Vehicle data	Central gateway(CGW[ZGW])
SP1377	Calibration of intake valves	Electric stability program(ESP)
SP1378	Calibration of separation valves	Electric stability program(ESP)
SP1379	Calibrate control unit "N30/4 (Electronic Stability Program control unit)".	Electric stability program(ESP)
SP1380	ABS fault ACTIVE/NOT ACTIVE	Electric stability program(ESP)
SP1381	Separate normalization of steering column	N32/1 (Driver seat control unit)(SCU DRIVE)
SP1382	M59 (Intake manifold swirl flap actuator motor)	N3/10-Motor electronics "SIM271DE20" for combustion engine "M271EVO"(ME)
SP1383	Acceleration of sensor rotor adaptation	N3/10-Motor electronics "SIM271DE20" for combustion engine "M271EVO"(ME)
SP1384	Perform teach-in process for control unit "ME".	N3/10-Motor electronics "SIM271DE20" for combustion engine "M271EVO"(ME)
SP1385	Special procedures	Instrument cluster(IC)
SP1386	M16/53 (Left exhaust flap actuator motor)	N127 (Drivetrain control unit)(PTCU)
SP1387	Reset of cold start adaptation values	N3/10-Motor electronics "ME97 AMG" for combustion engine "M156"(ME)
SP1388	Operating time of component "M75/7 (Rear high-voltage battery coolant pump)"	H-Battery management system, rear (master)(BMS)
SP1389	M75/7 (Rear high-voltage battery coolant pump)	H-Battery management system, rear (master)(BMS)

SP1390	Unlock high-voltage component lock.	H-Battery management system, rear (master)(BMS)
SP1391	Reset of control unit "N82/8 (Rear battery management system control unit (slave))"	H-Battery management system, rear (master)(BMS)
SP1392	Road test	Electronic stability program(N30/4)(ESP)
SP1393	ESP® calibration at standstill	Electric stability program(N30/4)(ESP)
SP1394	Initial startup of component "Front left electrical machine"	VL-Front left electrical machine(ELM)
SP1395	FBS3-teach-in processes	VL-Front left electrical machine(ELM)
SP1396	Write tire pressure specified values.	Tire pressure monitor(N88)(TPM)
SP1397	Customer-specific data	Audio or COMAND(Audio)
SP1398	Teach-in processCurrent dateGPS data	Audio or COMAND(Audio)
SP1399	Initial startup of component "Front right electrical machine"	VR-Front right electrical machine(ELM)
SP1400	Initial startup of component "Rear left electrical machine"	HL-Rear left electrical machine(ELM)
SP1401	Initial startup of component "Rear right electrical machine"	HR-Rear right electrical machine(ELM)
SP1402	Bleeding of coolant circuit(Electric drive)	MA-Drivetrain (master)(PTCU)
SP1403	Bleeding of coolant circuit(High-voltage battery)	MA-Drivetrain (master)(PTCU)
SP1404	Check of coolant level of coolant circuit for high-voltage battery	MA-Drivetrain (master)(PTCU)
SP1405	Bedding in new brake pads	Electric parking brake(EFB)
SP1406	Operating time of component "M75/5 (Front high-voltage battery coolant pump)"	V-Battery management system, front (slave)(BMS)
SP1407	M75/5 (Front high-voltage battery coolant pump)	V-Battery management system, front (slave)(BMS)
SP1408	Reset of control unit "N82/7 (Front battery management system control unit (slave))"	V-Battery management system, front (slave)(BMS)
SP1409	Operating time of component "M75/6 (Center high-voltage battery coolant pump)"	M-Battery management system, center (master)(BMS)

SP1410	Measurements before replacement of components High-voltage battery: Writing the offset value: Kilometer reading	M-Battery management system, center (master)(BMS)
SP1411	After replacement of component "High-voltage battery": Writing the offset value: Kilometer reading	M-Battery management system, center (master)(BMS)
SP1412	M75/6 (Center high-voltage battery coolant pump)	M-Battery management system, center (master)(BMS)
SP1413	Reset of control unit "N82/6 (Battery management system control unit (master))"	M-Battery management system, center (master)(BMS)
SP1414	Teach-in process of component "B28/8 (Differential pressure sensor (DPF))"	N3/9-Motor electronics "CR42" for combustion engine "OM651"(CDI)
SP1415	Teach-in process of component "Oxidation catalytic converter"	N3/9-Motor electronics "CR42" for combustion engine "OM651"(CDI)
SP1416	Perform teach-in process for component "Diesel particulate filter".	N3/9-Motor electronics "CR42" for combustion engine "OM651"(CDI)
SP1417	Replace component "Diesel particulate filter".	N3/9-Motor electronics "CDI6" for combustion engine "OM642"(CDI)
SP1418	Y74 (Pressure regulating valve)	N3/9-Motor electronics "CDI6" for combustion engine "OM642"(CDI)
SP1419	B28/8 (DPF differential pressure sensor)	N3/9-Motor electronics "CDI6" for combustion engine "OM642"(CDI)
SP1420	G3/2 (Oxygen sensor upstream of catalytic converter)	N3/9-Motor electronics "CDI6EU5" for combustion engine "OM642"(CDI)
SP1421	Teach in component "Y94 (Quantity control valve)".	N3/9-Motor electronics "CDI" for combustion engine "OM646"(CDI)
SP1422	Teach in used diesel particulate filter.	N3/9-Motor electronics "CDI" for combustion engine "OM646"(CDI)
SP1423	Quick teach-in of the zero quantity calibration values for calibration point 230.0bar	N3/9-Motor electronics "CDI" for combustion engine "OM646"(CDI)
SP1424	Quick teach-in of the zero quantity calibration values for calibration point 600.0bar	N3/9-Motor electronics "CDI" for combustion engine "OM646"(CDI)
SP1425	Number of injection period corrections for all fuel injectors	N3/9-Motor electronics "CDI" for combustion engine "OM646"(CDI)
SP1426	Definition	N15/3-Transmission control for 5 speed transmission(VGS)
SP1427	Information on the adaptation limit values	N15/3-Transmission control for 5 speed transmission(VGS)
SP1428	Display of all adaptation data	N15/3-Transmission control for 5 speed transmission(VGS)
SP1429	Adaptation of the gearshifts	N15/3-Transmission control for 5 speed transmission(VGS)

SP1430	Teach in component "B24/15 (Yaw rate sensor for lateral and longitudinal acceleration)".	Electric stability program(ESP)
SP1431	Activation of control unit "N26/5 (Electric steering lock control unit)"	Electronic ignition lock(EZS)
SP1432	N121 (Trunk lid control control unit)	Trunk lid control(TLC)
SP1433	Resetting of calibration settings	Backup camera(RFK)
SP1434	Reset of operating hours counter	Xenon headlamp, left(XALWA L)
SP1435	Teach-in of stop for boost pressure control flap	N3/10-Motor electronics "SIM271KE20" for combustion engine "M271"(ME)
SP1436	Teach in component "M55 (Intake port shutoff actuator motor)".	N3/9-Motor electronics "CDI41R" for combustion engine "OM626"(CDI)
SP1437	Teach-in process of component "B79/3 (Manual transmission main shifter shaft position sensor)"	N3/9-Motor electronics "CDI41R" for combustion engine "OM626"(CDI)
SP1438	Resetting of learned values of component "B28/8 (DPF differential pressure sensor)"	N3/9-Motor electronics "CDI41R" for combustion engine "OM626"(CDI)
SP1439	Resetting adaptation values of component "Turbocharger"	N3/9-Motor electronics "CDI41R" for combustion engine "OM626"(CDI)
SP1440	Resetting of learned values of component "Low-pressure fuel circuit"	N3/9-Motor electronics "CDI41R" for combustion engine "OM626"(CDI)
SP1441	Teach in diesel particulate filter again.	N3/9-Motor electronics "CDI41R" for combustion engine "OM626"(CDI)
SP1442	Remove and install head restraint.	Electric seat adjustmnet Driver with memory function(ESV Driver)
SP1443	N121/1 (Trunk lid/liftgate control control unit)	Tailgate control(HKS)
SP1444	Normalization of right rear power window	Rear control unit(SG FOND)
SP1445	Normalization of left rear power window	Rear control unit(SG FOND)
SP1446	Normalization of trunk lid control	Rear control unit(SG FOND)
SP1447	Intelligent Light SystemActivation	Left headlamp(SG SW L)
SP1448	Teach-in process of control unit "A80 (Intelligent servo module for DIRECT SELECT)" after updating control unit "N145/1 (Drive Unit control unit)"	Shift module(ISM)
SP1449	Resetting the operating hours counter of component "E2m5 (Right front lamp unit fan motor 2)"	R (Actuation module, LED exterior lighting, right front)(AMLAB)

SP1450	Resetting the operating hours counter of component "E1m5 (Left front lamp unit fan motor 2)"	L (Actuation module, LED exterior lighting, left front)(AMLAB)
SP1451	Resetting of learned values of component "SGR"	Radar sensors control unit(N62/1)(SGR)
SP1452	Teach in component "B24/15 (Yaw rate, lateral and longitudinal acceleration sensor)".	Electric stability program(N30/4)(ESP)
SP1453	Teach in component "ESP® control valves".	Electric stability program(N30/4)(ESP)
SP1454	Teach in component "Electric parking brake".	Electric stability program(N30/4)(ESP)
SP1455	Resetting value "Offset value for steering wheel angle"	Electric stability program(N30/4)(ESP)
SP1456	Resetting value "Wear values"	Electric stability program(N30/4)(ESP)
SP1457	Permanent fault memory	Electric stability program(N30/4)(ESP)
SP1458	Teach in component "S9/1 (Brake light switch)".	Electric stability program(N30/4)(ESP)
SP1459	Check offset value of component "N49 (Steering angle sensor)".	Electric stability program(N30/4)(ESP)
SP1460	Electric parking brake	Electric stability program(N30/4)(ESP)
SP1461	Test of contact of electrical line of ground strap on component "N129/1 (Power electronics control unit)"	Power electronics(SG EM)
SP1462	Regeneration of gasoline particulate filter	N3/10-Motor electronics "MED177" for combustion engine "M276"(ME)
SP1463	Tire pressure loss warning	Electronic stability program(N30/4)(ESP)
SP1464	The contact of the ground strap is faulty.	Power electronics(N129/1)(PE)
SP1465	Commissioning of control unit "N118/2 (CNG control unit)"	N3/10-Motor electronics "MED40CNG" for combustion engine "M270"(ME)
SP1466	Bleeding after replacement of fuel components	N3/10-Motor electronics "MED40CNG" for combustion engine "M270"(ME)
SP1467	Enable natural gas operation after crash event.	N3/10-Motor electronics "MED40CNG" for combustion engine "M270"(ME)
SP1468	Y107/1 (Gas cylinder shutoff valves)	N3/10-Motor electronics "SIM271KECNG" for combustion engine "M271CNG"(ME)
SP1469	Enable natural gas operation	N3/10-Motor electronics "SIM271KECNG" for combustion engine "M271CNG"(ME)

SP1470	PRESSURE CONTROL	N3/10-Motor electronics "SIM271KECNG" for combustion engine "M271CNG"(ME)
SP1471	Injector injection quantity adjustment(Manual entry)	N3/9-Motor electronics "CDI61" for combustion engine "OM642"(CDI)
SP1472	Teach-in process of component "M16/53 (Left exhaust flap actuator motor)"	Motor electronics(CDI)
SP1473	Teach-in process of component "Y77/6 (Boost pressure regulator)"	Motor electronics(CDI)
SP1474	Reset learned values for diagnosis of CAN bus through control unit "N3/49 (CDI control unit)".	Motor electronics(CDI)
SP1475	Teach-in process after replacement of component "NOx storage catalytic converter"	Motor electronics(CDI)
SP1476	Resetting of learned values of component "B92/11 (Left outer rear bumper integrated radar sensor)"	Outer left rear integrated radar sensor (B92/11)(IRS HLA)
SP1477	Resetting of learned values of component "B92/6 (Right outer rear bumper integrated radar sensor)"	Outer right rear integrated radar sensor (B92/6)(IRS HRA)
SP1478	B84/3 (Reversing camera)	Backup camera(RFK)
SP1479	Resetting of learned values of component "A108 (Active Brake Assist controller unit)"	Control unit COLLISION PREVENTION ASSIST(SG AWF)
SP1480	Reset of frequency counter "Emergency stop"	Control unit COLLISION PREVENTION ASSIST(SG AWF)
SP1481	Resetting of calibration values	Active body control(N51/2)(ABC)
SP1482	Calibration of stroke of suspension struts	Active body control(N51/2)(ABC)
SP1483	Vehicle load condition comparison	Active body control(N51/2)(ABC)
SP1484	Calibration of component "B24/12 (ABC lateral acceleration sensor)"	Active body control(N51/2)(ABC)
SP1485	Initial startup after repair	Active body control(N51/2)(ABC)
SP1486	Control unit reset	Active body control(N51/2)(ABC)
SP1487	Commissioning of control unit "E1n8 (Actuation module 2, LED exterior lighting, left front)"	Left xenon headlamp(E1n1)(XALWA L)
SP1488	Commissioning of control unit "E1n7 (Actuation module, LED exterior lighting, left front)"	Left xenon headlamp(E1n1)(XALWA L)
SP1489	Commissioning of control unit "E2n8 (Actuation module 2, LED exterior lighting, right front)"	Right xenon headlamp(E2n1)(XALWA R)

SP1490	Commissioning of control unit "E2n7 (Actuation module, LED exterior lighting, right front)"	Right xenon headlamp(E2n1)(XALWA R)
SP1491	List of paired devices Remote control Headphones	Display in left rear passenger compartment(D FOL)
SP1492	Pairing'Handset'	Controller unit Rear entertainment system(AVE H)
SP1493	Check component "B37/1 (Pedal angle sensor)".	Regenerative braking system(RBS)
SP1494	Check component "S9/1 (Brake light switch)".	Regenerative braking system(RBS)
SP1495	Teach-in process of component "N158 (Park pawl control unit)"	Common powertrain controller(N127)(PTCU)
SP1496	Teach-in process of component "M56 (Vacuum pump)"	Common powertrain controller(N127)(PTCU)
SP1497	Perform control unit reset.	Crash sensor high-voltage battery(CSHVB)
SP1498	Check electronic accelerator pedal.	N127 (Drivetrain control unit)(PTCU)
SP1499	Electrical contacting of coolant pumps via LIN bus	N127 (Drivetrain control unit)(PTCU)
SP1500	Electrical contacting of fans	N127 (Drivetrain control unit)(PTCU)
SP1501	Electrical contacting of relays	N127 (Drivetrain control unit)(PTCU)
SP1502	Electrical contacting of coolant pumps	N127 (Drivetrain control unit)(PTCU)
SP1503	Electrical contacting of valves	N127 (Drivetrain control unit)(PTCU)
SP1504	Electrical contacting of PTC heater "High voltage"	N127 (Drivetrain control unit)(PTCU)
SP1505	Function illumination(Author data)	Shift module(ISM)
SP1506	Teach-in process after replacement of component "Y27/9 (Exhaust gas recirculation actuator)"	N3/30-Motor electronics "CDI6" for combustion engine "OM642"(CDI)
SP1507	Activate radio code.	Audio or COMAND(A2-A40/3)(AUDIO)
SP1508	Fixed assignment of control unit to vehicle	Electronic ignition switch(EZS)
SP1509	Reactivate key.	Electronic ignition switch(EZS)

SP1510	Revocably deactivate key.	Electronic ignition switch(EZS)
SP1511	Irrevocably deactivate key.	Electronic ignition switch(EZS)
SP1512	Calibration of component "B24/8 (Steering angle sensor)"	Electric stability program(ESP)
SP1513	Switch off solenoid valve for torque converter lockup clutch	Electronic transmission control(ETC)
SP1514	Switch off the incline recognition for dynamometer mode	Electronic transmission control(ETC)
SP1515	Adaptation values of shift 1-2	Electronic transmission control(ETC)
SP1516	Adaptation values of shift 2-3	Electronic transmission control(ETC)
SP1517	Adaptation values of shift 3-4	Electronic transmission control(ETC)
SP1518	Adaptation values of shift 4-5	Electronic transmission control(ETC)
SP1519	Adaptation values of shift 5-4	Electronic transmission control(ETC)
SP1520	Adaptation values of shift 4-3	Electronic transmission control(ETC)
SP1521	Adaptation values of shift 3-2	Electronic transmission control(ETC)
SP1522	Adaptation values of shift 2-1	Electronic transmission control(ETC)
SP1523	Display all adaptation data	Electronic transmission control(ETC)
SP1524	Torque converter lockup clutch	Electronic transmission control(ETC)
SP1525	Test of remote control key	All Activity Module(AAM)
SP1526	Erase crash memory.	All Activity Module(AAM)
SP1527	Learn radio code of a new transmitter key.	All Activity Module(AAM)
SP1528	Perform windscreen adaptation for rain sensor.	All Activity Module(AAM)
SP1529	Learn replacement key.	Drive authorization system(DAS)

SP1530	Teach-in of camshaft positions	ME 9.7 (AMG)-Motor electronics 9.7 (AMG)
SP1531	Default initialization	Engine control monolith(ECM)
SP1532	Performing sensor rotor adaptation	Engine control monolith(ECM)
SP1533	Resetting of mixture adaptation	Gasoline engine control(ME SFI)
SP1534	Ignition	Gasoline engine control(ME SFI)
SP1535	Fuel quantity	Gasoline engine control(ME SFI)
SP1536	Idle speed set value	Gasoline engine control(ME SFI)
SP1537	Idling specified speed with selector lever in position P or N	Gasoline engine control(ME SFI)
SP1538	Idling specified speed with gear engaged	Gasoline engine control(ME SFI)
SP1539	CO setting for vehicles without TWC	Gasoline engine control(ME SFI)
SP1540	Dwell time	Gasoline engine control(ME SFI)
SP1541	Desensibilize shutoff threshold of smooth engine running.	Gasoline engine control(ME SFI)
SP1542	Electric suction fan for engine or air conditioning	Gasoline engine control(ME SFI)
SP1543	Tyre pressure loss alarm (activated)	Electronic stability program(ESP)
SP1544	Activate control module N26/5 (Electric steering lock control module)	Electronic ignition switch(EZS)
SP1545	Calibration of the torque sensor	Electrical power steering(ES)
SP1546	Teach in component B79/2 (Transmission neutral position sensor).	Motor electronics(ME SFI)
SP1547	Teach-in process after replacement of component diesel particulate filter	Common Rail Diesel Injection(CDI)
SP1548	Teach-in process after replacement of component (B28/8(Differential pressure sensor(DPF)	Common Rail Diesel Injection(CDI)
SP1549	Teach-in process after replacement of component G3/1(O2 sensor downstream TWC)	Common Rail Diesel Injection(CDI)

SP1550	Teach-in process after replacement of component Y74(Pressure control valve)	Common Rail Diesel Injection(CDI)
SP1551	Teach-in process after replacement of component Y100/2(Boost pressure regulator)	Common Rail Diesel Injection(CDI)
SP1552	Learning of the recirculated air flap stop	Motor electronics(ME SFI)
SP1553	Resetting of sensor adaptation	Motor electronics(ME SFI)
SP1554	Teaching in of swirl flap stop	Motor electronics(ME SFI)
SP1555	Exhaust gas recirculation valve teach-in	Motor electronics(ME SFI)
SP1556	Initial startup with manual settings input for new control unit(For example: The previous control unit can no longer be read.)	Electric seat adjustment driver (with memory)(ESV driver)
SP1557	Perform oil change.	Instrument cluster with maintenance interval display(ICM)
SP1558	Reinitialize ASSYST.	Instrument cluster with maintenance interval display(ICM)
SP1559	Replacement component Diesel particulate filter	Common Rail Diesel Injection3(CDI 3)
SP1560	Setting of short stroke position of left rear window	Rear control module(RCM)
SP1561	Setting of short stroke position of right rear window	Rear control module(RCM)
SP1562	CNG compressed natural gasMode	Motor electronics(ME SFI)
SP1563	Resetting of mixture adaptation(CNG compressed natural gas)	Motor electronics(ME SFI)
SP1564	Deactivate system 'SBC'.	Sensotronic Brake Control(SBC)
SP1565	Activate system 'SBC'.	Sensotronic Brake Control(SBC)
SP1566	Bleed brake system.	Sensotronic Brake Control(SBC)
SP1567	Pneumatic tests	Suspension
SP1568	Confirm overall maintenance.	PLUS Active Service System(ASSYST PLUS)
SP1569	Reset mistakenly confirmed overall maintenance.	PLUS Active Service System(ASSYST PLUS)

SP1570	PML speed-sensitive power steering	Adaptive Brake(ABR)
SP1571	Learning component'Y94 (Quantity control valve)'	Common Rail Diesel Injection(CDID)
SP1572	Reset values of quantity mean value adaptation	Common Rail Diesel Injection(CDID)
SP1573	Teach in used diesel particulate filter	Common Rail Diesel Injection(CDID)
SP1574	Reset inadvertently performed oil change.	Instrument cluster with maintenance interval display(ICM)
SP1575	Setting of limit position of excess force limiter	Overhead control panel(OCP)
SP1576	Coding of the close-via-tilt function	Overhead control panel(OCP)
SP1577	Coding of sliding/tilting roof function of 'automatic operation'	Overhead control panel(OCP)
SP1578	AC compressor	Automatic air conditioning(AAC)
SP1579	Installation position of brake cables	Electric parking brake(EPB)
SP1580	Operate parking brake.	Electric parking brake(EPB)
SP1581	Write wheel electronics identification number.	Tire pressure monitor(TPM)
SP1582	Write specified tire pressure values.	Tire pressure monitor(TPM)
SP1583	Disable key or key track.	Electronic ignition switch(EZS)
SP1584	Disable key or key track with the workshop key.	Electronic ignition switch(EZS)
SP1585	Once again authorize key or key track.	Electronic ignition switch(EZS)
SP1586	Program replacement keys.	Electronic ignition switch(EZS)
SP1587	Activate control module N73 (EIS [EZS] control unit).	Electronic ignition switch(EZS)
SP1588	Tire pressure loss warner	Adaptive Brake(ABR)
SP1589	Erase zero point offset error of component Steering angle sensor.	Adaptive Brake(ABR)

SP1590	Calibration of control unit ABR	Adaptive Brake(ABR)
SP1591	Initial startup with manual settings input for new control unit	Active body control(N51/2)(ABC)
SP1592	Steering column module	Driver signal acquisition and actuation module(Dr side SAM)
SP1593	Initialization of power closing	Door control module front left(DCM FL)
SP1594	Normalization of all seat adjustment motors	Electric seat adjustment front left(ESA FL)
SP1595	Change standard distance of travel.	Electric seat adjustment front left(ESA FL)
SP1596	Change minimum distance of travel.	Electric seat adjustment front left(ESA FL)
SP1597	Adjust end of forward range.	Electric seat adjustment front left(ESA FL)
SP1598	Adjust beginning of rearward range	Electric seat adjustment front left(ESA FL)
SP1599	ASSYST settings	Active Service System(ASSYST)
SP1600	Re-initialization of AdBlue range	Active Service System(ASSYST)
SP1601	Check of adjustment range of positioning motors	Automatic air conditioning(AAC)
SP1602	Teach-in of rotary potentiometers for the air outlets	Automatic air conditioning(AAC)
SP1603	Learning component A8/3 (STH radio remote control transmitter)	Stationary heater with remote control(STH)
SP1604	Tourist mode-Adaptation of headlamps from left-hand traffic system to right-hand traffic system or vice versa.	Xenon headlamp, left(XALWA L)
SP1605	Reset lambda adaptation	Motor electronics 2.7.2(ME 2.7.2)
SP1606	Teach in ethanol portion in fuel.	Motor electronics for direct injection 17.7(MED 17.7)
SP1607	Teach-in process for component M16/45 (EGR [ARF] actuator motors)	Motor electronics for direct injection 17.7(MED 17.7)
SP1608	Resetting the reading of the counter for ethanol teach-in processes	Motor electronics for direct injection 17.7(MED 17.7)
SP1609	Quick test of mixture adaptation	Motor electronics for direct injection 17.7(MED 17.7)

SP1610	Teach-in process for anti-pinch protection function of panoramic sliding sunroofRoller sun blind	Panoramic sliding roof(Interior CAN bus)(PSD)
SP1611	Normalizing-Rear left and right	Electric seat adjustment rear(ESA R)
SP1612	Test procedure for voltage comparison	Electric motor control unit(SG EM)
SP1613	Test procedure for rpm comparison	Electric motor control unit(SG EM)
SP1614	Injector injection quantity adjustment (manual input)	Common Rail Diesel Injection3(CDI 3)
SP1615	Injector injection quantity adjustment (input via data scanner)	Common Rail Diesel Injection3(CDI 3)
SP1616	Regeneration of diesel particulate filter	Common Rail Diesel Injection3(CDI 3)
SP1617	Teach in component M16/6 (Throttle valve actuator).	Common Rail Diesel Injection3(CDI 3)
SP1618	Teach in component M55 (Inlet port shutoff motor).	Common Rail Diesel Injection3(CDI 3)
SP1619	Teach in component Y77/1 (Charge pressure positioner).	Common Rail Diesel Injection3(CDI 3)
SP1620	Resetting the lambda values	Common Rail Diesel Injection3(CDI 3)
SP1621	Pressure reservoir: check pretension pressure.	Sensotronic Brake Control(SBC)
SP1622	Inspect brake system for air.	Sensotronic Brake Control(SBC)
SP1623	Check operating time of component A7/3 (SBC hydraulic unit).	Sensotronic Brake Control(SBC)
SP1624	Check coding and correct if necessary.	Sensotronic Brake Control(SBC)

# Coding Functions List

No.	Functions Name	System Name
CD0001	All codes	AAC-Automatic air conditioning
CD0002	All coding settings	AAC-Automatic air conditioning
CD0003	Read coding and change if necessary.	AAC-Automatic air conditioning
CD0004	Special settings	AAC-Automatic air conditioning
CD0005	This setting should only be changed if requested by customer.	AAC-Automatic air conditioning
CD0006	Workshop coding	AAC-Automatic air conditioning
CD0007	Workshop coding1	AAC-Automatic air conditioning
CD0008	Workshop coding2	AAC-Automatic air conditioning
CD0009	Automatic child seat recognition(AKSE)/Seat occupied recognition	AB-Airbag
CD0010	Buckle emergency tensioning retractor	AB-Airbag
CD0011	Disposal detonation	AB-Airbag
CD0012	Emergency tensioning retractor	AB-Airbag
CD0013	Emergency tensioning retractor(FRONT)	AB-Airbag
CD0014	Kneebags	AB-Airbag
CD0015	NECK-PRO head restraint	AB-Airbag
CD0016	Passenger airbag	AB-Airbag
CD0017	Pyrofuse	AB-Airbag
CD0018	Read coding and change if necessary.	AB-Airbag

CD0019	Rear seat belts	AB-Airbag
CD0020	Seat belt buckle switch(FRONT)	AB-Airbag
CD0021	Seat belt buckles	AB-Airbag
CD0022	Seat belt reminder warning for front passenger	AB-Airbag
CD0023	Seat fittings	AB-Airbag
CD0024	Seat mat type 'Passenger'	AB-Airbag
CD0025	Settings	AB-Airbag
CD0026	Side airbag deactivation [USA]	AB-Airbag
CD0027	Side airbags	AB-Airbag
CD0028	Side airbags[FRONT PASSENGER]	AB-Airbag
CD0029	Special protection	AB-Airbag
CD0030	Steering variant	AB-Airbag
CD0031	Vehicle equipment	AB-Airbag
CD0032	Vehicle model	AB-Airbag
CD0033	Window airbags	AB-Airbag
CD0034	Additional settings	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)
CD0035	Installation state	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)
CD0036	Radio parameters	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)
CD0037	Specified configuration of MOST components	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)

CD0038	Read coding and change if necessary.	AHE-Trailer recognition
CD0039	Variant coding	AHE-Trailer recognition
CD0040	Brake data	ASSYST PLUS-PLUS Active Service System
CD0041	Current brake lining thickness	ASSYST PLUS-PLUS Active Service System
CD0042	Internal ASSYST PLUS data	ASSYST PLUS-PLUS Active Service System
CD0043	Service work sequence	ASSYST PLUS-PLUS Active Service System
CD0044	ATA alarm signal siren	ATA-Anti theft alarm system
CD0045	ATA basic function	ATA-Anti theft alarm system
CD0046	Installation state	AUDIO
CD0047	Navigation	AUDIO
CD0048	Navigation parameters	AUDIO
CD0049	Radio parameters	AUDIO
CD0050	Rear screen	AUDIO
CD0051	TV parameters(Shut off criteria)	AUDIO
CD0052	All codes	C AAC-Convenience automatic air conditioning/AAC-Automatic air conditioning/HEAT-Automatic heater
CD0053	Special settings	C AAC-Convenience automatic air conditioning/AAC-Automatic air conditioning/HEAT-Automatic heater
CD0054	This setting should only be changed if requested by customer.	C AAC-Convenience automatic air conditioning/AAC-Automatic air conditioning/HEAT-Automatic heater
CD0055	Workshop coding	C AAC-Convenience automatic air conditioning/AAC-Automatic air conditioning/HEAT-Automatic heater
CD0056	Coding	CDI 3-Common Rail Diesel Injection3

CD0057	Read coding and change if necessary.	CDI 3-Common Rail Diesel Injection3
CD0058	SCN(Software Calibration Number)	CDI 3-Common Rail Diesel Injection3
CD0059	Variant coding according to factory data	CDI 3-Common Rail Diesel Injection3
CD0060	All codes	CGW-Central gateway
CD0061	Factory settings	COMAND
CD0062	Language settings	COMAND
CD0063	Menu settings	COMAND
CD0064	Menu settings()	COMAND
CD0065	AUX input	COMAND or AUDIO
CD0066	Language settings	COMAND or AUDIO
CD0067	Navigation data	COMAND or AUDIO
CD0068	Read coding and change if necessary.	DCM FL-Door control module front left
CD0069	Read coding and change if necessary.	DCM FR-Door control module front right
CD0070	Read coding and change if necessary.	DCM RL-Door control module rear left
CD0071	Read coding and change if necessary.	DCM RR-Door control module rear right
CD0072	Refrigerant' pressure sensor	Dr side SAM-Driver signal acquisition and actuation module
CD0073	Air conditioning	Dr side SAM-Driver signal acquisition and actuation module
CD0074	Auxiliary fan Coolant	Dr side SAM-Driver signal acquisition and actuation module
CD0075	Blower motor in control module box	Dr side SAM-Driver signal acquisition and actuation module

CD0076	Coding of model series	Dr side SAM-Driver signal acquisition and actuation module
CD0077	Curve illumination	Dr side SAM-Driver signal acquisition and actuation module
CD0078	Engine version	Dr side SAM-Driver signal acquisition and actuation module
CD0079	Equipment	Dr side SAM-Driver signal acquisition and actuation module
CD0080	Exterior lighting	Dr side SAM-Driver signal acquisition and actuation module
CD0081	Footwell lighting	Dr side SAM-Driver signal acquisition and actuation module
CD0082	Gear display	Dr side SAM-Driver signal acquisition and actuation module
CD0083	Headlamp cleaning system	Dr side SAM-Driver signal acquisition and actuation module
CD0084	Heated steering wheel	Dr side SAM-Driver signal acquisition and actuation module
CD0085	Model designation(Only with code 336)	Dr side SAM-Driver signal acquisition and actuation module
CD0086	Oil cooler relay	Dr side SAM-Driver signal acquisition and actuation module
CD0087	Signal Terminal 61	Dr side SAM-Driver signal acquisition and actuation module
CD0088	Steering column module	Dr side SAM-Driver signal acquisition and actuation module
CD0089	Turning lamps	Dr side SAM-Driver signal acquisition and actuation module
CD0090	Washer nozzle heater	Dr side SAM-Driver signal acquisition and actuation module
CD0091	Windshield wiper	Dr side SAM-Driver signal acquisition and actuation module
CD0092	Wiper rest heater	Dr side SAM-Driver signal acquisition and actuation module
CD0093	Wiper system	Dr side SAM-Driver signal acquisition and actuation module
CD0094	Read coding and change if necessary.	EPB-Electric parking brake

CD0095	Variant coding	ESA FL-Electric seat adjustment front left
CD0096	Variant coding	ESA FR-Electric seat adjustment front right
CD0097	Read coding and change if necessary.	ESA R-Electric seat adjustment rear
CD0098	Variant coding	ESA R-Electric seat adjustment rear
CD0099	Read coding and change if necessary.	ESA driver-Electric seat adjustment driver (with memory)
CD0100	Read coding and change if necessary.	ESA passenger-Electric seat adjustment passenger
CD0101	Read coding and change if necessary.	ESM-Electronic selector module
CD0102	Distronic	ESP-Electronic stability program
CD0103	ESP-Trailer stabilization	ESP-Electronic stability program
CD0104	Speed-sensitive power steering	ESP-Electronic stability program
CD0105	AIRmatic/ABC active body control	EZS-Electronic ignition switch
CD0106	ATA interior motion / towing sensor	EZS-Electronic ignition switch
CD0107	ATA interior motion sensor	EZS-Electronic ignition switch
CD0108	ATA towing sensor	EZS-Electronic ignition switch
CD0109	All codes	EZS-Electronic ignition switch
CD0110	Automatic closing of front windows	EZS-Electronic ignition switch
CD0111	Automatic closing of rear windows	EZS-Electronic ignition switch
CD0112	Automatic dimming mirror	EZS-Electronic ignition switch
CD0113	Automatic driving lights on	EZS-Electronic ignition switch

CD0114	COMAND or AUDIO	EZS-Electronic ignition switch
CD0115	Cellular telephone	EZS-Electronic ignition switch
CD0116	Central gateway functionality	EZS-Electronic ignition switch
CD0117	Climate control	EZS-Electronic ignition switch
CD0118	Convenience systems	EZS-Electronic ignition switch
CD0119	DISTRONIC	EZS-Electronic ignition switch
CD0120	Driving lights	EZS-Electronic ignition switch
CD0121	Engine cooling	EZS-Electronic ignition switch
CD0122	Fuel cell or electric drive	EZS-Electronic ignition switch
CD0123	Headlamp cleaning system	EZS-Electronic ignition switch
CD0124	Headlamp range adjustment	EZS-Electronic ignition switch
CD0125	Keyless Go	EZS-Electronic ignition switch
CD0126	Lane recognition	EZS-Electronic ignition switch
CD0127	Manual recirculated air control	EZS-Electronic ignition switch
CD0128	Multifunction steering wheel	EZS-Electronic ignition switch
CD0129	National version	EZS-Electronic ignition switch
CD0130	Parktronic	EZS-Electronic ignition switch
CD0131	Power locking	EZS-Electronic ignition switch
CD0132	Rear air conditioning	EZS-Electronic ignition switch

CD0133	Rear window screen	EZS-Electronic ignition switch
CD0134	Relocking/Vehicle speed threshold for automatic locking	EZS-Electronic ignition switch
CD0135	Seat adjustment	EZS-Electronic ignition switch
CD0136	Series and engine version	EZS-Electronic ignition switch
CD0137	Set status CAN bus	EZS-Electronic ignition switch
CD0138	Sound system	EZS-Electronic ignition switch
CD0139	Special vehicle multifunction control module (SVMCM)	EZS-Electronic ignition switch
CD0140	Special vehicles	EZS-Electronic ignition switch
CD0141	Standard setting: Climate control	EZS-Electronic ignition switch
CD0142	Stationary heater or Telestart	EZS-Electronic ignition switch
CD0143	Sun sensor	EZS-Electronic ignition switch
CD0144	Telecommunications	EZS-Electronic ignition switch
CD0145	Telematic service 'Remote door unlocking' (TELE AID)	EZS-Electronic ignition switch
CD0146	Tire pressure monitor	EZS-Electronic ignition switch
CD0147	Trailer	EZS-Electronic ignition switch
CD0148	Trailer lighting	EZS-Electronic ignition switch
CD0149	Trailer recognition	EZS-Electronic ignition switch
CD0150	Trailer recognition/Trailer lighting	EZS-Electronic ignition switch
CD0151	Transmission	EZS-Electronic ignition switch

CD0152	Turn signal confirmation for opening and closing via transmitter key	EZS-Electronic ignition switch
CD0153	Vehicle speed signal threshold for automatic locking	EZS-Electronic ignition switch
CD0154	Voice control system	EZS-Electronic ignition switch
CD0155	Washer system	EZS-Electronic ignition switch
CD0156	Windscreen heater	EZS-Electronic ignition switch
CD0157	Wiper system	EZS-Electronic ignition switch
CD0158	Wipers	EZS-Electronic ignition switch
CD0159	Read coding.	FSCU-Fuel pump
CD0160	Read coding and change if necessary.	FSCU-Fuel pump AMG
CD0161	Read coding and change if necessary.	HRA-Automatic headlamp range adjustment and headlamp control
CD0162	Configuration for key 1	IC-Instrument cluster
CD0163	Configuration for key 2	IC-Instrument cluster
CD0164	Configuration for key 3	IC-Instrument cluster
CD0165	Current menu setting	IC-Instrument cluster
CD0166	Customer-specific settings	IC-Instrument cluster
CD0167	Trip computer settings	IC-Instrument cluster
CD0168	Codings specific for instrument cluster	ICM-Instrument cluster with maintenance interval display
CD0169	Configuration for key 1	ICM-Instrument cluster with maintenance interval display
CD0170	Configuration for key 2	ICM-Instrument cluster with maintenance interval display

CD0171	Configuration for key 3	ICM-Instrument cluster with maintenance interval display
CD0172	Display coding	ICM-Instrument cluster with maintenance interval display
CD0173	Factory settings	ICM-Instrument cluster with maintenance interval display
CD0174	RDK tire pressure control	ICM-Instrument cluster with maintenance interval display
CD0175	Special equipment	ICM-Instrument cluster with maintenance interval display
CD0176	Read coding and change if necessary.	KG-KEYLESS GO
CD0177	Read coding and change if necessary.	KG-Keyless Go
CD0178	Coding	ME 9.7-Motor electronics 9.7
CD0179	Coding	ME SF 17.7-Motor electronics 17.7
CD0180	Read coding and change if necessary.	ME SFI 2.0-Motor electronics 2.0
CD0181	Special vehicle special protection(B4):Read coding and change if necessary.	ME SFI 2.0-Motor electronics 2.0
CD0182	Special vehicle special protection(B6/B7):Read coding and change if necessary.	ME SFI 2.0-Motor electronics 2.0
CD0183	CVN(Calibration verification number)	ME SFI 2.8-Motor electronics 2.8
CD0184	Coding	ME SFI 2.8-Motor electronics 2.8
CD0185	Read coding and change if necessary.	ME SFI 2.8-Motor electronics 2.8
CD0186	Read coding.	ME SFI 2.8-Motor electronics 2.8
CD0187	SCN(Software Calibration Number)	ME SFI 2.8-Motor electronics 2.8
CD0188	Special vehicle special protection:Read coding and change if necessary.	ME SFI 2.8-Motor electronics 2.8
CD0189	CVN(Calibration verification number)	ME SFI-CNG compressed natural gas

CD0190	Coding	ME SFI-CNG compressed natural gas
CD0191	SCN(Software Calibration Number)	ME SFI-CNG compressed natural gas
CD0192	Variant coding according to factory data	ME SFI-CNG compressed natural gas
CD0193	CVN(Calibration verification number)	ME SFI-Gasoline engine control
CD0194	Coding	ME SFI-Gasoline engine control
CD0195	Coding according to plant data	ME SFI-Gasoline engine control
CD0196	SCN(Software Calibration Number)	ME SFI-Gasoline engine control
CD0197	Coding	ME SFI-Motor electronics
CD0198	Read coding and change if necessary.	ME SFI-Motor electronics
CD0199	Read coding.	ME SFI-Motor electronics
CD0200	CVN(Calibration verification number)	MED 17.7-Motor electronics for direct injection 17.7
CD0201	Coding	MED 17.7-Motor electronics for direct injection 17.7
CD0202	SCN(Software Calibration Number)	MED 17.7-Motor electronics for direct injection 17.7
CD0203	Type approval number	MED 17.7-Motor electronics for direct injection 17.7
CD0204	Coding	MED 9.7-Motor electronics for direct injection 9.7
CD0205	Additional equipment	MSS-Special vehicle multifunction control module
CD0206	Advanced options	MSS-Special vehicle multifunction control module
CD0207	Full alarm	MSS-Special vehicle multifunction control module
CD0208	Higher-priority alarm options	MSS-Special vehicle multifunction control module

CD0209	Odometer	MSS-Special vehicle multifunction control module
CD0210	Options	MSS-Special vehicle multifunction control module
CD0211	Radio help call	MSS-Special vehicle multifunction control module
CD0212	Read the coding of control module ZGW.	MSS-Special vehicle multifunction control module
CD0213	Run-on times	MSS-Special vehicle multifunction control module
CD0214	Silent alarm	MSS-Special vehicle multifunction control module
CD0215	Undervoltage value	MSS-Special vehicle multifunction control module
CD0216	Anti-pinch protection	OCP-Overhead control panel
CD0217	Automatic interior mirror dimming	OCP-Overhead control panel
CD0218	Close-via-tilt function	OCP-Overhead control panel
CD0219	Closing of tilting/sliding roof when it rains	OCP-Overhead control panel
CD0220	Coding of sliding/tilting roof function of 'automatic operation'	OCP-Overhead control panel
CD0221	Interior lamp-Actuation	OCP-Overhead control panel
CD0222	Light sensor	OCP-Overhead control panel
CD0223	Panoramic sliding roof	OCP-Overhead control panel
CD0224	Parameterization and windshield adaptation	OCP-Overhead control panel
CD0225	Presafe	OCP-Overhead control panel
CD0226	Read coding and change if necessary.	OCP-Overhead control panel
CD0227	Read coding and change if necessary.(Panoramic sliding roof)	OCP-Overhead control panel

CD0228	Read coding and change if necessary.(Sliding/tilting roof)	OCP-Overhead control panel
CD0229	Roller sun blind	OCP-Overhead control panel
CD0230	Sliding/tilting roof	OCP-Overhead control panel
CD0231	Tilting/sliding roof memory feature	OCP-Overhead control panel
CD0232	Central locking	PSE-Pneumatic system equipment
CD0233	Childproof locks	PSE-Pneumatic system equipment
CD0234	Emergency opening	PSE-Pneumatic system equipment
CD0235	Factory settings Trunk lid remote closing	PSE-Pneumatic system equipment
CD0236	Head restraint adjustment	PSE-Pneumatic system equipment
CD0237	Multicontour backrests	PSE-Pneumatic system equipment
CD0238	Power locking	PSE-Pneumatic system equipment
CD0239	Trunk interior button(1)	PSE-Pneumatic system equipment
CD0240	Trunk interior button(2)	PSE-Pneumatic system equipment
CD0241	Trunk lid remote closing	PSE-Pneumatic system equipment
CD0242	Trunk lid remote release	PSE-Pneumatic system equipment
CD0243	License plate bracket	PTS-PARKTRONIC
CD0244	Steering version	PTS-PARKTRONIC
CD0245	Trailer coupling	PTS-PARKTRONIC
CD0246	Warning signal-Configuration	PTS-PARKTRONIC

CD0247	License plate bracket	PTS-Parktronic system
CD0248	PTS switch	PTS-Parktronic system
CD0249	ROELight Configuration	PTS-Parktronic system
CD0250	Rear warning elements	PTS-Parktronic system
CD0251	Trailer coupling	PTS-Parktronic system
CD0252	Vehicle version	PTS-Parktronic system
CD0253	Warning signal-Configuration	PTS-Parktronic system
CD0254	Front seat heater	Pass side SAM-Passenger-side signal acquisition and actuation module
CD0255	Radiator blind	Pass side SAM-Passenger-side signal acquisition and actuation module
CD0256	Side lamp Version	Pass side SAM-Passenger-side signal acquisition and actuation module
CD0257	Turning lamps	Pass side SAM-Passenger-side signal acquisition and actuation module
CD0258	ATA National variant coding	REAR SAM-Rear signal acquisition and actuation module
CD0259	ATA Volume control:Warning buzzer(USA)	REAR SAM-Rear signal acquisition and actuation module
CD0260	Ambiance lighting(Code 877)	REAR SAM-Rear signal acquisition and actuation module
CD0261	Battery sensor	REAR SAM-Rear signal acquisition and actuation module
CD0262	Battery sensor LIN bus	REAR SAM-Rear signal acquisition and actuation module
CD0263	Cigarette lighter	REAR SAM-Rear signal acquisition and actuation module
CD0264	Diesel particulate filter	REAR SAM-Rear signal acquisition and actuation module
CD0265	EDW anti-theft alarm	REAR SAM-Rear signal acquisition and actuation module

CD0266	Easy Entry	REAR SAM-Rear signal acquisition and actuation module
CD0267	Easy Entry/Rear seat belt buckle switch(Code U01)	REAR SAM-Rear signal acquisition and actuation module
CD0268	Electric rear window curtain	REAR SAM-Rear signal acquisition and actuation module
CD0269	Equipment version	REAR SAM-Rear signal acquisition and actuation module
CD0270	Flashing stop lamp	REAR SAM-Rear signal acquisition and actuation module
CD0271	LED'Trailer lighting'	REAR SAM-Rear signal acquisition and actuation module
CD0272	Light	REAR SAM-Rear signal acquisition and actuation module
CD0273	Miscellaneous	REAR SAM-Rear signal acquisition and actuation module
CD0274	Model series	REAR SAM-Rear signal acquisition and actuation module
CD0275	Rear foglight	REAR SAM-Rear signal acquisition and actuation module
CD0276	Rear head restraint lowering	REAR SAM-Rear signal acquisition and actuation module
CD0277	Rear screen	REAR SAM-Rear signal acquisition and actuation module
CD0278	Rear-end door lock	REAR SAM-Rear signal acquisition and actuation module
CD0279	Relays Seat adjustment	REAR SAM-Rear signal acquisition and actuation module
CD0280	Assignment of control unit to model series	REDC-Rear end door closing control module
CD0281	Read coding and change if necessary.	REDC-Rear end door closing control module
CD0282	Special equipment 'Spare wheel carrier'	REDC-Rear end door closing control module
CD0283	Read coding and change if necessary.	RWT-Rear end door control module
CD0284	Read coding and change if necessary.	RevETR LF-Left front reversible emergency tensioning retractor

CD0285	Vehicle equipment	RevETR LF-Left front reversible emergency tensioning retractor
CD0286	Read coding and change if necessary.	RevETR RF-Right front reversible emergency tensioning retractor
CD0287	Vehicle equipment	RevETR RF-Right front reversible emergency tensioning retractor
CD0288	Read coding and change if necessary.(Only for special protection vehicles)	SAM F-Signal acquisition and actuation module front
CD0289	Basic setting(N10 (SAM control unit))	SAM-Signal acquisition and actuation module
CD0290	Light sensor	SAM-Signal acquisition and actuation module
CD0291	Rear foglight(National version)	SAM-Signal acquisition and actuation module
CD0292	CVN(Calibration verification number)	SCR-Selective Catalytic Reduction
CD0293	Coding according to plant data	SCR-Selective Catalytic Reduction
CD0294	SCN(Software Calibration Number)	SCR-Selective Catalytic Reduction
CD0295	Type approval number	SCR-Selective Catalytic Reduction
CD0296	Read coding and change if necessary.	TLC-Trunk lid control
CD0297	Read coding and change if necessary.	TPM-Tire pressure monitor
CD0298	National variant coding	TV-TV tuner(AGW)
CD0299	PAL/NTSC	TV-TV tuner(AGW)
CD0300	Read coding and change if necessary.	UCP-Upper control panel
CD0301	Coding according to plant data:Read coding and change if necessary.	XALWA L-Xenon headlamp, left
CD0302	Display of coding data	XALWA L-Xenon headlamp, left
CD0303	Read coding and change if necessary.	XALWA L-Xenon headlamp, left

CD0304	Display of SCN	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
CD0305	Display of CVN	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
CD0306	Display of model check number	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
CD0307	Writing of the VIN	Motor electronics "CDID3" for combustion engine "OM651"(N3/9)(CDI)
CD0308	Initial startup	Emergency call system(E call [Europe])
CD0309	Current menu settings	Instrument cluster(IC)
CD0310	Transfer of manufacturer default settings	Instrument cluster(IC)
CD0311	Oil grade factor	Instrument cluster(IC)
CD0312	Customer-specific settings	Instrument cluster(IC)
CD0313	Subsequent adjustment of resistance of GSM antenna	Communication module Telematics services(KOMO)
CD0314	Language setting	Communication module 'Telematics services'/Notrufsystem(KOMO[mbrace])
CD0315	Check configuration.	Communication module 'Telematics services'/Notrufsystem(KOMO[mbrace])
CD0316	Data logger	Communication module 'Telematics services'/Notrufsystem(KOMO[mbrace])
CD0317	Display of coding data	Electronic ignition switch(EZS)
CD0318	Disabling of key or key track with workshop key	Electronic ignition switch(EZS)
CD0319	Disabling of key or key track	Electronic ignition switch(EZS)
CD0320	Re-enabling of key or key track	Electronic ignition switch(EZS)
CD0321	Writing of vehicle identification number	Electronic ignition switch(EZS)
CD0322	Vehicle model	AMG DRIVE UNIT(N145)(AMG DRVU)

CD0323	Events	Electronic stability program(N30/4)(ESP)
CD0324	Check coding "Hill Start Assist".	Electronic stability program(N30/4)(ESP)
CD0325	Special function FIN	Electronic stability program(N30/4)(ESP)
CD0326	Check of control unit software	Supplemental restraint system (N2/10)(SRS)
CD0327	Locking of control unit	Supplemental restraint system (N2/10)(SRS)
CD0328	Unlocking of control unit	Supplemental restraint system (N2/10)(SRS)
CD0329	Setting language	Audio or COMAND(A2-A40/3)(AUDIO)
CD0330	Video AUX jack	Audio or COMAND(A2-A40/3)(AUDIO)
CD0331	Mercedes-Benz Contact	Audio or COMAND(A2-A40/3)(AUDIO)
CD0332	Run-on time after switching off ignition	Audio or COMAND(A2-A40/3)(AUDIO)
CD0333	SPLITVIEW	Audio or COMAND(A2-A40/3)(AUDIO)
CD0334	Restart MOST ring.	Audio or COMAND(A2-A40/3)(AUDIO)
CD0335	Taxi	Multifunction control unit(Multifunction control unit)
CD0336	Customer request	Multifunction control unit(Multifunction control unit)
CD0337	Mercedes-Benz Guard special protection vehicle	Multifunction control unit(Multifunction control unit)
CD0338	Reset of coding	Multifunction control unit(Multifunction control unit)
CD0339	Restoration of communication with the control unit	Multifunction control unit(Multifunction control unit)
CD0340	Control unit reset	Multifunction control unit(Multifunction control unit)
CD0341	Control unit replacement with initial startup of new control unit	TV tuner (TV)

CD0342	Initial startup of already installed control unit	TV tuner (TV)
CD0343	National version	TV tuner (TV)
CD0344	Control line of component "Antenna amplifier"	TV tuner (TV)
CD0345	Type of antennas	TV tuner (TV)
CD0346	Type of video signal	TV tuner (TV)
CD0347	PAL / NTSC	TV tuner (TV)
CD0348	Configuration of AUX jacks	TV tuner (TV)
CD0349	Special function	TV tuner (TV)
CD0350	Fan	TV tuner (TV)
CD0351	All codings	TV tuner (TV)
CD0352	Reset	TV tuner (TV)
CD0353	Workshop coding	Automatic air conditioning(AAC)
CD0354	Special settings	Automatic air conditioning(AAC)
CD0355	No-load current	Automatic air conditioning(AAC)
CD0356	Parameters of DAB tuner	Digital Audio Broadcasting(N87/3)(DAB)
CD0357	Variant coding	Stationary heater(STH)
CD0358	Data record	Stationary heater(STH)
CD0359	Model of trailer hitch	Trailer recognition module (N28/1)(TRM)
CD0360	Erasing of initialization values	Trailer recognition(Trailer recognition module)

CD0361	Teach-in process	Weight sensing system(N110)(WSS)
CD0362	Security code	Garage door opener(A67n2)(GTO)
CD0363	Country code	Garage door opener(A67n2)(GTO)
CD0364	Initialization	Garage door opener(A67n2)(GTO)
CD0365	Version of switch group	Control unit 'Overhead control panel'(OCP)
CD0366	Location of interior lamp	Control unit 'Overhead control panel'(OCP)
CD0367	E15/3 (Rear dome lamp)	Control unit 'Overhead control panel'(OCP)
CD0368	Volume and frequency	Parking system (N62)(PARK)
CD0369	Function illumination	DIRECT SELECT interface(N150)(DSI)
CD0370	Manual initial startup	All wheel drive(VG)
CD0371	Volume of acoustic locking feedback	Alarm siren(H3/1)(AS)
CD0372	Important note	Alarm siren(H3/1)(AS)
CD0373	Correction programming of ignition	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
CD0374	Correction programming of fuel quantity	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
CD0375	Correction programming of specified idle speed	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
CD0376	Correction programming of specified idle speed with gear range engaged	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
CD0377	Injector injection quantity adjustment	N3/10-Motor electronics "MED40" for combustion engine "M274"(ME)
CD0378	Correction programming of specified idle speed in selector lever position "P" or "N"	Motor electronics "MED40AMG" for combustion engine "M133"(N3/10)(ME)
CD0379	Correction programming of electrohydraulic actuator part number	Y3/8n4-Transmission control for 7 speed transmission(VGS)

CD0380	Automatic function:Transfer of coding into control unit "Display in rear passenger compartment"	Rear audio video unit(AVE H)
CD0381	Connected control units	Rear audio video unit(AVE H)
CD0382	Region code	Rear audio video unit(AVE H)
CD0383	Special functionFIN	Electronic stability program(N30/4)(ESP)
CD0384	Calibration of component "A7/3 (Traction system hydraulic unit)"	Electronic stability program(N30/4)(ESP)
CD0385	Special functions	Regenerative braking system(N30/6)(ESP)
CD0386	Special functionVIN	Regenerative braking system(N30/6)(ESP)
CD0387	M40Pneumatic pump for multicontour seat	Pneumatic pump for active multicontour seat(PPAMKS)
CD0388	M40/1Pneumatic pump for active multicontour seat	Pneumatic pump for active multicontour seat(PPAMKS)
CD0389	M40 (Multicontour seat pneumatic pump)	Pneumatic pump for multicontour seat(PPAMKS)
CD0390	M40/1 (Dynamic multicontour seat pneumatic pump)	Pneumatic pump for multicontour seat(PPAMKS)
CD0391	M40/1 (Active multicontour seat pneumatic pump)	Pneumatic pump for multicontour seat(PPAMKS)
CD0392	Activation of component "Rear switching module"	KEYLESS GO(N69/5)(KG)
CD0393	Parameters of sound system	Bose sound system(SOUND)
CD0394	Antenna monitoring	N123/4 Emergency call system control unit(ECS)
CD0395	Waking control unit by pressing a button	N123/4 Emergency call system control unit(ECS)
CD0396	NavigationParameter	N123/4 Emergency call system control unit(ECS)
CD0397	Model series	N123/4 Emergency call system control unit(ECS)
CD0398	Vehicle configuration	N123/4 Emergency call system control unit(ECS)

CD0399	Messages in multifunction display	N123/4 Emergency call system control unit(ECS)
CD0400	Antenna resistance values	N123/4 Emergency call system control unit(ECS)
CD0401	Antenna resistance values(alternative)	N123/4 Emergency call system control unit(ECS)
CD0402	EXTENDEDSet	N123/4 Emergency call system control unit(ECS)
CD0403	AirbagCode	N123/4 Emergency call system control unit(ECS)
CD0404	Width of license plate bracket	Parktronic system(PTS)
CD0405	Trailer hitch	Parktronic system(PTS)
CD0406	Delay period for turn signals after closing of trunk lid	Electronic ignition switch(EZS)
CD0407	Special functions VIN	Electric stability program(ESP)
CD0408	Seat adjustment	N32/1 (Driver seat control unit)(SCU DRIVE)
CD0409	Exit lamp "A-pillar"	Control unit 'Overhead control panel'(OCP)
CD0410	Switch group	Control unit 'Overhead control panel'(OCP)
CD0411	Interior lamp in rear compartment	Control unit 'Overhead control panel'(OCP)
CD0412	Correction programming of electric fan for combustion engine or air conditioning	N3/10-Motor electronics "SIM271DE20" for combustion engine "M271EVO"(ME)
CD0413	Default initialization	N3/10-Motor electronics "SIM271DE20" for combustion engine "M271EVO"(ME)
CD0414	Frequency readout	Audio(A2)(AUDIO)
CD0415	Perform control unit reset.	Audio(A2)(AUDIO)
CD0416	The production run is active.	Soft top control(N52)(STC)
CD0417	Adjusting the parameters	AMG Performance Media(N125/2)(AMG PM)

CD0418	Special function VIN	Electronic stability program(N30/4)(ESP)
CD0419	Check codings in control unit "Audio or COMAND" and change if necessary.	Audio or COMAND(Audio)
CD0420	Language for the voice control system	Audio or COMAND(Audio)
CD0421	Navigation data	Audio or COMAND(Audio)
CD0422	Special equipment	Audio or COMAND(Audio)
CD0423	Deactivation of MOST communication	Audio or COMAND(Audio)
CD0424	Activation of MOST communication	Audio or COMAND(Audio)
CD0425	Check codings in control unit "22 KW".	Charger(SG LG)
CD0426	Automatic codings	Charger(SG LG)
CD0427	Lock high-voltage component lock.	Charger(SG LG)
CD0428	Unlock high-voltage component lock.	Charger(SG LG)
CD0429	Set type of antenna.	Communication module Telematics services(KOMO)
CD0430	Reading of parameter data from control unit	MA-Drivetrain (master)(PTCU)
CD0431	Writing of parameter data to control unit	MA-Drivetrain (master)(PTCU)
CD0432	Display currently set codings.	MA-Drivetrain (master)(PTCU)
CD0433	Coding of control unit	MA-Drivetrain (master)(PTCU)
CD0434	Roof sign lamp	Multifunction control unit(Multifunction control unit)
CD0435	Silent alarm	Multifunction control unit(Multifunction control unit)
CD0436	Active alarm	Multifunction control unit(Multifunction control unit)

CD0437	Radio help call	Multifunction control unit(Multifunction control unit)
CD0438	Run-on times	Multifunction control unit(Multifunction control unit)
CD0439	Other options	Multifunction control unit(Multifunction control unit)
CD0440	Increase in the opening angle of the liftgate	Trunk lid control(TLC)
CD0441	Panoramic sliding sunroof	Control module 'Panoramic sliding roof'(A98)(PSD)
CD0442	A67 (Inside rearview mirror)	Overhead control panel(OCP)
CD0443	Tilting/sliding sunroof	Overhead control panel(OCP)
CD0444	OFF time of interior lamp in dimmed state	Overhead control panel(OCP)
CD0445	ON time of interior lamp in dimmed state	Overhead control panel(OCP)
CD0446	Type of trailer hitch and national version	Trailer recognition module (N28/1)(TRM)
CD0447	Read out coding and modify if necessary.	Control unit Fuel pump(FSCU01)
CD0448	Manual coding	Control unit 'Left fuel pump'(FSCU Left)
CD0449	Folding in/out of outside mirrors	Left front door(N69/1)(DCU LF)
CD0450	Special equipment "AIRCAP"	Rear control unit(N22/6)(REAR)
CD0451	Coding of component "Belt extender"	Rear control unit(N22/6)(REAR)
CD0452	Enable natural gas operation	N3/10-Motor electronics "MED40CNG" for combustion engine "M270"(ME)
CD0453	Enable natural gas operation after crash event.	N3/10-Motor electronics "MED40CNG" for combustion engine "M270"(ME)
CD0454	Natural gas operationCorrection value	N3/10-Motor electronics "SIM271KECNG" for combustion engine "M271CNG"(ME)
CD0455	Correction programming of fuel quantity(Natural gas operation)	N3/10-Motor electronics "SIM271KECNG" for combustion engine "M271CNG"(ME)

CD0456	ValveMassage function	Left front multicontour seat(MKS LF)
CD0457	Reading of parameter data for the component "M56 (Vacuum pump)"	Common powertrain controller(N127)(PTCU)
CD0458	Writing of parameter data for the component "M56 (Vacuum pump)"	Common powertrain controller(N127)(PTCU)
CD0459	Resetting of parameter data for the component "M56 (Vacuum pump)"	Common powertrain controller(N127)(PTCU)
CD0460	Reading of fare settings	Common powertrain controller(N127)(PTCU)
CD0461	Writing of fare settings	Common powertrain controller(N127)(PTCU)
CD0462	Resetting of fare settings	Common powertrain controller(N127)(PTCU)
CD0463	Performance of a control unit power-down	Common powertrain controller(N127)(PTCU)

*XT***ool**