



Shenzhen Xtooltech Co., Ltd

NISSAN GT-R Function List V13.41

Tips and Instructions:

- * This feature is new.
- √ This feature is supported.
- This feature is not supported.
- ※ This feature is partially supported.

| Area | Model | Vehicle Type | Year | System Name | Read ECU Information | Read Trouble Code | Read Freeze Frame | Clear Trouble Code | Live Data | Actuation Test | Special Functions |
|---------|-------------------|--------------|----------|---------------------------|----------------------|-------------------|-------------------|--------------------|-----------|------------------------|-------------------|
| America | NISSAN GT-R NISMO | R35 | 2021- | Air Pressure Monitor | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2021- | Engine | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2021- | Body Control Module (BCM) | √ | | | | √ | | |
| America | NISSAN GT-R NISMO | R35 | 2021- | Multi Audio Vedio | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2021- | E-Suspension | | √ | | √ | √ | | |
| America | NISSAN GT-R NISMO | R35 | 2020- | Air Pressure Monitor | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2020- | Engine | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2020- | Body Control Module (BCM) | √ | | | | √ | | |
| America | NISSAN GT-R NISMO | R35 | 2020- | Multi Audio Vedio | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2020- | E-Suspension | | √ | | √ | √ | | |
| America | NISSAN GT-R NISMO | R35 | 2020- | Audio amp. | √ | √ | √ | √ | √ | | |
| America | NISSAN GT-R NISMO | R35 | 2019- | Air Pressure Monitor | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2019- | Engine | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2019- | Body Control Module (BCM) | √ | | | | √ | | |
| America | NISSAN GT-R NISMO | R35 | 2019- | Multi Audio Vedio | √ | √ | | √ | √ | | SP0537 |
| America | NISSAN GT-R NISMO | R35 | 2019- | E-Suspension | | √ | | √ | √ | | |
| America | NISSAN GT-R NISMO | R35 | 2018- | Air Pressure Monitor | √ | √ | | √ | √ | AC0001, AC0002, AC0003 | SP0002 |
| America | NISSAN GT-R NISMO | R35 | 2018- | Engine | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2018- | Body Control Module (BCM) | √ | | | | √ | | |
| America | NISSAN GT-R NISMO | R35 | 2018- | Multi Audio Vedio | √ | √ | | √ | √ | | SP0537 |
| America | NISSAN GT-R NISMO | R35 | 2018- | E-Suspension | | √ | | √ | √ | | |
| America | NISSAN GT-R NISMO | R35 | 2017- | Air Pressure Monitor | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2017- | Engine | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2017- | Body Control Module (BCM) | √ | | | | √ | | |
| America | NISSAN GT-R NISMO | R35 | 2017- | Multi Audio Vedio | √ | √ | | √ | √ | | SP0537 |
| America | NISSAN GT-R NISMO | R35 | 2017- | E-Suspension | | √ | | √ | √ | | |
| America | NISSAN GT-R NISMO | R35 | 2016- | Air Pressure Monitor | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2016- | Engine | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2016- | Body Control Module (BCM) | √ | | | | √ | | |
| America | NISSAN GT-R NISMO | R35 | 2016- | Multi Audio Vedio | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2016- | E-Suspension | | √ | | √ | √ | | |
| America | NISSAN GT-R NISMO | R35 | 2015- | Air Pressure Monitor | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2015- | Engine | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2015- | Body Control Module (BCM) | √ | | | | √ | | |
| America | NISSAN GT-R NISMO | R35 | 2015- | Multi Audio Vedio | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2015- | E-Suspension | | √ | | √ | √ | | |
| America | NISSAN GT-R | R35 | 2021- | Air Pressure Monitor | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2021- | Engine | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2021- | Body Control Module (BCM) | √ | | | | √ | | |
| America | NISSAN GT-R | R35 | 2021- | Multi Audio Vedio | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2021- | E-Suspension | | √ | | √ | √ | | |
| America | NISSAN GT-R | R35 | 2020- | Air Pressure Monitor | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2020- | Engine | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2020- | Body Control Module (BCM) | √ | | | | √ | | |
| America | NISSAN GT-R | R35 | 2020- | Multi Audio Vedio | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2020- | E-Suspension | | √ | | √ | √ | | |
| America | NISSAN GT-R | R35 | 2020- | Audio amp. | √ | √ | √ | √ | √ | | |
| America | NISSAN GT-R | R35 | 2019- | Air Pressure Monitor | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2019- | Engine | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2019- | Body Control Module (BCM) | √ | | | | √ | | |
| America | NISSAN GT-R | R35 | 2019- | Multi Audio Vedio | √ | √ | | √ | √ | | SP0537 |
| America | NISSAN GT-R | R35 | 2019- | E-Suspension | | √ | | √ | √ | | |
| America | NISSAN GT-R | R35 | 2018- | Air Pressure Monitor | √ | √ | | √ | √ | AC0001, AC0002, AC0003 | SP0002 |
| America | NISSAN GT-R | R35 | 2018- | Engine | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2018- | Body Control Module (BCM) | √ | | | | √ | | |
| America | NISSAN GT-R | R35 | 2018- | Multi Audio Vedio | √ | √ | | √ | √ | | SP0537 |
| America | NISSAN GT-R | R35 | 2018- | E-Suspension | | √ | | √ | √ | | |
| America | NISSAN GT-R | R35 | 2017- | Air Pressure Monitor | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2017- | Engine | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2017- | Body Control Module (BCM) | √ | | | | √ | | |
| America | NISSAN GT-R | R35 | 2017- | Multi Audio Vedio | √ | √ | | √ | √ | | SP0537 |
| America | NISSAN GT-R | R35 | 2017- | E-Suspension | | √ | | √ | √ | | |
| America | NISSAN GT-R | R35 | 2016- | Air Pressure Monitor | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2016- | Engine | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2016- | Body Control Module (BCM) | √ | | | | √ | | |
| America | NISSAN GT-R | R35 | 2016- | Multi Audio Vedio | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2016- | E-Suspension | | √ | | √ | √ | | |
| America | NISSAN GT-R | R35 | 2015- | Air Pressure Monitor | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2015- | Engine | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2015- | Body Control Module (BCM) | √ | | | | √ | | |
| America | NISSAN GT-R | R35 | 2015- | Multi Audio Vedio | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2015- | E-Suspension | | √ | | √ | √ | | |
| America | NISSAN GT-R | R35 | 2014- | Air Pressure Monitor | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2014- | Engine | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2014- | Body Control Module (BCM) | √ | | | | √ | | |
| America | NISSAN GT-R | R35 | 2014- | Multi Audio Vedio | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2014- | E-Suspension | | √ | | √ | √ | | |
| America | NISSAN GT-R | R35 | 2011- | Air Pressure Monitor | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2011- | Engine | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2011- | Body Control Module (BCM) | √ | | | | √ | | |
| America | NISSAN GT-R | R35 | 2011- | Multi Audio Vedio | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2011- | E-Suspension | | √ | | √ | √ | | |
| America | NISSAN GT-R | R35 | 2012- | Air Pressure Monitor | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2012- | Engine | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2012- | Body Control Module (BCM) | √ | | | | √ | | |
| America | NISSAN GT-R | R35 | 2012- | Multi Audio Vedio | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2012- | E-Suspension | | √ | | √ | √ | | |
| America | NISSAN GT-R | R35 | 2010- | Air Pressure Monitor | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2010- | Engine | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2010- | Body Control Module (BCM) | √ | | | | √ | | |
| America | NISSAN GT-R | R35 | 2010- | E-Suspension | | √ | | √ | √ | | |
| America | NISSAN GT-R | R35 | 2009- | Air Pressure Monitor | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2009- | Engine | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2009- | Body Control Module (BCM) | √ | | | | √ | | |
| America | NISSAN GT-R | R35 | 2009- | E-Suspension | | √ | | √ | √ | | |
| America | NISSAN GT-R NISMO | R35 | 2019.06- | Air Pressure Monitor | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2019.06- | Engine | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2019.06- | Body Control Module (BCM) | √ | | | | √ | | |
| America | NISSAN GT-R NISMO | R35 | 2019.06- | Multi Audio Vedio | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2019.06- | E-Suspension | | √ | | √ | √ | | |
| America | NISSAN GT-R NISMO | R35 | 2019.06- | Audio amp. | √ | √ | √ | √ | √ | | |
| America | NISSAN GT-R NISMO | R35 | 2018.07- | Air Pressure Monitor | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2018.07- | Engine | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2018.07- | Body Control Module (BCM) | √ | | | | √ | | |
| America | NISSAN GT-R NISMO | R35 | 2018.07- | Multi Audio Vedio | √ | √ | | √ | √ | | SP0537 |
| America | NISSAN GT-R NISMO | R35 | 2018.07- | E-Suspension | | √ | | √ | √ | | |
| America | NISSAN GT-R NISMO | R35 | 2017.10- | Air Pressure Monitor | √ | | | | | AC0001, AC0002, AC0003 | SP0002 |
| America | NISSAN GT-R NISMO | R35 | 2017.10- | Engine | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2017.10- | Body Control Module (BCM) | √ | | | | √ | | |
| America | NISSAN GT-R NISMO | R35 | 2017.10- | Multi Audio Vedio | √ | √ | | √ | √ | | SP0537 |
| America | NISSAN GT-R NISMO | R35 | 2017.10- | E-Suspension | | √ | | √ | √ | | |
| America | NISSAN GT-R NISMO | R35 | 2016.07- | Air Pressure Monitor | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2016.07- | Engine | √ | | | | | | |
| America | NISSAN GT-R NISMO | R35 | 2016.07- | Body Control Module (BCM) | √ | | | | √ | | |
| America | NISSAN GT-R NISMO | R35 | 2016.07- | Multi Audio Vedio | √ | √ | | √ | √ | | SP0537 |
| America | NISSAN GT-R NISMO | R35 | 2016.07- | E-Suspension | | √ | | √ | √ | | |
| America | NISSAN GT-R | R35 | 2019.04- | Air Pressure Monitor | √ | | | | | | |
| America | NISSAN GT-R | R35 | 2019.04- | Engine | √ | | | | | | |

Actuation Test

| Index NO. | Functions Name | System Name |
|-----------|---|---|
| AC0001 | Buzzer | Air Pressure Monitor |
| AC0002 | Warning Lamp | Air Pressure Monitor |
| AC0003 | Hazard Lamp | Air Pressure Monitor |
| AC0004 | ID Registration Warning | Air Pressure Monitor |
| AC0005 | Run Flat Tire Warning Buzzer | Air Pressure Monitor |
| AC0006 | Warning Lamp | Air Pressure Monitor |
| AC0007 | Flasher | Air Pressure Monitor |
| AC0008 | Horn | Air Pressure Monitor |
| AC0009 | Outside Buzzer | Air Pressure Monitor |
| AC0010 | Meter Lamp | Laser/Radar |
| AC0011 | Lamp Test | Head Lamp Levelizer |
| AC0012 | Roof System | Convertible Roof |
| AC0013 | State Output Of Roof (Audio) | Convertible Roof |
| AC0014 | (Left/Right) Front Power Window | Convertible Roof |
| AC0015 | Left Rear Power Window | Convertible Roof |
| AC0016 | Right Rear Power Window | Convertible Roof |
| AC0017 | Roof Left-Hand/Right-Hand Latched | Convertible Roof |
| AC0018 | Storage Lid | Convertible Roof |
| AC0019 | Soft Top System | Convertible Roof |
| AC0020 | 5th Bow System | Convertible Roof |
| AC0021 | Hydraulic Pressure Release | Convertible Roof |
| AC0022 | Trunk Opener | Convertible Roof |
| AC0023 | Power Window (Left/Right) | Convertible Roof |
| AC0024 | Rear Window Defogger | Convertible Roof |
| AC0025 | Motor Of Outside Flap | Convertible Roof |
| AC0026 | Inside Flap Motor | Convertible Roof |
| AC0027 | Storage Lid Closure Motor | Convertible Roof |
| AC0028 | Meter Lamp | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| AC0029 | Stop Lamp | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| AC0030 | Booster Solenoid Valve | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| AC0031 | Intelligent Cruise Control (ICC) Buzzer | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| AC0032 | Actuator Of Accelerator Pedal | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| AC0033 | Distance Control Assist (DCA) Indicator | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| AC0034 | Brake Actuator | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| AC0035 | Active Pedal | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| AC0036 | Lane Departure Prevention (LDP) Buzzer | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| AC0037 | Warning System Indicator | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| AC0038 | Lane Departure Prevention (LDP) On Indicator | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| AC0039 | Lane Departure Warning Lamp | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| AC0040 | Blind Spot Warning (BSW)/BSI Warning Lamp | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| AC0041 | BSI On Indicator | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| AC0042 | Lane Departure Warning (LDW) On Indicator | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| AC0043 | Lane Departure Prevention (LDP) Warning Indicator | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| AC0044 | Lane Departure Warning (LDW) Warning Indicator | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| AC0045 | Blind Spot Warning (BSW) On Indicator | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| AC0046 | BSI Warning Indicator | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| AC0047 | Brake Actuator 1 | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| AC0048 | Brake Actuator 2 | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| AC0049 | Brake Actuator 3 | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| AC0050 | Head Lamp | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0051 | Front Fog Lamp | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0052 | Tail Lamp | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0053 | Rear Defogger | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0054 | Front Wiper | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0055 | Motor Fan | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0056 | Air Conditioner (AC) Compressor | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0057 | Head Lamp Washer | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0058 | Lamps | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0059 | External Lamps | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0060 | Cornering Lamp | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0061 | Horn | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0062 | Windscreen Wiper: Low Speed | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0063 | Windscreen Wiper: High Speed | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0064 | Testing Electric Power Supply Circuit | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0065 | De-Icing Of Rear Screen | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0066 | Air Conditioner (A/C) CNT Compressor | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0067 | Dipped Headlights | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0068 | Main Headlamp Information | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0069 | Side Lights | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0070 | Low Speed Fan Unit | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0071 | High Speed Fan Unit | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0072 | Alternator Regulation | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0073 | Fan Unit | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0074 | Rear Wiper | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0075 | Relay Of Rear Blower | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0076 | Heater Water Pump Command | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0077 | Voltage Regulator | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0078 | Compressor | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0079 | Cooling Fan (Mono) | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0080 | Cooling Fan (Dual) | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0081 | Cooling Fan (Pulse Width Modulation) | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0082 | Headlamp (High) | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0083 | Headlamp (Low) | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0084 | Daytime Running Light | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0085 | Parking Lamp | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0086 | ECV | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0087 | Active Test Of Optical Axis | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0088 | Relay Of Cooling Fan | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0089 | Rear Fog Lights | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0090 | Stop Lights Activation Relay | Intelligent Power Distribution Module (IPDM) Engine Room |
| AC0091 | Fault Of Passenger Airbag And Status Warning Lights | Air Bag |
| AC0092 | Inpane Warning Light | Meter/M&A |
| AC0093 | Liquid Crystal Display (LCD) Instrument Segments | Meter/M&A |
| AC0094 | Water Temperature Gauge | Meter/M&A |
| AC0095 | Fuel Gauge | Meter/M&A |
| AC0096 | Speedometer | Meter/M&A |
| AC0097 | Rev Counter | Meter/M&A |
| AC0098 | Buzzer | Meter/M&A |
| AC0099 | Rear Screen Demister | Meter/M&A |
| AC0100 | Folding Mirror | Meter/M&A |
| AC0101 | Tail Lamp | Meter/M&A |
| AC0102 | Power Windows | Meter/M&A |
| AC0103 | Relay Of Battery Saver | Meter/M&A |
| AC0104 | Door Lock | Meter/M&A |
| AC0105 | Driver Door Unlock | Meter/M&A |
| AC0106 | Other Door Unlock | Meter/M&A |
| AC0107 | Door Locking Lamp | Meter/M&A |

| | | |
|--------|--|-----------|
| AC0108 | Theft Warning Relay | Meter/M/A |
| AC0109 | Horn | Meter/M/A |
| AC0110 | Selective Lock Electromagnet | Meter/M/A |
| AC0111 | Left Indicator | Meter/M/A |
| AC0112 | Right Indicator | Meter/M/A |
| AC0113 | Interior Lighting | Meter/M/A |
| AC0114 | Trunk Open | Meter/M/A |
| AC0115 | Command Privee 1 | Meter/M/A |
| AC0116 | Command Privee 2 | Meter/M/A |
| AC0117 | Command Privee 3 | Meter/M/A |
| AC0118 | Command Privee 4 | Meter/M/A |
| AC0119 | Command Privee 5 | Meter/M/A |
| AC0120 | Command Privee 6 | Meter/M/A |
| AC0121 | Reset Of Control Unit | Meter/M/A |
| AC0122 | Instrument Illumination | Meter/M/A |
| AC0123 | Mechanical Instrument Pointers | Meter/M/A |
| AC0124 | Warning Buzzer | Meter/M/A |
| AC0125 | Idle Air Control Valve - Assist Air Control Valve Opening | Engine |
| AC0126 | Vacuum Valve Bypass Valve | Engine |
| AC0127 | Power Balance | Engine |
| AC0128 | Ventilation Control Valve | Engine |
| AC0129 | Engine Coolant Temperature | Engine |
| AC0130 | Fuel Injection | Engine |
| AC0131 | Fuel Tank Temperature Sensor | Engine |
| AC0132 | Purge Volume Control Valve | Engine |
| AC0133 | Sub Fuel Control Solenoid Valve | Engine |
| AC0134 | Relay Of Sub Fuel Pump | Engine |
| AC0135 | Fuel Pump Relay | Engine |
| AC0136 | Ignition Timing | Engine |
| AC0137 | Variable Impedance Aspiration System (VIAS) Solenoid Valve - 1 | Engine |
| AC0138 | Engine Mounting | Engine |
| AC0139 | Tumble Control Valve | Engine |
| AC0140 | Fan Duty Control | Engine |
| AC0141 | Alternator Duty | Engine |
| AC0142 | Variable Impedance Aspiration System (VIAS) Solenoid Valve - 2 | Engine |
| AC0143 | Inlet Valve Torque Assign Angle | Engine |
| AC0144 | Exhaust Valve Torque Assign Angle | Engine |
| AC0145 | Cooling Fan | Engine |
| AC0146 | Valve Timing (V/T) Assign Angle | Engine |
| AC0147 | Fuel Pump Control Module | Engine |
| AC0148 | Voltage Of Alternator | Engine |
| AC0149 | Fuel Shutoff Valve 1 | Engine |
| AC0150 | Fuel Shutoff Valve 2 | Engine |
| AC0151 | Fuel Shutoff Valve 3 | Engine |
| AC0152 | Fuel Shutoff Valve | Engine |
| AC0153 | Fuel Pump Relay 2 | Engine |
| AC0154 | Fuel Pump Relay 3 | Engine |
| AC0155 | Fuel Return Valve | Engine |
| AC0156 | Manifold Absolute Pressure (MAP)/Barometric Pressure Switching Valve | Engine |
| AC0157 | Exhaust Gas Recirculation (EGR) Control (Mode 1) | Engine |
| AC0158 | Pressure Regulator | Engine |
| AC0159 | Target Fan RPM | Engine |
| AC0160 | Exhaust Gas Recirculation (EGR) Control Solenoid Valve | Engine |
| AC0161 | Pressure Regulation Control Solenoid Valve | Engine |
| AC0162 | Valve Timing Solenoid | Engine |
| AC0163 | Swirl Control Solenoid Valve | Engine |
| AC0164 | Air Conditioner Relay | Engine |
| AC0165 | Intake Duct Solenoid Valve | Engine |
| AC0166 | Ignition Timing (Mode 1) | Engine |
| AC0167 | Swirl Control Valve | Engine |
| AC0168 | Exhaust Gas Recirculation (EGR) Control (Mode 3) | Engine |
| AC0169 | Turbocharge/Supercharge Bypass Valve | Engine |
| AC0170 | Auto Stop Start | Engine |
| AC0171 | Relay Of Supercharger Clutch | Engine |
| AC0172 | Ignition Timing (Mode 3) | Engine |
| AC0173 | Injection Timing | Engine |
| AC0174 | Supercharger Bypass Valve (SCB/V) Control Solenoid Valve | Engine |
| AC0175 | Exhaust Gas Recirculation (EGR) Volume Control Valve | Engine |
| AC0176 | Throttle Position | Engine |
| AC0177 | Exhaust Gas Recirculation (EGR) Valve Angle | Engine |
| AC0178 | Swirl Control Solenoid Valve 1 | Engine |
| AC0179 | Glow Relay | Engine |
| AC0180 | Turbo Charger Boost Control Valve | Engine |
| AC0181 | Injector Cylinder 1 | Engine |
| AC0182 | Injector Cylinder 2 | Engine |
| AC0183 | Injector Cylinder 3 | Engine |
| AC0184 | Injector Cylinder 4 | Engine |
| AC0185 | Relay Of Preheater | Engine |
| AC0186 | Fuel Pressure Solenoid Valve | Engine |
| AC0187 | Air Inlet Flap | Engine |
| AC0188 | Fuel Flow Solenoid Valve | Engine |
| AC0189 | Turbocharger Control Solenoid Valve | Engine |
| AC0190 | Pre Electric Consumption | Engine |
| AC0191 | Leak Test Of High Pressure Circuit | Engine |
| AC0192 | Idle Speed Set Increment | Engine |
| AC0193 | Actuator Static Test | Engine |
| AC0194 | Fuel Rail Pressure (FRP) Control Valve | Engine |
| AC0195 | Glow Control Unit | Engine |
| AC0196 | Exhaust Gas Recirculation (EGR) Cooler Bypass Control Solenoid Valve | Engine |
| AC0197 | Throttle Valve | Engine |
| AC0198 | Fuel Pump | Engine |
| AC0199 | Turbocharger Cooling Pump | Engine |
| AC0200 | Downstream Oxygen (O2) Heat | Engine |
| AC0201 | Upstream Oxygen Heater | Engine |
| AC0202 | Canister Bleed Solenoid Valve | Engine |
| AC0203 | Motorised Throttle | Engine |
| AC0204 | Command Privee 3 | Engine |
| AC0205 | Command Privee 2 | Engine |
| AC0206 | 32696 | Engine |
| AC0207 | Air Conditioner (A/C) Compressor Relay Control | Engine |
| AC0208 | Low Speed Fan Unit | Engine |
| AC0209 | High Speed Fan Unit | Engine |
| AC0210 | Cam Shaft Dephaser: Normal Control | Engine |
| AC0211 | Additional Solenoid Valve Of Flexible-Fuel | Engine |
| AC0212 | Additional Pump Of Flexible-Fuel | Engine |
| AC0213 | Air Conditioner (AC) Compressor Relay | Engine |
| AC0214 | Heater Plug 3 | Engine |
| AC0215 | Heater Plug 1 And 2 | Engine |
| AC0216 | Heater Plug 4 | Engine |
| AC0217 | Exhaust Fuel Injector | Engine |
| AC0218 | Diesel Particulate Filter (DPF) Diagnosis Cap Temperature | Engine |

| | | |
|--------|--|--------|
| AC0219 | Cooling Fan Speed Sensor | Engine |
| AC0220 | Power Balance (Mode 1) | Engine |
| AC0221 | Power Balance (Mode 3) | Engine |
| AC0222 | Turbocharger Pressure | Engine |
| AC0223 | Variable Valve Lift (VVL) Solenoid Valve (Intake) | Engine |
| AC0224 | Variable Valve Lift (VVL) Solenoid Valve | Engine |
| AC0225 | Electronic Throttle Control (ETC) - Idle Speed Control (ISC) Circuit Value | Engine |
| AC0226 | Electronic Throttle Control (ETC) Learn | Engine |
| AC0227 | Target Idle Air Learn Clear | Engine |
| AC0228 | Target Air/Fuel Ratio | Engine |
| AC0229 | FFD Clear | Engine |
| AC0230 | TCVACTK | Engine |
| AC0231 | CUCOND | Engine |
| AC0232 | Target Idle RPM | Engine |
| AC0233 | Accelerator Position Signal Off | Engine |
| AC0234 | Fuel Cut Solenoid Valve | Engine |
| AC0235 | Exhaust Gas Recirculation (EGR) Solenoid Valve A | Engine |
| AC0236 | Exhaust Gas Recirculation (EGR) Solenoid Valve B | Engine |
| AC0237 | Throttle Control Solenoid Valve A | Engine |
| AC0238 | Throttle Control Solenoid Valve B | Engine |
| AC0239 | Glow Relay 2 | Engine |
| AC0240 | Internal Cooler Fan | Engine |
| AC0241 | Internal Cooler Pump | Engine |
| AC0242 | Swirl Control Solenoid Valve 2 | Engine |
| AC0243 | Pump Learning Clear | Engine |
| AC0244 | Exhaust Gas Recirculation (EGR) Position Clear | Engine |
| AC0245 | Throttle Position Learning Clear | Engine |
| AC0246 | SATUCLR | Engine |
| AC0247 | Target Exhaust Gas Recirculation (EGR) Volume Angle | Engine |
| AC0248 | Target Electronic Temperature Control (ETC) Angle | Engine |
| AC0249 | Air Conditioner (A/C) Compressor | Engine |
| AC0250 | Fan Unit Low Speed Relay | Engine |
| AC0251 | Fan Unit High Speed Relay | Engine |
| AC0252 | Lock Injector Control | Engine |
| AC0253 | Control Of Unlock Injector | Engine |
| AC0254 | Thermo Plunger No.3 Relay | Engine |
| AC0255 | Air Conditioner (A/C) Prevention | Engine |
| AC0256 | Boost Pressure Wastegate | Engine |
| AC0257 | Low Pressure Pump Relay | Engine |
| AC0258 | Exhaust Gas Recirculation (EGR) Valve | Engine |
| AC0259 | On-Board Diagnostics (OBD) Light | Engine |
| AC0260 | Light Of Preheater | Engine |
| AC0261 | Overheat Warning Light | Engine |
| AC0262 | Thermo Plunger Relay No.1 | Engine |
| AC0263 | Thermo Plunger Relay No.2 | Engine |
| AC0264 | Injection Fault Light | Engine |
| AC0265 | Major Injection Fault Warning Lamp | Engine |
| AC0266 | Swirl Flap | Engine |
| AC0267 | Boiler Relay | Engine |
| AC0268 | Exhaust Gas Recirculation (EGR) Solenoid Valve | Engine |
| AC0269 | Preheater Unit | Engine |
| AC0270 | Turbo Solenoid Valve | Engine |
| AC0271 | Rail Pressure Regulation | Engine |
| AC0272 | Damper Flap | Engine |
| AC0273 | High Pressure Pump | Engine |
| AC0274 | Static Test | Engine |
| AC0275 | Thermometer No.3 Relay | Engine |
| AC0276 | Power Steering Unit Relay | Engine |
| AC0277 | Preheat Relay Group N-1 | Engine |
| AC0278 | Thermo Plunger Relay 1 | Engine |
| AC0279 | Thermo Plunger Relay 2 | Engine |
| AC0280 | Medium Injection Fault Warning Lamp | Engine |
| AC0281 | Turbo Charger Boost Control Actuator | Engine |
| AC0282 | Exhaust Gas Recirculation (EGR) Cooler Bypass Valve | Engine |
| AC0283 | Turbocharging Solenoid Valve | Engine |
| AC0284 | Exhaust Gas Recirculation (EGR) Bypass | Engine |
| AC0285 | Thermo Plunger 3 Relay | Engine |
| AC0286 | Diesel Particulate Filter (DPF) Injector | Engine |
| AC0287 | Diesel Particulate Filter (DPF) Injector Solenoid Valve | Engine |
| AC0288 | Injection Solenoid Valve Opening PF | Engine |
| AC0289 | Engine Adaptives | Engine |
| AC0290 | Pressure Regulation Adaptive | Engine |
| AC0291 | Exhaust Gas Recirculation (EGR) Valve Programming | Engine |
| AC0292 | Diesel Particulate Filter (DPF) Relative Pressure Sensor | Engine |
| AC0293 | Exhaust Fuel Injector Circuit | Engine |
| AC0294 | Programming Of Air Damper Valve | Engine |
| AC0295 | Cruise Control (CC)/Speed Limiter (SL) Program | Engine |
| AC0296 | Engine Oil Cruise Control/Speed Limit Program | Engine |
| AC0297 | Fuel Supply Pressure | Engine |
| AC0298 | Leak Test Of High Pressure Circuit | Engine |
| AC0299 | Rail Pressure Sensor Adaptive | Engine |
| AC0300 | After Replacement Of Diesel Particulate Filter (DPF) | Engine |
| AC0301 | Programming Of Air Path | Engine |
| AC0302 | Fuel Flow Regulator | Engine |
| AC0303 | After Diesel Particulate Filter (DPF) Regeneration | Engine |
| AC0304 | Programming Of Camshaft Sensor | Engine |
| AC0305 | Flywheel Target PG | Engine |
| AC0306 | Injector Adaptives | Engine |
| AC0307 | Stop Fuel Supply Prevention | Engine |
| AC0308 | Activation Of Speed Limiter/Cruise Control | Engine |
| AC0309 | Fuel Pump Relay Circuit | Engine |
| AC0310 | Additional Petrol Circuit Solenoid Valve (S/V) | Engine |
| AC0311 | Heating Resistor Relay 1 | Engine |
| AC0312 | Heating Resistor Relay 2 | Engine |
| AC0313 | Heating Resistor Relay 3 | Engine |
| AC0314 | Richness Regulation Programming | Engine |
| AC0315 | Programming Throttle Limits | Engine |
| AC0316 | Pump Pressure Regulator | Engine |
| AC0317 | Water Pump Relay | Engine |
| AC0318 | First Exhaust Gas Recirculation (EGR) Cooling Pump | Engine |
| AC0319 | Secondary Exhaust Gas Recirculation (EGR) Cooling Pump | Engine |
| AC0320 | Average Air Temperature | Engine |
| AC0321 | Proportional Richness Sensor Program | Engine |
| AC0322 | Controlled Clutch Thermostat | Engine |
| AC0323 | Exhaust Electronic Throttle Control Actuator | Engine |
| AC0324 | Low Pressure Exhaust Gas Recirculation (EGR) Valve | Engine |
| AC0325 | Rail Pressure Regulator | Engine |
| AC0326 | Additional Heating | Engine |
| AC0327 | Proportional Richness Sensor Heating | Engine |
| AC0328 | Upstream Oxygen (O2) Sensor Heating | Engine |
| AC0329 | Downstream Oxygen Sensor Heating | Engine |

| | | |
|--------|--|--------|
| AC0330 | Coolant Circuit Switching Solenoid Valve (S/V) | Engine |
| AC0331 | Fault Warning Light | Engine |
| AC0332 | Major Injection Malfunction Warning Lamp | Engine |
| AC0333 | Coolant Temperature Warning Light | Engine |
| AC0334 | Additional Fuel Pump Relay | Engine |
| AC0335 | Injector Cylinder 1 | Engine |
| AC0336 | Injector Cylinder 2 | Engine |
| AC0337 | Injector Cylinder 3 | Engine |
| AC0338 | Injector Cylinder 4 | Engine |
| AC0339 | Refilling New Pump Body | Engine |
| AC0340 | Prevention Electrical Consumers | Engine |
| AC0341 | Stop Electrical Consumer Prevention | Engine |
| AC0342 | Water In Fuel Warning Light | Engine |
| AC0343 | Malfunction Indicator Lamp (MIL) | Engine |
| AC0344 | Check Exhaust Gas Recirculation (EGR) Cooler Bypass Switchover Valve | Engine |
| AC0345 | Check Engine Diagnosis Indicator Lamp | Engine |
| AC0346 | Check Engine Oil Pump Valve | Engine |
| AC0347 | Check Glow Plugs | Engine |
| AC0348 | Check Oil Spray Nozzles Shutoff Valve | Engine |
| AC0349 | Check Glow Plug Of Cylinder 1 | Engine |
| AC0350 | Check Engine And Air Conditioner (AC) With Integrated Control Fan Motor | Engine |
| AC0351 | Check Rail Pressure Sensor | Engine |
| AC0352 | Check Boost Pressure Positioner | Engine |
| AC0353 | Check Transmission Oil Cooling Coolant Circulation Pump | Engine |
| AC0354 | Offset Test Of Rail Pressure Sensor | Engine |
| AC0355 | Check Whether Or Not Fuel High Pressure Circuit Leaks. | Engine |
| AC0356 | Check Preglow System | Engine |
| AC0357 | Check Fuel Filter Heater | Engine |
| AC0358 | Check Catalytic Converter Upstream O2 | Engine |
| AC0359 | Pressure Regulating Valve Of Dynamic Test | Engine |
| AC0360 | Quantity Control Valve Of Dynamic Test | Engine |
| AC0361 | Exhaust Gas Recirculation (EGR) Control Valve | Engine |
| AC0362 | Actuator Of Wastegate | Engine |
| AC0363 | Check Purging Switchover Valve | Engine |
| AC0364 | Check Intake Camshaft Solenoid | Engine |
| AC0365 | Electric Water Pump | Engine |
| AC0366 | High Pressure Compressor | Engine |
| AC0367 | High Pressure Turbine | Engine |
| AC0368 | Exhaust Air Flap | Engine |
| AC0369 | Fuel Heater Relay | Engine |
| AC0370 | Low Pressure Fuel Pump | Engine |
| AC0371 | Intake Valve Timing Control Solenoid Valve | Engine |
| AC0372 | Turbo Charger Wastegate Control Solenoid Valve | Engine |
| AC0373 | Heated Oxygen Sensor 1 Heater | Engine |
| AC0374 | Heated Oxygen Sensor 2 Heater | Engine |
| AC0375 | Engine Oil Pressure Control Solenoid Valve | Engine |
| AC0376 | Thermostat Heater Control Solenoid Valve | Engine |
| AC0377 | Electric Throttle Control Actuator | Engine |
| AC0378 | Evaporative Emission (EVAP) Canister Purge Control Solenoid Valve | Engine |
| AC0379 | Exhaust Valve Timing Control Solenoid Valve | Engine |
| AC0380 | Cooling Fan 2 | Engine |
| AC0381 | Cooling Fan 1 | Engine |
| AC0382 | Exhaust Throttle | Engine |
| AC0383 | Throttle Valve | Engine |
| AC0384 | Turbocharger Boost Pressure | Engine |
| AC0385 | Coolant Flow Valve | Engine |
| AC0386 | Glow Plug | Engine |
| AC0387 | Active Grille Air Shutter | Engine |
| AC0388 | Relay Of Starter | Engine |
| AC0389 | Fuel Heater | Engine |
| AC0390 | Air Fuel Ratio (A/F) Sensor Heater | Engine |
| AC0391 | Fuel Flow Actuator | Engine |
| AC0392 | Fuel Rail Pressure | Engine |
| AC0393 | Intake Manifold Runner Valve | Engine |
| AC0394 | Turbo Charger Cooling Water Pump | Engine |
| AC0395 | Exhaust Gas Recirculation (EGR) Cooler Bypass PWM | Engine |
| AC0396 | PTC 3 | Engine |
| AC0397 | PTC 2 | Engine |
| AC0398 | PTC 1 | Engine |
| AC0399 | Idle Speed | Engine |
| AC0400 | Thermo Plunger | Engine |
| AC0401 | Fuel Injector | Engine |
| AC0402 | Stabilized Voltage Regulator | Engine |
| AC0403 | Command Of Starter Relay | Engine |
| AC0404 | Turbo Charger Bypass Valve | Engine |
| AC0405 | Engine Coolant Electric Water Pump | Engine |
| AC0406 | Ignition Cylinder 1 | Engine |
| AC0407 | Ignition Cylinder 2 | Engine |
| AC0408 | Ignition Cylinder 3 | Engine |
| AC0409 | Ignition Cylinder 4 | Engine |
| AC0410 | Camshaft Dephaser: Slide Movement Of Solenoid Valve | Engine |
| AC0411 | Exhaust Camshaft Dephaser Solenoid Valve | Engine |
| AC0412 | Drain Cut Valve | Engine |
| AC0413 | Ventilation Line Heating Element | Engine |
| AC0414 | Check Intake Port Shutoff Actuator Motor. | Engine |
| AC0415 | Check Coolant Pump Switchover Valve | Engine |
| AC0416 | Heat Exchanger Shutoff Valve | Engine |
| AC0417 | Check Radiator Shutter Actuator | Engine |
| AC0418 | Check Throttle Valve Actuator | Engine |
| AC0419 | Check Exhaust Gas Recirculation Actuator. | Engine |
| AC0420 | Heating Element Of Wide Open Throttle Operation Ventilating Line | Engine |
| AC0421 | Check Deceleration Air Switchover Valve | Engine |
| AC0422 | Check Purging Pressure Control | Engine |
| AC0423 | Check Exhaust Gas Recirculation (EGR) Actuator | Engine |
| AC0424 | Check Intake Camshaft Valve Lift Switching Actuator. | Engine |
| AC0425 | Check Exhaust Gas Recirculation (EGR) Valve Hall Sensor | Engine |
| AC0426 | Check Exhaust Camshaft Solenoid | Engine |
| AC0427 | Reduction Of Rail Pressure | Engine |
| AC0428 | Boost Pressure Control Pressure Transducer | Engine |
| AC0429 | Crankcase Ventilation Valve Partial Load Operation | Engine |
| AC0430 | Check Whether Or Not Cylinder Fuel Injectors Leak. | Engine |
| AC0431 | Check Boost Pressure Regulator | Engine |
| AC0432 | Check Diesel Particulate Filter (DPF) Regeneration Heater Booster Control Unit | Engine |
| AC0433 | Rail Pressure | Engine |
| AC0434 | Electric Fan Override Test | Engine |
| AC0435 | CBV Position Override | Engine |
| AC0436 | Override Test Of Fuel Supply Pump | Engine |
| AC0437 | Diesel Exhaust Fluid (DEF) System Leak Test | Engine |
| AC0438 | Diesel Exhaust Fluid (DEF) Dosing Unit Override Test | Engine |
| AC0439 | Leakage Test Of Fuel System | Engine |
| AC0440 | Diesel Exhaust Fluid (DEF) Line Heater Test | Engine |

| | | |
|--------|---|---------------------------|
| AC0441 | Diesel Exhaust Fluid (DEF) Tank Heater Test | Engine |
| AC0442 | Hysteresis Test Of RTCV | Engine |
| AC0443 | Front End Panel Air Inlet Control Flap | Engine |
| AC0444 | Motor 1 Check | E-Four Wheel Drive (4WD) |
| AC0445 | Clutch Check | E-Four Wheel Drive (4WD) |
| AC0446 | E-Four Wheel Drive (4WD) Relay Check | E-Four Wheel Drive (4WD) |
| AC0447 | Motor 2 Check | E-Four Wheel Drive (4WD) |
| AC0448 | Generator Check | E-Four Wheel Drive (4WD) |
| AC0449 | Main Relay Check | E-Four Wheel Drive (4WD) |
| AC0450 | EHS Valve | EHS/PKB |
| AC0451 | EHS Indicator Lamp | EHS/PKB |
| AC0452 | EHS Warning Buzzer | EHS/PKB |
| AC0453 | Clutch Operation Test | Transmission |
| AC0454 | Gear Engage Test | Transmission |
| AC0455 | Shift Solenoid Valve 1 | Transmission |
| AC0456 | Shift Solenoid Valve 2 | Transmission |
| AC0457 | Shift Solenoid Valve 3 | Transmission |
| AC0458 | Shift Solenoid Valve 4 | Transmission |
| AC0459 | Sequence Solenoid Valve (S/V) | Transmission |
| AC0460 | Line Pressure Solenoid Valve | Transmission |
| AC0461 | Clutch B Pressure Solenoid Valve (S/V) | Transmission |
| AC0462 | Clutch A Pressure Solenoid Valve (S/V) | Transmission |
| AC0463 | Lubrication Flow Rate Solenoid Valve | Transmission |
| AC0464 | A-Axis Supply Pressure Solenoid Valve | Transmission |
| AC0465 | B Axis Supply Pressure Solenoid Valve | Transmission |
| AC0466 | Relay Of Starter | Transmission |
| AC0467 | Relay Of Reverse Lamp | Transmission |
| AC0468 | Transmission Control Module (TCM) Relay | Transmission |
| AC0469 | Shift Lock Solenoid | Transmission |
| AC0470 | Shift Solenoid A | Transmission |
| AC0471 | Shift Solenoid B | Transmission |
| AC0472 | Shift Solenoid C | Transmission |
| AC0473 | Shift Solenoid D | Transmission |
| AC0474 | Shift Solenoid E | Transmission |
| AC0475 | Pressure Control Solenoid A | Transmission |
| AC0476 | Pressure Control Solenoid B | Transmission |
| AC0477 | Pressure Control Solenoid C | Transmission |
| AC0478 | Relay Of Hydraulic Pump | Transmission |
| AC0479 | Clutch Solenoid Valve | Transmission |
| AC0480 | Engaging Solenoid Valve | Transmission |
| AC0481 | Selection Solenoid Valve | Transmission |
| AC0482 | Display | Transmission |
| AC0483 | Hydraulic Assembly Pump Prohibit | Transmission |
| AC0484 | Restored Hydraulic Assembly Pump | Transmission |
| AC0485 | Clutch Circuit Bleed Phase 1 | Transmission |
| AC0486 | Clutch Circuit Bleed Phase 2 | Transmission |
| AC0487 | Hydraulic Pressure Assembly Bleed | Transmission |
| AC0488 | Gearbox Return To Neutral | Transmission |
| AC0489 | Actuator Sequential Control | Transmission |
| AC0490 | Clutch Slave Cylinder Hydraulic Bleed | Transmission |
| AC0491 | Engage Reverse Gear | Transmission |
| AC0492 | Pressure Accumulator Discharge | Transmission |
| AC0493 | Clutch Touch Plug Programming | Transmission |
| AC0494 | Clutch Moving Test | Transmission |
| AC0495 | Engagement 1st | Transmission |
| AC0496 | Engagement 2nd | Transmission |
| AC0497 | Engagement 3rd | Transmission |
| AC0498 | Engagement 4th | Transmission |
| AC0499 | Engagement 5th | Transmission |
| AC0500 | Engagement 6th | Transmission |
| AC0501 | Continuously Variable Transmission (CVT) Oil Cooler Fan Circuit | Transmission |
| AC0502 | Selection Of Solenoid Valve | Transmission |
| AC0503 | Prohibition Of Hydraulic Assembly Pump | Transmission |
| AC0504 | Reversing Lights | Transmission |
| AC0505 | Clutch Circuit Bleed Phase 1 | Transmission |
| AC0506 | Clutch Circuit Bleed Phase 2 | Transmission |
| AC0507 | Clutch Slave Cylinder Hydraulic Circuit Bleeding | Transmission |
| AC0508 | Restored Hydraulic Assembly Pump | Transmission |
| AC0509 | Shift Transmission To Neutral | Transmission |
| AC0510 | Sequence 1 Solenoid Valve | Transmission |
| AC0511 | Sequence 2 Solenoid Valve | Transmission |
| AC0512 | Sequence Solenoid Valve 3 | Transmission |
| AC0513 | Sequence Solenoid Valve 4 | Transmission |
| AC0514 | Sequence Solenoid Valve 5 | Transmission |
| AC0515 | Sequence Solenoid Valve 6 | Transmission |
| AC0516 | Modulation Solenoid Valve | Transmission |
| AC0517 | Converter Lock-Up Solenoid Valve | Transmission |
| AC0518 | Selector Lever Locking Electromagnet | Transmission |
| AC0519 | Heat Exchanger Flow Solenoid Valve | Transmission |
| AC0520 | Clutch Exhaust Service | Transmission |
| AC0521 | Valve Activation Test | Transmission |
| AC0522 | Differential Solenoid Valve | Transmission |
| AC0523 | Fan Unit | Transmission |
| AC0524 | Battery Saver | Body Control Module (BCM) |
| AC0525 | Vehicle Security Horn | Body Control Module (BCM) |
| AC0526 | Horn | Body Control Module (BCM) |
| AC0527 | Theft Indicator | Body Control Module (BCM) |
| AC0528 | Trunk/Glass Hatch | Body Control Module (BCM) |
| AC0529 | Power Window - Down | Body Control Module (BCM) |
| AC0530 | Front Wiper | Body Control Module (BCM) |
| AC0531 | Flasher | Body Control Module (BCM) |
| AC0532 | Brake Switch | Body Control Module (BCM) |
| AC0533 | Head Lamp Washer | Body Control Module (BCM) |
| AC0534 | Head Lamp (High) | Body Control Module (BCM) |
| AC0535 | Oil Pressure Switch | Body Control Module (BCM) |
| AC0536 | Light Warn Alarm | Body Control Module (BCM) |
| AC0537 | Reverse Warning | Body Control Module (BCM) |
| AC0538 | Ignition Key Warning Alarm | Body Control Module (BCM) |
| AC0539 | Seat Belt Warning Test | Body Control Module (BCM) |
| AC0540 | Door Lock | Body Control Module (BCM) |
| AC0541 | Rear Defogger | Body Control Module (BCM) |
| AC0542 | Daytime Running Light | Body Control Module (BCM) |
| AC0543 | Illumination Dim Signal | Body Control Module (BCM) |
| AC0544 | Front Fog Lamp | Body Control Module (BCM) |
| AC0545 | Rear Fog Lamp | Body Control Module (BCM) |
| AC0546 | Tail Lamp | Body Control Module (BCM) |
| AC0547 | Head Lamp | Body Control Module (BCM) |
| AC0548 | Internal Lamp | Body Control Module (BCM) |
| AC0549 | Test Of Step Lamp | Body Control Module (BCM) |
| AC0550 | Lock Indicator | Body Control Module (BCM) |
| AC0551 | Adaptive Cruise Control (ACC) Indicator | Body Control Module (BCM) |

| | | |
|--------|--|---------------------------|
| AC0552 | Mirror+5 | Body Control Module (BCM) |
| AC0553 | Engine Switch Illumination | Body Control Module (BCM) |
| AC0554 | Park Range | Body Control Module (BCM) |
| AC0555 | Ignition Control 2 | Body Control Module (BCM) |
| AC0556 | Ignition Relay | Body Control Module (BCM) |
| AC0557 | Run Flat Tire Warning Light (W/L) | Body Control Module (BCM) |
| AC0558 | Speed Limiter 12V CPU | Body Control Module (BCM) |
| AC0559 | Adaptive Cruise Control (ACC) | Body Control Module (BCM) |
| AC0560 | Ignition Control 1 | Body Control Module (BCM) |
| AC0561 | Ignition On Indicator | Body Control Module (BCM) |
| AC0562 | Key Slot Illumination | Body Control Module (BCM) |
| AC0563 | Super Lock | Body Control Module (BCM) |
| AC0564 | Key Reminder Warn | Body Control Module (BCM) |
| AC0565 | | Body Control Module (BCM) |
| AC0566 | Trunk/Back Door | Body Control Module (BCM) |
| AC0567 | Cornering Lamp | Body Control Module (BCM) |
| AC0568 | Luggage Lamp Test | Body Control Module (BCM) |
| AC0569 | Inside Buzzer | Body Control Module (BCM) |
| AC0570 | Indicator | Body Control Module (BCM) |
| AC0571 | Outside Buzzer | Body Control Module (BCM) |
| AC0572 | Warning Lamp | Body Control Module (BCM) |
| AC0573 | ID Registration Warning | Body Control Module (BCM) |
| AC0574 | Power Window (PW) Remote Down Set | Body Control Module (BCM) |
| AC0575 | Door Lock Indicator | Body Control Module (BCM) |
| AC0576 | Siren | Body Control Module (BCM) |
| AC0577 | Liquid Crystal Display (LCD) | Body Control Module (BCM) |
| AC0578 | Run Flat Tire Warning Buzzer | Body Control Module (BCM) |
| AC0579 | Engine Immobiliser Warning Light | Body Control Module (BCM) |
| AC0580 | Right Indicator | Body Control Module (BCM) |
| AC0581 | Left Indicator | Body Control Module (BCM) |
| AC0582 | Unlocking The Doors And Boot | Body Control Module (BCM) |
| AC0583 | Front Interior Lamps | Body Control Module (BCM) |
| AC0584 | Remote Locking Buzzer | Body Control Module (BCM) |
| AC0585 | Central Door Locking | Body Control Module (BCM) |
| AC0586 | Windscreen Wiper Slow Speed | Body Control Module (BCM) |
| AC0587 | Engine Immobiliser Light | Body Control Module (BCM) |
| AC0588 | Door Locking Lamp | Body Control Module (BCM) |
| AC0589 | Driver Door Unlocking | Body Control Module (BCM) |
| AC0590 | Alarm Siren | Body Control Module (BCM) |
| AC0591 | Push Switch Indicator | Body Control Module (BCM) |
| AC0592 | Intelligent Key Link | Body Control Module (BCM) |
| AC0593 | Retractable Mirror | Body Control Module (BCM) |
| AC0594 | Power Slide Door (PSD) | Body Control Module (BCM) |
| AC0595 | Intelligent Key Link (Controller Area Network) | Body Control Module (BCM) |
| AC0596 | Air Conditioner (A/C) Indicator | Body Control Module (BCM) |
| AC0597 | Rear Screen Wiper | Body Control Module (BCM) |
| AC0598 | Buzzer | Body Control Module (BCM) |
| AC0599 | Keyless Power Window Up/Down | Body Control Module (BCM) |
| AC0600 | Flat Tire Warning | Body Control Module (BCM) |
| AC0601 | Fuel Lid Open | Body Control Module (BCM) |
| AC0602 | Cargo Lamp | Body Control Module (BCM) |
| AC0603 | Power Back Door (PBD) | Body Control Module (BCM) |
| AC0604 | PTC Heater | Body Control Module (BCM) |
| AC0605 | Retained Power | Body Control Module (BCM) |
| AC0606 | Rise Up Wiper Test | Body Control Module (BCM) |
| AC0607 | Panic Alarm | Body Control Module (BCM) |
| AC0608 | Power Sliding Door (PSD) Power Back Door (PBD) Open Test | Body Control Module (BCM) |
| AC0609 | Ignition Illumination | Body Control Module (BCM) |
| AC0610 | Starter Cut Relay | Body Control Module (BCM) |
| AC0611 | Levelizer Test | Body Control Module (BCM) |
| AC0612 | Right Low Beam Test | Body Control Module (BCM) |
| AC0613 | Left Low Beam Test | Body Control Module (BCM) |
| AC0614 | Boot Opener | Body Control Module (BCM) |
| AC0615 | Back/Trunk Lock Relay | Body Control Module (BCM) |
| AC0616 | Door Warning Indicator | Body Control Module (BCM) |
| AC0617 | Back Door Open Warn | Body Control Module (BCM) |
| AC0618 | Back Door/Trunk Unlock | Body Control Module (BCM) |
| AC0619 | Parcel Shelf | Body Control Module (BCM) |
| AC0620 | Valve | Body Control Module (BCM) |
| AC0621 | Assist Rear Window | Body Control Module (BCM) |
| AC0622 | Trunk | Body Control Module (BCM) |
| AC0623 | Assist Front Window | Body Control Module (BCM) |
| AC0624 | Driver Rear Window | Body Control Module (BCM) |
| AC0625 | Driver Front Window | Body Control Module (BCM) |
| AC0626 | Rear Defogger Indicator | Body Control Module (BCM) |
| AC0627 | Hydraulic Motor | Body Control Module (BCM) |
| AC0628 | Roof | Body Control Module (BCM) |
| AC0629 | Glass Hatch | Body Control Module (BCM) |
| AC0630 | Immobilizer Unit (IMMU) Antenna | Body Control Module (BCM) |
| AC0631 | Immobilizer Unit (IMMU) Power | Body Control Module (BCM) |
| AC0632 | Security Indicator | Body Control Module (BCM) |
| AC0633 | Front Wiper - High | Body Control Module (BCM) |
| AC0634 | Illumination Dim Signal (Controller Area Network) | Body Control Module (BCM) |
| AC0635 | Head Lamp (Low) | Body Control Module (BCM) |
| AC0636 | Flasher Right - Controller Area Network (CAN) | Body Control Module (BCM) |
| AC0637 | Flasher Left - Controller Area Network (CAN) | Body Control Module (BCM) |
| AC0638 | Flasher Right | Body Control Module (BCM) |
| AC0639 | Flasher Left | Body Control Module (BCM) |
| AC0640 | Front Wiper - Low | Body Control Module (BCM) |
| AC0641 | Front Wiper - Intermittent | Body Control Module (BCM) |
| AC0642 | Retained Power (Ignition) | Body Control Module (BCM) |
| AC0643 | All Door Unlock Motor | Body Control Module (BCM) |
| AC0644 | Door Lock Output Signal | Body Control Module (BCM) |
| AC0645 | Non Driver Door Lock | Body Control Module (BCM) |
| AC0646 | Driver Door Lock Motor | Body Control Module (BCM) |
| AC0647 | Driver Door Unlock Motor | Body Control Module (BCM) |
| AC0648 | Non Driver Door Unlock | Body Control Module (BCM) |
| AC0649 | All Door Lock Motor | Body Control Module (BCM) |
| AC0650 | Door Unlock Output Signal | Body Control Module (BCM) |
| AC0651 | Precharge Relay 1 | Body Control Module (BCM) |
| AC0652 | Precharge Relay 2 | Body Control Module (BCM) |
| AC0653 | Central Locking Key Light | Body Control Module (BCM) |
| AC0654 | Dead Locking | Body Control Module (BCM) |
| AC0655 | Hazard Lights LED | Body Control Module (BCM) |
| AC0656 | Dead Unlocking | Body Control Module (BCM) |
| AC0657 | Temperature Display | Body Control Module (BCM) |
| AC0658 | + Accessory Feed 3 Relay | Body Control Module (BCM) |
| AC0659 | Interior Lighting | Body Control Module (BCM) |
| AC0660 | Lower Driver Window | Body Control Module (BCM) |
| AC0661 | Driver Window Raise | Body Control Module (BCM) |
| AC0662 | Accessories Relay 2 | Body Control Module (BCM) |

| | | |
|--------|---|------------------------------|
| AC0663 | Energy Management Data Stored | Body Control Module (BCM) |
| AC0664 | Steering Condition Low | Body Control Module (BCM) |
| AC0665 | Rear Interior Lamps | Body Control Module (BCM) |
| AC0666 | De-Icing Of Rear Screen | Body Control Module (BCM) |
| AC0667 | Wiper Fast Speed | Body Control Module (BCM) |
| AC0668 | Luggage Compartment Lighting | Body Control Module (BCM) |
| AC0669 | Auto Adaptive Cruise Control (ACC) 1 | Body Control Module (BCM) |
| AC0670 | Test Of Trunk/Luggage Lamp | Body Control Module (BCM) |
| AC0671 | Keyfob Power Window Test | Body Control Module (BCM) |
| AC0672 | Test Of Reverse Lamp | Body Control Module (BCM) |
| AC0673 | Assist Seat Lamp Test | Body Control Module (BCM) |
| AC0674 | PTC Relay 3 | Body Control Module (BCM) |
| AC0675 | Stop Lamp 1 | Body Control Module (BCM) |
| AC0676 | PTC Relay 1 | Body Control Module (BCM) |
| AC0677 | PTC Relay 2 | Body Control Module (BCM) |
| AC0678 | Auto Adaptive Cruise Control (ACC) 2 | Body Control Module (BCM) |
| AC0679 | Automatic Back Door | Body Control Module (BCM) |
| AC0680 | Engine Start | Body Control Module (BCM) |
| AC0681 | Engine Start Request | Body Control Module (BCM) |
| AC0682 | Stop Lamp 2 | Body Control Module (BCM) |
| AC0683 | Stop Lamp 3 | Body Control Module (BCM) |
| AC0684 | Left Front Lamp Unit | Body Control Module (BCM) |
| AC0685 | Center Brake Lamp | Body Control Module (BCM) |
| AC0686 | License Plate Lamp | Body Control Module (BCM) |
| AC0687 | Fog Lamp - Left Rear | Body Control Module (BCM) |
| AC0688 | Inner Left Rear Lamp Unit | Body Control Module (BCM) |
| AC0689 | Power Window - Left Rear | Body Control Module (BCM) |
| AC0690 | Right Rear Lamp Unit | Body Control Module (BCM) |
| AC0691 | Front Turn Signal Lamp | Body Control Module (BCM) |
| AC0692 | Relay Of Circuit 30G | Body Control Module (BCM) |
| AC0693 | Fuse Box - Rear | Body Control Module (BCM) |
| AC0694 | Engine Compartment Fuse And Relay Module | Body Control Module (BCM) |
| AC0695 | Symbol Illumination | Body Control Module (BCM) |
| AC0696 | Activate Exterior Lamp Demo Mode | Body Control Module (BCM) |
| AC0697 | Rear Doors | Body Control Module (BCM) |
| AC0698 | Liftgate Central Locking Motor | Body Control Module (BCM) |
| AC0699 | Power Window - Right Rear | Body Control Module (BCM) |
| AC0700 | Courtesy Light Of Running Board | Body Control Module (BCM) |
| AC0701 | Emergency Opening Switch Of Trunk Lid | Body Control Module (BCM) |
| AC0702 | Illuminated Door Sill Moldings | Body Control Module (BCM) |
| AC0703 | Lamp Unit - Right Front | Body Control Module (BCM) |
| AC0704 | Lamp Unit - Left Rear | Body Control Module (BCM) |
| AC0705 | Footwell Lamp | Body Control Module (BCM) |
| AC0706 | Back Up Lamp | Body Control Module (BCM) |
| AC0707 | Trunk Lamp | Body Control Module (BCM) |
| AC0708 | Heater Of Spray Nozzle Hose | Body Control Module (BCM) |
| AC0709 | Inner Right Rear Lamp Unit | Body Control Module (BCM) |
| AC0710 | Rear Door Ambience Illumination | Body Control Module (BCM) |
| AC0711 | Headlamp Clean System Pump | Body Control Module (BCM) |
| AC0712 | Frequency Counter Reading Resetting | Body Control Module (BCM) |
| AC0713 | Tank Cap Central Locking Actuator | Body Control Module (BCM) |
| AC0714 | Alarm Sources Erase | Body Control Module (BCM) |
| AC0715 | System Pump Of Windshield Washer | Body Control Module (BCM) |
| AC0716 | UCH -> Transponder Ring Connection Test | Body Control Module (BCM) |
| AC0717 | Precharge Relay 3 | Body Control Module (BCM) |
| AC0718 | Rear De-Icing Indicator Lamp | Body Control Module (BCM) |
| AC0719 | Windscreen Wiper: Low Speed | Body Control Module (BCM) |
| AC0720 | Hazard Warning Lights | Body Control Module (BCM) |
| AC0721 | Heated Rear Screen Relay | Body Control Module (BCM) |
| AC0722 | Rear Window Locking | Body Control Module (BCM) |
| AC0723 | Unlocking Tailgate/Luggage Compartment | Body Control Module (BCM) |
| AC0724 | Brake Warning Lamp | Anti-Lock Brake System (ABS) |
| AC0725 | Slip Indicator Lamp | Anti-Lock Brake System (ABS) |
| AC0726 | Vehicle Dynamic Control (VDC) Warning Lamp | Anti-Lock Brake System (ABS) |
| AC0727 | Anti-Lock Brake System (ABS) Warn Lamp | Anti-Lock Brake System (ABS) |
| AC0728 | Brake Buzzer | Anti-Lock Brake System (ABS) |
| AC0729 | Left Rear SLR Solenoid | Anti-Lock Brake System (ABS) |
| AC0730 | Left Rear SLA Solenoid | Anti-Lock Brake System (ABS) |
| AC0731 | Right Rear SLR Solenoid | Anti-Lock Brake System (ABS) |
| AC0732 | Right Rear SLA Solenoid | Anti-Lock Brake System (ABS) |
| AC0733 | Left Front SLR Solenoid | Anti-Lock Brake System (ABS) |
| AC0734 | Left Front SLA Solenoid | Anti-Lock Brake System (ABS) |
| AC0735 | Right Front SLR Solenoid | Anti-Lock Brake System (ABS) |
| AC0736 | Right Front SLA Solenoid | Anti-Lock Brake System (ABS) |
| AC0737 | Adaptive Cruise Control (ACC) 0 Down | Anti-Lock Brake System (ABS) |
| AC0738 | Air Relay Stroke Simulation | Anti-Lock Brake System (ABS) |
| AC0739 | Serial Management Controller (SMC) 2 | Anti-Lock Brake System (ABS) |
| AC0740 | Serial Management Controller (SMC) 1 | Anti-Lock Brake System (ABS) |
| AC0741 | SCSS | Anti-Lock Brake System (ABS) |
| AC0742 | Air Relay Inhibit | Anti-Lock Brake System (ABS) |
| AC0743 | Air Relay Power Supply 2 | Anti-Lock Brake System (ABS) |
| AC0744 | Main Relay 2 | Anti-Lock Brake System (ABS) |
| AC0745 | Main Relay 1 | Anti-Lock Brake System (ABS) |
| AC0746 | Electric Brake Warning Lamp | Anti-Lock Brake System (ABS) |
| AC0747 | Motor Relay 2 | Anti-Lock Brake System (ABS) |
| AC0748 | Motor Relay 1 | Anti-Lock Brake System (ABS) |
| AC0749 | Air Relay Drain | Anti-Lock Brake System (ABS) |
| AC0750 | Right Front Solenoid | Anti-Lock Brake System (ABS) |
| AC0751 | Left Front Solenoid | Anti-Lock Brake System (ABS) |
| AC0752 | Right Rear Solenoid | Anti-Lock Brake System (ABS) |
| AC0753 | Left Rear Solenoid | Anti-Lock Brake System (ABS) |
| AC0754 | Anti-Lock Brake System (ABS) Motor | Anti-Lock Brake System (ABS) |
| AC0755 | Right Front Anti-Lock Braking System (ABS) Solenoid (Act) | Anti-Lock Brake System (ABS) |
| AC0756 | Left Front Anti-Lock Braking System (ABS) Solenoid (Act) | Anti-Lock Brake System (ABS) |
| AC0757 | Right Rear Anti-Lock Braking System (ABS) Solenoid (Activate) | Anti-Lock Brake System (ABS) |
| AC0758 | Left Rear Anti-Lock Braking System (ABS) Solenoid (Activate) | Anti-Lock Brake System (ABS) |
| AC0759 | Front Solenoid | Anti-Lock Brake System (ABS) |
| AC0760 | Rear Solenoid | Anti-Lock Brake System (ABS) |
| AC0761 | Slip Lamp | Anti-Lock Brake System (ABS) |
| AC0762 | Traction Control System (TCS) Failure Signal | Anti-Lock Brake System (ABS) |
| AC0763 | Auto Speed Control Device (ASCD) Signal | Anti-Lock Brake System (ABS) |
| AC0764 | Front Anti-Lock Braking System (ABS) Solenoid (ACT) | Anti-Lock Brake System (ABS) |
| AC0765 | Rear Anti-Lock Braking System (ABS) Solenoid (Activate) | Anti-Lock Brake System (ABS) |
| AC0766 | Booster Drive | Anti-Lock Brake System (ABS) |
| AC0767 | Stop Lamp On Relay | Anti-Lock Brake System (ABS) |
| AC0768 | Test Of Pump Motor | Anti-Lock Brake System (ABS) |
| AC0769 | Right Front Wheel Solenoid Valves | Anti-Lock Brake System (ABS) |
| AC0770 | Left Front Wheel Solenoid Valves | Anti-Lock Brake System (ABS) |
| AC0771 | Right Rear Wheel Solenoid Valves | Anti-Lock Brake System (ABS) |
| AC0772 | Left Rear Wheel Solenoid Valves | Anti-Lock Brake System (ABS) |
| AC0773 | Stop Lights Activation Relay | Anti-Lock Brake System (ABS) |

| | | |
|--------|--|--|
| AC0774 | Vehicle Speed Information | Anti-Lock Brake System (ABS) |
| AC0775 | Supply Test Of Wheel Speed Sensors | Anti-Lock Brake System (ABS) |
| AC0776 | Right Front Wheel Solenoid Valve Test | Anti-Lock Brake System (ABS) |
| AC0777 | Left Front Wheel Solenoid Valve Test | Anti-Lock Brake System (ABS) |
| AC0778 | Test Of Right Rear Wheel Solenoid Valve | Anti-Lock Brake System (ABS) |
| AC0779 | Test Of Light Rear Wheel Solenoid Valve | Anti-Lock Brake System (ABS) |
| AC0780 | Left Front Wheel Bleed | Anti-Lock Brake System (ABS) |
| AC0781 | Right Front Wheel Bleed | Anti-Lock Brake System (ABS) |
| AC0782 | Left Rear Wheel Bleed | Anti-Lock Brake System (ABS) |
| AC0783 | Right Rear Wheel Bleed | Anti-Lock Brake System (ABS) |
| AC0784 | Stop Pump Motor | Anti-Lock Brake System (ABS) |
| AC0785 | Hazard Warning Lamps Switch On Request | Anti-Lock Brake System (ABS) |
| AC0786 | Reference Engine Torque | Anti-Lock Brake System (ABS) |
| AC0787 | Engine Switch Illumination | Total Illumination Control Unit |
| AC0788 | Foot Lamp | Total Illumination Control Unit |
| AC0789 | Manifold Absolute Pressure (MAP) Lamp - Driver | Total Illumination Control Unit |
| AC0790 | Manifold Absolute Pressure (MAP) Lamp - Assist | Total Illumination Control Unit |
| AC0791 | Right Rear Personal Lamp | Total Illumination Control Unit |
| AC0792 | Left Rear Personal Lamp | Total Illumination Control Unit |
| AC0793 | Puddle Lamp | Total Illumination Control Unit |
| AC0794 | Mood Lamp | Total Illumination Control Unit |
| AC0795 | Ambience Lamp | Total Illumination Control Unit |
| AC0796 | Hospitality Illumination | Total Illumination Control Unit |
| AC0797 | Display Test | Multi Audio Vedio |
| AC0798 | Navigation Voice Test | Multi Audio Vedio |
| AC0799 | Bluetooth Detected On ESPACE | Multi Audio Vedio |
| AC0800 | GPS Information | Multi Audio Vedio |
| AC0801 | CD Eject | Multi Audio Vedio |
| AC0802 | Test Of Speaker | Multi Audio Vedio |
| AC0803 | Microphone Test | Multi Audio Vedio |
| AC0804 | Audio Output Tone Control | Multi Audio Vedio |
| AC0805 | All Segment | Heater-Vent-Air Conditioning (HVAC) |
| AC0806 | Heater-Vent-Air Conditioning (HVAC) Test | Heater-Vent-Air Conditioning (HVAC) |
| AC0807 | Full Cold Right Mixing Motor | Heater-Vent-Air Conditioning (HVAC) |
| AC0808 | Recycling Motor: Recycling | Heater-Vent-Air Conditioning (HVAC) |
| AC0809 | Recycling Motor: External Air | Heater-Vent-Air Conditioning (HVAC) |
| AC0810 | Passenger Compartment Fan Assembly | Heater-Vent-Air Conditioning (HVAC) |
| AC0811 | Distribution Motor: Vent | Heater-Vent-Air Conditioning (HVAC) |
| AC0812 | Distribution Motor: Demisting | Heater-Vent-Air Conditioning (HVAC) |
| AC0813 | Control Panel Warning Lights | Heater-Vent-Air Conditioning (HVAC) |
| AC0814 | High Voltage Battery Cooling Fan | High Voltage Battery |
| AC0815 | Heater Relay Unit | High Voltage Battery |
| AC0816 | Battery Heater | High Voltage Battery |
| AC0817 | Right Front Actuator | E-Suspension |
| AC0818 | Left Front Actuator | E-Suspension |
| AC0819 | Right Rear Actuator | E-Suspension |
| AC0820 | Left Rear Actuator | E-Suspension |
| AC0821 | Mode Lamp | E-Suspension |
| AC0822 | Four Wheel Actuator | E-Suspension |
| AC0823 | Compressor | E-Suspension |
| AC0824 | Exhaust Solenoid | E-Suspension |
| AC0825 | Warning Lamp | E-Suspension |
| AC0826 | Lock Operation | Four Wheel Air Suspension (4WAS) (Front) |
| AC0827 | Slow Mode | Four Wheel Air Suspension (4WAS) (Front) |
| AC0828 | Seat Slide | AUTO DRIVE POS. |
| AC0829 | Seat Reclining | AUTO DRIVE POS. |
| AC0830 | Front Seat Lifter | AUTO DRIVE POS. |
| AC0831 | Rear Seat Lifter | AUTO DRIVE POS. |
| AC0832 | Tilt Motor | AUTO DRIVE POS. |
| AC0833 | Telescopic Motor | AUTO DRIVE POS. |
| AC0834 | Motor Of Pedal | AUTO DRIVE POS. |
| AC0835 | Right Mirror Motor | AUTO DRIVE POS. |
| AC0836 | Left Mirror Motor | AUTO DRIVE POS. |
| AC0837 | Memory Switch Indicator | AUTO DRIVE POS. |
| AC0838 | Seat Lifter | AUTO DRIVE POS. |
| AC0839 | Clutch | Auto Slide Door |
| AC0840 | Slide Door | Auto Slide Door |
| AC0841 | Buzzer | Auto Slide Door |
| AC0842 | Lock Release | Auto Slide Door |
| AC0843 | Inspection Mode 1 | EV/HEV |
| AC0844 | Inspection Mode 2 | EV/HEV |
| AC0845 | Compression Test | EV/HEV |
| AC0846 | Speed Of Cooling Fan | EV/HEV |
| AC0847 | Direct Current (DC)/Direct Current (DC) Converter | EV/HEV |
| AC0848 | Inverter Water Pump | EV/HEV |
| AC0849 | Inspection Mode 5 | EV/HEV |
| AC0850 | Engine Cranking | EV/HEV |
| AC0851 | Water Pump | EV/HEV |
| AC0852 | Inspection Mode 3 | EV/HEV |
| AC0853 | Control Of Voltage | EV/HEV |
| AC0854 | Plug In Indicator | EV/HEV |
| AC0855 | Charge State Indicator 1 | EV/HEV |
| AC0856 | Charge State Indicator 2 | EV/HEV |
| AC0857 | Charge State Indicator 3 | EV/HEV |
| AC0858 | Fail Safe Charge Relay | EV/HEV |
| AC0859 | Relay Of Reverse Lamp | EV/HEV |
| AC0860 | Direct Current (DC)/Direct Current (DC) Converter Duty | EV/HEV |
| AC0861 | Ready Indicator | EV/HEV |
| AC0862 | Indicator Of Power Limitation | EV/HEV |
| AC0863 | EV System Warning Lamp | EV/HEV |
| AC0864 | 12V Battery Charge Warning Lamp | EV/HEV |
| AC0865 | ECO Indicator | EV/HEV |
| AC0866 | ECO Tree | EV/HEV |
| AC0867 | Water Pump 1 | EV/HEV |
| AC0868 | Water Pump 2 | EV/HEV |
| AC0869 | Cooling Fan | EV/HEV |
| AC0870 | Function Illumination Actuation | Shift |
| AC0871 | Clutch | Right Auto Slide Door |
| AC0872 | Right Low Beam Test | Adaptive Light |
| AC0873 | Left Low Beam Test | Adaptive Light |
| AC0874 | Levelizer Test | Adaptive Light |
| AC0875 | Accelerator Pedal Actuator Test 1 | Accelerator Pedal ACT |
| AC0876 | Accelerator Pedal Actuator Test 2 | Accelerator Pedal ACT |
| AC0877 | Buzzer | Sonar |
| AC0878 | Cancel Switch Indicator | Sonar |
| AC0879 | Sonar sensor | Sonar |
| AC0880 | Parking Space Measurement (PSM) Sonar Sensor | Sonar |
| AC0881 | Display Control | Sonar |
| AC0882 | Test Of Rear Proximity Sensor | Sonar |
| AC0883 | Rear Buzzer | Sonar |
| AC0884 | Front Buzzer | Sonar |

| | | |
|--------|--|--|
| AC0885 | Light-Emitting Diode (LED) | Sonar |
| AC0886 | Electronic Traction Support (ETS) Solenoid Valve | All Mode All Wheel Drive (AWD)/4 Wheel Drive (4WD) |
| AC0887 | Left Solenoid | All Mode All Wheel Drive (AWD)/4 Wheel Drive (4WD) |
| AC0888 | Right Solenoid | All Mode All Wheel Drive (AWD)/4 Wheel Drive (4WD) |
| AC0889 | Drive Power Distribution Torque | All Mode All Wheel Drive (AWD)/4 Wheel Drive (4WD) |
| AC0890 | Solenoid Valve | All Mode All Wheel Drive (AWD)/4 Wheel Drive (4WD) |
| AC0891 | Right Light-Emitting Diode (LED) Indicator | Around View Monitor (AVM) |
| AC0892 | Around View Monitor (AVM) Buzzer | Around View Monitor (AVM) |
| AC0893 | Left Light-Emitting Diode (LED) Headlamp Indicator | Around View Monitor (AVM) |
| AC0894 | Wash Active | Around View Monitor (AVM) |
| AC0895 | Air Active | Around View Monitor (AVM) |
| AC0896 | Air&Wash Active | Around View Monitor (AVM) |
| AC0897 | Electric Power Steering (EPS) Active | Around View Monitor (AVM) |
| AC0898 | External Buzzer | Around View Monitor (AVM) |
| AC0899 | Door Lock/Unlock | Intelligent Key |
| AC0900 | Antenna | Intelligent Key |
| AC0901 | Outside Buzzer | Intelligent Key |
| AC0902 | Inside Buzzer | Intelligent Key |
| AC0903 | Indicator | Intelligent Key |
| AC0904 | Liquid Crystal Display (LCD) | Intelligent Key |
| AC0905 | Park Range | Intelligent Key |
| AC0906 | Mirror+5 | Intelligent Key |
| AC0907 | Engine Switch Illumination | Intelligent Key |
| AC0908 | Lock Indicator | Intelligent Key |
| AC0909 | Adaptive Cruise Control (ACC) Indicator | Intelligent Key |
| AC0910 | Ignition On Indicator | Intelligent Key |
| AC0911 | Key Slot Illumination | Intelligent Key |
| AC0912 | Protocol Data Unit (PDU) Awake Up | Intelligent Key |
| AC0913 | Adaptive Cruise Control (ACC) | Intelligent Key |
| AC0914 | Ignition Control 1 | Intelligent Key |
| AC0915 | Speed Limiter 12V Control 1 | Intelligent Key |
| AC0916 | Steering Condition Low | Intelligent Key |
| AC0917 | Speed Limiter 12V CPU | Intelligent Key |
| AC0918 | Speed Limiter (SL) Communication K-Line | Intelligent Key |
| AC0919 | Speed Limiter 12V Control 2 | Intelligent Key |
| AC0920 | Ignition Control 2 | Intelligent Key |
| AC0921 | Electronic Steering Column Lock (ESCL) Command | Intelligent Key |
| AC0922 | Ultrasonic Motor (USM) Relay Command | Intelligent Key |
| AC0923 | Key Lock Solenoid | Intelligent Key |
| AC0924 | Interior Aerial 1 Test | Intelligent Key |
| AC0925 | Interior Aerial 2 Test | Intelligent Key |
| AC0926 | External Boot Aerial Test | Intelligent Key |
| AC0927 | Left Front External Aerial Test | Intelligent Key |
| AC0928 | Right Front External Aerial Test | Intelligent Key |
| AC0929 | Door Lock | Intelligent Key |
| AC0930 | Buzzer Drive | Lane Camera |
| AC0931 | Drive Of System On Lamp | Lane Camera |
| AC0932 | Indicator Lamp Drive | Lane Camera |
| AC0933 | Lane Departure Warning (LDW) On Indicator | Lane Camera |
| AC0934 | Lane Departure Warning Lamp | Lane Camera |
| AC0935 | Lane Departure Prevention (LDP) On Indicator | Lane Camera |
| AC0936 | Self Diagnostic Mode | Four Wheel Air Suspension (4WAS) (Main)/RAS/HICAS |
| AC0937 | Brake Actuator 1 Mode 1 | Chassis Control |
| AC0938 | Brake Actuator 1 Mode 2 | Chassis Control |
| AC0939 | Brake Actuator 1 Mode 3 | Chassis Control |
| AC0940 | Brake Actuator 2 Mode 1 | Chassis Control |
| AC0941 | Brake Actuator 2 Mode 2 | Chassis Control |
| AC0942 | Brake Actuator 2 Mode 3 | Chassis Control |
| AC0943 | Brake Actuator 3 Mode 1 | Chassis Control |
| AC0944 | Brake Actuator 3 Mode 2 | Chassis Control |
| AC0945 | Brake Actuator 3 Mode 3 | Chassis Control |
| AC0946 | ESS Relay Active | Chassis Control |
| AC0947 | ALC Display | Chassis Control |
| AC0948 | Front Tire Display | Chassis Control |
| AC0949 | Right Rear Tire Display | Chassis Control |
| AC0950 | ESS Active | Chassis Control |
| AC0951 | Steering Angle Command | Chassis Control |
| AC0952 | Steering Wheel Force Command | Chassis Control |
| AC0953 | Active Stop Lamp Off Relay 1 | Chassis Control |
| AC0954 | Active Stop Lamp Off Relay 2 | Chassis Control |
| AC0955 | Master Warning Active | Chassis Control |
| AC0956 | Hill Descent Control (HDC) Display | Chassis Control |
| AC0957 | Brake Hold Display | Chassis Control |
| AC0958 | Automatic Emergency Braking (AEB) Display | Chassis Control |
| AC0959 | Left Front Tire Display | Chassis Control |
| AC0960 | Left Rear Tire Display | Chassis Control |
| AC0961 | Vehicle Display | Chassis Control |
| AC0962 | Interrupt Display | Chassis Control |
| AC0963 | Turn Display | Chassis Control |
| AC0964 | ALC Level | Chassis Control |
| AC0965 | ALC Setting | Chassis Control |
| AC0966 | ATC 1 Display | Chassis Control |
| AC0967 | ATC 2 Display | Chassis Control |
| AC0968 | ATC 3 Display | Chassis Control |
| AC0969 | ATC 4 Display | Chassis Control |
| AC0970 | ATC 5 Display | Chassis Control |
| AC0971 | Active Ride Control (ARC) Display | Chassis Control |
| AC0972 | Blind Spot Warning (BSW)/BSI Warning Lamp | Blind Spot Warning (BSW) Buzzer |
| AC0973 | Intelligent Cruise Control (ICC) Buzzer | Blind Spot Warning (BSW) Buzzer |
| AC0974 | Buzzer 1 (Advanced Driving Assistance System) | Blind Spot Warning (BSW) Buzzer |
| AC0975 | Buzzer 2 (Advanced Driving Assistance System) | Blind Spot Warning (BSW) Buzzer |
| AC0976 | Buzzer 3 (Advanced Driving Assistance System) | Blind Spot Warning (BSW) Buzzer |
| AC0977 | Buzzer 4 (Advanced Driving Assistance System) | Blind Spot Warning (BSW) Buzzer |
| AC0978 | Buzzer 1 (Central Control Module) | Blind Spot Warning (BSW) Buzzer |
| AC0979 | Buzzer 2 (Central Control Module) | Blind Spot Warning (BSW) Buzzer |
| AC0980 | Buzzer 3 (Central Control Module) | Blind Spot Warning (BSW) Buzzer |
| AC0981 | Buzzer 4 (Central Control Module) | Blind Spot Warning (BSW) Buzzer |
| AC0982 | Active Noise Cancellation (ANC) Test Tone | Active Noise Cancellation (ANC) |
| AC0983 | Blind Spot Warning (BSW)/BSI Indicator Drive | Side radar (Rear left) |
| AC0984 | Alternator Duty | EMCM |
| AC0985 | Auto Stop Start | EMCM |
| AC0986 | On/Off Switch | CIU |
| AC0987 | Display Test | CIU |
| AC0988 | Blind Spot Warning (BSW)/BSI Indicator Drive | Side radar (Rear right) |
| AC0989 | Indicator | Multi Display |
| AC0990 | VSP Speaker | VSP |
| AC0991 | Start Up Sound Speaker | VSP |
| AC0992 | VSP Off Indicator | VSP |
| AC0993 | Left VSP Speaker | VSP |
| AC0994 | Right VSP Speaker | VSP |
| AC0995 | Stop Lamp Off Relay | Brake |

| | | |
|--------|---|----------------------------------|
| AC0996 | Initial Check | HAS |
| AC0997 | BIVC 1 | HAS |
| AC0998 | BIVC 2 | HAS |
| AC0999 | BIVS | HAS |
| AC1000 | BOVC 1 | HAS |
| AC1001 | BOVC 2 | HAS |
| AC1002 | BOVS | HAS |
| AC1003 | BSV | HAS |
| AC1004 | SSV 1 | HAS |
| AC1005 | SSV 2 | HAS |
| AC1006 | Quick Charge Relay | Charger/PD Module |
| AC1007 | Normal Charge Relay | Charger/PD Module |
| AC1008 | Quick Charge Permit Signal Circuit | Charger/PD Module |
| AC1009 | All Segment | PTC Heater |
| AC1010 | Heater-Vent-Air Conditioning (HVAC) Test | PTC Heater |
| AC1011 | Instrument Panel Needles | Cluster |
| AC1012 | Instrument Panel Warning Lamp | Cluster |
| AC1013 | Display | Cluster |
| AC1014 | Buzzer | Cluster |
| AC1015 | Instrument Panel Warning Lights | Cluster |
| AC1016 | Lighting | Cluster |
| AC1017 | Oil Change Interval In Months | Cluster |
| AC1018 | Matrix Display | Cluster |
| AC1019 | Initialization Of Computer | Cluster |
| AC1020 | Hazard Lights LED | Cluster |
| AC1021 | Electronic Control Unit (ECU) Programming Routine | Cluster |
| AC1022 | Electronic Control Unit (ECU) -> Transponder Ring Connection Test | Cluster |
| AC1023 | Recycling Motor: External Air | Charge |
| AC1024 | Recycling Motor: Recycling | Charge |
| AC1025 | Mixing Motor: All Cold | Charge |
| AC1026 | Mixing Motor: All Hot | Charge |
| AC1027 | Distribution Motor: Vent | Charge |
| AC1028 | Distribution Motor: Demisting | Charge |
| AC1029 | Ignite Heater | Charge |
| AC1030 | Switch The Heater Off | Charge |
| AC1031 | Passenger Compartment Fan Assembly | Charge |
| AC1032 | Rear Fan : Cold | Charge |
| AC1033 | Rear Fan : Hot | Charge |
| AC1034 | Compressor | Air Levelizer |
| AC1035 | Exhaust Solenoid | Air Levelizer |
| AC1036 | Warning Lamp | Air Levelizer |
| AC1037 | Check Fuel Pressure And Internal Leaktightness Of Fuel System | Fuel System Control Module |
| AC1038 | Reset Of Control Unit | Left Front Door Control Unit |
| AC1039 | Adjust Actuator Motor Via Actuation | Left Front Door Control Unit |
| AC1040 | Auto Anti-Dazzling Mirror | Left Front Door Control Unit |
| AC1041 | Defogger Of Door Mirror | Left Front Door Control Unit |
| AC1042 | Left Front Door Exit And Warning Lamp | Left Front Door Control Unit |
| AC1043 | Left Front Door Handle Illumination | Left Front Door Control Unit |
| AC1044 | Left Front Door Lock Actuator | Left Front Door Control Unit |
| AC1045 | Left Front Door Switch Illumination | Left Front Door Control Unit |
| AC1046 | Left Front Power Window Motor | Left Front Door Control Unit |
| AC1047 | Left Front Super Lock Actuator | Left Front Door Control Unit |
| AC1048 | Light-Emitting Diode (LED) | Left Front Door Control Unit |
| AC1049 | Left Blind Spot Assist Warning | Left Front Door Control Unit |
| AC1050 | Adjustment Of Left Outside Mirror | Left Front Door Control Unit |
| AC1051 | Front Passenger Seat Headrest Motor | Control Unit Of Passenger Seat |
| AC1052 | Front Passenger Seat Lifting Motor - Front | Control Unit Of Passenger Seat |
| AC1053 | Front Passenger Seat Lifting Motor - Rear | Control Unit Of Passenger Seat |
| AC1054 | Front Passenger Seat Reclining Motor | Control Unit Of Passenger Seat |
| AC1055 | Front Passenger Seat Sliding Motor | Control Unit Of Passenger Seat |
| AC1056 | Reset Of Control Unit | Control Unit Of Right Front Door |
| AC1057 | Adjust Actuator Motor Via Actuation | Control Unit Of Right Front Door |
| AC1058 | Defogger Of Door Mirror | Control Unit Of Right Front Door |
| AC1059 | Light-Emitting Diode (LED) | Control Unit Of Right Front Door |
| AC1060 | Right Front Door Exit And Warning Lamp | Control Unit Of Right Front Door |
| AC1061 | Right Front Door Handle Illumination | Control Unit Of Right Front Door |
| AC1062 | Right Front Door Lock Actuator | Control Unit Of Right Front Door |
| AC1063 | Right Front Door Switch Illumination | Control Unit Of Right Front Door |
| AC1064 | Right Front Power Window Motor | Control Unit Of Right Front Door |
| AC1065 | Right Front Super Lock Actuator | Control Unit Of Right Front Door |
| AC1066 | Right Outside Mirror Ambient Lamp | Control Unit Of Right Front Door |
| AC1067 | Blind Spot Assist Warning - Right | Control Unit Of Right Front Door |
| AC1068 | Adjustment Of Right Outside Mirror | Control Unit Of Right Front Door |
| AC1069 | Right Side Turn Signal Lamp | Control Unit Of Right Front Door |
| AC1070 | Right Front Speaker Line Test | Radio |
| AC1071 | Left Front Speaker Line Test | Radio |
| AC1072 | Right Rear Speaker Line Test | Radio |
| AC1073 | Test Of Left Rear Speaker Line | Radio |
| AC1074 | Microphone Test | Radio |
| AC1075 | CD Eject | Radio |
| AC1076 | Test Of Subwoofer | Radio |
| AC1077 | Left Tail Lamp | Trailer Recognition Control Unit |
| AC1078 | Left Turn Signal | Trailer Recognition Control Unit |
| AC1079 | Type Of Rear Fog Lamp | Trailer Recognition Control Unit |
| AC1080 | Right Tail Lamp | Trailer Recognition Control Unit |
| AC1081 | Right Turn Signal | Trailer Recognition Control Unit |
| AC1082 | Terminal 15g Trailer Socket | Trailer Recognition Control Unit |
| AC1083 | Terminal 30g Trailer Socket | Trailer Recognition Control Unit |
| AC1084 | Illumination Of Trailer Hitch Release Switch | Trailer Recognition Control Unit |

Special Functions List

| Index NO. | Functions Name | System Name |
|-----------|---|---|
| SP0001 | Vehicle Identification Number (VIN) Registration | BAC |
| SP0002 | ID Registration | Air Pressure Monitor |
| SP0003 | Switching The Tire Pressure Monitor System (TPMS) Status Between On And Off | Air Pressure Monitor |
| SP0004 | Vehicle Identification Number (VIN) Registration | Air Pressure Monitor |
| SP0005 | The Four Valves Codes Programming | Air Pressure Monitor |
| SP0006 | MILLIWAVE RADAR ADJUST | Laser/Radar |
| SP0007 | FEB Default Setting | Laser/Radar |
| SP0008 | FEB Operation Mileage | Laser/Radar |
| SP0009 | Auto Cancel Cause | Laser/Radar |
| SP0010 | Vertical alignment | Laser/Radar |
| SP0011 | Horizontal alignment | Laser/Radar |
| SP0012 | Sensor Customize | Head Lamp Levelizer |
| SP0013 | Initialize Sensor | Head Lamp Levelizer |
| SP0014 | Trunk Opener | Convertible Roof |
| SP0015 | Flipper Door | Convertible Roof |
| SP0016 | Roof Latch | Convertible Roof |
| SP0017 | Roof/Trunk/Parcel Shelf | Convertible Roof |
| SP0018 | Reset Of Roof State | Convertible Roof |
| SP0019 | Learning Of Roof State | Convertible Roof |
| SP0020 | Auto Cancel Cause | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| SP0021 | LASER BEAM ADJUST | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| SP0022 | Auto Cancel Cause 1 | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| SP0023 | Auto Cancel Cause 2 | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| SP0024 | Auto Cancel Cause 3 | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| SP0025 | CAUSE OF AUTO-CANCEL 4 | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| SP0026 | FEB Operation Mileage | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| SP0027 | FEB Default Setting | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| SP0028 | CAUSE OF AUTO-CANCEL 5 | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| SP0029 | CAUSE OF AUTO-CANCEL 6 | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| SP0030 | Steering torque calibration | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| SP0031 | (TBD)Failure status data monitor removal | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| SP0032 | (TBD)Movement status Data clear | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) |
| SP0033 | Resetting Internal Protection | Intelligent Power Distribution Module (IPDM) Engine Room |
| SP0034 | Battery Cycle Counter Memorised | Intelligent Power Distribution Module (IPDM) Engine Room |
| SP0035 | Battery Cycle Counter Estimated | Intelligent Power Distribution Module (IPDM) Engine Room |
| SP0036 | Unlock Computer | Air Bag |
| SP0037 | Lock Computer | Air Bag |
| SP0038 | Write Last After Sales Operation Date | Air Bag |
| SP0039 | Vehicle Identification Number (VIN) Registration | Air Bag |
| SP0040 | Key Number Learn | Air Bag |
| SP0041 | Clear EDR | Air Bag |
| SP0042 | Calibration Of Sensor | Electric Power Steering (EPS)/Dast 3 |
| SP0043 | Adjustment Of Steering Angle | Electric Power Steering (EPS)/Dast 3 |
| SP0044 | Steering Angle Sensor Adjustment | Electric Power Steering (EPS)/Dast 3 |
| SP0045 | Vehicle Identification Number (VIN) Registration | Electric Power Steering (EPS)/Dast 3 |
| SP0046 | Fuel Meter Diagnosis (Analog Pointer) | Meter/MKA |
| SP0047 | Diagnosis Of Warning Lamp | Meter/MKA |
| SP0048 | Turn Signal Buzzer Diagnosis | Meter/MKA |
| SP0049 | Warning Light On History | Meter/MKA |
| SP0050 | Diagnosis Of Outside Air Temperature | Meter/MKA |
| SP0051 | Reset Guideline Position | Meter/MKA |
| SP0052 | Customize Reset Diagnostic Equipment | Meter/MKA |
| SP0053 | Customize Reset Consult | Meter/MKA |
| SP0054 | Table Initialization Assyst | Meter/MKA |
| SP0055 | Combination Meter Teach | Meter/MKA |
| SP0056 | Manufacturer Default Settings Transfer | Meter/MKA |
| SP0057 | Offset Of Resolver | Motor Control |
| SP0058 | Idle Air Volume Learn | Engine |
| SP0059 | Fuel Pressure Release | Engine |
| SP0060 | Self-Learning Control | Engine |
| SP0061 | Target Ignition Timing Adjustment | Engine |
| SP0062 | Exhaust Valve Torque Control Learn | Engine |
| SP0063 | Ignition Timing Adjustment | Engine |
| SP0064 | Check Fuel Lines | Engine |
| SP0065 | Target Idle RPM Adjustment | Engine |
| SP0066 | CO Adjustment | Engine |
| SP0067 | Ethanol Mix Ratio Adjustment | Engine |
| SP0068 | Air Fuel Ratio (A/F) Initial Learning | Engine |
| SP0069 | Vehicle Identification Number (VIN) Registration | Engine |
| SP0070 | Writing Fuel Learn Value | Engine |
| SP0071 | Valve Timing (V/T) Control Learn | Engine |
| SP0072 | Accelerator Pedal (AP) Position Learn Clear | Engine |
| SP0073 | Starter Operation Counter Clear | Engine |
| SP0074 | CML Battery Discharge Current Clear | Engine |
| SP0075 | Closed Throttle Position Learn | Engine |
| SP0076 | Variable Valve Lift (VVEL) Position Sensor Adjustment Prepare | Engine |
| SP0077 | Manual Transmission Neutral Position Learn | Engine |
| SP0078 | Calibration Of G Sensor | Engine |
| SP0079 | Clear Of Sub-Starter & Generator Operation Count | Engine |
| SP0080 | Clear Of Valve Timing Offset Data | Engine |
| SP0081 | Supercharged Magnetic Clutch Engagement Count Clear | Engine |
| SP0082 | Cumulative Sub-Battery Discharge Current Clear | Engine |
| SP0083 | Writing Valve Timing Offset Data | Engine |
| SP0084 | Active Control Engine Mounting A | Engine |
| SP0085 | Active Control Engine Mounting B | Engine |
| SP0086 | Engine Coolant Bypass Valve | Engine |
| SP0087 | Misfire Count - Past | Engine |
| SP0088 | Misfire Count - Real-Time | Engine |
| SP0089 | TARGET IGN TIM HLD | Engine |
| SP0090 | Saving Date For Replacing CPU | Engine |
| SP0091 | Writing data for replc ecu | Engine |
| SP0092 | MAIN BATTERY TYPE CONFIGURATION | Engine |
| SP0093 | SUB-BATTERY TYPE CONFIGURATION | Engine |
| SP0094 | A/F SEN1 (B1) P1273 | Engine |
| SP0095 | A/F SEN1 (B1) P1274 | Engine |
| SP0096 | A/F SEN1 (B1) P1278/P1279 | Engine |
| SP0097 | A/F SEN1 (B1) P1275 | Engine |
| SP0098 | A/F SEN1 (B1) P1276 | Engine |
| SP0099 | A/F SEN1 (B2) P1281/P1282 | Engine |
| SP0100 | A/F SEN1 (B2) P1283 | Engine |
| SP0101 | A/F SEN1 (B2) P1284 | Engine |
| SP0102 | A/F SEN1 (B2) P1288/P1289 | Engine |
| SP0103 | A/F SEN1 (B2) P1285 | Engine |
| SP0104 | A/F SEN1 (B2) P1286 | Engine |
| SP0105 | PURG FLOW P0441 | Engine |
| SP0106 | PURG FLOW P1447 | Engine |
| SP0107 | VC CUT/V BP/V P1491 | Engine |
| SP0108 | PURG CN/V&S/V P1493 | Engine |
| SP0109 | H02S1 (B1) P0134 | Engine |
| SP0110 | H02S1 (B1) P0130 | Engine |
| SP0111 | H02S1 (B1) P1143 | Engine |

| | | | |
|--------|--|--|--------|
| SP0112 | | H02S1 (B1) P0131 | Engine |
| SP0113 | | H02S1 (B1) P1144 | Engine |
| SP0114 | | H02S1 (B1) P0132 | Engine |
| SP0115 | | H02S1 (B1) P0133 | Engine |
| SP0116 | | H02S1 (B2) P0154 | Engine |
| SP0117 | | H02S1 (B2) P0150 | Engine |
| SP0118 | | H02S1 (B2) P1163 | Engine |
| SP0119 | | H02S1 (B2) P0151 | Engine |
| SP0120 | | H02S1 (B2) P1164 | Engine |
| SP0121 | | H02S1 (B2) P0152 | Engine |
| SP0122 | | H02S1 (B2) P0153 | Engine |
| SP0123 | | TCC S/V FNCTN P1776 | Engine |
| SP0124 | | PURG VOL CN/V P1444 | Engine |
| SP0125 | | A/F SEN1 (B1) P1271/P1272 | Engine |
| SP0126 | | POOR ENG PWR P1196 | Engine |
| SP0127 | | A/F SENSOR1 (B1) P014C/P014D | Engine |
| SP0128 | | A/F SENSOR1 (B2) P014E/P014F | Engine |
| SP0129 | | A/F SENSOR1 (B1) P015A/P015B | Engine |
| SP0130 | | A/F SENSOR1 (B2) P015C/P015D | Engine |
| SP0131 | | H02S3 (B1) P1169 | Engine |
| SP0132 | | H02S3 (B1) P0143 | Engine |
| SP0133 | | H02S3 (B1) P1170 | Engine |
| SP0134 | | H02S3 (B1) P0144 | Engine |
| SP0135 | | H02S3 (B1) P0145 | Engine |
| SP0136 | | H02S2 (B1) P1146 | Engine |
| SP0137 | | H02S2 (B1) P0137 | Engine |
| SP0138 | | H02S2 (B1) P1147 | Engine |
| SP0139 | | H02S2 (B1) P0138 | Engine |
| SP0140 | | H02S2 (B1) P0139 | Engine |
| SP0141 | | H02S2 (B2) P1166 | Engine |
| SP0142 | | H02S2 (B2) P0157 | Engine |
| SP0143 | | H02S2 (B2) P1167 | Engine |
| SP0144 | | H02S2 (B2) P0158 | Engine |
| SP0145 | | H02S2 (B2) P0159 | Engine |
| SP0146 | | EGR SYSTEM P0400 | Engine |
| SP0147 | | Exhaust Gas Recirculation (EGR) Valve Learn Clear | Engine |
| SP0148 | | Throttle Position Learning Clear | Engine |
| SP0149 | | Exhaust Differential Pressure Learn Clear | Engine |
| SP0150 | | Diesel Particulate Filter (DPF) Data Clear | Engine |
| SP0151 | | Air Fuel Ratio (A/F) Sensor Learn Clear | Engine |
| SP0152 | | Service Regeneration | Engine |
| SP0153 | | Injector Learning Value Clear | Engine |
| SP0154 | | Enter Injector Calibration Data | Engine |
| SP0155 | | Clear Mixture Ratio Learning Value | Engine |
| SP0156 | | Exhaust Gas Recirculation (EGR) Adaptives | Engine |
| SP0157 | | Programmed Values | Engine |
| SP0158 | | Programming Reinitialize | Engine |
| SP0159 | | Pressure Regulation Adaptive | Engine |
| SP0160 | | Writing Data For CPU Replacement | Engine |
| SP0161 | | Learning | Engine |
| SP0162 | | Reset ZFC Value | Engine |
| SP0163 | | Injection Adjustment Value Registration | Engine |
| SP0164 | | Vehicle Identification Number (VIN) Written | Engine |
| SP0165 | | Clear Oxidation Catalyst (OC) Data | Engine |
| SP0166 | | Exhaust Fuel Injection Data Clear | Engine |
| SP0167 | | Throttle Position Switch/Throttle Position Sensor Idle Position Adjustment | Engine |
| SP0168 | | Power Takeoff (PTO) Registration | Engine |
| SP0169 | | Configuration Clear | Engine |
| SP0170 | | Injection Adjustment Value Clear | Engine |
| SP0171 | | Read Vehicle Identification Number (VIN) | Engine |
| SP0172 | | Decrement Idle Speed | Engine |
| SP0173 | | Idle Speed Increment | Engine |
| SP0174 | | Program Reinitialize | Engine |
| SP0175 | | Force Feeding Of Pump Reset | Engine |
| SP0176 | | Reset Injector Adaptive | Engine |
| SP0177 | | Pump Learning Clear | Engine |
| SP0178 | | Exhaust Differential Pressure Sensor Learn Clear | Engine |
| SP0179 | | Engine Room Air Temperature Sensor Learn Clear | Engine |
| SP0180 | | Clear Exhaust Pressure Sensor Learn | Engine |
| SP0181 | | A/F SEN 1 LEARN CLR | Engine |
| SP0182 | | A/F SEN 2 LEARN CLR | Engine |
| SP0183 | | CONFIG CLR | Engine |
| SP0184 | | DPF DATA CLEAR | Engine |
| SP0185 | | INI ADJ VAL CLR | Engine |
| SP0186 | | TC BOOST CONTROL ACTUATOR POSITION LEARNING | Engine |
| SP0187 | | FUEL INI QUANTITY LEARNING | Engine |
| SP0188 | | ENTER INJCTR CALIB DATA 2 | Engine |
| SP0189 | | After Diesel Particulate Filter (DPF) Regeneration | Engine |
| SP0190 | | After Replacement Of Diesel Particulate Filter (DPF) | Engine |
| SP0191 | | Enter Injector Codes | Engine |
| SP0192 | | Commercial Vehicle Idle Speed Mode | Engine |
| SP0193 | | Start OBD test: Catalytic converter | Engine |
| SP0194 | | Start OBD test: O2 sensors | Engine |
| SP0195 | | Fast Idle Speed Modification | Engine |
| SP0196 | | Injection Pump Adaptatives | Engine |
| SP0197 | | Starting Cycles Number | Engine |
| SP0198 | | Engine Adaptives | Engine |
| SP0199 | | Proportional Richness Sensor Program | Engine |
| SP0200 | | Rail Pressure Sensor Adaptive | Engine |
| SP0201 | | Adaptives on etc actuator malfunction | Engine |
| SP0202 | | Programming Of Air Damper Valve | Engine |
| SP0203 | | Programming Of Air Flow Meter | Engine |
| SP0204 | | Cruise Control (CC)/Speed Limiter (SL) Program | Engine |
| SP0205 | | Differential Exhaust Pressure Sensor | Engine |
| SP0206 | | Exhaust Gas Recirculation (EGR) Valve Programming | Engine |
| SP0207 | | Engine OII Cruise Control/Speed Limit Program | Engine |
| SP0208 | | EXHAUST THROTTLE VALVE PROGRAMMING | Engine |
| SP0209 | | Flywheel Target PG | Engine |
| SP0210 | | Fuel Supply Pressure | Engine |
| SP0211 | | H/P FUEL PUMP INITIAL STARTS COUNTER RESET | Engine |
| SP0212 | | H/P FUEL PUMP TOTAL STARTS COUNTER RESET | Engine |
| SP0213 | | LOW PRESSURE EGR VALVE PROGRAMMING | Engine |
| SP0214 | | Manifold Pressure Sensor Programming | Engine |
| SP0215 | | Swirl Flap | Engine |
| SP0216 | | Programming Of Swirl Flap | Engine |
| SP0217 | | Turbocharger Programming | Engine |
| SP0218 | | Electronic Control Unit (ECU) Memory | Engine |
| SP0219 | | Injector | Engine |
| SP0220 | | Exhaust Gas Recirculation (EGR) Valve | Engine |
| SP0221 | | Inlet Flap | Engine |
| SP0222 | | After The Particle Filter Replacement | Engine |
| SP0223 | | After Particle Filter Regeneration With The Diagnosis Tool. | Engine |
| SP0224 | | Type Of Pump Pressure Regulator | Engine |
| SP0225 | | Stop Fuel Supply Prevention | Engine |
| SP0226 | | Oil Change (Ocs) Oxidation Interval | Engine |

| | | |
|--------|--|--------------|
| SP0227 | Oil Change Interval (OCS): Dilution | Engine |
| SP0228 | Heater Plugs | Engine |
| SP0229 | Lock Injector Control | Engine |
| SP0230 | Speed Limiter | Engine |
| SP0231 | Average Air Temperature | Engine |
| SP0232 | Diesel Particulate Filter (DPF) Relative Pressure Sensor | Engine |
| SP0233 | Exhaust Air Flap Programming | Engine |
| SP0234 | Exhaust Fuel Injector Circuit | Engine |
| SP0235 | Idle Speed Reference | Engine |
| SP0236 | Preheater Unit | Engine |
| SP0237 | Have Computer Data Saved | Engine |
| SP0238 | Saved Date Written | Engine |
| SP0239 | Pressure Regulation Adaptive | Engine |
| SP0240 | Lock Injector Control | Engine |
| SP0241 | Injector Code - Cylinder 1 | Engine |
| SP0242 | Injector Code - Cylinder 2 | Engine |
| SP0243 | Injector Code - Cylinder 3 | Engine |
| SP0244 | Injector Code - Cylinder 4 | Engine |
| SP0245 | Fuel Pump Programming | Engine |
| SP0246 | Air Intake Flap Adaptives Malfunction | Engine |
| SP0247 | Programming Of Air Damper Valve (R044) | Engine |
| SP0248 | Programming Of Air Path | Engine |
| SP0249 | Exhaust Gas Recirculation (EGR) Bypass Programming | Engine |
| SP0250 | Starting Number 1 | Engine |
| SP0251 | Starting Number 2 | Engine |
| SP0252 | Starting Number 3 | Engine |
| SP0253 | Starting Number 4 | Engine |
| SP0254 | Diesel Particulate Filter Replacement | Engine |
| SP0255 | Air Filter Contamination Level Reset | Engine |
| SP0256 | Camshaft Hall Sensor Learned Values Reset | Engine |
| SP0257 | High Pressure Fuel Pump Total Starts Counter Clear | Engine |
| SP0258 | Clear Value Of Wastegate Actuator Position Learn | Engine |
| SP0259 | Exhaust Gas Recirculation (EGR) Control Valve Closed Position Learning | Engine |
| SP0260 | Starter Operation Count Written | Engine |
| SP0261 | Camshaft Position Teach | Engine |
| SP0262 | Particulate Filter Differential Pressure Sensor | Engine |
| SP0263 | Exhaust Flap Low Setting | Engine |
| SP0264 | Clutch Pedal End Stroke | Engine |
| SP0265 | Low Pressure Exhaust Gas Recirculation (EGR) Valve Programming | Engine |
| SP0266 | ADAPTIVES AFTER REGENERATING PF | Engine |
| SP0267 | ADAPTIVES ON AIR INTAKE FLAP MALFUNCTION 2 | Engine |
| SP0268 | AIR DAMPER VALVE PROGRAMMING(R044-2) | Engine |
| SP0269 | Battery Discharge Current Totalizing Clear | Engine |
| SP0270 | Injector Adaptives | Engine |
| SP0271 | Exhaust Gas Recirculation (EGR) Programming | Engine |
| SP0272 | Fuel Rail Pressure Limiting Injection Counter Clear | Engine |
| SP0273 | Alternator Setpoint Voltage | Engine |
| SP0274 | Programming Of Air Damper Valve (R088) | Engine |
| SP0275 | After Replacement Of Electric Throttle Control Actuator | Engine |
| SP0276 | After Replacement Of Turbocharger | Engine |
| SP0277 | After Replacement Of Fuel Rail Pressure Sensor | Engine |
| SP0278 | After Replacement Of Fuel Injector | Engine |
| SP0279 | After Replacement Of Crankshaft Position Sensor | Engine |
| SP0280 | After Replacement Of Turbocharger Solenoid Valve | Engine |
| SP0281 | After Replacement Of Clutch Pedal Switch | Engine |
| SP0282 | After Replacement Of Camshaft Position Sensor | Engine |
| SP0283 | Clear Of Starter Operation Counter | Engine |
| SP0284 | Inhibit Evaporative Emission (EVAP) System | Engine |
| SP0285 | Activate Evaporative Emission (EVAP) System | Engine |
| SP0286 | Air Fuel Ratio Sensor | Engine |
| SP0287 | Vacuum Pump | Engine |
| SP0288 | After Replacement Of High Pressure Fuel Pump | Engine |
| SP0289 | Nox Trap | Engine |
| SP0290 | High Pressure Fuel Pump Total Starts Count Written | Engine |
| SP0291 | High Pressure Turbine Bypass Solenoid Valve | Engine |
| SP0292 | Thermo Plunger Programming | Engine |
| SP0293 | Fuel Rail Pressure Test | Engine |
| SP0294 | Static Test | Engine |
| SP0295 | VARIABLE VALVE TIMING | Engine |
| SP0296 | AIR DAMPER VALVE PROGRAMMING (R088-2) | Engine |
| SP0297 | EGR VALVE PROGRAMMING 2 | Engine |
| SP0298 | Fuel Pump | Engine |
| SP0299 | Programming Throttle Limits | Engine |
| SP0300 | Richness Regulation Programming | Engine |
| SP0301 | Programming Of Camshaft Sensor | Engine |
| SP0302 | Flywheel Target Programming - R061 | Engine |
| SP0303 | Flywheel Target Programming - R065 | Engine |
| SP0304 | Flywheel Target Programming - R102 | Engine |
| SP0305 | Flywheel Target Programming - R103 | Engine |
| SP0306 | Flywheel Target Programming - R104 | Engine |
| SP0307 | Flywheel Target Programming - R105 | Engine |
| SP0308 | Flywheel Target Programming - R106 | Engine |
| SP0309 | Stop And Start Function | Engine |
| SP0310 | Throttle Valve Actuator Teach | Engine |
| SP0311 | Fuel Consumption Short Term Log Reset | Engine |
| SP0312 | After Maintenance | Engine |
| SP0313 | Fuel And Timing Learn Tables Reset | Engine |
| SP0314 | Calibration Of RTCV Actuator | Engine |
| SP0315 | Engine Serial Number | Engine |
| SP0316 | Fuel Flow Regulator | Engine |
| SP0317 | Programming Of Alcohol Level | Engine |
| SP0318 | HIGH PRESSURE PUMP COUNTER (Y344) | Engine |
| SP0319 | INJECTION PUMP ADAPTATIVES (R077) | Engine |
| SP0320 | High Pressure Pump Counter | Engine |
| SP0321 | Regulation Of Waste Gate | Engine |
| SP0322 | Common Rail Switching Clear | Engine |
| SP0323 | Saving data for replc ecu | Engine |
| SP0324 | Clear VCR Engine Basis Parts Value 1 And 2 | Engine |
| SP0325 | Ignition coil component | Engine |
| SP0326 | Low Pressure Turbocharger Solenoid Valve | Engine |
| SP0327 | PF differential pressure sensor | Engine |
| SP0328 | CATALYTIC CONVERTER | Engine |
| SP0329 | Parking Brake Brake In (Drag On) | EHS/PKB |
| SP0330 | Start Replacement Of Brake Pad | EHS/PKB |
| SP0331 | Finish Brake Pad Replacement | EHS/PKB |
| SP0332 | Initialization Position Adjustment | EHS/PKB |
| SP0333 | Calibration Of G Sensor | EHS/PKB |
| SP0334 | Reset Of Clutch Sensor | EHS/PKB |
| SP0335 | Brake Operation | EHS/PKB |
| SP0336 | Brake Release | EHS/PKB |
| SP0337 | Change Of System Mode | EHS/PKB |
| SP0338 | Auto Activation On (Automatic Transmission/Continuously Variable Transmission) | EHS/PKB |
| SP0339 | Calibrate Data | Transmission |
| SP0340 | Calibration Of G Sensor | Transmission |
| SP0341 | Electric Oil Pump Air Bleeding | Transmission |

| | | |
|--------|--|---------------------------|
| SP0342 | Adjustment Of Engine Brake | Transmission |
| SP0343 | Confirm Continuously Variable Transmission Fluid (CVTF) Deterioration | Transmission |
| SP0344 | ECO Mode Reset Function | Transmission |
| SP0345 | Electrically Erasable Programmable Read - Only Memory (EEPROM) Clear Confirm | Transmission |
| SP0346 | Maximum Clutch Stroke Measurement | Transmission |
| SP0347 | Clutch Touchpoint Adjust | Transmission |
| SP0348 | Transmission Actuator Self-Adjustment | Transmission |
| SP0349 | Erase Calibration Data | Transmission |
| SP0350 | Erase Learning Value | Transmission |
| SP0351 | Clutch Point Learning | Transmission |
| SP0352 | Erase Memory Data | Transmission |
| SP0353 | Initialization | Transmission |
| SP0354 | Clutch Initial Close Position | Transmission |
| SP0355 | PROGRAM CLUTCH OPEN POSITION | Transmission |
| SP0356 | Program Slip Point | Transmission |
| SP0357 | Programmed Values | Transmission |
| SP0358 | WRITE DATE NEW CLTH FIT | Transmission |
| SP0359 | Write Clutch Initial Close Position | Transmission |
| SP0360 | Write Last After Sales Operation Date | Transmission |
| SP0361 | Vehicle Identification Number (VIN) Registration | Transmission |
| SP0362 | MEMORISATION OF SPEEDS | Transmission |
| SP0363 | Forward Clutch Point Learning | Transmission |
| SP0364 | Read IP Characteristics - Replace Transmission Control Module (TCM) | Transmission |
| SP0365 | Write IP Characteristic - Replacement Transmission Control Module (TCM) | Transmission |
| SP0366 | Clutch Point | Transmission |
| SP0367 | Selection Of Programming/Engaging Zones | Transmission |
| SP0368 | Re-Initialize Extreme Cold Reverse Gear Engage | Transmission |
| SP0369 | Auto Adaptives | Transmission |
| SP0370 | RESETTING OF ADAPTION VALUES | Transmission |
| SP0371 | EMPTY PRESSURE RESERVOIR | Transmission |
| SP0372 | EXHAUST CLUTCH FAST MODE | Transmission |
| SP0373 | EXHAUST HYDRAULIC PUMP | Transmission |
| SP0374 | EXHAUST TRANSMISSION | Transmission |
| SP0375 | FILL PRESSURE RESERVOIR | Transmission |
| SP0376 | FORCE INITIAL ABSOLUTE CLUTCH POSITION | Transmission |
| SP0377 | GEAR SHIFTING | Transmission |
| SP0378 | NEW CLUTCH INSTALLED | Transmission |
| SP0379 | POSITION CLUTCH ACTUATOR | Transmission |
| SP0380 | RECALCULATE FACTOR RDN | Transmission |
| SP0381 | RESET CLUTCH LOAD CONFIGURATION | Transmission |
| SP0382 | SET DEFAULT CHARACTERISTIC LINE | Transmission |
| SP0383 | START TRANSMISSION SELF ADAPTION | Transmission |
| SP0384 | TEACH IN CLUTCH TOUCH POINT | Transmission |
| SP0385 | Torque Converter Lock Up Clutch Adaptive Procedure | Transmission |
| SP0386 | NOTE OIL WEAR COUNTER | Transmission |
| SP0387 | WRITE TRANSMISSION OIL CHANGE DATE | Transmission |
| SP0388 | Reset clutch data | Transmission |
| SP0389 | Reset clutch data protection | Transmission |
| SP0390 | Reset gearbox data | Transmission |
| SP0391 | Room Lamp Is On At Lock. | Body Control Module (BCM) |
| SP0392 | Battery Saver Set | Body Control Module (BCM) |
| SP0393 | Setting Of Room Lamp Off Time | Body Control Module (BCM) |
| SP0394 | Logic Set Of Reverse Lamp Timer | Body Control Module (BCM) |
| SP0395 | Set Timer Of Room Lamp | Body Control Module (BCM) |
| SP0396 | Setting Of Room Lamp On Time | Body Control Module (BCM) |
| SP0397 | Set Interlock Door Unlock Interconnection | Body Control Module (BCM) |
| SP0398 | Theft Alarm Trigger | Body Control Module (BCM) |
| SP0399 | Setting Of Security Alarm | Body Control Module (BCM) |
| SP0400 | Speed Setting Of Wiper | Body Control Module (BCM) |
| SP0401 | Setting Value Reset | Body Control Module (BCM) |
| SP0402 | Custom A/Light Setting | Body Control Module (BCM) |
| SP0403 | Illumination Delay Set | Body Control Module (BCM) |
| SP0404 | Horn With Keyless Lock | Body Control Module (BCM) |
| SP0405 | Intelligent Key Unlock Answer Back | Body Control Module (BCM) |
| SP0406 | Intelligent Key Lock Answer Back | Body Control Module (BCM) |
| SP0407 | Drop Wipe Function Set | Body Control Module (BCM) |
| SP0408 | Function Of Anti Key Lock In The Vehicle | Body Control Module (BCM) |
| SP0409 | Rain Sensor Wiper Function Set | Body Control Module (BCM) |
| SP0410 | Confirm Dongle ID | Body Control Module (BCM) |
| SP0411 | Use Intelligent Key To Lock/Unlock | Body Control Module (BCM) |
| SP0412 | Door Lock Vehicle Speed Adjustment | Body Control Module (BCM) |
| SP0413 | Room Lamp Battery Save Set | Body Control Module (BCM) |
| SP0414 | ID Registration | Body Control Module (BCM) |
| SP0415 | Trunk/Glass Hatch Open | Body Control Module (BCM) |
| SP0416 | Answer Back Function | Body Control Module (BCM) |
| SP0417 | Engine Start By I-Key | Body Control Module (BCM) |
| SP0418 | Horn Chirp Set | Body Control Module (BCM) |
| SP0419 | Door Lock-Unlock Set | Body Control Module (BCM) |
| SP0420 | Confirm Key Fob ID | Body Control Module (BCM) |
| SP0421 | Power Window (PW) Set | Body Control Module (BCM) |
| SP0422 | ID Read | Body Control Module (BCM) |
| SP0423 | Trunk Open Delay | Body Control Module (BCM) |
| SP0424 | Setting Of Panic Alarm | Body Control Module (BCM) |
| SP0425 | Hazard Lamp Set | Body Control Module (BCM) |
| SP0426 | Automatic Door Unlock Select | Body Control Module (BCM) |
| SP0427 | Selection Of Welcome Light | Body Control Module (BCM) |
| SP0428 | Automatic Door Lock Select | Body Control Module (BCM) |
| SP0429 | Hazard Answer Back | Body Control Module (BCM) |
| SP0430 | Key Fob Warn Low Battery | Body Control Module (BCM) |
| SP0431 | Set Siren | Body Control Module (BCM) |
| SP0432 | Operation Set Of Welcome Light | Body Control Module (BCM) |
| SP0433 | Auto Lock Set | Body Control Module (BCM) |
| SP0434 | Inside Antenna Diagnosis | Body Control Module (BCM) |
| SP0435 | Automatic Lock/Unlock Select | Body Control Module (BCM) |
| SP0436 | Erase Computer Memory | Body Control Module (BCM) |
| SP0437 | Vehicle Identification Number (VIN) Registration | Body Control Module (BCM) |
| SP0438 | Rear Wiper Reverse Set | Body Control Module (BCM) |
| SP0439 | Fog Lamp Override | Body Control Module (BCM) |
| SP0440 | Setting Of Retractable Mirror | Body Control Module (BCM) |
| SP0441 | Switch Tire Pressure Monitor System (TPMS) Between On/Off | Body Control Module (BCM) |
| SP0442 | Auto Light Logic Set | Body Control Module (BCM) |
| SP0443 | Output Of Short Cranking | Body Control Module (BCM) |
| SP0444 | Setting Of Security Alarm (Siren) | Body Control Module (BCM) |
| SP0445 | Intelligent Key Link Set | Body Control Module (BCM) |
| SP0446 | Head Light Timer | Body Control Module (BCM) |
| SP0447 | Multiplex Answer Back Set | Body Control Module (BCM) |
| SP0448 | Remote Control ID Erasure | Body Control Module (BCM) |
| SP0449 | Remote Control ID Configuration | Body Control Module (BCM) |
| SP0450 | Set Retained Power | Body Control Module (BCM) |
| SP0451 | Remote Control ID Register | Body Control Module (BCM) |
| SP0452 | Trunk Open Set | Body Control Module (BCM) |
| SP0453 | Auto Lock Function | Body Control Module (BCM) |
| SP0454 | Auto Unlock Function | Body Control Module (BCM) |
| SP0455 | Auto Unlock Type | Body Control Module (BCM) |
| SP0456 | Headlamp Washer Auto Set | Body Control Module (BCM) |

| | | |
|--------|---|-------------------------------------|
| SP0457 | Set Of Security Door Lock | Body Control Module (BCM) |
| SP0458 | Anti-Lock Out Set | Body Control Module (BCM) |
| SP0459 | Steering Angle Sensor Adjustment | Body Control Module (BCM) |
| SP0460 | Monitor Of Switch | Body Control Module (BCM) |
| SP0461 | Set Rear Defogger Engine Interconnection | Body Control Module (BCM) |
| SP0462 | Oldest Alarm Trigger | Body Control Module (BCM) |
| SP0463 | Trailer Audible Warning | Body Control Module (BCM) |
| SP0464 | Auto Relock | Body Control Module (BCM) |
| SP0465 | Selective Unlock | Body Control Module (BCM) |
| SP0466 | Fitted Siren | Body Control Module (BCM) |
| SP0467 | Previous Alarm Trigger | Body Control Module (BCM) |
| SP0468 | Lastest Alarm Trigger | Body Control Module (BCM) |
| SP0469 | Pre-Alarm Fast Flash | Body Control Module (BCM) |
| SP0470 | Keyless DI Flash | Body Control Module (BCM) |
| SP0471 | Theft Warning | Body Control Module (BCM) |
| SP0472 | Keyless Registration | Body Control Module (BCM) |
| SP0473 | Keyless Check | Body Control Module (BCM) |
| SP0474 | Box Intelligent Key Operation Mode Set | Body Control Module (BCM) |
| SP0475 | Cargo Door Set | Body Control Module (BCM) |
| SP0476 | Setting Of Signature Light | Body Control Module (BCM) |
| SP0477 | Keyless Lock Unlock Answerback | Body Control Module (BCM) |
| SP0478 | Intelligent Key Lock Unlock Answerback | Body Control Module (BCM) |
| SP0479 | Setting Of 3-Time Flasher | Body Control Module (BCM) |
| SP0480 | Remote Engine Starter | Body Control Module (BCM) |
| SP0481 | Intelligent-Key Lock Unlock Answer Back | Body Control Module (BCM) |
| SP0482 | Answer Back | Body Control Module (BCM) |
| SP0483 | Back To Initial Value | Body Control Module (BCM) |
| SP0484 | Set Rear Defogger Timer | Body Control Module (BCM) |
| SP0485 | Auto Adaptive Cruise Control (ACC) Function (Audio/Navigation Set After Ignition Off) | Body Control Module (BCM) |
| SP0486 | Setting Value Reset | Body Control Module (BCM) |
| SP0487 | Rear Wiper Link With Reverse Setting | Body Control Module (BCM) |
| SP0488 | Rain Sensor | Body Control Module (BCM) |
| SP0489 | Right Front Drip | Body Control Module (BCM) |
| SP0490 | Ignition/Accessory Battery Saver | Body Control Module (BCM) |
| SP0491 | Linkage Of Wiper | Body Control Module (BCM) |
| SP0492 | Setting Of Daytime Running Light | Body Control Module (BCM) |
| SP0493 | Twilight On | Body Control Module (BCM) |
| SP0494 | Erasing Memory | Anti-Lock Brake System (ABS) |
| SP0495 | Test Mode | Anti-Lock Brake System (ABS) |
| SP0496 | Test Mode Extend | Anti-Lock Brake System (ABS) |
| SP0497 | Test Mode End | Anti-Lock Brake System (ABS) |
| SP0498 | Adjustment Of Steering Angle Sensor | Anti-Lock Brake System (ABS) |
| SP0499 | Deceleration G Sensor Calibration | Anti-Lock Brake System (ABS) |
| SP0500 | Activate Or Deactivate Roller Bench Test Mode | Anti-Lock Brake System (ABS) |
| SP0501 | Side G Sensor Calibration | Anti-Lock Brake System (ABS) |
| SP0502 | Calibration Of Pressure Sensor | Anti-Lock Brake System (ABS) |
| SP0503 | Calibration Of Stroke Sensor | Anti-Lock Brake System (ABS) |
| SP0504 | Hydraulic Unit Brake Circuit Bleed | Anti-Lock Brake System (ABS) |
| SP0505 | Check Target Teeth | Anti-Lock Brake System (ABS) |
| SP0506 | Speedometer Index | Anti-Lock Brake System (ABS) |
| SP0507 | Write Last After Sales Operation Date | Anti-Lock Brake System (ABS) |
| SP0508 | Steering Wheel Angle Sensor | Anti-Lock Brake System (ABS) |
| SP0509 | Acceleration Sensor | Anti-Lock Brake System (ABS) |
| SP0510 | Vehicle Identification Number (VIN) Registration | Anti-Lock Brake System (ABS) |
| SP0511 | Vehicle Speed At Initialization | Anti-Lock Brake System (ABS) |
| SP0512 | Hydraulic Unit And Braking Circuits Bleed | Anti-Lock Brake System (ABS) |
| SP0513 | Vehicle Parameters | Anti-Lock Brake System (ABS) |
| SP0514 | Longitudinal Accelerator Sensor | Anti-Lock Brake System (ABS) |
| SP0515 | Electronic Stability Program (ESP) Sensor Programming | Anti-Lock Brake System (ABS) |
| SP0516 | Brake Pressure Offset Sensor | Anti-Lock Brake System (ABS) |
| SP0517 | Offset Of Steering Wheel Angle Sensor | Anti-Lock Brake System (ABS) |
| SP0518 | Transverse Acceleration Offset Sensor | Anti-Lock Brake System (ABS) |
| SP0519 | Reset | Anti-Lock Brake System (ABS) |
| SP0520 | Hill Start | Anti-Lock Brake System (ABS) |
| SP0521 | Longitudinal Accelerator Sensor Offset | Anti-Lock Brake System (ABS) |
| SP0522 | Steering Wheel Angle Offset Sensor | Anti-Lock Brake System (ABS) |
| SP0523 | Steering Angle Sensor | Anti-Lock Brake System (ABS) |
| SP0524 | Gearbox Type | Anti-Lock Brake System (ABS) |
| SP0525 | Grip Function Improved | Anti-Lock Brake System (ABS) |
| SP0526 | Transverse Acceleration Sensor | Anti-Lock Brake System (ABS) |
| SP0527 | Vehicle Identification Number (VIN) Written | Anti-Lock Brake System (ABS) |
| SP0528 | Reset | Anti-Lock Brake System (ABS) |
| SP0529 | Foot Lamp Fade-In/Out | Total Illumination Control Unit |
| SP0530 | Manifold Absolute Pressure (MAP) And Personal Lamp Fade-In/Out | Total Illumination Control Unit |
| SP0531 | Puddle Lamp Fade-In/Out | Total Illumination Control Unit |
| SP0532 | Mood Lamp Fade-In/Out | Total Illumination Control Unit |
| SP0533 | Ambience Lamp Fade-In/Out | Total Illumination Control Unit |
| SP0534 | Hospitality Illumination Fade-In/Out | Total Illumination Control Unit |
| SP0535 | Engine Switch Illumination Fade-In/Out | Total Illumination Control Unit |
| SP0536 | Engine Switch Illumination Heart Beat Function | Total Illumination Control Unit |
| SP0537 | Steering Angle Sensor Adjustment | Multi Audio Vedio |
| SP0538 | Write Last After Sales Operation Date | Multi Audio Vedio |
| SP0539 | Vehicle Identification Number (VIN) Registration | Multi Audio Vedio |
| SP0540 | Electronic Control Unit (ECU) Memory | Multi Audio Vedio |
| SP0541 | Calibration Of Reversing Camera | Multi Audio Vedio |
| SP0542 | Temperature Set Is Correct. | Heater-Vent-Air Conditioning (HVAC) |
| SP0543 | Record Memory Set | Heater-Vent-Air Conditioning (HVAC) |
| SP0544 | Free Memory Set | Heater-Vent-Air Conditioning (HVAC) |
| SP0545 | Blow Set | Heater-Vent-Air Conditioning (HVAC) |
| SP0546 | Reset Door Motor Starting Position | Heater-Vent-Air Conditioning (HVAC) |
| SP0547 | Compressor Operation Set At DEF Mode (Time/Remote Climate Control) | Heater-Vent-Air Conditioning (HVAC) |
| SP0548 | Target Maximum RPM Adjustment Pre-Climate. | Heater-Vent-Air Conditioning (HVAC) |
| SP0549 | Target Maximum RPM Adjustment At Idle. | Heater-Vent-Air Conditioning (HVAC) |
| SP0550 | Fragrance Setting | Heater-Vent-Air Conditioning (HVAC) |
| SP0551 | Setting Of Blower Motor | Heater-Vent-Air Conditioning (HVAC) |
| SP0552 | Setting Of Aroma Diffuser | Heater-Vent-Air Conditioning (HVAC) |
| SP0553 | Clean Switch Set | Heater-Vent-Air Conditioning (HVAC) |
| SP0554 | Air Inlet Change Setting | Heater-Vent-Air Conditioning (HVAC) |
| SP0555 | Target Evaporator Temperature Upper Limit Setting | Heater-Vent-Air Conditioning (HVAC) |
| SP0556 | Aroma Setting | Heater-Vent-Air Conditioning (HVAC) |
| SP0557 | Adjustment Of Gas Sensor | Heater-Vent-Air Conditioning (HVAC) |
| SP0558 | Rear Temperature Set Correction | Heater-Vent-Air Conditioning (HVAC) |
| SP0559 | Setting Of Stop/Start System Operation Condition | Heater-Vent-Air Conditioning (HVAC) |
| SP0560 | Air Flow Reduction Setting | Heater-Vent-Air Conditioning (HVAC) |
| SP0561 | Clear Battery Charge/Discharge Information Data | High Voltage Battery |
| SP0562 | Chassis Control Information Clear | High Voltage Battery |
| SP0563 | Standard Height Level | E-Suspension |
| SP0564 | Adjust Height Initialization | E-Suspension |
| SP0565 | Clear Height Initialization | E-Suspension |
| SP0566 | Exit Seat Slide Setting | AUTO DRIVE POS. |
| SP0567 | Exit Tilt Setting | AUTO DRIVE POS. |
| SP0568 | Seat Slide Volume Set | AUTO DRIVE POS. |
| SP0569 | Status Of Auto Back Door Reset | Auto Back Door |
| SP0570 | Battery Capacity Gradual Loss Data Clear | EV/HEV |
| SP0571 | High Voltage Battery Junction Box Data Clear | EV/HEV |

| | | |
|--------|--|--|
| SP0572 | Vehicle Identification Number (VIN) Registration | EV/HEV |
| SP0573 | Cooling Fan Integrated Operation Time Clear | EV/HEV |
| SP0574 | Calibration Of G Sensor | EV/HEV |
| SP0575 | Zero Point Reset Function | Occupant Detection |
| SP0576 | Clear Of Park Position Learning Value | Shift |
| SP0577 | Steering Angle Sensor Adjustment | Adaptive Light |
| SP0578 | Levelizer Adjustment | Adaptive Light |
| SP0579 | Corner Sensor Distance Set | Sonar |
| SP0580 | Center Sensor Distance Set | Sonar |
| SP0581 | Volume Setting | Sonar |
| SP0582 | Trailer Hitch Mode | Sonar |
| SP0583 | Level Setting Of Parking Width | Sonar |
| SP0584 | Tire Diameter Adjustment | Sonar |
| SP0585 | Vehicle Identification Number (VIN) Written | Sonar |
| SP0586 | Clutch Fuel Release Limit Adjust | All Mode All Wheel Drive (AWD)/4 Wheel Drive (4WD) |
| SP0587 | Unit Characteristics Write | All Mode All Wheel Drive (AWD)/4 Wheel Drive (4WD) |
| SP0588 | Start Calibration | All Mode All Wheel Drive (AWD)/4 Wheel Drive (4WD) |
| SP0589 | Initialization Of Lock Sleeve Sensor | All Mode All Wheel Drive (AWD)/4 Wheel Drive (4WD) |
| SP0590 | Learning Of Lock Sleeve Sensor | All Mode All Wheel Drive (AWD)/4 Wheel Drive (4WD) |
| SP0591 | Reset Oil Deterioration Information | All Mode All Wheel Drive (AWD)/4 Wheel Drive (4WD) |
| SP0592 | Unit Characteristics Data | All Mode All Wheel Drive (AWD)/4 Wheel Drive (4WD) |
| SP0593 | Transfer Unit Replacement | All Mode All Wheel Drive (AWD)/4 Wheel Drive (4WD) |
| SP0594 | Solenoid Valve Function Test While Driving | All Mode All Wheel Drive (AWD)/4 Wheel Drive (4WD) |
| SP0595 | Solenoid Valve Learned Values Resetting | All Mode All Wheel Drive (AWD)/4 Wheel Drive (4WD) |
| SP0596 | Oil Service Data Resetting | All Mode All Wheel Drive (AWD)/4 Wheel Drive (4WD) |
| SP0597 | Door Opening Retract Retr | Preocrash Seatbelt |
| SP0598 | Reminder For Non-Viewable Area | Around View Monitor (AVM) |
| SP0599 | Select Warning Message Language | Around View Monitor (AVM) |
| SP0600 | Display Of Predictive Course Line | Around View Monitor (AVM) |
| SP0601 | Initialize Camera Image Calibration | Around View Monitor (AVM) |
| SP0602 | Adjustment Of Steering Angle Sensor | Around View Monitor (AVM) |
| SP0603 | REAR WIDE-VIEW FIXED GUIDE LINE CORRECTION | Around View Monitor (AVM) |
| SP0604 | TURNING RADIUS CORRECTION | Around View Monitor (AVM) |
| SP0605 | PARTS WITH DOOR MIRROR AUTO FOLD FUNC | Around View Monitor (AVM) |
| SP0606 | SONAR OFF POP-UP DISPLAY SETTING CHANGE | Around View Monitor (AVM) |
| SP0607 | FRONT WIDE-VIEW FIXED GUIDE LINE CORRECTION | Around View Monitor (AVM) |
| SP0608 | CALIBRATING CAMERA IMAGE (FRONT CAMERA) | Around View Monitor (AVM) |
| SP0609 | CALIBRATING CAMERA IMAGE (PASS-SIDE CAMERA) | Around View Monitor (AVM) |
| SP0610 | CALIBRATING CAMERA IMAGE (DR-SIDE CAMERA) | Around View Monitor (AVM) |
| SP0611 | CALIBRATING CAMERA IMAGE (REAR CAMERA) | Around View Monitor (AVM) |
| SP0612 | FINE TUNING OF BIRDS-EYE VIEW | Around View Monitor (AVM) |
| SP0613 | REAR CAMERA ITS | Around View Monitor (AVM) |
| SP0614 | CAUSE OF LDW CANCEL | Around View Monitor (AVM) |
| SP0615 | CAUSE OF BSW CANCEL | Around View Monitor (AVM) |
| SP0616 | CAUSE OF PSR CANCEL | Around View Monitor (AVM) |
| SP0617 | CAUSE OF IPA CANCEL | Around View Monitor (AVM) |
| SP0618 | IPA PARKING POSITION ADJUST | Around View Monitor (AVM) |
| SP0619 | PSM PARKING POSITION ADJUST | Around View Monitor (AVM) |
| SP0620 | CALIBRATING CAMERA IMAGE 2 (FRONT CAMERA) | Around View Monitor (AVM) |
| SP0621 | CALIBRATING CAMERA IMAGE 2 (PASS-SIDE CAMERA) | Around View Monitor (AVM) |
| SP0622 | CALIBRATING CAMERA IMAGE 2 (DR-SIDE CAMERA) | Around View Monitor (AVM) |
| SP0623 | CALIBRATING CAMERA IMAGE 2 (REAR CAMERA) | Around View Monitor (AVM) |
| SP0624 | CAUSE OF ENTRY CANCEL | Around View Monitor (AVM) |
| SP0625 | MOD FUNCTION | Around View Monitor (AVM) |
| SP0626 | Rear center line setting change | Around View Monitor (AVM) |
| SP0627 | Rear center line calibration adjustment | Around View Monitor (AVM) |
| SP0628 | Tire diameter correction | Around View Monitor (AVM) |
| SP0629 | Confirm Key Fob ID | Intelligent Key |
| SP0630 | Take Out From Window Warn | Intelligent Key |
| SP0631 | Key Fob Low Battery Warning | Intelligent Key |
| SP0632 | Answer Back Function | Intelligent Key |
| SP0633 | Selective Unlock Function | Intelligent Key |
| SP0634 | Hazard Answer Back | Intelligent Key |
| SP0635 | Intelligent-Key Lock Answer Back | Intelligent Key |
| SP0636 | Intelligent-Key Unlock Answer Back | Intelligent Key |
| SP0637 | Auto Relock Timer | Intelligent Key |
| SP0638 | Engine Start By I-Key | Intelligent Key |
| SP0639 | Use Intelligent Key To Lock/Unlock | Intelligent Key |
| SP0640 | Trunk/Glass Hatch Open | Intelligent Key |
| SP0641 | Trunk Open Delay | Intelligent Key |
| SP0642 | Delay Of Power Slide Door | Intelligent Key |
| SP0643 | Keyless Function | Intelligent Key |
| SP0644 | Power Window (P/W) Down Relay | Intelligent Key |
| SP0645 | Delay Of Panic Alarm | Intelligent Key |
| SP0646 | Luggage Room Engine Start | Intelligent Key |
| SP0647 | Output Of Short Cranking | Intelligent Key |
| SP0648 | Horn With Keyless Lock | Intelligent Key |
| SP0649 | Function Of Anti Key Lock In The Vehicle | Intelligent Key |
| SP0650 | Intelligent-Key Function | Intelligent Key |
| SP0651 | Intelligent-Key Lock Unlock Answer Back | Intelligent Key |
| SP0652 | Intelligent Key Lock Unlock Answerback | Intelligent Key |
| SP0653 | Keyless Lock Unlock Answerback | Intelligent Key |
| SP0654 | Auto Lock Set | Intelligent Key |
| SP0655 | Door Lock-Unlock Set | Intelligent Key |
| SP0656 | Sequential Valve Timing (SVT) Setting | Sequential Valve Timing (SVT) |
| SP0657 | AUTO AIM | Lane Camera |
| SP0658 | Auto Cancel Cause | Lane Camera |
| SP0659 | AIM CHECK | Lane Camera |
| SP0660 | Vehicle Identification Number (VIN) Registration | Lane Camera |
| SP0661 | CALIBRATION | Lane Camera |
| SP0662 | SCR CAT AMOUNT OF UREA ADSORPT DATA CLEAR | ADCM |
| SP0663 | Urea Tank Unit Assembly Learning Value Clear | ADCM |
| SP0664 | Clear Urea Pump Learning Value | ADCM |
| SP0665 | Clear Learning Value Of Urea Injector | ADCM |
| SP0666 | Adblue Dosing Module Catalyst | ADCM |
| SP0667 | programming of adblue injector | ADCM |
| SP0668 | radiator fan active request (air conditioner) | ADCM |
| SP0669 | radiator fan active request (engine control module) | ADCM |
| SP0670 | Have Computer Data Saved | ADCM |
| SP0671 | Vehicle Identification Number (VIN) Registration | ADCM |
| SP0672 | Saved Date Written | ADCM |
| SP0673 | Erase Personal Settings | Chassis Control |
| SP0674 | Auto Cancel Cause 1 | Chassis Control |
| SP0675 | Active Noise Cancellation (ANC) Setting | Active Noise Cancellation (ANC) |
| SP0676 | ASC Setting | Active Noise Cancellation (ANC) |
| SP0677 | Activate Operation | Side radar (Rear left) |
| SP0678 | Starter Operation Counter Clear | EMCM |
| SP0679 | CML Battery Discharge Current Clear | EMCM |
| SP0680 | Cumulative Sub-Battery Discharge Current Clear | EMCM |
| SP0681 | Write Last After Sales Operation Date | MM Connection |
| SP0682 | Vehicle Identification Number (VIN) Written | MM Connection |
| SP0683 | Transmission Control Unit (TCU) Activate Setting | Telematics |
| SP0684 | Save Vehicle Identification Number (VIN) Data | Telematics |
| SP0685 | Vehicle Identification Number (VIN) Data Written | Telematics |
| SP0686 | Vehicle Identification Number (VIN) Written (Manual Input) | Telematics |

| | | |
|--------|--|---|
| SP0687 | Bluetooth Function | Telematics |
| SP0688 | Bluetooth Pairing Erase | Telematics |
| SP0689 | Electronic Control Unit (ECU) Memory | CIU |
| SP0690 | Vehicle Identification Number (VIN) Registration | CIU |
| SP0691 | Hour Setting | CIU |
| SP0692 | Vehicle Identification Number (VIN) Written | CIU |
| SP0693 | Activate Operation | Side radar (Rear right) |
| SP0694 | Calibration Of Stroke Sensor | HAS |
| SP0695 | AUTO AIM | Lane Camera 2 |
| SP0696 | Auto Cancel Cause 2 | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) 2 |
| SP0697 | CAUSE OF AUTO-CANCEL 4 | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) 2 |
| SP0698 | CAUSE OF AUTO-CANCEL 6 | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) 2 |
| SP0699 | FEB Default Setting | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) 2 |
| SP0700 | FEB Operation Mileage | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) 2 |
| SP0701 | CAUSE OF AUTO-CANCEL 5 | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) 2 |
| SP0702 | Steering torque calibration | Intelligent Cruise Control (ICC)/Advanced Driver Assistance System (ADAS) 2 |
| SP0703 | Oil Change Interval In Months | Cluster |
| SP0704 | Oil Change Range: In Km | Cluster |
| SP0705 | Oil Change Range: Current Value In Months | Cluster |
| SP0706 | Oil Change Interval (Km) | Cluster |
| SP0707 | Vehicle Identification Number (VIN) Registration | Cluster |
| SP0708 | Update Odometer | Cluster |
| SP0709 | Calibrate All | Motor Assist |
| SP0710 | Select Guideline Pattern | Side Blind Camera |
| SP0711 | Adjust Guideline Position | Side Blind Camera |
| SP0712 | Select Guideline Pattern | Rearview Camera |
| SP0713 | Adjust Guideline Position | Rearview Camera |
| SP0714 | Initialization Of Power Window | Control Unit Of Right Front Door |
| SP0715 | Vehicle Identification Number (VIN) Written | Radio |
| SP0716 | Write After Sales Operation Date | Radio |
| SP0717 | Radio Reset | Radio |
| SP0718 | Vehicle Identification Number (VIN) Registration | Radio |

XTOOL