



## RENAULT Function List V10.90

**Tips and Instructions:**

**The programming function only supports H6PRO H6PRO Master Edition products.**

\* This feature is new.

√ This feature is supported.

This feature is not supported.

※ This feature is partially supported.

Model	System Name	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Read Freeze Frame	Actuation Test	Specific Function
Alaskan	Engine System	√	√	√	√			
Alaskan	ABS	√	√	√	√			
Alaskan	Instrument panel	√	√	√	√			
Alaskan	UCH	√	√	√	√			
Alaskan	Airbag/pretensioners	√	√	√	√			
Alaskan	Front radar	√	√	√	√			
Alaskan	Air conditioning	√	√	√	√			
Alaskan	Automatic gearbox	√	√	√	√			
Alaskan	UPC	√	√	√	√			
Alaskan	LASER RADAR	√	√	√	√			
Alaskan	DIFFERENTIAL LOCK	√	√	√	√			
Alaskan	Around view monitoring	√	√	√	√			
Alaskan	4 wheels drive	√	√	√	√			
Alaskan	Parking prox can	√	√	√	√			
Alaskan	UNITE DE CHAUFFAGE	√	√	√	√			
Alaskan	UREA DOSING CONTROL MODULE	√	√	√	√			
Alaskan	ENERGY CONTROL UNIT	√	√	√	√			
Avantime	Engine System	√	√	√	√		√	006B 006C 00C4 00CE 00F7 0257 0298 0299 029A 029B 029C 029D 029E 029F
Avantime	ABS	√	√	√	√		√	0019 008B
Avantime	Instrument panel	√	√	√	√		√	000E 0052 005B 01A5 0225 025C 025D 025E 025F
Avantime	UCH	√	√	√	√		√	000E 0052 005B 01A5 0225 025C 025D 025E 025F
Avantime	Airbag/pretensioners	√	√	√	√			
Avantime	Air conditioning	√	√	√	√			02FA 02FB 02FC 02FD 02FE 02FF
Avantime	Automatic gearbox	√	√	√	√		√	0081 0082
Avantime	Lighting	√	√	√	√		√	
Avantime	Discharge Lamp	√	√	√	√		√	
Avantime	HEATER	√	√	√	√		√	

Captur/qm3/kabin	Engine System	√	√	√	√	√	√	0001 0002 0003 0004 0005 0006 0007 0008 0009 000C 006D 00C5 00D9 00DA 00DB 00DC 00DD 00DF 00E0 00F3 00F7 00F8 00F9 00FA 00FB 00FC 00FD 00FF 0100 0101 0103 0104 0105 0106 0107 0108 0109 010A 010B 010C 0114 0115 0116 0117 013C 013D 014C 017D 0186 01FF 0200 0201 0202 0203 020D 020E 020F 0210 0211 0212 0213 0304 0305 032C 032F 032A 033C 033D 033E 033F 0340 0341 0301 0303 0312 032D 0302
Captur/qm3/kabin	ABS	√	√	√	√	√	√	000C 000D 0019 008B 00E9 00EA 00EB 00EC 00ED 00EE 00F0 0001 030A 0167
Captur/qm3/kabin	Instrument panel	√	√	√	√	√	√	000C 000D 004C 004F 0074 0079 00E2 0001 0327 0326 0398 0300
Captur/qm3/kabin	UCH	√	√	√	√	√	√	000C 0010 00F6 0105 0108 0129 012B 0139 0339 0109 0001 0301 0303 0009
Captur/qm3/kabin	Airbag/pretensioners	√	√	√	√	√	√	000C 000D 0022 0023 0001 030C 0342 0152
Captur/qm3/kabin	Air conditioning	√	√	√	√	√	√	000C 000D 00D1 0001 0069 035C
Captur/qm3/kabin	Automatic gearbox	√	√	√	√	√	√	000C 000D 00EC 0111 0153 0154 0155 0156 0158 0159 015A 015B 015C 01C4 021A 0001 0303 0301 0346 013E 0347 0350
Captur/qm3/kabin	Communications unit	√	√	√	√	√	√	000C 000D 004C 006F 007A 00D7 006A 0001 036F 0325 0378
Captur/qm3/kabin	Variable PAS	√	√	√	√	√	√	000C 000D 0001
Captur/qm3/kabin	UPC	√	√	√	√	√	√	000D 00E2 0105 0118 011B 0123 0169 0324 0333 0303 0301 032F 00D7 0334 0335 0336
Captur/qm3/kabin	Lighting	√	√	√	√			0001 008C
Captur/qm3/kabin	Parking prox can	√	√	√	√	√	√	000C 000D 0065 0067 0124 0125 0126 0001 0337
Captur/qm3/kabin	Radio	√	√	√	√	√	√	0001 000C 000D 001F 006F 00D7 01F7 01FC 0181 037C
Captur/qm3/kabin	Telematic ctrl unit	√	√	√	√	√	√	000C 000D 00D2 0001 0325 037D
Captur/qm3/kabin	Multimedia interface	√	√	√	√		√	0001 000D 00D8 0196 0214 0324
Captur/qm3/kabin	Amplifier	√	√	√	√		√	000C 000D 0181 0001
Captur/qm3/kabin	HANDS-FREE MODULE	√	√	√	√	√	√	000C 000D 00F5 0128 012F 0130 0131 0132 0133 0134 0135 0136 0137 0138 0139 013A 013B 0001 0308 0009
Captur/kaptur br/in/ru	Engine System	√	√	√	√	√	√	0001 006D 00C5 00D9 00DA 00DB 00DC 00DD 00F3 00FB 0105 0108 0109 010A 010C 013C 013D 0304 0305 032C 032F 0009 0114 0115 0116 0117
Captur/kaptur br/in/ru	ABS	√	√	√	√			0001 00E9 00EA 00EB 00F0 00EC 030A 000D 00ED 0019 008B 00EE 0167
Captur/kaptur br/in/ru	Instrument panel	√	√	√	√	√	√	000C 000D 004C 004F 0074 0079 00E2 0001 0327 0326 0398 0300
Captur/kaptur br/in/ru	UCH	√	√	√	√	√	√	000C 0010 00F6 0105 0108 0129 012B 0139 0339 0109 0001 0301 0303 0009
Captur/kaptur br/in/ru	Airbag/pretensioners	√	√	√	√	√	√	000C 000D 0022 0023 0342 0343 0344 0001 030C 0152 0351 0300
Captur/kaptur br/in/ru	Air conditioning	√	√	√	√		√	000C 000D 0069 00D1 0001 0324
Captur/kaptur br/in/ru	Automatic gearbox	√	√	√	√			
Captur/kaptur br/in/ru	Variable PAS	√	√	√	√	√		000C 000D 001F 0001
Captur/kaptur br/in/ru	UPC	√	√	√	√	√	√	000D 00E2 0105 0118 011B 0123 0169 0324 0333 0303 0301 032F 00D7 0334 0335 0336
Captur/kaptur br/in/ru	Lighting	√	√	√	√			0001 008C

Captur/kaptur br/in/ru	4 wheels drive	√	√	√	√	√	√	000C 000D 0012 008B 00E2 01C5 0001
Captur/kaptur br/in/ru	Radio	√	√	√	√	√	√	0001 000C 000D 001F 006F 00D7 01FC 037C 0181
Captur/kaptur br/in/ru	Telematic ctrl unit	√	√	√	√		√	000C 000D 00D2 0001 0325 037D
Captur/kaptur br/in/ru	Multimedia interface	√	√	√	√		√	0001 000D 00D8 0196 0214 0324
Captur/kaptur br/in/ru	HANDS-FREE MODULE	√	√	√	√	√	√	000C 000D 00F5 0128 012F 0130 0131 0132 0133 0134 0135 0136 0137 0138 0139 013A 013B 0001 0308 0009
Clio II ph6	Engine System	√	√	√	√	√	√	0001 000C 000D 006D 00C4 00C5 00D9 00DA 00DB 00DC 010C 0301 0303 0304 0305 0009
Clio II ph6	ABS	√	√	√	√	√	√	000C 000D 0019 008B 0001 030A 030B 0017
Clio II ph6	UCH	√	√	√	√		√	000C 000D 00D5 0183 0001 0307 025F
Clio II ph6	Airbag/pretensioners	√	√	√	√	√		000C 000D 0022 0023 002E 0037 0141 0142 0143 0144 0145 0146 0001 030C
Clio II ph6	TRACKER	√	√	√	√			0001 01EE 0009
Clio II	Engine System	√	√	√	√		√	0001 0002 0004 0009 000A 000B 0052 006B 006C 00C4 00CE 00CF 018D 0257 0258 0276 0277 0291 0292 0293 0294 0295 0296 0297 02A1 02DF 02E0 02E1 02E2 0304 0305
Clio II	ABS	√	√	√	√		√	0019 008B
Clio II	UCH	√	√	√	√		√	000E 0127 0183 0261 027E 027F 0280 0281 0282 0284 0285 0286 0287 0288 02BE 02BF 02C0 02C1 02C2 02C3 02C4 02C5 02C6 02C7 02C8 02C9 02CA 02CB
Clio II	Airbag/pretensioners	√	√	√	√		√	0019 001F 0263 0264
Clio II	Air conditioning	√	√	√	√		√	0019 02E6 02E7 02E8 02E9 02EA 02EB 02EC 02ED 02EE 02EF 02F0 02F1 02F2 02F3 02F4 02F5 02F6 02F7
Clio II	Automatic gearbox	√	√	√	√		√	0018 001A 001B 001F 004E 0082 0099 009A 009B 009C 0275 0276 0277 0278 0279 027A 027B 027C
Clio II	GAS Injection	√	√	√	√		√	
Clio III	Engine System	√	√	√	√	√	√	0001 0002 0003 0004 0005 0006 0007 0008 0009 000A 000B 000C 000D 006D 00C4 00C5 00C7 00D0 00D9 00DA 00DB 00DC 00DD 00F3 00F7 00F9 00FA 010B 0186 0187 0189 018A 020D 0237 0256 0304 0305 0301 0303 0320 0302 0371 0323 032C
Clio III	ABS	√	√	√	√	√	√	000C 000D 0014 0015 0016 0017 0019 0088 008B 01C0 0001 030A 030B
Clio III	Instrument panel	√	√	√	√		√	000C 000D 0048 0049 004A 004B 004C 004D 004E 004F 0050 0052 0053 0064 0070 0071 0072 0073 0074 0075 0077 0079 007C 007D 00AB 00AC 00AD 00AE 00AF 00E1 0149 015E 015F 0160 0162 0163 0164 0165 0166 01F1 01F2 01F3 01F4 0001
Clio III	UCH	√	√	√	√		√	000C 000D 000F 0010 0052 0059 005A 005B 005C 005D 005E 005F 0061 00B1 00B7 00C3 00C6 022E 025F 0001 0307 0308
Clio III	Airbag/pretensioners	√	√	√	√	√		000C 000D 0019 0022 0023 0024 0025 0026 0027 002A 002B 002C 002D 002E 002F 0032 0033 0034 0036 0037 0062 0063 0092 0093 0094 0095 0001 030C 0152
Clio III	Air conditioning	√	√	√	√		√	000C 000D 0012 0013 0069 0001
Clio III	Automatic gearbox	√	√	√	√	√	√	0004 000C 000D 0019 001A 001B 0081 0082 0153 0156 0157 01C8 01C9 01CA 0001

Clio III	Communications unit	√	√	√	√	√	√	000C 000D 0019 004C 006A 0181 0182 01CF 01DF 0001 0323 032F
Clio III	Variable PAS	√	√	√	√	√	√	000C 000D 001E 001F 0001 001C
Clio III	UPC	√	√	√	√	√	√	0001 000D 0017
Clio III	Tyres	√	√	√	√	√	√	000C 000D 0012 0001 030F 00F6 0310 0309 0311
Clio III	Lighting	√	√	√	√	√	√	000C 000D 0012 008C 008D 008E 008F 0090 0091 0001
Clio III	Parking assistance	√	√	√	√	√	√	000C 000D 0065 0066 0067 0001 0337
Clio III	Radio	√	√	√	√	√	√	0001 000D 001F 0161
Clio III	Multimedia interface	√	√	√	√	√	√	0001 000D 0012 0055 019C 019D 01C1 0368 0161
Clio III	Multimed. connection	√	√	√	√	√	√	000C 000D 0019 0181 0001
Clio IV	Engine System	√	√	√	√	√	√	0001 0002 0003 0004 0005 0006 0007 0008 0009 000C 006D 00C5 00D0 00D9 00DA 00DB 00DC 00DD 00DF 00E0 00F3 00F7 00F8 00F9 00FA 00FB 00FC 00FD 00FF 0100 0101 0103 0104 0105 0106 0107 0108 0109 010A 010B 010C 0114 0115 0116 0117 013C 013D 014C 017D 0186 01EF 01F0 01FF 0200 0201 0202 0203 020D 020E 020F 0210 0211 0212 0213 0304 0305 032C 032F 032A 033C 033D 033E 033F 0340 0341 0301 0303 0312 032D 0302 0323 032E 032B 0331 0379 037A 037B
Clio IV	ABS	√	√	√	√	√	√	000C 000D 0019 008B 00E9 00EA 00EB 00EC 00ED 00EE 00F0 0001 030A 0167
Clio IV	Instrument panel	√	√	√	√	√	√	000C 000D 004C 004F 0074 0079 00E2 0001 0327 0328 0398 0399
Clio IV	UCH	√	√	√	√	√	√	000C 0010 00F6 0105 0108 0129 012B 0139 0339 0109 0001 0301 0303 0009
Clio IV	Airbag/pretensioners	√	√	√	√	√	√	000C 000D 0022 0023 0001 030C 0152 0342
Clio IV	Air conditioning	√	√	√	√	√	√	000C 000D 00D1 00F4 0001 0329
Clio IV	Automatic gearbox	√	√	√	√	√	√	000C 000D 00EC 0111 0153 0154 0155 0156 0158 0159 015A 015B 015C 01C4 021A 0001 0303 0301 0346 013E 0347 0350
Clio IV	Communications unit	√	√	√	√	√	√	000C 000D 004C 006F 007A 00D7 006A 0001 036F 0325 0378
Clio IV	Variable PAS	√	√	√	√	√	√	000C 000D 0001
Clio IV	UPC	√	√	√	√	√	√	000D 00E2 0105 0118 011B 0123 0169 0324 0333 0303 0301 032F 00D7 0334 0335 0336
Clio IV	Lighting	√	√	√	√	√	√	0001 008C
Clio IV	Parking prox can	√	√	√	√	√	√	000C 000D 0065 0067 0124 0125 0126 0001 0337
Clio IV	Radio	√	√	√	√	√	√	0001 000C 000D 001F 006F 00D7 01F7 01FC 0181 037C
Clio IV	Telematic ctrl unit	√	√	√	√	√	√	000C 000D 00D2 0001 0325 037D
Clio IV	Multimedia interface	√	√	√	√	√	√	0001 000D 00D8 0196 0214 0324
Clio IV	Amplifier	√	√	√	√	√	√	000C 000D 0181 0001
Clio IV	HANDS-FREE MODULE	√	√	√	√	√	√	000C 000D 00F5 0128 012F 0130 0131 0132 0133 0134 0135 0136 0137 0138 0139 013A 013B 0001 0308 0009
Clio v6 ph2	Engine System	√	√	√	√	√	√	00C4
Clio v6 ph2	UCH	√	√	√	√	√	√	000E
Clio v6 ph2	Airbag/pretensioners	√	√	√	√	√	√	0024 0025 0026 0027 002A 002B 002C 002D 002E 0062 0063 0145 0146 026D 026E 026F

Clio v6 ph2	Air conditioning	√	√	√	√		√	
Clio v6	Engine System	√	√	√	√		√	00C4
Clio v6	UCH	√	√	√	√		√	0284 0285 0286 0287 02BE 02BF 02C0 02C1 02C2 02C3 02C4 02C5 02C6 02C7 02C8 02C9 02CA 02CB
Clio v6	Airbag/pretensioners	√	√	√	√		√	0019
Clio v6	Air conditioning	√	√	√	√		√	02E8 02E9 02EA 02EB 02EC 02ED 02EE 02EF 02F0 02F1 02F2 02F3 02F6 02F7
ClioIp2/3/4	Engine System	√	√	√	√		√	0001 0002 0004 0009 000A 000B 0052 00C4 00CE 00CF 018D 0257 0258 02A1 0304 0305
ClioIp2/3/4	ABS	√	√	√	√		√	0019 008B
ClioIp2/3/4	UCH	√	√	√	√		√	000E
ClioIp2/3/4	Airbag/pretensioners	√	√	√	√			0024 0025 0026 0027 002A 002B 002C 002D 002E 0062 0063 0145 0146 026D 026E 026F
ClioIp2/3/4	Air conditioning	√	√	√	√		√	
ClioIp2/3/4	Automatic gearbox	√	√	√	√		√	0004 0018 001A 001B 001F 004E 0081 0082 0099 009A 009B 009C 0153 01C8 027A 027B 027C
ClioIp2/3/4	GAS Injection	√	√	√	√		√	
ClioIp2/3/4	Variable PAS	√	√	√	√			0019 001C
ClioIp2/3/4	Lighting	√	√	√	√		√	
ClioIp2/3/4	Discharge Lamp	√	√	√	√		√	
Dokker/kangoo	Engine System	√	√	√	√	√	√	0001 0002 0004 0009 006D 00C5 00D0 00D9 00DA 00DB 00DC 00DD 00E0 00F3 00F7 00F8 00F9 00FA 00FB 00FC 00FD 00FF 0101 0103 0105 0108 0109 010A 010B 010C 0114 0115 0116 0117 013C 013D 014C 0186 01EF 01F0 01FF 0200 0201 0202 0203 0304 0305 032C 032F 0324 033C 033D 033E 033F 0340 0341 0301 0303 0312 032D 0302 0323 032B 032E 0379 037A 000C 000D 0019 008B 00E9 00EA 00EB 00ED 00F0 0001 030A 0167
Dokker/kangoo	ABS	√	√	√	√	√	√	000C 000D 004C 004F 0052 0072 0074 00E1 00E2 014B 0164 007D 0001
Dokker/kangoo	Instrument panel	√	√	√	√		√	000C 0010 00F6 0105 0108 0129 012B 0139 0339 0109 0001 0301 0303 0009
Dokker/kangoo	UCH	√	√	√	√	√	√	000C 000D 0022 0023 0001 030C 0152 0342
Dokker/kangoo	Airbag/pretensioners	√	√	√	√	√	√	000C 000D 001F 0001
Dokker/kangoo	Variable PAS	√	√	√	√	√	√	0001 000C 000D 001F 006F 00D7 01FC 037C 0181
Dokker/kangoo	Radio	√	√	√	√	√	√	000C 000D 00D2 0001 0325 037D
Dokker/kangoo	Telematic ctrl unit	√	√	√	√		√	0001 000D 00D8 0196 0214 0324
Dokker/kangoo	Multimedia interface	√	√	√	√		√	000C 000D 00F5 0128 012F 0130 0131 0132 0133 0134 0135 0136 0137 0138 0139 013A 013B 0001 0308 0009
Dokker/kangoo	HANDS-FREE MODULE	√	√	√	√	√	√	

Duster ph2	Engine System	√	√	√	√	√	√	0001 0002 0003 0004 0005 0006 0007 0008 0009 000C 006D 00C5 00D0 00D9 00DA 00DB 00DC 00DD 00F3 00F5 00F7 00F8 00F9 00FA 00FB 00FC 00FD 00FF 0100 0101 0103 0104 0105 0106 0107 0108 0109 010A 010B 010C 0114 0115 0116 0117 013C 013D 014C 017D 0186 01EF 01F0 01F5 01F6 020D 020E 020F 0210 0211 0304 0305 032C 032F 032A 033C 033D 033E 033F 0340 0341 0301 0303 0312 032D 00E0 0302 0323 032E
Duster ph2	ABS	√	√	√	√	√	√	000C 000D 0019 008B 00E9 00EA 00EB 00EC 00ED 00EE 00F0 0001 030A 0167
Duster ph2	Instrument panel							
Duster ph2	UCH	√	√	√	√	√	√	000C 0010 00F6 0105 0108 0129 012B 0139 0339 0109 0001 0301 0303 0009
Duster ph2	Airbag/pretensioners	√	√	√	√	√	√	000C 000D 0022 0023 0342 0343 0344 0001 030C 0132 0331 0330
Duster ph2	Air conditioning	√	√	√	√	√	√	000C 000D 0069 00D1 0001 0324
Duster ph2	Automatic gearbox	√	√	√	√	√	√	0001 0111 0112 0113 0360 000D
Duster ph2	Variable PAS	√	√	√	√	√	√	000C 000D 001F 0001
Duster ph2	4 wheels drive	√	√	√	√	√	√	000C 000D 0012 008B 00E2 01C5 0001
Duster ph2	Radio	√	√	√	√	√	√	0001 000C 000D 001F 006F 00D7 01FC 037C 0181
Duster ph2	Telematic ctrl unit	√	√	√	√	√	√	000C 000D 00D2 0001 0325 037D
Duster ph2	Multimedia interface	√	√	√	√	√	√	0001 000D 00D8 0196 0214 0324
Duster ph2	HANDS-FREE MODULE	√	√	√	√	√	√	000C 000D 00F5 0128 012F 0130 0131 0132 0133 0134 0135 0136 0137 0138 0139 013A 013B 0001 0308 0009
Duster	Engine System	√	√	√	√	√	√	0001 0002 0003 0005 0006 0007 0008 0009 000B 000C 000D 006D 00C4 00C5 00C7 00D0 00D9 00DA 00DB 00DC 00DD 00F3 00F7 00F9 00FA 010B 010C 0186 0187 020D 0256 0301 0303
Duster	ABS	√	√	√	√	√	√	000C 000D 0019 008B 01B0 0001 030A 030B 0017
Duster	UCH	√	√	√	√	√	√	000C 000D 00D5 0183 0001 0307 025F
Duster	Airbag/pretensioners	√	√	√	√	√	√	000C 000D 0022 0023 0026 0027 002E 002F 0030 0031 0037 007D 0141 0142 0143 0144 0199 019A 019B 01AE 01AF 0001
Duster	Automatic gearbox	√	√	√	√	√	√	000C 000D 0019 001A 001B 0082 0001
Duster	Variable PAS	√	√	√	√	√	√	000C 000D 001F 0001 001C
Duster	TRACKER	√	√	√	√	√	√	0001 01EE 0009
Duster	4 wheels drive	√	√	√	√	√	√	000C 000D 0012 008B 00E2 01C5 0052 0001 030A 0017
Duster	Radio	√	√	√	√	√	√	0001 000C 000D 001F 005B 006F 00D7 01F7 0161 01C6
Espace IV	Engine System	√	√	√	√	√	√	0002 0004 0009 000A 000B 000C 000D 006B 006C 006D 00C4 00C7 00CE 00CF 00D0 00D9 0001 0304 0305 0322 0301 0302
Espace IV	ABS	√	√	√	√	√	√	000C 000D 0014 0015 0017 0019 0052 008B 0098 00E9 00EA 00EB 0001 030A 00ED 00F1 0316 0384 0352
Espace IV	Instrument panel	√	√	√	√	√	√	000C 000D 0012 004B 004C 004D 004E 004F 0050 0051 0052 0053 0074 0077 0079 007A 007B 007C 007E 00A0 00A1 00A2 00A3 00A4 00A7 00A8 00A9 00AA 0147 0148 0149 0001 033B

Espace IV	UCH	√	√	√	√	√	√	000C 000D 0010 0011 0012 004D 0052 005A 005B 005D 0061 007C 0086 00B3 00B4 00B5 00B6 00B7 00B8 00B9 00BA 00BB 00BC 00BD 00BE 00BF 00C0 00C1 00C2 0227 0231 0232 0001 00F6 0307 030F 031B 031C 0386 031D 0387 031E 0309 031F
Espace IV	Airbag/pretensioners	√	√	√	√			000C 000D 0019 0022 0023 0037 0001 030C 0152 0317 0318
Espace IV	Air conditioning	√	√	√	√		√	000C 000D 0013 005B 0069 0084 0085 01A5 0222 0223 0224 024B 0068 0001
Espace IV	Automatic gearbox	√	√	√	√	√	√	000D 0019 0081 0082 0233 0319
Espace IV	Parking brake	√	√	√	√		√	000C 000D 0055 0056 0057 0058 0001 030D
Espace IV	Hands-free kit	√	√	√	√		√	0001 000D 0019 006E 006F 0313 0314 030D
Espace IV	Discharge Lamp	√	√	√	√	√	√	000C 000D 0012 001C 0001
Espace IV	Parking assistance	√	√	√	√	√		000C 000D 0065 0066 0067 0001
Espace IV	HEATER	√	√	√	√	√	√	000C 00CC 00CD 0001
Espace V	Engine System	√	√	√	√	√	√	0001 0004 0005 0006 0007 0008 0009 000C 006D 00C5 00D9 00DA 00DB 00DC 00DD 00F7 00F8 00F9 00FA 00FB 00FC 00FD 00FE 00FF 0100 0101 0102 0103 0104 0105 0106 0107 0108 0109 010A 010B 0150 0151 032A 0301 0302 0303 0323 032B 0312 032C 032D 032E 032F 0114 0115 0116 0117 024A 0345
Espace V	ABS	√	√	√	√	√	√	000C 000D 001E 008B 00E9 00EA 00EB 00EC 00ED 00EF 00F0 00F1 00F2 0001 030A 0052 0168 0167
Espace V	Instrument panel	√	√	√	√		√	000C 000D 004A 004C 004F 0074 007A 00E1 00E2 0001 0326 0327 0398 0399
Espace V	UCH	√	√	√	√	√	√	0009 000C 0010 005C 00B5 00F6 0127 0128 0129 012A 012B 012C 012D 012E 0137 0324 0338 0339 01A0 0139 0012 033A
Espace V	Airbag/pretensioners	√	√	√	√	√	√	000C 000D 0022 0023 0037 0001 030C 0152
Espace V	Front radar	√	√	√	√	√		000C 000D 0001 0328
Espace V	Air conditioning	√	√	√	√		√	000C 000D 0069 00D1 0001 0324
Espace V	Automatic gearbox	√	√	√	√	√	√	000C 000D 013E 013F 0140 0156 0158 0001 0324 021A 0301 0303 0346
Espace V	Parking brake	√	√	√	√	√		000C 000D 010D 010E 0001 0055 0330
Espace V	Variable PAS	√	√	√	√	√		000C 000D 0001
Espace V	UPC	√	√	√	√	√	√	000D 00E2 0105 0108 0118 011B 014D 014E 0215 0109 0305 0301
Espace V	Power back door	√	√	√	√			000C 014F 0001 0009
Espace V	Head up display	√	√	√			√	0009 000C 0001
Espace V	4 wheels steering	√	√	√	√	√	√	000D 00E3 00E4 00E5 0001
Espace V	Parking prox can	√	√	√	√		√	000C 000D 0065 0067 0124 0125 0126 0001 0337
Espace V	Gearbox elec control	√	√	√	√	√	√	000C 000D 0152 0001 0331
Espace V	Piloted suspension	√	√	√	√	√		000C 000D 0001
Espace V	Driver's seat	√	√	√	√		√	000C 000D 00E6 00E7 00E8 0001
Espace V	Front camera	√	√	√	√			000C 000D 001C 0069 0001 0331
Espace V	Radio	√	√	√	√		√	000C 000D 004C 006F 007A 00A8 00D6 00D7 00D8 01F7 0001 0181 0325 00E2

Espace V	Telematic ctrl unit	√	√	√	√		√	000C 000D 00D2 0001 037D 0325
Espace V	Left-hand door or passenger's seat	√	√	√	√		√	000C 000D 00E6 00E7 00E8 0001
Espace V	Right-hand door or collapsible seat	√	√	√	√		√	000C 000D 0001
Espace V	Multimedia interface	√	√	√			√	000D 006A
Espace V	Amplifier	√	√	√	√		√	0001 000D 00D3 00D4
Espace	Engine System	√	√	√	√		√	006B 006C 00C4 00CE 00CF 00F7 0212 0257 0276 0277 0291 0292 0293 0294 0297 0298 0299 029A 029B 029C 029D 029E 029F 02A6 02A7 02A8 02E1 02E2
Espace	ABS	√	√	√	√		√	0019 008B
Espace	Instrument panel	√	√	√	√			0019 0291 0292 02A9 02AB 02AE 02AF 02B2 02B3 02B8 02B9 02BC 02BD 02CD 02CE 02CF 02D0 02D1 02D2 02D4 02D5 02D6 02D7 02D8 02D9 02DA 02DB 02DC 02DD
Espace	UCH	√			√			027D 027E 027F 0282 0283 0284 0285 0286 0287 02A9 02AA 02AB 02AC 02AD 02AE 02AF 02B0 02B1 02B2 02B3 02B4 02B5 02B6 02B7 02B8 02B9 02BA 02BB 02BC 02BD 02DC 02DD
Espace	Airbag/pretensioners	√	√	√	√		√	0019 0095 026A 026B 026C
Espace	Air conditioning	√	√	√	√			02FA 02FB 02FC 02FD 02FE 02FF
Espace	Automatic gearbox	√	√	√	√		√	0018 001A 001B 001F 004E 0082 0099 009A 009B 009C 0274 0275 0276 0277 0278 0279
Espace	Lighting	√	√	√	√		√	
Espace	Discharge Lamp	√	√	√	√		√	
Espace	HEATER	√	√	√	√		√	
EspaceIV ph2/3/4	Engine System	√	√	√	√	√	√	0001 0002 0004 0009 000A 000B 000C 000D 006A 006B 006C 006D 00C4 00C5 00C7 00CE 00CF 00D0 00D9 00DC 00DD 00F7 00F8 00F9 00FA 00FB 00FF 010A 010B 0186 022F 0230 0304 0305 0301 0302 0303 0323 032B 0312 032E 036B
EspaceIV ph2/3/4	ABS	√	√	√	√	√	√	000C 000D 0014 0015 0017 0019 0052 008B 00E9 00EA 00EB 0001 030A 0384 0352
EspaceIV ph2/3/4	Instrument panel	√	√	√	√		√	000C 000D 004B 004C 004D 004E 0050 0052 0053 0074 0077 0079 007A 007C 007E 0147 0148 0149 014A 014B 033B 0001 0327 0326 0372 0397 0398 0399
EspaceIV ph2/3/4	UCH	√	√	√	√	√	√	000C 000D 0010 0012 0052 005A 005B 005D 0061 007C 0086 00B3 00B4 00B5 00B6 00B7 00B8 00B9 00BA 00BB 00BC 00BD 00BE 00BF 00C0 00C1 00C2 0231 0232 0001 00F6 0307 030F 031B 031C 031D 031E 0309 031F
EspaceIV ph2/3/4	Airbag/pretensioners	√	√	√	√	√		000C 000D 0019 0022 0023 0037 0001 030C 0152 0317
EspaceIV ph2/3/4	Air conditioning	√	√	√	√		√	000C 000D 0013 005B 0069 0084 0085 01A5 0222 0223 0224 024B 0068 0001
EspaceIV ph2/3/4	Automatic gearbox	√	√	√	√	√	√	000D 0019 0081 0082 0154 0233 0319
EspaceIV ph2/3/4	Communications unit	√	√	√	√		√	0001 000C 000D 0012 0019 004C 006A 007F 0080 0181 0182 01CF 01DF 036F 0325
EspaceIV ph2/3/4	Parking brake	√	√	√	√	√	√	000C 000D 0055 0056 0057 0058 0001 030D
EspaceIV ph2/3/4	Variable PAS	√	√	√	√	√		000C 000D 001C 0001



EspaceIV ph2/3/4	Lighting	√	√	√	√	√	√	000C 000D 0012 005B 008C 008D 008E 0090 0148 0234 0001 0000
EspaceIV ph2/3/4	Parking prox can	√	√	√	√	√		000C 000D 0019 0065 0066 0067 0220 0221 0001 0337
EspaceIV ph2/3/4	Parking assistance	√	√	√	√	√		000C 000D 0065 0066 0067 0001 0337
EspaceIV ph2/3/4	HEATER	√	√	√	√	√	√	000C 00CC 00CD 0001
EspaceIV ph2/3/4	Radio	√		√	√			0001 000D 001F 004C 0236 0238 0161 030D
EspaceIV ph2/3/4	Multimedia interface	√	√	√	√	√	√	0001 000D 0012 0055 006A
EspaceIV ph2/3/4	Multimed. connection	√	√	√	√	√		000C 000D 0019 0181 0001
Kadjar cn	Engine System	√	√	√	√	√	√	0001 0009 006D 00C5 00D9 00DA 00DB 00DC 00DD 00F3 00FB 0103 0105 0108 0109 010A 013C 013D 014C 0150 0151 0324 033C 033D 033E 033F 0340 0341 0301 0303 0305 0312 032C 032D 00E0 024A 0345 032F
Kadjar cn	ABS	√	√	√	√	√	√	000C 000D 0019 008B 00E9 00EA 00EB 00EC 00ED 00EE 00F0 0001 030A 0167
Kadjar cn	Instrument panel	√	√	√	√		√	000C 000D 004A 004C 004F 0074 007A 00E1 00E2 0001 0326 0327 0398 0399
Kadjar cn	UCH	√	√	√	√	√	√	0009 000C 0010 005C 00B5 00F6 0127 0128 0129 012A 012B 012C 012D 012E 0137 0324 0338 0339 01A0 0139 0012 033A
Kadjar cn	Airbag/pretensioners	√	√	√	√	√	√	000C 000D 0022 0023 0037 0001 030C 0152
Kadjar cn	Air conditioning	√	√	√	√		√	000C 000D 0069 00D1 0001 0324
Kadjar cn	Automatic gearbox	√	√	√	√	√		000C 000D 0019 0154 017C 0001 0324 034A
Kadjar cn	Parking brake	√	√	√	√	√		000C 000D 010D 010E 0001 0055 0330
Kadjar cn	Variable PAS	√	√	√	√	√		000C 000D 0001
Kadjar cn	UPC	√	√	√	√	√	√	000D 00E2 0103 0108 0118 011B 014D 014E 0213 0109 0303 0001
Kadjar cn	4 wheels drive	√	√	√	√			000C 0001 0303 0301
Kadjar cn	Parking prox can	√	√	√	√		√	000C 000D 0065 0067 0124 0125 0126 0001 0337
Kadjar cn	Radio	√	√	√	√		√	000C 000D 004C 006F 007A 00A8 00D6 00D7 00D8 01F7 0001 0181 0325 00E2
Kadjar cn	Telematic ctrl unit	√	√	√	√		√	000C 000D 00D2 0001 037D 0325
Kadjar cn	Multimedia interface	√	√	√				000C 000D 0001
Kadjar cn	Amplifier	√	√	√	√		√	0001 000D 00D3 00D4
Kadjar	Engine System	√	√	√	√	√	√	0001 0002 0004 0005 0006 0007 0008 0009 000C 006D 00C5 00D9 00DA 00DB 00DC 00DD 00F3 00F7 00F8 00F9 00FA 00FB 00FC 00FD 00FE 00FF 0100 0101 0102 0103 0104 0105 0106 0107 0108 0109 010A 010B 0114 0115 0116 0117 013C 013D 014C 0150 0151 032A 0301 0302 0303 0323 032B 0312 032C 032D 032E 032F 0324 033C 033D 033E 033F 0340 0341 0305
Kadjar	ABS	√	√	√	√	√	√	000C 000D 0019 008B 00E9 00EA 00EB 00EC 00ED 00EE 00F0 0001 030A 0167
Kadjar	Instrument panel	√	√	√	√		√	000C 000D 004A 004C 004F 0074 007A 00E1 00E2 0001 0326 0327 0398 0399
Kadjar	UCH	√	√	√	√	√	√	0009 000C 0010 005C 00B5 00F6 0127 0128 0129 012A 012B 012C 012D 012E 0137 0324 0338 0339 01A0 0139 0012 033A
Kadjar	Airbag/pretensioners	√	√	√	√	√	√	000C 000D 0022 0023 0037 0001 030C 0152

Kadjar	Front radar	√	√	√				000C 000D 0001 0328 0209
Kadjar	Air conditioning	√	√	√	√		√	000C 000D 0069 00D1 0001 0324
Kadjar	Automatic gearbox	√	√	√	√	√		000C 000D 0019 0153 0154 0155 0156 0157 0158 0159 015A 015B 015C 017C 0001 0303 0301 0346 013E 0347 0324 034A
Kadjar	Parking brake	√	√	√	√	√		000C 000D 010D 010E 0001 0055 0330
Kadjar	Variable PAS	√	√	√	√	√		000C 000D 0001
Kadjar	UPC	√	√	√	√	√	√	000D 00E2 0105 0108 0118 011B 014D 014E 0215 0109 0305 0201
Kadjar	4 wheels drive	√	√	√	√			000C 0001 0303 0301
Kadjar	Parking prox can	√	√	√	√		√	000C 000D 0065 0067 0124 0125 0126 0001 0337
Kadjar	Front camera	√	√	√	√			000C 001C 0069 0001
Kadjar	Radio	√	√	√	√		√	0001 000C 000D 004C 006F 007A 00A8 00D6 00D7 00D8 01F7 0181 0325 00E2 0161
Kadjar	Telematic ctrl unit	√	√	√	√		√	000C 000D 00D2 0001 037D 0325
Kadjar	Multimedia interface	√	√	√				000C 000D 0001
Kadjar	Amplifier	√	√	√	√		√	0001 000D 00D3 00D4
Kangoo II	Engine System	√	√	√	√	√	√	0001 0002 0003 0004 0005 0006 0007 0008 0009 000A 000B 000C 006D 00C4 00C5 00C7 00D0 00D9 00DA 00DB 00DC 00DD 00F3 00F7 00F9 00FA 010B 0186 0187 0189 018A 020D 0237 0256 0301 0302 0303 0371 0323 032C 0369 032E 0362 0320 013C 0393 0394 0395 0396
Kangoo II	ABS	√	√	√	√	√	√	000C 000D 0014 0015 0016 0017 0019 008B 0161 0001 00E9 00EA 00EB 00F0 00EC 030A 00ED 0352 0168 00EE 0167 005B 00B6 0353 030B
Kangoo II	Instrument panel	√	√	√	√	√	√	000C 000D 0019 0048 0049 004A 004B 004C 004D 004E 0052 0053 0070 0071 0072 0073 0074 0075 0079 007C 007D 00AE 00B6 00E1 0149 015E 015F 0160 0161 0162 0163 0164 0165 0166 0167 0168 0169 016A 01F1 01F2 01F3 01F4 0001 0366
Kangoo II	UCH	√	√	√	√	√	√	000C 000D 01BE 0354 0355 01BF 0169 0356 0357 0358 0359 0161 035A 0001 0307 030E 035B 0009
Kangoo II	Airbag/pre-tensioners	√	√	√	√	√	√	000C 000D 0022 0023 002E 002F 0037 0142 0143 01D5 01D6 01D7 01D8 01D9 01DA 01DD 01DE 023D 023E 0001 030C
Kangoo II	Air conditioning	√	√	√	√	√	√	000C 000D 0013 005B 0069 00AC 0001
Kangoo II	Automatic gearbox	√	√	√	√	√	√	000C 000D 0019 001A 001B 0082 0001
Kangoo II	Communications unit	√	√	√	√		√	000C 000D 0019 004C 006A 0181 0182 01CF 0001 0325
Kangoo II	Variable PAS	√	√	√	√	√		000C 000D 001E 001F 01A4 0001
Kangoo II	UPC	√	√	√	√		√	0001 000D 0019 0017
Kangoo II	Tyres	√	√	√		√		000C 000D 0001 00F6 0161
Kangoo II	ADAPTATION UNIT	√	√	√	√	√		00E3 0001
Kangoo II	Parking assistance	√	√	√	√	√		000C 000D 0065 0066 0067 0001
Kangoo II	Radio	√	√	√	√	√	√	0001 000D 001F 004C 01C6 0236 0238 0161 030D
Kangoo II	Telematic ctrl unit	√	√	√	√	√	√	000C 000D 00D2 0161 0001 0325
Kangoo II	Multimedia interface	√	√	√	√		√	0001 000D 0055 019C 019D 01C1

Kangoo II	Multimed. connection	√	√	√	√	√		000C 000D 0019 0181 0001
Kangoo MUX	Engine System	√	√	√	√		√	0001 0002 0004 0009 000A 000B 0052 006B 006C 00C4 00CE 00CF 00F7 018D 0257 0258 0298 0299 029A 029B 029C 029D 029E 029F 02A1 0304 0305
Kangoo MUX	ABS	√	√	√	√		√	0019 001F 008B
Kangoo MUX	UCH	√	√	√	√		√	000E 005D 00B5 0127 0229
Kangoo MUX	Airbag/pretensioners	√	√	√	√		√	001F
Kangoo MUX	Automatic gearbox	√	√	√	√		√	0018 001A 001B 001F 004E 0081 0082 0099 009A 009B 009C 027A 027B 027C
Kangoo MUX	GAS Injection	√	√	√	√		√	
Kangoo VLL	Engine System	√	√	√	√	√	√	0001 0002 0003 0005 0006 0007 0008 0009 000B 000C 000D 006D 00C4 00C5 00D9 00DA 00DB 00DC 010C 0301 0303 0304
Kangoo VLL	ABS	√	√	√	√	√	√	000C 000D 0019 008B 0001 030A 030B 0017
Kangoo VLL	UCH	√	√	√	√		√	000C 000D 00D5 0001 0307 025F
Kangoo VLL	Airbag/pretensioners	√	√	√	√	√		000C 000D 0019 0022 0023 0144 0001
Kangoo VLL	Variable PAS	√	√	√	√	√		000C 000D 001F 0001
Kangoo VLL	TRACKER	√	√	√	√			0001 01EE 0009
Kangoo ZE/StopStart/ph2	Engine System	√	√	√	√	√	√	0001 0002 0004 0009 000C 006D 00C5 00D0 00D9 00DA 00DB 00DC 00DD 00E0 00F3 00F7 00F8 00F9 00FA 00FB 00FC 00FD 00FF 0100 0101 0103 0105 0107 0108 0109 010A 010B 0114 0115 0116 0117 013C 013D 014C 0186 01EF 01F0 01FF 0200 0201 0202 0203 0324 033C 033D 033E 033F 0340 0341 0301 0303 0305 0312 032C 032D 0302 0323 032E 032F 032B 0379
Kangoo ZE/StopStart/ph2	ABS	√	√	√	√	√	√	000C 000D 0014 0015 0016 0017 0019 008B 00E9 00EA 00EB 00EC 00EE 0001 030A 0167 030B
Kangoo ZE/StopStart/ph2	Instrument panel	√	√	√	√	√	√	000C 000D 0048 0049 004B 004C 0070 0071 0072 0074 0079 00B6 00E1 0149 015E 015F 0160 0166 01E8 01E9 01EA 01EB
Kangoo ZE/StopStart/ph2	UCH	√	√	√	√	√	√	000C 01BE 01BF 0001 030E 035B 0009 0307
Kangoo ZE/StopStart/ph2	Airbag/pretensioners	√	√	√	√	√	√	000C 000D 0022 0023 002E 0037 0142 0143 01D5 01D6 01D7 01D8 01D9 01DA 01DB 01DC 01DD 01DE 0001 030C
Kangoo ZE/StopStart/ph2	Air conditioning	√	√	√	√	√	√	000C 000D 0069 00D1 0001 0331
Kangoo ZE/StopStart/ph2	Automatic gearbox	√	√	√	√	√	√	000C 000D 00EC 0111 0153 0154 0155 0156 0158 0159 015A 015B 015C 01C4 021A 0001 0303 0301 0346 013E 0347 0350
Kangoo ZE/StopStart/ph2	Communications unit	√	√	√	√	√	√	000C 000D 0019 004C 006F 007A 00D7 0001 036F 0323 006A 0379
Kangoo ZE/StopStart/ph2	Variable PAS	√	√	√	√	√		000C 000D 001E 001F 01A4 0001
Kangoo ZE/StopStart/ph2	UPC	√	√	√	√		√	0001 000D 0019 00F4 0105 0114 0115 0116 0117 0118 0119 011A 011B 011C 011D 011E 011F 0120 0121 0122 0123 01C4 01EC 01ED 0303 0301 0329 0350 0351 034D
Kangoo ZE/StopStart/ph2	Tyres	√	√	√	√	√		000C 000D 0001 00F6
Kangoo ZE/StopStart/ph2	ADAPTATION UNIT	√	√	√	√			000C 0001
Kangoo ZE/StopStart/ph2	CHARGE CONTROLLER	√	√	√	√			000C 000D 0001
Kangoo ZE/StopStart/ph2	Parking prox can	√	√	√	√	√	√	000C 000D 0065 0001 0337
Kangoo ZE/StopStart/ph2	Parking assistance	√	√	√	√		√	000C 000D 0065 0067 0001 0337

Kangoo ZE/StopStart/ph2	HEATER	√	√	√	√			000C 00CC 00CD 0001
Kangoo ZE/StopStart/ph2	Radio	√	√	√	√	√	√	0001 000C 000D 001F 0055 006F 00D7 0181 0194 0195 01F7 01FC 0329
Kangoo ZE/StopStart/ph2	Telematic ctrl unit	√	√	√	√	√	√	000C 000D 00D2 0001 0325 037D
Kangoo ZE/StopStart/ph2	Multimedia interface	√	√	√	√		√	0001 000D 00D8 0196 0214 0324
Kangoo ZE/StopStart/ph2	Multimed. connection	√	√	√	√	√	√	000C 000D 0019 006A 0001
Kangoo ZE/StopStart/ph2	BCB	√	√	√	√	√	√	000C 0001 0009
Kangoo ZE/StopStart/ph2	BMS	√	√	√	√	√		000C 0180 01D0 01D1 0001 0303 0301
Kangoo ZE/StopStart/ph2	EVC	√	√	√	√	√	√	000C 00DD 0179 017A 01D0 01E0 01E1 01E2 0001 0303 0301 0331 032C 0009
Kangoo ZE/StopStart/ph2	PEB	√	√	√	√	√		000C 017B 0001 0303 0301 0009
Kangoo ZE/StopStart/ph2	BMS safety	√	√	√	√	√		000C 017F 0001
Kangoo	Engine System	√	√	√	√		√	0001 0002 0004 0009 000A 000B 0052 006B 006C 00C4 00CE 00CF 00F7 018D 0257 0258 0276 0277 0291 0292 0293 0294 0295 0296 0297 0298 0299 029A 029B 029C 029D 029E 029F 02A1 02DF 02E0 02E1 02E2 02E5 0304 0305
Kangoo	ABS	√	√	√	√		√	0019 001F 008B
Kangoo	UCH	√	√	√	√		√	027E 027F 0282 0284 0285 0286 0287 0288 02BE 02BF 02C0 02C1
Kangoo	Airbag/pretensioners	√	√	√	√		√	0019 001F 0022 0023 0265 0266 0267 0268 0269
Kangoo	Air conditioning	√	√	√	√		√	0019 02E6 02E7 02E8 02E9 02EA 02EB 02EC 02ED 02EE 02EF 02F0 02F1 02F2 02F3 02F4 02F5 02F6 02F7
Kangoo	Automatic gearbox	√	√	√	√		√	0018 001A 001B 001F 004E 0082 0099 009A 009B 009C 0275 0276 0277 0278 0279 027A 027B 027C
Kangoo	GAS Injection	√	√	√	√		√	
Kangoo	Supervisor or DCDC	√	√	√	√		√	001F 023C 0270 0271 0272 0273
Kangoo	INVERTER	√	√	√	√		√	
Kangoo	HEATER	√	√	√	√		√	
Koleos II/QM6	Engine System	√	√	√	√	√	√	0001 0004 0005 0006 0007 0008 0009 000C 006D 00C5 00D9 00DA 00DB 00DC 00DD 00F7 00F8 00F9 00FA 00FB 00FC 00FD 00FE 00FF 0100 0101 0102 0103 0104 0105 0106 0107 0108 0109 010A 010B 0150 0151 032A 0301 0302 0303 0323 032B 0312 032C 032D 032E 032F 0114 0115 0116 0117 024A 0345
Koleos II/QM6	ABS	√	√	√	√	√	√	000C 000D 0019 008B 00E9 00EA 00EB 00EC 00ED 00EE 00F0 0001 030A 0167
Koleos II/QM6	Instrument panel	√	√	√	√		√	000C 000D 004A 004C 004F 0074 007A 00E1 00E2 0001 0326 0327 0398 0399
Koleos II/QM6	UCH	√	√	√	√	√	√	0009 000C 0010 005C 00B5 00F6 0127 0128 0129 012A 012B 012C 012D 012E 0137 0324 0338 0339 01A0 0139 0012 033A
Koleos II/QM6	Airbag/pretensioners	√	√	√	√	√	√	000C 000D 0022 0023 0037 0001 030C 0152
Koleos II/QM6	Front radar	√	√	√				000C 000D 0001 0328 0209
Koleos II/QM6	Air conditioning	√	√	√	√		√	000C 000D 0069 00D1 0001 0324
Koleos II/QM6	Automatic gearbox	√	√	√	√	√		000C 000D 0019 0154 017C 0001 0324 034A
Koleos II/QM6	Parking brake	√	√	√	√	√		000C 000D 010D 010E 0001 0055 0330

Koleos II/QM6	Variable PAS	√	√	√	√	√		000C 000D 0001
Koleos II/QM6	UPC	√	√	√	√	√	√	000D 00E2 0105 0108 0118 011B 014D 014E 0215 0109 0303 0301
Koleos II/QM6	Power back door	√	√	√	√			000C 014F 0001 0009
Koleos II/QM6	4 wheels drive	√	√	√	√			000C 0001 0303 0301
Koleos II/QM6	Parking prox can	√	√	√	√		√	000C 000D 0065 0067 0124 0125 0126 0001 0337
Koleos II/QM6	Driver's seat	√	√	√	√		√	0001 000D
Koleos II/QM6	Front camera	√	√	√	√			000C 001C 0069 0001 0331 034B 034C 000D 034D
Koleos II/QM6	Radio	√	√	√	√		√	000C 000D 004C 006F 007A 00A8 00D2 00D6 00D7 00D8 01F7 0001 0181 0325 00E2
Koleos II/QM6	Telematic ctrl unit	√	√	√	√		√	000C 000D 00D2 0001 0325 037D
Koleos II/QM6	Left-hand door or passenger's seat	√	√	√	√		√	0001 000D
Koleos II/QM6	Multimedia interface	√	√	√			√	000C 000D 006A 00D2 0001
Koleos II/QM6	Amplifier	√	√	√	√		√	0001 000D 00D3 00D4
Koleos/QM5	Engine System	√	√	√	√	√	√	0001 0004 000D 006A 006D 00C5 00C7 010B 018D 018E 0190 0191 0192 0249 024A 0301 0302 0303 0323 032B 0312 00C4 036B 0009 0345 006C 0391
Koleos/QM5	ABS	√	√	√	√		√	000C 0001 023F
Koleos/QM5	Instrument panel	√	√	√	√			000C 004A 004C 004E 004F 0074 0079 007D 00A4 00B6 00E1 0149 0165 01B1 01B2 01B3 01B4 01B5 01B6 0001 0397
Koleos/QM5	UCH	√	√	√	√	√	√	000C 0010 0011 005A 0061 007D 00B4 00B5 00B9 0129 022B 0240 0241 0242 0243 0244 0245 0246 0001 0307 0308 025F
Koleos/QM5	Airbag/pretensioners	√	√	√	√			000C 0001
Koleos/QM5	Automatic gearbox	√	√	√	√			000C 024F 0001
Koleos/QM5	Communications unit	√	√	√	√		√	0001 000C 000D 0012 0019 004C 006A 0181 01C2 01C3 0325 0161 0381 036F
Koleos/QM5	Parking brake	√	√	√	√	√	√	000C 000D 0055 0057 0250 0251 0252 0253 0001 030D
Koleos/QM5	Blind spot detection	√	√	√	√	√	√	000C 000D 00F5 0001
Koleos/QM5	Variable PAS	√	√	√	√	√		000C 0001
Koleos/QM5	UPC	√	√	√	√		√	0001
Koleos/QM5	Tyres	√	√	√	√		√	000C 000D 00F4 00F5 00F6 0001 0329
Koleos/QM5	4 wheels drive	√	√	√	√			000C 0001
Koleos/QM5	Parking prox can	√	√	√	√	√		000C 000D 0019 0052 0065 0067 0220 0221 0248 0001
Koleos/QM5	Auto front lighting	√	√	√	√		√	000C 023F 0001
Koleos/QM5	Discharge Lamp	√	√	√	√		√	000C 008C 01D4 0001
Koleos/QM5	Radio	√	√	√	√	√	√	0001 000C 000D 001F 004C 005B 00D7 0181 0194 01F7 0247 0161 037F 0380 0382 0383 0390 030D
Koleos/QM5	Telematic ctrl unit	√	√	√	√	√	√	000C 000D 00D2 0161 0001 0325
Koleos/QM5	Multimedia interface	√	√	√	√	√	√	0001 000D 0012 0055 00D8 0196 019C 01C1 00C6 0368
Koleos/QM5	Amplifier	√	√	√	√	√	√	0001 000D 001F 00D3 0161 0181
Koleos/QM5	Multimed. connection	√	√	√	√	√		000C 000D 0019 0181 0001
Kwid	Engine System	√	√	√	√	√	√	0002 000C 006D 00C5 00D9 00DA 00DB 00DC 00DF 0178 0001 0301 0303 0009 0349

Kwid	Instrument panel	√	√	√	√	√	√	000C 000D 0072 00E2 015D 0001
Kwid	UCH	√	√	√	√	√	√	000C 0001 0009
Kwid	Airbag/pretensioners	√	√	√	√	√	√	000C 000D 0022 0023 0342 0343 0344 0001 030C 0132 0331 0330
Kwid	Variable PAS	√	√	√	√	√		000C 000D 0001
Kwid	Radio	√	√	√	√		√	000C 000D 001F 006F 00D7 01F7 0001 0181
KoleosII CN/QM6 CN	Engine System	√	√	√	√		√	0001 00DA 00DB 0105 0109 010A 0150 0151
KoleosII CN/QM6 CN	ABS	√	√	√	√	√	√	000C 000D 0019 008B 00E9 00EA 00EB 00EC 00ED 00EE 00F0
KoleosII CN/QM6 CN	Instrument panel	√	√	√	√		√	000C 000D 004A 004C 004F 0074 007A 00E1 00E2
KoleosII CN/QM6 CN	UCH	√	√	√	√	√	√	0009 000C 0010 005C 00B5 00F6 0127 0128 0129 012A 012B 012C 012D 012E
KoleosII CN/QM6 CN	Airbag/pretensioners	√	√	√	√	√	√	000C 000D 0022 0023 0037
KoleosII CN/QM6 CN	Front radar	√	√	√				000C 000D
KoleosII CN/QM6 CN	Air conditioning	√	√	√	√		√	000C 000D 0069 00D1
KoleosII CN/QM6 CN	Automatic gearbox	√	√	√	√	√		000C 000D 0019 0154 017C
KoleosII CN/QM6 CN	Parking brake	√	√	√	√	√		000C 000D 010D 010E
KoleosII CN/QM6 CN	Variable PAS	√	√	√	√	√		000C 000D
KoleosII CN/QM6 CN	UPC	√	√	√	√	√	√	000D 00E2 0105 0108 0118 011B 014D 014E
KoleosII CN/QM6 CN	Power back door	√	√	√	√			000C 014F
KoleosII CN/QM6 CN	4 wheels drive	√	√	√	√			000C
KoleosII CN/QM6 CN	Parking prox can	√	√	√	√		√	000C 000D 0065 0067 0124 0125 0126
KoleosII CN/QM6 CN	Driver's seat	√	√	√	√		√	
KoleosII CN/QM6 CN	Front camera	√	√	√	√			000C 001C
KoleosII CN/QM6 CN	Radio	√	√	√	√		√	000C 000D 004C 006F 007A 00A8 00D2 00D6 00D7 00D8
KoleosII CN/QM6 CN	Telematic ctrl unit	√	√	√	√		√	000C 000D 00D2
KoleosII CN/QM6 CN	Left-hand door or passenger's seat	√	√	√	√		√	
KoleosII CN/QM6 CN	Multimedia interface	√	√	√			√	000C 000D 006A 00D2
KoleosII CN/QM6 CN	Amplifier	√	√	√	√		√	0001 000D 00D3 00D4
Laguna II	Engine System	√	√	√	√	√	√	0002 0004 0009 000C 000D 006B 006C 006D 00C4 00C7 00CE 00CF 00D9 0001 0322 0301 0302 0303
Laguna II	ABS	√	√	√	√	√	√	000C 000D 0017 0019 008B 0098 0032 0001 030A 00ED 00F1 0316
Laguna II	Instrument panel	√	√	√	√			000C 000D 0012 0048 0049 004B 004C 004D 004E 0050 0051 0052 0053 0064 0070 0071 0072 0073 0074 0075 0076 0077 0078 0079 007A 007B 007C 007D 007E 009D 009E 009F 00A0 00A1 00A2 00A3 00A4 0315 0001 0397
Laguna II	UCH	√	√	√	√	√	√	000C 000D 0010 0011 004D 0052 005A 005B 007C 0086 00A5 00B3 00B4 00B5 00B6 00B8 00BA 00BB 00BF 00C0 01A7 01D2 021F 0225 0226 0227 0228 0229 022A 022B 022C 007B 0001 00F6 0307 030F 031B 0385 0386 031D 0387 0309 031F
Laguna II	Airbag/pretensioners	√	√	√	√	√		000C 000D 0019 0022 0023 0037 0001 030C 0152 0317 0318
Laguna II	Air conditioning	√	√	√	√	√	√	000C 000D 0012 0083 0084 0085 0086 0087 0001
Laguna II	Automatic gearbox	√	√	√	√	√	√	000C 000D 0018 001A 004E 0081 0082 0099 009A 009B 009C 0001 0019 001B 0319

Laguna II	GAS Injection	√	√	√	√	√	√	000C 0001
Laguna II	Discharge Lamp	√	√	√	√	√	√	000C 000D 0012 001C 0001
Laguna II	Parking assistance	√	√	√	√	√		000C 000D 0065 0066 0067 0001
Laguna II	HEATER	√	√	√	√	√	√	000C 00CC 00CD 0001
Laguna III	Engine System	√	√	√	√	√	√	0001 0002 0003 0004 006D 00C5 00C7 00D0 00D9 00DA 00DB 00DC 00DD 00F3 00F4 00F7 00F8 00F9 00FA 00FB 00FF 0100 0103 0105 010B 010C 0114 0115 0116 0117 0186 0187 0189 018A 018D 0192 01E7 0301 0302 0303 0323 032B 0312 00C4 036B 0009 0304 0305 032E 0373 0329 0371 0362
Laguna III	ABS	√	√	√	√	√	√	000C 000D 0019 008B 00E9 00EA 00EB 0001 030A 0167
Laguna III	Instrument panel	√	√	√	√	√	√	000C 000D 004C 004F 0053 0074 0079 007A 00A4 00E1 0001 0327 0326 0398 0399 0397
Laguna III	UCH	√	√	√	√	√	√	000C 01D2 01D3 0001 00F6 0307 0308 025F 0310 0009 031F
Laguna III	Airbag/pretensioners	√	√	√	√	√		000C 000D 0022 0023 0037 0001 030C 002E
Laguna III	Air conditioning	√	√	√	√	√	√	000C 000D 0069 00D1 00F4 0001 0329
Laguna III	Automatic gearbox	√	√	√	√	√	√	000C 000D 0081 00EC 0153 0154 0155 0156 0158 0159 015A 015B 015C 01C4 0001 0303 0301 0346 013E 0347 0350
Laguna III	Communications unit	√	√	√	√	√	√	0001 000C 000D 0019 004C 006F 00D7 036F 0325
Laguna III	Parking brake	√	√	√	√	√	√	000C 000D 0057 018F 0001 0364 0365
Laguna III	Variable PAS	√	√	√	√	√		000C 000D 001C 0001
Laguna III	UPC	√	√	√	√	√	√	0001 000D 00F4 0105 0114 0115 0116 0117 0118 0119 011A 011B 011C 011D 011E 011F 0120 0121 0122 01C4 01EC 01ED 0332 0331 0303 0301 0329 0350 0351 034D
Laguna III	Lighting	√	√	√	√	√	√	000C 000D 008C 0001
Laguna III	4 wheels steering	√	√	√	√	√	√	000D 00E3 00E4 00E5 0001
Laguna III	Parking prox can	√	√	√	√	√		000C 000D 0065 0067 0220 0221 0001 0337
Laguna III	Driver's door	√	√	√	√	√	√	000C 000D 0001 0388
Laguna III	Passenger's door	√	√	√	√	√	√	000C 000D 0001 0388
Laguna III	Driver's seat	√	√	√	√	√		000C 000D 01B7 0001
Laguna III	Radio	√	√	√				0001 000C 000D 001F 006F 007F 00D7 0181 0194 0195 01F7 0236 0238 0329
Laguna III	Telematic ctrl unit	√	√	√	√	√	√	000C 000D 00D2 0001 0325
Laguna III	Left-hand door or passenger's seat	√				√		00D1
Laguna III	Right-hand door or collapsible seat	√				√		00D1 038D
Laguna III	Multimedia interface	√	√	√	√		√	0001 000D 00D8 0196 00C6
Laguna III	Amplifier	√	√	√	√	√	√	0001 000D 001F 00D3 0197
Laguna III	Multimed. connection	√	√	√	√	√	√	000C 000D 0019 006A 0001
Laguna ph2	Engine System	√	√	√	√		√	006B 006C 00C4 00CE 00CF 0276 0277 0291 0292 0297 029A 029B 029E 029F
Laguna ph2	ABS	√	√	√	√		√	0019
Laguna ph2	Instrument panel	√	√	√	√			004A 01F3 02CC 02D3
Laguna ph2	UCH	√	√	√	√		√	027E 027F 0282 0283 0284 0285 0286 0287

Laguna ph2	Airbag/pretensioners	√	√	√	√			0019 001F 0022 0023 0265 0266 0267 0268 0269
Laguna ph2	Air conditioning	√	√	√	√			
Laguna ph2	Automatic gearbox	√	√	√	√		√	001B 001F 0274 0275 0276 0277 0278 0279
Laguna ph2	Voice synthesiser	√	√	√	√			02CC
Laguna ph2	GAS Injection	√	√	√	√		√	
Laguna ph2	Variable PAS	√	√	√	√		√	0019 0300
Laguna ph2	Driver's seat	√	√	√	√		√	001F
Laguna	Engine System	√	√	√	√		√	006B 006C 00CE 00CF 0276 0277 0291 0292 0297 02E1 02E2
Laguna	ABS	√	√	√	√		√	0019
Laguna	Instrument panel	√	√	√	√			004A 01F3 02CC 02D3
Laguna	UCH	√	√	√	√		√	027E 027F 0282 0283 0284 0285 0286 0287
Laguna	Airbag/pretensioners	√	√	√	√		√	0019 0022 0023 0265 0266 0267 0268 0269
Laguna	Air conditioning	√	√	√	√			
Laguna	Automatic gearbox	√	√	√	√		√	0274
Laguna	Voice synthesiser	√	√	√	√			02CC
Laguna	Variable PAS	√	√	√	√		√	0019 0300
Laguna	Driver's seat	√	√	√	√		√	001F
LagunaII ph2	Engine System	√	√	√	√	√	√	0001 0002 0004 0009 000A 000B 000C 000D 006A 006B 006C 006D 00C5 00C7 00CE 00CF 00D9 0230 0304 0305 0301 0302 0303 0323 00C4 0312 032B
LagunaII ph2	ABS	√	√	√	√	√	√	000C 000D 0014 0015 0017 0019 0052 008B 00E9 00EA 00EB 0001 030A 0384 0352
LagunaII ph2	Instrument panel	√	√	√	√		√	000C 000D 0012 0048 0049 004B 004C 004D 004E 0050 0051 0052 0053 0064 0070 0071 0072 0073 0074 0075 0076 0077 0078 0079 007A 007B 007C 007D 007E 0315 0001 0397
LagunaII ph2	UCH	√	√	√	√	√	√	000C 000D 0010 0011 0012 004D 0052 005A 005B 005D 0061 007C 0086 00A5 00B3 00B4 00B5 00B6 00B7 00B8 00B9 00BA 00BB 00BC 00BD 00BE 00BF 00C0 00C1 00C2 01A7 01D2 021F 0225 0226 0227 0228 0229 022A 022B 022C 0231 0001 00F6 0307 030F 031B 031C 031D 031E 0309 031F 007B 0385 0386
LagunaII ph2	Airbag/pretensioners	√	√	√	√	√		000C 000D 0019 0022 0023 0037 0001 030C 0152 0317
LagunaII ph2	Air conditioning	√	√	√	√	√	√	000C 000D 0012 0083 0084 0085 0086 0087 0001
LagunaII ph2	Automatic gearbox	√	√	√	√	√	√	000C 000D 001A 001B 0081 0082 0319 0001
LagunaII ph2	Communications unit	√	√	√	√		√	0001 000D 0012 006A 007F 0080 0161
LagunaII ph2	Parking brake	√	√	√	√	√	√	000C 000D 0055 0056 0057 0058 0001 030D
LagunaII ph2	Lighting	√	√	√	√	√	√	000C 000D 0012 008C 008D 008E 008F 0090 0001
LagunaII ph2	Hands-free kit	√	√	√	√		√	0001 000D 0019 006E 006F 0313 0314 030D
LagunaII ph2	Parking assistance	√	√	√	√	√		000C 000D 0065 0066 0067 0001 0337
LagunaII ph2	HEATER	√	√	√	√	√	√	000C 00CC 00CD 0001
LagunaII ph2	Radio	√		√	√			



Latitude/sm5	Engine System	√	√	√	√	√	√	0001 0002 0003 0004 0009 006A 006D 00C5 00C7 00D0 00D9 00DA 00DB 00DC 00DD 00E0 00F3 00F7 00F8 00F9 00FA 00FB 00FF 0100 0103 0105 0108 0109 010A 010B 010C 0114 0115 0116 0117 013C 013D 014C 0186 0187 0189 018A 018D 018E 0190 0191 0192 01A1 01A2 01A3 01E7 01FF 0200 0201 0202 0203 0324 033C 033D 033E 033F 0340 0341 0301 0303 0305 0312 032C 032D 0302 0323 032B 024A 0345 0304 00C4 036B
Latitude/sm5	ABS	√	√	√	√	√	√	000C 000D 0019 008B 00E9 00EA 00EB 00ED 0001 030A
Latitude/sm5	Instrument panel	√	√	√	√	√	√	000C 000D 004C 004E 004F 0052 0053 0074 0079 007A 00A4 00B6 00E1 0193 0001 0397
Latitude/sm5	UCH	√	√	√	√	√	√	000C 013A 0001 00F6 0307 0308 025F 0310 0363 0009 031F
Latitude/sm5	Airbag/pretensioners	√	√	√	√	√		000C 000D 0022 0023 0037 0001 030C
Latitude/sm5	Air conditioning	√	√	√	√	√	√	000C 000D 0069 00D1 0001
Latitude/sm5	Automatic gearbox	√	√	√	√	√	√	000C 000D 0019 00EC 0111 0153 0154 0155 0156 0158 0159 015A 015B 015C 01C4 021A 0001 0303 0301 0346 013E 0347
Latitude/sm5	Communications unit	√	√	√	√	√	√	0001 000C 000D 0019 004C 006F 00D7 036F 0325 0181
Latitude/sm5	Parking brake	√	√	√	√	√	√	000C 000D 0057 018F 0001 0364 0365 0331
Latitude/sm5	Blind spot detection	√	√	√	√	√	√	000C 000D 0001
Latitude/sm5	Variable PAS	√	√	√	√	√	√	000C 000D 0001
Latitude/sm5	UPC	√	√	√	√	√	√	0001 000D 00E2 0118 011B 0122 0215 0332 0303 0301
Latitude/sm5	Lighting	√	√	√	√	√	√	000C 000D 008C 0001
Latitude/sm5	Parking prox can	√	√	√	√	√	√	000C 000D 0065 0067 0220 0221 0001 0337
Latitude/sm5	Driver's door	√	√	√	√	√	√	000C 000D 0001
Latitude/sm5	Passenger's door	√	√	√	√	√	√	000C 000D 0001
Latitude/sm5	Driver's seat	√	√	√	√	√	√	000C 000D 01B7 0001
Latitude/sm5	Radio	√	√	√	√	√	√	0001 000C 000D 001F 006F 007F 00D7 0181 0194 0195 01F7 01FC
Latitude/sm5	Telematic ctrl unit	√	√	√	√	√	√	000C 000D 00D2 0001 0325
Latitude/sm5	Left-hand door or passenger's seat	√			√	√		00D1 0331
Latitude/sm5	Right-hand door or collapsible seat	√			√	√		00D1 0331
Latitude/sm5	Multimedia interface	√	√	√	√	√	√	0001 000D 00D8 0196 00C6
Latitude/sm5	Amplifier	√	√	√	√	√	√	0001 000D 001F 00D3 0197
Latitude/sm5	Multimed. connection	√	√	√	√	√		000C 000D 0019 006A 0001
Lodgy	Engine System	√	√	√	√	√	√	0001 0002 0003 0004 0005 0006 0007 0008 0009 000C 006D 00C5 00D0 00D9 00DA 00DB 00DC 00DD 00E0 00F3 00F7 00F8 00F9 00FA 00FB 00FC 00FD 00FF 0100 0101 0103 0104 0105 0106 0107 0108 0109 010A 010B 010C 0114 0115 0116 0117 013C 013D 014C 017D 0186 01EF 01F0 01F5 01F6 01FF 0200 0201 0202 0203 020D 020E 020F 0210 0211 0304 0305 032C 032F 0324 033C 033D 033E 033F 0340 0341 0301 0303 0312 032D 0302 0323 032E 032B 0331 0377 0379 037A
Lodgy	ABS	√	√	√	√	√	√	000C 000D 0019 008B 00E9 00EA 00EB 00ED 00F0 0001 030A 0167

Lodgy	Instrument panel	√	√	√	√		√	000C 000D 004C 004F 0052 0072 0074 00E1 00E2 014B 0164 007D 0001
Lodgy	UCH	√	√	√	√	√	√	000C 0010 00F6 0105 0108 0129 012B 0139 0339 0109 0001 0301 0303 0009
Lodgy	Airbag/pretensioners	√	√	√	√	√	√	000C 000D 0022 0023 0001 030C 0152 0342
Lodgy	Automatic gearbox	√	√	√	√			0001 0111 0112 0113 0360 000D
Lodgy	Variable PAS	√	√	√	√	√		000C 000D 001F 0001
Lodgy	Radio	√	√	√	√	√	√	0001 000C 000D 001F 006F 00D7 01FC 037C 0181
Lodgy	HANDS-FREE MODULE	√	√	√	√	√	√	000C 000D 00F5 0128 012F 0130 0131 0132 0133 0134 0135 0136 0137 0138 0139 013A 013B 0001 0308 0009
Logan II/sandero II	Engine System	√	√	√	√	√	√	0001 0002 0003 0004 0005 0006 0007 0008 0009 000C 006D 00C5 00D0 00D9 00DA 00DB 00DC 00DD 00DF 00F3 00F5 00F7 00F8 00F9 00FA 00FB 00FC 00FD 00FF 0100 0101 0103 0104 0105 0106 0107 0108 0109 010A 010B 010C 0114 0115 0116 0117 013C 013D 017D 0186 01EF 01F0 020D 020E 020F 0210 0211 0212 0213 0304 0305 032C 032F 0301 0302 0303 0323
Logan II/sandero II	ABS	√	√	√	√	√	√	000C 000D 0019 008B 00E9 00EA 00EB 00EC 00ED 00EE 00F0 0001 030A 0167
Logan II/sandero II	Instrument panel	√	√	√	√		√	000C 000D 004C 004F 0052 0053 0072 0074 00E1 00E2 014B 0164 007D 0001 0397
Logan II/sandero II	UCH	√	√	√	√	√	√	000C 0010 005D 00F6 0105 0108 0129 012B 0139 0339 0109 0001 0301 0303 0009 0307
Logan II/sandero II	Airbag/pretensioners	√	√	√	√	√	√	000C 000D 0022 0023 0001 030C 0152 0342
Logan II/sandero II	Air conditioning	√	√	√	√	√	√	000C 000D 00D1 0001
Logan II/sandero II	Automatic gearbox	√	√	√	√	√	√	000C 000D 0111 0112 0113 0001 0360
Logan II/sandero II	Variable PAS	√	√	√	√	√		000C 000D 001F 0001
Logan II/sandero II	TRACKER	√	√	√	√			0001 01EE 0009
Logan II/sandero II	Radio	√	√	√	√	√	√	0001 000C 000D 001F 006F 00D7 01FC 037C 0181
Logan II/sandero II	Telematic ctrl unit	√	√	√	√		√	000C 000D 00D2 0001 0325 037D
Logan II/sandero II	Multimedia interface	√	√	√	√		√	0001 000D 00D8 0196 0214 0324
Logan II/sandero II	HANDS-FREE MODULE	√	√	√	√	√	√	000C 000D 00F5 0128 012F 0130 0131 0132 0133 0134 0135 0136 0137 0138 0139 013A 013B 0001 0308 0009
Logan	Engine System	√	√	√	√	√	√	0001 0002 0003 0005 0006 0007 0008 0009 000B 000C 000D 006D 00C4 00C5 00C7 00D0 00D9 00DA 00DB 00DC 00DD 00F3 00F7 00F9 00FA 010B 010C 017D 0186 0187 020D 0254 0255 0256 0301 0303 0304 0305 0302
Logan	ABS	√	√	√	√	√	√	000C 000D 0019 008B 0001 030A 030B 0017
Logan	UCH	√	√	√	√		√	000C 000D 00D5 0183 0001 0307 025F
Logan	Airbag/pretensioners	√	√	√	√	√		000C 000D 0022 0023 0026 0027 002E 002F 0037 007D 0141 0142 0143 0144 0145 0146 0199 019A 019B 01FD 01FE 0001
Logan	Automatic gearbox	√	√	√	√	√	√	000C 000D 0019 001A 001B 0082 0001
Logan	GAS Injection	√	√	√	√	√	√	000C 000D
Logan	Variable PAS	√	√	√	√	√		000C 000D 001F 0001 001C

Logan	TRACKER	√	√	√	√			0001 01EE 0009
Logan	Radio	√	√	√	√	√	√	0001 000C 000D 001F 005B 006F 00D7 01F7 0161 01C6
Mast.PRO.ph2	Engine System	√	√	√	√		√	0257 02A0
Mast.PRO.ph2	ABS	√	√	√	√		√	008B
Mast.PRO.ph2	UCH	√	√	√	√		√	000E 00A4 024C
Mast.PRO.ph2	Airbag/pretensioners	√	√	√	√			
Mast.PRO.ph2	ADAPTATION UNIT	√	√	√	√			
Mast.PRO.ph3	Engine System	√	√	√	√	√	√	0001 0004 0009 006D 00C7 0301 0302 0303 00C4
Mast.PRO.ph3	ABS	√	√	√	√	√	√	000C 000D 0019 008B 0001 030A 0389 0017
Mast.PRO.ph3	UCH	√	√	√	√		√	000C 000D 00B5 0001 0307 038A 025F 038B 038C
Mast.PRO.ph3	Airbag/pretensioners	√	√	√	√	√		000C 000D 0019 0022 0023 0001 030C 0152 0317
Mast.PRO.ph3	Communications unit	√	√	√	√		√	0001 000D 0161
Mast.PRO.ph3	ADAPTATION UNIT	√	√	√	√	√		00E3 0001
Master III	Engine System	√	√	√	√	√	√	0001 0002 0003 0005 0006 0007 0008 0009 000C 006D 00C5 00D0 00D9 00DC 00DD 00DE 00F7 00F8 00F9 00FA 00FB 00FF 0100 0101 0102 0103 0105 0106 0107 0108 0109 010B 0114 0115 0116 0117 0185 0186 0187 0188 0301 0302 0303 0323 032C 032D 032E 032A 0324 032B 0312 0362
Master III	ABS	√	√	√	√	√	√	000C 000D 0019 008B 00E9 00EA 00EB 00EC 00ED 00EE 00EF 0001 030A 0167 030B
Master III	Instrument panel	√	√	√	√	√	√	000C 000D 0048 0049 004B 004C 0070 0071 0072 0074 0079 00E1 0149 015E 0166 0001 0397
Master III	UCH	√	√	√	√	√	√	000C 01BE 01BF 0001 0307 030E 035B 0009
Master III	Airbag/pretensioners	√	√	√	√	√		000C 000D 0022 0023 002E 0037 0001 030C 0152
Master III	Air conditioning	√	√	√	√		√	000C 000D 00D1 00F4 0001 0329
Master III	Automatic gearbox	√	√	√	√	√	√	0004 000C 000D 0019 0155 0156 0157 0178 01C8 01C9 01CA 000C 000D 0019 004C 006F 007A 00D7 0001 036F 0325 006A 0378
Master III	Communications unit	√	√	√	√	√	√	000C 000D 0218 0001
Master III	Variable PAS	√	√	√	√			000C 000D 0218 0001
Master III	TRACKER	√	√	√	√			0001 01EE 0009
Master III	UPC	√	√	√	√		√	0001 000D 000F 0019 00F4 0105 0114 0115 0116 0117 0118 0119 011A 011B 011C 011D 011E 011F 0120 0121 0122 0123 01C4 01EC 01ED 0303 0301 0329 0350 0351 034D
Master III	Tyres	√	√	√	√	√		000C 000D 0001 00F6
Master III	ADAPTATION UNIT	√	√	√	√			000C 000D 0001 0161
Master III	Lighting	√	√	√	√		√	000C 000D 0001
Master III	Parking assistance	√	√	√	√		√	000C 000D 0065 0067 0001 0337
Master III	HANDS-FREE ACCESS	√	√	√	√	√	√	000C 000D 01B8 01B9 01BA 01BB 01BC 01BD 0001 036D 036E
Master III	Front camera	√	√	√	√			000C 000D 006A 0001
Master III	Radio	√	√	√	√	√	√	0001 000C 000D 001F 0055 006F 007F 00D7 0181 0194 0195 01F7 01FC 0161 0329
Master III	Telematic ctrl unit	√	√	√	√	√	√	000C 000D 00D2 0001 037D 0325

Master III	UREA DOSING CONTROL MODULE	√	√	√	√	√	√	000C 000D 016B 016C 016D 016E 016F 0170 0171 0172 0173 0174 0175 0176 0177 0001 0348 0301 0303
Master III	Multimedia interface	√	√	√	√		√	0001 000D 00D8 0196 0214 0324 00C6
Master III	Multimed. connection	√	√	√	√	√	√	000C 000D 0019 006A 0001
Master PROP.	Engine System	√		√	√			
Master PROP.	UCH	√	√	√	√		√	027E 027F 0282 0284 0285 0286 0287 0288 02BE 02BF 02C0 00C1
Master PROP.	Airbag/pretensioners	√	√	√	√		√	001F
Master ph2	Engine System	√	√	√	√		√	006B 006C 00CE 00F7 0243 0257 02A0
Master ph2	ABS	√	√	√	√		√	
Master ph2	UCH	√	√	√	√		√	000E 0260
Master ph2	Airbag/pretensioners	√	√	√	√			
Master ph2	Automatic gearbox	√	√	√	√		√	0004 0081 0153 01C8
Master ph2	ADAPTATION UNIT	√	√	√	√			
Master ph2	Parking prox can	√	√	√	√			0065 0066 0067
Master ph2	Piloted suspension	√	√	√	√			001F
Master ph2	Parking assistance	√	√	√	√			0065 0066 0067
Master ph3	Engine System	√	√	√	√	√	√	0001 0004 0009 000C 006A 006B 006C 006D 00C5 00C7 00CE 00CF 00D9 010B 01EF 023A 023B 023C 0301 0302 0303 0323 00C4 032C 032B 0312 0369 038F
Master ph3	ABS	√	√	√	√	√	√	000C 0017 0019 008B 00ED 0001 0389
Master ph3	UCH	√	√	√	√		√	000C 000D 00B5 0001 0307 038A 025F 038B 038C 0009
Master ph3	Airbag/pretensioners	√	√	√	√	√		000C 000D 0019 0022 0023 0001 030C 0152 0317
Master ph3	Automatic gearbox	√	√	√	√		√	0004 000D 0019 0081 0153 0156 0157 01C8 01C9 01CA 0235
Master ph3	Communications unit	√	√	√	√		√	0001 000D 0161
Master ph3	TRACKER	√	√	√	√			0001 01EE 0009
Master ph3	ADAPTATION UNIT	√	√	√	√	√		00E3 0001
Master ph3	Piloted suspension	√	√	√	√	√	√	00E3 0001 038E
Master ph3	Parking assistance	√	√	√	√	√		000C 000D 0065 0066 0067 0001
Master	Engine System	√	√	√	√		√	006B 006C 00CE 00CF 00F7 0212 0243 0257 0297 0298 0299 029A 029B 029C 029D 029E 029F 02A2 02A3 02A4 02A5 02A6
Master	ABS	√	√	√	√		√	
Master	UCH	√	√	√	√		√	027E 027F 0282 0284 0285 0286 0287 0288 02BE 02BF 02C0 00C1
Master	Airbag/pretensioners	√	√	√	√		√	0019 001F 0022 0023 0267 0269
Master	Piloted suspension	√	√	√	√			001F
MeganeII	Engine System	√	√	√	√	√	√	0001 0002 0003 0004 0005 0006 0007 0008 0009 000A 000B 000C 006A 006B 006C 006D 00C4 00C5 00C7 0230 0237 0301 0302 0303 0304 0305 0312 0320 0323 032B 00CF
MeganeII	ABS	√	√	√	√	√	√	000C 000D 0014 0015 0016 0017 0019 0088 008B 0001 030A 030B 01C0
MeganeII	Instrument panel	√	√	√	√		√	000C 000D 0012 0048 0049 004A 004B 004C 004D 004E 004F 0050 0052 0053 0064 0070 0071 0072 0075 0077 007C 007D 00AB 00AC 00AD 00AE 00AF 0149 0001 0073 0397

MeganeII	UCH	√	√	√	√	√	000C 000D 000E 000F 0010 0011 0052 0059 005A 005B 005E 00B0 00B1 00B2 022E 0001 0306 00F6 0307 0308 025F 0309
MeganeII	Airbag/pretensioners	√	√	√	√	√	000C 000D 0012 0019 0022 0023 0024 0025 0026 0027 0028 0029 002A 002B 002C 002D 002E 002F 0030 0031 0032 0033 0034 0035 0036 0037 0038 0039 003A 003B 003C 003D 003E 003F 0040 0041 0042 0043 0044 0045 0046 0047 0062 0063
MeganeII	Air conditioning	√	√	√	√	√	000C 000D 0012 0013 0001
MeganeII	Automatic gearbox	√	√	√	√	√	000C 000D 0018 0019 001A 001B 0082 0001
MeganeII	Communications unit	√	√	√	√	√	0001 000D 0161
MeganeII	GAS Injection	√	√	√	√	√	000C 000D 0001
MeganeII	Variable PAS	√	√	√	√	√	000C 000D 001E 001F 0020 0021 0001 001C
MeganeII	TRACKER	√	√	√	√	√	0001 01EE 0009
MeganeII	UPC	√	√	√	√	√	0001 000D 0068 0017
MeganeII	SUNROOF CONTROL UNIT	√	√	√	√	√	0009 000C 0054 0001
MeganeII	Lighting	√	√	√	√	√	000C 000D 0012 008C 008D 008E 0090 0001
MeganeII	Discharge Lamp	√	√	√	√	√	000C 000D 001D 0001
MeganeII	Left COSLAD	√	√	√	√	√	000C 000D 0012 001C 001D 0001
MeganeII	Right COSLAD	√	√	√	√	√	000C 000D 0012 001C 001D 0001
MeganeII	Parking assistance	√	√	√	√	√	000C 000D 0065 0066 0067 0001 0337
MeganeIV	Engine System	√	√	√	√	√	0001 0002 0004 0005 0006 0007 0008 0009 000C 006D 00C5 00D9 00DA 00DB 00DC 00DD 00DE 00DF 00F3 00F7 00F8 00F9 00FA 00FB 00FC 00FD 00FE 00FF 0100 0101 0102 0103 0104 0105 0106 0107 0108 0109 010A 010B 0114 0115 0116 0117 013C 013D 014C 0150 0151 032A 0301 0302 0303 0323 032B 0312 032C 032D 032E 032F 0324 033C 033D 033E 033F 0340 0341 0305 00E0 024A 0345 034E 034F 01FF 0200 00C4 035D
MeganeIV	ABS	√	√	√	√	√	000C 000D 001E 008B 00E9 00EA 00EB 00EC 00ED 00EF 00F0 00F1 00F2 0001 030A 0052 0168 0167
MeganeIV	Instrument panel	√	√	√	√	√	000C 000D 004A 004C 004F 0074 007A 00E1 00E2 0001 0326 0327 0398 0399
MeganeIV	UCH	√	√	√	√	√	0009 000C 0010 005C 00B5 00F6 0127 0128 0129 012A 012B 012C 012D 012E 0137 0324 0338 0339 01A0 0139 0012 033A
MeganeIV	Airbag/pretensioners	√	√	√	√	√	000C 000D 0022 0023 0037 0001 030C 0152
MeganeIV	Front radar	√	√	√	√	√	000C 000D 0001 0328
MeganeIV	Air conditioning	√	√	√	√	√	000C 000D 0069 00D1 0001 0324
MeganeIV	Automatic gearbox	√	√	√	√	√	000C 000D 0153 0154 0155 0156 0157 0158 0159 015A 015B 015C 0001 0303 0301 0346 013E 0347 0324
MeganeIV	Parking brake	√	√	√	√	√	000C 000D 010D 010E 0001 0055 0330
MeganeIV	Supervisor or DCDC	√	√	√	√	√	000C 0001 0320
MeganeIV	Variable PAS	√	√	√	√	√	000C 000D 0001
MeganeIV	UPC	√	√	√	√	√	000D 00E2 0105 0108 0118 011B 014D 014E 0215 0109 0303 0301
MeganeIV	Head up display	√	√	√	√	√	0009 000C 0001

MeganeIV	4 wheels steering	√	√	√	√	√	√	000D 00E3 00E4 00E5 0001
MeganeIV	Parking prox can	√	√	√	√		√	000C 000D 0065 0067 0124 0125 0126 0001 0337
MeganeIV	Driver's seat	√	√	√	√		√	000C 000D 00E6 00E7 00E8 0001
MeganeIV	Front camera	√	√	√	√			000C 000D 001C 0069 0001 0331
MeganeIV	Radio	√	√	√	√		√	000C 000D 004C 006F 007A 00A8 00D2 00D6 00D7 00D8 01F7 0001 0181 0325 00E2
MeganeIV	Telematic ctrl unit	√	√	√	√		√	000C 000D 00D2 0001 0325 037D
MeganeIV	Left-hand door or passenger's seat	√	√	√	√		√	000C 000D 00E6 00E7 00E8 0001
MeganeIV	Multimedia interface	√	√	√			√	000C 000D 006A 00D2 0001
MeganeIV	Amplifier	√	√	√	√		√	0001 000D 00D3 00D4
MeganeIV	BMS	√	√	√	√	√	√	000C 0180 0001 0303 0301 01FB
MeganeIV	PEB	√	√	√	√			000C 0001 0009
MeganeIV	BMS safety	√	√	√		√		000C 017F 0001
Megane/scen.	Engine System	√	√	√	√		√	0052 006B 006C 00C4 00CE 00CF 00F7 018D 0257 0258 0276 0277 0291 0292 0293 0294 0295 0296 0297 0298 0299 029A 029B 029C 029D 029E 029F 02A6 02A7 02DE 02E3 02E4
Megane/scen.	ABS	√	√	√	√		√	0019 001F 008B
Megane/scen.	Airbag/pretensioners	√	√	√	√		√	0019 001F 0022 0023 0265 0266 0267 0268 0269
Megane/scen.	Air conditioning	√	√	√	√		√	0019 02E6 02E7 02E8 02E9 02EA 02EB 02EC 02ED 02EE 02EF 02F0 02F1 02F2 02F3 02F4 02F5 02F6 02F7 02F8 02F9
Megane/scen.	Automatic gearbox	√	√	√	√		√	0018 001A 001B 001F 004E 0082 0099 009A 009B 009C 0274 0275 0276 0277 0278 0279 027A 027B 027C
Megane/scen.	GAS Injection	√	√	√	√		√	
Megane/scen.	Tyres	√	√	√	√		√	0012 00B3
Megane/scen.	SUNROOF CONTROL UNIT	√	√	√	√		√	
Megane/scen.	Driver's seat	√	√	√	√		√	001F
MeganeIII/ScenicIII	Engine System	√	√	√	√	√	√	0001 0002 0003 0004 0005 0006 0007 0008 0009 000C 006D 00C5 00C7 00D0 00D9 00DA 00DB 00DC 00DD 00E0 00F3 00F7 00F8 00F9 00FA 00FB 00FC 00FD 00FE 00FF 0100 0101 0102 0103 0104 0105 0106 0107 0108 0109 010A 010B 010C 0114 0115 0116 0117 013C 013D 014C 0185 0186 0187 0188 0189 018A 018D 01E7 01FF 0200 0201 0202 0203 020D 020E 020F 0210 0211 032A 0301 0302 0303 0323 032B 0312 032C 032D 032E 032F 0304 0305 0324 033C 033D 033E 033F 0340 0341
MeganeIII/ScenicIII	ABS	√	√	√	√	√	√	000C 000D 0019 008B 00E9 00EA 00EB 00F0 0001 0167 030A
MeganeIII/ScenicIII	Instrument panel	√	√	√	√	√	√	000C 000D 004C 004F 0052 0053 0074 0079 007A 00A4 00E1 019E 01D4 0001 0327 0326 0398 0399 0397
MeganeIII/ScenicIII	UCH	√	√	√	√	√	√	000C 019F 01A0 024E 0001 00F6 0307 0308 025F 030A 0009 0000
MeganeIII/ScenicIII	Airbag/pretensioners	√	√	√	√	√		000C 000D 0022 0023 0037 0001 030C
MeganeIII/ScenicIII	Air conditioning	√	√	√	√	√	√	000C 000D 00D1 0001
MeganeIII/ScenicIII	Automatic gearbox	√	√	√	√	√	√	000C 000D 0019 0081 00EC 0111 0153 0154 0155 0156 0158 0159 015A 015B 015C 01C4 021A 0001 0303 0301 0346 013E

MeganeIII/ScenicIII	Communications unit	√	√	√	√		√	0001 000C 000D 0019 004C 006F 00D7 036F 0325
MeganeIII/ScenicIII	Parking brake	√	√	√	√	√	√	000C 000D 010D 010E 0001 018F
MeganeIII/ScenicIII	Variable PAS	√	√	√	√	√	√	000C 000D 001E 0001
MeganeIII/ScenicIII	UPC	√	√	√	√	√	√	0001 000D 00F4 0105 0114 0115 0116 0117 0118 0119 011A 011B 011C 011D 011E 011F 0120 0121 0122 01C4 01EC 01ED 0332 0331 0303 0301 0329 0350 0351 034D
MeganeIII/ScenicIII	SUNROOF CONTROL UNIT	√	√	√	√	√	√	000C 00D2 00E2 0184 0001 0009
MeganeIII/ScenicIII	Lighting	√	√	√	√	√	√	000C 000D 008C 0001
MeganeIII/ScenicIII	Parking prox can	√	√	√	√	√		000C 000D 0065 0067 0220 0221 0001 0337
MeganeIII/ScenicIII	Driver's door	√	√	√	√	√	√	000C 000D 00D1 0001
MeganeIII/ScenicIII	Passenger's door	√	√	√	√	√		000C 000D 0001
MeganeIII/ScenicIII	Driver's seat	√	√	√	√	√		000C 000D 01B7 0001
MeganeIII/ScenicIII	Front camera	√	√	√	√			000C 000D 006A 0001
MeganeIII/ScenicIII	Radio	√	√	√	√	√	√	0001 000C 000D 001F 0055 006F 007F 00D7 0181 0194 0195 01F7 01FC 0236 0238 0329
MeganeIII/ScenicIII	Telematic ctrl unit	√	√	√	√	√	√	000C 000D 00D2 0001 0325 037D
MeganeIII/ScenicIII	Multimedia interface	√	√	√	√	√	√	0001 000D 00D8 0196 0214 00C6
MeganeIII/ScenicIII	Multimed. connection	√	√	√	√	√	√	000C 000D 0019 006A 0001
Modus	Engine System	√	√	√	√	√	√	0001 0002 0003 0004 0005 0006 0007 0008 0009 000A 000B 000C 000D 006D 00C4 00C5 00C7 00D0 00D9 00DA 00DB 00DC 00DD 00F3 00F7 00F9 00FA 010B 0186 0187 0189 018A 020D 0237 0256 0301 0302 0303 0304 0305 0320 032C 0369 0323
Modus	ABS	√	√	√	√	√	√	000C 000D 0014 0015 0016 0017 0019 0088 008B 0001 030A 030B 01C0
Modus	Instrument panel	√	√	√	√	√	√	000C 000D 0012 0048 0049 004B 004C 004D 004E 0050 0052 0053 0070 0071 0072 0074 0077 0079 007C 0089 008A 0149 0165 018B 018C 0001 0397
Modus	UCH	√	√	√	√		√	000C 000D 0010 0059 005A 005B 005C 005D 005E 005F 0060 0061 025F 0001 0307 030E
Modus	Airbag/pretensioners	√	√	√	√	√		000C 000D 0019 0022 0023 0024 0025 0026 0027 002A 002B 002C 002D 002E 002F 0030 0031 0032 0036 0037 0062 0063 0092 0093 0094 0095 0096 0097 0001 030C 0152
Modus	Air conditioning	√	√	√	√		√	000C 000D 0012 0013 0069 0001
Modus	Automatic gearbox	√	√	√	√	√	√	0004 000C 000D 0019 001A 001B 0081 0082 0153 0156 0157 01C8 01C9 01CA 0001
Modus	Variable PAS	√	√	√	√	√		000C 000D 001E 001F 0001 001C
Modus	UPC	√	√	√	√		√	0001 000D 0017
Modus	Tyres	√	√	√	√			000C 000D 0012 0001 030F 00F6 0310 0309 0311
Modus	Lighting	√	√	√	√	√	√	000C 000D 0012 008C 008D 008E 008F 0090 0091 0001
Modus	Hands-free kit	√	√	√	√		√	0001 000D 0019 006E 006F 0313 0314 030D
Modus	Parking assistance	√	√	√	√	√		000C 000D 0065 0066 0067 0001 0337

Meganeivsedan	Engine System	√	√	√	√	√	√	0001 0002 0004 0005 0006 0007 0008 0009 000C 006D 00C5 00D9 00DA 00DB 00DC 00DD 00DE 00DF 00F3 00F7 00F8 00F9 00FA 00FB 00FC 00FD 00FE 00FF 0100 0101 0102 0103 0104 0105 0106 0107 0108 0109 010A 010B 0114 0115 0116 0117
Meganeivsedan	ABS	√	√	√	√	√	√	000C 000D 001E 008B 00E9 00EA 00EB 00EC 00ED 00EF 00F0 00F1 00F2
Meganeivsedan	Instrument panel	√	√	√	√		√	000C 000D 004A 004C 004F 0074 007A 00E1 00E2
Meganeivsedan	UCH	√	√	√	√	√	√	0009 000C 0010 005C 00B5 00F6 0127 0128 0129 012A 012B 012C 012D 012E
Meganeivsedan	Airbag/pretensioners	√	√	√	√	√	√	000C 000D 0022 0023 0037
Meganeivsedan	Front radar	√	√	√	√	√		000C 000D
Meganeivsedan	Air conditioning	√	√	√	√		√	000C 000D 0069 00D1
Meganeivsedan	Automatic gearbox	√	√	√	√	√		000C 000D 0019 0153 0154 0155 0156 0157 0158 0159 015A 015B 015C 017C
Meganeivsedan	Parking brake	√	√	√	√	√		000C 000D 010D 010E
Meganeivsedan	Variable PAS	√	√	√	√	√		000C 000D
Meganeivsedan	UPC	√	√	√	√	√	√	000D 00E2 0105 0108 0118 011B 014D 014E
Meganeivsedan	Head up display							
Meganeivsedan	Parking prox can	√	√	√	√		√	000C 000D 0065 0067 0124 0125 0126
Meganeivsedan	Driver's seat	√	√	√	√		√	000C 000D 00E6 00E7 00E8
Meganeivsedan	Front camera	√	√	√	√			000C 000D 001C
Meganeivsedan	Radio	√	√	√	√		√	000C 000D 004C 006F 007A 00A8 00D2 00D6 00D7 00D8
Meganeivsedan	Telematic ctrl unit	√	√	√	√		√	000C 000D 00D2
Meganeivsedan	Left-hand door or passenger's seat	√	√	√	√		√	000C 000D 00E6 00E7 00E8
Meganeivsedan	Multimedia interface	√	√	√			√	000C 000D 006A 00D2
Meganeivsedan	Amplifier	√	√	√	√		√	0001 000D 00D3 00D4
New sm3/fluce/megane	Engine System	√	√	√	√	√	√	0001 0002 0003 0004 0009 000C 006D 00C5 00D0 00D9 00DA 00DB 00DC 00DD 00F3 00F5 00F7 00F8 00F9 00FA 00FB 00FC 00FD 00FE 00FF 0100 0101 0102 0103 0105 0107 0108 0109 010A 010B 010C 0114 0115 0116 0117 013C 013D 0186 0187 0189 018A 01E7 020D 020E 020F 0210 0211 0304 0305 032C 032F 0301 0302 0303 0323 032D 032E 0371 0362
New sm3/fluce/megane	ABS	√	√	√	√	√	√	000C 000D 0019 008B 00E9 00EA 00EB 00F0 0001 030A 0167
New sm3/fluce/megane	Instrument panel	√	√	√	√	√	√	000C 000D 004C 004E 004F 0052 0053 0074 0079 007A 00A4 00B6 00E1 01D4 0001 01F4 0374 0375 0376 0397
New sm3/fluce/megane	UCH	√	√	√	√	√	√	000C 00BE 019F 01A0 0001 00F6 0307 0308 025F 030E 036A 0363 0009
New sm3/fluce/megane	Airbag/pretensioners	√	√	√	√	√		000C 000D 0022 0023 0037 0001 030C
New sm3/fluce/megane	Air conditioning	√	√	√	√	√	√	000C 000D 00D1 00F4 0001 0329
New sm3/fluce/megane	Automatic gearbox	√	√	√	√	√	√	000C 000D 0019 001A 001B 0082 00EC 0153 0154 0155 0156 0158 0159 015A 015B 015C 017C 01C4 0001 0303 0301 0346 013E 0347 0350
New sm3/fluce/megane	Communications unit	√	√	√	√	√	√	000C 000D 0019 004C 006F 00D7 0001 036F 0325 0181



New sm3/fluence/megane	Parking brake	√	√	√	√	√	√	000C 000D 010D 010E 0001 018F
New sm3/fluence/megane	Blind spot detection	√	√	√	√	√	√	000C 000D 0001
New sm3/fluence/megane	Variable PAS	√	√	√	√	√	√	000C 000D 001E 0001
New sm3/fluence/megane	TRACKER	√	√	√	√			0001 01EE 0009
New sm3/fluence/megane	UPC	√	√	√	√	√	√	0001 000D 0118 011B 0122 0216 0217
New sm3/fluence/megane	SUNROOF CONTROL UNIT	√	√	√	√	√	√	000C 00E2 0184 0001 0009
New sm3/fluence/megane	Lighting	√	√	√	√	√	√	000C 000D 008C 0001
New sm3/fluence/megane	Parking prox can	√	√	√	√	√		000C 000D 0065 0067 0220 0221 0001 0337
New sm3/fluence/megane	Driver's door	√	√	√	√	√	√	000C 000D 00D1 0001
New sm3/fluence/megane	Radio	√	√	√	√	√	√	0001 000C 000D 001F 0055 006F 007F 00D7 0181 0194 0195 01F7 01FC 0329
New sm3/fluence/megane	Telematic ctrl unit	√	√	√	√	√	√	000C 000D 00D2 0001 0325 0361 037D
New sm3/fluence/megane	Multimedia interface	√	√	√	√		√	0001 000D 00D8 0196 0214 00C6
New sm3/fluence/megane	Amplifier	√	√	√	√	√	√	0001 000D 001F 00D3 0197
New sm3/fluence/megane	Multimed. connection	√	√	√	√	√	√	000C 000D 0019 006A 0001
New sm3/fluence/megane	BCB	√	√	√	√	√	√	000C 01F8 01F9 01FA 0001 0009 0303 0301
New sm3/fluence/megane	BMS	√	√	√	√	√		000C 0180 01D0 01D1 01FB 0001 0303 0301
New sm3/fluence/megane	EVC	√	√	√	√	√	√	000C 00DD 0179 017A 01D0 01E0 01E1 01E2 0001 0303 0301 032C 0009
New sm3/fluence/megane	PEB	√	√	√	√	√		000C 0001 0303 0301 0009
New sm3/fluence/megane	BMS safety	√	√	√	√	√		000C 017F 0001
Sandero	Engine System	√	√	√	√	√	√	0001 0002 0003 0005 0006 0007 0008 0009 000B 000C 000D 006D 00C4 00C5 00C7 00D0 00D9 00DA 00DB 00DC 00DD 00F3 00F7 00F9 00FA 010B 010C 017D 0186 0187 020D 0254 0255 0256 0301 0303 0304 0305 0302
Sandero	ABS	√	√	√	√	√	√	000C 000D 0019 008B 0001 030A 030B 0017
Sandero	UCH	√	√	√	√		√	000C 000D 00D5 0183 0001 0307 025F
Sandero	Airbag/pre-tensioners	√	√	√	√	√		000C 000D 0022 0023 0026 0027 002E 002F 0037 007D 0141 0142 0143 0144 0145 0146 0199 019A 019B 01FD 01FE 0001
Sandero	Automatic gearbox	√	√	√	√	√	√	000C 000D 0019 001A 001B 0082 0001
Sandero	GAS Injection	√	√	√	√	√	√	000C 000D
Sandero	Variable PAS	√	√	√	√	√		000C 000D 001F 0001 001C
Sandero	TRACKER	√	√	√	√			0001 01EE 0009
Sandero	Radio	√	√	√	√	√	√	0001 000C 000D 001F 005B 006F 00D7 01F7 0161 01C6
Scenic II	Engine System	√	√	√	√	√	√	0001 0002 0003 0004 0005 0006 0007 0008 0009 000A 000B 000C 006A 006B 006C 006D 00C4 00C5 00C7 0230 0237 0301 0302 0303 0304 0305 0312 0320 0323 032B 00CF
Scenic II	ABS	√	√	√	√	√	√	000C 000D 0014 0015 0016 0017 0019 0088 008B 0001 030A 030B 01C0
Scenic II	Instrument panel	√	√	√	√			000C 000D 0012 0048 0049 004A 004B 004C 004D 004E 004F 0050 0051 0052 0053 0070 0071 0072 0077 0149 0001 0397

Scenic II	UCH	√	√	√	√		√	000C 000D 000E 000F 0010 0011 0052 0059 005A 005B 005E 00B0 00B1 00B2 022E 0001 0306 00F6 0307 0308 025F 0309
Scenic II	Airbag/pretensioners	√	√	√	√	√		000C 000D 0012 0019 0022 0023 0024 0025 0026 0027 0028 0029 002A 002B 002C 002D 002E 002F 0030 0031 0032 0033 0034 0035 0036 0037 0038 0039 003A 003B 003C 003D 003E 003F 0040 0041 0042 0043 0044 0045 0046 0047 0001 030C
Scenic II	Air conditioning	√	√	√	√	√		000C 000D 0012 0013 0001
Scenic II	Automatic gearbox	√	√	√	√	√	√	000C 000D 0018 0019 001A 001B 0081 0082 0154 0001
Scenic II	Communications unit	√	√	√	√		√	0001 000D 0012 006A 007F 0080 0161
Scenic II	GAS Injection	√	√	√	√	√	√	000C 000D 0001
Scenic II	Parking brake	√	√	√	√		√	000C 000D 0055 0056 0057 0058 0001 030D
Scenic II	Variable PAS	√	√	√	√	√		000C 000D 001E 001F 0020 0021 0001 001C
Scenic II	UPC	√	√	√	√		√	0001 000D 0068 0017
Scenic II	Parking prox can	√	√	√	√	√		000C 000D 0019 0065 0066 0067 0220 0221 0001 0337
Scenic II	Discharge Lamp	√	√	√	√	√	√	000C 000D 0012 001C 0001
Scenic II	Parking assistance	√	√	√	√	√		000C 000D 0065 0066 0067 0001 0337
Scenic II	Radio	√	√	√	√	√		0001 000D 001F 004C 0236 0238 030D
Scenic II	Multimedia interface	√	√	√	√	√	√	0001 000D 0012 0055 006A
Scenic IV	Engine System	√	√	√	√	√	√	0001 0002 0004 0005 0006 0007 0008 0009 000C 006D 00C5 00D9 00DA 00DB 00DC 00DD 00F3 00F7 00F8 00F9 00FA 00FB 00FC 00FD 00FE 00FF 0100 0101 0102 0103 0104 0105 0106 0107 0108 0109 010A 010B 0114 0115 0116 0117 013C 013D 014C 032A 0301 0302 0303 0323 032B 0312 032C 032D 032E 032F 0324 033C 033D 033E 033F 0340 0341 0305 00E0 00C4
Scenic IV	ABS	√	√	√	√	√	√	000C 000D 001E 008B 00E9 00EA 00EB 00EC 00ED 00EF 00F0 00F1 00F2 0001 030A 0052 0168 0167
Scenic IV	Instrument panel	√	√	√	√		√	000C 000D 004A 004C 004F 0074 007A 00E1 00E2 0001 0326 0327 0398 0399
Scenic IV	UCH	√	√	√	√	√	√	0009 000C 0010 005C 00B5 00F6 0127 0128 0129 012A 012B 012C 012D 012E 0137 0324 0338 0339 01A0 0139 0012 033A
Scenic IV	Airbag/pretensioners	√	√	√	√	√	√	000C 000D 0022 0023 0037 0001 030C 0152
Scenic IV	Air conditioning	√	√	√	√		√	000C 000D 0069 00D1 0001 0324
Scenic IV	Automatic gearbox							
Scenic IV	Parking brake	√	√	√	√	√		000C 000D 010D 010E 0001 0055 0330
Scenic IV	Supervisor or DCDC	√	√	√	√	√	√	000C 0001 0320
Scenic IV	Variable PAS	√	√	√	√	√		000C 000D 0001
Scenic IV	UPC	√	√	√	√	√	√	000D 00E2 0105 0108 0118 011B 014D 014E 0215 0109 0305 0301
Scenic IV	Head up display	√	√	√			√	0009 000C 0001
Scenic IV	Parking prox can	√	√	√	√		√	000C 000D 0065 0067 0124 0125 0126 0001 0337
Scenic IV	Driver's seat	√	√	√	√		√	000C 000D 00E6 00E7 00E8 0001
Scenic IV	Front camera	√	√	√	√			0001 0331 034B 034C 000D 034D

Scenic IV	Radio	√	√	√	√		√	000C 000D 004C 006F 007A 00A8 00D2 00D6 00D7 00D8 01F7 0001 0181 0325 00E2
Scenic IV	Telematic ctrl unit	√	√	√	√		√	000C 000D 00D2 0001 0325 037D
Scenic IV	Left-hand door or passenger's seat	√	√	√	√		√	000C 000D 00E6 00E7 00E8 0001
Scenic IV	Right-hand door or collapsible seat	√	√	√	√		√	000C 000D 0001
Scenic IV	Multimedia interface	√	√	√			√	000C 000D 006A 00D2 0001
Scenic IV	Amplifier	√	√	√	√		√	0001 000D 00D3 00D4
Scenic IV	BMS	√	√	√	√	√	√	000C 0180 0001 0303 0301 01FB
Scenic IV	PEB	√	√	√	√			000C 0001 0009
Scenic IV	BMS safety	√	√	√		√		000C 017F 0001
Sm7-L47	Engine System	√	√	√	√	√	√	0001 006A 006D 00C7 018D 018E 0190 0191 0192 01A1 01A2 01A3 032B 024A 0345 0009
Sm7-L47	ABS	√	√	√	√	√	√	000C 000D 0019 008B 00E9 00EA 00EB 00ED 0001 030A
Sm7-L47	Instrument panel	√	√	√	√	√	√	000C 000D 004C 004E 004F 0052 0053 0074 0079 007A 00A4 00B6 00E1 0001 0397
Sm7-L47	UCH	√	√	√	√	√	√	000C 013A 0001 00F6 0307 0308 025F 0310 0363 0009 031F
Sm7-L47	Airbag/pre-tensioners	√	√	√	√	√		000C 000D 0022 0023 0037 0001 030C
Sm7-L47	Air conditioning	√	√	√	√	√	√	000C 000D 0069 00D1 0001
Sm7-L47	Automatic gearbox	√	√	√	√	√	√	000C 000D 0019 00EC 0111 0153 0154 0155 0156 0158 0159 015A 015B 015C 01C4 021A 0001 0303 0301 0346 013E 0347
Sm7-L47	Communications unit	√	√	√	√	√	√	000C 000D 0019 004C 0001 036F 0325 0181
Sm7-L47	Parking brake	√	√	√	√	√	√	000C 000D 0057 018F 0001 0364 0365 0331
Sm7-L47	Blind spot detection	√	√	√	√	√	√	000C 000D 0001
Sm7-L47	Variable PAS	√	√	√	√	√		000C 000D 0001
Sm7-L47	UPC	√	√	√	√	√	√	0001 000D 00E2 0118 011B
Sm7-L47	Lighting	√	√	√	√	√	√	000C 000D 008C 0001
Sm7-L47	Parking prox can	√	√	√	√	√		000C 000D 0065 0067 0220 0221 0001 0337
Sm7-L47	Driver's door	√	√	√	√	√	√	000C 000D 0001
Sm7-L47	Passenger's door	√	√	√	√	√	√	000C 000D 0001
Sm7-L47	Driver's seat	√	√	√	√	√		000C 000D 01B7 0001
Sm7-L47	Radio	√	√	√	√	√	√	0001 000C 000D 001F 006F 007F 00D7 0181 0194 0195 01F7 01FC
Sm7-L47	Left-hand door or passenger's seat	√			√	√		00D1 0331
Sm7-L47	Right-hand door or collapsible seat	√			√	√		00D1 0331
Sm7-L47	Multimedia interface	√	√	√	√	√	√	0001 000D 00D8 0196 00C6
Sm7-L47	Amplifier	√	√	√	√	√	√	0001 000D 001F 00D3 0197
Sm7-L47	Multimed. connection	√	√	√	√	√		000C 000D 0019 006A 0001
Talisman/sm6	Engine System	√	√	√	√	√	√	0001 0002 0004 0005 0006 0007 0008 0009 000C 006D 00C5 00D9 00DA 00DB 00DC 00DD 00DE 00DF 00F7 00F8 00F9 00FA 00FB 00FC 00FD 00FE 00FF 0100 0101 0102 0103 0104 0105 0106 0107 0108 0109 010A 010B 0114 0115 0116 0117 0150 0151 032A 0301 0302 0303 0323 032B 0312 032C 032D 032E 032F 024A 0345 034E 034F 01FF 0200

Talisman/sm6	ABS	√	√	√	√	√	√	000C 000D 001E 008B 00E9 00EA 00EB 00EC 00ED 00EF 00F0 00F1 00F2 0001 030A 0052 0168 0167
Talisman/sm6	Instrument panel	√	√	√	√		√	000C 000D 004A 004C 004F 0074 007A 00E1 00E2 0001 0326 0327 0398 0399
Talisman/sm6	UCH	√	√	√	√	√	√	0009 000C 0010 005C 00B5 00F6 0127 0128 0129 012A 012B 012C 012D 012E 0137 0324 0338 0339 01A0 0139 0012 033A
Talisman/sm6	Airbag/pretensioners	√	√	√	√	√	√	000C 000D 0022 0023 0037 0001 030C 0152
Talisman/sm6	Front radar	√	√	√	√	√		000C 000D 0001 0328
Talisman/sm6	Air conditioning	√	√	√	√		√	000C 000D 0069 00D1 0001 0324
Talisman/sm6	Automatic gearbox	√	√	√	√	√		000C 000D 0019 0153 0154 0155 0156 0157 0158 0159 015A 015B 015C 017C 0001 0303 0301 0346 013E 0347 0324 034A
Talisman/sm6	Parking brake	√	√	√	√	√		000C 000D 010D 010E 0001 0055 0330
Talisman/sm6	Variable PAS	√	√	√	√	√		000C 000D 0001
Talisman/sm6	UPC	√	√	√	√	√	√	000D 00E2 0105 0108 0118 011B 014D 014E 0215 0109 0305 0301
Talisman/sm6	Power back door	√	√	√	√			000C 014F 0001 0009
Talisman/sm6	Head up display	√	√	√			√	0009 000C 0001
Talisman/sm6	4 wheels steering	√	√	√	√	√	√	000D 00E3 00E4 00E5 0001
Talisman/sm6	Parking prox can	√	√	√	√	√	√	000C 000D 0065 0067 0124 0125 0126 0001 0337
Talisman/sm6	Piloted suspension	√	√	√	√	√		000C 000D 0001
Talisman/sm6	Driver's seat	√	√	√	√		√	000C 000D 00E6 00E7 00E8 0001
Talisman/sm6	Front camera	√	√	√	√			000C 000D 001C 0069 0001 0331
Talisman/sm6	Radio	√	√	√	√		√	000C 000D 004C 006F 007A 00A8 00D2 00D6 00D7 00D8 01F7 0001 0181 0325 00E2
Talisman/sm6	Telematic ctrl unit	√	√	√	√		√	000C 000D 00D2 0001 037D 0325
Talisman/sm6	Left-hand door or passenger's seat	√	√	√	√		√	000C 000D 00E6 00E7 00E8 0001
Talisman/sm6	Multimedia interface	√	√	√			√	000C 000D 006A 00D2 0001
Talisman/sm6	Amplifier	√	√	√	√		√	0001 000D 00D3 00D4
Thalia/symb.2	Engine System	√	√	√	√	√	√	0001 0002 0003 0005 0006 0007 0008 0009 000B 000C 000D 0052 006D 00C4 00C5 00CE 00D9 00DA 00DB 00DC 010C 017D 018D 01F5 022F 0254 0255 0257 0258 0259 0301 0303 0304
Thalia/symb.2	ABS	√	√	√	√	√	√	000C 000D 0019 008B 0001 030A 030B 0017
Thalia/symb.2	UCH	√	√	√	√		√	000C 000D 00D5 0183 0001 0307 025F
Thalia/symb.2	Airbag/pretensioners	√	√	√	√			000C 000D 0022 0023 0026 0027 002E 002F 0037 007D 0141 0142 0143 0144 0145 0146 0198 0199 019A 019B 0001 030C
Thalia/symb.2	Air conditioning	√	√	√	√		√	000C 0001
Thalia/symb.2	Automatic gearbox	√	√	√	√	√	√	000C 000D 0019 001A 001B 0082 0001 036C
Thalia/symb.2	Variable PAS	√	√	√	√	√		000C 000D 001F 0001
Thalia/symb.2	TRACKER	√	√	√	√			0001 01EE 0009
Thalia/symbol	Engine System	√	√	√	√		√	0001 0002 0004 0009 000A 000B 0052 00C4 00CE 00CF 018D 0257 0258 02A1 0304 0305
Thalia/symbol	ABS	√	√	√	√		√	0019 008B

Thalia/symbol	UCH	√	√	√	√		√	000E 0127 0183 0261 027E 027F 0280 0281 0282 0284 0285 0286 0287 0288 02BE 02BF 02C0 02C1 02C2 02C3 02C4 02C5 02C6 02C7 02C8 02C9 02CA 02CB
Thalia/symbol	Airbag/pretensioners	√	√	√	√		√	0019 001F 002E 0037 0141 0142 0143 0144 0145 0146 0263 0264
Thalia/symbol	Air conditioning	√	√	√	√		√	0019 02E6 02E7 02E8 02E9 02EA 02EB 02EC 02ED 02EE 02EF 02F0 02F1 02F2 02F3 02F4 02F5 02F6 02F7
Thalia/symbol	Automatic gearbox	√	√	√	√		√	0018 001A 001B 001F 004E 0082 0099 009A 009B 009C 0275 0276 0277 0278 0279 027A 027B 027C
Trafic II	Engine System	√	√	√	√		√	006B 006C 00C4 00CE 00F7 0257 0298 0299 029A 029B 029C 029D 029E 029F 02A0
Trafic II	ABS	√	√	√	√			
Trafic II	UCH	√	√	√	√		√	000E
Trafic II	Airbag/pretensioners	√	√	√	√			0037
Trafic II	Automatic gearbox	√	√	√	√		√	0004 0081 0153 01C8
Trafic II	ADAPTATION UNIT	√	√	√	√			
Trafic II	Parking prox can							
Trafic II	Parking assistance							
Trafic II	HEATER	√	√	√	√		√	
Trafic III	Engine System	√	√	√	√	√	√	0005 0006 0007 0008 000C 006D 00C5 00D9 00DC 00DD 00DE 00F7 00F8 00F9 00FA 00FB 00FC 00FD 00FE 00FF 0100 0101 0102 0103 0106 010B 0114 0115 0116 0117 013C 0004 0001 0301 0302 0303 0323 032B 0312 032C 032D 032E 0362 0009
Trafic III	ABS	√	√	√	√	√	√	000C 000D 001E 008B 00E9 00EA 00EB 00EC 00ED 00EF 00F0 00F1 00F2 0001 030A 0052 0168 0167
Trafic III	Instrument panel	√	√	√	√	√	√	000C 000D 004C 004F 0074 0079 00E2 0001 0327 0328 0398 0399
Trafic III	UCH	√	√	√	√	√	√	000C 0010 005A 012B 0219 0339 0001 00F6 0009
Trafic III	Airbag/pretensioners	√	√	√	√	√	√	000C 000D 0022 0023 0342 0343 0344 0001 030C 0152 0331 0330
Trafic III	Air conditioning	√	√	√	√		√	000C 000D 0069 00D1 0001 0324
Trafic III	Communications unit	√	√	√	√	√	√	000C 000D 004C 006F 007A 00D7 006A 0001 036F 0325 0378
Trafic III	Variable PAS	√	√	√	√			000C 000D 0218 0001
Trafic III	UPC	√	√	√	√	√	√	000D 00E2 0105 0118 011B 0123 0169 0324 0333 0303 0301 032F 00D7 0334 0335 0336
Trafic III	ADAPTATION UNIT	√	√	√				000C 000D 0001 0161
Trafic III	Parking prox can	√	√	√	√	√	√	000C 000D 0065 0001 0337
Trafic III	HEATER	√	√	√	√			000C 00CC 00CD 0001
Trafic III	Radio	√	√	√	√	√	√	0001 000C 000D 001F 006F 00D7 01F7 0181 037C 0161
Trafic III	Telematic ctrl unit	√	√	√	√		√	000C 000D 00D2 0001 037D 0325
Trafic III	UREA DOSING CONTROL MODULE	√	√	√	√	√	√	000C 000D 016B 016C 016D 016E 016F 0170 0171 0172 0173 0174 0175 0176 0177 0001 0348 0301 0303
Trafic III	Multimedia interface	√	√	√	√		√	0001 000D 00D8 0196 0214 0324
Trafic III	HANDS-FREE MODULE	√	√	√	√	√	√	000C 000D 00F5 0128 012F 0130 0131 0132 0133 0134 0135 0136 0137 0138 0139 013A 013B 0001 0308 0009

TraficIp2/3	Engine System	√	√	√	√	√	√	0001 0002 0004 0009 000A 000B 000C 006A 006B 006C 006D 00C5 00C7 00CE 00CF 00D9 00DC 00DD 00F7 00F9 00FA 00FB 00FC 010B 0185 0186 0187 0188 01C7 0212 0301 0302 0303 032B 0312 00C4 032C 0369 0323 032D 032E 0362 038F
TraficIp2/3	ABS	√	√	√	√	√	√	000C 000D 0016 0017 0019 0088 008B 00ED 00F2 01C0 0001 030A 030B 0389
TraficIp2/3	Instrument panel	√	√	√	√	√	√	000C 000D 004B 004C 004E 0052 0053 0073 0077 0079 007D 00AE 00E1 00E2 0149 0163 0165 01CC 01CD 01CE 0001 0366 0367 0372 0397
TraficIp2/3	UCH	√	√	√	√		√	000C 000D 004D 005A 005D 00B5 01A7 0239 024C 024D 0001 0307 038A 025F 038B 038C 0009
TraficIp2/3	Airbag/pretensioners	√	√	√	√	√		000C 000D 0019 0022 0023 0037 0001 030C 0152 0317 0370
TraficIp2/3	Air conditioning	√	√	√	√		√	000C 000D 0012 01CB 0001
TraficIp2/3	Automatic gearbox	√	√	√	√		√	0004 000C 000D 0019 0081 0153 0156 0157 01C8 01C9 01CA 0235 0001
TraficIp2/3	Communications unit	√	√	√	√		√	0001 000C 000D 0019 004C 006A 0181 0182 01CF 0325 0161
TraficIp2/3	ADAPTATION UNIT	√	√	√	√	√		00E3 0001
TraficIp2/3	Parking assistance	√	√	√	√	√		000C 000D 0065 0066 0067 0001
TraficIp2/3	HEATER	√	√	√	√	√	√	000C 00CC 00CD 0001
TraficIp2/3	Radio	√	√	√	√		√	0001 000D 001F 01C6 0161
TraficIp2/3	Multimedia interface	√	√	√	√		√	0001 000D 0055 019C 019D 01C1 0368
TraficIp2/3	Multimed. connection	√	√	√	√	√		000C 000D 0019 0181 0001
Twingo II	Engine System	√	√	√	√	√	√	0001 0002 0003 0004 0005 0006 0007 0008 0009 000A 000B 000C 006D 00C5 00C7 00D0 00D9 00DA 00DB 00DC 00DD 00F3 00F7 00F9 00FA 010B 0186 0187 0189 018A 020D 0256 0301 0303 0304 0305 032C 0369 0302
Twingo II	ABS	√	√	√	√	√	√	000C 000D 0014 0015 0017 0019 0052 008B 00ED 01B0 0001 030A 030B
Twingo II	Instrument panel	√	√	√	√		√	000C 000D 004B 004C 004D 004E 0052 0053 007D 00AE 00AF 0149 0163 0164 01E5 01E6 0001 0372 0397
Twingo II	UCH	√	√	√	√		√	000C 000D 000F 0010 0011 005A 00B0 00B1 00B5 00B9 00C3 00C6 0129 01A5 01A6 01A7 01A8 01A9 01AA 01AB 01AC 0001
Twingo II	Airbag/pretensioners	√	√	√	√	√		000C 000D 0022 0023 0024 0025 0026 0027 002E 002F 0030 0031 0037 0142 0143 0145 0146 019A 019B 0001 030C
Twingo II	Air conditioning	√	√	√	√		√	000C 000D 0012 0013 0069 0001
Twingo II	Automatic gearbox	√	√	√	√	√	√	0004 000D 0019 0081 0153 0156 0157 01C8 01C9
Twingo II	Variable PAS	√	√	√	√	√		000C 01A4 0001
Twingo II	REV COUNTER/SYMBOL	√	√	√	√		√	000D 004E 0165 01B3 01E3 01E4
Twingo II	Parking assistance	√	√	√	√	√		000C 000D 0065 0066 0067 0001 0337
Twingo II	Radio	√	√	√	√		√	0001 000C 000D 001F 007F 0181 01F7 0161 01C6
Twingo II	Multimedia interface	√	√	√	√		√	0001 000D 0012 0055 019C 019D 0368 0161
Twingo II	Multimed. connection	√	√	√	√	√		000C 000D 0019 0181 0001

Twingo III	Engine System	√	√	√	√	√	√	0001 006D 00C5 00D9 00DA 00DB 00DC 00DD 00DE 00DF 00E0 0301 0303 0009
Twingo III	ABS	√	√	√	√	√	√	000C 000D 00E9 00EA 00EB 00EC 00ED 00EE 00F0 010F 0110 0001 030A 0167
Twingo III	Instrument panel	√	√	√	√		√	000C 000D 004C 004F 0074 0079 00E2 0001 0327 0326 0398 0300
Twingo III	UCH	√	√	√	√	√	√	000C 0010 005A 005D 0129 012B 0001 00F6 0009
Twingo III	Airbag/pretensioners	√	√	√	√	√	√	000C 000D 0022 0023 0342 0343 0344 0001 030C 0132 0331 0300
Twingo III	Front radar	√	√	√	√			000C 000D 0001 0328 0209
Twingo III	Air conditioning	√	√	√	√		√	000C 000D 0069 00D1 0001
Twingo III	Automatic gearbox	√	√	√	√	√	√	000C 000D 013E 0133 0134 0136 0138 013A 013B 013C 017E 0001
Twingo III	Communications unit	√	√	√	√	√	√	000C 000D 004C 006F 007A 00D7 006A 0001 036F 0325 0378
Twingo III	Variable PAS	√	√	√	√	√	√	000C 000D 0001 037E
Twingo III	UPC	√	√	√	√	√	√	000D 00E2 0105 0118 011B 0123 0169 0324 0333 0303 0301 032F 00D7 0334 0335 0336
Twingo III	Gearbox elec control	√	√	√	√			000C 000D 0001
Twingo III	Front camera	√	√	√	√			000C 000D 006A 0001
Twingo III	Radio	√	√	√	√	√	√	0001 000C 000D 006F 00D7 01F7 0181 0161
Twingo III	Telematic ctrl unit	√	√	√	√			000C 000D 00D2 0001 037D 0325
Twingo III	Multimedia interface	√	√	√	√		√	0001 000D 00D8 0196 0214 0324
Twingo ph2	Engine System	√	√	√	√		√	0001 0004 0009 000A 000B 006B 006C 00C4 0291 0292 0293 0294 02DF 02E0 0304 0305
Twingo ph2	ABS	√	√	√	√		√	0019
Twingo ph2	UCH	√	√	√	√		√	000E 0183 0262 027E 027F 0280 0281 0282 0284 0285 0286 0287 0288 02BE 02BF 02C0 02C1
Twingo ph2	Airbag/pretensioners	√	√	√	√		√	0019 001F 0022 0023 0265 0266 0267 0268 0269
Twingo ph2	Automatic gearbox	√	√	√	√		√	0004 0052 0081 0153 01C8
Twingo ph2	GAS Injection	√	√	√	√		√	
Twingo ph2	Variable PAS							
X09	Instrument panel	√	√	√	√			000C 000D 0012 0019 004C 0072 020A 020B 020C
X09	UCH	√	√	√	√		√	000C 000D 0183
X09	Airbag/pretensioners	√	√	√	√	√		000C 000D 0022 0023 002E 0037 0141 0142 0143 0144 01FD 01FF
X09	ADAPTATION UNIT	√	√	√	√			000C 000D 001F
X09	BCB	√	√	√	√			
X09	BMS	√	√	√	√			
Velsatis	Engine System	√	√	√	√	√	√	0002 0004 0009 000A 000B 000C 000D 006B 006C 006D 00C4 00C7 00CE 00CF 00D0 00D9 0001 0304 0305 0322 0301 0302
Velsatis	ABS	√	√	√	√	√	√	000C 000D 0017 0019 008B 0098 0321 0052 0001 030A 00ED 00F1 0316
Velsatis	Instrument panel	√	√	√	√		√	000C 000D 0012 0048 0049 004B 004C 004D 004E 0050 0051 0052 0053 0064 0070 0071 0072 0073 0074 0075 0076 0077 0079 007A 007B 007C 007D 007E 009D 009E 009F 00A0 00A1 00A2 00A3 00A4 00A6 021B 021C 021D 021E 0001 0315 0397

Velsatis	UCH	√	√	√	√	√	√	000C 000D 0010 0011 004D 0052 005A 005B 007C 0086 00B4 00B5 00B6 00B8 00BA 00BB 00BF 00C0 01A7 01D2 021F 0225 0226 0227 0228 0229 022A 022B 022C 022D 007B 0001 0307 031B 0385 0386 031D 0387
Velsatis	Airbag/pretensioners	√	√	√	√	√		000C 000D 0019 0022 0023 0037 0001 030C 0152 0317 0318
Velsatis	Front radar	√	√	√	√	√		000C 000D 0019 00C8 00C9 00CA 00CB 0001
Velsatis	Air conditioning	√	√	√	√	√	√	000C 000D 0012 0083 0084 0085 0086 0087 0001
Velsatis	Automatic gearbox	√	√	√	√	√	√	000D 0081 0082 0319
Velsatis	Parking brake	√	√	√	√	√	√	000C 000D 0055 0056 0057 0058 0001 030D
Velsatis	Tyres	√	√	√	√	√	√	000C 0012 00A5 0001 030F 00F6 0309 0311
Velsatis	Hands-free kit	√	√	√	√	√	√	0001 000D 0019 006E 006F 0313 0314 030D
Velsatis	Discharge Lamp	√	√	√	√	√	√	000C 000D 0012 001C 0001
Velsatis	Parking assistance	√	√	√	√	√	√	000C 000D 0065 0066 0067 0001
Velsatis	HEATER	√	√	√	√	√	√	000C 00CC 00CD 0001
Velsatis ph2	Engine System	√	√	√	√	√	√	0001 0002 0004 0009 000A 000B 000C 000D 006A 006B 006C 006D 00C4 00C5 00C7 00CE 00CF 00D0 00D9 022F 0230 0304 0305 0322 0301 0302 0303 0323 0312 032B
Velsatis ph2	ABS	√	√	√	√	√	√	000C 000D 0014 0015 0017 0019 0052 008B 0098 00E9 00EA 00EB 0321 0001 030A 00ED 00F1 0316 0384 0352
Velsatis ph2	Instrument panel	√	√	√	√	√	√	000C 000D 0012 0048 0049 004B 004C 004D 004E 0050 0051 0052 0053 0064 0070 0071 0072 0073 0074 0075 0076 0077 0079 007A 007B 007C 007D 007E 021B 021C 021D 021E 0315
Velsatis ph2	UCH	√	√	√	√	√	√	000C 000D 0010 0011 0012 0052 005A 005B 005D 0061 007C 0086 00B3 00B4 00B5 00B6 00B7 00B8 00B9 00BA 00BB 00BC 00BD 00BE 00BF 00C0 00C2 021F 0231 0232 007B 0001 00F6 0307 030F 031B 031C 031D 031E 0309 031F
Velsatis ph2	Airbag/pretensioners	√	√	√	√	√		000C 000D 0019 0022 0023 0037 0001 030C 0152 0317
Velsatis ph2	Air conditioning	√	√	√	√	√	√	000C 000D 0012 0083 0084 0085 0086 0087 0001
Velsatis ph2	Automatic gearbox	√	√	√	√	√	√	000D 0019 0081 0082 0154 0233 0319
Velsatis ph2	Communications unit	√	√	√	√	√	√	0001 000D 0012 006A 007F 0080
Velsatis ph2	Parking brake	√	√	√	√	√	√	000C 000D 0055 0056 0057 0058 0001 030D
Velsatis ph2	Lighting	√	√	√	√	√	√	000C 000D 0012 008C 008D 008E 008F 0090 0001
Velsatis ph2	Parking prox can	√	√	√	√	√		000C 000D 0019 0065 0066 0067 0220 0221 0001 0337
Velsatis ph2	Hands-free kit	√	√	√	√	√	√	0001 000D 0019 006E 006F 0313 0314 030D
Velsatis ph2	Parking assistance	√	√	√	√	√	√	000C 000D 0065 0066 0067 0001 0337
Velsatis ph2	HEATER	√	√	√	√	√	√	000C 00CC 00CD 0001
Velsatis ph2	Radio	√	√	√	√	√		
Wind	Engine System	√	√	√	√	√	√	0001 0004 000A 000B 00C5 0301 0303 0304 0305 0009
Wind	ABS	√	√	√	√	√	√	000C 000D 0014 0015 0017 0019 0052 008B 00ED 01B0 0001 030A 030B
Wind	Instrument panel	√	√	√	√	√	√	000C 000D 004C 004E 0053 0073 0074 0079 007C 00E2 0162 0166 0001 0372 0397



Wind	UCH	√	√	√	√		√	000C 000D 000F 0010 0011 005A 00B0 00B1 00B5 00B9 00C6 0129 01A5 01A6 01A7 01A8 01A9 01AA 01AB 01AC 01AD 0001
Wind	Airbag/pretensioners	√	√	√	√	√		000C 000D 0022 0023 0026 0027 002E 002F 0037 0142 0143 019A 019B 01AE 01AF 0001 030C
Wind	Air conditioning	√	√	√	√		√	000C 000D 0012 0013 0069 0001
Wind	Variable PAS	√	√	√	√	√		000C 01A4 0001
Wind	SUNROOF CONTROL UNIT	√	√	√	√	√		000C 0001 0009
Wind	Radio	√	√	√	√		√	0001 000C 000D 001F 007F 0181 01F7 0161
Wind	Multimedia interface	√	√	√	√		√	0001 000D 0055 019C 019D
Wind	Multimed. connection	√	√	√	√	√		000C 000D 0019 0181 0001
XBB	Engine System	√	√	√	√		√	
XBB	ABS	√	√	√	√		√	
XBB	Instrument panel	√	√	√	√		√	
XBB	UCH	√	√	√	√		√	
XBB	Airbag/pretensioners	√	√	√	√	√	√	000C 000D 0022 0023
XBB	Variable PAS	√	√	√	√	√		000C 000D
XBB	Radio	√	√	√	√		√	000C 000D 001F 006F 00D7
XBB	Multimedia interface	√	√	√	√		√	
ZOE	ABS	√	√	√	√	√	√	000C 000D 0019 008B 00E9 00EA 00EB 00EC 00ED 00EE 0001 030A 0167
ZOE	Instrument panel	√	√	√	√	√	√	000C 000D 004A 004C 0053 007A 00E1 0001 0376
ZOE	UCH	√	√	√	√	√	√	000C 01A0 0001 00F6 0307 0308 025F 0331 036A 0009
ZOE	Airbag/pretensioners	√	√	√	√	√	√	000C 000D 0022 0023 0001 030C 0152 0342
ZOE	Air conditioning	√	√	√	√	√	√	000C 000D 00D1 0001
ZOE	Communications unit	√	√	√	√	√	√	000C 000D 004C 006F 007A 00D7 006A 0001 036F 0325 0378
ZOE	Variable PAS	√	√	√	√	√	√	000C 000D 001E 0001
ZOE	UPC	√	√	√	√	√	√	000D 0118 011A 011B 011C 011D 011E 011F 0120 0121
ZOE	ADAPTATION UNIT	√	√	√	√			000C 000D 001F 0001
ZOE	Parking prox can	√	√	√	√	√	√	000C 000D 0065 0001 0337
ZOE	Radio	√	√	√	√	√	√	0001 000C 000D 001F 006F 00D7 01F7 01FC 0181
ZOE	Telematic ctrl unit	√	√	√	√	√	√	000C 000D 00D2 0001 0325 037D
ZOE	UNCOUPLED PEDAL	√	√	√	√	√	√	000C 000D 001F 00EC 0204 0205 0206 0207 0208 0209 0001
ZOE	BCB	√	√	√	√	√	√	000C 01F8 01F9 01FA 0001 0303 0301 0009
ZOE	BMS	√	√	√	√	√		000C 0180 01D0 01D1 01FB 0001 0303 0301
ZOE	EVC	√	√	√	√	√	√	000C 00DD 0179 017A 01E0 0001 0303 0301 0331 032C 0009
ZOE	PEB	√	√	√	√	√		000C 017B 0001 0303 0301 0009
ZOE	BMS safety	√	√	√				000C 0001

## Special Functions List

No.	Functions Name
SP0001	FAULT MEMORY
SP0002	EGR ADAPTIVES
SP0003	PRESSURE REGULATION ADAPTIVES
SP0004	PROGRAMMED VALUES
SP0005	CYLINDER NO. 1 INJECTOR CODE
SP0006	CYLINDER NO. 2 INJECTOR CODE
SP0007	CYLINDER NO. 3 INJECTOR CODE
SP0008	CYLINDER NO. 4 INJECTOR CODE
SP0009	WRITE V.I.N.
SP000A	UNLOCK INJECTOR CONTROL
SP000B	LOCK INJECTOR CONTROL
SP000C	FAULT MEMORY
SP000D	WRITE VIN
SP000E	AUTOMATIC RELOCKING
SP000F	FRONT FOG LIGHTS
SP0010	HAZARD WARNING LIGHTS ILLUMINATION BY ABS
SP0011	SEE-ME-HOME LIGHTING
SP0012	VEHICLE TYPE
SP0013	HEATING RESISTOR TYPE
SP0014	PREVENTION OF STOP LIGHT AUTO ILLUMINATION
SP0015	AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
SP0016	ESP AUTOMATIC RECONNECTION THRESHOLD
SP0017	VEHICLE PARAMETERS
SP0018	CONVERTER LOCK UP ADAPTIVE
SP0019	WRITE DATE OF LAST AFTER SALES OPERATION
SP001A	NOTE OIL WEAR COUNTER
SP001B	WRITE TRANSMISSION OIL CHANGE DATE
SP001C	COMPUTER TO CALIBRATE
SP001D	COMPUTER ADDRESS

SP001E	STEERING WHEEL ANGLE SENSOR PROGRAMMING
SP001F	WRITE DATE OF AFTER SALES OPERATION
SP0020	PULLING CORRECTION PROGRAM
SP0021	PULLING CORRECTION
SP0022	LOCK COMPUTER
SP0023	UNLOCK COMPUTER
SP0024	CURTAIN SIDE AIR BAG, DRIVER'S SIDE
SP0025	CURTAIN SIDE AIR BAG, PASSENGER SIDE
SP0026	FRONT THORAX SIDE AIR BAG, DRIVER SIDE
SP0027	FRONT THORAX SIDE AIR BAG, PASSENGER SIDE
SP0028	REAR THORAX SIDE AIR BAG, DRIVER SIDE
SP0029	REAR THORAX SIDE AIR BAG, PASSENGER SIDE
SP002A	PASSENGER FRONT AIR BAG CIRCUIT 2
SP002B	DRIVER FRONT AIR BAG CIRCUIT 1
SP002C	DRIVER FRONT AIR BAG CIRCUIT 2
SP002D	PASSENGER FRONT AIR BAG CIRCUIT 1
SP002E	PASSENGER AIR BAG LOCKING MODE
SP002F	DRIVER'S SEAT BUCKLE SENSOR
SP0030	PASSENGER'S SEAT BUCKLE SENSOR
SP0031	PASSENGER PRESENCE DETECTION SENSOR
SP0032	REAR INERTIA REELS
SP0033	PASSENGER'S LAP STRAP/SEAT AIRBAG
SP0034	DRIVER'S LAP STRAP/SEAT AIRBAG
SP0035	FRONT BUCKLE PRETENSIMETERS
SP0036	DRIVER'S SEAT POSITION SENSOR
SP0037	SIDE ON WHICH STEERING WHEEL FITTED
SP0038	PASSENGER SIDE REAR STRAP SENSOR
SP0039	DRIVER'S SIDE REAR STRAP SENSOR
SP003A	DRIVER' SIDE REAR FRONTAL AIRBAG
SP003B	PASSENGER SIDE REAR FRONTAL AIRBAG
SP003C	B/C WITHOUT SIDE AIRBAGS
SP003D	B/C WITH FRONT THORAX + HEAD AIRBAGS

SP003E	B/C WITH FR/RR THORAX + HEAD AIRBAGS
SP003F	G/S WITH HEAD AIRBAGS
SP0040	G/S WITHOUT HEAD AIRBAG
SP0041	J WITHOUT SIDE AIRBAGS
SP0042	J WITH SIDE AB W/O REAR CHEST AB
SP0043	E WITH SIDE AIRBAGS
SP0044	E WITHOUT SIDE AIRBAGS
SP0045	K/L WITHOUT SIDE AIRBAGS
SP0046	K/L WITH F CHEST + CURT AIRBAGS
SP0047	K/L WITH F/R CHEST + CURT AIRBAGS
SP0048	Oil change interval (in kilometers)
SP0049	OIL CHANGE INTERVAL IN MONTHS
SP004A	LANGUAGE CONFIGURATION
SP004B	FUEL TYPE
SP004C	DISTANCE UNITS
SP004D	OVERSPEED FUNCTION - ARABIA
SP004E	TRAJECTORY CONTROL
SP004F	CONSUMPTION MEASUREMENT UNITS
SP0050	TYRE PRESSURE MONITORING
SP0051	AUTOMATIC HANDBRAKE
SP0052	GEARBOX TYPE
SP0053	CRUISE CONTROL/SPEED LIMITER
SP0054	ROLL BARS
SP0055	VEHICLE CONFIGURATION
SP0056	SLOPE INITIALISATION
SP0057	SAVE CLUTCH PEDAL PROGRAMMING
SP0058	WRITE CLUTCH PEDAL PROGRAMMING
SP0059	NEW VEHICLE STORAGE MODE DEACTIVATION
SP005A	DEADLOCKING
SP005B	DRIVING TYPE
SP005C	WINDSCREEN TYPE
SP005D	SELECTIVE OPENING OF DOORS

SP005E	CHILDPROOF LOCK
SP005F	3-BUTTON KEY
SP0060	TAILGATE FLAP
SP0061	HEADLAMP WASHERS
SP0062	DRIVER'S LATERAL SENSOR
SP0063	Passenger's side sensor
SP0064	RESERVE CAPACITY
SP0065	BUZZER VOLUME
SP0066	VEHICLE IDENTIFICATION
SP0067	TONE ADJUSTMENT
SP0068	ALTERNATOR TYPE
SP0069	GEOGRAPHICAL ZONE
SP006A	ECU MEMORY
SP006B	DECREMENT IDLE SPEED
SP006C	INCREMENT OF IDLE SPEED
SP006D	FUEL SUPPLY PREVENTION
SP006E	AUDIO LINKS TEST
SP006F	LANGUAGE
SP0070	Maximum oil change mileage: current value (in kilometers)
SP0071	OIL CHANGE RANGE:CURRENT VALUE IN MONTHS
SP0072	UPDATE ODOMETER
SP0073	FUEL GAUGE CALIBRATION
SP0074	ADAC DISPLAY TYPE
SP0075	TANK CAPACITY
SP0076	UCH
SP0077	PARTICLE FILTER
SP0078	GAS RESERV. CAPAC.
SP0079	LANGUAGE VERSION.
SP007A	TYRE PRESSURE UNITS
SP007B	VOICE SYNTHESISER
SP007C	LIGHTS AUTOMATIC ILLUMINATION
SP007D	SEAT BELT REMINDER BUZZER

SP007E	CRUISE CONTR./SP. LIMIT. SPEED DIFF.
SP007F	CUSTOMER SETTINGS AND DETAILS
SP0080	NETHERLANDS LEGISLATION
SP0081	FAULT/S MEMORISED
SP0082	AUTOADAPTIVE
SP0083	HEATED WINDSCREEN
SP0084	COMPRESSOR TYPE
SP0085	DRIVE RATIO
SP0086	TYPE OF POWER STEERING
SP0087	EVAPORATOR TEMPERATURE SENSOR
SP0088	ESP SENSOR PROGRAMMING
SP0089	FUEL SENDER CALIBRATION (DOI).
SP008A	FUEL SENDER CALIBRATION (EUROPE)
SP008B	SPEEDO INDEX
SP008C	SYSTEM INITIALISATION
SP008D	DYNAMIC CORRECTION
SP008E	AUTOMATIC FOLD-DOWN HEADLIGHTS
SP008F	DIPPED HEADLIGHTS RAISE
SP0090	SIGNATURE
SP0091	CORNERING LAMP
SP0092	FRONT SEAT BELT RETRACTORS
SP0093	WITH FR CHEST AIRBAGS+HEAD-LEVEL AIRBAGS
SP0094	W FR CHEST AIRBAGS W/OUT HEAD-LVL AIRBAGS
SP0095	WITHOUT SIDE AIRBAGS
SP0096	DRIVER LAP STRAP PRETENSIONER
SP0097	PASSENGER LAP STRAP PRETENSIONER
SP0098	ABS/ESP CALIBRATION
SP0099	OBD MEMORY
SP009A	CHECK MOTOR TORQUE BY ABS
SP009B	SELECTOR LEVER LOCKING
SP009C	AIR CONDITIONING WITH WIRE CONNECTION
SP009D	ADAPTIVE CRUISE CONTROL

SP009E	P9X AT
SP009F	P9X MANUAL
SP00A0	V4Y AUTO BOX
SP00A1	V4Y MANUAL
SP00A2	OTHER AT
SP00A3	OTHER MANUAL
SP00A4	DISTANCE BEFORE NEXT OIL CHANGE
SP00A5	CHANGE IN TRIGGERING LIMIT
SP00A6	ENGINE/GEARBOX TYPE
SP00A7	INCREASE FUEL WARNING THRESHOLD
SP00A8	TEMPERATURE UNITS
SP00A9	HANDS FREE
SP00AA	NAVIGATION SYSTEM
SP00AB	VEHICLE SPEED SIGNAL TRANSMITTER
SP00AC	BODYWORK TYPE
SP00AD	CARD/KEY
SP00AE	CLOCK
SP00AF	RHEOSTAT PRESENCE
SP00B0	ENGINE TYPE
SP00B1	EXTERNAL TEMPERATURE SENSOR
SP00B2	REAR SCREEN WIPER
SP00B3	FOLLOWING TYRE CHANGE
SP00B4	HANDS-FREE FUNCTION
SP00B5	DAY RUNNING LIGHTS
SP00B6	TYRE PRESSURE MONITOR FUNCTION
SP00B7	DISCHARGE LAMP
SP00B8	ELECTRIC CHILD SAFETY
SP00B9	RAIN/LIGHT SENSOR
SP00BA	AUTO LOCKING WARNING SOUND
SP00BB	MEMORISING DRIVER'S SEAT POSITION
SP00BC	SUNROOF
SP00BD	HANDS-FREE START-UP

SP00BE	LIGHT SENSOR SENSITIVITY
SP00BF	HANDS FREE LOCKING
SP00C0	AUTOMATIC CLOSING OF WINDOWS (BY CARD)
SP00C1	VEHICLE FAMILY
SP00C2	INHIBITION OF SELECTIVE DOOR OPENING
SP00C3	ONE-TOUCH ELECTRIC WINDOW(S) / SUNROOF
SP00C4	PROGRAMMING REINITIALISATION
SP00C5	INTERVAL OF OIL CHANGE (OCS) OXIDATION
SP00C6	TEMPERATURE DISPLAY
SP00C7	STOP FUEL SUPPLY PREVENTION
SP00C8	ERASE STORED MISALIGNMENT
SP00C9	STEERING ANGLE OFFSET
SP00CA	KM
SP00CB	MILES
SP00CC	ERASE OVERHEATING COUNTER
SP00CD	ERASE INCORRECT CRANKING COUNTER
SP00CE	AIR CONDITIONING
SP00CF	THERMOPLUNGERS
SP00D0	AIR PATH PROGRAMMING
SP00D1	COMPUTER REINITIALISATION
SP00D2	COMPUTER RESET
SP00D3	AMPLIFIER RESET
SP00D4	NOISE-REDUCING MICROPHONE
SP00D5	SDO
SP00D6	TOUCH SCREEN
SP00D7	COUNTRY MODEL
SP00D8	TIME FORMAT
SP00D9	ENGINE ADAPTIVES
SP00DA	PROGRAMMING THROTTLE LIMITS
SP00DB	RICHNESS REGULATION PROGRAMMING
SP00DC	FLYWHEEL TARGET PROGRAMMING
SP00DD	CRUISE CONTROL/SPEED LIMITER PROGRAMMING



SP00DE	TURBOCHARGER PROGRAMMING
SP00DF	UPSTREAM OXYGEN SENSOR
SP00E0	VACUUM PUMP OPERATION REQUEST
SP00E1	OVERSPEED ALARM
SP00E2	COMPUTER INITIALISATION
SP00E3	FAULT MEMORY
SP00E4	INHIBITION OF 4-WHEEL DRIVE FUNCTION
SP00E5	REINSTATEMENT OF 4-WHEEL DRIVE FUNCTION
SP00E6	FRONT SLIDE LEARNING
SP00E7	REAR SLIDE LEARNING
SP00E8	LUMBAR LEARNING
SP00E9	STEERING WHEEL ANGLE OFFSET SENSOR
SP00EA	TRANSVERSE ACCELERATION OFFSET SENSOR
SP00EB	BRAKE PRESSURE OFFSET SENSOR
SP00EC	RESET
SP00ED	STEERING WHEEL ANGLE SENSOR
SP00EE	ACCELERATION SENSOR
SP00EF	TRAILER STABILITY FUNCTION
SP00F0	LONGITUDINAL ACCELERATION SENSOR OFFSET
SP00F1	TRANSVERSE ACCELERATION SENSOR
SP00F2	LONGITUDINAL ACCELERATION SENSOR
SP00F3	CAMSHAFT SENSOR PROGRAMMING
SP00F4	PARAMETRE PRIVE 1
SP00F5	CONFIGURATION PRIVEE 1
SP00F6	PROGRAMMING THE CODES OF THE FOUR VALVES
SP00F7	EGR VALVE PROGRAMMING
SP00F8	ADAPTIVES ON AIR INTAKE FLAP FAULT
SP00F9	AIR DAMPER VALVE PROGRAMMING
SP00FA	RAIL PRESSURE SENSOR ADAPTIVES
SP00FB	PROPORTIONAL RICHNESS SENSOR PROGRAMMING
SP00FC	EXHAUST FLAP LOW SETTING
SP00FD	LOW PRESSURE EGR VALVE PROGRAMMING

SP00FE	SWIRL FLAP PROGRAMMING
SP00FF	FUEL PUMP PROGRAMMING
SP0100	AIR FLOWMETER PROGRAMMING
SP0101	PARTICLE FILTER PRESSURE DIFF. SENSOR
SP0102	SWIRL FLAP
SP0103	INJECTION PUMP ADAPTATIVES
SP0104	STARTER ADAPTATIVES
SP0105	NUMBER OF STARTING CYCLES
SP0106	EGR BYPASS PROGRAMMING
SP0107	CATALYTIC CONVERTER
SP0108	HIGH PRESSURE PUMP COUNTER
SP0109	STOP AND START FUNCTION
SP010A	ALTERNATOR VOLTAGE SETPOINT
SP010B	OIL CHANGE INTERVAL (OCS): DILUTION
SP010C	ALCOHOL LEVEL PROG.
SP010D	ACTIVATE MAINTENANCE MODE
SP010E	DEACTIVATE MAINTENANCE MODE
SP010F	FRONT WHEEL CIRCUMFERENCE
SP0110	REAR WHEEL CIRCUMFERENCE
SP0111	RESET CLUTCH DATA
SP0112	RESET CLUTCH DATA PROTECTION
SP0113	RESET GEARBOX DATA
SP0114	NUMBER OF STARTING 1
SP0115	NUMBER OF STARTING 2
SP0116	NUMBER OF STARTING 3
SP0117	NUMBER OF STARTING 4
SP0118	DTC reset
SP0119	NUMBER OF STARTING
SP011A	CALCULATE BATTERY WEAR COUNTERS
SP011B	RESETTING INTERNAL PROTECTION
SP011C	CORROSION BATTERY COUNTER MEMORISED
SP011D	CORROSION BATTERY COUNTER ESTIMATED

SP011E	BATTERY CORROSION COUNTER
SP011F	BATTERY CYCLE COUNTER MEMORISED
SP0120	BATTERY CYCLE COUNTER ESTIMATED
SP0121	BATTERY CYCLE COUNTER
SP0122	STOP&START FUNCTION CONFIGURATION
SP0123	ALTERNATOR FLOATING VOLTAGE
SP0124	FRONT DETECTION
SP0125	REAR DETECTION
SP0126	SIDE DETECTION
SP0127	ILLUMINATE HAZARD LAMPS UPON IMPACT
SP0128	REMOTE LOCKING BUZZER
SP0129	ALARM
SP012A	SCANDINAVIAN RUNNINGS LIGHTS
SP012B	SECOND FITTING ALARM
SP012C	TRAILER PRESENT
SP012D	HANDS-FREE DEADLOCKING
SP012E	DEADLOCKING WITH REMOTE CONTROL ON KEY
SP012F	CONFIGURATION PRIVEE 3
SP0130	PROGRAMMING ROUTINE
SP0131	CONFIRM PROGRAMMING
SP0132	ABANDON PROGRAMMING
SP0133	READ CARD SIGNAL
SP0134	READ CARD 2 SIGNAL
SP0135	CONFIGURATION PRIVEE 2
SP0136	CONFIGURATION PRIVEE 4
SP0137	TESTING CARD PRESENTED
SP0138	HFM PROGRAMMING ROUTINE
SP0139	REMOTE ENGINE STARTING
SP013A	COLUMN STEERING LOCK
SP013B	CONFIGURATION RESERVEE 1
SP013C	INJECTOR ADAPTIVES
SP013D	WASTE GATE REGULATION

SP013E	PROGRAM CLUTCH ASSEMBLY
SP013F	AUTOMATIC GEARBOX CONTROL
SP0140	SHIFT FORK
SP0141	PASS AIRBAG DEACTIVATION WARNING LIGHT
SP0142	Driver's front air bag
SP0143	Passenger's front air bag
SP0144	IMPACT INFORMATION CONNECTION
SP0145	DRIVER'S FRONT BUCKLE PRETENSIONER
SP0146	PASSENGER'S FRONT BUCKLE PRETENSIONER
SP0147	PARKING ASSISTANCE
SP0148	DIRECTIONAL HEADLIGHTS
SP0149	Personalised oil change frequency
SP014A	ELECTRIC PUMP UNIT
SP014B	BATTERY CHARGE WARNING INFORMATION
SP014C	CAMSHAFT NO. 2 SENSOR PROGRAMMING
SP014D	CONTROL HEADLIGHT MOTORS
SP014E	STARTER WEAR COUNTER
SP014F	POWER BACK DOOR CYLINDER
SP0150	DRIVER START COUNTER
SP0151	IDLE STOP AND START COUNTER
SP0152	CONFIGURATION OF SYSTEM COMPONENTS
SP0153	PROGRAMME SLIP POINT
SP0154	ERASE AUTO-ADAPTIVE VALUES
SP0155	CLUTCH WORN
SP0156	PROGRAMMING SELECTION/ENGAGING ZONES
SP0157	WRITE CLUTCH INITIAL CLOSED POSITION
SP0158	SHIFT DRUM REFERENCE POSITION
SP0159	PROGRAM CLUTCH ADJUSTEMENT
SP015A	PROGRAMME CLUTCH POSITION
SP015B	PROGRAM CLUTCH 1 ADJUSTEMENT
SP015C	PROGRAM CLUTCH 2 ADJUSTEMENT
SP015D	ENGINE IMMOBILISER

SP015E	RESTART THE COMPUTER
SP015F	LCD DISPLAY FUEL GAUGE CALIBRATION
SP0160	ANALOGIC DISPLAY FUEL GAUGE CALIBRATION
SP0161	COMP CONFIGURATION
SP0162	DRIVE TYPE CONFIGURATION
SP0163	ADAC CONFIGURATION
SP0164	EXTERNAL TEMPERATURE
SP0165	FREE SHIFT
SP0166	SEAT BELT WARNING MODULE
SP0167	HILL START
SP0168	IMPROVED GRIP FUNCTION
SP0169	STOP AND START CONFIGURATION
SP016A	BUZZER
SP016B	ADBLUE TANK PROGRAMMING
SP016C	ADBLUE PUMP MODULE PROGRAMMING
SP016D	ADBLUE INJECTOR PROGRAMMING
SP016E	ADBLUE DOSING MODULE CATALYST
SP016F	ADBLUE SMALL QUANTITY TEST METERING
SP0170	ADBLUE LARGE VOLUME TEST METERING
SP0171	ADBLUE PRESSURE PREPARATION TEST
SP0172	ADBLUE SPRAY TEST
SP0173	ADBLUE EMPTYING TEST
SP0174	ADBLUE LEAK TEST
SP0175	ADBLUE INJECTOR RELEASE TEST
SP0176	ADBLUE BACKFLOW PUMP TEST
SP0177	ADBLUE FIRST FILLING TEST
SP0178	MEMORISATION OF SPEEDS
SP0179	FAN ASSEMBLY
SP017A	DRIVING WATER PUMP
SP017B	INVERTER FAN ASSEMBLY
SP017C	GEARBOX VEHICLE ACCELERATION SENSOR INIT.
SP017D	INJECTION TIME PROGRAMMING

SP017E	GEAR CHANGE PADDLES
SP017F	START AUTHORISATION FROM BMS SAFETY
SP0180	START AUTHORISATION FROM BMS
SP0181	CONFIGURATION OF THE SYSTEM
SP0182	CONSTRUCTOR/MANUFACTURER
SP0183	FLASHING BUZZER
SP0184	COMPUTER PROGRAMMING/INITIALISATION
SP0185	AVERAGE AIR TEMPERATURE
SP0186	PARTICLE FILTER RELATIVE PRESSURE SENSOR
SP0187	EXHAUST INJECTOR CIRCUIT
SP0188	PREHEATER UNIT
SP0189	PINKING SENSOR PROGRAMMING
SP018A	IGNITION COIL ADAPTIVE
SP018B	MODUS FUEL SENDER CALIBRATION (EUROPE)
SP018C	MODUS LONG FUEL SENDER CALIBRATION (EUROPE)
SP018D	VEHICLE FUNCTION PROGRAMMING
SP018E	ERASE IDLE REGULATION ADAPTIVES
SP018F	ASSISTED ENGAGEMENT WHEN STATIONARY
SP0190	ADAPTIVE VALUE - TPS
SP0191	ADAPTIVE VALUE - A/F RATIO
SP0192	CATALYTIC CONVERTER TEST
SP0193	COMMANDE PRIVEE 1
SP0194	EXTERNAL COMPONENTS
SP0195	EMERGENCY CALL NUMBER
SP0196	TEMPERATURE DISPLAY
SP0197	SUBWOOFER
SP0198	WITHOUT INHIBITION SWITCH
SP0199	SEAT BELT LIGHT
SP019A	DRIVER'S FRONT SIDE IMPACT SENSOR
SP019B	PASSENGER'S FRONT SIDE IMPACT SENSOR
SP019C	RADIO
SP019D	LIGHTING

SP019E	UNIT OF VOLUME
SP019F	CONFIGURATION RESERVEE 10
SP01A0	STEERING LOCK
SP01A1	SELF LEARNING VALUE ERASE -BUTANE RATIO MODELING
SP01A2	SELF LEARNING VALUE ERASE - FUEL PUMP PWM
SP01A3	FUEL PUMP FORCED CONVERSION
SP01A4	MODE NUMBER
SP01A5	AIR CONDITIONING TYPE
SP01A6	CALIBRATION
SP01A7	AUTOMATIC LOCKING WHEN DRIVING
SP01A8	WIPER INTERMITTENT SPEED RING
SP01A9	OPENING ELEMENTS CENTRAL LOCKING
SP01AA	AUTOMATIC LIGHTING FUNCTION
SP01AB	AUTOMATIC FRONT WIPER FUNCTION
SP01AC	KEY TYPE
SP01AD	GRADUAL SWITCHING ON AND OFF OF COURTESY LIGHT
SP01AE	DRIVER'S FRONT INERTIA REEL
SP01AF	PASSENGER'S FRONT INERTIA REEL
SP01B0	SENSOR OFFSETS
SP01B1	SLOPE SENSOR ADJUSTMENT
SP01B2	TYPE OF PARKING BRAKE
SP01B3	FREE SHIFT DISPLAY
SP01B4	POINTER ANIMATION
SP01B5	DAYTIME BACKLIGHTS
SP01B6	Blind spot detection
SP01B7	PROGRAMMING OF SEAT STOPS
SP01B8	HANDS-FREE CARDS LOW BATTERY COUNTER
SP01B9	INTERIOR AERIAL 1 TEST
SP01BA	INTERIOR AERIAL 2 TEST
SP01BB	EXTERNAL BOOT AERIAL TEST
SP01BC	FRONT LEFT-HAND EXTERNAL AERIAL TEST
SP01BD	FRONT RIGHT-HAND EXTERNAL AERIAL TEST

SP01BE	STORED ENERGY MANAGEMENT DATA
SP01BF	TIMED LIGHTING SUPPLY
SP01C0	VEH. SPEED AT INITIALISATION
SP01C1	NAVIGATION
SP01C2	GSM CONNECTIVITY
SP01C3	GSM ANTENNA CIRCUIT
SP01C4	PARAMETRE PRIVE 2
SP01C5	MODIFICATION OF PARAMETERS AFTER INITIALISATION
SP01C6	CONFIGURING THE MULTIMEDIA COMPUTER
SP01C7	IDLE SPEED REFERENCE
SP01C8	CLUTCH INITIAL CLOSED POSITION
SP01C9	WRITE DATE NEW CLUTCH FITTED
SP01CA	PROGRAM CLUTCH OPEN POSITION
SP01CB	COMPRESSOR FEEDBACK
SP01CC	TACHOGRAPH
SP01CD	ABS/ESP
SP01CE	TYRES
SP01CF	GSM ANTENNA
SP01D0	TRACTION BATTERY LOCK
SP01D1	TRACTION BATTERY INTERLOCK
SP01D2	INTERIOR LIGHTING
SP01D3	INTERIOR AMBIENCE LIGHTING
SP01D4	EEPROM MEMORY WRITE PROCEDURE
SP01D5	FRONT LEFT-HAND CHEST-LEVEL SIDE AIRBAG
SP01D6	LEFT-HAND CURTAIN AIRBAG
SP01D7	FRONT RIGHT-HAND CHEST-LEVEL SIDE AIRBAG
SP01D8	RIGHT-HAND CURTAIN AIRBAG
SP01D9	LEFT-HAND SIDE IMPACT SENSOR
SP01DA	RIGHT-HAND SIDE IMPACT SENSOR
SP01DB	FRONT LEFT-HAND SEAT BELT SENSOR
SP01DC	FRONT RIGHT-HAND SEAT BELT SENSOR
SP01DD	FRONT LEFT-HAND BUCKLE PRETENSIONER



SP01DE	FRONT RIGHT-HAND BUCKLE PRETENSIONER
SP01DF	ANGLE OF ASSEMBLY
SP01E0	VACUUM PUMP AGEING COUNTER
SP01E1	CHARGE WATER PUMP
SP01E2	HEATED
SP01E3	OVERSPEED LIGHT
SP01E4	RHEOSTAT LIGHTING
SP01E5	FUEL LEVEL DISPLAY UPDATE
SP01E6	ELECTRONIC POWER STEERING
SP01E7	PARAMETRAGE PRIVE 98
SP01E8	MAINTENANCE AUTONOMY INTERVAL IN KM
SP01E9	MAINTENANCE AUTONOMY INTERVAL IN MONTHS
SP01EA	MAINTENANCE AUTONOMY:CURRENT VALUE IN KM
SP01EB	MAINTENANCE AUTONOMY:CURRENT VALUE MONTH
SP01EC	PARAMETRE PRIVE 3
SP01ED	PARAMETRE PRIVE 4
SP01EE	SVT CONFIGURATION
SP01EF	EGR PROGRAMMING
SP01F0	MANIFOLD PRESSURE SENSOR PROGRAMMING
SP01F1	FUEL GAUGE CALIBRATION LCD (JAPAN)
SP01F2	FUEL GAUGE CALIBRATION NEEDLE (JAPAN)
SP01F3	DISTANCE BEFORE NEXT OIL CHANGE CONFIGURATION
SP01F4	REV COUNTER
SP01F5	INJECTION PROHIBITION
SP01F6	PARAMETRAGE PRIVE 250
SP01F7	RESET RADIO
SP01F8	BMS
SP01F9	INSTRUMENT PANEL
SP01FA	CHARGE PLUG
SP01FB	MODULE CHANGE
SP01FC	REAR LOUD SPEAKER
SP01FD	FRONT LEFT-HAND INERTIA WHEEL

SP01FE	FRONT RIGHT-HAND INERTIA WHEEL
SP01FF	INHIBIT EVAP STRATEGY
SP0200	ACTIVATE EVAP PROGRAMMING
SP0201	STATIC TEST
SP0202	PARAMETRAGE PRIVE 159
SP0203	PARAMETRAGE PRIVE 160
SP0204	BRAKE PEDAL POSITION 1 AND 2 SENSOR STATUS OFFSET
SP0205	PISTON PRESSURE SENSOR STATUS OFFSET
SP0206	MASTER CYLINDER PRESSURE SENSOR OFFSET
SP0207	PISTON PRESSURE SENSOR OFFSET
SP0208	UBP SOLENOID VALVE
SP0209	WHEEL CIRCUMFERENCE
SP020A	TRACTION BATTERY RANGE
SP020B	GEAR POSITIONS MEMORIZATION
SP020C	ECONOMETER
SP020D	FUEL FLOW REGULATOR
SP020E	INJECTOR ADAPTIVES NO. 1
SP020F	INJECTOR ADAPTIVES NO. 2
SP0210	INJECTOR ADAPTIVES NO. 3
SP0211	INJECTOR ADAPTIVES NO. 4
SP0212	WITH SWIRL FLAP
SP0213	OIL VAPOUR HEATER
SP0214	HOUR SETTING
SP0215	ESM CONFIGURATION
SP0216	ESM INHIBITION COMMAND
SP0217	ESM ACTIVATION COMMAND
SP0218	TUNING VERSION NUMBER
SP0219	LOAD AREA
SP021A	LAUNCH CONTROL COUNTER
SP021B	OIL PRESSURE WARNING THRESHOLD
SP021C	OIL TEMPERATURE MEASUREMENT THRESHOLD
SP021D	OIL MEASUREMENT TIMER

SP021E	PARKING PROXIMITY SENSOR FUNCTION
SP021F	VOICE SYNTHESISER
SP0220	FRONT BUZZER VOLUME
SP0221	FRONT TONE SETTING
SP0222	ALTERNATOR TYPE
SP0223	ADDITIONAL HEATING
SP0224	REAR SHELVES
SP0225	RAIN SENSOR
SP0226	AUTOMATIC SEAT RECALL
SP0227	CARD LOCKING
SP0228	CARD REMINDER WARNING
SP0229	TIMER COURTESY LIGHT
SP022A	DOOR UNLOCKING MODE
SP022B	Unlock mode. Door lift
SP022C	POWER-ASSISTED STEERING PROGRAM
SP022D	OVERSPEED ALARM FOR ARABIA
SP022E	REAR ACCESS AERIALS
SP022F	PREVENTION OF ELECTRICAL CONSUMERS
SP0230	STOP ELECTRICAL CONSUMER PREVENTION
SP0231	RAIN/LUMINOSITY SENSOR TYPE
SP0232	AUTOMATIC FOLDING OF DOOR MIRRORS
SP0233	NEUTRAL POSITION PROGRAMMING
SP0234	LIGHT SENSOR SIGNAL
SP0235	REINIT. EXTREME COLD REVERSE GEAR ENGAGEMENT
SP0236	TEST PARAMETERS
SP0237	PARTICLE FILTER ADAPTIVES
SP0238	CD CHANGER AND AUXILIARY INPUT
SP0239	MULTIPLEXED NETWORK CONFIGURATION
SP023A	VAN FAST IDLE SPEED INCREASE
SP023B	VAN FAST IDLE SPEED DECREASE
SP023C	BOILER
SP023D	REAR RIGHT-HAND INERTIA REEL

SP023E	REAR LEFT-HAND INERTIA WHEEL
SP023F	STEERING ANGLE SENSOR INITIALISATION
SP0240	ANTI-THEFT ALARM TRIGGER S/W
SP0241	ONE-TOUCH ELECTRIC WINDOW(S)
SP0242	HEAD LAMP BATTERY SAVER FUNCTION
SP0243	PASSENGER COMPARTMENT HEATING RESISTORS
SP0244	RAISING OF ELECT. WINDOW(WITH ANTI-PINCH)
SP0245	DONGLE
SP0246	INDICATOR LIGHT CONFIGURATION
SP0247	CD CHANGER
SP0248	SENSOR TYPE
SP0249	IDLE AIR VOLUME LEARNING - FACTORY MODE
SP024A	IDLE AIR VOLUME LEARNING - SERVICE MODE
SP024B	TOXICITY SENSOR
SP024C	REAR SCREEN DEMISTER
SP024D	HEATED REAR SCREEN INDICATOR LIGHT CIRCUIT
SP024E	PARAMETRAGE PRIVE 9
SP024F	RESET OIL CHANGE COUNTER
SP0250	SHOE LINING ENERGY COUNTER
SP0251	REAR BRAKE UNIT INITIALISATION
SP0252	REAR BRAKE UNIT REPOSITIONING
SP0253	BRAKE LINING FRICTION LEARNING
SP0254	IDLE SPEED LEARNING
SP0255	TORQUE LEARNING
SP0256	PARAMETRAGE PRIVE 237
SP0257	ENGINE PARAMETER ADAPTIVES
SP0258	POWER STEERING ELECTRIC PUMP UNIT
SP0259	NUMBER OF HEATING ELEMENTS
SP025A	HAZARD LAMPS RECALL ON TRF
SP025B	ADJUST OIL CHANGE COUNTER
SP025C	ABS TYPE
SP025D	RADIOFREQUENCY TYPE

SP025E	SUNROOF CONTROL UNIT
SP025F	UCH TYPE
SP0260	CRUISE CONTROL/SPEED LIMITER
SP0261	RAID FUNCTION AUTHORISATION BY DIAG
SP0262	TYPE N4
SP0263	WITH PASSENGER'S AIRBAGS
SP0264	WITHOUT PASSENGER'S AIRBAG
SP0265	WITHOUT PASSENGER'S FRONTAL AIRBAG
SP0266	WITHOUT PASSENGER SEAT
SP0267	WITHOUT AIRBAGS (PRETENSIONERS ONLY)
SP0268	WITH PASSENGER'S AIRBAGS
SP0269	COMP CONFIGURATION
SP026A	WITH SIDE AIRBAGS
SP026B	WITHOUT FUEL PUMP CUT-OUT
SP026C	WITH FUEL PUMP CUT-OUT
SP026D	DRIVER'S SIDE REAR INERTIA REEL
SP026E	PASSENGER'S SIDE REAR INERTIA REEL
SP026F	DRIVER'S SEAT SENSOR
SP0270	WITH RANGE EXTENSION
SP0271	WITHOUT RANGE EXTENSION
SP0272	100 Ah TRACTION BATTERY
SP0273	RANGE EXTENDER
SP0274	AIR CONDITIONING PROGRAMMING
SP0275	OIL CHANGE COUNTER OFFSET
SP0276	WITH AIR CONDITIONING
SP0277	WITHOUT AIR CONDITIONING
SP0278	WITH OBD
SP0279	WITHOUT OBD
SP027A	AIR CONDITIONING CONNECTION FAULT FINDING
SP027B	LEVER LOCKING CONNECTION FAULT FINDING
SP027C	ENGINE TORQUE CONTROL FUNCTION
SP027D	ENTER ACCESS CODE

SP027E	PROGRAMMING WITH 1 KEY
SP027F	PROGRAMMING WITH 2 KEYS
SP0280	WITH SDO
SP0281	WITHOUT SDO
SP0282	DIESEL/PETROL ENG IMMOB WITHOUT CODED SOL VALVE
SP0283	DIESEL ENGINE IMMOBILISER
SP0284	WITH INFRA-RED REMOTE CONTROL
SP0285	WITH RADIO FREQUENCY REMOTE CONTROL
SP0286	WITHOUT TIMED COURTESY LIGHT
SP0287	WITH TIMED COURTESY LIGHT
SP0288	CODED DIESEL SOLENOID VALVE ENGINE IMMOBILISER
SP0289	END OF KEY REALLOCATION VALIDATION
SP028A	ABANDON KEY REALLOCATION
SP028B	TYPE 1 UNIT
SP028C	TYPE 2 UNIT
SP028D	ENGINE IMMOBILISER AUTHORISATION
SP028E	ENGINE IMMOBILISER PROHIBITION
SP028F	WITH ALARM
SP0290	WITHOUT ALARM
SP0291	WITH AUTOMATIC TRANSMISSION
SP0292	WITHOUT AUTOMATIC TRANSMISSION
SP0293	WITH POWER ASSISTED STEERING
SP0294	WITHOUT POWER ASSISTED STEERING
SP0295	PREHEATING PREVENTION
SP0296	STOP PREHEATING PREVENTION
SP0297	POWER ASSISTED STEERING
SP0298	WITHOUT POWER STEERING ELECTRIC PUMP UNIT
SP0299	WITH POWER STEERING ELECTRIC PUMP UNIT
SP029A	WITH THERMOPLUNGERS
SP029B	WITHOUT THERMOPLUNGERS
SP029C	WITH BOILER
SP029D	WITHOUT BOILER

SP029E	WITHOUT AIR CONDITIONING
SP029F	WITH AIR CONDITIONING
SP02A0	ADAPTIVES ON EGR VALVE FAULT
SP02A1	CRUISE CONTROL/SPEED LIMITER
SP02A2	WITHOUT AIR CON. / WITHOUT HEATED WINDSCREEN
SP02A3	WITH AIR CON / WITHOUT HEATED WINDSCREEN
SP02A4	WITHOUT AIR CON / WITH HEATED WINDSCREEN
SP02A5	WITH AIR CONDITIONING / WITH HEATED WINDSCREEN
SP02A6	WITH CRUISE CONTROL
SP02A7	WITHOUT CRUISE CONTROL
SP02A8	WITHOUT SWIRL FLAP
SP02A9	CONTROL PANEL TYPE
SP02AA	BII TYPE
SP02AB	VEHICLE ENGINE TYPE
SP02AC	WITH TAILGATE MODULE
SP02AD	WITHOUT TAILGATE MODULE
SP02AE	WITH RADIO DISPLAY
SP02AF	WITHOUT RADIO DISPLAY
SP02B0	OPENING REAR SCREEN
SP02B1	FIXED REAR SCREEN
SP02B2	WITH AIR BAG
SP02B3	WITHOUT AIR BAG
SP02B4	SDM AIR BAG
SP02B5	EC5 AIR BAG
SP02B6	VEHICLE TYPE: ALL TYPES EXCEPT JEOP/JEOE
SP02B7	VEHICLE TYPE: JEOE OR JEOP
SP02B8	LEFT-HAND DRIVE
SP02B9	RIGHT HAND DRIVE
SP02BA	WITH ADAC
SP02BB	WITHOUT ADAC
SP02BC	WITH HAZARD LAMPS RECALL ON TRF
SP02BD	WITHOUT HAZARD LAMPS RECALL ON TRF

SP02BE	ONE-TOUCH CENTRAL DOOR LOCKING BUTTON
SP02BF	ROCKER CENTRAL DOOR LOCKING BUTTON
SP02C0	RAID FUNCTION AUTHORISATION
SP02C1	AUTO LOCKING WHEN DRIVING FUNCTION PREVENTION
SP02C2	WITHOUT VARIABLE INTERMITTENT WIPE
SP02C3	WITH VARIABLE W'SCREEN WIPER INTERMITTENT
SP02C4	WITHOUT OVERSPEED WARNING
SP02C5	WITH OVERSPEED WARNING
SP02C6	WITHOUT RUNNING LIGHTS
SP02C7	WITH RUNNING LIGHTS
SP02C8	WITH AUTOMATIC RE-LOCKING
SP02C9	WITHOUT AUTOMATIC RE-LOCKING
SP02CA	WITHOUT HAZARD LIGHTS UPON IMPACT
SP02CB	WITH HAZARD LIGHTS UPON IMPACT
SP02CC	NUMBER OF CYLINDERS CONFIGURATION
SP02CD	LEFT HAND DRIVE / 4 CYLINDER CONFIGURATION
SP02CE	LEFT HAND DRIVE / 6 CYLINDER CONFIGURATION
SP02CF	RIGHT HAND DRIVE / 4 CYLINDER CONFIGURATION
SP02D0	LEFT HAND DRIVE / DIESEL CONFIGURATION
SP02D1	RIGHT HAND DRIVE / 6 CYLINDER CONFIGURATION
SP02D2	RIGHT HAND DRIVE / DIESEL CONFIGURATION
SP02D3	ENGINE IMMOBILISER 2
SP02D4	WITH ABS
SP02D5	NO ABS
SP02D6	PETROL INJECTION
SP02D7	DIESEL INJECTION
SP02D8	WITH SELF LEVELLING SUSPENSION
SP02D9	WITHOUT SELF LEVELLING SUSPENSION
SP02DA	WITH CATALYTIC CONVERTER
SP02DB	WITHOUT CATALYTIC CONVERTER
SP02DC	OIL LEVEL DISPLAYED 20sec
SP02DD	OIL LEVEL DISPLAYED 20 sec WHEN ADAC PRESSED



SP02DE	ERASE OBD FAULT MEMORY
SP02DF	MEMORY SAVED
SP02E0	WITH MANUAL GEARBOX
SP02E1	IDLE SPEED SETTING INCREMENTATION
SP02E2	IDLE SPEED SETTING DECREMENTATION
SP02E3	WITH AC (FIXED CAPACITY COMPRESSOR)
SP02E4	WITH AC (VARIABLE CAPACITY COMPRESSOR)
SP02E5	OIL CHANGE COUNTER RESET
SP02E6	WITH HEATED REAR SCREEN
SP02E7	WITHOUT HEATED REAR SCREEN
SP02E8	WITH COOLANT SENSOR
SP02E9	WITHOUT COOLANT SENSOR
SP02EA	WITH EVAPORATOR TEMPERATURE SENSOR
SP02EB	WITHOUT EVAPORATOR TEMPERATURE SENSOR
SP02EC	WITH RECYCLING MOTOR TIMER
SP02ED	WITHOUT RECYCLING MOTOR TIMER
SP02EE	WITH PERMANENT TYPE CONTROL
SP02EF	WITH ONE-TOUCH TYPE CONTROL
SP02F0	WITH HARRISON TYPE COMPRESSOR
SP02F1	WITH SANDEN TYPE COMPRESSOR
SP02F2	BEHR PROBE CONFIGURATION
SP02F3	HOKURIKU PROBE CONFIGURATION
SP02F4	SIEMENS PROBE CONFIGURATION
SP02F5	EEPROM PROBE CONFIGURATION
SP02F6	CONFIGURATION WITH RECYCLING FLAP AUTO-SETTING
SP02F7	CONFIG. WITHOUT RECYCLING FLAP AUTO-SETTING
SP02F8	RIGHT HAND DRIVE
SP02F9	LEFT-HAND DRIVE
SP02FA	AVANTIME (F4R): WITH HEATED WINDSCREEN
SP02FB	AVANTIME (F4R): WITHOUT HEATED WINDSCREEN
SP02FC	AVANTIME(EXCEPT F4R):WITH HEATED WINDSCR.
SP02FD	AVANTIME(EXPT F4R):WITHOUT HEATED WINDSCR.

SP02FE	ESPACE: WITH EVAPORATOR SENSOR
SP02FF	ESPACE: WITHOUT EVAPORATOR SENSOR
SP0300	WRITING CONFORMITY
SP0301	WRITE SAVED DATA
SP0302	Enter injector codes.
SP0303	SAVE COMPUTER DATA
SP0304	START OBD TEST: CATALYTIC CONVERTER
SP0305	START OBD TEST: O2 SENSORS
SP0306	READ VALVE SET AND MEMORISED CODES
SP0307	SPARE
SP0308	CARD TESTING
SP0309	ENTER RECOMMENDED PRESSURES
SP030A	CHECK TARGET TEETH
SP030B	BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
SP030C	READING IMPACT CONTEXTS
SP030D	COMPUTER CALIBRATION AND OPERATION
SP030E	CHECKING A KEY
SP030F	PROGRAMMING A VALVE CODE
SP0310	READING THE VALVE SET AND VALVE CODES
SP0311	SELECTION OF VALVE SET
SP0312	HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
SP0313	MICROPHONE TEST
SP0314	SERIAL LINK TEST
SP0315	UCH
SP0316	PRESSURE SENSOR
SP0317	IGNITION MODULE CONFIGURATION
SP0318	SIDE SENSOR CONFIGURATION
SP0319	ACTUATORS SEQUENTIAL CONTROL
SP031A	UPC COMP. TYPE
SP031B	CHECK CARDS
SP031C	HANDS-FREE SYSTEM TEST
SP031D	UCH CONNECTIONS TEST -> CARD READER

SP031E	AERIAL TEST
SP031F	VALVE SET SELECTION
SP0320	ENTER VIN CODE
SP0321	REMOTE CONTROL CRUISE CONTROL
SP0322	CHECK UPSTREAM O2 SENSOR
SP0323	PARTICLE FILTER REGENERATION
SP0324	4E000FF
SP0325	ACTIVATION OF CONNECTIVITY SERVICES
SP0326	ODOMETER IN KM
SP0327	ODOMETER IN MILES
SP0328	FRONT RADAR ADJUSTMENT
SP0329	PARAMETRAGE PRIVE 1
SP032A	STARTING AUTHORISED
SP032B	CYLINDER FUNCTION FAULT FINDING
SP032C	SPEED LIMITER
SP032D	FAST IDLE SPEED MODIFICATION
SP032E	ADAPTIVES AFTER REPLACING PARTICLE FILTER
SP032F	STOP AND START INHIBITION HISTORY
SP0330	ACCELEROMETER
SP0331	AUTOMATIC CONFIGURATION
SP0332	TYPE 1 BATTERY DISCONNECTION UNIT TEST
SP0333	MULTIPLE 12V BATTERIES
SP0334	SAVE NUMBER OF STARTS
SP0335	HIGH PRESSURE PUMP LEARNING
SP0336	STARTER LEARNING
SP0337	CARAVAN TOWING DISTANCE
SP0338	WIPING LEARNING
SP0339	ACCESS/STARTER TYPE
SP033A	MAKE
SP033B	OIL MEASUREMENT
SP033C	Flywheel target programming 1
SP033D	Flywheel target programming 2

SP033E	Flywheel target programming 3
SP033F	Flywheel target programming 4
SP0340	Flywheel target programming 5
SP0341	Flywheel target programming 6
SP0342	SENSOR CONFIGURATION
SP0343	COMMANDE PRIVEE 7
SP0344	COMMANDE PRIVEE 8
SP0345	IDLE AIR VOLUME LEARNING - FACTORY MODE
SP0346	COMPUTER PROGRAMMING
SP0347	CLUTCH TORQUE RECOVERY
SP0348	ADBLUE QUALITY SENSOR PROGRAMMING
SP0349	MANUAL GEAR POSITION
SP034A	PARAMETRAGE PRIVE 5
SP034B	RADAR-CAMERA ALIGNMENT ADJUSTEMENT
SP034C	RADAR-CAMERA DRIVING
SP034D	PARAMETRAGE PRIVE 4
SP034E	Flywheel target programming (RZ061)
SP034F	Flywheel target programming (RZ065)
SP0350	PARAMETRAGE PRIVE 2
SP0351	PARAMETRAGE PRIVE 3
SP0352	HYDRAULIC BRAKE COMPENSATION
SP0353	VACUUM PUMP
SP0354	FUEL FLAP LOCKING
SP0355	REAR WIPER/REVERSE GEAR CONNECTION
SP0356	REAR WIPER INFORMATION
SP0357	ACCELERATED IDLE
SP0358	HEATED REAR SCREEN VIA INJECTION SYSTEM
SP0359	PCHR NUMBER CONTROLLED
SP035A	AIR CONDITIONING MANAGEMENT
SP035B	UCH configuration
SP035C	AIR RECIRCULATION FLAP MOTOR
SP035D	TRACTION BATTERY RELAY

SP035E	TRACTION BATTERY DISCHARGE/CHARGE TEST
SP035F	INVERTER ACTIVATION REQUEST
SP0360	BLEED CLUTCH HYDRAULIC CIRCUIT
SP0361	Number plate
SP0362	ADAPTIVES AFTER REGENERATING PARTICLE FILTER
SP0363	FAULT FINDING: TYRE PRESSURE MONITOR WARNINGS
SP0364	PREPARATION BEFORE AUTOMATIC CONFIGURATION
SP0365	INITIALISATION AFTER AUTOMATIC CONFIGURATION
SP0366	BACKUP OF INSTRUMENT PANEL DATA FOR INJECTION
SP0367	WRITING OF INSTRUMENT PANEL DATA FOR INJECTION
SP0368	VEHICLE IDENTIFIER
SP0369	COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
SP036A	VALVE CODE READING
SP036B	RESETTING THE DILUTION RATIOS
SP036C	PROGRAMMING OF NO LOAD AND FULL LOAD POSITIONS
SP036D	HANDS-FREE CARD PROGRAMMING
SP036E	HANDS-FREE CARD READING
SP036F	REVERSING CAMERA CALIBRATION
SP0370	IGNITERS IN SERIES CONFIGURATION
SP0371	HIGH PRESSURE CIRCUIT LEAK TEST
SP0372	OIL SERVICE AND ODOMETRY MILES - KM
SP0373	PARAMETRAGE PRIVE 98
SP0374	VOLTMETER
SP0375	AMPMETER
SP0376	DISTANCE BEFORE NEXT MAINTENANCE
SP0377	PARAMETRAGE PRIVE 250
SP0378	REAR CAMERA CONFIGURATION
SP0379	PARAMETRAGE PRIVE 159
SP037A	PARAMETRAGE PRIVE 160
SP037B	CLUTCH END OF TRAVEL WIRING SWITCH
SP037C	GUIDELINES
SP037D	EMERGENCY CALL SERVICE

SP037E	TORQUE SENSOR
SP037F	PARAMETRAGE PRIVE 12
SP0380	PARAMETRAGE PRIVE 13
SP0381	Type
SP0382	PARAMETRAGE PRIVE 14
SP0383	PARAMETRAGE PRIVE 15
SP0384	CHASSIS WEAR PROGRAMMING
SP0385	CARD ACCUMULATOR CHARGE TESTER
SP0386	CARD BATTERY CHARGE TESTER
SP0387	LOCK LATCH LOCKING
SP0388	FROST MANAGEMENT MODE
SP0389	BLEEDING THE BRAKING SYSTEM
SP038A	PROGRAM BODY COMPUTER
SP038B	INSTRUMENT PANEL TYPE
SP038C	KEY PROGRAMMING
SP038D	WINDOW WINDER 1 DECONFIGURATION
SP038E	PROGRAMME PNEUMATIC SUSPENSION
SP038F	PUMP PRESSURE REGULATOR TYPE
SP0390	RADIO PROGRAMMING KEY
SP0391	IGNITION TIMING ADJUSTMENT
SP0392	PARAMETRAGE PRIVE 9
SP0393	PARAMETRAGE PRIVE 237
SP0394	PARAMETRAGE PRIVE 238
SP0395	PARAMETRAGE PRIVE 239
SP0396	PARAMETRAGE PRIVE 240
SP0397	Oil return to zero
SP0398	Oil return to zero (km)
SP0399	Oil return to zero (miles)