



RENAULTSAM Function List V10.90

Tips and Instructions:

The programming function only supports H6PRO, H6PRO Master Edition products.

- * This feature is new.
- ✓ This feature is supported.
- ✗ This feature is not supported.
- ※ This feature is partially supported.

Model	System Name	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Read Freeze Frame	Actuation Test	Specific Function
Captur/qm3/kabin	Engine System	✓	✓	✓	✓	✓	✓	000A 003E 0067 0068 0069 006A 006B
Captur/qm3/kabin	ABS	✓	✓	✓	✓	✓	✓	000A 003E 00F0 00F1 00F2
Captur/qm3/kabin	Instrument panel	✓	✓	✓	✓	✓	✓	000A 003E 009B
Captur/qm3/kabin	UCH	✓	✓	✓	✓	✓	✓	000A 003E 0048 0061 0062 009C 006F 009D 0063 0070
Captur/qm3/kabin	Airbag/pretensioners	✓	✓	✓	✓	✓	✓	000A 003E 006F
Captur/qm3/kabin	Air conditioning	✓	✓	✓	✓	✓	✓	000A 003E 00F0 00F1 00F2
Captur/qm3/kabin	Automatic gearbox	✓	✓	✓	✓	✓	✓	000A 003E 009E 006F
Captur/qm3/kabin	Communications unit	✓	✓	✓	✓	✓	✓	0001 003E 009F 00A0
Captur/qm3/kabin	Variable PAS	✓	✓	✓	✓	✓	✓	0001 0002 0003 0004 0009 000A 000B 000C 0082 000D 000E 000F 0010 0011 0014 0074 0015 0016 0017 0018 0019 001A 001B 0086 001C 001D 001E 0087 001F 0021 0023 0024 0025 0026 0027 0028 0029 002A 002B 002C 002D 002E 0031 00D9 00DA 00DB 00DF 0037 0038 0039 003A 003B 00DC 00F3 013C 00DD 00FB 010C 0105 013D 0108 0109 0304 0305 032C 00C5 032F 006D 0114 0115 0116 0117 010A 00F7 00F8 00F9 00FC 00FD 00FF 0100 0101 0103 0107 0301 0302 0303 0323 032D 032E 010B 0189 018A 00F5 00D0 0186 0187 0371 0362 020D 00FA 020E 020F 0210 0211
Captur/qm3/kabin	UPC	✓	✓	✓	✓	✓	✓	000A 003E 003F 0040 0041 0042 0043 0047 0001 030A 000D 0019 008B 00E9 00EA 00EB 00FO 0167
Captur/qm3/kabin	Lighting	✓	✓	✓	✓	✓	✓	000A 003E 0048 00A9 0049 00CC 00E0 004A 004B 0062 00AB 00AC 008B 00D2 0074 0079 007A 004C 004F 0052 0053 00E1 0001 00A4 000D 00B6 01D4
Captur/qm3/kabin	Parking prox can	✓	✓	✓	✓	✓	✓	000A 00F3 00F4 00F5 00BE 019F 01A0 0001 00F6 0307 0308 025F 030E 036A 0363 0009
Captur/qm3/kabin	Radio	✓	✓	✓	✓	✓	✓	000A 003E 0052 0053 0093 0037 0001 030C 0022
Captur/qm3/kabin	Telematic ctrl unit	✓	✓	✓	✓	✓	✓	000A 003E 0054 0085 0001 000D 0329 00D1
Captur/qm3/kabin	Multimedia interface	✓	✓	✓	✓	✓	✓	000A 003E 003F 00F6 00F7 00F8 0044 0056 0057 0058 0059 005A 005B 005C 005D 005E 0095 005F 0001 0082 000D 0019 001A 001B 0153 0154 00EC 0155 0303 0301 0346 013E 0347 0350 0156 0158
Captur/qm3/kabin	Amplifier	✓	✓	✓	✓	✓	✓	000A 003E 003F 0048 0061 0063 004C 0001 036F 0325 0019 000D 0181 00D7 006F
Captur/qm3/kabin	HANDS-FREE MODULE	✓	✓	✓	✓	✓	✓	000A 003E 0096 0097 0001 000D 018F 010D 010E
Clio IV	Engine System	✓	✓	✓	✓	✓	✓	000A 003E 0001 000D
Clio IV	ABS	✓	✓	✓	✓	✓	✓	000A 003E 00EA 0001 000D 001E
Clio IV	Instrument panel	✓	✓	✓	✓	✓	✓	0001 00F9 01EE 0009
Clio IV	UCH	✓	✓	✓	✓	✓	✓	0001 003E 0064 0065 00E3 00FA 00FB 000D 011B 0122 0216 0217 0118
Clio IV	Airbag/pretensioners	✓	✓	✓	✓	✓	✓	000A 004C 00FC 0001 0009 0184 00E2
Clio IV	Air conditioning	✓	✓	✓	✓	✓	✓	000A 003E 00D1 0001 000D 008C
Clio IV	Automatic gearbox	✓	✓	✓	✓	✓	✓	000A 003E 0067 0068 00CD 00CE 0065 0001 000D 0337 0220 0221
Clio IV	Communications unit	✓	✓	✓	✓	✓	✓	000A 003E 0054 0001 000D 00D1
Clio IV	Variable PAS	✓	✓	✓	✓	✓	✓	0001 000A 003E 006C 00C6 0061 00E6 0063 0073 00D4 00E7 006D 006E 00D7 006F 01FC 001F 007F 01F7 000D 0181 0329 0055 0194 0195
Clio IV	UPC	✓	✓	✓	✓	✓	✓	000A 003E 006F 00D2 0001 0325 000D 0361 037D
Clio IV	Lighting	✓	✓	✓	✓	✓	✓	0001 003E 0070 0071 0072 00C6 00D8 0214 000D
Clio IV	Parking prox can	✓	✓	✓	✓	✓	✓	0001 003E 006C 009F 00E8 0197 00D3 000D 001F
Clio IV	Radio	✓	✓	✓	✓	✓	✓	000A 003E 003F 009E 0001 006A 0019 000D
Clio IV	Telematic ctrl unit	✓	✓	✓	✓	✓	✓	000A 00FD 00FE 00FF 0001 0009 01F8 01F9 01FA
Clio IV	Multimedia interface	✓	✓	✓	✓	✓	✓	000A 0100 0101 0102 0103 0001 01D0 01D1 0303 0301 0180 01FB
Clio IV	Amplifier	✓	✓	✓	✓	✓	✓	000A 0011 0104 0105 0101 0106 0107 0108 01E2 01E0 00DD 0001 0179 01D0 017A 01E1 0303 0301 032C 0009
Clio IV	HANDS-FREE MODULE	✓	✓	✓	✓	✓	✓	000A 0001 0303 0301 0009
Koleos II/qm6	Engine System	✓	✓	✓	✓	✓	✓	000A 0109 0001 017F
Koleos II/qm6	ABS	✓	✓	✓	✓	✓	✓	00A 03E 03F 040 041 042 043 044 045 046 047
Koleos II/qm6	Instrument panel	✓	✓	✓	✓	✓	✓	00A 03E 08A 048 049 04A 062 08B 04C
Koleos II/qm6	UCH	✓	✓	✓	✓	✓	✓	009 00A 04D 08C 08D 04E 08E 075 04F 08F 050
Koleos II/qm6	Airbag/pretensioners	✓	✓	✓	✓	✓	✓	00A 03E 052 053 093
Koleos II/qm6	Front radar	✓	✓	✓	✓	✓	✓	00A 03E
Koleos II/qm6	Air conditioning	✓	✓	✓	✓	✓	✓	00A 03E 094 054
Koleos II/qm6	Automatic gearbox	✓	✓	✓	✓	✓	✓	00A 03E 03F 057 095
Koleos II/qm6	Parking brake	✓	✓	✓	✓	✓	✓	00A 03E 096 097
Koleos II/qm6	Variable PAS	✓	✓	✓	✓	✓	✓	00A 03E
Koleos II/qm6	UPC	✓	✓	✓	✓	✓	✓	03E 04C 021 024 064 065 098 099
Koleos II/qm6	Power back door	✓	✓	✓	✓	✓	✓	00A 09A
Koleos II/qm6	4 wheels drive	✓	✓	✓	✓	✓	✓	00A
Koleos II/qm6	Parking prox can	✓	✓	✓	✓	✓	✓	00A 03E 067 068 069 06A 06B
Koleos II/qm6	Driver's seat	✓	✓	✓	✓	✓	✓	
Koleos II/qm6	Front camera	✓	✓	✓	✓	✓	✓	00A 09B
Koleos II/qm6	Radio	✓	✓	✓	✓	✓	✓	00A 03E 048 061 062 09C 06F 09D 063 070
Koleos II/qm6	Telematic ctrl unit	✓	✓	✓	✓	✓	✓	00A 03E 06F
Koleos II/qm6	Left-hand door or passenger's seat	✓	✓	✓	✓	✓	✓	
Koleos II/qm6	Multimedia interface	✓	✓	✓	✓	✓	✓	00A 03E 09E 06F
Koleos II/qm6	Amplifier	✓	✓	✓	✓	✓	✓	001 03E 09F 0A0
Koleos/qm5	Engine System	✓	✓	✓	✓	✓	✓	001 004 03E 09E 00B 00C 0A1 027 0A2 0A3 0A4 0A5 0A6 0A7 0A8

Koleos/qm5	ABS	✓	✓	✓	✓	✓	✓	00A
Koleos/qm5	Instrument panel	✓	✓	✓	✓			00A 08A 048 0A9 049 04A 04B 0AA 0AB 0AC 08B 0AD 0AE 0AF 0B0 0B1 0B2 0B3 0B4
Koleos/qm5	UCH	✓	✓	✓	✓	✓	✓	00A 04D 0B5 0B6 0B7 0AA 0B8 08D 0B9 04F 0BA 0BB 0BC 0BD 0BE 0BF 0C0 0C1
Koleos/qm5	Airbag/pretensioners	✓	✓	✓	✓	✓	✓	00A
Koleos/qm5	Automatic gearbox	✓	✓	✓	✓	✓	✓	00A 0C2
Koleos/qm5	Communications unit	✓	✓	✓	✓	✓	✓	001 00A 03E 0C3 03F 048 09E 073 0C4 0C5
Koleos/qm5	Parking brake	✓	✓	✓	✓	✓	✓	00A 03E 0C6 0C7 0C8 0C9 0CA 0CB
Koleos/qm5	Blind spot detection	✓	✓	✓	✓	✓	✓	00A 03E 074
Koleos/qm5	Variable PAS	✓	✓	✓	✓	✓	✓	00A
Koleos/qm5	UPC	✓	✓	✓	✓	✓	✓	001
Koleos/qm5	Tyres	✓	✓	✓	✓	✓	✓	00A 03E 085 074 04E
Koleos/qm5	4 wheels drive	✓	✓	✓	✓	✓	✓	00A
Koleos/qm5	Parking prox can	✓	✓	✓	✓	✓	✓	00A 03E 03F 0CC 067 068 0CD 0CE 0CF
Koleos/qm5	Auto front lighting	✓	✓	✓	✓	✓	✓	00A 0D0
Koleos/qm5	Discharge Lamp	✓	✓	✓	✓	✓	✓	00A 0D1 0D2
Koleos/qm5	Radio	✓	✓	✓	✓	✓	✓	001 00A 03E 06C 048 0D3 063 073 0D4 06D 0D5
Koleos/qm5	Telematic ctrl unit	✓	✓	✓	✓	✓	✓	00A 03E 06F 0D6
Koleos/qm5	Multimedia interface	✓	✓	✓	✓	✓	✓	001 03E 0C3 0C6 070 071 0D7 0D8
Koleos/qm5	Amplifier	✓	✓	✓	✓	✓	✓	001 03E 06C 09F 0D6 073
Koleos/qm5	Multimed. connection	✓	✓	✓	✓	✓	✓	00A 03E 03F 073
KoleosII CN/qm6 CN	Engine System	✓	✓	✓	✓	✓	✓	001 00E 00F 021 025 026 088 089
KoleosII CN/qm6 CN	ABS	✓	✓	✓	✓	✓	✓	00A 03E 03F 040 041 042 043 044 045 046 047
KoleosII CN/qm6 CN	Instrument panel	✓	✓	✓	✓	✓	✓	00A 03E 08A 048 049 04A 062 08B 04C
KoleosII CN/qm6 CN	UCH	✓	✓	✓	✓	✓	✓	009 00A 04D 08C 08D 04E 08E 075 04F 08F 050
KoleosII CN/qm6 CN	Airbag/pretensioners	✓	✓	✓	✓	✓	✓	00A 03E 052 053 093
KoleosII CN/qm6 CN	Front radar	✓	✓	✓	✓	✓	✓	00A 03E
KoleosII CN/qm6 CN	Air conditioning	✓	✓	✓	✓	✓	✓	00A 03E 094 054
KoleosII CN/qm6 CN	Automatic gearbox	✓	✓	✓	✓	✓	✓	00A 03E 03F 057 095
KoleosII CN/qm6 CN	Parking brake	✓	✓	✓	✓	✓	✓	00A 03E 096 097
KoleosII CN/qm6 CN	Variable PAS	✓	✓	✓	✓	✓	✓	00A 03E
KoleosII CN/qm6 CN	UPC	✓	✓	✓	✓	✓	✓	03E 04C 021 024 064 065 098 099
KoleosII CN/qm6 CN	Power back door	✓	✓	✓	✓	✓	✓	00A 09A
KoleosII CN/qm6 CN	4 wheels drive	✓	✓	✓	✓	✓	✓	00A
KoleosII CN/qm6 CN	Parking prox can	✓	✓	✓	✓	✓	✓	00A 03E 067 068 069 06A 06B
KoleosII CN/qm6 CN	Driver's seat	✓	✓	✓	✓	✓	✓	
KoleosII CN/qm6 CN	Front camera	✓	✓	✓	✓	✓	✓	00A 09B
KoleosII CN/qm6 CN	Radio	✓	✓	✓	✓	✓	✓	00A 03E 048 061 062 09C 06F 09D 063 070
KoleosII CN/qm6 CN	Telematic ctrl unit	✓	✓	✓	✓	✓	✓	00A 03E 06F
KoleosII CN/qm6 CN	Left-hand door or passenger's seat	✓	✓	✓	✓	✓	✓	
KoleosII CN/qm6 CN	Multimedia interface	✓	✓	✓	✓	✓	✓	00A 03E 09E 06F
KoleosII CN/qm6 CN	Amplifier	✓	✓	✓	✓	✓	✓	001 03E 09F 0A0
Latitude/sm5	Engine System	✓	✓	✓	✓	✓	✓	001 002 003 004 009 09E 00B 00C 0A1 082 00D 00E 00F 010 011 013 014 015 016 017 018 019 01C 01D 01F 021 024 025 026 027 028 029 02A 02B 02C 02D 02E 02F 031 0D9 0DA 0DB 0A2 0A3
Latitude/sm5	ABS	✓	✓	✓	✓	✓	✓	00A 03E 03F 040 041 042 043 045
Latitude/sm5	Instrument panel	✓	✓	✓	✓	✓	✓	00A 03E 048 0A9 049 0CC 0E0 04A 04B 062 0AB
Latitude/sm5	UCH	✓	✓	✓	✓	✓	✓	00A 080
Latitude/sm5	Airbag/pretensioners	✓	✓	✓	✓	✓	✓	00A 03E 052 053 093
Latitude/sm5	Air conditioning	✓	✓	✓	✓	✓	✓	00A 03E 094 054
Latitude/sm5	Automatic gearbox	✓	✓	✓	✓	✓	✓	00A 03E 03F 044 055 056 057 058 059 05A 05B 05C 05D 05E 05F 060
Latitude/sm5	Communications unit	✓	✓	✓	✓	✓	✓	001 00A 03E 03F 048 061 063
Latitude/sm5	Parking brake	✓	✓	✓	✓	✓	✓	00A 03E 0C7 0E2
Latitude/sm5	Blind spot detection	✓	✓	✓	✓	✓	✓	00A 03E
Latitude/sm5	Variable PAS	✓	✓	✓	✓	✓	✓	00A 03E
Latitude/sm5	UPC	✓	✓	✓	✓	✓	✓	001 03E 04C 064 065 0E3 0E4
Latitude/sm5	Lighting	✓	✓	✓	✓	✓	✓	00A 03E 0D1
Latitude/sm5	Parking prox can	✓	✓	✓	✓	✓	✓	00A 03E 067 068 0CD 0CE
Latitude/sm5	Driver's door	✓	✓	✓	✓	✓	✓	00A 03E
Latitude/sm5	Passenger's door	✓	✓	✓	✓	✓	✓	00A 03E
Latitude/sm5	Driver's seat	✓	✓	✓	✓	✓	✓	00A 03E 0E5
Latitude/sm5	Radio	✓	✓	✓	✓	✓	✓	001 00A 03E 06C 061 0E6 063 073 0D4 0E7 06D
Latitude/sm5	Telematic ctrl unit	✓	✓	✓	✓	✓	✓	00A 03E 06F
Latitude/sm5	Left-hand door or passenger's seat	✓	✓	✓	✓	✓	✓	054
Latitude/sm5	Right-hand door or collapsible seat	✓	✓	✓	✓	✓	✓	054
Latitude/sm5	Multimedia interface	✓	✓	✓	✓	✓	✓	001 03E 070 071
Latitude/sm5	Amplifier	✓	✓	✓	✓	✓	✓	001 03E 06C 09F 0E8
Latitude/sm5	Multimed. connection	✓	✓	✓	✓	✓	✓	00A 03E 03F 09E
Meganeivsedan	Engine System	✓	✓	✓	✓	✓	✓	001 002 004 005 006 007 008 009 00A 00B 00C 00D 00E 00F 010 011 0E9 012 014 015 016 017 018 019 01A 01B 086 01C 01D 01E 087 01F 020 021 022 023 024 025 026 027 029 02A 02B 02C
Meganeivsedan	ABS	✓	✓	✓	✓	✓	✓	00A 03E 0EA 040 041 042 043 044 045 0EB 047
Meganeivsedan	Instrument panel	✓	✓	✓	✓	✓	✓	00A 03E 08A 048 049 04A 062 08B 04C
Meganeivsedan	UCH	✓	✓	✓	✓	✓	✓	009 00A 04D 08C 08D 04E 08E 075 04F 08F 050
Meganeivsedan	Airbag/pretensioners	✓	✓	✓	✓	✓	✓	00A 03E 052 053 093
Meganeivsedan	Front radar	✓	✓	✓	✓	✓	✓	00A 03E
Meganeivsedan	Air conditioning	✓	✓	✓	✓	✓	✓	00A 03E 094 054
Meganeivsedan	Automatic gearbox	✓	✓	✓	✓	✓	✓	00A 03E 03F 056 057 058 059 0EE 05A 05B 05C
Meganeivsedan	Parking brake	✓	✓	✓	✓	✓	✓	00A 03E 096 097
Meganeivsedan	Variable PAS	✓	✓	✓	✓	✓	✓	00A 03E
Meganeivsedan	UPC	✓	✓	✓	✓	✓	✓	03E 04C 021 024 064 065 098 099
Meganeivsedan	Head up display	✓	✓	✓	✓	✓	✓	
Meganeivsedan	Parking prox can	✓	✓	✓	✓	✓	✓	00A 03E 067 068 069 06A 06B
Meganeivsedan	Driver's seat	✓	✓	✓	✓	✓	✓	00A 03E 0F0 0F1 0F2
Meganeivsedan	Front camera	✓	✓	✓	✓	✓	✓	00A 03E 09B
Meganeivsedan	Radio	✓	✓	✓	✓	✓	✓	00A 03E 048 061 062 09C 06F 09D 063 070
Meganeivsedan	Telematic ctrl unit	✓	✓	✓	✓	✓	✓	00A 03E 06F
Meganeivsedan	Left-hand door or passenger's seat	✓	✓	✓	✓	✓	✓	00A 03E 0F0 0F1 0F2
Meganeivsedan	Multimedia interface	✓	✓	✓	✓	✓	✓	00A 03E 09E 06F
Meganeivsedan	Amplifier	✓	✓	✓	✓	✓	✓	001 03E 09F 0A0
New sm3/fluence/megane	Engine System	✓	✓	✓	✓	✓	✓	001 002 003 004 009 00A 00B 00C 082 00D 00E 00F 010 011 014 074 015 016 017 018 019 01A 01B 086 01C 01D 01E 087 01F 021 023 024 025 026 027 028 029 02A 02B 02C 02D 02E 031 0D9
New	ABS	✓	✓	✓	✓	✓	✓	00A 03E 03F 040 041 042 043 047

New	Instrument panel	✓	✓	✓	✓	✓	✓	00A 03E 048 0A9 049 0CC 0E0 04A 04B 062 0AB
New	UCH	✓	✓	✓	✓	✓	✓	00A 0F3 0F4 0F5
New	Airbag/pretensioners	✓	✓	✓	✓	✓	✓	00A 03E 052 053 093
New	Air conditioning	✓	✓	✓	✓	✓	✓	00A 03E 054 085
New	Automatic gearbox	✓	✓	✓	✓	✓	✓	00A 03E 03F 0F6 0F7 0F8 044 056 057 058 059
sm3/fluence/megane	Communications unit	✓	✓	✓	✓	✓	✓	05A 05B 05C 05D 05E 05F
New	Parking brake	✓	✓	✓	✓	✓	✓	00A 03E 048 061 063
New	Blind spot detection	✓	✓	✓	✓	✓	✓	00A 03E 096 097
New	Variable PAS	✓	✓	✓	✓	✓	✓	00A 03E
New	TRACKER	✓	✓	✓	✓	✓	✓	00A 03E 0EA
New	UPC	✓	✓	✓	✓	✓	✓	001 0F9
New	SUNROOF CONTROL UNIT	✓	✓	✓	✓	✓	✓	001 03E 064 065 0F3 0FA 0FB
New	Lighting	✓	✓	✓	✓	✓	✓	00A 04C 0FC
New	Parking prox can	✓	✓	✓	✓	✓	✓	00A 03E 0D1
New	Driver's door	✓	✓	✓	✓	✓	✓	00A 03E 067 068 0CD 0CE
New	Radio	✓	✓	✓	✓	✓	✓	00A 03E 054
New	Telematic ctrl unit	✓	✓	✓	✓	✓	✓	001 00A 03E 06C 0C6 061 0E6 063 073 0D4 0E7
New	Multimedia interface	✓	✓	✓	✓	✓	✓	00A 03E 06F
New	Amplifier	✓	✓	✓	✓	✓	✓	001 03E 070 071 072
New	Multimed. connection	✓	✓	✓	✓	✓	✓	001 03E 06C 09F 0E8
New	BCB	✓	✓	✓	✓	✓	✓	00A 03E 03F 09E
New	BMS	✓	✓	✓	✓	✓	✓	00A 0FD 0FE 0FF
New	EVC	✓	✓	✓	✓	✓	✓	00A 100 101 102 103
New	PEB	✓	✓	✓	✓	✓	✓	00A 011 104 105 101 106 107 108
New	BMS safety	✓	✓	✓	✓	✓	✓	00A
sm3	Engine System	✓	✓	✓	✓	✓	✓	00A 109
sm3	ABS							
sm3	Airbag/pretensioners	✓	✓	✓	✓	✓	✓	
sm3	Automatic gearbox							
Scala/sm3-cf	Engine System	✓	✓	✓	✓	✓	✓	
Scala/sm3-cf	ABS	✓	✓	✓	✓	✓	✓	
Scala/sm3-cf	Instrument panel	✓	✓	✓	✓	✓	✓	
Scala/sm3-cf	Airbag/pretensioners	✓	✓	✓	✓	✓	✓	
Scala/sm3-cf	Automatic gearbox							
Scala/sm3-cf	Parking assistance	✓	✓	✓	✓	✓	✓	
Sm5	Engine System							
Sm5	ABS							
Sm5	UCH							
Sm5	Airbag/pretensioners							
Sm5	Automatic gearbox							
Sm5	GAS Injection	✓	✓	✓	✓	✓	✓	
Sm5 - EX	Engine System	✓	✓	✓	✓	✓	✓	
Sm5 - EX	ABS	✓	✓	✓	✓	✓	✓	
Sm5 - EX	Instrument panel	✓	✓	✓	✓	✓	✓	
Sm5 - EX	UCH	✓	✓	✓	✓	✓	✓	
Sm5 - EX	Airbag/pretensioners	✓	✓	✓	✓	✓	✓	
Sm5 - EX	Automatic gearbox	✓	✓	✓	✓	✓	✓	
Sm5 - EX	GAS Injection	✓	✓	✓	✓	✓	✓	
Sm5 - EX	UPC	✓	✓	✓	✓	✓	✓	
Sm5 - EX	Discharge Lamp	✓	✓	✓	✓	✓	✓	
Sm5 - EX	Parking assistance	✓	✓	✓	✓	✓	✓	
Sm5 - EX	Driver's seat	✓	✓	✓	✓	✓	✓	
Sm5 - EX	HANDS-FREE ACCESS	✓	✓	✓	✓	✓	✓	
Safrane2.0/sm5 - df	Engine System	✓	✓	✓	✓	✓	✓	
Safrane2.0/sm5 - df	ABS	✓	✓	✓	✓	✓	✓	
Safrane2.0/sm5 - df	Instrument panel	✓	✓	✓	✓	✓	✓	
Safrane2.0/sm5 - df	UCH	✓	✓	✓	✓	✓	✓	
Safrane2.0/sm5 - df	Airbag/pretensioners	✓	✓	✓	✓	✓	✓	
Safrane2.0/sm5 - df	Automatic gearbox	✓	✓	✓	✓	✓	✓	
Safrane2.0/sm5 - df	Variable PAS	✓	✓	✓	✓	✓	✓	00A 03E 10F 030 110 111
Safrane2.0/sm5 - df	UPC	✓	✓	✓	✓	✓	✓	
Safrane2.0/sm5 - df	Discharge Lamp	✓	✓	✓	✓	✓	✓	
Safrane2.0/sm5 - df	Parking assistance	✓	✓	✓	✓	✓	✓	
Safrane2.0/sm5 - df	Driver's seat	✓	✓	✓	✓	✓	✓	
Safrane2.0/sm5 - df	HANDS-FREE ACCESS	✓	✓	✓	✓	✓	✓	
Sm7	Engine System	✓	✓	✓	✓	✓	✓	
Sm7	ABS	✓	✓	✓	✓	✓	✓	
Sm7	Instrument panel	✓	✓	✓	✓	✓	✓	
Sm7	UCH	✓	✓	✓	✓	✓	✓	
Sm7	Airbag/pretensioners	✓	✓	✓	✓	✓	✓	
Sm7	Automatic gearbox	✓	✓	✓	✓	✓	✓	
Sm7	Variable PAS	✓	✓	✓	✓	✓	✓	
Sm7	UPC	✓	✓	✓	✓	✓	✓	
Sm7	Discharge Lamp	✓	✓	✓	✓	✓	✓	
Sm7	Parking assistance	✓	✓	✓	✓	✓	✓	
Sm7	Driver's seat	✓	✓	✓	✓	✓	✓	
Sm7	HANDS-FREE ACCESS	✓	✓	✓	✓	✓	✓	
Sm7-L47	Engine System	✓	✓	✓	✓	✓	✓	001 09E 00B 0A1 0A2 0A3 0A4 0A5 0A6 0DC 0DD
Sm7-L47	ABS	✓	✓	✓	✓	✓	✓	00A 03E 03F 040 041 042 043 045
Sm7-L47	Instrument panel	✓	✓	✓	✓	✓	✓	00A 03E 048 0A9 049 0CC 0E0 04A 04B 062 0AB
Sm7-L47	UCH	✓	✓	✓	✓	✓	✓	00A 080
Sm7-L47	Airbag/pretensioners	✓	✓	✓	✓	✓	✓	00A 03E 052 053 093
Sm7-L47	Air conditioning	✓	✓	✓	✓	✓	✓	00A 03E 094 054
Sm7-L47	Automatic gearbox	✓	✓	✓	✓	✓	✓	00A 03E 03F 044 055 056 057 058 059 05A 05B 05C 05D 05E 05F 060
Sm7-L47	Communications unit	✓	✓	✓	✓	✓	✓	00A 03E 03F 048
Sm7-L47	Parking brake	✓	✓	✓	✓	✓	✓	00A 03E 0C7 0E2
Sm7-L47	Blind spot detection	✓	✓	✓	✓	✓	✓	00A 03E
Sm7-L47	Variable PAS	✓	✓	✓	✓	✓	✓	00A 03E
Sm7-L47	UPC	✓	✓	✓	✓	✓	✓	001 03E 04C 064 065
Sm7-L47	Lighting	✓	✓	✓	✓	✓	✓	00A 03E 0D1
Sm7-L47	Parking prox can	✓	✓	✓	✓	✓	✓	00A 03E 067 068 0CD 0CE
Sm7-L47	Driver's door	✓	✓	✓	✓	✓	✓	00A 03E
Sm7-L47	Passenger's door	✓	✓	✓	✓	✓	✓	00A 03E
Sm7-L47	Driver's seat	✓	✓	✓	✓	✓	✓	00A 03E 0E5
Sm7-L47	Radio	✓	✓	✓	✓	✓	✓	001 00A 03E 06C 061 0E6 063 073 0D4 0E7 06D
Sm7-L47	Left-hand door or passenger's seat	✓			✓	✓	✓	054
Sm7-L47	Right-hand door or collapsible seat	✓			✓	✓	✓	054
Sm7-L47	Multimedia interface	✓	✓	✓	✓	✓	✓	001 03E 070 071
Sm7-L47	Amplifier	✓	✓	✓	✓	✓	✓	001 03E 06C 09F 0E8

Sm7-L47	Multimed. connection	✓	✓	✓	✓	✓		00A 03E 03F 09E
Safrane 2.3/sm7 - 1f	Engine System	✓	✓	✓	✓	✓	✓	
Safrane 2.3/sm7 - 1f	ABS	✓	✓	✓	✓	✓	✓	
Safrane 2.3/sm7 - 1f	Instrument panel	✓	✓	✓	✓	✓	✓	
Safrane 2.3/sm7 - 1f	UCH	✓	✓	✓	✓	✓	✓	
Safrane 2.3/sm7 - 1f	Airbag/pretensioners	✓	✓	✓	✓	✓	✓	
Safrane 2.3/sm7 - 1f	Automatic gearbox	✓	✓	✓	✓	✓	✓	
Safrane 2.3/sm7 - 1f	Variable PAS	✓	✓	✓	✓	✓	✓	
Safrane 2.3/sm7 - 1f	UPC	✓	✓	✓	✓	✓	✓	
Safrane 2.3/sm7 - 1f	Discharge Lamp	✓	✓	✓	✓	✓	✓	
Safrane 2.3/sm7 - 1f	Parking assistance	✓	✓	✓	✓	✓	✓	
Safrane 2.3/sm7 - 1f	Driver's seat	✓	✓	✓	✓	✓	✓	
Safrane 2.3/sm7 - 1f	HANDS-FREE ACCESS	✓	✓	✓	✓	✓	✓	
Talisman/sm6	Engine System	✓	✓	✓	✓	✓	✓	001 002 004 005 006 007 008 009 00A 00B 00C 00D 00E 00F 010 011 0E9 012 015 016 017 018 019 01A 01B 086 01C 01D 01E 087 01F 020 021 022 023 024 025 026 027 029 02A 02B 02C 088 00A 03E 0FA 040 041 042 043 044 045 0EB 047
Talisman/sm6	ABS	✓	✓	✓	✓	✓	✓	
Talisman/sm6	Instrument panel	✓	✓	✓	✓	✓	✓	00A 03E 08A 048 049 04A 062 08B 04C
Talisman/sm6	UCH	✓	✓	✓	✓	✓	✓	009 00A 04D 08C 08D 04E 08E 075 04F 08F 050
Talisman/sm6	Airbag/pretensioners	✓	✓	✓	✓	✓	✓	00A 03E 052 053 093
Talisman/sm6	Front radar	✓	✓	✓	✓	✓	✓	00A 03E
Talisman/sm6	Air conditioning	✓	✓	✓	✓	✓	✓	00A 03E 094 054
Talisman/sm6	Automatic gearbox	✓	✓	✓	✓	✓	✓	00A 03E 03F 056 057 058 059 0EE 05A 05B 05C
Talisman/sm6	Parking brake	✓	✓	✓	✓	✓	✓	00A 03E 096 097
Talisman/sm6	Variable PAS	✓	✓	✓	✓	✓	✓	00A 03E
Talisman/sm6	UPC	✓	✓	✓	✓	✓	✓	03E 04C 021 024 064 065 098 099
Talisman/sm6	Power back door	✓	✓	✓	✓	✓	✓	00A 09A
Talisman/sm6	Head up display	✓	✓	✓	✓	✓	✓	009 00A
Talisman/sm6	4 wheels steering	✓	✓	✓	✓	✓	✓	03E 112 113 114
Talisman/sm6	Parking prox can	✓	✓	✓	✓	✓	✓	00A 03E 067 068 069 06A 06B
Talisman/sm6	Piloted suspension	✓	✓	✓	✓	✓	✓	00A 03E
Talisman/sm6	Driver's seat	✓	✓	✓	✓	✓	✓	00A 03E 0F0 0F1 0F2
Talisman/sm6	Front camera	✓	✓	✓	✓	✓	✓	00A 03E 09B
Talisman/sm6	Radio	✓	✓	✓	✓	✓	✓	00A 03E 048 061 062 09C 06F 09D 063 070
Talisman/sm6	Telematic ctrl unit	✓	✓	✓	✓	✓	✓	00A 03E 06F
Talisman/sm6	Left-hand door or passenger's seat	✓	✓	✓	✓	✓	✓	00A 03E 0F0 0F1 0F2
Talisman/sm6	Multimedia interface	✓	✓	✓	✓	✓	✓	00A 03E 09E 06F
Talisman/sm6	Amplifier	✓	✓	✓	✓	✓	✓	001 03E 09F 0A0
X09	Instrument panel	✓	✓	✓	✓	✓	✓	00A 03E 0C3 03F 048 115 116 117 118
X09	UCH	✓	✓	✓	✓	✓	✓	00A 03E 119
X09	Airbag/pretensioners	✓	✓	✓	✓	✓	✓	00A 03E 052 053 11A 093 11B 11C 11D 11E 11F
X09	ADAPTATION UNIT	✓	✓	✓	✓	✓	✓	00A 03E 06C
X09	BCB	✓	✓	✓	✓	✓	✓	
X09	BMS	✓	✓	✓	✓	✓	✓	

Special Functions List

No.	Functions Name
SP0001	FAULT MEMORY
SP0002	EGR ADAPTIVES
SP0003	PRESSURE REGULATION ADAPTIVES
SP0004	PROGRAMMED VALUES
SP0005	CYLINDER NO. 1 INJECTOR CODE
SP0006	CYLINDER NO. 2 INJECTOR CODE
SP0007	CYLINDER NO. 3 INJECTOR CODE
SP0008	CYLINDER NO. 4 INJECTOR CODE
SP0009	WRITE V.I.N.
SP000A	UNLOCK INJECTOR CONTROL
SP000B	LOCK INJECTOR CONTROL
SP000C	FAULT MEMORY
SP000D	WRITE VIN
SP000E	AUTOMATIC RELOCKING
SP000F	FRONT FOG LIGHTS
SP0010	HAZARD WARNING LIGHTS ILLUMINATION BY ABS
SP0011	SEE-ME-HOME LIGHTING
SP0012	VEHICLE TYPE
SP0013	HEATING RESISTOR TYPE
SP0014	PREVENTION OF STOP LIGHT AUTO ILLUMINATION
SP0015	AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
SP0016	ESP AUTOMATIC RECONNECTION THRESHOLD
SP0017	VEHICLE PARAMETERS
SP0018	CONVERTER LOCK UP ADAPTIVE
SP0019	WRITE DATE OF LAST AFTER SALES OPERATION
SP001A	NOTE OIL WEAR COUNTER
SP001B	WRITE TRANSMISSION OIL CHANGE DATE
SP001C	COMPUTER TO CALIBRATE
SP001D	COMPUTER ADDRESS

SP001E	STEERING WHEEL ANGLE SENSOR PROGRAMMING
SP001F	WRITE DATE OF AFTER SALES OPERATION
SP0020	PULLING CORRECTION PROGRAM
SP0021	PULLING CORRECTION
SP0022	LOCK COMPUTER
SP0023	UNLOCK COMPUTER
SP0024	CURTAIN SIDE AIR BAG, DRIVER'S SIDE
SP0025	CURTAIN SIDE AIR BAG, PASSENGER SIDE
SP0026	FRONT THORAX SIDE AIR BAG, DRIVER SIDE
SP0027	FRONT THORAX SIDE AIR BAG, PASSENGER SIDE
SP0028	REAR THORAX SIDE AIR BAG, DRIVER SIDE
SP0029	REAR THORAX SIDE AIR BAG, PASSENGER SIDE
SP002A	PASSENGER FRONT AIR BAG CIRCUIT 2
SP002B	DRIVER FRONT AIR BAG CIRCUIT 1
SP002C	DRIVER FRONT AIR BAG CIRCUIT 2
SP002D	PASSENGER FRONT AIR BAG CIRCUIT 1
SP002E	PASSENGER AIR BAG LOCKING MODE
SP002F	DRIVER'S SEAT BUCKLE SENSOR
SP0030	PASSENGER'S SEAT BUCKLE SENSOR
SP0031	PASSENGER PRESENCE DETECTION SENSOR
SP0032	REAR INERTIA REELS
SP0033	PASSENGER'S LAP STRAP/SEAT AIRBAG
SP0034	DRIVER'S LAP STRAP/SEAT AIRBAG
SP0035	FRONT BUCKLE PRETENSIMETERS
SP0036	DRIVER'S SEAT POSITION SENSOR
SP0037	SIDE ON WHICH STEERING WHEEL FITTED
SP0038	PASSENGER SIDE REAR STRAP SENSOR
SP0039	DRIVER'S SIDE REAR STRAP SENSOR
SP003A	DRIVER' SIDE REAR FRONTAL AIRBAG
SP003B	PASSENGER SIDE REAR FRONTAL AIRBAG
SP003C	B/C WITHOUT SIDE AIRBAGS
SP003D	B/C WITH FRONT THORAX + HEAD AIRBAGS

SP003E	B/C WITH FR/RR THORAX + HEAD AIRBAGS
SP003F	G/S WITH HEAD AIRBAGS
SP0040	G/S WITHOUT HEAD AIRBAG
SP0041	J WITHOUT SIDE AIRBAGS
SP0042	J WITH SIDE AB W/O REAR CHEST AB
SP0043	E WITH SIDE AIRBAGS
SP0044	E WITHOUT SIDE AIRBAGS
SP0045	K/L WITHOUT SIDE AIRBAGS
SP0046	K/L WITH F CHEST + CURT AIRBAGS
SP0047	K/L WITH F/R CHEST + CURT AIRBAGS
SP0048	Oil change interval (in kilometers)
SP0049	OIL CHANGE INTERVAL IN MONTHS
SP004A	LANGUAGE CONFIGURATION
SP004B	FUEL TYPE
SP004C	DISTANCE UNITS
SP004D	OVERSPEED FUNCTION - ARABIA
SP004E	TRAJECTORY CONTROL
SP004F	CONSUMPTION MEASUREMENT UNITS
SP0050	TYRE PRESSURE MONITORING
SP0051	AUTOMATIC HANDBRAKE
SP0052	GEARBOX TYPE
SP0053	CRUISE CONTROL/SPEED LIMITER
SP0054	ROLL BARS
SP0055	VEHICLE CONFIGURATION
SP0056	SLOPE INITIALISATION
SP0057	SAVE CLUTCH PEDAL PROGRAMMING
SP0058	WRITE CLUTCH PEDAL PROGRAMMING
SP0059	NEW VEHICLE STORAGE MODE DEACTIVATION
SP005A	DEADLOCKING
SP005B	DRIVING TYPE
SP005C	WINDSCREEN TYPE
SP005D	SELECTIVE OPENING OF DOORS

SP005E	CHILDPROOF LOCK
SP005F	3-BUTTON KEY
SP0060	TAILGATE FLAP
SP0061	HEADLAMP WASHERS
SP0062	DRIVER'S LATERAL SENSOR
SP0063	Passenger's side sensor
SP0064	RESERVE CAPACITY
SP0065	BUZZER VOLUME
SP0066	VEHICLE IDENTIFICATION
SP0067	TONE ADJUSTMENT
SP0068	ALTERNATOR TYPE
SP0069	GEOGRAPHICAL ZONE
SP006A	ECU MEMORY
SP006B	DECREMENT IDLE SPEED
SP006C	INCREMENT OF IDLE SPEED
SP006D	FUEL SUPPLY PREVENTION
SP006E	AUDIO LINKS TEST
SP006F	LANGUAGE
SP0070	Maximum oil change mileage: current value (in kilometers)
SP0071	OIL CHANGE RANGE:CURRENT VALUE IN MONTHS
SP0072	UPDATE ODOMETER
SP0073	FUEL GAUGE CALIBRATION
SP0074	ADAC DISPLAY TYPE
SP0075	TANK CAPACITY
SP0076	UCH
SP0077	PARTICLE FILTER
SP0078	GAS RESERV. CAPAC.
SP0079	LANGUAGE VERSION.
SP007A	TYRE PRESSURE UNITS
SP007B	VOICE SYNTHESISER
SP007C	LIGHTS AUTOMATIC ILLUMINATION
SP007D	SEAT BELT REMINDER BUZZER

SP007E	CRUISE CONTR./SP. LIMIT. SPEED DIFF.
SP007F	CUSTOMER SETTINGS AND DETAILS
SP0080	NETHERLANDS LEGISLATION
SP0081	FAULT/S MEMORISED
SP0082	AUTOADAPTIVE
SP0083	HEATED WINDSCREEN
SP0084	COMPRESSOR TYPE
SP0085	DRIVE RATIO
SP0086	TYPE OF POWER STEERING
SP0087	EVAPORATOR TEMPERATURE SENSOR
SP0088	ESP SENSOR PROGRAMMING
SP0089	FUEL SENDER CALIBRATION (DOI).
SP008A	FUEL SENDER CALIBRATION (EUROPE)
SP008B	SPEEDO INDEX
SP008C	SYSTEM INITIALISATION
SP008D	DYNAMIC CORRECTION
SP008E	AUTOMATIC FOLD-DOWN HEADLIGHTS
SP008F	DIPPED HEADLIGHTS RAISE
SP0090	SIGNATURE
SP0091	CORNERING LAMP
SP0092	FRONT SEAT BELT RETRACTORS
SP0093	WITH FR CHEST AIRBAGS+HEAD-LEVEL AIRBAGS
SP0094	W FR CHEST AIRBAGS W/OUT HEAD-LVL AIRBAGS
SP0095	WITHOUT SIDE AIRBAGS
SP0096	DRIVER LAP STRAP PRETENSIONER
SP0097	PASSENGER LAP STRAP PRETENSIONER
SP0098	ABS/ESP CALIBRATION
SP0099	OBD MEMORY
SP009A	CHECK MOTOR TORQUE BY ABS
SP009B	SELECTOR LEVER LOCKING
SP009C	AIR CONDITIONING WITH WIRE CONNECTION
SP009D	ADAPTIVE CRUISE CONTROL

SP009E	P9X AT
SP009F	P9X MANUAL
SP00A0	V4Y AUTO BOX
SP00A1	V4Y MANUAL
SP00A2	OTHER AT
SP00A3	OTHER MANUAL
SP00A4	DISTANCE BEFORE NEXT OIL CHANGE
SP00A5	CHANGE IN TRIGGERING LIMIT
SP00A6	ENGINE/GEARBOX TYPE
SP00A7	INCREASE FUEL WARNING THRESHOLD
SP00A8	TEMPERATURE UNITS
SP00A9	HANDS FREE
SP00AA	NAVIGATION SYSTEM
SP00AB	VEHICLE SPEED SIGNAL TRANSMITTER
SP00AC	BODYWORK TYPE
SP00AD	CARD/KEY
SP00AE	CLOCK
SP00AF	RHEOSTAT PRESENCE
SP00B0	ENGINE TYPE
SP00B1	EXTERNAL TEMPERATURE SENSOR
SP00B2	REAR SCREEN WIPER
SP00B3	FOLLOWING TYRE CHANGE
SP00B4	HANDS-FREE FUNCTION
SP00B5	DAY RUNNING LIGHTS
SP00B6	TYRE PRESSURE MONITOR FUNCTION
SP00B7	DISCHARGE LAMP
SP00B8	ELECTRIC CHILD SAFETY
SP00B9	RAIN/LIGHT SENSOR
SP00BA	AUTO LOCKING WARNING SOUND
SP00BB	MEMORISING DRIVER'S SEAT POSITION
SP00BC	SUNROOF
SP00BD	HANDS-FREE START-UP

SP00BE	LIGHT SENSOR SENSITIVITY
SP00BF	HANDS FREE LOCKING
SP00C0	AUTOMATIC CLOSING OF WINDOWS (BY CARD)
SP00C1	VEHICLE FAMILY
SP00C2	INHIBITION OF SELECTIVE DOOR OPENING
SP00C3	ONE-TOUCH ELECTRIC WINDOW(S) / SUNROOF
SP00C4	PROGRAMMING REINITIALISATION
SP00C5	INTERVAL OF OIL CHANGE (OCS) OXIDATION
SP00C6	TEMPERATURE DISPLAY
SP00C7	STOP FUEL SUPPLY PREVENTION
SP00C8	ERASE STORED MISALIGNMENT
SP00C9	STEERING ANGLE OFFSET
SP00CA	KM
SP00CB	MILES
SP00CC	ERASE OVERHEATING COUNTER
SP00CD	ERASE INCORRECT CRANKING COUNTER
SP00CE	AIR CONDITIONING
SP00CF	THERMOPLUNGERS
SP00D0	AIR PATH PROGRAMMING
SP00D1	COMPUTER REINITIALISATION
SP00D2	COMPUTER RESET
SP00D3	AMPLIFIER RESET
SP00D4	NOISE-REDUCING MICROPHONE
SP00D5	SDO
SP00D6	TOUCH SCREEN
SP00D7	COUNTRY MODEL
SP00D8	TIME FORMAT
SP00D9	ENGINE ADAPTIVES
SP00DA	PROGRAMMING THROTTLE LIMITS
SP00DB	RICHNESS REGULATION PROGRAMMING
SP00DC	FLYWHEEL TARGET PROGRAMMING
SP00DD	CRUISE CONTROL/SPEED LIMITER PROGRAMMING

SP00DE	TURBOCHARGER PROGRAMMING
SP00DF	UPSTREAM OXYGEN SENSOR
SP00E0	VACUUM PUMP OPERATION REQUEST
SP00E1	OVERSPEED ALARM
SP00E2	COMPUTER INITIALISATION
SP00E3	FAULT MEMORY
SP00E4	INHIBITION OF 4-WHEEL DRIVE FUNCTION
SP00E5	REINSTATEMENT OF 4-WHEEL DRIVE FUNCTION
SP00E6	FRONT SLIDE LEARNING
SP00E7	REAR SLIDE LEARNING
SP00E8	LUMBAR LEARNING
SP00E9	STEERING WHEEL ANGLE OFFSET SENSOR
SP00EA	TRANSVERSE ACCELERATION OFFSET SENSOR
SP00EB	BRAKE PRESSURE OFFSET SENSOR
SP00EC	RESET
SP00ED	STEERING WHEEL ANGLE SENSOR
SP00EE	ACCELERATION SENSOR
SP00EF	TRAILER STABILITY FUNCTION
SP00F0	LONGITUDINAL ACCELERATION SENSOR OFFSET
SP00F1	TRANSVERSE ACCELERATION SENSOR
SP00F2	LONGITUDINAL ACCELERATION SENSOR
SP00F3	CAMSHAFT SENSOR PROGRAMMING
SP00F4	PARAMETRE PRIVE 1
SP00F5	CONFIGURATION PRIVEE 1
SP00F6	PROGRAMMING THE CODES OF THE FOUR VALVES
SP00F7	EGR VALVE PROGRAMMING
SP00F8	ADAPTIVES ON AIR INTAKE FLAP FAULT
SP00F9	AIR DAMPER VALVE PROGRAMMING
SP00FA	RAIL PRESSURE SENSOR ADAPTIVES
SP00FB	PROPORTIONAL RICHNESS SENSOR PROGRAMMING
SP00FC	EXHAUST FLAP LOW SETTING
SP00FD	LOW PRESSURE EGR VALVE PROGRAMMING

SP00FE	SWIRL FLAP PROGRAMMING
SP00FF	FUEL PUMP PROGRAMMING
SP0100	AIR FLOWMETER PROGRAMMING
SP0101	PARTICLE FILTER PRESSURE DIFF. SENSOR
SP0102	SWIRL FLAP
SP0103	INJECTION PUMP ADAPTATIVES
SP0104	STARTER ADAPTATIVES
SP0105	NUMBER OF STARTING CYCLES
SP0106	EGR BYPASS PROGRAMMING
SP0107	CATALYTIC CONVERTER
SP0108	HIGH PRESSURE PUMP COUNTER
SP0109	STOP AND START FUNCTION
SP010A	ALTERNATOR VOLTAGE SETPOINT
SP010B	OIL CHANGE INTERVAL (OCS): DILUTION
SP010C	ALCOHOL LEVEL PROG.
SP010D	ACTIVATE MAINTENANCE MODE
SP010E	DEACTIVATE MAINTENANCE MODE
SP010F	FRONT WHEEL CIRCUMFERENCE
SP0110	REAR WHEEL CIRCUMFERENCE
SP0111	RESET CLUTCH DATA
SP0112	RESET CLUTCH DATA PROTECTION
SP0113	RESET GEARBOX DATA
SP0114	NUMBER OF STARTING 1
SP0115	NUMBER OF STARTING 2
SP0116	NUMBER OF STARTING 3
SP0117	NUMBER OF STARTING 4
SP0118	DTC reset
SP0119	NUMBER OF STARTING
SP011A	CALCULATE BATTERY WEAR COUNTERS
SP011B	RESETTING INTERNAL PROTECTION
SP011C	CORROSION BATTERY COUNTER MEMORISED
SP011D	CORROSION BATTERY COUNTER ESTIMATED

SP011E	BATTERY CORROSION COUNTER
SP011F	BATTERY CYCLE COUNTER MEMORISED
SP0120	BATTERY CYCLE COUNTER ESTIMATED
SP0121	BATTERY CYCLE COUNTER
SP0122	STOP&START FUNCTION CONFIGURATION
SP0123	ALTERNATOR FLOATING VOLTAGE
SP0124	FRONT DETECTION
SP0125	REAR DETECTION
SP0126	SIDE DETECTION
SP0127	ILLUMINATE HAZARD LAMPS UPON IMPACT
SP0128	REMOTE LOCKING BUZZER
SP0129	ALARM
SP012A	SCANDINAVIAN RUNNINGS LIGHTS
SP012B	SECOND FITTING ALARM
SP012C	TRAILER PRESENT
SP012D	HANDS-FREE DEADLOCKING
SP012E	DEADLOCKING WITH REMOTE CONTROL ON KEY
SP012F	CONFIGURATION PRIVEE 3
SP0130	PROGRAMMING ROUTINE
SP0131	CONFIRM PROGRAMMING
SP0132	ABANDON PROGRAMMING
SP0133	READ CARD SIGNAL
SP0134	READ CARD 2 SIGNAL
SP0135	CONFIGURATION PRIVEE 2
SP0136	CONFIGURATION PRIVEE 4
SP0137	TESTING CARD PRESENTED
SP0138	HFM PROGRAMMING ROUTINE
SP0139	REMOTE ENGINE STARTING
SP013A	COLUMN STEERING LOCK
SP013B	CONFIGURATION RESERVEE 1
SP013C	INJECTOR ADAPTIVES
SP013D	WASTE GATE REGULATION

SP013E	PROGRAM CLUTCH ASSEMBLY
SP013F	AUTOMATIC GEARBOX CONTROL
SP0140	SHIFT FORK
SP0141	PASS AIRBAG DEACTIVATION WARNING LIGHT
SP0142	Driver's front air bag
SP0143	Passenger's front air bag
SP0144	IMPACT INFORMATION CONNECTION
SP0145	DRIVER'S FRONT BUCKLE PRETENSIONER
SP0146	PASSENGER'S FRONT BUCKLE PRETENSIONER
SP0147	PARKING ASSISTANCE
SP0148	DIRECTIONAL HEADLIGHTS
SP0149	Personalised oil change frequency
SP014A	ELECTRIC PUMP UNIT
SP014B	BATTERY CHARGE WARNING INFORMATION
SP014C	CAMSHAFT NO. 2 SENSOR PROGRAMMING
SP014D	CONTROL HEADLIGHT MOTORS
SP014E	STARTER WEAR COUNTER
SP014F	POWER BACK DOOR CYLINDER
SP0150	DRIVER START COUNTER
SP0151	IDLE STOP AND START COUNTER
SP0152	CONFIGURATION OF SYSTEM COMPONENTS
SP0153	PROGRAMME SLIP POINT
SP0154	ERASE AUTO-ADAPTIVE VALUES
SP0155	CLUTCH WORN
SP0156	PROGRAMMING SELECTION/ENGAGING ZONES
SP0157	WRITE CLUTCH INITIAL CLOSED POSITION
SP0158	SHIFT DRUM REFERENCE POSITION
SP0159	PROGRAM CLUTCH ADJUSTEMENT
SP015A	PROGRAMME CLUTCH POSITION
SP015B	PROGRAM CLUTCH 1 ADJUSTEMENT
SP015C	PROGRAM CLUTCH 2 ADJUSTEMENT
SP015D	ENGINE IMMOBILISER

SP015E	RESTART THE COMPUTER
SP015F	LCD DISPLAY FUEL GAUGE CALIBRATION
SP0160	ANALOGIC DISPLAY FUEL GAUGE CALIBRATION
SP0161	COMP CONFIGURATION
SP0162	DRIVE TYPE CONFIGURATION
SP0163	ADAC CONFIGURATION
SP0164	EXTERNAL TEMPERATURE
SP0165	FREE SHIFT
SP0166	SEAT BELT WARNING MODULE
SP0167	HILL START
SP0168	IMPROVED GRIP FUNCTION
SP0169	STOP AND START CONFIGURATION
SP016A	BUZZER
SP016B	ADBLUE TANK PROGRAMMING
SP016C	ADBLUE PUMP MODULE PROGRAMMING
SP016D	ADBLUE INJECTOR PROGRAMMING
SP016E	ADBLUE DOSING MODULE CATALYST
SP016F	ADBLUE SMALL QUANTITY TEST METERING
SP0170	ADBLUE LARGE VOLUME TEST METERING
SP0171	ADBLUE PRESSURE PREPARATION TEST
SP0172	ADBLUE SPRAY TEST
SP0173	ADBLUE EMPTYING TEST
SP0174	ADBLUE LEAK TEST
SP0175	ADBLUE INJECTOR RELEASE TEST
SP0176	ADBLUE BACKFLOW PUMP TEST
SP0177	ADBLUE FIRST FILLING TEST
SP0178	MEMORISATION OF SPEEDS
SP0179	FAN ASSEMBLY
SP017A	DRIVING WATER PUMP
SP017B	INVERTER FAN ASSEMBLY
SP017C	GEARBOX VEHICLE ACCELERATION SENSOR INIT.
SP017D	INJECTION TIME PROGRAMMING

SP017E	GEAR CHANGE PADDLES
SP017F	START AUTHORISATION FROM BMS SAFETY
SP0180	START AUTHORISATION FROM BMS
SP0181	CONFIGURATION OF THE SYSTEM
SP0182	CONSTRUCTOR/MANUFACTURER
SP0183	FLASHING BUZZER
SP0184	COMPUTER PROGRAMMING/INITIALISATION
SP0185	AVERAGE AIR TEMPERATURE
SP0186	PARTICLE FILTER RELATIVE PRESSURE SENSOR
SP0187	EXHAUST INJECTOR CIRCUIT
SP0188	PREHEATER UNIT
SP0189	PINKING SENSOR PROGRAMMING
SP018A	IGNITION COIL ADAPTIVE
SP018B	MODUS FUEL SENDER CALIBRATION (EUROPE)
SP018C	MODUS LONG FUEL SENDER CALIBRATION (EUROPE)
SP018D	VEHICLE FUNCTION PROGRAMMING
SP018E	ERASE IDLE REGULATION ADAPTIVES
SP018F	ASSISTED ENGAGEMENT WHEN STATIONARY
SP0190	ADAPTIVE VALUE - TPS
SP0191	ADAPTIVE VALUE - A/F RATIO
SP0192	CATALYTIC CONVERTER TEST
SP0193	COMMANDE PRIVEE 1
SP0194	EXTERNAL COMPONENTS
SP0195	EMERGENCY CALL NUMBER
SP0196	TEMPERATURE DISPLAY
SP0197	SUBWOOFER
SP0198	WITHOUT INHIBITION SWITCH
SP0199	SEAT BELT LIGHT
SP019A	DRIVER'S FRONT SIDE IMPACT SENSOR
SP019B	PASSENGER'S FRONT SIDE IMPACT SENSOR
SP019C	RADIO
SP019D	LIGHTING

SP019E	UNIT OF VOLUME
SP019F	CONFIGURATION RESERVEE 10
SP01A0	STEERING LOCK
SP01A1	SELF LEARNING VALUE ERASE -BUTANE RATIO MODELING
SP01A2	SELF LEARNING VALUE ERASE - FUEL PUMP PWM
SP01A3	FUEL PUMP FORCED CONVERSION
SP01A4	MODE NUMBER
SP01A5	AIR CONDITIONING TYPE
SP01A6	CALIBRATION
SP01A7	AUTOMATIC LOCKING WHEN DRIVING
SP01A8	WIPER INTERMITTENT SPEED RING
SP01A9	OPENING ELEMENTS CENTRAL LOCKING
SP01AA	AUTOMATIC LIGHTING FUNCTION
SP01AB	AUTOMATIC FRONT WIPER FUNCTION
SP01AC	KEY TYPE
SP01AD	GRADUAL SWITCHING ON AND OFF OF COURTESY LIGHT
SP01AE	DRIVER'S FRONT INERTIA REEL
SP01AF	PASSENGER'S FRONT INERTIA REEL
SP01B0	SENSOR OFFSETS
SP01B1	SLOPE SENSOR ADJUSTMENT
SP01B2	TYPE OF PARKING BRAKE
SP01B3	FREE SHIFT DISPLAY
SP01B4	POINTER ANIMATION
SP01B5	DAYTIME BACKLIGHTS
SP01B6	Blind spot detection
SP01B7	PROGRAMMING OF SEAT STOPS
SP01B8	HANDS-FREE CARDS LOW BATTERY COUNTER
SP01B9	INTERIOR AERIAL 1 TEST
SP01BA	INTERIOR AERIAL 2 TEST
SP01BB	EXTERNAL BOOT AERIAL TEST
SP01BC	FRONT LEFT-HAND EXTERNAL AERIAL TEST
SP01BD	FRONT RIGHT-HAND EXTERNAL AERIAL TEST

SP01BE	STORED ENERGY MANAGEMENT DATA
SP01BF	TIMED LIGHTING SUPPLY
SP01C0	VEH. SPEED AT INITIALISATION
SP01C1	NAVIGATION
SP01C2	GSM CONNECTIVITY
SP01C3	GSM ANTENNA CIRCUIT
SP01C4	PARAMETRE PRIVE 2
SP01C5	MODIFICATION OF PARAMETERS AFTER INITIALISATION
SP01C6	CONFIGURING THE MULTIMEDIA COMPUTER
SP01C7	IDLE SPEED REFERENCE
SP01C8	CLUTCH INITIAL CLOSED POSITION
SP01C9	WRITE DATE NEW CLUTCH FITTED
SP01CA	PROGRAM CLUTCH OPEN POSITION
SP01CB	COMPRESSOR FEEDBACK
SP01CC	TACHOGRAPH
SP01CD	ABS/ESP
SP01CE	TYRES
SP01CF	GSM ANTENNA
SP01D0	TRACTION BATTERY LOCK
SP01D1	TRACTION BATTERY INTERLOCK
SP01D2	INTERIOR LIGHTING
SP01D3	INTERIOR AMBIENCE LIGHTING
SP01D4	EEPROM MEMORY WRITE PROCEDURE
SP01D5	FRONT LEFT-HAND CHEST-LEVEL SIDE AIRBAG
SP01D6	LEFT-HAND CURTAIN AIRBAG
SP01D7	FRONT RIGHT-HAND CHEST-LEVEL SIDE AIRBAG
SP01D8	RIGHT-HAND CURTAIN AIRBAG
SP01D9	LEFT-HAND SIDE IMPACT SENSOR
SP01DA	RIGHT-HAND SIDE IMPACT SENSOR
SP01DB	FRONT LEFT-HAND SEAT BELT SENSOR
SP01DC	FRONT RIGHT-HAND SEAT BELT SENSOR
SP01DD	FRONT LEFT-HAND BUCKLE PRETENSIONER

SP01DE	FRONT RIGHT-HAND BUCKLE PRETENSIONER
SP01DF	ANGLE OF ASSEMBLY
SP01E0	VACUUM PUMP AGEING COUNTER
SP01E1	CHARGE WATER PUMP
SP01E2	HEATED
SP01E3	OVERSPEED LIGHT
SP01E4	RHEOSTAT LIGHTING
SP01E5	FUEL LEVEL DISPLAY UPDATE
SP01E6	ELECTRONIC POWER STEERING
SP01E7	PARAMETRAGE PRIVE 98
SP01E8	MAINTENANCE AUTONOMY INTERVAL IN KM
SP01E9	MAINTENANCE AUTONOMY INTERVAL IN MONTHS
SP01EA	MAINTENANCE AUTONOMY:CURRENT VALUE IN KM
SP01EB	MAINTENANCE AUTONOMY:CURRENT VALUE MONTH
SP01EC	PARAMETRE PRIVE 3
SP01ED	PARAMETRE PRIVE 4
SP01EE	SVT CONFIGURATION
SP01EF	EGR PROGRAMMING
SP01F0	MANIFOLD PRESSURE SENSOR PROGRAMMING
SP01F1	FUEL GAUGE CALIBRATION LCD (JAPAN)
SP01F2	FUEL GAUGE CALIBRATION NEEDLE (JAPAN)
SP01F3	DISTANCE BEFORE NEXT OIL CHANGE CONFIGURATION
SP01F4	REV COUNTER
SP01F5	INJECTION PROHIBITION
SP01F6	PARAMETRAGE PRIVE 250
SP01F7	RESET RADIO
SP01F8	BMS
SP01F9	INSTRUMENT PANEL
SP01FA	CHARGE PLUG
SP01FB	MODULE CHANGE
SP01FC	REAR LOUD SPEAKER
SP01FD	FRONT LEFT-HAND INERTIA WHEEL

SP01FE	FRONT RIGHT-HAND INERTIA WHEEL
SP01FF	INHIBIT EVAP STRATEGY
SP0200	ACTIVATE EVAP PROGRAMMING
SP0201	STATIC TEST
SP0202	PARAMETRAGE PRIVE 159
SP0203	PARAMETRAGE PRIVE 160
SP0204	BRAKE PEDAL POSITION 1 AND 2 SENSOR STATUS OFFSET
SP0205	PISTON PRESSURE SENSOR STATUS OFFSET
SP0206	MASTER CYLINDER PRESSURE SENSOR OFFSET
SP0207	PISTON PRESSURE SENSOR OFFSET
SP0208	UBP SOLENOID VALVE
SP0209	WHEEL CIRCUMFERENCE
SP020A	TRACTION BATTERY RANGE
SP020B	GEAR POSITIONS MEMORIZATION
SP020C	ECONOMETER
SP020D	FUEL FLOW REGULATOR
SP020E	INJECTOR ADAPTIVES NO. 1
SP020F	INJECTOR ADAPTIVES NO. 2
SP0210	INJECTOR ADAPTIVES NO. 3
SP0211	INJECTOR ADAPTIVES NO. 4
SP0212	WITH SWIRL FLAP
SP0213	OIL VAPOUR HEATER
SP0214	HOUR SETTING
SP0215	ESM CONFIGURATION
SP0216	ESM INHIBITION COMMAND
SP0217	ESM ACTIVATION COMMAND
SP0218	TUNING VERSION NUMBER
SP0219	LOAD AREA
SP021A	LAUNCH CONTROL COUNTER
SP021B	OIL PRESSURE WARNING THRESHOLD
SP021C	OIL TEMPERATURE MEASUREMENT THRESHOLD
SP021D	OIL MEASUREMENT TIMER

SP021E	PARKING PROXIMITY SENSOR FUNCTION
SP021F	VOICE SYNTHESISER
SP0220	FRONT BUZZER VOLUME
SP0221	FRONT TONE SETTING
SP0222	ALTERNATOR TYPE
SP0223	ADDITIONAL HEATING
SP0224	REAR SHELVES
SP0225	RAIN SENSOR
SP0226	AUTOMATIC SEAT RECALL
SP0227	CARD LOCKING
SP0228	CARD REMINDER WARNING
SP0229	TIMER COURTESY LIGHT
SP022A	DOOR UNLOCKING MODE
SP022B	Unlock mode. Door lift
SP022C	POWER-ASSISTED STEERING PROGRAM
SP022D	OVERSPEED ALARM FOR ARABIA
SP022E	REAR ACCESS AERIALS
SP022F	PREVENTION OF ELECTRICAL CONSUMERS
SP0230	STOP ELECTRICAL CONSUMER PREVENTION
SP0231	RAIN/LUMINOSITY SENSOR TYPE
SP0232	AUTOMATIC FOLDING OF DOOR MIRRORS
SP0233	NEUTRAL POSITION PROGRAMMING
SP0234	LIGHT SENSOR SIGNAL
SP0235	REINIT. EXTREME COLD REVERSE GEAR ENGAGEMENT
SP0236	TEST PARAMETERS
SP0237	PARTICLE FILTER ADAPTIVES
SP0238	CD CHANGER AND AUXILIARY INPUT
SP0239	MULTIPLEXED NETWORK CONFIGURATION
SP023A	VAN FAST IDLE SPEED INCREASE
SP023B	VAN FAST IDLE SPEED DECREASE
SP023C	BOILER
SP023D	REAR RIGHT-HAND INERTIA REEL

SP023E	REAR LEFT-HAND INERTIA WHEEL
SP023F	STEERING ANGLE SENSOR INITIALISATION
SP0240	ANTI-THEFT ALARM TRIGGER S/W
SP0241	ONE-TOUCH ELECTRIC WINDOW(S)
SP0242	HEAD LAMP BATTERY SAVER FUNCTION
SP0243	PASSENGER COMPARTMENT HEATING RESISTORS
SP0244	RAISING OF ELECT. WINDOW(WITH ANTI-PINCH)
SP0245	DONGLE
SP0246	INDICATOR LIGHT CONFIGURATION
SP0247	CD CHANGER
SP0248	SENSOR TYPE
SP0249	IDLE AIR VOLUME LEARNING - FACTORY MODE
SP024A	IDLE AIR VOLUME LEARNING - SERVICE MODE
SP024B	TOXICITY SENSOR
SP024C	REAR SCREEN DEMISTER
SP024D	HEATED REAR SCREEN INDICATOR LIGHT CIRCUIT
SP024E	PARAMETRAGE PRIVE 9
SP024F	RESET OIL CHANGE COUNTER
SP0250	SHOE LINING ENERGY COUNTER
SP0251	REAR BRAKE UNIT INITIALISATION
SP0252	REAR BRAKE UNIT REPOSITIONING
SP0253	BRAKE LINING FRICTION LEARNING
SP0254	IDLE SPEED LEARNING
SP0255	TORQUE LEARNING
SP0256	PARAMETRAGE PRIVE 237
SP0257	ENGINE PARAMETER ADAPTIVES
SP0258	POWER STEERING ELECTRIC PUMP UNIT
SP0259	NUMBER OF HEATING ELEMENTS
SP025A	HAZARD LAMPS RECALL ON TRF
SP025B	ADJUST OIL CHANGE COUNTER
SP025C	ABS TYPE
SP025D	RADIOFREQUENCY TYPE

SP025E	SUNROOF CONTROL UNIT
SP025F	UCH TYPE
SP0260	CRUISE CONTROL/SPEED LIMITER
SP0261	RAID FUNCTION AUTHORISATION BY DIAG
SP0262	TYPE N4
SP0263	WITH PASSENGER'S AIRBAGS
SP0264	WITHOUT PASSENGER'S AIRBAG
SP0265	WITHOUT PASSENGER'S FRONTAL AIRBAG
SP0266	WITHOUT PASSENGER SEAT
SP0267	WITHOUT AIRBAGS (PRETENSIONERS ONLY)
SP0268	WITH PASSENGER'S AIRBAGS
SP0269	COMP CONFIGURATION
SP026A	WITH SIDE AIRBAGS
SP026B	WITHOUT FUEL PUMP CUT-OUT
SP026C	WITH FUEL PUMP CUT-OUT
SP026D	DRIVER'S SIDE REAR INERTIA REEL
SP026E	PASSENGER'S SIDE REAR INERTIA REEL
SP026F	DRIVER'S SEAT SENSOR
SP0270	WITH RANGE EXTENSION
SP0271	WITHOUT RANGE EXTENSION
SP0272	100 Ah TRACTION BATTERY
SP0273	RANGE EXTENDER
SP0274	AIR CONDITIONING PROGRAMMING
SP0275	OIL CHANGE COUNTER OFFSET
SP0276	WITH AIR CONDITIONING
SP0277	WITHOUT AIR CONDITIONING
SP0278	WITH OBD
SP0279	WITHOUT OBD
SP027A	AIR CONDITIONING CONNECTION FAULT FINDING
SP027B	LEVER LOCKING CONNECTION FAULT FINDING
SP027C	ENGINE TORQUE CONTROL FUNCTION
SP027D	ENTER ACCESS CODE

SP027E	PROGRAMMING WITH 1 KEY
SP027F	PROGRAMMING WITH 2 KEYS
SP0280	WITH SDO
SP0281	WITHOUT SDO
SP0282	DIESEL/PETROL ENG IMMOB WITHOUT CODED SOL VALVE
SP0283	DIESEL ENGINE IMMOBILISER
SP0284	WITH INFRA-RED REMOTE CONTROL
SP0285	WITH RADIO FREQUENCY REMOTE CONTROL
SP0286	WITHOUT TIMED COURTESY LIGHT
SP0287	WITH TIMED COURTESY LIGHT
SP0288	CODED DIESEL SOLENOID VALVE ENGINE IMMOBILISER
SP0289	END OF KEY REALLOCATION VALIDATION
SP028A	ABANDON KEY REALLOCATION
SP028B	TYPE 1 UNIT
SP028C	TYPE 2 UNIT
SP028D	ENGINE IMMOBILISER AUTHORISATION
SP028E	ENGINE IMMOBILISER PROHIBITION
SP028F	WITH ALARM
SP0290	WITHOUT ALARM
SP0291	WITH AUTOMATIC TRANSMISSION
SP0292	WITHOUT AUTOMATIC TRANSMISSION
SP0293	WITH POWER ASSISTED STEERING
SP0294	WITHOUT POWER ASSISTED STEERING
SP0295	PREHEATING PREVENTION
SP0296	STOP PREHEATING PREVENTION
SP0297	POWER ASSISTED STEERING
SP0298	WITHOUT POWER STEERING ELECTRIC PUMP UNIT
SP0299	WITH POWER STEERING ELECTRIC PUMP UNIT
SP029A	WITH THERMOPLUNGERS
SP029B	WITHOUT THERMOPLUNGERS
SP029C	WITH BOILER
SP029D	WITHOUT BOILER

SP029E	WITHOUT AIR CONDITIONING
SP029F	WITH AIR CONDITIONING
SP02A0	ADAPTIVES ON EGR VALVE FAULT
SP02A1	CRUISE CONTROL/SPEED LIMITER
SP02A2	WITHOUT AIR CON. / WITHOUT HEATED WINDSCREEN
SP02A3	WITH AIR CON / WITHOUT HEATED WINDSCREEN
SP02A4	WITHOUT AIR CON / WITH HEATED WINDSCREEN
SP02A5	WITH AIR CONDITIONING / WITH HEATED WINDSCREEN
SP02A6	WITH CRUISE CONTROL
SP02A7	WITHOUT CRUISE CONTROL
SP02A8	WITHOUT SWIRL FLAP
SP02A9	CONTROL PANEL TYPE
SP02AA	BII TYPE
SP02AB	VEHICLE ENGINE TYPE
SP02AC	WITH TAILGATE MODULE
SP02AD	WITHOUT TAILGATE MODULE
SP02AE	WITH RADIO DISPLAY
SP02AF	WITHOUT RADIO DISPLAY
SP02B0	OPENING REAR SCREEN
SP02B1	FIXED REAR SCREEN
SP02B2	WITH AIR BAG
SP02B3	WITHOUT AIR BAG
SP02B4	SDM AIR BAG
SP02B5	EC5 AIR BAG
SP02B6	VEHICLE TYPE: ALL TYPES EXCEPT JEOP/JEOE
SP02B7	VEHICLE TYPE: JEOE OR JEOP
SP02B8	LEFT-HAND DRIVE
SP02B9	RIGHT HAND DRIVE
SP02BA	WITH ADAC
SP02BB	WITHOUT ADAC
SP02BC	WITH HAZARD LAMPS RECALL ON TRF
SP02BD	WITHOUT HAZARD LAMPS RECALL ON TRF

SP02BE	ONE-TOUCH CENTRAL DOOR LOCKING BUTTON
SP02BF	ROCKER CENTRAL DOOR LOCKING BUTTON
SP02C0	RAID FUNCTION AUTHORISATION
SP02C1	AUTO LOCKING WHEN DRIVING FUNCTION PREVENTION
SP02C2	WITHOUT VARIABLE INTERMITTENT WIPE
SP02C3	WITH VARIABLE W'SCREEN WIPER INTERMITTENT
SP02C4	WITHOUT OVERSPEED WARNING
SP02C5	WITH OVERSPEED WARNING
SP02C6	WITHOUT RUNNING LIGHTS
SP02C7	WITH RUNNING LIGHTS
SP02C8	WITH AUTOMATIC RE-LOCKING
SP02C9	WITHOUT AUTOMATIC RE-LOCKING
SP02CA	WITHOUT HAZARD LIGHTS UPON IMPACT
SP02CB	WITH HAZARD LIGHTS UPON IMPACT
SP02CC	NUMBER OF CYLINDERS CONFIGURATION
SP02CD	LEFT HAND DRIVE / 4 CYLINDER CONFIGURATION
SP02CE	LEFT HAND DRIVE / 6 CYLINDER CONFIGURATION
SP02CF	RIGHT HAND DRIVE / 4 CYLINDER CONFIGURATION
SP02D0	LEFT HAND DRIVE / DIESEL CONFIGURATION
SP02D1	RIGHT HAND DRIVE / 6 CYLINDER CONFIGURATION
SP02D2	RIGHT HAND DRIVE / DIESEL CONFIGURATION
SP02D3	ENGINE IMMOBILISER 2
SP02D4	WITH ABS
SP02D5	NO ABS
SP02D6	PETROL INJECTION
SP02D7	DIESEL INJECTION
SP02D8	WITH SELF LEVELLING SUSPENSION
SP02D9	WITHOUT SELF LEVELLING SUSPENSION
SP02DA	WITH CATALYTIC CONVERTER
SP02DB	WITHOUT CATALYTIC CONVERTER
SP02DC	OIL LEVEL DISPLAYED 20sec
SP02DD	OIL LEVEL DISPLAYED 20 sec WHEN ADAC PRESSED

SP02DE	ERASE OBD FAULT MEMORY
SP02DF	MEMORY SAVED
SP02E0	WITH MANUAL GEARBOX
SP02E1	IDLE SPEED SETTING INCREMENTATION
SP02E2	IDLE SPEED SETTING DECREMENTATION
SP02E3	WITH AC (FIXED CAPACITY COMPRESSOR)
SP02E4	WITH AC (VARIABLE CAPACITY COMPRESSOR)
SP02E5	OIL CHANGE COUNTER RESET
SP02E6	WITH HEATED REAR SCREEN
SP02E7	WITHOUT HEATED REAR SCREEN
SP02E8	WITH COOLANT SENSOR
SP02E9	WITHOUT COOLANT SENSOR
SP02EA	WITH EVAPORATOR TEMPERATURE SENSOR
SP02EB	WITHOUT EVAPORATOR TEMPERATURE SENSOR
SP02EC	WITH RECYCLING MOTOR TIMER
SP02ED	WITHOUT RECYCLING MOTOR TIMER
SP02EE	WITH PERMANENT TYPE CONTROL
SP02EF	WITH ONE-TOUCH TYPE CONTROL
SP02F0	WITH HARRISON TYPE COMPRESSOR
SP02F1	WITH SANDEN TYPE COMPRESSOR
SP02F2	BEHR PROBE CONFIGURATION
SP02F3	HOKURIKU PROBE CONFIGURATION
SP02F4	SIEMENS PROBE CONFIGURATION
SP02F5	EEPROM PROBE CONFIGURATION
SP02F6	CONFIGURATION WITH RECYCLING FLAP AUTO-SETTING
SP02F7	CONFIG. WITHOUT RECYCLING FLAP AUTO-SETTING
SP02F8	RIGHT HAND DRIVE
SP02F9	LEFT-HAND DRIVE
SP02FA	AVANTIME (F4R): WITH HEATED WINDSCREEN
SP02FB	AVANTIME (F4R): WITHOUT HEATED WINDSCREEN
SP02FC	AVANTIME(EXCEPT F4R):WITH HEATED WINDSCR.
SP02FD	AVANTIME(EXPT F4R):WITHOUT HEATED WINDSCR.

SP02FE	ESPACE: WITH EVAPORATOR SENSOR
SP02FF	ESPACE: WITHOUT EVAPORATOR SENSOR
SP0300	WRITING CONFORMITY
SP0301	WRITE SAVED DATA
SP0302	Enter injector codes.
SP0303	SAVE COMPUTER DATA
SP0304	START OBD TEST: CATALYTIC CONVERTER
SP0305	START OBD TEST: O2 SENSORS
SP0306	READ VALVE SET AND MEMORISED CODES
SP0307	SPARE
SP0308	CARD TESTING
SP0309	ENTER RECOMMENDED PRESSURES
SP030A	CHECK TARGET TEETH
SP030B	BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
SP030C	READING IMPACT CONTEXTS
SP030D	COMPUTER CALIBRATION AND OPERATION
SP030E	CHECKING A KEY
SP030F	PROGRAMMING A VALVE CODE
SP0310	READING THE VALVE SET AND VALVE CODES
SP0311	SELECTION OF VALVE SET
SP0312	HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
SP0313	MICROPHONE TEST
SP0314	SERIAL LINK TEST
SP0315	UCH
SP0316	PRESSURE SENSOR
SP0317	IGNITION MODULE CONFIGURATION
SP0318	SIDE SENSOR CONFIGURATION
SP0319	ACTUATORS SEQUENTIAL CONTROL
SP031A	UPC COMP. TYPE
SP031B	CHECK CARDS
SP031C	HANDS-FREE SYSTEM TEST
SP031D	UCH CONNECTIONS TEST -> CARD READER

SP031E	AERIAL TEST
SP031F	VALVE SET SELECTION
SP0320	ENTER VIN CODE
SP0321	REMOTE CONTROL CRUISE CONTROL
SP0322	CHECK UPSTREAM O2 SENSOR
SP0323	PARTICLE FILTER REGENERATION
SP0324	4E0000FF
SP0325	ACTIVATION OF CONNECTIVITY SERVICES
SP0326	ODOMETER IN KM
SP0327	ODOMETER IN MILES
SP0328	FRONT RADAR ADJUSTMENT
SP0329	PARAMETRAGE PRIVE 1
SP032A	STARTING AUTHORISED
SP032B	CYLINDER FUNCTION FAULT FINDING
SP032C	SPEED LIMITER
SP032D	FAST IDLE SPEED MODIFICATION
SP032E	ADAPTIVES AFTER REPLACING PARTICLE FILTER
SP032F	STOP AND START INHIBITION HISTORY
SP0330	ACCELEROMETER
SP0331	AUTOMATIC CONFIGURATION
SP0332	TYPE 1 BATTERY DISCONNECTION UNIT TEST
SP0333	MULTIPLE 12V BATTERIES
SP0334	SAVE NUMBER OF STARTS
SP0335	HIGH PRESSURE PUMP LEARNING
SP0336	STARTER LEARNING
SP0337	CARAVAN TOWING DISTANCE
SP0338	WIPING LEARNING
SP0339	ACCESS/STARTER TYPE
SP033A	MAKE
SP033B	OIL MEASUREMENT
SP033C	Flywheel target programming 1
SP033D	Flywheel target programming 2

SP033E	Flywheel target programming 3
SP033F	Flywheel target programming 4
SP0340	Flywheel target programming 5
SP0341	Flywheel target programming 6
SP0342	SENSOR CONFIGURATION
SP0343	COMMANDE PRIVEE 7
SP0344	COMMANDE PRIVEE 8
SP0345	IDLE AIR VOLUME LEARNING - FACTORY MODE
SP0346	COMPUTER PROGRAMMING
SP0347	CLUTCH TORQUE RECOVERY
SP0348	ADBLUE QUALITY SENSOR PROGRAMMING
SP0349	MANUAL GEAR POSITION
SP034A	PARAMETRAGE PRIVE 5
SP034B	RADAR-CAMERA ALIGNMENT ADJUSTEMENT
SP034C	RADAR-CAMERA DRIVING
SP034D	PARAMETRAGE PRIVE 4
SP034E	Flywheel target programming (RZ061)
SP034F	Flywheel target programming (RZ065)
SP0350	PARAMETRAGE PRIVE 2
SP0351	PARAMETRAGE PRIVE 3
SP0352	HYDRAULIC BRAKE COMPENSATION
SP0353	VACUUM PUMP
SP0354	FUEL FLAP LOCKING
SP0355	REAR WIPER/REVERSE GEAR CONNECTION
SP0356	REAR WIPER INFORMATION
SP0357	ACCELERATED IDLE
SP0358	HEATED REAR SCREEN VIA INJECTION SYSTEM
SP0359	PCHR NUMBER CONTROLLED
SP035A	AIR CONDITIONING MANAGEMENT
SP035B	UCH configuration
SP035C	AIR RECIRCULATION FLAP MOTOR
SP035D	TRACTION BATTERY RELAY

SP035E	TRACTION BATTERY DISCHARGE/CHARGE TEST
SP035F	INVERTER ACTIVATION REQUEST
SP0360	BLEED CLUTCH HYDRAULIC CIRCUIT
SP0361	Number plate
SP0362	ADAPTIVES AFTER REGENERATING PARTICLE FILTER
SP0363	FAULT FINDING: TYRE PRESSURE MONITOR WARNINGS
SP0364	PREPARATION BEFORE AUTOMATIC CONFIGURATION
SP0365	INITIALISATION AFTER AUTOMATIC CONFIGURATION
SP0366	BACKUP OF INSTRUMENT PANEL DATA FOR INJECTION
SP0367	WRITING OF INSTRUMENT PANEL DATA FOR INJECTION
SP0368	VEHICLE IDENTIFIER
SP0369	COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
SP036A	VALVE CODE READING
SP036B	RESETTING THE DILUTION RATIOS
SP036C	PROGRAMMING OF NO LOAD AND FULL LOAD POSITIONS
SP036D	HANDS-FREE CARD PROGRAMMING
SP036E	HANDS-FREE CARD READING
SP036F	REVERSING CAMERA CALIBRATION
SP0370	IGNITERS IN SERIES CONFIGURATION
SP0371	HIGH PRESSURE CIRCUIT LEAK TEST
SP0372	OIL SERVICE AND ODOMETRY MILES - KM
SP0373	PARAMETRAGE PRIVE 98
SP0374	VOLTMETER
SP0375	AMPMETER
SP0376	DISTANCE BEFORE NEXT MAINTENANCE
SP0377	PARAMETRAGE PRIVE 250
SP0378	REAR CAMERA CONFIGURATION
SP0379	PARAMETRAGE PRIVE 159
SP037A	PARAMETRAGE PRIVE 160
SP037B	CLUTCH END OF TRAVEL WIRING SWITCH
SP037C	GUIDELINES
SP037D	EMERGENCY CALL SERVICE

SP037E	TORQUE SENSOR
SP037F	PARAMETRAGE PRIVE 12
SP0380	PARAMETRAGE PRIVE 13
SP0381	Type
SP0382	PARAMETRAGE PRIVE 14
SP0383	PARAMETRAGE PRIVE 15
SP0384	CHASSIS WEAR PROGRAMMING
SP0385	CARD ACCUMULATOR CHARGE TESTER
SP0386	CARD BATTERY CHARGE TESTER
SP0387	LOCK LATCH LOCKING
SP0388	FROST MANAGEMENT MODE
SP0389	BLEEDING THE BRAKING SYSTEM
SP038A	PROGRAM BODY COMPUTER
SP038B	INSTRUMENT PANEL TYPE
SP038C	KEY PROGRAMMING
SP038D	WINDOW WINDER 1 DECONFIGURATION
SP038E	PROGRAMME PNEUMATIC SUSPENSION
SP038F	PUMP PRESSURE REGULATOR TYPE
SP0390	RADIO PROGRAMMING KEY
SP0391	IGNITION TIMING ADJUSTMENT
SP0392	PARAMETRAGE PRIVE 9
SP0393	PARAMETRAGE PRIVE 237
SP0394	PARAMETRAGE PRIVE 238
SP0395	PARAMETRAGE PRIVE 239
SP0396	PARAMETRAGE PRIVE 240
SP0397	Oil return to zero
SP0398	Oil return to zero (km)
SP0399	Oil return to zero (miles)