



Shenzhen Xtooltech Co., Ltd

ROMEO Function List V11.40

Tips and Instructions:

The programming function only supports H6PRO, H6PRO Master Edition products.

- * This feature is new.
- ✓ This feature is supported.
- This feature is not supported.
- ※ This feature is partially supported.

Vehicle	Model	Year/model	System	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Action Test	Special Functions
ALFA ROMEO	145	'98 1.4 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	145	'98 1.4 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	145	'98 1.4 TS 16V	Bosch Motronic M1.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓		
ALFA ROMEO	145	'98 1.4 TS 16V	Trw MY 97 Airbag (2F-2L)	✓	✓	✓	✓		
ALFA ROMEO	145	'98 1.4 TS 16V	TRW MY 97 Air Bag (2F-S)	✓	✓	✓	✓		
ALFA ROMEO	145	'98 1.4 TS 16V	TRW MY 97 Air Bag (2F-2L-S)	✓	✓	✓	✓		
ALFA ROMEO	145	'98 1.4 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	145	'98 1.6 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	145	'98 1.6 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	145	'98 1.6 TS 16V	Bosch Motronic M1.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓		
ALFA ROMEO	145	'98 1.6 TS 16V	Trw MY 97 Airbag (2F-2L)	✓	✓	✓	✓		
ALFA ROMEO	145	'98 1.6 TS 16V	TRW MY 97 Air Bag (2F-S)	✓	✓	✓	✓		
ALFA ROMEO	145	'98 1.6 TS 16V	TRW MY 97 Air Bag (2F-2L-S)	✓	✓	✓	✓		
ALFA ROMEO	145	'98 1.6 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	145	'98 1.8 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	145	'98 1.8 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	145	'98 1.8 TS 16V	Bosch Motronic M1.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓		
ALFA ROMEO	145	'98 1.8 TS 16V	Trw MY 97 Airbag (2F-2L)	✓	✓	✓	✓		
ALFA ROMEO	145	'98 1.8 TS 16V	TRW MY 97 Air Bag (2F-S)	✓	✓	✓	✓		
ALFA ROMEO	145	'98 1.8 TS 16V	TRW MY 97 Air Bag (2F-2L-S)	✓	✓	✓	✓		
ALFA ROMEO	145	'98 1.8 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	145	'98 2.0 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	145	'98 2.0 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	145	'98 2.0 TS 16V	Bosch Motronic M1.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓		
ALFA ROMEO	145	'98 2.0 TS 16V	Trw MY 97 Airbag (2F-2L)	✓	✓	✓	✓		
ALFA ROMEO	145	'98 2.0 TS 16V	TRW MY 97 Air Bag (2F-S)	✓	✓	✓	✓		
ALFA ROMEO	145	'98 2.0 TS 16V	TRW MY 97 Air Bag (2F-2L-S)	✓	✓	✓	✓		
ALFA ROMEO	145	'98 2.0 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	145	'99 1.9 JTD	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	145	'99 1.9 JTD	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	145	'99 1.9 JTD	Bosch Diesel EDC 15 Injection (1.9 TD D. I. Engine)	✓	✓	✓	✓		
ALFA ROMEO	145	'99 1.9 JTD	Trw MY 97 Airbag (2F-2L)	✓	✓	✓	✓		
ALFA ROMEO	145	'99 1.9 JTD	TRW MY 97 Air Bag (2F-S)	✓	✓	✓	✓		
ALFA ROMEO	145	'99 1.9 JTD	TRW MY 97 Air Bag (2F-2L-S)	✓	✓	✓	✓		
ALFA ROMEO	145	'99 1.9 JTD	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	145	1.3	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	145	1.3	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	145	1.3	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	145	1.4 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓			

ALFA ROMEO	145	1.4 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	145	1.4 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	145	1.6	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	145	1.6	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	145	1.6	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	145	1.6 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	145	1.6 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	145	1.6 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	145	1.7 16V	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	145	1.7 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	145	1.7 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	145	1.8 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	145	1.8 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	145	1.8 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	145	2.0 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	145	2.0 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	145	2.0 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	145	TD	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	145	TD	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	145	TD	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	146	'98 1.4 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	146	'98 1.4 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	146	'98 1.4 TS 16V	Bosch Motronic M1.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓		
ALFA ROMEO	146	'98 1.4 TS 16V	Trw MY 97 Airbag (2F-2L)	✓	✓	✓	✓		
ALFA ROMEO	146	'98 1.4 TS 16V	TRW MY 97 Air Bag (2F-S)	✓	✓	✓	✓		
ALFA ROMEO	146	'98 1.4 TS 16V	TRW MY 97 Air Bag (2F-2L-S)	✓	✓	✓	✓		
ALFA ROMEO	146	'98 1.4 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	146	'98 1.6 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	146	'98 1.6 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	146	'98 1.6 TS 16V	Bosch Motronic M1.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓		
ALFA ROMEO	146	'98 1.6 TS 16V	Trw MY 97 Airbag (2F-2L)	✓	✓	✓	✓		
ALFA ROMEO	146	'98 1.6 TS 16V	TRW MY 97 Air Bag (2F-S)	✓	✓	✓	✓		
ALFA ROMEO	146	'98 1.6 TS 16V	TRW MY 97 Air Bag (2F-2L-S)	✓	✓	✓	✓		
ALFA ROMEO	146	'98 1.6 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	146	'98 1.8 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	146	'98 1.8 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	146	'98 1.8 TS 16V	Bosch Motronic M1.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓		
ALFA ROMEO	146	'98 1.8 TS 16V	Trw MY 97 Airbag (2F-2L)	✓	✓	✓	✓		
ALFA ROMEO	146	'98 1.8 TS 16V	TRW MY 97 Air Bag (2F-S)	✓	✓	✓	✓		
ALFA ROMEO	146	'98 1.8 TS 16V	TRW MY 97 Air Bag (2F-2L-S)	✓	✓	✓	✓		
ALFA ROMEO	146	'98 1.8 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	146	'98 2.0 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	146	'98 2.0 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	146	'98 2.0 TS 16V	Bosch Motronic M1.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓		
ALFA ROMEO	146	'98 2.0 TS 16V	Trw MY 97 Airbag (2F-2L)	✓	✓	✓	✓		
ALFA ROMEO	146	'98 2.0 TS 16V	TRW MY 97 Air Bag (2F-S)	✓	✓	✓	✓		
ALFA ROMEO	146	'98 2.0 TS 16V	TRW MY 97 Air Bag (2F-2L-S)	✓	✓	✓	✓		
ALFA ROMEO	146	'98 2.0 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	146	'99 1.9 JTD	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	146	'99 1.9 JTD	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	146	'99 1.9 JTD	Bosch Diesel EDC 15 Injection (1.9 TD D. I. Engine)	✓	✓	✓	✓		
ALFA ROMEO	146	'99 1.9 JTD	Trw MY 97 Airbag (2F-2L)	✓	✓	✓	✓		
ALFA ROMEO	146	'99 1.9 JTD	TRW MY 97 Air Bag (2F-S)	✓	✓	✓	✓		
ALFA ROMEO	146	'99 1.9 JTD	TRW MY 97 Air Bag (2F-2L-S)	✓	✓	✓	✓		
ALFA ROMEO	146	'99 1.9 JTD	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	146	1.3	Borletti MCC55F Climate Control	✓	✓	✓			

ALFA ROMEO	146	1.3	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	146	1.3	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	146	1.4 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	146	1.4 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	146	1.4 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	146	1.6	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	146	1.6	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	146	1.6	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	146	1.6 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	146	1.6 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	146	1.6 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	146	1.7 16V	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	146	1.7 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	146	1.7 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	146	1.8 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	146	1.8 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	146	1.8 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	146	2.0 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	146	2.0 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	146	2.0 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	146	TD	Borletti MCC55F Climate Control	✓	✓	✓			
ALFA ROMEO	146	TD	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	146	TD	TRW MY 97 Airbag (2F)	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 105CV	Allied Airbag MY 97 (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 105CV	Bosch 8 ABS	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 105CV	Bosch 8 ASR ABS	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 105CV	Bosch 8 VDC ABS	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 105CV	Marelli Connect	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 105CV	Marelli Body Computer	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 105CV	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 105CV	Injection - Bosch Motronic Me7.3.1 Outside EEC (2 Lambdas)	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 105CV	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 105CV	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 105CV	Bosch Motronic Me7.3.1 EOBD Injection (2 Lambda Sensors)	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 105CV	Bosch ABS 5.7	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 105CV	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 105CV	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 105CV	TRW Driver's Door	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 105CV	TRW Boot	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 105CV	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	147	1.6 TS 16V 105CV	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	147	1.6 TS 16V 105CV	Mannesman VDO Instrument Panel	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 105CV	Delphi Climate Control (Single Zone)	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 105CV	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 120CV	Allied Airbag MY 97 (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 120CV	Bosch 8 ABS	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 120CV	Bosch 8 ASR ABS	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 120CV	Bosch 8 VDC ABS	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 120CV	Marelli Connect	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 120CV	Marelli Body Computer	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 120CV	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 120CV	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 120CV	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 120CV	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 120CV	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 120CV	Bosch ABS 5.7 VDC	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 120CV	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 120CV	Bosch ABS 5.7	✓	✓	✓	✓		

ALFA ROMEO	147	1.6 TS 16V 120CV	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 120CV	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 120CV	TRW Driver's Door	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 120CV	TRW Boot	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 120CV	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	147	1.6 TS 16V 120CV	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	147	1.6 TS 16V 120CV	Mannesman VDO Instrument Panel	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 120CV	Delphi Climate Control (Single Zone)	✓	✓	✓	✓		
ALFA ROMEO	147	1.6 TS 16V 120CV	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD	Allied Airbag MY 97 (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD	Bosch 8 ABS	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD	Bosch 8 ASR ABS	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD	Bosch 8 VDC ABS	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD	Marelli Connect	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD	Marelli Body Computer	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD	Bosch Diesel Injection EDC16C39 CF4/EOBD (Eng. 1.9/2.4)	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD	Bosch EDC15 CF3/EOBD Diesel Injection (Eng. 1.9/2.4)	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD	Bosch ABS 5.7 VDC	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD	Bosch ABS 5.7	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD	TRW Driver's Door	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD	TRW Boot	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	147	1.9 JTD	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	147	1.9 JTD	Mannesman VDO Instrument Panel	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD	Delphi Climate Control (Single Zone)	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD 16V	Allied Airbag MY 97 (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD 16V	Bosch 8 ABS	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD 16V	Bosch 8 ASR ABS	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD 16V	Bosch 8 VDC ABS	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD 16V	Marelli Connect	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD 16V	Marelli Body Computer	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD 16V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD 16V	Bosch Diesel Injection EDC16C39 CF4/EOBD (Eng. 1.9/2.4)	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD 16V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD 16V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD 16V	Bosch EDC16 CF3/EOBD Diesel Injection (1.9/2.4 Eng.)	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD 16V	Bosch ABS 5.7 VDC	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD 16V	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD 16V	Bosch ABS 5.7	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD 16V	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD 16V	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD 16V	TRW Driver's Door	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD 16V	TRW Boot	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	147	1.9 JTD 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	147	1.9 JTD 16V	Mannesman VDO Instrument Panel	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD 16V	Delphi Climate Control (Single Zone)	✓	✓	✓	✓		
ALFA ROMEO	147	1.9 JTD 16V	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓		
ALFA ROMEO	147	2.0 TS 16V	Allied Airbag MY 97 (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	147	2.0 TS 16V	Bosch 8 ABS	✓	✓	✓	✓		

ALFA ROMEO	147	2.0 TS 16V	Bosch 8 ASR ABS	✓	✓	✓	✓		
ALFA ROMEO	147	2.0 TS 16V	Bosch 8 VDC ABS	✓	✓	✓	✓		
ALFA ROMEO	147	2.0 TS 16V	Marelli Connect	✓	✓	✓	✓		
ALFA ROMEO	147	2.0 TS 16V	Marelli Body Computer	✓	✓	✓	✓		
ALFA ROMEO	147	2.0 TS 16V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	147	2.0 TS 16V	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓		
ALFA ROMEO	147	2.0 TS 16V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	147	2.0 TS 16V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	147	2.0 TS 16V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓		
ALFA ROMEO	147	2.0 TS 16V	Bosch ABS 5.7 VDC	✓	✓	✓	✓		
ALFA ROMEO	147	2.0 TS 16V	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓		
ALFA ROMEO	147	2.0 TS 16V	Bosch ABS 5.7	✓	✓	✓	✓		
ALFA ROMEO	147	2.0 TS 16V	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	147	2.0 TS 16V	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	147	2.0 TS 16V	TRW Driver's Door	✓	✓	✓	✓		
ALFA ROMEO	147	2.0 TS 16V	TRW Boot	✓	✓	✓	✓		
ALFA ROMEO	147	2.0 TS 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	147	2.0 TS 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	147	2.0 TS 16V	Mannesman VDO Instrument Panel	✓	✓	✓	✓		
ALFA ROMEO	147	2.0 TS 16V	Delphi Climate Control (Single Zone)	✓	✓	✓	✓		
ALFA ROMEO	147	2.0 TS 16V	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓		
ALFA ROMEO	147	GTA 3.2 V6	Allied Airbag MY 97 (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	147	GTA 3.2 V6	Bosch 8 ABS	✓	✓	✓	✓		
ALFA ROMEO	147	GTA 3.2 V6	Bosch 8 ASR ABS	✓	✓	✓	✓		
ALFA ROMEO	147	GTA 3.2 V6	Bosch 8 VDC ABS	✓	✓	✓	✓		
ALFA ROMEO	147	GTA 3.2 V6	Marelli Connect	✓	✓	✓	✓		
ALFA ROMEO	147	GTA 3.2 V6	Marelli Body Computer	✓	✓	✓	✓		
ALFA ROMEO	147	GTA 3.2 V6	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	147	GTA 3.2 V6	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	147	GTA 3.2 V6	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	147	GTA 3.2 V6	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓		
ALFA ROMEO	147	GTA 3.2 V6	Bosch ABS 5.7 VDC	✓	✓	✓	✓		
ALFA ROMEO	147	GTA 3.2 V6	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓		
ALFA ROMEO	147	GTA 3.2 V6	Bosch ABS 5.7	✓	✓	✓	✓		
ALFA ROMEO	147	GTA 3.2 V6	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	147	GTA 3.2 V6	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	147	GTA 3.2 V6	TRW Driver's Door	✓	✓	✓	✓		
ALFA ROMEO	147	GTA 3.2 V6	TRW Boot	✓	✓	✓	✓		
ALFA ROMEO	147	GTA 3.2 V6	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	147	GTA 3.2 V6	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	147	GTA 3.2 V6	Mannesman VDO Instrument Panel	✓	✓	✓	✓		
ALFA ROMEO	147	GTA 3.2 V6	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓		
ALFA ROMEO	147	GTA SELESPEED	Allied Airbag MY 97 (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	147	GTA SELESPEED	Bosch 8 ABS	✓	✓	✓	✓		
ALFA ROMEO	147	GTA SELESPEED	Bosch 8 ASR ABS	✓	✓	✓	✓		
ALFA ROMEO	147	GTA SELESPEED	Bosch 8 VDC ABS	✓	✓	✓	✓		
ALFA ROMEO	147	GTA SELESPEED	Marelli Automatic Gearbox SELESPEED CFC218F (1)	✓	✓	✓	✓		
ALFA ROMEO	147	GTA SELESPEED	Marelli Connect	✓	✓	✓	✓		
ALFA ROMEO	147	GTA SELESPEED	Marelli Body Computer	✓	✓	✓	✓		
ALFA ROMEO	147	GTA SELESPEED	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	147	GTA SELESPEED	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	147	GTA SELESPEED	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	147	GTA SELESPEED	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓		
ALFA ROMEO	147	GTA SELESPEED	Bosch ABS 5.7 VDC	✓	✓	✓	✓		
ALFA ROMEO	147	GTA SELESPEED	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓		
ALFA ROMEO	147	GTA SELESPEED	Bosch ABS 5.7	✓	✓	✓	✓		
ALFA ROMEO	147	GTA SELESPEED	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	147	GTA SELESPEED	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	147	GTA SELESPEED	TRW Driver's Door	✓	✓	✓	✓		

ALFA ROMEO	147	GTA SELESPEED	TRW Boot	✓	✓	✓	✓		
ALFA ROMEO	147	GTA SELESPEED	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	147	GTA SELESPEED	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	147	GTA SELESPEED	Mannesman VDO Instrument Panel	✓	✓	✓	✓		
ALFA ROMEO	147	GTA SELESPEED	Delphi Climate Control (Single Zone)	✓	✓	✓	✓		
ALFA ROMEO	147	GTA SELESPEED	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓		
ALFA ROMEO	147	SELESPEED	Allied Airbag MY 97 (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	147	SELESPEED	Bosch 8 ABS	✓	✓	✓	✓		
ALFA ROMEO	147	SELESPEED	Bosch 8 ASR ABS	✓	✓	✓	✓		
ALFA ROMEO	147	SELESPEED	Bosch 8 VDC ABS	✓	✓	✓	✓		
ALFA ROMEO	147	SELESPEED	Marelli Connect	✓	✓	✓	✓		
ALFA ROMEO	147	SELESPEED	Marelli Body Computer	✓	✓	✓	✓		
ALFA ROMEO	147	SELESPEED	Marelli Automatic Gearbox SELESPEED CFC208F (1)	✓	✓	✓	✓		
ALFA ROMEO	147	SELESPEED	Marelli CFC208F SELESPEED Automatic Gearbox	✓	✓	✓	✓		
ALFA ROMEO	147	SELESPEED	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	147	SELESPEED	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓		
ALFA ROMEO	147	SELESPEED	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	147	SELESPEED	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	147	SELESPEED	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓		
ALFA ROMEO	147	SELESPEED	Bosch ABS 5.7 VDC	✓	✓	✓	✓		
ALFA ROMEO	147	SELESPEED	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓		
ALFA ROMEO	147	SELESPEED	Bosch ABS 5.7	✓	✓	✓	✓		
ALFA ROMEO	147	SELESPEED	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	147	SELESPEED	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	147	SELESPEED	TRW Driver's Door	✓	✓	✓	✓		
ALFA ROMEO	147	SELESPEED	TRW Boot	✓	✓	✓	✓		
ALFA ROMEO	147	SELESPEED	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	147	SELESPEED	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	147	SELESPEED	Mannesman VDO Instrument Panel	✓	✓	✓	✓		
ALFA ROMEO	147	SELESPEED	Delphi Climate Control (Single Zone)	✓	✓	✓	✓		
ALFA ROMEO	147	SELESPEED	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓		
ALFA ROMEO	155	1.6 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	155	1.7 TS	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	155	1.8 TS	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	155	1.8 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	155	2.0 TS	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	155	2.0 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	155	2.5 TD	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	155	TD	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	155	V6	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	156	1.6 TS 16V	Allied Airbag MY 97 (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	156	1.6 TS 16V	Allied MY 97 Air Bag (2F-2P-2L-I-S)	✓	✓	✓	✓		
ALFA ROMEO	156	1.6 TS 16V	Allied MY 97 Air Bag (2F-2P)	✓	✓	✓	✓		
ALFA ROMEO	156	1.6 TS 16V	Allied MY 97 Airbag (2F-2P-2L-I)	✓	✓	✓	✓		
ALFA ROMEO	156	1.6 TS 16V	Allied MY97 Airbag (2F-2P-I-S)	✓	✓	✓	✓		
ALFA ROMEO	156	1.6 TS 16V	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓		
ALFA ROMEO	156	1.6 TS 16V	Bosch Electronic Key Code 2	✓	✓	✓	✓		
ALFA ROMEO	156	1.6 TS 16V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓		
ALFA ROMEO	156	1.6 TS 16V	Bosch Motronic M1.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓		
ALFA ROMEO	156	1.6 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	156	1.6 TS 16V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓			
ALFA ROMEO	156	1.6 TS 16V	VAS 97/1 Door Lock RF Receiver/Alarm	✓	✓	✓			
ALFA ROMEO	156	1.6 TS 16V	Harrison Climate Control	✓	✓	✓			
ALFA ROMEO	156	1.6 TS 16V	Allied MY 97 Airbag (2F-2P-I)	✓	✓	✓	✓		
ALFA ROMEO	156	1.8 TS 16V	Allied Airbag MY 97 (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	156	1.8 TS 16V	Allied MY 97 Air Bag (2F-2P-2L-I-S)	✓	✓	✓	✓		

ALFA ROMEO	156	1.8 TS 16V	Allied MY 97 Air Bag (2F-2P)	✓	✓	✓	✓		
ALFA ROMEO	156	1.8 TS 16V	Allied MY 97 Airbag (2F-2P-2L-1)	✓	✓	✓	✓		
ALFA ROMEO	156	1.8 TS 16V	Allied MY97 Airbag (2F-2P-1-S)	✓	✓	✓	✓		
ALFA ROMEO	156	1.8 TS 16V	Bosch Motronic M1.5.5 Injection	✓	✓	✓	✓		
ALFA ROMEO	156	1.8 TS 16V	Bosch Electronic Key Code 2	✓	✓	✓	✓		
ALFA ROMEO	156	1.8 TS 16V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓		
ALFA ROMEO	156	1.8 TS 16V	Bosch Motronic M1.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓		
ALFA ROMEO	156	1.8 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	156	1.8 TS 16V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓			
ALFA ROMEO	156	1.8 TS 16V	VAS 97/1 Door Lock RF Receiver/Alarm	✓	✓	✓			
ALFA ROMEO	156	1.8 TS 16V	Harrison Climate Control	✓	✓	✓			
ALFA ROMEO	156	1.8 TS 16V	Allied MY 97 Airbag (2F-2P-1)	✓	✓	✓	✓		
ALFA ROMEO	156	1.9 JTD	Allied Airbag MY 97 (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	156	1.9 JTD	Allied MY 97 Air Bag (2F-2P-2L-1-S)	✓	✓	✓	✓		
ALFA ROMEO	156	1.9 JTD	Allied MY 97 Air Bag (2F-2P)	✓	✓	✓	✓		
ALFA ROMEO	156	1.9 JTD	Allied MY 97 Airbag (2F-2P-2L-1)	✓	✓	✓	✓		
ALFA ROMEO	156	1.9 JTD	Allied MY97 Airbag (2F-2P-1-S)	✓	✓	✓	✓		
ALFA ROMEO	156	1.9 JTD	Bosch Electronic Key Code 2	✓	✓	✓	✓		
ALFA ROMEO	156	1.9 JTD	Bosch Diesel EDC 15 Injection (1.9 TD D. I. Engine)	✓	✓	✓	✓		
ALFA ROMEO	156	1.9 JTD	Bosch EDC15 CF3/EOBD Diesel Injection (Eng. 1.9/2.4)	✓	✓	✓	✓		
ALFA ROMEO	156	1.9 JTD	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	156	1.9 JTD	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓			
ALFA ROMEO	156	1.9 JTD	VAS 97/1 Door Lock RF Receiver/Alarm	✓	✓	✓			
ALFA ROMEO	156	1.9 JTD	Harrison Climate Control	✓	✓	✓			
ALFA ROMEO	156	1.9 JTD	Allied MY 97 Airbag (2F-2P-1)	✓	✓	✓	✓		
ALFA ROMEO	156	2.0 TS 16V	Allied Airbag MY 97 (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	156	2.0 TS 16V	Allied MY 97 Air Bag (2F-2P-2L-1-S)	✓	✓	✓	✓		
ALFA ROMEO	156	2.0 TS 16V	Allied MY 97 Air Bag (2F-2P)	✓	✓	✓	✓		
ALFA ROMEO	156	2.0 TS 16V	Allied MY 97 Airbag (2F-2P-2L-1)	✓	✓	✓	✓		
ALFA ROMEO	156	2.0 TS 16V	Allied MY97 Airbag (2F-2P-1-S)	✓	✓	✓	✓		
ALFA ROMEO	156	2.0 TS 16V	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓		
ALFA ROMEO	156	2.0 TS 16V	Bosch Motronic M1.5.5 Injection	✓	✓	✓	✓		
ALFA ROMEO	156	2.0 TS 16V	Bosch Electronic Key Code 2	✓	✓	✓	✓		
ALFA ROMEO	156	2.0 TS 16V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓		
ALFA ROMEO	156	2.0 TS 16V	Bosch Motronic M1.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓		
ALFA ROMEO	156	2.0 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	156	2.0 TS 16V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓			
ALFA ROMEO	156	2.0 TS 16V	VAS 97/1 Door Lock RF Receiver/Alarm	✓	✓	✓			
ALFA ROMEO	156	2.0 TS 16V	Harrison Climate Control	✓	✓	✓			
ALFA ROMEO	156	2.0 TS 16V	Allied MY 97 Airbag (2F-2P-1)	✓	✓	✓	✓		
ALFA ROMEO	156	2.4 JTD	Allied Airbag MY 97 (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	156	2.4 JTD	Allied MY 97 Air Bag (2F-2P-2L-1-S)	✓	✓	✓	✓		
ALFA ROMEO	156	2.4 JTD	Allied MY 97 Air Bag (2F-2P)	✓	✓	✓	✓		
ALFA ROMEO	156	2.4 JTD	Allied MY 97 Airbag (2F-2P-2L-1)	✓	✓	✓	✓		
ALFA ROMEO	156	2.4 JTD	Allied MY97 Airbag (2F-2P-1-S)	✓	✓	✓	✓		
ALFA ROMEO	156	2.4 JTD	Bosch Electronic Key Code 2	✓	✓	✓	✓		
ALFA ROMEO	156	2.4 JTD	Bosch EDC15 Diesel Injection (2.4 TD D. I. Eng.)	✓	✓	✓	✓		
ALFA ROMEO	156	2.4 JTD	Bosch EDC15 CF3/EOBD Diesel Injection (Eng. 1.9/2.4)	✓	✓	✓	✓		
ALFA ROMEO	156	2.4 JTD	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	156	2.4 JTD	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓			
ALFA ROMEO	156	2.4 JTD	VAS 97/1 Door Lock RF Receiver/Alarm	✓	✓	✓			
ALFA ROMEO	156	2.4 JTD	Harrison Climate Control	✓	✓	✓			
ALFA ROMEO	156	2.4 JTD	Allied MY 97 Airbag (2F-2P-1)	✓	✓	✓	✓		
ALFA ROMEO	156	2.5 V6 24V	AISIN Q-SYSTEM Automatic Gearbox	✓	✓	✓	✓		

ALFA ROMEO	156	2.5 V6 24V	Allied Airbag MY 97 (2F-2P-2L-2T-I)	✓	✓	✓	✓		
ALFA ROMEO	156	2.5 V6 24V	Allied MY 97 Air Bag (2F-2P-2L-I-S)	✓	✓	✓	✓		
ALFA ROMEO	156	2.5 V6 24V	Allied MY 97 Air Bag (2F-2P)	✓	✓	✓	✓		
ALFA ROMEO	156	2.5 V6 24V	Allied MY97 Airbag (2F-2P-I-S)	✓	✓	✓	✓		
ALFA ROMEO	156	2.5 V6 24V	Injection - Bosch Motronic Me3.1 (Eng. V6) Outside EEC	✓	✓	✓	✓		
ALFA ROMEO	156	2.5 V6 24V	Bosch Electronic Key Code 2	✓	✓	✓	✓		
ALFA ROMEO	156	2.5 V6 24V	Bosch Motronic EOBD ME3.1 Injection (Eng. V6)	✓	✓	✓	✓		
ALFA ROMEO	156	2.5 V6 24V	Bosch 5.3 ABS	✓	✓	✓	✓		
ALFA ROMEO	156	2.5 V6 24V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓		
ALFA ROMEO	156	2.5 V6 24V	VAS 97/1 Door Lock RF Receiver/Alarm	✓	✓	✓	✓		
ALFA ROMEO	156	2.5 V6 24V	Harrison Climate Control	✓	✓	✓	✓		
ALFA ROMEO	156	2.5 V6 24V	Allied MY 97 Airbag (2F-2P-I)	✓	✓	✓	✓		
ALFA ROMEO	156	2.5 V6 24V	Allied MY 97 Airbag (2F-2P-2L-I)	✓	✓	✓	✓		
ALFA ROMEO	156	SELESPEED	Allied Airbag MY 97 (2F-2P-2L-2T-I)	✓	✓	✓	✓		
ALFA ROMEO	156	SELESPEED	Allied MY 97 Air Bag (2F-2P-2L-I-S)	✓	✓	✓	✓		
ALFA ROMEO	156	SELESPEED	Allied MY 97 Air Bag (2F-2P)	✓	✓	✓	✓		
ALFA ROMEO	156	SELESPEED	Allied MY 97 Airbag (2F-2P-2L-I)	✓	✓	✓	✓		
ALFA ROMEO	156	SELESPEED	Marelli SELESPEED Automatic Gearbox	✓	✓	✓	✓		
ALFA ROMEO	156	SELESPEED	Allied MY97 Airbag (2F-2P-I-S)	✓	✓	✓	✓		
ALFA ROMEO	156	SELESPEED	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓		
ALFA ROMEO	156	SELESPEED	Bosch Electronic Key Code 2	✓	✓	✓	✓		
ALFA ROMEO	156	SELESPEED	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓		
ALFA ROMEO	156	SELESPEED	Bosch Motronic ME3.1 Injection (Selespeed)	✓	✓	✓	✓		
ALFA ROMEO	156	SELESPEED	Bosch 5.3 ABS	✓	✓	✓	✓		
ALFA ROMEO	156	SELESPEED	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓		
ALFA ROMEO	156	SELESPEED	VAS 97/1 Door Lock RF Receiver/Alarm	✓	✓	✓	✓		
ALFA ROMEO	156	SELESPEED	Harrison Climate Control	✓	✓	✓	✓		
ALFA ROMEO	156	SELESPEED	Allied MY 97 Airbag (2F-2P-I)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.6 TS 16V	Bosch ABS 5.7	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.6 TS 16V	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.6 TS 16V	Bosch ABS 5.7 VDC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.6 TS 16V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.6 TS 16V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.6 TS 16V	Bosch Electronic Key Code 2	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.6 TS 16V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.6 TS 16V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.6 TS 16V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.6 TS 16V	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.6 TS 16V	Delphi Climate Control	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.8 TS 16V	Bosch ABS 5.7	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.8 TS 16V	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.8 TS 16V	Bosch ABS 5.7 VDC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.8 TS 16V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.8 TS 16V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.8 TS 16V	Bosch Electronic Key Code 2	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.8 TS 16V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.8 TS 16V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.8 TS 16V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.8 TS 16V	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.8 TS 16V	Delphi Climate Control	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.9 JTD	Bosch ABS 5.7	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.9 JTD	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.9 JTD	Bosch ABS 5.7 VDC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.9 JTD	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.9 JTD	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.9 JTD	Bosch Electronic Key Code 2	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.9 JTD	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		

ALFA ROMEO	156 MY	1.9 JTD	Bosch EDC15 CF3/E0BD Diesel Injection (Eng. 1.9/2.4)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.9 JTD	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓			
ALFA ROMEO	156 MY	1.9 JTD	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.9 JTD	Delphi Climate Control	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.9 JTD 16V	Bosch ABS 5.7	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.9 JTD 16V	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.9 JTD 16V	Bosch ABS 5.7 VDC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.9 JTD 16V	Bosch Diesel Injection EDC16C39 CF4/E0BD (Eng. 1.9/2.4)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.9 JTD 16V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.9 JTD 16V	Bosch Electronic Key Code 2	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.9 JTD 16V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.9 JTD 16V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.9 JTD 16V	Bosch EDC16 CF3/E0BD Diesel Injection (1.9/2.4 Eng.)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.9 JTD 16V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓			
ALFA ROMEO	156 MY	1.9 JTD 16V	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	1.9 JTD 16V	Delphi Climate Control	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.0 TS 16V	Bosch ABS 5.7	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.0 TS 16V	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.0 TS 16V	Bosch ABS 5.7 VDC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.0 TS 16V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.0 TS 16V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.0 TS 16V	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.0 TS 16V	Bosch Electronic Key Code 2	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.0 TS 16V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.0 TS 16V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓			
ALFA ROMEO	156 MY	2.0 TS 16V	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.0 TS 16V	Delphi Climate Control	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.4 JTD 10V	Bosch ABS 5.7	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.4 JTD 10V	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.4 JTD 10V	Bosch ABS 5.7 VDC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.4 JTD 10V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.4 JTD 10V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.4 JTD 10V	Bosch Electronic Key Code 2	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.4 JTD 10V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.4 JTD 10V	Bosch EDC15 CF3/E0BD Diesel Injection (Eng. 1.9/2.4)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.4 JTD 10V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓			
ALFA ROMEO	156 MY	2.4 JTD 10V	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.4 JTD 10V	Delphi Climate Control	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.4 JTD 20V	Bosch ABS 5.7	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.4 JTD 20V	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.4 JTD 20V	Bosch ABS 5.7 VDC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.4 JTD 20V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.4 JTD 20V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.4 JTD 20V	Bosch Electronic Key Code 2	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.4 JTD 20V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.4 JTD 20V	Bosch EDC16 CF3/E0BD Diesel Injection (1.9/2.4 Eng.)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.4 JTD 20V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓			
ALFA ROMEO	156 MY	2.4 JTD 20V	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.4 JTD 20V	Delphi Climate Control	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.5 V6 24V	AISIN Q-SYSTEM Automatic Gearbox	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.5 V6 24V	Bosch ABS 5.7	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.5 V6 24V	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.5 V6 24V	Bosch ABS 5.7 VDC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.5 V6 24V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.5 V6 24V	Bosch Electronic Key Code 2	✓	✓	✓	✓		

ALFA ROMEO	156 MY	2.5 V6 24V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.5 V6 24V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.5 V6 24V	Bosch Motronic EOBD ME3.1 Injection (Eng. V6)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.5 V6 24V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.5 V6 24V	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	2.5 V6 24V	Delphi Climate Control	✓	✓	✓	✓		
ALFA ROMEO	156 MY	GTA 3.2 V6	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	GTA 3.2 V6	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	GTA 3.2 V6	Bosch Electronic Key Code 2	✓	✓	✓	✓		
ALFA ROMEO	156 MY	GTA 3.2 V6	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	GTA 3.2 V6	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	GTA 3.2 V6	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓		
ALFA ROMEO	156 MY	GTA 3.2 V6	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓		
ALFA ROMEO	156 MY	GTA 3.2 V6	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	GTA 3.2 V6	Delphi Climate Control	✓	✓	✓	✓		
ALFA ROMEO	156 MY	GTA SELESPEED	Bosch ABS 5.7	✓	✓	✓	✓		
ALFA ROMEO	156 MY	GTA SELESPEED	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	GTA SELESPEED	Bosch ABS 5.7 VDC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	GTA SELESPEED	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	GTA SELESPEED	Marelli SELESPEED CFC218F Automatic Gearbox	✓	✓	✓	✓		
ALFA ROMEO	156 MY	GTA SELESPEED	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	GTA SELESPEED	Bosch Electronic Key Code 2	✓	✓	✓	✓		
ALFA ROMEO	156 MY	GTA SELESPEED	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	GTA SELESPEED	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓		
ALFA ROMEO	156 MY	GTA SELESPEED	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓		
ALFA ROMEO	156 MY	GTA SELESPEED	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	GTA SELESPEED	Delphi Climate Control	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS 2.0	Bosch ABS 5.7	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS 2.0	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS 2.0	Bosch ABS 5.7 VDC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS 2.0	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS 2.0	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS 2.0	Bosch Electronic Key Code 2	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS 2.0	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS 2.0	Bosch Motronic Med7.11 Extra EEC Injection	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS 2.0	Bosch Motronic Med7.11 EOBD Injection	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS 2.0	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS 2.0	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS 2.0	Delphi Climate Control	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS SELESPEED	Bosch ABS 5.7	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS SELESPEED	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS SELESPEED	Bosch ABS 5.7 VDC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS SELESPEED	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS SELESPEED	Marelli CFC208F SELESPEED Automatic Gearbox	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS SELESPEED	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS SELESPEED	Bosch Electronic Key Code 2	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS SELESPEED	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS SELESPEED	Bosch Motronic Med7.11 EOBD Injection	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS SELESPEED	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS SELESPEED	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	JTS SELESPEED	Delphi Climate Control	✓	✓	✓	✓		
ALFA ROMEO	156 MY	SELESPEED	Bosch ABS 5.7	✓	✓	✓	✓		
ALFA ROMEO	156 MY	SELESPEED	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	SELESPEED	Bosch ABS 5.7 VDC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	SELESPEED	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	SELESPEED	Marelli CFC208F SELESPEED Automatic Gearbox	✓	✓	✓	✓		

ALFA ROMEO	156 MY	SELESPEED	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	SELESPEED	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓		
ALFA ROMEO	156 MY	SELESPEED	Bosch Electronic Key Code 2	✓	✓	✓	✓		
ALFA ROMEO	156 MY	SELESPEED	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	SELESPEED	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓		
ALFA ROMEO	156 MY	SELESPEED	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓		
ALFA ROMEO	156 MY	SELESPEED	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓		
ALFA ROMEO	156 MY	SELESPEED	Delphi Climate Control	✓	✓	✓	✓		
ALFA ROMEO	159	1.8 16V	Siemens VDO CF4/EOBD Injection (Eng. 1.8)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	Convergence Lauberhorn C1	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	Instrument Panel Siemens 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	Marelli Radio Navigator	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	Body Computer Marelli 3	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	Steering Lock TRW 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	TRW Lucas ABS	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	ESP TRW Lucas ABS	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	Driver's Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	Passenger Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	Boot G.E. PROCOND 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	Driver's Door G.E. PROCOND 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	Tyre Pressure Control TRW 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	Passenger Door G.E. PROCOND 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	Valeo Parking Control Unit	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 16V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	Bosch Injection Motronic Med17.3.1 CF5/EOBD (Eng. 1.8)	✓	✓	✓	✓		
ALFA ROMEO	159	1.8 JTS TB 16V	Convergence Lauberhorn C1	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	Instrument Panel Siemens 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	Marelli Radio Navigator	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	Body Computer Marelli 3	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	Steering Lock TRW 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	TRW Lucas ABS	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	ESP TRW Lucas ABS	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	Driver's Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	Passenger Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	Boot G.E. PROCOND 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	Driver's Door G.E. PROCOND 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	Tyre Pressure Control TRW 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	Passenger Door G.E. PROCOND 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	Valeo Parking Control Unit	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.8 JTS TB 16V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓	✓	

ALFA ROMEO	159	1.9 JTS 16V	Bosch Motronic Injection Med7.6.1 CF4/EOBD (Eng. 1.9/2.2)	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 JTS 16V	Convergence Lauberhorn C1	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 JTS 16V	Instrument Panel Siemens 2	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 JTS 16V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 JTS 16V	Marelli Radio Navigator	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 JTS 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 JTS 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 JTS 16V	Body Computer Marelli 3	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 JTS 16V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 JTS 16V	Steering Lock TRW 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 JTS 16V	TRW Lucas ABS	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 JTS 16V	ESP TRW Lucas ABS	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 JTS 16V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 JTS 16V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 JTS 16V	Driver's Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 JTS 16V	Passenger Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 JTS 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 JTS 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 JTS 16V	Boot G.E. PROCOND 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 JTS 16V	Driver's Door G.E. PROCOND 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 JTS 16V	Tyre Pressure Control TRW 2	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 JTS 16V	Passenger Door G.E. PROCOND 2	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 JTS 16V	Valeo Parking Control Unit	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 JTS 16V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 JTS 16V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 MJET 16V	Automatic Gearbox AISIN AF40-6	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 MJET 16V	Bosch Diesel Injection EDC16C39 CF4/EOBD (Eng. 1.9/2.4)	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 MJET 16V	Convergence Lauberhorn C1	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 16V	Instrument Panel Siemens 2	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 MJET 16V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 16V	Marelli Radio Navigator	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 16V	Body Computer Marelli 3	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 16V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 16V	Steering Lock TRW 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 16V	TRW Lucas ABS	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 MJET 16V	ESP TRW Lucas ABS	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 MJET 16V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 16V	Driver's Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 16V	Passenger Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 16V	Boot G.E. PROCOND 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 16V	Driver's Door G.E. PROCOND 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 16V	Tyre Pressure Control TRW 2	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 MJET 16V	Passenger Door G.E. PROCOND 2	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 MJET 16V	Valeo Parking Control Unit	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 MJET 16V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 MJET 16V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 MJET 8V	Automatic Gearbox AISIN AF40-6	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 MJET 8V	Bosch Diesel Injection EDC16C39 CF4/EOBD (Eng. 1.9/2.4)	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 MJET 8V	Convergence Lauberhorn C1	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 8V	Instrument Panel Siemens 2	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 MJET 8V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 8V	Marelli Radio Navigator	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 8V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 8V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓	✓	

ALFA ROMEO	159	1.9 MJET 8V	Body Computer Marelli 3	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 8V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 8V	Steering Lock TRW 2	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 MJET 8V	TRW Lucas ABS	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 MJET 8V	ESP TRW Lucas ABS	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 MJET 8V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 8V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 8V	Driver's Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 8V	Passenger Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 8V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 8V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 8V	Boot G.E. PROCOND 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 8V	Driver's Door G.E. PROCOND 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	1.9 MJET 8V	Tyre Pressure Control TRW 2	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 MJET 8V	Passenger Door G.E. PROCOND 2	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 MJET 8V	Valeo Parking Control Unit	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 MJET 8V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	159	1.9 MJET 8V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	159	2.0 JTD 16V	Bosch Dese Injection EDC16C39 CF5/E0BD (1.6/1.9/2.0 Eng.)	✓	✓	✓	✓		
ALFA ROMEO	159	2.0 JTD 16V	Convergence Lauberhorn C1	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.0 JTD 16V	Instrument Panel Siemens 2	✓	✓	✓	✓		
ALFA ROMEO	159	2.0 JTD 16V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.0 JTD 16V	Marelli Radio Navigator	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.0 JTD 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.0 JTD 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.0 JTD 16V	Body Computer Marelli 3	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.0 JTD 16V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.0 JTD 16V	Steering Lock TRW 2	✓	✓	✓	✓		
ALFA ROMEO	159	2.0 JTD 16V	TRW Lucas ABS	✓	✓	✓	✓		
ALFA ROMEO	159	2.0 JTD 16V	ESP TRW Lucas ABS	✓	✓	✓	✓		
ALFA ROMEO	159	2.0 JTD 16V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.0 JTD 16V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.0 JTD 16V	Driver's Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.0 JTD 16V	Passenger Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.0 JTD 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.0 JTD 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.0 JTD 16V	Boot G.E. PROCOND 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.0 JTD 16V	Driver's Door G.E. PROCOND 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.0 JTD 16V	Tyre Pressure Control TRW 2	✓	✓	✓	✓		
ALFA ROMEO	159	2.0 JTD 16V	Passenger Door G.E. PROCOND 2	✓	✓	✓	✓		
ALFA ROMEO	159	2.0 JTD 16V	Valeo Parking Control Unit	✓	✓	✓	✓		
ALFA ROMEO	159	2.0 JTD 16V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	159	2.0 JTD 16V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	159	2.2 JTS 16V	Bosch Motronic Injection Med7.6.1 CF4/E0BD (Eng. 1.9/2.2)	✓	✓	✓	✓		
ALFA ROMEO	159	2.2 JTS 16V	Marelli SELESPEED CFC300 Automatic Gearbox	✓	✓	✓	✓		
ALFA ROMEO	159	2.2 JTS 16V	Convergence Lauberhorn C1	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.2 JTS 16V	Instrument Panel Siemens 2	✓	✓	✓	✓		
ALFA ROMEO	159	2.2 JTS 16V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.2 JTS 16V	Marelli Radio Navigator	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.2 JTS 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.2 JTS 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓		
ALFA ROMEO	159	2.2 JTS 16V	Body Computer Marelli 3	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.2 JTS 16V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.2 JTS 16V	Steering Lock TRW 2	✓	✓	✓	✓		
ALFA ROMEO	159	2.2 JTS 16V	TRW Lucas ABS	✓	✓	✓	✓		
ALFA ROMEO	159	2.2 JTS 16V	ESP TRW Lucas ABS	✓	✓	✓	✓		
ALFA ROMEO	159	2.2 JTS 16V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.2 JTS 16V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓	✓	

ALFA ROMEO	159	2.2 JTS 16V	Driver's Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.2 JTS 16V	Passenger Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.2 JTS 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.2 JTS 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.2 JTS 16V	Boot G.E. PROCOND 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.2 JTS 16V	Driver's Door G.E. PROCOND 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.2 JTS 16V	Tyre Pressure Control TRW 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.2 JTS 16V	Passenger Door G.E. PROCOND 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.2 JTS 16V	Valeo Parking Control Unit	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.2 JTS 16V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.2 JTS 16V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Automatic Gearbox AISIN AF40-6	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Bosch Diesel Injection EDC16C39 CF4/EOBD (Eng. 1.9/2.4)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Convergence Lauberhorn C1	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Instrument Panel Siemens 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Marelli Radio Navigator	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Body Computer Marelli 3	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Steering Lock TRW 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	TRW Lucas ABS	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	ESP TRW Lucas ABS	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Driver's Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Passenger Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Boot G.E. PROCOND 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Driver's Door G.E. PROCOND 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Tyre Pressure Control TRW 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Passenger Door G.E. PROCOND 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Valeo Parking Control Unit	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	2.4 MJET 20V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	3.2 V6 24V	Automatic Gearbox AISIN AF40-6	✓	✓	✓	✓	✓	
ALFA ROMEO	159	3.2 V6 24V	Bosch Motronic Med7.6.2 CF4/EOBD Injection (Eng. 3.2)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	3.2 V6 24V	Convergence Lauberhorn C1	✓	✓	✓	✓	✓	
ALFA ROMEO	159	3.2 V6 24V	Instrument Panel Siemens 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	3.2 V6 24V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	3.2 V6 24V	Marelli Radio Navigator	✓	✓	✓	✓	✓	
ALFA ROMEO	159	3.2 V6 24V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	3.2 V6 24V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	3.2 V6 24V	Body Computer Marelli 3	✓	✓	✓	✓	✓	
ALFA ROMEO	159	3.2 V6 24V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	3.2 V6 24V	Steering Lock TRW 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	3.2 V6 24V	TRW Lucas ABS	✓	✓	✓	✓	✓	
ALFA ROMEO	159	3.2 V6 24V	ESP TRW Lucas ABS	✓	✓	✓	✓	✓	
ALFA ROMEO	159	3.2 V6 24V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	3.2 V6 24V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	159	3.2 V6 24V	Driver's Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	3.2 V6 24V	Passenger Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	3.2 V6 24V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	159	3.2 V6 24V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	159	3.2 V6 24V	Boot G.E. PROCOND 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	3.2 V6 24V	Driver's Door G.E. PROCOND 2	✓	✓	✓	✓	✓	
ALFA ROMEO	159	3.2 V6 24V	Tyre Pressure Control TRW 2	✓	✓	✓	✓	✓	

ALFA ROMEO	159	3.2 V6 24V	Passenger Door G.E. PROCOND 2	✓	✓	✓	✓		
ALFA ROMEO	159	3.2 V6 24V	Valeo Parking Control Unit	✓	✓	✓	✓		
ALFA ROMEO	159	3.2 V6 24V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	159	3.2 V6 24V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	164	2.0 TS ECO	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	164	QV 24V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	164	SUPER 2.0 TS	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	164	SUPER TD	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	164	SUPER V6 24V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	164	SUPER V6 24V C.A.E.	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	164	SUPER V6 TB	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	164	V6 ECO	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	164	V6 ECO C.A.	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	166	'03 2.4 JTD 20V	AISIN YL11 5 Automatic Gearbox (1)	✓	✓	✓	✓		
ALFA ROMEO	4C	2013	ECM (Engine Control Module)	✓	✓	✓	✓	✓	sp03154, sp03155, sp03156, sp03157, sp03158, sp03159, sp03160
ALFA ROMEO	4C	2013	TCM (Transmission Control Module)	✓	✓	✓	✓		
ALFA ROMEO	4C	2013	ABS (Anti Lock Brakes)	✓	✓	✓	✓	✓	sp03161, sp03162, sp03163, sp03164
ALFA ROMEO	4C	2013	ORC (Occupant Restraint)	✓	✓	✓	✓		
ALFA ROMEO	4C	2013	TPM (Tire Pressure Monitor)	✓	✓	✓	✓	✓	sp03165, sp03166, sp03167, sp03168, sp03169, sp03170, sp03171
ALFA ROMEO	4C	2013	PAM (Parking Aid Module)	✓	✓	✓	✓		sp03174
ALFA ROMEO	4C	2013	IPC (Instrument Panel)	✓	✓	✓	✓	✓	sp03175, sp03176, sp03177, sp03178
ALFA ROMEO	4C	2013	BCM (Body Control Module)	✓	✓	✓	✓	✓	✓
ALFA ROMEO	BRERA	1.8 JTS TB 16V	Bosch Injection Motronic Med17.3.1 CF5/E0BD (Eng. 1.8)	✓	✓	✓	✓		
ALFA ROMEO	BRERA	1.8 JTS TB 16V	Instrument Panel Siemens 2	✓	✓	✓	✓		
ALFA ROMEO	BRERA	1.8 JTS TB 16V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	1.8 JTS TB 16V	Marelli Radio Navigator	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	1.8 JTS TB 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	1.8 JTS TB 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓		
ALFA ROMEO	BRERA	1.8 JTS TB 16V	Body Computer Marelli 4	✓	✓	✓	✓		
ALFA ROMEO	BRERA	1.8 JTS TB 16V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	1.8 JTS TB 16V	Steering Lock TRW 2	✓	✓	✓	✓		
ALFA ROMEO	BRERA	1.8 JTS TB 16V	TRW Air Bag MY 03 (2F-2P-2L-2G-1)	✓	✓	✓	✓		
ALFA ROMEO	BRERA	1.8 JTS TB 16V	TRW Air Bag MY 03 (2F-2P-2L-1G-1)	✓	✓	✓	✓		
ALFA ROMEO	BRERA	1.8 JTS TB 16V	TRW Lucas ABS	✓	✓	✓	✓		
ALFA ROMEO	BRERA	1.8 JTS TB 16V	ESP TRW Lucas ABS	✓	✓	✓	✓		
ALFA ROMEO	BRERA	1.8 JTS TB 16V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	1.8 JTS TB 16V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	1.8 JTS TB 16V	Driver's Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	1.8 JTS TB 16V	Passenger Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	1.8 JTS TB 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	1.8 JTS TB 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	1.8 JTS TB 16V	G.E. PROCOND 4 Driver's Door	✓	✓	✓	✓		
ALFA ROMEO	BRERA	1.8 JTS TB 16V	G.E. PROCOND 4 Passenger's Door	✓	✓	✓	✓		
ALFA ROMEO	BRERA	1.8 JTS TB 16V	Tyre Pressure Control TRW 2	✓	✓	✓	✓		
ALFA ROMEO	BRERA	1.8 JTS TB 16V	Valeo Parking Control Unit	✓	✓	✓	✓		
ALFA ROMEO	BRERA	1.8 JTS TB 16V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	BRERA	1.8 JTS TB 16V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	BRERA	2.0 JTD 16V	Bosch Diese Injection EDC16C39 CF5/E0BD (1.6/1.9/2.0 Eng.)	✓	✓	✓	✓		
ALFA ROMEO	BRERA	2.0 JTD 16V	Instrument Panel Siemens 2	✓	✓	✓	✓		
ALFA ROMEO	BRERA	2.0 JTD 16V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.0 JTD 16V	Marelli Radio Navigator	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.0 JTD 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.0 JTD 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓		
ALFA ROMEO	BRERA	2.0 JTD 16V	Body Computer Marelli 4	✓	✓	✓	✓		
ALFA ROMEO	BRERA	2.0 JTD 16V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.0 JTD 16V	Steering Lock TRW 2	✓	✓	✓	✓		
ALFA ROMEO	BRERA	2.0 JTD 16V	TRW Air Bag MY 03 (2F-2P-2L-2G-1)	✓	✓	✓	✓		
ALFA ROMEO	BRERA	2.0 JTD 16V	TRW Air Bag MY 03 (2F-2P-2L-1G-1)	✓	✓	✓	✓		
ALFA ROMEO	BRERA	2.0 JTD 16V	TRW Lucas ABS	✓	✓	✓	✓		

ALFA ROMEO	BRERA	2.0 JTD 16V	ESP TRW Lucas ABS	✓	✓	✓	✓		
ALFA ROMEO	BRERA	2.0 JTD 16V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.0 JTD 16V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.0 JTD 16V	Driver's Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.0 JTD 16V	Passenger Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.0 JTD 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.0 JTD 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.0 JTD 16V	G.E. PROCOND 4 Driver's Door	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.0 JTD 16V	G.E. PROCOND 4 Passenger's Door	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.0 JTD 16V	Tyre Pressure Control TRW 2	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.0 JTD 16V	Valeo Parking Control Unit	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.0 JTD 16V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.0 JTD 16V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	Bosch Motronic Injection Med7.6.1 CF4/EOBD (Eng. 1.9/2.2)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	Marelli SELESPEED CFC300 Automatic Gearbox	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	Instrument Panel Siemens 2	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	Marelli Radio Navigator	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	Body Computer Marelli 4	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	Steering Lock TRW 2	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	TRW Air Bag MY 03 (2F-2P-2L-2G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	TRW Air Bag MY 03 (2F-2P-2L-1G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	TRW Lucas ABS	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	ESP TRW Lucas ABS	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	Driver's Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	Passenger Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	G.E. PROCOND 4 Driver's Door	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	G.E. PROCOND 4 Passenger's Door	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	Tyre Pressure Control TRW 2	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	Valeo Parking Control Unit	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.2 JTS 16V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.4 MJET 20V	Automatic Gearbox AISIN AF40-6	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.4 MJET 20V	Bosch Diesel Injection EDC16C39 CF4/EOBD (Eng. 1.9/2.4)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.4 MJET 20V	Instrument Panel Siemens 2	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.4 MJET 20V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.4 MJET 20V	Marelli Radio Navigator	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.4 MJET 20V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.4 MJET 20V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.4 MJET 20V	Body Computer Marelli 4	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.4 MJET 20V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.4 MJET 20V	Steering Lock TRW 2	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.4 MJET 20V	TRW Lucas ABS	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.4 MJET 20V	ESP TRW Lucas ABS	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.4 MJET 20V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.4 MJET 20V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.4 MJET 20V	Driver's Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.4 MJET 20V	Passenger Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.4 MJET 20V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.4 MJET 20V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	2.4 MJET 20V	G.E. PROCOND 4 Driver's Door	✓	✓	✓	✓	✓	

ALFA ROMEO	BRERA	2.4 MJET 20V	G.E. PROCOND 4 Passenger's Door	✓	✓	✓	✓		
ALFA ROMEO	BRERA	2.4 MJET 20V	Tyre Pressure Control TRW 2	✓	✓	✓	✓		
ALFA ROMEO	BRERA	2.4 MJET 20V	Valeo Parking Control Unit	✓	✓	✓	✓		
ALFA ROMEO	BRERA	2.4 MJET 20V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	BRERA	2.4 MJET 20V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	BRERA	3.2 V6 24V	Automatic Gearbox AISIN AF40-6	✓	✓	✓	✓		
ALFA ROMEO	BRERA	3.2 V6 24V	Bosch Motronic Med7.6.2 CF4/EOBD Injection (Eng. 3.2)	✓	✓	✓	✓		
ALFA ROMEO	BRERA	3.2 V6 24V	Instrument Panel Siemens 2	✓	✓	✓	✓		
ALFA ROMEO	BRERA	3.2 V6 24V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	Marelli Radio Navigator	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	Body Computer Marelli 4	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	Steering Lock TRW 2	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	TRW Air Bag MY 03 (2F-2P-2L-2G-I)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	TRW Air Bag MY 03 (2F-2P-2L-1G-I)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	TRW Lucas ABS	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	ESP TRW Lucas ABS	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	Driver's Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	Passenger Seat Lear 2	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	G.E. PROCOND 4 Driver's Door	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	G.E. PROCOND 4 Passenger's Door	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	Tyre Pressure Control TRW 2	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	Valeo Parking Control Unit	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2022	ECM (Engine Control Module)	✓	✓	✓	✓	✓	sp03180, sp03181, sp03182, sp03183, sp03184, sp03185, sp03186
ALFA ROMEO	GIULIA	2022	ECM2 (Engine Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2022	TCM (Transmission Control Module)	✓	✓	✓	✓	✓	sp03196
ALFA ROMEO	GIULIA	2022	ABS (Anti-Lock Braking System)	✓	✓	✓	✓	✓	sp03197, sp03198, sp03199, sp03200, sp03201, sp03202, sp03203
ALFA ROMEO	GIULIA	2022	TVM (Torque Vectoring Module)	✓	✓	✓	✓	✓	sp03217, sp03218, sp03219, sp03220
ALFA ROMEO	GIULIA	2022	TTM (Trailer Tow Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2022	TMM (Track Mapping Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2022	TBM (Telematic Box Module)	✓	✓	✓	✓	✓	sp03221, sp03222
ALFA ROMEO	GIULIA	2022	SRS (Supplemental Inflatable Restraint System, ORC)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2022	BCM (Body Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2022	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2022	PAM (Parking Assistant Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2022	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2022	IC (Instrument Cluster)	✓	✓	✓	✓	✓	sp03223, sp03224
ALFA ROMEO	GIULIA	2022	RFH (Radio Frequency Hub)	✓	✓	✓	✓	✓	sp03225, sp03226
ALFA ROMEO	GIULIA	2022	HALF (Haptical Lane Feedback)	✓	✓	✓	✓	✓	sp03227
ALFA ROMEO	GIULIA	2022	ETM (Entertainment Telematic Module)	✓	✓	✓	✓	✓	sp03228, sp03229
ALFA ROMEO	GIULIA	2022	EMCM (Entertainment Multimedia Control)	✓	✓	✓	✓	✓	sp03230, sp03231, sp03232, sp03233, sp03234
ALFA ROMEO	GIULIA	2022	ESL (Electronic Steering Lock)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2022	EPS (Electric Power Steering)	✓	✓	✓	✓	✓	sp03235
ALFA ROMEO	GIULIA	2022	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	sp03236, sp03237, sp03238
ALFA ROMEO	GIULIA	2022	DTCM (Drive Train Control Module)	✓	✓	✓	✓	✓	sp03239, sp03240, sp03241, sp03242
ALFA ROMEO	GIULIA	2022	CSWM (Comfort Seat Wheel Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2022	CDCM (Chassis Domain Control Module)	✓	✓	✓	✓	✓	sp03243, sp03244
ALFA ROMEO	GIULIA	2022	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2022	ANC (Active Noise Cancelation)	✓	✓	✓	✓	✓	

ALFA ROMEO	GIULIA	2022	AMP (Amplifier)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2022	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓	✓	sp03245
ALFA ROMEO	GIULIA	2022	ACC (Adaptive Cruise Control)	✓	✓	✓	✓	✓	sp03246
ALFA ROMEO	GIULIA	2022	AAMR (Active Aerodynamic Module Right)	✓	✓	✓	✓	✓	sp03247
ALFA ROMEO	GIULIA	2022	AAML (Active Aerodynamic Module Left)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2022	HVAC (Heating Ventilation Air-Conditioning	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2022	Driven control module(DSCM)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2021	ECM (Engine Control Module)	✓	✓	✓	✓	✓	sp03248, sp03249, sp03250, sp03251, sp03252, sp03253, sp03254
ALFA ROMEO	GIULIA	2021	ECM2 (Engine Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2021	TCM (Transmission Control Module)	✓	✓	✓	✓	✓	sp03264
ALFA ROMEO	GIULIA	2021	ABS (Anti-Lock Braking System)	✓	✓	✓	✓	✓	sp03265, sp03266, sp03267, sp03268, sp03269, sp03270, sp03271
ALFA ROMEO	GIULIA	2021	TVM (Torque Vectoring Module)	✓	✓	✓	✓	✓	sp03285, sp03286, sp03287, sp03288
ALFA ROMEO	GIULIA	2021	TTM (Trailer Tow Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2021	TMM (Track Mapping Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2021	TBM (Telematic Box Module)	✓	✓	✓	✓	✓	sp03289, sp03290
ALFA ROMEO	GIULIA	2021	SRS (Supplemental Inflatable Restraint	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2021	BCM (Body Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2021	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2021	PAM (Parking Assistant Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2021	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2021	IC (Instrument Cluster)	✓	✓	✓	✓	✓	sp03291, sp03292
ALFA ROMEO	GIULIA	2021	RFH (Radio Frequency Hub)	✓	✓	✓	✓	✓	sp03293, sp03294
ALFA ROMEO	GIULIA	2021	HALF (Haptical Lane Feedback)	✓	✓	✓	✓	✓	sp03295
ALFA ROMEO	GIULIA	2021	ETM (Entertainment Telematic Module)	✓	✓	✓	✓	✓	sp03296, sp03297
ALFA ROMEO	GIULIA	2021	EMCM (Entertainment Multimedia Control	✓	✓	✓	✓	✓	sp03298, sp03299, sp03300, sp03301, sp03302
ALFA ROMEO	GIULIA	2021	ESL (Electronic Steering Lock)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2021	EPS (Electric Power Steering)	✓	✓	✓	✓	✓	sp03303
ALFA ROMEO	GIULIA	2021	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	sp03304, sp03305, sp03306
ALFA ROMEO	GIULIA	2021	DTCM (Drive Train Control Module)	✓	✓	✓	✓	✓	sp03307, sp03308, sp03309, sp03310
ALFA ROMEO	GIULIA	2021	CSWM (Comfort Seat Wheel Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2021	CDCM (Chassis Domain Control Module)	✓	✓	✓	✓	✓	sp03311, sp03312
ALFA ROMEO	GIULIA	2021	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2021	ANC (Active Noise Cancelation)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2021	AMP (Amplifier)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2021	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓	✓	sp03313
ALFA ROMEO	GIULIA	2021	ACC (Adaptive Cruise Control)	✓	✓	✓	✓	✓	sp03314
ALFA ROMEO	GIULIA	2021	AAMR (Active Aerodynamic Module Right)	✓	✓	✓	✓	✓	sp03315
ALFA ROMEO	GIULIA	2021	AAML (Active Aerodynamic Module Left)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2021	HVAC (Heating Ventilation Air-Conditioning	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2021	Driven control module(DSCM)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2020	ECM (Engine Control Module)	✓	✓	✓	✓	✓	sp03316, sp03317, sp03318, sp03319, sp03320, sp03321, sp03322
ALFA ROMEO	GIULIA	2020	ECM2 (Engine Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2020	TCM (Transmission Control Module)	✓	✓	✓	✓	✓	sp03332
ALFA ROMEO	GIULIA	2020	ABS (Anti-Lock Braking System)	✓	✓	✓	✓	✓	sp03333, sp03334, sp03335, sp03336, sp03337, sp03338, sp03339
ALFA ROMEO	GIULIA	2020	TVM (Torque Vectoring Module)	✓	✓	✓	✓	✓	sp03353, sp03354, sp03355, sp03356
ALFA ROMEO	GIULIA	2020	TTM (Trailer Tow Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2020	TMM (Track Mapping Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2020	TBM (Telematic Box Module)	✓	✓	✓	✓	✓	sp03357, sp03358
ALFA ROMEO	GIULIA	2020	SRS (Supplemental Inflatable Restraint	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2020	BCM (Body Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2020	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2020	PAM (Parking Assistant Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2020	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2020	IC (Instrument Cluster)	✓	✓	✓	✓	✓	sp03359, sp03360
ALFA ROMEO	GIULIA	2020	RFH (Radio Frequency Hub)	✓	✓	✓	✓	✓	sp03361, sp03362
ALFA ROMEO	GIULIA	2020	HALF (Haptical Lane Feedback)	✓	✓	✓	✓	✓	sp03363

ALFA ROMEO	GIULIA	2020	ETM (Entertainment Telematic Module)	✓	✓	✓	✓	✓	sp03364, sp03365
ALFA ROMEO	GIULIA	2020	EMCM (Entertainment Multimedia Control	✓	✓	✓	✓	✓	sp03366, sp03367, sp03368, sp03369, sp03370
ALFA ROMEO	GIULIA	2020	ESL (Electronic Steering Lock)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2020	EPS (Electric Power Steering)	✓	✓	✓	✓	✓	sp03371
ALFA ROMEO	GIULIA	2020	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	sp03372, sp03373, sp03374
ALFA ROMEO	GIULIA	2020	DTCM (Drive Train Control Module)	✓	✓	✓	✓	✓	sp03375, sp03376, sp03377, sp03378
ALFA ROMEO	GIULIA	2020	CSWM (Comfort Seat Wheel Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2020	CDCM (Chassis Domain Control Module)	✓	✓	✓	✓	✓	sp03379, sp03380
ALFA ROMEO	GIULIA	2020	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2020	ANC (Active Noise Cancelation)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2020	AMP (Amplifier)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2020	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓	✓	sp03381
ALFA ROMEO	GIULIA	2020	ACC (Adaptive Cruise Control)	✓	✓	✓	✓	✓	sp03382
ALFA ROMEO	GIULIA	2020	AAMR (Active Aerodynamic Module Right)	✓	✓	✓	✓	✓	sp03383
ALFA ROMEO	GIULIA	2020	AAML (Active Aerodynamic Module Left)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2020	HVAC (Heating Ventilation Air-Conditioning	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2020	Driven control module(DSCM)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2019	ECM (Engine Control Module)	✓	✓	✓	✓	✓	sp03384, sp03385, sp03386, sp03387, sp03388, sp03389, sp03390
ALFA ROMEO	GIULIA	2019	ECM2 (Engine Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2019	TCM (Transmission Control Module)	✓	✓	✓	✓	✓	sp03400
ALFA ROMEO	GIULIA	2019	ABS (Anti-Lock Braking System)	✓	✓	✓	✓	✓	sp03401, sp03402, sp03403, sp03404, sp03405, sp03406, sp03407
ALFA ROMEO	GIULIA	2019	TVM (Torque Vectoring Module)	✓	✓	✓	✓	✓	sp03421, sp03422, sp03423, sp03424
ALFA ROMEO	GIULIA	2019	TTM (Trailer Tow Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2019	TMM (Track Mapping Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2019	TBM (Telematic Box Module)	✓	✓	✓	✓	✓	sp03425, sp03426
ALFA ROMEO	GIULIA	2019	SRS (Supplemental Inflatable Restraint	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2019	System, ORC)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2019	BCM (Body Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2019	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2019	PAM (Parking Assistant Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2019	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2019	IC (Instrument Cluster)	✓	✓	✓	✓	✓	sp03427, sp03428
ALFA ROMEO	GIULIA	2019	RFH (Radio Frequency Hub)	✓	✓	✓	✓	✓	sp03429, sp03430
ALFA ROMEO	GIULIA	2019	HALF (Haptical Lane Feedback)	✓	✓	✓	✓	✓	sp03431
ALFA ROMEO	GIULIA	2019	ETM (Entertainment Telematic Module)	✓	✓	✓	✓	✓	sp03432, sp03433
ALFA ROMEO	GIULIA	2019	EMCM (Entertainment Multimedia Control	✓	✓	✓	✓	✓	sp03434, sp03435, sp03436, sp03437, sp03438
ALFA ROMEO	GIULIA	2019	ESL (Electronic Steering Lock)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2019	EPS (Electric Power Steering)	✓	✓	✓	✓	✓	sp03439
ALFA ROMEO	GIULIA	2019	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	sp03440, sp03441, sp03442
ALFA ROMEO	GIULIA	2019	DTCM (Drive Train Control Module)	✓	✓	✓	✓	✓	sp03443, sp03444, sp03445, sp03446
ALFA ROMEO	GIULIA	2019	CSWM (Comfort Seat Wheel Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2019	CDCM (Chassis Domain Control Module)	✓	✓	✓	✓	✓	sp03447, sp03448
ALFA ROMEO	GIULIA	2019	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2019	ANC (Active Noise Cancelation)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2019	AMP (Amplifier)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2019	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓	✓	sp03449
ALFA ROMEO	GIULIA	2019	ACC (Adaptive Cruise Control)	✓	✓	✓	✓	✓	sp03450
ALFA ROMEO	GIULIA	2019	AAMR (Active Aerodynamic Module Right)	✓	✓	✓	✓	✓	sp03451
ALFA ROMEO	GIULIA	2019	AAML (Active Aerodynamic Module Left)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2019	HVAC (Heating Ventilation Air-Conditioning	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2019	Driven control module(DSCM)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2018	ECM (Engine Control Module)	✓	✓	✓	✓	✓	sp03452, sp03453, sp03454, sp03455, sp03456, sp03457, sp03458
ALFA ROMEO	GIULIA	2018	ECM2 (Engine Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2018	TCM (Transmission Control Module)	✓	✓	✓	✓	✓	sp03468
ALFA ROMEO	GIULIA	2018	ABS (Anti-Lock Braking System)	✓	✓	✓	✓	✓	sp03469, sp03470, sp03471, sp03472, sp03473, sp03474, sp03475
ALFA ROMEO	GIULIA	2018	TVM (Torque Vectoring Module)	✓	✓	✓	✓	✓	sp03489, sp03490, sp03491, sp03492
ALFA ROMEO	GIULIA	2018	TTM (Trailer Tow Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2018	TMM (Track Mapping Module)	✓	✓	✓	✓	✓	

ALFA ROMEO	GIULIA	2018	TBM (Telematic Box Module)	✓	✓	✓	✓	✓	sp03493, sp03494
ALFA ROMEO	GIULIA	2018	SRS (Supplemental Inflatable Restraint	✓	✓	✓	✓		
ALFA ROMEO	GIULIA	2018	RFH (Radio Frequency Hub)	✓	✓	✓	✓	✓	sp03495, sp03496
ALFA ROMEO	GIULIA	2018	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2018	PAM (Parking Assistant Module)		✓	✓			
ALFA ROMEO	GIULIA	2018	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2018	IC (Instrument Cluster)	✓	✓	✓	✓	✓	sp03497, sp03498
ALFA ROMEO	GIULIA	2018	HVAC (Heating Ventilation Air-Conditioning	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2018	HALF (Haptical Lane Feedback)	✓	✓	✓			sp03499
ALFA ROMEO	GIULIA	2018	ETM (Entertainment Telematic Module)	✓	✓	✓	✓	✓	sp03500, sp03501
ALFA ROMEO	GIULIA	2018	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	sp03502, sp03503, sp03504
ALFA ROMEO	GIULIA	2018	ESL (Electronic Steering Lock)		✓	✓			
ALFA ROMEO	GIULIA	2018	EPS (Electric Power Steering)	✓	✓	✓	✓		sp03505
ALFA ROMEO	GIULIA	2018	EMCM (Entertainment Multimedia Control	✓	✓	✓	✓	✓	sp03506, sp03507, sp03508, sp03509, sp03510
ALFA ROMEO	GIULIA	2018	DTCM (Drive Train Control Module)	✓	✓	✓	✓	✓	sp03511, sp03512, sp03513, sp03514
ALFA ROMEO	GIULIA	2018	CSWM (Comfort Seat Wheel Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2018	CDCM (Chassis Domain Control Module)	✓	✓	✓	✓	✓	sp03515, sp03516
ALFA ROMEO	GIULIA	2018	BCM (Body Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2018	ANC (Active Noise Cancelation)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2018	AMP (Amplifier)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2018	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓		sp03517
ALFA ROMEO	GIULIA	2018	ACC (Adaptive Cruise Control)	✓	✓	✓	✓	✓	sp03518
ALFA ROMEO	GIULIA	2018	AAMR (Active Aerodynamic Module Right)	✓	✓	✓	✓		sp03519
ALFA ROMEO	GIULIA	2018	AAML (Active Aerodynamic Module Left)	✓	✓	✓	✓		
ALFA ROMEO	GIULIA	2018	Driven control module(DSCM)		✓	✓			
ALFA ROMEO	GIULIA	2017	ECM (Engine Control Module)	✓	✓	✓	✓	✓	sp03520, sp03521, sp03522, sp03523, sp03524, sp03525, sp03526
ALFA ROMEO	GIULIA	2017	ECM2 (Engine Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2017	TCM (Transmission Control Module)	✓	✓	✓	✓		sp03536
ALFA ROMEO	GIULIA	2017	ABS (Anti-Lock Braking System)	✓	✓	✓	✓	✓	sp03537, sp03538, sp03539, sp03540, sp03541, sp03542, sp03543
ALFA ROMEO	GIULIA	2017	TVM (Torque Vectoring Module)	✓	✓	✓	✓		sp03557, sp03558, sp03559, sp03560
ALFA ROMEO	GIULIA	2017	TM (Trailer Tow Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2017	TMM (Track Mapping Module)		✓	✓			
ALFA ROMEO	GIULIA	2017	TBM (Telematic Box Module)	✓	✓	✓	✓	✓	sp03561, sp03562
ALFA ROMEO	GIULIA	2017	SRS (Supplemental Inflatable Restraint	✓	✓	✓	✓		
ALFA ROMEO	GIULIA	2017	RFH (Radio Frequency Hub)	✓	✓	✓	✓	✓	sp03563, sp03564
ALFA ROMEO	GIULIA	2017	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2017	PAM (Parking Assistant Module)		✓	✓			
ALFA ROMEO	GIULIA	2017	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2017	IC (Instrument Cluster)	✓	✓	✓	✓	✓	sp03565, sp03566
ALFA ROMEO	GIULIA	2017	HVAC (Heating Ventilation Air-Conditioning	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2017	HALF (Haptical Lane Feedback)	✓	✓	✓			sp03567
ALFA ROMEO	GIULIA	2017	ETM (Entertainment Telematic Module)	✓	✓	✓	✓	✓	sp03568, sp03569
ALFA ROMEO	GIULIA	2017	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	sp03570, sp03571, sp03572
ALFA ROMEO	GIULIA	2017	ESL (Electronic Steering Lock)		✓	✓			
ALFA ROMEO	GIULIA	2017	EPS (Electric Power Steering)	✓	✓	✓	✓		sp03573
ALFA ROMEO	GIULIA	2017	EMCM (Entertainment Multimedia Control	✓	✓	✓	✓	✓	sp03574, sp03575, sp03576, sp03577, sp03578
ALFA ROMEO	GIULIA	2017	DTCM (Drive Train Control Module)	✓	✓	✓	✓	✓	sp03579, sp03580, sp03581, sp03582
ALFA ROMEO	GIULIA	2017	CSWM (Comfort Seat Wheel Module)		✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2017	CDCM (Chassis Domain Control Module)	✓	✓	✓	✓	✓	sp03583, sp03584
ALFA ROMEO	GIULIA	2017	BCM (Body Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2017	ANC (Active Noise Cancelation)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2017	AMP (Amplifier)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2017	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓		sp03585
ALFA ROMEO	GIULIA	2017	ACC (Adaptive Cruise Control)	✓	✓	✓	✓	✓	sp03586
ALFA ROMEO	GIULIA	2017	AAMR (Active Aerodynamic Module Right)	✓	✓	✓	✓		sp03587
ALFA ROMEO	GIULIA	2017	AAML (Active Aerodynamic Module Left)	✓	✓	✓	✓		
ALFA ROMEO	GIULIA	2017	Driven control module(DSCM)		✓	✓			
ALFA ROMEO	GIULIA	2016	ECM (Engine Control Module)	✓	✓	✓	✓	✓	sp03588, sp03589, sp03590, sp03591, sp03592, sp03593, sp03594
ALFA ROMEO	GIULIA	2016	ECM2 (Engine Control Module)	✓	✓	✓	✓	✓	

ALFA ROMEO	GIULIA	2016	TCM (Transmission Control Module)	✓	✓	✓	✓		sp03604
ALFA ROMEO	GIULIA	2016	ABS (Anti-Lock Braking System)	✓	✓	✓	✓	✓	sp03605, sp03606, sp03607, sp03608, sp03609, sp03610, sp03611
ALFA ROMEO	GIULIA	2016	TVM (Torque Vectoring Module)	✓	✓	✓	✓		sp03625, sp03626, sp03627, sp03628
ALFA ROMEO	GIULIA	2016	TTM (Trailer Tow Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2016	TMM (Track Mapping Module)		✓	✓			
ALFA ROMEO	GIULIA	2016	TBM (Telematic Box Module)	✓	✓	✓	✓	✓	sp03629, sp03630
ALFA ROMEO	GIULIA	2016	SRS (Supplemental Inflatable Restraint)	✓	✓	✓	✓		
ALFA ROMEO	GIULIA	2016	RFH (Radio Frequency Hub)	✓	✓	✓	✓	✓	sp03631, sp03632
ALFA ROMEO	GIULIA	2016	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2016	PAM (Parking Assistant Module)		✓	✓			
ALFA ROMEO	GIULIA	2016	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2016	IC (Instrument Cluster)	✓	✓	✓	✓	✓	sp03633, sp03634
ALFA ROMEO	GIULIA	2016	HVAC (Heating Ventilation Air-Conditioning)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2016	HALF (Haptical Lane Feedback)	✓	✓	✓			sp03635
ALFA ROMEO	GIULIA	2016	ETM (Entertainment Telematic Module)	✓	✓	✓	✓	✓	sp03636, sp03637
ALFA ROMEO	GIULIA	2016	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	sp03638, sp03639, sp03640
ALFA ROMEO	GIULIA	2016	ESL (Electronic Steering Lock)		✓	✓			
ALFA ROMEO	GIULIA	2016	EPS (Electric Power Steering)	✓	✓	✓	✓		sp03641
ALFA ROMEO	GIULIA	2016	EMCM (Entertainment Multimedia Control)	✓	✓	✓	✓	✓	sp03642, sp03643, sp03644, sp03645, sp03646
ALFA ROMEO	GIULIA	2016	DTCM (Drive Train Control Module)	✓	✓	✓	✓	✓	sp03647, sp03648, sp03649, sp03650
ALFA ROMEO	GIULIA	2016	CSWM (Comfort Seat Wheel Module)		✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2016	CDCM (Chassis Domain Control Module)	✓	✓	✓	✓	✓	sp03651, sp03652
ALFA ROMEO	GIULIA	2016	BCM (Body Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2016	ANC (Active Noise Cancelation)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2016	AMP (Amplifier)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2016	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓		sp03653
ALFA ROMEO	GIULIA	2016	ACC (Adaptive Cruise Control)	✓	✓	✓	✓	✓	sp03654
ALFA ROMEO	GIULIA	2016	AAMR (Active Aerodynamic Module Right)	✓	✓	✓	✓		sp03655
ALFA ROMEO	GIULIA	2016	AAML (Active Aerodynamic Module Left)	✓	✓	✓	✓		
ALFA ROMEO	GIULIA	2016	Driven control module(DSCM)		✓	✓			
ALFA ROMEO	GIULIA	2015	ECM (Engine Control Module)	✓	✓	✓	✓	✓	sp03656, sp03657, sp03658, sp03659, sp03660, sp03661, sp03662
ALFA ROMEO	GIULIA	2015	ECM2 (Engine Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	TCM (Transmission Control Module)	✓	✓	✓	✓		sp03672
ALFA ROMEO	GIULIA	2015	ABS (Anti-Lock Braking System)	✓	✓	✓	✓	✓	sp03673, sp03674, sp03675, sp03676, sp03677, sp03678, sp03679, sp03680, sp03681, sp03682, sp03683, sp03684, sp03685, sp03686
ALFA ROMEO	GIULIA	2015	TVM (Torque Vectoring Module)	✓	✓	✓	✓		sp03693, sp03694, sp03695, sp03696
ALFA ROMEO	GIULIA	2015	TTM (Trailer Tow Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	TMM (Track Mapping Module)		✓	✓			
ALFA ROMEO	GIULIA	2015	TBM (Telematic Box Module)	✓	✓	✓	✓	✓	sp03697, sp03698
ALFA ROMEO	GIULIA	2015	SRS (Supplemental Inflatable Restraint)	✓	✓	✓	✓		
ALFA ROMEO	GIULIA	2015	RFH (Radio Frequency Hub)	✓	✓	✓	✓	✓	sp03699, sp03700
ALFA ROMEO	GIULIA	2015	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	PAM (Parking Assistant Module)		✓	✓			
ALFA ROMEO	GIULIA	2015	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	IC (Instrument Cluster)	✓	✓	✓	✓	✓	sp03701, sp03702
ALFA ROMEO	GIULIA	2015	HVAC (Heating Ventilation Air-Conditioning)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	HALF (Haptical Lane Feedback)	✓	✓	✓			sp03703
ALFA ROMEO	GIULIA	2015	ETM (Entertainment Telematic Module)	✓	✓	✓	✓	✓	sp03704, sp03705
ALFA ROMEO	GIULIA	2015	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	sp03706, sp03707, sp03708
ALFA ROMEO	GIULIA	2015	ESL (Electronic Steering Lock)		✓	✓			
ALFA ROMEO	GIULIA	2015	EPS (Electric Power Steering)	✓	✓	✓	✓		sp03709
ALFA ROMEO	GIULIA	2015	EMCM (Entertainment Multimedia Control)	✓	✓	✓	✓	✓	sp03710, sp03711, sp03712, sp03713, sp03714
ALFA ROMEO	GIULIA	2015	DTCM (Drive Train Control Module)	✓	✓	✓	✓	✓	sp03715, sp03716, sp03717, sp03718
ALFA ROMEO	GIULIA	2015	CSWM (Comfort Seat Wheel Module)		✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	CDCM (Chassis Domain Control Module)	✓	✓	✓	✓	✓	sp03719, sp03720
ALFA ROMEO	GIULIA	2015	BCM (Body Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	ANC (Active Noise Cancelation)	✓	✓	✓	✓	✓	

ALFA ROMEO	GIULIA	2015	AMP (Amplifier)	✓	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓		sp03721
ALFA ROMEO	GIULIA	2015	ACC (Adaptive Cruise Control)	✓	✓	✓	✓	✓	sp03722
ALFA ROMEO	GIULIA	2015	AAMR (Active Aerodynamic Module Right)	✓	✓	✓	✓		sp03723
ALFA ROMEO	GIULIA	2015	AAML (Active Aerodynamic Module Left)	✓	✓	✓	✓		
ALFA ROMEO	GIULIA	2015	Driven control module(DSCM)		✓	✓			
ALFA ROMEO	Giulietta/Stelvio	2022	ECM (Engine Control Module)	✓	✓	✓	✓	✓	sp03724, sp03725, sp03726, sp03727, sp03728, sp03729, sp03730
ALFA ROMEO	Giulietta/Stelvio	2022	ECM2 (Engine Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2022	TCM (Transmission Control Module)	✓	✓	✓	✓		sp03731, sp03732, sp03733, sp03734
ALFA ROMEO	Giulietta/Stelvio	2022	ABS (Anti Lock Brakes)	✓	✓	✓	✓	✓	sp03735, sp03736, sp03737, sp03738, sp03739
ALFA ROMEO	Giulietta/Stelvio	2022	SRS (Supplemental Inflatable Restraint	✓	✓	✓	✓		
ALFA ROMEO	Giulietta/Stelvio	2022	BCM (Body Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2022	HVAC (Heating Ventilation Air-Conditioning	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2022	ETM (Entertainment Telematic Module)	✓	✓	✓	✓	✓	sp03740, sp03741
ALFA ROMEO	Giulietta/Stelvio	2022	EPS (Electric Power Steering)	✓	✓	✓	✓		sp03742
ALFA ROMEO	Giulietta/Stelvio	2022	IPC (Instrument Panel Cluster)	✓	✓	✓		✓	sp03743, sp03744
ALFA ROMEO	Giulietta/Stelvio	2022	PAM (Parking Aid Module)		✓	✓			
ALFA ROMEO	Giulietta/Stelvio	2022	HALF (Haptical Lane Feedback)	✓	✓	✓			sp03745
ALFA ROMEO	Giulietta/Stelvio	2022	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	sp03746, sp03747, sp03748
ALFA ROMEO	Giulietta/Stelvio	2022	ACC (Adaptive Cruise Control)	✓	✓	✓	✓	✓	sp03749
ALFA ROMEO	Giulietta/Stelvio	2022	PLGM (Power Liftgate)	✓	✓	✓	✓		
ALFA ROMEO	Giulietta/Stelvio	2022	RFH (Radio Frequency Hub)	✓	✓	✓	✓	✓	sp03750, sp03751
ALFA ROMEO	Giulietta/Stelvio	2022	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2022	CDM (Chassis Domain Control Module)	✓	✓	✓	✓	✓	sp03752, sp03753
ALFA ROMEO	Giulietta/Stelvio	2022	DTM (Drive Train Control Module)	✓	✓	✓	✓	✓	sp03754, sp03755, sp03756, sp03757
ALFA ROMEO	Giulietta/Stelvio	2022	EMCM (Entertainment Multimedia Control	✓	✓	✓	✓	✓	sp03758, sp03759, sp03760, sp03761, sp03762
ALFA ROMEO	Giulietta/Stelvio	2022	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2022	TBM (Telematic Box Module)	✓	✓	✓	✓	✓	sp03763, sp03764
ALFA ROMEO	Giulietta/Stelvio	2022	TTM (Trailer Tow Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2022	ESL (Electronic Steering Lock)		✓	✓			
ALFA ROMEO	Giulietta/Stelvio	2022	CSWM (Comfort Seat Wheel Module)			✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2022	TVM (Torque Vectoring Module)	✓	✓	✓	✓		sp03765, sp03766, sp03767, sp03768
ALFA ROMEO	Giulietta/Stelvio	2022	AMP (Amplifier)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2022	ANC (Active Noise Cancelation)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2021	ECM (Engine Control Module)	✓	✓	✓	✓	✓	sp03769, sp03770, sp03771, sp03772, sp03773, sp03774, sp03775
ALFA ROMEO	Giulietta/Stelvio	2021	ECM2 (Engine Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2021	TCM (Transmission Control Module)	✓	✓	✓	✓		sp03776, sp03777, sp03778, sp03779
ALFA ROMEO	Giulietta/Stelvio	2021	ABS (Anti Lock Brakes)	✓	✓	✓	✓	✓	sp03780, sp03781, sp03782, sp03783, sp03784
ALFA ROMEO	Giulietta/Stelvio	2021	SRS (Supplemental Inflatable Restraint	✓	✓	✓	✓		
ALFA ROMEO	Giulietta/Stelvio	2021	BCM (Body Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2021	HVAC (Heating Ventilation Air-Conditioning	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2021	ETM (Entertainment Telematic Module)	✓	✓	✓	✓	✓	sp03785, sp03786
ALFA ROMEO	Giulietta/Stelvio	2021	EPS (Electric Power Steering)	✓	✓	✓	✓		sp03787
ALFA ROMEO	Giulietta/Stelvio	2021	IPC (Instrument Panel Cluster)	✓	✓	✓	✓	✓	sp03788, sp03789
ALFA ROMEO	Giulietta/Stelvio	2021	PAM (Parking Aid Module)		✓	✓			
ALFA ROMEO	Giulietta/Stelvio	2021	HALF (Haptical Lane Feedback)	✓	✓	✓			sp03790
ALFA ROMEO	Giulietta/Stelvio	2021	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	sp03791, sp03792, sp03793
ALFA ROMEO	Giulietta/Stelvio	2021	ACC (Adaptive Cruise Control)	✓	✓	✓	✓	✓	sp03794
ALFA ROMEO	Giulietta/Stelvio	2021	PLGM (Power Liftgate)	✓	✓	✓	✓		
ALFA ROMEO	Giulietta/Stelvio	2021	RFH (Radio Frequency Hub)	✓	✓	✓	✓	✓	sp03795, sp03796
ALFA ROMEO	Giulietta/Stelvio	2021	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2021	CDM (Chassis Domain Control Module)	✓	✓	✓	✓	✓	sp03797, sp03798
ALFA ROMEO	Giulietta/Stelvio	2021	DTM (Drive Train Control Module)	✓	✓	✓	✓	✓	sp03799, sp03800, sp03801, sp03802
ALFA ROMEO	Giulietta/Stelvio	2021	EMCM (Entertainment Multimedia Control	✓	✓	✓	✓	✓	sp03803, sp03804, sp03805, sp03806, sp03807


ALFA ROMEO	Giulietta/Stelvio	2021	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2021	TBM (Telematic Box Module)	✓	✓	✓	✓	✓	sp03808, sp03809
ALFA ROMEO	Giulietta/Stelvio	2021	TTM (Trailer Tow Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2021	ESL (Electronic Steering Lock)		✓	✓			
ALFA ROMEO	Giulietta/Stelvio	2021	CSWM (Comfort Seat Wheel Module)		✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2021	TVM (Torque Vectoring Module)	✓	✓	✓	✓		sp03810, sp03811, sp03812, sp03813
ALFA ROMEO	Giulietta/Stelvio	2021	AMP (Amplifier)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2021	ANC (Active Noise Cancelation)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2020	ECM (Engine Control Module)	✓	✓	✓	✓	✓	sp03814, sp03815, sp03816, sp03817, sp03818, sp03819, sp03820
ALFA ROMEO	Giulietta/Stelvio	2020	TCM (Transmission Control Module)	✓	✓	✓	✓	✓	sp03821, sp03822, sp03823, sp03824
ALFA ROMEO	Giulietta/Stelvio	2020	ABS (Anti Lock Brakes)	✓	✓	✓	✓	✓	sp03825, sp03826, sp03827, sp03828, sp03829
ALFA ROMEO	Giulietta/Stelvio	2020	SRS (Supplemental Inflatable Restraint)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2020	BCM (Body Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2020	HVAC (Heating Ventilation Air-Conditioning)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2020	ETM (Entertainment Telematic Module)	✓	✓	✓	✓	✓	sp03830, sp03831
ALFA ROMEO	Giulietta/Stelvio	2020	EPS (Electric Power Steering)	✓	✓	✓	✓	✓	sp03832
ALFA ROMEO	Giulietta/Stelvio	2020	IPC (Instrument Panel Cluster)	✓	✓	✓	✓	✓	sp03833, sp03834
ALFA ROMEO	Giulietta/Stelvio	2020	PAM (Parking Aid Module)		✓	✓			
ALFA ROMEO	Giulietta/Stelvio	2020	HALF (Haptical Lane Feedback)	✓	✓	✓			sp03835
ALFA ROMEO	Giulietta/Stelvio	2020	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	sp03836, sp03837, sp03838
ALFA ROMEO	Giulietta/Stelvio	2020	ACC (Adaptive Cruise Control)	✓	✓	✓	✓	✓	sp03839
ALFA ROMEO	Giulietta/Stelvio	2020	ECM (Engine Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2020	PLGM (Power Liftgate)	✓	✓	✓	✓		
ALFA ROMEO	Giulietta/Stelvio	2020	RFH (Radio Frequency Hub)	✓	✓	✓	✓	✓	sp03840, sp03841
ALFA ROMEO	Giulietta/Stelvio	2020	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2020	CDM (Chassis Domain Control Module)	✓	✓	✓	✓	✓	sp03842, sp03843
ALFA ROMEO	Giulietta/Stelvio	2020	DTM (Drive Train Control Module)	✓	✓	✓	✓	✓	sp03844, sp03845, sp03846, sp03847
ALFA ROMEO	Giulietta/Stelvio	2020	EMCM (Entertainment Multimedia Control)	✓	✓	✓	✓	✓	sp03848, sp03849, sp03850, sp03851, sp03852
ALFA ROMEO	Giulietta/Stelvio	2020	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2020	TBM (Telematic Box Module)	✓	✓	✓	✓	✓	sp03853, sp03854
ALFA ROMEO	Giulietta/Stelvio	2020	TTM (Trailer Tow Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2020	ESL (Electronic Steering Lock)		✓	✓			
ALFA ROMEO	Giulietta/Stelvio	2020	CSWM (Comfort Seat Wheel Module)		✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2020	TVM (Torque Vectoring Module)	✓	✓	✓	✓	✓	sp03855, sp03856, sp03857, sp03858
ALFA ROMEO	Giulietta/Stelvio	2020	AMP (Amplifier)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2020	ANC (Active Noise Cancelation)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2019	ECM (Engine Control Module)	✓	✓	✓	✓	✓	sp03859, sp03860, sp03861, sp03862, sp03863, sp03864, sp03865
ALFA ROMEO	Giulietta/Stelvio	2019	TCM (Transmission Control Module)	✓	✓	✓	✓	✓	sp03866, sp03867, sp03868, sp03869
ALFA ROMEO	Giulietta/Stelvio	2019	ABS (Anti Lock Brakes)	✓	✓	✓	✓	✓	sp03870, sp03871, sp03872, sp03873, sp03874
ALFA ROMEO	Giulietta/Stelvio	2019	SRS (Supplemental Inflatable Restraint)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2019	BCM (Body Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2019	HVAC (Heating Ventilation Air-Conditioning)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2019	ETM (Entertainment Telematic Module)	✓	✓	✓	✓	✓	sp03875, sp03876
ALFA ROMEO	Giulietta/Stelvio	2019	EPS (Electric Power Steering)	✓	✓	✓	✓	✓	sp03877
ALFA ROMEO	Giulietta/Stelvio	2019	IPC (Instrument Panel Cluster)	✓	✓	✓	✓	✓	sp03878, sp03879
ALFA ROMEO	Giulietta/Stelvio	2019	PAM (Parking Aid Module)		✓	✓			
ALFA ROMEO	Giulietta/Stelvio	2019	HALF (Haptical Lane Feedback)	✓	✓	✓			sp03880
ALFA ROMEO	Giulietta/Stelvio	2019	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	sp03881, sp03882, sp03883
ALFA ROMEO	Giulietta/Stelvio	2019	ACC (Adaptive Cruise Control)	✓	✓	✓	✓	✓	sp03884
ALFA ROMEO	Giulietta/Stelvio	2019	ECM (Engine Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2019	PLGM (Power Liftgate)	✓	✓	✓	✓		
ALFA ROMEO	Giulietta/Stelvio	2019	RFH (Radio Frequency Hub)	✓	✓	✓	✓	✓	sp03885, sp03886
ALFA ROMEO	Giulietta/Stelvio	2019	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2019	CDM (Chassis Domain Control Module)	✓	✓	✓	✓	✓	sp03887, sp03888

ALFA ROMEO	Giulietta/Stelvio	2019	DTCM (Drive Train Control Module)	✓	✓	✓	✓	✓	sp03889, sp03890, sp03891, sp03892
ALFA ROMEO	Giulietta/Stelvio	2019	EMCM (Entertainment Multimedia Control	✓	✓	✓	✓	✓	sp03893, sp03894, sp03895, sp03896, sp03897
ALFA ROMEO	Giulietta/Stelvio	2019	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2019	TBM (Telematic Box Module)	✓	✓	✓	✓	✓	sp03898, sp03899
ALFA ROMEO	Giulietta/Stelvio	2019	TTM (Trailer Tow Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2019	ESL (Electronic Steering Lock)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2019	CSWM (Comfort Seat Wheel Module)		✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2019	TVM (Torque Vectoring Module)	✓	✓	✓	✓	✓	sp03900, sp03901, sp03902, sp03903
ALFA ROMEO	Giulietta/Stelvio	2019	AMP (Amplifier)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2019	ANC (Active Noise Cancelation)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2018	ECM (Engine Control Module)	✓	✓	✓	✓	✓	sp03904, sp03905, sp03906, sp03907, sp03908, sp03909, sp03910
ALFA ROMEO	Giulietta/Stelvio	2018	TCM (Transmission Control Module)	✓	✓	✓	✓	✓	sp03911, sp03912, sp03913, sp03914
ALFA ROMEO	Giulietta/Stelvio	2018	ABS (Anti Lock Brakes)	✓	✓	✓	✓	✓	sp03915, sp03916, sp03917, sp03918, sp03919
ALFA ROMEO	Giulietta/Stelvio	2018	SRS (Supplemental Inflatable Restraint	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2018	BCM (Body Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2018	HVAC (Heating Ventilation Air-Conditioning	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2018	ETM (Entertainment Telematic Module)	✓	✓	✓	✓	✓	sp03920, sp03921
ALFA ROMEO	Giulietta/Stelvio	2018	EPS (Electric Power Steering)	✓	✓	✓	✓	✓	sp03922
ALFA ROMEO	Giulietta/Stelvio	2018	IPC (Instrument Panel Cluster)	✓	✓	✓	✓	✓	sp03923, sp03924
ALFA ROMEO	Giulietta/Stelvio	2018	PAM (Parking Aid Module)		✓	✓			
ALFA ROMEO	Giulietta/Stelvio	2018	HALF (Haptical Lane Feedback)	✓	✓	✓			sp03925
ALFA ROMEO	Giulietta/Stelvio	2018	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	sp03926, sp03927, sp03928
ALFA ROMEO	Giulietta/Stelvio	2018	ACC (Adaptive Cruise Control)	✓	✓	✓	✓	✓	sp03929
ALFA ROMEO	Giulietta/Stelvio	2018	ECM (Engine Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2018	PLGM (Power Liftgate)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2018	RFH (Radio Frequency Hub)	✓	✓	✓	✓	✓	sp03930, sp03931
ALFA ROMEO	Giulietta/Stelvio	2018	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2018	CDCM (Chassis Domain Control Module)	✓	✓	✓	✓	✓	sp03932, sp03933
ALFA ROMEO	Giulietta/Stelvio	2018	DTCM (Drive Train Control Module)	✓	✓	✓	✓	✓	sp03934, sp03935, sp03936, sp03937
ALFA ROMEO	Giulietta/Stelvio	2018	EMCM (Entertainment Multimedia Control	✓	✓	✓	✓	✓	sp03938, sp03939, sp03940, sp03941, sp03942
ALFA ROMEO	Giulietta/Stelvio	2018	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2018	TBM (Telematic Box Module)	✓	✓	✓	✓	✓	sp03943, sp03944
ALFA ROMEO	Giulietta/Stelvio	2018	TTM (Trailer Tow Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2018	ESL (Electronic Steering Lock)		✓	✓			
ALFA ROMEO	Giulietta/Stelvio	2018	CSWM (Comfort Seat Wheel Module)		✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2018	TVM (Torque Vectoring Module)	✓	✓	✓	✓	✓	sp03945, sp03946, sp03947, sp03948
ALFA ROMEO	Giulietta/Stelvio	2018	AMP (Amplifier)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2018	ANC (Active Noise Cancelation)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2017	ECM (Engine Control Module)	✓	✓	✓	✓	✓	sp03949, sp03950, sp03951, sp03952, sp03953, sp03954, sp03955
ALFA ROMEO	Giulietta/Stelvio	2017	TCM (Transmission Control Module)	✓	✓	✓	✓	✓	sp03956, sp03957, sp03958, sp03959
ALFA ROMEO	Giulietta/Stelvio	2017	ABS (Anti Lock Brakes)	✓	✓	✓	✓	✓	sp03960, sp03961, sp03962, sp03963, sp03964
ALFA ROMEO	Giulietta/Stelvio	2017	SRS (Supplemental Inflatable Restraint	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2017	System, ORC)						
ALFA ROMEO	Giulietta/Stelvio	2017	BCM (Body Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2017	HVAC (Heating Ventilation Air-Conditioning	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2017	And Cooling)						
ALFA ROMEO	Giulietta/Stelvio	2017	ETM (Entertainment Telematic Module)	✓	✓	✓	✓	✓	sp03965, sp03966
ALFA ROMEO	Giulietta/Stelvio	2017	EPS (Electric Power Steering)	✓	✓	✓	✓	✓	sp03967
ALFA ROMEO	Giulietta/Stelvio	2017	IPC (Instrument Panel Cluster)	✓	✓	✓	✓	✓	sp03968, sp03969
ALFA ROMEO	Giulietta/Stelvio	2017	PAM (Parking Aid Module)		✓	✓			
ALFA ROMEO	Giulietta/Stelvio	2017	HALF (Haptical Lane Feedback)	✓	✓	✓			sp03970
ALFA ROMEO	Giulietta/Stelvio	2017	ESM (Electronic Shifter Module)	✓	✓	✓	✓	✓	sp03971, sp03972, sp03973
ALFA ROMEO	Giulietta/Stelvio	2017	ACC (Adaptive Cruise Control)	✓	✓	✓	✓	✓	sp03974
ALFA ROMEO	Giulietta/Stelvio	2017	ECM (Engine Control Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2017	PLGM (Power Liftgate)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2017	RFH (Radio Frequency Hub)	✓	✓	✓	✓	✓	sp03975, sp03976

ALFA ROMEO	Giulietta/Stelvio	2017	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2017	CDCM (Chassis Domain Control Module)	✓	✓	✓	✓	✓	sp03977, sp03978
ALFA ROMEO	Giulietta/Stelvio	2017	DTCM (Drive Train Control Module)	✓	✓	✓	✓	✓	sp03979, sp03980, sp03981, sp03982
ALFA ROMEO	Giulietta/Stelvio	2017	EMCM (Entertainment Multimedia Control Module)	✓	✓	✓	✓	✓	sp03983, sp03984, sp03985, sp03986, sp03987
ALFA ROMEO	Giulietta/Stelvio	2017	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2017	TBM (Telematic Box Module)	✓	✓	✓	✓	✓	sp03988, sp03989
ALFA ROMEO	Giulietta/Stelvio	2017	TTM (Trailer Tow Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2017	ESL (Electronic Steering Lock)		✓	✓			
ALFA ROMEO	Giulietta/Stelvio	2017	CSWM (Comfort Seat Wheel Module)		✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2017	TVM (Torque Vectoring Module)	✓	✓	✓	✓	✓	sp03990, sp03991, sp03992, sp03993
ALFA ROMEO	Giulietta/Stelvio	2017	AMP (Amplifier)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2017	ANC (Active Noise Cancelation)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	✓	sp03994, sp03995, sp03996, sp03997, sp03998, sp03999, sp04000
ALFA ROMEO	Giulietta/Stelvio	2011	TCM (Transmission Control Module)	✓	✓	✓	✓	✓	sp04001, sp04002, sp04003, sp04004
ALFA ROMEO	Giulietta/Stelvio	2011	ABS (Anti Lock Brakes)	✓	✓	✓	✓	✓	sp04005, sp04006, sp04007, sp04008, sp04009
ALFA ROMEO	Giulietta/Stelvio	2011	ORC (Occupant Restraint)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	RMN (Radio MAP NAV)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	PSTM (Passenger Seat Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	PAM (Parking Aid Module)	✓	✓	✓	✓	✓	sp04010, sp04011
ALFA ROMEO	Giulietta/Stelvio	2011	IPC (Instrument Panel)	✓	✓	✓	✓	✓	sp04012, sp04013, sp04014, sp04015, sp04016
ALFA ROMEO	Giulietta/Stelvio	2011	HVAC (Heat, Ventilation And A/C)	✓	✓	✓	✓	✓	sp04017
ALFA ROMEO	Giulietta/Stelvio	2011	ETM (Entertainment Telematic Module)	✓	✓	✓	✓	✓	sp04018, sp04019, sp04020
ALFA ROMEO	Giulietta/Stelvio	2011	EPS (Electric Power Steering)	✓	✓	✓	✓	✓	sp04021
ALFA ROMEO	Giulietta/Stelvio	2011	DSTM (Driver Seat Module)	✓	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	CTM (Convergence Telematic Module)	✓	✓	✓	✓	✓	sp04022
ALFA ROMEO	Giulietta/Stelvio	2011	BCM (Body Control Module)	✓	✓	✓	✓	✓	✓
ALFA ROMEO	Giulietta/Stelvio	2011	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓	✓	sp04027
ALFA ROMEO	GT	1.8 TS 16V	Bosch 8 ABS	✓	✓	✓	✓		
ALFA ROMEO	GT	1.8 TS 16V	Bosch 8 ASR ABS	✓	✓	✓	✓		
ALFA ROMEO	GT	1.8 TS 16V	Bosch 8 VDC ABS	✓	✓	✓	✓		
ALFA ROMEO	GT	1.8 TS 16V	Bosch ABS 5.7	✓	✓	✓	✓		
ALFA ROMEO	GT	1.8 TS 16V	Marelli Connect	✓	✓	✓	✓		
ALFA ROMEO	GT	1.8 TS 16V	Marelli Body Computer	✓	✓	✓	✓		
ALFA ROMEO	GT	1.8 TS 16V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	GT	1.8 TS 16V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	GT	1.8 TS 16V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	GT	1.8 TS 16V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓		
ALFA ROMEO	GT	1.8 TS 16V	Bosch ABS 5.7 VDC	✓	✓	✓	✓		
ALFA ROMEO	GT	1.8 TS 16V	TRW Driver's Door (1)	✓	✓	✓	✓		
ALFA ROMEO	GT	1.8 TS 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	GT	1.8 TS 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	GT	1.8 TS 16V	Mannesman VDO Instrument Panel	✓	✓	✓	✓		
ALFA ROMEO	GT	1.8 TS 16V	Delphi Climate Control (Single Zone)	✓	✓	✓	✓		
ALFA ROMEO	GT	1.8 TS 16V	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓		
ALFA ROMEO	GT	1.9 JTD 16V	Bosch 8 ABS	✓	✓	✓	✓		
ALFA ROMEO	GT	1.9 JTD 16V	Bosch 8 ASR ABS	✓	✓	✓	✓		
ALFA ROMEO	GT	1.9 JTD 16V	Bosch 8 VDC ABS	✓	✓	✓	✓		
ALFA ROMEO	GT	1.9 JTD 16V	Bosch ABS 5.7	✓	✓	✓	✓		
ALFA ROMEO	GT	1.9 JTD 16V	Marelli Connect	✓	✓	✓	✓		
ALFA ROMEO	GT	1.9 JTD 16V	Marelli Body Computer	✓	✓	✓	✓		
ALFA ROMEO	GT	1.9 JTD 16V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	GT	1.9 JTD 16V	Bosch Diesel Injection EDC16C39 CF4/EOBD (Eng. 1.9/2.4)	✓	✓	✓	✓		
ALFA ROMEO	GT	1.9 JTD 16V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	GT	1.9 JTD 16V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	GT	1.9 JTD 16V	Bosch EDC16 CF3/EOBD Diesel Injection (1.9/2.4 Eng.)	✓	✓	✓	✓		
ALFA ROMEO	GT	1.9 JTD 16V	Bosch ABS 5.7 VDC	✓	✓	✓	✓		

ALFA ROMEO	GT	1.9 JTD 16V	TRW Driver's Door (1)	✓	✓	✓	✓		
ALFA ROMEO	GT	1.9 JTD 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	GT	1.9 JTD 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	GT	1.9 JTD 16V	Mannesman VDO Instrument Panel	✓	✓	✓	✓		
ALFA ROMEO	GT	1.9 JTD 16V	Delphi Climate Control (Single Zone)	✓	✓	✓	✓		
ALFA ROMEO	GT	1.9 JTD 16V	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓		
ALFA ROMEO	GT	3.2 V6 24V	Bosch 8 ABS	✓	✓	✓	✓		
ALFA ROMEO	GT	3.2 V6 24V	Bosch 8 ASR ABS	✓	✓	✓	✓		
ALFA ROMEO	GT	3.2 V6 24V	Bosch 8 VDC ABS	✓	✓	✓	✓		
ALFA ROMEO	GT	3.2 V6 24V	Bosch ABS 5.7	✓	✓	✓	✓		
ALFA ROMEO	GT	3.2 V6 24V	Marelli Connect	✓	✓	✓	✓		
ALFA ROMEO	GT	3.2 V6 24V	Marelli Body Computer	✓	✓	✓	✓		
ALFA ROMEO	GT	3.2 V6 24V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	GT	3.2 V6 24V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	GT	3.2 V6 24V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	GT	3.2 V6 24V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓		
ALFA ROMEO	GT	3.2 V6 24V	Bosch ABS 5.7 VDC	✓	✓	✓	✓		
ALFA ROMEO	GT	3.2 V6 24V	TRW Driver's Door (1)	✓	✓	✓	✓		
ALFA ROMEO	GT	3.2 V6 24V	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	GT	3.2 V6 24V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	GT	3.2 V6 24V	Mannesman VDO Instrument Panel	✓	✓	✓	✓		
ALFA ROMEO	GT	3.2 V6 24V	Delphi Climate Control (Single Zone)	✓	✓	✓	✓		
ALFA ROMEO	GT	3.2 V6 24V	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓		
ALFA ROMEO	GT	JTS 2.0	Bosch 8 ABS	✓	✓	✓	✓		
ALFA ROMEO	GT	JTS 2.0	Bosch 8 ASR ABS	✓	✓	✓	✓		
ALFA ROMEO	GT	JTS 2.0	Bosch 8 VDC ABS	✓	✓	✓	✓		
ALFA ROMEO	GT	JTS 2.0	Bosch ABS 5.7	✓	✓	✓	✓		
ALFA ROMEO	GT	JTS 2.0	Marelli Connect	✓	✓	✓	✓		
ALFA ROMEO	GT	JTS 2.0	Marelli Body Computer	✓	✓	✓	✓		
ALFA ROMEO	GT	JTS 2.0	Marelli Automatic Gearbox SELESPEED CFC208F (1)	✓	✓	✓	✓		
ALFA ROMEO	GT	JTS 2.0	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓		
ALFA ROMEO	GT	JTS 2.0	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓		
ALFA ROMEO	GT	JTS 2.0	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓		
ALFA ROMEO	GT	JTS 2.0	Bosch Motronic Med7.11 EOBD Injection	✓	✓	✓	✓		
ALFA ROMEO	GT	JTS 2.0	Bosch ABS 5.7 VDC	✓	✓	✓	✓		
ALFA ROMEO	GT	JTS 2.0	TRW Driver's Door (1)	✓	✓	✓	✓		
ALFA ROMEO	GT	JTS 2.0	Marelli/Microsoft Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	GT	JTS 2.0	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	✓	
ALFA ROMEO	GT	JTS 2.0	Mannesman VDO Instrument Panel	✓	✓	✓	✓		
ALFA ROMEO	GT	JTS 2.0	Delphi Climate Control (Single Zone)	✓	✓	✓	✓		
ALFA ROMEO	GT	JTS 2.0	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓		
ALFA ROMEO	GTV	'03 2.0 JTS	Bosch Motronic Med7.11 EOBD Injection	✓	✓	✓	✓		
ALFA ROMEO	GTV	'03 2.0 JTS	Harrison Climate Control	✓	✓	✓			
ALFA ROMEO	GTV	'03 2.0 JTS	TRW MY 97 Air Bag (2F-2P-1)	✓	✓	✓	✓		
ALFA ROMEO	GTV	'03 2.0 JTS	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓		
ALFA ROMEO	GTV	'03 2.0 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	GTV	'03 2.0 TS 16V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓		
ALFA ROMEO	GTV	'03 2.0 TS 16V	Harrison Climate Control	✓	✓	✓			
ALFA ROMEO	GTV	'03 2.0 TS 16V	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓		
ALFA ROMEO	GTV	'03 2.0 TS 16V	TRW MY 97 Air Bag (2F-2P-1)	✓	✓	✓	✓		
ALFA ROMEO	GTV	'03 2.0 TS 16V	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓		
ALFA ROMEO	GTV	'03 3.2 V6 24V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓		
ALFA ROMEO	GTV	'03 3.2 V6 24V	Harrison Climate Control	✓	✓	✓			
ALFA ROMEO	GTV	'03 3.2 V6 24V	TRW MY 97 Air Bag (2F-2P-1)	✓	✓	✓	✓		
ALFA ROMEO	GTV	'03 3.2 V6 24V	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓		
ALFA ROMEO	GTV	'98 1.8 TS 16V	Bosch 5.3 ABS	✓	✓	✓			

ALFA ROMEO	GTV	'98 1.8 TS 16V	Bosch Motronic M1.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓		
ALFA ROMEO	GTV	'98 1.8 TS 16V	Harrison Climate Control	✓	✓	✓			
ALFA ROMEO	GTV	'98 1.8 TS 16V	TRW MY 97 Air Bag (2F-2P-1)	✓	✓	✓	✓		
ALFA ROMEO	GTV	'98 1.8 TS 16V	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓		
ALFA ROMEO	GTV	'98 2.0 TS 16V	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	GTV	'98 2.0 TS 16V	Bosch Motronic M1.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓		
ALFA ROMEO	GTV	'98 2.0 TS 16V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓		
ALFA ROMEO	GTV	'98 2.0 TS 16V	Harrison Climate Control	✓	✓	✓			
ALFA ROMEO	GTV	'98 2.0 TS 16V	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓		
ALFA ROMEO	GTV	'98 2.0 TS 16V	TRW MY 97 Air Bag (2F-2P-1)	✓	✓	✓	✓		
ALFA ROMEO	GTV	'98 2.0 TS 16V	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓		
ALFA ROMEO	GTV	'98 2.0 V6 TB	Bosch 5.3 ABS	✓	✓	✓			
ALFA ROMEO	GTV	'98 2.0 V6 TB	Harrison Climate Control	✓	✓	✓			
ALFA ROMEO	GTV	'98 2.0 V6 TB	TRW MY 97 Air Bag (2F-2P-1)	✓	✓	✓	✓		
ALFA ROMEO	GTV	'98 2.0 V6 TB	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓		
ALFA ROMEO	GTV	'98 3.0 V6 24V	Bosch 5.3 ABS	✓	✓	✓			

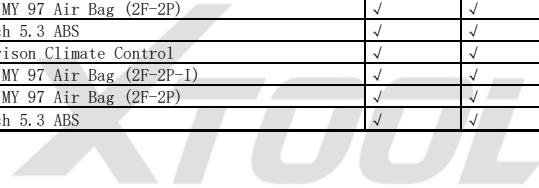

Special Functions List

No.	Functions Name	System Name
SP00001	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00002	Brake Switch Learn	PCM (Powertrain Control Module)
SP00003	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00004	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00005	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00006	Reset ECU	PCM (Powertrain Control Module)
SP00007	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00008	Differential Pressure Sensor Replac.	PCM (Powertrain Control Module)
SP00009	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
SP00010	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
SP00011	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
SP00012	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP00013	Quick Learn	TCM (Transmission Control Module)
SP00014	ABS Static Test	ABS (Anti-Lock Braking System)
SP00015	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
SP00016	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00017	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00018	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
SP00019	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00020	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00021	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00022	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00023	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00024	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00025	RADIO Proxi Configuration	RADIO (RADIO)
SP00026	IPC Enable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00027	Reset Service Information	IC (Instrument Cluster)
SP00028	IPC Disable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00029	IPC Replacement	IC (Instrument Cluster)
SP00030	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00031	Clear Steering Pull Compensation	EPS (Electric Power Steering)
SP00032	Initialize EPS	EPS (Electric Power Steering)
SP00033	CTM Proxi Configuration	CTM (Convergence Telematic Module)
SP00034	Exit Shipping Mode	BCM (Body Control Module)
SP00035	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
SP00036	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
SP00037	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
SP00038	Learn Clutches Contact Point	TCM (Transmission Control Module)

SP00039	Quick Learn	TCM (Transmission Control Module)
SP00040	ABS Static Test	ABS (Anti-Lock Braking System)
SP00041	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
SP00042	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00043	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00044	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
SP00045	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00046	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00047	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00048	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00049	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00050	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00051	RADIO Proxi Configuration	RADIO (RADIO)
SP00052	IPC Enable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00053	Reset Service Information	IC (Instrument Cluster)
SP00054	IPC Disable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00055	IPC Replacement	IC (Instrument Cluster)
SP00056	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00057	Clear Steering Pull Compensation	EPS (Electric Power Steering)
SP00058	Initialize EPS	EPS (Electric Power Steering)
SP00059	CTM Proxi Configuration	CTM (Convergence Telematic Module)
SP00060	Exit Shipping Mode	BCM (Body Control Module)
SP00061	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00062	Brake Switch Learn	PCM (Powertrain Control Module)
SP00063	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00064	Check PCM Odometer	PCM (Powertrain Control Module)
SP00065	Emissions Rolls Test Mode	PCM (Powertrain Control Module)
SP00066	Clear Misfire TLC	PCM (Powertrain Control Module)
SP00067	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00068	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00069	Reset ECU	PCM (Powertrain Control Module)
SP00070	Reset Memory	PCM (Powertrain Control Module)
SP00071	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
SP00072	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
SP00073	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
SP00074	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP00075	Quick Learn	TCM (Transmission Control Module)
SP00076	ABS Static Test	ABS (Anti-Lock Braking System)
SP00077	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
SP00078	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00079	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00080	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)

SP00081	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00082	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00083	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00084	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00085	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00086	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00087	RADIO Proxi Configuration	RADIO (RADIO)
SP00088	IPC Enable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00089	Reset Service Information	IC (Instrument Cluster)
SP00090	IPC Disable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00091	IPC Replacement	IC (Instrument Cluster)
SP00092	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00093	Clear Steering Pull Compensation	EPS (Electric Power Steering)
SP00094	Initialize EPS	EPS (Electric Power Steering)
SP00095	CTM Proxi Configuration	CTM (Convergence Telematic Module)
SP00096	Exit Shipping Mode	BCM (Body Control Module)
SP00097	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00098	Brake Switch Learn	PCM (Powertrain Control Module)
SP00099	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00100	Check PCM Odometer	PCM (Powertrain Control Module)
SP00101	Emissions Rolls Test Mode	PCM (Powertrain Control Module)
SP00102	Clear Misfire TLC	PCM (Powertrain Control Module)
SP00103	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00104	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00105	Reset ECU	PCM (Powertrain Control Module)
SP00106	Reset Memory	PCM (Powertrain Control Module)
SP00107	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
SP00108	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
SP00109	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
SP00110	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP00111	Quick Learn	TCM (Transmission Control Module)
SP00112	ABS Static Test	ABS (Anti-Lock Braking System)
SP00113	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
SP00114	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00115	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00116	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
SP00117	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00118	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00119	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00120	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00121	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00122	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)

SP00123	RADIO Proxi Configuration	RADIO (RADIO)
SP00124	IPC Enable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00125	Reset Service Information	IC (Instrument Cluster)
SP00126	IPC Disable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00127	IPC Replacement	IC (Instrument Cluster)
SP00128	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00129	Clear Steering Pull Compensation	EPS (Electric Power Steering)
SP00130	Initialize EPS	EPS (Electric Power Steering)
SP00131	CTM Proxi Configuration	CTM (Convergence Telematic Module)
SP00132	Exit Shipping Mode	BCM (Body Control Module)
SP00133	Air-Conditioning Self Learning	ECM (Engine Control Module)
SP00134	Brake Switch Learn	ECM (Engine Control Module)
SP00135	Check PCM Odometer	ECM (Engine Control Module)
SP00136	Clear Misfire TLC	ECM (Engine Control Module)
SP00137	Reset Accelerator Pedal Adaptives	ECM (Engine Control Module)
SP00138	Reset Memory	ECM (Engine Control Module)
SP00139	Throttle Body Self Learning	ECM (Engine Control Module)
SP00140	Reset Gear Configuration	ABS (Anti-Lock Braking System)
SP00141	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00142	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00143	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00144	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00145	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
SP00146	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00147	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00148	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00149	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00150	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00151	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00152	Trailer Hook Presence Disabling	PAM (Parking Assistant Module)
SP00153	Trailer Hook Presence Enabling	PAM (Parking Assistant Module)
SP00154	Reset Odometer	IC (Instrument Cluster)
SP00155	Reset Service Information	IC (Instrument Cluster)
SP00156	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00157	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00158	Last Service Date	IC (Instrument Cluster)
SP00159	Power Down	ETM (Entertainment Telematic Module)
SP00160	Power On And Disable User Inputs	ETM (Entertainment Telematic Module)
SP00161	Audio Video Signal Detection	ETM (Entertainment Telematic Module)
SP00162	Steering Angle Sensor	EPS (Electric Power Steering)
SP00163	Air-Conditioning Self Learning	ECM (Engine Control Module)
SP00164	Brake Switch Learn	ECM (Engine Control Module)

SP00165	Check PCM Odometer	ECM (Engine Control Module)
SP00166	Clear Misfire TLC	ECM (Engine Control Module)
SP00167	Reset Accelerator Pedal Adaptives	ECM (Engine Control Module)
SP00168	Reset Memory	ECM (Engine Control Module)
SP00169	Throttle Body Self Learning	ECM (Engine Control Module)
SP00170	Reset Gear Configuration	ABS (Anti-Lock Braking System)
SP00171	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00172	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00173	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00174	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00175	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
SP00176	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00177	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00178	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00179	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00180	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00181	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00182	Trailer Hook Presence Disabling	PAM (Parking Assistant Module)
SP00183	Trailer Hook Presence Enabling	PAM (Parking Assistant Module)
SP00184	Reset Odometer	IC (Instrument Cluster)
SP00185	Reset Service Information	IC (Instrument Cluster)
SP00186	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00187	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00188	Last Service Date	IC (Instrument Cluster)
SP00189	Power Down	ETM (Entertainment Telematic Module)
SP00190	Power On And Disable User Inputs	ETM (Entertainment Telematic Module)
SP00191	Audio Video Signal Detection	ETM (Entertainment Telematic Module)
SP00192	Steering Angle Sensor	EPS (Electric Power Steering)
SP00193	Reset Gear Configuration	ABS (Anti-Lock Braking System)
SP00194	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00195	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00196	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00197	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00198	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
SP00199	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00200	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00201	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00202	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00203	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00204	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00205	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
SP00206	Trailer Hook Presence Enabling	PAM (Parking Aid Module)

SP00207	Reset Odometer	IC (Instrument Cluster)
SP00208	Reset Service Information	IC (Instrument Cluster)
SP00209	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00210	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00211	Last Service Date	IC (Instrument Cluster)
SP00212	Power Down	ETM (Entertainment Telematic Module)
SP00213	Power On And Disable User Inputs	ETM (Entertainment Telematic Module)
SP00214	Audio Video Signal Detection	ETM (Entertainment Telematic Module)
SP00215	Steering Angle Sensor	EPS (Electric Power Steering)
SP00216	Deactivation Of The Power Limitation Function	ECM (Engine Control Module)
SP00217	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00218	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00219	Supercharging System Components Replacement	ECM (Engine Control Module)
SP00220	Neutral Signal Learn	ECM (Engine Control Module)
SP00221	Intake Manifold Replacement	ECM (Engine Control Module)
SP00222	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
SP00223	Clutch Pedal Learning	ECM (Engine Control Module)
SP00224	Neutral Signal Learn	ECM (Engine Control Module)
SP00225	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00226	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP00227	Tunnel Lever Replacement	TCM (Transmission Control Module)
SP00228	Levers At Wheel Replacement	TCM (Transmission Control Module)
SP00229	Pump Relay Replacement	TCM (Transmission Control Module)
SP00230	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP00231	Reset Gear Configuration	ABS (Anti-Lock Braking System)
SP00232	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00233	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00234	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00235	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00236	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
SP00237	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00238	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00239	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00240	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00241	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00242	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00243	Trailer Hook Presence Disabling	PAM (Parking Assistant Module)
SP00244	Trailer Hook Presence Enabling	PAM (Parking Assistant Module)
SP00245	Reset Odometer	IC (Instrument Cluster)
SP00246	Reset Service Information	IC (Instrument Cluster)
SP00247	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00248	Enable Seat Belts Reminder	IC (Instrument Cluster)

SP00249	Last Service Date	IC (Instrument Cluster)
SP00250	Power Down	ETM (Entertainment Telematic Module)
SP00251	Power On And Disable User Inputs	ETM (Entertainment Telematic Module)
SP00252	Audio Video Signal Detection	ETM (Entertainment Telematic Module)
SP00253	Steering Angle Sensor	EPS (Electric Power Steering)
SP00254	Intake Manifold Replacement	ECM (Engine Control Module)
SP00255	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
SP00256	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00257	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
SP00258	Neutral Signal Learn	ECM (Engine Control Module)
SP00259	Fuel Supply System Components Replacement	ECM (Engine Control Module)
SP00260	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00261	Factory VIN code lock	ECM (Engine Control Module)
SP00262	Control Unit Reprogramming	ECM (Engine Control Module)
SP00263	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP00264	Proxi Alignment Procedure	ECM (Engine Control Module)
SP00265	Injector/S Replacement	ECM (Engine Control Module)
SP00266	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP00267	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00268	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00269	Proxi Alignment Procedure	TCM (Transmission Control Module)
SP00270	ECU Substitution	ABS (Anti-Lock Braking System)
SP00271	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00272	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00273	TPMS Reset Calibration	ABS (Anti-Lock Braking System)
SP00274	Fire Protection System Activate	BCM (Body Control Module)
SP00275	LIN Line Request Check	BCM (Body Control Module)
SP00276	Ultrasonic Sensors Check	BCM (Body Control Module)
SP00277	Power Down	RRM (Radio Receiver Module)
SP00278	Power On And Disable User Inputs	RRM (Radio Receiver Module)
SP00279	Reset Parameters To Default	RRM (Radio Receiver Module)
SP00280	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP00281	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP00282	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
SP00283	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
SP00284	Reset Odometer	IC (Instrument Cluster)
SP00285	Reset Service Information	IC (Instrument Cluster)
SP00286	Last Service Date	IC (Instrument Cluster)
SP00287	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00288	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
SP00289	Factory VIN code lock	ESM (Electronic Shifter Module)
SP00290	Steering Angle Sensor	EPS (Electric Power Steering)

SP00291	Factory VIN code lock	DTCM (Drive Train Control Module)
SP00292	Proxi Alignment Procedure	DTCM (Drive Train Control Module)
SP00293	Factory VIN code lock	CSWM (Comfort Seat Wheel Module)
SP00294	Intake Manifold Replacement	ECM (Engine Control Module)
SP00295	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
SP00296	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00297	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
SP00298	Neutral Signal Learn	ECM (Engine Control Module)
SP00299	Fuel Supply System Components Replacement	ECM (Engine Control Module)
SP00300	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00301	Factory VIN code lock	ECM (Engine Control Module)
SP00302	Control Unit Reprogramming	ECM (Engine Control Module)
SP00303	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP00304	Proxi Alignment Procedure	ECM (Engine Control Module)
SP00305	Injector/S Replacement	ECM (Engine Control Module)
SP00306	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP00307	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00308	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00309	Proxi Alignment Procedure	TCM (Transmission Control Module)
SP00310	ECU Substitution	ABS (Anti-Lock Braking System)
SP00311	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00312	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00313	TPMS Reset Calibration	ABS (Anti-Lock Braking System)
SP00314	Fire Protection System Activate	BCM (Body Control Module)
SP00315	LIN Line Request Check	BCM (Body Control Module)
SP00316	Ultrasonic Sensors Check	BCM (Body Control Module)
SP00317	Power Down	RRM (Radio Receiver Module)
SP00318	Power On And Disable User Inputs	RRM (Radio Receiver Module)
SP00319	Reset Parameters To Default	RRM (Radio Receiver Module)
SP00320	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP00321	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP00322	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
SP00323	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
SP00324	Reset Odometer	IC (Instrument Cluster)
SP00325	Reset Service Information	IC (Instrument Cluster)
SP00326	Last Service Date	IC (Instrument Cluster)
SP00327	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00328	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
SP00329	Factory VIN code lock	ESM (Electronic Shifter Module)
SP00330	Steering Angle Sensor	EPS (Electric Power Steering)
SP00331	Factory VIN code lock	DTCM (Drive Train Control Module)
SP00332	Proxi Alignment Procedure	DTCM (Drive Train Control Module)

SP00333	Factory VIN code lock	CSWM (Comfort Seat Wheel Module)
SP00334	Intake Manifold Replacement	ECM (Engine Control Module)
SP00335	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
SP00336	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00337	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
SP00338	Neutral Signal Learn	ECM (Engine Control Module)
SP00339	Fuel Supply System Components Replacement	ECM (Engine Control Module)
SP00340	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00341	Factory VIN code lock	ECM (Engine Control Module)
SP00342	Control Unit Reprogramming	ECM (Engine Control Module)
SP00343	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP00344	Proxi Alignment Procedure	ECM (Engine Control Module)
SP00345	Injector/S Replacement	ECM (Engine Control Module)
SP00346	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP00347	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00348	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00349	Proxi Alignment Procedure	TCM (Transmission Control Module)
SP00350	ECU Substitution	ABS (Anti-Lock Braking System)
SP00351	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00352	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00353	TPMS Reset Calibration	ABS (Anti-Lock Braking System)
SP00354	Fire Protection System Activate	BCM (Body Control Module)
SP00355	LIN Line Request Check	BCM (Body Control Module)
SP00356	Ultrasonic Sensors Check	BCM (Body Control Module)
SP00357	Power Down	RRM (Radio Receiver Module)
SP00358	Power On And Disable User Inputs	RRM (Radio Receiver Module)
SP00359	Reset Parameters To Default	RRM (Radio Receiver Module)
SP00360	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP00361	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP00362	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
SP00363	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
SP00364	Reset Odometer	IC (Instrument Cluster)
SP00365	Reset Service Information	IC (Instrument Cluster)
SP00366	Last Service Date	IC (Instrument Cluster)
SP00367	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00368	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
SP00369	Factory VIN code lock	ESM (Electronic Shifter Module)
SP00370	Steering Angle Sensor	EPS (Electric Power Steering)
SP00371	Factory VIN code lock	DTCM (Drive Train Control Module)
SP00372	Proxi Alignment Procedure	DTCM (Drive Train Control Module)
SP00373	Factory VIN code lock	CSWM (Comfort Seat Wheel Module)
SP00374	Intake Manifold Replacement	ECM (Engine Control Module)

SP00375	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
SP00376	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00377	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
SP00378	Neutral Signal Learn	ECM (Engine Control Module)
SP00379	Fuel Supply System Components Replacement	ECM (Engine Control Module)
SP00380	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00381	Factory VIN code lock	ECM (Engine Control Module)
SP00382	Control Unit Reprogramming	ECM (Engine Control Module)
SP00383	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP00384	Proxi Alignment Procedure	ECM (Engine Control Module)
SP00385	Injector/S Replacement	ECM (Engine Control Module)
SP00386	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP00387	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00388	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00389	Proxi Alignment Procedure	TCM (Transmission Control Module)
SP00390	ECU Substitution	ABS (Anti-Lock Braking System)
SP00391	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00392	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00393	TPMS Reset Calibration	ABS (Anti-Lock Braking System)
SP00394	Fire Protection System Activate	BCM (Body Control Module)
SP00395	LIN Line Request Check	BCM (Body Control Module)
SP00396	Ultrasonic Sensors Check	BCM (Body Control Module)
SP00397	Power Down	RRM (Radio Receiver Module)
SP00398	Power On And Disable User Inputs	RRM (Radio Receiver Module)
SP00399	Reset Parameters To Default	RRM (Radio Receiver Module)
SP00400	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP00401	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP00402	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
SP00403	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
SP00404	Reset Odometer	IC (Instrument Cluster)
SP00405	Reset Service Information	IC (Instrument Cluster)
SP00406	Last Service Date	IC (Instrument Cluster)
SP00407	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00408	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
SP00409	Factory VIN code lock	ESM (Electronic Shifter Module)
SP00410	Steering Angle Sensor	EPS (Electric Power Steering)
SP00411	Factory VIN code lock	DTCM (Drive Train Control Module)
SP00412	Proxi Alignment Procedure	DTCM (Drive Train Control Module)
SP00413	Factory VIN code lock	CSWM (Comfort Seat Wheel Module)
SP00414	Deactivation Of The Power Limitation Function	ECM (Engine Control Module)
SP00415	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00416	Supercharging System Components Replacement	ECM (Engine Control Module)

SP00417	Intake Manifold Replacement	ECM (Engine Control Module)
SP00418	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
SP00419	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00420	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
SP00421	Neutral Signal Learn	ECM (Engine Control Module)
SP00422	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00423	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP00424	Tunnel Lever Replacement	TCM (Transmission Control Module)
SP00425	Levers At Wheel Replacement	TCM (Transmission Control Module)
SP00426	Pump Relay Replacement	TCM (Transmission Control Module)
SP00427	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP00428	Static Test	ABS (Anti-Lock Braking System)
SP00429	Trailer Hook Presence Disabling	PAM (Parking Assistant Module)
SP00430	Trailer Hook Presence Enabling	PAM (Parking Assistant Module)
SP00431	Reset Odometer	IC (Instrument Cluster)
SP00432	Reset Service Information	IC (Instrument Cluster)
SP00433	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00434	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00435	Last Service Date	IC (Instrument Cluster)
SP00436	Flap Actuators Learning Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00437	Audio Video Signal Detection	ETM (Entertainment Telematic Module)
SP00438	Steering Angle Calibration	EPS (Electric Power Steering)
SP00439	ECU Restart Routine	CTM (Convergence Telematic Module)
SP00440	Fire Protection System Activate	BCM (Body Control Module)
SP00441	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
SP00442	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
SP00443	Differential Pressure Sensor Replac.	ECM (Engine Control Module)
SP00444	Oil Change	ECM (Engine Control Module)
SP00445	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00446	Injector Codes Read	ECM (Engine Control Module)
SP00447	Rail Pressure Sensor Replacement	ECM (Engine Control Module)
SP00448	Cylinder 3 Injector Replacement	ECM (Engine Control Module)
SP00449	Cylinder 2 Injector Replacement	ECM (Engine Control Module)
SP00450	Cylinder 1 Injector Replacement	ECM (Engine Control Module)
SP00451	Neutral Signal Learn	ECM (Engine Control Module)
SP00452	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00453	Replacement Lambda Sensor	ECM (Engine Control Module)
SP00454	Speed Limit Setting	ECM (Engine Control Module)
SP00455	Speed Limit Setting	ECM (Engine Control Module)
SP00456	EGR Valve Test	ECM (Engine Control Module)
SP00457	Glow Plug Preheating Circuit Test	ECM (Engine Control Module)
SP00458	Resetting Distance Travelled With Water In Diesel W.Lamp ON	ECM (Engine Control Module)

SP00459	Throttle Valve Test	ECM (Engine Control Module)
SP00460	Resetting Distance Travelled With Water Temperature Warning Lamp ON	ECM (Engine Control Module)
SP00461	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00462	Fan Cooling Activation	ECM (Engine Control Module)
SP00463	Tunnel Lever Replacement	TCM (Transmission Control Module)
SP00464	Pump Relay Replacement	TCM (Transmission Control Module)
SP00465	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP00466	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00467	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00468	Steering Angle Sensor Calibration	ABS (Anti-Lock Braking System)
SP00469	Write Front And Rear Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00470	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00471	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00472	ECU SERIAL NUMBER Management	TPMS (Tire Pressure Monitoring System)
SP00473	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00474	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00475	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00476	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00477	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00478	Power Down	RADIO (RADIO)
SP00479	Power On And Disable User Inputs	RADIO (RADIO)
SP00480	Reset Parameters To Default	RADIO (RADIO)
SP00481	Trailer Hook Presence Disabling	PAM (Parking Assistant Module)
SP00482	Trailer Hook Presence Enabling	PAM (Parking Assistant Module)
SP00483	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP00484	Reset Odometer	IPC (Instrument Panel Cluster)
SP00485	Reset Service Information	IPC (Instrument Panel Cluster)
SP00486	Last Service Date	IPC (Instrument Panel Cluster)
SP00487	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP00488	Flap Actuators Learning Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00489	Power Down	ETM (Entertainment Telematic Module)
SP00490	Power On And Disable User Inputs	ETM (Entertainment Telematic Module)
SP00491	Reset Parameters To Default	ETM (Entertainment Telematic Module)
SP00492	Audio Video Signal Detection	ETM (Entertainment Telematic Module)
SP00493	ECU Restart Routine	CTM (Convergence Telematic Module)
SP00494	Fire Protection System Activate	BCM (Body Control Module)
SP00495	Speed Limit Setting	ECM (Engine Control Module)
SP00496	Vehicle Configuration Reset	ECM (Engine Control Module)
SP00497	Reset Adaptative Parameter	ECM (Engine Control Module)
SP00498	Tunnel Lever Replacement	TCM (Transmission Control Module)
SP00499	Pump Relay Replacement	TCM (Transmission Control Module)
SP00500	Self-Learnt Functions Reset	TCM (Transmission Control Module)

SP00501	Inlet Valve Calibration	ABS (Anti-Lock Braking System)
SP00502	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00503	Pilot Valve Calibration	ABS (Anti-Lock Braking System)
SP00504	Brake Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00505	Steering Angle Sensor Calibration	ABS (Anti-Lock Braking System)
SP00506	Write Front And Rear Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00507	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00508	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00509	ECU SERIAL NUMBER Management	TPMS (Tire Pressure Monitoring System)
SP00510	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00511	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00512	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00513	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00514	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00515	Trailer Hook Presence Disabling	PAM (Parking Assistant Module)
SP00516	Trailer Hook Presence Enabling	PAM (Parking Assistant Module)
SP00517	Reset Odometer	IC (Instrument Cluster)
SP00518	Reset Service Information	IC (Instrument Cluster)
SP00519	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00520	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00521	Last Service Date	IC (Instrument Cluster)
SP00522	Flap Actuators Learning Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00523	Fire Protection System Activate	BCM (Body Control Module)
SP00524	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
SP00525	Differential Pressure Sensor Replac.	ECM (Engine Control Module)
SP00526	Oil Change	ECM (Engine Control Module)
SP00527	Rail Pressure Sensor Replacement	ECM (Engine Control Module)
SP00528	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00529	Replacement Lambda Sensor	ECM (Engine Control Module)
SP00530	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00531	Injector Codes Read	ECM (Engine Control Module)
SP00532	Cylinder 3 Injector Replacement	ECM (Engine Control Module)
SP00533	Cylinder 2 Injector Replacement	ECM (Engine Control Module)
SP00534	Cylinder 1 Injector Replacement	ECM (Engine Control Module)
SP00535	Speed Limit Setting	ECM (Engine Control Module)
SP00536	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00537	Fan Cooling Activation	ECM (Engine Control Module)
SP00538	EGR Valve Test	ECM (Engine Control Module)
SP00539	Resetting Distance Travelled With Water In Diesel W.Lamp ON	ECM (Engine Control Module)
SP00540	Throttle Valve Test	ECM (Engine Control Module)
SP00541	Resetting Distance Travelled With Water Temperature Warning Lamp ON	ECM (Engine Control Module)
SP00542	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)

SP00543	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00544	Static Test	ABS (Anti-Lock Braking System)
SP00545	Steering Angle Sensor Calibration	ABS (Anti-Lock Braking System)
SP00546	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00547	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00548	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00549	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00550	ECU SERIAL NUMBER Management	TPMS (Tire Pressure Monitoring System)
SP00551	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00552	Write Front And Rear Axle Nominal Tire Pressure	TPMS (Tire Pressure Monitoring System)
SP00553	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00554	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00555	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00556	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00557	Power Down	RADIO (RADIO)
SP00558	Power On And Disable User Inputs	RADIO (RADIO)
SP00559	Reset Parameters To Default	RADIO (RADIO)
SP00560	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
SP00561	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
SP00562	Reset Odometer	IC (Instrument Cluster)
SP00563	Reset Service Information	IC (Instrument Cluster)
SP00564	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00565	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00566	Last Service Date	IC (Instrument Cluster)
SP00567	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00568	Power Down	ETM (Entertainment Telematic Module)
SP00569	Power On And Disable User Inputs	ETM (Entertainment Telematic Module)
SP00570	Reset Parameters To Default	ETM (Entertainment Telematic Module)
SP00571	Audio Video Signal Detection	ETM (Entertainment Telematic Module)
SP00572	Resetting Distance Travelled With Water In Diesel W.Lamp ON	ECM (Engine Control Module)
SP00573	Resetting Distance Travelled With Water Temperature Warning Lamp ON	ECM (Engine Control Module)
SP00574	Fan Cooling Activation	ECM (Engine Control Module)
SP00575	Neutral Signal Learn	ECM (Engine Control Module)
SP00576	Injector Codes Read	ECM (Engine Control Module)
SP00577	Nox Replacement	ECM (Engine Control Module)
SP00578	Factory VIN code lock	ECM (Engine Control Module)
SP00579	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
SP00580	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
SP00581	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00582	Cylinder 1 Injector Replacement	ECM (Engine Control Module)
SP00583	Cylinder 2 Injector Replacement	ECM (Engine Control Module)
SP00584	Cylinder 3 Injector Replacement	ECM (Engine Control Module)

SP00585	Replacement Lambda Sensor	ECM (Engine Control Module)
SP00586	Oil Change	ECM (Engine Control Module)
SP00587	Differential Pressure Sensor Replac.	ECM (Engine Control Module)
SP00588	Rail Pressure Sensor Replacement	ECM (Engine Control Module)
SP00589	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00590	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP00591	Glow Plug Preheating Circuit Test	ECM (Engine Control Module)
SP00592	EGR Valve Test	ECM (Engine Control Module)
SP00593	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP00594	Throttle Valve Test	ECM (Engine Control Module)
SP00595	Proxi Alignment Procedure	ECM (Engine Control Module)
SP00596	Neutral Position Self Learning.	TCM (Transmission Control Module)
SP00597	Clear Self-Learning Data	TCM (Transmission Control Module)
SP00598	Gearbox Replacement	TCM (Transmission Control Module)
SP00599	Static Test	ABS (Anti-Lock Braking System)
SP00600	Power Down	RRM (Radio Receiver Module)
SP00601	Power On And Disable User Inputs	RRM (Radio Receiver Module)
SP00602	Reset Parameters To Default	RRM (Radio Receiver Module)
SP00603	Trailer Hook Presence Disabling	PAM (Parking Assistant Module)
SP00604	Trailer Hook Presence Enabling	PAM (Parking Assistant Module)
SP00605	Reset Service Information	IC (Instrument Cluster)
SP00606	Reset Odometer	IC (Instrument Cluster)
SP00607	Last Service Date	IC (Instrument Cluster)
SP00608	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00609	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
SP00610	Factory VIN code lock	ESM (Electronic Shifter Module)
SP00611	Resetting Distance Travelled With Water In Diesel W.Lamp ON	ECM (Engine Control Module)
SP00612	Resetting Distance Travelled With Water Temperature Warning Lamp ON	ECM (Engine Control Module)
SP00613	Fan Cooling Activation	ECM (Engine Control Module)
SP00614	Neutral Signal Learn	ECM (Engine Control Module)
SP00615	Injector Codes Read	ECM (Engine Control Module)
SP00616	Nox Replacement	ECM (Engine Control Module)
SP00617	Factory VIN code lock	ECM (Engine Control Module)
SP00618	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
SP00619	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
SP00620	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00621	Cylinder 1 Injector Replacement	ECM (Engine Control Module)
SP00622	Cylinder 2 Injector Replacement	ECM (Engine Control Module)
SP00623	Cylinder 3 Injector Replacement	ECM (Engine Control Module)
SP00624	Replacement Lambda Sensor	ECM (Engine Control Module)
SP00625	Oil Change	ECM (Engine Control Module)
SP00626	Differential Pressure Sensor Replac.	ECM (Engine Control Module)

SP00627	Rail Pressure Sensor Replacement	ECM (Engine Control Module)
SP00628	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00629	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP00630	Glow Plug Preheating Circuit Test	ECM (Engine Control Module)
SP00631	EGR Valve Test	ECM (Engine Control Module)
SP00632	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP00633	Throttle Valve Test	ECM (Engine Control Module)
SP00634	Proxi Alignment Procedure	ECM (Engine Control Module)
SP00635	Neutral Position Self Learning.	TCM (Transmission Control Module)
SP00636	Clear Self-Learning Data	TCM (Transmission Control Module)
SP00637	Gearbox Replacement	TCM (Transmission Control Module)
SP00638	Static Test	ABS (Anti-Lock Braking System)
SP00639	Power Down	RRM (Radio Receiver Module)
SP00640	Power On And Disable User Inputs	RRM (Radio Receiver Module)
SP00641	Reset Parameters To Default	RRM (Radio Receiver Module)
SP00642	Trailer Hook Presence Disabling	PAM (Parking Assistant Module)
SP00643	Trailer Hook Presence Enabling	PAM (Parking Assistant Module)
SP00644	Reset Service Information	IC (Instrument Cluster)
SP00645	Reset Odometer	IC (Instrument Cluster)
SP00646	Last Service Date	IC (Instrument Cluster)
SP00647	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00648	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
SP00649	Factory VIN code lock	ESM (Electronic Shifter Module)
SP00650	Resetting Distance Travelled With Water In Diesel W.Lamp ON	ECM (Engine Control Module)
SP00651	Resetting Distance Travelled With Water Temperature Warning Lamp ON	ECM (Engine Control Module)
SP00652	Fan Cooling Activation	ECM (Engine Control Module)
SP00653	Neutral Signal Learn	ECM (Engine Control Module)
SP00654	Injector Codes Read	ECM (Engine Control Module)
SP00655	Nox Replacement	ECM (Engine Control Module)
SP00656	Factory VIN code lock	ECM (Engine Control Module)
SP00657	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
SP00658	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
SP00659	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00660	Cylinder 1 Injector Replacement	ECM (Engine Control Module)
SP00661	Cylinder 2 Injector Replacement	ECM (Engine Control Module)
SP00662	Cylinder 3 Injector Replacement	ECM (Engine Control Module)
SP00663	Replacement Lambda Sensor	ECM (Engine Control Module)
SP00664	Oil Change	ECM (Engine Control Module)
SP00665	Differential Pressure Sensor Replac.	ECM (Engine Control Module)
SP00666	Rail Pressure Sensor Replacement	ECM (Engine Control Module)
SP00667	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00668	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)

SP00669	Glow Plug Preheating Circuit Test	ECM (Engine Control Module)
SP00670	EGR Valve Test	ECM (Engine Control Module)
SP00671	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP00672	Throttle Valve Test	ECM (Engine Control Module)
SP00673	Proxi Alignment Procedure	ECM (Engine Control Module)
SP00674	Neutral Position Self Learning.	TCM (Transmission Control Module)
SP00675	Clear Self-Learning Data	TCM (Transmission Control Module)
SP00676	Gearbox Replacement	TCM (Transmission Control Module)
SP00677	Static Test	ABS (Anti-Lock Braking System)
SP00678	Power Down	RRM (Radio Receiver Module)
SP00679	Power On And Disable User Inputs	RRM (Radio Receiver Module)
SP00680	Reset Parameters To Default	RRM (Radio Receiver Module)
SP00681	Trailer Hook Presence Disabling	PAM (Parking Assistant Module)
SP00682	Trailer Hook Presence Enabling	PAM (Parking Assistant Module)
SP00683	Reset Service Information	IC (Instrument Cluster)
SP00684	Reset Odometer	IC (Instrument Cluster)
SP00685	Last Service Date	IC (Instrument Cluster)
SP00686	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00687	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
SP00688	Factory VIN code lock	ESM (Electronic Shifter Module)
SP00689	Differential Pressure Sensor Replac.	ECM (Engine Control Module)
SP00690	Oil Change	ECM (Engine Control Module)
SP00691	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00692	Injector Codes Read	ECM (Engine Control Module)
SP00693	Rail Pressure Sensor Replacement	ECM (Engine Control Module)
SP00694	Cylinder 3 Injector Replacement	ECM (Engine Control Module)
SP00695	Cylinder 2 Injector Replacement	ECM (Engine Control Module)
SP00696	Cylinder 1 Injector Replacement	ECM (Engine Control Module)
SP00697	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00698	Replacement Lambda Sensor	ECM (Engine Control Module)
SP00699	Neutral Signal Learn	ECM (Engine Control Module)
SP00700	EGR Valve Test	ECM (Engine Control Module)
SP00701	Glow Plug Preheating Circuit Test	ECM (Engine Control Module)
SP00702	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00703	Resetting Distance Travelled With Water In Diesel W.Lamp ON	ECM (Engine Control Module)
SP00704	Throttle Valve Test	ECM (Engine Control Module)
SP00705	Resetting Distance Travelled With Water Temperature Warning Lamp ON	ECM (Engine Control Module)
SP00706	Fan Cooling Activation	ECM (Engine Control Module)
SP00707	Speed Limit Setting	ECM (Engine Control Module)
SP00708	Tunnel Lever Replacement	TCM (Transmission Control Module)
SP00709	Pump Relay Replacement	TCM (Transmission Control Module)
SP00710	Self-Learnt Functions Reset	TCM (Transmission Control Module)

SP00711	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP00712	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00713	Static Test	ABS (Anti-Lock Braking System)
SP00714	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
SP00715	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
SP00716	Reset Odometer	IC (Instrument Cluster)
SP00717	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00718	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00719	ECU Restart Routine	CTM (Convergence Telematic Module)
SP00720	Air Flow Meter Replacement	PCM (Powertrain Control Module)
SP00721	DPF Reset Option	PCM (Powertrain Control Module)
SP00722	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP00723	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP00724	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP00725	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP00726	Service Diesel Particulate Filter Regeneration	PCM (Powertrain Control Module)
SP00727	Throttle Valve Learn	PCM (Powertrain Control Module)
SP00728	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
SP00729	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
SP00730	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
SP00731	Rollover Detection	SRS (Supplemental Inflatable Restraint System, ORC)
SP00732	Activate Driver And Passenger Head Restraint	SRS (Supplemental Inflatable Restraint System, ORC)
SP00733	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP00734	Actuator Calibration Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00735	Configure License Plate Size	EPB (Electrical Parking Brake)
SP00736	System Wiring Test	EPB (Electrical Parking Brake)
SP00737	Auto Door Lock	BCM (Body Control Module)
SP00738	Program Tire Size	BCM (Body Control Module)
SP00739	Exit Shipping Mode	BCM (Body Control Module)
SP00740	Air Flow Meter Replacement	PCM (Powertrain Control Module)
SP00741	DPF Reset Option	PCM (Powertrain Control Module)
SP00742	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP00743	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP00744	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP00745	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP00746	Service Diesel Particulate Filter Regeneration	PCM (Powertrain Control Module)
SP00747	Throttle Valve Learn	PCM (Powertrain Control Module)
SP00748	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
SP00749	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
SP00750	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
SP00751	Rollover Detection	SRS (Supplemental Inflatable Restraint System, ORC)
SP00752	Activate Driver And Passenger Head Restraint	SRS (Supplemental Inflatable Restraint System, ORC)

SP00753	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00754	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00755	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00756	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00757	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP00758	Activate TPM High Gain Mode	TPMS (Tire Pressure Monitoring System)
SP00759	TPM Sensor Position Parameter Update	TPMS (Tire Pressure Monitoring System)
SP00760	Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00761	Actuator Calibration Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00762	Configure License Plate Size	EPB (Electrical Parking Brake)
SP00763	System Wiring Test	EPB (Electrical Parking Brake)
SP00764	Auto Door Lock	BCM (Body Control Module)
SP00765	Program Tire Size	BCM (Body Control Module)
SP00766	Exit Shipping Mode	BCM (Body Control Module)
SP00767	Cam Crank Relearn	PCM (Powertrain Control Module)
SP00768	Check PCM Odometer	PCM (Powertrain Control Module)
SP00769	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP00770	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP00771	Reset Memory	PCM (Powertrain Control Module)
SP00772	Write Pinion Factor	PCM (Powertrain Control Module)
SP00773	EGR System Test	PCM (Powertrain Control Module)
SP00774	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP00775	Set Engine RPM	PCM (Powertrain Control Module)
SP00776	Shift Lever Position Test (62TE)	PCM (Powertrain Control Module)
SP00777	Shift Lever Position Test (Non-RFE)	PCM (Powertrain Control Module)
SP00778	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
SP00779	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
SP00780	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
SP00781	Rollover Detection	SRS (Supplemental Inflatable Restraint System, ORC)
SP00782	Activate Driver And Passenger Head Restraint	SRS (Supplemental Inflatable Restraint System, ORC)
SP00783	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00784	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00785	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00786	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00787	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP00788	Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00789	Actuator Calibration Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00790	Configure License Plate Size	EPB (Electrical Parking Brake)
SP00791	System Wiring Test	EPB (Electrical Parking Brake)
SP00792	Auto Door Lock	BCM (Body Control Module)
SP00793	Program Tire Size	BCM (Body Control Module)
SP00794	Exit Shipping Mode	BCM (Body Control Module)

SP00795	Air Flow Meter Replacement	PCM (Powertrain Control Module)
SP00796	DPF Reset Option	PCM (Powertrain Control Module)
SP00797	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP00798	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP00799	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP00800	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP00801	Service Diesel Particulate Filter Regeneration	PCM (Powertrain Control Module)
SP00802	Throttle Valve Learn	PCM (Powertrain Control Module)
SP00803	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
SP00804	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
SP00805	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
SP00806	Rollover Detection	SRS (Supplemental Inflatable Restraint System, ORC)
SP00807	Activate Driver And Passenger Head Restraint	SRS (Supplemental Inflatable Restraint System, ORC)
SP00808	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00809	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00810	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00811	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00812	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP00813	Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00814	Actuator Calibration Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00815	Configure License Plate Size	EPB (Electrical Parking Brake)
SP00816	System Wiring Test	EPB (Electrical Parking Brake)
SP00817	Auto Door Lock	BCM (Body Control Module)
SP00818	Program Tire Size	BCM (Body Control Module)
SP00819	Exit Shipping Mode	BCM (Body Control Module)
SP00820	Air Flow Meter Replacement	PCM (Powertrain Control Module)
SP00821	DPF Reset Option	PCM (Powertrain Control Module)
SP00822	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP00823	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP00824	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP00825	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP00826	Service Diesel Particulate Filter Regeneration	PCM (Powertrain Control Module)
SP00827	Throttle Valve Learn	PCM (Powertrain Control Module)
SP00828	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
SP00829	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
SP00830	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
SP00831	Rollover Detection	SRS (Supplemental Inflatable Restraint System, ORC)
SP00832	Activate Driver And Passenger Head Restraint	SRS (Supplemental Inflatable Restraint System, ORC)
SP00833	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00834	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00835	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00836	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)

SP00837	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP00838	Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00839	Actuator Calibration Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00840	Configure License Plate Size	EPB (Electrical Parking Brake)
SP00841	System Wiring Test	EPB (Electrical Parking Brake)
SP00842	Auto Door Lock	BCM (Body Control Module)
SP00843	Program Tire Size	BCM (Body Control Module)
SP00844	Exit Shipping Mode	BCM (Body Control Module)
SP00845	Air Flow Meter Replacement	PCM (Powertrain Control Module)
SP00846	DPF Reset Option	PCM (Powertrain Control Module)
SP00847	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP00848	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP00849	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP00850	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP00851	Service Diesel Particulate Filter Regeneration	PCM (Powertrain Control Module)
SP00852	Throttle Valve Learn	PCM (Powertrain Control Module)
SP00853	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
SP00854	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
SP00855	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
SP00856	Rollover Detection	SRS (Supplemental Inflatable Restraint System, ORC)
SP00857	Activate Driver And Passenger Head Restraint	SRS (Supplemental Inflatable Restraint System, ORC)
SP00858	Auto Door Lock	BCM (Body Control Module)
SP00859	Program Tire Size	BCM (Body Control Module)
SP00860	Exit Shipping Mode	BCM (Body Control Module)
SP00861	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00862	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00863	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00864	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00865	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP00866	Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00867	Actuator Calibration Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00868	Configure License Plate Size	EPB (Electrical Parking Brake)
SP00869	System Wiring Test	EPB (Electrical Parking Brake)
SP00870	Fuel Circuit Purge	ECM (Engine Control Module)
SP00871	General Stop Actuator	ECM (Engine Control Module)
SP00872	Reset Adaptative Parameter	ECM (Engine Control Module)
SP00873	Reset Purge Fuel Circuit	ECM (Engine Control Module)
SP00874	Reset Phonic Wheel Tooth Learn	ECM (Engine Control Module)
SP00875	Reset Camshaft Adaptative	ECM (Engine Control Module)
SP00876	Cam Crank Relearn	PCM (Powertrain Control Module)
SP00877	Check PCM Odometer	PCM (Powertrain Control Module)
SP00878	FCM Enable Emissions Rolls Test Mode	PCM (Powertrain Control Module)

SP00879	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP00880	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP00881	Reset Memory	PCM (Powertrain Control Module)
SP00882	Clear Engine Auto Restart Crank Counter	PCM (Powertrain Control Module)
SP00883	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP00884	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP00885	Enable Engine Idle Shutdown Feature	PCM (Powertrain Control Module)
SP00886	EGR System Test	PCM (Powertrain Control Module)
SP00887	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP00888	Set Engine RPM	PCM (Powertrain Control Module)
SP00889	Shift Lever Position Test (62TE)	PCM (Powertrain Control Module)
SP00890	Shift Lever Position Test (Non-RFE)	PCM (Powertrain Control Module)
SP00891	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP00892	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP00893	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
SP00894	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
SP00895	Reset Odometer	IPC (Instrument Panel Cluster)
SP00896	Self Learning Motors Test	HVAC (Heat, Ventilation And A/C)
SP00897	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
SP00898	Factory VIN code lock	ESM (Electronic Shifter Module)
SP00899	Steering Angle Sensor	EPS (Electric Power Steering)
SP00900	Driver Mirror Axis X Command	DMM (Doors Management Module)
SP00901	Driver Mirror Axis Y Command	DMM (Doors Management Module)
SP00902	Fire Protection System Activate	BCM (Body Control Module)
SP00903	Lock Doors Command	BCM (Body Control Module)
SP00904	Unlock Doors Command	BCM (Body Control Module)
SP00905	Check Siren	BCM (Body Control Module)
SP00906	Siren Command	BCM (Body Control Module)
SP00907	Cargo Unlock Relay	BCM (Body Control Module)
SP00908	Cargo Lock Relay	BCM (Body Control Module)
SP00909	Cam Crank Relearn	PCM (Powertrain Control Module)
SP00910	Check PCM Odometer	PCM (Powertrain Control Module)
SP00911	FCM Enable Emissions Rolls Test Mode	PCM (Powertrain Control Module)
SP00912	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP00913	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP00914	Reset Memory	PCM (Powertrain Control Module)
SP00915	Clear Engine Auto Restart Crank Counter	PCM (Powertrain Control Module)
SP00916	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP00917	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP00918	Enable Engine Idle Shutdown Feature	PCM (Powertrain Control Module)
SP00919	EGR System Test	PCM (Powertrain Control Module)
SP00920	ETC Throttle Follower Test	PCM (Powertrain Control Module)

SP00921	Set Engine RPM	PCM (Powertrain Control Module)
SP00922	Shift Lever Position Test (62TE)	PCM (Powertrain Control Module)
SP00923	Shift Lever Position Test (Non-RFE)	PCM (Powertrain Control Module)
SP00924	Fuel Circuit Purge	ECM (Engine Control Module)
SP00925	General Stop Actuator	ECM (Engine Control Module)
SP00926	Reset Adaptative Parameter	ECM (Engine Control Module)
SP00927	Reset Purge Fuel Circuit	ECM (Engine Control Module)
SP00928	Reset Phonic Wheel Tooth Learn	ECM (Engine Control Module)
SP00929	Reset Camshaft Adaptative	ECM (Engine Control Module)
SP00930	Clear Self Learning Data	TCM (Transmission Control Module)
SP00931	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP00932	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP00933	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP00934	Trailer Hook Presence Disabling	PAM (Parking Assistant Module)
SP00935	Trailer Hook Presence Enabling	PAM (Parking Assistant Module)
SP00936	Reset Service Information	IC (Instrument Cluster)
SP00937	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00938	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
SP00939	Factory VIN code lock	ESM (Electronic Shifter Module)
SP00940	Steering Angle Sensor	EPS (Electric Power Steering)
SP00941	Driver Mirror Axis X Command	DMM (Doors Management Module)
SP00942	Driver Mirror Axis Y Command	DMM (Doors Management Module)
SP00943	Exit Shipping Mode	BCM (Body Control Module)
SP00944	Lock Doors Command	BCM (Body Control Module)
SP00945	Unlock Doors Command	BCM (Body Control Module)
SP00946	Siren Command	BCM (Body Control Module)
SP00947	Fire Protection System Activate	BCM (Body Control Module)
SP00948	ECM Proxi Alignment	ECM (Engine Control Module)
SP00949	Reset Adaptative Parameter	ECM (Engine Control Module)
SP00950	Vehicle Configuration Reset	ECM (Engine Control Module)
SP00951	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP00952	General Stop Actuator	ECM (Engine Control Module)
SP00953	Reset Functions Self Learned	TCM (Transmission Control Module)
SP00954	Disabling All Actuators	TCM (Transmission Control Module)
SP00955	Shutdown Actuators	TCM (Transmission Control Module)
SP00956	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP00957	Quick Learn	TCM (Transmission Control Module)
SP00958	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
SP00959	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
SP00960	MTA Proxi Configuration	TCM (Transmission Control Module)
SP00961	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
SP00962	New Actuators	TCM (Transmission Control Module)

SP00963	Reset TPMS Calibration	ABS (Anti Lock Brakes)
SP00964	ORC Proxi Alignment	ORC (Occupant Restraint)
SP00965	Reset Parameter.	LTM (Low Telematic Module)
SP00966	Reset Parameter.	ETM (Entertainment Telematic Module)
SP00967	Reset Parameter	ETM (Entertainment Telematic Module)
SP00968	Reset Functions Self Learned	DMM (Doors Management Module)
SP00969	Disabling All Actuators	DMM (Doors Management Module)
SP00970	Shutdown Actuators	DMM (Doors Management Module)
SP00971	Learn Clutches Contact Point	DMM (Doors Management Module)
SP00972	Quick Learn	DMM (Doors Management Module)
SP00973	Hydraulic Circuit Depressurization	DMM (Doors Management Module)
SP00974	Bleed Hydraulic Circuit	DMM (Doors Management Module)
SP00975	MTA Proxi Configuration	DMM (Doors Management Module)
SP00976	ECU Replacement With Value Transfer	DMM (Doors Management Module)
SP00977	New Actuators	DMM (Doors Management Module)
SP00978	Lock Doors Command	BCM (Body Control Module)
SP00979	Wind Shield Wiper	BCM (Body Control Module)
SP00980	Rear Window Washer Command	BCM (Body Control Module)
SP00981	Unlock Doors Command	BCM (Body Control Module)
SP00982	Rear Window Wiper Command	BCM (Body Control Module)
SP00983	Siren Command	BCM (Body Control Module)
SP00984	Impone AF Gasoline	ECM (Engine Control Module)
SP00985	Impone AF Learning	ECM (Engine Control Module)
SP00986	ECM Proxi Alignment	ECM (Engine Control Module)
SP00987	Vehicle Configuration Reset	ECM (Engine Control Module)
SP00988	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP00989	General Stop Actuator	ECM (Engine Control Module)
SP00990	Impone AF Alcool	ECM (Engine Control Module)
SP00991	Fuel Circuit Purge	ECM (Engine Control Module)
SP00992	Purge Fuel Circuit Reset	ECM (Engine Control Module)
SP00993	Clutch Pedal Learning	ECM (Engine Control Module)
SP00994	Reset Adaptative Parameter	ECM (Engine Control Module)
SP00995	Reset Functions Self Learned	TCM (Transmission Control Module)
SP00996	Disabling All Actuators	TCM (Transmission Control Module)
SP00997	Shutdown Actuators	TCM (Transmission Control Module)
SP00998	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP00999	Quick Learn	TCM (Transmission Control Module)
SP01000	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
SP01001	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
SP01002	MTA Proxi Configuration	TCM (Transmission Control Module)
SP01003	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
SP01004	New Actuators	TCM (Transmission Control Module)

SP01005	Reset TPMS Calibration	ABS (Anti Lock Brakes)
SP01006	ORC Proxi Alignment	ORC (Occupant Restraint)
SP01007	Reset Functions Self Learned	DMM (Doors Management Module)
SP01008	Disabling All Actuators	DMM (Doors Management Module)
SP01009	Shutdown Actuators	DMM (Doors Management Module)
SP01010	Learn Clutches Contact Point	DMM (Doors Management Module)
SP01011	Quick Learn	DMM (Doors Management Module)
SP01012	Hydraulic Circuit Depressurization	DMM (Doors Management Module)
SP01013	Bleed Hydraulic Circuit	DMM (Doors Management Module)
SP01014	MTA Proxi Configuration	DMM (Doors Management Module)
SP01015	ECU Replacement With Value Transfer	DMM (Doors Management Module)
SP01016	New Actuators	DMM (Doors Management Module)
SP01017	Lock Doors Command	BCM (Body Control Module)
SP01018	Wind Shield Wiper	BCM (Body Control Module)
SP01019	Rear Window Washer Command	BCM (Body Control Module)
SP01020	Unlock Doors Command	BCM (Body Control Module)
SP01021	Rear Window Wiper Command	BCM (Body Control Module)
SP01022	Siren Command	BCM (Body Control Module)
SP01023	ECM Proxi Alignment	ECM (Engine Control Module)
SP01024	Reset Adaptative Parameter	ECM (Engine Control Module)
SP01025	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01026	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP01027	General Stop Actuator	ECM (Engine Control Module)
SP01028	Reset Functions Self Learned	TCM (Transmission Control Module)
SP01029	Disabling All Actuators	TCM (Transmission Control Module)
SP01030	Shutdown Actuators	TCM (Transmission Control Module)
SP01031	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP01032	Quick Learn	TCM (Transmission Control Module)
SP01033	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
SP01034	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
SP01035	MTA Proxi Configuration	TCM (Transmission Control Module)
SP01036	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
SP01037	New Actuators	TCM (Transmission Control Module)
SP01038	BSM Proxi Alignment	ABS (Anti-Lock Braking System)
SP01039	ORC Proxi Alignment	SRS (Supplemental Inflatable Restraint System, ORC)
SP01040	Oil Service Reset	IC (Instrument Cluster)
SP01041	Reset Functions Self Learned	DMM (Doors Management Module)
SP01042	Disabling All Actuators	DMM (Doors Management Module)
SP01043	Shutdown Actuators	DMM (Doors Management Module)
SP01044	Learn Clutches Contact Point	DMM (Doors Management Module)
SP01045	Quick Learn	DMM (Doors Management Module)
SP01046	Hydraulic Circuit Depressurization	DMM (Doors Management Module)

SP01047	Bleed Hydraulic Circuit	DMM (Doors Management Module)
SP01048	MTA Proxi Configuration	DMM (Doors Management Module)
SP01049	ECU Replacement With Value Transfer	DMM (Doors Management Module)
SP01050	New Actuators	DMM (Doors Management Module)
SP01051	Exit Shipping Mode	BCM (Body Control Module)
SP01052	Read Proxi	BCM (Body Control Module)
SP01053	Check Siren	BCM (Body Control Module)
SP01054	Request Check	BCM (Body Control Module)
SP01055	Lock Doors Command	BCM (Body Control Module)
SP01056	Glass Washer Rear	BCM (Body Control Module)
SP01057	Siren Command	BCM (Body Control Module)
SP01058	Unlock Doors Command	BCM (Body Control Module)
SP01059	Wind Shield Washer	BCM (Body Control Module)
SP01060	Impone AF Gasoline	ECM (Engine Control Module)
SP01061	Impone AF Learning	ECM (Engine Control Module)
SP01062	Reset Adaptative Parameter	ECM (Engine Control Module)
SP01063	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01064	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP01065	General Stop Actuator	ECM (Engine Control Module)
SP01066	Impone AF Alcool	ECM (Engine Control Module)
SP01067	ECM Proxi Alignment	ECM (Engine Control Module)
SP01068	Reset Functions Self Learned	TCM (Transmission Control Module)
SP01069	Disabling All Actuators	TCM (Transmission Control Module)
SP01070	Shutdown Actuators	TCM (Transmission Control Module)
SP01071	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP01072	Quick Learn	TCM (Transmission Control Module)
SP01073	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
SP01074	Bleed Hydraulic Circuit	TCM (Transmission Control Module)
SP01075	MTA Proxi Configuration	TCM (Transmission Control Module)
SP01076	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
SP01077	New Actuators	TCM (Transmission Control Module)
SP01078	BSM Proxi Alignment	ABS (Anti-Lock Braking System)
SP01079	ORC Proxi Alignment	SRS (Supplemental Inflatable Restraint System, ORC)
SP01080	Oil Service Reset	IC (Instrument Cluster)
SP01081	Reset Functions Self Learned	DMM (Doors Management Module)
SP01082	Disabling All Actuators	DMM (Doors Management Module)
SP01083	Shutdown Actuators	DMM (Doors Management Module)
SP01084	Learn Clutches Contact Point	DMM (Doors Management Module)
SP01085	Quick Learn	DMM (Doors Management Module)
SP01086	Hydraulic Circuit Depressurization	DMM (Doors Management Module)
SP01087	Bleed Hydraulic Circuit	DMM (Doors Management Module)
SP01088	MTA Proxi Configuration	DMM (Doors Management Module)

SP01089	ECU Replacement With Value Transfer	DMM (Doors Management Module)
SP01090	New Actuators	DMM (Doors Management Module)
SP01091	Exit Shipping Mode	BCM (Body Control Module)
SP01092	Read Proxi	BCM (Body Control Module)
SP01093	Check Siren	BCM (Body Control Module)
SP01094	Request Check	BCM (Body Control Module)
SP01095	Lock Doors Command	BCM (Body Control Module)
SP01096	Glass Washer Rear	BCM (Body Control Module)
SP01097	Siren Command	BCM (Body Control Module)
SP01098	Unlock Doors Command	BCM (Body Control Module)
SP01099	Wind Shield Washer	BCM (Body Control Module)
SP01100	Deactivation Of The Power Limitation Function	ECM (Engine Control Module)
SP01101	Fan Cooling Activation	ECM (Engine Control Module)
SP01102	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP01103	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01104	Gearbox Replacement	TCM (Transmission Control Module)
SP01105	Lever Release Solenoid Command	TCM (Transmission Control Module)
SP01106	Static Test	ABS (Anti-Lock Braking System)
SP01107	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
SP01108	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
SP01109	Reset Odometer	IC (Instrument Cluster)
SP01110	Reset Service Information	IC (Instrument Cluster)
SP01111	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01112	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01113	Last Service Date	IC (Instrument Cluster)
SP01114	Actuator Calibration Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP01115	Fire Protection System Activate	BCM (Body Control Module)
SP01116	Fire Protection System Activate	BCM (Body Control Module)
SP01117	Reset Adaptative Parameters	PCM (Powertrain Control Module)
SP01118	Reset Phases Front	PCM (Powertrain Control Module)
SP01119	Self Learning Throttle Body	PCM (Powertrain Control Module)
SP01120	Tunnel Lever Replacement	TCM (Transmission Control Module)
SP01121	Pump Relay Replacement	TCM (Transmission Control Module)
SP01122	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01123	Static Test	ABS (Anti-Lock Braking System)
SP01124	Enable Tow Hook Presence	PTS (Parktronics)
SP01125	Disable Tow Hook Presence	PTS (Parktronics)
SP01126	Reset Odometer	IC (Instrument Cluster)
SP01127	Reset Service Information	IC (Instrument Cluster)
SP01128	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01129	Last Service Date	IC (Instrument Cluster)
SP01130	Enable Seat Belts Reminder	IC (Instrument Cluster)

SP01131	Flap Actuators Learning Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP01132	Injector Codes Read	ECM (Engine Control Module)
SP01133	Rail Pressure Sensor Replacement	ECM (Engine Control Module)
SP01134	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01135	Replacement Lambda Sensor	ECM (Engine Control Module)
SP01136	Cylinder 1 Injector Replacement	ECM (Engine Control Module)
SP01137	Cylinder 2 Injector Replacement	ECM (Engine Control Module)
SP01138	Cylinder 3 Injector Replacement	ECM (Engine Control Module)
SP01139	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01140	Rail Pressure Sensor And Injector/S Replacement	ECM (Engine Control Module)
SP01141	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01142	Tunnel Lever Replacement	TCM (Transmission Control Module)
SP01143	Levers At Wheel Replacement	TCM (Transmission Control Module)
SP01144	Pump Relay Replacement	TCM (Transmission Control Module)
SP01145	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01146	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP01147	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP01148	Static Test	ABS (Anti-Lock Braking System)
SP01149	Alarms Deletion	TPMS (Tire Pressure Monitoring System)
SP01150	Antenna Replacement	TPMS (Tire Pressure Monitoring System)
SP01151	Control Unit Activation	TPMS (Tire Pressure Monitoring System)
SP01152	Control Unit Deactivation	TPMS (Tire Pressure Monitoring System)
SP01153	Manual System Configuration	TPMS (Tire Pressure Monitoring System)
SP01154	Automatic Configuration Read	TPMS (Tire Pressure Monitoring System)
SP01155	Wheel Transmitters Learning	TPMS (Tire Pressure Monitoring System)
SP01156	Automatic Configuration Write	TPMS (Tire Pressure Monitoring System)
SP01157	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
SP01158	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
SP01159	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01160	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01161	Reset Odometer	IC (Instrument Cluster)
SP01162	Reset Service Information	IC (Instrument Cluster)
SP01163	Last Service Date	IC (Instrument Cluster)
SP01164	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP01165	ECU Restart Routine	CTM (Convergence Telematic Module)
SP01166	Fire Protection System Activate	BCM (Body Control Module)
SP01167	Fuel Circuit Purge	ECM (Engine Control Module)
SP01168	General Stop Actuator	ECM (Engine Control Module)
SP01169	Reset Adaptative Parameter	ECM (Engine Control Module)
SP01170	Reset Purge Fuel Circuit	ECM (Engine Control Module)
SP01171	Reset Phonic Wheel Tooth Learn	ECM (Engine Control Module)
SP01172	Reset Camshaft Adaptative	ECM (Engine Control Module)

SP01173	Cam Crank Relearn	PCM (Powertrain Control Module)
SP01174	Check PCM Odometer	PCM (Powertrain Control Module)
SP01175	FCM Enable Emissions Rolls Test Mode	PCM (Powertrain Control Module)
SP01176	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP01177	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP01178	Reset Memory	PCM (Powertrain Control Module)
SP01179	Clear Engine Auto Restart Crank Counter	PCM (Powertrain Control Module)
SP01180	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP01181	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP01182	Enable Engine Idle Shutdown Feature	PCM (Powertrain Control Module)
SP01183	EGR System Test	PCM (Powertrain Control Module)
SP01184	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP01185	Set Engine RPM	PCM (Powertrain Control Module)
SP01186	Shift Lever Position Test (62TE)	PCM (Powertrain Control Module)
SP01187	Shift Lever Position Test (Non-RFE)	PCM (Powertrain Control Module)
SP01188	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP01189	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP01190	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
SP01191	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
SP01192	Reset Odometer	IPC (Instrument Panel Cluster)
SP01193	Self Learning Motors Test	HVAC (Heat, Ventilation And A/C)
SP01194	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
SP01195	Factory VIN code lock	ESM (Electronic Shifter Module)
SP01196	Steering Angle Sensor	EPS (Electric Power Steering)
SP01197	Driver Mirror Axis X Command	DMM (Doors Management Module)
SP01198	Driver Mirror Axis Y Command	DMM (Doors Management Module)
SP01199	Fire Protection System Activate	BCM (Body Control Module)
SP01200	Lock Doors Command	BCM (Body Control Module)
SP01201	Unlock Doors Command	BCM (Body Control Module)
SP01202	Check Siren	BCM (Body Control Module)
SP01203	Siren Command	BCM (Body Control Module)
SP01204	Cargo Unlock Relay	BCM (Body Control Module)
SP01205	Cargo Lock Relay	BCM (Body Control Module)
SP01206	Fuel Circuit Purge	ECM (Engine Control Module)
SP01207	General Stop Actuator	ECM (Engine Control Module)
SP01208	Reset Adaptative Parameter	ECM (Engine Control Module)
SP01209	Reset Purge Fuel Circuit	ECM (Engine Control Module)
SP01210	Reset Phonic Wheel Tooth Learn	ECM (Engine Control Module)
SP01211	Reset Camshaft Adaptative	ECM (Engine Control Module)
SP01212	Cam Crank Relearn	PCM (Powertrain Control Module)
SP01213	Check PCM Odometer	PCM (Powertrain Control Module)
SP01214	FCM Enable Emissions Rolls Test Mode	PCM (Powertrain Control Module)

SP01215	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP01216	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP01217	Reset Memory	PCM (Powertrain Control Module)
SP01218	Clear Engine Auto Restart Crank Counter	PCM (Powertrain Control Module)
SP01219	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP01220	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP01221	Enable Engine Idle Shutdown Feature	PCM (Powertrain Control Module)
SP01222	EGR System Test	PCM (Powertrain Control Module)
SP01223	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP01224	Set Engine RPM	PCM (Powertrain Control Module)
SP01225	Shift Lever Position Test (62TE)	PCM (Powertrain Control Module)
SP01226	Shift Lever Position Test (Non-RFE)	PCM (Powertrain Control Module)
SP01227	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP01228	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP01229	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
SP01230	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
SP01231	Reset Odometer	IPC (Instrument Panel Cluster)
SP01232	Self Learning Motors Test	HVAC (Heat, Ventilation And A/C)
SP01233	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
SP01234	Factory VIN code lock	ESM (Electronic Shifter Module)
SP01235	Steering Angle Sensor	EPS (Electric Power Steering)
SP01236	Driver Mirror Axis X Command	DMM (Doors Management Module)
SP01237	Driver Mirror Axis Y Command	DMM (Doors Management Module)
SP01238	Fire Protection System Activate	BCM (Body Control Module)
SP01239	Lock Doors Command	BCM (Body Control Module)
SP01240	Unlock Doors Command	BCM (Body Control Module)
SP01241	Check Siren	BCM (Body Control Module)
SP01242	Siren Command	BCM (Body Control Module)
SP01243	Cargo Unlock Relay	BCM (Body Control Module)
SP01244	Cargo Lock Relay	BCM (Body Control Module)
SP01245	Fuel Circuit Purge	ECM (Engine Control Module)
SP01246	General Stop Actuator	ECM (Engine Control Module)
SP01247	Reset Adaptative Parameter	ECM (Engine Control Module)
SP01248	Reset Purge Fuel Circuit	ECM (Engine Control Module)
SP01249	Reset Phonic Wheel Tooth Learn	ECM (Engine Control Module)
SP01250	Reset Camshaft Adaptative	ECM (Engine Control Module)
SP01251	Cam Crank Relearn	PCM (Powertrain Control Module)
SP01252	Check PCM Odometer	PCM (Powertrain Control Module)
SP01253	FCM Enable Emissions Rolls Test Mode	PCM (Powertrain Control Module)
SP01254	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP01255	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP01256	Reset Memory	PCM (Powertrain Control Module)

SP01257	Clear Engine Auto Restart Crank Counter	PCM (Powertrain Control Module)
SP01258	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP01259	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP01260	Enable Engine Idle Shutdown Feature	PCM (Powertrain Control Module)
SP01261	EGR System Test	PCM (Powertrain Control Module)
SP01262	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP01263	Set Engine RPM	PCM (Powertrain Control Module)
SP01264	Shift Lever Position Test (62TE)	PCM (Powertrain Control Module)
SP01265	Shift Lever Position Test (Non-RFE)	PCM (Powertrain Control Module)
SP01266	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP01267	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP01268	Auto Door Lock	RBSS (Right Blind Spot Sensor)
SP01269	Program Tire Size	RBSS (Right Blind Spot Sensor)
SP01270	Exit Shipping Mode	RBSS (Right Blind Spot Sensor)
SP01271	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
SP01272	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
SP01273	Reset Odometer	IPC (Instrument Panel Cluster)
SP01274	Self Learning Motors Test	HVAC (Heat, Ventilation And A/C)
SP01275	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
SP01276	Factory VIN code lock	ESM (Electronic Shifter Module)
SP01277	Steering Angle Sensor	EPS (Electric Power Steering)
SP01278	Driver Mirror Axis X Command	DMM (Doors Management Module)
SP01279	Driver Mirror Axis Y Command	DMM (Doors Management Module)
SP01280	Fire Protection System Activate	BCM (Body Control Module)
SP01281	Lock Doors Command	BCM (Body Control Module)
SP01282	Unlock Doors Command	BCM (Body Control Module)
SP01283	Check Siren	BCM (Body Control Module)
SP01284	Siren Command	BCM (Body Control Module)
SP01285	Cargo Unlock Relay	BCM (Body Control Module)
SP01286	Cargo Lock Relay	BCM (Body Control Module)
SP01287	Cam Crank Relearn	PCM (Powertrain Control Module)
SP01288	Check PCM Odometer	PCM (Powertrain Control Module)
SP01289	FCM Enable Emissions Rolls Test Mode	PCM (Powertrain Control Module)
SP01290	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP01291	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP01292	Reset Memory	PCM (Powertrain Control Module)
SP01293	Clear Engine Auto Restart Crank Counter	PCM (Powertrain Control Module)
SP01294	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP01295	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP01296	Enable Engine Idle Shutdown Feature	PCM (Powertrain Control Module)
SP01297	EGR System Test	PCM (Powertrain Control Module)
SP01298	ETC Throttle Follower Test	PCM (Powertrain Control Module)

SP01299	Set Engine RPM	PCM (Powertrain Control Module)
SP01300	Shift Lever Position Test (62TE)	PCM (Powertrain Control Module)
SP01301	Shift Lever Position Test (Non-RFE)	PCM (Powertrain Control Module)
SP01302	Fuel Circuit Purge	ECM (Engine Control Module)
SP01303	General Stop Actuator	ECM (Engine Control Module)
SP01304	Reset Adaptative Parameter	ECM (Engine Control Module)
SP01305	Reset Purge Fuel Circuit	ECM (Engine Control Module)
SP01306	Reset Phonic Wheel Tooth Learn	ECM (Engine Control Module)
SP01307	Reset Camshaft Adaptative	ECM (Engine Control Module)
SP01308	Clear Self Learning Data	TCM (Transmission Control Module)
SP01309	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP01310	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP01311	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP01312	Trailer Hook Presence Disabling	PAM (Parking Assistant Module)
SP01313	Trailer Hook Presence Enabling	PAM (Parking Assistant Module)
SP01314	Reset Service Information	IC (Instrument Cluster)
SP01315	Self Learning Motors Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP01316	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
SP01317	Factory VIN code lock	ESM (Electronic Shifter Module)
SP01318	Steering Angle Sensor	EPS (Electric Power Steering)
SP01319	Driver Mirror Axis X Command	DMM (Doors Management Module)
SP01320	Driver Mirror Axis Y Command	DMM (Doors Management Module)
SP01321	Exit Shipping Mode	BCM (Body Control Module)
SP01322	Lock Doors Command	BCM (Body Control Module)
SP01323	Unlock Doors Command	BCM (Body Control Module)
SP01324	Siren Command	BCM (Body Control Module)
SP01325	Fire Protection System Activate	BCM (Body Control Module)
SP01326	Deactivation Of The Power Limitation Function	ECM (Engine Control Module)
SP01327	Fan Cooling Activation	ECM (Engine Control Module)
SP01328	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP01329	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01330	Gearbox Replacement	TCM (Transmission Control Module)
SP01331	Lever Release Solenoid Command	TCM (Transmission Control Module)
SP01332	Static Test	ABS (Anti-Lock Braking System)
SP01333	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
SP01334	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
SP01335	Reset Odometer	IC (Instrument Cluster)
SP01336	Reset Service Information	IC (Instrument Cluster)
SP01337	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01338	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01339	Last Service Date	IC (Instrument Cluster)
SP01340	Actuator Calibration Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)

SP01341	Fire Protection System Activate	BCM (Body Control Module)
SP01342	Cam Crank Relearn	PCM (Powertrain Control Module)
SP01343	Check PCM Odometer	PCM (Powertrain Control Module)
SP01344	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP01345	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP01346	Reset Memory	PCM (Powertrain Control Module)
SP01347	EGR System Test	PCM (Powertrain Control Module)
SP01348	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP01349	Set Engine RPM	PCM (Powertrain Control Module)
SP01350	Shift Lever Position Test (62TE)	PCM (Powertrain Control Module)
SP01351	Shift Lever Position Test (Non-RFE)	PCM (Powertrain Control Module)
SP01352	ABS Initialization	ABS (Anti Lock Brakes)
SP01353	Bleed Brakes	ABS (Anti Lock Brakes)
SP01354	Activate Driver And Passenger Head Restraint	ORC (Occupant Restraint)
SP01355	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP01356	Reset Odometer	PDM (Passenger Door Module)
SP01357	Reset Service Information	PDM (Passenger Door Module)
SP01358	Disable Seat Belts Reminder	PDM (Passenger Door Module)
SP01359	Enable Seat Belts Reminder	PDM (Passenger Door Module)
SP01360	Actuator Calibration Test	HVAC (Heat, Ventilation And A/C)
SP01361	Auto Door Lock	CCN (Instrument Cluster/Cabin Compartment Node)
SP01362	Auto Door Unlock	CCN (Instrument Cluster/Cabin Compartment Node)
SP01363	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP01364	Update Measurement Unit	CCN (Instrument Cluster/Cabin Compartment Node)
SP01365	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP01366	Self Test	CCN (Instrument Cluster/Cabin Compartment Node)
SP01367	Cam Crank Relearn	PCM (Powertrain Control Module)
SP01368	Check PCM Odometer	PCM (Powertrain Control Module)
SP01369	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP01370	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP01371	Reset Memory	PCM (Powertrain Control Module)
SP01372	EGR System Test	PCM (Powertrain Control Module)
SP01373	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP01374	Set Engine RPM	PCM (Powertrain Control Module)
SP01375	Shift Lever Position Test (62TE)	PCM (Powertrain Control Module)
SP01376	Shift Lever Position Test (Non-RFE)	PCM (Powertrain Control Module)
SP01377	ABS Initialization	ABS (Anti Lock Brakes)
SP01378	Bleed Brakes	ABS (Anti Lock Brakes)
SP01379	Activate Driver And Passenger Head Restraint	ORC (Occupant Restraint)
SP01380	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP01381	Reset Odometer	PDM (Passenger Door Module)
SP01382	Reset Service Information	PDM (Passenger Door Module)

SP01383	Disable Seat Belts Reminder	PDM (Passenger Door Module)
SP01384	Enable Seat Belts Reminder	PDM (Passenger Door Module)
SP01385	Actuator Calibration Test	HVAC (Heat, Ventilation And A/C)
SP01386	Auto Door Lock	CCN (Instrument Cluster/Cabin Compartment Node)
SP01387	Auto Door Unlock	CCN (Instrument Cluster/Cabin Compartment Node)
SP01388	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP01389	Update Measurement Unit	CCN (Instrument Cluster/Cabin Compartment Node)
SP01390	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP01391	Self Test	CCN (Instrument Cluster/Cabin Compartment Node)
SP01392	Resetting Distance Travelled With Water In Diesel W.Lamp ON	ECM (Engine Control Module)
SP01393	Resetting Distance Travelled With Water Temperature Warning Lamp ON	ECM (Engine Control Module)
SP01394	Fan Cooling Activation	ECM (Engine Control Module)
SP01395	Neutral Signal Learn	ECM (Engine Control Module)
SP01396	Injector Codes Read	ECM (Engine Control Module)
SP01397	Nox Replacement	ECM (Engine Control Module)
SP01398	Factory VIN code lock	ECM (Engine Control Module)
SP01399	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
SP01400	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
SP01401	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01402	Cylinder 1 Injector Replacement	ECM (Engine Control Module)
SP01403	Cylinder 2 Injector Replacement	ECM (Engine Control Module)
SP01404	Cylinder 3 Injector Replacement	ECM (Engine Control Module)
SP01405	Replacement Lambda Sensor	ECM (Engine Control Module)
SP01406	Oil Change	ECM (Engine Control Module)
SP01407	Differential Pressure Sensor Replac.	ECM (Engine Control Module)
SP01408	Rail Pressure Sensor Replacement	ECM (Engine Control Module)
SP01409	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01410	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01411	Glow Plug Preheating Circuit Test	ECM (Engine Control Module)
SP01412	EGR Valve Test	ECM (Engine Control Module)
SP01413	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01414	Throttle Valve Test	ECM (Engine Control Module)
SP01415	Proxi Alignment Procedure	ECM (Engine Control Module)
SP01416	Proxi Alignment Procedure	TCM (Transmission Control Module)
SP01417	ECU Substitution	ABS (Anti Lock Brakes)
SP01418	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP01419	Pressure Sensor Calibration	ABS (Anti Lock Brakes)
SP01420	Power Down	RRM (Radio Receiver Module)
SP01421	Power On And Disable User Inputs	RRM (Radio Receiver Module)
SP01422	Reset Parameters To Default	RRM (Radio Receiver Module)
SP01423	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP01424	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)

SP01425	Cam Crank Relearn	PCM (Powertrain Control Module)
SP01426	Check PCM Odometer	PCM (Powertrain Control Module)
SP01427	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP01428	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP01429	Write Pinion Factor	PCM (Powertrain Control Module)
SP01430	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP01431	EGR System Test	PCM (Powertrain Control Module)
SP01432	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP01433	Set Engine RPM	PCM (Powertrain Control Module)
SP01434	Shift Lever Position Test (62TE)	PCM (Powertrain Control Module)
SP01435	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
SP01436	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
SP01437	Reset Service Information	IPC (Instrument Panel Cluster)
SP01438	Reset Odometer	IPC (Instrument Panel Cluster)
SP01439	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP01440	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP01441	Last Service Date	IPC (Instrument Panel Cluster)
SP01442	Self Learning Motors Test	HVAC (Heat, Ventilation And A/C)
SP01443	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
SP01444	Factory VIN code lock	ESM (Electronic Shifter Module)
SP01445	Steering Angle Sensor	EPS (Electric Power Steering)
SP01446	Factory VIN code lock	DTCM (Drive Train Control Module)
SP01447	Proxi Alignment Procedure	DTCM (Drive Train Control Module)
SP01448	Factory VIN code lock	CSWM (Comfort Seat Wheel Module)
SP01449	Cam Crank Relearn	PCM (Powertrain Control Module)
SP01450	Check PCM Odometer	PCM (Powertrain Control Module)
SP01451	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP01452	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP01453	Write Pinion Factor	PCM (Powertrain Control Module)
SP01454	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP01455	Enable Engine Idle Shutdown Feature	PCM (Powertrain Control Module)
SP01456	EGR System Test	PCM (Powertrain Control Module)
SP01457	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP01458	Set Engine RPM	PCM (Powertrain Control Module)
SP01459	Shift Lever Position Test (62TE)	PCM (Powertrain Control Module)
SP01460	Reset Learned Adaptives	TCM (Transmission Control Module)
SP01461	Store Learned Adaptives	TCM (Transmission Control Module)
SP01462	ABS Bleed Brakes	ABS (Anti Lock Brakes)
SP01463	Brake Pedal Calibration	ABS (Anti Lock Brakes)
SP01464	Initialize ORC	ORC (Occupant Restraint)
SP01465	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP01466	System Wiring Test	PTS (Parktronics)

SP01467	Enable/Disable Seatbelt Minder	IPC (Instrument Panel Cluster)
SP01468	Program Left Front Tire Sensor ID	ESM (Electronic Shifter Module)
SP01469	Program Left Rear Tire Sensor ID	ESM (Electronic Shifter Module)
SP01470	Program Right Front Tire Sensor ID	ESM (Electronic Shifter Module)
SP01471	Program Right Rear Tire Sensor ID	ESM (Electronic Shifter Module)
SP01472	Sensor Rolls Test	ESM (Electronic Shifter Module)
SP01473	AFLS Calibration	AFLS (Adaptive Front Lighting System)
SP01474	Cam Crank Relearn	PCM (Powertrain Control Module)
SP01475	Check PCM Odometer	PCM (Powertrain Control Module)
SP01476	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP01477	Reset Memory	PCM (Powertrain Control Module)
SP01478	Clear Engine Auto Restart Crank Counter	PCM (Powertrain Control Module)
SP01479	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP01480	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP01481	EGR System Test	PCM (Powertrain Control Module)
SP01482	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP01483	Set Engine RPM	PCM (Powertrain Control Module)
SP01484	Shift Lever Position Test (62TE)	PCM (Powertrain Control Module)
SP01485	ABS Bleed Brakes	ABS (Anti Lock Brakes)
SP01486	Brake Pedal Calibration	ABS (Anti Lock Brakes)
SP01487	Initialize ORC	ORC (Occupant Restraint)
SP01488	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01489	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01490	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01491	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01492	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP01493	Activate TPM High Gain Mode	TPM (Tire Pressure Monitor)
SP01494	TPM Sensor Position Parameter Update	TPM (Tire Pressure Monitor)
SP01495	Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP01496	System Wiring Test	PTS (Parktronics)
SP01497	Enable/Disable Seatbelt Minder	IPC (Instrument Panel Cluster)
SP01498	Program Left Front Tire Sensor ID	ESM (Electronic Shifter Module)
SP01499	Program Left Rear Tire Sensor ID	ESM (Electronic Shifter Module)
SP01500	Program Right Front Tire Sensor ID	ESM (Electronic Shifter Module)
SP01501	Program Right Rear Tire Sensor ID	ESM (Electronic Shifter Module)
SP01502	Sensor Rolls Test	ESM (Electronic Shifter Module)
SP01503	AFLS Calibration	AFLS (Adaptive Front Lighting System)
SP01504	Cam Crank Relearn	PCM (Powertrain Control Module)
SP01505	Check PCM Odometer	PCM (Powertrain Control Module)
SP01506	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP01507	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP01508	Reset Memory	PCM (Powertrain Control Module)

SP01509	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP01510	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP01511	Write Pinion Factor	PCM (Powertrain Control Module)
SP01512	EGR System Test	PCM (Powertrain Control Module)
SP01513	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP01514	Set Engine RPM	PCM (Powertrain Control Module)
SP01515	Shift Lever Position Test (62TE)	PCM (Powertrain Control Module)
SP01516	Shift Lever Position Test (Non-RFE)	PCM (Powertrain Control Module)
SP01517	Reset Adaptive Values	TCM (Transmission Control Module)
SP01518	ABS Bleed Brakes	ABS (Anti Lock Brakes)
SP01519	Brake Pedal Calibration	ABS (Anti Lock Brakes)
SP01520	Initialize ORC	ORC (Occupant Restraint)
SP01521	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01522	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01523	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01524	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01525	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP01526	Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP01527	Configure License Plate Size	PTS (Parktronics)
SP01528	System Wiring Test	PTS (Parktronics)
SP01529	Disable/Enable Seatbelt Minder Chime	IPC (Instrument Panel Cluster)
SP01530	Auto Door Lock	BCM (Body Control Module)
SP01531	Program Tire Size	BCM (Body Control Module)
SP01532	Exit Shipping Mode	BCM (Body Control Module)
SP01533	AFLS Calibration	AFLS (Adaptive Front Lighting System)
SP01534	Air Flow Meter Replacement	PCM (Powertrain Control Module)
SP01535	DPF Reset Option	PCM (Powertrain Control Module)
SP01536	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP01537	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP01538	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP01539	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP01540	Service Diesel Particulate Filter Regeneration	PCM (Powertrain Control Module)
SP01541	Throttle Valve Learn	PCM (Powertrain Control Module)
SP01542	Reset Adaptive Values	TCM (Transmission Control Module)
SP01543	ABS Bleed Brakes	ABS (Anti Lock Brakes)
SP01544	Brake Pedal Calibration	ABS (Anti Lock Brakes)
SP01545	Initialize ORC	ORC (Occupant Restraint)
SP01546	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01547	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01548	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01549	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01550	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)

SP01551	Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP01552	Configure License Plate Size	PTS (Parktronics)
SP01553	System Wiring Test	PTS (Parktronics)
SP01554	Disable/Enable Seatbelt Minder Chime	IPC (Instrument Panel Cluster)
SP01555	Auto Door Lock	BCM (Body Control Module)
SP01556	Program Tire Size	BCM (Body Control Module)
SP01557	Exit Shipping Mode	BCM (Body Control Module)
SP01558	AFLS Calibration	AFLS (Adaptive Front Lighting System)
SP01559	Air Flow Meter Replacement	PCM (Powertrain Control Module)
SP01560	DPF Reset Option	PCM (Powertrain Control Module)
SP01561	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP01562	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP01563	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP01564	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP01565	Service Diesel Particulate Filter Regeneration	PCM (Powertrain Control Module)
SP01566	Throttle Valve Learn	PCM (Powertrain Control Module)
SP01567	Reset Adaptive Values	TCM (Transmission Control Module)
SP01568	ABS Bleed Brakes	ABS (Anti Lock Brakes)
SP01569	Brake Pedal Calibration	ABS (Anti Lock Brakes)
SP01570	Initialize ORC	ORC (Occupant Restraint)
SP01571	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01572	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01573	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01574	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01575	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP01576	Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP01577	Configure License Plate Size	PTS (Parktronics)
SP01578	System Wiring Test	PTS (Parktronics)
SP01579	Disable/Enable Seatbelt Minder Chime	IPC (Instrument Panel Cluster)
SP01580	Auto Door Lock	BCM (Body Control Module)
SP01581	Program Tire Size	BCM (Body Control Module)
SP01582	Exit Shipping Mode	BCM (Body Control Module)
SP01583	AFLS Calibration	AFLS (Adaptive Front Lighting System)
SP01584	Lambda Sensor 1 Initialization	PCM (Powertrain Control Module)
SP01585	Service Diesel Particulate Filter Regeneration	PCM (Powertrain Control Module)
SP01586	Rail Pressure Control Switchover	PCM (Powertrain Control Module)
SP01587	Diesel Particulate Filter Replacement	PCM (Powertrain Control Module)
SP01588	Request Anti-Slugging For Air Condition Compressor	PCM (Powertrain Control Module)
SP01589	Lambda Sensor 1 Initialization	PCM (Powertrain Control Module)
SP01590	Service Diesel Particulate Filter Regeneration	PCM (Powertrain Control Module)
SP01591	Rail Pressure Control Switchover	PCM (Powertrain Control Module)
SP01592	Diesel Particulate Filter Replacement	PCM (Powertrain Control Module)

SP01593	Request Anti-Slugging For Air Condition Compressor	PCM (Powertrain Control Module)
SP01594	ABS Bleed Brakes	ABS (Anti Lock Brakes)
SP01595	Initialize ORC	ORC (Occupant Restraint)
SP01596	Activate Driver And Passenger Head Restraint	ORC (Occupant Restraint)
SP01597	Reset WIN Configuration	WCM (Wireless Control)
SP01598	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP01599	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01600	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01601	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01602	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01603	Turn Off Gain Mode Override	TPM (Tire Pressure Monitor)
SP01604	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP01605	TPM Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP01606	Auto Wipers	TIPMCGW (Central Gateway)
SP01607	Auto Door Lock	TIPMCGW (Central Gateway)
SP01608	Auto Door Unlock	TIPMCGW (Central Gateway)
SP01609	Configure License Plate Size	PTS (Parktronics)
SP01610	System Wiring Test	PTS (Parktronics)
SP01611	Actuate Drive Clutch Engage	PSDMR (Power Sliding Doors (Right))
SP01612	Sliding Door Close Test	PSDMR (Power Sliding Doors (Right))
SP01613	Sliding Door Open Test	PSDMR (Power Sliding Doors (Right))
SP01614	Actuate Drive Clutch Engage	PSDML (Power Sliding Doors (Left))
SP01615	Sliding Door Close Test	PSDML (Power Sliding Doors (Left))
SP01616	Sliding Door Open Test	PSDML (Power Sliding Doors (Left))
SP01617	ITM Initialize Siren	ITM (Intrusion)
SP01618	Actuator Calibration Test	HVAC (Heat, Ventilation And A/C)
SP01619	Heated Steering Wheel Configuration	HSM (Heated Seat Module)
SP01620	Update Measurement Unit	CCN (Instrument Cluster/Cabin Compartment Node)
SP01621	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP01622	Self Test	CCN (Instrument Cluster/Cabin Compartment Node)
SP01623	Lambda Sensor 1 Initialization	PCM (Powertrain Control Module)
SP01624	Service Diesel Particulate Filter Regeneration	PCM (Powertrain Control Module)
SP01625	Rail Pressure Control Switchover	PCM (Powertrain Control Module)
SP01626	Diesel Particulate Filter Replacement	PCM (Powertrain Control Module)
SP01627	Request Anti-Slugging For Air Condition Compressor	PCM (Powertrain Control Module)
SP01628	ABS Bleed Brakes	ABS (Anti Lock Brakes)
SP01629	Initialize ORC	ORC (Occupant Restraint)
SP01630	Activate Driver And Passenger Head Restraint	ORC (Occupant Restraint)
SP01631	Reset WIN Configuration	WCM (Wireless Control)
SP01632	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP01633	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01634	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)

SP01635	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01636	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01637	TPM Sensor Position Parameter Update	TPM (Tire Pressure Monitor)
SP01638	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP01639	TPM Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP01640	Auto Wipers	TIPMCGW (Central Gateway)
SP01641	Auto Door Lock	TIPMCGW (Central Gateway)
SP01642	Auto Door Unlock	TIPMCGW (Central Gateway)
SP01643	Configure License Plate Size	PTS (Parktronics)
SP01644	System Wiring Test	PTS (Parktronics)
SP01645	Actuate Drive Clutch Engage	PSDMR (Power Sliding Doors (Right))
SP01646	Sliding Door Close Test	PSDMR (Power Sliding Doors (Right))
SP01647	Sliding Door Open Test	PSDMR (Power Sliding Doors (Right))
SP01648	Actuate Drive Clutch Engage	PSDML (Power Sliding Doors (Left))
SP01649	Sliding Door Close Test	PSDML (Power Sliding Doors (Left))
SP01650	Sliding Door Open Test	PSDML (Power Sliding Doors (Left))
SP01651	ITM Initialize Siren	ITM (Intrusion)
SP01652	Actuator Calibration Test	HVAC (Heat, Ventilation And A/C)
SP01653	Heated Steering Wheel Configuration	HSM (Heated Seat Module)
SP01654	Update Measurement Unit	CCN (Instrument Cluster/Cabin Compartment Node)
SP01655	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP01656	Self Test	CCN (Instrument Cluster/Cabin Compartment Node)
SP01657	Cam Crank Relearn	PCM (Powertrain Control Module)
SP01658	Check PCM Odometer	PCM (Powertrain Control Module)
SP01659	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP01660	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP01661	Reset Memory	PCM (Powertrain Control Module)
SP01662	EGR System Test	PCM (Powertrain Control Module)
SP01663	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP01664	Set Engine RPM	PCM (Powertrain Control Module)
SP01665	Shift Lever Position Test (62TE)	PCM (Powertrain Control Module)
SP01666	Shift Lever Position Test (Non-RFE)	PCM (Powertrain Control Module)
SP01667	ABS Initialization	ABS (Anti Lock Brakes)
SP01668	Bleed Brakes	ABS (Anti Lock Brakes)
SP01669	Initialize ORC	ORC (Occupant Restraint)
SP01670	Activate Driver And Passenger Head Restraint	ORC (Occupant Restraint)
SP01671	Reset WIN Configuration	WCM (Wireless Control)
SP01672	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP01673	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01674	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01675	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01676	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)

SP01677	TPM Sensor Position Parameter Update	TPM (Tire Pressure Monitor)
SP01678	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP01679	TPM Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP01680	Auto Wipers	TIPMCGW (Central Gateway)
SP01681	Auto Door Lock	TIPMCGW (Central Gateway)
SP01682	Auto Door Unlock	TIPMCGW (Central Gateway)
SP01683	Configure License Plate Size	PTS (Parktronics)
SP01684	System Wiring Test	PTS (Parktronics)
SP01685	Actuate Drive Clutch Engage	PSDMR (Power Sliding Doors (Right))
SP01686	Sliding Door Close Test	PSDMR (Power Sliding Doors (Right))
SP01687	Sliding Door Open Test	PSDMR (Power Sliding Doors (Right))
SP01688	Actuate Drive Clutch Engage	PSDML (Power Sliding Doors (Left))
SP01689	Sliding Door Close Test	PSDML (Power Sliding Doors (Left))
SP01690	Sliding Door Open Test	PSDML (Power Sliding Doors (Left))
SP01691	ITM Initialize Siren	ITM (Intrusion)
SP01692	Heated Steering Wheel Configuration	HSM (Heated Seat Module)
SP01693	Update Measurement Unit	CCN (Instrument Cluster/Cabin Compartment Node)
SP01694	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP01695	Self Test	CCN (Instrument Cluster/Cabin Compartment Node)
SP01696	Cam Crank Relearn	PCM (Powertrain Control Module)
SP01697	Check PCM Odometer	PCM (Powertrain Control Module)
SP01698	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP01699	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP01700	Reset Memory	PCM (Powertrain Control Module)
SP01701	EGR System Test	PCM (Powertrain Control Module)
SP01702	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP01703	Set Engine RPM	PCM (Powertrain Control Module)
SP01704	Shift Lever Position Test (62TE)	PCM (Powertrain Control Module)
SP01705	Shift Lever Position Test (Non-RFE)	PCM (Powertrain Control Module)
SP01706	ABS Initialization	ABS (Anti Lock Brakes)
SP01707	Bleed Brakes	ABS (Anti Lock Brakes)
SP01708	Initialize ORC	ORC (Occupant Restraint)
SP01709	Rollover Detection	ORC (Occupant Restraint)
SP01710	Activate Driver And Passenger Head Restraint	ORC (Occupant Restraint)
SP01711	Reset WIN Configuration	WCM (Wireless Control)
SP01712	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP01713	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01714	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01715	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01716	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01717	TPM Sensor Position Parameter Update	TPM (Tire Pressure Monitor)
SP01718	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)

SP01719	TPM Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP01720	Auto Wipers	TIPMCGW (Central Gateway)
SP01721	Auto Door Lock	TIPMCGW (Central Gateway)
SP01722	Auto Door Unlock	TIPMCGW (Central Gateway)
SP01723	Configure License Plate Size	PTS (Parktronics)
SP01724	System Wiring Test	PTS (Parktronics)
SP01725	Actuate Drive Clutch Engage	PSDMR (Power Sliding Doors (Right))
SP01726	Sliding Door Close Test	PSDMR (Power Sliding Doors (Right))
SP01727	Sliding Door Open Test	PSDMR (Power Sliding Doors (Right))
SP01728	Actuate Drive Clutch Engage	PSDML (Power Sliding Doors (Left))
SP01729	Sliding Door Close Test	PSDML (Power Sliding Doors (Left))
SP01730	Sliding Door Open Test	PSDML (Power Sliding Doors (Left))
SP01731	ITM Initialize Siren	ITM (Intrusion)
SP01732	Heated Steering Wheel Configuration	HSM (Heated Seat Module)
SP01733	Update Measurement Unit	CCN (Instrument Cluster/Cabin Compartment Node)
SP01734	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP01735	Self Test	CCN (Instrument Cluster/Cabin Compartment Node)
SP01736	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
SP01737	Differential Pressure Sensor Replac.	ECM (Engine Control Module)
SP01738	Oil Change	ECM (Engine Control Module)
SP01739	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01740	Injector Codes Read	ECM (Engine Control Module)
SP01741	Rail Pressure Sensor Replacement	ECM (Engine Control Module)
SP01742	Cylinder 3 Injector Replacement	ECM (Engine Control Module)
SP01743	Cylinder 2 Injector Replacement	ECM (Engine Control Module)
SP01744	Cylinder 1 Injector Replacement	ECM (Engine Control Module)
SP01745	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01746	Replacement Lambda Sensor	ECM (Engine Control Module)
SP01747	Neutral Signal Learn	ECM (Engine Control Module)
SP01748	Rail Overpressure Waste Gate Valve Replacement	ECM (Engine Control Module)
SP01749	EGR Valve Test	ECM (Engine Control Module)
SP01750	Glow Plug Preheating Circuit Test	ECM (Engine Control Module)
SP01751	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01752	Resetting Distance Travelled With Water In Diesel W.Lamp ON	ECM (Engine Control Module)
SP01753	Throttle Valve Test	ECM (Engine Control Module)
SP01754	Resetting Distance Travelled With Water Temperature Warning Lamp ON	ECM (Engine Control Module)
SP01755	Fan Cooling Activation	ECM (Engine Control Module)
SP01756	Tunnel Lever Replacement	TCM (Transmission Control Module)
SP01757	Pump Relay Replacement	TCM (Transmission Control Module)
SP01758	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01759	Longitudinal And Lateral Sensor Decalibration	ABS (Anti Lock Brakes)
SP01760	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)

SP01761	Static Test	ABS (Anti Lock Brakes)
SP01762	Wheel Speed Sensor Type Test	ABS (Anti Lock Brakes)
SP01763	Flap Actuators Learning Test	HVAC (Heat, Ventilation And A/C)
SP01764	Steering Angle Calibration	EPS (Electric Power Steering)
SP01765	ECU Restart Routine	CTM (Convergence Telematic Module)
SP01766	Fire Protection System Activate	BCM (Body Control Module)
SP01767	Deactivation Of The Power Limitation Function	ECM (Engine Control Module)
SP01768	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01769	Supercharging System Components Replacement	ECM (Engine Control Module)
SP01770	Intake Manifold Replacement	ECM (Engine Control Module)
SP01771	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
SP01772	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01773	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
SP01774	Neutral Signal Learn	ECM (Engine Control Module)
SP01775	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01776	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP01777	Tunnel Lever Replacement	TCM (Transmission Control Module)
SP01778	Levers At Wheel Replacement	TCM (Transmission Control Module)
SP01779	Pump Relay Replacement	TCM (Transmission Control Module)
SP01780	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01781	Static Test	ABS (Anti-Lock Braking System)
SP01782	Trailer Hook Presence Disabling	PAM (Parking Assistant Module)
SP01783	Trailer Hook Presence Enabling	PAM (Parking Assistant Module)
SP01784	Reset Odometer	IC (Instrument Cluster)
SP01785	Reset Service Information	IC (Instrument Cluster)
SP01786	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01787	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01788	Last Service Date	IC (Instrument Cluster)
SP01789	Flap Actuators Learning Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP01790	Audio Video Signal Detection	ETM (Entertainment Telematic Module)
SP01791	Steering Angle Calibration	EPS (Electric Power Steering)
SP01792	ECU Restart Routine	CTM (Convergence Telematic Module)
SP01793	Fire Protection System Activate	BCM (Body Control Module)
SP01794	Deactivation Of The Power Limitation Function	ECM (Engine Control Module)
SP01795	Supercharging System Components Replacement	ECM (Engine Control Module)
SP01796	Engine Replacement	ECM (Engine Control Module)
SP01797	Oil Change	ECM (Engine Control Module)
SP01798	Fan Cooling Activation	ECM (Engine Control Module)
SP01799	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP01800	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01801	Longitudinal And Lateral Sensor Decalibration	ABS (Anti Lock Brakes)
SP01802	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)

SP01803	Static Test	ABS (Anti Lock Brakes)
SP01804	Steering Angle Sensor Calibration	ABS (Anti Lock Brakes)
SP01805	Write Front And Rear Nominal Tire Pressure Values	TPM (Tire Pressure Monitor)
SP01806	Clear TPM Warnings	TPM (Tire Pressure Monitor)
SP01807	Clear TPM Sensor Rolls Test Results	TPM (Tire Pressure Monitor)
SP01808	ECU SERIAL NUMBER Management	TPM (Tire Pressure Monitor)
SP01809	TPM Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP01810	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01811	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01812	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01813	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP01814	Tow Hook Exclusion	PAM (Parking Aid Module)
SP01815	Reset Odometer	IPC (Instrument Panel)
SP01816	Reset Service Information	IPC (Instrument Panel)
SP01817	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP01818	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP01819	Fire Protection System Activate	BCM (Body Control Module)
SP01820	Neutral Signal Learn	ECM (Engine Control Module)
SP01821	Factory VIN code lock	ECM (Engine Control Module)
SP01822	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
SP01823	Control Unit Reprogramming	ECM (Engine Control Module)
SP01824	Fuel Supply System Components Replacement	ECM (Engine Control Module)
SP01825	Supercharging System Components Replacement	ECM (Engine Control Module)
SP01826	Electronic Throttle Replacement	ECM (Engine Control Module)
SP01827	Oil Change	ECM (Engine Control Module)
SP01828	Oil Level Sensor Replacement	ECM (Engine Control Module)
SP01829	Lambda Sensor And/Or Catalytic Converter And/Or Injector Replacement	ECM (Engine Control Module)
SP01830	Proxi Alignment Procedure	ECM (Engine Control Module)
SP01831	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP01832	Ionisation Control Module Adaptive Values Reset	ECM (Engine Control Module)
SP01833	Fan Cooling Activation	ECM (Engine Control Module)
SP01834	Proxi Alignment Procedure	TCM (Transmission Control Module)
SP01835	Check Air Presence In ABS Unit	ABS (Anti-Lock Braking System)
SP01836	Brake Pads Substitution (Brembo)	ABS (Anti-Lock Braking System)
SP01837	Brake Pads Substitution EPB (Brembo)	ABS (Anti-Lock Braking System)
SP01838	Brake Pads Substitution (Continental)	ABS (Anti-Lock Braking System)
SP01839	Disks Management Brembo	ABS (Anti-Lock Braking System)
SP01840	Replacement Brake Discs	ABS (Anti-Lock Braking System)
SP01841	Control Unit Reprogramming	ABS (Anti-Lock Braking System)
SP01842	Electric Park Brake Management	ABS (Anti-Lock Braking System)
SP01843	Electric Park Brake Motors Substitution	ABS (Anti-Lock Braking System)
SP01844	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)

SP01845	Brake Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP01846	Settling Group Caliper And Brake Pads	ABS (Anti-Lock Braking System)
SP01847	Production State	ABS (Anti-Lock Braking System)
SP01848	Reset Angle Offset	ABS (Anti-Lock Braking System)
SP01849	Bleeding Brake System	ABS (Anti-Lock Braking System)
SP01850	Enable/Disable The Roll Bench Mode	ABS (Anti-Lock Braking System)
SP01851	ABS Unit Bleed	ABS (Anti-Lock Braking System)
SP01852	Calibrate Tandem Master Cylinder Sensor	ABS (Anti-Lock Braking System)
SP01853	Checking Air In The Hydraulic Circuit Between The Control Unit And Br	ABS (Anti-Lock Braking System)
SP01854	Enabling Brake Pedal	ABS (Anti-Lock Braking System)
SP01855	Oil Change Reset	TVM (Torque Vectoring Module)
SP01856	Gearbox Data Transfer	TVM (Torque Vectoring Module)
SP01857	Clutch Adjustment	TVM (Torque Vectoring Module)
SP01858	E-Motor Replacement	TVM (Torque Vectoring Module)
SP01859	Self Test	TBM (Telematic Box Module)
SP01860	Backup Battery Test	TBM (Telematic Box Module)
SP01861	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP01862	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP01863	Reset Service Information	IC (Instrument Cluster)
SP01864	Test Pattern Display	IC (Instrument Cluster)
SP01865	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
SP01866	Factory VIN code lock	ESM (Electronic Shifter Module)
SP01867	LED Light Control Command	ESM (Electronic Shifter Module)
SP01868	Steering Angle Calibration	EPS (Electric Power Steering)
SP01869	Upload Configuration	EMCM (Entertainment Multimedia Control Module)
SP01870	Read Touch Pad Configuration	EMCM (Entertainment Multimedia Control Module)
SP01871	Touch Pad Self Test	EMCM (Entertainment Multimedia Control Module)
SP01872	Touch Pad Self Calibration	EMCM (Entertainment Multimedia Control Module)
SP01873	Restore Default Configuration	EMCM (Entertainment Multimedia Control Module)
SP01874	Proxi Alignment Procedure	DTCM (Drive Train Control Module)
SP01875	Transfer Case Reset	DTCM (Drive Train Control Module)
SP01876	First Calibration	DTCM (Drive Train Control Module)
SP01877	Calibration Reset	DTCM (Drive Train Control Module)
SP01878	Factory VIN code lock	CDCM (Chassis Domain Control Module)
SP01879	Calibration Accelerometers	CDCM (Chassis Domain Control Module)
SP01880	AFLS Calibration	AFLS (Adaptive Front Lighting System)
SP01881	Self Learning - Sensors Calibration	AAMR (Active Aerodynamic Module Right)
SP01882	Neutral Signal Learn	ECM (Engine Control Module)
SP01883	Factory VIN code lock	ECM (Engine Control Module)
SP01884	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
SP01885	Control Unit Reprogramming	ECM (Engine Control Module)
SP01886	Fuel Supply System Components Replacement	ECM (Engine Control Module)

SP01887	Supercharging System Components Replacement	ECM (Engine Control Module)
SP01888	Electronic Throttle Replacement	ECM (Engine Control Module)
SP01889	Oil Change	ECM (Engine Control Module)
SP01890	Oil Level Sensor Replacement	ECM (Engine Control Module)
SP01891	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP01892	Proxi Alignment Procedure	ECM (Engine Control Module)
SP01893	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP01894	Tonisation Control Module Adaptive Values Reset	ECM (Engine Control Module)
SP01895	Fan Cooling Activation	ECM (Engine Control Module)
SP01896	Proxi Alignment Procedure	TCM (Transmission Control Module)
SP01897	Check Air Presence In ABS Unit	ABS (Anti-Lock Braking System)
SP01898	Brake Pads Substitution (Brembo)	ABS (Anti-Lock Braking System)
SP01899	Brake Pads Substitution EPB (Brembo)	ABS (Anti-Lock Braking System)
SP01900	Brake Pads Substitution (Continental)	ABS (Anti-Lock Braking System)
SP01901	Disks Management Brembo	ABS (Anti-Lock Braking System)
SP01902	Replacement Brake Discs	ABS (Anti-Lock Braking System)
SP01903	Control Unit Reprogramming	ABS (Anti-Lock Braking System)
SP01904	Electric Park Brake Management	ABS (Anti-Lock Braking System)
SP01905	Electric Park Brake Motors Substitution	ABS (Anti-Lock Braking System)
SP01906	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP01907	Brake Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP01908	Settling Group Caliper And Brake Pads	ABS (Anti-Lock Braking System)
SP01909	Production State	ABS (Anti-Lock Braking System)
SP01910	Reset Angle Offset	ABS (Anti-Lock Braking System)
SP01911	Bleeding Brake System	ABS (Anti-Lock Braking System)
SP01912	Enable/Disable The Roll Bench Mode	ABS (Anti-Lock Braking System)
SP01913	ABS Unit Bleed	ABS (Anti-Lock Braking System)
SP01914	Calibrate Tandem Master Cylinder Sensor	ABS (Anti-Lock Braking System)
SP01915	Checking Air In The Hydraulic Circuit Between The Control Unit And Br	ABS (Anti-Lock Braking System)
SP01916	Enabling Brake Pedal	ABS (Anti-Lock Braking System)
SP01917	Oil Change Reset	TVM (Torque Vectoring Module)
SP01918	Gearbox Data Transfer	TVM (Torque Vectoring Module)
SP01919	Clutch Adjustment	TVM (Torque Vectoring Module)
SP01920	E-Motor Replacement	TVM (Torque Vectoring Module)
SP01921	Self Test	TBM (Telematic Box Module)
SP01922	Backup Battery Test	TBM (Telematic Box Module)
SP01923	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP01924	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP01925	Reset Service Information	IC (Instrument Cluster)
SP01926	Test Pattern Display	IC (Instrument Cluster)
SP01927	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
SP01928	Factory VIN code lock	ESM (Electronic Shifter Module)

SP01929	LED Light Control Command	ESM (Electronic Shifter Module)
SP01930	Steering Angle Calibration	EPS (Electric Power Steering)
SP01931	Upload Configuration	EMCM (Entertainment Multimedia Control Module)
SP01932	Read Touch Pad Configuration	EMCM (Entertainment Multimedia Control Module)
SP01933	Touch Pad Self Test	EMCM (Entertainment Multimedia Control Module)
SP01934	Touch Pad Self Calibration	EMCM (Entertainment Multimedia Control Module)
SP01935	Restore Default Configuration	EMCM (Entertainment Multimedia Control Module)
SP01936	Proxi Alignment Procedure	DTCM (Drive Train Control Module)
SP01937	Transfer Case Reset	DTCM (Drive Train Control Module)
SP01938	First Calibration	DTCM (Drive Train Control Module)
SP01939	Calibration Reset	DTCM (Drive Train Control Module)
SP01940	Factory VIN code lock	CDCM (Chassis Domain Control Module)
SP01941	Calibration Accelerometers	CDCM (Chassis Domain Control Module)
SP01942	AFLS Calibration	AFLS (Adaptive Front Lighting System)
SP01943	Self Learning - Sensors Calibration	AAMR (Active Aerodynamic Module Right)
SP01944	Neutral Signal Learn	ECM (Engine Control Module)
SP01945	Factory VIN code lock	ECM (Engine Control Module)
SP01946	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
SP01947	Control Unit Reprogramming	ECM (Engine Control Module)
SP01948	Fuel Supply System Components Replacement	ECM (Engine Control Module)
SP01949	Supercharging System Components Replacement	ECM (Engine Control Module)
SP01950	Electronic Throttle Replacement	ECM (Engine Control Module)
SP01951	Oil Change	ECM (Engine Control Module)
SP01952	Oil Level Sensor Replacement	ECM (Engine Control Module)
SP01953	Lambda Sensor And/Or Catalytic Converter And/Or Injector Replacement	ECM (Engine Control Module)
SP01954	Proxi Alignment Procedure	ECM (Engine Control Module)
SP01955	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP01956	Ionisation Control Module Adaptive Values Reset	ECM (Engine Control Module)
SP01957	Fan Cooling Activation	ECM (Engine Control Module)
SP01958	Proxi Alignment Procedure	TCM (Transmission Control Module)
SP01959	Check Air Presence In ABS Unit	ABS (Anti-Lock Braking System)
SP01960	Brake Pads Substitution (Brembo)	ABS (Anti-Lock Braking System)
SP01961	Brake Pads Substitution EPB (Brembo)	ABS (Anti-Lock Braking System)
SP01962	Brake Pads Substitution (Continental)	ABS (Anti-Lock Braking System)
SP01963	Disks Management Brembo	ABS (Anti-Lock Braking System)
SP01964	Replacement Brake Discs	ABS (Anti-Lock Braking System)
SP01965	Control Unit Reprogramming	ABS (Anti-Lock Braking System)
SP01966	Electric Park Brake Management	ABS (Anti-Lock Braking System)
SP01967	Electric Park Brake Motors Substitution	ABS (Anti-Lock Braking System)
SP01968	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP01969	Brake Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP01970	Settling Group Caliper And Brake Pads	ABS (Anti-Lock Braking System)

SP01971	Production State	ABS (Anti-Lock Braking System)
SP01972	Reset Angle Offset	ABS (Anti-Lock Braking System)
SP01973	Bleeding Brake System	ABS (Anti-Lock Braking System)
SP01974	Enable/Disable The Roll Bench Mode	ABS (Anti-Lock Braking System)
SP01975	ABS Unit Bleed	ABS (Anti-Lock Braking System)
SP01976	Calibrate Tandem Master Cylinder Sensor	ABS (Anti-Lock Braking System)
SP01977	Checking Air In The Hydraulic Circuit Between The Control Unit And Br	ABS (Anti-Lock Braking System)
SP01978	Enabling Brake Pedal	ABS (Anti-Lock Braking System)
SP01979	Oil Change Reset	TVM (Torque Vectoring Module)
SP01980	Gearbox Data Transfer	TVM (Torque Vectoring Module)
SP01981	Clutch Adjustment	TVM (Torque Vectoring Module)
SP01982	E-Motor Replacement	TVM (Torque Vectoring Module)
SP01983	Self Test	TBM (Telematic Box Module)
SP01984	Backup Battery Test	TBM (Telematic Box Module)
SP01985	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP01986	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP01987	Reset Service Information	IC (Instrument Cluster)
SP01988	Test Pattern Display	IC (Instrument Cluster)
SP01989	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
SP01990	Factory VIN code lock	ESM (Electronic Shifter Module)
SP01991	LED Light Control Command	ESM (Electronic Shifter Module)
SP01992	Steering Angle Calibration	EPS (Electric Power Steering)
SP01993	Upload Configuration	EMCM (Entertainment Multimedia Control Module)
SP01994	Read Touch Pad Configuration	EMCM (Entertainment Multimedia Control Module)
SP01995	Touch Pad Self Test	EMCM (Entertainment Multimedia Control Module)
SP01996	Touch Pad Self Calibration	EMCM (Entertainment Multimedia Control Module)
SP01997	Restore Default Configuration	EMCM (Entertainment Multimedia Control Module)
SP01998	Proxi Alignment Procedure	DTCM (Drive Train Control Module)
SP01999	Transfer Case Reset	DTCM (Drive Train Control Module)
SP02000	First Calibration	DTCM (Drive Train Control Module)
SP02001	Calibration Reset	DTCM (Drive Train Control Module)
SP02002	Factory VIN code lock	CDCM (Chassis Domain Control Module)
SP02003	Calibration Accelerometers	CDCM (Chassis Domain Control Module)
SP02004	AFLS Calibration	AFLS (Adaptive Front Lighting System)
SP02005	Self Learning - Sensors Calibration	AAMR (Active Aerodynamic Module Right)
SP02006	Neutral Signal Learn	ECM (Engine Control Module)
SP02007	Factory VIN code lock	ECM (Engine Control Module)
SP02008	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
SP02009	Control Unit Reprogramming	ECM (Engine Control Module)
SP02010	Fuel Supply System Components Replacement	ECM (Engine Control Module)
SP02011	Supercharging System Components Replacement	ECM (Engine Control Module)
SP02012	Electronic Throttle Replacement	ECM (Engine Control Module)

SP02013	Oil Change	ECM (Engine Control Module)
SP02014	Oil Level Sensor Replacement	ECM (Engine Control Module)
SP02015	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP02016	Proxi Alignment Procedure	ECM (Engine Control Module)
SP02017	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP02018	Ionisation Control Module Adaptive Values Reset	ECM (Engine Control Module)
SP02019	Fan Cooling Activation	ECM (Engine Control Module)
SP02020	Proxi Alignment Procedure	TCM (Transmission Control Module)
SP02021	Check Air Presence In ABS Unit	ABS (Anti-Lock Braking System)
SP02022	Brake Pads Substitution (Brembo)	ABS (Anti-Lock Braking System)
SP02023	Brake Pads Substitution EPB (Brembo)	ABS (Anti-Lock Braking System)
SP02024	Brake Pads Substitution (Continental)	ABS (Anti-Lock Braking System)
SP02025	Disks Management Brembo	ABS (Anti-Lock Braking System)
SP02026	Replacement Brake Discs	ABS (Anti-Lock Braking System)
SP02027	Control Unit Reprogramming	ABS (Anti-Lock Braking System)
SP02028	Electric Park Brake Management	ABS (Anti-Lock Braking System)
SP02029	Electric Park Brake Motors Substitution	ABS (Anti-Lock Braking System)
SP02030	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP02031	Brake Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP02032	Settling Group Caliper And Brake Pads	ABS (Anti-Lock Braking System)
SP02033	Production State	ABS (Anti-Lock Braking System)
SP02034	Reset Angle Offset	ABS (Anti-Lock Braking System)
SP02035	Bleeding Brake System	ABS (Anti-Lock Braking System)
SP02036	Enable/Disable The Roll Bench Mode	ABS (Anti-Lock Braking System)
SP02037	ABS Unit Bleed	ABS (Anti-Lock Braking System)
SP02038	Calibrate Tandem Master Cylinder Sensor	ABS (Anti-Lock Braking System)
SP02039	Checking Air In The Hydraulic Circuit Between The Control Unit And Br	ABS (Anti-Lock Braking System)
SP02040	Enabling Brake Pedal	ABS (Anti-Lock Braking System)
SP02041	Oil Change Reset	TVM (Torque Vectoring Module)
SP02042	Gearbox Data Transfer	TVM (Torque Vectoring Module)
SP02043	Clutch Adjustment	TVM (Torque Vectoring Module)
SP02044	E-Motor Replacement	TVM (Torque Vectoring Module)
SP02045	Self Test	TBM (Telematic Box Module)
SP02046	Backup Battery Test	TBM (Telematic Box Module)
SP02047	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP02048	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP02049	Reset Service Information	IC (Instrument Cluster)
SP02050	Test Pattern Display	IC (Instrument Cluster)
SP02051	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
SP02052	Factory VIN code lock	ESM (Electronic Shifter Module)
SP02053	LED Light Control Command	ESM (Electronic Shifter Module)
SP02054	Steering Angle Calibration	EPS (Electric Power Steering)

SP02055	Upload Configuration	EMCM (Entertainment Multimedia Control Module)
SP02056	Read Touch Pad Configuration	EMCM (Entertainment Multimedia Control Module)
SP02057	Touch Pad Self Test	EMCM (Entertainment Multimedia Control Module)
SP02058	Touch Pad Self Calibration	EMCM (Entertainment Multimedia Control Module)
SP02059	Restore Default Configuration	EMCM (Entertainment Multimedia Control Module)
SP02060	Proxi Alignment Procedure	DTCM (Drive Train Control Module)
SP02061	Transfer Case Reset	DTCM (Drive Train Control Module)
SP02062	First Calibration	DTCM (Drive Train Control Module)
SP02063	Calibration Reset	DTCM (Drive Train Control Module)
SP02064	Factory VIN code lock	CDCM (Chassis Domain Control Module)
SP02065	Calibration Accelerometers	CDCM (Chassis Domain Control Module)
SP02066	AFLS Calibration	AFLS (Adaptive Front Lighting System)
SP02067	Self Learning - Sensors Calibration	AAMR (Active Aerodynamic Module Right)
SP02068	Deactivation Of The Power Limitation Function	ECM (Engine Control Module)
SP02069	Motorised Throttle Replacement	ECM (Engine Control Module)
SP02070	Supercharging System Components Replacement	ECM (Engine Control Module)
SP02071	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02072	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
SP02073	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP02074	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02075	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
SP02076	Gearbox Replacement	TCM (Transmission Control Module)
SP02077	Lever Release Solenoid Command	TCM (Transmission Control Module)
SP02078	Control Unit Reprogramming	TCM (Transmission Control Module)
SP02079	Inlet Valve Calibration	ABS (Anti Lock Brakes)
SP02080	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP02081	Pilot Valve Calibration	ABS (Anti Lock Brakes)
SP02082	Brake Pressure Sensor Calibration	ABS (Anti Lock Brakes)
SP02083	Steering Wheel Angle Sensor Offset Calibration	ABS (Anti Lock Brakes)
SP02084	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
SP02085	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
SP02086	Reset Odometer	IPC (Instrument Panel)
SP02087	Reset Service Information	IPC (Instrument Panel)
SP02088	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP02089	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP02090	Last Service Date	IPC (Instrument Panel)
SP02091	Self Learning Motor Test	HVAC (Heat, Ventilation And A/C)
SP02092	Power Down	ETM (Entertainment Telematic Module)
SP02093	Power On And Disable User Inputs	ETM (Entertainment Telematic Module)
SP02094	Audio Video Signal Detection	ETM (Entertainment Telematic Module)
SP02095	Steering Angle Calibration	EPS (Electric Power Steering)
SP02096	ECU Restart Routine	CTM (Convergence Telematic Module)

SP02097	Fire Protection System Activate	BCM (Body Control Module)
SP02098	LIN Line Request Check	BCM (Body Control Module)
SP02099	Siren Check	BCM (Body Control Module)
SP02100	Ultrasonic Sensors Check	BCM (Body Control Module)
SP02101	AFLS Calibration	AFLS (Adaptive Front Lighting System)
SP02102	Deactivation Of The Power Limitation Function	ECM (Engine Control Module)
SP02103	Motorised Throttle Replacement	ECM (Engine Control Module)
SP02104	Supercharging System Components Replacement	ECM (Engine Control Module)
SP02105	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02106	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
SP02107	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP02108	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02109	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
SP02110	Gearbox Replacement	TCM (Transmission Control Module)
SP02111	Lever Release Solenoid Command	TCM (Transmission Control Module)
SP02112	Control Unit Reprogramming	TCM (Transmission Control Module)
SP02113	Inlet Valve Calibration	ABS (Anti Lock Brakes)
SP02114	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP02115	Pilot Valve Calibration	ABS (Anti Lock Brakes)
SP02116	Brake Pressure Sensor Calibration	ABS (Anti Lock Brakes)
SP02117	Steering Wheel Angle Sensor Offset Calibration	ABS (Anti Lock Brakes)
SP02118	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
SP02119	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
SP02120	Reset Odometer	IPC (Instrument Panel)
SP02121	Reset Service Information	IPC (Instrument Panel)
SP02122	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP02123	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP02124	Last Service Date	IPC (Instrument Panel)
SP02125	Self Learning Motor Test	HVAC (Heat, Ventilation And A/C)
SP02126	Power Down	ETM (Entertainment Telematic Module)
SP02127	Power On And Disable User Inputs	ETM (Entertainment Telematic Module)
SP02128	Audio Video Signal Detection	ETM (Entertainment Telematic Module)
SP02129	Steering Angle Calibration	EPS (Electric Power Steering)
SP02130	ECU Restart Routine	CTM (Convergence Telematic Module)
SP02131	Fire Protection System Activate	BCM (Body Control Module)
SP02132	LIN Line Request Check	BCM (Body Control Module)
SP02133	Siren Check	BCM (Body Control Module)
SP02134	Ultrasonic Sensors Check	BCM (Body Control Module)
SP02135	AFLS Calibration	AFLS (Adaptive Front Lighting System)
SP02136	Deactivation Of The Power Limitation Function	ECM (Engine Control Module)
SP02137	Motorised Throttle Replacement	ECM (Engine Control Module)
SP02138	Supercharging System Components Replacement	ECM (Engine Control Module)

SP02139	Intake Manifold Replacement	ECM (Engine Control Module)
SP02140	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02141	Intelligent Alternator (IAM) Replacement	ECM (Engine Control Module)
SP02142	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP02143	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02144	Hydraulic Circuit Depressurization	TCM (Transmission Control Module)
SP02145	Gearbox Replacement	TCM (Transmission Control Module)
SP02146	Lever Release Solenoid Command	TCM (Transmission Control Module)
SP02147	Control Unit Reprogramming	TCM (Transmission Control Module)
SP02148	Static Test	ABS (Anti Lock Brakes)
SP02149	Longitudinal G-Sensor Calibration Test	ABS (Anti Lock Brakes)
SP02150	Clear TPM Warnings	TPM (Tire Pressure Monitor)
SP02151	Clear TPM Sensor Rolls Test Results	TPM (Tire Pressure Monitor)
SP02152	Update Front And Rear Axle Nominal Tire Pressure Values	TPM (Tire Pressure Monitor)
SP02153	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP02154	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP02155	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP02156	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP02157	TPM Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP02158	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
SP02159	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
SP02160	Reset Odometer	IPC (Instrument Panel)
SP02161	Reset Service Information	IPC (Instrument Panel)
SP02162	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP02163	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP02164	Last Service Date	IPC (Instrument Panel)
SP02165	Flap Actuators Learning Test	HVAC (Heat, Ventilation And A/C)
SP02166	ECU Restart Routine	CTM (Convergence Telematic Module)
SP02167	Fire Protection System Activate	BCM (Body Control Module)
SP02168	LIN Line Request Check	BCM (Body Control Module)
SP02169	LIN Ultrasonic Sensors Check	BCM (Body Control Module)
SP02170	Neutral Signal Learn	ECM (Engine Control Module)
SP02171	Factory VIN code lock	ECM (Engine Control Module)
SP02172	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
SP02173	Control Unit Reprogramming	ECM (Engine Control Module)
SP02174	Fuel Supply System Components Replacement	ECM (Engine Control Module)
SP02175	Supercharging System Components Replacement	ECM (Engine Control Module)
SP02176	Electronic Throttle Replacement	ECM (Engine Control Module)
SP02177	Oil Change	ECM (Engine Control Module)
SP02178	Oil Level Sensor Replacement	ECM (Engine Control Module)
SP02179	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP02180	Proxi Alignment Procedure	ECM (Engine Control Module)

SP02181	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP02182	Ionisation Control Module Adaptive Values Reset	ECM (Engine Control Module)
SP02183	Fan Cooling Activation	ECM (Engine Control Module)
SP02184	Proxi Alignment Procedure	TCM (Transmission Control Module)
SP02185	Check Air Presence In ABS Unit	ABS (Anti-Lock Braking System)
SP02186	Brake Pads Substitution (Brembo)	ABS (Anti-Lock Braking System)
SP02187	Brake Pads Substitution EPB (Brembo)	ABS (Anti-Lock Braking System)
SP02188	Brake Pads Substitution (Continental)	ABS (Anti-Lock Braking System)
SP02189	Disks Management Brembo	ABS (Anti-Lock Braking System)
SP02190	Replacement Brake Discs	ABS (Anti-Lock Braking System)
SP02191	Control Unit Reprogramming	ABS (Anti-Lock Braking System)
SP02192	Electric Park Brake Management	ABS (Anti-Lock Braking System)
SP02193	Electric Park Brake Motors Substitution	ABS (Anti-Lock Braking System)
SP02194	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP02195	Brake Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP02196	Settling Group Caliper And Brake Pads	ABS (Anti-Lock Braking System)
SP02197	Production State	ABS (Anti-Lock Braking System)
SP02198	Reset Angle Offset	ABS (Anti-Lock Braking System)
SP02199	Bleeding Brake System	ABS (Anti-Lock Braking System)
SP02200	Enable/Disable The Roll Bench Mode	ABS (Anti-Lock Braking System)
SP02201	ABS Unit Bleed	ABS (Anti-Lock Braking System)
SP02202	Calibrate Tandem Master Cylinder Sensor	ABS (Anti-Lock Braking System)
SP02203	Checking Air In The Hydraulic Circuit Between The Control Unit And Br	ABS (Anti-Lock Braking System)
SP02204	Enabling Brake Pedal	ABS (Anti-Lock Braking System)
SP02205	Oil Change Reset	TVM (Torque Vectoring Module)
SP02206	Gearbox Data Transfer	TVM (Torque Vectoring Module)
SP02207	Clutch Adjustment	TVM (Torque Vectoring Module)
SP02208	E-Motor Replacement	TVM (Torque Vectoring Module)
SP02209	Self Test	TBM (Telematic Box Module)
SP02210	Backup Battery Test	TBM (Telematic Box Module)
SP02211	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP02212	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP02213	Reset Service Information	IC (Instrument Cluster)
SP02214	Test Pattern Display	IC (Instrument Cluster)
SP02215	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
SP02216	Factory VIN code lock	ESM (Electronic Shifter Module)
SP02217	LED Light Control Command	ESM (Electronic Shifter Module)
SP02218	Steering Angle Calibration	EPS (Electric Power Steering)
SP02219	Upload Configuration	EMCM (Entertainment Multimedia Control Module)
SP02220	Read Touch Pad Configuration	EMCM (Entertainment Multimedia Control Module)
SP02221	Touch Pad Self Test	EMCM (Entertainment Multimedia Control Module)
SP02222	Touch Pad Self Calibration	EMCM (Entertainment Multimedia Control Module)

SP02223	Restore Default Configuration	EMCM (Entertainment Multimedia Control Module)
SP02224	Proxi Alignment Procedure	DTCM (Drive Train Control Module)
SP02225	Transfer Case Reset	DTCM (Drive Train Control Module)
SP02226	First Calibration	DTCM (Drive Train Control Module)
SP02227	Calibration Reset	DTCM (Drive Train Control Module)
SP02228	Factory VIN code lock	CDCM (Chassis Domain Control Module)
SP02229	Calibration Accelerometers	CDCM (Chassis Domain Control Module)
SP02230	AFLS Calibration	AFLS (Adaptive Front Lighting System)
SP02231	Self Learning - Sensors Calibration	AAMR (Active Aerodynamic Module Right)
SP02232	Neutral Signal Learn	ECM (Engine Control Module)
SP02233	Factory VIN code lock	ECM (Engine Control Module)
SP02234	Clutch Group And/Or Clutch Potentiometer Replacement	ECM (Engine Control Module)
SP02235	Control Unit Reprogramming	ECM (Engine Control Module)
SP02236	Fuel Supply System Components Replacement	ECM (Engine Control Module)
SP02237	Supercharging System Components Replacement	ECM (Engine Control Module)
SP02238	Electronic Throttle Replacement	ECM (Engine Control Module)
SP02239	Oil Change	ECM (Engine Control Module)
SP02240	Oil Level Sensor Replacement	ECM (Engine Control Module)
SP02241	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP02242	Proxi Alignment Procedure	ECM (Engine Control Module)
SP02243	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP02244	Ionisation Control Module Adaptive Values Reset	ECM (Engine Control Module)
SP02245	Fan Cooling Activation	ECM (Engine Control Module)
SP02246	Proxi Alignment Procedure	TCM (Transmission Control Module)
SP02247	Check Air Presence In ABS Unit	ABS (Anti-Lock Braking System)
SP02248	Brake Pads Substitution (Brembo)	ABS (Anti-Lock Braking System)
SP02249	Brake Pads Substitution EPB (Brembo)	ABS (Anti-Lock Braking System)
SP02250	Brake Pads Substitution (Continental)	ABS (Anti-Lock Braking System)
SP02251	Disks Management Brembo	ABS (Anti-Lock Braking System)
SP02252	Replacement Brake Discs	ABS (Anti-Lock Braking System)
SP02253	Control Unit Reprogramming	ABS (Anti-Lock Braking System)
SP02254	Electric Park Brake Management	ABS (Anti-Lock Braking System)
SP02255	Electric Park Brake Motors Substitution	ABS (Anti-Lock Braking System)
SP02256	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP02257	Brake Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP02258	Settling Group Caliper And Brake Pads	ABS (Anti-Lock Braking System)
SP02259	Production State	ABS (Anti-Lock Braking System)
SP02260	Reset Angle Offset	ABS (Anti-Lock Braking System)
SP02261	Bleeding Brake System	ABS (Anti-Lock Braking System)
SP02262	Enable/Disable The Roll Bench Mode	ABS (Anti-Lock Braking System)
SP02263	ABS Unit Bleed	ABS (Anti-Lock Braking System)
SP02264	Calibrate Tandem Master Cylinder Sensor	ABS (Anti-Lock Braking System)

SP02265	Checking Air In The Hydraulic Circuit Between The Control Unit And Br	ABS (Anti-Lock Braking System)
SP02266	Enabling Brake Pedal	ABS (Anti-Lock Braking System)
SP02267	Oil Change Reset	TVM (Torque Vectoring Module)
SP02268	Gearbox Data Transfer	TVM (Torque Vectoring Module)
SP02269	Clutch Adjustment	TVM (Torque Vectoring Module)
SP02270	E-Motor Replacement	TVM (Torque Vectoring Module)
SP02271	Self Test	TBM (Telematic Box Module)
SP02272	Backup Battery Test	TBM (Telematic Box Module)
SP02273	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP02274	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP02275	Reset Service Information	IC (Instrument Cluster)
SP02276	Test Pattern Display	IC (Instrument Cluster)
SP02277	Proxi Alignment Procedure	ESM (Electronic Shifter Module)
SP02278	Factory VIN code lock	ESM (Electronic Shifter Module)
SP02279	LED Light Control Command	ESM (Electronic Shifter Module)
SP02280	Steering Angle Calibration	EPS (Electric Power Steering)
SP02281	Upload Configuration	EMCM (Entertainment Multimedia Control Module)
SP02282	Read Touch Pad Configuration	EMCM (Entertainment Multimedia Control Module)
SP02283	Touch Pad Self Test	EMCM (Entertainment Multimedia Control Module)
SP02284	Touch Pad Self Calibration	EMCM (Entertainment Multimedia Control Module)
SP02285	Restore Default Configuration	EMCM (Entertainment Multimedia Control Module)
SP02286	Proxi Alignment Procedure	DTCM (Drive Train Control Module)
SP02287	Transfer Case Reset	DTCM (Drive Train Control Module)
SP02288	First Calibration	DTCM (Drive Train Control Module)
SP02289	Calibration Reset	DTCM (Drive Train Control Module)
SP02290	Factory VIN code lock	CDCM (Chassis Domain Control Module)
SP02291	Calibration Accelerometers	CDCM (Chassis Domain Control Module)
SP02292	AFLS Calibration	AFLS (Adaptive Front Lighting System)
SP02293	Self Learning - Sensors Calibration	AAMR (Active Aerodynamic Module Right)
SP02294	Deactivation Of The Power Limitation Function	ECM (Engine Control Module)
SP02295	Fan Cooling Activation	ECM (Engine Control Module)
SP02296	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP02297	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02298	Gearbox Replacement	TCM (Transmission Control Module)
SP02299	Lever Release Solenoid Command	TCM (Transmission Control Module)
SP02300	Static Test	ABS (Anti-Lock Braking System)
SP02301	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
SP02302	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
SP02303	Reset Odometer	IC (Instrument Cluster)
SP02304	Reset Service Information	IC (Instrument Cluster)
SP02305	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP02306	Enable Seat Belts Reminder	IC (Instrument Cluster)

SP02307	Last Service Date	IC (Instrument Cluster)
SP02308	Actuator Calibration Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP02309	Fire Protection System Activate	BCM (Body Control Module)
SP02310	Deactivation Of The Power Limitation Function	ECM (Engine Control Module)
SP02311	Fan Cooling Activation	ECM (Engine Control Module)
SP02312	Self-Adaptive Parameters Reset	ECM (Engine Control Module)
SP02313	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02314	Gearbox Replacement	TCM (Transmission Control Module)
SP02315	Lever Release Solenoid Command	TCM (Transmission Control Module)
SP02316	Static Test	ABS (Anti-Lock Braking System)
SP02317	Trailer Hook Presence Disabling	PAM (Parking Aid Module)
SP02318	Trailer Hook Presence Enabling	PAM (Parking Aid Module)
SP02319	Reset Odometer	IC (Instrument Cluster)
SP02320	Reset Service Information	IC (Instrument Cluster)
SP02321	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP02322	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP02323	Last Service Date	IC (Instrument Cluster)
SP02324	Actuator Calibration Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP02325	Fire Protection System Activate	BCM (Body Control Module)
SP02326	Service Single Pole Calibration	HALF (Haptical Lane Feedback)
SP02327	FFCM Calibration	FFCM (Forward Facing Camera Module)
SP02328	Active alignment program: radar calibration	ACC (Adaptive Cruise Control)
SP02329	Target Calibration	HALF (Haptical Lane Feedback)