

Quick Start Guide

Take the use of JLR SDD as an example:

- Open the XVCi Max software
- Connect the XVCi Max device
- Install the OEM driver
- Start the OEM diagnostic software

Step 1: Open the XVCi Max software

- XVCi Max management software has been installed in our company's products.



Step 2: Connect the XVCi Max device

Before using the device, the hardware must be correctly connected. The vehicle end is connected to the vehicle through the OBD-II diagnostic cable, and the PC end is connected to the PC through the USB communication cable.




XVCi Max device connection diagram



Step 3: Install the OEM driver

Click the [Vehicle Diagnosis] tab of the XVCi Max software, and then click [My Application] on the left side of the page, where the authorizations that the customer has are displayed. Click "JLR SDD", the driver installation interface will pop up: click [Install]

If the JLR SDD driver has been installed in the JLR-SDD system, if there is a JLR SDD driver update, click [Update] here to update the JLR SDD driver.

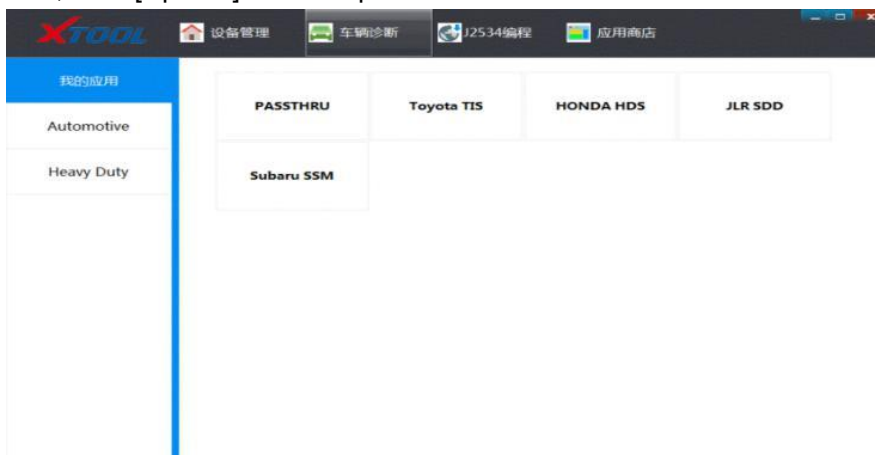

JLR SDD driver installation is complete, click [close] to complete the installation



Step 4: Start the OEM diagnostic software

Click the [Vehicle Diagnosis] tab of the XVCI Max software, then click [My Application] on the left side of the page, click [JLR SDD], in the pop-up dialog box, click [Operation] to start JLR SDD diagnosis program.

